

**ERASynth: An Open Source, Arduino-Compatible RF Signal Generator with Wi-Fi Connectivity** 

# FIRMWARE UPDATE INSTRUCTIONS





# **Arduino Due Code**

- 1-) Download the latest Arduino IDE from <a href="https://www.arduino.cc/en/Main/Software">https://www.arduino.cc/en/Main/Software</a> and install. (ERASynth is tested with 1.8.5 version of Arduino)
- 2-) Install Arduino DUE board from Board Manager (Tools>Board...>Board Manager...).

Type "due" to search bar, select the latest version and install.



- 3-) After doing the configuration above, your system should detect the driver automatically. If it doesn't, please follow next instruction.
- 4-) No driver necessary for Linux and MacOS

#### For Windows:

- Open device manager
- Find the tab "Other Devices"
- You will see a device named "Arduino Due Prog. Port"
- Right-click and select "Search automatically for updated driver software"
- If it doesn't detect any driver, repeat the process and select "browse my computer for driver software"
- Navigate to the folder with the Arduino IDE you downloaded and unzipped earlier. Locate and select the "Drivers" folder in the main Arduino folder (not the "FTDI USB Drivers" subdirectory). Press "OK" and "Next" to proceed.
- After installing successfully, you should see your device under Ports (COM & LPT) tab in Device Manager
- 5-) Download the latest ERASynth firmware from GitHub.

https://github.com/erainstruments/erasynth-firmware



- 6-) ERASynth project has a dependency. Download the library <a href="https://github.com/ivanseidel/DueTimer">https://github.com/ivanseidel/DueTimer</a>. Copy the unzipped file to Arduino IDE library folder. It is in the Arduino IDE installation folder.
- 7-) Open ERASynth.ino file with Arduino IDE.
- 8-) Ensure that a definition for ERASynth is correct for your ERASynth model. It is defined in "definitions.h" file in 19. line. This definition must be
- 0 for ERASynth model
- 1 for ERASynth+ model
- 2 for ERASynth++ model
- 9-) Change board to Arduino DUE (Programming Port). Go to Tools>Board>Arduino DUE (Programming Port)
- 10-) Select the device from port (COM1,2,3, etc.). Go to Tools>Port
- 11-) Click upload or click Sketch>Upload

Arduino IDE will compile the project and upload a .bin file to the device.




#### ESP8266 Code

- 1-) Download the latest Arduino IDE from <a href="https://www.arduino.cc/en/Main/Software">https://www.arduino.cc/en/Main/Software</a> and install. (ERASynth is tested with 1.8.5 version of Arduino)
- 2-) Open File>Preferences
- 3-) http://arduino.esp8266.com/stable/package\_esp8266com\_index.json


Add this URL to "Additional Boars Manager URL's"

- 4-) Open Board Manager from Tools tab (Tools>Board...>Board Manager...) and type "esp" in the search bar.
- 5-) Install the latest version of esp8266 board package which is created by ESP8266 Community
- 6-) Restart Arduino IDE.
- 7-) Download the latest ERASynth firmware from GitHub. https://github.com/erainstruments/erasynth-firmware
- 8-) Open ESP8266.ino file with Arduino IDE and change all settings as in picture below

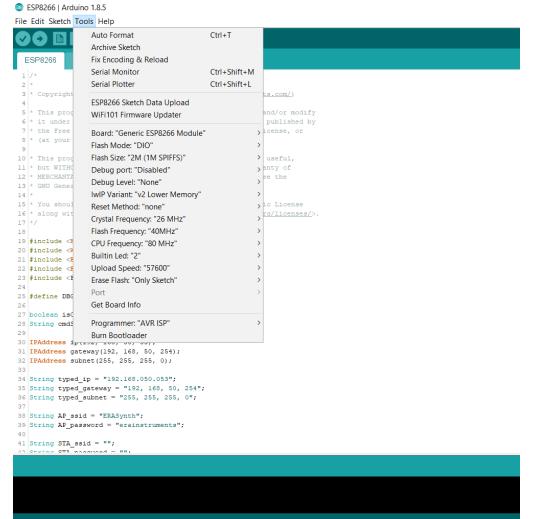



- 9-) Select your device from Tools>Port.
- 10-) Before uploading code to ESP8266, you must open PC GUI or any serial terminal emulator program and send ESP8266 upload mode command (>U with carriage return). In PC GUI, it is under settings tab. Don't forget to close com-port after sending upload mode command.
- 11-) Be sure that all settings as in picture below.

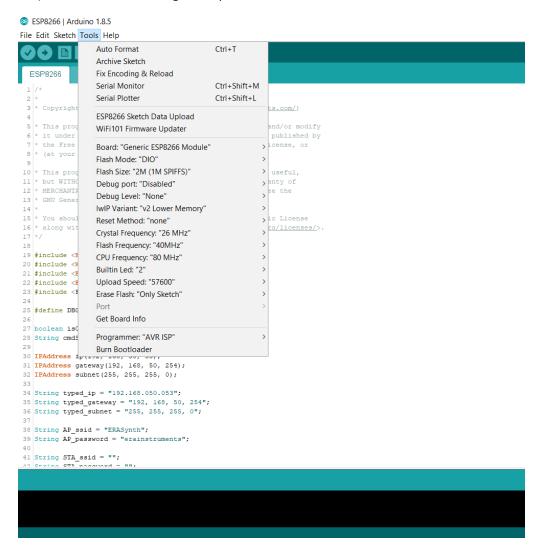

## 12-) Click upload or click Sketch>Upload

Arduino IDE will compile and upload code to module. If any error occurs such as "espcomm\_upload\_mem failed", restart the device, try every step again and be sure the COM port of the device is not used by any other programs and closed.

13-) Restart the device.




### **ESP8266 HTML DATA**

- 1-) Download the latest Arduino IDE from <a href="https://www.arduino.cc/en/Main/Software">https://www.arduino.cc/en/Main/Software</a> and install. (ERASynth is tested with 1.8.5 version of Arduino)
- 2-) Open File>Preferences
- 3-) <a href="http://arduino.esp8266.com/stable/package">http://arduino.esp8266.com/stable/package</a> esp8266.com index.json Add this URL to "Additional Boars Manager URL's"
- 4-) Open Board Manager from Tools tab (Tools>Board...>Board Manager...) and type "esp" in the search bar.
- 5-) Install the latest version of esp8266 board package which is created by ESP8266 Community
- 6-) Restart Arduino IDE.

6

- 7-) Download Arduino ESP8266FS tool and install it as instructed in GitHub. (https://github.com/esp8266/arduino-esp8266fs-plugin)
- 8-) Download the latest ERASynth firmware from GitHub. <a href="https://github.com/erainstruments/erasynth-firmware">https://github.com/erainstruments/erasynth-firmware</a>
- 9-) Open ESP826.ino file and change all settings as in picture below.

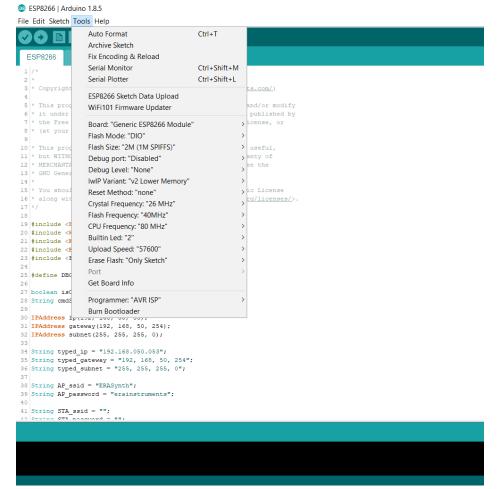



- 10-) Select your device from Tools>Port.
- 11-) Before uploading, you must open PC GUI or any serial terminal emulator program and send ESP8266 upload mode command (>U with carriage return). In PC GUI, it is under settings tab. Don't forget to close com-port after sending upload mode command.
- 12-) Click Tools>ESP8266 Sketch Data Upload
- 13-) Arduino IDE will compile and upload code to module. If any error occurs such as "espcomm\_upload\_mem failed", restart the device, try every step again and be sure the COM port of the device is not used by any other programs and closed.
- 14-) Restart the device.