




MARTIN®

QC™ #2

Belt Cleaner

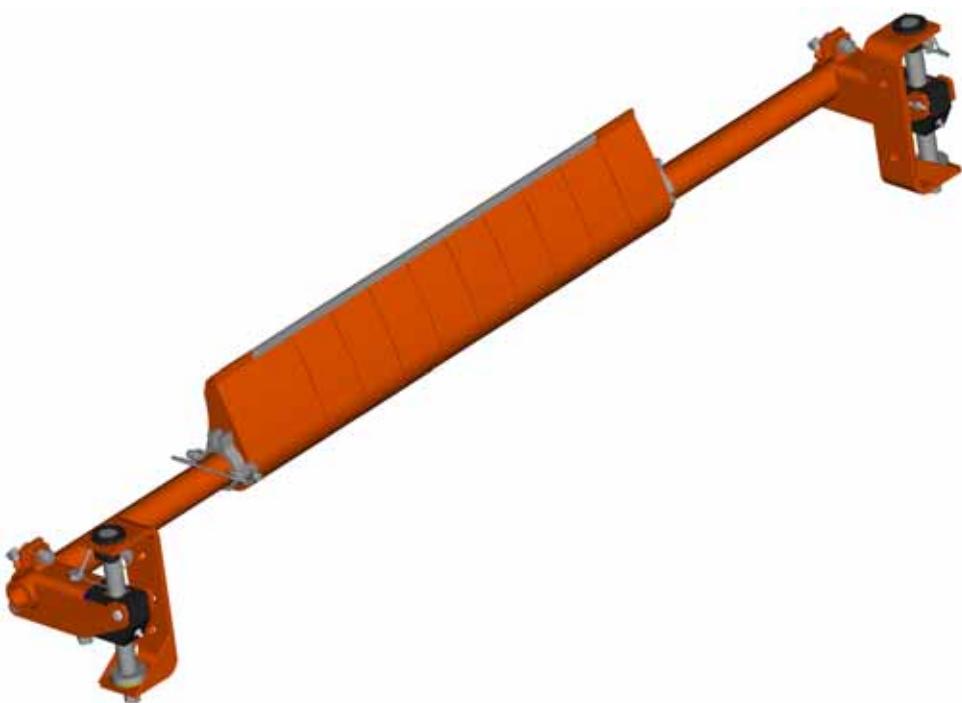

OPERATOR'S MANUAL

Important

MARTIN ENGINEERING HEREBY DISCLAIMS ANY LIABILITY FOR: DAMAGE DUE TO CONTAMINATION OF THE MATERIAL; USER'S FAILURE TO INSPECT, MAINTAIN AND TAKE REASONABLE CARE OF THE EQUIPMENT; INJURIES OR DAMAGE RESULTING FROM USE OR APPLICATION OF THIS PRODUCT CONTRARY TO INSTRUCTIONS AND SPECIFICATIONS CONTAINED HEREIN. MARTIN ENGINEERING'S LIABILITY SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF EQUIPMENT SHOWN TO BE DEFECTIVE.

Observe all safety rules given herein along with owner and Government standards and regulations. Know and understand lockout/tagout procedures as defined by American National Standards Institute (ANSI) z244.1-1982, *American National Standard for Personnel Protection - Lockout/Tagout of Energy Sources - Minimum Safety Requirements* and Occupational Safety and Health Administration (OSHA) Federal Register, Part IV, 29 CFR Part 1910, *Control of Hazardous Energy Source (Lockout/Tagout); Final Rule*.

The following symbols may be used in this manual:

DANGER

Danger: Immediate hazards that will result in severe personal injury or death.

WARNING

Warning: Hazards or unsafe practices that could result in personal injury.

CAUTION

Caution: Hazards or unsafe practices that could result in product or property damages.

IMPORTANT

Important: Instructions that must be followed to ensure proper installation/operation of equipment.

NOTE

Note: General statements to assist the reader.

Table of Contents

Section	Page
List of Figures/Tables	ii
Introduction	1
General.....	1
Safety	2
Before Installing Belt Cleaner and Tensioner	3
Installing Belt Cleaner Assembly	4
Installing tensioners	4
Installing belt cleaner mainframe.....	7
Tensioning belt cleaner	11
After Installing Belt Cleaner and Tensioner	13
Weekly Maintenance	14
Troubleshooting	18
Part Numbers	19
Appendix	A-1

List of Figures

Figure	Title	Page
1	MARTIN® QC™ #2 Belt Cleaner Assembly, P/N 35700-XXXXXXX	20
2	Conveyor Products Warning Label, P/N 23395	22
3	MARTIN® QC™ #2 Tensioning Label, P/Ns 36073-L and 36073-R	22

List of tables

Table	Title	Page
I	Urethane Shelf Life.	17

Introduction

General

To introduce material back into the material flow, a Pre-Cleaner is installed on the face of the head pulley. On a dual cleaner system, the Secondary Cleaner is installed immediately following the Pre-Cleaner to remove stubborn material left on the conveyor belt. If a Pre-Cleaner cannot be used because of space limitations, the Secondary Cleaner is installed alone. If the material-handling process or product could be affected by contamination from the use of these belt cleaners, the user is responsible for taking the necessary steps to prevent contamination. Consult Martin Engineering or a representative for alternate belt cleaners or belt cleaner locations to use where contamination may be an issue.

IMPORTANT

The side of the chute from which the belt cleaner will be serviced is referred to as the “operator side.” The other side of the chute is referred to as the “far side.”

NOTE

All dimensions are in inches (millimeters).

Safety




DANGER

Do not touch or go near the conveyor belt or conveyor accessories when the belt is running. Your body or clothing can get caught and you can be pulled into the conveyor, resulting in severe injury or death.



WARNING

Before installing, servicing, or adjusting the belt cleaner, turn off and lock out/tag out all energy sources to the conveyor and conveyor accessories according to ANSI standards. Failure to do so could result in serious injury or death.

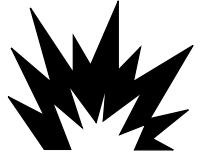

WARNING

If this equipment will be installed in an enclosed area, test the gas level or dust content before using a cutting torch or welding. Using a torch or welding in an area with gas or dust may cause an explosion resulting in serious injury or death.



Before using a cutting torch or welding the chute wall, cover the conveyor belt with a fire retardant cover. Failure to do so can allow the belt to catch fire.



Remove all tools from the installation area and conveyor belt before turning on the conveyor. Failure to do so can cause serious injury to personnel or damage to the belt and conveyor.

CAUTION

Center the belt cleaner blades to clean an area narrower than the conveyor belt width. This allows for side-to-side movement of the belt and prevents damage to the belt edge.

Before Installing Belt Cleaner and Tensioner

IMPORTANT



The delivery service is responsible for damage occurring in transit. Martin Engineering CANNOT enter claims for damages. Contact your transportation agent for more information.

- 1** Inspect shipping container for damage. Report damage to delivery service immediately and fill out delivery service's claim form. Keep any damaged goods subject to examination.
- 2** Remove MARTIN® QC™ #2 Belt Cleaner and Tensioners from shipping containers. Equipment in containers should include the following:
 - MARTIN® QC™ #2 Belt Cleaner.
 - Two MARTIN® QC™ #2 Tensioners.
 - Two Conveyor Products Warning Labels, P/N 23395.
- 3** If anything is missing, contact Martin Engineering or a representative.


Installing Belt Cleaner Assembly

Installing tensioners


1

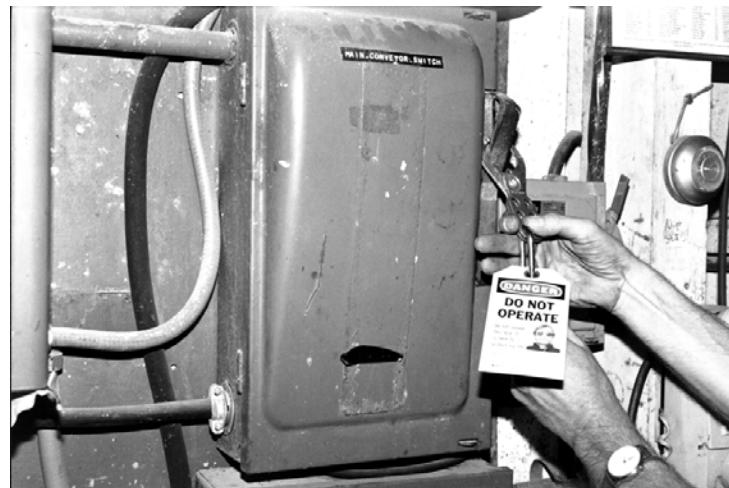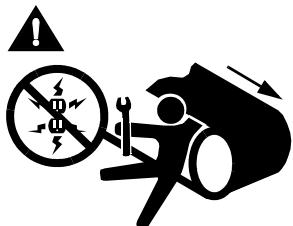

2

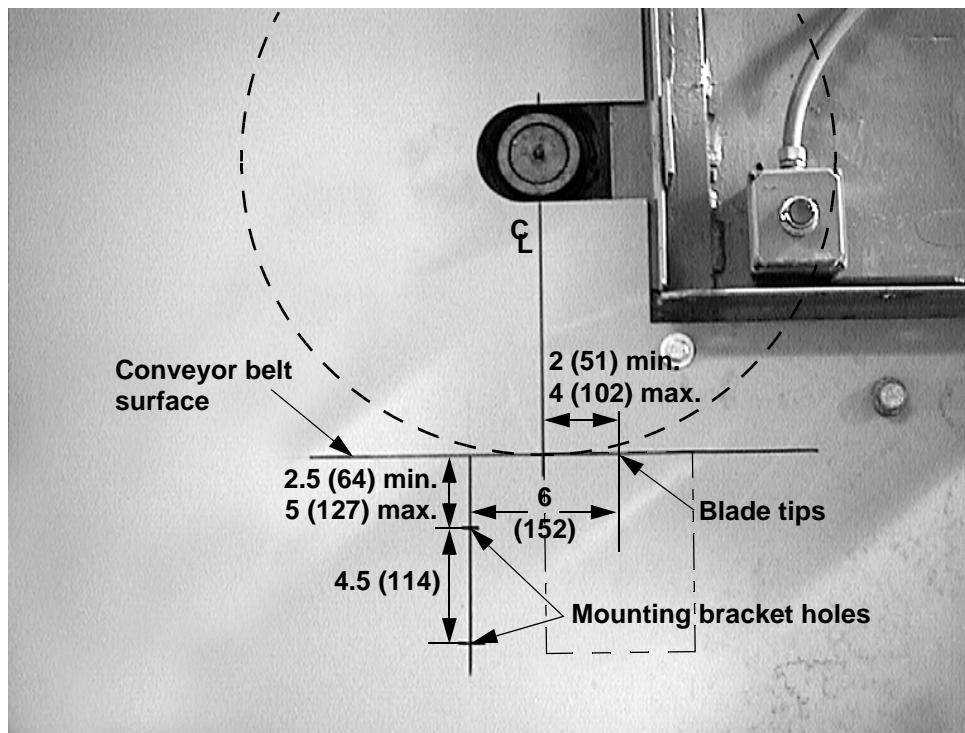


3

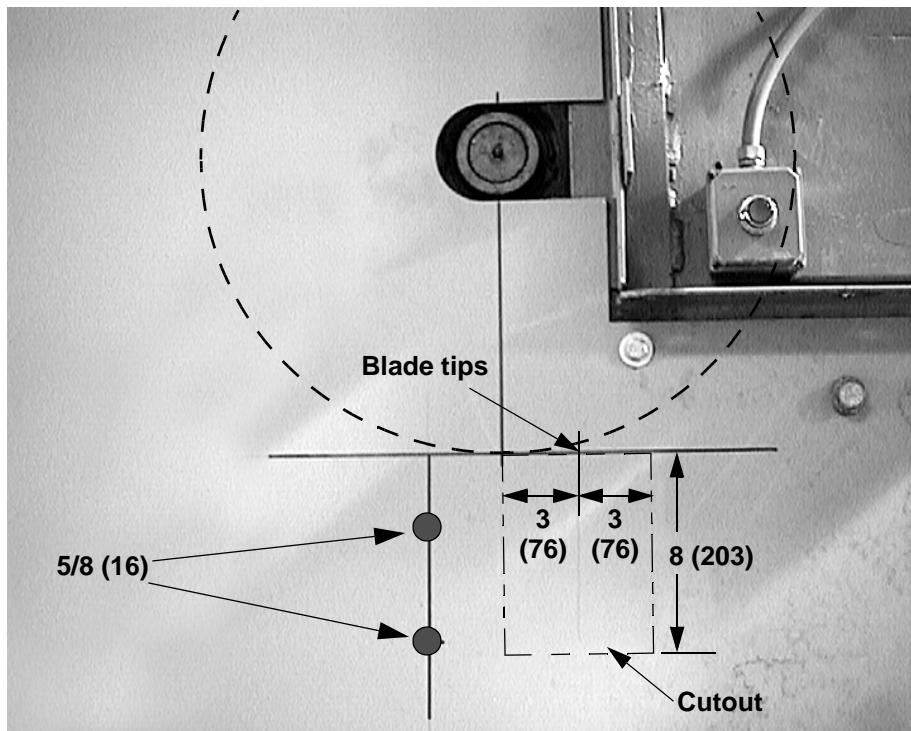


- 4** Weld or bolt mounting bracket to chute wall.
(Martin Engineering recommends bolting.)


5

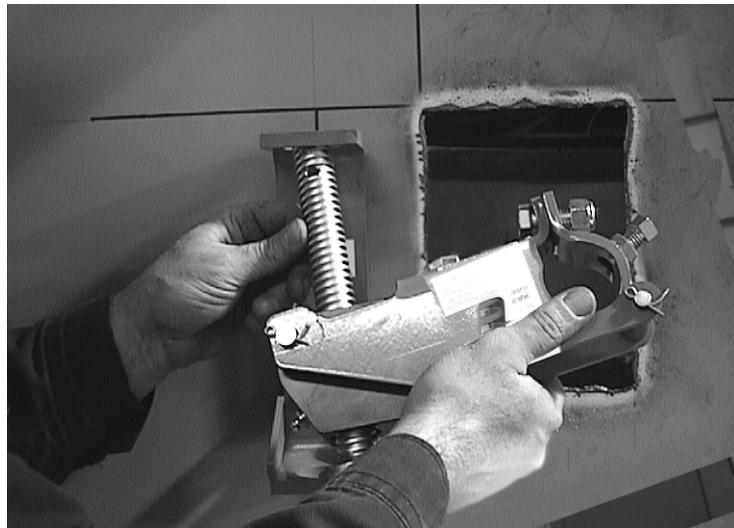

6

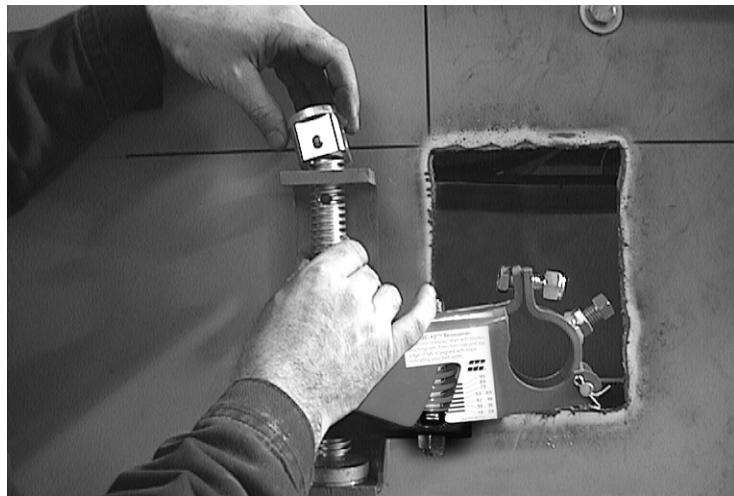

7

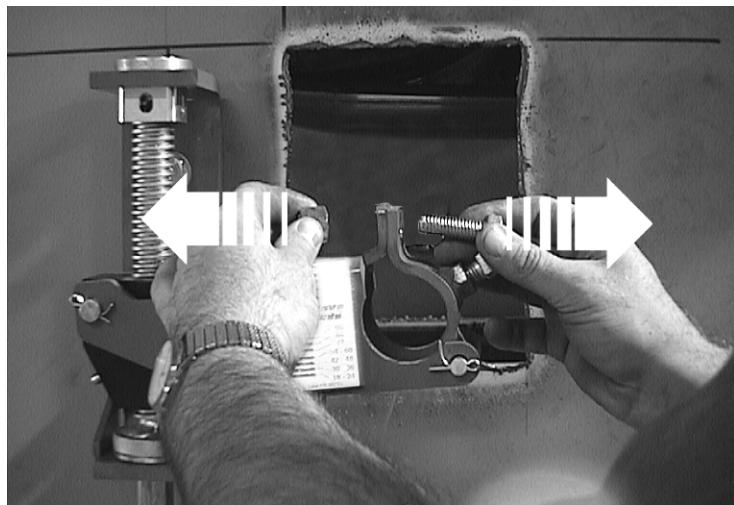


8 Repeat steps 2 through 7 on far side of chute.


9 Go to “Installing belt cleaner mainframe.”

*Installing belt
cleaner
mainframe*

1

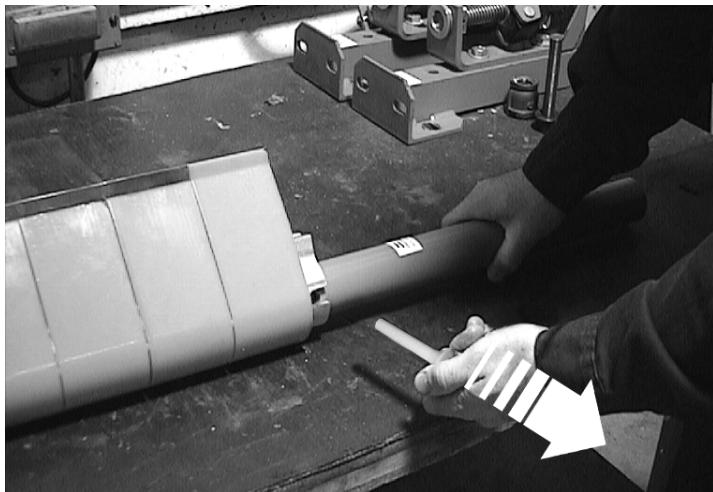


2

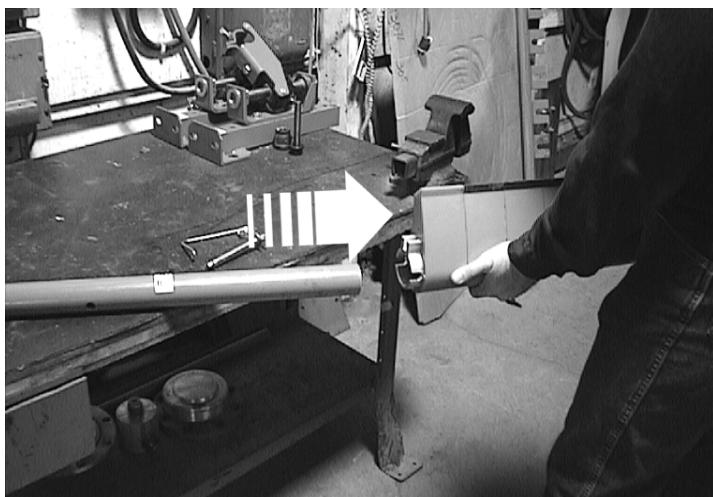


3

IMPORTANT



Install mainframe so spring pin is on far side of chute.

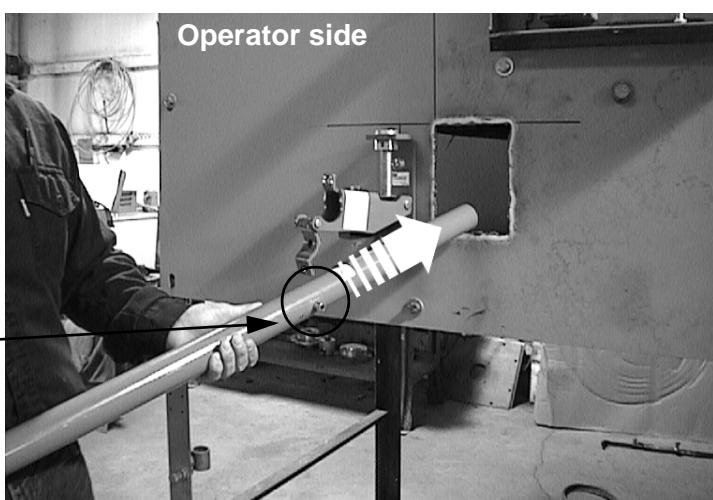



4

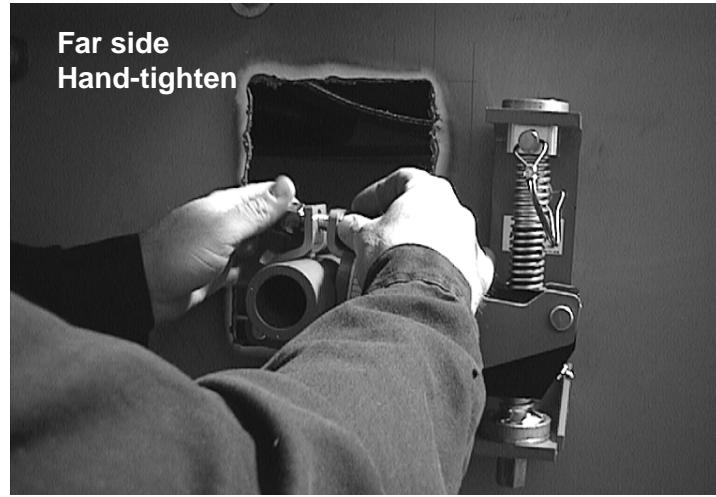


5

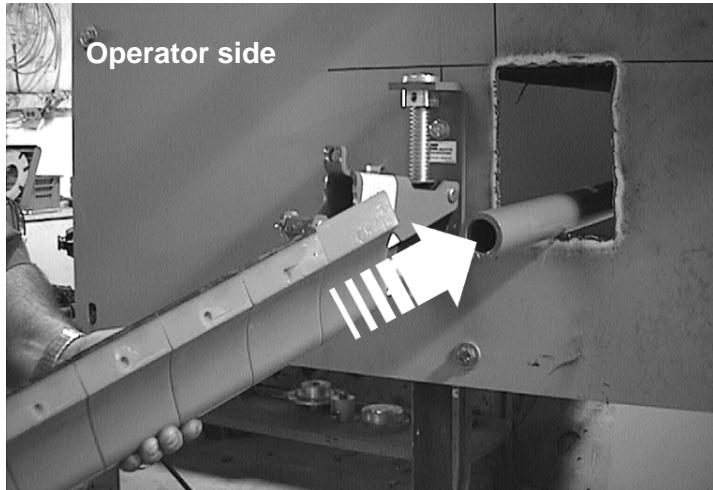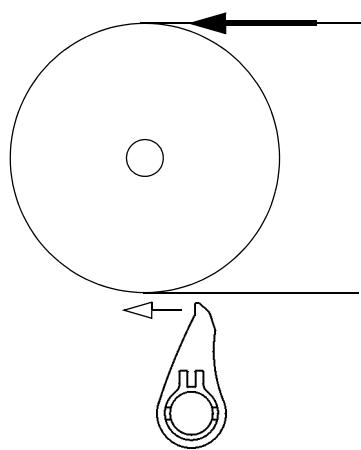

6

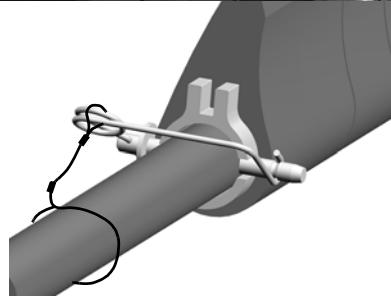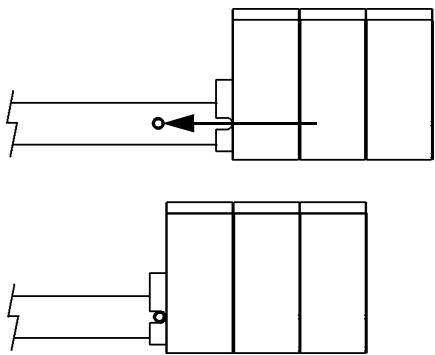


7

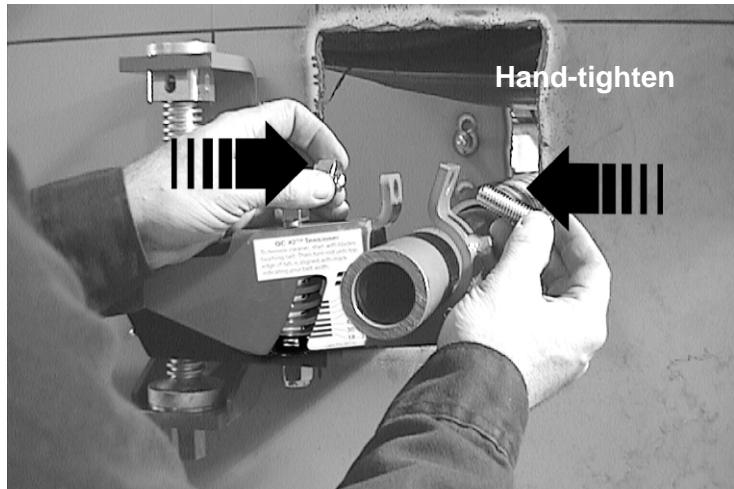

8 Adjust mainframe to ensure blades are centered on belt.


9

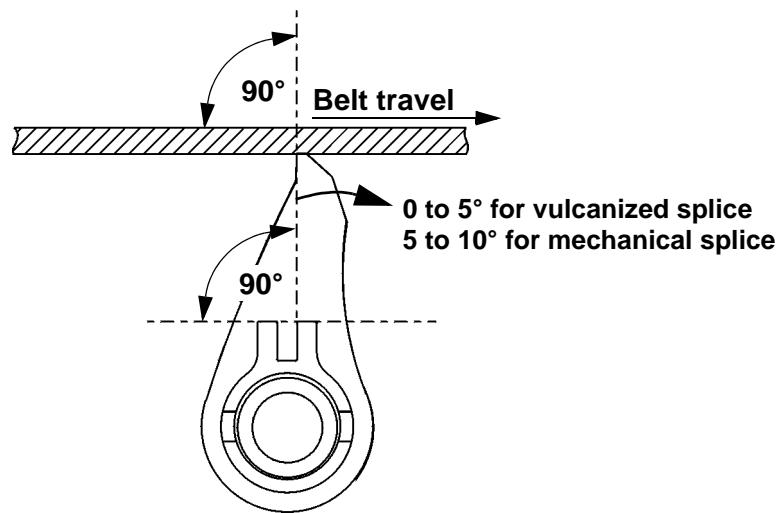

10



11

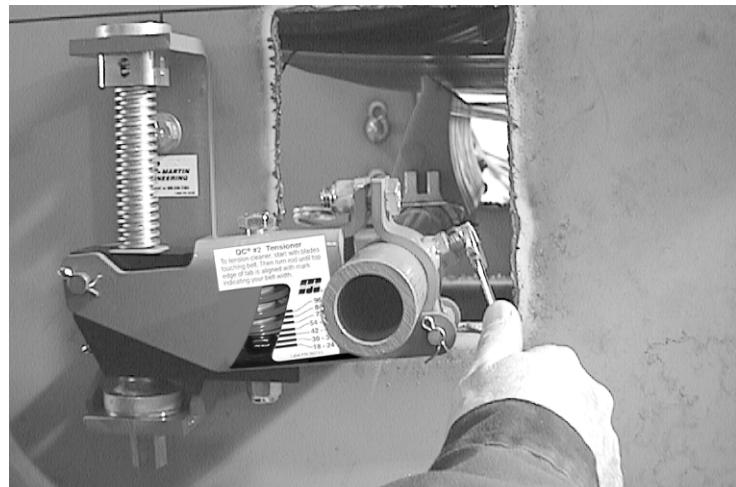

12 Repeat steps 10 and 11 on far side of chute.

Tensioning belt cleaner


IMPORTANT

Before tensioning, rotate threaded rods so blades are just touching belt.


- 1 Turn hex nut on the threaded rod until top of tab is aligned to belt width indicated on tensioner labels.

MARTIN® QC™ #2 Tensioner


To tension cleaner, start with blades touching belt. Then turn rod until top edge of tab is aligned with mark indicating your belt width.

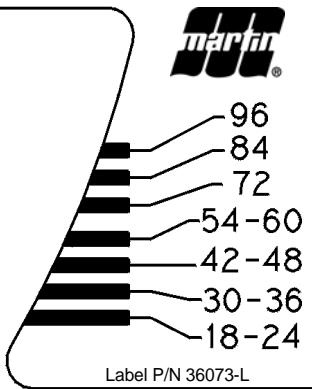

2

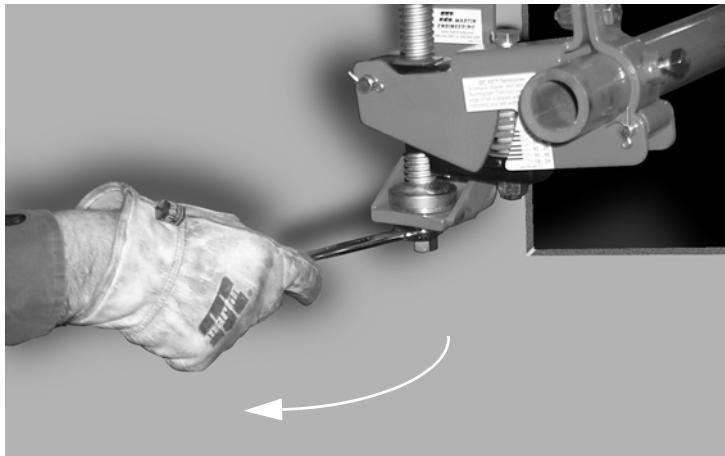



3

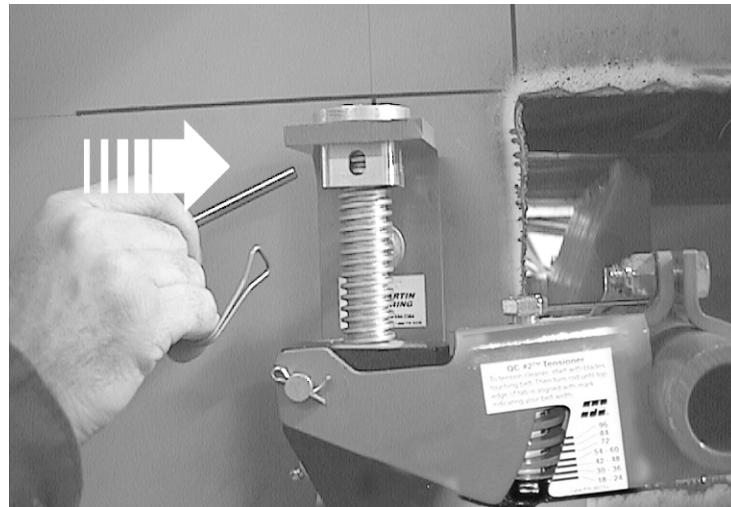


4 Repeat steps 1 through 3 on far side of chute.

After Installing Belt Cleaner and Tensioner


1

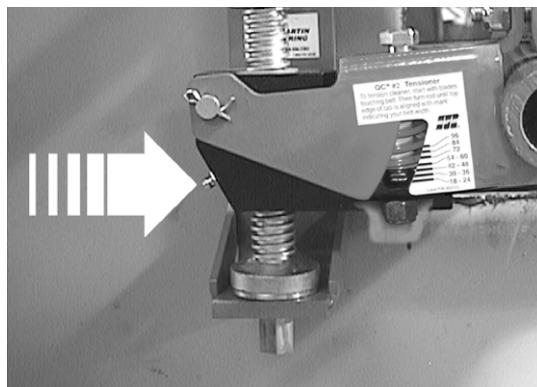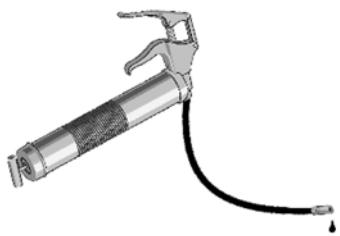

2

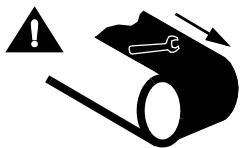

3 Turn on conveyor belt for 1 hour, then turn off.

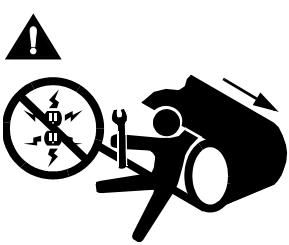

4 Make sure all fasteners are tight. Tighten if necessary.

5 Inspect belt cleaner for the following:

- Wear. (A small amount of "break-in" wear may be found. This will stop once blades wear to conveyor belt contour.)

6 If wear, material buildup, or some other problem exists, see "Troubleshooting."

Weekly Maintenance

NOTE

Maintenance inspection should be performed no less than weekly. Your application may require more frequent maintenance inspections.

IMPORTANT

Read entire section before beginning work.


WARNING

Before servicing belt cleaner, turn off and lock out/tag out energy source to conveyor belt and conveyor accessories.




- 1** Turn off and lock out/tag out energy source according to ANSI standards (see "References").
- 2** Remove any material from belt cleaner.
- 3** Make sure all fasteners are tight. Tighten if necessary.
- 4** Check tension on cleaner. Re-tension if necessary.
- 5** Wipe all labels clean. If labels are not readable, contact Martin Engineering or a representative for replacements.
- 6** Check blades for excessive wear. If tungsten carbide is worn off blades, replace blade cartridge as follows:

6a

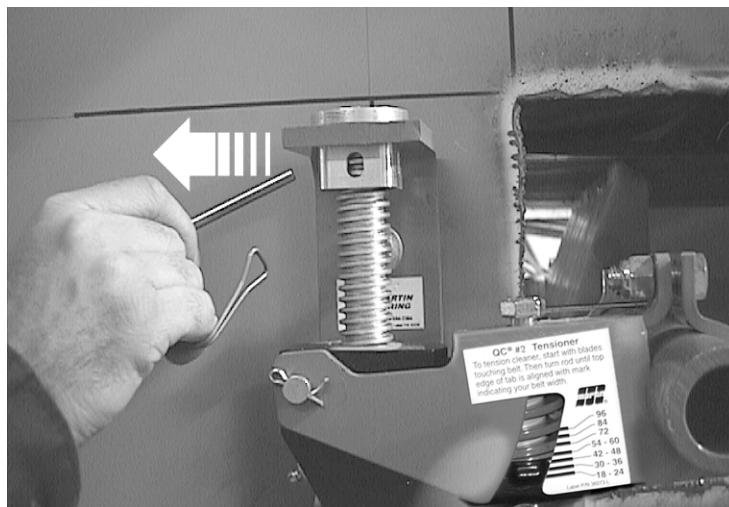


6b

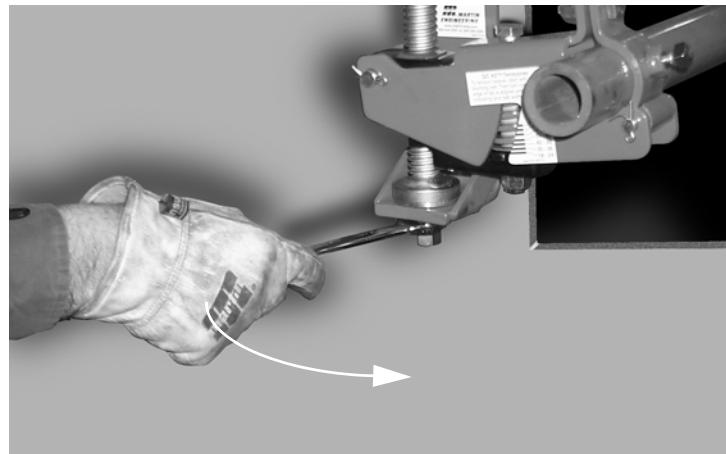

6c Repeat steps 6a and 6b on far side tensioner.


6d

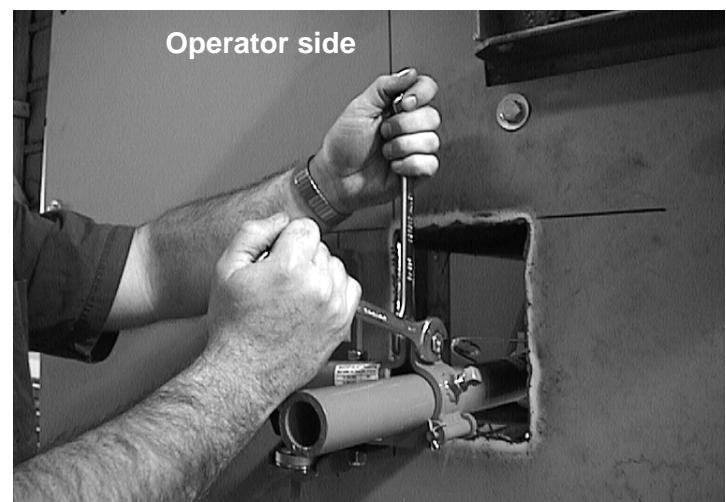

6e



6f

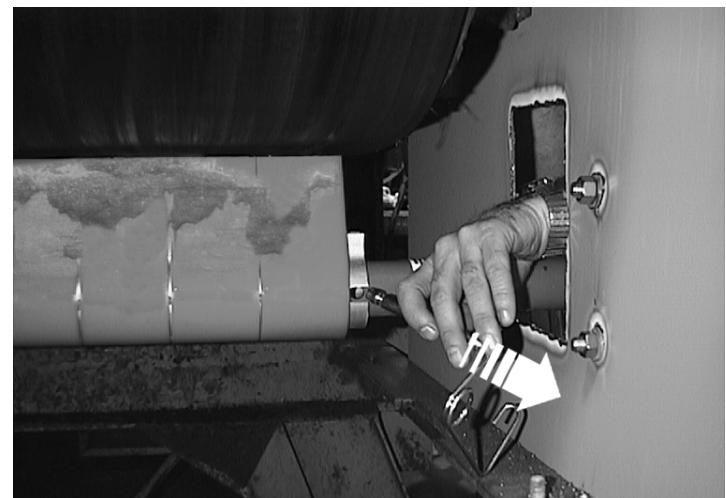


6g



6h Insert new blade cartridge as shown in steps 4 through 11 under “Installing belt cleaner mainframe.”

- 7** Re-tension as shown in “Tensioning belt cleaner.”
- 8** Remove equipment from service if there is any indication it is not functioning properly. Call Martin Engineering or representative for assistance. Do NOT return equipment to operation until the cause of the problem has been identified and corrected.

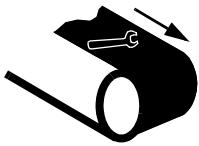

WARNING

Failure to remove tools from maintenance area and conveyor belt before turning on energy source can cause serious injury to personnel and damage to belt.



- 9** Remove all tools from maintenance area.

DANGER

Do not touch or go near conveyor belt or conveyor accessories when conveyor belt is running. Body or clothing can get caught and pull body into conveyor belt, causing severe injury or death.

- 10** Start conveyor belt.

Table I. Urethane Shelf Life

Blade Color	Shelf Life
Blue	1 Year from Code Date
Brown	2 Years from Code Date
Clear	1 Year from Code Date
Green	2 Years from Code Date
Maximizer (orange)	1 Year from Code Date
Orange (A-9)	1 Year from Code Date

NOTE

Code Date is written on bottom of blade as mm/dd/yy-xx. If code date on your blade(s) is not legible or is missing, contact Martin Engineering or a representative.

Troubleshooting

Symptom	Corrective Action
High blade wear rate.	Tension of cleaner on belt is set too high. Reduce tension.
Unusual wear or damage to blades.	Check belt splice(s) and repair as necessary.
Bent or broken mainframe or support frame due to blade slipping through.	If blades are worn to or past the wear line, replace blades. If blades are not worn, check mainframe location.
Noise or vibration.	Tension is not sufficient or is set too high. Correct tension as necessary. If this does not correct problem, blade urethane may not match application. Contact Martin Engineering or a representative. Blades are not perpendicular to belt. Rotate mainframe so tips of blades are perpendicular to belt. If chatter persists, rotate mainframe so blades lay slightly back in direction of belt travel.
Corrosion or chemical degradation.	Blade urethane may not match application. Contact Martin Engineering or a representative.
Insufficient cleaning and carryback.	Tension of cleaner on belt is set too low or too high. Increase or decrease tensioner setting. Blades are worn. Check blades and replace if necessary. (See "Weekly Maintenance.")
Loose or missing fasteners.	Fasteners were not tight enough. Re-install and tighten securely.

NOTE

Conveyor equipment such as conveyor belt cleaners are subject to a wide variety of bulk materials characteristics and often have to perform under extreme operating or environmental conditions. It is not possible to predict all circumstances that may require troubleshooting. Contact Martin Engineering or a representative if you are experiencing problems other than those listed in the "Troubleshooting" chart above. Do not return the equipment to operation until the problem has been identified and corrected.

Part Numbers


MARTIN® QC™ #2 Assembly P/N 35700-XXXXXXX. See figure 1. Includes blade cartridge, mainframe and tensioners.

MARTIN® QC™ #2 Tensioners P/N 35701. See figure 1. Includes two tensioners.

MARTIN® QC™ #2 Blade Cartridges P/N 35697-XXXXXX. Includes replacement blades.

MARTIN® QC™ #2 Inspection Doors **MARTIN® QC™ #2 Cover Door Assembly:** P/N 35857. See figure 1.
MARTIN® QC™ #2 Dust-Tight Cover Door Assembly: P/N 38014-QC2.

Miscellaneous **Heavy-duty Hanger Mount Assembly:** P/N 34233-HD. Used to mount MARTIN® QC™ #2 Tensioners onto stringer instead of onto chute wall.

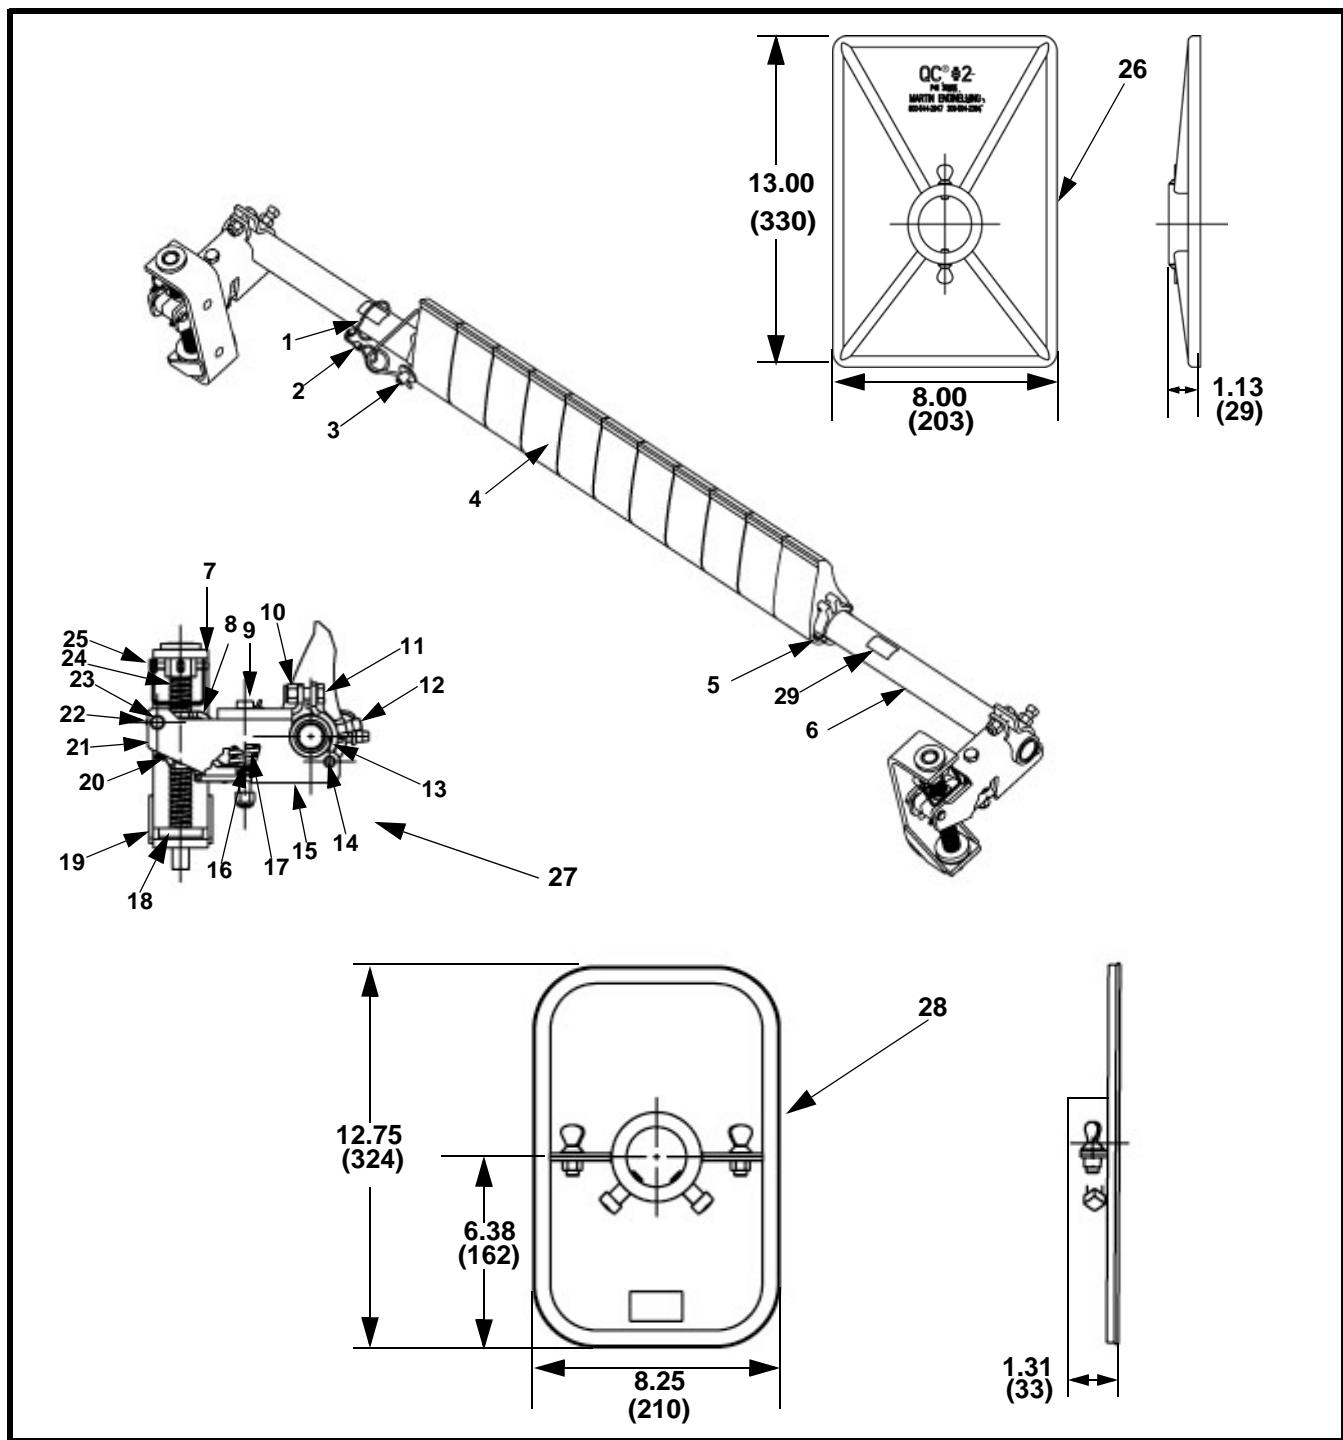

**Figure 1. MARTIN® QC™ #2 Belt Cleaner Assembly, P/N 35700-XXXXXXX* with
MARTIN® QC™ #2 Cover Door Assembly, P/N 35857 and
MARTIN® QC™ #2 Dust-Tight Cover Door Assembly, P/N 38014-QC2 (Sheet 1 of 2)**

Item	Description	Part No.	Qty
1	Aircraft Cable Ø 1/8	100107	2
2	Cable Clip 1/8	23481	2
3	Snap Lock Pin 1/2	33841	1
4	Replacement Blade Cartridge	35697-XXXXXX*	1
5	Slotted Spring Pin 1/2 x 3 ZP	33840	1
6	MARTIN® QC™ #2 Mainframe	35694-XX**	1
7	MARTIN® QC™ #2 Tensioner Top Bushing	35683	2
8	MARTIN® QC™ #2 Tensioner Pivot Block Insert	35684	2
9	Clevis Pin 1/2 x 4-1/2 ZP	SP01323-20	2
10	Hex Elastic Lock Nut 1/2 -13NC ZP	18577	2
11	Screw HHC 1/2 -13NC x 1-1/2 ZP	11763	2
12	Screw SHS Cup 1/2 -13NC x 1 SS	22763-03	2
13	MARTIN® QC™ #2 Tensioner Hinge Clamp Weldment	35677	2
14	Clevis Pin 3/8 x 2-1/2 ZP	35687	2
15	Formed Arm Clamp	36070	2
16	Spring Damper Tube	17239-2.5	2
17	Die Spring 1.50 x 3.00	36072	2
18	MARTIN® QC™ #2 Tensioner Bottom Bushing	35674	2
19	MARTIN® QC™ #2 Mount Bracket Weldment	35672	2
20	Grease Fitting 1/8 -27 NPT	11814	2
21	MARTIN® QC™ #2 Tensioner Pivot Block	36071	2
22	Cotter Pin 1/8 x 3/4 SS	31297	6
23	Clevis Pin 1/2 x 2-1/2 ZP	35686	2
24	MARTIN® QC™ #2 Tensioning Rod	35682	2
25	Wire Lock Pin 1/4 x 2.25 ZP	35685	2
NS	Flat Nylon Washer 1/2	35688	4
NS	Mounting Hardware Kit	35283	1
NS	Slotted Spring Pin 1/4 x 1-1/4 SS	32403	2
26	MARTIN® QC™ #2 Cover Door Assembly	35857	1
27	MARTIN® QC™ #2 Tensioner	35701	1 Pair
28	MARTIN® QC™ #2 Dust-Tight Cover Door Assembly	38014-QC2	1
29	MARTIN® Products Label	38048	2
See fig. 2	Conveyor Products Warning Label	23395	2
See fig. 3	MARTIN® QC™ #2 Tensioning Label	36073-L	2
See fig. 3	MARTIN® QC™ #2 Tensioning Label	36073-R	2

Figure 1. MARTIN® QC™ #2 Belt Cleaner Assembly, P/N 35700-XXXXXX* (Sheet 2 of 2)

*/**See notes below.

*First XXX indicates belt width in inches; next X indicates blade type: T for tungsten carbide, S for stainless steel, or C for ceramic; next X indicates whether a cover door is included: D for urethane, S for dust tight (assembly only); last XX indicates blade color: none for orange, BR for brown, or GR for green.

**XX indicates belt width in inches.


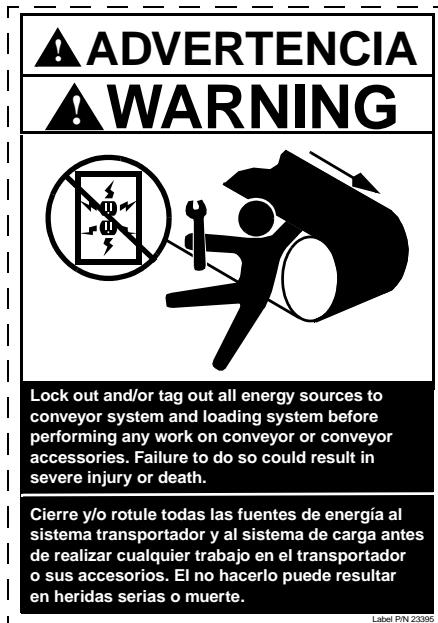


Figure 2. Conveyor Products Warning Label, P/N 23395

MARTIN® QC™ #2 Tensioner

To tension cleaner, start with blades touching belt. Then turn rod until top edge of tab is aligned with mark indicating your belt width.

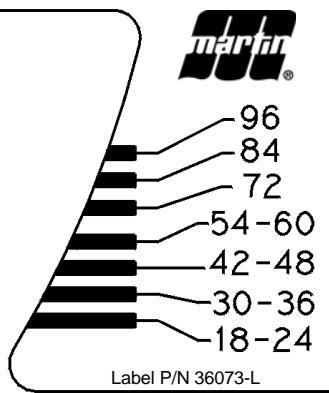

MARTIN® QC™ #2 Tensioner

To tension cleaner, start with blades touching belt. Then turn rod until top edge of tab is aligned with mark indicating your belt width.


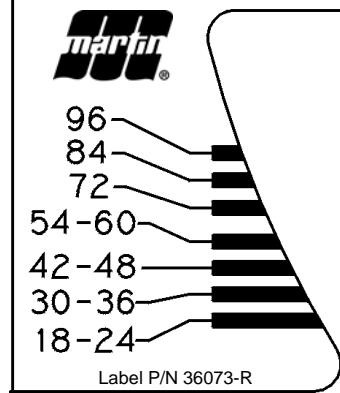



Figure 3. MARTIN® QC™ #2 Tensioning Labels, P/Ns 36073-L and 36073-R

Appendix

MARTIN® QC™ #2 Belt Cleaner Assembly

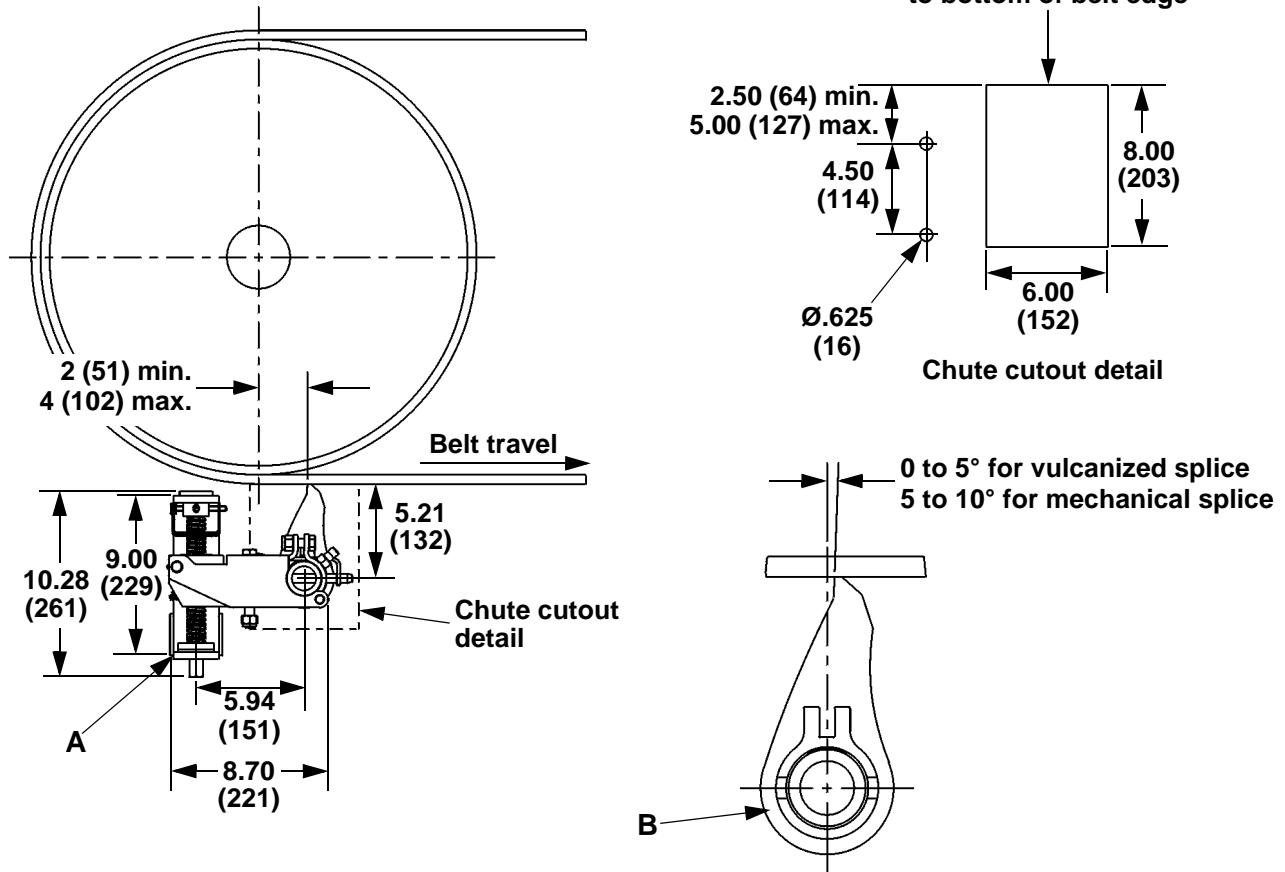

- A. MARTIN® QC™ #2 Belt Cleaner and Tensioner Assembly, P/N 35700-XXXXXXX
 B. MARTIN® QC™ #2 Blade Cartridge, P/N 35697-XXXXXX

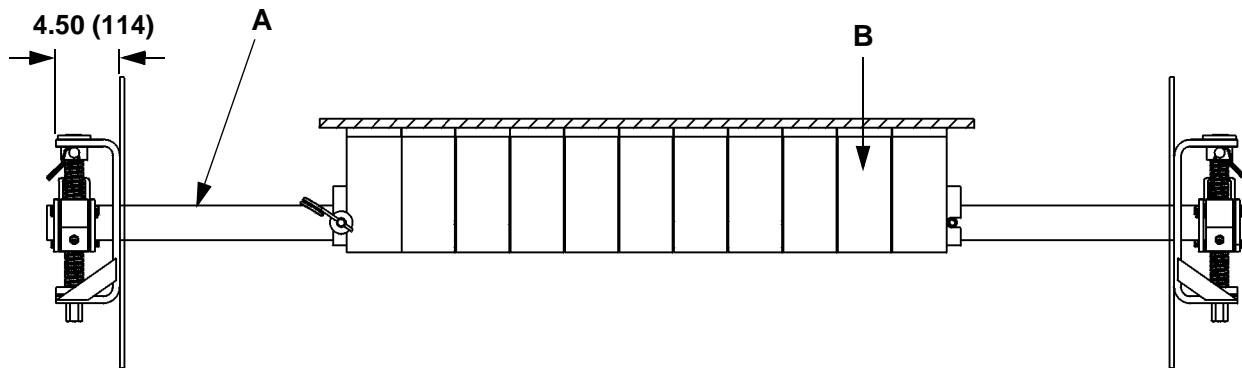

Notes

**QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
ISO 9001:2000**

