UniStore II v1.5.1

Installation Guide

JUN-22-2006, Version 3.4





Copyright notice

Copyright © Samsung Electronics Co., Ltd

All rights reserved.

Trademarks

<u>UniStore II</u> is a trademark of Samsung Electronics Co., Ltd in Korea and other countries.

Restrictions on Use and Transfer

All software and documents of **UniStore II** are commercial. Therefore, you must install, use, redistribute, modify and purchase only in accordance with the terms of the license agreement you entered into with Samsung Electronics Co., Ltd.

All advertising materials mentioning features or use of this software must display the following acknowledgement:

"This product includes **UniStore II** written by Samsung Electronics Co., Ltd."

Contact Information

Flash Software Group Memory Division Samsung Electronics Co., Ltd

Address: BanWol-Dong, Hwasung-City

Gyeonggi-Do, Korea, 445-701

Telephone: +82-31-208-6370 Fax: +82-31-208-6799



Preface

SEC UniStore II IG-002

This Document is an intallation Guide for UniStore II v1.5.1 developed by in Samsung Electronics.

Purpose

This document is UniStore II Installation Guide. This document explains the definition, architecture, system requirements, installation procedure, and configuration options of UniStore II.

Scope

This document is for Project Manager, Project Leader, Application Programmers, etc.

Definitions and Acronyms

Block NAND flash memory is partitioned into fixed-sized blocks. A

block is 16K bytes or 128K bytes.

BML Block Management Layer

FTL (Flash Translation A software module which maps between logical addresses

Laver) and physical addresses when accessing flash memory

Initial bad block Invalid blocks upon arrival from the manufacturers

Low Level Device Driver

NAND flash controller NAND flash controller is a controller for NAND flash

memory

NAND flash device NAND flash device is a device that contains NAND flash

memory or NAND flash controller.

NAND flash memory NAND-type flash memory

OneNAND Samsung NAND flash device that includes NAND flash

memory and NAND flash controller.

Page NAND flash memory is partitioned into fixed-sized pages. A

page is (512+16) bytes or (2048+64) bytes.

Run-time bad block Additional invalid blocks may occur during the life of NAND

flash usage

Sector The file system performs read/write operations in a 512-byte

unit called sector.

STL Sector Translation Layer

Unit Unit is an even multiple of, or equal to, block.

Wear-leveling algorithm is an algorithm for increasing Wear-Leveling

lifetime of NAND flash memory algorithm XSR eXtended Sector Remapper

Related Documents

- SEC, XSR v1.5.1 Part 1. Sector Translation Layer Programmer's Guide, Samsung Electronics, Co., LTD, APR-07-2006

- SEC, XSR v1.5.1 Part 2. Block Management Layer Programmer's Guide, Samsung Electronics, Co., LTD, APR-07-2006

- SEC, XSR v1.5.1 Porting Guide, Samsung Electronics, Co., LTD, APR-07-2006



History

Version	Date	Comment	Author	Approval
0.1	JULY-05-2004	Initial version	Sookhyun Kang	
0.2	JULY-08-2004	Modify the figure of XSR system architecture. XSR consists of XSR Core (STL and BML), OAM, PAM, and LLD. In the previous verion, XSR has only STL and BML.	Sookhyun Kang	
1.0	JULY-09-2004	Released version	Sookhyun Kang	Kwangyoon Lee
1.1	SEPT-21-2004	Modified version	Jin Kyu Kim	
2.0	OCT-19-2004	There is no modification from XSR v1.2.0.	Sookhyun Kang	Kwangyoon Lee
2.1	DEC-08-2004	Substantial modification to support for EKA2 (SymbianOS 8.1b)	Jin Kyu Kim	
3.0	DEC-09-2004	Released version	Sookhyun Kang	Kwangyoon Lee
3.1	JAN-14-2005	Minor modification	Jin Kyu Kim	
3.2	JUN-24-2005	Modification for XSR v1.4.0 -Add FAT Partition chapter for Multiple FAT PartitioningModify STL Configuration.	Se Wook Na	Song Ho Yoon
3.3	JAN-25-2006	There is no modification from XSR v1.4.0.	Min Young Kim	Song Ho Yoon
3.4	JUN-22-2006	XSR v1.5.1 Release	WooYoungYang	



Contents

1. Introduction	9
1.1. Background	g
1.1.1. NAND Flash Memory	9
1.1.2. Symbian OS File System Layers	9
1.2. Overview	10
1.2.1. NAND Media Driver	10
1.2.2. Utility	13
2. System Environments	15
2.1. System Requirements	15
2.2. Directory Structure	15
2.3. Prerequisites	16
3. Source Code Configurations	19
3.1. Configuration Options	19
3.1.1. Platform Configuration	19
3.1.2. MMP Configuration	21
3.1.3. NAND Physical Partition Configuration	24
3.1.4. STL Configuration	27
3.1.5. Drive Configuration	30
3.2. OS Partitioning	30
3.2.1. FAT Partition	31
3.2.2. ROFS Partition	31
3.2.3. CompFS Partition	33
4. Installation & Build	35
4.1. Build ROM Image	35
4.2. Format File System	38
•	
Appendix	40
I. medusii.mmp	40
II. Algorithm of NAND Media Driver Interface	42



Figures

Figure 1-1. Symbian OS File System Layers	9
Figure 1-2. UniStore II Software Architecture	
Figure 1-3. Support FATFS and ROFS	
Figure 1-4. Flow of UniStore II Installation Procedure	
Figure 2-1. UniStore II Directory Structure	15
Figure 2-2. UniStore II Directory Structure	
Figure 2-3. UniStore II Directory Structure	18



Code

Code 3-1. Platform Configuration	20
Code 3-2. mmp Configuration	
Code 3-3. Example of NAND Partition Configuration.	
Code 3-4. Example of STL Format configuration for multiple FATFS partition	
environments	29
Code 3-5. Example of STL Open configuration for multiple FATFS partition environ	iments
	30
Code 3-6. variantmediadef.h	30



Tables

Table 2-1. System Requirements	1:
Table 2-2. UniStore II Directory Structure	
Table 3-1. ECC Policy Restriction	
Table 3-2. XSRPartI Data Structure	
Table 3-3. XSRPartEntry Data Structure	20
Table 3-4. Pre-defined Partition ID	
Table 3-5. nAttr of XSRPartEntry Data Structure	2′



Introduction

1.1. Background

1.1.1. NAND Flash Memory

To execute the over-write operation on written memory sector, Flash Memory firstly executes the erase operation on the whole block including the written sector. The minimum unit of the read/write operation is a sector (page), but the minimum unit of the erase operation is a block. The unit of the erase operation is bigger than the unit of the write operation; this reduces the performance of Flash Memory.

To overcome 'erase before write' issue and the difference of write/erase unit, the address translation is used; the logical address and physical address. The mapping algorithm transfers the logical address that is requested by File System, to the physical address on real Flash Memory.

A block in Flash Memory has an independent life span. To expand the device's life span, all blocks in Flash Memory must be used evenly. The initial bad blocks can be contained in Flash Memory from the factory setting. And the run-time bad blocks also can be occurred in Flash Memory during operation.

1.1.2. Symbian OS File System Layers

Figure 1-1 shows the file operating flow while NAND Media Driver is used as the block device driver on Symbian OS. NAND Media Driver is a block device driver of UniStore II. medusii.pdd is an image file which will be used in run-time.

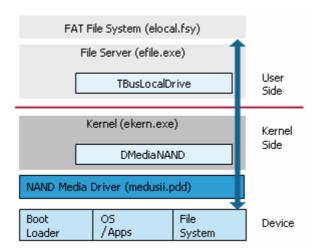


Figure 1-1. Symbian OS File System Layers



1.2. Overview

UniStore II is a software solution for NAND flash memory on Symbian OS. Figure 1-2 shows that UniStore II includes NAND Media Driver and related Utility.

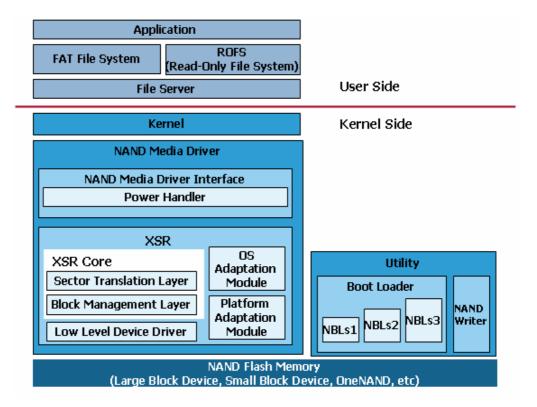


Figure 1-2. UniStore II Software Architecture

1.2.1. NAND Media Driver

NAND Media Driver is a block device driver for NAND flash memory. It consists of XSR component and NAND Media Drive Interface.

XSR is a core component of NAND Media Driver. It handles NAND flash memory as a block device like hard disk.

NAND Media Driver Interface is an interface of XSR and Symbian OS file server.

1.2.1.1. XSR Core

The following explains the components of XSR core.

□ STL (Sector Translation Layer)

STL corresponds to FTL. STL is to use Flash Memory such as a block device using sector mapping and to secure the data integrity in sudden power-off. STL is to use every block evenly.



□ BML (Block Management Layer)

BML manages bad blocks of Flash Memory using the bad block mapping table. BML transfers the address to allow the upper layer to access the non-bad block area when the upper layer tries to store data on Flash Memory or reads data from Flash Memory. BML makes the upper layer recognize the several NAND devices as one big Virtual Device. LLD is highly dependent on the NAND device because it directly accesses NAND device. The contents of LLD are different from each other according to each device. BML enables the upper layers to receive the several LLD services through the unified interface.

1.2.1.2. Miscellaneous

The following explains the components of XSR except core components.

☐ LLD (Low Level Device Driver)

LLD directly accesses NAND device. Thus, one LLD corresponding to one NAND device is required.

□ OAM (OS Adaptation Module)

OAM is a module to abstract OS dependent part. STL, BML and LLD receive OS services through OAM.

□ PAM (Platform Adaptation Module)

PAM is an abstracted module of the dependent part of the platform.

1.2.1.3. NAND Media Driver Interface

NAND Media Driver Interface is an interface that transfers Block Driver request of File Server to XSR-understandable request. The functionality of NAND Media Driver Interface is as follows.

Transfer unaligned data request to aligned data request

File Server of Symbian OS requests to read and write data by a byte but XSR can read and write data by a block (sector). So, NAND Media Driver Interface transfers data requests by a byte from File Server to XSR after translating them to the data requests by a block (sector). For more information about data transferring, refer to "Appendix".

□ Support Asynchronous Operation

Figure 1-1 shows that NAND Media Driver exists in preemptive kernel area on Symbian OS 8.1b. While NAND Media Driver handle NAND device, other threads can use CPU theoretically. Since other higher prioritized thread can preempt NAND Media Driver, theoretically there should be no kernel lock problem. However, too many threads are given same priorities as NAND Media Driver. Due to this problem, kernel lock up problem still exists in Symbian OS 8.1b.

To solve this lockup problem, asynchronous mode of UniStoreII is developed to guarantee the specified response time. For more information about Asynchronous Operation algorithm, refer to Interrupt part in "XSR Porting Guide".

To use the asynchronous mode of XSR, the device should support the hardware interrupt because the hardware device can notify whether the operation is completed through the interrupt. NAND Media Driver registers DFC (Delayed Function Call) to execute the proper process after checking error or executing command when the interrupts occurs.



□ Power Handler

Media Driver provides Power Handler according to Power Model policy of Symbian OS. In sudden power-off, the platform hardware sends the power event to Power Handler through Symbian OS. Then, Media Driver transfers the power event to XSR to prevent form injuring data of Flash Memory.

□ Support FATFS and ROFS

NAND Media Driver receives the request of read/write data from FATFS (FAT File System) and request of read data from ROFS (Read Only File System).

The data of FATFS should be read or written through STL mapping process in order to retrieve the data of FATFS in Flash memory. Figure 1-3 shows that NAND Media Driver accesses data of FATFS partition through STL.

However, the data of ROFS is read-only and cannot be updated. And so, access to the data of ROFS is not necessary to pass STL mapping procedure. Figure 1-3 shows NAND Media Driver accesses to data of ROFS partition not through STL but through BML.

☐ Read and write buffer management

Media Driver Interface cut Read or Write data from File System into pieces as much as the buffer size. Media Driver Interface delivers the cut data to XSR. The default of the buffer size is 16kbytes.

For example, a user requests 1MB data to read or write to File System, Media Driver cut the requested data into 16kbytes and delivers it to XSR one by one.



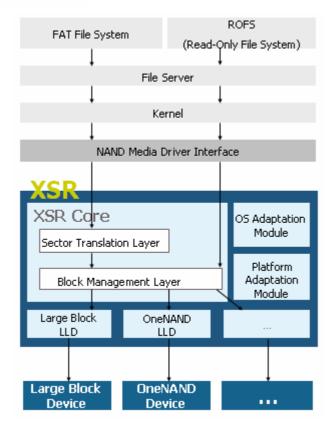


Figure 1-3. Support FATFS and ROFS

1.2.2. Utility

UniStore II provides Boot-loader and Flash Writer utility.

1.2.2.1. Boot-loader

Boot-loader is a Utility to boot through NAND flash. There are three kinds of Boot-loaders; NBLs1, NBLs2, and NBLs3.

■ NBLs1 (NAND Boot-loader stage 1)

NBLs1 is the primary bootloader. Before CPU fetches the first instruction from the reset vector, NBLs1 is automatically copied into the internal buffer in NAND controller and the system can boot from NBLs1. The size of NBLs1 code must be smaller than the size of the internal buffer. To reduce the size of NBLs1 code, it is generally written in assembly language.

NBLs1 copies NBLs2 to the system memory.

□ NBLs2 (NAND Boot-loader stage 2)

NBLs2 is the secondary bootloader. NBLs2 is executed after NBLs1 is finished to copy NBL2 to the system memory.

NBLs2 must be stored at the area that does not need for the bad block management because NBLs1 can not manage bad blocks. The area does not require the bad block management in SAMSUNG NAND flash memory is only one block, the block number 0.



Thus, NBLs1 and NBLs2 should be stored at 0th block. The size of NBLs1 and NBLs2 must be smaller than the size of a block.

NBLs2 must utilize the bad block management such as BML because the blocks except 0th block of NAND Flash memory may contain bad blocks. Generally, NBLs2 has the bad block management function but does not have OS image update function because of code size limitation.

If you don't want to update OS image, you can skip NBLs3 after NBLs2 copies OS image to the system memory. If you want to update OS image, you can make NBLs2 to upload NBLs3 to the system memory and make NBLs3 to copy OS image to the system memory.

□ NBLs3 (NAND Boot-loader stage 3)

NBLs3 is the tertiary bootloader. NBLs3 is executed after NBLs1 and NBLs2 are executed. NBLs3 copies OS image to the system memory and updates OS image etc.

1.2.2.2. Flash Writer

Flash Writer is used to write the image to the Flash memory using BML.

Figure 1-4 shows that UniStore II Installation Procedure described in this document.

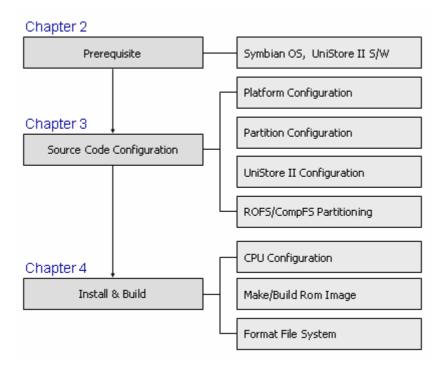


Figure 1-4. Flow of UniStore II Installation Procedure



System Environments

This chapter describes the system requirements, the directory structure, and Prerequisites to install UniStore II.

2.1. System Requirements

To install UniStore II v1.5.1, the following system requirements must be met. Table 2-1 shows the system requirements to install UniStore II on Symbian OS and use it.

Table 2-1. System Requirements

System Requirements	
Host OS	Windows 2K/XP
Target OS	Symbian OS v8.1b
Target CPU	ARMV4 architecture CPU
Cross Compiler	GCC
NAND Controller	Samsung NAND Flash Controller (optional)
	- for example : OneNAND
NAND Flash Chip	Samsung NAND Flash Memory

2.2. Directory Structure

Figure 2-1 shows UniStore II Directory Structure.

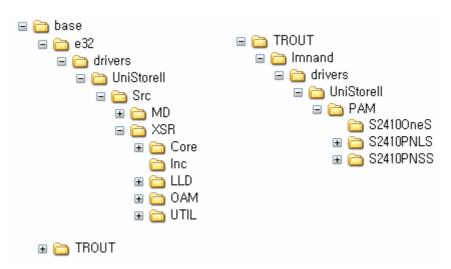


Figure 2-1. UniStore II Directory Structure

base, e32, drivers are the directories of Symbian v.8.1b. Table 2-2 describes the component of UniStore II directory structure in Figure 2-1.



Table 2-2. UniStore II Directory Structure

Dire	ector	y					Description
Bas	е						This directory is a base directory of Symbian OS
						v8.1b.	
	e32	2					This directory has the kernel of Symbian OS v8.1n.
		dri	ver	3			This directory has the device driver of Symbian OS
							v8.1b.
			Uni	.Sto:	reII		This directory is UniStore II base directory when
							UniStore II is installed.
				Doc	2		This directory has UniStore II related documents.
				Sro	2		This directory has the source code UniStore II.
					MD		This directory has the source code of NAND
							Media Driver Interface
					XSI	?.	This directory has the sources code and header
				files of XSR layers.			
						Core	This directory has XSR core source code.
						LLD	This directory has LLD source code.
						OAM	This directory has OAM source code.
							-
						PAM	This directory has PAM source code.
						FAM	This directory has FAW source code.
						INC	This directory has the header files of XSR.
	TRO	UT					This directory is a directory of variant.
		Lmr	nand				This directory has variant dependent UniStoreII
							code includeing UniStoreII media driver mmp file.
			Dri	ver	S		This directory has variant dependent device driver
							codes.
				Uni	Sto	reII	This directory has variant dependent UniStore II
							code.
					PAN	M	This directory has platform depent code in
							UniStoreII.

2.3. Prerequisites

To install UniStore II on Symbian OS, the following prerequisite must be met.

► Install Symbian OS

1) Install Symbian OS v8.1b on your computer.

Remark

For more information about installing Symbian OS v8.1b, refer to Installation part in "Porting Part of Symbian OS v8.1b manual" provided by Symbian.

2) Check BSP operation for the target.

Remark



BSP (Board Support Package) is also called as a base port which Symbian OS operates on the other hardware platform

Extract UniStorell_v1.5.1.zip

1) Make a new directory UniStoreII in \$base\e32\drivers.

Remark

e32 is a directory that the kernel of Symbian OS v8.1b exists in. drivers is that the device driver of Symbian OS v8.1b exists in.

2) Download the provided UniStore II file UniStoreII_v1.5.1.zip, and unzip it in \$base\e32\drivers\UniStoreII. Then, you can see the following directory and file structure.

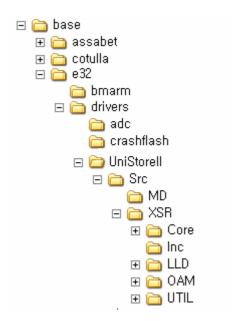


Figure 2-2. UniStore II Directory Structure



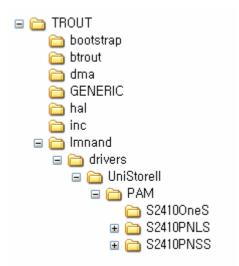


Figure 2-3. UniStore II Directory Structure

3) Dowload the released estart.cpp and overwrite estart.cpp in \$base\f32\estart

Remark

f32 is a subdirectory of base directory. estart is a direcoty where platform dependent codes are placed..



3. Source Code Configurations

This chapter describes the configuration options corresponding to the system environment. It also explains partitioning and building corresponding to the partition.

MEDUSII is UniStore II NAND Media Driver.

3.1. Configuration Options

3.1.1. Platform Configuration

UniStore II supports two volumes and eight devices at maximum; four devices per a volume. The address of the devices on the platform that is composed of volumes and devices is defined at PAM.cpp. When you want to port UniStore II to other platform, set the platform configuration as follows. (For more detailed information, see XSR porting guide)

The following is a part of PAM.cpp in \$base\VARIANT\lmnand\drivers \UniStoreII\PAM\DEVICE

Remark

DEVICE is a directory that contains device dependent PAM code.

Current PAM directory includes DEVICE directories such as IntapPNLS, IntapPNSS, S2410OneS, S2410PNLS, S2410PNSS and Template. Depending on your configuration, one of them will be integrated with device driver.

```
#include <XsrTypes.h>
#include <PAM.h>
#include <OAM.h>
#include <LLD.h>
#define VOL0
#define
         VOL1 1
#define DEV0 0
#define DEV1 1
#define DEV2
#define
         DEV3
VOID*
PAM GetPAParm(VOID)
   gstParm[VOL0].nBaseAddr[DEV0] = 0x20000000;
   gstParm[VOL0].nBaseAddr[DEV1] = NOT MAPPED;
   gstParm[VOL0].nBaseAddr[DEV2] = NOT MAPPED;
   gstParm[VOL0].nBaseAddr[DEV3] = NOT_MAPPED;
   qstParm[VOL0].nEccPol
                            = SW ECC;
   gstParm[VOL0].nLSchemePol = SW_LOCK_SCHEME;
   gstParm[VOL0].bByteAlign = TRUE32;
   gstParm[VOL0].nDevsInVol = 1;
                        = NULL;
   gstParm[VOL0].pExInfo
```



```
gstParm[VOL1].nBaseAddr[DEV0] = NOT MAPPED;
gstParm[VOL1].nBaseAddr[DEV1] = NOT_MAPPED;
gstParm[VOL1].nBaseAddr[DEV2] = NOT_MAPPED;
gstParm[VOL1].nBaseAddr[DEV3] = NOT_MAPPED;
gstParm[VOL1].nEccPol
                          = HW ECC;
gstParm[VOL1].nLSchemePol = SW_LOCK_SCHEME;
gstParm[VOL1].bByteAlign = TRUE32;
gstParm[VOL1].nDevsInVol = 0;
gstParm[VOL1].pExInfo
                         = NULL;
return (VOID *) gstParm;
```

Code 3-1. Platform Configuration

The function PAM_GetPAParm is called by BML and LLD. It provides the information of volumes and devices in platform.

nBaseAddr is a base address of NAND device for LLD.

nEccPol specifies ECC policy. nEccPol should be set to one of NO_ECC, SW_ECC and HW_ECC depending on your system's ECC policy. There is strict restriction concerned with ECC policy as follows.

Table 3-1. ECC Policy Restriction

E D I	TD 4 * 4*			
nEccPol	Restriction			
NO_ECC	If the system does not use any ECC algorithm in terms of HW			
	or in terms of SW, you must set to NO_ECC.			
	If ECC algorithm on the system is not compatible with			
	SAMSUNG provided ECC algorithm, you must set to			
	NO_ECC.			
	If stored ECC pattern is not compatible with SAMSUNG			
	standard, you must set to NO_ECC.			
	If spare assignment for ECC code is different from Samsung			
	standard, you must set to NO_ECC.			
HW_ECC	If following three conditions meet, you can set to HW_ECC			
	- ECC is handled by H/W			
	- ECC generation method is compatible with SAMSUNG			
	provided ECC algorithm.			
	- Stored ECC pattern is compatible with SAMSUNG			
	statndard.			
	- Spare assignment for ECC code is compatible with			
	Samsung standard.			
	Otherwise, you can not set to HW_ECC.			
SW_ECC	If you wan to use UniStoreII provided SW_ECC function, you			
	should set to SW ECC.			

For more detailed information, refer to 7.6 section of "XSR Porting Guide".

nLSchemePol is a policy related to write/erase protection; nLSchemePol can be HW_LOCK_SCHEME, SW_LOCK_SCHEME, and NO_LOCK_SCHEME. You can type HW_LOCK_SCHEME in nLSchemePol if NAND device does provide the lock scheme.



You type NO_LOCK_SCHEME in nLSchemePol if NAND device does not use the lock scheme. If you type SW_LOCK_SCHEME in nLSchemePol in order to use the S/W lock scheme, BML will be responsible for the write/erase protection.

bByteAlign is used to decide whether BML force the byte alignment or not, when BML gets not-aligned buffer from the upper layer in read/write operation. If you set it as TRUE 32, that means that BML layer forces the byte alignment. Otherwise, BML does not care about byte alignment. In this case, byte alignment issue is deferred to LLD.

nDevInVol is the number of the allocated devices in the volume.

pExInfo is entry for extension usage. It is available for developers who want to add their own platform dependent information.

For more information about PAM_GetPAParm, refer to PAM API part in "XSR Porting Guide".

3.1.2. MMP Configuration

A .mmp project definition file specifies the properties of a project in a platform and it's independent of platform. The makmake tool converts project definition files into makefiles for particular platforms. The abld tool wraps calls to makmake. It is more convenient to use than makmake directly.

You can set mmp configuration through medusii.mmp provided by UniStore II. Code 3-2 shows a part of medusii.mmp in \$base\VARIANT\lmnand.

```
// Select OS type ( EKA1 or EKA2 : exclusive )
               SYMOS_OAM_EKA1
//macro
               SYMOS_OAM_EKA2
macro
// Select Operation mode (sync or async : exclusive)
//macro SYNC_MODE
               ASYNC MODE
macro
// En-/Dis-able Debug message of MD, STL, BML
//macro MED_DEBUG
//macro
               STL_DEBUG
//macro
              BML_DEBUG
//macro
               LLD_DEBUG
macro
              OAM DBGMSG ENABLE
//macro
              CHECK WEARCOUNT
#define
              LLD_ONLD
#undef
              LLD_DNANDL
              LLD_DNANDS
#undef
#undef
              LLD S3C2410
#if defined(LLD ONLD)
SOURCEPATH USIILOC(XSR\LLD\ONLD512)
SOURCE
              ONLD.cpp
SYSTEMINCLUDE USIILOC(XSR\LLD\ONLD512) PAMLOC(OneS)
SOURCEPATH PAMLOC(OneS)
SOURCE
               PAM.cpp
```



Code 3-2. mmp Configuration

This following describes that user's configuration parts in medusii.mmp.

SYMOS_EKA1 / SYMOS_EKA2

This set current OS type. There are two types of kernel in SymbianOS. One is EKA1 whose kernel is not preemptive. The other one is EKA2 whose kernel is preemptive. You must activate only one of them exclusively.

■ Execute UniStoreII in EKA1

macro	SYMOS_EKA1	
// macro	SYMOS_EKA2	

■ Execute UniStoreII in EKA2

// macro	SYMOS_EKA1	
macro	SYMOS_EKA2	

Depending on the above, different interrupt APIs of OS is called in PAM.cpp.

Currently, SYMOS_EKA2 is set by default.

☐ SYNC_MODE / ASYNC_MODE

This specifies Write Operation mode.

In synchronous mode, NAND Media Driver completes the write operation request from File System, and returns it.

In asynchronous mode, NAND Media Driver handles the write operation request from File System, and stops the request when the predefined number of BML level operations are processed on NAND flash. Then, NAND Media Driver returns the uncompleted request. When the interrupt is occurred, NAND Media Driver redos the uncompleted write operation using ISR and DFC.

■ Execute Synchronous Write Operation

macro	SYNC_MODE	
// macro	ASYNC_MODE	

■ Execute Asynchronous Write Operation

//macro	SYNC_MODE	
macro	ASYNC_MODE	

You must choose one between Synchronous Write Operation and Asynchronous Write Operation.

If you choose Asynchronous Write Operation, you must the additional settings for Asynchronous Write Operation referring to Synchronous Write Operation and Asynchronous Write Operation part of "XSR Porting Guide".



Currently, asynchronous Write Operation is set by default.

☐ MED_DEBUG / STL_DEBUG / BML_DEBUG / LLD_DEBUG

This sets whether to show the debug message of the layers and modules. To print the debug message, activate XXX_DEBUG macro.

■ Print debug message

macro	XXX	X_DEBUG	

■ NOT Print debug message

```
//macro
                   XXX DEBUG
```

You can multiply enable to print debug message. If ROM image is in debug mode, the debug message is printed. If ROM image is in release mode, the debug message is not printed even though the debug is enabled.

You can set to show the debug messages of XSR layers and modules. Currently, Media Driver (MED), STL, BML and LLD are set to disable the debug messages.

■ Current Setting

	,	
//macro	MED_DEBUG	
//macro	STL_DEBUG	
//macro	BML_DEBUG	
//macro	LLD_DEBUG	

CHECK WEARCOUNT

This sets whether to check Wearcount of the total block in Media Driver. Wearcount in a block is the number of the previous erase operations.

If you set to check wearcount, XSR displays the erase count of the whole blocks in open time, and checks that the data to subtrace from max to min is in the boundary (the default boundary is 1000).

■ Check Wearcount

macro	CHECK_WEARCOUNT	
-------	-----------------	--

■ NOT Check Wearcount

```
// macro
                 CHECK_WEARCOUNT
```

Currently, checking Wearcount is not set.

☐ LLD_ONENAND / LLD_DNANDL

This sets LLD of NAND Media Driver.

#undef	LLD_EAGLE	
#define	LLD_ONLD	
#undef	LLD_DNANDL	
#undef	LLD_DNANDS	



#undef	LLD S3C2410	
11 01-1-01-0-		

Type #define in front of the type of device to use a certain NAND device and type #undef in front of other types not to use. Depending on the choice here, what type of LLD is compiled is determined.

Currently, OneNAND is set by default.

#define	LLD_ONLD	
---------	----------	--

Remark

Symbian OS defines CPU name to be used in Symbian Company. For example, StrongArm based reference platform is defined as MISA, OMAP as MHELEN, etc. For more information about the platform name, refer to Device Driver part in "Porting Part of Symbian OS v8.1b manual" provided by Symbian.

3.1.3. NAND Physical Partition Configuration

UniStore II manages NAND bootloader, OS Image, ROFS (Read-Only File System), and several FATFS (FAT File System) in NAND device. NAND partition means the area where the different data is separately stored such as OS Image, ROFS and FATFS. A maximum number of FATFS partition is 31.

Each platform can contain different NAND partitions in a NAND device. You can force NAND partition configuration of platform to the NAND device through BML Format. Second parameter for BML Format contains partition configuration.

Figure 3-1 shows an example of NAND partition configuration. You can allocate NAND partition except Reservoir in total NAND device area.

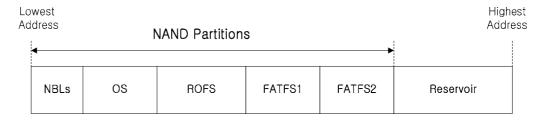


Figure 3-1. Example of NAND Partition Configuration

Reservoir is an area which is composed of blocks reserved for replacing bad blocks. Three blocks to manage Reservoir and N reserved blocks to replace bad blocks are allocated. For the information about the number of reserved blocks N, refer to "Samsung NAND Flash memory & SmartMedia Data Book".

```
#include <XSRTypes.h>
#include <BML.h>
#define NUM_OF_VOLS 2
#define VOL0
#define VOL1
BOOL32
Example(VOID)
```



```
UINT32 nVol;
  XSRPartI stPart[NUM_OF_VOLS];
nVol = VOL0;
OAM_Memcpy(stPart.aSig, "XSRPARTI", BML_MAX_PART_SIG);
                        = 0 \times 00011000;
stPart[VOL0].nVer
stPart[VOL0].nNumOfPartEntry
stPart[VOL0].stPEntry[0].nID = PARTITION_ID_COPIEDOS;
stPart[VOL0].stPEntry[0].nAttr = BML_PI_ATTR_FROZEN |
                                    BML_PI_ATTR_RO;
stPart[VOL0].stPEntry[0].nlstVbn = 10;
stPart[VOL0].stPEntry[0].nNumOfBlks = 100;
stPart[VOL0].stPEntry[1].nID = PARTITION_ID_DEMANDONOS;
stPart[VOL0].stPEntry[1].nAttr = BML_PI_ATTR_RO;
stPart[VOL0].stPEntry[1].n1stVbn
                                  = 110;
stPart[VOL0].stPEntry[1].nNumOfBlks = 300;
stPart[VOL0].stPEntry[2].nID = PARTITION_ID_FATFILESYSTEM;
stPart[VOL0].stPEntry[2].nAttr = BML_PI_ATTR_RW;
stPart[VOL0].stPEntry[2].n1stVSN
                                  = 410;
stPart[VOL0].stPEntry[2].nNumOfScts = 120;
stPart[VOL0].stPEntry[3].nID = PARTITION ID FATFILESYSTEM1;
stPart[VOL0].stPEntry[3].nAttr = BML_PI_ATTR_RW;
stPart[VOL0].stPEntry[3].n1stVSN
                                  = 530;
stPart[VOL0].stPEntry[3].nNumOfScts = 300;
if (BML_Format(nVol,&stPart[VOL0],
              BML_INIT_FORMAT)!= BML_SUCCESS))
return FALSE32;
return TRUE32;
```

Code 3-3. Example of NAND Partition Configuration

The above code shows an example of NAND partition configuration using BML Format.

XSRPartI represents partition information structure. It is used as a parameter of BML_Format, when formatting BML. Table 3-2 describes XSRPartI data structure.

Table 3-2. XSRPartI Data Structure

Variable	Data Type	Description
nNumOfPartEntry	UINT32	It is the number of valid partition entries
		that is included in partition information.
aSig	UINT8	It is a signature of Partition Information,
		which is an 8bytes array. It includes a



		'XSRPARTI' string.
nVer	UINT32	It is a version of Partition Information,
		which is 0x00011000 at present.
stPEntry	XSRPartEntry	This structure contains independent
		Partition information. Currently up to 31
		Partition Entries can be stored.

Table 3-3 describes XSRPartEntry data structure.

Table 3-3. XSRPartEntry Data Structure

Variable	Data Type	Description
nID	UINT32	It is ID number of the partition
nAttr	UINT32	It is attribute of the partition.
n1stVbn	UINT32	It is the first virtual block number of the partition.
nNumOfBlks	UINT32	It is the number of blocks in the partition. If the NAND device supports multi-block erase feature, number of blocks in the partition should be larger than 18.

Table 3-4 describes Pre-defined Partition ID. You can use Pre-defined Partition ID. However, you can newly define Partition ID and use it.

Table 3-4. Pre-defined Partition ID

Partition ID	Value	Description
PARTITION_ID_NBL1	0	NAND bootloader stage 1
PARTITION_ID_NBL2	1	NAND bootloader stage 2
PARTITION_ID_NBL3	2	NAND bootloader stage 3
PARTITION_ID_COPIED	3	OS image copied from NAND flash
OS		memory to RAM
PARTITION_ID_DEMAND	4	OS image that is loaded on demand
ONOS		
PARTITION_ID_FATFIL	8	FAT file system #0
ESYSTEM		
PARTITION_ID_FATFIL	9	FAT file system #1
ESYSTEM1		
PARTITION_ID_FATFIL	10	FAT file system #2
ESYSTEM2		
PARTITION_ID_FATFIL	11	FAT file system #3
ESYSTEM3		
PARTITION_ID_FATFIL	12	FAT file system #4
ESYSTEM4		
PARTITION_ID_FATFIL	13	FAT file system #5
ESYSTEM5		
PARTITION_ID_FATFIL	14	FAT file system #6
ESYSTEM6		
PARTITION_ID_FATFIL	15	FAT file system #7
ESYSTEM7		
PARTITION_ID_FATFIL	16	FAT file system #8
ESYSTEM8		
PARTITION ID FATFIL	17	FAT file system #9
		.,



ESYSTEM9		
PARTITION_USER_DEF_ BASE	0x10000000	The base value of ID that you can define. You can define Partition Entry ID from 0×10000000 to $0 \times FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF$

Table 3-5 describes nAttr variable in XSRPartEntry data structure.

Table 3-5. nAttr of XSRPartEntry Data Structure

Attribute	Description
BML_PI_ATTR_FROZEN	It is a read-only attribute for a partition that is not updated
BML_PI_ATTR_RO	in run-time. This can be applied to a boot loader or an OS
	that will not be updated.
BML_PI_ATTR_RO	It is read-only attribute for a partition that can be updated
	in run-time. It can be changed to a BML_PI_ATTR_RW
	in run-time by using a BML_IOCtl. It can be applied to an
	OS or font.
BML_PI_ATTR_RW	It is a read-write attribute for a partition that is both
	readable and writable in run-time. It can be applied to File
	System.

NAND partition configuration is defined at d_mednand.cpp where BML Format can be called. To apply NAND partition configuration defined at d_mednand.cpp, you should activate DO_BMLFORMAT macro in mmp file.

3.1.4. STL Configuration

The file system type and block size should be specified in format hard disk. STL has to configure a few related items in formatting. After BML format, all RW partitions should be formatted using STL_Format. The following describes the configuration of the member variables of STLConfig structure.

□ nFillFactor

STL stores both user data and meta data on NAND flash memory. meta data area is reserved for the performance improvement and you actually use the rest for the user data area. The user data area can be configured by nFillFactor.

For example, nFillFactor value is 100. It allows you to use the whole user data area except meta data area. If nFillFactor is 50, it allows you to use 50 percent of the user data area. As the usable data area becomes smaller, the performance is more improved.

☐ nSnapshots

STL meta data includes Snapshot. Snapshot means the latest SAM table. If the number of SAM snapshots in STLConfig is NUM OF SNAPSHOT 4, there will be more EUH in one unit for additional SAM snapshots. Additional SAM snapshots are used to reduce time to construct SAM table. It value is 1 or 4(exclusive) If you need more information, refer to detailed design document.



☐ nBlksPerUnit

A unit is a logical quantity which can be composed of one block or multiple blocks. Normally, a unit is composed of N blocks and the smallest erasable unit. The number of blocks per unit is configured by nBlksPerUnit. For large block NAND device, nBlksPerUnit should be only 1. And for small block NAND device, nBlksPerUnit can be specified among 1 to 7. As the unit value is increased, the memory used by XSR is larger, but the performance of random write operation becomes better.

☐ nNumOfRsvUnits

STL manages the whole memory space as a set of units. Some of units which are called as reserved units and the reserved units are not accessiable by users. The number of the reserved units is configurable and should be more than 2 at least. As the reserved unit value is increased, the usable disk capacity for user will be decreased, but the whole write operation will be improved.

Shows an example of configuration using STL Format.

To use RW partition, partition should be opened using STL_Open. The following describes a member variable configuration of STLInfo structure. User can configure nSamBufFactor and bASyncMode when STL Open is called.

□ nSamBufFactor

STL reads the sector mapping information from NAND flash memory and builds the sector mapping table on RAM to access fast to the sectors. User can set the RAM buffer size for locating the sector mapping table with this nSamsBufFactor.

nSamBufFactor indicates the total size of sector mapping table as a percentage and can be 0 to 100. For example, if you try to locate the 50 percent of the sector mapping tables on RAM, you can set the nSamBufFactor as 50. But note that you can set it as 0 or 100 if you try to locate the total sector mapping tables on RAM.

In order that STL accesses a sector, sector mapping table of unit should be constructed first. If the sector mapping table is not built on RAM, a buffer is allocated based on LRU replacement algorithm. Then meta information of unit that STL has to access is retrieved from NAND flash memory, and the meta information composes sector mapping tables on the allocated buffer. As the RAM buffer size for locating the sector mapping tables is smaller, access time to a sector is longer, because there is higher probability that the sector mapping table should be newly composed.

Consequently, it is better to make the RAM-resident sector mapping tables as many as possible for improved performance, despite of its memory overhead. And you should use the fixed nSamBufFactor value every time STL is opened.

□ bASyncMode

This flag specifies how to manipulate XSR operations. If bASyncMode is set to TRUE, the XSR operations are to be processed asynchronously. Otherwise, the operations are to be processed synchronously.

You can set configuration for STLInfo in d_mednand.cpp. Code 3-4 is a part of **d_mednand.cpp** in \$base\e32\drivers\UniStoreII\src\MD.

In multiple FATFS partition environments, each partition can have its own configuration. However, value of nBlksPerUnit and bAsyncMode should be identical for each partition in the same volume. If the partition which has a different value for



nBlksPerUnit or bAsyncMode with other partitions in the same volume exists, STL returns error.

```
#include <XSRTypes.h>
#include <STL.h>
#include <BML.h>
#define VOL0
#define VOL1
                    1
#define NUM_OF_FATFS 2
#define FATFS0
#define FATFS1
                    1
#define RESET_ECNT 0
BOOL32
Example(VOID)
  STLConfig stSTLConfig[NUM_OF_FATFS];
  UINT32 nVol;
  nVol = VOL0;
  stSTLConfig[FATFS0].nFillFactor
                                    = 100;
  stSTLConfig[FATFS0].nSnapshot
  stSTLConfig[FATFS0].nNumOfRsvUnits = 15;
  stSTLConfig[FATFS0].nBlksPerUnit
  stSTLConfig[FATFS1].nFillFactor = 90;
  stSTLConfig[FATFS1].nSnapshot
  stSTLConfig[FATFS1].nNumOfRsvUnits = 10;
  stSTLConfig[FATFS1].nBlksPerUnit
  if (STL_Format(nVol,
                 PARTITION_ID_FATFILESYSTEM,
                 &stSTLConfig[FATFS0],
                 RESET_ECNT) != STL_SUCCESS)
     return FALSE32;
  if (STL_Format(nVol,
                 PARTITION_ID_FATFILESYSTEM1,
                 &stSTLConfig[FATFS1],
                 RESET_ECNT) != STL_SUCCESS)
     return FALSE32;
  return TRUE32;
```

Code 3-4. Example of STL Format configuration for multiple FATFS partition environments



```
for(nCnt = 0; nCnt < NUM_OF_MD_PARTITION; nCnt++)</pre>
#ifdef SYNC MODE
      astSTLinfo[nCnt].bASyncMode
                                         = FALSE32;
#else
      astSTLinfo[nCnt].bASyncMode
                                          = TRUE32;
#endif
      astSTLinfo[nCnt].nSamBufFactor
                                          = 100;
```

Code 3-5. Example of STL Open configuration for multiple FATFS partition environments

3.1.5. Drive Configuration

Set Drive

1) Open variantmediadef.h file in \$base\VARIANT\inc

NAND DRIVECOUNT specifies the number of local drive objects to be assigned to the media driver. Drives that support more than one partition must specify a number greater than 1. For NAND_DRIVELIST, 0 signifies Drive C, 1 signifies drive D and etc. Current configuration sets 3 drives as I, J, k, by default. NAND_NUMMEDIA specifies the total number of DMedia objects to be associated with the media driver. NAND_DRIVENAME is the name of the media driver, for example "Nand". For more detailed information, refer to Symbian help for drive information.

```
// Parameters for mednand.pdd
#define NAND_DRIVECOUNT 3
#define NAND_DRIVELIST 6,7,8
#define NAND_NUMMEDIA 1
#define NAND DRIVENAME "Nand"
```

Code 3-6. variantmediadef.h

Note that the number of elements in NAND DRIVELIST must be the same as the value specified by NAND_DRIVECOUNT.

3.2. OS Partitioning

Generally, NAND Media Driver can use three kinds of partitions; FAT partition, ROFS partition, and CompFS partition.

This chapter explains the method of the target building when you port UniStore II to target system environment using FAT partition, ROFS partition or CompFS partition.



3.2.1. FAT Partition

To use FAT partition, build UniStore II to the target as follows.

► Add FAT Partition to Media Driver

1) Open **d_mednand.h** in \$base\e32 \drivers\UniStoreII\Src\MD.

Modify a NUM_OF_MD_PARTITION as number of FAT Partitions which you want to

```
/***********************************
/* Configuration value for MD
                              2
#define NUM_OF_MD_PARTITION
```

When you finish modifying d_mednand.h, save the file and close it.

2) Open d_mednand.cpp in \$base\e32 \drivers\UniStoreII\Src\MD.

Add FAT Partition IDs. The number of FAT Partition is set from step 1.

```
/* Local Variable for MD
static TUint aMDPartID[NUM_OF_MD_PARTITION] =
                 {PARTITION_ID_FILESYSTEM,
                 PARTITION_ID_FILESYSTEM1 };
```

When you finish modifying d_mednand.cpp, save the file and close it.

3.2.2. ROFS Partition

To use ROFS partition, build UniStore II to the target as follows.

▶ Build ROFS filesystem

1) Go to \$base\f32\group

```
> bldmake bldfiles
> abld build arm4 erofs
```

▶ Create ROFS Image

1) Open an editor, write as follows, and save it as *.oby. It shows an example to write a file test.oby.

```
rofsname = test.rofs
rofssize = 0x80000
version = 0.01(1000)
file = bin\TechView\epoc32\release\arm4\urel\t_ramstr.exe
\test\t_rofs_ramstr.exe
file = bin\TechView\epoc32\release\arm4\urel\t_fsysbm.exe
\test\t_rofs_fsysbm.exe
```



- 2) Save the file in \$base\e32\rombuild when you finish writing test.oby and close
- 3) Go to \$base\e32\rombuild in command prompt, Type the following command, and press an enter key. Then, the image file test.rofs is created.

```
> rofsbuild test.oby
```

► Write ROFS Image to NAND Flash Memory

- 1) Unlock NAND device using BML_IOCTL_UNLOCK_WHOLEAREA, IOCtl Code of BML.
- Erase NAND partition that ROFS image would be written using BML_EraseBlk.
- 3) Write ROFS image to NAND partition using BML_Write.

▶ Add ROFS Partition to File Server

To add ROFS partition to File Server, modify header.iby and estart.cpp as follows.

1) To use ROFS and not to use CompFS, write the following in header.iby.

```
#define
          WITH ROFS
#undef
          WITH COMP
```

When you finish modifying **header.iby**, save the file and close it.

- 2) Open estart.cpp in \$base\f32\estart\estart.cpp.
- 3) To use ROFS and not to use CompFS, verify the following in estart.cpp.

```
TBool
          gMountRofs = ETrue;
```

If gMountRofs is EFalse, modify it into ETrue.

To apply the modified configuration part, go to \$base\f32\group\ in command prompt and Type the following command and press an enter key. Then, the modified configuration part is applied to the system. (Since estart file is already replaced with released one, you should rebuild estart even if you does nothing in step 4.)

```
> bldmake bldfiles
```

5) You should build a new image of the modified configuration part. Type the following command and press an enter key.

```
> abld build ASSP estart
```

Currently, ASSP (Application Specific Standard Product) can be ARMI or ARM4.



After building the image, e32start.exe is created in \$epoc32\release\ASSP\ UDEB[UREL].

3.2.3. CompFS Partition

CompFS partition combines several ROFS amd ROMFS into one. It combines one ROFS partition with existing ROMFS partition to look like Z drive. Z drive in Symbian OS is the system drive.

To use CompFS partition, build the nexessary unages as follows.

▶ Build ROFS filesystem

1) Go to \$base\f32\group

```
> bldmake bldfiles
> abld target arm4 erofs
```

► Create ROFS Image

1) Open an editor, write as follows, and save it as *.oby. It shows an example to write a file test.oby.

```
rofsname = test.rofs
rofssize = 0x80000
version = 0.01(1000)
file = bin\TechView\epoc32\release\arm4\urel\t_ramstr.exe
\test\t_rofs_ramstr.exe
file = bin\TechView\epoc32\release\arm4\urel\t_fsysbm.exe
\test \t_rofs_fsysbm.exe
```

- 2) Save the file in \$base\e32\rombuild when you finish writing test.oby and close it.
- Go to \$base\e32\rombuild in command prompt, Type the following command, and press an enter key. Then, the image file test.rofs is created.

```
> rofsbuild test.oby
```

► Write CompFS Image to NAND Flash Memory

- 1) Unlock NAND device using BML_IOCTL_UNLOCK_WHOLEAREA, IOCtl Code of BML.
- Erase NAND partition that CompFS image would be written using BML_EraseBlk.
- Write CompFS image to NAND partition using BML_Write.



► Add CompFS Partition to File Server

To add CompFS partition to File Server, modify header.iby.

1) To use CompFS and not to use ROFS, write the following in header.iby.

```
#undef
          WITH_ROFS
#define
          WITH_COMP
```

When you finish modifying header.iby, save the file and close it.

Go to \$base\f32\group\ in command prompt, Type the following command and press an enter key, Then, the modified configuration part is applied to the system.

```
> bldmake bldfiles
```

You should build a new image of the modified configuration part. Type the following command and press an enter key.

```
> abld build ASSP estart
```

Currently, ASSP(Application Specific Standard Product) can be ARMI or ARM4.

After building the image, e32start.exe is created in \$epoc\release\ASSP\ UDEB[UREL].



Installation & Build

This chapter first explains how to install UniStore II on Symbian OS, and build it and describes how to check that the installation is properly completed.

MEDUSII is UniStore II NAND Media Driver.

4.1. Build ROM Image

▶ Build VARIANT

1) Go to \$base/VARIANT

```
> bldmake bldfiles
> abld build ASSP
```

▶ Build NAND Media Driver

1) Open **bld.inf** in \$base\variant\lmnand. Bld.inf is a component description file, and defines the platform port.

```
PRJ PLATFORMS
ARM4 ARMV4 ARM4T ARMV5
PRJ_EXPORTS
rom\lmnand.iby
                       \epoc32\rom\include\
rom\lmnand.oby
                      \epoc32\rom\include\
                      \epoc32\rom\lmnand\
rom\kernel.iby
PRJ_MMPFILES
medusii
```

2) Open the lm.mmh in the same directory and modify the path of source code.

```
#define LmTarget(name,ext) _lmnand_##name##.##ext
#define USIILOC(component)
                      ..\..\e32\drivers\UniStoreII\Src\##component
#define PAMLOC(pamtype)
                      .\Drivers\UniStoreII\PAM\S2410##pamtype
```

Verify the location of source code.

3) Go to \$base\variant\lmnand in command prompt, to apply the modified configuration part.

Type the following command and press an enter key. Then, the modified configuration part is applied to the system.

```
> bldmakes bldfiles
> abld export
```



```
> abld makefile
> abld library
> abld target #ASSP# UDEB[UREL] medusii
```

Now, _lmnand_MEDUSII.PDD is made in \$bin\TechView \epoc32\release \KMAIN\UDEB[UREL].

4) Open the kernel.iby file in \$base\variant\rom.

Add the below statement.

```
extension[VARID]=\epoc32\Release\##KMAIN##\##BUILD##\_lmnand
_MEDUSII.PDD \System\Bin\MEDUSII.PDD
```

Above statement specifies that _lmnand_MEDUSII.PDD should be loaded when system booting.

▶ Build Estart

1) Open **estart.cpp** in \$base\f32\estart\

Since UniStoreII does not use FS extension any more, estart.cpp should be modified.

```
static const SFileSystemInfo FileSystems[] =
#ifndef ___EPOC32
       {DetectEmulRAM,
                           _S("efat32"), _S("fat"),
       0, FS_FLAG_FORMAT},
       {DetectEmul_CF_FAT32,_S("efat32"), _S("fat"),
       0, FS_FLAG_FORMAT},
                          _S("efat"),
       {DetectEmulRAM,
                                        _S("fat"),
       0, FS_FLAG_FORMAT},
       {DetectEmul_CF_FAT, _S("efat"),
                                         _S("fat"),
       0, FS_FLAG_FORMAT},
       {DetectFtl,
                         _S("efat"),
                                        _S("fat"),
       0, FS_FLAG_FORMAT_CORRUPT},
#else
                         _S("elocal"), _S("fat"), 0, 0},
       {DetectELocal,
                         _S("elocal"), _S("fat"),
       {DetectFtl,
       0, FS_FLAG_FORMAT_CORRUPT } ,
#endif
                         _S("erofs"), _S("rofs"),
       {DetectRofs,
       0, FS_READONLY},
       {DetectEneaLFFS,
                         _S("elffs"),
                                        _S("lffs"),
       0, FS_FLAG_FORMAT},
       {DetectIso9660, _S("iso9660"), 0,
                                                  0, 0},
       {DetectNtfs,
                         _S("ntfs"), 0,
                                                  0, 0},
   };
```

2) Go to \$base\f32\group

```
> bldmkae bldfiles
> abld export
> abld makefile #ASSP# estart
> abld target #ASSP# UDEB[UREL] estart
```

check the creation of E32STRT. EXE in \$epoch32\release\#ASSP#\UDEB [UREL].



Add below statement into f32.iby in \$base\f32\rom

```
file=\Epoc32\Release\##MAIN##\##BUILD##\e32strt.exe
     System\Bin\estart.exe
```

▶ Build Test program

1) Go to \$base\f32test\group in command prompt to make test program.

Type the following command and press an enter key.

```
> bldmakes bldfiles
> abld test build arm4 t_ramstr
> abld test build arm4 t_fsymbm
```

check t_ramstr and t_fsymbm in \epoc32\Release\#ASSP#\#UDEB[UREL]# directory.

2) Open kernel.iby in \$base\variant\rom directory.

Add below statement

```
data[MAGIC]=\epoc32\Release\##KMAIN##\##BUILD##\t_ramstr.exe
            \test\t_ramstr.exe
data[MAGIC]=\epoc32\Release\##KMAIN##\##BUILD##\ t_fsysbm.exe
           \test\ t_fsysbm.exe
```

Above code specifies that t_ramstr.exe and t_fsymbm.exe be loaded on booting time.

▶ Build ROM Image

If you use ROFS or CompFS Partition, go to step 1). If you do not use ROFS or CompFS Partition, go to step 4). For more information about ROFS and CompFS Partition, refer to Chapter 3.2.

1) Open an editor, write as follows, and save it as *.oby. It shows an example to write a file test.oby.

```
rofsname = test.rofs
rofssize = 0x80000
version = 0.01(1000)
file = bin\TechView\epoc32\release\arm4\urel\t_ramstr.exe
\test\t_rofs_ramstr.exe
file = bin\TechView\epoc32\release\arm4\urel\t_fsysbm.exe
\test\t_rofs_fsysbm.exe
```

- 2) Save the file in \$base\e32\rombuild when you finish writing test.oby and close it.
- Go to \$base\e32\rombuild in command prompt, Type the following command, and press an enter key. Then, the image file test.rofs is created.



```
> rofsbuild test.oby
```

Go to \$base\e32\rombuild in command prompt to build the modified ROM image and Type the following command and press the enter key. Then, ROM image is built.

```
rom -v trout -t tshell --build=urel
```

Now, troutarm4.img is created in \$base\e32\rombuild.

Download troutarm4.img to the target and boot it. Then, FAT partition using NAND flash memory is installed I drive.

Remark

From **step 1**) to **step 2**) are optional.

If you use ROFS or CompFS Partition, go to **step 1**).

If you do not use ROFS or CompFS Partition, go to step 4). For more information about ROFS and CompFS Partition, refer to Chapter 3.2.

4.2. Format File System

Go to **i drive**, which UniStore II is installed, in command prompt. Type dir, a command to show the directory of the current position, and press the enter key. Then, the error message is showed as follows.

```
> dir
File or directory not found
```

Type **format**, a command to format a drive, and press the enter key. Then, the drive is formatted as follows.

```
> format i:
```

Type **chkdsk**, a command to check a disk drive, and press the enter key. Then, you can check that the drive has no error as follows.

```
> chkdsk i:
Complete - no errors
```

4) Type dir again and press the enter key. Then, you can check that the device is properly installed, formatted, and worked.



```
> dir
Directory of I:\
   0 Files
   0 Directories
```



Appendix

I. medusii.mmp

The following is the whole source code of medusii.mmp; the real target is TROUT, the emulator is WINS, and the operation system is Symbian. The user-changeable parts and their conditions are described in detail in chapter 3.1.2.

```
// MEDUSII.MMP
11
// MMP for UniStore II
// COPYRIGHT 2003-2006, SAMSUNG ELECTRONICS CO., LTD.
11
OPTION CW -w off
#include <...\variant.mmh>
#include <lm.mmh>
target
              LmTarget(medusii,pdd)
targettype
              pdd
#include "..\..\e32\kernel\kern_ext.mmh"
#define
                 SYMBIAN80B
// Choose Symbian OS
macro
                 SYMOS_OAM
macro
                 REAL_TARGET
// Select OS type ( EKA1 or EKA2 : exclusive )
                 SYMOS_OAM_EKA1
//macro
                 SYMOS_OAM_EKA2
macro
// Select Operation mode (sync or async : exclusive)
//macro SYNC_MODE
                 ASYNC MODE
macro
// En-/Dis-able Debug message of MD, STL, BML
//macro
           MED_DEBUG
//macro
                 STL_DEBUG
//macro
                 BML_DEBUG
//macro
                 LLD_DEBUG
                 OAM_DBGMSG_ENABLE
macro
// Print wearcount of whole blocks in the MediaDriver
//macro
                 CHECK_WEARCOUNT
#undef
                 LLD_EAGLE
#define
                 LLD_ONLD
#undef
                 LLD_DNANDL
#undef
                 LLD_DNANDS
```



#undef LLD S3C2410

SOURCEPATH USIILOC(MD)

SOURCE d_mednand.cpp debug.cpp

SOURCEPATH USIILOC(XSR\OAM\SymOS)

SOURCE SymOSOAM.cpp

SOURCEPATH USIILOC(XSR\Core\STL)

SOURCE GarbageQueue.cpp OpQueue.cpp SectorMap.cpp

STLInterface.cpp VirtualNand.cpp

SamBufMgr.cpp

SOURCEPATH USIILOC(XSR\Core\BML)

SOURCE BadBlkMgr.cpp BMLInterface.cpp SwEcc.cpp

#if defined(LLD_ONLD)

SOURCEPATH USIILOC(XSR\LLD\ONLD)

SOURCE ONLD.cpp

SYSTEMINCLUDE USIILOC(XSR\LLD\ONLD) PAMLOC(OneS)

SOURCEPATH PAMLOC(OneS) SOURCE PAM.cpp

#elif defined(LLD EAGLE)

SOURCEPATH USIILOC(XSR\LLD\Eagle) SOURCE EagleWp.cpp eagle16.cpp

USIILOC(XSR\LLD\Eagle) USIILOC(XSR\INC) SYSTEMINCLUDE

PAMLOC(EagS)

SOURCEPATH PAMLOC (EagS) SOURCE PAM.cpp

#elif defined(LLD_S3C2410)

SOURCEPATH USIILOC(XSR\LLD\S3C2410) S2410Emb.cpp ecc.cpp SOURCE

USIILOC(XSR\LLD\S3C2410) PAMLOC(EmbS) SYSTEMINCLUDE

SOURCEPATH PAMLOC (Embs) SOURCE PAM.cpp

#elif defined(LLD_DNANDL)

SOURCEPATH USIILOC(XSR\LLD\PNL)

SOURCE PNL.cpp

SYSTEMINCLUDE USIILOC(XSR\LLD\PNL) PAMLOC(PNLS)

SOURCEPATH PAMLOC (PNLS) SOURCE PAM.cpp

#elif defined(LLD DNANDS)



SOURCEPATH USIILOC(XSR\LLD\PNS) SOURCE PNS.cpp SYSTEMINCLUDE USIILOC(XSR\LLD\PNS) PAMLOC(PNSS) SOURCEPATH PAMLOC (PNSS) SOURCE PAM.cpp #elif defined(LLD SIM PNS) SOURCEPATH USIILOC(XSR\LLD\PNS) SOURCE PNSsym.cpp SYSTEMINCLUDE USIILOC(XSR\LLD\PNS) PAMLOC(PNSS) SOURCEPATH PAMLOC (PNSS) SOURCE PAM.cpp #elif defined(LLD_SIM_ONLD) SOURCEPATH USIILOC(XSR\LLD\OneNAND) SOURCE ONLDsym.cpp SYSTEMINCLUDE USIILOC(XSR\INC) USIILOC(XSR\LLD\OneNAND) PAMLOC(OneS) SOURCEPATH PAMLOC(OneS) SOURCE PAMsim.cpp #endif SYSTEMINCLUDE USIILOC(XSR\Inc) ..\..\e32\include\drivers ..\..\S3C2440 VariantMediaDefIncludePath systeminclude ekern.lib elocd.lib euser.lib library library VariantTarget(kas3c2440,lib) START WINS WIN32_LIBRARY kernel32.lib

Code A-1. medusii.mmp

EPOCALLOWDLLDATA

capability

UID

Algorithm of NAND Media Driver Interface П.

all

File Server of Symbian OS requests data read/write as a unit of bytes. However, XSR can handle data read/write request as a unit of blocks (sectors). Thus, NAND Media Driver Interface transfers bytes-unit data of File Server to blocks-unit data, and delivers the changed data as a unit of blocks to XSR.

0x100039d0 0x101f9bcf

NAND Media Driver Interface receives information about the buffer from File System, the size of data to handle, the start byte address to read or write data.



The following is examples that Media Driver Interface executes the read/write operation. Each example is categorized into the number of sectors and the read/write operation.

1) Data exists in a sector

We suppose 100bytes data is going to be handled, and the data exists in a sector (512bytes) as follows.

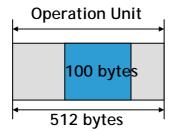


Figure A-1. Data exists in a sector

The following describes the steps that Media Driver Interface executes each read and write operation in order.

Read Operation

- File System gives a command Media Driver Interface to execute the read operation.
- Media Driver Interface finds the start address of data to be read in the sector address of NAND flash memory.
- 3. Media Driver Interface calculates the start address of data in a sector and the size of data to be read. So, it checks 100bytes data exists in a sector of NAND flash memory.
- Media Driver Interface reads 512bytes, a whole sector, and copies it to its own buffer.
- Media Driver Interface copies 100bytes data for the read operation from its own buffer to the system buffer, and return it.

Write Operation

- File System gives a command Media Driver Interface to execute the write operation.
- 2. Media Driver Interface finds the start address of data to be written in the sector address of NAND flash memory.
- 3. Media Driver Interface calculates the start address of data in a sector and the size of data to be written. So it checks 100bytes data exists in a sector of NAND flash memory.



- Media Driver Interface reads 512bytes, a whole sector, and copies it to its own buffer.
- Media Driver Interface updates 100bytes data to be written, copied from the file system, to its own buffer (a buffer that 512bytes data is already copied) at the start address.
- Media Driver Interface writes a whole buffer, 512bytes data, from its own buffer to NAND flash memory, and returns it.

2) Data exists in more than three sectors

We suppose 2000byte data is going to be handled, and the data exists in five sectors (100 bytes + 512 bytes + 512 bytes + 512 bytes + 364 bytes) as follows.

In handling data that exists in more than three sectors; Media Driver Interface handles a set of contiguous 512bytes at a time. In this example, Media Driver Interface handles 512bytes * 3 sectors at once.

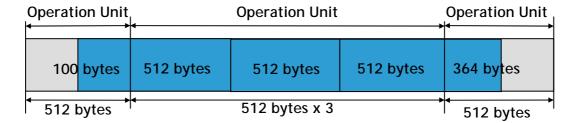


Figure A-2. Data exists in more than three sectors

The following describes the steps that Media Driver Interface executes each read and write operation in order.

Read Operation

- File System gives a command Media Driver Interface to execute the read operation.
- Media Driver Interface finds the start address of data to be read in the sector address of NAND flash memory.
- Media Driver Interface calculates the start address of data in a sector and the size of data to be read. So, it checks 2000bytes data exists in five sectors of NAND flash memory as 100bytes + 512bytes + 512bytes + 512bytes + 364bytes.
- Media Driver Interface reads first 512bytes, a whole sector, and copies it to its own buffer.
- Media Driver Interface copies 100bytes data for the read operation from its own buffer to the system. Media Driver Interface reads 100bytes data from the start address in a sector to



the end of the sector, and then finds that only 100bytes are read. Media Driver Interface notifies the file system that it read 100bytes data, and returns it.

File System again gives a command Media Driver Interface to execute it to its own buffer.

Note

In reading or writing data of sector that is full, Media Driver Interface does not copy the sector to its own buffer. Data of one or more contiguous sectors can be read or written as it is; the whole untouched sectors are read or written. Media Driver Interface does nothing, and sends the address of the full-of-data and contiguous sectors (received from the file system) to the lower layer, XSR (especially STL). Then, STL reads or writes data as a set of the sector.

If there is no contiguous sectors, Media Driver Interface skips from step 7) to step 9), and go to step 10).

- Media Driver Interface sends the address of the contiguous sectors to be read, from the second sector to the fourth sector, to the lower layer XSR (especially STL).
 - XSR (especially STL) reads the whole sectors corresponding to the address received from Media Driver Interface.
- **8.** Media Driver Interface notifies the file system that it reads 1536bytes (512bytes * 3) data from the second sector to the fourth sector, and returns it.
- 9. File System again gives a command Media Driver Interface to execute it to its own buffer.
- 10. Media Driver Interface reads 512bytes of the fifth sector, a whole sector, and copies it to its own buffer.
- 11. Media Driver Interface copies 364bytes data (the left data to be read) for the read operation from its own buffer to the system buffer. Media Driver Interface notifies the file system that it reads 364bytes data, so totally 2000bytes, and returns it.

Write Operation

- File System gives a command Media Driver Interface to execute the write operation.
- Media Driver Interface finds the start address of data to be written in the sector address of NAND flash memory.
- 3. Media Driver Interface calculates the start address of data in a sector and the size of data to be written. So, it checks 2000 bytes data exists in five sectors of NAND flash memory as 100bytes + 512bytes + 512bytes + 512bytes + 364 ytes.
- Media Driver Interface reads first 512bytes, a whole sector, and copies it to its own buffer.



- 5. Media Driver Interface updates 100bytes data to be written, copied from the file system, to its own buffer (a buffer that 512bytes data is already copied) at the start address.
- Media Driver Interface writes a whole buffer, 512bytes, from its own buffer to NAND flash memory. Media Driver Interface Writes 100bytes data from the start address in a sector to the end of the sector, and then finds that only 100bytes are written. Media Driver Interface notifies the file system that it writes 100bytes data, and returns it.
- File System again gives a command Media Driver Interface to execute the write operation.

Note

In reading or writing data of sector that is full, Media Driver Interface does not copy the sector to its own buffer. Data of one or more contiguous sectors can be read or written as it is; the whole untouched sectors are read or written. Media Driver Interface does nothing, and sends the address of the full-of-data and contiguous sectors (received from the file system) to the lower layer, XSR (especially, STL). Then, STL reads or writes data as a set of the sector.

If there is no contiguous sectors, Media Driver Interface skips from step 8) to step 10), and go to step 11).

- Media Driver Interface sends the address of contiguous sectors to be written, from the second sector to the fourth sector, to the lower layer XSR (especially
 - XSR (especially STL) reads the whole sectors corresponding to the address received from Media Driver Interface.
- Media Driver Interface notifies the file system that it writes 1536bytes (512bytes * 3) from the second sector to the fourth sector, and returns it.
- 10. File System again gives a command Media Driver Interface to execute it to its own buffer.
- 11. Media Driver Interface reads 512bytes of the fifth sector, a whole sector, and copies to its own buffer.
- 12. Media Driver Interface updates 364bytes data to be write, copied from the file system, to its own buffer (a buffer that 512bytes data is already copied) at the start of the next sector.
- 13. Media Drive writes a whole buffer, 512bytes data, from its own buffer to NAND flash memory. Media Driver Interface notifies the file system that is writes 364bytes, so totally 2000bytes, and returns it.

Such as last example, Media Driver Interface can cut the data into three pieces at maximum. In handling data of the whole sectors, Media Driver Interface manages a set of 512bytes contiguous sectors at once. Therefore, although the size of data is huge, data can be cut as three pieces as (X + 512byte * Y + Z).