

TauDEM 5.3

**QUICK START GUIDE TO USING THE TAUDEM
ARCGIS TOOLBOX**

October 2015

David G. Tarboton
Nazmus Sazib
Pabitra Dash

QUICK START

Purpose

The purpose of this document is to introduce Hydrologic Terrain Analysis in ArcGIS using the TauDEM toolbox. This guide is not intended to be comprehensive in documenting the use and functionality of TauDEM. Rather it is intended as a brief introduction to guide a reader through the initial steps of installing TauDEM obtaining data and running some of the more important functions required to delineate a stream network. Comprehensive documentation on the use of each TauDEM function is given in the online help that is part of the program (that will be introduced in this quick start guide).

TauDEM (Terrain Analysis Using Digital Elevation Models) is a set of Digital Elevation Model (DEM) tools for the extraction and analysis of hydrologic information from topography as represented by a DEM. This is software developed at Utah State University (USU) for hydrologic digital elevation model analysis and watershed delineation and may be obtained from <http://hydrology.usu.edu/taudem/taudem5.0/>.

In this guide, you will perform the following tasks:

- TauDEM Installation
- Basic Grid Analysis using TauDEM functions, including.
 - Pit Remove
 - D8 Flow Directions
 - D8 Contributing Area
 - Grid Network
 - D-Infinity flow direction
 - D-infinity Contributing Area
- Stream Network Analysis using TauDEM functions, including
 - Stream Definition by threshold
 - Move Outlets to Streams
 - Stream Reach and Watershed
 - Peuker Douglas
 - Peuker Douglas Stream Definition
- Specialized Grid Analysis using TauDEM functions, including
 - D-Infinity Distance Down
 - D-Infinity Distance Up
- Basic Grid Analysis using TauDEM functions, for geographic coordinate data including.
 - Pit Remove
 - D8 Flow Directions

The Cub River watershed draining to USGS streamflow gauge #100096000 located just north of Preston, Idaho is used as an example. The Eno River watershed located in Durham, North Carolina is also used as an example for the geographic coordinate data.

Computer and Data Requirements

To complete this guide, you will need to use ArcGIS 10.2.2 or higher, the TauDEM 5.3. Our current Windows PC precompiled executables have been compiled using the Microsoft HPC Pack 2012 MS-MPI libraries from <http://www.microsoft.com/en-us/download/details.aspx?id=36045>. Earlier versions used MPICH2 from <http://www.mcs.anl.gov/research/projects/mpich2/>. The ArcGIS software should be installed on your computer prior to starting this quick start guide, but we detail the steps involved in installing TauDEM and MPI libraries.

TauDEM 5.3 Installation

TauDEM 5.3 needs to be installed using the TauDEM53_setup.exe program. This setup application can install TauDEM both on Windows 32-bit and 64-bit computers. Download this setup program from (**TODO**: provide the link here).

TauDEM setup program will install the following applications and libraries:

- TauDEM version 5.3
- GDAL 111 (MSVC 2010 Win64): *Only on x64 computers*
- GDAL 111 (MSVC 2010): *Only on x86 computers*
- Microsoft Visual C++ 2010 x64 Redistributable: *Only on x64 computers*
- Microsoft Visual C++ 2010 x86 Redistributable
- Microsoft HPC Pack 2012 MS-MPI Redistributable Pack

By default, TauDEM will be installed at C:\Program Files\TauDEM. GDAL related libraries will be installed at C:\GDAL. GDAL application will be installed at C:\Program Files\GDAL. MS HPC Pack will be installed at C:\Program Files\Microsoft HPC Pack 2012.


NOTE: If you have previously installed TauDEM 5.3, you need to first uninstall TauDEM and GDAL 111. You don't need to uninstall other TauDEM dependencies.

Requirements for TauDEM ArcGIS Tools:


In order to be able to use TauDEM ArcGIS Tools, ArcGIS 10.2 or higher version must be installed.

Procedure for Installing TauDEM:


1. Run (double click) TauDEM53_setup.exe which should show the following installation startup window.

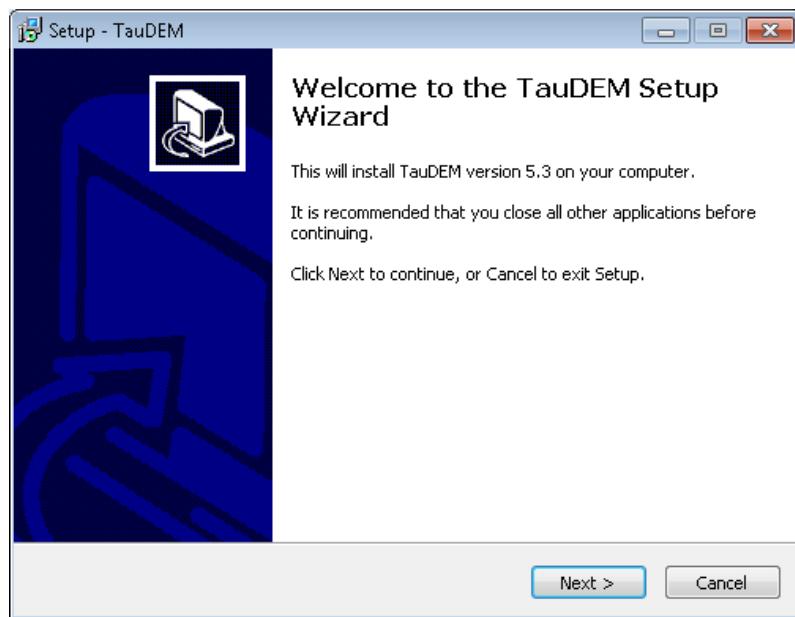


2. At the above window click on “Next” button which should show the following window.

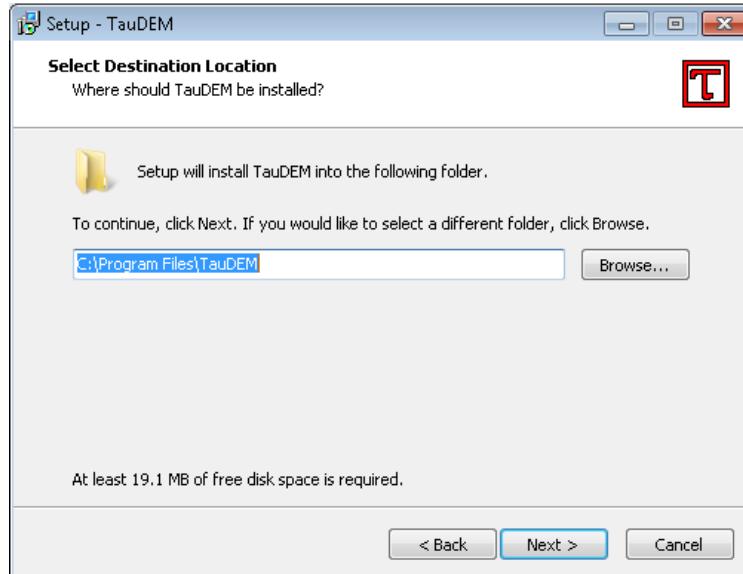


3. At the above window click on “Next” which should show the following window.

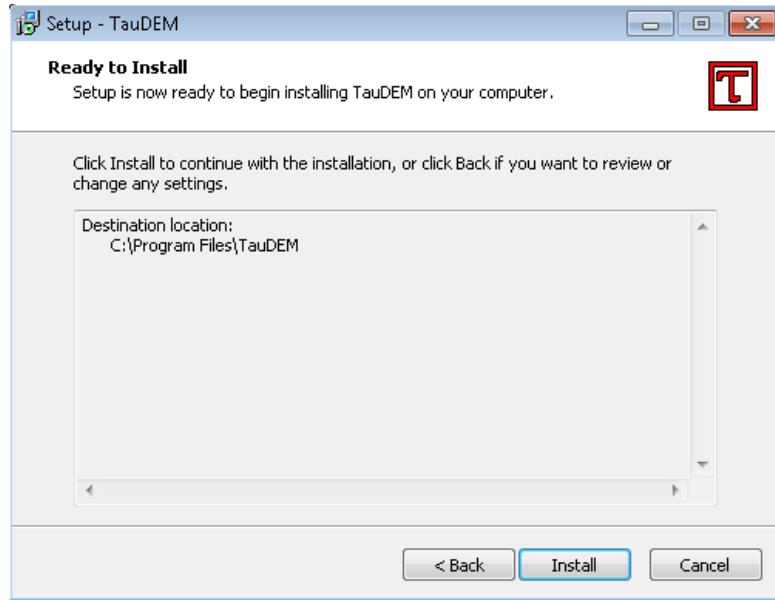


4. At the above window, click on the “Install” button to start the installation process. This will copy the TauDEM executables, TauDEM ArcGIS Tools related python files and all installer applications that TauDEM depends on. After TauDEM is installed, its dependencies will be installed. As shown below GDAL will be installed first.

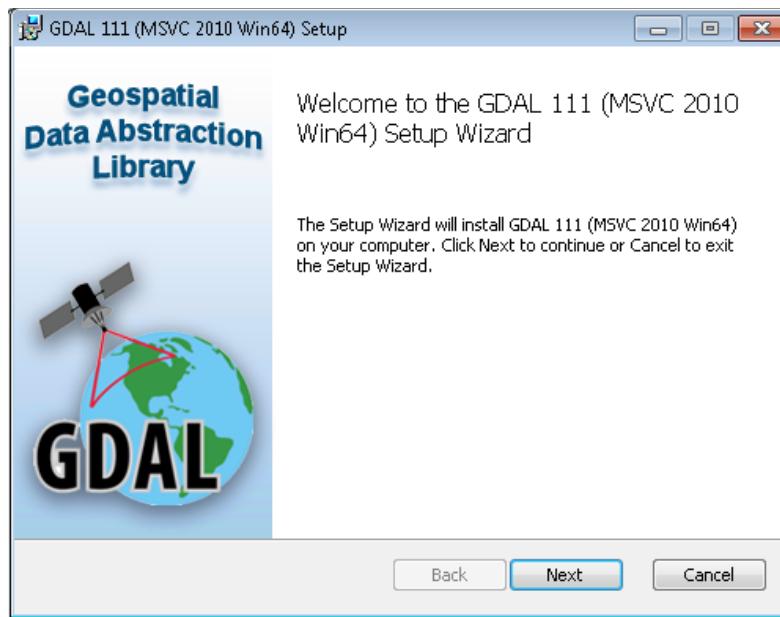


5. The above window shows that we are installing the 64bit of GDAL (which means we are running the TauDEM installer on a windows 64-bit machine). In case of 32-bit installation the above window title should show “GDAL 111 (MSVC 2010) Setup”. Click the “Next” button to see the following window.

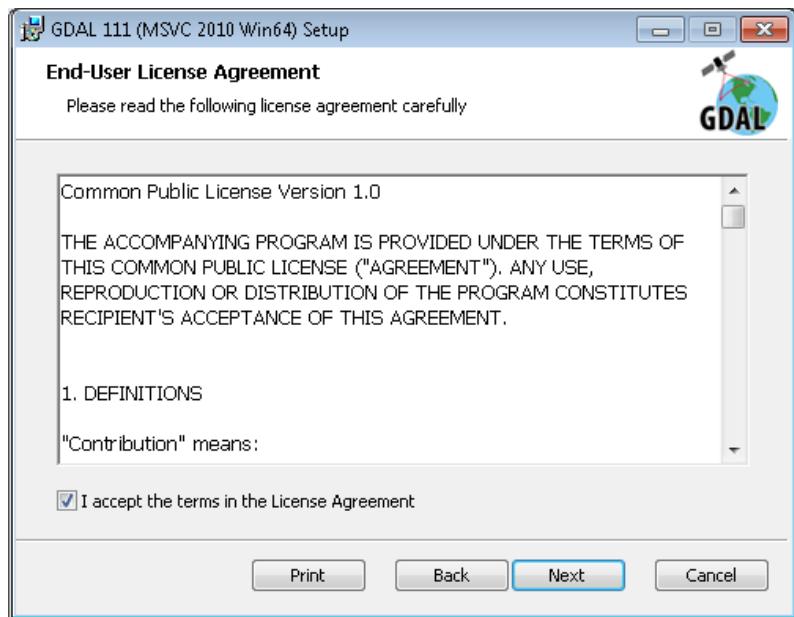


6. At the above window, select the checkbox to agree to the license agreement and then click on "Next". Then you should see the following window.

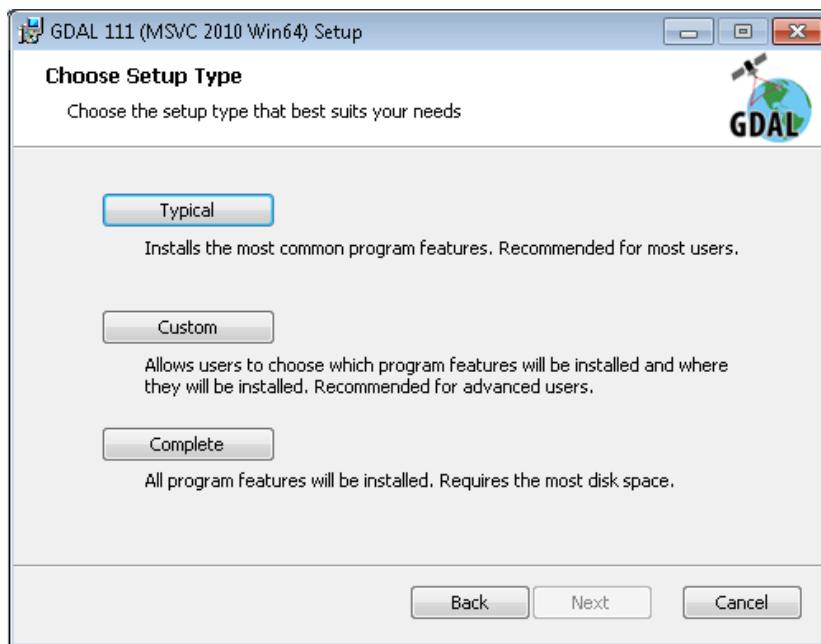


7. At the above window, click on the "Typical" button and you should see the following window.

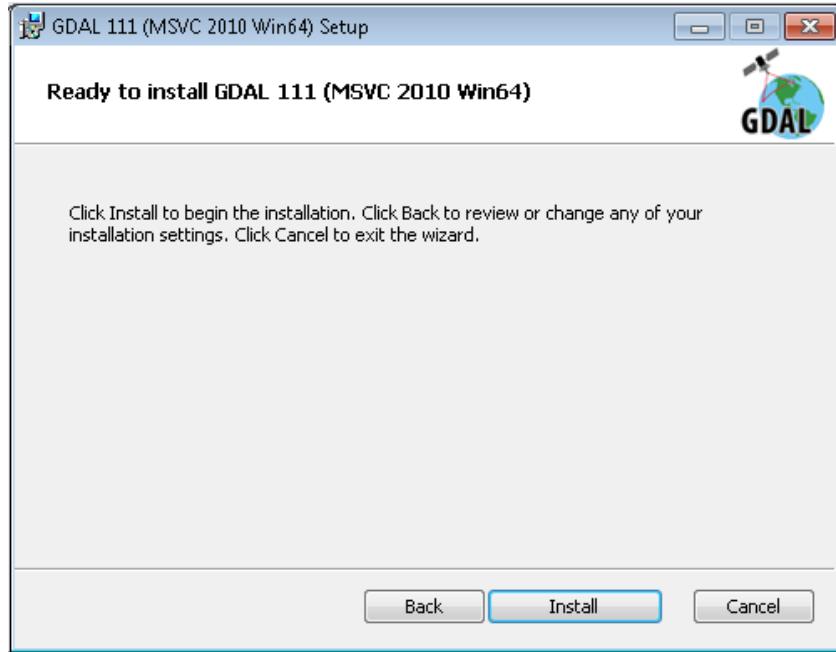


8. At the above window select the “Install” button to start installation of GDAL. When installation is done, you should see the following window.

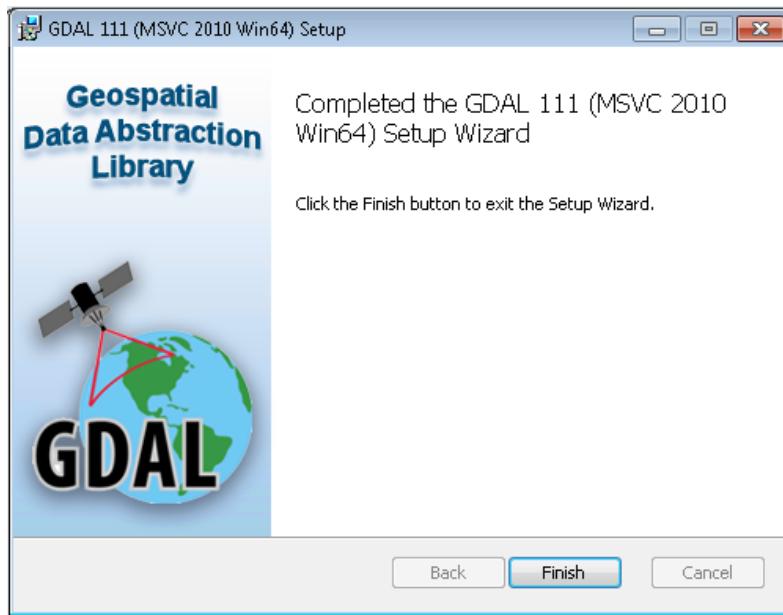


9. At the above window, click on the “Finish” button to finish installing GDAL. At this point the installation of MS C++ 2010 x86 Redistributable will start as shown below. The installation of this redistributable will occur only if your computer does not already have it installed.

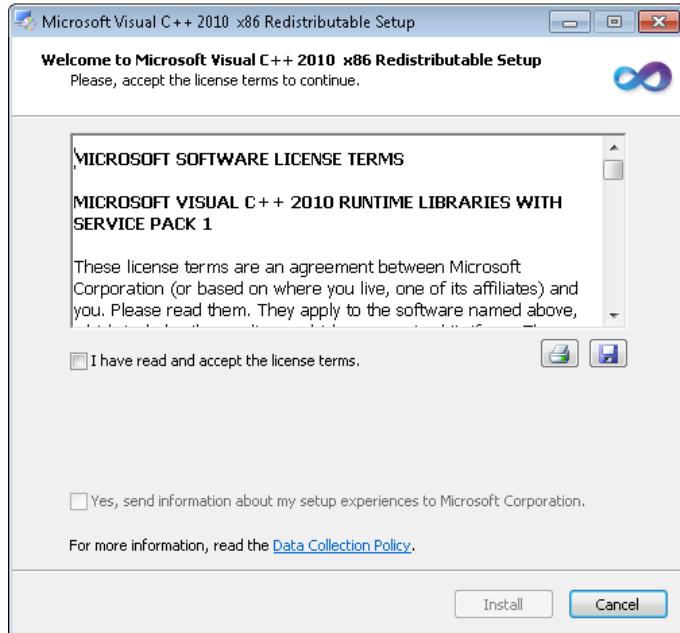


10. At the above window, select the checkbox to agree to the license agreement and then click on “Install” button to start the installation process. When installation of this redistributable finishes you should see the following window.

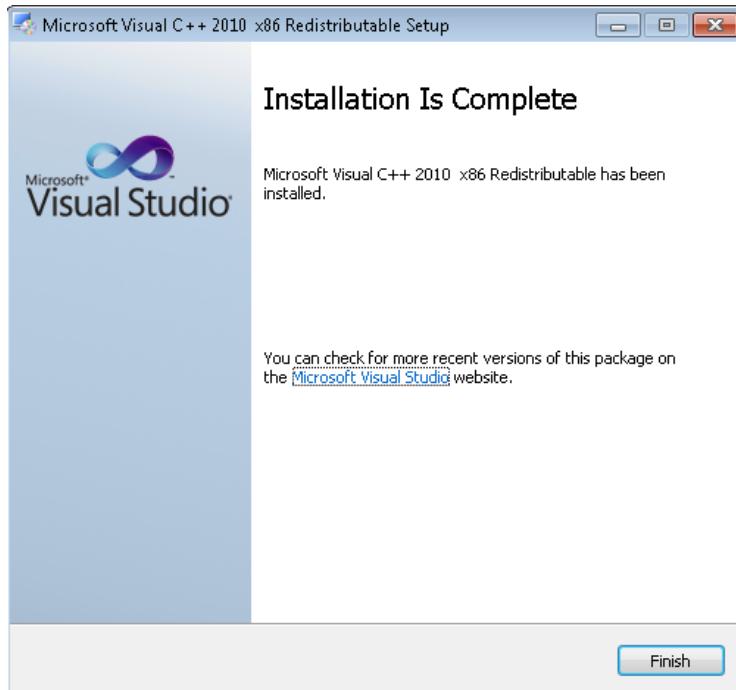

11. At the above window, click on “Finish” button. If you are running the TauDEM setup program on a 64-bit computer that does not already have the MS C++ 2010 x64 Redistributable installed, you should see the following window for installing MS C++ 2010 x64 Redistributable.

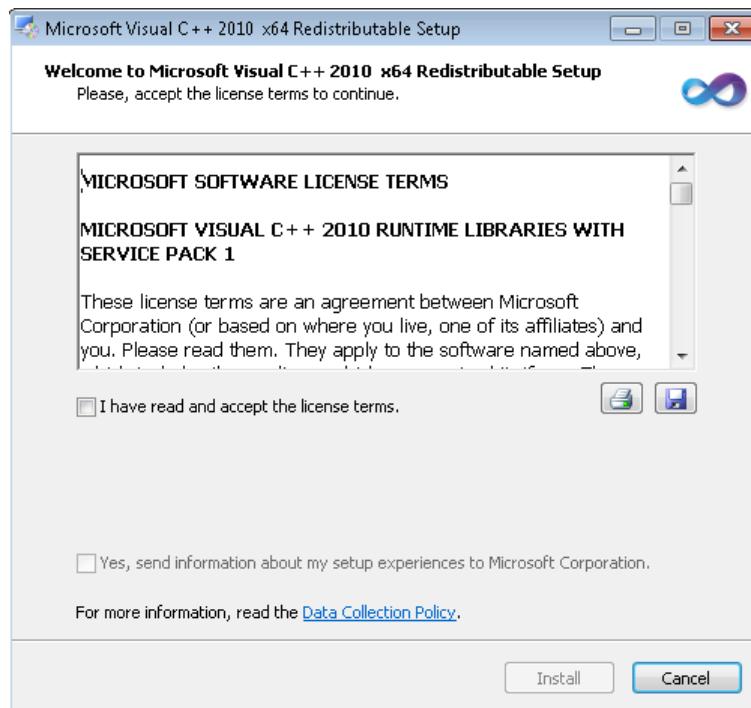


12. At the above window, select the checkbox to agree to the license agreement and then click on the “Install” button to start the installation process. When installation of this redistributable finishes you should see the following window.

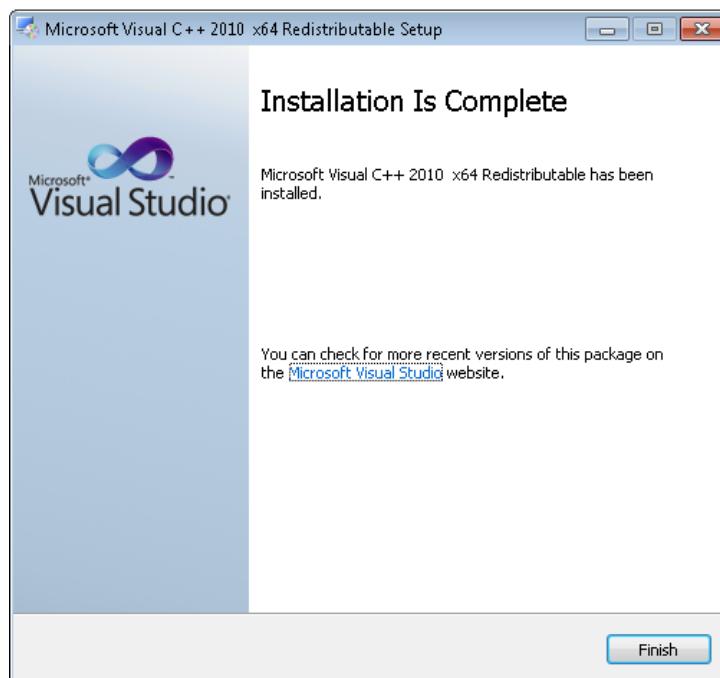


13. At the above window, click on the “Finish” button. If your computer doesn’t already have the MS HPC Pack 2012 MS-MPI Redistributable installed, you should see the following window to install that.




14. At the above window, click on the “Next” button. This should show you the following window.

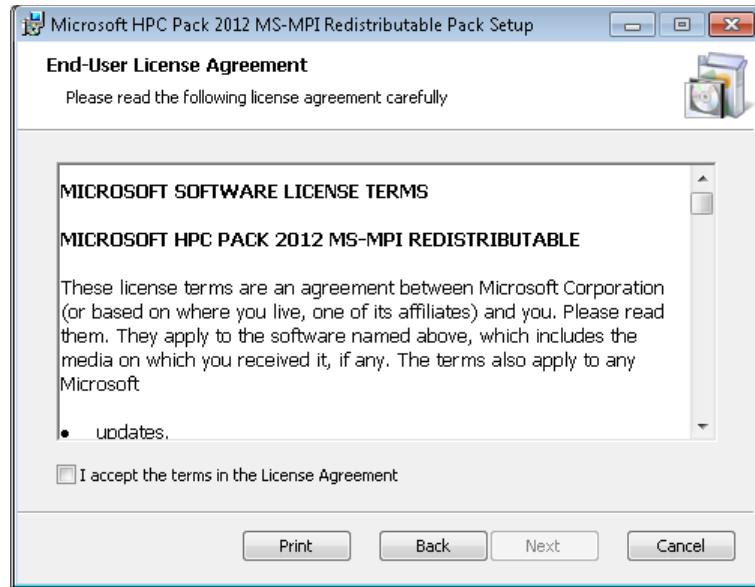


15. At the above window, select the checkbox to agree the license agreement and then click the “Next” button. Now you should see the following window.

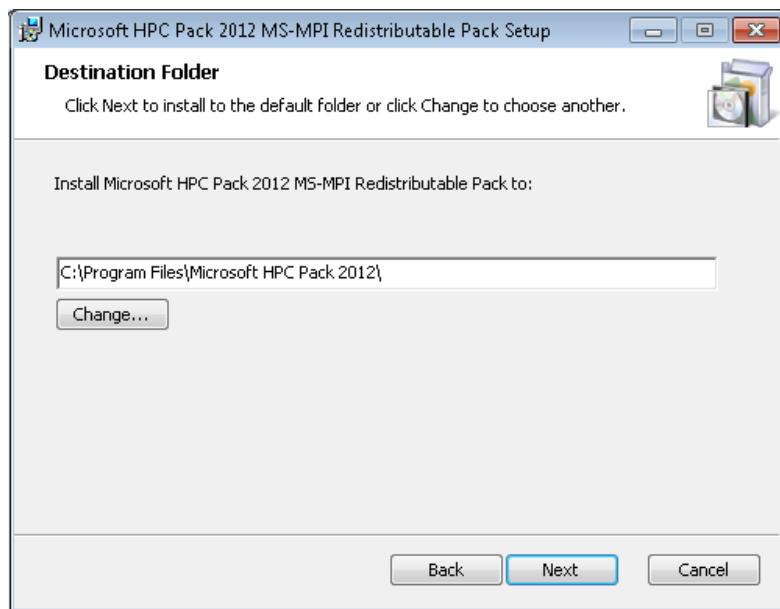


16. At the above window, click on the “Next” button to see the following window.

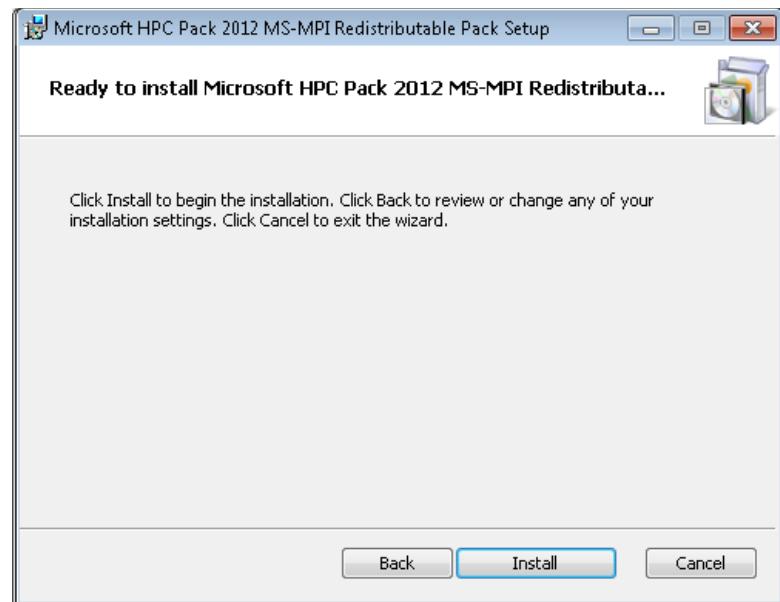

17. At the above window, click on the “Install” button to start the installation process. When installation finishes, you should see the following window.

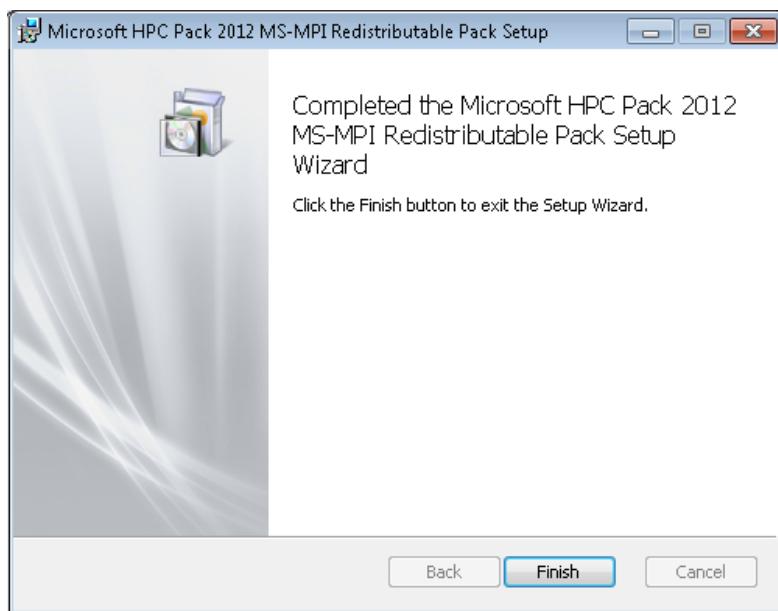

18. At the above window, click on the “Finish” button. At this point, TauDEM setup program will run a batch file to set the firewall settings for the TauDEM executables. You should see a console window for a short time as a result of running the batch file. When all install is complete, you should see the following window.

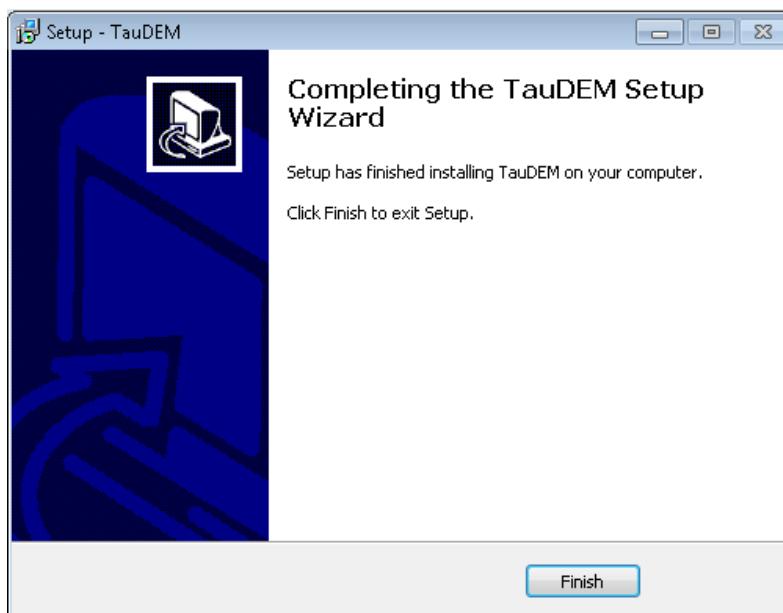

19. At the above window, click on the “Finish” to finish installation of TauDEM. At this point you have successfully installed TauDEM 5.3.

Activate the TauDEM Toolbox in ArcGIS:


- Open ArcMap/ArcCatalog. If the ArcToolbox Window is not open, click on the "Show/Hide ArcToolbox Window" icon in the Standard Toolbar.
- Right click on ArcToolbox at the top of the window. Select Add Toolbox.
- Browse to the TauDEM install directory (by default, this is: C:\Program Files\TauDEM\TauDEM5Arc).
- Click on the **TauDEM Tools.tbx** file, and click Open.

The TauDEM Toolbox should now be visible in the list of toolboxes.

NOTE: Activation of TauDEM ArcGIS Tools is only needed if you want to run TauDEM functionality from within ArcGIS.

The TauDEM Toolbox should now be visible in the list of toolboxes.


If you wish to save this configuration, right click on ArcToolbox, select Save to Default. This needs to be done for each user who wishes to use TauDEM. See below how we added TauDEM tools to Arc Toolbox:

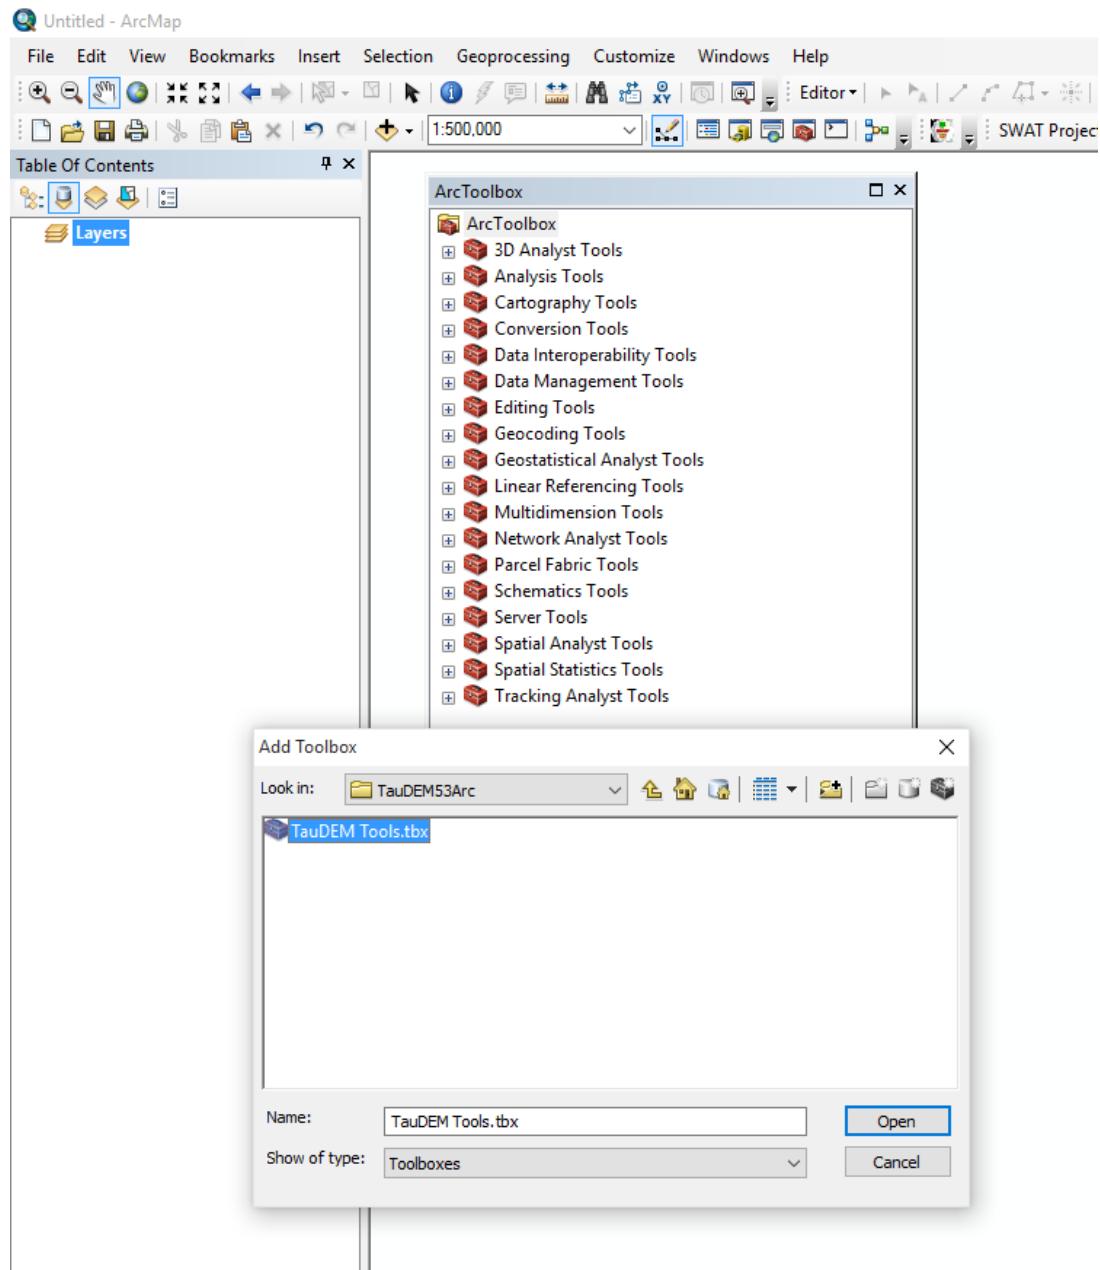


Basic Grid Analysis using TauDEM functions

In this section we illustrate the TauDEM basic grid analysis functions. We start with a DEM in ESRI grid format and lead you through the steps of running the necessary TauDEM commands.


1. Download the Cub River example data zip file from <http://hydrology.usu.edu/taudem/taudem5>. Extract all files from the zip file and load cubdem into ArcMAP. This data was obtained from the National Elevation Dataset seamless data server.

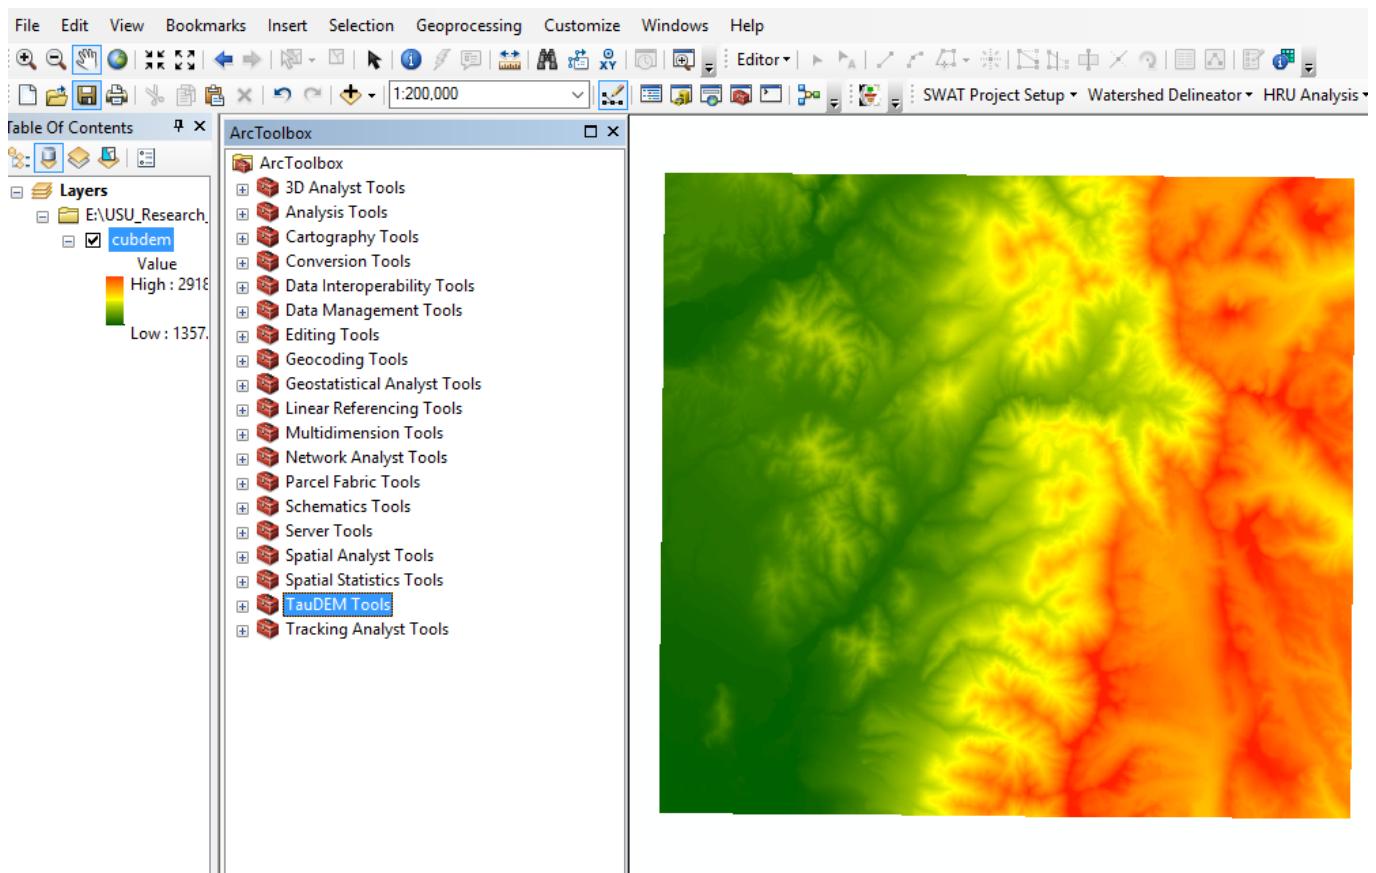


2. TauDEM 5.3 read all raster data that supported by GDAL (e.g. tiff, ESRI grid, and img) but writes in tiff format. The first TauDEM function used is **Pit Remove**. Pits are grid cells surrounded by higher terrain that do not drain. Pit Remove creates a hydrologically correct DEM by raising the elevation of pits to the point where they overflow their confining pour point and can drain to the edge of the domain. Open (by double clicking on) the TauDEM Pit Remove Tool (in the Basic Grid Analysis) set.

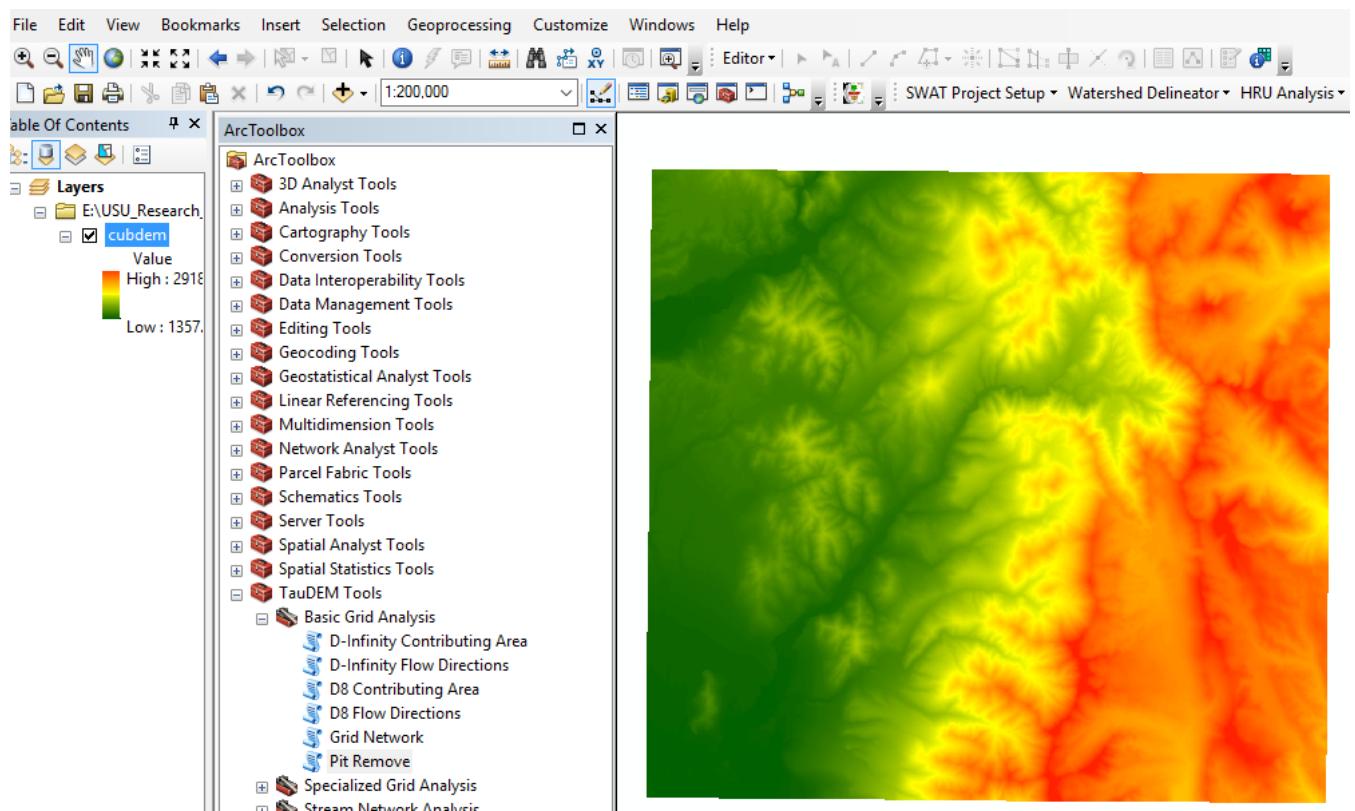




- At the Pit Remove Tool dialog select Show Help to expand the embedded function help information.

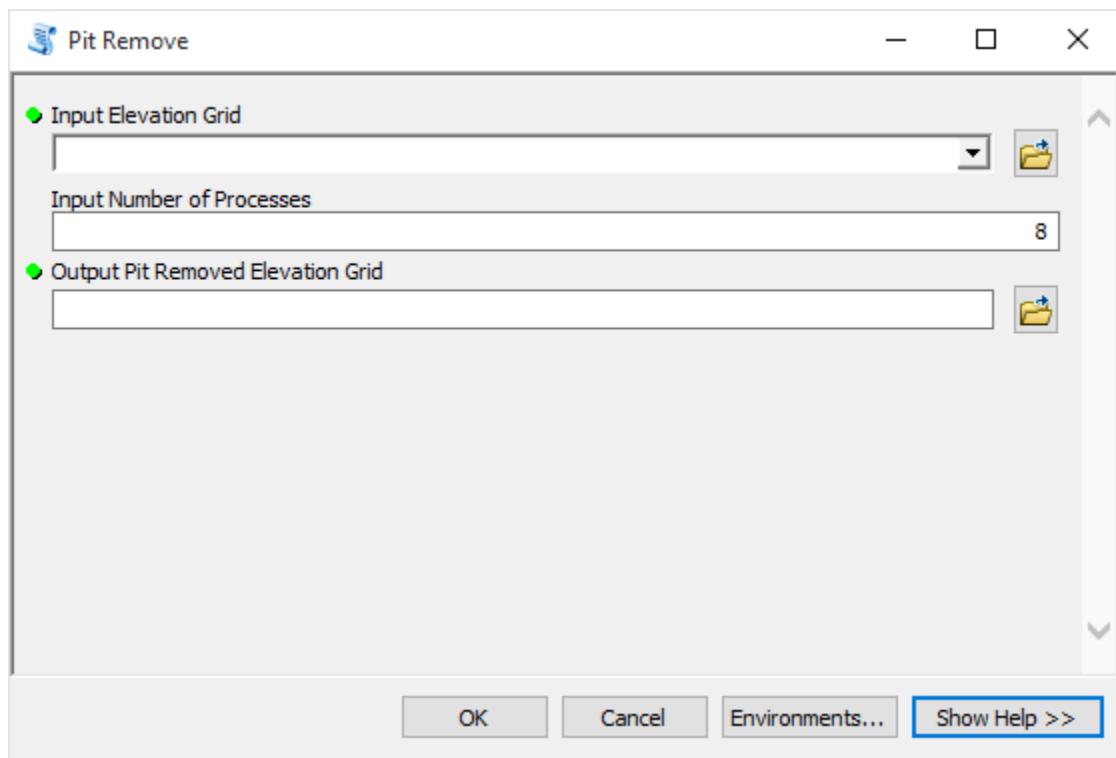

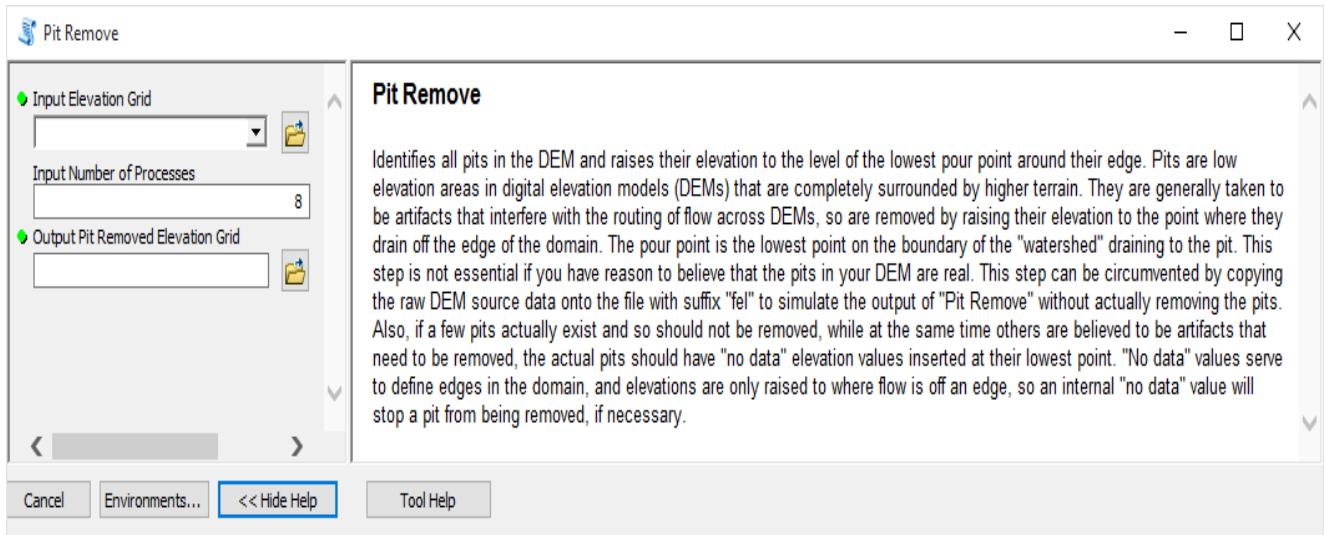

4. Click within each input field to obtain embedded context sensitive help for each input.

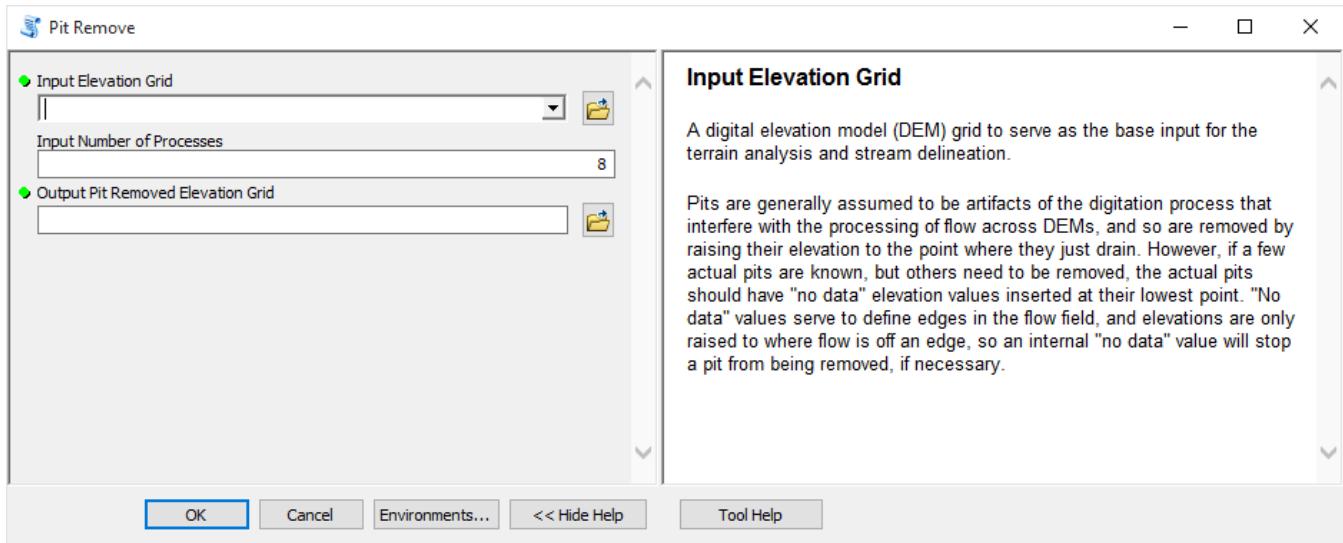

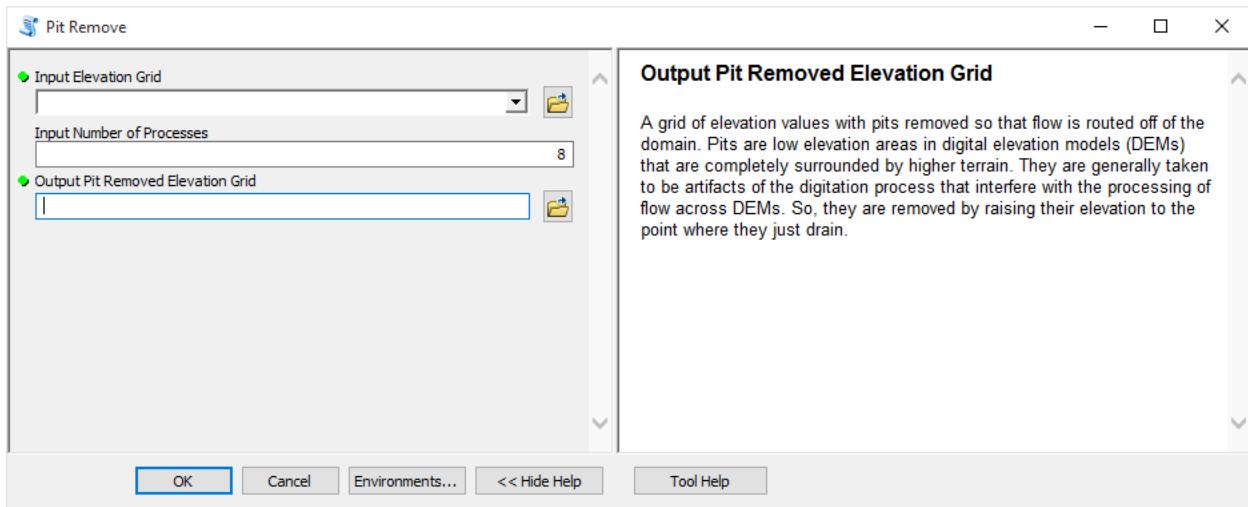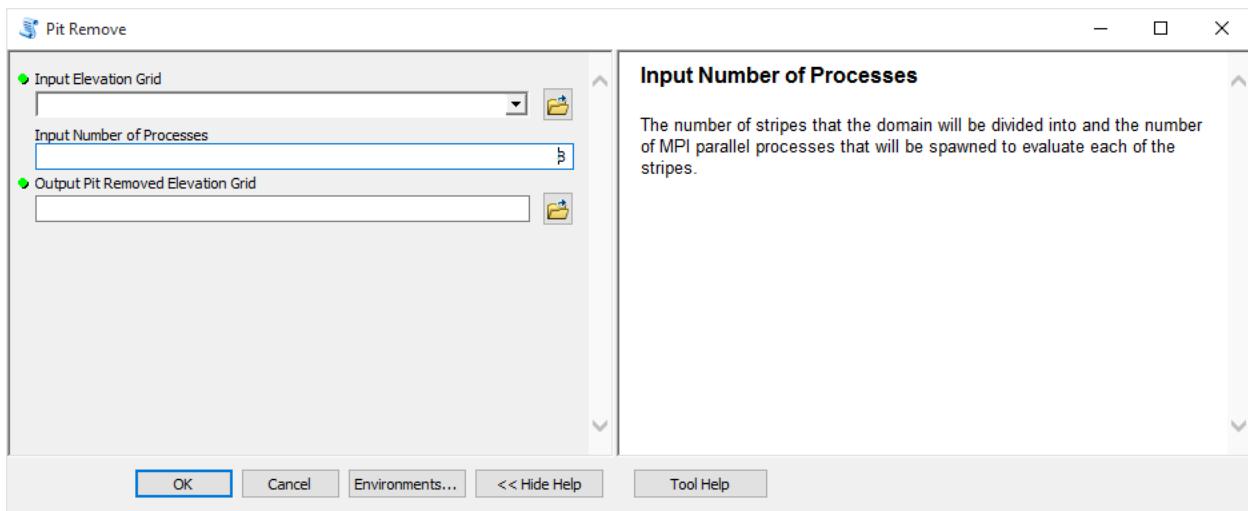

5. Click on Tool Help at the bottom to open the more detailed compiled help file included with the system

Pit Remove

Title Pit Remove

Summary

Identifies all pits in the DEM and raises their elevation to the level of the lowest pour point around their edge. Pits are low elevation areas in digital elevation models (DEMs) that are completely surrounded by higher terrain. They are generally taken to be artifacts that interfere with the routing of flow across DEMs, so are removed by raising their elevation to the point where they drain off the edge of the domain. The pour point is the lowest point on the boundary of the "watershed" draining to the pit. This step is not essential if you have reason to believe that the pits in your DEM are real. This step can be circumvented by copying the raw DEM source data onto the file with suffix ".fel" to simulate the output of "Pit Remove" without actually removing the pits. Also, if a few pits actually exist and so should not be removed, while at the same time others are believed to be artifacts that need to be removed, the actual pits should have "no data" elevation values inserted at their lowest point. "No data" values serve to define edges in the domain, and elevations are only raised to where flow is off an edge, so an internal "no data" value will stop a pit from being removed, if necessary.

Usage

There is no usage for this tool.


Syntax

PitRemove (Input_Elev, Input_Number_of_Processes, Output_Pit_Removed_Elevation_Grid)

Parameter	Explanation	Data Type
Input Elev	<p>Dialog Reference</p> <p>A digital elevation model (DEM) grid to serve as the base input for the terrain analysis and stream delineation.</p> <p>Pits are generally assumed to be artifacts of the digitization process that interfere with the processing of flow across DEMs, and so are removed by raising their elevation to the point where they just drain. However, if a few actual pits are known, but others need to be removed, the actual pits should have "no data" elevation values inserted at their lowest point. "No data" values serve to define edges in the flow field, and elevations are only raised to where flow is off an edge, so an internal "no data" value will stop a pit from being removed, if necessary.</p> <p>There is no python reference for this parameter.</p>	Raster Layer
Input_Number_of_Processes	<p>Dialog Reference</p> <p>The number of stripes that the domain will be divided into and the number of MPI parallel processes that will be spawned to evaluate each of the stripes.</p> <p>There is no python reference for this parameter.</p>	Long
Output_Pit_Removed_Elevation_Grid	<p>Dialog Reference</p> <p>A grid of elevation values with pits removed so that flow is routed off of the domain. Pits are low elevation areas in digital elevation models (DEMs) that are completely surrounded by higher terrain. They are generally taken to be artifacts of the digitization process that interfere with the processing of flow across DEMs. So, they are removed by raising their elevation to the point where they just drain.</p> <p>There is no python reference for this parameter.</p>	Raster Dataset


6. This TauDEM tools help contains an overview of the tools, data formats used and file naming conventions suggested for working with TauDEM. There is a detailed description of the functionality and parameters of each function. The tools are configured to, by default assign output file names following the naming convention given here. You do not have to use these names, but it is strongly recommended to aid in keeping track of the results.

- Select **cubdem** for the Input Elevation Grid. Note that the Output Pit Removed Elevation Grid is automatically filled with cubdemfel.tif following the file naming convention. Select the Input Number of Processes (I used 8 for a dual quad core PC). Notice that input elevation (cubdem) is in ESRI grid but output Pitremove file (cubdemfel) is in tif format.

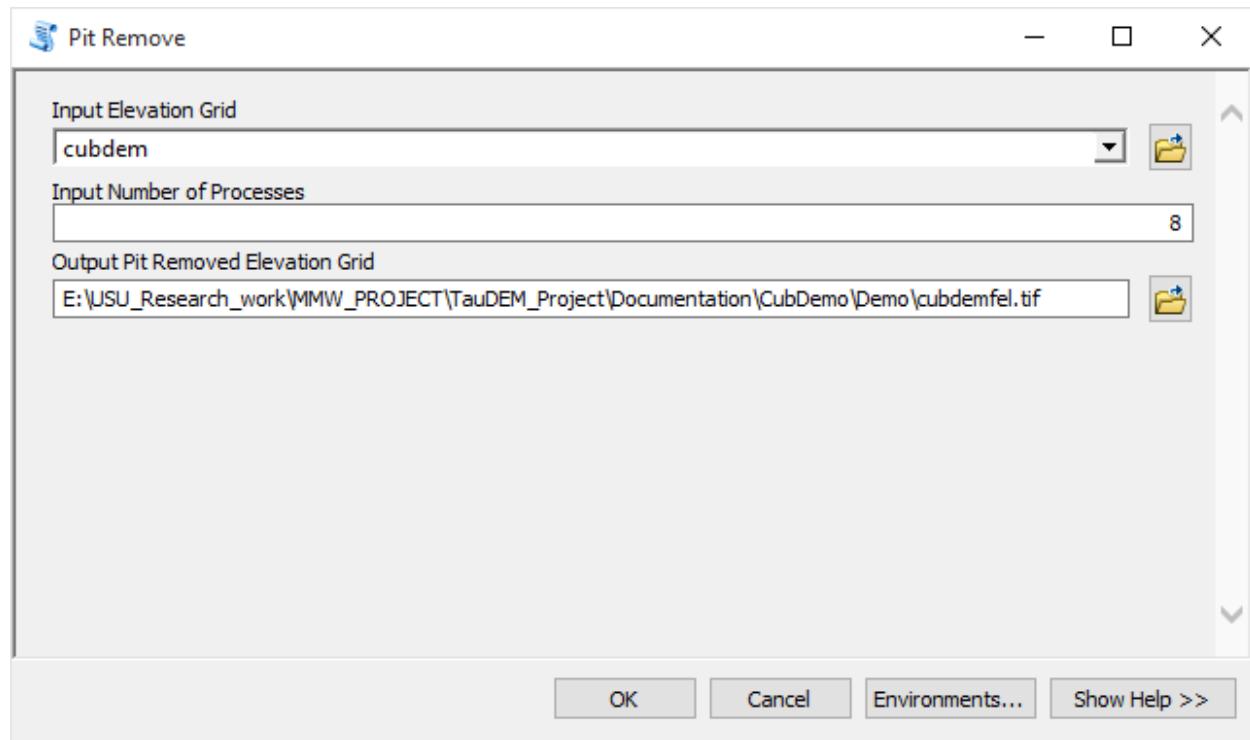

The parallel approach used by TauDEM is illustrated below. The domain is subdivided into row oriented partitions that are each processed independently by separate processes. When the algorithms reach a point where they can proceed no further within the partitions there is a swap step that exchanges information along the boundaries. The algorithms then proceed working within the partitions using new boundary information. This process is iterated until completion. The strategies for sharing information across boundaries and iterating are specific to each algorithm.


TauDEM parallel scheme

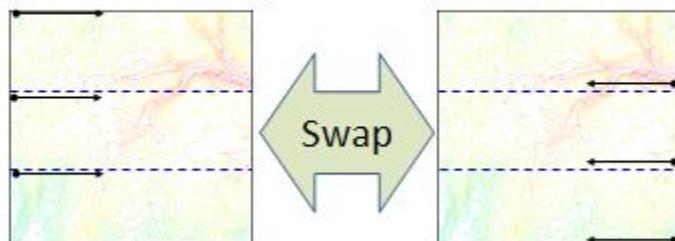

The number of processes does not have to be the same as the number of processors on your computer, although generally should be the same order of magnitude. The operating system (and MPI) takes care

of time sharing between processes, so in cases where some processes are likely to be waiting for other processes to complete there may be a benefit in selecting more processes than physical processors on the computer. However, message passing across the borders are increased. For large datasets, some experimentation as to the number of processes that works best (fastest) is suggested.

8. Click OK on the Pit Remove tool to run the Pit Remove function for the cub river DEM. The output dialog reports run statistics that include timing, as well as any error or warning messages.

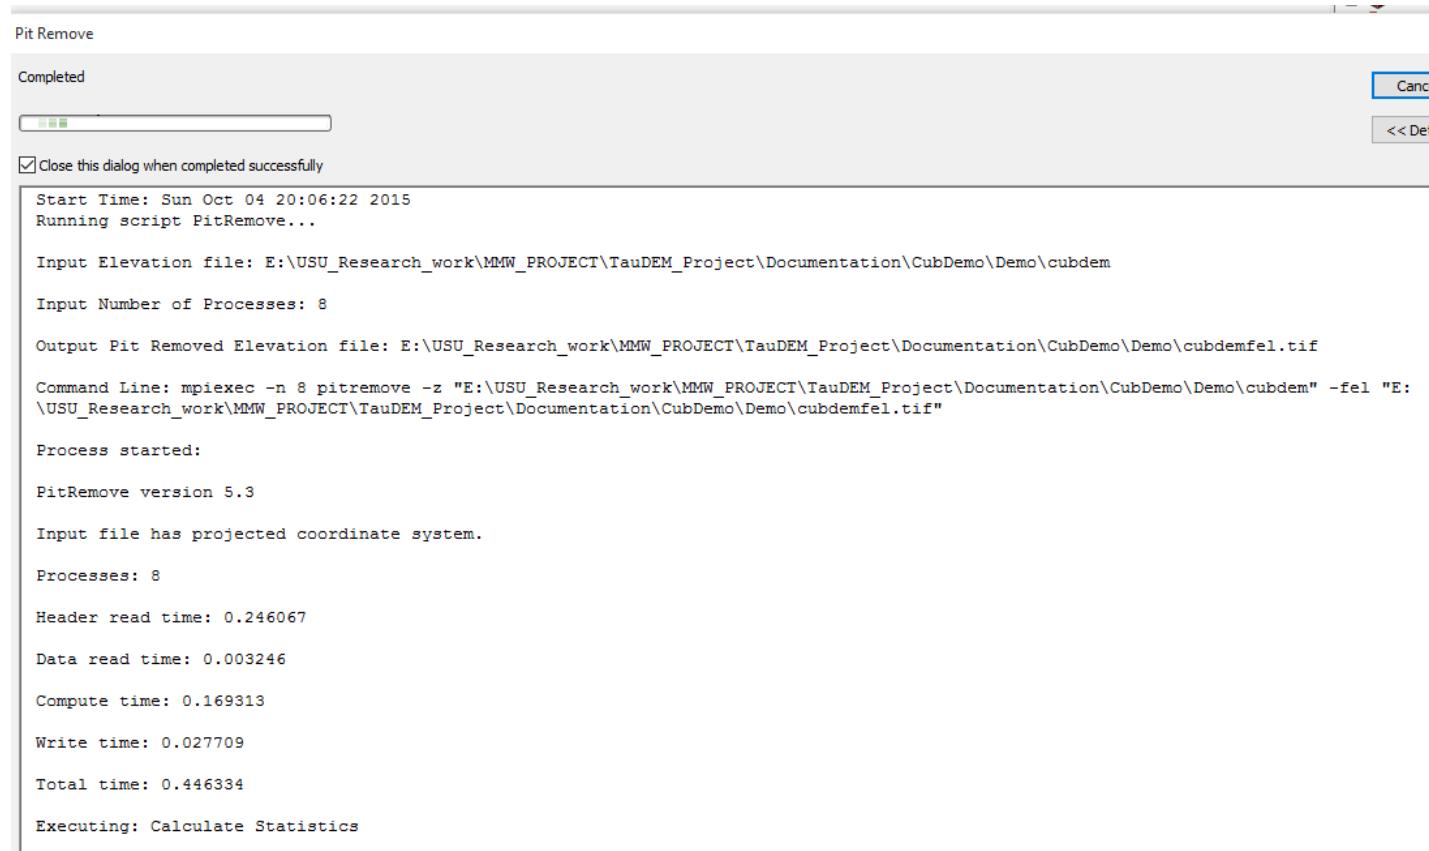


The screenshot shows the 'Pit Remove' dialog box with the following details:


- Header: Pit Remove
- Status: Completed
- Progress Bar: Shows progress at approximately 10% completion.
- Checkboxes:
 - Close this dialog when completed successfully
- Text Log:
 - Start Time: Sun Oct 04 20:06:22 2015
 - Running script PitRemove...
 - Input Elevation file: E:\USU_Research_work\MMW_PROJECT\TauDEM_Project\Documentation\CubDemo\Demo\cubdem
 - Input Number of Processes: 8
 - Output Pit Removed Elevation file: E:\USU_Research_work\MMW_PROJECT\TauDEM_Project\Documentation\CubDemo\Demo\cubdemfel.tif
 - Command Line: mpiexec -n 8 pitremove -z "E:\USU_Research_work\MMW_PROJECT\TauDEM_Project\Documentation\CubDemo\Demo\cubdem" -fel "E:\USU_Research_work\MMW_PROJECT\TauDEM_Project\Documentation\CubDemo\Demo\cubdemfel.tif"
 - Process started:
 - PitRemove version 5.3
 - Input file has projected coordinate system.
 - Processes: 8
 - Header read time: 0.246067
 - Data read time: 0.003246
 - Compute time: 0.169313
 - Write time: 0.027709
 - Total time: 0.446334
 - Executing: Calculate Statistics
- Buttons: Cancel, << Det

Note also in this output that timing information is reported for this run. In this case the largest amount of time was actually reading the header of the input grid.


9. The next function to run is **D8 Flow Direction**. This takes as input the hydrologically correct elevation grid and outputs D8 flow direction and slope for each grid cell.

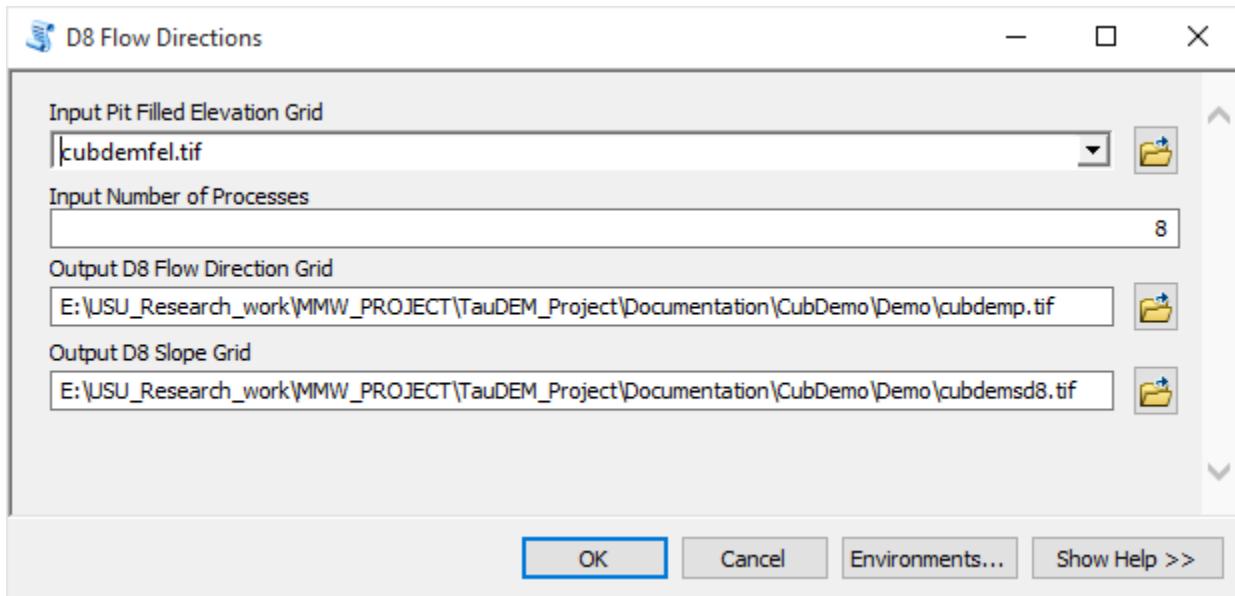


The resulting D8 flow direction grid (grid has suffix p) is illustrated. This is an encoding of the direction of steepest descent from each grid cell using the numbers 1 to 8 per the embedded help above. This is the simplest model of the direction water would flow over the terrain.

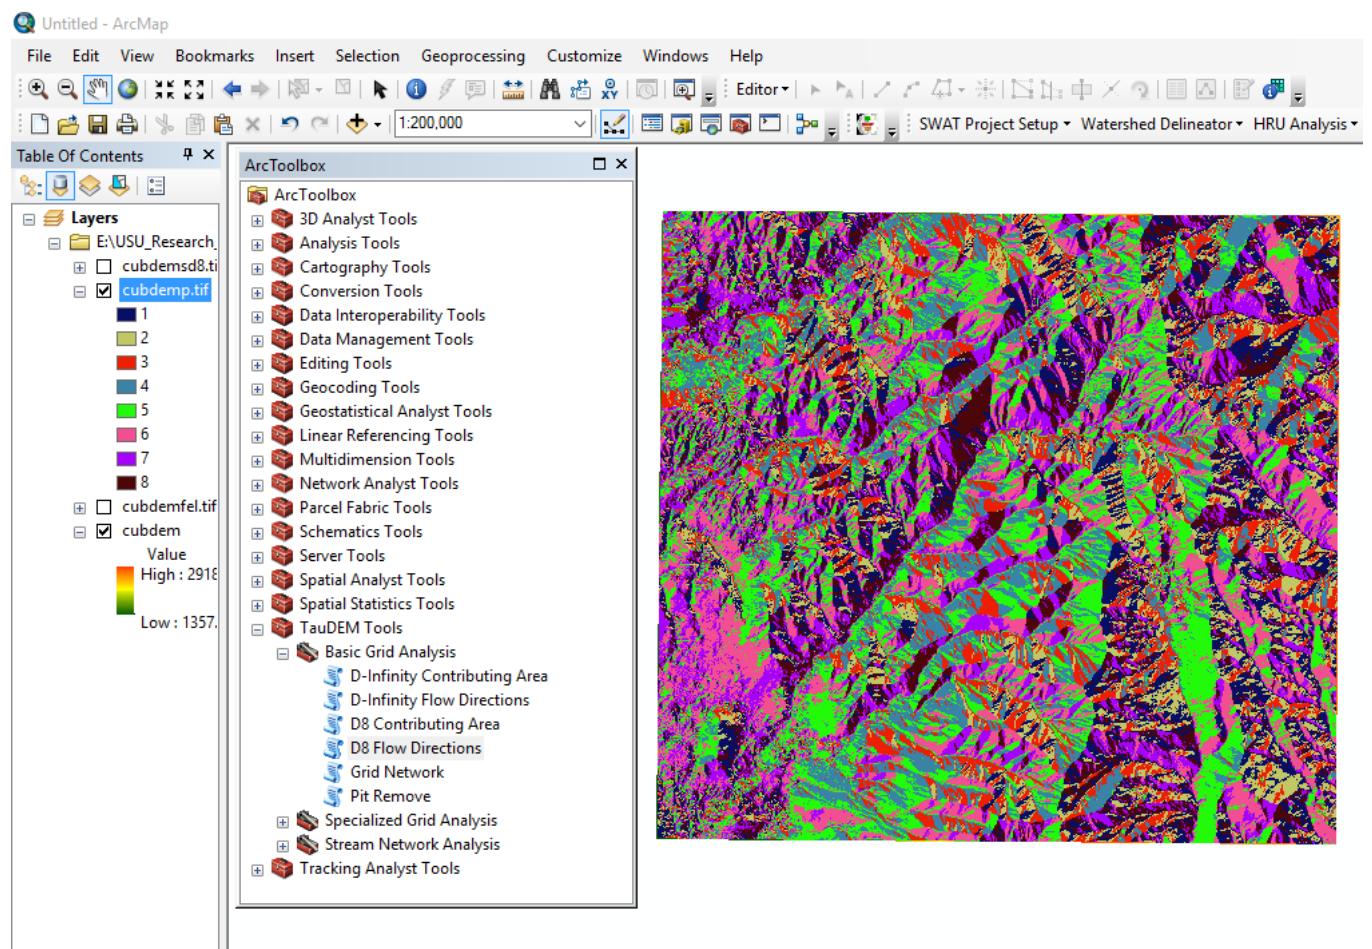


10. The next function to run is **D8 Contributing Area**. This count the number of grid cells draining through (out of) each grid cell based on D8 flow directions.

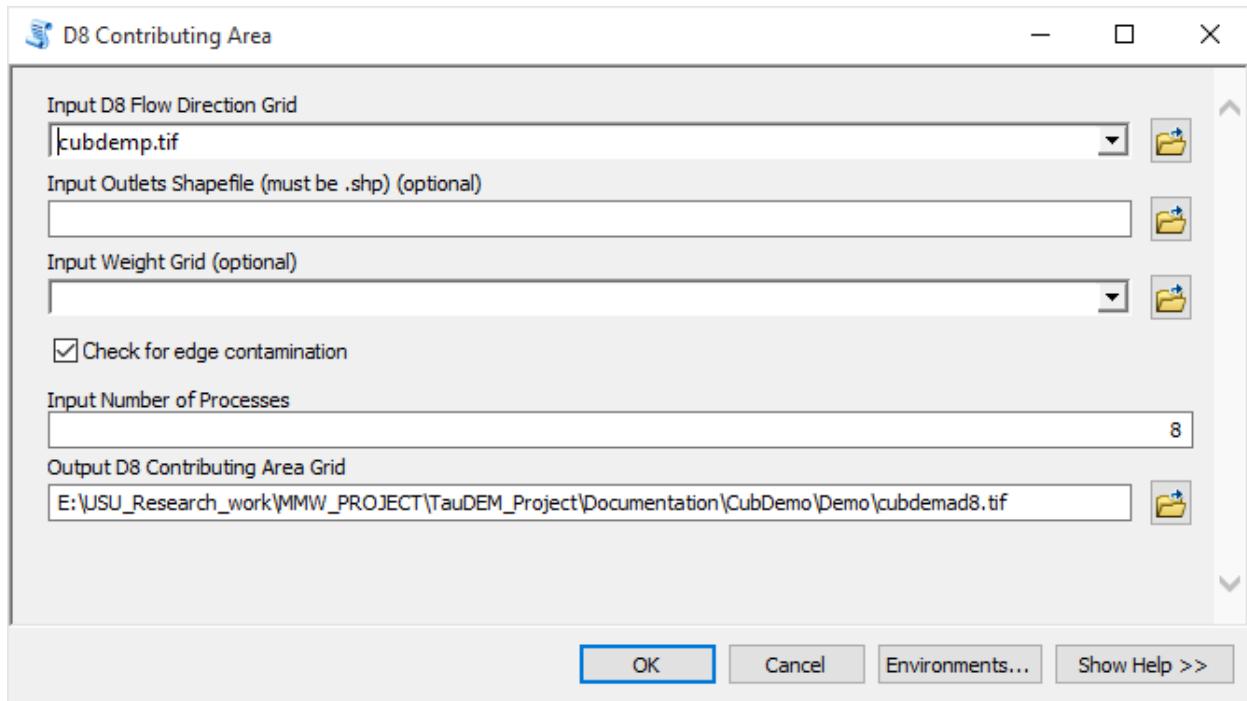


There are options to specify outlets and an input weight grid that were not used here. These are detailed in the tool help and allow calculations to be restricted to the area upstream of designated outlets (specified as a shapefile) and to accumulate an input weight field, rather than just counting contributing area as a number of grid cells. There is also an option to check for edge contamination. Edge contamination is a problem that can occur in the calculation of contributing area when flow is inwards from the boundary of the terrain. The computer does not know what the inflowing contributing area at the edge is, so evaluates the contributing area that may be impacted by this unknown area as no data. The result is streaks that enter the domain along flow paths. This is a desired result as it guards against missing parts of the watershed, but it can and should be turned off if the DEM has been clipped to a watershed boundary. A logarithmic scale is often best to render contributing area values as in the illustration below. Red has been used to display no data to illustrate edge contamination.

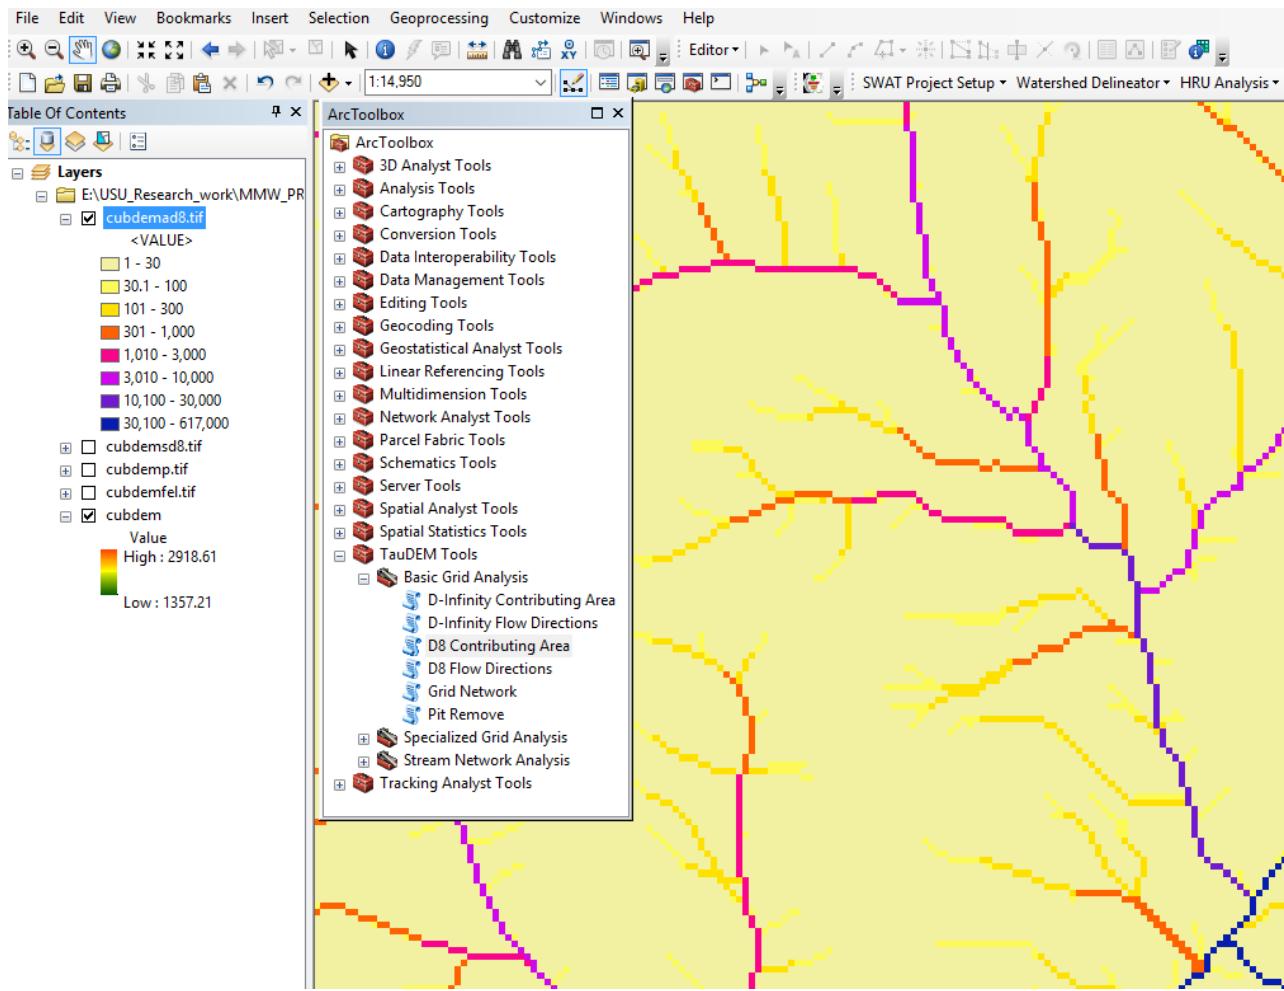

11. The **Grid Network** function outputs three grids: (1) the longest flow path along D8 flow directions to each grid cell, (2) the total length of all flow paths that end at each grid cell, and (3) the grid network order. This is obtained by applying the Strahler stream ordering system to the network defined starting at each grid cell.

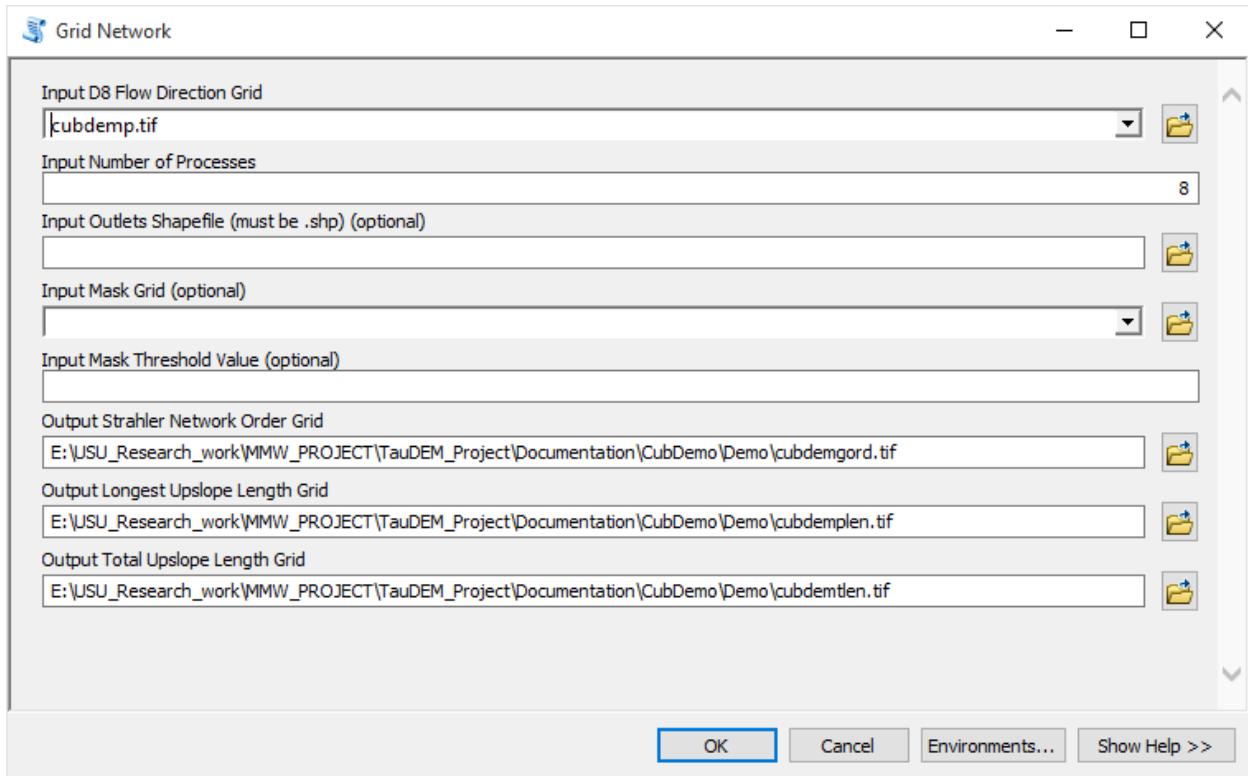


Grid Network Order (file name suffix *gord*) output from Grid Network is illustrated:

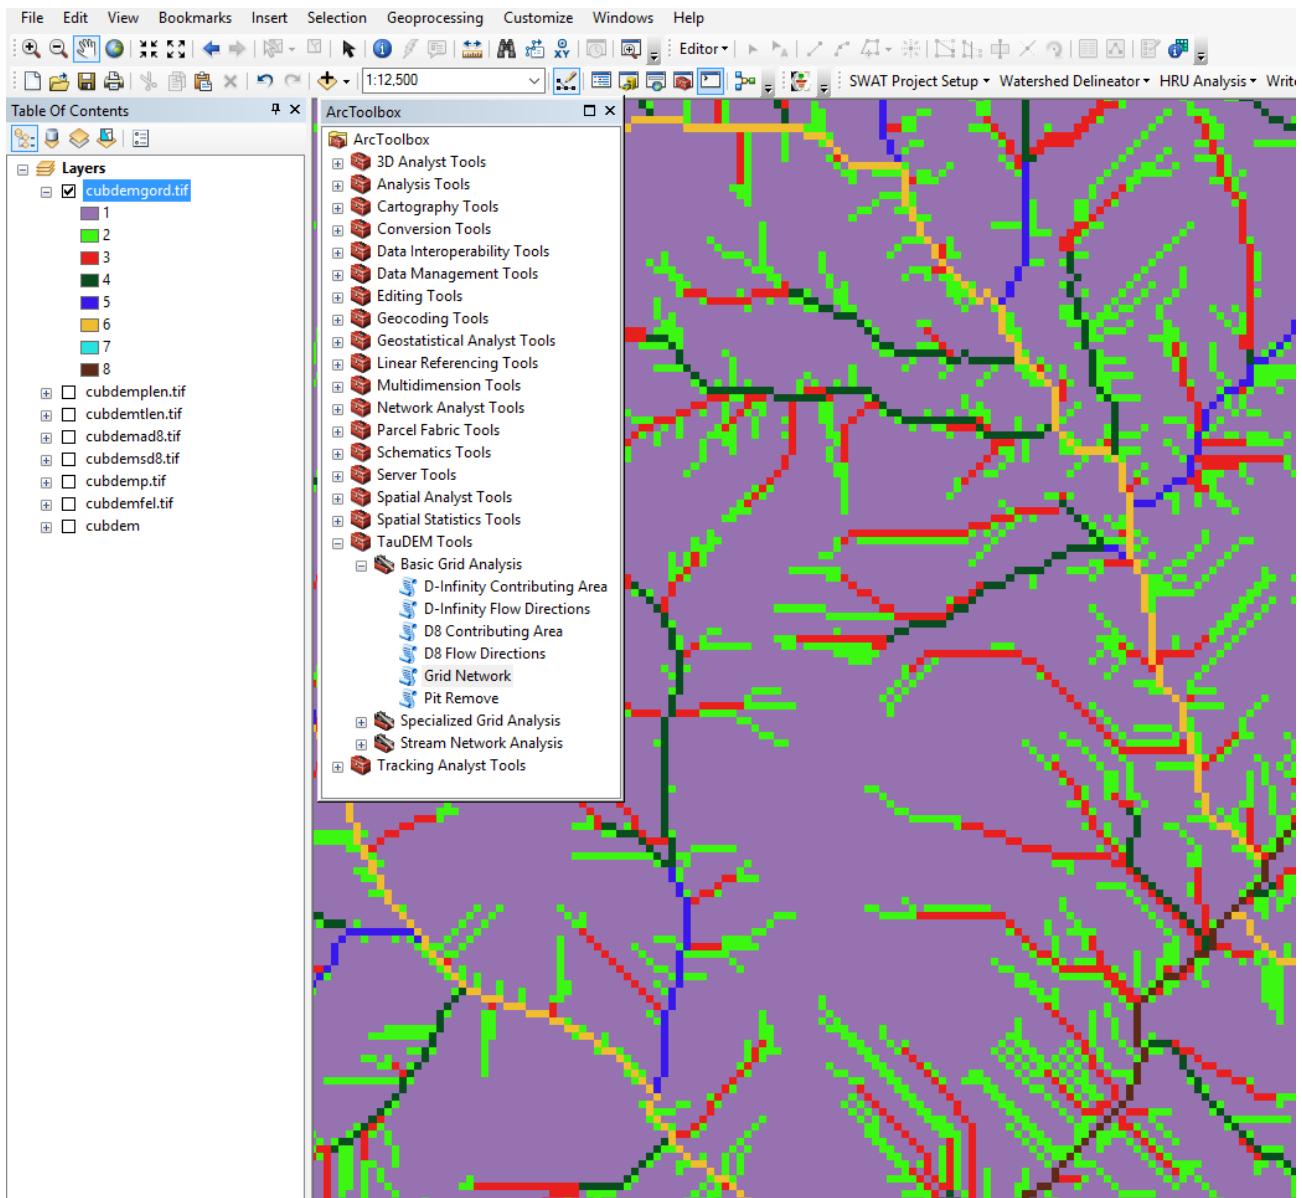


The functions above used the D8 flow model that represents flow from each grid cell to one neighbor. TauDEM also uses the D_{∞} (D-Infinity) flow model that calculates the steepest outwards flow direction using triangular facets centered on each grid cell and apportions flow between neighboring grid cells based on flow direction angles.

12. The **D-Infinity Flow Direction** function is starting point for all D-Infinity work. It calculates D-Infinity flow directions for use in other TauDEM functions requiring D-infinity flow direction input

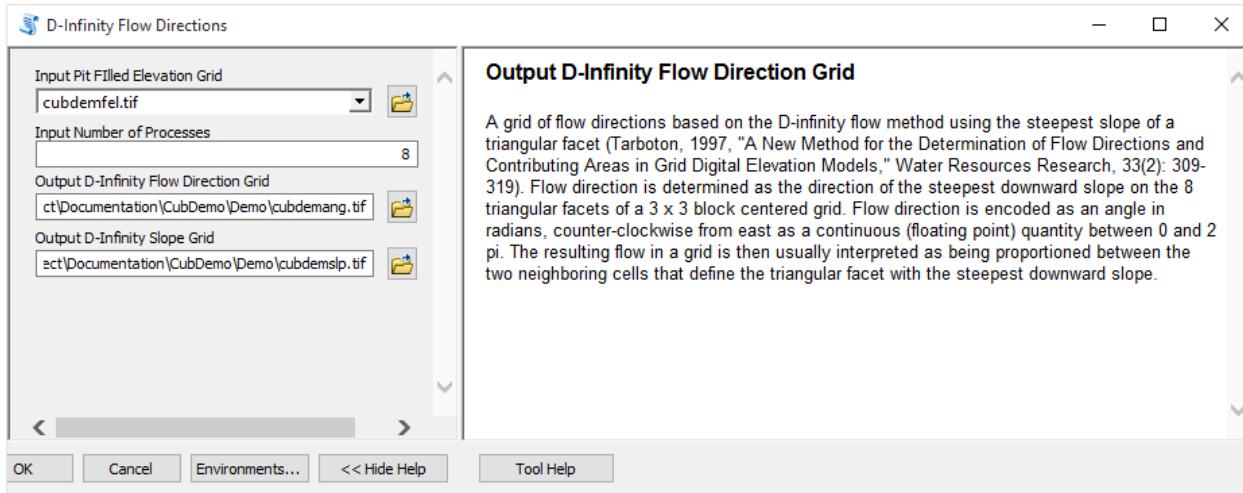


D-Infinity flow directions (encoded as angles counter clockwise from East in Radians as illustrated above) render similar to a hillshading.

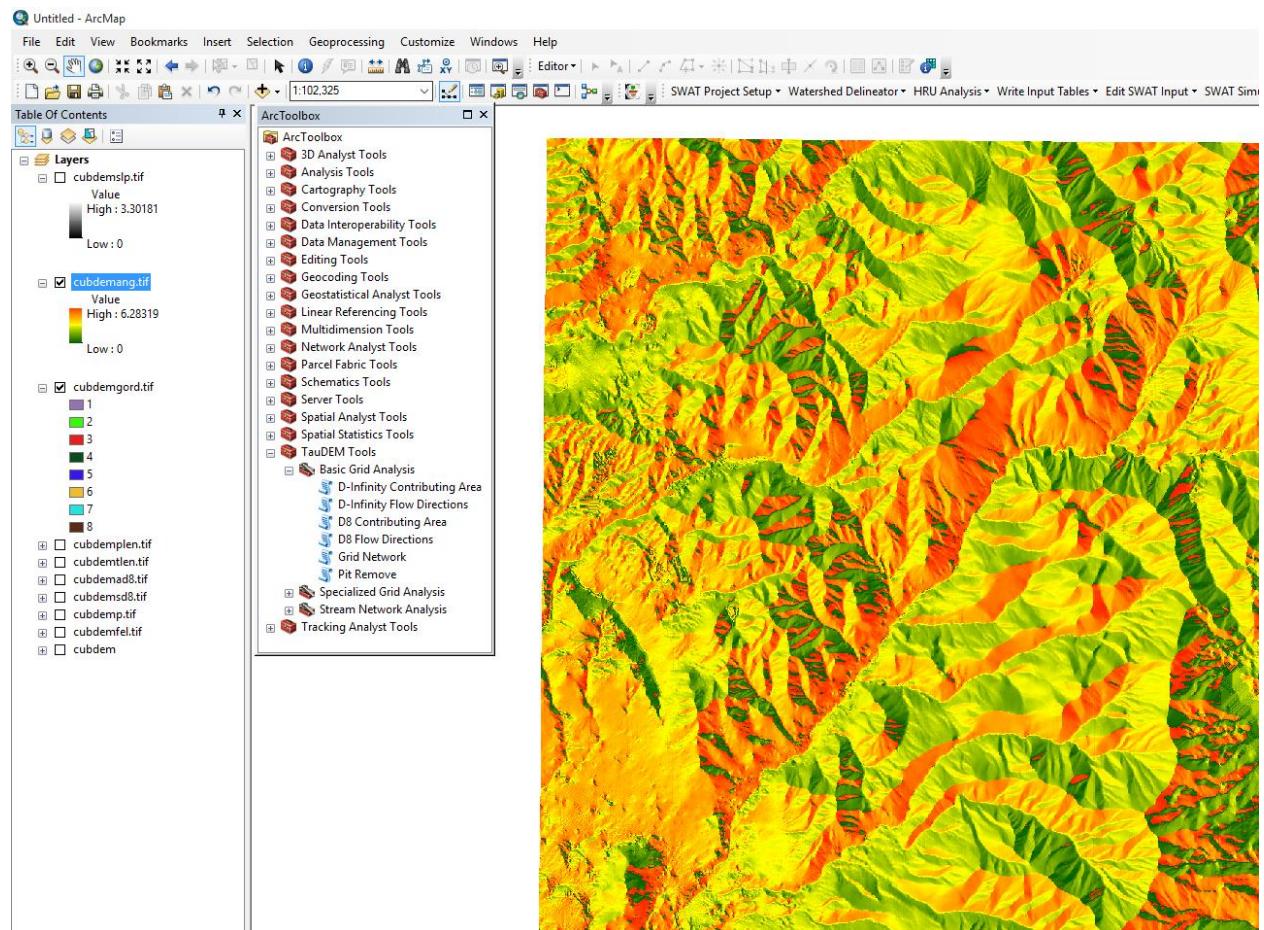


13. The D-Infinity Contributing Area function evaluates contributing area using the D-Infinity model based on flow being shared between grid cells proportional to the angle to the steepest downslope

direction. This is designed to represent specific catchment area within dispersed flow over a smooth topographic surface.

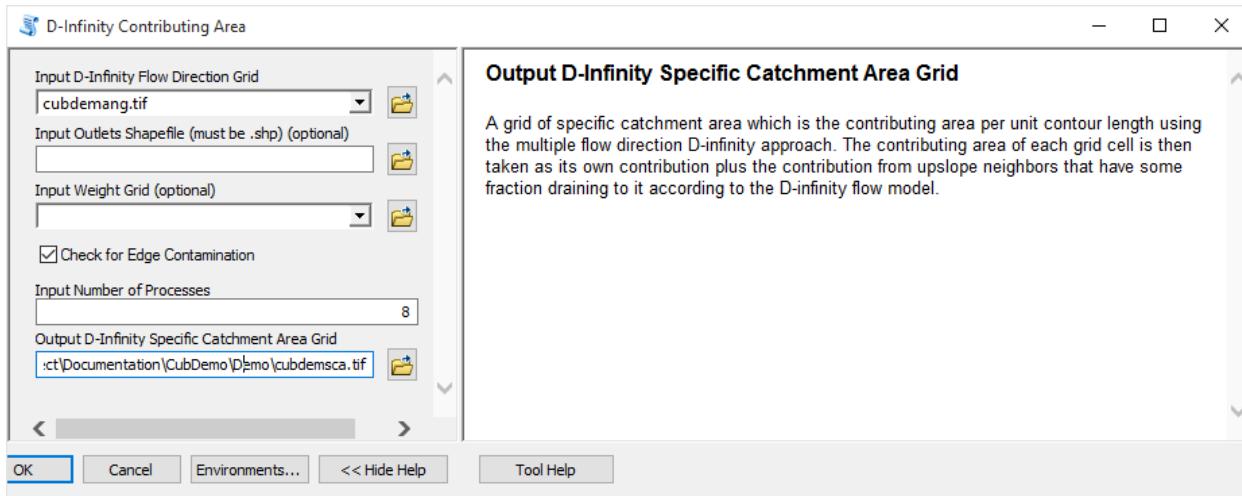


The result from running this is specific catchment area obtained from the D-Infinity contributing area function illustrated below

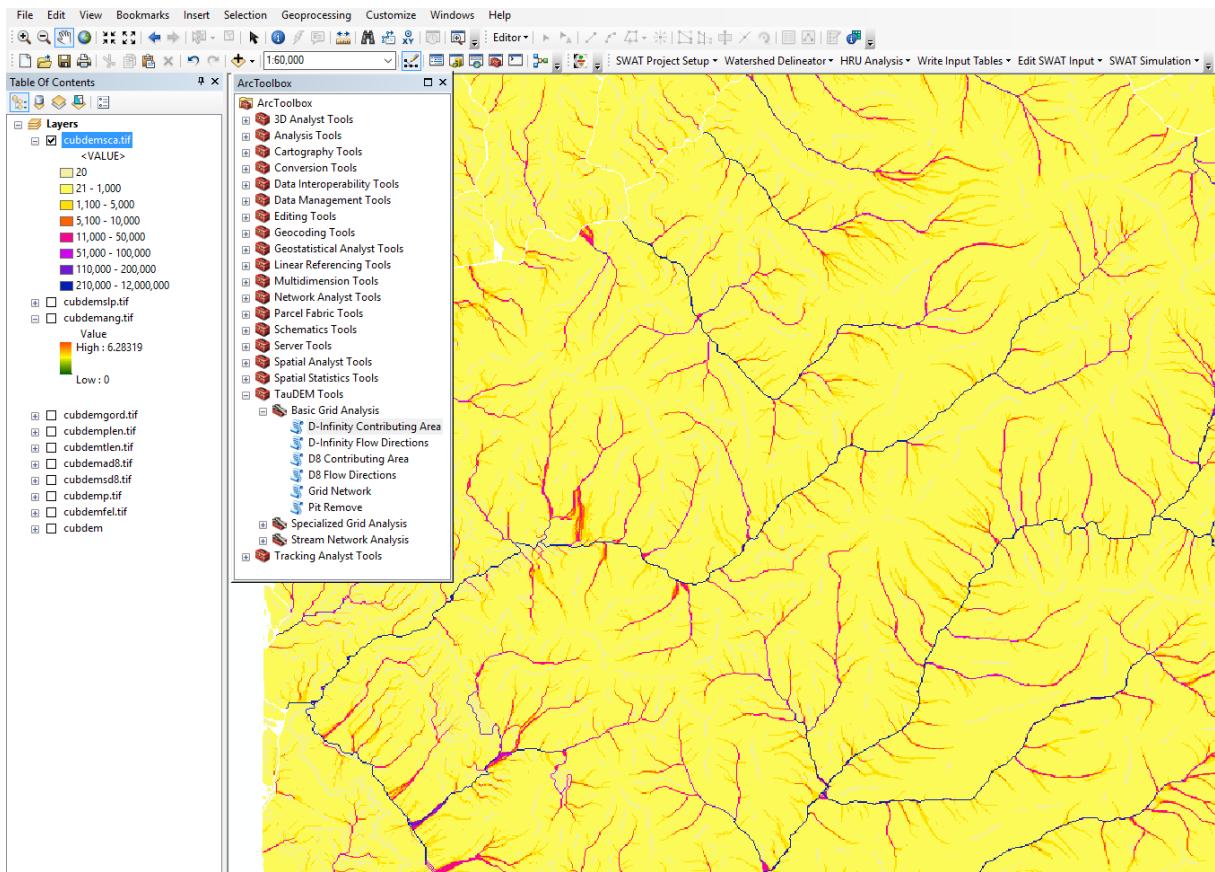


Stream Network Analysis using TauDEM functions

TauDEM provides a number of methods for delineating and analyzing stream networks and watersheds. The simplest stream network delineation method uses a threshold on contributing area.

14. Stream Definition by Threshold. This function defines a stream raster grid (src suffix) by applying a threshold to the input. In this case the input is a D8 contributing area grid and a threshold of 100 grid cells has been used.

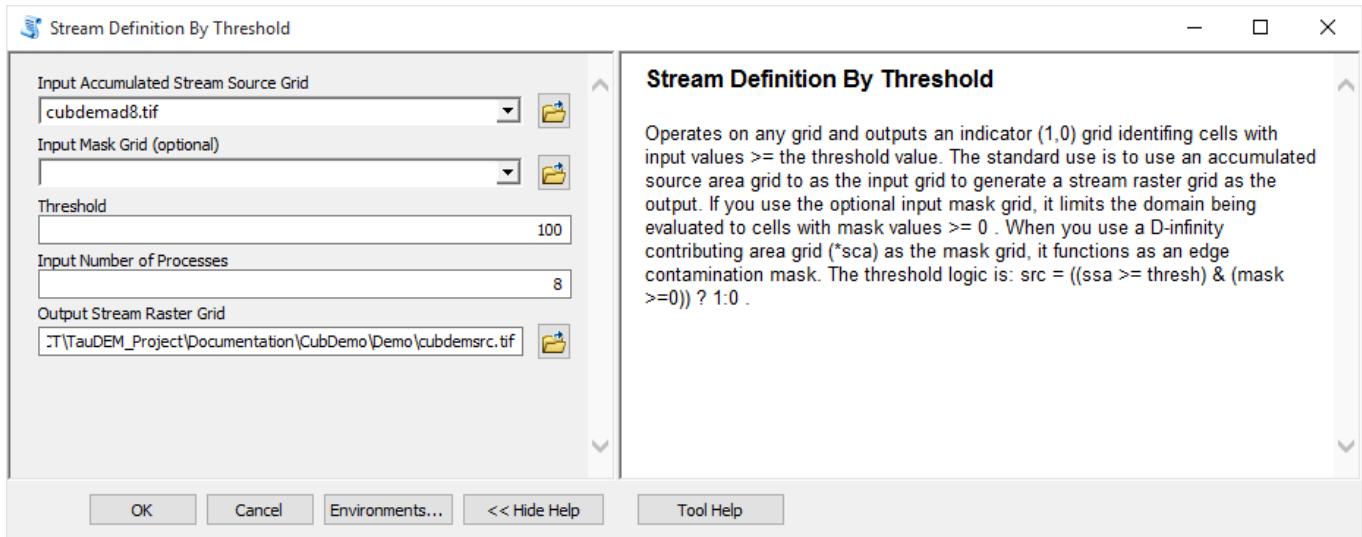


The result depicts the stream network (but is not logically connected as a network shapefile yet).

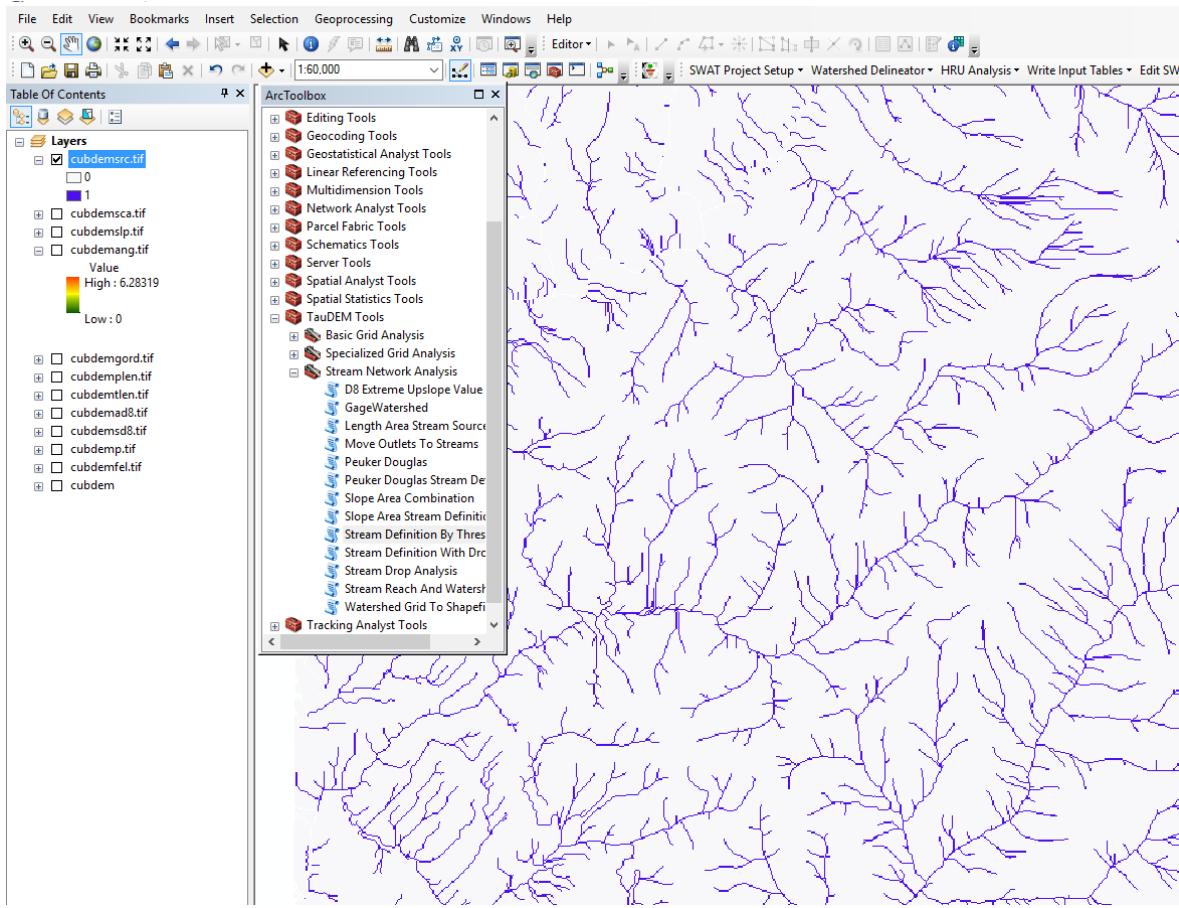


It is common to want to delineate watersheds upstream of an outlet, say a USGS stream gauge. This requires that gauge locations be precisely located on streams as rendered from the DEM. Due to inaccuracies in gauge locations and DEM stream delineation it is common for gauge locations not to be precisely on streams delineated from the DEM. The move Outlets to streams function slides gauge locations downslope following D8 flow directions until a stream (as defined by a stream raster grid) is encountered. The shapefile CubGauge in the example data is used to illustrate this.


15. Add the **CubGauge.shp** file to ArcMap and zoom in to the area around it.

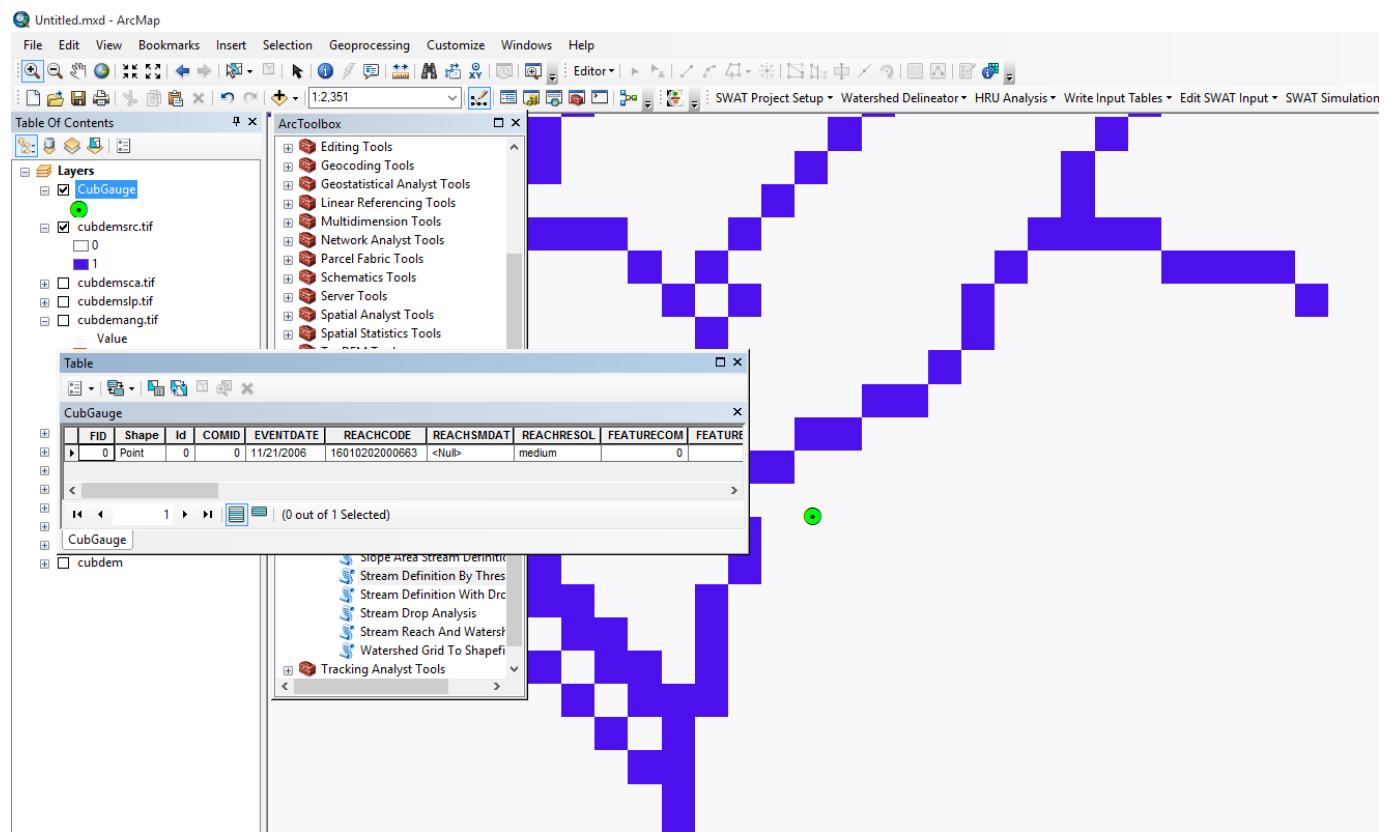

16. Open **Move Outlets to Streams** and select the following input and click OK

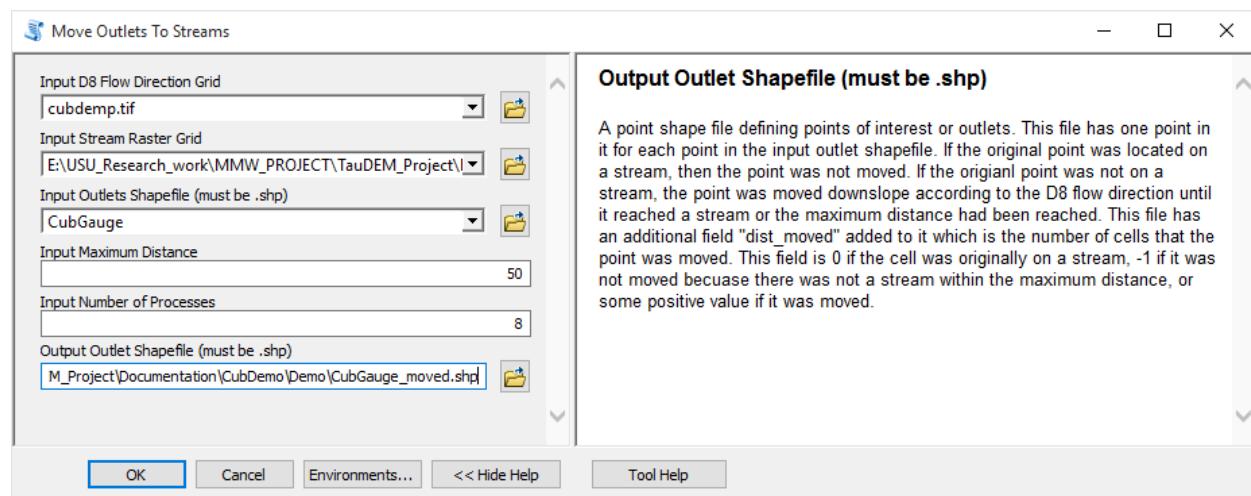


Notice (below) how the outlet has been moved to coincide with the stream.

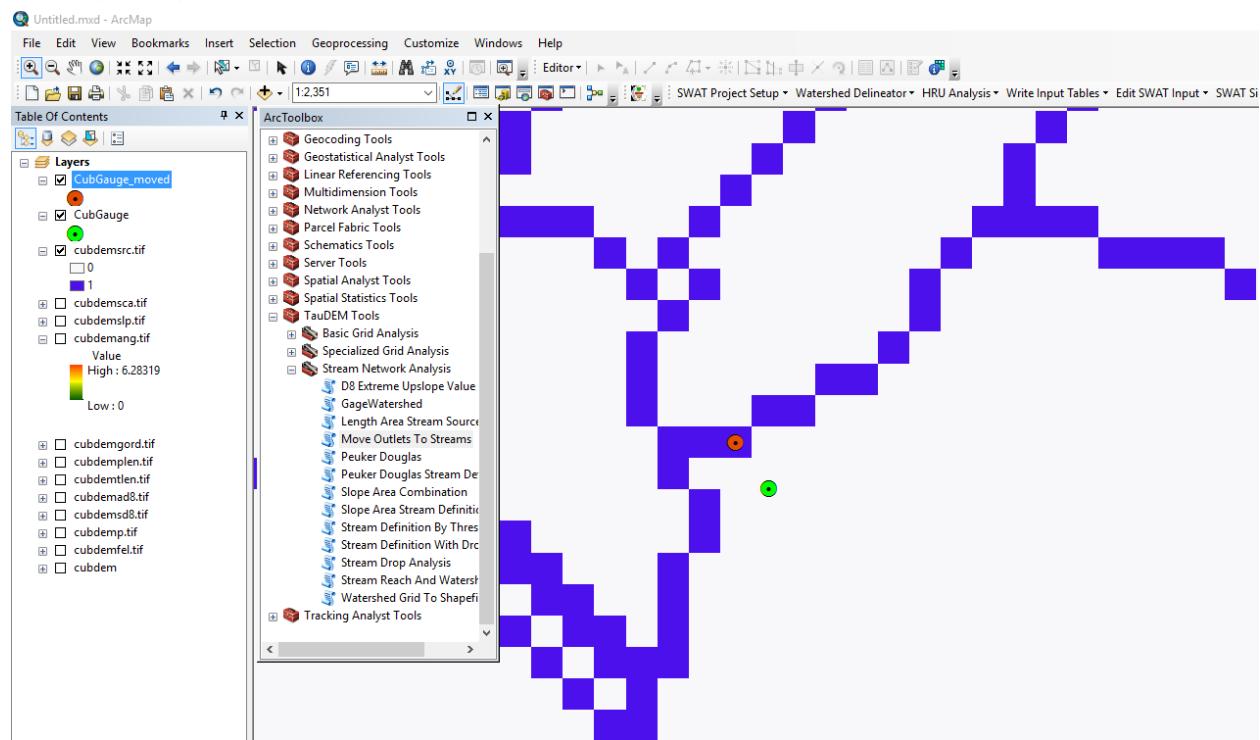


It is somewhat overkill to use 8 processors to move one outlet point, but this is illustrative of how this could be used for many more points. Upon adding the moved outlet you may have received an ArcMAP unknown spatial reference warning. Be aware in using TauDEM that TauDEM does not do any spatial reference (projection) conversions. Therefore all data needs to be in the same spatial reference system. TauDEM does copy the spatial reference information from input grids to output grids, but does not do this for shapefiles.

With the outlet positioned on the stream the stream network upstream of the outlet can be delineated.


17. Open **D8 Contributing Area** and select the following inputs and click OK

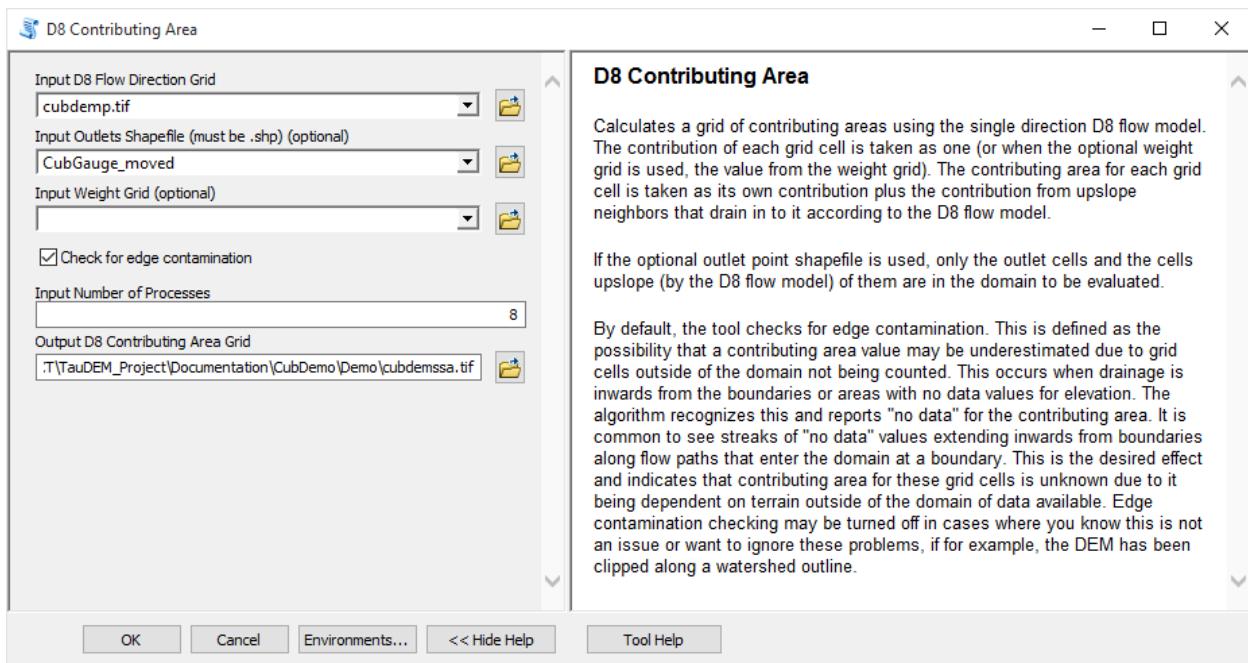


The result is contributing area only for the watershed upstream of the outlet.

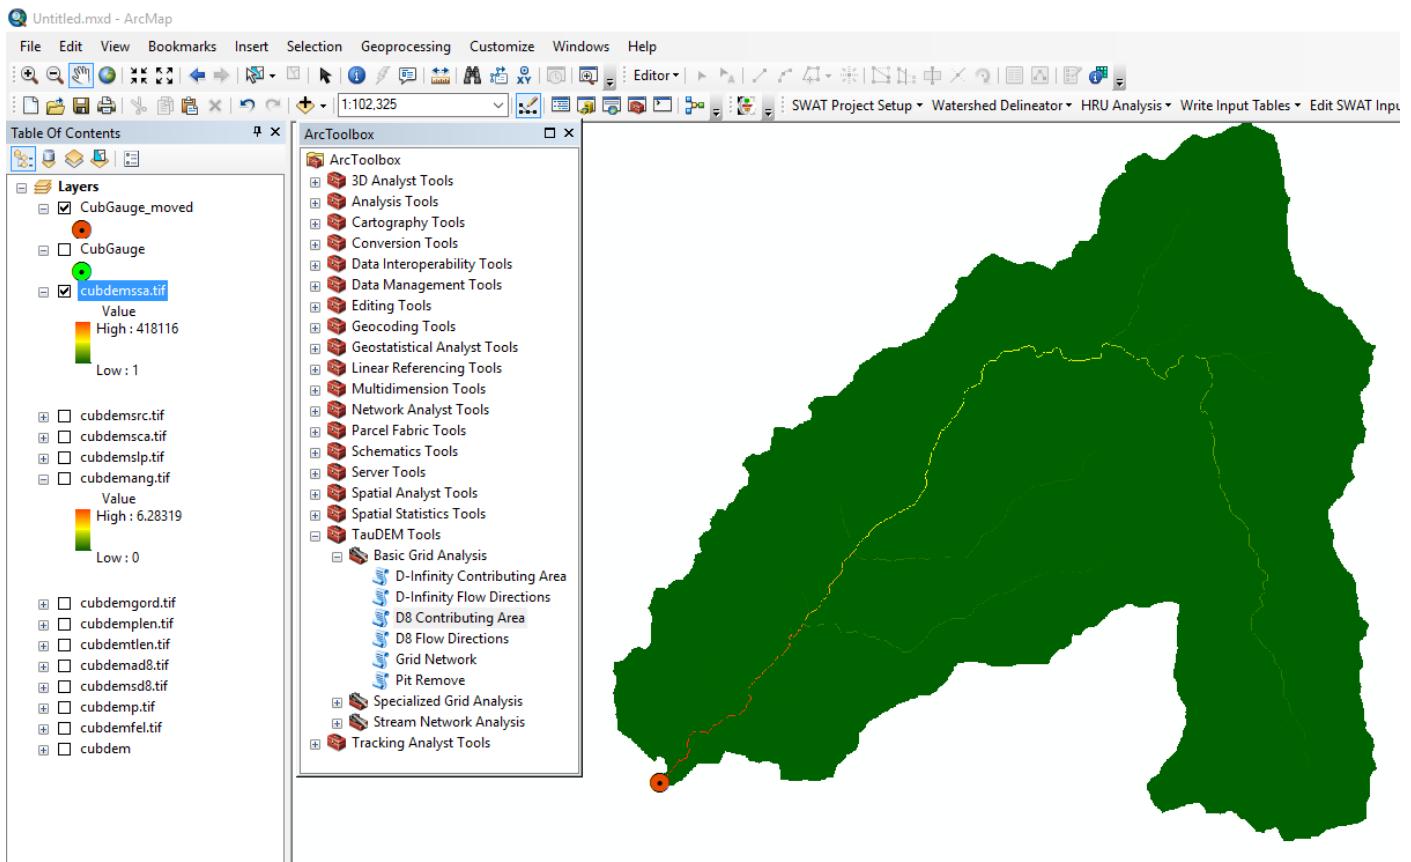


18. Open **Stream Definition By Threshold** and select the following inputs and click OK to define a stream raster for this area upstream of the outlet

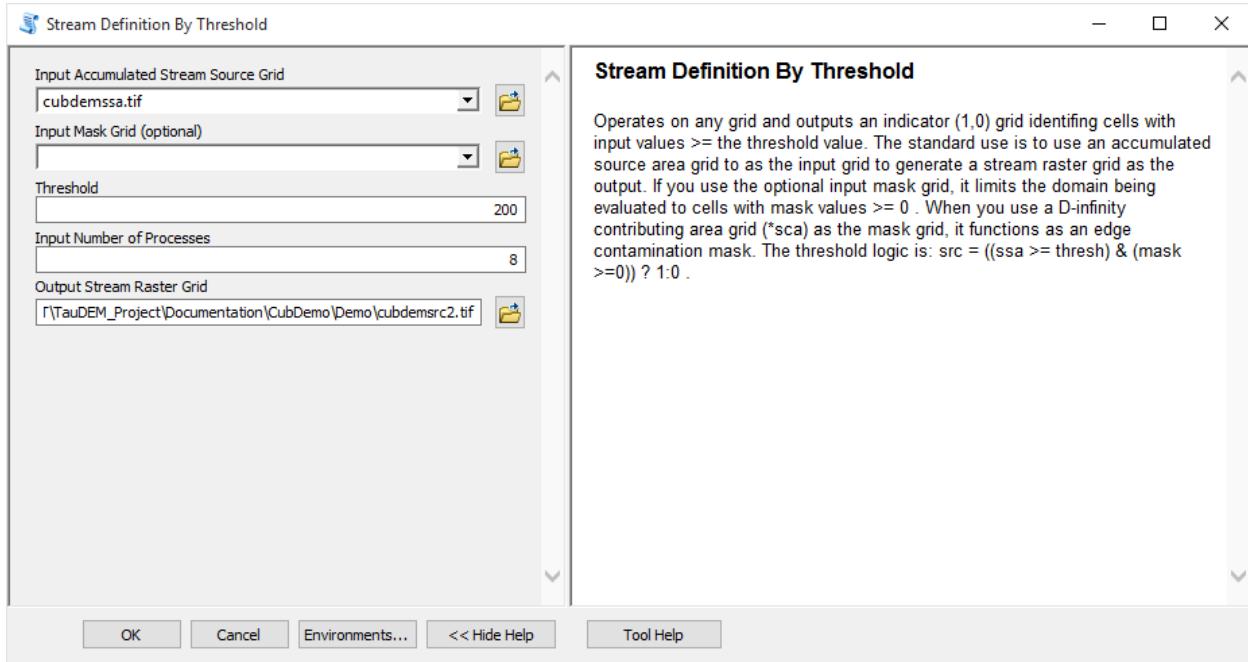

19. Open **Stream Reach and Watershed** and select the following inputs and click OK

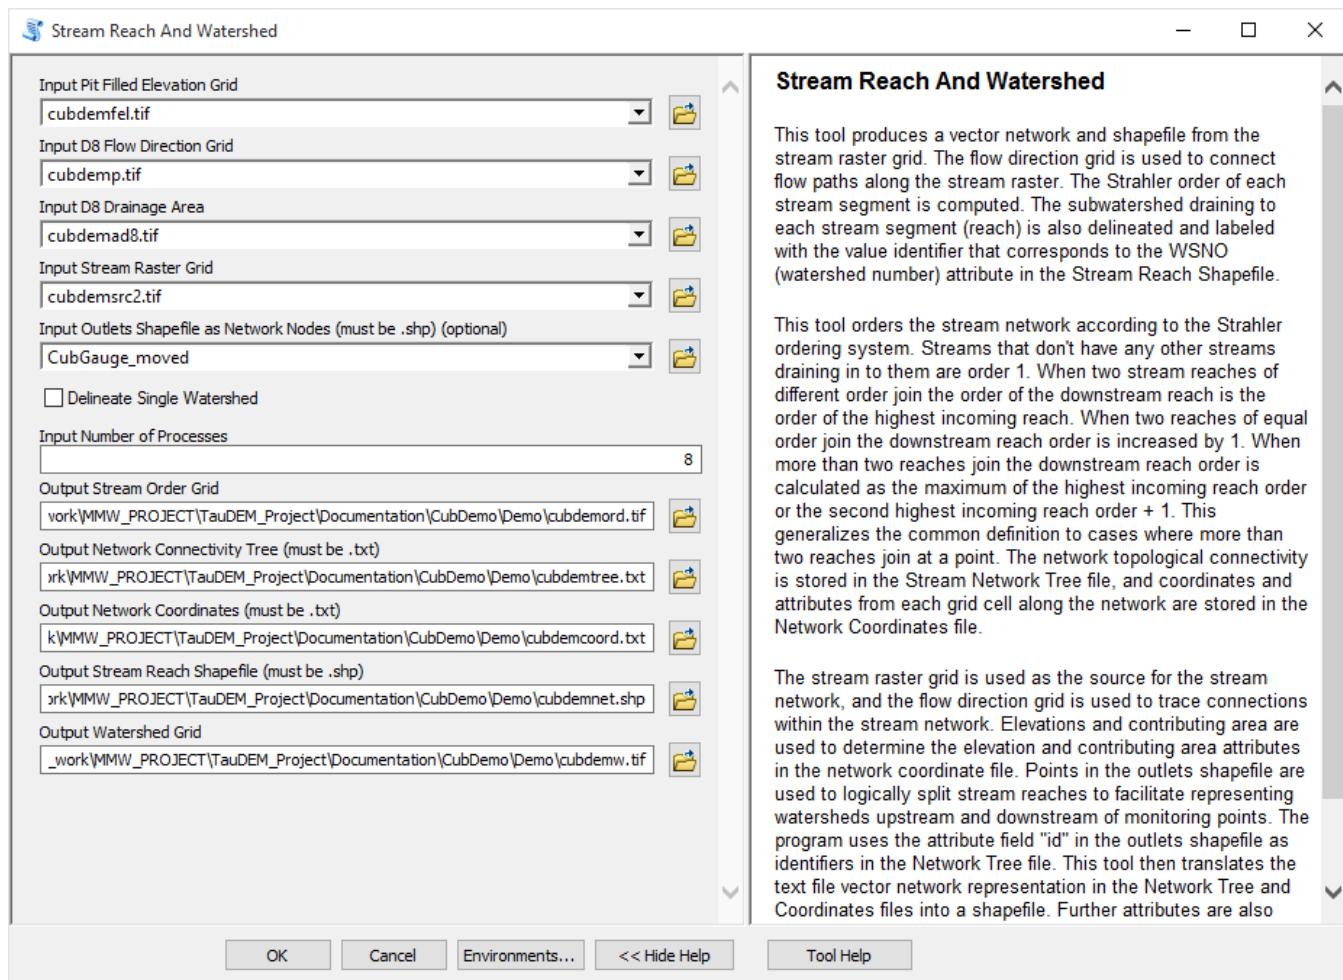


The result is a number of outputs illustrated below. These include a shapefile of the stream network and subwatersheds draining to each link of the stream network shapefile. This is one a key output from TauDEM. Each link in the stream network has a unique identifier that is linked to downstream and upstream links. Each subwatershed also has a unique identifier that is referenced in terms of the stream network that it drains to. This information enables construction of a subwatershed based distributed hydrologic model with flow from subwatersheds being connected to, accumulated in, and routed along the appropriate stream reaches.

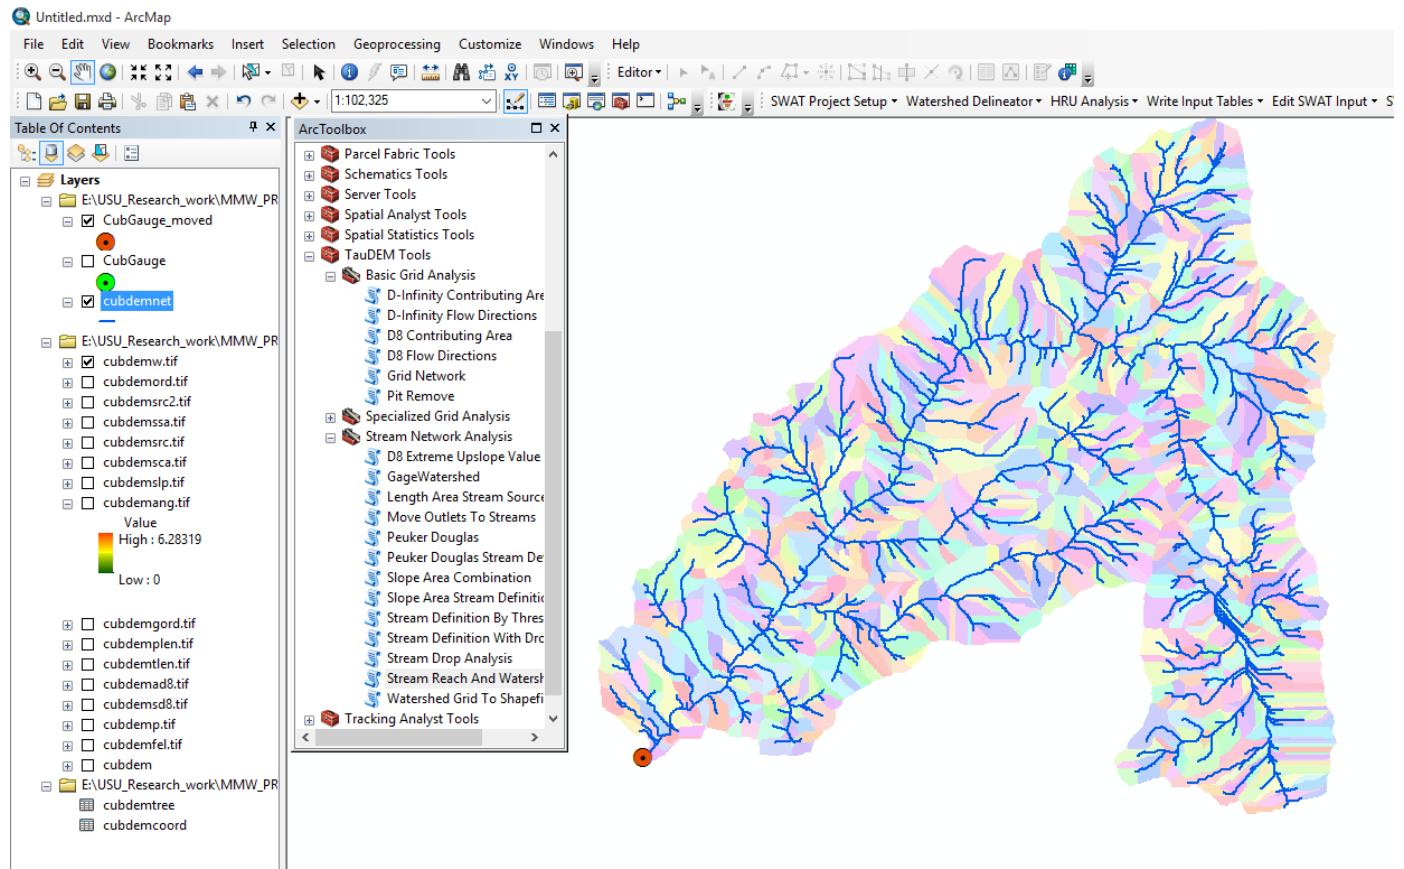


An important question in stream network delineation is what stream delineation threshold to use. The above used arbitrary thresholds of 100 and 200 grid cells. TauDEM also provides ways to do select stream delineation threshold objectively using a stream drop test following theory described in Tarboton et al. (Tarboton et al., 1991; 1992) and Tarboton and Ames (2001). This may be combined with more geomorphologically based methods for channel definition that attempt to capture topographic texture and spatial variability in drainage density. These will be illustrated next.


20. Open the **Peuker Douglas** function and select the following inputs and click OK.

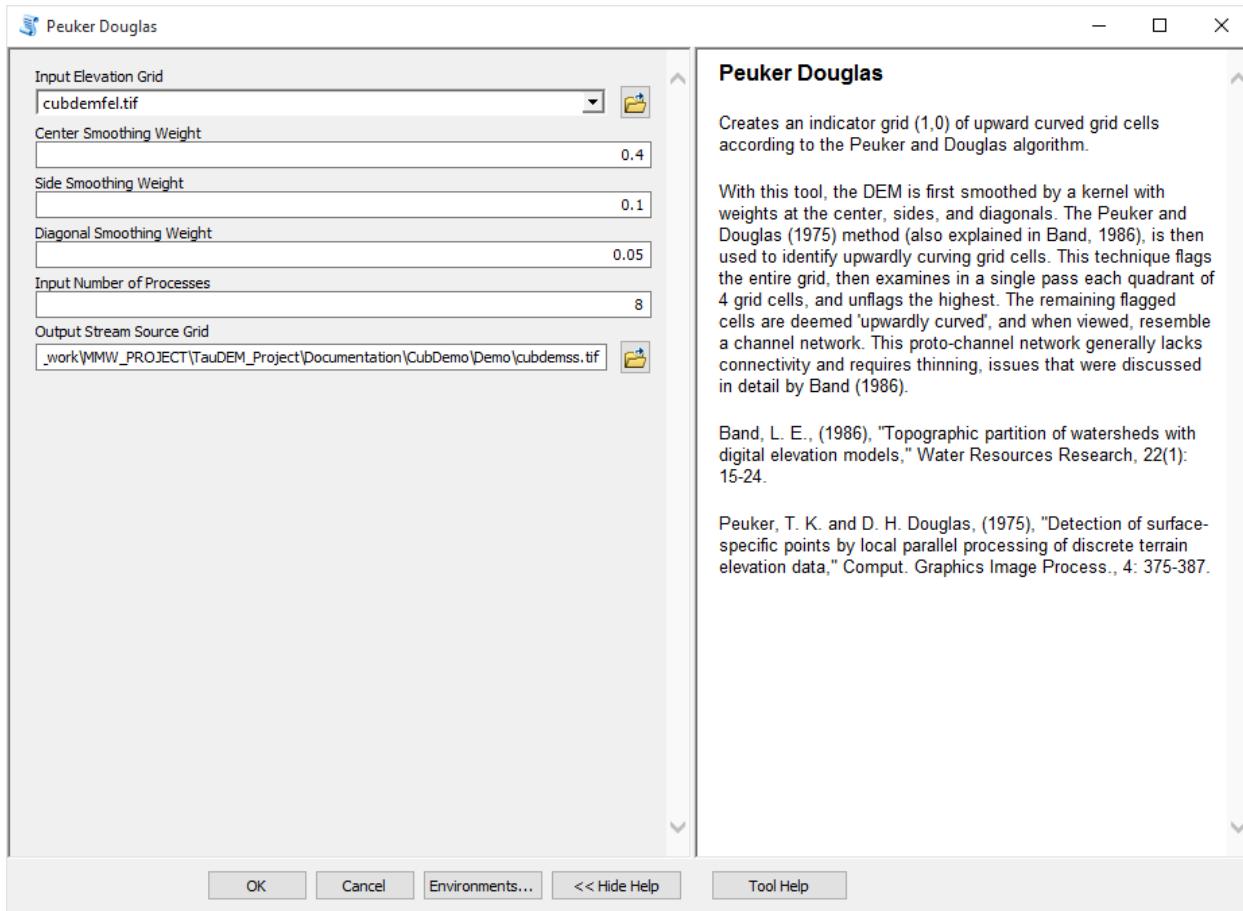

The result, derived entirely from a local filter applied to the topography is a skeleton of a stream network illustrated below

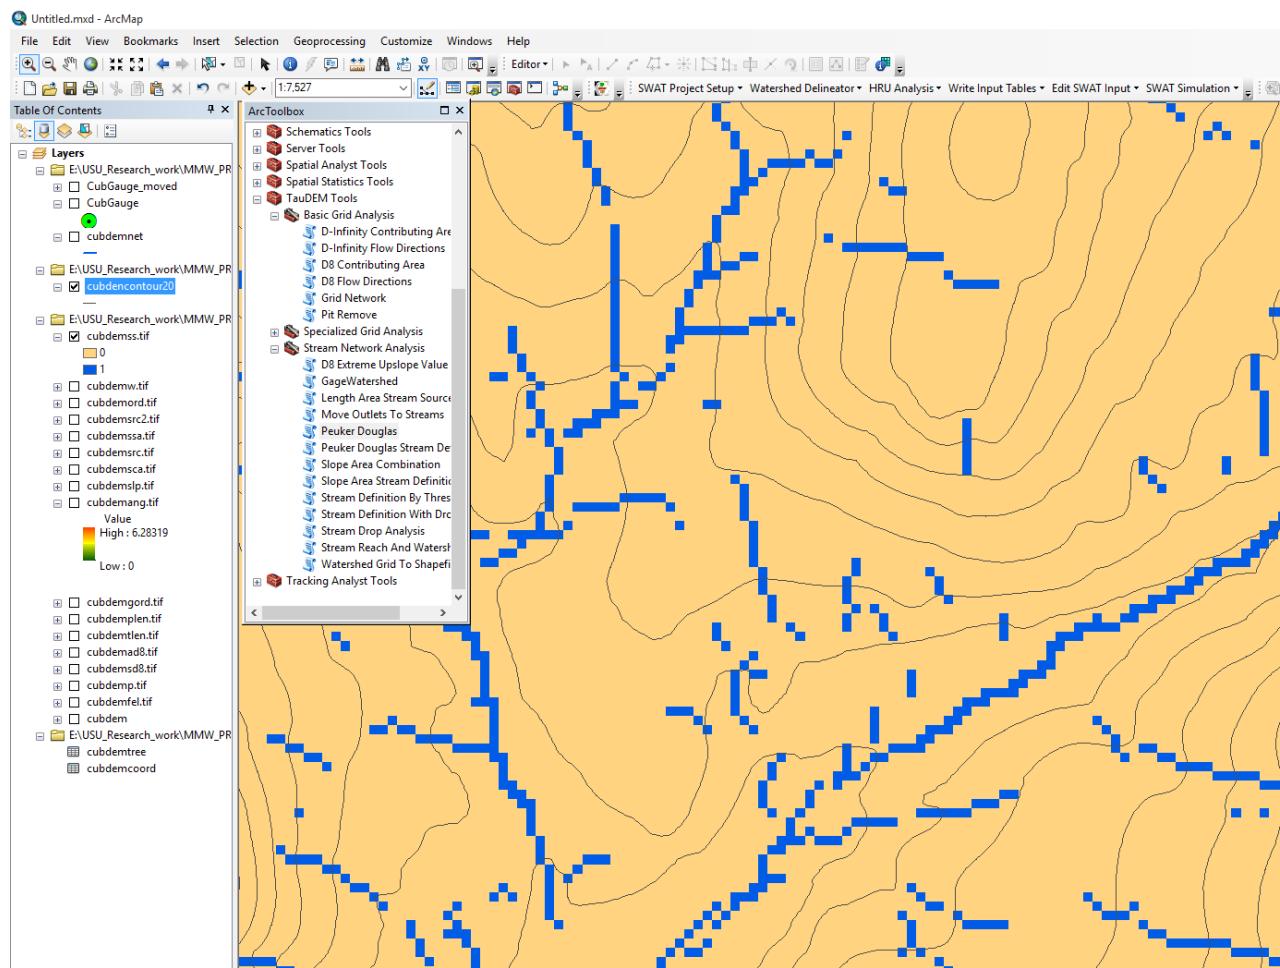


21. Open the Peuker Douglas Stream Definition function and select the following inputs and click OK.

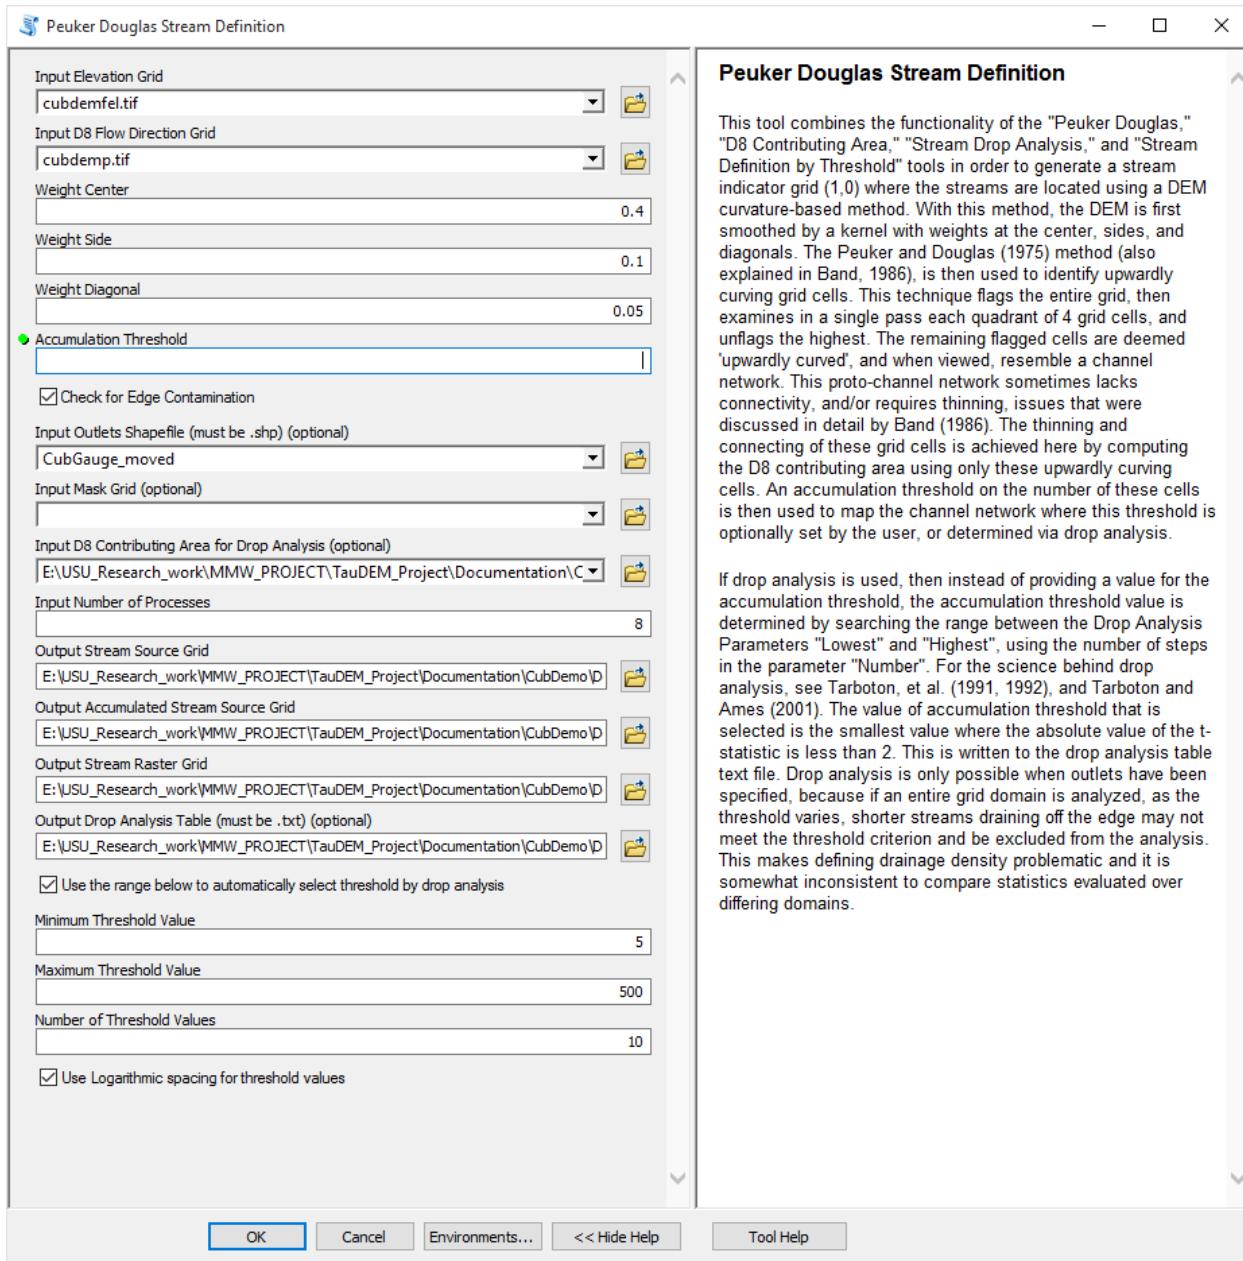

This rather extensive set of inputs configures TauDEM to run Peuker Douglas, then use the Peuker Douglas stream skeleton as a weighted input to a D8 contributing area calculation. The result is then thresholded using a range of thresholds (the drop analysis thresholds at the bottom of the input) to identify the smallest threshold for which the mean stream drop of first order streams is not significantly different from the mean stream drop of higher order streams. This is the constant drop law (Broscoe, 1959), and TauDEM uses it here to identify the highest resolution stream network that complies with this law as an objective way of identifying the stream delineation threshold. The output results include a table that reports the stream drop statistics for each threshold examined. This is included in the completion dialog below as well as written to the drop analysis table file. The last column of this gives T statistics for the differences of first and higher order streams. Using a threshold of |2| as indicating

significance in this T test the threshold of 39 is chosen in this case as the objective stream delineation threshold.

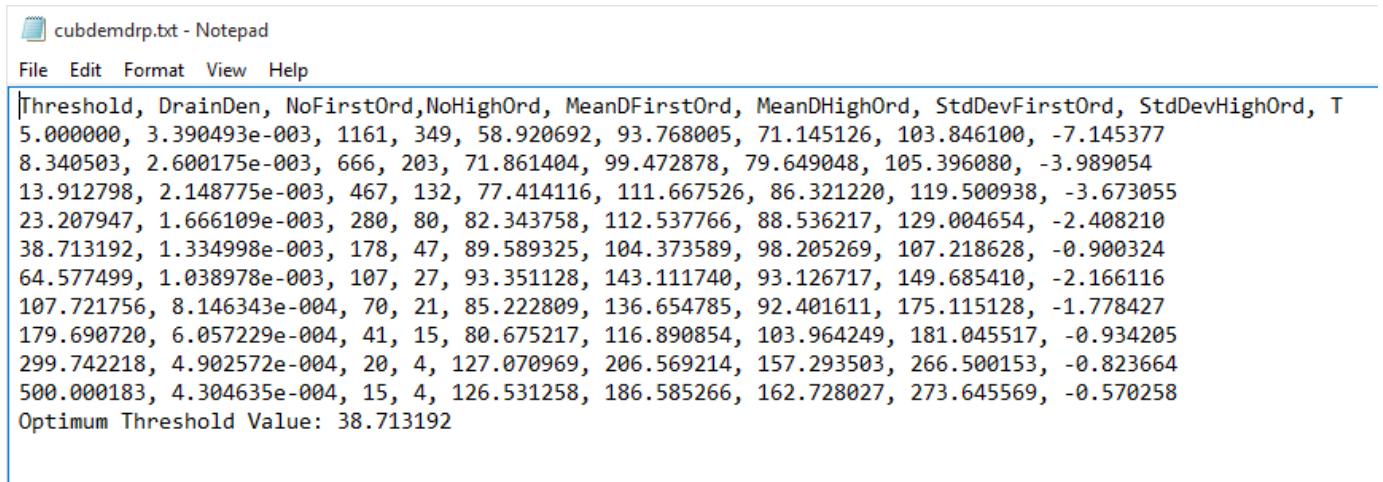


cubdemdrp.txt - Notepad


File Edit Format View Help

```
Threshold, DrainDen, NoFirstOrd, NoHighOrd, MeanDFirstOrd, MeanDHighOrd, StdDevFirstOrd, StdDevHighOrd, T
5.000000, 3.390493e-003, 1161, 349, 58.920692, 93.768005, 71.145126, 103.846100, -7.145377
8.340503, 2.600175e-003, 666, 203, 71.861404, 99.472878, 79.649048, 105.396080, -3.989054
13.912798, 2.148775e-003, 467, 132, 77.414116, 111.667526, 86.321220, 119.500938, -3.673055
23.207947, 1.666109e-003, 280, 80, 82.343758, 112.537766, 88.536217, 129.004654, -2.408210
38.713192, 1.334998e-003, 178, 47, 89.589325, 104.373589, 98.205269, 107.218628, -0.900324
64.577499, 1.038978e-003, 107, 27, 93.351128, 143.111740, 93.126717, 149.685410, -2.166116
107.721756, 8.146343e-004, 70, 21, 85.222809, 136.654785, 92.401611, 175.115128, -1.778427
179.690720, 6.057229e-004, 41, 15, 80.675217, 116.890854, 103.964249, 181.045517, -0.934205
299.742218, 4.902572e-004, 20, 4, 127.070969, 206.569214, 157.293503, 266.500153, -0.823664
500.000183, 4.304635e-004, 15, 4, 126.531258, 186.585266, 162.728027, 273.645569, -0.570258
Optimum Threshold Value: 38.713192
```

22. Open the **Stream Reach and Watershed** function and select the following inputs and click OK.

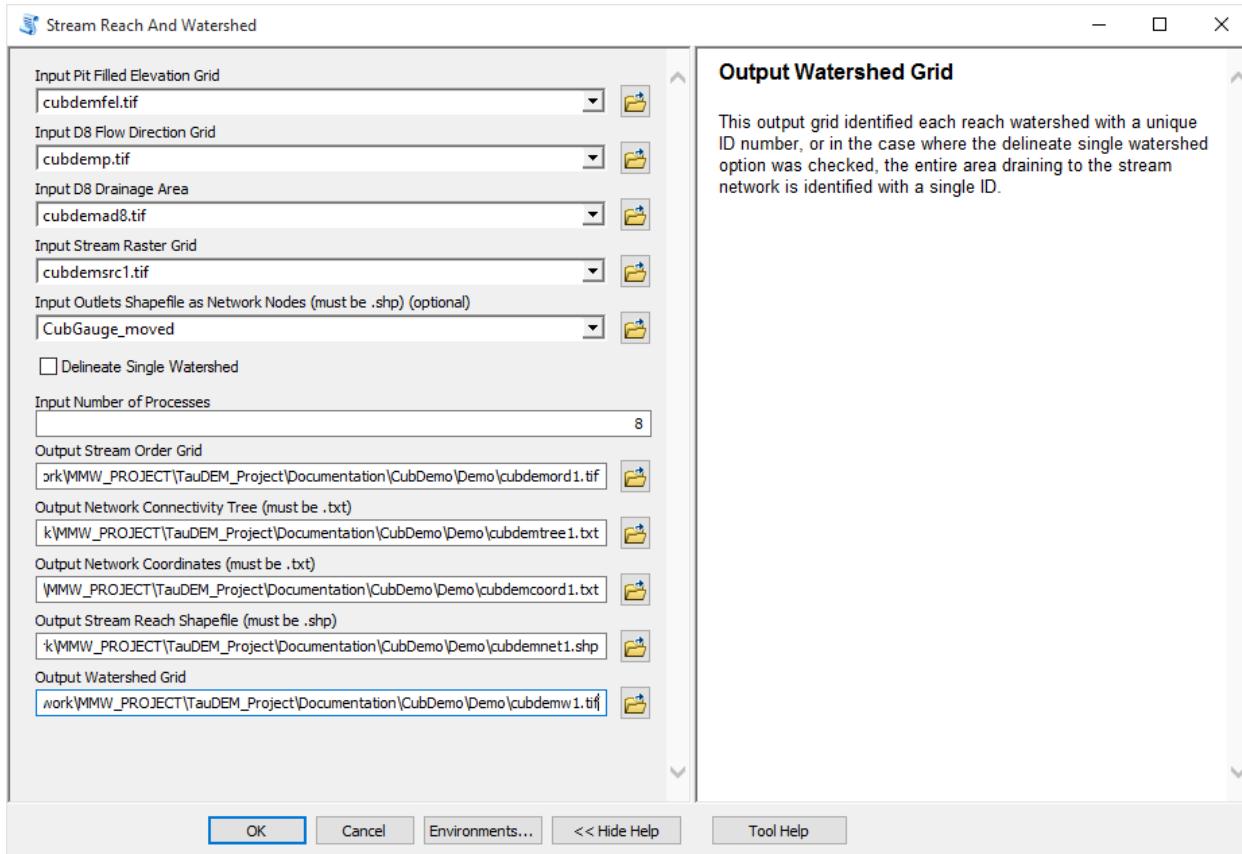


Following is an illustration of the result. Notice how the stream network has been delineated more or less consistently with the contour crenulations depicting the texture of the topography

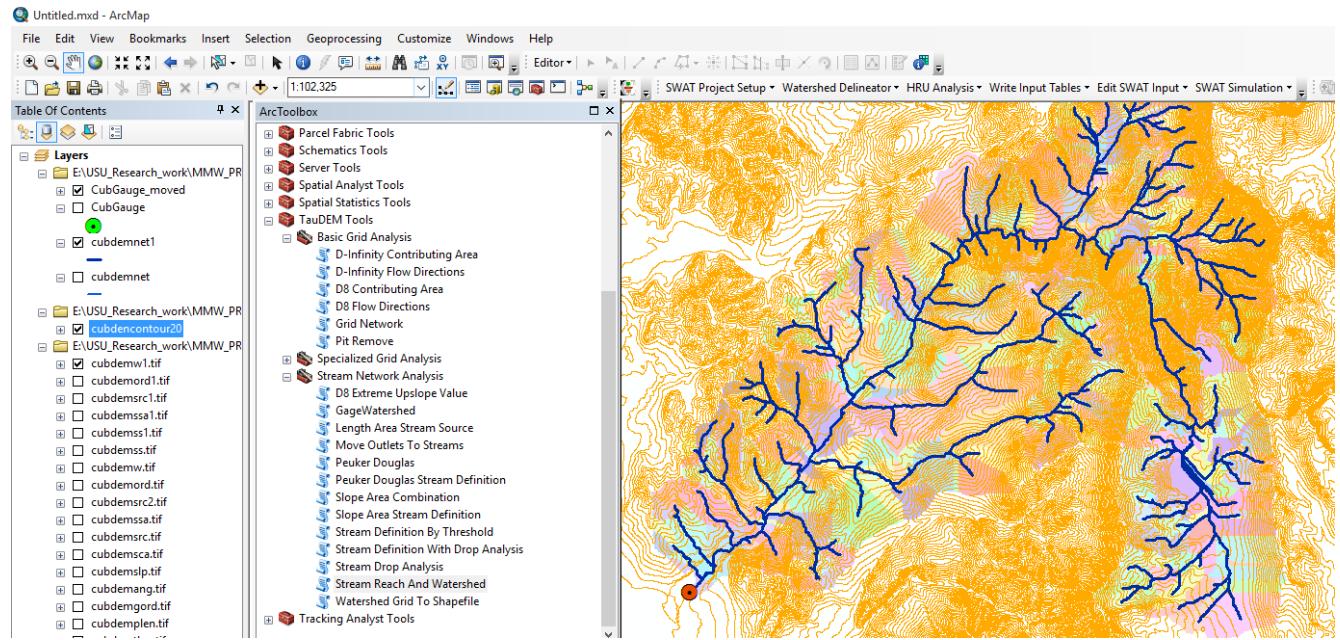


Specialized Grid Analysis using TauDEM functions

TauDEM also includes a number of specialized grid analysis functions. Only a few are illustrated here as they are all detailed in the system help.


23. Open the **D-Infinity Distance Down** function and select the following inputs and click OK

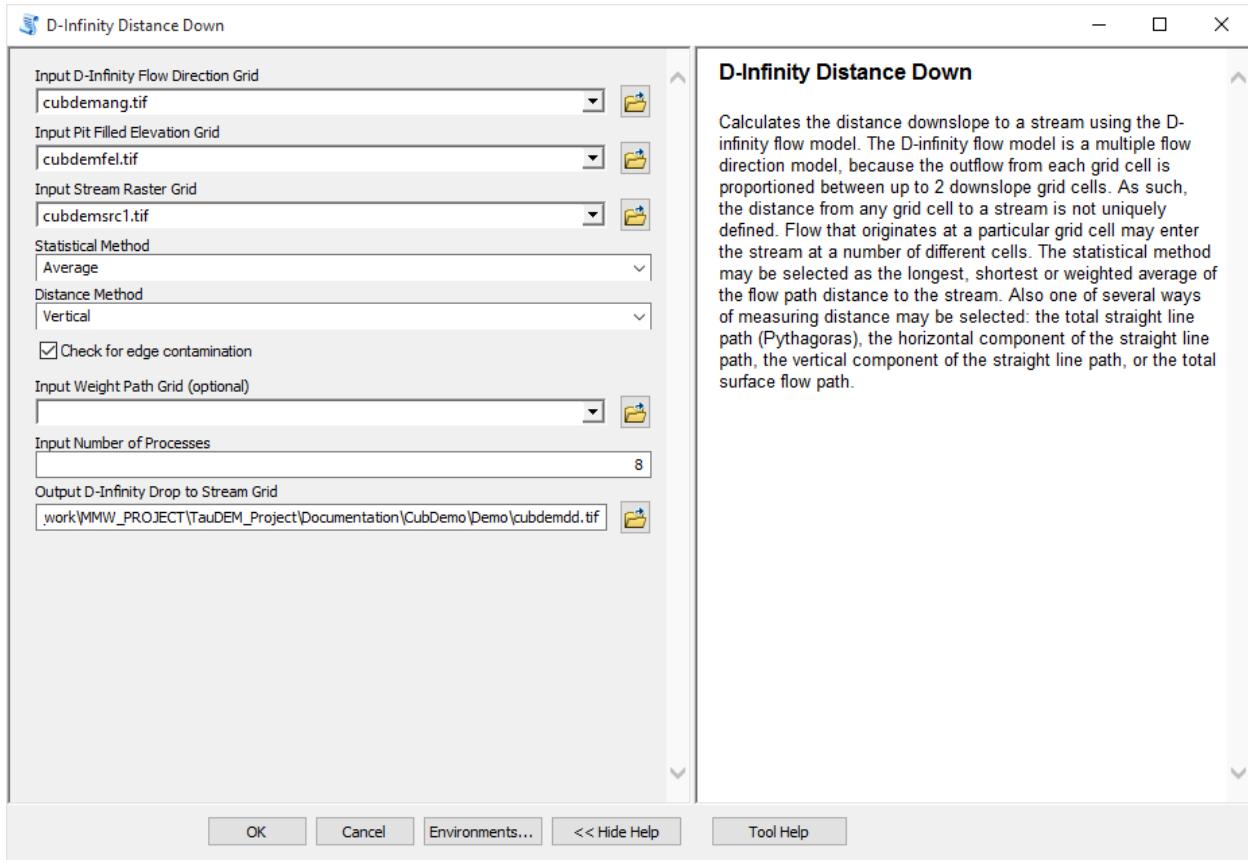


By selecting Vertical as the distance method the result is the vertical drop from each point, to a point on the stream as illustrated below

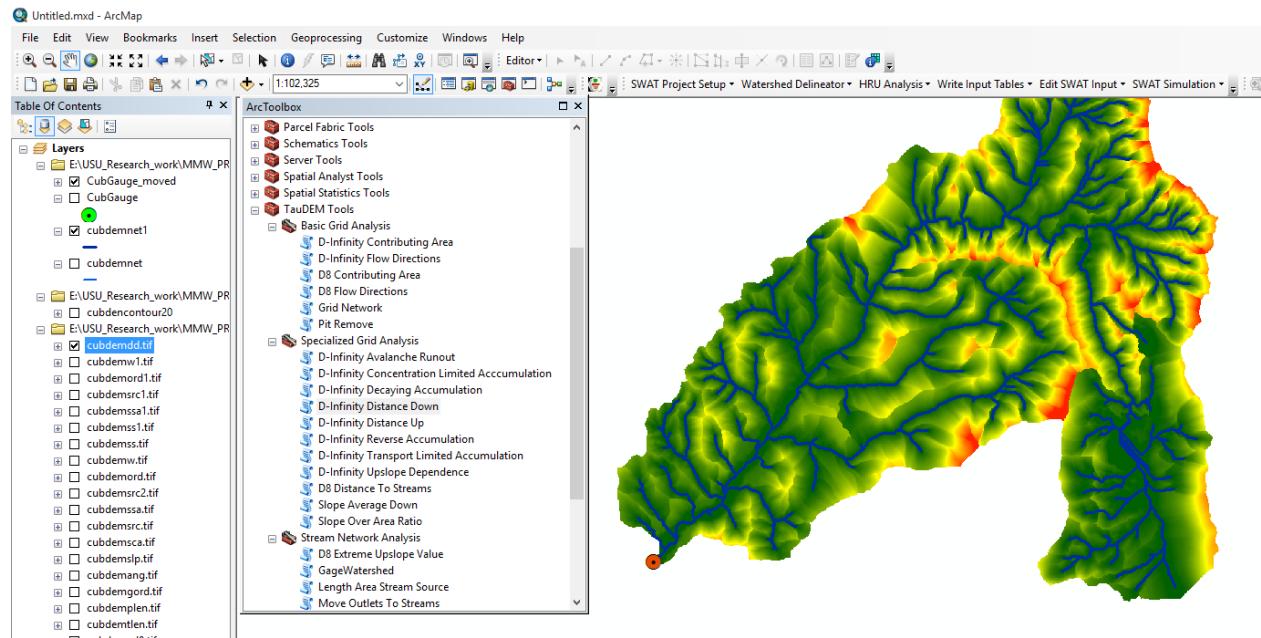

24. Open the **D-Infinity Distance Up** function and select the following inputs and click OK

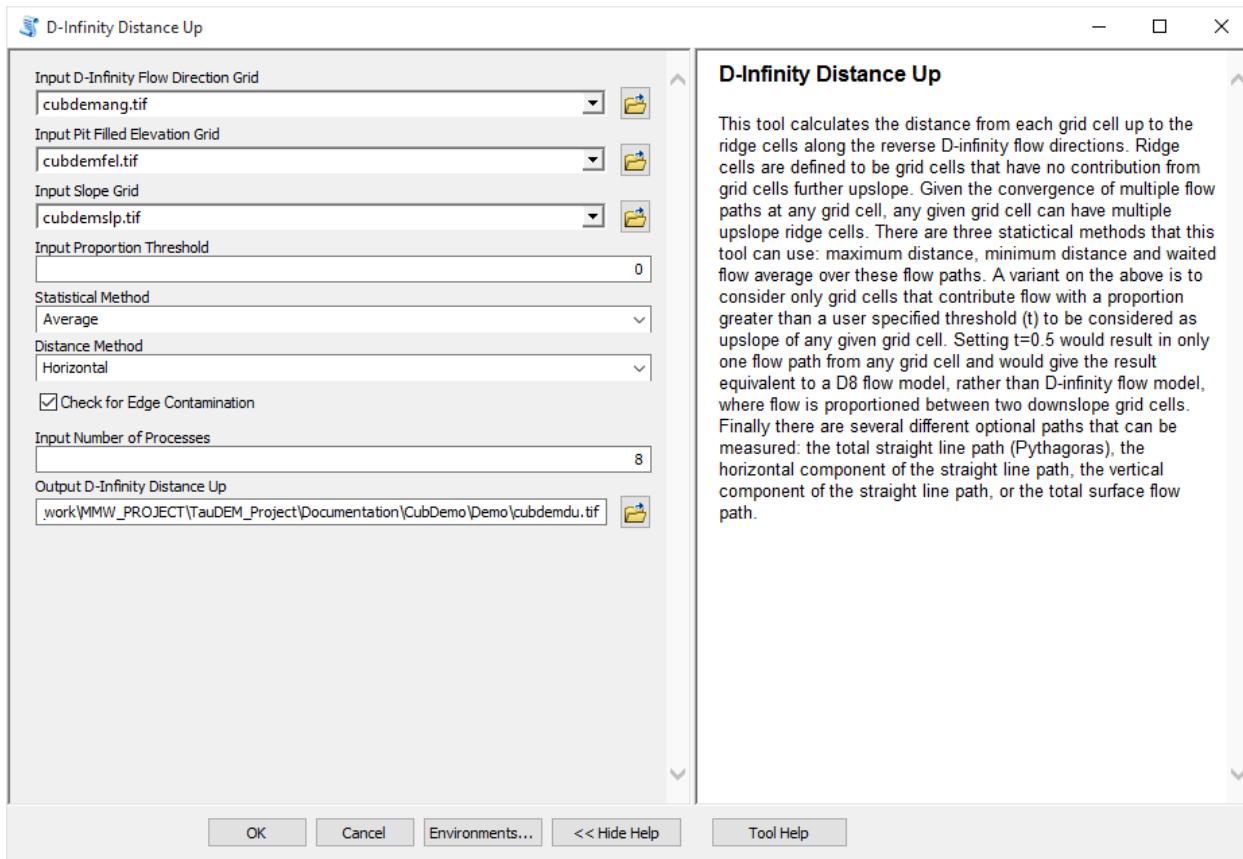


The result in this case is the average horizontal distance moving upslope along D-Infinity flow directions to a ridge, defined as a grid cell that has no other grid cells flowing in to it.

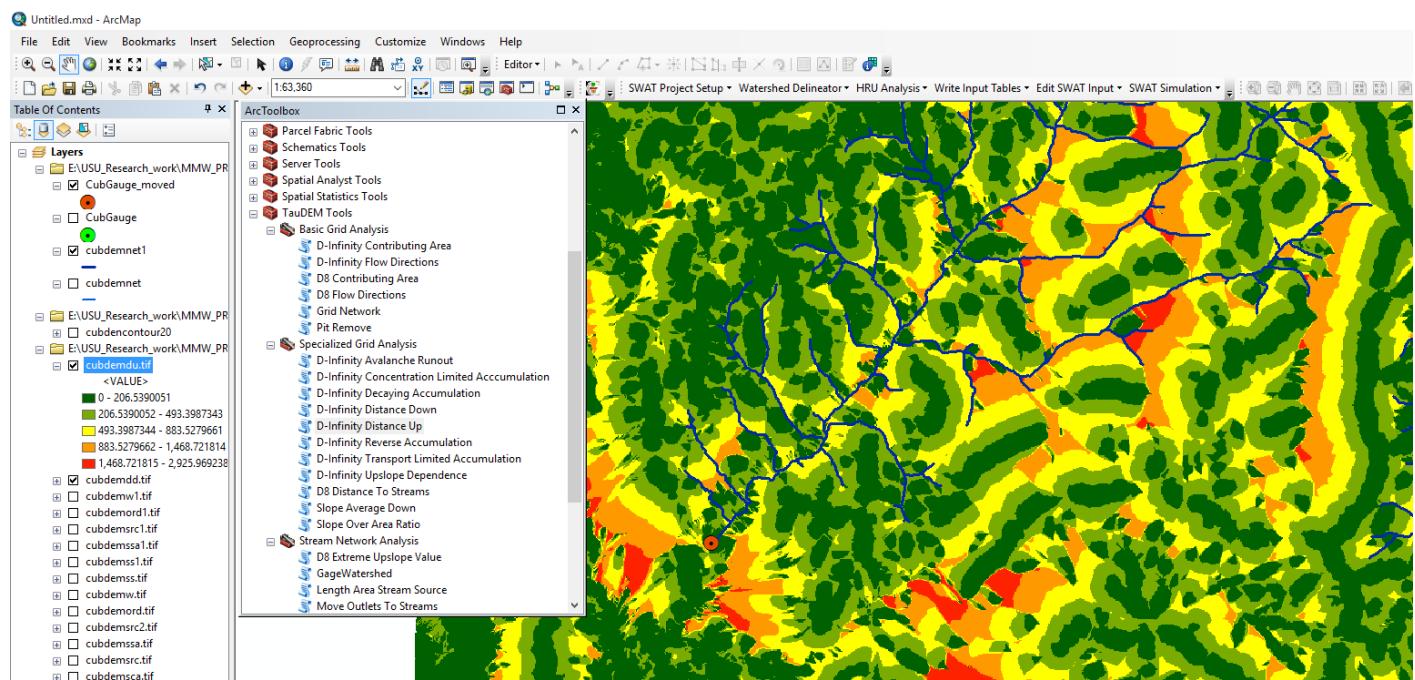


Basic Grid Analysis using TauDEM functions for Geographic data:


25. Download the Eno River example data file from <http://hydrology.usu.edu/taudem/taudem5>. Unzip the folder and load enogeo.tif into ArcMAP.

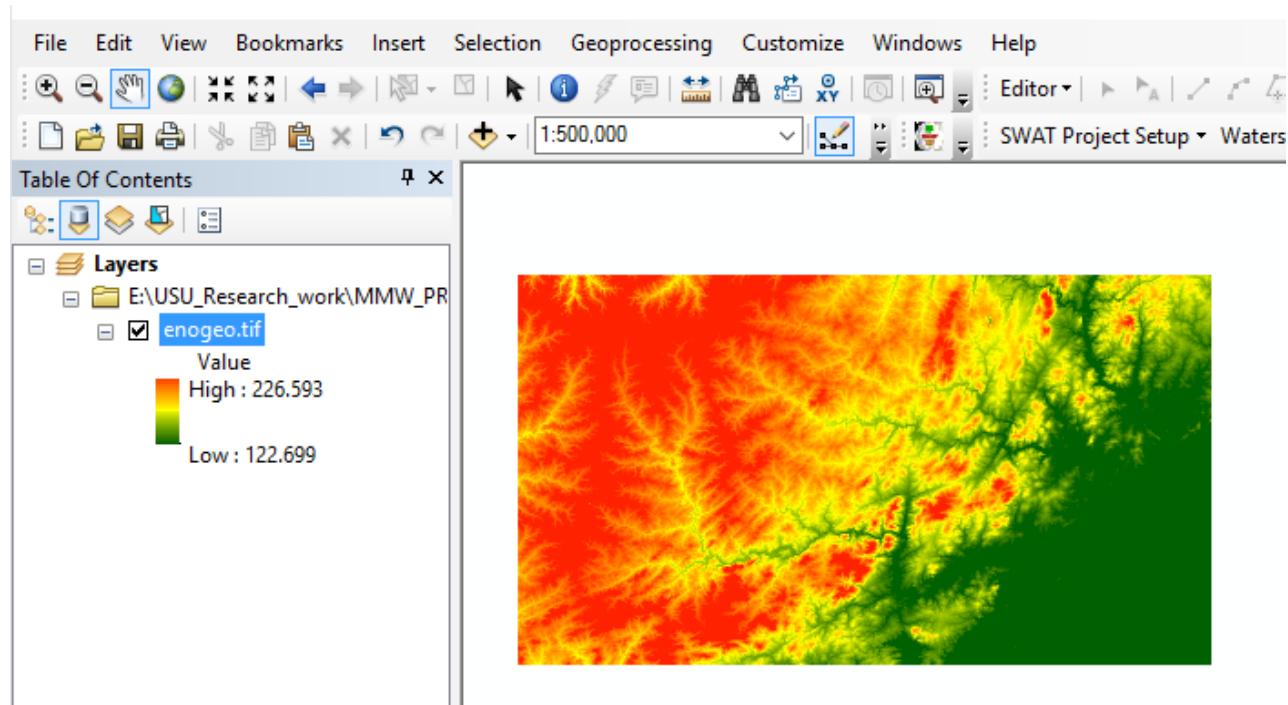


Click on the layer properties of enogeo.tif which shows that data is in the geographic coordinate system.

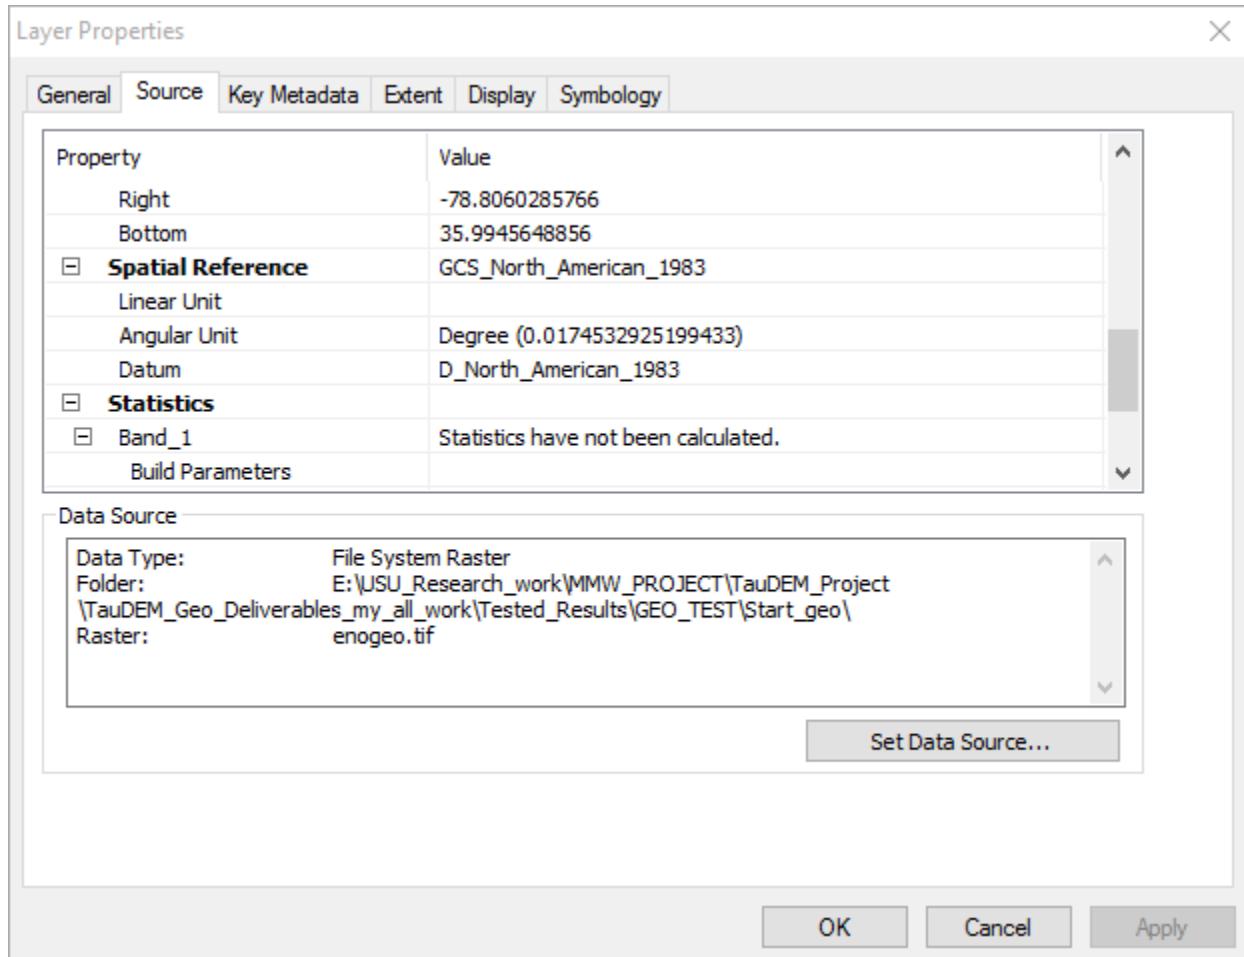


26. TauDEM 5.3 supports both geographic and projected coordinate data. Open the **PitRemove** function and select the following inputs and click OK

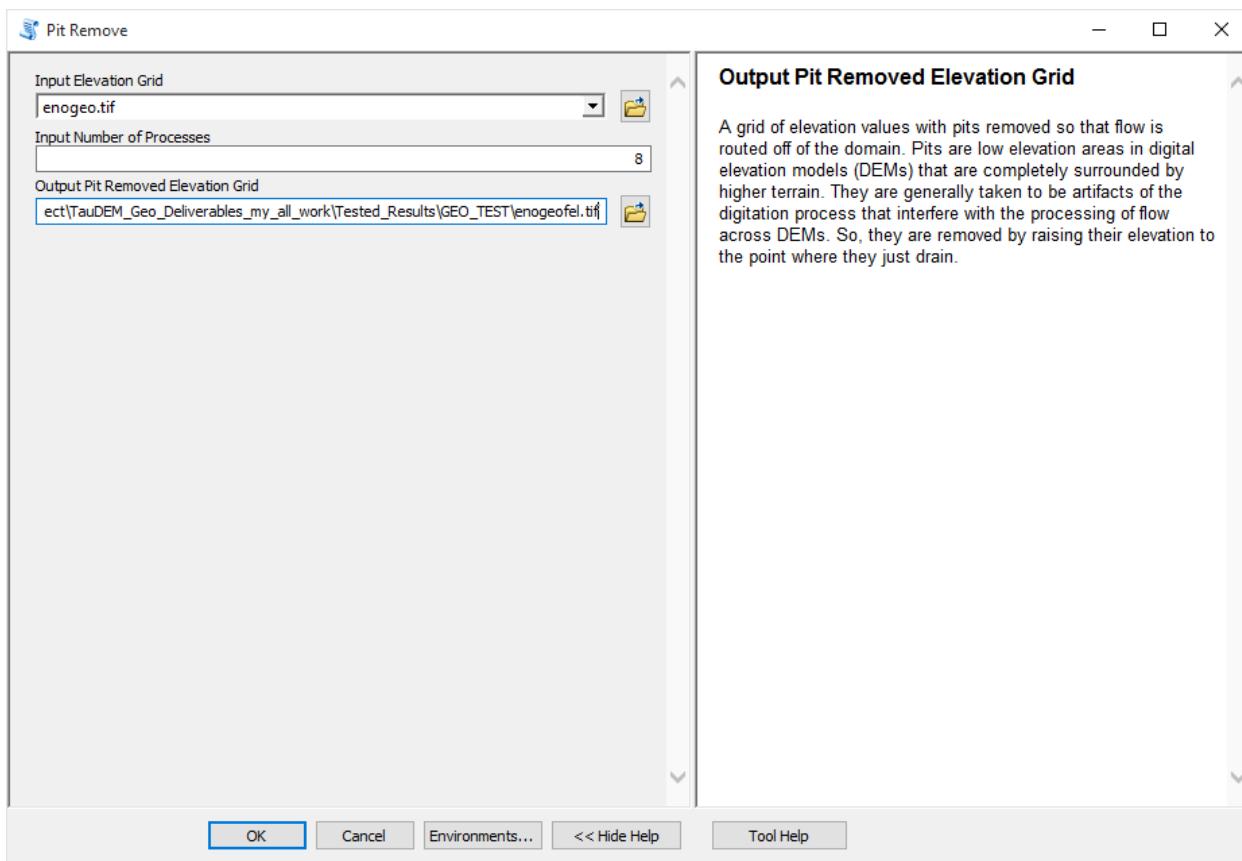


Click on the layer properties of enogeofel.tif which shows that it is also in the geographic coordinate system.

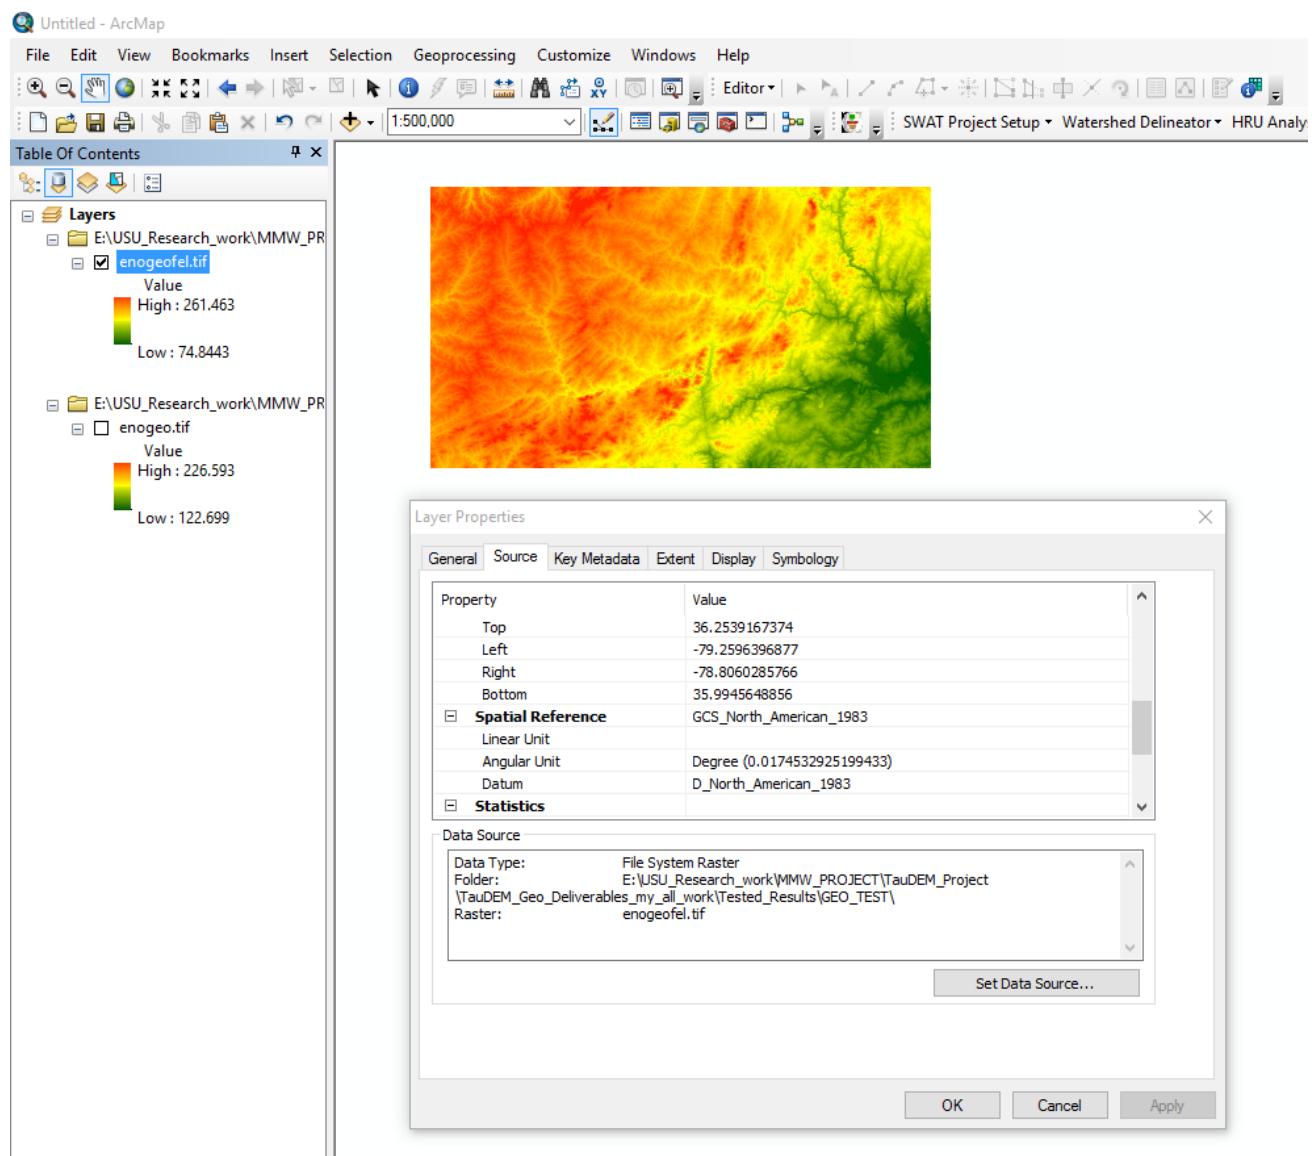

27. Open the **D8flow direction** function and select the following inputs and click OK.

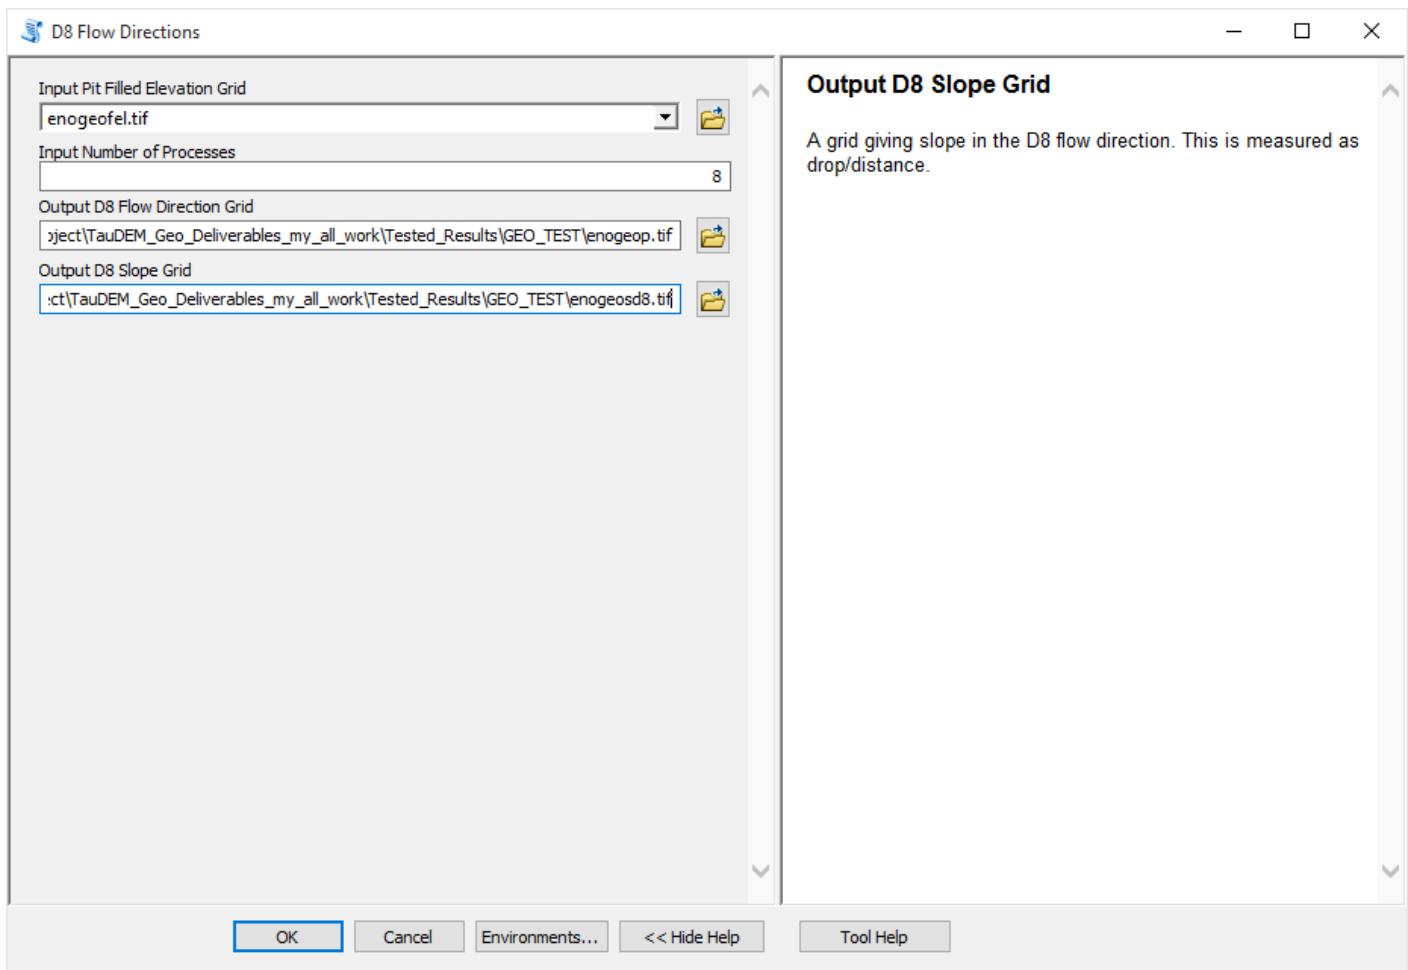

The resulting D8 flow direction grid (grid has suffix p) is illustrated which is also in geographic coordinate system.

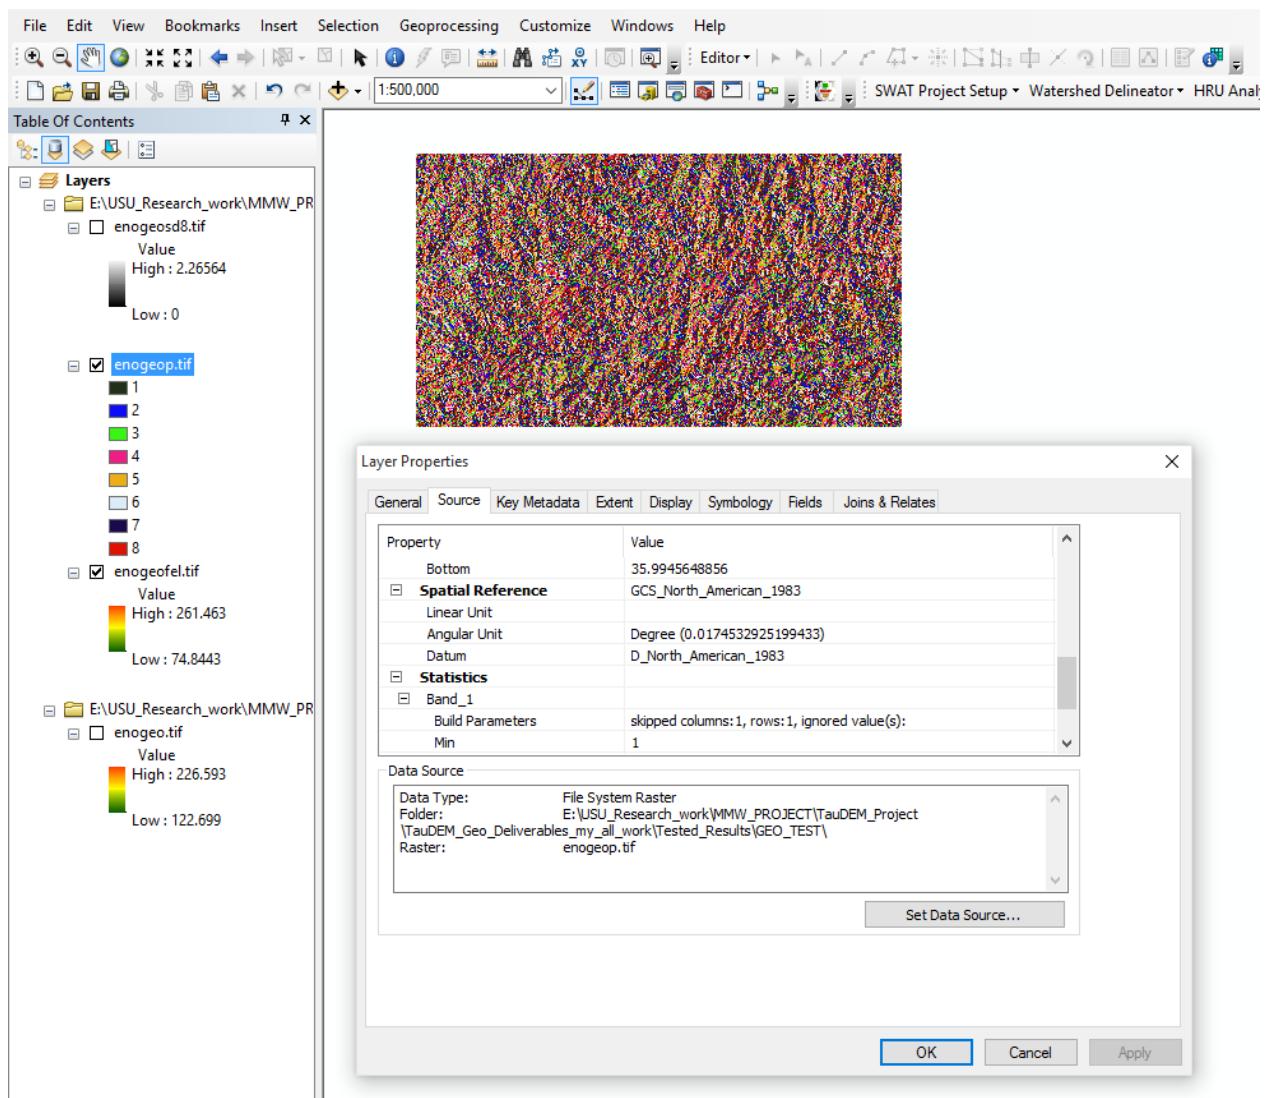

Similarly, other TauDEM functions can be applied for the geographic coordinate system data.

References

- Broscoe, A. J., (1959), "Quantitative analysis of longitudinal stream profiles of small watersheds," Office of Naval Research, Project NR 389-042, Technical Report No. 18, Department of Geology, Columbia University, New York.
- Tarboton, D. G. and D. P. Ames, (2001), "Advances in the mapping of flow networks from digital elevation data," World Water and Environmental Resources Congress, Orlando, Florida, May 20-24, ASCE, <http://www.engineering.usu.edu/dtarb/asce2001.pdf>.
- Tarboton, D. G., R. L. Bras and I. Rodriguez-Iturbe, (1991), "On the Extraction of Channel Networks from Digital Elevation Data," Hydrologic Processes, 5(1): 81-100.
- Tarboton, D. G., R. L. Bras and I. Rodriguez-Iturbe, (1992), "A Physical Basis for Drainage Density," Geomorphology, 5(1/2): 59-76.

