

AUTOMATION AND ROBOTIC PROJECT 1

Breton-Belz Emmanuel - UNISA 2015 - 2016



Table of contents

Introduction							
Wo	rk						
2.1	Comp	ute the roto-translation matrix	3				
	2.1.1	Required	3				
	2.1.2	Compute the matrix	4				
	2.1.3	Get the position and the rotation matrix relative to the end-effector	4				
2.2	Get th	e Euler angles	4				
	2.2.2	Extraction of the angles	5				
	Wo : 2.1	Work 2.1 Composite 2.1.1 2.1.2 2.1.3 2.2 Get the 2.2.1					

Chapter 1

Introduction

In this project we apply the theory seen in automatic and robotic course. The aim is creating a function that returns the most important parameters for moving the end-effector of the robot. We can see it on the figure 1 with it's own axes "ANS". This parameters are the position and the orientation of the end-effector, the rotation matrix of the end-effector and the roto-translation matrices for the differents input parameters (angles and translations of the joints).

The function takes two parameters, the first is a vector values representing the translation or the rotation of each axe. The is the type of representation we are in. It can be "ZYZ" or "RPY" (roll, pitch, yaw).

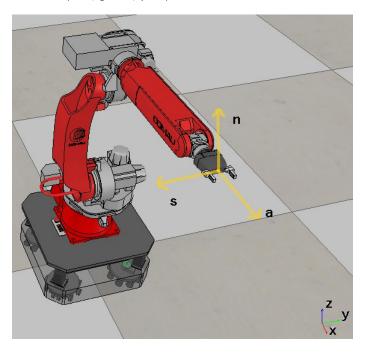


Figure 1.1: Robot smart5 six with a pince on the end-effector

Chapter 2

Work

2.1 Compute the roto-translation matrix

2.1.1 Required

To get the roto-translation matrix we need to multiply the different matrices for each junction and the A_0^b and A_e^n which are two constant matrix respectly represent the b to 0 transformation matrix and the n to e transformation matrix.

We also need the α angles for each junction. We put them in a vector called alpha_i which is $\left[\frac{\pi}{2} \quad \frac{\pi}{2} \quad \frac{-\pi}{2} \quad 0 \quad \frac{-\pi}{2} \quad \frac{\pi}{2} \quad \frac{-\pi}{2} \quad 0\right]$. We obtain this values by comparing the junction i's Z axis with the (i-1)'s Z axis.

On the figure 2.1.1 we can see the different axes of the robot. Each line correspond to a axe and the Z vector corresponds to the rotation axe. Then, if we take the second line, we have to make a clockwise rotation of $\frac{\pi}{2}$ to get its Z axe.

We also need a vector that we will call a that stores the distances between the axes that have the same Z orientation 2 by 2. We get this values in on the figure 4 of the documentation of the project. With the same figure we fill the di vector which stores the distance of the axes that doesn't have the same Z orientation. Finally, we create the $teta_i$ vector to store the angles of in parameter of the function.

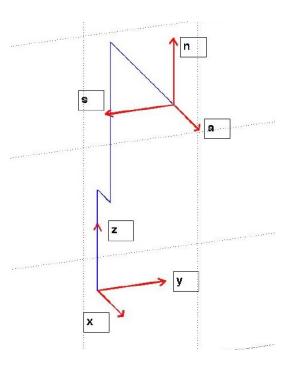


Figure 2.1: Stick view of the Smart5 Six



Link	α	θ	a	d	\overline{q}
1	$\frac{\pi}{2}$	0	0	d_1	d_1
2	$\frac{\frac{\pi}{2}}{\frac{\pi}{2}}$ $\frac{-\pi}{2}$	0	0	d_2	d_2
3	$\frac{-\pi}{2}$	θ_3	0.15	0.45	θ_3
4	0	θ_4	0.59	0	θ_4
5	$\frac{-\pi}{2}$	θ_5	0.13	0	θ_5
6	$\frac{-\pi}{2}$ $\frac{\pi}{2}$ $\frac{-\pi}{2}$	θ_6	0	0.64707	θ_6
7	$\frac{-\pi}{2}$	θ_7	0	0	θ_7
8	0	θ_8	0	0.095	θ_8

Figure 2.2: DH parameter table for each junction

2.1.2 Compute the matrix

We learned during the lessons that :
$$A_i^{i-1}(q_i) = A_{i'}^{i-1} A_i^{i'} = \begin{bmatrix} c_{\theta_i} & -s_{\theta_i} c_{\alpha_i} & s_{\theta_i} s_{\alpha_i} & a_i c_{\theta_i} \\ s_{\theta_i} & c_{\theta_i} c_{\alpha_i} & -c_{\theta_i} s_{\alpha_i} & a_i s_{\theta_i} \\ 0 & s_{\alpha_i} & c_{\alpha_i} & d_i \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

To store efficiently the values, we use a tridimentionnal matrix $4 \times 4 \times 8$ which makes a 4×4 per each junction. Using a for loop, we fill the matrix using the values of the a, di and $teta_i$ vectors.

2.1.3 Get the position and the rotation matrix relative to the endeffector

To get the position of the end-effector and the rotation matrix, we have to compute the general transition matrix denoted T. The formula is : $A_0^b \times \prod_{i=1}^n A_n^{n-1} \times A_e^n$. It corresponds to the $A_e^b(\overline{q})$ which is equals to $\begin{bmatrix} R_e^b(\overline{q}) & O_e^b(\overline{q}) \\ \overline{O}^T & 1 \end{bmatrix}$ It last to extract the $R_e^b(\overline{q})$ and the $O_e^b(\overline{q})$ matrices of the $A_e^b(\overline{q})$ matrix by writing :

$$\begin{array}{l} p \ = \ T(\begin{bmatrix} 1 & 2 & 3 \end{bmatrix} \,, \quad 4 \,) \,; \\ R \ = \ T(\begin{bmatrix} 1 & 2 & 3 \end{bmatrix} \,, \quad \begin{bmatrix} 1 & 2 & 3 \end{bmatrix}) \,; \end{array}$$

There we have the A transition matrix of all the junctions, the matrix of rotation from the base to the end-effector and the position of the end-effector. Now we will focus on the the Euler angles.

2.2 Get the Euler angles

2.2.1 Divide the different referentials

The two different referentials are 'ZYZ' and 'RPZ'. They are not axed the same way, that is why we differenciate 2 cases to extract the Euler angles ϕ , θ and ψ .



2.2.2 Extraction of the angles

List of Figures

1.1	Robot smart5 six with a pince on the end-effector	4
2.1	Stick view of the Smart5 Six	
2.2	DH parameter table for each junction	4