## **DepthVista**

# DepthVista Python User Manual



Version 1.1 e-con Systems 11/4/2022





#### Disclaimer

e-con Systems reserves the right to edit/modify this document without any prior intimation of whatsoever.



## Contents

INTRODUCTION TO DEPTHVISTA	4
DESCRIPTION	4
INSTALLING DEPTHVISTASDK IN UBUNTU	6
INSTALLING DEPTHVISTASDK IN WINDOWS	7
USING DEPTHVISTA PYTHON	8
REQUIREMENTS	8
LAUNCHING LINUX DEPTHVISTA PYTHON SCRIPT	8
LAUNCHING WINDOWS DEPTHVISTA PYTHON SCRIPT	8
SELECTING THE CAMERA DEVICE	8
SELECTING CAMERA PROPERTIES	9
SELECTING STREAMING MODE	9
SELECTING DEPTH RANGE	11
CAPTURING FRAMES	13
READING UNIQUE ID	14
READING FIRMWARE VERSION	15
EXITING THE APPLICATION	15
TROUBLESHOOTING	16
FAQ	17
GLOSSARY	20
SUPPORT	21



## Introduction to DepthVista

DepthVista is a 3D camera based on Time of Flight (TOF) technology, USB Video Class (UVC) compliant, USB 3.2 Gen 1 SuperSpeed USB camera from e-con Systems, a leading Embedded Product Design Services Company which specializes in advanced camera solutions.

DepthVista is a RGB-D camera containing both RGB and TOF depth cameras. RGB camera has 1/2.6" AR0234CS CMOS digital image sensor with global shutter from onsemi<sub>TM</sub>. It has dedicated high performance color image signal processor. TOF depth camera has 1/4" CCD sensor and dedicated depth processor. DepthVista is a two-board solution containing camera board with the USB 3.2 Gen 1 interface and Laser board along with enclosure.

This document describes the special features of sample camera application when it is used with DepthVista.

### Description

DepthVista has USB interface controller with USB Type-C connector to interface with the host PC. It is a ready-to-manufacture camera board with all the necessary firmware built-in and is compatible with the UVC version 1.0 standard. You can integrate this camera into the products, and this helps to cut short the time-to-market.

DepthVista is a UVC compatible and will work with the standard drivers available with Windows and Linux OS. There is no need for any additional driver installation. So, video streaming through UVC is possible without any special drivers on OSes that have built-in support for UVC standards.

Table 1: DepthVista supported Format, Resolutions, and Frame Rates

S.No	Format	Camera Mode	Resolution	Frame Rate (fps) USB 3.2 Gen 1
1	UYVY	RGB Mode	2.3MP (1920 x 1200)	30
			FHD (1920 x 1080)	30
			HD (1280 x 720)	60
			VGA (640 x 480)	60
2	Y16 (RAW	TOF Mode	Depth (640 x 480)	30
			IR (640 x 480)	30
			Depth + IR (640 x 960)	30
3	12-bit)	RGB-D Mode	1280 x 600 (RGB-D)	30
			1443 X 960 (RGB-D)	30

TOF camera in DepthVista can be used in two depth modes as follows:



- Far Mode: Effective depth range is between 1000 mm to 6500 mm.
- Near Mode: Effective depth range is between 200 mm to 1200 mm.

The TOF camera controls of DepthVista are as follows:

- TOF Data Mode
- TOF Depth Range
- TOF Mask
- TOF Gain

The RGB camera controls of DepthVista are as follows:

- Brightness
- Contrast
- Saturation
- Gamma
- Gain
- Sharpness
- White Balance
- Exposure
- Power line frequency

This document explains the following sections:

- Selecting the supported preview resolutions.
- Using supported controls.



## Installing DepthVistaSDK in Ubuntu

This section describes the installation of DepthVistaSDK in Ubuntu, which is essential for running DepthVista Python script

- Open DepthVistaSDKInstaller folder that is provided with this package.
- Open Linux folder and the appropriate Ubuntu version folder.
- Each version folder will have an install.sh file.
- Open a terminal in that directory to execute install.sh.
- Run the following command to give executable permission for install.sh file

chmod +x install.sh

 Execute the install.sh file to install the DepthVista SDK. Once installation is success, you will get "Installation DepthVistaSDK success".



## Installing DepthVistaSDK in Windows

- 1. Extract the given Package.
- 2. <Extracted Directory>/Windows/Bin/SDK/Dll/x64 will contain the Depth-VistaSDK.dll file.

(Note: Use x64 dll for x64 Python and x86 dll for X86 Python)

**3.** Copy the DepthVistaSDK.dll and place it in the Python Installation folder (root folder).



## Using DepthVista Python

This section describes how to use the DepthVista Python Script.

#### Requirements

Install the below requirements to run the DepthVista Python Script

- Python version 3.6 or 3.8
- OpenCV for python version 4.2 or 4.6
- Numpy package
- DepthVista SDK

### **Launching Linux DepthVista Python Script**

- Open a terminal from the location where the main.py file is located
- Run the following command to run the application.

```
sudo python3 main.py
```

#### **Launching Windows DepthVista Python Script**

- Open a command Prompt from the location where the main.py file is located
- Run the following command to run the application.

```
python main.py
```

#### **Selecting the Camera Device**

Initially the command line displays the number of devices connected to the PC. You must select the camera device to explore their features through the command line application.



Figure 2: Application launch screen.

## **Selecting camera properties**

Once the device is selected, camera properties that can be explored will be listed as shown below.

Figure 3: Selecting camera property.

### **Selecting Streaming Mode**

Steps to select the Streaming mode

1 Enter **2** in **Pick a Relevant Choice of Camera Properties** to select the streaming modes.



2 After selecting the Streaming mode option, all the streaming modes supported by the device will be listed as shown below.

Figure 4: Supported streaming modes.

You can set the streaming mode using the following options:

- Option **0** to exit from the application.
- Option 1 to go back to the previous menu.
- Option 2 to return to main menu.
- Option **3** to set Depth IR streaming Mode.
- Option 4 to set Depth streaming Mode.
- Option 5 to set IR streaming Mode.
- Option 6 to set Depth IR RGB(VGA) streaming Mode.
- Option **7** to set Depth IR RGB(HD) streaming Mode.
- Option 8 to set RGB (VGA) streaming Mode.
- Option 9 to set RGB (HD) streaming Mode.
- Option **10** to set RGB (Full HD) streaming Mode.



• Option 11 to set RGB (1200p) streaming Mode.

After selecting the preferred streaming mode, you will get the preview based on the streaming mode as shown

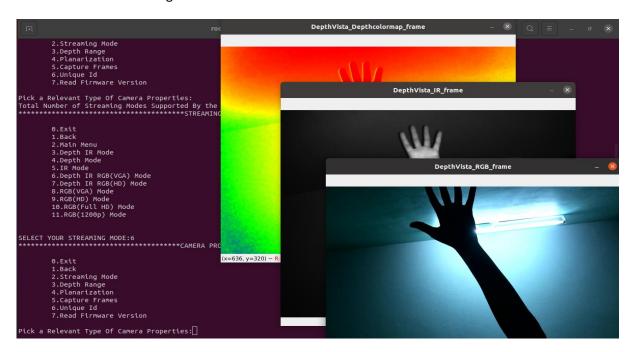


Figure 5: Preview after selecting streaming mode.

### **Selecting Depth Range**

Steps to select the Depth Range

- 1 Enter **3** in **Pick a Relevant Choice of Camera Properties** to select the Depth range.
- 2 After selecting the Depth range option, all the depth ranges supported by the device will be listed as shown below.



Figure 6: Supported depth ranges.

You can set the depth range using the following options:

- Option **0** to exit from the application.
- Option 1 to go back to the previous menu.
- Option 2 to return to main menu.
- Option 3 to set Near Mode.
- Option 4 to set Far Mode.

After selecting the preferred depth range, streaming will be updated based on the depth range selected.

### **Setting Planarization**

Steps to select the Planarization

1 Enter 4 in Pick a Relevant Choice of Camera Properties to enable and disable planarization.



2 After selecting the Planarization option, you will have the options listed as shown

Figure 7: Enabling and disabling Planarization.

You can set the planarization using the following options:

- Option **0** to exit from the application.
- Option 1 to go back to the previous menu.
- Option 2 to return to main menu.
- Option **3** to disable Planarization
- Option 4 to Enable Planarization.

After selecting the preferred planarization, streaming will be updated.

### **Capturing Frames**

Steps to capture frames

- 1 Enter **5** in **Pick a Relevant Choice of Camera Properties** to capture images.
- 2 Images will be saved based on the streaming mode and the location of the images will be shown as follows.



Figure 8: Capturing frames.

The files will be saved with the name as shown below.

- RGB Frame DepthVista\_rgb\_yyyy\_mm\_dd\_hrs\_min\_sec.png
- IR Frame DepthVista\_IR\_yyyy\_mm\_dd\_hrs\_min\_sec.png
- Depth Raw Frame DepthVista\_Raw\_yyyy\_mm\_dd\_hrs\_min\_sec.raw
- Depth Color map DepthVista\_Depth\_yyyy\_mm\_dd\_hrs\_min\_sec.bmp

### **Reading Unique ID**

Enter 6 in Pick a Relevant Choice of Camera Properties to read the Unique ID of that specific device. Unique ID of the device will be displayed as shown below.

```
0.Exit
     1.Back
     2.Streaming Mode
     3.Depth Range
     4.Planarization
     5.Capture Frames
     6.Unique Id
     7.Read Firmware Version
Pick a Relevant Type Of Camera Properties:6
UNIQUE ID OF THE CAMERA IS 871594987754555648
  0.Exit
     1.Back
     2.Streaming Mode
     3.Depth Range
     4.Planarization
     5.Capture Frames
     6.Unique Id
     7.Read Firmware Version
Pick a Relevant Type Of Camera Properties:
```

Figure 9: Reading Unique ID of the device.



### **Reading Firmware Version**

Enter 7 in Pick a Relevant Choice of Camera Properties to read the firmware version of that specific device. Firmware version of the device will be displayed as shown below.

```
0.Exit
     1.Back
     2.Streaming Mode
     3.Depth Range
     4.Planarization
     5.Capture Frames
     6.Unique Id
     7.Read Firmware Version
Pick a Relevant Type Of Camera Properties:7
0.Exit
     1.Back
     2.Streaming Mode
     3.Depth Range
4.Planarization
     5.Capture Frames
     6.Unique Id
     7.Read Firmware Version
Pick a Relevant Type Of Camera Properties:
```

Figure 10: Reading firmware version of the device.

### **Exiting the application**

Enter 0 in Pick a Relevant Choice of Camera Properties to exit the application.

Figure 11: Exiting the application



## Troubleshooting

1. Error: error while loading shared libraries: libdc1394.so.25: cannot open shared object file: No such file or directory

Run the following command in terminal

sudo apt-get install libdc1394-25





#### 1 Does external power supply require for this camera?

Yes, we need external power supply to get depth frames and it will be provided with the kit.

#### 2 What is the supported external power supply current ratings?

**External Power Supply** 

Input: AC 100-240v, 50/60HZ

Output: DC 12V, 4A

## 3 What's the current operating temperature range supported by DepthVista?

The current operating temperature range supported is 0°C to 50°C.

#### 4 What's the light source used in this camera?

This camera uses 2 VCSEL laser diodes that work in the NIR (Near InfraRed) spectrum (850nm) and is safe for human eyes.

#### 5 Can the depth range be improved further?

Yes. Depth range can be improved by changing the no of VCSEL LEDs and their intensity. This is going to involve a customization effort.

#### 6 Is DepthVista suitable for outdoor environment?

As the laser diodes used in this camera operate in the 850nm NIR range, the likelihood of interference from sunlight is very high if you use it in outdoor applications. Hence, this camera is more suitable for indoor environments.

#### 7 What's the maximum accuracy that can be achieved?

DepthVista offers an accuracy of <1%.

#### 8 Is the DepthVista camera is pre-calibrated?

Yes, this camera is factory calibrated. Do not disturb the casing or the lens, which would alter the calibration done.



#### 9 What's the minimum distance that the lens could focus?

The minimum working distance (distance between the camera and the object) for this camera is 20 cm.

#### 10 Are these ToF and RGB sensors synchornized?

Yes. Both these sensors work synchronously to make the best use of the depth and RGB data streams.

#### 11 What is IMU?

Inertial Measurement Units (IMUs) is a self-contained system that measures linear and angular motion usually with a triad of gyroscopes and triad of accelerometers and sometimes the magnetic field surrounding the body, also magnetometers.

IMU chip used is a 6dof (degree of freedom) IMU (Inertial Measurement Unit) featured with triaxial accelerometer and triaxial gyroscope, supports different modes of configuration.

#### 12 Why this camera is not supported in USB 2.0?

Due to Bandwidth limitations of RGB-D streaming in USB 2.0, this camera supports only USB 3.2 Gen1 speed.

#### 13 What's the depth resolution and frame rate supported by DepthVista?

DepthVista supports a resolution of 640x480 at a frame rate of 30 fps for depth measurement.

#### 14 What are the output formats supported by DepthVista camera?

Mode	Format
TOF	Y16(RAW 12-bit)
RGB	UYVY
RGB-D	Y16

#### 15 What is the shutter type on the sensor?

Both the TOF and RGB camera sensors are global shutter sensor.

#### 16 Does DepthVista comes with an enclosure?

Yes. This camera comes with a metal enclosure.

#### 17 What's the lens used in the DepthVista camera? - TOF and RGB

The lens used in the camera is S-mount (M12)



Description	RGB Camera	RGB Camera Depth Camera Lens	
	Lens		
Focal Length	3.252mm	2.16mm	
Diagonal FOV	90.09	99.75	

#### 18 What is the lens mount used?

The lens mount used in the DepthVista Camera reference design is S-mount M12 lens holder (M12 P0.5 lenses are supported by default).

#### 19 What is calibration? Why should I do that?

In DepthVista camera, we do depth calibration. Depth calibration process is carried out to get the accurate depth from the depth camera. Once the depth calibration is completed, calibration result parameters are programmed to the memory allotted for calibration in the SPI-flash.

#### 20 What are the warranty terms of DepthVista camera?

For warranty, please refer the warranty page.



## Glossary

**ROI**: Region of Interest.

**USB**: Universal Serial Bus

**UVC Compliant**: USB Video Class Compliant.



## Support

#### **Contact Us**

If you need any support on DepthVista product, please contact us using the Live Chat option available on our website - <a href="https://www.e-consystems.com/">https://www.e-consystems.com/</a>

#### **Creating a Ticket**

If you need to create a ticket for any type of issue, please visit the ticketing page on our website - <a href="https://www.e-consystems.com/create-ticket.asp">https://www.e-consystems.com/create-ticket.asp</a>

#### **RMA**

To know about our Return Material Authorization (RMA) policy, please visit the RMA Policy page on our website - <a href="https://www.e-consystems.com/RMA-Policy.asp">https://www.e-consystems.com/RMA-Policy.asp</a>

#### **General Product Warranty Terms**

To know about our General Product Warranty Terms, please visit the General Warranty Terms page on our website - <a href="https://www.e-consystems.com/warranty.asp">https://www.e-consystems.com/warranty.asp</a>



## **Revision History**

Rev	Date	Description	Author
1.0	17-October-2022	Initial Draft	Camera Products
1.1	04-November-2022	Changed steps for installation	Camera Products