OpenWRT Netbird

version 9

Latest version:

https://raw.githubusercontent.com/egc112/OpenWRT-egc-add-on/main/notes/OpenWRT%20Netbird.pdf

This is a WIP and just some poorly redacted personal notes, I am working to make a real install guide

Introduction

NetBird combines a WireGuard®-based overlay network with Zero Trust Network Access, providing a unified open source platform for reliable and secure connectivity

This sounds amazing and you can use it for remote access to your home network, to connect multiple routers and other clients (phone/PC/Mac etc.) and when setup as exit node as a remote VPN but you are using a commercial third party and although it is advertised as free and it is to some extent, they do have an incentive to pull you into a paid tier, besides they know your clients and routes but the traffic of course is still encrypted via the WireGuard encryption. But with Netbird you should be able to self host your control plane in which case none of the drawbacks should exist.

Usually you can do the same by setting up your own WireGuard server and clients.

WireGuard Server Setup Guide WireGuard Client Setup Guide

But this only works if you have at least a public IP address on one side of the connection. If you are behind CGNAT, so do not have a public IPv4 address and also do not have a public IPv6 address (check with: *ifstatus wan6*) or using IPv6 is not applicable then you have to involve a commercial third party as man-in-the-middle.

This can be a VPN provider which supports port forwarding (e.g. ProtonVPN), or you can rent a Virtal Private Server (I have an Oracle VPS which can be had for free, see at the bottom of this guide), or use things like Netbird, Zerotier, Cloudflared, Tailscale or ngrok and there are more.

I favor Netbird because it is open source and has some <u>advantages</u> over Tailscale, but all things mentioned will get the job done, using Netbird is just my personal choice.

Table of Contents

Introduction	
Make a free account on Netbird	2
Install Netbird on OpenWRT router	4
Network setup	5
Firewall setup	5
Allow SSH access from Dashboard	7
Create Routes	9
Create Networks	12
Create Exit node	13
Support	16
Netbird log	16
Install on Oracle VPS with Ubuntu (24.04)	16
Setup Oracle free OpenVPN cloud server	17
References	17


Make a free account on Netbird

go to: http://netbird.io


Click:

Get started - free


Sign up or login:

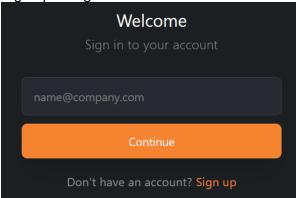


Now you are connected to your Netbird Dashboard the central administration:

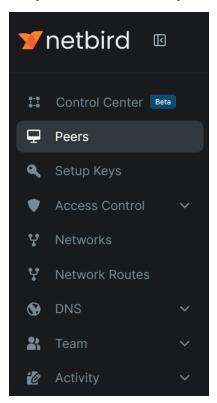

Create a setup key for your OpenWRT router: **Netbird Dashboard > Setup Keys**:

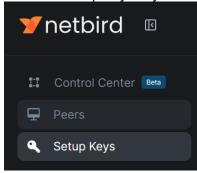

Fill in the name of your router and change the other items, shown are my settings, when done Click *Create Setup Key.*

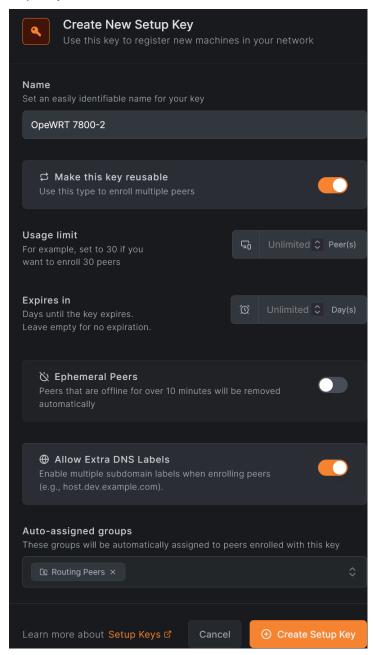

Copy and store the setup key

3

Install Netbird on OpenWRT router

For opkg: opkg update opkg install netbird

or for apk: apk update apk add netbird

Netbird is a rather large package around 20 MB written in Go so make sure your storage is sufficient


The netbird executable is stored in /usr/share/netbird, or in later versions (>0.55) in /usr/bin/netbird. The service is called from /etc/init.d/netbird config file (>0.55) is stored in /root/.config/netbird, you might add this path to /etc/sysupgrade.conf, so that it is included in the backup

When installed you can setup with:

netbird up --setup-key <key from previous step>

You can use *netbird help* to see the available commands e,g,: netbird up/down/status etc but using e.g.: service netbird status/stop/start etc. will also work (for complete list: *service netbird*)

In your Dashboard you can now see the installed peer

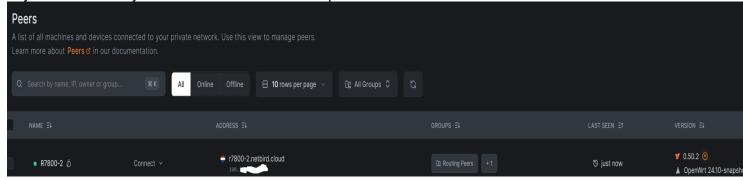

with ifconfig or ip address show on the router, you should see the new interface (device) wt0 If not reboot the router and check netbird status: netbird status


Network setup

Create a new unmanaged interface via LuCI: Network > Interfaces > Add new interface

• Name: netbird1

Protocol: Unmanaged

· Device: wt0

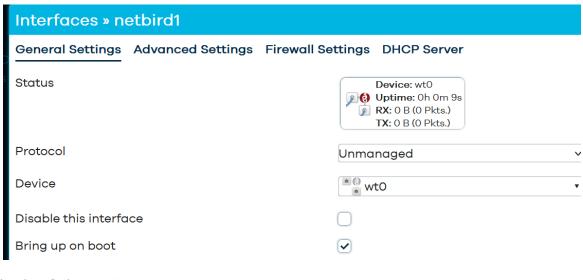

/etc/config/network:

config interface 'netbird1' option proto 'none' option device 'wt0'

Firewall setup

Create a new firewall zone via LuCI: Network \rightarrow Firewall \rightarrow Zones \rightarrow Add

· Name: netbird

• Input: ACCEPT (default)

Output: ACCEPT (default)

Forward: ACCEPT

• Masquerading: **off** (might be necessary under some circumstances)

• MSS Clamping: **on** (might not be necessary)

· Covered networks: netbird1

- Allow forward to destination zones: Select your LAN (and/or other internal zones or WAN if you plan
 on using this device as an exit node), as this is na exit node WAN is slected
- Allow forward from source zones: Select your LAN (and/or other internal zones or leave it blank if you do not want to route LAN traffic to other tailscale hosts)

Click Save & Apply

Firewall - Zone Settings

General Settings Advanced Settings Conntrack Settings

This section defines common properties of "netbird". The *input* and *output* options set the default policies for traffic ente option describes the policy for forwarded traffic between different networks within the zone. *Covered networks* specifies this zone.

Name	netbird
Input	accept
Output	accept
Intra zone forward	accept
IPv4 Masquerading	Enable network address and port translation IPv4 (NAT4 at typically enabled on the wan zone.
MSS clamping	
Covered networks	netbird1:
The options below control the forwarding policies between this zone Source zones match forwarded traffic from other zones targeted at permission to forward from wan to lan as well.	
Allow forward to destination zones:	lan lan: wg_stos_6: (empty) wan wan: wan6:
Allow forward from source zones:	lan lan: wg_stos_6: (empty)
/etc/config/firewall: config zone option name 'netbird' option input 'ACCEPT' option output 'ACCEPT' option forward 'ACCEPT' option masq '1' option mtu_fix '1' list network 'netbird1'	
config forwarding option src 'netbird' option dest 'lan'	
config forwarding option src 'lan' option dest 'netbird'	
# As this is an exit node traffic from netbird to config forwarding option src 'netbird'	wan is allowed

In the end **reboot** the router or do service network restart, service firewall restart and service netbird restart.

option dest 'wan'

Check with ifconfig (ip a) and ip route that the interface (wt0) and route are present:

root@DL-WRX36:~# ip address show wt0

31: wt0: <POINTOPOINT,NOARP,UP,LOWER_UP> mtu 1280 qdisc noqueue state UNKNOWN group default glen 1000

link/none

inet 100.105.224.116/16 brd 100.105.255.255 scope global wt0 valid lft forever preferred lft forever


root@DL-WRX36:~# ip route

default via 192.168.0.1 dev wan proto static src 192.168.0.9

100.105.0.0/16 dev wt0 proto kernel scope link src 100.105.224.116

Allow SSH access from Dashboard


In the **Netbird Dashboard** open the peer and *Enable SSH Access:*

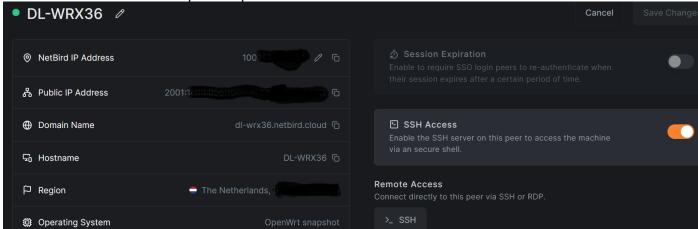


On the router

Make sure SSH is allowed (https://github.com/netbirdio/netbird/issues/2632): netbird down netbird up --allow-server-ssh

On your Netbird dashboard you should now be able to SSH into your router: Dashboard > Peers > Connect dropdown and click SSH:

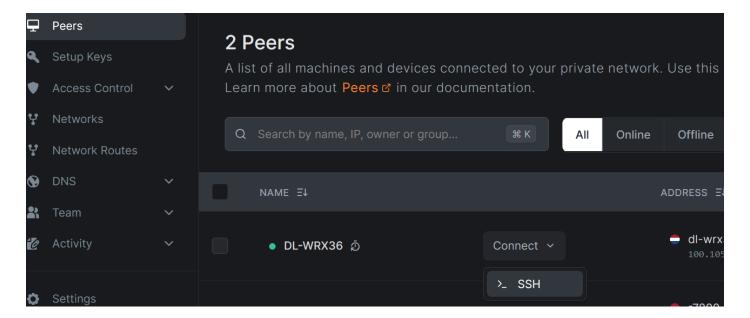

Connect with the default port 44338 to the in netbird included SSH server:

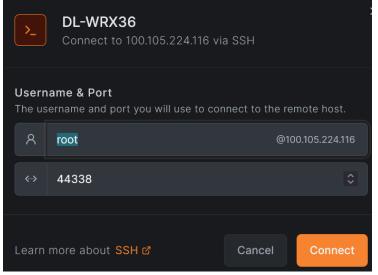

Create Routes

See: https://docs.netbird.io/how-to/routing-traffic-to-private-networks

Note for routing between your peers it is imperative that all involved subnets are unique!

My DL-WRX36 has subnet 192.168.9.0/24.


I will create a routing rule to create a route for this 192.168.9.0/24 subnet to my DL-WRX36 and push that route to all peers.

Those pushed routes are pushed to an alternate routing table on all peers, this table is usually called netbird.


Lets go:

Netbird Dashboard> Network Routes > Add Route


Add the network range to my DL-WRX36:

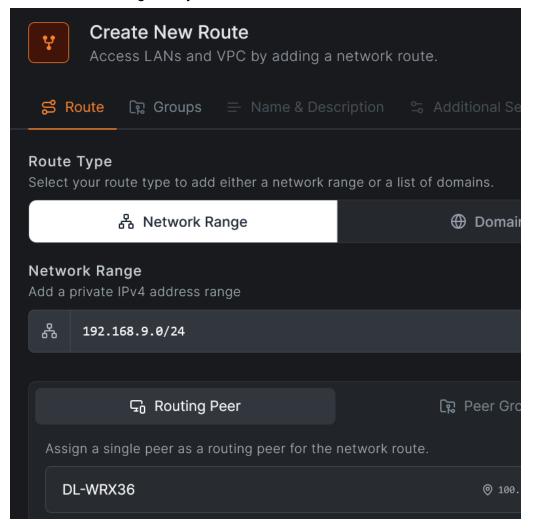


Advertise this route to all my peers:

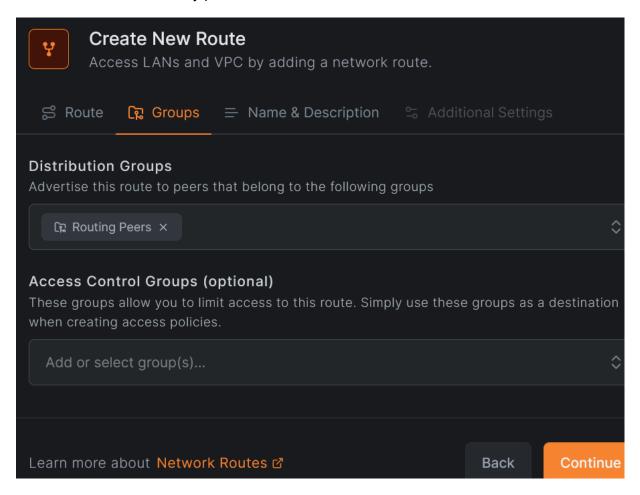

Name and description:

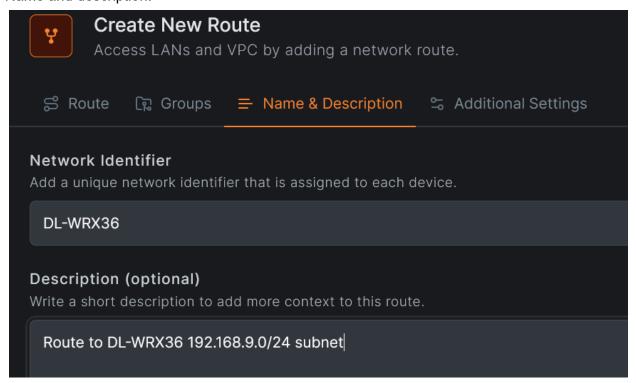

Additional settings:

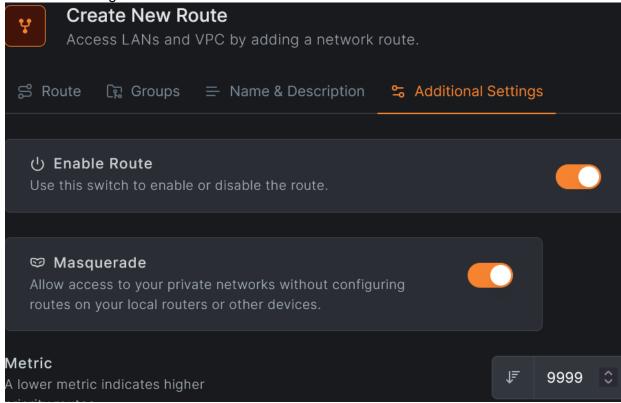

You might need to restart netbird on all peers

On my Oracle VPS I can now see the rules and the alternate routing table created by netbird: ubuntu@vps-egc:~\$ ip rule show

0: from all lookup local

105: from all lookup main suppress_prefixlength 0110: not from all fwmark 0x1bd00 lookup netbird

32766: from all lookup main 32767: from all lookup default

ubuntu@vps-egc:~\$

ubuntu@vps-egc:~\$ ip route sho table netbird

192.168.9.0/24 dev wt0 ubuntu@vps-egc:~\$

So from my oracle VPS there now is a route to my DL-WRX36 subnet

Create Networks

See: https://docs.netbird.io/how-to/networks

Using Networks comes instead of creating routes. Although the routes will stay valid and avalaible

OpenWRT by egc 12. Oct. 2025 12

Create Exit node


An exit node is a peer which acts as a VPN server other designated peers route all their traffic via the exit node.

On the exit node it is important that the firewall allows forwarding from **netbird** to **wan**, see paragraph about firewall.

N etbird documentation: https://netbird.io/knowledge-hub/netbird-network-routes, scroll down to he bottom.


Login in the Netbird dashboard

Peers > Click on the peer you want to be the exit node > On the overview page scroll to the bottom and click **Setup Exit node**

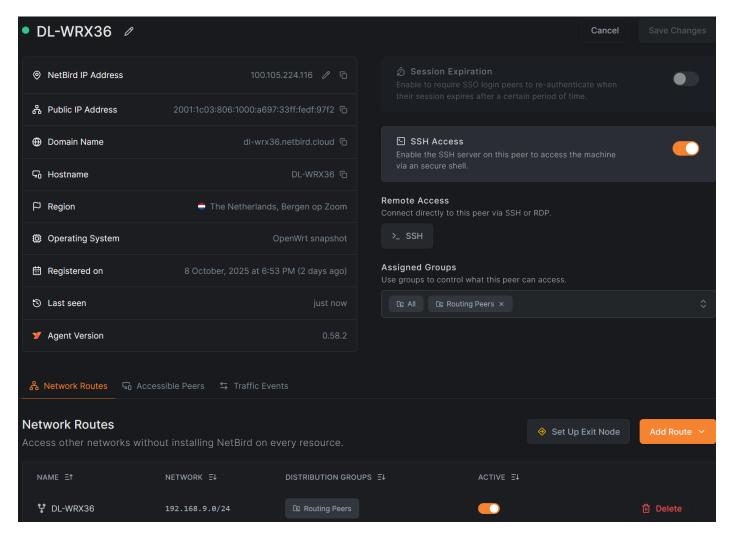


OpenWRT by egc 12. Oct. 2025 13

Under **Groups** add the peers you want to use the exit node, I had created a group **Routing Peers** and I want all those peers to use this router as exit node

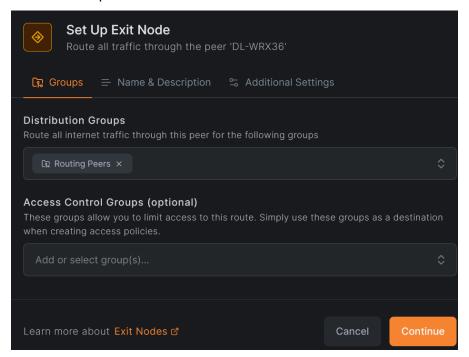


Continue

Fill in names and Description:

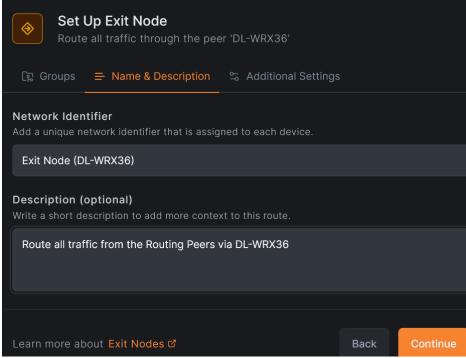

Continue


Enable Route and Auto Apply Route

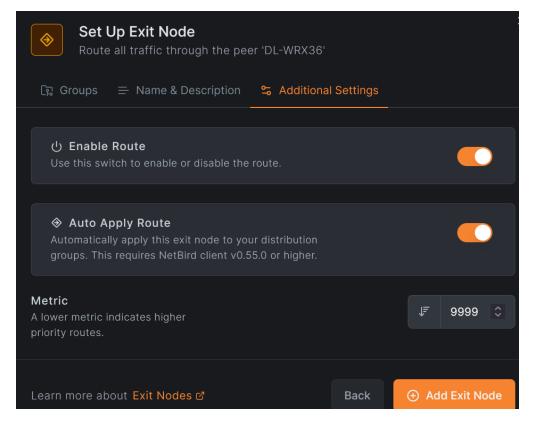

Add Exit Node

My DL-WRX36 is running Snapshot with Netbird 0.58 (you can see it on the overview page if you click on the Peer) so all routes are applied automatically.

My DL-WRX36 now has set a route to its own subnet (which is 192.168.9.0/24), pushed to all the Routing peers en an Exit node which pushes a default route to all the routing peers.

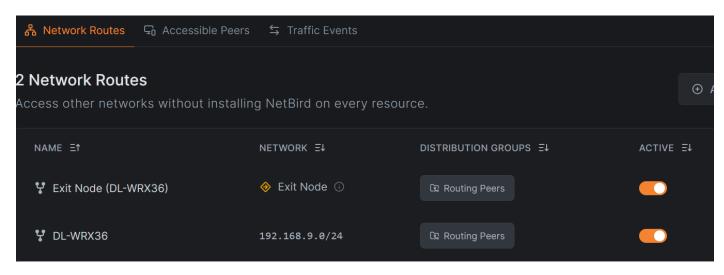

You can check on one of the other routing peers e.g. my R7800-2 where you can see the pushed default route and the pushed route to reach the DL-WRX36:

root@R7800-2:~# ip route show table netbird default dev wt0 192.168.9.0/24 dev wt0 root@R7800-2:~#

Now all traffic from the R7800-2 (and all its clients are routed) via Netbird, Netbird internally routes this traffic to the exit node.

Support

For support and questions see the Netbird support thread: https://forum.openwrt.org/t/netbird-support-discussion-thread/237831/8

Netbird log

Showing netbird log: cat /tmp/log/netbird/client.log

Install on Oracle VPS with Ubuntu (24.04)

sudo apt-get update

sudo apt install ca-certificates curl gnupg -y

curl -sSL https://pkgs.netbird.io/debian/public.key | sudo gpg --dearmor --output /usr/share/keyrings/netbird-archive-keyring.gpg

echo 'deb [signed-by=/usr/share/keyrings/netbird-archive-keyring.gpg] https://pkgs.netbird.io/debian stable main' | sudo tee /etc/apt/sources.list.d/netbird.list

sudo apt-get update sudo apt-get install netbird # only for the GUI #sudo apt-get install netbird-ui

netbird up -setup-key <setup-key made on dashboard> --allow-server-ssh

Log on Ubuntu: cat /var/log/netbird/client.log

SSH access note that the user name is usually: ubuntu

For (SSH) Access add thes firewall rules

sudo iptables -l INPUT 3 -p udp --dport 3478 -j ACCEPT # NetBird TURN sudo iptables -l INPUT 4 -p tcp --dport 44338 -j ACCEPT # SSH service port from netbird

sudo iptables -I INPUT 5 -p udp --dport 51820 -j ACCEPT # NetBird WireGuard #sudo iptables -t nat -I POSTROUTING -o ens3 -j MASQUERADE #To Masquerade traffic

Make persistent:

sudo netfilter-persistent save

vcn-XXX > Security > Default Security List for vcn-XXX > Security rules:

☐ No	0.0.0.0/0	UDP	All	3478
☐ No	0.0.0.0/0	TCP	All	44338
☐ No	0.0.0.0/0	UDP	All	51820

Setup Oracle free OpenVPN cloud server

https://www.youtube.com/watch?v=E-CLtExRzX8 https://mateo.cogeanu.com/2020/wireguard-vpn-pihole-on-free-oracle-cloud/

References

Netbird support thread: https://forum.openwrt.org/t/netbird-support-discussion-thread/237831/8 Upgrade form 0.50 to 0.58: https://github.com/netbird/issues/4322

OpenWRT by egc 12. Oct. 2025 17