

OnSpeed Generation 2 Version 3 Assembly Procedure

INTRODUCTION

This document is intended as a guide for procuring and assembling the components necessary to build the OnSpeed Generation 2 controller. The programming of the actual microcontroller modules, assembly of the wiring harness, installation, and calibration of the OnSpeed Generation 2 system in your aircraft will be covered in separate documents. Keep in mind the fact that this is an “open-source project”. That means that it is up to the user to take responsibility for the procurement of the components as well as assembly. While the OnSpeed team will attempt to provide a reasonable level of support, in the end it is up to the user to make a successful outcome for their installation possible. Please keep in mind that while the OnSpeed team provides parts lists and supplier recommendations the end user will make the final decision on where and how the components are procured. The OnSpeed project does not have any relationship with or receive any renumeration from any of the suppliers.

This procedure is a “living document” that is intended as a guide, if you have nay comments on how it could be made better or clarify any part of the procedure please share it with us so we can improve the document in the future.

BEFORE YOU START

Go to our web site at <https://www.flyonspeed.org/gen-2> and download the latest parts list, schematic, and most recent version of the “Hardware Assembly Instructions” (this document).

Note that the information on loading the software as well as building the harness, installation, and calibration are at this same location and covered separately from the assembly of the OnSpeed controller electronics module itself.

PROCURING THE PARTS

The OnSpeed Generation 2 electronics assembly is comprised of all “off the shelf” parts that are available for multiple sources. The supplied parts list has links to one or more recommended suppliers to assist the user in the procurement of components. The referenced parts list spreadsheet, schematic, and drawings provide information to support the assembly.

Electronics – The parts list spreadsheet referenced above provides an item by item list of the component parts necessary to build the OnSpeed Generation 2 electronics assembly. In addition, we have prepared online shopping lists/bills of material (BOM) for the electronics components with two common online vendors, Mouser and Digi-Key. These are available for review and/or ordering simply by navigation to the URL’s provided below. These are provided as a convenience only and by no means are a recommendation of any vendor or parts supplier. The balance of the parts are available from the vendors listed in the spreadsheet.

Mouser project

<https://www.mouser.com/ProjectManager/ProjectDetail.aspx?AccessID=c6a6482de2>

DigiKey BOM

<https://www.digikey.com/BOM/View?id=8122873> (link only works when logged into DigiKey account)

ASSEMBLING THE OnSpeed Generation 2 ELECTRONICS

The OnSpeed project is an open source project that may be built by anyone that has the interest, requirement, and resources. The OnSpeed team only provides the information necessary to build, install, calibrate, and use the OnSpeed system. The project does not manufacture or supply any hardware or products beyond that. This means that you have to do a little work, of course, but considering that most pilots and aircraft owners that would be interested in using this

technology probably have some degree of electronics expertise, this should not be much of an impediment. If you do not have any experience soldering kits such as the OnSpeed electronics, we recommend that you ask around... chances are that someone at your airport, local EAA chapter, or the nerd next door, would be more than happy to assist you for a small bribe (beverages work well!).

About Soldering the OnSpeed Electronics

Assembling your OnSpeed electronics isn't that hard, especially if you have experience with assembling electronics or working on your aircraft. However, we do not recommend that you choose this as your first foray into electronics assembly. You must be able to solder small components using fine solder and get nice shiny solder joints. If you have never soldered before, we suggest that you find someone with experience in these processes that can perform the assembly for you or better yet, be your advisor and assist you in learning the skills. For soldering components on a board like the OnSpeed generation 2 electronics, we recommend a small pencil soldering iron, about 15W. If you are only going to use it occasionally, Weller makes a decent cheap 12W iron, it's about \$15. There is also a similar iron that's sold by ECG. We like those, but the copper tips seem to oxidize and corrode rather quickly compared to some more expensive irons; fortunately, the tips are replaceable and cheap. Better would be a fancier soldering pencil with iron tips; those run about \$30, but they'll last forever. The best iron would be a temperature-controlled solder station, they typically start at about \$50 for a cheap one and can go to a few hundred dollars if you want to get really fancy. Weller makes a good one for about \$50, if you make the investment that will probably be the last soldering iron you will ever need to buy. These solder stations usually have a little well with a tip-cleaning sponge, so they end up taking less room on your workstation too. Get the smallest tip you can find, preferably a small conical tip. It should be just about the same width as the GPS module pads, about 0.025".

General Assembly Information

We're sure that you are ready to get started, but before you do, you will need to get some tools together. The tools that you will need are:

- Low-wattage soldering iron, 15W or less, with a fine conical tip. (see above)
- Soldering iron tip cleaning sponge.
- Solder. We have had good results using lead free no clean solder from Kester. Here are a couple of examples:

Kester 275 No Clean Core K100LD Alloy .020" 24-9574-7610 Solder 1/2ounce 30feet -

<https://www.amazon.com/Kester-K100LD-24-9574-7610-Solder->

https://www.amazon.com/dp/B07J1VDFYV/ref=sr_1_19?keywords=Kester+lead+free+no+clean+solder&qid=1561508681&refinements=p_89%3AKester%7CKester+Solder%2Cp_72%3A1248921011&mid=1248919011&s=industrial&sr=1-19

Kester443-845 24-9574-7618 K100Ld Lead-Free No Clean Wire Solder.031" Diameter-Low Cost Alloy -

https://www.amazon.com/gp/product/B00FGHTTPE/ref=ppx_yo_dt_b_search_asin_title?ie=UTF8&psc=1

- Electronics soldering Flux. Sometimes it is easier to solder components if a small amount of soldering flux is used in the process. Here are a couple of examples that we have had success with:

Kester 959T Soldering Flux 2oz Bottle, No Clean Lead Free –

https://www.amazon.com/Kester-959T-Soldering-Bottle-Clean/dp/B01N11M60P/ref=sr_1_4?keywords=MG+Chemicals+Lead+Free+NO+Clean+Flux&qid=1561509145&s=industrial&sr=1-4

MG Chemicals 836LFNC Lead Free NO Clean Flux, 1 Liter, Bottle –

https://www.amazon.com/MG-Chemicals-Clean-Litre-Bottle/dp/B01MYEE84K/ref=sr_1_3?keywords=MG+Chemicals+Lead+Free+NO+Clean+Flux&qid=1561509371&s=industrial&sr=1-3

Note: If you are using bulk liquid flux, a small needle type applicator is handy.

2 Needle Tip Bottle Liquid Flux Dispenser Oil Solvent Applicator Dropper 0.7 Oz –

https://www.amazon.com/gp/product/B00UG08QDC/ref=ppx_yo_dt_b_search_asin_title?ie=UTF8&psc=1

_____Antistatic work surface and wrist strap (see section on ESD below).

Here is an example:

Velleman AS9 Anti-Static Field Service Kit (Red) - Portable anti-static work surface - 24"x24"

https://www.amazon.com/Velleman-AS9-Anti-Static-Field-Service/dp/B004XZQ30Y/ref=sr_1_8?keywords=esd+mat&qid=1561511434&refinements=p_85%3A2470955011&nid=2470954011&rps=1&s=gateway&sr=8-8

_____Small needle-nose pliers.

_____Small diagonal cutters.

_____A small damp sponge for cleaning the tip of your soldering iron.

_____A lighted magnifier (either a lighted "ring" type, or a lighted "head" type).

_____A jeweler's loupe or small 10x magnifier, for inspecting the SMT solder joints(not essential but VERY helpful)

_____A well-lighted place to work, preferably with a wood or metal surface, also preferably not carpeted.

If you drop an SMT part on a carpeted surface, you will NEVER find it...

_____Some PAPER masking tape (do NOT use Scotch® tape or electrical tape)

_____A round wooden toothpick.

We strongly recommend that you check off each installation step off as you go.

We have listed the steps in order to make it easiest to assemble the OnSpeed electronics, deviating from them isn't going to make your life any easier.

We strongly recommend that you consult the assembly pictures provided below.

Each step is pictured, so you can see exactly what you need to be soldering. Looking at the pictures as you go will help prevent you from soldering the wrong thing, or putting something in the wrong way.

HOW TO: Prevent Electrostatic Discharge Damage (ESD) During Assembly

It is important to observe some basic steps to protect your computer hardware from potential damage caused by Electro Static Discharge or ESD.

ESD is created when the electrical field surrounding different objects varies and becomes balanced. The spark that is created when contact balances the fields can cause damage to electronic components. Protecting electronic components, like the hardware in your computer, is an easy task if components are properly handled and basic precautions are used.

There are several items available on the market to reduce the likelihood of ESD, among those items are: ESD wrist strap, shoe sole grounder, and conductive shoes. It is recommended you properly ground yourself before contacting any computer components.

Here are some basic steps you can take to reduce the chance of causing ESD.

1. Check the humidity. Relative humidity above 40% actually reduces the resistance of items that could generate a charge making it more difficult to generate an ESD. Note that very high humidity (80% or more) could cause other types of issues like corrosion.
2. Provide a common ground for your electronic components. Any charge that might build up would be discharged safely through that common ground. ESD grounding straps that connect to the computer chassis make great common grounds.
3. Wear protective devices like wrist straps, sole grounders, and/or conductive shoes. These items help to prevent electrostatic charge from building.
4. Keep your components in the anti-static bag until you are ready to install them. These bags are designed to prevent a charge from building.
5. Be sure to prepare your work area as well as yourself prior to touching any components or assemblies in order to ensure that your personal static charge has been discharged before you start.

These basic steps can help you avoid damage to your sensitive electronic components by preventing ESD.

STEP BY STEP PROCEDURE

____ STEP 1 – Inventory all of the parts and familiarize yourself with all of the component parts against the parts list. Prepare your work area and tools as suggested above.

____ STEP 2 – Locate the housing front cover and inspect for burrs, hole locations, and other workmanship issues. If the cover has been machined for the D-Sub connector and pneumatic ports, continue to STEP 3. If the front housing cover plate has not had the holes for the D-Sub connector and AoA, Pitot, and Static ports machined, machine the holes per the supplied drawing.

____ STEP 3 – If the housing front cover has the three (3) PEM 10-32 captive fasteners (P/N SO4-032-10) for the Pitot, Static, and AoA ports installed, proceed to STEP 4. Otherwise, install the 10-32 PEM standoffs per the instructions for the SO4™/BSO4™ STANDOFFS1 on page SS17 of the PENN document “Bulletin SS318,SS™FASTENERS FOR USE IN STAINLESS STEEL SHEETS”.

(https://www.pemnet.com/fastening_products/pdf/ssdata.pdf)



Figure 1 – Front Cover Face with PEM Nuts Installed.



Figure 2 – Front Cover Back with PEM Nuts Installed.

____ STEP 4 – Locate the Brass Low-Pressure Barbed Tube Fitting, Nickel-Plated, for 5/64" Tube ID x 10-32 Thread Male Pipe (P/N 2844K12) and install them on the PEM captive fasteners on the front face of the housing front plate in the

locations AoA ("A"), Static ("S"), and Pitot ("P"). Tighten the fitting by hand, then tighten with a wrench to approximately 12-inch pounds torque. There are O-Ring seals on these fittings so thread sealant should not be necessary.



Figure 3 – Front Panel with Tube Fittings Installed.

_____ STEP 5 - Locate the barbed Tee fitting (P/N MCACS-1012-1132) and install it on the center 10-32 PEM fastener labeled "S" (Static). Position the lower part of the fitting with the two lateral ports with the ports to the sides. Tighten the fitting by hand, then tighten with a wrench to approximately 12-inch pounds torque.



Figure 4 – Front Panel Back with Barbed Tube Fittings Installed.

____ STEP 6 – Locate the two (2) straight Brass Low-Pressure Barbed Tube Fittings, for 5/64" Tube ID x 10-32 Thread Male Pipe. Install one of the 10-32 PEM fasteners on the front plate in the location labeled "P" (Pitot) and the second on the PEM fastener labeled "A" (AoA). Tighten the fittings by hand, then tighten with a wrench to approximately 12-inch pounds torque.

_____ STEP14 – Inspect printed circuit board for such things as rough edges, component holes that may be obstructed, misaligned solder mask, traces that are not fully plated or shorted together, etc.

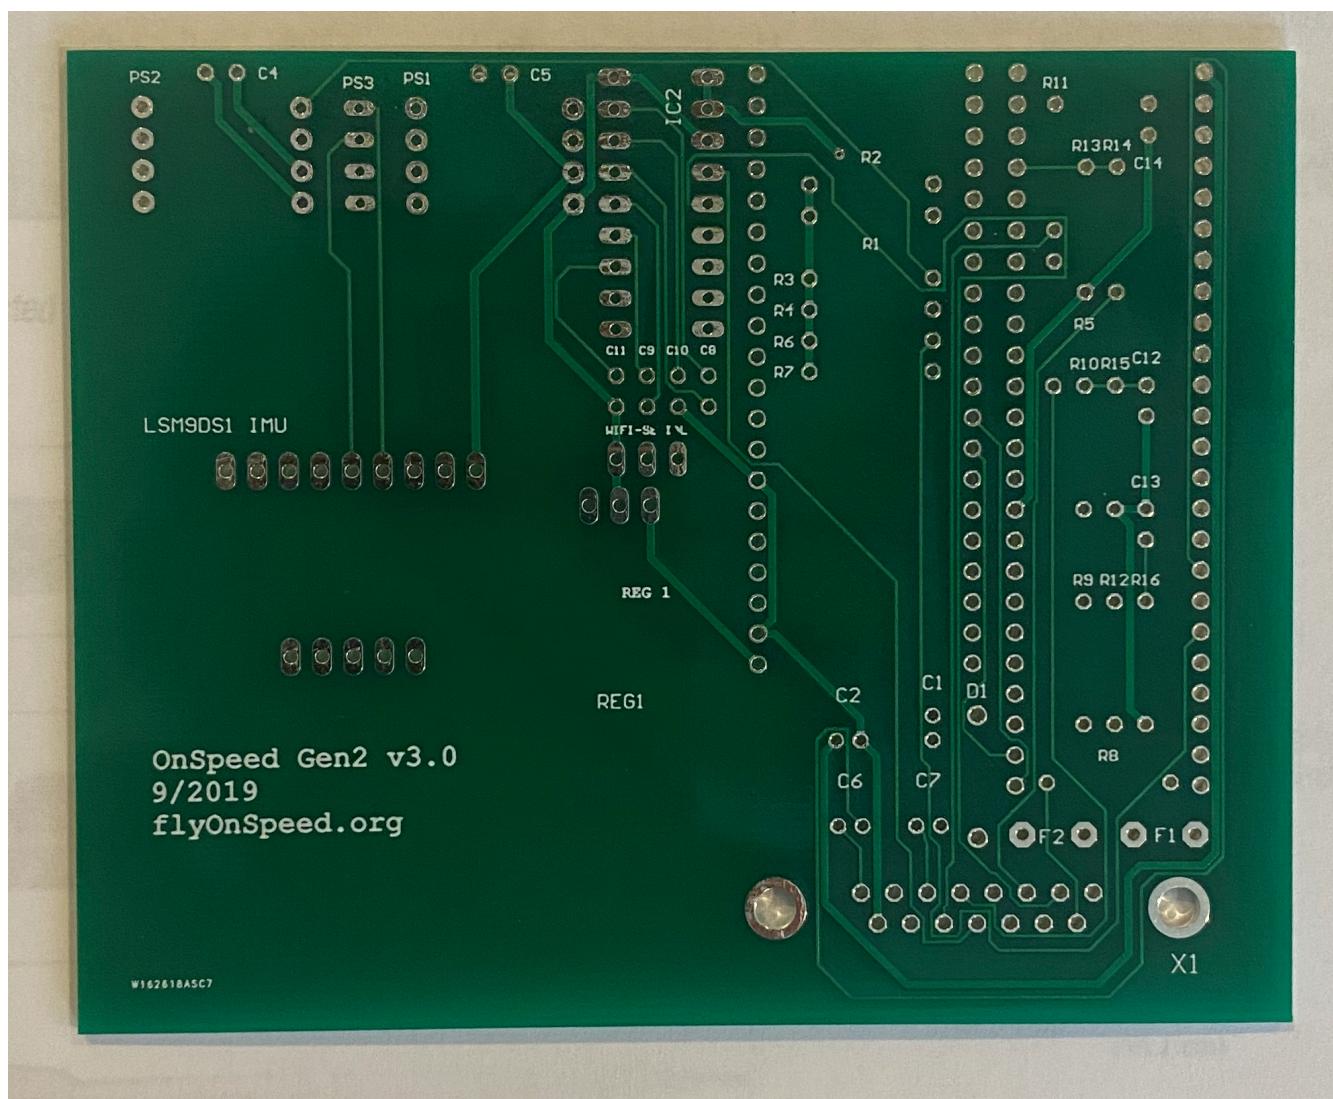


Figure 11 – PCB Top

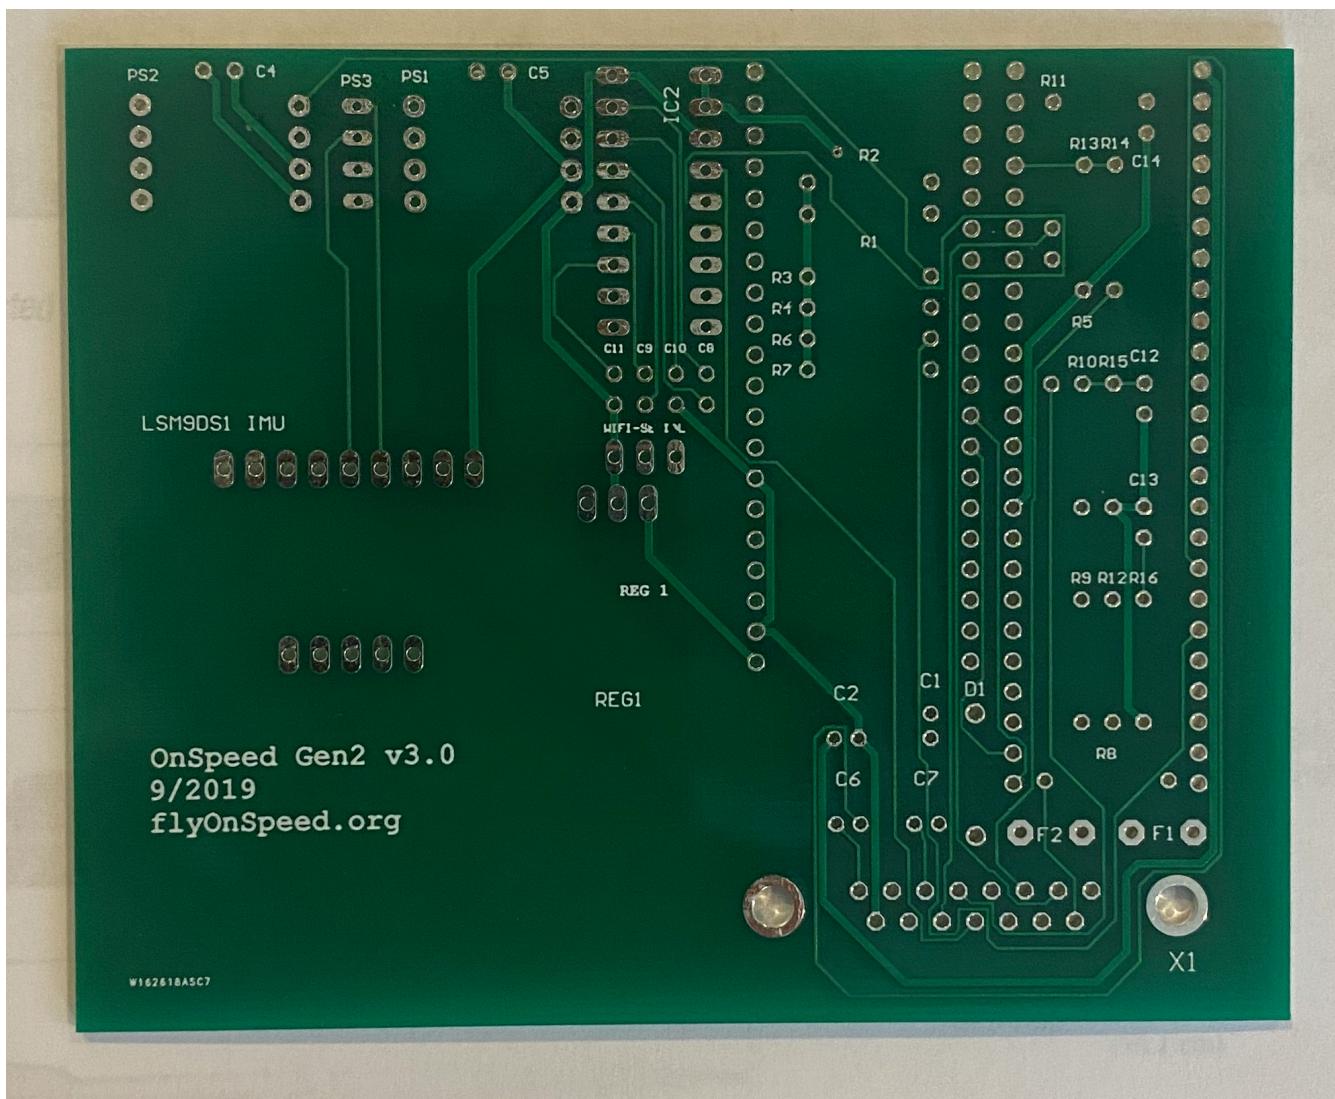


Figure 12 – PCB Bottom


Parts list for PCB

Qty	ID #	Description
1	R1	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R2	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R3	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R4	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R5	Carbon Film Resistors - Through Hole 150 ohm 5% 1/2W Carbon Film
1	R6	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R7	Carbon Film Resistors - Through Hole 1/4W 4.7K Ohm 5
1	R8	Carbon Film Resistors - Through Hole 150 ohm 5% 1/2W Carbon Film
1	R9	Carbon Film Resistors - Through Hole 22K ohm 1/4W 5%
1	R10	Carbon Film Resistors - Through Hole 22K ohm 1/4W 5%
1	R11	Carbon Film Resistors - Through Hole 150 ohm 5% 1/2W Carbon Film
1	R12	Carbon Film Resistors - Through Hole 22K ohm 1/4W 5%
1	R13	Carbon Film Resistors - Through Hole 1/4W 20K Ohm 5%
1	R14	Carbon Film Resistors - Through Hole 150ohm 5% 1/2W Carbon Film
1	R15	Carbon Film Resistors - Through Hole 5.6K ohm 1/4W 5%
1	R16	Carbon Film Resistors - Through Hole 5.6K ohm 1/4W 5%
1	F1	Resettable Fuses - PPTC 60v Max 40Amps Max Hold .50 Trip 1.00
1	F2	Resettable Fuses - PPTC 60v Max 40Amps Max Hold .10 Trip .20

Parts list for PCB (continued)

Qty	ID #	Description
1	C1	Aluminum Electrolytic Capacitors - Radial Leaded 10uF 50V
1	C2	Aluminum Electrolytic Capacitors - Radial Leaded WCAP-ATG5 0.1uF 50V 20% Radial
0	C3	NOT USED
1	C4	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C5	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C6	Aluminum Organic Polymer Capacitors 25V 10uF 20% ESR=70mOhms
1	C7	Aluminum Organic Polymer Capacitors 25V 10uF 20% ESR=70mOhms
1	C8	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C9	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C10	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C11	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C12	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C13	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	C14	Multilayer Ceramic Capacitors MLCC - Leaded 0.1uF 25volts X7R 10%
1	D1	Rectifiers Vr/50V Io/1A
1	Wif Serial	Headers & Wire Housings 1X03 POS VERT TIN
1	Wif iSockets	Headers & Wire Housings 20 CON STR BRDMNT SKT
1	Teensy sockets	Headers & Wire Housings 24P STRT BRD MNT SKT 1 ROW 10MICRO" AU
1	SUB-D / X1	D-Sub Standard Connectors DSUB SV FEM SSDP ANG-US 15P AU3
1	REG1	Non-Isolated DC/DC Converters 7.5W 24V 5Vout 1.5A Horizontal Mount
1	IMU1	Multipole Function Sensor Development Tools Accel/Mag/Gyro+Temp Breakout LSM9DS1
		RS-232 Interface IC 15kV ESD-Protected, Down to 10nA, 3.0V to 5.5V, Up to 1Mbps,
1	IC2	True RS-232 Transceivers
1	PS1	Board Mount Pressure Sensors 1psi Dual 5.0 Vdc Thru Hole
1	PS2	Board Mount Pressure Sensors 1psi Dual 5.0 Vdc Thru Hole
1	PS3	Board Mount Pressure Sensors SIP, Single Rad Barbed Absolute, 3.3V
1	ESP32	WiFi Development Tools (802.11) ESP32-PICO-D4 Development Board
1	TEENSY	Development Boards & Kits - ARM Teensy 3.6 (Headers)

This image is used to Locate components on the PCB.

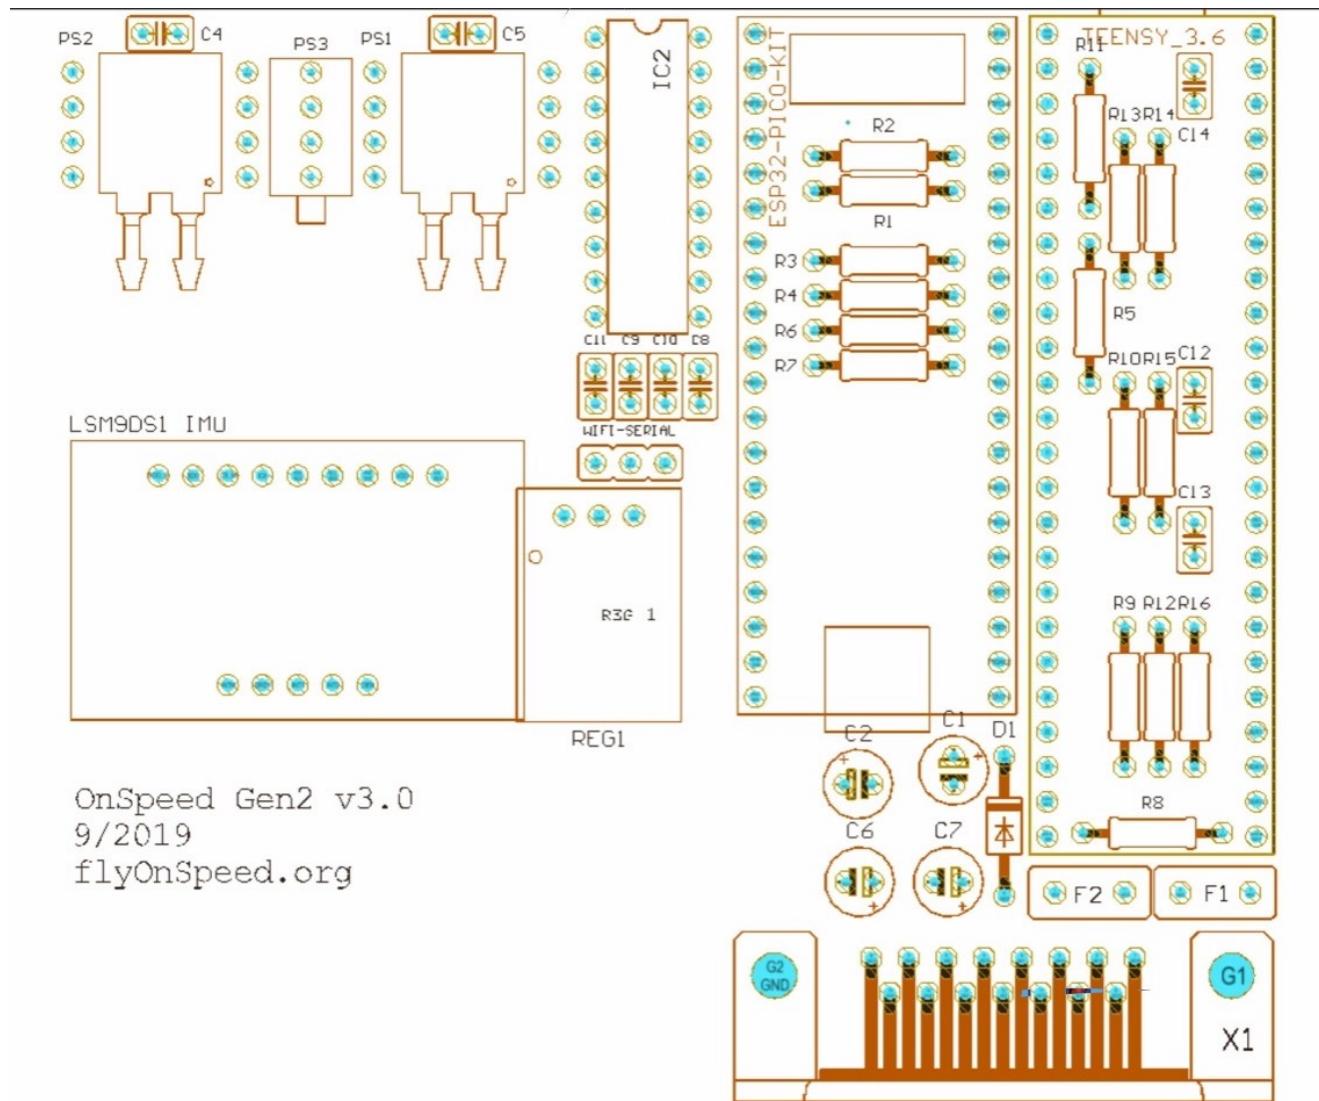

On Speed Gen 2 Version 3 Circuit Board Assembly

Locate parts, bend, and insert the following resistors into the PCB:

- 1. R1 4.7K-ohm 5% Yellow – Violet – Red – Gold
- 2. R2 4.7K-ohm 5% Yellow – Violet – Red – Gold
- 3. R3 4.7K-ohm 5% Yellow – Violet – Red – Gold
- 4. R4 4.7K-ohm 5% Yellow – Violet – Red – Gold
- 5. R6 4.7K-ohm 5% Yellow – Violet – Red – Gold
- 6. R7 4.7K-ohm 5% Yellow – Violet – Red – Gold
- Solder and clip.

Locate parts, bend, and insert the following resistors into the PCB:

- 1. R5 150 Ohm 5% 1/2-W Brown – Green – Brown – Gold
- 2. R8 150 Ohm 5% 1/2-W Brown – Green – Brown – Gold
- 3. R11 150 Ohm 5% 1/2-W Brown – Green – Brown – Gold
- 4. R14 150 Ohm 5% 1/2-W Brown – Green – Brown – Gold
- Solder and clip.

Locate parts, bend, and insert the following resistors into the PCB:

- 1. R9 22K-ohm 5% Red – Red – Orange – Gold
- 2. R10 22K-ohm 5% Red – Red – Orange – Gold
- 3. R12 22K-ohm 5% Red – Red – Orange – Gold
- Solder and clip.

Locate parts, bend, and insert the following resistors into the PCB:

- 1. R13 20K-ohm 5% Red – Black – Orange – Gold
- 2. R15 5.6K-ohm 5% Green – Blue – Red – Gold
- 3. R16 5.6K-ohm 5% Green – Blue – Red – Gold
- Solder and clip.

Locate parts, bend, and insert the following resettable fuses into the PCB:

- 1. F1 60V 40 Amps Max Hold .50 Trip 1.00
- 2. F2 60V 40 Amps Max Hold .10 Trip .20

Solder and clip.

This image shows the correct location of the capacitors installed in the next several steps.

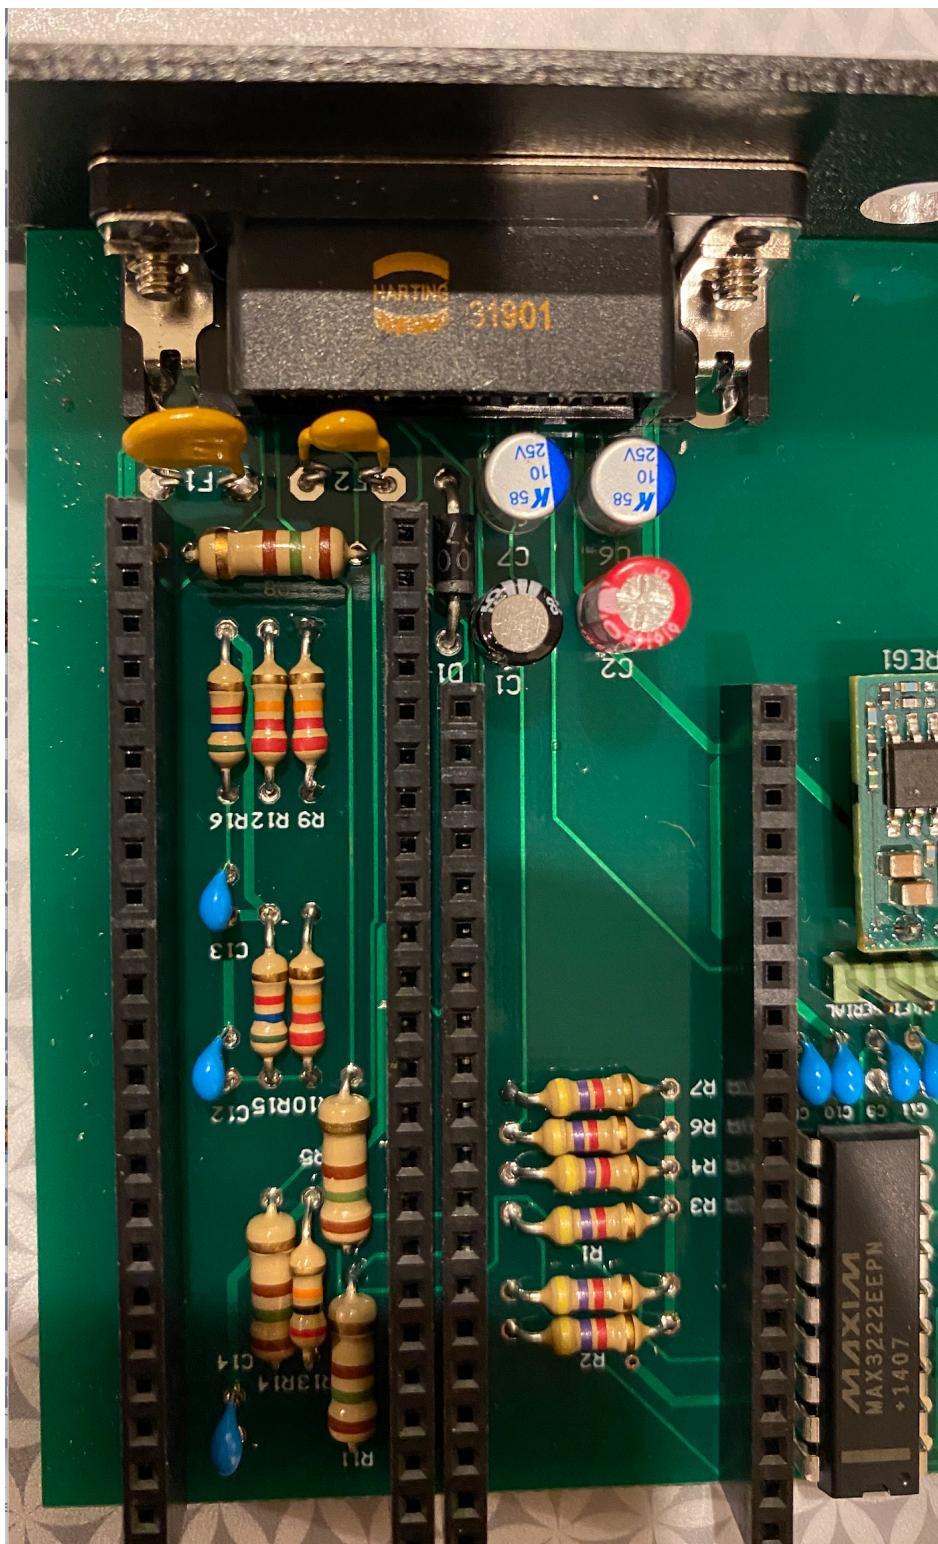


Figure 13 – Capacitor Installation and Orientation

Locate part, bend, and insert the following Capacitor into the PCB:

- _____ 1. C1 Aluminum Electrolytic Capacitor – Radial Leaded 10uF 50V
- _____ Solder and clip.

Locate part, bend, and insert the following Capacitor into the PCB:

- _____ 1. C2 Aluminum Electrolytic Capacitor – Radial Leaded WCAP-ATG5 0.1uF 50V 20% Radial
- _____ Solder and clip.

NOTE: C3 Not Used.

Locate parts, bend, and insert the following Capacitors into the PCB:

- _____ 1. C6 Aluminum Organic Polymer Capacitor 25V 10uF 20% ESR=70mOhms
- _____ 2. C7 Aluminum Organic Polymer Capacitor 25V 10uF 20% ESR=70mOhms
- _____ Solder and clip.

Locate parts, bend, and insert the following Capacitors into the PCB:

- _____ 1. C4 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 2. C5 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 3. C8 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 4. C9 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 5. C10 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 6. C11 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 7. C12 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 8. C13 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ 9. C14 Multilayer Ceramic Capacitor MLCC – Leaded 0.1uF 25V X7R 10%
- _____ Solder and clip.

Locate part, bend, and insert the following Diode into the PCB:

_____ 1. D1 Rectifier Vr/50V I_o/1A

_____ Solder and clip.

This image shows the correct Orientation of the diode.

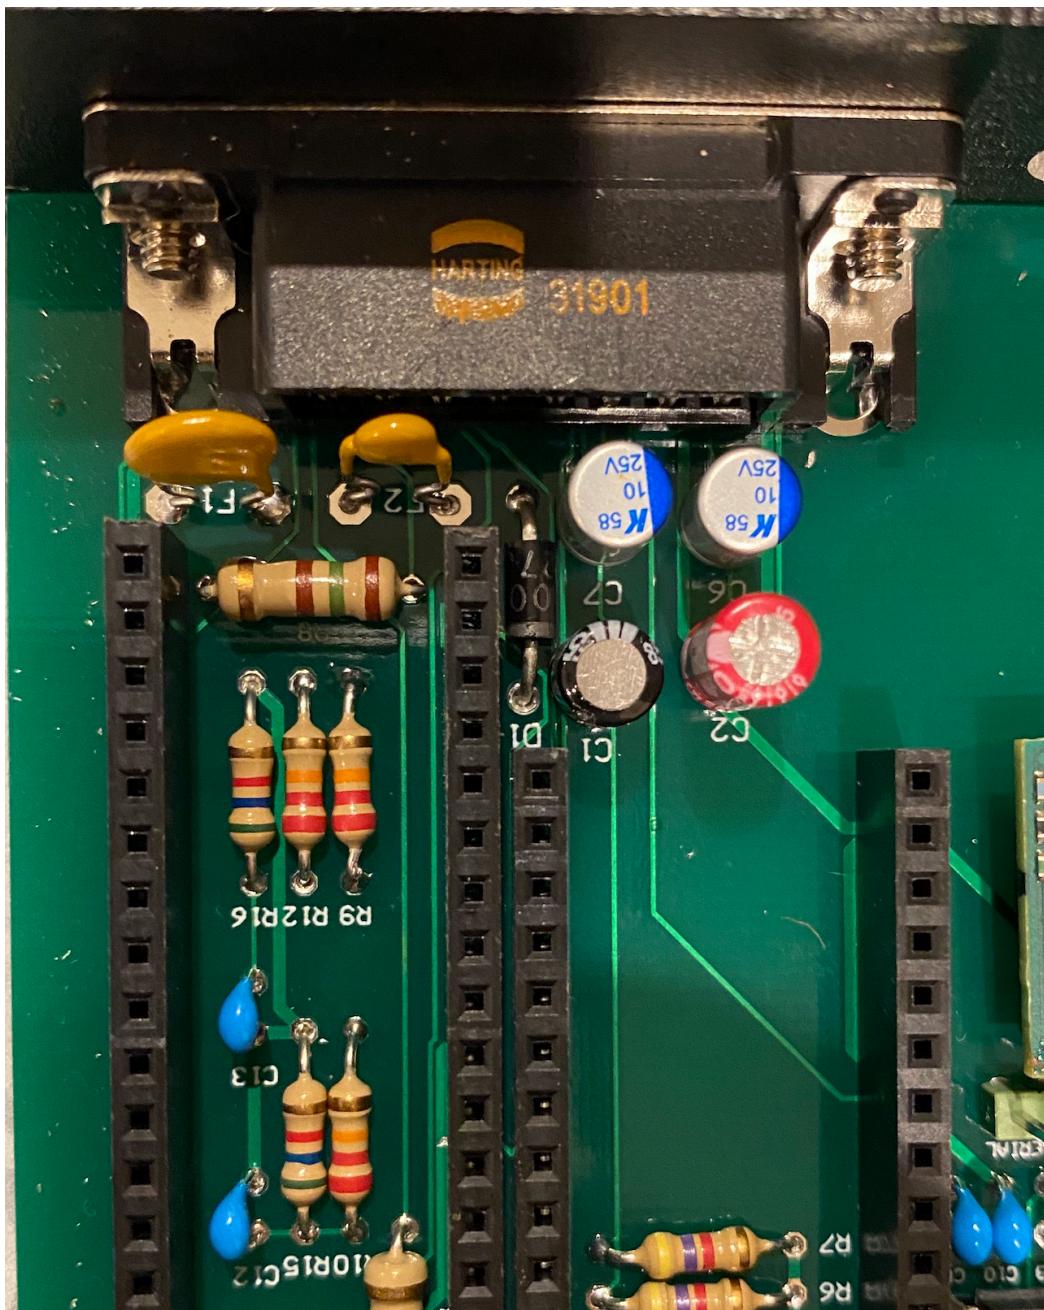


Figure 14 – Diode D1 Installation and Orientation

Locate parts and insert the following parts into the PCB. Use paper tape to hold in position:

- _____ 1. WiFiSerial Header 1X3 POS VERT Tin
- _____ 2. (2) WIFI SOCKETS 3M 20 CON
- _____ 3. (2) TEENSSY SOCKETS 3M 24P STRK BRD MNT SKT

_____ Solder one (1) pin of each connector to circuit board.

_____ Inspect each connector above to verify that they are vertical out of the PCB.
Heat and reflow solder if necessary to get vertical.

_____ Solder remaining leads of above connectors.
Verify that connectors are vertical before moving on to next step.

Locate part and insert into PCB:

- _____ 1. SUB-D DSUB SV FEM SSDP Connector

_____ Solder to circuit board.

Locate part and insert into the PCB:

- _____ 1. REG1 Voltage regulator P/N OKI-78SR-5/1 .5-W36H-C)

_____ Solder to circuit board.

Locate part IMU1 and open in static safe location.

- _____ 1. Cut supplied 0.100-inch pitch headers into nine (9) pins and a second length with five (5) pins.
- _____ 2. Insert headers into IMU1 holes on the PCB then position the IMU board over the header pins.
Make sure the IMU1 board is fully seated on the headers and parallel with the PCB.
- _____ 3. Solder all 28 pins (14 on the PCB and 14 on the breakout board)
- _____ 4. Trim the excess pin lengths and inspect.


Locate IC2 and open in static safe location.

- _____ 1. Bend pins so IC2 will fit into PCB.
- _____ 2. Insert IC2 into PCB. Notch in IC2 is located near edge of PCB.
- _____ 3. Solder IC2 to PCB.

Following is starting from Step 7 in PDF instructions.

STEP 7 – Locate the 3/32-inch ID, 5/32-inch OD Polyurethane Tubing (P/N 5648K68) and cut four (4) lengths of tubing as follows:


- a) 2 each – 2.25 inches long (PS1 Lower Port to AoA fitting connection, PS2 Lower Port to Pitot fitting connection).
- b) 2 each – 2.75 inches long (PS1 Upper Port to Static Tee fitting connection, PS2 Upper Port to Static Tee fitting connection).

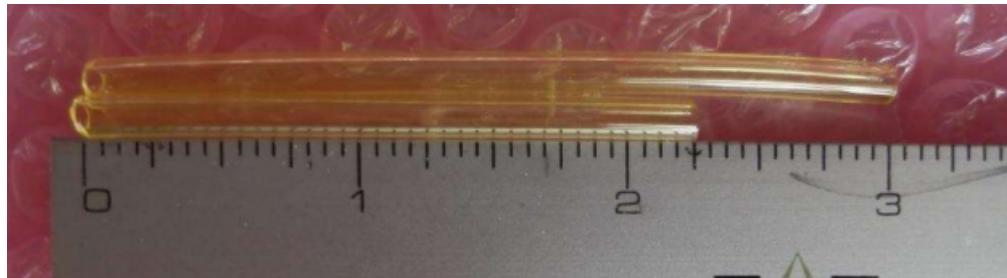

STEP 8 – Locate the 1/16-inch ID, 1/8-inch OD Polyurethane Tubing (P/N 5648K67) and cut one (1) length of tubing as follows:

- a) 1 each – 2.0 inches long (PS3 Static sensor to Static Port Tee)

STEP 9 – Locate the two dual port pressure sensors (P/N 4525DO-DS5AI001DP). Using an indelible ink pen mark one “PS1” and the second “PS2”. Note that when viewed from the top, pins down, the sensors have two barbed ports. The lower port (PORT 1) and an upper port (PORT 2). It is important that the ports are connected to the correct aircraft pneumatic fittings during assembly. Note also that the plastic barbs on the sensors are relatively easy to break off the sensors so care must be taken to limit the angular force that is applied to the barbs during the installation of the polyurethane tubing.

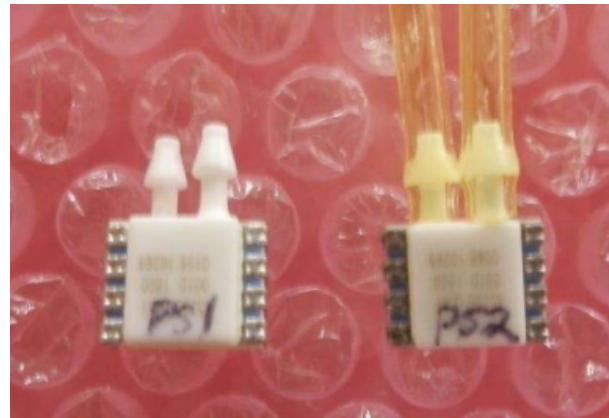

STEP 10 – Install the four pieces of 3/32 inch ID tubing cut to length in STEP 7 on the dual port pressure sensors (PS1 and PS2). NOTE: the polyurethane tubing used in the following steps has a relatively high Durometer of 95A at room temperatures and is therefore rather inflexible. In order to slip the tubing onto the barbed fitting it is sometimes useful to warm the tubing ends in hot water just prior to sliding the tubing over the barbed connections (shake off the excess water so that it does not enter the sensor ports).

The 3/32-inch tubing will be installed on the dual port pressure sensors as follows:

- a) Install one of the 2.25-inch lengths on PS1 LOWER PORT 1.
- b) Install one of the 2.75-inch lengths on PS1 UPPER PORT 2.
- c) Install one of the 2.75-inch lengths on PS2 UPPER PORT 1.
- d) Install one of the 2.25-inch lengths on PS2 LOWER PORT 2.

STEP 11 - Install the piece of 1/16 in ID tubing cut to length in STEP 8 on the single port pressure sensor PS3 (P/N SSCSRNN1.6BA7A3) as follows:

- a) Install the 2.0-inch lengths of 1/16 inch ID tubing on PS3.



Locate PS1 with its installed tubing and insert into the PCB:

- 1. Solder one of the 8 pins to the PCB. Verify that PS1 is properly positioned on the PCB.
- 2. Solder PS1 to PCB and inspect.

Locate PS2 with its installed tubing and insert into the PCB:

- 1. Solder one of the 8 pins to the PCB. Verify that PS2 is properly positioned on the PCB.
- 2. Solder PS2 to PCB and inspect.

Locate PS3 with its installed tubing and insert into the PCB:

- 1. Solder one of the 4 pins to the PCB. Verify that PS3 is properly positioned on the PCB.
- 2. Solder PS3 to PCB, trim excess leads, and inspect.

STEP 12 – Connect the pressure sensor tubing to the front panel pneumatic fittings as follows:

- b) Connect the tube on PS1 LOWER PORT 1 to the AoA (“A”) fitting.
- c) Connect the tube on PS1 UPPER PORT 2 to the Static (“S”) Tee barb nearest to the “A” fitting.
- d) Connect the tube on PS3 to the center barb on the “S” Tee.
- e) Connect the tube on PS2 LOWER PORT 1 to the “P” fitting.
- f) Connect the tube on PS2 UPPER PORT 2 to the Static “S” Tee barb nearest to the Pitot (“P”) fitting.

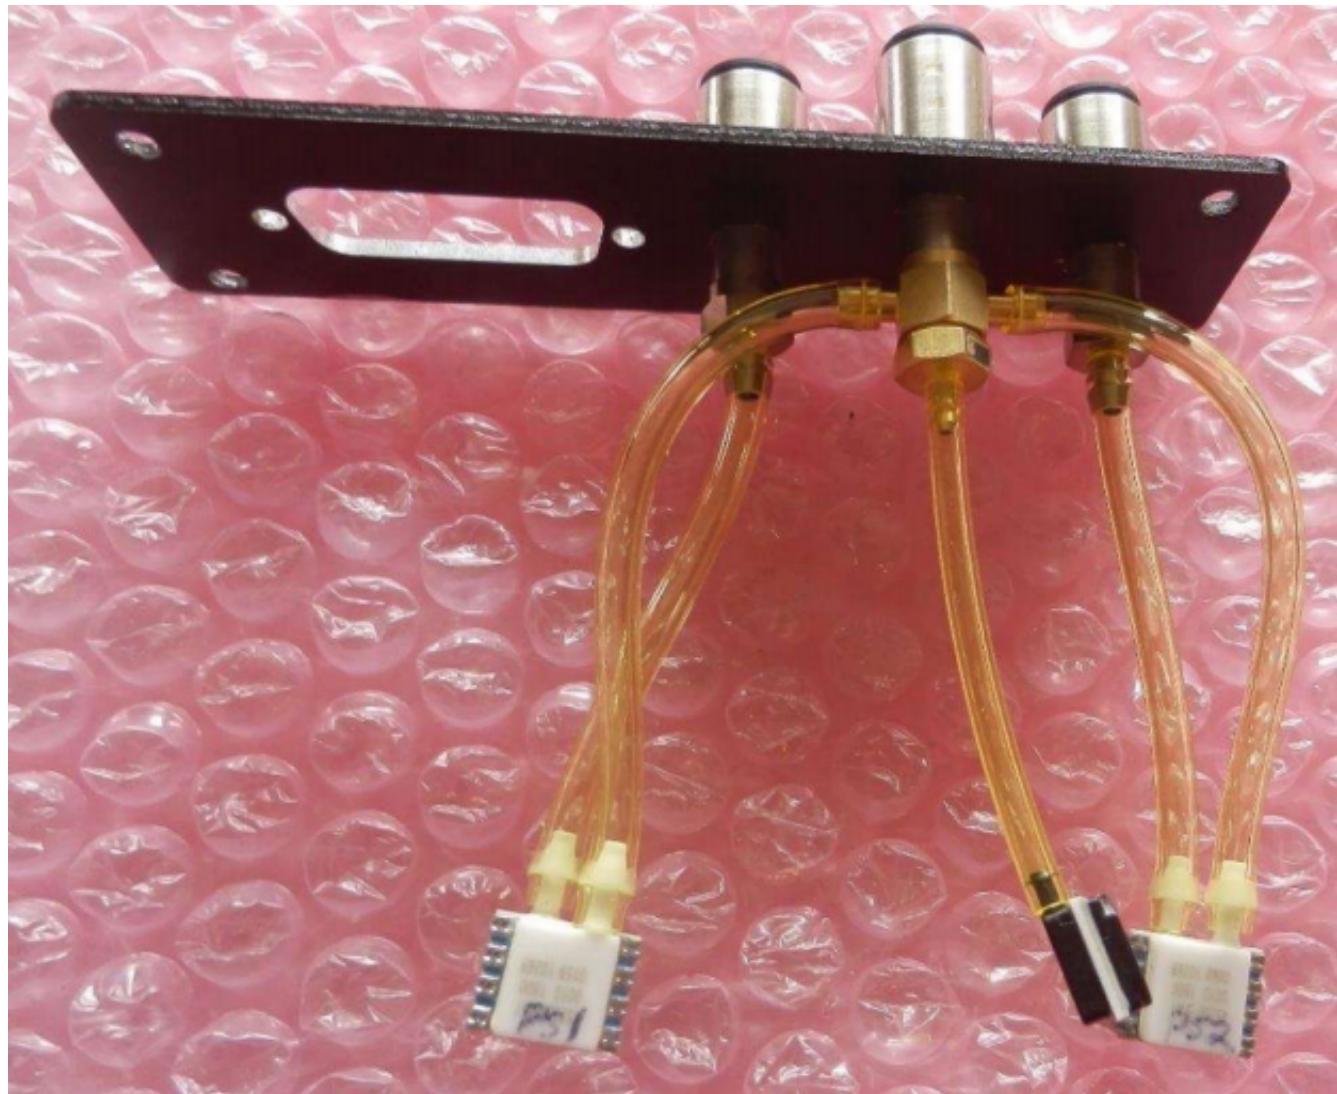


Figure 10 – Front Panel with Pressure Sensors Installed

Inspect completed front panel subassembly.

Locate front panel. Install front panel on the D-Sub 15 contact connector that was installed on the CCA using two (2) of the 4-40 Female Jackscrew (P/N 160-000-015R031). Apply a small amount of thread locking liquid to the threaded screws. (Loctite blue or equivalent). Tighten the standoffs in the D-Sub Connector.

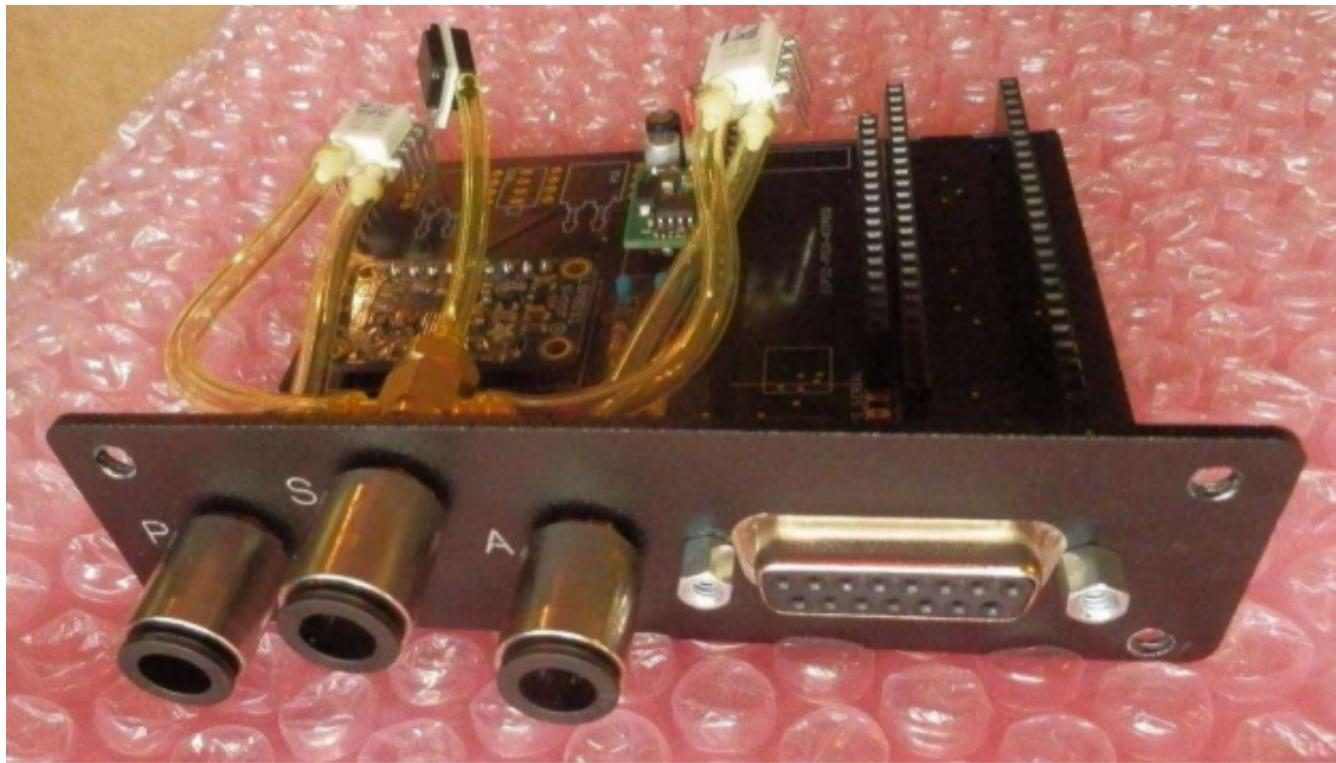


Figure 21 – Front Panel Installed on CCA

- ____ STEP 26 – Configure/Program the Wi-Fi Development Tools (802.11) ESP32-PICO-D4 Development Board (P/N ESP32-PICO-KIT). **For hardware programming instructions see the Documents section on Github.**
 - ____ STEP 27 – Install the Wi-Fi Development Board by plugging it into the headers that were installed in STEP 21. Insure that the board is positioned with the USB socket towards the front of the assembly and the pins are aligned. NOTE: The six holes in the PCB at the aft edge are not populated in order to reduce interference with the RF antenna.
 - ____ STEP 28 – Install the microSDHC memory card (P/N SDSQUAR-032G-GN6MA) into the microSDHC socket on the TEENSY 3.6 microcontroller board (P/N DEV-14058).
 - ____ STEP 29 – Install the TEENSY 3.6 sub assembly plugging it into the headers that were installed in STEP 22. Insure that the board is positioned with the microSDHC socket towards the front of the assembly, USB towards the rear edge, and the pins are aligned.
 - ____ STEP 30 – In order to reduce the potential for bending the pins under handling, vibration, and shock it is recommended that small amount of adhesive (Eclectic Products Inc. E6000 or equivalent) be applied to the base of the Static Pressure sensor (PS3) and the DC to DC converter (REG1) and the PCB in order to dampen potential motion if the part relative to the pins. Do not use RTV, it contains acetic acid and corrode electronics.
 - ____ STEP 31 – Inspect the sub assembly for missing or misaligned components, improperly inserted component pins, solder quality and workmanship, etc.
 - ____ STEP 32 – Insert the subassembly into the housing and secure it in place using the screws provided with the housing. NOTE: The housing screw bosses are offset. The housing has a ribbed face which should be oriented down relative to the front panel on order for the screw holes to align.
 - ____ STEP 33 – Install the plastic (RF transparent) rear cover using the screws provided.
 - ____ STEP 34 – Program the TEENSY 3.6 controller with the OnSpeed software. The OnSpeed WiFi controller and TEENSY 3.6 controller will need to have the firmware loaded into the non-volatile memory of the respective modules. The procedure for performing these steps are available on the website as a separate document.
- The following steps will need to be performed prior to the final acceptance of the system in the aircraft. These procedures are supplied as separate documents on the OnSpeed website.
- ____ STEP 35 – Leak test the pneumatic connections.
 - ____ STEP 36 – Connect the wiring harness and bench test the OnSpeed controller. The OnSpeed electronics assembly should be functionally bench tested prior to installation into the aircraft. See Hardware Test document on Github.
 - ____ STEP 37 – Install the OnSpeed 2 system in the aircraft.
 - ____ STEP 38 – Flight test and calibrate the OnSpeed 2 system.