

Atlas 2k Processor by Stephan Nolting

Proprietary Notice

- "ARM" is a trademark of Advanced RISC Machines Ltd.
- "MIPS" is a trademark of MIPS Technologies Inc.
- "AVR" is a trademark of Atmel Corporation.
- "Xilinx ISE", "Spartan" and "Xilinx ISIM" are trademarks of Xilinx, Inc.
- "Quartus II" and "Cyclone" are trademarks of Altera Corporation.
- "ModelSim" is a trademark of Mentor Graphics, Inc.
- "Windows" is a trademark of Microsoft Corporation.

License

This project is published under the **GNU General Public License** (GPL).

Disclaimer

This project comes with no warranties at all. The reader assumes responsibility for the use of any kind of information from this documentary or the Atlas 2k Processor project, respectively.

This document was created using OpenOffice.

The ATLAS Project / ATLAS 2k Processor

© 2014 by Stephan Nolting, Hanover, Germany

For any kind of feedback, feel free to contact me: stnolting@gmail.com

The most recent version of the ATLAS project and it's documentary can be found at http://www.opencores.org/project,atlas_core

Table of Content

1. Introduction	5
1.1. Processor Features.	<i>6</i>
1.2. Project Folder Structure	
1.3. VHDL File Hierarchy	
2. Top Entity Signal Description	
2.1. Atlas 2k Basic Setup Top Entity	8
2.2. Atlas 2k Processor Top Entity.	
3. Programmer's Model	10
3.1. Operating Modes.	10
3.2. Exceptions and Interrupts	11
3.3. Data Registers	11
3.4. Coprocessors	12
3.5. Machine Status Register	12
3.6. Memory Model	14
3.6.1. Physical Address Extension (Paging)	14
3.7. Program Counter	
4. Instruction Set	15
4.1. Data Processing	16
4.1.1. User Register Bank Access	19
4.1.2. Program Counter Access	20
4.1.3. Machine Status Register Access	22
4.2. Memory Access	25
4.3. Branch and Link	27
4.4. Load Immediate	29
4.5. Bit Manipulation.	
4.6. Coprocessor Data Processing.	32
4.7. Coprocessor Data Transfer	
4.8. Multiply	35
4.9. Sleep Command	36
4.10. Register-Based Branches.	
4.11. Undefined Instructions.	
4.12. System Call	
5. Atlas Evaluation Assembler	
5.1. Pre-Processor Instructions.	
5.2. Example Programs	41
5.2.1. Bit Test	41
5.2.2. Comparing Large Operands	
5.2.3. Loop Counters	
5.2.4. MAC Operation with Flag Update	
5.2.5. Branch Tables	
5.2.6. Stack Operations	43
5.2.7. Print Strings	44
5.2.8. Count Leading Zeros	
5.2.9. LFSR Implementation using Parity of a Register	
5.2.10. Interrupt Vector Table	
5.2.11. Hardware-based OR compare	
6. Core Architecture	
6.1. Module Description	48

6.2. Data Path.	49
6.3. Data Registers	
6.4. Pipeline	
6.4.1. Local Pipeline Conflicts	
6.4.2. Temporal Pipeline Conflicts	52
6.4.2.1. MSR Write Access	
6.4.4. Branches.	54
6.4.5. Exceptions and Interrupts	55
6.5. Interfaces	56
6.5.1. Data / Instruction Memory Interface	56
6.5.2. Paging / Memory Layout	57
6.5.3. Coprocessor Interface	
6.6. Hardware Utilization (Synthesis)	
6.7. Main Control Bus.	
7. Internal Coprocessor	
7.1. Module c0 – System Controller 0.	
7.1.1. Interrupt Controller	
7.1.1.1. ASM Example – Setting up the IRQ controller	65
7.1.2. High Precision Timer.	
7.1.3. Linear-Feedback Shift Register (LFSR)	
7.2. Module c1 – System Controller 1 (MMU)	
7.2.1. Theory of Operation.	
7.2.1.1. ASM Example – MMU page and context switch	
7.3. Module c2 - Communication Controller 0.	
7.3.1. Universal Asynchronous Receiver/Transmitter (UART)	
7.3.1.1. ASM Example – setting UART Baud rate to 2400 @ 50MHz	
7.3.1.2. ASM Example – get data from UART receiver, received data in r0	
7.3.1.3. ASM Example – send data via UART transmitter, transmitted data in r1	
7.3.2. Serial Peripheral Interface (SPI)	
7.3.2.1. ASM example – perform 8 bit SPI transfer	
7.3.2.2. ASM example – perform 32 bit SPI transfer.	
7.3.2.3. ASM example – SPI transfer subroutine	
7.3.3. Parallel Input/Output Ports (PIO)	
8. Getting Started	
8.1. Necessary Files for the Atlas 2k Base Setup	
8.2. Simulation	
8.3. Using the Atlas 2k Bootloader	
8.4. Let's Get It Started!	
9. Frequently Asked Questions (FAQ)	
10. Appendix	
10.1. System Coprocessor Modules	
10.2. Instruction Set Summary	82

1. Introduction

Welcome to the Atlas 2k Processor project!

I've come a long way working with famous processor architectures like ARM, DLX, MIPS, AVR and some-let's call them more 'exotic' - ASIP cores. And during my work with them, I gathered a lot of ideas what a cool processor architecture might look like. But since no processor featured all those ideas, I decided to create my own one.

My first attempt was the STORM Core. It was more like a personal research project for me to get into the basics of processor architecture. But at least for my taste, the STORM Core turned out to be way too clumsy and complicated to use for embedded projects. So I took my positive experiences from that project, combined them with many ideas and approaches and glued them all together to create a CPU, that really measures up to all my – and hopefully someone else's – expectations.

Of course, the specifications of the Atlas 2k processor aren't carved in stone yet... So if you have any cool ideas for it, feel free to drop me a line.

However, have fun with the Atlas 2k processor! ;)

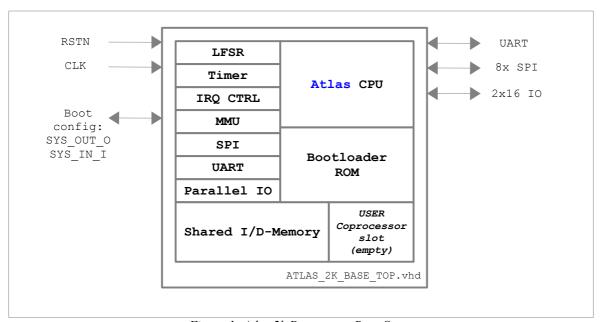


Figure 1: Atlas 2k Processor - Base Setup

NOTE: Above, you see the block diagram of Atlas 2k base setup. If you don't want to take the risk of going crazy by implementing the memory interface by yourself, you should really use this setup instead of the processor alone. This setup already includes the processor coupled with a compatible shared I/D-memory and it is the perfect starting point for your embedded SoC.

1.1. Processor Features

- ✓ 16-bit RISC open source soft-core processor
- ✓ Very small outline
- ✓ Completely described in behavioral, platform-independent VHDL
- ✔ Pipelined instruction execution in 5 stages
- ✓ Single cycle execution of all instructions (except for branches and multi-cycle operations)
- ✔ Powerful memory access and bit manipulation instructions
- ✓ Two different operating modes with unique register sets (8 registers each) and privileges
- ✓ Full hardware support for emulating privileged-mode programs in unprivileged-mode
- ✓ Two software traps (system call and undefined instruction or unauthorized coprocessor/register bank/ MSR access)
- ✔ Power-saving sleep mode
- ✓ Simple memory interface
- ✓ Integrated bootloader (boot from internal main memory, via UART or from external SPI EEPROM)
- ✓ Interface for external coprocessor to extend the processor's functionality and instruction set
- ✓ Integrated system coprocessor
 - → High precision timer (32-bit)
 - → Memory management unit (supports paging)
 - → Flexible linear-feedback shift register for pseudo-random data
 - → Interrupt controller for up to 8 channels (2 channels for general purpose)
 - → 16+8 bit input and 16+8 bit output parallel IO port
 - → General purpose SPI communication controller with 8 individual ports
 - → Configurable universal asynchronous receiver/transmitter (UART)

1.2. Project Folder Structure

The actual project folder contains several sub-folders, which are about to be explained.

- > asm: This folder contains the Atlas assembler program. The C source files of can be found in the sub-folder "src".
- **doc:** The Atlas 2k data sheet (this file) can be found here.
- **rtl:** All rtl files of the processor are located here.
- > sim: The sim folder contains a testbench for the Atlas 2k processor base setup and a default Xilinx ISIM© waveform configuration.
- > **software:** The software folder contains the assembler source file of the bootloader and some example programs.
- > syn: This folder can be used as project folder for your EDA tool of choice.

1.3. VHDL File Hierarchy

7

All necessary hardware description files are located in the project's *rtl* folder. The top entity of the processor is "ATLAS_2K_TOP.vhd", the top entity of the system setup is "ATLAS_2K_BASE_TOP.vhd".

```
ATLAS 2K BASE TOP. vhd
                               → Basic system setup top entity
- INT_RAM.vhd
                               → Internal memory component
- ATLAS_2K_TOP.vhd
                               → Atlas 2k Processor top entity
  - BOOT MEM. vhd
                               → Bootloader memory
  - MEM GATE.vhd
                               → Memory gateway
  - ATLAS CPU.vhd
                               → CPU core top entity
    - ATLAS PKG.vhd
                               → Atlas project package file
    - ALU.vhd
                               → Arithmetical/logical unit, CP interface
     - CTRL.vhd
                               → CPU control system
    - MEM ACC.vhd
                               → Data memory access system
    - OP DEC.vhd
                               → Opcode decoder
    - REG FILE.vhd
                               → Data register file
    - SYS REG. vhd
                               → Machine control register (PC and MSR)
    - WB UNIT.vhd
                               → Data write-back unit
  - SYSTEM CP.vhd
                               → Internal system coprocessor
    - COM 0 CORE.vhd
                               → Communication controller
     - SYS 0 CORE. vhd
                               → System controller 0
    - SYS 1 CORE.vhd
                               → System controller 1
```

Table 1: Project's VHDL file hierarchy

2. Top Entity Signal Description

This chapter give a brief overview of the signal ports of the basic setup's top entity (ATLAS_2K_BASE_TOP.vhd) and the processor's top entity (ATLAS_2K_TOP.vhd). The type of all signals/generics is std logic or std logic vector, respectively.

2.1. Atlas 2k Basic Setup Top Entity

When using this setup as initial starting point – which I encourage you to do;) -, do not forget to set the user configuration constants in the ATLAS_2K_TOP.vhd file.

Signal name	Width (#bits)	Dir	Function						
	Global Control								
CLK_I	1	IN	Global clock signal, all registers trigger on the rising edge						
RSTN_I	1	IN	Global reset signal, synchronized to CLK_I and low-active						
IO interface									
UART_RXD_I	1	IN	UART receiver input						
UART_TXD_O	1	OUT	UT UART transmitter output						
SPI_MOSI_O	8	OUT	8 SPI data transmitter channel outputs						
SPI_MISO_I	8	IN	8 SPI receiver channel inputs						
SPI_SCK_O	8	OUT	T 8 SPI clock line outputs						
SPI_CS_O	8	OUT	8 SPI chip select lines (low active)						
PIO_OUT_O	16	OUT	16 parallel output ports						
PIO_IN_I	16	IN	16 parallel input ports						
SYS_OUT_O	8	OUT	Bootloader/system output port (bootloader status)						
SYS_IN_I	8	IN	Bootloader/system input port (boot configuration)						

Table 2: ATLAS 2K's top entity interface ports

NOTE: The Atlas 2k processor as well as the base setup provide a LOT of IO pins for parallel input/output and SPI ports. If you do not need all of them, you should not remove them from the top entity and the corresponding sub modules. For compatibility reasons with future updates of them, you should instantiate the top entity of the processor or the base setup into another file, where you can assign all the desired IO ports and tie the unused inputs to low and leave all unused outputs 'open'.

This project is published under the <u>GNU General Public License</u> (GPL)

8th of March, 2014

9

2.2. Atlas 2k Processor Top Entity

Signal name	Width (#bits)	Dir	Function				
	Configuration generics						
CLK_SPEED_G	32	-	Main clock speed in Hz				
			Global Control				
CLK_I	1	IN	Global clock signal, all registers trigger on the rising edge				
RST_I	1	IN	Global reset signal, synchronized to CLK_I and high-active				
CE_I	1	IN	Global clock enable, high-active, should only change on falling edge of CLK_I				
			Coprocessor Interface				
CP_EN_O	1	OUT	Coprocessor access enable				
CP_ICEEN_O	1	OUT	Coprocessor interface clock enable				
CP_OP_O	1	OUT	Coprocessor processing operation ('0') or data transfer ('1')				
CP_RW_O	1	OUT	Coprocessor read ('0') or write ('1') data transfer				
CP_CMD_O	9	OUT	Coprocessor command, consisting of source/destination register and operation command				
CP_DAT_O	16	OUT	Coprocessor write data				
CP_DAT_I	16	IN	Coprocessor read data				
			Memory interface				
MEM_I_PAGE_O	16	OUT	Instruction memory page				
MEM_I_ADR_O	16	OUT	Instruction memory address				
MEM_I_EN_O	1	OUT	Instruction output enable				
MEM_I_DAT_I	16	IN	Instruction word output				
MEM_D_EN_O	1	OUT	Data memory enable				
MEM_D_RW_O	1	OUT	Data memory read('0')/write access('1')				
MEM_D_PAGE_O	16	OUT	Data memory page				
MEM_D_ADR_O	16	OUT	Data memory address				
MEM_D_DAT_O	16	OUT	Data memory write data				
MEM_D_DAT_I	16	IN	Data memory read data				
CRITICAL_IRQ_I	1	IN	Critical interrupt request				
			IO interface				
UART_RXD_I	1	IN	UART receiver input				
UART_TXD_O	1	OUT	UART transmitter output				
SPI_MOSI_O	8	OUT	8 SPI data transmitter channel outputs				
SPI_MISO_I	8	IN	8 SPI receiver channel inputs				
SPI_SCK_O	8	OUT	8 SPI clock line outputs				
SPI_CS_O	8	OUT	8 SPI chip select lines (low active)				
PIO_OUT_O	16	OUT	16 parallel output ports				
PIO_IN_I	16	IN	16 parallel input ports				
SYS_OUT_O	8	OUT	Bootloader/system output port (status)				
SYS_IN_I	8	IN	Bootloader/system input port (boot configuration)				
IRQ_I	2	IN	Interrupt request inputs				

Table 3: ATLAS 2K's top entity interface ports

3. Programmer's Model

The Atlas processor is a true 16-bit RISC architecture, providing different data register banks and privileges for the two operating modes. The accessible CPU resources according to the operating modes are shown in the figure below.

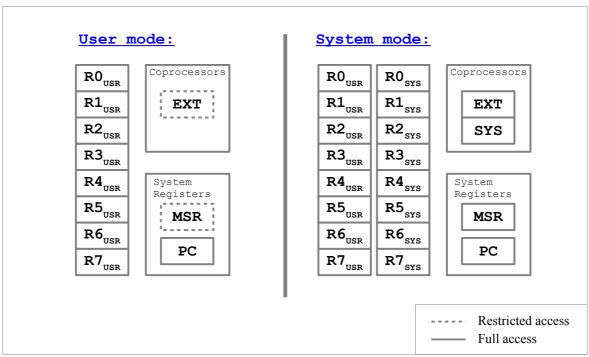


Figure 2: Operation modes and accessible registers

3.1. Operating Modes

Two different operation modes are supported by the Atlas CPU. The privileged mode is called "system mode", where the unprivileged one is called "user mode". After a hardware reset, the core always starts execution in system mode with full privileges. After program setup, the current processor mode can be switched to user mode to start an application, which requires limited privileges to keep the system's security. The program running in user mode can use system calls to request privileged operations, like direct hardware access. Furthermore, the user program can be interrupted by external interrupts at any time. In this case, the processor automatically switches back to system mode and resumes operation executing the corresponding interrupt handler. Due to hardware features, the context switches from user mode to system mode and back do not need any additional software handling.

NOTE: All instructions and operations, that are allowed in system mode, but are not allowed in user mode (like user bank transfers, accesses to a protected coprocessors or full MSR accesses) will trigger an interrupt trap, called the command error trap. This hardware features allow to emulate a system mode program, like an operating system, in user mode. This is very suitable for the implementation of virtual machines, which are able to run complete operating system.

3.2. Exceptions and Interrupts

The Atlas CPU features four different interrupt or exception types. In famous books about computer architecture, "exceptions" refer to all kind of abnormal program interruptions, no matter what source they emerge from. "Interrupts" are a sub group of those exceptions, where the cause emerges from an external signal, like an interrupt request pin. However, in this documentary and in the hardware description files of the CPU, all kinds of abnormal program interruptions are called interrupts. The different types, their priority during execution, their option to be masked and the corresponding addresses of the interrupt handlers are listed in the table below.

Priority	Interrupt source	Mask-able	Handler base address ¹
1 (highest)	Hardware reset	No	x"0000"
2	Memory error IRQ (EXT_INT_0)	Yes	x"0002"
3	Interrupt controller IRQ (EXT_INT_1)	Yes	x"0004"
4	Command error trap (undefined instruction or coprocessor / register bank / MSR access violation)	No	x"0006"
5 (lowest)	Software interrupt trap (SYSCALL instruction)	No	x"0008"

Table 4: Interrupt vector addresses (hexadecimal) and priority list

NOTE: The shown interrupts are the interrupts sources of the CPU only. The ATLAS 2K supports additional interrupts, which are processed by the interrupt controller and forwarded to **EXT_INT_1**.

Whenever a valid interrupt condition occurs, the processor stops execution, enters system mode and resumes operation at the corresponding interrupt handler base address. These base addresses are fixed in hardware and only one word separates the different interrupt vectors. Thus, a branch instruction to the final handler, or a branch to an intermediate handler, which loads the address of the final handler) must be inserted into the interrupt vector slots. Furthermore, the return address is automatically stored to the link register. Also, the global external interrupt flag in the MSR is automatically cleared whenever a valid interrupt or exception is executed. This prevent the interrupt handler to be interrupted again by external interrupt requests. The external interrupt enable flag can be re-set by specific handler termination instructions (like RETI).

NOTE: The execution of all instructions – even of the multi-cycle memory access operations - is atomic. Thus, the complete execution of a single instruction cannot be interrupted by any kind of exception/interrupt.

3.3. Data Registers

Each operating mode has direct access to a mode-depended set of eight 16-bit registers. When changing modes (context switch), no storing of the registers on the stack is necessary, since the hardware changes the accessible register bank corresponding to the new operation mode automatically. When in privileged system mode, all of the 16 register can be accessed, but only 8 of them – the actual system mode registers – can be used for data processing or transfer operations. The remaining 8 user mode registers must be accessed via special instructions and their data has to be moved to a system mode register before performing any data manipulation.

This project is published under the **GNU General Public License** (GPL)

¹ Addresses correspond to the default setup of the CPU "byte-addressing mode".

3.4. Coprocessors

The Atlas CPU supports up to two coprocessors, where coprocessor #1 is already integrated into the Atlas 2K as system coprocessor. This coprocessor includes often used devices like a timer, UART, IO ports, an interrupt controller and a memory management unit. The coprocessor #0 slot can be used by the system designer to attach custom logic to the Atlas CPU. Both coprocessors can be accessed by special coprocessor instructions. These instructions are separated into two classes: The first classes is used for transferring data from a CPU register to a coprocessor and the other way around. The other class only effects the coprocessor and it's registers and is meant to perform data processing operations directly on the processors. Coprocessor #1 is the "system coprocessor" and thus can only be accessed in system mode. Coprocessor #0 can also be accessed in user mode, but if necessary, the access can be restricted to system mode by setting the protection flag in the machine status register. Any attempt to access a protected coprocessor in user mode will trigger the command error trap.

3.5. Machine Status Register

The machine status register, abbreviated as MSR, holds the global control flags as well as the the CPU's ALU flags. The MSR can be accessed by special instructions to transfer the MSR content to a register or to store a register's content to the MSR. Also, a direct initialization of either the user mode or the system mode ALU flags with an immediate is possible. In system mode, the complete MSR, only the ALU flags or only the ALU flags of a specific operation mode can be altered. In user mode, only a read or write access to the user mode ALU flags is allowed. When trying to alter or to read other bits (determined by actual read/write option) of the MSR from a user mode program, the command error trap is taken. The different flags and flag sets of the MSR are shown in the figure below.

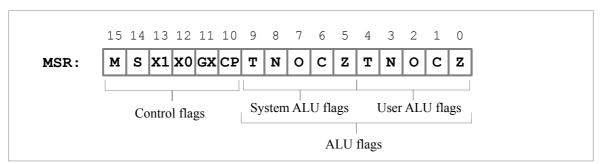


Figure 3: Machine Status Register

The flags, which are used by the arithmetical/logical unit and the condition computing unit, are located in the lowest 10 bit of the machine status register. There are two identical sets of the ALU processing flags. Together they are called "ALU flags" One set is used when in system mode ("system ALU flags"), the other is used by programs in user mode ("user ALU flags"). Each set holds information about the result of the previous data processing operations. These flags can be automatically updated after a data processing operations when using a specific suffix for the corresponding mnemonics. Otherwise, the flags are not altered.

The name, location and functionality of the ALU flags is presented in the table below.

Flag name	Bit # for user mode	Bit # for system mode	Function
Z	0	5	Zero flag
С	1	6	Carry flag
О	2	7	Overflow flag
N	3	8	Negative flag (sign)
T	4	9	Transfer flag

Table 5: ALU flags for user / system mode

The zero flag (**Z**-flag) is always set whenever the operation result is zero. The most significant bit of the operation result (= the sign, when using two's complement representation) is copied to the negative flag (**N**-flag). The carry flag (**C**-flag) indicates a carry for an addition and subtraction or a direct data output of the shifter. The overflow flag (**O**-flag) is set whenever a range overflow during a two's complement arithmetical operation takes places. During a shift operation an overflow can occur when the sign bit of Ra gets changed. Logical operations do no alter the overflow or the carry flag. The transfer flag (**T**-flag) is not altered by any data processing operations and is used for bit test and transfer operations. All together, the ALU flag set of the current processor operation mode determines the condition for conditional branches.

The system control flags, located in the highest 6 bits of the MSR, are used to configure general CPU functions. The different flags, their location and their functionality are shown in the table below.

Bit #	Flag name	Function	When set to '1'			
10	СР	External coprocessor (coprocessor #0) protection	Coprocessor #0 can be accessed in user and system mode	Coprocessor #0 can only be accessed in system mode		
11	GX	Global interrupt line enable	Disable interrupt lines	Enable interrupt lines		
12	X0	IRQ controller IRQ mask	Disable IRQ controller IRQ	Enable IRQ controller IRQ		
13	X1	CRITICAL_IRQ_I mask	Disable CRITICAL_IRQ_I	Enable CRITICAL_IRQ_I		
14	S	Previous operating mode	Processor was in user mode	Processor was in system mode		
15	M	Operating mode	Processor is in user mode	Processor is in system mode		

Table 6: System control flags – access only in system mode

Bit 10 (**CP**-flag) is used to protect the external "user" coprocessor (coprocessor #0) from being accessed in user mode. An unauthorized access in user mode will trigger the command error trap.

The following three bits 11 to 13 (**GX-**, **X0-**, **X1-**flag) configure the two external interrupt lines. A global interrupt is valid and executed when the global interrupt enable flag (**GX-**flag) and the corresponding interrupt line mask flag (**X0** for $EXT_INT_0 = CRITICAL_IRQ_I$, **X1** for $EXT_INT_1 = internal\ IRQ$ controller IRQ) are set to '1'. Whenever a valid external interrupt request occurs, the execution of the correlated handler is started. The global external interrupt enable flag is then automatically cleared and can be set to '1' again when returning from the interrupt handler routine.

Bit 14 (S-flag) indicates the previous operating mode, before a context change has been performed. For example, when executing a interrupt handler from a user mode program, the s-flag is zero. When executing the same handler from a system mode program, the flag is set. As the last bit of the MSR (bit 15), the M-flag determines the current operation mode of the CPU. A '1' indicates system mode and a '0' indicates user mode. This flag is automatically updated on context up- (user mode \rightarrow system mode, exceptions/interrupts) and down-switches (system mode \rightarrow user mode, e.g. return from exception/interrupt handler). However, it can also be manually set or cleared when operating in system mode.

3.6. Memory Model

A uniform and linear address space of $2^{16} = 65536$ bytes is assumed by the Atlas CPU. However, the memory data bus is 16-bit wide, thus a word of 16 bit is transferred from or to the memory at one time. If a memory system is not capable of presenting a full word at one time, the memory manger has to halt the processor until it has assembled a full 16 bit word.

Data memory accesses can be performed on word boundaries (aligned access) or on unaligned addresses by using any register as pointer. When accessing unaligned addresses, the bytes of the transfer data are swapped. This feature is illustrated in the figure below. Note, that in this example little Endian mode is used. The actual Endianness of the CPU can be modified in the CPU's VHDL package file (default is little Endian).

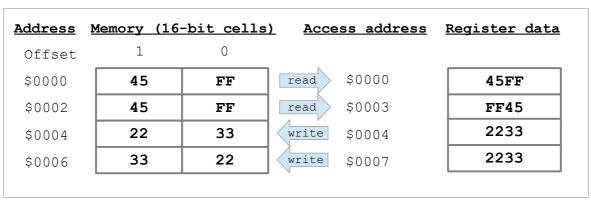


Figure 4: Memory accesses on aligned / unaligned word boundaries (hexadecimal data)

NOTE: Instruction fetch accesses will always be performed on aligned addresses, therefore instruction opcodes must be placed at word boundaries.

3.6.1. Physical Address Extension (Paging)

To extent the accessible memory space, the system coprocessor (coprocessor #1, SYS_1_CORE) of the Atlas 2k presents the functionality to separate an address space of 32-bit (4 GB) into 2¹⁶ blocks of 2¹⁶ bytes each. The block address (= the most significant 16 bits of the address) is generated by base address registers within the MMU, separated for instruction/data access in user and system mode. It's the task of the system mode program to handle the management of this different memory pages. The chapter about the rtl architecture of the processor will focus on the actual configuration options of the system coprocessor and the MMU.

3.7. Program Counter

Both operating modes use the same program counter (PC). It can be accessed via special load/store operations. For calling subroutines, register 7 (R7) of the current register bank is used as link register (LR) to store the return address. Furthermore, the link register is used to store the re-entry point (return address) whenever an interrupt or exception occurs. For exceptions (interrupts caused by the software; direct system calls or command errors), the return address points to the second instruction after the one, that has caused the exception. For interrupts (external interrupts via the interrupt lines), the link register points to the second instruction after that one, that has completed last before the interrupt occurred. In both cases, the link register has to decremented by two (bytes) to restore the actual return address or re-entry point, respectively. Bit #0 of the program counter will always be zero.

4. Instruction Set

This chapter introduces the encoding and functional explanation of the implemented instruction set. The complete set is divided into several classes and sub-sets, combining several instructions of one type. All instructions are 16-bit wide and must be placed at word-aligned memory addresses.

A short summary of the Atlas instruction set is shown in the figure below.

	15	14	13	12	11	10	9 8	7	6	5	4	3	2	1	0
Data Processing	0	0		CI	1D		Rd			Ra		s		Rb	
Load MSR to register	0	0	0	1	1	0	Rd		A	В	0	0	0	0	0
Store register to MSR	0	0	0	1	1	1	0 0 (0	A	В	0	0		Rb	
Store I. to ALU flags	0	0	0	1	1	1	0 <u>T</u>	<u>N</u>	1	В	1	0	<u>o</u>	<u>c</u>	<u>z</u>
Load PC to register	0	0	1	1	1	0	Rd		0	0	0	0	0	0	0
Store register to PC	0	0	1	1	0	1	0 0 (0	Ra	a	U	0	L	I	Ū
Load reg from user bank	0	0	1	0	0	1	Rd_sy	's	Ra	_us	sr	s	Ra	_u	sr
Store reg to user bank	0	0	1	0	0	0	Rd_us	r	Ra	_s	ys	s	Ra	_s	ys
Memory Access	0	1	P	U	W	L	Rd			Ra		I	Of	fs	et
Memory Swap	0	1	1	0	0	0	Rd			Ra		0		Rb	
Branch and Link	1	0		Со	nd		L Offset								
Load Immediate	1	1	0	0	M	I	Rd			Iı	mme	edi	lat	e	
Bit Manipulation	1	1	0	1	M	s	Rd			Ra			Bi	Ĺŧ	
Coprocessor Processing	1	1	1	0	0	N	Cd/Cl	b		Ca		_	(Cmc	i
Coprocessor Transfer	1	1	1	0	1	N	Cd/R	d	Ca	a/R	la	L		Cmc	1
Multiplication	1	1	1	1	0	0	Rd			Ra		0		Rb	
Special	1	1	1	1	0	1									
Undefined Instruction	1	1	1	1	1	0									
System Call	1	1	1	1	1	1	Tag								
	15	14	13	12	11	10	9 8	7	6	5	4	3	2	1	0

Figure 5: Instruction set formats

4.1. Data Processing

The instruction encoding of the data processing instructions is shown in the figure below.




Figure 6: Data processing instructions format

This type of instructions performs an arithmetical or logical operation specified by the CMD bit-field on the two operand registers Ra and Rb and places the result in the destination register Rd (the binary operation codes for the CMD-field are specified in the table below). Some instructions only use register A (Ra) and manipulate it's content by an immediate coded with the three bits of the Rb bit-field. The instructions can be classified as logical (AND, NAND, ORR, EOR, BIC, TEQ, TST), arithmetical (ADD, ADC, SUB, SBC, IND, DEC, CMP, CPX) or shift (SFT) operations.

Whenever the S-bit is set by using an "S" as appendix to a data processing mnemonic, the carry, negative, zero and overflow flags (= the ALU flags corresponding to the current processor mode) are updated corresponding to the computation result. For test and compare instructions (TST, TEQ, CMP, CPX), the S-bit is always set, so the S-appendix is not required for the mnemonics. The assembler will automatically set the S-flag for this instructions. Furthermore, the Rd bit-field is not required for this type of instructions, since no computation data result is generated. Therefore, the Rd bit-field should be filled with zeros.

The extended compare instruction (CPX) can be used to compare larger words than 16-bit. Therefore, the CPX instruction subtracts operand A and operand B but takes also the carry and zero signal of the previous operation into account to compute the actual carry and zero flag result. There are four different options, which specify how the previous state of the carry and zero flags are taken into account (options for the carry flag: use carry_in-flag or use inverted carry_in-flag; options for the zero-flag: AND current zero-flag with previous zero-flag or OR current zero-flag with previous zero-flag).

Most instructions combine the two operand registers to produce a result. The INC and DEC operations only use operand register A (Ra) and add or subtract a 3-bit immediate, which is encoded in the Rb bit-field. The shift (SFT) command uses this bit-field (Rb) to specify the type of shift operation, that is applied to Ra.

The assembler internal no-operation pseudo instruction (NOP) is formed from an increment on register 0 with a zero immediate and a cleared S-bit, resulting in no actual system state change. Thus, the binary coding of a NOP instruction is x"0000".

A "redundant " SUB Rd, Ra, Rb instruction with Ra = Rb would always result zero. Since other instructions exist to clear a register (like XOR Rd, Ra, Ra), this type of instruction is used to implement a negation instruction. So a SUB Rd, Ra, Ra is interpreted as NEG Rd, Ra (which is also accepted by the assembler) and computes Rd = 0 - Ra. The redundant form of the SUB instruction should not be used. Furthermore, a redundant version of the SBC instruction would be possible. An SBC instruction with Ra = Rb is also unlikely and does not really make sense, therefore this instruction also implements a subtraction from 0, but this time with taking the carry flag of a previous computation into account. Actually a redundant SBC instruction (SBC Rd, Ra, Ra) is processes Rd = 0 - Ra - Carry and is named NEC (NEC Rd, Ra).

Mnemonic	CMD	Action
INC	0000	Rd = Ra + 3-bit-immediate; immediate is formed from the Rb-bits
DEC	0001	Rd = Ra - 3-bit-immediate; immediate is formed from the Rb-bits
ADD	0010	Rd = Ra + Rb
ADC	0011	Rd = Ra + Rb + Carry-Flag
SUB	0100	Rd = Ra - Rb
SBC	0101	Rd = Ra - Rb - Carry-Flag
CMP	0110	Flags ← Ra - Rb; result is not written to a register
CPX	0111	Flags ← Ra - Rb with old flags; result is not written to a register
AND	1000	Rd = Ra AND Rb
ORR	1001	Rd = Ra OR Rb
EOR	1010	Rd = Ra XOR Rb
NAND	1011	Rd = Ra NAND Rb
BIC	1100	Rd = Ra AND NOT Rb (bit clear)
TEQ	1101	Flags ← Ra AND Rb; result is not written to a register
TST	1110	Flags ← Ra XOR Rb; result is not written to a register
SFT	1111	Rd = shift(Rb); shift by one position; shift type is specified by Rb-bits

Table 7: Data processing commands

When using the SFT (shift) instruction, the Rb bit-field encodes the actual shift functionality by an immediate value. Data of Ra is always shifted by one place in the corresponding direction. The eight different shift types are listed in the table below.

Mnemonic	Rb[2:0]	Function	Data result	Carry result
#SWP	000	Swap bytes	Rd = Ra [7:0] & Ra[15:8]	Carry = Ra[15]
#ASR	001	Arithmetical right shift	Rd = Ra[15] & Ra[15:1]	Carry = Ra[0]
#ROL	010	Rotate left	Carry = Ra[15]	
#ROR	011	Rotate right	ate right $Rd = Ra[0] \& Ra[15:1]$	
#LSL	100	Logical left shift	Rd = Ra[14:0] & '0'	Carry = Ra[15]
#LSR	101	Logical right shift	Rd = '0' & Ra[15:1]	Carry = Ra[0]
#RLC	110	Rotate left through carry	Rd = Ra[14:0] & Carry	Carry = Ra[15]
#RRC	111	Rotate right through carry	Rd = Carry & Ra[15:1]	Carry = Ra[0]

Table 8: Shift commands; note that '&' indicates a concatenation

The CPX instruction supports following flag input/output options:

Option	CMD[9:7]	Flag input	Flag output
none C_ANDZ	000	C_in = C	$C = SUB(Rx, Ry); Z = Z_{old} AND Z(SUB(Rx, Ry))$
NOTC_ANDZ	100	C_in = not C	$C = SUB(Rx, Ry); Z = Z_{old} AND Z(SUB(Rx, Ry))$
C_ORZ	010	C_in = C	$C = SUB(Rx, Ry); Z = Z_{old} OR Z(SUB(Rx, Ry))$
NOTC_ORZ	110	C_in = not C	$C = SUB(Rx, Ry); Z = Z_old OR Z(SUB(Rx, Ry))$

Table 9: CPX flag generation options

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

```
1. INC, DEC (immediate operations)
<INC|DEC>{S} <Rd>, <Ra>, <#Imm>
```

2. CMP, TST, TEQ (compare/test operations, no result write-back to a register)

```
<CMP|TST|TEQ> <Ra>, <Rb>
```

3. CPX (compare extended using flags, no result write-back to a register)

```
<CPX> <Ra>, <Rb>{, <C_ANDZ|C_ORZ|NOTC_ANDZ|NOTC_ORZ>}
```

4. ADD, ADC, SUB, SBC, AND, ORR, NAND, EOR, BIC (arithmetical / logical operations)

```
<ADD|ADC|SUB|SBC|AND|ORR|NAND|EOR|BIC>{S} <Rd>, <Ra>, <Rb>
```

5. SFT (shift operations)

```
<SFT>{S} <Rd>, <Ra>, <#Shift>
```

```
Update processing flags corresponding to result when present.
Destination register.

Ra> Operand A register.

Rb> Operand B register.

#Imm> Three bit wide immediate (0...7); with present #-prefix.

#Shift> Shift type code, corresponding to the table above; with #-prefix.
```

Assembler Examples

```
INC R0, R1, #2 ; increment R1 by 2 and store result to R0
INCS R0, R1, #2 ; increment R1 by 2, set flags and store to R0
NOP ; INC R0, R0, #0 = no operation
ADC R2, R5, R2 ; add R5 and R2 with carry and store result to R2
ORRS R3, R3, R4 ; logical or of R3 and R4, set flags
; and store result back to R3
SFT R1, R3, #ROL ; rotate left R3 one position and store to R1
CMP R2, R0 ; compare low words first, then
CPX R3, R4, C_ORZ ; compare and set Z_new = Z(result) OR Z_old
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
INC R0, R1, #2 = 0b 00.0000.001.0.010 = x"0012"
INCS R0, R1, #2 = 0b 00.0000.001.1.010 = x"001A"
ORRS R3, R3, R4 = 0b 00.1001.011.011.1.100 = x"25BC"
SFT R1, R3, #ROL = 0b 00.1111.001.011.0.010 = x"3CB2"
CPX R3, R4, C_ORZ = 0b 00.0111.010.011.1.100 = x"1D3C"
```

This project is published under the **GNU General Public License** (GPL)

18 8th of March, 2014

4.1.1. User Register Bank Access

The instruction encoding of the user register bank access subset instructions is shown in the figure below.

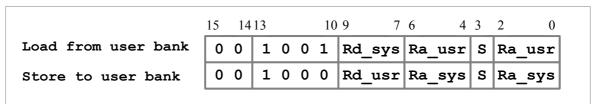


Figure 7: User register bank access instructions subset formats

Since there are no dedicated instructions to access the user register bank from a program in system mode, the access in encoded using a redundant form of the ORR and AND instructions. For Ra = Rb, these instruction are redundant, because the result is always Ra. Therefore the opcodes are reused to encode user bank transfers with the special mnemonics LDUB (load from user bank register) and STUB (store to user bank register).

The LDUB instruction uses the ORR binary format with Ra = Rb (= Ra_usr) to load the user bank register Ra_usr to system bank register Rd_sys. Whereas STSR uses the binary format of AND with Ra = Rb (= Ra_sys) to store the system bank register Ra_sys to the user bank register Rd_sys.

The transfer is only performed when executed in system mode. In user mode the load/store from/to user bank instructions will trigger the command error trap.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. LDUB (load system bank register from user bank register)

```
<LDUB>{S} <Rd_sys>, <Ra_usr>
```

2. STUB (store system bank register to user bank register)

```
<STUB>{S} <Rd_usr>, <Ra_sys>
```

Update processing flags corresponding to result when present.

 $\verb| <Rd_sys> System bank destination register. |$

<Ra_usr> User bank source register.
<Rd_usr> User bank destination register.
<Ra sys> System bank source register.

Assembler Examples

This project is published under the **GNU General Public License** (GPL)

```
LDUB R0, R4 ; load user bank register R4 to system bank register R0 STUB R3, R2 ; store system bank register R2 to user bank register R3 STUBS R2, R6 ; store system bank register R6 to user bank register R2 ; and set flags corresponding to the data in R6
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
LDUB R0, R4 = 0b 00.1001.000.100.0.100 = x''2444''
STUB R3, R2 = 0b 00.1000.011.010.0.010 = x''21A2''
STUBS R2, R6 = 0b 00.1000.010.110.1.110 = x''2166''
```

4.1.2. Program Counter Access

The instruction encoding of the program counter access subset instructions is shown in the figure below.

This project is published under the GNU General Public License (GPL)




Figure 8: Program counter access instructions subset formats

Since there are no dedicated instructions to access the program counter (PC), the access is coded using the TEQ and TST instruction with a cleared S-bit. The mnemonics of these special instructions are LDPC (load from PC) and STPC (store to PC). Not all of the bit-fields are used for the transfer operations. Fill the unused bit-fields with zeros. STPC stores Ra to the program counter. This results in a branch to the address stored in Ra. Therefor, this instruction can be used to implement absolute branches. Since Rb is not used in this case, the bit-field of Rb encodes three additional options (X, L, I, U) for storing the new PC value. These options are active when the corresponding bit is set. The different options are presented in the table below.

Bit	Option	Name	Function, when bit is set ('1')
7	X	Mode exchange	Switch to mode, which is stored in MSR's S-flag, only allowed when in system mode!
2	L	Link	Save return address (PC + 2 bytes) to link register (LR = R7)
1	I	G_Interrupt_EN	Set global external interrupt enable flag, only allowed when in system mode!
0	U	User Mode	Change operation mode to 'user mode', only allowed when in system mode!

Table 10: PC store options

If bit 0 (U) is set, the processor will resume operation in user mode at the address stored in Ra. This functionality can be used to return from a system mode program (e.g. interrupt handler) to restore operation in user mode. When bit 1 (I) is set, the global interrupt enable flag will be set. Therefore this option is useful to re-enable external interrupt after an external interrupt handler has finished. Both options will only have an effect when executed in system mode. Otherwise these options are ignored or irrelevant, respectively. Bit 2 (L) is set whenever the return address (PC + 2 bytes) shall be stored to the link register. This option is useful for implementing absolute calls to a subroutine. The option presented by bit 7 (X) will switch the current operating mode to the previous operating mode, when activated. This Features allows to restore the context after e.g. an interrupt handler, without knowing the actual mode to be restored. The actual mode is stored automatically by the CPU in the S-flag whenever a context change takes place. The X-option will copy the S-flag to the M-flag. Only the L option is allowed for programs in user mode. The X, I and U options will trigger the command error trap when executed in user mode.

NOTE: There are three different mnemonics for the STPC (store register to program counter) instruction functionality. All of them perform the same operation and support the previously mentioned options. The three different aliases (STPC, RET, GT) are just used to make the actual intention of an instruction more clear (e.g. RET for a return from subroutine...).

The LDPC instruction will load the current program counter minus 4 bytes (this corresponds to the actual address of the executed LDPC instruction) to register Rd.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the

This project is published under the **GNU General Public License** (GPL)

lexical rules.

1. LDPC (load PC to register)

```
<LDPC> <Rd>
```

2. STPC/RET/GT (Three different mnemonics for the same operation: Store register to PC)

```
<STPC|RET|GT>{X|U}{I}{L} <Ra>
```

{X U }	Change to user mode when 'U' is present or restore saved operating mode ('X'),
	stored in the s-flag, when present. Only executed when in system mode.
{ I }	Set global external interrupt flag when present (and executed in system mode).
{L}	Save return address (PC + 2 bytes) to link register when present.
<rd></rd>	Destination register.
<ra></ra>	Source register.

Assembler Examples

```
LDPC R0
           ; copy PC to R0
STPC R7
           ; store R7 to PC (absolute jump to [R7])
           ; store R7 to PC (same operation, just another mnemonic)
           ; store R7 to PC (same operation, just another mnemonic)
     R7
           ; store LR to PC and switch to user mode (e.g. return from
RETU R7
           ; software interrupt handler)
RETUI R7
           ; store LR to PC, switch to user mode and set global external
           ; interrupt enable flag (e.g. return from ext. int. handler)
           ; store R2 to PC and restore previous operating mode
GTX
     R2
           ; store R2 to PC and set global external interrupt flag
GTI
     R2
GTL
           ; store R2 to PC and store return address to LR
     R2
GTUL R3
           ; store R3 to PC, change to user mode and store return address
           ; to LR
           ; store R3 to PC, set global external interrupt flag and store
GTIL R3
           ; return address to LR
GTXIL R3
           ; store R3 to PC, restore previous operating mode, set
            ; global external interrupt flag and store return addr. to LR
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
LDPC R0 = 0b 00.1110.000.0000 = x"3800"

RETUI R7 = 0b 00.1101.000.111.0.0.1.1 = x"3473"
```

4.1.3. Machine Status Register Access

The instruction encoding of the machine status register access subset instructions is shown in the figure

This project is published under the GNU General Public License (GPL)

below.

	15	14	13			10	9		7	6		4	3	2		0
Load MSR to register	0	0	0	1	1	0		Rd		A	В	0	0	0	0	0
Store register to MSR	0	0	0	1	1	1	0 0 0		A	В	0	0		Rb		
Store I. to ALU flags		0	0	1	1	1	0	T	N	1	В	1	0	<u>o</u>	<u>c</u>	<u>z</u>

Figure 9: Machine status register access instructions subset formats

Since there are no dedicated instructions to access the machine status register (MSR), the access in encoded using the CMP and CPX instruction with a cleared S-bit. The mnemonics of these special instructions are LDSR (load register from MSR), STSR (store register to MSR) and STAF (store immediate to MSR's ALU flags). The LDSR instruction uses the CMP binary format with S='0' and will load the current MSR to Rd. Whereas STSR and STAF use the binary format of CPX with S='0' to store Rb or an immediate to the MSR. Not all of the bit-fields are used for the transfer operations. Fill the unused bit-fields with zeros.

Corresponding to the option bits (A, B), data can be written to the complete MSR, only to the ALU flags (user and system ALU flags), only to the system ALU flags or only to the user ALU flags. In user mode, only the user mode ALU flags can be copied to a register (all other bits are set to zero) and only a store to the user ALU flags can be executed. All other options will trigger the command error interrupt when being executed in user mode. In system mode, all different load and store options are allowed. These different options and their behavior in user/system mode when executing LDSR or STSR instruction are shown in the table below.

A-bit	B-bit	Mode	READ access (LDSR)	STORE access (STSR)	Software Interrupt
0	0		Read complete MSR	Write complete MSR	No
0	1	System	Only read all ALU flags	Only write all ALU flags	No
1	0	mode	Only read system ALU flags	Only write system ALU flags	No
1	1		Only read user ALU flags	Only write user ALU flags	No
0	0		Unauthorized access!	Unauthorized access!	Yes!
0	1	User	Unauthorized access!	Unauthorized access!	Yes!
1	0	mode	Unauthorized access!	Unauthorized access!	Yes!
1	1		Only read user ALU flags	Only write user ALU flags	No

Table 11: MSR store options and mode corresponding behavior

The STAF instruction is used to directly copy an immediate encoded within the instruction either to the system mode ALU flags or to the user mode ALU flags only. The \underline{T} , \underline{N} , \underline{O} , \underline{C} , \underline{Z} bit-fields correlate to the new value the user/system mode ALU flags will be set to. Note, that option bit A must be set to '1' for STAF operations. Option bit B encodes if the immediate flag data is written to the system mode ALU flags (B = '0') or to the user mode ALU flags (B = '1'). A direct initialization of the system mode ALU flags using the STAF instruction is only allowed in system mode.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the

This project is published under the GNU General Public License (GPL)

lexical rules.

```
1. LDSR (load register from machine status register)
```

```
<LDSR> <Rd>, {usr flags|sys flags|alu flags}
```

2. STSR (store register to machine status register)

```
<STSR> <Rb>, {usr_flags|sys_flags|alu_flags}
```

3. STAF (store immediate to system / user ALU flags)

```
<Rd>
<Rb>
<#Imm>
{usr_flags|sys_flags|alu_flags}
```

<usr flags|sys flags>

<STAF> <#Imm>, <usr flags|sys flags>

Destination register.

Source register.

Five bit immediate, loaded to usr/sys ALU flags.

Read/write user / system / all ALU flags or full MSR, when no argument is present. Write user ALU flags or system ALU flags.

Assembler Examples

```
LDSR R1, usr_flags ; load MSR ALU flags to R1
STSR R3 ; store R3 to MSR (full access)
STSR R4, usr_flags ; only write R4 to the user mode ALU flags
STAF #1, usr_flags ; set zero flag of the user mode ALU flags
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
LDSR R1, usr_flags = 0b 00.0110.001.110.0.000 = x"18E0"

STSR R3 = 0b 00.0111.000.011.0.000 = x"1830"

STSR R4, usr_flags = 0b 00.0111.110.100.0.000 = x"1E40"

STSR R4, alu_flags = 0b 00.0111.010.100.0.000 = x"1A40"

STAF #1, usr_flags = 0b 00.0111.000.111.0.001 = x"1A71"
```

4.2. Memory Access

The instruction encoding of the memory access instructions is shown in the figure below.

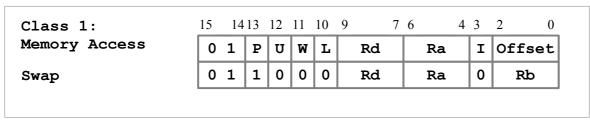


Figure 10: Memory access instructions formats

The memory access instructions allow to move data between a data register and an addressed memory location. Ra always specifies a register, pointing to the accessed memory address. The L-bit determines the data transfer direction. When L is set to '1', the content of Rd is transferred to the memory location addressed (STR) by Ra. If the L-bit is set to '0', data from the assigned memory address is loaded into the register (LDR), that is specified by the Rd bit-field.

Several different indexing options are implemented. To the memory base address (in Ra), an offset can be added or subtracted (U = '0' subtract, U = '1' add) before or after the actual memory access. Setting the P-bit to '0' will add/subtract the offset before the memory access. When the P-bit is set, the offset will be added/subtracted from or to the base register after the memory access. The result of the operation base +/- offset can be written back to the base register Ra when the W-bit is set. The actual offset can either be a register (I = '0') or a unsigned 3-bit immediate (I = '1').

Bit	Option	Function when set to '0'	Function when set to '1'
13	P	Pre-indexing (add/subtract offset to/from base before the actual memory access)	Post-indexing (add/subtract offset to/from base after the actual memory access)
12	U	Subtract offset from base register	Add offset to base register
11	W	Discard result of base+/- offset after memory access	Write back the result of base +/- offset to the base register after the actual memory access
10	L	Load data from memory into a register	Store data from a register to memory
3	I	Offset is a register specified in the offset bit-field	Offset is an unsigned 3-bit immediate specified in the offset bit-field

Table 12: Memory access options

One kind of indexing option does not seem logical: A post indexing without a base write back (P = '1' and W = '0'). Here, the post indexing operation is redundant. Therefore, this type of option code is used to specify a new memory access instruction: The atomic memory data swap (SWP). This instruction copies the data of the memory location, which is specified by Ra, to Rd and moves afterwards the data of Rb (defined by the Offset bit-field) to the assigned memory location (Rb => M[Ra] => Rd). Hence, a load instruction is followed by a store instruction. Both instructions are tied together (atomic), so no interrupt can be executed before the swap instruction has finished. This is very useful for implementing system semaphores.

25 8th of March, 2014

by Stephan Nolting

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

```
1. LDR, STR (load/store from/to memory)
```

```
<LDR|STR> <Rd>, <Ra>, <+|-><Rb|#Imm>, <pre|post>, {!}
```

2. SWP (swap registers with memory)

```
<SWP> <Rd>, <Ra>, <Rb>
```

Assembler Examples

```
LDR R1, R2, +R3, pre ; R1 <= M[R2+R3]

LDR R1, R2, +R3, pre, ! ; R1 <= M[R2+R3] and set R2=R2+R3 afterwards

LDR R1, R2, -R3, post, ! ; R1 <= M[R2] and set R2=R2-R3 afterwards

LDR R1, R2, +#2, post, ! ; R1 <= M[R2] and set R2=R2+2 afterwards

STR R4, R5, +#0, pre ; R4 => M[R5]

STR R4, R5, -R6, pre ; R4 => M[R5-R6]

STR R4, R5, -#2, pre, ! ; R4 => M[R5-2] and set R5=R5-2 afterwards

SWP R2, R3, R4 ; M[R3] => R2; R4 => M[R3]
```

Coding Examples

26

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

4.3. Branch and Link

The instruction encoding of the branch and link instructions is shown in the figure below.




Figure 11: Branch and link instructions format

The branch instruction B is used to perform a relative jump to a different location within a range between -256 and +255 words (remember, 1 word = 2 bytes). The offset is stored as two's complement in the offset bit-field. When using the BL instruction (with L = '1'), a linked branch is executed. Therefore, the return address (PC + 2 bytes) is stored to the link register LR (= R7). The jump can be conditional when using a specific condition suffix for the B/BL instruction from the table below. The different condition suffixes and codes as well as their computation scheme (based on the current state of the ALU flags) are listed in the table below.

ASM Suffix	Cond code	Condition		Condition computation (flags)
EQ	0000	Equal	Ra = Rb	Z
NE	0001	Not equal	Ra != Rb	not Z
CS	0010	Unsigned higher or same	Ra =< Rb	С
CC	0011	Unsigned lower	Ra > Rb	not C
MI	0100	Negative	(Ra - Rb) < 0	N
PL	0101	Positive or zero	(Ra - Rb) >= 0	not N
OS	0110	Overflow		0
OC	0111	No overflow		not O
HI	1000	Unsigned higher	Ra < Rb	C and (not Z)
LS	1001	Unsigned lower or same	Ra >= Rb	(not C) or Z
GE	1010	Greater than or equal	Ra =< Rb	N xnor O
LT	1011	Less than	Ra > Rb	N xor O
GT	1100	Greater than	Ra < Rb	(not Z) and (N xnor O)
LE	1101	Less than or equal	Ra >= Rb	Z or (N xor O)
TS	1110	Transfer flag set	-	T
AL	1111	Always	-	1

Table 13: Condition codes

This project is published under the GNU General Public License (GPL)

A branch (and link) is only executed if the specified condition is true or when there is no conditional suffix.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. B (branch, conditional or unconditional)

```
<B>{L} {cond} <label>

{L} Store return address to link register when present.
{cond} Condition code from the table above. If not present, 'always' (AL) condition is used.
<label> Branch label, relative offset in two's complement (max -256/+255 words).
```

Assembler Examples

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
B label_2 = 0b 10.1111.0.000000001 = x"BA01"

label_2:
    BL subr_1 = 0b 10.1111.1.000000001 = x"BE01"

subr_1:
    BLEQ subr_1 = 0b 10.0000.1.111111111 = x"83FF"
```

28 8th of March, 2014

4.4. Load Immediate

The instruction encoding of the load immediate instructions is shown in the figure below.

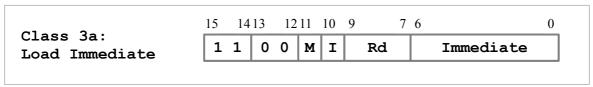


Figure 12: Load immediate instructions format

The load immediate instructions are used to load an 8-bit constant encoded within the instruction to the high byte or sign extended to all bits of the register Rd, respectively. The immediate constant itself is constructed from bit 10 concatenated with bits 6 downto 0 of the instruction word. The LDIL (M = '0') mnemonic will load the immediate to the low byte of Rd. All bits of the high byte of Rd will be loaded with the most significant bit of the immediate. This results in a complete load of Rd with the sign (bit 7 of the immediate \rightarrow bit 10 of the instruction opcode) extended immediate. The LDIH (M = '1') mnemonic will load the immediate to the high byte of Rd, leaving the low byte of Rd unchanged. When loading a true 16-bit immediate to register, make sure to load the low byte of it first, otherwise the high byte will be discarded.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. LDIL, LDIH (load immediate 8-bit constant to lower/upper byte)

```
<LDI><L|H> <Rd>, <#Imm>

<L|H>
Load only high byte of destination register (H) or load whole register with sign extended immediate (L).

<Rd>Destination register.

<#Imm> 8-bit "unsigned" immediate value; with present #-prefix.
```

Assembler Examples

```
(linear execution of all following instructions is assumed)

LDIL R4, #255 ; load sign extended 255 (= -1) to R4 (R4 = x"FFFF")

LDIL R4, #2 ; load sign extended 2 to R4 (R4 = x"0002")

LDIH R4, #7 ; load 7 to the high byte of R4 (R4 = x"0702")
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
LDIL R4, #255 = 0b 11.00.0.1.100.1111111 = x''C67F''

LDIL R4, #2 = 0b 11.00.0.0.100.000010 = x''C202''

LDIH R4, #7 = 0b 11.00.1.0.100.0000111 = x''CA07''
```

This project is published under the **GNU General Public License** (GPL)

4.5. Bit Manipulation

The instruction encoding of the bit manipulation instructions is shown in the figure below.

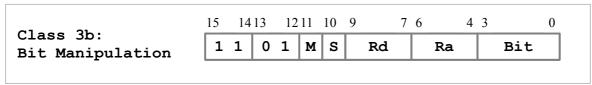


Figure 13: Bit manipulation instructions format

The bit manipulation instruction are used to manipulate a single bit of a register and to store the result to the same or another register, whereas the previous state of the bit is irrelevant. The actual bit is addressed by an 4-bit immediate in the Bit-field.

The SBR instruction will set the assigned bit to '1', whereas the CBR instruction clears the bit. A store of the assigned bit to the T-flag is possible by using the STB instruction. For this case, the Rd bit-field is irrelevant and must be set to "000". The LDB instruction loads the current state of the T-flag to the assigned bit. The different option codes (M and S bits) of the four bit manipulation instructions are shown in the table below.

M	S	Function
0	0	Take data from register Ra, <u>clear</u> the assigned bit and store the result to Rd
0	1	Take data from register Ra, set the assigned bit and store the result to Rd
1	0	Take data from register Ra, <u>load</u> the T-flag to the assigned bit and store the result to Rd
1	1	Take the assigned bit from register Ra and store it to the T-flag; no data write back to Rd

Table 14: Bit manipulation operations

Inverted T-Flag transfer

The Atlas CPU only features a T-flag-based branch, that is executed whenever the T-flag is set (BTS / BLTS). But for many applications it might be necessary to branch when a bit, stored to the T-flag, is cleared. Therefor, a more efficient way than using two branches have been implemented. The bit of a register, which stored the T-flag, can be inverted during the transfer to adapt to this situations. Then, a BTS branch command will execute when the original bit of the register is zero. To invert a bit while it is being transferred to the T-flag, use the "store bit to T-flag and invert" instruction STBI. The original source bit of the register is not affected by this instruction. The inverted transfer mode is indicated by setting bit of the unused destination register bit-filed to '1'.

Parity of a Register

30

The parity of a register is determined by the number of bits, that are set ('1'). An even number of '1's results in a even parity (Parity = 0), an off number of '1' results in an odd parity (Parity = 1). Hence, the actual parity is computed by an XOR of all register bits. The Atlas CPU supports hardware for directly generating the parity result of a register. Use the SPR instruction (store parity) to directly store the parity of the source register to the T-flag. To indicate this instruction, the unused bit 8 of the destination field is set. Of course it is also possible to store the inverted parity bit using the SPRI instruction to the T-flag (in this case bit 7 and 9 are set). For this instructions the bit-address-filed (bit 3:0) is not used and should be set to "0000".

Register-given index for store-to-T-Flag operations

When using the STB or STBI command, the indexed bit is given by a four-bit immediate. Since bit 9 of the corresponding opcode is not uses for coding the operation itself, it is used to select between the mentioned immediate indexing or a register-based immediate (when bit 9 is set). For the last case, the actual bit index is given by the lowest 4 bit of the second register argument. Use the STBR instruction to store the bit, indexed by the lowest 4 bit of the second source register, to the T-flag. Use the STBRI instruction to store the inverted bit, indexed by the lowest 4 bit of the second source register, to the T-flag.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. SBR, CBR (set/clear immediate-indexed bit from register Ra and write result to Rd) <SBR|CBR> <Rd>, <Ra>, <#Imm>

```
2. LDB (load immediate-indexed bit from T-flag and write result to Rd) <LDB> <Rd>, <Ra>, <#Imm>
```

- 4. SPR/SPRI (store parity to T-flag / store inverted parity to T-flag) <SPR>{I} <Ra>
- 4. STBR/STBRI (store register-indexed bit to T-flag / store inverted register-indexed bit to T-flag) <STBR>{I} <Ra>, <Ri>

```
Invert source/parity bit while it is transferred to the T-flag when present.

Destination register.

Ra>
Source register.

Index register.

#Imm>
4-bit immediate value addressing the desired bit; with present #-prefix.
```

Assembler Examples

```
SBR R3, R4, #4 ; set bit 4 of R4's data and store result to R3
CBR R0, R0, #12 ; clear bit 12 of register R0
STB R7, #1 ; store bit 1 of R7 to the T-flag
STBI R7, #1 ; store inverted bit 1 of R7 to the T-flag
LDB R7, R0, #5 ; copy T-flag to bit 5 of R0's data and store result
; to R7
SPR R7 ; store parity of r7 to the T-flag
STBR R7, R4 ; store bit R7[R4(3:0)] to the T-flag
```

Coding Examples

This project is published under the **GNU General Public License** (GPL)

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
SBR R3, R4, #4 = 0b 11.01.0.1.011.100.0100 = x"D5C4"

CBR R0, R0, #12 = 0b 11.01.0.0.000.000.1100 = x"D00C"

STB R7, #1 = 0b 11.01.1.1.000.111.0001 = x"DC71"

STBI R7, #1 = 0b 11.01.1.1.001.111.0001 = x"DCF1"

LDB R7, R0, #5 = 0b 11.01.1.001.111.000.0101 = x"DB85"

SPR R7 = 0b 11.01.1.1.010.111.0000 = x"DD70"

STBR R7, R4 = 0b 11.01.1.1.100.111.0100 = x"DE74"
```

4.6. Coprocessor Data Processing

The instruction encoding of the coprocessor data processing instructions is shown in the figure below.

This project is published under the GNU General Public License (GPL)




Figure 14: Coprocessor data processing instructions format

The coprocessor data processing instruction CDP is used to control one of the two external coprocessor to perform a specific coprocessor-internal operations. The actual functionality of this instruction correspond to the implemented coprocessor. However, it is designed to specify two coprocessor registers, which can be used as source and destination register for operations. A function control can be determined via the three-bit CMD immediate bit-field. Register addresses as well as the command opcode are directly displayed to the coprocessor port. See the coprocessor chapter in the architecture section of this data sheet for more information.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. CDP (coprocessor data processing)

```
<CDP> <#CP>, <Ca>, <Cb>, <#Cmd>

<#CP>
    Coprocessor ID ("#0" or "#1")
    Ca>    Coprocessor operand A / destination register.

<Cb>    Coprocessor operand B register.

<#Cmd>    3-bit immediate value presenting a coprocessor command.
```

Assembler Examples

```
CDP #0, C0, C0, #4 ; instruct CP 0 to execute command 4 on registers c0 and c0 and place result in register c0 CDP #1, C7, C3, #1 ; instruct CP 1 to execute command 1 on registers c7 and c3 and place result in register c7
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
CDP #0, C0, C0, #4 = 0b 11.10.0.0.000.000.0.100 = x''E004'' CDP #1, C7, C3, #1 = 0b 11.10.0.1.111.011.0.001 = x''E7B1''
```

4.7. Coprocessor Data Transfer

The instruction encoding of the coprocessor data transfer instructions is shown in the figure below.




Figure 15: Coprocessor data transfer instructions format

To exchange data between a coprocessor register and an Atlas CPU register, the MRC (load data from coprocessor) and MCR (store data to coprocessor) instructions are used. Parallel to the data transfer, a command can be specified to trigger additional coprocessor operations. The L-bit determines the transfer direction (move data from coprocessor to CPU: L = '0', move data from CPU to coprocessor: L = '1').

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

```
1. MRC (move coprocessor- register to CPU-register) 
<mrc> <#CP>, <Rd>, <Ca>, <#Cmd>
```

2. MCR (move CPU-register to coprocessor-register)

<MCR> <#CP>, <Cd>, <Ra>, <#Cmd>

Assembler Examples

```
MRC \#0, R3, C4, \#1 ; CP0: R3 <= C4 and execute CMD 1 MCR \#1, C7, R3, \#0 ; CP1: C7 <= R3 and execute CMD 0
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
MRC #0, R3, C4, #1 = 0b 11.10.1.0.011.100.0.001 = x"E9C1"

MCR #1, C7, R3, #0 = 0b 11.10.1.1.111.011.1.000 = x"EFB8"
```

This project is published under the **GNU General Public License** (GPL)

4.8. Multiply

The instruction encoding of the multiply instruction is shown in the figure below.




Figure 16: MUL instruction format

The MUL instruction will multiply Ra and Rb and place the lowest 16 result bits in Rd (Rd \leftarrow (Ra*Rb)(15:0)). This instruction does not perform any kind of flag manipulation.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. MUL (multiply)

Assembler Examples

```
MUL R0, R1, R2 ; R0 = R1 * R2
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
MUL RO, R1, R2 = 0b 11.11.00.000.001.0.010 = x''F012''
```

Alternative Implementation of a MAC Instruction

Since the implementation of an MAC (x = a*b+c) operation consumes a lot of area and increases the critical path, the MAC instruction has been removed from the Atlas CPU specifications. However, it can easily replaced by two arithmetical instructions (see below).

```
MUL R3, R1, R2 ; R3 = R1 * R2 - tmp=a*b
ADDS R0, R0, R3 ; R0 = R0 + R3 - x=tmp+c, with flag update
```

This project is published under the **GNU General Public License** (GPL)

4.9. Sleep Command

The instruction encoding of the sleep command is shown in the figure below.




Figure 17: Sleep command

The sleep command will set the CPU in deep sleep mode disabling the pipeline as well as the instruction fetch system. Thus, the power consumption caused by dynamic switching activity can be massively reduced.

After entering sleep mode, the CPU is frozen an will only wake up in reset or an incoming interrupt request on then xirq0 or xirq1 signal pin. Note, that the corresponding interrupt lines have to be activated (**X0** and/or **X1** flag have to be set; the state of the global interrupt enabled flag **GX** is unimportant). A 9-bit tag can be applied to the instruction, to specify information about the sleep entering conditions, which can be checked by an interrupt handler.

If the GX flag is cleared, operation resumes right after the sleep command when an interrupt request occurs. When the GX flag is set, operation resumes in the corresponding interrupt handler. Anyway, both cases require the X0 and/or X1 flag to be set.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

```
1. SLEEP (set CPU to sleep mode)
```

```
<SLEEP> { #Tag }
```

{#Tag} 9-bit immediate value, automatically set to zero if not present; use #-prefix.

Assembler Examples

```
SLEEP #412 ; go to sleep mode with '412' as tag
SLEEP ; go to sleep mode with no tag
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
SLEEP #412 = 0b 11.11.01.0.110011100 = x"F59C"

SLEEP = 0b 11.11.01.0.000000000 = x"F400"
```

This project is published under the **GNU General Public License** (GPL)

36 8th of March, 2014

4.10. Register-Based Branches

The instruction encoding of the register-based branch instructions is shown in the figure below.




Figure 18: Register-based branches

The register-based branches allow to conditionally branch absolute (bit 8: A = '1') to a destination given by a register or relative (bit 8: A = '0') to a register-given offset. The condition codes in the **COND** field are the same as the ones from the "branch / branch and link" section (see above). It is also possible to save the return address to the link register by setting the link bit (bit 7: L = '1').

Assembler Syntax

<RBA|RBR>{L}{cond} <Rb>

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. RBA, RBR (register-based absolute/relative branch, conditional or unconditional, link-option)

```
Absolute branch, register Rb gives branch destination.

Relative branch, register Rb gives branch offset.

Store return address to link register when present.

Condition code (see above). If not present, 'always' (AL) condition is used.

Register with branch destination / offset.
```

Assembler Examples

```
RBA R4 ; always branch absolute to [R4]
RBREQ R4 ; if equal, branch to PC+R4
RBRLEQ R4 ; if equal, branch to PC+R4 and link
```

Coding Examples

37

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
RBA R4 = 0b 11.11.01.1.1.0.1111.100 = x"F77C"

RBREQ R4 = 0b 11.11.01.1.0.0.0000.100 = x"F604"

RBRLEQ R4 = 0b 11.11.01.1.0.1.0000.100 = x"F684"
```

38

4.11. Undefined Instructions

The instruction encoding of the undefined instructions is shown in the figure below.




Figure 19: Undefined instruction formats

These instruction types are not implemented yet and are used to keep some space for further instruction set extensions. When executed, the undefined instructions will trigger the command error trap.

NOTE: The undefined instruction class 1 (opcode starts with "111101") may be replaced by some useful instruction one day. Therefore, this instruction class should not be used now.

NOTE: The undefined instruction class can be used as second class of software interrupts – also with a 10-bit wide tag (\rightarrow see System Call instruction). This class will always be the undefined instruction class (no implementation of additional operations using this opcodes are planed).

This project is published under the GNU General Public License (GPL)

4.12. System Call

The instruction encoding of the system call instruction is shown in the figure below.




Figure 20: System call instruction format

The system call (SYSCALL) instruction is used to enter system mode from a running user program (software interrupt). When executed, program execution will stop, the re-entry point (return address) plus 2 bytes offset will be stored in the system link register, the mode will be changed to system mode and program execution will resume at the software interrupt address. The lowest 10 bits of the instruction can be used to directly transfer an argument (tag) to the software interrupt handler. This tag can be extracted by the handler after loading the system call's causing instruction.

When executing the SYSCALL instruction in user mode, the instruction will behave like a branch and link instruction to the software interrupt vector, which is executed in system mode. When returning with RTX from the software interrupt handler, the original program will be resumed in user mode, since the previous mode (system) has been stored in the MSR.

Assembler Syntax

Items in { } are optional, whereas items in < > are required. Note the spaces and commas introduced by the lexical rules.

1. SYSCALL (software interrupt by system call)

```
<SYSCALL> { #Tag}
```

{#Tag} 10-bit immediate value, automatically set to zero if not present; use #-prefix.

Assembler Examples

```
SYSCALL #1002 ; trigger software interrupt with '1002' as tag
SYSCALL ; trigger software interrupt with no tag
```

Coding Examples

The assembled instruction are shown in binary (0b ...) and hexadecimal (x"...") format, where the dots in the binary format present the different bit-fields.

```
SYSCALL #1002 = 0b 11.11.11.1111101010 = x"FFEA"

SYSCALL = 0b 11.11.11.0000000000 = x"FC00"
```

This project is published under the GNU General Public License (GPL)

39 8th of March, 2014

5. Atlas Evaluation Assembler

I've programmed a small assembler, that is capable of assembling the previously explained instructions into an Atlas CPU-compatible binary format. The program is located in the *asm* folder and can be run using the command prompt. The actual assembly program is passed as first argument when calling the assembler. You can specify a 10 character long name for the assembled image as second argument, but this is optional.

For example to assemble the bootloader source, type and execute this in your command prompt:

```
...\asm>atlas_asm ..\software\bootloader\atlas_2k_bootloader.asm
```

In the folder of the assembler executable, the program will generate a "init.vhd" file, which contains the data initialization area of a VHDL memory declaration (the program memory) – this file can be used for synthesis initialization and simulation. The "out.bin" file contains the assembled program in binary format and is dedicated for the use of the Atlas 2k bootloader. All warnings and error will also display the corresponding line. These lines correspond to the "pre_processor.asm" file.

NOTE: The assembler program was compiled for a 64-bit Windows machine, maybe you need to recompile the assembler sources to make it work on your system.

NOTE: If you are using instruction constructs, like an redundant ORR, which evolves to a user-bank transfer, the assembler will output a warning to inform you.

5.1. Pre-Processor Instructions

40

The pre-processor instructions can make assembler-life much easier, since they present different features to create more abstract programs. See the *test.asm* file in the *software/examples* folder for an example assembler program including all the different pre-processor instructions.

Instruction	Example	Function
.equ	<pre>.equ temp r4 .equ sys_reg c1 .equ de_val #1 .equ mem_size #256 .equ test_b #0b10100011 .equ test_h #0xac</pre>	This instruction allows to use aliases for the CPU register (r0,, r7), the coprocessor register (c0,, c7) or immediate values (positive integers, 16-bit, decimal/ binary/ hexadecimal representation, introduced with '#'-prefix)
.space	.space #4 .space mem_size	The space instruction will create an area of a given size, that is initialized with zeroes (x"0000" = NOPs)
.dw	.dw #23432	The dw instruction can be used to directly initialize the corresponding memory position with a positive, 16-bit immediate (decimal value, introduced with '#'-prefix), with a previously defined .equ-definition or with a branch label address ("[label]")
.stringz	.stringz "Hey there!"	With the .string instruction you can initialize memory directly with an ASCII string. All ".stringz" strings are automatically terminated with a zero.
.include	.include "file_name"	Copy content of file file_name to the include instruction's position (file must be in the same directory).

Table 15: Pre-processor instructions

by Stephan Nolting

5.2. Example Programs

This chapter presents some example program fragments, that illustrate how to use the Atlas assembler mnemonics to create your own application programs. Note, that of course all code fragments need to be included into a 'real' program to run properly.

5.2.1. Bit Test

This is an example of how to use the T-flag to implement bit test operations.

Bit test operations are also very often used to leave a linear program execution. Since the BTS (branch if T-flag is set) instruction only executes, when the T-flag is set, the following implementation of a taken branch whenever a bit is zero seems obvious.

```
;Branch when bit is cleared (bad implementation)
;executed in system or user mode

ADD R0, R4, R3 ; begin of linear program (just an example)
STB R0, #9 ; store bit 9 of r0 to T-flag to test it
BTS bit_is_set ; continue linear program execution when bit is set
B bit_cleared ; branch to "bit_clear" when r0[9] is '0'
bit_set:
SUB R2, R1, R4 ; end of linear program (just an example)
...
bit_clear: ... ; execute this when original bit r0[9] is zero

**Total Continuation**

**Tota
```

But we can do better than that! The bit, which is stored to the T-flag, can be inverted during the transfer. Thus, a true zero-testing branch using also the BTS instruction can be implemented.

8th of March, 2014

by Stephan Nolting

5.2.2. Comparing Large Operands

The CPX instructions allows to compare two registers while also taking the zero and carry flags of a previous comparison into account. This is very suitable for implementing a comparison of two arbitrarily wide operands.

```
;48-bit comparison
;executed in system or user mode

; R2, R1, R0 contain 48-bit operand A (r2 most / r0 least significant bits)
; R5, R4, R3 contain 48-bit operand B (r5 most / r3 least significant bits)

CMP R0, R3
; start to compare the least significant bits
CPX R1, R4
; CPX = compare and also take flags into account
CPX R2, R5
; finish with comparing the most significant bits

BEQ equal
; go to "equal" when A=B
BMI a_negative
; go to "a_negative" when A is negative
BHI a_uhigher
; go to "a_uhigher" when A is unsigned higher than B
```

5.2.3. Loop Counters

42

Conditional loops are one of the basic elements within a program. The following example shows an example of how to implement loops with a small overhead.

5.2.4. MAC Operation with Flag Update

The MUL instruction features no status flag update. Also, a MAC instruction is not included in the Atlas CPU specifications. So, if a MAC operation with flag update is required, it is suitable to construct the actual MAC operation from additional instructions.

```
;constructed MAC operation with flag update
;executed in system or user mode

; compute R0=R1*R2+R3 and set flags corresponding to the result

MUL R0, R1, R2 ; R0 = R1 * R2
ADDS R0, R0, R3 ; R0 = R0 + R3 and set status flags
```

5.2.5. Branch Tables

Branch or call tables are a good method to easily jump to different locations, without the need of comparing a register with immediate values. For example, this kind of value-defined branching can be used to trigger different operation using the system call instruction with a tag, where this tag represents the actual subroutine number, that shall be called. Note, that in the following example, only 16-bit addresses are used. Thus, the subroutine must be in the same page as the branch-table code.

```
;branch/call table (subroutine addresses are 16-bit, so in the same page)
      ; executed in system or user mode
      ; R4 presents the number of subroutine to be called
      ; thus, a '2' in R4 would call subroutine 2
      ; first we have to load the 16-bit base address of the branch table
      ; load high byte of label address
      ; multiply index by two by left-shifting one position; this is necessary, because
      ; each subroutine address in the table is 16-bit wide and the Atlas CPU uses
      ; byte addressing mode by default
      SFT R4, R4, #LSL
      LDR R1, R0, +R4, PRE GTL R1
                              ; add offset to base and load address to r1
                               ; goto and link \rightarrow branch to the loaded address in r1 and
                               ; save return address to the link register
                               ; beginning of branch table
branch table:
                               ; absolute 16-bit address of label "subroutine 0"
.DW [subroutine 0]
                               ; absolute 16-bit address of label "subroutine 1"
.DW [subroutine 1]
                              ; absolute 16-bit address of label "subroutine 2"
.DW [subroutine 2]
                               ; absolute 16-bit address of label "subroutine 3"
.DW [subroutine 3]
. . .
```

5.2.6. Stack Operations

43

A stack is a common data structure of many applications. The Atlas CPU provides indexing memory access instruction do directly modify the stack pointer (R6) while loading or storing data (R0) from or to the stack. The following example shows how to implement push and pop operations for positive (from low to high memory addresses) and negative (from high to low memory addresses) growing stacks.

```
;stack operation (stack pointer is R6 by default)
;executed in system or user mode

; positive growing stack
STR R0, R6, +#2, post, ! ; push r0 on the stack
LDR R0, R6, -#2, pre, ! ; pop r0 from the stack

; negative growing stack
STR R0, R6, -#2, post, ! ; push r0 on the stack
LDR R0, R6, -#2, pre, ! ; pop r0 from the stack
LDR R0, R6, +#2, pre, ! ; pop r0 from the stack

LDR R0, R6, +#0, pre ; peek operation: r0 = top of stack
```

5.2.7. Print Strings

String are used to process data arrays. For instance, these can be arrays of ASCII characters. The following example shows how to output a string via a serial port (the UART for this example is connected as coprocessor #0, coprocessor register C0 is the UART core, coprocessor commands are used to determine the actual accessed UART register). This code also outputs a line break after the string.

```
;print strings + line feed
     ; executed in system or user mode (depends on access authorization to UART)
     ; load absolute address of string
     . . .
text string:
.stringz "To boldly go, where no man has gone before..." ; zero-terminated text string
; UART string print subroutine, sends string addressed with r3
uart print: MOV R1, LR
                                             ; save link register
uart print loop: LDR R2, R3, +#1, post, !; get one string 'word'
                                             ; high byte mask
                 LDIL RO, low[#0xFF00]
                 LDIH RO, high[#0xFF00]
                 AND R2, R2, R0
                                             ; apply mask
                 SFTS R2, R2, #SWP
                 BEQ uart_print_end
                                              ; swap bytes & zero test
                                              ; done when r2 is zero
                    uart_sendbyte
                 BL
                                             ; send one byte
                   uart_print_loop
                                             ; resume loop
                 В
uart print end:
                LDIL R2, #0x0A
                                             ; send line feed
                 BL uart sendbyte
                 LDIL R2, \overline{\#}0x0D
                                            ; carriage return
                 BL uart_sendbyte
                 RET R1
                                             ; done
; UART sendbyte subroutine, transmits r2 via UART
uart sendbyte: ; send r2 via system UART...
                RET LR
```

5.2.8. Count Leading Zeros

This example shows how to count the number of leading zeros of a register.

```
; count leading zeros of r0, output in r1
       ; executed in system or user mode
       ; load demo data 1478 to r0 \rightarrow 5 leading zeros
       LDIL RO, #0b11000110 ; load low part of dummy data using binary format LDIH RO, #0b00000101 ; load high part of dummy data using binary format
       LDIL R1, #16
                                      ; r1 is 16 if all of r0's bits are zero
       TEQ R0, R0
                                     ; is r0 already zero?
       BEQ end
                                      ; skip counting if r0 is zero
start: CLR R1
                                     ; start of loop: clear counter register r1
start: CLR RI ; start of loop: clear counter re loop: SFTS RO, RO, #LSL ; shift msb of rO into carry flag
                                     ; terminate if a '1' was found
       BCS end
       INC R1, R1, #1
                                      ; increment zero-counter
       B loop
end: ...
                                      ; number of leading zeros is in r1
```

5.2.9. LFSR Implementation using Parity of a Register

This example shows how to use the parity hardware to implement a LFSR (linear feedback shift register) for pseudo-random number generation. Therefore, bit 15, 14, 12 and 3 of the LFSR (the taps) are XOR-ed and left-shifted into the LFSR to produce the next value. The actual XOR function of all bits of a register is done by using the parity generation instruction.

```
;LFSR implementation
      ;executed in system mode (just for this example)
      LDIL R0, #1
                                  ; load LFSR seed (=1)
      LDIL R1, #0b00001000 ; load low part of LFSR taps (bit 3)
LDIH R1, #0b11010000 ; load high part of LFSR taps (bits
                                  ; load high part of LFSR taps (bits 15, 14, 12)
loop: AND R2, R0, R1
                                  ; isolate tap bits in r2
                                  ; XOR all bits of r2 and store result to the T-flag,
      SPR R2
                                  ; this means storing r2's parity to the T-flag
                                  ; copy MSR to r2
      LDSR R2
      LDB R2, R2, #6
                               ; copy system-T-flag to the system-mode carry flag
      STSR R2
                                  ; store r2 to MSR
      SFT RO, RO, #RLC
                                  ; rotate right and use carry flag as bit #0 input
                                  ; resume loop
      В
           loop
```

5.2.10. Interrupt Vector Table

The interrupt vector table contains the five 16-bit addresses of the different interrupt handlers. When the actual handler is out of the range of a simple branch instruction, a branch to an intermediate calling functions must be performed (an example of this is shown using the command error trap "cmd err handler").

The complete interrupt vector table must always be at the beginning of the program, thus the branch instruction for the reset-handler must be at PC (program counter) location x"0000", the branch instruction for the external interrupt line 0 handler must be at PC location "x0002" and so on (byte-adressing mode).

5.2.11. Hardware-based OR compare

Sometimes it is necessary to check if a register is equal to at least one element of a list (e.g. if a state varibale is set to "RUN" or "FROZEN"....). The CPX instructions allows a very efficient way to implement such "OR-ed" compare operations.

6. Core Architecture

This chapter takes a closer look at the actual rtl implementation of the CPU core. In the following diagram, you can see the basic layout of the Atlas 2k processor.

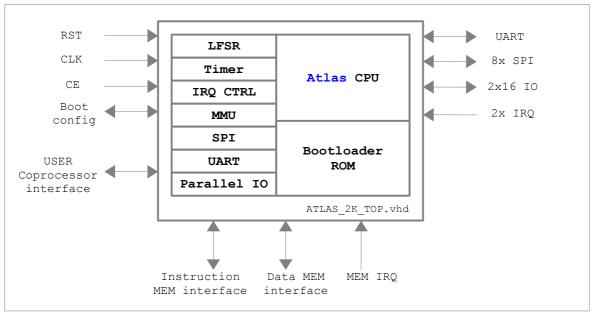


Figure 21: Atlas 2k Processor Overview

6.1. Module Description

The following table presents all the Atlas VHDL rtl files and their functionality.

File name	Functionality
ALU. vhd	The ALU holds the primary arithmetical/logical unit, the coprocessor interface as well as the multiplication unit (if synthesized).
ATLAS_2K_TOP.vhd	This is the top entity of the Atlas 2k processor.
ATLAS_CPU.vhd	Top entity of the Atlas CPU.
ATLAS_pkg.vhd	Package file for the Atlas project. All additional configurations are made here.
ATLAS_2K_BASE_TOP.vhd	Top entity of the basic system on chip setup, including the CPU and some RAM.
BOOT_MEM.vhd	ROM with bootloader code.
COM_0_CORE.vhd	Communication controller for PIO, SPI and UART.
CTRL.vhd	This file provides the control "spine" of the processor.
INT_RAM.vhd	Internal RAM component for the basic system setup.
MEM_ACC.vhd	All data memory requests emerge from this unit. Furthermore, processing result routing circuits are located here.
MEM_GATE.vhd	Bootloader ROM / memory system gateway.
OP_DEC_vhd	Opcode decoder. The instruction opcodes are decoded into processor internal control signals in this unit.
REG_FILE.vhd	This file contains the main data register file, organized as 2x16*16-bit memory.
RST_PROTECT.vhd	This unit guarantees a valid reset for the processor.
SYS_0_CORE.vhd	System controller with IRQ control, timer, and LFSR.
SYS_1_CORE.vhd	System controller with MMU.
SYS_REG.vhd	The system register file contains the program counter, the machine status register and the interrupt and context control circuits.
SYSTEM_CP.vhd	The access unit to all system coprocessor cores.
WB_UNIT.vhd	The write-back unit takes data from the coprocessors, the ALU or the data memory interface and writes it back to the register file.

Table 16: Atlas 2k VHDL rtl files and description

6.2. Data Path

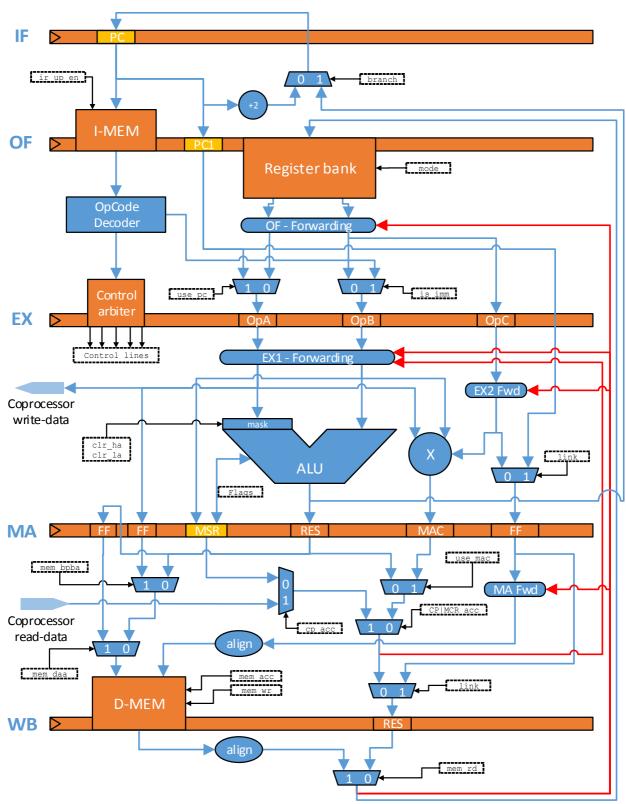


Figure 22: Atlas CPU main data path diagram

This project is published under the GNU General Public License (GPL)

6.3. Data Registers

For efficient hardware implementation, the 16 data registers are mapped to a 16x16-bit memory block. The most significant bit of the register address (bit 3) indicates the accessed bank ('0' = user bank, '1' = system bank). The actual register – memory cell mapping is presented in the table below.

0000: User	R0 0100 :	User R4	1000:	System	R0 1	100:	System	R4
0001: User	r R1 0101 :	User R5	1001:	System	R1 1	101:	System	R5
0010: User	R2 0110 :	User R6	1010:	System	R2 1	110:	System	R6
0011: User	R3 0111 :	User R7	1011:	System	R3 1	111:	System	R7

Figure 23: Register mapping to memory block

NOTE: The register file might be implemented using LUT registers instead of dedicated memory blocks on some FPGAs, since not all FPGA architectures provide dedicated memory blocks, that can be accessed asynchronously when reading data.

6.4. Pipeline

A classical 5-stage pipeline is implemented in the Atlas CPU. Just to clarify the terms of "pipeline stages", a stage starts always with the update of the register, that drive a specific stage. Also, a cycle starts with the update of a register on a rising edge of the system clock. The table below shows the present pipeline stages of the CPU.

Stage #	Name	Functionality
1: IF	Instruction fetch	At the beginning of this stage, the program counter (PC) is updated with the next instruction address. For linear programs, this value for the PC is old_value plus 2 bytes. This address is then applied to the instruction memory.
2: OF	Instruction decode and operand fetch	The instruction memory accepts the address and outputs the corresponding instruction on the rising edge of the system clock. The opcode decoder decodes the opcodes an loads operand form the register file and also constructs immediate values.
3: EX	Execution	In the execution stage, the main data processing takes place. Furthermore, data is presented to the external coprocessors, the PC and the MSR, depending on the current instruction.
4: MA	Memory access	The memory access stage provides write data and the correlated address to the data memory. Also, data read backs from the coprocessor are read in this cycles.
5: WB	Write back	The write back stage accepts read data from the memory or any kind of read data from the previous stage (coprocessor, MSR, ALU processing result) and applies it to the register file, whenever a data write back is valid. With the next rising edge, this data is stored to the destination register and thus the execution cycle is completed.

Table 17: Atlas CPU pipeline stages

51

6.4.1. Local Pipeline Conflicts

Whenever data is needed, that has already been processed but has not yet reached the end of the pipeline, a local data dependency occurs. For data, that will be processed by the ALU, the source and destination data can be separated by 1, 2 or 3 cycles in the pipeline. The following example program illustrates these types of local conflicts (the NOPs are only exemplary used to generate the corresponding distances).

```
;1 cycle distance:
INC r4, r1, #1
CMP r4, r1
                           ; r4 = r1 + 1
                           ; compare r4 and r1
;2 cycles distance:
DEC r5, r1, #1
                           ; r5 = r1 - 1
NOP
TST r5, r5
                           ; set flags to r5 AND r5
;3 cycles distance:
                           ; swap bytes of r1 and store to r6
SFT r6, r1, #swp
NOP
NOP
ADD r6, r6, r6
                           ; r6 = r6 * 2
```

Two different forwarding units are used to prevent pipeline stalls whenever these kinds of local data dependencies occur. The first one is located in the OF-stage and can forward data from the WB-stage (data separation by 3 cycles) into the two operand slots of the ALU. The second one is located in the EX-stage and can forward data from the MA-stage (data separation by 1 cycle) and from the WB-stage (data separation by 2 cycles) into the two operand slots of the execution stage (EX).

Cycle	IF	OF	EX	MA	WB	
n+0	DEC	СМР	INC			
n+1	NOP	DEC	CMP	- INC		1 cycle distance
n+2	TST	NOP	DEC	СМР	INC	
n+3	SFT	TST	NOP	DEC	СМР	
n+4	NOP	SFT	TST	NOP	DEC	2 cycles distance
n+5	NOP	NOP	SFT	СМР	INC	
n+6	ADD	NOP	NOP	SFT	INC	
n+7		ADD <	NOP	NOP	- SFT	3 cycles distance

Figure 24: Processing data forwarding

Furthermore, the CPU features two small additional forwarding units to accelerate memory data transfers. The first one is also located in the EX-stage and can forward data from the WB-stage into the ALU bypass operand slot. The second one is located in the MA-stage and can forward data from the WB-stage into the write data port of the data memory.

by Stephan Nolting

6.4.2. Temporal Pipeline Conflicts

Temporal data dependencies occur, whenever the operand fetch stage tries to forward data for ALU processing that has not been yet fetched from the data memory. The following example illustrates this kind of data conflict.

```
;memory read-data dependency

LDR r1, r0, +#2, pre     ; r1 = MEM[r0+2], not address pointer update
INC r1, r1, #1     ; r1 = r1 + 1
```

This type of dependency cannot be solved by forwarding alone. The CPU has to insert an empty "dummy cycle" (a NOP) to stop the data processing instruction in the OF-stage until the source data from the memory is available.

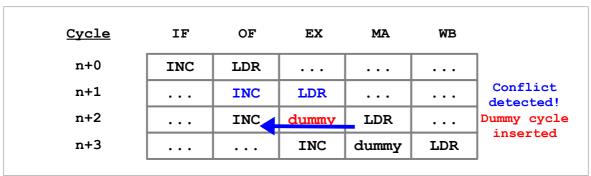


Figure 25: Memory read-data temporal data dependency

While the INC instruction is still in the OF-stage, the memory load instruction (LDR) has reached the MA-stage and the fetched data can be forwarded to the OF-stage.

6.4.2.1. MSR Write Access

Whenever the machine status register (MSR) is updated via the STSR (or an alias instruction like RTX) instruction, a dummy cycle has to be inserted afterwards. Imagine a system mode program, that clears the M-flag by writing new data to the MSR to switch to user mode.

The operand fetch has to wait until this update is completed, because the M-flag determines the most significant bit of the register addresses and thus the actual register bank, where data is taken from. Since the M-flag is cleared now, the new data for the INC instruction has to be fetched from the user register bank and not from the system register bank. Therefore a dummy instruction slot is necessary.

<u>Cycle</u>	IF	OF	EX	MA	WB	
n+0	CBR	LDSR]
n+1	STSR	CBR	LDSR			
n+2	INC	STSR	CBR	LDSR		
n+3		INC	STSR	CBR	LDSR	Conflict detected!
n+4		INC	dummy	STSR	CBR	Dummy cycle inserted
n+5			INC	dummy	STSR	Inserted

Figure 26: MSR update, status dependency

Even if only the mode (M) and the transfer (T) flags are vulnerable for these kind of conflicts, any kind of manual MSR update causes the system to insert a dummy cycle – this simplification dramatically reduces the hardware overhead. But since MSR updating instructions are very rare in most program codes, this issue should not be further relevant.

6.4.4. Branches

Branches are necessary to leave the linear processing of a program. They occur whenever an unconditional or a conditional branch instruction with fulfilled condition is executed. Also, a manual PC write access via the STPC instruction (or any alias instruction like RET) will result in a branch to the new address. The Atlas CPU does not use any kind of branch prediction, therefore the strategy is "branches are always taken".

When the PC is loaded with a new address, the instructions, which were already loaded after the branch causing instruction into the pipeline, have to be invalidated ("pipeline flush").

Cycle	IF	OF	EX	MA	WB	
n+0	ADD	В]
n+1	SUB	ADD	В			Branch detected!
n+2	INC	SUB	ADD	В		Flushing pipeline
n+3		INC	SUB	ADD	В	pipeiine
n+4	• • •		INC	SUB	ADD]
n+5				INC	SUB]

Figure 27: Flushing the pipeline after a taken branch

Since it takes two cycles to fetch a new instruction into the opcode decoding OF-stage after a nonlinear PC update, the two following instructions after the branch are not up-to-date anymore and have to be discarded.

6.4.5. Exceptions and Interrupts

Exceptions and interrupts behave in most ways like branches. Whenever a specific event occurs, for instance the execution of the software interrupt instruction (SYCALL), a branch to a corresponding address (address of the software interrupt vector in this case) takes place. An automatic context change is performed by the system to offer a system state, that does not effect the interrupted program. While exceptions (system call / undefined instruction / access violations) can only occur synchronous to the pipeline and instruction flow, external interrupts can occur at every time. Thus, the interrupt-correlated mode changes and branches need to be synchronized to the pipeline. Therefore, external interrupts (via the two IRA lines of the CPU) can only be processed whenever the current instruction in the EX stage can be interrupted and resumed without any problems. Hence, the instruction must not be a multi-cycle operation nor a branch nor an instruction with a temporal data dependency.

6.5. Interfaces

56

The Atlas 2k provides three different interfaces:

- 1. The memory interface (data and instructions)
- 2. The coprocessor interfaces
- 3. The peripheral IO interface

The memory interface is mandatory for the processor to operate. It consists of a read-only instruction memory and a read/write data interface. Both interfaces are 16-bit wide (address and data bus) and the memory system is word-addressed.

The coprocessor interface can be used to connect a hardware accelerator or an additional communication controller tightly to the CPU to extend the processor functionality and processing power. The peripheral/IO interface directly connects the processor to the outer world. This includes the UART, an 8 channel SPI and a 2x16-bit parallel IO port.

NOTE: The CRITICAL_IRQ_I input can be used for signaling critical system states like memory problems, power failure, etc..

6.5.1. Data / Instruction Memory Interface

The Atlas 2k must be connected to data and instruction memories to operate. When using separated memories for instruction and data, the instruction memory is read-only and need only one read port. The data memory requires for this kind of implementation a read and a write port. When using a common memory structure for instruction and data, the memory requires a single write port and two read ports. Furthermore, it is possible to connect the data and instruction memory interface to a bus unit with or without caches, to access a single read-port and write-port memory. However, the basic setup (ATLAS_2K_BASE_TOP.vhd) connects the Atlas 2k processor to a shared instruction/data interface.

Let's start with the instruction fetch interface. This interface is very simple to implement. It consists of the the instruction page (MEM_I_PAGE_O), the instruction address (MEM_I_ADR_O), the instruction word read back (MEM_I_DAT_I) and an enable signal (MEM_I_EN_O). The instruction page selects the current instruction memory bank. The instruction address outputs the current value of the CPU's program counter and thus determines the address of the next instruction. On every rising edge of the core clock, the instruction memory outputs the instruction word to the instruction word read back line corresponding to the applied instruction address. Whenever the instruction enable line (MEM_I_EN_O) goes low (inactive), the instruction memory is disabled and it has to hold the last instruction word, since the instruction memory output is also used as instruction register.

Signal name	Size (bit)	Direction	Function
MEM_I_PAGE_O	16	out	Page selection output, generated by the memory management unit (MMU)
MEM_I_ADR_O	16	out	Instruction address output (PC), only word-aligned addresses
MEM_I_EN_O	1	in	Instruction memory output enable. Instruction memory output must not alter when this signal is low!
MEM_I_DAT_I	16	out	Instruction data input

Table 18: Instruction interface

8th of March, 2014

This project is published under the **GNU General Public License** (GPL)

The data interface operates nearly in the same manner. Here, the enable signal (MEM_D_EN_O) indicates a valid read or write access to the data memory. Just like the instruction memory, the data memory has to keep the last data output if the enable signal goes low again. The page address (MEM_D_PAGE_O) selects the accessed memory page and the address (MEM_D_ADR_O) output specifies the actual address for the store/load operation. Write-data (MEM_D_DAT_O) is stored when the read/write select signal (MEM_D_RW_O) is high. If the signal is low, data is read from the memory and forwarded to the processor (MEM_D_DAT_I).

Signal name	Size (bit)	Direction	Function
MEM_D_EN_O	1	out	Data memory enable (valid access)
MEM_D_RW_O	1	out	Read ('0') or write ('1') access
MEM_D_PAGE_O	16	out	Page selection output, generated by the memory management unit (MMU)
MEM_D_ADR_O	16	out	Data address output
MEM_D_DAT_O	16	out	Write data output
MEM_D_DAT_I	16	in	Read data input

Table 19: Data interface

6.5.2. Paging / Memory Layout

Since the Atlas 2k is a 16-bit processor, it can only address 2^{16} bytes = 64 kB directly. To overcome this memory limit, a paging scheme has been implement. This means, that the actual 16-bit address is extended with another 16-bit address, which specifies the accessed memory page. All in all, this scheme can address up to 2^{32} bytes = 4 GB and also enables the designer to create an operating system, where programs can be run independently in separate pages. Of course, the actual number of page and the page size itself can be modified corresponding to the application. The absolute maximum configuration is: 2^{16} pages (minus boot ROM pages) with 64kB memory space each. For more information see the chapter about the MMU.

To modify the number of pages or the boot size, the construction of the actual memory address buses (I and D) - consisting of the page addresses (I and D page) and access addresses (also I and D) - must be altered. When using the ATLAS_2K_BASE_top.vhd file as top entity, the number of pages and the page size can be configured via constants. In the following, some examples are presented to show, how to construct the memory buses to setup the memory layout (VHDL notation)

NOTE: The memory is word-addressed!

Example 1: 4 pages with 4kB each → total of 16kB memory; page selector width: 2 bit, page address width: 11 bit, memory address width: 13 bit

```
RAM_I_ADR(12:0) \le MEM_I_PAGE_O(1:0) \& MEM_I_ADR_O(11:1)
RAM_D_ADR(12:0) \le MEM_D_PAGE_O(1:0) \& MEM_D_ADR_O(11:1)
```

Example 2: 4 pages with 4kB each → total of 16kB memory; page selector width: 2 bit, page address width: 11 bit, memory address width: 13 bit

```
RAM_I_ADR(12:0) \le MEM_I_PAGE_O(3:0) \& MEM_I_ADR_O(19:1)
RAM_D_ADR(12:0) \le MEM_D_PAGE_O(3:0) \& MEM_D_ADR_O(19:1)
```

This project is published under the **GNU General Public License** (GPL)

6.5.3. Coprocessor Interface

The coprocessor interface is dedicated to connected an external coprocessors (abbreviated as CP) directly to the Atlas 2k processor without the need of coupling it via some kind of system bus. This allows to create a small application specific system with a tightly coupled processing device, providing low data latency and thus high data transfer performance. The data communication between the CPU and the coprocessor is based on direct register transfers between the two entities. Furthermore, direct data manipulation operations specifying two registers of the CP and a command are also implemented. For more information about the transfer and processing instructions, refer to the coprocessor instruction references.

Signal name	Size (bit)	Direction	Function
CP_EN_O	1	out	Valid access to coprocessor
CP_ICE_O	1	out	Coprocessor interface clock enable
CP_OP_O	1	out	Data transfer ('1') / data processing ('0')
CP_RW_O	1	out	Read ('0') / write ('1') access
CP_CMD_O	9	out	20: Command from CDP instruction 53: Operand B / source register address 86: Operand A / destination register address
CP_DAT_O	16	out	Coprocessor write data
CP_DAT_I	16	in	Coprocessor read data

Table 20: Coprocessor interface port of the Atlas 2k processor

The following graphic illustrates the interface architecture of a coprocessor. This interface allows writing and reading data to/from the device using the MRC and MCR instructions.

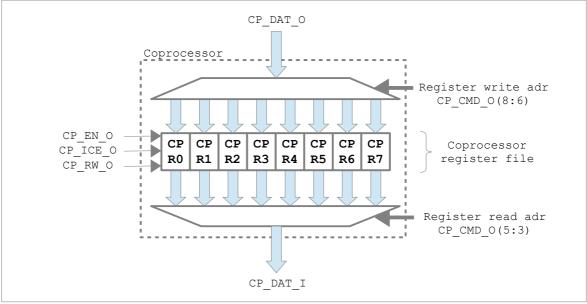


Figure 28: Coprocessor architecture for reading/writing data (transfers)

58 8th of March, 2014

6.6. Hardware Utilization (Synthesis)

Here are some synthesis results for different FPGA platforms.

The synthesis were done for the default base setup on Wednesday, 5th of March 2014.

Xilinx Spartan XC3S400A	Atlas 2k Base Setup		
Number of Slices:	1151/3584	32%	
Number of 4 input LUTs:	2036/7168	28%	
Number of Slice Flip Flops:	911/7168	12%	
Number of IOs:	84	-	
Number of BRAMs:	9/20	45%	
Number of MULT18X18SIOs:	1/20	5%	
Maximum Frequency:	87.536MHz		

Table 21: Hardware utilization – Xilinx – Synthesis, speed optimized

Altera Cyclone IV EP4CE22F17C6N	Atlas 2k Processo	or
Total logic element:	2612/22320	12%
Total combinatorial functions:	2388/22320	11%
Dedicated logic registers:	1104/22320	5%
Total pins:	84	-
Total memory bits:	294912/608256	48%
Embedded Multiplier 9-bit elements:	2/132	2%
Maximum Frequency:	100.46MHz	

Table 22: Hardware utilization – Altera – Synthesis, (slow 1200mV 0C model)

6.7. Main Control Bus

The following table shows the location and signal names of the main system control bus. All primary control signals, which are emerging from the opcode decoder, are forwarded throughout the complete pipeline are combined within this bus. Even if not all signals are used in every single pipeline stage, all signal are carried out until the end of the processing pipeline. This helps to keep the architecture flexible for future changes.

Bit #	Signal name	Function					
	Global Control						
0	ctrl_en_c	A '1' indicates a valid operation within the corresponding pipeline stage					
1	ctrl_mcyc_c	Multi-cycle/atomic memory operation in progress, no interrupt possible					
		Operand A					
2	2 ctrl_ra_is_pc_c Operand A is the program counter						
3	ctrl_clr_ha_c	Set higher byte of operand A to 0					
4	ctrl_clr_la_c	Set lower byte of operand A to 0					
5	ctrl_ra_0_c	Operand register A address bit 0					
6	ctrl_ra_1_c	Operand register A address bit 1					
7	ctrl_ra_2_c	Operand register A address bit 2					
8	ctrl_ra_3_c	Operand register A address bit 3, indicating source mode					
		Operand B					
9	ctrl_rb_is_imm_c	Operand B is an immediate					
10	ctrl_rb_0_c	Operand register B address bit 0					
11	trl_rb_1_c Operand register B address bit 1						
12	ctrl_rb_2_c	Cb_2_c Operand register B address bit 2					
13	ctrl_rb_3_c	Operand register B address bit 3, indicating source mode					
		Destination Register					
14	ctrl_rd_wb_c	Enable write-back to register file					
15	ctrl_rd_0_c	Destination register address bit 0					
16	ctrl_rd_1_c	Destination register address bit 1					
17	ctrl_rd_2_c	Destination register address bit 2					
18	ctrl_rd_3_c	Destination register address bit 3, indicating destination mode					
		ALU Control					
19	ctrl_alu_fs_0_c	ALU function select bit 0					
20	ctrl_alu_fs_1_c	ALU function select bit 1					
21	ctrl_alu_fs_2_c	ALU function select bit 2					
22	ctrl_alu_usec_c	Use mode-corresponding carry flag for computation					
23	ctrl_alu_usez_c	Use mode-corresponding zero flag for computation					
24	ctrl_fupdate_c	Update ALU flags after processing					
		Bit Manipulation					
25	ctrl_tf_store_c	Store bit to mode-corresponding transfer flag					

Bit #	Signal name	Function						
26	ctrl_tf_inv_c	Invert bit to be stored to T-flag						
27	ctrl_get_par_c	Select operand A's parity as T-flag source						
	System Register Access							
28	ctrl_cp_acc_c							
29	ctrl_cp_trans_c	Coprocessor data transfer ('1') or coprocessor data processing operation ('0')						
30	ctrl_cp_wr_c	Write access to coprocessor						
31	ctrl_cp_id_c	Coprocessor ID bit ('1' for coprocessor #1, '0' for coprocessor #0)						
		System Register Access						
32	ctrl_msr_wr_c	Write access to MSR						
33	ctrl_msr_rd_c	Read data from MSR						
34	ctrl_pc_wr_c	Write access to PC						
		Branch/Context Control						
35	ctrl_cond_0_c	Condition code bit 0						
36	ctrl_cond_1_c	Condition code bit 1						
37	ctrl_cond_2_c	Condition code bit 2						
38	ctrl_cond_3_c	Condition code bit 3						
39	ctrl_branch_c	Current operation is a branch operation						
40	ctrl_link_c	Perform link operation (store return address to LR)						
41	ctrl_syscall_c	Current operation is some kind of software interrupt (SYSCALL instruction)						
42	ctrl_cmd_err_c	Invalid/ undefined instruction or unauthorized access (command error trap)						
43	ctrl_ctx_down_c	Switch down to user mode						
44	ctrl_restsm_c	Restore saved operation mode						
		Data Memory Access						
45	ctrl_mem_acc_c	Perform data memory access						
46	ctrl_mem_wr_c	Write ('1') or read ('0') access						
47	ctrl_mem_bpba_c	Use bypassed base address						
48	ctrl_mem_daa_c	Use delayed base address						
	MAC Unit							
49	ctrl_use_mac_c	Access the multiply-and-accumulate unit (if implemented)						
50	ctrl_load_mac_c	Load an accumulation value to the MAC buffer						
51	ctrl_use_offs_c	Use the loaded value to perform the actual MAC operation						
		Other						
52	ctrl_sleep_c	Go to sleep mode						

Table 23: CPU main control bus

As mentioned before, not all signals are used in all pipeline sages. Therefore, some signals are reused with a different name alias when their original purpose is not relevant for further processing anymore. The table below presents this new signals and the reused original signals.

Signal name	Reused signal	Function
ctrl_wb_en_c	ctrl_rd_wb_c	Valid write back
ctrl_rd_mem_acc_c	ctrl_mem_acc_c	True memory access
ctrl_rd_cp_acc_c	ctrl_cp_acc_c	True coprocessor read access
ctrl_cp_msr_rd_c	ctrl_msr_rd_c	True coprocessor or MSR read access
ctrl_cp_cmd_0_c	ctrl_rb_0_c	Coprocessor command bit 0
ctrl_cp_cmd_1_c	ctrl_rb_1_c	Coprocessor command bit 1
ctrl_cp_cmd_2_c	ctrl_rb_2_c	Coprocessor command bit 2
ctrl_cp_ra_0_c	ctrl_ra_0_c	Coprocessor operand A bit 0
ctrl_cp_ra_1_c	ctrl_ra_1_c	Coprocessor operand A bit 1
ctrl_cp_ra_2_c	ctrl_ra_2_c	Coprocessor operand A bit 2
ctrl_cp_rd_0_c	ctrl_rd_0_c	Coprocessor operand A / destination register bit 0
ctrl_cp_rd_1_c	ctrl_rd_1_c	Coprocessor operand A / destination register bit 1
ctrl_cp_rd_2_c	ctrl_rd_2_c	Coprocessor operand A / destination register bit 2
ctrl_re_xint_c	ctrl_rb_1_c	Re-enable global external interrupt flag
ctrl_msr_am_0_c	ctrl_ra_1_c	MSR access mode option bit 0
ctrl_msr_am_1_c	ctrl_ra_2_c	MSR access mode option bit 1
ctrl_alu_cf_opt_c	ctrl_rd_2_c	Carry flag option for CPX (normal/invert carry_in)
ctrl_alu_zf_opt_c	ctrl_rd_1_c	Zero flag option for CPX (AND/OR zero_in)

Table 24: CPU main control bus, signal reuse during pipeline process

7. Internal Coprocessor

The Atlas 2k includes several peripheral devices, which are combined into an internal coprocessor. Since this coprocessor is connected as **coprocessor #1**, it can only be accessed in system mode. Any other unprivileged access will trigger the undefined instruction trap. The different functional units are mapped together to modules (or "sub-coprocessors") corresponding to their function in the system. The table below shows the different modules of the system coprocessor.

Coprocessor	Module	Name	Function
	с0	sys_0_core	Timer, LFSR, IRQ controller
#1	с1	sys_1_core	MMU, system information
#1	с2	com_0_core	UART, SPI, Parallel IO
	с3	reserved	reserved

Table 25: Internal system coprocessor (#1) functional cores

The internal coprocessor can be accessed via the special 'coprocessor data transfer' operations (MRC and MCR) and each module is addressed by the MRC/MCR coprocessor register number (c0, ..., c7). The actual register of the module is addressed via the command argument (#0, ..., #7). The 'coprocessor data processing' operation (CDP) is not implemented for the internal coprocessor yet. Any execution of it will not have any effect. The following example shows the read and write operations to move data between the coprocessor modules and the CPU:

```
MRC #1, r4, c2, #7 ; copy parallel input to CPU register r4
MRC #1, r5, c0, #2 ; copy timer counter register to CPU register r5

MCR #1, c2, r0, #2 ; copy CPU register r0 to COM/SPI configuration register
MCR #1, c1, r1, #2 ; copy CPU register r1 to MMU system-I-page register
```

7.1. Module c0 – System Controller 0

The system controller 0 (module 'c0') contains devices, which are mandatory for most applications. These devices are a high precision timer, a linear-feedback shift register and an interrupt controller. All in all, module c0 contains 8 16-bit wide registers, which are used for communication and configuration. The different devices as well as their interface/configuration register are about to be explained in this chapter.

7.1.1. Interrupt Controller

The internal interrupt controller supports 8 IRQ input channels. Each channel can be enabled/disabled and configured to trigger either on a voltage level (high/low) or on an edge (rising/falling). The first 6 IRQ channels are connected to internal devices, the other 2 channels are propagated forward to two pins of the processor's top entity and can be used for any kind of application. The following table shows the channel mapping, the channel ID and the priorities.

Priority	IRQ channel	Connected device / port	
Highest	0	Timer match interrupt	
	1	Reserved for future devices	
	2	UART data received interrupt	
	3	UART data transmission done interrupt	
	4	SPI transfer done interrupt	
	5	PIO input pin change interrupt	
	6	External interrupt request pin "IRQ_I(0)"	
Lowest	7	External interrupt request pin "IRQ_I(1)"	

Table 26: Interrupt controller channels

Each channel of the IRQ controller can be enabled or disabled via the mask bits in the "irq_sm" register. The actual type of trigger can be set up by the two config bytes of the "irq_conf" register. The low byte selects between level or edge triggering and the high byte specifies the actual level or edge type for the trigger. When ever a valid trigger occurs, the interrupt request is send via the **EXT_INT_1** pin to the CPU (handler base address 0x0004). The interrupt request handler then must read the "irq_sm" register to acknowledge the interrupt. Bits 2 down to 0 of this register specify the source of the corresponding interrupt request.

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
	c0	# O	irq_sm	20	R	Channel number of interrupt source (07), acknowledge IRQ on read access
				158	R/W	Enable bit mask for each channel (70)
#1		#1	irq_conf	70	R/W	Channel config 0: Level triggered ('1') or edge triggered ('0') channel (70)
				158	R/W	Channel config 1: High level/rising edge trigger ('1') or low level/falling edge trigger ('0') for channel (70)

Table 27: Interrupt controller register map

7.1.1.1. ASM Example – Setting up the IRQ controller

The following example code demonstrates how to set up a rising-edge trigger for the external interrupt line "IRQ I(0)". This code must be executed in system mode in order to access the system coprocessor.

```
LDIL r0, #0
LDIH r0, #0b01000000
MCR #1, c0, r0, #0 ; set enable mask for channel 6 (IRQ_I(0))

LDIL r0, #0b000000000 ; set edge trigger for all channels
LDIH r0, #0b01000000 ; set rising edge for channel 6
MCR #1, c0, r0, #1 ; set trigger config

LDSR r0
SBR r0, r0, #11 ; set global IRQ enable flag in MSR
SBR r0, r0, #13 ; enable IRQs from EXT_IN_1
STSR r0
```

The following example code show how to get the ID of the pending IRQ channel. This code must be executed in system mode in order to access the system coprocessor.

```
MRC #1, r0, c0, #0 ; ack IRQ and get ID
LDIL r1, #0x07 ; mask for ID bits
AND r0, r0, r1 ; the IRQ ID in r0
```

7.1.2. High Precision Timer

The system controller contains a single 2x16-bit high precision counter for timing applications. The main clock speed of the processor drives an internal pre-counter. Whenever this pre-counter reaches the value in the pres-scaler "timer_prsc" register, the timer counter register "timer_cnt" will be incremented. If this counter registers matches the threshold value in the "timer_thr" register, the timer interrupt signal will be high for one cycle and the counter register is set to 0 to start over again.

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
		#2	timer_cnt	150	R/W	Timer counter register
#1	c0	#3	timer_thr	150	R/W	Timer threshold value
		#4	timer_prsc	150	R/W	Timer prescaler register

Table 28: High precision timer register map

The timer can be disabled by setting the "timer_thr" register to zero. The timer can be restarted at any time by clearing "timer_cnt". Also, any write access to the "timer_prsc" or the "timer_thr" register will reset the counter.

NOTE: The timer "threshold match" interrupt goes high for one cycle whenever the TIMER_CNT register matches the TIMER THR register. This IRQ is connected to the system interrupt controller on channel 0.

The interval for the timer IRQ to trigger can be obtained by the following formula:

$$T_{TimerIRQ} = \frac{TIMER_{PRSC} + 1}{MAIN_{CLV}} TIMER_{THR}$$

Example: For a 5 second timer IRQ at a processor clock speed of 50MHz, set TIMER $_{PRSC} = 49999 = 0x3C4F$ and TIMER $_{THR} = 5000 = 0x1388$.

7.1.3. Linear-Feedback Shift Register (LFSR)

Many applications require some kind of random numbers. With the internal *Galois* linear-feedback shift register, the processor can generate pseudo-random numbers automatically without any software overhead. To adapt the LFSR to the user's application, it is possible to configure the positions of the taps for the XOR computation. This is done by setting the "Ifsr_poly" register. Bit 15 of this register configures the LFSR data update strategy: Setting this bit will let the LFSR operate in free-running mode, where new data is generated at the main clock frequency. Clearing this bit will let the LFSR only sample new data after a reading the "Ifsr data" register.

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
		#5	lfsr_data	150	R/W	LFSR data register
#1	c 0	#6	lfsr_poly	140	R/W	LFSR polynomial / tap register
				15	R/W	LFSR update: '1': free running mode, '0': after read-access

Table 29: Linear-feedback shift register register map

NOTE: The "lfsr poly" register should be set before setting the "lfsr data" register.

This project is published under the **GNU General Public License** (GPL)

7.2. Module c1 – System Controller 1 (MMU)

The Atlas 2k processor features a memory management unit (MMU). This MMU, implemented as system module c1 of the internal system coprocessor (coprocessor #1), enables the user to access a memory/IO space of up to 2³² bytes (4GB). Therefore, the actual data and instruction addresses from the CPU, which are 16-bit wide, are concatenated with another 2x16 bit, determining the accessible data and instruction page, to create 32-bit wide address for memory/IO access.

The MMU is accessed via the coprocessor interface and the coprocessor data transfer instructions (only in system mode). The following table shows all accessible registers of the MMU module.

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
		#0	mmu_irq_base	150	R/W	Interrupt base page
		#1	mmu_sys_i_page	150	R/W	Current system mode instruction page
		#2	mmu_sys_d_page	150	R/W	Current system mode data page
		#3	mmu_usr_i_page	150	R/W	Current user mode instruction page
#1	#1 c1 #4 #5 #6	#4	mmu_usr_d_page	150	R/W	Current user mode data page
π⊥		#5	mmu_i_page_link	150	R	Previous instruction page before IRQ
		#6	mmu_d_page_link	150	R	Previous data page before IRQ
		#7	mmu_sys_info	150	R	System information; every 1 st read: clock speed high, every 2 nd read: clock speed low (value comes from the clock speed configuration generic)

Table 30: MMU register map

This project is published under the GNU General Public License (GPL) 67

7.2.1. Theory of Operation

The resulting accessible data space of 2³² byte is separated into 2¹⁶ "pages" of 2¹⁶ byte each. The actual page is selected via the most significant 16 bits of the final address. These page address bits are taken from page registers, where unique register for instruction and data page access for both operating modes exist (I-page and D-page for user and system mode). Together with the data and instruction address buses from the CPU, which present the least significant 16 bits of the final address, the final address is constructed. Since the MMU is aware of the current CPU operating mode, an automatic switch between the user and system mode page register is implemented.

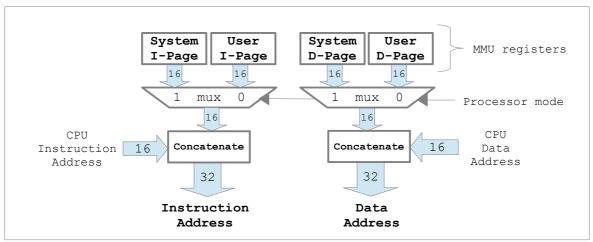


Figure 29: MMU address generation block diagram; the numbers in the arrows refer to the address widths

Whenever an interrupt or exception occurs, the MMU_IRQ_BASE register is automatically copied to the system I- and D-page registers (MMU_SYS_I_PAGE and MMU_SYS_D_PAGE) allowing the interrupt handler, which runs in system mode, to access the specified IRQ base page. Also, the last accessed I- and D-pages are store to the I- and D-link register (MMU_I_PAGE_LINK and MMU_D_PAGE_LINK). This makes it easy to restore the last accessed pages after an interrupt has been processed. The data of the I/D-link registers have just to be copied back to the system page registers when the interrupt handler has finished.

When writing data to the current I/D-page register (eg. the system mode registers when in system mode), it takes two cycles until the new page numbers affect the MMU output and thus the actual memory address buses. Thus, the I-page register must be set before performing a branch to an address within the new I-page.

7.2.1.1. ASM Example – MMU page and context switch

This examples shows how to start a program (in user mode), which is located at the beginning of data and instruction page "0x10AC".

```
LDIL r1, #0xAC ; load low byte of destination page
LDIH r1, #0x10 ; load high byte of destination page
CLR r0 ; start address in new page is zero

MCR #1, c1, r1, #4 ; MMU's user d-page register
; there must be no delay between the next two instructions!
MCR #1, c1, r1, #3 ; MMU's user i-page register
GTU r0 ; copy entry address to PC → finalize branch
; and switch to user mode
```

This project is published under the **GNU General Public License** (GPL)

7.3. Module c2 - Communication Controller 0

Module c2 of the internal system coprocessor features three different mainstream communication interfaces:

- 1. Universal asynchronous receiver/transmitter (UART)
- 2. Serial peripheral interface (SPI)
- 3. Parallel input/output ports (PIO)

Again, all communication controller register can only be accessed in system mode.

7.3.1. Universal Asynchronous Receiver/Transmitter (UART)

The UART is a standard communication interface for all kind of applications. A simple UART with fixed frame setup and variable Baud value is implemented as part of the communication controller in module c2 of the system coprocessor.

Top Entity Signal	Direction	Size (bit)	Function
UART_RXD_I	Input	1	UART receiver input
UART_TXD_O	Output	1	UART transmitter output

Table 31: UART IO

Before you can use the UART for data receiving/sending, you have to wake up the transceiver from power-down mode by setting bit #6 in the COM CTRL register.

The frame format is fixed to 8 data bits, no parity bit and 1 stop bit (8-N-1). The actual Baud rate can be configured using the $UART_{PRSC}$ register. The prescaler value is computed by the formula below, where $MAIN_{CLK}$ defined the processor clock frequency and BAUD the actual used Baud rate.

$$UART_{PRSC} = \frac{MAIN_{CLK}}{BAUD + 15}$$
 and for the BAUD rate $BAUD = \frac{MAIN_{CLK}}{UART_{PRSC}} - 15$

The interface of the UART is based on the data register *UART_RTX_SD*. When writing to this register, the lowest 8 bit of the data is send via the UART TX channel. The user can check, if the UART is currently performing a transmission, by reading the transmitter busy flag in the *COM_CTRL* register. Whenever data is received via the UART receiver RX channel, the data ready flag in the *UART_RTX_SD* register is set and the received data can be obtained by reading the same register.

by Stephan Nolting

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
		# O	uart_rtx_sd	70	R/W	Read: UART receive data Write: UART transmit data
	_			15	R	UART receiver data ready flag
#1	c2	#1	uart_prsc	150	R/W	UART baud rate prescaler (UART _{PRSC})
		#2	com_ctrl	5	R	UART transmitter busy flag
				6	R/W	UART activated when '1'

Table 32: UART controller register map

NOTE: The UART features two interrupt lines, connected to the system interrupt controller. The "data received" interrupt is connected to channel 2 and the "data sending done" interrupt is connected to channel 3. Both IRQs go high for one cycle when triggered.

7.3.1.1. ASM Example – setting UART Baud rate to 2400 @ 50MHz

```
LDIL r1, #0xE0 ; baud prescaler is 20704 (rounded)
LDIH r1, #0x50 ; = hex 0x50E0
MCR #1, c2, r1, #1 ; set UART prescaler

; activate UART controller
MRC #1, r0, c2, #2 ; get com control register
SBR r0, r0, #6 ; set UART activate bit
MRC #1, c2, r0, #2 ; set com control register
```

7.3.1.2. ASM Example – get data from UART receiver, received data in r0

7.3.1.3. ASM Example – send data via UART transmitter, transmitted data in r1

This project is published under the **GNU General Public License** (GPL)

7.3.2. Serial Peripheral Interface (SPI)

The SPI is a very common interface for connection a large variety of different devices, like SD-cards, EEPROMs, displays or AD/DA converter.

Top Entity Signal	Direction	Size (bit)	Function
SPI_MOSI_O	Output	8	Serial data output (8 channels)
SPI_MISO_I	Input	8	Serial data input (8 channels)
SPI_SCK_O	Output	8	Serial clock output (8 channels)
SPI_CS_O	Output	8	Chip select lines, low-active (8 channels)

Table 33: SPI IO

NOTE: The SPI controller also features a "transfer done" interrupt, which goes high for one cycle whenever an SPI transmission is done. The IRQ is connected to the system interrupt controller on channel 4.

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
#1	c2	#2	com_ctrl	0	R/W	SPI MSB first ('0'), LSB first ('1')
				1	R/W	SPI clock polarity
				2	R/W	SPI edge offset, '0' first edge, '1' second offset
				3	R	SPI busy flag
				4	R/W	SPI auto apply CS (reg is high active)
				5	R	UART transmitter busy flag
				118	R/W	SPI data frame length (actual length is [11:8]-1)
				1512	R/W	SPI clock prescaler (SPI _{PRSC})
		#3	spi_data	150	R/W	SPI receive/transmit data, start transfer on write access
		#4	spi_cs	70	R/W	SPI channel chip select

Table 34: SPI controller register map

The SPI communication interface controller is based on a 16-bit shift register, thus a maximum of 16-bit data can be transferred at once. The actual data size per transaction can be set to a value between 1 and 16 bit. The direction of the transfer shift (left shift = MSB first or right shift = LSB first) ca also be configured via the "com_ctrl" register. There are four different SPI 'modes', which can be setup by the clock polarity and the edge offset. For mode 0 for example, both option must be set to zero. Whenever you are writing data to the "spi_data" register, an SPI transfer is started. By obtaining the SPI busy flag in the "com_ctrl" register, you can check when a transfer is done.

Before the transfer is initiated, the destination device must be selected by writing the corresponding chip select number to the "spi_cs" register, When the CS auto apply feature in the "com_ctrl" register is set, the CS signal will automatically be activated when the transfer is started. If the auto apply feature is disabled, the CS must be manually set and cleared before and after the transfer. This also allows to perform arbitrarily wide transfer operations. Note, that the CS lines are low-active, but will only become enabled, when setting the corresponding bit in the chip select register high. The SPI prescaler (bits 15:12 in "com_ctrl" register, SPI_{PRSC}) defines the clock speed (SPI_{CLK}) of the SPI serial clock line.

$$SPI_{PRSC} = \log_2 \left[\frac{MAIN_{CLK}}{2 \cdot SPI_{CLK}} - 1 \right]$$
 and for the SPI serial clock frequency $SPI_{CLK} = \frac{MAIN_{CLK}}{2 + 2^{SPI_{PRSC} + 1}}$

The actual frame size can be configured via the bits 11..8 of the "com_ctrl" register. A binary 0b1111 represents a 16-bit transfer, a 0b0111 an 8-bit transfer and a 0b0000 an 1-bit transfer (just examples). If you want to transfer larger frames, you must use the manual chip select function and break down the actual frame size to max. 16-bit long frames (see examples below).

7.3.2.1. ASM example – perform 8 bit SPI transfer

7.3.2.2. ASM example – perform 32 bit SPI transfer

```
; 32-bit transfer from r2:r1 to device on CS2
; prsc=3, MSB first, mode 0
LDIL r0, 0b00000000 ; manually set CS, MSB first, mode 0
LDIH r0, 0b00111111 ; prsc 3, length = 16 bit
MCR #1, c2, r0, #2 ; set SPI config
LDIL r0, #4
                                 ; CS2
MCR #1, c2, r0, #4
                                 ; assert CS
     do_spi_trans ; copy tx data part 1
MOV
                                 ; perform transfer (see below)
                                 ; copy tx data part 2
MOV r0, r1
BL do_spi_trans
                                ; perform transfer (see below)
CLR
    #1, c2, r0, #4 ; de-assert CS
MCR
```

7.3.2.3. ASM example – SPI transfer subroutine

```
; subroutine to initiate SPI transfer
      ; TX data in r0, RX data in r0 afterwards
do spi trans:
      MCR #1, c2, r0, #3
                                       ; set SPI data (r0) \rightarrow start transfer
      ; wait for transmission end
do spi trans wait:
      MRC
          #1, r0, c2, #2
                                      ; get status reg
          r0, #3
      STB
                                      ; busy flag
           do_spi_trans_wait
                                      ; still set?
      BTS
      MRC #1, r0, c2, #3
                                       ; get received data in r0
      RET lr
                                       ; return to calling instance
```

7.3.3. Parallel Input/Output Ports (PIO)

The parallel IO port features 16 inputs (*PIO_IN*) and 16 outputs (*PIO_OUT*). Another 8 input and output ports are provided by the system IO port (*SYS_IO*), but this ports should be reserved for the bootloader, since the in-build bootloader uses this port for status lights and boot strap configuration.

Top Entity Signal	Direction	Size (bit)	Function
PIO_OUT_O	Output	16	Parallel output data
PIO_IN_I	Input	16	Parallel input data
SYS_OUT_O	Output	8	Parallel output data for system/bootloader
SYS_IN_O Input 8 Parallel input data for system		Parallel input data for system/bootloader	

Table 35: PIO IO

Coprocessor	Module	Register	Name	Bit(s)	R/W	Function
#1 c2		#5	pio_in	150	R	Parallel input data (PIO_IN_I port)
	с2	#6	pio_out	150	R/W	Parallel output data (PIO_OUT_O port)
		#7	sys_io	70	R	System input data (SYS_IN_I port)
				158	R/W	System output data (SYS_OUT_O port)

Table 36: PIO controller register map

NOTE: The parallel input port (*PIO_IN*) features a pin change IRQ, that goes high for one cycle whenever an input pin changes it state. This IRQ is connected to the system interrupt controller on channel 5.

73 8th of March, 2014

8. Getting Started

To make things a little bit easier, I suggest to use the "basic setup" of the Atlas 2k processor. This design unit includes the actual Atlas 2k processor together with an internal RAM component. The user coprocessor slot is kept empty – you can fill it with some cool custom logic - and only the boot IO and the peripheral IO is propagated throughout the interface ports. Also, a pre-defined testbench and a waveform configuration file are available for the basic setup.

Of course you can use this basic setup also as starting point for your own SoC design - and yeah, this is what I recommend;)

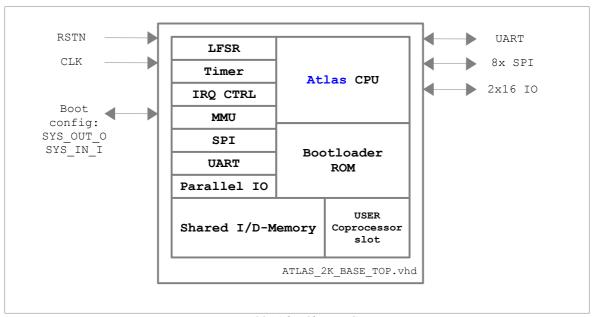


Figure 30: Atlas 2k Base Setup

Before you can use the basic setup for implementation or simulation, you have to configure the design. This is done by setting three VHDL constants (see below).

Atlas 2k Base Setup - User Configuration Constants

VHDL configuration constants:

- clk speed c: Clock speed (in Hz) of the CLK I main clock in hexadecimal representation.
- num pages c: Number of pages must be a power of two!
- page size c: Page size in bytes must also be a power of two!

The total memory consumption is num pages c * page size c.

This project is published under the <u>GNU General Public License</u> (GPL)

8th of March, 2014

8.1. Necessary Files for the Atlas 2k Base Setup

The following table gives information about all the relevant files for the Atlas 2k Base Setup for synthesis and/or simulation

What	Atlas 2k Base Setup
Testbench:	sim/atlas_2k_base_tb.vhd
Xilinx ISIM demo waveform configuration:	sim/xilinx_isim_atlas_2k_base_tb_wave.wcfg
Top entity:	rtl/ATLAS_2K_BASE_TOP.vhd
rtl files	- rtl/ALU.vhd - rtl/ATLAS_2K_BASE_TOP.vhd - rtl/ATLAS_2K_TOP.vhd - rtl/ATLAS_CPU.vhd - rtl/ATLAS_pkg.vhd - rtl/BOOT_MEM.vhd - rtl/COM_0_CORE.vhd - rtl/CTRL.vhd - rtl/INT_RAM.vhd - rtl/MEM_ACC.vhd - rtl/MEM_GATE.vhd - rtl/REG_FILE.vhd - rtl/REG_FILE.vhd - rtl/SYS_0_CORE.vhd - rtl/SYS_1_CORE.vhd - rtl/SYS_1_CORE.vhd - rtl/SYS_REG.vhd - rtl/SYS_TEG.vhd - rtl/SYSTEM_CP.vhd - rtl/WB_UNIT.vhd

Table 37: Atlas 2k Base Setup simulation / synthesis file guideline

8.2. Simulation

To easily evaluate and simulate a program for the Atlas 2k Base Setup, I have prepared a simple testbench and Xilinx ISIM © compatible pre-defined waveform. The testbench only includes the Atlas 2k Processor together with a reset and clock generator. Of course you can add additional modules for simulation. The clock generator is set at 50Mhz. You can change this value, but then you have to change the clock speed generic of the Atlas 2k, too.

When you want to simulate a program on the Atlas 2k, a big question occurs: Where does the memory image come from? There is no serial EEPROM or UART module implemented in the testbench, so the image has to be already in memory when the simulation starts. To do this, you can initialize the memory signal of the internal RAM (do this only for simulation, since it is not VHDL conform for implementation) with the *init.vhd* assembler output, which can be found after assembling in the *asm* folder.

```
signal MEM_FILE : int_mem_file_t; -- use this for implementation
-- signal MEM_FILE : int_mem_file_t := -- use this for simulation only
-- (
-- others => x"0000" -- replace this with simulation memory content
-- );
```

Cut-out of the INT RAM.vhd file

To include the assembled program into the simulation environment, you first have to un-comment the second declaration of the MEM_FILE signal and comment out the first declaration of it. Then open the *asm/init.vhd* file and copy **all** of the content and paste it between the two brackets of the *MEM_FILE* signal initialization, replacing the red note. The result should look like this (of course the memory initialization image corresponds to your assembled program):

INT_RAM.vhd file with memory init image

Now start the simulation of the testbench. The testbench sets the boot configuration to '11' to start the copied image directly from memory after start up.

8.3. Using the Atlas 2k Bootloader

The Atlas 2k processor contains a ROM with a powerful bootloader, which features several options for booting the processor. To reduce the circuitry of the address decoder, only bit 15 of the page address is checked to decide if the bootloader ROM or the 'normal' memory area is selected. Thus, all pages starting from 0x8000 will only access the bootloader page. The loader allows to resume execution of an image in internal RAM (page 0, address 0), the image download via UART or from an SPI EEPROM (CS 0) and even the programming of such an attached EEPROM. For all this operations, the bootloader does not need any RAM at all, so any image data in RAM will not be altered in any way.

NOTE: I suggest to use "Tera Term" or "Hterm" as terminal program.

The bootloader allows the selection of the boot option for the processor via a serial console (UART) or via the boot switch configuration, which is done by setting the lowest two bits of the SYS_IO_I port (bits 1:0).

Terminal console setup:

- 2400 Baud (slow, because of in-fly programming of EEPROM)
- 8 data bits
- no parity bit
- 1 stop bit

Boot configuration pins (SYS_IO_I(1 downto 0)):

- '00': Start bootloader console via UART
- '01': Boot from UART
- '10': Boot from EEPROM (SPI EEPROM at CS 0)
- '11': Boot from internal RAM memory (page 0, address 0x0000)

You need an EEPROM, that is compatible to Microchip ® SPI EEPROM like <u>25LC512</u> with 16-bit address and a 32-bit transfer frame size.

To access the bootloader via console, connect the processor via a COM port to a computer, configure the terminal (see above), set the boot configuration switch to "00" and reset the processor. The LSB of the SYS OUT O status output port will light up and the following menu should show up in your terminal:

```
ATLAS-2K Bootloader, Version 2014.03.04
by Stephan Nolting (stnolting@gmail.com)

Bootloader start: 0x8000
Clock speed (Hz): 0x02FAF080

Command/boot switch
0/'00': Restart console
1/'01': Boot from UART
2/'10': Boot from EEPROM
3/'11': Boot from memory
p: Program EEPROM
d: RAM dump
r: Reset
cmd:>
```

Atlas 2k bootloader console

This project is published under the **GNU General Public License** (GPL)

8th of March, 2014

Now you can enter an option of the list to perform the corresponding operation.

Bootloader console options:

- 0: Restart console (print menu again)
- 1: Boot from UART (transfer image via UART)
- 2: Boot from EEPROM (SPI EEPROM at CS 0)
- 3: Boot from memory (start image from memory system, page 0, address 0)
- p: Program EEPROM (program SPI EEPROM at CS 0 via UART)
- d: RAM dump (hex dump of any accessible memory page)
- r: Reset processor

NOTE: For any kind of downloading an image to the processor or the attached EEPROM, use the "*out-bin*" file, generated by the assembler program (can be found in the same folder). The file must be transferred by the terminal program in <u>RAW BYTE MODE</u>, that means without any protocol or handshake data.

NOTE: The ASM source file of the bootloader can be found in the folder "software/bootloader",

8.4. Let's Get It Started!

In the *software/examples* folder you can find a simple demo program (*demo.asm*), which implements a 4-bit counter, that outputs it's state via the lowest 4 bit of the SYS OUT O port.

To make this program run, follow the following steps:

- 1. Create a new project with your EDA tool of choice (Xilinx ISE, Altera Quartus II,...) and add all the rtl files (see table above) of the processor to your project.
- 2. Select the ATLAS_2K_BASE_TOP. vhd as top entity. Also, set all the user configuration constants in this file corresponding to your setup (clock speed and memory layout).
- 3. Perform the project compilation and assign all input and output pins. Make sure to connect the SYS_IN_I port to some switches and the SYS_OUT_O to some high-active LEDs. Also do not forget to connect the UART RXD and TXD pins to your serial interface and assign reset and clock signals (the reset input is low-active by default).
- 4. Download the generated bitstream to your FPGA.
- 5. Start a terminal program (like HTerm), connect to the corresponding COM port, set the terminal setting to 2400-8-N-1 and open the connection. Make sure, your terminal does not use any kind of frame protocol for receiving/transmitting data (raw byte mode only).
- 6. Now it is time to assemble the program file. Start a command prompt, navigate to the assembler folder *asm* and start the assembling of the demo program (here, we use "DEMO_PROG" as final image name):

...\asm>atlas asm.exe ..\software\examples\demo.asm DEMO PROG

- 7. Reset the Atlas 2k processor via the assigned reset pin. Make sure, the lowest two bit of the SYS_IN_I port are tied to ground (logical 0). This will tell the bootloader to start the terminal console.
- 8. The bootloader prompt should show up in your terminal program and the LED connected to the lowest bit of the SYS_OUT_O port should light up.
- 9. In your terminal program, press (and send) an ASCII '1', this will initiate the booting via UART. Now open the *out.bin* file in the *asm* folder (the assembled program) via your terminal program to download it to the Atlas 2k. This transfer must be done in raw byte mode no command or protocol frame data must be added.
- 10. When the download has completed, the image is automatically started and you should see some pretty LED flashes.
- 11. Troubleshooting: Encountering any problems? Take a closer look at this chapter again, maybe you have forgotten something... If your setup still does not want to work, write me an E-mail and we will try to figure out the problem together.

79 8th of March, 2014

9. Frequently Asked Questions (FAQ)

This chapter presents some questions, that I have been asked about this project as well as some questions, that might occur someday.

• Is there a 32-bit version of the Atlas 2k processor?

Theoretically, you can change the data size to 32-bit, so all kind of addressing and data computation is done using 32-bit values. This option is partly prepared, but not fully implemented yet and therefore might not work. However, instructions will still be 16-bit long.

• How do I connect the core to a Wishbone or any other bus system?

This is a hard one... An older version of the Atlas processor featured a shared I/D-cache with a Wishbone interface, but I have removed it from the core, since I wanted it to be small and easy to use. But I can send you the cache module if you like. If you only wish to interface bus components via software, you could use a Wishbone adapter, connected as user coprocessor. If some people are interested in this, I will write an adapter and publish it within this project.

10. Appendix

10.1. System Coprocessor Modules

	Module		Register	Bit(s)	R/W	Function	
с0	sys_0_core	#0	irq_sm	20	R	IRQ source (07) and ACK IRQ on read-access	
				158	R/W	Interrupt channel mask (channel 07)	
		#1	irq_conf	70	R/W	IRQ channel config 0: '1' level triggered, '0': edge triggered	
				158	R/W	IRQ channel config 1: '1' high/rising, '0' low/falling level/edge	
		#2	timer_cnt	150	R/W	Timer counter register	
		#3	timer_thr	150	R/W	Timer threshold value	
		#4	timer_prsc	150	R/W	Timer clock prescaler	
		#5	lfsr_data	150	R/W	Linear-feedback shift register (LFSR) seed/data	
		#6	lfsr_poly	140	R/W	LFSR polynomial/tap register	
				15	R/W	LFSR update: '1': free-running mode, '0': after read-access	
c1	sys_1_core	#0	mmu_irq_base	150	R/W	Interrupt base page	
		#1	mmu_sys_i_page	150	R/W	System mode instruction page	
		#2	mmu_sys_d_page	150	R/W	System mode data page	
		#3	mmu_usr_i_page	150	R/W	User mode instruction page	
		#4	mmu_usr_d_page	150	R/W	User mode data page	
		#5	mmu_i_page_link	150	R	Linked instruction page	
		#6	mmu_d_page_link	150	R	Linked data page	
		#7	mmu_sys_info	150	R	Various system info	
с2	com_0_core	#0	uart_rtx_sd	70	R/W	UART send/receive data	
				15	R	UART data received flag	
		#1	uart_prsc	150	R/W	UART baud prescaler	
		#2	com_ctrl	0	R/W	SPI MSB first ('0'), LSB first ('1')	
				1	R/W	SPI clock polarity	
				2	R/W	SPI edge offset, '0': first edge, '1': second edge	
				3	R	SPI busy flag	
				4	R/W	SPI auto apply CS	
				5	R	UART transmitter busy flag	
				6	R/W	UART enabled when 'I'	
				118	R/W	SPI data length (actual transfer frame length is [11:8]+1)	
				1512	R/W	SPI clock prescaler	
		#3	spi_data	150	R/W	SPI send/receive data	
		#4	spi_cs	70	R/W	SPI chip select (channels 70)	
		#5	pio_in	150	R	Parallel input data	
		#6	pio_out	150	R/W	Parallel output data	
		#7	sys_io	70	R	System/bootloader parallel input (boot config)	
				158	R/W	System/bootloader parallel output (status)	
-							

Table 38: Processor functional cores (unlisted registers/bits are read as zero and are reserved for future use)

10.2. Instruction Set Summary

The following table presents all instructions, that are implemented by the Atlas 2k evaluation assembler. The following acronym definitions are used:

,	O 1 1 (PA PE) C 1 1 1 (MODE) (OMOTELLA)
Ra, Rb	Operand registers (R0,, R7) from the current register bank (USER/SYSTEM)
Rd	Destination register (R0,, R7) from the current register bank (USER/SYSTEM)
Ra _{usr} , Rb _{usr}	Operand registers (R0,, R7) from the USER register bank
Rd_{USR}	Destination register (R0,, R7) from the USER register bank
Ra _{sys} , Rb _{sys}	Operand registers (R0,, R7) from the SYSTEM register bank
Rd _{sys}	Destination register (R0, \dots , R7) from the SYSTEM register bank
Imm3	3-bit unsigned immediate
Imm4	4-bit unsigned immediate
Imm5	5-bit unsigned immediate
Imm8	8-bit unsigned / signed immediate
Imm9	9-bit signed immediate
Imm10	10-bit unsigned immediate
MI	Memory indexing (pre / post)
FS	Flag set (usr_flags, sys_flags(, alu_flags) or full, if no argument is present)
RFS	Reduced flag set (usr_flags, sys_flags)
STP	Shift type (SWP, ASR, ROL, ROR, LSL, LSR, RLC, RRC)
CP	Coprocessor number (ID = $\#0$ or $\#1$)
Ca, Cb	Coprocessor register (C0,, C7)
CC	3-bit immediate coprocessor command
inFlags	Flags, that are taken into account for computation
outFlags	Flags updated by a computation
MSR	Machine status register
MODE	Corresponds to bit #15 of the MSR
CPX OPT	Flag option (C ANDZ, NOTC ANDZ, C ORZ, NOTC ORZ)
PC PC	Program counter
C, N, O, T, Z	Mode-corresponding ALU flags (Carry, Negative, Overflow, Transfer, Zero)

NOTE: Pseudo instructions, which are instructions constructed from other instructions, are printed in blue.

82 8th of March, 2014

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
ADC	Rd, Ra, Rb	Add two registers with carry	$Rd \leftarrow Ra + Rb + C$	С	-	1
ADCS	Rd, Ra, Rb	Add two registers with carry and set flags	$Rd \leftarrow Ra + Rb + C$	С	C, N, O, Z	1
ADD	Rd, Ra, Rb	Add two registers	Rd ← Ra + Rb	-	-	1
ADDS	Rd, Ra, Rb	Add two registers and set flags	Rd ← Ra + Rb	-	C, N, O, Z	1
AND	Rd, Ra, Rb	Logical AND	Rd ← Ra AND Rb	-	-	1
ANDS	Rd, Ra, Rb	Logical AND and set flags	Rd ← Ra AND Rb	-	C, N, O, Z	1
B, BAL	Imm9	Relative branch always to "Imm9"	PC ← PC + Imm9*2	-	-	1\3
BCS	Imm9	Relative branch if carry set to "Imm9"	PC ← PC + Imm9*2	С	-	1\3
BCS	Imm9	Relative branch if carry cleared to "Imm9"	PC ← PC + Imm9*2	С	-	1\3
BCSL	Imm9	Relative branch if carry set to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	С	-	1\3
BCSL	Imm9	Relative branch if carry cleared to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	С	-	1\3
BEQ	Imm9	Relative branch if equal to "Imm9"	PC ← PC + Imm9*2	Z	-	1\3
BEQL	Imm9	Relative branch if equal to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	Z	-	1\3
BGE	Imm9	Relative branch if greater or equal to "Imm9"	PC ← PC + Imm9*2	N, O	-	1\3
BGEL	Imm9	Relative branch if greater or equal to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	N, O	-	1\3
BGT	Imm9	Relative branch if greater than to "Imm9"	PC ← PC + Imm9*2	N, O, Z	-	1\3
BGTL	Imm9	Relative branch if greater than to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	N, O, Z	-	1\3
BHI	Imm9	Relative branch if unsigned higher to "Imm9"	PC ← PC + Imm9*2	C, Z	-	1\3
BHIL	Imm9	Relative branch if unsigned higher to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	C, Z	-	1\3
BIC	Rd, Ra, Rb	Bit clear	Rd ← Ra AND (!Rb)	-	-	1
BICS	Rd, Ra, Rb	Bit clear and set flags	Rd ← Ra AND (!Rb)	-	C, N, O, Z	1
BL, BALL	Imm9	Relative branch always to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	-	-	1\3
BLE	Imm9	Relative branch if less than or equal to "Imm9"	PC ← PC + Imm9*2	C, N, Z	-	1\3
BLEL	Imm9	Relative branch if less than or equal to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	C, N, Z	-	1\3
BLS	Imm9	Relative branch if unsigned lower or same to "Imm9"	PC ← PC + Imm9*2	C, Z	-	1\3
BLSL	Imm9	Relative branch if unsigned lower or same to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	C, Z	-	1\3
BLT	Imm9	Relative branch if less than to "Imm9"	PC ← PC + Imm9*2	N, O	-	1\3
BLTL	Imm9	Relative branch if less than to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	N, O	-	1\3
BMI	Imm9	Relative branch if negative to "Imm9"	PC ← PC + Imm9*2	N	-	1\3
BMIL	Imm9	Relative branch if negative to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	N	-	1\3
BNE	Imm9	Relative branch if not equal to "Imm9"	PC ← PC + Imm9*2	Z	-	1\3
BNEL	Imm9	Relative branch if not equal to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	Z	-	1\3

This project is published under the **GNU General Public License** (GPL)

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
вос	Imm9	Relative branch if overflow cleared to "Imm9"	PC ← PC + Imm9*2	О	-	1\3
BOCL	Imm9	Relative branch if overflow cleared to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	О	-	1\3
BOS	Imm9	Relative branch if overflow set to "Imm9"	PC ← PC + Imm9*2	О	-	1\3
BOSL	Imm9	Relative branch if overflow set to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	О	-	1\3
BPL	Imm9	Relative branch if positive to "Imm9"	PC ← PC + Imm9*2	N	-	1\3
BPLL	Imm9	Relative branch if positive to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	N	-	1\3
BRAGE	Rb	Branch absolute to [Rb] if greater or equal	PC ← Rb	N, O	-	1\3
BRAGT	Rb	Branch absolute to [Rb] if greater than	PC ← Rb	N, O, Z	-	1\3
BRALE	Rb	Branch absolute to [Rb] if less than or equal	PC ← Rb	C, N, Z	-	1\3
BRALGE	Rb	Branch absolute to [Rb] if greater or equal, and link	PC ← Rb; R7 ← PC + 2	N, O	-	1\3
BRALGT	Rb	Branch absolute to [Rb] if greater than, and link	PC ← Rb; R7 ← PC + 2	N, O, Z	-	1\3
BRALLE	Rb	Branch absolute to [Rb] if less than or equal, and link	PC ← Rb; R7 ← PC + 2	C, N, Z	-	1\3
BRALLT	Rb	Branch absolute to [Rb] if less than, and link	PC ← Rb; R7 ← PC + 2	N, O	-	1\3
BRALT	Rb	Branch absolute to [Rb] if less than	PC ← Rb	N, O	-	1\3
BRALTS	Rb	Branch absolute to [Rb] if transfer set, and link	PC ← Rb; R7 ← PC + 2	Т	-	1\3
BRATS	Rb	Branch absolute to [Rb] if transfer set	PC ← Rb	T	-	1\3
BRRGE	Rb	Branch relative to [Rb] if greater or equal	$PC \leftarrow PC + Rb$	N, O	-	1\3
BRRGT	Rb	Branch relative to [Rb] if greater than	$PC \leftarrow PC + Rb$	N, O, Z	-	1\3
BRRLE	Rb	Branch relative to [Rb] if less than or equal	$PC \leftarrow PC + Rb$	C, N, Z	-	1\3
BRRLGE	Rb	Branch relative to [Rb] if greater or equal, and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	N, O	-	1\3
BRRLGT	Rb	Branch relative to [Rb] if greater than, and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	N, O, Z	-	1\3
BRRLLE	Rb	Branch relative to [Rb] if less than or equal, and link	PC ← PC + Rb; R7 ← PC + 2	C, N, Z	-	1\3
BRRLLT	Rb	Branch relative to [Rb] if less than, and link	PC ← PC + Rb; R7 ← PC + 2	N, O	-	1\3
BRRLT	Rb	Branch relative to [Rb] if less than	$PC \leftarrow PC + Rb$	N, O	-	1\3
BRRLTS	Rb	Branch relative to [Rb] if transfer set and link	PC ← PC + Rb; R7 ← PC + 2	Т	-	1\3
BRRTS	Rb	Branch relative to [Rb] if transfer set	$PC \leftarrow PC + Rb$	T	-	1\3
BTS	Imm9	Relative branch if transfer set to "Imm9"	PC ← PC + Imm9*2	T	-	1\3
BTSL	Imm9	Relative branch if transfer set to "Imm9" and link	PC ← PC + Imm9*2; R7 ← PC + 2	Т	-	1\3
CBR	Rd, Ra, Imm4	Clear bit in register	Rd ← Ra AND (!(1< <imm4))< td=""><td>-</td><td>-</td><td>1</td></imm4))<>	-	-	1
CDP	CP, Ca, Cb, CC	Coprocessor data processing (CC on Ca and Cb)	Ca ← Ca [CC] Cb @ CP	-	-	1
CLR	Rd	Clears a register (Rd = 0)	Rd ← Rd XOR Rd	-	-	1
CLRS	Rd	Clears a register (Rd = 0) and set flags	Rd ← Rd XOR Rd	-	C, N, O, Z	1

This project is published under the **GNU General Public License** (GPL)

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
CMP(S)	Ra, Rb	Compare two registers	Flags ← Ra - Rb	-	C, N, O, Z	1
COM	Rd, Ra	Logical NOT	Rd ← Ra NAND Ra	-	-	1
COMS	Rd, Ra	Logical NOT and set flags	Rd ← Ra NAND Ra	-	C, N, O, Z	1
CPX(S)	Ra, Rb, CPX_OPT	Compare two registers with flags using flag option	Flags ← Ra – Rb, C, Z [CPX_OPT]	C, Z	C, N, O, Z	1
DEC	Rd, Ra, Imm3	Subtract a three-bit immediate from a register	Rd ← Ra - Imm3	-	-	1
DECS	Rd, Ra, Imm3	Subtract a three-bit immediate from a register and set flags	Rd ← Ra - Imm3	-	C, N, O, Z	1
EOR	Rd, Ra, Rb	Logical EXCLUSIVE OR	Rd ← Ra XOR Rb	-	-	1
EORS	Rd, Ra, Rb	Logical EXCLUSIVE OR and set flags	Rd ← Ra XOR Rb	-	C, N, O, Z	1
INC	Rd, Ra, Imm3	Add three-bit immediate to register	Rd ← Ra + Imm3	-	-	1
INCS	Rd, Ra, Imm3	Add three-bit immediate to register and set flags	Rd ← Ra + Imm3	-	C, N, O, Z	1
LDB	Rd, Ra, Imm4	Load T-flag to a register's bit	$Rd \leftarrow (Ra[Imm4] \leftarrow T)$	T	-	1
LDIH	Rd, Imm8	Load upper 8 bit with immediate	Rd[15:8] ← Imm8	-	-	1
LDIL	Rd, Imm8	Load and sign extend lower 8 bit with immediate	Rd[7:1] ← Imm8; Rd[15:8] ← Imm8[7]	-	-	1
LDPC	Rd	Move program counter to register	Rd ← PC	-	-	1
LDR	Rd, Ra/Imm3, MI	Load data from memory with indexing pre/post indexing (MI)	Rd ← MEM[Ra+Rb/Imm3]	-	-	1\2
LDSR	Rd, FS	Move machine status register flag set to register	$Rd \leftarrow MSR[FS]$	-	-	1
LDUB	Rd _{SYS} , Ra _{USR}	Load register from user bank	$Rd_{SYS} \leftarrow Ra_{USR}$	-	-	1
LDUBS	Rd _{SYS} , Ra _{USR}	Load register from user bank and set flags	$Rd_{SYS} \leftarrow Ra_{USR}$	-	C, N, O, Z	1
MCR	CP, Cd, Ra, CC	Store data to coprocessor (with command)	$CP.Cd \leftarrow Ra, [CC]$	-	-	1
MOV	Rd, Ra	Copy register Ra to Rd	$Rd \leftarrow Ra + 0$	-	C, N, O, Z	1
MOVS	Rd, Ra	Copy register Ra to Rd and set flags	$Rd \leftarrow Ra + 0$	-	C, N, O, C	1
MRC	CP, Rd, Ca, CC	Load data from coprocessor (with command)	$Rd \leftarrow CP.Ca, [CC]$	-	-	1
MUL	Rd, Ra, Rb	Multiply Ra and Rb	Rd ← Ra * Rb	-	-	1
NAND	Rd, Ra, Rb	Logical NOT-AND	Rd ← Ra NAND Rb	-	-	1
NANDS	Rd, Ra, Rb	Logical NOT-AND and set flags	Rd ← Ra NAND Rb	-	C, N, O, Z	1
NEC	Rd, Ra	Compute negative of register with taking carry flag into account	Rd ← 0 - Ra - C	С	-	1
NECS	Rd, Ra	Compute negative of register with taking carry flag into account; and set flags	Rd ← 0 - Ra - C	С	C, N, O, Z	1
NEG	Rd, Ra	Compute negative of register	Rd ← 0 - Ra	-	-	1
NEGS	Rd, Ra	Compute negative of register and set flags	Rd ← 0 - Ra		C, N, O, Z	1
NOP	-	No operation	$R0 \leftarrow R0 + 0$	-	-	1
ORR	Rd, Ra, Rb	Logical OR	Rd ← Ra OR Rb	-	-	1
ORRS	Rd, Ra, Rb	Logical OR and set flags	Rd ← Ra OR Rb	-	C, N, O, Z	1
RBA, RBAAL	Rb	Branch always absolute to [Rb]	PC ← Rb	-	-	3
RBACC	Rb	Branch absolute to [Rb] if carry cleared	PC ← Rb	С	-	1\3
RBACS	Rb	Branch absolute to [Rb] if carry set	PC ← Rb	С	-	1\3
RBAEQ	Rb	Branch absolute to [Rb] if equal	PC ← Rb	Z	-	1\3
RBAHI	Rb	Branch absolute to [Rb] if unsigned higher	PC ← Rb	C, Z	-	1\3

This project is published under the **GNU General Public License** (GPL)

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
RBAL, RBALAL	Rb	Branch always absolute to [Rb], and link	PC ← Rb; R7 ← PC + 2	-	-	3
RBALCC	Rb	Branch absolute to [Rb] if carry cleared, and link	PC ← Rb; R7 ← PC + 2	С	-	1\3
RBALCS	Rb	Branch absolute to [Rb] if carry set, and link	PC ← Rb; R7 ← PC + 2	С	-	1\3
RBALEQ	Rb	Branch absolute to [Rb] if equal, and link	PC ← Rb; R7 ← PC + 2	Z	-	1\3
RBALHI	Rb	Branch absolute to [Rb] if unsigned higher, and link	$PC \leftarrow Rb; \\ R7 \leftarrow PC + 2$	C, Z	-	1\3
RBALLS	Rb	Branch absolute to [Rb] if unsigned lower, and link	PC ← Rb; R7 ← PC + 2	C, Z	-	1\3
RBALMI	Rb	Branch absolute to [Rb] if minus, and link	PC ← Rb; R7 ← PC + 2	N	-	1\3
RBALNE	Rb	Branch absolute to [Rb] if not equal, and link	PC ← Rb; R7 ← PC + 2	Z	-	1\3
RBALPL	Rb	Branch absolute to [Rb] if plus, and link	$PC \leftarrow Rb; \\ R7 \leftarrow PC + 2$	N	-	1\3
RBALS	Rb	Branch absolute to [Rb] if unsigned lower	PC ← Rb	C, Z	-	1\3
RBALVC	Rb	Branch absolute to [Rb] if overflow cleared, and link	PC ← Rb; R7 ← PC + 2	О	-	1\3
RBALVS	Rb	Branch absolute to [Rb] if overflow set, and link	PC ← Rb; R7 ← PC + 2	О	-	1\3
RBAMI	Rb	Branch absolute to [Rb] if minus	PC ← Rb	N	-	1\3
RBANE	Rb	Branch absolute to [Rb] if not equal	PC ← Rb	Z	-	1\3
RBAPL	Rb	Branch absolute to [Rb] if plus	PC ← Rb	N	-	1\3
RBAVC	Rb	Branch absolute to [Rb] if overflow cleared	PC ← Rb	О	-	1\3
RBAVS	Rb	Branch absolute to [Rb] if overflow set	PC ← Rb	О	-	1\3
RBR, RBRAL	Rb	Branch always relative to [Rb]	PC ← PC + Rb	-	-	3
RBRCC	Rb	Branch relative to [Rb] if carry cleared	$PC \leftarrow PC + Rb$	С	-	1\3
RBRCS	Rb	Branch relative to [Rb] if carry set	$PC \leftarrow PC + Rb$	С	-	1\3
RBREQ	Rb	Branch relative to [Rb] if equal	$PC \leftarrow PC + Rb$	Z	-	1\3
RBRHI	Rb	Branch relative to [Rb] if unsigned higher	$PC \leftarrow PC + Rb$	C, Z	-	1\3
RBRL, RBRLAL	Rb	Branch always relative to [Rb], and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	-	-	3
RBRLCC	Rb	Branch relative to [Rb] if carry cleared, and link	$PC \leftarrow PC + Rb;$ $R7 \leftarrow PC + 2$	С	-	1\3
RBRLCS	Rb	Branch relative to [Rb] if carry set, and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	С	-	1\3
RBRLEQ	Rb	Branch relative to [Rb] if equal, and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	Z	-	1\3
RBRLHI	Rb	Branch relative to [Rb] if unsigned higher, and link	$PC \leftarrow PC + Rb;$ $R7 \leftarrow PC + 2$	C, Z	-	1\3
RBRLLS	Rb	Branch relative to [Rb] if unsigned lower, and link	$PC \leftarrow PC + Rb;$ $R7 \leftarrow PC + 2$	C, Z	-	1\3
RBRLMI	Rb	Branch relative to [Rb] if minus, and link	$PC \leftarrow PC + Rb; R7 \leftarrow PC + 2$	N	-	1\3

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
RBRLNE	Rb	Branch relative to [Rb] if not equal, and link	$PC \leftarrow PC + Rb;$ $R7 \leftarrow PC + 2$	Z	-	1\3
RBRLPL	Rb	Branch relative to [Rb] if plus, and link	$PC \leftarrow PC + Rb;$ $R7 \leftarrow PC + 2$	N	-	1\3
RBRLS	Rb	Branch relative to [Rb] if unsigned lower	$PC \leftarrow PC + Rb$	C, Z	-	1\3
RBRLVC	Rb	Branch relative to [Rb] if overflow cleared, and link	$PC \leftarrow PC + Rb;$ R7 \leftarrow PC + 2	О	-	1\3
RBRLVS	Rb	Branch relative to [Rb] if overflow set, and link	$PC \leftarrow PC + Rb;$ R7 \leftarrow PC + 2	О	-	1\3
RBRMI	Rb	Branch relative to [Rb] if minus	$PC \leftarrow PC + Rb$	N	-	1\3
RBRNE	Rb	Branch relative to [Rb] if not equal	$PC \leftarrow PC + Rb$	Z	-	1\3
RBRPL	Rb	Branch relative to [Rb] if plus	$PC \leftarrow PC + Rb$	N	-	1\3
RBRVC	Rb	Branch relative to [Rb] if overflow cleared	$PC \leftarrow PC + Rb$	О	-	1\3
RBRVS	Rb	Branch relative to [Rb] if overflow set	$PC \leftarrow PC + Rb$	О	-	1\3
SBC	Rd, Ra, Rb	Subtract two registers with carry	Rd ← Ra - Rb - C	С	-	1
SBCS	Rd, Ra, Rb	Subtract two registers with carry and set flags	Rd ← Ra - Rb - C	С	C, N, O, Z	1
SBR	Rd, Ra, Imm4	Set bit in register	Rd ← Ra OR (1< <imm4)< td=""><td>-</td><td>-</td><td>1</td></imm4)<>	-	-	1
SFT	Rd, Ra, STP	Shift with 3-bit type STP	$Rd \leftarrow shift(Ra, STP)$	С	-	1
SFTS	Rd, Ra, STP	Shift with 3-bit type STP and set flags	$Rd \leftarrow shift(Ra, STP)$	С	C, N, O, Z	1
SLEEP	Imm9	Set CPU into sleep mode with 9-bit tag	-	-	-	1
SPR	Ra	Store parity of register to T-flag	$T \leftarrow parity(Ra)$	-	Т	1
SPRI	Ra	Store inverted parity of register to T-flag	$T \leftarrow NOT parity(Ra)$	-	Т	1
STAF	Imm5, RFS	Store immediate to MSR ALU flag set	MSR[RFS] ← Imm5	-	C, N, O, Z, T	1
STB	Ra, Imm4	Store bit to T-flag	T ← Ra[Imm4]	-	Т	1
STBI	Ra, Imm4	Store inverted bit to T-flag	T ← NOT Ra[Imm4]	-	T	1
STBR	Ra, Rb	Store bit to T-flag (register-indexed)	$T \leftarrow Ra[Rb(3:0)]$	-	T	1
STBRI	Ra, Rb	Store inverted bit to T-flag (register-indexed)	$T \leftarrow NOT Ra[R4(3:0)]$	-	Т	1
STPC, RET, GT	Ra	Store register to program counter	PC ← Ra	-	-	1
STPCI, RETI, GTI	Ra	Store register to program counter and enable global external interrupts	PC ← Ra; MSR(11) ← '1'	-	-	1
STPCIL, RETIL, RETL	Ra	Store register to program counter, link and enable global external interrupts	PC ← Ra; R7 ← PC+2; MSR(11) ← '1'	-	-	1
STPCL, RETL, GTL	Ra	Store register to program counter and link	PC ← Ra; R7 ← PC+2	-	-	1
STPCU, RETU, GTU	Ra	Store register to program counter, change to user mode when in system mode	PC ← Ra; MODE ← USR	-	-	1
STPCUI, RETUI, GTUI	Ra	Store register to program counter, change to user mode when in system mode and enable global external interrupts	PC ← Ra; MODE ← USR; MSR(11) ← '1'	-	-	1

Mnemonic	Operands	Description	Operation	inFlags	outFlags	Cycles
STPCUIL, RETUIL, GTUIL	Ra	Store register to program counter, change to user mode when in system mode and link, link and enable global external interrupts	PC ← Ra; MODE ← USR; R7 ← PC+2; MSR(11) ← '1'	-	-	1
STPCUL, RETUL, GTUL	Ra	Store register to program counter, change to user mode when in system mode and link	$PC \leftarrow Ra;$ $MODE \leftarrow USR;$ $R7 \leftarrow PC+2$	-	-	1
STPCX, RETX, GTX	Ra	Store register to program counter and switch back to previous mode	PC ← Ra; MODE ← MSR(14)	-	-	1
STPCXI, RETXI, GTXI	Ra	Store register to program counter, switch back to previous mode and enable global external interrupts	$PC \leftarrow Ra;$ $MODE \leftarrow MSR(14);$ $MSR(11) \leftarrow '1'$	-	-	1
STPCXIL, RETXIL, GTXIL	Ra	Store register to program counter, switch back to previous mode and link, link and enable global external interrupts	PC ← Ra; MODE ← MSR(14); R7 ← PC+2; MSR(11) ← '1'	-	-	1
STPCXL, RETXL, GTXL	Ra	Store register to program counter, switch back to previous mode and link	$PC \leftarrow Ra;$ $MODE \leftarrow MSR(14);$ $R7 \leftarrow PC+2$	-	-	1
STR	Rd, Ra/Imm3, MI	Store data to memory with indexing pre/post indexing (MI)	MEM[Ra+Rb/Imm3]← Rd	-	all	1\2
STSR	Ra, FS	Store register to machine status register flag set	$MSR \leftarrow Ra[FS]$	-	-	1
STUB	Rd _{USR} , Ra _{SYS}	Store register to user bank	$Rd_{USR} \leftarrow Ra_{SYS}$	-	-	1
STUBS	Rd _{USR} , Ra _{SYS}	Store register to user bank and set flags	$Rd_{USR} \leftarrow Ra_{SYS}$	-	C, N, O, Z	1
SUB	Rd, Ra, Rb	Subtract two registers	Rd ← Ra - Rb	-	-	1
SUBS	Rd, Ra, Rb	Subtract two registers and set flags	Rd ← Ra - Rb	-	C, N, O, Z	1
SYSCALL	Imm10	System call (software interrupt) with 10-bit tag	MODE \leftarrow SYS; R7_sys \leftarrow PC + 2; PC \leftarrow x"0004"	-	-	1
TEQ(S)	Ra, Rb	Logical AND-test	Flags ← Ra AND Rb	-	C, N, O, Z	1
TST(S)	Ra, Rb	Logical OR-test	Flags ← Ra OR Rb	-	C, N, O, Z	1

Table 39: Atlas 2k Instruction Set Reference Card