

# Wireless echosounder calibration winch manual

Aqualyd Limited

Version v1.0

# Table of Contents

User Manual .....	2
First-use setup.....	3
Supply of power .....	3
Installation of line on the reels.....	3
Operating the system.....	4
Installing the winches and poles .....	4
Controlling the winches .....	5
Charging the batteries .....	6
Routine maintenance .....	6
Technical Manual .....	7
System description.....	8
Winches .....	8
Hand controller and range extender .....	9
Software.....	9
Changing winch identification.....	9
Poles .....	10
Assembling/disassembling the winch unit .....	11
Access to winch electronics.....	11
Removing the drum and bearings.....	11
Appendix A: Specifications .....	12
Appendix B: Supplied Parts .....	13
Appendix C: Schematics .....	14

© 2022 Aqualyd Limited

341 Higgins Road

Wakefield

New Zealand

[www.aqualyd.nz](http://www.aqualyd.nz)

The latest version of this manual is available on [github](#).

# User Manual

This is the User Manual for the Aqualyd wireless echosounder calibration winch system and provides information on setting up and using the system.

# First-use setup

## Supply of power

The winch units each require a user-supplied 36 V DC power supply. The winch units have a water-resistant bulkhead connector for supply of the power and a matching cable connector is provided with each winch. It is the user's responsibility to source and connect a suitable 36 V DC power supply to each winch.

Pin 1 in the connector should be connected to the positive of the DC supply and pin 3 to the negative of the DC supply (there is no pin 2) (see [Appendix C](#) for schematics). The supplied connector can accommodate a cable with external diameter between 4 and 8 mm.

Normal operation peak current is generally less than 0.7 A. The current used to hold a 3 kg load is generally less than 0.1 A. To ensure voltage stability during winch operations and allow for startup currents, the power supply system should be capable of supplying at least 1.5 A.

The winches will operate with an input voltage between 10 and 40 V, but require about 36 V to hold the rated weight. Exceeding 40 V will damage the winch electronics.

## Installation of line on the reels

Line should be added to the reels so that the free end leaves from the underneath of the drum when viewing the unit with the yellow tube to your right. If the direction of the winches does not match the arrows on the hand controller, it is most likely that the line has been wound on the wrong way.

# Operating the system


## Installing the winches and poles

Each winch/pole unit is assembled by:

1. Inserting a telescopic pole into the yellow tube on each winch unit (these can be a tight fit - sand the inside of the yellow tube ends if necessary to ease the fit),
2. Extending the telescopic pole to the desired length,
3. Aligning the holes in the yellow tube and pole and inserting the locking pin (the pole will extend about 200 mm inboard from the yellow tube),
4. Inserting the supplied eye-bolt into the hole in the onboard end of the pole ,
5. Attaching a tie-down cord to each eye-bolt using the attached carabiner,
6. Lead the winch line through the eye-bolt on the outboard end of the pole,
7. Secure the assembled units to the vessel,
8. Connect power.

The winch units are designed to be attached to a pipe or plate railing on a vessel ([Figure 1](#)):

- A pipe attachment uses the supplied hose clamps to secure the aluminium section of the winch unit to the railing.
- A plate attachment uses clamps (user supplied) to secure the winch units' plastic base or the aluminium section to the flat plate.

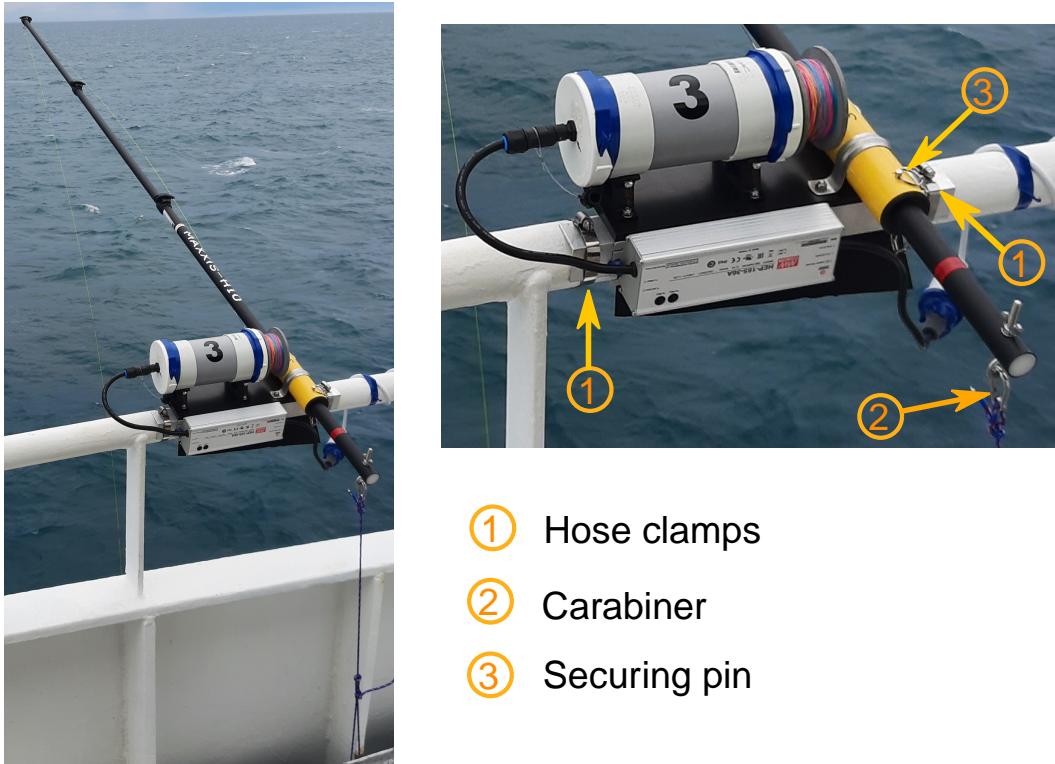

*Figure 1. Winch unit installed on a ship's railing showing hose clamps, securing pin, and attachment carabiner.*

The leverage from the extended poles is countered by the cord attachment from the onboard end of the pole to suitable point(s) on the vessel (e.g., a lower railing or gusset)

Each winch is numbered - place the winches in a location that fits with the layout of the numbered switches on the hand controller ([Figure 2](#)). For example, if one pole is at the bow of the vessel and the other two poles on port and starboard side, place winch 1 at the bow, winch 2 to port and winch 3 to starboard. Note that winch 1 holds the long telescopic pole.

To make it easy to relate the three winch switches to the winch locations, rotate the hand controller so that the winch switches approximately match the locations of the winches on the vessel when facing towards the bow. This will often mean holding the winch controller in a landscape orientation.



*Figure 2. Hand controller showing on/off switch, speed control and winch direction controls.*

**WARNING**

When extending the telescopic poles do not extend each section beyond the red band and ensure that each pole clip is closed after extending.

**NOTE**

The winches will rotate relatively freely until power is applied to the winches, after which the only way to rotate the winches is by using the hand controller.

The hand controller and winches automatically form a wireless mesh network that relays commands from the hand controller to the winches even if all winches are not reachable directly from the hand controller. The range extender can be used to bridge a gap in this network. Multiple range extenders can be used if necessary.

## Controlling the winches

Individual winches can be controlled using the three in/out switches on the hand controller. The speed of the winches is controlled using the dial. The slowest speed is 20 mm/s and the fastest 1 m/s. Multiple winches can be operated at the same time.

**WARNING**

Only use speeds in the red section of the dial when the weight on the winch is less than about 3 kg.

The in/out switches are configured to pay out line when the inner side of the switch is pressed. In that sense, the arrow on the switches indicates the direction that the sphere will move when viewed in a split-beam echosounder sphere position plot.

**NOTE**

It is easy to operate the winches without observing the winch and this can quickly cause unintentional damage to the winches or the poles (e.g., pulling a line too hard when the line is caught on the hull, paying out line when there is no tension on the line leading to tangles). Experience suggests that until the sphere is visible on the echosounder split-beam display, all operation of the winches should be done while observing the winch/pole unit.

## Charging the batteries

The hand controller and range extender contain rechargeable batteries. To charge these, connect the supplied USB cable to the unit and to a USB power supply (the USB port on a computer is fine) and *turn the unit on*.

Charging a completely flat battery will take about 4 hours - no harm will occur to the battery if it is connected to the charger for longer than this. A fully charged battery will power a unit for about 40 hours.

Note that the unit will be operating and transmitting whenever USB power is supplied, but will not charge the battery until the power switch is turned on (the on/off switch connects or disconnects the battery from the system - it does not affect supply of USB power to the unit's electronics). This means that a unit with a flat, faulty, or absent battery can be used normally by connecting USB power - it will operate as per normal and charge the battery if present.

No external indication is given as to whether the battery is being charged (there is an internal LED that shows the charging state).

**WARNING**

Charging will only occur when the on/off switch on the hand controller or range extender is in the on position.

## Routine maintenance

After each use of the system:

- charge the batteries in the hand controller and range extender.
- wash down the winches and poles in freshwater
- separate out the telescopic parts of the poles and allow any internal water to dry before reassembling


# Technical Manual

This is the Technical Manual for the Aqualyd wireless echosounder calibration winch system. This section provides details on how the system works, the main components, and information to assist with repair and modifications of the system.

# System description

The overall system consists of a hand controller, three winches, and an optional range extender. Communication between these units occurs via a 2.4 GHz mesh network, provided by Digi XBee3 radio modules. The hand controller broadcasts a message at 5 Hz that contains the state of all three in/out switches (up, down, stationary) and the potentiometer (0-255). Each winch unit listens to these messages, picks out the relevant in/out switch state and sends speed and direction commands to the motor controller, which operates the stepper model to rotate the winch drum. The relationship between the speed setting on the hand controller and the actual motor speed is determined by calculations done by the code running in the winch unit. There is no communication from the winches to the hand controller.

The system is provided in two parts: 1) a transit/storage case that contains the hand controller, range extender and three winch units, and 2) a pipe that contains three telescopic poles ([Figure 3](#)).

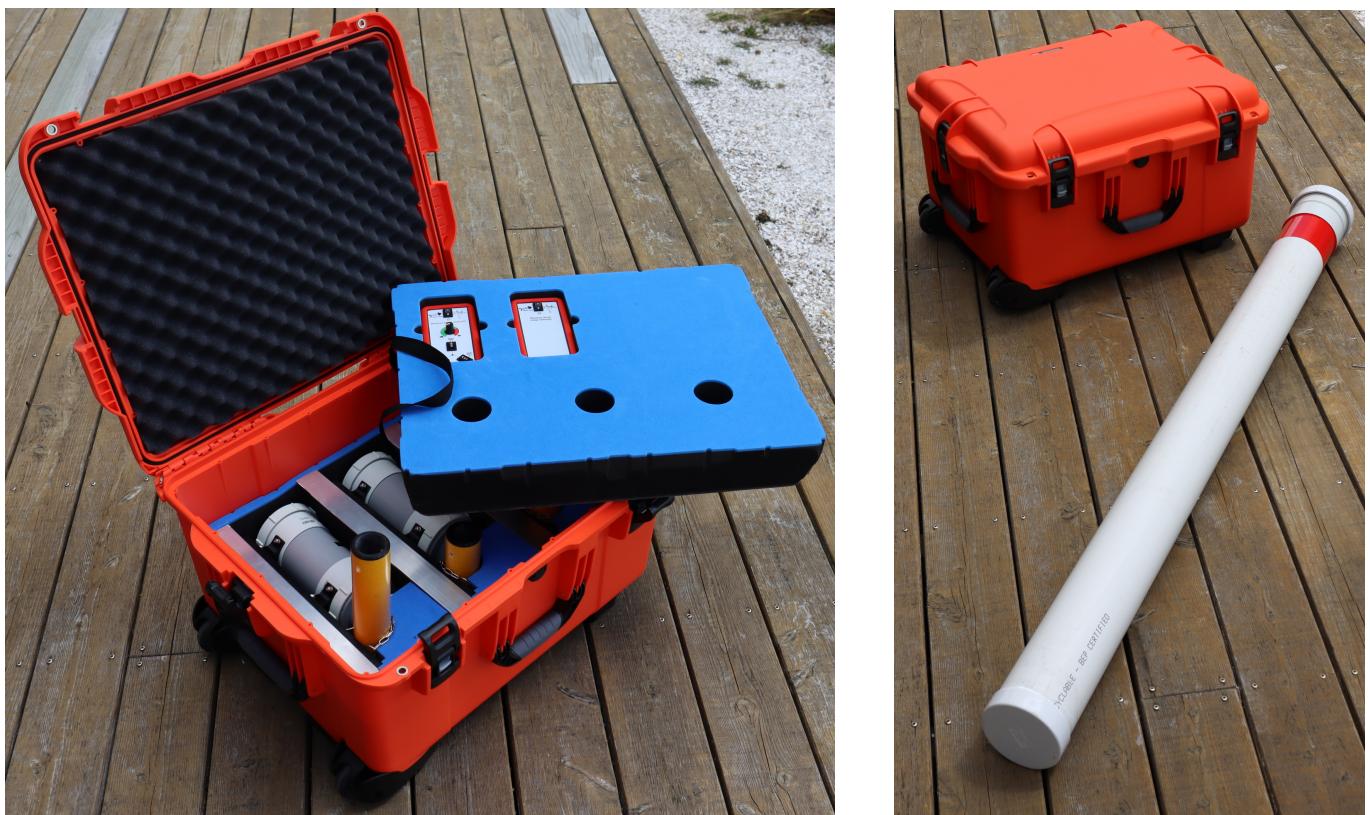

*Figure 3. Supplied winch system showing (left) the transit case with included winches and controllers, and (right) the transit case and pole tube.*

## Winches

The motors are of NEMA 23 size, supplied by StepperOnline (model 23HS30-2804S-PG4), driven by a StepperOnline ISD04 motor controller. The motor is integrated with a 4.25:1 planetary gearbox. The controller is driven using the STEP/DIR output from a Pololu Tic T246 motor controller which in turn is controlled via a serial link to a microPython programm running on the XBee3 radio module in each winch unit.

The acceleration and deceleration applied when the motor speed is changed is determined by a programmable setting in the Tic T246, as well as the maximum motor speed, and command timeout

when no hand controller messages are received. The StepperOnline motor controller is configured for 1/4 microstepping.

The winches were designed to hold a 6 kg load and are able to lift and lower 6 kg at slow speeds. Operation at higher speeds is only possible with smaller loads. The winch units operate with a 10-40 V DC input, but 36 V is needed to achieve sufficient motor torque to hold a 6 kg line load.

## Hand controller and range extender

The hand controller contains a Digi XBee3 radio module, switches, a potentiometer, and rechargeable battery. The XBee3 is integrated in a SparkFun Thing Plus XBee3 board (P/N WRL-15454) which provides power to the XBee3 via USB or a Lithium-Polymer battery. Battery management circuitry is also included that will charge the battery when USB power is provided.

The range extender is the same as the hand controller but without the switches and potentiometer and does not run a microPython program - the range extension functionality is part of the XBee3 firmware.

## Software

The hand controller runs a microPython program on the XBee3 module to translate buttons presses and speed setting into the message that is broadcast to the winches. The XBee3 in each winch also runs a microPython program that receives these messages, decodes them and sends motor speed and direction commands to the motor controller. The code that runs on these XBee3 modules is available on [github](#).

Uploading the microPython code to the XBee3 module in the hand controller is done via the USB connector on the hand controller. Uploading to the XBee3 module in the winches requires a separate board that provides serial communication access to the XBee3 (e.g. an XBee Grove Development Board). Modifying the parameters in the Pololu motor controller can be done via the USB connector on the Pololu unit. Modifying the sub-step settings on the StepperOnline motor controller is done via DIP switches on the motor controller itself.

## Changing winch identification

Changing the winch identification may be necessary when replacing a faulty winch.

Each winch has an identification number (1, 2, 3). This is used by each winch to select the appropriate part of the message sent by the hand controller. This number is stored in the NI parameter in the XBee3 unit and is read when powering up. Changing this number can be done using the Digi XCTU software (via USB) or the Digi XBee mobile app (via Bluetooth). The Bluetooth password is **aqualyd**.

Note that the hand controller only sends out messages to winches with identification codes of 1, 2, or 3. If the winch NI parameter is set to any other value that winch will not act on any commands from the hand controller.

## **Poles**

The poles are telescopic and made of a 50/50 mix of carbon fibre and fibreglass. They are originally made for window washing and replacements are readily available from cleaning suppliers.

# **Assembling/disassembling the winch unit**

tbc

## **Access to winch electronics**

tbc

## **Removing the drum and bearings**

tbc

# Appendix A: Specifications


Parameter	Value	Units
Maximum line speed	1	m/s
Minimum line speed	0.02	m/s
Maximum stationary load	6	kg
Maximum load at 1 m/s line speed	~1.5	kg
Maximum load at 0.5 m/s line speed	~3	kg
Winch supply voltage	10-40	V DC
Winch supply voltage for design performance	36	V DC
Current usage at 6 kg load, 0.02 m/s	<0.1	A
Peak current usage at 3 kg load, 0.5 m/s	0.7	A
Recommended minimum current rating of power supply	1.5	A
Maximum current usage based on motor specs	3.4	A
Wireless communication protocol	XBee DigiMesh	
DigiMesh network identification	0xA1A1	
DigiMesh wireless channel	26 (2480 MHz)	
Hand controller/range extender battery	Nokia BL-5C	
Battery chemistry	Lithium Ion	
Battery voltage	3.7	V
Battery rating	1.05	Ah
Battery rating	3.8	Wh

# Appendix B: Supplied Parts


A wireless system consists of the following components:

Component	Quantity
Transit/storage case (Nanuk 960)	1
Case foam (lower tray)	1
Case foam (upper tray)	1
Winch unit (short pole)	2
Winch unit (long pole)	1
Hand controller	1
Range extender	1
Pole transit/storage pipe	1
Short pole	2
Long pole	1
Pole attachment cord	3
Pole attachment eyebolt	3
Power supply connector	3
Power supply connector cover	3
Winch power socket cover	3
Charging cord (USB)	1
User & Technical manual	1
Hose clamps (46-70 mm diameter)	6
G-clamps (not supplied)	6

# Appendix C: Schematics

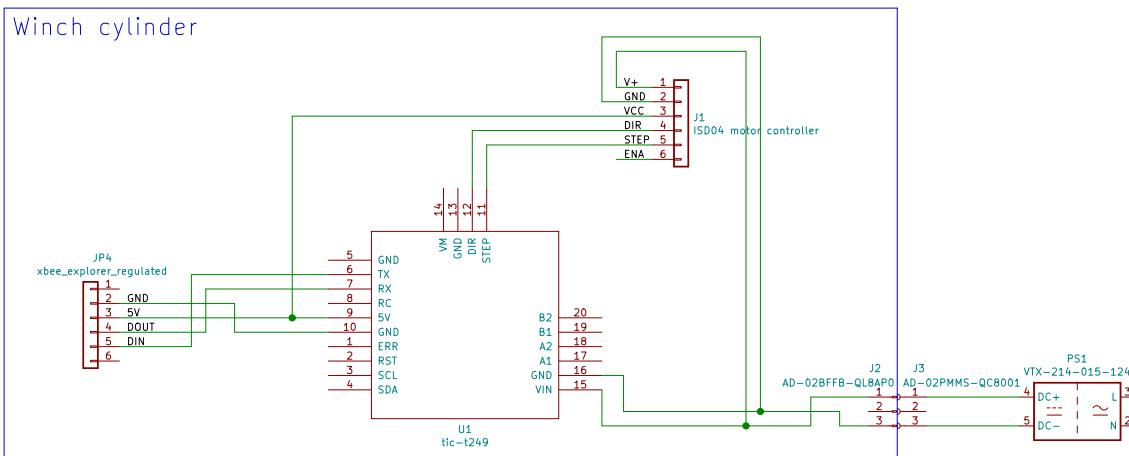

*Figure 4. Wiring schematic for the winch unit.*

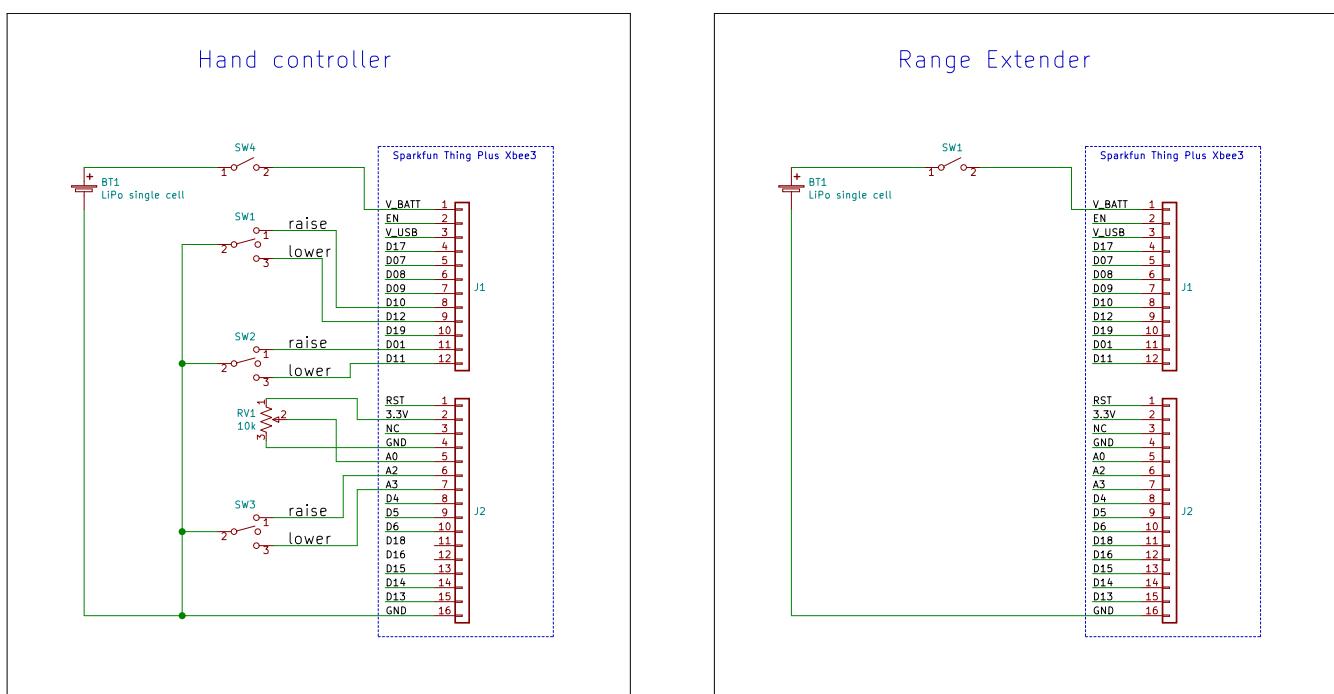

#### Wiring colour standard:

- wiring color standard:  
- SW1, SW2, SW3 terminal 1: yellow  
- SW1, SW2, SW3 terminal 2: black  
- SW1, SW2, SW3 terminal 3: orange  
- RV1 terminal 1: red  
- RV1 terminal 2: green  
- RV1 terminal 3: black  
- BT1 +ve: red  
- BT1 gnd: black

Versioning:  
v1.0 - original  
v1.1 - moved SW2 to different XBee3 pins

*Figure 5. Wiring schematic for the hand controller and range extender*