

# **u-blox F9 LAP 1.50**

## u-blox F9 high precision automotive DR GNSS receiver Protocol version 30.50

Interface description



#### **Abstract**

This document describes the interface (version 30.50) of the u-blox F9 firmware LAP 1.50 platform.





## **Document information**

u-blox F9 LAP 1.50	
u-blox F9 high precision automo	tive DR GNSS receiver
Interface description	
UBXDOC-963802114-13052	
R01	20-Feb-2025
C1-Public	
	u-blox F9 high precision automo Interface description UBXDOC-963802114-13052 R01

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, or modification of this document or any part thereof is only permitted with the express written permission of u-blox. Disclosure to third parties is permitted for clearly public documents only.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents and product statuses, visit www.u-blox.com.

Copyright © 2025, u-blox AG.



## **Contents**

1	General information	14	ļ
	1.1 Document overview	14	Ļ
	1.2 Firmware and protocol versions	14	Ļ
	1.3 Receiver configuration	16	;
	1.4 Message naming	16	;
	1.5 GNSS, satellite, and signal identifiers	17	,
	1.5.1 Overview	17	,
	1.5.2 GNSS identifiers	18	3
	1.5.3 Satellite identifiers	18	3
	1.5.4 Signal identifiers	19	,
	1.6 Message types	20	)
2	NMEA protocol	21	
	2.1 NMEA frame structure		
	2.2 NMEA protocol configuration		
	2.3 NMEA-proprietary messages		
	2.4 NMEA multi-GNSS operation		
	2.5 NMEA data fields		
	2.5.1 NMEA Talker ID		
	2.5.2 NMEA extra fields	24	Ļ
	2.5.3 NMEA latitude and longitude format	24	Ļ
	2.5.4 NMEA GNSS, satellite, and signal numbering		
	2.5.5 NMEA position fix flags		
	2.5.6 NMEA output of invalid or unknown data	25	,
	2.6 NMEA messages overview		
	2.7 Standard messages		
	2.7.1 DTM		
	2.7.1.1 Datum reference		
	2.7.2 GAQ		
	2.7.2.1 Poll a standard message (Talker ID GA)		
	2.7.3 GBQ		
	2.7.3.1 Poll a standard message (Talker ID GB)		
	2.7.4 GBS		
	2.7.4.1 GNSS satellite fault detection		
	2.7.5 GGA		
	2.7.5.1 Global positioning system fix data		
	2.7.6 GLL		
	2.7.6.1 Latitude and longitude, with time of position fix and status		
	2.7.7 GLQ		
	2.7.7.1 Poll a standard message (Talker ID GL)		
	2.7.8 GNQ		
	2.7.8.1 Poli a standard message (Taiker ID GN)		
	2.7.9 GNS		
	2.7.9.1 GNSS fix data		
	2.7.10 GPQ2.7.10 GPQ		
	Erriori i di a standard message (rainel ID di /	52	



	2.7.11 GQQ	
	2.7.11.1 Poll a standard message (Talker ID GQ)	. 33
	2.7.12 GRS	
	2.7.12.1 GNSS range residuals	. 33
	2.7.13 GSA	
	2.7.13.1 GNSS DOP and active satellites	
	2.7.14 GST	
	2.7.14.1 GNSS pseudorange error statistics	
	2.7.15 GSV	
	2.7.15.1 GNSS satellites in view	
	2.7.16 RLM	
	2.7.16.1 Return link message (RLM)	
	2.7.17 RMC	
	2.7.17 Recommended minimum data	
	2.7.17 TRecommended minimum data	
	2.7.18.1 True heading and status	
	2.7.19 TXT	
	2.7.19.1 Text transmission	
	2.7.20 VTG	
	2.7.20.1 Course over ground and ground speed	
	2.7.21 ZDA	
	2.7.21.1 Time and date	
2.	3 Secondary output messages	
	2.8.1 GGA	
	2.8.1.1 Global positioning system fix data	
	2.8.2 GLL	
	2.8.2.1 Latitude and longitude, with time of position fix and status	
	2.8.3 GNS	
	2.8.3.1 GNSS fix data	
	2.8.4 GSA	
	2.8.4.1 GNSS DOP and active satellites	
	2.8.5 RMC	
	2.8.5.1 Recommended minimum data	
	2.8.6 VTG	
	2.8.6.1 Course over ground and ground speed	.45
	2.8.7 ZDA	.46
	2.8.7.1 Time and date	.46
2.	PUBX messages	. 46
	2.9.1 CONFIG (PUBX,41)	.46
	2.9.1.1 Set protocols and baud rate	. 47
	2.9.2 POSITION (PUBX,00)	
	2.9.2.1 Poll a PUBX,00 message	.47
	2.9.2.2 Lat/Long position data	
	2.9.3 RATE (PUBX,40)	
	2.9.3.1 Set NMEA message output rate	
	2.9.4 SVSTATUS (PUBX,03)	
	2.9.4.1 Poll a PUBX,03 message	
	2.9.4.2 Satellite status	
	2.9.5 TIME (PUBX,04)	
	2.9.5.1 Poll a PUBX,04 message	
	L.J.J. I Toli a I ODA,04 Message	. J I



	2.9.5.2 Time of day and clock information	51
3	UBX protocol	.52
	3.1 UBX protocol key features	52
	3.2 UBX frame structure	52
	3.3 UBX payload definition rules	53
	3.3.1 UBX structure packing	53
	3.3.2 UBX reserved elements	. 53
	3.3.3 UBX undefined values	53
	3.3.4 UBX conditional values	53
	3.3.5 UBX data types	53
	3.3.6 UBX fields scale and unit	. 54
	3.3.7 UBX repeated fields	54
	3.3.8 UBX payload decoding	55
	3.4 UBX checksum	55
	3.5 UBX message flow	
	3.5.1 UBX acknowledgement	55
	3.5.2 UBX polling mechanism	55
	3.6 GNSS, satellite, and signal numbering	56
	3.7 UBX message example	56
	3.8 UBX messages overview	57
	3.9 UBX-ACK (0x05)	
	3.9.1 UBX-ACK-ACK (0x05 0x01)	. 60
	3.9.1.1 Message acknowledged	
	3.9.2 UBX-ACK-NAK (0x05 0x00)	
	3.9.2.1 Message not acknowledged	
	3.10 UBX-CFG (0x06)	
	3.10.1 UBX-CFG-CFG (0x06 0x09)	
	3.10.1.1 Clear, save and load configurations	
	3.10.2 UBX-CFG-OTP (0x06 0x41)	
	3.10.2.1 Write file 0xA4: receiver configuration items	
	3.10.3 UBX-CFG-RST (0x06 0x04)	
	3.10.3.1 Reset receiver / Clear backup data structures	
	3.10.4 UBX-CFG-SPT (0x06 0x64)	
	3.10.4.1 Configure and start a sensor production test	
	3.10.5 UBX-CFG-VALDEL (0x06 0x8c)	
	3.10.5.1 Delete configuration item values	
	3.10.5.2 Delete configuration item values (with transaction)	
	3.10.6 UBX-CFG-VALGET (0x06 0x8b)	
	3.10.6.1 Get configuration items	
	3.10.6.2 Configuration items	
	3.10.7 UBX-CFG-VALSET (0x06 0x8a)	
	3.10.7.1 Set configuration item values	
	3.10.7.2 Set configuration item values (with transaction)	
	3.11 UBX-ESF (0x10)	
	3.11.1 UBX-ESF-ALG (0x10 0x14)	
	3.11.1.1 IMU alignment information	
	3.11.2 UBX-ESF-INS (0x10 0x15)	
	3.11.2.1 Vehicle dynamics information	
	3.11.3 UBX-ESF-MEAS (UXTU UXU2)	72 72
	a cra reviendal sensor insion measurements	' '



	3.11.4 UBX-ESF-RAW (0x10 0x03)	72
	3.11.4.1 Raw sensor measurements	72
	3.11.5 UBX-ESF-RESETALG (0x10 0x13)	73
	3.11.5.1 Reset the IMU-mount alignment and the Sensor fusion mode to	
	initialization	73
	3.11.6 UBX-ESF-STATUS (0x10 0x10)	
	3.11.6.1 External sensor fusion status	
3.	12 UBX-INF (0x04)	
	3.12.1 UBX-INF-DEBUG (0x04 0x04)	
	3.12.1.1 ASCII output with debug contents	
	3.12.2 UBX-INF-ERROR (0x04 0x00)	
	3.12.2.1 ASCII output with error contents	
	3.12.3 UBX-INF-NOTICE (0x04 0x02)	
	3.12.3.1 ASCII output with informational contents	
	3.12.4 UBX-INF-TEST (0x04 0x03)	
	3.12.4.1 ASCII output with test contents	
	3.12.5 UBX-INF-WARNING (0x04 0x01)	
	3.12.5.1 ASCII output with warning contents	
3.	13 UBX-MGA (0x13)	
	3.13.1 UBX-MGA-ACK (0x13 0x60)	
	3.13.1.1 Multiple GNSS acknowledge message	
	3.13.2 UBX-MGA-BDS (0x13 0x03)	
	3.13.2.1 BeiDou ephemeris assistance for satellites svld 137	
	3.13.2.2 BeiDou almanac assistance	
	3.13.2.3 BeiDou health assistance	
	3.13.2.4 BeiDou UTC assistance	
	3.13.2.5 BeiDou ionosphere assistance	
	3.13.3 UBX-MGA-DBD (0x13 0x80)	
	3.13.3.1 Poll the navigation database	
	3.13.3.2 Navigation database dump entry	
	3.13.4 UBX-MGA-GAL (0x13 0x02)	
	3.13.4.1 Galileo ephemeris assistance	
	3.13.4.2 Galileo almanac assistance	
	3.13.4.3 Galileo GPS time offset assistance	
	3.13.4.4 Galileo UTC assistance	
	3.13.5 UBX-MGA-GLO (0x13 0x06)	
	3.13.5.1 GLONASS ephemeris assistance	
	3.13.5.2 GLONASS almanac assistance	
	3.13.5.3 GLONASS auxiliary time offset assistance	
	3.13.6 UBX-MGA-GPS (0x13 0x00)	
	3.13.6.1 GPS ephemeris assistance	
	3.13.6.2 GPS health assistance	
	3.13.6.3 GPS UTC assistance	
	3.13.6.4 GPS ionosphere assistance	
	3.13.7 UBX-MGA-INI (0x13 0x40)	
	3.13.7.1 Initial position assistance XYZ	
	3.13.7.2 Initial position assistance LLH	
	3.13.7.4 Initial time assistance UTC	
	3.13.7.4 Initial time assistance GNSS	
	3.13.7.5 Initial clock drift assistance	92



	3.13.7.6 Initial frequency assistance	93
	3.13.7.7 Attitude initialization data	93
	3.13.8 UBX-MGA-QZSS (0x13 0x05)	
	3.13.8.1 QZSS ephemeris assistance	
	3.13.8.2 QZSS almanac assistance	
	3.13.8.3 QZSS health assistance	
	3.13.9 UBX-MGA-SF (0x13 0x10)	
	3.13.9.1 Sensor fusion initialization data	
	3.13.9.2 Sensor fusion initialization data	
<b>o</b> .	3. 13.9.2 Serisor rusion initialization data	
J.	3.14.1 UBX-MON-COMMS (0x0a 0x36)	
	3.14.1.1 Communication port information	
	3.14.2 UBX-MON-GNSS (0x0a 0x28)	
	3.14.2.1 Information message major GNSS selection	
	3.14.3 UBX-MON-HW (0x0a 0x09)	
	3.14.3.1 Hardware status	
	3.14.4 UBX-MON-HW2 (0x0a 0x0b)	
	3.14.4.1 Extended hardware status	
	3.14.5 UBX-MON-HW3 (0x0a 0x37)	
	3.14.5.1 I/O pin status	101
	3.14.6 UBX-MON-IO (0x0a 0x02)	102
	3.14.6.1 I/O system status	
	3.14.7 UBX-MON-MSGPP (0x0a 0x06)	102
	3.14.7.1 Message parse and process status	102
	3.14.8 UBX-MON-PATCH (0x0a 0x27)	103
	3.14.8.1 Installed patches	103
	3.14.9 UBX-MON-RF (0x0a 0x38)	103
	3.14.9.1 RF information	104
	3.14.10 UBX-MON-RXBUF (0x0a 0x07)	105
	3.14.10.1 Receiver buffer status	105
	3.14.11 UBX-MON-RXR (0x0a 0x21)	
	3.14.11.1 Receiver status information	
	3.14.12 UBX-MON-SPAN (0x0a 0x31)	
	3.14.12.1 Signal characteristics	
	3.14.13 UBX-MON-SPT (0x0a 0x2f)	
	3.14.13.1 Sensor production test	
	3.14.14 UBX-MON-SYS (0x0a 0x39)	
	3.14.14.1 Current system performance information	
	3.14.15 UBX-MON-TXBUF (0x0a 0x08)	
	3.14.15.1 Transmitter buffer status	
	3.14.16 UBX-MON-VER (0x0a 0x04)	
	·	
	3.14.16.1 Poll receiver and software version	
<u>.</u>	3.14.16.2 Receiver and software version	
ರ.	15 UBX-NAV (0x01)	
	3.15.1 UBX-NAV-ATT (0x01 0x05)	
	3.15.1.1 Attitude solution	
	3.15.2 UBX-NAV-CLOCK (0x01 0x22)	
	3.15.2.1 Clock solution	
	3.15.3 UBX-NAV-COV (0x01 0x36)	
	3 15 3 1 Covariance matrices	112



3.15.4 UBX-NAV-DOP (0x01 0x04)	1	13
3.15.4.1 Dilution of precision	1	13
3.15.5 UBX-NAV-EELL (0x01 0x3d)		
3.15.5.1 Position error ellipse parameters		
3.15.6 UBX-NAV-EOE (0x01 0x61)	1	14
3.15.6.1 End of epoch		
3.15.7 UBX-NAV-HPPOSECEF (0x01 0x13)		
3.15.7.1 High precision position solution in ECEF		
3.15.8 UBX-NAV-HPPOSLLH (0x01 0x14)		
3.15.8.1 High precision geodetic position solution		
3.15.9 UBX-NAV-ORB (0x01 0x34)		
3.15.9.1 GNSS orbit database info		
3.15.10 UBX-NAV-PL (0x01 0x62)		
3.15.10.1 Protection level information		
3.15.11 UBX-NAV-POSECEF (0x01 0x01)		
3.15.11.1 Position solution in ECEF		
3.15.12 UBX-NAV-POSLLH (0x01 0x02)	12	20
3.15.12.1 Geodetic position solution		
3.15.13 UBX-NAV-PVAT (0x01 0x17)		
3.15.13.1 Navigation position velocity attitude time solution		
3.15.14 UBX-NAV-PVT (0x01 0x07)		
3.15.14.1 Navigation position velocity time solution		
3.15.15 UBX-NAV-RELPOSNED (0x01 0x3c)		
3.15.15.1 Relative positioning information in NED frame		
3.15.16 UBX-NAV-SAT (0x01 0x35)		
3.15.16.1 Satellite information		
3.15.17 UBX-NAV-SBAS (0x01 0x32)		
3.15.17.1 SBAS status data		
3.15.18 UBX-NAV-SIG (0x01 0x43)		
3.15.18.1 Signal information		
3.15.19 UBX-NAV-STATUS (0x01 0x03)		
3.15.19.1 Receiver navigation status		
3.15.20 UBX-NAV-TIMEBDS (0x01 0x24)		
3.15.20.1 BeiDou time solution		
3.15.21 UBX-NAV-TIMEGAL (0x01 0x25)		
3.15.21.1 Galileo time solution		
3.15.22 UBX-NAV-TIMEGLO (0x01 0x23)		
3.15.22.1 GLONASS time solution		
3.15.23 UBX-NAV-TIMEGPS (0x01 0x20)		
3.15.23.1 GPS time solution		
3.15.24 UBX-NAV-TIMELS (0x01 0x26)		
3.15.24.1 Leap second event information		
3.15.25 UBX-NAV-TIMENAVIC (0x01 0x63)		
3.15.25.1 NavIC time solution		
3.15.26 UBX-NAV-TIMEQZSS (0x01 0x27)		
3.15.26.1 QZSS time solution		
3.15.27 UBX-NAV-TIMEUTC (0x01 0x21)		
3.15.27.1 UTC time solution		
3.15.28 UBX-NAV-VELECEF (0x01 0x11)		
3.15.28.1 Velocity solution in ECEF	.14	40



	3.15.29 UBX-NAV-VELNED (0x01 0x12)	140
	3.15.29.1 Velocity solution in NED frame	140
3.	16 UBX-NAV2 (0x29)	
	3.16.1 UBX-NAV2-CLOCK (0x29 0x22)	141
	3.16.1.1 Clock solution	
	3.16.2 UBX-NAV2-COV (0x29 0x36)	141
	3.16.2.1 Covariance matrices	141
	3.16.3 UBX-NAV2-DOP (0x29 0x04)	142
	3.16.3.1 Dilution of precision	142
	3.16.4 UBX-NAV2-EELL (0x29 0x3d)	142
	3.16.4.1 Position error ellipse parameters	
	3.16.5 UBX-NAV2-EOE (0x29 0x61)	
	3.16.5.1 End of epoch	
	3.16.6 UBX-NAV2-POSECEF (0x29 0x01)	
	3.16.6.1 Position solution in ECEF	
	3.16.7 UBX-NAV2-POSLLH (0x29 0x02)	
	3.16.7.1 Geodetic position solution	
	3.16.8 UBX-NAV2-PVAT (0x29 0x17)	
	3.16.8.1 Navigation position velocity attitude time solution	
	3.16.9 UBX-NAV2-PVT (0x29 0x07)	
	3.16.9.1 Navigation position velocity time solution	
	3.16.10 UBX-NAV2-SAT (0x29 0x35)	
	3.16.10.1 Satellite information	
	3.16.11 UBX-NAV2-SBAS (0x29 0x32)	
	3.16.11.1 SBAS status data	
	3.16.12 UBX-NAV2-SIG (0x29 0x43)	
	3.16.12.1 Signal information	
	3.16.13 UBX-NAV2-STATUS (0x29 0x03)	
	3.16.13.1 Receiver navigation status	
	3.16.14 UBX-NAV2-TIMEBDS (0x29 0x24)	
	3.16.14.1 BeiDou time solution	
	3.16.15 UBX-NAV2-TIMEGAL (0x29 0x25)	
	3.16.15.1 Galileo time solution	
	3.16.16 UBX-NAV2-TIMEGLO (0x29 0x23)	
	3.16.16.1 GLONASS time solution	
	3.16.17 UBX-NAV2-TIMEGPS (0x29 0x20)	
	3.16.17.1 GPS time solution	
	3.16.18 UBX-NAV2-TIMELS (0x29 0x26)	
	3.16.18.1 Leap second event information	
	3.16.19 UBX-NAV2-TIMENAVIC (0x29 0x63)	
	3.16.19.1 NavIC time solution	
	3.16.20 UBX-NAV2-TIMEUTC (0x29 0x21)	
	3.16.20.1 UTC time solution	
	3.16.21 UBX-NAV2-VELECEF (0x29 0x11)	
	3.16.21.1 Velocity solution in ECEF	
	3.16.22 UBX-NAV2-VELNED (0x29 0x12)	
^	3.16.22.1 Velocity solution in NED frame	
ರ.	17 UBX-RXM (0x02)	
	3.17.1 UBX-RXM-COR (0x02 0x34)	
	3.17.1.1 Differential correction input status	103



	3.17.2 UBX-RXM-MEASX (0x02 0x14)	. 1	64
	3.17.2.1 Satellite measurements for RRLP	. 1	64
	3.17.3 UBX-RXM-PMP (0x02 0x72)	. 1	65
	3.17.3.1 PMP (LBAND) message	. 1	65
	3.17.4 UBX-RXM-PMREQ (0x02 0x41)	. 1	66
	3.17.4.1 Power management request	.1	66
	3.17.4.2 Power management request	.1	66
	3.17.5 UBX-RXM-QZSSL6 (0x02 0x73)	.1	67
	3.17.5.1 QZSS L6 message	.1	67
	3.17.6 UBX-RXM-RAWX (0x02 0x15)	. 1	68
	3.17.6.1 Multi-GNSS raw measurements	. 1	68
	3.17.7 UBX-RXM-RLM (0x02 0x59)	. 1	69
	3.17.7.1 Galileo SAR short-RLM report	. 1	69
	3.17.7.2 Galileo SAR long-RLM report	. 1 <sup>°</sup>	70
	3.17.8 UBX-RXM-RTCM (0x02 0x32)		
	3.17.8.1 RTCM input status	.1	70
	3.17.9 UBX-RXM-SFRBX (0x02 0x13)	. 1	71
	3.17.9.1 Broadcast navigation data subframe	1	71
	3.17.10 UBX-RXM-SPARTN (0x02 0x33)		
	3.17.10.1 SPARTN input status	. 1	72
	3.17.11 UBX-RXM-SPARTNKEY (0x02 0x36)		
	3.17.11.1 Poll installed keys	.1	72
	3.17.11.2 Transfer dynamic SPARTN keys	. 1	72
	3.18 UBX-SEC (0x27)	.1	73
	3.18.1 UBX-SEC-SIG (0x27 0x09)	. 1	73
	3.18.1.1 Signal security information	.1	73
	3.18.2 UBX-SEC-SIGLOG (0x27 0x10)	.1	74
	3.18.2.1 Signal security log	. 1	74
	3.18.3 UBX-SEC-UNIQID (0x27 0x03)	. 1	75
	3.18.3.1 Unique chip ID	. 1	75
	3.19 UBX-TIM (0x0d)		
	3.19.1 UBX-TIM-TM2 (0x0d 0x03)	. 1	76
	3.19.1.1 Time mark data	. 1	76
	3.19.2 UBX-TIM-TP (0x0d 0x01)	.1	77
	3.19.2.1 Time pulse time data	1	77
	3.19.3 UBX-TIM-VRFY (0x0d 0x06)		
	3.19.3.1 Sourced time verification	.1	78
	3.20 UBX-UPD (0x09)		
	3.20.1 UBX-UPD-SOS (0x09 0x14)	. 1	78
	3.20.1.1 Poll backup restore status	.1	79
	3.20.1.2 Create backup in flash		
	3.20.1.3 Clear backup in flash		
	3.20.1.4 Backup creation acknowledge		
	3.20.1.5 System restored from backup	. 1	80
4	RTCM protocol	18	31
•	4.1 RTCM introduction		
	4.2 RTCM 3.x configuration		
	4.3 RTCM messages overview		
	4.4 RTCM 3.4 messages		
	4.4 1 Message type 1001		82



4.4.1.1 L1-only GPS RTK observables	182
4.4.2 Message type 1002	
4.4.2.1 Extended L1-only GPS RTK observables	
4.4.3 Message type 1003	
4.4.3.1 L1/L2 GPS RTK observables	
4.4.4 Message type 1004	
4.4.4.1 Extended L1/L2 GPS RTK observables	
4.4.5 Message type 1005	
4.4.5.1 Stationary RTK reference station ARP	
4.4.6 Message type 1006	
4.4.6.1 Stationary RTK reference station ARP with antenna height	
4.4.7 Message type 1007	
4.4.7.1 Antenna descriptor	
4.4.8 Message type 1009	
4.4.8.1 L1-only GLONASS RTK observables	
4.4.9 Message type 1010	
4.4.9.1 Extended L1-Only GLONASS RTK observables	
4.4.10 Message type 1011	
4.4.10.1 L1&L2 GLONASS RTK observables	
4.4.11 Message type 1012	188
4.4.11.1 Extended L1&L2 GLONASS RTK observables	188
4.4.12 Message type 1033	188
4.4.12.1 Receiver and antenna descriptors	189
4.4.13 Message type 1074	189
4.4.13.1 GPS MSM4	189
4.4.14 Message type 1075	
4.4.14.1 GPS MSM5	190
4.4.15 Message type 1077	190
4.4.15.1 GPS MSM7	
4.4.16 Message type 1084	
4.4.16.1 GLONASS MSM4	
4.4.17 Message type 1085	
4.4.17.1 GLONASS MSM5	
4.4.18 Message type 1087	
4.4.18.1 GLONASS MSM7	
4.4.19 Message type 1094	
4.4.19.1 Galileo MSM4	
4.4.20 Message type 1095	
4.4.20.1 Galileo MSM5	
4.4.21 Message type 1097	
4.4.21.1 Galileo MSM7	
4.4.22 Message type 1124	
4.4.22.1 BeiDou MSM4	
4.4.23 Message type 1125	
4.4.23.1 BeiDou MSM5	
4.4.24 Message type 1127	
4.4.24.1 BeiDou MSM7	
4.4.25 Message type 12304.4.25.1 GLONASS L1 and L2 code-phase biases	
·	
5 SPARTN protocol	198



5.1 SPARTN introduction	198
5.2 SPARTN configuration	198
5.3 SPARTN messages overview	198
5.4 SPARTN messages	199
5.4.1 Message type 0, sub-type 0	199
5.4.1.1 GPS orbit, clock, bias (OCB)	199
5.4.2 Message type 0, sub-type 1	
5.4.2.1 GLONASS orbit, clock, bias (OCB)	
5.4.3 Message type 0, sub-type 2	
5.4.3.1 Galileo orbit, clock, bias (OCB)	
5.4.4 Message type 0, sub-type 3	
5.4.4.1 BeiDou orbit, clock, bias (OCB)	
5.4.5 Message type 0, sub-type 4	
5.4.5.1 QZSS orbit, clock, bias (OCB)	
5.4.6 Message type 1, sub-type 0	
5.4.6.1 GPS high-precision atmosphere correction (HPAC)	
5.4.7 Message type 1, sub-type 1	
5.4.7.1 GLONASS high-precision atmosphere correction (HPAC)	
5.4.8 Message type 1, sub-type 2	
5.4.8.1 Galileo high-precision atmosphere correction (HPAC)	
5.4.9 Message type 1, sub-type 3	
5.4.9.1 BeiDou high-precision atmosphere correction (HPAC)	
5.4.10 Message type 1, sub-type 4	
5.4.10.1 QZSS high-precision atmosphere correction (HPAC)	
5.4.11 Message type 2, sub-type 0	
5.4.11.1 Geographic area definition (GAD)	
5.4.12 Message type 3, sub-type 0	208
5.4.12 Message type 3, sub-type 0	208 208
5.4.12 Message type 3, sub-type 0	208 208
5.4.12 Message type 3, sub-type 0	208 208
5.4.12 Message type 3, sub-type 0	208 208 <b>210</b>
5.4.12 Message type 3, sub-type 0	208 208 210 210
5.4.12 Message type 3, sub-type 0	208 208 210 210 211
5.4.12 Message type 3, sub-type 0	208210210210211211
5.4.12 Message type 3, sub-type 0	208210210210211211212
5.4.12 Message type 3, sub-type 0	208210210211212212
5.4.12 Message type 3, sub-type 0	208210210211212212
5.4.12 Message type 3, sub-type 0	208210210211212212213
5.4.12 Message type 3, sub-type 0	208210210211212212213214
5.4.12 Message type 3, sub-type 0	208210210211212212212214214
5.4.12 Message type 3, sub-type 0	208210210211212212212214214215
5.4.12 Message type 3, sub-type 0	208210210211212212213214214215
5.4.12 Message type 3, sub-type 0	208210210211212212213214214215215
5.4.12 Message type 3, sub-type 0	
5.4.12 Message type 3, sub-type 0	208210210211212212213214215215215217
5.4.12 Message type 3, sub-type 0	208210210211212212213214215215216217
5.4.12 Message type 3, sub-type 0	
5.4.12 Message type 3, sub-type 0	
5.4.12 Message type 3, sub-type 0	208210210211212212213214215215217217217217218
5.4.12 Message type 3, sub-type 0	



6.9.12 CFG-NMEA: NMEA protocol configuration	243
6.9.13 CFG-RATE: Navigation and measurement rate configuration	245
6.9.14 CFG-RTCM: RTCM protocol configuration	246
6.9.15 CFG-SBAS: SBAS configuration	246
6.9.16 CFG-SEC: Security configuration	
6.9.17 CFG-SFCORE: Sensor fusion (SF) core configuration	
6.9.18 CFG-SFIMU: Sensor fusion (SF) inertial measurement unit (IMU) configuration	249
6.9.19 CFG-SFODO: Sensor fusion (SF) odometer configuration	
6.9.20 CFG-SIGNAL: Satellite systems (GNSS) signal configuration	
6.9.21 CFG-SPARTN: SPARTN configuration	
6.9.22 CFG-SPI: Configuration of the SPI interface	
6.9.23 CFG-SPIINPROT: Input protocol configuration of the SPI interface	
6.9.24 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface	
6.9.25 CFG-TP: Time pulse configuration	
6.9.26 CFG-TXREADY: TX ready configuration	
6.9.27 CFG-UART1: Configuration of the UART1 interface	
6.9.28 CFG-UART1INPROT: Input protocol configuration of the UART1 interface	
6.9.29 CFG-UART10UTPROT: Output protocol configuration of the UART1 interface	
6.9.30 CFG-UART2: Configuration of the UART2 interface	
6.9.31 CFG-UART2INPROT: Input protocol configuration of the UART2 interface	
6.9.32 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface	
6.9.33 CFG-USB: Configuration of the USB interface	
6.9.34 CFG-USBINPROT: Input protocol configuration of the USB interface	
6.9.35 CFG-USBOUTPROT: Output protocol configuration of the USB interface	
6.10 Legacy UBX message fields reference	259
Configuration defaults	.265
Related documents	.287
Revision history	288



## 1 General information

#### 1.1 Document overview

This document describes the interface of the u-blox F9 high precision automotive DR GNSS receiver. The interface consists of the following parts:

- NMEA protocol
- UBX protocol
- RTCM protocol
- SPARTN protocol
- · Configuration interface



Some of the features described here may not be available in the receiver, and some may require specific configurations to be enabled. See the applicable data sheet for availability of the features and the integration manual for instructions for enabling them.



Previous versions of u-blox receiver documentation combined general receiver description and interface specification. In the current documentation the receiver description is included in the integration manual.

See also Related documents.

## 1.2 Firmware and protocol versions


u-blox receivers execute firmware from internal ROM or load an external image and execute it from internal code-RAM.

- If the product does not have internal code-RAM, the firmware runs from the ROM.
- If the product has internal code-RAM but an external image is not available, the firmware runs from the ROM. Some products have only limited ROM and enter boot mode with no GNSS function if an external image is not available.
- If the external firmware image is stored in a flash memory, it is loaded into the code-RAM before execution.
- In some products, the firmware image can be stored in the host system and loaded into the code-RAM from there.

The location and the version of the currently running firmware can be found in the boot screen and in the UBX-MON-VER message. If the firmware has been loaded from the flash memory or from the host processor, it is indicated by text "EXT", whereas running the firmware from the internal ROM is indicated by text "ROM".

The u-blox receivers output the boot screen automatically upon receiver start or after hardware reset over the serial interfaces in UBX-INF-NOTICE or NMEA-Standard-TXT messages if configured using CFG-INFMSG. The UBX-MON-VER message can be polled using the UBX polling mechanism. An example of the boot screen and the firmware version information in u-center is shown in Figure 1.



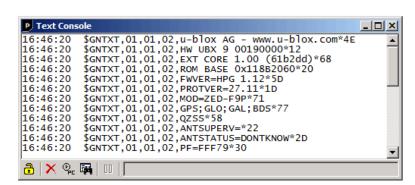

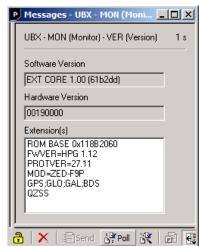



Figure 1: An example of u-center showing the Text console with the boot screen output on the left and the Message view with the UBX-MON-VER version information on the right


The following information is available ( $\checkmark$ ) from the boot screen (**B**) and the UBX-MON-VER message (**M**):

B M Example	Information	
✓ u-blox AG - www.u-blox.com	Start of the boot screen.	
✓ HW UBX 10 00000000	Hardware version of the u-blox receiver.	
✓ 00000000		
✓ ✓ ROM SPG 5.10 (000000)	Firmware version and revision identifier.	
✓ ✓ ROM BASE 0x118B2060	Revision of the underlying boot loader firmware in ROM.	
✓ ✓ FWVER=SPG 5.10	Product firmware version, where:	
	SPG = Standard precision GNSS product	
	HPG = High precision GNSS product	
	ADR = Automotive dead reckoning product	
	• TIM = Time sync product	
	• LAP = Lane accurate positioning product	
	• HPS = High precision sensor fusion product	
	• DBS = Dual band standard precision	
	• MDR = Multi-mode dead reckoning product	
	<ul> <li>PMP = L-Band Inmarsat point-to-multipoint receiver</li> </ul>	
	<ul> <li>QZS = QZSS L6 centimeter level augmentation service (CLAS) message receiver</li> </ul>	
	• DBD = Dual band dead reckoning product	
	ASP = Automotive standard precision	
	• LDR = ROM bootloader, no GNSS functionality	
✓ ✓ PROTVER=34.00	Supported protocol version.	
✓ ✓ MOD=EVK-M101	Module name.	
✓ ✓ GPS;GLO;GAL;BDS	List of supported major GNSS (see GNSS identifiers).	
✓ ✓ SBAS;QZSS	List of supported augmentation systems (see GNSS identifiers).	
✓ ✓ NAVIC	Extended list of supported GNSS (see GNSS identifiers).	



В	M Example	Information
1	ANTSUPERV=AC SD PDoS SR	Configuration of the antenna supervisor, where:
		• AC = Active antenna control enabled
		SD = Short circuit detection enabled
		• OD = Open circuit detection enabled
		<ul> <li>PDoS = Short circuit power down logic enabled</li> </ul>
		<ul> <li>SR = Automatic recovery from short state enabled</li> </ul>
1	PF=FFF79	Product configuration.
1	BD=E01C	GNSS band configuration.

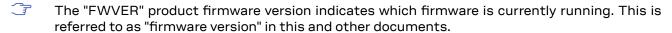

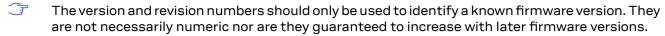

All u-blox receivers output the start text, hardware version, and firmware version and revision. Some of the other entries in the boot screen example may be omitted.

The product firmware version and revision relate to the protocol version:

Firmware version	Version and revision identifier	Protocol version
LAP 1.00B03	EXT CORE 1.03 (e1cb76)	30.00
LAP 1.01	EXT CORE 1.00 (344bdb)	30.00
LAP 1.20	EXT CORE 1.00 (a4f107)	30.20
LAPL1L2L5 1.30	EXT CORE 1.00 (71c984)	30.30
LAPL1L2L5 1.50	EXT CORE 1.00 (438518)	30.50

## 1.3 Receiver configuration

u-blox positioning receivers are fully configurable with UBX protocol messages. The configuration used by the receiver during normal operation is called the "current configuration". The current configuration can be changed during normal operation by sending UBX-CFG-VALSET messages over any I/O port. The receiver changes its current configuration immediately after receiving a configuration message. The receiver always uses the current configuration only.

The current configuration is loaded from permanent configuration hard-coded in the receiver firmware (the defaults) and from non-volatile memory (user configuration) on startup of the receiver. Changes made to the current configuration at run-time will be lost when there is a power cycle, a hardware reset or a (complete) controlled software reset (see Configuration reset behavior).

See Configuration interface for a detailed description of the receiver configuration system, the explanation of the configuration concept and its principles and interfaces.



See the integration manual for a basic receiver configuration most commonly used.

## 1.4 Message naming

Message names are written in full with the parts of the name separated by hyphens ("-"). The full message name consists of the protocol name (e.g. *UBX*), the class name (e.g. *NAV*) and the message name (e.g. *PVT*). For example, the receiver software version information message is referred to as



*UBX-MON-VER*. Similarly, the *NMEA-Standard-GGA* is the NMEA standard message (sentence) with the global positioning fix data.

References to fields of the message add the field name separated by a dot ("."), e.g. *UBX-MON-VER.swVersion*.

Some messages use a fourth level of naming, called the message version. One example is the *UBX-MGA-GPS* message for GPS assistance data, which exists in versions for ephemerides (*UBX-MGA-GPS-EPH*) and almanacs (*UBX-MGA-GPS-ALM*).

Names of configuration items are of the form *CFG-GROUP-ITEM*. For example, *CFG-NAVSPG-DYNMODEL* refers to the navigation dynamic platform model the receiver uses. Constants add a fourth level to the item name, such as *CFG-NAVSPG-DYNMODEL-AUTOMOT* for the automotive platform model. In the context of describing an item's value, only the last part of the constant name can be used (e.g. "set *CFG-NAVSPG-DYNMODEL* to *PORT* for portable applications").

## 1.5 GNSS, satellite, and signal identifiers

#### 1.5.1 Overview

Many UBX protocol messages contain infomation about specific satellites. Any single satellite can be identified by a <code>gnssId</code> field indicating the GNSS the satellite is part of and an <code>svId</code> (SV for space vehicle) field indicating the number of the satellite in that system. Usually, the <code>svId</code> is the native number associated with the satellite in the specific GNSS. For example, the Galileo SV4 is identified as <code>gnssId 2</code>, <code>svId 4</code>, while the GPS SV4 is <code>gnssId 0</code>, <code>svId 4</code>.

Some legacy UBX protocol messages combine both the satellite number and the GNSS identification into a one-byte (type U1) field. See the single svid mapping in Satellite identifiers to identify the corresponding GNSS and satellite.

GLONASS satellites can be tracked before they have been identified. In UBX messages, the unknown satellites are reported with svld 255. In NMEA messages, the unknown satellites are null (empty) fields. Product-related documentation and u-center use R? to label unidentified GLONASS satellites.

Signal identifiers are used when different signals from the same GNSS satellite need to be distinguished (e.g. in the UBX-NAV-SIG message). A separate sigId field identifies the signal. These signal identifiers are only valid when combined with a GNSS identifier (gnssId field).

The NMEA protocol (version 4.10 and later) identifies GNSS satellites with a one-digit system ID and a two-digit satellite number. u-blox receivers support this method in their NMEA output when "strict" SV numbering is selected. In most cases this is the default setting, but it can be checked or changed using the Configuration interface (see also NMEA GNSS, satellite, and signal numbering).

In order to support some GNSS (e.g. BeiDou, Galileo, QZSS), which are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202.

The NMEA standard defines signal identifiers to distinguish different signals sent by a single GNSS satellite (e.g. L2 CL and CM). u-blox positioning receivers use those identifiers for signal identification, as far as the corresponding standard is supported in a particular product.





Note that the following sections are a generic overview for different u-blox positioning receivers. A particular product may not support all of the described GNSS identifiers, satellite numbers, signal identifiers or combinations thereof.

#### 1.5.2 GNSS identifiers

Table 1 lists each GNSS along with the GNSS identifier (UBX protocol), the NMEA system identifiers (NMEA protocol), and abbreviations used in this document:

GNSS	Abbrevia	ations	UBX gnssld		NMEA system ID	
				2.3 - 4.0	4.10	4.11
GPS	GPS	G	0	1	1	1
SBAS	SBAS	S	1	1	1	1
Galileo	GAL	Е	2	n/a	3	3
BeiDou	BDS	В	3	n/a	(4) <sup>1</sup>	4
QZSS	QZSS	Q	5	n/a	(1) <sup>1</sup>	5
GLONASS	GLO	R	6	2	2	2
NavIC	NavIC	N	7	n/a	n/a	6

Table 1: GNSS identifiers

See also NMEA Talker ID.

#### 1.5.3 Satellite identifiers

The satellite numbering scheme for the UBX protocol is provided in Table 2. The satellite numbering scheme for the NMEA protocol is provided in Table 3.

GNSS	SV Range	gnssld:svld	single svid
GPS	G1-G32	0:1-32	1-32
SBAS	S120-S158	1:120-158	120-158
Galileo	E1-E36	2:1-36	211-246
BeiDou	B1-B5	3:1-5	159-163
	B6-B37	3:6-37	33-64
	B38-B63	3:38-63	n/a
QZSS	Q1-Q10	5:1-10	193-202
GLONASS	R1-R31	6:1-31	65-95
	R?	6:255	255
NavIC	N1-N7	7:1-7	247-253
	N8-N14	7:8-14	n/a

Table 2: UBX protocol satellite numbering scheme

		NMEA 2	NMEA 2.3 - 4.0		NMEA 4.10		.11
GNSS	SV Range	strict	extended	strict	extended	strict	extended
GPS	G1-G32	1-32	1-32	1-32	1-32	1-32	1-32
SBAS	S120-S158	33-64	33-64, 152-158	33-64	33-64, 152-158	33-64	33-64, 152-158
Galileo	E1-E36	n/a	301-336	1-36	1-36	1-36	1-36
BeiDou	B1-B5	n/a	401-405	1-5	1-5	1-5	1-5
	B6-B37	n/a	406-437	6-37	6-37	6-37	6-37

<sup>&</sup>lt;sup>1</sup> While not defined by NMEA 4.10, in this mode, u-blox receivers use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.



		NMEA 2.	3 - 4.0	NMEA 4	.10	NMEA 4	.11
GNSS	SV Range	strict	extended	strict	extended	strict	extended
	B38-B63	n/a	438-463	38-63	38-63	38-63	38-63
QZSS	Q1-Q10	n/a	193-202	n/a	193-202	1-10	1-10
GLONASS	R1-R32	65-96	65-96	65-96	65-96	65-96	65-96
	R?	null	null	null	null	null	null
NavIC	N1-N7	n/a	n/a	n/a	n/a	1-7	1-7
	N8-N14	n/a	n/a	n/a	n/a	8-14	8-14

Table 3: NMEA protocol satellite numbering scheme

### 1.5.4 Signal identifiers

A summary of all the signal identification schemes used in the NMEA protocol and the UBX protocol is provided in the following table. (Only a subset of the signals is supported by each product.) In the NMEA protocol, system and signal identifiers are in hexadecimal format. An unknown signal identifier is presented as 0 in the NMEA protocol.

	UBX Pr	otocol	NMEA Pro	tocol 4.10	NMEA Protocol 4.11	
Signal	gnssld	sigId	System ID	Signal ID	System ID	Signal ID
GPS L1C/A <sup>2</sup>	0	0	1	1	1	1
GPS L2 CL	0	3	1	6	1	6
GPS L2 CM	0	4	1	5	1	5
GPS L5 I	0	6	1	7	1	7
GPS L5 Q	0	7	1	8	1	8
SBAS L1C/A <sup>2</sup>	1	0	1	1	1	1
Galileo E1 C <sup>2</sup>	2	0	3	7	3	7
Galileo E1 B <sup>2</sup>	2	1	3	7	3	7
Galileo E5 al	2	3	3	1	3	1
Galileo E5 aQ	2	4	3	1	3	1
Galileo E5 bl	2	5	3	2	3	2
Galileo E5 bQ	2	6	3	2	3	2
Galileo E6 B	2	8	3	5	3	5
Galileo E6 C	2	9	3	5	3	5
Galileo E6 A	2	10	3	4	3	4
BeiDou B1I D1 <sup>2</sup>	3	0	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B1I D2 <sup>2</sup>	3	1	(4) <sup>3</sup>	(1) <sup>4</sup>	4	1
BeiDou B2I D1	3	2	(4) <sup>3</sup>	(3) <sup>4</sup>	4	В
BeiDou B2I D2	3	3	(4) <sup>3</sup>	(3)4	4	В
BeiDou B3I D1	3	4				
BeiDou B3I D2	3	10				
BeiDou B1 Cp (pilot)	3	5	(4) <sup>3</sup>	N/A	4	3

 $<sup>^2 \ \ \</sup>text{UBX messages that do not have an explicit} \ \text{sigId field contain information about the subset of signals marked.}$ 

<sup>&</sup>lt;sup>3</sup> While not defined by NMEA 4.10, in this mode, u-blox receivers use system ID 4 for BeiDou and, if extended satellite numbering is enabled, system ID 1 for QZSS.

<sup>&</sup>lt;sup>4</sup> BeiDou and QZSS signal ID are not defined in the NMEA protocol version 4.10. Values shown in the table are only valid for u-blox products and, for QZSS signal ID, if extended satellite numbering is enabled.



UBX Pr	otocol	NMEA Pro	tocol 4.10	NMEA Pro	tocol 4.11
gnssld	sigld	System ID	Signal ID	System ID	Signal ID
3	6	(4) <sup>3</sup>	N/A	4	3
3	7	(4) <sup>3</sup>	N/A	4	5
3	8	(4) <sup>3</sup>	N/A	4	5
5	0	(1) <sup>3</sup>	(1) <sup>4</sup>	5	1
5	1	(1) <sup>3</sup>	(4) <sup>4</sup>	5	4
5	4	(1) <sup>3</sup>	(5) <sup>4</sup>	5	5
5	5	(1) <sup>3</sup>	(6) <sup>4</sup>	5	6
5	8	(1) <sup>3</sup>	N/A	5	7
5	9	(1) <sup>3</sup>	N/A	5	8
6	0	2	1	2	1
6	2	2	3	2	3
7	0	N/A	N/A	6	1
	gnssld  3  3  3  5  5  5  5  6  6  6	3 6 3 7 3 8 5 0 5 1 5 4 5 5 5 8 5 9 6 0 6 2	gnssld         sigld         System ID           3         6         (4)³           3         7         (4)³           3         8         (4)³           5         0         (1)³           5         1         (1)³           5         4         (1)³           5         5         (1)³           5         8         (1)³           5         9         (1)³           6         0         2           6         2         2	gnssld         sigld         System ID         Signal ID           3         6         (4)³         N/A           3         7         (4)³         N/A           3         8         (4)³         N/A           5         0         (1)³         (1)⁴           5         1         (1)³         (4)⁴           5         4         (1)³         (5)⁴           5         5         (1)³         (6)⁴           5         8         (1)³         N/A           5         9         (1)³         N/A           6         0         2         1           6         2         2         3	gnssld         sigld         System ID         Signal ID         System ID           3         6         (4)³         N/A         4           3         7         (4)³         N/A         4           3         8         (4)³         N/A         4           5         0         (1)³         (1)⁴         5           5         1         (1)³         (4)⁴         5           5         4         (1)³         (5)⁴         5           5         5         (1)³         (6)⁴         5           5         8         (1)³         N/A         5           5         9         (1)³         N/A         5           6         0         2         1         2           6         2         2         3         2

Table 4: Signal identifiers

## 1.6 Message types

The following message types are defined:

Message type	Description			
Input	Messages that are input to the receiver and never output. E.g. UBX-MGA-GPS-EPH.			
Output	Messages that are output by the receiver in no particular interval and never input. E.g. UBX-ACK-ACK.			
Input/output	Messages that can be output by or input to the receiver. E.g. UBX-MGA-DBD-DATA0.			
Periodic	Messages that are output in regular intervals but cannot be polled. E.g. UBX-NAV-EOE.			
Periodic/polled	Messages that are output in regular intervals and can be polled. E.g. UBX-NAV-PVT.			
Command	Messages that are a command to the receiver. Similar to type <i>Input</i> these are input-only. E.g. UBX-CFG-RST.			
Get	Output-only configuration or command messages. E.g. UBX-CFG-DAT.			
Set	Input-only configuration or command messages. E.g. UBX-CFG-VALDEL.			
Get/set	Input/output configuration or command messages. E.g. UBX-CFG-NAVX5.			
Polled	Non-periodic messages that can only be polled. E.g. UBX-MON-VER.			
Poll request	Poll request. E.g. UBX-MGA-DBD-POLL.			




## 2 NMEA protocol

The following sections give an overview of the NMEA messages used by u-blox positioning receivers.

By default, the NMEA messages sent by u-blox positioning receivers are based on the NMEA 0183 version 4.11 standard. For further information on the NMEA standard, refer to the *NMEA 0183 Standard for Interfacing Marine Electronic Devices*, Version 4.11, November 2018, which is available on <a href="http://www.nmea.org/">http://www.nmea.org/</a>.

#### 2.1 NMEA frame structure

The following figure shows the structure of a NMEA protocol message (called "sentences" in the standard).

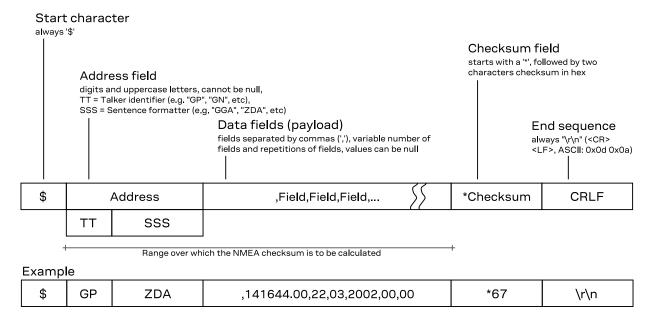

## 2.2 NMEA protocol configuration

The NMEA protocol on u-blox receivers can be configured for customer applications by using the Configuration interface (CFG-NMEA-\* items).

Several NMEA standard versions are supported. Version 4.11 (not in all products), 4.10, 4.00, 2.3, or 2.1 can be configured. See Configuration defaults for the default version. See CFG-NMEA-PROTVER to configure the version. See NMEA multi-GNSS operation and NMEA data fields for details on how this affects the output.

The following filtering flags can be used to configure the output of some NMEA message fields:

Filter	Configuration Item	Description
Position filtering	CFG-NMEA-OUT_INVFIX	Enable to permit positions from failed or invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Valid position filtering	CFG-NMEA-OUT_MSKFIX	Enable to permit positions from invalid fixes to be reported (with the "V" status flag to indicate that the data is not valid).
Time filtering	CFG-NMEA-OUT_INVTIME	Enable to permit the receiver's best knowledge of time to be output, even though it might be wrong.



Filter	Configuration Item	Description
Date filtering	CFG-NMEA-OUT_INVDATE	Enable to permit the receiver's best knowledge of date to be output, even though it might be wrong.
GPS-only filtering	CFG-NMEA-OUT_ONLYGPS	Enable to restrict output to only report GPS satellites.
Track filtering	CFG-NMEA-OUT_FROZENCOG	Enable to permit course over ground (COG) to be reported even when it would otherwise be frozen.

#### The following filtering flags can be used to configure the output of some NMEA message flags:

Mode	Configuration Item	Description
Compatibility mode	CFG-NMEA-COMPAT	Some older NMEA applications expect the NMEA output to be formatted in a specific way, for example, they will only work if the latitude and longitude have exactly four digits behind the decimal point. u-blox receivers offer a compatibility mode to support these legacy applications.
Consideration mode	CFG-NMEA-CONSIDER	u-blox receivers use a sophisticated signal quality detection scheme, in order to produce the best possible position output. This algorithm considers all SV measurements, and may eventually decide to only use a subset thereof, if it improves the overall position accuracy. If consideration mode is enabled, all satellites, which were considered for navigation, are communicated as being used for the position determination. If consideration mode is disabled, only those satellites which after the consideration step remained in the position output are marked as being used.
Limit length mode	CFG-NMEA-LIMIT82	Enabling this mode will limit the NMEA sentence length to a maximum of 82 characters.
High precision mode	CFG-NMEA-HIGHPREC	Enabling this mode increases precision of the position output.  Latitude and longitude then have seven digits after the decimal point, and altitude has three digits after the decimal point. Note:  The high precision mode cannot be set in conjunction with either compatibility mode or Limit82 mode.

#### The following extended configuration options are available:

Option	Configuration Item(s)	Description
GNSS to filter	CFG-NMEA-FILT_GPS etc.	Filters satellites based on the GNSS they belong to.
Satellite numbering	CFG-NMEA-SVNUMBERING	This field configures the display of satellites that do not have an NMEA-defined value. Note: this does not apply to satellites with an unknown ID. See also Satellite identifiers.
Main Talker ID	CFG-NMEA-MAINTALKERID	By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see configuration items CFG-SIGNAL-*). This field enables the main Talker ID to be overridden. See also NMEA Talker ID.
GSV Talker ID	CFG-NMEA-GSVTALKERID	By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA). This field enables the GSV Talker ID to be overridden.
BDS Talker ID	CFG-NMEA-BDSTALKERID	By default the Talker ID for BeiDou is "GB". This field enables the BeiDou Talker ID to be overridden.

## 2.3 NMEA-proprietary messages

The NMEA standard allows for proprietary, manufacturer-specific messages to be added. These shall be marked with a manufacturer mnemonic. The mnemonic assigned to u-blox is UBX and is used for all non-standard messages. These proprietary NMEA messages therefore have the address field set to PUBX. The first data field in a PUBX message identifies the message number with two digits.



## 2.4 NMEA multi-GNSS operation

Many applications that process NMEA messages assume that only a single GNSS is active. However, when multiple GNSS are configured, the NMEA specification requires the output to change in the following ways:

Main Talker ID The main NMEA Talker ID is "GN" (e.g. instead of "GP" for a GPS-only receiver).

**GSV Talker and Signal IDs** The GSV message reports the signal strength of the visible satellites. In multi-GNSS operation, other messages use the main Talker ID "GN" but the Talker ID in the GSV message is specific to the GNSS it is reporting information for.

The GSV messages are grouped by the Talker and Signal IDs. Separate sets of GSV messages are sent for each GNSS and signal. The Signal ID of a satellite may be unknown. Such satellites are presented in their own set with Signal ID 0. Grouping the GSV messages by the Signal ID is supported in protocol versions 27.12 and later.

**Multiple GSA** and **GRS** messages Multiple GSA and GRS messages are output for each fix, one for each GNSS. This may confuse applications that assume they are output only once per position fix (as is the case for a single GNSS receiver).

**GGA Talker IDs** The NMEA specification indicates that the GGA message is GPS-specific. However, u-blox receivers support the output of a GGA message for each of the Talker IDs.

BeiDou and Galileo Only NMEA version 4.10 and later have support for these systems.

**QZSS** Only NMEA version 4.11 and later have support for this system.

**Extended satellite numbering** In order to support some GNSS (e.g. BeiDou, Galileo, QZSS) that are not supported by some or all NMEA protocol versions, an "extended" SV numbering scheme can be enabled. This uses the NMEA-defined numbers where possible, but adds other number ranges to support other GNSS. Note however that these non-standard extensions require 3-digit numbers, which may not be supported by some NMEA parsing software. For example, QZSS satellites use numbers in the range 193 to 202. See NMEA protocol configuration and Satellite identifiers.

#### 2.5 NMEA data fields

Various data fields in NMEA messages depend on NMEA protocol configuration or require a definition for their interpretation.

#### 2.5.1 NMEA Talker ID

One of the ways the NMEA standard differs depending on the GNSS is by using a two-letter message identifier, the "Talker ID". The specific Talker ID used by a u-blox receiver will depend on the product and its configuration. The table below shows the Talker ID that will be used for various GNSS configurations by default.

GP GL	NMEA 2.3+ NMEA 2.3+
GL	NMFA 2.3+
GA	NMEA 4.10+
GB	NMEA 4.10+ (official NMEA only since 4.11)
GI	NMEA 4.11+
GQ	NMEA 4.11+ (GP for NMEA 2.3 - 4.10)
	GB GI



GNSS	Talker ID	Comments
Any combination of GNSS	GN	

#### 2.5.2 NMEA extra fields

The following extra fields are available in NMEA 4.10 and later.

Message	Extra fields
NMEA-Standard-GBS	systemId <b>and</b> signalId
NMEA-Standard-GNS	navStatus
NMEA-Standard-GRS	systemId <b>and</b> signalId
NMEA-Standard-GSA	systemId
NMEA-Standard-GSV	signalId
NMEA-Standard-RMC	navStatus

### 2.5.3 NMEA latitude and longitude format

According to the NMEA standard, latitude and longitude are output in the format degrees, minutes and (decimal) fractions of minutes. To convert to degrees and fractions of degrees, or degrees, minutes, seconds and fractions of seconds, the minutes and fractional minutes parts need to be converted. For example:

Format	Latitude	Longitude
Receiver output	\$GNRMC,014230.00,A,4722.80340,N,0	<b>0831.68218, E,</b> 0.000, , 120477, , , A, V*14
(d)ddmm.mmmmm	4722.80340 North	00831.68218 East
Degrees and minutes	47 degrees, 22.80340 minutes	8 degrees, 31.68218 minutes
Degrees	47.38005667 degrees	8.52803633 degrees
Degrees, minutes and seconds	47 degrees, 22 minutes, 48.2040 seconds	8 degrees, 31 minutes, 40.9308 seconds

#### 2.5.4 NMEA GNSS, satellite, and signal numbering

See GNSS, satellite, and signal identifiers for details on how GNSS, satellites and signals are numbered in the NMEA protocol.

NMEA defines satellite numbering systems for some, but not all GNSS. The exact behavior depends on the configured NMEA protocol version and ("extended" or "strict") mode. See NMEA protocol configuration for details.

#### 2.5.5 NMEA position fix flags

This section shows how u-blox positioning receivers implement the NMEA protocol and the conditions determining how flags are set.

The following flags are used in NMEA 4.10 and later.

NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>
No position fix (at power-up, after losing satellite lock)	V	0	N	N

<sup>&</sup>lt;sup>5</sup> Possible status values: V = data invalid, A = data valid

<sup>6</sup> Possible values for *quality*: 0 = No fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

Possible values for posMode: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix, F = RTK float, R = RTK fixed. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.



NMEA Message	GLL, RMC	GGA	GLL, VTG	RMC, GNS	
Field	status <sup>5</sup>	quality <sup>6</sup>	posMode <sup>7</sup>	posMode <sup>7</sup>	
GNSS fix, but user limits exceeded	V	0	N	N	
Dead reckoning fix, but user limits exceeded	V	6	Е	E	
Dead reckoning fix	Α	6	Е	E	
RTK float	Α	5	D	F	
RTK fixed	А	4	D	R	
2D GNSS fix	Α	1/2	A/D	A/D	
3D GNSS fix	Α	1/2	A/D	A/D	
Combined GNSS/dead reckoning fix	А	1/2	A/D	A/D	

In high precision GNSS (HPG) products it is recommended to select NMEA version 4.10 or above. Earlier versions do not support the float RTK (F) and real time kinematic (R) mode indicator flags in all messages.

The following flags are used in NMEA 2.3 - 4.0.

NMEA Message	GLL, RMC	GGA	GSA	GLL, VTG, RMC, GNS
Field	status <sup>8</sup>	quality <sup>9</sup>	navMode <sup>10</sup>	posMode <sup>11</sup>
No position fix (at power-up, after losing satellite lock)	V	0	1	N
GNSS fix, but user limits exceeded	V	0	1	N
Dead reckoning fix, but user limits exceeded	V	6	2	E
Dead reckoning fix	Α	6	2	E
2D GNSS fix	Α	1/2	2	A/D
3D GNSS fix	А	1/2	3	A/D
Combined GNSS/dead reckoning fix	Α	1/2	3	A/D

The flags in NMEA 2.1 and earlier are the same as NMEA 2.3 but with the following differences:

- The *posMode* field is not output for GLL, RMC and VTG messages (each message has one field less).
- The GGA quality field is set to 1 (instead of 6) for both types of dead reckoning fix.

#### 2.5.6 NMEA output of invalid or unknown data

By default the receiver will not output invalid data. In such cases, it will output empty fields. See NMEA protocol configuration for options to adjust this behavior.

A valid position fix is reported as follows:

\$GPGLL,4717.11634,N,00833.91297,E,124923.00,A,A\*6E

An invalid position fix (but valid time) is reported as follows:

\$GPGLL,,,,,124924.00,V,N\*42

<sup>8</sup> Possible values for status: V = data invalid, A = data valid

<sup>9</sup> Possible values for quality: 0 = no fix, 1 = autonomous GNSS fix, 2 = differential GNSS fix, 4 = RTK fixed, 5 = RTK float, 6 = estimated/dead reckoning fix

Possible values for navMode: 1 = No fix, 2 = 2D fix, 3 = 3D fix

<sup>11</sup> Possible values for *posMode*: N = No fix, E = estimated/dead reckoning fix, A = autonomous GNSS fix, D = differential GNSS fix. In NMEA GNS, u-blox uses a non-standard implementation where same single status is reported for all enabled and not filtered out constellations.



If the time is unknown (e.g. during a cold start):

\$GPGLL,,,,,,V,N\*64



Unlike the NMEA standard behavior to invalid data, dead reckoning products always report a position. It is marked as invalid (V) when the user limits are exceeded or valid (A) if the user limits are met.

## 2.6 NMEA messages overview

Message	Class/ID	Description (Type)			
NMEA-Standard – Standar	d NMEA mess	ages			
NMEA-Standard-DTM	0xf0 0x0a	Datum reference (Output)			
NMEA-Standard-GAQ	0xf0 0x45	Poll a standard message (Talker ID GA) (Poll request)			
NMEA-Standard-GBQ	0xf0 0x44	Poll a standard message (Talker ID GB) (Poll request)			
NMEA-Standard-GBS	0xf0 0x09	GNSS satellite fault detection (Output)			
NMEA-Standard-GGA	0xf0 0x00	Global positioning system fix data (Output)			
NMEA-Standard-GLL	0xf0 0x01	Latitude and longitude, with time of position fix and status (Output)			
NMEA-Standard-GLQ	0xf0 0x43	Poll a standard message (Talker ID GL) (Poll request)			
NMEA-Standard-GNQ	0xf0 0x42	Poll a standard message (Talker ID GN) (Poll request)			
NMEA-Standard-GNS	0xf0 0x0d	GNSS fix data (Output)			
NMEA-Standard-GPQ	0xf0 0x40	Poll a standard message (Talker ID GP) (Poll request)			
NMEA-Standard-GQQ	0xf0 0x47	Poll a standard message (Talker ID GQ) (Poll request)			
NMEA-Standard-GRS	0xf0 0x06	GNSS range residuals (Output)			
NMEA-Standard-GSA	0xf0 0x02	GNSS DOP and active satellites (Output)			
NMEA-Standard-GST	0xf0 0x07	GNSS pseudorange error statistics (Output)			
NMEA-Standard-GSV	0xf0 0x03	GNSS satellites in view (Output)			
NMEA-Standard-RLM	0xf0 0x0b	Return link message (RLM) (Output)			
NMEA-Standard-RMC	0xf0 0x04	Recommended minimum data (Output)			
NMEA-Standard-THS	0xf0 0x0e	True heading and status (Output)			
NMEA-Standard-TXT	0xf0 0x41	Text transmission (Output)			
NMEA-Standard-VTG	0xf0 0x05	Course over ground and ground speed (Output)			
NMEA-Standard-ZDA	0xf0 0x08	Time and date (Output)			
NMEA-NAV2 – Secondary o	output NMEA	messages			
NMEA-NAV2-GGA	0xf7 0x00	Global positioning system fix data (Output)			
NMEA-NAV2-GLL	0xf7 0x01	Latitude and longitude, with time of position fix and status. (Output)			
NMEA-NAV2-GNS	0xf7 0x0d	GNSS fix data (Output)			
NMEA-NAV2-GSA	0xf7 0x02	GNSS DOP and active satellites (Output)			
NMEA-NAV2-RMC	0xf7 0x04	Recommended minimum data (Output)			
NMEA-NAV2-VTG	0xf7 0x05	Course over ground and ground speed (Output)			
NMEA-NAV2-ZDA	0xf7 0x08	Time and date (Output)			
NMEA-PUBX – u-blox propi	rietary NMEA i	messages			
NMEA-PUBX-CONFIG	0xf1 0x41	Set protocols and baud rate (Set)			
NMEA-PUBX-POSITION	0xf1 0x00	<ul><li>Poll a PUBX,00 message (Poll request)</li><li>Lat/Long position data (Output)</li></ul>			
NMEA-PUBX-RATE	0xf1 0x40	Set NMEA message output rate (Set)			
	0xf1 0x03	<ul> <li>Poll a PUBX,03 message (Poll request)</li> <li>Satellite status (Output)</li> </ul>			



Message	Class/ID	Description (Type)	
NMEA-PUBX-TIME	0xf1 0x04	Poll a PUBX,04 message (Poll request)	
		Time of day and clock information (Output)	

## 2.7 Standard messages

Standard NMEA messages as defined by the NMEA 0183 standard. See NMEA protocol for details.

#### 2.7.1 DTM

#### 2.7.1.1 Datum reference

Messa	ge	NMEA-Sta	andard-DTM							
		Datum refe	erence							
Туре		Output								
Comme	ent	This mess	age gives the	difference	between the co	urrent datum and the reference datum.				
		The curren	rent datum is set to WGS84 by default.							
The reference datum cannot be changed and is always set to WG						ways set to WGS84.				
Informa	ation	Class/ID: 0:	xf0 0x0a	Numbe	er of fields: 11					
Structu	ire	\$xxDTM,da	atum,subDatı	ım,lat,NS	,lon,EW,alt,	refDatum*cs\r\n				
Exampl			34,,0.0,N,0. 99,,0.08,N,0		W84*6F\r\n 17.7,W84*1C\r	r\n				
Payload	d:									
Field	Name		Format	Unit	Example	Description				
0	XXDTM	1	string	-	\$GPDTM	DTM Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	datum	n	string	-	W84	Local datum code: W84 = WGS84, P90 = PZ90, 999 = user-defined				
2	subDa	atum	string	-	-	A null field (or a string describing the currently selected datum for protocol versions less than 14.00)				
3	lat		numeric	min	0.08	Offset in Latitude				
4	NS		character	-	S	North/South indicator				
5	lon		numeric	min	0.07	Offset in Longitude				
6	EW		character	-	E	East/West indicator				
7	alt		numeric	m	-2.8	Offset in altitude				
8	refDa	refDatum string -		W84	Reference datum code: W84 (WGS 84, fixed field)					
9	cs		hexadecima	al -	*67	Checksum				
10	CRLF		character	-	-	Carriage return and line feed				

#### 2.7.2 GAQ

### 2.7.2.1 Poll a standard message (Talker ID GA)

Message	e NMEA-Standard-GAQ					
	Poll a standard message	(Talker ID GA)				
Туре	Poll request					
Comment	Polls a standard NMEA message if the current Talker ID is GA.					
Information	Class/ID: 0xf0 0x45	Number of fields: 4				
Structure	<pre>\$xxGAQ,msgId*cs\r\n</pre>					



<pre>Example \$EIGAQ,RMC*2B\r\n</pre>								
Payload:								
Field	Name	Format	Unit	Example	Description			
0	xxGAQ	string	-	\$EIGAQ	GAQ Message ID (xx = Talker ID of the device requesting the poll)			
1	msgId	string	-	RMC	Message ID of the message to be polled			
2	cs	hexadecin	nal -	*2B	Checksum			
3	CRLF	character	-	-	Carriage return and line feed			

### 2.7.3 GBQ

### 2.7.3.1 Poll a standard message (Talker ID GB)

Message		NMEA-Standard-GBQ									
		Poll a sta	andard messag	e (Talker	ID GB)						
Туре		Poll requ	est								
Comm	ent	Polls a st	Polls a standard NMEA message if the current Talker ID is GB								
Inform	ation	Class/ID: 0xf0 0x44		Number of fields: 4							
Structi	ure	\$xxGBQ,	msgId*cs\r\n								
Examp	ole	\$EIGBQ,	RMC*28\r\n								
Payloa	nd:										
Field	Nam	e	Format	Unit	Example	Description					
0	XXGE	3Q	string	-	\$EIGBQ	GBQ Message ID (xx = Talker ID of the device requesting the poll)					
1	msgl	msgId st		-	RMC	Message ID of the message to be polled					
2	cs		hexadecim	al -	*28	Checksum					
3	CRLE		character	-	-	Carriage return and line feed					

### 2.7.4 GBS

#### 2.7.4.1 GNSS satellite fault detection

Message	NMEA-Standard-GBS								
	GNSS satellite fault detection								
Туре	Output								
Comment	This message outputs the results of the Receiver Autonomous Integrity Monitoring Algorithm (RAIM).								
	• The fields <b>errLat</b> , <b>errLon</b> and <b>errAlt</b> output the standard deviation of the position calculation, using all satellites that pass the RAIM test successfully.								
	<ul> <li>The fields errLat, errLon and errAlt are only output if the RAIM process passed successfully (i.e. no or successful edits happened). These fields are never output if 4 or fewer satellites are used for the navigation calculation (because, in such cases, integrity cannot be determined by the receiver autonomously).</li> </ul>								
	• The fields <b>prob</b> , <b>bias</b> and <b>stdev</b> are only output if at least one satellite failed in the RAIM test.								
	If more than one satellites fail the RAIM test, only the information for the worst satellite is output in this message.								
Information	Class/ID: 0xf0 0x09 Number of fields: 13								
Structure	<pre>\$xxGBS,time,errLat,errLon,errAlt,svid,prob,bias,stddev,systemId,signalId*cs\r\n</pre>								
Examples	\$GPGBS,235503.00,1.6,1.4,3.2,,,,,,*40\r\n \$GPGBS,235458.00,1.4,1.3,3.1,03,,-21.4,3.8,1,0*5B\r\n								
Payload:									

C1-Public



Field	Name	Format	Unit	Example	Description
0	xxGBS	string	-	\$GPGBS	GBS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	235503.00	UTC time to which this RAIM sentence belongs. See section UTC representation in the integration manual for details.
2	errLat	numeric	m	1.6	Expected error in latitude
3	errLon	numeric	m	1.4	Expected error in longitude
4	errAlt	numeric	m	3.2	Expected error in altitude
5	svid	numeric	-	03	Satellite ID of most likely failed satellite
6	prob	numeric	-	-	Probability of missed detection: null (not supported, fixed field)
7	bias	numeric	m	-21.4	Estimated bias of most likely failed satellite (a priori residual)
8	stddev	numeric	m	3.8	Standard deviation of estimated bias
9	systemId	hexadecima	I -	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
10	signalId	hexadecima	l -	-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
11	cs	hexadecima	I -	*5B	Checksum
12	CRLF	character	-	-	Carriage return and line feed

### 2.7.5 GGA

### 2.7.5.1 Global positioning system fix data

Messa	age	NMEA-Standard-GGA									
		Global positioning system fix data									
Туре		Output									
Comm	ent	Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).									
		The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the NMEA-GNS message is used instead.									
Inform	ation	Class/ID: C	)xf0 0x00	Numbe	er of fields: 17						
Structure			<pre>\$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge,diffSta  tion*cs\r\n</pre>								
Examp	ole	\$GPGGA,0	\$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n								
Payloa	d:										
Field	Name	e	Format	Unit	Example	Description					
0	xxGG	iΑ	string	-	\$GPGGA	GGA Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
1	time	:	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.					
2	lat		ddmm. mmmmm	-	4717.11399	Latitude (degrees and minutes), see format description					
3	NS		character	-	N	North/South indicator					
4	lon		dddmm.	-	00833.91590	Longitude (degrees and minutes), see format					



er -	E	East/West indicator
-	1	Quality indicator for position fix, see position fix flags description
; -	08	Number of satellites used (range: 0-12)
; -	1.01	Horizontal Dilution of Precision
m	499.6	Altitude above mean sea level
er -	М	Altitude units: M (meters, fixed field)
: m	48.0	Geoid separation: difference between ellipsoid and mean sea level
er -	М	Geoid separation units: M (meters, fixed field)
; S	-	Age of differential corrections (null when DGPS is not used)
; -	-	ID of station providing differential corrections (null when DGPS is not used)
imal -	*5B	Checksum
er -	-	Carriage return and line feed
		- 1 - 08 - 1.01 - M 499.6 - M - M 48.0 - M - S

#### 2.7.6 GLL

### 2.7.6.1 Latitude and longitude, with time of position fix and status

Message		NMEA-Standard-GLL								
		Latitude a	ınd longitude, v	with time	of position fix an	d status				
Type Output										
Comm	ent	The out	tput of this me	ssage is c	lependent on the	currently selected datum (default: WGS84)				
Inform	ation	Class/ID: 0	xf0 0x01	Numbe	er of fields: 10					
Structi	ure	\$xxGLL,1	at,NS,lon,EW	,time,st	atus,posMode*	cs\r\n				
Examp	ole	\$GPGLL, 4	717.11364,N,	00833.91	565,E,092321.	00,A,A*60\r\n				
Payloa	d:									
Field	Name	9	Format	Unit	Example	Description				
0	xxGLL		string	-	\$GPGLL	GLL Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	lat		ddmm. mmmmm	-	4717.11364	Latitude (degrees and minutes), see format description				
2	NS		character	-	N	North/South indicator				
3	lon		dddmm. mmmmm	-	00833.91565	Longitude (degrees and minutes), see format description				
4	EW		character	-	E	East/West indicator				
5	time		hhmmss.ss	-	092321.00	UTC time. See section UTC representation in the integration manual for details.				
6	status		character	-	Α	Data validity status, see position fix flags description				
7	posMode		character	-	А	Positioning mode, see position fix flags description (only available in NMEA 2.3 and later)				
8	cs		hexadecima	I -	*60	Checksum				
9	CRLF		character	-	-	Carriage return and line feed				

### 2.7.7 GLQ



#### 2.7.7.1 Poll a standard message (Talker ID GL)

Messa	ige	NMEA-S	Standard-GLQ				
		Poll a st	andard messag	e (Talker	ID GL)		
Туре	Type Poll request						
Comm	ent	Polls a s	tandard NMEA	message	if the current Ta	lker ID is GL	
Inform	ation	Class/ID: 0xf0 0x43		Number of fields: 4			
Structu	ure	\$xxGLQ,	msgId*cs\r\n				
Examp	ole	\$EIGLQ,	RMC*3A\r\n				
Payloa	d:						
Field	Name	e	Format	Unit	Example	Description	
0	xxGI	JQ	string	-	\$EIGLQ	GLQ Message ID (xx = Talker ID of the device requesting the poll)	
1	msgI	d	string	-	RMC	Message ID of the message to be polled	
2	cs		hexadecim	al -	*3A	Checksum	
3	CRLF	1	character	-	-	Carriage return and line feed	

### 2.7.8 GNQ

### 2.7.8.1 Poll a standard message (Talker ID GN)

Message		NMEA-Standard-GNQ								
		Poll a stan	idard messag	e (Talker II	D GN)					
Туре		Poll reques								
Comm	ent	Polls a sta	ndard NMEA	message i	f the current Ta	lker ID is GN				
Inform	ation	Class/ID: 0xf0 0x42		Number of fields: 4						
Structi	ıre	\$xxGNQ,m	sgId*cs\r\n							
Examp	le	\$EIGNQ,RMC*3A\r\n								
Payloa	d:									
Field	Nam	e	Format	Unit	Example	Description				
0	xxGN	IQ	string	-	\$EIGNQ	GNQ Message ID (xx = Talker ID of the device requesting the poll)				
1	msgl	:d	string	-	RMC	Message ID of the message to be polled				
2	cs		hexadecim	al -	*3A	Checksum				
3	CRLF	,	character	-	-	Carriage return and line feed				

#### 2.7.9 GNS

#### 2.7.9.1 GNSS fix data

Message	NMEA-Standard-GNS GNSS fix data							
Туре	Output							
Comment	Time and position, together with GNSS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).							
	The output of this m	nessage is dependent on the currently selected datum (default: WGS84)						
Information	Class/ID: 0xf0 0x0d	Number of fields: 16						
Structure	<pre>\$xxGNS,time,lat,NS,lon,EW,posMode,numSV,HDOP,alt,sep,diffAge,diffStation s\r\n</pre>							



\$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V\*00\r\n \$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V\*0E\r\n \$GPGNS,122310.2,,,,,,07,,,,5.2,23,V\*02\r\n Examples

Payloa	d:				
Field	Name	Format	Unit	Example	Description
0	xxGNS	string	-	\$GPGNS	GNS Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.
2	lat	ddmm. mmmmm	-	5114.50897	Latitude (degrees and minutes), see format description
3	NS	character	-	N	North/South indicator
4	lon	dddmm. mmmmm	-	00012.28663	Longitude (degrees and minutes), see format description
5	EW	character	-	E	East/West indicator
6	posMode	character	-	AAAA	Positioning mode, see position fix flags description. The first four characters indicate the status for GPS, GLONASS, Galileo and BeiDou. Note that the NMEA GNS message only reports a single status. It indicates the status for all enabled constellations that have not been filtered out. To obtain a more detailed status report, refer to the status provided in the UBX messages.
7	numSV	numeric	-	10	Number of satellites used (range: 0-99)
8	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
9	alt	numeric	m	111.1	Altitude above mean sea level
10	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
11	diffAge	numeric	S	-	Age of differential corrections (null when DGPS is not used)
12	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
13	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field only available in NMEA 4.10 and later)
14	cs	hexadecima	1 -	*71	Checksum
15	CRLF	character	_	-	Carriage return and line feed

### 2.7.10 GPQ

#### 2.7.10.1 Poll a standard message (Talker ID GP)

Messag	ge	NMEA-Standard-GPQ Poll a standard message (Talker ID GP)								
Туре		Poll requ	Poll request							
Comment		Polls a standard NMEA message if the current Talker ID is GP								
Information		Class/ID	: 0xf0 0x40	Numi	ber of fields: 4					
Structu	re	\$xxGPQ,	msgId*cs\r\	n						
Exampl	'e	\$EIGPQ,	RMC*3A\r\n							
Payload	1:									
Field	Name	9	Format	Unit	Example	Description				



0	xxGPQ	string -	\$EIGPQ	GPQ Message ID (xx = Talker ID of the device requesting the poll)
1	msgId	string -	RMC	Message ID of the message to be polled
2	cs	hexadecimal -	*3A	Checksum
3	CRLF	character -	-	Carriage return and line feed

### 2.7.11 GQQ

### 2.7.11.1 Poll a standard message (Talker ID GQ)

Message		NMEA-Standard-GQQ									
		Poll a st	andard messag	e (Talker	ID GQ)						
Туре		Poll requ	ıest								
Comm	ent	Polls a s	Polls a standard NMEA message if the current Talker ID is GQ								
Inform	ation	Class/ID	: 0xf0 0x47	Number of fields: 4							
Structi	ure	\$xxGQQ,	msgId*cs\r\n								
Examp	ole	\$EIGQQ,	RMC*3A\r\n								
Payloa	ıd:										
Field	Nam	e	Format	Unit	Example	Description					
0	ххGÇ	QQ	string	-	\$EIGQQ	GQQ Message ID (xx = Talker ID of the device requesting the poll)					
1	msgId		string	-	RMC	Message ID of the message to be polled					
2	cs		hexadecima	al -	*3A	Checksum					
3	CRLF		character	-	-	Carriage return and line feed					

### 2.7.12 GRS

### 2.7.12.1 GNSS range residuals

Message		NMEA-Standard-GRS								
		GNSS range	residuals							
Туре		Output								
Comm	ent	If less than 12 SVs are available, the remaining fields are output empty. If more than 12 SVs are used, only the residuals of the first 12 SVs are output, in order to remain consistent with the NMEA standard.								
		In a multi-GI	In a multi-GNSS system this message will be output multiple times, once for each GNSS.							
		This message relates to associated GGA and GSA messages.								
Inform	ation	Class/ID: 0xf	0 0x06	Numbe	Number of fields: 19					
Structu	ure	<pre>\$xxGRS,time,mode{,residual},systemId,signalId*cs\r\n</pre>								
Examples		\$GNGRS,104148.00,1,2.6,2.2,-1.6,-1.1,-1.7,-1.5,5.8,1.7,,,,,1,1*52\r\n \$GNGRS,104148.00,1,,0.0,2.5,0.0,,2.8,,,,,,1,5*52\r\n								
Payloa	d:									
Field	Name	e	Format	Unit	Example	Description				
0	xxGR	RS	string	-	\$GPGRS	GRS Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	time	2	hhmmss.ss	-	082632.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.				
2 mode		:	digit	-	1	Computation method used:  1 = Residuals were recomputed after the GGA position was computed (fixed)				



#### Start of repeated group (12 times)

3 + n	residual	numeric m	0.54	Range residuals for SVs used in navigation. The SV order matches the order from the GSA sentence
End of	repeated group	(12 times)		
15	systemId	hexadecimal -	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
16	signalId	hexadecimal -	-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
17	CS	hexadecimal -	*70	Checksum
18	CRLF	character -	-	Carriage return and line feed

#### 2.7.13 GSA

#### 2.7.13.1 GNSS DOP and active satellites

Message		NMEA-Standard-GSA								
		GNSS DO	OP and active s	atellites						
Туре		Output								
Comm	ent	The GNS	S receiver oper	ating mo	de, satellites use	ed for navigation, and DOP values.				
		<ul> <li>If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.</li> <li>The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)</li> </ul>								
		In a mult	i-GNSS systen	n this me	ssage will be ou	tput multiple times, once for each GNSS.				
Inform	ation	Class/ID:	0xf0 0x02	Num	ber of fields: 21					
Structi	ure	\$xxGSA,	opMode,navMo	de{,svi	d},PDOP,HDOP,	VDOP,systemId*cs\r\n				
Examp	ole	\$GPGSA,	A,3,23,29,07	,08,09,	18,26,28,,,,	1.94,1.18,1.54,1*0D\r\n				
Payloa	ıd:									
Field	Name	9	Format	Unit	Example	Description				
0	xxGSA		string	-	\$GPGSA	GSA Message ID (xx = current Talker ID, see NME/ Talker IDs table)				
1	орМо	de	character	-	Α	Operation mode:				
						<ul> <li>M = Manually set to operate in 2D or 3D mode</li> <li>A = Automatically switching between 2D or 3D mode</li> </ul>				
2	navM	ode	digit	-	3	Navigation mode, see position fix flags description				
Start o	of repeat	ted group	(12 times)							
3 + n	svid		numeric	-	29	Satellite number				
End of	repeate	ed group (.	12 times)							
15	PDOP		numeric	-	1.94	Position dilution of precision				
16	HDOP		numeric	-	1.18	Horizontal dilution of precision				
17	VDOP		numeric	-	1.54	Vertical dilution of precision				
18	systemId		hexadecim	al -	1	NMEA-defined GNSS system ID, see Signal Identifier table (only available in NMEA 4.10 and later)				
19	cs		hexadecim	al -	*0D	Checksum				
20	CRLF		character	-	-	Carriage return and line feed				

### 2.7.14 GST



#### 2.7.14.1 GNSS pseudorange error statistics

Message		NMEA-Standard-GST								
		GNSS pseudorange error statistics								
Туре		Output								
Comm	ent	This mes	This message reports statistical information on the quality of the position solution.							
Inform	ation	Class/ID:	0xf0 0x07	Numl	per of fields: 11					
Structu	ure	\$xxGST,	time,rangeRms	,stdMaj	or,stdMinor,o	rient,stdLat,stdLong,stdAlt*cs\r\n				
Examp	ole	\$GPGST,	082356.00,1.8	,,,,1.7	,1.3,2.2*7E\r	\n				
Payloa	d:									
Field	Nam	е	Format	Unit	Example	Description				
0	xxGST		string	-	\$GPGST	GST Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	time	9	hhmmss.ss	-	082356.00	UTC time of associated position fix. See section UTC representation in the integration manual for details.				
2	rang	geRms	numeric	m	1.8	RMS value of the standard deviation of the ranges				
3	stdl	Major	numeric	m	-	Standard deviation of semi-major axis				
4	stdl	Minor	numeric	m	-	Standard deviation of semi-minor axis				
5	orie	ent	numeric	deg	-	Orientation of semi-major axis				
6	stdLat		numeric	m	1.7	Standard deviation of latitude error				
7	stdLong		numeric	m	1.3	Standard deviation of longitude error				
8	stdAlt		numeric	m	2.2	Standard deviation of altitude error				
9	cs		hexadecimal	-	*7E	Checksum				
10	CRLI		character	-	-	Carriage return and line feed				

#### 2.7.15 GSV

#### 2.7.15.1 GNSS satellites in view

Messa	nge	NMEA-Standard-GSV									
		GNSS satellites in view									
Туре		Output									
Comm	ent			-	ogether with each	ch SV ID, elevation azimuth, and signal strength (C/No) value. message.					
		In a multi-	GNSS syste	m, sets of (	GSV messages v	will be output multiple times, one set for each GNSS.					
		The messages are grouped by the signal ID and separate messages are output for each signal ID. (supporter for protocol versions 27.12 and later)									
Inform	ation	Class/ID: 0	xf0 0x03	Numi	ber of fields: 7 +	[14]·4					
Structu	ure	<pre>\$xxGSV,numMsg,msgNum,numSV{,svid,elv,az,cno},signalId*cs\r\n</pre>									
Examples		\$GPGSV,3,1,09,09,,,17,10,,,40,12,,,49,13,,,35,1*6F\r\n \$GPGSV,3,2,09,15,,,44,17,,,45,19,,,44,24,,,50,1*64\r\n \$GPGSV,3,3,09,25,,,40,1*6E\r\n \$GPGSV,1,1,03,12,,,42,24,,,47,32,,,37,5*66\r\n \$GPGSV,1,1,01,03,05,218,,0*59\r\n \$GAGSV,1,1,00,2*76\r\n									
Payloa	d:										
Field	Name	?	Format	Unit	Example	Description					
0	xxGS	V	string	-	\$GPGSV	GSV Message ID (xx = GSV Talker ID, see NMEA Talker IDs table). Talker ID GN shall not be used.					



1	numMsg	digit	-	3	Number of messages, total number of GSV messages being output (range: 1-9)
2	msgNum	digit	-	1	Number of this message (range: 1-numMsg)
3	numSV	numeric	-	10	Number of known satellites in view regarding both the talker ID and the signalld
Start of	repeated group (1	4 times)			
4 + n·4	svid	numeric	-	23	Satellite ID
5 + n·4	elv	numeric	deg	38	Elevation (<= 90)
6 + n·4	az	numeric	deg	230	Azimuth (range: 0-359)
7 + n·4	cno	numeric	dBHz	44	Signal strength (C/N0, range: 0-99), null when not tracking
End of r	epeated group (1.	4 times)			
4 + N·4	signalId	hexadecimal -		-	NMEA-defined GNSS signal ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
5 + N·4	cs	hexadecimal -		*7F	Checksum
6 + N·4	CRLF	character	_	-	Carriage return and line feed

## 2.7.16 RLM

### 2.7.16.1 Return link message (RLM)

Message		NMEA-Standard-RLM									
		Return li	nk message (RL	-M)							
Туре	Type Output										
Comm	ent		The RLM sentence is used to transfer a Return link message from a Cospas-Sarsat recognized Return link service provider (RLSP).								
		located a	The RLM sentence supports communications to an emitting beacon once a distress alert has been detected located and confirmed. The communications may include acknowledgement of the alert to the emitting beacon as well as optional text messages, and may also include remote beacon configuration and testing.								
Inform	ation	Class/ID:	0xf0 0x0b	Numb	er of fields: 7						
Structi	ure	\$xxRLM,	beacon,time,c	ode, bod	y*cs\r\n						
Examp	oles		\$GARLM,00000078A9FBAD5,083559.00,3,C45B*57\r\n \$GARLM,F7129D41BC6A78C,034433.02,3,B63CA732AFD419D2*57\r\n								
Payloa	ıd:										
Field	Nam	e	Format	Unit	Example	Description					
0	xxRI	.M	string	-	\$GARLM	RLM message ID (xx = current Talker ID, see NMEA Talker IDs table)					
1	beac	on	hexadecima	l -	00000078A 9FBAD5	Beacon ID, identifies beacon intended to receive this message (fixed length 15 hexadecimal character field)					
2	time		hhmmss.ss	-	083559.00	Time of reception field to indicate RLM timestamp in UTC. See section UTC representation in the integration manual for details.					
3	code	code <b>charact</b>		-	3	Message code field to identify type of RLM Message Service:					
						<ul> <li>0 = Reserved for future RLM services</li> </ul>					
						<ul> <li>1 = Acknowledgement service RLM</li> </ul>					
						2 = Command service RLM					
						3 = Message service RLM					
						4-E = Reserved for future RLM services					
						<ul> <li>F = Test service RLM (currently used only by the Galileo program)</li> </ul>					



4	body	hexadecimal -	C45B	Message body encapsulates the data parameters provided by the RLSP into hexadecimal format.
5	CS	hexadecimal -	*57	Checksum
6	CRLF	character -	-	Carriage return and line feed

### 2.7.17 RMC

#### 2.7.17.1 Recommended minimum data

Message		NMEA-Standard-RMC Recommended minimum data								
Comme	ent	The recommended minimum sentence defined by NMEA for GNSS system data.								
		The output of this message is dependent on the currently selected datum (default: WGS84)								
Informa	ation	Class/ID: 0xf	f0 0x04	Number	r of fields: 16					
Structu	ıre	\$xxRMC,tim	ne,status,l	at,NS,lor	n,EW,spd,cog,d	date,mv,mvEW,posMode,navStatus*cs\r\n				
Examp	le	\$GPRMC,083	3559.00,A,4	717.1143	7,N,00833.9152	22,E,0.004,77.52,091202,,,A,V*57\r\n				
Payload	d:									
Field	Name		Format	Unit	Example	Description				
0	xxRMO	2	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	time		hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.				
2	stati	ıs	character	-	Α	Data validity status, see position fix flags description				
3	lat		ddmm. mmmmm	-	4717.11437	Latitude (degrees and minutes), see format description				
4	NS		character	-	N	North/South indicator				
5	lon		dddmm. mmmmm	-	00833.91522	Longitude (degrees and minutes), see format description				
6	EW		character	-	E	East/West indicator				
7	spd		numeric	knots	0.004	Speed over ground				
8	cog		numeric	deg	77.52	Course over ground				
9	date		ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.				
10	mv		numeric	deg	-	Magnetic variation value				
11	mvEW		character	-	-	Magnetic variation E/W indicator				
12	posMode		character	-	А	Mode Indicator, see position fix flags description (only available in NMEA 2.3 and later)				
13	navStatus		character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)				
14	CS		hexadecimal	-	*57	Checksum				
15	CRLF		character	-	-	Carriage return and line feed				

### 2.7.18 THS



### 2.7.18.1 True heading and status

Message		NMEA-Standard-THS								
		True hea	ding and statu	s						
Туре		Output								
Comment		Actual vehicle heading in degrees produced by any device or system producing true heading. This sentence includes a <i>Mode indicator</i> field providing critical safety-related information about the heading data, and replaces the HDT sentence.								
Inform	ation	Class/ID: 0xf0 0x0e Number			r of fields: 5					
Structu	ıre	\$xxTHS,	headt,mi*cs\	r\n						
Examp	le	\$GPTHS,	77.52 <b>,</b> E*32\r	\n						
Payloa	d:									
Field	Nam	e	Format	Unit	Example	Description				
0	XXTH	IS	string	-	\$GPTHS	THS Message ID (xx = current Talker ID, see NMEA Talker IDs table)				
1	head	lt	numeric	degrees	77.52	Heading of vehicle (true)				
2	mi		character	-	Е	Mode indicator:				
						A = Autonomous				
						<ul> <li>E = Estimated (dead reckoning)</li> </ul>				
						M = Manual input				
						S = Simulator				
						<ul> <li>V = Data not valid</li> </ul>				
3	cs		hexadecima	al -	*32	Checksum				
4	CRLE	,	character	-	-	Carriage return and line feed				

### 2.7.19 TXT

### 2.7.19.1 Text transmission

Message		NMEA-Standard-TXT									
		Text transmission									
Туре		Output									
Comm	ent		This message outputs various information on the receiver, such as power-up screen, software version etc. This message can be configured using the CFG-INFMSG configuration group.								
Inform	ation	Class/ID:	0xf0 0x41	Numi	ber of fields: 7						
Structi	ure	\$xxTXT,	numMsg,msgNu	ım,msgTyp	pe,text*cs\r\	n					
Examples		\$GPTXT,01,01,02,u-blox ag - www.u-blox.com*50\r\n \$GPTXT,01,01,02,ANTARIS ATR0620 HW 00000040*67\r\n									
Payloa	ıd:										
Field	Nam	e	Format	Unit	Example	Description					
0	xxΤΣ	ΥT	string	-	\$GPTXT	TXT Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
1	numMsg		numeric	-	01	Total number of messages in this transmission (range: 1-99)					
2 msg		Jum	numeric	-	01	Message number in this transmission (range: 1-numMsg)					



3	msgType	numeric -	02	Text identifier (u-blox receivers specify the type of the message with this number):  • 00 = Error  • 01 = Warning  • 02 = Notice  • 07 = User
4	text	string -	www.u-blo x.com	Any ASCII text
5	CS	hexadecimal -	*67	Checksum
6	CRLF	character -	-	Carriage return and line feed

### 2.7.20 VTG

## 2.7.20.1 Course over ground and ground speed

Message		NMEA-S	NMEA-Standard-VTG								
		Course o	Course over ground and ground speed								
Туре		Output									
Comm	ent	Velocity is	s given as cours	se over gro	und (COG) and	speed over ground (SOG).					
Inform	ation	Class/ID:	0xf0 0x05	Numbe	r of fields: 12						
Structu	ıre	\$xxVTG,	cogt,cogtUnit	,cogm,co	gmUnit,sogn,	sognUnit,sogk,sogkUnit,posMode*cs\r\n					
Examp	le	\$GPVTG,	77.52,T,,M,O.	004,N,O.	008,K,A*06\1	r\n					
Payloa	d:										
Field	Nam	e	Format	Unit	Example	Description					
0	xxV	ΓG	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
1	cogt	t	numeric	degrees	77.52	Course over ground (true)					
2	cogt	tUnit	character	-	Т	Course over ground units: T (degrees true, fixed field)					
3	cogr	n	numeric	degrees	-	Course over ground (magnetic)					
4	cogr	mUnit	character	-	М	Course over ground units: M (degrees magnetic, fixed field)					
5	sogi	n	numeric	knots	0.004	Speed over ground					
6	sogi	nUnit	character	-	N	Speed over ground units: N (knots, fixed field)					
7	sogl	k	numeric	km/h	0.008	Speed over ground					
8	sogkUnit		character	-	К	Speed over ground units: K (kilometers per hour, fixed field)					
9	posMode		character	-	А	Mode indicator, see position fix flags description (only available in NMEA 2.3 and later)					
10	cs		hexadecima	I -	*06	Checksum					
11	CRLI	 ?	character	-	-	Carriage return and line feed					

### 2.7.21 ZDA

#### 2.7.21.1 Time and date

Message	NMEA-Standard-ZDA					
	Time and date					
Туре	Output					
Comment	UTC, day, month, year and local time zone.					



Inform	ation	Class/ID: 0x	rf0 0x08	Number	r of fields: 9	
Structi	ure	\$xxZDA,ti	me,day,mont	h,year,lt	zh,ltzn*cs\r	\n
Examp	le	\$GPZDA,08	2710.00,16,	09,2002,0	00,00*64\r\n	
Payloa	d:					
Field	Nam	e	Format	Unit	Example	Description
0	xxZI	PΑ	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
1	time	2	hhmmss.ss	-	082710.00	UTC Time. See section UTC representation in the integration manual for details.
2	day		dd	day	16	UTC day (range: 1-31)
3	mont	h	mm	month	09	UTC month (range: 1-12)
4	year	<u> </u>	уууу	year	2002	UTC year
5	ltzł	1	xx	-	00	Local time zone hours (fixed field, always 00)
6	ltzr	n	ZZ	-	00	Local time zone minutes (fixed field, always 00)
7	cs		hexadecima	I -	*64	Checksum
8	CRLE	?	character	-	-	Carriage return and line feed

# 2.8 Secondary output messages

Secondary output NMEA messages. These are NMEA messages prepended with an NMEA TAG block as defined by the NMEA 0183 standard. See NMEA protocol for details.

#### 2.8.1 GGA

### 2.8.1.1 Global positioning system fix data

Message		NMEA-NAV2-GGA									
		Global positioning system fix data									
Туре		Output									
Comment		Time and position, together with GPS fixing-related data (number of satellites in use, and the resulting HDOP, age of differential data if in use, etc.).									
		To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in accordance to NMEA 0183 Standard.									
		The output of this message is dependent on the currently selected datum (default: WGS84). The NMEA specification indicates that the GGA message is GPS-specific. However, when the receiver is configured for multi-GNSS, the GGA message contents will be generated from the multi-GNSS solution. For multi-GNSS use, it is recommended that the NMEA-GNS message is used instead.									
Inform	ation	Class/ID: 0xf7 0x00 Number of fields: 21									
Structi	ure	\s:1*78\\$xxGGA,time,lat,NS,lon,EW,quality,numSV,HDOP,alt,altUnit,sep,sepUnit,diffAge ,diffStation*cs\r\n									
Examp	ole	\s:1*78\\$GPGGA,092725.00,4717.11399,N,00833.91590,E,1,08,1.01,499.6,M,48.0,M,,*5B\r\n									
Payloa	d:										
Field	Nam	е	Format	Unit	Example	Description					
0	tags	Start	string	-	\s:	NMEA TAG block start and parameter					
1	soui	rce	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)					
2	tag	Cs	hexadecimal -		*78	NMEA TAG checksum					
3	tagI	End	string	-	\	NMEA TAG block end character					



4	xxGGA	string	-	\$GPGGA	GGA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
5	time	hhmmss.ss	-	092725.00	UTC time. See section UTC representation in the integration manual for details.
6	lat	ddmm. mmmmm	-	4717.11399	Latitude (degrees and minutes), see format description
7	NS	character	-	N	North/South indicator
8	lon	dddmm. mmmmm	-	00833.91590	Longitude (degrees and minutes), see format description
9	EW	character	-	E	East/West indicator
10	quality	digit	-	1	Quality indicator for position fix, see position fix flags description
11	numSV	numeric	-	08	Number of satellites used (range: 0-12)
12	HDOP	numeric	-	1.01	Horizontal Dilution of Precision
13	alt	numeric	m	499.6	Altitude above mean sea level
14	altUnit	character	-	М	Altitude units: M (meters, fixed field)
15	sep	numeric	m	48.0	Geoid separation: difference between ellipsoid and mean sea level
16	sepUnit	character	-	М	Geoid separation units: M (meters, fixed field)
17	diffAge	numeric	S	-	Age of differential corrections (null when DGPS is not used)
18	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
19	CS	hexadecima	I -	*5B	Checksum
20	CRLF	character	-	-	Carriage return and line feed

### 2.8.2 GLL

### 2.8.2.1 Latitude and longitude, with time of position fix and status.

Messa	age	NMEA-N	IAV2-GLL							
		Latitude and longitude, with time of position fix and status.								
Type Output										
Comm	ent	Geograp	hic Position - L	atitude/Lo	ongitude.					
			To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.							
		The o	The output of this message is dependent on the currently selected datum (default: WGS84)							
Inform	ation	Class/ID:	Class/ID: 0xf7 0x01 Number of fields: 14							
Structure \		\s:1*78	\s:1*78\\$xxGLL,lat,NS,lon,EW,time,status,posMode*cs\r\n							
Examp	ole	\s:1*78\\$GPGLL,4717.11364,N,00833.91565,E,092321.00,A,A*60\r\n								
Payloa	nd:									
Field	Nam	e	Format	Unit	Example	Description				
0	tag	Start	string	-	\s:	NMEA TAG block start and parameter				
1	sou	rce	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)				
2	tag	Cs	hexadecim	al -	*78	NMEA TAG checksum				
3	tagl	End	string	-	\	NMEA TAG block end character				



4	xxGLL	string -	\$GPGLL	GLL Message ID (xx = current Talker ID, see NMEA Talker IDs table)
5	lat	ddmm mmmmm	4717.11364	Latitude (degrees and minutes), see format description
6	NS	character -	N	North/South indicator
7	lon	dddmm mmmmm	00833.91565	Longitude (degrees and minutes), see format description
8	EW	character -	E	East/West indicator
9	time	hhmmss.ss -	092321.00	UTC time. See section UTC representation in the integration manual for details.
10	status	character -	Α	Data validity status, see position fix flags description
11	posMode	character -	A	Positioning mode, see position fix flags description (only available in NMEA 2.3 and later)
12	CS	hexadecimal -	*60	Checksum
13	CRLF	character -	-	Carriage return and line feed

### 2.8.3 GNS

#### 2.8.3.1 GNSS fix data

Message		NMEA-NAV2-GNS GNSS fix data									
											Туре
Comm	ent		d position, toge ge of differential		•	ated data (number of satellites in use, and the resulting					
			, .			Secondary filter output, the alphanumeric string source- in respect to NMEA 0183 Standard.					
		The o	The output of this message is dependent on the currently selected datum (default: WGS84)								
Inform	ation	Class/ID:	0xf7 0x0d	Numb	er of fields: 20						
Structi	ure	\s:1*78 Status*		lat,NS,	lon,EW,posMode	,numSV,HDOP,alt,sep,diffAge,diffStation,nav ↓					
Examples		\s:1*78\\$GNGNS,103600.01,5114.51176,N,00012.29380,W,ANNN,07,1.18,111.5,45.6,,,V*00\r \n\s:1*78\\$GNGNS,122310.2,3722.425671,N,12258.856215,W,DAAA,14,0.9,1005.543,6.5,,,V*0E \r\n\s:1*78\\$GPGNS,122310.2,,,,,,07,,,,5.2,23,V*02\r\n									
Payloa	ad:										
Field	Nam	9	Format	Unit	Example	Description					
0	tagS	tart	string	-	\s:	NMEA TAG block start and parameter					
1	sour	се	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)					
2	tagO	s	hexadecima	ıl –	*78	NMEA TAG checksum					
3	tagE	nd	string	-	\	NMEA TAG block end character					
4	xxGN	ïS	string	-	\$GPGNS	GNS Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
5	time	!	hhmmss.ss	-	091547.00	UTC time. See section UTC representation in the integration manual for details.					
6	lat		ddmm. mmmmm	-	5114.50897	Latitude (degrees and minutes), see format description					



8	lon	dddmm. mmmmm	-	00012.28663	Longitude (degrees and minutes), see format description
9	EW	character	-	E	East/West indicator
10	posMode	character	-	AAAA	Positioning mode, see position fix flags description. The first four characters indicate the status for GPS, GLONASS, Galileo and BeiDou. Note that the NMEA GNS message only reports a single status. It indicates the status for all enabled constellations that have not been filtered out. To obtain a more detailed status report, refer to the status provided in the UBX messages.
11	numSV	numeric	-	10	Number of satellites used (range: 0-99)
12	HDOP	numeric	-	0.83	Horizontal Dilution of Precision
13	alt	numeric	m	111.1	Altitude above mean sea level
14	sep	numeric	m	45.6	Geoid separation: difference between ellipsoid and mean sea level
15	diffAge	numeric	S	-	Age of differential corrections (null when DGPS is not used)
16	diffStation	numeric	-	-	ID of station providing differential corrections (null when DGPS is not used)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	cs	hexadecima	al -	*71	Checksum
19	CRLF	character	-	-	Carriage return and line feed

# 2.8.4 GSA

### 2.8.4.1 GNSS DOP and active satellites

Messa	ige	NMEA-N	AV2-GSA								
		GNSS DOP and active satellites									
Туре		Output									
Comm	ent	The GNS	S receiver ope	rating mo	ode, satellites use	ed for navigation, and DOP values.					
		• If less than 12 SVs are used for navigation, the remaining fields are left empty. If more than 12 SVs are used for navigation, only the IDs of the first 12 are output.									
		• The SV numbers (fields 'svid') are in the range of 1 to 32 for GPS satellites, and 33 to 64 for SBAS satellites (33 = SBAS PRN 120, 34 = SBAS PRN 121, and so on)									
		In a mult	i-GNSS syste	m this me	essage will be ou	tput multiple times, once for each GNSS.					
		To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.									
Inform	ation	Class/ID:	0xf7 0x02	Num	ber of fields: 25						
Structu	ıre	\s:1*78	\\$xxGSA,opMo	ode,navM	lode{,svid},PD0	OP,HDOP,VDOP,systemId*cs\r\n					
Examp	le	\s:1*78\\$GPGSA,A,3,23,29,07,08,09,18,26,28,,,,,1.94,1.18,1.54,1*0D\r\n									
Payloa	d:										
Field	Nam	e	Format	Unit	Example	Description					
0	tags	Start	string	-	\s:	NMEA TAG block start and parameter					
1	soui	cce	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)					
2	tag	Cs	hexadecim	ıal -	*78	NMEA TAG checksum					
3	tagI	End	string	-	\	NMEA TAG block end character					



4	xxGSA	string	-	\$GPGSA	GSA Message ID (xx = current Talker ID, see NMEA Talker IDs table)
5	opMode	character ·	-	A	<ul> <li>Operation mode:</li> <li>M = Manually set to operate in 2D or 3D mode</li> <li>A = Automatically switching between 2D or 3D mode</li> </ul>
6	navMode	digit	-	3	Navigation mode, see position fix flags description
Start of	f repeated group	(12 times)			
7 + n	svid	numeric	-	29	Satellite number
End of	repeated group (	(12 times)			
19	PDOP	numeric -	-	1.94	Position dilution of precision
20	HDOP	numeric	-	1.18	Horizontal dilution of precision
21	VDOP	numeric	-	1.54	Vertical dilution of precision
22	systemId	hexadecimal -	-	1	NMEA-defined GNSS system ID, see Signal Identifiers table (only available in NMEA 4.10 and later)
23	cs	hexadecimal ·	-	*0D	Checksum
24	CRLF	character	-	-	Carriage return and line feed

### 2.8.5 RMC

### 2.8.5.1 Recommended minimum data

Messa	ige	NMEA-NAV2-RMC Recommended minimum data									
Туре		Output									
Comm	ent	The recom	mended minir	num sente	ence defined by N	NMEA for GNSS system data.					
		,	To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.								
		The out	The output of this message is dependent on the currently selected datum (default: WGS84)								
Inform	ation	Class/ID: 0:	xf7 0x04	Numbe	r of fields: 20						
Structu	ure	\s:1*78\\$	\s:1*78\\$xxRMC,time,status,lat,NS,lon,EW,spd,cog,date,mv,mvEW,posMode,navStatus*cs\r \								
Examp	ole	\s:1*78\\$	GPRMC,08355	9.00,A,4	717.11437,N,O	0833.91522,E,0.004,77.52,091202,,,A,V*57\r\ J					
Payloa	d:										
Field	Name	9	Format	Unit	Example	Description					
0	tagS	tart	string	-	\s:	NMEA TAG block start and parameter					
1	sour	ce	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)					
2	tagC	S	hexadecima	l -	*78	NMEA TAG checksum					
3	tagE	nd	string	-	\	NMEA TAG block end character					
4	xxRM	C	string	-	\$GPRMC	RMC Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
5	time		hhmmss.ss	-	083559.00	UTC time. See section UTC representation in the integration manual for details.					
6	stat	us	character	-	A	Data validity status, see position fix flags description					
7	lat		ddmm. mmmmm	-	4717.11437	Latitude (degrees and minutes), see format description					



9	lon	dddmm. mmmmm	-	00833.91522	Longitude (degrees and minutes), see format description
10	EW	character	-	E	East/West indicator
11	spd	numeric	knots	0.004	Speed over ground
12	cog	numeric	deg	77.52	Course over ground
13	date	ddmmyy	-	091202	Date in day, month, year format. See section UTC representation in the integration manual for details.
14	mv	numeric	deg	-	Magnetic variation value
15	mvEW	character	-	-	Magnetic variation E/W indicator
16	posMode	character	-	А	Mode Indicator, see position fix flags description (only available in NMEA 2.3 and later)
17	navStatus	character	-	V	Navigational status indicator: V (Equipment is not providing navigational status information, fixed field, only available in NMEA 4.10 and later)
18	CS	hexadecima	al -	*57	Checksum
19	CRLF	character	-	-	Carriage return and line feed

### 2.8.6 VTG

### 2.8.6.1 Course over ground and ground speed

Messa	age	NMEA-N	NMEA-NAV2-VTG									
		Course o	ver ground and	d ground sp	eed							
Туре		Output										
Comm	nent	Velocity i	Velocity is given as course over ground (COG) and speed over ground (SOG).									
			To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.									
Inform	nation	Class/ID:	0xf7 0x05	Numbe	er of fields: 16							
Struct	ure	\s:1*78	\\$xxVTG,cogt	,cogtUnit	,cogm,cogmU	nit,sogn,sognUnit,sogk,sogkUnit,posMode*cs\r\ ↓						
Examp	ole	\s:1*78	\\$GPVTG,77.5	2,T,,M,O.	004,N,0.008	,K,A*06\r\n						
Payloa	ad:											
Field	Nam	e	Format	Unit	Example	Description						
0	tags	Start	string	-	\s:	NMEA TAG block start and parameter						
1	soui	cce	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)						
2	tag	Cs	hexadecim	al -	*78	NMEA TAG checksum						
3	tagI	End	string	-	\	NMEA TAG block end character						
4	XXV	rg	string	-	\$GPVTG	VTG Message ID (xx = current Talker ID, see NMEA Talker IDs table)						
5	cogt	:	numeric	degrees	77.52	Course over ground (true)						
6	cogt	Unit	character	-	Т	Course over ground units: T (degrees true, fixed field)						
7	cogr	n	numeric	degrees	-	Course over ground (magnetic)						
8	cogmUnit		character	-	M	Course over ground units: M (degrees magnetic, fixed field)						
9	sogr	ı	numeric	knots	0.004	Speed over ground						
10	sogr	nUnit	character	-	N	Speed over ground units: N (knots, fixed field)						
11	sogl	2	numeric	km/h	0.008	Speed over ground						



12	sogkUnit	character -	К	Speed over ground units: K (kilometers per hour, fixed field)
13	posMode	character -	А	Mode indicator, see position fix flags description (only available in NMEA 2.3 and later)
14	cs	hexadecimal -	*06	Checksum
15	CRLF	character -	-	Carriage return and line feed

#### 2.8.7 ZDA

#### 2.8.7.1 Time and date

Messa	ge NMEA-I	NMEA-NAV2-ZDA								
	Time an	d date								
Туре	Output									
Comm	ent UTC, da	UTC, day, month, year and local time zone.								
		To identify the navigation data source for NMEA Secondary filter output, the alphanumeric string source-identification (s:) parameter is used in a TAG Block, in respect to NMEA 0183 Standard.								
Inform	ation Class/ID	: 0xf7 0x08	Numbe	er of fields: 13						
Structu	<i>Ire</i> \s:1*78	3\\$GPZDA,time	e,day,mont	th,year,ltzh,	ltzn*cs\r\n					
Examp	le \s:1*78	3\\$xxZDA,0827	710.00,16,	09,2002,00,0	0*64\r\n					
Payloa	d:									
Field	Name	Format	Unit	Example	Description					
0	tagStart	string	-	\s:	NMEA TAG block start and parameter					
1	source	numeric	-	1	NMEA TAG block source value (1 for secondary output messages)					
2	tagCs	hexadecim	al -	*78	NMEA TAG checksum					
3	tagEnd	string	-	\	NMEA TAG block end character					
4	xxZDA	string	-	\$GPZDA	ZDA Message ID (xx = current Talker ID, see NMEA Talker IDs table)					
5	time	hhmmss.s	s -	082710.00	UTC Time. See section UTC representation in the integration manual for details.					
6	day	dd	day	16	UTC day (range: 1-31)					
7	month	mm	month	09	UTC month (range: 1-12)					
8	year	уууу	year	2002	UTC year					
9	ltzh	XX	-	00	Local time zone hours (fixed field, always 00)					
10	ltzn	ZZ	-	00	Local time zone minutes (fixed field, always 00)					
11	cs	hexadecim	al -	*64	Checksum					
12	CRLF	character	-	-	Carriage return and line feed					

# 2.9 PUBX messages

Proprietary NMEA messages for u-blox positioning receivers. See also NMEA-proprietary messages.

## 2.9.1 CONFIG (PUBX,41)



### 2.9.1.1 Set protocols and baud rate

Messa	ge NMEA-PL	NMEA-PUBX-CONFIG								
	Set proto	cols and bau	d rate							
Туре	Set									
Comme	ent									
Informa	ation Class/ID: (	0xf1 0x41	Numb	per of fields: 9						
Structu	ire \$PUBX,41	,portId,in	Proto,out	Proto,baudra	te,autobauding*cs\r\n					
Examp	<i>le</i> \$PUBX,41	,1,0007,000	03,19200,	0*25\r\n	-					
Payloa	d:									
Field	Name	Format	Unit	Example	Description					
0	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence					
1	msgId	numeric	-	41	Proprietary message identifier					
2	portId	numeric	-	1	ID of communication port. See section Communication ports in the integration manual for details.					
3	inProto	hexadecim	nal -	0007	Input protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.					
4	outProto	hexadecim	nal -	0003	Output protocol mask. Bitmask, specifying which protocols(s) are allowed for input. See section Communication ports in the integration manual for details.					
5	baudrate	numeric	bits/s	19200	Baud rate					
6	autobauding	numeric	-	-	Autobauding: 1=enable, 0=disable (not supported on ublox 5, set to 0)					
7	CS	hexadecim	nal -	*25	Checksum					
8	CRLF	character	-	-	Carriage return and line feed					

# **2.9.2 POSITION (PUBX,00)**

### 2.9.2.1 Poll a PUBX,00 message

Messa	ige	NMEA-PUI	BX-POSITIOI	N								
		Poll a PUB	X,00 messag	е								
Туре		Poll reques	t									
Comm	ent	A PUBX,00	A PUBX,00 message is polled by sending the PUBX,00 message without any data fields.									
Inform	ation	Class/ID: 0x	xf1 0x00	Numbe	er of fields: 4							
Structu	ıre	\$PUBX,00*	33\r\n									
Examp	le	\$PUBX,00*	33\r\n									
Payloa	d:											
Field	Nam	e	Format	Unit	Example	Description						
0	PUB	ζ	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence						
1	msgl	[d	numeric	-	00	Set to 00 to poll a PUBX,00 message						
2	cs		hexadecim	al -	*33	Checksum						
3	CRLI	7	character	-	-	Carriage return and line feed						



## 2.9.2.2 Lat/Long position data

ssage	NMEA-PUE	X-POSITION						
	Lat/Long p	Lat/Long position data						
e	Output							
mment	This messa CFG-DAT.	ige contains p	osition solu	ution data. The d	atum selection may be changed using the message UBX			
	The out	out of this me	ssage is de	pendent on the	currently selected datum (default: WGS84).			
ormation	Class/ID: 0x	f1 0x00	Number	of fields: 23				
ucture		time,lat,NS Svs,reserve			t, hAcc, vAcc, SOG, COG, vVel, diffAge, HDOP, VDOP .			
mple		081350.00,4 19,0.77,9,0			187,E,546.589,G3,2.1,2.0,0.007,77.52,0.007 』			
rload:								
ld Na	me	Format	Unit	Example	Description			
PU	BX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence			
ms	gId	numeric	-	00	Proprietary message identifier: 00			
tin	me	hhmmss.ss	-	081350.00	UTC time. See section UTC representation in the integration manual for details.			
la	t	ddmm. mmmmm	-	4717.113210	Latitude (degrees and minutes), see format description			
NS		character	-	N	North/South Indicator			
101	ng	dddmm. mmmmm	-	00833.915187	Longitude (degrees and minutes), see format description			
EW		character	-	E	East/West indicator			
al	tRef	numeric	m	546.589	Altitude above user datum ellipsoid			
na	vStat	string	-	G3	Navigation Status:  NF = No Fix  DR = Dead reckoning only solution  G2 = Stand alone 2D solution  G3 = Stand alone 3D solution  D2 = Differential 2D solution  D3 = Differential 3D solution  RK = Combined GPS + dead reckoning solution  TT = Time only solution			
hA	cc	numeric	m	2.1	Horizontal accuracy estimate			
vA	cc	numeric	m	2.0	Vertical accuracy estimate			
SO	G	numeric	km/h	0.007	Speed over ground			
CO	G	numeric	deg	77.52	Course over ground			
vVe	el	numeric	m/s	0.007	Vertical velocity (positive downwards)			
di	ffAge	numeric	S	-	Age of differential corrections (blank when DGPS is not used)			
HD	OP	numeric	-	0.92	HDOP, Horizontal Dilution of Precision			
VD	OP	numeric	-	1.19	VDOP, Vertical Dilution of Precision			
TDO		numeric	-	0.77	TDOP, Time Dilution of Precision			
		numeric	-	9	Number of satellites used in the navigation solution			
			-	-	Reserved, always set to 0			
			_	_	DR used			
				*ED	Checksum			
18       numSvs         19       reserved         20       DR         21       CS		numeric numeric	numeric -	numeric numeric				



22 CRLF character - - Carriage return and line feed

## 2.9.3 RATE (PUBX,40)

### 2.9.3.1 Set NMEA message output rate

Messa	ige	NMEA-PUBX-I	RATE									
		Set NMEA me	Set NMEA message output rate									
Туре		Set										
Comm	ent	Set/Get message rate configuration (s) to/from the receiver.  Send rate is relative to the event a message is registered on. For example, if the rate of a navigation message is set to 2, the message is sent every second navigation solution.										
Inform	ation	Class/ID: 0xf1	0x40	Numbe	r of fields: 11							
Structure		\$PUBX,40,msgId,rddc,rus1,rus2,rusb,rspi,reserved*cs\r\n										
Examp	le	\$PUBX,40,GLI	\$PUBX,40,GLL,1,0,0,0,0*5D\r\n									
Payloa	d:											
Field	Name	e Fo	ormat	Unit	Example	Description						
0	PUBX	st	ring	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence						
1	ID	nı	umeric	-	40	Proprietary message identifier						
2	msgI	d st	ring	-	GLL	NMEA message identifier						
3	rddc	nı	umeric	cycles	1	output rate on DDC						
						<ul> <li>0 disables that message from being output on this port</li> </ul>						
						1 means that this message is output every epoch						
4	rus1	nı	umeric	cycles	1	output rate on USART 1						
						<ul> <li>0 disables that message from being output on this port</li> </ul>						
						1 means that this message is output every epoch						
5	rus2	nı	umeric	cycles	1	output rate on USART 2						
						<ul> <li>0 disables that message from being output on this port</li> </ul>						
						1 means that this message is output every epoch						
6	rusb	nu	umeric	cycles	1	output rate on USB						
						<ul> <li>0 disables that message from being output on this port</li> </ul>						
						<ul> <li>1 means that this message is output every epoch</li> </ul>						
7	rspi	nı	umeric	cycles	1	output rate on SPI						
						<ul> <li>0 disables that message from being output on this port</li> </ul>						
						1 means that this message is output every epoch						
8	rese	rved <b>n</b> u	umeric	-	-	Reserved: always fill with 0						
9	CS	he	exadecima	I -	*5D	Checksum						
10	CRLF	ch	naracter	-	-	Carriage return and line feed						

## **2.9.4 SVSTATUS (PUBX,03)**

### 2.9.4.1 Poll a PUBX,03 message

Message	NMEA-PUBX-SVSTATUS
	Poll a PUBX,03 message
Туре	Poll request



Comment		A PUBX,0	A PUBX,03 message is polled by sending the PUBX,03 message without any data fields.									
Informa	ation	Class/ID: (	0xf1 0x03	Numi	ber of fields: 4							
Structu	re	\$PUBX,03	3*30\r\n									
Exampl	'e	\$PUBX,03	3*30\r\n									
Payload	d:											
Field	Nam	e	Format	Unit	Example	Description						
0	PUB	ζ	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence						
1	msgl	īd	numeric	-	03	Set to 03 to poll a PUBX,03 message						
2	cs		hexadecim	ıal -	*30	Checksum						
3	CRLE	,	character	-	-	Carriage return and line feed						

#### 2.9.4.2 Satellite status

Type Comment		e status		NMEA-PUBX-SVSTATUS								
	Output	Satellite status										
Comment	<u> </u>											
	t The PU	he PUBX,03 message contains satellite status information.										
Informatio	on Class/IL	Class/ID: 0xf1 0x03 Number of fields: 5 + n·6										
Structure	\$PUBX,	\$PUBX,03,GT{,sv,s,az,el,cno,lck},*cs\r\n										
Example	,46,02		,39,026,	17,-,,,32,01	,07,-,,,42,015,08,U,067,31,42,025,10,U,195,33 4 5,26,U,306,66,48,025,27,U,073,10,36,026,28,U,4							
Payload:												
Field N	Vame	Format	Unit	Example	Description							
0 P	PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence							
1 m	msgId	numeric	-	03	Proprietary message identifier: 03							
<b>2</b> n	n	numeric	-	11	Number of GNSS satellites tracked							
Start of re	epeated grou	p (n times)										
3+n⋅6 s	SV	numeric	-	23	Satellite ID according to UBX svld mapping (see Satellite Numbering)							
4 + n·6 s	S	character	-	-	Satellite status:							
					<ul><li>- = Not used</li></ul>							
					<ul> <li>U = Used in solution</li> </ul>							
					<ul> <li>e = Ephemeris available, but not used for navigation</li> </ul>							
5 + n·6 ∂	ЭZ	numeric	deg	-	Satellite azimuth (range: 0-359)							
6 + n·6 ∈	el	numeric	deg	-	Satellite elevation (<= 90)							
7 + n·6	cno	numeric	dBHz	45	Signal strength (C/N0, range 0-99), blank when not tracking							
8 + n·6 1	lck	numeric	S	010	Satellite carrier lock time (range: 0-64)							
					• 0 = code lock only							
					• 64 = lock for 64 seconds or more							
End of rep	peated group	(n times)										
3 + n·6	cs	hexadecima	al -	*0D	Checksum							
4 + n·6	CRLF	character	-	-	Carriage return and line feed							

# 2.9.5 TIME (PUBX,04)



### 2.9.5.1 Poll a PUBX,04 message

Message		NMEA-PU	BX-TIME			
		Poll a PUB	X,04 messag	е		
Туре		Poll reques	st			
Comm	ent	A PUBX,04	message is <sub> </sub>	polled by	sending the PUE	3X,04 message without any data fields.
Inform	ation	Class/ID: 0	xf1 0x04	Numi	ber of fields: 4	
Structu	ıre	\$PUBX,04	*37\r\n			
Examp	le	\$PUBX,04	*37\r\n			
Payloa	d:					
Field	Nam	ne	Format	Unit	Example	Description
0	PUB	X	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1	msg:	Id	numeric	-	04	Set to 04 to poll a PUBX,04 message
2	CS		hexadecim	al -	*37	Checksum
3	CRL	F	character	-	-	Carriage return and line feed

### 2.9.5.2 Time of day and clock information

Type Outpu Comment		formation		
Comment				
Information Classil				
IIIIOITIIation Class/i	D: 0xf1 0x04	Numbe	er of fields: 12	
Structure \$PUBX	,04,time,date,u	tcTow,ut	cWk,leapSec,	clkBias,clkDrift,tpGran,*cs\r\n
Example \$PUBX	,04,073731.00,0	91202,11	3851.00,1196,	,15D,1930035,-2660.664,43,*3C\r\n
Payload:				
Field Name	Format	Unit	Example	Description
O PUBX	string	-	\$PUBX	Message ID, UBX protocol header, proprietary sentence
1 msgId	numeric	-	04	Proprietary message identifier: 04
2 time	hhmmss.ss	-	073731.00	UTC time. See section UTC representation in the integration manual for details.
3 date	ddmmyy	-	091202	UTC date, day, month, year. See section UTC representation in the integration manual for details.
4 utcTow	numeric	s	113851.00	UTC time of week
5 utcWk	numeric	-	1196	UTC week number, continues beyond 1023
6 leapSec	numeric/ text	S	15D	Leap seconds (not supported for protocol versions less than 13.01)
				The number is marked with a $D$ if the value is the firmware default value. If the value is not marked it has been received from a satellite.
7 clkBias	numeric	ns	1930035	Receiver clock bias
8 clkDrift	numeric	ns/s	-2660.664	Receiver clock drift
9 tpGran	numeric	ns	43	Time pulse granularity, the quantization error of the TIMEPULSE pin
10 <sub>CS</sub>	hexadecima	I -	*3C	Checksum
11 CRLF	character	-	-	Carriage return and line feed



# 3 UBX protocol


# 3.1 UBX protocol key features

u-blox receivers support a u-blox-proprietary protocol to communicate with a host computer. This protocol has the following key features:

- Compact uses 8-bit binary data
- · Checksum protected uses a low-overhead checksum algorithm
- Modular uses a two-stage message identifier (Class and Message ID)

### 3.2 UBX frame structure

The structure of a basic UBX frame is shown in the following diagram.

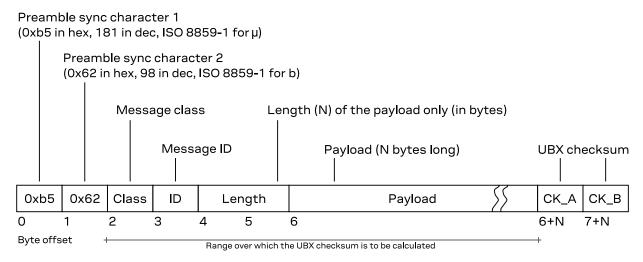

- Every frame starts with a 2-byte preamble consisting of two synchronization characters: 0xb5 and 0x62.
- A 1-byte *message class* field follows. A class is a group of messages that are related to each other.
- A 1-byte message ID field defines the message that is to follow.
- A 2-byte *length* field follows. The length is defined as being that of the payload only. It does not include the preamble, message class, message ID, length, or UBX checksum fields. The number format of the length field is an unsigned little-endian 16-bit integer (a "U2" in UBX data types).
- The payload field contains a variable number (= length) of bytes.
- The two 1-byte CK\_A and CK\_B fields hold a 16-bit checksum whose calculation is defined in UBX checksum section. This concludes the frame.



## 3.3 UBX payload definition rules

This section contains the rules and guidelines for UBX message payloads. See also UBX message example.

### 3.3.1 UBX structure packing

Values are placed in such an order that structure packing is not a problem. This means that twobyte values shall start on offsets that are a multiple of two; four-byte values shall start at a multiple of four; and so on.

#### 3.3.2 UBX reserved elements

Some messages contain reserved fields or bits to allow for future expansion. The contents of these elements should be ignored in output messages and must be set to zero in input messages. Where a message is output and subsequently returned to the receiver as an input message, reserved elements can either be explicitly set to zero or left with whatever value they were output with.

For fields in a bitfield the same rules apply. Note that bits not described are automatically reserved and are not explicitly stated (see UBX message example).

#### 3.3.3 UBX undefined values

The description of some fields provide specific meanings for specific values. For example, the field <code>gnssId</code> appears in many UBX messages and uses 0 to indicate GPS, 1 for SBAS and so on (see GNSS identifiers for details); however it is usually stored in a byte with far more possible values than the handful currently defined. All such undefined values are reserved for future expansion and therefore should not be used.

#### 3.3.4 UBX conditional values

Some UBX messages use validity flag fields to indicate whether the values of some value fields are valid. For example, the UBX-NAV-PVT message has the validDate and validTime fields that indicate whether the date (year, month and day fields), and, respectively, the time (hour, min and sec fields) are valid. This means that these value fields will only contain meaningful data if the corresponding flag field is set (has the value 1).

#### 3.3.5 UBX data types

The following data types (number formats) are defined.

Name	Туре	Size (Bytes)	Range	Resolution
U1	unsigned 8-bit integer	1	02 <sup>8</sup> -1	1
I1	signed 8-bit integer, two's complement	1	-2 <sup>7</sup> 2 <sup>7</sup> -1	1
X1	8-bit bitfield	1	n/a	n/a
U2	unsigned little-endian 16-bit integer	2	02 <sup>16</sup> -1	1
12	signed little-endian 16-bit integer, two's complement	2	-2 <sup>15</sup> 2 <sup>15</sup> -1	1
X2	16-bit little-endian bitfield	2	n/a	n/a
U4	unsigned little-endian 32-bit integer	4	02 <sup>32</sup> -1	1
14	signed little-endian 32-bit integer, two's complement	4	-2 <sup>31</sup> 2 <sup>31</sup> -1	1
X4	32-bit little-endian bitfield	4	n/a	n/a



Name	Туре	Size (Bytes)	Range	Resolution
R4	IEEE 754 single (32-bit) precision	4	-2 <sup>127</sup> 2 <sup>127</sup>	~ value·2 <sup>-24</sup>
R8	IEEE 754 double (64-bit) precision	8	-2 <sup>1023</sup> 2 <sup>1023</sup>	~ value·2 <sup>-53</sup>
СН	ASCII / ISO 8859-1 char (8-bit)	1	n/a	n/a
U:n	unsigned bitfield value of <i>n</i> bits width	var.	variable	variable
I:n	signed (two's complement) bitfield value of <i>n</i> bits width	var.	variable	variable
S:n	signed bitfield value of <i>n</i> bits width, in sign (most significant bit) and magnitude (remaining bits) notation	var.	variable	variable

#### 3.3.6 UBX fields scale and unit

Fields in UBX messages can have a unit defined. Whenever possible, SI units and symbols are used (e.g. "m" for meters, "s" for seconds). For civil (UTC) time representation units of years (y), months (month), days (d), hours (h), minutes (min) and seconds (s) are used.

Fields in UBX messages can have a scale factor defined. Unity (factor 1) is assumed if no scale is specified. For integer type fields this is often combined with a unit. When a scale is combined with a unit, the scale represents the smallest storage unit. For example, if meters (m) are expressed (stored) in centimeters the scale would be 0.01 (or 1e-2). This is equivalent of specifying a unit of centimeters (cm) and no scale.

The description of some integer values (e.g. U2, I4 or I8) indicates a fixed-point format (e.g. [UU.FF], [IIIII.FFF] or [IIIIIII.FFFFFFFF]). The fixed-point value can be retrieved from the integer value by first casting it to appropriate type (e.g. as a floating-point number) and then scaling it with the indicated scaling factor.

#### 3.3.7 UBX repeated fields

There are two types of repetitions in UBX messages. The first type specifies that a single field is repeated a constant number of times. This repetition is defined in the type of the field. For example, the UBX message example can specify a field data of type U1[5]. In this case the data field should be interpreted as an array of five U1 values.

The second type of repetition in messages is referred to as *repeated groups*, which groups one or more fields into a block of payload data. There are several types of repetition:

- The number of repetitions of *variable-by-field group* is indicated by another, earlier field in the same message. The number of repetitions can be zero or more, depending on the value of the referenced field.
- A constant group has a constant number of repetitions.
- An *optional group* is repeated zero or one times, depending on the available payload data. That is, the fields are present in the message only if the payload of the message is large enough to cover the whole group of fields.
- The number of repetitions of a *variable-by-size* group is given by the available payload size. The group will repeat until there is not enough payload data left to cover the whole group of fields another time.



Note that only some combinations of repeated groups of fields are possible in a single message. See also UBX payload decoding.

#### 3.3.8 UBX payload decoding

UBX message payloads are designed so that the data (fields) can be extracted by a single pass through the payload from start to end. Fixed-size messages are the trivial case where the offset of all fields is unambiguously defined. Variable-size messages have variable number of repetitions of one or multiple groups of fields. For groups where the number of repetitions is given by the value of another field, that field can always be found at a fixed offset in the message payload before the respective group of fields. Groups whose number of repetitions depend on the payload size can only be the last group of fields in a message and only one such group may exist in a message. See also UBX repeated fields.

#### 3.4 UBX checksum

The checksum is calculated over the message, starting and including the class field up until, but excluding, the checksum fields (see the figure UBX frame structure).

The checksum algorithm used is the 8-bit Fletcher algorithm, which is used in the TCP standard RFC 1145). This algorithm works as follows:

- Buffer[N] is an array of bytes that contains the data over which the checksum is to be calculated.
- The two CK\_A and CK\_A values are 8-bit unsigned integers, only! If implementing with larger-sized integer values, make sure to mask both CK\_A and CK\_B with the value 0xff after both operations in the loop.
- After the loop, the two *U1* values contain the checksum, transmitted after the message payload, which concludes the frame.

# 3.5 UBX message flow

There are certain features associated with the messages being sent back and forth:

#### 3.5.1 UBX acknowledgement

When messages from the class CFG are sent to the receiver, the receiver will send an "acknowledge" (UBX-ACK-ACK) or a "not acknowledge" (UBX-ACK-NAK) message back to the sender, depending on whether or not the message was processed correctly.

Some messages from other classes also use the same acknowledgement mechanism.

#### 3.5.2 UBX polling mechanism

The UBX protocol is designed so that messages can be polled by sending the message required to the receiver but without a payload (or with just a single parameter that identifies the poll request). The receiver then responds with the same message with the payload populated.



# 3.6 GNSS, satellite, and signal numbering

See GNSS, satellite, and signal identifiers for details on how GNSS, satellites and signals are numbered in the UBX protocol.

# 3.7 UBX message example

This is an example of the definition of UBX messages as shown in the following sections.

Message O		EMO-EXAMPLE e demo message				
Type <b>2</b>	Periodic	:/polled				
Comment <b>©</b>	There ca		other se	ctions in	the demo example message. the documentation (such as: s here.	UBX protocol).
Message <b>o</b>	Header	Class ID Ler	ngth (by	tes)	Payload	Checksum
Structure	0xb5 0x	62 0x01 0x07 16	+ numRe	epeat*4	see below	CK_A CK_B
Payload de.	scription	∵ 6				
Byte offset	Туре	Name	Scale	Unit	Description	
0	U4	aField	-	-	a field that contains an uns no particular scale or unit	signed integer with
4	14	anotherField	1e-2	m	a field that contains a len with a scale of 1e-2 (= 0.0 centimeters	•
8	X2	bitfield 6	-	-	this field contains flags or one byte, whose definition not described are reserved.	follows below (bits
bit 0	U <sub>:1</sub>	aFieldValid	-	-	the first bit in bitfield ind aField is valid or not (se values)	
bit 1	U:1	someFlag	-	-	the second bit is a flag (1 =	true, 0 = false)
bits 52	U:4	aBitFieldValue	-	-	a 4-bits value (range: 015	5)
10	U1[5] <b>0</b>	reserved0	-	-	a reserved field, whose values (in output messages) or messages)	•
15	U1	numRepeat	-	-	number of repetitions in t below	the group of fields
Start of rep	eated gr	<b>roup (</b> numRepeat <b>ti</b>	mes) 🔞			
16 + n*4	12	someValue	-	-	a signed value in a repeated	d group of fields
18 + n*4	U2	anotherValue	-	-	another value in a repeated	group of fields
End of repe	ated gro	oup (numRepeat <b>tin</b>	nes)			

- The first line shows the message name (see Message naming). The second line shows a short description of the message.
- 2 The message type (see Message types).
- **©** This section contains comments that describe the message. Often links to other related sections in the documentation or other related messages are found here.



- The message structure gives the parameters for the UBX frame structure, notably the message class and message ID values and the payload length. For many messages the payload length is a fixed number (of bytes). Messages that contain repeated blocks of information (fields) have a variable payload (see UBX repeated fields).
- The message payload definition is given as a list of fields and their parameters. Each field starts at a specified offset (in bytes) in the payload (see also UBX structure packing), is of a specific type (see UBX data types), has a unique name (within the message), and a description. Optionally, fields can have a scale and/or a unit (see UBX fields scale and unit).
- **6** Bitfields ("X" types) are broken down into smaller parts. Each part can be one or more bits wide. Values that are two or more bits wide can be unsigned or one of two signed value representation (see UBX data types). Note that the ten unused bits 15...6 are not explicitly stated as UBX reserved elements.
- Fields can be arrays of values of the same type (see UBX repeated fields).
- **3** Groups of fields can be repeated in the payload. The number of repetitions can be given by another field in the message (this example), a constant number, zero or one times (known as "optional group"), or derived from the remaining payload size (labeled as "repeated N times"). See also UBX repeated fields and UBX payload decoding.

## 3.8 UBX messages overview

Message	Class/ID	Description (Type)
UBX-ACK – Acknowledge	ement and negat	tive acknowledgement messages
UBX-ACK-ACK	0x05 0x01	Message acknowledged (Output)
UBX-ACK-NAK	0x05 0x00	Message not acknowledged (Output)
UBX-CFG – Configuration	and command	messages
UBX-CFG-CFG	0x06 0x09	Clear, save and load configurations (Command)
UBX-CFG-OTP	0x06 0x41	Write file 0xA4: receiver configuration items (Set)
UBX-CFG-RST	0x06 0x04	Reset receiver / Clear backup data structures (Command)
UBX-CFG-SPT	0x06 0x64	Configure and start a sensor production test (Get/set)
UBX-CFG-VALDEL	0x06 0x8c	Delete configuration item values (Set)
		Delete configuration item values (with transaction) (Set)
UBX-CFG-VALGET	0x06 0x8b	Get configuration items (Poll request)
		Configuration items (Polled)
UBX-CFG-VALSET	0x06 0x8a	<ul> <li>Set configuration item values (Set)</li> </ul>
		Set configuration item values (with transaction) (Set)
UBX-ESF – External sens	or fusion messa	ges
UBX-ESF-ALG	0x10 0x14	IMU alignment information (Periodic/polled)
UBX-ESF-INS	0x10 0x15	Vehicle dynamics information (Periodic/polled)
UBX-ESF-MEAS	0x10 0x02	External sensor fusion measurements (Input/output)
UBX-ESF-RAW	0x10 0x03	Raw sensor measurements (Output)
UBX-ESF-RESETALG	0x10 0x13	<ul> <li>Reset the IMU-mount alignment and the Sensor fusion mode to initialization (Command)</li> </ul>
UBX-ESF-STATUS	0x10 0x10	External sensor fusion status (Periodic/polled)
UBX-INF – Information m	nessages	
UBX-INF-DEBUG	0x04 0x04	ASCII output with debug contents (Output)
UBX-INF-ERROR	0x04 0x00	ASCII output with error contents (Output)
UBX-INF-NOTICE	0x04 0x02	ASCII output with informational contents (Output)



Message	Class/ID	Description (Type)
UBX-INF-TEST	0x04 0x03	ASCII output with test contents (Output)
UBX-INF-WARNING	0x04 0x01	ASCII output with warning contents (Output)
UBX-MGA – GNSS assis	stance (A-GNSS) r	nessages
UBX-MGA-ACK	0x13 0x60	Multiple GNSS acknowledge message (Output)
UBX-MGA-BDS	0x13 0x03	BeiDou ephemeris assistance for satellites svld 137 (Input)
		BeiDou almanac assistance (Input)
		BeiDou health assistance (Input)  BeiDou HTO projector and (Input)  PaiDou HTO projector and (Input)
		<ul><li>BeiDou UTC assistance (Input)</li><li>BeiDou ionosphere assistance (Input)</li></ul>
UBX-MGA-DBD	0x13 0x80	Poll the navigation database (Poll request)
OBA MOA BBB	0.1.0 0.00	Navigation database dump entry (Input/output)
UBX-MGA-GAL	0x13 0x02	Galileo ephemeris assistance (Input)
		Galileo almanac assistance (Input)
		Galileo GPS time offset assistance (Input)
LIDY MOA CL C	0.100.00	Galileo UTC assistance (Input)
UBX-MGA-GLO	0x13 0x06	<ul><li>GLONASS ephemeris assistance (Input)</li><li>GLONASS almanac assistance (Input)</li></ul>
		GLONASS airrianac assistance (input)     GLONASS auxiliary time offset assistance (Input)
UBX-MGA-GPS	0x13 0x00	GPS ephemeris assistance (Input)
		GPS health assistance (Input)
		GPS UTC assistance (Input)
		GPS ionosphere assistance (Input)
UBX-MGA-INI	0x13 0x40	Initial position assistance XYZ (Input)
		<ul> <li>Initial position assistance LLH (Input)</li> <li>Initial time assistance UTC (Input)</li> </ul>
		Initial time assistance OTC (input)     Initial time assistance GNSS (Input)
		Initial clock drift assistance (Input)
		Initial frequency assistance (Input)
		Attitude initialization data (Input)
UBX-MGA-QZSS	0x13 0x05	QZSS ephemeris assistance (Input)
		<ul><li>QZSS almanac assistance (Input)</li><li>QZSS health assistance (Input)</li></ul>
UBX-MGA-SF	0x13 0x10	Sensor fusion initialization data (Input/output)
UBX-MON – Monitoring		Sensor rusion micialization data (input/output/
		Communication port information (Periodic/polled)
UBX-MON-COMMS	0x0a 0x36	
UBX-MON-GNSS	0x0a 0x28	Information message major GNSS selection (Polled)      Information message major GNSS selection (Polled)
UBX-MON-HW	0x0a 0x09	Hardware status (Periodic/polled)  - Syton ded headware status (Periodic/polled)
UBX-MON-HW2	0x0a 0x0b	Extended hardware status (Periodic/polled)      I/O pin status (Periodic/polled)
UBX-MON-HW3	0x0a 0x37	I/O pin status (Periodic/polled)      I/O system status (Periodic/polled)
UBX-MON-IO	0x0a 0x02	I/O system status (Periodic/polled)  Massaga pages and presses status (Periodic/polled)  Massaga pages and presses status (Periodic/polled)
UBX-MON-MSGPP	0x0a 0x06	Message parse and process status (Periodic/polled)
UBX-MON-PATCH	0x0a 0x27	Installed patches (Polled)  PE information (Polled)  PE information (Polled)
UBX-MON-RF	0x0a 0x38	RF information (Periodic/polled)  Paging the fifth a texture (Paging the first than 1)  Paging the fifth a texture (Paging the first than 1)  Paging the fifth a texture (Paging the first than 1)  Paging the first than 1 and
UBX-MON-RXBUF	0x0a 0x07	Receiver buffer status (Periodic/polled)
UBX-MON-RXR	0x0a 0x21	Receiver status information (Output)
UBX-MON-SPAN	0x0a 0x31	Signal characteristics (Periodic/polled)
UBX-MON-SPT	0x0a 0x2f	Sensor production test (Polled)
UBX-MON-SYS	0x0a 0x39	Current system performance information (Periodic/polled)
UBX-MON-TXBUF	0x0a 0x08	Transmitter buffer status (Periodic/polled)



Message	Class/ID	D	escription (Type)
UBX-MON-VER	0x0a 0x04	•	Poll receiver and software version (Poll request)
		•	Receiver and software version (Polled)
UBX-NAV – Navigation sol	ution message	S	
UBX-NAV-ATT	0x01 0x05	•	Attitude solution (Periodic/polled)
UBX-NAV-CLOCK	0x01 0x22	•	Clock solution (Periodic/polled)
UBX-NAV-COV	0x01 0x36	•	Covariance matrices (Periodic/polled)
UBX-NAV-DOP	0x01 0x04	•	Dilution of precision (Periodic/polled)
UBX-NAV-EELL	0x01 0x3d	•	Position error ellipse parameters (Periodic/polled)
UBX-NAV-EOE	0x01 0x61	•	End of epoch (Periodic)
UBX-NAV-HPPOSECEF	0x01 0x13	•	High precision position solution in ECEF (Periodic/polled)
UBX-NAV-HPPOSLLH	0x01 0x14	•	High precision geodetic position solution (Periodic/polled)
UBX-NAV-ORB	0x01 0x34	•	GNSS orbit database info (Periodic/polled)
UBX-NAV-PL	0x01 0x62	•	Protection level information (Periodic)
UBX-NAV-POSECEF	0x01 0x01	•	Position solution in ECEF (Periodic/polled)
UBX-NAV-POSLLH	0x01 0x02	•	Geodetic position solution (Periodic/polled)
UBX-NAV-PVAT	0x01 0x17	•	Navigation position velocity attitude time solution (Periodic/polled)
UBX-NAV-PVT	0x01 0x07	•	Navigation position velocity time solution (Periodic/polled)
UBX-NAV-RELPOSNED	0x01 0x3c	•	Relative positioning information in NED frame (Periodic/polled)
UBX-NAV-SAT	0x01 0x35	•	Satellite information (Periodic/polled)
UBX-NAV-SBAS	0x01 0x32	•	SBAS status data (Periodic/polled)
UBX-NAV-SIG	0x01 0x43	•	Signal information (Periodic/polled)
UBX-NAV-STATUS	0x01 0x03	•	Receiver navigation status (Periodic/polled)
UBX-NAV-TIMEBDS	0x01 0x24	•	BeiDou time solution (Periodic/polled)
UBX-NAV-TIMEGAL	0x01 0x25	•	Galileo time solution (Periodic/polled)
UBX-NAV-TIMEGLO	0x01 0x23	•	GLONASS time solution (Periodic/polled)
UBX-NAV-TIMEGPS	0x01 0x20	•	GPS time solution (Periodic/polled)
UBX-NAV-TIMELS	0x01 0x26	•	Leap second event information (Periodic/polled)
UBX-NAV-TIMENAVIC	0x01 0x63	•	NavIC time solution (Periodic/polled)
UBX-NAV-TIMEQZSS	0x01 0x27	•	QZSS time solution (Periodic/polled)
UBX-NAV-TIMEUTC	0x01 0x21	•	UTC time solution (Periodic/polled)
UBX-NAV-VELECEF	0x01 0x11	•	Velocity solution in ECEF (Periodic/polled)
UBX-NAV-VELNED	0x01 0x12	•	Velocity solution in NED frame (Periodic/polled)
UBX-NAV2 – Navigation s	olution messag	es (S	
UBX-NAV2-CLOCK	0x29 0x22	•	Clock solution (Periodic/polled)
UBX-NAV2-COV	0x29 0x36	•	Covariance matrices (Periodic/polled)
UBX-NAV2-DOP	0x29 0x04	•	Dilution of precision (Periodic/polled)
UBX-NAV2-EELL	0x29 0x3d	•	Position error ellipse parameters (Periodic/polled)
UBX-NAV2-EOE	0x29 0x61	•	End of epoch (Periodic)
UBX-NAV2-POSECEF	0x29 0x01	•	Position solution in ECEF (Periodic/polled)
UBX-NAV2-POSLLH	0x29 0x02	•	Geodetic position solution (Periodic/polled)
UBX-NAV2-PVAT	0x29 0x17	•	Navigation position velocity attitude time solution (Periodic/polled)
UBX-NAV2-PVT	0x29 0x07	•	Navigation position velocity time solution (Periodic/polled)
UBX-NAV2-SAT	0x29 0x35	•	Satellite information (Periodic/polled)
			real terms of the second for the sec



Message	Class/ID	Description (Type)
UBX-NAV2-SIG	0x29 0x43	Signal information (Periodic/polled)
UBX-NAV2-STATUS	0x29 0x03	Receiver navigation status (Periodic/polled)
UBX-NAV2-TIMEBDS	0x29 0x24	BeiDou time solution (Periodic/polled)
UBX-NAV2-TIMEGAL	0x29 0x25	Galileo time solution (Periodic/polled)
UBX-NAV2-TIMEGLO	0x29 0x23	GLONASS time solution (Periodic/polled)
UBX-NAV2-TIMEGPS	0x29 0x20	GPS time solution (Periodic/polled)
UBX-NAV2-TIMELS	0x29 0x26	Leap second event information (Periodic/polled)
UBX-NAV2-TIMENAVIC	0x29 0x63	NavIC time solution (Periodic/polled)
UBX-NAV2-TIMEUTC	0x29 0x21	UTC time solution (Periodic/polled)
UBX-NAV2-VELECEF	0x29 0x11	Velocity solution in ECEF (Periodic/polled)
UBX-NAV2-VELNED	0x29 0x12	Velocity solution in NED frame (Periodic/polled)
UBX-RXM - Receiver man	ager messages	
UBX-RXM-COR	0x02 0x34	Differential correction input status (Output)
UBX-RXM-MEASX	0x02 0x14	Satellite measurements for RRLP (Periodic/polled)
UBX-RXM-PMP	0x02 0x72	PMP (LBAND) message (Input)
UBX-RXM-PMREQ	0x02 0x41	Power management request (Command)
UBX-RXM-QZSSL6	0x02 0x73	QZSS L6 message (Input)
UBX-RXM-RAWX	0x02 0x15	Multi-GNSS raw measurements (Periodic/polled)
UBX-RXM-RLM	0x02 0x59	<ul><li>Galileo SAR short-RLM report (Output)</li><li>Galileo SAR long-RLM report (Output)</li></ul>
UBX-RXM-RTCM	0x02 0x32	RTCM input status (Output)
UBX-RXM-SFRBX	0x02 0x13	Broadcast navigation data subframe (Output)
UBX-RXM-SPARTN	0x02 0x33	SPARTN input status (Output)
UBX-RXM-SPARTNKEY	0x02 0x36	<ul> <li>Poll installed keys (Poll request)</li> <li>Transfer dynamic SPARTN keys (Input/output)</li> </ul>
UBX-SEC - Security mess	ages	
UBX-SEC-SIG	0x27 0x09	Signal security information (Periodic/polled)
UBX-SEC-SIGLOG	0x27 0x10	Signal security log (Periodic/polled)
UBX-SEC-UNIQID	0x27 0x03	Unique chip ID (Output)
UBX-TIM - Timing messag	ges	
UBX-TIM-TM2	0x0d 0x03	Time mark data (Periodic/polled)
UBX-TIM-TP	0x0d 0x01	Time pulse time data (Periodic/polled)
UBX-TIM-VRFY	0x0d 0x06	Sourced time verification (Periodic/polled)
UBX-UPD – Firmware upda	ate messages	
UBX-UPD-SOS	0x09 0x14	<ul> <li>Poll backup restore status (Poll request)</li> <li>Create backup in flash (Command)</li> <li>Clear backup in flash (Command)</li> <li>Backup creation acknowledge (Output)</li> <li>System restored from backup (Output)</li> </ul>

# 3.9 UBX-ACK (0x05)

The messages in the UBX-ACK class are used to indicate acknowledgement or rejection (i.e. negative acknowledgement) of input messages, such as UBX-CFG messages.

## 3.9.1 UBX-ACK-ACK (0x05 0x01)



#### 3.9.1.1 Message acknowledged

Message	UBX-ACK-ACK												
	Message	acknowle	dged										
Туре	Output												
Comment	Output up		ssing o	f an input mes	sage. A UE	3X-ACK-ACK is se	ent as soon as possik	ole but at least within					
Message	Header	Class	ID	Length (Byte	es)		Payload	Checksum					
structure	0xb5 0x62	2 0x05	0x01	2			see below	CK_A CK_B					
Payload desc	ription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	clsID		-	-	Class ID of th	ne Acknowledged Me	essage					
1	U1	msgID		-	-	Message ID	of the Acknowledged	d Message					

### 3.9.2 UBX-ACK-NAK (0x05 0x00)

#### 3.9.2.1 Message not acknowledged

Message	UBX-ACK	UBX-ACK-NAK												
	Message	not ackn	owledg	ed										
Туре	Output													
Comment	Output up	•	ssing of	f an input mes	ssage. A UE	X-ACK-NAK is sent as	s soon as poss	ible but at least within						
Message	Header	Header Class ID			es)	Pay	load	Checksum						
structure	0xb5 0x6	2 0x05	0x00	2		see	below	CK_A CK_B						
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U1	clsID		-	-	Class ID of the No	t-Acknowledg	ed Message						
1	U1	msgID		-	-	Message ID of the	Not-Acknowl	edged Message						

# 3.10 UBX-CFG (0x06)

The messages in the UBX-CFG class are used to configure the receiver and poll current configuration values as well as for sending commands to the receiver. Unless stated otherwise, any message in this class sent to the receiver is either acknowledged (by a UBX-ACK-ACK message) if processed successfully or rejected (with a UBX-ACK-NAK message) if processed unsuccessfully.

### 3.10.1 UBX-CFG-CFG (0x06 0x09)

#### 3.10.1.1 Clear, save and load configurations

Message	UBX-CFG-CFG								
	Clear, save and load configurations								
Туре	Command								
Comment	See Receiver configuration for a detailed description on how receiver configuration should be used. The behavior of this message has changed for protocol versions greater than 23.01. Use UBX-CFG-VALSET and UBX-CFG-VALDEL with the appropriate layers instead. These new messages support selective saving and clearing to retain the behavior removed from this message. The three masks which were used to clear, save and load a subsection of configuration have lost their meaning. It is no longer possible to save or clear a subsection of the configuration using this message. The behavior of the masks is now:  • if any bit is set in the clearMask: all configuration in the selected non-volatile memory is deleted								

- if any bit is set in the saveMask: all current configuration is stored (copied) to the selected layers



 if any bit is set in the loadMask: The current configuration is discarded and rebuilt from all the lower layers

Note that commands can be combined. The sequence of execution is clear, save, then load. The receiver replies with a single UBX-ACK-ACK or UBX-ACK-NAK. A UBX-ACK-ACK indicates that all operations were successful. A UBX-ACK-NAK indicates that at least one of the configured operations was unsuccessful. It is recommended to send individual commands for a more comprehensive monitoring of the success or not of the individual operations.

ℑ Old functionality of this message is not available in protocol versions greater than 23.01. Use UBX-CFG-VALSET, UBX-CFG-VALGET, UBX-CFG-VALDEL instead.

Payload Checksum			
see below CK_A CK_B			
Description			
Mask for configuration to clear			
Clear all saved configuration from the selected nor volatile memory if any bit is set			
Mask for configuration to save			
Save all current configuration to the selected nor volatile memory if any bit is set			
Mask for configuration to load			
Discard current configuration and rebuilt it from lo non-volatile memory layers if any bit is set			
Mask which selects the memory devices for savin and/or clearing operation			
Note that if a deviceMask is not provided, the receive defaults the operation requested to battery-backe RAM (BBR) and Flash (if available)			
Battery-backed RAM			
Flash			
EEPROM (only supported for protocol versions lesthan 14.00)			
SPI Flash (only supported for protocol versions les than 14.00)			

### 3.10.2 UBX-CFG-OTP (0x06 0x41)

#### 3.10.2.1 Write file 0xA4: receiver configuration items

Message	UBX-CFG-OTP									
	Write file 0xA4: receiver configuration items									
Туре	Set									
Comment	Writes the configuration data (key ID and value) for one or more configuration items to the OTP memory. Any supported configuration item can be set this way, provided there is enough free OTP memory available.									
	It is possible to write multiple files of this type. However, each file on the OTP memory has its own header, which consumes memory. To reduce memory usage, combine the configurations of multiple items into a single file.									
	The same configuration item can be set more than once. In such a case, only the latest value is effective.									
	Configuration in the OTP memory is permanent and has limited space. Verify the configuration in advance and check the available space before writing the final configuration to the OTP memory.									



For details, see section OTP memory in the Integration manual.

Message	Header	Class	ID	Length (Byte.	s)		Payload		Checksu	ım		
structure	0xb5 0x62	0x06	0x41	12 + [0n]			see below			CK_A CK_B		
Payload desc	ription:											
Byte offset	Туре І	Name		Scale	Unit	Description						
0	U1[12]	cfgHead	eader -		-	File header: message.	use u-center	tool t	compose	the		
Start of repe	ated group (N	V times)										
12 + n	U1 d	cfgData		-	-	Configuration	data (key and	value pa	airs)			

## 3.10.3 UBX-CFG-RST (0x06 0x04)

### 3.10.3.1 Reset receiver / Clear backup data structures

Message	UBX-CFG-RST											
	Reset receiver / Clear backup data structures											
Туре	Command	t										
Comment	Do not expect this message to be acknowledged by the receiver.  Newer FW version will not acknowledge this message at all.  Older FW version will acknowledge this message but the acknowledge may not be sent completely before the receiver is reset.											
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x62	2 0x06	0x04	4		see below	CK_A CK_B					
Payload descr	iption:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	X2	navBbrM	lask	-	-	<ul> <li>BBR sections to clear. The following</li> <li>0x0000 Hot start</li> <li>0x0001 Warm start</li> <li>0xFFFF Cold start</li> </ul>	g special sets apply					
bit 0	U <sub>:1</sub>	eph		-	-	Ephemeris						
bit 1	U <sub>:1</sub>	alm		-	- Almanac							
bit 2	U <sub>:1</sub>	health		-	-	Health						
bit 3	U <sub>:1</sub>	klob		-	-	Klobuchar parameters						
bit 4	U <sub>:1</sub>	pos		-	-	Position						
bit 5	U <sub>:1</sub>	clkd		-	-	Clock drift						
bit 6	U <sub>:1</sub>	osc		-	-	Oscillator parameter						
bit 7	U <sub>:1</sub>	utc		-	-	UTC correction + GPS leap seconds	s parameters					
bit 8	U <sub>:1</sub>	rtc		-	-	RTC						
bit 11 U:1 sfdr			dr			SFDR Parameters (only available on the ADR/UD HPS product variant) and weak signal compensati estimates						
bit 12	U <sub>:1</sub>	vmon		-	-	SFDR Vehicle Monitoring Paramet the ADR/UDR/HPS product variant						
bit 13	U <sub>:1</sub>	tct		-	-	TCT Parameters (only available on product variant)	the ADR/UDR/HPS					



	bit 15 U:1	aop	 Autonomous orbit parameters
2	U1	resetMode	 - Reset Type
			<ul> <li>0x00 = Hardware reset (watchdog) immediately</li> <li>0x01 = Controlled software reset</li> <li>0x02 = Controlled software reset (GNSS only)</li> <li>0x04 = Hardware reset (watchdog) after shutdown</li> <li>0x08 = Controlled GNSS stop</li> <li>0x09 = Controlled GNSS start</li> </ul>
3	U1	reserved0	 Reserved

### 3.10.4 UBX-CFG-SPT (0x06 0x64)

#### 3.10.4.1 Configure and start a sensor production test

Message	UBX-CFG-SPT												
	Configur	e and sta	rt a sen	sor production	n test								
Туре	Get/set												
Comment	The production test uses the built-in self-test capabilities of an attached sensor.												
	This mes	This message is only supported if a sensor is directly connected to the u-blox receiver.											
Message structure	Header	Class	: ID	Length (Byte	es)	Payload	Checksum						
	0xb5 0x6	2 0x06	0x64	12		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	versio	n	-	-	Message version (0x00 for this ve	ersion)						
1	U1	reserv	ed0	Reserved		Reserved							
2	U2	sensor	Id			ID of the sensor to be tested; se defined IDs	e UBX-MON-SPT for						
4	U1[8]	reserv	ed1	-	-	Reserved							

### 3.10.5 UBX-CFG-VALDEL (0x06 0x8c)

#### 3.10.5.1 Delete configuration item values

Message	UBX-CFG-VALDEL									
	Delete configuration item values									
Туре	Set									
Comment	Overview:									
	• This message can be used to delete saved configuration to effectively revert the item values to defaults.									
	<ul> <li>This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.</li> </ul>									
	• This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.									

- This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of UBX-CFG-VALDEL that supports transactions.
- This message does not check if the resulting configuration is valid.
- · See Receiver configuration for details.

This message returns a UBX-ACK-NAK and no configuration is applied:

- $\bullet \quad$  if any key is unknown to the receiver FW
- if the layer's bitfield does not specify a layer to delete a value from.

#### Notes

• If a key is sent multiple times within the same message, the value is effectively deleted only once.



- Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.
- The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value constitutes a deletion request for one key-value pair. A key value with a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a deletion request for all items in the specified group. A key with a value of 0xfff in the group part of the key value (bits 16-27) is a deletion request for all items known to the receiver in all groups.

Message		Header		Class	ID	Len	gth (Byte:	s)	Payload	Checksum
structure		0xb5 0x62		0x06	0x8c	4 + [0n]·4			see below	CK_A CK_B
Payload description:										
Byte offset	t	Type	N	ame			Scale	Unit	Description	
0		U1	V	ersion			-	-	Message version (0x00 for this version)	
1		X1	1	ayers			-	-	The layers where the configuration shoul from	d be deleted
i	bit 1	U <sub>:1</sub>	b	br			-	-	Delete configuration from the BBR layer	
i	bit 2	U <sub>:1</sub>	f	lash			-	-	Delete configuration from the Flash layer	
2		U1[2]	r	eserve	d0		-	-	Reserved	
Start of re	pea	ted group	(N	times)						
4 + n·4		U4	k	eys			-	-	Configuration key IDs of the configuration deleted	n items to be
End of rep	eate	ed group	(N t	imes)						

#### 3.10.5.2 Delete configuration item values (with transaction)

Message	UBX-CFG-VALDEL								
	Delete configuration item values (with transaction)								
Туре	Set								
Commont	Output install								

- Comment Overview:
  - This message can be used to delete saved configuration to effectively revert them to defaults.
  - This message can delete saved configuration from the flash configuration layer and the BBR configuration layer. The changes will not be effective until these layers are loaded into the RAM layer.
  - This message is limited to containing a maximum of 64 keys up for deletion; i.e. N is a maximum of 64.
  - This message can be used multiple times with the result being managed within a transaction.
  - This message does not check if the resulting configuration is valid.
  - See Receiver configuration for details.
  - See version 0 of UBX-CFG-VALDEL for simplified version of this message.

This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:

- if any key within a transaction is unknown to the receiver FW
- if an invalid transaction state transition is requested
- if the layer's bitfield changes within a transaction
- if the layer's bitfield does not specify a layer to delete a value from.

#### Notes:

- Any request for another UBX-CFG- message type (including UBX-CFG-VALSET and UBX-CFG-VALGET) will cancel any started transaction, and no configuration is applied.
- This message can be sent with no keys to delete for the purposes of managing the transaction state transition.
- If a key is sent multiple times within the same message or within the same transaction, the value is effectively deleted only once.
- Attempting to delete items that have not been set before, or that have already been deleted, is considered a valid request.
- The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value constitutes a deletion request for one key-value pair. A key value with a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a deletion request for all items in the specified group. A key with a value of 0xfff in the group part of the key value (bits 16-27) is a deletion request for all items known to the receiver in all groups.



Message	Header	Clas	s ID	Length (Byte	s)	Payload	Checksum
structure	0xb5 0x62	2 0x0	6 0x8	c 4 + [0n]·4		see below	CK_A CK_B
Payload descr	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	versi	on	-	_	Message version (0x01 for this vers	ion)
1	X1	layer	5	-	-	The layers where the configuration from	should be delete
bit 1	U <sub>:1</sub>	bbr		-	-	Delete configuration from the BBR I	ayer
bit 2	U <sub>:1</sub>	flash		-	-	Delete configuration from the Flash	layer
2	X1	trans	action	-	-	Transaction action to be applied:	
bits 10	U <sub>:2</sub>	actio	า	-	-	Transaction action to be applied:	
						• 0 = Transactionless UBX-CFG-V	ALDEL: In the
						next UBX-CFG-VALDEL, it can b	e either 0 or 1.
						If a transaction has not yet beer	started, the
						incoming configuration is applie	d. If a transaction
						has already been started, cance	ls any started
						transaction and the incoming co	onfiguration is
						applied.	
						• 1 = (Re)Start deletion transaction	on: In the next
						UBX-CFG-VALDEL, it can be eitl	ner 0, 1, 2 or
						3. If a transaction has not yet be	en started, a
						transaction will be started. If a t	ransaction has
						already been started, restarts tl	ne transaction,
						effectively removing all previous	non-applied UBX
						CFG-VALDEL messages.	
						• 2 = Deletion transaction ongoing	g: In the next UBX
						CFG-VALDEL, it can be either 0,	
						<ul> <li>3 = Apply and end a deletion tra</li> </ul>	nsaction: In the
						next UBX-CFG-VALDEL, it can b	
3	U1	reser	ved0	-	-	Reserved	
Start of repea	ted group (	N times	:)				
4 + n·4	U4	keys		-	-	Configuration key IDs of the configuration ke	ıration items to b
End of repeat	ed group (N	l times)					
•							

# 3.10.6 UBX-CFG-VALGET (0x06 0x8b)

### 3.10.6.1 Get configuration items

UBX-CFG-VALGET Get configuration items								
Overview:								
• This message is used to get configuration values by providing a list of configuration key IDs, which identify the configuration items to retrieve.								
• This message can specify the configuration layer where the values of the specified configuration items are retrieved from.								
This message is limited to containing a maximum of 64 key IDs.								
See Receiver configuration for details.								
_								



This message returns a UBX-ACK-NAK:

- · if any key is unknown to the receiver FW
- if the layer field specifies an invalid layer to get the value from
- if the keys array specifies more than 64 key IDs.

#### Notes:

- If a value is requested multiple times within the same poll request, then the reply will contain it multiple times.
- The provided keys can be complete key values (group and item specifiers) or wild-card specifications. A complete key value will constitute a request for one key-value pair. A key value that has a valid group specifier and 0xffff in the item part of the key value (bits 0-15) constitutes a request for all items in the specified group. A key with a value of 0xfff in the group part of the key value (bits 16-27) is a request for all items known to the receiver in all groups.
- The response message is limited to containing a maximum of 64 key-value pairs. If there are wild-card
  specifications then there may be more than 64 possible responses. In order to handle this, the 'position'
  field can specify that the response message should skip this number of key-value pairs before it starts
  constructing the message. This allows a large set of values to be retrieved 64 at a time. If the response
  contains less than 64 key-value pairs then all values have been reported, otherwise there may be more to
  read.
- It is not possible to retrieve configuration values for the same configuration item from multiple configuration layers. Separate poll requests must be made for each desired layer.

Header	Class	ID	Length (Bytes	5)	Payload	Checksum
0xb5 0x62	0x06	0x8b	4 + [0n]·4		see below	CK_A CK_B
ription:						
Type N	Vame		Scale	Unit	Description	
U1 7	version	Į.	-	-	Message version (0x00 for this ve	rsion)
U1 <u>1</u>	Layer		-	-	The layer from which the configu be retrieved:  • 0 - RAM layer  • 1 - BBR layer  • 2 - Flash layer  • 7 - Default layer	ration items should
U2 p	ositio	n	-	-	Skip this many key values before omessage	constructing output
ated group (N	I times)					
U4 k	ceys		-	-	Configuration key IDs of the configuration ke	guration items to be
	Oxb5 0x62  Type M U1 T U1 T U2 F atted group (N	Oxb5 Ox62 Ox06  Tription: Type Name U1 version U1 layer  U2 position	Oxb5 0x62 Ox06 Ox8b  ription: Type Name  U1 version  U1 layer  U2 position  atted group (N times)	Oxb5 0x62         0x06         0x8b         4 + [0n]·4           tription:         Type         Name         Scale           U1         version         -           U1         layer         -           U2         position         -           ated group (N times)	Oxb5 0x62         Ox06         Ox8b         4 + [0n]·4           Type         Name         Scale         Unit           U1         version         -         -           U1         layer         -         -           U2         position         -         -           ated group (N times)	Oxb5 0x62

#### 3.10.6.2 Configuration items

Message	UBX-CFG-VALGET											
	Configurat	tion item	s									
Туре	Polled											
Comment	This mess	This message is output by the receiver to return requested configuration data (key and value pairs).										
	See Receiver configuration for details.											
Message	Header	Class	ID	Length (Bytes)			Payload	Checksum				
structure	0xb5 0x62	0x06	0x8b	4 + [0n]			see below	CK_A CK_B				
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U1	version	ı	-	-	Message ver	sion (0x01 for this v	ersion)				



4 + n	U1	cfgData	 Configuration data (key and value pairs)
Start of re	epeated gro	up (N times)	
2	U2	position	 Number of configuration items skipped in the result set before constructing this message (mirrors the equivalent field in the request message)
1	U1	layer	 The layer from which the configuration item was retrieved:  • 0 - RAM layer  • 1 - BBR  • 2 - Flash  • 7 - Default

# 3.10.7 UBX-CFG-VALSET (0x06 0x8a)

### 3.10.7.1 Set configuration item values

Message	UBX-CFG-VALSET									
	Set configuration item values									
Туре	Set									
Comment	Overview:									
	<ul> <li>This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.</li> </ul>									
	This message is limited to containing a maximum of 64 key-value pairs.									
	<ul> <li>This message can be used multiple times and every time the result will be applied immediately. To send this message multiple times with the result being applied at the end, see version 1 of UBX-CFG-VALSET that supports transactions.</li> </ul>									
	See Receiver configuration for details.									
	This message returns a UBX-ACK-NAK and no configuration is applied:									
	if any key is unknown to the receiver FW									
	if the layer's bitfield does not specify a layer to save a value to									
	<ul> <li>if the requested configuration is not valid. The validity of a configuration is checked only if the message requests to apply the configuration to the RAM configuration layer.</li> </ul>									
	Notes:									
	• If a key is sent multiple times within the same message, then the value eventually being applied is the last sent.									

Message structure		Header 0xb5 0x62		Class	ID	Ler	ngth (Bytes	5)	Payload	Checksum
				0x06	0x8a	4+	[0n]		see below	CK_A CK_B
Payload o	descr	iption:								
Byte offs	et	Type	N	ame			Scale	Unit	Description	
0		U1	ve	ersion			-	-	Message version (0x00 for this ve	ersion)
1		X1	lá	ayers			-	-	The layers where the configuration	n should be applied
	bit 0	U <sub>:1</sub>	ra	am			-	-	Update configuration in the RAM	layer
	bit 1	U <sub>:1</sub>	bk	or			-	-	Update configuration in the BBR	layer
	bit 2	U <sub>:1</sub>	f	Lash			-	-	Update configuration in the Flash	layer
2		U1[2]	re	eserve	d0		-	-	Reserved	
Start of r	ереа	ted group	(N	times)						
4 + n		U1	ci	EgData			-	-	Configuration data (key and value	e pairs)
End of re	peate	ed group (	'N ti	mes)						



#### 3.10.7.2 Set configuration item values (with transaction)

Message	UBX-CFG-VALSET
	Set configuration item values (with transaction)
Туре	Set
Comment	Overview:

- This message is used to set a configuration by providing configuration data (a list of key and value pairs), which identify the configuration items to change, and their new values.
- This message is limited to containing a maximum of 64 key-value pairs.
- This message can be used multiple times with the result being managed within a transaction. Within a transaction there is no limit on the number key-value pairs; a transaction is effectively limited to the number of known keys.
- · See Receiver configuration for details.

Class ID

• See version 0 of UBX-CFG-VALSET for simplified version of this message.

This message returns a UBX-ACK-NAK, cancels any started transaction, and no configuration is applied:

- if any key within a transaction is unknown to the receiver FW
- if an invalid transaction state transition is requested
- if the layer's bitfield changes within a transaction
- · if the layer's bitfield does not specify a layer to save a value to

This message returns a UBX-ACK-NAK, and no configuration is applied:

Length (Bytes)

if the requested configuration is not valid. While in a transaction context, only the last message that
requests to apply the transaction returns a UBX-ACK-NAK. The validity of a configuration is checked
only if the message requests to apply the configuration to the RAM configuration layer. This also applies
to a transactionless request.

#### Notes:

Header

Message

- Any request for another UBX-CFG-message type (including UBX-CFG-VALDEL and UBX-CFG-VALGET)
  will cancel any started transaction, and no configuration is applied.
- This message can be sent with no key/values to set for the purposes of managing the transaction state transition.

Payload

• If a key is sent multiple times within the same message or within the same transaction, then the value eventually being applied is the last sent.

Message							
structure	0xb5 0	x62 0x06 0x8a	4 + [0n]	<u> </u>	see below CK_A CK_E		
Payload desci	ription:						
Byte offset	Type	Name	Scale	Unit	Description		
0	U1	version	-	-	Message version (0x01 for this version)		
1	X1	layers	-	-	The layers where the configuration should be applied		
bit 0	U:1	ram	-	-	Update configuration in the RAM layer		
bit 1	U <sub>:1</sub>	bbr	-	-	Update configuration in the BBR layer		
bit 2	U <sub>:1</sub>	flash	-	-	Update configuration in the Flash layer		
2	U1	transaction	-	-	Transaction action to be applied		
bits 10	U <sub>:2</sub>	action	-	-	Transaction action to be applied:		
					• 0 = Transactionless UBX-CFG-VALSET: In the		
					next UBX-CFG-VALSET, it can be either 0 or 1.		
					If a transaction has not yet been started, the		
					incoming configuration is applied (if valid). If a		
					transaction has already been started, cancels		
					any started transaction and the incoming		
					configuration is applied (if valid).		
					• 1 = (Re)Start set transaction: In the next		
					UBX-CFG-VALSET, it can be either 0, 1, 2 or		

3. If a transaction has not yet been started, a

Checksum



transaction will be started. If a transaction has already been started, restarts the transaction, effectively removing all previous non-applied UBX-CFG-VALSET messages.

- 2 = Set transaction ongoing: In the next UBX-CFG-VALSET, it can be either 0, 1, 2 or 3.
- 3 = Apply and end a set transaction: In the next UBX-CFG-VALSET, it can be either 0 or 1.

3	U1	reserved0	-	-	Reserved					
Start of repeated group (N times)										
4 + n	U1	cfgData	-	-	Configuration data (key and value pairs)					
End of rep	peated grou	p (N times)								

# 3.11 UBX-ESF (0x10)

The messages in the UBX-ESF class are used to output external sensor fusion information from the receiver.

### 3.11.1 UBX-ESF-ALG (0x10 0x14)

#### 3.11.1.1 IMU alignment information

Message		UBX-ESF-	-ALG										
		IMU align	ment info	rmatio	n								
Туре		Periodic/p	olled										
Comment		This message outputs the IMU alignment angles which define the rotation from the installation-frame to the IMU-frame. In addition, it indicates the automatic IMU-mount alignment status.											
Message		Header	Class	ID	Length (Byte	es)	Payload	Checksum					
structure		0xb5 0x62	2 0x10	0x14	16		see below	CK_A CK_B					
Payload de	escr	iption:											
Byte offse	t	Type	Name		Scale	Unit	Description						
0		U4	iTOW		-	ms	GPS time of week of the navigation epoch.						
							See section iTOW timestamps in the integration manual for details.						
4		U1	version		-	-	Message version (0x01 for this ver	sion)					
5		U1 flags			-	-	Flags						
ı	bit 0	U <sub>:1</sub>	U:1 autoMntAlgOn			-	Automatic IMU-mount alignme automatic alignment is not runi alignment is running)						
bits 3	U:3 status				-	-	Status of the IMU-mount alignme fixed angles are used, 1: IMU-mou alignment is ongoing, 2: IMU-mangles alignment is ongoing, 3: alignment are used, 4: fine IMU-mused)	nt roll/pitch angles ount roll/pitch/yaw coarse IMU-mount					
6		U1	error		-	-	Flags						
ı	bit 0	U <sub>:1</sub>	tiltAlg	Error	-	-	IMU-mount tilt (roll and/or pitch) al error, 1: error)	gnment error (0: no					
ı	bit 1	U:1	yawAlgE	rror	-	-	IMU-mount yaw alignment error (0	: no error, 1: error)					



	bit 2 U:1	angleError	-	-	IMU-mount misalignment Euler angle singularity error (0: no error, 1: error). If this error bit is set, the IMU-mount roll and IMU-mount yaw angles cannot uniquely be defined due to the singularity issue happening with installations mounted with a +/- 90 degrees misalignment around pitch axis. This is also known as the 'gimbal-lock' problem affecting rotations described by Euler angles.
7	U1	reserved0	-	-	Reserved
8	U4	yaw	1e-2	deg	IMU-mount yaw angle [0, 360]
12	12	pitch	1e-2	deg	IMU-mount pitch angle [-90, 90]
14	12	roll	1e-2	deg	IMU-mount roll angle [-180, 180]

# 3.11.2 UBX-ESF-INS (0x10 0x15)

### 3.11.2.1 Vehicle dynamics information

Message	UBX-ESF-INS Vehicle dynamics information								
Туре	Periodic/polled								
Comment	This message outputs information about the vehicle dynamics.  The output dynamics information (angular rates and accelerations) are expressed with respect to the vehicle-frame.								
Message	Header	Class	ID	Length (Byt	tes)	Payload	Checksum		
structure	0xb5 0x6	2 0x10	0x15	36		see below	CK_A CK_B		
Payload descr	ription:								
Byte offset	Type	Name		Scale	Unit	Description			
0	U4	bitfiel	.d0	-	-	Bitfield			
bits 70	U <sub>:8</sub>	version	1	-	-	Message version (0x01 for this ve	ersion)		
bit 8	U <sub>:1</sub>	xAngRateValid		-	-	Compensated x-axis angular rate not valid, 1: valid).	data validity flag (0:		
bit 9	U:1	yAngRateValid		_	-	Compensated y-axis angular rate data validity flag (0: not valid, 1: valid).			
bit 10	U:1	zAngRat	eValid	-	-	Compensated z-axis angular rate not valid, 1: valid).	data validity flag (0:		
bit 11	U:1	xAccelValid		-	-	Compensated x-axis acceleration not valid, 1: valid).	data validity flag (0:		
bit 12	U <sub>:1</sub>	yAccelV	alid	-	-	Compensated y-axis acceleration not valid, 1: valid).	data validity flag (0:		
bit 13	U <sub>:1</sub>	zAccelV	alid	-	-	Compensated z-axis acceleration not valid, 1: valid).	data validity flag (0:		
4	U1[4]	reserve	ed0	-	-	Reserved			
8	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.		
						See section iTOW timestamps manual for details.	in the integration		
12	14	xAngRat	e	1e-3	deg/s	Compensated x-axis angular rate	•		
16	14	yAngRat	e	1e-3	deg/s	Compensated y-axis angular rate			
20	14	zAngRat	e	1e-3	deg/s	Compensated z-axis angular rate			
24	14	xAccel		1e-2	m/s^2	Compensated x-axis acceleration	(gravity-free).		



28	14	yAccel	1e-2	m/s^2	Compensated y-axis acceleration (gravity-free).
32	14	zAccel	1e-2	m/s^2	Compensated z-axis acceleration (gravity-free).

## 3.11.3 UBX-ESF-MEAS (0x10 0x02)

#### 3.11.3.1 External sensor fusion measurements

Message	UBX-ESF-MEAS External sensor fusion measurements								
Туре	Input/output								
Comment	Contains sensor measurements with timestamp. Optionally, can include timestamp that the message was received at the receiver. Multiple measurements can be included in a single message. (1 measurement per sensor type.) See section Sensor data types in the integration manual for details.								
Message	Header	Class	ID	Length (Bytes)		Payload	Checksum		
structure	0xb5 0x62	2 0x10	0x02	8 + numMeas·4 + [0,1]·4		see below	CK_A CK_B		
Payload descri	iption:								
Byte offset	Туре	Name		Scale	Unit	Description			
0	U4	timeTag		-	-	Time tag of measurement generated by external sensor			
4	X2	flags		-	-	Flags. Set all unused bits to zero.			
bits 10	U <sub>:2</sub>	timeMarkSent		-	-	Time mark signal was supplied just prior to sendin this message: 0 = none, 1 = on Ext0, 2 = on Ext1			
bit 2	U <sub>:1</sub>	timeMarkEdge		-	-	Trigger on rising (0) or falling (1) edge of time mar signal			
bit 3	U:1	calibTt	agVali	d -	-	Calibration time tag available. Alw	ays set to zero.		
bits 1511 U:5 numMeas		-	-	Number of measurements contained in this message (optional, can be obtained from message size)					
6	U2	id		-	-	Identification number of data prov	vider		
Start of repeat	ted group (	numMeas	times)						
8 + n·4	X4	data		-	-	data			
bits 230	U <sub>:24</sub>	dataField		-	-	Data			
bits 2924	U <sub>:6</sub>	dataType		-	-	Type of data (0 = no data; 163 = data type)			
End of repeate	ed group (n	umMeas <b>t</b>	imes)						
Start of option	al group								
8 + numMeas·4	U4	calibTtag		-	ms	Receiver local time calibrated.  This field must not be calibTtagValid is set to 0.	supplied wher		
End of optiona	l group								

# 3.11.4 UBX-ESF-RAW (0x10 0x03)

### 3.11.4.1 Raw sensor measurements

Message	UBX-ESF-RAW
	Raw sensor measurements
Туре	Output
Comment	



Message	Header		Class	ID	Length (Byt	tes)	Payload	Checksum
structure	0xb5 0x6	32	0x10	0x03	4 + [0n]·8		see below	CK_A CK_B
Payload descr	iption:							
Byte offset	Type	N	ame		Scale	Unit	Description	
0	U1[4]	re	eserve	d0	-	-	Reserved	
Start of repea	ted group	(N	times)					
4 + n·8	X4	da	ata		-	-	data	
							Same as in UBX-ESF-MEAS	
bits 230	U <sub>:24</sub>	da	ataFie	ld	-	-	data	
bits 3124	U:8	da	ataTyp	е	-	-	type of data (0 = no data; 1255 =	data type)
8 + n·8	U4	s'	Itag		-	-	sensor time tag	
End of repeate	ed group (	N ti	imes)					

## 3.11.5 UBX-ESF-RESETALG (0x10 0x13)

## 3.11.5.1 Reset the IMU-mount alignment and the Sensor fusion mode to initialization

Message	UBX-ESF-RESETALG  Reset the IMU-mount alignment and the Sensor fusion mode to initialization										
Туре	Command	Command									
Comment	t UBX-ACK-ACK or UBX-ACK-NAK are returned to indicate success or failure.										
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x10	0x13	0	see below	CK_A CK_B					
Payload	This message has no payload.										

## 3.11.6 UBX-ESF-STATUS (0x10 0x10)

## 3.11.6.1 External sensor fusion status

Message	UBX-ESF-STATUS													
	External s	External sensor fusion status												
Туре	Periodic/polled													
Comment														
Message	Header Class ID		Length (Byt	es)	Payload	Checksum								
structure	0xb5 0x62	2 0x10 0x10	0 16 + numSe	ens·4	see below	CK_A CK_B								
Payload descr	ription:													
Byte offset	Туре	Name	Scale	Unit	Description									
0	U4	iTOW	-	ms	GPS time of week of the navigation e	poch.								
					See section iTOW timestamps in manual for details.	the integration								
4	U1	version	-	-	Message version (0x02 for this version	on)								
5	X1	initStatus1	-	-	Initialization status bitfield, part 1									
bits 10	U <sub>:2</sub>	wtInitStatu	s -	-	Wheel tick factor initialization status (0: o initializing, 2: initialized).									
bits 42	U <sub>:3</sub>	mntAlgStatu	s -	-	Automatic IMU-mount alignment s initializing, 2: initialized, 3: initialized									



bit	s 65	U <sub>:2</sub>	insInitStatus	-	_	INS initialization status (0: off, 1: initializing, 2:
6		X1				initialized).
			initStatus2			Initialization status bitfield, part 2
bit	s 10	U <sub>:2</sub>	imuInitStatus	-	-	IMU initialization status (0: off, 1: initializing, 2: initialized).
7		U1[5]	reserved0	-	-	Reserved
12		U1	fusionMode	-	-	Fusion mode:
						<ul> <li>0: Initialization mode: receiver is initializing some unknown values required for doing sensor fusion</li> <li>1: Fusion mode: GNSS and sensor data are used for navigation solution computation</li> <li>2: Suspended fusion mode: sensor fusion is temporarily disabled due to e.g. invalid sensor data or detected ferry</li> <li>3: Disabled fusion mode: sensor fusion is permanently disabled until receiver reset due e.g. to sensor error</li> </ul>
						See the Fusion filter modes section in the integration manual for more details.
13		U1[2]	reserved1	-	-	Reserved
15		U1	numSens	-	-	Number of sensors
Start of I	repeat	ted group	(numSens times)			
16 + n·4		X1	sensStatus1	-	-	Sensor status, part 1
bit	s 50	U <sub>:6</sub>	type	-	-	Sensor data type. See section Sensor data types in the integration manual for details.
	bit 6	U:1	used	-	-	If set, sensor data is used for the current sensor fusion solution.
	bit 7	U:1	ready	-	-	If set, sensor is set up (configuration is available or not required) but not used for computing the current sensor fusion solution.
17 + n·4		X1	sensStatus2	-	-	Sensor status, part 2
bit	s 10	U <sub>:2</sub>	calibStatus	-	-	00: Sensor is not calibrated
						01: Sensor is calibrating
						• 10/11: Sensor is calibrated
						Good dead reckoning performance is only possible when all used sensors are calibrated. Depending on the quality of the GNSS signals and the sensor data, the sensors may take a longer time to get calibrated.
bit	s 32	U <sub>:2</sub>	timeStatus	-	-	• 00: No data
						01: Reception of the first byte used to tag the
						measurement
						<ul> <li>10: Event input used to tag the measurement</li> </ul>
						11: Time tag provided with the data
18 + n·4		U1	freq	-	Hz	Observation frequency
19 + n·4		X1	faults	-	-	Sensor faults
	bit 0	U <sub>:1</sub>	badMeas	-	-	Bad measurements detected
	bit 1	U <sub>:1</sub>	badTTag	-	-	Bad measurement time-tags detected



bit 3 U:1 noisyMeas - - High measurement noise-level detected

End of repeated group (numSens times)

## 3.12 UBX-INF (0x04)

Messages in the UBX-INF class are used to output strings from the firmware or application code. All messages have an associated type to indicate the nature or priority of the message.

## 3.12.1 UBX-INF-DEBUG (0x04 0x04)

## 3.12.1.1 ASCII output with debug contents

Message	UBX-INF-D	UBX-INF-DEBUG												
	ASCII outp	ut with	debug	contents										
Туре	Output	Output												
Comment	This message has a variable length payload, representing an ASCII string.													
Message	Header	Class ID		Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x62	0x04	0x04	[0n]		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Type I	Name		Scale	Unit	Description								
Start of repe	ated group (N	I times)												
0 + n	CH s	str		-	-	ASCII Character								
End of repea	ated group (N	times)												

## 3.12.2 UBX-INF-ERROR (0x04 0x00)

#### 3.12.2.1 ASCII output with error contents

Message	UBX-INF-E	RROR												
	ASCII outp	ASCII output with error contents												
Туре	Output													
Comment	This message has a variable length payload, representing an ASCII string.													
Message	Header	r Class ID		Length (Bytes)		Payload	Checksum							
structure	0xb5 0x62	0x04	0x00	[0n]		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Type N	Vame		Scale	Unit	Description								
Start of repe	ated group (N	I times)												
0 + n	CH s	str		-	-	ASCII Character								
End of repea	ted group (N	times)												
<i>Ena of repea</i>	tea group (N	times)												

## 3.12.3 UBX-INF-NOTICE (0x04 0x02)

#### 3.12.3.1 ASCII output with informational contents

Message	UBX-INF-NOTICE
	ASCII output with informational contents
Туре	Output
Comment	This message has a variable length payload, representing an ASCII string.



Message	Header	Class	ID	Length (Byte:	s)	Payload	Checksum
structure	0xb5 0x62	0x04	0x02	[0n]		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Type N	lame		Scale	Unit	Description	
Start of repea	ated group (N	times)					
0 + n	CH s	tr		-	-	ASCII Character	
End of repeat	ted group (N	times)					

## 3.12.4 UBX-INF-TEST (0x04 0x03)

## 3.12.4.1 ASCII output with test contents

Message	UBX-INF-1	UBX-INF-TEST												
	ASCII outp	ut with	test co	ntents										
Туре	Output													
Comment	This mess	This message has a variable length payload, representing an ASCII string.												
Message	Header	Class	ID	Length (Bytes) [0n]		Payload	Checksum							
structure	0xb5 0x62	0x04	0x03			see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
Start of repe	eated group (I	V times)												
0 + n	CH	str		-	-	ASCII Character								
End of repea	ated group (N	times)												

## 3.12.5 UBX-INF-WARNING (0x04 0x01)

#### 3.12.5.1 ASCII output with warning contents

Message	UBX-INF-V	VARNIN	G											
	ASCII outp	ASCII output with warning contents												
Туре	Output	Output												
Comment	This mess	This message has a variable length payload, representing an ASCII string.												
Message	Header	Class ID 62 0x04 0x0		Length (Bytes)			Payload							
structure	0xb5 0x62			[0n]			see below	CK_A CK_B						
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
Start of repe	ated group (I	V times)												
0 + n	CH	str		-	-	ASCII Charac	cter							
End of repea	ted group (N	times)												

# 3.13 UBX-MGA (0x13)

The messages in the UBX-MGA class are used for sending GNSS assistance (A-GNSS, aiding) information to the receiver as well as backing up the navigation database from the receiver to a host.

## 3.13.1 UBX-MGA-ACK (0x13 0x60)



## 3.13.1.1 Multiple GNSS acknowledge message

Message	UBX-MGA-ACK-DATA0												
	Multiple	GNSS ack	nowled	lge message									
Туре	Output												
Comment	This message is sent by a u-blox receiver to acknowledge the receipt of an assistance message. Acknowledgments are enabled by setting the CFG-NAVSPG-ACKAIDING item. See section Flow control in the integration manual for details.												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	2 0x13	0x60	8		see below	CK_A CK_B						
Payload desc	ription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	type		-	-	Type of acknowledgment:							
						<ul> <li>0 = The message was not used by the receiver (see infoCode field for an indication of why)</li> <li>1 = The message was accepted for use by the receiver (the infoCode field will be 0)</li> </ul>							
1	U1	version Message version (0x00 for this version)											
2	U1	infoCod	е	-	-	Provides greater information on what the receiv chose to do with the message contents:							
						• 0 = The receiver accepted the	data						
						1 = The receiver does not know cannot use the data (To resolv INI-TIME_UTC message should	ve this a UBX-MGA- ld be supplied first)						
						<ul> <li>2 = The message version is no receiver</li> </ul>	ot supported by the						
						<ul> <li>3 = The message size does no message version</li> </ul>	t match the						
						<ul> <li>4 = The message data could r database</li> </ul>	ot be stored to the						
						<ul> <li>5 = The receiver is not ready to use the messag data</li> </ul>							
						6 = The message type is unkn	own						
3	U1	msgId		-	-	UBX message ID of the acknowled	dged message						
4	U1[4]	msgPayl Start	oad	-	-	The first 4 bytes of the acknown payload	owledged message'						

## 3.13.2 UBX-MGA-BDS (0x13 0x03)

## 3.13.2.1 BeiDou ephemeris assistance for satellites svld 1..37

Message	UBX-MG	A-BDS-EF	PΗ											
	BeiDou ep	ohemeris	assista	nce for satell	ites svld 1.	37								
Туре	Input													
Comment	This message allows the delivery of BeiDou D1/D2 ephemeris assistance to a receiver.													
	See section	See section AssistNow online in the integration manual for details.												
Message	Header Class		ID	Length (Byte	es)	Pay	yload	Checksum						
structure	0xb5 0x6	2 0x13	0x03	88		see	e below	CK_A CK_B						
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U1	type		-	-	Message type (0x	(01 for this type)							
1	U1	version	1	-	-	Message version	(0x00 for this ver	sion)						



2	U1	svId	-	-	BeiDou satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1	SatH1	-	-	Autonomous satellite Health flag
5	U1	IODC	-	-	Issue of Data, Clock
6	12	a2	2^-66	s/s^2	Time polynomial coefficient 2
8	14	a1	2^-50	s/s	Time polynomial coefficient 1
12	14	a0	2^-33	s	Time polynomial coefficient 0
16	U4	toc	2^3	S	Clock data reference time
20	12	TGD1	0.1	ns	Equipment Group Delay Differential
22	U1	URAI	-	-	User Range Accuracy Index
23	U1	IODE	-	-	Issue of Data, Ephemeris
24	U4	toe	2^3	S	Ephemeris reference time
28	U4	sqrtA	2^-19	m^0.5	Square root of semi-major axis
32	U4	е	2^-33	-	Eccentricity
36	14	omega	2^-31	semi- circles	Argument of perigee
40	12	Deltan	2^-43	semi- circles/s	Mean motion difference from computed value
42	12	IDOT	2^-43	semi- circles/s	Rate of inclination angle
44	14	М0	2^-31	semi- circles	Mean anomaly at reference time
48	14	Omega0	2^-31	semi- circles	Longitude of ascending node of orbital of plane computed according to reference time
52	14	OmegaDot	2^-43	semi- circles/s	Rate of right ascension
56	14	i0	2^-31	semi- circles	Inclination angle at reference time
60	14	Cuc	2^-31	radians	Amplitude of cosine harmonic correction term to the argument of latitude
64	14	Cus	2^-31	radians	Amplitude of sine harmonic correction term to the argument of latitude
68	14	Crc	2^-6	m	Amplitude of cosine harmonic correction term to the orbit radius
72	14	Crs	2^-6	m	Amplitude of sine harmonic correction term to the orbit radius
76	14	Cic	2^-31	radians	Amplitude of cosine harmonic correction term to the angle of inclination
80	14	Cis	2^-31	radians	Amplitude of sine harmonic correction term to the angle of inclination
84	U1[4]	reserved1	-	-	Reserved

## 3.13.2.2 BeiDou almanac assistance

Message	UBX-MGA-BDS-ALM
	BeiDou almanac assistance
Туре	Input
Comment	This message allows the delivery of BeiDou almanac assistance to a receiver.
	See section AssistNow online in the integration manual for details.



Message	Header	Class	ID	Len	gth (Bytes,	)	Payload	Checksum
structure	0xb5 0x62	2 0x13	0x03	40			see below	CK_A CK_B
Payload desc	cription:							
Byte offset	Туре	Name			Scale	Unit	Description	
0	U1	type			-	-	Message type (0x02 for this version)	
1	U1	version	า		-	-	Message version (0x00 for this version	on)
2	U1	svId			-	-	BeiDou satellite identifier (see Satelli	te Numbering)
3	U1	reserve	ed0		-	-	Reserved	
4	U1	Wna			-	week	Almanac Week Number	
5	U1	toa			2^12	S	Almanac reference time	
6	12	deltaI			2^-19	semi- circles	Almanac correction of orbit referen	ce inclination at
8	U4	sqrtA			2^-11	m^0.5	Almanac square root of semi-major a	xis
12	U4	е			2^-21	-	Almanac eccentricity	
16	14	omega			2^-23	semi- circles	Almanac argument of perigee	
20	14	М0			2^-23	semi- circles	Almanac mean anomaly at reference	time
24	14	Omega0			2^-23	semi- circles	Almanac longitude of ascending node computed according to reference time	•
28	14	omegaDo	ot		2^-38	semi- circles/s	Almanac rate of right ascension	
32	12	a0			2^-20	S	Almanac satellite clock bias	
34	12	a1			2^-38	s/s	Almanac satellite clock rate	
36	U1[4]	reserve	ed1		-	-	Reserved	

## 3.13.2.3 BeiDou health assistance

Message	UBX-MG	A-B	DS-HE	ALTH							
	BeiDou h	ealt	th assi	stance							
Туре	Input	Input									
Comment	This message allows the delivery of BeiDou health assistance from D1/D2 ephemeris to a receiver.										
	See section AssistNow online in the integration manual for details.										
	This message allows the delivery of health assistance data for all satellites with svld 1 to 30.										
Message	Header		Class	ID	Ler	ngth (Bytes	)	Payload	Checksum		
structure	0xb5 0x6	62	0x13	0x03	68			see below	CK_A CK_B		
Payload desc	ription:										
Byte offset	Туре	Ná	ame			Scale	Unit	Description			
0	U1	ty	/pe			-	-	Message type (0x04 for this type)			
1	U1	ve	ersion	ı		-	-	Message version (0x00 for this ve	rsion)		
2	U1[2]	re	serve	:d0		-	-	Reserved			
4	U2[30]	2[30] healthCode			-	-	Each two-byte value represents a BeiDou SV ( The 9 LSBs of each byte contain the 9 bit health from subframe 5 pages 7,8 of the D1 message from subframe 5 pages 35,36 of the D2 message				
64	U1[4]	20.0	serve	.d1		_	-	Reserved			



#### 3.13.2.4 BeiDou UTC assistance

Message	UBX-MG/	A-BDS-UT	С									
	BeiDou U	BeiDou UTC assistance										
Туре	Input											
Comment	This message allows the delivery of BeiDou UTC assistance to a receiver.											
	See section AssistNow online in the integration manual for details.											
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x13	0x03	20		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U1	type		-	-	Message type (0x05 for this type)						
1	U1	version	1	-	-	Message version (0x00 for this ver	sion)					
2	U1[2]	reserve	ed0	-	-	Reserved						
4	14	aOUTC		2^-30	s	BDT clock bias relative to UTC						
8	14	a1UTC		2^-50	s/s	BDT clock rate relative to UTC						
12	I1	dtLS		-	S	Delta time due to leap seconds b second effective	efore the new leap					
13	U1	reserve	ed1	-	-	Reserved						
14	U1	wnRec		-	week	BeiDou week number of recep parameter set (8-bit truncated)	tion of this UTC					
15	U1	wnLSF		-	week	Week number of the new leap seco	ond					
16	U1	dN		-	day	Day number of the new leap secon	d					
17	I1	dtLSF		-	S	Delta time due to leap seconds second effective	after the new leap					
18	U1[2]	reserve	ed2	-	-	Reserved						

## 3.13.2.5 BeiDou ionosphere assistance

Message	UBX-MG/	A-BDS-IO	NO								
	BeiDou io	nosphere	assista	ance							
Туре	Input										
Comment	This mes	sage allow	s the d	leliver	y of BeiDo	u ionosph	eric assistance to a receiver.				
	See section AssistNow online in the integration manual for details.										
Message	Header	Class	ID	Len	gth (Bytes,	)	Payload	Checksum			
structure	0xb5 0x6	2 0x13	0x03	16			see below	CK_A CK_B			
Payload desc	cription:										
Byte offset	Туре	Name			Scale	Unit	Description				
0	U1	type			-	-	Message type (0x06 for this type)				
1	U1	version	Į.		-	-	Message version (0x00 for this version)				
2	U1[2]	reserve	:d0		-	-	Reserved				
4	I1	alpha0			2^-30	s	lonospheric parameter alpha0				
5	I1	alpha1			2^-27	s/pi	lonospheric parameter alpha1				
6	I1	alpha2			2^-24	s/pi^2	lonospheric parameter alpha2				
7	I1	alpha3			2^-24	s/pi^3	lonospheric parameter alpha3				
8	I1	beta0			2^11	s	Ionospheric parameter beta0				
9	I1	beta1			2^14	s/pi	Ionospheric parameter beta1				



10	I1	beta2	2^16	s/pi^2	lonospheric parameter beta2
11	I1	beta3	2^16	s/pi^3	Ionospheric parameter beta3
12	U1[4]	reserved1	-	-	Reserved

## 3.13.3 UBX-MGA-DBD (0x13 0x80)

## 3.13.3.1 Poll the navigation database

Message	UBX-MGA-DBD Poll the navigation database									
Comment	Poll the whole navigation data base. The receiver will send all available data from its internal database. The receiver will indicate the finish of the transmission with a UBX-MGA-ACK. The msgPayloadStart field of the UBX-MGA-ACK message will contain a U4 representing the number of UBX-MGA-DBD-DATA* messages sent.									
					9 ,					
Message			ssage w		9 ,					
Message structure	UBX-MGA-A	ACK me	ssage w	vill contain a U4 representing Length (Bytes)	the number of UBX-MGA-DBD-DA	ATA* messages sent.				

## 3.13.3.2 Navigation database dump entry

Message	UBX-MG	A-DBD									
	Navigati	on datab	ase dun	np entry							
Туре	Input/output										
Comment	J			•		•	Fransmission of this has been enabled.	s type of message will			
	See section AssistNow online in the integration manual for details.										
	The maximum payload size for firmware 2.01 onwards is 164 bytes (which makes the maximum message size 172 bytes).										
	ℑ UBX-MGA-DBD messages are only intended to be sent back to the same receiver that generated them.										
Message	Header	Clas	s ID	Length (Byte	Length (Bytes)			Checksum			
structure	0xb5 0x6	62 0x1	3 0x80	12 + [0n]			see below	CK_A CK_B			
Payload desc	ription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U1[12]	reserv	red0	-	-	Reserved					
Start of repeat	ated group	(N times	)								
12 + n	U1	data		-	-	firmware-sp	ecific data				
End of repeat	ted group (	N times)									

# 3.13.4 UBX-MGA-GAL (0x13 0x02)

## 3.13.4.1 Galileo ephemeris assistance

Message	UBX-MGA-GAL-EPH Galileo ephemeris assistance									
Туре	Input									
Comment	This message allows the delivery of Galileo ephemeris assistance to a receiver.  See section AssistNow online in the integration manual for details.									
Message	Header Class ID Lei		Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x13	0x02	76	see below	CK_A CK_B				



Byte offset	Туре	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x01 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U1	svId	-	-	Galileo Satellite identifier (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U2	iodNav	-	-	Ephemeris and clock correction Issue of Data
6	12	deltaN	2^-43	semi- circles/s	Mean motion difference from computed value
8	14	m0	2^-31	semi- circles	Mean anomaly at reference time
12	U4	е	2^-33	-	Eccentricity
16	U4	sqrtA	2^-19	m^0.5	Square root of the semi-major axis
20	14	omega0	2^-31	semi- circles	Longitude of ascending node of orbital plane at weekly epoch
24	14	iO	2^-31	semi- circles	Inclination angle at reference time
28	14	omega	2^-31	semi- circles	Argument of perigee
32	14	omegaDot	2^-43	semi- circles/s	Rate of change of right ascension
36	12	iDot	2^-43	semi- circles/s	Rate of change of inclination angle
38	12	cuc	2^-29	radians	Amplitude of the cosine harmonic correction term to the argument of latitude
40	12	cus	2^-29	radians	Amplitude of the sine harmonic correction term to the argument of latitude
42	12	crc	2^-5	radians	Amplitude of the cosine harmonic correction term to the orbit radius
44	12	crs	2^-5	radians	Amplitude of the sine harmonic correction term to the orbit radius
46	12	cic	2^-29	radians	Amplitude of the cosine harmonic correction term to the angle of inclination
48	12	cis	2^-29	radians	Amplitude of the sine harmonic correction term to the angle of inclination
50	U2	toe	60	S	Ephemeris reference time
52	14	af0	2^-34	S	SV clock bias correction coefficient
56	14	af1	2^-46	s/s	SV clock drift correction coefficient
60	I1	af2	2^-59	s/s squared	SV clock drift rate correction coefficient
61	U1	sisaIndexE1 E5b	-	-	Signal-In-Space Accuracy index for dual frequency E1 E5b
62	U2	toc	60	s	Clock correction data reference Time of Week
64	12	bgdE1E5b	2^-32	S	E1-E5b Broadcast Group Delay
66	U1[2]	reserved1	-	-	Reserved
68	U1	healthE1B	-	-	E1-B Signal Health Status
69	U1	dataValidityE1 B	-	-	E1-B Data Validity Status



70	U1	healthE5b	-	-	E5b Signal Health Status
71	U1	dataValidity E5b	-	-	E5b Data Validity Status
72	U1[4]	reserved2	-	-	Reserved

#### 3.13.4.2 Galileo almanac assistance

Message	UBX-MGA-GAL-ALM												
	Galileo a	ılmanac as	ssistand	e									
Туре	Input												
Comment	This me	ssage allo	ws the d	lelivery of Galil	leo almanac	assistance to a receiver.							
	See sect	ion Assist	Now on	line in the inte	gration man	ual for details.							
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x	62 0x13	0x02	32		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	type		-	-	Message type (0x02 for this type)							
1	U1	versio	n	-	-	Message version (0x00 for this ve	rsion)						
2	U1	svId		-	-	Galileo Satellite identifier (see Sat	ellite Numbering)						
3	U1	reserve	ed0	-	-	Reserved							
4	U1	ioda		-	-	Almanac Issue of Data							
5	U1	almWNa		-	week	Almanac reference week number							
6	U2	toa		600	S	Almanac reference time							
8	12	deltaS	qrtA	2^-9	m^0.5	Difference with respect to the nominal semi-major axis (29 600 l	•						
10	U2	е		2^-16	-	Eccentricity							
12	12	deltaI		2^-14	semi- circles	Inclination at reference time relati	ve to i0 = 56 degree						
14	12	omega0		2^-15	semi- circles	Longitude of ascending node of or epoch	bital plane at weekly						
16	12	omegaDo	ot	2^-33	semi- circles/s	Rate of change of right ascension							
18	12	omega		2^-15	semi- circles	Argument of perigee							
20	12	m0		2^-15	semi- circles	Satellite mean anomaly at referen	ce time						
22	12	af0		2^-19	S	Satellite clock correction bias 'trui	ncated'						
24	12	af1		2^-38	s/s	Satellite clock correction linear 'tr	uncated'						
26	U1	health	E1B	-	-	Satellite E1-B signal health status	3						
27	U1	health	E5b	-	-	Satellite E5b signal health status							
28	U1[4]	reserve	ed1	-	-	Reserved							

## 3.13.4.3 Galileo GPS time offset assistance

Message	UBX-MGA-GAL-TIMEOFFSET							
	Galileo GPS time offset assistance							
Туре	Input							
Comment	This message allows the delivery of Galileo time to GPS time offset.							
	See section AssistNow online in the integration manual for details.							



Message	Header	Class	ID	Length (Byte	s)	Payload	Checksum
structure	0xb5 0x6	2 0x13	0x02	12		see below	CK_A CK_B
Payload desci	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x03 for this type)	
1	U1	version	1	-	-	Message version (0x00 for this versi	on)
2	U1[2]	reserve	ed0	-	-	Reserved	
4	12	a0G		2^-35	S	Constant term of the polynomial des	scribing the offset
6	12	a1G		2^-51	s/s	Rate of change of the offset	
8	U1	t0G		3600	s	Reference time for GGTO data	
9	U1	wn0G		-	weeks	Week Number of GGTO reference	
10	U1[2]	reserve	ed1	-	-	Reserved	

#### 3.13.4.4 Galileo UTC assistance

Message	UBX-MG/	A-GAL-UT	С				
	Galileo UT	C assist	ance				
Туре	Input						
Comment	This mess	sage allov	vs the d	elivery of Gali	leo UTC ass	istance to a receiver.	
	See section	on Assist	Now onl	line in the inte	gration mai	nual for details.	
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x62	2 0x13	0x02	20		see below	CK_A CK_B
Payload desc	cription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x05 for this type)	
1	U1	version	1	-	-	Message version (0x00 for this vers	sion)
2	U1[2]	reserve	ed0	-	-	Reserved	
4	14	a0		2^-30	S	First parameter of UTC polynomial	
8	14	a1		2^-50	s/s	Second parameter of UTC polynom	ial
12	I1	dtLS		-	S	Delta time due to current leap seco	nds
13	U1	tot		3600	S	UTC parameters reference time of v	week (Galileo time)
14	U1	wnt		-	weeks	UTC parameters reference week WNt field)	number (the 8-bit
15	U1	wnLSF		-	weeks	Week number at the end of whic second becomes effective (the 8-bi	
16	U1	dN		-	days	Day number at the end of which the becomes effective	future leap second
17	I1	dTLSF		-	S	Delta time due to future leap secon	ds
18	U1[2]	reserve	ed1	-	-	Reserved	

## 3.13.5 UBX-MGA-GLO (0x13 0x06)

## 3.13.5.1 GLONASS ephemeris assistance

Message	UBX-MGA-GLO-EPH								
	GLONASS ephemeris assistance								
Туре	Input								



Comment		•		-	•	neris assistance to a receiver. ual for details.
Message	Header	Class	ID	Length (Byte	s)	Payload Checksum
structure	0xb5 0x6	2 0x13	0x06	48		see below CK_A CK_B
Payload desc	ription:					
Byte offset	Туре	Name		Scale	Unit	Description
0	U1	type		-	-	Message type (0x01 for this type)
1	U1	version		-	-	Message version (0x00 for this version)
2	U1	svId		-	-	GLONASS Satellite identifier (see Satellite Numbering)
3	U1	reserve	d0	-	-	Reserved
4	U1	FT		-	-	User range accuracy
5	U1	В		-	-	Health flag from string 2
6	U1	M		-	-	Type of GLONASS satellite (1 indicates GLONASS-M)
7	I1	Н		-	-	Carrier frequency number of navigation RF signal Range=(-7 6), -128 for unknown
8	14	Х		2^-11	km	X component of the SV position in PZ-90.02 coordinate System
12	14	У		2^-11	km	Y component of the SV position in PZ-90.02 coordinate System
16	14	Z		2^-11	km	Z component of the SV position in PZ-90.02 coordinate System
20	14	dx		2^-20	km/s	X component of the SV velocity in PZ-90.02 coordinate System
24	14	dy		2^-20	km/s	Y component of the SV velocity in PZ-90.02 coordinate System
28	14	dz		2^-20	km/s	Z component of the SV velocity in PZ-90.02 coordinate System
32	I1	ddx		2^-30	km/s^2	X component of the SV acceleration in PZ-90.02 coordinate System
33	I1	ddy		2^-30	km/s^2	Y component of the SV acceleration in PZ-90.02 coordinate System
34	I1	ddz		2^-30	km/s^2	Z component of the SV acceleration in PZ-90.02 coordinate System
35	U1	tb		15	minutes	Index of a time interval within current day according to UTC(SU)
36	12	gamma		2^-40	-	Relative carrier frequency deviation
38	U1	E		-	days	Ephemeris data age indicator
39	I1	deltaTa	u	2^-30	s	Time difference between L2 and L1 band
40	14	tau		2^-30	S	SV clock bias
44	U1[4]	reserve	d1	-	_	Reserved

## 3.13.5.2 GLONASS almanac assistance

Message	UBX-MGA-GLO-ALM							
	GLONASS almanac assistance							
Туре	Input							
Comment	This message allows the delivery of GLONASS almanac assistance to a receiver.							



See section Assist Now online in the integration manual for details.

Message	Header	Class	ID	Length (Bytes	5)	Payload	Checksum
structure	0xb5 0x62	0x13	0x06	36		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x02 for this type)	
1	U1	version	Į.	-	-	Message version (0x00 for this version	n)
2	U1	svId		-	-	GLONASS Satellite identifier Numbering)	(see Satellite
3	U1	reserve	:d0	-	-	Reserved	
4	U2	N		-	days	Reference calender day number of alr four-year period (from string 5)	nanac within the
6	U1	М		-	-	Type of GLONASS satellite (1 indicate	es GLONASS-M
7	U1	С		-	-	Unhealthy flag at instant of almindicates operability of satellite)	anac upload (
8	12	tau		2^-18	S	Coarse time correction to GLONASS t	time
10	U2	epsilon	ı	2^-20	-	Eccentricity	
12	14	lambda		2^-20	semi- circles	Longitude of the first (within the N node of satellite orbit in PC-90.02 cod	•
16	14	deltaI		2^-20	semi- circles	Correction to the mean value of inclin	ation
20	U4	tLambda	L	2^-5	s	Time of the first ascending node pass	sage
24	14	deltaT		2^-9	s/orbital- period	Correction to the mean value of Drace	onian period
28	I1	deltaDT	•	2^-14	s/orbital- period^2	Rate of change of Draconian period	
29	I1	Н		-	-	Carrier frequency number of navigation Range=(-7 6)	ation RF signal
30	12	omega		-	-	Argument of perigee	
32	U1[4]	reserve	-1.1	_	_	Reserved	

## 3.13.5.3 GLONASS auxiliary time offset assistance

Message	UBX-M	GA-GLO-TI	MEOFF	SET			
	GLONA	SS auxiliar	y time o	ffset assistar	nce		
Туре	Input						
Comment		essage allov SNSS systen		•	iliary GLON	NASS assistance (including the GLON	IASS time offsets to
	See sec	ction Assist	Now onl	ine in the inte	gration ma	anual for details.	
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0	x62 0x13	0x06	20		see below	CK_A CK_B
Payload desc	cription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x03 for this type)	
1	U1	version	1	-	-	Message version (0x00 for this ve	rsion)
2	U2	N		-	days	Reference calendar day number period of almanac (from string 5)	within the four-year
4	14	tauC		2^-27	S	Time scale correction to UTC(SU)	time



8	14	tauGps	2^-31	S	Correction to GPS time relative to GLONASS time
12	12	B1	2^-10	S	Coefficient to determine delta UT1
14	12	B2	2^-16	s/msd	Rate of change of delta UT1
		DZ		3/11134	nate of change of delta of f

## 3.13.6 UBX-MGA-GPS (0x13 0x00)

## 3.13.6.1 GPS ephemeris assistance

Message	UBX-MG/	A-GPS-EP	Н					
	GPS ephe	meris ass	istanc	е				
Туре	Input							
Comment		-			-	-	ssistance to a receiver.	
	See section	on AssistN	Now onl	line in	the integ	ration man	ual for details.	
Message	Header	Class	ID	Len	gth (Bytes	)	Payload Checks	sum
structure	0xb5 0x6	2 0x13	0x00	68			see below CK_A	CK_B
Payload desc	ription:							
Byte offset	Туре	Name			Scale	Unit	Description	
0	U1	type			-	-	Message type (0x01 for this type)	
1	U1	version			-	-	Message version (0x00 for this version)	
2	U1	svId			-	-	GPS Satellite identifier (see Satellite Numbering	g)
3	U1	reserve	d0		-	-	Reserved	
4	U1	fitInte	rval		-	-	Fit interval flag	
5	U1	uraInde	Х		-	-	URA index	
6	U1	svHealt	h		-	-	SV health	
7	I1	tgd			2^-31	S	Group delay differential	
8	U2	iodc			-	-	IODC	
10	U2	toc			2^4	S	Clock data reference time	
12	U1	reserve	d1		-	-	Reserved	
13	I1	af2			2^-55	s/s squared	Time polynomial coefficient 2	
14	12	af1			2^-43	s/s	Time polynomial coefficient 1	
16	14	af0			2^-31	s	Time polynomial coefficient 0	
20	12	crs			2^-5	m	Crs	
22	12	deltaN			2^-43	semi- circles/s	Mean motion difference from computed value	
24	14	m0			2^-31	semi- circles	Mean anomaly at reference time	
28	12	cuc			2^-29	radians	Amplitude of cosine harmonic correction te argument of latitude	rm to
30	12	cus			2^-29	radians	Amplitude of sine harmonic correction ter argument of latitude	rm to
32	U4	е			2^-33	-	Eccentricity	
36	U4	sqrtA			2^-19	m^0.5	Square root of the semi-major axis	
40	U2	toe			2^4	s	Reference time of ephemeris	



42	12	cic	2^-29	radians	Amplitude of $\cos$ harmonic correction term to angle of inclination
44	14	omega0	2^-31	semi- circles	Longitude of ascending node of orbit plane at weekly epoch
48	12	cis	2^-29	radians	Amplitude of sine harmonic correction term to angle of inclination
50	12	crc	2^-5	m	Amplitude of cosine harmonic correction term to orbit radius
52	14	iO	2^-31	semi- circles	Inclination angle at reference time
56	14	omega	2^-31	semi- circles	Argument of perigee
60	14	omegaDot	2^-43	semi- circles/s	Rate of right ascension
64	12	idot	2^-43	semi- circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

## 3.13.6.2 GPS health assistance

Message	UBX-MG	UBX-MGA-GPS-HEALTH												
	GPS healt	th assista	nce											
Туре	Input													
Comment	This mes	This message allows the delivery of GPS health assistance to a receiver.												
	See section	on AssistI	Now on	line in the inte	gration ma	anual for details.								
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x6	2 0x13	0x00	40		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U1	type		-	-	Message type (0x04 for this type)								
1	U1	version	n .	-	-	Message version (0x00 for this vers	sion)							
2	U1[2]	reserve	ed0	-	-	Reserved								
4	U1[32]	healthC	Code	-	-	Each byte represents a GPS SV ( of each byte contains the 6 bit subframes 4/5 page 25.	•							
36	U1[4]	reserve	ed1	-	-	Reserved								
						· · · · · · · · · · · · · · · · · · ·								

#### 3.13.6.3 GPS UTC assistance

Message	UBX-MG/	UBX-MGA-GPS-UTC													
	GPS UTC	assistan	се												
Туре	Input														
Comment	This mes	This message allows the delivery of GPS UTC assistance to a receiver.													
	See section	on Assistl	Now onl	line in the inte	gration ma	anual for details.									
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum								
structure	0xb5 0x6	2 0x13	0x00	20		see below	CK_A CK_B								
Payload desc	cription:														
Byte offset	Туре	Name		Scale	Unit	Description									
0	U1	type		-	-	Message type (0x05 for this t	ype)								
1	U1	version	1	-	-	Message version (0x00 for thi	s version)								



2	U1[2]	reserved0	-	-	Reserved
4	14	utcA0	2^-30	s	First parameter of UTC polynomial
8	14	utcA1	2^-50	s/s	Second parameter of UTC polynomial
12	I1	utcDtLS	-	S	Delta time due to current leap seconds
13	U1	utcTot	2^12	S	UTC parameters reference time of week (GPS time)
14	U1	utcWNt	-	weeks	UTC parameters reference week number (the 8-bit WNt field)
15	U1	utcWNlsf	-	weeks	Week number at the end of which the future leap second becomes effective (the 8-bit WNLSF field)
16	U1	utcDn	-	days	Day number at the end of which the future leap second becomes effective
17	I1	utcDtLSF	-	S	Delta time due to future leap seconds
18	U1[2]	reserved1	-	-	Reserved

## 3.13.6.4 GPS ionosphere assistance

Message	UBX-MGA-GPS-IONO												
	GPS iono	GPS ionosphere assistance											
Туре	Input												
Comment	This message allows the delivery of GPS ionospheric assistance to a receiver.												
	See section AssistNow online in the integration manual for details.												
Message	Header	Clas	ss	ID	Ler	ngth (Bytes,	)	Payload	Checksum				
structure	0xb5 0x6	0xb5 0x62 0x13 0x00 16						see below	CK_A CK_B				
Payload desc	cription:												
Byte offset	Туре	Name				Scale	Unit	Description					
0	U1	type				-	-	Message type (0x06 for this type					
1	U1	versi	on			-	-	Message version (0x00 for this ve	rsion)				
2	U1[2]	reser	vec	10		-	-	Reserved					
4	I1	ionoAlpha0				2^-30	s	lonospheric parameter alpha0 [s]					
5	I1	ionoA	.lph	na1		2^-27	s/semi- circle	lonospheric parameter alpha1 [s/	semi-circle]				
6	I1	ionoA	lph	na2		2^-24	s/(semi- circle^2)	lonospheric parameter alpha2 [s/	semi-circle^2]				
7	I1	ionoA	.lph	na3		2^-24	s/(semi- circle^3)	lonospheric parameter alpha3 [s/	semi-circle^3]				
8	I1	ionoB	eta	10		2^11	S	lonospheric parameter beta0 [s]					
9	I1	ionoB	eta	a1		2^14	s/semi- circle	lonospheric parameter beta1 [s/s	emi-circle]				
10	I1	ionoB	eta	12		2^16	s/(semi- circle^2)	lonospheric parameter beta2 [s/s	emi-circle^2]				
11	I1	ionoB	eta	13		2^16	s/(semi- circle^3)	lonospheric parameter beta3 [s/s	emi-circle^3]				
12	U1[4]	reser	vec	11		-	-	Reserved					

## 3.13.7 UBX-MGA-INI (0x13 0x40)



## 3.13.7.1 Initial position assistance XYZ

Message	UBX-MGA-INI-POS_XYZ												
	Initial pos	ition assi	istance	XYZ									
Туре	Input												
Comment	This message allows the delivery of initial position assistance to a receiver in cartesian ECEF coordinates. This message is equivalent to the UBX-MGA-INI-POS_LLH message, except for the coordinate system.												
	See section AssistNow Online in the integration manual for details.												
		• .			at is inaccura erformance.	te by more than the specified position	accuracy, may lea						
Message	Header	Class	ID	Length (I	Bytes)	Payload	Checksum						
structure	0xb5 0x6	2 0x13	0x40	20		see below	CK_A CK_B						
Payload desc	ription:												
Byte offset	Туре	Name		Scal	e Unit	Description							
0	U1	type		-	-	Message type (0x00 for this type)							
1	U1	version	n	-	-	Message version (0x00 for this ve	rsion)						
2	U1[2]	reserve	ed0	-	-	Reserved							
4	14	ecefX		-	cm	WGS84 ECEF X coordinate							
8	14	ecefY		-	cm	WGS84 ECEF Y coordinate							
12	14	ecefZ		-	cm	WGS84 ECEF Z coordinate							
16	U4	posAcc		-	cm	Position accuracy (stddev)							

## 3.13.7.2 Initial position assistance LLH

Message	UBX-MG	UBX-MGA-INI-POS_LLH												
	Initial position assistance LLH													
Туре	Input													
Comment		This message allows the delivery of initial position assistance to a receiver in WGS84 lat/long/alt coordinates. This message is equivalent to the UBX-MGA-INI-POS_XYZ message, except for the coordinate system.												
	See secti	See section AssistNow online in the integration manual for details.												
		\$\text{\$\}}\$}}}\$}}}}}} \end{engingenty}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}}												
Message	Header	Class	ID	Ler	ngth (Byte	s)	Payload	Checksum						
structure	0xb5 0x6	2 0x13	0x40	20			see below	CK_A CK_B						
Payload desc	cription:													
Byte offset	Туре	Name			Scale	Unit	Description							
0	U1	type			-	-	Message type (0x01 for this type)							
1	U1	version	า		-	-	Message version (0x00 for this version)							
2	U1[2]	reserve	ed0		-	-	Reserved							
4	14	lat			1e-7	deg	WGS84 Latitude							
8	14	lon			1e-7	deg	WGS84 Longitude							
12	14	alt			-	cm	WGS84 Altitude							
16	U4	posAcc			-	cm	Position accuracy (stddev)							

#### 3.13.7.3 Initial time assistance UTC

Message	UBX-MGA-INI-TIME_UTC
	Initial time assistance UTC
Туре	Input



Comment

This message allows the delivery of UTC time assistance to a receiver. This message is equivalent to the UBX-MGA-INI-TIME\_GNSS message, except for the time base.

See section AssistNow online in the integration manual for details.

ℑ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.

Message	Header	Cla	ss I	D	Len	gth (Byte	es)	Payload C	hecksum
structure	0xb5 0x	62 0x	13 (	0x40	24			see below C	K_A CK_B
Payload des	cription:								
Byte offset	Type	Name				Scale	Unit	Description	
0	U1	type				-	-	Message type (0x10 for this type)	
1	U1	versi	.on			-	-	Message version (0x00 for this version)	
2	X1	ref				-	-	Reference to be used to set time	
bits 3	.0 U:4	sour	ce			-	-	• 0 = none, i.e. on receipt of message (wil	l be
								inaccurate!)	
								• 1 = relative to pulse sent to EXTINTO	
								• 2 = relative to pulse sent to EXTINT1	
								• 3-15 = reserved	
bit	.4 U <sub>:1</sub>	fall				-	-	use falling edge of EXTINT pulse (default r if source is EXTINT	ising) - onl
bit	.5 U <sub>:1</sub>	last				-	-	use last EXTINT pulse (default next puls source is EXTINT	e) - only
3	I1	leaps	Secs			-	S	Number of leap seconds since 1980 (or 0x unknown)	30 = -128
4	U2	year				-	-	Year	
6	U1	month	n .			-	-	Month, starting at 1	
7	U1	day				-	-	Day, starting at 1	
8	U1	hour				-	-	Hour, from 0 to 23	
9	U1	minut	:e			_	-	Minute, from 0 to 59	
10	U1	secor	nd			-	S	Seconds, from 0 to 59	
11	X1	bitfi	eld	0		-	-	bitfield:	
bit	U:1	trust	edSo	ource	)	-	-	Time is provided from a trusted source. usable for replay attack detection	Potentiall
								0: Unknown	
								1: Time source can be trusted for spoot	fing
								detection	
12	U4	ns				-	ns	Nanoseconds, from 0 to 999,999,999	
16	U2	tAccs	5			-	S	Seconds part of time accuracy	
18	U1[2]	resei	ved	0		-	-	Reserved	
20	U4	tAccN	Is			-	ns	Nanoseconds part of time accuracy, 999,999,999	from 0 to
18	U1[2]	reser	rved(	0		-	-	Reserved  Nanoseconds part of time accuracy,	fron

### 3.13.7.4 Initial time assistance GNSS

Message	UBX-MGA-INI-TIME_GNSS
	Initial time assistance GNSS
Туре	Input



Comment

This message allows the delivery of time assistance to a receiver in a chosen GNSS timebase. This message is equivalent to the UBX-MGA-INI-TIME\_UTC message, except for the time base.

See section AssistNow online in the integration manual for details.

ℑ Supplying time assistance that is inaccurate by more than the specified time accuracy, may lead to substantially degraded receiver performance.

CK_A CK_E rsion) sage (will be
sage (will be
sage (will be
TINT0
TINT1
default rising) - on
next pulse) - only
ntly supported:
source. Potential
for spoofing
nd part from 0 t
curacy, from 0
1

#### 3.13.7.5 Initial clock drift assistance

Message	UBX-MGA-INI-CLKD
	Initial clock drift assistance
Туре	Input



Comment	This mes	This message allows the delivery of clock drift assistance to a receiver.													
	See section AssistNow online in the integration manual for details.														
	Supplying clock drift assistance that is inaccurate by more than the specified accuracy, may substantially degraded receiver performance.														
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum								
structure	0xb5 0x6	2 0x13	0x40	12		see below	CK_A CK_B								
Payload desc	cription:														
Byte offset	Туре	Name		Scale	Unit	Description									
0	U1	type		-	-	Message type (0x20 for this type)									
1	U1	version	L	-	-	Message version (0x00 for this ve	rsion)								
2	U1[2]	reserve	:d0	-	-	Reserved									
4	14	clkD		-	ns/s	Clock drift									
8	U4	clkDAcc	!	-	ns/s	Clock drift accuracy									

## 3.13.7.6 Initial frequency assistance

Message	UBX-MG/	A-INI-FRE	EQ										
	Initial fre	quency a	ssistan	се									
Туре	Input												
Comment	This mes	sage allo	ws the d	delive	y of exte	rnal freque	ency assistance to a receiver.						
	See section	See section AssistNow online in the integration manual for details.											
	Supply to substa	•		•	•		inaccurate by more than the specified a	accuracy, may lead					
Message	Header	Class	ID	Len	gth (Byte	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x13	0x40	12			see below	CK_A CK_B					
Payload desci	ription:												
Byte offset	Type	Name			Scale	Unit	Description						
0	U1	type			-	-	Message type (0x21 for this type)						
1	U1	versio	n		-	-	Message version (0x00 for this vers	ion)					
2	U1	reserve	ed0		-	-	Reserved						
3	X1	flags			-	-	Frequency reference						
bits 30	U <sub>:4</sub>	source			-	-	0 = frequency available on EXTIN	JT0					
							• 1 = frequency available on EXTIN	JT1					
							• 2-15 = reserved						
bit 4	U <sub>:1</sub>	fall			-	-	use falling edge of EXTINT pulse (de	fault rising)					
4	14	freq			1e-2	Hz	Frequency						
8	U4	freqAc	С		-	ppb	Frequency accuracy						

### 3.13.7.7 Attitude initialization data

Message	UBX-MGA-	UBX-MGA-INI-ATT Attitude initialization data										
	Attitude ini											
Туре	Input											
Comment	ent This message is used to set attitude initialization data.											
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum						
structure	0xb5 0x62	0x13	0x40	28	see below	CK_A CK_B						

Payload description:



Byte offset	Type	Name	Scale	Unit	Description
0	U1	type	-	-	Message type (0x40 for this type)
1	U1	version	-	-	Message version (0x00 for this version)
2	U2	age	-	s	Age of calibration data. (Set to 0 if unknown)
4	14	roll	1e-5	deg	Vehicle roll.
8	14	pitch	1e-5	deg	Vehicle pitch.
12	14	heading	1e-5	deg	Vehicle heading.
16	U4	accRoll	1e-5	deg	Vehicle roll accuracy (if null, roll angle is not available).
20	U4	accPitch	1e-5	deg	Vehicle pitch accuracy (if null, pitch angle is not available).
24	U4	accHeading	1e-5	deg	Vehicle heading accuracy (if null, heading angle is not available).

## 3.13.8 UBX-MGA-QZSS (0x13 0x05)

## 3.13.8.1 QZSS ephemeris assistance

Message	UBX-MG/	A-QZSS-E	PH					
	QZSS epi	nemeris a	ssistan	се				
Туре	Input							
Comment	This mes	sage allov	vs the d	elivery of	QZSS	ephemeris	assistance to a receiver.	
	See secti	on Assist	Now On	line in th	e integ	ration man	ual for details.	
Message	Header	Class	ID	Length	(Bytes)	)	Payload	Checksum
structure	0xb5 0x6	2 0x13	0x05	68			see below	CK_A CK_B
Payload desc	cription:							
Byte offset	Type	Name		Sca	ale	Unit	Description	
0	U1	type		-		-	Message type (0x01 for this type)	
1	U1	version	ı	-		-	Message version (0x00 for this version)	
2	U1	svId		-		-	QZSS Satellite identifier (see Satellite Range 1-5	e Numbering),
3	U1	reserve	ed0	-		-	Reserved	
4	U1	fitInterval		-		-	Fit interval flag	
5	U1	uraInde	ex	-		-	URA index	
6	U1	svHealt	h	-		-	SV health	
7	I1	tgd		2^	-31	S	Group delay differential	
8	U2	iodc		_		-	IODC	
10	U2	toc		2^.	4	S	Clock data reference time	
12	U1	reserve	ed1	-		-	Reserved	
13	I1	af2		2^	-55	s/s squared	Time polynomial coefficient 2	
14	12	af1		2^	-43	s/s	Time polynomial coefficient 1	
16	14	af0		2^	-31	S	Time polynomial coefficient 0	
20	12	crs		2^	-5	m	Crs	
22	12	deltaN		2^	-43	semi- circles/s	Mean motion difference from computed	d value



24	14	m0	2^-31	semi- circles	Mean anomaly at reference time
28	12	cuc	2^-29	radians	Amp of cosine harmonic corr term to arg of lat
30	12	cus	2^-29	radians	Amp of sine harmonic corr term to arg of lat
32	U4	е	2^-33	-	eccentricity
36	U4	sqrtA	2^-19	m^0.5	Square root of the semi-major axis A
40	U2	toe	2^4	s	Reference time of ephemeris
42	12	cic	2^-29	radians	Amp of cos harmonic corr term to angle of inclination
44	14	omega0	2^-31	semi- circles	Long of asc node of orbit plane at weekly epoch
48	12	cis	2^-29	radians	Amp of sine harmonic corr term to angle of inclination
50	12	crc	2^-5	m	Amp of cosine harmonic corr term to orbit radius
52	14	i0	2^-31	semi- circles	Inclination angle at reference time
56	14	omega	2^-31	semi- circles	Argument of perigee
60	14	omegaDot	2^-43	semi- circles/s	Rate of right ascension
64	12	idot	2^-43	semi- circles/s	Rate of inclination angle
66	U1[2]	reserved2	-	-	Reserved

## 3.13.8.2 QZSS almanac assistance

Message	UBX-MG	A-QZSS-	ALM											
	QZSS alı	nanac as	sistance	•										
Туре	Input													
Comment	This mes	This message allows the delivery of QZSS almanac assistance to a receiver.												
	See sect	ion Assis	tNow On	line in the inte	gration man	ual for details.								
Message	Header	Class	i ID	Length (Byte	s)	Payload	Checksum							
structure	0xb5 0x6	62 0x13	0x05	36		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U1	type		-	-	Message type (0x02 for this type								
1	U1	versio	n	-	-	Message version (0x00 for this ve	ersion)							
2	U1	svId		-	-	QZSS Satellite identifier (see Satellite Number Range 1-5								
3	U1	svHeal	th	-	-	Almanac SV health information								
4	U2	е		2^-21	-	Almanac eccentricity								
6	U1	almWNa		-	week	Reference week number of alma field)	inac (the 8-bit WNa							
7	U1	toa		2^12	S	Reference time of almanac								
8	12	deltaI		2^-19	semi- circles	Delta inclination angle at reference	ce time							
10	12	omegaDot		2^-38	semi- circles/s	Almanac rate of right ascension								
12	U4	sqrtA		2^-11	m^0.5	Almanac square root of the semi-	major axis A							
16	14	omega0		2^-23	semi- circles	Almanac long of asc node of orbit	plane at weekly							



20	14	omega	2^-23	semi- circles	Almanac argument of perigee
24	14	m0	2^-23	semi- circles	Almanac mean anomaly at reference time
28	12	af0	2^-20	S	Almanac time polynomial coefficient 0 (8 MSBs)
30	12	af1	2^-38	s/s	Almanac time polynomial coefficient 1
32	U1[4]	reserved0	-	-	Reserved

## 3.13.8.3 QZSS health assistance

Message	UBX-MG/	A-QZSS-H	HEALTH	1										
	QZSS hea	alth assis	tance											
Туре	Input													
Comment	This mes	This message allows the delivery of QZSS health assistance to a receiver.												
	See secti	on Assistl	Now On	line in the inte	egration m	anual for details.								
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x6	2 0x13	0x05	12		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Type	Name		Scale	Unit	Description								
0	U1	type		-	-	Message type (0x04 for this type								
1	U1	version	ı	-	-	Message version (0x00 for this ve	ersion)							
2	U1[2]	reserve	ed0	-	-	Reserved								
4	U1[5]	healthCode		-	-	Each byte represents a QZSS SV (1-5). The of each byte contains the 6 bit health co subframes 4/5, data ID = 3, SV ID = 51								
9	U1[3]	reserve	ed1	-	-	Reserved								

## 3.13.9 UBX-MGA-SF (0x13 0x10)

## 3.13.9.1 Sensor fusion initialization data

Message	UBX-MG/	UBX-MGA-SF-INI												
	Sensor fu	sion initia	alizatio	n data										
Туре	Input/out	put												
Comment	This mess	sage is us	ed to p	oll and set sen	sor fusion ir	nitialization data.								
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x62	2 0x13	0x10	96 + nValA·8	3 + nValB⋅8	see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U1	type		-	-	Message type (0x00 for this type)								
1	U1	version	1	-	-	Message version (0x00 for this ver	sion)							
2	U1	nValA		-	-	Number of values in sensor data re	epeated group							
3	U1	nValB		-	-	Number of values in sensor data re	epeated group B							
4	U2	age		-	S	Age of calibration data. (Set to 0 if	unknown)							
6	U1[90]	reserve	ed0	-	-	Reserved								
Start of repe	ated group (	nValA <b>tir</b>	nes)											
96 + n·8	U1[8]	reserve	ed1	-	-	Reserved								



End of repeated group (nValA times)

Start of repeated group (nValB times)										
96 + nValA·8 + n·8	U1[8]	reserved2	-	-	Reserved					
End of repeate	End of repeated group (nValB times)									

#### 3.13.9.2 Sensor fusion initialization data

Message	UBX-MG	A-SF-IN	2				
	Sensor fo	usion ini	ializatio	n data			
Туре	Input/out	tput					
Comment	This mes	sage is u	sed to po	oll and set ser	nsor fusion	initialization data.	
Message	Header	Clas	s ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x6	2 0x1	3 0x10	464		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	type		-	-	Message type (0x10 for this type)	
1	U1	versi	n	-	-	Message version (0x00 for this ve	rsion)
2	U1[462]	reserv	red0	-	-	Reserved	

# 3.14 UBX-MON (0x0a)

The messages in the UBX-MON class are used to report the receiver status, such as hardware status or I/O subsystem statistics.

## 3.14.1 UBX-MON-COMMS (0x0a 0x36)

## 3.14.1.1 Communication port information

Message	UBX-MON	N-COMM	S										
	Communi	ication po	ort infor	mation									
Туре	Periodic/p	olled											
Comment	of ports t	Consolidated communications information for all ports. The size of the message is determined by the number of ports that are in use on the receiver. A port is only included if communication, either send or receive, has been initiated on that port.											
Message	Header	Class	ID	Length (Bytes	)	Payload	Checksum						
structure	0xb5 0x62	2 0x0a	0x36	8 + nPorts·40		see below	CK_A CK_B						
Payload descr	ription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	version	ì	-	-	Message version (0x00 for this version	)						
1	U1	nPorts		-	-	Number of ports included							
2	X1	txErro	îs	-	-	TX error bitmask							
bit 0	U <sub>:1</sub>	mem		-	-	Memory Allocation error							
bit 1	U <sub>:1</sub>	alloc		-	-	Allocation error (TX buffer full)							
bits 42	U:3	output	ort	-	-	Output port: Reports the port from message was output from.  • 0 = N/A	m which this						

- 1 = I2C



					• 2 = UART1
					• 3 = UART2
					• 4 = USB
					• 5 = SPI
3	U1	reserved0	-	-	Reserved
4	U1[4]	protIds	-		The identifiers of the protocols reported in the msgs array. 0: UBX, 1: NMEA, 2: RTCM2, 5: RTCM3, 6: SPARTN, 0xFF: No protocol reported.
Start of repe	ated group	o (nPorts times)			
8 + n·40	U2	portId	-	-	Unique identifier for the port. See section Communications ports in the integration manual for details.
10 + n·40	U2	txPending	-	bytes	Number of bytes pending in transmitter buffer
12 + n·40	U4	txBytes	-	bytes	Number of bytes ever sent
16 + n·40	U1	txUsage	-	%	Maximum usage transmitter buffer during the last sysmon period
17 + n·40	U1	txPeakUsage	-	%	Maximum usage transmitter buffer
18 + n·40	U2	rxPending	-	bytes	Number of bytes in receiver buffer
20 + n·40	U4	rxBytes	-	bytes	Number of bytes ever received
24 + n·40	U1	rxUsage	-	%	Maximum usage receiver buffer during the last sysmon period
25 + n·40	U1	rxPeakUsage	-	%	Maximum usage receiver buffer
26 + n·40	U2	overrunErrs	-	-	Number of 100 ms timeslots with overrun errors
28 + n·40	U2[4]	msgs	-	msg	Number of successfully parsed messages for each protocol. The reported protocols are identified through the protlds field.
36 + n·40	U1[8]	reserved1	-	-	Reserved
44 + n·40	U4	skipped	-	bytes	Number of skipped bytes
End of renea	ated aroup	(nPorts times)			

## 3.14.2 UBX-MON-GNSS (0x0a 0x28)

## 3.14.2.1 Information message major GNSS selection

Message	UBX-MON-GNSS											
	Information	on messa	ige maj	or GNSS sele	ction							
Туре	Polled											
	This message reports major GNSS selection. It does this by means of bit masks in U1 fields. Each bit in a bit mask corresponds to one major GNSS. Augmentation systems are not reported.											
Message	Header	Class	ID	Length (Byt	es)	Payload	Checksum					
	0xb5 0x62	2 0x0a	0x28	8		see below	CK_A CK_B					
Payload descri	ption:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U1	version	1	-	Message version (0x00 fo		ersion)					
1	X1	supported				A bit mask showing the major supported by this receiver	GNSS that can be					
bit 0	U:1	GPSSup		-	-	GPS is supported						



bit 1	U:1	GlonassSup	-	-	GLONASS is supported
bit 2	U <sub>:1</sub>	BeidouSup	-	-	BeiDou is supported
bit 3	U <sub>:1</sub>	GalileoSup	-	-	Galileo is supported
2	X1	defaultGnss	-	-	A bit mask showing the default major GNSS selection. If the default major GNSS selection is currently configured in the OTP memory for this receiver, it takes precedence over the default major GNSS selection configured in the executing firmware of this receiver.
bit 0	U <sub>:1</sub>	GPSDef	-	-	GPS is default-enabled
bit 1	U <sub>:1</sub>	GlonassDef	-	-	GLONASS is default-enabled
bit 2	U <sub>:1</sub>	BeidouDef	-	-	BeiDou is default-enabled
bit 3	U <sub>:1</sub>	GalileoDef	-	-	Galileo is default-enabled
3	X1	enabled	-	-	A bit mask showing the current major GNSS selection enabled for this receiver
bit 0	U <sub>:1</sub>	GPSEna	-	-	GPS is enabled
bit 1	U <sub>:1</sub>	GlonassEna	-	-	GLONASS is enabled
bit 2	U <sub>:1</sub>	BeidouEna	-	-	BeiDou is enabled
bit 3	U <sub>:1</sub>	GalileoEna	-	-	Galileo is enabled
4	U1	simultaneous	-	-	Maximum number of concurrent major GNSS that can be supported by this receiver
5	U1[3]	reserved0	-	-	Reserved

## 3.14.3 UBX-MON-HW (0x0a 0x09)

#### 3.14.3.1 Hardware status

Message	UBX-MC	N-H	<del>I</del> W									
	Hardwai	e st	atus									
Туре	Periodic,	/poll	ed									
Comment	This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead.											
	Status of different aspects of the hardware, such as antenna, PIO/peripheral pins, noise level, automatic gair control (AGC)											
Message	Header		Class	ID	Leng	gth (Byte	es)	Payload	Checksum			
structure	0xb5 0x6	62	0x0a	0x09	60			see below	CK_A CK_B			
Payload desc	ription:											
Byte offset	Type	Ná	ame			Scale	Unit	Description				
0	X4	pi	inSel			-	-	Mask of pins set as peripheral/PIO				
4	X4	р	inBank			-	-	Mask of pins set as bank A/B				
8	X4	pi	LnDir			-	-	Mask of pins set as input/output				
12	X4	pi	inVal			-	-	Mask of pins value low/high				
16	U2	no	oisePe	rMS		-	-	Noise level as measured by the GPS	S core			
18	U2	aç	gcCnt			-	-	AGC Monitor, as percentage of max to 8191 (100%)	kimum gain,range C			



20		U1	aStatus	-	-	Status of the antenna supervisor state machine (0=INIT, 1=DONTKNOW, 2=OK, 3=SHORT, 4=OPEN)
21		U1	aPower	-	-	Current power status of antenna (0=OFF, 1=ON, 2=DONTKNOW)
22		X1	flags	-	-	Flags
	bit 0	U <sub>:1</sub>	rtcCalib	-	-	RTC is calibrated
	bit 1	U <sub>:1</sub>	safeBoot	-	-	Safeboot mode (0 = inactive, 1 = active)
	bits 32	U:2	jammingState	-	-	Output from jamming/interference monitor (0 = unknown or feature disabled or flag unavailable, 1 = ok - no significant jamming, 2 = warning - interference visible but fix OK, 3 = critical - interference visible and no fix). This flag is deprecated in protocol versions that support UBX-SEC-SIG (version 0x02) and always reported as 0; instead jammingState in UBX-SEC-SIG should be monitored.
	bit 4	U <sub>:1</sub>	xtalAbsent	-	-	RTC xtal has been determined to be absent (not supported for protocol versions less than 18.00)
23		U1	reserved0	-	-	Reserved
24		X4	usedMask	-	-	Mask of pins that are used by the virtual pin manager
28		U1[17]	VP	-	-	Array of pin mappings for each of the 17 physical pins
45		U1	cwSuppression	-	-	CW interference suppression level, scaled (0 = no CW jamming, 255 = strong CW jamming)
46		U1[2]	reserved1	-	-	Reserved
48		X4	pinIrq	-	-	Mask of pins value using the PIO Irq
52		X4	pullH	-	-	Mask of pins value using the PIO pull high resistor
56		X4	pullL	-	-	Mask of pins value using the PIO pull low resistor

# 3.14.4 UBX-MON-HW2 (0x0a 0x0b)

## 3.14.4.1 Extended hardware status

Message	UBX-MOI	I-HW2											
	Extended	hardwar	e statu	5									
Туре	Periodic/p	Periodic/polled											
Comment	This message is deprecated in this protocol version. Use UBX-MON-HW3 and UBX-MON-RF instead.												
	Status of	different	aspect	s of the hardw	are such a	s Imbalance, Low-Level Configuration	on and POST Results.						
		The first four parameters of this message represent the complex signal from the RF front end. The following rules of thumb apply:											
	• The si	• The smaller the absolute value of the variable ofsI and ofsQ, the better.											
	,	• Ideally, the magnitude of the I-part (mag1) and the Q-part (magQ) of the complex signal should be the same.											
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	2 0x0a	0x0b	28		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	l1 ofsI			-	-	Imbalance of I-part of complex signal, scaled (-12 = max. negative imbalance, 127 = max. positiv imbalance)							



1	U1	magI	-	-	Magnitude of I-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
2	I1	ofsQ	-	-	Imbalance of Q-part of complex signal, scaled (-128 = max. negative imbalance, 127 = max. positive imbalance)
3	U1	magQ	-	-	Magnitude of Q-part of complex signal, scaled (0 = no signal, 255 = max. magnitude)
4	U1	cfgSource	-	-	Source of low-level configuration
					(114 = ROM, 111 = OTP, 112 = config pins, 102 = flash image)
5	U1[3]	reserved0	-	-	Reserved
8	U4	lowLevCfg	-	-	Low-level configuration (obsolete for protocol versions greater than 15.00)
12	U1[8]	reserved1	-	-	Reserved
20	U4	postStatus	-	-	POST status word
24	U1[4]	reserved2	-	-	Reserved

# 3.14.5 UBX-MON-HW3 (0x0a 0x37)

## 3.14.5.1 I/O pin status

Message	ι	UBX-MON-HW3												
	I,	/O pin st	atu	s										
Туре	F	Periodic/p	olle	ed										
Comment	C	or Output							h HW I/O pin, for example whether the p					
		Header		Class					atus information, see the UBX-MON-RF n  Payload	Checksum				
Message structure	_	0xb5 0x6		0x0a	0x37	Length (Bytes)  22 + nPins·6			see below	CK_A CK_B				
Payload des	scrip	tion:												
Byte offset	7	Гуре	Na	me		9	Scale	Unit	Description					
0	ι	U1 version			-	-	-	Message version (0x00 for this versio	n)					
1	ι	J1	1 nPins			-	-	-	The number of I/O pins included					
2 bit 0	>	<b>&lt;</b> 1	fl	ags		-	-	-	Flags					
	to l	J <sub>:1</sub>	rt	cCali	b	-	-	-	RTC is calibrated					
bi	t 1 \	J <sub>:1</sub>	safeBoot				-	Safeboot mode (0 = inactive, 1 = active)						
bi	t 2 \	J <sub>:1</sub>	xt	alAbs	ent	_	-	-	RTC xtal has been determined to be absent					
3	(	CH[10]	hw	Versi	on	-	-	-	Zero-terminated hardware version sthat returned in the UBX-MON-VER n	•				
13	ι	J1[9]	re	serve	d0	-	-	-	Reserved					
Start of rep	eate	ed group (	(nP:	ins <b>tin</b>	nes)									
22 + n·6	U1 reserved1 Reserved													
23 + n·6	U1 pinId				-	Identifier for the pin, including both external an internal pins								
24 + n·6	>	(2	pi	nMask		-	-	-	Pin mask					
	_													



bit 0	U:1	periphPIO	-	-	Pin is set to peripheral or PIO? 0=Peripheral 1=PIO
bits 31	U:3	pinBank	-	-	Bank the pin belongs to, where 0=A 1=B 2=C 3=D 4=E 5=F 6=G 7=H
bit 4	U <sub>:1</sub>	direction	-	-	Pin direction? 0=Input 1=Output
bit 5	bit 5 U:1 value		-	-	Pin value? 0=Low 1=High
bit 6	U <sub>:1</sub>	vpManager	-	-	Used by virtual pin manager? 0=No 1=Yes
bit 7	U <sub>:1</sub>	pioIrq	-	-	Interrupt enabled? 0=No 1=Yes
bit 8	U <sub>:1</sub>	pioPullHigh	-	-	Using pull high resistor? 0=No 1=Yes
bit 9	U:1	pioPullLow	-	-	Using pull low resistor 0=No 1=Yes
26 + n·6	U1	VP	-	-	Virtual pin mapping
27 + n·6	U1	reserved2	-	-	Reserved
End of repeat	ed grou	p (nPins times)			

## 3.14.6 UBX-MON-IO (0x0a 0x02)

## 3.14.6.1 I/O system status

Message	UBX-MO	N-IO										
	I/O syste	m status										
Туре	Periodic/polled											
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.											
	The size of the message is determined by the number of ports 'N' the receiver supports, i.e. on u-blox 5 th number of ports is 6.											
Message	Header	Class	ID	Length (Bytes	5)	Payload	Checksum					
structure	0xb5 0x6	2 0x0a	0x02	[0n]·20		see below	CK_A CK_B					
Payload desc	ription:											
Byte offset	Type	Name		Scale	Unit	Description						
Start of repea	ated group	(N times)										
0 + n·20	U4	rxBytes		-	bytes	Number of bytes ever received						
4 + n·20	U4	txBytes		-	bytes	Number of bytes ever sent						
8 + n·20	U2	parityE	rrs	-	-	Number of 100 ms timeslots with p	parity errors					
10 + n·20	U2	framing	Errs	-	-	Number of 100 ms timeslots with f	raming errors					
12 + n·20	U2	overrun	Errs	-	-	Number of 100 ms timeslots with o	verrun errors					
14 + n·20	U2	breakCond		-	-	Number of 100 ms timeslots with b	reak conditions					
16 + n·20	U1[4]	reserved	d0	-	-	Reserved						
End of repeat	ted group (I	N times)										

## 3.14.7 UBX-MON-MSGPP (0x0a 0x06)

## 3.14.7.1 Message parse and process status

Message	UBX-MON-MSGPP
	Message parse and process status
Туре	Periodic/polled
Comment	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.



Message	Header	Class	ID	Length (Bytes	5)	Payload	Checksum
structure	0xb5 0x6	62 0x0a	0x06	120		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U2[8]	msg1		-	msgs	Number of successfully parsed me protocol on port0	essages for each
16	U2[8]	msg2		-	msgs	Number of successfully parsed me protocol on port1	essages for each
32	U2[8]	msg3		-	msgs	Number of successfully parsed me protocol on port2	essages for each
48	U2[8]	msg4		-	msgs	Number of successfully parsed me protocol on port3	essages for each
64	U2[8]	msg5		-	msgs	Number of successfully parsed me protocol on port4	essages for each
80	U2[8]	msg6		-	msgs	Number of successfully parsed me protocol on port5	essages for each
96	U4[6]	skippe	d	-	bytes	Number skipped bytes for each port	

## 3.14.8 UBX-MON-PATCH (0x0a 0x27)

## 3.14.8.1 Installed patches

Message	UBX-MON-PATCH Installed patches											
Туре	Polled											
Comment	This message reports information about patches installed and currently enabled on the receiver. It do not report on patches installed and then disabled. An enabled patch is considered active when the receivexecutes from the code space where the patch resides on. For example, a ROM patch is reported active or when the system runs from ROM.											
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x62	2 0x0a	0x27	4 + nEntries	·16	see below	CK_A CK_B					
Payload descr	iption:											
Byte offset	Type	Name		Scale	Unit	Description						
0	U2	version		-	-	Message version (0x0001 for this version)						
2	U2	nEntries		-	-	Total number of reported patche	es					
Start of repeat	ted group (	nEntrie:	s <b>times</b>	)								
4 + n·16	X4	patchIn	fo	-	-	Status information about the re	ported patch					
bit 0	U <sub>:1</sub>	activat	ed	-	-	1: the patch is active, 0: otherwi	se					
bits 21	U <sub>:2</sub>	location		-	-	Indicates where the patch is sto BBR, 3: file system	red. 0: OTP, 1: ROM, 2:					
8 + n·16	U4	comparator Number		-	-	The number of the comparator						
12 + n·16	U4	patchAd	dress	-	-	The address that is targeted by	the patch					
16 + n·16	U4	patchDa	ta	-	-	The data that is inserted at the	patchAddress					
End of repeate	ed group (n	Entries	times)									

## 3.14.9 UBX-MON-RF (0x0a 0x38)



#### 3.14.9.1 RF information

Message	UBX-MON-RF										
	RF inform	nation									
Туре	Periodic/p	oolled									
Comment	Information for each RF block. There are as many RF blocks reported as bands supported by this receive										
Message	Header	Class ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x62	2 0x0a 0x3	8 4 + nBlocks	·24	see below	CK_A CK_B					
Payload descr	iption:										
Byte offset	Type	Name	Scale	Unit	Description						
0	U1	version	-	-	Message version (0x00 for this ver	sion)					
1	U1	nBlocks	-	-	The number of RF blocks included						
2	U1[2]	reserved0	-	-	Reserved						
Start of repea	ted group (	nBlocks <b>time</b>	s)								
4 + n·24	U1	blockId	-	-	RF block ID (0 = L1 band, 1 = L2 or on product configuration)	L5 band dependin					
5 + n·24	X1	flags	-	-	Flags						
bits 10	U:2	jammingStat	e -	-	Output from jamming/interferer unknown or feature disabled or flook - no significant jamming, 2 = wa visible but fix OK, 3 = critical - interno fix). This flag is deprecated in that support UBX-SEC-SIG (versio reported as 0; instead jammingStashould be monitored.	ag unavailable, 1 : rning - interference ference visible and n protocol version: n 0x02) and alway:					
6 + n·24	U1	antStatus	-	-	Status of the antenna machine (0x00=INIT, 0x01=DONT 0x03=SHORT, 0x04=OPEN)	supervisor state FKNOW, 0x02=0K					
7 + n·24	U1	antPower	-	-	Current power status of ant 0x01=ON, 0x02=DONTKNOW)	enna (0x00=OFF					
8 + n·24	U4	postStatus	-	-	POST status word						
12 + n·24	U1[4]	reserved1	-	-	Reserved						
16 + n·24	U2	noisePerMS	-	-	Noise level as measured by the GPS	6 core					
18 + n·24	U2	agcCnt	-	-	AGC Monitor, as percentage of ma 0 to 8191 (100%)	ıximum gain, rangı					
20 + n·24	U1	cwSuppressi	on -	-	CW interference suppression leve jamming, 255 = strong CW jammir						
21 + n·24	I1	ofsI	-	-	Imbalance of I-part of complex s = max. negative imbalance, 12 <sup>-1</sup> imbalance)	•					
22 + n·24	U1	magI	-	-	Magnitude of I-part of complex signal, 255 = max.magnitude)	gnal, scaled (0 = no					
23 + n·24	I1	ofsQ	-	-	Imbalance of Q-part of complex s = max. negative imbalance, 12 <sup>-1</sup> imbalance)	•					
24 + n·24	U1	magQ	-	-	Magnitude of Q-part of complex si signal, 255 = max.magnitude)	gnal, scaled (0 = no					
25 + n·24	U1[3]	reserved2	_	_	Reserved						



End of repeated group (nBlocks times)

## 3.14.10 UBX-MON-RXBUF (0x0a 0x07)

#### 3.14.10.1 Receiver buffer status

Message	UBX-MON-RXBUF										
	Receiver buffer status										
Туре	Periodic/p	olled									
Comment	This mess	age is de	precate	ed in this prot	ocol versio	n. Use UBX-MON-COMMS instead.					
Message structure	Header	Class	ID	Length (Byte	es)	Payload	Checksum				
	0xb5 0x62	2 0x0a	0x07	24		see below	CK_A CK_B				
Payload desc	cription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U2[6] pending			-	bytes	Number of bytes pending in receitarget	iver buffer for each				
12	U1[6]	usage		-	%	Maximum usage receiver buffe sysmon period for each target	r during the last				
18	U1[6]	peakUsa	.ge	-	%	Maximum usage receiver buffer fo	r each target				

## 3.14.11 UBX-MON-RXR (0x0a 0x21)

#### 3.14.11.1 Receiver status information

Message	UBX-MON-RXR											
	Receiver status information											
Туре	Output											
Comment	The receiver ready message is sent when the receiver changes from or to backup mode.											
Message	Header	Class ID		Length (Byte	Length (Bytes)		Checksum					
structure	0xb5 0x62	2 0x0a	0x21	1		see below	CK_A CK_B					
Payload descr	iption:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	X1	flags		-	-	Receiver status flags						
bit 0	U <sub>:1</sub>	awake		-	-	not in backup mode						

## 3.14.12 UBX-MON-SPAN (0x0a 0x31)

## 3.14.12.1 Signal characteristics

Message	UBX-MON-SPAN							
	Signal characteristics							
Туре	Periodic/polled							
Comment	This message is to be used as a basic spectrum analyzer, where it displays one spectrum for each of the receiver's existing RF paths. The spectrum is conveyed with the following parameters: The frequency span in Hz, the frequency bin resolution in Hz, the center frequency in Hz, and 256 bins with amplitude data. Additionally, in order to give further insight on the signal captured by the receiver, the current gain of the internal programmable gain amplifier (PGA) is provided.							
	This message gives information for comparative analysis rather than absolute and precise spectrum overview. Users should not expect highly accurate spectrum amplitude.							
	Note that the PGA gain is not included in the spectrum data but is available as a separate field. Neither the spectrum, nor the PGA gain considers the internal fixed LNA gain or an external third-party LNA.							



The center frequency at each bin, assuming a zero-based bin count, can be computed as f(i) = center + span \* (i - 127) / 256

Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum	
structure	0xb5 0x6	2 0x0a	0x31	4 + numRfBlocks·272		see below	CK_A CK_B	
Payload desc	ription:							
Byte offset	Type	Name		Scale	Unit	Description		
0	U1	version	L	-	-	Message version (0x00 for this version	on)	
1	U1	numRfBl	ocks	-	-	Number of RF blocks included		
2	U1[2]	reserved0			-	Reserved		
Start of repea	ated group	(numRfBl	ocks <b>ti</b>	mes)				
4 + n·272	U1[256]	spectru	ım	2^-2	dB	Spectrum data (number of points = dB]	span/res) [Uuu.f	
260 + n·272	U4	span		-	Hz	Spectrum span		
264 + n·272	U4	res		-	Hz	Resolution of the spectrum		
268 + n·272	U4	center		-	Hz	Center of spectrum span		
	U1	pga		-	dB	Programmable gain amplifier		
272 + n·272		1- 5						

## 3.14.13 UBX-MON-SPT (0x0a 0x2f)

## 3.14.13.1 Sensor production test

Message	UBX-MON-SPT Sensor production test											
Туре	Polled											
Comment	This mess	This message reports the state of, and measurements made during, sensor self-tests.										
	This message can also be used to retrieve information about detected sensor(s) and driver(s) used.											
		This message is only supported if a sensor is directly connected to the u-blox chip. This includes modules that contain IMUs.										
	Note that this message shows the status of the last self-test since sensor startup. The self-test results are not stored in non-volatile memory.											
Message	Header	Class	ID	Length (Byte	es)		Payload	Checksum				
structure	0xb5 0x62	2 0x0a	0x2f	4 + numSen	sor·4 + nur	nRes·12	see below	CK_A CK_B				
Payload desc	ription:											
Byte offset	Type	Name		Scale	Unit	Description	on					
0	U1	version	L	-	-	Message	version (0x01 for this v	rersion)				
1	U1	numSens	or	-	-	number o	of sensors reported in th	nis message				
2	U1	numRes		-	-	number o	number of result items reported in this message					
3	U1	reserve	·d0	_	-	Reserved						
5	•	reserve										



numSensor·4 + n·12					sensorIdState field
4+	U2	sensorIdRes	-	-	Sensor ID; eligible values are the same as in
Start of repea	ted group	(numRes times)			
End of repeat	ed group (	numSensor <b>times</b> )			
7 + n·4	U1	drvFileName	-	-	0 if the active driver is loaded from image, last character of the file name if it is loaded from separate file.
6 + n·4	U1	testState	-	-	<ul> <li>State of one sensor's test, it can be</li> <li>0: test not yet started</li> <li>1: test started but not yet finished</li> <li>2: test did not finish due to error during execution</li> <li>3: test finished normally, test data is available</li> </ul>
bits 74	U <sub>:4</sub>	drvVerMin	-	-	Driver minor version
bits 30	U <sub>:4</sub>	drvVerMaj	-	-	Driver major version
5 + n·4	X1	drvVer	-	-	Version information
					temperature sensor from InvenSense TDK  23: LSM6DSOW, 6-axis IMU with 85 deg temperature sensor from ST  Not all sensors are supported in any released firmware.  Refer to the release notes to find out which sensor is supported by a certain firmware.
					<ul> <li>temperature sensor from InvenSense TDK</li> <li>20: IIM42652, 6-axis IMU with 105 deg temperature sensor from InvenSense TDK</li> <li>21: BMI32X, 6-axis IMU with 85 deg temperature sensor from Bosch</li> <li>22: IAM20680HT, 6-axis IMU with 105 deg</li> </ul>
					<ul> <li>16: BMI260, 6-axis IMU with temperature sensor from Bosch</li> <li>17: ISM330DLC, 6-axis IMU with temperature sensor from ST</li> <li>18: LSM6DSR, 6-axis IMU with 85 deg temperature sensor from ST / ISM330DHCX, 6-axis IMU with 105 deg temperature sensor from ST</li> <li>19: ICM42605, 6-axis IMU with 85 deg</li> </ul>
					<ul> <li>13: ST LSM6DSL 6-axis IMU with temperature sensor</li> <li>14: SMG130, 3-axis gyroscope with temperature sensor from Bosch</li> <li>15: SMI230, 6-axis IMU with temperature sensor from Bosch</li> </ul>
					<ul> <li>sensor</li> <li>12: MPU6515, 6-axis inertial sensor from Invensense</li> <li>13: ST I SMEDSI 6 axis IMULuith temperature</li> </ul>
					<ul> <li>7: ST LSM6DS3 6-axis IMU with temperature sensor</li> <li>9: Bosch SMI130 6-axis IMU with temperature</li> </ul>
					<ul> <li>2: Invensense MPU6500 6-axis IMU with temperature sensor</li> <li>3: Bosch BMI160 6-axis IMU with temperature</li> </ul>
					The following IDs are defined, others are reserved:  1: ST LSM6DS0 6-axis IMU with temperature sensor
4 + n·4	U1	sensorId	-	-	Sensor ID



6+ U2 numSensor·4 + n·12	sensorType	Sensor type and axis (if applicable) to which the result refers  The following values are defined, others are reserved:  • 5: Gyroscope z axis  • 12: Gyroscope temperature  • 13: Gyroscope y axis  • 14: Gyroscope x axis  • 16: Accelerometer x axis  • 17: Accelerometer y axis  • 18: Accelerometer z axis  • 19: Barometer  • 22: Magnetometer x axis  • 23: Magnetometer y axis  • 24: Magnetometer z axis  • 25: Barometer temperature
8+ U2 numSensor·4 + n·12	resType	<ul> <li>The type of result stored in the value field</li> <li>1: Measurement without self-test offset (raw and unscaled digital value)</li> <li>2: Measurement with positive self-test offset (raw and unscaled digital value)</li> <li>3: Measurement with negative self-test offset (raw and unscaled digital value)</li> <li>4: Minimum off-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>5: Maximum off-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>6: Minimum negative-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>7: Maximum negative-to-positive to pass self-test, as deduced from on-chip trimming information</li> <li>8: Self-test passed; test passed if value = 1 and failed if 0. Used if the decision is read out from the sensor itself.</li> </ul>
10 + U1[2] numSensor·4 + n·12	reserved1	 Reserved
12 + I4 numSensor·4 + n·12	value	 value of the specific test result
End of repeated grou	ıp (numRes times)	

## 3.14.14 UBX-MON-SYS (0x0a 0x39)

## 3.14.14.1 Current system performance information

UBX-MON-SYS									
Current system performance information									
Periodic/polled									
This message contains operationally relevant system information for monitoring purposes. cpuLoadMax value is only valid, if 1 second output frequency is set.  Detailed information about ioUsage/ioUsageMax are available in UBX-MON-COMMS message. tempValue has an accuracy of +/- 2 deg.									
Header	Class	ID	Length (Bytes)	Payload	Checksum				
0xb5 0x62	0x0a	0x39	24	see below	CK_A CK_B				
	Current sys Periodic/po This messa cpuLoadMa Detailed inf tempValue Header	Current system pe Periodic/polled This message cont cpuLoadMax value Detailed informatio tempValue has an a Header Class	Current system performation  Periodic/polled  This message contains op opuLoadMax value is only of the periodic periodi	Current system performance information  Periodic/polled  This message contains operationally relevant system opuLoadMax value is only valid, if 1 second output from Detailed information about ioUsage/ioUsageMax are tempValue has an accuracy of +/- 2 deg.  Header Class ID Length (Bytes)	Current system performance information  Periodic/polled  This message contains operationally relevant system information for monitoring purpose cpuLoadMax value is only valid, if 1 second output frequency is set.  Detailed information about ioUsage/ioUsageMax are available in UBX-MON-COMMS mess tempValue has an accuracy of +/- 2 deg.  Header Class ID Length (Bytes) Payload				



Payload desc	cription:				
Byte offset	Type	Name	Scale	Unit	Description
0	U1	msgVer	-	-	Message Version (0x01)
1	U1	bootType	-	-	Boot type system
					0-Unknown
					1-Cold Start
					2-Watchdog
					3-Hardware reset
					4-Hardware backup
					5-Software backup
					6-Software reset
					7-VIO fail
					8-VDD_X fail
					9-VDD_RF fail
					10-V_CORE_HIGH fail
					11-System reset
2	U1	cpuLoad	-	-	Highest actual load of realtime tasks of all CPUs in $\%$
3	U1	cpuLoadMax	-	-	Maximal CPU load value in % seen since last restart
4	U1	memUsage	-	-	Highest actual dynamic memory usage of all CPUs ir %
5	U1	memUsageMax	-	-	Maximal dynamic memory usage in % seen since last restart
6	U1	ioUsage	-	-	Highest actual IO bandwidth usage of all rx/tx interfaces in %
7	U1	ioUsageMax	-	-	Maximal bandwidth usage of all rx/tx interfaces in % seen since last restart
8	U4	runTime	-	sec	Time since last restart
12	U2	noticeCount	-	-	Number of notices occured since last restart
14	U2	warnCount	-	-	Number of warnings occured since last restart
16	U2	errorCount	-	-	Number of errors occured since last restart
18	I1	tempValue	-	-	Temperature value [C]
19	U1[5]	reserved0	_		Reserved

# 3.14.15 UBX-MON-TXBUF (0x0a 0x08)

#### 3.14.15.1 Transmitter buffer status

Message	UBX-MOI	UBX-MON-TXBUF											
	Transmit	Transmitter buffer status											
Туре	Periodic/p	Periodic/polled											
Comment	This mes	This message is deprecated in this protocol version. Use UBX-MON-COMMS instead.											
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	2 0x0a	0x08	28		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Type	Name		Scale	Unit	Description							
0	U2[6]	pending	ſ	-	bytes	Number of bytes pending in teach target	ransmitter buffer for						



12		U1[6]	usage	-	%	Maximum usage transmitter buffer during the last sysmon period for each target
18		U1[6]	peakUsage	-	%	Maximum usage transmitter buffer for each target
24		U1	tUsage	-	%	Maximum usage of transmitter buffer during the last sysmon period for all targets
25		U1	tPeakusage	-	%	Maximum usage of transmitter buffer for all targets
26		X1	errors	-	-	Error bitmask
	bits 50	U:6	limit	-	-	Buffer limit of corresponding target reached
	bit 6	U <sub>:1</sub>	mem	-	-	Memory Allocation error
	bit 7	U <sub>:1</sub>	alloc	-	-	Allocation error (TX buffer full)
27		U1	reserved0	-	-	Reserved

# 3.14.16 UBX-MON-VER (0x0a 0x04)

### 3.14.16.1 Poll receiver and software version

Message	UBX-MON-	UBX-MON-VER									
	Poll receive	r and so	oftware	version							
Туре	Poll request										
Comment											
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x0a	0x04	0	see below	CK_A CK_B					
Payload	This message has no payload.										

#### 3.14.16.2 Receiver and software version

Message	UBX-MO	N-VER					
	Receiver	and softw	vare ver	sion			
Туре	Polled						
Comment							
Message	Header Class ID		ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x6	2 0x0a	0x04	40 + [0n]·30	)	see below	CK_A CK_B
Payload desc	cription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	CH[30]	swVersi	on	-	-	Nul-terminated software version	on string.
30	CH[10]	hwVersion		-	-	Nul-terminated hardware versi	on string
Start of repe	ated group	(N times)					



40 + n·30 CH[30] extension -

Extended software information strings.

A series of nul-terminated strings. Each extension field is 30 characters long and contains varying software information. Not all extension fields may appear.

Examples of reported information: the software version string of the underlying ROM (when the receiver's firmware is running from flash), the firmware version, the supported protocol version, the module identifier, the flash information structure (FIS) file information, the supported major GNSS, the supported augmentation systems.

See Firmware and protocol versions for details.

End of repeated group (N times)

# 3.15 UBX-NAV (0x01)

The messages in the UBX-NAV class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

### 3.15.1 UBX-NAV-ATT (0x01 0x05)

#### 3.15.1.1 Attitude solution

Message	UBX-NA\	/-ATT										
	Attitude	solution										
Туре	Periodic/p	oolled										
Comment	This mes	This message outputs the attitude solution as roll, pitch and heading angles.										
		See important comments concerning vehicle attitude given in the Vehicle attitude output section of the integration manual.										
Message	Header	Header Class ID			tes)	Payload	Checksum					
structure	0xb5 0x6	2 0x01	0x05	32		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Type	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.					
						See section iTOW timestamps manual for details.	in the integration					
4	U1	version	1	-	-	Message version (0x00 for this ve	rsion)					
5	U1[3]	reserve	ed0	-	-	Reserved						
8	14	roll		1e-5	deg	Vehicle roll.						
12	14	pitch		1e-5	deg	Vehicle pitch.						
16	14	heading	4	1e-5	deg	Vehicle heading.						
20	U4	accRoll	_	1e-5	deg	Vehicle roll accuracy (if null, roll ar	ngle is not available).					
24	U4	accPito	ch	1e-5	deg	Vehicle pitch accuracy (if null, available).	pitch angle is not					
28	U4	accHeac	ling	1e-5	deg	Vehicle heading accuracy (if null, available).	heading angle is not					

#### 3.15.2 UBX-NAV-CLOCK (0x01 0x22)



#### 3.15.2.1 Clock solution

Message	UBX-NAV	-CLOCK					
	Clock sol	ution					
Туре	Periodic/p	oolled					
Comment							
Message	Header	Class	ID	Length (Bytes)		Payload	Checksum
structure	0xb5 0x6	2 0x01	0x22	20		see below	CK_A CK_B
Payload desc	cription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the nav section Navigation epochs in the for details.	•
						See section iTOW timestamps manual for details.	in the integration
4	14	clkB		-	ns	Clock bias	
8	14	clkD		-	ns/s	Clock drift	
12	U4	tAcc		-	ns	Time accuracy estimate	
16	U4	fAcc		-	ps/s	Frequency accuracy estimate	

# 3.15.3 UBX-NAV-COV (0x01 0x36)

#### 3.15.3.1 Covariance matrices

Message	UBX-NAV-COV										
	Covariand	ce matric	es								
Туре	Periodic/p	olled									
Comment	coordinat	e system	defined		evel North (N	the position and velocity solutions ), East (E), Down (D) frame. As the c rt.	•				
Message	Header	Header Class ID			es)	Payload	Checksum				
structure	0xb5 0x6	2 0x01	0x36	64		see below	CK_A CK_B				
Payload desc	ription:										
Byte offset	Type	Name		Scale	Unit	Description					
0	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.				
						See section iTOW timestamps manual for details.	in the integration				
4	U1	version	1	-	-	Message version (0x00 for this ver	rsion)				
5	U1	posCovV	alid	-	-	Position covariance matrix validity	flag				
6	U1	velCovV	alid	-	-	Velocity covariance matrix validity	flag				
7	U1[9]	reserve	ed0	-	-	Reserved					
16	R4	posCovN	IN	-	m^2	Position covariance matrix value p	_NN				
20	R4	posCovN	1E	-	m^2	Position covariance matrix value p	_NE				
24	R4	posCovN	ID	-	m^2	Position covariance matrix value p	_ND				
28	R4	posCovE	Œ	-	m^2	Position covariance matrix value p	_EE				
32	R4	posCovE	D D	-	m^2	Position covariance matrix value p	_ED				
36	R4	posCovD	)D	-	m^2	Position covariance matrix value p	_DD				
40	R4	velCovN	IN	-	m^2/s^2	Velocity covariance matrix value v	NN				



44	R4	velCovNE	-	m^2/s^2 Velocity covariance matrix value v_NE
48	R4	velCovND	-	m^2/s^2 Velocity covariance matrix value v_ND
52	R4	velCovEE	-	m^2/s^2 Velocity covariance matrix value v_EE
56	R4	velCovED	-	m^2/s^2 Velocity covariance matrix value v_ED
60	R4	velCovDD	-	m^2/s^2 Velocity covariance matrix value v_DD

# 3.15.4 UBX-NAV-DOP (0x01 0x04)

#### 3.15.4.1 Dilution of precision

Message	UBX-NAV	-DOP								
	Dilution o	f precisio	n							
Туре	Periodic/p	Periodic/polled								
Comment		All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value is 1.56.								
Message	Header Class ID		ID	Length (Bytes)		Payload	Checksum			
structure	0xb5 0x62	2 0x01	0x04	18		see below	CK_A CK_B			
Payload desc	cription:									
Byte offset	Туре	Name		Scale	Unit	Description				
0	U4	iTOW		-	ms	GPS time of week of the navigation See section iTOW timestamps manual for details.	•			
4	U2	gDOP		0.01	-	Geometric DOP				
6	U2	pDOP		0.01	-	Position DOP				
8	U2	tDOP		0.01	-	Time DOP				
10	U2	vDOP		0.01	-	Vertical DOP				
12	U2	hDOP		0.01	-	Horizontal DOP				
14	U2	nDOP		0.01	-	Northing DOP				
16	U2	eDOP		0.01	-	Easting DOP				

# 3.15.5 UBX-NAV-EELL (0x01 0x3d)

#### 3.15.5.1 Position error ellipse parameters

Message	UBX-NA\	/-EELL								
	Position 6	error ellips	se para	meters						
Туре	Periodic/p	oolled								
Comment	This mes	his message outputs the error ellipse parameters for the position solutions.								
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum			
structure	0xb5 0x6	2 0x01	0x3d	16		see below	CK_A CK_B			
Payload desc	cription:									
Byte offset	Type	Name		Scale	Unit	Description				
0	U4	iTOW		-	ms	GPS time of week of the navigati	on epoch.			
						See section iTOW timestamps manual for details.	s in the integration			
4	U1	version	1	-	-	Message version (0x00 for this v	ersion)			
5	U1	reserve	ed0	-	-	Reserved				



6	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
8	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse
12	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse

# 3.15.6 UBX-NAV-EOE (0x01 0x61)

### 3.15.6.1 End of epoch

Message	UBX-NAV-EOE											
	End of epo	och										
Туре	Periodic											
Comment		J				co collect all navigation messages enabled NMEA messages.	s of an epoch. It is output					
Message	Header Class ID			Length (B	Sytes)	Payload	Checksum					
structure	0xb5 0x62	0x01	0x61	4		see below	CK_A CK_B					
Payload desc	ription:											
Byte offset	Туре	Name		Scale	e Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navi	gation epoch.					
						See section iTOW timesta manual for details.	imps in the integration					

# 3.15.7 UBX-NAV-HPPOSECEF (0x01 0x13)

### 3.15.7.1 High precision position solution in ECEF

Message	UBX-NAV	UBX-NAV-HPPOSECEF High precision position solution in ECEF										
	High pred											
Туре	Periodic/p	olled										
Comment	See impo integratio			concerning	validity of <sub>l</sub>	position given in section Navigation o	output filters in the					
Message	Header Class ID			Length (Byt	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x01	0x13	28		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U1	versio	n	-	-	Message version (0x00 for this version)						
1	U1[3]	reserved0		-	-	Reserved						
4	U4	iTOW		-	ms	GPS time of week of the navigatio	n epoch.					
						See section iTOW timestamps manual for details.	in the integration					
8	14	ecefX		-	cm	ECEF X coordinate						
12	14	ecefY		-	cm	ECEF Y coordinate						
16	14	ecefZ		-	cm	ECEF Z coordinate						
20	I1	ecefXH	p	0.1	mm	High precision component of ECEF be in the range of -99+99. Precise ecefX + (ecefXHp * 1e-2).						



21	I1	ecefYHp	0.1	mm	High precision component of ECEF Y coordinate. Must be in the range of -99+99. Precise coordinate in cm = ecefY + (ecefYHp * 1e-2).
22	I1	ecefZHp	0.1	mm	High precision component of ECEF Z coordinate. Must be in the range of -99+99. Precise coordinate in cm = ecefZ + (ecefZHp * 1e-2).
23	X1	flags	-	-	Additional flags
bit (	U <sub>:1</sub>	invalidEcef	-	-	1 = Invalid ecefX, ecefY, ecefZ, ecefXHp, ecefYHp and ecefZHp
24	U4	pAcc	0.1	mm	Position Accuracy Estimate

# 3.15.8 UBX-NAV-HPPOSLLH (0x01 0x14)

### 3.15.8.1 High precision geodetic position solution

Message	UBX-NA\	UBX-NAV-HPPOSLLH											
	High pred	High precision geodetic position solution											
Туре	Periodic/	iodic/polled											
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.												
	This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDAT.												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	2 0x01	0x14	36		see below	CK_A CK_B						
Payload desci	ription:												
Byte offset	Type	Name		Scale	Unit	Description							
0	U1	version	1	-	-	Message version (0x00 for this ver	sion)						
1	U1[2]	reserve	ed0	-	-	Reserved							
3	X1	flags		-	-	Additional flags							
bit 0	U:1	invalidLlh		-	-	1 = Invalid lon, lat, height, hM heightHp and hMSLHp	ISL, lonHp, latHp,						
4	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.						
						See section iTOW timestamps manual for details.	in the integration						
8	14	lon		1e-7	deg	Longitude							
12	14	lat		1e-7	deg	Latitude							
16	14	height		-	mm	Height above ellipsoid.							
20	14	hMSL		-	mm	Height above mean sea level							
24	I1	lonHp		1e-9	deg	High precision component of longit range -99+99. Precise longitude i (lonHp * 1e-2).							
25	I1	latHp		1e-9	deg	High precision component of latitude. Must be range -99+99. Precise latitude in deg * 1e-7 = (latHp * 1e-2).							
26	I1	heightH	Ip	0.1	mm	High precision component of heig Must be in the range -9+9. Preci height + (heightHp * 0.1).							
27	I1	hMSLHp		0.1	mm	High precision component of heig level. Must be in range -9+9. Prec hMSL + (hMSLHp * 0.1)							



28	U4	hAcc	0.1	mm	Horizontal accuracy estimate
32	U4	vAcc	0.1	mm	Vertical accuracy estimate

# 3.15.9 UBX-NAV-ORB (0x01 0x34)

#### 3.15.9.1 GNSS orbit database info

Message	UBX-NA		!£									
		GNSS orbit database info Periodic/polled										
Туре		·										
Comment	Status o	of the GNSS	orbit c	latabase know	ledge.							
Message	Header	Class	ID	Length (Byte.	s)	Payload	Checksum					
structure	0xb5 0x6	62 0x01	0x34	8 + numSv·6		see below	CK_A CK_B					
Payload descr	iption:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.					
						See section iTOW timestamps i manual for details.	n the integratior					
4	U1	version		-	-	Message version (0x01 for this vers	sion)					
5	U1	numSv		-	-	Number of SVs in the database						
6	U1[2]	reserve	d0	-	-	Reserved						
Start of repea	ted group	(numSv tir	nes)									
8 + n·6	U1	gnssId		-	-	GNSS ID						
9 + n·6	U1	svId		-	-	Satellite ID						
10 + n·6	X1	svFlag		-	-	Information Flags						
bits 10	U.2	health		-	-	SV health:						
DITS 1U		ncaren				• 0 = unknown						
						• 1 = healthy						
						• 2 = not healty						
bits 32	U <sub>:2</sub>	visibil	itv	-	-	SV health:						
			- 2			• 0 = unknown						
						• 1 = below horizon						
						• 2 = above horizon						
						• 3 = above elevation mask						
11 + n·6	X1	eph		-	-	Ephemeris data						
						In products supporting L5 signals store multiple ephemeris data sephUsability and ephSource fields on one of the data sets. It is not which data set's status is shown.	sets per satellite show information					
bits 40	U <sub>:5</sub>	ephUsab	ility	-	-	How long the receiver will be able ephemeris data from now on:	to use the stored					
						• 31 = The usability period is unki	nown					
						<ul> <li>30 = The usability period is more minutes</li> </ul>	e than 450					
						<ul> <li>30 &gt; n &gt; 0 = The usability period</li> <li>(n-1)*15 and n*15 minutes</li> </ul>	is between					



					• 0 = Ephemeris can no longer be used
bits 75	U <sub>:3</sub>	ephSource	-	-	0 = not available
					• 1 = GNSS transmission
					• 2 = external aiding
					• 3-7 = other
12 + n·6	X1	alm	-	-	Almanac data
bits 40	U <sub>:5</sub>	almUsability	-	-	How long the receiver will be able to use the stored almanac data from now on:
					• 31 = The usability period is unknown
					• 30 = The usability period is more than 30 days
					• 30 > n > 0 = The usability period is between n-1
					and n days
					• 0 = Almanac can no longer be used
bits 75	U:3	almSource	-	-	0 = not available
					• 1 = GNSS transmission
					• 2 = external aiding
					• 3-7 = other
13 + n·6	X1	otherOrb	-	-	Other orbit data available
bits 40	U <sub>:5</sub>	anoAop Usability	-	-	How long the receiver will be able to use the orbit data from now on:
		USADITICY			• 31 = The usability period is unknown
					• 30 = The usability period is more than 30 days
					• 30 > n > 0 = The usability period is between n-1
					and n days
					• 0 = Data can no longer be used
bits 75	U <sub>:3</sub>	type	-	-	Type of orbit data:
					• 0 = No orbit data available
					• 1 = AssistNow Offline data
					• 2 = AssistNow Autonomous data
					• 3-7 = Other orbit data

End of repeated group (numSv times)

# 3.15.10 UBX-NAV-PL (0x01 0x62)

#### 3.15.10.1 Protection level information

Message	UBX-NAV-PL										
	Protection level information										
Туре	Periodic	Periodic									
Comment	This message provides protection level (PL) values per protection level state (e.g. position ECEF X/Y/Z) and w.r.t. the given target misleading information risk (TMIR) per coordinate axis.										
	•	_		•	[%MI/epoch] (read: X% probabilit Protection Level value is smaller t	, ,					
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x01	0x62	52	see below	CK ACK B					

Payload description:



Byte offset	Туре	Name	Scale	Unit	Description
0	U1	msgVersion	-	-	Message version (0x01 for this version)
1	U1	tmirCoeff	-	-	Target misleading information risk (TMIR) [%MI/epoch], coefficient integer number of base 10 scientific notation (see e.g. plPos field)
2	I1	tmirExp	-	-	Target misleading information risk (TMIR) [%MI/epoch], exponent integer number of base 10 scientific notation (see e.g. plPos field)
3	U1	plPosValid	-	-	Position protection level validity  O: Invalid (Protection level should not be used)  1: Protection level is valid
4	U1	plPosFrame	<del>-</del>	-	Position protection level frame:  O: Invalid (not possible to calculate frame conversion)  1: North-East-Down  2: Longitudinal-Lateral-Vertical  3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical
5	U1	plVelValid	-	-	<ul> <li>Velocity protection level validity</li> <li>0: Invalid (Protection level should not be used)</li> <li>1: Protection level is valid</li> </ul>
6	U1	plVelFrame	-	-	Velocity protection level frame:  O: Invalid (not possible to calculate frame conversion)  1: North-East-Down  2: Longitudinal-Lateral-Vertical  3: HorizSemiMajorAxis-HorizSemiMinorAxis-Vertical
7	U1	plTimeValid	-	-	Time protection level validity  O: Invalid (Protection level should not be used)  1: Protection level is valid
8	U1	plPos Invalidity Reason	-	-	Position protection level invalidity reason  O: Not available  1-29: Solution not trustworthy  30-100: PL not verified for this receiver configuration
9	U1	plVel Invalidity Reason	-	-	<ul> <li>Velocity protection level invalidity reason</li> <li>0: Not available</li> <li>1-29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>
10	U1	plTime Invalidity Reason	-	-	<ul> <li>Time protection level invalidity reason</li> <li>0: Not available</li> <li>1-29: Solution not trustworthy</li> <li>30-100: PL not verified for this receiver configuration</li> </ul>
11	U1	reserved0	-	-	Reserved
12	U4	iTow	-	ms	GPS time of week
16	U4	plPos1	-	mm	First axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]



20	U4	plPos2	-	mm	Second axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
24	U4	plPos3	-	mm	Third axis of position protection level value, given in coordinate frame of plPosFrame (see plPosFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
28	U4	plVel1	-	mm/s	First axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
32	U4	plVel2	-	mm/s	Second axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
36	U4	plVel3	-	mm/s	Third axis of velocity protection level value, given in coordinate frame of plVelFrame (see plVelFrame field for value order), w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
40	U2	plPosHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plPosFrame) of horizontal ellipse position protection level (clockwise degrees from true North), if plPosFrame==3; zero otherwise.
42	U2	plVelHoriz Orient	1e-2	deg	Orientation of HorizSemiMajorAxis (see plVelFrame) of horizontal ellipse velocity protection level (clockwise degrees from true North), if plVelFrame==3; zero otherwise.
44	U4	plTime	-	ns	Time protection level value, w.r.t. the given target misleading information risk (TMIR) of [tmirCoeff * 10^(tmirExp)]
48	U1[4]	reserved1	-	-	Reserved

# 3.15.11 UBX-NAV-POSECEF (0x01 0x01)

#### 3.15.11.1 Position solution in ECEF

Message	UBX-NA	UBX-NAV-POSECEF										
	Position	solution	in ECEF									
Туре	Periodic/	polled										
Comment	•	See important comments concerning validity of position given in section Navigation output filters in the integration manual.										
Message	Header	Clas	s ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x6	62 0x0	1 0x01	20		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Type	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigat	ion epoch.					
						See section iTOW timestamp manual for details.	s in the integration					
4	14	ecefX		-	cm	ECEF X coordinate						
8	14	ecefY		-	cm	ECEF Y coordinate						
12	14	ecefZ		-	cm	ECEF Z coordinate						



16 U4 pAcc - cm Position Accuracy Estimate

### 3.15.12 UBX-NAV-POSLLH (0x01 0x02)

#### 3.15.12.1 Geodetic position solution

Message	UBX-NAV	-POSLLF	l											
	Geodetic	Geodetic position solution												
Туре	Periodic/p	olled												
Comment	See impoi			concerning \	alidity of <sub>l</sub>	position given in section Navigation	output filters in the							
		This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS84 Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDAT.												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x62	2 0x01	0x02	28		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Туре	Name		Scale	Unit	Description								
0	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.							
						See section iTOW timestamps manual for details.	s in the integration							
4	14	lon		1e-7	deg	Longitude								
8	14	lat		1e-7	deg	Latitude								
12	14	height		-	mm	Height above ellipsoid								
16	14	hMSL		-	mm	Height above mean sea level								
20	U4	hAcc		-	mm	Horizontal accuracy estimate								
24	U4	vAcc		-	mm	Vertical accuracy estimate								

# 3.15.13 UBX-NAV-PVAT (0x01 0x17)

#### 3.15.13.1 Navigation position velocity attitude time solution

Message	UBX-NAV	-PVAT					
	Navigatio	n positio	n veloci	ity attitude ti	me solutio	n	
Туре	Periodic/p	olled					
Comment	This mess	sage com	bines p	osition, veloci	ty, attitude	e and time solution, including accuracy	figures.
	Note that	during a	leap se	cond there ma	ay be more	or less than 60 seconds in a minute.	
	See descr	iption of	leap sed	conds in the in	ntegration i	manual for details.	
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x62	2 0x01	0x17	116		see below	CK_A CK_B
Payload desci	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the navigatio	n epoch.
						See section iTOW timestamps manual for details.	in the integration
4	U1	version	1	-	-	Message version (0x00 for this ve	rsion)
5	X1	valid		-	-	Validity flags	
bit 0	U:1 validDate			-	-	1 = valid UTC Date (see section integration manual for details)	Time validity in the



	bit 1	U. <sub>1</sub>	validTime	_	-	1 = valid UTC time of day (see section Time validity in
	5.0.					the integration manual for details)
	bit 2	U:1	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U:1	validMag	-	-	1 = valid magnetic declination
6		U2	year	-	у	Year (UTC)
8		U1	month	-	month	Month, range 112 (UTC)
9		U1	day	-	d	Day of month, range 131 (UTC)
10		U1	hour	-	h	Hour of day, range 023 (UTC)
11		U1	min	-	min	Minute of hour, range 059 (UTC)
12		U1	sec	-	S	Seconds of minute, range 060 (UTC)
13		U1	reserved0	-	-	Reserved
14		U1[2]	reserved1	-	-	Reserved
16		U4	tAcc	-	ns	Time accuracy estimate (UTC)
20		14	nano	-	ns	Fraction of second, range -1e9 1e9 (UTC)
24		U1	fixType	-	-	GNSSfix Type:
						• 0 = no fix
						<ul> <li>1 = dead reckoning only</li> </ul>
						• 2 = 2D-fix
						• 3 = 3D-fix
						4 = GNSS + dead reckoning combined
						• 5 = time only fix
25		X1	flags	-	-	Fix status flags
	bit 0	U:1	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U:1	diffSoln	-	-	1 = differential corrections were applied
	bit 3	U <sub>:1</sub>	vehRollValid	-	-	1 = roll of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 4	U <sub>:1</sub>	vehPitchValid	-	-	1 = pitch of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 5	U:1	vehHeading	-	-	1 = heading of vehicle is valid, only set if the receiver is
			Valid			in sensor fusion mode
	bits 76	U <sub>:2</sub>	carrSoln	-	-	Carrier range solution status:
						<ul> <li>0 = no carrier range solution</li> </ul>
						<ul> <li>1 = carrier range solution with float ambiguities</li> </ul>
						• 2 = carrier range solution with fixed ambiguities
26		X1	flags2	-	-	Additional flags
	bit 5	U <sub>:1</sub>	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)
	bit 6	U <sub>:1</sub>	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U <sub>:1</sub>	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
27		U1	numSV	-	-	Number of satellites used in Nav Solution
28		14	lon	1e-7	deg	Longitude



32	14	lat	1e-7	deg	Latitude
36	14	height	-	mm	Height above ellipsoid
40	14	hMSL	-	mm	Height above mean sea level
44	U4	hAcc	-	mm	Horizontal accuracy estimate
48	U4	vAcc	-	mm	Vertical accuracy estimate
52	14	velN	-	mm/s	NED north velocity
56	14	velE	-	mm/s	NED east velocity
60	14	velD	-	mm/s	NED down velocity
64	14	gSpeed	-	mm/s	Ground Speed (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	14	vehRoll	1e-5	deg	Vehicle roll.
76	14	vehPitch	1e-5	deg	Vehicle pitch.
80	14	vehHeading	1e-5	deg	Vehicle heading.
84	14	motHeading	1e-5	deg	Motion heading.
88	U2	accRoll	1e-2	deg	Vehicle roll accuracy (if null, roll angle is not available).
90	U2	accPitch	1e-2	deg	Vehicle pitch accuracy (if null, pitch angle is not available).
92	U2	accHeading	1e-2	deg	Vehicle heading accuracy (if null, heading angle is not available).
94	12	magDec	1e-2	deg	Magnetic declination.
96	U2	magAcc	1e-2	deg	Magnetic declination accuracy.
98	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
100	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse
104	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse
108	U1[4]	reserved2	-		Reserved
112	U1[4]	reserved3	-	-	Reserved

# 3.15.14 UBX-NAV-PVT (0x01 0x07)

# 3.15.14.1 Navigation position velocity time solution

Message	UBX-NAV-I	PVT										
	Navigation position velocity time solution											
Туре	Periodic/po	Periodic/polled										
Comment	This message combines position, velocity and time solution, including accuracy figures.  Note that during a leap second there may be more or less than 60 seconds in a minute.  See description of leap seconds in the integration manual for details.											
Message	Header	Class	ID	Length (Byte	es)		Payload	Checksum				
structure	0xb5 0x62	0x01	0x07	92			see below	CK_A CK_B				
Payload desc	cription:											
Byte offset	Type N	lame		Scale	Unit	Description						



0		U4	iTOW	-	ms	GPS time of week of the navigation epoch.
						See section iTOW timestamps in the integration manual for details.
4		U2	year	-	у	Year (UTC)
6		U1	month	-	month	Month, range 112 (UTC)
7		U1	day	-	d	Day of month, range 131 (UTC)
8		U1	hour	-	h	Hour of day, range 023 (UTC)
9		U1	min	-	min	Minute of hour, range 059 (UTC)
10		U1	sec	-	S	Seconds of minute, range 060 (UTC)
11		X1	valid	-	-	Validity flags
	bit 0	U <sub>:1</sub>	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U <sub>:1</sub>	validMag	-	-	1 = valid magnetic declination
12		U4	tAcc	-	ns	Time accuracy estimate (UTC)
16		14	nano	-	ns	Fraction of second, range -1e9 1e9 (UTC)
20		U1	fixType			<ul> <li>GNSSfix Type:</li> <li>0 = no fix</li> <li>1 = dead reckoning only</li> <li>2 = 2D-fix</li> <li>3 = 3D-fix</li> <li>4 = GNSS + dead reckoning combined</li> <li>5 = time only fix</li> </ul>
21		X1	flags	-	-	Fix status flags
	bit 0	U <sub>:1</sub>	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U <sub>:1</sub>	diffSoln	-	-	1 = differential corrections were applied
	bits 42	U:3	psmState	-	-	Power save mode state (see Power management section in the integration manual for details.
						0 = PSM is not active
						1 = Enabled (an intermediate state before
						Acquisition state
						• 2 = Acquisition
						• 3 = Tracking
						<ul> <li>4 = Power Optimized Tracking</li> </ul>
						• 5 = Inactive
	bit 5	U <sub>:1</sub>	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 76	U:2	carrSoln	-	-	Carrier phase range solution status:
						<ul> <li>0 = no carrier phase range solution</li> </ul>
						<ul> <li>1 = carrier phase range solution with floating ambiguities</li> </ul>



						2 = carrier phase range solution with fixed
						ambiguities
22		V1		_		(not supported for protocol versions less than 20.00)
22		X1	flags2	_	-	Additional flags
	bit 5	U <sub>:1</sub>	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)
						This flag is only supported in Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28.
	bit 6	U <sub>:1</sub>	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U <sub>:1</sub>	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23		U1	numSV	-	-	Number of satellites used in Nav Solution
24		14	lon	1e-7	deg	Longitude
28		14	lat	1e-7	deg	Latitude
32		14	height	-	mm	Height above ellipsoid
36		14	hMSL	-	mm	Height above mean sea level
40		U4	hAcc	-	mm	Horizontal accuracy estimate
44		U4	vAcc	-	mm	Vertical accuracy estimate
48		14	velN	-	mm/s	NED north velocity
52		14	velE	-	mm/s	NED east velocity
56		14	velD	-	mm/s	NED down velocity
60		14	gSpeed	-	mm/s	Ground Speed (2-D)
64		14	headMot	1e-5	deg	Heading of motion (2-D)
68		U4	sAcc	-	mm/s	Speed accuracy estimate
72		U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76		U2	pDOP	0.01	-	Position DOP
78		X2	flags3	-	-	Additional flags
	bit 0	U <sub>:1</sub>	invalidLlh	-	-	1 = Invalid lon, lat, height and hMSL (applicable to heading products only)
	bits 41	U:4	lastCorrection	-	-	Age of the most recently received differential
			Age			correction:  • 0 = Not available
						1 = Age between 0 and 1 second
						<ul> <li>2 = Age between 0 and 1 seconds</li> </ul>
						<ul> <li>3 = Age between 2 (inclusive) and 5 seconds</li> </ul>
						<ul> <li>4 = Age between 5 (inclusive) and 10 seconds</li> </ul>
						5 = Age between 10 (inclusive) and 15 seconds
						6 = Age between 15 (inclusive) and 20 seconds
						<ul> <li>7 = Age between 20 (inclusive) and 30 seconds</li> </ul>
						8 = Age between 30 (inclusive) and 45 seconds
						<ul> <li>9 = Age between 45 (inclusive) and 60 seconds</li> </ul>
						10 = Age between 60 (inclusive) and 90 seconds
						11 = Age between 90 (inclusive) and 120 seconds
						, ,



						• >=12 = Age greater or equal than 120 seconds
	bit 13	U <sub>:1</sub>	authTime	-	-	Flag that indicates if the output time has been validated against an external trusted time source
						• 0 = Time is not authenticated
						• 1 = Time is authenticated
	bit 14	U:1	nmaFixStatus	-	-	Flag assigned to a fix that has been computed mixing satellites with data authenticated through Navigation Message Authentication (NMA) methods and satellites using unauthenticated data. The fix is flagged as Verified when internal cross-checks validates the unauthenticated signals against the authenticated ones. Note that Not Verified status does not imply directly spoofing attacks, to identify spoofing alerts refer to UBX-SEC-SIG.
						• 0 = Not Verified: The mixed solution does not
						agree with the NMA authenticated data or the
						comparison could not be performed, e.g., not
						enough authenticated SVs to extrapolate the
						result or cryptographic data not decoded yet
						• 1 = Verified: The mixed solution agrees with the
						NMA authenticated data
						Currently, the only existing NMA method is Galileo Open Service Navigation Message Authentication (OSNMA) protocol.
80		U1[4]	reserved0	-	-	Reserved
84		14	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88		12	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90		U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

# 3.15.15 UBX-NAV-RELPOSNED (0x01 0x3c)

### 3.15.15.1 Relative positioning information in NED frame

Message	UBX-NA	4V-R	ELPOS	NED							
	Relative	e pos	itionin	g infori	mation in NEI	D frame					
Туре	Periodio	;/polled									
Comment	This message contains the relative position vector from the reference station to the rover, including accurating figures, in the local topological system defined at the reference station.  The NED frame is defined as the local topological system at the reference station. The relative positivector components in this message, along with their associated accuracies, are given in that local topological system.								The relative position		
	System		Class	ID	Length (Byt	(AC)	Pay	/load	Checksum		
Message structure	0xb5 0x		0x01	0x3c	64	<i>C3</i> /		e below	CK_A CK_B		
Payload desc	cription:										
Byte offset	Туре	N	ame		Scale	Unit	Description				
0	U1	Ve	ersion	1	-	-	Message version	(0x01 for this v	ersion)		
1	U1	re	eserve	ed0	-	-	Reserved				



2		U2	refStationId	-	-	Reference station ID. Must be in the range 04095.
4		U4	iTOW	-	ms	GPS time of week of the navigation epoch.  See section iTOW timestamps in the integration manual for details.
8		14	relPosN	-	cm	North component of relative position vector
12		14	relPosE	-	cm	East component of relative position vector
16		14	relPosD	-	cm	Down component of relative position vector
20		14	relPosLength	-	cm	Length of the relative position vector
24		14	relPosHeading	1e-5	deg	Heading of the relative position vector
28		U1[4]	reserved1	-	-	Reserved
32		I1	relPosHPN	0.1	mm	High-precision North component of relative position vector.
						Must be in the range -99 to +99.
						The full North component of the relative position vector, in units of cm, is given by
						relPosN + (relPosHPN * 1e-2)
33		11	relPosHPE	0.1	mm	High-precision East component of relative position vector.
						Must be in the range -99 to +99.
						The full East component of the relative position vector, in units of cm, is given by
						relPosE + (relPosHPE * 1e-2)
34		I1	relPosHPD	0.1	mm	High-precision Down component of relative position vector.
						Must be in the range -99 to +99.
						The full Down component of the relative position vector, in units of cm, is given by
						relPosD + (relPosHPD * 1e-2)
35		I1	relPosHP Length	0.1	mm	High-precision component of the length of the relative position vector.
						Must be in the range -99 to +99.
						The full length of the relative position vector, in units of cm, is given by
20		114		0.1		relPosLength + (relPosHPLength * 1e-2)
36		U4	accN	0.1	mm	Accuracy of relative position North component
40		U4	accE	0.1	mm	Accuracy of relative position East component
44		U4	accD	0.1	mm	Accuracy of relative position Down component
48		U4	accLength	0.1	mm	Accuracy of length of the relative position vector
52		U4	accHeading	1e-5	deg	Accuracy of heading of the relative position vector
56		U1[4]	reserved2	_	-	Reserved
60		X4	flags	-	-	Flags
	bit 0	U:1	gnssFixOK	-	-	A valid fix (i.e within DOP & accuracy masks)
	bit 1	U <sub>:1</sub>	diffSoln	-	-	1 if differential corrections were applied
	bit 2	U <sub>:1</sub>	relPosValid	-	-	1 if relative position components and accuracies are valid and, in moving base mode only, if baseline is valid
	bits 43	U <sub>:2</sub>	carrSoln	-	-	Carrier phase range solution status:
						• 0 = no carrier phase range solution



					<ul> <li>1 = carrier phase range solution with floating ambiguities</li> <li>2 = carrier phase range solution with fixed ambiguities</li> </ul>
bit 5	U <sub>:1</sub>	isMoving	-	-	1 if the receiver is operating in moving base mode
bit 6	U <sub>:1</sub>	refPosMiss	-	-	1 if extrapolated reference position was used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
bit 7	U <sub>:1</sub>	refObsMiss	-	-	1 if extrapolated reference observations were used to compute moving base solution this epoch. (Flag set for protocol versions 27.10, and 27.11, and 31.11)
bit 8	U <sub>:1</sub>	relPosHeading	-	-	1 if relPosHeading is valid
		Valid			
bit 9	U <sub>:1</sub>	relPos Normalized	-	-	1 if the components of the relative position vector (including the high-precision parts) are normalized
bit 9	U <sub>:1</sub>		-	-	

# 3.15.16 UBX-NAV-SAT (0x01 0x35)

#### 3.15.16.1 Satellite information

Message	UBX-NAV	-SAT					
	Satellite	informatio	on				
Туре	Periodic/p	oolled					
Comment			,			are either known to be visible or curren to the subset of signals specified in Sig	, ,
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x6	2 0x01	0x35	8 + numSvs·12		see below	CK_A CK_B
Payload descr	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the navigation e	poch.
						See section iTOW timestamps in manual for details.	the integration
4	U1	version		-	-	Message version (0x01 for this versi	on)
5	U1	numSvs		-	-	Number of satellites	
6	U1[2]	reserve	d0	-	-	Reserved	
Start of repea	ted group (	(numSvs <b>t</b>	imes)				
8 + n·12	U1	gnssId		-	-	GNSS identifier (see Satellite assignment	Numbering) for
9 + n·12	U1	svId		-	-	Satellite identifier (see Satellite assignment	Numbering) for
10 + n·12	U1	cno		-	dBHz	Carrier to noise ratio (signal strengtl	ר)
11 + n·12	I1	elev		-	deg	Elevation (range: +/-90), unknown if	out of range
12 + n·12	12	azim		-	deg	Azimuth (range 0-360), unknown if or	elevation is out of
14 + n·12	12	prRes		0.1	m	Pseudorange residual	
16 + n·12	X4	flags		-	-	Bitmask	
bits 20	U <sub>:3</sub>	quality	Ind	-	-	Signal quality indicator:	



bit 3 bits 54		svUsed health	-	-	<ul> <li>0 = no signal</li> <li>1 = searching signal</li> <li>2 = signal acquired</li> <li>3 = signal detected but unusable</li> <li>4 = code locked and time synchronized</li> <li>5, 6, 7 = code and carrier locked and time synchronized</li> <li>1 = Signal in the subset specified in Signal Identifiers is currently being used for navigation</li> <li>Signal health flag:</li> <li>0 = unknown</li> <li>1 = healthy</li> <li>2 = unhealthy</li> </ul>
bit 6	U <sub>:1</sub>	diffCorr	-	-	1 = differential correction data is available for this SV
bit 7	U:1	smoothed	-	-	1 = carrier smoothed pseudorange used
bits 108	U:3	orbitSource	-	-	Orbit source:  • 0 = no orbit information is available for this SV  • 1 = ephemeris is used  • 2 = almanac is used  • 3 = AssistNow Offline orbit is used  • 4 = AssistNow Autonomous orbit is used  • 5, 6, 7 = other orbit information is used
bit 11	U <sub>:1</sub>	ephAvail	-	-	1 = ephemeris is available for this SV
bit 12	U:1	almAvail	-	-	1 = almanac is available for this SV
bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV
bit 14	U <sub>:1</sub>	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV
bit 16	U <sub>:1</sub>	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in Signal Identifiers
bit 17	U <sub>:1</sub>	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in Signal Identifiers
bit 18	U <sub>:1</sub>	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in Signal Identifiers
bit 19	U <sub>:1</sub>	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in Signal Identifiers
bit 20	U <sub>:1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in Signal Identifiers
bit 21	U <sub>:1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in Signal Identifiers
bit 22	U <sub>:1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in Signal Identifiers
bit 23	U <sub>:1</sub>	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in Signal Identifiers



End of repeated group (numSvs times)

# 3.15.17 UBX-NAV-SBAS (0x01 0x32)

#### 3.15.17.1 SBAS status data

Message		UBX-NAV-SBAS SBAS status data							
Туре	Periodic/polled								
Comment	This mess	sage outpu	uts the	status of the	SBAS sub	system			
Massaga	Header	Class	ID	Length (Byte.	s)	Payload	Checksum		
Message structure	0xb5 0x62 0x01 0x32		0x32	12 + cnt·12		see below	CK_A CK_B		
Payload descr	ription:								
Byte offset		Name		Scale	Unit	Description			
0	U4	iTOW		-	ms	GPS time of week of the navigation of	epoch.		
						See the description of iTOW for deta	ails.		
4	U1	geo		-	-	PRN Number of the GEO where integrity data is used from	e correction an		
5	U1	mode		-	-	SBAS Mode			
						0 Disabled			
						<ul> <li>1 Enabled integrity</li> </ul>			
						3 Enabled test mode			
6	I1	sys		-	-	SBAS System (WAAS/EGNOS/)			
						• -1 Unknown			
						• 0 WAAS			
						<ul><li>1 EGNOS</li><li>2 MSAS</li></ul>			
						• 3 GAGAN			
						• 16 GPS			
7	X1	service		-	-	SBAS Services available			
bit 0	U <sub>:1</sub>	Ranging		-	-	GEO may be used as ranging source			
bit 1	U <sub>:1</sub>	Correct	ions	-	-	GEO is providing correction data			
bit 2	U <sub>:1</sub>	Integri	tу	-	-	GEO is providing integrity			
bit 3	U <sub>:1</sub>	Testmode	9	-	-	GEO is in test mode			
bit 4	U <sub>:1</sub>	Bad		-	-	Problem with signal or broadcast da	ta indicated		
8	U1	cnt		-	-	Number of SV data following			
9	X1	statusF	lags	-	-	SBAS status flags			
bits 10	U <sub>:2</sub>	integri	tvUsed	d -	-	SBAS integrity used			
		,	1			• 0 = Unknown			
						<ul> <li>1 = Integrity information is not a</li> </ul>	vailable or SBAS		
						integrity is not enabled			
						<ul> <li>2 = Receiver uses only GPS satel</li> </ul>	lites for which		
						integrity information is available			
10	U1[2]	reserve	d0	-	-	Reserved			
Start of repea	ted aroun (	cnt times	.)						
12 + n·12	U1	svid	,	_	-	SV ID			



13 + n·12	U1	reserved1	-	-	Reserved				
14 + n·12	U1	udre	-	-	Monitoring status				
15 + n·12	U1	svSys	-	-	System (WAAS/EGNOS/) same as SYS				
16 + n·12	U1	svService	-	-	Services available same as SERVICE				
17 + n·12	U1	reserved2	-	-	Reserved				
18 + n·12	12	prc	-	cm	Pseudo Range correction in [cm]				
20 + n·12	U1[2]	reserved3	-	-	Reserved				
22 + n·12	12	ic	-	cm	lonosphere correction in [cm]				
End of repea	End of repeated group (cnt times)								

# 3.15.18 UBX-NAV-SIG (0x01 0x43)

### 3.15.18.1 Signal information

Message	UBX-NAV	/-SIG					
	Signal inf	formation					
Туре	Periodic/p	oolled					
Comment	This mes	sage displays inf	ormation about signals currently tracked or searched by the receiver.				
Message	Header	Class ID	Length (Byte	es)	Payload Checksum		
structure	0xb5 0x6	2 0x01 0x43	8 + numSigs·16		see below CK_A CK_B		
Payload desc	cription:						
Byte offset	Туре	Name	Scale	Unit	Description		
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.		
					See section iTOW timestamps in the integration manual for details.		
4	U1	version	-	-	Message version (0x00 for this version)		
5	U1	numSigs	-	-	Number of signals		
6	U1[2]	reserved0	-	-	Reserved		
Start of repe	ated group	(numSigs <b>times</b> )					
8 + n·16	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering) for assignment		
9 + n·16	U1	svId	-	-	Satellite identifier (see Satellite Numbering) for assignment		
10 + n·16	U1	sigId	-	-	New style signal identifier (see Signal Identifiers)		
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)		
12 + n·16	12	prRes	0.1	m	Pseudorange residual		
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)		



15 + n·16	U1	qualityInd	-	-	<ul> <li>Signal quality indicator:</li> <li>0 = no signal</li> <li>1 = searching signal</li> <li>2 = signal acquired</li> <li>3 = signal detected but unusable</li> <li>4 = code locked and time synchronized</li> <li>5, 6, 7 = code and carrier locked and time synchronized</li> </ul>
16 + n·16	U1	corrSource	-	-	Correction source:  • 0 = no corrections  • 1 = SBAS corrections  • 2 = BeiDou corrections  • 3 = RTCM2 corrections  • 4 = RTCM3 OSR corrections  • 5 = RTCM3 SSR corrections  • 6 = QZSS SLAS corrections  • 7 = SPARTN corrections  • 8 = CLAS corrections
17 + n·16	U1	ionoModel	-	-	lonospheric model used:  • 0 = no model  • 1 = Klobuchar model transmitted by GPS  • 2 = SBAS model  • 3 = Klobuchar model transmitted by BeiDou  • 8 = lono delay derived from dual frequency observations
18 + n·16	X2	sigFlags	-	-	Signal related flags
bits 10	U:2	health	-	-	Signal health flag:  o = unknown  1 = healthy  2 = unhealthy
bit 2	U <sub>:1</sub>	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U <sub>:1</sub>	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U <sub>:1</sub>	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U <sub>:1</sub>	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal
bit 6	U <sub>:1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal
bit 7	U <sub>:1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit 8	U <sub>:1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal
bit 9	U:1	authStatus	-	-	Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data is not used so the authentication status in this message can take only two values:
					• 0 = Unknown
					• 1 = Authenticated
					Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.



20 + n·16 U1[4] reserved1 - - Reserved

End of repeated group (numSigs times)

# 3.15.19 UBX-NAV-STATUS (0x01 0x03)

#### 3.15.19.1 Receiver navigation status

Message	UBX-NAV-STATUS											
		eiver navigation status										
Туре	Periodic/p	olled										
Comment		rtant comme ation manua		cerning th	ne validity o	f the position given in section Navigat	ion output filters in					
Message	Header	Class ID		Length (Bytes)		Payload	Checksum					
structure	0xb5 0x62	2 0x01 0	x03 16	i		see below	CK_A CK_B					
Payload descr	ription:											
Byte offset	Type	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.					
						For details, see section iTOW t integration manual.	imestamps in the					
4	U1	gpsFix		-	-	GPSfix Type, this value does <b>not</b> of and within the limits. See note on fix  • 0x00 = no fix  • 0x01 = dead reckoning only  • 0x02 = 2D-fix  • 0x03 = 3D-fix  • 0x04 = GPS + dead reckoning only  • 0x05 = Time only fix  • 0x060xff = reserved	ag gpsFixOk below.					
5	X1	flags		-	-	Navigation Status Flags						
bit 0	U <sub>:1</sub>	gpsFixOk		-	-	1 = position and velocity valid and v Masks.	vithin DOP and ACC					
bit 1	U <sub>:1</sub>	diffSoln		-	-	1 = differential corrections were ap	plied					
bit 2	U <sub>:1</sub>	wknSet		-	-	1 = Week Number valid (for details validity in the Integration manual)	s, see section Time					
bit 3	U <sub>:1</sub>	towSet		-	-	1 = Time of Week valid (for details validity in the integration manual)	s, see section Time					
6	X1	fixStat		-	-	Fix Status Information						
bit 0	U <sub>:1</sub>	diffCorr		-	-	1 = differential corrections availabl	е					
bit 1	U <sub>:1</sub>	carrSolnV	alid	-	-	1 = valid carrSoln						
bits 76	U:2	mapMatchi	ng	-	-	<ul> <li>map matching status:</li> <li>00: none</li> <li>01: valid but not used, i.e. map received, but was too old</li> <li>10: valid and used, map matchiapplied</li> <li>11: valid and used, map matchiapplied. In case of sensor unavanatching data enables dead re</li> </ul>	ing data was ing data was ailability map					



						requires map matched latitude/longitude or heading data.
7		X1	flags2	-	-	further information about navigation output
	bits 10	U <sub>:2</sub>	psmState	-	-	power save mode state (not supported for protocol versions less than 13.01)
						• 0 = ACQUISITION [or when psm disabled]
						• 1 = TRACKING
						• 2 = POWER OPTIMIZED TRACKING
						• 3 = INACTIVE
	bits 43	U <sub>:2</sub>	spoofDetState	-	-	Spoofing detection state (not supported for protocol versions less than 18.00)
						0: Unknown or deactivated
						1: No spoofing indicated
						• 2: Spoofing indicated
						3: Multiple spoofing indications
						Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. I.e. a value of $1$ - $No$ spoofing indicated does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
	bits 76	U. <sub>2</sub>	carrSoln	-	-	Carrier phase range solution status:
		-				• 0 = no carrier phase range solution
						<ul> <li>1 = carrier phase range solution with floating ambiguities</li> </ul>
						<ul> <li>2 = carrier phase range solution with fixed ambiguities</li> </ul>
8		U4	ttff	-	ms	Time to first fix (millisecond time tag)
12		U4	msss	-	ms	Milliseconds since startup / reset

# 3.15.20 UBX-NAV-TIMEBDS (0x01 0x24)

#### 3.15.20.1 BeiDou time solution

Message	UBX-NAV	UBX-NAV-TIMEBDS												
	BeiDou ti	me soluti	on											
Туре	Periodic/p	oolled												
Comment		This message reports the precise BDS time of the most recent navigation solution including validity flags and an accuracy estimate.												
Message	Header	Class	ID	Length (Bytes) Payload 20 see below		Checksum								
structure	0xb5 0x6	2 0x01	0x24			see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Type	Name		Scale	Unit	Description								
0	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.							
						See section iTOW timestamps manual for details.	in the integration							
4	U4	SOW		-	s	BDS time of week (rounded to see	conds)							



16		U4	tAcc	-	ns	Time Accuracy Estimate
	bit 2	U:1	leapSValid	-	-	1 = Valid leap second
	bit 1	U <sub>:1</sub>	weekValid	-	-	1 = Valid week (see section Time validity in the integration manual for details)
	bit 0	U <sub>:1</sub>	sowValid	-	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
15		X1	valid	-	-	Validity Flags
14		l1	leapS	-	S	BDS leap seconds (BDS-UTC)
12		12	week	-	-	BDS week number of the navigation epoch
						SOW + fSOW * 1e-9
						The precise BDS time of week in seconds is:
8		14	fSOW	-	ns	Fractional part of SOW (range: +/-500000000).

# 3.15.21 UBX-NAV-TIMEGAL (0x01 0x25)

#### 3.15.21.1 Galileo time solution

Message	UBX-NAV	UBX-NAV-TIMEGAL											
	Galileo tir	ne solutio	n										
Туре	Periodic/p	olled											
Comment	This message reports the precise Galileo time of the most recent navigation solution including validity flags and an accuracy estimate.												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	2 0x01	0x25	20		see below	CK_A CK_B						
Payload desci	ription:												
Byte offset	Type	Name		Scale	Unit	Description							
0	U4 iTOW			-	ms	GPS time of week of the navigation	epoch.						
						See section iTOW timestamps in the integration manual for details.							
4	U4	galTow		-	S	Galileo time of week (rounded to seconds)							
8	14	fGalTow		- ns		Fractional part of the Galileo tim +/-500000000).	ne of week (range:						
						The precise Galileo time of week in	seconds is:						
						galTow + fGalTow * 1e-9							
12	12	galWno		-	-	Galileo week number							
14	I1	leapS		-	S	Galileo leap seconds (Galileo-UTC)							
15	X1	valid		-	-	Validity Flags							
bit 0	U <sub>:1</sub>	galTowV	alid	-	-	1 = Valid galTow and fGalTow (see so in the integration manual for detail	-						
bit 1	U <sub>:1</sub>	galWnoValid		-	-	1 = Valid galWno (see section Ti integration manual for details)	ime validity in the						
bit 2	U:1	leapSValid		-	-	1 = Valid leapS							
16	U4	tAcc		-	ns	Time Accuracy Estimate							

# 3.15.22 UBX-NAV-TIMEGLO (0x01 0x23)



#### 3.15.22.1 GLONASS time solution

Message	UBX-NAV	/-TIMEGL	0				
	GLONAS	S time sol	ution				
Туре	Periodic/	polled					
Comment		sage repo acy estima		orecise GLO ti	me of the r	nost recent navigation solution includi	ng validity flags and
Message	Header	Class	ID	Length (Bytes)		Payload	Checksum
structure	0xb5 0x6	2 0x01	0x23	20		see below	CK_A CK_B
Payload descr	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.
						See section iTOW timestamps manual for details.	in the integration
4	U4	TOD		-	S	GLONASS time of day (rounded to	integer seconds)
8	14	fTOD		-	ns	Fractional part of TOD (range: +/-5	00000000).
						The precise GLONASS time of day	in seconds is:
						TOD + fTOD * 1e-9	
12	U2	Nt		-	days	Current date (range: 1-1461), sta 1st Jan of the year indicated by N4 at the 31st Dec of the third year a by N4	and ending at 1461
14	U1	N4		-	-	Four-year interval number sta (1=1996, 2=2000, 3=2004)	rting from 1996
15	X1	valid		-	-	Validity flags	
bit 0	U:1	todVali	.d	-	-	1 = Valid TOD and fTOD (see sect the integration manual for details)	ion Time validity in
bit 1	U <sub>:1</sub>	dateVal	id	-	-	1 = Valid N4 and Nt (see section integration manual for details)	Time validity in the
16	U4	tAcc		-	ns	Time Accuracy Estimate	

# 3.15.23 UBX-NAV-TIMEGPS (0x01 0x20)

### 3.15.23.1 GPS time solution

Message	UBX-NA\	UBX-NAV-TIMEGPS GPS time solution											
	GPS time												
Туре	Periodic/p	oolled											
Comment		This message reports the precise GPS time of the most recent navigation solution including validity flags and an accuracy estimate.											
Message	Header	Class		ID	Length (Bytes)		Payload	Checksum					
structure	0xb5 0x6	2 0x	01	0x20	16		see below	CK_A CK_B					
Payload des	cription:												
Byte offset	Type	Nam	9		Scale	Unit	Description						
0	U4	iTOW	1		-	ms	GPS time of week of the navigat	ion epoch.					
							See section iTOW timestamp manual for details.	s in the integration					
4	14	fTOW			-	ns	Fractional part of iTOW (range: -	+/-500000).					
							The precise GPS time of week in	seconds is:					
							(iTOW * 1e-3) + (fTOW * 1	.e-9)					



8		12	week	-	-	GPS week number of the navigation epoch
10		I1	leapS	-	s	GPS leap seconds (GPS-UTC)
11		X1	valid	-	-	Validity Flags
	bit 0	U <sub>:1</sub>	towValid	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	weekValid	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	leapSValid	-	-	1 = Valid GPS leap seconds
12		U4	tAcc	-	ns	Time Accuracy Estimate

# 3.15.24 UBX-NAV-TIMELS (0x01 0x26)

#### 3.15.24.1 Leap second event information

Message	UBX-NAV-TIMELS											
	Leap seco	nd event	inform	ation								
Туре	Periodic/p	olled										
Comment	Information	Information about the upcoming leap second event if one is scheduled.										
	Note: Many sources of leap second information provide the week number of a leap second event as an 8-bi unsigned number. For the upcoming leap second events, this can be resolved and displayed in this message However, for the previous leap second events decoded from these sources, there is an inherent ambiguity of 256 weeks. Therefore, when the time since the previous event is more than 256 weeks, the dateOfLsGpsW and timeToLsEvent parameters may provide incorrect information.											
Message	Header	Header Class ID			es)	Payload	Checksum					
structure	0xb5 0x62	2 0x01	0x26	24		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.					
						See section iTOW timestamps manual for details.	in the integration					
4	U1	version	ı	-	-	Message version (0x00 for this ve	rsion)					
5	U1[3]	reserve	:d0	-	-	Reserved						
8	U1	srcOfCu	rrLs	-	-	Information source for the curre seconds.  • 0 = Default (hardcoded in the foutdated)  • 1 = Derived from time different and GLONASS time  • 2 = GPS  • 3 = SBAS  • 4 = BeiDou  • 5 = Galileo  • 6 = Aided data  • 7 = Configured  • 8 = NavlC  • 255 = Unknown	irmware, can be					
9	l1	currLs		-	S	Current number of leap seconds time (Jan 6, 1980). It reflects how ahead of UTC time. Galileo number the same as GPS. BeiDou number of less than GPS. GLONASS follows Useconds.	v much GPS time is or of leap seconds is of leap seconds is 14					



10	U1	srcOfLsChang	ge -	-	Information source for the future leap second event.  • 0 = No source  • 2 = GPS  • 3 = SBAS  • 4 = BeiDou  • 5 = Galileo  • 6 = GLONASS  • 7 = NavIC
11	I1	lsChange	-	S	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.
12	14	timeToLsEver	nt -	S	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16	U2	dateOfLsGps Wn	-	-	GPS week number (WN) of the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18	U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20	U1[	3] reserved1	-	-	Reserved
23	X1	valid	-	-	Validity flags
	bit 0 U:1	validCurrLs	-	-	1 = Valid current number of leap seconds value.
	bit 1 U:1	validTimeToI Event	is -	-	1 = Valid time to next leap second event or from the last leap second event if no future event scheduled.

# 3.15.25 UBX-NAV-TIMENAVIC (0x01 0x63)

#### 3.15.25.1 NavIC time solution

Message	UBX-NA\	/-TIMENA	VIC					
	NavIC tir	ne solutio	n					
Туре	Periodic/	polled						
Comment	This message reports the precise NavIC time of the most recent navigation solution including validity flag and an accuracy estimate.							
Message structure	Header	Class	ID	Length (Byt	es)	Payload	Checksum	
	0xb5 0x6	2 0x01	0x63	20		see below	CK_A CK_B	
Payload desc	ription:							
Byte offset	Туре	Name		Scale	Unit	Description		
0	U4	iTOW		-	ms	GPS time of week of the navigat	tion epoch.	
						See section iTOW timestamp manual for details.	os in the integration	
4	U4	NavICTo	W	-	S	NavIC time of week (rounded to	seconds)	



8	14	fNavICTow	-	ns	Fractional part of the NavIC time of week (range: +/-500000000).	
					The precise NavIC time of week in seconds is:	
					NavICTow + fNavICTow * 1e-9	
12	12	NavICWno	-	-	NavIC week number	
14	I1	leapS	-	S	NavIC leap seconds (NavIC-UTC)	
15	X1	valid	-	-	Validity Flags	
bit 0	U <sub>:1</sub>	NavICTow	-	-	1 = Valid NavICTow and fNavICTow (see section Time	
		Valid			validity in the integration manual for details)	
bit 1	U <sub>:1</sub>	NavICWno	-	-	1 = Valid NavlCWno (see section Time validity in the	
		Valid			integration manual for details)	
bit 2	U <sub>:1</sub>	leapSValid	-	-	1 = Valid leapS	
16	U4	tAcc	-	ns	Time Accuracy Estimate	

# 3.15.26 UBX-NAV-TIMEQZSS (0x01 0x27)

#### 3.15.26.1 QZSS time solution

Message	UBX-N	AV-TIMEQZS	S					
	QZSS t	ime solution						
Туре	Periodi	c/polled						
Comment	This message reports the precise QZSS time of the most recent navigation solution including validit and an accuracy estimate.  See the Clocks and time section in the integration manual for details.							
Message	Header	- Class	Class ID		es)	Payload	Checksum	
structure	0xb5 0	x62 0x01	0x27	20		see below	CK_A CK_B	
Payload des	cription:							
Byte offset	Туре	Name		Scale	Unit	Description		
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.	
4	U4	qzssTow	qzssTow		S	QZSS time of week (rounded to seconds)		
8	14	fQzssTow		-	ns	Fractional part of QZSS time +/-500000000).	of week (range:	
						The precise QZSS time of week in s	seconds is:	
						qzssTow + (fQzssTow * 1e-9)		
12	12	qzssWno		-	-	QZSS week number of the navigati	on epoch	
14	I1	leapS		-	S	QZSS leap seconds (QZSS-UTC)		
15	X1	valid		-	-	Validity Flags		
bit	0 U:1	qzssTowV	alid	-	-	1 = Valid QZSS time of week (qzss)	ow and fQzssTow)	
bit	1 U:1	qzssWnoV	alid	-	-	1 = Valid QZSS week number		
bit	2 U <sub>:1</sub>	leapSVal	id	-	-	1 = Valid QZSS leap seconds		
16	U4	tAcc		-	ns	Time Accuracy Estimate		

# 3.15.27 UBX-NAV-TIMEUTC (0x01 0x21)



#### 3.15.27.1 UTC time solution

Message		V-TIMEUTC e solution						
Туре	Periodic/	polled						
Comment		• .		•	r less than 60 seconds in a minute. on manual for details.			
Message	Header	Class ID	Length (Byte	es)	Payload	Checksum		
structure	0xb5 0x62 0x01 0x21 20		see below	CK_A CK_B				
Payload desci	ription:							
Byte offset	Туре	Name	Scale	Unit	Description			
0	U4	iTOW	-	ms	GPS time of week of the navigation e See section iTOW timestamps in manual for details.	•		
4	U4	tAcc	-	ns	Time accuracy estimate (UTC)			
8	14	nano	-	ns	Fraction of second, range -1e9 1e9	(UTC)		
12	U2	year	-	у	Year, range 19992099 (UTC)			
14	U1	month	-	month	Month, range 112 (UTC)			
15	U1	day	-	d	Day of month, range 131 (UTC)			
16	U1	hour	-	h	Hour of day, range 023 (UTC)			
17	U1	min	-	min	Minute of hour, range 059 (UTC)			
18	U1	sec	-	s	Seconds of minute, range 060 (UTC	<b>(</b> )		
19	X1	valid	-	-	Validity Flags			
bit 0	U <sub>:1</sub>	validTOW	-	-	1 = Valid Time of Week (see section T integration manual for details)	ime validity in the		
bit 1	U:1	validWKN	-	-	1 = Valid Week Number (see section T integration manual for details)	ime validity in the		
bit 2	U <sub>:1</sub>	validUTC	-	-	1 = Valid UTC Time			
bit 3	U <sub>:1</sub>	authStatus	-	-	Indicates if the parameters used to co into UTC time have been authenticat			
					• 0 = Unknown			
					• 1 = Authenticated			
					Note that currently the only data function is provided by Galileo Navigation Message Authentica protocol for E1 I/NAV message. Sys EU UTC can be authenticated indirect above information.	Open Service ation (OSNMA) stems other than		
bits 74	U <sub>:4</sub>	utcStandard	-	-	UTC standard identifier. (Not suppo versions less than 15.00)	orted for protoco		
					• 0 = Information not available			
					• 1 = Communications Research La	abratory (CRL),		
					Tokyo, Japan			
					<ul> <li>2 = National Institute of Standard Technology (NIST)</li> </ul>	ds and		
					• 3 = U.S. Naval Observatory (USN	O)		
					<ul> <li>4 = International Bureau of Weigl Measures (BIPM)</li> </ul>	hts and		



- 5 = European laboratories
- 6 = Former Soviet Union (SU)
- 7 = National Time Service Center (NTSC), China
- 8 = National Physics Laboratory India (NPLI)
- 15 = Unknown

### 3.15.28 UBX-NAV-VELECEF (0x01 0x11)

### 3.15.28.1 Velocity solution in ECEF

Message	UBX-NAV	-VELECE	F						
	Velocity s	olution in	n ECEF						
Туре	Periodic/p	olled							
Comment	See important comments concerning validity of position given in section Navigation output filters in tintegration manual.								
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum		
structure	0xb5 0x62	2 0x01	0x11	20		see below	CK_A CK_B		
Payload desc	cription:								
Byte offset	Туре	Name		Scale	Unit	Description			
0	U4	iTOW		-	ms	GPS time of week of the navigati	on epoch.		
						See section iTOW timestamps manual for details.	s in the integration		
4	14	ecefVX		-	cm/s	ECEF X velocity			
8	14	ecefVY		-	cm/s	ECEF Y velocity			
12	14	ecefVZ		-	cm/s	ECEF Z velocity			
16	U4	sAcc		-	cm/s	Speed accuracy estimate			

# 3.15.29 UBX-NAV-VELNED (0x01 0x12)

#### 3.15.29.1 Velocity solution in NED frame

Message	UBX-NAV	-VELNED	)								
	Velocity solution in NED frame										
Туре	Periodic/p	olled									
Comment	See important comments concerning validity of position given in section Navigation output filters in th integration manual.										
Message	Header Class		ID Length (Byt		s)	Payload	Checksum				
structure	0xb5 0x6	2 0x01	0x12	36		see below	CK_A CK_B				
Payload desc	cription:										
Byte offset	Type	Name		Scale	Unit	Description					
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.				
						See section iTOW timestamps manual for details.	in the integration				
4	14	velN		-	cm/s	North velocity component					
8	14	velE		-	cm/s	East velocity component					
12	14	velD		-	cm/s	Down velocity component					
16	U4	speed		-	cm/s	Speed (3-D)					
20	U4	gSpeed		-	cm/s	Ground speed (2-D)					



24	14	heading	1e-5	deg	Heading of motion 2-D
28	U4	sAcc	-	cm/s	Speed accuracy Estimate
32	U4	cAcc	1e-5	deg	Course / Heading accuracy estimate

# 3.16 UBX-NAV2 (0x29)

The messages in the UBX-NAV2 class are used to output navigation results and data, such as position, altitude and velocity in a number of formats, and status flags and accuracy estimate figures, or satellite and signal information. The messages are generated with the configured navigation rate.

# 3.16.1 UBX-NAV2-CLOCK (0x29 0x22)

#### 3.16.1.1 Clock solution

Message	UBX-NAV	2-CLOCK					
	Clock solu	ıtion					
Туре	Periodic/p	olled					
Comment							
Message	Header Class		ID	Length (Byte	s)	Payload	Checksum
structure	0xb5 0x62	0x29	0x22	20		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the nate section Navigation epochs in the for details.	•
						See section iTOW timestamps manual for details.	s in the integration
4	14	clkB		-	ns	Clock bias	
8	14	clkD		-	ns/s	Clock drift	
12	U4	tAcc		-	ns	Time accuracy estimate	
16	U4	fAcc		-	ps/s	Frequency accuracy estimate	

#### 3.16.2 UBX-NAV2-COV (0x29 0x36)

#### 3.16.2.1 Covariance matrices

Message	UBX-NAV	2-COV						
	Covariand	e matric	es					
Туре	Periodic/p	olled						
Comment	This message outputs the covariance matrices for the position and velocity solutions in the coordinate system defined as the local-level North (N), East (E), Down (D) frame. As the covarian are symmetric, only the upper triangular part is output.							
Message	Header Class ID			Length (Byte	es)	Payload	Checksum	
structure	0xb5 0x6	2 0x29	0x36	64		see below	CK_A CK_B	
Payload des	cription:							
Byte offset	Туре	Name		Scale	Unit	Description		
0	U4	iTOW		-	ms	GPS time of week of the navigat	ion epoch.	
						See section iTOW timestamp manual for details.	s in the integration	



4	U1	version	-	-	Message version (0x00 for this version)
5	U1	posCovValid	-	-	Position covariance matrix validity flag
6	U1	velCovValid	-	-	Velocity covariance matrix validity flag
7	U1[9]	reserved0	-	-	Reserved
16	R4	posCovNN	-	m^2	Position covariance matrix value p_NN
20	R4	posCovNE	-	m^2	Position covariance matrix value p_NE
24	R4	posCovND	-	m^2	Position covariance matrix value p_ND
28	R4	posCovEE	-	m^2	Position covariance matrix value p_EE
32	R4	posCovED	-	m^2	Position covariance matrix value p_ED
36	R4	posCovDD	-	m^2	Position covariance matrix value p_DD
40	R4	velCovNN	-	m^2/s^2	Velocity covariance matrix value v_NN
44	R4	velCovNE	-	m^2/s^2	Velocity covariance matrix value v_NE
48	R4	velCovND	-	m^2/s^2	Velocity covariance matrix value v_ND
52	R4	velCovEE	-	m^2/s^2	Velocity covariance matrix value v_EE
56	R4	velCovED	-	m^2/s^2	Velocity covariance matrix value v_ED
60	R4	velCovDD	-	m^2/s^2	Velocity covariance matrix value v_DD

# 3.16.3 UBX-NAV2-DOP (0x29 0x04)

#### 3.16.3.1 Dilution of precision

UBX-NAV2-DOP											
Dilution of precision											
Periodic/polled											
<ul> <li>DOP values are dimensionless.</li> <li>All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, the DOP value 1.56.</li> </ul>											
Header	Class	ID	Length (Bytes	;)	Payload	Checksum					
0xb5 0x62	2 0x29	0x04	18		see below	CK_A CK_B					
ription:											
Туре	Name		Scale	Unit	Description						
U4 iTOW			-	ms	GPS time of week of the navigation	on epoch.					
					See section iTOW timestamps manual for details.	s in the integration					
U2	gDOP		0.01	-	Geometric DOP						
U2	pDOP		0.01	-	Position DOP						
U2	tDOP		0.01	-	Time DOP						
U2	vDOP		0.01	-	Vertical DOP						
U2	hDOP		0.01	-	Horizontal DOP						
U2	nDOP		0.01	-	Northing DOP						
U2	eDOP		0.01	-	Easting DOP						
	Dilution of Periodic/p  Periodic/p  All DC 1.56.  Header 0xb5 0x62  ription: Type U4  U2  U2  U2  U2  U2  U2  U2  U2  U2	Periodic/polled  Periodic/polled  DOP values are All DOP values at 1.56.  Header Class Oxb5 0x62 0x29  ription: Type Name  U4 iTOW  U2 gDOP  U2 pDOP  U2 tDOP  U2 vDOP  U2 nDOP	Dilution of precision  Periodic/polled  DOP values are dimensed in 1.56.  Header Class ID  Oxb5 0x62 0x29 0x04  ription:  Type Name  U4 iTOW  U2 gDOP  U2 pDOP  U2 tDOP  U2 vDOP  U2 nDOP	Dilution of precision           Periodic/polled           • DOP values are dimensionless.           • All DOP values are scaled by a factor of 1.56.           Header         Class ID Length (Bytest of Decoration)           0xb5 0x62         0x29         0x04         18           ription:           Type         Name         Scale           U4         iTOW         -           U2         gDOP         0.01           U2         pDOP         0.01           U2         tDOP         0.01	Dilution of precision           Periodic/polled           • DOP values are dimensionless.           • All DOP values are scaled by a factor of 100. If to 1.56.           Header Class ID Length (Bytes)           0xb5 0x62 0x29 0x04 18           ription:           Type Name         Scale Unit           U4 iTOW         -         ms           U2 gDOP         0.01         -           U2 pDOP         0.01         -           U2 tDOP         0.01         -           U2 tDOP         0.01         -           U2 nDOP         0.01         -           U2 nDOP         0.01         -	Periodic/polled  DOP values are dimensionless. All DOP values are scaled by a factor of 100. If the unit transmits a value of e.g. 156, 1.56.  Header Class ID Length (Bytes) Payload  Oxb5 0x62 0x29 0x04 18 see below  ription:  Type Name Scale Unit Description  U4 iTOW - ms GPS time of week of the navigation See section iTOW timestamps manual for details.  U2 gDOP 0.01 - Geometric DOP  U2 pDOP 0.01 - Position DOP  U2 tDOP 0.01 - Time DOP  U2 vDOP 0.01 - Wertical DOP  U2 hDOP 0.01 - Horizontal DOP  U2 hDOP 0.01 - Horizontal DOP					

# 3.16.4 UBX-NAV2-EELL (0x29 0x3d)



#### 3.16.4.1 Position error ellipse parameters

Message	UBX-NAV2-EELL Position error ellipse parameters										
Туре	Periodic/po	olled									
Comment	This message outputs the error ellipse parameters for the position solutions.										
Message	Header Class ID			Length (Byte	es)	Payload	Checksum				
structure	0xb5 0x62	0x29	0x3d	16		see below	CK_A CK_B				
Payload desc	ription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U4 iTOW			- ms		GPS time of week of the navigatio	n epoch.				
						See section iTOW timestamps manual for details.	in the integration				
4	U1	version	1	-	-	Message version (0x00 for this ve	rsion)				
5	U1	reserve	ed0	-	-	Reserved					
6		errElli Orient	pse	1e-2	deg	Orientation of semi-major axis of e from true north)	rror ellipse (degrees				
8	U4 errEllipse Major			-	mm	Semi-major axis of error ellipse					
12		errElli Minor	pse	-	mm	Semi-minor axis of error ellipse					

# 3.16.5 UBX-NAV2-EOE (0x29 0x61)

#### 3.16.5.1 End of epoch

Message	UBX-NAV2-EOE											
	End of ep	och										
Туре	Periodic											
Comment	This message is intended to be used as a marker to collect all navigation messages of an epoch. It is outpur after all enabled NAV class messages and after all enabled NMEA messages.											
Message	Header	Class	ID	Length (Byt	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x29	0x61	4		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U4	iTOW	-	-	ms	GPS time of week of the navigat	ion epoch.					
						See section iTOW timestamps in the integration manual for details.						

# 3.16.6 UBX-NAV2-POSECEF (0x29 0x01)

#### 3.16.6.1 Position solution in ECEF

Message	UBX-NAV2-POSECEF										
	Position solution in ECEF										
Туре	Periodic/polled  See important comments concerning validity of position given in section Navigation output filters in the integration manual.										
Comment											
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x29	0x01	20	see below	CK_A CK_B					



Payload desc	cription:				
Byte offset	Type	Name	Scale	Unit	Description
0	U4	iTOW	-	ms	GPS time of week of the navigation epoch.
					See section iTOW timestamps in the integration manual for details.
4	14	ecefX	-	cm	ECEF X coordinate
8	14	ecefY	-	cm	ECEF Y coordinate
12	14	ecefZ	-	cm	ECEF Z coordinate
16	U4	pAcc	-	cm	Position Accuracy Estimate

# 3.16.7 UBX-NAV2-POSLLH (0x29 0x02)

#### 3.16.7.1 Geodetic position solution

Message	UBX-NAV	/2-POSLL	.H								
	Geodetic position solution										
Туре	Periodic/p	oolled									
Comment	See important comments concerning validity of position given in section Navigation output filters in th integration manual.										
	This message outputs the Geodetic position in the currently selected ellipsoid. The default is the WGS8-Ellipsoid, but can be changed with the message CFG-NAVSPG-USE_USRDAT.										
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum				
structure	0xb5 0x6	2 0x29	0x02	28		see below	CK_A CK_B				
Payload desc	cription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U4	iTOW		-	ms	GPS time of week of the navigati	on epoch.				
						See section iTOW timestamps manual for details.	s in the integration				
4	14	lon		1e-7	deg	Longitude					
8	14	lat		1e-7	deg	Latitude					
12	14	height		-	mm	Height above ellipsoid					
16	14	hMSL		-	mm	Height above mean sea level					
20	U4	hAcc		-	mm	Horizontal accuracy estimate					
24	U4	vAcc		-	mm	Vertical accuracy estimate					

# 3.16.8 UBX-NAV2-PVAT (0x29 0x17)

### 3.16.8.1 Navigation position velocity attitude time solution

Message	UBX-NAV2-PVAT									
	Navigation position velocity attitude time solution									
Туре	Periodic/polled									
Comment	This message combines position, velocity, attitude and time solution, including accuracy figures.									
	Note that during a leap second there may be more or less than 60 seconds in a minute.									
	See description of leap seconds in the integration manual for details.									
Message structure	Header	Class	ID	Length (Bytes)	Payload	Checksum				
	0xb5 0x62	0x29	0x17	116	see below	CK_A CK_B				

Payload description:



Byte	offset	Туре	Name	Scale	Unit	Description
0		U4	iTOW	-	ms	GPS time of week of the navigation epoch.
						See section iTOW timestamps in the integration manual for details.
4		U1	version	-	-	Message version (0x00 for this version)
5		X1	valid	-	-	Validity flags
	bit 0	U <sub>:1</sub>	validDate	-	-	1 = valid UTC Date (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	validTime	-	-	1 = valid UTC time of day (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	fullyResolved	-	-	1 = UTC time of day has been fully resolved (no seconds uncertainty). Cannot be used to check if time is completely solved.
	bit 3	U <sub>:1</sub>	validMag	-	-	1 = valid magnetic declination
6		U2	year	-	у	Year (UTC)
8		U1	month	-	month	Month, range 112 (UTC)
9		U1	day	-	d	Day of month, range 131 (UTC)
10		U1	hour	-	h	Hour of day, range 023 (UTC)
11		U1	min	-	min	Minute of hour, range 059 (UTC)
12		U1	sec	-	s	Seconds of minute, range 060 (UTC)
13		U1	reserved0	-	-	Reserved
14		U1[2]	reserved1	-	-	Reserved
16		U4	tAcc	-	ns	Time accuracy estimate (UTC)
20		14	nano	-	ns	Fraction of second, range -1e9 1e9 (UTC)
24		U1	fixType	-	-	GNSSfix Type:
						• 0 = no fix
						<ul><li>1 = dead reckoning only</li><li>2 = 2D-fix</li></ul>
						• 3 = 3D-fix
						<ul> <li>4 = GNSS + dead reckoning combined</li> </ul>
						• 5 = time only fix
25		X1	flags	-	-	Fix status flags
	bit 0	U <sub>:1</sub>	gnssFixOK	-	-	1 = valid fix (i.e within DOP & accuracy masks)
	bit 1	U <sub>:1</sub>	diffSoln	-	-	1 = differential corrections were applied
	bit 3	U <sub>:1</sub>	vehRollValid	-	-	1 = roll of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 4	U <sub>:1</sub>	vehPitchValid	-	-	1 = pitch of vehicle is valid, only set if the receiver is in sensor fusion mode
	bit 5	U <sub>:1</sub>	vehHeading Valid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 76	U.a	garreals			Carrier range solution status:
	DITS /6	J:2	carrSoln			<ul> <li>0 = no carrier range solution</li> </ul>
						<ul> <li>1 = carrier range solution with float ambiguities</li> </ul>
						<ul> <li>2 = carrier range solution with fixed ambiguities</li> </ul>



bit 5	U <sub>:1</sub>	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)
bit 6	U <sub>:1</sub>	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
bit 7	U <sub>:1</sub>	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
27	U1	numSV	-	-	Number of satellites used in Nav Solution
28	14	lon	1e-7	deg	Longitude
32	14	lat	1e-7	deg	Latitude
36	14	height	-	mm	Height above ellipsoid
40	14	hMSL	-	mm	Height above mean sea level
44	U4	hAcc	-	mm	Horizontal accuracy estimate
48	U4	vAcc	-	mm	Vertical accuracy estimate
52	14	velN	-	mm/s	NED north velocity
56	14	velE	-	mm/s	NED east velocity
60	14	velD	-	mm/s	NED down velocity
64	14	gSpeed	-	mm/s	Ground Speed (2-D)
68	U4	sAcc	-	mm/s	Speed accuracy estimate
72	14	vehRoll	1e-5	deg	Vehicle roll.
76	14	vehPitch	1e-5	deg	Vehicle pitch.
80	14	vehHeading	1e-5	deg	Vehicle heading.
84	14	motHeading	1e-5	deg	Motion heading.
88	U2	accRoll	1e-2	deg	Vehicle roll accuracy (if null, roll angle is not available).
90	U2	accPitch	1e-2	deg	Vehicle pitch accuracy (if null, pitch angle is not available).
92	U2	accHeading	1e-2	deg	Vehicle heading accuracy (if null, heading angle is not available).
94	12	magDec	1e-2	deg	Magnetic declination.
96	U2	magAcc	1e-2	deg	Magnetic declination accuracy.
98	U2	errEllipse Orient	1e-2	deg	Orientation of semi-major axis of error ellipse (degrees from true north)
100	U4	errEllipse Major	-	mm	Semi-major axis of error ellipse
104	U4	errEllipse Minor	-	mm	Semi-minor axis of error ellipse
108	U1[4]	reserved2	-	-	Reserved
112	U1[4]	reserved3	-	-	Reserved

## 3.16.9 UBX-NAV2-PVT (0x29 0x07)

#### 3.16.9.1 Navigation position velocity time solution

Message	UBX-NAV2-PVT
	Navigation position velocity time solution
Туре	Periodic/polled



Comment		This message combines position, velocity and time solution, including accuracy figures.  Note that during a leap second there may be more or less than 60 seconds in a minute.										
		See desc	ription	of le	ap sec				anual for details.			
Messa	age	Header		SS	ID	Ler	gth (Bytes)		Payload	Checksum		
struct	ure	0xb5 0x6	2 0x2	29	0x07	92			see below	CK_A CK_B		
-	ad descr	-										
Byte o	offset	Туре	Name				Scale	Unit	Description			
0	U4 i TOW - ms GPS time of week of the navigation  See section iTOW timestamps i manual for details.											
4		U2	year				-	У	Year (UTC)			
6		U1	month	1			-	month	Month, range 112 (UTC)			
7		U1	day				-	d	Day of month, range 131 (UTC)			
8		U1	hour				-	h	Hour of day, range 023 (UTC)			
9		U1	min				-	min	Minute of hour, range 059 (UTC)			
10		U1	sec				-	s	Seconds of minute, range 060 (UTC)			
11		X1	sec valid				-	-	Validity flags			
	bit 0	U <sub>:1</sub>	validDate				-	-	1 = valid UTC Date (see section Time validity in integration manual for details)			
	bit 1	U <sub>:1</sub>	validTime				-	-	1 = valid UTC time of day (see section Time validity the integration manual for details)			
	bit 2	U <sub>:1</sub>	fullyResolved			d	-	-	1 = UTC time of day has been ful seconds uncertainty). Cannot be used is completely solved.	-		
	bit 3	U:1	valid	lMaç	1		-	-	1 = valid magnetic declination			
12		U4	tAcc				-	ns	Time accuracy estimate (UTC)			
16		14	nano				-	ns	Fraction of second, range -1e9 1e9 (	UTC)		
20		U1	fixTy	pe 'pe			-	-	<ul> <li>GNSSfix Type:</li> <li>0 = no fix</li> <li>1 = dead reckoning only</li> <li>2 = 2D-fix</li> <li>3 = 3D-fix</li> <li>4 = GNSS + dead reckoning combines</li> <li>5 = time only fix</li> </ul>	ned		
21		X1	flags	5			-	-	Fix status flags			
	bit 0	U <sub>:1</sub>	gnssF	'ix(	OK		-	-	1 = valid fix (i.e within DOP & accuracy	masks)		
	bit 1	U:1	diffS	olr	ì		-	-	1 = differential corrections were applie	ed		
	bits 42	U:3	psmState				-	-	Power save mode state (see Powe section in the integration manual for c  • 0 = PSM is not active	•		
									<ul> <li>1 = Enabled (an intermediate state</li> </ul>	e before		
									Acquisition state	201010		
									• 2 = Acquisition			
									3 = Tracking			
									<ul> <li>4 = Power Optimized Tracking</li> </ul>			
									• 5 = Inactive			



	bit 5	U:1	headVehValid	-	-	1 = heading of vehicle is valid, only set if the receiver is in sensor fusion mode
	bits 76	U <sub>:2</sub>	carrSoln	-	-	Carrier phase range solution status:
						• 0 = no carrier phase range solution
						• 1 = carrier phase range solution with floating
						ambiguities
						<ul> <li>2 = carrier phase range solution with fixed</li> </ul>
						ambiguities
						(not supported for protocol versions less than 20.00)
22		X1	flags2	-	-	Additional flags
	bit 5	U:1	confirmedAvai	-	-	1 = information about UTC Date and Time of Day validity confirmation is available (see section Time validity in the integration manual for details)
						This flag is only supported in Protocol Versions 19.00, 19.10, 20.10, 20.20, 20.30, 22.00, 23.00, 23.01, 27 and 28.
	bit 6	U:1	confirmedDate	-	-	1 = UTC Date validity could be confirmed (see section Time validity in the integration manual for details)
	bit 7	U:1	confirmedTime	-	-	1 = UTC Time of Day could be confirmed (see section Time validity in the integration manual for details)
23		U1	numSV	-	-	Number of satellites used in Nav Solution
24		14	lon	1e-7	deg	Longitude
28		14	lat	1e-7	deg	Latitude
32		14	height	-	mm	Height above ellipsoid
36		14	hMSL	-	mm	Height above mean sea level
40		U4	hAcc	-	mm	Horizontal accuracy estimate
44		U4	vAcc	-	mm	Vertical accuracy estimate
48		14	velN	_	mm/s	NED north velocity
52		14	velE	_	mm/s	NED east velocity
56		14	velD		mm/s	NED down velocity
60		14			mm/s	
			gSpeed		•	Ground Speed (2-D)
64		14	headMot	1e-5	deg	Heading of motion (2-D)
68		U4	sAcc	-	mm/s	Speed accuracy estimate
72		U4	headAcc	1e-5	deg	Heading accuracy estimate (both motion and vehicle)
76		U2	pDOP	0.01	-	Position DOP
78		X2	flags3	-	-	Additional flags
	bit 0	U:1	invalidLlh	-	-	1 = Invalid Ion, lat, height and hMSL (applicable to heading products only)
	bits 41	U <sub>:4</sub>	lastCorrection	-	-	Age of the most recently received differential correction:
			Age			0 = Not available
						<ul> <li>1 = Age between 0 and 1 second</li> </ul>
						2 = Age between 1 (inclusive) and 2 seconds
						3 = Age between 2 (inclusive) and 5 seconds
						<ul> <li>4 = Age between 5 (inclusive) and 10 seconds</li> </ul>
						• 5 = Age between 10 (inclusive) and 15 seconds
						3



						<ul> <li>6 = Age between 15 (inclusive) and 20 seconds</li> <li>7 = Age between 20 (inclusive) and 30 seconds</li> <li>8 = Age between 30 (inclusive) and 45 seconds</li> <li>9 = Age between 45 (inclusive) and 60 seconds</li> <li>10 = Age between 60 (inclusive) and 90 seconds</li> </ul>
						11 = Age between 90 (inclusive) and 120 seconds
						• >=12 = Age greater or equal than 120 seconds
	bit 13	U <sub>:1</sub>	authTime	-	-	Flag that indicates if the output time has been validated against an external trusted time source
						• 0 = Time is not authenticated
						<ul> <li>1 = Time is authenticated</li> </ul>
	bit 14	U:1	nmaFixStatus	-	-	Flag assigned to a fix that has been computed mixing satellites with data authenticated through Navigation Message Authentication (NMA) methods and satellites using unauthenticated data. The fix is flagged as Verified when internal cross-checks validates the unauthenticated signals against the authenticated ones. Note that Not Verified status does not imply directly spoofing attacks, to identify spoofing alerts refer to UBX-SEC-SIG.
						• 0 = Not Verified: The mixed solution does not
						agree with the NMA authenticated data or the
						comparison could not be performed, e.g., not
						enough authenticated SVs to extrapolate the
						result or cryptographic data not decoded yet
						1 = Verified: The mixed solution agrees with the
						NMA authenticated data
						Currently, the only existing NMA method is Galileo Open Service Navigation Message Authentication (OSNMA) protocol.
80		U1[4]	reserved0	-	-	Reserved
84		14	headVeh	1e-5	deg	Heading of vehicle (2-D), this is only valid when headVehValid is set, otherwise the output is set to the heading of motion
88		12	magDec	1e-2	deg	Magnetic declination. Only supported in ADR 4.10 and later.
90		U2	magAcc	1e-2	deg	Magnetic declination accuracy. Only supported in ADR 4.10 and later.

## 3.16.10 UBX-NAV2-SAT (0x29 0x35)

#### 3.16.10.1 Satellite information

Message	UBX-NAV2-SAT										
	Satellite information										
Type Periodic/polled											
Comment		•	,		are either known to be visible or curre to the subset of signals specified in S	,					
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x29	0x35	8 + numSvs·12	see below	CK_A CK_B					



Byte offset	Typo	Name	Scale	Unit	Description
•	<i>Type</i> U4		Scale		<u> </u>
0	04	iTOW	-	ms	GPS time of week of the navigation epoch.  See section iTOW timestamps in the integration manual for details.
4	U1	version	-	-	Message version (0x01 for this version)
5	U1	numSvs	-	-	Number of satellites
6	U1[2]	reserved0	-	-	Reserved
Start of repea	ted grou	p (numSvs times)			
8 + n·12	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering) fo assignment
9 + n·12	U1	svId	-	-	Satellite identifier (see Satellite Numbering) fo assignment
10 + n·12	U1	cno	-	dBHz	Carrier to noise ratio (signal strength)
11 + n·12	I1	elev	-	deg	Elevation (range: +/-90), unknown if out of range
12 + n·12	12	azim	-	deg	Azimuth (range 0-360), unknown if elevation is out or range
14 + n·12	12	prRes	0.1	m	Pseudorange residual
16 + n·12	X4	flags	-	-	Bitmask
bits 20	U:1	qualityInd svUsed	-	-	Signal quality indicator:  • 0 = no signal  • 1 = searching signal  • 2 = signal acquired  • 3 = signal detected but unusable  • 4 = code locked and time synchronized  • 5, 6, 7 = code and carrier locked and time synchronized  1 = Signal in the subset specified in Signal Identifiers is currently being used for navigation
bits 54	U <sub>:2</sub>	health	-	-	Signal health flag:  • 0 = unknown  • 1 = healthy  • 2 = unhealthy
bit 6	U <sub>:1</sub>	diffCorr	-	-	1 = differential correction data is available for this SV
bit 7	U <sub>:1</sub>	smoothed	-	-	1 = carrier smoothed pseudorange used
bits 108	U:3	orbitSource	-	-	Orbit source:  • 0 = no orbit information is available for this SV  • 1 = ephemeris is used  • 2 = almanac is used  • 3 = AssistNow Offline orbit is used  • 4 = AssistNow Autonomous orbit is used  • 5, 6, 7 = other orbit information is used
					1 = ephemeris is available for this SV
bit 11	U. <sub>1</sub>	ephAvail	-	-	1 - epiterileris is available for this 5 v



bit 13	U:1	anoAvail	-	-	1 = AssistNow Offline data is available for this SV	
bit 14	U <sub>:1</sub>	aopAvail	-	-	1 = AssistNow Autonomous data is available for this SV	
bit 16	U <sub>:1</sub>	sbasCorrUsed	-	-	1 = SBAS corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 17	U <sub>:1</sub>	rtcmCorrUsed	-	-	1 = RTCM corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 18	U <sub>:1</sub>	slasCorrUsed	-	-	1 = QZSS SLAS corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 19	U <sub>:1</sub>	spartnCorrUsed	-	-	1 = SPARTN corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 20	U <sub>:1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 21	U <sub>:1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 22	U <sub>:1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for a signal in the subset specified in Signal Identifiers	
bit 23	U <sub>:1</sub>	clasCorrUsed	-	-	1 = CLAS corrections have been used for a signal in the subset specified in Signal Identifiers	

## 3.16.11 UBX-NAV2-SBAS (0x29 0x32)

#### 3.16.11.1 SBAS status data

Message	UBX-NAV	2-SBAS									
	SBAS sta	tus data									
Туре	Periodic/p	olled									
Comment	This message outputs the status of the SBAS sub system										
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum				
structure	0xb5 0x62 0x29 0x32			12 + cnt·12		see below	CK_A CK_B				
Payload descr	ription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.				
						See the description of iTOW for details.					
4	U1	geo		-	-	PRN Number of the GEO wher integrity data is used from	e correction and				
5	U1	mode		-	-	SBAS Mode  O Disabled  I Enabled integrity  Senabled test mode					
6	I1	sys		-	-	SBAS System (WAAS/EGNOS/)  • -1 Unknown  • 0 WAAS  • 1 EGNOS  • 2 MSAS  • 3 GAGAN  • 16 GPS					
7	X1	service	<u> </u>	-	-	SBAS Services available					
bit 0	U <sub>:1</sub>	Rangino	ı	-	-	GEO may be used as ranging source	!				



bit 1	U:1	Corrections	-	-	GEO is providing correction data
bit 2	U <sub>:1</sub>	Integrity	-	-	GEO is providing integrity
bit 3	U <sub>:1</sub>	Testmode	-	-	GEO is in test mode
bit 4	U:1	Bad	-	-	Problem with signal or broadcast data indicated
8	U1	cnt	-	-	Number of SV data following
9	X1	statusFlags	-	-	SBAS status flags
bits 10	U <sub>:2</sub>	integrityUsed	-	-	SBAS integrity used
					• 0 = Unknown
					• 1 = Integrity information is not available or SBAS
					integrity is not enabled
					• 2 = Receiver uses only GPS satellites for which
					integrity information is available
10	U1[2]	reserved0	-	-	Reserved
Start of repea	ted group	(cnt times)			
12 + n·12	U1	svid	-	-	SV ID
13 + n·12	U1	reserved1	-	-	Reserved
14 + n·12	U1	udre	-	-	Monitoring status
15 + n·12	U1	svSys	-	-	System (WAAS/EGNOS/)
					same as SYS
16 + n·12	U1	svService	-	-	Services available
					same as SERVICE
17 + n·12	U1	reserved2	-	-	Reserved
18 + n·12	12	prc	-	cm	Pseudo Range correction in [cm]
20 + n·12	U1[2]	reserved3	-	-	Reserved
22 + n·12	12	ic	-	cm	lonosphere correction in [cm]
End of repeat	ed group	(cnt times)			

## 3.16.12 UBX-NAV2-SIG (0x29 0x43)

#### 3.16.12.1 Signal information

Message	UBX-NAV2-SIG Signal information										
Туре	Periodic/	polled									
Comment This message displays information about signals currently tracked or searched by t							eceiver.				
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum				
structure	0xb5 0x6	62 0x29 0x43		8 + numSigs·16		see below	CK_A CK_B				
Payload desc	cription:										
Byte offset	Type	Name		Scale	Unit	Description					
0	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.				
						See section iTOW timestamps in the integration manual for details.					
4	U1	version		-	-	Message version (0x00 for this ve	ersion)				



5	U1	numSigs	-	-	Number of signals
6	U1[2]	reserved0	-	-	Reserved
Start of repeat	ted group	(numSigs <b>times</b> )			
8 + n·16	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering) for assignment
9 + n·16	U1	svId	-	-	Satellite identifier (see Satellite Numbering) for assignment
10 + n·16	U1	sigId	-	-	New style signal identifier (see Signal Identifiers)
11 + n·16	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
12 + n·16	12	prRes	0.1	m	Pseudorange residual
14 + n·16	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength)
15 + n·16	U1	qualityInd	-	-	Signal quality indicator:  0 = no signal  1 = searching signal  2 = signal acquired  3 = signal detected but unusable  4 = code locked and time synchronized  5, 6, 7 = code and carrier locked and time synchronized
16 + n·16	U1	corrSource	-	-	Correction source:  • 0 = no corrections  • 1 = SBAS corrections  • 2 = BeiDou corrections  • 3 = RTCM2 corrections  • 4 = RTCM3 OSR corrections  • 5 = RTCM3 SSR corrections  • 6 = QZSS SLAS corrections  • 7 = SPARTN corrections  • 8 = CLAS corrections
17 + n·16	U1	ionoModel	-	-	Ionospheric model used:  0 = no model  1 = Klobuchar model transmitted by GPS  2 = SBAS model  3 = Klobuchar model transmitted by BeiDou  8 = Iono delay derived from dual frequency observations
18 + n·16	X2	sigFlags	-	-	Signal related flags
bits 10	U <sub>:2</sub>	health	-	-	Signal health flag:  • 0 = unknown  • 1 = healthy  • 2 = unhealthy
bit 2	U <sub>:1</sub>	prSmoothed	-	-	1 = Pseudorange has been smoothed
bit 3	U <sub>:1</sub>	prUsed	-	-	1 = Pseudorange has been used for this signal
bit 4	U <sub>:1</sub>	crUsed	-	-	1 = Carrier range has been used for this signal
bit 5	U <sub>:1</sub>	doUsed	-	-	1 = Range rate (Doppler) has been used for this signal
bit 6	U <sub>:1</sub>	prCorrUsed	-	-	1 = Pseudorange corrections have been used for this signal



bit	<sub>7</sub> U <sub>:1</sub>	crCorrUsed	-	-	1 = Carrier range corrections have been used for this signal
bit	U <sub>:1</sub>	doCorrUsed	-	-	1 = Range rate (Doppler) corrections have been used for this signal
bit	U <sub>:1</sub>	authStatus	-	-	Authentication status of the navigation data used to compute the satellite's position in current navigation epoch. If the authentication fails, the navigation data is not used so the authentication status in this message can take only two values:
					• 0 = Unknown
					• 1 = Authenticated
					Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message.
20 + n·16	U1[4]	reserved1	-	-	Reserved
End of repea	ted group	(numSigs times)			

### 3.16.13 UBX-NAV2-STATUS (0x29 0x03)

#### 3.16.13.1 Receiver navigation status

Message	UBX-NAV	2-STATU	S			UBX-NAV2-STATUS											
	Receiver	navigatio	n statu	s													
Туре	Periodic/p	olled															
Comment	See impor			concerning th	e validity o	of the position given in section Navigat	ion output filters in										
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum										
structure	0xb5 0x62	2 0x29	0x03	16		see below	CK_A CK_B										
Payload desci	ription:																
Byte offset	Туре	Name		Scale	Unit	Description											
0	U4	iTOW		-	ms	GPS time of week of the navigation	epoch.										
						For details, see section iTOW t integration manual.	imestamps in the										
4	U1	gpsFix		-	-	GPSfix Type, this value does <b>not</b> of and within the limits. See note on fix  • 0x00 = no fix  • 0x01 = dead reckoning only  • 0x02 = 2D-fix  • 0x03 = 3D-fix  • 0x04 = GPS + dead reckoning only  • 0x05 = Time only fix  • 0x060xff = reserved	ag gpsFixOk below										
5	X1	flags		-	-	Navigation Status Flags											
bit 0	U <sub>:1</sub>	gpsFixC	k	-	-	1 = position and velocity valid and v Masks.	vithin DOP and ACC										
bit 1	U:1	diffSol	.n	-	-	1 = differential corrections were ap	plied										
bit 2	U <sub>:1</sub>	wknSet		-	-	1 = Week Number valid (for details validity in the Integration manual)	s, see section Time										
bit 3	U <sub>:1</sub>	towSet		-	-	1 = Time of Week valid (for details validity in the integration manual)	s, see section Time										



6		X1	fixStat	-	-	Fix Status Information
	bit 0	U <sub>:1</sub>	diffCorr	-	-	1 = differential corrections available
	bit 1	U:1	carrSolnValid	-	-	1 = valid carrSoln
	bits 76	U <sub>:2</sub>	mapMatching	-	-	map matching status:
						• 00: none
7		X1	flags2	-	-	further information about navigation output
	bits 10	U <sub>:2</sub>	psmState	-	-	power save mode state (not supported for protocol versions less than 13.01)
						• 0 = ACQUISITION [or when psm disabled]
						• 1 = TRACKING
						<ul> <li>2 = POWER OPTIMIZED TRACKING</li> </ul>
						• 3 = INACTIVE
	bits 43	U <sub>:2</sub>	spoofDetState	-	-	Spoofing detection state (not supported for protocol versions less than 18.00)
						0: Unknown or deactivated
						• 1: No spoofing indicated
						2: Spoofing indicated
						• 3: Multiple spoofing indications
						Note that the spoofing state value only reflects the detector state for the current navigation epoch. As spoofing can be detected most easily at the transition from real signal to spoofing signal, this is also where the detector is triggered the most. l.e. a value of $1$ - $No$ spoofing indicated does not mean that the receiver is not spoofed, it simply states that the detector was not triggered in this epoch.
	bits 76	U <sub>:2</sub>	carrSoln	-	-	Carrier phase range solution status:
						• 0 = no carrier phase range solution
						<ul> <li>1 = carrier phase range solution with floating ambiguities</li> </ul>
						• 2 = carrier phase range solution with fixed
		114				ambiguities
8		U4	ttff	-	ms	Time to first fix (millisecond time tag)
12		U4	msss	-	ms	Milliseconds since startup / reset

# 3.16.14 UBX-NAV2-TIMEBDS (0x29 0x24)

#### 3.16.14.1 BeiDou time solution

Message	UBX-NAV2-	TIMEB	DS							
	BeiDou time	e soluti	on							
Туре	Periodic/pol	Periodic/polled								
Comment	This messa an accuracy	•		orecise BDS ti	me of the r	nost recent naviç	gation solution inclu	ding validity flags and		
Message	Header	Class	ID	Length (Byte	es)		Payload	Checksum		
structure	0xb5 0x62	0x29	0x24	20			see below	CK_A CK_B		
Payload desc	cription:									



0		U4	iTOW	-	ms	GPS time of week of the navigation epoch.
						See section iTOW timestamps in the integration manual for details.
4		U4	SOW	-	s	BDS time of week (rounded to seconds)
8		14	fSOW	-	ns	Fractional part of SOW (range: +/-500000000).  The precise BDS time of week in seconds is:  SOW + fSOW * 1e-9
12		12	week	-	-	BDS week number of the navigation epoch
14		l1	leapS	-	S	BDS leap seconds (BDS-UTC)
15		X1	valid	-	-	Validity Flags
	bit 0	U <sub>:1</sub>	sowValid	-	-	1 = Valid SOW and fSOW (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	weekValid	-	-	1 = Valid week (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	leapSValid	-	-	1 = Valid leap second
16		U4	tAcc	-	ns	Time Accuracy Estimate

### 3.16.15 UBX-NAV2-TIMEGAL (0x29 0x25)

#### 3.16.15.1 Galileo time solution

Message	UBX-NAV2-TIMEGAL											
	Galileo t	ime soluti	on									
Туре	Periodic	/polled										
Comment		ssage repo ccuracy es		•	o time of tl	ne most recent navigation solution in	cluding validity flags					
Message	Header	Class		Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x6	62 0x29		20		see below CK_A	CK_A CK_B					
Payload desc	ription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.					
						See section iTOW timestamps manual for details.	in the integration					
4	U4	galTow		-	S	Galileo time of week (rounded to	seconds)					
8	14	fGalTow		- ns		Fractional part of the Galileo ti +/-5000000000).	ime of week (range:					
						The precise Galileo time of week i	n seconds is:					
						galTow + fGalTow * 1e-9						
12	12	galWno		-	-	Galileo week number						
14	I1	leapS		-	S	Galileo leap seconds (Galileo-UTC	<del>(</del> )					
15	X1	valid		-	-	Validity Flags						
bit 0	U <sub>:1</sub>	galTow\	/alid	-	-	1 = Valid galTow and fGalTow (see in the integration manual for deta	•					
bit 1	U <sub>:1</sub>	galWno\	/alid	-	-	1 = Valid galWno (see section integration manual for details)	Time validity in the					
bit 2	U <sub>:1</sub>	leapSVa	alid	-	-	1 = Valid leapS						



16 U4 tAcc - ns Time Accuracy Estimate

### 3.16.16 UBX-NAV2-TIMEGLO (0x29 0x23)

#### 3.16.16.1 GLONASS time solution

Message	UBX-NA\	/2-TIMEGLO				
	GLONAS	S time solution				
Туре	Periodic/	oolled				
Comment		sage reports the acy estimate.	orecise GLO tin	ne of the n	nost recent navigation solution includin	g validity flags and
Message	Header	Class ID	Length (Byte.	s)	Payload	Checksum
structure	0xb5 0x6	2 0x29 0x23	20		see below	CK_A CK_B
Payload desc	ription:					
Byte offset	Туре	Name	Scale	Unit	Description	
0	U4	iTOW	-	ms	GPS time of week of the navigation See section iTOW timestamps i manual for details.	•
4	U4	TOD	-	S	GLONASS time of day (rounded to i	nteger seconds)
8	14	I4 fTOD		ns	Fractional part of TOD (range: +/-50	0000000).
					The precise GLONASS time of day i	n seconds is:
					TOD + fTOD * 1e-9	
12	U2	Nt	-	days	Current date (range: 1-1461), star 1st Jan of the year indicated by N4 a at the 31st Dec of the third year a by N4	and ending at 1461
14	U1	N4	-	-	Four-year interval number star (1=1996, 2=2000, 3=2004)	ting from 1996
15	X1	valid	-	-	Validity flags	
bit (	U <sub>:1</sub>	todValid	-	-	1 = Valid TOD and fTOD (see secti the integration manual for details)	on Time validity in
bit <sup>.</sup>	U <sub>:1</sub>	dateValid	-	-	1 = Valid N4 and Nt (see section T integration manual for details)	ime validity in the
16	U4	tAcc	-	ns	Time Accuracy Estimate	

### 3.16.17 UBX-NAV2-TIMEGPS (0x29 0x20)

#### 3.16.17.1 GPS time solution

Message	UBX-NAV2-	TIMEG	PS							
	GPS time s	olution								
Туре	Periodic/pol	Periodic/polled								
Comment	This message reports the precise GPS time of the most recent navigation solution including validity flags an accuracy estimate.									
	Header Class ID		ID	Length (Bytes)			Payload			
Message				16		see below				
Message structure	0xb5 0x62	0x29	0x20	16			see below	CK_A CK_B		
		0x29	0x20	16			see below	CK_A CK_B		



0		U4	iTOW	-	ms	GPS time of week of the navigation epoch.
						See section iTOW timestamps in the integration manual for details.
4		14	fTOW	-	ns	Fractional part of iTOW (range: +/-500000).
						The precise GPS time of week in seconds is:
						(iTOW * 1e-3) + (fTOW * 1e-9)
8		12	week	-	-	GPS week number of the navigation epoch
10		l1	leapS	-	s	GPS leap seconds (GPS-UTC)
11		X1	valid	-	-	Validity Flags
	bit 0	U <sub>:1</sub>	towValid	-	-	1 = Valid GPS time of week (iTOW & fTOW, (see section Time validity in the integration manual for details)
	bit 1	U <sub>:1</sub>	weekValid	-	-	1 = Valid GPS week number (see section Time validity in the integration manual for details)
	bit 2	U:1	leapSValid	_	-	1 = Valid GPS leap seconds
12		U4	tAcc	-	ns	Time Accuracy Estimate

## 3.16.18 UBX-NAV2-TIMELS (0x29 0x26)

#### 3.16.18.1 Leap second event information

Message	UBX-NAV	2-TIMEL	S									
	Leap seco	nd event	inform	ation								
Туре	Periodic/p	olled										
Comment	Information	Information about the upcoming leap second event if one is scheduled.										
	Note: Many sources of leap second information provide the week number of a leap second event as an 8-bunsigned number. For the upcoming leap second events, this can be resolved and displayed in this message. However, for the previous leap second events decoded from these sources, there is an inherent ambiguity 256 weeks. Therefore, when the time since the previous event is more than 256 weeks, the dateOfLsGpsV and timeToLsEvent parameters may provide incorrect information.											
Message	Header	Class	ID	Length (Bytes)		Payload	Checksum					
structure	0xb5 0x62	2 0x29	0x26	24		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U4	iTOW		-	ms	GPS time of week of the navigatio	n epoch.					
						See section iTOW timestamps manual for details.	in the integration					
4	U1	version	1	-	-	Message version (0x00 for this ve	rsion)					
5	U1[3]	reserve	ed0	-	-	Reserved						



8		U1	srcOfCurrLs	-	-	Information source for the current number of leap seconds.
						<ul> <li>0 = Default (hardcoded in the firmware, can be outdated)</li> <li>1 = Derived from time difference between GPS and GLONASS time</li> </ul>
						• 2 = GPS
						• 3 = SBAS
						<ul><li>4 = BeiDou</li><li>5 = Galileo</li></ul>
						6 = Aided data
						• 7 = Configured
						• 8 = NavIC
						• 255 = Unknown
9		I1	currLs	-	S	Current number of leap seconds since start of GPS time (Jan 6, 1980). It reflects how much GPS time is ahead of UTC time. Galileo number of leap seconds is the same as GPS. BeiDou number of leap seconds is 14 less than GPS. GLONASS follows UTC time, so no leap seconds.
10		U1	srcOfLsChange	-	-	Information source for the future leap second event.
						• 0 = No source
						• 2 = GPS
						• 3 = SBAS
						• 4 = BeiDou
						<ul><li>5 = Galileo</li><li>6 = GLONASS</li></ul>
						• 7 = NavIC
11		I1	lsChange	-	S	Future leap second change if one is scheduled. +1 = positive leap second, -1 = negative leap second, 0 = no future leap second event scheduled or no information available. If the value is 0, then the amount of leap seconds did not change and the event should be ignored.
12		14	timeToLsEvent	-	S	Number of seconds until the next leap second event, or from the last leap second event if no future event scheduled. If > 0 event is in the future, = 0 event is now, < 0 event is in the past. Valid only if validTimeToLsEvent = 1.
16		U2	dateOfLsGps	_	-	GPS week number (WN) of the next leap second event
			Wn			or the last one if no future event scheduled. Valid only if validTimeToLsEvent = 1.
18		U2	dateOfLsGps Dn	-	-	GPS day of week number (DN) for the next leap second event or the last one if no future event scheduled. Valid
			<i>Σ</i> 11			only if validTimeToLsEvent = 1. (GPS and Galileo DN: from 1 = Sun to 7 = Sat. BeiDou DN: from 0 = Sun to 6 = Sat.)
20		U1[3]	reserved1	-	-	Reserved
23		X1	valid	-	-	Validity flags
	bit 0	U <sub>:1</sub>	validCurrLs	-	-	1 = Valid current number of leap seconds value.
	hi+ 1	U. <sub>1</sub>	validTimeToIc	_	_	1 = Valid time to next leap second event or from the
	DIC I	<del>-</del> .1				last leap second event if no future event scheduled.
	bit 1	U <sub>:1</sub>	validTimeToLs Event	-	-	·

# 3.16.19 UBX-NAV2-TIMENAVIC (0x29 0x63)



#### 3.16.19.1 NavIC time solution

Message	UBX-NA\	/2-TIMEN	AVIC				
	NavIC tin	ne solutior	1				
Туре	Periodic/	oolled					
Comment		sage repor curacy est		•	time of th	e most recent navigation solution inclu	uding validity flags
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x6	2 0x29	0x63	20		see below	CK_A CK_B
Payload desci	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U4 iTOW			-	ms	GPS time of week of the navigation	epoch.
						See section iTOW timestamps in manual for details.	n the integratior
4	U4	NavICTow		-	S	NavIC time of week (rounded to sec	onds)
8	14	fNavICTow		-	ns	Fractional part of the NavIC time +/-5000000000).	e of week (range
						The precise NavIC time of week in s	econds is:
						NavICTow + fNavICTow * 1e-9	
12	12	NavICWn	0	-	-	NavIC week number	
14	I1	leapS		-	s	NavIC leap seconds (NavIC-UTC)	
15	X1	valid		-	-	Validity Flags	
hit O	U <sub>:1</sub>	NavICTo	W	-	-	1 = Valid NavICTow and fNavICTow	(see section Time
5.00		Valid				validity in the integration manual fo	r details)
bit 1	U <sub>:1</sub>	NavICWn	0	-	_	1 = Valid NavlCWno (see section T	ime validity in the
		Valid				integration manual for details)	
bit 2	U:1	leapSVa	lid	-	-	1 = Valid leapS	
16	U4	tAcc		-	ns	Time Accuracy Estimate	

## 3.16.20 UBX-NAV2-TIMEUTC (0x29 0x21)

#### 3.16.20.1 UTC time solution

Message	UBX-NA	UBX-NAV2-TIMEUTC											
	UTC time	e solutio	n										
Туре	Periodic/	Periodic/polled											
Comment	Note that during a leap second there may be more or less than 60 seconds in a minute.												
	See the description of leap seconds in the integration manual for details.												
Message	Header	Clas	s ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x6	32 0x2	9 0x21	20		see below	CK_A CK_B						
Payload desc	ription:												
Byte offset	Type	Name		Scale	Unit	Description							
0	U4	iTOW		-	ms	GPS time of week of the naviga	tion epoch.						
						See section iTOW timestam manual for details.	ps in the integration						
4	U4	tAcc		-	ns	Time accuracy estimate (UTC)							
8	14	nano		-	ns	Fraction of second, range -1e9	1e9 (UTC)						



12		U2	year	-	у	Year, range 19992099 (UTC)
14		U1	month	-	month	Month, range 112 (UTC)
15		U1	day	-	d	Day of month, range 131 (UTC)
16		U1	hour	-	h	Hour of day, range 023 (UTC)
17		U1	min	-	min	Minute of hour, range 059 (UTC)
18		U1	sec	-	S	Seconds of minute, range 060 (UTC)
19		X1	valid	-	-	Validity Flags
	bit 0	U <sub>:1</sub>	validTOW	-	-	1 = Valid Time of Week (see section Time validity in the integration manual for details)
	bit 1	U:1	validWKN	-	-	1 = Valid Week Number (see section Time validity in the integration manual for details)
	bit 2	U <sub>:1</sub>	validUTC	-	-	1 = Valid UTC Time
	bit 3	U:1	authStatus	-	-	Indicates if the parameters used to convert GNSS time into UTC time have been authenticated.
						• 0 = Unknown
						• 1 = Authenticated
						Note that currently the only data authentication function is provided by Galileo Open Service Navigation Message Authentication (OSNMA) protocol for E1 I/NAV message. Systems other than EU UTC can be authenticated indirectly only using the above information.
	bits 74	U:4	utcStandard	-	-	UTC standard identifier. (Not supported for protocol versions less than 15.00)
						• 0 = Information not available
						<ul> <li>1 = Communications Research Labratory (CRL),</li> <li>Tokyo, Japan</li> </ul>
						<ul> <li>2 = National Institute of Standards and</li> </ul>
						Technology (NIST)
						• 3 = U.S. Naval Observatory (USNO)
						• 4 = International Bureau of Weights and
						Measures (BIPM)
						• 5 = European laboratories
						• 6 = Former Soviet Union (SU)
						• 7 = National Time Service Center (NTSC), China
						• 8 = National Physics Laboratory India (NPLI)
						• 15 = Unknown

### 3.16.21 UBX-NAV2-VELECEF (0x29 0x11)

#### 3.16.21.1 Velocity solution in ECEF

Message	UBX-NAV2-VELECEF
	Velocity solution in ECEF
Туре	Periodic/polled
Comment	See important comments concerning validity of position given in section Navigation output filters in the integration manual.



Message	Header	Class	ID	Length (Byte	s)	Payload	Checksum
structure	0xb5 0x62	2 0x29	0x11	20		see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U4	iTOW		-	ms	GPS time of week of the navigation	n epoch.
						See section iTOW timestamps manual for details.	in the integration
4	14	ecefVX		-	cm/s	ECEF X velocity	
8	14	ecefVY		-	cm/s	ECEF Y velocity	
12	14	ecefVZ		-	cm/s	ECEF Z velocity	
16	U4	sAcc		-	cm/s	Speed accuracy estimate	

### 3.16.22 UBX-NAV2-VELNED (0x29 0x12)

#### 3.16.22.1 Velocity solution in NED frame

Message	UBX-NAV	2-VELNE	D										
	Velocity s	Velocity solution in NED frame											
Туре	Periodic/p	olled											
Comment	See important comments concerning validity of position given in section Navigation output filters in integration manual.												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum						
structure	0xb5 0x62	0x29	0x12	36		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U4	iTOW		-	ms	GPS time of week of the navigation	on epoch.						
						See section iTOW timestamps manual for details.	s in the integration						
4	14	velN		-	cm/s	North velocity component							
8	14	velE		-	cm/s	East velocity component							
12	14	velD		-	cm/s	Down velocity component							
16	U4	speed		-	cm/s	Speed (3-D)							
20	U4	gSpeed		-	cm/s	Ground speed (2-D)							
24	14	heading	I	1e-5	deg	Heading of motion 2-D							
28	U4	sAcc		-	cm/s	Speed accuracy Estimate							
32	U4	cAcc		1e-5	deg	Course / Heading accuracy estim	ate						

# 3.17 UBX-RXM (0x02)

The messages in the UBX-RXM class are used to output status and result data from the receiver manager as well as sending commands to the receiver manager.

#### 3.17.1 UBX-RXM-COR (0x02 0x34)



### 3.17.1.1 Differential correction input status

Messa	age		JBX-RXM-COR Differential correction input status							
Туре		Output		-						
Comm	nent	successfu	-	of a diff	feren	tial corre		fferential correction input messages. It message, irrespective of whether the p		
Messa	~~	Header	Class	ID	Len	gth (Byte	es)	Payload	Checksum	
structi	_	0xb5 0x6	2 0x02	0x02 0x34				see below	CK_A CK_B	
Payloa	ad descr	iption:								
Byte o	ffset	Туре	Name			Scale	Unit	Description		
0		U1	version			-		Message version (0x01 for this versi	ion)	
1		U1	ebno			2^-3	dB	Energy per bit to noise power spec (Eb/N0). 0: unknown. Reported only RXM-PMP (SPARTN) to monitor sign	for protocol UBX	
2		U1	reserve	d0		-	-	Reserved		
3		U1	reserve	d1		-	-	Reserved		
4		X4	statusI	nfo		-	-	Message input status information		
	bits 40	U <sub>:5</sub>	protoco	1		-	-	Input correction data protocol:		
			-					0: Unknown		
								• 1: RTCM3		
								<ul> <li>2: SPARTN (Secure Position Aug Real Time Navigation)</li> </ul>	mentation for	
								29: UBX-RXM-PMP (SPARTN)		
								30: UBX-RXM-QZSSL6		
	bits 65	U <sub>:2</sub>	errStat	us		-	-	Error status of the received cor content based on possibly availab checksums:	_	
								0: Unknown		
								• 1: Error-free		
								• 2: Erroneous		
	bits 87	U.a	msgUsed			_	_	Status of receiver using the input m	essage:	
	5100 01	2	mogosea					0: Unknown	J	
								• 1: Not used		
								• 2: Used		
F	oits 249	U.16	correct	ionId		_	_	Identifier for the correction stream:		
	nts 24s	10	COLLCCC	101114				For RTCM 3: Reference station II	D (DF003) of	
								the received RTCM input messag		
								0-4095. Reported only for the st	andard RTCM	
								messages that include the DF00	3 field and for	
								the u-blox proprietary RTCM me	ssages 4072.x.	
								For all other messages, reports (	OxFFFF.	
								For other correction protocols 0x	FFFF.	
	bit 25	U <sub>:1</sub>	msgType	Valid		_	-	Validity of the msgType field. Set t protocol does not define msgType.	o False e.g. if the	



bit 26	U <sub>:1</sub>	msgSubType Valid	-	-	Validity of the msgSubType field. Set to False e.g. if the protocol does not define subtype for the msgType.
bit 27	U <sub>:1</sub>	msgInputHandle	-	-	Input handling support of the input message:
					• 0: Receiver does not have input handling support for this message
					<ul> <li>1: Receiver has input handling support for this message. Input handling support does not necessarily mean that message is supported/ used by the receiver.</li> </ul>
bits 2928	U <sub>:2</sub>	msgEncrypted	-	-	Encryption status of the input message:
					0: Unknown
					1: Not encrypted
					2: Encrypted
bits 3130	U <sub>:2</sub>	msgDecrypted	-	-	Decryption status of the input message:
					0: Unknown
					1: Not decrypted
					2: Decrypted
8	U2	msgType	-	-	Message type
10	U2	msgSubType	-	-	Message subtype

### 3.17.2 UBX-RXM-MEASX (0x02 0x14)

#### 3.17.2.1 Satellite measurements for RRLP

Message	UBX-RXM-MEASX											
	Satellite	measurements f	or RRLP									
Туре	Periodic/p	Periodic/polled										
Comment	The message payload data is, where possible and appropriate, according to the Radio Resource LCS (Location Services) Protocol (RRLP) [1]. One exception is the satellite and GNSS IDs, which here are given according to the Satellite Numbering scheme. The correct satellites have to be selected and their satellite ID translated accordingly [1, tab. A.10.14] for use in a RRLP Measure Position Response Component. Similarly, the measurement reference time of week has to be forwarded correctly (modulo 14400000 for the 24 LSB GPS measurements variant, modulo 3600000 for the 22 LSB Galileo and Additional Navigation Satelllite Systems (GANSS) measurements variant) of the RRLP measure position response to the SMLC.											
	Reference: [1] ETSI TS 144 031 V11.0.0 (2012-10), Digital cellular telecommunications system (Phase 2+), Location Services (LCS), Mobile Station (MS) - Serving Mobile Location Centre (SMLC), Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11).											
Message	Header	Class ID	Length (Byte	s)	Payload	Checksum						
structure	0xb5 0x6	2 0x02 0x14	44 + numSV	24	see below	CK_A CK_B						
Payload desc	cription:											
Byte offset	Type	Name	Scale	Unit	Description							
0	U1	version	-	-	Message version, currently 0x01							
1	U1[3]	reserved0	-	-	Reserved							
4	U4	gpsTOW	-	ms	GPS measurement reference time							
8	U4	gloTOW	-	ms	GLONASS measurement reference	time						
12	U4	bdsTOW	-	ms	BeiDou measurement reference tin	ne						
16	U1[4]	reserved1	-	-	Reserved							



20	U4	qzssTOW	-	ms	QZSS measurement reference time
24	U2	gpsTOWacc	2^-4	ms	GPS measurement reference time accuracy (0xffff = > 4s)
26	U2	gloTOWacc	2^-4	ms	GLONASS measurement reference time accuracy (0xffff = > 4s)
28	U2	bdsTOWacc	2^-4	ms	BeiDou measurement reference time accuracy (0xffff = > 4s)
30	U1[2]	reserved2	-	-	Reserved
32	U2	qzssTOWacc	2^-4	ms	QZSS measurement reference time accuracy (0xffff = > 4s)
34	U1	numSV	-	-	Number of satellites in repeated block
35	U1	flags	-	-	Flags
bits 10	U:2	towSet	-	-	TOW set (0 = no, 1 or 2 = yes)
36	U1[8]	reserved3	-	-	Reserved
Start of repea	ted group	(numSV times)			
44 + n·24	U1	gnssId	-	-	GNSS ID (see Satellite Numbering)
45 + n·24	U1	svId	-	-	Satellite ID (see Satellite Numbering)
46 + n·24	U1	cNo	-	-	carrier noise ratio (063)
47 + n·24	U1	mpathIndic	-	-	multipath index (according to [1]) (0 = not measured, 1 = low, 2 = medium, 3 = high)
48 + n·24	14	dopplerMS	0.04	m/s	Doppler measurement
52 + n·24	14	dopplerHz	0.2	Hz	Doppler measurement
56 + n·24	U2	wholeChips	-	-	whole value of the code phase measurement (01022 for GPS)
58 + n·24	U2	fracChips	-	-	fractional value of the code phase measurement (01023)
60 + n·24	U4	codePhase	2^-21	ms	Code phase
64 + n·24	U1	intCodePhase	-	ms	Integer (part of the) code phase
65 + n·24	U1	pseuRangeRMS Err	-	-	pseudorange RMS error index (according to [1]) (063)
66 + n·24	U1[2]	reserved4	-	-	Reserved
End of repeate	ed group	(numSV times)			

# 3.17.3 UBX-RXM-PMP (0x02 0x72)

#### 3.17.3.1 PMP (LBAND) message

Message	UBX-RXN	I-PMP							
	PMP (LBA	ND) mes	sage						
Туре	Input								
Comment	Point to M	Point to Multipoint (LBAND) input message							
Message	Header Class ID			Length (Byte	es)		Payload	Checksum	
structure	0xb5 0x62	2 0x02	0x72	24 + [0n]			see below	CK_A CK_B	
Payload desc	cription:								
Byte offset	Туре	Name		Scale	Unit	Description			
0	U1	version	1	-	-	Message ver	sion (0x01 for this vers	sion)	



1	U1	reserved0	-	-	Reserved
2	U2	numBytesUser Data	-	-	Number of bytes the userData block has in this frame (0504)
4	U4	timeTag	-	ms	Time since startup when frame started - if max value of type is reached the counter will be reset
8	U4[2]	uniqueWord	-	-	Received unique words
16	U2	service Identifier	-	-	Received service identifier
18	U1	spare	-	-	Received spare data
19	U1	uniqueWordBit Errors	-	-	Number of bit errors in both unique words
20	U2	fecBits	-	-	Number of bits corrected by FEC (forward error correction)
22	U1	ebno	2^-3	dB	Energy per bit to noise power spectral density ratio
23	U1	reserved1	-	-	Reserved
Start of repe	ated group	o (N times)			
24 + n	U1	userData	-	-	Received user data, which is variable (=numBytesUserData)
End of repea	ted group	(N times)			

### 3.17.4 UBX-RXM-PMREQ (0x02 0x41)

#### 3.17.4.1 Power management request

UBX-RXN	/I-PMRE	Q.								
Power management request										
Comman	d									
This message requests a power management related task of the receiver.										
Header	Clas	s ID	Len	gth (Byte	es)	Payload	Checksum			
0xb5 0x6	2 0x0	2 0x41	l 8			see below	CK_A CK_B			
ription:										
Туре	Name			Scale	Unit	Description				
U4	durat	ion		-	ms	Duration of the requested tas supported value is 12 days. Set wakeup signal on a pin				
X4	flags			-	-	task flags				
U:1	backu	p		-	-	The receiver goes into backup mod defined by duration, provided that to USB	•			
	Power ma Comman This mes Header 0xb5 0x6 cription: Type U4	Power managem  Command  This message recommand  Header Class  0xb5 0x62 0x0  cription:  Type Name  U4 durat  X4 flags	Command  This message requests a Header Class ID  Oxb5 0x62 0x02 0x47 cription:  Type Name  U4 duration  X4 flags	Power management request  Command  This message requests a power  Header Class ID Len  Oxb5 0x62 0x02 0x41 8  cription:  Type Name  U4 duration  X4 flags	Power management request  Command  This message requests a power manage  Header Class ID Length (Byte Oxb5 0x62 0x02 0x41 8 cription:  Type Name Scale  U4 duration -	Power management request  Command  This message requests a power management related to the second se	Power management request  Command  This message requests a power management related task of the receiver.  Header Class ID Length (Bytes) Payload  Oxb5 0x62 0x02 0x41 8 see below  cription:  Type Name Scale Unit Description  U4 duration - ms Duration of the requested tas supported value is 12 days. Set wakeup signal on a pin  X4 flags task flags  U:1 backup The receiver goes into backup modelined by duration, provided that			

#### 3.17.4.2 Power management request

Message	UBX-RXM-PMREQ									
	Power man	agemen	t reque	est						
Туре	Command									
Comment	This messa	ge requ	ests a p	ower management related t	ask of the receiver.					
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum				
structure	0xb5 0x62	0x02	0x41	16	see below	CK_A CK_E				

Payload description:



Byte offset	Type	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	1 U1[3] reserved0		-	-	Reserved
4	U4	duration	-	ms	Duration of the requested task. The maximum supported value is 12 days. Set to 0 to wait for a wakeup signal on a pin
8	X4	flags	-	-	task flags
bit	U:1	backup	-	-	The receiver goes into backup mode for a time period defined by duration, provided that it is not connected to USB
bit	U:1	force	-	-	Force receiver backup while USB is connected. USB interface will be disabled.
12	X4	wakeupSources	-	-	Configure pins to wake up the receiver. The receiver wakes up if there is either a falling or a rising edge on one of the configured pins.
bit	U <sub>:1</sub>	uartrx	-	-	Wake up the receiver if there is an edge on the UART RX pin
bit		extint0	-	-	Wake up the receiver if there is an edge on the EXTINTO pin
bit	U <sub>:1</sub>	extint1	-	-	Wake up the receiver if there is an edge on the EXTINT1 pin
bit	7 U <sub>:1</sub>	spics	-	-	Wake up the receiver if there is an edge on the SPI CS pin

# 3.17.5 UBX-RXM-QZSSL6 (0x02 0x73)

#### 3.17.5.1 QZSS L6 message

UBX-RXM	-QZSSL6	;				
QZSS L6 r	nessage					
Input						
	_	-			Satellite System Interface Specification	on Centimeter Leve
Header	Class	ID	Length (Byte	es)	Payload	Checksum
0xb5 0x62	0x02	0x73	264		see below	CK_A CK_B
iption:						
Туре	Name		Scale	Unit	Description	
U1	version		-	-	Message version (0x01 for this ver	sion)
U1	svId		-	-	Satellite identifier (see Satellite Numbering)	
U2	cno		2^-8	dBHz	Mean C/N0	
U4	timeTag		-	ms	Local time tag corresponding to received QZSS L6 message	the beginning of a
U1	groupDe	lay	-	ns	L6 group delay w.r.t. L2 on channel	
U1	bitErrC	orr	-	-	Number of bit errors corrected decoder	by Reed-Solomor
X2	chInfo		-	-	Information about receiver channe received QZSS L6 message	l associated with a
U <sub>:2</sub>	chn		-	-	Receiver channel (0, 1)	
U <sub>:1</sub>	msgName		-	-	Message name, 0=L6D, 1=L6E	
	QZSS L6 r Input QZSS L6 r Augmenta Header 0xb5 0x62 iption: Type U1 U2 U4 U1 U1 U2 U4 U1 U1 U1 U2 U4	Input  QZSS L6 message in Augmentation Server Augmentation Server Header Class  Oxb5 Ox62 Ox02 intion:  Type Name  U1 version  U1 svId  U2 cno  U4 timeTag  U1 groupDe  U1 bitErrC  X2 chInfo	Input  QZSSL6 message input, as Augmentation Service (IS-Header Class ID)  Oxb5 0x62	Input   QZSS L6 message   Input   QZSS L6 message   Input   QZSS L6 message   Input, as defined in 'Qu   Augmentation Service (IS-QZSS-L6-001   Header   Class   ID   Length (Byte   Input)   Length	Input	Input



bits 1312	U <sub>:2</sub>	errStatus	-	-	Error status of the received QZSS L6 message: 0=unknown, 1=error-free, 2=erroneous
bits 1514	U <sub>:2</sub>	chName	-	-	Channel name, 0=channel A, 1=channel B
12	U1[2]	reserved0	-	-	Reserved
14	U1[250]	msgBytes	-	-	Bytes in a QZSS L6 message

## 3.17.6 UBX-RXM-RAWX (0x02 0x15)

#### 3.17.6.1 Multi-GNSS raw measurements

	ODA IIA	/I-RAWX									
	Multi-GN	Multi-GNSS raw measurements									
Туре	Periodic/p	Periodic/polled									
Comment	This message contains the information needed to be able to generate a RINEX 3 multi-GNSS observation file (see ftp://ftp.igs.org/pub/data/format/).  This message contains pseudorange, Doppler, carrier phase, phase lock and signal quality information for GNSS satellites once signals have been synchronized. This message supports all active GNSS.										
	Header	Class		Length (Byte	-	Payload	Checksum				
Message structure	0xb5 0x6		0x15	16 + numMe		see below	CK_A CK_B				
Payload desc		L OXOL	OXIO	10 - 1141111110		see below	0.12,7.0.125				
Byte offset	Туре	Name		Scale	Unit	Description					
0	R8 rcvTow			-	S	Measurement time of week in approximately aligned to the GPS 1					
						The receiver local time of week, week number and leap second information can be used to translate the time to other time systems. More information about the difference in time systems can be found in the RINEX 3 format documentation. For a receiver operating in GLONASS only mode, UTC time can be determined by subtracting the leapS field from GPS time regardless of whether the GPS leap seconds are valid.					
8	U2	week		-	weeks	GPS week number in receiver local	time.				
10	I1	leapS		-	S	GPS leap seconds (GPS-UTC). This receiver's best knowledge of the le A flag is given in the recStat bitfie leap seconds are known.	eap seconds offset.				
11	U1	numMeas		-	-	Number of measurements to follow	N				
12	X1	recStat		-	-	Receiver tracking status bitfield					
bit 0	U <sub>:1</sub>	leapSec		-	-	Leap seconds have been determine	ed				
bit 1	U <sub>:1</sub>	clkRese	t	-	-	Clock reset applied. Typically th changed in increments of integer r					
13	U1	version		-	-	Message version (0x01 for this ver	sion)				
14	U1[2]	reserve	d0	-	-	Reserved					
Start of repea	ated group	(numMeas	times)								
16 + n·32	R8	prMes		-	m	Pseudorange measurement [m] frequency channel delays are cor internal calibration table.					



24 + n·32	R8	cpMes	-	cycles	Carrier phase measurement [cycles]. The carrier phase initial ambiguity is initialized using an approximate value to make the magnitude of the phase close to the pseudorange measurement. Clock resets are applied to both phase and code measurements in accordance with the RINEX specification.
32 + n·32	R4	doMes	-	Hz	Doppler measurement (positive sign for approaching satellites) [Hz]
36 + n·32	U1	gnssId	-	-	GNSS identifier (see Satellite Numbering for a list of identifiers)
37 + n·32	U1	svId	-	-	Satellite identifier (see Satellite Numbering)
38 + n·32	U1	sigId	-	-	New style signal identifier (see Signal Identifiers).(not supported for protocol versions less than 27.00)
39 + n·32	U1	freqId	-	-	Only used for GLONASS: This is the frequency slot + 7 (range from 0 to 13)
40 + n·32	U2	locktime	-	ms	Carrier phase locktime counter (maximum 64500ms)
42 + n·32	U1	cno	-	dBHz	Carrier-to-noise density ratio (signal strength) [dB-Hz]
43 + n·32	X1	prStdev	0.01*2^n	m	Estimated pseudorange measurement standard deviation
bits 30	U <sub>:4</sub>	prStd	-	-	Estimated pseudorange standard deviation
44 + n·32	X1	cpStdev	0.004	cycles	Estimated carrier phase measurement standard deviation (note a raw value of 0x0F indicates the value is invalid)
bits 30	U <sub>:4</sub>	cpStd	-	-	Estimated carrier phase standard deviation
45 + n·32	X1	doStdev	0.002*2^r	n Hz	Estimated Doppler measurement standard deviation.
bits 30	U <sub>:4</sub>	doStd	-	-	Estimated Doppler standard deviation
46 + n·32	X1	trkStat	-	-	Tracking status bitfield
bit 0	U <sub>:1</sub>	prValid	-	-	Pseudorange valid
bit 1	U <sub>:1</sub>	cpValid	-	-	Carrier phase valid
bit 2	U <sub>:1</sub>	halfCyc	-	-	Half cycle valid
bit 3	U <sub>:1</sub>	subHalfCyc	-	-	Half cycle subtracted from phase
47 + n·32	U1	reserved1	-	-	Reserved
End of repeate	ed group	(numMeas times)			

## 3.17.7 UBX-RXM-RLM (0x02 0x59)

#### 3.17.7.1 Galileo SAR short-RLM report

Message	UBX-RXM-RLM										
	Galileo SAR short-RLM report										
Туре	Output										
Comment	This messa detected by	•		e contents of any Galileo S	earch and Rescue (SAR) Short F	Return Link Message					
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum					
structure	0xb5 0x62	0x02	0x59	16	see below	CK_A CK_B					

Payload description:



Byte offset	Туре	Name	Scale	Unit	Description
0	U1	version	-	-	Message version (0x00 for this version)
1	U1	type	-	-	Message type (0x01 for Short-RLM)
2	U1	svId	-	-	Identifier of transmitting satellite (see Satellite Numbering)
3	U1	reserved0	-	-	Reserved
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.
12	U1	message	-	-	Message code (4 bits)
13	U1[2]	params	-	-	Parameters (16 bits), with bytes ordered by earliest transmitted (most significant) first.
15	U1	reserved1	-	-	Reserved

#### 3.17.7.2 Galileo SAR long-RLM report

Message	UBX-RX	M-RLM									
	Galileo SAR long-RLM report										
Туре	Output										
Comment	This message contains the contents of any Galileo Search and Rescue (SAR) Long Return Link detected by the receiver.										
Message	Header	Class ID	Length (Byte	es)	Payload Checksum						
structure	0xb5 0x6	62 0x02 0x59	28		see below CK_A CK_B						
Payload desc	cription:										
Byte offset	Type	Name	Scale	Unit	Description						
0	U1	version	-	-	Message version (0x00 for this version)						
1	U1	type	-	-	Message type (0x02 for Long-RLM)						
2	U1	svId	-	-	Identifier of transmitting satellite (see Satellite Numbering)						
3	U1	reserved0	-	-	Reserved						
4	U1[8]	beacon	-	-	Beacon identifier (60 bits), with bytes ordered by earliest transmitted (most significant) first. Top four bits of first byte are zero.						
12	U1	message	-	-	Message code (4 bits)						
13	U1[12]	params	-	-	Parameters (96 bits), with bytes ordered by earliest transmitted (most significant) first.						
25	U1[3]	reserved1	-	-	Reserved						

## 3.17.8 UBX-RXM-RTCM (0x02 0x32)

#### 3.17.8.1 RTCM input status

Message	UBX-RXM-RTCM
	RTCM input status
Туре	Output
Comment	This message shows info on a received RTCM input message. It is output upon successful parsing of an RTCM input message, irrespective of whether the RTCM message is supported or not by the receiver.
	This message is deprecated. Use UBX-RXM-COR instead.



Message	Header	Class	ID	Length (Byte:	s)	Payload	Checksum
structure	0xb5 0x6	2 0x02	0x32	8		see below	CK_A CK_B
Payload descr	iption:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	version		-	-	Message version (0x02 for this vers	sion)
1	X1	flags		-	-	RTCM input status flags	
bit O	U:1	crcFail	ed	-	-	0 when RTCM message received check, 1 when failed, in which camsgType might be corrupted and r	se refStation and
bits 21	U <sub>:2</sub>	msgUsed		-	-	2 = RTCM message used successf 1 = not used, 0 = do not know	ully by the receiver,
2	U2	subType		-	-	Message subtype, only applicable to RTCM message 4072 (not available	' '
4	U2	refStat	ion	-	-	Reference station ID:	
						<ul> <li>For RTCM 2.3: Reference static received RTCM 2 input messag 0-1023.</li> </ul>	
						<ul> <li>For RTCM 3.3: Reference static the received RTCM input messions.</li> <li>0-4095. Reported only for the smessages that include the DFC the u-blox proprietary RTCM mesons.</li> <li>For all other messages, reports.</li> </ul>	age. Valid range tandard RTCM 103 field and for essages 4072.x.
6	U2	msgType		-	-	Message type	

## 3.17.9 UBX-RXM-SFRBX (0x02 0x13)

#### 3.17.9.1 Broadcast navigation data subframe

Message	UBX-RXM-SFRBX												
	Broadcast navigation data subframe												
Туре	Output												
Comment	This message reports a complete subframe of broadcast navigation data decoded from a single signal. number of data words reported in each message depends on the nature of the signal.												
Message	Header	Class	ID	Length (Byt	res)	Payload	Checksum						
structure	0xb5 0x62	0x02	0x13	8 + numWords·4		see below	CK_A CK_B						
Payload desc	cription:												
Byte offset	Туре	Name		Scale	Unit	Description							
0	U1	gnssId		-	-	GNSS identifier (see Satellite Nu	mbering)						
1	U1	svId		-	-	Satellite identifier (see Satellite	Numbering)						
2	U1	sigId		-	-	Signal identifier (see Signal Iden	tifiers)						
3	U1	freqId		-	-	Only used for GLONASS: This is (range from 0 to 13)	the frequency slot + 7						
4	U1	numWord	.s	-	-	The number of data words conta (up to 16, for currently supported	•						
5	U1	chn		-	-	The tracking channel number received on	the message was						
6	U1	version		-	-	Message version, (0x02 for this	version)						
7	U1	reserve	d0	-	-	Reserved							



8 + n·4 U4 dwrd - - The data words

End of repeated group (numWords times)

### 3.17.10 UBX-RXM-SPARTN (0x02 0x33)

#### 3.17.10.1 SPARTN input status

Message	UBX-RX	M-S	SPARTN	ı					
	SPARTN	inp	out stat	us					
Туре	Output								
Comment	This message shows info on a received SPARTN input message. It is output upon successful parsing of SPARTN input message, irrespective of whether the SPARTN message is supported or not by the receiver.								
	This mes	ssa	ge is de	precat	ed. l	Jse UBX-R	XM-COR ir	stead.	
Message	Header		Class	ID	Le	ngth (Byte	s)	Payload	Checksum
structure	0xb5 0x6	62	0x02	0x33	8			see below	CK_A CK_B
Payload descr	ription:								
Byte offset	Туре	Ν	ame			Scale	Unit	Description	
0	U1	v	ersion			-	-	Message version (0x01 for this v	ersion)
1	X1	f	lags			-	-	SPARTN input status flags	
bits 21	U <sub>:2</sub>	m	sgUsed	l		-	-	2 = SPARTN message used receiver, 1 = not used, 0 = do not	
2	U2	s	ubType			-	-	Message subtype	
4	U1[2]	r	eserve	d0		-	-	Reserved	
6	U2	m	sgType			-	-	Message type	

### 3.17.11 UBX-RXM-SPARTNKEY (0x02 0x36)

#### 3.17.11.1 Poll installed keys

Message	UBX-RXM-SPARTNKEY											
	Poll installed keys											
Туре	Poll request	:										
Comment	Depending on the number of active keys, the receiver shall send a UBX-RXM-SPARTNKEY message describe the keys. If there are no active keys then a UBX-RXM-SPARTNKEY shall be sent, with field numKeys set to z											
						numkeys set to zero.						
Message	Header	Class	ID	Length (Bytes)	Payload	Checksum						
Message structure			<i>ID</i> 0x36		Payload see below							

#### 3.17.11.2 Transfer dynamic SPARTN keys

Message	UBX-RXM-SPARTNKEY										
	Transfer dynamic SPARTN keys										
Туре	Input/output										
Comment	This message is used to load keys to the receiver.										
	The receiver has provision to store up to two (2) keys. By definition, the one currently used is named 'curre and the one that shall be used as soon as 'current' expires is named 'next'.										
	Depending on how many active keys the receiver has at the time of receiving the message, one of the following shall occur:										
	• If the receiver has no active keys, then the first key transferred shall become 'current'. If the message										



- If the receiver has one (1) active key (current), the transferred key shall be stored as 'current'. If the
  message contains a second key, that key shall be stored as 'next'.
- If the receiver has two (2) active keys (current and next), the transferred key(s) shall be stored as 'current' and 'next'.

 $To query the receiver's keys state (including the keys themselves), send a {\tt UBX-RXM-SPARTNKEY} poll request.$ 

Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum
structure	0xb5 0x62	0x02	0x36	4 + numKeys·8 + [0n]		see below	CK_A CK_B
Payload descr	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U1	version	L	-	-	Message version (0x01 for this ve	rsion)
1	U1	numKeys		-	-	Number of keys the message co or 2). In case of 0 the remainin transmitted.	•
2	U1[2]	reserve	:d0	-	-	Reserved	
Start of repea	ted group (	numKeys	times)				
4 + n·8	U1	reserve	:d1	-	-	Reserved	
5 + n·8	U1	keyLengthBytes		:s -	-	Key length in bytes	
6 + n·8	U2	validFr	omWno	-	week	GPS week number the key is valid	from
8 + n·8	U4	validFr	omTow	-	sec	GPS time of week the key is valid f	rom
End of repeat	ed group (n	umKeys <b>t</b>	imes)				
Start of repea	ted group (	N times)					
4+ numKeys·8+ n	U1	key		-	-	Key(s) payload. This is a concated raw bytes. The number of keys is of field. Each key length is defined in field.	defined in 'numKeys'
End of repeat	ed group (N	times)					

# 3.18 UBX-SEC (0x27)

The messages in the UBX-SEC class are used for security features of the receiver.

#### 3.18.1 UBX-SEC-SIG (0x27 0x09)

#### 3.18.1.1 Signal security information

Message	UBX-SEC	UBX-SEC-SIG												
	Signal security information													
Туре	Periodic/polled													
Comment	Information related to the security, i.e. availability and integrity, of the signals.													
Message	Header	Class	ID	Length (	(Bytes)	Payload	Checksum							
structure	0xb5 0x6	2 0x27	0x09	4 + jaml	NumCentFreqs·4	see below	CK_A CK_B							
Payload descr	ription:													
Byte offset	Type	Name		Sca	le Unit	Description								
0	U1	version	l	-	-	Message version (0x02 for this ver	rsion)							
1	X1	sigSecFlags		-	-	Signal security flags, providing high-level jamming ar spoofing detector information								
bit 0	U <sub>:1</sub>	jamDetE	Enabled	l -	-	Flag indicates whether jamming d	etection is enabled							
bits 21	U <sub>:2</sub>	jamStat	:e	_	-	Jamming state								



					0: Unknown
					1: No jamming indicated
					2: Warning; jamming indicated
					0: Unknown, denotes that the currently available information is not sufficient to judge whether the receiver is jammed or not. This may occur at receiver start up (or more generally when the receiver is in a mode, where jamming detection is hindered) or when the jamming indicator is disabled. 1: No jamming indicated: the jamming indicator is enabled and does not sense any significant jamming. 2: Warning; jamming indicated: the jamming indicator is indicating jamming which has a significant impact on the signal tracking. (The list jamPerCentFreq can be checked to find out which frequency bands are jammed.)
bit 3	U <sub>:1</sub>	spfDetEnabled	-	-	Flag indicates whether spoofing detection is enabled
bits 64	U <sub>:3</sub>	spfState	-	-	Spoofing state
					0: Unknown
					1: No spoofing indicated
					2: Spoofing indicated
					3: Spoofing affirmed
2	U1	reserved0	-	-	Reserved
3	U1	jamNumCent Freqs	-	-	The number of center frequencies we provide jamming information for (subsequent messages)
Start of repea	ted grou	<b>p(</b> jamNumCentFreqs	times)		
4 + n·4	X4	jamStateCent Freq	-	-	Jamming state of signals sharing a given center frequency
					Note that jamming information is only provided for center frequencies related to at least one in-use signal, for which a sufficient amount of information is currently available to judge if it is affected by jamming.
bits 230	U:24	centFreq	-	-	Center frequency in [kHz], floored to the nearest kHz multiple
bit 24	U <sub>:1</sub>	jammed	-	-	Flag indicates whether signals on the given center frequency are considered jammed

### 3.18.2 UBX-SEC-SIGLOG (0x27 0x10)

#### 3.18.2.1 Signal security log

Message	UBX-SEC-SIGLOG								
	Signal security log								
Туре	Periodic/polled								
Comment	This message provides a log of past signal security related events, that is, events related to jamming and spoofing. Each event is a combination of a detection type and a event type, where the event type 'indication started' and 'indication stopped' and also the event type 'indication triggered' and 'indication timed-out' form a pair. A maximum of 16 events are logged; after the log is filled, recent events take precedence over past events in the log. Power cycles and restarts of the receiver reset the log, deleting its content.								
	Note: It is advised not to restart the receiver while it's indicating spoofing.								



Message	Header	Class	ID	Length (Byte	s)	Payload	Checksum
structure	0xb5 0x62	0x27	27 0x10 8 + numEvents·8		nts·8	see below	CK_A CK_B
Payload desc	ription:						
Byte offset	Туре	Name		Scale	Unit	Description	
0	U1	versior	1	-	-	Message version (0x01 for this vers	ion)
1	U1	numEver	nts	-	-	Number of events	
2	U1[6]	reserve	ed0	-	-	Reserved	
Start of repea	ated group (1	numEven	ts <b>time</b>	es)			
8 + n·8	U4	timeEla	ıpsed	-	S	Seconds elapsed since this event Special value 0xFFFFFFFF: more th	an 45 days
12 + n·8	U1 ,	detecti	onTyp	e -	-	Type of the spoofing or jamming de  output  ou	
13 + n·8	U1	eventTy	/pe	-	-	Type of the event:  • 0 = indication started  • 1 = indication stopped  • 2 = indication triggered  • 3 = indication timed-out  Note: Single epoch events, caused Is due to switching from the real to the vice versa are handled as time-out e that the time-out event is reported off period which is not related to in the signal. The other detection to start' and 'stop' event types.	e spoofing signal o vents. This mean after a certain coo any observation
14 + n·8	U1[2]	reserve	14		_	Reserved	

### 3.18.3 UBX-SEC-UNIQID (0x27 0x03)

#### 3.18.3.1 Unique chip ID

Message	UBX-SEC	UBX-SEC-UNIQID												
	Unique cl	hip ID												
Туре	Output													
Comment	This mes	This message is used to retrieve a unique chip identifier (40 bits, 5 bytes).												
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum							
structure	0xb5 0x6	2 0x27	0x03	9		see below	CK_A CK_B							
Payload desc	cription:													
Byte offset	Type	Name		Scale	Unit	Description								
0	U1	version		-	-	Message version (0x01 for this v	version)							
1	U1[3]	reserved0		-	-	Reserved								
4	U1[5]	uniqueI	d	-	-	Unique chip ID								



# 3.19 UBX-TIM (0x0d)

The messages in the UBX-TIM class are used to output timing information from the receiver, such as time pulse and time mark measurements.

### 3.19.1 UBX-TIM-TM2 (0x0d 0x03)

#### 3.19.1.1 Time mark data

Message	UBX-T	IM-TM	2											
	Time n	Time mark data												
Туре	Periodi	c/polled	d											
Comment	This message contains information for high precision time stamping / pulse counting.  The delay figures and timebase given in CFG-TP configuration items are also applied to the time result in this message.													
Message	Headei	- (	Class	ID	Leng	gth (Byte.	s)	Payload	Checksum					
structure	0xb5 0	x62 (	0x0d	0x03	28			see below	CK_A CK_B					
Payload des	scription:													
Byte offset	Type	Nan	ne			Scale	Unit	Description						
0	U1	ch				-	-	Channel (i.e. EXTINT) upon which the measured	ne pulse was					
1	X1	fla	ıgs			-	-	Bitmask						
bit	t 0 U:1	mod	le			-	-	• 0=single						
								• 1=running						
bit	t 1 U <sub>:1</sub>	run	n			-	_	0=armed						
								• 1=stopped						
bit	t <sub>2</sub> U <sub>:1</sub>	U <sub>:1</sub> newFallingEdge				-	-	New falling edge detected						
bits 4	 з U <sub>:2</sub>	tim	neBas	——— е		-	-	0=Time base is Receiver time						
5103 43								• 1=Time base is GNSS time (the syst	em according					
								to the configuration in CFG-TP confi	guration					
								items for tpldx=0)						
								2=Time base is UTC (the variant acc	ording to the					
								configuration in CFG-NAVSPG-* con items)	figuration					
bit	t 5 U:1	utc	2			-	-	0=UTC not available						
								• 1=UTC available						
bit	t 6 U <sub>:1</sub>	tim	ne			-	_	0=Time is not valid						
								1=Time is valid (Valid GNSS fix)						
bit	t 7 U:1	new	/Risi	ngEdge	e	-	-	New rising edge detected						
2	U2	cou	ınt			-	-	Rising edge counter						
4	U2	wnR	ξ.			-	-	Week number of last rising edge						
6	U2	wnF	,			-	-	Week number of last falling edge						
8	U4	tow	/MsR			-	ms	Tow of rising edge						
12	U4	tow	/SubM	sR		-	ns	Millisecond fraction of tow of ris	ing edge ir					
16	U4	tow					ms	Tow of falling edge						



20	U4	towSubMsF	-	ns	Millisecond fraction of tow of falling edge in nanoseconds
24	U4	accEst	-	ns	Accuracy estimate

## 3.19.2 UBX-TIM-TP (0x0d 0x01)

### 3.19.2.1 Time pulse time data

Messa	age	UBX-TIM-TP Time pulse time data										
Туре		Periodic/p	olled									
Comm	ent		nded con	figurati	on when	using this m	ning of the next pulse at the TIMEPULSEO output. The ssage is to set both the measurement rate (CFG-RATE) and					
Message structure		Header	Class	ID	Length	(Bytes)	Payload Checksum					
		0xb5 0x62	2 0x0d	0x01	16		see below CK_A CK_B					
Payloa	d descr	iption:										
Byte offset		Type	Name		Sca	ale Unit	Description					
0		U4 towMS			_	ms	Time pulse time of week according to time base					
4		U4	towSubM	1S	2^	-32 ms	Submillisecond part of towMS					
8		14	qErr		-	ps	Quantization error of time pulse					
12		U2	week		_	wee	s Time pulse week number according to time base					
14		X1	flags		_	-	Flags					
	bit 0	U. <sub>1</sub>	:1 timeBas		ase -		0 = Time base is GNSS					
	bico	••					• 1 = Time base is UTC					
	bit 1	11.	utc				0 = UTC not available					
	DILI	9:1	ucc				1 = UTC available					
							(T)RAIM information					
	bits 32	U <sub>:2</sub>	raim		-	-	0 = Information not available					
							1 = Not active					
							• 2 = Active					
	bit 4	U.1	qErrInv	, a l i d			0 = Quantization error valid					
	DIC 4	1	9011111	raiia			1 = Quantization error invalid					
	bit 5			1 1			0 = Next TP is locked to GNSS					
	bit 5	O:1	TpNotLo	скеа	_	_	1 = Next TP is locked to 0N33     1 = Next TP is based on local time and not locked					
							to GNSS - week/tow may be invalid					
15		X1	refInfo	)	_	-	Time reference information					
	bits 30	U:4	timeRef		-	-	GNSS reference information. Only valid if time base is GNSS (timeBase=0).					
							• 0 = GPS					
							• 1 = GLONASS					
							• 2 = BeiDou					
							• 3 = Galileo					
							• 4 = NavIC					
							• 15 = Unknown					



bits 7...4 U:4 utcStandard -

UTC standard identifier. Only valid if time base is UTC (timeBase=1).

- 0 = Information not available
- 1 = Communications Research Laboratory (CRL), Tokyo, Japan
- 2 = National Institute of Standards and Technology (NIST)
- 3 = U.S. Naval Observatory (USNO)
- 4 = International Bureau of Weights and Measures (BIPM)
- 5 = European laboratories
- 6 = Former Soviet Union (SU)
- 7 = National Time Service Center (NTSC), China
- 8 = National Physics Laboratory India (NPLI)
- 15 = Unknown

#### 3.19.3 UBX-TIM-VRFY (0x0d 0x06)

#### 3.19.3.1 Sourced time verification

OBY-III	/I-VRF	Υ									
Sourced time verification											
Periodic,	/polled										
This message contains verification information about previous time received via assistance data or from RTC											
Header	Class		ID	Length (Bytes)		es)	Payload	Checksum			
0xb5 0x6	62 O	x0d	0x06	20			see below	CK_A CK_B			
ription:											
Туре	Nam	e		S	cale	Unit	Description				
14	itow			-		ms	integer millisecond tow received by source				
14	frac	frac				ns	sub-millisecond part of tow				
14	deltaMs			-		ms	integer milliseconds of delta time (current time minu sourced time)				
14	delt	aNs	5	-		ns	Sub-millisecond part of delta time	e			
U2	wno			-		week	Week number				
X1	flag	gs		-		-	Flags				
U:3	src			_		-	Aiding time source				
							• 0 = no time aiding done				
							• 2 = source was RTC				
							• 3 = source was assistance da	ta			
U1	rese	erve	ed0	-		-	Reserved				
	Sourced Periodic, This mes Header 0xb5 0xt ription: Type 14 14 14 U2 X1 U:3	Sourced time of Periodic/polled This message of Header Computer Stription:  Type Name Stription:  It is stription:  It i	Sourced time verify Periodic/polled This message contact Header Class Oxb5 0x62 Ox0d  Tription: Type Name I4 itow I4 frac I4 deltaMs I4 deltaMs U2 wno X1 flags U:3 src	Sourced time verification Periodic/polled This message contains ver Header Class ID Oxb5 0x62 0x0d 0x06  Type Name I4 itow I4 frac I4 deltaMs  U2 wno X1 flags OU:3 src	Sourced time verification	Sourced time verification	Periodic/polled   This message contains verification information aboom   Header   Class   ID   Length (Bytes)	Periodic/polled  This message contains verification information about previous time received via assistant Header Class ID Length (Bytes) Payload  0xb5 0x62 0x0d 0x06 20 see below  Tription:  Type Name Scale Unit Description  14 itow - ms integer millisecond tow received to sub-millisecond part of tow  14 deltaMs - ms integer milliseconds of delta time sourced time)  14 deltaNs - ms Sub-millisecond part of delta time sourced time)  15 unit flags - Flags  16 unit Description  17 per Mame Scale Unit Description  18 integer millisecond part of tow  19 deltaMs - ms integer millisecond part of delta time sourced time)  19 deltaNs - ms Sub-millisecond part of delta time sourced time)  10 unit Description  11 deltaMs - ms integer millisecond part of delta time sourced time)  12 wno - week Week number  13 flags - Flags  14 diang time source  15 o = no time aiding done  16 o = no time aiding done  17 o = source was assistance date of the source of t			

# 3.20 UBX-UPD (0x09)

The messages in the UBX-UPD class are used to download a firmware to the receiver and to update the firmware on the flash.

#### 3.20.1 UBX-UPD-SOS (0x09 0x14)



#### 3.20.1.1 Poll backup restore status

Message	UBX-UPD-SOS										
	Poll backup restore status										
Туре	Poll request										
Comment	Sending this (empty) message to the receiver results in the receiver returning a <i>System restored from backup</i> message as defined below.										
	message as	define	d below		•	,					
Message	message as	class		. Length (Bytes)	Payload	Checksum					
Message structure	<b>J</b>			Length (Bytes)	Payload see below	Checksum CK_A CK_B					

### 3.20.1.2 Create backup in flash

Message	UBX-UPD	-sos										
	Create backup in flash											
Туре	Comman	d										
Comment	flash file s not prese	system. T nt; the ho nded to is	he feat st can sue a G	ure is designe issue the save	ed in order e on shutd	to emulate the presence of own command before switc	d memory (BBR) in a file in the the backup battery even if it is thing off the device supply. It is order to keep the BBR memory					
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x09	0x14	4		see belo	W CK_A CK_B					
Payload desc	cription:											
Byte offset	Type Name		Scale Unit		Description							
0	U1	cmd		-	-	Command (must be 0)						
1	U1[3]	reserve	ed0	-	-	Reserved						

#### 3.20.1.3 Clear backup in flash

Message	UBX-UPD	-sos									
	Clear backup in flash										
Туре	Command	d									
Comment	clear oper a reset. A	ation is is Iternative	sued at ly the h	fter the host h	as receive the startu	he backup file present in flash. d the notification that the mem p string <i>Restored data saved on</i>	ory has been restored after				
Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum				
structure	0xb5 0x6	2 0x09	0x14	4		see below	CK_A CK_B				
Payload desc	cription:										
Byte offset	Туре	Name		Scale	Unit	Description					
0	U1	cmd		-	-	Command (must be 1)					
1	U1[3]	reserve	d0	-	-	Reserved					

#### 3.20.1.4 Backup creation acknowledge

Message	UBX-UPD-SOS
	Backup creation acknowledge
Туре	Output
Comment	The message is sent from the device as confirmation of creation of a backup file in flash. The host can safely shut down the device after having received this message.



Message	Header	Class	ID	Length (Byte	es)	Payload	Checksum CK_A CK_B
structure	0xb5 0x6	2 0x09	0x14	8		see below	
Payload desc	ription:						
Byte offset	Type	Name		Scale	Unit	Description	
0	U1	cmd		-	-	Command (must be 2)	
1	U1[3]	reserve	d0	-	-	Reserved	
4	U1	respons	е	-	-	<ul><li>0 = Not acknowledged</li><li>1 = Acknowledged</li></ul>	
5	U1[3]	reserve	d1	-	-	Reserved	

### 3.20.1.5 System restored from backup

Message	UBX-UPD-SOS System restored from backup											
Туре	Output											
Comment	flash file	The message is sent from the device to notify the host the BBR has been restored from a backup file in the flash file system. The host should clear the backup file after receiving this message. If the UBX-UPD-SOS message is polled, this message is resent.										
Message	Header	Class	ID	Length (Byt	es)	Payload	Checksum					
structure	0xb5 0x6	2 0x09	0x14	8		see below	CK_A CK_B					
Payload desc	cription:											
Byte offset	Туре	Name		Scale	Unit	Description						
0	U1	cmd		-	-	Command (must be 3)						
1	U1[3]	reserve	:d0	-	-	Reserved						
4	U1	respons	е	-	-	<ul> <li>0 = Unknown</li> <li>1 = Failed restoring from backt</li> <li>2 = Restored from backup</li> <li>3 = Not restored (no backup)</li> </ul>	пÞ					
5	U1[3]	reserve	:d1	-	-	Reserved						



# **4 RTCM protocol**

### 4.1 RTCM introduction

The RTCM (Radio Technical Commission for Maritime Services) protocols are used to supply the GNSS receiver with real-time differential correction data. The RTCM protocol specifications are available from http://www.rtcm.org.

The RTCM 3.x support is implemented according to RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3.

## 4.2 RTCM 3.x configuration

The configuration of RTCM 3.x input or RTCM 3.x output (if available) is further detailed in the integration manual for typical applications.

The RTCM 3.x protocol can be disabled/enabled on communication interfaces using the Configuration interface, for example configuration item CFG-UART1INPROT-RTCM3X.

### 4.3 RTCM messages overview

Class/ID	Description (Type)
essages	
0xf5 0x01	Message type 1001
	<ul> <li>L1-only GPS RTK observables (Input)</li> </ul>
0xf5 0x02	Message type 1002
	Extended L1-only GPS RTK observables (Input)
0xf5 0x03	Message type 1003
	L1/L2 GPS RTK observables (Input)
0xf5 0x04	Message type 1004
	Extended L1/L2 GPS RTK observables (Input)
0xf5 0x05	Message type 1005
	Stationary RTK reference station ARP (Input)
0xf5 0x06	Message type 1006
	Stationary RTK reference station ARP with antenna height (Input)
0xf5 0x07	Message type 1007
	Antenna descriptor (Input)
0xf5 0x09	Message type 1009
	L1-only GLONASS RTK observables (Input)
0xf5 0x0a	Message type 1010  Extended L1-Only GLONASS RTK observables (Input)
0.550.4	• • • • • • • • • • • • • • • • • • • •
Oxf5 Oxa1	Message type 1011  L1&L2 GLONASS RTK observables (Input)
0.550.0	• • • • • • • • • • • • • • • • • • • •
UXT5 UXa2	<ul><li>Message type 1012</li><li>Extended L1&amp;L2 GLONASS RTK observables (Input)</li></ul>
OvfE Ov21	
UXT5 UX2 I	Message type 1033  Receiver and antenna descriptors (Input)
0vf5 0v40	Message type 1074
0x15 0x4a	GPS MSM4 (Input)
0vf5 0v4h	Message type 1075
0315 0340	GPS MSM5 (Input)
	0xf5 0x01  0xf5 0x02  0xf5 0x03  0xf5 0x04



Message	Class/ID	Description (Type)
RTCM-3X-TYPE1077	0xf5 0x4d	Message type 1077  • GPS MSM7 (Input)
RTCM-3X-TYPE1084	0xf5 0x54	Message type 1084 • GLONASS MSM4 (Input)
RTCM-3X-TYPE1085	0xf5 0x55	Message type 1085  GLONASS MSM5 (Input)
RTCM-3X-TYPE1087	0xf5 0x57	Message type 1087 • GLONASS MSM7 (Input)
RTCM-3X-TYPE1094	0xf5 0x5e	Message type 1094  • Galileo MSM4 (Input)
RTCM-3X-TYPE1095	0xf5 0x5f	Message type 1095  Galileo MSM5 (Input)
RTCM-3X-TYPE1097	0xf5 0x61	Message type 1097  Galileo MSM7 (Input)
RTCM-3X-TYPE1124	0xf5 0x7c	Message type 1124  • BeiDou MSM4 (Input)
RTCM-3X-TYPE1125	0xf5 0x7d	Message type 1125  BeiDou MSM5 (Input)
RTCM-3X-TYPE1127	0xf5 0x7f	Message type 1127  BeiDou MSM7 (Input)
RTCM-3X-TYPE1230	0xf5 0xe6	Message type 1230  GLONASS L1 and L2 code-phase biases (Input)

# 4.4 RTCM 3.4 messages

For details see RTCM protocol and the RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 available from http://www.rtcm.org.

### 4.4.1 Message type 1001

### 4.4.1.1 L1-only GPS RTK observables

Message	RTCM-	RTCM-3X-TYPE1001									
	L1-only GPS RTK observables										
Туре	Input										
Comment	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellit Systems) Service, Version 3 for a detailed message specification.										
Information	Class/IE	D: 0xf5 0x01, Messa	ge Type: 1001	(0x3e9), <i>I</i>	Message Size: 6 + nData						
Payload desci	ription:										
Byte offset	Type	Name	Scale	Unit	Description						
0	X1	rtcmByte0	-	-	RTCM frame byte 0						
bits 70	U:8	preamble	-	-	Preamble (0xd3)						
1	X1	rtcmByte1	-	-	RTCM frame byte 1						
bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)						
bits 72	U:6	res1	-	-	Reserved, all zero						
2	X1	rtcmByte2	-	-	RTCM frame byte 2						
bits 70	U:8	nData	-	-	Payload length (8 LSB)						



Start of repeated group (nD	ata <b>times)</b>	
-----------------------------	-------------------	--

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repea	ated group	(nData <b>times)</b>			
3 + nData	U1[3]	crc	-	-	Checksum

# 4.4.2 Message type 1002

### 4.4.2.1 Extended L1-only GPS RTK observables

Message		RTCM-	RTCM-3X-TYPE1002								
		Extended L1-only GPS RTK observables									
Туре		Input									
Commen	nt	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satelli Systems) Service, Version 3 for a detailed message specification.									
Informat	ion	Class/IE	o: 0xf5 0x02, <i>Messa</i>	ge Type: 1002	2 (0x3ea), <i>I</i>	Message Size: 6 + nData					
Payload	descr	iption:									
Byte offs	et	Туре	Name	Scale	Unit	Description					
0		X1	rtcmByte0	-	-	RTCM frame byte 0					
bit	s 70	U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)					
1		X1	rtcmByte1	-	-	RTCM frame byte 1					
bit	s 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)					
bit	s 72	U <sub>:6</sub>	res1	-	-	Reserved, all zero					
2		X1	rtcmByte2	-	-	RTCM frame byte 2					
bit	s 70	U:8	nData	-	-	Payload length (8 LSB)					
Start of i	repea	ted grou	p (nData times)								
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.					
End of re	epeate	ed group	(nData times)								
3 + nDat	а	U1[3]	crc	-	-	Checksum					

# 4.4.3 Message type 1003

### 4.4.3.1 L1/L2 GPS RTK observables

Message	RTCM-	RTCM-3X-TYPE1003								
	L1/L2 GPS RTK observables									
Туре	Input									
Comment	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.									
Information	Class/IL	D: 0xf5 0x03, <i>Messa</i> g	ge Type: 1003	3 (0x3eb), <i>l</i>	Message Size: 6 + nData					
Payload desci	ription:									
Byte offset	Type	Name	Scale	Unit	Description					
0	X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 70	U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)					



1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start	of repea	ted grou	ıp (nData times)			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End o	of repeate	ed group	o (nData <b>times)</b>			
3 + n	Data	U1[3]	crc	-	-	Checksum

### 4.4.4 Message type 1004

### 4.4.4.1 Extended L1/L2 GPS RTK observables

Message		RTCM-3X-TYPE1004								
		Extended L1/L2 GPS RTK observables								
Туре	ı	Input								
Comi	ment	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Sate Systems) Service, Version 3 for a detailed message specification.								
Infori	mation	Class/IE	o: 0xf5 0x04, <i>Messa</i>	ge Type: 1004	1 (0x3ec), A	Message Size: 6 + nData				
Paylo	oad descr	iption:								
Byte	offset	Туре	Name	Scale	Unit	Description				
0		X1	rtcmByte0	-	-	RTCM frame byte 0				
	bits 70	U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)				
1		X1	rtcmByte1	-	-	RTCM frame byte 1				
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
	bits 72	U <sub>:6</sub>	res1	-	-	Reserved, all zero				
2		X1	rtcmByte2	-	-	RTCM frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start	of repea	ted grou	p (nData times)							
3 + n	l	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End o	of repeate	ed group	(nData <b>times</b> )							
3 + n	Data	U1[3]	crc	-	-	Checksum				

# 4.4.5 Message type 1005

### 4.4.5.1 Stationary RTK reference station ARP

Message	RTCM-3X-TYPE1005
	Stationary RTK reference station ARP
Туре	Input



Comment		See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.								
Information	Class/IE	Class/ID: 0xf5 0x05, Message Type: 1005 (0x3ed), Message Size: 6 + nData								
Payload des	scription:									
Byte offset	Type	Name	Scale	Unit	Description					
0	X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 7.	0 U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)					
1	X1	rtcmByte1	-	-	RTCM frame byte 1					
bits 1.	0 U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)					
bits 7.	2 U <sub>:6</sub>	res1	-	-	Reserved, all zero					
2	X1	rtcmByte2	-	-	RTCM frame byte 2					
bits 7.	0 U <sub>:8</sub>	nData	-	-	Payload length (8 LSB)					
Start of rep	eated grou	p (nData times)								
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.					
End of repe	ated group	(nData <b>times</b> )								
3 + nData	U1[3]	crc	-	-	Checksum					

# **4.4.6 Message type 1006**

### 4.4.6.1 Stationary RTK reference station ARP with antenna height

Message	R	RTCM-3X-TYPE1006								
	S	Stationary RTK reference station ARP with antenna height								
Туре	In	Input								
Comment			CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.				
Informatio	n Cl	lass/ID	o: 0xf5 0x06, <i>Messa</i>	ge Type: 1006	6 (0x3ee), <i>N</i>	Message Size: 6 + nData				
Payload de	script	tion:								
Byte offset	. <i>T</i> y	уре	Name	Scale	Unit	Description				
0	X	1	rtcmByte0	-	-	RTCM frame byte 0				
bits 7	o U	J <sub>:8</sub>	preamble	-	-	Preamble (0xd3)				
1	X	1	rtcmByte1	-	-	RTCM frame byte 1				
bits 1	o U	J <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
bits 7	2 U	J <sub>:6</sub>	res1	-	-	Reserved, all zero				
2	X	1	rtcmByte2	-	-	RTCM frame byte 2				
bits 7	o U	J <sub>:8</sub>	nData	-	-	Payload length (8 LSB)				
Start of rep	peated	d grou	p (nData times)							
3 + n	U	J1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End of repe	eated	group	(nData times)							



3+nData U1[3] <sub>CTC</sub> - - Checksum

### 4.4.7 Message type 1007

### 4.4.7.1 Antenna descriptor

Mess	age	RTCM-	3X-TYPE1007							
		Antenn	a descriptor							
Туре		Input								
Comn	nent	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation S Systems) Service, Version 3 for a detailed message specification.								
Inforn	nation	Class/ID	o: 0xf5 0x07, <i>Messa</i>	ge Type: 1007	' (0x3ef), <i>N</i>	lessage Size: 6 + nData				
Paylo	ad descr	iption:								
Byte o	offset	Туре	Name	Scale	Unit	Description				
0		X1	rtcmByte0	-	-	RTCM frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0xd3)				
1		X1	rtcmByte1	-	-	RTCM frame byte 1				
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
	bits 72	U:6	res1	-	-	Reserved, all zero				
2		X1	rtcmByte2	-	-	RTCM frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start	of repea	ted grou	p (nData times)							
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End o	f repeate	ed group	(nData times)							
3 + n[	Data	U1[3]	crc	-	-	Checksum				

# 4.4.8 Message type 1009

### 4.4.8.1 L1-only GLONASS RTK observables

RTCM-	3X-TYPE1009			
L1-only	GLONASS RTK ob	servables		
Input				
				ndards for Differential GNSS (Global Navigation Satellite e specification.
Class/IE	D: 0xf5 0x09, Messa	ge Type: 1009	9 (0x3f1), M	Message Size: 6 + nData
iption:				
Туре	Name	Scale	Unit	Description
X1	rtcmByte0	-	-	RTCM frame byte 0
U:8	preamble	-	-	Preamble (0xd3)
X1	rtcmByte1	-	-	RTCM frame byte 1
U:2	nDataMSB	-	-	Payload length (2 MSB)
U:6	res1	-	-	Reserved, all zero
X1	rtcmByte2	-	-	RTCM frame byte 2
	L1-only Input See RT System Class/IL iption: Type X1 U:8 X1 U:2 U:6	Input  See RTCM Standard 1040 Systems) Service, Version  Class/ID: 0xf5 0x09, Message iption:  Type Name  X1 rtcmByte0  U:8 preamble  X1 rtcmByte1  U:2 nDataMSB  U:6 res1	L1-only GLONASS RTK observables           Input         See RTCM Standard 10403.4 Recommed Systems) Service, Version 3 for a detailed Class/ID: 0xf5 0x09, Message Type: 1008 input on:           Type         Name         Scale           X1         rtcmByte0         -           V:8         preamble         -           X1         rtcmByte1         -           U:2         nDataMSB         -           U:6         res1         -	L1-only GLONASS RTK observables



bits 7.	0 U:8	nData	-	-	Payload length (8 LSB)
Start of rep	eated grou	p (nData times,	)		
3+n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repe	ated group	(nData <b>times</b> )			
3 + nData	U1[3]	crc	-	-	Checksum

# 4.4.9 Message type 1010

### 4.4.9.1 Extended L1-Only GLONASS RTK observables

Message		RTCM-3X-TYPE1010									
		Extend	ed L1-Only GLONA	SS RTK obser	rvables						
Type Input											
Comment			See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellit Systems) Service, Version 3 for a detailed message specification.								
Informatio	n	Class/IE	o: 0xf5 0x0a, <i>Messa</i>	ge Type: 1010	) (0x3f2), N	Message Size: 6 + nData					
Payload de	scr	iption:									
Byte offset	-	Туре	Name	Scale	Unit	Description					
0		X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 7	0	U:8	preamble	-	-	Preamble (0xd3)					
1		X1	rtcmByte1	-	-	RTCM frame byte 1					
bits 1	0	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)					
bits 7	2	U <sub>:6</sub>	res1	-	-	Reserved, all zero					
2		X1	rtcmByte2	-	-	RTCM frame byte 2					
bits 7	0	U:8	nData	-	-	Payload length (8 LSB)					
Start of re	oea	ted grou	p (nData times)								
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.					
End of rep	eate	ed group	(nData <b>times</b> )								
3 + nData		U1[3]	crc	-	-	Checksum					

# 4.4.10 Message type 1011

#### 4.4.10.1 L1&L2 GLONASS RTK observables

Message	RTCM-	3X-TYPE1011						
	L1&L2 GLONASS RTK observables							
Туре	Input							
Comment		See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.						
Information	Class/II	D: 0xf5 0xa1, Messag	ge Type: 1011	1 (0x3f3), <i>N</i>	Message Size: 6 + nData			
Payload desc	cription:							
Byte offset	et Type Name Scale Unit Description							
0	X1	rtcmByte0	-	-	RTCM frame byte 0			



	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start o	of repea	ted grou	ıp (nData times)			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of	repeate	ed group	o (nData times)			
3 + nD	ata	U1[3]	crc	-	-	Checksum

### 4.4.11 Message type 1012

#### 4.4.11.1 Extended L1&L2 GLONASS RTK observables

Message		RTCM-	3X-TYPE1012			RTCM-3X-TYPE1012								
		Extend	ed L1&L2 GLONAS	S RTK observ	ables									
Туре		Input												
Comn	ment		CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.								
Inform	nation	Class/ID	o: 0xf5 0xa2, Messa	ge Type: 1012	2 (0x3f4), M	lessage Size: 6 + nData								
Paylo	ad descr	iption:												
Byte	offset	Type	Name	Scale	Unit	Description								
0		X1	rtcmByte0	-	-	RTCM frame byte 0								
	bits 70	U:8	preamble	-	-	Preamble (0xd3)								
1		X1	rtcmByte1	-	-	RTCM frame byte 1								
	bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)								
	bits 72	U:6	res1	-	-	Reserved, all zero								
2		X1	rtcmByte2	-	-	RTCM frame byte 2								
	bits 70	U:8	nData	-	-	Payload length (8 LSB)								
Start	of repea	ted grou	o (nData times)											
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.								
End o	f repeate	ed group	(nData times)											
3 + n[	Data	U1[3]	crc	-	-	Checksum								

# 4.4.12 Message type 1033



### 4.4.12.1 Receiver and antenna descriptors

Message		RTCM-3X-TYPE1033								
		Receive	er and antenna des	criptors						
Туре		Input								
Comr	ment		CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.				
Inforr	mation	Class/ID	o: 0xf5 0x21, <i>Messa</i>	ge Type: 1033	3 (0x409), <i>I</i>	Message Size: 6 + nData				
Paylo	ad descr	iption:								
Byte	offset	Type	Name	Scale	Unit	Description				
0		X1	rtcmByte0	-	-	RTCM frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0xd3)				
1		X1	rtcmByte1	-	-	RTCM frame byte 1				
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
	bits 72	U:6	res1	-	-	Reserved, all zero				
2		X1	rtcmByte2	-	-	RTCM frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start	of repeat	ted grou	p (nData times)							
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End c	of repeate	ed group	(nData times)							
3 + nl	Data	U1[3]	crc	-	-	Checksum				

# 4.4.13 Message type 1074

#### 4.4.13.1 GPS MSM4

Message	RTCM-	3X-TYPE1074							
	GPS MS	SM4							
Туре	Input								
Comment	Full GPS	S Pseudoranges an	d PhaseRange	s plus CNF	3				
	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.								
Information	Class/IE	o: 0xf5 0x4a, <i>Messa</i>	ge Type: 1074	(0x432), <i>I</i>	Message Size: 6 + nData				
Payload descri	ption:								
Byte offset	Туре	Name	Scale	Unit	Description				
0	X1	rtcmByte0	-	-	RTCM frame byte 0				
bits 70	U:8	preamble	-	-	Preamble (0xd3)				
1	X1	rtcmByte1	-	-	RTCM frame byte 1				
bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)				
bits 72	U:6	res1	-	-	Reserved, all zero				
2	X1	rtcmByte2	-	-	RTCM frame byte 2				
bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start of repeat	ed grou	p (nData times)							



3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repea	nted group	(nData <b>tim</b> e	es)		
3 + nData	U1[3]	crc	-	-	Checksum

# 4.4.14 Message type 1075

#### 4.4.14.1 GPS MSM5

Mess	sage	RTCM-3X-TYPE1075								
		GPS MS	SM5							
Туре		Input	Input							
Comi	ment	Full GPS	S Pseudoranges, Ph	aseRanges, P	haseRang	eRate and CNR				
			CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.				
Infori	mation	Class/IE	o: 0xf5 0x4b, Messag	ge Type: 1075	(0x433), <i>I</i>	Message Size: 6 + nData				
Paylo	ad descr	iption:								
Byte	offset	Type	Name	Scale	Unit	Description				
0		X1	rtcmByte0	-	-	RTCM frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0xd3)				
1		X1	rtcmByte1	-	-	RTCM frame byte 1				
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
	bits 72	U <sub>:6</sub>	res1	-	-	Reserved, all zero				
2		X1	rtcmByte2	-	-	RTCM frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start	of repea	ted grou	p (nData times)							
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End c	of repeate	ed group	(nData <b>times</b> )							
3 + n	Data	U1[3]	crc	-	-	Checksum				

# 4.4.15 Message type 1077

### 4.4.15.1 GPS MSM7

Message	RTCM-	-3X-TYPE1077						
	GPS MSM7							
Туре	Input							
Comment	Full GF	S Pseudoranges, Ph	aseRanges, P	haseRang	eRate and CNR (high resolution)			
	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.							
Information	Class/li	D: 0xf5 0x4d, Messag	ge Type: 1077	7 (0x435), <i>l</i>	Message Size: 6 + nData			
Payload desc	cription:							
Byte offset	Type	Name	Scale	Unit	Description			
0	X1 rtcmByte0 RTCM frame byte 0							



bits 7ı	<sub>0</sub> U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)
1	X1	rtcmByte1	-	-	RTCM frame byte 1
bits 1	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
bits 7:	U:6	res1	-	-	Reserved, all zero
2	X1	rtcmByte2	-	-	RTCM frame byte 2
bits 7(	U:8	nData	-	-	Payload length (8 LSB)
Start of repe	ated grou	p (nData times)			
3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repea	ted group	(nData <b>times)</b>			
3 + nData	U1[3]	crc	-	-	Checksum

### 4.4.16 Message type 1084

#### 4.4.16.1 GLONASS MSM4

Mes	sage	RTCM-3X-TYPE1084								
		GLONA	SS MSM4							
Туре	•	Input								
Com	ment	Full GL	ONASS Pseudorang	es and Phase	Ranges plu	us CNR				
			CM Standard 1040 ns) Service, Version 3			ndards for Differential GNSS (Global Navigation Satellite e specification.				
Infor	mation	Class/IE	D: 0xf5 0x54, Messag	ge Type: 1084	1 (0x43c), <i>l</i>	Message Size: 6 + nData				
Paylo	oad descr	iption:								
Byte	offset	Туре	Name	Scale	Unit	Description				
0		X1	rtcmByte0	-	-	RTCM frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0xd3)				
1		X1	rtcmByte1	-	-	RTCM frame byte 1				
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)				
	bits 72	U:6	res1	-	-	Reserved, all zero				
2		X1	rtcmByte2	-	-	RTCM frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (8 LSB)				
Start	of repeat	ted grou	p (nData times)							
3 + n	l	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.				
End o	of repeate	ed group	(nData <b>times</b> )							
3 + n	Data	U1[3]	crc	-	-	Checksum				

# 4.4.17 Message type 1085



#### 4.4.17.1 GLONASS MSM5

Mess	age	RTCM-	3X-TYPE1085			
		GLONA	SS MSM5			
Туре		Input				
Comm	nent	Full GLC	DNASS Pseudoranç	ges, PhaseRan	ges, Phase	eRangeRate and CNR
			CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.
Inform	nation	Class/ID	o: 0xf5 0x55, <i>Messa</i>	ge Type: 1085	5 (0x43d), <i>l</i>	Message Size: 6 + nData
Paylo	ad descr	iption:				
Byte c	offset	Туре	Name	Scale	Unit	Description
0		X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start o	of repeat	ted grou	o (nData <b>times)</b>			
3+n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of	f repeate	ed group	(nData times)			
3 + nE	ata	U1[3]	crc	-	-	Checksum

# 4.4.18 Message type 1087

### 4.4.18.1 GLONASS MSM7

Message	RTCM-	-3X-TYPE1087								
	GLONA	ASS MSM7								
Туре	Input									
Comment	Full GL	ONASS Pseudorang	jes, PhaseRan	iges, Phase	eRangeRate and CNR (high resolution)					
		See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.								
Information	Class/II	D: 0xf5 0x57, <i>Messa</i>	ge Type: 1087	7 (0x43f), A	Message Size: 6 + nData					
Payload desci	ription:									
Byte offset	Туре	Name	Scale	Unit	Description					
0	X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 70	U:8	preamble	-	-	Preamble (0xd3)					
1	X1	rtcmByte1	-	-	RTCM frame byte 1					
bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)					
bits 72	U <sub>:6</sub>	res1	-	-	Reserved, all zero					
2	X1	rtcmByte2	-	-	RTCM frame byte 2					
bits 70	U:8	nData	-	-	Payload length (8 LSB)					



Start of repeated group (nD	ata <b>times)</b>	
-----------------------------	-------------------	--

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repea	ated group	(nData times)			
3 + nData	U1[3]	crc	-	-	Checksum

# 4.4.19 Message type 1094

### 4.4.19.1 Galileo MSM4

Mess	sage	RTCM-	3X-TYPE1094			
		Galileo	MSM4			
Туре		Input				
Comr	ment	Full Gal	ileo Pseudoranges	and PhaseRan	nges plus C	NR
			CM Standard 1040 ns) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.
Inforr	mation	Class/IE	o: 0xf5 0x5e, Messa	ge Type: 1094	l (0x446), <i>l</i>	Message Size: 6 + nData
Paylo	ad descr	iption:				
Byte	offset	Туре	Name	Scale	Unit	Description
0		X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start	of repea	ted grou	p (nData times)			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End c	of repeate	ed group	(nData <b>times</b> )			
3 + nl	Data	U1[3]	crc	-	-	Checksum

### 4.4.20 Message type 1095

#### 4.4.20.1 Galileo MSM5

Message	RTCM-	3X-TYPE1095								
	Galileo MSM5									
Туре	Input									
Comment	Full Ga	lileo Pseudorange	es, PhaseRanges	, PhaseRa	ngeRate and CNR					
	See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.									
Information	Class/II	D: 0xf5 0x5f, Mess	sage Type: 1095	(0x447), M	dessage Size: 6 + nData					
Payload desc	ription:									
Byte offset	set Type Name Scale Unit Description									



0		X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start o	of repea	ted group	o (nData <b>times</b> )			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of	f repeate	ed group	(nData <b>times)</b>			
3 + nE	Data	U1[3]	crc	-	-	Checksum

### 4.4.21 Message type 1097

### 4.4.21.1 Galileo MSM7

Mess	sage	RTCM-	3X-TYPE1097			
		Galileo	MSM7			
Туре		Input				
Comi	ment	Full Gal	ileo Pseudoranges,	PhaseRanges	, PhaseRa	ngeRate and CNR (high resolution)
			CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.
Infori	mation	Class/ID	o: 0xf5 0x61, <i>Messa</i>	ge Type: 1097	7 (0x449), <i>l</i>	Message Size: 6 + nData
Paylo	ad descr	iption:				
Byte	offset	Type	Name	Scale	Unit	Description
0		X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 70	U <sub>:8</sub>	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U <sub>:6</sub>	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U <sub>:8</sub>	nData	-	-	Payload length (8 LSB)
Start	of repea	ted grou <sub>l</sub>	o (nData <b>times</b> )			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End o	of repeate	ed group	(nData times)			
3 + n	Data	U1[3]	crc	-	-	Checksum

# 4.4.22 Message type 1124



### 4.4.22.1 BeiDou MSM4

Mess	age	RTCM-	3X-TYPE1124			
		BeiDou	MSM4			
Туре		Input				
Comn	nent	Full Bei	Dou Pseudoranges	and PhaseRar	nges plus (	CNR
			CM Standard 1040 s) Service, Version			ndards for Differential GNSS (Global Navigation Satellite e specification.
Inforn	nation	Class/ID	o: 0xf5 0x7c, <i>Messa</i> g	ge Type: 1124	l (0x464), <i>l</i>	Message Size: 6 + nData
Paylo	ad descr	iption:				
Byte o	offset	Туре	Name	Scale	Unit	Description
0		X1	rtcmByte0	-	-	RTCM frame byte 0
	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start	of repea	ted grou	p (nData times)			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End o	f repeate	ed group	(nData <b>times</b> )			
3 + n[	Data	U1[3]	crc	-	-	Checksum

# 4.4.23 Message type 1125

#### 4.4.23.1 BeiDou MSM5

Message	RTCM-	3X-TYPE1125								
	BeiDou MSM5									
Туре	Input									
Comment	Full Bei	iDou Pseudoranges,	PhaseRanges	s, PhaseRa	ngeRate and CNR					
		See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.								
Information	Class/IL	D: 0xf5 0x7d, <i>Messa</i>	ge Type: 1125	5 (0x465), <i>l</i>	Message Size: 6 + nData					
Payload desci	ription:									
Byte offset	Туре	Name	Scale	Unit	Description					
0	X1	rtcmByte0	-	-	RTCM frame byte 0					
bits 70	U:8	preamble	-	-	Preamble (0xd3)					
1	X1	rtcmByte1	-	-	RTCM frame byte 1					
bits 10	U:2	nDataMSB	-	-	Payload length (2 MSB)					
bits 72	U:6	res1	-	-	Reserved, all zero					
2	X1	rtcmByte2	-	-	RTCM frame byte 2					
bits 70	U:8	nData	-	-	Payload length (8 LSB)					



Start of repeated group (nData )	times)	
----------------------------------	--------	--

3 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End of repea	ated group	(nData times)			
3 + nData	U1[3]	crc	-	-	Checksum

# 4.4.24 Message type 1127

### 4.4.24.1 BeiDou MSM7

Message		RTCM-3X-TYPE1127									
		BeiDou MSM7									
Туре		Input									
Comn	nent	Full Bei	Dou pseudoranges,	PhaseRanges	s, PhaseRa	ngeRate and CNR (high resolution)					
			See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.								
Inform	nation	Class/IE	o: 0xf5 0x7f, Messag	e Type: 1127	(0x467), M	Message Size: 6 + nData					
Paylo	ad descr	iption:									
Byte	offset	Туре	Name	Scale	Unit	Description					
0		X1	rtcmByte0	-	-	RTCM frame byte 0					
	bits 70	U:8	preamble	-	-	Preamble (0xd3)					
1		X1	rtcmByte1	-	-	RTCM frame byte 1					
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)					
	bits 72	U:6	res1	-	-	Reserved, all zero					
2		X1	rtcmByte2	-	-	RTCM frame byte 2					
	bits 70	U:8	nData	-	-	Payload length (8 LSB)					
Start	of repea	ted grou	p (nData times)								
3+n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.					
End o	f repeate	ed group	(nData <b>times</b> )								
3 + n[	Data	U1[3]	crc	-	-	Checksum					

### 4.4.25 Message type 1230

### 4.4.25.1 GLONASS L1 and L2 code-phase biases

Message	RTCM-3X-TYPE1230 GLONASS L1 and L2 code-phase biases							
Туре	Input							
Comment		See RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3 for a detailed message specification.						
Information	Class/ID: 0xf5 0xe6, Message Type: 1230 (0x4ce), Message Size: 6 + nData							
Payload desc	cription:							
Byte offset	Туре	Name	Scale	Unit	Description			
0	X1	rtcmByte0	-	-	RTCM frame byte 0			



	bits 70	U:8	preamble	-	-	Preamble (0xd3)
1		X1	rtcmByte1	-	-	RTCM frame byte 1
	bits 10	U <sub>:2</sub>	nDataMSB	-	-	Payload length (2 MSB)
	bits 72	U:6	res1	-	-	Reserved, all zero
2		X1	rtcmByte2	-	-	RTCM frame byte 2
	bits 70	U:8	nData	-	-	Payload length (8 LSB)
Start	of repea	ted group	(nData times)			
3 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB and nData to form a 10-bit value.
End c	of repeate	ed group	(nData <b>times)</b>			
3 + n	Data	U1[3]	crc	-	-	Checksum



# **5 SPARTN protocol**

### 5.1 SPARTN introduction

The SPARTN (Secure Position Augmentation for Real-Time Navigation) protocol are used to supply the GNSS receiver with real-time correction data. The SPARTN protocol specifications are available in spartnformat.org.

The SPARTN 2.0 support is implemented according to Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022.

## 5.2 SPARTN configuration

The configuration of SPARTN input is further detailed in the integration manual for typical applications.

The SPARTN protocol can be disabled/enabled on communication interfaces using the Configuration interface, for example configuration item CFG-UART1INPROT-SPARTN.

# 5.3 SPARTN messages overview

Message	Class/ID	Description (Type)				
SPARTN-1X - SPARTN mes	ssages					
SPARTN-1X-OCB_GPS 0xf6 0x01		Message type 0, sub-type 0 GPS orbit, clock, bias (OCB) (Input)				
SPARTN-1X-OCB_GLO	0xf6 0x02	Message type 0, sub-type 1 GLONASS orbit, clock, bias (OCB) (Input)				
SPARTN-1X-OCB_GAL	0xf6 0x03	Message type 0, sub-type 2  Galileo orbit, clock, bias (OCB) (Input)				
SPARTN-1X-OCB_BDS	0xf6 0x04	Message type 0, sub-type 3  BeiDou orbit, clock, bias (OCB) (Input)				
SPARTN-1X-OCB_QZSS	0xf6 0x05	Message type 0, sub-type 4 • QZSS orbit, clock, bias (OCB) (Input)				
SPARTN-1X-HPAC_GPS	0xf6 0x0a	Message type 1, sub-type 0  GPS high-precision atmosphere correction (HPAC) (Input)				
SPARTN-1X-HPAC_GLO	0xf6 0x0b	Message type 1, sub-type 1 GLONASS high-precision atmosphere correction (HPAC) (Input)				
SPARTN-1X-HPAC_GAL	0xf6 0x0c	Message type 1, sub-type 2  Galileo high-precision atmosphere correction (HPAC) (Input)				
SPARTN-1X-HPAC_BDS	0xf6 0x0d	Message type 1, sub-type 3  BeiDou high-precision atmosphere correction (HPAC) (Input)				
SPARTN-1X-HPAC_QZSS	0xf6 0x0e	Message type 1, sub-type 4  QZSS high-precision atmosphere correction (HPAC) (Input)				
SPARTN-1X-GAD	0xf6 0x13	Message type 2, sub-type 0 Geographic area definition (GAD) (Input)				
SPARTN-1X-BPAC	0xf6 0x1c	Message type 3, sub-type 0  Basic-precision atmosphere correction (BPAC) (Input)				



# 5.4 SPARTN messages

For details see SPARTN protocol and the Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 available from https://www.spartnformat.org.

### 5.4.1 Message type 0, sub-type 0

### 5.4.1.1 GPS orbit, clock, bias (OCB)

Mess	age	SPART	N-1X-OCB_GPS							
		GPS orbit, clock, bias (OCB)								
Туре		Input								
Comment		This message carries the data for GPS satellite orbits, clocks, biases and other auxiliary information.  See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.								
Inforn	nation	Class/IE	D: 0xf6 0x01, Message	e <i>Type:</i> 0 (0x	:00), <i>Sub-t</i> y	/pe: 0 (0x0), Message Size: 5 + nData + crcType				
Paylo	ad descr	iption:								
Byte o	offset	Туре	Name	Scale	Unit	Description				
0		X1	spartnByte0	-	-	SPARTN frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0x73, 's')				
1		X1	spartnByte1	-	-	SPARTN frame byte 1				
ŀ	bit 0	U:1	nDataMSB	-	-	Payload length (MSB)				
	bits 71	U <sub>:7</sub>	msgType	-	-	Message type				
2		X1	spartnByte2	-	-	SPARTN frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (middle 8 bits)				
3		X1	spartnByte3	-	-	SPARTN frame byte 3				
	bits 30	U:4	frameCrc	-	-	Frame CRC				
	bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type				
	bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag				
	bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)				
Start	of repea	ted grou	p (nData <b>times)</b>							
4 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.				
End o	f repeate	ed group	(nData <b>times)</b>							
4 + n[	Data	U1	crc0	-		Message CRC 1st byte				
Start	of repea	ted grou	p (crcType times)							
5 + nE	Data + n	U1	crcN	-	-	Message CRC additional bytes				
End o	f repeate	ed group	(crcType times)							

### 5.4.2 Message type 0, sub-type 1



### 5.4.2.1 GLONASS orbit, clock, bias (OCB)

Message		SPARTN-1X-OCB_GLO								
		GLONASS orbit, clock, bias (OCB)								
Туре		Input								
Comm	nent	This me	essage carries the da	ta for GLON	ASS satell	ite orbits, clocks, biases and other auxiliary information.				
		See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.								
Inform	nation	Class/ID	o: 0xf6 0x02, Message	e <i>Type:</i> 0 (0x	00), <i>Sub-t</i> y	pe: 1 (0x1), Message Size: 5 + nData + crcType				
Payloa	ad descr	iption:								
Byte o	offset	Туре	Name	Scale	Unit	Description				
0		X1	spartnByte0	-	-	SPARTN frame byte 0				
	bits 70	U:8	preamble	-	-	Preamble (0x73, 's')				
1		X1	spartnByte1	-	-	SPARTN frame byte 1				
	bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)				
	bits 71	U:7	msgType	-	-	Message type				
2		X1	spartnByte2	-	-	SPARTN frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (middle 8 bits)				
3		X1	spartnByte3	-	-	SPARTN frame byte 3				
	bits 30	U:4	frameCrc	-	-	Frame CRC				
	bits 54	U:2	crcType	-	-	Message CRC type				
	bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag				
	bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)				
Start o	of repeat	ted grou	p (nData <b>times</b> )							
4 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.				
End of	f repeate	ed group	(nData <b>times)</b>							
4 + nD	ata	U1	crc0	-	-	Message CRC 1st byte				
Start o	of repeat	ted grou	p (crcType times)							
5 + nD	ata + n	U1	crcN	-	-	Message CRC additional bytes				
End of	f repeate	ed group	(crcType times)							

# 5.4.3 Message type 0, sub-type 2

### 5.4.3.1 Galileo orbit, clock, bias (OCB)

Message	SPARTN-1X-OCB_GAL						
	Galileo orbit, clock, bias (OCB)						
Туре	Input						
Comment	This message carries the data for Galileo satellite orbits, clocks, biases and other auxiliary information.						
	See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.						
Information	Class/ID: 0xf6 0x03, Message Type: 0 (0x00), Sub-type: 2 (0x2), Message Size: 5 + nData + crcType						



Payload descr	iption:				
Byte offset	Туре	Name	Scale	Unit	Description
0	X1	spartnByte0	-	-	SPARTN frame byte 0
bits 70	U:8	preamble	-	-	Preamble (0x73, 's')
1	X1	spartnByte1	-	-	SPARTN frame byte 1
bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)
bits 71	U <sub>:7</sub>	msgType	-	-	Message type
2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 70	U:8	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC
bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)
Start of repea	ted grou	ı <b>p (</b> nData <b>times)</b>			
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End of repeat	ed group	(nData <b>times</b> )			
4 + nData	U1	crc0	-	-	Message CRC 1st byte
Start of repea	ted grou	p (crcType times)			
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
End of repeat	ed group	(crcType times)			

# 5.4.4 Message type 0, sub-type 3

### 5.4.4.1 BeiDou orbit, clock, bias (OCB)

Message	SPART	N-1X-OCB_BDS								
	BeiDou orbit, clock, bias (OCB)									
Туре	Input									
Comment	This m	essage carries the da	nta for BeiDo	u satellite	orbits, clocks, biases and other auxiliary information.					
	See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Document, Version 2.0.2, February 2022 for a detailed message specification.									
Information Class/ID: 0xf6 0x04, Message Type: 0 (0x00), Sub-type: 3 (0x3), Mess					ype: 3 (0x3), Message Size: 5 + nData + crcType					
Payload descr	iption:									
Byte offset	Type	Name	Scale	Unit	Description					
0	X1	spartnByte0	-	-	SPARTN frame byte 0					
bits 70	U:8	preamble	-	-	Preamble (0x73, 's')					
1	X1	spartnByte1	-	-	SPARTN frame byte 1					
bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)					
bits 71	U:7	msgType	-	-	Message type					



2	X1	spartnByte2	-	-	SPARTN frame byte 2
bits 70	U <sub>:8</sub>	nData	-	-	Payload length (middle 8 bits)
3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC
bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)
Start of repeat	ated group	(nData <b>times)</b>			
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End of repeat	ted group (	(nData <b>times)</b>			
4 + nData	U1	crc0	-	-	Message CRC 1st byte
Start of repeat	ated group	(crcType times)			
5 + nData + r	U1	crcN	-	-	Message CRC additional bytes
End of repeat	ed aroup i	(crcType <b>times</b> )			

# 5.4.5 Message type 0, sub-type 4

### 5.4.5.1 QZSS orbit, clock, bias (OCB)

Message		SPARTN-1X-OCB_QZSS									
	C	QZSS orbit, clock, bias (OCB)									
Туре	lı	Input									
Comment	Т	This me	essage carries the da	ta for QZSS	satellite o	rbits, clocks, biases and other auxiliary information.					
	1	See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Versio 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.									
Informatio	1 C	Class/ID	o: 0xf6 0x05, Message	<i>Type:</i> 0 (0x	00), <i>Sub-t</i> y	pe: 4 (0x4), Message Size: 5 + nData + crcType					
Payload de	scrip	tion:									
Byte offset	7	Гуре	Name	Scale	Unit	Description					
0	×	<b>&lt;</b> 1	spartnByte0	-	-	SPARTN frame byte 0					
bits 7	و ل	J <sub>:8</sub>	preamble	-	-	Preamble (0x73, 's')					
1	×	<b>&lt;</b> 1	spartnByte1	-	-	SPARTN frame byte 1					
b	it 0 L	J <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)					
bits 7	1 L	J <sub>:7</sub>	msgType	-	-	Message type					
2	X	<b>&lt;</b> 1	spartnByte2	-	-	SPARTN frame byte 2					
bits 7	o L	J <sub>:8</sub>	nData	-	-	Payload length (middle 8 bits)					
3	X	<b>&lt;</b> 1	spartnByte3	-	-	SPARTN frame byte 3					
bits 3	o L	J <sub>:4</sub>	frameCrc	-	-	Frame CRC					
bits 5	4 L	J <sub>:2</sub>	сгсТуре	-	-	Message CRC type					
b	it 6	J <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag					
	_										



ŧ	bit 7 U:1	nDataLSB		Payload length (LSB)
Start of re	peated gro	up (nData times)		
4 + n	U1	data		Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End of rep	eated grou	o (nData times)		
4 + nData	U1	crc0		Message CRC 1st byte
Start of re	peated gro	up (crcType time	es)	
5 + nData	+ n U1	crcN		Message CRC additional bytes
End of rep	eated grou	o (crcType time:	s)	

### 5.4.6 Message type 1, sub-type 0

### 5.4.6.1 GPS high-precision atmosphere correction (HPAC)

Message		SPARTN-1X-HPAC_GPS GPS high-precision atmosphere correction (HPAC)								
Comm	ent			•	•	e data for GPS, specifically ionospheric and tropospheric data are transmitted in the same message.				
		1.8.0, J	January 2020 or Secu	re Position A	Augmenta	Navigation (SPARTN) Interface Control Document, Versior tion for Real-Time Navigation (SPARTN) Interface Contro iled message specification.				
Inform	ation	Class/IE	D: 0xf6 0x0a, Message	e <i>Type:</i> 1 (0x	01), <i>Sub-t</i> y	/pe: 0 (0x0), Message Size: 5 + nData + crcType				
Payloa	d descr	iption:								
Byte o	ffset	Туре	Name	Scale	Unit	Description				
0		X1	spartnByte0	-	-	SPARTN frame byte 0				
	bits 70	U <sub>:8</sub>	preamble	-	-	Preamble (0x73, 's')				
1		X1	spartnByte1	-	-	SPARTN frame byte 1				
	bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)				
	bits 71	U <sub>:7</sub>	msgType	-	-	Message type				
2		X1	spartnByte2	-	-	SPARTN frame byte 2				
	bits 70	U:8	nData	-	-	Payload length (middle 8 bits)				
3		X1	spartnByte3	-	-	SPARTN frame byte 3				
	bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC				
	bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type				
	bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag				
	bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)				
Start o	of repeat	ted grou	p (nData times)							
4 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.				
End of	repeate	ed group	(nData <b>times</b> )							
4 + nD	ata	U1	crc0	-	-	Message CRC 1st byte				



Start of repeated group (crcType times)

5 + nData + n U1	crcN	-	-	Message CRC additional bytes
End of repeated group	(crcType time	es)		

### 5.4.7 Message type 1, sub-type 1

### 5.4.7.1 GLONASS high-precision atmosphere correction (HPAC)

Message	SPART	SPARTN-1X-HPAC_GLO									
	GLONA	GLONASS high-precision atmosphere correction (HPAC)									
Туре	Input	Input									
Comment	tropos See Se 1.8.0, v	This message contains high-precision atmosphere data for GLONASS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message. See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.									
Information	Class/li	D: 0xf6 0x0b, Message	e <i>Type:</i> 1 (0x	(01), <i>Sub-t</i> y	/pe: 1 (0x1), Message Size: 5 + nData + crcType						
Payload des	cription:										
Byte offset	Type	Name	Scale	Unit	Description						
0	X1	spartnByte0	-	-	SPARTN frame byte 0						
bits 7	.0 U:8	preamble	-	-	Preamble (0x73, 's')						
1	X1	spartnByte1	-	-	SPARTN frame byte 1						
bit	<sub>:0</sub> U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)						
bits 7	.1 U <sub>:7</sub>	msgType	-	-	Message type						
2	X1	spartnByte2	-	-	SPARTN frame byte 2						
bits 7	.0 U:8	nData	-	-	Payload length (middle 8 bits)						
3	X1	spartnByte3	-	-	SPARTN frame byte 3						
bits 3	.0 U:4	frameCrc	-	-	Frame CRC						
bits 5	.4 U <sub>:2</sub>	crcType	-	-	Message CRC type						
bit	6 U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag						
bit	7 U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)						
Start of rep	eated grou	ıp (nData times)									
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.						
End of repe	ated group	o (nData <b>times)</b>									
4 + nData	U1	crc0	-	-	Message CRC 1st byte						
Start of rep	eated grou	ıp (crcType times)									
5 + nData +	n U1	crcN	-	-	Message CRC additional bytes						
End of repe	ated group	(crcType times)									

# 5.4.8 Message type 1, sub-type 2



### 5.4.8.1 Galileo high-precision atmosphere correction (HPAC)

Message		SPARTN-1X-HPAC_GAL									
		Galileo high-precision atmosphere correction (HPAC)									
Туре		Input									
Comment		This message contains high-precision atmosphere data for Galileo, specifically ionospheric and troposphere correction data. Both ionosphere and troposphere data are transmitted in the same message.  See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Versical 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.									
Informa	ation					pe: 2 (0x2), Message Size: 5 + nData + crcType					
Payload	d descr										
Byte of		Туре	Name	Scale	Unit	Description					
0		X1	spartnByte0	-	-	SPARTN frame byte 0					
t	bits 70	U:8	preamble	-	-	Preamble (0x73, 's')					
1		X1	spartnByte1	-	-	SPARTN frame byte 1					
	bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)					
b	bits 71	U <sub>:7</sub>	msgType	-	-	Message type					
2		X1	spartnByte2	-	-	SPARTN frame byte 2					
b	bits 70	U <sub>:8</sub>	nData	-	-	Payload length (middle 8 bits)					
3		X1	spartnByte3	-	-	SPARTN frame byte 3					
b	bits 30	U:4	frameCrc	-	-	Frame CRC					
t	bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type					
	bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag					
	bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)					
Start of	f repeat	ted grou	p (nData times)								
4 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.					
End of	repeate	ed group	(nData <b>times</b> )								
4 + nDa	ata	U1	crc0	-	-	Message CRC 1st byte					
Start of	f repea	ted grou	p (crcType times)								
5 + nDa	ata + n	U1	crcN	-	-	Message CRC additional bytes					
End of	repeate	ed group	(crcType <b>times</b> )								

### 5.4.9 Message type 1, sub-type 3

### 5.4.9.1 BeiDou high-precision atmosphere correction (HPAC)

Message	SPARTN-1X-HPAC_BDS					
	BeiDou high-precision atmosphere correction (HPAC)					
Туре	Input					
Comment	This message contains high-precision atmosphere data for BeiDou, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.					



See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.

Informatio	n Cla	Class/ID: 0xf6 0x0d, Message Type: 1 (0x01), Sub-type: 3 (0x3), Message Size: 5 + nData + crcType								
Payload de	scripti	ion:								
Byte offset	Ty	/pe	Name	Scale	Unit	Description				
0	X1	1	spartnByte0	-	-	SPARTN frame byte 0				
bits 7	0 U:8	8	preamble	-	-	Preamble (0x73, 's')				
1	X1	1	spartnByte1	-	-	SPARTN frame byte 1				
b	it 0 U:	1	nDataMSB	-	-	Payload length (MSB)				
bits 7	1 U:	7	msgType	-	-	Message type				
2	X1	1	spartnByte2	-	-	SPARTN frame byte 2				
bits 7	0 U:	8	nData	-	-	Payload length (middle 8 bits)				
3	X1	1	spartnByte3	-	-	SPARTN frame byte 3				
bits 3	0 U:	4	frameCrc	-	-	Frame CRC				
bits 5	4 U:	2	crcType	-	-	Message CRC type				
t	it 6 U:	1	eaf	-	-	Encryption and/or authentication flag				
t	it 7 U:	1	nDataLSB	-	-	Payload length (LSB)				
Start of rep	eated	group	(nData <b>times</b> )							
4 + n	U1	1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.				
End of rep	eated g	group	(nData <b>times)</b>							
4 + nData	U1	1	crc0	-	-	Message CRC 1st byte				
Start of rep	eated	group	(crcType times)							
5 + nData	+ n U1	1	crcN	-	-	Message CRC additional bytes				
End of rep	eated g	group	(crcType times)							

### 5.4.10 Message type 1, sub-type 4

### 5.4.10.1 QZSS high-precision atmosphere correction (HPAC)

Message	SPARTN-1X-HPAC_QZSS  QZSS high-precision atmosphere correction (HPAC)									
Туре	Input									
Comment	This message contains high-precision atmosphere data for QZSS, specifically ionospheric and tropospheric correction data. Both ionosphere and troposphere data are transmitted in the same message.									
	See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.									
Information	Class/II	D: 0xf6 0x0e, Message	<i>Type:</i> 1 (0x	01), <i>Sub-t</i> y	/pe: 4 (0x4), Message Size: 5 + nData + crcType					
Payload descr	iption:									
Byte offset	Туре	Name	Scale	Unit	Description					
0	X1	spartnByte0	-	-	SPARTN frame byte 0					
bits 70	U:8	preamble	-	-	Preamble (0x73, 's')					



1		X1	spartnByte1	-	-	SPARTN frame byte 1
	bit 0	U:1	nDataMSB	-	-	Payload length (MSB)
	bits 71	U:7	msgType	-	-	Message type
2		X1	spartnByte2	-	-	SPARTN frame byte 2
	bits 70	U:8	nData	-	-	Payload length (middle 8 bits)
3		X1	spartnByte3	-	-	SPARTN frame byte 3
	bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC
	bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type
	bit 6	U:1	eaf	-	-	Encryption and/or authentication flag
	bit 7	U:1	nDataLSB	-	-	Payload length (LSB)
Start	of repea	ted grou	ıp (nData times)			
4 + n		U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End o	f repeate	ed group	o (nData <b>times)</b>			
4 + n[	Data	U1	crc0	-	-	Message CRC 1st byte
Start	of repea	ted grou	ıp (crcType times)			
5 + n[	Data + n	U1	crcN	-	-	Message CRC additional bytes
End o	f repeate	ed group	o (crcType times)			

# 5.4.11 Message type 2, sub-type 0

### 5.4.11.1 Geographic area definition (GAD)

Message	SPARTN-1X-GAD Geographic area definition (GAD)									
Туре	Input									
Comment	This message is used to define geographic areas of data usage. The use of this message can serve different purposes, including atmospheric data availability and other types of geographical/geometrical aspects of usage of data.									
	See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.									
Information	Class/ID: 0xf6 0x13, Message Type: 2 (0x02), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType									
Payload descr	iption:									
Byte offset	Type	Name	Scale	Unit	Description					
0	X1	spartnByte0	-	-	SPARTN frame byte 0					
bits 70	U:8	preamble	-	-	Preamble (0x73, 's')					
1	X1	spartnByte1	-	-	SPARTN frame byte 1					
bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)					
bits 71	U <sub>:7</sub>	msgType	-	-	Message type					
2	X1	spartnByte2	-	-	SPARTN frame byte 2					
bits 70	U.g	nData	_	_	Payload length (middle 8 bits)					



3	X1	spartnByte3	-	-	SPARTN frame byte 3
bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC
bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type
bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag
bit 7	U <sub>:1</sub>	nDataLSB	-	-	Payload length (LSB)
Start of repeat	ted group	o (nData <b>times</b> )			
4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End of repeate	ed group	(nData <b>times</b> )			
4 + nData	U1	crc0	-	-	Message CRC 1st byte
Start of repeat	ted group	(crcType times)			
5 + nData + n	U1	crcN	-	-	Message CRC additional bytes
End of repeate	ed group	(crcType times)			

# 5.4.12 Message type 3, sub-type 0

### 5.4.12.1 Basic-precision atmosphere correction (BPAC)

Message		SPARTN-1X-BPAC									
		Basic-precision atmosphere correction (BPAC)									
Туре		Input									
Comment		This message contains basic-precision atmosphere correction information for ionosphere and troposphere delay estimations.									
		See Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 1.8.0, January 2020 or Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022 for a detailed message specification.  Class/ID: 0xf6 0x1c, Message Type: 3 (0x03), Sub-type: 0 (0x0), Message Size: 5 + nData + crcType									
Inform	nation										
Payloa	ad descr	iption:									
Byte o	offset	Туре	Name	Scale	Unit	Description					
0		X1	spartnByte0	-	-	SPARTN frame byte 0					
	bits 70	U:8	preamble	-	-	Preamble (0x73, 's')					
1		X1	spartnByte1	-	-	SPARTN frame byte 1					
	bit 0	U <sub>:1</sub>	nDataMSB	-	-	Payload length (MSB)					
	bits 71	U <sub>:7</sub>	msgType	-	-	Message type					
2		X1	spartnByte2	-	-	SPARTN frame byte 2					
	bits 70	U:8	nData	-	-	Payload length (middle 8 bits)					
3		X1	spartnByte3	-	-	SPARTN frame byte 3					
	bits 30	U <sub>:4</sub>	frameCrc	-	-	Frame CRC					
	bits 54	U <sub>:2</sub>	crcType	-	-	Message CRC type					
	bit 6	U <sub>:1</sub>	eaf	-	-	Encryption and/or authentication flag					
	bit 7	U:1	nDataLSB	-	-	Payload length (LSB)					
Start o	of repeat	ted arou	p (nData <b>times)</b>								



4 + n	U1	data	-	-	Message payload data. Payload data length defined by combining nDataMSB, nData and nDataLSB to form a 10-bit value.
End of repe	ated grou	p (nData times)			
4 + nData	U1	crc0	-	-	Message CRC 1st byte
Start of repe	eated gro	up (crcType tim	es)		
5 + nData +	n U1	crcN	-	-	Message CRC additional bytes
End of repe	ated grou	p (crcType time	es)		



# **6 Configuration interface**


This chapter describes the receiver configuration interface.

### 6.1 Configuration database

The configuration database in the receiver's RAM stores the current receiver settings used during runtime. This database is constructed from multiple sources known as *configuration layers* when the receiver starts up. The active settings, known as the current configuration, are stored in the *RAM layer*. Each configuration layer is organized into *configuration items*, which are uniquely identified by a *configuration key ID* and hold a single *configuration value*.

## 6.2 Configuration items

The following figure shows the structure of a *configuration item*, which consists of a *(configuration) key ID* and its *(configuration) value*:

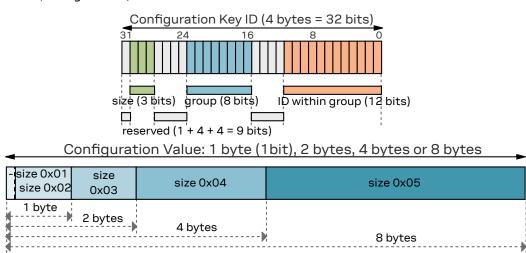

A configuration key ID is a 32-bit integer value, which is split into the following parts:

- Bit 31: Currently unused. Reserved for future use.
- Bits 30...28: Three bits that indicate the storage size of a configuration value (range 0x01-0x05, see below)
- Bits 27...24: Currently unused. Reserved for future use.
- Bits 23...16: Eight bits that define a unique group ID (range 0x01-0xfe)
- Bits 15...12: Currently unused. Reserved for future use.
- Bits 11...0: Twelve bits that define a unique item ID within a group (range 0x001-0xffe)

The entire 32-bit value is the unique key ID, which uniquely identifies a particular item. The numeric representation of the key ID uses the lower-case hexadecimal format, such as 0x20c400a1. An easier, more readable text representation uses the form CFG-GROUP-ITEM. This is also referred to as the (configuration) key name.

Supported storage size identifiers (bits 30...28 of the key ID) are:

- 0x01: one bit (the actual storage used is one byte, but only the least significant bit is used)
- 0x02: one byte
- 0x03: two bytes
- 0x04: four bytes
- 0x05: eight bytes



Each configuration item is of a certain type, which defines the interpretation of the raw binary data (see also UBX data types):

- U1, U2, U4, U8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths
- I1, I2, I4, I8: signed little-endian, two's complement integers of 8-, 16-, 32- and 64-bit widths
- R4, R8: IEEE 754 single (32-bit) and double (64-bit) precision floats
- E1, E2, E4: unsigned little-endian enumeration of 8-, 16-, and 32-bit widths
- X1, X2, X4, X8: unsigned little-endian integers of 8-, 16-, 32- and 64-bit widths for bitfields and other binary data, such as strings
- L: single-bit boolean (true = 1, false = 0), stored as U1

# **6.3 Configuration layers**


The receiver has several *configuration layers*. They are separate sources of configuration items. Some of the layers are read-only and others are modifiable. Layers are organized in terms of priority. Values in a high-priority layer replace values stored in a low-priority layer. At startup, the receiver reads all configuration layers and stacks up the items to create the *current configuration*, which is used by the receiver at run-time.

The following configuration layers are available (in order of priority, highest priority first):

- RAM: This layer contains items stored in volatile RAM. This is the current configuration. The configuration items in this layer can be set at run-time and are effective immediately.
- **BBR**: This layer contains items stored in the battery-backed RAM. The contents in this layer are preserved as long as a battery backup supply is provided during off periods. The configuration items in this layer can be set at run-time and they become effective when the receiver is restarted.
- **Flash**: This layer contains configuration items stored permanently in the external flash memory and it is available only if external flash memory is used. The configuration items in this layer can be set at run-time and they become effective when the receiver is restarted.
- **Default:** This layer contains all items known to the running receiver software and the hard-coded default values. Data in this layer cannot be modified during run-time. The default layer includes limited one-time programmable (OTP) memory for setting customized default values during device production.

The stacking of the configuration items from the different layers (sources) in order to construct the current configuration in the RAM layer is depicted in the following figure. For each defined item, i.e. for each item in the default layer, the receiver software goes through the layers above and stacks all the found items on top. Some items may not be present in every layer. The result is the RAM layer filled with all configuration items given configuration values coming from the highest priority layer the corresponding item was present. In the example figure, bold text indicates the source of the value in the current configuration (the RAM layer). Empty boxes mean that the layer can hold the item but that it is not currently stored there. Boxes with text mean that an item is currently stored in the layer.



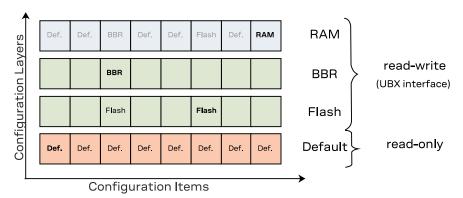

In the example figure above several items (e.g. the first item) are only set in the default layer and hence, the default value ends up in the current configuration in the RAM layer. The third item is present in the Default, flash and BBR layers. The value from the BBR layer has the highest priority and therefore it ends up in the RAM layer. On the other hand, the default value of the sixth item is changed by the value in the flash layer. The value of the last item is changed in the RAM layer only, i.e. upon startup the value in the RAM layer was the value from the default layer, but the value in the RAM layer was changed at runtime.

# 6.4 Configuration interface access

The following sections describe the existing interfaces to access the Configuration Database.

### 6.4.1 UBX protocol interface


The following UBX protocol messages are available to access the configuration database:

- UBX-CFG-VALGET to read configuration items from the database
- UBX-CFG-VALSET to set configuration items in the database
- UBX-CFG-VALDEL to delete configuration items from the database

# 6.5 Configuration data

Configuration data is the binary representation of a list of key ID and value pairs. It is formed by concatenating keys (U4 values) and values (variable type) without any padding. This format is used in the UBX-CFG-VALSET and UBX-CFG-VALGET messages.

The figure below shows an example. The four items (key ID - value pairs) on the left use the four fundamental storage sizes: one byte (L, U1, I1, E1 and X1 types), 2 bytes (U2, I2, E2 and X2 types), four byte (U4, I4, E4, X4 and R4 types) and eight bytes (U8, I8, X8 and R8 types). When concatenated (right) the key IDs and values are not aligned and there is no padding.

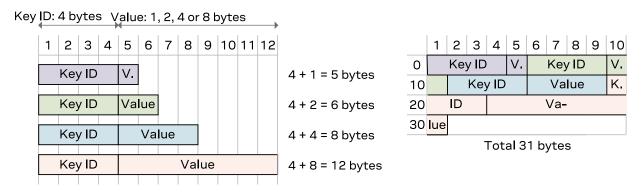




Note that this is an arbitrary example and any number of items of any value storage size can be concatenated the same way.

### 6.6 Configuration transactions

The configuration interface supports two mechanisms of configuration: the first is a transactionless mechanism where sent configuration changes are applied immediately to the configuration layer(s) requested. The second mechanism is a configuration transaction.

A transaction offers a way of queuing multiple configuration changes. It is particularly useful where different configuration keys depend on each other in such a way that sending one before the other can cause the configuration to be rejected. The queued configuration change requests are stored then checked collectively before being applied to the receiver.

A transaction can have the following states described in the figure below.

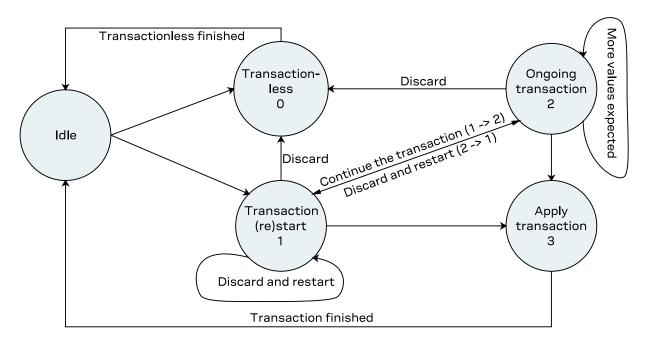

When starting a transaction, specify the layer(s) to apply the changes to. This list of configuration layer(s) must be observed throughout the transaction states. Modifying the configuration layer(s) mid-transaction causes the transaction to be aborted and consequently, no queued changes will be applied.

In the start transaction state, the receiver locks the configuration database so that changes from another entity or message cannot be applied. It is possible to send a configuration key-value pairs with the start transaction state. These are queued waiting to be applied.

In the ongoing state, a configuration key and value must be sent. The receiver aborts the transaction and does not apply any changes if this condition is violated. Key-value pairs sent in the ongoing state are queued waiting to be applied.

In the apply state, the receiver collectively checkes the queued changes and applied them to the requested configuration layer(s). Note that any additional key-value pairs sent within the apply state are ignored.

Note that a transaction can only come from a single source, a UBX-CFG-VALSET message or a UBX-CFG-VALDEL message. This means that in any given transaction it is not possible to mix a delete



and a save request. Starting a transaction from a different source aborts the current transaction and the queued changes are not applied.

Refer to UBX-CFG-VALSET and UBX-CFG-VALDEL messages for a detailed description of how to set up a configuration transaction, its limitations and conditions that would cause the transaction to be rejected.

## 6.7 Configuration reset behavior

The RAM layer is always rebuilt from the layers below when the chip's processor comes out from reset. When using UBX-CFG-RST the processor goes through a reset cycle with these reset types (resetMode field):

- 0x00 hardware reset (watchdog) immediately
- 0x01 controlled software reset
- 0x04 hardware reset (watchdog) after shutdown

See section Forcing a receiver reset in the integration manual.

# 6.8 Configuration overview

CFG-BDS BeiDou system configuration CFG-HW Hardware configuration CFG-I2C Configuration of the I2C interface CFG-I2CINPROT Input protocol configuration of the I2C interface CFG-I2COUTPROT Output protocol configuration of the I2C interface CFG-I2COUTPROT Output protocol configuration of the I2C interface CFG-INFMSG Information message configuration CFG-MOT Motion detector configuration CFG-MSGOUT Message output configuration CFG-NAV2 Secondary output configuration CFG-NAV4PG High precision navigation configuration CFG-NAV4PG Standard precision navigation configuration CFG-NAVSPG Standard precision navigation configuration CFG-RATE Navigation and measurement rate configuration CFG-RATE Navigation and measurement rate configuration CFG-SBAS SBAS Configuration CFG-SBAS SBAS configuration CFG-SEC Security configuration CFG-SFCORE Sensor fusion (SF) core configuration CFG-SFCORE Sensor fusion (SF) inertial measurement unit (IMU) configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SPARTN SPARTN configuration CFG-SPINNEROT Input protocol configuration of the SPI interface CFG-SPINNEROT Input protocol configuration of the SPI interface CFG-SPINNEROT Time pulse configuration of the SPI interface	Group	Description
CFG-I2C Configuration of the I2C interface CFG-I2CINPROT Input protocol configuration of the I2C interface CFG-I2COUTPROT Output protocol configuration of the I2C interface CFG-INFMSG Information message configuration CFG-MNGT Motion detector configuration CFG-MSGOUT Message output configuration CFG-MSGOUT Message output configuration CFG-NAV2 Secondary output configuration CFG-NAVPG High precision navigation configuration CFG-NAVSPG Standard precision navigation configuration CFG-MEA NMEA protocol configuration CFG-RATE Navigation and measurement rate configuration CFG-RATE Navigation and measurement rate configuration CFG-SBAS SBAS configuration CFG-SEC Security configuration CFG-SFCORE Sensor fusion (SF) core configuration CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SPIGNAL Satellite systems (GNSS) signal configuration CFG-SPIGNAT SPARTN configuration CFG-SPI Configuration of the SPI interface CFG-SPIINPROT Input protocol configuration of the SPI interface CFG-SPIINPROT Output protocol configuration of the SPI interface	CFG-BDS	BeiDou system configuration
CFG-I2CINPROT  Input protocol configuration of the I2C interface  CFG-I2COUTPROT  Output protocol configuration of the I2C interface  CFG-INFMSG  Information message configuration  CFG-MOT  Motion detector configuration  CFG-MSGOUT  Message output configuration  CFG-NAV2  Secondary output configuration  CFG-NAV4PG  High precision navigation configuration  CFG-NAV5PG  Standard precision navigation configuration  CFG-NMEA  NMEA protocol configuration  CFG-RATE  Navigation and measurement rate configuration  CFG-SBAS  SBAS configuration  CFG-SEC  Security configuration  CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SPONAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIINPROT  Output protocol configuration of the SPI interface	CFG-HW	Hardware configuration
CFG-I2COUTPROT Output protocol configuration of the I2C interface  CFG-INFMSG Information message configuration  CFG-MOT Motion detector configuration  CFG-MSGOUT Message output configuration  CFG-NAV2 Secondary output configuration  CFG-NAV4PG High precision navigation configuration  CFG-NAV5PG Standard precision navigation configuration  CFG-NMEA NMEA protocol configuration  CFG-RATE Navigation and measurement rate configuration  CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIINPROT Output protocol configuration of the SPI interface	CFG-I2C	Configuration of the I2C interface
CFG-INFMSG Information message configuration  CFG-MOT Motion detector configuration  CFG-MSGOUT Message output configuration  CFG-NAV2 Secondary output configuration  CFG-NAVPPG High precision navigation configuration  CFG-NAVSPG Standard precision navigation configuration  CFG-NMEA NMEA protocol configuration  CFG-RATE Navigation and measurement rate configuration  CFG-SPARTE Navigation and measurement rate configuration  CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface	CFG-I2CINPROT	Input protocol configuration of the I2C interface
CFG-MOT Motion detector configuration  CFG-MSGOUT Message output configuration  CFG-NAV2 Secondary output configuration  CFG-NAVHPG High precision navigation configuration  CFG-NAVSPG Standard precision navigation configuration  CFG-NMEA NMEA protocol configuration  CFG-RATE Navigation and measurement rate configuration  CFG-RTCM RTCM protocol configuration  CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFODO Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFONAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPINUPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-I2COUTPROT	Output protocol configuration of the I2C interface
Message output configuration  CFG-NAV2 Secondary output configuration  CFG-NAVHPG High precision navigation configuration  CFG-NAVSPG Standard precision navigation configuration  CFG-NMEA NMEA protocol configuration  CFG-RATE Navigation and measurement rate configuration  CFG-RTCM RTCM protocol configuration  CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SPIONAL Satellite systems (GNSS) signal configuration  CFG-SPARTN CFG-SPINPROT Input protocol configuration of the SPI interface  CFG-SPIINPROT Output protocol configuration of the SPI interface	CFG-INFMSG	Information message configuration
CFG-NAV2 Secondary output configuration CFG-NAVHPG High precision navigation configuration CFG-NAVSPG Standard precision navigation configuration CFG-NMEA NMEA protocol configuration CFG-RATE Navigation and measurement rate configuration CFG-RTCM RTCM protocol configuration CFG-SBAS SBAS configuration CFG-SEC Security configuration CFG-SFCORE Sensor fusion (SF) core configuration CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SIGNAL Satellite systems (GNSS) signal configuration CFG-SPARTN SPARTN configuration CFG-SPI Configuration CFG-SPI Configuration of the SPI interface CFG-SPIINPROT Unput protocol configuration of the SPI interface	CFG-MOT	Motion detector configuration
CFG-NAVHPG  CFG-NAVSPG  Standard precision navigation configuration  CFG-NMEA  NMEA protocol configuration  CFG-RATE  Navigation and measurement rate configuration  CFG-RTCM  RTCM protocol configuration  CFG-SBAS  SBAS configuration  CFG-SEC  Security configuration  CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SIGNAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI  Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIOUTPROT  Output protocol configuration of the SPI interface	CFG-MSGOUT	Message output configuration
CFG-NAVSPG Standard precision navigation configuration  CFG-NMEA NMEA protocol configuration  CFG-RATE Navigation and measurement rate configuration  CFG-RTCM RTCM protocol configuration  CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Uput protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-NAV2	Secondary output configuration
CFG-NMEA  NMEA protocol configuration  CFG-RATE  Navigation and measurement rate configuration  CFG-RTCM  RTCM protocol configuration  CFG-SBAS  SBAS configuration  CFG-SEC  Security configuration  CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SIGNAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI  Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIOUTPROT  Output protocol configuration of the SPI interface	CFG-NAVHPG	High precision navigation configuration
CFG-RATE  Navigation and measurement rate configuration  CFG-RTCM  RTCM protocol configuration  CFG-SBAS  SBAS configuration  CFG-SEC  Security configuration  CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SIGNAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI  Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIOUTPROT  Output protocol configuration of the SPI interface	CFG-NAVSPG	Standard precision navigation configuration
CFG-RTCM  CFG-SBAS  SBAS configuration  CFG-SEC  Security configuration  CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SIGNAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI  Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIOUTPROT  Output protocol configuration of the SPI interface	CFG-NMEA	NMEA protocol configuration
CFG-SBAS SBAS configuration  CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-RATE	Navigation and measurement rate configuration
CFG-SEC Security configuration  CFG-SFCORE Sensor fusion (SF) core configuration  CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO Sensor fusion (SF) odometer configuration  CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-RTCM	RTCM protocol configuration
CFG-SFCORE  Sensor fusion (SF) core configuration  CFG-SFIMU  Sensor fusion (SF) inertial measurement unit (IMU) configuration  CFG-SFODO  Sensor fusion (SF) odometer configuration  CFG-SIGNAL  Satellite systems (GNSS) signal configuration  CFG-SPARTN  SPARTN configuration  CFG-SPI  Configuration of the SPI interface  CFG-SPIINPROT  Input protocol configuration of the SPI interface  CFG-SPIOUTPROT  Output protocol configuration of the SPI interface	CFG-SBAS	SBAS configuration
CFG-SFIMU Sensor fusion (SF) inertial measurement unit (IMU) configuration CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SIGNAL Satellite systems (GNSS) signal configuration CFG-SPARTN SPARTN configuration CFG-SPI Configuration of the SPI interface CFG-SPIINPROT Input protocol configuration of the SPI interface CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SEC	Security configuration
CFG-SFODO Sensor fusion (SF) odometer configuration CFG-SIGNAL Satellite systems (GNSS) signal configuration CFG-SPARTN SPARTN configuration CFG-SPI Configuration of the SPI interface CFG-SPIINPROT Input protocol configuration of the SPI interface CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SFCORE	Sensor fusion (SF) core configuration
CFG-SIGNAL Satellite systems (GNSS) signal configuration  CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SFIMU	Sensor fusion (SF) inertial measurement unit (IMU) configuration
CFG-SPARTN SPARTN configuration  CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SFODO	Sensor fusion (SF) odometer configuration
CFG-SPI Configuration of the SPI interface  CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SIGNAL	Satellite systems (GNSS) signal configuration
CFG-SPIINPROT Input protocol configuration of the SPI interface  CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SPARTN	SPARTN configuration
CFG-SPIOUTPROT Output protocol configuration of the SPI interface	CFG-SPI	Configuration of the SPI interface
	CFG-SPIINPROT	Input protocol configuration of the SPI interface
CFG-TP Time pulse configuration	CFG-SPIOUTPROT	Output protocol configuration of the SPI interface
	CFG-TP	Time pulse configuration



Group	Description
CFG-TXREADY	TX ready configuration
CFG-UART1	Configuration of the UART1 interface
CFG-UART1INPROT	Input protocol configuration of the UART1 interface
CFG-UART1OUTPROT	Output protocol configuration of the UART1 interface
CFG-UART2	Configuration of the UART2 interface
CFG-UART2INPROT	Input protocol configuration of the UART2 interface
CFG-UART2OUTPROT	Output protocol configuration of the UART2 interface
CFG-USB	Configuration of the USB interface
CFG-USBINPROT	Input protocol configuration of the USB interface
CFG-USBOUTPROT	Output protocol configuration of the USB interface

# 6.9 Configuration reference

### 6.9.1 CFG-BDS: BeiDou system configuration

Note that enabling and disabling of individual GNSS is done via the  ${\sf CFG-SIGNAL}$  configuration group.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-BDS-USE_GEO_PRN	0x1034001	4 L	-	-	Use BeiDou geostationary satellites (PRN 1-5 and 59-63)

Table 5: CFG-BDS configuration items

### 6.9.2 CFG-HW: Hardware configuration

Hardware configuration settings.

Note that not all settings are available for all products. See the applicable data sheet for supported features.

Configuration item	Key ID	Туре	Scale	Unit	Description	
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	Active antenna voltage control flag	
Enable active antenna voltage o	ontrol flag. Us	ed by E	XT and M	/IADC ei	ngines.	
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	Short antenna detection flag	
Enable short antenna detection	flag. Used by	EXT an	d MADC	engines	3.	
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	Short antenna detection polarity	
Set to true if polarity of the ante	enna short det	ection i	s active l	ow. Use	ed by EXT engine.	
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	Open antenna detection flag	
Enable open antenna detection	flag. Used by E	XT and	MADC e	engines		
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	Open antenna detection polarity	
Set to true if polarity of the ante	enna open dete	ection i	s active lo	ow. Use	d by EXT engine.	
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	Power down antenna flag	
Enable power down antenna logic in the event of antenna short circuit. CFG-HW-ANT_CFG_SHORTDET must be enabled to use this feature. Used by EXT and MADC engines.						
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	Power down antenna logic polarity	
Set to true if polarity of the ante	enna power do	wn logi	c is active	e high. l	Jsed by EXT and MADC engines.	
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	Automatic recovery from short state flag	
Enable automatic recovery from	short state. L	sed by	EXT and	MADC	engines.	



Configuration item	Key ID	Туре	Scale	Unit	Description	
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	Antenna switch PIO number	
Antenna switch PIO number. l	Jsed by EXT and	MADO	engines	•		
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	Antenna short detection PIO number	
Antenna short detection PIO	number. Used by	EXT e	ngine.			
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	Antenna open detection PIO number	
Antenna open detection PIO n	umber. Used by	EXT er	gine.			
CFG-HW-ANT_ON_SHORT_US	0x30a3003c	U2	-	-	ANT on->short timeout[us]	
Delay in microseconds betwee	en turning the an	itenna	power su	pply on	and enabling the antenna short circuit detection	
CFG-HW-SENS_WOM_MODE	0x20a30063	E1	-	-	Select Wake-On-Motion mode	
See Table 7 below for a list of possible constants for this item.						
CFG-HW-SENS_WOM_THLD	0x20a30064	U1	-	-	Wake-On-Motion threshold	
 Required acceleration on sing	le acceleromete	r axis f		ring wal		
Required acceleration on sing range is [1-255], with 1 step =	le acceleromete	r axis f cample		ring wal	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valu	
Required acceleration on sing range is [1-255], with 1 step =	le acceleromete 1/255 * g. For ex 0x20a30054	r axis f kample E1		ring wal	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valued the configured value should be 128.	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE	le acceleromete 1/255 * g. For ex 0x20a30054 uate antenna st	r axis f kample E1 ate.	, for 0.5 g -	ring wal g thresh -	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE Select the engine used to eval The EXT engine uses an exter	le acceleromete 1/255 * g. For ex 0x20a30054 luate antenna st nal comparator f t-in measureme	r axis f kample E1 ate. For curr	, for 0.5 g - ent meas and req	ring wal thresh - suremer uires on	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection  nt.  ly a shunt resistor for current measurement. The	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE  Select the engine used to eval The EXT engine uses an exter The MADC engine uses a buil	le acceleromete 1/255 * g. For ex 0x20a30054 luate antenna sta nal comparator f t-in measurement ly in selected u-b	r axis f kample E1 ate. for curr nt ADC	, for 0.5 g - ent meas 3 and req neration 9	ring wal thresh - suremer uires on 9 receive	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection  nt.  ly a shunt resistor for current measurement. The	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE  Select the engine used to eval The EXT engine uses an exter The MADC engine uses a buil MADC engine is supported on	le acceleromete 1/255 * g. For ex 0x20a30054 luate antenna sta nal comparator f t-in measurement ly in selected u-b	r axis f cample E1 ate. for curr nt ADC blox gen	, for 0.5 g - ent meas 3 and req neration 9	ring wal thresh - suremer uires on 9 receive	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection  nt.  ly a shunt resistor for current measurement. The	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE  Select the engine used to eval The EXT engine uses an exter The MADC engine uses a buil MADC engine is supported on See Table 8 below for a list of	lle accelerometer 1/255 * g. For ex 0x20a30054 luate antenna stranal comparator f t-in measurement ly in selected u-b possible constan	r axis f kample E1 ate. For curr nt ADC blox gents for t	ent meas and req herations this item	ring wal thresh - suremer uires on 9 receive mV	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection  nt.  lly a shunt resistor for current measurement. Thers.  Antenna supervisor MADC engine short detection threshold	
Required acceleration on sing range is [1-255], with 1 step = CFG-HW-ANT_SUP_ENGINE  Select the engine used to eval The EXT engine uses an exter The MADC engine uses a buil MADC engine is supported on See Table 8 below for a list of CFG-HW-ANT_SUP_SHORT_THR	lle accelerometer 1/255 * g. For ex 0x20a30054 luate antenna stranal comparator f t-in measurement ly in selected u-b possible constan	r axis f kample E1 ate. For curr nt ADC blox gen ats for t U1	ent meas and req herations this item	ring wal thresh - suremer uires on 9 receive mV	ke up, from 0 to 1 g, where g = 9.81 m/s^2. Valuold the configured value should be 128.  Antenna supervisor engine selection  nt.  lly a shunt resistor for current measurement. Thers.  Antenna supervisor MADC engine short detection threshold	

#### Table 6: CFG-HW configuration items

Constant	Value	Description
DISABLED	0	Disable Wake-On-Motion feature.
HOST	1	Enable Wake-On-Motion feature on the host CPU.
RECEIVER	2	Enable Wake-On-Motion feature on the receiver.
ВОТН	3	Enable Wake-On-Motion feature on both host CPU and receiver.

### Table 7: Constants for CFG-HW-SENS\_WOM\_MODE

Constant	Value	Description
EXT	0	Use the EXT engine (not available in all products)
MADC	1	Use the MADC engine (not available in all products)

Table 8: Constants for CFG-HW-ANT\_SUP\_ENGINE

### 6.9.3 CFG-I2C: Configuration of the I2C interface

Settings needed to configure the I2C communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2C-ADDRESS	0x2051000	1 U1	-	-	I2C address of the receiver (7 bits)
CFG-I2C-EXTENDEDTIMEOUT	0x1051000	2 <b>L</b>	-	-	Flag to disable timeouting the interface after 1.5 s



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-I2C-ENABLED	0x10510003	3 L	-	-	Flag to indicate if the I2C interface should be enabled

Table 9: CFG-I2C configuration items

## 6.9.4 CFG-I2CINPROT: Input protocol configuration of the I2C interface

Input protocol enable flags of the I2C interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-I2CINPROT-UBX	0x10710001	L	-	-	Flag to indicate if UBX should be an input protocol on I2C
CFG-I2CINPROT-NMEA	0x10710002	<u>L</u>	-	-	Flag to indicate if NMEA should be an input protocol on I2C
CFG-I2CINPROT-RTCM3X	0x10710004	ı L	-	-	Flag to indicate if RTCM3X should be an input protocol on I2C
CFG-I2CINPROT-SPARTN	0x10710005	5 L	-	-	Flag to indicate if SPARTN should be an input protocol on I2C

Table 10: CFG-I2CINPROT configuration items

#### 6.9.5 CFG-I2COUTPROT: Output protocol configuration of the I2C interface

Output protocol enable flags of the I2C interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	Flag to indicate if UBX should be an output protocol on I2C
CFG-I2COUTPROT-NMEA	0x10720002	2 L	-	-	Flag to indicate if NMEA should be an output protocol on I2C

Table 11: CFG-I2COUTPROT configuration items

## 6.9.6 CFG-INFMSG: Information message configuration

Information message configuration for the NMEA and UBX protocols.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	Information message enable flags for the UBX protocol on the I2C interface
See Table 13 below for a list of	f possible consta	ants for	this item	١.	
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	Information message enable flags for the UBX protocol on the UART1 interface
See Table 13 below for a list of	f possible consta	ants for	this item	٦.	
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	Information message enable flags for the UBX protocol on the UART2 interface
See Table 13 below for a list of	f possible consta	ants for	this item	١.	
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	Information message enable flags for the UBX protocol on the USB interface
See Table 13 below for a list of	f possible consta	ants for	this item	٦.	
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	Information message enable flags for the UBX protocol on the SPI interface
See Table 13 below for a list of	of possible consta	ants for	this iten	٦.	
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	Information message enable flags for the NMEA protocol on the I2C interface
See Table 13 below for a list of	f possible consta	ants fo	this item	٦.	



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	Information message enable flags for the NMEA protocol on the UART1 interface
See Table 13 below for a list	of possible consta	ints foi	this iten	٦.	
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	Information message enable flags for the NMEA protocol on the UART2 interface
See Table 13 below for a list	of possible consta	ints foi	this iten	٦.	
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	Information message enable flags for the NMEA protocol on the USB interface
See Table 13 below for a list	of possible consta	ints foi	this iten	٦.	
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	Information message enable flags for the NMEA protocol on the SPI interface
See Table 13 below for a list	of possible consta	ints foi	this iten	٦.	

Table 12: CFG-INFMSG configuration items

Constant	Value	Description	
ERROR	0x01	Enable ERROR information messages	
WARNING	0x02	Enable WARNING information messages	
NOTICE	0×04	Enable NOTICE information messages	
TEST	0x08	Enable TEST information messages	
DEBUG	0x10	Enable DEBUG information messages	

Table 13: Constants for CFG-INFMSG-UBX\_I2C, CFG-INFMSG-UBX\_UART1, CFG-INFMSG-UBX\_UART2, CFG-INFMSG-UBX\_USB, CFG-INFMSG-UBX\_SPI, CFG-INFMSG-NMEA\_I2C, CFG-INFMSG-NMEA\_UART1, CFG-INFMSG-NMEA\_UART2, CFG-INFMSG-NMEA\_USB, CFG-INFMSG-NMEA\_SPI

## 6.9.7 CFG-MOT: Motion detector configuration

The items in this group specify the parameters used for the internal receiver motion detector. The platform motion is assessed by combining the detected motion of different detectors looking at specific data types (i.e. GNSS, gyroscopes, accelerometers, wheel ticks). The decision thresholds of the internal detectors can be specified using the configuration items in this group.

0.01 e value or	m/s	Static hold speed threshold, below which the receiver is considered to be stationary
e value or		
	behavi	ior.
1.0	m	Static hold distance threshold, within which the receiver is considered to be stationary
e value or	behavi	ior.
-	ms	Averaging window for IMU measurements in noisy setups.
	e value or -	e value or behav

Table 14: CFG-MOT configuration items

#### 6.9.8 CFG-MSGOUT: Message output configuration

For each message and port a separate output rate (per second, per epoch) can be configured.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a	6 U1	-	-	Output rate of the NMEA-GX-DTM message on port I2C



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	Output rate of the NMEA-GX-DTM message on port SPI
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART1
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	Output rate of the NMEA-GX-DTM message on port UART2
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	Output rate of the NMEA-GX-DTM message on port USB
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	Output rate of the NMEA-GX-GBS message on port I2C
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	Output rate of the NMEA-GX-GBS message on port SPI
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART1
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	Output rate of the NMEA-GX-GBS message on port UART2
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	Output rate of the NMEA-GX-GBS message on port USB
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	Output rate of the NMEA-GX-GGA message on port I2C
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	Output rate of the NMEA-GX-GGA message on port SPI
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	Output rate of the NMEA-GX-GGA message on port UART2
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	Output rate of the NMEA-GX-GGA message on port USB
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	Output rate of the NMEA-GX-GLL message on port I2C
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	Output rate of the NMEA-GX-GLL message on port SPI
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	Output rate of the NMEA-GX-GLL message on port UART2
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	Output rate of the NMEA-GX-GLL message on port USB
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	Output rate of the NMEA-GX-GNS message on port I2C
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	Output rate of the NMEA-GX-GNS message on port SPI
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART1
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	Output rate of the NMEA-GX-GNS message on port UART2
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	Output rate of the NMEA-GX-GNS message on port USB
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	Output rate of the NMEA-GX-GRS message on port I2C
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	Output rate of the NMEA-GX-GRS message on port SPI



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART1
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	Output rate of the NMEA-GX-GRS message on port UART2
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	Output rate of the NMEA-GX-GRS message on port USB
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	Output rate of the NMEA-GX-GSA message on port I2C
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	Output rate of the NMEA-GX-GSA message on port SPI
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	Output rate of the NMEA-GX-GSA message on port UART2
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	Output rate of the NMEA-GX-GSA message on port USB
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	Output rate of the NMEA-GX-GST message on port I2C
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	Output rate of the NMEA-GX-GST message on port SPI
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	Output rate of the NMEA-GX-GST message on port UART1
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	Output rate of the NMEA-GX-GST message on port UART2
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	Output rate of the NMEA-GX-GST message on port USB
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	Output rate of the NMEA-GX-GSV message on port I2C
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	Output rate of the NMEA-GX-GSV message on port SPI
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	Output rate of the NMEA-GX-GSV message on port UART2
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	Output rate of the NMEA-GX-GSV message on port USB
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	Output rate of the NMEA-GX-RLM message on port I2C
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	Output rate of the NMEA-GX-RLM message on port SPI
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART1
CFG-MSGOUT-NMEA_ID_RLM_UART2	0x20910402	U1	-	-	Output rate of the NMEA-GX-RLM message on port UART2
CFG-MSGOUT-NMEA_ID_RLM_USB	0x20910403	U1	-	-	Output rate of the NMEA-GX-RLM message on port USB
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	Output rate of the NMEA-GX-RMC message or port I2C
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	Output rate of the NMEA-GX-RMC message or port SPI
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	Output rate of the NMEA-GX-RMC message or port UART1



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	Output rate of the NMEA-GX-RMC message on port UART2
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	Output rate of the NMEA-GX-RMC message on port USB
CFG-MSGOUT-NMEA_ID_THS_I2C	0x209100e2	U1	-	-	Output rate of the NMEA-GX-THS message on port I2C
CFG-MSGOUT-NMEA_ID_THS_SPI	0x209100e6	U1	-	-	Output rate of the NMEA-GX-THS message on port SPI
CFG-MSGOUT-NMEA_ID_THS_UART1	0x209100e3	U1	-	-	Output rate of the NMEA-GX-THS message on port UART1
CFG-MSGOUT-NMEA_ID_THS_UART2	0x209100e4	U1	-	-	Output rate of the NMEA-GX-THS message on port UART2
CFG-MSGOUT-NMEA_ID_THS_USB	0x209100e5	U1	-	-	Output rate of the NMEA-GX-THS message on port USB
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	Output rate of the NMEA-GX-VTG message on port I2C
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	Output rate of the NMEA-GX-VTG message on port SPI
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	Output rate of the NMEA-GX-VTG message on port UART2
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	Output rate of the NMEA-GX-VTG message on port USB
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	Output rate of the NMEA-GX-ZDA message on port I2C
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	Output rate of the NMEA-GX-ZDA message on port SPI
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART1
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	Output rate of the NMEA-GX-ZDA message on port UART2
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	Output rate of the NMEA-GX-ZDA message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_GGA_ I2C	0x20910661	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_GGA_ SPI	0x20910665	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_GGA_ UART1	0x20910662	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_GGA_ UART2	0x20910663	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_GGA_ USB	0x20910664	U1	-	-	Output rate of the NMEA-NAV2-GX-GGA message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_GLL_ I2C	0x20910670	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_GLL_ SPI	0x20910674	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_GLL_ UART1	0x20910671	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port UART1
	0x20910672	U1	_	_	Output rate of the NMEA-NAV2-GX-GLL



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-NMEA_NAV2_ID_GLL_ USB	0x20910673	U1	-	-	Output rate of the NMEA-NAV2-GX-GLL message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_GNS_ I2C	0x2091065c	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_GNS_ SPI	0x20910660	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_GNS_ UART1	0x2091065d	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_GNS_ UART2	0x2091065e	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_GNS_ USB	0x2091065f	U1	-	-	Output rate of the NMEA-NAV2-GX-GNS message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_GSA_ I2C	0x20910666	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_GSA_ SPI	0x2091066a	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_GSA_ UART1	0x20910667	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_GSA_ UART2	0x20910668	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_GSA_ USB	0x20910669	U1	-	-	Output rate of the NMEA-NAV2-GX-GSA message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_RMC_ I2C	0x20910652	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_RMC_ SPI	0x20910656	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_RMC_ UART1	0x20910653	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_RMC_ UART2	0x20910654	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_RMC_ USB	0x20910655	U1	-	-	Output rate of the NMEA-NAV2-GX-RMC message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_VTG_ I2C	0x20910657	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_VTG_ SPI	0x2091065b	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_VTG_ UART1	0x20910658	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_VTG_ UART2	0x20910659	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_VTG_ USB	0x2091065a	U1	-	-	Output rate of the NMEA-NAV2-GX-VTG message on port USB
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_ I2C	0x2091067f	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port I2C
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_ SPI	0x20910683	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port SPI
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_ UART1	0x20910680	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART1
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_ UART2	0x20910681	U1	-	-	Output rate of the NMEA-NAV2-GX-ZDA message on port UART2
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_	020010602	111		_	Output rate of the NMEA-NAV2-GX-ZDA



	Key ID	ype	Scale	Unit	Description
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYP_ UART1	0x209100ed	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYP_ UART2	0x209100ee	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	Output rate of the NMEA-GX-PUBX00 message on port USB
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYS_ UART1	0x209100f2	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYS_ UART2	0x209100f3	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	Output rate of the NMEA-GX-PUBX03 message on port USB
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port I2C
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port SPI
CFG-MSGOUT-PUBX_ID_POLYT_ UART1	0x209100f7	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART1
CFG-MSGOUT-PUBX_ID_POLYT_ UART2	0x209100f8	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port UART2
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	Output rate of the NMEA-GX-PUBX04 message on port USB
CFG-MSGOUT-UBX_ESF_ALG_I2C	0x2091010f	U1	-	-	Output rate of the UBX-ESF-ALG message on port I2C
CFG-MSGOUT-UBX_ESF_ALG_SPI	0x20910113	U1	-	-	Output rate of the UBX-ESF-ALG message on port SPI
CFG-MSGOUT-UBX_ESF_ALG_UART1	0x20910110	U1	-	-	Output rate of the UBX-ESF-ALG message on port UART1
CFG-MSGOUT-UBX_ESF_ALG_UART2	0x20910111	U1	-	-	Output rate of the UBX-ESF-ALG message on port UART2
CFG-MSGOUT-UBX_ESF_ALG_USB	0x20910112	U1	-	-	Output rate of the UBX-ESF-ALG message on port USB
CFG-MSGOUT-UBX_ESF_INS_I2C	0x20910114	U1	-	-	Output rate of the UBX-ESF-INS message on port I2C
CFG-MSGOUT-UBX_ESF_INS_SPI	0x20910118	U1	-	-	Output rate of the UBX-ESF-INS message on port SPI
CFG-MSGOUT-UBX_ESF_INS_UART1	0x20910115	U1	-	-	Output rate of the UBX-ESF-INS message on port UART1
CFG-MSGOUT-UBX_ESF_INS_UART2	0x20910116	U1	-	-	Output rate of the UBX-ESF-INS message on port UART2
CEG-MSGOLIT-LIRY ESE INC LISE	0x20910117	U1	-	-	Output rate of the UBX-ESF-INS message on
CFG-MSGOUT-UBX_ESF_INS_USB					port USB



AS message on AS message on AS message on AS message on V message on V message on V message on V message on
AS message on  AS message on  V message on  V message on  V message on
AS message on  V message on  V message on  V message on
W message on W message on W message on W message on
N message on N message on
V message on
W message on
V message on
· ···occago c··
TUS message
MMS message
V2 message on
V3 message on
V3 message on



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_HW3_ UART1	0x20910355	U1	=	-	Output rate of the UBX-MON-HW3 message on port UART1
CFG-MSGOUT-UBX_MON_HW3_ UART2	0x20910356	U1	-	-	Output rate of the UBX-MON-HW3 message on port UART2
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	Output rate of the UBX-MON-HW3 message on port USB
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	Output rate of the UBX-MON-HW message on port I2C
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	Output rate of the UBX-MON-HW message on port SPI
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	Output rate of the UBX-MON-HW message on port UART1
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	Output rate of the UBX-MON-HW message on port UART2
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	Output rate of the UBX-MON-HW message on port USB
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	Output rate of the UBX-MON-IO message on port I2C
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	Output rate of the UBX-MON-IO message on port SPI
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	Output rate of the UBX-MON-IO message on port UART1
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	Output rate of the UBX-MON-IO message on port UART2
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	Output rate of the UBX-MON-IO message on port USB
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	Output rate of the UBX-MON-MSGPP message on port I2C
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	Output rate of the UBX-MON-MSGPP message on port SPI
CFG-MSGOUT-UBX_MON_MSGPP_ UART1	0x20910197	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART1
CFG-MSGOUT-UBX_MON_MSGPP_ UART2	0x20910198	U1	-	-	Output rate of the UBX-MON-MSGPP message on port UART2
CFG-MSGOUT-UBX_MON_MSGPP_ USB	0x20910199	U1	-	-	Output rate of the UBX-MON-MSGPP message on port USB
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	Output rate of the UBX-MON-RF message on port I2C
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	Output rate of the UBX-MON-RF message on port SPI
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	Output rate of the UBX-MON-RF message on port UART1
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	Output rate of the UBX-MON-RF message on port UART2
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	Output rate of the UBX-MON-RF message on port USB
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	Output rate of the UBX-MON-RXBUF message on port I2C
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	Output rate of the UBX-MON-RXBUF message on port SPI
CFG-MSGOUT-UBX MON RXBUF	0x209101a1	U1	-	-	Output rate of the UBX-MON-RXBUF message



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_MON_RXBUF_ UART2	0x209101a2	U1	-	-	Output rate of the UBX-MON-RXBUF message on port UART2
CFG-MSGOUT-UBX_MON_RXBUF_ USB	0x209101a3	U1	-	-	Output rate of the UBX-MON-RXBUF message on port USB
CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	Output rate of the UBX-MON-RXR message on port I2C
CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	Output rate of the UBX-MON-RXR message on port SPI
CFG-MSGOUT-UBX_MON_RXR_ UART1	0x20910188	U1	-	-	Output rate of the UBX-MON-RXR message on port UART1
CFG-MSGOUT-UBX_MON_RXR_ UART2	0x20910189	U1	-	-	Output rate of the UBX-MON-RXR message on port UART2
CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	Output rate of the UBX-MON-RXR message on port USB
CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	Output rate of the UBX-MON-SPAN message on port I2C
CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	Output rate of the UBX-MON-SPAN message on port SPI
CFG-MSGOUT-UBX_MON_SPAN_ UART1	0x2091038c	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART1
CFG-MSGOUT-UBX_MON_SPAN_ UART2	0x2091038d	U1	-	-	Output rate of the UBX-MON-SPAN message on port UART2
CFG-MSGOUT-UBX_MON_SPAN_USB	0x2091038e	U1	-	-	Output rate of the UBX-MON-SPAN message on port USB
CFG-MSGOUT-UBX_MON_SYS_I2C	0x2091069d	U1	-	-	Output rate of the UBX-MON-SYS message on port I2C
CFG-MSGOUT-UBX_MON_SYS_SPI	0x209106a1	U1	-	-	Output rate of the UBX-MON-SYS message on port SPI
CFG-MSGOUT-UBX_MON_SYS_ UART1	0x2091069e	U1	-	-	Output rate of the UBX-MON-SYS message on port UART1
CFG-MSGOUT-UBX_MON_SYS_ UART2	0x2091069f	U1	-	-	Output rate of the UBX-MON-SYS message on port UART2
CFG-MSGOUT-UBX_MON_SYS_USB	0x209106a0	U1	-	-	Output rate of the UBX-MON-SYS message on port USB
CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	Output rate of the UBX-MON-TXBUF message on port I2C
CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	Output rate of the UBX-MON-TXBUF message on port SPI
CFG-MSGOUT-UBX_MON_TXBUF_ UART1	0x2091019c	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART1
CFG-MSGOUT-UBX_MON_TXBUF_ UART2	0x2091019d	U1	-	-	Output rate of the UBX-MON-TXBUF message on port UART2
CFG-MSGOUT-UBX_MON_TXBUF_ USB	0x2091019e	U1	-	-	Output rate of the UBX-MON-TXBUF message on port USB
CFG-MSGOUT-UBX_NAV2_CLOCK_ I2C	0x20910430	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port I2C
CFG-MSGOUT-UBX_NAV2_CLOCK_ SPI	0x20910434	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port SPI
CFG-MSGOUT-UBX_NAV2_CLOCK_ UART1	0x20910431	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port UART1
UANTI					



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV2_CLOCK_ USB	0x20910433	U1	-	-	Output rate of the UBX-NAV2-CLOCK message on port USB
CFG-MSGOUT-UBX_NAV2_COV_I2C	0x20910435	U1	-	-	Output rate of the UBX-NAV2-COV message on port I2C
CFG-MSGOUT-UBX_NAV2_COV_SPI	0x20910439	U1	-	-	Output rate of the UBX-NAV2-COV message on port SPI
CFG-MSGOUT-UBX_NAV2_COV_ UART1	0x20910436	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART1
CFG-MSGOUT-UBX_NAV2_COV_ UART2	0x20910437	U1	-	-	Output rate of the UBX-NAV2-COV message on port UART2
CFG-MSGOUT-UBX_NAV2_COV_USB	0x20910438	U1	-	-	Output rate of the UBX-NAV2-COV message on port USB
CFG-MSGOUT-UBX_NAV2_DOP_I2C	0x20910465	U1	-	-	Output rate of the UBX-NAV2-DOP message on port I2C
CFG-MSGOUT-UBX_NAV2_DOP_SPI	0x20910469	U1	-	-	Output rate of the UBX-NAV2-DOP message on port SPI
CFG-MSGOUT-UBX_NAV2_DOP_ UART1	0x20910466	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART1
CFG-MSGOUT-UBX_NAV2_DOP_ UART2	0x20910467	U1	-	-	Output rate of the UBX-NAV2-DOP message on port UART2
CFG-MSGOUT-UBX_NAV2_DOP_USB	0x20910468	U1	-	-	Output rate of the UBX-NAV2-DOP message on port USB
CFG-MSGOUT-UBX_NAV2_EELL_I2C	0x20910470	U1	-	-	Output rate of the UBX-NAV2-EELL message on port I2C
CFG-MSGOUT-UBX_NAV2_EELL_SPI	0x20910474	U1	-	-	Output rate of the UBX-NAV2-EELL message on port SPI
CFG-MSGOUT-UBX_NAV2_EELL_ UART1	0x20910471	U1	-	-	Output rate of the UBX-NAV2-EELL message on port UART1
CFG-MSGOUT-UBX_NAV2_EELL_ UART2	0x20910472	U1	-	-	Output rate of the UBX-NAV2-EELL message on port UART2
CFG-MSGOUT-UBX_NAV2_EELL_USB	0x20910473	U1	-	-	Output rate of the UBX-NAV2-EELL message on port USB
CFG-MSGOUT-UBX_NAV2_EOE_I2C	0x20910565	U1	-	-	Output rate of the UBX-NAV2-EOE message on port I2C
CFG-MSGOUT-UBX_NAV2_EOE_SPI	0x20910569	U1	-	-	Output rate of the UBX-NAV2-EOE message on port SPI
CFG-MSGOUT-UBX_NAV2_EOE_ UART1	0x20910566	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART1
CFG-MSGOUT-UBX_NAV2_EOE_ UART2	0x20910567	U1	-	-	Output rate of the UBX-NAV2-EOE message on port UART2
CFG-MSGOUT-UBX_NAV2_EOE_USB	0x20910568	U1	-	-	Output rate of the UBX-NAV2-EOE message on port USB
CFG-MSGOUT-UBX_NAV2_POSECEF_ I2C	0x20910480	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port I2C
CFG-MSGOUT-UBX_NAV2_POSECEF_ SPI	0x20910484	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port SPI
CFG-MSGOUT-UBX_NAV2_POSECEF_ UART1	0x20910481	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART1
CFG-MSGOUT-UBX_NAV2_POSECEF_ UART2	0x20910482	U1	-	-	Output rate of the UBX-NAV2-POSECEF message on port UART2
		U1			Output rate of the UBX-NAV2-POSECEF



CFG-MSGOUT-UBX_NAV2_POSLLH_ I2C  CFG-MSGOUT-UBX_NAV2_POSLLH_ SPI  CFG-MSGOUT-UBX_NAV2_POSLLH_ UART1  CFG-MSGOUT-UBX_NAV2_POSLLH_ UART2	0x20910485 0x20910489	U1	-	_	Output rate of the UBX-NAV2-POSLLH
SPI  CFG-MSGOUT-UBX_NAV2_POSLLH_ UART1  CFG-MSGOUT-UBX_NAV2_POSLLH_	0x20910489				message on port I2C
UART1 CFG-MSGOUT-UBX_NAV2_POSLLH_		U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port SPI
	0x20910486	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART1
	0x20910487	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port UART2
CFG-MSGOUT-UBX_NAV2_POSLLH_ USB	0x20910488	U1	-	-	Output rate of the UBX-NAV2-POSLLH message on port USB
CFG-MSGOUT-UBX_NAV2_PVAT_I2C	0x2091062f	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port I2C
CFG-MSGOUT-UBX_NAV2_PVAT_SPI	0x20910633	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port SPI
CFG-MSGOUT-UBX_NAV2_PVAT_ UART1	0x20910630	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port UART1
CFG-MSGOUT-UBX_NAV2_PVAT_ UART2	0x20910631	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port UART2
CFG-MSGOUT-UBX_NAV2_PVAT_USB	0x20910632	U1	-	-	Output rate of the UBX-NAV2-PVAT message on port USB
CFG-MSGOUT-UBX_NAV2_PVT_I2C	0x20910490	U1	-	-	Output rate of the UBX-NAV2-PVT message on port I2C
CFG-MSGOUT-UBX_NAV2_PVT_SPI	0x20910494	U1	-	-	Output rate of the UBX-NAV2-PVT message on port SPI
CFG-MSGOUT-UBX_NAV2_PVT_ UART1	0x20910491	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART1
CFG-MSGOUT-UBX_NAV2_PVT_ UART2	0x20910492	U1	-	-	Output rate of the UBX-NAV2-PVT message on port UART2
CFG-MSGOUT-UBX_NAV2_PVT_USB	0x20910493	U1	-	-	Output rate of the UBX-NAV2-PVT message on port USB
CFG-MSGOUT-UBX_NAV2_SAT_I2C	0x20910495	U1	-	-	Output rate of the UBX-NAV2-SAT message on port I2C
CFG-MSGOUT-UBX_NAV2_SAT_SPI	0x20910499	U1	-	-	Output rate of the UBX-NAV2-SAT message on port SPI
CFG-MSGOUT-UBX_NAV2_SAT_ UART1	0x20910496	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART1
CFG-MSGOUT-UBX_NAV2_SAT_ UART2	0x20910497	U1	-	-	Output rate of the UBX-NAV2-SAT message on port UART2
CFG-MSGOUT-UBX_NAV2_SAT_USB	0x20910498	U1	-	-	Output rate of the UBX-NAV2-SAT message on port USB
CFG-MSGOUT-UBX_NAV2_SBAS_I2C	0x20910500	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port I2C
CFG-MSGOUT-UBX_NAV2_SBAS_SPI	0x20910504	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port SPI
CFG-MSGOUT-UBX_NAV2_SBAS_ UART1	0x20910501	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART1
CFG-MSGOUT-UBX_NAV2_SBAS_ UART2	0x20910502	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port UART2
CFG-MSGOUT-UBX_NAV2_SBAS_USB	0x20910503	U1	-	-	Output rate of the UBX-NAV2-SBAS message on port USB
CFG-MSGOUT-UBX_NAV2_SIG_I2C	0x20910505	U1	-	-	Output rate of the UBX-NAV2-SIG message on port I2C



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV2_SIG_SPI	0x20910509	U1	-	-	Output rate of the UBX-NAV2-SIG message on port SPI
CFG-MSGOUT-UBX_NAV2_SIG_ UART1	0x20910506	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART1
CFG-MSGOUT-UBX_NAV2_SIG_ UART2	0x20910507	U1	-	-	Output rate of the UBX-NAV2-SIG message on port UART2
CFG-MSGOUT-UBX_NAV2_SIG_USB	0x20910508	U1	-	-	Output rate of the UBX-NAV2-SIG message on port USB
CFG-MSGOUT-UBX_NAV2_STATUS_ I2C	0x20910515	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port I2C
CFG-MSGOUT-UBX_NAV2_STATUS_ SPI	0x20910519	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port SPI
CFG-MSGOUT-UBX_NAV2_STATUS_ UART1	0x20910516	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART1
CFG-MSGOUT-UBX_NAV2_STATUS_ UART2	0x20910517	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port UART2
CFG-MSGOUT-UBX_NAV2_STATUS_ USB	0x20910518	U1	-	-	Output rate of the UBX-NAV2-STATUS message on port USB
CFG-MSGOUT-UBX_NAV2_TIMEBDS_ I2C	0x20910525	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMEBDS_ SPI	0x20910529	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port SPI
CFG-MSGOUT-UBX_NAV2_TIMEBDS_ UART1	0x20910526	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMEBDS_ UART2	0x20910527	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMEBDS_ USB	0x20910528	U1	-	-	Output rate of the UBX-NAV2-TIMEBDS message on port USB
CFG-MSGOUT-UBX_NAV2_TIMEGAL_ I2C	0x20910530	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMEGAL_ SPI	0x20910534	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port SPI
CFG-MSGOUT-UBX_NAV2_TIMEGAL_ UART1	0x20910531	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMEGAL_ UART2	0x20910532	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMEGAL_ USB	0x20910533	U1	-	-	Output rate of the UBX-NAV2-TIMEGAL message on port USB
CFG-MSGOUT-UBX_NAV2_TIMEGLO_ I2C	0x20910535	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMEGLO_ SPI	0x20910539	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port SPI
CFG-MSGOUT-UBX_NAV2_TIMEGLO_ UART1	0x20910536	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMEGLO_ UART2	0x20910537	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMEGLO_ USB	0x20910538	U1	-	-	Output rate of the UBX-NAV2-TIMEGLO message on port USB
CFG-MSGOUT-UBX_NAV2_TIMEGPS_ I2C	0x20910540	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMEGPS_ SPI	0x20910544	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port SPI



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV2_TIMEGPS_ UART1	0x20910541	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMEGPS_ UART2	0x20910542	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMEGPS_ USB	0x20910543	U1	-	-	Output rate of the UBX-NAV2-TIMEGPS message on port USB
CFG-MSGOUT-UBX_NAV2_TIMELS_ I2C	0x20910545	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMELS_ SPI	0x20910549	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port SPI
CFG-MSGOUT-UBX_NAV2_TIMELS_ UART1	0x20910546	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMELS_ UART2	0x20910547	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMELS_ USB	0x20910548	U1	-	-	Output rate of the UBX-NAV2-TIMELS message on port USB
CFG-MSGOUT-UBX_NAV2_ TIMENAVIC_I2C	0x209106a7	U1	-	-	Output rate of the UBX-NAV2-TIMENAVIC message on port I2C
CFG-MSGOUT-UBX_NAV2_ TIMENAVIC_SPI	0x209106ab	U1	-	-	Output rate of the UBX-NAV2-TIMENAVIC message on port SPI
CFG-MSGOUT-UBX_NAV2_ TIMENAVIC_UART1	0x209106a8	U1	-	-	Output rate of the UBX-NAV2-TIMENAVIC message on port UART1
CFG-MSGOUT-UBX_NAV2_ TIMENAVIC_UART2	0x209106a9	U1	-	-	Output rate of the UBX-NAV2-TIMENAVIC message on port UART2
CFG-MSGOUT-UBX_NAV2_ TIMENAVIC_USB	0x209106aa	U1	-	-	Output rate of the UBX-NAV2-TIMENAVIC message on port USB
CFG-MSGOUT-UBX_NAV2_ TIMEQZSS_I2C	0x20910575	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port I2C
CFG-MSGOUT-UBX_NAV2_ TIMEQZSS_SPI	0x20910579	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port SPI
CFG-MSGOUT-UBX_NAV2_ TIMEQZSS_UART1	0x20910576	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART1
CFG-MSGOUT-UBX_NAV2_ TIMEQZSS_UART2	0x20910577	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port UART2
CFG-MSGOUT-UBX_NAV2_ TIMEQZSS_USB	0x20910578	U1	-	-	Output rate of the UBX-NAV2-TIMEQZSS message on port USB
CFG-MSGOUT-UBX_NAV2_TIMEUTC_ I2C	0x20910550	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port I2C
CFG-MSGOUT-UBX_NAV2_TIMEUTC_ SPI	0x20910554	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port SPI
CFG-MSGOUT-UBX_NAV2_TIMEUTC_ UART1	0x20910551	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART1
CFG-MSGOUT-UBX_NAV2_TIMEUTC_ UART2	0x20910552	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port UART2
CFG-MSGOUT-UBX_NAV2_TIMEUTC_ USB	0x20910553	U1	-	-	Output rate of the UBX-NAV2-TIMEUTC message on port USB
CFG-MSGOUT-UBX_NAV2_VELECEF_ I2C	0x20910555	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port I2C
	0x20910559	U1	-	-	Output rate of the UBX-NAV2-VELECEF
CFG-MSGOUT-UBX_NAV2_VELECEF_ SPI					message on port SPI



Configuration item	Key ID	<u> </u>	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV2_VELECEF_ UART2	0x20910557	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port UART2
CFG-MSGOUT-UBX_NAV2_VELECEF_ USB	0x20910558	U1	-	-	Output rate of the UBX-NAV2-VELECEF message on port USB
CFG-MSGOUT-UBX_NAV2_VELNED_ I2C	0x20910560	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port I2C
CFG-MSGOUT-UBX_NAV2_VELNED_ SPI	0x20910564	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port SPI
CFG-MSGOUT-UBX_NAV2_VELNED_ UART1	0x20910561	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART1
CFG-MSGOUT-UBX_NAV2_VELNED_ UART2	0x20910562	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port UART2
CFG-MSGOUT-UBX_NAV2_VELNED_ USB	0x20910563	U1	-	-	Output rate of the UBX-NAV2-VELNED message on port USB
CFG-MSGOUT-UBX_NAV_ATT_I2C	0x2091001f	U1	-	-	Output rate of the UBX-NAV-ATT message on port I2C
CFG-MSGOUT-UBX_NAV_ATT_SPI	0x20910023	U1	-	-	Output rate of the UBX-NAV-ATT message on port SPI
CFG-MSGOUT-UBX_NAV_ATT_UART1	0x20910020	U1	-	-	Output rate of the UBX-NAV-ATT message on port UART1
CFG-MSGOUT-UBX_NAV_ATT_UART2	0x20910021	U1	-	-	Output rate of the UBX-NAV-ATT message on port UART2
CFG-MSGOUT-UBX_NAV_ATT_USB	0x20910022	U1	-	-	Output rate of the UBX-NAV-ATT message on port USB
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port I2C
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port SPI
CFG-MSGOUT-UBX_NAV_CLOCK_ UART1	0x20910066	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART1
CFG-MSGOUT-UBX_NAV_CLOCK_ UART2	0x20910067	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port UART2
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	Output rate of the UBX-NAV-CLOCK message on port USB
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	Output rate of the UBX-NAV-COV message on port I2C
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	Output rate of the UBX-NAV-COV message on port SPI
CFG-MSGOUT-UBX_NAV_COV_ UART1	0x20910084	U1	-	-	Output rate of the UBX-NAV-COV message on port UART1
CFG-MSGOUT-UBX_NAV_COV_ UART2	0x20910085	U1	-	-	Output rate of the UBX-NAV-COV message on port UART2
CFG-MSGOUT-UBX_NAV_COV_USB	0x20910086	U1	-	-	Output rate of the UBX-NAV-COV message on port USB
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	Output rate of the UBX-NAV-DOP message on port I2C
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	Output rate of the UBX-NAV-DOP message on port SPI
CFG-MSGOUT-UBX_NAV_DOP_ UART1	0x20910039	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART1
CFG-MSGOUT-UBX_NAV_DOP_ UART2	0x2091003a	U1	-	-	Output rate of the UBX-NAV-DOP message on port UART2



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	Output rate of the UBX-NAV-DOP message on port USB
CFG-MSGOUT-UBX_NAV_EELL_I2C	0x20910313	U1	-	-	Output rate of the UBX-NAV-EELL message on port I2C
CFG-MSGOUT-UBX_NAV_EELL_SPI	0x20910317	U1	-	-	Output rate of the UBX-NAV-EELL message on port SPI
CFG-MSGOUT-UBX_NAV_EELL_ UART1	0x20910314	U1	-	-	Output rate of the UBX-NAV-EELL message on port UART1
CFG-MSGOUT-UBX_NAV_EELL_ UART2	0x20910315	U1	-	-	Output rate of the UBX-NAV-EELL message on port UART2
CFG-MSGOUT-UBX_NAV_EELL_USB	0x20910316	U1	-	-	Output rate of the UBX-NAV-EELL message on port USB
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	Output rate of the UBX-NAV-EOE message on port I2C
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	Output rate of the UBX-NAV-EOE message on port SPI
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART1
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	Output rate of the UBX-NAV-EOE message on port UART2
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	Output rate of the UBX-NAV-EOE message on port USB
CFG-MSGOUT-UBX_NAV_ HPPOSECEF_I2C	0x2091002e	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_ HPPOSECEF_SPI	0x20910032	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_ HPPOSECEF_UART1	0x2091002f	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_ HPPOSECEF_UART2	0x20910030	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port UART2
CFG-MSGOUT-UBX_NAV_ HPPOSECEF_USB	0x20910031	U1	-	-	Output rate of the UBX-NAV-HPPOSECEF message on port USB
CFG-MSGOUT-UBX_NAV_HPPOSLLH_ I2C	0x20910033	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_HPPOSLLH_ SPI	0x20910037	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_HPPOSLLH_ UART1	0x20910034	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART1
CFG-MSGOUT-UBX_NAV_HPPOSLLH_ UART2	0x20910035	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port UART2
CFG-MSGOUT-UBX_NAV_HPPOSLLH_ USB	0x20910036	U1	-	-	Output rate of the UBX-NAV-HPPOSLLH message on port USB
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	Output rate of the UBX-NAV-ORB message on port I2C
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	Output rate of the UBX-NAV-ORB message on port SPI
CFG-MSGOUT-UBX_NAV_ORB_ UART1	0x20910011	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART1
CFG-MSGOUT-UBX_NAV_ORB_ UART2	0x20910012	U1	-	-	Output rate of the UBX-NAV-ORB message on port UART2
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	Output rate of the UBX-NAV-ORB message on port USB



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	Output rate of the UBX-NAV-PL message on port I2C
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	Output rate of the UBX-NAV-PL message on port SPI
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	Output rate of the UBX-NAV-PL message on port UART1
CFG-MSGOUT-UBX_NAV_PL_UART2	0x20910417	U1	-	-	Output rate of the UBX-NAV-PL message on port UART2
CFG-MSGOUT-UBX_NAV_PL_USB	0x20910418	U1	-	-	Output rate of the UBX-NAV-PL message on port USB
CFG-MSGOUT-UBX_NAV_POSECEF_ I2C	0x20910024	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port I2C
CFG-MSGOUT-UBX_NAV_POSECEF_ SPI	0x20910028	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port SPI
CFG-MSGOUT-UBX_NAV_POSECEF_ UART1	0x20910025	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART1
CFG-MSGOUT-UBX_NAV_POSECEF_ UART2	0x20910026	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port UART2
CFG-MSGOUT-UBX_NAV_POSECEF_ USB	0x20910027	U1	-	-	Output rate of the UBX-NAV-POSECEF message on port USB
CFG-MSGOUT-UBX_NAV_POSLLH_ I2C	0x20910029	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port I2C
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port SPI
CFG-MSGOUT-UBX_NAV_POSLLH_ UART1	0x2091002a	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART1
CFG-MSGOUT-UBX_NAV_POSLLH_ UART2	0x2091002b	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port UART2
CFG-MSGOUT-UBX_NAV_POSLLH_ USB	0x2091002c	U1	-	-	Output rate of the UBX-NAV-POSLLH message on port USB
CFG-MSGOUT-UBX_NAV_PVAT_I2C	0x2091062a	U1	-	-	Output rate of the UBX-NAV-PVAT message on port I2C
CFG-MSGOUT-UBX_NAV_PVAT_SPI	0x2091062e	U1	-	-	Output rate of the UBX-NAV-PVAT message on port SPI
CFG-MSGOUT-UBX_NAV_PVAT_ UART1	0x2091062b	U1	-	-	Output rate of the UBX-NAV-PVAT message on port UART1
CFG-MSGOUT-UBX_NAV_PVAT_ UART2	0x2091062c	U1	-	-	Output rate of the UBX-NAV-PVAT message on port UART2
CFG-MSGOUT-UBX_NAV_PVAT_USB	0x2091062d	U1	-	-	Output rate of the UBX-NAV-PVAT message on port USB
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	Output rate of the UBX-NAV-PVT message on port I2C
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	Output rate of the UBX-NAV-PVT message on port SPI
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART1
CFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	Output rate of the UBX-NAV-PVT message on port UART2
		111			Output rate of the UBX-NAV-PVT message on
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	UI			port USB



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_ RELPOSNED_SPI	0x20910091	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port SPI
CFG-MSGOUT-UBX_NAV_ RELPOSNED_UART1	0x2091008e	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port UART1
CFG-MSGOUT-UBX_NAV_ RELPOSNED_UART2	0x2091008f	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port UART2
CFG-MSGOUT-UBX_NAV_ RELPOSNED_USB	0x20910090	U1	-	-	Output rate of the UBX-NAV-RELPOSNED message on port USB
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	Output rate of the UBX-NAV-SAT message on port I2C
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	Output rate of the UBX-NAV-SAT message on port SPI
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART1
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	Output rate of the UBX-NAV-SAT message on port UART2
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	Output rate of the UBX-NAV-SAT message on port USB
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	Output rate of the UBX-NAV-SBAS message on port I2C
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	Output rate of the UBX-NAV-SBAS message on port SPI
CFG-MSGOUT-UBX_NAV_SBAS_ UART1	0x2091006b	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART1
CFG-MSGOUT-UBX_NAV_SBAS_ UART2	0x2091006c	U1	-	-	Output rate of the UBX-NAV-SBAS message on port UART2
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	Output rate of the UBX-NAV-SBAS message on port USB
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	Output rate of the UBX-NAV-SIG message on port I2C
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	Output rate of the UBX-NAV-SIG message on port SPI
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART1
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	Output rate of the UBX-NAV-SIG message on port UART2
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	Output rate of the UBX-NAV-SIG message on port USB
CFG-MSGOUT-UBX_NAV_STATUS_ I2C	0x2091001a	U1	-	-	Output rate of the UBX-NAV-STATUS message on port I2C
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	Output rate of the UBX-NAV-STATUS message on port SPI
CFG-MSGOUT-UBX_NAV_STATUS_ UART1	0x2091001b	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART1
CFG-MSGOUT-UBX_NAV_STATUS_ UART2	0x2091001c	U1	-	-	Output rate of the UBX-NAV-STATUS message on port UART2
CFG-MSGOUT-UBX_NAV_STATUS_ USB	0x2091001d	U1	-	-	Output rate of the UBX-NAV-STATUS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEBDS_ I2C	0x20910051	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEBDS_ SPI	0x20910055	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port SPI



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_TIMEBDS_ UART1	0x20910052	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEBDS_ UART2	0x20910053	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEBDS_ USB	0x20910054	U1	-	-	Output rate of the UBX-NAV-TIMEBDS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGAL_ I2C	0x20910056	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGAL_ SPI	0x2091005a	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGAL_ UART1	0x20910057	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGAL_ UART2	0x20910058	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGAL_ USB	0x20910059	U1	-	-	Output rate of the UBX-NAV-TIMEGAL message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGLO_ I2C	0x2091004c	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGLO_ SPI	0x20910050	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGLO_ UART1	0x2091004d	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGLO_ UART2	0x2091004e	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGLO_ USB	0x2091004f	U1	-	-	Output rate of the UBX-NAV-TIMEGLO message on port USB
CFG-MSGOUT-UBX_NAV_TIMEGPS_ I2C	0x20910047	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEGPS_ SPI	0x2091004b	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEGPS_ UART1	0x20910048	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEGPS_ UART2	0x20910049	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEGPS_ USB	0x2091004a	U1	-	-	Output rate of the UBX-NAV-TIMEGPS message on port USB
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMELS_ UART1	0x20910061	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMELS_ UART2	0x20910062	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMELS_ USB	0x20910063	U1	-	-	Output rate of the UBX-NAV-TIMELS message on port USB
CFG-MSGOUT-UBX_NAV_ TIMENAVIC_I2C	0x209106a2	U1	-	-	Output rate of the UBX-NAV-TIMENAVIC message on port I2C
CFG-MSGOUT-UBX_NAV_ TIMENAVIC_SPI	0x209106a6	U1	-	-	Output rate of the UBX-NAV-TIMENAVIC message on port SPI
CFG-MSGOUT-UBX_NAV_ TIMENAVIC_UART1	0x209106a3	U1	-	-	Output rate of the UBX-NAV-TIMENAVIC message on port UART1



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_NAV_ TIMENAVIC_UART2	0x209106a4	U1	=	-	Output rate of the UBX-NAV-TIMENAVIC message on port UART2
CFG-MSGOUT-UBX_NAV_ TIMENAVIC_USB	0x209106a5	U1	-	-	Output rate of the UBX-NAV-TIMENAVIC message on port USB
CFG-MSGOUT-UBX_NAV_TIMEQZSS_ I2C	0x20910386	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEQZSS_ SPI	0x2091038a	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEQZSS_ UART1	0x20910387	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEQZSS_ UART2	0x20910388	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEQZSS_ USB	0x20910389	U1	-	-	Output rate of the UBX-NAV-TIMEQZSS message on port USB
CFG-MSGOUT-UBX_NAV_TIMEUTC_ I2C	0x2091005b	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port I2C
CFG-MSGOUT-UBX_NAV_TIMEUTC_ SPI	0x2091005f	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port SPI
CFG-MSGOUT-UBX_NAV_TIMEUTC_ UART1	0x2091005c	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART1
CFG-MSGOUT-UBX_NAV_TIMEUTC_ UART2	0x2091005d	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port UART2
CFG-MSGOUT-UBX_NAV_TIMEUTC_ USB	0x2091005e	U1	-	-	Output rate of the UBX-NAV-TIMEUTC message on port USB
CFG-MSGOUT-UBX_NAV_VELECEF_ I2C	0x2091003d	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port I2C
CFG-MSGOUT-UBX_NAV_VELECEF_ SPI	0x20910041	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port SPI
CFG-MSGOUT-UBX_NAV_VELECEF_ UART1	0x2091003e	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART1
CFG-MSGOUT-UBX_NAV_VELECEF_ UART2	0x2091003f	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port UART2
CFG-MSGOUT-UBX_NAV_VELECEF_ USB	0x20910040	U1	-	-	Output rate of the UBX-NAV-VELECEF message on port USB
CFG-MSGOUT-UBX_NAV_VELNED_ I2C	0x20910042	U1	-	-	Output rate of the UBX-NAV-VELNED message on port I2C
CFG-MSGOUT-UBX_NAV_VELNED_ SPI	0x20910046	U1	-	-	Output rate of the UBX-NAV-VELNED message on port SPI
CFG-MSGOUT-UBX_NAV_VELNED_ UART1	0x20910043	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART1
CFG-MSGOUT-UBX_NAV_VELNED_ UART2	0x20910044	U1	-	-	Output rate of the UBX-NAV-VELNED message on port UART2
CFG-MSGOUT-UBX_NAV_VELNED_ USB	0x20910045	U1	-	-	Output rate of the UBX-NAV-VELNED message on port USB
CFG-MSGOUT-UBX_RXM_COR_I2C	0x209106b6	U1	-	-	Output rate of the UBX-RXM-COR message on port I2C
CFG-MSGOUT-UBX_RXM_COR_SPI	0x209106ba	U1	-	-	Output rate of the UBX-RXM-COR message on port SPI
CFG-MSGOUT-UBX_RXM_COR_ UART1	0x209106b7	U1	-	-	Output rate of the UBX-RXM-COR message on port UART1
CFG-MSGOUT-UBX_RXM_COR_ UART2	0x209106b8	U1	-	-	Output rate of the UBX-RXM-COR message on port UART2



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_RXM_COR_USB	0x209106b9	U1	-	-	Output rate of the UBX-RXM-COR message on port USB
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	Output rate of the UBX-RXM-MEASX message on port I2C
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	Output rate of the UBX-RXM-MEASX message on port SPI
CFG-MSGOUT-UBX_RXM_MEASX_ UART1	0x20910205	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART1
CFG-MSGOUT-UBX_RXM_MEASX_ UART2	0x20910206	U1	-	-	Output rate of the UBX-RXM-MEASX message on port UART2
CFG-MSGOUT-UBX_RXM_MEASX_ USB	0x20910207	U1	-	-	Output rate of the UBX-RXM-MEASX message on port USB
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	Output rate of the UBX-RXM-RAWX message on port I2C
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	Output rate of the UBX-RXM-RAWX message on port SPI
CFG-MSGOUT-UBX_RXM_RAWX_ UART1	0x209102a5	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART1
CFG-MSGOUT-UBX_RXM_RAWX_ UART2	0x209102a6	U1	-	-	Output rate of the UBX-RXM-RAWX message on port UART2
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	Output rate of the UBX-RXM-RAWX message on port USB
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	Output rate of the UBX-RXM-RLM message on port I2C
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	Output rate of the UBX-RXM-RLM message on port SPI
CFG-MSGOUT-UBX_RXM_RLM_ UART1	0x2091025f	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART1
CFG-MSGOUT-UBX_RXM_RLM_ UART2	0x20910260	U1	-	-	Output rate of the UBX-RXM-RLM message on port UART2
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	Output rate of the UBX-RXM-RLM message on port USB
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	Output rate of the UBX-RXM-RTCM message on port I2C
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	Output rate of the UBX-RXM-RTCM message on port SPI
CFG-MSGOUT-UBX_RXM_RTCM_ UART1	0x20910269	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART1
CFG-MSGOUT-UBX_RXM_RTCM_ UART2	0x2091026a	U1	-	-	Output rate of the UBX-RXM-RTCM message on port UART2
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	Output rate of the UBX-RXM-RTCM message on port USB
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port I2C
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port SPI
CFG-MSGOUT-UBX_RXM_SFRBX_ UART1	0x20910232	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART1
CFG-MSGOUT-UBX_RXM_SFRBX_ UART2	0x20910233	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port UART2
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	Output rate of the UBX-RXM-SFRBX message on port USB



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-MSGOUT-UBX_RXM_SPARTN_ I2C	0x20910605	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port I2C
CFG-MSGOUT-UBX_RXM_SPARTN_ SPI	0x20910609	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port SPI
CFG-MSGOUT-UBX_RXM_SPARTN_ UART1	0x20910606	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART1
CFG-MSGOUT-UBX_RXM_SPARTN_ UART2	0x20910607	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port UART2
CFG-MSGOUT-UBX_RXM_SPARTN_ USB	0x20910608	U1	-	-	Output rate of the UBX-RXM-SPARTN message on port USB
CFG-MSGOUT-UBX_SEC_SIGLOG_I2C	0x20910689	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port I2C
CFG-MSGOUT-UBX_SEC_SIGLOG_SPI	0x2091068d	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port SPI
CFG-MSGOUT-UBX_SEC_SIGLOG_ UART1	0x2091068a	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART1
CFG-MSGOUT-UBX_SEC_SIGLOG_ UART2	0x2091068b	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port UART2
CFG-MSGOUT-UBX_SEC_SIGLOG_ USB	0x2091068c	U1	-	-	Output rate of the UBX-SEC-SIGLOG message on port USB
CFG-MSGOUT-UBX_SEC_SIG_I2C	0x20910634	U1	-	-	Output rate of the UBX-SEC-SIG message on port I2C
CFG-MSGOUT-UBX_SEC_SIG_SPI	0x20910638	U1	-	-	Output rate of the UBX-SEC-SIG message on port SPI
CFG-MSGOUT-UBX_SEC_SIG_UART1	0x20910635	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART1
CFG-MSGOUT-UBX_SEC_SIG_UART2	0x20910636	U1	-	-	Output rate of the UBX-SEC-SIG message on port UART2
CFG-MSGOUT-UBX_SEC_SIG_USB	0x20910637	U1	-	-	Output rate of the UBX-SEC-SIG message on port USB
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	Output rate of the UBX-TIM-TM2 message on port I2C
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c	U1	-	-	Output rate of the UBX-TIM-TM2 message on port SPI
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART1
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	Output rate of the UBX-TIM-TM2 message on port UART2
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	Output rate of the UBX-TIM-TM2 message on port USB
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	Output rate of the UBX-TIM-TP message on port I2C
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	Output rate of the UBX-TIM-TP message on port SPI
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	Output rate of the UBX-TIM-TP message on port UART1
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	Output rate of the UBX-TIM-TP message on port UART2
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	Output rate of the UBX-TIM-TP message on port USB



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	Output rate of the UBX-TIM-VRFY message on port SPI
CFG-MSGOUT-UBX_TIM_VRFY_ UART1	0x20910093	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART1
CFG-MSGOUT-UBX_TIM_VRFY_ UART2	0x20910094	U1	-	-	Output rate of the UBX-TIM-VRFY message on port UART2
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	Output rate of the UBX-TIM-VRFY message on port USB

Table 15: CFG-MSGOUT configuration items

#### 6.9.9 CFG-NAV2: Secondary output configuration

This group contains configuration items related to the secondary (NAV2) output.

Configuration item	Key ID	Туре	Scale	Unit	Description	
CFG-NAV2-OUT_ENABLED	0x10170001	L	-	-	Enable secondary (NAV2) output	
Enables the secondary output (GNSS standalone output). It can be used simultaneously with the available primary output (high precision, sensor fusion or time mode output).						
CFG-NAV2-SBAS_USE_INTEGRITY	0x10170002	L	-	-	Use SBAS integrity information in the secondary output	

If enabled, the receiver uses only GPS satellites for which integrity information is available. This configuration item allows configuring the SBAS integrity feature differently for the primary output and the secondary output. For configuring the primary output, see CFG-SBAS-USE\_INTEGRITY.

Table 16: CFG-NAV2 configuration items

#### 6.9.10 CFG-NAVHPG: High precision navigation configuration

This group configures items related to the operation of the receiver in high precision, for example Differential correction and other related features.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-NAVHPG-DGNSSMODE	0x20140011	_ E1	-	-	Differential corrections mode
See Table 18 below for a list	of possible const	m			

Table 17: CFG-NAVHPG configuration items

Constant	Value	Description
RTK_FLOAT	2	No attempts made to fix ambiguities
RTK_FIXED	3	Ambiguities are fixed whenever possible
RTK_CAR	5	Conservative ambiguity resolution

Table 18: Constants for CFG-NAVHPG-DGNSSMODE

#### 6.9.11 CFG-NAVSPG: Standard precision navigation configuration

This group contains configuration items related to the operation of the receiver at standard precision, including configuring position fix mode, ionospheric model selection and other related items.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-NAVSPG-FIXMODE	0x20110011	_ E1	-	-	Position fix mode
See Table 20 below for a list of	of possible consta	ants fo	r this iten	n.	
CFG-NAVSPG-INIFIX3D	0×10110013	3 L	-	-	Initial fix must be a 3D fix
CFG-NAVSPG-WKNROLLOVER	0x30110017	7 U2	-	-	GPS week rollover number



Configuration item	Key ID	Туре	Scale	Unit	Description
GPS week numbers are set cor	rectly from this	week u	p to 102	4 weeks	after this week.
The range is from 1 to 4096.					
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	UTC standard to be used
See section GNSS time base in	n the integration	manu	al.		
See Table 21 below for a list of	possible consta	nts for	this iter	n.	
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	Dynamic platform model
See Table 22 below for a list of	possible consta	nts for	this iter	n.	
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	Acknowledge assistance input messages
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	Use user geodetic datum parameters
					default WGS84 ellipsoid. All of the CFG-NAVSPG- igured before enabling the user specified geodetic
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	Geodetic datum semi-major axis
Accepted range is from 6,300,	000.0 to 6,500,0	00.0 n	neters		
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	Geodetic datum 1.0 / flattening
Accepted range is 0.0 to 500.0	).				
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	Geodetic datum X axis shift at the origin
Accepted range is +/- 5000.0 r	neters.				
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	Geodetic datum Y axis shift at the origin
Accepted range is +/- 5000.0 r	neters.				
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	Geodetic datum Z axis shift at the origin
Accepted range is +/- 5000.0 r	neters.				_
CFG-NAVSPG-USRDAT ROTX	0x40110067	R4	-	arcsec	Geodetic datum rotation about the X axis
Accepted range is +/- 20.0 mil	i arc seconds.				
CFG-NAVSPG-USRDAT ROTY	0x40110068	R4	-	arcsec	Geodetic datum rotation about the Y axis ()
Accepted range is +/- 20.0 mil					
CFG-NAVSPG-USRDAT ROTZ	0x40110069	R4	_	arcsec	Geodetic datum rotation about the Z axis
Accepted range is +/- 20.0 mil					
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4		ppm	Geodetic datum scale factor
Accepted range is 0.0 to 50.0				1-1-	
CFG-NAVSPG-INFIL MINSVS	0x201100a1			_	Minimum number of satellites for navigation
CFG-NAVSPG-INFIL MAXSVS	0x201100a1		-	_	Maximum number of satellites for navigation
CFG-NAVSPG-INFIL MINCNO	0x201100a2		_	dBHz	Minimum satellite signal level for navigation
<u> </u>					Minimum elevation for a GNSS satellite to be
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	used in navigation
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	Number of satellites required to have C/N0 above CFG-NAVSPG-INFIL_CNOTHRS for a fix to be attempted
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	C/N0 threshold for deciding whether to attempt a fix
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	Output filter position DOP mask (threshold)
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	Output filter time DOP mask (threshold)
CFG-NAVSPG-OUTFIL PACC	0x301100b3	U2	-	m	Output filter position accuracy mask (threshold)
CI O-NAVSI O-OOTI IL_I ACC					



Configuration item	Key ID	Туре	Scale	Unit	Description		
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	, U2	0.01	m/s	Output filter frequency accuracy mask (threshold)		
CFG-NAVSPG-CONSTR_ALT	0x401100c1	14	0.01	m	Fixed altitude (mean sea level) for 2D fix mode		
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	Fixed altitude variance for 2D mode		
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	s	DGNSS timeout		
CFG-NAVSPG-SIGATTCOMP	0x201100d6	E1	-	-	Permanently attenuated signal compensation mode		
See Table 23 below for a list of possible constants for this item.							
CFG-NAVSPG-PL_ENA	0x101100d7	L	-	-	Enable Protection level		
If enabled, protection level computing is on.							

Table 19: CFG-NAVSPG configuration items

Constant	Value	Description
2DONLY	1	2D only
3DONLY	2	3D only
AUTO	3	Auto 2D/3D

#### Table 20: Constants for CFG-NAVSPG-FIXMODE

Constant	Value	Description
AUTO	0	Automatic; receiver selects based on GNSS configuration
USNO	3	UTC as operated by the U.S. Naval Observatory (USNO); derived from GPS time
EU	5	UTC as combined from multiple European laboratories; derived from Galileo time
SU	6	UTC as operated by the former Soviet Union (SU); derived from GLONASS time
NTSC	7	UTC as operated by the National Time Service Center (NTSC), China; derived from BeiDou time
NPLI	8	UTC as operated by the National Physics Laboratory, India (NPLI); derived from NavIC time
NICT	9	UTC as operated by the National Institute of Information and Communications Technology, Japan (NICT); derived from QZSS time

#### Table 21: Constants for CFG-NAVSPG-UTCSTANDARD

Constant	Value	Description
PORT	0	Portable
STAT	2	Stationary
PED	3	Pedestrian
AUTOMOT	4	Automotive
SEA	5	Sea
AIR1	6	Airborne with <1g acceleration
AIR2	7	Airborne with <2g acceleration
AIR4	8	Airborne with <4g acceleration
WRIST	9	Wrist-worn watch (not available in all products)
BIKE	10	Motorbike (not available in all products)
MOWER	11	Robotic lawn mower (not available in all products)
ESCOOTER	12	E-scooter (not available in all products)



Constant	Value	Description
RAIL	13	Rail vehicles (trains, trams) (not available in all products)

#### Table 22: Constants for CFG-NAVSPG-DYNMODEL

Constant	Value	Description
DIS	0	Disable signal attenuation compensation
AUTO	255	Automatic signal attenuation compensation
01DBHZ	1	Maximum expected C/NO level is 1 dBHz
02DBHZ	2	Maximum expected C/NO level is 2 dBHz
03DBHZ	3	Maximum expected C/NO level is 3 dBHz
04DBHZ	4	Maximum expected C/NO level is 4 dBHz
05DBHZ	5	Maximum expected C/NO level is 5 dBHz
06DBHZ	6	Maximum expected C/NO level is 6 dBHz
07DBHZ	7	Maximum expected C/NO level is 7 dBHz
08DBHZ	8	Maximum expected C/NO level is 8 dBHz
09DBHZ	9	Maximum expected C/NO level is 9 dBHz
10DBHZ	10	Maximum expected C/NO level is 10 dBHz
11DBHZ	11	Maximum expected C/NO level is 11 dBHz
12DBHZ	12	Maximum expected C/NO level is 12 dBHz
13DBHZ	13	Maximum expected C/NO level is 13 dBHz
14DBHZ	14	Maximum expected C/NO level is 14 dBHz
15DBHZ	15	Maximum expected C/NO level is 15 dBHz
16DBHZ	16	Maximum expected C/NO level is 16 dBHz
17DBHZ	17	Maximum expected C/NO level is 17 dBHz
18DBHZ	18	Maximum expected C/NO level is 18 dBHz
19DBHZ	19	Maximum expected C/NO level is 19 dBHz
20DBHZ	20	Maximum expected C/NO level is 20 dBHz
21DBHZ	21	Maximum expected C/NO level is 21 dBHz
22DBHZ	22	Maximum expected C/NO level is 22 dBHz
23DBHZ	23	Maximum expected C/NO level is 23 dBHz
24DBHZ	24	Maximum expected C/NO level is 24 dBHz
25DBHZ	25	Maximum expected C/NO level is 25 dBHz
26DBHZ	26	Maximum expected C/NO level is 26 dBHz
27DBHZ	27	Maximum expected C/NO level is 27 dBHz
28DBHZ	28	Maximum expected C/NO level is 28 dBHz
29DBHZ	29	Maximum expected C/NO level is 29 dBHz
30DBHZ	30	Maximum expected C/NO level is 30 dBHz
31DBHZ	31	Maximum expected C/NO level is 31 dBHz
32DBHZ	32	Maximum expected C/NO level is 32 dBHz
33DBHZ	33	Maximum expected C/NO level is 33 dBHz
34DBHZ	34	Maximum expected C/NO level is 34 dBHz
35DBHZ	35	Maximum expected C/NO level is 35 dBHz



Constant	Value	Description
36DBHZ	36	Maximum expected C/NO level is 36 dBHz
37DBHZ	37	Maximum expected C/NO level is 37 dBHz
38DBHZ	38	Maximum expected C/NO level is 38 dBHz
39DBHZ	39	Maximum expected C/NO level is 39 dBHz
40DBHZ	40	Maximum expected C/NO level is 40 dBHz
41DBHZ	41	Maximum expected C/NO level is 41 dBHz
42DBHZ	42	Maximum expected C/NO level is 42 dBHz
43DBHZ	43	Maximum expected C/NO level is 43 dBHz
44DBHZ	44	Maximum expected C/NO level is 44 dBHz
45DBHZ	45	Maximum expected C/NO level is 45 dBHz
46DBHZ	46	Maximum expected C/NO level is 46 dBHz
47DBHZ	47	Maximum expected C/NO level is 47 dBHz
48DBHZ	48	Maximum expected C/NO level is 48 dBHz
49DBHZ	49	Maximum expected C/NO level is 49 dBHz
50DBHZ	50	Maximum expected C/NO level is 50 dBHz
51DBHZ	51	Maximum expected C/NO level is 51 dBHz
52DBHZ	52	Maximum expected C/NO level is 52 dBHz
53DBHZ	53	Maximum expected C/NO level is 53 dBHz
54DBHZ	54	Maximum expected C/NO level is 54 dBHz
55DBHZ	55	Maximum expected C/NO level is 55 dBHz
56DBHZ	56	Maximum expected C/NO level is 56 dBHz
57DBHZ	57	Maximum expected C/NO level is 57 dBHz
58DBHZ	58	Maximum expected C/NO level is 58 dBHz
59DBHZ	59	Maximum expected C/NO level is 59 dBHz
60DBHZ	60	Maximum expected C/NO level is 60 dBHz
61DBHZ	61	Maximum expected C/NO level is 61 dBHz
62DBHZ	62	Maximum expected C/NO level is 62 dBHz
63DBHZ	63	Maximum expected C/NO level is 63 dBHz

Table 23: Constants for CFG-NAVSPG-SIGATTCOMP

## 6.9.12 CFG-NMEA: NMEA protocol configuration

This group configures the NMEA protocol. See section NMEA protocol configuration for a detailed description of the configuration effects on NMEA output.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-NMEA-PROTVER	0x20930001	E1	<b>-</b> ,	-	NMEA protocol version
See Table 25 below for a	list of possible consta	ants for	r this iten	n.	
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	Maximum number of SVs to report per Talker ID
See Table 26 below for a	list of possible consta	ants fo	r this iten	n.	
CFG-NMEA-COMPAT	0x10930003	L	-	-	Enable compatibility mode
This might be needed for coordinates.	r certain applications	e.g. fo	r an NME	A parse	er that expects a fixed number of digits in position
CFG-NMEA-CONSIDER	0×10930004	L	-	-	Enable considering mode



Configuration item	Key ID	Type	Scale	Unit	Description
This affects the way the use (e.g. RAIMED) are counted a			A output	is calcu	lated. If set, also considered but rejected satellites
CFG-NMEA-LIMIT82	0x10930005	5 L	-	-	Enable strict limit to 82 characters maximum NMEA message length
CFG-NMEA-HIGHPREC	0x10930006	5 L	-	-	Enable high precision mode
This flag cannot be set in co	onjunction with eit	her CF0	3-NMEA-	-COMPA	AT or CFG-NMEA-LIMIT82 mode.
CFG-NMEA-SVNUMBERING	0x20930007	7 <b>E1</b>	-	-	Display configuration for SVs that do not have value defined in NMEA

Configures the display of satellites that do not have an NMEA-defined value.

Note: this does not apply to satellites with an unknown ID.

See also Satellite Numbering.

See Table 27 below for a list of possible constants for this item.

CFG-NMEA-FILT_GPS	0x10930011 L	-	- Disable reporting of GPS satellites
CFG-NMEA-FILT_SBAS	0x10930012 L	-	- Disable reporting of SBAS satellites
CFG-NMEA-FILT_GAL	0x10930013 L	-	- Disable reporting of Galileo satellites
CFG-NMEA-FILT_QZSS	0x10930015 L	-	- Disable reporting of QZSS satellites
CFG-NMEA-FILT_GLO	0x10930016 L	-	- Disable reporting of GLONASS satellites
CFG-NMEA-FILT_BDS	0x10930017 L	-	- Disable reporting of BeiDou satellites
CFG-NMEA-FILT_NAVIC	0x10930018 L	-	- Disable reporting of NavIC satellites
CFG-NMEA-OUT_INVFIX	0x10930021 L	-	- Enable position output for failed or invalid fixes
CFG-NMEA-OUT_MSKFIX	0x10930022 L	-	- Enable position output for invalid fixes
CFG-NMEA-OUT_INVTIME	0x10930023 L	-	- Enable time output for invalid times
CFG-NMEA-OUT_INVDATE	0x10930024 L	-	- Enable date output for invalid dates
CFG-NMEA-OUT_ONLYGPS	0x10930025 L	-	- Restrict output to GPS satellites only
CFG-NMEA-OUT_FROZENCOG	0x10930026 L	-	- Enable course over ground output even if it is frozen
CFG-NMEA-MAINTALKERID	0x20930031 <b>E1</b>	-	- Main Talker ID

By default the main Talker ID (i.e. the Talker ID used for all messages other than GSV) is determined by the GNSS assignment of the receiver's channels (see CFG-SIGNAL).

This field enables the main Talker ID to be overridden.

See Table 28 below for a list of possible constants for this item.

CFG-NMEA-GSVTALKERID

0x20930032 **E1** 

Talker ID for GSV NMEA messages

By default the Talker ID for GSV messages is GNSS-specific (as defined by NMEA).

This field enables the GSV Talker ID to be overridden.

See Table 29 below for a list of possible constants for this item.

CFG-NMEA-BDSTALKERID

0x30930033 **U2** 

BeiDou Talker ID

Sets the two ASCII characters that should be used for the BeiDou Talker ID.

If these are set to zero, the receiver uses the default BeiDou Talker ID.

#### Table 24: CFG-NMEA configuration items

Constant	Value	Description
V21	21	NMEA protocol version 2.1
V23	23	NMEA protocol version 2.3
V40	40	NMEA protocol version 4.0 (not available in all products)
V41	41	NMEA protocol version 4.10 (not available in all products)



Constant	Value	Description
V411	42	NMEA protocol version 4.11 (not available in all products)

#### Table 25: Constants for CFG-NMEA-PROTVER

Constant	Value	Description
UNLIM	0	Unlimited
8SVS	8	8 SVs
125VS	12	12 SVs
16SVS	16	16 SVs

Table 26: Constants for CFG-NMEA-MAXSVS

Constant	Value	Description
STRICT	0	Strict - satellites are not output
EXTENDED	1	Extended - use proprietary numbering

Table 27: Constants for CFG-NMEA-SVNUMBERING

Constant	Value	Description
AUTO	0	Main Talker ID is not overridden
GP	1	Set main Talker ID to 'GP'
GL	2	Set main Talker ID to 'GL'
GN	3	Set main Talker ID to 'GN'
GA	4	Set main Talker ID to 'GA' (not available in all products)
GB	5	Set main Talker ID to 'GB' (not available in all products)
GQ	7	Set main Talker ID to 'GQ' (not available in all products)

Table 28: Constants for CFG-NMEA-MAINTALKERID

Constant	Value	Description	
GNSS	0	Use GNSS-specific Talker ID (as defined by NMEA)	
MAIN	1	Use the main Talker ID	

Table 29: Constants for CFG-NMEA-GSVTALKERID

#### 6.9.13 CFG-RATE: Navigation and measurement rate configuration

The configuration items in this group allow the user to alter the rate at which navigation solutions (and the measurements that they depend on) are generated by the receiver. The calculation of the navigation solution is aligned to the top of a second zero (first second of the week) of the configured reference time system. The navigation period is an integer multiple of the measurement period.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-RATE-MEAS	0x30210001	U2	0.001	s	Nominal time between GNSS measurements
E.g. 100 ms results in 10 h	lz measurement rat	e, 1000	) ms = 1 l	dz meas	surement rate.
CFG-RATE-NAV	0x30210002	U2	-	-	Ratio of number of measurements to number of navigation solutions
E.g. 5 means five measure	ments for every nav	igation	solution	. The m	inimum value is 1. The maximum value is 127.
CFG-RATE-TIMEREF	0x20210003	E1	-	-	Time system to which measurements are aligned
See Table 31 below for a list	st of possible consta	ants for	r this iten	n.	
CFG-RATE-NAV_PRIO	0x20210004	U1	-	Hz	Output rate of priority navigation mode messages



Confiduration item Revio Type Scale Only Descript	Configuration item	Key ID	Type Scale	Unit	Description
---	--------------------	--------	------------	------	-------------

When not zero, the receiver outputs navigation data as a set of messages with two priority levels: 1) *Priority messages:* Navigation solution data are computed and output with high rate and low latency; 2) *Non-priority messages* auxiliary navigation data are computed and output with low rate and higher latency.

When zero, the receiver outputs the navigation data as a set of messages with the same priority.

The priority messages are: UBX-NAV-PVT, UBX-NAV-POSECEF, UBX-NAV-POSLLH, UBX-NAV-VELECEF, UBX-NAV-VELNED, UBX-NAV-HPPOSECEF, UBX-NAV-HPPOSLLH, UBX-ESF-INS, UBX-NAV-ATT, UBX-NAV-PVAT, NMEA-Standard-DTM, NMEA-Standard-RMC, NMEA-Standard-VTG, NMEA-Standard-GNS, NMEA-Standard-GLL, NMEA-Standard-THS and NMEA-PUBX-POSITION. Note that some of these messages are not available on some products.

See section Priority navigation mode in the product Integration manual for more information.

#### Table 30: CFG-RATE configuration items

Constant	Value	Description
UTC	0	Align measurements to UTC time
GPS	1	Align measurements to GPS time
GLO	2	Align measurements to GLONASS time
BDS	3	Align measurements to BeiDou time
GAL	4	Align measurements to Galileo time
NAVIC	5	Align measurements to NavIC time

Table 31: Constants for CFG-RATE-TIMEREF

## 6.9.14 CFG-RTCM: RTCM protocol configuration

Configures the RTCM protocol.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-RTCM-DF003_IN	0x30090008	U2	-	-	RTCM DF003 (Reference station ID) input value
Value to use for filtering out RTCM input messages based on their DF003 data field (Reference station ID) value. To be					
used in conjunction with CFG-RTCM-DF003_IN_FILTER. The value can be 04095.					

Configures if and how the filtering out of RTCM input messages based on their DF003 data field (Reference station ID) operates.

See Table 33 below for a list of possible constants for this item.

Table 32: CFG-RTCM configuration items

Constant	Value	Description
DISABLED	0	Disabled RTCM input filter; all input messages allowed
RELAXED	1	Relaxed RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003_IN value or not contain by specification the DF003 data field
STRICT	2	Strict RTCM input filter; input messages allowed must contain a DF003 data field matching the CFG-RTCM-DF003 value

Table 33: Constants for CFG-RTCM-DF003\_IN\_FILTER

## 6.9.15 CFG-SBAS: SBAS configuration

This group configures the SBAS receiver subsystem (i.e. WAAS, EGNOS, MSAS). See SBAS configuration settings description in the integration manual for a detailed description of how these settings affect receiver operation.



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	Use SBAS data when it is in test mode (SBAS msg 0)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	Use SBAS GEOs as a ranging source (for navigation)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	Use SBAS differential corrections
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	Use SBAS integrity information
If enabled, the receiver uses	only GPS satellite	s for wl	hich inte	grity inf	ormation is available
CFG-SBAS-ACCEPT_NOT_IN_ PRNMASK	0x30360008	X2	-	-	Accept corrections from SBAS SV, even if not self included in PRN MASK (Message Type 1)

If enabled, the receiver will still use the SBAS data, even when the SBAS SV itself is not included in its PRN MASK. This is only useful for BDSBAS and not compatible whith current EGNOS implementation.

See Table 35 below for a list of possible constants for this item.

CFG-SBAS-USE_IONOONLY	0x10360007 L	-	-	Use SBAS ionosphere correction only
CFG-SBAS-PRNSCANMASK	0x50360006 X8	-	-	SBAS PRN search configuration

This configuration item determines which SBAS PRNs should be searched. Setting it to 0 indicates auto-scanning all SBAS PRNs. For non-zero values the bits correspond to the allocated SBAS PRNs ranging from PRN120 (bit 0) to PRN158 (bit 38), where a bit set enables searching for the corresponding PRN.

See Table 36 below for a list of possible constants for this item.

#### Table 34: CFG-SBAS configuration items

Constant	Value	Description
WAAS	0x01	WAAS bit
1 = Use WAAS provider ld.		
EGNOS	0x02	EGNOS bit
1 = Use EGNOS provider ld.		
MSAS	0x04	MSAS bit
1 = Use MSAS provider ld.		
GAGAN	0x08	GAGAN bit
1 = Use GAGAN provider ld		
SDCM	0x10	SDCM bit
1 = Use SDCM provider ld.		
BDSBAS	0x20	BDSBAS bit
1 = Use BDSBAS provider lo	d.	
KASS	0x40	KASS bit
1 = Use KASS provider Id.		

#### Table 35: Constants for CFG-SBAS-ACCEPT\_NOT\_IN\_PRNMASK

Value	Constant
0x0000000000000000	ALL
0x00000000000000001	PRN120
0x00000000000000000	PRN121
0x0000000000000004	PRN122
0x000000000000000	PRN123
0x00000000000000010	PRN124
0x000000000000000000000000000000000000	PRN125
0x0000000000000040	PRN126



PRN127         0x0000000000000000         Enable search for SBAS PRN127           PRN128         0x00000000000000000         Enable search for SBAS PRN128           PRN129         0x000000000000000000         Enable search for SBAS PRN129           PRN130         0x0000000000000000000         Enable search for SBAS PRN130           PRN131         0x000000000000000000         Enable search for SBAS PRN131           PRN132         0x000000000000000000         Enable search for SBAS PRN132           PRN133         0x00000000000000000000000000000000000	Constant	Value	Description
PRN129         0x0000000000000000         Enable search for SBAS PRN130           PRN130         0x00000000000000000         Enable search for SBAS PRN131           PRN131         0x00000000000000000         Enable search for SBAS PRN131           PRN132         0x0000000000000000000         Enable search for SBAS PRN132           PRN133         0x0000000000000000000         Enable search for SBAS PRN134           PRN134         0x00000000000000000         Enable search for SBAS PRN134           PRN135         0x000000000000000000         Enable search for SBAS PRN136           PRN136         0x000000000000000000         Enable search for SBAS PRN136           PRN137         0x0000000000000000000         Enable search for SBAS PRN137           PRN138         0x0000000000000000000         Enable search for SBAS PRN138           PRN139         0x00000000000000000         Enable search for SBAS PRN139           PRN140         0x000000000000000000         Enable search for SBAS PRN140           PRN141         0x000000000000000000         Enable search for SBAS PRN140           PRN142         0x000000000000000000         Enable search for SBAS PRN143           PRN143         0x00000000000000000000000000000000000	PRN127	0x000000000000000000000000000000000000	Enable search for SBAS PRN127
PRNI30         0x0000000000000000         Enable search for SBAS PRN130           PRNI31         0x0000000000000000         Enable search for SBAS PRN131           PRNI32         0x000000000000000000         Enable search for SBAS PRN133           PRNI33         0x00000000000000000000         Enable search for SBAS PRN134           PRN134         0x000000000000000000         Enable search for SBAS PRN134           PRN135         0x00000000000000000         Enable search for SBAS PRN136           PRN136         0x000000000000000000         Enable search for SBAS PRN136           PRN137         0x000000000000000000         Enable search for SBAS PRN137           PRN138         0x0000000000000000000         Enable search for SBAS PRN138           PRN139         0x000000000000000000         Enable search for SBAS PRN139           PRN140         0x000000000000000000         Enable search for SBAS PRN140           PRN141         0x000000000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000000         Enable search for SBAS PRN142           PRN143         0x000000000000000000         Enable search for SBAS PRN144           PRN144         0x000000000000000000         Enable search for SBAS PRN145           PRN145         0x00000000000000000000000000000000000	PRN128	0x0000000000000100	Enable search for SBAS PRN128
PRN131         0x00000000000000000         Enable search for SBAS PRN131           PRN132         0x0000000000000000         Enable search for SBAS PRN132           PRN133         0x00000000000000000         Enable search for SBAS PRN133           PRN134         0x000000000000000000         Enable search for SBAS PRN134           PRN135         0x000000000000000000         Enable search for SBAS PRN135           PRN136         0x000000000000000000         Enable search for SBAS PRN136           PRN137         0x0000000000000000000         Enable search for SBAS PRN137           PRN138         0x0000000000000000000         Enable search for SBAS PRN138           PRN139         0x00000000000000000         Enable search for SBAS PRN139           PRN140         0x00000000000000000         Enable search for SBAS PRN140           PRN141         0x000000000000000         Enable search for SBAS PRN140           PRN142         0x00000000000000         Enable search for SBAS PRN142           PRN143         0x000000000000000         Enable search for SBAS PRN143           PRN144         0x0000000000000000         Enable search for SBAS PRN144           PRN145         0x0000000000000000         Enable search for SBAS PRN145           PRN146         0x00000000000000000000000000000000000	PRN129	0x000000000000000000000000000000000000	Enable search for SBAS PRN129
PRNI32         0x0000000000001000         Enable search for SBAS PRN132           PRNI33         0x0000000000000000         Enable search for SBAS PRN133           PRNI34         0x000000000000000000         Enable search for SBAS PRN134           PRNI35         0x000000000000000         Enable search for SBAS PRN135           PRNI36         0x0000000000000000         Enable search for SBAS PRN136           PRNI37         0x00000000000000000         Enable search for SBAS PRN137           PRNI38         0x00000000000000000         Enable search for SBAS PRN138           PRNI39         0x00000000000000000         Enable search for SBAS PRN139           PRNI40         0x000000000000000         Enable search for SBAS PRN140           PRN141         0x00000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000         Enable search for SBAS PRN142           PRN143         0x0000000000000000         Enable search for SBAS PRN143           PRN144         0x00000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000         Enable search for SBAS PRN146           PRN147         0x000000000000000         Enable search for SBAS PRN149           PRN150 <td>PRN130</td> <td>0x0000000000000400</td> <td>Enable search for SBAS PRN130</td>	PRN130	0x0000000000000400	Enable search for SBAS PRN130
PRN133         0x00000000000000000000000000000000000	PRN131	0x000000000000000000	Enable search for SBAS PRN131
PRN134         0x0000000000000000         Enable search for SBAS PRN134           PRN135         0x0000000000000000         Enable search for SBAS PRN135           PRN136         0x0000000000000000000         Enable search for SBAS PRN136           PRN137         0x00000000000000000000000000000000000	PRN132	0x000000000001000	Enable search for SBAS PRN132
PRN135         0x0000000000000000         Enable search for SBAS PRN135           PRN136         0x00000000000000000         Enable search for SBAS PRN136           PRN137         0x00000000000000000         Enable search for SBAS PRN137           PRN138         0x000000000000000         Enable search for SBAS PRN138           PRN139         0x000000000000000         Enable search for SBAS PRN139           PRN140         0x000000000000000         Enable search for SBAS PRN140           PRN141         0x0000000000000000         Enable search for SBAS PRN141           PRN142         0x0000000000000000         Enable search for SBAS PRN142           PRN143         0x0000000000000000         Enable search for SBAS PRN143           PRN144         0x000000000000000         Enable search for SBAS PRN144           PRN145         0x00000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000         Enable search for SBAS PRN146           PRN147         0x000000000000000         Enable search for SBAS PRN147           PRN148         0x000000000000000         Enable search for SBAS PRN149           PRN150         0x000000000000000         Enable search for SBAS PRN150           PRN151         0x0000000000000000         Enable search for SBAS PRN151           PRN152	PRN133	0x0000000000002000	Enable search for SBAS PRN133
PRN136         0x0000000000000000         Enable search for SBAS PRN136           PRN137         0x0000000000000000         Enable search for SBAS PRN137           PRN138         0x000000000000000         Enable search for SBAS PRN138           PRN139         0x0000000000000000         Enable search for SBAS PRN139           PRN140         0x000000000000000000         Enable search for SBAS PRN140           PRN141         0x0000000000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000000         Enable search for SBAS PRN142           PRN143         0x0000000000000000         Enable search for SBAS PRN143           PRN144         0x000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000         Enable search for SBAS PRN146           PRN146         0x00000000000000000         Enable search for SBAS PRN146           PRN147         0x00000000000000000         Enable search for SBAS PRN148           PRN148         0x00000000000000000000000000         Enable search for SBAS PRN149           PRN150         0x00000000000000000000000000000000000	PRN134	0x000000000004000	Enable search for SBAS PRN134
PRN137         0x0000000000000000         Enable search for SBAS PRN137           PRN138         0x00000000000000000         Enable search for SBAS PRN138           PRN139         0x000000000000000000         Enable search for SBAS PRN139           PRN140         0x000000000000000000         Enable search for SBAS PRN140           PRN141         0x0000000000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000000         Enable search for SBAS PRN142           PRN143         0x000000000000000000         Enable search for SBAS PRN143           PRN144         0x0000000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000000         Enable search for SBAS PRN146           PRN147         0x000000000000000000         Enable search for SBAS PRN149           PRN148         0x00000000000000000         Enable search for SBAS PRN149           PRN150         0x0000000000000000000         Enable search for SBAS PRN150           PRN151         0x0000000000000000000         Enable search for SBAS PRN151           PRN153         0x0000000000000000000         Enable search for SBAS PRN154           PRN154         0x00000000000000000000000000000000000	PRN135	0x000000000008000	Enable search for SBAS PRN135
PRN138         0x00000000000000000         Enable search for SBAS PRN138           PRN139         0x0000000000000000         Enable search for SBAS PRN139           PRN140         0x00000000000000         Enable search for SBAS PRN140           PRN141         0x00000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000         Enable search for SBAS PRN142           PRN143         0x000000000000000         Enable search for SBAS PRN143           PRN144         0x000000000000000         Enable search for SBAS PRN144           PRN145         0x00000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000         Enable search for SBAS PRN146           PRN147         0x00000000000000         Enable search for SBAS PRN148           PRN148         0x00000000000000         Enable search for SBAS PRN149           PRN150         0x00000000000000         Enable search for SBAS PRN150           PRN151         0x00000000000000         Enable search for SBAS PRN151           PRN152         0x00000000000000         Enable search for SBAS PRN152           PRN153         0x000000000000000         Enable search for SBAS PRN154           PRN154         0x0000000000000000         Enable search for SBAS PRN155           PRN155         0x0	PRN136	0x000000000010000	Enable search for SBAS PRN136
PRN139         0x00000000000000000         Enable search for SBAS PRN139           PRN140         0x00000000000000000         Enable search for SBAS PRN140           PRN141         0x000000000000000000         Enable search for SBAS PRN141           PRN142         0x000000000000000000         Enable search for SBAS PRN142           PRN143         0x00000000000000000         Enable search for SBAS PRN143           PRN144         0x000000001000000         Enable search for SBAS PRN144           PRN145         0x00000000000000         Enable search for SBAS PRN145           PRN146         0x00000000000000         Enable search for SBAS PRN146           PRN147         0x00000000000000         Enable search for SBAS PRN147           PRN148         0x00000000000000         Enable search for SBAS PRN149           PRN149         0x0000000000000         Enable search for SBAS PRN150           PRN150         0x0000000000000         Enable search for SBAS PRN151           PRN151         0x0000000000000         Enable search for SBAS PRN152           PRN153         0x0000000000000         Enable search for SBAS PRN153           PRN154         0x00000000000000         Enable search for SBAS PRN155           PRN155         0x000000000000000         Enable search for SBAS PRN156           PRN157	PRN137	0x000000000020000	Enable search for SBAS PRN137
PRN140         0x0000000000100000         Enable search for SBAS PRN140           PRN141         0x00000000000000000         Enable search for SBAS PRN141           PRN142         0x0000000000000000000         Enable search for SBAS PRN142           PRN143         0x000000000000000000         Enable search for SBAS PRN143           PRN144         0x000000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000000         Enable search for SBAS PRN146           PRN147         0x000000000000000000         Enable search for SBAS PRN147           PRN148         0x000000000000000000         Enable search for SBAS PRN148           PRN149         0x000000000000000000         Enable search for SBAS PRN149           PRN150         0x000000000000000000         Enable search for SBAS PRN150           PRN151         0x000000000000000000         Enable search for SBAS PRN151           PRN152         0x0000000000000000000         Enable search for SBAS PRN153           PRN153         0x0000000000000000000         Enable search for SBAS PRN154           PRN154         0x00000000000000000000000000000000000	PRN138	0x000000000040000	Enable search for SBAS PRN138
PRN141         0x0000000000000000         Enable search for SBAS PRN141           PRN142         0x00000000000000000         Enable search for SBAS PRN142           PRN143         0x0000000000000000000         Enable search for SBAS PRN143           PRN144         0x0000000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000000         Enable search for SBAS PRN146           PRN147         0x000000000000000000         Enable search for SBAS PRN149           PRN148         0x000000000000000000         Enable search for SBAS PRN149           PRN149         0x000000000000000000         Enable search for SBAS PRN150           PRN150         0x000000000000000000         Enable search for SBAS PRN151           PRN151         0x000000000000000000         Enable search for SBAS PRN152           PRN152         0x000000000000000000         Enable search for SBAS PRN153           PRN153         0x000000000000000000         Enable search for SBAS PRN154           PRN154         0x000000000000000000         Enable search for SBAS PRN155           PRN155         0x000000000000000000         Enable search for SBAS PRN156           PRN156         0x00000000000000000000000000000000000	PRN139	0x000000000080000	Enable search for SBAS PRN139
PRN142         0x0000000000400000         Enable search for SBAS PRN142           PRN143         0x00000000000000000         Enable search for SBAS PRN143           PRN144         0x00000000000000         Enable search for SBAS PRN144           PRN145         0x0000000000000         Enable search for SBAS PRN145           PRN146         0x000000000000000         Enable search for SBAS PRN146           PRN147         0x00000000000000         Enable search for SBAS PRN147           PRN148         0x00000001000000         Enable search for SBAS PRN148           PRN149         0x0000000000000         Enable search for SBAS PRN149           PRN150         0x00000000000000         Enable search for SBAS PRN150           PRN151         0x00000000000000         Enable search for SBAS PRN151           PRN152         0x00000000000000         Enable search for SBAS PRN153           PRN153         0x000000000000000         Enable search for SBAS PRN153           PRN154         0x0000000000000000         Enable search for SBAS PRN155           PRN155         0x0000000000000000         Enable search for SBAS PRN156           PRN156         0x000000000000000000         Enable search for SBAS PRN157	PRN140	0x000000000100000	Enable search for SBAS PRN140
PRN143         0x0000000000000000         Enable search for SBAS PRN143           PRN144         0x00000000000000000         Enable search for SBAS PRN144           PRN145         0x000000000000000000         Enable search for SBAS PRN145           PRN146         0x0000000000000000000         Enable search for SBAS PRN146           PRN147         0x00000000000000000         Enable search for SBAS PRN147           PRN148         0x00000001000000         Enable search for SBAS PRN148           PRN149         0x0000000000000         Enable search for SBAS PRN149           PRN150         0x0000000000000         Enable search for SBAS PRN150           PRN151         0x0000000000000         Enable search for SBAS PRN151           PRN152         0x0000000000000         Enable search for SBAS PRN152           PRN153         0x00000000000000         Enable search for SBAS PRN153           PRN154         0x000000000000000         Enable search for SBAS PRN154           PRN155         0x000000000000000         Enable search for SBAS PRN155           PRN156         0x0000001000000000         Enable search for SBAS PRN156           PRN157         0x00000000000000000         Enable search for SBAS PRN157	PRN141	0x000000000200000	Enable search for SBAS PRN141
PRN144         0x000000001000000         Enable search for SBAS PRN144           PRN145         0x0000000002000000         Enable search for SBAS PRN145           PRN146         0x00000000000000000000         Enable search for SBAS PRN146           PRN147         0x0000000000000000000         Enable search for SBAS PRN147           PRN148         0x0000000010000000         Enable search for SBAS PRN148           PRN149         0x000000000000000000         Enable search for SBAS PRN149           PRN150         0x000000000000000000000000         Enable search for SBAS PRN150           PRN151         0x0000000000000000000000000000000000         Enable search for SBAS PRN151           PRN152         0x00000000000000000000000000000000000	PRN142	0x000000000400000	Enable search for SBAS PRN142
PRN145         0x00000000000000000         Enable search for SBAS PRN145           PRN146         0x0000000004000000         Enable search for SBAS PRN146           PRN147         0x00000000000000         Enable search for SBAS PRN147           PRN148         0x000000010000000         Enable search for SBAS PRN148           PRN149         0x00000000000000         Enable search for SBAS PRN149           PRN150         0x00000004000000         Enable search for SBAS PRN150           PRN151         0x0000000000000         Enable search for SBAS PRN151           PRN152         0x00000010000000         Enable search for SBAS PRN152           PRN153         0x0000000000000         Enable search for SBAS PRN153           PRN154         0x0000000000000         Enable search for SBAS PRN154           PRN155         0x0000000000000         Enable search for SBAS PRN155           PRN156         0x0000001000000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN143	0x000000000800000	Enable search for SBAS PRN143
PRN146         0x000000000400000         Enable search for SBAS PRN146           PRN147         0x00000000000000000         Enable search for SBAS PRN147           PRN148         0x000000010000000         Enable search for SBAS PRN148           PRN149         0x00000002000000         Enable search for SBAS PRN149           PRN150         0x00000004000000         Enable search for SBAS PRN150           PRN151         0x0000000000000         Enable search for SBAS PRN151           PRN152         0x00000010000000         Enable search for SBAS PRN152           PRN153         0x00000020000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x000000000000000         Enable search for SBAS PRN155           PRN156         0x000000200000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN144	0x000000001000000	Enable search for SBAS PRN144
PRN147         0x0000000008000000         Enable search for SBAS PRN147           PRN148         0x000000010000000         Enable search for SBAS PRN148           PRN149         0x0000000020000000         Enable search for SBAS PRN149           PRN150         0x000000004000000         Enable search for SBAS PRN150           PRN151         0x000000080000000         Enable search for SBAS PRN151           PRN152         0x000000100000000         Enable search for SBAS PRN152           PRN153         0x0000000200000000         Enable search for SBAS PRN153           PRN154         0x000000400000000         Enable search for SBAS PRN154           PRN155         0x0000000800000000         Enable search for SBAS PRN155           PRN156         0x00000010000000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN145	0x000000002000000	Enable search for SBAS PRN145
PRN148         0x000000010000000         Enable search for SBAS PRN148           PRN149         0x0000000020000000         Enable search for SBAS PRN149           PRN150         0x0000000040000000         Enable search for SBAS PRN150           PRN151         0x000000080000000         Enable search for SBAS PRN151           PRN152         0x0000000100000000         Enable search for SBAS PRN152           PRN153         0x000000020000000         Enable search for SBAS PRN153           PRN154         0x0000000400000000         Enable search for SBAS PRN154           PRN155         0x0000000800000000         Enable search for SBAS PRN155           PRN156         0x0000001000000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN146	0x000000004000000	Enable search for SBAS PRN146
PRN149         0x0000000020000000         Enable search for SBAS PRN149           PRN150         0x000000004000000         Enable search for SBAS PRN150           PRN151         0x0000000080000000         Enable search for SBAS PRN151           PRN152         0x00000010000000         Enable search for SBAS PRN152           PRN153         0x00000020000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x00000080000000         Enable search for SBAS PRN155           PRN156         0x000000100000000         Enable search for SBAS PRN156           PRN157         0x000000200000000         Enable search for SBAS PRN157	PRN147	0x000000008000000	Enable search for SBAS PRN147
PRN150         0x000000040000000         Enable search for SBAS PRN150           PRN151         0x00000008000000         Enable search for SBAS PRN151           PRN152         0x00000010000000         Enable search for SBAS PRN152           PRN153         0x00000020000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x00000080000000         Enable search for SBAS PRN155           PRN156         0x0000001000000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN148	0x000000010000000	Enable search for SBAS PRN148
PRN151         0x00000008000000         Enable search for SBAS PRN151           PRN152         0x000000010000000         Enable search for SBAS PRN152           PRN153         0x000000020000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x00000080000000         Enable search for SBAS PRN155           PRN156         0x000000100000000         Enable search for SBAS PRN156           PRN157         0x000000200000000         Enable search for SBAS PRN157	PRN149	0x000000020000000	Enable search for SBAS PRN149
PRN152         0x000000100000000         Enable search for SBAS PRN152           PRN153         0x00000020000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x00000080000000         Enable search for SBAS PRN155           PRN156         0x000001000000000         Enable search for SBAS PRN156           PRN157         0x0000002000000000         Enable search for SBAS PRN157	PRN150	0x000000040000000	Enable search for SBAS PRN150
PRN153         0x000000200000000         Enable search for SBAS PRN153           PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x000000800000000         Enable search for SBAS PRN155           PRN156         0x000001000000000         Enable search for SBAS PRN156           PRN157         0x000002000000000         Enable search for SBAS PRN157	PRN151	0x000000080000000	Enable search for SBAS PRN151
PRN154         0x00000040000000         Enable search for SBAS PRN154           PRN155         0x00000080000000         Enable search for SBAS PRN155           PRN156         0x000001000000000         Enable search for SBAS PRN156           PRN157         0x00000200000000         Enable search for SBAS PRN157	PRN152	0x000000100000000	Enable search for SBAS PRN152
PRN155         0x000000800000000         Enable search for SBAS PRN155           PRN156         0x00000100000000         Enable search for SBAS PRN156           PRN157         0x00000200000000         Enable search for SBAS PRN157	PRN153	0x0000000200000000	Enable search for SBAS PRN153
PRN156         0x000001000000000         Enable search for SBAS PRN156           PRN157         0x00000200000000         Enable search for SBAS PRN157	PRN154	0x00000040000000	Enable search for SBAS PRN154
PRN157 0x000000200000000 Enable search for SBAS PRN157	PRN155	0x00000080000000	Enable search for SBAS PRN155
	PRN156	0x000001000000000	Enable search for SBAS PRN156
PRN158         0x000000400000000         Enable search for SBAS PRN158	PRN157	0x000000200000000	Enable search for SBAS PRN157
	PRN158	0x00000400000000	Enable search for SBAS PRN158

Table 36: Constants for CFG-SBAS-PRNSCANMASK

## 6.9.16 CFG-SEC: Security configuration

Security configuration.

Configuration item	Key ID	Туре	Scale	Unit	Description		
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	Configuration lockdown		
When set, the receiver configur	When set, the receiver configuration is locked and cannot be changed any more.						
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	Configuration lockdown exempted group 1		



Configuration item	Key ID	Type	Scale	Unit	Description
This item can be set before ena configuration lockdown has been	•	guratio	n lockdov	vn. It en	ables writing to the specified group even after the
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	Configuration lockdown exempted group 2
This item can be set before and	bling the confid	rotio	رمامها م	I+ on	ables weiting to the energified group of the the
configuration lockdown has bee	•	guratio	niockaov	vii. it eii	ables writing to the specified group even after the
	•		-	- -	Disabling the simulated signal spoofing detection.

Table 37: CFG-SEC configuration items

#### 6.9.17 CFG-SFCORE: Sensor fusion (SF) core configuration

This group contains configuration items for dead reckoning (DR) products.

More details on the configuration parameters can be found in the ADR section of the integration manual.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SFCORE-USE_SF	0x10080001	L	-	-	Use ADR/UDR sensor fusion
CFG-SFCORE-IMU2CRP_LA_X	0x30080002	12	-	cm	X coordinate of IMU-to-CRP lever-arm in the installation frame
CFG-SFCORE-IMU2CRP_LA_Y	0x30080003	; I2	-	cm	Y coordinate of IMU-to-CRP lever-arm in the installation frame
CFG-SFCORE-IMU2CRP_LA_Z	0x30080004	12	-	cm	Z coordinate of IMU-to-CRP lever-arm in the installation frame

Table 38: CFG-SFCORE configuration items

# 6.9.18 CFG-SFIMU: Sensor fusion (SF) inertial measurement unit (IMU) configuration

This group contains configuration items related to the Inertial Measurement Unit (IMU) for Dead Reckoning (DR) products.

More details on the configuration parameters can be found in the sensor fusion sections of the integration manual.

Configuration item	Key ID	Type	Scale	Unit	Description		
CFG-SFIMU-GYRO_TC_UPDATE_ PERIOD	0x30060007	U2	-	S	Time period between each update for the saved temperature-dependent gyroscope bias table		
CFG-SFIMU-GYRO_RMSTHDL	0x20060008	U1	2^-8	deg/s	Gyroscope sensor RMS threshold		
Gyroscope sensor RMS threshold below which automatically estimated gyroscope noise-level (accuracy) is updated.							
CFG-SFIMU-GYRO_FREQUENCY	0x20060009	U1	-	Hz	Nominal gyroscope sensor data sampling frequency		
CFG-SFIMU-GYRO_LATENCY	0x3006000a	U2	-	ms	Gyroscope sensor data latency due to e.g. CAN bus		
CFG-SFIMU-GYRO_ACCURACY	0x3006000b	U2	1e-3	deg/s	Gyroscope sensor data accuracy		
Accuracy of gyroscope sensor d	ata. If GYRO_A	CCURA	ACY is no	ot set, th	e accuracy is estimated automatically.		
CFG-SFIMU-ACCEL_RMSTHDL	0x20060015	U1	2^-6	m/s^2	Accelerometer RMS threshold		
Accelerometer RMS threshold b	elow which au	tomati	cally esti	imated a	ccelerometer noise-level (accuracy) is updated.		
CFG-SFIMU-ACCEL_FREQUENCY	0x20060016	U1	-	Hz	Nominal accelerometer sensor data sampling frequency		



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SFIMU-ACCEL_LATENCY	0x30060017	U2	-	ms	Accelerometer sensor data latency due to e.g. CAN bus
CFG-SFIMU-ACCEL_ACCURACY	0x30060018	U2	1e-4	m/s^2	Accelerometer sensor data accuracy
Accuracy of accelerometer se	nsor data. If ACC	EL_AC	CURAC	Y is not s	set, the accuracy is estimated automatically.
CFG-SFIMU-IMU_EN	0x1006001d	L	-	-	IMU enabled
Flag indicating that IMU is cor	nnected to the se	nsor la	2C.		
CFG-SFIMU-IMU_I2C_SCL_PIO	0x2006001e	U1	-	-	SCL PIO of the IMU I2C
IMU I2C SCL PIO number that	should be used b	y the	FW for c	ommuni	cation with the sensor.
CFG-SFIMU-IMU_I2C_SDA_PIO	0x2006001f	U1	-	-	SDA PIO of the IMU I2C
IMU I2C SDA PIO number that	should be used I	by the	FW for c	communi	cation with the sensor.
CFG-SFIMU-IMU2ANT_LA_X	0x30060020	12	-	cm	X coordinate of IMU-to-ANT lever-arm in the installation frame
CFG-SFIMU-IMU2ANT_LA_Y	0x30060021	12	-	cm	Y coordinate of IMU-to-ANT lever-arm in the installation frame
CFG-SFIMU-IMU2ANT_LA_Z	0x30060022	12	-	cm	Z coordinate of IMU-to-ANT lever-arm in the installation frame
CFG-SFIMU-AUTO_MNTALG_ENA	0x10060027	L	-	-	Enable automatic IMU-mount alignment
Enable automatic IMU-mount	alignment. This	flag ca	an only b	e used w	ith modules containing an internal IMU.
CFG-SFIMU-IMU_MNTALG_YAW	0x4006002d	U4	1e-2	deg	User-defined IMU-mount yaw angle [0, 36000
User-defined IMU-mount yaw	angle, e.g. for 60	.00 de	gree yaw	angle th	ne configured value would be 6000.
CFG-SFIMU-IMU_MNTALG_PITCH	0x3006002e	12	1e-2	deg	User-defined IMU-mount pitch angle [-9000, 9000]
User-defined IMU-mount pitcl	h angle, e.g. for 6	0.00 d	egree pit	tch angle	the configured value would be 6000.
CFG-SFIMU-IMU_MNTALG_ROLL	0x3006002f	12	1e-2	deg	User-defined IMU-mount roll angle [-18000, 18000]
User-defined IMU-mount roll a	angle, e.g. for 60.0	00 deg	ree roll a	ingle the	configured value would be 6000.
CFG-SFIMU-IMU_MNTALG_ TOLERANCE	0x20060030	E1	-	-	User-defined IMU mount alignment angles tolerance level
See Table 40 below for a list of	f possible consta	nts for	r this ite	m.	

Table 39: CFG-SFIMU configuration items

Constant	Value	Description
LOW	0	Low tolerance to user-defined IMU alignment angles, error less than 2deg
HIGH	1	High tolerance to user-defined IMU alignment angles, error less than 10deg

Table 40: Constants for CFG-SFIMU-IMU\_MNTALG\_TOLERANCE

## 6.9.19 CFG-SFODO: Sensor fusion (SF) odometer configuration

This group contains configuration items related to odometer sensors for Dead Reckoning (DR) products.

More details on the configuration parameters can be found in the ADR section of the integration manual.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SFODO-COMBINE_TICKS	0x10070001	L	-	-	Use combined rear wheel ticks instead of the single tick
CFG-SFODO-USE_SPEED	0x10070003	L	-	-	Use speed measurements



	Key ID	Туре	Scale	Unit	Description
Use speed measurements (da	ta type 11 in ESF	-MEA	S) instea	d of sin	gle ticks (data type 10)
CFG-SFODO-DIS_AUTOCOUNTMAX	0x10070004	L	-	-	Disable automatic estimation of maximum absolute wheel tick counter
Disable automatic estimation description for more details.	n of maximum a	bsolut	e wheel	tick co	unter value. See CFG-SFODO-COUNT_MAX iten
CFG-SFODO-DIS_AUTODIRPINPOL	0x10070005	L	-	-	Disable automatic wheel tick direction pin polarity detection
Disable automatic wheel tick details.	direction pin pola	arity d	etection.	See CF	G-SFODO-DIR_PINPOL item description for more
CFG-SFODO-DIS_AUTOSPEED	0x10070006	L	-	-	Disable automatic receiver reconfiguration for processing speed data instead of wheel tick data
	•		• .		instead of wheel tick data if no wheel tick data ar item description for more details.
CFG-SFODO-FACTOR	0x40070007	U4	1e-6	-	Wheel tick scale factor
Wheel tick scale factor to obta	ain distance [m] f	rom w	heel tick	s.	
CFG-SFODO-QUANT_ERROR	0x40070008	U4	1e-6	m (or m/s)	Wheel tick quantization
Wheel tick quantization. If CFG	G-SFODO-USE_S	PEEDi	s set the	n this is	interpreted as the speed measurement error RMS
CFG-SFODO-COUNT_MAX	0x40070009	U4	-	-	Wheel tick counter maximum value
	I It it cannot be i	enres	ented in	this way	
manually.	i. If it cannot be i	repres	ented in	this way	· · · · · · · · · · · · · · · · · · ·
manually.	0x3007000a	repres	ented in -	this way	
manually.  CFG-SFODO-LATENCY					y it must be set to the correct absolute tick values.  Wheel tick data latency due to e.g. CAN bus
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY	0x3007000a	U2 U1	-	ms	y it must be set to the correct absolute tick values  Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e  Only turn on this feature if the  lead to severe degradation of	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance.	U2 U1 L ck sign	- - - nal (only r	ms Hz - relevant	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tic signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e  Only turn on this feature if the  lead to severe degradation of  Use wheel tick pin for speed me	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance.	U2 U1 L ck sign I has 5	- - - nal (only r	ms Hz - relevant	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tic signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signals
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e  Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance.	U2 U1 L ck sign I has 5	- - - nal (only r	ms Hz - relevant v cycle.	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signals
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e  Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance. easurement. This 0x3007000e 0x1007000f	U2 U1 L ck sign I has 5 sfield c	- - - nal (only r	ms Hz - relevant v cycle.	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signal  Speed sensor dead band (0 = not set)
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND  CFG-SFODO-USE_WT_PIN  Flag indicating that wheel tick	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance. easurement. This 0x3007000e 0x1007000f	U2 U1 L ck sign I has 5 sfield c	- - - nal (only r	ms Hz - relevant v cycle.	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signals.  Speed sensor dead band (0 = not set)
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND  CFG-SFODO-USE_WT_PIN  Flag indicating that wheel tick	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal overformance. 0x3007000e 0x1007000f a signal is connect 0x10070010 rection	U2 U1 L ck sign I has 5 s field c U2 L ted.	- - - nal (only r	ms Hz - relevant v cycle.	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signal.  Speed sensor dead band (0 = not set)  Wheel tick signal enabled
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND  CFG-SFODO-USE_WT_PIN  Flag indicating that wheel tick  CFG-SFODO-DIR_PINPOL  0: Pin high means forwards di 1: Pin high means backwards	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal overformance. 0x3007000e 0x1007000f a signal is connect 0x10070010 rection	U2 U1 L ck sign I has 5 s field c U2 L ted.	- - - nal (only r	ms Hz - relevant v cycle.	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signals.  Speed sensor dead band (0 = not set)  Wheel tick signal enabled
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND  CFG-SFODO-USE_WT_PIN  Flag indicating that wheel tick  CFG-SFODO-DIR_PINPOL  0 : Pin high means forwards di 1 : Pin high means backwards  CFG-SFODO-DIS_AUTOSW  Disable automatic use of wheel	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance. 0x3007000e 0x1007000f signal is connect 0x10070010 rection direction direction elel tick or speed perface (wheel tick or speed	U2 U1 L ck sign I has 5 s field c U2 L ted. L data r k pins)	nal (only r 0 % duty can only b ecceived o	ms Hz - relevant	Wheel tick data latency due to e.g. CAN bus  Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can  with modules supporting analog wheel tick signals.  Speed sensor dead band (0 = not set)  Wheel tick signal enabled  Wheel tick direction pin polarity  Disable automatic use of wheel tick or speed data received over the software interface  software interface if available. In this case, dat ly be ignored if wheel tick/speed data are available.
manually.  CFG-SFODO-LATENCY  CFG-SFODO-FREQUENCY  CFG-SFODO-CNT_BOTH_EDGES  Count both rising and falling e Only turn on this feature if the lead to severe degradation of Use wheel tick pin for speed me  CFG-SFODO-SPEED_BAND  CFG-SFODO-USE_WT_PIN Flag indicating that wheel tick  CFG-SFODO-DIR_PINPOL  0: Pin high means forwards di 1: Pin high means backwards  CFG-SFODO-DIS_AUTOSW  Disable automatic use of whe coming from the hardware int	0x3007000a 0x2007000b 0x1007000d dges on wheel tick signal performance. 0x3007000e 0x1007000f signal is connect 0x10070010 rection direction direction elel tick or speed perface (wheel tick or speed	U2 U1 L ck sign I has 5 s field c U2 L ted. L data r k pins)	nal (only r 0 % duty can only b ecceived o	ms Hz - relevant relevant relevant respective cm/s	Nominal wheel tick data frequency (0 = not set)  Count both rising and falling edges on wheel tick signal  if wheel tick is measured by the u-blox receiver).  Turning on this feature with fixed-width pulses can with modules supporting analog wheel tick signals.  Speed sensor dead band (0 = not set)  Wheel tick signal enabled  Wheel tick direction pin polarity  Disable automatic use of wheel tick or speed data received over the software interface is software interface if available. In this case, dat by be ignored if wheel tick/speed data are available.



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SFODO-IMU2VRP_LA_Z	0x30070014	1 12	-	cm	Z coordinate of IMU-to-VRP lever-arm in the installation frame
CFG-SFODO-DIS_DIR_INFO	0x1007001c	: L	-	-	Do not use directional information
Directional information includ	ing the direction	bit and	d pin as v	vell as tl	he sign of the speed data is ignored.

Table 41: CFG-SFODO configuration items

#### 6.9.20 CFG-SIGNAL: Satellite systems (GNSS) signal configuration

The enable items for individual signals are governed by their corresponding constellation enable item. It is necessary that at least one signal from a major GNSS constellation is enabled. See GNSS signal configuration in the integration manual for more details.

Configuration specific to a GNSS system is available in other groups (e.g. CFG-SBAS).

Note that changes to any items within this group triggers a reset to the GNSS subsystem. The reset takes some time, so wait first for the acknowledgement from the receiver and then 0.5 seconds before sending the next command.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	GPS enable
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	GPS L1C/A
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	GPS L2C
CFG-SIGNAL-GPS_L5_ENA	0x10310004	L	-	-	GPS L5
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	SBAS enable
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	SBAS L1C/A
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	Galileo enable
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	Galileo E1
CFG-SIGNAL-GAL_E5A_ENA	0x10310009	L	-	-	Galileo E5a
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	Galileo E5b
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	BeiDou Enable
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	BeiDou B1I
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	BeiDou B2I
CFG-SIGNAL-BDS_B2A_ENA	0x10310028	L	-	-	BeiDou B2a
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	QZSS enable
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	QZSS L1C/A
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	QZSS L2C
CFG-SIGNAL-QZSS_L5_ENA	0x10310017	L	-	-	QZSS L5
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	GLONASS enable
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	GLONASS L1
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	GLONASS L2
CFG-SIGNAL-NAVIC_ENA	0x10310026	L	-	-	NavIC enable
CFG-SIGNAL-NAVIC_L5_ENA	0x1031001d	L	-	-	NavIC L5

Table 42: CFG-SIGNAL configuration items

#### 6.9.21 CFG-SPARTN: SPARTN configuration

Configuration for the SPARTN input stream.



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SPARTN-USE_SOURCE	0x20a70001	L E1	-	-	Selector for source SPARTN stream

See Table 44 below for a list of possible constants for this item.

#### Table 43: CFG-SPARTN configuration items

Constant	Value	Description
IP	0x00	IP source (default)
Selects IP (Raw) s	source	
LBAND	0x01	L-Band source
Selects L-Band (L	JBX-RXM-PMP) source	

Table 44: Constants for CFG-SPARTN-USE\_SOURCE

#### 6.9.22 CFG-SPI: Configuration of the SPI interface

Settings needed to configure the SPI communication interface.

Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPI-MAXFF	0x20640001	U1	-	-	Number of bytes containing 0xFF to receive before switching off reception. Range: 0 (mechanism off) - 63
CFG-SPI-CPOLARITY	0x10640002	L	-	-	Clock polarity select: 0: Active Hight Clock, SCLK idles low, 1: Active Low Clock, SCLK idles high
CFG-SPI-CPHASE	0x10640003	3 L	-	-	Clock phase select: 0: Data captured on first edge of SCLK, 1: Data captured on second edge of SCLK
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	, L	-	-	Flag to disable timeouting the interface after 1.5s
CFG-SPI-ENABLED	0x10640006	L	-	-	Flag to indicate if the SPI interface should be enabled

Table 45: CFG-SPI configuration items

## 6.9.23 CFG-SPIINPROT: Input protocol configuration of the SPI interface

Input protocol enable flags of the SPI interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SPIINPROT-UBX	0x10790001	. L	-	-	Flag to indicate if UBX should be an input protocol on SPI
CFG-SPIINPROT-NMEA	0x10790002	<u>L</u>	-	-	Flag to indicate if NMEA should be an input protocol on SPI
CFG-SPIINPROT-RTCM3X	0x10790004	. L	-	-	Flag to indicate if RTCM3X should be an input protocol on SPI
CFG-SPIINPROT-SPARTN	0x10790005	5 L	-	-	Flag to indicate if SPARTN should be an input protocol on SPI

Table 46: CFG-SPIINPROT configuration items

## 6.9.24 CFG-SPIOUTPROT: Output protocol configuration of the SPI interface

Output protocol enable flags of the SPI interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	Flag to indicate if UBX should be an output protocol on SPI



Configuration item	Key ID	Type	Scale	Unit	Description
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	Flag to indicate if NMEA should be an output protocol on SPI

Table 47: CFG-SPIOUTPROT configuration items

## 6.9.25 CFG-TP: Time pulse configuration

Use this group to configure the generation of time pulses.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-TP-PULSE_DEF	0x20050023	E1	-	-	Determines whether the time pulse is interpreted as frequency or period
See Table 49 below for a list	t of possible consta	ints foi	r this iter	n.	
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	Determines whether the time pulse length is interpreted as length[us] or pulse ratio[%]
See Table 50 below for a list	t of possible consta	ints foi	r this ite	n.	
CFG-TP-ANT_CABLEDELAY	0x30050001	12	1e-9	s	Antenna cable delay in [ns]
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	S	Time pulse period (TP1) in [us]
This is used only if CFG-TP-	-PULSE_DEF=PERI	OD.			
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	S	Time pulse period when locked to GNSS time (TP1) in [us]
Only used if CFG-TP-PULSE	_DEF=PERIOD and	CFG-	TP-USE_	LOCKE	D_TP1 is set.
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	Time pulse frequency (TP1) in [Hz]
This is used only if CFG-TP-	PULSE_DEF=FREC	Q.			
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	Time pulse frequency when locked to GNSS time (TP1) in [Hz]
Only used if CFG-TP-PULSE	_DEF=FREQ and C	FG-TP	-USE_LC	OCKED_	TP1 is set.
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	s	Time pulse length (TP1) in [us]
Only used if CFG-TP-PULSE	_LENGTH_DEF=LI	ENGTH	l is set.		
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	S	Time pulse length when locked to GNSS time (TP1) in [us]
Only used if CFG-TP-PULSE	_LENGTH_DEF=LI	ENGTH	and CF	G-TP-US	SE_LOCKED_TP1 is set.
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	Time pulse duty cycle (TP1) in [%]
Only used if CFG-TP-PULSE	_LENGTH_DEF=R	ATIO is	set.		
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	Time pulse duty cycle when locked to GNSS tim (TP1) in [%]
Only used if CFG-TP-PULSE	_LENGTH_DEF=R	ATIO ai	nd CFG-	TP-USE_	LOCKED_TP1 are set.
CFG-TP-USER_DELAY_TP1	0x40050006	14	1e-9	S	User-configurable time pulse delay (TP1) in [ns]
CFG-TP-TP1_ENA	0x10050007	L	-	-	Enable the time pulse (TP1)
if pin associated with time	oulse is assigned fo	or anot	her func	tion, the	other function takes precedence.
Must be set for frequency-	ime products.				
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	Sync time pulse to GNSS time or local clock (TP1)
If set, sync to GNSS if GNS	S time is valid. Othe	erwise,	use loca	l clock.	
This flag can be unset only	in Timing product v	ariant:	s.		
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	Use locked parameters when possible (TP1)
If set, use CFG-TP-PERIOD_ TP-PERIOD_TP1 and CFG-1		G-TP-L	.EN_LOC	K_TP1 a	as soon as GNSS time is valid. Otherwise, use CFG
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	Align time pulse to top of second (TP1)



Configuration item	Key ID	Туре	Scale	Unit	Description
To use this feature, CFG-	TP-SYNC_GNSS_TP1	must	be set.		
Time pulse period must b	oe an integer fraction	of 1 se	cond.		
CFG-TP-POL_TP1	0x1005000b	L	-	-	Set time pulse polarity (TP1)
false (0) : falling edge at top of second.					
true (1) : rising edge at to	op of second.				
CFG-TP-TIMEGRID TP1	0x2005000c	E1	-	-	Time grid to use (TP1)

Only relevant if CFG-TP-SYNC\_GNSS\_TP1 is set.

Note that configured GNSS time is estimated by the receiver if locked to any GNSS system. If the receiver has a valid GNSS fix it attempts to steer the TP to the specified time grid even if the specified time is not based on information from the constellation's satellites. To ensure timing based purely on a given GNSS, restrict the supported constellations in CFG-SIGNAL-\*.

See Table 51 below for a list of possible constants for this item.

CFG-TP-DRSTR\_TP1

0x20050035 **E1** -

Set drive strength of TP1

Time Pulse pin 1 (TP1) can support 4 possible drive strength cases: 2, 4, 8 and 12 mA

See Table 52 below for a list of possible constants for this item.

#### Table 48: CFG-TP configuration items

Constant	Value	Description			
PERIOD	0	Time pulse period [us]			
FREQ	1	Time pulse frequency [Hz]			

#### Table 49: Constants for CFG-TP-PULSE\_DEF

Constant	Value	Description			
RATIO	0	Time pulse ratio			
LENGTH	1	Time pulse length			

#### Table 50: Constants for CFG-TP-PULSE\_LENGTH\_DEF

Constant	Value	Description
UTC	0	UTC time reference
GPS	1	GPS time reference
GLO	2	GLONASS time reference
BDS	3	BeiDou time reference
GAL	4	Galileo time reference
NAVIC	5	NavIC time reference

#### Table 51: Constants for CFG-TP-TIMEGRID\_TP1

Constant	Value	Description
DRIVE_STRENGTH_2MA	0	2 mA drive strength
DRIVE_STRENGTH_4MA	1	4 mA drive strength
DRIVE_STRENGTH_8MA	2	8 mA drive strength
DRIVE_STRENGTH_12MA	3	12 mA drive strength

Table 52: Constants for CFG-TP-DRSTR\_TP1

## 6.9.26 CFG-TXREADY: TX ready configuration

Configuration of the TX ready pin.



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	Flag to indicate if TX ready pin mechanism should be enabled
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	The polarity of the TX ready pin: false:high-active, true:low-active
CFG-TXREADY-PIN	0x20a20003	U1	-	-	Pin number to use for the TX ready functionality
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	Amount of data that should be ready on the interface before triggering the TX ready pin
The value is amount of 8-by	te chunks. For exa	mple, v	alue of 2	50 sets	the trigger to 2000 bytes.
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	Interface where the TX ready feature should be linked to

See Table 54 below for a list of possible constants for this item.

## Table 53: CFG-TXREADY configuration items

Constant	Value	Description
12C	0	I2C interface
SPI	1	SPI interface

Table 54: Constants for CFG-TXREADY-INTERFACE

## 6.9.27 CFG-UART1: Configuration of the UART1 interface

Settings needed to configure the UART1 communication interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART1-BAUDRATE	0x40520001	U4	-	-	The baud rate that should be configured on the UART1
CFG-UART1-STOPBITS	0x20520002	E1	-	-	Number of stopbits that should be used on UART1
See Table 56 below for a I	ist of possible consta	ants for	this iten	n.	
CFG-UART1-DATABITS	0x20520003	E1	-	-	Number of databits that should be used on UART1
See Table 57 below for a I	ist of possible consta	nts fo	this iten	ո.	
CFG-UART1-PARITY	0x20520004	E1	-	-	Parity mode that should be used on UART1
See Table 58 below for a I	ist of possible consta	nts fo	this iten	n.	
CFG-UART1-ENABLED	0x10520005	L	-	-	Flag to indicate if the UART1 should be enabled

#### Table 55: CFG-UART1 configuration items

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits
TWO	3	2.0 stopbits

#### Table 56: Constants for CFG-UART1-STOPBITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

#### Table 57: Constants for CFG-UART1-DATABITS

Constant	Value	Description
NONE	0	No parity bit



Constant	Value	Description
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

Table 58: Constants for CFG-UART1-PARITY

## 6.9.28 CFG-UART1INPROT: Input protocol configuration of the UART1 interface

Input protocol enable flags of the UART1 interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART1INPROT-UBX	0x10730001	L	-	-	Flag to indicate if UBX should be an input protocol on UART1
CFG-UART1INPROT-NMEA	0x10730002	. L	-	-	Flag to indicate if NMEA should be an input protocol on UART1
CFG-UART1INPROT-RTCM3X	0x10730004	. L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART1
CFG-UART1INPROT-SPARTN	0x10730005	, L	-	-	Flag to indicate if SPARTN should be an input protocol on UART1

Table 59: CFG-UART1INPROT configuration items

# 6.9.29 CFG-UART10UTPROT: Output protocol configuration of the UART1 interface

Output protocol enable flags of the UART1 interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	Flag to indicate if UBX should be an output protocol on UART1
CFG-UART1OUTPROT-NMEA	0x10740002	L L	-	-	Flag to indicate if NMEA should be an output protocol on UART1

Table 60: CFG-UART10UTPROT configuration items

## 6.9.30 CFG-UART2: Configuration of the UART2 interface

Settings needed to configure the UART2 communication interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART2-BAUDRATE	0x40530001	U4	-	-	The baud rate that should be configured on the UART2
CFG-UART2-STOPBITS	0x20530002	E1	-	-	Number of stopbits that should be used on UART2
See Table 62 below for a lis	st of possible consta	ants for	this iten	٦.	
CFG-UART2-DATABITS	0x20530003	E1	-	-	Number of databits that should be used on UART2
See Table 63 below for a lis	st of possible consta	ants for	this iten	٦.	
CFG-UART2-PARITY	0x20530004	E1	-	-	Parity mode that should be used on UART2
See Table 64 below for a lis	st of possible consta	ants for	this iten	٦.	
CFG-UART2-ENABLED	0x10530005	L	-	-	Flag to indicate if the UART2 should be enabled

#### Table 61: CFG-UART2 configuration items

Constant	Value	Description
HALF	0	0.5 stopbits
ONE	1	1.0 stopbits
ONEHALF	2	1.5 stopbits



TWO 3	2.0 stopbits

#### Table 62: Constants for CFG-UART2-STOPBITS

Constant	Value	Description
EIGHT	0	8 databits
SEVEN	1	7 databits

Table 63: Constants for CFG-UART2-DATABITS

Constant	Value	Description
NONE	0	No parity bit
ODD	1	Add an odd parity bit
EVEN	2	Add an even parity bit

Table 64: Constants for CFG-UART2-PARITY

## 6.9.31 CFG-UART2INPROT: Input protocol configuration of the UART2 interface

Input protocol enable flags of the UART2 interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART2INPROT-UBX	0x10750001	L	-	-	Flag to indicate if UBX should be an input protocol on UART2
CFG-UART2INPROT-NMEA	0x10750002	. L	-	-	Flag to indicate if NMEA should be an input protocol on UART2
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on UART2
CFG-UART2INPROT-SPARTN	0x10750005	, L	-	-	Flag to indicate if SPARTN should be an input protocol on UART2

Table 65: CFG-UART2INPROT configuration items

# 6.9.32 CFG-UART2OUTPROT: Output protocol configuration of the UART2 interface

Output protocol enable flags of the UART2 interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	Flag to indicate if UBX should be an output protocol on UART2
CFG-UART2OUTPROT-NMEA	0x10760002	L L	-	-	Flag to indicate if NMEA should be an output protocol on UART2

Table 66: CFG-UART2OUTPROT configuration items

## 6.9.33 CFG-USB: Configuration of the USB interface

Settings needed to configure the USB communication interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-USB-ENABLED	0x10650001	L	-	-	Flag to indicate if the USB interface should be enabled
CFG-USB-SELFPOW	0x10650002	L	-	-	Self-powered device
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	Vendor ID
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	Vendor ID
CFG-USB-POWER	0x3065000c	U2	-	mA	Power consumption



Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	Vendor string characters 0-7
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	Vendor string characters 8-15
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	Vendor string characters 16-23
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	Vendor string characters 24-31
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	Product string characters 0-7
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	Product string characters 8-15
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	Product string characters 16-23
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	Product string characters 24-31
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	Serial number string characters 0-7
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	Serial number string characters 8-15
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	Serial number string characters 16-23
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	Serial number string characters 24-31

Table 67: CFG-USB configuration items

## 6.9.34 CFG-USBINPROT: Input protocol configuration of the USB interface

Input protocol enable flags of the USB interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-USBINPROT-UBX	0x10770001	L	-	-	Flag to indicate if UBX should be an input protocol on USB
CFG-USBINPROT-NMEA	0x10770002	. L	-	-	Flag to indicate if NMEA should be an input protocol on USB
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	Flag to indicate if RTCM3X should be an input protocol on USB
CFG-USBINPROT-SPARTN	0x10770005	, L	-	-	Flag to indicate if SPARTN should be an input protocol on USB

Table 68: CFG-USBINPROT configuration items

## 6.9.35 CFG-USBOUTPROT: Output protocol configuration of the USB interface

Output protocol enable flags of the USB interface.

Configuration item	Key ID	Туре	Scale	Unit	Description
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	Flag to indicate if UBX should be an output protocol on USB
CFG-USBOUTPROT-NMEA	0x10780002	. L	-	-	Flag to indicate if NMEA should be an output protocol on USB

Table 69: CFG-USBOUTPROT configuration items

## 6.10 Legacy UBX message fields reference

The following table lists the legacy UBX message fields and the corresponding configuration item. Note that the mapping from UBX-CFG message fields to configuration items is not necessarily 1:1 and that that some legacy UBX-CFG messages may not be available for certain products.

UBX message and field	Configuration item(s)
UBX-CFG-ANT	
UBX-CFG-ANT.ocd	CFG-HW-ANT_CFG_OPENDET
UBX-CFG-ANT.pdwnOnSCD	CFG-HW-ANT_CFG_PWRDOWN
UBX-CFG-ANT.pinOCD	CFG-HW-ANT_SUP_OPEN_PIN



UBX message and field	Configuration item(s)
UBX-CFG-ANT.pinSCD	CFG-HW-ANT_SUP_SHORT_PIN
UBX-CFG-ANT.pinSwitch	CFG-HW-ANT_SUP_SWITCH_PIN
UBX-CFG-ANT.recovery	CFG-HW-ANT_CFG_RECOVER
UBX-CFG-ANT.scd	CFG-HW-ANT_CFG_SHORTDET
UBX-CFG-ANT.svcs	CFG-HW-ANT_CFG_VOLTCTRL
UBX-CFG-DAT	
UBX-CFG-DAT.dX	CFG-NAVSPG-USRDAT_DX
UBX-CFG-DAT.dY	CFG-NAVSPG-USRDAT_DY
UBX-CFG-DAT.dZ	CFG-NAVSPG-USRDAT_DZ
UBX-CFG-DAT.flat	CFG-NAVSPG-USRDAT_FLAT
UBX-CFG-DAT.majA	CFG-NAVSPG-USE_USRDAT, CFG-NAVSPG-USRDAT_MAJA
UBX-CFG-DAT.rotX	CFG-NAVSPG-USRDAT_ROTX
UBX-CFG-DAT.rotY	CFG-NAVSPG-USRDAT_ROTY
UBX-CFG-DAT.rotZ	CFG-NAVSPG-USRDAT_ROTZ
UBX-CFG-DAT.scale	CFG-NAVSPG-USRDAT_SCALE
UBX-CFG-DGNSS	
UBX-CFG-DGNSS.dgnssMode	CFG-NAVHPG-DGNSSMODE
UBX-CFG-ESFA	
UBX-CFG-ESFA.accelRmsThdl	CFG-SFIMU-ACCEL_RMSTHDL
UBX-CFG-ESFA.accuracy	CFG-SFIMU-ACCEL_ACCURACY
UBX-CFG-ESFA.frequency	CFG-SFIMU-ACCEL_FREQUENCY
UBX-CFG-ESFA.latency	CFG-SFIMU-ACCEL_LATENCY
UBX-CFG-ESFALG	
UBX-CFG-ESFALG.doAutoMntAlg	CFG-SFIMU-AUTO_MNTALG_ENA
UBX-CFG-ESFALG.pitch	CFG-SFIMU-IMU_MNTALG_PITCH
UBX-CFG-ESFALG.roll	CFG-SFIMU-IMU_MNTALG_ROLL
UBX-CFG-ESFALG.yaw	CFG-SFIMU-IMU_MNTALG_YAW
UBX-CFG-ESFG	
UBX-CFG-ESFG.accuracy	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFG.frequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFG.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFG.latency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFG.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
UBX-CFG-ESFGAWT	
UBX-CFG-ESFGAWT.accelAcc	CFG-SFIMU-ACCEL_ACCURACY
UBX-CFG-ESFGAWT.accelFrequency	CFG-SFIMU-ACCEL_FREQUENCY
UBX-CFG-ESFGAWT.accelLatency	CFG-SFIMU-ACCEL_LATENCY
UBX-CFG-ESFGAWT.accelRmsThdl	CFG-SFIMU-ACCEL_RMSTHDL
UBX-CFG-ESFGAWT.gyroAcc	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFGAWT.gyroFrequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFGAWT.gyroLatency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFGAWT.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFGAWT.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
UBX-CFG-ESFGWT	



UBX message and field	Configuration item(s)
UBX-CFG-ESFGWT.gyroAcc	CFG-SFIMU-GYRO_ACCURACY
UBX-CFG-ESFGWT.gyroFrequency	CFG-SFIMU-GYRO_FREQUENCY
UBX-CFG-ESFGWT.gyroLatency	CFG-SFIMU-GYRO_LATENCY
UBX-CFG-ESFGWT.gyroRmsThdl	CFG-SFIMU-GYRO_RMSTHDL
UBX-CFG-ESFGWT.tcTableSaveRate	CFG-SFIMU-GYRO_TC_UPDATE_PERIOD
UBX-CFG-ESFLA	
UBX-CFG-ESFLA.leverArmX	CFG-SFCORE-IMU2CRP_LA_X, CFG-SFIMU-IMU2ANT_LA_X CFG-SFODO-IMU2VRP_LA_X
UBX-CFG-ESFLA.leverArmY	CFG-SFCORE-IMU2CRP_LA_Y, CFG-SFIMU-IMU2ANT_LA_Y, CFG-SFODO-IMU2VRP_LA_Y
UBX-CFG-ESFLA.leverArmZ	CFG-SFCORE-IMU2CRP_LA_Z, CFG-SFIMU-IMU2ANT_LA_Z, CFG-SFODO-IMU2VRP_LA_Z
UBX-CFG-ESFWT	
UBX-CFG-ESFWT.autoDirPinPolOff	CFG-SFODO-DIS_AUTODIRPINPOL
UBX-CFG-ESFWT.autoSoftwareWtOff	CFG-SFODO-DIS_AUTOSW
UBX-CFG-ESFWT.autoUseWtSpeedOff	CFG-SFODO-DIS_AUTOSPEED
UBX-CFG-ESFWT.autoWtCountMaxOff	CFG-SFODO-DIS_AUTOCOUNTMAX
UBX-CFG-ESFWT.cntBothEdges	CFG-SFODO-CNT_BOTH_EDGES
UBX-CFG-ESFWT.combineTicks	CFG-SFODO-COMBINE_TICKS
UBX-CFG-ESFWT.dirPinPol	CFG-SFODO-DIR_PINPOL
UBX-CFG-ESFWT.speedDeadBand	CFG-SFODO-SPEED_BAND
UBX-CFG-ESFWT.useWtPin	CFG-SFODO-USE_WT_PIN
UBX-CFG-ESFWT.useWtSpeed	CFG-SFODO-USE_SPEED
UBX-CFG-ESFWT.wtCountMax	CFG-SFODO-COUNT_MAX
UBX-CFG-ESFWT.wtFactor	CFG-SFODO-FACTOR
UBX-CFG-ESFWT.wtFrequency	CFG-SFODO-FREQUENCY
UBX-CFG-ESFWT.wtLatency	CFG-SFODO-LATENCY
UBX-CFG-ESFWT.wtQuantError	CFG-SFODO-QUANT_ERROR
UBX-CFG-GNSS	
UBX-CFG-GNSS.gnssld	CFG-SIGNAL-GPS_ENA, CFG-SIGNAL-SBAS_ENA, CFG-SIGNAL-BDS_ENA, CFG-SIGNAL-QZSS_ENA, CFG-SIGNAL-GLO_ENA
UBX-CFG-INF	
UBX-CFG-INF.infMsgMask	CFG-INFMSG-UBX_I2C, CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_USB, CFG-INFMSG-UBX_USB, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_UART2, CFG-INFMSG-NMEA_USB, CFG-INFMSG-NMEA_USB, CFG-INFMSG-NMEA_SPI
UBX-CFG-INF.protocolID	CFG-INFMSG-UBX_UART1, CFG-INFMSG-UBX_UART2, CFG-INFMSG-UBX_USB, CFG-INFMSG-UBX_SPI, CFG-INFMSG-NMEA_I2C, CFG-INFMSG-NMEA_UART1, CFG-INFMSG-NMEA_UART2, CFG-INFMSG-NMEA_USB, CFG-INFMSG-NMEA_SPI
UBX-CFG-MOT	
UBX-CFG-MOT.gnssDistThdl	CFG-MOT-GNSSDIST_THRS
UBX-CFG-MOT.gnssSpeedThdl	CFG-MOT-GNSSSPEED_THRS
UBX-CFG-NAV5	
UBX-CFG-NAV5.cnoThresh	CFG-NAVSPG-INFIL_CNOTHRS



/SPG-OUTFIL_FACC
/SPG-OUTFIL_FACC
'SPG-OUTFIL_FACC
/SPG-OUTFIL_FACC



UBX message and field	Configuration item(s)
UBX-CFG-NMEA.timeFilt	CFG-NMEA-OUT_INVTIME
UBX-CFG-NMEA.trackFilt	CFG-NMEA-OUT_FROZENCOG
UBX-CFG-PRT	
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-I2C-EXTENDEDTIMEOUT
UBX-CFG-PRT.inNmea	CFG-I2CINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-I2CINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-I2CINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-I2COUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-I2C-ENABLED
UBX-CFG-PRT.outUbx	CFG-I2COUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.slaveAddr	CFG-I2C-ADDRESS
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.en	CFG-TXREADY-ENABLED
UBX-CFG-PRT.extendedTxTimeout	CFG-SPI-EXTENDEDTIMEOUT
UBX-CFG-PRT.ffCnt	CFG-SPI-MAXFF
UBX-CFG-PRT.inNmea	CFG-SPIINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-SPIINPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-SPIINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-SPIOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-SPI-ENABLED
UBX-CFG-PRT.outUbx	CFG-SPIOUTPROT-UBX
UBX-CFG-PRT.pin	CFG-TXREADY-PIN
UBX-CFG-PRT.pol	CFG-TXREADY-POLARITY
UBX-CFG-PRT.spiMode	CFG-SPI-CPOLARITY, CFG-SPI-CPHASE
UBX-CFG-PRT.thres	CFG-TXREADY-THRESHOLD
UBX-CFG-PRT.baudRate	CFG-UART1-BAUDRATE, CFG-UART2-BAUDRATE
UBX-CFG-PRT.charLen	CFG-UART1-DATABITS, CFG-UART2-DATABITS
UBX-CFG-PRT.inNmea	CFG-UART1INPROT-NMEA, CFG-UART2INPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-UART1INPROT-RTCM3X, CFG-UART2INPROT-RTCM3X
UBX-CFG-PRT.inUbx	CFG-UART1INPROT-UBX, CFG-UART2INPROT-UBX
UBX-CFG-PRT.nStopBits	CFG-UART1-STOPBITS, CFG-UART2-STOPBITS
UBX-CFG-PRT.outNmea	CFG-UART1OUTPROT-NMEA, CFG-UART2OUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-UART1-ENABLED, CFG-UART2-ENABLED
UBX-CFG-PRT.outUbx	CFG-UART1OUTPROT-UBX, CFG-UART2OUTPROT-UBX
UBX-CFG-PRT.parity	CFG-UART1-PARITY, CFG-UART2-PARITY
UBX-CFG-PRT.inNmea	CFG-USBINPROT-NMEA
UBX-CFG-PRT.inProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.inRtcm3	CFG-USBINPROT-RTCM3X
UBX-CFG-PRT.INRTCM3	CFG-USBINPRUT-RTCM3X



UBX message and field	Configuration item(s)
UBX-CFG-PRT.inUbx	CFG-USBINPROT-UBX
UBX-CFG-PRT.outNmea	CFG-USBOUTPROT-NMEA
UBX-CFG-PRT.outProtoMask	CFG-USB-ENABLED
UBX-CFG-PRT.outUbx	CFG-USBOUTPROT-UBX
UBX-CFG-RATE	
UBX-CFG-RATE.measRate	CFG-RATE-MEAS
UBX-CFG-RATE.navRate	CFG-RATE-NAV
UBX-CFG-RATE.timeRef	CFG-RATE-TIMEREF
UBX-CFG-SBAS	
UBX-CFG-SBAS.diffCorr	CFG-SBAS-USE_DIFFCORR
UBX-CFG-SBAS.integrity	CFG-SBAS-USE_INTEGRITY
UBX-CFG-SBAS.range	CFG-SBAS-USE_RANGING
UBX-CFG-SBAS.scanmode1	CFG-SBAS-PRNSCANMASK
UBX-CFG-SBAS.test	CFG-SBAS-USE_TESTMODE
UBX-CFG-SENIF	
UBX-CFG-SENIF.i2cSclPio	CFG-SFIMU-IMU_I2C_SCL_PIO
UBX-CFG-SENIF.i2cSdaPio	CFG-SFIMU-IMU_I2C_SDA_PIO
UBX-CFG-TP5	
UBX-CFG-TP5.active	CFG-TP-TP1_ENA
UBX-CFG-TP5.alignToTow	CFG-TP-ALIGN_TO_TOW_TP1
UBX-CFG-TP5.antCableDelay	CFG-TP-ANT_CABLEDELAY
UBX-CFG-TP5.freqPeriod	CFG-TP-PERIOD_TP1, CFG-TP-FREQ_TP1
UBX-CFG-TP5.freqPeriodLock	CFG-TP-PERIOD_LOCK_TP1, CFG-TP-FREQ_LOCK_TP1
UBX-CFG-TP5.gridUtcGnss	CFG-TP-TIMEGRID_TP1
UBX-CFG-TP5.isFreq	CFG-TP-PULSE_DEF
UBX-CFG-TP5.isLength	CFG-TP-PULSE_LENGTH_DEF
UBX-CFG-TP5.lockGnssFreq	CFG-TP-SYNC_GNSS_TP1
UBX-CFG-TP5.lockedOtherSet	CFG-TP-USE_LOCKED_TP1
UBX-CFG-TP5.polarity	CFG-TP-POL_TP1
UBX-CFG-TP5.pulseLenRatio	CFG-TP-LEN_TP1, CFG-TP-DUTY_TP1
UBX-CFG-TP5.pulseLenRatioLock	CFG-TP-LEN_LOCK_TP1, CFG-TP-DUTY_LOCK_TP1
UBX-CFG-TP5.userConfigDelay	CFG-TP-USER_DELAY_TP1
UBX-CFG-USB	
UBX-CFG-USB.powerConsumption	CFG-USB-POWER
UBX-CFG-USB.powerMode	CFG-USB-SELFPOW
UBX-CFG-USB.productID	CFG-USB-PRODUCT ID
UBX-CFG-USB.productString	CFG-USB-PRODUCT_STR0, CFG-USB-PRODUCT_STR1, CFG-USB-PRODUCT_STR2, CFG-USB-PRODUCT_STR3
UBX-CFG-USB.serialNumber	CFG-USB-SERIAL_NO_STR0, CFG-USB-SERIAL_NO_STR1, CFG-USB-SERIAL_NO_STR2, CFG-USB-SERIAL_NO_STR3
UBX-CFG-USB.vendorID	CFG-USB-VENDOR_ID
UBX-CFG-USB.vendorString	CFG-USB-VENDOR_STR0, CFG-USB-VENDOR_STR1, CFG-USB-VENDOR_STR3

Table 70: Legacy UBX message fields and the corresponding configuration items



## **Configuration defaults**

The following tables contain the configuration defaults for the firmware. Some of these values may be changed in production. Refer to the integration manual for product-specific details.

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-BDS-USE_GEO_PRN	0x10340014	L	-	-	0 (false)

Table 71: CFG-BDS configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-HW-ANT_CFG_VOLTCTRL	0x10a3002e	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET	0x10a3002f	L	-	-	0 (false)
CFG-HW-ANT_CFG_SHORTDET_POL	0x10a30030	L	-	-	1 (true)
CFG-HW-ANT_CFG_OPENDET	0x10a30031	L	-	-	0 (false)
CFG-HW-ANT_CFG_OPENDET_POL	0x10a30032	L	-	-	1 (true)
CFG-HW-ANT_CFG_PWRDOWN	0x10a30033	L	-	-	0 (false)
CFG-HW-ANT_CFG_PWRDOWN_POL	0x10a30034	L	-	-	1 (true)
CFG-HW-ANT_CFG_RECOVER	0x10a30035	L	-	-	0 (false)
CFG-HW-ANT_SUP_SWITCH_PIN	0x20a30036	U1	-	-	13
CFG-HW-ANT_SUP_SHORT_PIN	0x20a30037	U1	-	-	15
CFG-HW-ANT_SUP_OPEN_PIN	0x20a30038	U1	-	-	16
CFG-HW-ANT_ON_SHORT_US	0x30a3003c	U2	-	-	500
CFG-HW-SENS_WOM_MODE	0x20a30063	E1	-	-	0 (DISABLED)
CFG-HW-SENS_WOM_THLD	0x20a30064	U1	-	-	0
CFG-HW-ANT_SUP_ENGINE	0x20a30054	E1	-	-	0 (EXT)
CFG-HW-ANT_SUP_SHORT_THR	0x20a30055	U1	-	mV	0
CFG-HW-ANT_SUP_OPEN_THR	0x20a30056	U1	-	mV	0

#### Table 72: CFG-HW configuration defaults

Configuration item	Key ID Typ	е	Scale	Unit	Default value
CFG-I2C-ADDRESS	0x20510001 <b>U1</b>		-	-	132
CFG-I2C-EXTENDEDTIMEOUT	0x10510002 L		-	-	0 (false)
CFG-I2C-ENABLED	0x10510003 L		-	-	1 (true)

## Table 73: CFG-I2C configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-I2CINPROT-UBX	0x10710001	L	-	-	1 (true)
CFG-I2CINPROT-NMEA	0x10710002	L	-	-	1 (true)
CFG-I2CINPROT-RTCM3X	0x10710004	L	-	-	1 (true)
CFG-I2CINPROT-SPARTN	0x10710005	L	-	-	1 (true)

#### Table 74: CFG-I2CINPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-I2COUTPROT-UBX	0x10720001	L	-	-	1 (true)
CFG-I2COUTPROT-NMEA	0x10720002	<u>L</u>	-	-	1 (true)

Table 75: CFG-I2COUTPROT configuration defaults



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-INFMSG-UBX_I2C	0x20920001	X1	-	-	0x00
CFG-INFMSG-UBX_UART1	0x20920002	X1	-	-	0x00
CFG-INFMSG-UBX_UART2	0x20920003	X1	-	-	0x00
CFG-INFMSG-UBX_USB	0x20920004	X1	-	-	0x00
CFG-INFMSG-UBX_SPI	0x20920005	X1	-	-	0x00
CFG-INFMSG-NMEA_I2C	0x20920006	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART1	0x20920007	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_UART2	0x20920008	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_USB	0x20920009	X1	-	-	0x07 (ERROR   WARNING   NOTICE)
CFG-INFMSG-NMEA_SPI	0x2092000a	X1	-	-	0x07 (ERROR   WARNING   NOTICE)

#### Table 76: CFG-INFMSG configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MOT-GNSSSPEED_THRS	0x20250038	U1	0.01	m/s	0
CFG-MOT-GNSSDIST_THRS	0x3025003b	U2	1.0	m	0
CFG-MOT-IMU_FILT_WINDOW	0x30250016	U2	-	ms	0

## Table 77: CFG-MOT configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_DTM_I2C	0x209100a6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_SPI	0x209100aa	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART1	0x209100a7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_UART2	0x209100a8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_DTM_USB	0x209100a9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_I2C	0x209100dd	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_SPI	0x209100e1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART1	0x209100de	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_UART2	0x209100df	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GBS_USB	0x209100e0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GGA_I2C	0x209100ba	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_SPI	0x209100be	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART1	0x209100bb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_UART2	0x209100bc	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GGA_USB	0x209100bd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_I2C	0x209100c9	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_SPI	0x209100cd	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART1	0x209100ca	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_UART2	0x209100cb	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GLL_USB	0x209100cc	U1	-	-	1



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_GNS_I2C	0x209100b5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_SPI	0x209100b9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART1	0x209100b6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_UART2	0x209100b7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GNS_USB	0x209100b8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_I2C	0x209100ce	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_SPI	0x209100d2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART1	0x209100cf	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_UART2	0x209100d0	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GRS_USB	0x209100d1	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSA_I2C	0x209100bf	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_SPI	0x209100c3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART1	0x209100c0	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_UART2	0x209100c1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSA_USB	0x209100c2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GST_I2C	0x209100d3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_SPI	0x209100d7	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART1	0x209100d4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_UART2	0x209100d5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GST_USB	0x209100d6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_GSV_I2C	0x209100c4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_SPI	0x209100c8	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART1	0x209100c5	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_UART2	0x209100c6	U1	-	-	1
CFG-MSGOUT-NMEA_ID_GSV_USB	0x209100c7	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RLM_I2C	0x20910400	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_SPI	0x20910404	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART1	0x20910401	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_UART2	0x20910402	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RLM_USB	0x20910403	U1	-	-	0
CFG-MSGOUT-NMEA_ID_RMC_I2C	0x209100ab	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_SPI	0x209100af	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART1	0x209100ac	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_UART2	0x209100ad	U1	-	-	1
CFG-MSGOUT-NMEA_ID_RMC_USB	0x209100ae	U1	-	-	1
CFG-MSGOUT-NMEA_ID_THS_I2C	0x209100e2	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_SPI	0x209100e6	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_UART1	0x209100e3	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_UART2	0x209100e4	U1	-	-	0
CFG-MSGOUT-NMEA_ID_THS_USB	0x209100e5	U1	-	-	0
CFG-MSGOUT-NMEA_ID_VTG_I2C	0x209100b0	U1	-	-	1



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-NMEA_ID_VTG_SPI	0x209100b4	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART1	0x209100b1	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_UART2	0x209100b2	U1	-	-	1
CFG-MSGOUT-NMEA_ID_VTG_USB	0x209100b3	U1	-	-	1
CFG-MSGOUT-NMEA_ID_ZDA_I2C	0x209100d8	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_SPI	0x209100dc	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART1	0x209100d9	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_UART2	0x209100da	U1	-	-	0
CFG-MSGOUT-NMEA_ID_ZDA_USB	0x209100db	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_I2C	0x20910661	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_SPI	0x20910665	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART1	0x20910662	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_UART2	0x20910663	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GGA_USB	0x20910664	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_I2C	0x20910670	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_SPI	0x20910674	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART1	0x20910671	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_UART2	0x20910672	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GLL_USB	0x20910673	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_I2C	0x2091065c	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_SPI	0x20910660	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART1	0x2091065d	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_UART2	0x2091065e	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GNS_USB	0x2091065f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_I2C	0x20910666	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_SPI	0x2091066a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART1	0x20910667	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_UART2	0x20910668	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_GSA_USB	0x20910669	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_I2C	0x20910652	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_SPI	0x20910656	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART1	0x20910653	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_UART2	0x20910654	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_RMC_USB	0x20910655	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_I2C	0x20910657	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_SPI	0x2091065b	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART1	0x20910658	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_UART2	0x20910659	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_VTG_USB	0x2091065a	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_I2C	0x2091067f	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_SPI	0x20910683		-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART1	0x20910680	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_UART2	0x20910681	U1	-	-	0
CFG-MSGOUT-NMEA_NAV2_ID_ZDA_USB	0x20910682	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_I2C	0x209100ec	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_SPI	0x209100f0	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART1	0x209100ed	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_UART2	0x209100ee	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYP_USB	0x209100ef	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_I2C	0x209100f1	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_SPI	0x209100f5	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART1	0x209100f2	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_UART2	0x209100f3	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYS_USB	0x209100f4	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_I2C	0x209100f6	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_SPI	0x209100fa	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART1	0x209100f7	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_UART2	0x209100f8	U1	-	-	0
CFG-MSGOUT-PUBX_ID_POLYT_USB	0x209100f9	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_I2C	0x2091010f	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_SPI	0x20910113	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_UART1	0x20910110	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_UART2	0x20910111	U1	-	-	0
CFG-MSGOUT-UBX_ESF_ALG_USB	0x20910112	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_I2C	0x20910114	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_SPI	0x20910118	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_UART1	0x20910115	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_UART2	0x20910116	U1	-	-	0
CFG-MSGOUT-UBX_ESF_INS_USB	0x20910117	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_I2C	0x20910277	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_SPI	0x2091027b	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_UART1	0x20910278	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_UART2	0x20910279	U1	-	-	0
CFG-MSGOUT-UBX_ESF_MEAS_USB	0x2091027a	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_I2C	0x2091029f	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_SPI	0x209102a3	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_UART1	0x209102a0	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_UART2	0x209102a1	U1	-	-	0
CFG-MSGOUT-UBX_ESF_RAW_USB	0x209102a2	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_I2C	0x20910105	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_SPI	0x20910109	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_UART1	0x20910106	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_ESF_STATUS_UART2	0x20910107	U1	-	-	0
CFG-MSGOUT-UBX_ESF_STATUS_USB	0x20910108	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_I2C	0x2091034f	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_SPI	0x20910353	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART1	0x20910350	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_UART2	0x20910351	U1	-	-	0
CFG-MSGOUT-UBX_MON_COMMS_USB	0x20910352	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_I2C	0x209101b9	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_SPI	0x209101bd	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART1	0x209101ba	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_UART2	0x209101bb	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW2_USB	0x209101bc	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_I2C	0x20910354	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_SPI	0x20910358	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART1	0x20910355	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_UART2	0x20910356	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW3_USB	0x20910357	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_I2C	0x209101b4	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_SPI	0x209101b8	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART1	0x209101b5	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_UART2	0x209101b6	U1	-	-	0
CFG-MSGOUT-UBX_MON_HW_USB	0x209101b7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_I2C	0x209101a5	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_SPI	0x209101a9	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART1	0x209101a6	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_UART2	0x209101a7	U1	-	-	0
CFG-MSGOUT-UBX_MON_IO_USB	0x209101a8	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_I2C	0x20910196	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_SPI	0x2091019a	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART1	0x20910197	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_UART2	0x20910198	U1	-	-	0
CFG-MSGOUT-UBX_MON_MSGPP_USB	0x20910199	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_I2C	0x20910359	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_SPI	0x2091035d	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART1	0x2091035a	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_UART2	0x2091035b	U1	-	-	0
CFG-MSGOUT-UBX_MON_RF_USB	0x2091035c	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_I2C	0x209101a0	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_SPI	0x209101a4	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART1	0x209101a1	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXBUF_UART2	0x209101a2		-	_	0



DEFG-MSGOUT-UBX_MON_RXR_IDEC  0x2091018B U1 0  DEFG-MSGOUT-UBX_MON_RXR_UART1	Configuration item	Key ID	Туре	Scale	Unit	Default value
DEFG-MSGOUT-UBX_MON_RXR_UART1	CFG-MSGOUT-UBX_MON_RXBUF_USB	0x209101a3	U1	-	_	0
December	CFG-MSGOUT-UBX_MON_RXR_I2C	0x20910187	U1	-	-	0
CFG-MSGOUT-UBX_MON_RXR_UART2	CFG-MSGOUT-UBX_MON_RXR_SPI	0x2091018b	U1	-	-	0
DEFG-MSGOUT-UBX_MON_RXR_USB	CFG-MSGOUT-UBX_MON_RXR_UART1	0x20910188	U1	-	-	0
DEFG-MSGOUT-UBX_MON_SPAN_JEC  DEFG-MSGOUT-UBX_MON_SPAN_UART1  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SPAN_UART2  DEFG-MSGOUT-UBX_MON_SYS_IEC  DEFG-MSGOUT-UBX_MON_SYS_IEC  DEFG-MSGOUT-UBX_MON_SYS_IEC  DEFG-MSGOUT-UBX_MON_SYS_IEC  DEFG-MSGOUT-UBX_MON_SYS_IEC  DEFG-MSGOUT-UBX_MON_SYS_UART1  DEFG-MSGOUT-UBX_MON_SYS_UART1  DEFG-MSGOUT-UBX_MON_SYS_UART2  DEFG-MSGOUT-UBX_MON_SYS_UART2  DEFG-MSGOUT-UBX_MON_SYS_UART2  DEFG-MSGOUT-UBX_MON_TYSUF_JEC  DEFG-MSGOUT-JEC  DEFG-MSGOU	CFG-MSGOUT-UBX_MON_RXR_UART2	0x20910189	U1	-	-	0
Degree   D	CFG-MSGOUT-UBX_MON_RXR_USB	0x2091018a	U1	-	-	0
DEG-MSGOUT-UBX_MON_SPAN_UART1	CFG-MSGOUT-UBX_MON_SPAN_I2C	0x2091038b	U1	-	-	0
DEG-MSGOUT-UBX_MON_SPAN_UART2	CFG-MSGOUT-UBX_MON_SPAN_SPI	0x2091038f	U1	-	-	0
DEG-MSGOUT-UBX_MON_SPAN_USB  0x2091038e U1 0  DEG-MSGOUT-UBX_MON_SYS_I2C  0x2091069d U1 0  DEG-MSGOUT-UBX_MON_SYS_SPI  0x2091069d U1 0  DEG-MSGOUT-UBX_MON_SYS_UART1  0x2091069e U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x2091069e U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x2091069d U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x2091069d U1 0  DEG-MSGOUT-UBX_MON_SYS_USB  0x209109d U1 0  DEG-MSGOUT-UBX_MON_TXBUF_I2C  0x2091019b U1 0  DEG-MSGOUT-UBX_MON_TXBUF_I2C  0x2091019c U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART1  0x2091019c U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART3  0x2091019d U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_I2C  0x2091043d U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x2091043d U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x2091043d U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_USB  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910446 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910466 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910466 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_U	CFG-MSGOUT-UBX_MON_SPAN_UART1	0x2091038c	U1	-	-	0
DEG-MSGOUT-UBX_MON_SYS_IPI  0x20910691 U1 0  DEG-MSGOUT-UBX_MON_SYS_SPI  0x20910690 U1 0  DEG-MSGOUT-UBX_MON_SYS_UART1  0x20910690 U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x20910690 U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x20910690 U1 0  DEG-MSGOUT-UBX_MON_SYS_UART2  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_IZC  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_IZC  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART1  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x20910190 U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x20910190 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_IZC  0x20910430 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_SPI  0x20910431 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x20910431 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x20910431 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x20910432 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_IZC  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_IZC  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_IZC  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_IVART1  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_IVART1  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910471 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910471 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910472 U1 0  DEG-MSGOUT-UBX_NAV	CFG-MSGOUT-UBX_MON_SPAN_UART2	0x2091038d	U1	-	-	0
DEFG-MSGOUT-UBX_MON_SYS_UART1	CFG-MSGOUT-UBX_MON_SPAN_USB	0x2091038e	U1	-	-	0
DEG-MSGOUT-UBX_MON_SYS_UART1	CFG-MSGOUT-UBX_MON_SYS_I2C	0x2091069d	U1	-	-	0
DEG-MSGOUT-UBX_MON_SYS_UART2  0x2091069f U1 0  DEG-MSGOUT-UBX_MON_SYS_USB  0x2091019b U1 0  DEG-MSGOUT-UBX_MON_TXBUF_I2C  0x2091019b U1 0  DEG-MSGOUT-UBX_MON_TXBUF_I2C  0x2091019f U1 0  DEG-MSGOUT-UBX_MON_TXBUF_SPI  0x2091019c U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART1  0x2091019c U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019e U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_I2C  0x20910430 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_SPI  0x20910431 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x20910432 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UBB  0x20910433 U1 0  DEG-MSGOUT-UBX_NAV2_COV_I2C  0x20910435 U1 0  DEG-MSGOUT-UBX_NAV2_COV_SPI  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910439 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910466 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x20910466 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910466 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910469 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910460 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_I2C  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_I2C  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_I2C  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_IART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_IART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EELL_IART1  0x20910470 U1 0  DEG-MSGOUT-UBX_NAV2_EE	CFG-MSGOUT-UBX_MON_SYS_SPI	0x209106a1	U1	-	-	0
DEG-MSGOUT-UBX_MON_SYS_USB  0x2091016a0 U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_IZC  0x2091019b U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_SPI  0x2091019f U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_UART1  0x2091019f U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_UART2  0x2091019d U1 - 0  DEG-MSGOUT-UBX_MON_TXBUF_USB  0x2091019d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_IZC  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_SPI  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART1  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_CLOCK_USB  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_IZC  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART2  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_COV_UART1  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_IZC  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_IZC  0x2091043d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x2091046d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_UART1  0x2091046d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x2091047d U1 - 0  DEG-MSGOUT-UBX_NAV2_DOP_UART2  0x2091047d U1 - 0  DEG-MSGOUT-UBX_NAV2_EELL_IZC  0x2091047D U1 - 0  DEG-MSGOUT-UBX_NAV2_EELL_IZCI  0x2091047D U1 -	CFG-MSGOUT-UBX_MON_SYS_UART1	0x2091069e	U1	-	-	0
Deg-magout-ubx_nav2_cov_ubx   Deg-	CFG-MSGOUT-UBX_MON_SYS_UART2	0x2091069f	U1	-	-	0
DEG-MSGOUT-UBX_MON_TXBUF_SPI   Dx2091019F U1   -   -   0   DEG-MSGOUT-UBX_MON_TXBUF_UART1   Dx2091019C U1   -   -   0   DEG-MSGOUT-UBX_MON_TXBUF_UART2   Dx2091019C U1   -   -   0   DEG-MSGOUT-UBX_MON_TXBUF_UART2   Dx2091019C U1   -   -   0   DEG-MSGOUT-UBX_MON_TXBUF_USB   Dx2091019C U1   -   -   0   DEG-MSGOUT-UBX_NAV2_CLOCK_I2C   Dx20910430 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_CLOCK_SPI   Dx20910434 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_CLOCK_UART1   Dx20910431 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_CLOCK_UART2   Dx20910432 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_CLOCK_UART2   Dx20910433 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_I2C   Dx20910435 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_I2C   Dx20910435 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_UART1   Dx20910436 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_UART1   Dx20910436 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_UART2   Dx20910437 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_UART2   Dx20910438 U1   -   -   0   DEG-MSGOUT-UBX_NAV2_COV_USB   Dx20910465 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_I2C   Dx20910466 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART1   Dx20910466 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART1   Dx20910466 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART2   Dx20910467 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART2   Dx20910468 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART2   Dx20910468 U1   -     0   DEG-MSGOUT-UBX_NAV2_DOP_UART2   Dx20910468 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_I2C   Dx20910470 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_I2C   Dx20910470 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_I2C   Dx20910470 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_IART1   Dx20910471 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_IART1   Dx20910472 U1   -     0   DEG-MSGOUT-UBX_NAV2_EELL_IART1   Dx20	CFG-MSGOUT-UBX_MON_SYS_USB	0x209106a0	U1	-	-	0
DEFG-MSGOUT-UBX_MON_TXBUF_UART1	CFG-MSGOUT-UBX_MON_TXBUF_I2C	0x2091019b	U1	-	-	0
Deg-missout-ubx_nav2_clock_use   Deg-missout-ubx_nav2_cov_use   Deg-missout-ubv_nav2_cov_use   Deg-missout-ubv_nav2_cov_use   Deg-missout-ubv_nav2_cov_us	CFG-MSGOUT-UBX_MON_TXBUF_SPI	0x2091019f	U1	-	-	0
DEFG-MSGOUT-UBX_MON_TXBUF_USB	CFG-MSGOUT-UBX_MON_TXBUF_UART1	0x2091019c	U1	-	-	0
DEFG-MSGOUT-UBX_NAV2_CLOCK_I2C	CFG-MSGOUT-UBX_MON_TXBUF_UART2	0x2091019d	U1	-	-	0
DEFG-MSGOUT-UBX_NAV2_CLOCK_SPI	CFG-MSGOUT-UBX_MON_TXBUF_USB	0x2091019e	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_UART1         0x20910431         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_CLOCK_UART2         0x20910432         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_CLOCK_USB         0x20910433         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_I2C         0x20910435         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_SPI         0x20910439         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART1         0x20910436         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_I2C         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_CLOCK_I2C	0x20910430	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_USB         0x20910432         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_CLOCK_USB         0x20910433         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_IZC         0x20910435         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_SPI         0x20910439         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART1         0x20910436         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_IZC         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_IZC         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_JART1         0x20910471         U1         -         -         0 <td>CFG-MSGOUT-UBX_NAV2_CLOCK_SPI</td> <td>0x20910434</td> <td>U1</td> <td>-</td> <td>-</td> <td>0</td>	CFG-MSGOUT-UBX_NAV2_CLOCK_SPI	0x20910434	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_CLOCK_USB         0x20910433         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_I2C         0x20910435         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_SPI         0x20910439         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART1         0x20910436         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_IZC         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_CLOCK_UART1	0x20910431	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_I2C  Ox20910435  U1  -  O  CFG-MSGOUT-UBX_NAV2_COV_SPI  Ox20910439  U1  -  O  CFG-MSGOUT-UBX_NAV2_COV_UART1  Ox20910436  U1  -  O  CFG-MSGOUT-UBX_NAV2_COV_UART2  Ox20910437  U1  -  O  CFG-MSGOUT-UBX_NAV2_COV_USB  Ox20910438  U1  -  O  CFG-MSGOUT-UBX_NAV2_COV_USB  Ox20910465  U1  -  O  CFG-MSGOUT-UBX_NAV2_DOP_I2C  Ox20910469  U1  -  O  CFG-MSGOUT-UBX_NAV2_DOP_UART1  Ox20910469  U1  -  O  CFG-MSGOUT-UBX_NAV2_DOP_UART1  Ox20910466  U1  -  O  CFG-MSGOUT-UBX_NAV2_DOP_UART2  Ox20910467  U1  -  O  CFG-MSGOUT-UBX_NAV2_DOP_USB  Ox20910468  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_I2C  Ox20910470  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_I2C  Ox20910471  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_UART1  Ox20910471  Ox20910471  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_UART1  Ox20910472  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_UART1  Ox20910472  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_UART1  Ox20910472  U1  -  O  CFG-MSGOUT-UBX_NAV2_EELL_UART2	CFG-MSGOUT-UBX_NAV2_CLOCK_UART2	0x20910432	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_SPI         0x20910439         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART1         0x20910436         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_I2C         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_CLOCK_USB	0x20910433	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART1         0x20910436         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_IZC         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_COV_I2C	0x20910435	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_UART2         0x20910437         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_I2C         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910472         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_COV_SPI	0x20910439	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_COV_USB         0x20910438         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_I2C         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_COV_UART1	0x20910436	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_I2C         0x20910465         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_COV_UART2	0x20910437	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_SPI         0x20910469         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_COV_USB	0x20910438	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART1         0x20910466         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_UART2         0x20910467         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_DOP_USB         0x20910468         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_I2C         0x20910470         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_SPI         0x20910474         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART1         0x20910471         U1         -         -         0           CFG-MSGOUT-UBX_NAV2_EELL_UART2         0x20910472         U1         -         -         0	CFG-MSGOUT-UBX_NAV2_DOP_I2C	0x20910465	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_UART2       0x20910467       U1 0         CFG-MSGOUT-UBX_NAV2_DOP_USB       0x20910468       U1 0         CFG-MSGOUT-UBX_NAV2_EELL_I2C       0x20910470       U1 0         CFG-MSGOUT-UBX_NAV2_EELL_SPI       0x20910474       U1 0         CFG-MSGOUT-UBX_NAV2_EELL_UART1       0x20910471       U1 0         CFG-MSGOUT-UBX_NAV2_EELL_UART2       0x20910472       U1 0	CFG-MSGOUT-UBX_NAV2_DOP_SPI	0x20910469	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_DOP_USB       0x20910468       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_I2C       0x20910470       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_SPI       0x20910474       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_UART1       0x20910471       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_UART2       0x20910472       U1       -       -       0	CFG-MSGOUT-UBX_NAV2_DOP_UART1	0x20910466	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_I2C       0x20910470       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_SPI       0x20910474       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_UART1       0x20910471       U1       -       -       0         CFG-MSGOUT-UBX_NAV2_EELL_UART2       0x20910472       U1       -       -       0	CFG-MSGOUT-UBX_NAV2_DOP_UART2	0x20910467	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_SPI       0x20910474 U1 0         CFG-MSGOUT-UBX_NAV2_EELL_UART1       0x20910471 U1 0         CFG-MSGOUT-UBX_NAV2_EELL_UART2       0x20910472 U1 0	CFG-MSGOUT-UBX_NAV2_DOP_USB	0x20910468	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_UART1       0x20910471       U1 0         CFG-MSGOUT-UBX_NAV2_EELL_UART2       0x20910472       U1 0	CFG-MSGOUT-UBX_NAV2_EELL_I2C	0x20910470	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_UART2 0x20910472 U1 0	CFG-MSGOUT-UBX_NAV2_EELL_SPI	0x20910474	U1	-	-	0
	CFG-MSGOUT-UBX_NAV2_EELL_UART1	0x20910471	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EELL_USB 0x20910473 U1 0	CFG-MSGOUT-UBX_NAV2_EELL_UART2	0x20910472	U1	-	-	0
	CFG-MSGOUT-UBX_NAV2_EELL_USB	0x20910473	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_EOE_I2C	0x20910565	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_SPI	0x20910569	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART1	0x20910566	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_UART2	0x20910567	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_EOE_USB	0x20910568	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_I2C	0x20910480	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_SPI	0x20910484	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART1	0x20910481	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_UART2	0x20910482	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSECEF_USB	0x20910483	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_I2C	0x20910485	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_SPI	0x20910489	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART1	0x20910486	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_UART2	0x20910487	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_POSLLH_USB	0x20910488	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_I2C	0x2091062f	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_SPI	0x20910633	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_UART1	0x20910630	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_UART2	0x20910631	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVAT_USB	0x20910632	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_I2C	0x20910490	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_SPI	0x20910494	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART1	0x20910491	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_UART2	0x20910492	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_PVT_USB	0x20910493	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_I2C	0x20910495	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_SPI	0x20910499	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART1	0x20910496	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_UART2	0x20910497	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SAT_USB	0x20910498	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_I2C	0x20910500	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_SPI	0x20910504	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART1	0x20910501	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_UART2	0x20910502	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SBAS_USB	0x20910503	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_I2C	0x20910505	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_SPI	0x20910509	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART1	0x20910506	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_UART2	0x20910507	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_SIG_USB	0x20910508	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_I2C	0x20910515	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_STATUS_SPI	0x20910519	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART1	0x20910516	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_UART2	0x20910517	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_STATUS_USB	0x20910518	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_I2C	0x20910525	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_SPI	0x20910529	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART1	0x20910526	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_UART2	0x20910527	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEBDS_USB	0x20910528	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_I2C	0x20910530	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_SPI	0x20910534	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART1	0x20910531	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_UART2	0x20910532	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGAL_USB	0x20910533	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_I2C	0x20910535	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_SPI	0x20910539	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART1	0x20910536	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_UART2	0x20910537	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGLO_USB	0x20910538	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_I2C	0x20910540	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_SPI	0x20910544	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART1	0x20910541	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_UART2	0x20910542	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEGPS_USB	0x20910543	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_I2C	0x20910545	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_SPI	0x20910549	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART1	0x20910546	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_UART2	0x20910547	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMELS_USB	0x20910548	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMENAVIC_I2C	0x209106a7	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMENAVIC_SPI	0x209106ab	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMENAVIC_UART1	0x209106a8	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMENAVIC_UART2	0x209106a9	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMENAVIC_USB	0x209106aa	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_I2C	0x20910575	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_SPI	0x20910579	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART1	0x20910576	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_UART2	0x20910577	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEQZSS_USB	0x20910578	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_I2C	0x20910550	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_SPI	0x20910554		-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART1	0x20910551	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_UART2	0x20910552	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_TIMEUTC_USB	0x20910553	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_I2C	0x20910555	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_SPI	0x20910559	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_UART1	0x20910556	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_UART2	0x20910557	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELECEF_USB	0x20910558	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_I2C	0x20910560	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_SPI	0x20910564	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART1	0x20910561	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_UART2	0x20910562	U1	-	-	0
CFG-MSGOUT-UBX_NAV2_VELNED_USB	0x20910563	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_I2C	0x2091001f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_SPI	0x20910023	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_UART1	0x20910020	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_UART2	0x20910021	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ATT_USB	0x20910022	U1	-	_	0
CFG-MSGOUT-UBX_NAV_CLOCK_I2C	0x20910065	U1	-	_	0
CFG-MSGOUT-UBX_NAV_CLOCK_SPI	0x20910069	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART1	0x20910066	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_UART2	0x20910067	U1	-	-	0
CFG-MSGOUT-UBX_NAV_CLOCK_USB	0x20910068	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_I2C	0x20910083	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_SPI	0x20910087	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_UART1	0x20910084	U1	-	_	0
CFG-MSGOUT-UBX_NAV_COV_UART2	0x20910085	U1	-	-	0
CFG-MSGOUT-UBX_NAV_COV_USB	0x20910086	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_I2C	0x20910038	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_SPI	0x2091003c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART1	0x20910039	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_UART2	0x2091003a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_DOP_USB	0x2091003b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_I2C	0x20910313	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_SPI	0x20910317	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_UART1	0x20910314	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_UART2	0x20910315	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EELL_USB	0x20910316	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_I2C	0x2091015f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_SPI	0x20910163	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_UART1	0x20910160	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_EOE_UART2	0x20910161	U1	-	-	0
CFG-MSGOUT-UBX_NAV_EOE_USB	0x20910162	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_I2C	0x2091002e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_SPI	0x20910032	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART1	0x2091002f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_UART2	0x20910030	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSECEF_USB	0x20910031	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_I2C	0x20910033	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_SPI	0x20910037	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART1	0x20910034	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_UART2	0x20910035	U1	-	-	0
CFG-MSGOUT-UBX_NAV_HPPOSLLH_USB	0x20910036	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_I2C	0x20910010	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_SPI	0x20910014	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART1	0x20910011	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_UART2	0x20910012	U1	-	-	0
CFG-MSGOUT-UBX_NAV_ORB_USB	0x20910013	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_I2C	0x20910415	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_SPI	0x20910419	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART1	0x20910416	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_UART2	0x20910417	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PL_USB	0x20910418	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_I2C	0x20910024	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_SPI	0x20910028	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART1	0x20910025	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_UART2	0x20910026	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSECEF_USB	0x20910027	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_I2C	0x20910029	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_SPI	0x2091002d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART1	0x2091002a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_UART2	0x2091002b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_POSLLH_USB	0x2091002c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_I2C	0x2091062a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_SPI	0x2091062e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_UART1	0x2091062b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_UART2	0x2091062c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVAT_USB	0x2091062d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_I2C	0x20910006	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_SPI	0x2091000a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_PVT_UART1	0x20910007	U1	-	-	0
DFG-MSGOUT-UBX_NAV_PVT_UART2	0x20910008	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_PVT_USB	0x20910009	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_I2C	0x2091008d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_SPI	0x20910091	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART1	0x2091008e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_UART2	0x2091008f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_RELPOSNED_USB	0x20910090	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_I2C	0x20910015	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_SPI	0x20910019	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART1	0x20910016	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_UART2	0x20910017	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SAT_USB	0x20910018	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_I2C	0x2091006a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_SPI	0x2091006e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART1	0x2091006b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_UART2	0x2091006c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SBAS_USB	0x2091006d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_I2C	0x20910345	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_SPI	0x20910349	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART1	0x20910346	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_UART2	0x20910347	U1	-	-	0
CFG-MSGOUT-UBX_NAV_SIG_USB	0x20910348	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_I2C	0x2091001a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_SPI	0x2091001e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART1	0x2091001b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_UART2	0x2091001c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_STATUS_USB	0x2091001d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_I2C	0x20910051	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_SPI	0x20910055	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART1	0x20910052	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_UART2	0x20910053	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEBDS_USB	0x20910054	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_I2C	0x20910056	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_SPI	0x2091005a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART1	0x20910057	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_UART2	0x20910058	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGAL_USB	0x20910059	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_I2C	0x2091004c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_SPI	0x20910050	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART1	0x2091004d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_UART2	0x2091004e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGLO_USB	0x2091004f	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_NAV_TIMEGPS_I2C	0x20910047	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_SPI	0x2091004b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART1	0x20910048	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_UART2	0x20910049	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEGPS_USB	0x2091004a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_I2C	0x20910060	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_SPI	0x20910064	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART1	0x20910061	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_UART2	0x20910062	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMELS_USB	0x20910063	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMENAVIC_I2C	0x209106a2	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMENAVIC_SPI	0x209106a6	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMENAVIC_UART1	0x209106a3	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMENAVIC_UART2	0x209106a4	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMENAVIC_USB	0x209106a5	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_I2C	0x20910386	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_SPI	0x2091038a	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART1	0x20910387	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_UART2	0x20910388	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEQZSS_USB	0x20910389	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_I2C	0x2091005b	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_SPI	0x2091005f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART1	0x2091005c	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_UART2	0x2091005d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_TIMEUTC_USB	0x2091005e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_I2C	0x2091003d	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_SPI	0x20910041	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART1	0x2091003e	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_UART2	0x2091003f	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELECEF_USB	0x20910040	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_I2C	0x20910042	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_SPI	0x20910046	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART1	0x20910043	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_UART2	0x20910044	U1	-	-	0
CFG-MSGOUT-UBX_NAV_VELNED_USB	0x20910045	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_I2C	0x209106b6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_SPI	0x209106ba	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART1	0x209106b7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_UART2	0x209106b8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_COR_USB	0x209106b9	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_I2C	0x20910204	U1	-	-	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_RXM_MEASX_SPI	0x20910208	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART1	0x20910205	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_UART2	0x20910206	U1	-	-	0
CFG-MSGOUT-UBX_RXM_MEASX_USB	0x20910207	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_I2C	0x209102a4	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_SPI	0x209102a8	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART1	0x209102a5	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_UART2	0x209102a6	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RAWX_USB	0x209102a7	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_I2C	0x2091025e	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_SPI	0x20910262	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART1	0x2091025f	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_UART2	0x20910260	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RLM_USB	0x20910261	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_I2C	0x20910268	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_SPI	0x2091026c	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART1	0x20910269	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_UART2	0x2091026a	U1	-	-	0
CFG-MSGOUT-UBX_RXM_RTCM_USB	0x2091026b	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_I2C	0x20910231	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_SPI	0x20910235	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART1	0x20910232	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_UART2	0x20910233	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SFRBX_USB	0x20910234	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_I2C	0x20910605	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_SPI	0x20910609	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART1	0x20910606	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_UART2	0x20910607	U1	-	-	0
CFG-MSGOUT-UBX_RXM_SPARTN_USB	0x20910608	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_I2C	0x20910689	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_SPI	0x2091068d	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART1	0x2091068a	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_UART2	0x2091068b	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIGLOG_USB	0x2091068c	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_I2C	0x20910634	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_SPI	0x20910638	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_UART1	0x20910635	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_UART2	0x20910636	U1	-	-	0
CFG-MSGOUT-UBX_SEC_SIG_USB	0x20910637	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_I2C	0x20910178	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_SPI	0x2091017c		-	_	0



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-MSGOUT-UBX_TIM_TM2_UART1	0x20910179	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_UART2	0x2091017a	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TM2_USB	0x2091017b	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_I2C	0x2091017d	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_SPI	0x20910181	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART1	0x2091017e	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_UART2	0x2091017f	U1	-	-	0
CFG-MSGOUT-UBX_TIM_TP_USB	0x20910180	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_I2C	0x20910092	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_SPI	0x20910096	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART1	0x20910093	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_UART2	0x20910094	U1	-	-	0
CFG-MSGOUT-UBX_TIM_VRFY_USB	0x20910095	U1	-	-	0

## Table 78: CFG-MSGOUT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAV2-OUT_ENABLED	0x10170001	L	=.	-	0 (false)
CFG-NAV2-SBAS_USE_INTEGRITY	0x10170002	L	-	-	0 (false)

## Table 79: CFG-NAV2 configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-NAVHPG-DGNSSMODE	0x20140011	_ E1	-	-	3 (RTK_FIXED)

## Table 80: CFG-NAVHPG configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-NAVSPG-FIXMODE	0x20110011	E1	-	-	3 (AUTO)
CFG-NAVSPG-INIFIX3D	0x10110013	L	-	-	0 (false)
CFG-NAVSPG-WKNROLLOVER	0x30110017	U2	-	-	2349
CFG-NAVSPG-UTCSTANDARD	0x2011001c	E1	-	-	0 (AUTO)
CFG-NAVSPG-DYNMODEL	0x20110021	E1	-	-	4 (AUTOMOT)
CFG-NAVSPG-ACKAIDING	0x10110025	L	-	-	0 (false)
CFG-NAVSPG-USE_USRDAT	0x10110061	L	-	-	0 (false)
CFG-NAVSPG-USRDAT_MAJA	0x50110062	R8	-	m	6378137
CFG-NAVSPG-USRDAT_FLAT	0x50110063	R8	-	-	298.25722356300002502
CFG-NAVSPG-USRDAT_DX	0x40110064	R4	-	m	0
CFG-NAVSPG-USRDAT_DY	0x40110065	R4	-	m	0
CFG-NAVSPG-USRDAT_DZ	0x40110066	R4	-	m	0
CFG-NAVSPG-USRDAT_ROTX	0x40110067	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTY	0x40110068	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_ROTZ	0x40110069	R4	-	arcsec	0
CFG-NAVSPG-USRDAT_SCALE	0x4011006a	R4	-	ppm	0
CFG-NAVSPG-INFIL_MINSVS	0x201100a1	U1	-	-	5
CFG-NAVSPG-INFIL_MAXSVS	0x201100a2	U1	-	-	32



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-NAVSPG-INFIL_MINCNO	0x201100a3	U1	-	dBHz	20
CFG-NAVSPG-INFIL_MINELEV	0x201100a4	I1	-	deg	10
CFG-NAVSPG-INFIL_NCNOTHRS	0x201100aa	U1	-	-	0
CFG-NAVSPG-INFIL_CNOTHRS	0x201100ab	U1	-	-	0
CFG-NAVSPG-OUTFIL_PDOP	0x301100b1	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_TDOP	0x301100b2	U2	0.1	-	250
CFG-NAVSPG-OUTFIL_PACC	0x301100b3	U2	-	m	100
CFG-NAVSPG-OUTFIL_TACC	0x301100b4	U2	-	m	350
CFG-NAVSPG-OUTFIL_FACC	0x301100b5	U2	0.01	m/s	150
CFG-NAVSPG-CONSTR_ALT	0x401100c1	14	0.01	m	0
CFG-NAVSPG-CONSTR_ALTVAR	0x401100c2	U4	0.0001	m^2	10000
CFG-NAVSPG-CONSTR_DGNSSTO	0x201100c4	U1	-	S	60
CFG-NAVSPG-SIGATTCOMP	0x201100d6	E1	-	-	0 (DIS)
CFG-NAVSPG-PL_ENA	0x101100d7	L	-	-	1 (true)

Table 81: CFG-NAVSPG configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-NMEA-PROTVER	0x20930001	E1	-	-	42 (V411)
CFG-NMEA-MAXSVS	0x20930002	E1	-	-	0 (UNLIM)
CFG-NMEA-COMPAT	0x10930003	L	-	-	0 (false)
CFG-NMEA-CONSIDER	0x10930004	L	-	-	1 (true)
CFG-NMEA-LIMIT82	0x10930005	L	-	-	0 (false)
CFG-NMEA-HIGHPREC	0x10930006	L	-	-	0 (false)
CFG-NMEA-SVNUMBERING	0x20930007	E1	-	-	0 (STRICT)
CFG-NMEA-FILT_GPS	0x10930011	L	-	-	0 (false)
CFG-NMEA-FILT_SBAS	0x10930012	L	-	-	0 (false)
CFG-NMEA-FILT_GAL	0x10930013	L	-	-	0 (false)
CFG-NMEA-FILT_QZSS	0x10930015	L	-	-	0 (false)
CFG-NMEA-FILT_GLO	0x10930016	L	-	-	0 (false)
CFG-NMEA-FILT_BDS	0x10930017	L	-	-	0 (false)
CFG-NMEA-FILT_NAVIC	0x10930018	L	-	-	0 (false)
CFG-NMEA-OUT_INVFIX	0x10930021	L	-	-	0 (false)
CFG-NMEA-OUT_MSKFIX	0x10930022	L	-	-	0 (false)
CFG-NMEA-OUT_INVTIME	0x10930023	L	-	-	0 (false)
CFG-NMEA-OUT_INVDATE	0x10930024	L	-	-	0 (false)
CFG-NMEA-OUT_ONLYGPS	0x10930025	L	-	-	0 (false)
CFG-NMEA-OUT_FROZENCOG	0x10930026	L	-	-	0 (false)
CFG-NMEA-MAINTALKERID	0x20930031	E1	-	-	0 (AUTO)
CFG-NMEA-GSVTALKERID	0x20930032	E1	-	-	0 (GNSS)
CFG-NMEA-BDSTALKERID	0x30930033	U2	-	-	0

Table 82: CFG-NMEA configuration defaults



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-RATE-MEAS	0x30210001	U2	0.001	s	1000
CFG-RATE-NAV	0x30210002	U2	-	-	1
CFG-RATE-TIMEREF	0x20210003	E1	-	-	1 (GPS)
CFG-RATE-NAV_PRIO	0x20210004	U1	-	Hz	0

## Table 83: CFG-RATE configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-RTCM-DF003_IN	0x30090008	U2	-	-	0
CFG-RTCM-DF003_IN_FILTER	0x20090009	E1	-	-	0 (DISABLED)

#### Table 84: CFG-RTCM configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SBAS-USE_TESTMODE	0x10360002	L	-	-	0 (false)
CFG-SBAS-USE_RANGING	0x10360003	L	-	-	1 (true)
CFG-SBAS-USE_DIFFCORR	0x10360004	L	-	-	1 (true)
CFG-SBAS-USE_INTEGRITY	0x10360005	L	-	-	0 (false)
CFG-SBAS-ACCEPT_NOT_IN_PRNMASK	0x30360008	X2	-	-	0x0000
CFG-SBAS-USE_IONOONLY	0x10360007	L	-	-	0 (false)
CFG-SBAS-PRNSCANMASK	0x50360006	X8	-	-	0x00000000003ab88 (ALL   PRN123   PRN127   PRN128   PRN129   PRN131   PRN133   PRN135   PRN136   PRN137

#### Table 85: CFG-SBAS configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SEC-CFG_LOCK	0x10f60009	L	-	-	0 (false)
CFG-SEC-CFG_LOCK_UNLOCKGRP1	0x30f6000a	U2	-	-	0
CFG-SEC-CFG_LOCK_UNLOCKGRP2	0x30f6000b	U2	-	-	0
CFG-SEC-SPOOFDET_SIM_SIG_DIS	0x10f6005d	L	-	-	0 (false)
CFG-SEC-JAMDET_SENSITIVITY_HI	0x10f60051	L	-	-	1 (true)

#### Table 86: CFG-SEC configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SFCORE-USE_SF	0x10080001	L	-	-	1 (true)
CFG-SFCORE-IMU2CRP_LA_X	0x30080002	12	-	cm	0
CFG-SFCORE-IMU2CRP_LA_Y	0x30080003	12	-	cm	0
CFG-SFCORE-IMU2CRP_LA_Z	0x30080004	12	-	cm	0

#### Table 87: CFG-SFCORE configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SFIMU-GYRO_TC_UPDATE_PERIOD	0x30060007	U2	-	S	1200
CFG-SFIMU-GYRO_RMSTHDL	0x20060008	U1	2^-8	deg/s	128
CFG-SFIMU-GYRO_FREQUENCY	0x20060009	U1	-	Hz	0
CFG-SFIMU-GYRO_LATENCY	0x3006000a	U2	-	ms	0
CFG-SFIMU-GYRO_ACCURACY	0x3006000b	U2	1e-3	deg/s	100
CFG-SFIMU-ACCEL_RMSTHDL	0x20060015	U1	2^-6	m/s^2	32



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SFIMU-ACCEL_FREQUENCY	0x20060016	U1	-	Hz	0
CFG-SFIMU-ACCEL_LATENCY	0x30060017	U2	-	ms	0
CFG-SFIMU-ACCEL_ACCURACY	0x30060018	U2	1e-4	m/s^2	1000
CFG-SFIMU-IMU_EN	0x1006001d	L	-	-	1 (true)
CFG-SFIMU-IMU_I2C_SCL_PIO	0x2006001e	U1	-	-	4
CFG-SFIMU-IMU_I2C_SDA_PIO	0x2006001f	U1	-	-	3
CFG-SFIMU-IMU2ANT_LA_X	0x30060020	12	-	cm	0
CFG-SFIMU-IMU2ANT_LA_Y	0x30060021	12	-	cm	0
CFG-SFIMU-IMU2ANT_LA_Z	0x30060022	12	-	cm	0
CFG-SFIMU-AUTO_MNTALG_ENA	0x10060027	L	-	-	0 (false)
CFG-SFIMU-IMU_MNTALG_YAW	0x4006002d	U4	1e-2	deg	0
CFG-SFIMU-IMU_MNTALG_PITCH	0x3006002e	12	1e-2	deg	0
CFG-SFIMU-IMU_MNTALG_ROLL	0x3006002f	12	1e-2	deg	0
CFG-SFIMU-IMU_MNTALG_TOLERANCE	0x20060030	E1	-	-	0 (LOW)

## Table 88: CFG-SFIMU configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SFODO-COMBINE_TICKS	0x10070001	L	-	-	0 (false)
CFG-SFODO-USE_SPEED	0x10070003	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOCOUNTMAX	0x10070004	L	-	-	0 (false)
CFG-SFODO-DIS_AUTODIRPINPOL	0x10070005	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOSPEED	0x10070006	L	-	-	0 (false)
CFG-SFODO-FACTOR	0x40070007	U4	1e-6	-	0
CFG-SFODO-QUANT_ERROR	0x40070008	U4	1e-6	m (or m/s)	0
CFG-SFODO-COUNT_MAX	0x40070009	U4	-	-	1
CFG-SFODO-LATENCY	0x3007000a	U2	-	ms	0
CFG-SFODO-FREQUENCY	0x2007000b	U1	-	Hz	0
CFG-SFODO-CNT_BOTH_EDGES	0x1007000d	L	-	-	0 (false)
CFG-SFODO-SPEED_BAND	0x3007000e	U2	-	cm/s	0
CFG-SFODO-USE_WT_PIN	0x1007000f	L	-	-	1 (true)
CFG-SFODO-DIR_PINPOL	0x10070010	L	-	-	0 (false)
CFG-SFODO-DIS_AUTOSW	0x10070011	L	-	-	0 (false)
CFG-SFODO-IMU2VRP_LA_X	0x30070012	12	-	cm	0
CFG-SFODO-IMU2VRP_LA_Y	0x30070013	12	-	cm	0
CFG-SFODO-IMU2VRP_LA_Z	0x30070014	12	-	cm	0
CFG-SFODO-DIS_DIR_INFO	0x1007001c	L	-	-	0 (false)

## Table 89: CFG-SFODO configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SIGNAL-GPS_ENA	0x1031001f	L	-	-	1 (true)
CFG-SIGNAL-GPS_L1CA_ENA	0x10310001	L	-	-	1 (true)
CFG-SIGNAL-GPS_L2C_ENA	0x10310003	L	-	-	0 (false)



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SIGNAL-GPS_L5_ENA	0x10310004	L	-	-	0 (false)
CFG-SIGNAL-SBAS_ENA	0x10310020	L	-	-	1 (true)
CFG-SIGNAL-SBAS_L1CA_ENA	0x10310005	L	-	-	1 (true)
CFG-SIGNAL-GAL_ENA	0x10310021	L	-	-	1 (true)
CFG-SIGNAL-GAL_E1_ENA	0x10310007	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5A_ENA	0x10310009	L	-	-	1 (true)
CFG-SIGNAL-GAL_E5B_ENA	0x1031000a	L	-	-	0 (false)
CFG-SIGNAL-BDS_ENA	0x10310022	L	-	-	1 (true)
CFG-SIGNAL-BDS_B1_ENA	0x1031000d	L	-	-	1 (true)
CFG-SIGNAL-BDS_B2_ENA	0x1031000e	L	-	-	0 (false)
CFG-SIGNAL-BDS_B2A_ENA	0x10310028	L	-	-	1 (true)
CFG-SIGNAL-QZSS_ENA	0x10310024	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L1CA_ENA	0x10310012	L	-	-	1 (true)
CFG-SIGNAL-QZSS_L2C_ENA	0x10310015	L	-	-	0 (false)
CFG-SIGNAL-QZSS_L5_ENA	0x10310017	L	-	-	1 (true)
CFG-SIGNAL-GLO_ENA	0x10310025	L	-	-	1 (true)
CFG-SIGNAL-GLO_L1_ENA	0x10310018	L	-	-	1 (true)
CFG-SIGNAL-GLO_L2_ENA	0x1031001a	L	-	-	0 (false)
CFG-SIGNAL-NAVIC_ENA	0x10310026	L	-	-	1 (true)
CFG-SIGNAL-NAVIC_L5_ENA	0x1031001d	L	-	-	0 (false)

## Table 90: CFG-SIGNAL configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPARTN-USE_SOURCE	0x20a70001	E1	-	-	0 (IP)

#### Table 91: CFG-SPARTN configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SPI-MAXFF	0x20640001	U1	-	-	50
CFG-SPI-CPOLARITY	0x10640002	L	-	-	0 (false)
CFG-SPI-CPHASE	0x10640003	L	-	-	0 (false)
CFG-SPI-EXTENDEDTIMEOUT	0x10640005	L	-	-	0 (false)
CFG-SPI-ENABLED	0x10640006	L	-	-	0 (false)

## Table 92: CFG-SPI configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SPIINPROT-UBX	0x10790001	L	-	-	1 (true)
CFG-SPIINPROT-NMEA	0x10790002	L	-	-	1 (true)
CFG-SPIINPROT-RTCM3X	0x10790004	L	-	-	1 (true)
CFG-SPIINPROT-SPARTN	0x10790005	L	-	-	1 (true)

#### Table 93: CFG-SPIINPROT configuration defaults

Configuration item	Key ID	Type	Scale	Unit	Default value
CFG-SPIOUTPROT-UBX	0x107a0001	L	-	-	1 (true)



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-SPIOUTPROT-NMEA	0x107a0002	L	-	-	1 (true)
Table 94: CFG-SPIOUTPROT configuration defaults					
Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-TP-PULSE_DEF	0x20050023	E1	- "	-	0 (PERIOD)
CFG-TP-PULSE_LENGTH_DEF	0x20050030	E1	-	-	1 (LENGTH)
CFG-TP-ANT_CABLEDELAY	0x30050001	12	1e-9	S	50
CFG-TP-PERIOD_TP1	0x40050002	U4	1e-6	s	1000000
CFG-TP-PERIOD_LOCK_TP1	0x40050003	U4	1e-6	S	1000000
CFG-TP-FREQ_TP1	0x40050024	U4	-	Hz	1
CFG-TP-FREQ_LOCK_TP1	0x40050025	U4	-	Hz	1
CFG-TP-LEN_TP1	0x40050004	U4	1e-6	S	0
CFG-TP-LEN_LOCK_TP1	0x40050005	U4	1e-6	s	100000
CFG-TP-DUTY_TP1	0x5005002a	R8	-	%	0
CFG-TP-DUTY_LOCK_TP1	0x5005002b	R8	-	%	10
CFG-TP-USER_DELAY_TP1	0x40050006	14	1e-9	s	0
CFG-TP-TP1_ENA	0x10050007	L	-	-	1 (true)
CFG-TP-SYNC_GNSS_TP1	0x10050008	L	-	-	1 (true)
CFG-TP-USE_LOCKED_TP1	0x10050009	L	-	-	1 (true)
CFG-TP-ALIGN_TO_TOW_TP1	0x1005000a	L	-	-	1 (true)
CFG-TP-POL_TP1	0x1005000b	L	-	-	1 (true)
CFG-TP-TIMEGRID_TP1	0x2005000c	E1	-	-	0 (UTC)
CFG-TP-DRSTR_TP1	0x20050035	E1	-	-	1 (DRIVE_STRENGTH_4MA)

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-TXREADY-ENABLED	0x10a20001	L	-	-	0 (false)
CFG-TXREADY-POLARITY	0x10a20002	L	-	-	0 (false)
CFG-TXREADY-PIN	0x20a20003	U1	-	-	0
CFG-TXREADY-THRESHOLD	0x30a20004	U2	-	-	0
CFG-TXREADY-INTERFACE	0x20a20005	E1	-	-	0 (I2C)

## Table 96: CFG-TXREADY configuration defaults

Configuration item	Key ID Ty	ype	Scale	Unit	Default value
CFG-UART1-BAUDRATE	0x40520001 U	U4	-	-	38400
CFG-UART1-STOPBITS	0x20520002 <b>E</b>	E1	-	-	1 (ONE)
CFG-UART1-DATABITS	0x20520003 <b>E</b>	E1	-	-	0 (EIGHT)
CFG-UART1-PARITY	0x20520004 <b>E</b>	E1	-	-	0 (NONE)
CFG-UART1-ENABLED	0x10520005	L	-	-	1 (true)

#### Table 97: CFG-UART1 configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-UART1INPROT-UBX	0x10730001	L	=.	-	1 (true)
CFG-UART1INPROT-NMEA	0x10730002	2 L	-	-	1 (true)



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-UART1INPROT-RTCM3X	0x1073000	1 L	-	-	1 (true)
CFG-UART1INPROT-SPARTN	0x10730005	5 L	-	-	1 (true)

## Table 98: CFG-UART1INPROT configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-UART1OUTPROT-UBX	0x10740001	L	-	-	1 (true)
CFG-UART1OUTPROT-NMEA	0x10740002	<u>L</u>	-	-	1 (true)

#### Table 99: CFG-UART10UTPROT configuration defaults

CFG-UART2-BAUDRATE         0x40530001         U4         -         -           CFG-UART2-STOPBITS         0x20530002         E1         -         -	Default value
0KZ033000Z =-	38400
OFC HADTS DATABLES	1 (ONE)
CFG-UART2-DATABITS 0x20530003 E1	0 (EIGHT)
CFG-UART2-PARITY 0x20530004 E1	0 (NONE)
CFG-UART2-ENABLED 0x10530005 L	1 (true)

#### Table 100: CFG-UART2 configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-UART2INPROT-UBX	0x10750001	L	-	-	1 (true)
CFG-UART2INPROT-NMEA	0x10750002	L	-	-	0 (false)
CFG-UART2INPROT-RTCM3X	0x10750004	L	-	-	1 (true)
CFG-UART2INPROT-SPARTN	0x10750005	L	-	-	1 (true)

#### Table 101: CFG-UART2INPROT configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-UART2OUTPROT-UBX	0x10760001	L	-	-	0 (false)
CFG-UART2OUTPROT-NMEA	0x10760002	L	-	-	0 (false)

#### Table 102: CFG-UART2OUTPROT configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-USB-ENABLED	0x10650001	L	-	-	1 (true)
CFG-USB-SELFPOW	0x10650002	L	-	-	1 (true)
CFG-USB-VENDOR_ID	0x3065000a	U2	-	-	5446
CFG-USB-PRODUCT_ID	0x3065000b	U2	-	-	425
CFG-USB-POWER	0x3065000c	U2	-	mA	0
CFG-USB-VENDOR_STR0	0x5065000d	X8	-	-	0x4120786f6c622d75 ("u-blox A")
CFG-USB-VENDOR_STR1	0x5065000e	X8	-	-	0x2e777777202d2047 ("G - www.")
CFG-USB-VENDOR_STR2	0x5065000f	X8	-	-	0x632e786f6c622d75 ("u-blox.c")
CFG-USB-VENDOR_STR3	0x50650010	X8	-	-	0x000000000006d6f ("om\0\0\0\0\0\0\0\0")
CFG-USB-PRODUCT_STR0	0x50650011	X8	-	-	0x4720786f6c622d75 ("u-blox G")
CFG-USB-PRODUCT_STR1	0x50650012	X8	-	-	0x656365722053534e ("NSS rece")



Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-USB-PRODUCT_STR2	0x50650013	X8	-	-	0x0000000072657669 ("iver\0\0\0\0")
CFG-USB-PRODUCT_STR3	0x50650014	X8	-	-	0x000000000000000
CFG-USB-SERIAL_NO_STR0	0x50650015	X8	-	-	0x000000000000000
CFG-USB-SERIAL_NO_STR1	0x50650016	X8	-	-	0x000000000000000
CFG-USB-SERIAL_NO_STR2	0x50650017	X8	-	-	0x000000000000000
CFG-USB-SERIAL_NO_STR3	0x50650018	X8	-	-	0x000000000000000

## Table 103: CFG-USB configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-USBINPROT-UBX	0x10770001	L	-	-	1 (true)
CFG-USBINPROT-NMEA	0x10770002	L	-	-	1 (true)
CFG-USBINPROT-RTCM3X	0x10770004	L	-	-	1 (true)
CFG-USBINPROT-SPARTN	0x10770005	L	-	-	1 (true)

#### Table 104: CFG-USBINPROT configuration defaults

Configuration item	Key ID	Туре	Scale	Unit	Default value
CFG-USBOUTPROT-UBX	0x10780001	L	-	-	1 (true)
CFG-USBOUTPROT-NMEA	0x10780002	L	-	-	1 (true)

Table 105: CFG-USBOUTPROT configuration defaults



## Related documents

- [1] ZED-F9K-02A Data sheet, UBXDOC-304424225-18291
- [2] ZED-F9K integration manual, UBX-20046189
- [3] RTCM Standard 10403.4 Recommended Standards for Differential GNSS (Global Navigation Satellite Systems) Service, Version 3
- [4] Radio Resource LCS Protocol (RRLP), (3GPP TS 44.031 version 11.0.0 Release 11)
- [5] NMEA 0183 Standard for Interfacing Marine Electronic Devices, Version 4.11, November 2018
- [6] Secure Position Augmentation for Real-Time Navigation (SPARTN) Interface Control Document, Version 2.0.2, February 2022



For regular updates to u-blox documentation and to receive product change notifications please register on our homepage (https://www.u-blox.com).



# **Revision history**

Revision	Date	Status / Comments
R01	20-Feb-2025	Advance information LAP 1.50



## **Contact**

u-blox AG

Address: Zürcherstrasse 68

8800 Thalwil Switzerland

For further support and contact information, visit us at www.u-blox.com/support.