



INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE FOR VEHICLE

PETERBILT 220EV & KENWORTH K270E/K370E

BATTERY ELECTRIC VEHICLE

Part Number: Y53-6287-1A1
Release Date: 11/21/2025

Contents

0. Rescue Sheet(s)	Page 1
1. Identification / Recognition	Page 2
2. Immobilization / Stabilization / Lifting	Page 4
3. Disable Direct Hazards / Safety Regulations	Page 6
4. Access to the Occupants	Page 7
5. Stored Energy / Liquids / Gases / Solids	Page 10
6. In Case of Fire	Page 11
7. Water Submersion	Page 11
8. Towing / Transportation / Storage	Page 12
9. Important Additional Information	Page 14
10. Explanation of Pictograms Used	Page 15




Peterbilt 220EV
Kenworth K270E/K370E
Model Year 2021 – Current

This badge is on all battery electric trucks (both doors).



0. Rescue Sheet

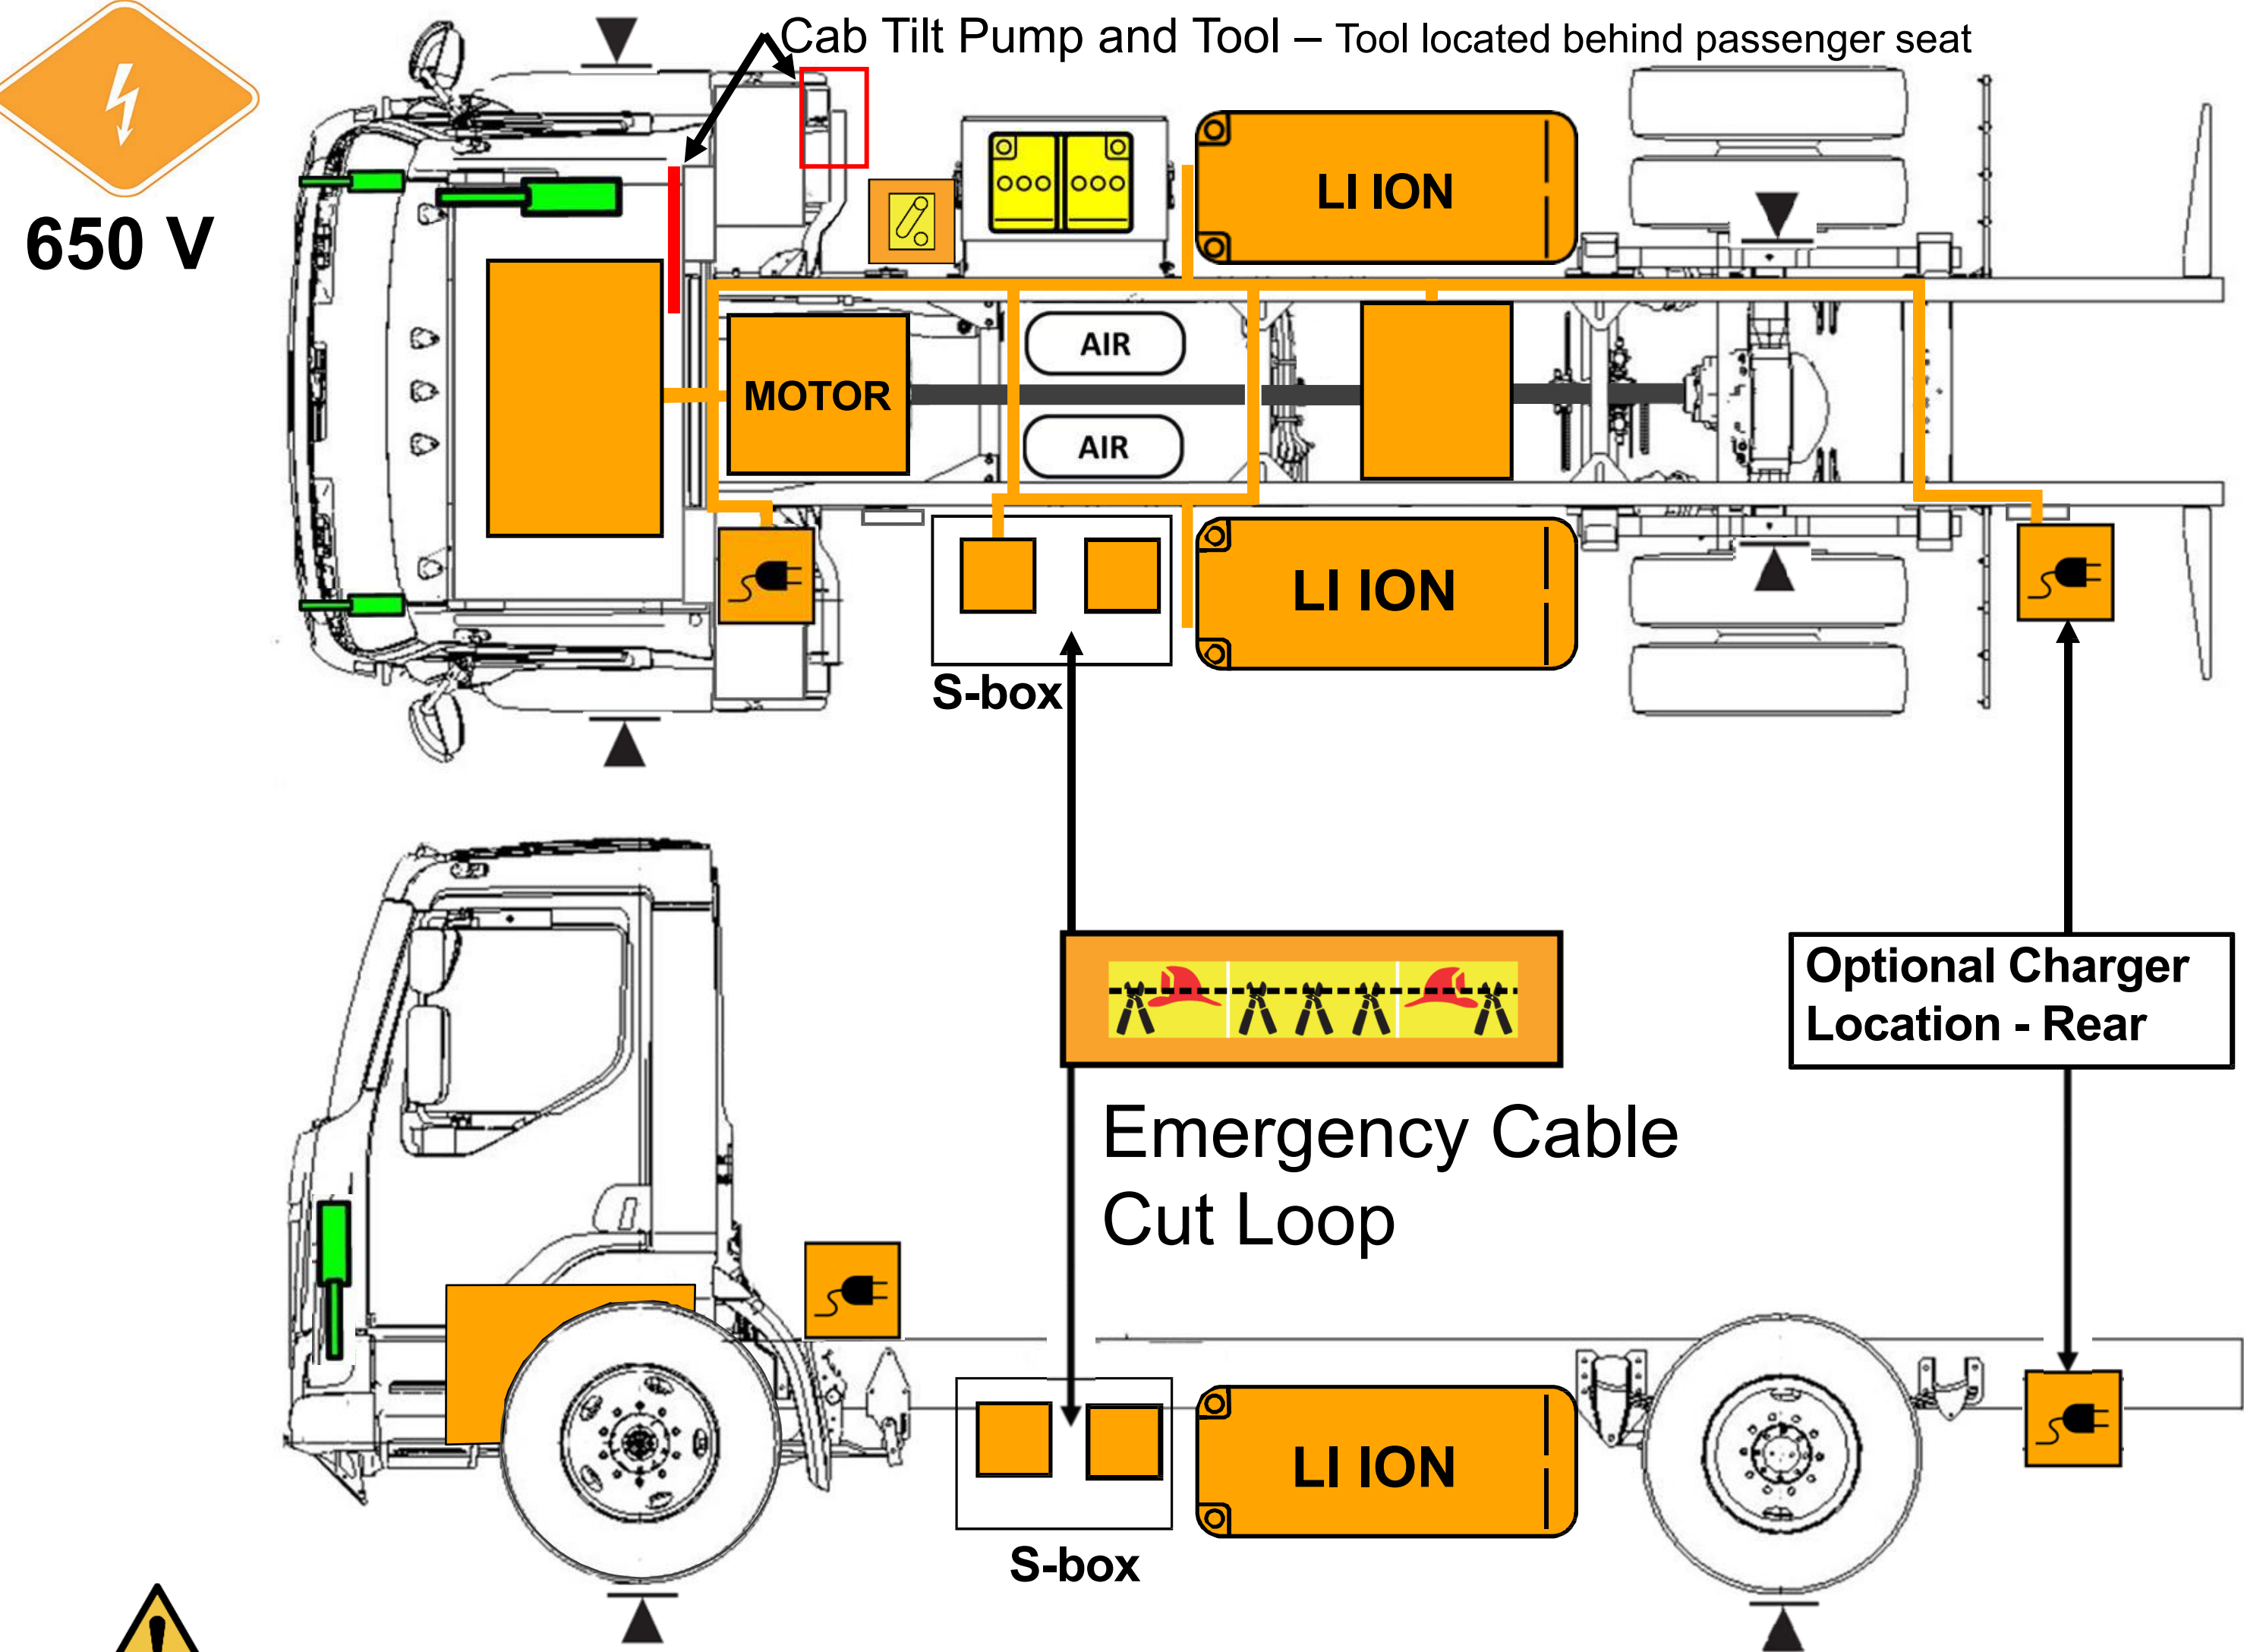

Warning! Check for labels identifying any additional high voltage components added by body builders.

High Voltage Li-Ion Battery Pack	High Voltage Cables	12V Disconnect	Gas Strut	Emergency Cable Cut Loop
Charger Inlet (Forward or Rear)	High Voltage Region	Low Voltage Battery	Lift Point	Compressed Air Tank

1. Identification / Recognition



Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus, when approaching this vehicle.

Peterbilt Model



Grill with blue accents



EV badge on both doors

Kenworth Model



Grill with blue accents



EV badge on both doors


1. Identification / Recognition

Interior – Peterbilt 220EV & Kenworth K270E / K370E



Center Dash Screen

Gauge Cluster Identification – Peterbilt 220EV & Kenworth K270E / K370E

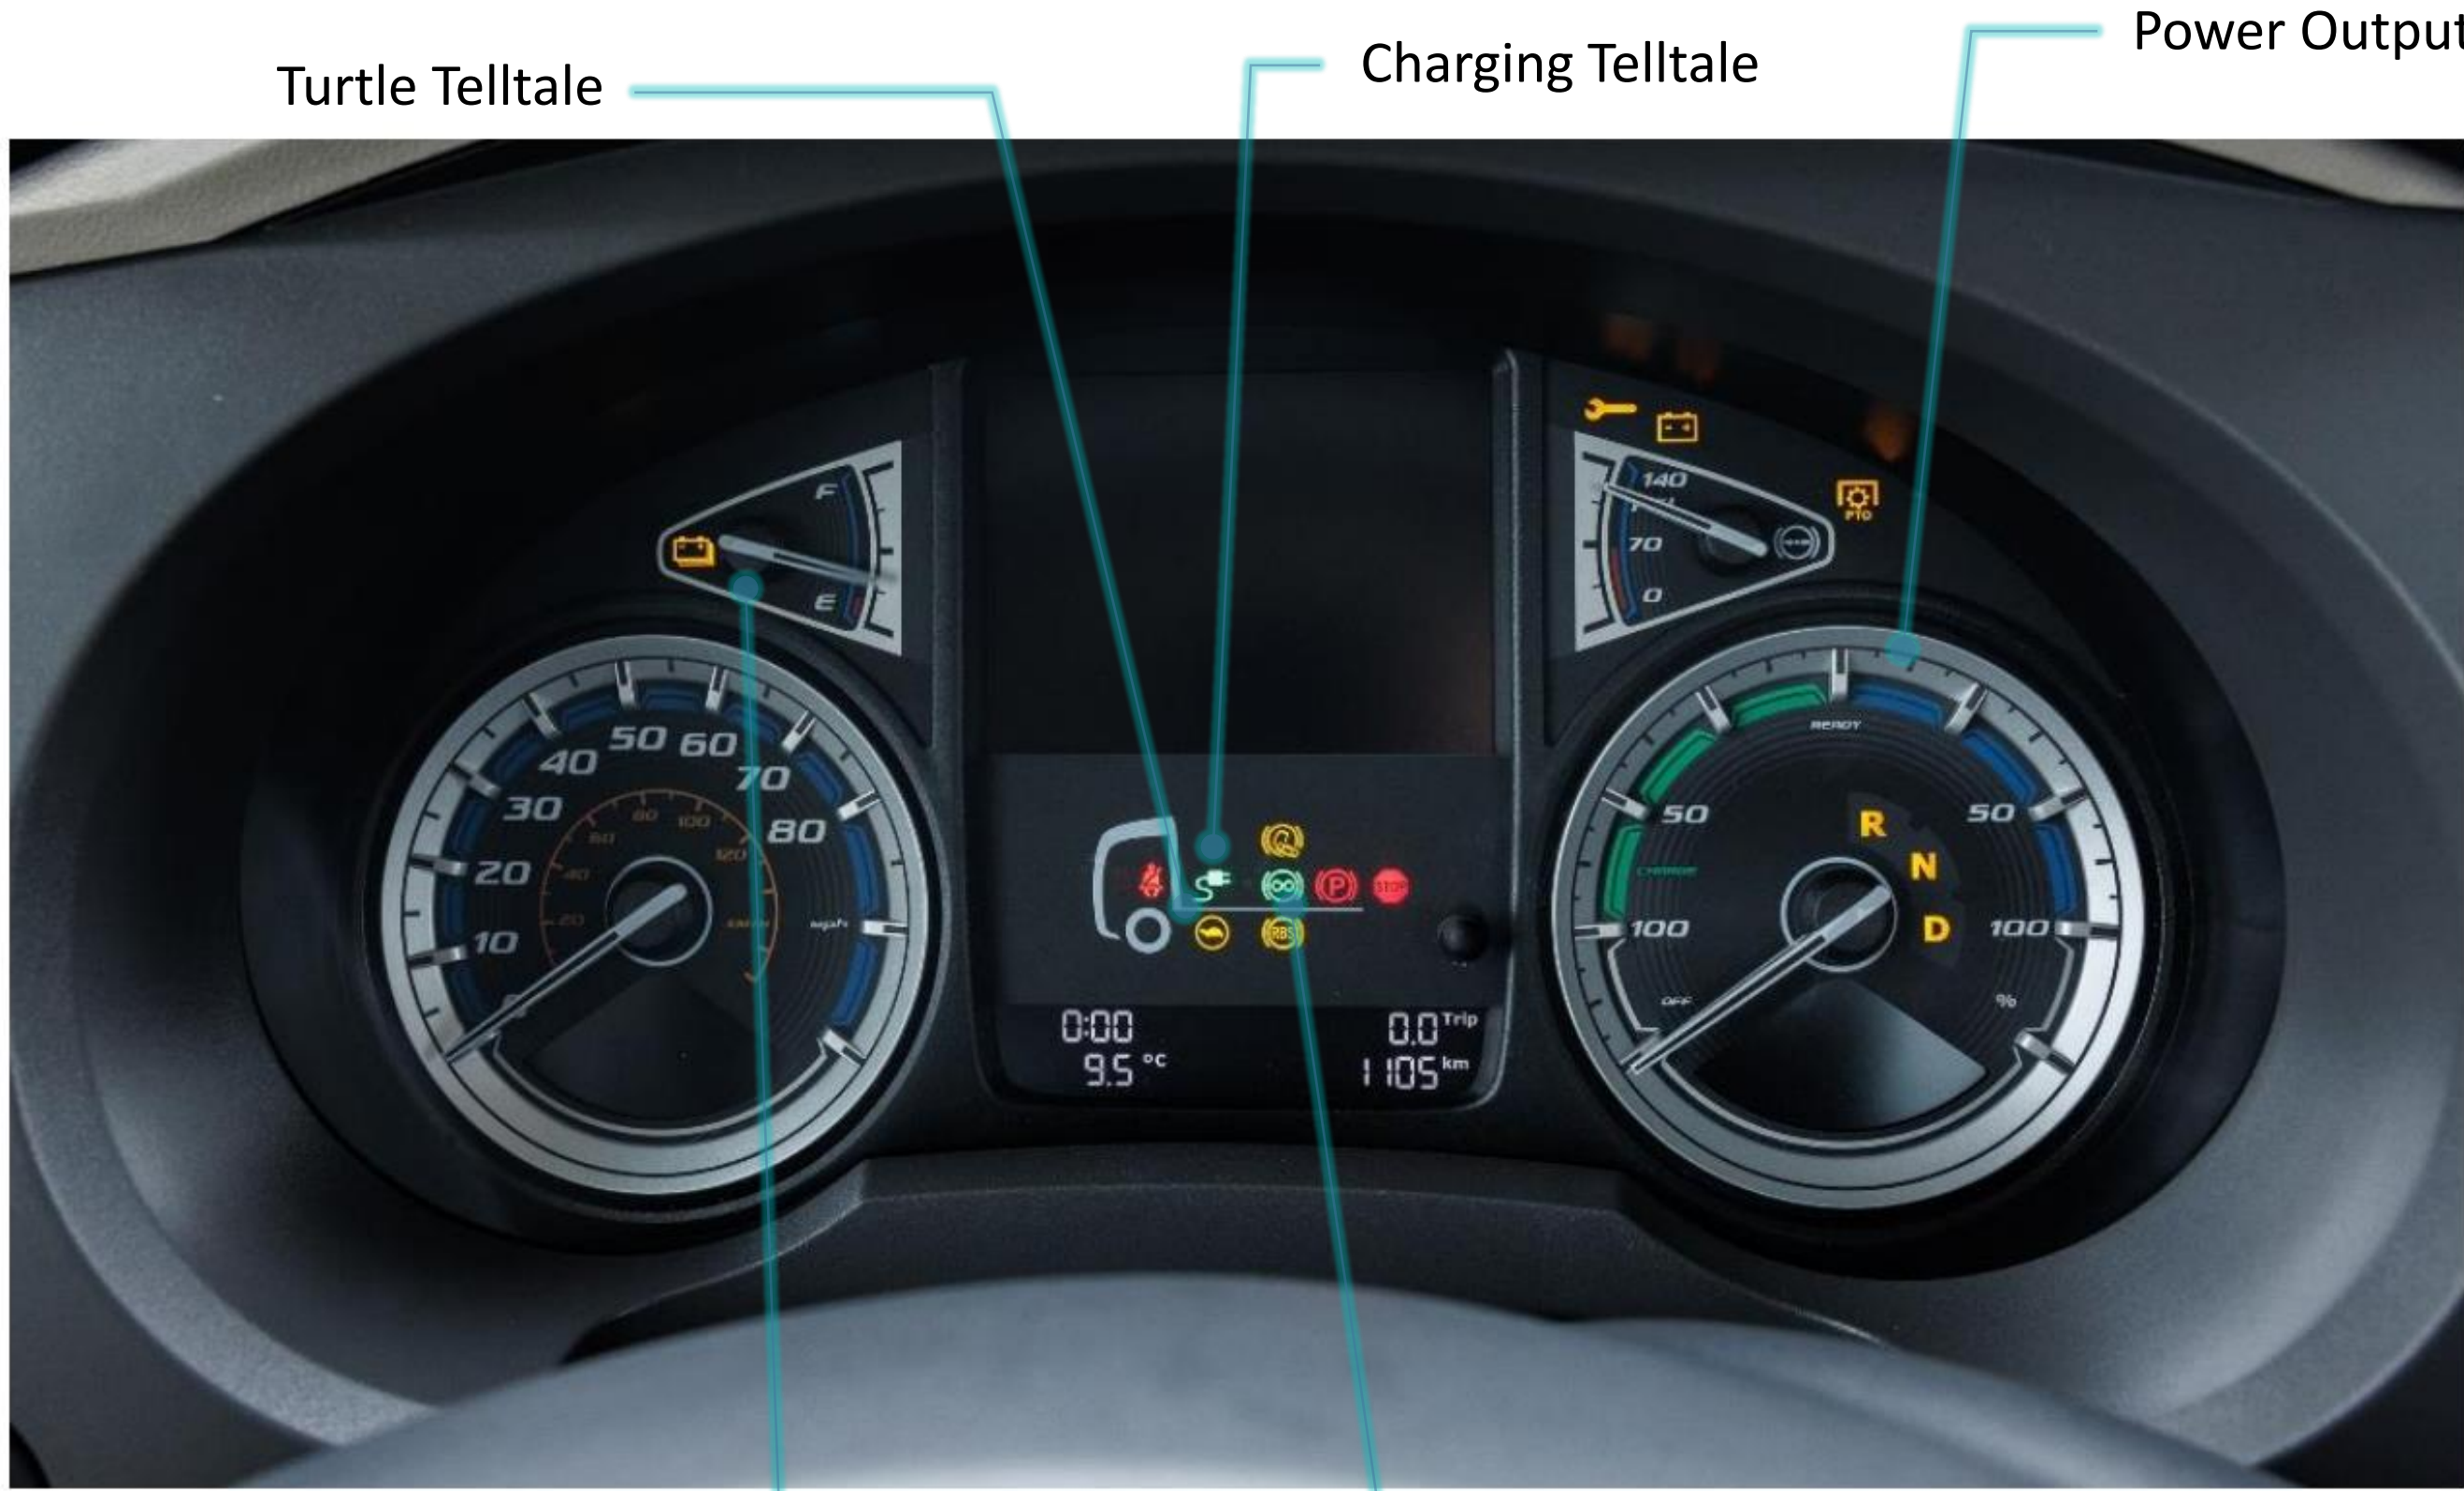

Turtle Telltale

Charging Telltale

Power Output Gauge

Charge Level

Regenerative Braking

2. Immobilization / Stabilization / Lifting

- **Warning:** Keep all lift equipment at least 12 inches (30 cm) from all high voltage components.
- **Warning:** Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.
Complete Section 3 steps if possible before immobilization.

Immobilization



- Step 1:** Unplug the Charger Cable or Remove Power from the Charger.
- Step 2:** Ensure vehicle is in Neutral (**N**) by using the gear selector in the center of vehicle.
- Step 3:** Remove the Key from Ignition.
- Step 4:** Engage parking brake by pulling the parking brake towards rear of vehicle.

2. Immobilization / Stabilization / Lifting





Rotating Truck

Wrap chains around both axles to rotate the truck to an upright stable position.

Lifting

Only use the lift points identified in the rescue sheet diagram:

1. Lifting at the rear of vehicle: use the axle housing.
2. Lifting at the front of vehicle: use the steer axle.
3. Lift at frame rails.

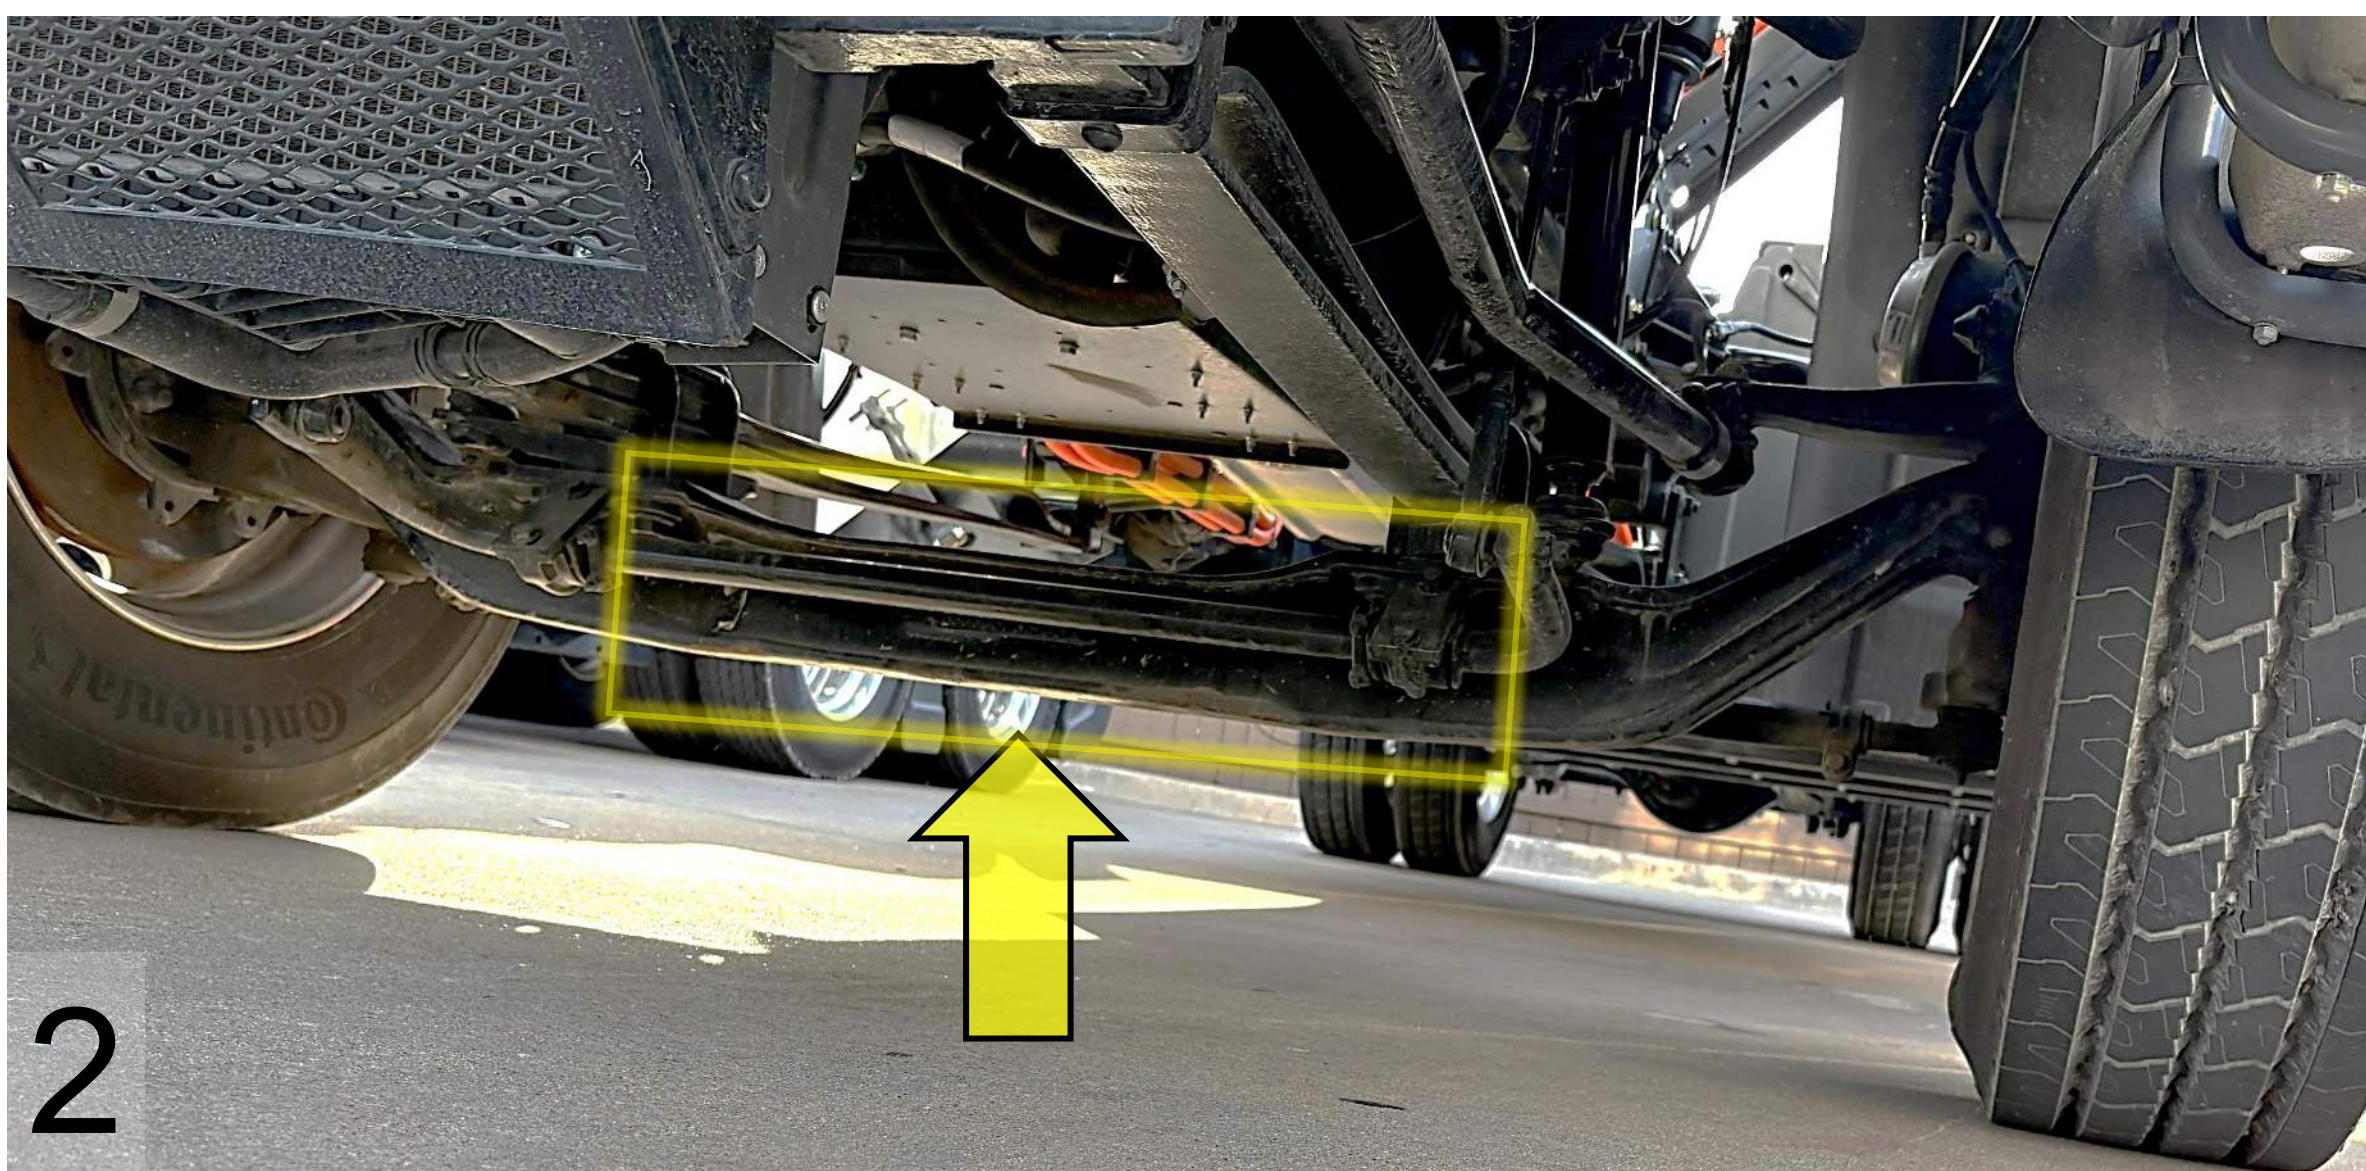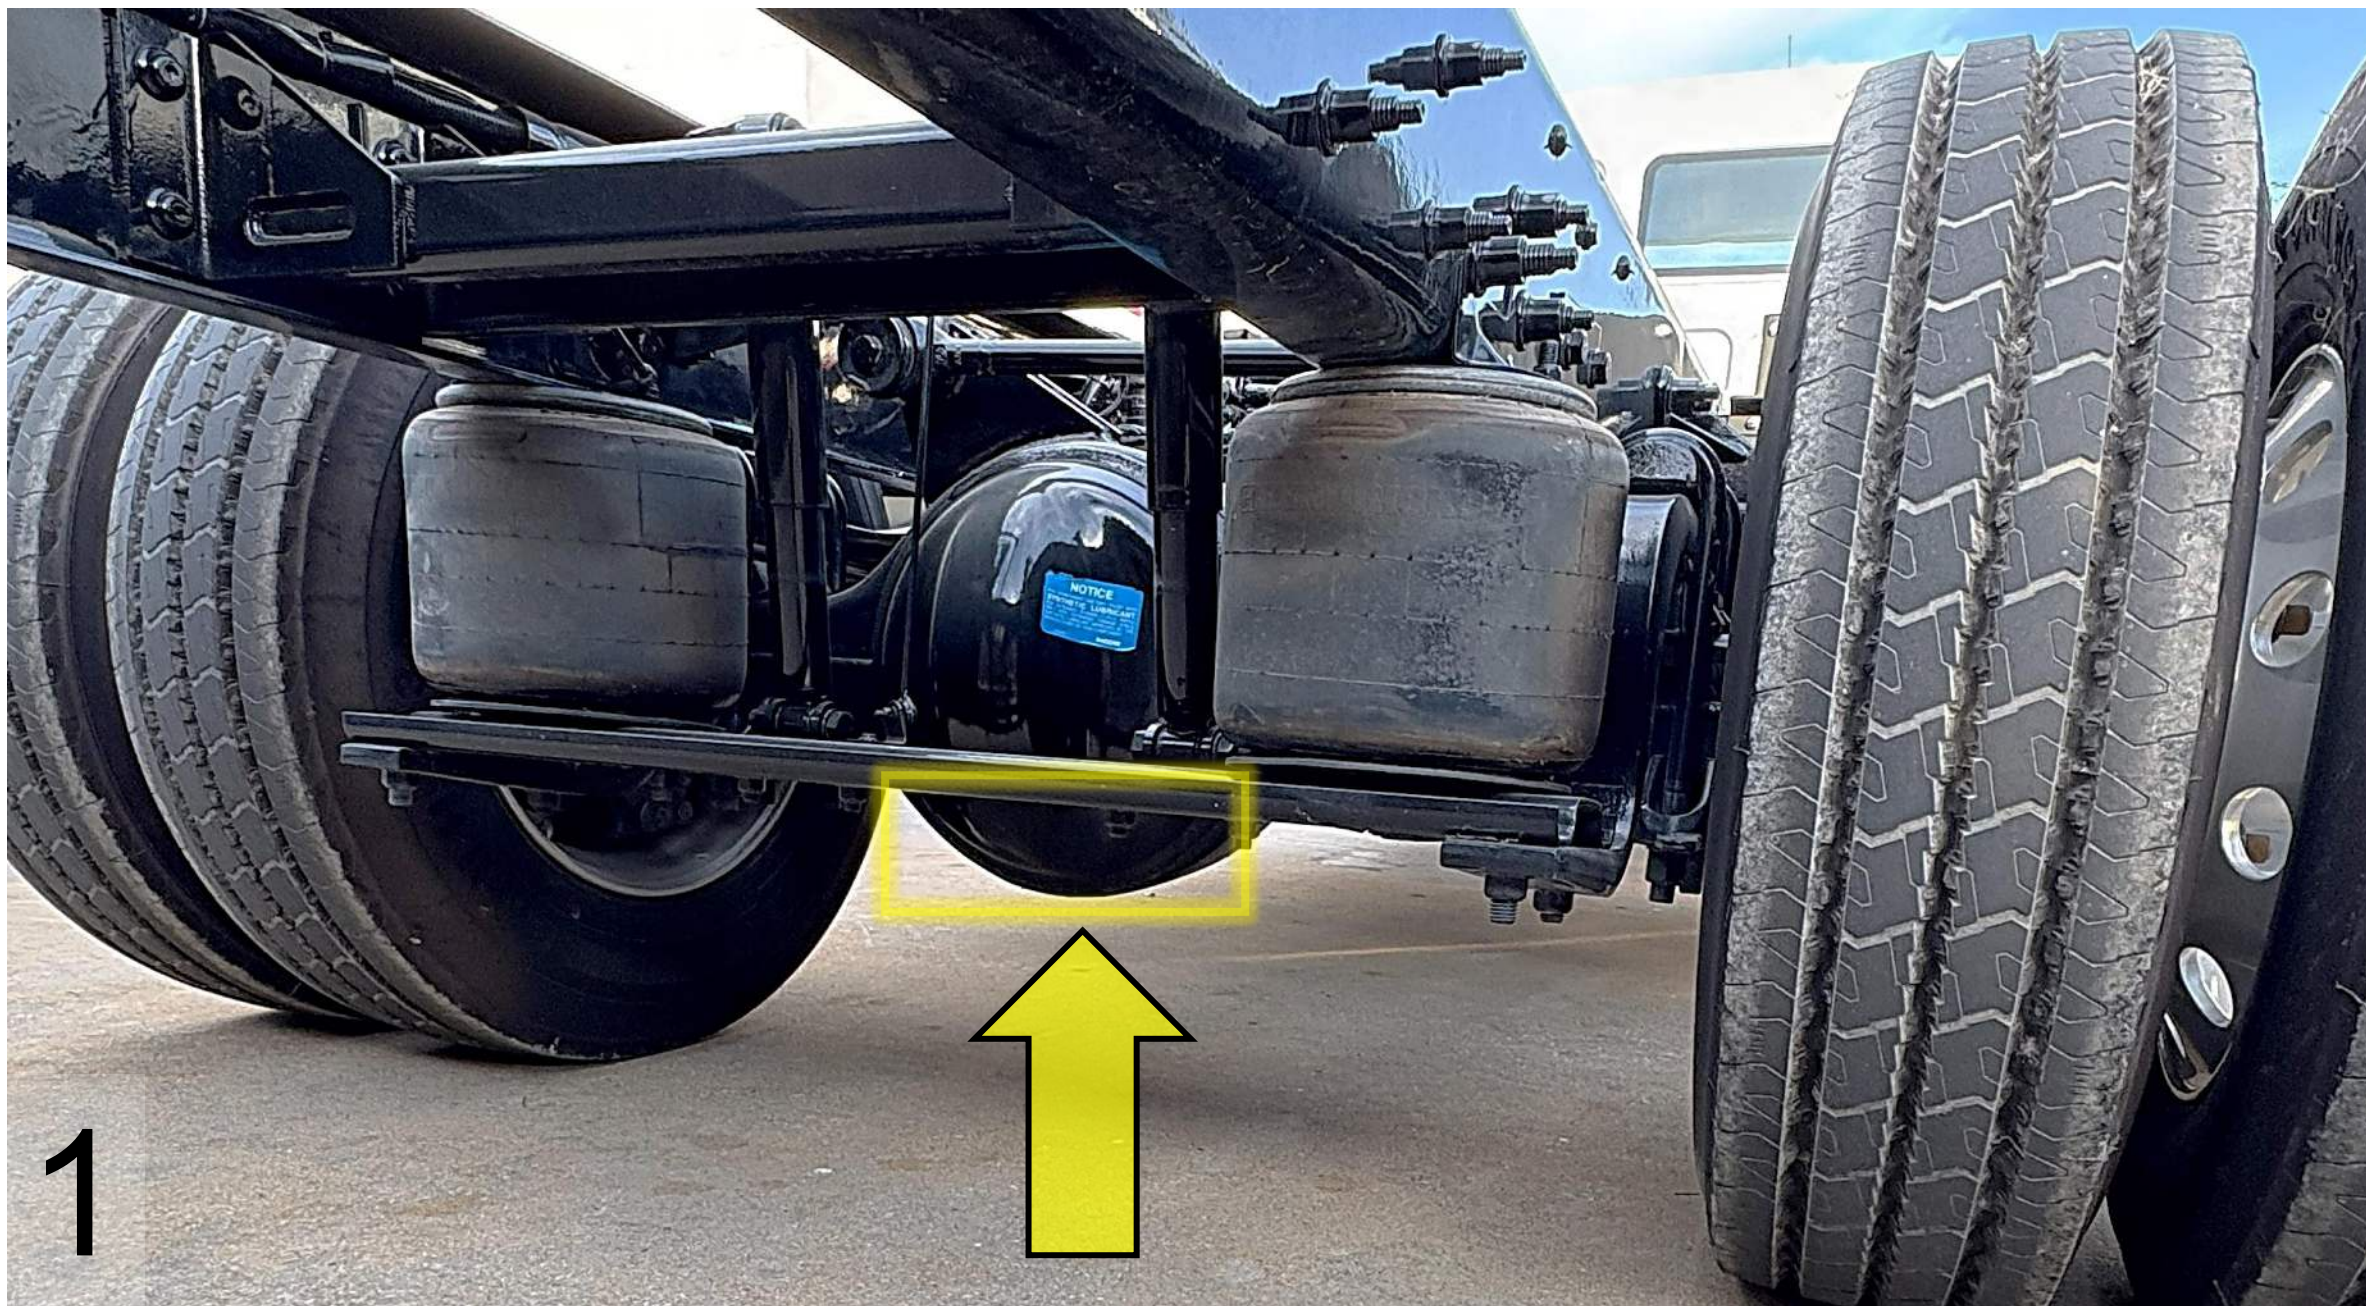


3. Disable Direct Hazards / Safety Regulations

- 


Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including high voltage orange cables.
- 

Warning: Cables between the high voltage battery and the S-box remain energized after the vehicle disable steps (including the 2-minute wait) are completed.

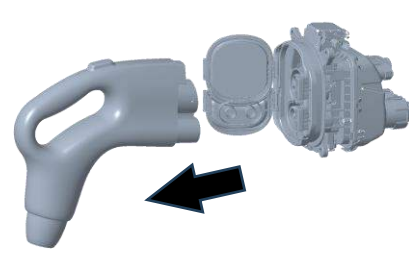- 

Step 1: (If Truck is Charging) Unplug the Charger Cable or Remove Power from the Charger.
- 


Step 2: Turn key to “Off” position and remove the Key from Ignition.

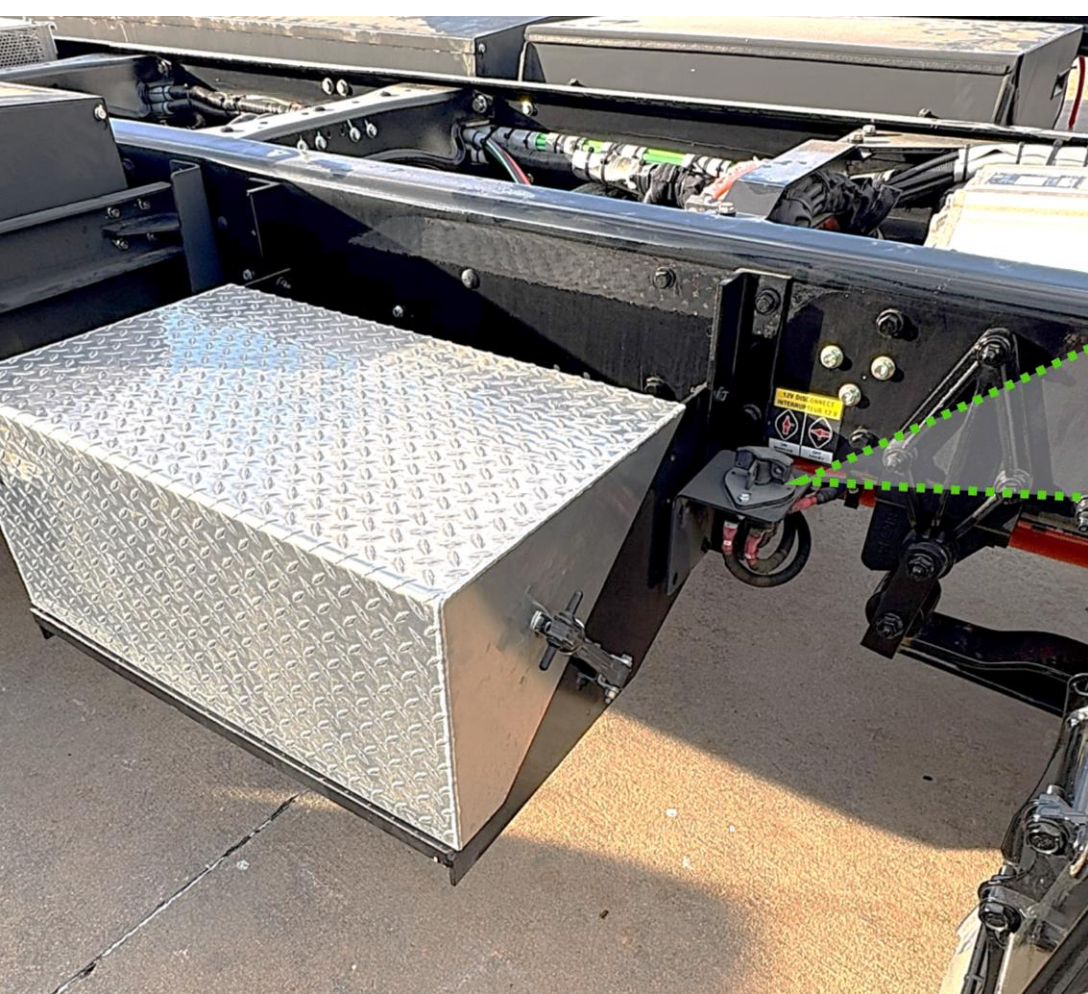

Step 4:
(Primary Step): Turn low voltage disconnect Counterclockwise to OFF Position.

The disconnect switch is located behind the cab on the curb side of the vehicle, on the front side of the battery box.



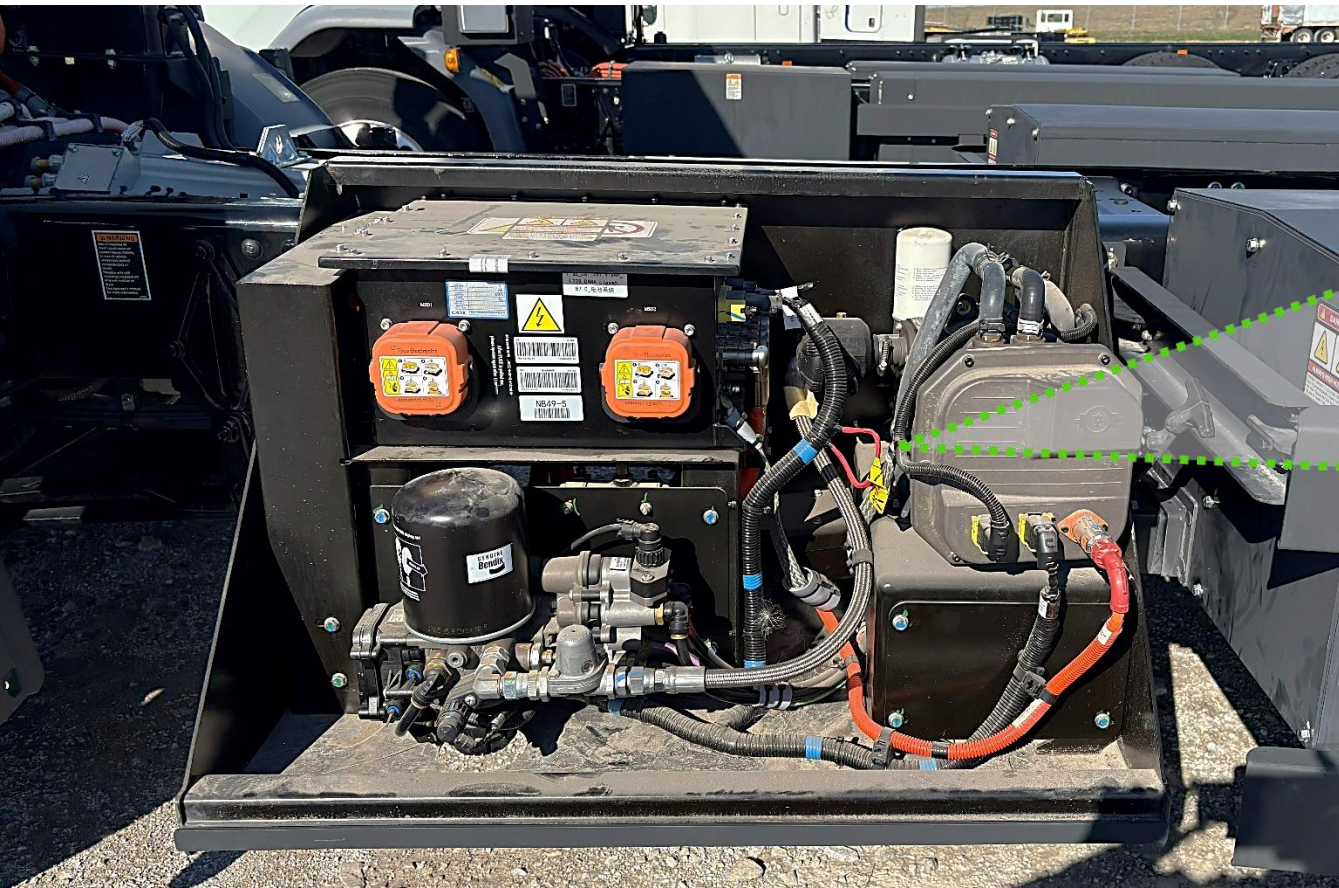

(Alternate Step): Cut a 5-inch (13 cm) segment (2 cuts) from the cut loop label.

Cut loop is located under the cover of the S-box on the street side of the vehicle. S-box lid is removed by unlatching two bungees on forward and rear side of box. S-box lid can then be lifted.




- 
- Step 5:** Wait 2 Minutes for High Voltage Capacitors to Discharge

Open Doors From Outside

Step 1: Insert key (1) into door lock turning key counter-clockwise for left-hand door or clockwise for right-hand door to unlock

Step 2: Grasp door handle (2) and pull out while exerting some force on the door in the outward direction

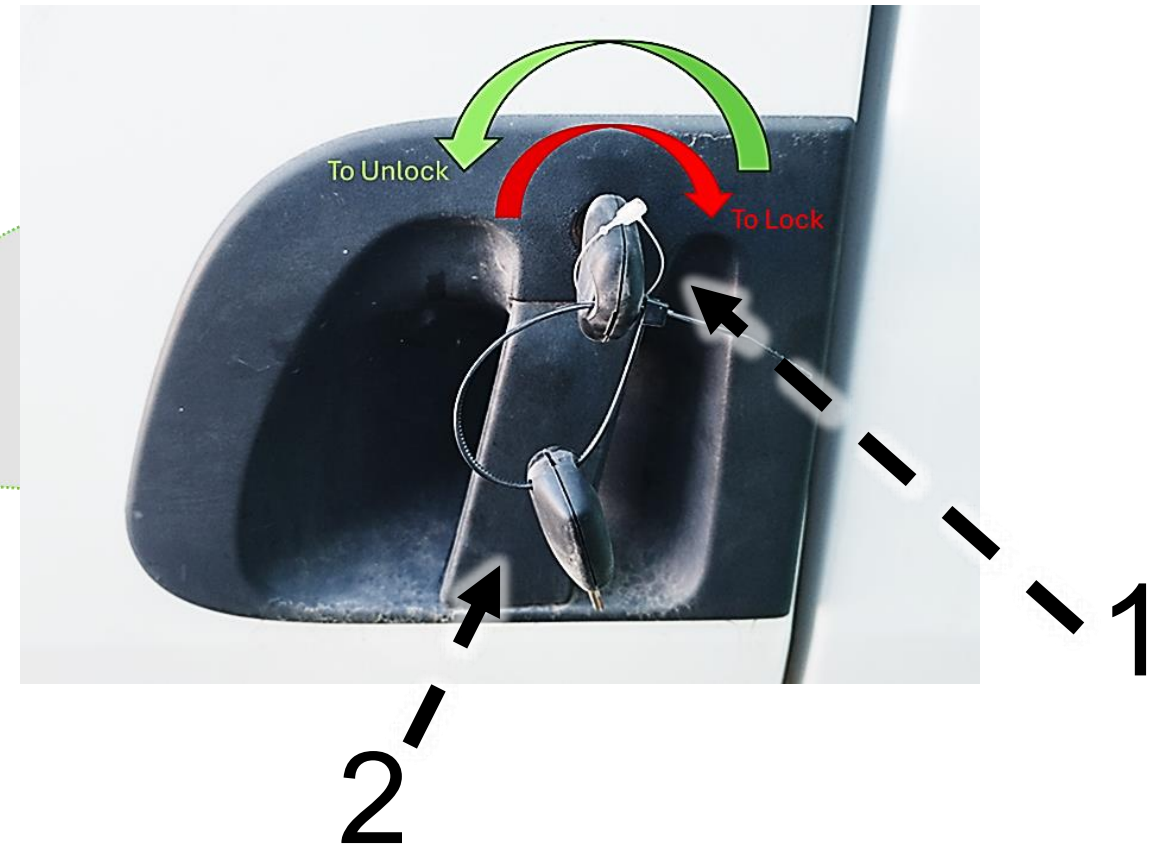

Open Doors From Inside

Step 1: Pull up on the door handle (1) to release door latch

Step 2: Firmly push door outward

Note: Peterbilt model (220EV) shown below. Kenworth models (K270E & K370E) door handle is identical in location and function. Interior door handle also functions as the lock: push down to lock the door and pull up to unlock and open the door.



Door handle

Seat Adjustment

- 1. Forward/Backward Adjustment:** Pull handle and push seat to slide forward or backward.
- 2. Seat Up/Down Adjustment:** Pull switch to control seat back recline.



Steering Column Adjustment

Step 1: Pull lever (1) to unlock steering adjustment

Step 2: To adjust steering column up/down, pull steering wheel up or down.

Step 3: Push lever (1) back into initial position to lock steering wheel in new location



Window and Windshield Material

Windshield: Laminated Glass (2)

Door, Side and Back windows: Tempered Glass (1)






Cab Material

Note: There is no high strength or ultra-high strength steel present in the cab. The cab is predominantly made of steel material.



5. Stored Energy / Liquids / Gases / Solids

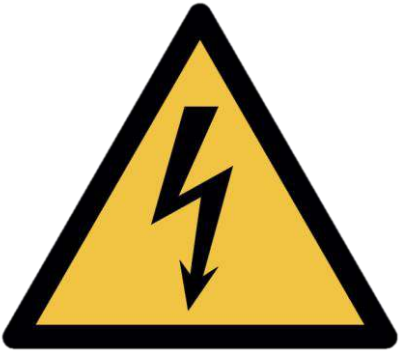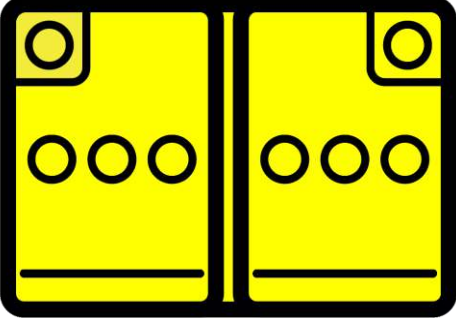 650 V	 High-voltage (650V)	 Corrosives	 Flammable	 Health Hazards
 24 V	 Corrosives	 Flammable	 Explosive	

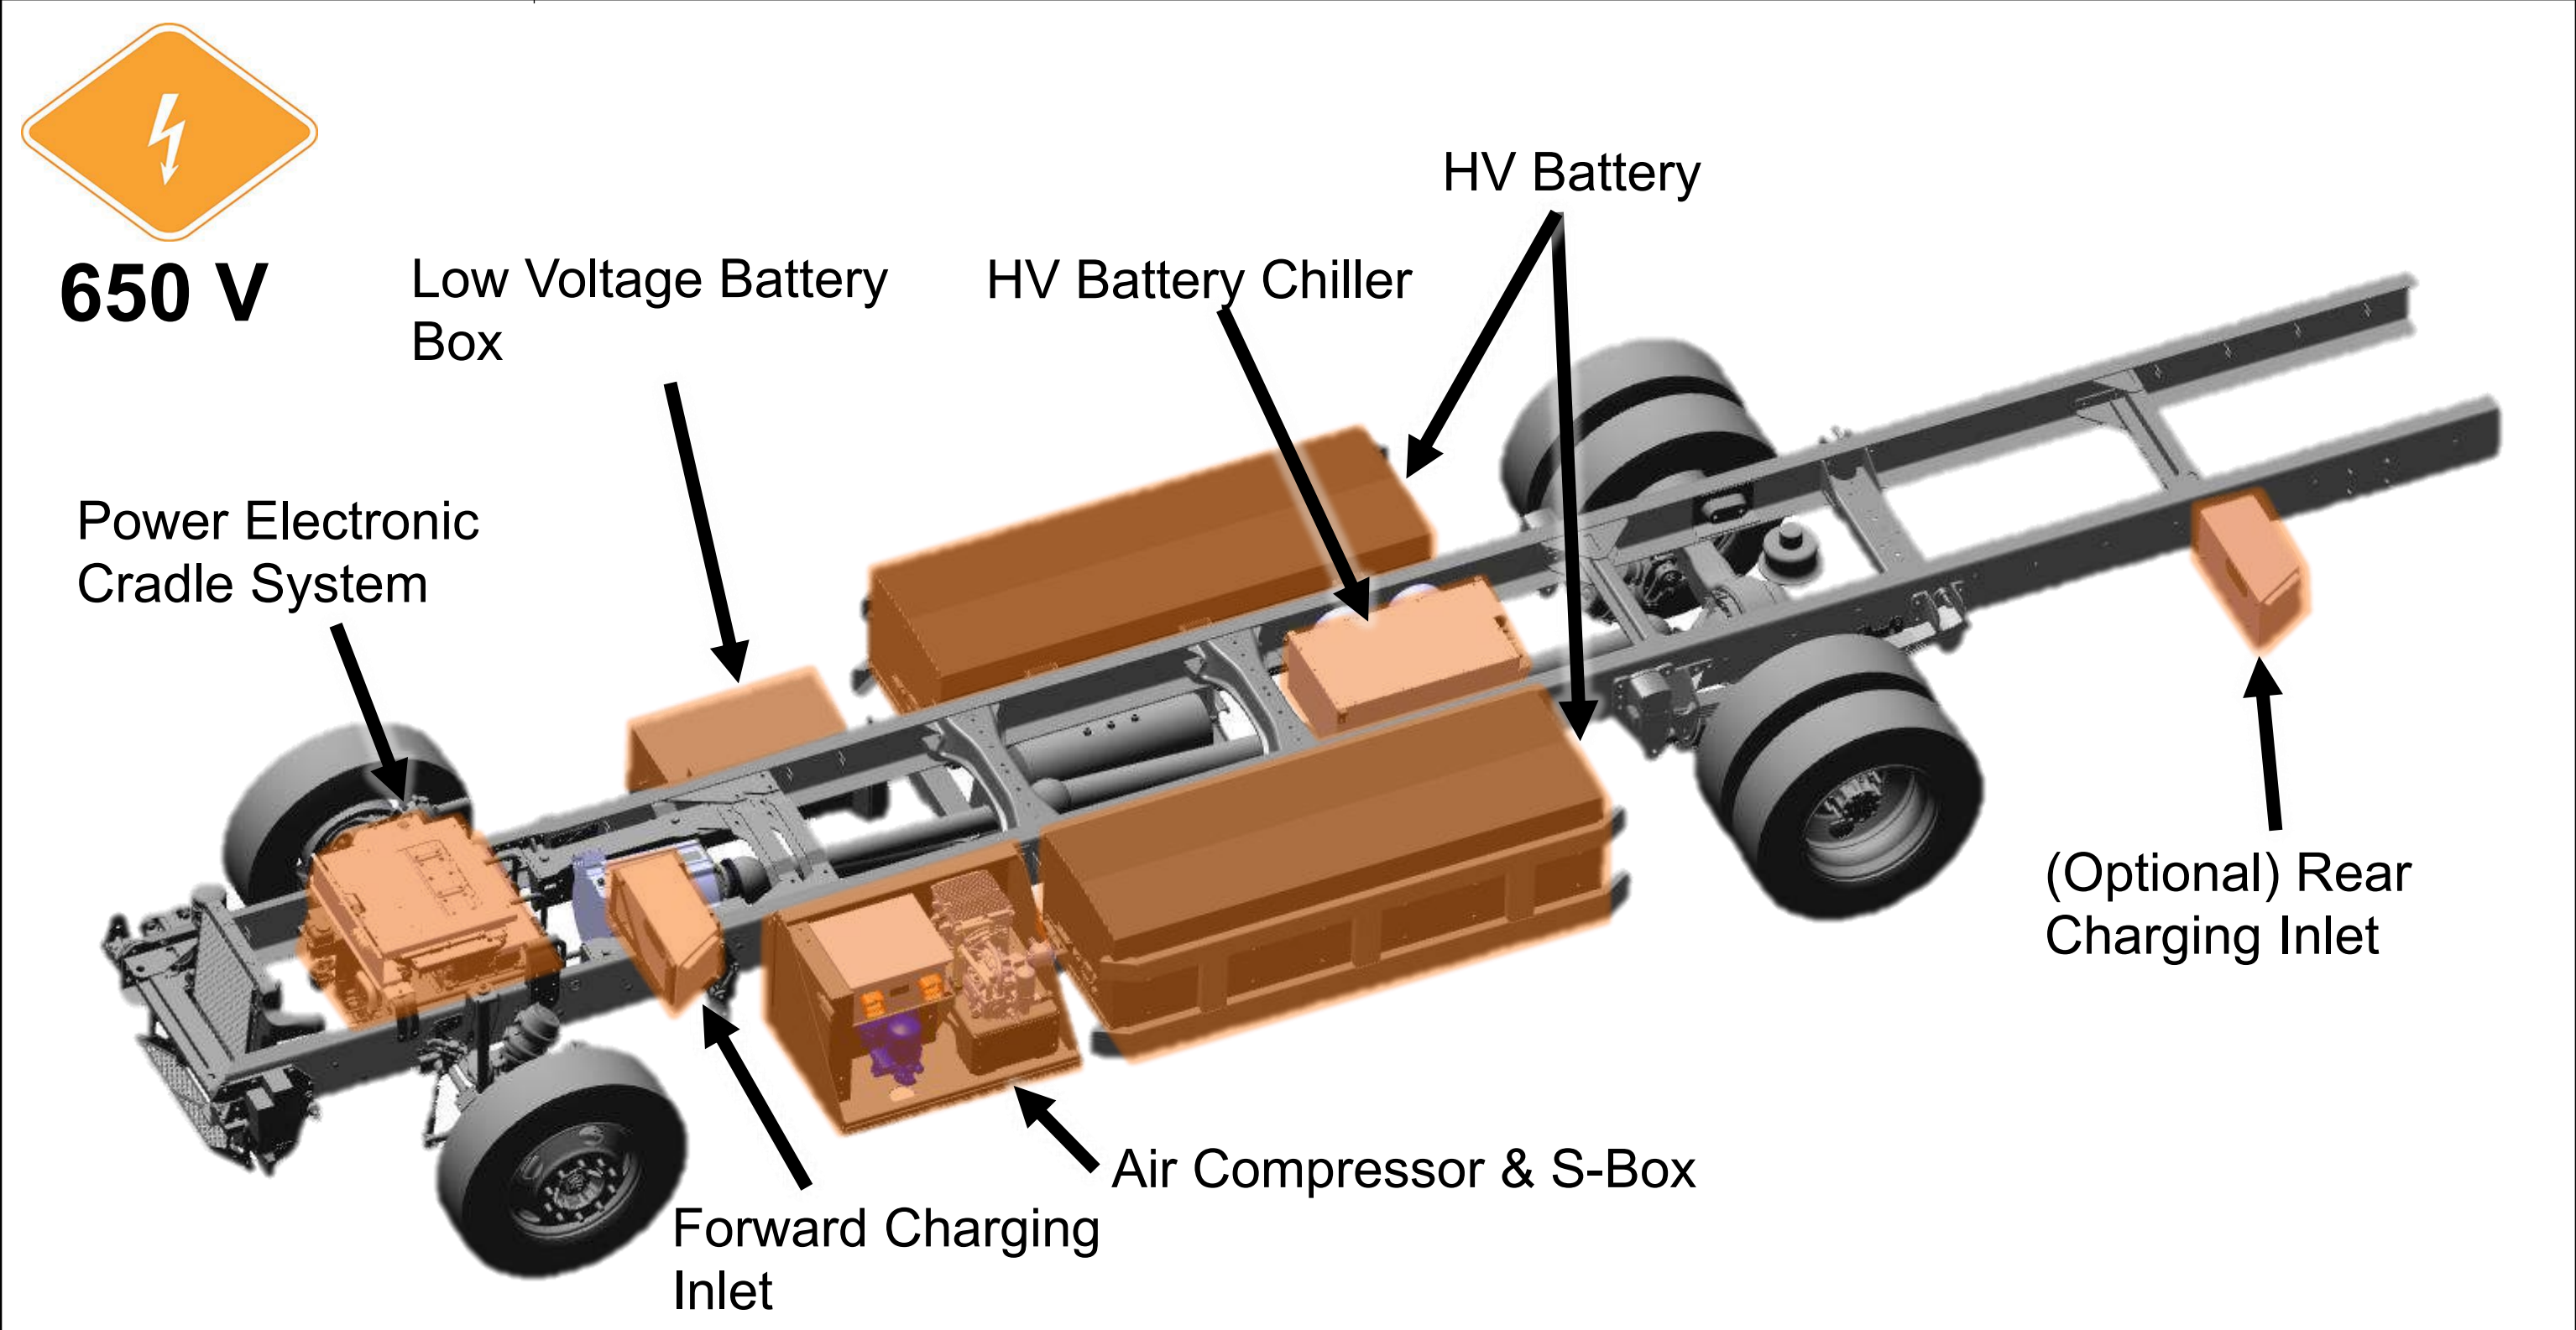

High-voltage Battery Locations: The system consists of two Energy Storage Systems (ESS) mounted on the outside of the frame rails. There are three possible configurations: each ESS containing two packs, the left-hand and right-hand ESS containing three packs, or each ESS containing one pack each. Each pack contains Lithium-Ion batteries.



 Air tanks and system hoses may have an air pressure of 100-130 psi (689-897 kPa).

 High voltage components are cooled with a glycol-based automotive coolant. This liquid is red in color and may leak if components are damaged.

Please contact local and state authorities for more information regarding proper response and clean up of hazardous materials

6. In Case of Fire

- **Warning:** Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus.
- **Warning:** Treat fires involving charging stations as energized fires until power to the charger can be shut down.
- **Warning:** Hydrogen Fluoride and/or Hydrofluoric Acid may be present.
- **Warning:** There is always risk of reignition

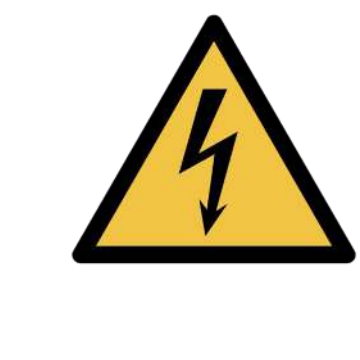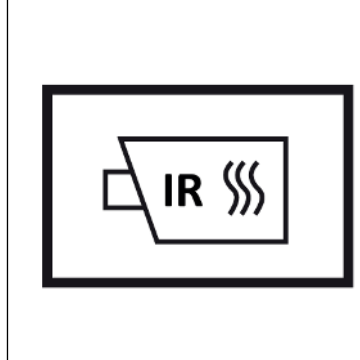 Use Water to Extinguish Li-ion Fires	 Do Not Use Wet Foam
 Hazardous to Human Health: • May cause an allergic skin reaction • Do not breathe dust, fumes, gas, mist, vapors, or spray.	 Flammable Components
 Explosion Hazard: • Explosive gas could accumulate. • Move truck outside building after extinguishing fire	 Corrosives: • Causes skin burns and eye damage
 High Voltage (650 V): • CAT III (1000 V) rated gloves required for exposed HV parts	 Check Li-ion Battery Pack for Fires with Thermal Infrared Camera (TIC or IR Gun)

7. Water Submersion

If a vehicle has been submerged there is a chance of secondary damage to high voltage components around the vehicle. These components present a hazard and should only be handled while wearing the correct PPE.

If the vehicle does NOT have impact damage, there is a low electrical shock risk. Remove the vehicle from the water. Let the water drain and follow the immobilization steps in Section 2. Do NOT attempt to drive.

In case of submersion:

Step 1: Reference section 3 to disable any direct hazards and ensure parking brake is not engaged

Step 2: Remove the vehicle from submersion (following the instructions in section 8)

Step 3: Drain as much water away from the vehicle as possible

Step 4: Follow steps in section 3 to disable high voltage

**Warning:** Do NOT attempt to drive the vehicle after submersion

**High Voltage (650 V)**

Please follow state, municipal, and department guidelines for properly handling electric vehicle submersion events

8. Towing / Transportation / Storage



- Follow Section 3 (Disable Direct Hazards).
- Use Lift Points in Section 2: Immobilization and the Rescue Sheet
- If high voltage components were damaged or submerged, transport the truck with all wheels on a trailer. Do not attempt to drive.
- If high voltage components were NOT damaged or submerged, use the cage bolts and remove the axle shafts to tow (propulsion motor not spinning). Steps provided below.
- (Emergency) If the truck must be moved quickly AND no high voltage damage exists, it can be moved at less than 25 mph for no more than 5 minutes.
- Store outdoors, 50 feet away from other equipment/structures, and routinely check the battery pack for high temperatures with a Thermal Imaging Camera (TIC or IR Gun).



Towing Options


 Refer to Driveshaft Service Manual DSSM-0100 for full list of driveline warnings and procedures.

Towing Option 1 – Tow with Steer Axle on Ground

This method involves lifting the vehicle from the drive axle and then towing the vehicle with the steer axle on the ground.


Towing Option 2 – Remove Driveshaft

1. Block the front and back of at least one of the vehicle's tires so the truck cannot move during this procedure.
2. Remove the key from the ignition.
3. Turn the battery disconnect to the OFF position, then wait for 2 minutes.
4. Cage the vehicle brakes according to the manufacturer's recommendation.
5. Loop a support strap under the driveshaft to a crossmember or the frame rails. Remove excess looseness from strap.
6. Remove the stamped straps and bolts at the rear axle yoke. Discard bolts. Discard stamped straps. Stamped straps **CANNOT** be reused. New Strap Kit = Dana part number 90-70-28X (2 required for Driveshaft #3 installation).

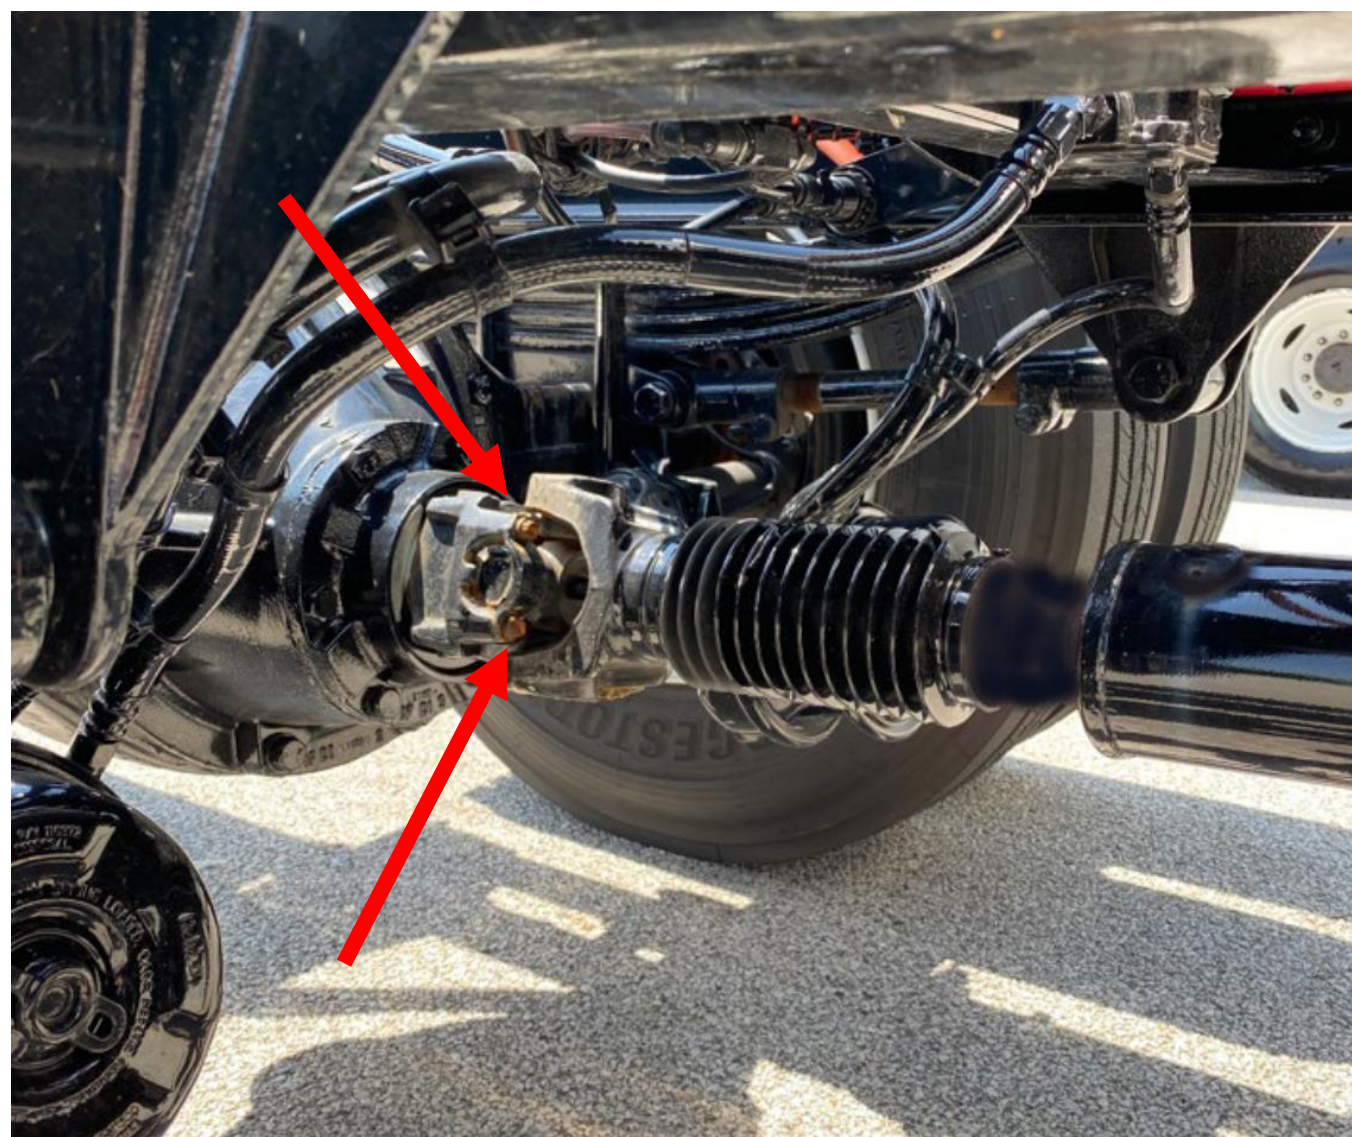

8. Towing / Transportation / Storage

7. It may be necessary to unseat bearing cup assemblies by tapping on the bearing cup with a soft-faced hammer.
8. Collapse the driveshaft until the bearing cups clear the open end yoke cross holes. Allow the driveshaft to rest on the support strap.

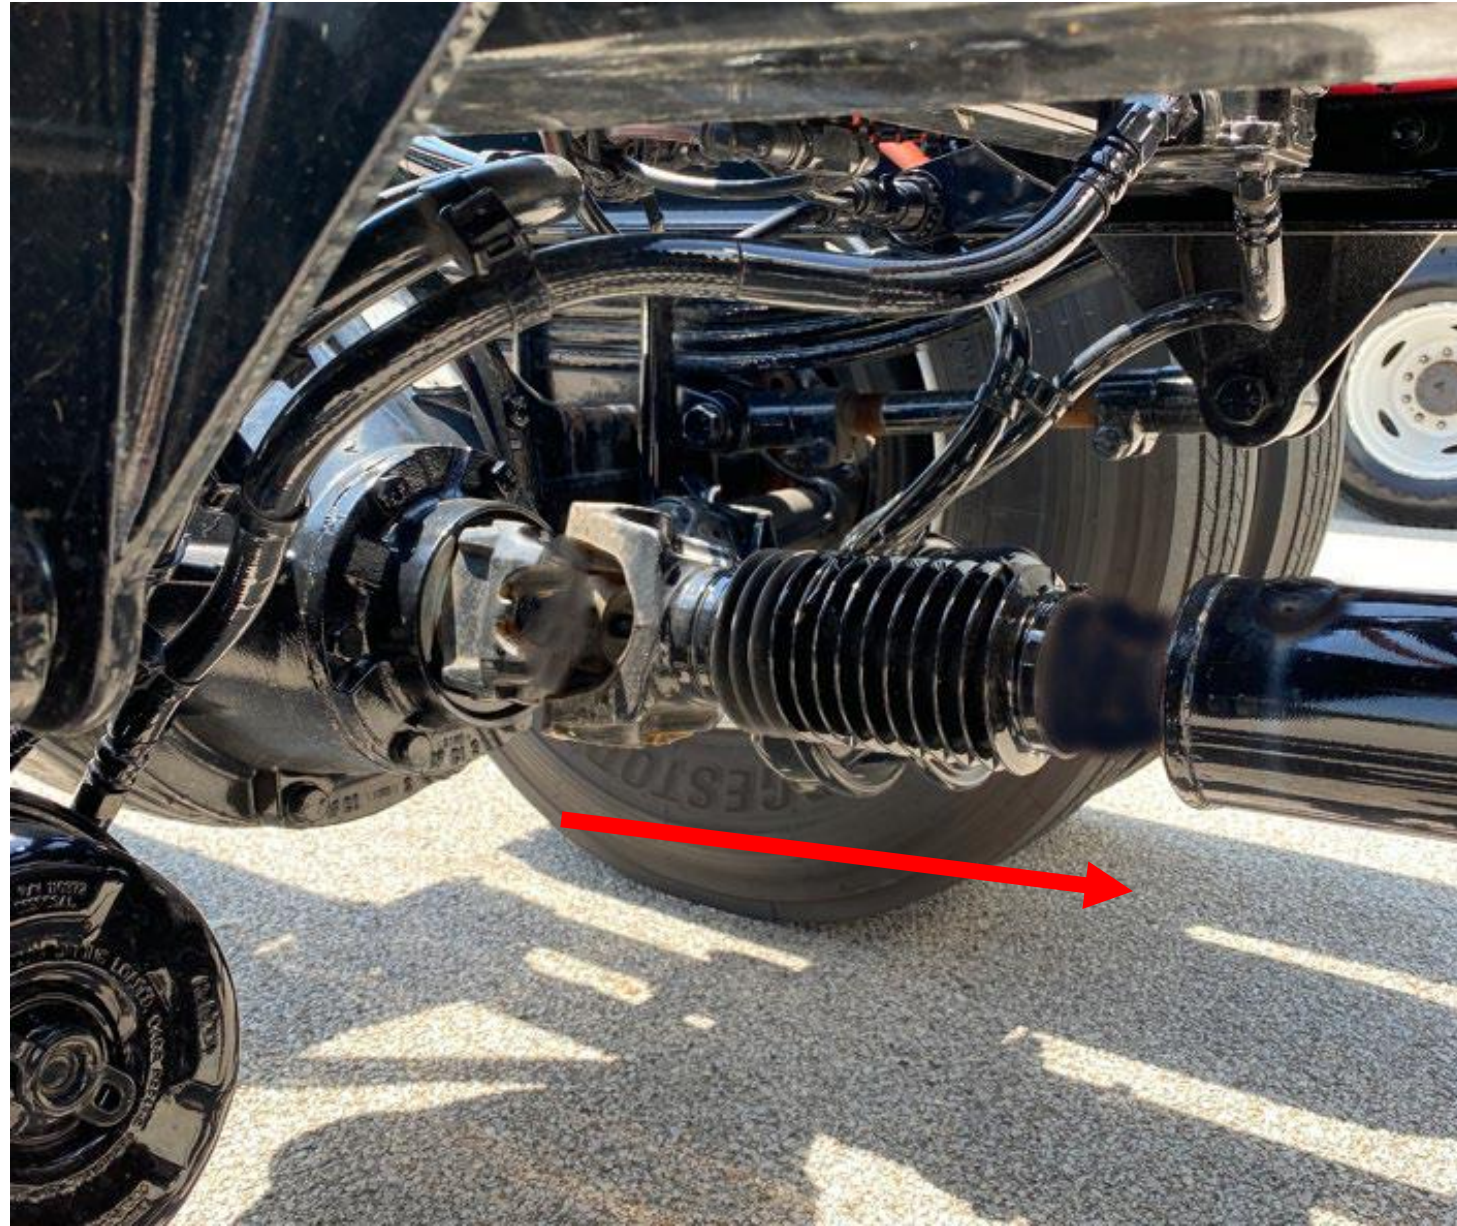

9. Now, working at the front of Driveshaft #3, remove the stamped straps and bolts securing Driveshaft #3 to the yoke. Allow driveshaft #3 to rest on the support strap. Discard the stamped straps. Discard the bolts.








10. Use Masking Tape to secure the bearing caps to the cross.
11. Carefully remove the #3 driveshaft assembly. Avoid dropping the driveshaft.
12. Remove support straps before towing vehicle.

9. Important Additional Information

-  Do not cut any orange cables.
-  Do not touch any high voltage cables and electric components.
-  Do not perform any operation on a damaged truck without appropriate Personal Protective Equipment (PPE).
-  Keep all rescue equipment clear of high voltage components with a recommended clearance of 12 inches (30 cm) if possible.
-  These models typically have aftermarket bodies installed that may use the high voltage system. Please contact body manufacturers for more information.


10. Explanation of Pictograms Used

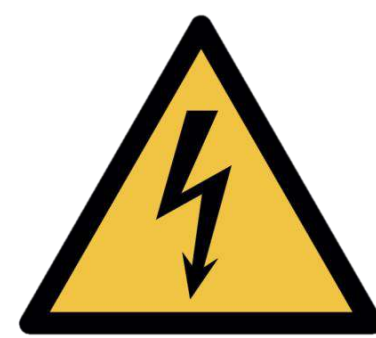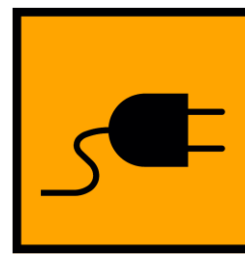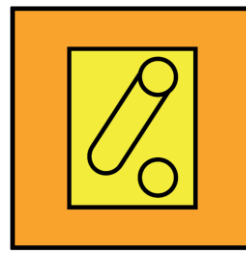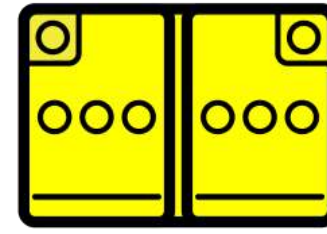	High Voltage Propulsion		Warning Electricity
	High Voltage Battery Pack		Warning
	High Voltage Charge Inlet		Disconnect High Voltage Device
	High Voltage Cables		Low Voltage Battery
	High Voltage Area		Emergency Cable Cut loop
	Gas Shock		

10. Explanation of Pictograms Used




Rotate Vehicle

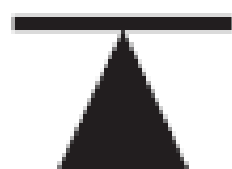

Lift Point



Compressed Air Tank

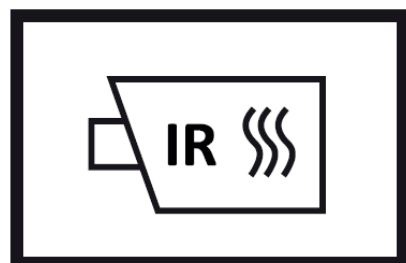

Use Thermal Infrared Camera



Acute Toxicity



Hazardous to Human Health



Explosive



Flammable



Corrosives



Do Not Use Wet Foam



Use water to extinguish the fire