



INFORMATION FOR FIRST AND SECOND RESPONDERS

EMERGENCY RESPONSE GUIDE FOR VEHICLE

PETERBILT 579EV & KENWORTH T680E
BATTERY ELECTRIC VEHICLE

Part Number: Y53-6257-1A1
Release Date: 10/30/2025

Contents


0. Rescue Sheet(s)	Page 1
1. Identification / Recognition	Page 2
2. Immobilization / Stabilization / Lifting	Page 5
3. Disable Direct Hazards / Safety Regulations	Page 7
4. Access to the Occupants	Page 8
5. Stored Energy / Liquids / Gases / Solids	Page 11
6. In Case of Fire	Page 12
7. Water Submersion	Page 12
8. Towing / Transportation / Storage	Page 13
9. Important Additional Information	Page 15
10. Explanation of Pictograms Used	Page 15



Peterbilt 579EV
Kenworth T680E
Model Year: 2022 – Current



0. Rescue Sheet

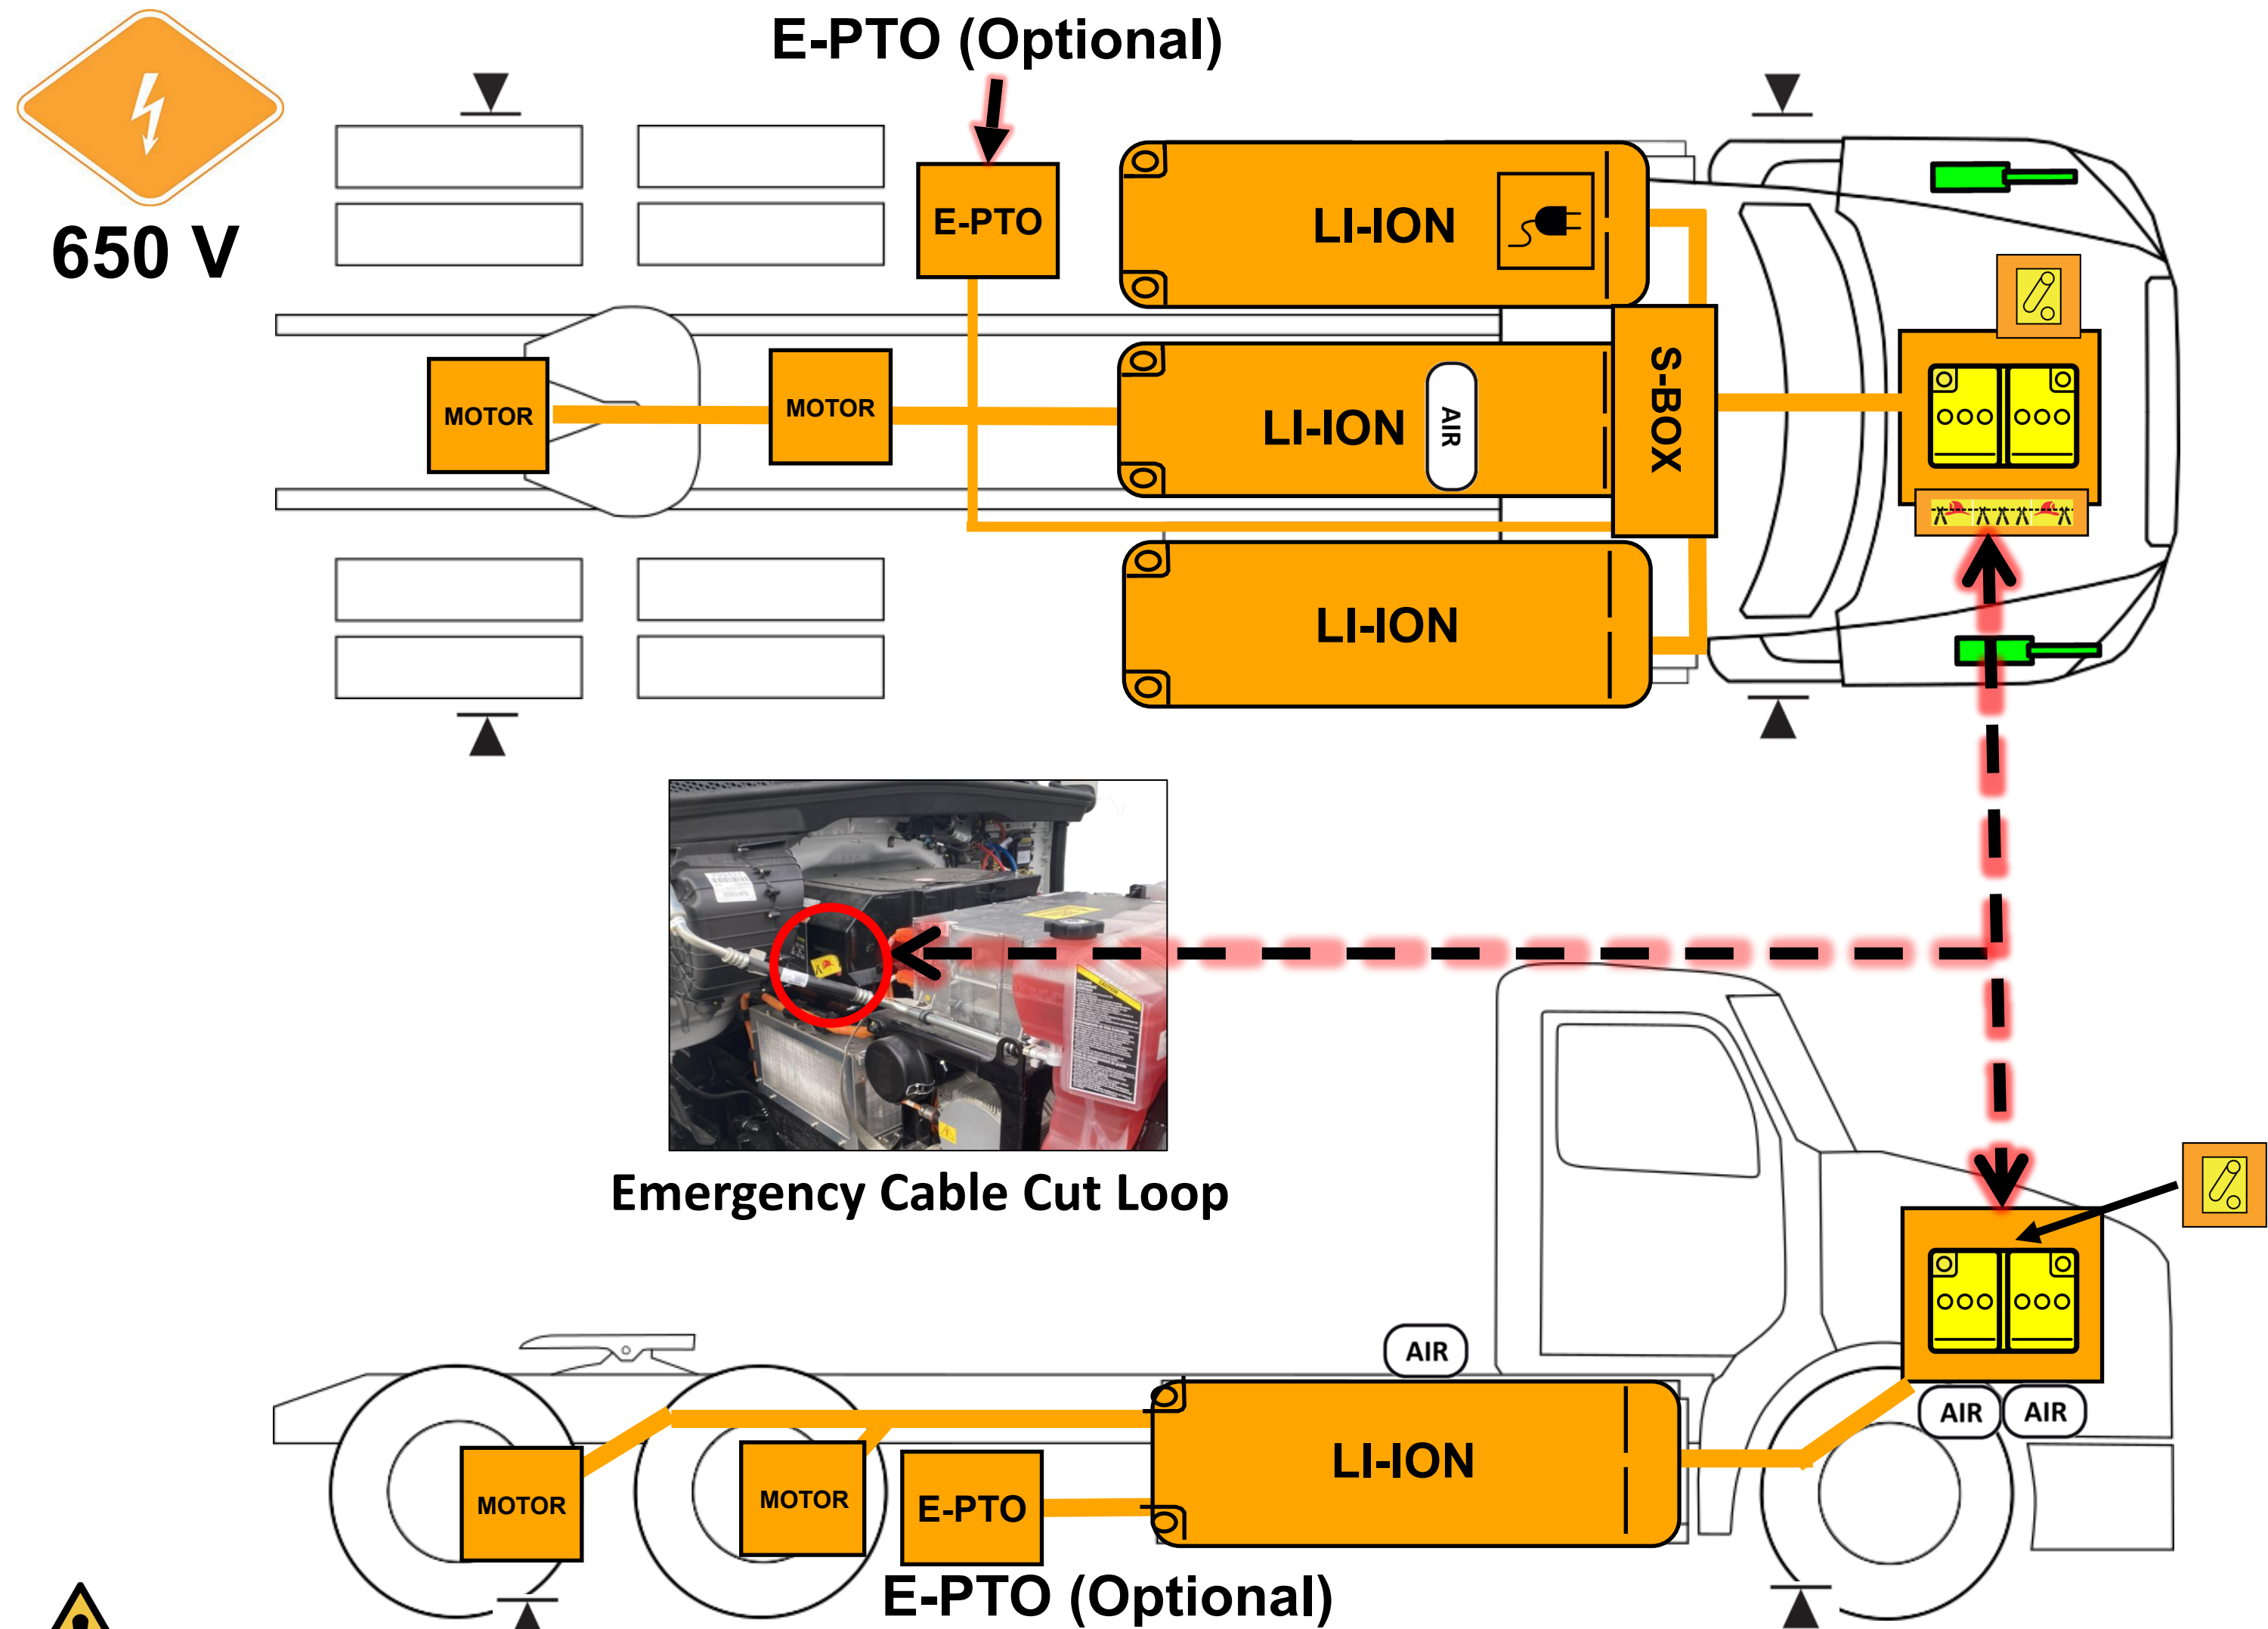

High Voltage Li-Ion Battery Pack	High Voltage Cables	12V Disconnect	Gas Strut	Emergency Cable Cut Loop
Charger Inlet (Forward or Rear)	High Voltage Region	Low Voltage Battery	Lift Point	Compressed Air Tank

1. Identification / Recognition



Warning: Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus, when approaching this vehicle.

Peterbilt Model



Grill with blue accents




EV badge on both fenders

Kenworth Model



Grill with blue accents

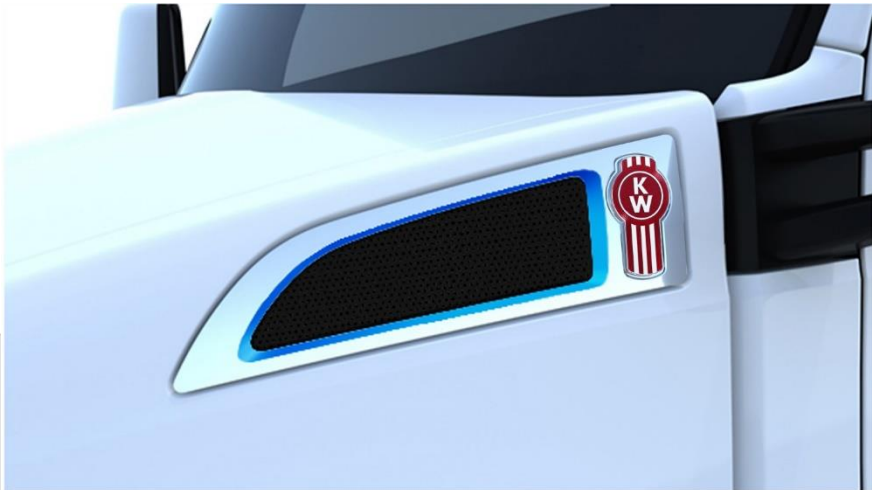

Closeout panel with blue accent




EV badge on both doors

1. Identification / Recognition

Interior – Peterbilt 579EV



Interior – Kenworth T680E

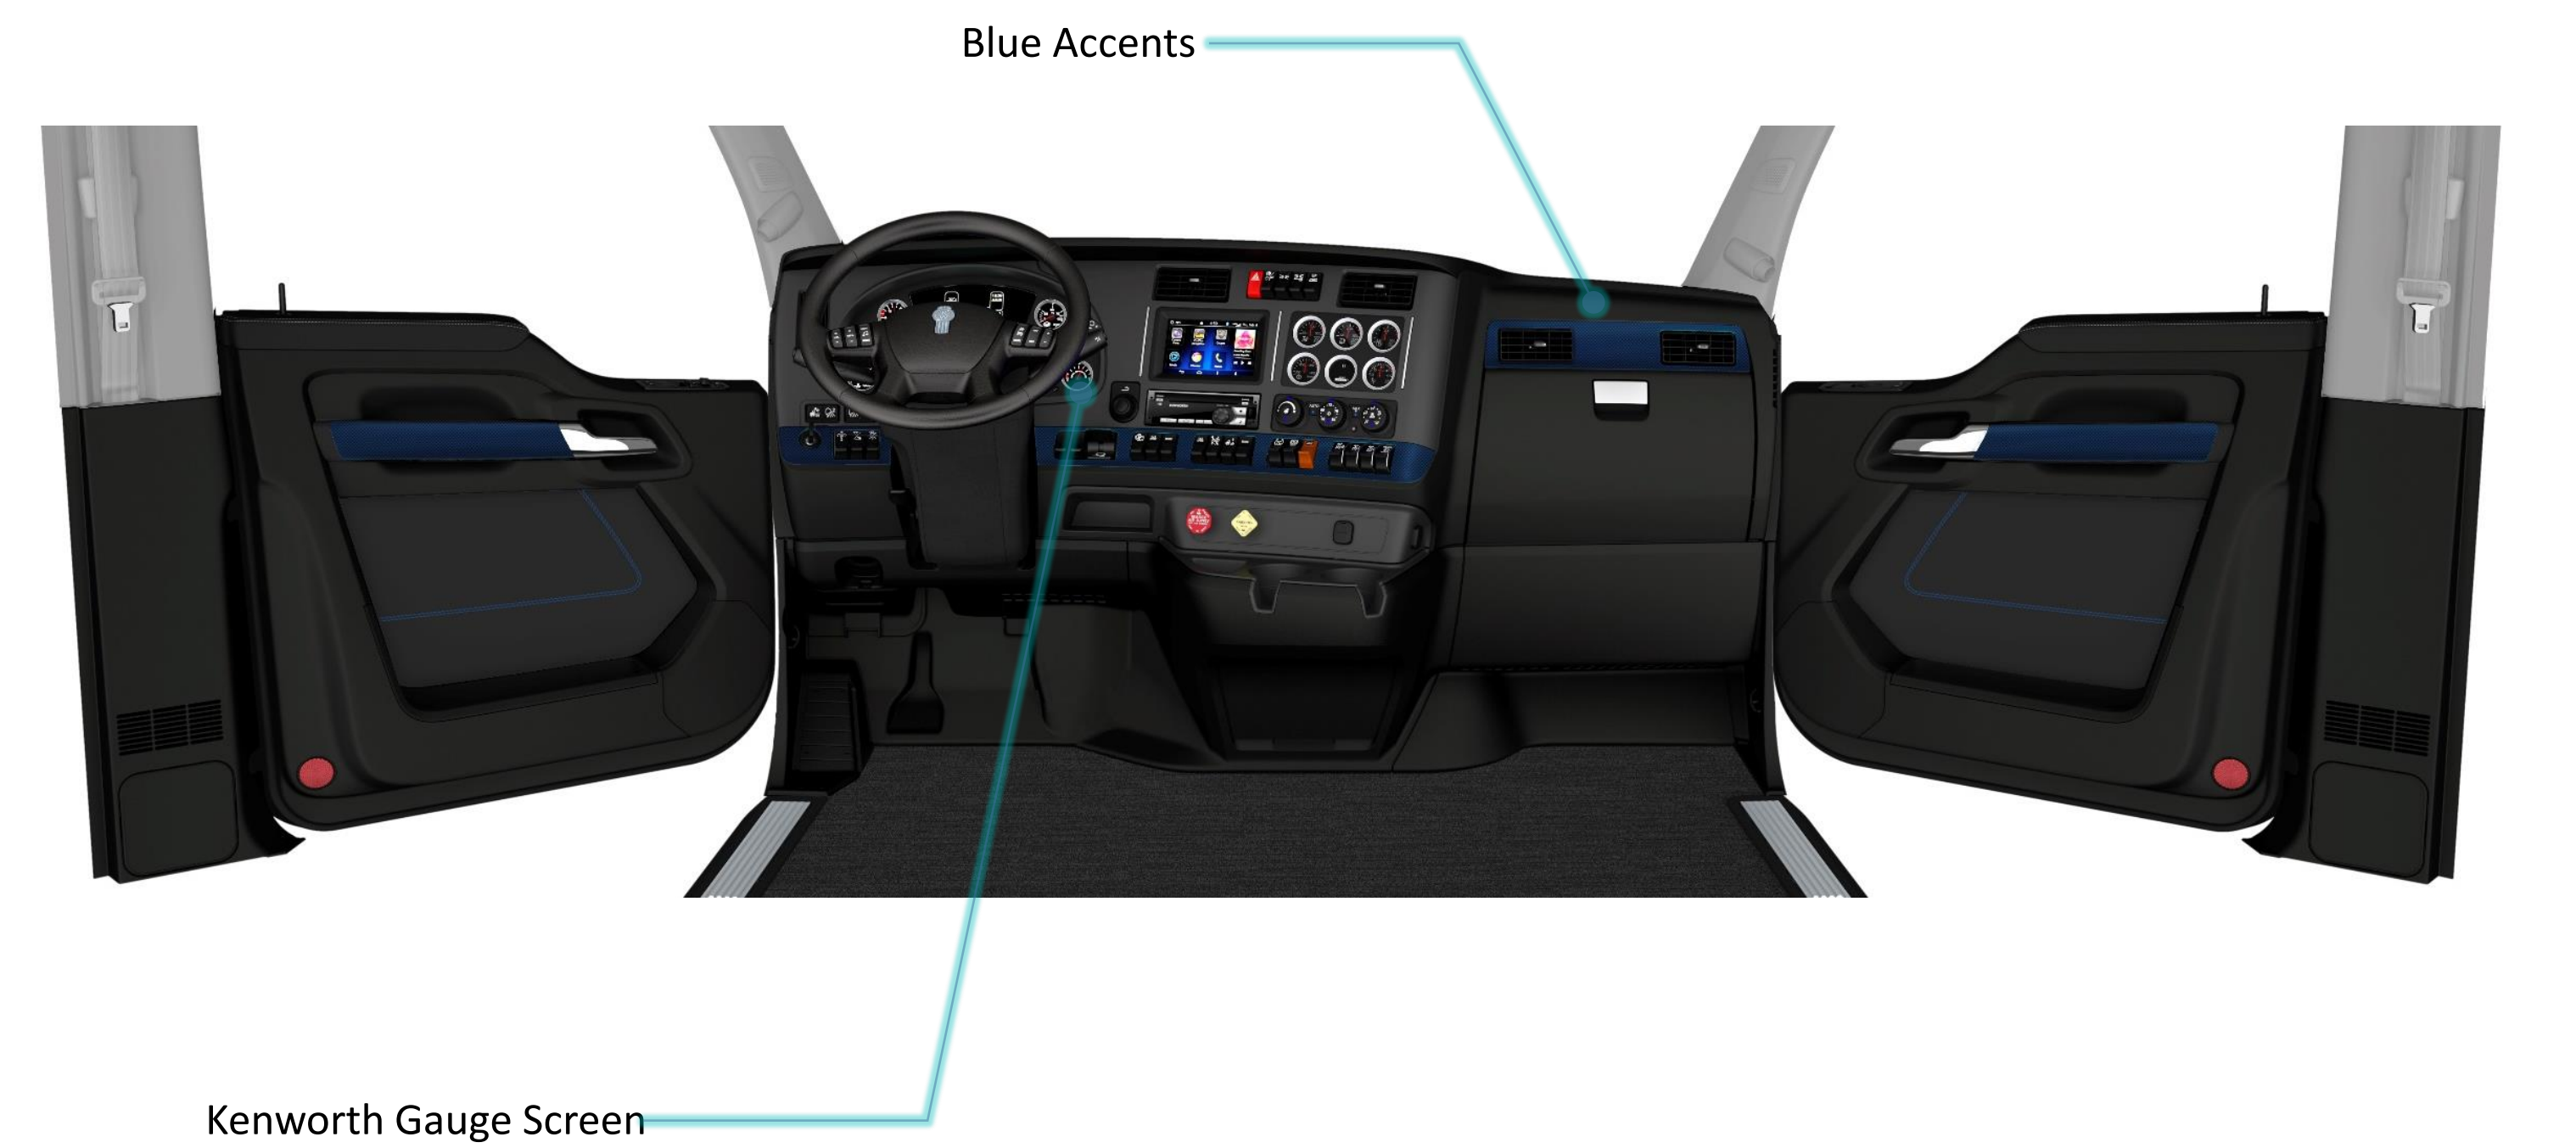


1. Identification / Recognition

Peterbilt Gauge Cluster Identification



Kenworth Gauge Cluster Identification

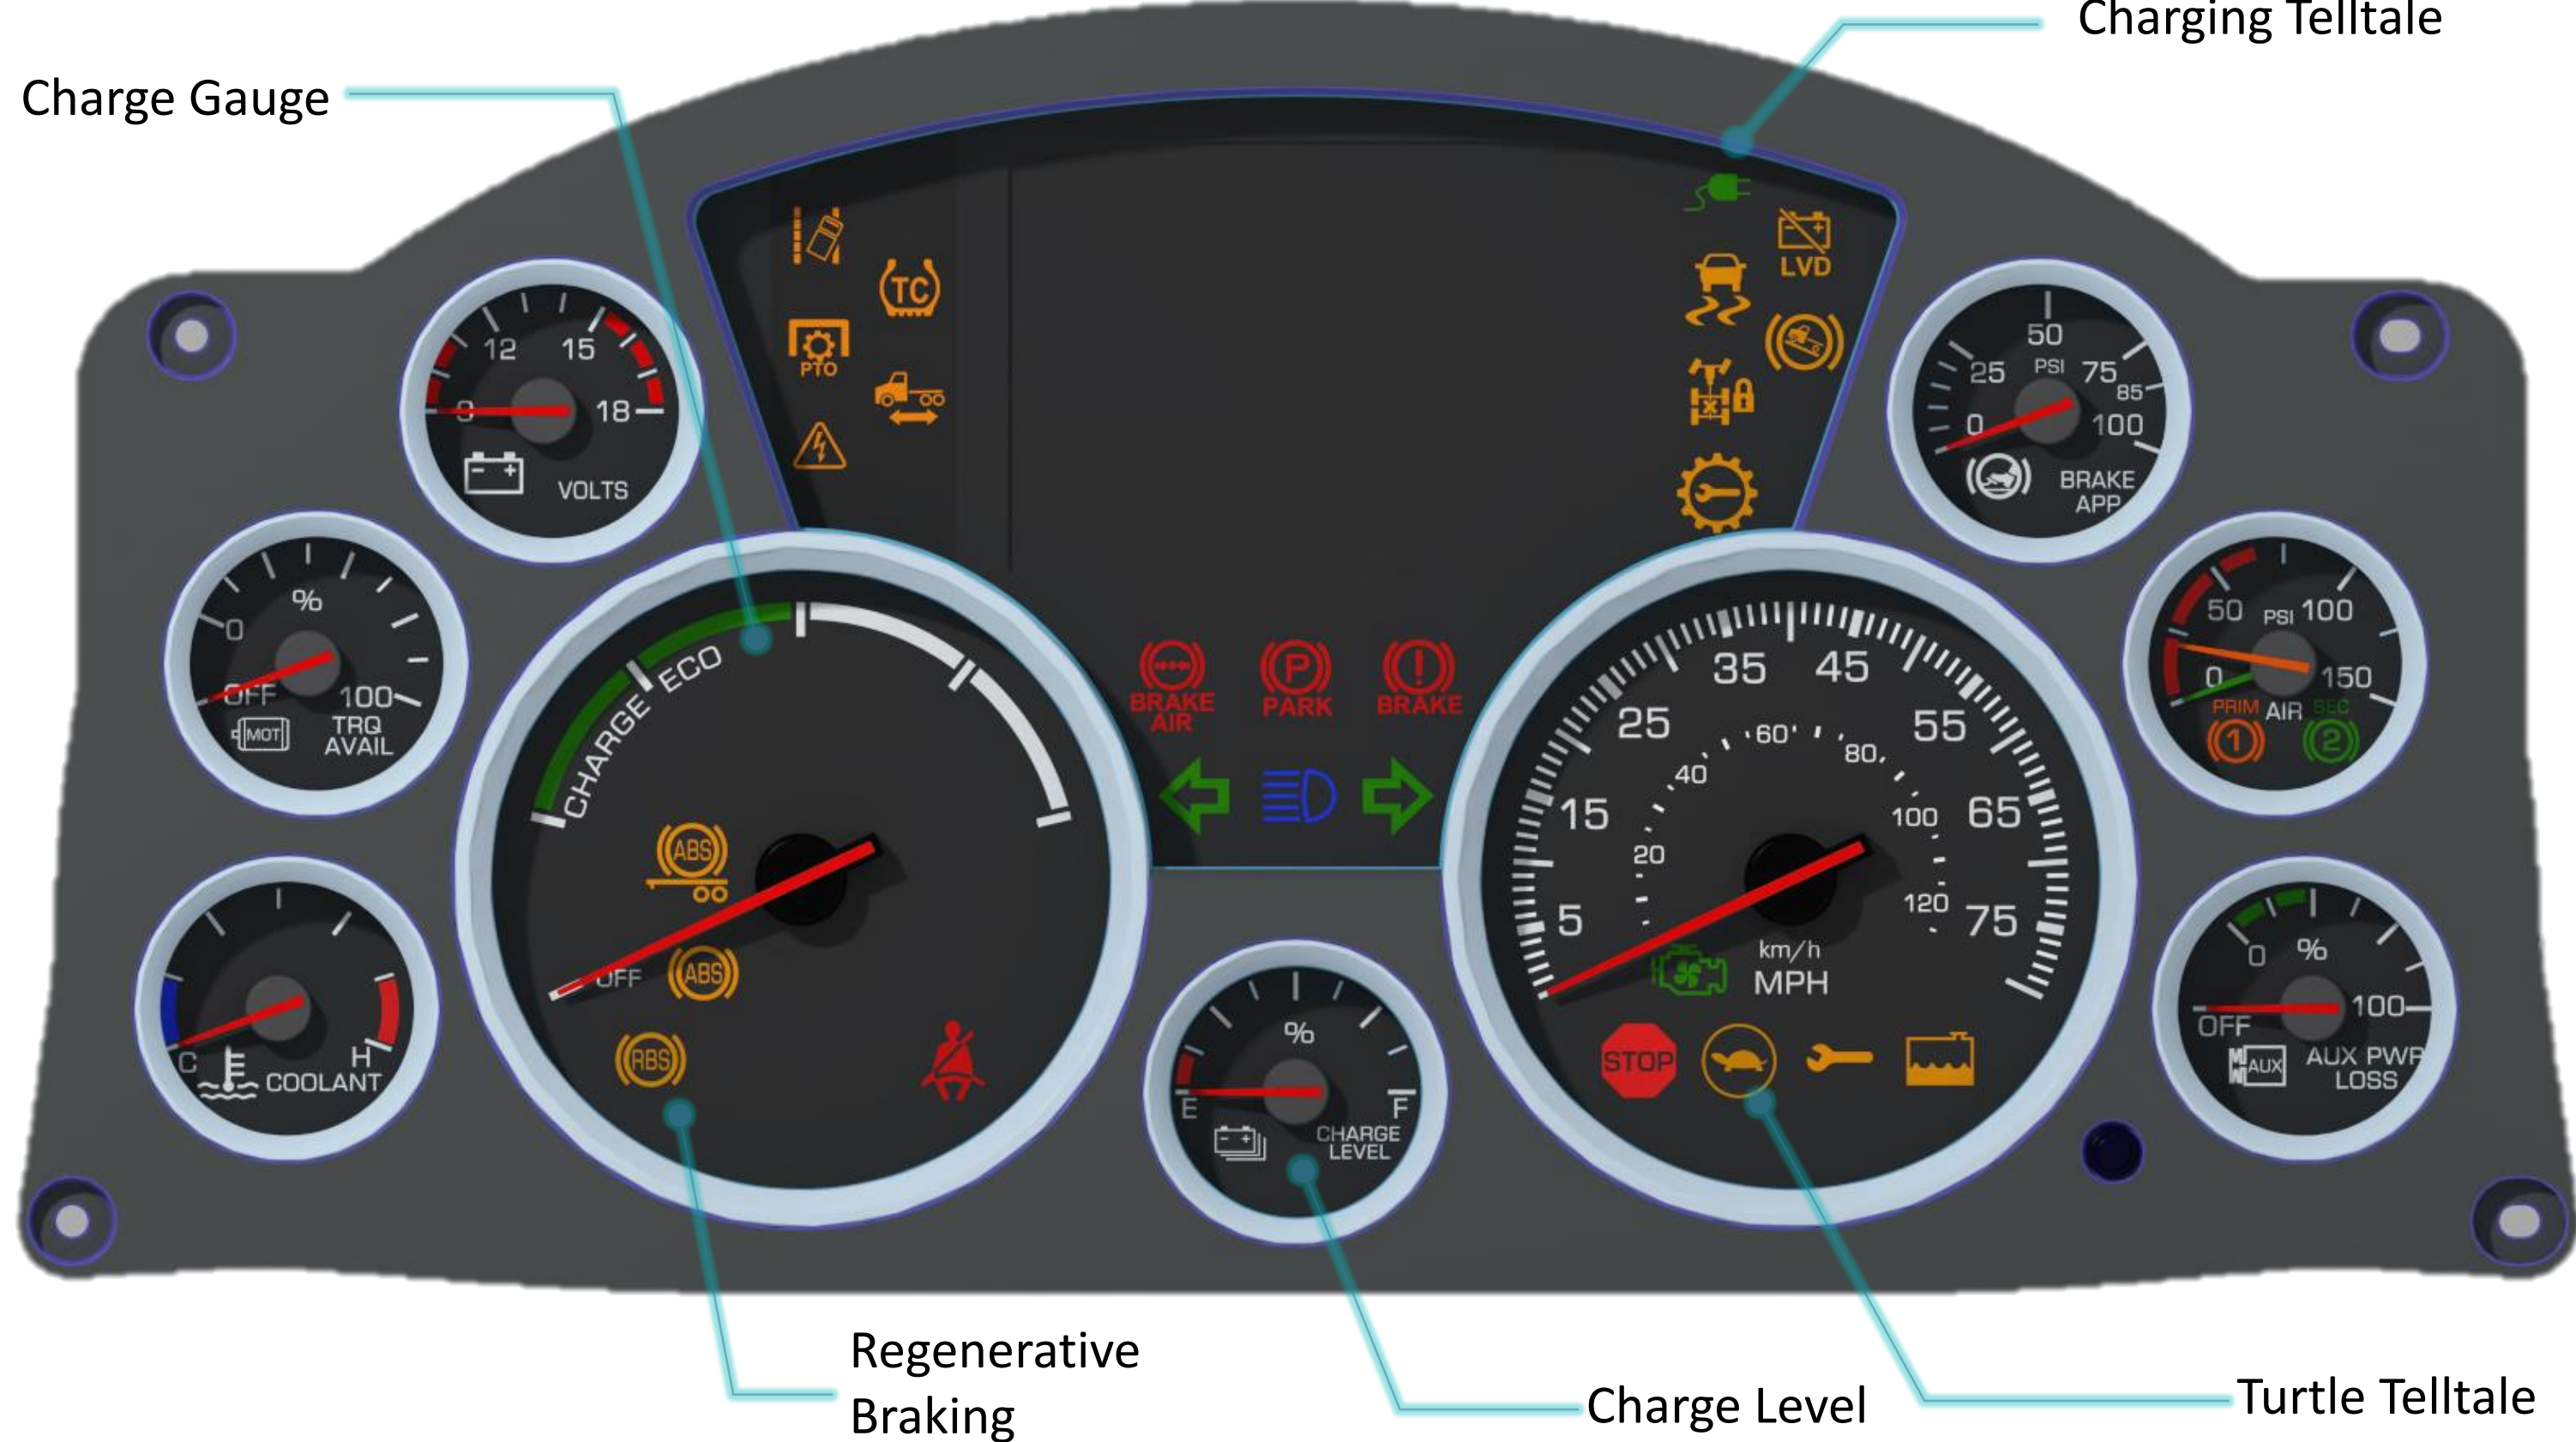


2. Immobilization / Stabilization / Lifting

- 

Warning: Keep all lift equipment at least 12 inches (30 cm) from all high voltage components.
- 

Warning: Vehicle noise may be reduced in some operation modes. Failure to shutdown the truck before immobilization could result in death, severe injury, or property damage.
Complete Section 3 steps if possible before immobilization.

Immobilization

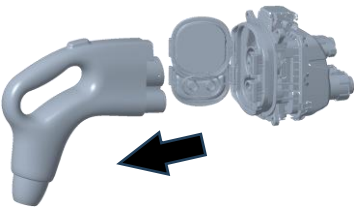

Step 1: Unplug the Charger Cable or Remove Power from the Charger.

Step 2: Ensure vehicle is in Neutral by using the gear selector on the right hand stalk.



Step 3: Remove the Key from Ignition.



Step 4: Engage tractor/truck park brake by pulling out the **yellow** switch.



Step 4b: (If applicable) Engage trailer air brake by pulling out the **red** switch.



2. Immobilization / Stabilization / Lifting



Rotating Truck





Wrap chains around both e-axes to rotate the truck to an upright stable position.
Note: Axles use high voltage. Use caution when rotating vehicle so that chains are not pulling or damaging orange high voltage cables.

Lifting

Only use the lift points identified in the rescue sheet diagram:

1. Lifting at the rear of vehicle: use the eAxle housing.
2. Lifting at the front of vehicle: use the steer axle.

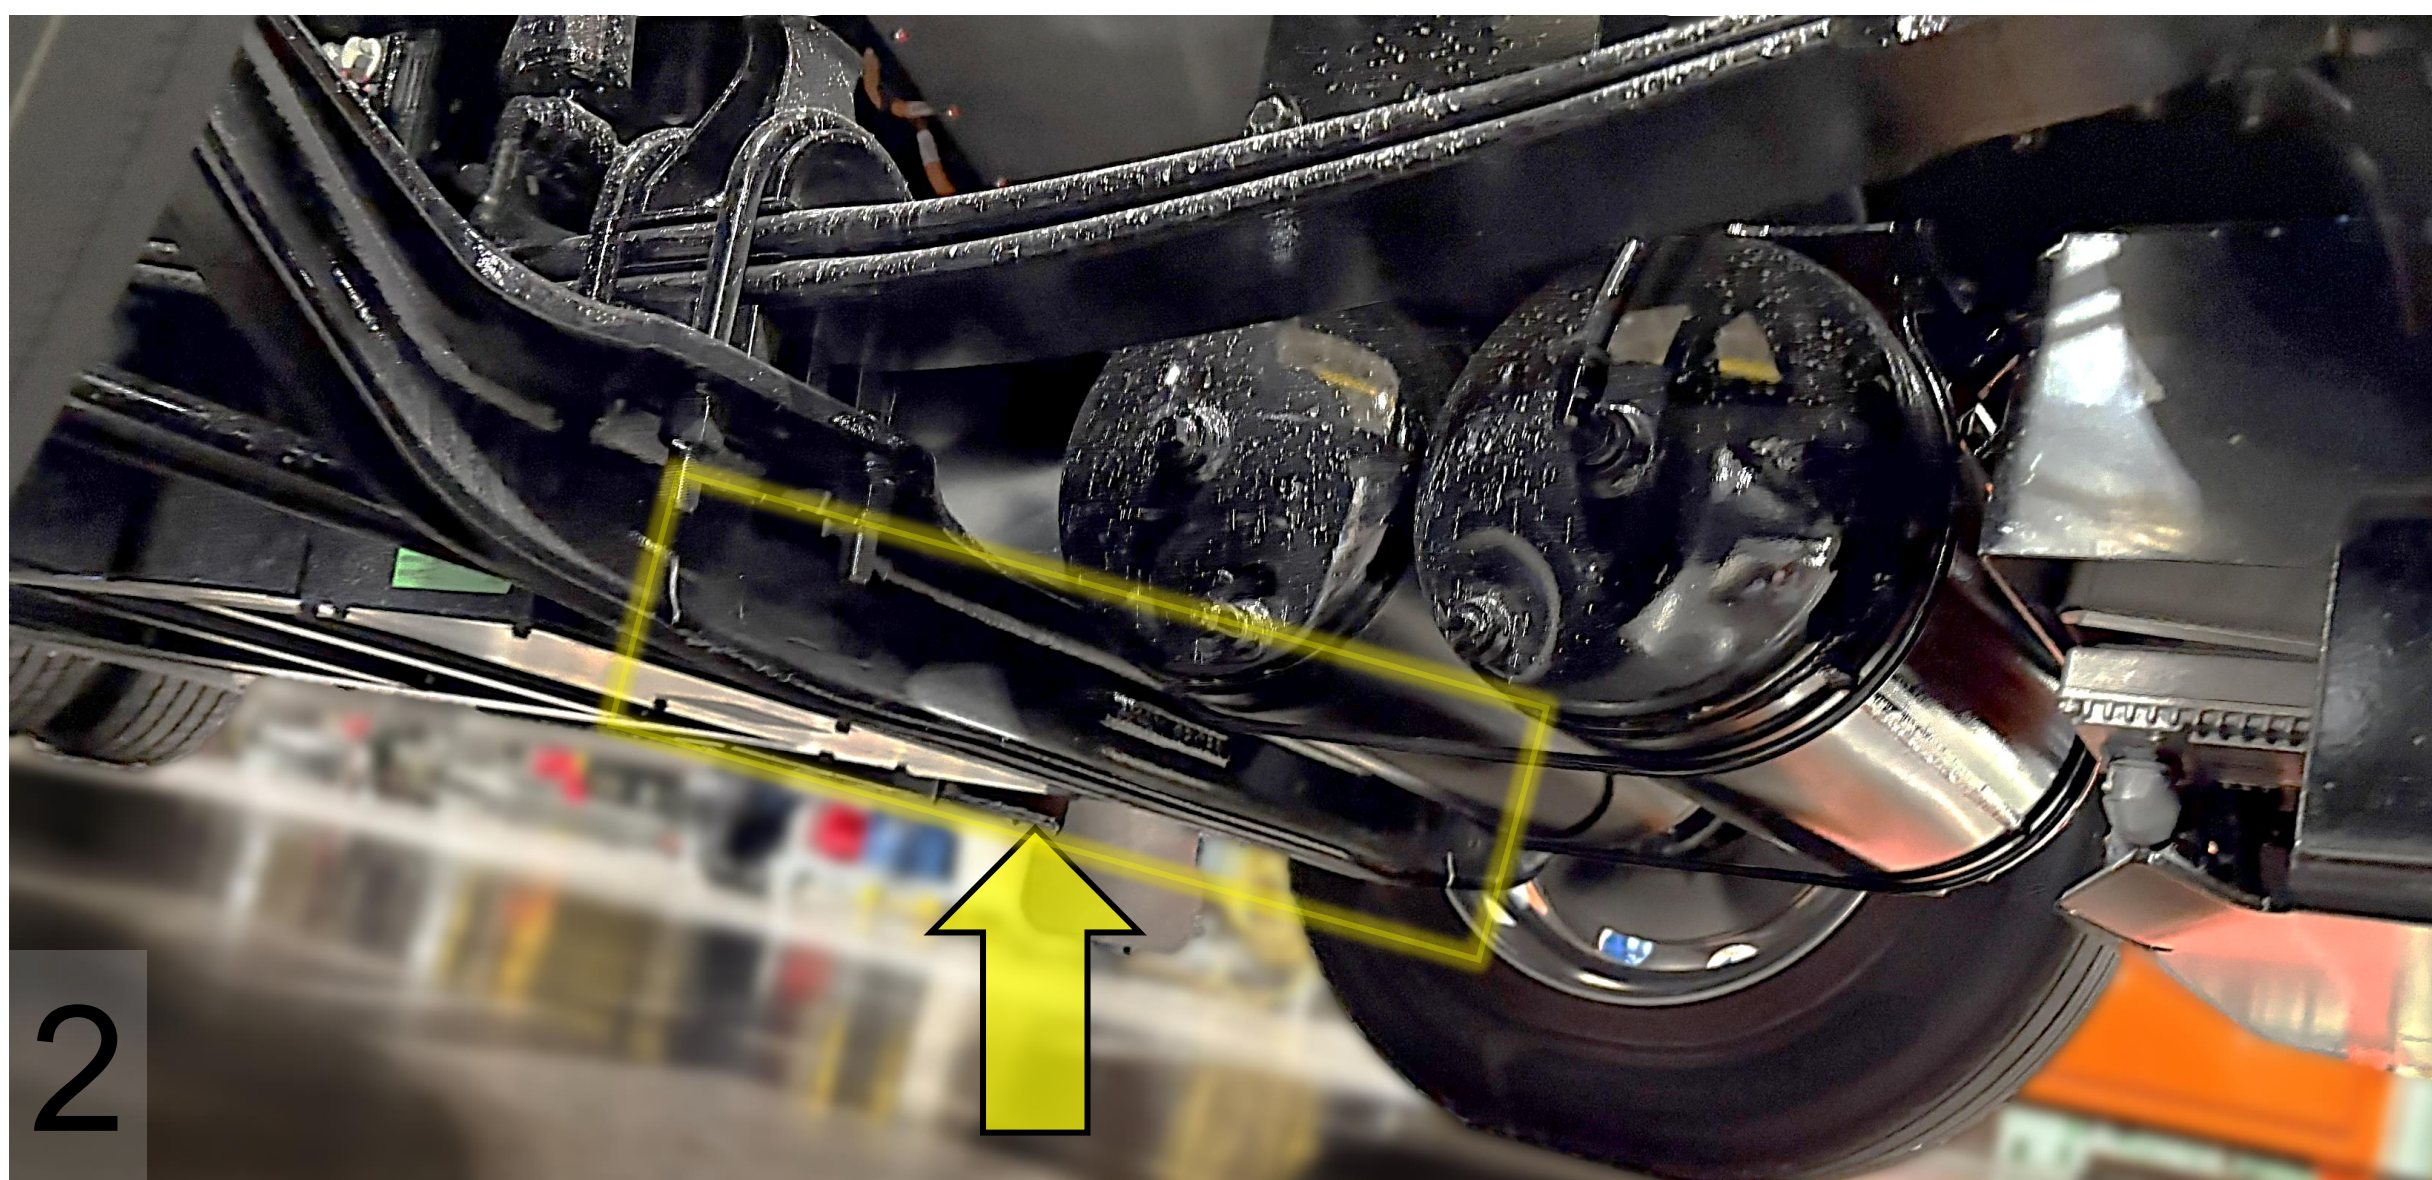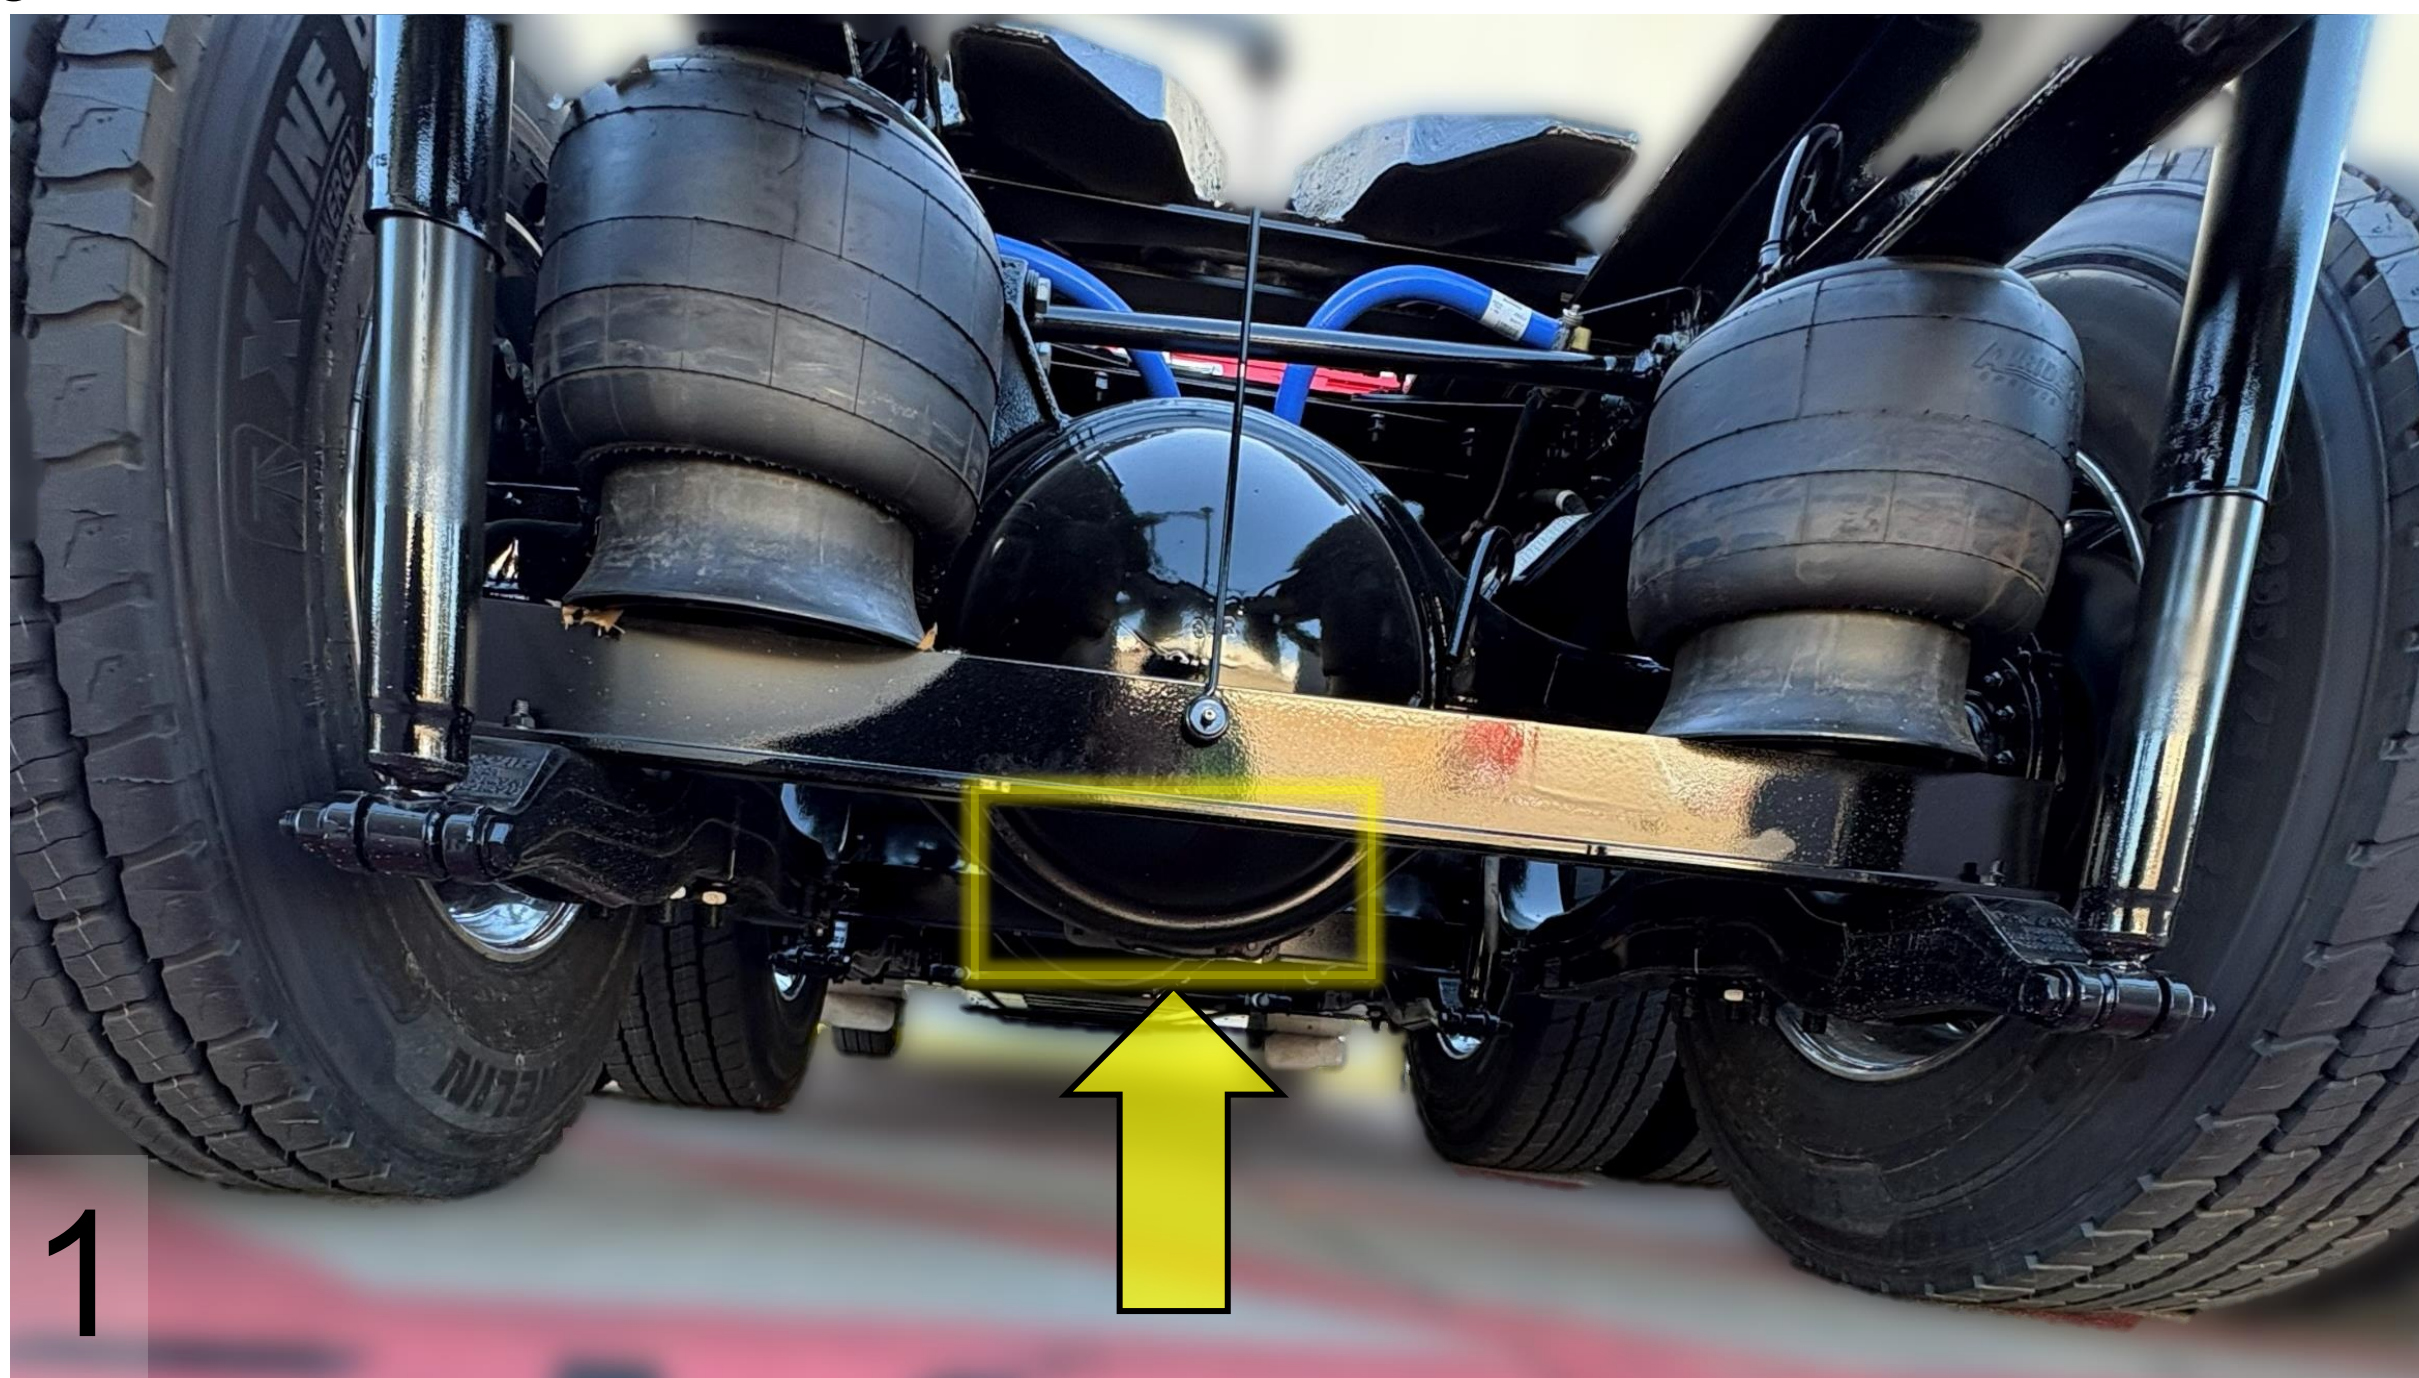


3. Disable Direct Hazards / Safety Regulations



Warning: Assume all high voltage components are always energized. Do not cut any High Voltage components, including high voltage orange cables.




Warning: Cables between the high voltage battery and the S-box remain energized after the vehicle disable steps (including the 2-minute wait) are completed.

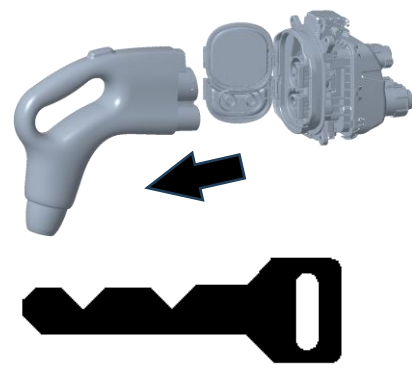


Step 1: (If Truck is Charging) Unplug the Charger Cable or Remove Power from the Charger.

Step 2: Turn key to “Off” position and remove the Key from Ignition.

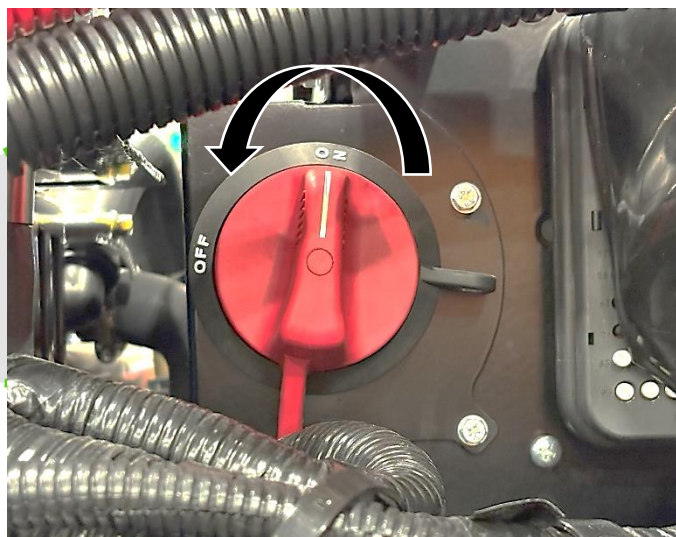

Step 3:
(Primary Step): Turn 12V Disconnect Counterclockwise to OFF Position.

Disconnect switch is located under hood on the street side of the vehicle.

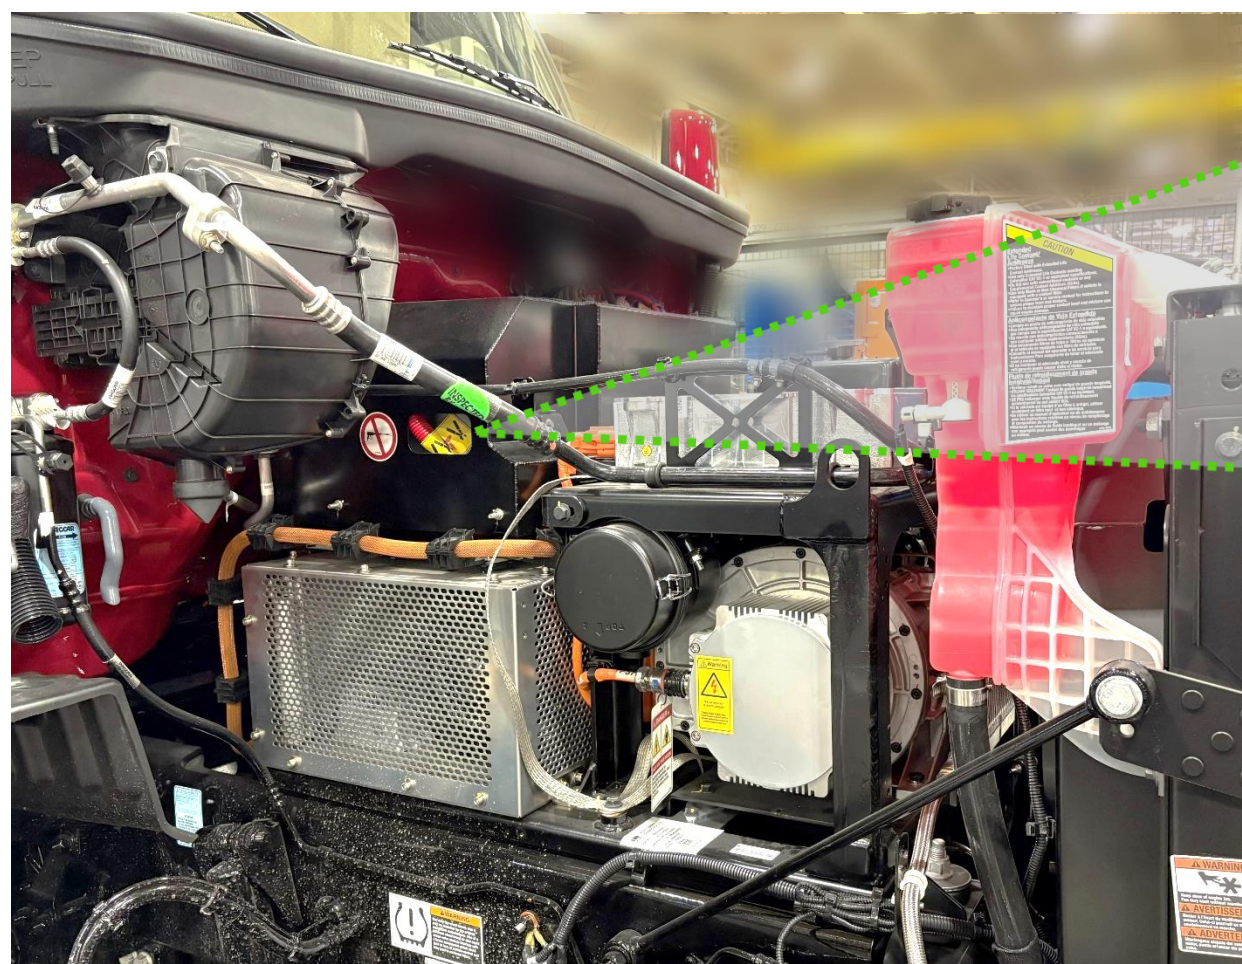

(Alternate Step): Cut a 5-inch (13 cm) segment (2 cuts) from the cut loop.

Cut loop is located under the Cab on the curb side of the vehicle.



Step 5: Wait 2 Minutes for High Voltage Capacitors to Discharge

Open Doors From Outside

- Step 1:** Insert key (1) into door lock turning key counter-clockwise for left-hand door or clockwise for right-hand door to unlock
- Step 2:** Grasp door handle (2) and pull out while exerting some force on the door in the outward direction




Open Doors From Inside

- Step 1:** Pull on door handle (1) to release door latch
- Step 2:** Firmly push door outward

Optional: Unlock by pulling up on lock switch.

Note: Peterbilt model (579EV) shown below. Kenworth model (T680E) door handle is in the same general location

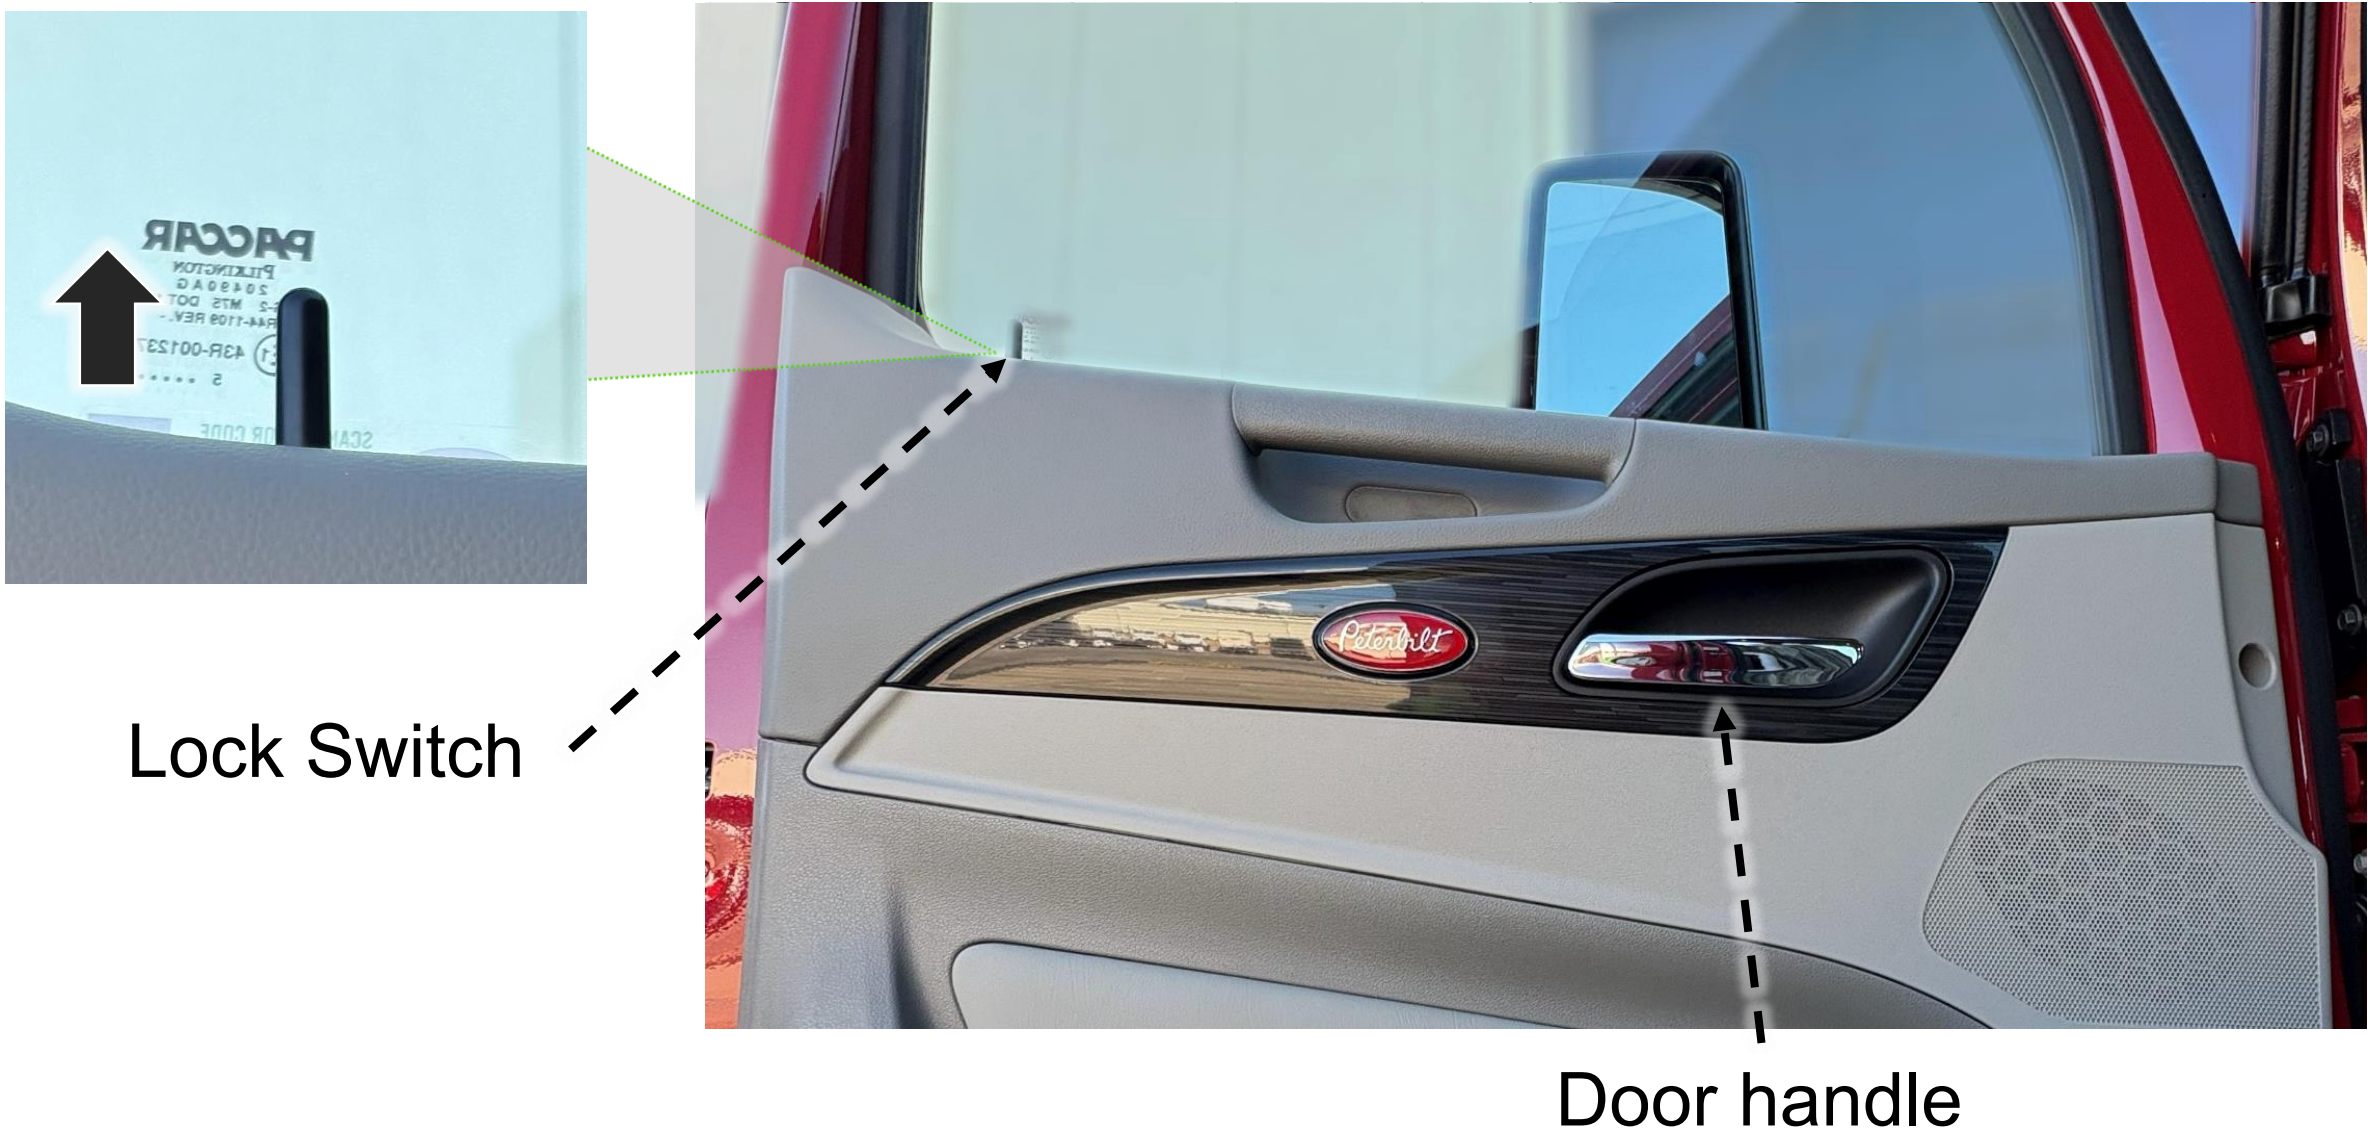

Seat Adjustment

- 1. Forward/Backward Adjustment:** Push handle and push seat to slide forward or backward.
- 2. Seat Up/Down Adjustment:** Press switch to adjust seat height.
- 3. Seat Recline Adjustment:** Pull handle to control seat back recline.



Steering Column Adjustment

Step 1: Pull lever (1) downward to unlock steering adjustment

Step 2: To adjust steering column up/down, pull steering wheel up or down. To move steering wheel forward or backward, push or pull steering wheel



Step 3: Push lever (1) upward to lock steering wheel in new location



Window and Windshield Material

Windshield: Laminated Glass (2)

Door, Side and Back windows: Tempered Glass (1)

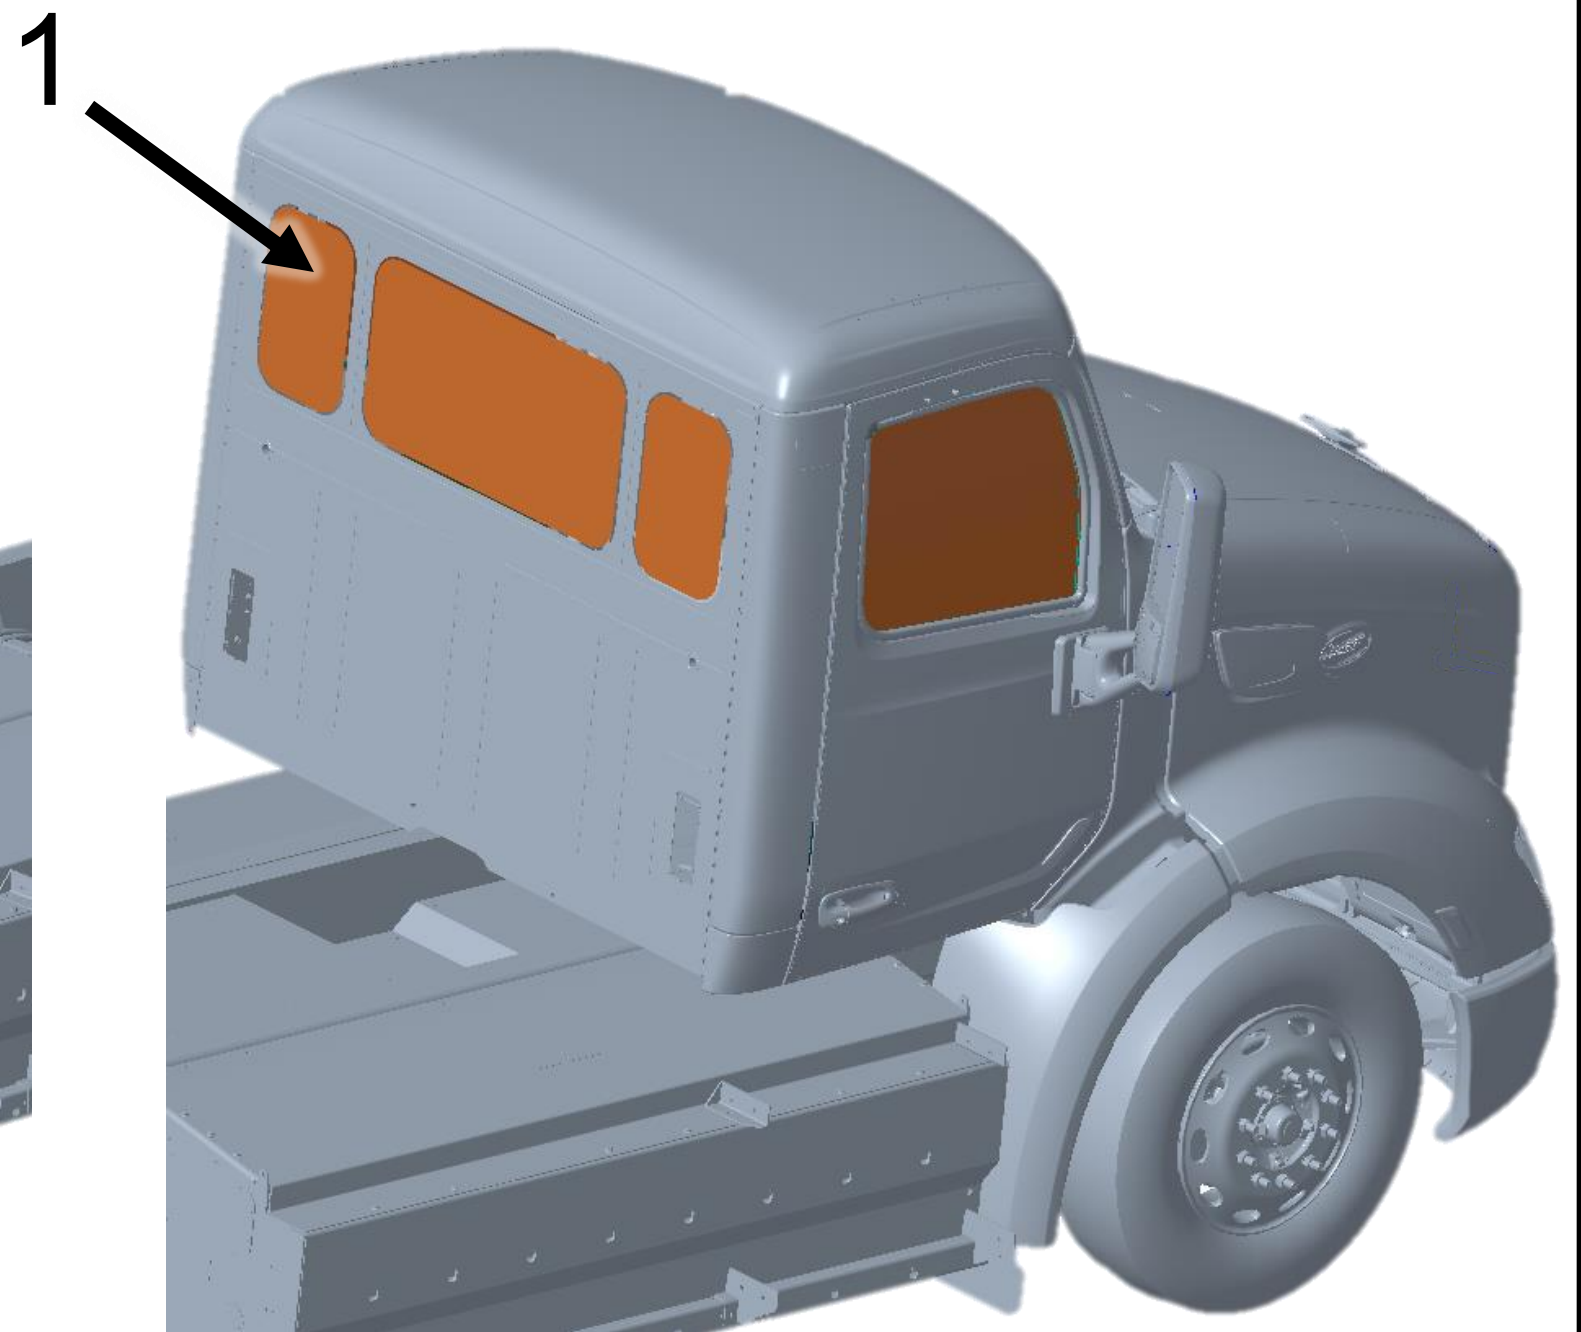
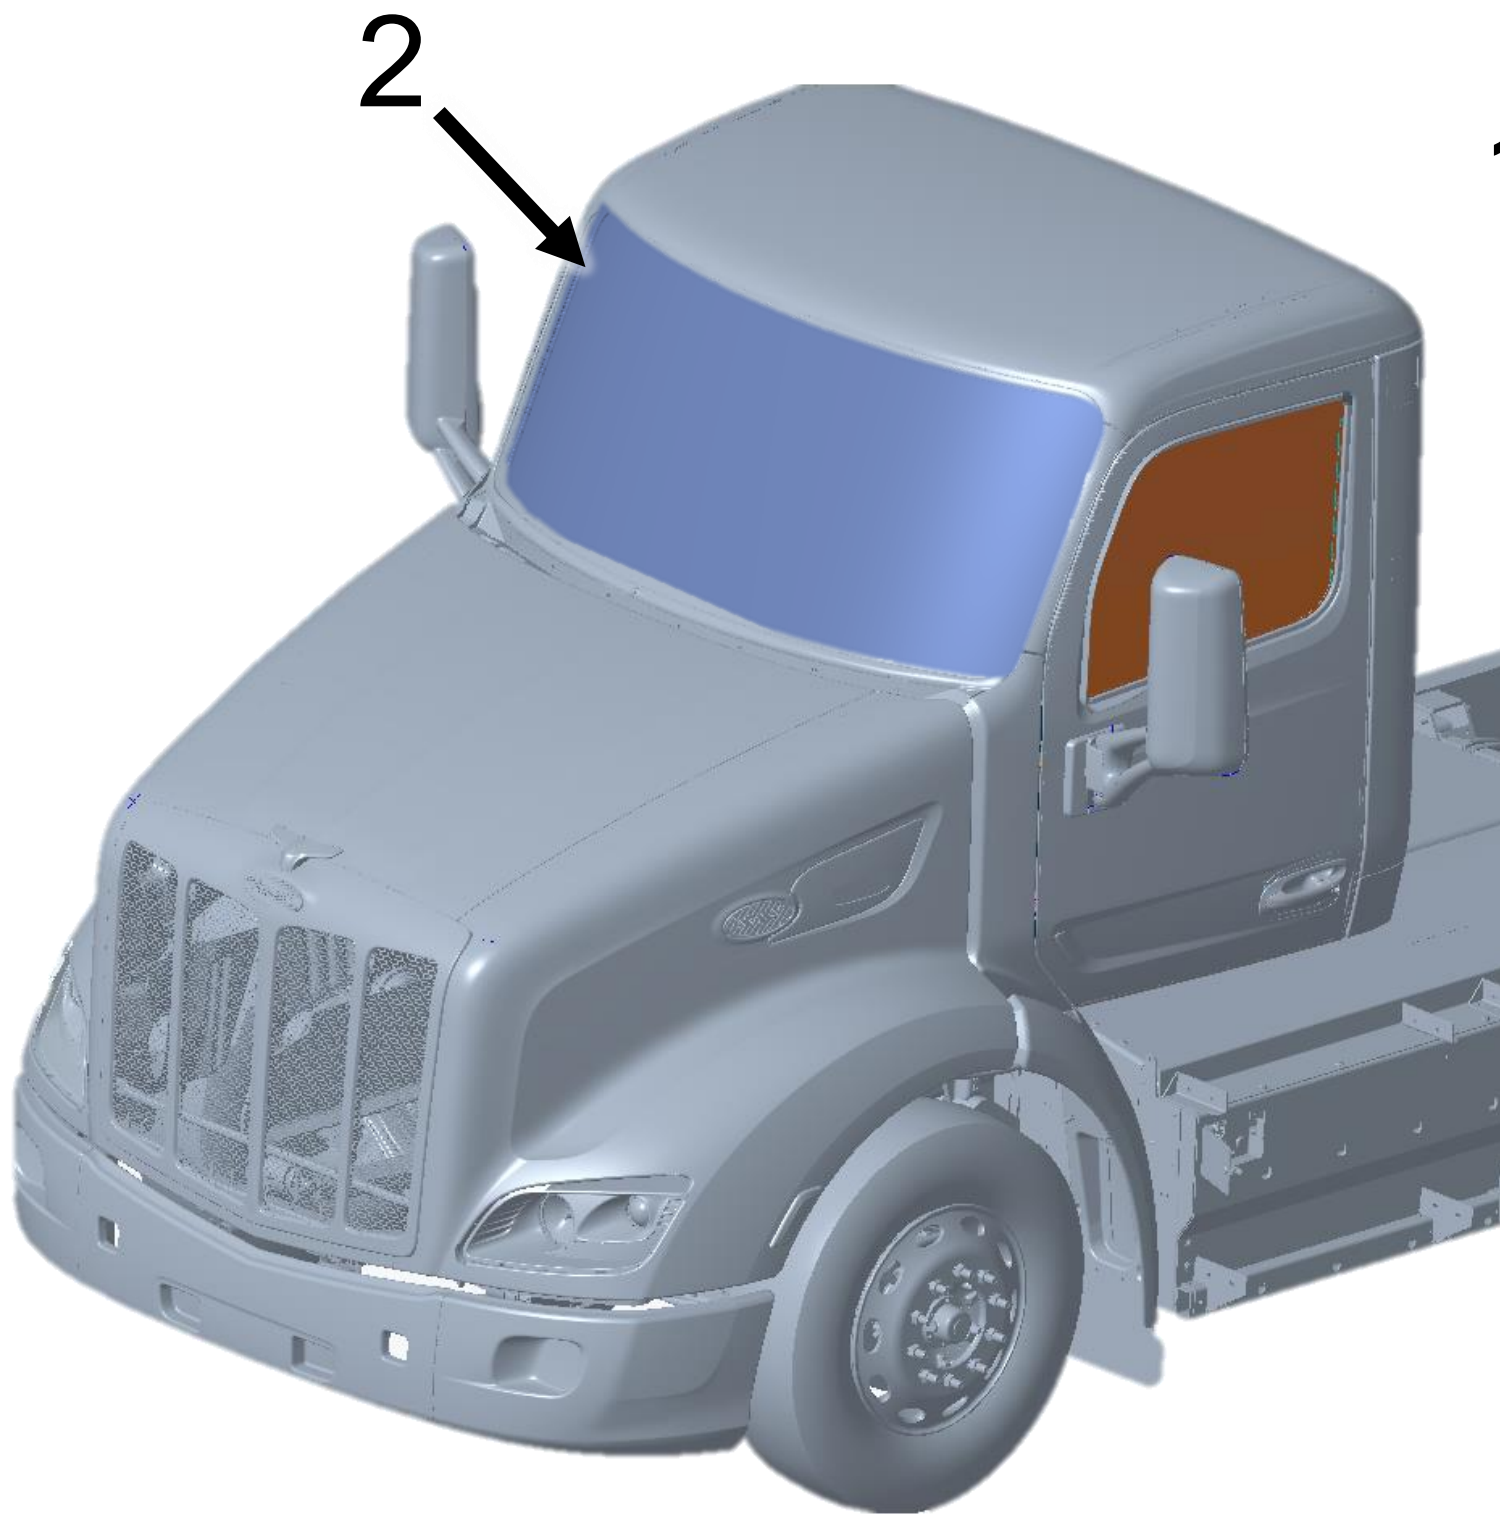



Cab Material

Note: There is no high strength or ultra-high strength steel present in the cab. The cab is predominantly made of aluminum material.



5. Stored Energy / Liquids / Gases / Solids

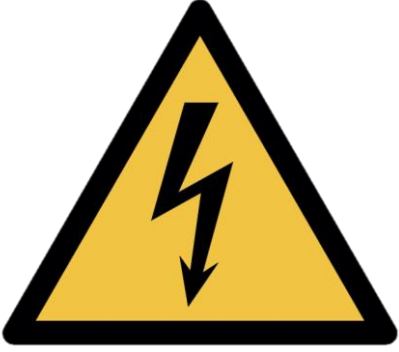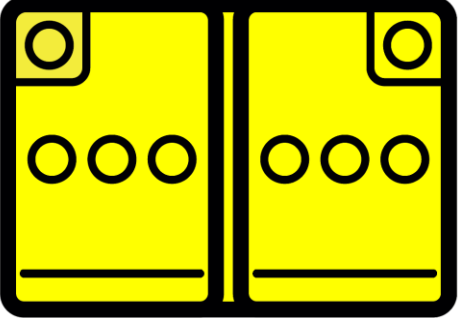 650 V	 High-voltage (650V)	 Corrosives	 Flammable	 Health Hazards
 12 V	 Corrosives	 Flammable	 Explosive	

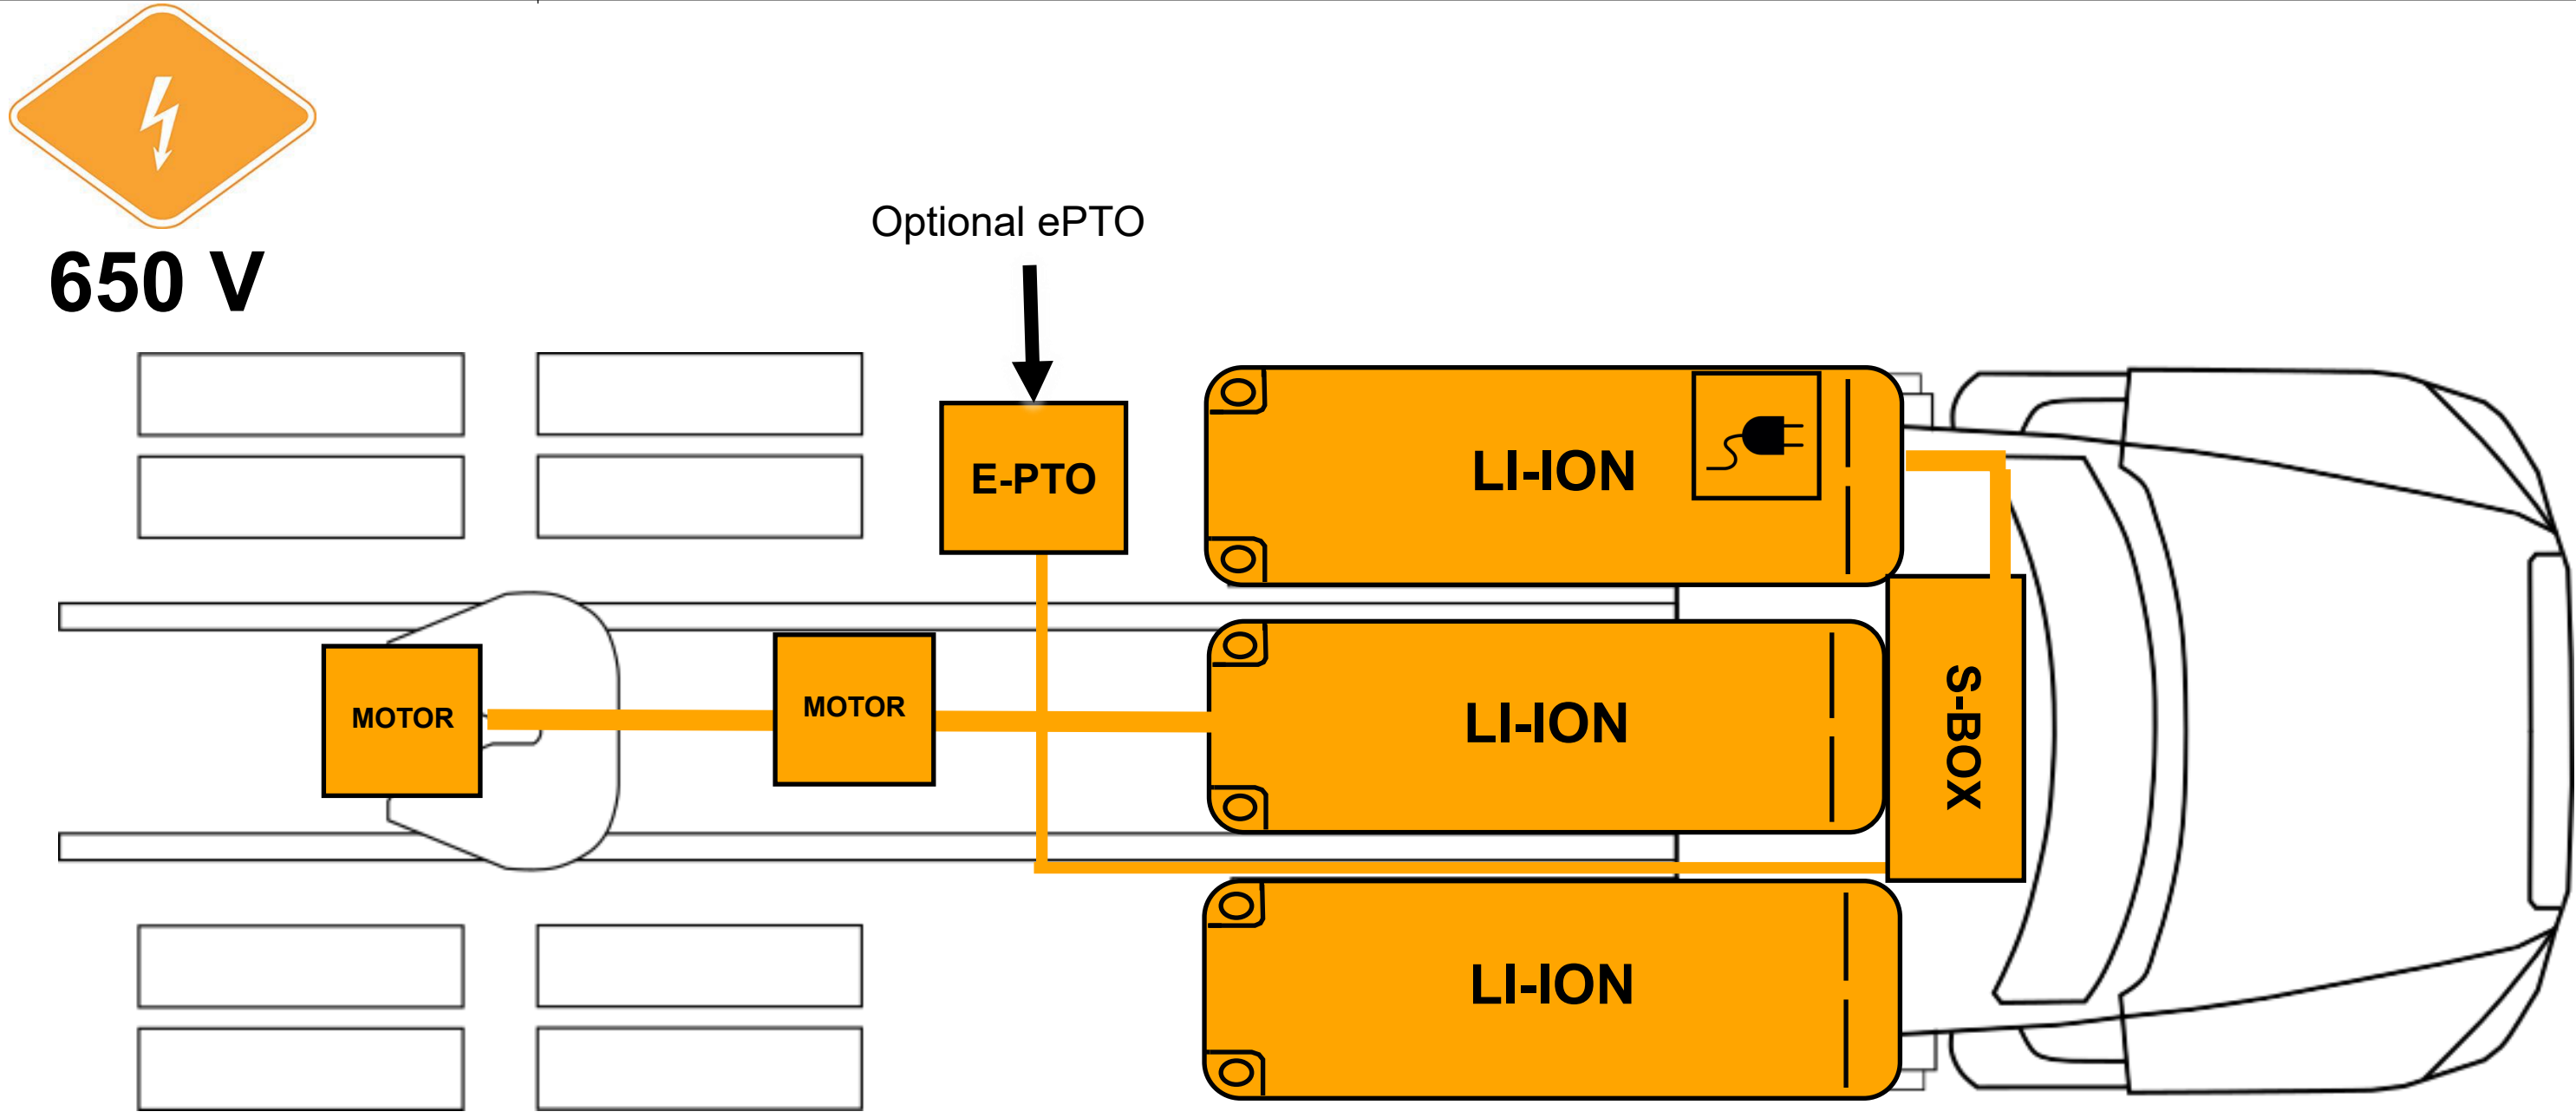

High-voltage Battery Locations: The system consists of two Energy Storage Systems (ESS) mounted on the outside of the frame rails and one ESS mounted between the frame rails; each one containing Lithium-Ion batteries.

The Center ESS contains four lithium-ion battery packs. The other two ESS contain two lithium-ion battery packs each.




 Air tanks and system hoses may have an air pressure of 100-130 psi (689-897 kPa).

 High voltage components are cooled with a glycol-based automotive coolant. This liquid is red in color and may leak if components are damaged.

Please contact local and state authorities for more information regarding proper response and clean up of hazardous materials

6. In Case of Fire

- **Warning:** Always wear full fire fighter PPE (turnout gear), including a positive pressure self-contained breathing apparatus.
- **Warning:** Treat fires involving charging stations as energized fires until power to the charger can be shut down.
- **Warning:** Hydrogen Fluoride and/or Hydrofluoric Acid may be present.
- **Warning:** There is always risk of reignition

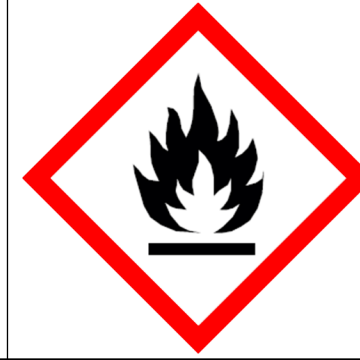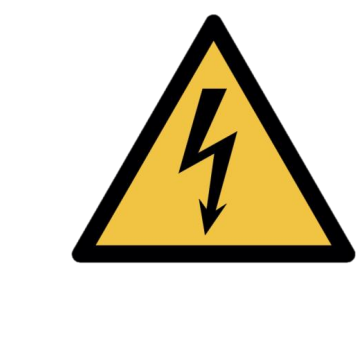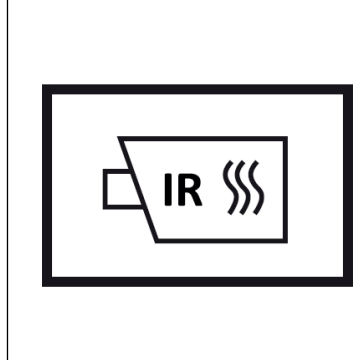 Use Water to Extinguish Li-ion Fires	 Do Not Use Wet Foam
 Hazardous to Human Health: • May cause an allergic skin reaction • Do not breathe dust, fumes, gas, mist, vapors, or spray.	 Flammable Components
 Explosion Hazard: • Explosive gas could accumulate. • Move truck outside building after extinguishing fire	 Corrosives: • Causes skin burns and eye damage
 High Voltage (650 V): • CAT III (1000 V) rated gloves required for exposed HV parts	 Check Li-ion Battery Pack for Fires with Thermal Infrared Camera (TIC or IR Gun)

7. Water Submersion

If a vehicle has been submerged there is a chance of secondary damage to high voltage components around the vehicle. These components present a hazard and should only be handled while wearing the correct PPE.

If the vehicle does NOT have impact damage, there is a low electrical shock risk. Remove the vehicle from the water. Let the water drain and follow the immobilization steps in Section 2. Do NOT attempt to drive.

In case of submersion:

Step 1: Reference section 3 to disable any direct hazards and ensure parking brake is not engaged

Step 2: Remove the vehicle from submersion (following the instructions in section 8)

Step 3: Drain as much water away from the vehicle as possible



Step 4: Follow steps in section 3 to disable high voltage

**Warning:** Do NOT attempt to drive the vehicle after submersion

**High Voltage (650 V)**


Please follow state, municipal, and department guidelines for properly handling electric vehicle submersion events

8. Towing / Transportation / Storage

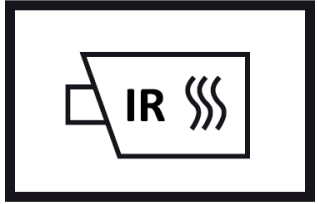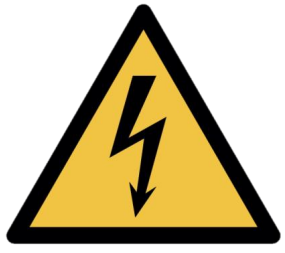

- Follow Section 3 (Disable Direct Hazards).
- Use Lift Points in Section 2: Immobilization and the Rescue Sheet
- If high voltage components were damaged or submerged, transport the truck with all wheels on a trailer. Do not attempt to drive.
- If high voltage components were NOT damaged or submerged, use the cage bolts and remove the axle shafts to tow (propulsion motor not spinning). Steps provided below.
- (Emergency) If the truck must be moved quickly AND no high voltage damage exists, it can be moved at less than 25 mph for no more than 5 minutes.
- Store outdoors, 50 feet away from other equipment/structures, and routinely check the battery pack for high temperatures with a Thermal Imaging Camera (TIC or IR Gun).

Wheels on ground Towing

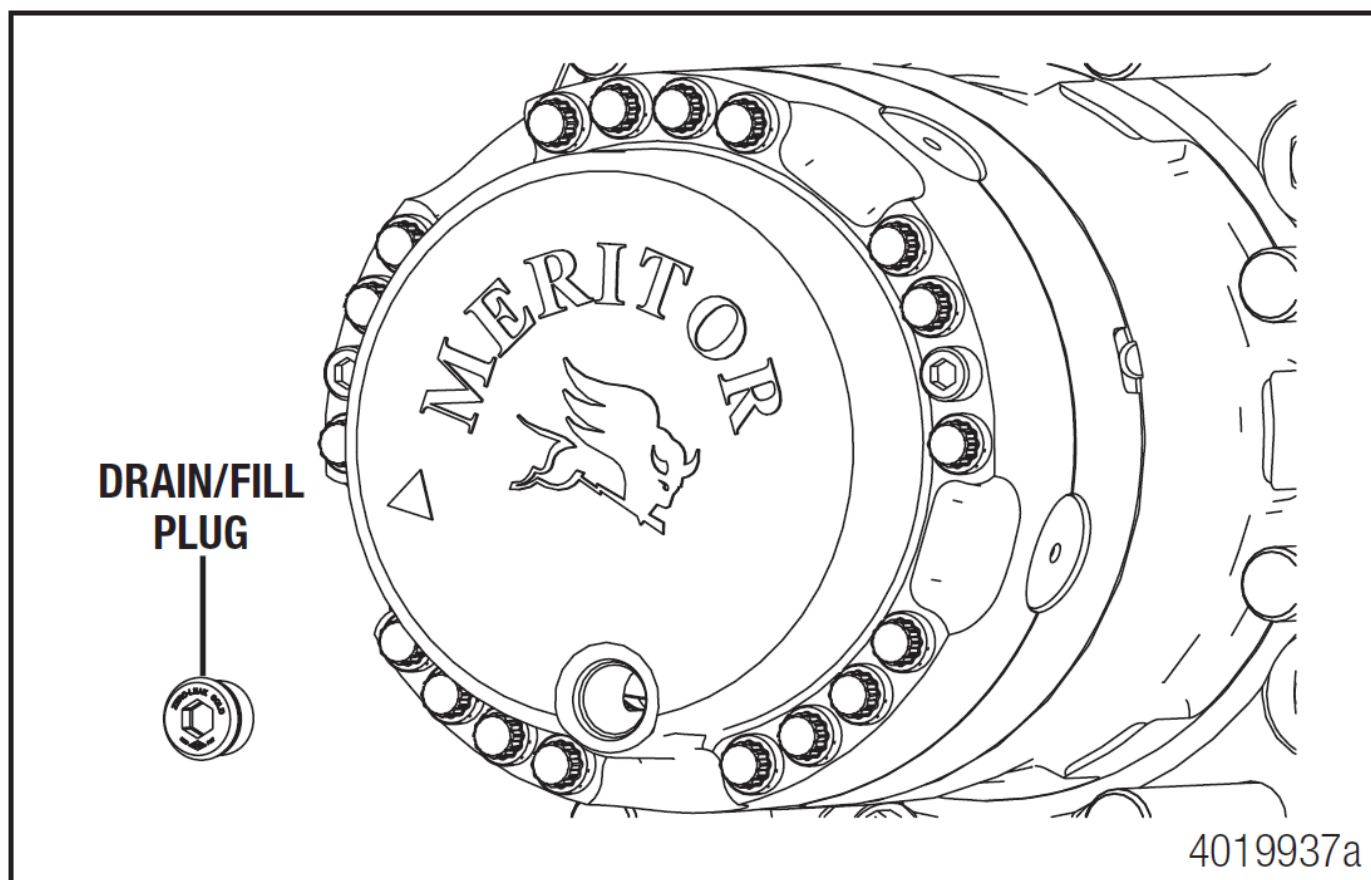

1. Prepare the powertrain for service by ensuring the vehicle is in a safe state. Park the vehicle on a level surface. Block the wheels to prevent the vehicle from moving. Apply the vehicle parking brakes, ensure the differential lock is engaged, ensure the vehicle is powered down.



2. Remove the wheel and tire assemblies. Refer to the manufacturer's instructions for correct procedures.

3. Rotate the wheel end so the drain/fill plug is at the 6 o'clock position. Remove the drain/fill plug and drain the lubricant into a container. Clean the drain plug of debris and reinstall it in the wheel end.


4. Remove the 18, M12 X 1.75-6g fasteners from the hub reduction wheel-end assembly using a 12-point socket. Do not remove the socket-head bolts.

5. Remove the hub reduction wheel-end assembly from the hub. If necessary, insert a pry tool in the slot and loosen the assembly from the hub.

6. Visually inspect the o-ring on the hub, do not remove. Ensure the o-ring is clean of any dirt or debris.

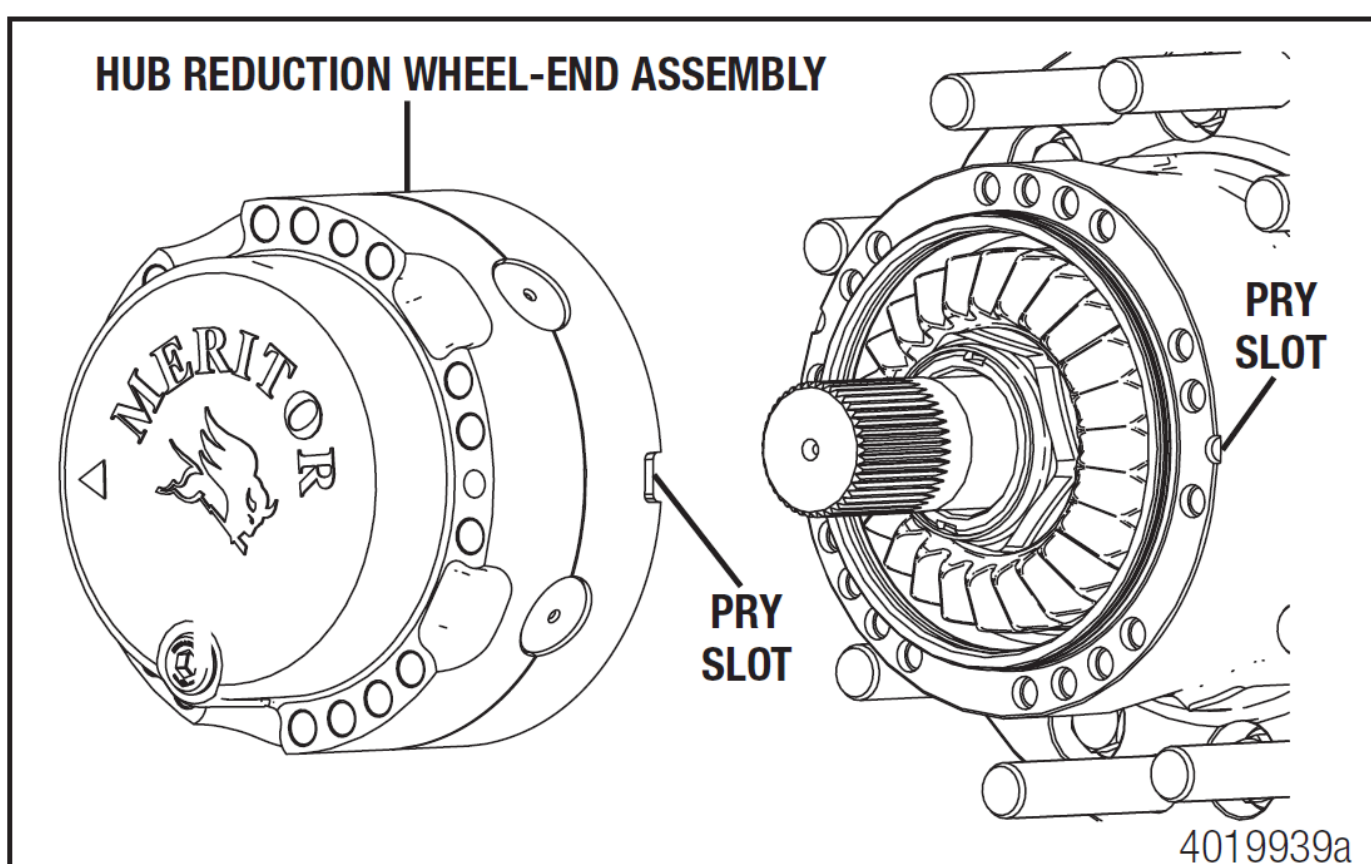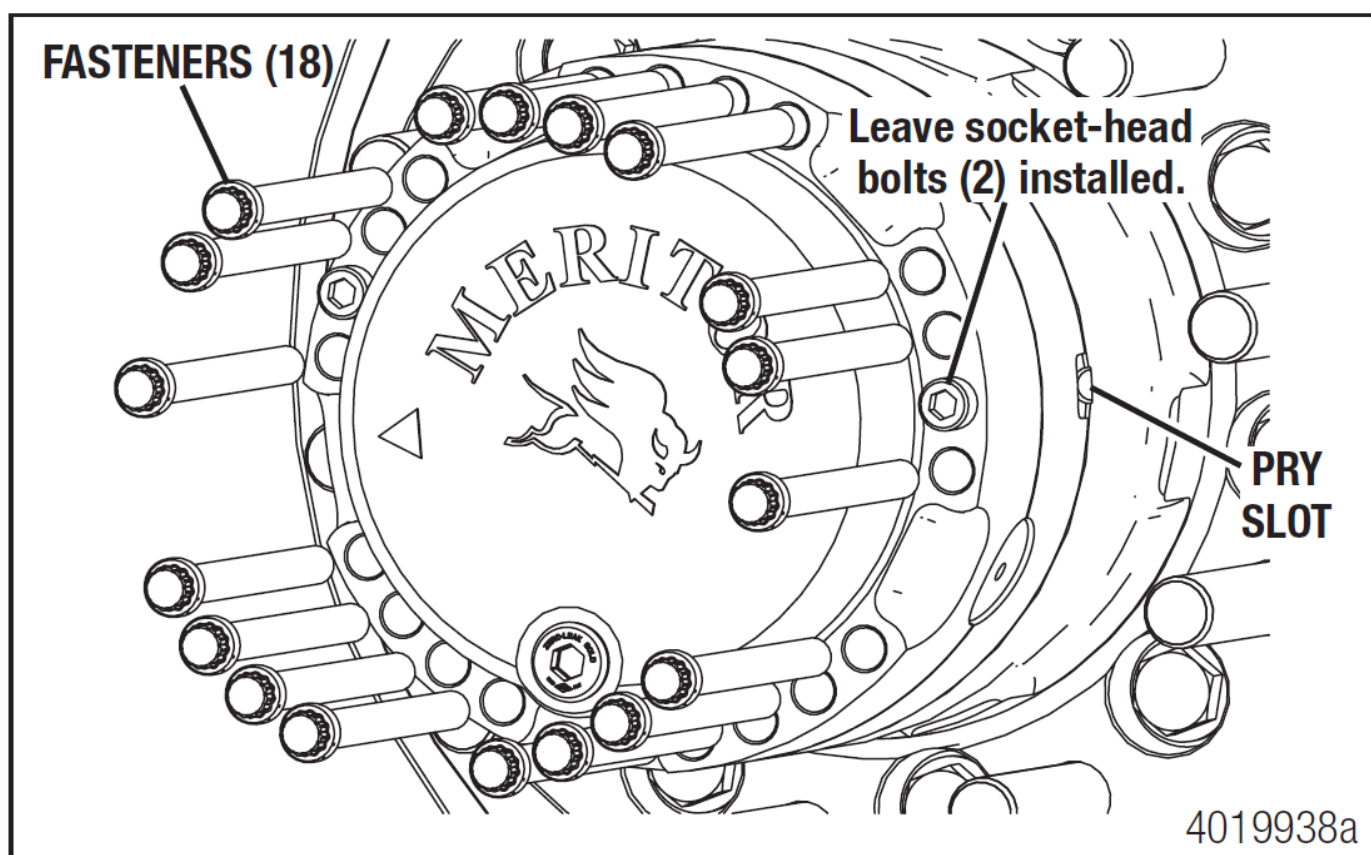


8. Towing / Transportation / Storage

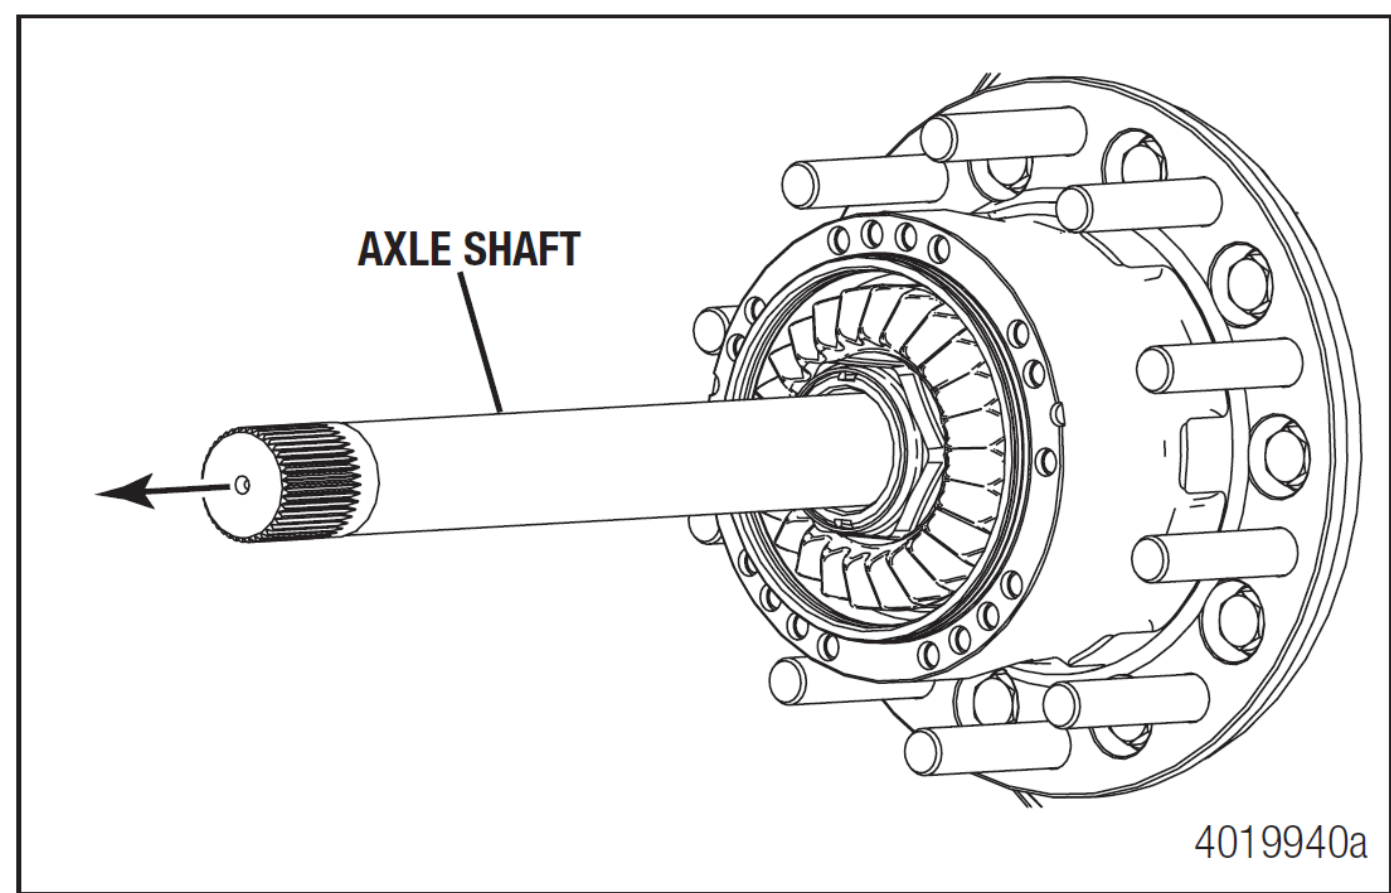


7. Pull the axle shafts out of the hub and axle housing. Label the location of the axle shafts (left or right side) so they can be reinstalled in the same hub during reassembly. Also, label which end of the shaft goes into the carrier. Store the axle shafts in a clean, protected location that will keep them free of dirt and other contaminants.

8. Reinstall the hub reduction wheel-end assemblies with the 18 fasteners in each hub. Do not tighten the fasteners beyond 74-96 lb-ft (100-130 Nm). This will keep all parts together during transport as well as prevent dirt from entering the bearing cavity and loss of lubricant.

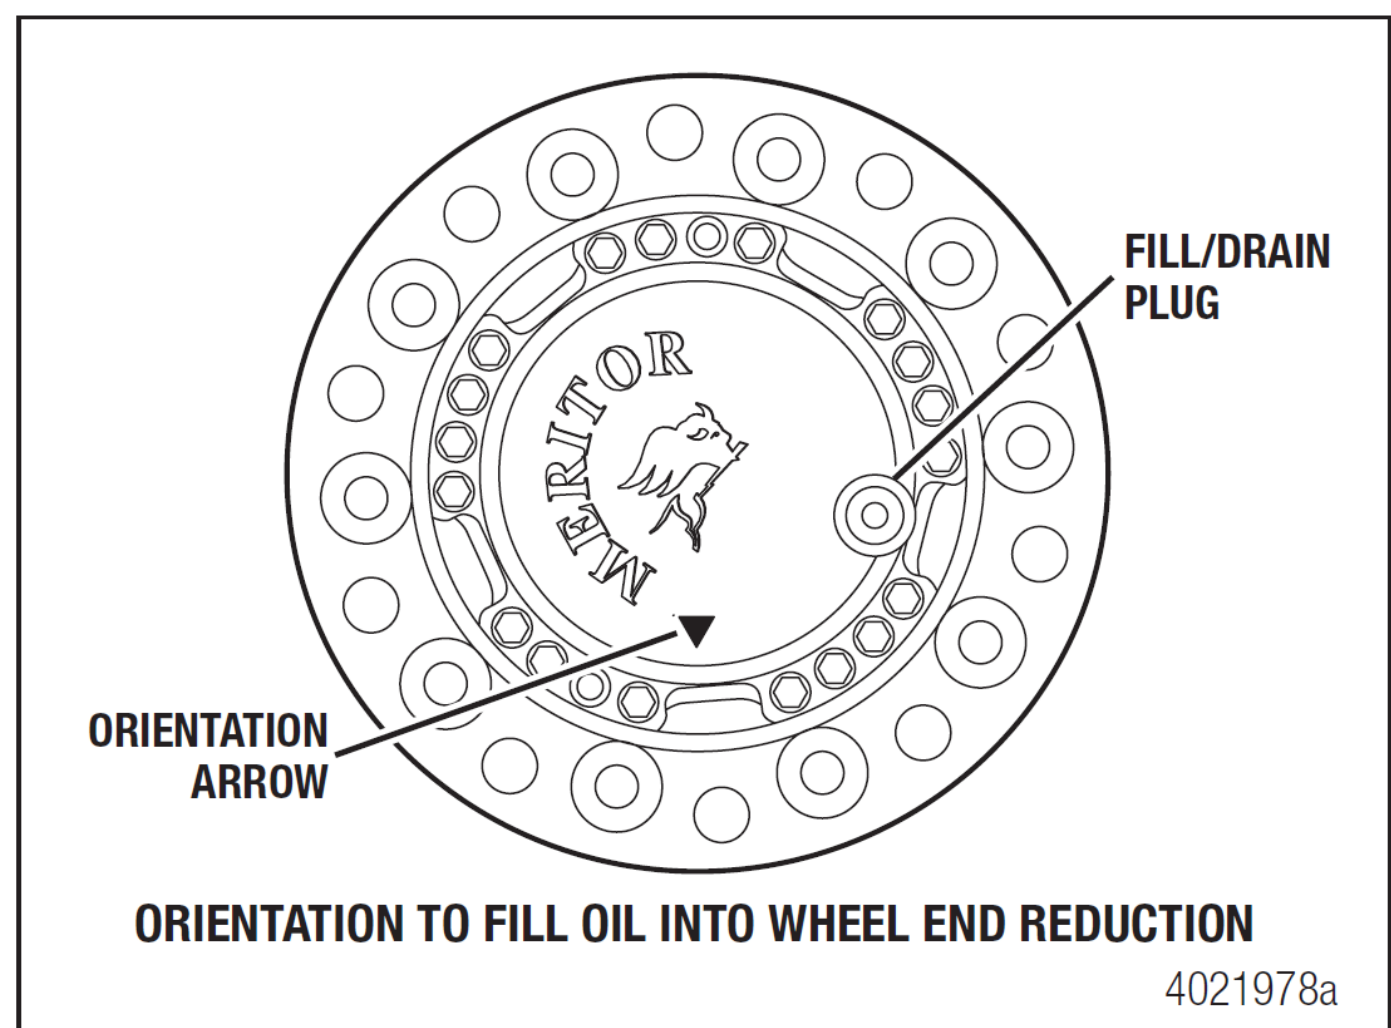

9. Fill oil into wheel end reduction according to the following procedure.
- a. Orient the wheel end reduction with the arrow on the wheel end cover pointing towards the ground. The fill plug is approximately at 4 o'clock position in this orientation.
 - b. Clean the area around the plug and remove the plug from the wheel end cover.
 - c. Fill oil into each wheel end reduction up to the bottom of the oil port (approximate lube quantity is 1 liter).
 - d. Install and tighten the plug to 26 ±3 lb-ft (35 ±4 Nm).

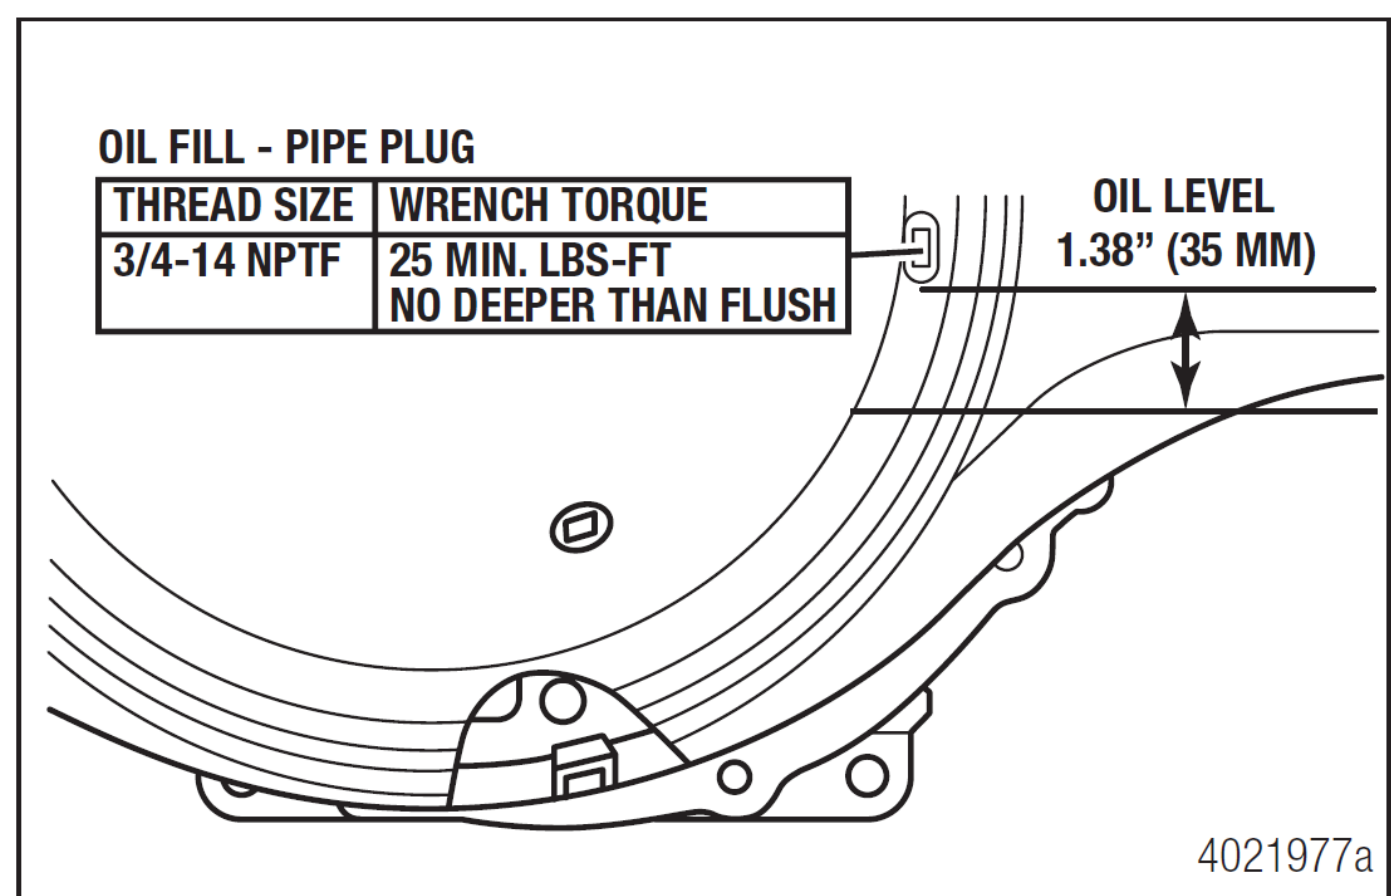

10. Check the lubricant level in the ePowertrain and add the correct type and amount of lubricant if necessary. The correct lubricant level can be inspected by measuring 1.1-1.5 inches (28-38 mm) from the bottom of the oil fill hole to the surface of the oil within the structural housing.


11. Connect an auxiliary air supply to the brake system of the vehicle that is being transported. Before moving the vehicle, charge the brake system with the correct amount of air pressure to operate the brakes. Refer to the instructions supplied by the manufacturer of the vehicle for procedures and specifications

12. When the correct amount of air pressure is in the brake system, release the parking brakes of the vehicle that is being transported.

9. Important Additional Information

-  Do not cut any orange cables.
-  Do not touch any high voltage cables and electric components.
-  Do not perform any operation on a damaged truck without appropriate Personal Protective Equipment (PPE).
-  Keep all rescue equipment clear of high voltage components with a recommended clearance of 12 inches (30 cm) if possible.


10. Explanation of Pictograms Used

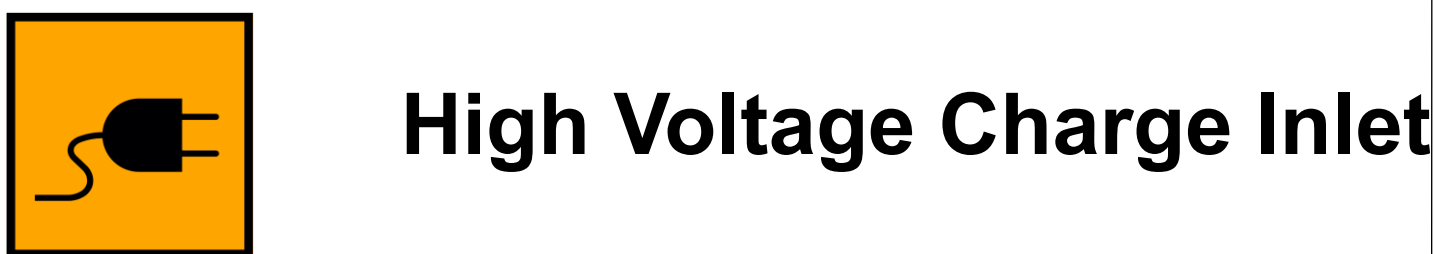

10. Explanation of Pictograms Used




Rotate Vehicle

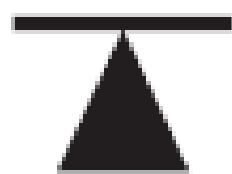

Lift Point



Compressed Air Tank

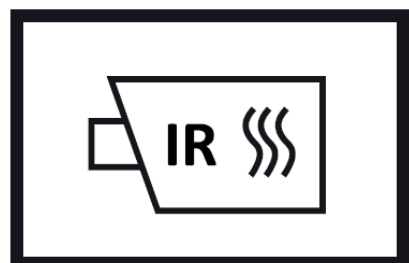

Use Thermal Infrared Camera



Acute Toxicity



Hazardous to Human Health



Trailer Air Brake



Explosive



Flammable



Corrosives



Do Not Use Wet Foam



Use water to extinguish the fire