



"Under dead battery operation, PTN5110 applies voltage clamps to both CC pins so that the system may receive power as a Sink. To support platforms with buck—boost configuration, PTN5110 asserts EN\_SNK1 pin based on validity of VBUS voltage (facilitates 5 V VBUS sinking)."

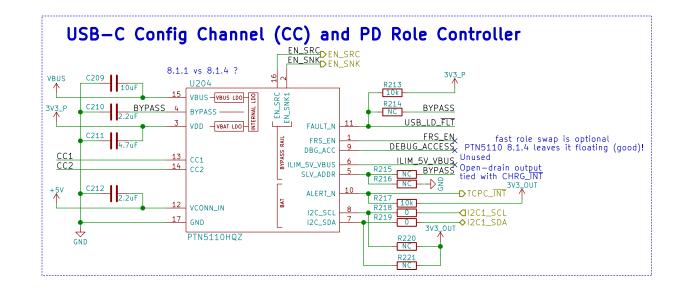

 $USB1_VBUS=+5V$  when VBUS>4.31V

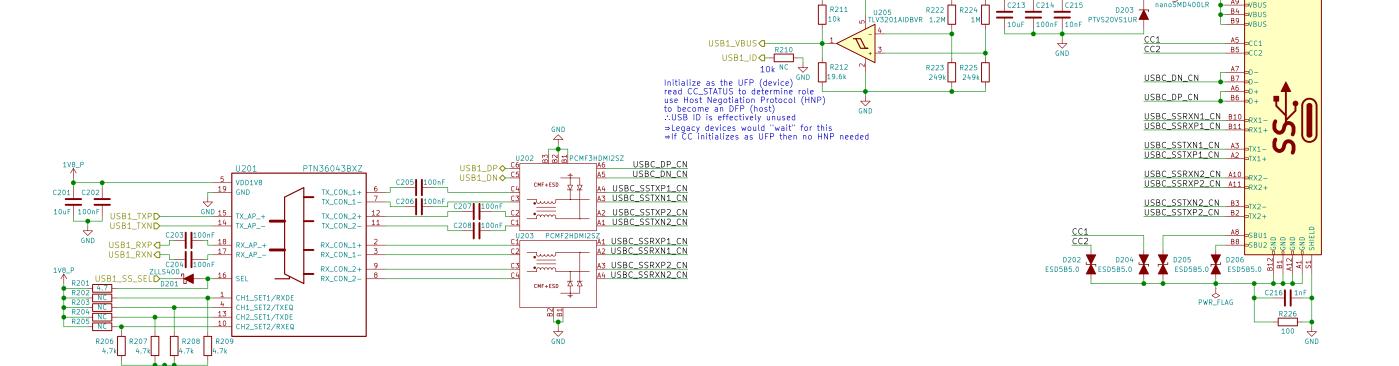



GNU GPLv3			
Copyright 2018			
Purism SPC			
Sheet: /USB-C/			
File: usb-c.sch			
Title: USB Ty	pe C		
Size: A3	Date: 2018-05-02	Rev: v0.1.0	
KiCad E.D.A. kic	ad 4.0.7	ld: 2/19	


**VBUS** ◆ **D VBUS** 


Ihold=4A Itrip=8A PWR\_FLAG F201\_ →


J201 USB\_C\_Receptacle

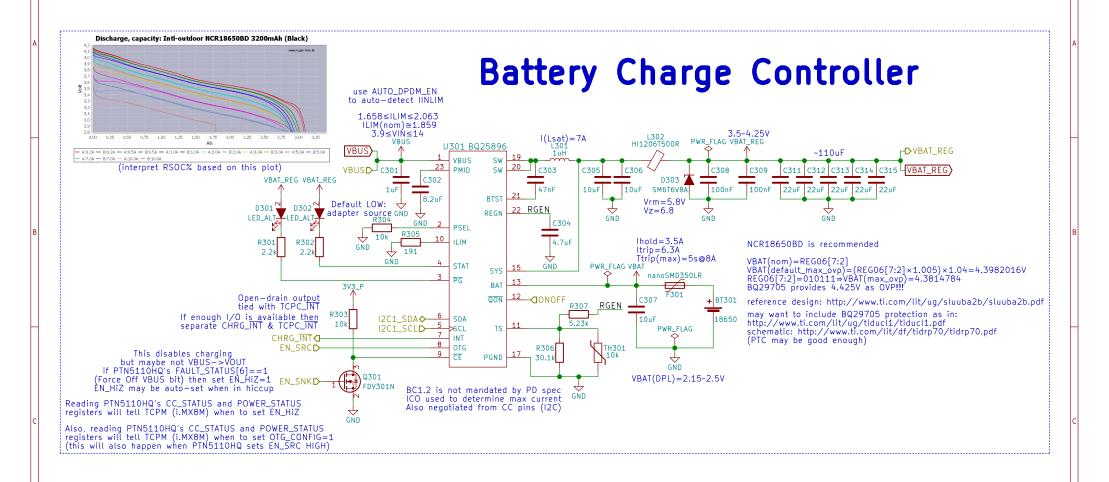


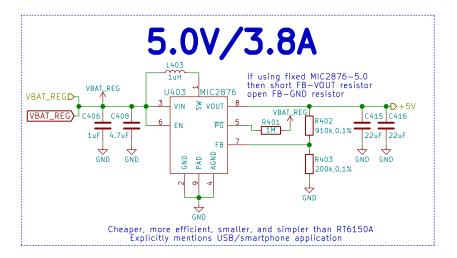

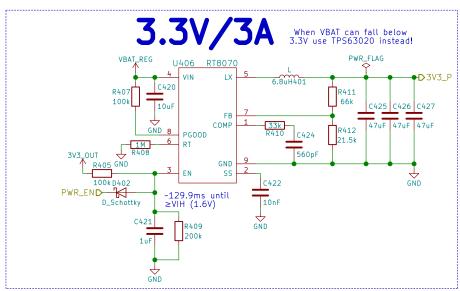

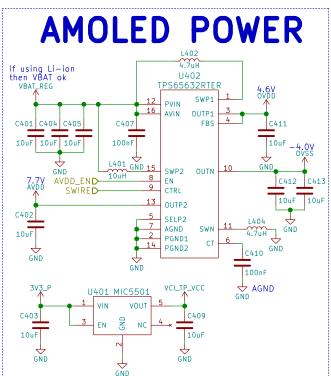

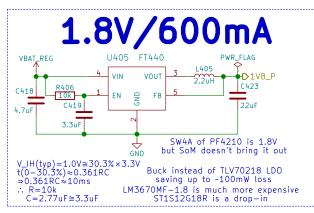

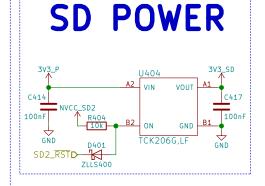



TODO: add parallel 100nF bulk caps! & spread all over the power plane


KiCad E.D.A. kicad 4.0.7


GNU GPLv3 Copyright 2018			
Purism SPC			
Sheet: /Power/			
File: power.sch			
Title: Power			
Size: A4	Date: 2018-05-02	Rev: v0.1.0	


ld: 4/19

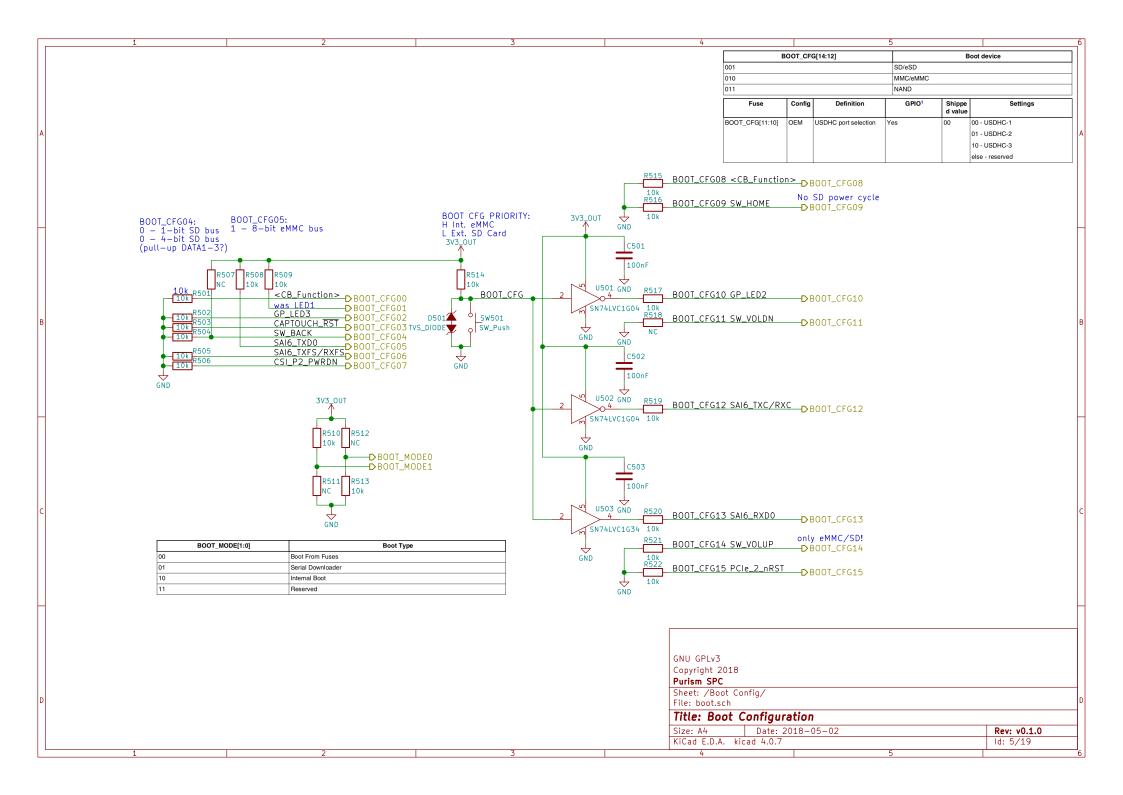


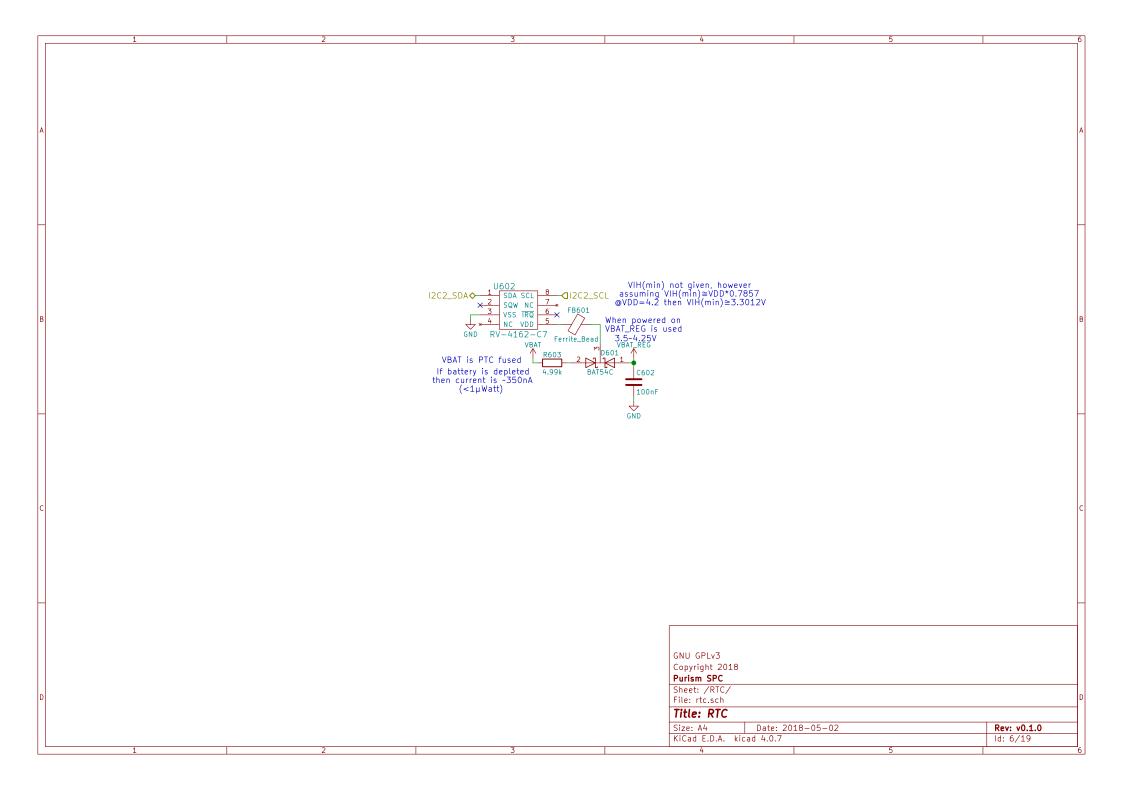


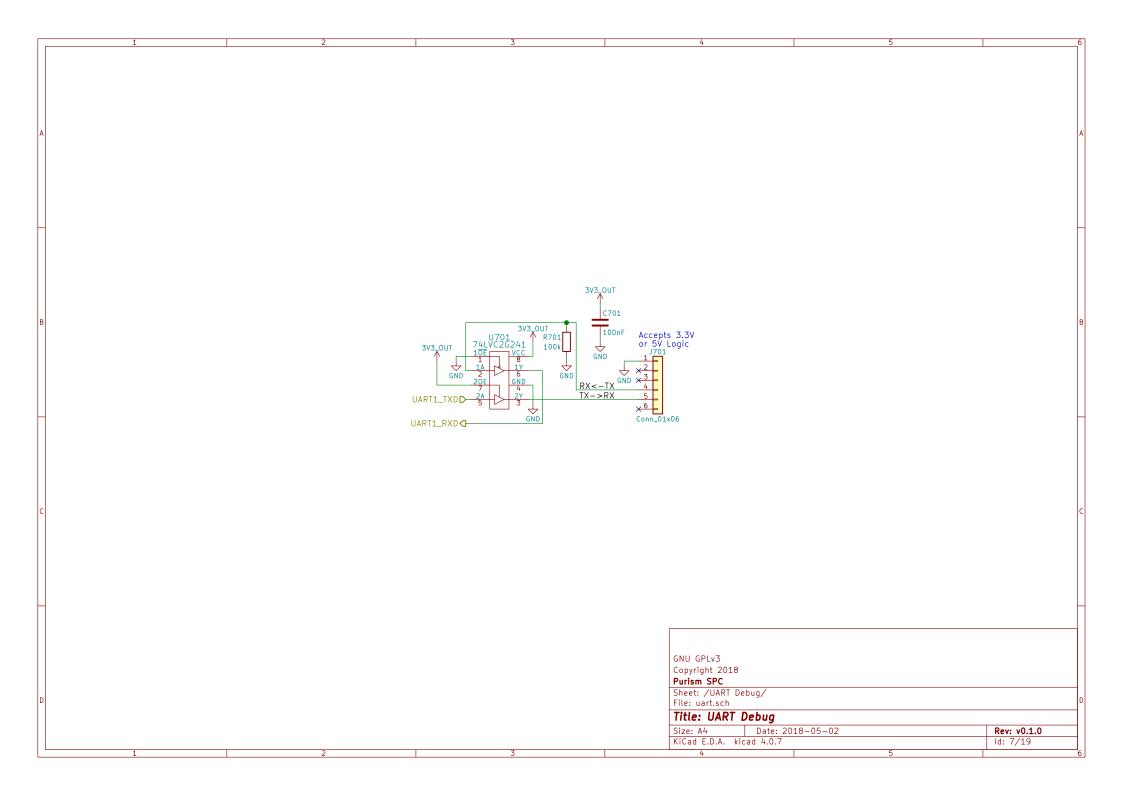


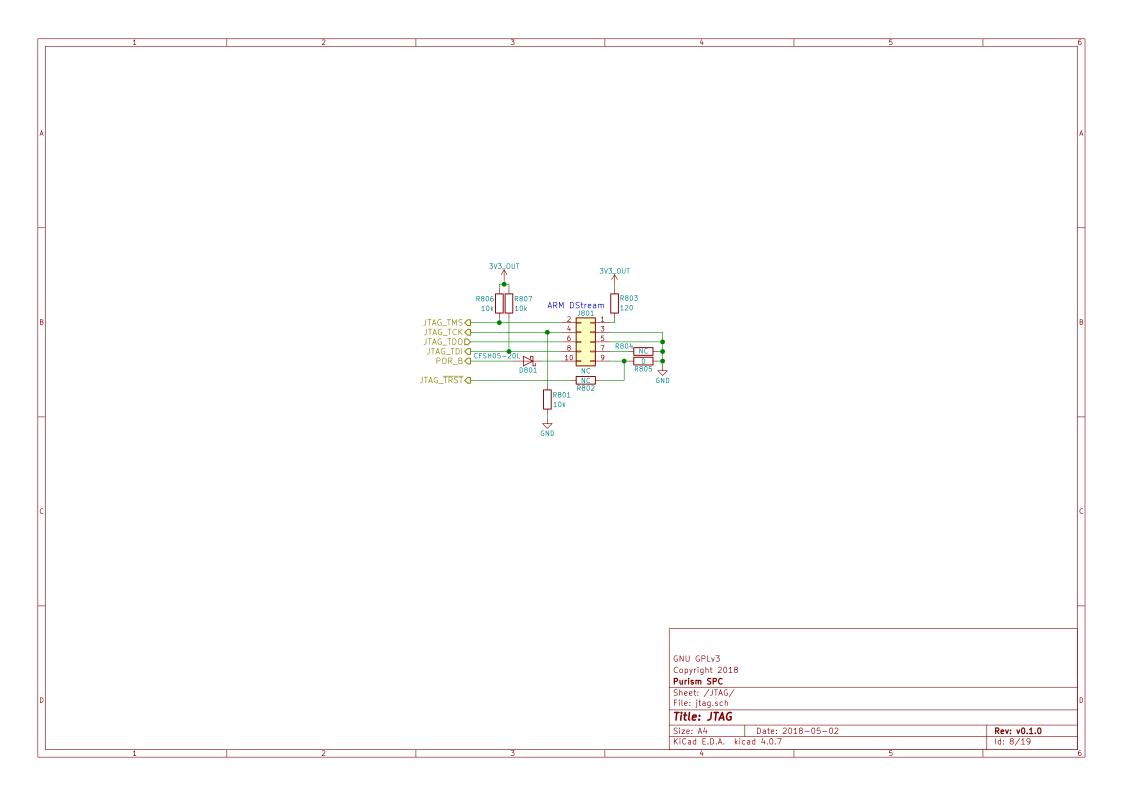


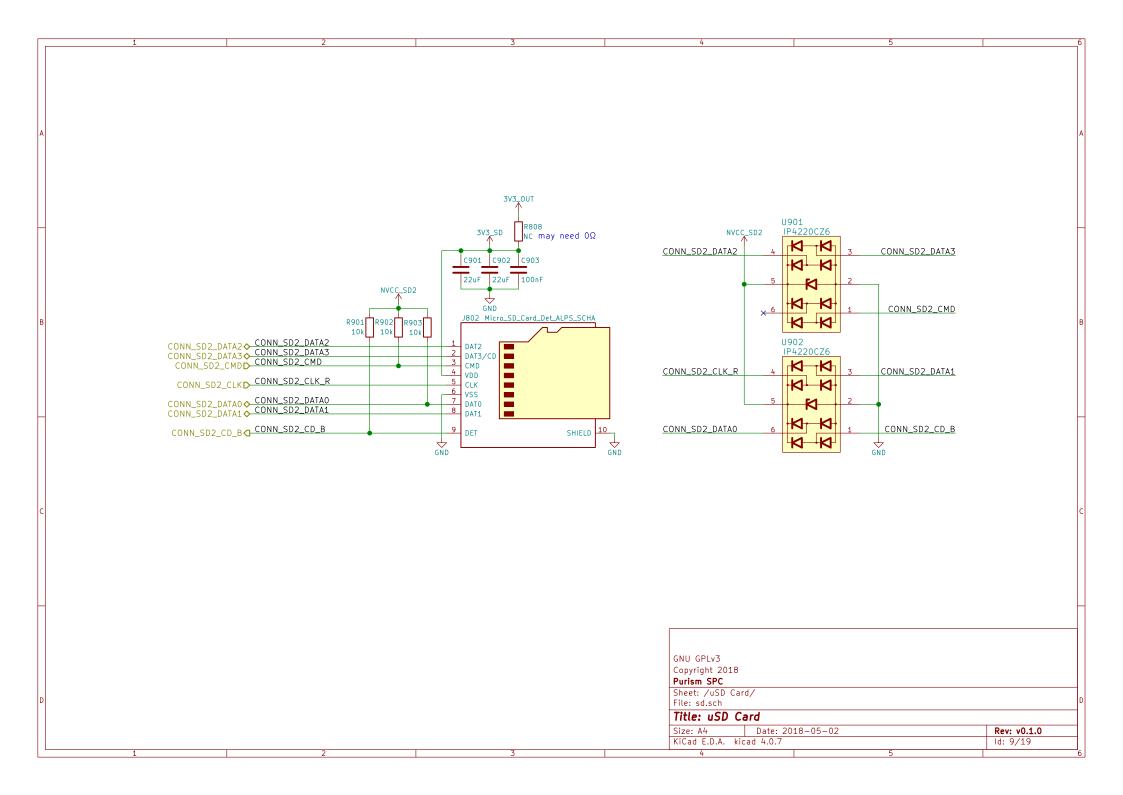


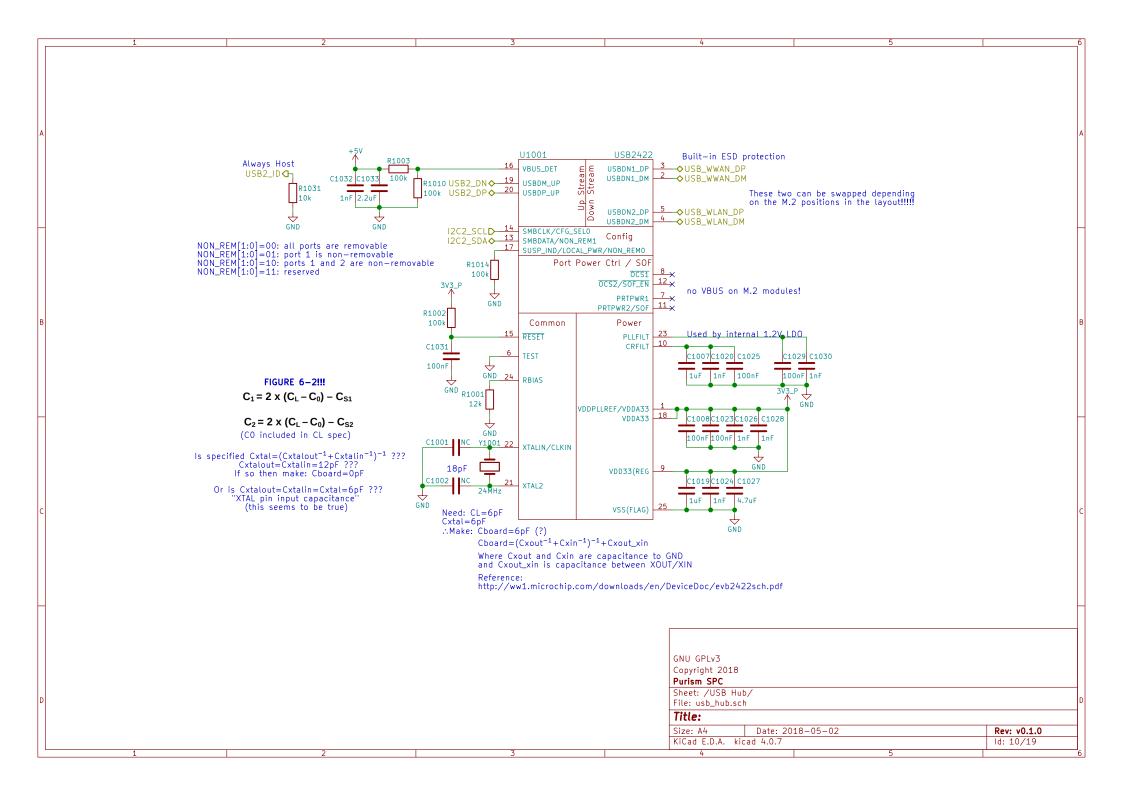


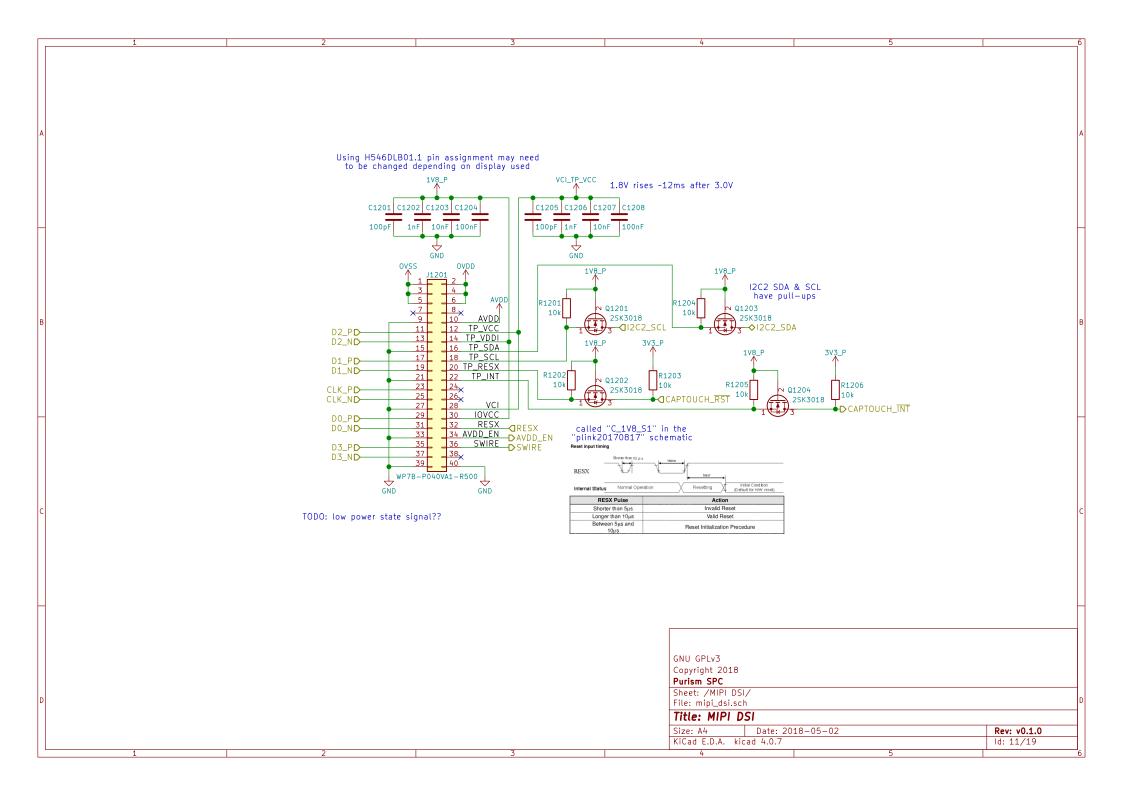


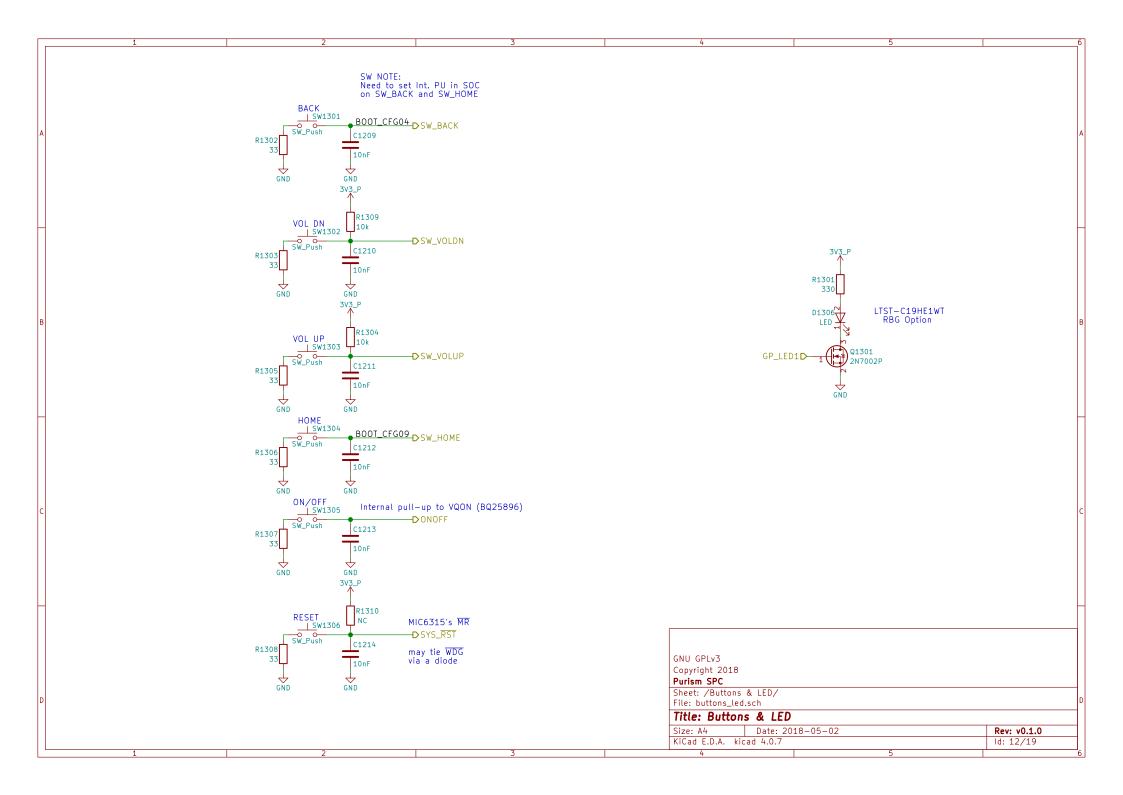


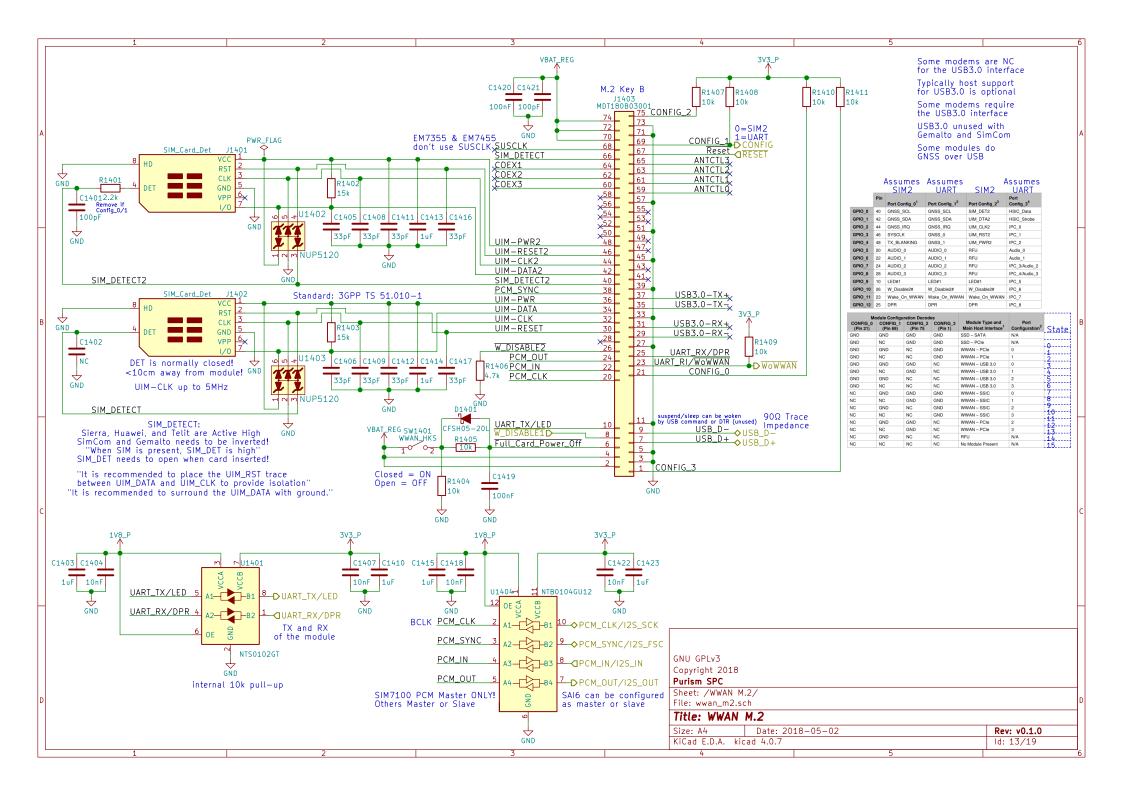


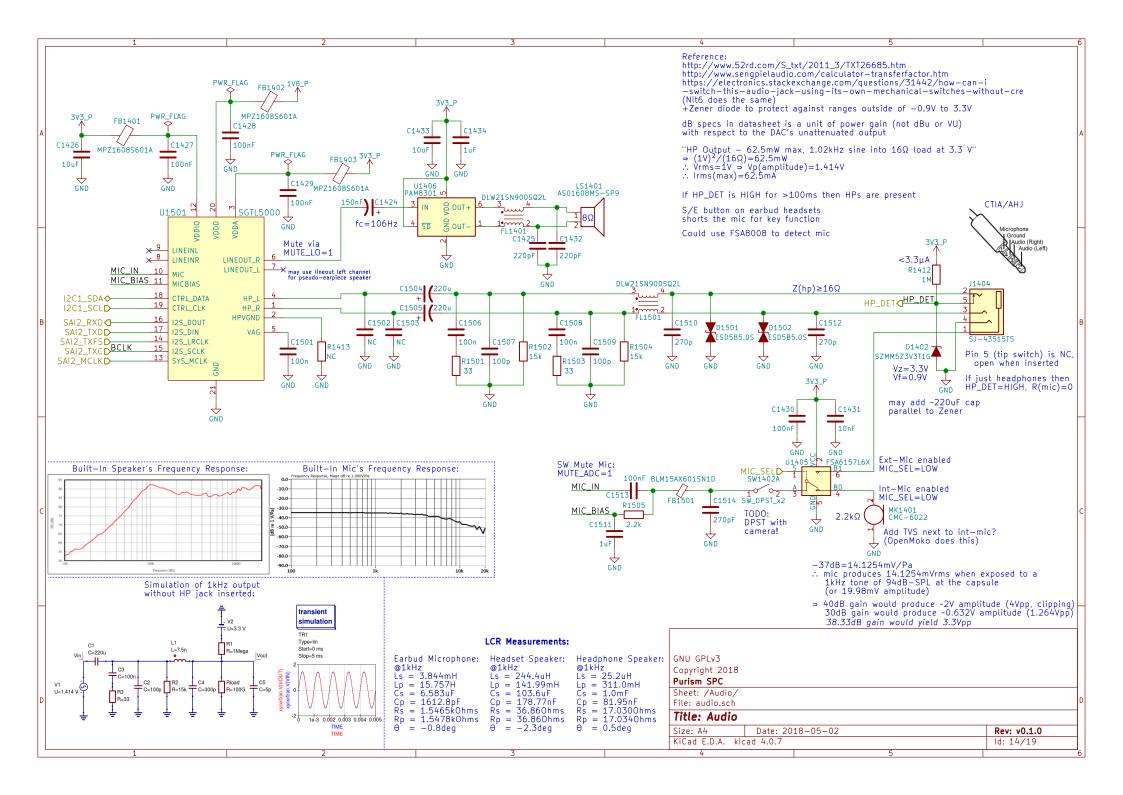

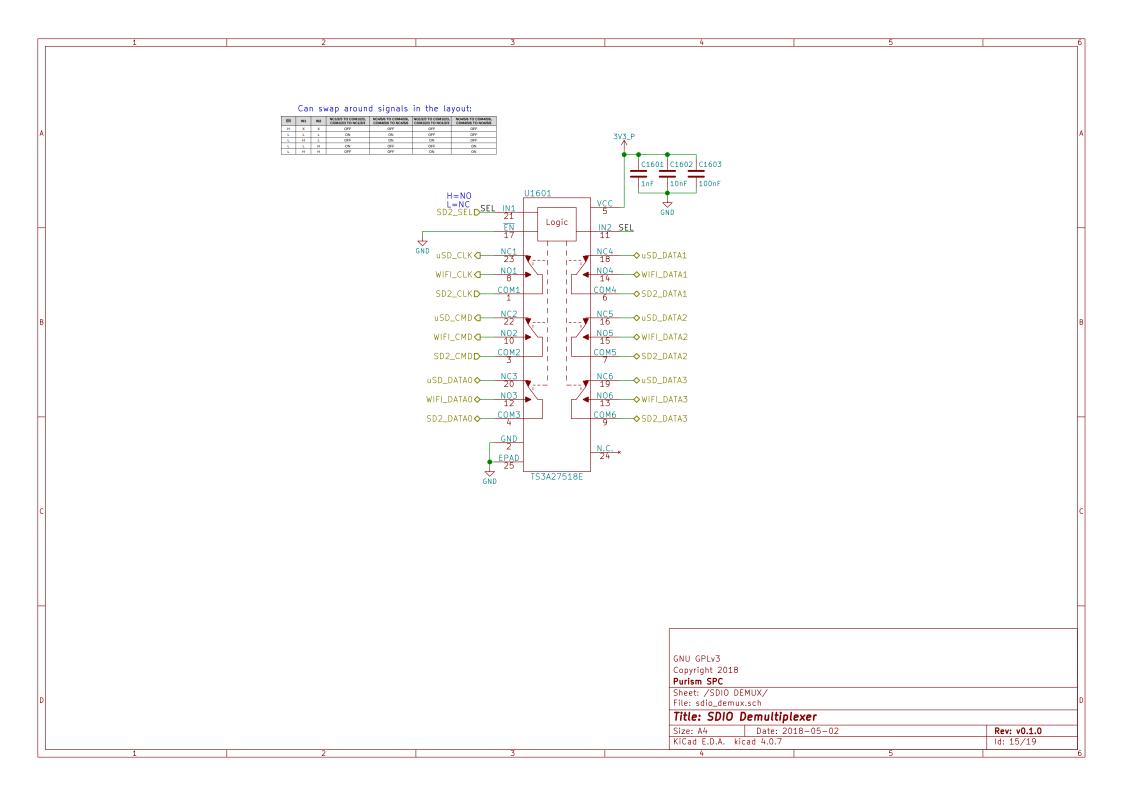


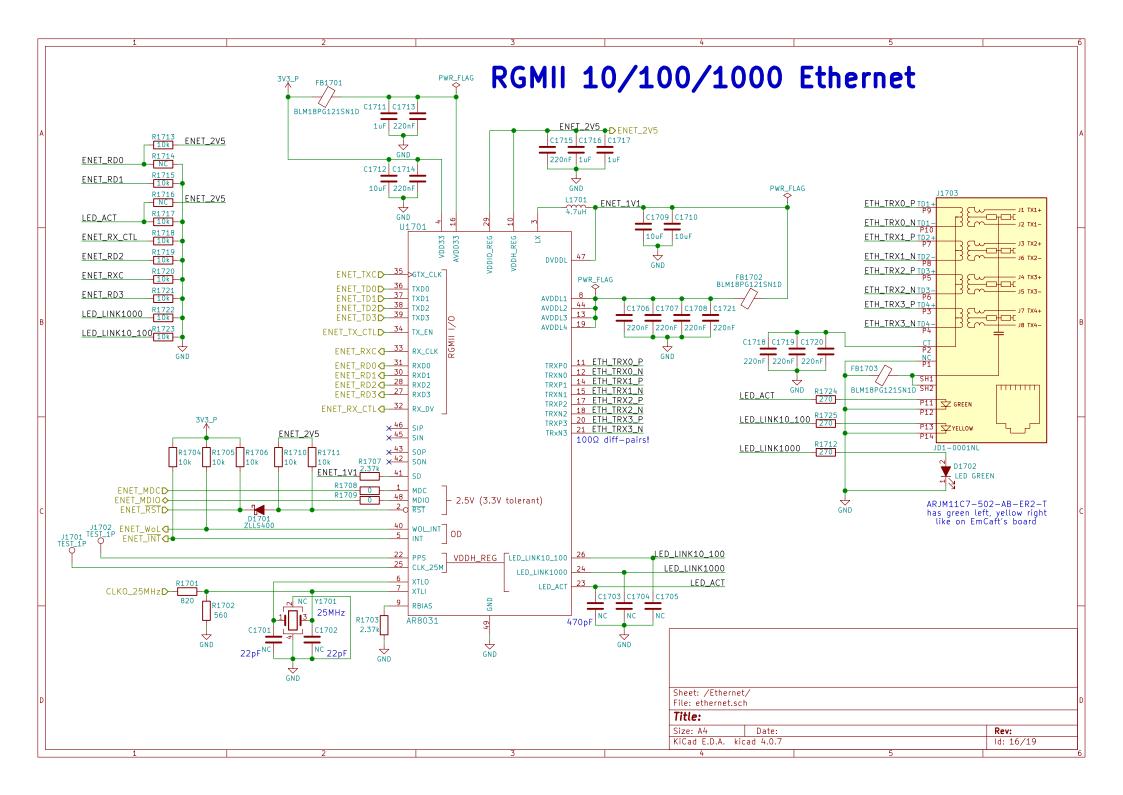

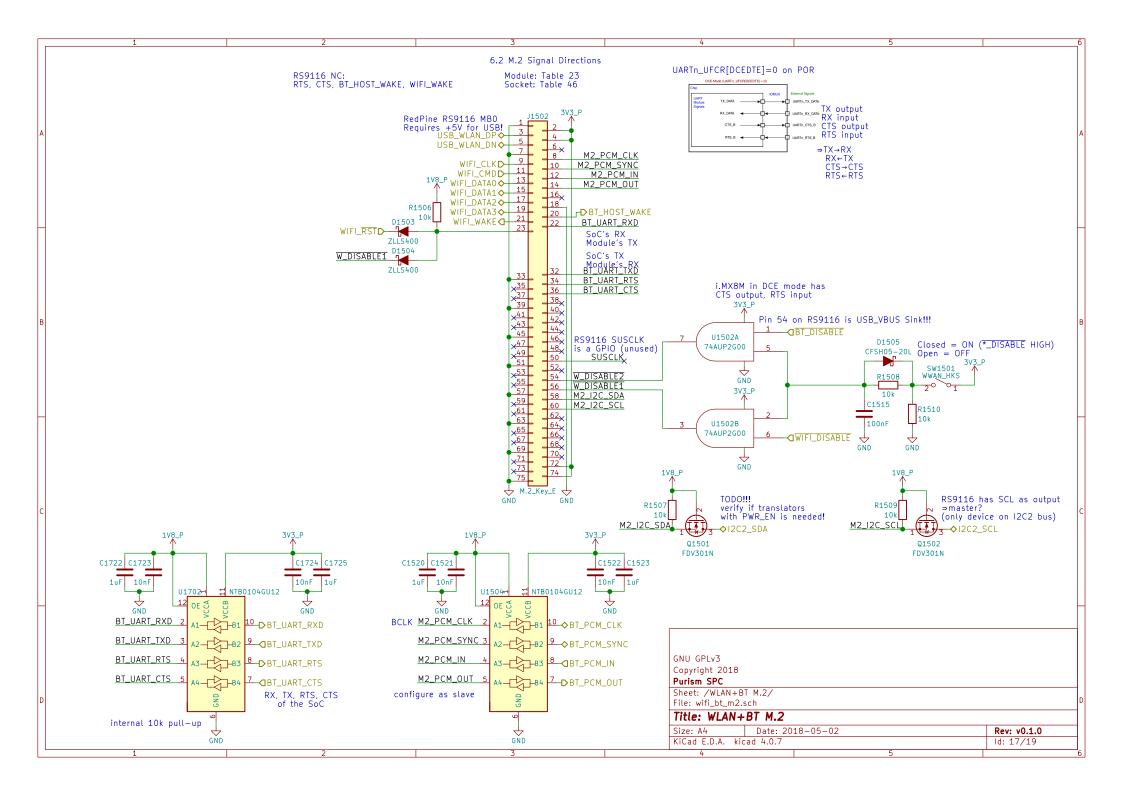

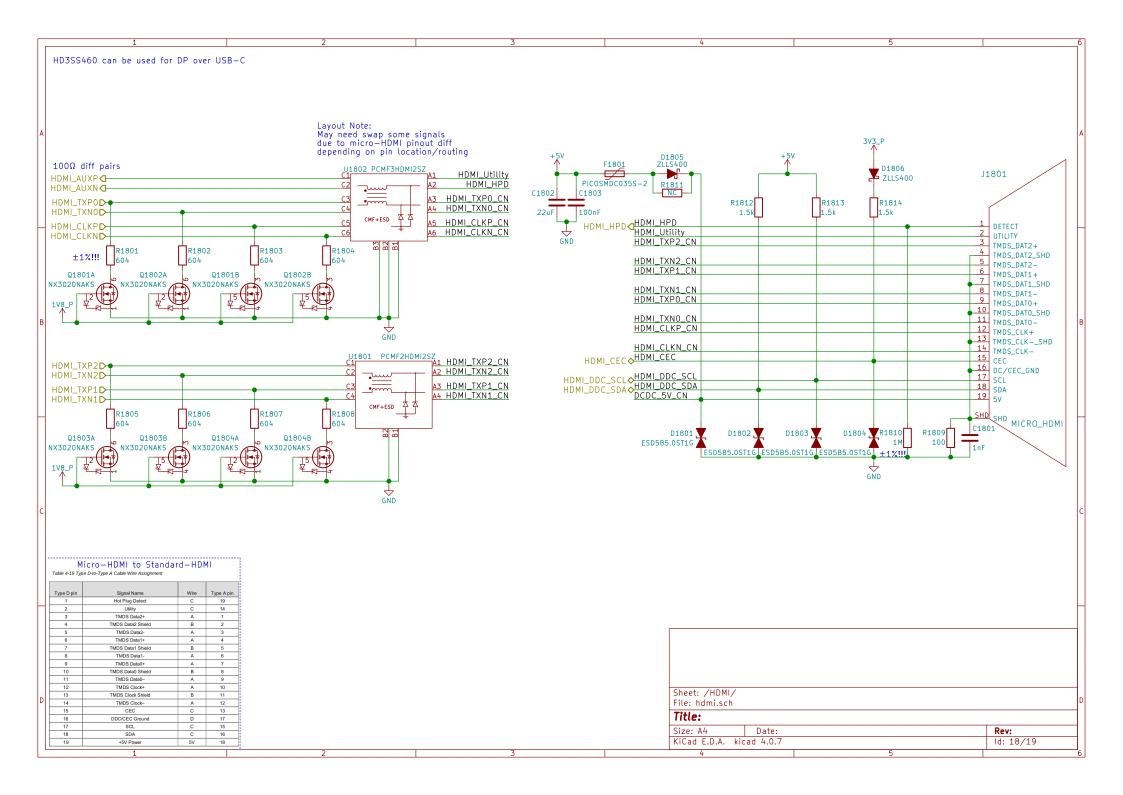



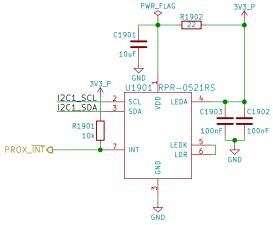

Reference: http://www.rohm.com/web/global/sensor-shield-support/ps-als-sensor

## 9-Axis IMU



Reference: https://store.invensense.com/datasheets/invensense/ AN-IVS-0001EVB-00%20v1%202.pdf

ADO sets the slave address's LSB (110100X)

INT1\_ACTL sets if IMU\_INT is active—high or active—low

"FSYNC - Connect to GND if unused"

12C's VIH=1.8V



Sheet: /Sensors/
File: sensors.sch

Title:

 Size: A4
 Date:
 Rev:

 KiCad E.D.A. kicad 4.0.7
 Id: 19/19