

USER GUIDE

Contents

Getting Started

- 3 Device Design and Functions
- 4 Safety warnings
- 5 Unique features of your iron

Use your iron

- 6 Meet the touchscreen
- 7 Turning on and setting up your thermal iron
- 9 Ironing process
- 10 Interchangeable bottom plate
- 11 Manual/Auto Mode Button

Maintaining Your Iron

- 12 Maintenance operations



Troubleshooting

- 14 How to change the resistance
- 15 Most common problems

Getting Started

Device Design and Functions

► Sparta:

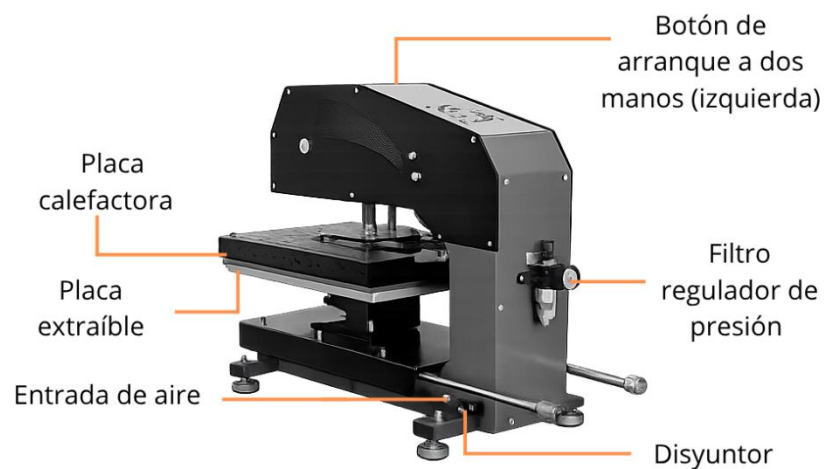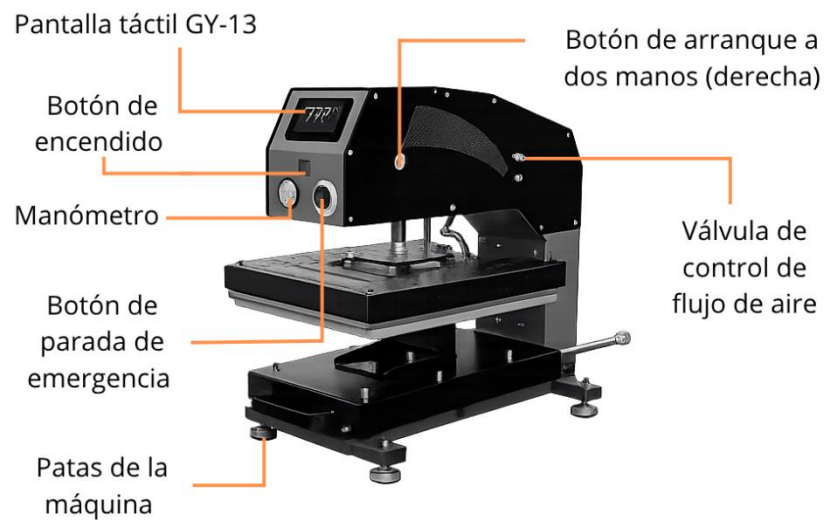



- Please read these instructions carefully before using your iron for the first time
- Use the heat press only for its intended purpose: pressing materials using heat.
- Avoid electric shocks by avoiding contact with water or liquids.
- Disconnect securely by holding the plug, not the cord, when disconnecting it from the electrical current.
- Keep cords away from hot surfaces and allow the machine to cool completely before storing.
- Do not use the machine if the cord is damaged or if it has been dropped or damaged. If repairs are necessary, take them to a qualified service technician to avoid risks of fire, electric shock, or injury.
- Always turn off the power before cleaning, repairing, or servicing the machine.
- Supervision is required for anyone using the heat press, especially children or those with reduced physical, sensory, or mental capabilities. Never leave the machine unattended while it is connected.
- Avoid burns by not touching hot metal parts or heated plate during use. Wear heat-resistant gloves.
- Do not overload electrical circuits. Avoid using other high-voltage equipment on the same circuit as the heat press.
- If an extension cord is needed, make sure it is rated at least 20 amps to prevent overheating. Position the cord so that it does not trip or pull on it.
- Keep your hands away from the top plate during locking to avoid injury caused by machine pressure.
- Place the heat press on a sturdy and suitable support to ensure stability during operation.
- Keep the work area clean and free of obstructions to avoid accidents.

How to change the heating plate

1.

Remove the plug attachment mechanism from the heating plate. Unplug the plug from the heating plate.

2.


Loosen the four screws that hold the hotplate in place.

3.

Pull the heat plate out to disassemble it. Align the new heating plate with the corresponding holes and tighten the four screws tightly.


4.

Plug in the heating plate power cord and tighten the heating plate plug attachment mechanism.

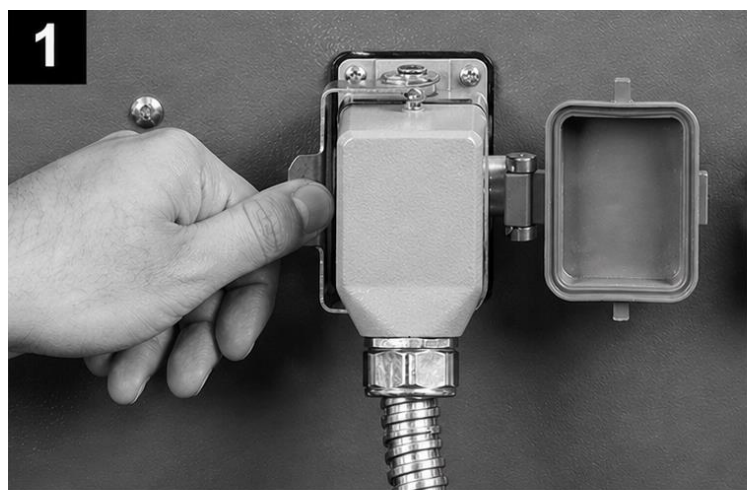

Use your iron

Meet the touchscreen

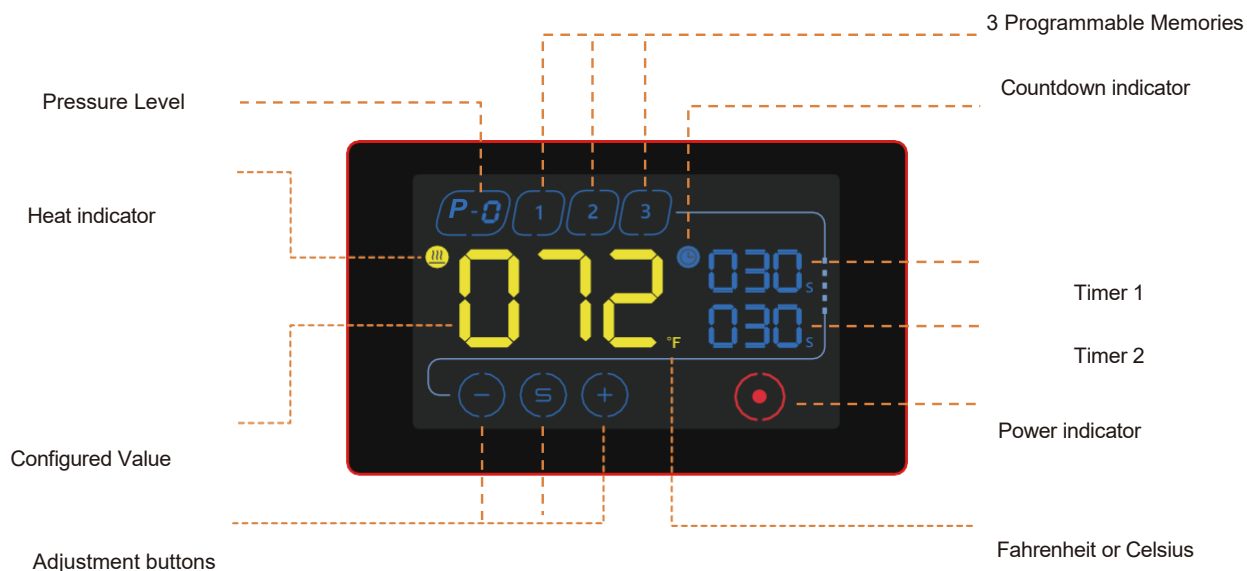

Current temperature

Adjustable between 0 and 230 degrees Celsius



Memoirs

3 programmable memories



Ignition

Power indicator



Pressure

Current pressure Between 0 and 8



Adjustment buttons

Use the to adjust the desired temperature and time. The Change the purpose of the adjustment.



Dual timer

Its heat press has the possibility to set 2 timers that work sequentially. At the end of the countdown of the upper timer the iron opens, starting the countdown of the lower timer when the iron is closed again. If you want to reset the timer, you must wait for the countdown of the lower timer to end.

You can set the timer above 0 to use only the lower timer.

Turning on and setting up your thermal iron



Turn on your heat iron

Press the power switch to the "I" position and start working.



Memory Selection

The memory indicator flashes. Select one to begin your setup.



Adjusting the temperature

Tap the  to begin setting the temperature. Use the  y  to set the desired temperature in the display. Tap  to save the setting.




Setting the timers

Use the buttons again  y  to place the desired time and  to keep. The top timer is commonly used for garment pre-ironing and for the transfer operation. Always follow the recommendations indicated in the materials used.



Heating the resistance

The indicator  flashes to indicate that the machine is in warm-up mode. When the temperature reaches the set value, the bell emits an intermittent sound to indicate that the Beinsen Malvinas heat press is ready to press.

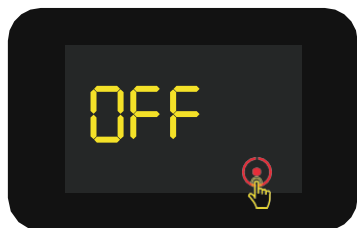

Automatic shutdown

After 150 minutes from the last operation, the press will automatically enter sleep mode and will display the message "OFF" on the screen. You can turn it back on by tapping the control .



Turn off your heat iron

Press the power switch to return it to the "O" position and interrupt the power supply.

Ironing process



Preparation for Pressing

Connect the machine to the air source and turn it on. After 5 seconds, the controller's touch screen will appear and the machine will begin to heat up to the desired temperature you have set.


Preparation of materials

Adjust the pressure to the proper level. Place the garment (e.g., a T-shirt) on the bottom plate and place the transfer paper, foil, or other materials on top of the garment.

Start the transfer



When the machine reaches the set temperature, press the "two-handed start button"; the heat plate will automatically lower and the countdown to "Time 1" will begin. Usually, "Time 1" is used for preheating, in order to remove moisture and wrinkles. "Time 2" corresponds to the heat transfer work. If you don't need to preheat, you can set the same value for "Time 1" and "Time 2".

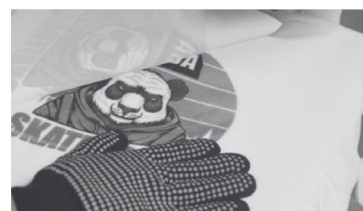

Finalize the transfer

When the countdown ends, the heating plate will automatically rise. Remove the bottom plate and remove the transfer paper or foil. The transfer is complete.

(Note: Transfer papers may require cold or hot peeling; refer to the instructions on your transfer paper.)



Emergency stop function

If you need to stop the machine immediately or in the event of a malfunction, press the emergency stop switch to stop operation and quickly raise the plate, to prevent damage or injury.

Interchangeable bottom plate

How to change the bottom plate

1.

Remove the bottom plate. Pull the indexing pin and twist it to release it.



2.

Remove the bottom plate.




3.

Insert the new bottom plate you want to attach.



4.

Rotate the indexing pin, insert it, and lock it.

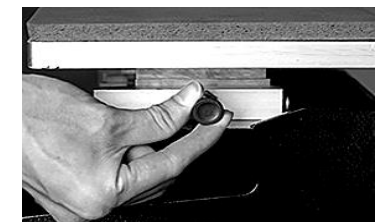

Lower chainrings available

Below we show you the different chainrings compatible with your Beinsen Miranda heat press. Remember that only plates with a quick exchange system are compatible with your heat press.



18x18cm.



30x36cm.
Small sizes



24cm. in diameter



38x38cm.
visors



18x38cm.
pants



18x46cm.



18x38cm
slippers



40x50
Neck logos



40x50
Double sleeve

Pressure adjustment

How to adjust the pressure correctly

1. Connect the air supply
The pressure value will be displayed on the pressure gauge of the regulating filter (range: 0-1 MPa).
2. Adjust air pressure

Pull up on the regulator filter knob to adjust the air pressure (turn it clockwise to increase the pressure and counterclockwise to decrease it). It is recommended to adjust the transfer pressure between 0.4 and 0.6 MPa. Once the desired pressure is reached, press down on the regulator filter knob again.
3. Filtering water from the air
The filter regulator will filter the water from the incoming air, which will be collected in the glass container located below the filter. Manually press the button on the bottom outlet to discharge the water.
4. Adjustment of the rise speed and pressure of the heating plate

Adjust the two knobs on the right side of the machine. The upper airflow control valve adjusts the rate at which the heat plate rises, while the lower air flow control valve adjusts the rate at which the heat plate exerts downward pressure. You can adjust these parameters according to your needs (turn clockwise to slow down and counterclockwise to increase speed). After making the adjustments, tighten the screws located near the cover of the machine to lock the adjustments. (Note: The machine comes preset with appropriate speeds, so it is not recommended to modify these settings.)



Maintaining Your Iron

To ensure optimal performance and extend the life of your thermal iron, proper and regular maintenance is essential. A clean and well-maintained equipment not only improves the quality of the prints, but also prevents damage and breakdowns that can affect their operation.

In this section you will find key recommendations for cleaning, caring for and inspecting the components of your iron, thus ensuring its efficiency and safety with each use.

Regular cleaning of sublimation plates or surfaces

- **After each use**, make sure that the sublimation plates or surfaces are clean and free of ink, paper, or any other material residue. Use a soft, clean cloth slightly dampened with warm water or a specific cleaner recommended by the manufacturer to remove any residue. Avoid using abrasive products that can damage surfaces.

Replacement of protective films or coatings

- The vast majority of thermal plates incorporate protective films or coatings on the sublimation plates to prevent the ink from adhering directly to the plates. These coatings wear and lose properties over time, which affects the quality of the transfers. That's why you should replace them when they start to show **signs of wear**.

Inspection and cleaning of internal components

- Depending on the model of your heat iron, it may need to be disassembled to access internal components such as springs, cables, or electrical connections. Perform a regular visual inspection to ensure that there is no damage or wear to these components and clean them if necessary. Always disconnect the heat iron from the power source before performing any internal maintenance.

Temperature Verification and Calibration

- Over time, it is possible that the temperature indicated on the screen of the heat plate may vary slightly from the actual temperature of the surface of the heating plate. To ensure accuracy, use a thermometer or similar tool to check if the heat plate reaches the correct temperature and make adjustments if not.

Lubricate joints and moving parts

- Thermal plate joints are friction points where moving parts interact with each other. Over time, a lack of lubrication can lead to wear, hinder movement, and generate unwanted noise. Applying lubricating oil on a regular basis helps reduce friction, prevent corrosion, and ensure smooth and efficient operation of the machine. It is advisable to use a lubricant suitable for mechanical equipment and clean any excess to avoid accumulation of debris.

Protect the hot plate when not in use

- The heating plate is the key part of the griddle, as it distributes heat evenly to ensure effective transfer. If not properly protected, it can be damaged by residue buildup, scratches, or bumps, which would affect the quality of the prints. To avoid this, it is recommended to clean it after each use, avoid contact with sharp or abrasive objects and, when not in use, cover it with a protective material to prevent the accumulation of dust and dirt.

Troubleshooting

Before contacting a Beinsen Service Center (SAT) or authorized service center, try the following solutions. Some situations may not apply to your device.

Most common problems

Nothing happens after you turn on the iron

- Check the condition of the plug. Make sure it doesn't connect well and isn't faulty.
- Check the status of the power button and touchscreen.
- Check the fuse. Make sure it is damaged or burned.
- If nothing appears on the screen but the power light is working, check the transformer's wire 5. If it has been loosened the problem is connection, otherwise it is possible that the transformer is defective.

The screen is working properly, but the heating plate is cold

- Check the connection of the thermal probe. In case of being incorrectly connected or loose, the screen will show "255" and the iron will beep continuously.
- Check if the solid-state relay light is on. Otherwise, check the status of the relay and the touchscreen.
- If you have replaced the relay but the heating plate still does not heat up, check the condition of the hob and the power cord.

The heating plate is working properly but the display shows "255°C"

- Check the connection of the thermal probe.
- If the connection of the thermal probe is correct, it is possible that the fault is caused by the probe.

The heating plate works between 0 and 180°C, but the digits on the screen jump above 200 or 300° suddenly or vary irregularly

- Check the connection of the thermal probe.
- If the thermal probe and probe connection are working properly, the digital controller (IC) program may be damaged and needs to be replaced.

Temperature out of control. It is set at 180° but the actual temperature is

above 200°C

- Check the solid-state relay. It may be broken down and needs to be replaced.
- The digital controller may be faulty and is still supplying electricity to the relay, in which case it needs to be replaced.

Time and temperature settings work abnormally after changing the hotplate

- Reconfigure the time and temperature settings according to the instructions in this manual

The color transferred to the garment is too pale

- Check the temperature of the iron, it may be too low.
- Check the pressure, the pressure may be insufficient or the ironing time may be too short.

The transferred color is too brown or the transfer paper ends up burnt

- Check the temperature of the iron, it may be excessively high.

The transferred print is blurry

- Check the transfer time. Excessive ironing time can cause ESE or other effects.

The transferred image color or finish is not good enough

- Check the pressure. It may be too low or the ironing time is too short.
- Check the paper used in the transfer. Check the instructions for use provided by the manufacturer or try another paper.

The transfer paper adheres to the garment after transfer

- Check the transfer temperature. It may be too high.
- Check the ink used for printing. Review the instructions for use provided by the printer manufacturer or try different inks

Copyright

Copyright © 2025 Futura Teck de Murcia S.L.U.

This guide is protected by international copyright laws.

You may not reproduce, distribute, translate, or transmit any part of this guide in any way or by any means, whether electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system.

Trademarks

- Beinsen and the Beinsen logo are registered trademarks of Futura Teck de Murcia S.L.U.
- All other trademarks and copyrights are the property of their respective owners.