



MEGARA Control System. User Manual. TEC/MEG/171 1.E - 09/02/2017



Authors:	Isaac Morales Durán
Revised by:	África Castillo Morales Ana Pérez Calpena Armando Gil de Paz Jorge Iglesias Páramo
Approved by:	Armando Gil de Paz Maria Luisa García Vargas





TEC/MEG/171 1.E - 09/02/2017



Distribution List:

Name	Affiliation	Date	
GRANTECAN	GRANTECAN	09/08/2016	
MEGARA Team	All Partners	09/08/2016	





TEC/MEG/171 1.E - 09/02/2017



Acronyms:

CB Configuration Block

CBS Configuration Block Set

DDS Disjoint Disperse Subsets

EA Exclusion Area

FMPT Fiber MOS Positioning Tool

FMAT Fiber MOS Assignment Tool

FMOSA Fiber MOS Assignment file

GFCCS GTC Folded-Cassegrain Coordinate System

MCS MEGARA Control System

PPA Pair of Positions Angles

PP Positioning Program

DP Depositioning Program

SP Sky Point

SPM Security Perimetral Margin

S/W Software

TBD To Be Defined






TEC/MEG/171 1.E - 09/02/2017



Change Control

Issue	Date	Section	Page	Change description
1.A	26/01/15	All	All	New Issue
		3	9	Description on how to get the help of the tool changed.
		4	9	Description of the input file for the FMPT rewritten.
1.B	23/06/15	5	11	Description of the output files from the FMPT rewritten.
		6	14	Description of the new functionalities of the FMPT rewritten.
		-	7-8	Index updated.
		All	All	Corrected use of abbreviation S/W.
		1	9	Implemented functionality for generate parking program.
		All	All	Version number updated to 3.0.7.
		2	10	Execute 'ldconfig' at the end of installation.
		2	10	Installation tested in Ubuntu 14.04.4
		2	10	Application functioning in Solaris 10.
		3	10	Output command help updated.
		4	11-12	Corrected description of format file FMOSA.
		5	13	Modified example of FMOSA file.
		5.1	13	Modified description of content of log file.
1.C	21/02/16	5.2	13	PP and DP are stored in a single file jointly the content of FMOSA input file.
		5.2	14-15	Modified description of format of the output file.
		5.3	15	Modified description of file 'outputs-from- <inputfile>'.</inputfile>
		6.1	16	Generating a pair (PP, DP) is generated a file called 'PPDPandFMOSA-from- <inputfile>'.</inputfile>
		6.2	16-17	Motion program for recovery now is called parking program instead depositioning program.
				Furthermore has been described the syntax of the
				function for generate pairs (PP, DP).
		6.3	17	Described the syntax of the function for generate
		0.5	1	parking programs.
				parking programs.

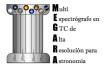




TEC/MEG/171 1.E - 09/02/2017



		All	All	Strings changed:					
		AII	All	" <inputfile>" → "<inputfilename>"</inputfilename></inputfile>					
				" <inputfile>.log" → "fmpt_saa.log"</inputfile>					
				"PPDPandFMOSA" → "outputs"					
				•					
				"outputs" →"other_outputs"					
				"FMOSA file" → "file type FMOSA"					
				"3.0.6" → "3.3.4"					
		2	10.11	"3.0.7" → "3.3.4"					
		3	10-11	Updated output of command \$ fmpt_saa help					
		4	11	Added phrase:					
				"These parameters are ignored by the FMPT."					
		5.1	13-14	Updated content of log file 'fmpt_saa.log'.					
		5.3	17	Updated content of file 'other_outputstxt'.					
1.D	09/08/16	6.1	18	Changed strings:					
1.2				generatePPDP → generatePairPPDP_offline					
				<path> → <path_fmosa></path_fmosa></path>					
				Replaced figure due to error:					
		7.1.2	20	Figure 1 (error in labels P0 and P1).					
		7.1.3	21	Figure 2 (error in label P3).					
				Updated content of files of the FMM instance:					
		7.6	23	Instance.txt					
		7.7	24	ExclusionArea <id>/Contourtxt</id>					
		7.8	24	ExclusionArea <id>/Instance.txt</id>					
		7.9	24	RoboticPositioner <id>/Contourtxt</id>					
		7.10	24	RoboticPositioner <id>/Contourtxt</id>					
		7.11	24	RoboticPositioner <id>/F1.txt</id>					
		7.12	25	RoboticPositioner <id>/F2.txt</id>					
		7.13	25	RoboticPositioner <id>/Instance.txt</id>					
		7.11 26		D 1 C 1F1 C CD1 10400 C 202					
	09/08/17	7.13	27	Redefined F1 for SB1 = 194086.302.					
1.E				Removed SB1 and SB2 from 'Instance.txt'.					
		All	All	String changed: "S2" \rightarrow "S0".					
				String changed: "3.3.0" \rightarrow "3.3.4".					

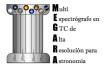



MEGARA Control System. User Manual. TEC/MEG/171 1.E - 09/02/2017



Reference Documents


Nº	Document Name	Code
R.1	MEGARA CS. Fiber MOS Assignment Tool (FMAT). User Manual	TEC/MEG/174
R.2	FMPT/FMAT tools compatibility report.	TEC/MEG/184

Reference Documents (GTC codes)

Nº	Document Name	Code
R.1	MEGARA CS. Fiber MOS Assignment Tool (FMAT). User Manual	N/A
R.2	FMPT/FMAT tools compatibility report.	N/A





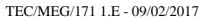



INDEX

1.	INTRODUCTION	10
2.	HOW TO INSTALL THE FMPT	10
3.	GETTING HELP RUNNING THE FMPT SAA	11
4.	INPUTS OF THE FMPT SAA	12
5.	OUTPUTS OF THE FMPT SAA	15
5.1	Log file	15
5.2	File containing the pair (PP, DP)	15
5.3	File containing other output data	17
6.	EXECUTION OF THE FMPT	18
6.1	Generating a pair (PP, DP)	18
6.2	Generating a parking program	19
6.3	Regenerate a pair (PP, DP)	20
7.	APPENDIX: INSTANCE OF THE FIBER MOS MODEL	2 1
7.1	FMPT coordinate systems	21
7.1	1.1 FMPT S0 coordinate system	21
7.	1.2 FMPT S1 coordinate system	22
7.1	1.3 FMPT S2 coordinate system	22
7.1	1.4 FMPT S3 coordinate system	23
7.2	Set of files composing the instance of the Fiber MOS Model	23
7.3	Fiber MOS Model - RP Origins Table (RoboticPositionerOriginsTable.txt)	24
7.4	Fiber MOS Model - EA Origins Table (ExclusionAreaOriginsTable.txt)	2 4
7.5	Fiber MOS Model - RP Map (InstanceMap.txt)	25
7.6	Fiber MOS Model - Instance properties (Instance.txt)	25
7.7	EA - Barrier Contour_ (ExclusionArea <id>/Countourtxt)</id>	25
7.8	EA - Instance properties (ExclusionArea <id>/Instance.txt)</id>	26
7.9	RP - Arm Contour (RoboticPositioner <id>/Contourtxt)</id>	26









7.10	RP - Barrier Contour_(RoboticPositioner <id>/Contourtxt)</id>	26
7.11	RP – Rotor 1 compression function (RoboticPositioner <id>/F1.txt)</id>	26
7.12	RP – Rotor 2 compression function (RoboticPositioner <id>/F2.txt)</id>	26
7.13	RP - Instance properties (RoboticPositioner <id>/Instance.txt)</id>	27





TEC/MEG/171 1.E - 09/02/2017



1. INTRODUCTION

This document contains the User Manual of the MEGARA Fiber MOS Positioning Tool (FMPT). The manual allows the user to install the FMPT in his computer and to understand the FMPT functionality.

The S/W to configure the Fiber MOS has been split in two tools: Fiber MOS Assignment Tool (FMAT) [R.1] and Fiber MOS Positioning Tool (FMPT). The FMAT allows the user to prepare a Configuration Block Set (CBS) composed by several Configuration Blocks for the MEGARA MOS mode by assisting the user in the assignment of their sources to the different in-use robotic positioners of the MEGARA MOS (up to 92 positioners). Each file containing the information of a particular Configuration Block will be the input for the Fiber MOS Positioning Tool. This tool computes the sequence of movements that will be commanded before starting the exposure for reaching the source positions (positioning program, PP) as well as the sequence of movements that will be commanded after the exposure is finished for coming back to the parking position (depositioning program, DP). The Fiber MOS Positioning Tool also allows to compute a depositioning program to come back from an anomalous situation (during the observation) receiving, in this case, as input the current positions of the robotic positioners that are not at the parking position.

This manual describes only the installation and use of the FMPT, which is composed by the FMPT library, containing all necessary functionalities, and the application FMPT SAA, which uses the dynamic library 'libfmpt.so'. The functionalities of the FMPT will be the following:

- 1. The GRANTECAN staff will use the FMPT as a standalone tool to generate pairs (PP, DP) for the Configuration Blocks of a CBS generated and previously validated by the FMAT. The FMPT also includes the validation of the source assignments to ensure there is no risk of collisions between the RPs.
- 2. MEGARA Control System (MCS) will make use of some FMPT functionalities to:
 - Generate a depositioning program to come back from an anomalous situation (during the observation) knowing the disabled RPs and the positions of all RPs.
 - Regenerate the pair (PP, DP) from the information about the positions of the disabled RPs. The rest of the RPs are in parking positions after executing the depositioning program previously computed.

2. HOW TO INSTALL THE FMPT

The process to install this S/W can be found in the file INSTALL. The process is summarized below:

- 1. Decompress tar file 'megara-fmpt-3.3.4.tar.gz' (or .xz).
- 2. Change to directory './megara-fmpt-3.3.4'.
- 3. Execute './configure; make;' to configure and build this package.





TEC/MEG/171 1.E - 09/02/2017



- 4. Grant superuser privileges to have access to '/usr/local/...'.
- 5. Execute 'make install' (as superuser) to install the library and the application.
- 6. Execute 'Idconfig' (as superuser) to update the linkage with the libraries in case of Linux systems.

Both dynamic and static libraries will be installed in the usual directories of the operative system, according to the user distribution and version.

As an example, in Ubuntu 14.04.4 and Fedora 20:

- Static and dynamic libraries will be installed in '/usr/local/lib';
- The executable file fmpt_saa will be installed in '/usr/local/bin';
- The instance of the Fiber MOS Model will be installed in:

'/usr/local/share/megara-fmpt/Models/MEGARA_FiberMOSModel_Instance';

- The sample input files will be installed in: 'usr/local/bin/share/megara-fmpt/Samples'.

These paths can vary depending on the operating system and distribution where this package is installed. In this document the mentioned paths assume that the installation has been done in Ubuntu 14.04.4.

The current version of the FMPT allows installation in Linux systems and Solaris 10 systems.

3. GETTING HELP RUNNING THE FMPT SAA

The user can obtain help about the arguments of the FMPT SAA by typing:

```
$ fmpt_saa help
```

And the terminal shows:

```
user@lenovo-W520:~$ fmpt_saa help
FMPT SAA 3.3.4 is running...
Arguments with has called the program:
    arqv[0]: fmpt_saa
    argv[1]: help
The FMM instance will be searched in:
    '/usr/local/share/megara-fmpt/Models/MEGARA_FiberMOSModel_Instance'
    '/home/user/../data/Models/MEGARA_FiberMOSModel_Instance'
$ fmpt_saa help
    Print this help.
$ fmpt_saa generatePairPPDP_offline <path_FMOSA>
    <path_FMOSA>: absolute or relative path to file type FMOSA.
    Generate a pair (PP, DP) offline.
    In the file type FMOSA:
        The following parameters could be empty: Name, Mag, Pr, Bid and
Comment.
```





TEC/MEG/171 1.E - 09/02/2017



Parameter Bid indicates if the source is allocated or no. Parameter Enabled indicates if the RP is enabled or no. When Bid is empty:

parameters Name, Mag, Pr and Comment will be empty;

parameter Type will be UNKNOWN.

\$ fmpt_saa aboutOf
 Print the legend about of...

4. INPUTS OF THE FMPT SAA

In the following sections we describe in detail the input and output files of the FMPT SAA. In the Appendix of this document, the files that constitute the instance of the Fiber MOS Model, which is the major defining parameter for the program, are described.

For each Configuration Block the user needs to execute the FMPT to generate the positioning and depositioning programs (PP and DP). The input file for the FMPT is the Fiber MOS Assignment file (FMOSA), which should be loaded by the astronomer during the Phase-2. This input file is comprised by different sections: the header, the configuration block (CB) and the source list.

The header contains the following information:

- Version of the FMAT used
- Generation date
- A list of errors, if any¹

The file starts with a comment row (ignored by the S/W) with the column description of the CB:

```
# Id | Ra | Dec | Pos
```

These field names correspond to the Identification number (Id) for the Block, Right Ascension and Declination where the center of the MEGARA MOS FOV (which coincides with the FC optical axis) is pointing along the FC rotator Position Angle (between 0° and 360°). All the angles are in degrees with six decimal positions. These parameters are ignored by the FMPT.

A row indicating that the information about the configuration block starts:

@@SOB@@

A line representing a CB, for example:

0 | 15.01564 | 45.004671 | 0.050512

A row indicating that the information about the CB ends:

@@EOB@@

¹ Errors could only be present if the property megara.fmat.strict is set to false in FMAT. The FMPT has is own validation routine to avoid sequences of movements where RPs could collide.



12

TEC/MEG/171 1.E - 09/02/2017



A comment row (ignored by the S/W) with the brief indication of the meaning of the different columns for each source included in this input file:

Name Ra Dec Mag Type Pr Bid Pid X(mm) Y(mm) Enabled Comment

These correspond to the Source Name, Right Ascension and Declination of the source, Magnitude, Type of source, Priority, Block Id, Positioner Id, X, Y position of the positioner and whether the positioner is enabled/disabled and a Comment field. All the angles are in degrees with six decimal positions.

A row indicating that the list of sources starts.

@@SOS@@

A number of lines, each one representing a source, for example:

```
s:116|15.011244|45.022607|15.04|SOURCE|1|0|1|-9.171006|53.226932|1|foo comment
s:596|14.986557|45.032844|18.66|SOURCE|0|0|2|-60.909235|83.658767|1|foo comment
...
```

Note that both sources are assigned to the block 0 to positioners 1 and 2 and with priority 1 and 0 respectively.

A row indicating that the list of sources ends.

@@EOS@@

For each source, in each row, we can find 12 fields separated by vertical bars corresponding to parameters of a given Sky Point (SP). The fields are the following ones:

- **Name**: Name of the source (catalog name, e.g. Mk348, NGC4151, etc.). Can be empty for unallocated sources.
- 2 Ra: Right Ascension in J2000.0. The format is degrees with six decimal positions.
- 3 Dec: Declination in J2000.0. The format is degrees with six decimal positions.
- **4 Mag:** Magnitude. In this release this field interprets that magnitudes are all in the same band and photometrical system. Can be empty for unallocated sources.
- 5 Type: There are 4 types of SPs in the input preselected-sky-point list for the FMAT:
 - **SOURCE**: target of scientific interest. It could be allocated or not to a RP.
 - REFERENCE: target to be used as reference. It could have scientific interest or not. Reference-source SP corresponds to a source (star) that can be used to validate the correct position of the telescope and PA. It is generally recommended that every observation (at least for long exposures) contains, at the very least, three referencesource SPs.
 - **BLANK**: sky background source. A blank SP is a point in a blank-sky region of the field. It is generally recommended one blank SP at least in every observation with





TEC/MEG/171 1.E - 09/02/2017



the Fiber MOS. The blank SP observation will be used in the DFP/DRP and quick-look tools for sky subtraction.

- **UNKNOWN**: unknown type point (type has not been previously identified). This is the type for unallocated sources.
- **6 Pr:** level of priority assigned to each source. The highest priority is "0" and the lowest priority is "10". Can be empty for unallocated sources.
- 7 Bid: Block Id. Will be empty for unallocated sources.
- **8 Pid:** Positioner Id. Can be empty for unallocated sources.
- **9 X** (**mm**): Positioner x co-ordinate (mm with six decimals) in the Fiber MOS co-ordinate system.
- **10 Y (mm):** Positioner y co-ordinate (mm with six decimals) in the Fiber MOS co-ordinate system.
- **11 Enabled:** Boolean field to indicate if the RP identified by the Pid is enabled (1 value) or disabled (0 value).
- 12 Comment: Field for comment.

The FMPT reads from this input file the values of the properties (Pid, X, Y) for each assigned RP and also the Priority and Enabled columns information. These properties represent a Projection Point allocated to the RP whose identifier matches with this particular Id.

Example of an input file for the FMPT ('megara-cb0.txt')

# MEGARA file		(RC)55 Sa									
	th FMAT version										
	ration 2016-08-		LZ								
# Id Ra	Dec	Pos									
@@SOB@@											
	004671 0.050512										
@@E0B@@	E 200	NUT 128999 N	25000000	USE STATE OF THE S	1122-2009	The state of	NEWS	100000-0-000	concernous o		Carrier Consults
# Name	RA	Dec	Mag	Type	Pr	Bid	Pid	X(mm)	Y(mm)	Enabled	Comment
e@SOS@@	27/20/20/20/20	ANSE BEREIRE	22/27	200022	173	7.28	1993	WESTERSON I		2 V2V2	
::116		1 45.022607			1	10	11		53.21067		comment
: 42		7 45.037341			11	10	12	-62.895037			comment
s:29		3 45.033204			11	10	13	18.959065			comment
::167		3 45.036974			12	10	14	-38.502874			comment
5:404		1 45.031383			12	10	15	35.728240			comment
5:10		9 45.032244			10	10	16	-17.708576			comment
::596		7 45.032844			10	10	17	61.056647			comment
:690		2 45.029885			10	10	18	-90.465325	74.91682		comment
5:731	15.013883	3 45.025076	22.21	SOURCE	4	0	19	3.737590	60.54033		comment
5:887	15.044459	45.028717	19.32	SOURCE	12	10	110	-60.372543	71.41360	3 1 foo	comment
s:71	15.004937	7 45.027538	19.54	SOURCE	11	10	111	22.504280	67.83180	2 1 foo	comment
s:230	15.038350	145.029637	18.69	SOURCE	10	10	112	-47.559025	74.12729	9 1 foo	comment
5:46	14.988834	4 45.026621	16.52	SOURCE	12	10	113	56.270263	65.08857	7 1 foo	comment
5:831	15.028999	45.027878	19.48	SOURCE	10	10	114	-27.955338	68.88604	4 1 foo	comment
s:501	14.985807	7 45.030438	15.73	SOURCE	15	10	115	62.625694	76.41065	6 1 foo	comment
s:351	15.019969	45.025540	20.89	SOURCE	17	10	116	1-9.024050	61.93015	7 1 foo	comment
:410	14.973102	2 45.025481	16.49	SOURCE	10	0	117	89.261751	61.69078	6 1 foo	comment
:379	15.051764	1 45.024509	16.88	SOURCE	10	10	118	-75.707427	58.94642	6 1 foo	comment
::293	15.007967	7 45.019343	19.44	SOURCE	12	10	119	16.130859	43.52181	6 1 foo	comment
5:673	15.042800	145.019438	17.98	SOURCE	10	10	120	-56.927065	43.87593	6 1 foo	comment
:174		45.020379			18	10	21	38.137010	46.57975	3 1 foo	comment
: 47	15.033046	45.023812	18.47	SOURCE	12	10	122	-36.441564	56.82956	2 1 foo	comment
s:335		45.020245			10	0	123	61.194588			comment
s:920	15.024104	45.019913	17.48	SOURCE	10	0	124	-17.712086	45.24135	9 1 foo	comment
s:17		3 45.019541			11	0	125	73.575619	44.07306	2 1 foo	comment
5:204		45.015639			14	10	126	-82.201769	32.63611	9 1 foo	comment
s:299		45.016653			11	10	127	21.560906			comment
s:329		2 45.014441			12	10	128	-77.399522			comment







5. OUTPUTS OF THE FMPT SAA

After generating a pair (PP, DP) the output files from the FMPT, located at the working directory, would be the following:

5.1 Log file

This file, named fmpt_saa.log, contains the same output written in the terminal when the application is executed:

```
user@lenovo-W520:~$ fmpt_saa generatePairPPDP_offline /usr/local/share/megara-
fmpt/Samples/megara-cb0.txt
FMPT SAA 3.3.4 is running...
Arguments with has called the program:
    argv[0]: fmpt_saa
    argv[1]: generatePairPPDP_offline
    argv[2]: /usr/local/share/megara-fmpt/Samples/megara-cb0.txt
Loading FMM instance from:
                               '/usr/local/share/megara-
fmpt/Models/MEGARA_FiberMOSModel_Instance'
    '/home/user/../data/Models/MEGARA_FiberMOSModel_Instance'
Fiber MOS Model instance loaded from '/usr/local/share/megara-
fmpt/Models/MEGARA_FiberMOSModel_Instance'.
FMOSA table loaded from '/usr/local/share/megara-fmpt/Samples/megara-cb0.txt'.
Allocations got from the FMOSA table in MPG.
RPs moved to observing positions.
Generating pair (PP, DP)...
Generated pair (PP, DP) is valid.
Pair (PP, DP) saved in './outputs-from-megara-cb0.txt'.
Other outputs saved in './other_outputs-from-megara-cb0.txt'.
```

5.2 File containing the pair (PP, DP)

This file, named outputs-from-<inputfilename>, contains three blocks of data (the positioning program (PP), the depositioning program (DP) and by the end of the file the same content of the input FMOSA file). In this way all the information about the motion sequences (PP and DP) together with the input source assignments are located in only one file for each Configuration Block.

Each motion program is composed by a list of groups, where each group is a list of sentences representing each an instruction to be sent to the controller of a RP rotor, before starting a jointly movement.

The general description of this file is the following:





TEC/MEG/171 1.E - 09/02/2017



```
# Positioning program
@@SPP@@
pos_<cb_string_id> {
        group_01 {
        rp01 r1 <p_1>
        rp01 r2 <p___3>
        rp17 r1 <p_1>
        rp17 r2 <p___3>
        . . .
        }
        group_02 {
        rp03 r1 <p_1>
        rp03 r2 <p___3>
        rp22 r1 <p_1>
        rp22 r2 <p___3>
        . . .
        }
}
@@EPP@
# Depositioning program
@@SDP@@
depos_<cb_string_id> {
        group_01 {
        rp01 r1 <p_1>
        rp01 r2 <p___3>
        rp17 r1 <p_1>
        rp17 r2 <p___3>
        }
        group_02 {
        rp03 r1 <p_1>
        rp03 r2 <p__3>
        rp22 r1 <p_1>
        rp22 r2 <p___3>
        }
        . . .
}
@@EPP@
# Id| Ra| Dec| Pos
@@SOB@@
0 | 15.027879 | 45.000422 | 0.060858
@@EOB@@
                                                 Pr Bid Pid X(mm) Y(mm)
# Name
           RA
                     Dec
                               Mag
                                    Type
                                                                               Enabled Comment
@@SOS@@
s:751
          |15.027787|45.017925|20.67|SOURCE
                                                |6 |0 |1 |-0.137909 |51.932865 |1|foo comment
          15.003376 45.028110 21.74 SOURCE
                                                |0 |0 |2 |-51.296480|82.217116 |1|foo comment
s:404
          |15.066176|45.029778|
                                    UNKNOWN
                                                | | |97 |80.400000 |87.035553 |1|
@@EOS@@
```

Where the <cb_string_id> is the identifier of the CB for which a motion program (the PP or the DP) has been computed.

Each motion sentence must be written in two lines (corresponding to the two rotors of a RP), and has the following format:



TEC/MEG/171 1.E - 09/02/2017



where:

- <Id> represents the Id of the RP, completed with zeros on the left to get the length of two figures.
- <p_1>: is the position (in steps) where the rotor 1 of the RP is going to be moved.
- <p___3>: is the position (in steps) where the rotor 2 of the RP is going to be moved.

We note that $(<p_1>, <p_3>)$ are the positions where the rotors shall be moved.

Therefore, in the case of computing a depositioning program, the final instructions for each rotor of each RP will be:

```
rpid r1 0 rpid r2 0
```

In the case of a positioning program, the final instructions for each rotor of each RP are not necessarily (0, 0) since the final positions must be the ones corresponding to the coordinates of the corresponding source.

5.3 File containing other output data

This file, named other_outputs-from-<inputfilename>, is intended to contain simple data generated by the application.

Example: 'other_outputs-from-megara-cb0.txt'

```
DPvalid: True


PPvalid: True

Collided: {34, 44, 46, 55, 57, 67, 75}

Obstructed: {}
```

Where:

- "PPvalid": indicates if the positioning program has been successfully generated or conversely the (PP, DP) could not be obtained.
- "DPvalid": indicates if the depositioning program has been successfully generated or conversely the (PP, DP) could not be obtained.
- "Collided": Two RPs are considered as "collided" when the minimum distance between them is lower than the sum of the Security Perimetral Margins (SPMs) of the individual RPs (see Appendix). In the case that all RPs are enabled there will be no collided RPs and this field will contain an empty list. But in the case that some RPs are blocked in insecurity positions there could be some collided RPs and this field will contain the list of those RPs.
- "Obstructed": A RP is obstructed when there is one or more adjacent disabled RPs blocked in insecurity positions that prevent the retraction of this RP to a security position. In the case that all the RPs are enabled there will be no obstructed RPs and this

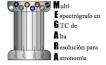



TEC/MEG/171 1.E - 09/02/2017



field will contain an empty list. But in the case that some RPs are blocked in insecurity positions there could be some obstructed RPs and this field will contain the list of those RPs.

6. EXECUTION OF THE FMPT

6.1 Generating a pair (PP, DP)

The GRANTECAN staff will make use the FMPT as a stand-alone tool to generate pairs (PP, DP) for the Configuration Blocks of a CBS generated, and previously validated by the FMAT. Although the compatibility of both tools, FMPT and FMAT has been checked in [R.2], the FMPT also includes a validation to ensure there is no risk of collisions between the RPs. When the FMPT detects RPs with risk of collision it computes the positioning and depositioning programs without considering those RPs.

The syntax for the PP and DP generation is as follows:

Setting parameters:

A directory containing the Fiber MOS Model Instance in the path: /usr/local/share/megara-fmpt/Models.

This parameter file is loaded by default from 'MEGARA_FiberMOSModel_Instance'.

Inputs:

File <path_FMOSA>² contains a table with the projection points and their allocations to RPs.

The following output files will be saved in the same directory where the program is executed: fmpt_saa.log, outputs-from-<filename>, other_outputs-from-<filename>, where <filename> is the name of the input file FMOSA located in <path_FMOSA>.

² This file is the output of the FMAT whose name is 'megara-cb0.txt' or similar (cb1, cb2, etc.).



18

TEC/MEG/171 1.E - 09/02/2017



6.2 Generating a parking program

This functionality will be used by MCS when an anomalous situation has occurred during the execution of the observation with the Fiber MOS and one or more RPs have been disabled, or simply they have been stopped in intermediate positions of their trajectories, while the pair (PP, DP) was being executed.

When the aforementioned situation happens, the MCS will call the FMPT to compute a parking program to move the RPs to their original positions (parking positions). The FMPT would need as input the list of the disabled RPs and the list of the current positions of all the RPs to compute the parking program. This information will be provided by MCS as arguments when this function is called. The syntax to execute this functionality in MCS is the following:

```
bool generateParkingProgram_online(TMotionProgram& ParkingProgram,
    TFiberMOSModel& FMM,
    const vector<double>& p_1s, const vector<double>& p__3s,
    const vector<int>& Ids);
```

Where:

- ParkingProgram: is the parking program to be generated.
- FMM: is the Fiber MOS Model.
- (p_1s, p__3s): are the starting positions (in steps), of all RPs in the FMM.
- Ids: is the list of identifiers of the RPs to be disabled.

This function is internally documented in the file 'MotionProgramGenerator.h' (provided with the release 3.3.4 of the FMPT).

You can find an example to use this function in the file:

'megara-fmpt-3.3.4/data/Manuals/main example generateParkingProgram online.cpp'



TEC/MEG/171 1.E - 09/02/2017



6.3 Regenerate a pair (PP, DP)

When the pair (PP, DP) of a particular CB is going to be executed by MCS, a malfunction or anomaly related with the rotors of the RPs could happen. This could be the case before or during the execution of the RP movement programs.

It is recommendable to execute the FMPT (to compute positioning and depositioning programs) just before the corresponding observing run. This is to avoid situations where there are sources assigned to RPs which are temporarily non-available and were considered as available at the moment of creating the PP and DP programs.

It could be the case that during the execution of a movement program, a RP fails and some of the rest of RPs are out of their parking positions. In this situation, the failed RP is disabled and MCS will recover the original positions of the non-failed RPs using the FMPT functionality to generate a parking program as described in last section.

As the RP that has failed could be disabled in an insecure position the pair PP and DP computed for that configuration block is not valid because its execution could produce collisions. To follow with the observing run, MCS would call the FMPT functionality to regenerate the pair (PP, DP), calling the function whose syntax is briefly described below:

```
bool generatePairPPDP_online(TMotionProgram& PP, TMotionProgram& DP,
    TFiberMOSModel& FMM,
    const vector<double>& p_1s, const vector<double>& p__3s,
    const vector<int>& Ids);
```

Where:

- (PP, DP): the pair to be generated.
- FMM: the Fiber MOS Model.
- (p_1s, p__3s): are the initial positions in steps, of all RPs in the FMM.
- Ids: is the list of identifiers of the RPs to be disabled.

This function is similar to the function to generate the original pair, but including the parameters (p_1s, p__3s) and Ids.

This function is internally documented in the file 'MotionProgramGenerator.h' (provided with the release 3.3.4 of the FMPT).

You can find an example to use this function in the file:

'megara-fmpt-3.3.4/data/Manuals/main_example_generatePairPPDP_online.cpp'







7. APPENDIX: INSTANCE OF THE FIBER MOS MODEL

7.1 FMPT coordinate systems

The Fiber MOS Positioning Tool (FMPT) uses internally four different coordinate systems, which are described in the following subsections.

7.1.1 FMPT S0 coordinate system

The FMPT S0 coordinate system coincides with the Fiber MOS focal frame coordinate system.

The Fiber MOS focal frame coordinate system is defined as follows:

- The origin is in the center of the frame.
- The Z-axis runs in direction of the Z-axis of the GFCCS against the incoming light.
- The Y-axis runs in direction of the Y-axis of the GFCCS, positive sense of Y-axis going away from the base plate.
- The X-axis forms a right handed system with the two previous.

The Fiber MOS focal frame shall be used to define the position of the each positioner and, therefore, locate the origin of each individual Fiber MOS positioner coordinate system.

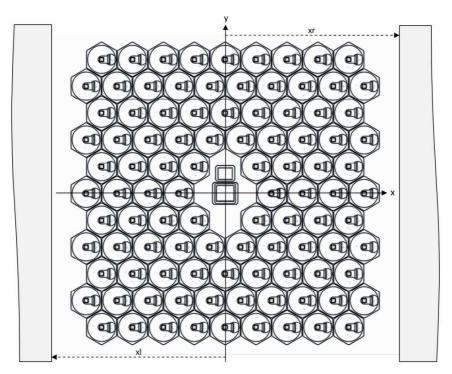


Figure 1: FMPT S0 coordinate system.







7.1.2 FMPT S1 coordinate system

The FMPT S1 coordinate system is defined as follows:

- This is dextrorotatory.
- The origin of the system is at the center of rotation 1.
- The x-axis is oriented passing through rotation 1 and rotation 2 centers.

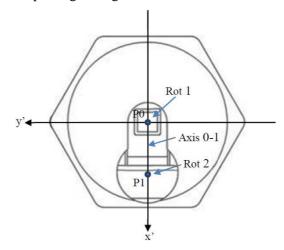


Figure 2: FMPT S1 coordinate system

7.1.3 FMPT S2 coordinate system

The FMPT S2 coordinate system is defined as follows:

- This is dextrorotatory.
- The origin of the system is at the center of rotation 2.
- The x-axis is orientated in such way that it works as symmetrical axis to the arm's contour.

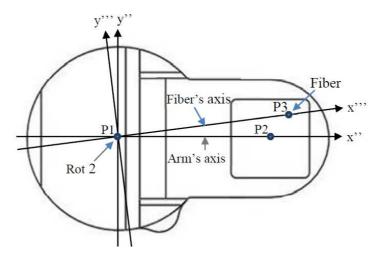


Figure 3: FMPT S2 and S3 coordinate systems





TEC/MEG/171 1.E - 09/02/2017



7.1.4 FMPT S3 coordinate system

The FMPT S3 coordinate system is defined as follows:

- This is dextrorotatory.
- The origin of the system is at the center of rotation 2.
- The x-axis is orientated in such way that passes through rotation 1 and the center of the fiber minibundle.

7.2 Set of files composing the instance of the Fiber MOS Model

The instance of the Fiber MOS Model is composed by a directory containing the following sets of data:

- **RP Origins Table**: containing a table to indicate the position and orientation of each RP in the Fiber MOS Model, containing the following fields: (Id, x0, y0, thetaS1).
- **EA Origins Table**: containing a table to indicate the position and orientation of each exclusion area (EA) in the Fiber MOS Model, containing the following fields: (Id, x0, y0, thetaS1).
- **RP Map**: containing a matrix to transform each point (x, y) given in Cartesian coordinates in S0, in a list of identifiers of RPs {Id} in whose observing domain could be the point (x, y).
- **Fiber MOS Additional Properties**: containing the additional properties of the Fiber MOS Model instance.
- A subdirectory for each RP containing the following text files:
 - o **RP Arm Contour**: containing a list of segments and arcs to describe the template of the contour of the RP Arm, in S4 (in mm).
 - o **RP Frontier Contour_**: containing a list of segments and arcs to describe the template of the contour of the RP Frontier, in S1 (in mm).
 - RP F1: containing the compression function of the quantifier of rot 1 of the RP (in step/rad). Shall be defined in a domain that contains rot 1 domain [theta_1min, theta_1max].
 - RP F2: containing the compression function of the quantifier of rot 2 of the RP in (step/rad). Shall be defined in a domain that contains rot 2 domain [theta___3min, theta___3max].
 - RP Additional Properties: containing the additional properties of the RP Model instance. WARNING: this file must be updated by the GRANTECAN staff each time a RP is disabled in the real Fiber MOS. In case a RP is disabled the status property should be Disabled = True for the corresponding robotic positioner.





TEC/MEG/171 1.E - 09/02/2017



- A subdirectory for each EA containing the following text files:

- o **EA Barrier Contour_**: containing a list of segments and arcs to describe the template of the contour of the EA Barrier, in S1 (in mm).
- EA Additional Properties: containing the additional properties of the EA
 Model instance.

Each set of these sets of data is stored in a file. These files are stored in the directory of the instance and are root proprietary, because the user usually shall not modify the instance.

The names of these files and the default values of the data are shown below, with comments added to facilitate understanding.

7.3 Fiber MOS Model - RP Origins Table (RoboticPositionerOriginsTable.txt)

```
#A table to indicate the position and orientation of each RP (Robotic Positioner):
     Id: identifier of the RP (a nonnegative integer number)
#
     x0: abscissa of the point P0 of the RP in S0 (in mm)
#
     y0: ordinate of the point P0 of the RP in S0 (in mm)
#
#
     thetaO1: orientation of S1 in S0 (in rad)
Td
       x0
              y0
                             theta01
       -60.3
2
              87.035553
4
              87.035553
                             0
       -40.2
91
       60.3
              -87.035553
```

7.4 Fiber MOS Model - EA Origins Table (ExclusionAreaOriginsTable.txt)

```
#A table to indicate the position and orientation of each EA (Exclusion Area):

# Id: identifier of the EA (a nonnegative integer number)

# x0: abscissa of the point P0 of the EA in S0 (in mm)

# y0: ordinate of the point P0 of the EA in S0 (in mm)

# thetaO1: orientation of S1 in S0 (in rad)

Id x0 y0 thetaO1

1 0 0 0
```







7.5 Fiber MOS Model - RP Map (InstanceMap.txt)

```
\#A matrix to transform each point (x, y) given in Cartesian coordinates in S0,
#in a list of identifiers of RPs {Id} in whose observing domain could be the point
(x, y):
                               # lower limit in x-axis of the matrix of cells (in mm)
xmin = -102.055
xmax = 102.055
                               # upper limit in x-axis of the matrix of cells (in mm)
                               # lower limit in y-axis of the matrix of cells (in mm)
ymin = -98.640553
ymax = 98.640553
                               # upper limit in y-axis of the matrix of cells (in mm)
I = 49
                               # number of rows of the cell matrix
J = 50
                               # number of columns of the cell matrix
#Cells[i][j]: list of RPs whose observing domain is in the square cell (i, j)
Cells[0][0] = {}
Cells[0][1] = {}
Cells[1][0] = {}
Cells[1][1] = {}
Cells[50][49] = {}
Cells[50][50] = {}
```

7.6 Fiber MOS Model - Instance properties (Instance.txt)

```
#Instance properties of the FMM (Fiber MOS Model):

Tolerances:  # Tolerances of the Fiber MOS:

PAem = 0  # orientation error margin of the system S0 (in rad)

Pem = 0  # pointing error margin of the system S0 (in mm)
```

7.7 EA - Barrier Contour_ (ExclusionArea<Id>/Countour_.txt)

```
#A list of segments (Pa, Pb) and arcs (Pa, Pb, Pc, R) to describe
#the template of EA.Barrier.Contour_, in S1 (in mm):
(\{-9, -9.95\}, \{-14.2, -4.75\}, \{-9, -4.75\}, 5.2)
(\{-14.2, -4.75\}, \{-14.2, 6.721909\})
(\{-14.2, 6.721909\}, \{-13.0999999516436, 8.62716491624432\}, \{-12, 6.721909\}, 2.2)
(\{-13.0999999516436,\ 8.62716491624432\},\ \{-10.6000001182939,\ 10.070541204891\})
(\{-9.7, 11.629387\}, \{-10.6000001182939, 10.070541204891\}, \{-11.5, 11.629387\}, 1.8)
({-9.7, 11.629387}, {-9.7, 21.2})
({-9.7, 21.2}, {-7.5, 23.4}, {-7.5, 21.2}, 2.2)
(\{-7.5, 23.4\}, \{7.5, 23.4\})
({7.5, 23.4}, {9.7, 21.2}, {7.5, 21.2}, 2.2)
({9.7, 21.2}, {9.7, 11.629387})
(\{10.6000001182939, 10.070541204891\}, \{9.7, 11.629387\}, \{11.5, 11.629387\}, 1.8)
(\{10.6000001182939,\ 10.070541204891\},\ \{13.0999999516436,\ 8.62716491624432\})
({13.0999999516436, 8.62716491624432}, {14.2, 6.721909}, {12, 6.721909}, 2.2)
({14.2, 6.721909}, {14.2, -4.75})
({14.2, -4.75}, {9, -9.95}, {9, -4.75}, 5.2)
({9, -9.95}, {-9, -9.95})
```







7.8 EA - Instance properties (ExclusionArea<Id>/Instance.txt)

```
#Instance properties of the EA (Exclusion Area):

BarrierInstance: # Instance properties of the EA.Barrier (position and orientation):

P0 = {0, 0}  # position of S1 respect S0 (in mm)

theta01 = 0  # orientation of S1 respect S0 (in rad)

Tolerances: # Tolerance properties of the EA:

E0 = 0.000872665 # error margin in theta_ orientation (in rad)

Ep = 0.017 # error margin in P0 position (in mm)
```

7.9 RP - Arm Contour_____ (RoboticPositioner<Id>/Contour____.txt)

```
#A list of segments (Pa, Pb) and arcs (Pa, Pb, Pc) to describe
#the template of RP.Actuator.Arm.Contour____ in S4 (in mm):

({0.807111, 2.35}, {5.807111, 2.35})

({5.807111, 2.35}, {5.807111, -2.35}, {5.807111, 0}, 2.35)

({5.807111, -2.35}, {0.807111, -2.35})

({0.807111, -2.35}, {0.807111, 2.35})
```

7.10 RP - Barrier Contour_ (RoboticPositioner<Id>/Contour_.txt)

```
#A list of segments (Pa, Pb) and arcs (Pa, Pb, Pc, R) to describe #the template of the RP.Barrier.Contour_, in S1 (in mm):

({13.955, 0}, {-13.955, 0}, {0, 0}, 13.955)

({-13.955, 0}, {13.955, 0}, {0, 0}, 13.955)
```

7.11 RP – Rotor 1 compression function (RoboticPositioner<Id>/F1.txt)

```
#The compression-function of the quantifier of rot 1 of the RP in step/rad.

#Must be defined almost in the rot 1 domain [theta_1min, theta_1max]:

# theta_1: position of rot 1 (in rad)

# p_1: position of rot 1 (in step)

-6.28318530717959 -194086.302
0 0
6.28318530717959 194086.302
12.5663706143592 388172.604
```

7.12 RP – Rotor 2 compression function (RoboticPositioner<Id>/F2.txt)

```
#The compression-function of the quantifier of rot 2 of the RP in step/rad.

#Must be defined in the rot 2 domain [theta___3min, theta___3max]:

# theta___3: position of rot 2 (in rad)

# p___3: position of rot 2 (in step)

-6.28318530717959 -30720
0 0
6.28318530717959 30720
12.5663706143592 61440
```







7.13 RP - Instance properties (RoboticPositioner<Id>/Instance.txt)

```
#Instance properties of the RP (Robotic Positioner):
ActuatorInstance:
                               # Instance properties of the RP.Actuator (sizing, orientation and others):
   L01 = 5.8025
                                   # distance between P0 and P1 (in mm)
    theta_1min = -0.043633231
                                   # position angle lower limit of the axis 0-1 respect S1 (in rad)
                                   # position angle upper limit of the axis 0-1 respect S1 (in rad)
   theta_1max = 6.326818538
   theta_1 = 0
                                   # position angle of axis 0-1 respect S1 (in rad)
    theta 03o = 3.14159265358979
                                   # orientation of S3 respect S1 when theta_1 = 0 (in rad)
                                   # Instance properties of the RP.Actuator.Arm (sizing, orientation...):
   ArmInstance:
        L12 = 5.8025
                                       # distance between P1 and P2 (in mm)
        L13 = 5.8025
                                       # distance between P1 and P3 (in mm)
                                       # orientation of S3 respect S2 (in rad)
        theta_03 = 0
                                       # radio of representative circle of the microlens (in mm)
        R3 = 0.75
        theta03 = -3.14159265358979
                                       # orientation of S3 respect S0 (in rad)
                                       # position angle lower limit of axis 1-3 respect S3 (in rad)
        theta___3min = -0.043633231
        theta___3max = theta___3 = 0
               3max = 3.185225885
                                       # position angle upper limit of axis 1-3 respect S3 (in rad)
                                       # position angle axis 1-3 respect S3 (in rad)
   SPMmin = 0.005
                          # SPM minimum: is the SPM due to the minimum jump during generation (in mm)
                           # SPM of simulation: is the maximum deviation in the radial trajectory (in mm)
   SPMsim = 0.052
   PAkd = Pre
                           # position angles knowledge degree [Pre | Apr | Unk]
                          # Instance properties of the RP.CMF:
CMFInstance:
   SF1.vmaxabs = 3
                               # absolute maximum velocity of rot 1 when MFT = mftSquare (in step/ms)
   SF2.vmaxabs = 0.945
                               # absolute maximum velocity of rot 2 when MFT = mftSquare (in step/ms)
                          # absolute maximum velocity of rot 1 when MFT = mrtsquare (in step/ms)
   RF1.vmaxabs = 3
                               # absolute maximum velocity of rot 2 when MFT = mftRamp (in step/ms)
   RF2.vmaxabs = 0.945
   RF1.amaxabs = 4294.967295  # absolute maximum acceleration of rot 1 when MFT = mftRamp (in step/ms^2)
   RF2.amaxabs = 4294.967295  # absolute maximum acceleration of rot 2 when MFT = mftRamp (in step/ms^2)
   MFM = Square
                               # motion function type [Square | Ramp]
                               # square synchronous mode [Free, Tmin, MaxTmin]
# ramp synchronous mode [Free | Tmin | MaxTmin | Tv | MaxTv]
   SSM = Free
   RSM = Free
   Id1 = 0
                               # CAN identifier of the rot 1 controller (a nonnegative integer number)
    Id2 = 0
                               # CAN identifier of the rot 2 controller (a nonnegative integer number)
Tolerances:
                       # Tolerances of the RP:
   Eo = 0.000872665
                           # error margin in theta_ orientation (in rad)
    Ep = 0.1
                           # error margin in P0 position (in mm)
   Tstop = 0
                           # margin time from last position stored in memory, to stopping rotors (in ms)
    Tshiff = 1
                           # margin time to shift of all rotors of RPs in Fiber MOS (in ms)
   SPMadd = 0.2
                           # SPM additional: is a component of SPM added once (in mm)
Status:
                       # Qualitative status of the RP:
                           # disabling status [False | True]
   Disabled = False
    FaultProbability = 0
                          # probability of fault status (a real number in [0, 1])
    FaultType = Unk
                           # type of fault [Unk | Sta | Dyn]
```

Note that SPM values depend on (SPMmin, SPMsim, Tshiff, SMPadd) and the value assigned to the SPM is a function of (PAkd, Purpose). The calculus of SPM is a complex process which is described in the file:

'megara-fmpt-3.3.4/data/Manuals/calculus_of_SPM.txt'

