WAGO-I/O-SYSTEM

Fieldbus Independent I/O Modules

2 Al 4-20 mA, Differential Inputs 750-454(/xxx-xxx)



Manual

Version 1.0.3



Copyright © 2006 by WAGO Kontakttechnik GmbH & Co. KG All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27 D-32423 Minden

Phone: +49 (0) 571/8 87 – 0 Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: http://www.wago.com

Technical Support

Phone: +49 (0) 571/8 87 – 5 55 Fax: +49 (0) 571/8 87 – 85 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the correctness and completeness of this documentation. However, as errors can never be fully excluded, we would appreciate any information or ideas at any time.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally trademark or patent protected.



Content

1 In	iportant Comments	4
1.1	Legal Principles	4
1.1.1	Copyright	4
1.1.2		
1.1.3	Intended Use	4
1.2	Symbols	5
1.3	Number Notation	
1.4	Safety Notes	6
1.5	Scope	6
	•	
2 I/0	O Modules	7
2.1	Digital Output Modules	7
2.1.1	750-454(/xxx-xxx) [2 AI 4-20 mA, Differential Inputs]	7
2.1.1.	1 Variations	7
2.1.1.	2 View	7
2.1.1	.3 Description	8
2.1.1	_	
2.1.1	.5 Schematic Diagram	9
2.1.1	.6 Technical Data	10
2.1.1.	.7 Process Image	12
2.1.1.		
2.1.1.	.7.2 Special Data Format	14

1 Important Comments

To ensure fast installation and start-up of the units described in this manual, we strongly recommend that the following information and explanations are carefully read and abided by.

1.1 Legal Principles

1.1.1 Copyright

This manual is copyrighted, together with all figures and illustrations contained therein. Any use of this manual which infringes the copyright provisions stipulated herein, is not permitted. Reproduction, translation and electronic and photo-technical archiving and amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG. Non-observance will entail the right of claims for damages.

WAGO Kontakttechnik GmbH & Co. KG reserves the right to perform modifications allowed by technical progress. In case of grant of a patent or legal protection of utility patents all rights are reserved by WAGO Kontakttechnik GmbH & Co. KG. Products of other manufacturers are always named without referring to patent rights. The existence of such rights can therefore not be ruled out.

1.1.2 Personnel Qualification

The use of the product detailed in this manual is exclusively geared to specialists having qualifications in PLC programming, electrical specialists or persons instructed by electrical specialists who are also familiar with the valid standards. WAGO Kontakttechnik GmbH & Co. KG declines all liability resulting from improper action and damage to WAGO products and third party products due to non-observance of the information contained in this manual.

1.1.3 Intended Use

For each individual application, the components supplied are to work with a dedicated hardware and software configuration. Modifications are only permitted within the framework of the possibilities documented in the manuals. All other changes to the hardware and/or software and the non-conforming use of the components entail the exclusion of liability on part of WAGO Kontakttechnik GmbH & Co. KG.

Please direct any requirements pertaining to a modified and/or new hardware or software configuration directly to WAGO Kontakttechnik GmbH & Co. KG.



1.2 Symbols



Danger

Always abide by this information to protect persons from injury.



Warning

Always abide by this information to prevent damage to the device.



Attention

Marginal conditions must always be observed to ensure smooth operation.



ESD (Electrostatic Discharge)

Warning of damage to the components by electrostatic discharge. Observe the precautionary measure for handling components at risk.



Note

Routines or advice for efficient use of the device and software optimization.



More information

References on additional literature, manuals, data sheets and internet pages.

1.3 Number Notation

Number Code	Example	Note		
Decimal 100 n		normal notation		
Hexadecimal	0x64	C notation		
Binary	'100' '0110.0100'	within inverted commas, nibble separated with dots		



1.4 Safety Notes



Warning

Switch off the system prior to working on bus modules!

In the event of deformed contacts, the module in question is to be replaced, as its functionality can no longer be ensured on a long-term basis.

The components are not resistant against materials having seeping and insulating properties. Belonging to this group of materials is: e.g. aerosols, silicones, triglycerides (found in some hand creams).

If it cannot be ruled out that these materials appear in the component environment, then additional measures are to be taken:

- installation of the components into an appropriate enclosure
- handling of the components only with clean tools and materials.



Attention

Cleaning of soiled contacts may only be done with ethyl alcohol and leather cloths. Thereby, the ESD information is to be regarded.

Do not use any contact spray. The spray may impair the functioning of the contact area.

The WAGO-I/O-SYSTEM 750 and its components are an open system. It must only be assembled in housings, cabinets or in electrical operation rooms. Access must only be given via a key or tool to authorized qualified personnel.

The relevant valid and applicable standards and guidelines concerning the installation of switch boxes are to be observed.



ESD (Electrostatic Discharge)

The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. gold contacts.

1.5 Scope

This manual describes the Analog Input Module 750-454(/xxx-xxx) 2 AI 4-20 mA, Differential Inputs of the modular WAGO-I/O-SYSTEM 750.

Handling, assembly and start-up are described in the manual of the Fieldbus Coupler. Therefore this documentation is valid only in the connection with the appropriate manual.



2 I/O Modules

2.1 Digital Output Modules

2.1.1 750-454(/xxx-xxx) [2 Al 4-20 mA, Differential Inputs]

2-Channel Analog Input Module (4-20mA, differential inputs)

2.1.1.1 Variations

Item-No.	Designation	Description
750-454	2 AI 4-20 mA differential inputs	2-Channel Analog Input Module (4-20mA, differential inputs)
750-454/000-001	2 AI 4-20mA differential inputs, RC low-pass	2-Channel Analog Input Module, 4-20mA, differential inputs with RC low-pass
750-454/000-002	2 AI 4-20mA differential inputs, special data format	2-Channel Analog Input Module, 4-20mA, differential inputs with special data format
750-454/000-200	2 AI 4-20mA differential inputs with Siemens (S5-FB 250)	2-Channel Analog Input Module, 4-20mA, differential inputs, adapted data format for S5-control systems with the use of function block FB 250
750-454/025-000	2 AI 4-20 mA/T	2-Channel Analog Input Module (4-20mA, differential inputs) extended temperature range from –20 °C to +60 °C

2.1.1.2 View

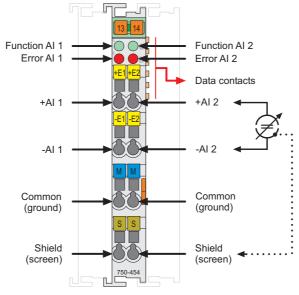


Fig. 2.1.1-1: 2-Channel Analog Input Module 750-454

g045400e



2.1.1.3 Description

The analog input module and its variations receives signals with standardized values of 4-20 mA.

The module has two differential input channels and can receive differential signals via the connections +AI 1 and -AI 1 or +AI 2 and -AI 2.

The input channels of a module have a common ground and a shield (screen) connection (S). The Shield (sreen) is directly connected to the DIN rail. A capacitive connection is made automatically when snapped onto the DIN rail.

The input signal of each channel is electrically isolated and will be transmitted with a resolution of 12 bits.

The operational readiness and trouble-free internal data bus communication of the channels are indicated via a green Function LED. Broken wire, overrange or underflow of the measuring range is indicated via a red error LED.

Any configuration of the input modules is possible when designing the fieldbus node. Grouping of module types is not necessary.

The voltage supply is done via system voltage.




Attention

This module has no power contacts. For field supply to downstream I/O modules, a supply module will be needed.

The analog input module 750-454 and its variations can be used with all couplers/controllers of the WAGO-I/O-SYSTEM 750 (except for the economy types 750-320, -323, -324 and -327).



2.1.1.4 Display Elements

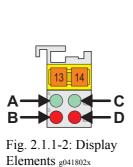

LED	Channel	Meaning	State	Function		
A		Function	off	No operational readiness or the internal data bus communication is interrupted		
green	1	AI 1	on	Operational readiness and trouble- free internal data bus communication		
D		Error AI 1	off	Normal operation		
B red			on	Broken wire, overrange/underflow of the admissible measuring range		
С	2	Function AI 2	off	No operational readiness or the internal data bus communication is interrupted		
green			on	Operational readiness and trouble- free internal data bus communication		
D		Error AI 2	off	Normal operation		
red			on	Broken wire, overrange/underflow of the admissible measuring range		

2.1.1.5 Schematic Diagram

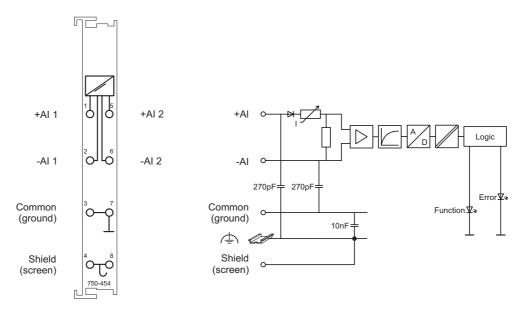


Fig. 2.1.1-3: 2-Channel Analog Input Module 750-454

g045401e



2.1.1.6 Technical Data

Module Specific Data					
Number of inputs	2				
Voltage supply	via system voltage DC /DC				
Current consumption typ. (internal)	70 mA				
Common mode voltage max.	35 V				
Signal current	4 mA 20 mA				
Input resistance	<220 Ω at 20 mA				
Resolution	12 bits				
Conversion time typ.	2 ms				
Measuring error _{25°C}	<± 0,2 % of full scale value				
Temperature coefficient	<± 0,01 % /K of full scale value				
Isolation	500 V (Field/System)				
Bit width	2 x 16 bits data 2 x 8 bits control/status (option)				
Dimensions (mm) W x H x L	12 x 64* x 100 * from upper edge of 35 DIN rail				
Weight	ca. 55 g				
Standards and Regulations (cf. Chapte	er 2.2 of the Coupler/Controller Manual)				
EMC-Immunity to interference (CE)	acc. to EN 50082-2 (96)				
EMC-Emission of interference (CE)	acc. to EN 50081-1 (93)				
EMC-Immunity to interference (Ship building)	acc. to Germanischer Lloyd (97)				
EMC-Emission of interference (Ship building)	acc. to Germanischer Lloyd (97)				



Approvals (cf. Chapter 2.2 of the Coupler/Controller Manual)							
c UL us	_C UL _{US} (UL508)						
ABS	ABS (American Bureau of Shipping)						
0	BV (Bureau Veritas)						
<u>tå</u>	DNV (Det Norske Veritas)	Cl. B					
(GL)	GL (Germanischer Lloyd)	Cat. A, B, C, D					
KR COMMANDE	KR (Korean Register of Shipping)						
l Lowls Register	LR (Lloyd's Register)	Env. 1, 2, 3, 4 (only for 750-454, /000-200)					
	NKK (Nippon Kaiji Kyokai)						
4	RINA (Registro Italiano Navale)	(only for 750-454)					
c UL us	_C UL _{US} (UL1604)	Class I Div2 ABCD T4A					
⟨£x⟩	KEMA	II 3 G EEx nA II T4					
CE	Conformity Marking						



More Information

Detailed references to the approvals are listed in the document "Overview Approvals WAGO-I/O-SYSTEM 750", which you can find on the CD ROM ELECTRONICC Tools and Docs (Item-No.: 0888-0412) or in the internet under:

<u>www.wago.com</u> → Documentation → WAGO-I/O-SYSTEM 750 → System Description



2.1.1.7 Process Image

The analog input module 750-454 transmits 16-bit measured values and 8 optional status bits per channel.

The digitalized measured value is transmitted in a data word (16 bits) as input byte 0 (low) and input byte 1 (high) into the process image of the coupler / controller.

This value is represented with a 12 bit resolution on bit B3 ... B14. From the manufacturing number |32|02|XX|XX| onwards, the status information included in the three least significant bits (B0 ... B2) can be parsed in the event of an error

Bit B0 = 1 is set when the range of measurement is overranged.

Bit B0 and B1 = 1 are set in case of measurement range underflow or broken wire. For modules having a previous manufacturing number, the last 3 bits are not parsed.

The manufacturing number is part of the lateral marking on the module enclosure.

Some fieldbus systems can process input channel status information by means of a status byte.

This status byte can be displayed via the starting tool WAGO-I/O-CHECK 2. However, processing via the coupler / controller is optional, which means that accessing or parsing the status information depends on the fieldbus system.



Attention

The representation of the process data of some I/O modules or their variations in the process image depends on the fieldbus coupler/-controller used. Please take this information as well as the particular design of the respective control/status bytes from the section "Fieldbus Specific Design of the Process Data" included in the description concerning the process image of the corresponding coupler/controller.



2.1.1.7.1 Standard Data Format

For the standard module 750-454 and the variations 750-454/000-001 the input current ranging from 4 mA to 20 mA is scaled on the numerical values ranging from 0x0000 bis 0x7FF9.

Process values of module 750-454, 750-454/000-001							
Input current	numerical value				Status-	LED	
	binary		hex.	dec.	byte	Error	
4 mA - 20 mA	Measured value	* ⁾ X F Ü			hex.	AI 1, 2	
<0	not po	ossible (Re	verse volta	age prote	ction)		
<4 - Δ** ⁾	0.0000.0000.00000	011'	0x0003	3	0x41	on	
<4	0.0000.0000.00000	000'	0x0000	0	0x00	off	
4	0.0000.0000.0000	000'	0x0000	0	0x00	off	
6	'0001.0000.0000.0	000'	0x1000	4096	0x00	off	
8	'0010.0000.0000.0	000'	0x2000	8192	0x00	off	
10	'0011.0000.0000.0	000'	0x3000	12288	0x00	off	
12	'0100.0000.0000.0	000'	0x4000	16384	0x00	off	
14	'0101.0000.0000.0	000'	0x5000	20480	0x00	off	
16	'0110.0000.0000.0	000'	0x6000	24576	0x00	off	
18	'0111.0000.0000.0	000'	0x7000	28672	0x00	off	
20	'0111.11111.1111.1	000'	0x7FF8	32760	0x00	off	
>20	'0111.11111.1111.1	001'	0x7FF9	32761	0x42	off	
>20 + \Delta**)	'0111.11111.1111.1	001'	0x7FF9	32761	0x42	on	

^{*)} status bits: X = not used, F = short-circuit, $\ddot{U} = \text{oversize}$



^{**)} $\Delta = 0.1 \dots 2.0 \text{ mA}$

2.1.1.7.2 Special Data Format

To digitalize the measurement value, the variation 750-454/000-002 uses another resolution as the standard module.

For this variation, the input current ranging from 4 mA to 20 mA is scaled on the numerical values ranging from 0x0000 to 0x0F99.

Process values of module 750-454/000-002							
Input current	numerical value				Status-	LED	
	binary		hex.	dec.	byte	Error	
4 mA - 20 mA	Measured value	*) X F Ü			hex.	AI 1, 2	
<0	not po	ossible (Re	verse volta	ge prote	ction)		
<4 - \Delta**)	0.0000.0000.00000	011'	0x0003	3	0x41	on	
<4	0.0000.0000.00000	000'	0x0000	0	0x00	off	
4	0.0000.0000.0000	000'	0x0000	0	0x00	off	
6	'0000.0001.1111.0	000'	0x01F0	500	0x00	off	
8	'0000.0011.1110.1	000'	0x03E8	1000	0x00	off	
10	'0000.0101.1101.1	000'	0x05D8	1500	0x00	off	
12	'0000.0111.1101.0	000'	0x07D0	2000	0x00	off	
14	'0000.1001.1100.0	000'	0x09C0	2500	0x00	off	
16	'0000.1011.1011.1	000'	0x0BB8	3000	0x00	off	
18	'0000.1101.1010.1	000'	0x0DA8	3500	0x00	off	
20	'0000.1111.1001.1	000'	0x0F98	3992	0x00	off	
>20	'0000.1111.1001.1	001'	0x0F99	3993	0x42	off	
>20 + \Delta**)	'0000.1111.1001.1	001'	0x0F99	3993	0x42	on	

^{*)} status bits: X = not used, F = short-circuit, $\ddot{U} = \text{oversize}$



^{**)} $\Delta = 0.1 \dots 2.0 \text{ mA}$

To digitalize the measurement value, the variation 750-454/000-200 uses a format adapted for the S5 control systems using FB 250.

For this variation, the input current ranging from 4 to 20 mA is scaled on the numerical values ranging from 0x1000 to 0x5001.

Process values of module 750-454/000-200							
Input current	numerical value				Status-	LED	
_	binary		hex.	dec.	byte	Error	
0 mA - 20 mA	Measured value	* ⁾ X F Ü			hex.	AI 1, 2	
<0	not po	ossible (Re	verse volta	age prote	ction)		
<4 - Δ** ⁾	'0001.0000.0000.0	011'	0x1003	4099	0x41	on	
<4	'0001.0000.0000.0	000'	0x1000	4096	0x00	off	
4	'0001.0000.0000.0	000'	0x1000	4096	0x00	off	
6	'0001.1000.0000.0	000'	0x1800	6144	0x00	off	
8	'0010.0000.0000.0	000'	0x2000	8192	0x00	off	
10	'0010.1000.0000.0	000'	0x2800	10240	0x00	off	
12	'0011.0000.0000.0	000'	0x3000	12288	0x00	off	
14	'0011.1000.0000.0	000'	0x3800	14336	0x00	off	
16	'0100.0000.0000.0	000'	0x4000	16384	0x00	off	
18	'0100.1000.0000.0	000'	0x4800	18432	0x00	off	
20	'0101.0000.0000.0	000'	0x5000	20480	0x00	off	
>20	'0101.0000.0000.0	001'	0x5001	20481	0x42	off	
$>20 + \Delta^{**}$	'0101.0000.0000.0	001'	0x5001	20481	0x42	on	

^{*)} status bits: X = not used, F = short-circuit, $\ddot{U} = \text{oversize}$



^{**)} $\Delta = 0.1 \dots 2.0 \text{ mA}$



WAGO Kontakttechnik GmbH & Co. KG Postfach 2880 • D-32385 Minden Hansastraße 27 • D-32423 Minden

Phone: 05 71/8 87 - 0 Fax: 05 71/8 87 - 1 69 E-Mail: info@wago.com

Internet: http://www.wago.com