Setup Raspy with OpenCV


From a Dummy for other Dummies

Install Raspbian

Download the latest image from raspberrypi.org. I took the lite version without desktop gui.

To check the hashcode on Windows you can use the following command:

certutil -hashfile C:\Users\...raspbian-stretch-lite.zip sha256

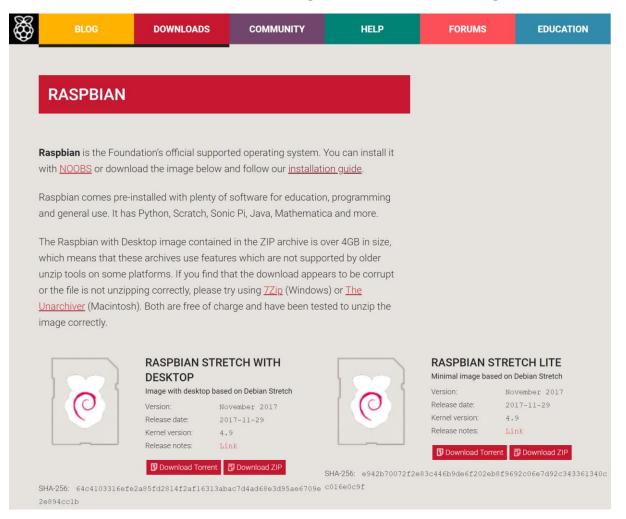

Link: https://www.raspberrypi.org/downloads/raspbian/

Write the image to the SD card either manually or with a client like Etcher. I used Etcher.

Select the previously downloaded image (.zip File), then select the SD Card and click the flash button in Etcher.



Etcher Link: https://etcher.io/

Installation Guide Link: https://www.raspberrypi.org/documentation/installation/installing-images/README.md

Setup wireless connection

You could work on your Raspy with a HDMI Monitor and a USB Keyboard locally. I want to work via ssh over the wlan hotspot of my smartphone. To make the Raspy connect to the network we have to configure the ssid and the password in /etc/wpa_supplicant/wpa_supplicant.conf as follows:

```
country=GB
ctrl_interface=DIR=/var/run/wpa_supplicant GROUP=netdev
update_config=1
network={
         ssid="<your ssid>"
         psk="<your password>"
}
```

After configuring this, we have to restart the wlan client:

```
wpa cli -i wlan0 reconfigure
```

Basic configuration

Now the raspy should connect to the network. The next point is to expand the root filesystem and to start the ssh server. Raspbian brings a shell client for these options:

```
sudo raspi-config
```

Download OpenCV and setup python environment

```
wget -O opencv.zip https://github.com/Itseez/opencv/archive/3.3.0.zip
unzip opencv.zip
wget -O opencv_contrib.zip https://github.com/ltseez/opencv_contrib/archive/3.3.0.zip
unzip opencv_contrib.zip
wget https://bootstrap.pypa.io/get-pip.py
python3 get-pip.py
pip install virtualenv virtualenvwrapper
mkvirtualenv cv -p python3
workon cv
pip install numpy
Compile OpenCV
cmake -D CMAKE_BUILD_TYPE=RELEASE -D CMAKE_INSTALL_PREFIX=/usr/local -D
INSTALL_PYTHON_EXAMPLES=ON -D OPENCV_EXTRA_MODULES_PATH=~/opencv_contrib-
3.3.0/modules -D BUILD_EXAMPLES=ON ..
-- Python 3:
-- Interpreter:
                       /home/pi/.virtualenvs/cv/bin/python3 (ver 3.5.3)
                      /usr/lib/arm-linux-gnueabihf/libpython3.5m.so (ver 3.5.3)
-- Libraries:
                      /home/pi/.virtualenvs/cv/lib/python3.5/site-packages/numpy/core/include
-- numpy:
(ver 1.14.1)
-- packages path:
                         lib/python3.5/site-packages
python -m site
sys.path = [
  '/home/pi/opencv-3.3.0/build',
  '/home/pi/.virtualenvs/cv/lib/python35.zip',
  '/home/pi/.virtualenvs/cv/lib/python3.5',
  '/home/pi/.virtualenvs/cv/lib/python3.5/plat-arm-linux-gnueabihf',
```

```
'/home/pi/.virtualenvs/cv/lib/python3.5/lib-dynload',
  '/usr/lib/python3.5',
  '/usr/lib/python3.5/plat-arm-linux-gnueabihf',
  '/home/pi/.virtualenvs/cv/lib/python3.5/site-packages',
]
USER_BASE: '/home/pi/.local' (doesn't exist)
USER_SITE: '/home/pi/.local/lib/python3.5/site-packages' (doesn't exist)
ENABLE_USER_SITE: False
        Change swapfile to 1024
sudo /etc/init.d/dphys-swapfile stop
sudo /etc/init.d/dphys-swapfile start
make -j4
sudo make install
sudo Idconfig
        Change swapfile back to 100
https://www.pyimagesearch.com/2017/09/04/raspbian-stretch-install-opencv-3-python-on-your-
raspberry-pi/
Setup git
sudo apt-get install git
git config --global user.name "Raspberry Pi"
git config --global core.editor vi
ssh-keygen -t rsa -C pi@raspy
VIELLEICHT: sudo /etc/init.d/ssh restart
git clone git@github.com:haubschueh/loufchatz.git loufchatz
sudo mkdir /opt/loufchatz
sudo chown pi /opt/loufchatz/
```

git clone git@github.com:haubschueh/loufchatz.git loufchatz cd loufchatz/ git pull

Serial interface

VIELLEICHT: Check if serial interface is used by the operating system

```
dmesg | grep tty
```

Disable the serial interface over the the console gui:

```
sudo raspi-config
```

Install the package pyserial with pip. It's important to install pyserial and not serial, otherwise it might not be possible to open ports.

```
pip install pyserial
python3
>> import serial
>> port = serial.Serial()
```