FLUX:: Analyzer

FLUX:: Immersive

2/6/23

Table of contents

1 Welcome **17**
1.1 Thank You! . . . 17

2 FLUX:: Analyzer Versions **18**

I Initial Setup **19**

II User interface **20**

3 Mouse commands and conventions **21**
3.1 Modifier + click . . . 21
3.2 Double-click . . . 21
3.3 Click and drag . . . 21
3.4 Scroll wheel + click and drag . . . 22

4 Keyboard shortcuts **23**
4.1 Main . . . 23
4.2 Layout . . . 23
4.3 Snapshot . . . 24
4.4 Impulse Response . . . 25
4.5 Delay Finder . . . 26
4.6 Generator . . . 26
4.7 Meters . . . 26
4.8 Metering history . . . 26

5 Audio source **27**

6 Layout mode **28**
6.1 Studio . . . 30
6.2 Film mixing . . . 30
6.3 Mastering . . . 30
6.4 Live sound system alignment . . . 30
6.5 Live - Show . . . 30
6.6 Metering statistics . . . 31

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7 Main setup **34**
7.1 Configuration . . . 36
7.2 SampleGrabber . . . 36
7.3 Graphic engine . . . 37
7.4 Time code . . . 38
7.4.1 Display frame rate . . . 39
7.4.2 Absolute Timecode . . . 39
7.5 Main . . . 39
7.5.1 RTA block size . . . 39
7.5.2 TF/Sweep Block size . . . 40
7.5.3 Overlap Mode . . . 40
7.5.4 Analysis window . . . 40
7.5.5 Normalization . . . 41
7.5.6 Scaling . . . 41
7.6 Averaging . . . 42
7.6.1 Mode . . . 42
7.6.2 Length . . . 42
7.7 Various . . . 43
7.7.1 Auto-pause threshold . . . 43
7.7.2 Metric system . . . 43
7.7.3 Temperature . . . 43
7.7.4 Preferences reset . . . 43

8 UI Setup **44**
8.1 Configuration . . . 46
8.2 Fonts: Small Scale . . . 46
8.3 Fonts: Large Scale . . . 46
8.4 Fonts: Spectrum Peak Label . . . 46
8.5 Brightness . . . 46
8.6 Contrast . . . 46
8.7 Reverse color scheme . . . 47
8.8 Layout Shortcuts . . . 47

9 IO Configuration **49**
9.1 Configuration . . . 49

10 Hardware IO **51**
10.1 Device . . . 51
10.1.1 None . . . 51
10.1.2 Your soundcard . . . 51
10.2 Sampling rate . . . 52
10.3 Buffer size . . . 53
10.4 Control panel . . . 53

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

11 Channels **54**
11.1 Max number of channels . . . 54
11.2 Reference configuration . . . 55

12 Signal generator **57**
12.1 Output . . . 57

13 Channel 1 / Channel 2 **59**
13.1 Phase invert . . . 59
13.1.1 Input . . . 59
13.1.2 Output . . . 59

14 Hold info text **60**

15 Full-screen mode **61**

16 Close **62**

17 Help / about **63**

III Spectrum analyzer **64**

18 Basic principles **65**

19 Block size **69**

20 Transform type **70**

21 Window type **71**

22 Ballistics **72**
22.1 Release time . . . 72
22.2 Max release time . . . 72

23 Averaging **73**

24 Frequency scaling **74**

25 Display range **75**
25.1 dB Min / dB Max . . . 75
25.2 Range mode . . . 75
25.2.1 Manual . . . 75
25.2.2 Auto . . . 76
25.2.3 Compressed . . . 76

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

25.2.4 Compressed | Auto 76

26 Smoothing mode **77**

27 Smoothing detail **78**

28 Curve display **79**

29 Max curve **80**

30 Peak type **81**

31 Peak label **82**

32 Peak range **83**

33 Summation **84**

34 Filled **85**

35 Width **86**

36 Full curve color **87**

37 Smoothed curve color **88**

38 Max curve color **89**

39 Color grading **90**

40 Channels **91**

41 Filled **92**

42 Opacity **93**

43 Slide (Real Time waterfall) **94**

44 Enable **95**

45 Direction **96**

46 Fading **97**

47 Blur **98**

48 Blur Kernel Size **99**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

49 Zoom **100**

IV Nebula (spatial spectrogram) **101**

50 Principle of operation **102**

51 Focus **105**

52 AutoScale **106**

53 AutoScale release **107**

54 Linear blend range **108**

55 Log blending **109**

56 Fading **110**

57 Size factor **111**

58 Blur kernel size **112**

59 Particle scaling **113**

60 Color mode **114**

V Vector scope **115**

61 Usage **116**
61.1 Modes in Surround : 118

62 Display **119**

63 Fs **120**

64 Blending **121**

65 Fading **122**

66 Size factor **123**

67 Blur kernel size **124**

68 Color mode **125**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

69 Particle start/end colors **126**

VI Nebula (surround scope) **127**

70 Usage **128**

71 Music **129**

72 Equidistant **130**

73 Square **131**

74 Theater **132**

75 Display **133**

76 Mode **135**
76.1 Speaker mode . . . 135
76.2 Phases . . . 135

77 Scale **136**
77.1 Auto-scale . . . 136
77.2 Auto-scale release . . . 136
77.3 Linear blend range . . . 136
77.4 Log blending . . . 137
77.5 Color mode . . . 137
77.6 Fading . . . 137
77.7 Size factor . . . 137
77.8 Blur kernel size . . . 138
77.9 Particle factor count . . . 138
77.10Particle scaling . . . 138
77.11Color mode . . . 138

78 Power color grading **139**

VII RMS Metering **140**

79 Metering **141**

80 Introduction **143**

81 Preset **144**
81.1 Custom . . . 144

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

81.2 Default . . . 144
81.3 Ref -18dB A/B/C/K . . . 144
81.4 Ref -20dB A/B/C/K . . . 144
81.5 VU meter Standard . . . 144
81.6 K-System / VU . . . 146
81.7 K-System / Slow . . . 146
81.8 DIN 45406 . . . 146
81.9 Nordic N9 . . . 146
81.10BBC Normal . . . 146
81.11BBC Slow . . . 146
81.12EBU Normal . . . 147
81.13EBU Slow . . . 147

82 Reference **148**
82.1 Zero reference . . . 148
82.2 Weighting . . . 148

83 SPL **150**
83.1 SPL reference . . . 150
83.2 SPL trim . . . 150
83.3 Calibrate . . . 150

84 Min / max **151**

85 Time **152**
85.1 Integration . . . 152
85.2 Release . . . 152
85.3 Peak release . . . 152
85.4 Peak hold . . . 152

86 Scale & split **153**
86.1 Scale . . . 153
86.2 Colors . . . 153

87 Bar-graph texturing **154**

VIIITrue peak metering **155**

88 True Peak metering **156**

89 Preset **158**
89.1 Custom . . . 158
89.2 Default . . . 158

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

89.3 EBU R128 . . . 158
89.4 EBU R128 Max -3dB . . . 159
89.5 -48.0 -> +3 . . . 159

90 Range **160**
90.1 Min / max . . . 160
90.2 Ref . . . 160

91 Scale **161**
91.1 Power factor . . . 161
91.2 Ref pixel offset factor . . . 161

92 Time **162**
92.1 Release . . . 162
92.2 Peak release . . . 162
92.3 Peak hold . . . 162
92.4 Infinite hold . . . 162
92.5 Reset . . . 162

93 Scale **163**
93.1 Colors . . . 163

94 Other **164**

95 Loudness ITU-R BS 1770 &amp EBU R128 PLOUD **165**

96 Units **166**

97 Loudness and EBU mode **167**

98 Loudness Range (LRA) **168**

99 Scales **169**

100 Dolby Dialogue Intelligence **170**
100.1 Introduction . . . 170
100.2 General principle . . . 170
100.3 Display . . . 170
100.4 Delay and compensation . . . 171
100.5 Surround . . . 171

101 Copyright & patent information **172**

102 Controls and display **174**
102.1 Display . . . 174

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

102.2 Pause . . . 176
102.3 Reset . . . 176

103 Setup **178**
103.1 Presets . . . 179
103.1.1 Custom . . . 179
103.1.2 Default . . . 179
103.1.3 EBU +9 LU . . . 179
103.1.4 EBU . . . 179
103.1.5 EBU +18 . . . 179
103.1.6 EBU +18 LUFS . . . 179
103.1.7 -23 LUFS Long program . . . 180
103.1.8 -23 LUFS Short program . . . 180
103.2 Dolby Dialogue Intelligence . . . 180
103.2.1 Dolby Dialogue Intelligence (TM) . . . 180
103.2.2 Speech threshold . . . 180
103.3 Range . . . 180
103.3.1 Min. . . . 180
103.3.2 Max. . . . 180
103.4 Scale / split . . . 181
103.4.1 Scale . . . 181
103.4.2 Colors . . . 181
103.5 Other . . . 181

IX Leq metering **182**

104 Introduction **183**
104.1 Time-weighted sound level . . . 183
104.2 Time-average sound level . . . 183
104.3 Sound exposure level . . . 184

105 Mic. channel Leq setup **185**
105.1 Zero ref. . . . 185
105.2 Weighting . . . 186
105.3 Time-weighted F . . . 186
105.4 Time-weighted S . . . 186
105.5 Average integration . . . 186
105.6 Main display . . . 186

106 SPL **187**
106.1 SPL reference . . . 187
106.2 SPL trim . . . 187

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

106.3Calibrate . . . 187

107Color **188**
107.1Font back . . . 188
107.2Level . . . 188
107.3Time-weighted F . . . 188
107.4Time-weighted S . . . 188
107.5Name . . . 188
107.6Unit . . . 188
107.7Freq. weighting . . . 189
107.8Font blur . . . 189

X Metering history **190**

108Usage **191**
108.1Timecode offset . . . 191
108.2Timecode offset reset . . . 191
108.3Play . . . 192

109Setup **193**

110TimeCode **195**
110.1Absolute Timecode . . . 195
110.2Update Factor . . . 195

111Single curve **196**
111.1Color . . . 196

112Peak **197**

113RMS **198**

114Dynamics **199**
114.1Dynamics . . . 199
114.2Integration . . . 199
114.3Color . . . 199

115Loudness **200**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

XI Metering statistics **201**

116 Metering statistics **202**
116.1 Overview . . . 202
116.1.1 Peak, TruePeak and RMS . . . 202
116.1.2 Loudness . . . 203
116.2 File export . . . 203
116.3 Setup . . . 203
116.3.1 Absolute Timecode . . . 203

117 Overview **204**

118 Setup **205**
118.1 Max. incident count . . . 205
118.2 TruePeak Incident Enable + threshold . . . 205
118.3 EBU R128 Short term / Dialog Incident Enable + thresholds . . . 206

119 Usage **207**
119.1 Principle . . . 207
119.2 Usage . . . 207
119.3 Reel grouping . . . 207
119.4 Channel grouping . . . 208

XII System analysis **209**

120 Introduction **210**

121 Initial setup **211**

122 Practical considerations for capturing measurement signals **212**
122.1 Use a measurement microphone . . . 212
122.2 Choose a neutral preamplifier and calibrate it accurately . . . 212
122.3 Maximize signal-to-noise ratio . . . 212

123 Measurement setup **213**

124 Test signals **215**

XIII Live IO **216**

125 Introduction **218**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

126 Basic operation **219**
126.1 Compute the delay . . . 219
126.2 Compensate the delay . . . 219
126.3 Fine-tune manually . . . 219
126.4 Perform a new measurement . . . 219

127 Notes **220**
127.1 Max. delay time and room/venue size . . . 220
127.2 Ensure stable conditions while performing a measurement . . . 220
127.3 Limitations . . . 220
127.4 Multiple paths . . . 220

128 User interface and controls **221**
128.1 Name . . . 222
128.2 Ref . . . 222
128.3 Mic . . . 222
128.4 Phase invert . . . 223
128.5 On/Off . . . 223
128.6 Delay value . . . 223
128.7 Find . . . 223
128.8 Progress . . . 224

129 Setup **225**

130 Max delay **226**

131 Algorithm **227**

132 Search passes **228**

XIV Signal generator **229**

133 Signal types **230**
133.1 Pink noise . . . 230
133.2 White noise . . . 230
133.3 Sine . . . 230
133.4 Sweep . . . 230

134 Controls **231**

135 Type **232**

136 Level **233**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

137 Enable **234**

138 Setup **235**
138.1 Output 235
138.1.1 Output 1 235
138.1.2 Output 2 235
138.2 Feed input reference 236
138.3 Sine frequency 236
138.4 Sweep start/end frequencies 236
138.5 Sweep length 236
138.6 Level 236

XV Transfer function measurement - Transfer_function_measurement_Introduction.qmd - Transfer_function_measurement_Transfer_function_magnitude.qmd - Transfer_function_measurement_Transfer_function_coherence.qmd - Transfer_function_measurement_Transfer_function_phase.qmd) - Transfer_function_measurement_Setup_Setup.qmd - Transfer_function_measurement_Setu - Transfer_function_measurement_Setup_Coherence_Magnitude.qmd - Transfer_function_measurement_Setup_Coherence.qmd - Transfer_function_measurement_Setup_Magnitude.qmd - Transfer_function_measurement_Setu - Transfer_function_measurement_Setup_Other.qmd **238**

XVI Impulse response measurement **241**

139 Introduction **242**
139.1 Analyze / freeze 242
139.2 Delay Set 243
139.3 Delay add 243
139.4 Delay subtract 243

140 General procedure **244**

141 Time averaging **245**

142 Main setup **246**
142.1 Run 246

143 Reset **248**

144 Max length **249**

145 Time averaging **250**

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

146 AutoRange **251**

147 Zoom **252**
147.1 Zoom X . . . 252
147.2 Zoom Y-/+ . . . 252

XVI Spectrogram **253**

148 Usage **254**

149 Setup **256**
149.1 Direction . . . 256
149.2 Log Gain . . . 256
149.3 Threshold . . . 257
149.3.1 Threshold - Range Max . . . 257
149.3.2 Threshold - Range Min . . . 257
149.4 Color Mode . . . 257
149.4.1 Duotone . . . 257
149.4.2 Black On White . . . 257
149.4.3 White On Black . . . 258
149.4.4 Power grading 1, 2, 3, 4, 5 . . . 258
149.4.5 Frequency grading . . . 258
149.4.6 Duo-tone grading start/end colors . . . 258

150 Snapshots **259**

151 Usage **260**
151.1 Snapshots . . . 260
151.2 Project . . . 260

152 Controls **261**
152.1 Selection and navigation . . . 261
152.2 Add new snapshot . . . 261
152.3 Acquire sweep . . . 262
152.4 Create average . . . 262
152.5 Update current . . . 263
152.6 Load project . . . 263
152.7 Curve visibility . . . 263
152.8 Color . . . 264
152.9 Name . . . 264
152.10 Invert (Iv) . . . 264

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

153 Setup **265**
153.1 Name . . . 265
153.2 Display defaults . . . 265

XVII Wave scope **266**

154 Setup **269**
154.1 Time . . . 269
154.2 Color Mode . . . 269
154.2.1 Static . . . 269
154.2.2 Custom Dynamic . . . 270
154.2.3 Rainbow Dynamic . . . 270

XIX System requirements **271**

155 System requirements **272**
155.1 Minimum requirements . . . 272
155.2 Recommended configuration . . . 272
155.3 Common requirements . . . 272

156 Compatibility **273**
156.1 Operating Systems . . . 273
156.2 Hardware IO support . . . 273
156.3 Software - Sample Push support . . . 273
156.4 Supported formats . . . 273

Appendices **275**

A Credits **275**

B Release Notes **277**
B.1 FLUX:: Analyser 20.12 . . . 277
B.2 Major Additions . . . 277
B.3 Major optimizations . . . 277
B.4 Other Improvements . . . 278
B.5 Bug fixes . . . 278
B.5.1 FLUX:: Analyser 20.12 . . . 278
B.5.2 Sample Grabber Plug-ins 20.12 . . . 279
B.6 Known Issues . . . 279

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

1 Welcome

1.1 Thank You!

Thank you for purchasing FLUX:: Analyzer System.

Product Page | Shop Page

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

2 FLUX:: Analyzer Versions

The Analyzer is available in two different software versions, The Analyzer:: Essential, and the Analyzer:: Session.

The main difference between the two are:

Analyzer:: Session

Analyzer:: Essential

Inputs/Outputs

Mono / Stereo

Mono / Stereo / MultiChannel* up to 16.

I/O Configuration

SampleGrabber Plug-in Hardware I/O: ASIO / Core Audio

SampleGrabber Plug-in Hardware I/O: ASIO / Core Audio

Sample Rates (kHz)

44.1, 48, 88.2, 96

44.1, 48, 88.2, 96, 176.4, 192, 384 DXD

Supported Options

N/A

Live / Metering / MultiChannel

- Multichannel operation requires the Multichannel add-on option.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part I

Initial Setup

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part II

User interface

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

3 Mouse commands and conventions

The following mouse click actions are available: ## Left-click Selects the active element. ## Right-click Toggles the display of the corresponding setup menu for the item beneath the current mouse location.

3.1 Modifier + click

`Ctrl-click` is equivalent to `right-click`

Inside a setup menu item, `Alt-click` resets the corresponding setting to its default value.

`Alt-click` inside an item with a zoom factor greater than one, resets the current zoom to full view (Factor = 1).

3.2 Double-click

Double-clicking on an editable control such as a slider or text box enters keyboard entry mode, double-clicking again validates the new value.

Double-clicking anywhere inside a panel switches the panel to full-window mode, where the whole application screen is occupied by the corresponding panel; double-clicking a second time reverts to the normal layout.

3.3 Click and drag

`Click + drag` inside an item with a zoom factor greater than one shifts the current scale.

`Alt + Click + drag` inside an item with a Zoom Factor allows to setup a new zoom according to the defined selection.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

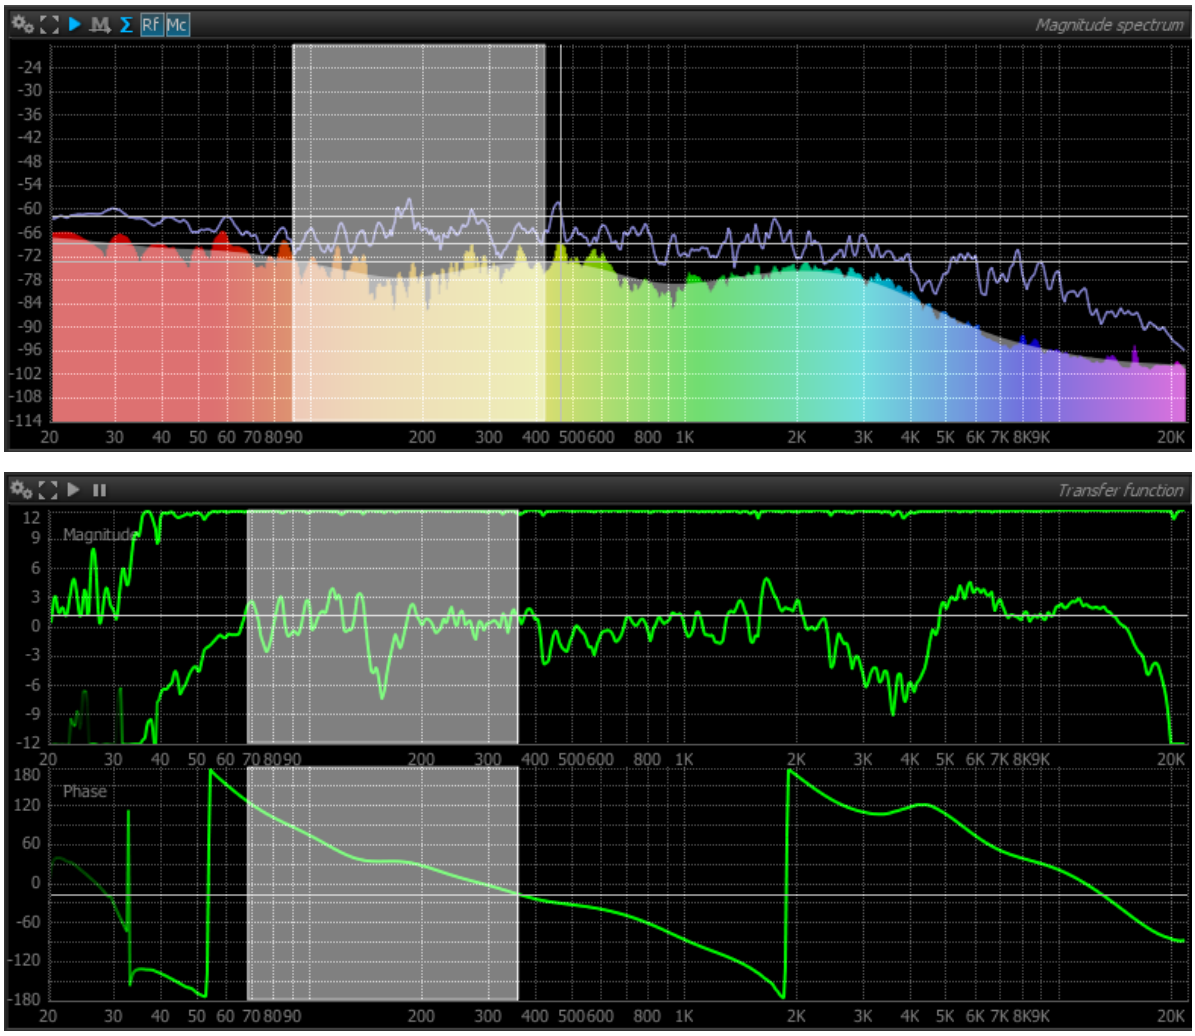

3.4 Scroll wheel + click and drag

Turning the middle mouse wheel, if present, affects the current horizontal zoom level of the item under the cursor.

Activating the wheel with the middle button simultaneously engaged shifts the current scale when the current zoom factor is greater than one.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

4 Keyboard shortcuts

4.1 Main

Toggle full screen mode

Alt + Return

Display context help / credits page

F1

Reconnect network

F5

Switch to next layout

TAB

Switch to previous layout

Shift + TAB

Toggle mouse info update on/off

F6

Toggle real-time curves display

Enter / Return

4.2 Layout

CTrl + F… Key

go to specified layout

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

4.3 Snapshot

Create new snapshot

Space

Create new sweep snapshot

Shift + Space

Create new average snapshot

Windows: Ctrl + Shift + Space

macOS: alt + Space

Update first selected snapshot

Windows: Ctrl + Space

macOS: Ctrl + Shift + Space

Delete selected snapshot(s)

Delete

Load snapshot project

Ctrl + O

Export selected snapshot(s)

Ctrl + S

Select all snapshots

Ctrl + A

De-select all snapshots

Escape

Select next snapshot

Down Arrow

Select previous snapshot

Up Arrow

Add next snapshot to selection

Shift + Down

Add previous snapshot to selection

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Shift + Up

Select first snapshot

Home

Select last snapshot

End

Toggle selected snapshot Main curve on/off

0

Toggle selected snapshot Coherence curve on/off

1

Toggle selected snapshot Mag curve on/off

2

Toggle selected snapshot Phase curve on/off

3

Toggle selected snapshot Spectrum curve on/off

4

Toggle selected snapshot IR curve on/off

5

4.4 Impulse Response

Add delay

Ctrl + Add (NUMPAD +)

Subtract delay

Ctrl + Subtract (NUMPAD -)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

4.5 Delay Finder

Increment delay by one sample

Add (NUMPAD +)

Decrement delay by one sample

Subtract (NUMPAD -)

Find delay

Ctrl + F

Reset delay

Ctrl + NUMPAD 0

Compensate delay

Ctrl + D

4.6 Generator

Toggle generator on/off

G

4.7 Meters

Refresh all meters

M

4.8 Metering history

Set Timecode offset

T

Reset Timecode offset

R

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

5 Audio source

Audio source allows you to select which source to use as input. Depending on your current configuration and settings, this will include:

- Available SampleGrabber instance(s), either local or remote.
- Available hardware device(s), if one or several sound cards are present on the host system, and the corresponding device has been selected in the Hardware IO configuration dialog.

> ⚠ Warning
>
> **IMPORTANT!** - The Pure Analyzer Studio Session supports audio input only by using the plug-in. No hardware input/output options are supported for the Pure Analyzer Session.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

6 Layout mode

Pure Analyzer offers a number of user interface layouts designed and named according to typical tasks:

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

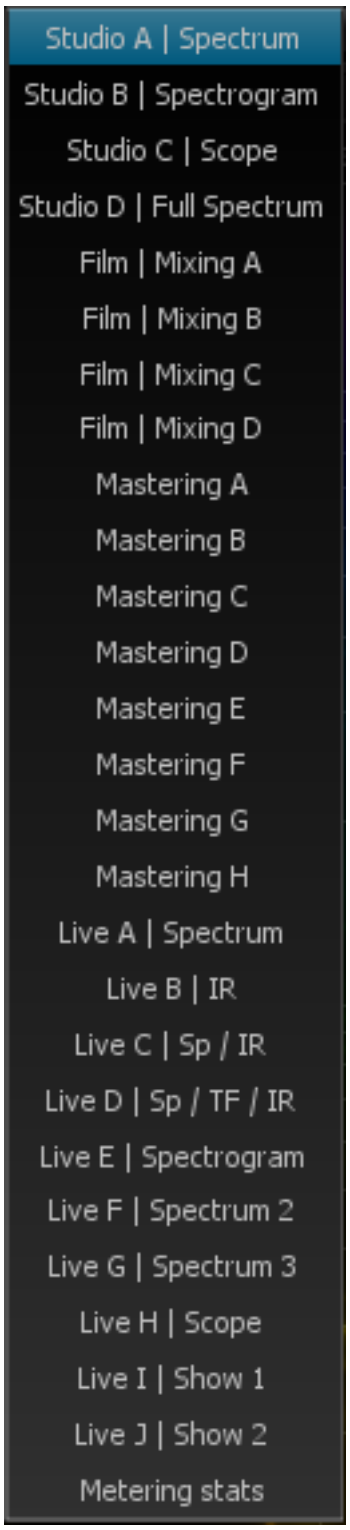

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

The layouts are grouped into categories, as described below.

6.1 Studio

For recording and mastering studio applications, these layouts allow simultaneous monitoring of the spectrum amplitude and spatial distribution, program level and phase.

6.2 Film mixing

Provide an overview of the signal amplitude spectrum, phase and levels.

Film C & D provide Stereo Vector Scope + phase in addition.

6.3 Mastering

Special emphasis is put on controlling program level, spectral equilibrium and spatial image. These layouts all offer a Nebula / Spatial Spectrogram, a Vector/Surround Scope, Spectrum Amplitude and Level Meters, in different size combinations.

6.4 Live sound system alignment

These layouts provide the elements needed by the live sound engineer when performing speaker array calibration tasks, namely delay finder, level meter, transfer function magnitude, phase and coherence spectra, impulse response, and snapshot facilities.

6.5 Live - Show

These layouts are intended for use by a live sound engineer during the course of a show, allowing for constant monitoring of the principal level and spectral indicators of the FOH mix.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

6.6 Metering statistics

Overview of all metering data at a glance.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

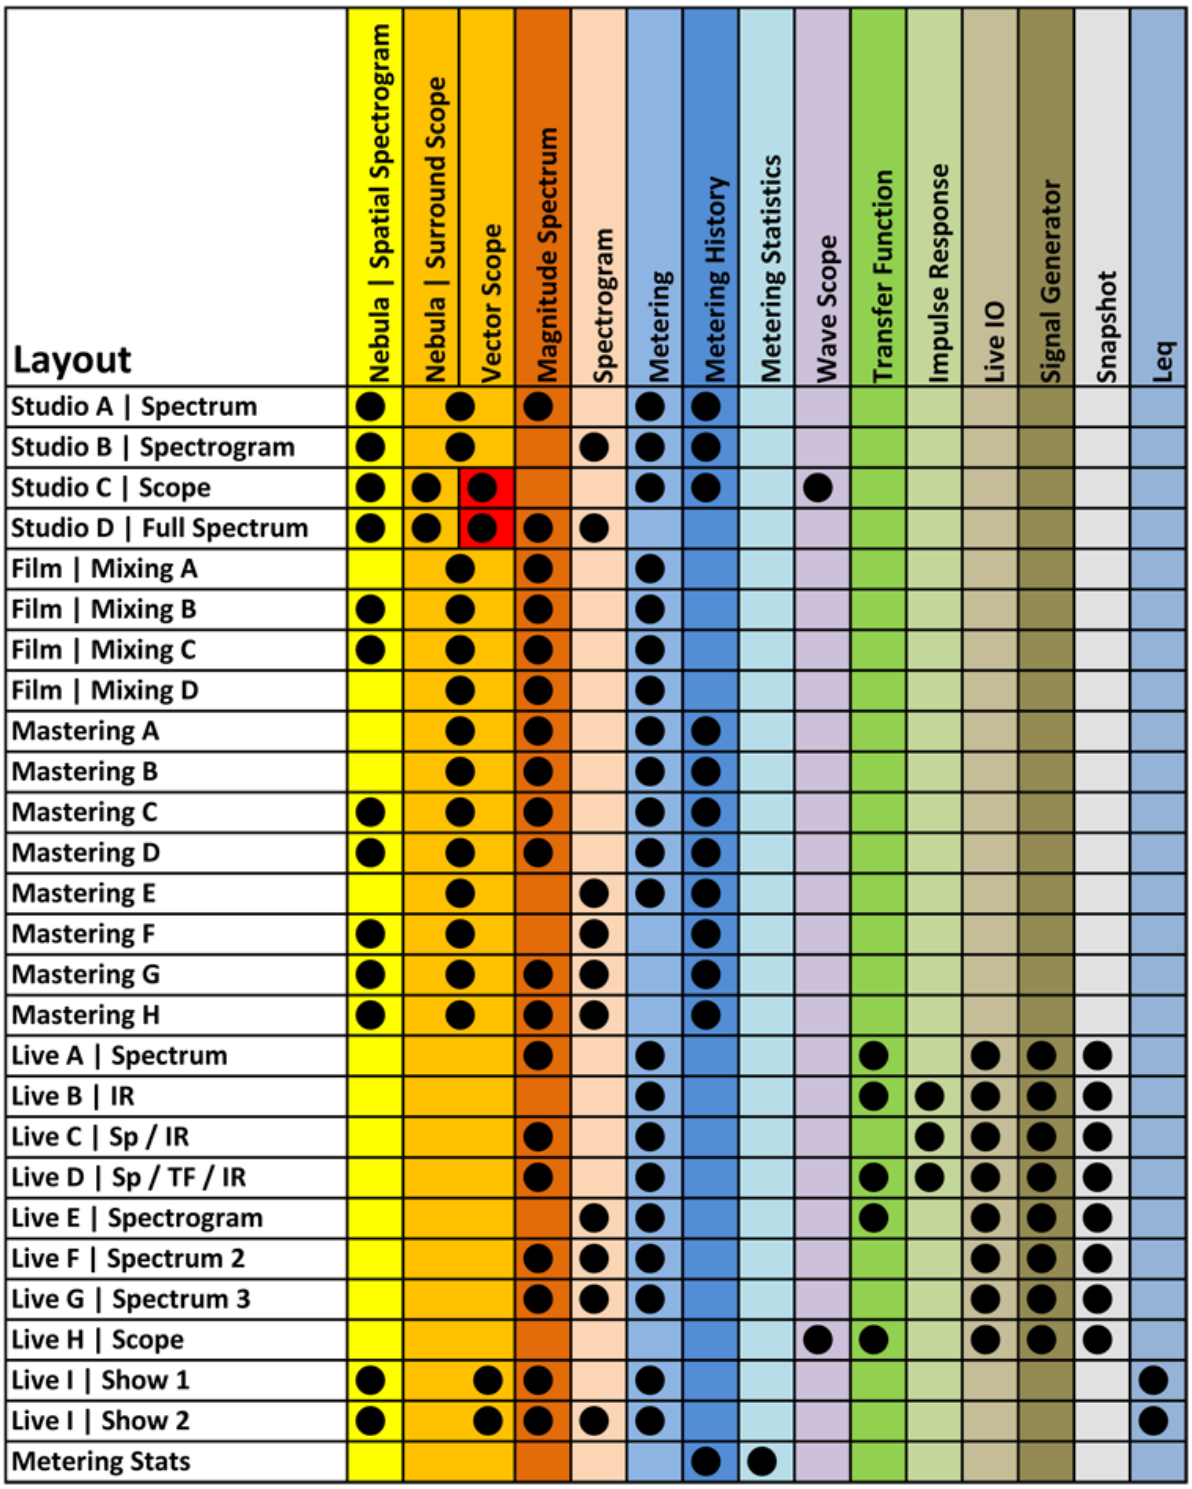

Layout contents matrix

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Some layouts might not be available in your Pure Analyzer edition.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7 Main setup

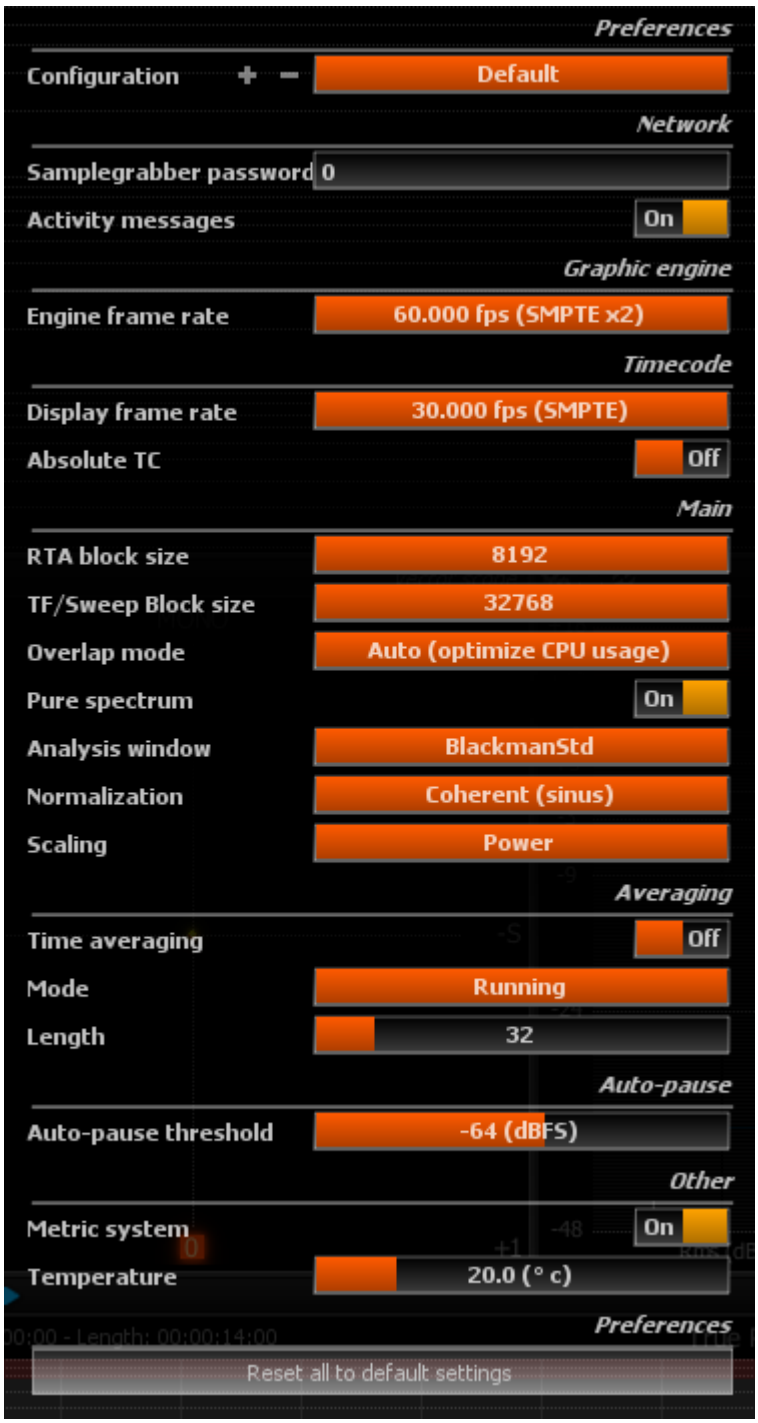

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.1 Configuration

Save / restore a user-defined configuration to and from disk, including all the settings in this panel, as well as IO Configuration 9 and UI Setup 8.

7.2 SampleGrabber

SampleGrabber password

The password entered in this field should match the one used by the SampleGrabber you wish to use as a source. This provides a reasonable level a security and prevents unauthorized access to your audio material broadcast over the network. Please take into consideration the encryption used only provides moderate protection, and is not intended to replace other security guards such as firewalls etc.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.3 Graphic engine

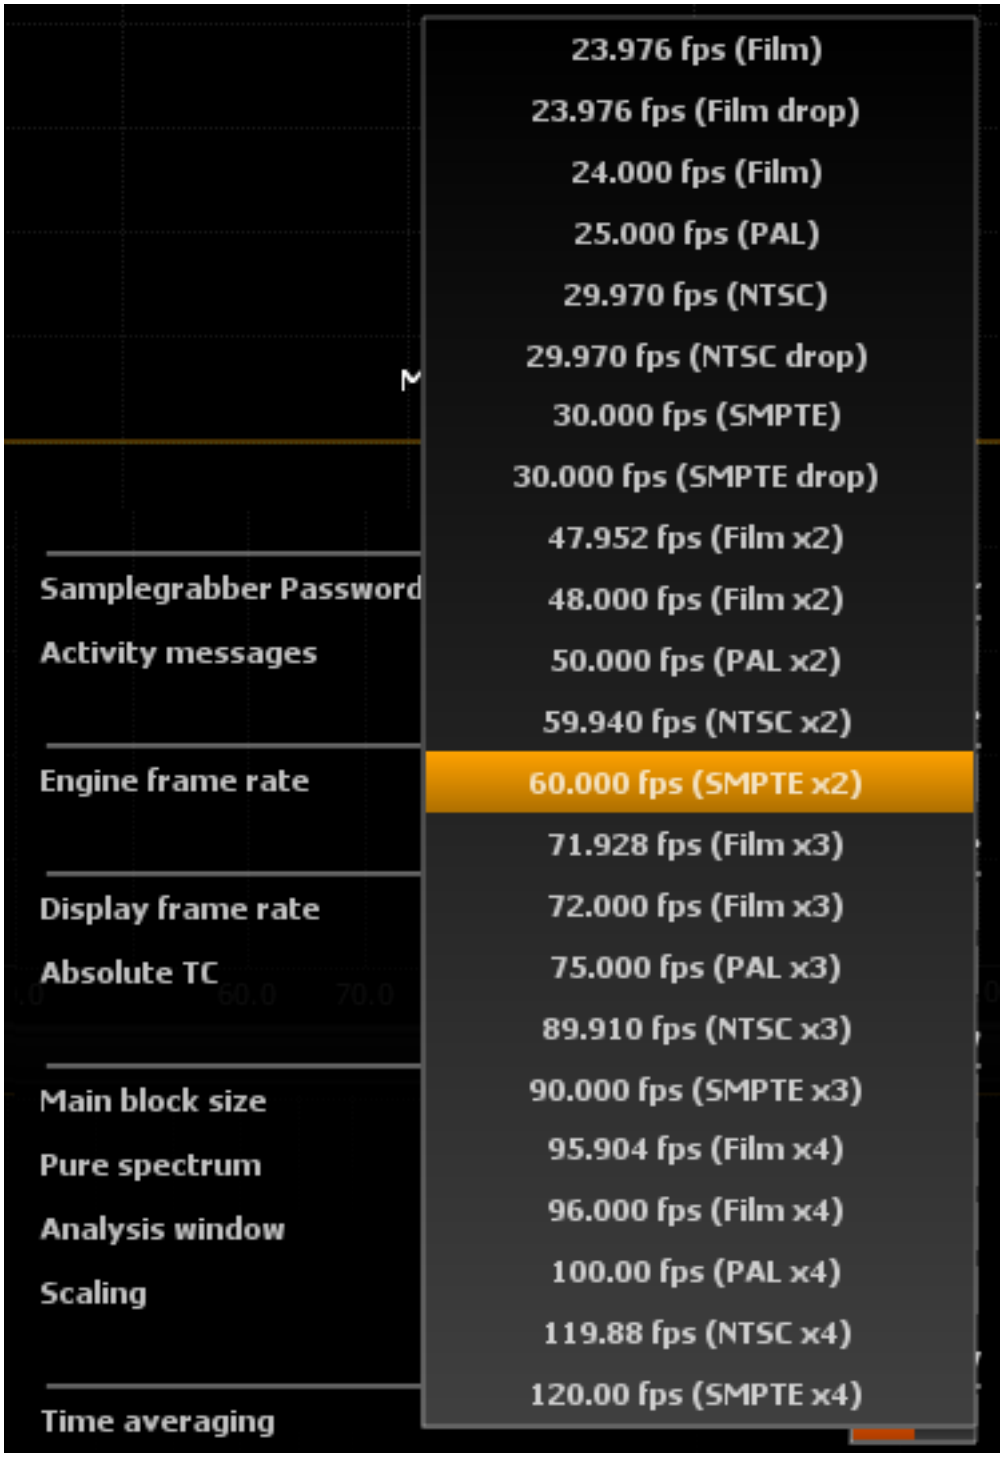

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Available graphic engine frame rates

Here you can specify the rate at which the display should be refreshed. Please note higher frame rates place higher demands on the GPU, and to a lesser extent, on the CPU.

> The effective frame rate can be displayed by typing `SetRenderStats(1)` in the console.

7.4 Time code

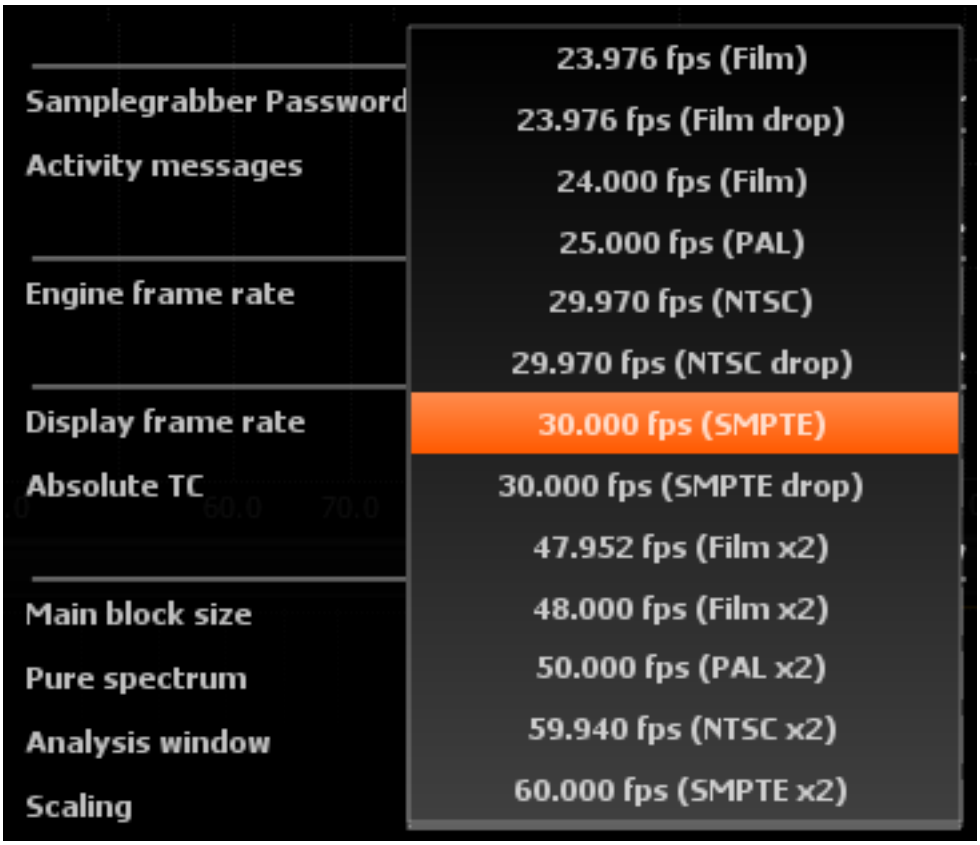

Figure 7.1: Available display frame rates

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.4.1 Display frame rate

Sets the frame-rate used for time display in various parts of the program. Set it to match the frame-rate of your source material to facilitate locating time events, when working with film, TV or other time-stamped material.

7.4.2 Absolute Timecode

This setting toggles between absolute and relative time-code display formats. Absolute Timecode is taken from the time the application was started. Relative Timecode is the time-elapsed since the Timecode offset position. See metering history usage 108 for information on working with Timecode.

7.5 Main

7.5.1 RTA block size

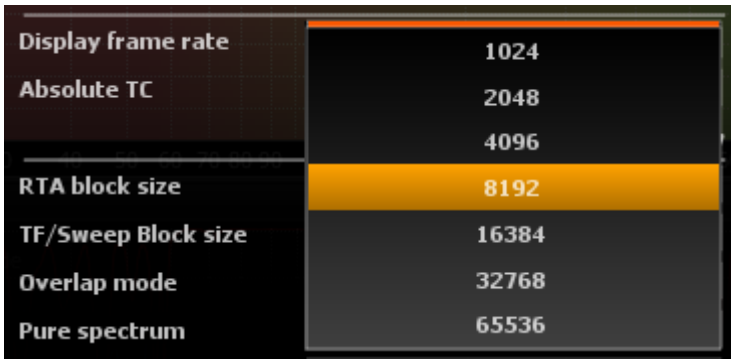

Defines the size of the blocks, in samples, fed to the main spectrum analyzer engine, which is used by the spectrum magnitude, Nebula and spectrogram views.

Pure spectrum Toggles between optimized frequency analysis (default) and standard FFT.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.5.2 TF/Sweep Block size

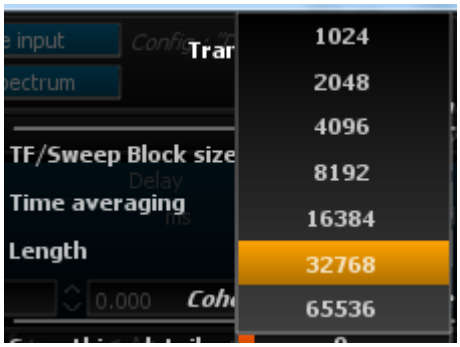

Block size used for the transfer function and snapshot performed with sine-sweep. The default is 32768, which is appropriate for most cases.

Increasing this value gives better frequency resolution, at the expense of CPU load. Lower values can be employed if you're only interested in the overall response of the analyzed system.

7.5.3 Overlap Mode

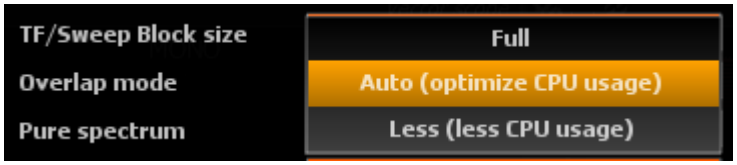

The overlap mode setting determines how much incoming audio frames overlap each-other. A higher overlap results in a smoother display update, at the expense of increased CPU usage. The available settings are: * Full: highest overlap * Auto: optimized overlap depending on available CPU resources (Default). * Less: minimized overlap for minimal CPU usage (useful for slow machines)

7.5.4 Analysis window

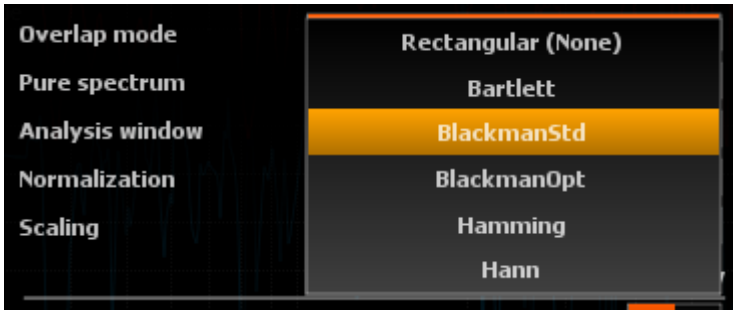

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Selects the analysis window applied to the incoming blocks.

Available choices are:

- Rectangular (None).
- Bartlett.
- Blackmann standard (default).
- Blackmann optimized.
- Hamming.
- Hann.

There is no reason to change this setting unless you have a specific reason to do so and fully understand the implications.

7.5.5 Normalization

Selects the normalization mode used to normalize the global gain of the spectrum display.

Available choices are:

- Coherent (sinus): 0dB peak sine gives 0dB amplitude.
- Incoherent (noise/music): 0dB RMS noise or music gives 0dB power.

7.5.6 Scaling

This setting controls the frequency dependent amplitude spectrum correction curve.

Available choices are:

- Amplitude: equivalent to no scaling. Amplitude of pure tones at different frequencies register at the same value. Incoming white noise is displayed as a (quasi) flat curve.
- Power (default): scaling inversely proportional to frequency (1/f). Incoming pink noise is displayed as a flat curve.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.6 Averaging

Time 85 averaging: engages averaging of spectrum magnitudes over time. Default is off.

7.6.1 Mode

- Running: the average display is updated as soon as a new incoming block arrives. This is the default.
- Fill-freeze: the display is only updated when a fresh batch of N new incoming blocks has arrived. The display is frozen until the next batch of N blocks arrive, and so on. N corresponds to the length setting defined below.

7.6.2 Length

The number of incoming blocks over which the resulting average spectrum is computed. Lower values lead to faster apparent display update rates, while higher values smooth-out any time-variations more. Default is 32.

> Running average employs a weighting window that gives more importance to the last incoming blocks of samples. This type of time averaging is also called moving average, rolling average or running average, and is good for smoothing out abrupt variations in time and still be able to monitor in a continuous fashion. Fill-freeze mode is useful for stabilizing a flickering display while still following long-term variations, which permits a more detailed study of the curve(s). This mode is therefore useful to get a very steady picture of the spectrum while still monitoring some of the mid-term changes, and saves you from holding and resetting the display manually again and again.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

7.7 Various

7.7.1 Auto-pause threshold

Analysis is paused whenever the level of any channel of the incoming audio falls below this level. Set this a tad above the acoustic and electronic noise floor of your input signal chain to retain measurements even though the audio (music program or test signal) has stopped.

7.7.2 Metric system

Toggle displayed units between:

- Metric system (default): distance expressed in meters, temperature in degrees Celsius.
- Imperial units: distance expressed in inches and feet, temperature in degrees Fahrenheit.

7.7.3 Temperature

This should be set to the ambient temperature at the current location in order to get the most accurate time to distance conversions in the delay finder and impulse response panels. The following table gives an idea of how much the speed of sound varies with temperature.

Temperature (°C)

Speed of sound (m/s)

0

331.3

15

340.31

25

346.18

35

351.96

7.7.4 Preferences reset

Resets “Default” application configuration settings to their default initial value. Please note the changes are only effective after restarting the application.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

8 UI Setup

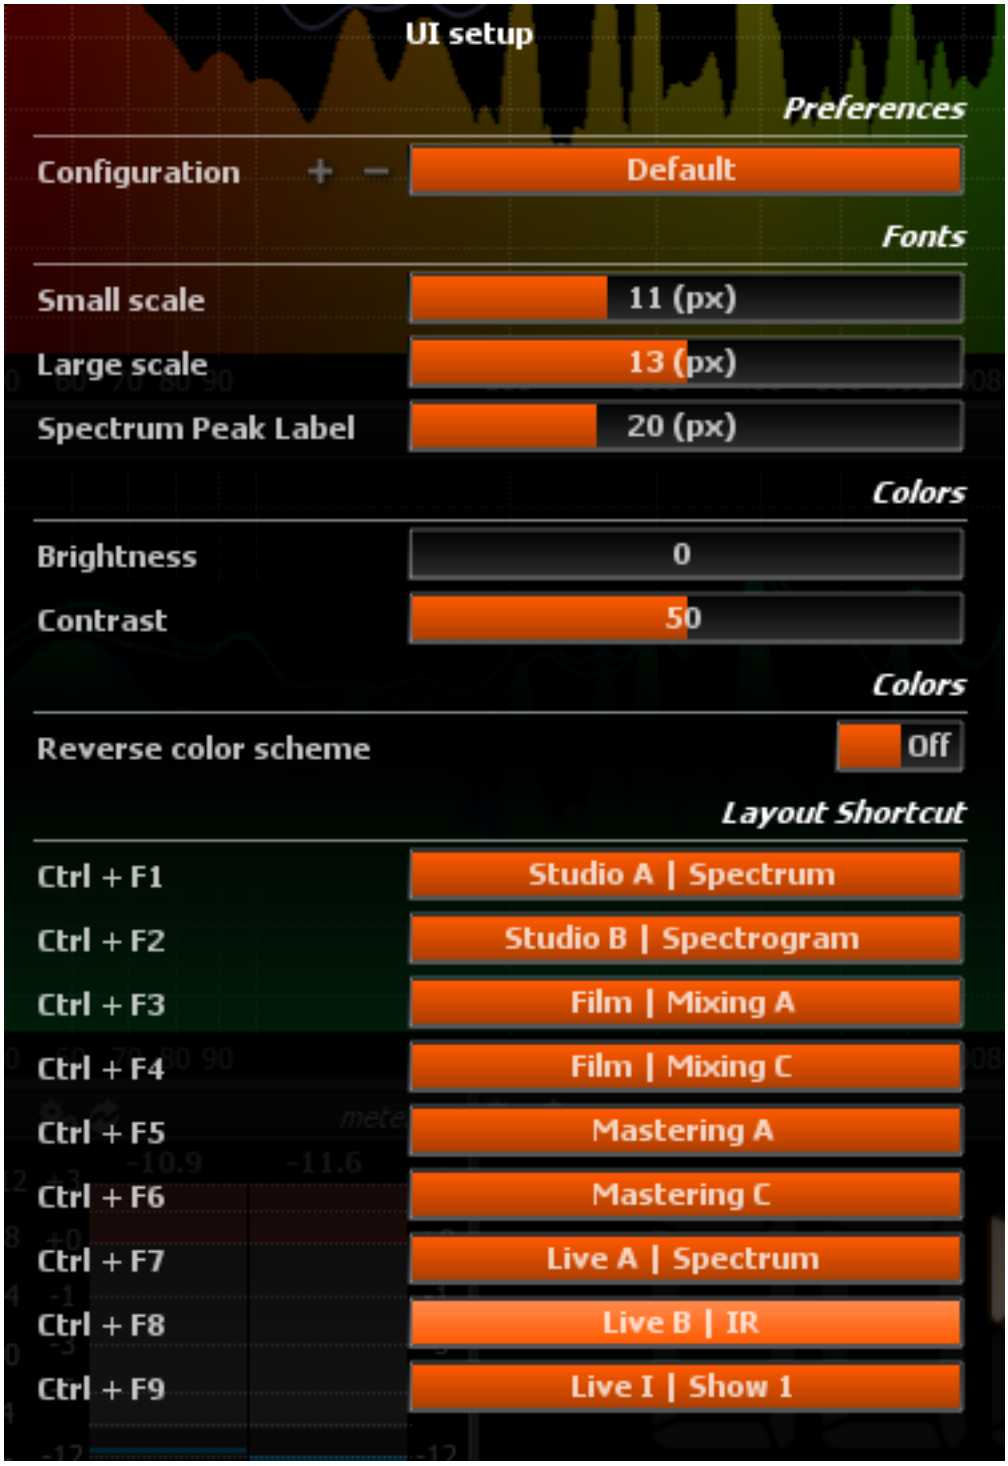

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

:::{.callout-note} User interface setup dialog

8.1 Configuration

Saves / restores a complete user defined configuration.

8.2 Fonts: Small Scale

Sets the size of the smallest font used for drawing the grid labels.

8.3 Fonts: Large Scale

Sets the size of the largest font used for drawing the grid labels.

8.4 Fonts: Spectrum Peak Label

Sets the size of the font used for the Spectrum peak label.

8.5 Brightness

Adjusts global user interface brightness.

8.6 Contrast

Adjusts global user interface contrast.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

8.7 Reverse color scheme

When engaged, the user interface color scheme switches from white/grey on black to black/grey on white, for improved readability in an outdoor environment.

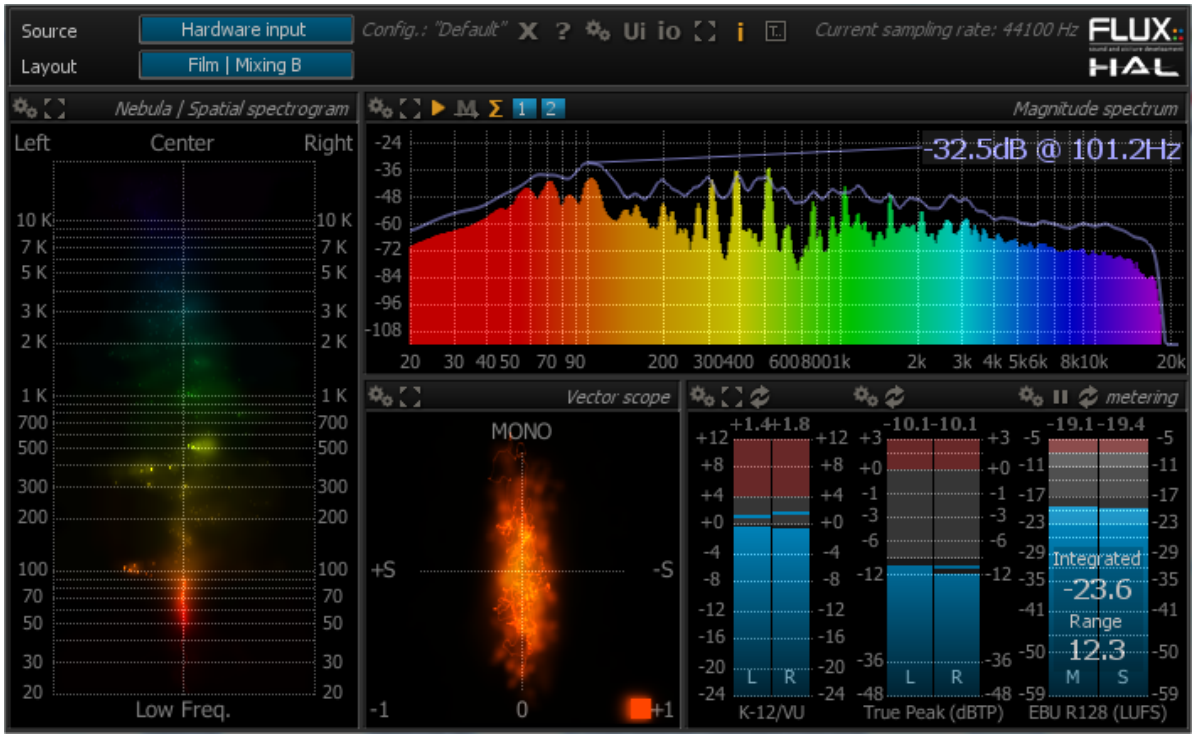

Reverse color scheme off.

8.8 Layout Shortcuts

This list allows you to set up to nine shortcuts for direct access to your most frequently used layouts.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

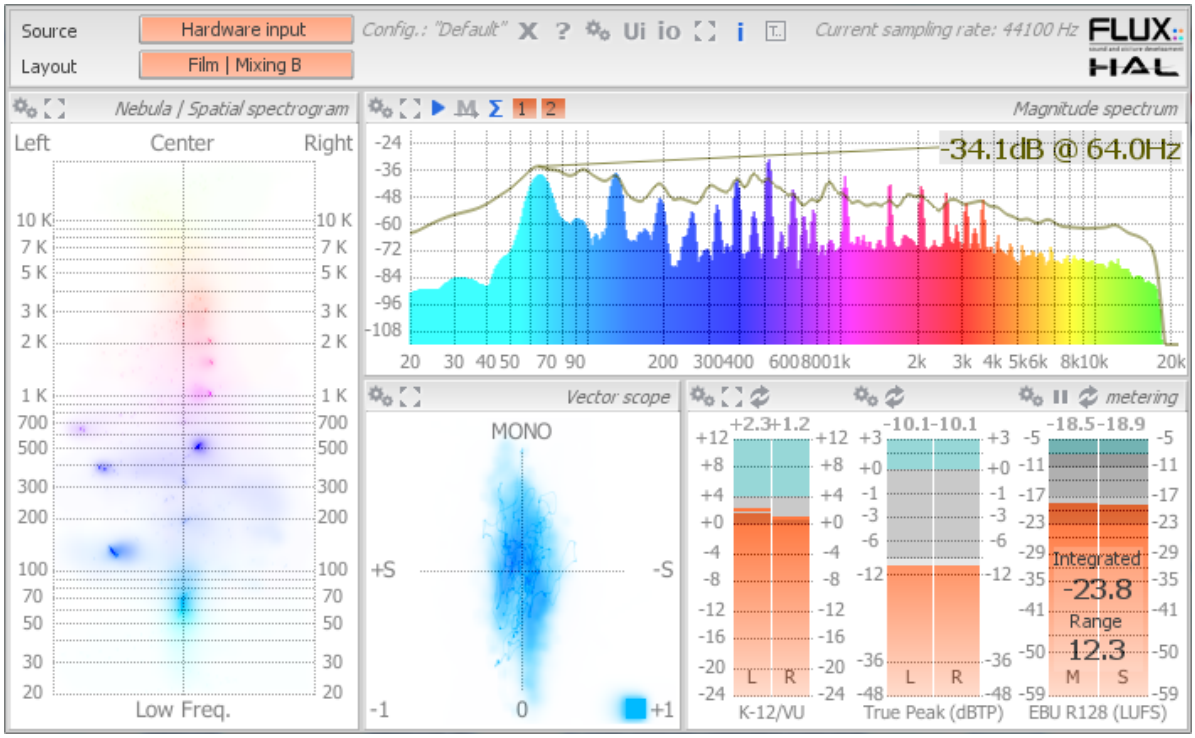

Figure 8.1: Reverse color scheme on.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

9 IO Configuration

9.1 Configuration

Saves / restores a complete user defined configuration.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

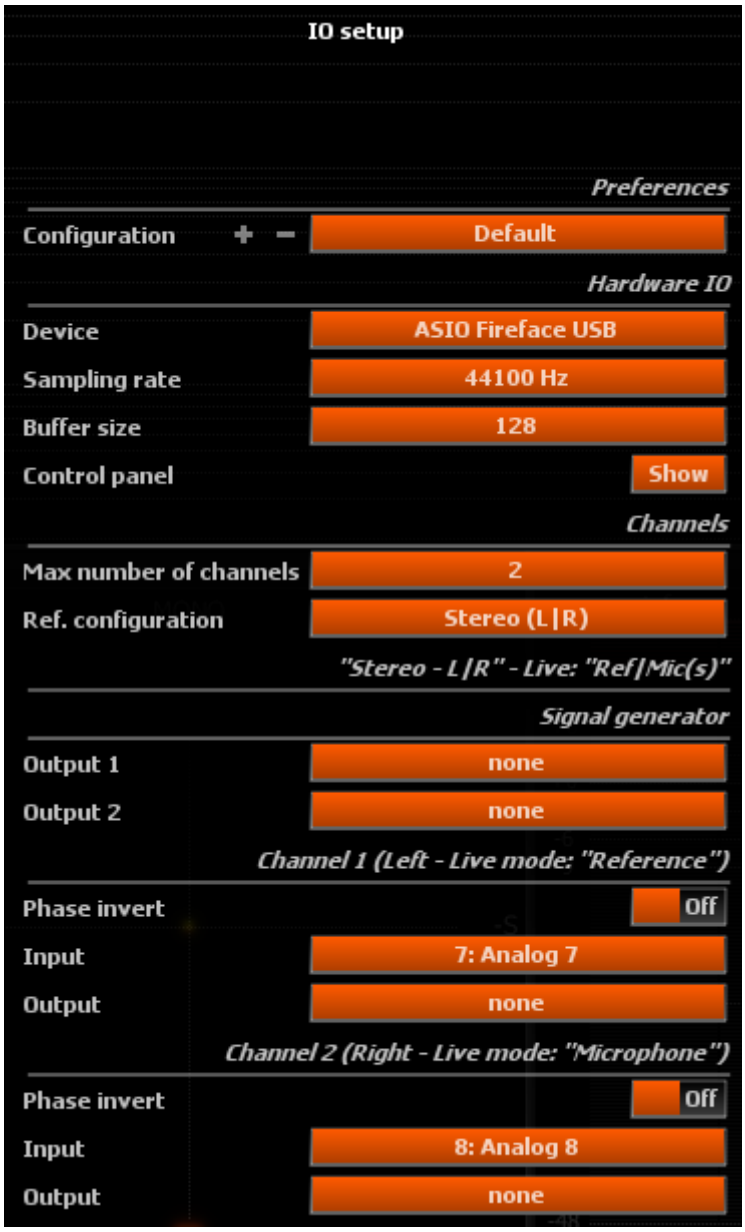

Figure 9.1: IO configuration dialog

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

10 Hardware IO

10.1 Device

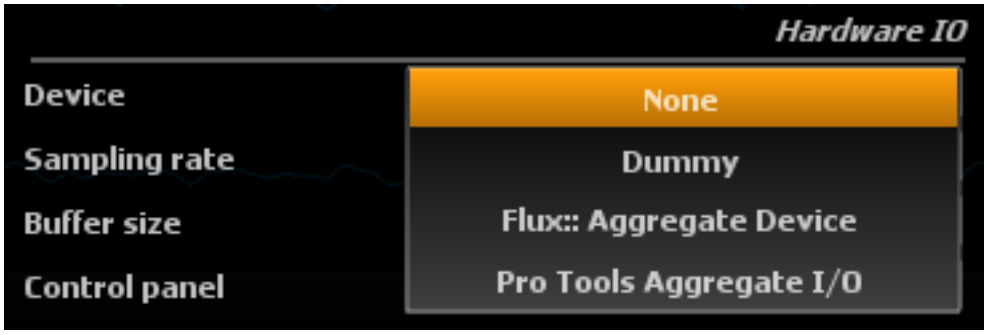

This setting lets you choose amongst a selection of devices, depending on your particular hardware configuration.

> ⚠ Warning
>
> **IMPORTANT!** - The Pure Analyzer Studio Session supports audio input only by using the SampleGrabber plug-in. No hardware input/output options are supported for the Pure Analyzer Session.

10.1.1 None

This disables hardware input and output altogether. This is the recommended choice if you do not want to take advantage of Pure Analyzer's built-in audio capabilities, for example if you're working with a SampleGrabber inside a DAW or Avid Venue console setup. With some sound cards that aren't multi-client capable - meaning only one program can access it at once - disabling I/O is necessary to continue using another program simultaneously.

10.1.2 Your soundcard

Any installed soundcard(s) will be listed here. Under Windows, it might appear several times, in which case be sure to select the native ASIO driver for performance, not an emulated driver

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

which be labeled something like ASIO DirectX Full Duplex Driver, Generic Low Latency ASIO Driver or similar.

10.2 Sampling rate

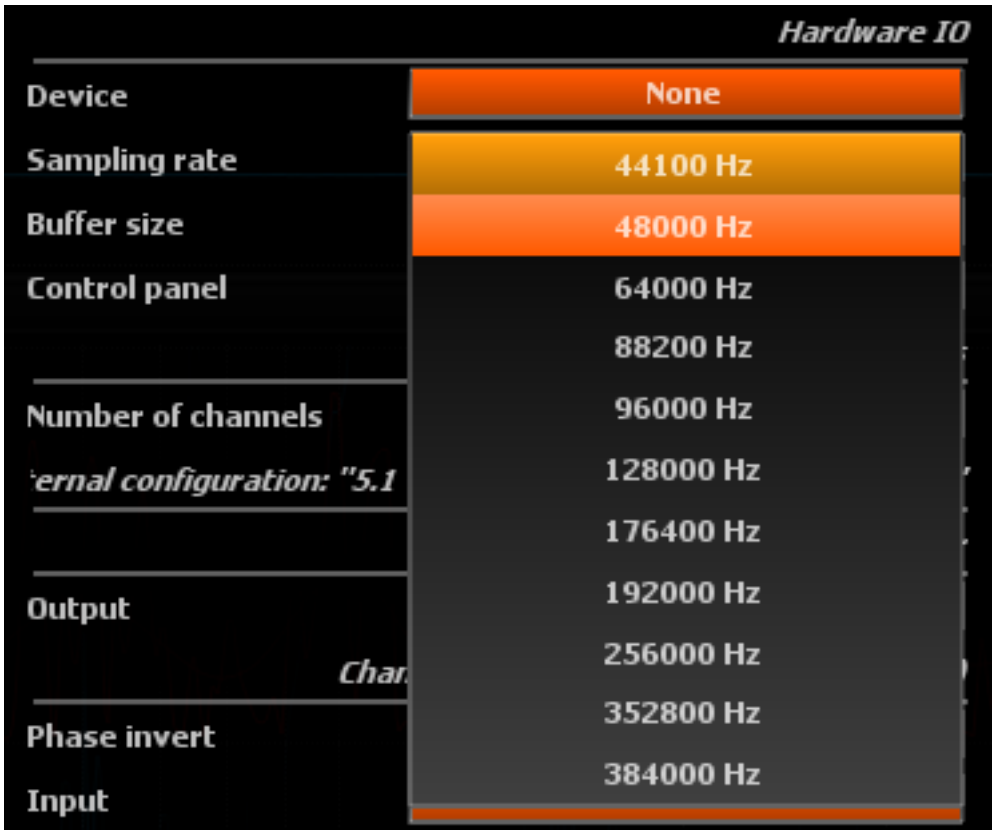

Figure 10.1: Available sampling rates (hardware specific)

Sets the sampling rate used internally by the application. When a hardware device is selected, be sure to match this to the sampling rate set in the application panel of your soundcard control panel. We deliberately chose not to employ resampling, which in our opinion has no place in a measurement instrument. Instead we generally advise you to set your soundcard's sampling rate to 44.1k or 48k, which covers the entire audio hearing range (20-20kHz). Increasing the sampling rate above these values increases the processing power required to carry out the computations without any benefit for most practical applications.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

10.3 Buffer size

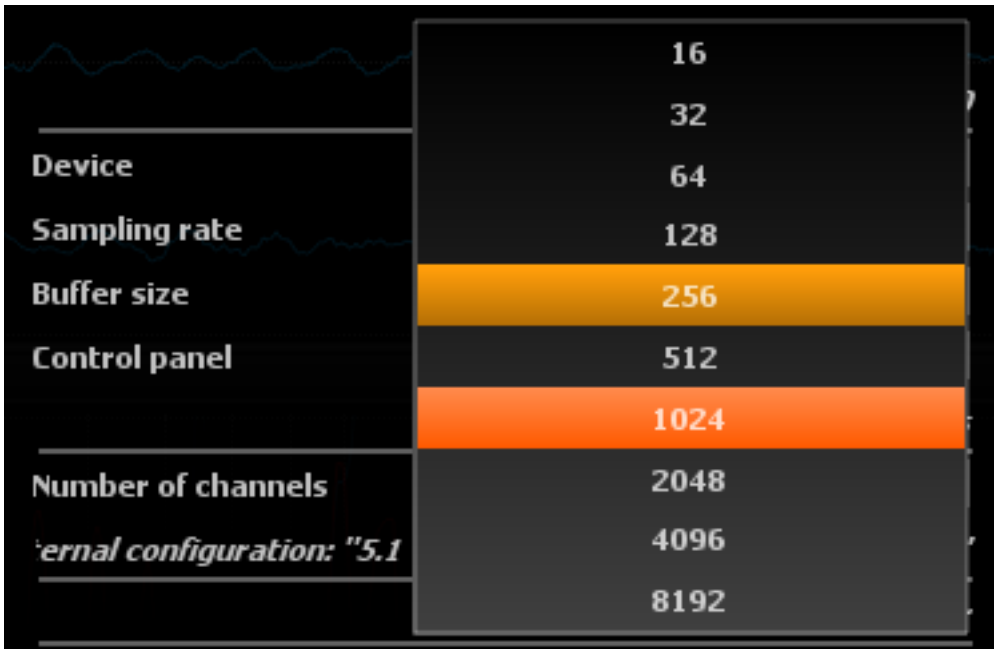

Displays the current soundcard I/O buffer size. Depending on your soundcard, you might be able to change this to a different value directly in Pure Analyzer without opening its control panel beforehand. Smaller buffer sizes leads to a shorter latency between incoming audio, display update, and audio output. This setting is certainly not as crucial as in the context of live sound processing, so there is no need to go down to extremely small values here, as this only increases the system load without offering any practical advantage.

Keep in mind a display refresh rate of 60Hz means one frame lasts for approx. 16ms, which is a bit longer than one 512 buffer at 44.1kHz, so the display will always lag less than one frame after the audio with such a setting.

10.4 Control panel

Opens the ASIO (Windows) / CoreAudio (MacOS) control panel for the selected soundcard driver, where you can make further settings depending on your particular hardware, such as routing, input gain etc.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

11 Channels

11.1 Max number of channels

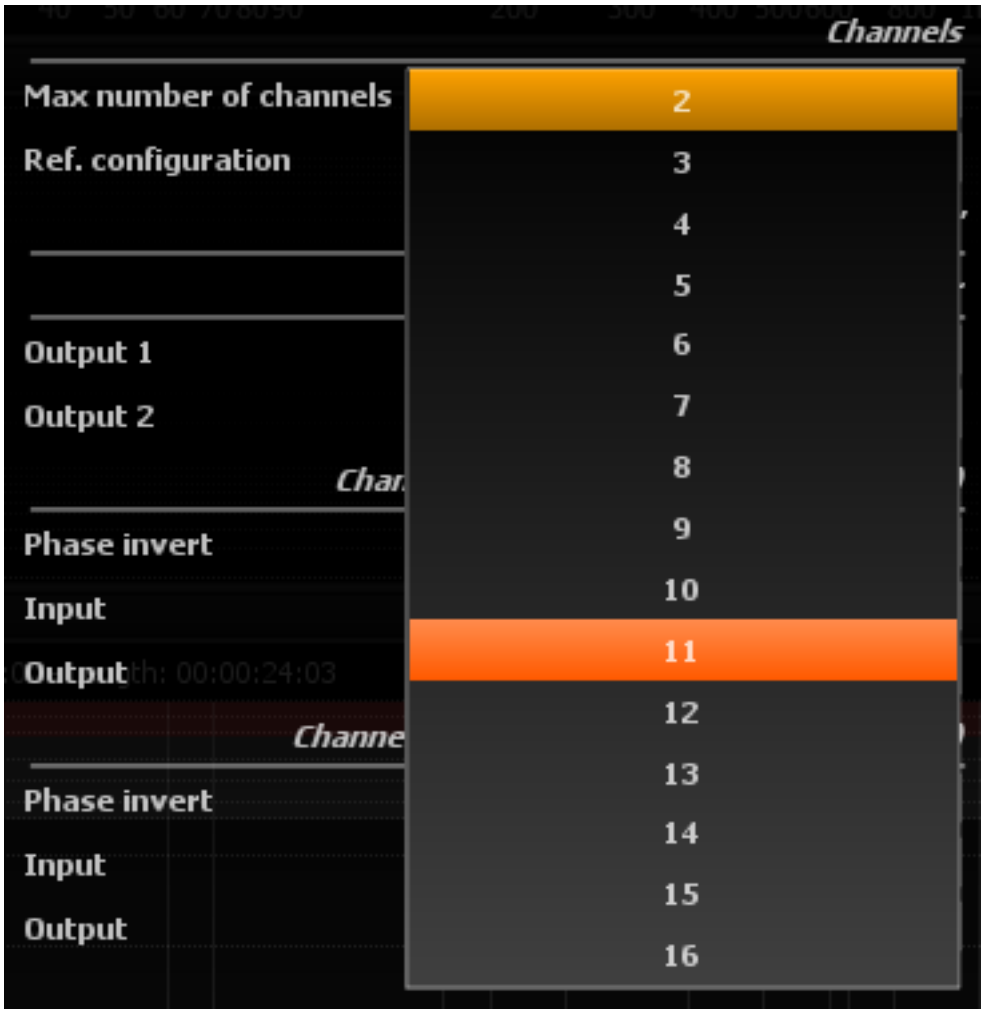

Selects the maximum number of channels to be used by the application, or equivalently the number of channels in the application I/O bus. You should set this according to the source

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

material format you want to analyze and visualize. This determines notably how many real-time curves are displayed in the Spectrum analyzer 18 view, whether the Surround scope 70 is displayed, etc.

> ⚠ Warning
>
> **IMPORTANT!** - The Pure Analyzer Studio Session supports only 2 channels of audio.

11.2 Reference configuration

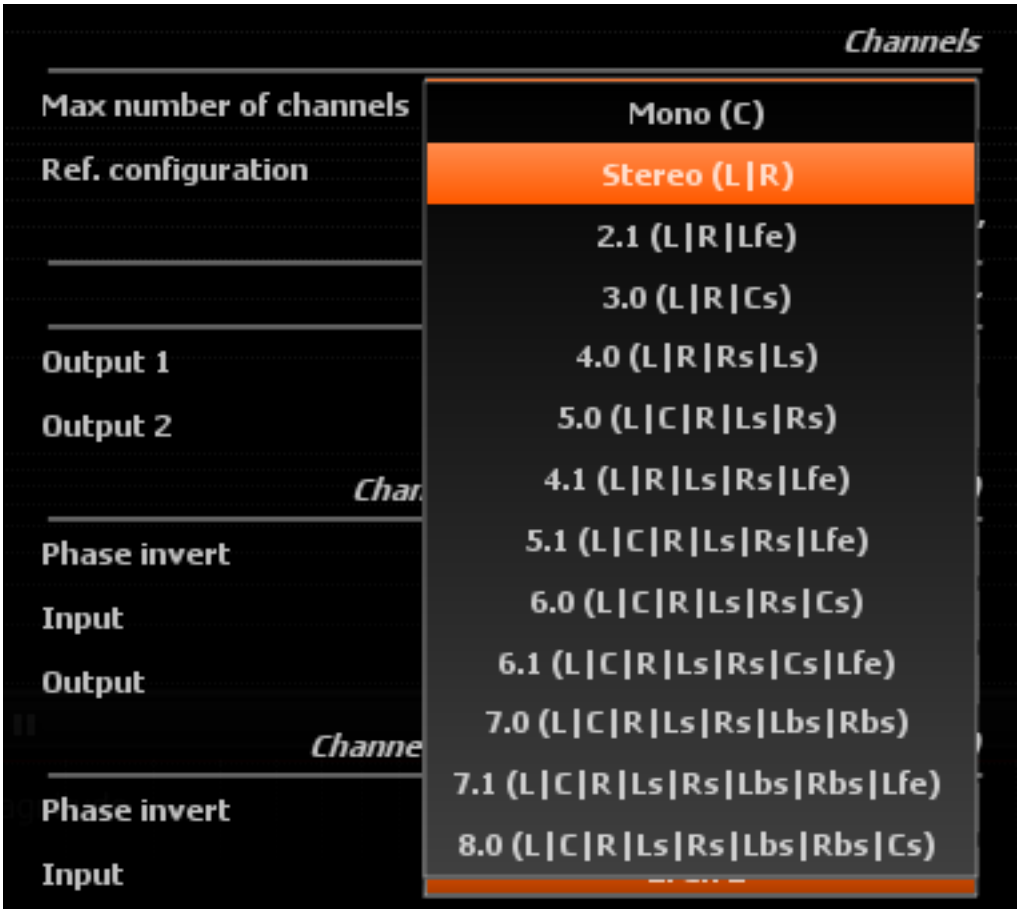

Figure 11.1: Reference configurations available with 8 max. channels

Depending on the setting above, the possible standard channel configurations will be listed here, and will be a subset of the following:

- Mono (C): single center channel

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

- Stereo (L|R): two left-right channels
- Surround: various standard configurations depending on the exact channel count

The channels are labeled according to this configuration to make them easier to identify.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

12 Signal generator

12.1 Output

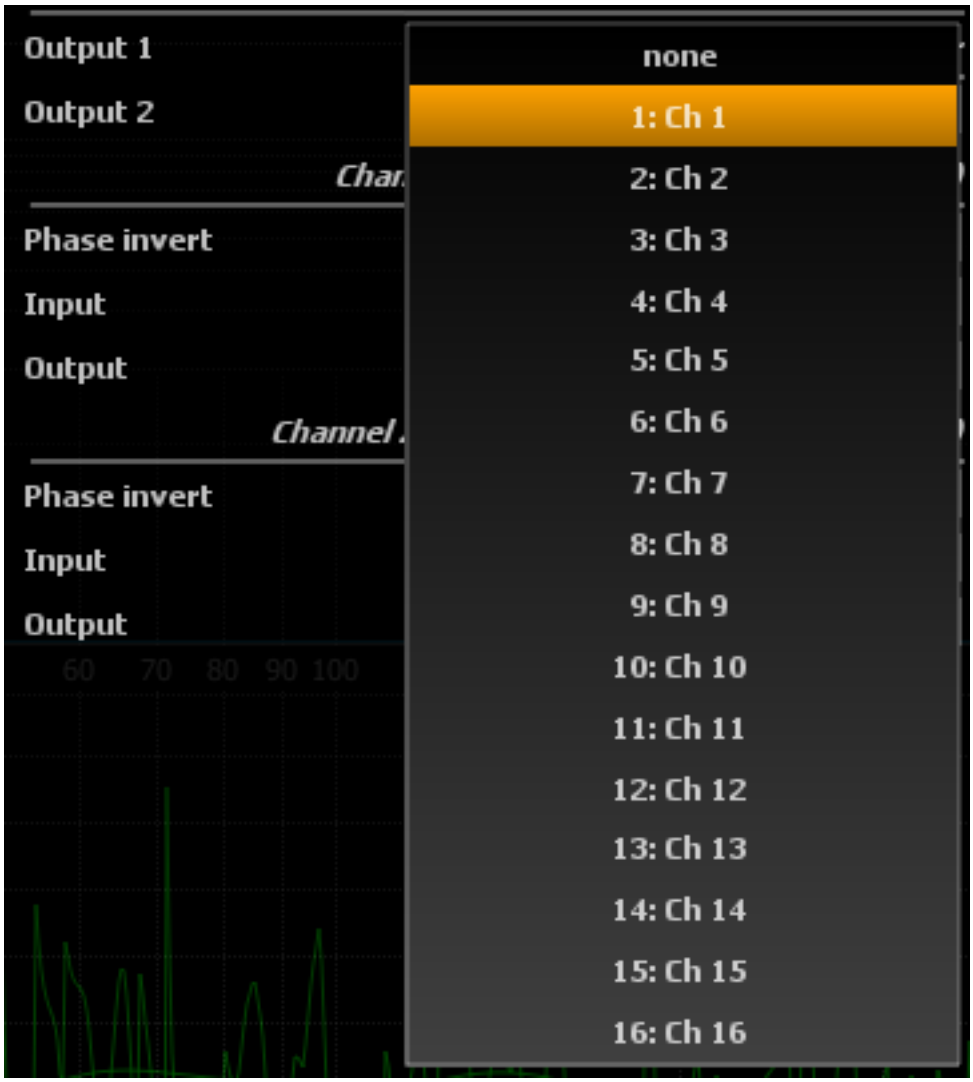

Figure 12.1: Example of a output channel routing (hardware specific)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Selects one or two physical channels to which the Signal generator 133 output should be sent.

> In case of stereo output, the signal is identical on both channels. This is provided as a facility for soundcards with minimal routing capabilities, and to avoid using a Y patch cable.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

13 Channel 1 / Channel 2

The following group of settings are displayed for every channel selected in Channels 11. The heading displays the channel number, followed by its name, and whether it corresponds to the reference or microphone input signal for the first two channels in **?@sec-live-IO** mode.

13.1 Phase invert

When engaged, the phase of the corresponding channel is inverted in order to compensate for a reverse polarity somewhere else in the signal chain. Default is off.

This can happen with incorrect or non-standard wiring, when a phase switch is engaged on the preamplifier, an analog device has an odd number of inverting stages … Use this with caution as it can compromise measurements if the "real" input signal phase does not match.

13.1.1 Input

Selects which hardware device input should be routed to the corresponding internal application input.

13.1.2 Output

Selects which hardware device output the corresponding internal application output should be routed to.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

14 Hold info text

When this button is disengaged, textual information overlays displayed above curves are held until the button is engaged again. This allows you to check a particular value precisely, such as an amplitude, gain, or phase at a particular frequency determined by the mouse cursor position when the switch was engaged. The most convenient to use this feature is to use the corresponding keyboard shortcut (*F6*).

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

15 Full-screen mode

Toggles full-screen mode on and off, to maximize screen real estate by masking the task bar (Windows) or Dock (MacOS) if desired.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

16 Close

Exits the application.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

17 Help / about

Displays the application credits, Pure Analyzer software version number, available options with the current license, as well as a table summarizing assigned keyboard shortcuts.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part III

Spectrum analyzer

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

18 Basic principles

The global principle and purpose of a spectrum analyzer is to transform an incoming signal, which is basically a series of amplitudes taken at successive points in time, into a series of values versus frequency. Transforming an audio signal onto a frequency scale is indeed of great interest in a wide range of tasks, and notably allows to display a global, perceptually meaningful and precise picture of the audio contents.

The display represents the so-called magnitude spectrum of the incoming signal, which is a two-dimensional curve of the magnitudes of the signal taken at frequencies ranging from 0 (DC) to half that of the current sampling rate (or Nyquist frequency in signal processing jargon). This is probably the most commonplace and most easily understood spectrum analyzer visualization, and the place where you should start most of the time when you want to inspect the frequency content of your audio material.

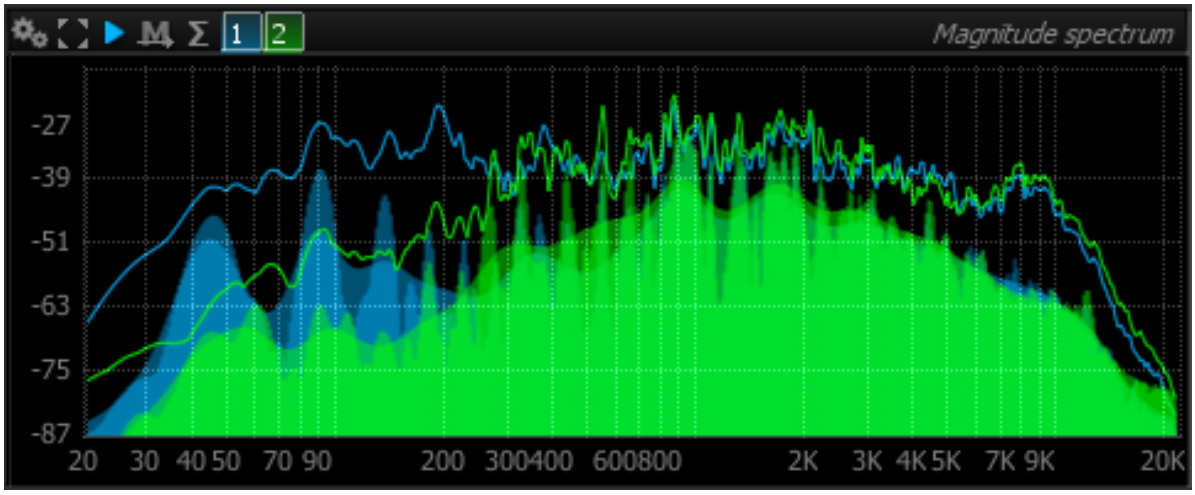

Figure 18.1: Magnitude spectrum of a stereo signal with summing disabled, max and smoothed curves enabled

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

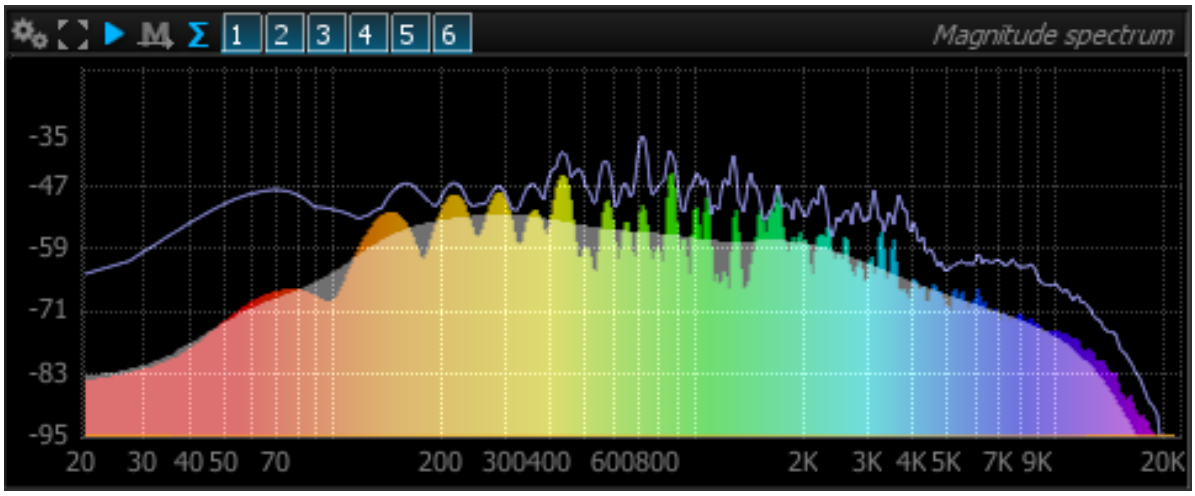

Figure 18.2: Magnitude spectrum of a 5.1 surround signal sum with max and smoothed curves enabled

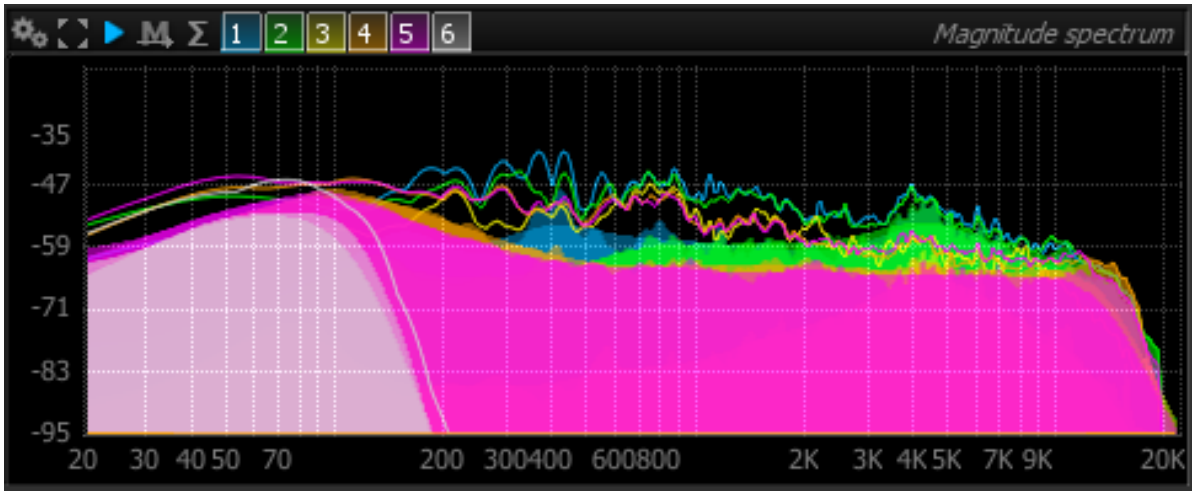

Figure 18.3: Magnitude spectrum of a 5.1 surround signal with summing disabled

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

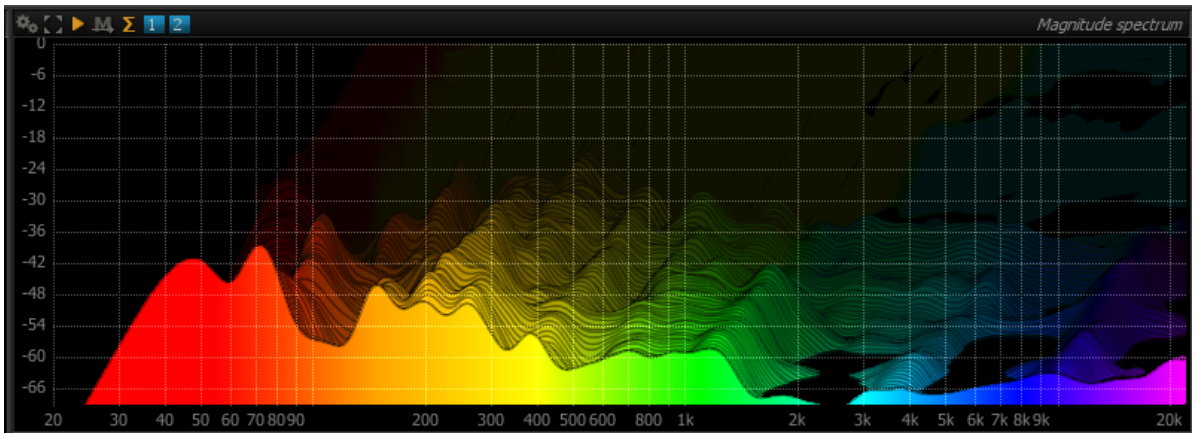

Figure 18.4: Magnitude spectrum with Slide option enabled (Real time waterfall)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Figure 18.5: Magnitude spectrum setup dialog

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

19 Block size

Keep in mind that the incoming audio needs to be accumulated in a buffer for a certain amount of time before the data can be computed and the display updated. In contrast with the buffers you probably know from soundcards, this block-processing is not just a computer technicality and only a source of undesirable latency, but an integral part of the process related to the mathematical aspects involved (Time-frequency product uncertainty principle).

As such, it determines both the precision of the analysis and the maximum display rate, and should be adjusted depending on the specifics of your application.

> In order to maintain a sufficiently responsive display refresh rate, blocks overlap by 75 %.
>
> The default setting is 8192 samples, which corresponds to a length of roughly 180ms at 44.1kHz sampling rate. This value constitutes a good compromise between precision and responsiveness for most situations. However, if you need to measure a particular frequency with great precision, you should raise the analysis block size. On the other hand, if you need to follow rapid spectrum variations, this value should be lowered.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

20 Transform type

The discrete Fourier transform (DFT) is the traditional method employed to compute the frequency spectrum of a discrete digital signal. DFT can be seen as a series of notch filters centered around frequency bins that are uniformly distributed along the frequency axis, and of constant width.

The quality factor of a resonant filter, commonly denoted as Q, is defined as the ratio of its bandwidth relative to its center frequency. The DFT process is therefore analogous to a variable Q filter-bank: in other words, its frequency resolution is constant across the spectrum. When applied to sliding blocks, this process is called STFT, for Short-term Fourier transform.

Although convenient in terms of computation, this can be seen as less than ideal for many audio applications, for several reasons, the first and foremost being that human perception of frequency is known to be quasi-logarithmic. Logarithmic means that a two-fold increase in frequency translates to a one octave shift, a four-fold increase as a two-octave shift - and not four as this would be the case, were our perception linear in nature.

Pure Analyzer employs both standard DFT and proprietary algorithms that more closely model the human perception. In addition to greatly improving the legibility of the resulting curves, this proprietary transform has the additional benefit of reducing sensitivity to noise in the high-frequency portion of the spectrum especially, and provides more stable readouts.

> **Note**
>
> You can of course switch back to standard DFT by disengaging the Pure spectrum button.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

21 Window type

As previously mentioned, the first step is to split the incoming signal into overlapping blocks. Each block is then multiplied with a so-called window signal prior to the spectrum computation. The purpose of this is to minimize side effects of the block processing, such as introduction of transients at the block boundaries, etc.

The window type to use is set in the Main 7 setup.

> **Note**
>
> We suggest you leave this setting to the default unless you are quite knowledgeable with these aspects, or in the case you should need to explicitly recreate a specific measurement such as a particular method specified in a standard's document.

The Wikipedia entry on window functions in the context of signal processing is a good reference if you want to get a more thorough understanding of the subject.

> **Note**
>
> While the windowing process is implemented in the time-domain, it can be also be seen as a smoothing filter in the frequency domain, and as such the choice of window is a compromise between frequency resolution and immunity to artifacts. Skipping the windowing process altogether, which is the same as applying a rectangular window, is not recommended. Although the rectangular window provides the best frequency resolution, it has very poor leakage characteristics.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

22 Ballistics

The curve display update speed is controlled by the ballistics settings.

22.1 Release time

The release time determines how fast the main curve falls back to zero. Default is 300ms.

22.2 Max release time

The controls the release time of the optional *Max* curve, which serves to display the medium-to-long term tendency of the magnitude spectrum. Longer times mean curve maxima/peaks will be seen for a longer period.

Default is 50 seconds.

> **Note**
>
> The attack time is zero so the curve displays reacts instantaneously to a rising amplitude.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

23 Averaging

This is a global setting controlled in the Averaging section of the main setup.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

24 Frequency scaling

Scaling controls how the scaling applied to spectrum magnitudes. This is a global setting accessed through the Main 7 setup panel.

Scaling controls whether frequency-dependent amplitude scaling should be applied. This affects how various standard reference signals register on the display. The default power scaling will result in a signal with spectrum components of constant power registering as a flat curve, whilst amplitude will have the same effect for components of constant amplitude such as pure tones (sine signal).

The table below shows how the curve appearance depending on the type of input signal. 1/f corresponds to a rectilinear slope on the display with both X and Y axis being logarithmic.

Input signal	Sine	White	Pink noise
Power scaling	1/f	1/f	Flat
Amplitude scaling	Flat	Flat	1/f

For monitoring a mix, it makes most sense to use power scaling, as this is the way our hearing responds. If you need to measure a room's acoustic response, an outboard unit or a plugin's frequency response, the system magnitude transfer function is best suited for this purpose and scaling has no effect.

The amplitude scaling setting should therefore really be employed if you need to measure relative amplitude values, such as those of sine test tones at various frequencies. Also, note that plain DFT corresponds to scaling set to amplitude.

The power of a time-signal is proportional to the square of its amplitude, or equivalently, its power in dB is double the amplitude. However, in the case of a spectrum, we are measuring the output of a filter-bank, which reacts very much differently depending on the type of input signal, so the simple previous formula doesn't apply anymore.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

25 Display range

Display range can be switched from a fixed reference interval to one that automatically adjusts to the current range of spectrum magnitude values. The latter is useful as a set and forget setting and works well to display the most vertical detail, at the expense of losing the ability to visually compare the current values to a reference level.

25.1 dB Min / dB Max

Sets the minimum and maximum magnitude to display, in decibels. This is visible the range of the display that is taken into account when auto-range is off.

Default range is -18dB (min) to -114dB (max).

25.2 Range mode

Default is *Manual*.

25.2.1 Manual

Uses a fixed range as specified by the above settings.

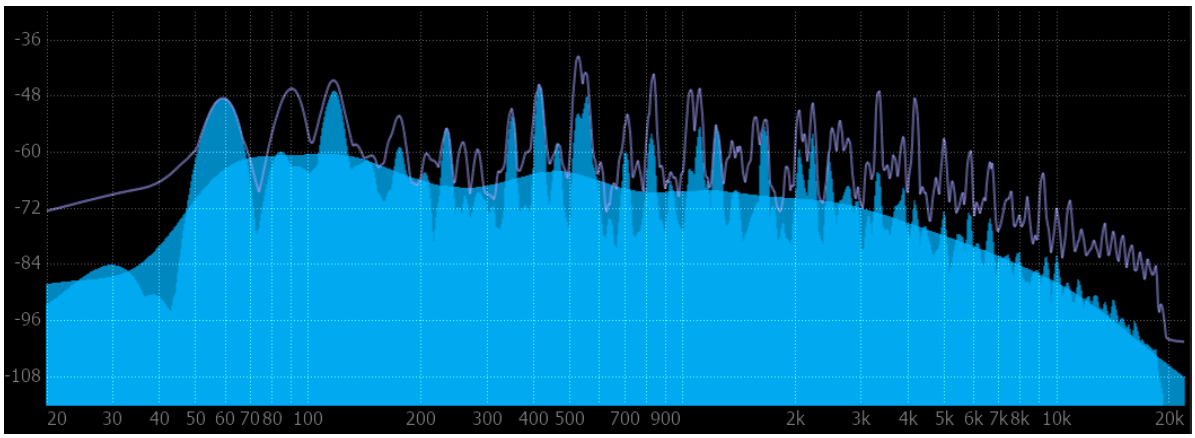

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

25.2.2 Auto

When engaged, auto-range continuously adjusts the display to the current range of the data.

> **Note**
>
> A slight envelope is applied to the auto-range values in order to improve legibility, avoiding the display to follow every minor change. Peaks are always registered however, as these provide valuable information that should not be missed.

25.2.3 Compressed

The range is defined by dB Min/Max values, and the Y-axis is also compressed in the lower range. This can bring out peaks and valleys in the spectrum to better visualize resonant frequencies and such.

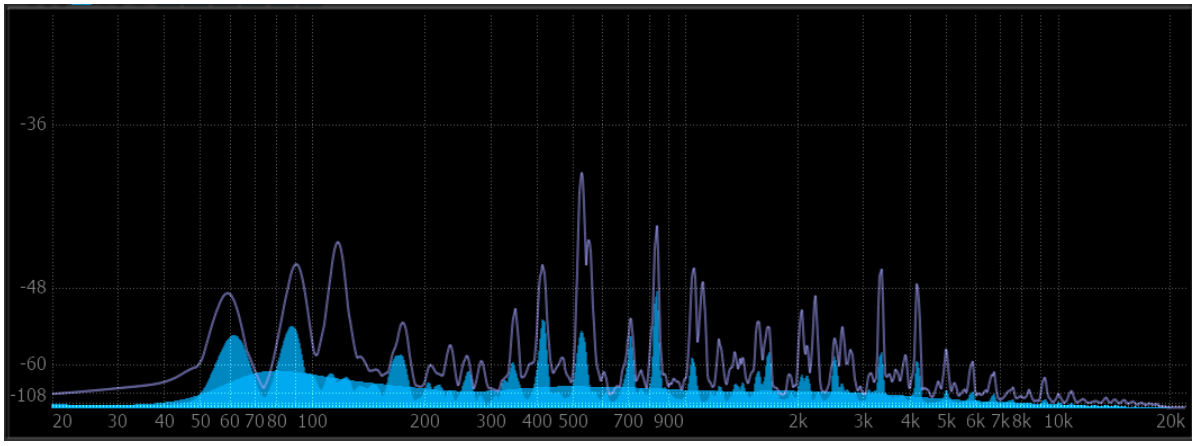

25.2.4 Compressed | Auto

Combines *Compressed* and *Auto* modes.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

26 Smoothing mode

Switches between Window (the default) and various per-octave smoothing types.

When Window type is selected, a sliding window average of adjustable width is applied to the curve, which results in more or less frequency detail being removed, depending on the Smoothing detail setting.

When any of the Octave types are selected, the average of the spectrum over the corresponding ISO bands is displayed, as series of horizontal bars. The following series are available: * Octave * 2/3 octave * 1/2 octave * 1/3 octave * 1/6 octave * 1/12 octave

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

27 Smoothing detail

Controls the amount of frequency detail of the smoothed curve, when using window smoothing. The value roughly corresponds to the maximum number of valleys and peaks that can stand out the smoothed curve. A low value lets the global tendency of the amplitude spectrum pass through, while values above 20 or so preserve more detail such as harmonics and sharp equalizer cuts and boosts. Default is 3.

> **Note**
>
> This curves acts as a kind of zoom-out control, as it shows the global frequency content of the signal, leaving out details such as harmonic peaks and variations imputable to transient and noise components. Typical uses for this curve is to monitor the global frequency balance of a mix and to visualize the influence of broad equalizer corrections on the mix.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

28 Curve display

Toggles between the following curve display modes: * Full: main curve only (no smoothing). * Smoothed: smoothed curve only. * All: both unsmoothed and smoothed curves.

> **Note**
>
> Selecting one of the first two modes is recommended to avoid display clutter when comparing several channels and/or snapshots.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

29 Max curve

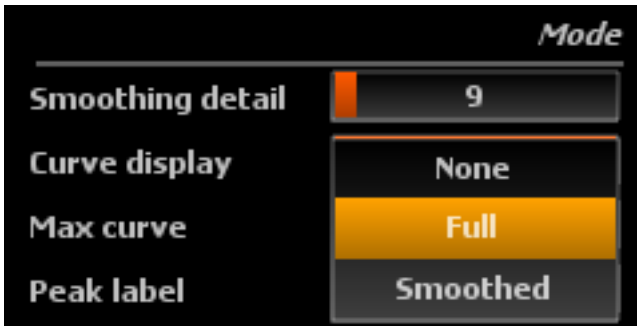

The max curve employs much longer release time compared to the main curve, and as such registers short peaks much more easily.

The max curve setting controls its visibility and whether smoothing is applied: * None: curve not displayed. * Full: visible, unsmoothed. * Smoothed: visible, smoothed.

> **Note**
>
> The max curve is never displayed for snapshots, as it would be the same as the main curve, since this type of curve does not evolve in time.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

30 Peak type

This setting controls the manner in which spectrum magnitude peaks are computed: * Max (global): compute a global maximum over the entire spectrum range. * Max (user): compute the maximum across a user defined portion of the spectrum set in the Peak range.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

31 Peak label

Determines the appearance of the peak display: * None: peaks are not shown. * Bar (Full): vertical bar at current peak located at current frequency. * Bar: vertical bar from base to peak value. * Mark: text box indicating peak value, in dB, and frequency (Hz) at peak location. * Mark + Arrow: same as above, with text at the top of the display and arrow pointing at peak location. This is the most precise indication, but takes up more space.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

32 Peak range

Used in combination with the Max (user) Peak type setting, this defines the minimum and maximum frequencies to take into account when computing the peak.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

33 Summation

These settings allow you to modify the appearance of the curves in channel sum mode.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

34 Filled

Toggles whether the main curve is drawn as a solid-color fill or a plain line.

Default is on.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

35 Width

Thickness of the pen used to draw the curve lines, in pixels.

Default is 1.0.

This setting also affects individual curves when channel sum mode is disabled.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

36 Full curve color

Color of the pen used to draw the main, full-detail, unsmoothed curve.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

37 Smoothed curve color

Color of the pen used to draw the smoothed curve.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

38 Max curve color

Color of the pen used to draw the max curve.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

39 Color grading

Applies an optional frequency-dependent coloring to the main channel-sum curve.

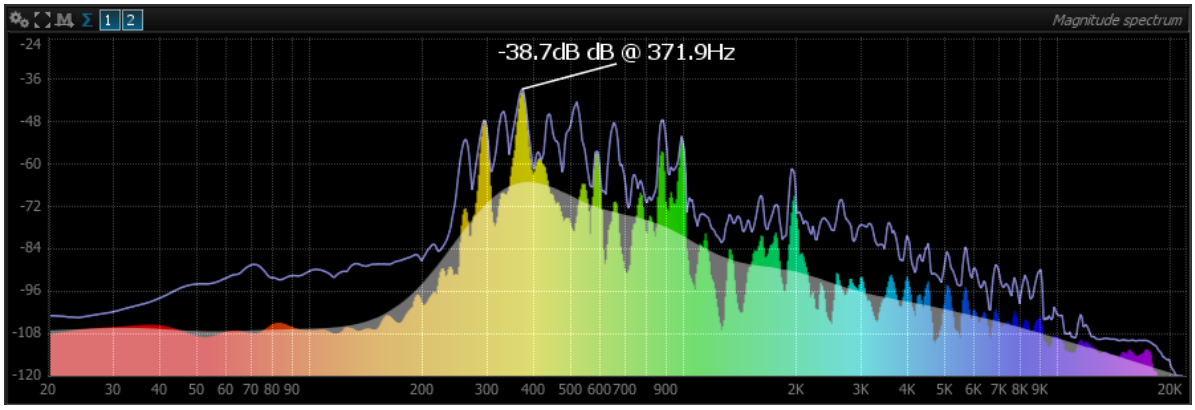

Magnitude spectrum with color grading enabled

> **Note**
>
> When enabled, any of the above fixed color settings are overridden.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

40 Channels

This group of settings controls the appearance of curves when channel sum mode is disabled. There is one Ch.N curve color setting per channel, so you can fine-tune the color scheme employed if you wish to do so.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

41 Filled

Controls whether channel curves are drawn as a solid color fill or a plain line.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

42 Opacity

Controls the opacity of the fill when Filled is enabled. 100% gives a fully opaque fill, lowering this value makes the curve fill more transparent.

#Channel curve color This setting controls the color of the curve corresponding to the nthchannel, when summation mode is disabled.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

43 Slide (Real Time waterfall)

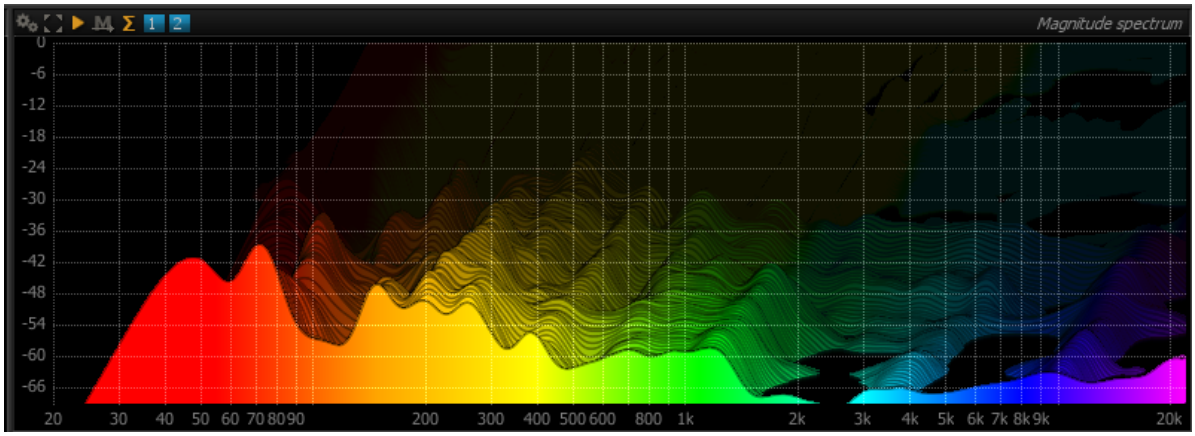

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

44 Enable

Enable/disable the slide mode.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

45 Direction

Define the sliding Direction. From -5 to 5.

Default is 0.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

46 Fading

Controls display persistence, i.e. the “fade to black” amount for a frame. Lowering this value retains past particles longer, whereas increasing this make them disappear faster.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

47 Blur

Enable / Disable sliding blur.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

48 Blur Kernel Size

Controls the radius of the blur effect applied to past particles. Particles are “smeared” more and more as they become older, depending on this setting. Naturally, a bigger value increases the smearing, at the expense of processing power.

> **Note**
>
> Choosing the value for this setting is really matter of taste, although please keep in mind values that above 5 will require a sufficiently powerful graphics card in order to maintain a responsive display.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

49 Zoom

This setting allows to check and change the current X-axis zoom level.

Default is 1.0, which corresponds to the whole frequency spectrum. Zooming with the mouse is the preferred way, as it offers more control.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part IV

Nebula (spatial spectrogram)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

50 Principle of operation

Nebula / Spatial Spectrogram provides a unique representation of the audio material in terms of spectral content and localization in the stereo and/or surround space. Its combines the functionality of a spectrum analyzer and a vector scope in a novel real-time display. As such it provides to be an invaluable tool to get a complete and detailed overview of your mix, which you can finely tune in many aspects to suit your particular needs and preferences. A lot of work has gone into optimizing the real-time rendering of the display, not solely for aesthetic reasons, but because we wanted the display to react instantly to all the details in the incoming audio. The idea is literally for you to be able to see what you hear and feel, and not some gross simplification wrapped into shiny eye-candy, however pleasing to the eye.

The overall principles behind Nebula / Spatial Spectrogram are quite straightforward:

- At any given time, and for every frequency, the engine computes the position of a frequency in space (2D in stereo , ND for N channel-surround). This position is taken as the center of gravity of the various channels, weighted by the relative amplitude of the signal in their corresponding channel.
- A projection onto an LR-spectrum plane is computed, giving a spectrum-space frame constrained to the stereo field.
- Incoming spectrum-space frames are added back to the previous frames.
- Past frames are progressively “forgotten”, using blur and dimming, in order to make place for new information, and increase legibility.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

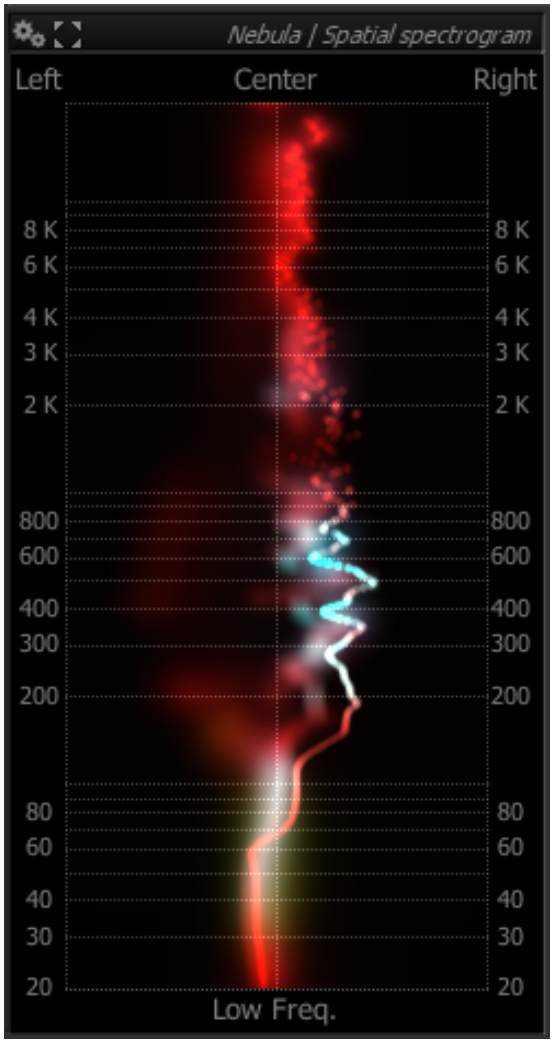

Nebula / Spatial Spectrogram display with stereo input

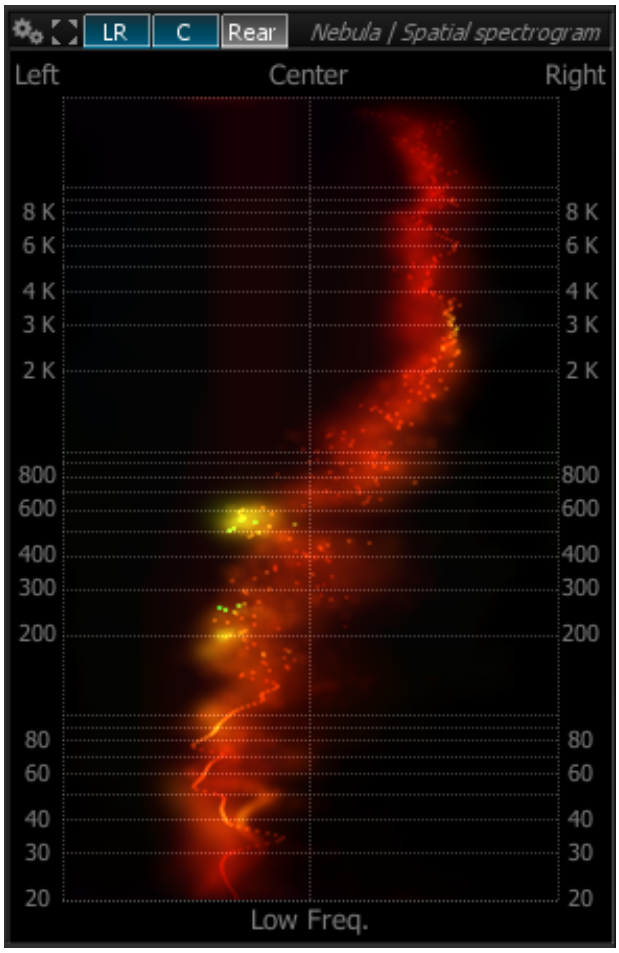

Nebula / Spatial Spectrogram display with surround input

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Nebula / Spatial Spectrogram setup options

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

51 Focus

Controls the stereo image width X-axis display range, in dB.

A value comprised between ±18 and ±24dB correlates well with our abilities in perceiving the stereo image.

Default is ±18dB.

> **Note**
>
> Pixels outside the focus range are clamped to the view boundaries.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

52 AutoScale

This parameter controls whether the intensity of the particles are modulated by the overall audio level variations. In essence, when enabled, the color nuances will vary according to the relative amplitude of a frequency, allowing to monitor the relative amplitude spectrum variations. When disabled, the color will reflect the absolute audio level. You can also think of this as a kind of auto-gain setting.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

53 AutoScale release

This controls whether color variations should be smoothed in time or not. When engaged, color variations is slowed down a bit, which makes overall level transitions more obvious.

> You should to enable this setting when you want to visualize quick level variations such as those that frequently occur in movie soundtracks.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

54 Linear blend range

Adds a constant blend amount to the particle. This ensures some particles are always blended into the image even if its original magnitude is low.

A low value for this setting has the effect of stabilizing the appearance of particles. With large values more of the spectrum dynamics are taken into account, and only peaks mostly come through.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

55 Log blending

Toggles between linear and logarithmic blending of the current particle with old particles.

The default is off, i.e. linear blending, which tends to favor the display of peaks.

Logarithmic blending on the other hand preserves more of the full dynamic range of the data, and also gives some visibility to lower levels.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

56 Fading

Controls display persistence, i.e. the “fade to black” amount for a frame. Lowering this value retains past particles longer, whereas increasing this make them disappear faster.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

57 Size factor

Controls the size of individual particles with respect to screen size.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

58 Blur kernel size

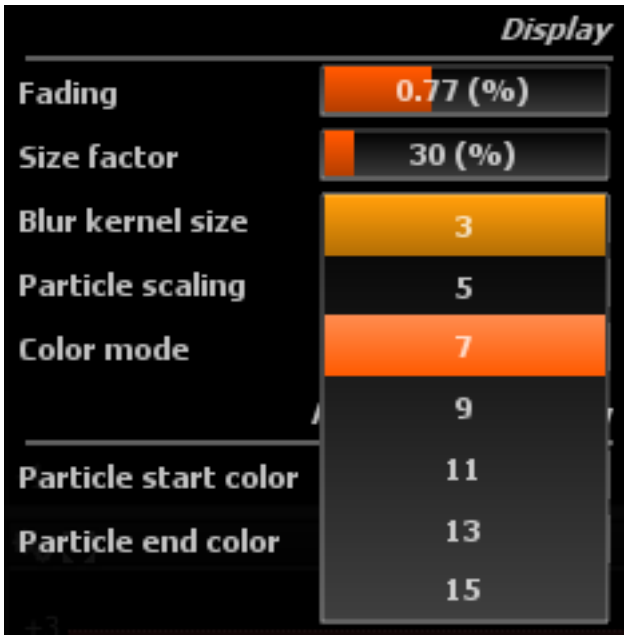

Controls the radius of the blur effect applied to past particles. Particles are “smeared” more and more as they become older, depending on this setting. Naturally, a bigger value increases the smearing, at the expense of processing power.

> **Note**
>
> Choosing the value for this setting is really matter of taste, although please keep in mind values that above 5 will require a sufficiently powerful graphics card in order to maintain a responsive display.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

59 Particle scaling

Toggles automatic adjustment of particle size with screen size. When enabled, the overall aspect of the display will remain similar even if the view size changes.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

60 Color mode

Provides the following particle-coloring modes: * Power: the color varies according to the power of the signal in the frequency region * Dynamics: same as previous except this mode works on signal dynamics * Power / dynamics: a mix of the above * Frequency: the color varies according to frequency only, using a rainbow-palette

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part V

Vector scope

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

61 Usage

The vector scope tool is displayed when a stereo input is detected, otherwise the display will switch to Surround scope 70 provided if your edition of Pure Analyzer includes this option.

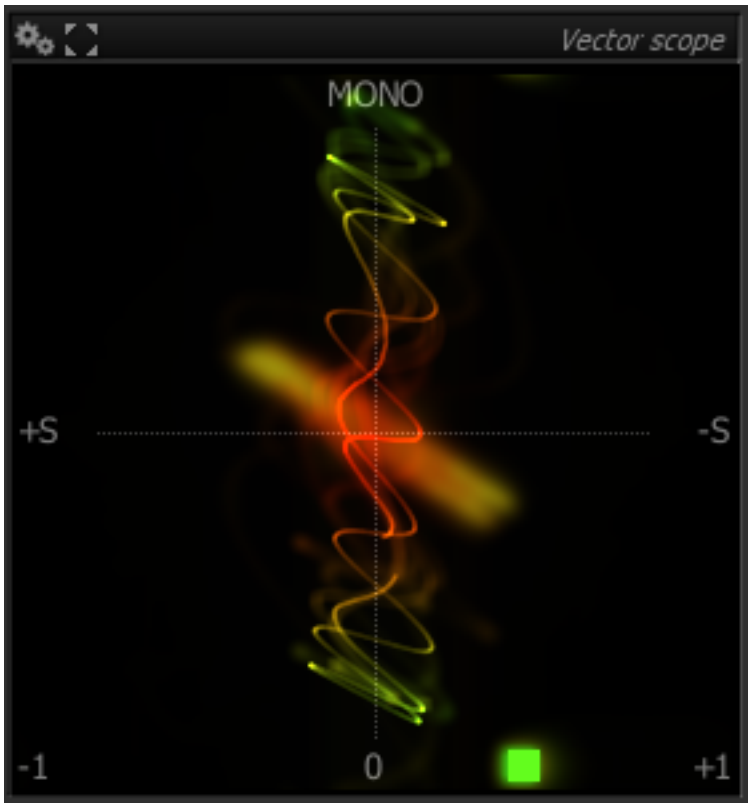

Figure 61.1: Vector scope display in stereo.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

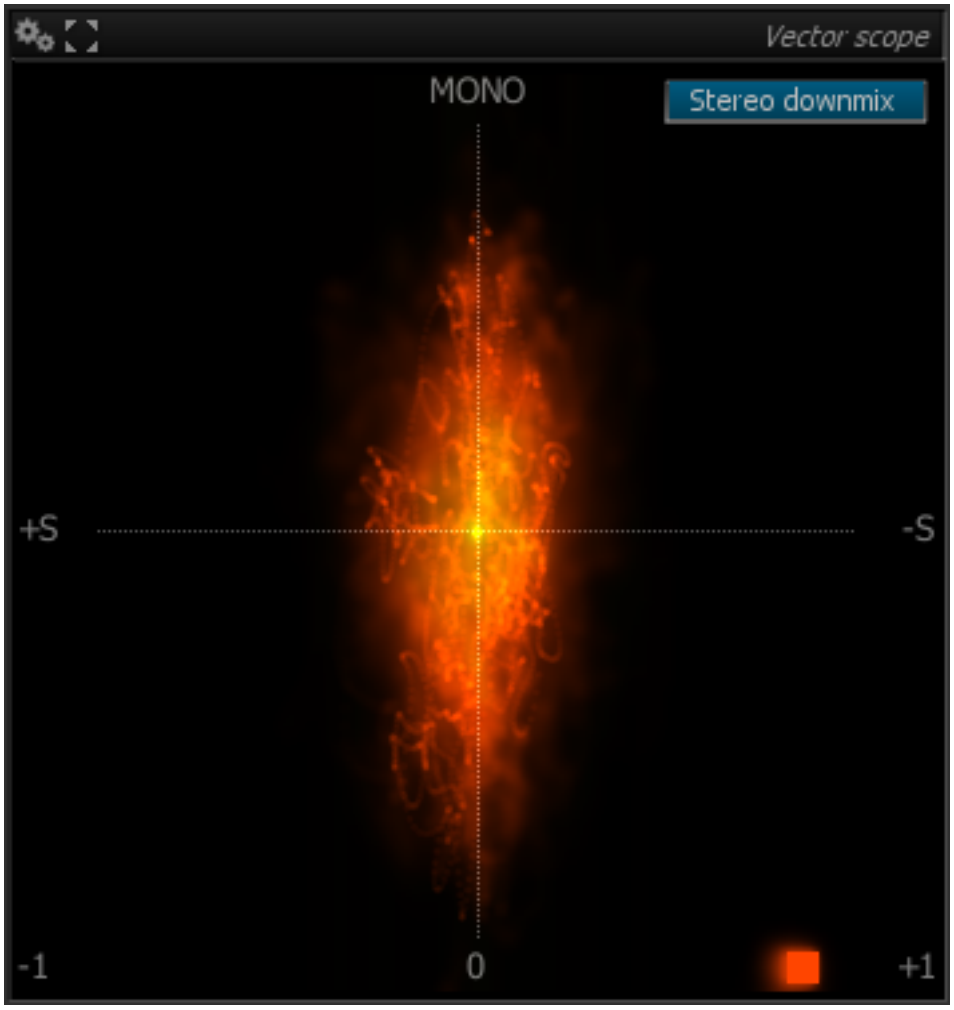

Figure 61.2: Vector scope display in surround (with selection menu).

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

61.1 Modes in Surround :

L-R

Use only Left and Right Channels.

Front

Use a stereo down mix with all front channels.

Rear

Use a stereo down mix with all Rear channels.

Stereo downmix

Use a stereo down mix with all channels.

Lt/Rt downmix

Use a Lt/Rt down mix with all channels.

LR-Lfe

Use a mono summation of Left and Right + the Lfe (sub) channel.

Center-Lfe

Use Center + Lfe (sub) channel.

Front-Lfe

Use a mono summation of the front channels + the Lfe (sub) channel.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

62 Display

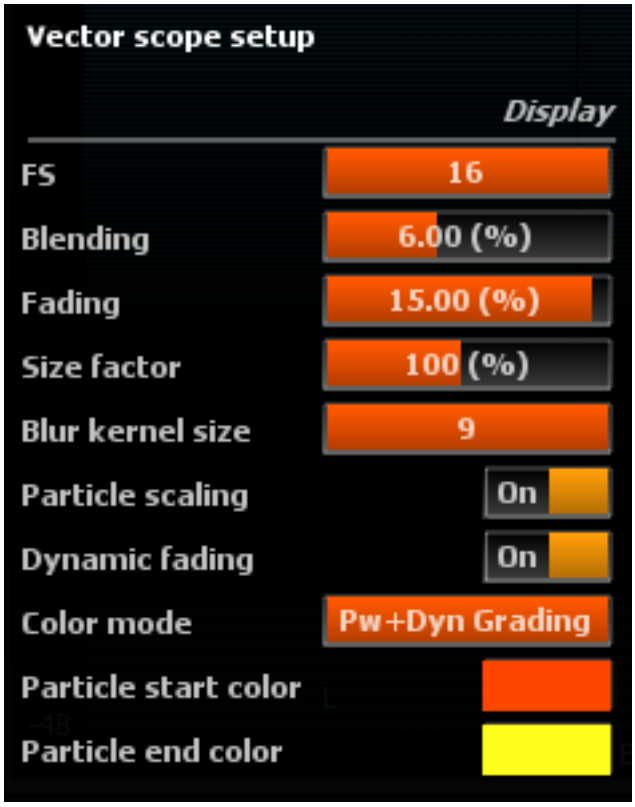

:::{.callout-note} Vector scope setup options

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

63 Fs

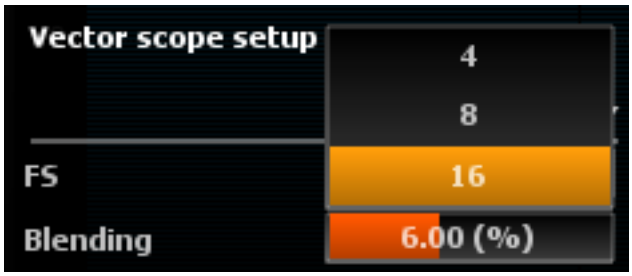

Over-sampling factor in multiples of FS, that is the incoming audio is up-sampled as necessary to reach this multiple times 48kHz. Increasing this value increases the display precision and reactivity, at the expense of a little CPU overhead.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

64 Blending

Controls the amount of particle blending with the current image, from 1 to 100%. A higher value gives more priority to the incoming audio over past frames.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

65 Fading

Controls display persistence, i.e. the “fade to black” amount for a frame. Lowering this value retains past particles longer, whereas increasing this make them disappear faster.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

66 Size factor

Controls the size of individual particles with respect to screen size.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

67 Blur kernel size

Controls the radius of the blur effect applied to past particles. Particles are “smeared” more and more as they become older, depending on this setting. Naturally, a bigger value increases the smearing, at the expense of processing power.

> **Note**
>
> Choosing the value for this setting is really matter of taste, although please keep in mind values that above 5 will require a sufficiently powerful graphics card in order to maintain a responsive display.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

68 Color mode

This defines how the particle color is determined: * Static color: use only particle start color (see below) * Power grading: color is modulated by overall signal RMS power * Dynamic grading: color is modulated by signal dynamics * Pw+Dyn grading: mix of the two previous modes

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

69 Particle start/end colors

Sets the particle color range to be used.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part VI

Nebula (surround scope)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

70 Usage

The Nebula | Surround scope displays a representation of how a surround signal's various components are distributed in a surround environment. The inner region displays the location of the signal frequency components in the selected surround configuration, while the outer ring shows the phase-correlation between channels.

Phase correlation between adjacent channels is shown as white section with a length proportional to the correlation. Additionally, L-R phase correlation is displayed on the top portion of the ring, and L-C and C-R inter-channel phase correlations are displayed just above the top of the ring.

Physical locations of the speakers for the selected configuration are marked on the ring itself for reference.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

71 Music

This is the typical surround speaker arrangement for musical reproduction.

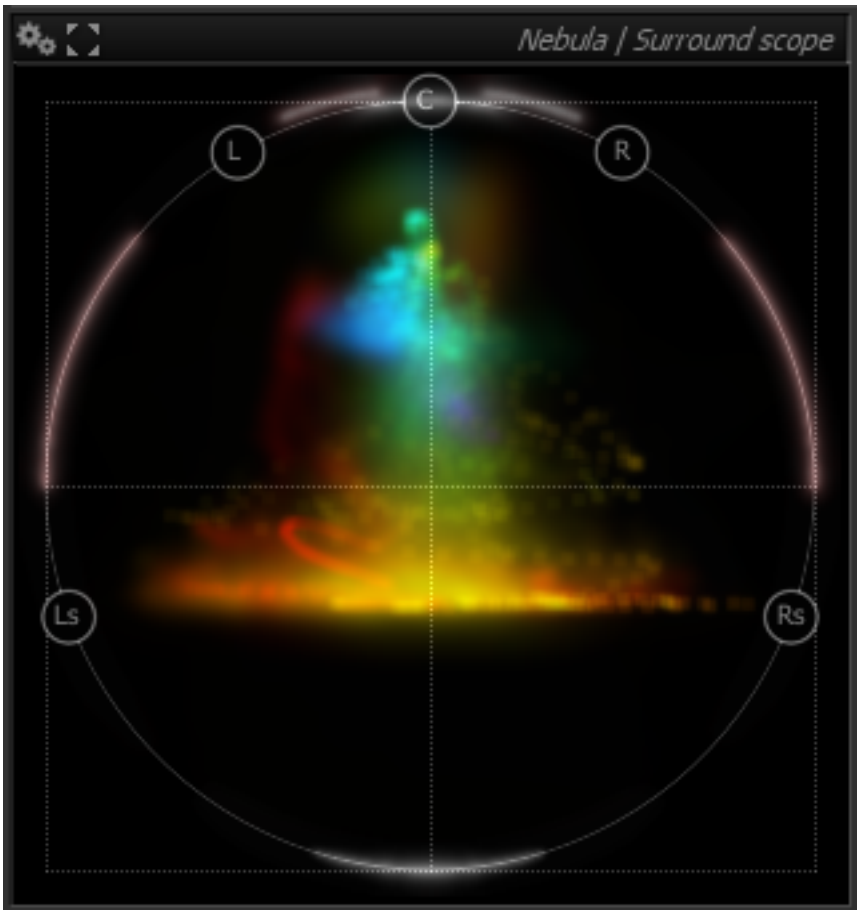

Figure 71.1: Nebula | Surround scope in Music speaker mode

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

72 Equidistant

This mode employs equidistant speakers arranged as an equilateral polygon.

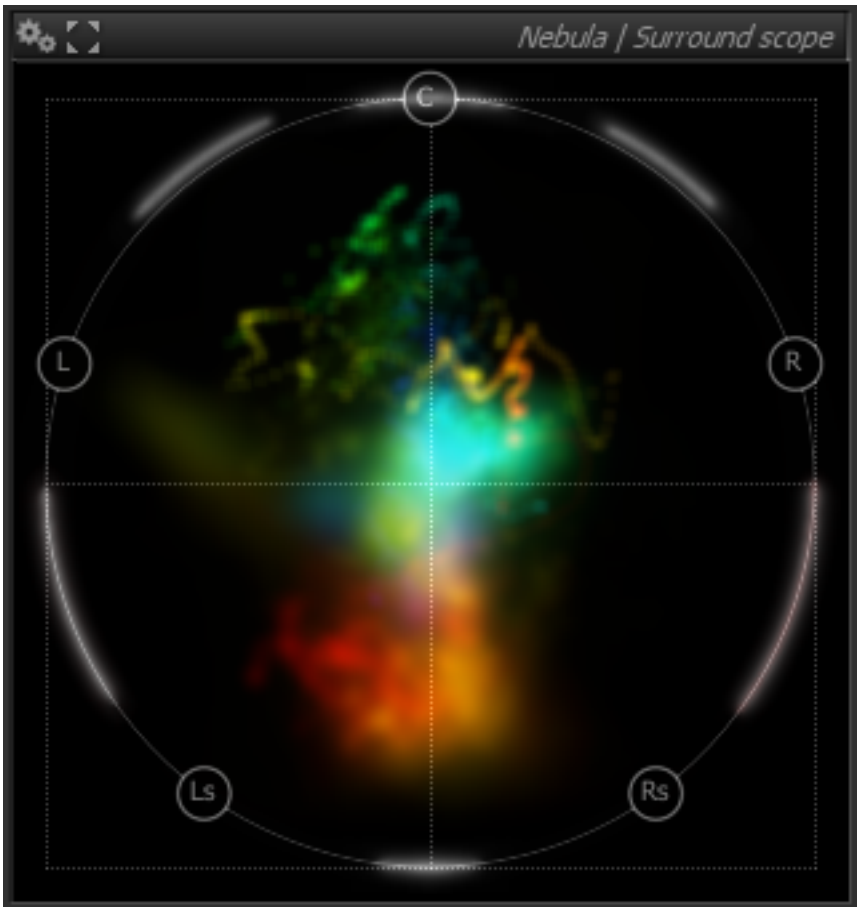

Figure 72.1: Nebula | Surround scope display with equidistant speaker mode selected

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

73 Square

This arrangement employs speakers arranged on a square.

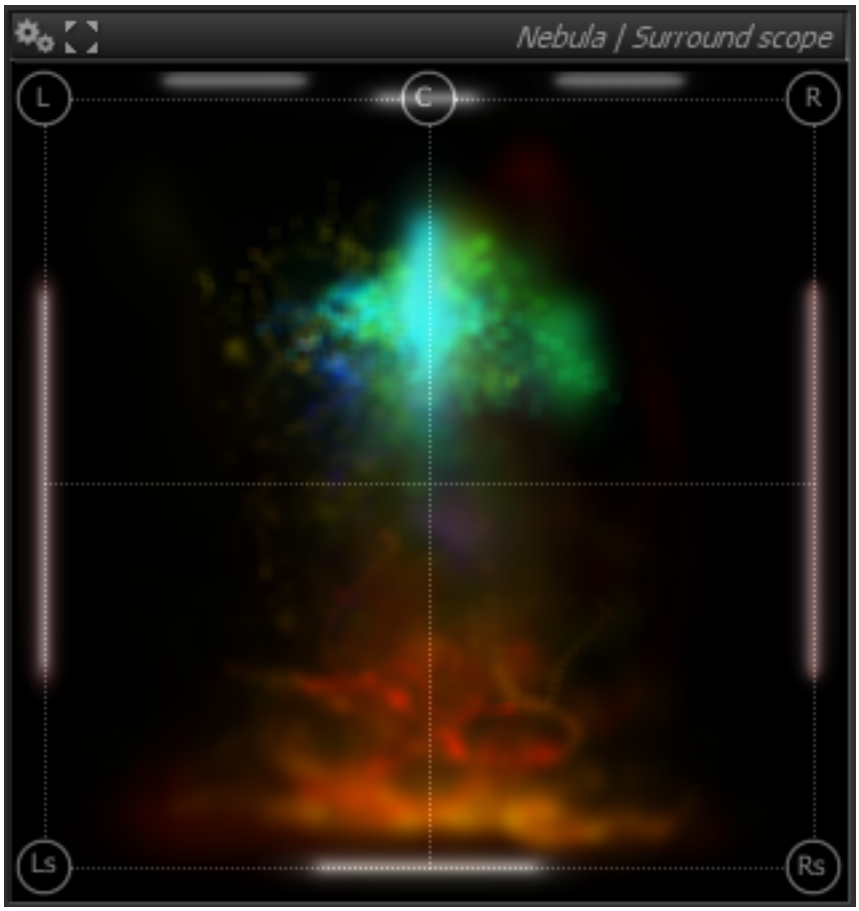

Figure 73.1: Nebula | Surround scope display in Square speaker mode

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

74 Theater

This is the typical arrangement employed in movie theaters, with redundant rear channels.

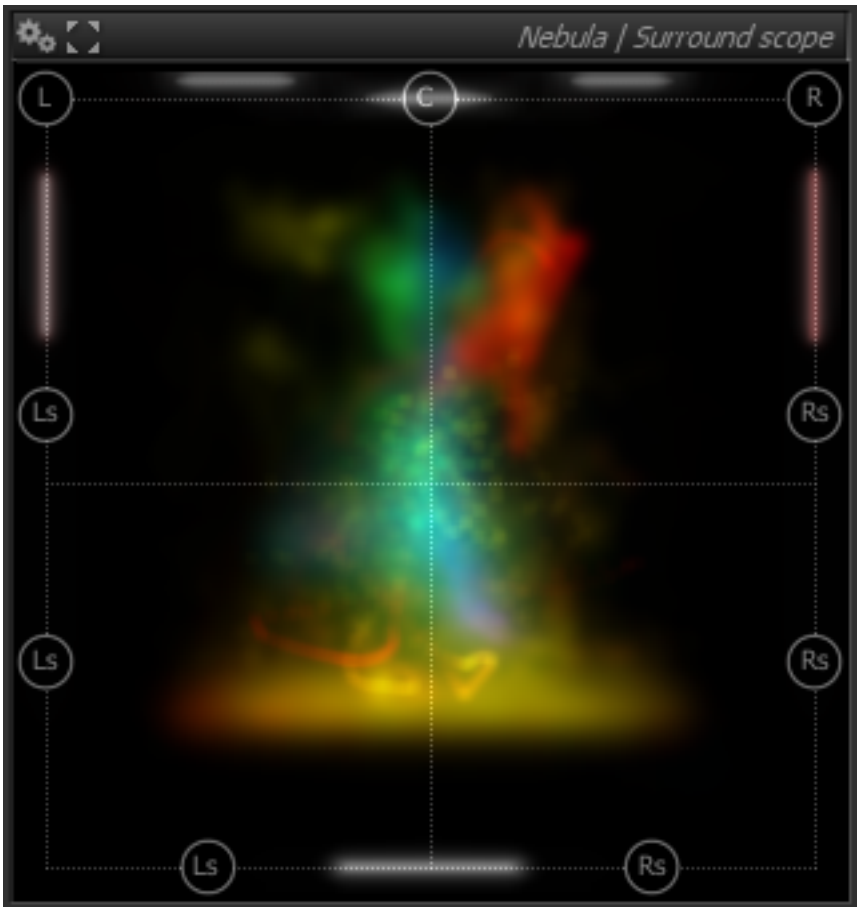

Figure 74.1: Nebula | Surround scope display in Theater speaker mode

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

75 Display

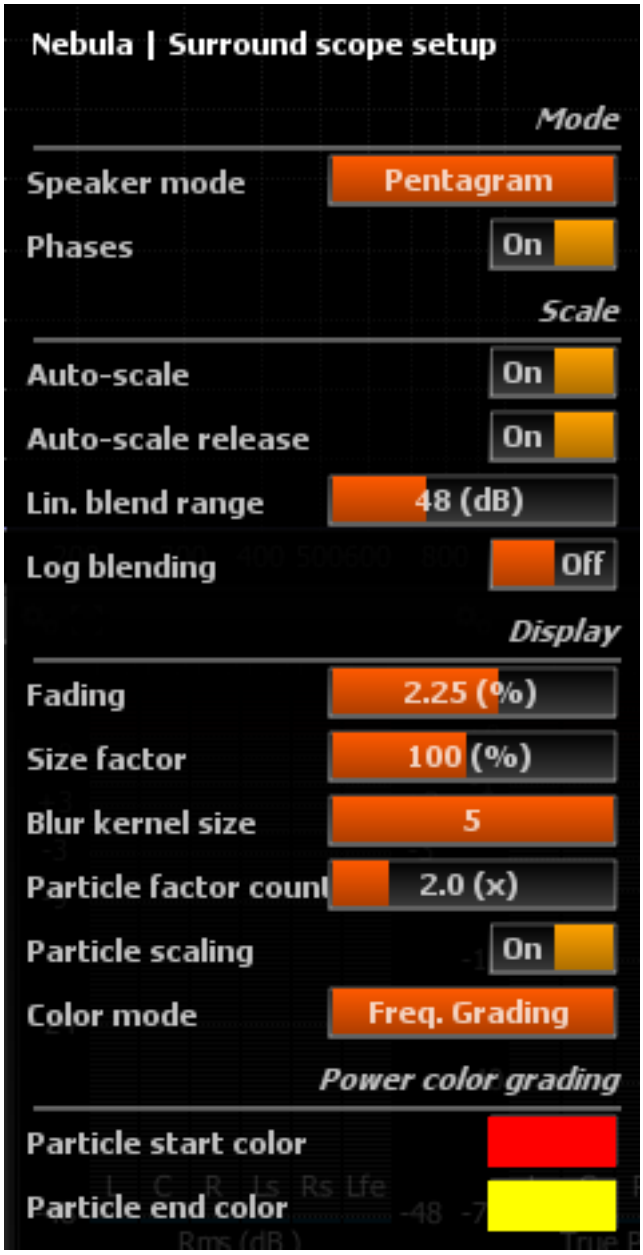

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Nebula | Surround scope setup options

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

76 Mode

76.1 Speaker mode

Selects between various commonly employed surround speaker arrangements.

76.2 Phases

Toggles phase-correlation display on and off.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

77 Scale

77.1 Auto-scale

This parameter controls whether the intensity of the particles are modulated by the overall audio level variations. In essence, when enabled, the color nuances will vary according to the relative amplitude of a frequency, allowing to monitor the relative amplitude spectrum variations. When disabled, the color will reflect the absolute audio level. You can also think of this as a kind of auto-gain setting.

77.2 Auto-scale release

This controls whether color variations should be smoothed in time or not. When engaged, color variations is slowed down a bit, which makes overall level transitions more obvious.

> **Note**
>
> You should enable this setting when you want to visualize quick level variations such as those that frequently occur in movie soundtracks.

77.3 Linear blend range

Adds a constant blend amount to the particle. This ensures some particles are always blended into the image even if its original magnitude is low.

A low value for this setting has the effect of stabilizing the appearance of particles. With large values more of the spectrum dynamics are taken into account, and only peaks mostly come through.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

77.4 Log blending

Toggles between linear and logarithmic blending of the current particle with old particles.

The default is off, i.e. linear blending, which tends to favor the display of peaks.

Logarithmic blending on the other hand preserves more of the full dynamic range of the data, and also gives some visibility to lower levels.

77.5 Color mode

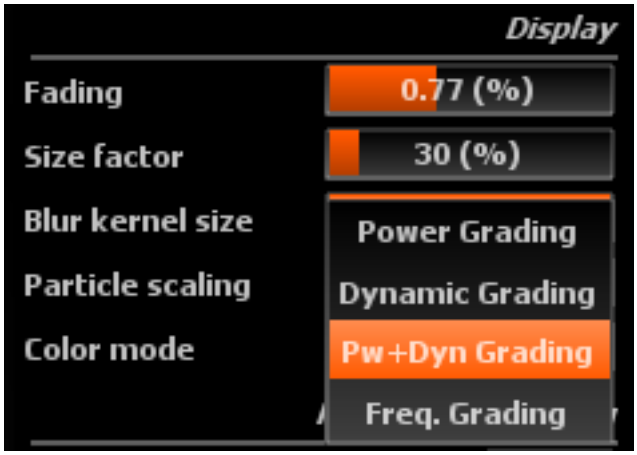

77.6 Fading

Controls display persistence, i.e. the “fade to black” amount for a frame. Lowering this value retains past particles longer, whereas increasing this make them disappear faster.

77.7 Size factor

Controls the size of individual particles with respect to screen size.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

77.8 Blur kernel size

Controls the radius of the blur effect applied to past particles. Particles are “smeared” more and more as they become older, depending on this setting. Naturally, a bigger value increases the smearing, at the expense of processing power.

> **Note**
>
> Choosing the value for this setting is really matter of taste, although please keep in mind values that above 5 will require a sufficiently powerful graphics card in order to maintain a responsive display.

77.9 Particle factor count

Determines the amount of particles to display, relative to the default number used for the current screen size.

77.10 Particle scaling

Toggles automatic adjustment of particle size with screen size. When enabled, the overall aspect of the display will remain similar even if the view size changes.

77.11 Color mode

This defines how the particle color is determined: * Power grading: color is modulated by overall signal RMS power. * Dynamic grading: color is modulated by signal dynamics. * Pw+Dyn grading: mix of the two previous modes. * Freq. grading: color is modulated by frequency.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

78 Power color grading

Determines the start and end colors used with “Power grading” color mode selected.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part VII

RMS Metering

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

79 Metering

All meters display the current signal meter values as solid vertical bars, and the peaks are indicated with horizontal lines at the corresponding value. Peak hold time can be adjusted in the settings if necessary. The peak value is also displayed in a numeric format at the top of the meter, which is emphasized in red in case of clipping or overload.

Several meter displays are available, each scrupulously implementing one of the more common and up-to-date industry norms, as detailed in the following paragraphs.

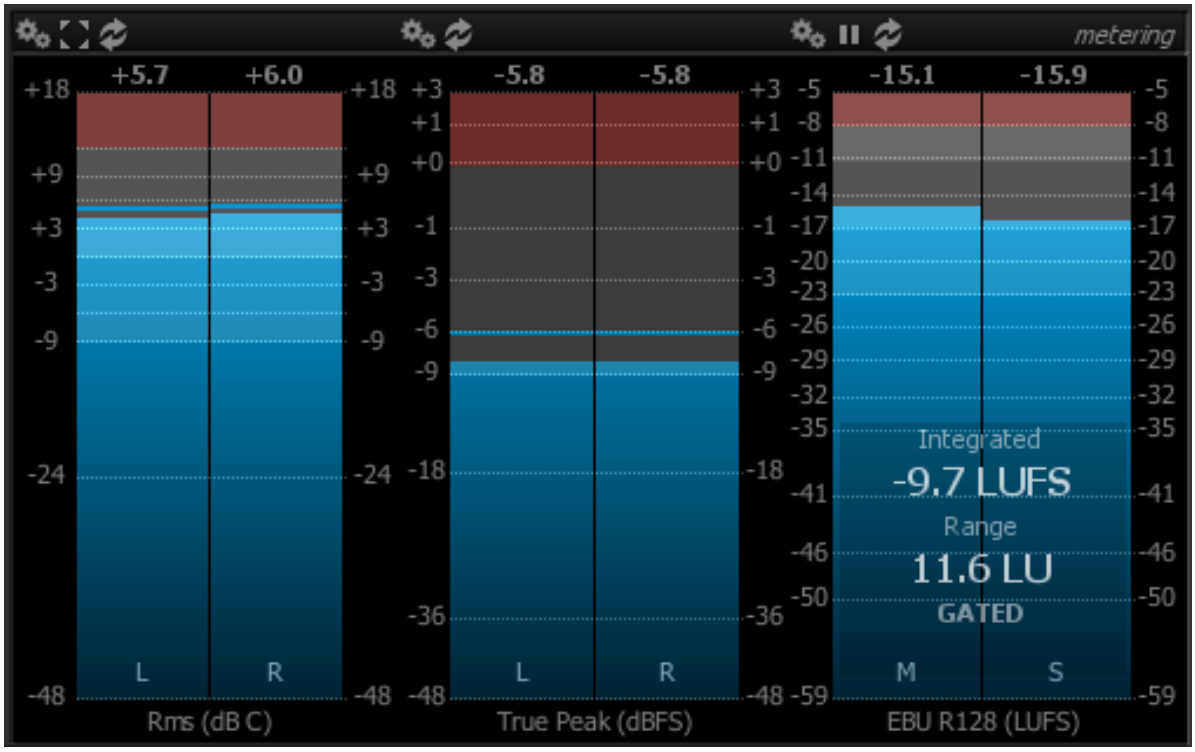

Figure 79.1: Meters with stereo input.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

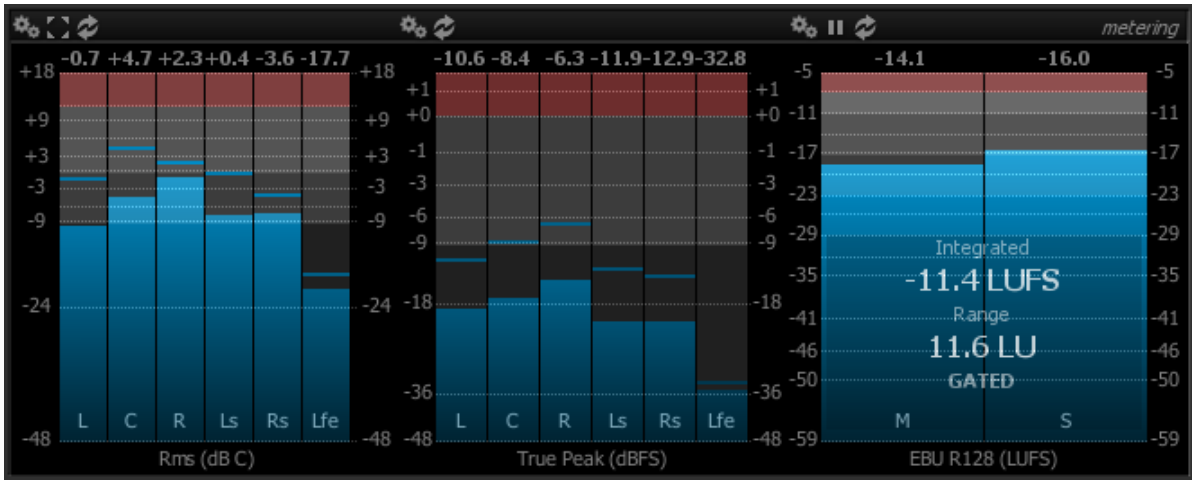

Figure 79.2: Meters with 5.1 surround input.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

80 Introduction

RMS stands for Root Mean Square, is a measure of the average magnitude of a varying signal, or equivalently, the average power over the signal over a time period, called the integration time.

> The live layouts display dB SPL 83 (Sound Pressure Level) values, which is the standard measure of acoustic pressure. This requires that your input chain first be calibrated in order to get accurate and meaningful readings, as factors such as your particular microphone's sensitivity and preamplifier gain are not known in advance. For this, you will need to get your hands on a calibrator, which is a box fitted with a transducer that outputs a known acoustic level and features a socket designed to hold the microphone.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

81 Preset

A number of presets covering widely and not so widely-used metering standards are provided.

81.1 Custom

User defined values.

81.2 Default

All-round settings with:

- From -48 to +18 dB range, referenced at -18dB.
- 160ms integration time, 16dB/s release, 1dB peak release and 60 frames peak hold.

81.3 Ref -18dB A/B/C/K

Default settings with pre-equalization following either normalized ANSI A/B/C or ITU-R BS.1170-2 weighting curves, referenced to -18dB.

81.4 Ref -20dB A/B/C/K

Default settings with pre-equalization following either normalized ANSI A/B/C or ITU-R BS.1170-2 weighting curves, referenced to -20dB.

81.5 VU meter Standard

Standard reference VU settings, with 300ms integration, 66/7dB/s release and peak release times, referenced at 0VU/-4dBu/-18dBFS. The scale is non-linear and covers -20 to +3VU, complying with IEC 60268-17.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

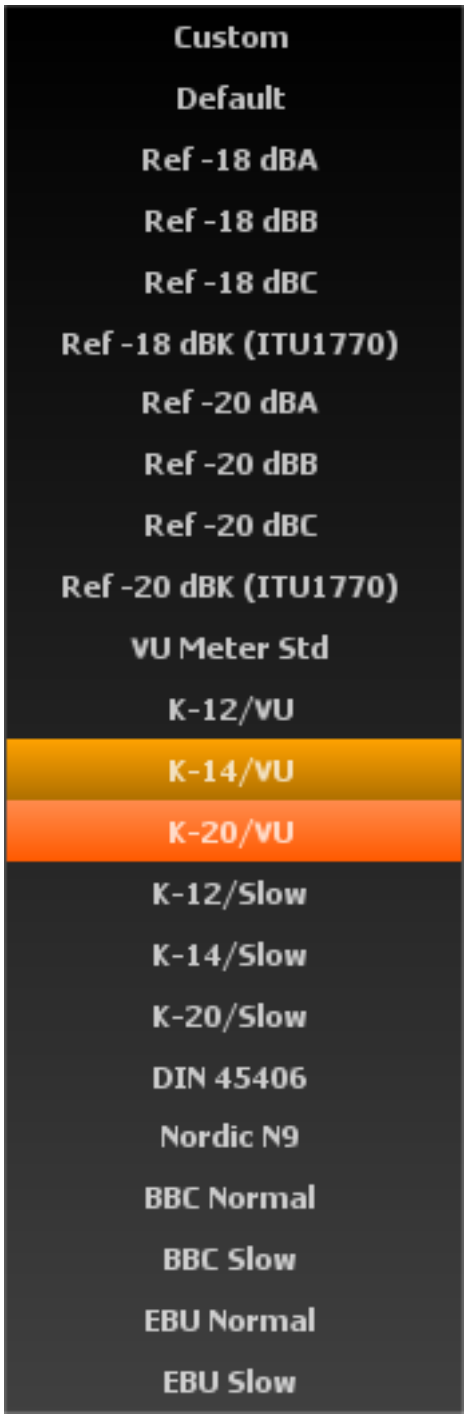

Figure 81.1: Available RMS metering presets

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

81.6 K-System / VU

Linear scale, conforming to Bob Katz's recommendations, referenced at either -12, -14 or -20dB, 300ms integration, 66.7dB/s release and 12dB/s peak release times, 180 frames peak hold.

81.7 K-System / Slow

Identical to K-System/VU, except that integration times are doubled. This reflects Bob Katz's view that Vu-meter timings are appropriate for speech, but that longer timings are better suited to music.

81.8 DIN 45406

This preset conforms to the standard used many European broadcasters such as French (PAD) and German (IRT) television. Integration time is 10ms for a 90% signal increase; fall-back time is 1.7s per 20dB; with a linear scale covering a range from -50 to +5dB, referenced at -9dBFS. The corresponding standards are DIN 45406, IEC 60268-1, and ARD Pfl.H.3/6.

81.9 Nordic N9

5ms integration time for an 80% increase, fall-back time 1.7s per 20dB, linear scale covering the range from -40 to +9dB, referenced at -18dBFS, according to IEC 60268-10/1 + N9 supp.

81.10 BBC Normal

10ms integration time for an 80% increase, fall-back time 2.8s per 24dB, custom scale with graduations spaced apart by 4dB, and 4 stands for the -18dBFS reference, according to IEC 60268-10/2a.

81.11 BBC Slow

Same as above except for ballistics, where the integration time is changed to 69.2ms for an 80% increase, and 3.8s per 24dB fall-back.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

81.12 EBU Normal

10ms integration time for an 80% increase, fall-back time 2.8s per 24dB, linear scale covering the range from -12 to +12dB, referenced at -18dBFS, according to IEC 60268-10/2b.

81.13 EBU Slow

Same as above except for ballistics, where the integration time is changed to 69.2ms for an 80% increase, and 3.8s per 24dB fall-back.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

82 Reference

82.1 Zero reference

Adjusts the reference point. Default is -18dB (DVD standard). Do not change this unless you specifically want to divert from the standard, as this will otherwise compromise meter readings.

Standard values are -18dB for DVD authoring and -20dB for film.

82.2 Weighting

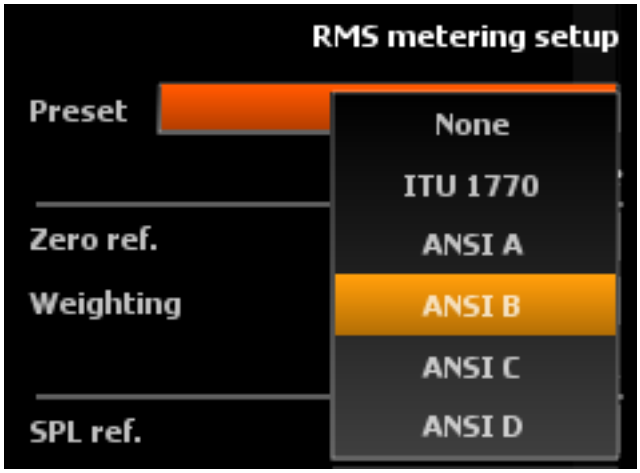

Applies an optional weighting filter conforming to various standard curves:

- None (default).
- ITU 1770: K-weighting filter, comprising a shelving and a high-pass (RLB-weighting) filter in series, as specified in ITU-R BS.1170-2 and employed by EBU R128 (PLOUD).
- ANSI A, which is roughly the inverse of the Fletcher-Munson curve.
- ANSI B.
- ANSI C.
- ANSI D.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Figure 82.1: RMS metering setup options

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

83 SPL

83.1 SPL reference

This is the reference level of the calibrator's output, indicated on the device itself or in the corresponding datasheet. A typical value is -94dB.

83.2 SPL trim

This is the offset applied to RMS dB values in order to obtain dB SPL readings. It is determined automatically by the calibration procedure.

83.3 Calibrate

Press this button after having insert the microphone into the calibrator socket and activated it in order to determine the SPL trim value.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

84 Min / max

Defines the minimum and maximum values to be displayed on the meter bars. This does not affect the text readings above the bars.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

85 Time

85.1 Integration

Defines the meter integration time constant, in milliseconds. This corresponds to the length of the time window over which an RMS level value is computed. Decrease this to respond to signal level variations more quickly, at the expense of meter precision and stability. Default is 160ms.

85.2 Release

Release time of the meter, in decibels per second. This controls the falloff rate of the meter. Decrease this to respond to signal level variations more quickly, at the expense of readability. Default is 16 dB/s.

85.3 Peak release

Release time of the peak indicator, in decibels per second. This controls the falloff rate of the peak hold indicators. Increase this to retain peaks for a longer time. Default is 1dB/second.

85.4 Peak hold

Sets the number of display frames to wait until the peaks actually start to fall-back to zero. Default is 60 frames.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

86 Scale & split

86.1 Scale

Meter labels are defined here as a comma separated list of dB values to be shown on the side of the meters. This also defines where to the corresponding horizontal markings. Default is -72; -40; -18; -9; -6; -3; -1; 0; 1; 3.

86.2 Colors

This lets you customize the values at which color transitions occur. You can enter as many values as you wish, as a comma separated list, but make sure the values are in increasing order. Default is -9;0.

The last value always defines the clip level, which will be indicated in red.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

87 Bar-graph texturing

Controls whether meters are drawn with texture or in a plain solid color.

Default is on.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part VIII

True peak metering

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

88 True Peak metering

All digital audio wave signals are ultimately converted back to analog at some point, and while it is often desirable to maximize the overall volume of a signal or a complete mix, care must be taken in order not to go above the digital scale zero decibel ceiling, or nasty distortion and clipping will occur. This common and widely used rule is however not entirely sufficient, as the digital and analog processing involved in a D/A converter does not guarantee that a 0dBfs peak signal will exactly translate to a 0dB peak in the analog domain.

Without getting into too much detail, this phenomenon can be attributed to the over-sampling and reconstruction filters present in the D/A convertors, whose role are to rebuild a continuous time signal from a set of discrete digital values sampled at regularly spaced time intervals. This interpolation process can therefore generate values which lie above 0dB, which is known as overshoot.

Relying solely on the peak value of samples can lead to the following problems:

- Inconsistent readings between successive playbacks of the same material.
- Unexpected overloads of the D/A output converter.
- Under-readings and beating of pure tones.

TruePeak metering aims to overcome these limitations by mimicking parts of the D/A conversion process, effectively up-sampling the measured signal, in order to display the true value of peaks that occur in the analog domain.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Figure 88.1: TruePeak metering setup options

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

89 Preset

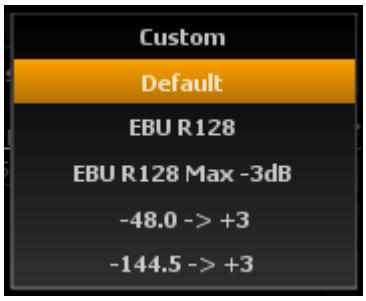

89.1 Custom

User defined values.

89.2 Default

This preset uses the following all-round settings:

- Range: -72 … +3 dB referenced at 0dB.
- Scale: 1.8x power factor, 0.06x reference display offset.
- Ballistics: 16dB/s release time, 1dB/s peak release, 60 frames peak hold.
- Scale / split: -72, -40, -18, -9, -6, -1, 0, +1, +3 dB.

89.3 EBU R128

Referenced at -1dB.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

89.4 EBU R128 Max -3dB

Referenced at -3dB.

89.5 -48.0 -> +3

Limited -48 … +3dB range with adapted scale/split values. ## -144.5 -> +3 Wide -144.5 … +3dB range with adapted scale/split values, to monitor the full 24-bit dynamic range and possible clipping.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

90 Range

90.1 Min / max

Defines the minimum and maximum values to be displayed on the meter bars. This does not affect the text readings above the bars.

90.2 Ref

Controls the position of the reference value on the display. This does not affect the meter values per se, it is a cosmetic setting only.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

91 Scale

91.1 Power factor

Controls the scaling of the display with respect to meter values. This allows to stretch or compress the display around Reference.

91.2 Ref pixel offset factor

Adjusts the offset of the reference value (Reference) with respect to meter height.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

92 Time

92.1 Release

Release speed of the meter in decibels per second.

92.2 Peak release

Release speed of the peaks in decibel per second.

92.3 Peak hold

Number of frames to hold the peaks, before the actual release phase begins. 60 frames corresponds to 1 second on a fast system, capable of a 60Hz refresh rate.

92.4 Infinite hold

When enabled, peaks are held until the next reset, which is useful for checking a whole track never clips.

92.5 Reset

button resets the meter to its initial state (values and peaks at minimum).

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

93 Scale

#Scale & split

Meter labels are defined here as a comma separated list of dB values to be shown on the side of the meters. This also defines where to the corresponding horizontal markings. Default is -72;-40;-18;-9;-6;-3;-1;0;1;3.

93.1 Colors

This lets you customize the values at which color transitions occur. You can enter as many values as you wish, as a comma separated list, but make sure the values are in increasing order. Default is -9;0.

The last value always defines the clip level, which will be indicated in red.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

94 Other

Controls whether meters are drawn with texture or in a plain solid color. Default is on.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

95 Loudness ITU-R BS 1770 &amp EBU R128 PLOUD

ITU-R BS.1170-4 and EBU R128 recommendations introduce a new paradigm for audio metering, which define a way to measure perceived loudness of audio material in a normalized and reproducible manner.

Please refer to the official documents freely available online at tech.ebu.ch/groups/ploud * or consult a reference book such as "Audio Metering. Measurements, standards and practice" by Eddy Brixen (Focal Press, ISBN 9780240814674) for detailed information on this subject.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

96 Units

ITU-R BS.1170-2 notably defines LU (Loudness Unit) and LUFS (Loudness Unit, referenced to Full Scale) units, which are used by EBU R128, and Maximum True Peak Level.

- LU is used for measurements relative to a reference level and measuring range.
- LUFS is used for absolute measurements.

The meter display is switchable between LUFS (absolute, default) and LU (relative). The target loudness level to aim for is -23 LUFS = 0 LU.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

97 Loudness and EBU mode

EBU mode specifies three time scales corresponding to three different, complementary loudness levels

- M: Momentary, 400ms integration time
- S: Short-term, 3s integration time
- I: Integrated from start of measurement or last reset, gated

> **Note**
>
> Loudness is a measure of global loudness, so individual channel metering is not relevant in this context.
> No additional slowdown of the attack or release of the meter is employed, as indicated by the norm.

The integrated loudness can be understood as the overload loudness of the audio over time, excluding very soft passages through the use of absolute and relative gating.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

98 Loudness Range (LRA)

Loudness range measures the average long-term variations of the loudness; it is expressed in LU.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

99 Scales

EBU R128 specifies two normalized scales:

- EBU +9, ranging from -18.0 LU to +9.0 LU (-41.0 LUFS to -14.0 LUFS)
- EBU +18, ranging from -36.0 LU to +18.0 LU (-59.0 LUFS to -5.0 LUFS) (Default)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

100 Dolby Dialogue Intelligence

100.1 Introduction

While EBU R128 aims to measure global perceived loudness, irrespectively of the audio material, Dolby Dialogue Intelligence is a patented technology designed to specifically measure the perceived loudness of dialogue elements in the audio. It is therefore targeted towards broadcast applications.

100.2 General principle

Dialogue Intelligence replaces EBU R128's level-based gate with a speech-content ratio based gate. The algorithm computes several low-level features for the incoming signal in speech channels. These are then combined into an overall speech percentage figure. When speech content is detected, Integrated Loudness is computed from the speech channels which have a speech content ratio above a certain threshold.

When other material is detected, i.e. not speech, standard EBU R128 Integrated Loudness computation is employed.

100.3 Display

The current speech content is displayed as text below the current gate status.

Additionally, color coding indicates the speech content ratio.

- Speech : speech content present
- Green: high speech content
- Orange: medium speech content
- Red: low speech content
- Other: other material present

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

100.4 Delay and compensation

The sophistication of the algorithms employed in Dialogue Intelligence incurs an overall latency of 2048ms (approx. 2s).

When Dialogue Intelligence is enabled, the display of other Loudness values is compensated to make sure meter readings are consistent. Other real-time meter (RMS, TruePeak) displays are not compensated, as we feel in this case maintaining the best reactivity to the incoming signal is more important.

All meter statistics are time-aligned.

100.5 Surround

Channels taken into account by the algorithm are determined based on the current channel configuration.

For mono/stereo signals, all channels are taken into account. For surround configurations, only Left/Right and Center channels are taken into account, if present.

> **Note**
>
> Dialogue Intelligence computation only affects I (Integrated) Loudness values.
> Toggling Dialogue Intelligence on and off forces a reset of the meter values.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

101 Copyright & patent information

Created under license from Dolby Laboratories Licensing Corporation. Use of this Software does not convey a license nor imply a right under any patent, or any other industrial or intellectual property right of Dolby Laboratories.

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories. Dialogue Intelligence is a trademark of Dolby Laboratories.

PATENT LIST - DIALOGUE INTELLIGENCE

PATENTS

Country

Patent Number

AUSTRALIA

2003263845

CHINA

ZL03819918.1

FRANCE

1 532 621

GERMANY

1 532 621

HONG KONG

1073917

ISRAEL

165938

JAPAN

4585855

MEXICO

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

252,228

MALAYSIA

MY-133623-A

SINGAPORE

109865

TAIWAN

I306238

UNITED KINGDOM

1 532 621

UNITED STATES

7,454,331

PATENT APPLICATIONS

Country

Application Number

CANADA

2,491,570

INDIA

1936/KOLNP/2004

SOUTH KOREA

2005-7003479

UNITED STATES

12/948,730

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

102 Controls and display

102.1 Display

The meter display has the following arrangement

- left bar: Momentary Loudness value
- right bar: Short-term Loudness
- text overlay: Integrated Loudness and Loudness Range (LU) values, Gated indicator lights red when gate is active

The Loudness Range value is displayed once measurement has been running for at least 60 seconds, according to the EBU Tech 3342 specification, otherwise a 'LRA Unstable' warning is shown.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

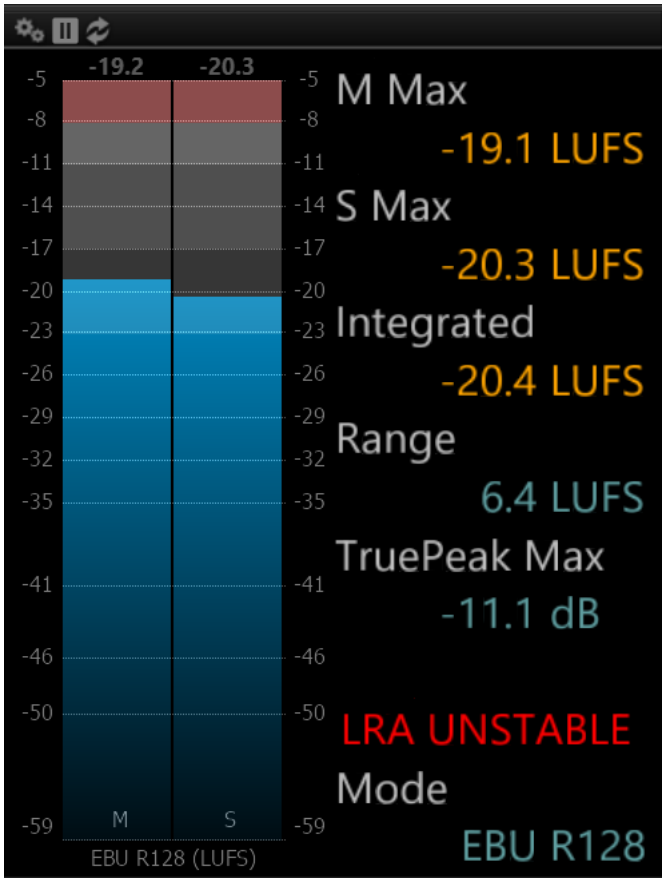

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

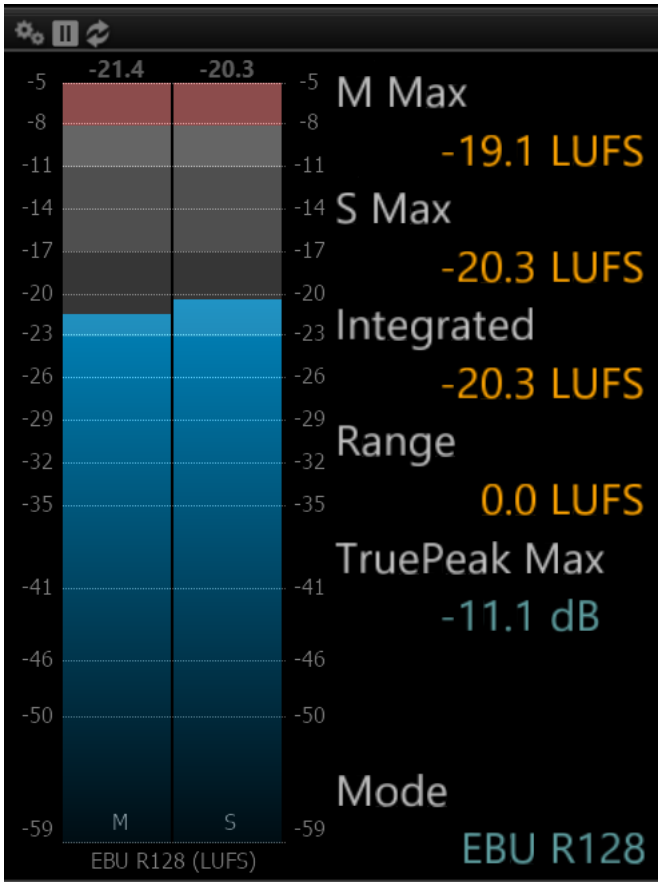

102.2 Pause

Clicking the button pauses measurement; clicking again resumes it. This allows you to make adjustments without affecting Integrated Loudness, instead of having to start all over again.

102.3 Reset

Clicking the button resets the meter to its initial state.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Don't forget to reset the Loudness meter if you're starting playback of a new track, as Integrated Loudness, by design, measures the overall Loudness since the last reset. Otherwise you'd be measuring the overall Loudness of the combined tracks, which is probably not what you want.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

103 Setup

Figure 103.1: EBU R128 Loudness metering setup.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

103.1 Presets

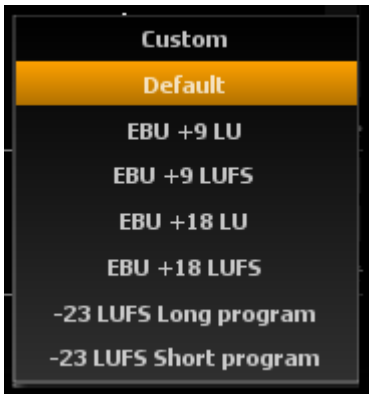

103.1.1 Custom

Uses user-defined custom range according to min./max. values below.

103.1.2 Default

Sets the meter to the recommended scale (EBU +18 LUFS).

103.1.3 EBU +9 LU

Sets the meter to use EBU +9 scale in LU units.

103.1.4 EBU

+9 LUFS Sets the meter to use EBU +9 scale in LUFS units.

103.1.5 EBU +18

LU Sets the meter to use EBU +18 scale in LU units.

103.1.6 EBU +18 LUFS

Sets the meter to use EBU +18 scale in LUFS units.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

103.1.7 -23 LUFS Long program

CST specification

Sets the meter to use EBU +18 scale in LUFS units with reference @ -23 LUFS and color split @-/+ 7LU from the reference.

103.1.8 -23 LUFS Short program

CST specification

Sets the meter to use EBU +18 scale in LUFS units with reference @ -23 LUFS and Max defined 3LU up to the reference.

103.2 Dolby Dialogue Intelligence

103.2.1 Dolby Dialogue Intelligence (TM)

Toggles usage of Dolby Dialogue Intelligence speech gate.

103.2.2 Speech threshold

Defines the speech content threshold in %. Speech channels with a speech content ratio below this value do not participate in the Loudness computation.

103.3 Range

103.3.1 Min.

Minimum Loudness to display on the bar-graphs. User adjustable.

103.3.2 Max.

Maximum Loudness to display on the bar-graphs. User adjustable.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

103.4 Scale / split

103.4.1 Scale

Meter labels are defined here as a comma separated list of dB values to be shown on the side of the meters. This also defines where to the corresponding horizontal markings. Default is -72;-40;-18;-9;-6;-3;-1;0;1;3.

103.4.2 Colors

This lets you customize the values at which color transitions occur. You can enter as many values as you wish, as a comma separated list, but make sure the values are in increasing order. Default is -9;0.

The last value always defines the clip level, which will be indicated in red.

103.5 Other

Controls whether meters are drawn with texture or in a plain solid color. Default is on.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part IX

Leq metering

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

104 Introduction

Leq encompasses a set of sound level meter specifications, which are described in detail in the BS EN 61672-1 European Standard.

Pure Analyzer implements the following Leq measurements: time-weighted sound level, time-average sound level and sound exposure level.

Frequency weighting is employed for all measurements, A being the standard and default, although other weightings can be specified if necessary.

The Leq module always measures the audio routed through the Mic channel.

104.1 Time-weighted sound level

LA is the root-mean-square sound level obtained after exponential time weighting.

Exponential averaging has the effect of progressively 'forgetting' past sample values.

The norm specifies two time-weighting constants:

- Fast : 125ms
- Slow: 1s

> **Note**
>
> The corresponding letter symbol is LAF for an A-frequency weighted and F time-weighted sound level, for example.

104.2 Time-average sound level

Time-average sound level is basically an RMS meter with frequency-weighting applied.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

104.3 Sound exposure level

This measures the sound exposure equivalent to a ‘dose’ received for a second.

> **Note**
>
> It is useful for determining the amount of sound pressure to which listeners have been exposed for a certain duration.
> This value naturally increases with time. For a constant source level, this value increases in a logarithmic fashion.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

105 Mic. channel Leq setup

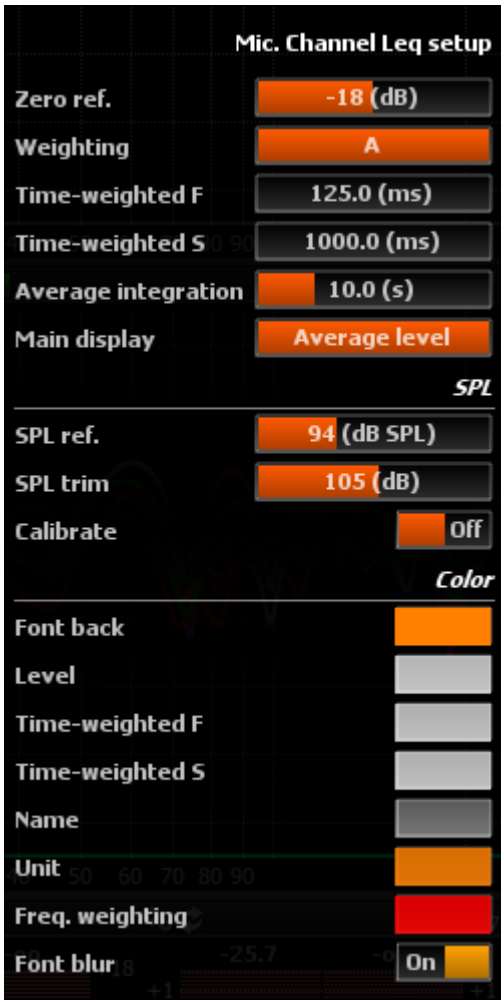

Mic. channel Leq setup

105.1 Zero ref.

Adjusts the reference point. See RMS for more information.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

105.2 Weighting

Frequency weighting employed. Can be switched between ANSI standard (A, B, C, D) and none. The default is A.

105.3 Time-weighted F

Indicates the time-constant for the Fast time-weighted sound level.

105.4 Time-weighted S

Indicates the time-constant for the Slow time-weighted sound level.

105.5 Average integration

Sets the integration time for the time-average sound level, between 1s and 14400s (4 hours). Default is 10s.

105.6 Main display

Switches the main measurement display from time-average sound level (the default) to sound exposure level.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

106 SPL

106.1 SPL reference

This is the reference level of the calibrator's output, indicated on the device itself or in the corresponding datasheet. A typical value is -94dB.

106.2 SPL trim

This is the offset applied to RMS dB values in order to obtain dB SPL readings. It is determined automatically by the calibration procedure.

106.3 Calibrate

Press this button after having insert the microphone into the calibrator socket and activated it in order to determine the SPL trim value.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

107 Color

The following settings control the visual aspect of the Leq display.

107.1 Font back

Common font background color.

107.2 Level

Main level font color.

107.3 Time-weighted F

Fast time-weighted level font color.

107.4 Time-weighted S

Slow time-weighted level font color.

107.5 Name

Name font color

107.6 Unit

Unit display font color.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

107.7 Freq. weighting

Frequency weighting type display font color.

107.8 Font blur

Toggles font blurring on (default) and off.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part X

Metering history

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

108 Usage

The metering history panel stores and displays the evolution of meters over time, with a red vertical bar indicating current time. Start and end time-points of the period over which the history are displayed left and right in time-code format.

Selecting which meters are to be included in the display is done by clicking the corresponding buttons in the setup.

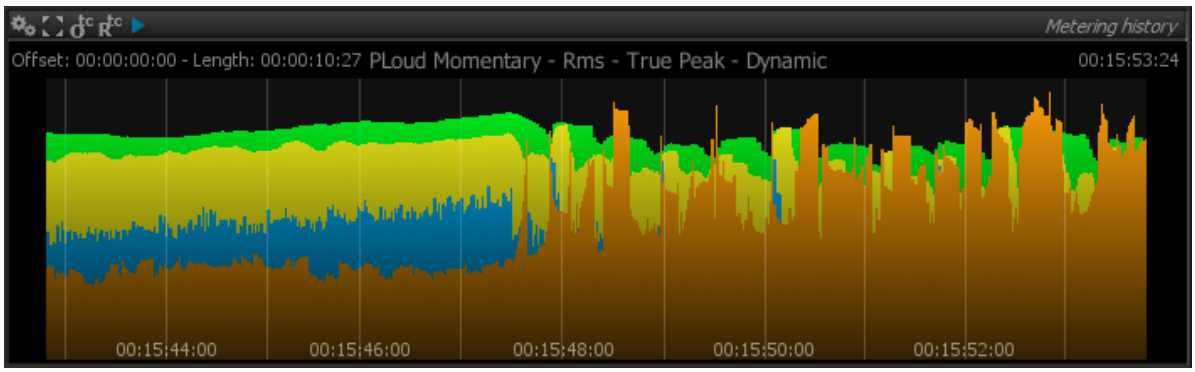

> **Note**
>
> Metering history display.

108.1 Timecode offset

Clicking the defines the current time as the Timecode offset.

108.2 Timecode offset reset

Clicking the button resets the Timecode offset to zero. Absolute and relative Timecode will then be the same.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

108.3 Play

Clicking the toggles history recording on and off. Metering values are discarded when off.

> **Note**
>
> The metering history relies on the same settings as those defined in the various meters. However, when multiple meter values are displayed simultaneously, the display range of the history is adapted so it encompasses the display ranges of the meters.
> Keep in mind different meters can be set to different zero reference points when comparing meter history curves.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

109 Setup

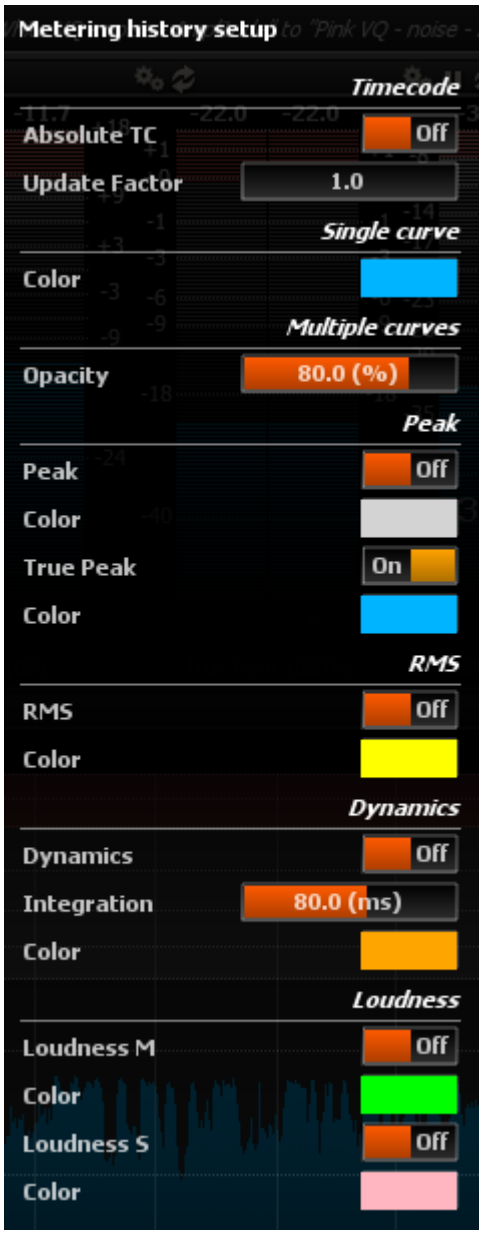

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Metering history setup options.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

110 TimeCode

110.1 Absolute Timecode

Switches between absolute and relative Timecode formats.

110.2 Update Factor

Divides the History refresh interval; allowing to increase the history time period.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

111 Single curve

111.1 Color

Sets the color to use when only a single curve is selected for display.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

112 Peak

These settings allow to specify whether Peak and/or TruePeak curves should be displayed, as well the color to use when drawing them.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

113 RMS

Toggle RMS curve display on and off, and specify the color to use for drawing.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

114 Dynamics

The dynamics is the current dynamic range of the signal, that is the ratio of the peaks with respect to the average, i.e.the crest factor of the signal.

114.1 Dynamics

Toggles dynamics curve display on and off.

114.2 Integration

Set the integration time, in milliseconds.

114.3 Color

Specify the color to use for drawing the curve.

> **Note**
>
> Percussive content such as drums or rhythm guitar exhibit high dynamics, as opposed to sustained sounds such as strings and synthesizer pads.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

115 Loudness

These settings allow to specify whether Short-term and/or Momentary EBU R128 Loudness curves should be displayed, as well the color to use when drawing them.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XI

Metering statistics

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

116 Metering statistics

The metering statistics view shows a synthetic view of the current and past meter values in numeric form. It also serves to process multiple existing audio files in one pass, display and export the results to disk.

Figure 116.1: Metering statistics display

116.1 Overview

The display shows the average and range for the various level meter values, since the start of the application or the last time the meter was reset, in a spread-sheet type view.

116.1.1 Peak, TruePeak and RMS

Mean as well as overall minimum and maximum values are shown. For min. and max. values, the corresponding Timecode position is also indicated.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

116.1.2 Loudness

As EBU R128 Loudness already incorporates statistical computations, only the current values are shown.

116.2 File export

Exports a report containing a summary of the metering statistics data to a text file.

Clicking the button brings up a standard file dialog where you can specify the desired file name for the dialog.

116.3 Setup

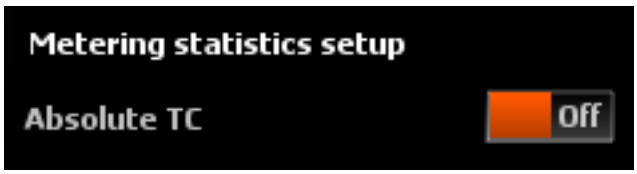

116.3.1 Absolute Timecode

Toggles between relative and absolute Timecode display. See TimeCode for more information.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

117 Overview

All TruePeak and R128 Short term values that cross the thresholds are recorded and displayed as a list. Each row in the list shows a record of the offending peak value in dB alongside with the time-code at which the event occurred. You can navigate the list and locate the time positions of the incident, then playback again the corresponding source material in order to identify and correct the problem.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

118 Setup

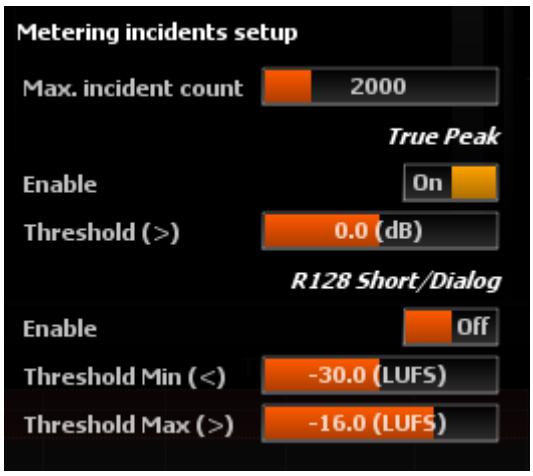

Figure 118.1: Incidents setup options.

118.1 Max. incident count

To avoid overloading the display, and eventually, the computer's memory, there is a limit placed on the number of registered incidents, which is 2000 by default. If you go above this, it might be a good idea to back off the master fader a bit anyway to let that music breathe !

However, you can override this behavior by setting this value to -1, which will remove the limit altogether.

118.2 TruePeak Incident Enable + threshold

Defines the threshold above which an incident will be registered. Default is 0dBTP, which corresponding to full digital scale. A conservative value would be -0.1dBTP, to be on the safe side.

Keep in mind TruePeak is designed to measure inter-sample peaks, and that 0dBTP is actually a few tenths of decibels softer than digital peak.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

118.3 EBU R128 Short term / Dialog Incident Enable + thresholds

Defines the threshold under/above which an incident will be registered.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

119 Usage

Multiple audio files can be added to the list for unattended queue processing.

119.1 Principle

The media queue is intended for processing a soundtrack possibly split across several reels and channels. Reels are processed in the order in which they are added and in which they appear in the list.

119.2 Usage

Audio files are added by clicking the icon , which brings up a standard file selection dialog, where you can select as many files as you want, provided they all have the same channel count and in a supported format, with a recognized extension (.wav). When you are ready, click the icon to start processing the list, which will be computed much faster than real-time, especially if you have a fast computer.

The results are displayed when ready in the main view, and you can export these to a file just as you would with metering statistics computed on incoming audio.

119.3 Reel grouping

If reels are split across several multichannel files, you can add all the files at once directly in the file selection dialog. Reel order corresponds to the order in which the files were added.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

119.4 Channel grouping

If your source material consists of mono-tracks, you must add reels one-by-one, adding all files for the various channels of the current reel. Please ensure different reels have the same channel count or the software will report an error. Channel configuration and names are inferred from the file names using a fuzzy-logic algorithm that looks for the presence of typical marker characters such as C / Center for the center channel, R / Right for the right channel etc. (case insensitive).

If the automatic channel grouping does not succeed, an error message will be displayed. Please rename the offending file(s) according to one of the expected schemes above to correct the problem.

> **Note**
>
> This function is not intended to process unrelated soundtracks in batch mode.
> Please repeat the operation as necessary if you wish to obtain separate results for individual tracks.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XII

System analysis

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

120 Introduction

At first glance, an audio signal chain is very much like a series of black boxes. As an audio engineer, you can trust your ears and the manufacturer's data-sheets to assess the effects this chain has on the incoming audio. In a variety of cases, however, this is either simply impractical, not possible or not precise enough. Such situations include live sound setups, recording setups, etc., where unknown factors such as the venue's or studio's acoustic response are a crucial part of the chain.

It is therefore necessary to resort to scientific measurement procedures and tools to obtain precise, trustworthy and reproducible results. The main tools at your disposal for this purpose are transfer curve and impulse response measurement, which are especially designed for this task.

As with any measurement instrument, it is important to have a good grasp of its mode of operation as well as any possible limitations in order to use it most efficiently. Some knowledge of acoustic principles and notions of signal processing are naturally required as well. While this manual tries to cover most typical use cases and point out common do's and dont's, it obviously cannot replace neither a good textbook nor practical experience.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

121 Initial setup

Throughout this documentation, we will refer to the measured signal processing chain as the system (sometimes called device under test in electronics literature). This system input is fed with a source signal, which produces a response signal at its output(s). Both source and response are recorded and monitored by the analyzer, from which several measurement curves are produced.

The first step is therefore to setup the measurement chain. In cases where an outboard or plugin device's characteristics are to be measured, this is just a matter of routing the inputs and outputs in your DAW.

If you're measuring the acoustic response of a physical space, you'll need to place at least one microphone at the preferred listening position to record the response. The source can either be picked up directly at the DAW output or recorded with a second microphone placed in front of the loudspeaker(s), depending on whether you want to include the loudspeaker's influence or not in the measurement.

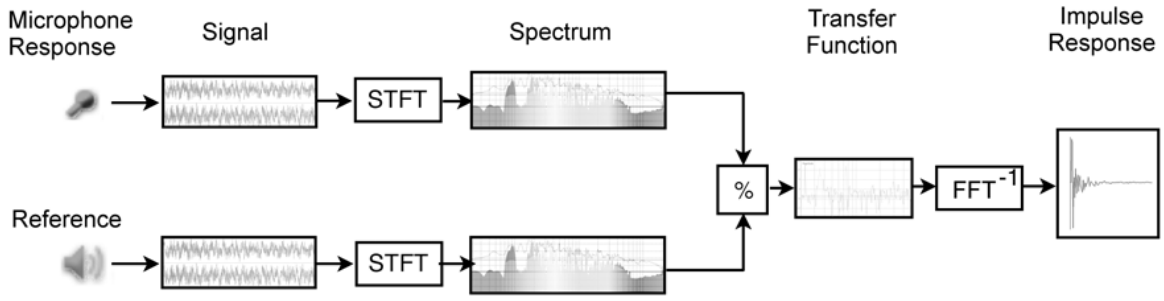

> **Note**
>
> System analysis overall principle.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

122 Practical considerations for capturing measurement signals

122.1 Use a measurement microphone

The goal here is to take the measurement chain out of the equation, so only specially designed microphones that exhibit a flat curve, minimal coloration, lowest noise and distortion should be used.

122.2 Choose a neutral preamplifier and calibrate it accurately

For the same reasons, select the most neutral preamplifier and A/D D/A convertors you have at your disposal. It is especially important to be able to set accurate and reproducible gain, linear and flat response. Take special care that the signal is not so hot as to clip or distort the preamplifier input stages, as this would distort the measurements accordingly and induce you into error.

122.3 Maximize signal-to-noise ratio

When measuring an acoustic system, raise up the volume as high as practical for maximal signal-to-noise ratio, and try to minimize any spurious acoustic noises such as footsteps and conversation. As always, the goal is to set the test signal as high as possible above the noise floor while ensuring all devices still operate in their linear region. Finally, make sure the microphone is firmly held in position and acoustically decoupled from the floor.

In a live concert context, especially with the audience present, using a noise signal is not practical. In this case you can still perform measurements, using a music signal, but the measurements will be less accurate as the signal isn't known in advance and does not necessarily contain all frequencies like noise does.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

123 Measurement setup

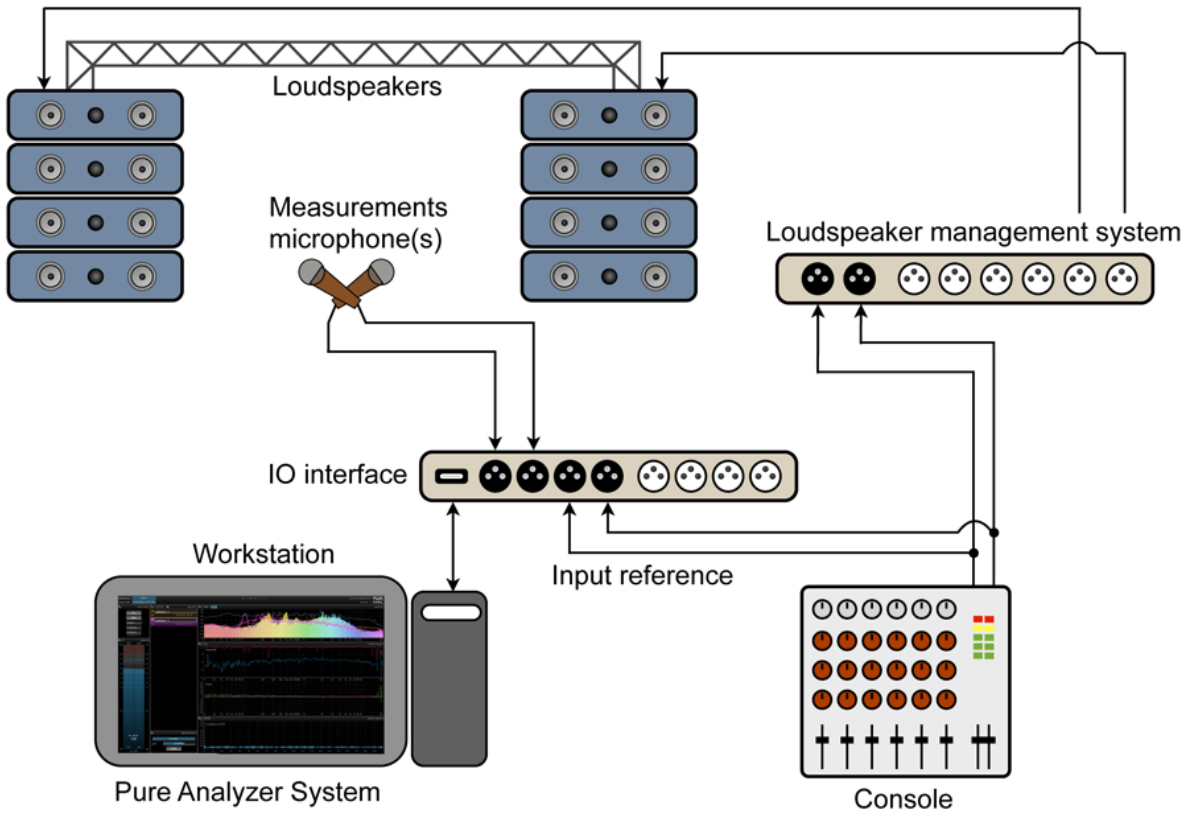

Figure 123.1: Typical configuration for a live venue measurement setup using external signal generator.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

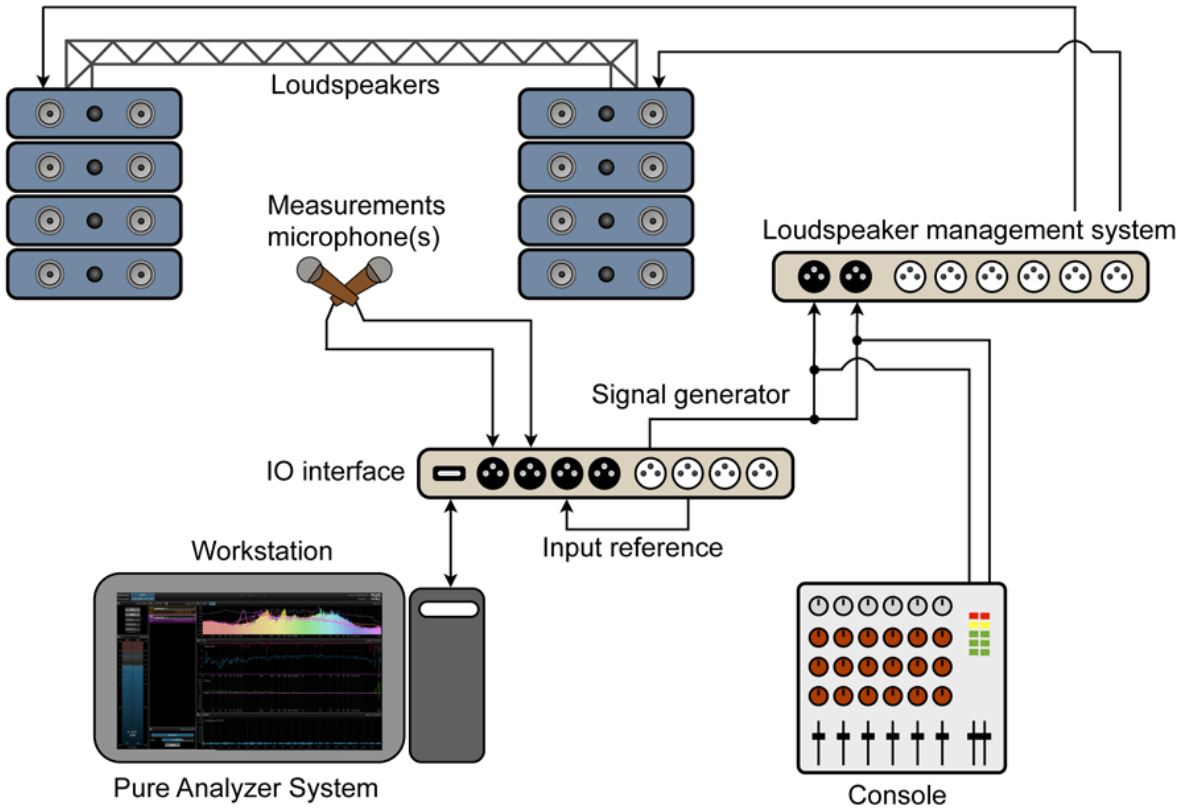

Figure 123.2: Typical configuration for a live venue measurement setup using Pure Analyzer's internal signal generator and loopback

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

124 Test signals

Pure Analyzer is designed to cover the broadest range of practical use cases, and does not impose a limitation on the measurement signal used.

Traditionally, transfer curve and impulse response measurements are performed by feeding a specially designed test signal into the system, the most commonly employed being pink and white noise and swept sines. While these type of signals are those that give the best and more accurate results, with each having its own strength and weaknesses, they do prohibit the measurement of a system in the context of a live system with the audience present.

Performing measurements using a live music signal allows the engineer to fine tune the system settings to compensate for changing conditions such as the effect of the crowd on acoustic reflections and damping, varying temperature and humidity, etc. Although less pleasing to the ear, we do however recommend using a noise test signal whenever possible, at least as a starting point.

You are free to use any kind of test signal generator, outboard or plugin, provided you trust it being reliable and easy to use. A selection of plugins suitable for this task is shown in the chart below.

> **Note**
>
> While Pure Analyzer does not impose any limitation on the test signal used, we recommend using the integrated Signal generator 133, which has been especially designed for this task. We conducted thorough tests on a wide panel of signal generators available as plugins or integrated into DAW software and found that many do not meet the requirements for performing accurate and reliable measurements.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XIII

Live IO

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

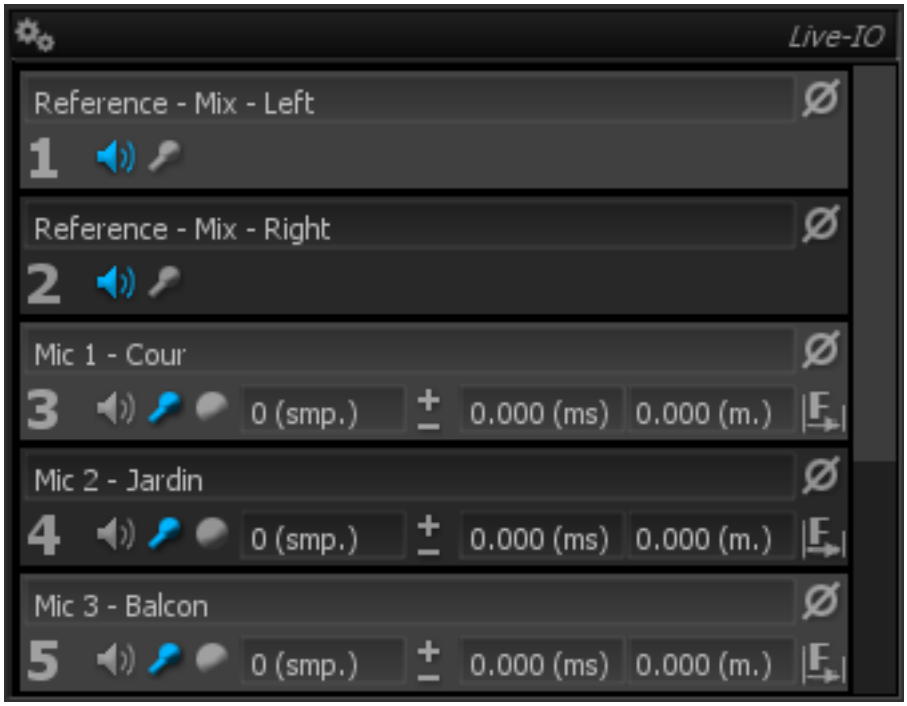

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

125 Introduction

The delay finder's role is to determine the total delay of the signal path, from source to response. Note that this excludes any delays induced by your soundcard and DAW, as these should be compensated for and equivalent to zero as explained before. Here we are only concerned with the time taken by sound-pressure waves to travel the distance from loudspeakers to the measurement microphone placed at the listener position.

This figure must be determined with sample accuracy in order to establish proper transfer function and impulse response measurements. In a sound installation context, computing precise time-delay is crucial to align multiple speakers and transducers properly, as to minimize comb-filtering artifacts.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

126 Basic operation

126.1 Compute the delay

Press the button to find the delay using the most recent incoming audio. The resulting figure is displayed almost instantly as a:

- Delay in samples (smp).
- Distance in meters (m) or Imperial feet (ft.) depending on whether Metric system is enabled.
- Delay in milliseconds (ms).

126.2 Compensate the delay

Pressing the button activates a delay line in the source signal path to compensate for the currently displayed delay value, effectively time-aligning source and response signals. Pressing again deactivates the delay line, which allows for quick comparison between uncompensated and compensated signal paths.

126.3 Fine-tune manually

If necessary, you can manually adjust the delay figure using either of these methods:

- Direct keyboard numeric value entry as time or distance figure.
- Increment / decrement by clicking the +/- icons.
- Increment / decrement using the +/- numeric keys.

126.4 Perform a new measurement

Press the button again to perform a new measurement. This will overwrite any previous value.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

127 Notes

127.1 Max. delay time and room/venue size

The maximum measurable delay time is adjustable in the settings. Attempting to measure a delay greater than this will inevitably lead to corrupt measurements. The default setting is 1s, which should cover the vast majority of real-world situations, since it covers a distance of 330 meters.

127.2 Ensure stable conditions while performing a measurement

You should ensure both source and response signals have reached stability before attempting measurement. In particular, do not stop or start the audio, change the volume or any other parameter just before or during measurement. This would invalidate the measurement and you would have to start again.

127.3 Limitations

Please note there are many unknowns in play when determining the optimum delay figure. While we did our best to make this tool as robust and accurate as possible, as with all automatic procedures there is always a possibility that it will fail. In this case you should repeat the process or resort to manual adjustment until you get satisfactory results.

127.4 Multiple paths

The major assumption behind delay compensation is that there is a main direct path from source to listener. In a very reverberant or complex-shaped acoustic space, this obviously does not apply anymore. This is where acoustics expertise and trial-and-error comes into play, in order to attain the best compromise.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

128 User interface and controls

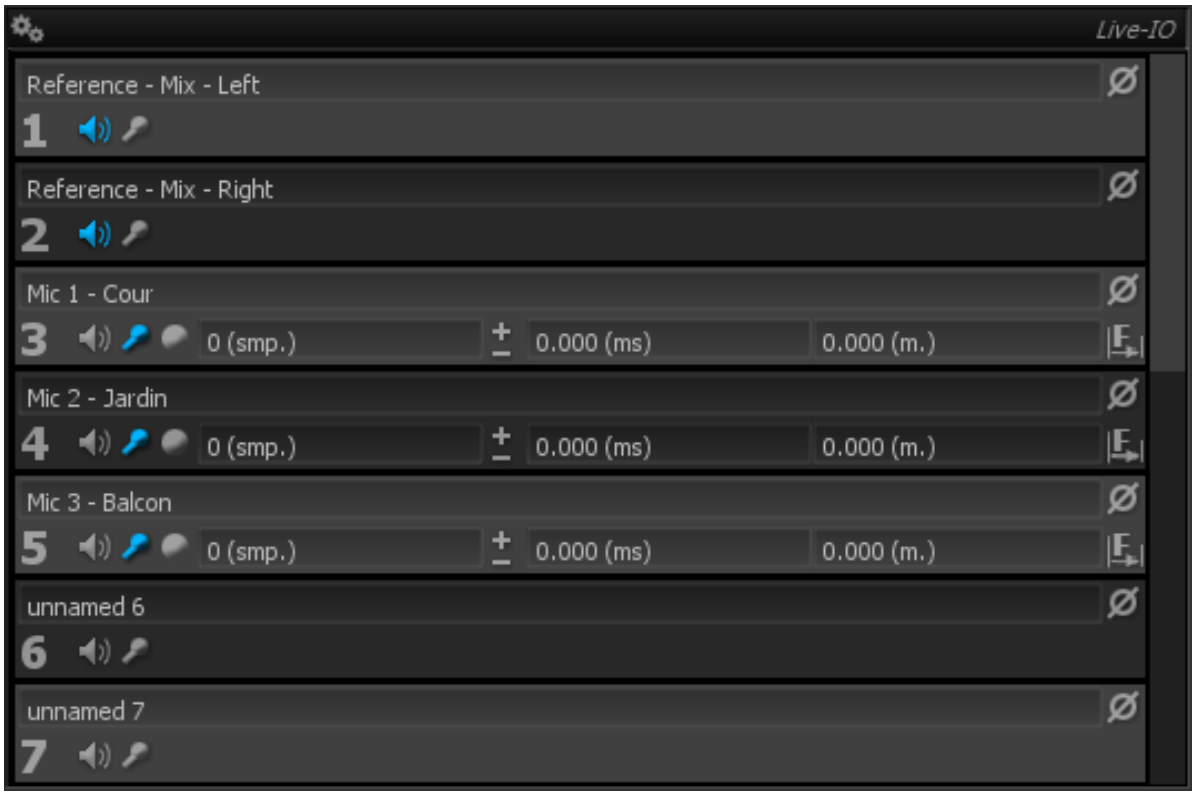

Figure 128.1: Live IO controls.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

128.1 Name

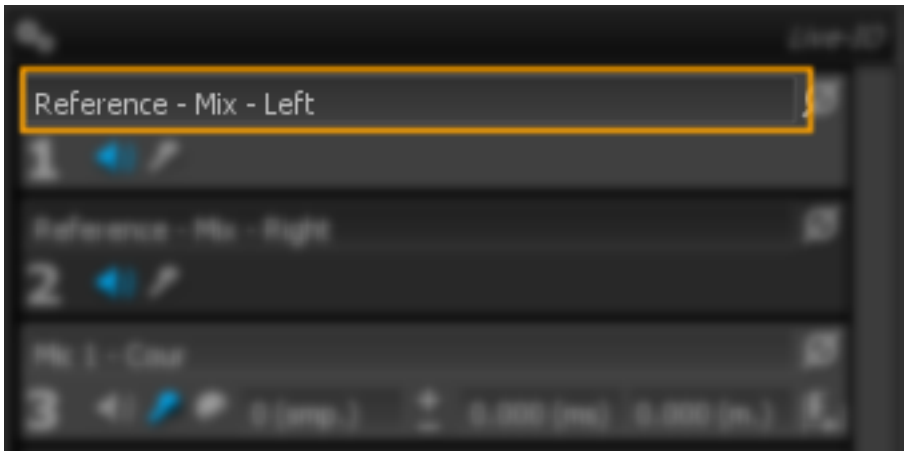

Allows to define a custom name for each channel. This is a global name; saved and restored with the preset but not directly related to the Hardware I/O Interface. As this, it will be consistent even if you switch the Hardware I/O Interface or switch to connect to a **?@sec-intial-setup-samplegrabber**.

128.2 Ref

The button toggles whether the corresponding channel should be used as a reference signal.

Multiple channels can be used as reference, in which case a mono-sum of these channels is used as the internal reference signal.

128.3 Mic

The button toggles whether the corresponding channel should be used as a microphone input signal, which is used to capture the response of the system.

Multiple channels can be used as microphone input, in which case a mono-sum of these channels is used as the internal microphone signal.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

128.4 Phase invert

The toggles phase inversion of the selected channel on and off. This can be used to compensate another known phase inversion somewhere else in the analog signal chain.

128.5 On/Off

The button toggles delay compensation on and off. When the correct delay has been determined, engage this button to insert a delay line in the reference channel, to align reference and measured signals, and get correct transfer function and impulse response.

On/Off delay button appears only on channels toggled as microphone>

128.6 Delay value

The delay value is displayed simultaneously as:

- A number of samples (at the current sampling rate).
- A time delay, in milliseconds.
- A distance, in meters or feet.

You can manually adjust any of these values, using either keyboard input or fine increments with the up and down arrows; the two other values will change accordingly.

Please note precision of the distance value depends on correctness of the temperature value inserted in the main setup. In a concert hall with an audience present, there will probably important temperature variations, so this value should only be seen as a rough measure.

Lastly, remember the delay value in samples is the master value, from which others are derived.

Delay values appears only on channels toggled as microphone>

128.7 Find

Clicking the button starts a new delay value computation. Previous values, whether computed using the delay finder or entered by hand, will be erased. The algorithm accumulates a certain amount of incoming signal before the actual computation is actually performed, to ensure the delay is always computed using the most current audio.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Find Delay appears only on channels toggled as microphone>

128.8 Progress

An informational text showing the progress of the computation is shown when the delay find button is clicked, as well any error potentially encountered.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

129 Setup

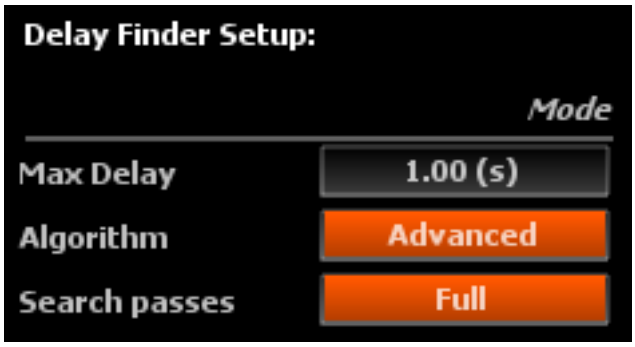

> **Note**
>
> Delay finder setup options.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

130 Max delay

Sets the maximum delay that can be computed. The default is 1 second, which equates to a maximum distance between microphone and speakers of roughly 300 meters, and should be large enough for most practical applications. You can decrease this value as this minimizes the possibility of false readings.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

131 Algorithm

Selects between three different delay finding algorithms:

- Basic: lowest CPU load, less robust to noise and interference.
- Standard: medium CPU load, the default.
- Advanced: heavy CPU load, can help in very noisy environments.

> **Note**
>
> In the rare case where the standard method fails in your particular environment, you should try other methods.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

132 Search passes

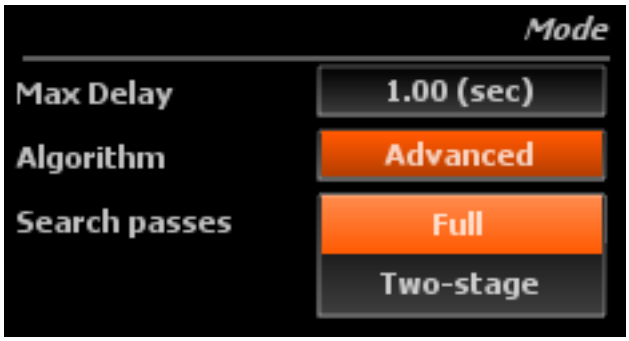

The delay can be set to work in one or two passes:

- Full (default): one search pass covering all possible values.
- Two-stage: first pass to determine a rough delay value, followed by a second to refine the reading.

> **Note**
>
> Two-stage delay finding can improve accuracy in the context of an environment with heavy multiple reflections.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XIV

Signal generator

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

133 Signal types

133.1 Pink noise

Pink noise is a random signal with an amplitude falloff inversely proportional to frequency. This is the most commonly employed variety noise in audio measurement, as it a constant-energy perceived content.

133.2 White noise

White noise is a random signal with constant energy across the audio range. Compared to pink noise, it sounds much brighter as it has more energy in high-frequencies. Commonly employed for electronic apparatus measurements.

133.3 Sine

Fixed-frequency, pure tone generator.

133.4 Sweep

Generates a variable tone from start to end frequencies. Linear and logarithmic variants are available. Log. sweep is best suited for audio measurements as this corresponds to constant time per octave.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

134 Controls

Figure 134.1: Signal generator controls.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

135 Type

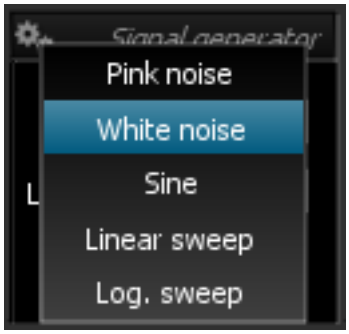

Sets the signal type to generate.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

136 Level

Output level of the waveform, expressed in dB RMS.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

137 Enable

Toggles signal generator output on and off.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

138 Setup

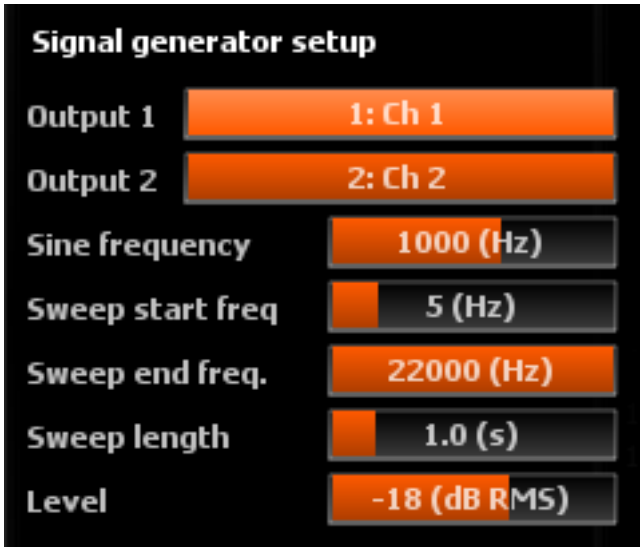

Figure 138.1: Signal generator setup options.

138.1 Output

Selects the hardware output(s) to which the signal generator should be routed. Set to? None? to disable the signal generator output entirely.

138.1.1 Output 1

First generator output.

138.1.2 Output 2

Second generator output.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Both signals sent to the hardware output channels are identical.

138.2 Feed input reference

Fed the reference input (default input 1) with the signal generator.

138.3 Sine frequency

Sets the frequency of the sine generator, only applicable when the signal type is set to Sine.

138.4 Sweep start/end frequencies

Sets the range of frequencies to sweep.

> **Note**
>
> Reverse start and end frequencies to obtain reverse sweep.

138.5 Sweep length

Sets the overall duration of the sweep in seconds,i.e. the time taken to go from start to end frequency.

138.6 Level

Generator output level in dB RMS.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XV

Transfer function measurement - Transfer_function_measurement_Introduction.qmd - Transfer_function_measurement_Transfer_function - Transfer_function_measurement_Transfer_function - Transfer_function_measurement_Transfer_function - Transfer_function_measurement_Setup_Setup.qmd - Transfer_function_measurement_Setup_Main.qmd - Transfer_function_measurement_Setup_Coherence - Transfer_function_measurement_Setup_Coherence - Transfer_function_measurement_Setup_Magnitude - Transfer_function_measurement_Setup_Phase.qmd - Transfer_function_measurement_Setup_Other

Copyright (c) 2023 ELVIS SE, All Rights Reserved

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XVI

Impulse response measurement

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

139 Introduction

The impulse response of a system is the signal obtained at the output when feeding a click (also termed impulse, spike or Dirac) its input. It is a fundamental tool to describe the time properties of a linear system.

Combined with the transfer function, impulse response measurement is essential in characterizing the acoustics of a studio, concert hall or venue, from which synthetic figures such as reverberation time are derived. Determining the impulse response of an amplifier and loudspeaker in tandem can also serve to assess their performance.

A pass-trough device, or equivalently, a completely dead space such as an anechoic chamber exhibit a unit impulse response, whose value at zero time is gain, and is zero at all other instants.

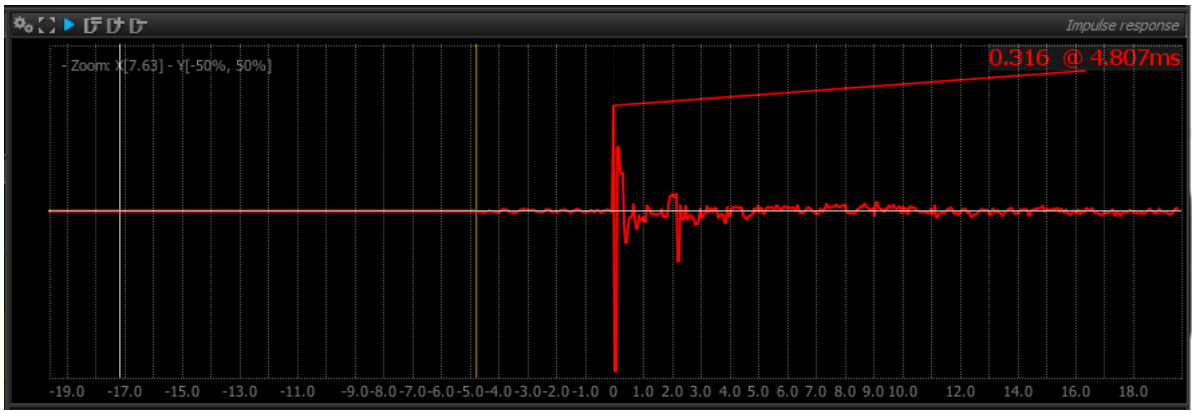

Figure 139.1: Impulse response display example

139.1 Analyze / freeze

The button toggles the impulse response real-time update on and off.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

139.2 Delay Set

The delay Set button set value of the peak time location to the delay value currently set for microphone channels in the Live IO 125 panel.

If Real Time curve is disable, the Max value of the selected snapshot is used.

139.3 Delay add

The delay add button adds value of the peak time location to the delay value currently set for microphone channels in the Live IO 125 panel.

If Real Time curve is disable, the Max value of the selected snapshot is used.

139.4 Delay subtract

The delay subtract button subtracts the peak value to the microphone channels delay.

If Real Time curve is disable, the Max value of the selected snapshot is used.

> **Note**
>
> The impulse response is closely tied to the transfer function, in that they are both related to another by a Fourier transform.
> For practical aspects, FLUX:: Analyzer employs two distinct analysis engines to compute the impulse response and transfer function, as this allows to use separate settings for the two, which is often necessary in practice.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

140 General procedure

Impulse response (IR) measurement requires that sufficient samples be accumulated before the actual computation is ready, depending on the values of the Max Length and Time averaging 141 settings. The user interface displays a message indicating the remaining time before the display is ready, whenever the related settings are changed or the reset button is pressed.

Because the software cannot detect whenever you make changes to the analyzed system, you need to press the Reset button in the setup or wait for the display to stabilize before reading the display.

Once your test setup is ready, press the 'Reset' button and wait for the display showing remaining time to disappear, at which point the IR display is ready. When a sufficient amount of samples has been accumulated, IR computation goes on as long as the 'Run' button is active, and is updated with new incoming samples.

> **Note**
>
> Make sure the actual impulse response is shorter than the maximum specified time, otherwise mild to severe time-aliasing will occur, and the measurement will not be reliable. A good rule of thumb is to set the Max length parameter to twice that of the estimated RT60 of the room.
> If in doubt, raise the Max length setting until the impulse response curve does not change, and check the tail of the curve does indeed fall to zero.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

141 Time averaging

The time averaging function computes the mean of several IR measurements over time, which is very useful to filter out noise and other artifacts. It is enabled by default as this gives better display stability and measurement robustness, however averaging also slows down the reactivity of the display to incoming variations, so you can disable it if needed.

When IR averaging is enabled, a message is shown giving the number of currently computed impulse responses versus averaging length. The display switches to show the mean confidence percentage when ready.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

142 Main setup

Impulse response setup options

142.1 Run

Toggles impulse response live update on and off. Default is on. You can temporarily freeze the impulse response with this button, to examine it in detail at your leisure, without worrying about changing external conditions.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Disabling ‘Run’ is equivalent to freezing the measurement, and leaves the averaging buffer as is.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

143 Reset

Resets the impulse response computation, including the averaging buffer.

> **Note**
>
> If you are using a lengthy averaging setting and have just changed your setup, you can reset the entire impulse response to immediately forget previous measurements .

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

144 Max length

Sets the maximum length of the impulse response in seconds. If the reverberation time in your room exceeds this value, time-aliasing will occur, meaning that the impulse response computation will be incorrect and some of the reverberation tail might end up at the start of the display. The default value is 0.3s.

Increasing this value not only requires more processing power, it also increases the time needed to wait for the display to be updated, as the calculations involved need a greater amount of incoming audio samples to be processed.

Combining time averaging and a long length setting mean you'll have to wait 30 seconds or so for the display to stabilize, so you should really do this if you need to or do not mind waiting.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

145 Time averaging

Accumulates several impulse response measurements and averages them before display. This allows for more precise measurements and lessens the effect of spurious acoustic noise interfering with the measurement, but it also means having to wait longer for the measurement to be ready.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

146 AutoRange

Toggles auto-scaling the vertical axis to the effective range of the impulse response data in the current timeframe. It functions as an automatic zoom alongside the vertical axis, which can provide useful for hands-free operation.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

147 Zoom

147.1 Zoom X

Adjusts the horizontal axis zoom factor, which can also be changed by clicking inside the impulse response display itself and rotating the mouse center wheel up and down (scroll in / out), if your mouse has this feature.

147.2 Zoom Y-/+

Adjusts the vertical axis zoom factor.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XVII

Spectrogram

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

148 Usage

The spectrogram is a two-dimensional view of the evolution of the signal's spectrum over time, i.e. a frequency (Y-axis) versus time (X-axis) plot (or the invert, depending on the direction setting), with the magnitude modulating the color and intensity of the pixels.

A spectrogram can be computed using the STFT (short-term Fourier transform) as well as other means. It serves as a useful tool to get a global picture of how the frequency content of a signal changes over a time, and eases identification of its structure. Broadband noise appears as background, a pure tone as a horizontal line, and a transient as a vertical line.

Harmonic content appears as horizontal groups of parallel lines and vertical bars respectively, etc.

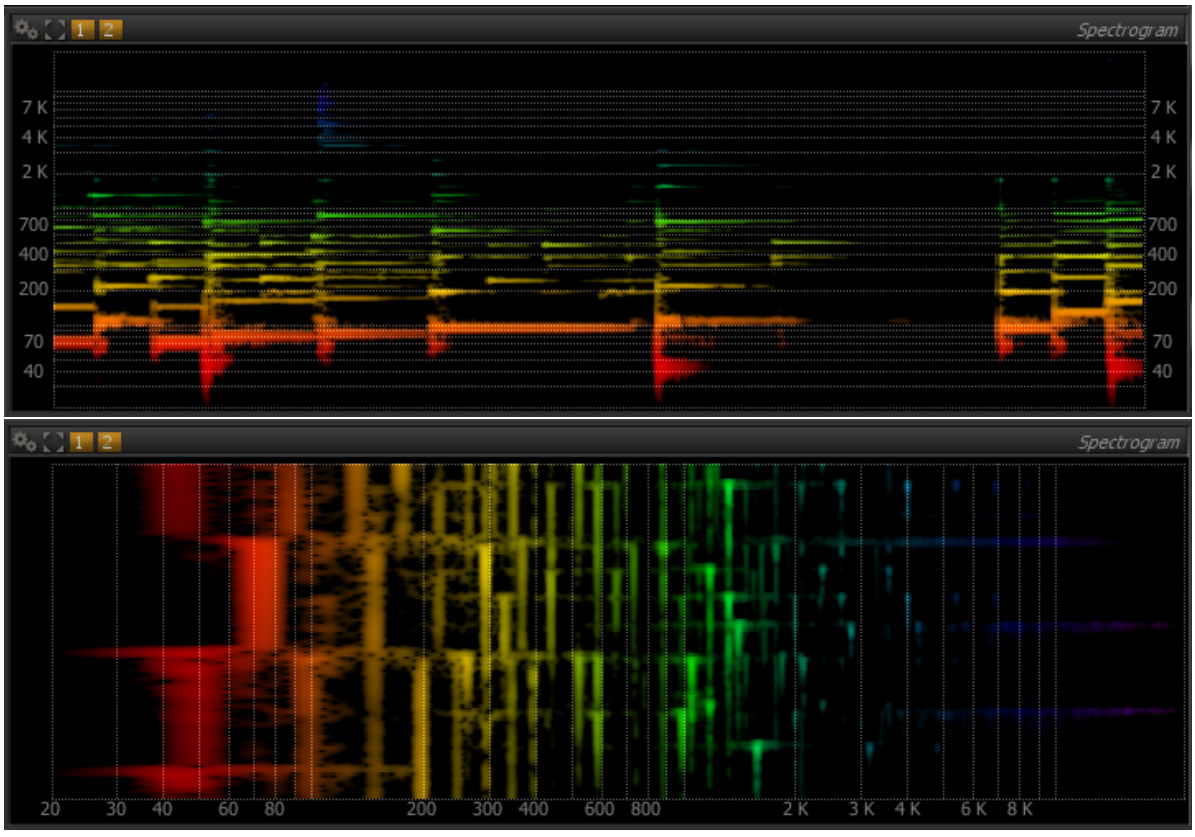

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> Example spectrogram view

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

149 Setup

> **Note**
>
> Spectrogram setup

149.1 Direction

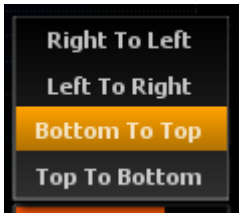

Defines the scrolling direction of the spectrogram.

149.2 Log Gain

Toggles logarithmic scaling of the magnitude spectrum on and off.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Default is on.

When enabled, the magnitude at a given time-frequency point is applied a logarithmic scaling before being converted to a pixel value. This has the effect of compressing the dynamic range, and makes low energy components stand out more, but also decreases the contrast of the display.

149.3 Threshold

149.3.1 Threshold - Range Max

Sets the maximum amplitude spectrum value to be displayed.

149.3.2 Threshold - Range Min

Sets the minimum amplitude spectrum value to be displayed.

149.4 Color Mode

149.4.1 Duotone

In this color mode, the amplitude of a time-frequency point is mapped to a pixel using a two-color palette, set using start/end colors.

149.4.2 Black On White

In this color mode, the amplitude of a time-frequency point is mapped to a pixel using a Black & White color palette with White as background.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

149.4.3 White On Black

In this color mode, the amplitude of a time-frequency point is mapped to a pixel using a Black & White color palette with Black as background.

149.4.4 Power grading 1, 2, 3, 4, 5

In this color mode, the amplitude of a time-frequency point is mapped to a pixel using different predefined color palette.

149.4.5 Frequency grading

In this color mode, the amplitude of a time-frequency point determines the intensity of the corresponding pixel, whose color varies according to frequency.

149.4.6 Duo-tone grading start/end colors

Sets the color to use for minimum and maximum amplitude components respectively, when color mode is set to *Duotone*.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

150 Snapshots

Curves can be saved on disk for subsequent loading, allowing for comparison between mixes, comparison to a reference spectra, etc.

A snapshot contains the state of the curves at the time it was taken:

- Channel spectra.
- Transfer function.
- Impulse response.

A snapshot, as implied by the name, is like a picture of the whole application at a given time. A snapshot contains all the data to save the current signal analysis as displayed on screen, and restore it at any given time, as well as to make comparisons between different locations, setups, etc.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

151 Usage

151.1 Snapshots

Any number of snapshots can be stored and recalled for further use, and are organized into a group container called a project.

Please keep in mind computing and displaying the data associated with a snapshot is not free in terms of processing power and memory. How many snapshots you can use at a time will depends on your particular configuration.

151.2 Project

FLUX:: Analyzer creates a default project at startup, which the snapshots will be added to. Projects are stored on disk as a folder containing associated data files. Projects can therefore be renamed, moved, archived and transferred between computers using any method you wish, provided you include all data files inside the project folder.

You can save and reload as many projects as you want, disk space permitting.

Projects are saved in

`<User folder>/FLUX SE/Pure Analyzer System/Data/<Project Name>` >

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

152 Controls

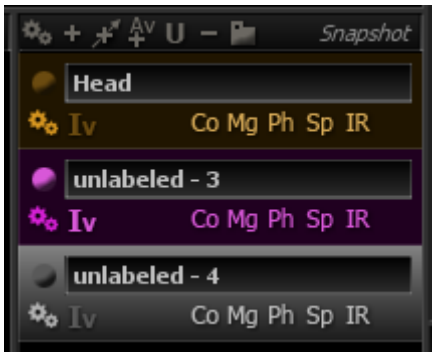

Figure 152.1: Snapshot list and controls

The snapshot area shows a list view, where one or more snapshots can be selected. The selected snapshot(s) will be highlighted accordingly, both in the list and the corresponding display(s), with increased curve thickness.

152.1 Selection and navigation

The snapshot list follows standard user interface guidelines, which means you can:

- Use keyboard up and down arrows to change the currently selected snapshot. Note: the snapshot section area must be in focus for this to have effect.
- Click on any snapshot to select it.
- `Shift + click` to define a selection range of multiple snapshots.

152.2 Add new snapshot

Clicking the icon immediately creates a new snapshot, stores it on disk, in the folder, adds it to the current project and selects it.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

152.3 Acquire sweep

The button launches acquisition of a sweep snapshot. This special type of snapshot automates the acquisition of transfer function and impulse response curves using a swept sine generator output.

Please check the following for proper operation:

- Generator output -Chapter 133 should be properly assigned to the corresponding hardware channels .
- Hardware IO should be properly configured and set to hardware output(s).
- Sweep start/end frequencies should be set as desired.

Providing the previous requirements are met, a progress dialog will then be displayed until all data has been acquired and the snapshot is computed and ready for display.

> **Note**
>
> Ensure the outputs of the generator and the connected speakers are set to reasonable levels in order to prevent damage to your equipment and hearing loss.

152.4 Create average

Click the button with multiple snapshots selected to create a new snapshot average of these.

The new snapshot curve data is computed from the selected snapshot data as follows:

- Spectrum magnitude: average of magnitude vectors.
- Transfer function magnitude: average of magnitude vectors.
- Transfer function phase is set to zero as there is no mathematically significant meaning to averaging of potentially unrelated phase spectra.
- Transfer function coherence: average of coherence vectors.
- Impulse response: average of signals.

The averaging can only be performed if the snapshots are compatible with one another, that is they have identical:

- Sampling rate.
- Number of channels.
- Spectrum type.
- Impulse response length.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

A warning message will inform you the averaging cannot be performed if one of the above conditions are not met.

> **Note**
>
> The snapshot average stores the average of the snapshots at the moment it was created. If you change the snapshots in any way, the snapshot average will not change.

152.5 Update current

Clicking the button will overwrite the last selected snapshot contents with the most current data.

This is especially useful when you are fine-tuning your measurement setup and only want to keep the latest one, without creating several snapshots and deleting them afterwards.

> **Note**
>
> This function is destructive: there is no means to revert the original snapshot data.

152.6 Load project

Opens a dialog box where you can select an existing folder containing a previously saved project.

To create a new empty project, creating a new folder and name it, then selecting using in this dialog.

152.7 Curve visibility

For each snapshot, you can control which curve should be displayed. These controls are intended to select only those curves that you really need to be displayed when there are many visible snapshots, and still maintain a legible display:

- Transfer function coherence.
- Transfer function magnitude.
- Transfer function phase.
- Magnitude spectrum.
- Impulse response.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> The default visibility of newly created curves can be customized in Display defaults.

152.8 Color

Opens up a color selector dialog where you can manually set the color used to identify the snapshot, both in the list and as a curve.

152.9 Name

By the default, newly created snapshots are given the name unlabeled-x, where x is the current number of snapshots in the project. You are strongly encouraged to edit this name for further reference.

152.10 Invert (Iv)

Inverts the magnitude curve of the Transfer function.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

153 Setup

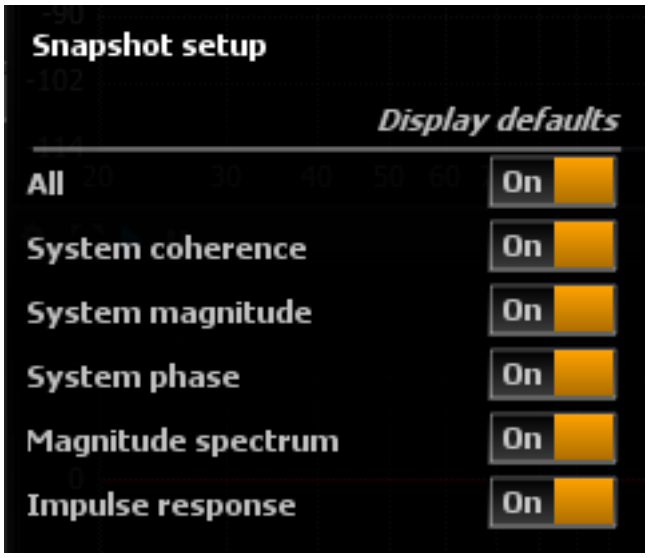

> **Note**
>
> Snapshot setup options

153.1 Name

You can here define a new project name which will ultimately create a new folder in the user data folder `<User folder>/FLUX SE/Pure Analyzer System/Data/<Project Name>`

153.2 Display defaults

Toggles the default curve visibility applied to newly created snapshots.

'All' controls whether new snapshots should be visible by default, and you can fine-tune which curves should also be shown/hidden here.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XVIII

Wave scope

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

The wave scope is a simple oscilloscope-type waveform display.

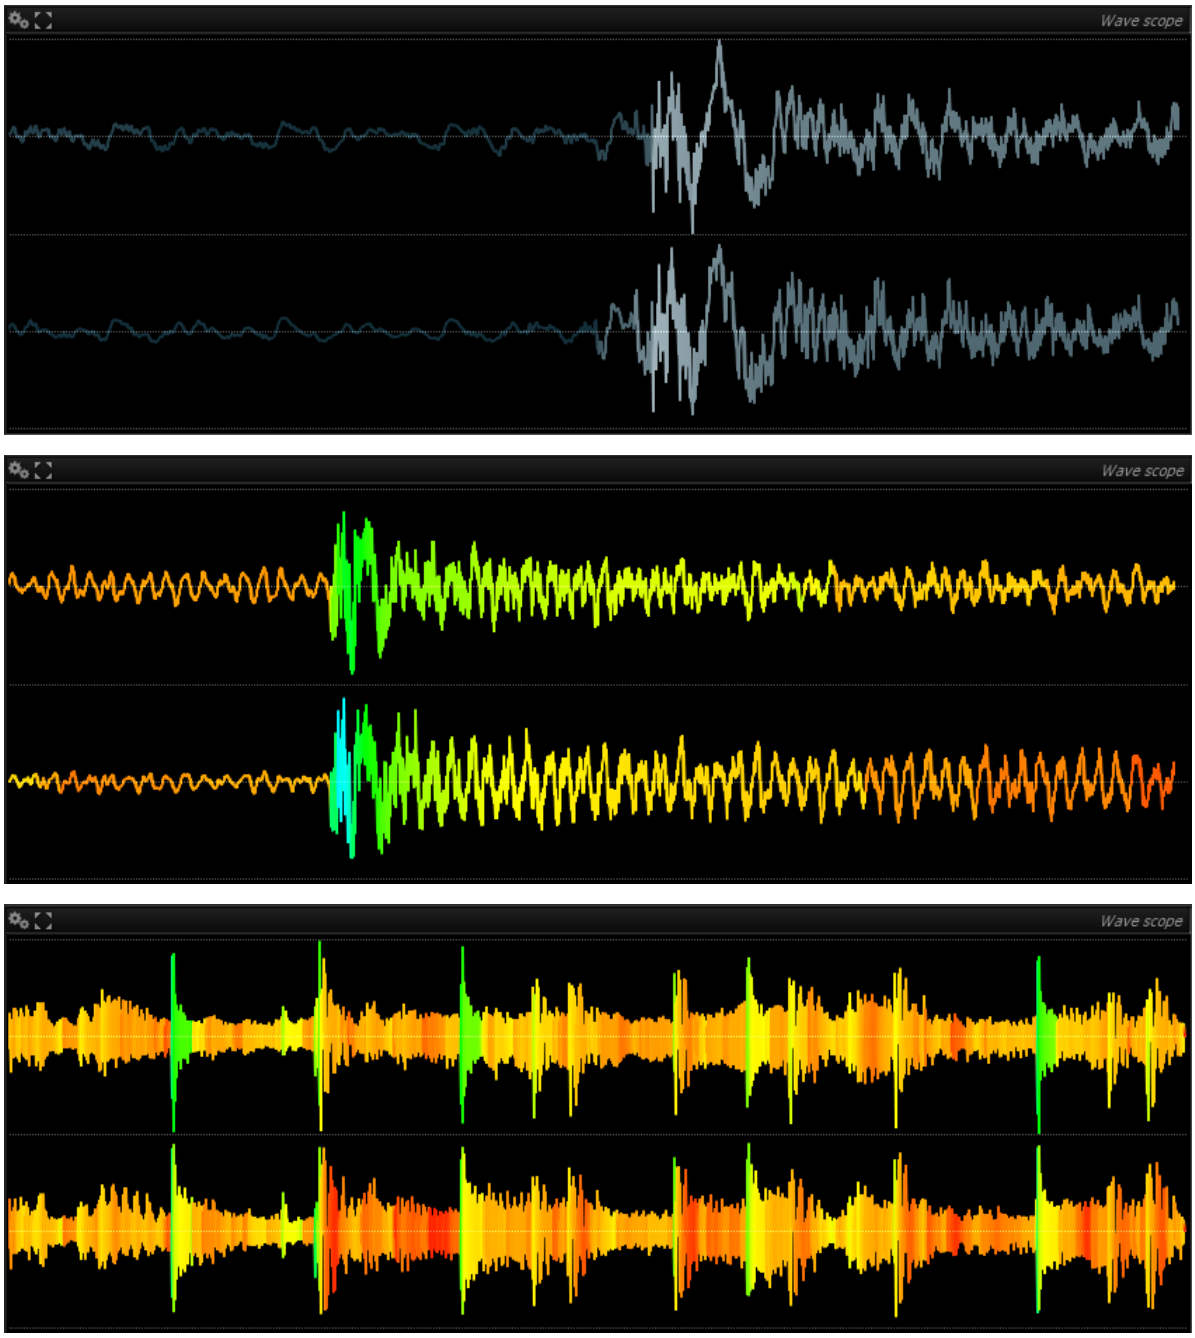

Wave scope display with stereo input.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

> **Note**
>
> The wave scope will include more functionality and settings in future releases.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

154 Setup

154.1 Time

Time window in milliseconds.

154.2 Color Mode

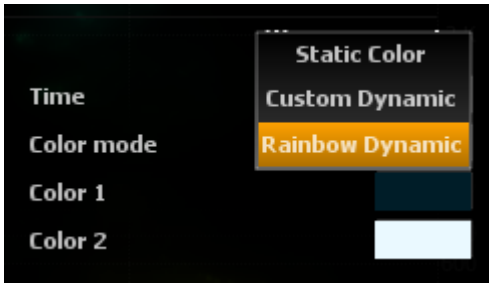

154.2.1 Static

Displays the waves using 1 unique static color.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

154.2.2 Custom Dynamic

Displays the waves according to the transient using a 2 user defined colors gradient.

If custom dynamic chosen, user defined Color 1 and Color 2 will be used>

154.2.3 Rainbow Dynamic

Displays the waves according to the transient using a rainbow colors gradient.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

Part XIX

System requirements

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

155 System requirements

FLUX:: Analyzer is built around FLUX::SE's new 2D/3D efficient graphic engine, which employs full GPU-acceleration using an OpenGL-compliant graphics card.

In order to experience the outstanding responsiveness with the Analyzer, even with a very busy display, and to fully take advantage of the software's analysis capabilities, using a modern nVidia or ATI Radeon graphics card is recommended.

Older, and other less efficient graphics cards do not have the required performance and specifications, and offload too much work to the CPU (see below).

The processor is also an important factor, and we recommend using at least and Intel Core 2 Duo, Core i5 or newer architecture processor. AMD processors are also supported, but might exhibit lower performance, as they do not offer the same capabilities and optimizations as Intel CPUs.

155.1 Minimum requirements

- CPU: Intel Core 2 Duo.
- GPU: OpenGL 2.0 or superior compatible, with pixel-shader support.

155.2 Recommended configuration

CPU: Intel Core i5 or better.

GPU: AMD/ATI Radeon or nVidia video-card. Intel integrated graphics are not powerful enough and should be avoided.

155.3 Common requirements

A free USB port to connect the iLok key if not using machine authorization

:::{.callout-note} Please check the latest version of vendor-provided, optimized drivers are installed for your graphics card. Generic drivers are generally less up-to-date and may contain bugs or miss optimizations present in drivers specific to your particular model.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

156 Compatibility

FLUX:: Analyzer is a 64bit application fully compatible with 64-bit operating systems.

156.1 Operating Systems

- PC: Windows 10
- Apple: macOS versions 10.13 and up (macOS Big Sur, Monterey compliant, Compatible with ARM / Silicon)

156.2 Hardware IO support

Any soundcard with a driver compliant with these standards:

- ASIO(Windows).
- Core Audio (macOS).

156.3 Software - Sample Push support

SampleGrabber is a 32-bit plug-in compatible using 64-bit double precision internal processing, compatible with 32-bit and 64-bit (via bridge) hosts

All major native formats (AAX, VST, AU, RTAS, TDM, AAX VENUE) are supported.

156.4 Supported formats

- Windows 10
  - VST (2.4)
  - RTAS*
  - TDM*
  - AAX
  - AAX VENUE

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

- macOS - 10.12 and later
  - VST (2.4)
  - AU
  - AAX
  - RTAS*
  - TDM*

> **Warning**
>
> *The TDM/RTAS version requires ProTools version 7 or above.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

A Credits

Project manager and Designer

Gael Martinet

Developed by

Gael Martinet

Siegfried Hand

Lorcan Mc Donagh

Samuel Tracol

DSP Algorithms Specialist

Lorcan Mc Donagh

Graphic engine

Emmanuel Julien

Gael Martinet

Contributors

Felix Niklasson

Cyril Holtz

Philippe Amouroux

Yves Jaget

Laurent Delenclos (a.k.a Bellote)

Madje Malki

Niels Barletta

Jerome Blondel

Sergio Valero Garcia

Anthony Belard

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

and thanks to all fantastic testers…

Special Thanks to Alain, Yves, Bruno, Cyril and Claude for helping to shape our minds over the years.

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

B Release Notes

B.1 FLUX:: Analyser 20.12

B.2 Major Additions

- Stability improvements (hardening) with all latest operating systems (OS).
- Catalina, Big Sur and Apple notarization official support.
- New built in error reporting tools for FLUX:: Analyser.
- New V20.12 release (new versioning system), now including 1 year of support and upgrade with perpetual license purchase.
- New Apple and Windows menu and shortcuts.
- Many internal improvements and optimizations - CPU and GPU.

B.3 Major optimizations

- FLUX:: Analyser and Analyser High Precision (64 bit)
- HiDPI / Retina
- Loudness metering conformance for many broadcast/streaming
  - AES Streaming, Apple, Amazon, Deezer, Netflix, Spotify, TIDAL, YouTube and more.
- Revised loudness meter display (clearer, more info and overload warnings)
- Now with 2 perceptual colormaps to spectrogram for improved readability.
- Musical note peak display (label mode)
- Improved spectrum display interpolation
- Improved pure spectrum mode side-lobe analysis
- External IR loading in snapshots
  - visualizing them as impulse responses and magnitude spectra
- I/O layout preference for various channel based arrangements and order.
- OSC support

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

B.4 Other Improvements

- Application is now notarized to comply with macOS Catalina, Big Sur requirements.
- Spectrum Frequency scale start at 0Hz
- Limit generator output level to prevent sound card clipping.
- Smoother generator volume changes
- New main menu on macOS (Edit and View Menu)

B.5 Bug fixes

B.5.1 FLUX:: Analyser 20.12

B.5.1.1 Build 49931

Fixes;

- Studio Session Analyzer is not working

B.5.1.2 Build 49880

Fixes;

Core:

- Metering Stats (Offline processing) unstable or returning wrong values.
- Metering Stats (Offline processing) file batch loading issue.
- Ensure saved IO setup is still present on reload.
- Fix transfer function magnitude smoothing.
- Limit data tooltips to actual range and fix refresh lag.
- Fix a number crashes that could occur in various scenarios.
- Suppressed some memory leaks.
- Fixed a crash that could occur when switching from pure spectrum / FFT mode.
- Fixed snapshot reload issues.
- Improved network connection stability.
- Added workarounds for various OpenGL driver bugs that were causing display issues on certain setups.
- All sample rates initialized to 48k by default

UI:

- Display issues and improvements on macOS

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.

- Added workarounds for various OpenGL driver bugs that were causing display issues on certain setups.

- TruePeak preset name not reflected in UI
- Meter peak value text is clamped to range

Various:

- Fix data races

B.5.2 Sample Grabber Plug-ins 20.12

B.5.2.1 Build 49880

Fixes;

- SampleGrabber base name truncated after close/reopen host.
- SampleGrabber AAX - Win&Mac - Changing the plug-ins layout has no effect on the analyser.
- SampleGrabber - Win&Mac - AAX/AU/VST - GUI issue with Layout list.

B.6 Known Issues

- Wrong channel order with SampleGrabber and Nuendo
- Issues in some scenarios with Avid VENUE S6L - Sample Grabber AAX VENUE - Doesn't appear to work (works in AAX Native)

Copyright (c) 2023 FLUX:: SE, All Rights Reserved.