



4 PLAYER UPRIGHT INSTRUCTION MANUAL

R Mirage Studios, USA.

All rights reserved. Trademark use granted to Konami under license from Mirage Studios, USA.

Exclusively licensed by Surge Licensing, Inc.

© Konami Inc. 1989




T.M.N.T.: PARTS LIST

Part #	Description
30110	Red Button
30112	Blue Button
30118	Yellow Button
30260	Violet Button
30202	Switch Holders
30250	Palnuts
30304	Red Joy Stick
30305	Blue Joy Stick
30307	Yellow Joy Stick
30321	Violet Joy Stick
30502	Control Panel Hinge
35101	Fuse 1 AMP
35104	Fuse 4 AMP
35105	Fuse 5 AMP
35201	ISO Transformer
35300	Line Filter
35403	Power Supply
40101	Coin Door W/Meter
40106	Coin Door No/Meter
40208	Marquee Bracket (Acute)
40209	Marquee Bracket (Obtuse)
40355	Marquee Plexi
40356	Tempered Glass
40505	25 Inch Monitor
40611	Bezel 25"
40700	Light Fixture
40702	Light Bulb
40946	A.C. Harness
963003	T.M.N.T. P.C.B.
963011	T.M.N.T. DC Harness
963100	T.M.N.T. CPO
963101	T.M.N.T. Instruction Decal
963200	T.M.N.T. Marquee
963304	T.M.N.T. Right Logo Side Decal
963305	T.M.N.T. Left Logo Side Decal
963306	T.M.N.T. Middle Right Side Decal
963307	T.M.N.T. Middle Left Side Decal
963308	T.M.N.T. Lower Right Side Decal
963309	T.M.N.T. Lower Left Side Decal
963400	T.M.N.T. Manual (4P)

T.M.N.T.: AC FLOW CHART

- 1. GREEN/YELLOW
- 2. BLACK
- 3. RED
- 4. BLUE
- 5. BROWN
- 6. RED/BLACK
 7. BLACK/WHITE
- 8. WHITE
- 9. GREEN
- 10. VIOLET
- 11. ORANGE

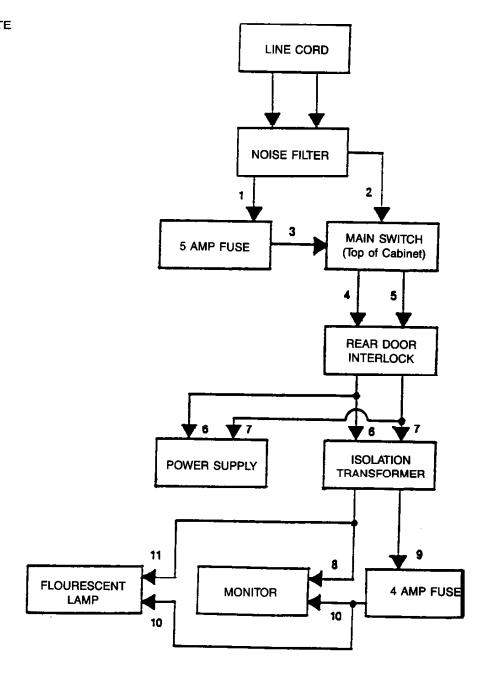


T.M.N.T.: WIRING HARNESS

WIRE COLOR KEY:	Solder Side ←		·	→ Parts Side	
BLACK	GND	Α	1	GND	BLACK
BLACK	GND	В	2	GND	BLACK
RED	+5V DC	С	3	+5V DC	RED
RED	+5V DC	D	4	+5V DC	RED
	NOT USED	E	5	NOT USED	
ORANGE	+ 12V DC	F	6	+ 12V DC	ORANGE
	*KEY	Н	7	*KEY	
	(EMPTY)	J	8	COIN COUNTER	GREEN/GRAY
	(EMPTY)	K	9	(EMPTY)	
YELLOW	SPEAKER (-)	L	10	SPEAKER (+)	BLUE
	(EMPTY)	М	11	(EMPTY)	
WHITE/GREEN	VIDEO GREEN	N	12	VIDEO RED	RED/WHITE
WHITE	VIDEO SYNC	Р	13	VIDEO BLUE	BLUE/WHITE
	(EMPTY)	R	14	VIDEO GROUND	BLACK
	(EMPTY)	S	15	(EMPTY)	
VIOLET/WHITE	COIN 2	Т	16	COIN 1	BLUE/BROWN
	NOT USED	כ	17	NOT USED	
BLUE/YELLOW	2P UP	٧	18	1P UP	ORANGE/WHITE
VIOLET/YELLOW	2P DOWN	W	19	1P DOWN	BLACK/WHITE
ORANGE/GREEN	2P LEFT	Х	20	1P LEFT	RED/GRAY
ORANGE/YELLOW	2P RIGHT	Υ	21	1P RIGHT	GRAY/WHITE
BLACK/YELLOW	A 2P JUMP	Z	22	1P JUMP <i>1</i> 9	RED/WHITE
ORANGE/GRAY	B 2P ATTACK	а	23	1P ATTACK B	GREEN/BROWN
	NOT USED	b	24	NOT USED	
	NOT USED	С	25	NOT USED	
	NOT USED	d	26	NOT USED	
BLACK	GND	е	27	GND	BLACK
BLACK	GND	f	28	GND	BLACK

(BASE COLOR/LINE COLOR)


T.M.N.T.: SUB HARNESS FOR 3 PLAYERS & 4 PLAYERS

		1	
	1	Coin 3	White/Violet
	2	Empty	
	3	3P Left	White/Red
	4	3P Right	White/Yellow
	5	3P Up	White/Black
	6	3P Down	White/Blue
CN3	7	3P Jump	White/Brown
3P	8	3P Attack	White/Orange
CONTROLS	9	Empty	
	10	Empty	
	11	Empty	
	12	Empty	
	13	Empty	
	14	Empty	
	15	Ground	Black
	1	Coin 4	Blue
	2	Empty	
	3	Empty 4P Left	Yellow/Black
	3 4	Empty 4P Left 4P Right	Yellow/Black Brown/Black
	2 3 4 5	Empty 4P Left 4P Right 4P Up	Yellow/Black Brown/Black Green/Yellow
	2 3 4 5 6	Empty 4P Left 4P Right 4P Up 4P Down	Yellow/Black Brown/Black
CN4	2 3 4 5	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump	Yellow/Black Brown/Black Green/Yellow
4P	2 3 4 5 6	Empty 4P Left 4P Right 4P Up 4P Down	Yellow/Black Brown/Black Green/Yellow Yellow/Red
•	2 3 4 5 6 7 8 9	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White
4P	2 3 4 5 6 7 8	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump 4P Attack	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White
4P	2 3 4 5 6 7 8 9	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump 4P Attack Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White
4P	2 3 4 5 6 7 8 9	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump 4P Attack Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White
4P	2 3 4 5 6 7 8 9 10	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump 4P Attack Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White
4P	2 3 4 5 6 7 8 9 10 11	Empty 4P Left 4P Right 4P Up 4P Down 4P Jump 4P Attack Empty Empty Empty Empty Empty	Yellow/Black Brown/Black Green/Yellow Yellow/Red Yellow/White

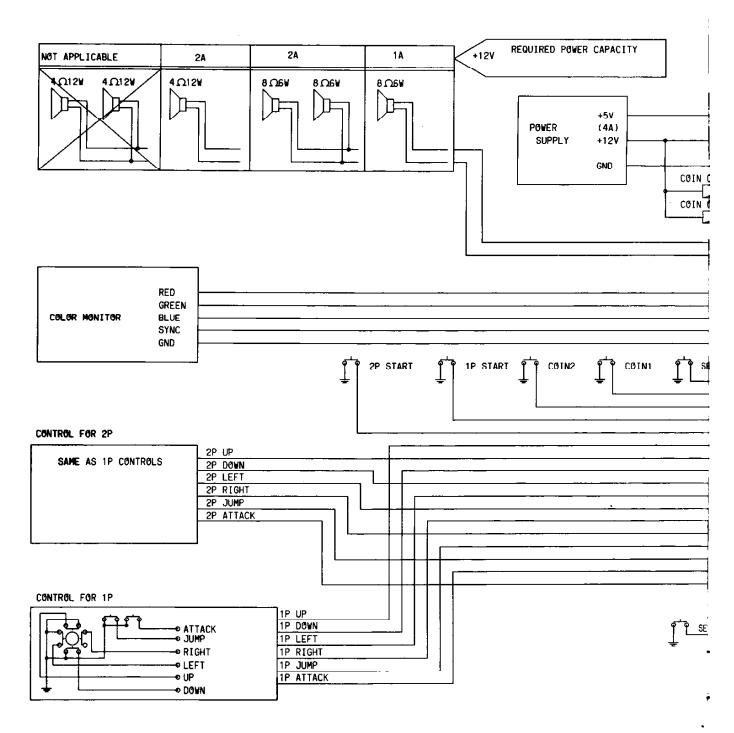

- NOTES -

- 1 1P:NO.1 PLAYER 2P:NO.2 PLAYER 3P:NO.3 PLAYER 4P:NO.4 PLAYER
- 2 SURGE KILLER DIODES FOR COIN COUNTER INSTALLED ON THE P.C.B.*

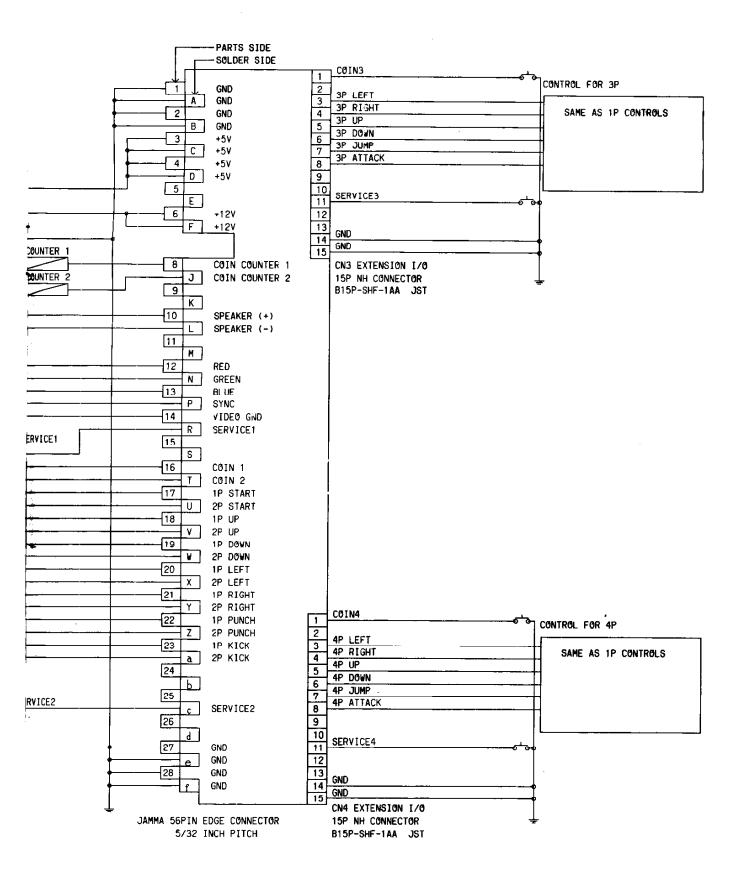

T.M.N.T. DIP SWITCH SETTINGS

DIP SWITCH NO. 1 SETTINGS

1. COIN SWITCH NO. 1 SETTINGS

SW	1	2	3	4	COIN	PLAY
0	OFF	OFF	OFF	OFF	1	1
	ON				1	2
	OFF	ON			1	3
	ON				1	4
	OFF	OFF	ON	OFF	1	5
	ON				1	6
	OFF	ON			1	7
	ON				2	1
	OFF	OFF	OFF	ON	2	3
	ON				2	5
	OFF	ON			з	1
	ON				3	2
	OFF	OFF	ON	ON	3	4
	ON				4	1
	OFF	ON	İ		4	3
	ON				5	1

SW5 thru SW8 are not used.

DIP SWITCH NO. 2 SETTINGS

1. THE NUMBER OF PLAYER'S LIFE

SW	1	2	NUMBER
	OFF	OFF	1
0	ON		2
	OFF	ON	3
	ON		5

2. DIFFICULTY OF THE GAME

SW	6	7	DIFFICULTY	
	OFF	OFF	EASY	
0	ОИ		NORMAL	
	OFF	ON	DIFFICULT	
	ON		VERY DIFFICULT	

3. SOUND IN ATTRACTIVE MODE

SW	8	SOUND
	OFF	OFF
0	ON	ON

SW3 thru SW5 are not used.

DIP SWITCH NO. 3 SETTINGS

1. VIDEO SCREEN FLIP


SW	1	
0	OFF	NORMAL
	ON	UPSIDE DOWN

2. CHANGE OF MODE

SW	3	MODE
0	OFF	GAME MODE
	ON	TEST MODE

SW2 and SW4 are not used and should be kept OFF.

O shows recommended settings.

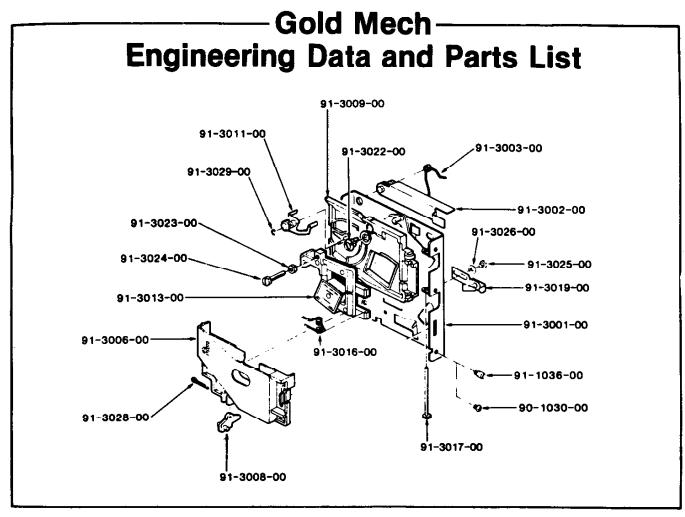

PARTS LIST

 90-1030-00
 Retaining Screw (#6-32"x.250")
 91-3009-00
 Gate

 91-1036-00
 Mounting Stud
 91-3011-00
 Cradle

 91-3001-00
 Back Plate
 91-3013-00
 Magnet Holder with Magnet

 91-3002-00
 Reject Lever
 91-3016-00
 Gate Spring


 91-3003-00
 Reject Lever Spring
 91-3017-00
 Gate Pin

 91-3006-00
 Cover Plate
 91-3019-00
 Separator

 91-3008-00
 Anti-Stringing Device
 91-3022-00
 Diameter Adjustment


91-3023-00 Locknut-Magnet Holder 91-3024-00 Screw-Magnet Holder 91-3025-00 Screw Separator 91-3026-00 Washer 91-3028-00 Cotter Pin for Anti-stringing Device

91-3029-00 E-Clip for Cradle

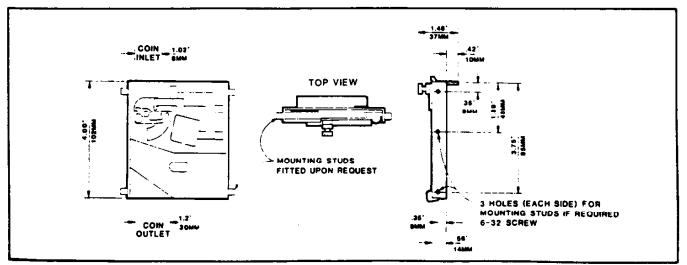

COMPLETE COIN DOOR ASSEMBLY


EXPLODED VIEW

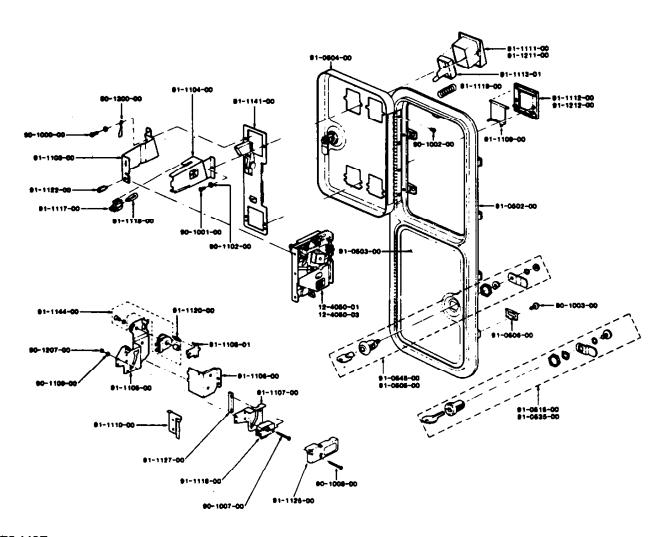



PARTS L	IST
---------	-----


12-4050-01	S-10 Acceptor Body	90-1102-00	Washer for Bezel	91-1103-00	Coin Inlet Lamp Side	91-1119-00	Buttton Spring
	U.S. 25•		Screw	91-1104-00	Coin Inlet Cover Side	91-1120-00	Lockout Spring
12-4050-03	S-10 Acceptor Body	90-1207-00	Nut for Microswitch	91-1105-00	Reject Cup Side Plate	91-1122-00	Retaining Screw for
	Canadian 25 ^e		Mounting Screw	91-1106-00	Reject Cup Base Plate	07 1122 00	Acceptor Body
20-4177-00	Plastic Cash Box	90-1300-00	Keyhook	91-1107-00	Microswitch Bracket	91-1125-00	Clear Plastic Cover for
20-4179-00	Steel Enclosure	91-0502-00	Zinc Die Cast Frame	91-1108-01	Lockout Flap U.S. 25*	31 1123 00	Microswitch
22-1400-00	Locking Bar	91-0503-00	Lower Door	91-1109-00	Reject Flap	91-1127-00	Plastic Switch Adjuster
24-1150-00	Wire Harness	91-0504-00	Upper Door	91-1110-00	Metal Switch Adjuster	91-1141-00	Base Plate With Pivot
90-1000-00	Keyhook Bezel Screw	91-0505-00	Round Lock and Cam	91-1111-00	Black Button Bezel	31 1141-00	and Stud
90-1001-00	Bezel Screw		Assembly	91-1112-00	Black Reject Bezel	91-1144-00	6 Volt DC Lockout Coll
90-1002-00	Hinge Screw	91-0506-00	Clamp	91-1113-01	Entry/Reject Button	31 1144 00	Assembly
90-1003-00	Clamp Screw	91-0515-00	Flat Lock and Carn		U.S. 25'	91-1211-00	Zinc Plated Button
90-1007-00	Flat Head Microswitch		Assembly	91-1116-00	Microswitch (Black	31 1211 00	Bezel
	Mounting Screw	91-0535-00	Flat Lock and Cam		End Arm)	91-1212-00	Zinc Plated Reject
90-1008-00	Panhead Microswitch		Assembly	91-1117-00	Lampholder	31 1212 00	Bezel
	Mounting Screw	91-0545-00	Round Lock and Cam	91-1118-00	6 V Wedge Base Lamp		00501


Assembly

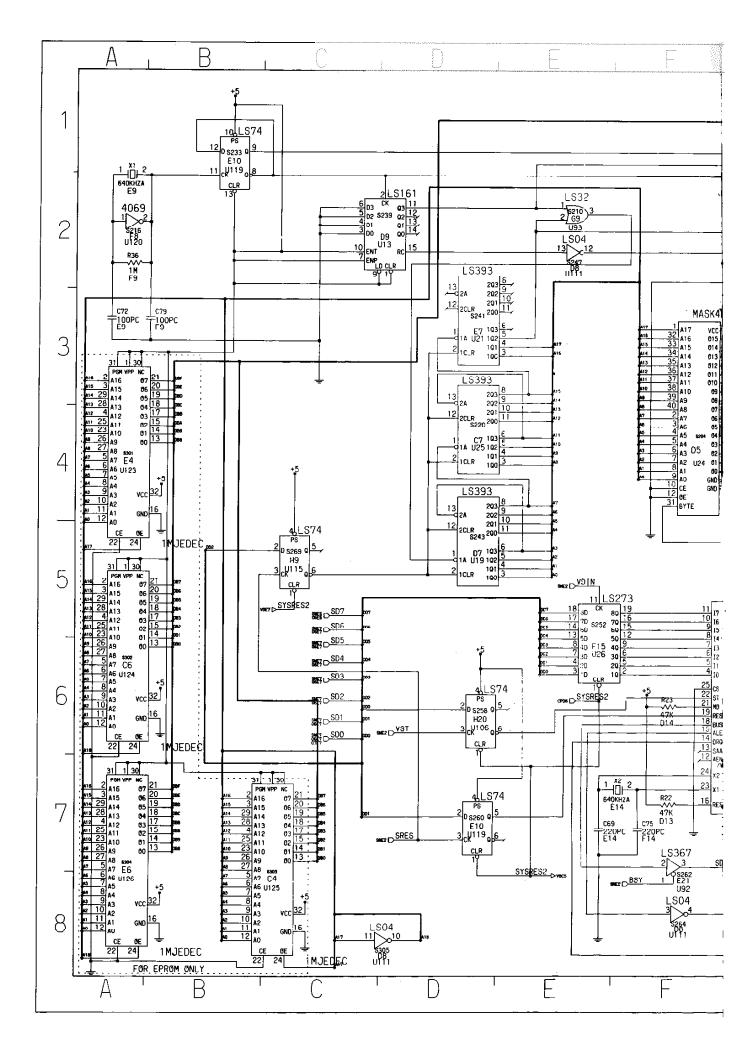


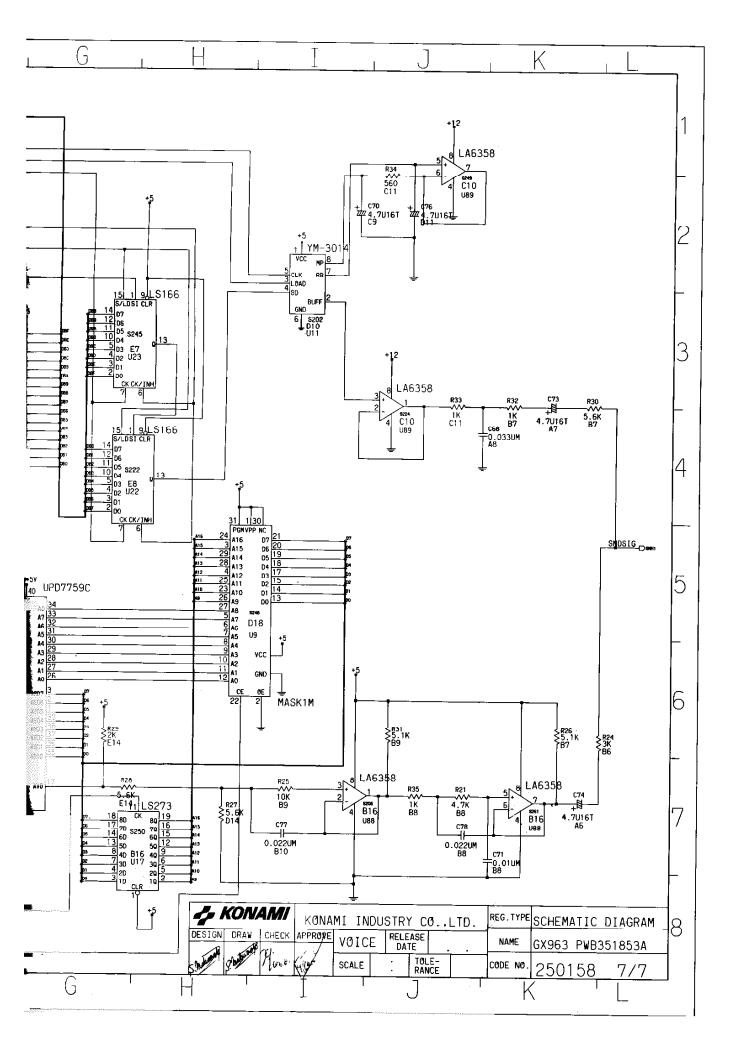


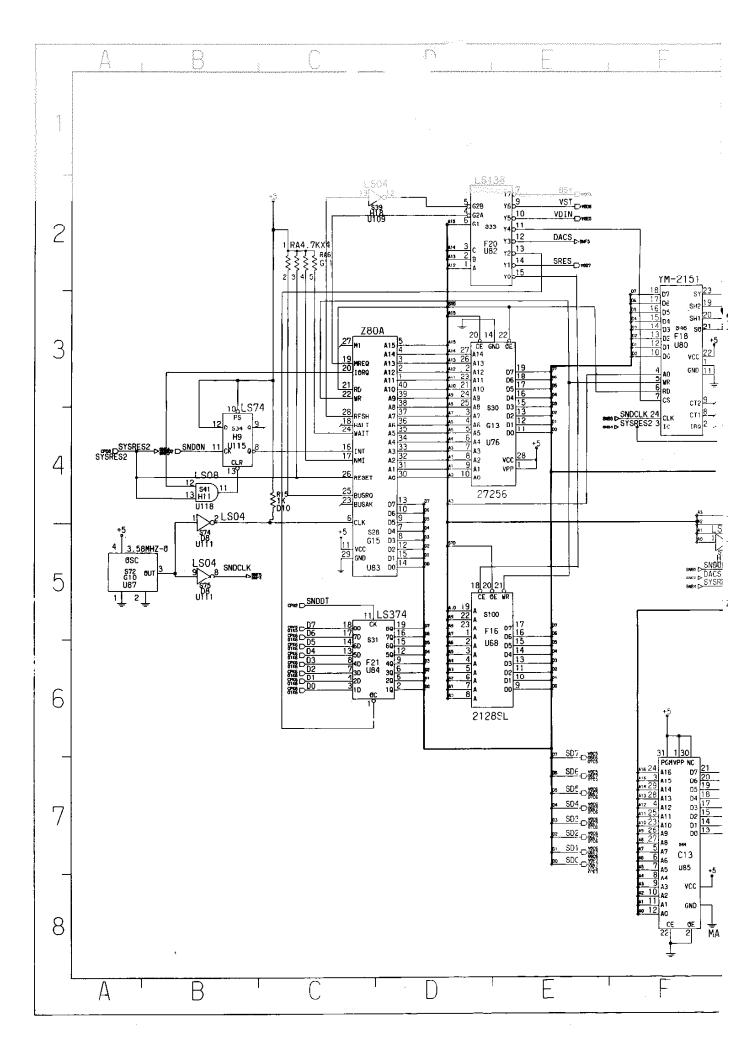


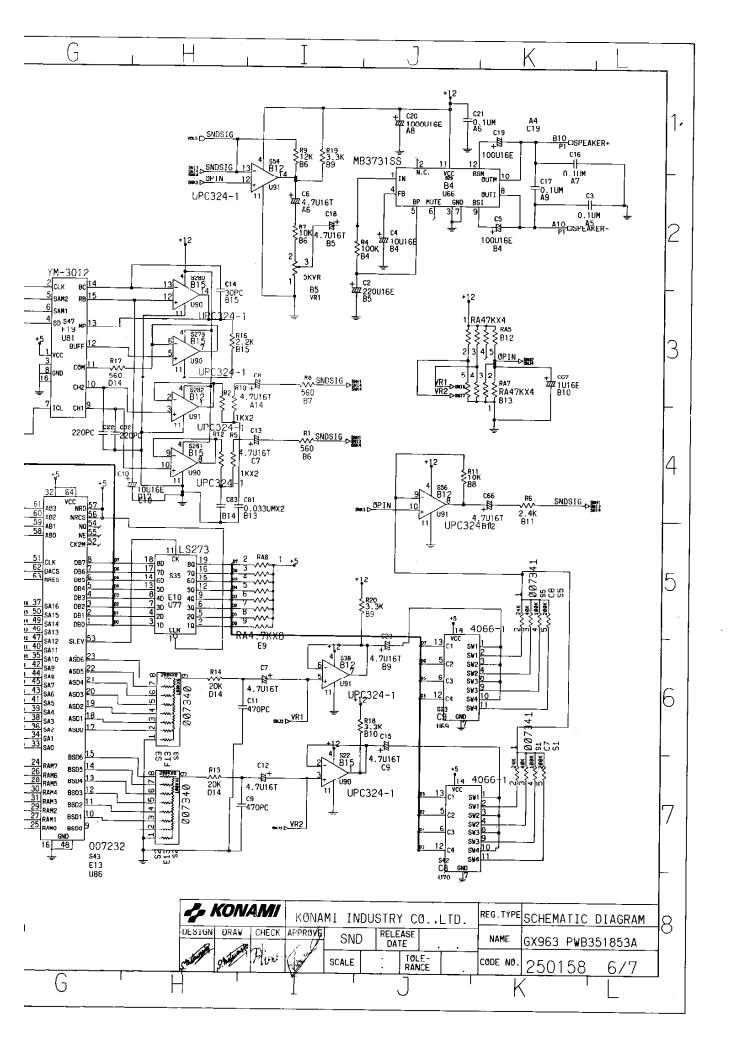


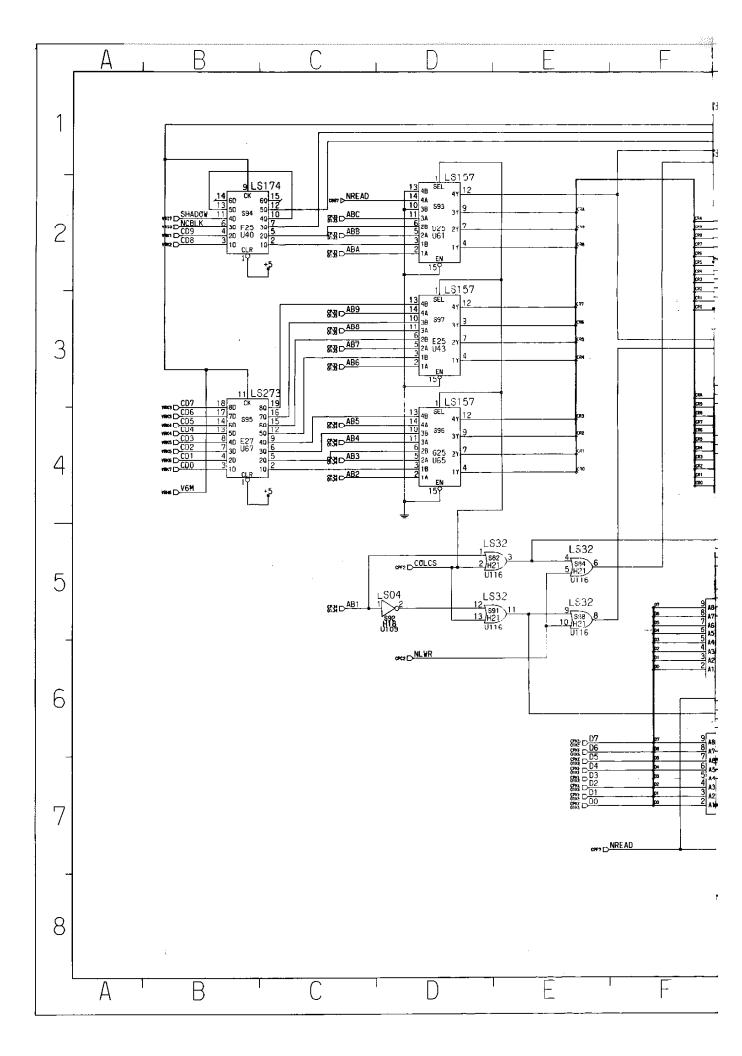


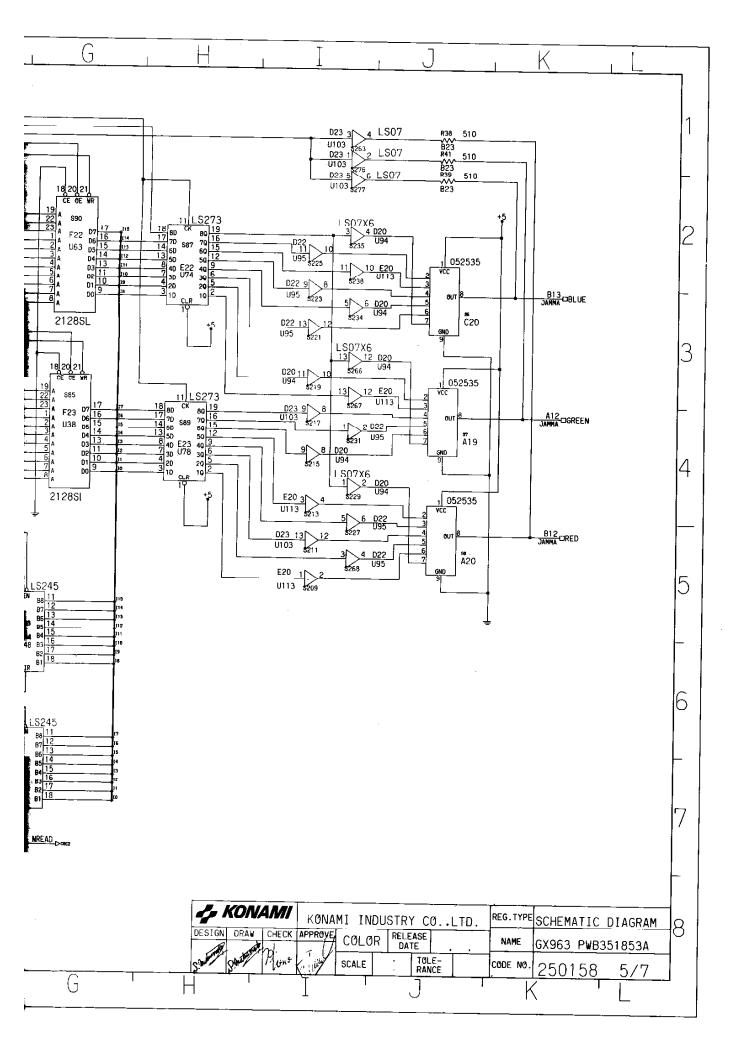


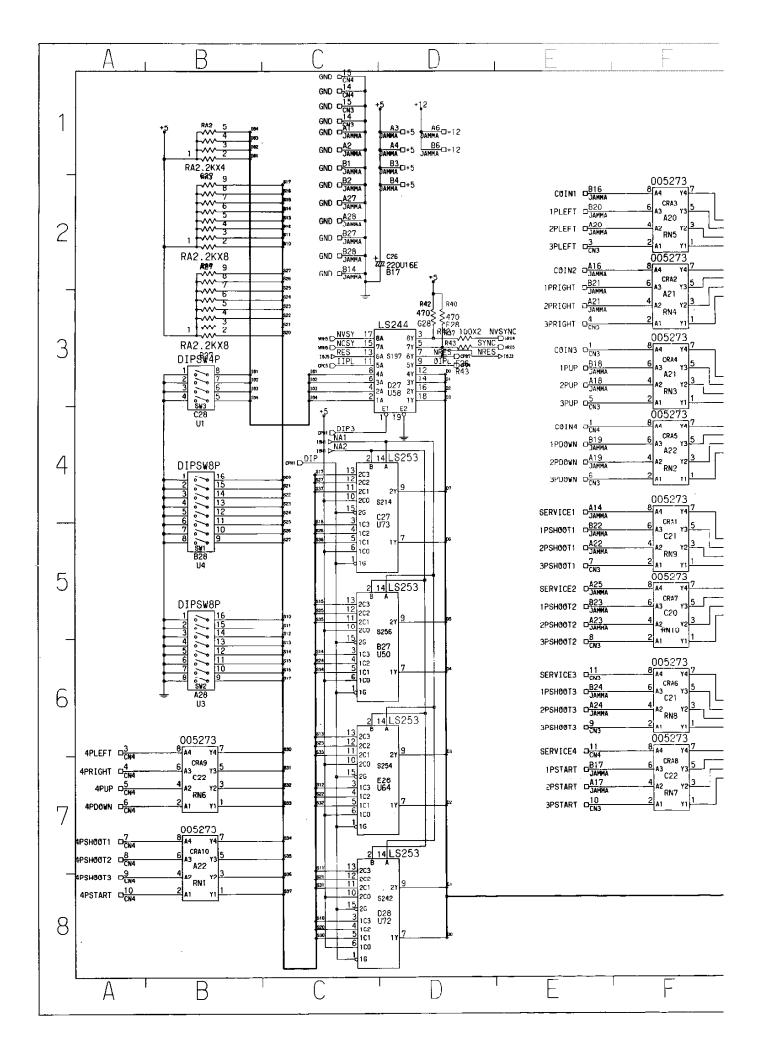


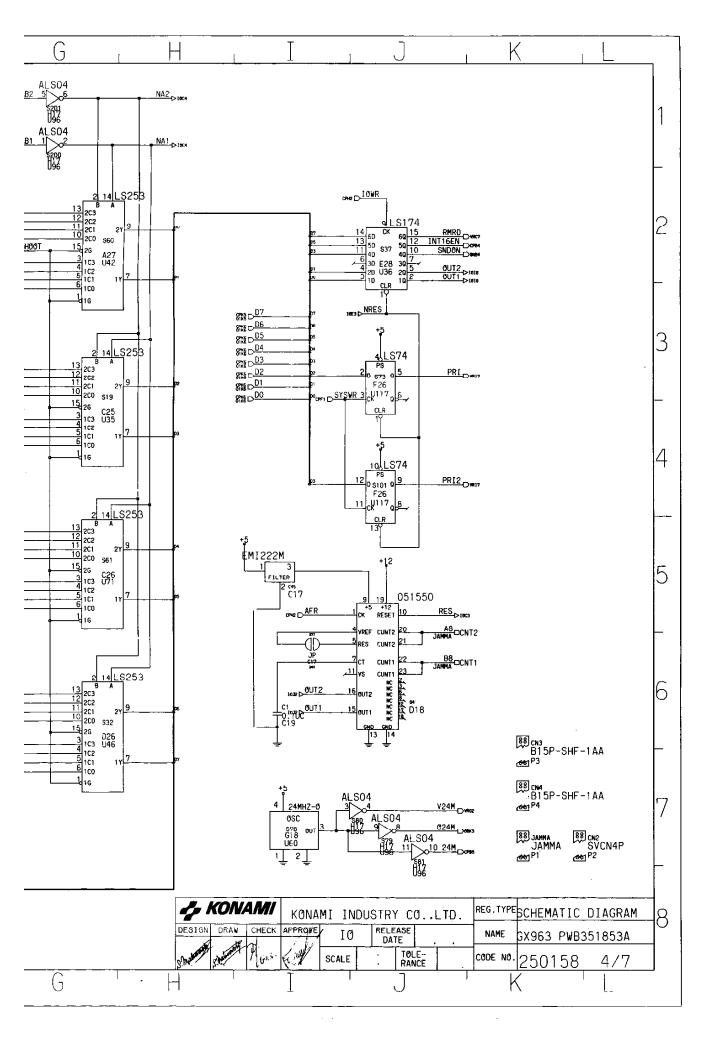


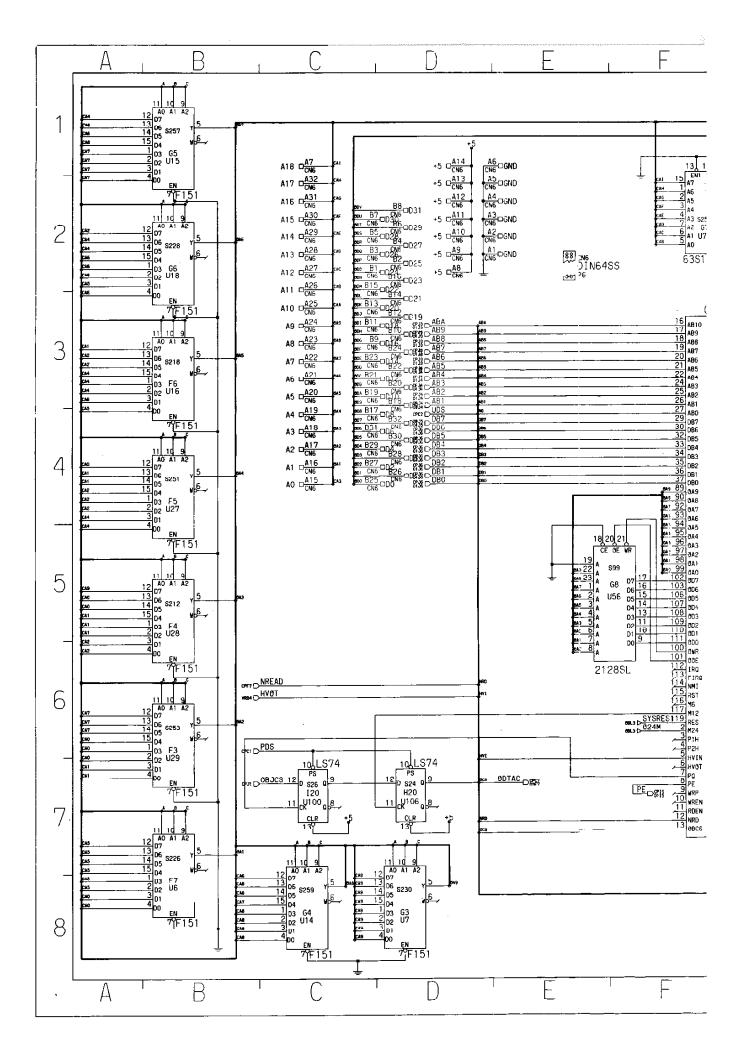


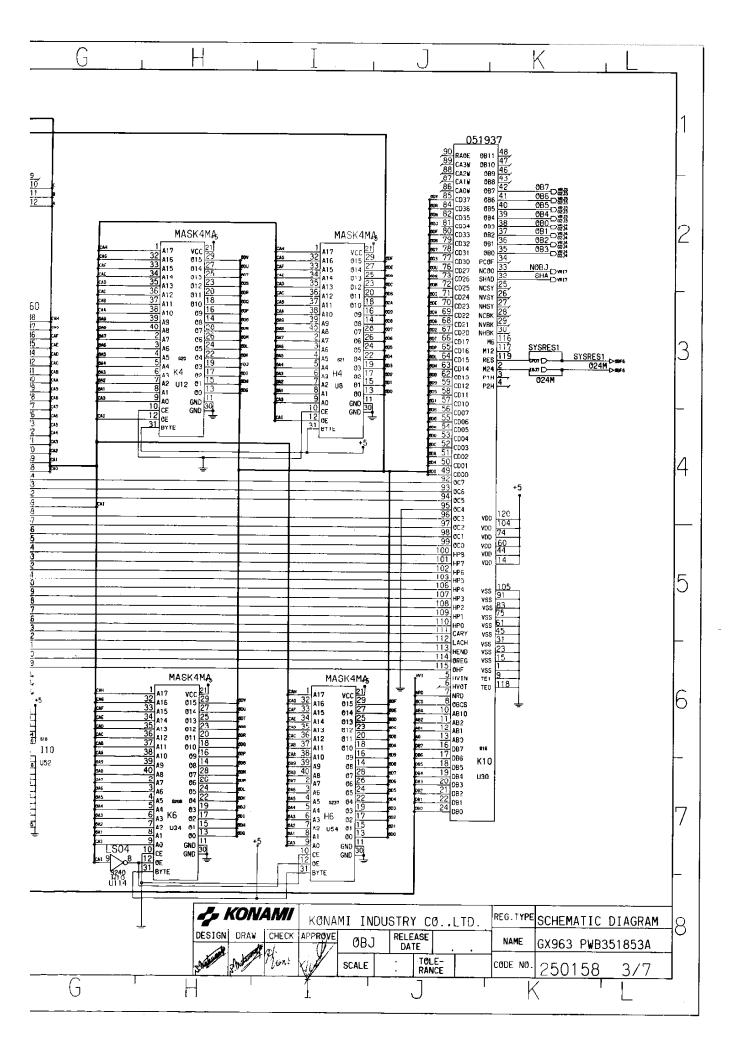

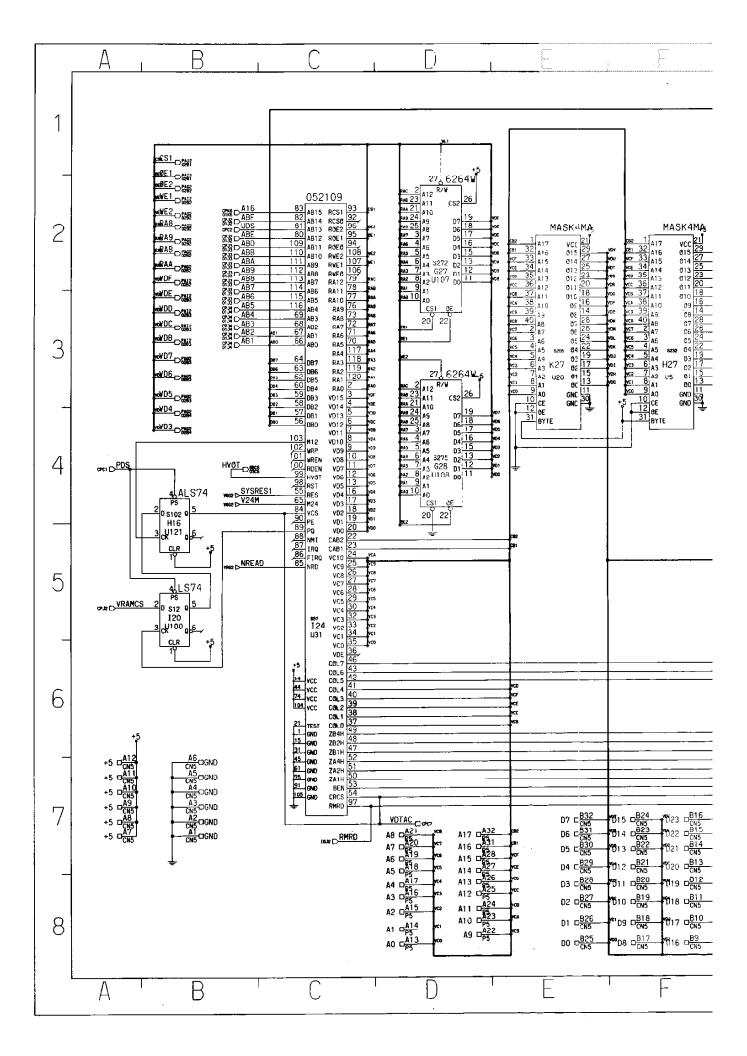

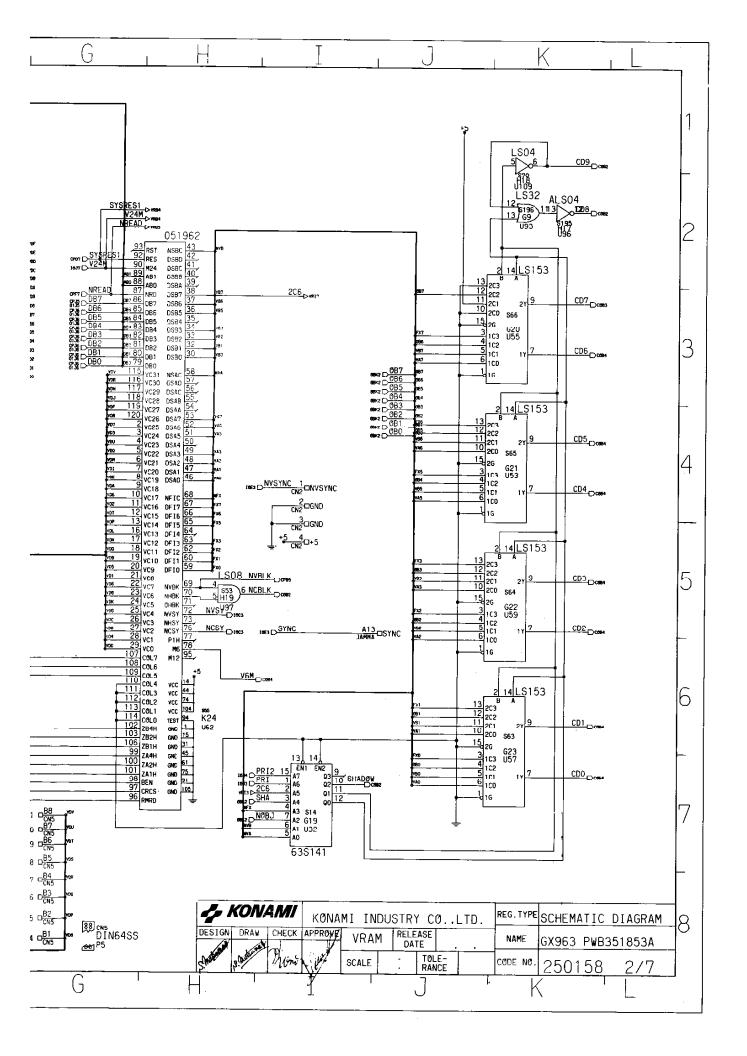

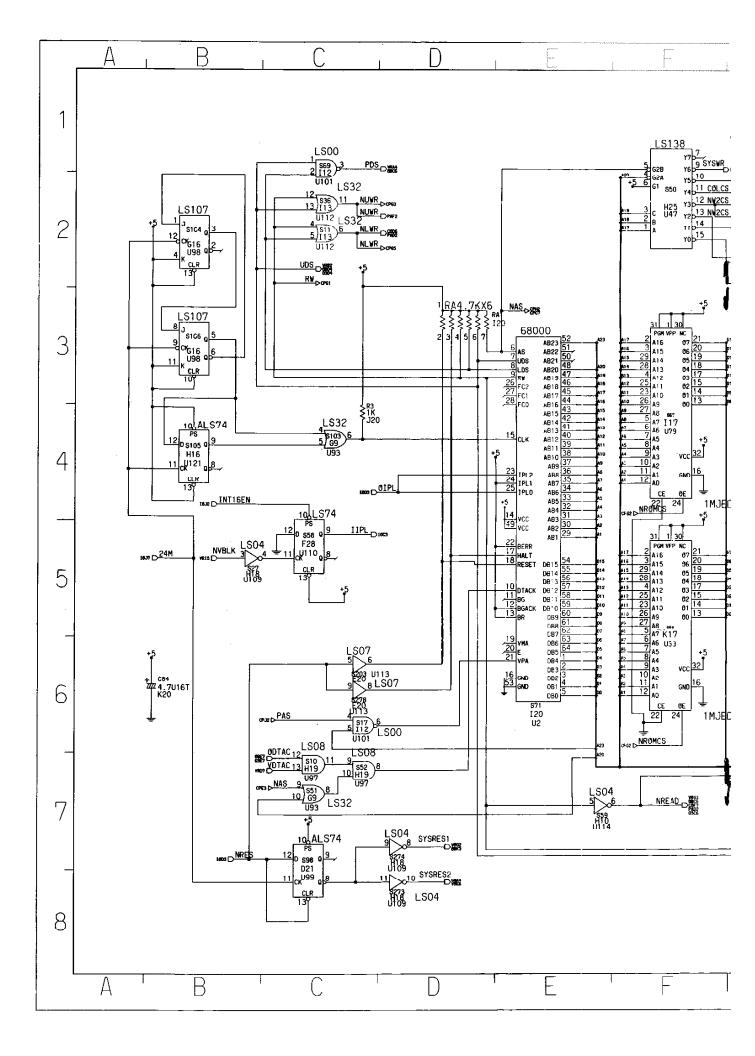

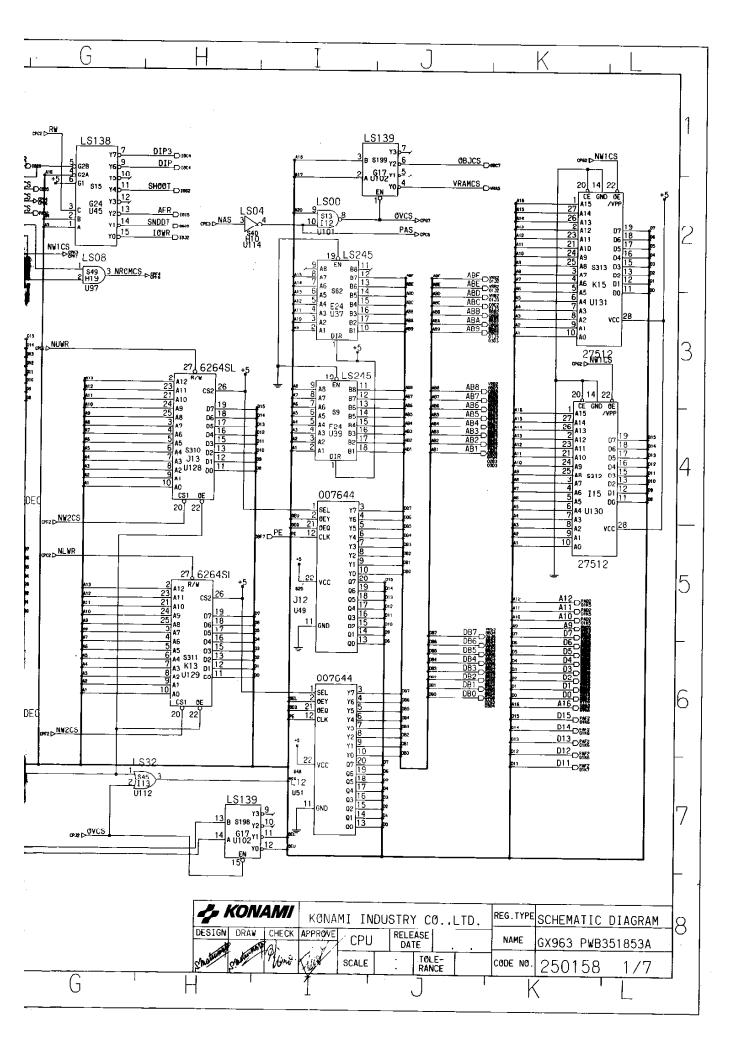

WARNING F.C.C. REGULATION COMPLIANCE

THIS EQUIPMENT COMPLIES WITH THE REQUIREMENTS IN PART 15 OF FCC RULES FOR A CLASS A COMPUTING DEVICE. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA MAY CAUSE UNACCEPTABLE INTERFERENCE TO RADIO AND TV RECEPTION, REQUIRING THE OPERATOR TO TAKE WHATEVER STEPS ARE NECESSARY TO CORRECT THE INTERFERENCE.



900 Deerfield Parkway, Buffalo Grove, Illinois 60089-4510 Telephone: (312) 215-5100, Telex: 6871385 KONAM UW, Fax: (312) 215-5122