
- or piles, a timber hitch with two half-hitches (or a similar hitch) shall be used.
- (e) Only approved slings of proper size shall be used for slinging loads.
- (f) In using wire rope as straps for hooking onto tackle blocks, there shall be the same number of parts of rope in the strap as there are moving parts in the tackle. For instance, if triple-block tackle is used, there shall be six parts of rope for the strap.
- (g) Endless wire slings shall be made using a minimum of six fist grip rope clips as shown in Figure 12h. If the rope is greater than 5/8 in. (16 mm) additional fist grip rope clips are required, see Figure 12ac.

Figure 12h

### ENDLESS SLING ASSEMBLY

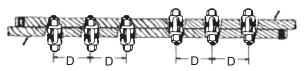


D = 6 times diameter of rope

### (Also see Section 12.7 Crosby Lifting Guide) 12.7 Crosby Lifting Guide

The following pages of information in this section have been printed with permission of The Crosby Group Inc. The strengths of the slings, shackles and other rigging equipment identified within these pages are to be used in conjunction with the referenced Crosby products. When using rigging equipment not manufactured by Crosby, obtain appropriate strength and capacity information from the manufacturer of the products that are being used.

Figure 12i

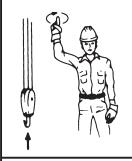


### HAND HOISTING SIGNALS

HOIST. With forearm vertical, forefinger pointing up move hand in small horizontal circle.



EMERGENCY STOP.
Arms extended palms down,
move hands rapidly right and left.

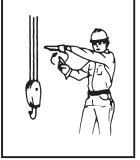

MOVE SLOWLY.
Use one hand to give any motion signal and place other hand motionless in front of hand giving the motion signal.
(Hoist Slowly shown in example.)

Figure 12j

### HAND HOISTING SIGNALS


### LOWER.

With arm extended downward, forefinger pointing down, move hand in small horizontal circles.

### STOP.

Arm extended, palm down, move hand rapidly right and left.

DOG EVERYTHING. Clasp hands in front of body.

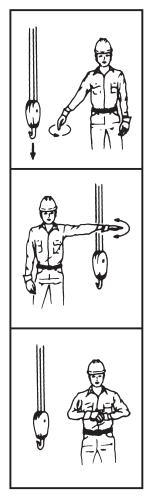


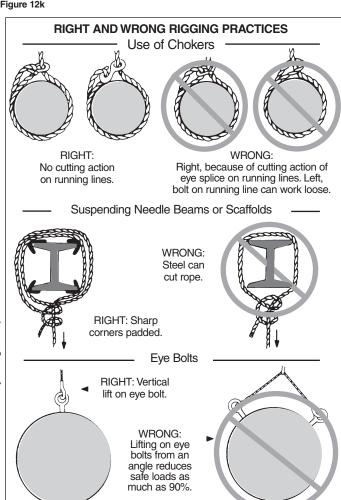


Figure 12I

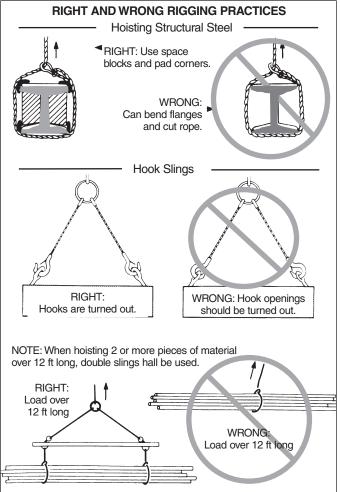

LIFTING VERSION (4/02)	FOR ADDITIONAL	SUPPORT	The <b>Grosbu</b> gggy.	PO Box 3128	F &	Fax: (918) 832-0940 1-800-777-1555	www:	crosbygroup@thecrosbygroup.com	BLOCKS & FITTINGS  FOR WIRE ROPE & CHAIN	CROSBY® FITTINGS LEBUS® MCKISSICK® WESTERN NATIONAL
<b>Grosby</b> USER'S GUIDE LIFTING	TERMINOLOGY	WORKING LOAD LIMIT (WLL)	THE MAXIMUM MASS OR FORCE WHICH THE PRODUCT IS AUTHORIZED TO SUPPORT IN A PARTICULAR SERVICE.	PROOF TEST	A TEST APPLIED TO A PRODUCT SOLELY TO DETERMINE INJURIOUS MATERIAL OR MANUFACTURING DEFECTS.	ULTIMATE STRENGTH	THE AVERAGE LOAD OR FORCE AT WHICH THE PRODUCT FAILS OR NO LONGER SUPPORTS THE LOAD.	DESIGN FACTOR	AN INDUSTRIAL TERM DENOTING A PRODUCT'S THEORETICAL RESERVE CAPABILITY; USUALLY COMPUTED BY DIVIDING THE CATALOG ULTIMATE LOAD BY THE WORKING LOAD LIMIT. GENERALLY	EXPRESSED AS A RATIO, e.g. 5 TO 1.
Cros	RISK MANAGEMENT	DEFINITION	COMPREHENSIVE SET OF ACTIONS THAT REDUCES THE RISK OF A PROBLEM, A FAILURE, AN ACCIDENT		Grosby Quality Continuum		Биульогінд Манифилинду	$\rightarrow$	commission	Z

### Figure 12n

N RESPONSIBILITY	1. UTILIZE APPROPRIATE RIGGING GEAR SUITABLE FO OVERHEAD LIFTING. 2. UTILIZE THE RIGGING GEAR WITHIN INDUSTRY STANDARDS AND THE MANUFACTURER'S RECOMMENDATIONS. 3. CONDUCT REGULAR INSPECTION AND MAINTENANCE OF THE RIGGING GEAR.  OADING? MANUFACTURERS RESPONSIBILITY	1. PRODUCT AND APPLICATION INFORMATION 2. PRODUCT THAT IS CLEARLY IDENTIFIED NAME OR LOGO LOAD RATING AND SIZE TRACEABILITY 3. PRODUCT PERFORMANCE WORKING LOAD LIMIT DUCTILITY FATIGUE PROPERTIES IMPACT PROPERTIES
THE BASIC RIGGING PLAN	WHO IS RESPONSIBLE (COMPETENT) FOR THE RIGGING? COMMUNICATION ESTABLISHED? IS THE EQUIPMENT IN ACCEPTABLE CONDITION? APPROPRIATE TYPE, PROPER IDENTIFICATION? ARE THE WORKING LOAD LIMIT'S ADEQUATE? CAPACITY OF GEAR KNOWN? WHAT IS THE WEIGHT OF LOAD? WHERE IS THE CENVER OF GRAVITY? WHERE IS THE CENVER OF GRAVITY? WHAT IS THE SLING ANGLE? WILL THERE BE ANY ANGULAR OR SIDE LOADING? WILL THERE BE ANY ANGULAR OR SIDE LOADING? ARE THE SLINGS PADPED AGAINST SHARP	CORNERS? WILL THE LOAD BE UNDER CONTROL? WILL THE LOAD RIGGED TO THE CENTER OF GRAVITY? TAG LINE NEEDED? TAG LINE NEEDED? SI THERE ANY POSSIBLITY OF FOULING? CLEAR OF PERSONNEL? ARE THERE ANY UNUSUAL LOADING OR ENVIRONMENTAL COADITIONS? WIND, TEMPERATURE, OTHER?

5

20	
_	
ē	
_	
Ö	
:-	

INSPECTION OF HARDWARE	INSPECTION OF WIRE ROPE SLINGS 3
DEFORMATION	PER ANSI B30.9
REMOVE FROM SERVICE IF ANY SIGNIFICANT DEFORMATION. CHECK THROAT OPENING OF HOOKS.	ALL SLINGS AND ATTACHMENTS SHALL BE VISUALLY INSPECTED BY THE PERSON HANDLING THE SLING EACH PARTIES AND A PERSON HANDLING THE SLING EACH
WEAR	DAY THEY ARE USED. IN ADDITION, A PERIODIC INSPECTION SHALL BE PERFORMED BY A DESIGNATED
REMOVE FROM SERVICE IF EXCESSIVE WEAR. WEAR IS	PERSON, AT LEAST ANNUALLY, AND SHALL INCLUDE A RECORD OF THE INSPECTION.
MORE THAN 5% WEAR IN THROAT OR EYE OF HOOK AND OTHER CRITICAL AREAS OF HARDWARE	INSPECTION CRITERIA
MORE THAN 10% WEAR IN OTHER AREAS.	KINKING CORE PROTRUSION
CRACKS, NICKS, GOUGES REMOVE FROM SERVICE IF CRACKS, NICKS, OR GOUGES ARE DETECTED.	UNSTRANDING BROKEN OR CUT STRANDS BROKEN WIRES STRANDING DISPLACEMENT
MODIFICATION	BROKEN WIRES
DO NOT WELD, DO NOT SUBSTITUTE SHACKLE PINS OR OTHER COMPONENTS, DO NOT HEAT, BEND OR MODIFY IN ANY MANNER.	REMOVE FROM SERVICE STRAND LAID AND SINGLE PART LEUGS IF FAND OR MORE RANDOMLY DISTRIBUTED WIRES IN ONE ROPE LAY, OR FIVE BROKEN WIRES IN ONE ROPE STRAND IN ONE ROPE LAY.
PROPER FUNCTION	DISTORTION OF WIRE ROPE
IMPROPERLY INSTALLED HARDWARE OR MALFUNCTION IS CAUSE FOR REMOVALC. CHECK FOR LATCHES, SWIVEL BEARINGS, LOCKING DEVICES, AND INSTALLATION OF WIRE ROPE CLIPS AND WEDGE SOCKETS.	REMOVE FROM SERVICE WIRE ROPE SLINGS THAT HAVE ANY DAMAGE RESULTING IN DISTORTION OF THE WIRE POPE STRUCTURE SUCH AS KINKING, CRUSHING, UNSTRANDING, BIRDCAGING, STRAND DISPLACEMENT OR CORE PROTRUSION.

Figure 12p

တ
INSPECTION OF
N SLINGS
OF CHAIN
INSPECTION

PER ANSI B30.9

NSPECTED BY THE PERSON HANDLING THE SLING EACH DESIGNATED PERSON, AT LEAST ANNUALLY, AND SHALL ALL SLINGS AND ATTACHMENTS SHALL BE VISUALLY SERVICE: MONTHLY) SHALL BE PERFORMED BY A **NSPECTION (NORMAL SERVICE: YEARLY, SEVERE** DAY THEY ARE USED. IN ADDITION, A PERIODIC NCLUDE A RECORD OF THE INSPECTION

# NSPECTION CRITERIA

THROAT OPENING OF HOOK EXCESSIVE TEMPERATURE **WELD SPLATTER** GOUGES, STRETCH, BENDS NICK, CRACKS, BREAKS

### CHAIN LINKS

MANUFACTURÈR'S INFORMATION), SHARP TRANSVERSE NICKS AND GOUGES SHOULD BE ROUNDED OUT BY GRINDING (DO NOT EXCEED WEAR ALLOWANCE). CHAIN LINKS AND ATTACHMENTS SHOULD HINGE FREELY TO REMOVE SLING FROM SERVICE IF LINKS ARE WORN **EXCESSIVELY (MORE THAN 10% OR REFER TO** ADJACENT LINKS.

## DENTIFICATION

DENTIFICATION STATING: SIZE, GRADE, RATED LOAD, CHAIN SLINGS SHALL HAVE PERMANENTLY AFFIXED JUMBER OF LEGS AND MANUFACTURER.

## YNTHETIC SLINGS 4 PER ANSI B30.9

NSPECTED BY THE PERSON HANDLING THE SLING EACH **INSPECTION SHALL BE PERFORMED BY A DESIGNATED** PERSON, AT LEAST ANNUALLY, AND SHALL INCLUDE A RECORD OF THE INSPECTION. ALL SLINGS AND ATTACHMENTS SHALL BE VISUALLY DAY THEY ARE USED. IN ADDITION, A PERIODIC

# INSPECTION CRITERIA

**EXCESSIVE ABRASION** BROKEN STITCHES **NORN STITCHES** KNOTS ACID OR CAUSTIC BURNS MELTING OR CHARRING

HOLES, CUTS TEARS, SNAGS

# ROUND SLING NOTES

MELTING, CHARRING OR WELD SPLATTER ON ANY PART REMOVE FROM SERVICE ROUND SLINGS THAT HAVE CORE HBER EXPOSED BY HOLES, TEARS, CUTS, EMBEDDED PARTICLES, WEAR OR SNAGS.

EMBEDDED PARTICLES, WEAR OR SNAGS.

FREMOVE FROM SERVICE ROUND SLINGS THAT HAVE DE SLING

### DENTIFICATION


PERMANENTLY MARKED INDICATING: MANUFACTURER'S TRADEMARK AND CODE (OR STOCK NUMBER), RATED OADS FOR THE THREE HITCHES AND MATERIAL. WEB SLINGS AND ROUND SLINGS SHALL BE

Figure 12q

_	<b>WIRE ROPE</b>	E SLING C	APACIT	WIRE ROPE SLING CAPACITIES (LBS.) - FLEMISH EYE - ANSI B30.9	FLEMISH	EYE - ANS	I B30.9 5
	6 X 19 A	6 X 19 AND 6 X 37	MPROVED	IMPROVED PLOW STEEL	- IWRC 5/1	- IWRC 5/1 DESIGN FACTOR	JR
	Grosby	٥	Ó		۰		
	Q & T CARBON		ANGLE	~	<b>o</b> <	96	
	SHACKLE	-	120	-	/	<u> </u>	Ē
	SHACKLE SIZE	-≪≼		ů	, , ,	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	
WIRE	FOR A D/d>1	<b>√</b> ()	_	8	000		30.
SIZE	ŏ	Î		•	•	•	
	SHACKLE	VERTICAL (SINGLE LEG)	CHOKER	TWO LEG	60 DEGREE SLING ANGLE	45 DEGREE SLING ANGLE	30 DEGREE SLING ANGLE
1/4	5/16	1120	820	2200	1940	1500	1120
5/16	3/8	1740	1280	3400	3000	2400	1740
3/8	7/16	2400	1840	4800	4200	3400	2400
2/16	1/2	3400	2400	0890	5800	4800	3400
1/2	2/8	4400	3200	8800	7600	6200	4400
9/16	2/8	5600	4000	11200	9600	7900	5600
2/8	3/4	6800	2000	13600	11800	0096	6800
3/4	2/8	9800	7200	19600	16900	13800	9800
2/8	1	13200	0096	26400	22800	18600	13200
-	1-1/8	17000	12600	34000	30000	24000	17000
1-1/8	1-1/4	20000	15800	40000	34600	28300	20000
1-1/4	1-3/8	26000	19400	52000	45000	36700	26000
1-3/8	1-1/2	30000	24000	00009	52000	42400	30000
•	RATED CAPACITIES BASED ON P THE NOMINAL SLING DIAMETER	ASED ON PIN DIAME DIAMETER	ETER OR HOOK	RATED CAPACITIES BASED ON PIN DIAMETER OR HOOK NO LONGER THAN THE NATURAL EYE WIDTH (1/2 X EYE LENGTH) OR LESS THAN THE NOMINAL SLING DIAMETER	E NATURAL EYE WI	IDTH (1/2 X EYE LENG	TH) OR LESS THAN
			REFER TO A	REFER TO ANSI B30.9 FOR FULL DETAILS	L DETAILS		
	HOR	ZONTAL SLING	ANGLES OF I	HORIZONTAL SLING ANGLES OF LESS THAN 30 DEGREES ARE NOT RECOMMENDED	RES ARE NOT	RECOMMENDED	

ME B30.9 5A			TWO LEG CHOKER 60° HORIZONTAL SLING ANGLE	0.8	1.8	2.5	3.2	4.1	2.0	7.1	9.7	13.0	16.0	19.0
EYE - ASI	N FACTOR COMMENDED		TWO LEG SLING 45 ONTAL HORIZONTAL ANGLE SLING ANGLE	6.0	2.0	2.7	3.6	4.5	5.5	7.9	11.0	14.0	17.0	21.0
.) - FLEMISH	IWRC 5/1 DESIG ES ARE NOT RE		TWO LEG 60° HORIZONTAL SLING ANGLE	1.1	2.5	3.4	4.4	5.5	6.8	9.7	13.0	17.0	21.0	26.0
WIRE ROPE SLING CAPACITIES - TONS (2000 LBS.) - FLEMISH EYE - ASME B30.9	6 X 19 AND 6 X 37 EXTRA IMPROVED PLOW STEEL - IWRC 5/1 DESIGN FACTOR HORIZONTAL SLING ANGLES OF LESS THAN 30 DEGREES ARE NOT RECOMMENDED		TWO LEG SLING VERTICAL	1.3	2.9	3.9	5.1	6.4	7.8	11.0	15.0	20.0	24.0	30.0
ACITIES .	37 EXTRA IMIG ANGLES OF	\$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$												
LING CAF	X 19 AND 6 X ZONTAL SLIN		SINGLE	0.48	1.1	1.4	1.9	2.4	5.9	4.1	9.3	7.2	9.1	11.0
ROPE S	6 HORI	<b>○</b>	SINGLE LEG (VERTICAL)	0.65	1.4	1.9	2.5	3.2	3.9	5.6	7.6	9.8	12.0	15.0
WIF		WIRE ROPE SIZE INCHES		1/4	3/8	7/16	1/2	9/16	2/8	3/4	2/8	1	1-1/8	1-1/4



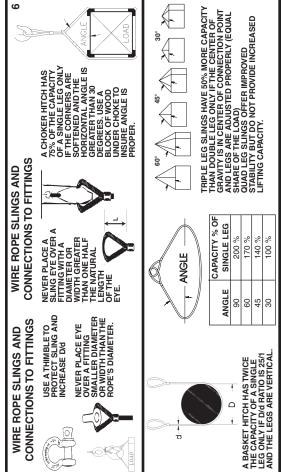

CHAIN	SLING CAP	ACITIES (LBS	.) - CHAIN G	R-8 - ASME I	CHAIN SLING CAPACITIES (LBS.) - CHAIN GR-8 - ASME B30.9 DESIGN FACTOR 4/1	N FACTOR	1/1 7
CHAIN SIZE (IN.)		0 06	.09	45°	08.30°		<b>Prosby</b>
CHAIN GR - 8 DESIGN FACTOR 4/1	VERTICAL (SINGLE LEG)	TWO LEG OR BASKET HITCH	60 DEGREE SLING ANGLE	45 DEGREE SLING ANGLE	30 DEGREE SLING ANGLE	SINGLE LEG MASTER LINK SIZE (IN.)	DOUBLE LEG MASTER LINK SIZE (IN.)
3/8	7100	14200	12200	10000	7100	3/4	3/4
1/2	12000	24000	20750	16950	12000	8//	-
5/8	18100	36200	31350	25500	18100	- ;	1-1/4
3/4	28300	20000	49000	40000	28300	1-1/4	1-1/2
1	47700	95400	82600	67450	47700	7	2
1-1/4	72300	144600	125200	102200	72300	I	I
HORIZONTAL ANGLE 90 60 60 60 73	CAPACITY % OF SINGLE LEG 200% 170% 140% 140% 140%		A CHAIN GRAB HOOK A CHAIN GRAB HOOK A CHAIN A 20 CHAIN A 20 CHAIN A 20 CHAIN A 20 CHAIN A MAIGH BUST BE LEG. THE HORZONTAL BUST BE BUST BUST BE BUST BUST BE BUST BUST BE BUST BUST BUST BUST BUST BUST BUST BUST	TRIPLE DOUBLE CENTE CENTE ADULS ADULS ADULS ADULS ADULS ADULS DONO OUADIN DO NO	60° 7 45° 7 5° 7 5° 7 5° 7 5° 7 5° 7 5° 7	45° A A A A A A A A A A A A A A A A A A A	30° X CITY THAN MITY IS IN HE LOAD. LITY BUT

CHAIN §	SLING CAPA	CHAIN SLING CAPACITIES (LBS.) - CHAIN GR-10 - ASME B30.9 DESIGN FACTOR 4/1	) - CHAIN GF	R-10 - ASME	B30.9 DESIGI	N FACTOR 4	1/1 7A
CHAIN SIZE (IN.)		0 00 0	.09	45°	30°		<b>Grosby</b> Trock
CHAIN GR - 10 4 TO 1 DESIGN FACTOR	VERTICAL (SINGLE LEG)	TWO LEG OR BASKET HITCH	60 DEGREE SLING ANGLE	45 DEGREE SLING ANGLE	30 DEGREE SLING ANGLE	SINGLE LEG MASTER LINK SIZE (IN.)	DOUBLE LEG MASTER LINK SIZE (IN.)
1/4 - (9/32)	4300	8600	7400	6100	4300	1/4-5/16 in.	3/8 in.
5/16	5700	11400	0066	8100	5700	1/4-5/16 in.	3/8 in.
3/8	8800	17600	15200	12400	8800	3/8 in.	1/2 in.
1/2	15000	30000	26000	21200	15000	1/2 in.	5/8 in.
2/8	22600	45200	39100	32000	22600	5/8 in.	3/4 in.
	Ö	Crosby® Spectrum® 10 System Makes Assembly Easy	um® 10 Syst	em Makes A	ssembly Eas	_	
C	Q	C	ı.	ıŝφ	C	Load Rated	ated
A-1342 Master Link	No.	133 8			n I	QUENCHED & 1	TEMPERED

Figure 12v


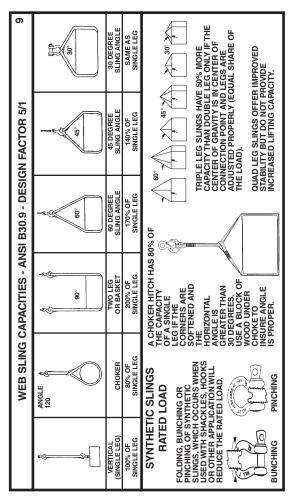


Figure 12w

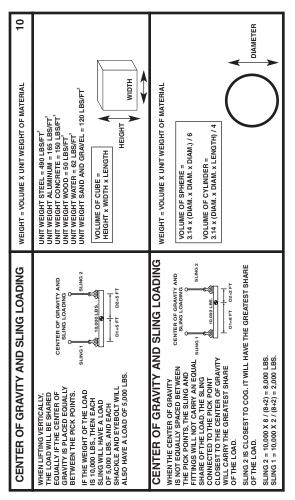

LOAD ANGLE FACTOR = L/H LOAD ON EACH LEG OF SLING = VERTICAL LOAD X LOAD ANGLE FACTOR 1.000 1.155 1.414 1.305 2.000 LOAD ON SLING CALCULATED TENSION 1 = LOAD X D2 X S1/(H(D1+D2)) TENSION 2 = LOAD X D1 X S2/(H(D1+D2)) HORIZONTAL SLING ANGLE (A) DEGREE SLING - WIRE ROPE, CHAIN, SYNTHETICS 9 20 45 -D1-1-D2 1000 LBS SLING ANGLES ANGLES OF LESS THAN REFER TO ANSI B30.9 HORIZONTAL SLING LOAD IN EACH SLING = L/H X 500 RECOMMENDED INFORMATION 30 DEGREES FOR FULL ARE NOT 1000 LBS EGGED LOAD ON SLING CALCULATED TENSION 1 = LOAD X D2 X S1/(H(D1+D2)) TENSION 2 = LOAD X D1 X S2/(H(D1+D2)) D2 + A = HORIZONTAL 500 X LOAD ANGLE FACTOR OAD = SLING ဗ္ဗ SBJ 009 1000 LBS **₹** 200 FB2

Figure 12x

			Grosby		RIGGING HARDWARE	RDW.	ARE			12
Grosby	SHACKLES	LES	QUENCHED (	QUENCHED & TEMPERED IN METRIC TONS	Grosby		HOOKS	QU DESIGN FACTOR	IENCHED & TEMPE IN METRICTONS	QUENCHED & TEMPERED
SCREW PIN AND BOLT TYPE	CARBON SHACKLE DESIGN FACTOR 6/1	ACKLE ACTOR	ALLOY SHACKLE QUIC-CHECK® DESIGN FACTOR 5/1	QUIC-CHECK®	SHANK HOOK SWIVEL HOOK EYE HOOK		EYEHOOKS - 5/1 (EXCEPT ALLOY 30 TON AND LARGER ARE 4-1/2 TO 1) SHANK AND SWIVELS ARE 4-1/2 TO 1	EXCEPT ALLC ER ARE 4-1/2 ELS ARE 4-1/3	270 1.	QUIC-CHECK®
NOMINAL SIZE (IN) DIAMETER OF BOW	CARBON MAXIMUM WORKING LOAD TONS	ALLOY MAXIMUM WORKING LOAD TONS	INSIDE WIDTH AT PIN (INCHES)	DIAMETER OF PIN	CARBON MAXIMUM WORKING LOAD TONS	CODE	ALLOY MAXIMUM WORKING LOAD TONS	CODE	THROAT OPENING (INCHES)	DEFORMATION INDICATOR A - A
3/16	1/3		.38	.25	3/4	20	-	DA	68.	1.50
1/4	1/2		.47	.31	-	FC	1-1/2	FA	.91	2:00
5/16	3/4		.53	.38	1-1/2	gc	2	GA	1.00	2:00
3/8	-	2	99:	.44	2	오	3	H	1.09	2:00
7/16	1-1/2	2.6	.75	.50	3	O	*4-1/2 /5	IA	1.36	2.50
1/2	2	3.3	.81	.63	2	C	7	JA	1.61	3.00
2/8	3-1/4	2	1.06	.75	7-1/2	KC	11	KA	2.08	4.00
3/4	4-3/4	7	1.25	.88	10	TC	15	LA	2.27	4.00
2/8	6-1/2	9.5	1.44	1.00	15	NC	22	NA	3.02	5.00
-	8-1/2	12.5	1.69	1.13	20	00	30	OA	3.25	6.50
1-1/8	9-1/2	15	1.81	1.25	25	PC	37	PA	3.00	7.00
1-1/4	12	18	2.03	1.38	30	SC	45	SA	3.38	8.00
1-3/8	13-1/2	21	2.25	1.50	40	TC	90	TA	4.12	10.00
1-1/2	17	30	2.38	1.63		* 320 E	* 320 EYE HOOK IS NOW RATED AT 5 TONS	W RATED AT	5 TONS	
INSURE SCREW PIN IS TIGHT BEFORE EACH IS USE BOLTTYPE SHACKLE FOR PERMANENT INSTALLATION     FOF	Z 2	NOITION	IN IS CHARLES ON NOT SIDE LOAD ROUND IN SHACKLE IN SECREW PIN OR BOLT TYPE TO COLLECT SLINGS.  INAXINUM INCLUDED ANGLE AMAZINUM INCLUDED ANGLE TO PEGREES TO THE <b>FPDS DUT</b> FOR ADDITIONAL INFORMATION REFER TO THE <b>FPDS DU</b>	DO NOT SIDE LOAD ROUND PIN SHACKLE USE SCREW PIN OR BOLT TYPETO COLLECT SLINGS. WIM INCLUDED ANGLE EGREES NFORMATION REFER TO	THE GR	MAXIMUM INCLUDED ANGLE 90 DEGREES	UM OEB : 9:00 : EES EVE HOOK PRODUCT WARNINGS	EYE HOOK		DO NOT SIDELOAD DO NOT TIP LOAD DO NOT BACKLOAD

Figure 12z

	Cros	<b>lıy</b> i RIGC	<b>Grosly</b> j Rigging Hardware	DWAR	E	13
<b>Freshy</b> LINKS AND RINGS WITH WHE ROPE AND SYNTHETIC SLINGS 5/1 DESIGN FACTOR	G-341 CARBON	A-341 ALLOY	A-342 ALLOY	<b>Grosby</b> Turnbucki	<b>Grosby</b> Turnbuckles	
ow.	WORKING LOAD LIMIT POUNDS	T POUNDS			WORKING LOAD LIMIT WORKING LOAD LIMIT	WORKING LOAD LIMIT
SIZE	400	•	270	4	JAW AND EYE	HOOK END FITTING
	2000		2000	1/4	500	400 400
	0006		0006	5/16	800	700
3/4 6000	12300	=	12300	3/8	1200	1000
2/8 8300	14000	÷	14000	1/2	2200	1500
1 10800	24360	2	24360	2/8	3500	2250
1-1/8 N/A	30600	_	N/A	3/4	5200	3000
1-1/4 16750	36000	3	36000	8//	7200	4000
1-3/8 20500	43000	_	N/A	+	10000	2000
1-1/2 N/A	54300	5	54300	1-1/4	15200	6500
1-5/8 N/A	62600	-	N/A	1-1/2	21400	7500
1-3/4 N/A	84900	8	34900			(
2 N/A	102600	10	102600	THE US	THE USE OF LOCKNUTS	
WORKING LOAD LIMITS ARE FOR USE WITH WIRE ROPE AND SYNTHETIC SLINGS, NOT FOR CHAIN SLINGS. WORKING LOAD LIMITS ARE BASED ON SINGLE LEG (IN-LINE), OR RESULTANT LOAD ON MULTIPLE LEGS WITH AN INCLUDED ANGLE LESS THAN OR EQUAL TO 120 DEGREES.	FOR USE WITH S CHAIN SLINGS E LEG (IN-LINE TH AN INCLUDE	WIRE ROPE S. WORKING (), OR RESUL ED ANGLE LI	AND LOAD TANT ESSTHAN	OR MOL EFFECT PREVER FROM F	OR MOUSING IS AN EFFECTIVE METHOD OF PREVENTING. FROM ROTATING.	
FOR ADDITIONAL INFORMATION REFER TO THE <b>Grashy</b>	AL INFORMA	TION REFI	ER TO THE	Post	II PRODUCT WARNING	RNING

		0	rosby R	<b>Grosliy</b> i Rigging Hardware	NARE		14
<b>Groslyy</b> SHOULDER EYE BOLTS		QUENCHED & TEMPERED DESIGN FACTOR 5/1	QUIC-CHRCK		<b>Crosly</b> Swivel Hoist Rings		DESIGN FACTOR 5/1
SHANK	WORKING LOAD LIMIT IN LINEPULL (LBS.)	WORKING LOAD LIMIT 60 DEGREES SLING ANGLE (LBS.)	WORKING LOAD LIMIT 45 DEGREES SLING ANGLE (LBS.)	WORKING LOAD LIMIT ANGLE LESS THAN 45 DEGREES (LBS.)	WORKING LOAD LIMIT FULL 180 DEGREE PIVOT (LBS.)	THREAD SHANK SIZE U.N.C.	TORQUE FT - (LBS)
1/4	650	420	195	160	800	5/16	7
5/16	1200	780	360	300	1000	3/8	12
3/8	1550	1000	465	380	2500	1/2	58
1/2	2600	1690	780	650	4000	2/8	09
2/8	5200	3380	1560	1300	0002	3/4	100
3/4	7200	4680	2160	1800	0008	8/2	160
8/2	10600	0689	3180	2650	10000	1	230
1	13300	8645	3990	3325	15000	1-1/4	0.44
1-1/4	21000	13600	6300	5250	24000	1-1/2	800
1-1/2	24000	15600	7200	0009	30000	2	1100
	SHC	SHOULDER EYE BOLTS	TS		18	SWIVEL HOIST RINGS	S
NEVER EXCE NEVER USE I ALWAYS USE FOR ANGULA ALWAYS TIGH	NEVER EXCEED WORKING LOAD LIMITS. REVER USE REGULEN NUT EYE BOLTS. ALWAYS USE SHOULDER NUT EYE BOLT FOR AMGULAR LIFTS, ADJUST WORKING ALWAYS TIGHTEN NUTS SECURELY AGA ALWAYS APPLY LOAD TO EYE BOLT INTI	NEVER EXCEED WORKING LOAD LIMITS.  NEVER DUE REGULAR UNT EYE BOLTS FOR ANGULAR LIFTS.  ALWAYS USE SHOULDER NUT EYE BOLTS FOR ANGULAR LIFTS.  FOR ANGULAR LIFTS, ADJUSTWORKING LOAD AS SHOWN A BOVE.  ALWAYS TIGHTEN NUTS SECURELY AGAINSTTHE LOAD.  ALWAYS APPLY LOAD TO EYE BOLT IN THE PLANE OF THE EYE.	ANGULAR LIFTS. BR ANGULAR LIF AD AS SHOWN AI THE LOAD.	TS. BOVE.	WHEN USING LIFTING SLINGS OF TWO OR MORE LEGS MARE SUBETHE FORCES IN THE LEG ARE CALCULATED. SELECT THE PROPER SIZE SWIVEL HOIST RING TO ALLOW OFFICE AND SING LEG. A MAWAYS INSURE HOST RING IS FREE TO A LIGH TISELF WITH SLING. TO REQUIRED VALUE	SLINGS OF TWO OI JES IN THE LEG AR SIZE SWIVEL HOIS SIGE OF TWO OI TO T	VO OR MORE LEGS G ARE CALCULATED. HOIST RINGSTO ALLOW HOIST RING IS PROPERLY TORQUED TO REQUIRED VALUE.
	FOR ADDI	TIONAL INFO	DRMATION F	FOR ADDITIONAL INFORMATION REFER TO THE	<b>Crosby</b> PRO	PRODUCT WARNING	NG

Figure 12ab

OPERATING PRACTICES - ANSI B30.9	LOAD CONTROL 15
WHENEVER ANY SLING IS USED, THE FOLLOWING PRACTICES SHALL BE OBSERVED.	POSITIVE LOAD
1. SLINGS THAT ARE DAMAGED OR DEFECTIVE SHALL NOT BE USED. 2. SLINGS SHALL NOT BE SHORENED WITH KNOTS OR BOLTS OR THER MAKESHIET DEVICENT.	CONTROL
3. SLING LEGS SHALL NOT BE KINKED. 4. SLINGS SHALL NOT BE LOADED IN EXCESS OF THEIR RATED 4. SLINGS SHALL NOT BE LOADED IN EXCESS OF THEIR RATED	
CATACHIES. 5. SLINGS USED IN A BASKET HITCH SHALL HAVE THE LOADS RAI ANCED TO PREVENT SI IPPAGE	
6. SLINGS SHALL BE SECURELY ATTACHED TO THEIR LOAD. 7. SLINGS SHALL BE PADDED OR PROTECTED FROM THE SHARP EDGES	
OT HEIR LOADS.  8. SUSPENDED LOADS SHALL BE KEPT CLEAR OF ALL OBSTRUCTION.  9. ALL EMPLOYEES SHALL BE KEPT CLEAR OF LOADS ABOUTTO BE	n-rui
LIFTED AND OF SUSPENDED LOADS.  10. HANDS OR FINGERS SHALL NOT BE PLACED BETWEEN THE SLING AND ITS LOAD WHILE THE SLING IS BEING TIGHTENED AROUND THE	
LOAD. 11. SHOKC LOADING IS PROHIBITED! 12. A SLING SHALL NOT BE PULLED FROM UNDER A LOAD WHEN THE LOAD IS RESTING ON THE SLING.	
INSPECTION: EACH DAY BEFORE BEING USED, THE SLING AND ALL FASTENINGS AND ATTACHMENTS SHALL BE INSPECTED FOR DAMAGE OR DEFECTS BY A COMPETENT PRESNO DESIGNATED BY THE EMPLOYER. ADDITIONAL INSPECTIONS SHALL BE PERFORMED DURING SLING USE WHERE SERVICE CONDITIONS WARRANT: DAMAGED OR DEFECTIVE SLINGS SHALL BE IMMEDIATELY REMOVED FROM SERVICE.	REEVING THROUGH CONNECTIONS TO LOAD INCREASES LOAD ON CONNECTION FITTINGS BY AS MUCH AS TWICE.  DO NOT REEVE!

O
æ
N
_
ø
≒
ನ್
ı≓'

			ביואייטיואון פיווסטיון <b>פענטיוט</b>		1		
<b>Grosby</b> Wire Rope CLIPS	G-450	t Clip	CLIPS 80% EFFICIENT UNDER 1", 90% 1" AND ABOVE	CLIPS 80% EFFICIENT UNDER 1", 90% 1" AND ABOVE	EFFICIENT 90% 1"		G-429 Fist Grip Clip
SIZE	NUMBER OF CLIPS	TURNBACK LENGTH (IN.)	TORQUE FT-LBS.	SIZE	NUMBER OF CLIPS	TURNBACK LENGTH (IN.)	TORQUE FT-LBS.
1/8	2	3-1/4	4.5	3/16	2	4	30
3/16	2	3-3/4	7.5	1/4	2	4	30
1/4	2	4-3/4	15	5/16	2	5	30
5/16	2	5-1/4	30	3/8	2	5-1/4	45
3/8	2	6-1/2	45	7/16	2	6-1/2	65
2/16	2	2	65	1/2	3	11	65
1/2	3	11 -12	65	9/16	3	12-3/4	130
9/16	3	12	92	2/8	3	13-1/2	130
2/8	3	12	92	3/4	4	16	225
3/4	4	18	130	-	2	37	225
-	2	56	225				
APPLY U-BOLT OVER IT THE ROPE RESTS IN TURNIL IT APER BEEN RED DEAD HORSE!  1 FTURNBACK-1  FTURNBACK-1  FOR I	APPLY UBOLT OVER DEAD END OF THE WINE ROPE. LIVE END OF THE NUME THE ROPE RESTS IN THE SADDLE. A FERMINATION IS NOT COMPLETE THE SOUTH OF THE SADDLE A SECOND TIME. NEVER SADDLE A STORY OF COMPLETE TALSO. DEAD HORSE.  1 FTURNBACK STORY OF THE WINE SADDLE A STORY OF THE STORY OF	THE WIRE ROPE.  A TERMINATION IS  SECOND TIME. IN  A THE WIRE THE THE THE THE THE THE THE THE THE TH	ROPE. LIVE END OF TION IS NOT COMPLETE I'ME. NEVER SADDLE A 2 COMPLETE I'ME. DE COMP	THE NUMBER OF TH	HE NUMBER OF CLIPS SHOWN IS ALL WINE BOOKE, 6X19 OR 6X37 CLI TALSO APPLIES TO MOTATION RIVERS TO ACTATION RIVERS TO ACTATION RESISTANT RILL WINE SIZES 1.1/2 ACCATION SHALLER. FOR ELEV. SCAFFOLD APPLICATIONS REFERSIZES TAND SHORE STANDARDS DO NG ALLOST STYLE WINE ROPE CLIPS.  THE <b>Grosly</b> PROD	HE NUMBER OF CLIPS SHOWN IS BASED ON USING RHI, OR RILL WIRE ROPE, 6X19 OR 6X37 CLASS, FC OR NUMEC; IPS OR XIT TALSO APPLIES TO ROTATION RESISTANT RRL WIRE ROPE, 8X37 CLASS, IPS, XIR SIZES 1-1/2 INCIRC AND SMALLER, AND TO ROTATION RESISTANT RRL WIRE ROPE, 18X7 CLASS, IPS, XIP SIZES 1-34 INCIRC AND SMALLER, FOR ELEVATOR, PERSONNEL HOIST, AND SALAT THESE STANDARDS DO NOT RECOMMEND THE USE OF U-BOLT STYLE WIRE ROPE CLIPS.  THE <b>Grashy</b> PRODUCT WARNING	MG RRL OR CC. IPS ON AIR. CC. IPS ON AIR. IRE ROPE, IER. AND TO SS, IPS, XIR. PERSONNEL EL. HOIST, AND AND ANSI THE USE OF

Do not use U-Bolts