OPERATING INSTRUCTIONS

The video input is auto video sensing, when your additional source is switched on the picture will override the navigation map picture. It will revert back to the navigation picture when your source is switched off.

The second input (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source or the navigation map when activated





NAV-INMAZ

VIDEO INPUT
MAZDA 6 / RX8
With Separate Navigation

NAV TV (Europe) LTD



NAV TV (Europe) LTD


Distribution Centre Unit 21B Vale Business Park Llandow, Vale of Glamorgan CF71 7PF

Telephone: + 44 (0)8445 783 783 Fax: + 44 (0)1446 77 22 47

technical@nav.tv

LOCATION & REMOVAL

- 1. Ensure the vehicle is equipped with Navigation
- 2. All the wires can be accessed at the connector on the back of the screen

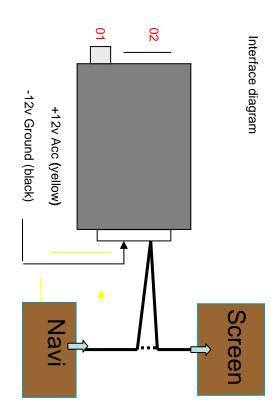

NAV (Input)
SCREEN (Out)

					Re	ar o	f plu	ľ
16	15	14	13	12	11	10	9	
8	7	6	5	4	3	2	1	

INSTALLATION


Locate the cable which connects the Navigation computer with the monitor. Within this cable you will find the cable colours given below You will then need to cut open the these cables and connect the input and output cables from the supplied harness as the diagram opposite shows.

The following colours can be found in the white 24 pin plug

MAZDA RX8

NAV-INMAZ		Car Harness
RED	to	RED
GREEN	to	GREEN
BLUE	to	BLUE
YELLOW	to	WHITE
Shield	to	YELLOW

BACK OF SCREEN UNIT PLUG




INSTALLATION

MAZDA 6

NAV-INMAZ		Car Harness
RED	to	RED
GREEN	to	GREEN
BLUE	to	YELLOW
YELLOW	to	WHITE
Shield	to	BLACK

BACK OF SCREEN UNIT PLUG



Other Connections

YELLOW	to 12v+ ignition / acc
BLACK	to 12v- Ground
RED	to 12v+ to activate video input (also auto switching)
BLUE	to 12v+ to activate camera input

(02)