

Anycubic Photon Workshop

Usage Instructions

Copyrighted by "Shenzhen Anycubic Technology Co., Ltd ", all rights reserved.

Team ANYCUBIC

Contents

01 Installation & Update -----	3
02 Overview -----	7
03 Settings -----	8
1. Import -----	9
2. Machine Configuration Manage -----	10
04 Introduction to Functions -----	16
1. View Changing -----	16
2. Model Edit -----	17
3. Repair -----	18
4. Hollow -----	19
5. Punch -----	20
6. Free Cut -----	21
7. Text -----	22
8. Face Model -----	24
05 Support Settings -----	26
1. Basic Settings -----	26
2. Support Scripts Settings-----	29
3. Automatic Support Adding Skills-----	34
06 Export Sliced File -----	35

Installation & Update

Anycubic Photon Workshop installation package is located in memory stick, please install and update the software as following steps. Do not run the older versions of Anycubic Photon Workshop in case of installation failure.

1. Installation

- **Windows**

Close the anti-virus software before installation. Open the suitable package and then follow the guide as shown below.



- **Mac**



Double click the installer and then drag Anycubic Photon Workshop to the applications as shown above

Installation & Update

Anycubic Photon Workshop V3.X.X System Requirements

Windows

CPU	Intel® Core™ i5 6600K or higher AMD Ryzen™ 5 1600 or higher
RAM	≥ 16GB
Free Disk Space	2GB
Display Resolution	≥ 1920*1080 ≥ 2560*1440 (suggested)
GPU	NVIDIA GeForce GTX1050 or higher AMD Radeon RX480 or higher
GPU RAM	≥ 1GB

Mac OS

CPU	Intel® 4-Core (OS version 10.15) or higher Apple M1 4-Core (OS version 13.0) or higher
RAM	≥ 16 GB
Disk Space	≥ 64 GB
Display Resolution	≥ 2560*1440

Installation & Update

2. Language


Click “偏好” - “偏好设置” - “选择语言” to switch the language to English if the language is set as Chinese.



Installation & Update


3. Update

If a new version is released, it will be a popup asking you to update when you open the software. You can also click Help - Check Update to check whether the software update to the latest version. If the automatic update is unnecessary, cancel the selection of “Automatically check for updates”.

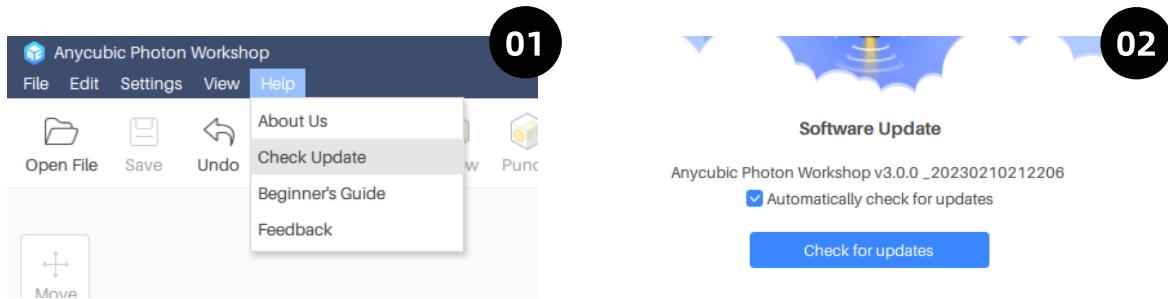

Notice: Anycubic Photon Workshop and its instructions may be updated irregularly. Please visit www.anycubic.com for the latest updates.

Overview


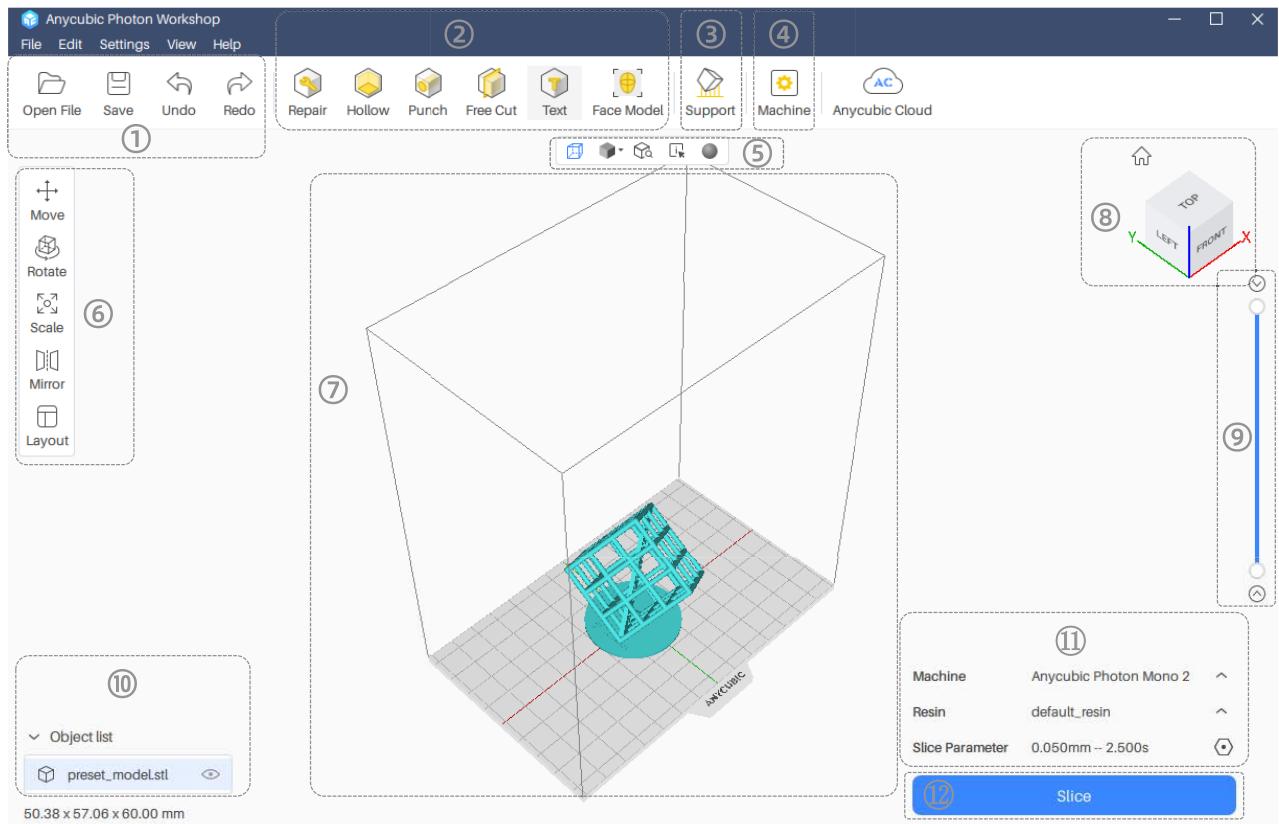


- ① Open/save file, undo/redo
- ② Functions to edit the slice file
- ③ Support settings
- ④ Machine settings
- ⑤ View mode
- ⑥ To edit the objects
- ⑦ 3D model preview
- ⑧ View switcher
- ⑨ Drag the slider to preview each layer of the model
- ⑩ Object list
- ⑪ Configuration of machine, resin and slice parameters
- ⑫ Slice button


Settings

1. Import


Import your own 3D format model, i.e. STL or OBJ file, etc.

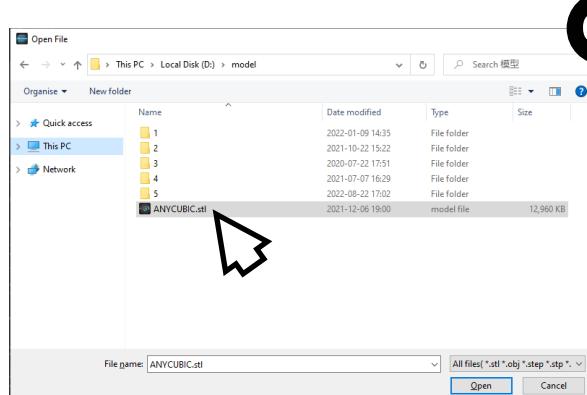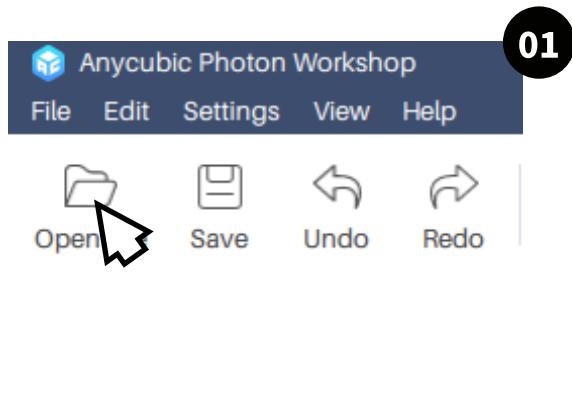

Select model file

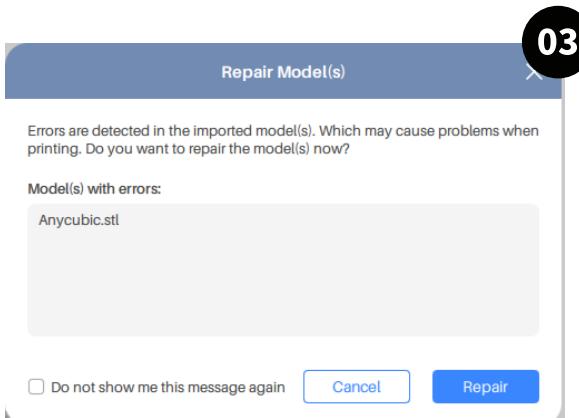

Repair the model*

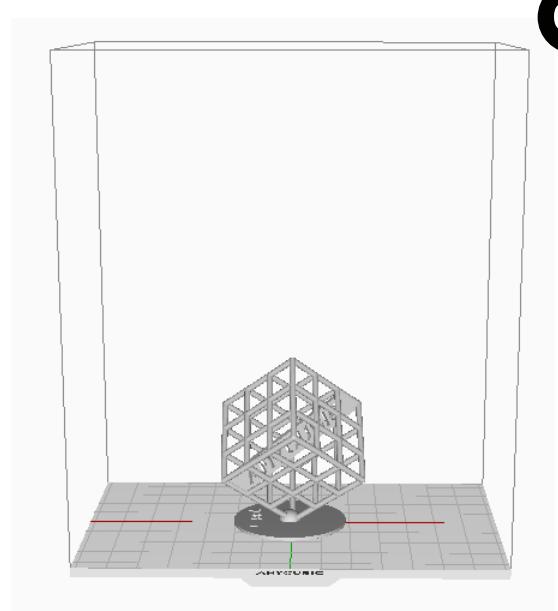


The object is imported

*If the automatic check of the models quality is unnecessary, cancel the selection of "Automatically check the quality of imported models" in Settings-Configuration-Model Repair.


Settings

When the models are selected to edit, they are highlighted.

If you want to check or edit one of several models, click  of other models in the objects list to hide them. When a model is hidden, the functions such as move, rotate, hollow, pinch are unavailable to it. Also, it cannot be added supports or be sliced.

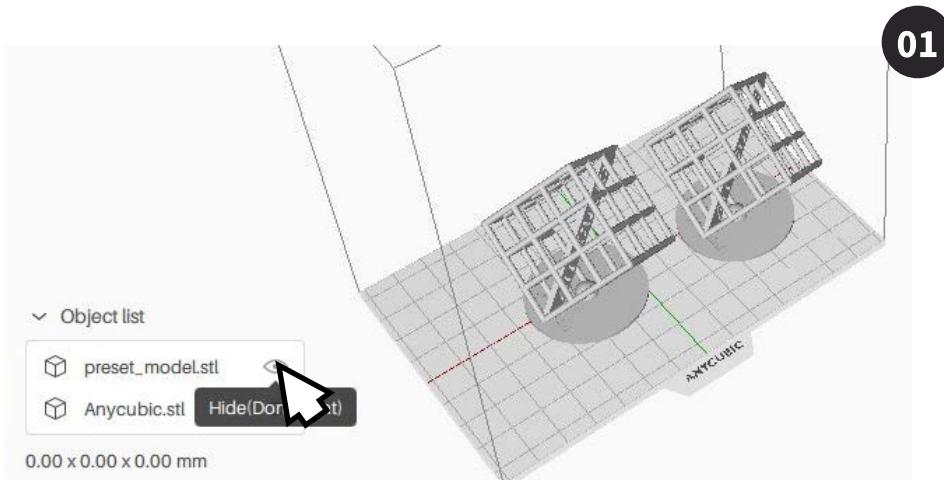

Click to hide the model

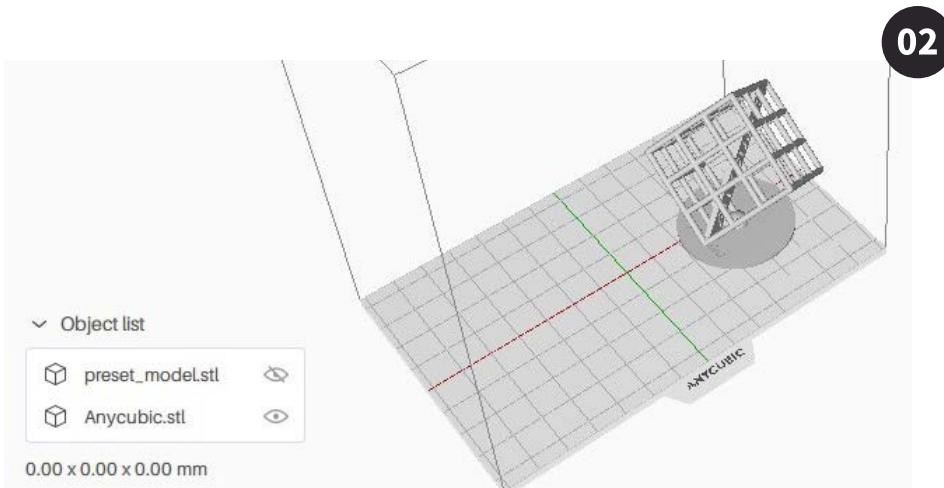


Settings

2. Machine Configuration Manage

① Machine settings

Click  or Machine-Manage Printer and add the type of your printer in the interface. Different printer types have different parameters, please choose the printer you use to avoid print failure.

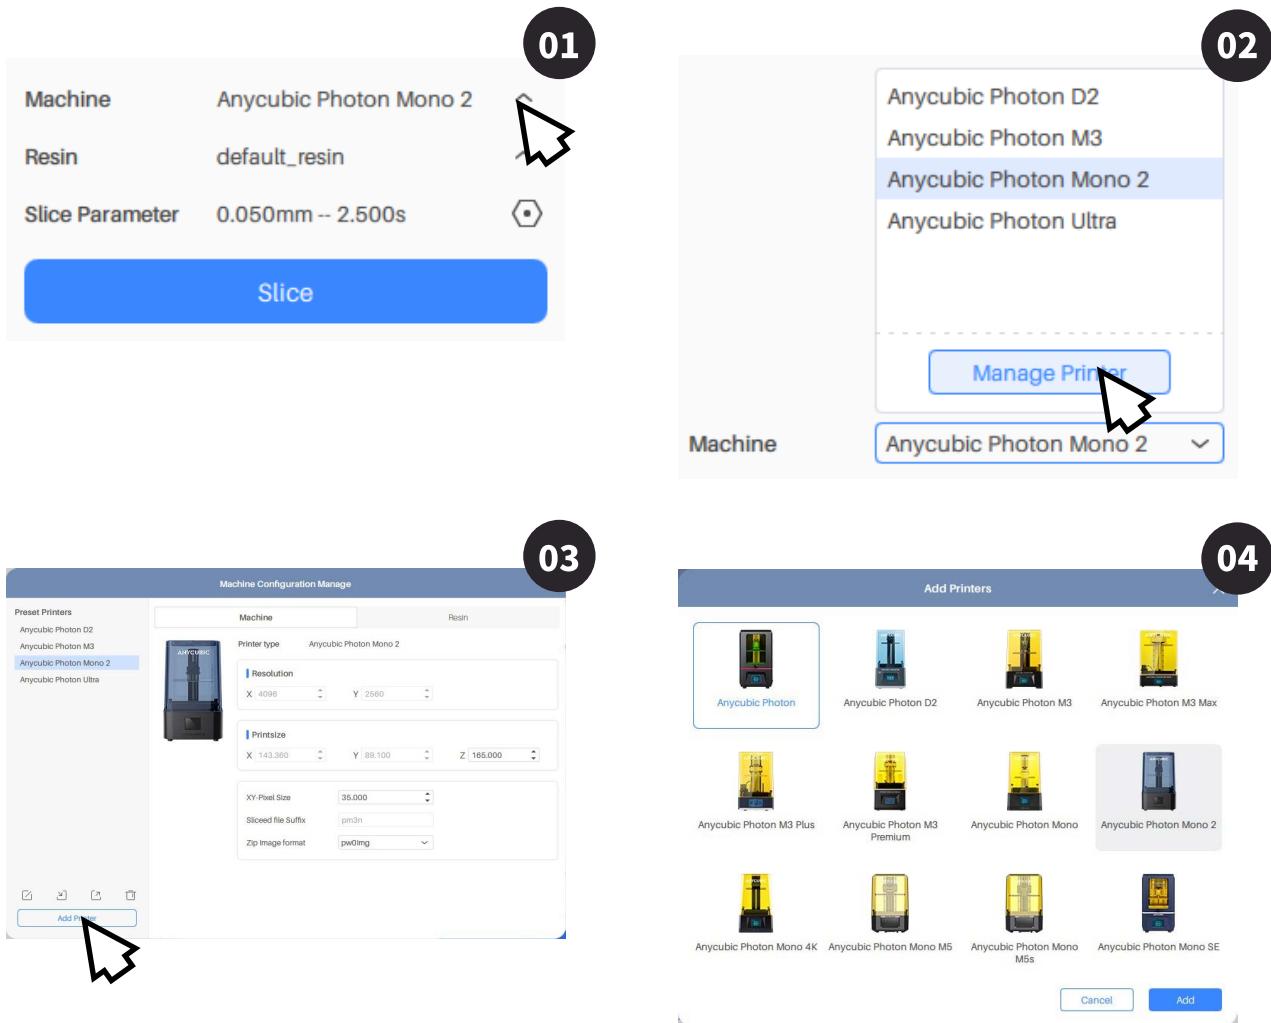

01

Machine Anycubic Photon Mono 2
Resin default_resin
Slice Parameter 0.050mm -- 2.500s

02

Anycubic Photon D2
Anycubic Photon M3
Anycubic Photon Mono 2
Anycubic Photon Ultra

Manage Printer

03

Machine Configuration Manage

Preset Printers
Anycubic Photon D2
Anycubic Photon M3
Anycubic Photon Mono 2
Anycubic Photon Ultra

Machine Resin
Printer type Anycubic Photon Mono 2
Resolution
X: 4096 Y: 2560
Printsize
X: 143.360 Y: 89.100 Z: 165.000
XY Pixel Size 35.000
Sliced file Suffix .pm3n
Zip Image format pw0Img

Add Printer

04

Add Printers

Anycubic Photon Anycubic Photon D2 Anycubic Photon M3 Anycubic Photon M3 Max
Anycubic Photon M3 Plus Anycubic Photon M3 Premium Anycubic Photon Mono Anycubic Photon Mono 2
Anycubic Photon Mono 4K Anycubic Photon Mono M5 Anycubic Photon Mono M5s Anycubic Photon Mono SE

Cancel Add

Select your 3D printer

Settings

② Resin Settings

Add and edit resin types to configure different sets of print parameters for different resin or models requirements, as shown in the following:

01

Machine: Anycubic Photon Mono 2
Resin: default_resin
Slice Parameter: 0.050mm -- 2.500s

02

Machine: Anycubic Photon Mono 2
Resin: default_resin

03

Machine Configuration Manager
Preset Printers: Anycubic Photon D2, Anycubic Photon M3, Anycubic Photon Mono 2, Anycubic Photon Ultra
Machine: Anycubic Photon Mono 2
Resin: default_resin

Name	Resolution	Exposure	Lift	Bottom
default_resin	0.050mm	2.500s	2.000mm/s	1.000mm/s

04

Machine Configuration Manager
Preset Printers: Anycubic Photon D2, Anycubic Photon M3, Anycubic Photon Mono 2, Anycubic Photon Ultra
Machine: Anycubic Photon Mono 2
Resin: default_resin, custom_1

Name	Resolution	Exposure	Lift	Bottom
default_resin	0.050mm	2.500s	2.000mm/s	1.000mm/s
custom_1	0.050mm	2.500s	8.000mm/s	4.000mm/s

05

Edit Resin
Information:
Resin Name: custom_1
Resin Type: Standard Resin
Resin Volume(mL): 1000.000
Resin Price: \$ 220.000
Slice Parameter:
Layers Thickness(mm): 0.050
Normal Exposure Time(s): 2.500
Off Time(s): 1.000
Bottom Exposure Time(s): 25.000
Bottom Layers: 5
Anti-alias: 16
Gray Level: 0
Image Blur: 0
Control Type: Basic
Z Lift Distance(mm): 6.000
Z Lift Speed(mm/s): 4.000
Z Retract Speed(mm/s): 6.000

Set resin and slice parameter

Then click OK to finish

Settings

Set slice parameters according to your requirement in Edit Resin interface. Then, click “OK” to apply it. The recommended parameters is shown in User Manual- Recommended Printing Parameters.

Slice parameter instruction



- **Layer Thickness:** The thinner the layer, the better the accuracy of Z-axis direction. The thicker the layer, the longer the exposure time for each layer.
- **Normal Exposure Time:** The length of normal exposure time depends on UV power, complexity of model, resin materials and so on. Underexposure may cause uncured detail, overexposure may affect accuracy of model.
- **Off Time:** The UV light will be off for a certain time between each layer. The longer off time allows resin with poor fluidity to reflow.
- **Bottom Exposure Time:** The longer the bottom exposure time is, the easier the bottom layers of the model stick to platform.
- **Bottom Layers:** The bottom layers need to be exposed for longer time to stick model to platform tightly. The bottom layers may be larger than normal layers.
- **Z Lift Distance:** The model requires enough distance to be separated from the FEP film.
- **Z Lift Speed:** If the lift speed is too fast, the model will be broken and supports may also be damaged due to the separation force.
- **Z Retract Speed:** If the retract speed is too fast, the printing quality may be damaged.

Settings



- **Anti-alias:** A higher grade of anti-alias value could enhance the ability to smooth the edges for each layer during printing, thereby resulting better surface of the printed objects. A higher grade of anti-alias value also means longer slicing time and larger files.
- **Surface Abrasion (for some types of printer):** Only when anti-alias value is 1 can you check this option to get a matte surface.

When anti-alias value is larger than 1, you can set the grades of gray level and image blur according to the requirement.

- **Gray Level:** The higher the gray level, the brighter the pixels of anti-alias.

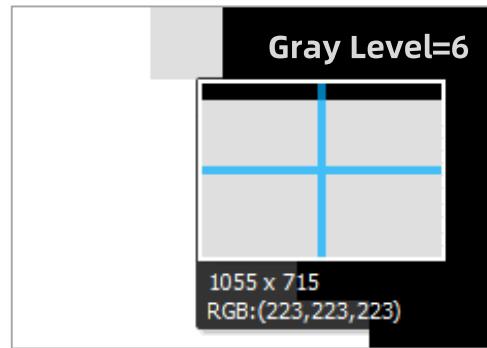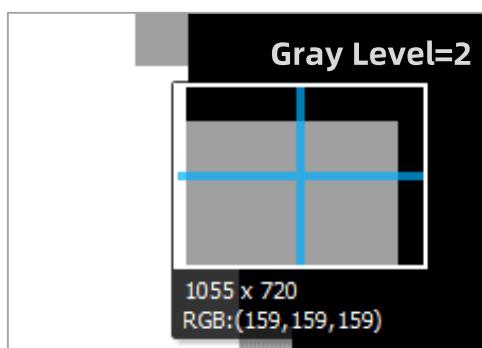

- **Image Blur:** It blurs the edge of image to achieve the natural cohesion. The higher the grade of image blur, the more blurry it is.

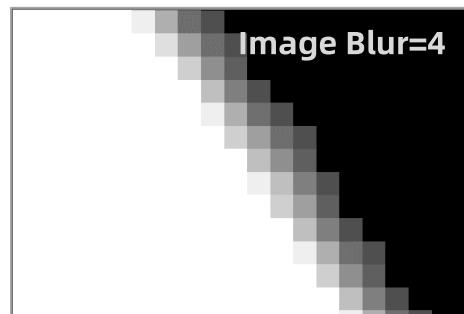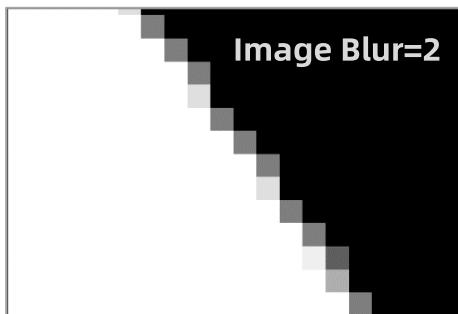


In the process of printing, please comprehensively consider the grade of anti-alias, gray level and image blur according to the actual requirement to get the best surface quality.

Settings

Advance


In basic mode, Z lift time, Z lift speed and retract speed of the bottom layers are the same with those of normal layers. However, if you want to reduce the printing time or achieve better print effect, switch to advance mode to set different parameters of Z-axis moving in different stages and layers.

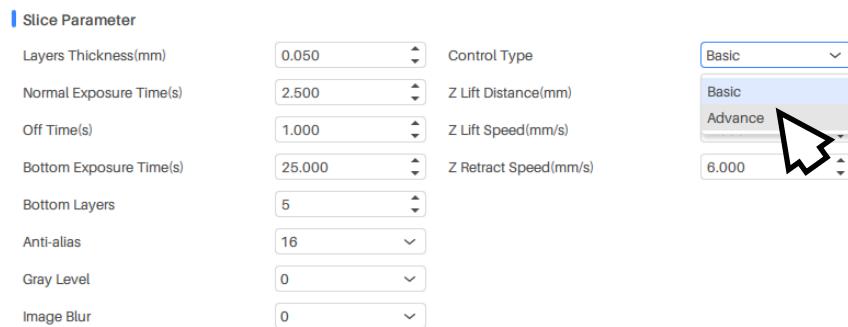

Switch to advance mode

- **Bottom layers control:** To set Z lift height, Z lift speed and Z retract speed of the bottom layers.
- **Normal layer control:** To set Z lift height, Z lift speed and Z retract speed of the normal layers.
- **Transition layer count:** The transition layers between the bottom layers and normal layers. The more the transition layers are, the longer the time transition costs.
- **Step [0]:** The stage when printing platform is moving near the curing face. The speed of this stage is relatively slow to avoid affecting the printing.
- **Step [1]:** The stage that printing platform is moving away from the curing face. The speed of this stage is relatively fast to shorten the printing time.

Settings

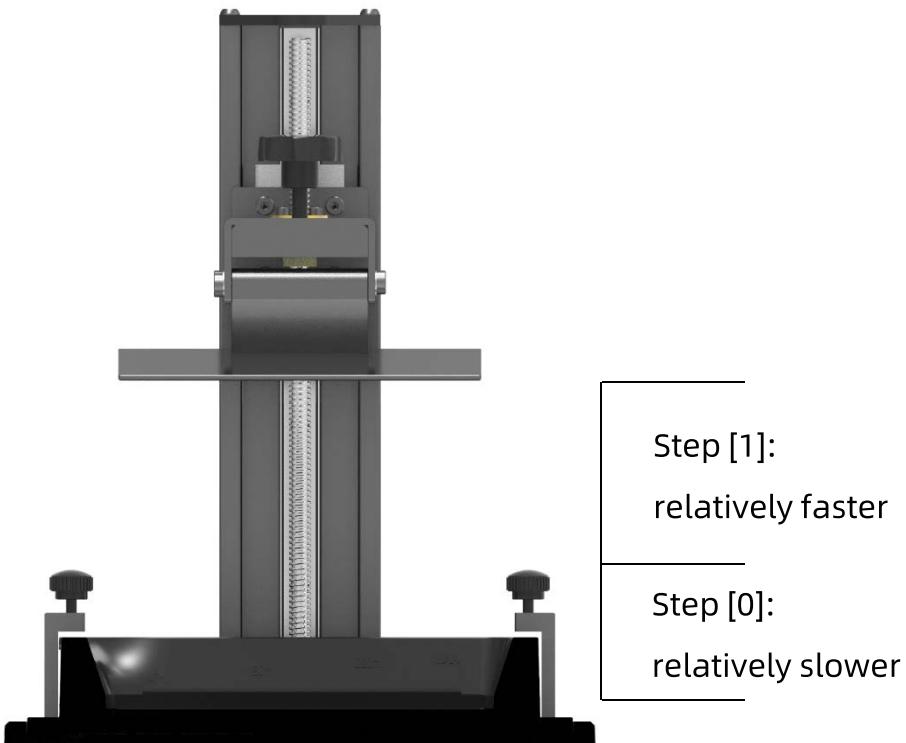


*Each Z lift height in Step[0] and Step[1] corresponds to distance of two printing platform's motion.

Settings


3. Anycubic Cloud (for Anycubic Photon M3 Premium, Photon Mono M5, Photon Mono M5s)

If your printer is supported to use the Anycubic Cloud, you can save the sliced file to Anycubic App or remotely start the print job after slicing.

- ① Log in Anycubic Cloud.

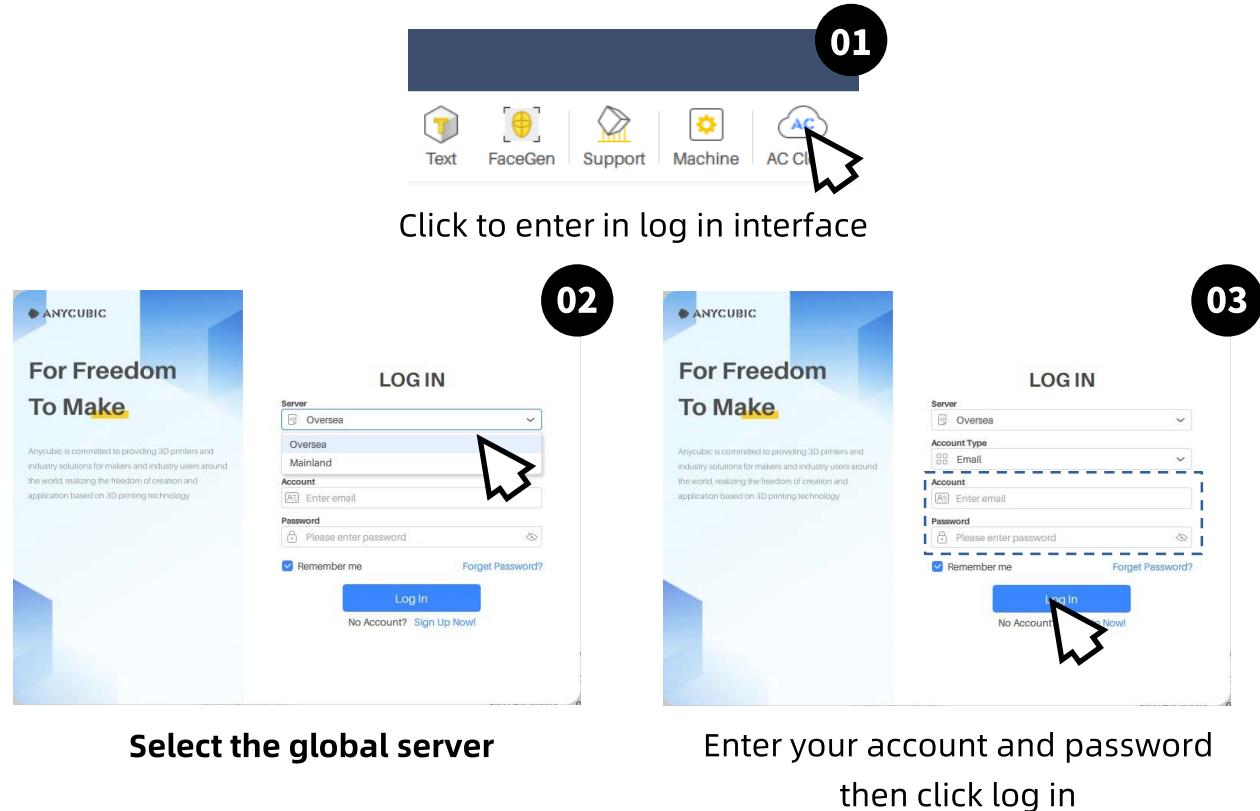

- ② Add printer.

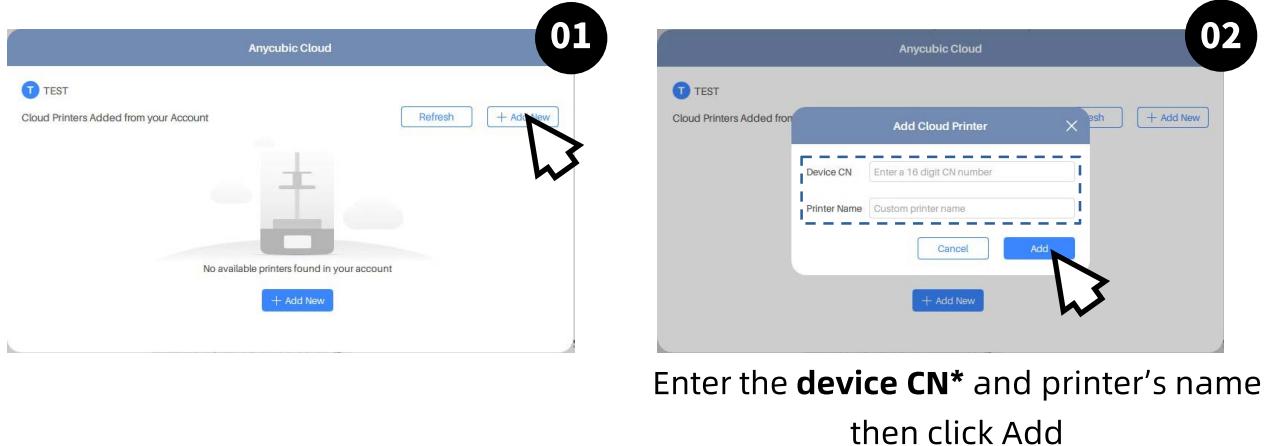


*You can check the device CN on the touch screen of the printer. For details, please refer to the user manual of the corresponding printer type.

Introduction to Functions


1. View Changing

① View angle

- **Mouse:** Scroll the mouse wheel to zoom in/out; left click the platform and drag to move it; right click the platform and move to change view angle.
- **Interface controls:** click the surfaces of cube to change view angle; right click the cube and move to change view angle; click  to switch to isometric view.
- **View menu:** Switch to different views.

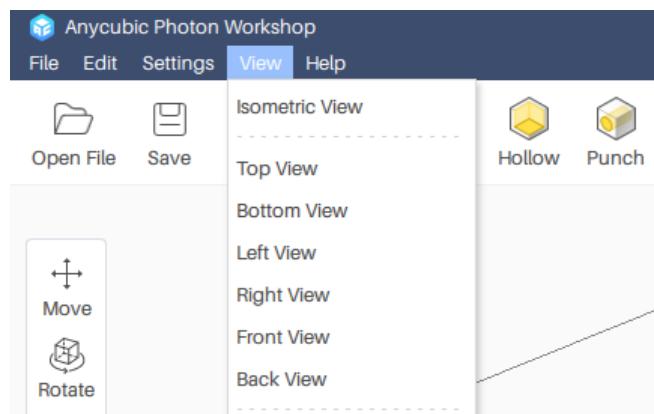

② View mode

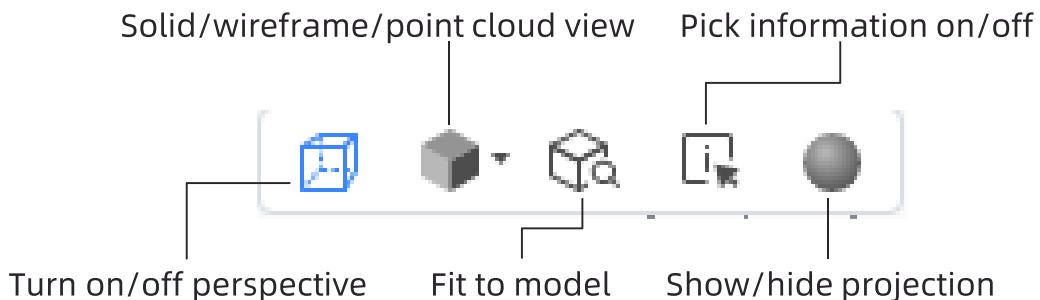

Introduction to Functions

2. Model Edit

Move: Input a number or manipulate the controls to move the model.

Rotate: Input a number or manipulate the controls to rotate the model.


Click “Rotate by Face” to select a face to align model to the build plate.

Scale: Input a number or manipulate the controls to scale the model. Click “Scale to Fit” to scale the model to its maximum size for the printer.


Mirror: Mirror the model in X, Y or Z direction.

Layout: Place the models according to the settings of model interval, order, position and so on. It increases the space utilization to print more models in one time.


- The Bigger the model spacing, the less the models can be placed.
- Rotate the models on Z-axis to increase the space utilization.
- Set the placing order according to the personal requirements.

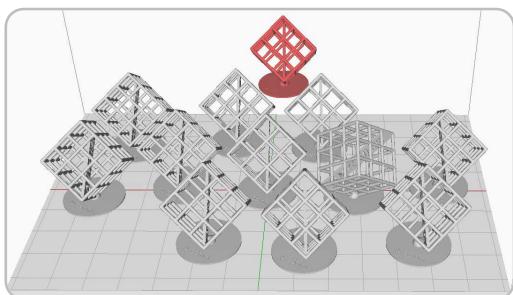


Model Spacing 2mm

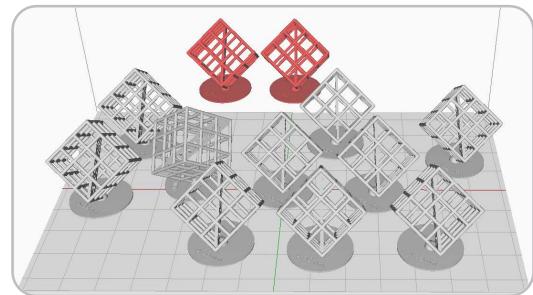

Model Spacing 3mm

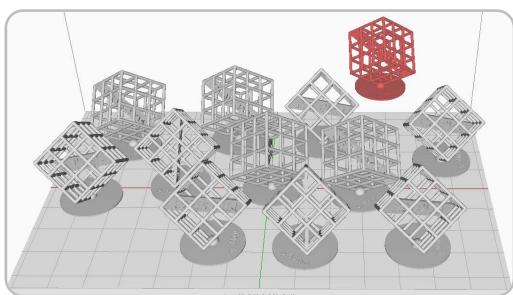

Rotate 45°

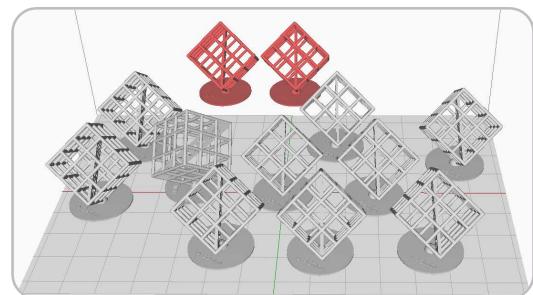


No Rotation

Notice: The red part out of the print range is not printable.


Introduction to Functions

3. Repair

Check if there are problems such as bad orientation, bad edge, hole, intersection and repair the models to increase the success rate of printing.

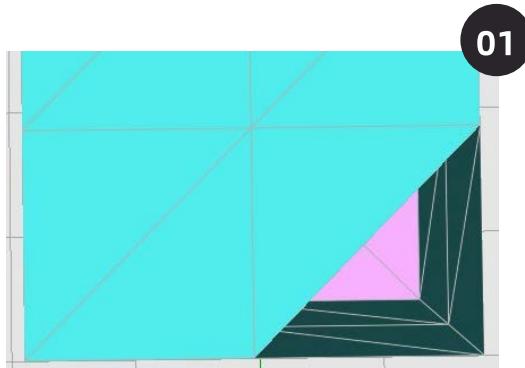


Model error

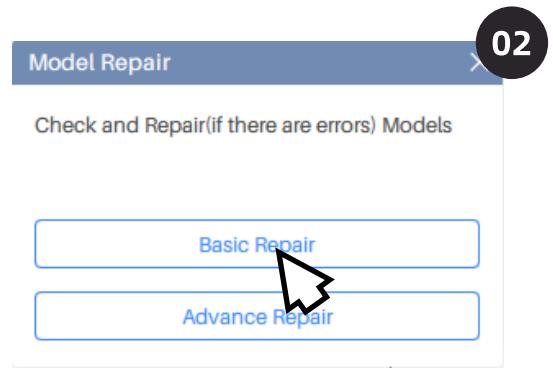


Basic Repair

Advance Repair


Click to repair

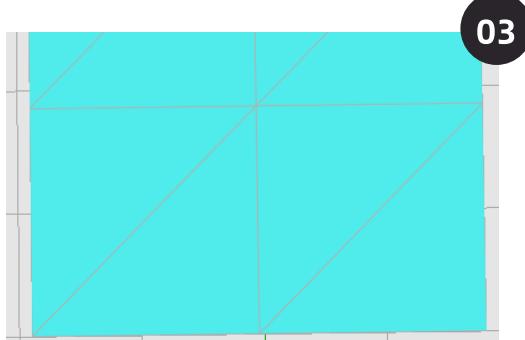

Basic Repair VS Advance Repair:

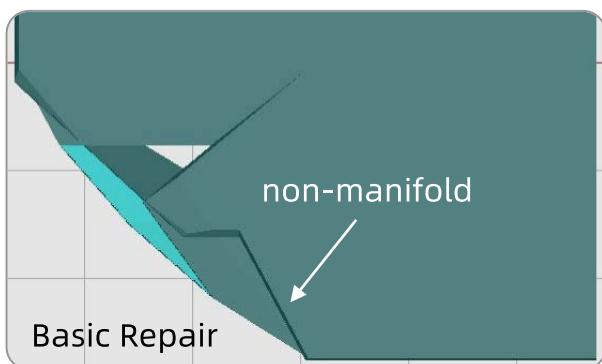

Mainly repair bad orientation and holes

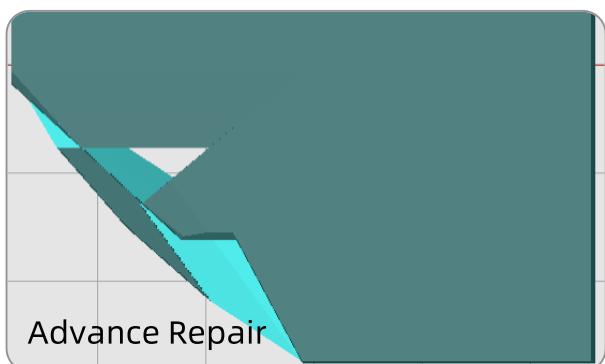


repair of the intersection, non-manifold is added

Introduction to Functions


4. Hollow

Hollow the model to reduce resin consumption.


BCC infill and FCC infill is more likely to help to drain the resin inside the models than other shape of infill.

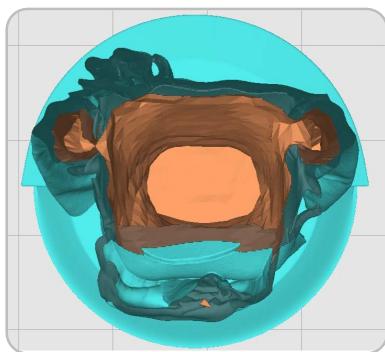


Hollow thickness: 1mm

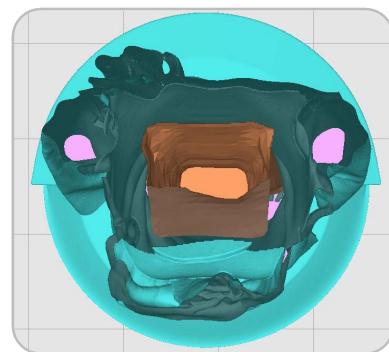

Hollow thickness: 3mm

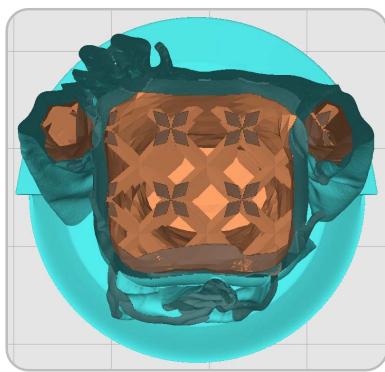

BCC infill

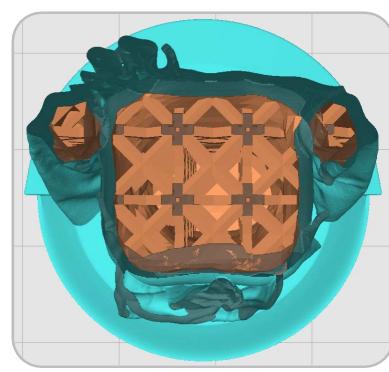

FCC infill



The model name: MIA

The author of the model: Fabio Nishikata

Introduction to Functions


5. Punch

If the model is hollowed, it is suggested to pinch at the side or bottom of the model to avoid the print failure caused by vacuum seal drawing. When the print is finished, that discharge the resin inside the model can prevent model being broken after a period of time.

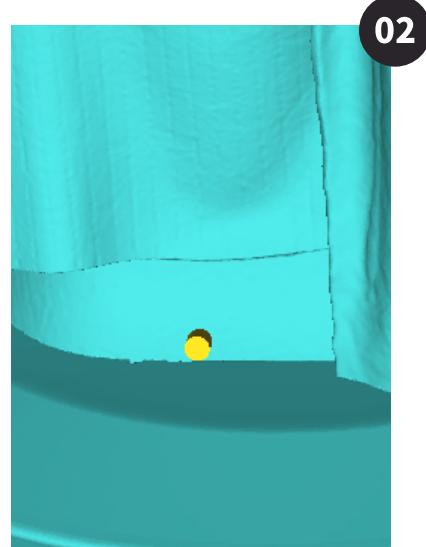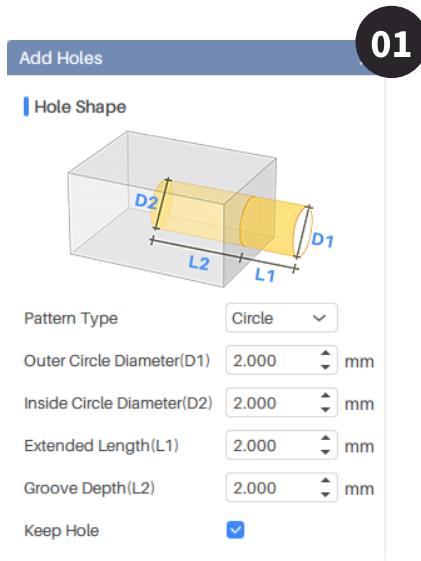

Set the parameters, L2 must be larger than hollow thickness

click on the model
to pinch

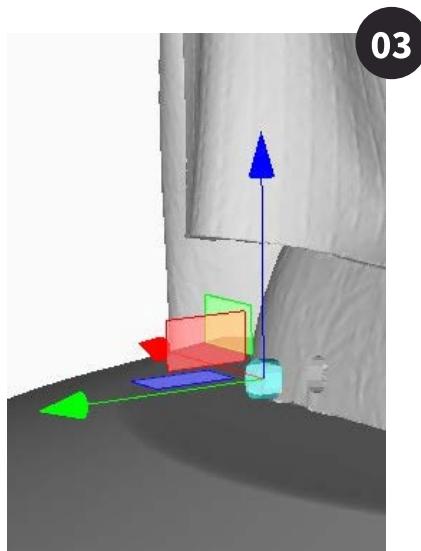


The cylinders needs to be
place properly to be printed

The author of the model: Fabio Nishikata


Introduction to Functions

6. Free Cut


Adjust the cut facet by the following three methods and then click "Perform Cut" to generate groups.

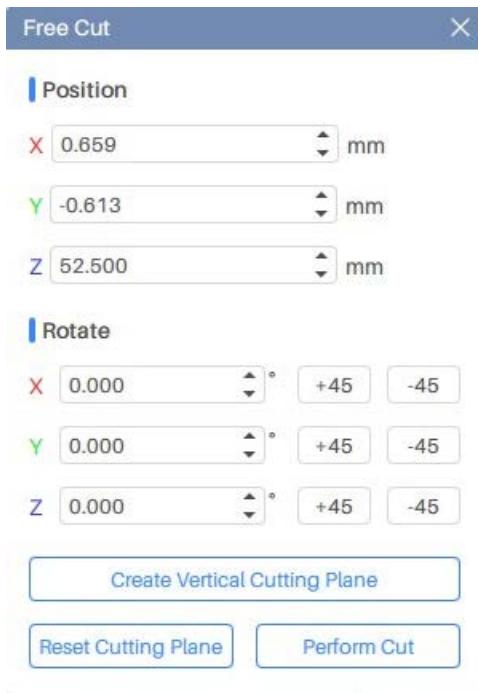

Adjust the cut facet by
modify the parameters

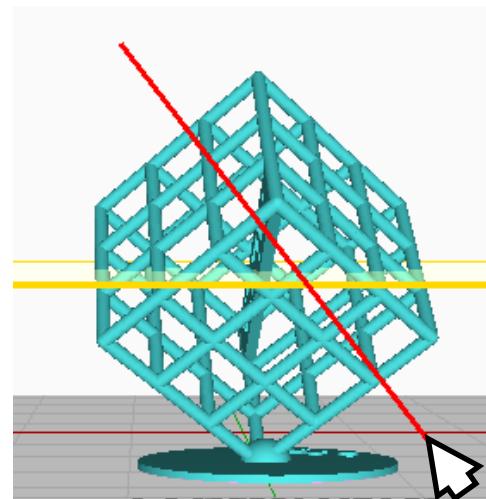

drag cross the model to
draw the cut face

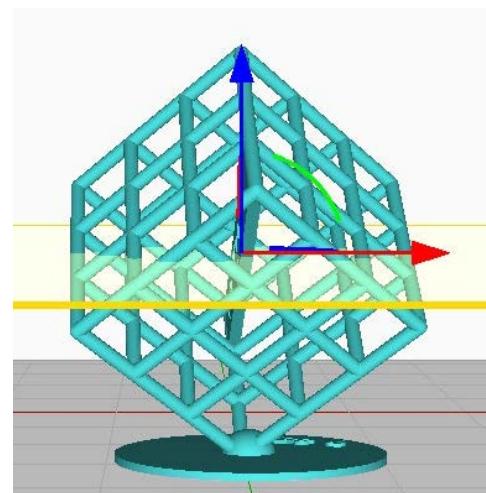


Adjust the cut facet by control

Introduction to Functions

7. Text


- Add mode

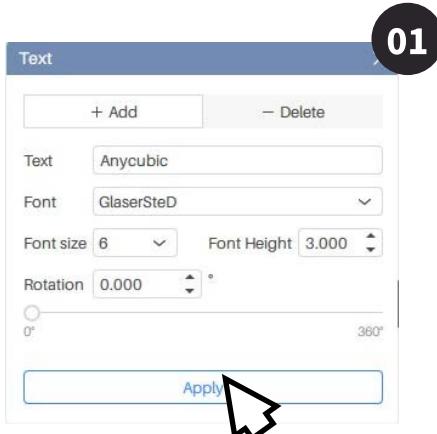

Set the text and
then click "Apply"




Click on the place to add text

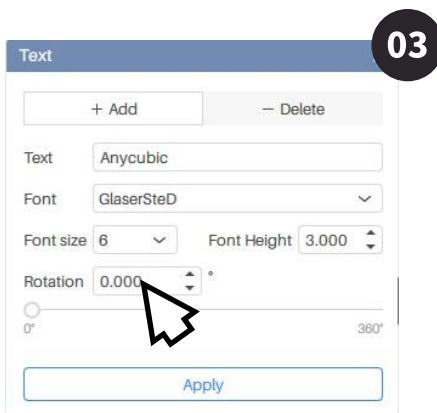

Adjust the angle of the text

Introduction to Functions


- **Delete mode**

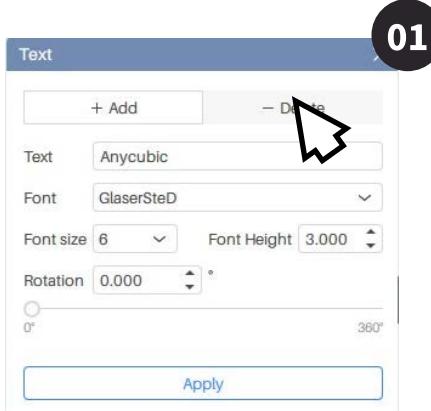

Switch to delete mode



Click to select the text

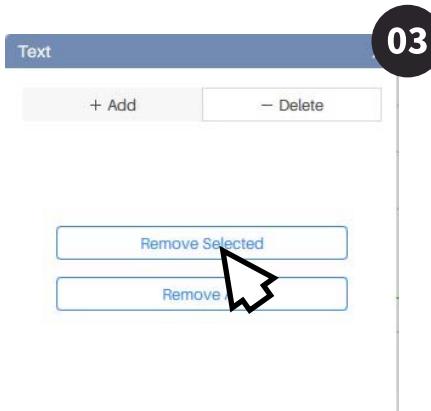

Remove selected text
or remove all text

The author of the model: Fabio Nishikata

Introduction to Functions

8. Face Model

It is the function reconstructing a face from 2D pictures into a 3D form.


① Upload the proper photos according to the requirements below:

- **Environment:** The light should be even and balanced to avoid shadows on the face. The facial contour should be clearly visible.
- **Background:** The background of the photo should be single color. The dark background is better. (black>blue>red>white)
- **Dimensions:** Minimum acceptable dimensions are 84 pixels (width) × 112 pixels (height)
- **Facial Requirements:** Please present the front and side views with the entire head and face clearly visible. The facial expression should look natural with eyes open and mouth closed. Do not let eyeglasses, hat or other object obscure the facial features.
- **Note:** The side views should show the point between the eyebrows.



Introduction to Functions

- ② Click the corresponding points in accordance with the illustration and prompt to finish localization.

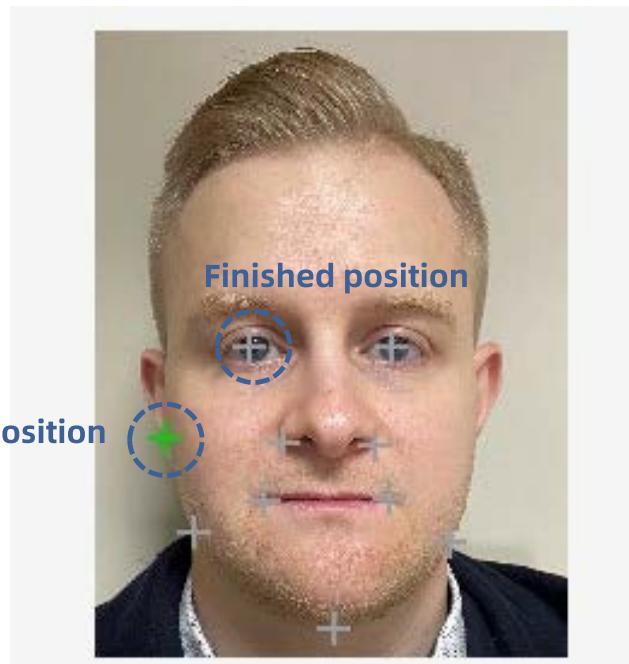

finished position is grey; current position is green

If you make a mistake, click the green cross to cancel.

- ③ When the steps are finished, click “Generate” to generate the face model.

Support Settings

When the model has obvious suspended parts or overhang, it needs to add support to reduce the risk of printing failure.

There are three support scripts: light, medium and heavy.

Light: Contact area between the support and model is small, and the support is easy to remove.

Heavy: Support contact with the model area is large and solid.

It is recommended to try the “Medium” first, and use the default settings.

Also, you can add the support scripts and modify the parameters to fit your requirement.

1. Basic Settings

Support Angle: The larger the support angle, the more the supports.

Anchor Distance: The distance between supports. The shorter the distance, the more the supports.


Z Lift Height: Raise the models before adding supports to avoid bottom of the models being destroyed during printing.

- **Automatic Supports**



Support Settings

Automatic supports

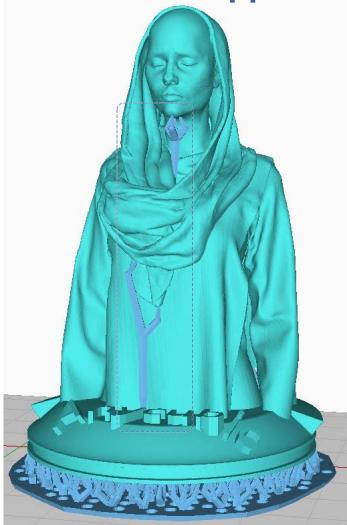

add between platform and model,
between points on model



Support on platform



add between platform and model only

• Manual Supports


Add: Click the point on model which is needed support to add support.

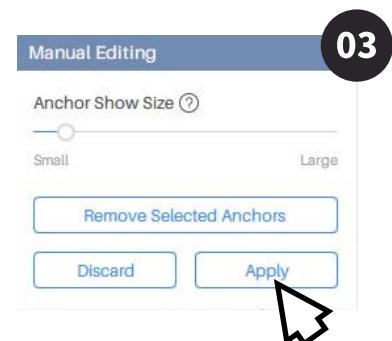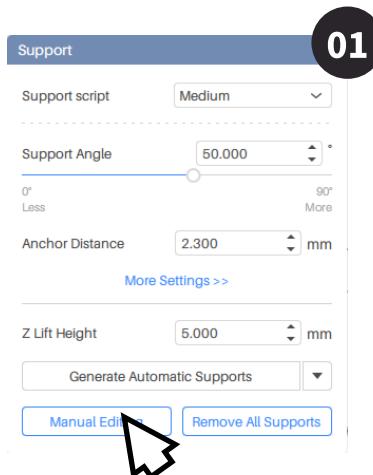


Edit: Select a anchor and then drag to move it.

Delete: Select an anchor and remove it; or remove all supports directly.

Support Settings

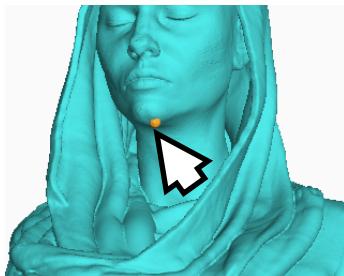

Click to select the anchor

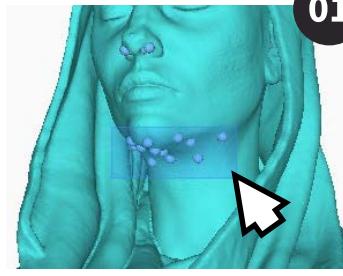

Shift+drag to select the supports in an area
Ctrl+click to select several supports
Alt+drag to deselect the supports in an area

01

02

Manual Editing


Anchor Show Size ⓘ

Small Large

Remove Selected Anchors

Discard Apply

Remove the selected supports

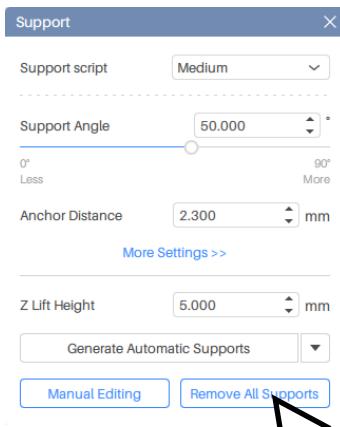

Remove all supports directly

The author of the model: Fabio Nishikata

Support Settings

2. Support Scripts Settings

If there are more detailed requirement for supports, you can configure different groups of support settings to fit.

① Configuration

The image contains three screenshots labeled 01, 02, and 03, illustrating the configuration of support scripts.

01 Enter in more settings: Shows the main support settings interface. It includes fields for Support script (Medium), Support Angle (50.000), Anchor Distance (2.300 mm), Z Lift Height (6.000 mm), and buttons for More Settings >>, Generate Automatic Supports, Manual Editing, and Remove All Supports.

02 Add a script: Shows a list of support scripts. A cursor points to the '+' icon to add a new script. The list includes Light, Medium (selected), Heavy, and Medium_1.

03 Rename: Shows the same list of support scripts. A cursor points to the edit icon next to the Medium script, indicating it can be renamed to Medium_1.

The image contains two screenshots labeled 05 and 06, illustrating detailed support settings and generating supports.

05 Set the support parameters: Shows the Support Settings interface with the TEST support script selected. It displays various parameters for Anchors, Connection, Bar, and Base, such as Number of Anchors, Support Angle (50.000), Anchor Distance (2.300 mm), Border Anchor Distance (2.000 mm), Border Offset (0.500 mm), No Support Offset (2.000 mm), Resinforce Lowest Points (checked), Lowest Anchor Distance (1.200 mm), Reinforce Height (1.500 mm), and Enable Support in Shell (unchecked).

06 Back to support interface Click to generate supports: Shows the main support settings interface again. A cursor points to the 'Generate Automatic Supports' button. The support script is set to TEST, and other parameters like Support Angle (50.000), Anchor Distance (2.300 mm), and Z Lift Height (5.000 mm) are also visible.

Support Settings

② Support parameter instructions

- **Anchor**

Support Angle: The angle between the support surface and the horizontal plane. The larger the critical angle, the greater the area that needs to be supported.

Anchor Distance: The distance between the anchor points which are added out of border of the model. The shorter the distance, the more the supports.

Border Anchor Distance: The distance between the anchor points which are added on the border of the model.

Border Offset: The minimum distance between anchor points and the edge of the model.

No Support Offset: The minimum distance between the anchor points on the overhang. The shorter the distance, the more the anchor points.

Reinforce Lowest Points: Increase the anchor points at the lowest part of the models.

Lowest Anchor Distance: The minimum distance between the anchor points at the lowest part of the models.

Reinforce Height: The minimum height of the supports stick to the lowest part of the models .

Enable Support in Shell: Add support to the hollowed part.

- **Connection**

Distance in Model: The length of the support bar inserting into the lower surface of the model. An appropriate connection length can ensure that the support top is rough enough and easier to remove.

Top Width: The width of the contact point that touches the lower surface of the model. The larger the width, the larger the contact area between the support and the model.

Support Settings


Length: The distance between the lower surface of the model and the contact point widened to middle width.

Tip Type: Set the tip being perpendicular to contact area/horizontal plane.


Ball Contact: To set the contact shape as ball.

Ball Diameter: The larger the diameter, the larger the contact area.

Break Point: Set break points where tips contact the models to make the treatment easier .

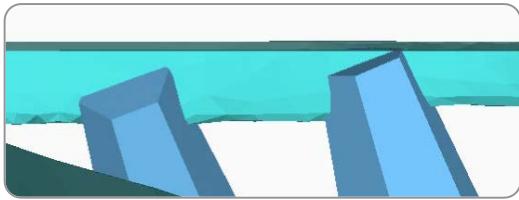

No break point

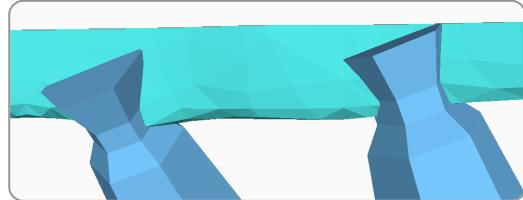

Break point

Break Point Height: Length of the break point.

Break Point Width: Width of the break point.

Start Height: The distance from the top of the model to the break point.

End Height: The distance from the break point to the tip inside the models.

Filter Supports

Remove Short Supports: When it is enabled, the supports shorter than a set length cannot be generated on the model.

Change the Width of Support: When it is enabled, the width of the supports on the model which are shorter than a set length are changed according to the set width scale.

Platform Connection

Height: The height of the support platform.

Radius: The larger the radius, the larger the support platform.

Slope Angle: The slope angle of the edge of the support platform.

Support Settings

- **Bar**

Polygon Edge Number: The number of the sides for the Polygonal prism.

Max Branch Number: The maximum number of the branches of the bar.

Branch Top Width: The width of where branch contacts the model.

Branch Bottom Width: The width of where branch contacts the trunk.

Trunk Top Width: The width of where trunk contacts all branches.

Trunk Bottom Width: The width of where trunk contacts platform or base.

Trunk Height

Automatic: Automatically generate supports by the suitable parameters.

Max Height: Set the maximum trunk height to generate supports.

Branch Max Angle: Set the maximum branch angle to generate supports.

Bar Cross Connection


Cross Type

MST Method: To ensure the anchor points all being linked and the cross is less.


Min2 Method: To ensure the anchor points all being connected and the cross may be more.

Border Method: Only connect the anchors on the edge of the models.

Connection Type

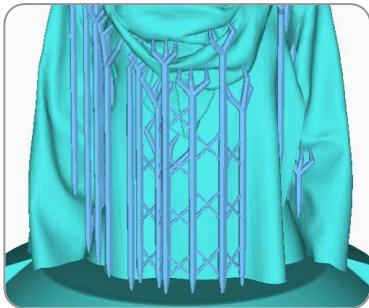

Cross Connection

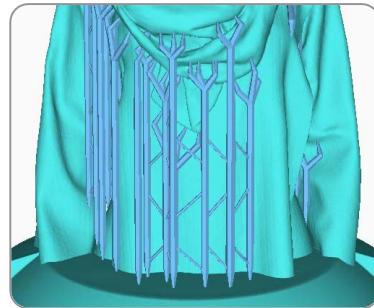

Alternate Connection

Start Height: Cross is generated from a certain height.

Cross Bar Width: The width of the cross.

Cross Bar Angle: The angle between the cross and horizontal plane.

Interval Height: The distance between the cross.

Support Settings

- **Base**


Add base to increase the adhesion between model and the print platform to reduce the risk of the print failure.

Plate Offset: The minimum distance between the support and edge of the base. The larger the offset, the larger the base.

Plate Height: The thickness of the base.

Slot Angle: The slope angle of the edge of base.

Plate Type:

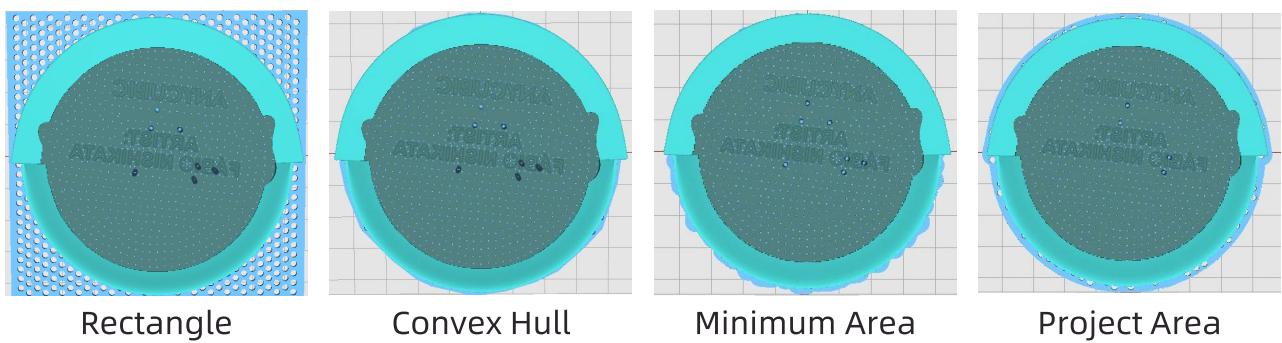

Perforation: Enable perforation to save resin.

Hole Radius: The larger the holes, the less the resin needed, the smaller the contact area with the print platform.

Hole Interval: The larger the interval, the less the holes.

Hole edge number: The larger the edge number, the more similar to circle the hole is.

Support Settings


3. Automatic Support Adding Skills

- Properly increase support angle or decrease anchor distance

When browsing on the model, it can be found that the model still has some weak points that have not been added supports properly. If you increase support angle or decrease anchor distance, more supports can be added to some of the weak points.



Support angle 30°

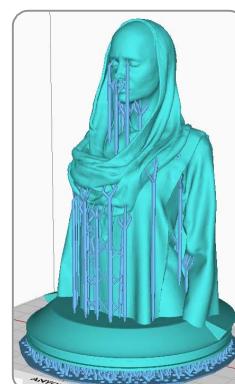


Support angle 50°

- Add manual support after automatic support

Manually add support to some of the weak points.

- Check Land

Click “Check Islands” in slice file preview interface, then drag slider to check the image of every layer. The green part means there is support below; the yellow part is connected to other parts but may be suspended and may need supports; the red part is completely suspended and must be added supports.

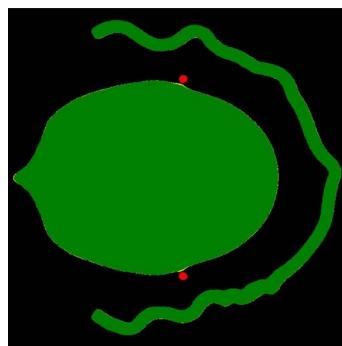


The author of the model: Fabio Nishikata

Export Sliced File

1. Slice

When the setting is finished, click Slice. Anycubic 3D printer can only read its corresponding sliced file formats, please choose the machine type you use at Machine Settings to avoid print failure.


It is suggested to add supports if it prompts that the model with some overhanging areas is needed supports. To cancel the automatic check for supports, enter into settings-preferences-slicing and uncheck “show support model prompt dialog when slicing”.

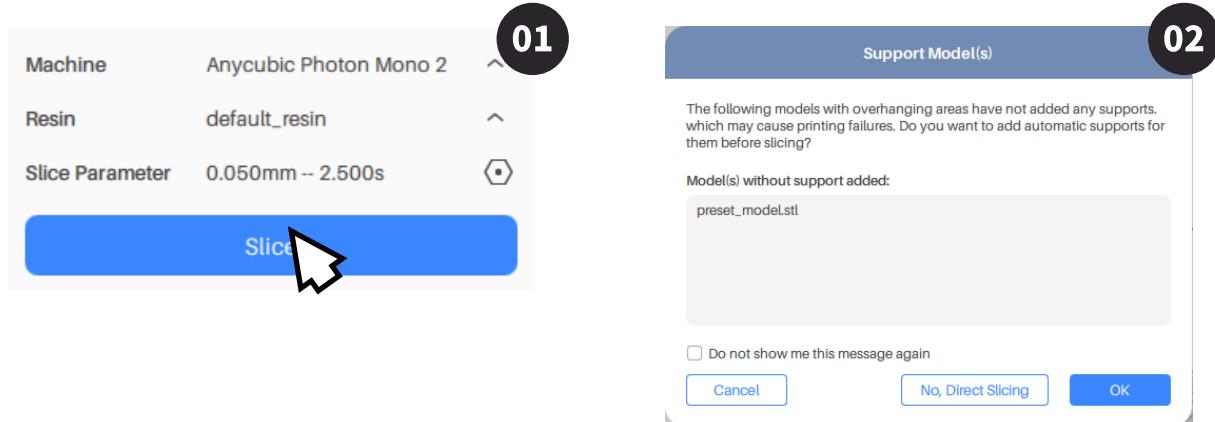

Check the supports

2. Preview

In the slice file view interface, you can preview slice settings and adjust the slice settings.

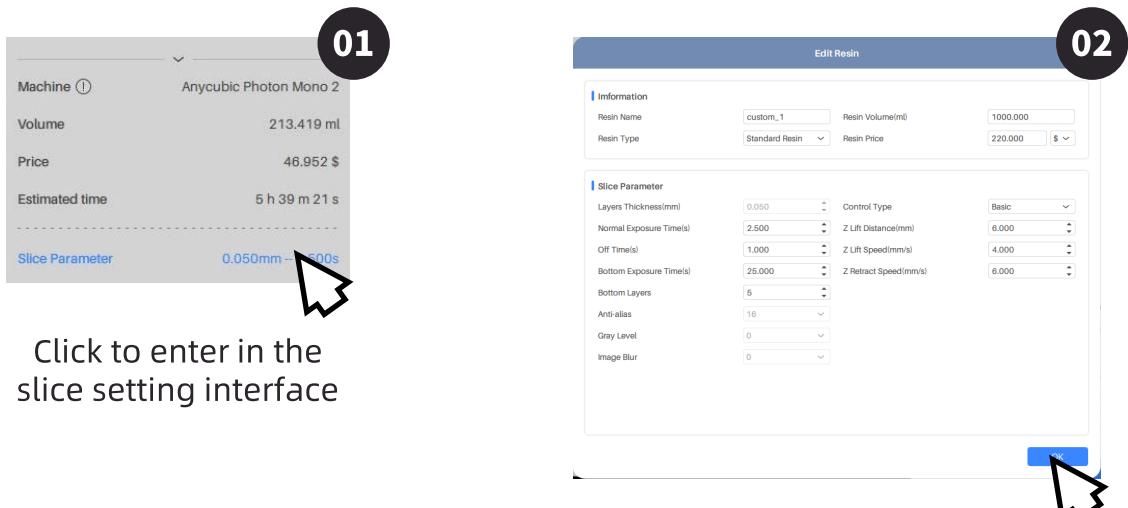

Click to enter in the slice setting interface

Adjust the parameters then click OK to save

Export Sliced File

3. Export

- **Return:** If some other manipulations of model are needed, click “Return” and go back to editing interface.
- **Remote Print:** Send the sliced file to the printer and start printing. The print job can be remotely controlled by Anycubic App.
- **Save Sliced File**

Save to Disk: Save the sliced file to PC.

Save to Cloud: Save the sliced file to Anycubic App.

