

# **HEIDENHAIN**



Product Information

ECN 1313 ECN 1325 ERN 1387


Rotary Encoders with Plane-Surface Coupling for Elevator Servo Drive Control

## ECN/ERN 1300 series

Rotary encoders with integral bearings for elevator technology

- Simple installation
- Rigid shaft coupling
- Plane-surface coupling for large mounting tolerances
- Uniform dimensions for various electrical interfaces



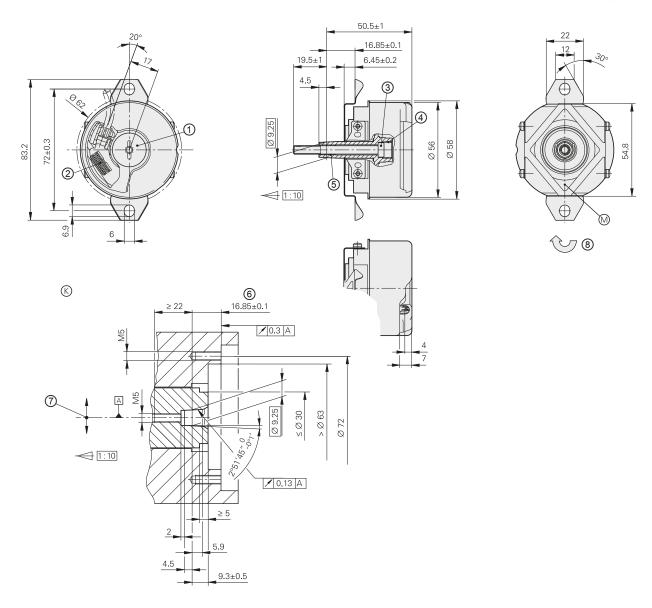

Tolerancing ISO 8015 ISO 2768 - m H < 6 mm: ±0.2 mm

- **B** = Bearing of encoder
- © = Required mating dimensions
- ⊕ = Measuring point for operating temperature

   1 = Screw plug, width A/F 3 and 4. Tightening torque: 5+0.5 Nm
- 2 = PCB connector
- $3 = Self-tightening screw M5 \times 50 DIN 6912$  width A/F 4, tightening torque 5+0.5 Nm
- 4 = M10 back-off thread
- 5 = M6 back-off thread
- 6 = Max. permissible tolerance during motor shaft rotation  $\pm 1.5$  mm
- 7 = Max. permissible static radial offset of motor shaft in indicated direction  $\pm 0.13$  mm
- 8 = Direction of shaft rotation for output signals as per the interface description

-			
≤ 130 mA (without load)			
±1.5 mm			
0.13 mm			
$\leq$ 300 m/s <sup>2 6)</sup> (EN 60068-2-6) $\leq$ 2000 m/s <sup>2</sup> (EN 60068-2-27)			


<sup>1)</sup> See Interfaces of HEIDENHAIN Encoders brochure
2) Velocity-dependent deviations between the absolute value and incremental signals
3) One sine and one cosine signal per revolution
4) Evaluation optimized for KTY 84-130
5) Compensation of mounting tolerances and thermal expansion, not dynamic motion
6) As per standard for room temperature; for operating temperature

Up to +100 Up to +100 °C:  $\leq$  300 m/s<sup>2</sup> Up to +115 °C or +120 °C:  $\leq$  150 m/s<sup>2</sup>

## **Electrical connection**

## Pin layouts


### ECN 1313 pin layout

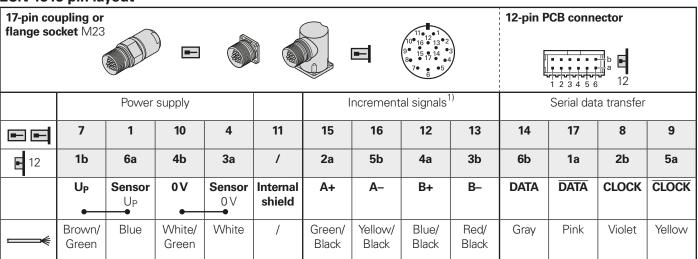

	Other signals			
	5 6			
	/	/		
12	/	/		
	Brown <sup>2)</sup>	White <sup>2)</sup>		

**Cable shield** connected to housing;  $\mathbf{U_P} = \text{Power supply voltage}$ ;  $\mathbf{T} = \text{Temperature}$ **Sensor:** The sensor line is connected in the encoder with the corresponding power line. Vacant pins or wires must not be used.

### ECN 1325 pin layout

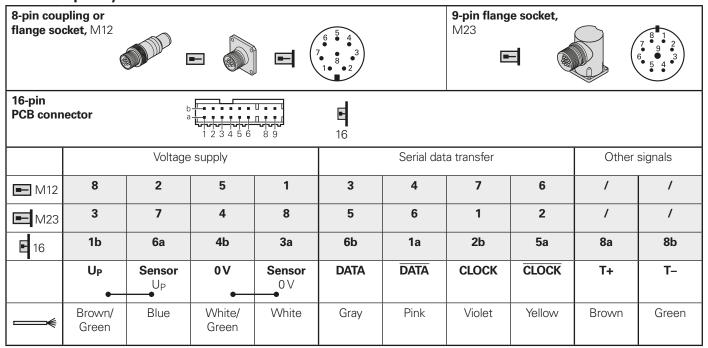

Cable shield connected to housing

 $\mathbf{U_P} = \text{Power supply; } \mathbf{T} = \text{Temperature}$ 

**Sensor:** The sensor line is connected in the encoder with the corresponding power line.

Vacant pins or wires must not be used.

<sup>1)</sup> Only with ordering designations EnDat 01 and EnDat 02

<sup>&</sup>lt;sup>2)</sup> Only for cables inside the motor housing

### **ERN 1387 pin layout**

17-pin con flange so							110 12 10 16 16 9 15 8 17	13°2 14°3 14°3 0°4	14-pin PC	B connecto	• • b • • a
		Voltage	supply			Incremental signals					
	7	1	10	4	11	15	16	12	13	3	2
E	1b	7a	5b	3a	/	6b	2a	3b	5a	4b	4a
	U <sub>P</sub>	Sensor U <sub>P</sub>	0 V •—	Sensor 0 V	Internal shield	A+	<b>A</b> –	B+	B-	R+	R–
<b></b>	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/Black	Red/Black	Red	Black

	Other signals						
	14	17	9	8	5	6	
E	7b	1a	2b	6a	/	/	
	C+	C-	D+	D-	<b>T+</b> <sup>1)</sup>	<b>T</b> – <sup>1)</sup>	
<del></del>	Gray	Pink	Yellow	Violet	Green	Brown	

Cable shield connected to housing;

Up = Power supply; T = Temperature
Sensor: The sensor line is connected internally with the corresponding power line.
Vacant pins or wires must not be used.

<sup>&</sup>lt;sup>1)</sup> Only for cables inside the motor housing

# **HEIDENHAIN** measuring equipment

#### **PWM 20**

Together with the ATS adjusting and testing software, the PWM 20 phase angle measuring unit serves for diagnosis and adjustment of HEIDENHAIN encoders.



For more information, see the *PWM 20/ATS Software* Product Information document.

	PWM 20
Encoder input	<ul> <li>EnDat 2.1 or EnDat 2.2 (absolute value with or without incremental signals)</li> <li>DRIVE-CLiQ</li> <li>Fanuc Serial Interface</li> <li>Mitsubishi high speed interface</li> <li>Yaskawa Serial Interface</li> <li>Panasonic serial interface</li> <li>SSI</li> <li>1 V<sub>PP</sub>/TTL/11 μA<sub>PP</sub></li> <li>HTL (via signal adapter)</li> </ul>
Interface	USB 2.0
Voltage supply	AC 100 V to 240 V or DC 24 V
Dimensions	258 mm x 154 mm x 55 mm

	ATS
Languages	Choice between English and German
Functions	<ul> <li>Position display</li> <li>Connection dialog</li> <li>Diagnostics</li> <li>Mounting wizard for EBI/ECI/EQI, LIP 200, LIC 4000 and others</li> <li>Additional functions (if supported by the encoder)</li> <li>Memory contents</li> </ul>
System requirements and recommendations	PC (dual-core processor > 2 GHz) RAM > 2 GB Operating system: Windows XP, Vista, 7, 8, 10 (32-bit/64-bit) 200 MB free space on hard disk

 ${\sf DRIVE\text{-}CLiQ}\ is\ a\ registered\ trademark\ of\ SIEMENS\ AG.$ 

#### **PWT 100**

The PWT 100 is a testing device for checking the function and adjustment of incremental and absolute HEIDENHAIN encoders. Thanks to its compact dimensions and robust design, the PWT 100 is ideal for mobile use.



You can find more information in the Product Information *PWT 100*.

	PWT 100
Encoder input Only for HEIDENHAIN encoders	<ul> <li>EnDat</li> <li>Fanuc Serial Interface</li> <li>Mitsubishi High Speed Interface</li> <li>Panasonic Serial Interface</li> <li>Yaskawa Serial Interface</li> <li>1 V<sub>PP</sub></li> <li>11 μA<sub>PP</sub></li> <li>TTL</li> </ul>
Display	4.3" color flat-panel display (touch screen)
Voltage supply	DC 24 V Power consumption: max. 15 W
Operating temperature	0 °C to 40 °C
Protection EN 60 529	IP20
Dimensions	≈ 145 mm x 85 mm x 35 mm

## Test cable for connection to PWM 20/PWT 100

<b>AGK ERN 1387</b> Ø 4.5 mm PUR (with shield crimping Ø 6 mm); PCB connector (with shield strain relief, 14-pin/D-sub connector (male), 15-pin incl. three 14-pin adapter connectors	<u>&gt;</u>	2 m	2 x AWG 30/7	1118892-02
AGK ECI 11xx/ECI 13xx/EQI 11xx/EQI 13xx/ExN 11xx/ExN 13xx, Ø 4.5 mm EPG (with Ø 6 mm shield crimping; PCB connector with strain relief, 12-pin/D-sub connector (male), 15-pin incl. 3 adapter connectors, 12-pin and 3 adapter connectors, 15-pin		2 m	2 x AWG 30/7	621742-01

# **HEIDENHAIN**

**DR. JOHANNES HEIDENHAIN GmbH** Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany
2 +49 8669 31-0

+49 8669 32-5061 E-mail: info@heidenhain.de

www.heidenhain.de

This Product Information supersedes all previous editions, which thereby become invalid. The basis for ordering from HEIDENHAIN is always the Product Information document edition valid when the order is made.



#### For more information:

Comply with the requirements described in the following documents to ensure the correct operation of the encoder:

- Brochure: Position Encoders for Servo Drives
- Brochure: Rotary Encoders
- Brochure: Interfaces of HEIDENHAIN Encoders