# Pioneer sound.vision.soul

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

# **VSX-D711 VSX-D811S**

# **Operating Instructions**

XRB3013A.01.06



WARNING: THE APPARATUS IS NOT WATERPROOFS, TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE AND DO NOT PUT ANY WATER SOURCE NEAR THIS APPARATUS, SUCH AS VASE, FLOWERPOT, COSMETICS CONTAINER AND MEDICINE BOTTLE ETC.

#### [For Canadian model]

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SILES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

#### [For Canadian model]

This Class B digital apparatus complies with Canadian ICES-003.

#### [Pour le modèle Canadien]

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

If the socket outlets on the associated equipment are not suitable for the plug supplied with the product, the plug must be removed and an appropriate one fitted. Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel. The cut-off plug must be disposed of as an electrical shock hazard could exist if connected to a socket outlet.

#### [For U.S. model]



ENERGY STAR® and the ENERGY STAR certification mark are registered US marks.

#### CAUTION:

THE STANDBY/ON BUTTON IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER INSTANDBY POSITION. THEREFORE INSTALL THE UNIT SUITABLE PLACES EASY TO DISCONNECT THE MAINS PLUG IN CASE OF THE ACCIDENT. THE MAINS PLUG OF UNIT SHOULD BE UNPLUGGED FROM THE WALL SOCKET WHEN LEFT UNUSED FOR A LONG PERIOD OF TIME. HOTBER

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

#### IMPORTANT NOTICE

The serial number for this equipment is located in the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

H006AEn

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. ногова

#### Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

H011 En

#### CAUTION:

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.





XRB3013A.01.06 2 01.12.12, 4:40 PM



# **IMPORTANT**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

# CAUTION

CAUTION:
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT SAFETY INSTRUCTIONS \*\*\*\*

RETAIN INSTRUCTIONS — The safety and operating

RETAIN NISTRUCTIONS — The safety and operating instructions should be retained for future reference.

HEED WARNINGS — All warnings on the product and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS — All operating and use instructions should be followed.

CLEANING — Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry doth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

ATTACHMENTS — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

WATER AND MOISTURE — Do not use this product

WATER AND MOISTURE — Do not use this product near water — for example, near a batthul, wash bowd, kitchen sink, or loundry tub: in a wet basement; or near a swimming pool, and the like.

ACCESSORIES — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall causing serious injury to a child or adult, and serious damage to the product. Use my with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sad with the product. Any mounting of the product should follow the manufacturer in structions, and should use a mounting accessory recommended by the manufacturer.

manufacturer.

CART — A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



VENTILATION — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by pleaning the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

manufacturer's instructions have been adhered to POWER SOURCES — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

LOCATION — The appliance should be installed in a stable location.

stable location.

NONUSE PERIODS — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

- ROUNDING OR POLARIZATION
   If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug should still fall to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only if into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug, and the safety purpose of the grounding type plug.

   POWER-COOP PROT ECTION Proves-supply corts will be considered to the plug into the safety purpose of the grounding type plug.

   POWER-COOP PROT ECTION Proves-supply corts will be considered to the plug plug on the plug into the plug plug particular attention to cords at plugs, convenience receptacles, and the point where the purpose of the grounding the plug plug plug particular attention to cords at plugs, convenience receptacles, and the point where the product.

  OUTDOOR ANTENNA GROUNDING If an outside

- OUTDOOR ANTENNA GROUNDING If an outside JTDOOR ANTENNA GROUNDING — If an outside antenna or cale by system is connected to the product, be sure the antenna or cale by system is grounded to ast provide some protection against voltage surges and buil-up static charges. Article 81 0 of the National Electrical Code, ANSI/MFA 7.0, provides information with regard to proper grounding of the mest and supporting structure, grounding of the lead-in-wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

LIGHTNING — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug if from the wall outlet and disconnect the antenna or able system. This will prevent damage to the product due to lightning and power-line surges.

POWER LINES — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits, or when installing an outside antenna system, extreme care should be taken to keep from touching such power

OVERLOADING — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

OBJECT AND LIQUID ENTRY — Never push objects of

- as this can result in a risk of fire or electric shock.

  OBJECT AND LOUID ENTRY Never push objects of
  any kind into this product through openings as they
  may touch dangerous voltage points or short-out
  parts that could result in a fire or electric shock.
  Never spill liquid of any kind on the product.
  SERVICING Do not attempt to service this product
  vourself a sopening or removing covers may expose
  you to dangerous voltage or other hazards. Refer all
  servicing to qualified service personnel.

  DAMAGE REQUIRING SERVICE Unjugging his product
  from the wall outlet and refer servicing to qualified
  service personnel under the following conditions:
  When the power-supply cord or plug is damaged.
  I fliquid has been spilled, or objects have fallen into
  the product.
  If the product has been exposed to rain or water,
  If the product bas been exposed to rain or water,
  the product does not operate normally by following
  the operating instructions. Adjust only those controls
  that our explaint on the operating instructions and in
  damage and wall often require extensive work by a
  qualified technician to restore the product to its
  normal operation.

  If the product has been dronged or damaged in any.
- normal operation.


  If the product has been dropped or damaged in any
- When the product exhibits a distinct change in

When the product exhibits a distinct change in performance—this indicates a need for service.
 REPLACEMENT PARTS — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric

is in proper operating condition.

WALL OR CELING MOUNTING — The product should not be mounted to a wail or ceiling.

HEAT — The product should be situated away from heat sources such as radiators, hear registers, stoves, or other products (including ampiffiers) that produce heat.

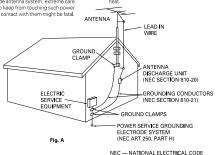

"Dolby", "Pro Logic II" and the double D symbol DD are trademarks of Dolby Laboratorories.

"DTS", "ES", and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.

Manufactured under license from Dolby Laboratories.

XRB3013A.01.06



# Contents

1 Before you start	
Checking what's in the box	6
Installing the receiver	6
Making cable connections	
Loading the batteries	
Operating range of remote control unit	6
2 5 minute guide	
Introduction to home theater	
Listening to Surround Sound	
Using the Quick Setup	12
3 Connecting up	
Audio/Video cords	. 13
S-video cables	
Component video cords	. 13
Digital audio coaxial cords/	
Optical cables	
Connecting digital components	
Connecting audio components	
Connecting DVD 5.1 channel components .	
Connecting video components	18
Connecting to the front panel	
video terminal	
Connecting antennas	
FM wire antenna	
AM loop antenna	. 19
Antenna snap connectors	. 19
Using external antennas	
To improve FM reception	
To improve AM reception	
Connecting the speakers (VSX-D711)	. 20
Connecting the speakers (VSX-D811S)	
A and B speaker systems	
Speaker terminals	
Hints on speaker placement	. 22
Connecting additional amplifiers (VSX-D811S only)	24
AC outlet	
Operating other Pioneer components	
operating other Florices components	. 20

4 Controls and displays	
Front panel	
Display	
Remote control	29
5 Playing sources	
Introduction to Sound Modes	
Stereo/Direct	
Standard mode	
Advanced Surround modes	
Choosing the input signal	34
Listening to multi-channel playback	. 34
Using Stereo/Direct	. პნ
Using Advanced Surround	35
Using Loudness and Midnight listening Using the tone controls	. JC 26
Playing other sources	36
Selecting the multi-channel analog inputs	
Scieding the matterialner analog inputs	. 07
6 Setting up your receiver	
Choosing your receiver setup	
Speaker setting	39
Surround back speaker	
setting (VSX-D811S only)	40
6.1 channel setting (VSX-D811S only)	
Subwoofer setting	
Crossover frequency setting	
LFE attenuator setting	
Front speaker distance setting	
Center speaker distance setting	41
Surround speaker distance setting	41
Surround speaker distance setting Surround back speaker distance	41 41
Surround speaker distance setting Surround back speaker distance setting (VSX-D811S only)	41 41 42
Surround speaker distance setting Surround back speaker distance setting (VSX-D811S only) Dynamic range control setting	41 41 42 . 42
Surround speaker distance setting Surround back speaker distance setting (VSX-D811S only)	41 42 42 42





XRB3013A.01.06 4 01.12.12, 4:41 PM



	of each channel	44
	7 Using the tuner	
	Listening to the radio	45
	Improving FM stereo sound	45
	Tuning directly to a station	
	Saving station presets	
	Naming station presets	
	Listening to station presets	4
	8 Making a recording	
	Making an audio or a video recording	48
	Monitoring your recording	
	9 Controlling the rest of your sys	sten
<b>L</b>	Setting the remote to control	
	other components	40
	Selecting preset codes directly	
	Searching for preset codes	
	Programming signals from other	
	remote controls (VSX-D811S only)	50
	Erasing one of the remote control	
	button settings (VSX-D811S only)	5
	Clearing all the remote control settings	
	Direct function	52
	Confirming preset codes	
	Controls for TVs	
	Controls for other components	
	Preset Code List	56
	10 Additional information	
	Troubleshooting	68
	Specifications	70

Setting the relative volume level





XRB3013A.01.06 01.12.12, 4:41 PM

# Before you start

# Checking what's in the box

Please check that you've received the following supplied accessories:

- · AM loop antenna
- FM wire antenna
- Dry cell batteries x 2 (AA size IEC R6P)
- · Remote control
- These operating instructions

# Installing the receiver


Please note the following points:

- Do not place objects directly on top of this unit. This prevents proper heat dispersal.
- When installing on a rack, shelf, etc., be sure to leave more than 8 inches (20 cm.) of space above the receiver.

# Making cable connections

Make sure not to bend the cables over the top of this unit (as shown in the illustration). If this happens, the magnetic field produced by the transformers in this unit may cause a humming noise from the speakers.

# Loading the batteries

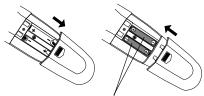

Dry cell batteries x 2 (AA size IEC R6P)



### Caution


Incorrect use of batteries may result in such hazards as leakage and bursting. Observe the following precautions:

- · Never use new and old batteries together.
- Insert the plus and minus sides of the batteries properly according to the marks in the battery case.
- Batteries with the same shape may have different voltages. Do not use different batteries together.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.

# Operating range of remote control unit

The remote control may not work properly if:

- There are obstacles between the remote control and the receiver's remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- The receiver is located near a device that is emitting infrared rays.
- The receiver is operated simultaneously with another infrared remote control unit.

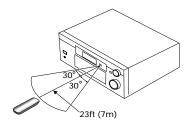

6

XRB3013A.01.06



# Introduction to home theater

You are probably used to using stereo equipment to listen to music, but may not be used to home theater systems that give you many more options (such as surround sound) when listening to soundtracks.

Home theater refers to the use of multiple audio tracks to create a surround sound effect, making you feel like you're in the middle of the action or concert. The surround sound you get from a home theater system depends not only on the speakers you have set up in your room, but also on the source and the sound settings of the receiver.

DVD-Video has become the basic source material for home theater due to its size, quality, and ease of use. Depending on the DVD, you can have up to seven different audio tracks coming from one disc, all of them being sent to different speakers in your system. This is what creates a surround sound effect and gives you the feeling of 'being there'.

This receiver will automatically decode Dolby Digital, DTS, or Dolby Surround DVD-Video discs, according to your speaker setup. In most cases, you won't have to make changes for realistic surround sound, but other possibilities (like listening to a CD with multi-channel surround sound) are explained in *Playing sources*, starting on page 32.



•

7

# 5 minute guide

# **Listening to Surround Sound**

This receiver was designed with the easiest possible setup in mind, so with the following quick setup guide, you should have your system hooked up for surround sound in no time at all. In most cases, you can simply leave the receiver in the default settings.


# 1 Hook up your DVD player.

For surround sound, you'll want to hook up using a digital connection from the DVD player to the receiver. You can do this with either a coaxial, or an optical connection (you don't need to do both). If you hook up using an optical cable, you should refer to *Optical digital input setting* on page 43 to assign the optical input to DVD.

Use a video cord to connect the video output on your DVD to the receiver using the jacks shown below.  $\,$ 

#### 2 Hook up your TV.

Use a video cord to connect your receiver to the TV using the jacks as shown below.

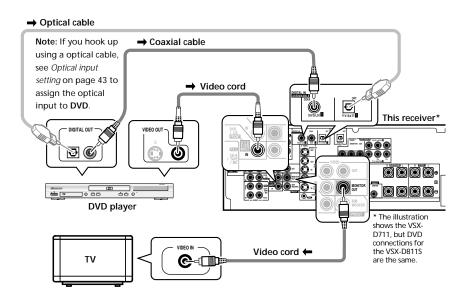



ΕΠ

XRB3013A.07.12




# 3 Connect your speakers.

A complete setup of speakers is shown here (six speakers (including the subwoofer) for the VSX-D711, and eight (also including the subwoofer) for the VSX-D811S), but everyone's home setup will vary. Simply connect the speakers you have in the manner shown below. The receiver will work with just two stereo speakers (the front speakers in the diagram) but using at least three speakers is recommended, and a complete setup is best.

Make sure you connect the speaker on the right to the right terminal and the speaker on the left to the left terminal. Also make sure the positive and negative (+/-) terminals on the receiver match those on the speakers.

# **Note**

- Use speakers with a nominal impedance of 8  $\Omega$  to 16  $\Omega.$
- If you're not using a subwoofer, change the front speaker setting (see *Speaker setting* on page 39) to large
- When using the speaker on your TV as the center speaker (C), connect the CENTER PREOUT
  jack on this unit to the audio input jack on your TV. In this case the center speaker shown is
  unnecessary.

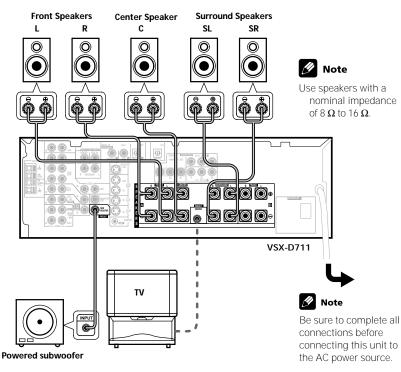


9

En

XRB3013A.07.12


# 02 (5 minute guide

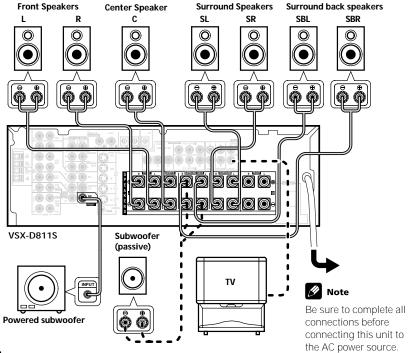



VSX-D811S only

- If you are using only one surround back speaker, connect the positive wire to the right channel (+) terminal, and the negative wire to the left channel (-) terminal (shown at right).
- If you select subwoofer (SB SUBWF) in the Surround back speaker setting (see page 40) you can hook up a subwoofer instead of speakers to the surround back speaker terminals. Connect the wires just as above (and as shown at right), connecting the positive wire to the right channel (+) terminal, and the negative wire to the left channel (-) terminal.

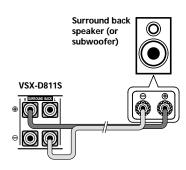

10

En

XRB3013A.07.12

# 4 Plug in the receiver and switch it on, followed by your DVD player, your subwoofer and

Make sure you've set the video input on your TV to this receiver. Check the manual that came with the TV if you don't know how to do this.

Also make sure that **DVD/LD** is showing in the receiver's display, indicating that the DVD input is selected. If it isn't, press DVD/LD on the remote control to set the receiver to the DVD input.

#### 5 Press QUICK SETUP on the front panel to specify your speaker setup and your room size.

Use the MULTI JOG/INPUT SELECTOR dial to select and ENTER to confirm your selection. See Using the Quick Setup on the next page if you're unsure about the settings.

#### 6 Play a DVD, and adjust the volume to your liking.

There are several other sound options you can select. See pages 32–33 for more on this. See also Choosing your receiver setup on page 38-43 for more setup options.




Depending on your DVD player or source discs, you may only get digital 2 channel stereo and analog sound. In this case, the listening mode must be set to Standard (it should already be set—see page 34 if you need to do this) if you want multi-channel surround sound.



# 5 minute guide

# **Using the Quick Setup**

You can use the Quick Setup to get your system up and running with just a few button presses. The receiver automatically makes the necessary settings after you have selected your speaker setup and room size. If you want to make more specific settings, refer to *Choosing your receiver setup* on pages 38–43. Use the front panel controls for the steps below.

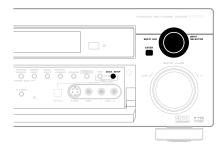

# 1 If the receiver is off, press $\circlearrowleft$ STANDBY/ ON to turn the power on.

The **STANDBY** indicator goes out.

### 2 Press QUICK SETUP.

The display prompts you to select your speaker setup.

# 3 Use the MULTI JOG/INPUT SELECTOR dial to choose your speaker setup.

Cycle between the following choices:

3.0ch — 3.1ch —	4.0ch
7.1ch*	4.1ch
1	1
7.0ch*	5.0ch
6.1ch* - 6.0ch* -	- 5.1ch

<sup>\*</sup> VSX-D811S only



Check the table below to find the speaker setup that corresponds with your system.

	Front Speakers		Surround Speakers		Sub Woofer
3.0 ch	√				
3.1 ch		1			√
4.0 ch	√		V		
4.1 ch			V		<b>√</b>
5.0 ch	$\sqrt{}$	<b>√</b>	√		
5.1 ch	√		V		
6.0 ch*				(1 speaker)	
6.1 ch*				(1 speaker)	
7.0 ch*	V	V	V	(2 speakers)	
7.1 ch*			V	(2 speakers)	

<sup>\*</sup> VSX-D811S only

# 4 Press ENTER.

The display prompts you to select your room size.

# 5 Use the the MULTI JOG/INPUT SELECTOR dial to choose your room size.

Depending on the distance of your speakers from the listening position, choose between Small, Medium, or Large (see table below).

	S	S M	
Front	12 ft.	12 ft.	12 ft.
Center	10 ft.	10 ft.	10 ft.
Surround	6 ft.	7 ft.	9 ft.
Surround Back*	3 ft.	5 ft.	7 ft.

<sup>\*</sup> VSX-D811S only

# 6 Press ENTER to confirm your setup.

The display shows the speaker setup and room size that you have selected.

12

En

XRB3013A.07.12


2

Before making or changing any connections, switch off the power and disconnect the power cord from the AC outlet.

#### Audio/Video cords

Use audio/video cords (not supplied) to connect the audio/video components and a video cord to connect the monitor TV.

Connect red plugs to  ${\bf R}$  (right), white plugs to  ${\bf L}$  (left), and the yellow plugs to  ${\bf VIDEO}$ . Be sure to insert completely.

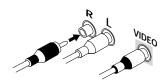


#### S-video cables

Use S-video cables (not supplied) to get clearer picture reproduction than regular video cords.


Connect from an S-video jack on the rear of the receiver to an S-video jack on the video component you are hooking up.

Be sure to insert completely.

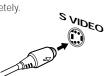

# Component video cords

Use component video cords to get the best possible color reproduction of your video source. The color signal of the TV is divided into the luminance (Y) signal and the color (PB and PR) signals and then output. In this way, interference between the signals is avoided. Connect from the component video jacks on the rear of the receiver to the component video jacks on the video component you are hooking up.

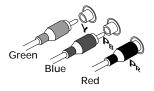

# Digital audio coaxial cords/ Optical cables

Commercially available digital audio coaxial cords (standard video cords can also be used) or optical cables (not supplied) are used to connect digital components to this receiver.

Be sure to insert completely.

Digital audio coaxial cord (or standard video cord)







13

Er

XRB3013A.13.25

# Connecting digital components

The easiest way to hook up this receiver for surround sound is to use a digital input. You can do this by either coaxial or optical connections (you do not need to do both). The quality of these two types of connections is the same but since some digital components only have one type of digital terminal, it is a matter of matching like with like (for example, the coaxial output from the component to coaxial input on the receiver). The VSX-D711 has three digital inputs on the rear panel (two coaxial inputs and a optical input) and the VSX-D811S has four (two coaxial inputs and two optical inputs). Connect your digital components to the rear panel as shown below. See page 18 to connect the front panel optical input on the VSX-D811S.


There is one digital output jack which is marked **DIGITAL OUT**. If you connect this to the optical input on a digital recorder (currently these include MD, DAT and CD-R) you can make direct digital recordings with this unit.

When connecting your equipment, always make sure the power is turned off and the power cord is disconnected from the AC outlet.




The arrows indicate the direction of the audio signal.



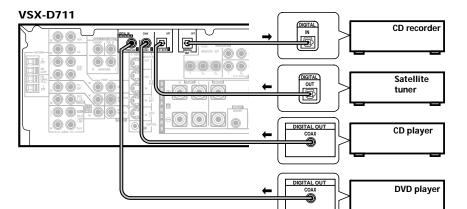

XRB3013A.13.25

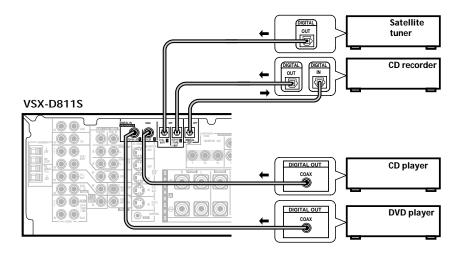





If you have an LD player, you need to make special connections to ensure you can play **DI** RF format LDs on your system. If this is the case, hook up your DVD or LD player directly to an RF demodulator using both the **DI** RF output and either a coaxial or optical digital connection. We also recommend hooking up your digital components to analog audio jacks as well. Make sure the RF demodulator digital in switch is set correctly (optical or coaxial depending on the connection). See the component's instruction manual if you are unsure about its input and output jacks.

15

En


# Connecting audio components

To begin set up, connect your analog audio components (such as a cassette deck) to the jacks. For components you want to record with, you need to hook up four plugs to the receiver (a set of stereo inputs and a set of stereo outputs), but for components that only play, you only need to hook up one set of stereo plugs. You must also hook up your digital components to analog audio jacks if you want to record to/from digital components (like an MD) to/from analog components. See page 14 for more on digital connections.

When connecting your equipment, always make sure the power is turned off and the power cord is disconnected from the AC outlet.



The arrows indicate the direction of the audio signal.

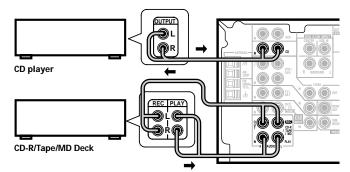





16

XRB3013A.13.25


# Connecting DVD 5.1 channel components


If you prefer to use a seperate component for decoding DVDs, you can connect a decoder or a DVD player with multi-channel analog outputs to the multi-channel inputs of this receiver.

When connecting your equipment, always make sure the power is turned off and the power cord is disconnected from the AC outlet.



The arrows indicate the direction of the signal.

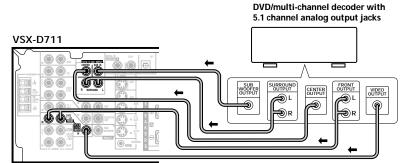

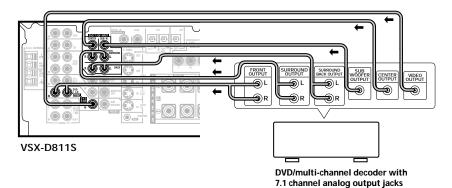

**Ø** Note

- The multi-channel input can only be used when DVD 5.1 CH (or DVD 7.1 CH) is selected (see page 37).
- If the component you are connecting (to the VSX-D811S) only has one surround back channel output, change the Surround back channel input setting (page 43) to SB 1ch IN.

17

XRB3013A.13.25




# **Connecting video components**

Connect your video components to the jacks as shown below. With digital video components (like a DVD player), you must use the connections shown on this page for the video signal, but in order to hear a digital source (like a DVD) you should hook up the audio to a digital input (see page 14). It is also a good idea to hook up your digital components with analog audio connections (see page 16).

For better quality video, you can hook up using the component video jacks or the S-video jacks (quality descends in this order) on the rear of the receiver instead of the regular video jacks. Make sure they are connected to the video component using the same kind of connection.


When connecting your equipment, always make sure the power is turned off and the power cord is disconnected from the AC outlet.



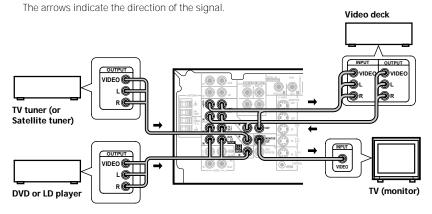

# Connecting to the front panel video terminal

Front video connections are accessed via the front panel input selector as **VIDEO**. There are standard audio/video jacks as well as an S-video jack (the VSX-D811S also has an optical input jack). Hook them up the same way you made the rear panel connections.

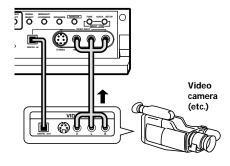


18

En

XRB3013A.13.25

# Connecting antennas

Connect the AM loop antenna and the FM wire antenna as shown below. To improve reception and sound quality, connect external antennas (see *Using external antennas* below). Always make sure that the receiver is switched off and unplugged from the wall outlet before making or changing any connections.

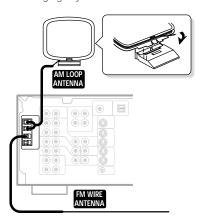


#### FM wire antenna

Connect the FM wire antenna and fully extend vertically along a window frame or other suitable area, etc.


# AM loop antenna

Assemble the antenna and connect to the receiver. Attach to a wall, etc. (if desired) and face in the direction that gives the best reception.

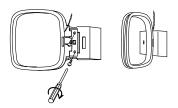

# Antenna snap connectors


Twist the exposed wire strands together and insert into the hole, then snap the connector shut.

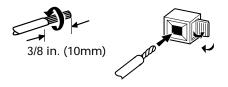

# Using external antennas

# To improve FM reception


Connect an external FM antenna.

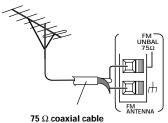

#### To improve AM reception

Connect a 15-18 feet length of vinyl-coated wire to the AM antenna terminal without disconnecting the supplied AM loop antenna.

For the best possible reception, suspend horizontally outdoors.

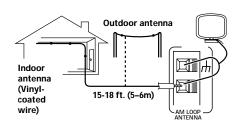

19

En


XRB3013A.13.25

19

# Connecting the speakers (VSX-D711)

A complete setup of six speakers (including the subwoofer) is shown below, but everyone's home setup will vary. Simply connect the speakers you have in the manner shown below. The receiver will work with just two stereo speakers (the front speakers in the diagram) but using at least three speakers is recommended, and a complete setup is best. If you're not using a subwoofer, change the front speaker setting (see *Speaker setting* on page 39) to large.

Make sure you connect the speaker on the right to the right terminal and the speaker on the left to the left terminal. Also make sure the positive and negative (+/-) terminals on the receiver match those on the speakers.

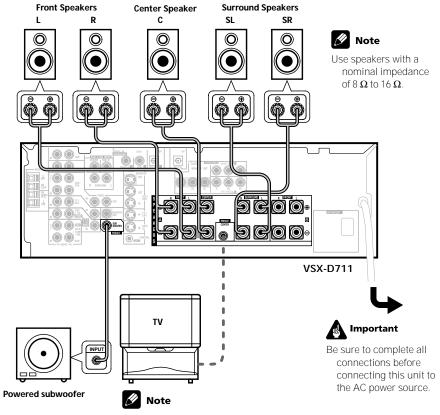

When using the speaker on your TV as the center speaker (C), connect the CENTER PREOUT jack on this unit to the audio input jack on your TV. In this case the center speaker shown is unnecessary.

20

XRB3013A.13.25

20


# Connecting the speakers (VSX-D811S)

A complete setup of eight speakers (including the subwoofer) is shown below, but everyone's home setup will vary. Simply connect the speakers you have in the manner shown below. The receiver will work with just two stereo speakers (the front speakers in the diagram) but using at least three speakers is recommended, and a complete setup is best for surround sound. If you're not using a subwoofer, change the front speaker setting (see *Speaker setting* on page 39) to large.

Make sure you connect the speaker on the right to the right terminal and the speaker on the left to the left terminal. Also make sure the positive and negative (+/-) terminals on the receiver match those on the speakers.



Use speakers with a nominal impedance of 8  $\Omega$  to 16  $\Omega.$ 

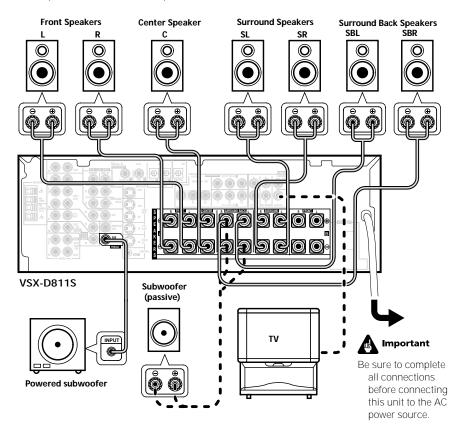

21

En

XRB3013A.13.25





- When using the speaker on your TV as the center speaker (C), connect the CENTER PREOUT jack on this unit to the audio input jack on your TV. In this case the center speaker shown is unnecessary.
- · If you are using only one surround back speaker, connect the positive wire to the right channel (+) terminal, and the negative wire to the left channel (-) terminal (see illustration on page 11).
- If you select subwoofer (SB SUBWF) in the Surround back speaker setting (see page 39) you can hook up a subwoofer instead of speakers to the surround back speaker terminals. Connect the positive wire to the right channel (+) terminal, and the negative wire to the left channel (-) terminal (see illustration on page 11).

# Speaker terminals

- Twist exposed wire strands together.
- Loosen speaker terminal and insert exposed wire. 2
- Tighten terminal.











Make sure that all the bare speaker wire is twisted together and inserted fully into the speaker terminal. If any of the bare speaker wire touches the back panel it may cause the power to cut off as a safety measure. Use good quality speaker wire to connect the speakers to the receiver.

# A and B speaker systems

The receiver has two speaker systems: A and B. A is the main system supporting the full speaker setup. If you switch on both A and B speaker systems, only the front speakers and the subwoofer will be audible. No sound will come from the center, surround, or surround back speakers, but multi-channel sources will be down-mixed to the active speakers so no sound will be lost. Similarly, if you choose just the B system you'll only hear the front speakers connected to the B system and multi channel sources will be down-mixed to these two speakers.

# Hints on speaker placement

Speakers are usually designed with a particular placement in mind. Some are designed to be floorstanding, while others should be placed on stands to sound their best. Some should be placed near a wall; others should be placed away from walls. We have provided a few tips on getting the best sound from your speakers (below), but you should also follow the guidelines on placement that the speaker manufacturer provided with your particular speakers to get the most out of them.

- · Place the front left and right speakers at equal distances from the TV.
- When placing speakers near the TV, we recommend using magnetically shielded speakers to prevent possible interference, such as discoloration of the picture when the TV is switched on. If you do not have magnetically shielded speakers and notice discoloration of the TV picture, move the speakers farther away from the TV.

22

XRB3013A.13.25



 Place the center speaker above or below the TV so that the sound of the center channel is localized at the TV screen.




#### Caution

If you choose to install the center speaker on top of the TV, be sure to secure it with putty, or by other suitable means, to reduce the risk of damage or injury resulting from the speaker falling from the TV in the event of external shocks such as earthquakes.

- If possible, place the surround speakers slightly above ear level.
- Try not to place the surround speakers further away from the listening position than the front and center speakers. Doing so can weaken the surround sound effect.
- To achieve the best possible surround sound, install your speakers as shown below. Be sure all speakers are installed securely to prevent accidents and improve sound quality.


# Overhead view of speaker set up (VSX-D711)

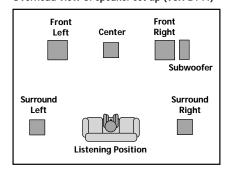

# 3-D view of speaker set up (VSX-D711)



# Overhead view of speaker set up (VSX-D811S)

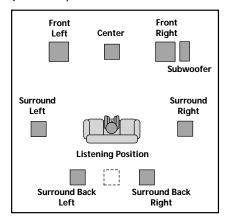

# 3-D view of speaker set up (VSX-D811S)



23

En


XRB3013A.13.25

# Connecting additional amplifiers (VSX-D811S only)

This receiver has more than sufficient power for any home use, however it is possible to add additional amplifiers to every channel. Make the connections shown below to add amplifiers to power your speakers. Always make sure that the receiver is switched off and unplugged from the wall outlet before making or changing any connections.



The arrows indicate the direction of the audio signal.

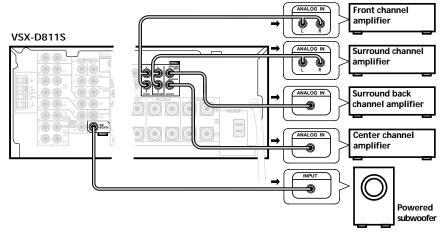



- To hear sound only from the pre-outs, disconnect any speakers that are connected directly to the receiver.
- If you're not using a subwoofer, change the front speaker setting (see *Speaker setting* on page 39) to large.

24

En



# **AC** outlet

#### [switched 100 W (0.8 A) max]


Power supplied through this outlet is turned on and off by the receiver's **POWER** switch. Total electrical power consumption of connected equipment should not exceed 100 W (0.8 A).



#### Caution

DO NOT CONNECT A MONITOR, TV SET, HEATER, OR SIMILAR APPLIANCE TO THIS UNIT'S AC OUTLET.

Do not connect appliances with high power consumption to the AC OUTLET in order to avoid overheating and fire risk. This can also cause the receiver to malfunction.

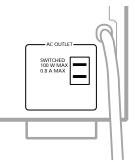



#### Note

- Make sure no exposed speaker wire is touching the rear panel, this may cause the receiver to turn off automatically.
- This unit should be disconnected by removing the power plug from the wall socket when not in regular use (ex. when on vacation).




# **POWER-CORD CAUTION**

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or an electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest Pioneer authorized service center or your dealer for a replacement.

# Operating other Pioneer components

By connecting a control cord (optional), you can point the remote controls of other Pioneer components at the receiver's remote sensor. The remote control signals are received by the remote sensor of this unit, and sent to the other devices via the **CONTROL OUT** terminal.

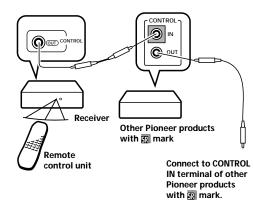


25

Fn

XRB3013A.13.25



# Front panel

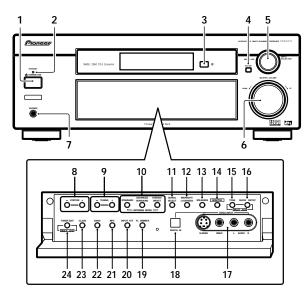

# 1 © STANDBY/ON

Switches the receiver between on and standby.

# 2 STANDBY indicator

Lights when the receiver is in standby.

# 3 Remote sensor

Receives the signals from the remote control.

#### 4 ENTER

# 5 MULTI JOG/INPUT SELECTOR dial The MULTI JOG/INPUT SELECTOR dial

performs a number of tasks. Use it to select options after pressing **TONE CONTROL**, **QUICK SETUP** or **TUNER EDIT**.

# 6 MASTER VOLUME

#### 7 PHONES jack

Use to connect headphones. When the headphones are connected, there is no sound output from the speakers.

# 8 STATION (+/-) buttons (pages 46–47) Selects station presets when using the tuner.

solotic station process when deling the tane

# 9 TUNING buttons (page 45)

Selects the frequency when using the tuner.

#### 10 LISTENING MODE buttons

# STANDARD (pages 32, 34)

Press for Standard decoding and to switch between the various Pro Logic II options.

#### ADVANCED SURROUND (pages 33, 35)

Use to switch between the various surround modes.

# STEREO/DIRECT (pages 32, 35)

Switches direct playback on or off. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

26

En

XRB3013A.26.31

26



# 12 MIDNIGHT/LOUDNESS (page 36)

Use Midnight when listening to movie soundtracks at low volume. Use Loudness to boost the bass and treble at low volume.

#### 13 SPEAKERS

Use to cycle through the speaker system:  $A \rightarrow B \rightarrow A+B$ 

#### 14 MONITOR

Press to switch tape monitoring on/off.

#### 15 TONE

Press this button to access the bass and treble controls, which you can then adjust with the

#### MULTI JOG/INPUT SELECTOR dial

### 16 QUICK SETUP

17 VIDEO INPUT (page 18)

# 18 DIGITAL IN (VSX-D811S only) (page 18)

#### 19 FL DIMMER

Use this button to make the fluorescent display (FL) dimmer or brighter.

#### 20 INPUT ATT

Use to attenuate (lower) the level of an analog input signal to prevent distortion.

#### 21 MPX (page 45)

Press to receive a radio broadcast in mono.

#### **22 BAND** (page 45)

Switches between AM and FM radio bands.

#### 23 CLASS (pages 46-47)


Switches between the three banks (classes) of station presets.

# **24 TUNER EDIT** (pages 46–47)

Press to memorize and name a station for recall using the STATION +/- buttons.



# Display

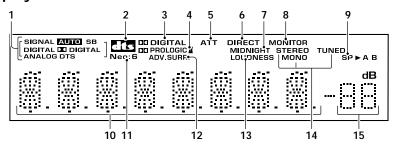

#### **SIGNAL SELECT indicators**

Lights to indicate the type of input signal assigned for the current component:

Lights when AUTO signal select is on

#### SB (VSX-D811S only)

Depending on the source, this lights when a signal with surround back channel encoding is detected.

# DIGITAL

Lights when a digital audio signal is detected.

XRB3013A.26.31



#### DI DIGITAL

Lights when a Dolby Digital signal is detected.

#### ANALOG

Lights when an analog signal is detected.

#### DTS

Lights when a source with DTS audio signals is detected.

#### 2 DTS

When the Standard mode of the receiver is on, this lights to indicate decoding of a DTS signal.

#### 3 DID DIGITAL

When the Standard mode of the receiver is on, this lights to indicate decoding of a Dolby Digital signal.

#### 4 DE PRO LOGIC II

When the Standard mode of the receiver is on, this lights to indicate Pro Logic II decoding.

#### 5 AT1

Lights when INPUT ATT is used to attenuate (reduce) the level of the analog input signal.

# 6 DIRECT

Lights when source direct playback is in use. This function bypasses all tone, balance, Advanced surround, and Dolby Surround effects.

#### 7 MIDNIGHT

Lights during Midnight listening.

# 8 MONITOR

Lights when MONITOR is selected (page 48).

# 9 Speaker indicator

Shows the speaker system currently in use.

# 10 Character display

#### 11 Neo:6 (VSX-D811S)

Lights during NEO:6 processing

#### 12 ADV. SURR (Advanced Surround)

Lights when one of the Advanced Surround modes has been selected.

#### 13 LOUDNESS

Lights when LOUDNESS has been selected.

#### 14 TUNER indicators

#### STEREO

Lights when a stereo FM broadcast is being received in auto stereo mode.

#### MONO:

Lights when the mono mode is set using the **MPX** button.

#### TUNED:

Lights when a broadcast is being received.

#### 15 Master volume level

Shows the overall volume level. --- dB indicates the minimum level, and -0 dB indicates the maximum level.

Depending on your level settings for each channel, the maximum level can range between –10 dB and –0 dB.

28


En







#### Remote control

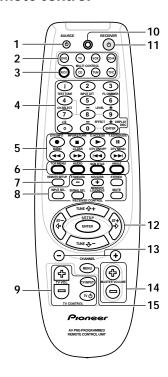

# 

Press to turn on/off other components connected to the receiver.

#### 2 MULTI CONTROL buttons

Press to select control of other components (see *Controlling the Rest of Your System* on pages 49–52).

### 3 RCV

Switches the remote to controls the receiver (used to select the features above the number buttons. (ex. **INPUT ATT, FL. DIMMER**). Also use this button to set up surround sound (pages 38, 44).

# 4 Number buttons/Receiver controls/ ENTER

Use the number buttons to directly select a radio frequency (page 45) or the tracks on a CD, DVD, etc.

#### DISPLAY/DISC (ENTER)

The button's use depends on the component selected. It can be used to switch the display between the station preset name and the frequency for the tuner, enter commands for TV or DTV, and can also be used to select a disc in a multi-CD player.

# **Receiver Controls**

Press the **RCV** button first to access the functions above the number buttons. The display flashes when it isn't possible to use a function.

# TEST TONE (page 44)

Sounds the test tone when setting up the surround sound of the receiver.

#### INPUT ATT

Attenuates (lowers) the level of an analog input signal to prevent distortion (when the overload indicator lights).

# FL DIMMER

Dims or brightens the display.

# CH SELECT (page 44)

Selects a speaker when setting up the surround sound of the receiver.

# **LEVEL +/-** (page 44)

Adjusts the levels of the surround sound of the receiver.

# EFFECT +/- buttons (page 35)

Adds or subtracts the amount of effect with different advanced listening modes (except 5 or 6 Ch Stereo and Virtual SB).

29

Fr



XRB3013A.26.31

# 5 Component/Tuner controls

The main buttons (**>**, **=**, etc.) are used to control a component after you have selected it using the **MULTI CONTROL** buttons. The tuner/ DTV controls above these buttons can be accessed after you have selected the corresponding **MULTI CONTROL** button (**TUNER** or **DVD** (when connected to DTV)).

#### DTV INFO

Use to bring up information screens on a digital TV.

#### MPX/RETURN (page 45)

Switches between stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality. Also acts as a stop button for CDs, tapes, or DVDs.

### D. ACCESS (page 49)

After pressing, you can access a radio station directly using the number buttons.

# T. EDIT/GUIDE (page 46-47)

Press to memorize and name a station for recall using the **STATION** +/- buttons. Also displays the guides on a digital TV.

#### BAND (page 45)

Switches between the tuner AM and FM bands.

#### **CLASS** (page 46-47)

Switches between the three banks (classes) of radio station presets.

# DTV ON/OFF

Switches a digital TV on/off.

# DTV MENU

Displays menus on a digital TV.

# 6 DVD controls (Press DVD first to access)

These controls will also function as DTV controls, depending on the component you've selected.

#### **TOP MENU**

Displays the disc 'top' menu of a DVD.

#### AUDIO

Changes the audio language or channel.

# SUBTITLE

Displays/changes the subtitles included in multilingual DVD-Video discs.

#### ANGLE

Switches camera angles on discs with multi-angle scenes.

#### 7 REMOTE SETUP (pages 49–52)

Press this button to set up the remote control to control other components.

#### RECEIVER CONTROL buttons

STANDARD (pages 32, 34)

Press to switch between the various Dolby/ DTS modes

### **ADV. SURR.** (pages 33, 35)

Use to switch between the various surround modes.

# STEREO (pages 32, 35)

Switches direct playback on or off. Direct playback bypasses the tone controls and channel levels for the most accurate reproduction of a source.

# INPUT SELECT

Use to select the input source.

# SIGNAL SELECT (pages 34, 37, 48)

Use to select between an input signal.

30

En

XRB3013A.26.31





# MIDNIGHT/LOUDNESS (page 36)

Switches to Midnight or Loudness listening.

#### MUTE

Mutes the sound (or restores the sound if it has been muted).

#### 9 TV control buttons

These buttons can only be used to control your TV

### TV VOLUME +/-

Use to adjust the volume on your TV.

#### **TV INPUT**

Use select the TV function.

#### TV C

Use to turn on/off the power of the TV.

# 10 LED DISPLAY

This display flashes when a command is sent from the remote control.

# 11 RECEIVER 🖰

This switches between standby and on for this receiver.

# 

Use the arrow buttons when setting up your surround sound system (see pages 38–43). Also used to control DVD menus/options and for deck 1 of a double cassette deck player. Use the **TUNE +/-** buttons to find radio frequencies and use **ST +/-** to find preset stations (page 45–47).

# 13 CHANNEL +/-

Select radio station presets. Also skip tracks backward or forward on CDs, DVDs, etc.

# 14 MASTER VOLUME +/-

Use to set the listening volume.

#### 15 MENU button

Displays the disc menu of DVD-Video discs. It also displays TV and DTV menus.

31

Εt

XRB3013A.26.31

1

# **Introduction to Sound Modes**

There are three basic sound options: Stereo/ Direct, Standard or Advanced Surround.

# Stereo/Direct

When you select **STEREO** or **DIRECT**, you will hear the source through just the front left and right speakers (and possibly your subwoofer depending on your speaker settings). Dolby Digital and DTS multichannel sources are downmixed to stereo.

In **STEREO**, you'll hear the audio with your surround settings and you can still use the Midnight, Loudness, and Tone control functions.

With **DIRECT**, you will bypass all effects and surround settings so that the audio remains as close to the source audio signal as possible.



If you switch on Midnight listening, Loudness, or the Tone controls when **DIRECT** is selected, the receiver automatically switches to **STEREO**.

# Standard mode

The standard mode can be used to decode Dolby Digital, DTS, or Dolby Surround sources. The other surround sound options (next column) can add multi-channel sound to regular stereo sources.

You can identify Dolby Digital software by the POPPE or DOLDY Surround software is marked DOLDY Surround software is marked DOLDY Surround. Depending on the source, the 6.1 channel setting (page 40), and the sound mode you have selected, you may not get sound from the surround back speakers in your setup. For more on this, refer to the table on the next page.

Choose one of the following to add depth to a 2 channel source:

#### Pro Logic

This mode gives 4.1 channel surround sound. It is less sensitive to the quality of the source material, so may be useful when Pro Logic II Movie/ Music modes don't give good results.

#### **Pro Logic II Movie**

This mode gives 5.1 channel surround sound. It is suitable for movies, especially those recorded in Dolby Surround. The channel separation and movement of surround effects is comparable to Dolby Digital 5.1.

### Pro Logic II Music

This mode gives 5.1 channel surround sound and is suitable for music. The surround effect is more enveloping than Pro Logic II Movie.

# Neo:6 Cinema (VSX-D811S only)

This mode gives 6.1 channel surround sound and is suitable for movies. The Neo:6 Cinema mode delivers good channel separation for movie soundtracks.

# Neo:6 Music (VSX-D811S only)

This mode gives 6.1 channel surround sound and is suitable for music. The Neo:6 Music mode plays the stereo source as is through the front left/right speakers, and generates a natural, ambient surround and center sound.

32

En

XRB3013A.32.37



#### **Advanced Surround modes**

These are designed to be used with multichannel surround sound audio/visual sources (like DVDs and LDs). Most Advanced Surround modes are designed to be used with film soundtracks, but some modes are also suited for music sources. Try different settings with various soundtracks to see which you like.



Depending on the source, the 6.1 channel setting (page 40), and the sound mode you have selected, you may not get sound from the surround back speakers in your setup. For more on this, refer to the table below.

#### Movie

Simulates the relaxed environment of a movie theater, and is suitable for watching movies.

# Music

Simulates the acoustic environment of a large concert hall and is suitable for music or musical sources.

# Virtual Surround Back (VIRTL SB)

The Virtual Surround Back effect simulates 7.1 surround channel listening, giving the impression that there are two surround back speakers in your system when listening to a 5.1 channel source.

#### Expanded

This mode is especially designed to give sound depth to stereo sources, and lets you hear two-channel (stereo) signals as simulated multi-channel surround sound. Use with Dolby Pro Logic for a stereo surround effect. You can also use with Dolby Digital sources for a wider stereo field than the Standard modes.

# 5-Channel Stereo (VSX-D711)

This can be selected to give multi-channel sound to a stereo source, using all of the speakers in your setup.

# 6-Channel Stereo (VSX-D811S)

This can be selected to give multi-channel sound to a stereo source, using all of the speakers in your setup.

Type of source	6.1 ch. setting	Standard	Advanced Movie/Music	Virtual SB	Expanded	6 Ch. Stereo
DTS-ES/Dolby Digital Matrix encoded multi-channel sources with 6.1 surround	Auto	√	√		√	
	Fix	V	V		V	<b>V</b>
Dolby Digital/DTS encoded multi-channel	Auto					
sources with stereo surround	Fix	√	V		<b>√</b>	
Dolby Digital/DTS encoded multi-channel	Auto					
sources with mono surround, Stereo sources	Fix		V			√
Analog 2-channel (stereo) source	Auto					
	Fix		V			<b>V</b>



- The checkmark ( $\sqrt{}$ ) indicates when sound will be output from the surround back speaker(s).
- See the 6.1 channel setting on page 40 to select between AUTO or FIX

33

En


XRB3013A.32.37 33





# Choosing the input signal

You need to hook up a component to both analog and digital inputs on the rear of the receiver to select between input signals.

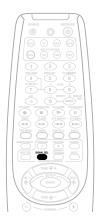

• Press **SIGNAL SEL** (**SIGNAL SELECT**) to select the input signal corresponding to the source component.

Each press switches between AUTO, DVD 5.1 ch/DVD 7.1ch, ANALOG and DIGITAL. The default is AUTO.

**DVD 5.1ch** (VSX-D711) and **DVD 7.1ch** (VSX-D811S) will only appear when **DVD/LD** is selected using the remote or the **MULTI JOG/INPUT SELECTOR** dial on the front panel.

When set to **DIGITAL**,  $\square$ DIGITAL lights when a Dolby Digital signal is input, and **DTS** lights when a DTS signal is input.



 This receiver can only play back Dolby Digital, PCM (32kHz, 44kHz, 48kHz, and 96 kHz) and DTS digital signal formats. With other digital signal formats, set to ANALOG.

- You may get digital noise when a LD or CD player compatible with DTS is playing an analog signal. To prevent noise, make the proper digital connections (page 14) and set the signal input to DIGITAL.
- Some DVD players don't output DTS signals. For more details, refer to the instruction manual supplied with your DVD player.

# Listening to multi-channel playback



- Switch on the playback component.
- 2 Select the source you want to playback. Use the MULTI CONTROL buttons on the remote (or MULTI JOG/INPUT SELECTOR dial on the front panel).

### 3 Press STANDARD.

If the source is Dolby Digital, DTS, or Dolby Surround encoded, the proper decoding format will automatically be selected and shows in the display.

34


En

XRB3013A.32.37





If you are listening to a two channel source, each press changes the display as follows:

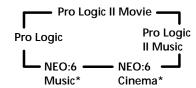

\* VSX-D811S only

Refer to page 32 for more details about each mode.

4 Start playback of the component you selected in step 1.

# Using Stereo/Direct

When you select **STEREO** or **DIRECT**, you will hear the source through just the front left and right speakers (and possibly your subwoofer depending on your speaker settings). Dolby Digital and DTS multichannel sources are downmixed to stereo. See page 32 for more on these modes.

• Press STEREO (STEREO/DIRECT on the front panel) repeatedly to switch between the two options.




If you switch on Midnight listening, Loudness, or the Tone controls when **DIRECT** is selected, the receiver automatically switches to **STEREO**.

# **Using Advanced Surround**

When you select one of the Advanced surround options, Dolby Pro Logic, Dolby Digital and DTS decoding is done automatically corresponding to the input signal. Use Advanced surround to add effects to the surround sound.

 Press ADV.SURR. (ADVANCED SUR-ROUND) repeatedly to cycle the sound options.

Each press changes the display as follows:

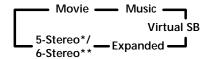

- \* VSX-D711
- \*\* VSX-D811S

Refer to page 33 for more details about each surround effect.



The Advanced surround effects can be adjusted in the range of 10 to 90 (the default setting is 70) by pressing **RCV** then pressing **EFFECT +/-**. The effect level can be set for each Advanced surround mode. The Standard mode cannot be changed.

-

35

01.12.12, 4:44 PM

XRB3013A.32.37

35


# Using Loudness and Midnight listening

The Loudness listening feature can be used to get good bass and treble from music sources at low volume levels.

The Midnight listening feature allows you to hear effective surround sound of movies at low volume levels. The effect automatically adjusts according to the volume at which you're listening.

#### Press MIDNIGHT/LOUDNESS.

Each press cycles through the effects as follows:

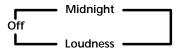

# Using the tone controls

Depending on what you are listening to, you may want to adjust the bass or treble using the front panel tone control.




1 Press TONE to select the frequency you want to adjust.

Each press switches between **BASS** and **TREBLE**.

2 Use the MULTI JOG/INPUT SELECTOR dial to change the amount of bass or treble as necessary.

Wait about five seconds for your changes to be input automatically.

# Playing other sources

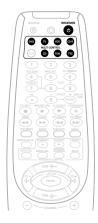

- 1 Turn on the power of the playback component.
- 2 Turn on the power of the receiver.
- 3 Select the source you want to playback. Use the MULTI CONTROL buttons on the remote (or MULTI JOG/INPUT SELECTOR dial on the front panel).
- 4 Start playback of the component you selected in step 1.

36

En

XRB3013A.32.37

**-**

01.12.12, 4:44 PM


**————** 



# Selecting the multi-channel analog inputs

If you have connected a decoder or a DVD player with multi-channel analog outputs to this receiver (page 17), you must select the analog multi-channel inputs for surround sound playback.

 When playback from the multi-channel inputs is selected, only the volume and channel levels can be set.

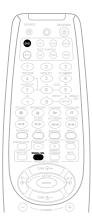

- 1 Press DVD or select it with the MULTI JOG/INPUT SELECTOR dial (front panel).
- 2 Press SIGNAL SEL (SIGNAL SELECT) repeatedly to select DVD 5.1ch/DVD 7.1ch. To cancel playback from the multi-channel inputs, use the SIGNAL SEL (SIGNAL SELECT) button to select a different input signal.



 When playback from the multi-channel inputs is selected, you can't use the INPUT ATT, TONE, and MIDNIGHT/LOUDNESS buttons, as well as the Standard, Advanced Surround, and Stereo/Direct sound modes.

37

Εı

XRB3013A.32.37 37

## Choosing your receiver setup

To ensure the best possible surround sound, be sure to complete the following set up operations. This is particularly important when using Dolby surround. You only need to make these settings once (unless you change the placement of your current speaker system or add new speakers, etc.). Refer to the following pages for details on each of the settings.



If you are using the Pioneer S-FCRW220 speaker system, you'll have to set the Crossover frequency to 200kHz. You can leave the Speaker setting and the Subwoofer setting in the default settings.



# 1 Press $^{\circlearrowleft}$ RECEIVER to turn the power on.

The **STANDBY** indicator goes out.

2 Press RCV.

# 3 Use $\Leftrightarrow$ or $\Rightarrow$ to choose the option you want to adjust.

It will be easiest to adjust each of the settings in turn, following the order below (and on the following pages). The current setting is shown for each option as you cycle through the display.

#### Speaker setting (page 39)

Specify the number and type of speakers you have connected.

# Surround back speaker setting (VSX-D811S only) (page 40)

Specify your surround back speaker/ surround back subwoofer setup.

# 6.1 channel setting (VSX-D811S only)

(page 40)

Set when 6.1 channel decoding is used.

**Subwoofer setting** (page 40) Specify how the subwoofer is used.

Crossover frequency setting (page 40) Determine which frequencies will be sent to the subwoofer (or large speakers).

#### **LFE attenuator setting** (page 41) Specify the peak level for the LFE channel.

**Front speaker distance setting** (page 41) Specify the distance from your listening position to your front speakers.

# **Center speaker distance setting** (page 41)

Specifies the distance from your listening position to your center speaker.

### Surround speaker distance setting (page

41)

Specify the distance from your listening position to your surround speakers.

# Surround back speaker distance setting (VSX-D811S only) (page 42)

Specifies the distance from your listening position to your surround back speakers.

38

En

XRB3013A.38.44



**Dynamic range control setting** (page 42) Compress the dynamic range of the sound track.

**Dual mono setting** (page 42) Isolate one channel when listening to discs with dual mono encoding.

# Component video input setting (page

Specify the components to be assigned to the component video inputs (below).

- · Component video 1 input setting
- · Component video 2 input setting

Surround back channel input setting (VSX-D811S only) (page 43) Specify the number of surround back inputs you have connected.

**Digital input settings** (page 43) Specify the components to be assigned to the video and digital inputs (below).

- · Coaxial digital input 1 setting
- · Coaxial digital input 2 setting
- · Optical digital input 1 setting
- Optical digital input 2 setting (VSX-D811S only)

### 4 Use $\hat{\ }$ or $\mathbb J$ to adjust the setting.

The setting is entered automatically.

# 5 Repeat steps 3 and 4 to set other surround modes.

6 When you're done, press ENTER to exit.



The setting display is automatically exited after 20 seconds of inactivity.

### Speaker setting

• Default setting: S (all speakers)


You must let the receiver know how many speakers you have, and how big they are. The size you choose (large or small) determines how much bass is sent from the receiver to the speakers.

In the display, **F**, **C**, and **S** refer to front, center, and surround speakers respectively. Speaker size is denoted as **L** for large speakers, **S** for small speakers, and **\*** (asterisk) if no speaker is connected.



- If the cone size (diameter) of the speaker is larger than 5 inches, set the speaker size to L.
- If you're not using a subwoofer, we recommend setting the front speakers to L.
- Cycle through the available choices using 介 or ℚ and choose a configuration that matches your speaker setup.

One of the following configurations should match your setup:

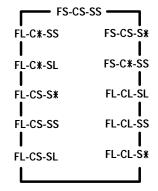

01.12.12, 4:46 PM

39

Fr







### Surround back speaker setting

(VSX-D811S only)

· Default setting: S

You must let the receiver know if surround back speaker(s) have been connected, and how big they are. The size you choose (large or small) determines how much bass is sent from the receiver to the speakers. If you have connected a surround back subwoofer, you should select the surround back subwoofer setting (SB SUBWF) from the options. Choose \*\* (asterisk) if no speaker is connected.

• Use  ${\scriptsize \upalpha}$  or  ${\scriptsize \upalpha}$  to select SB L, SB S, SB\* or SB SUBWF.

#### 6.1 channel setting

(VSX-D811S only)

Default setting: 6.1 FIX

You can have the receiver automatically switch to Dolby Digital or DTS-ES decoding for 6.1 encoded sources (6.1 AUTO), or you can choose to listen to other kinds of sources (for example, 5.1 encoded material) with 6.1 encoding (6.1 FIX). With 5.1 encoded sources, a surround back channel will be generated, but the material may sound better in the 5.1 format for which it was originally encoded.

• Use  $\ensuremath{\widehat{\upselect}}$  or  $\ensuremath{\mathbb{J}}$  to select 6.1 FIX or 6.1 AUTO.



- If you chose SB# in Surround back speaker setting (above), you can't set the 6.1 channel setting and \*\*\* shows in the display.
- Refer to the table on page 33 to see how the 6.1 channel setting affects sound output from the surround back speakers.

### Subwoofer setting

• Default setting: ON

You can choose whether the subwoofer is used or not. Use the plus (**PLS**) setting for extra bass.

• Use  ${\bf \hat{u}}$  or  ${\bf \mathbb{J}}$  to select subwoofer ON, PLS or OFF.



- If you chose the small front speaker setting, SUBWF ON is automatically set and locked.
- When you select the plus setting, you will get the bass sounds from the subwoofer even if the front speakers are set to L.


### **Crossover frequency setting**

• Default setting: 100 Hz

Crossover frequency is the point where the receiver divides the high and low sounds (the frequencies) between the speakers. Since most smaller speakers can't handle deep bass tones, you can send these sounds to the subwoofer (or if you don't have a subwoofer, the large (L) speakers in your system) instead of the speakers set to small (S) in your setup. Choose the point at which you want the frequency routed to the subwoofer (or L speakers).

We recommend setting this to 200 Hz if your **S** speakers are smaller bookshelf-type speakers.

• Use  $\hat{1}$  or  $\hat{1}$  to specify the crossover frequency for your small speakers (100 Hz, 150 Hz or 200 Hz).

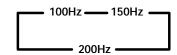

### 100 Hz

Sends bass frequencies below 100 Hz to the subwoofer (or **L** speakers).

40

En

XRB3013A.38.44

40

#### 150 Hz

Sends bass frequencies below 150 Hz to the subwoofer (or **L** speakers).

#### 200 Hz

Sends bass frequencies below 200 Hz to the subwoofer (or  $\bf L$  speakers).



If all speakers (front, center, and surround) are set to L, the crossover frequency can't be set because there are no S speakers (\*\*\* appears in the display).

### LFE attenuator setting

• Default setting: 0 dB

Dolby Digital and DTS audio sources include ultra-low bass tones. Set the LFE attenuator as necessary to prevent the ultra-low bass tones from distorting the sound from the speakers.

• Use  $\hat{1}$  or  $\mathbb{Q}$  to set the attenuation level (0 dB, 10 dB or **\*\*** dB( $\infty$ )).





When ∞ is selected ( **\*\*** appears in the display), LFE is not available.

### Front speaker distance setting

• Default setting: 10 ft.

Sets the distance from the front speakers to the listening position.

• Use  $\ \$  or  $\ \$  to set the distance of the front speakers from the main listening position (within a 30 foot range).

### Center speaker distance setting

· Default setting: 10 ft.

The center speaker is normally placed directly in the front of the listening room and closer to the listening position than the front speakers. This means that the sound from the center speaker will be heard before the front speakers. To prevent this, set the center speaker distance setting to delay the sound from the center speaker so that the sound from the front and center speakers will be heard at the same time.

• Use û or ↓ to set the distance of the center speaker from the main listening position (within a 30 foot range).



When **C**\* is selected in the speaker setting, the center speaker distance can't be set.

# Surround speaker distance setting

· Default setting: 10 ft.

Like the center speaker, you should set the distance of the surround speakers accurately to hear sounds coming from both front and surround speakers at the same time.

• Use  ${\hat{\gamma}}$  or  ${\mathbb Q}$  to set the distance of the surround speakers from the main listening position (within a 30 foot range).



When **S**\* is selected in the speaker setting, the surround speaker distance can't be set.

41

Er



# Surround back speaker distance setting

(VSX-D811S only)

· Default setting: 10 ft.

Like the center speaker, you should set the distance of the surround speakers accurately to hear sounds coming from both front and surround speakers at the same time.

• Use  $\hat{\gamma}$  or  $\mathbb{Q}$  to set the distance of the surround speakers from the main listening position (within a 30 foot range).



When **SB**\* is selected in the surround speaker setting, the surround back speaker distance can't be set.

### Dynamic range control setting

Default setting: OFF

Dynamic range is the difference between the loudest and softest sounds in any given signal. With this setting, you can compress the dynamic range, so that low level sounds can be heard more easily (sounding relatively louder) yet louder sounds won't be too overbearing.

• Press  ${\bf \hat{1}}$  or  ${\bf \mathbb{Q}}$  to set the dynamic range control (OFF, MAX, or MID).

### **Note**

- When the volume level is increased, set to OFF
- When listening at low volumes, set to MAX for maximum dynamic range compression.
- Dynamic range control is effective only when a Dolby Digital signal is being played back.


### **Dual mono setting**

· Default setting: ch1

The dual mono setting can only be used when listening to Dolby Digital discs with dual mono encoding. These discs are not widely used, but are sometimes used when it is necessary to have one language on one channel and a different language on the other. With this setting you can choose which channel in the dual mono setting you want to listen to.

If Dolby Digital mode is switched on, you will hear the channel you have selected (either **ch1** or **ch2**) through your center speaker. With Dolby Digital mode off, or if you don't have a center speaker, you will hear the channel you have selected through both front speakers. In the **L ch1. R ch2** setting, the left front speaker will play channel 1 and the right front speaker will play channel 2.

• Use  ${}^{\uparrow}$  or  ${}^{\downarrow}$  to cycle through the possible dual mono settings.

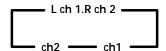

### Component video input settings

Here you tell the receiver what components you have hooked up to the component video jacks on the back of the receiver.

### Component video 1:

- Default settings: DVD
- 1 Use  $\widehat{\ \ }$  or  $\mathbb J$  to assign the component video 1 input (DVD, TV, VCR or OFF).

#### Component video 2:

- · Default setting: TV
- 2 Use  $\hat{1}$  or  $\mathbb{J}$  to assign the component video 2 input (DVD, TV, VCR or OFF).

42

En

XRB3013A.38.44

42

# Surround back channel input setting

(VSX-D811S only)

• Default setting: SB 2ch IN

You only have to make this setting if you are using a seperate component for decoding DVDs, and the component has only one surround back channel output. If this is the case, select **SB 1ch IN**, otherwise leave it set to **SB 2ch IN**.

• Use  ${\bf \hat{1}}$  or  ${\bf \mathbb{J}}$  to select SB 2ch IN or SB 1ch IN.

### Coaxial digital input settings

Here you tell the receiver what components you have hooked up to the coaxial **DIGITAL IN** jacks 1 and 2 on the back of the receiver.

### Coaxial digital 1:

- Default settings: DVD/LD
- 1 Use  $\hat{1}$  or  $\mathbb{Q}$  to assign the coaxial digital 1 input (DVD, TV, CD, CD-R, VCR or OFF).

### Coaxial digital 2:

- Default setting: CD
- 2 Use 介 or ♣ to assign the coaxial digital 2 input (DVD, TV, CD, CD-R, VCR or OFF).

  After you assign a component to a digital jack, whenever you select that component, (for example, a DVD player) the receiver automatically changes to the digital input

setting and DIGITAL shows in the display.

Optical digital input settings

Here you tell the receiver what components you have hooked up to the optical **DIGITAL IN** jack(s) on the back of the receiver.

#### Optical digital 1:

- Default settings: TV/SAT
- 1 Use  $\hat{1}$  or  $\mathbb{I}$  to assign the optical digital 1 input (DVD, TV, CD, CD-R, VCR or OFF).

#### Optical digital 2

(VSX-D811S only):

- Default setting: CDR/TAPE/MD
- 2 Use  ${\bf \hat{1}}$  or  ${\bf \hat{\downarrow}}$  to assign the optical digital 2 input (DVD, TV, CD, CD-R, VCR or OFF).

After you assign a component to a digital jack, whenever you select that component, (for example, a DVD player) the receiver automatically changes to the digital input setting and **DIGITAL** shows in the display.





43

01.12.12, 4:46 PM

XRB3013A.38.44

43

### Setting the relative volume level of each channel


· Default setting: 0db

For best surround sound playback, you should set the relative channel levels from the main listening position. You can set seperate levels for each surround mode.

#### Press RCV. 1

#### Press TEST TONE to output the test tone.

The test tone is output in the following order (depending on the speaker setting):

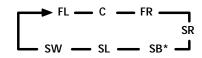

\* VSX-D811S only



Mote

If you don't hear a test tone from one of your speakers, please refer to Speaker setting on page 39 to make sure you have correctly specified your speaker setup.

### 3 Press MASTER VOLUME +/- to adjust the volume to an appropriate level.

#### Use LEVEL +/- to adjust the speaker levels in turn.

You should hear the test tone at the same volume from each speaker when seated in the main listening position. The channel level range is  $\pm$  10 dB.

#### When you're done, press TEST TONE to turn off the test tone.



The speaker volume can be adjusted without outputting the test tone by pressing CH SELECT and then using LEVEL +/-

XRB3013A.38.44







- · Test tone is only output in Standard modes.
- · Since the subwoofer transmits an ultralow frequency its sound may seem quieter than it actually is.



### Using the tuner

### Listening to the radio

The following steps show you how to tune in to FM and AM radio broadcasts using the automatic (search) and manual (step) tuning functions. If you already know the frequency of the station you want, see *Tuning directly to a station* below. Once you are tuned to a station you can memorize the frequency for recall later—see *Saving station presets* on the next page for more on how to do this.



1 Press the TUN button on the remote control to select the tuner.

You can also use the **MULTI JOG/INPUT SELECTOR** dial on the front panel.

2 Use the BAND button to change the band (FM or AM), if necessary.

Each press switches the band between FM and AM.

3 Tune to a station.

XRB3013A.45.48

There are three ways to do this:

### Automatic tuning

To search for stations in the currently selected band, press and hold **TUNE +/-**

for about a second. The receiver will start searching for the next station, stopping when it has found one. Repeat to search for other stations.

#### Manual tuning

To change the frequency one step at a time, press **TUNE** +/-.

### High speed tuning

Press and hold **TUNE +/-** for high speed tuning. Release the button at the frequency you want.

### Improving FM stereo sound

If the **TUNED** or **STEREO** indicators don't light when tuning to an FM station because the signal is weak, press the **MPX(/RETURN)** button to switch the receiver into mono reception mode. This should improve the sound quality and allow you to enjoy the broadcast.

### Tuning directly to a station

Sometimes, you'll already know the frequency of the station you want to listen to. In this case, you can simply enter the frequency directly using the number buttons on the remote control.

1 Press the TUN button on the remote control to select the tuner.

You can also use the **MULTI JOG/INPUT SELECTOR** dial on the front panel.

2 Use the BAND button to change the band (FM or AM), if necessary.


Each press switches the band between FM and AM.

- 3 Press D.ACCESS (Direct Access).
- 4 Use the number buttons to enter the frequency of the radio station.

For example, to tune to 106.00 (FM), press 1, 0, 6, 0, 0.

01.12.12, 4:48 PM

En








### Using the tuner

FM 106.00


If you make a mistake halfway through, press **D.ACCESS** twice to cancel the frequency and start over.

### Saving station presets

If you often listen to a particular radio station, it's convenient to have the receiver store the frequency for easy recall whenever you want to listen to that station. This saves the effort of manually tuning in each time. This unit can memorize up to 30 stations, stored in three banks, or classes, (A, B and C) of 10 stations each. When saving an FM frequency, the MPX setting (see previous page) is also stored. Use the front panel controls to store station presets.

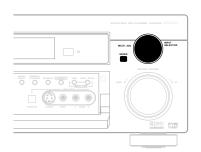



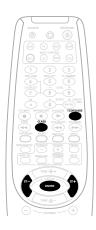


# 1 Tune to a station you want to memorize.

See *Listening to the radio* (previous page) for more on this.

### 2 Press T.EDIT (TUNER EDIT).

The display shows **ST. MEMORY**, then a blinking memory class.

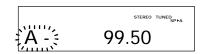

3 Press CLASS to select one of the three classes then press ST +/- (STATION +/-) to select the station preset you want.

You can also use the the **MULTI JOG/INPUT SELECTOR** dial (front panel) to select a station preset.

### 4 Press ENTER.

After pressing **ENTER**, the preset class and number stop blinking and the receiver stores the station.

46

En

XRB3013A.45.48

46

### Using the tuner

### Naming station presets

For easier identification, you can name your station presets.

# 1 Choose the station preset you want to name.

See *Listening to station presets* (this page) for how to do this.

#### 2 Press T.EDIT (TUNER EDIT).

The display shows **ST. NAME**, then a blinking cursor at the first character position.

#### 3 Input the name you want.

Names can be up to four characters long.

- Use the MULTI JOG/INPUT SELECTOR dial (front panel) or the ST +/- buttons (remote) to select characters.
- Press **ENTER** to confirm a character. If no character is input, a space is input.
- The name is stored when ENTER is pressed after choosing the fourth character.



To erase a station name, simply repeat steps 1-3 and input four spaces instead of a name.



Once you have named a station preset, you can press **DISPLAY** when listening to a station to switch the display between the name and the frequency.

## Listening to station presets

Having stored up to 30 stations (see previous page), preset stations can be easily recalled.

- 1 Press TUN (remote) or use the MULTI JOG/INPUT SELECTOR dial on the front panel to select the tuner.
- 2 Press CLASS to select the class in which the station is stored.

Press repeatedly to cycle through classes A, B and C.

3 Press ST +/- (STATION +/-) to select the station preset you want.



 If the receiver is left disconnected from the AC power outlet for an extended period, the station memories will be lost and will have to be reprogrammed.



### **Making Recordings**

# Making an audio or a video recording

You can make an audio or a video recording from the built-in tuner, or from an audio or video source connected to the receiver (such as a CD player or TV).

Keep in mind you can't make a digital recording from an analog source or vice-versa, so make sure the components you are recording to/from are hooked up in the same way (see pages 13–19 for more on connections).

If you want to record a video source, you also need use the same type of connection for the source as for the recorder. For example, you can't record a component hooked up to S-video jacks with a recorder hooked up to the component video outputs (see page 18 for more on video connections).



The receiver's volume, balance, tone (bass, treble, loudness), and surround effects have no effect on the recorded signal.

- 1 Select the source you want to record. Use the MULTI CONTROL buttons on the remote (or MULTI JOG/INPUT SELECTOR dial on the front panel).
- 2 Select the input signal (if necessary). Press SIGNAL SEL (SIGNAL SELECT) to select the input signal corresponding to the source component (see page 34 for more on this).
- **3** Prepare the source you want to record. Tune to the radio station, load the CD, video, DVD etc.


### 4 Prepare the recorder.

Insert a blank tape, MD, video etc. into the recording device and set the recording levels.

Refer to the instructions that came with the recorder if you are unsure how to do this. Most video recorders set the audio recording level

automatically—check the component's instruction manual if you're unsure.

5 Start recording, then start playback of the source component.

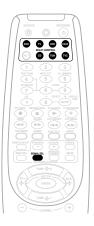



## Monitoring your recording

You can listen to (monitor) the recording as it's being made using the **MONITOR** button on the front panel (a cassette deck would have to have a record monitor function).

 Press the MONITOR button to switch between the recorded signal and the original source signal.

48

En

XRB3013A.45.48



## Setting the remote to control other components

There are several ways to set your remote to control the other components in your system. The easiest way to do this is to assign the component's manufacturer preset code (listed on pages 56-67) to one of the MULTI CONTROL buttons on the remote control.

The buttons can be set to control the following components:

Button	Controllable Components
DVD:	DVD or LD player
TV:	TV or Satellite tuner
VCR:	VCR or Digital Video Recorder
CD:	CD player
CD-R:	CD Recorder, Tape deck
	or MD player
TVC:	TV or Cable TV tuner
TUN:	FM/AM tuner


You can do this directly, or by searching through different preset codes until you find the right one. If you can't find a preset code that matches the component you want to control, you can still teach the remote individual commands from another remote control (page



You can cancel or exit any of the steps by pressing and holding MUTE for three seconds.

# Selecting preset codes directly



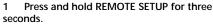

The LED lights steadily for two seconds.

- Press the MULTI CONTROL button for the component you want to control.
- Use the number buttons to enter the 4 digit preset code (see pages 56-67)

The LED blinks for half a second after you input each digit and shows a long, two second blink once you have entered a valid code. If the LED blinks three times it means an invalid code has been input or an error has occurred.



- If you assign a preset code for the TUNER button, you won't be able to control the built-in tuner of this receiver using the remote. Reset the remote to the built-in tuner by entering the preset code 7008.
- Repeat steps 1 through 3 for the other components you want to control.



## Searching for preset codes

Another way of entering preset codes is to use the search feature. The remote transmits batches of 10 codes; when you see the component you want to control respond (by turning on or off), you just scan through the last 10 codes until you find the right one.



# 1 Switch on the component you want to control.

If the component is some kind of player (CD player, VCR, etc.), start it playing.

# 2 Press and hold REMOTE SETUP for three seconds.

The LED lights steadily for two seconds.

# 3 Press the MULTI CONTROL button for the component you want to control.

# 4 Press and hold REMOTE SETUP for three seconds.

A batch of 10 codes is transmitted and the LED blinks during transmission. If the component responds, by stopping or switching off, go to the next step, otherwise repeat this step.

# 5 Switch the component back on or restart playback.

# 6 Use ↑ and ↓ to scan through the last 10 codes transmitted to identify the correct code.

Stop when you see the component stop or switch off. The LCD display on the remote shows the I.D.

You can also verify you have the correct code by adjusting the volume, pressing  $\triangleright$ ,  $\blacksquare$ , etc.

7 Press and hold ENTER for three seconds to save the preset code.

# Programming signals from other remote controls

(VSX-D811S only)

If the preset code for your component is not available, or the available preset codes do not operate correctly, you can program signals from the remote control of another component. This can also be used to program additional operations (buttons not covered in the presets) after assigning a preset code.

# 1 Press REMOTE SETUP and hold for three seconds.

The LED lights steadily for two seconds.

# 2 Press the MULTI CONTROL button for the component you want to control.

# 3 Prepare the remote to learn the remote control signal from the component.

Press and hold the RECEIVER button for two seconds.

The LED lights steadily to indicate the remote is ready accept a signal.



To exit or cancel press and hold the **REMOTE SETUP** key for three seconds.

50


En

XRB3013A.49.67

50

4 Point the two remote controls towards each other about 1-2 inches apart then press the button that will be doing the learning on this receiver's remote control (for example ▶, ■, etc.).

The LED flashes rapidly.

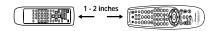

5 Press the corresponding button on the other remote control that is sending (teaching) the signal to this receiver's remote control (for example ▶, ■, etc.).

If the operation has been learned successfully, the LED on this receiver's remote will go out and then light steadily.

If for some reason the operation hasn't been learned the LED will blink for three seconds and then light steadily. If this happens, keep pressing the (teaching) button as you vary the distance between the two remotes, until you see the the LED light steadily.

To program additional operations for the current component repeat steps 4 and 5.

To program operations for another component exit and repeat steps 1 through 5.

6 Press and hold the REMOTE SETUP button for three seconds to store the operation(s).



- Some commands from other remote controls cannot be learned, but in most cases the remotes just need to be moved closer together or farther apart.
- Certain buttons represent operations that cannot be learned from other remote controls. These include: RECEIVER O, REMOTE SETUP and the MULTI CONTROL, RECEIVER CONTROL and MASTER VOLUME buttons.

 TV CONTROL buttons (TV , TV VOL +/-, and TV INPUT) can only be learned after selecting TV or TVC.

# Erasing one of the remote control button settings

(VSX-D811S only)

This erases one of the buttons you have programmed and restores the button to the factory default.

1 Press REMOTE SETUP and hold for three seconds.

The LED lights steadily for two seconds.

- 2 Press the MULTI CONTROL button relating to the button setting to be erased.
- 3 Prepare the remote to erase the button setting.

Press the **RECEIVER** b button twice quickly. The LED blinks to indicate the remote is ready to erase the button setting.

4 Press and hold the button to be erased for three seconds.

The LED lights steadily for three seconds and then goes off.

- 5 Repeat step 4 to erase other buttons.
- 6 Press and hold the REMOTE SETUP button for two seconds to exit.

# Clearing all the remote control settings

You can clear all presets and restore the factory default settings.

1 Press REMOTE SETUP and hold for three seconds.

01.12.12, 4:49 PM

The LED lights steadily for two seconds.

51

Er





# 2 Press any MULTI CONTROL button then use the number buttons to enter 0123.

The LED lights for two seconds to indicate that the settings have been restored to the factory presets. (If the LED blinks three times, then you made a mistake with the code—try re-entering it.)

### **Direct function**

· Default setting: ON

You can use the direct function feature to control one component using the remote control while at the same time, using your receiver to playback a different component. This could let you, for example, use the remote control to set up and listen to a CD on the receiver and then use the remote control to rewind a tape in your VCR while you continue to listen to your CD player.

When direct function is on, any component you select (using the **MULTI CONTROL** buttons) will be selected by both the receiver and the remote control. When you turn direct function off, you can operate the remote control without affecting the receiver.

# 1 Press REMOTE SETUP and hold for three seconds.

The LED lights steadily for two seconds.

- 2 Press the MULTI CONTROL button for the component you want to control.
- 3 Use the number buttons to enter either 9990 (direct on) or 9995 (direct off).

The LED will light for two seconds to indicate that it's been correctly set. (If the LED blinks three times, then there was a mistake with the code—repeat steps 1-4.)



You can't use direct function for TV INPUT.

52

XRB3013A.49.67

### 01.12.12, 4:49 PM

# **Confirming preset codes**

Use this feature to check which preset code is assigned to a **MULTI CONTROL** button.

# 1 Press REMOTE SETUP and hold for three seconds.

The LED lights steadily for two seconds.

- 2 Press the MULTI CONTROL button of the component for which you want to check the preset code.
- 3 Press and hold ENTER for two seconds. Each preset code consists of four digits, for example 1329. Each digit will be represented by a series of blinks on the remote's LED—3 blinks to represent the digit "3", etc. ("0" is represented by 10 blinks)





### **Controls for TVs**

This remote control can control components after entering the proper codes or teaching the receiver the commands (see pages 56–67). Use the **MULTI CONTROL** buttons to select the component.

TV 🖰	Switches the DTV on or off.	DTV
	Switches the TV or CATV between standby and on.	Cable TV/Satellite TV/TV
TV INPUT	Switches the TV input. (Not possible with all models.)	TV
CHANNEL +/-	Selects channels.	Cable TV/Satellite TV/TV/ DTV
TV VOL +/-	Adjust the TV volume.	Cable TV/Satellite TV/TV/ DTV
SOURCE ()	Press to switch the component assigned to the <b>TVC</b> button on or off.	DTV
<b>44</b>	Switches DTV on or off.	DTV
<b>▶▶</b>	Press to display the DTV menu.	DTV
II	Use as the <b>GUIDE</b> button for navigating	DTV
•	Press to get information on DTV programs.	DTV
TOP MENU	Use to choose the BLUE commands on a DTV menu.	DTV
AUDIO	Use to choose the GREEN commands on a DTV menu.	DTV
SUB TITLE	Use to choose the RED commands on a DTV menu.	DTV
ANGLE	Use to choose the YELLOW commands on a DTV menu.	DTV
<b>&gt;&gt;</b>	Selects between screen formats for widescreen TVs.	TV
44	Use to clear a TV channel selected using the number buttons.	Cable TV/TV
<b>&gt;</b>	Use to switch DTV audio tracks	DTV
	Use to select closed captioning with DTV.	DTV
Number Buttons	Use to select a specific TV channel.	Cable TV/Satellite TV/TV/ DTV
+10 button	Use to add a decimal point when selecting a specific TV channel.	DTV
ENTER/ DISPLAY/ DISC	Use to enter a channel.	Cable TV/Satellite TV/TV

53

Εt





Button (s)	Function	Components
MENU	Select different menus from the DTV functions.	DTV
	Select the menu screen.	Cable TV/Satellite TV/TV
⇔ĵ↓ & ENTER	Select or adjust and navigate items on the menu screen. <b>ENTER</b> brings up the DTV menus.	DTV
	Press to select or adjust and navigate items on the menu screen.	Cable TV/Satellite TV/TV/
EFFECT +/-	For TV and cable TV use this button to immediately enter a new channel (CHANNEL ENTER function). For satellite TV use this button to exit the menu screen.	Cable TV/Satellite TV/TV/ DTV



The four **TV CONTROL** buttons on the remote control are dedicated to control the TV assigned to the **TVC** button. Thus if you only have one TV to hook up to this system assign it to the **TVC MULTI CONTROL** button. If you have two TVs, assign the main TV to the **TVC** button.

# **Controls for other components**

This remote control can control these components after entering the proper codes or teaching the receiver the commands (see pages 56–67). Use the **MULTI CONTROL** buttons to select the component.

Button (s) SOURCE ()	Function  Press to switch the component between standby and on.	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
<b>44</b>	Press to return to the start of the current track. Repeated presses skips to the start of previous tracks.	CD/MD/CD-R/DVD/LD player
	Go back channels (channel –).	VCR/DVR
	Play the reverse side of the tape on a reversible deck.	Cassette deck
<b>&gt;&gt;</b>	Press to advance to the start of the next track. Repeated presses skips to the start of following tracks.	CD/MD/CD-R/LD player
	Go forward channels (channel +).	VCR
	Play the forward side of the tape on a reversible deck.	Cassette deck
II	Pause playback or recording.	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
<b>•</b>	Start playback.	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
	-	-

54

En

XRB3013A.49.67



01.12.12, 5:24 PM

<b>&gt;&gt;</b>	Hold down for fast forward playback.	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
44	Hold down for fast reverse playback.	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
	Stops playback (on some models, pressing this when the disc is already stopped will cause the disc tray to open).	CD/MD/CD-R/VCR/DVD/LD/ DVR player/Cassette deck
•	Starts recording. To prevent accidental recording, this button must be pressed twice to take effect (the second press must be within 10 seconds of the first).	VCR/DVR player
Number	Directly access tracks on a program source.	CD/MD/CD-R/VCR/LD player
buttons	Use the number buttons to navigate the on-screen display.	DVD/DVR player
+10 button	Selects tracks higher than 10. (For example, press +10 then 3 to select track 13.)	CD/MD/CD-R/VCR/LD player
ENTER	Chooses the disc.	Multiple CD player
(DISPLAY/	Ejects the disc.	MD player
DISC)	Use as the ENTER button.	VCR
	Displays the setup screen for DVD/DVR players.	DVD/DVR player
	Changes sides of the LD.	LD player
MENU	Displays menus concerning the current DVD or DVR you are using.	DVD/DVR player
Û	Pauses the tape.	CD-R/Cassette deck
Û	Stops the tape.	CD-R/Cassette deck
ENTER	Starts playback.	CD-R/Cassette deck
<b>⇔/</b> ⇒	Fast rewinds/fast forwards the tape.	CD-R/Cassette deck
⇔û↓ & ENTER	Navigates DVD menu/options.	DVD/DVR Player
CHANNEL	Selects channels.	VCR/DVD/DVR Player
+/-	Selects tracks.	CD/MD/CD-R/Cassette deck
TOP MENU	Displays the disc 'top' menu of a DVD.	DVD/DVR Player
AUDIO	Changes the audio language or channel.	DVD/DVR Player
SUBTITLE	Displays/changes the subtitles on multilingual DVDs.	DVD/DVR Player
ANGLE	Switches camera angles on discs with multi-angle scenes.	DVD/DVR Player
	-	

55

En



### **Preset Code List**

You can only set these codes for the buttons that assigned to the respective components. So, for example, the TV codes can only be set to the TV or TVC button.

TV	(TV) (TVC)	AMPLIVISION AMPRO	1079 1126
Manufacturer	Code	AMSTRAD	1006, 1017, 1103, 1105
PHILIPS	1008, 1017, 1020, 1025, 1104,	ANITECH	1006, 1029, 1036
THEN	1115	AOC	1011, 1013
SONY	1001, 1007, 1016	ARCAM	1078, 1079
PANASONIC	1023, 1054, 1055, 1075, 1076,	ASBERG	1036
	1082, 1087, 1121, 1124	ASUKA	1080
TOSHIBA	1015, 1016, 1027, 1031, 1050,	ATLANTIC	1073
	1051, 1085	AUDIOSONIC	1017, 1046
TELEFUNKEN	1005, 1026, 1034, 1038, 1042,	AUDIOVOX AUTOVOX	1040, 1064, 1110 , 1118 1036, 1073
	1046, 1075, 1097	BANG & OLUFSEN	1116
SHARP	1016, 1019, 1041, 1056, 1124	BASIC LINE	1006, 1080
SAMSUNG	1006, 1011, 1013, 1017, 1026,	BAYSONIC	1064
	1027, 1039, 1062, 1079, 1089,	BAUR	1007, 1017, 1114, 1115
FEDOLICON	1092, 1102	BEKO	1102
FERGUSON	1005, 1017, 1033, 1046, 1065,	BELCOR	1011
MITSUBISHI	1084, 1091 1011, 1016, 1041, 1045, 1049,	BELL & HOWELL	1009, 1050
MITSUDISHI	1062, 1114	BEON	1017
GOLDSTAR	1002, 1114	BINATONE	1079
JOLDSIAN	1026, 1046, 1062, 1079, 1092	BLUE SKY	1080
BLAUPUNKT	1066, 1068, 1071, 1075, 1115	BLUE STAR	1090
RADIOLA	1008, 1017	BONDSTEC	1086
IVC	1016, 1024, 1030, 1053, 1065,	BOOTS	1079
	1067, 1103, 1122	BPL	1090
DAEWOO	1006, 1011, 1017, 1019, 1028,	BSR	1095
	1040, 1050, 1104, 1110, 1118,	BRADFORD	1064
	1119	BRANDT	1046, 1069, 1070, 1072
ORION	1017, 1063, 1083, 1095, 1098,	BRITANNIA	1078
	1099, 1112	BROCKWOOD	1011
SIEMENS	1017, 1052, 1066, 1068, 1071,	BROKSONIC BTC	1083, 1112 1080
	1075, 1115	BUSH	1006, 1016, 1017, 1080, 1090
ADMIRAL	1041, 1055, 1075, 1112	БОЗП	1095, 1103, 1104
ADYSON	1014, 1079	CANDLE	1013, 1026
AIKO	1040	CARNIVALE	1013, 1020
AKAI	1013, 1074	CARREFOUR	1016
AKURA	1080, 1089	CARVER	1025. 1058
ACURA	1006	CASCADE	1006
ALARON ALBA	1063, 1078	CATHAY	1017
ALBA ALLORGAN	1006, 1016, 1017, 1080, 1103 1095	CENTURY	1075
ALLORGAN ANAM	1004, 1006, 1029, 1054, 1064,	CENTURION	1017
MINMINI	1004, 1006, 1029, 1034, 1064,	CELEBRITY	1001
ANAM NATIONAL	1054, 1087, 1108	CCE	1017
AMBASSADOR	1061	CGE	1034, 1036, 1038, 1086, 1097
AMERICA ACTION	1064	CIMLINE	1006

56

----

XRB3013A.49.67

-

CINERAL CITIZEN CLARIVOX CLATRONIC CME CONCERTO	1040, 1110 1013, 1019, 1026, 1027, 1040 1017 1036, 1086, 1102 1007, 1015, 1114 1026	FRONTECH FUJITSU FUNAI FUTURETECH GE	1055, 1086, 1089, 1109 1032, 1063, 1073 1059, 1063, 1064, 1089, 1095, 1096 1064 1012, 1022, 1023, 1041, 1062,
CONDOR CONTEC	1098, 1102 1006, 1016, 1064, 1078 DN 1069, 1070, 1072 1054	GEC GELOSO GENEXXA	1090, 1110, 1129, 1131 1017, 1020, 1032, 1072, 1079 1006, 1075 1055, 1080
CROSLEY CROWN CRYSTAL	1025, 1034, 1036, 1038, 1075 1006, 1017, 1019, 1036, 1064, 1102, 1106 1109	GIBRALTER GOODMANS GORENJE	1010, 1011, 1013 1016, 1017, 1032, 1079, 1103, 1104 1102
CS ELECTRONICS CTC CURTIS MATHES	1078 1086 1009, 1013, 1019, 1022, 1023,	GPM GRAETZ GRANADA	1080 1055 1017, 1032, 1048, 1074, 1079,
CONTISTANTAL	1025, 1026, 1027, 1041, 1047, 1050, 1057, 1110, 1113, 1129, 1131	GRADIENTE GRANDIN	1100 1024, 1026, 1058 1090
CYBERTRON CXC DAINICHI DANSAI	1080 1064 1077, 1080 1017	GRUNDIG GRUNPY HALLMARK HANSEATIC	1031, 1066, 1068, 1072, 1115 1063, 1064 1062 1017, 1098
DAYTRON DECCA DE GRAAF	1006, 1011 1017, 1032 1074	HARLEY DAVIDSON HARVARD HARMAN/KARDON	1063 1029, 1064
DENON DIXI DUAL TEC	1047 1006, 1017 1079	HCM HINARI HISAWA	1006, 1090, 1105 1006, 1016, 1017, 1080 1090, 1111
DUMONT DWIN ECE	1010, 1011, 1031 1125, 1127 1017	HITACHI	1014, 1016, 1018, 1020, 1021, 1026, 1044, 1046, 1047, 1055, 1069, 1070, 1079, 1081, 1097
ELBE ELECTROBAND ELIN ELITE	1088 1001 1017 1080, 1098	HUANYU HYPSON ICE ICES	1078, 1104 1017, 1089, 1090 1079, 1089, 1103 1080
ELTA EMERSON	1006 1011, 1018, 1019, 1050, 1061, 1062, 1063, 1064, 1075, 1083,	IMPERIAL INDIANA	1034, 1036, 1038, 1086, 1102, 1106 1017
ENVISION ERRES ETRON EXPERT FIDELITY	1090, 1112, 1118, 1119 1013 1008, 1017 1006, 1120 1073 1078	INFINITY INGELEN INNO HIT INNOVA INTEQ INTERBUY	1025 1055 1032 1017 1010 1029
FINLANDIA FINLUX FISHER	1074 1017, 1031, 1032 , 1044 1050, 1074, 1079, 1096, 1102	INTERFUNK INTERVISION	1017, 1055, 1086, 1114 1017, 1029, 1043 1079, 1089
FLINT FORMENTI FORTRESS	1111 1017, 1075, 1098 1041	ISUKAI ITS ITT	1080 1103 1055

57

Er

XRB3013A.49.67 57

JBL JCB KAISUI KAMP KAPSCH KAWASHO	1025 1001 1006, 1078, 1079, 1080, 1090, 1078 1055, 1073 1078	NAD NEC NECKERMANN NEI NETSAT NICAMAGIC	1051, 1057, 1062 1011, 1013, 1016, 1026, 1058 1017, 1066, 1075, 1115 1017, 1109 1017 1078
KEC KENDO	1064 1017	NIKKAI NIKKO	1014, 1015, 1017, 1032, 1078, 1080, 1089 1013, 1040, 1062
KNEISSEL KENWOOD KINGSLEY	1088 1011, 1013 1078	NOBLIKO NORDMENDE	1036, 1043 1046, 1069, 1070, 1075, 1091
KONIG KORPEL	1114 1017	NTC OCEANIC	1040 1055, 1077
KOYODA KTV	1006 1013, 1019, 1064	ONWA OPTIMUS OPTONICA	1064 1050, 1057, 1087
LEYCO LG LIESENK&TTER	1017, 1032, 1089, 1095 1026 1017	OSAKI	1041, 1056 1014, 1032, 1079, 1080, 1089, 1105
LLOYTRON LOEWE	1017 1014 1035, 1114	OSO OSUME	1080 1014, 1032, 1052
LOGIK LUMA	1009 1073	OTTO OTTO VERSAND	1007, 1114 1007, 1016, 1017, 1066, 1075, 1079, 1098, 1115
LUXMAN LXI M ELECTRONIC	1026 1022, 1025, 1050, 1051, 1062 1006, 1017, 1029, 1044, 1046,	PALLADIUM PANAMA	1102, 1106 1079, 1089
MAGNAVOX	1055, 1079, 1091, 1104 1013, 1016, 1025, 1063	PATHE MARCONI PATHE CINEMA	1069, 1070, 1072 1075, 1078, 1084, 1098
MAGNADYNE MAGNAFON	1043, 1086 1036, 1043, 1075	Pausa Penney	1006 1003, 1011, 1012, 1013, 1019, 1022, 1023, 1026, 1027, 1051,
MAJESTIC MANESTH MARANTZ	1009 1079, 1089, 1098 1013, 1017, 1025	PERDIO	1062, 1131 1098
MARK MATSUI	1017 1006, 1015, 1016, 1017, 1032,	PHAPSODY PHASE PHILCO	1078 1014 1011, 1013, 1025, 1034, 1036,
MATSUSHITA	1074, 1079, 1095, 1103 1087	PHONOLA	1038, 1047, 1075, 1086, 1112 1008, 1017
MCMICHAEL MEDIATOR MEGATRON	1020 1008, 1017 1047, 1062	PILOT PORTLAND	1011, 1013, 1019 1011, 1019, 1040
MEMOREX	1006, 1009, 1026, 1049, 1050, 1062, 1087, 1112	PRISM PROFEX PROLINE	1023 1006, 1037 1099
METZ MGA MIDLAND	1075 1011, 1013, 1049, 1062 1010, 1019, 1022, 1023	PROSOCAN PROTECH	1022 1006, 1017, 1043, 1079, 1086,
MINERVA MINOKA	1031, 1115 1105	PROTON PULSAR	1089, 1106, 1109 1062, 1113 1010, 1011
MINUTZ MIVAR MOTION	1012 1078, 1092, 1093, 1094 1036	PYE QUASAR	1008 1023, 1056, 1087
MOTOROLA MTC	1041 1011, 1013, 1026, 1027, 1078,	QUELLE	1007, 1017, 1031, 1034, 1038, 1071, 1075, 1097, 1114, 1115
MULTITECH	1114 1006, 1036, 1043, 1064, 1078	R-LINE	1016 1017

58

XRB3013A.49.67

\_

RANK ARENA	1016	SOUNDWAVE	1017, 1106
RBM	1031	SQUAREVIEW	1059
RCA	1011, 1018, 1022, 1023, 1039,	STANDARD	1006, 1079, 1080
	1041, 1128, 1129, 1130, 1131,	STARLITE	1064
	1132	STERN	1055, 1073, 1088
REALISTIC	1011, 1013, 1019, 1026, 1050,	SUNKAI	1095, 1099
	1056, 1062, 1064	SUPERTECH	1078
REX	1055, 1073, 1088, 1089	SUPREME	1001
REVOX	1017	SUSUMU	1080
ROADSTAR	1006, 1080, 1089, 1106	SYLVANIA	1013, 1025
RUNCO	1010, 1013, 1117	SYMPHONIC	1059
SABA	1035, 1046, 1055, 1069, 1070,	SYSLINE	1017
	1072, 1075, 1091	TANDY	1032, 1041, 1055, 1079, 1080
SACCS	1084	TASHIKO	1016, 1020, 1079
SAISHO	1006, 1089, 1109	TEC	1079, 1086
SALORA	1055	TECHNEMA	1098
SAMBERS	1036, 1043, 1075	TECHNICS	1023, 1087, 1121
SAMPO	1013, 1019	TECHNOL ACE	1063
SAMSUX	1019	TECHWOOD	1023, 1026
SANDRA	1078	TEKNIKA	1009, 1011, 1019, 1025, 1026,
SANSEI	1110	TEICHIO	1027, 1040, 1049, 1063, 1064
SANSUI	1112	TELEAVIA	1072
SANYO	1016, 1032, 1048, 1050, 1052,	TELEMEISTER	1098
SANIO	1074, 1075, 1100	TELETECH	1006
SBR	1008, 1017, 1020	TELETON	1016, 1073, 1079
SCHNEIDER	1017, 1080, 1086, 1096, 1103	TENSAI	1080, 1095, 1098
SCIMITSU	1017, 1080, 1080, 1070, 1103	TEXET	1078, 1080
SCOTCH	1062	THOMSON	1046, 1069, 1070, 1072, 1091
SCOTT	1011, 1062, 1063, 1064, 1083	THORN	1015, 1017, 1032, 1034, 1038,
SEARS	1022, 1025, 1026, 1050, 1051,	ITIORIN	1065, 1067, 1114
JLANJ	1059, 1062, 1063	TMK	1026, 1061, 1062
SEG	1016, 1036, 1079, 1089	TOMASHI	1090
SEI	1043, 1075, 1095	TOTEVISION	1019
SEI-SINUDYNE	1007	TRIUMPH	1085
SELECO	1055, 1073, 1088	TUTUNG	1017, 1032, 1079
		UHER	
SEMIVOX SEMP	1064 1051	ULTRA	1073, 1096, 1098 1067
	1015		1043
SENTRA SHOGUN	1015	ULTRAVOX UNIVERSUM	1017, 1044, 1089, 1102
SHORAI	1095	VECTOR RESEARCH	
SSS	1011, 1064	VECTOR RESEARCH VESTEL	1017
		VICTOR	
SIAREM	1043, 1075		1016, 1024, 1053, 1087
SINDYNE	1043, 1075, 1095	VIDEOSAT	1086 1079
SIGNATURE	1009	VIDEOTECHNIC	
SILVER	1016	VIDIKRON	1025
SKY	1017	VIDTECH	1011, 1016, 1062
SKY-WORTH	1017	VISION	1098
SOLAVOX	1014, 1055	VOXSON	1055
SONITRON	1074	WALTHAM	1079
SONOKO	1006, 1017	WATSON	1017, 1098
SONOLOR	1055, 1074, 1077	WATT RADIO	1043
SONTEC	1017	WARDS	1009, 1011, 1012, 1013, 1025,
SOUNDESIGN	1062, 1063, 1064	\4/E04	1026, 1056, 1062, 1063
		WEGA	1016

01.12.12, 4:49 PM

En

-

### 09

### Controlling the rest of your system

WHITE WESTINGHOUSE 1017, 1078, 1098, 1112,

1118, 1119 1011, 1013

YAMAHA YOKO 1017, 1079, 1101, 1109 ZANUSSI 1073 ZENITH 1009, 1010, 1040, 1112 **PIONEER** 1018, 1046, 1055, 1057, 1060, 1091, 1107, 1123, 1124

### MD PLAYER





Manufacturer	<b>Code</b>
SONY	5401
KENWOOD	5402.5407
SHARP ONKYO	5402,5407 5403 5404
ORION	5406
DENON	5405
PIONEER	5408

### LD PLAYER



5223

5214

5201,5202, 5208

60

XRB3013A.49.67





Code

5016, 5021

5014, 5020, 5032

**CD PLAYER** 

AKAI





TOSHIBA

PIONEER

ONKYO OPTIMUS  ORION PANASONIC PARASOUND PHILIPS PMG POPPY PROTON QED QUAD QUASAR RCA REALISTIC REVOX ROTEL SAE SANSUI SANYO SCHNEIDER SCOTT SEARS SHARP SHERWOOD SONY SOUDESIGN TASCAM TEAC TECHNICS THORENS TOSHIBA UNIVERSUM YAMAHA YORX VICTOR WARDS PIONEER	5012, 5013, 5042, 5059 5001, 5005, 5008, 5019, 5025, 5038, 5045, 5046, 5048 5061 5004, 5037 5045 5021, 5055 5022 5021 5021 5021 5021 5021, 5025, 5038 5025, 5026, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021, 5045 5021 5021 5021, 5038 5038 5038 5038 5038 5008, 5026, 5058 5015, 5026, 5058 5015, 5026, 5051 5019 5045 5024, 5026, 5044, 5045 5004, 5034, 5037 5021 5007, 5028 5047 5011 5010, 5021 5005, 5030, 5035, 5038, 5048, 5052, 5063	DYNAMIC BASS EROICA FISHER GARRARD GOLDSTAR GRUNDIG HARMON/KARDON INKEL JVC KENWOOD KYOCERA LOTTE LUXMAN MAGNAVOX MARANTZ MEMOREX MITSUBISHI NAKAMICHI NIKKO OLYMPUS ONKYO OPTIMUS PANASONIC PHILIPS RCA RENAISSANCE REVOX SAMSUNG SANSUI SANYO SHARP SONIC SONY TEAC TECHNICS THORENS VICTOR WARDS YAMAHA PIONEER	6028 6041 6028 6041 6028 6036 6036 6036 6002 6002, 6014 6003 6003, 6004, 6019, 6024, 6025 6013 6034 6029 6002 6002 6008, 6009 6016 6020 6035 6029 6010, 6011, 6032 6001, 6021 6023 6002 6038 6002 6038 6002 6038 6002 6038 6001 6010, 6001, 6001, 6001 6002 6038 6002 6038 6002 6038 6001 6001 6002 6038 6001 6001 6006, 6007, 6019 6001, 6001, 6008, 6009 6021,
--	--	--	--

## TAPE DECK





Manufacturer	Code
ADC	6013
AIWA	6002, 6022, 6017, 6018
AKAI	6015, 6016
ANAM	6035
ARCAM	6005
CARVER	6002, 6028
DENON	6005, 6039
DUAL	6037

## **DVD PLAYER**

DVD

Manufacturer	Code
TOSHIBA	5302
SONY	5306
PANASONIC	5301, 5322
KENWOOD	5307
JVC	5311, 5318
SAMSUNG	5313
AKAI	5316
HARMAN/KARDON	5314

01.12.12, 4:49 PM

XRB3013A.49.67



### 09

### Controlling the rest of your system

MAGNAVOX	5302
MITSUBISHI	5303
ONKYO	5302, 5317, 5319
PROSCAN	5304
RCA	5304
SHARP	5320
THETA DIGITAL	5312
TECHNICS	5301
THOMSON	5310
YAMAHA	5301, 5309
PHILIPS	5302, 5308
ZENITH	5302, 5315
PIONEER	5305, 5312, 5321
	5322

### **AMPLIFIER**

Manufacturer	Code
AUDIOLAB	8005
DENON	8002
GRUNDIG	8005
MARANTZ	8005
MICROMEGA	8005
PHILIPS	8005
PIONEER	8004
DEVOY.	2005

8005 TANDBERG **THORENS** 8005 YAMAHA 8001, 8006

### MISC AUDIO

Manufacturer	Code
JERROLD	8201, 8203
STARCOM	8201
SCIENTIFIC ATLANTA	8202

### **RECEIVERS**

Manufacturer	Code
ADC	7042
AIWA	7012, 7023, 7031, 7055, 7064
AKAI	7011, 7027
ANAM	7010, 7046
ARCAM	7018, 7048
AUDIOLAB	7059
CAPETRONIC	7042
CARVER	7055, 7059
CURTIS	7008
DAEWOO	7032
DENON	7001, 7056, 7058

7040

62

XRB3013A.49.67

DUAL

**FISHER** 7028 **GARRARD** 7032, 7034, 7035 GOLDSTAR 7010 GOODMANS 7027 **GP AUDIO** 7033

**EROICA** 

**FANTASIA** 

**FERGUSON** 

FINE ARTS

**GRUNDIG** 7018, 7059 HARMAN/KARDON 7009, 7051 INKEL 7038, 7040 JBL 7009

JVC 7007, 7036, 7042 7003, 7017, 7025, 7026, 7044, 7053, 7063, 7066 KENWOOD

7005

7037

7042

7059

LOTTE 7037, 7039 LUXMAN 7021

7030, 7042, 7055, 7059 7004, 7018, 7055, 7059 MAGNAVOX MARANTZ MCINTOSH

7020 MCS 7004 **MCSILVER** 7037 7018, 7059 MICROMEGE 7032, 7037, 7046 NIKKO 7017, 7034, 7042, 7049, 7052 **OPTIMUS** ONKYO 7013, 7029 PALLADIUM 7050

PANASONIC 7004, 7024, 7041

7018, 7030, 7045, 7048, 7051, **PHILIPS** 

7055, 7059 PHONOTREND 7038 QUASAR 7004 RCA 7006, 7042 RENAISSANCE 7043 7018 REVOX ROADSTAR 7027 SABA 7042 SAISHO 7027 SAMSUNG 7010 SANSUI 7027, 7055

SANYO 7028 **SCHNEIDER** 7042 7017 SHARP SHERWOOD 7038 **SOUNDESIGN** 7049

SONY 7015, 7054, 7057, 7060 TAE KWANG 7034 TEAC 7010, 7035

TECHNICS 7004, 7062, 7065 7019, 7024, 7041, 7061, 7062, TELEFUNKEN

7065 **THORENS** 7018, 7059

01.12.12, 4:49 PM







TUN

(TUN)



UHER VICTOR WARDS YAMAHA PIONEER	7027, 7042, 7050 7007 7002, 7006, 7008 7016, 7017 7002, 7008, 7014, 7022 7047, 7050, 7052	2, 7042,	BAIRD BASIC LINE BEAUMARK BELL & HOWELL BRANDT BRANDT ELECTRON BROKSONIC	2001, 2021, 2037, 2039 2011, 2034, 2059 2057 2037 2047, 2064, 2065 UC 2021 2002, 2040, 2046, 2052, 2078
VCR		(VCR)	BUSH	2034, 2052, 2059, 2072
Manufacturer PHILIPS PANASONIC THOMSON SONY	Code 2015, 2035, 2074, 2075 2015, 2042, 2053, 2054 2055, 2087 2021, 2064, 2074 2001, 2009, 2012, 2013 2015	1,	CALIX CANON CAPEHART CARVER CATRON CCE CGE CIMLINE	2017 2015 2011 2035 2011 2034, 2059 2001 2034
JVC GRUNDIG	2008, 2021, 2033, 2049 2074, 2080 2003, 2005, 2007, 2010 2035, 2048, 2050, 2054	0, 2034,	CINERAL CITIZEN CLATRONIC COLT	2059 2017, 2059 2011 2034
AKAI HITACHI	2071, 2075 2021, 2029, 2038, 2060 2001, 2004, 2021, 2022 2056, 2057	2, 2043,	COMBITECH CONDOR CRAIG CROWN	2072 2011 2017, 2026, 2034, 2057, 2058 2011, 2034, 2059
TOSHIBA MITSUBISHI SHARP ORION	2021, 2023, 2024, 2035 2023, 2027, 2033, 2035 2027, 2073 2002, 2004, 2016, 2036	5, 2045	CURTIS MATHES CYBERNEX CYRUS DAEWOO DANSAI	2015, 2021, 2032, 2042 2057 2035 2011, 2024, 2025, 2059, 2083 2034
SANYO FERGUSON BLAUPUNKT	2052, 2070, 2072, 2078 2025, 2026, 2037, 2057 2021, 2039, 2064, 2065 2003, 2005, 2010, 2014 2042, 2048, 2054, 2058	7 5 1, 2041,	DAYTRON DECCA DE GRAAF DENON	2034 2011 2001, 2035 2022, 2043 2022
NOKIA ADMIRAL ADVENTURA AIKO	2025, 2037, 2038, 2057 2027, 2052 2001 2059		DUAL DUMONT DYNATECH ELBE	2021 2001, 2035, 2037 2001 2018
AIWA AKIBA ALBA	2001, 2017, 2062, 2070 2034 2011, 2034, 2052, 2059 2072		ELCATECH ELECTROHOME ELECTROPHONIC EMEREX	2034 2017 2017 2012
AMBASSADOR AMERICA ACTION AMERICAN HIGH AMSTRAD	2011 2059 2015 2001, 2059, 2067, 2068	3	EMERSON ESC	2001, 2002, 2017, 2023, 2040, 2046, 2051, 2052, 2059, 2078, 2083 2057, 2059
ANAM ANAM NATIONAL	2017, 2037, 2007, 2007 2017, 2042, 2054, 2057 2082, 2084 2042, 2054, 2087		FIDELITY FINLANDIA FINLUX	2001 2035, 2037 2001, 2022, 2035, 2037
ANITECH ASA ASHA ASUKA AUDIOVOX	2034, 2034, 2007 2017, 2035 2057 2017 2017		FIRSTLINE FISHER FRONTECH FUJI	2017, 2023, 2024, 2034, 2052 2025, 2026, 2030, 2037 2011 2015

01.12.12, 4:49 PM

FUNAI	2001	MATSUI	2004, 2016, 2036, 2052, 2070,
GARRARD	2001		2072
GE	2015, 2027, 2032, 2057	MATSUSHITA	2015, 2042, 2055
GEC	2035	MEI	2015
GENERAL	2011, 2028	MELECTRONIC	2018
GOLDHAND	2034	MEMOREX	2001, 2015, 2017, 2019, 2025,
GOLDSTAR	2017, 2018, 2053, 2079	IVILIVIOINEN	2026, 2027, 2037, 2052, 2057,
GOODMANS	2001, 2017, 2034, 2059, 2075		2062, 2085, 2087, 2088
	2077, 2081	MEMBLIIC	2034
GO VIDEO		MEMPHIS	
GRAETZ	2005, 2021, 2037, 2057	METZ	2003, 2005, 2017, 2042, 2048,
GRANADA	2025, 2035, 2037		2055, 2069
GRADIENTE	2001, 2008	MGA	2023, 2057
GRANDIN	2001, 2017, 2034	MGN TECHNOLOGY	
HANSEATIC	2017	MINCRVA	2048
HARMAN/KARDON		MINERVA	2005, 2010, 2048
HARLEY DAVIDSON	2001	MINOLTA	2022
HARWOOD	2034	MOTOROLA	2015, 2027
HCM	2034	MTC	2001, 2057
HEADQUARTER	2025	MULTITECH	2001, 2034
HINARI	2004, 2034, 2057, 2072	MURPHY	2001
HI-O	2026	NAD	2031
HUGHES NETWORK	SYSTEMS 2022	NATIONAL	2054
HYPSON	2034	NFC	2018, 2020, 2021, 2033, 2037
IMPERIAL	2001	NECKERMANN	2035
INGERSOL	2004	NESCO	2034
INTERFUNK	2035	NIKKO	2017
ITT	2005, 2021, 2025, 2037, 2038,	NIKON	2014
***	2057, 2074	NOBLEX	2057
ITV	2017, 2059	NOKIA	2021, 2025, 2037, 2038, 2057
JENSEN	2021	NORDMENDE	2021, 2061, 2064, 2065, 2074
KAISUI	2034	OCEANIC	2001, 2021
KEC	2017, 2059	OKANO	2063, 2070
KENDO	2038, 2052	OLYMPUS	2015, 2054
KENWOOD	2018, 2021, 2033	OPTIMUS	2017, 2027, 2031, 2037, 2042,
		OPTIIVIUS	
KLH	2034	004141	2077, 2086, 2087, 2088
KODAK	2015, 2017	OSAKI	2001, 2017, 2034
KORPEL	2034	OTTO VERSAND	2035
LAYCO	2034	PALLADIUM	2005, 2017, 2021, 2034
LENCO	2059	PATHE MARCONI	2021
LG	2079	PATHE CINEMA	2016
LLOYD'S	2001, 2051	PENTAX	2022
LOEWE	2004, 2005, 2017, 2035	PENNY	2015, 2017, 2018, 2020, 2022,
LOGIK	2004, 2034, 2057		2057
LUXOR	2023, 2025, 2027, 2037, 2038	PERDIO	2001
LXI	2017	PHILCO	2015, 2018, 2052, 2078
M ELECTRONIC	2001	PHONOLA	2035
MAGNASONIC	2059	PILOT	2017
MAGNAVOX	2001, 2015, 2019, 2035	PORTLAND	2011
MAGNIN	2057	PROFEX	2066
MANESTH	2024, 2034	PROFITRONIC	2057
MARANTZ	2003, 2005, 2015, 2035	PROLINE	2001
MARTA	2017	PROSCAN	2032

64

Π

XRB3013A.49.67

•

PROTEC	2034	SUN
PLILSAR	2019	SUN
DVF	2035	SYLV
OLIARTER	2025	SYM
OLIADT7	2025	TASI
QUARIZ	2020	IASI
QUASAK	2015, 2042, 2007	TATL
QUELLE	2035	TEAG
RADIO SHACK	2034 2019 2035 2025 2025 2015, 2042, 2087 2035 2001, 2085 2035 2017	TEC
RADIOLA	2035	TECH
RADIOLA RADIX RANDEX RCA	201 /	TEKI
RCA	2015, 2022, 2027, 2032, 2038,	TELE
	2057	TEN
REALISTIC	2001, 2015, 2017, 2025, 2026,	TEN:
	2027, 2037	THO
REX	2021, 2074	THO
RFT	2075	TMK
RICOH	2014	TOTE
ROADSTAR	2017, 2034, 2057, 2059	TOW
RUNCO	2019	UHE
SABA	2021, 2049, 2050, 2061, 2064,	UNI
	2065, 2074	UNI
SAISHO	2065, 2074 2004, 2016, 2036, 2052 2023, 2025, 2038	
SALORA	2023, 2025, 2038	VEC.
SANKY	2019, 2027	VEC.
SANSUI	2001, 2021, 2033, 2052, 2058,	VICT
	2015, 2022, 2027, 2032, 2038, 2057 2001, 2015, 2017, 2025, 2026, 2027, 2037 2021, 2074 2075 2014 2017, 2034, 2057, 2059 2019 2021, 2049, 2050, 2061, 2064, 2065, 2074 2004, 2016, 2036, 2052 2023, 2025, 2038 2019, 2027 2001, 2021, 2033, 2052, 2058, 2078 2024, 2057, 2076, 2077 2072 2035 2001, 2005, 2021, 2037 2001, 2005, 2021, 2037 2001, 2005, 2021, 2037 2001, 2005, 2021, 2037 2001, 2034, 2035	VIDE
SAMSUNG	2024, 2057, 2076, 2077	VIDE
SAVILLE	2072	WAF
SBR	2035	
SCHAUB LORENZ	2001, 2005, 2021, 2037	WHI
SCHNEIDER	2001, 2034, 2035	XR-1
SCOTT	2023, 2024, 2040, 2046	XR-1
SEARS	2001, 2015, 2017, 2022, 2025,	XR-1
	2026, 2037	YAM
SEG	2057, 2066	YAM
SEI	2004, 2035	YOK
SELECO	2021	YOK
SEMP	2024	ZEN
SENTRA	2011	PION
SHINTOM	2034, 2037	
SHOGUN	2057	
SHORAL	2004	SAT
SIEMENS	2003. 2005. 2010	
2017, 2030, 2035	2037, 2048	Mar
SIIVA	2017	ABS
SINGER	2024. 2034	AST
SINUDYNE	2004. 2035	ALB
SOLAVOX	2011	ALD
SONOLOR	2025	AMS
SONTEC	2024, 2037, 2078, 2077 2072 2035 2001, 2005, 2021, 2037 2001, 2034, 2035 2023, 2024, 2040, 2046 2001, 2015, 2017, 2022, 2025, 2026, 2037 2057, 2066 2004, 2035 2021 2024 2011 2034, 2037 2004 2003, 2005, 2010 2037, 2048 2017 2024, 2034 2004, 2035 2011 2025 2017 2022 2070	
STS	2022	ANK
SUNKAI	2070	ANT

SUNSTAR	2001				
SUNSTAR SUNTRONIC	2001				
SYLVANIA	2001,	2015	2023	2035	
	2001	20101	20201	2000	
TASHIKO					
TATUNG	2001.	2021,	2035		
TFAC	2001.				
TEC	2011				
Tashiko Tatung Teac Tec Technics Teknika	2015,	2042.	2054		
TEKNIKA	2001.			2017,	2028
$I \vdash I \vdash \Delta \bigvee I \Delta$	7(17)				
TELEFUNKEN	2021,	2047,	2058,	2064,	2074
TENOSAL	2034				
TENSAI	2001,	2066			
THOMAS	2001				
TELEFUNKEN TENOSAL TENSAI THOMAS THOMAS TMK TOTEVISION	2016,	2021,	2037		
TMK	2051,	2057			
TOTEVISION	2017,	2057			
TOWADA	2066				
UHER	2057				
	2057				
UNIVERSUM	2001,	2006,	2010,	2017,	2035,
	2038,	2048,	2057,	2067	
VECTOR	2024				
VECTOR RESEARCH	2018,	2020			
VICTOR	2008,	2021,	2033		
VIDEO CONCEPTS		2024			
VIDEOSONIC	2057				
WARDS				2026,	2027
	2032,			2057	
WHITE WESTINGHO		2052,	2059		
XR-1000 XR-1001 XR-1002 YAMAHA YAMISHI YOKAN	2001				
XR-1001	2015				
XR-1002	2034				
YAMAHA	2018				
YAMISHI	2034				
YOKAN	2034				
YOKO	2011,	2057			
YOKO ZENITH PIONEER	2001,	2014,	2019,	2052,	20/8
PIONEER	2031,	2033,	2035,	2044,	2056
				$\overline{}$	

### TELLITE TUNER





Manufacturer ABSAT AST ALBA ALDES AMSTRAD	Code 4006 4027 4029, 4034, 4037, 4052 4019 4003, 4016, 4025, 4038, 4039 4042
ANKARO ANTTRON	4003, 4016, 4025, 4038, 4039 4042 4013, 4019, 4030, 4044 4009, 4034

XRB3013A.49.67

ARMSTRONG	4015	KREISELMEYER	4008
ASTRA	4005	KYOSTAR	4034
ASTRO	4008, 4039, 4045	LA SAT	4043, 4045
AVALON	4031	LENCO	4034
AXIS	4030, 4046	LENNOX	4050
BT	4053	LUPUS	4030
BEKO	4010	LUXOR	4005, 4049
BEST	4030		4037, 4045, 4050
		MANHATTAN	
BLAUPUNKT	4008	MARANTZ	4011
BOCA	4015, 4043	MASPRO	4004, 4023
BRAIN WAVE	4022	MATSUI	4024, 4048
BRITISH SKY BROA		MEDIASAT	4059
BUSH	4002	MEDIAMARKT	4015
CNT	4045	MINERVA	4048
CAMBRIDGE	4024	MORGAN'S	4015, 4043
CANAL SATELLITE	4059	NAVEX	4022
CANAL+	4059	NEUHAUS	4039
CHANNEL MASTER		NEUSAT	4057
COMLINK	4019	NEWHAUS	4013
CONNEXIONS	4031	NIKKO	4028
CROWN	4015	NOKIA	4005, 4032, 4037, 4049, 4054,
CYRUS	4011		4063
D-BOX	4054	NORDMENDE	4029
DDC	4029	ORBITECH	4039
DNT	4011, 4031	OXFORD	4024
ECHOSTAR	4031, 4036, 4061	PACE	4002, 4009, 4014, 4023, 4037,
EMANON	4034		4055, 4058
FTE HUMAX	4060	PALLADIUM	4048
FERGUSON	4002, 4009, 4010, 4023	PALSAT	4039
FIDELITY	4016	PANDA	4037
FINLUX	4005, 4024, 4032, 4037	PHILIPS	4007, 4011, 4020, 4037, 4048,
FRACARRO	4061		4059
FREECOM	4034	PHONOTREND	4019, 4050
FUBF	4030, 4031, 4034	PIONEER	4021, 4059
G-SAT	4009	PLANET	4061
GALAXIS	4019, 4057, 4060	PROMAX	4037
GENERAL INSTRUM		PROSAT	4019
GOLD BOX	4059	QUADRAL	4029, 4044
GOODING	4048	RADIOLA	4011
GOODMANS	4010	RADIX	4031, 4064
GRUNDIG	4008, 4010, 4048	RFT	4011, 4013, 4019
HINARI	4009	SAT	4027, 4038
HIRSCHMANN	4008, 4032, 4039, 4040, 4049	SABA	4023, 4045
HITACHI	4037	SABRE	4037
HOUSTON	4053	SAGEM	4056
HUTH	4013, 4015, 4019, 4026	SALORA	4005
ITT	4005	SATCOM	4026, 4051
INVIDEO	4061	SATEC	4009
INTERVISION	4050	SATMASTER	4026
JVC	4048	SATPARTNER	4022, 4034, 4040, 4045
JOHANSSON	4022	SCHWAIGER	4009, 4041
KATHREIN	4004, 4006, 4008, 4011, 4035,	SEEMANN	4031, 4046
ISTAIL HALIN	4041	OLLIVII (ININ	1001, 1010
	10.11		

XRB3013A.49.67

<del>-</del>

SEG SIEMENS SKYMASTER SONY STRONG SUNSTAR TPS TANTEC TECHNISAT TECHNILAND TELEFUNKEN TFIFKA	4030, 4034 4008 4019, 4044, 4051 4017, 4018 4062 4043 4056 4023, 4037 4001, 4039 4026 4034 4015, 4052
TELESAT	4051
THOMSON TONNA	4037, 4059
TRIAD	4026, 4053
	4027
1111110111	4040 4022
VENTANA	4008, 4049 4011
	4034 4027
WINFRSAT	4027
WISI	
XSAT	4008, 4027, 4031, 4037 4006, 4065
XCOM MULTIMEDIA	
7FHNDFR	4033, 4045, 4047
LLIINDLIN	1000, 1010, 4047

### **CABLE TV**





Manufacturer	Code
ABC	3002, 3003, 3004, 3006, 3008
ANDOVER	3037
BELL & HOWELL	
BIRGMINGHAM CAE	3LE
COMMUNICATION	3020
BRITISH TELECOM	3002, 3012
CABLETIME	3016, 3019, 3025, 3029
CONTEC	3009
CLYDE	3011
CRYPTOVISION	3038
DAEHAN	3043
DAERYUNG	3003
DECSAT	3027
EVERQUESST	3007
FILMNET	3028
FRANCE TELECOM	3030
GEC	3011
GEMINI	3007
GENERAL INSTRUM	ENT 3004, 3020, 3031, 3046
GOLDSTAR	3014. 3047
GRUNDIG	3035

**JERROLD** 3002, 3004, 3005, 3006, 3007, 3020, 3031, 3046 LG ALPS 3044 MEMOREX 3001 MNET 3009, 3028 NOW 3041 OAK 3009 **PACIFIC** 3039 PANASONIC 3001, 3013 PARAGON 3001 PULSAR 3001 PVP STEREO VISUAL MATRIX PIONEER 3010, 3014, 3018, 3036 3001 QUASAR RADIO SHACK 3007 REMBRANDT 3004 RUNCO 3001 SAMSUNG 3014, 3040 SATBOX 3024 SIGNAL 3007 SIGNATURE 3004 3015 STS SALORA 3026 3003, 3032, 3049 SCIENTIFIC SCIENTIFIC ATLANTA 3003, 3008, 3021 **SEAWOO** 3045 STARCOM 3002, 3007 STARGATE 3007 STARQUEST 3007 3043 TAIHAN TELESERVICE 3022 TELE+1 3028 3023 TUDI TUSA 3007 TOCOM 3005 TONGKOOK 3042, 3048 3001 TOSHIBA UNITED CABLE 3002 VIDEOWAY 3017 VISICABLE+ 3033 WESTMINSTER 3012

3037

3001, 3034

01.12.12, 4:49 PM

3007

JASCO

67

XRB3013A.49.67

3004



WOLSEY GENE

ZENITH

HITACHI

## **Troubleshooting**

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.

Problem	Remedy
The power does not turn on.	<ul> <li>Connect the power plug to the wall outlet.</li> <li>Disconnect the power plug from the outlet, and insert again.</li> <li>Make sure there are no loose strands of speaker wire touching the rear panel. This could cause the receiver to shut off automatically.</li> </ul>
No sound is output when a function is selected.	<ul> <li>Make sure the component is connected correctly (refer to pages 14–19).</li> <li>Press MUTE on the remote control to turn muting off.</li> <li>Adjust the MASTER VOLUME.</li> <li>Press the MONITOR button to turn monitoring off.</li> </ul>
No image is output when a function is selected.	Make sure the component is connected correctly (refer to pages pages 14–19).     Select the correct component (use the MULTI JOG/INPUT SELECTOR dial or the MULTI CONTROL buttons on the remote).
Considerable noise in radio broadcasts.	<ul> <li>Tune in the correct frequency.</li> <li>Connect the antenna (refer to page 19).</li> <li>Route DD RF and digital cables away from the antenna terminals and wires.</li> <li>Fully extend the FM wire antenna, position for best reception, and secure to a wall.</li> <li>Connect an outdoor FM antenna (refer to page 19).</li> <li>Adjust the direction and position for best reception.</li> <li>Connect an additional internal or external AM antenna (refer to page 19).</li> <li>Turn off the equipment causing the noise or move it away from the receiver.</li> <li>Place the antenna farther away from the equipment causing the noise.</li> </ul>
Broadcast stations cannot be selected automatically.	Connect an outdoor antenna (refer to page 19).



En

XRB3013A.68.74





Problem	Remedy
No sound from surround or center speakers.	<ul> <li>Refer to Speaker setting on page 39 to check the speaker settings.</li> <li>Refer to Setting the relative volume level of each channel on page 44 to check the speaker levels.</li> <li>Connect the speakers properly (refer to page 19–21).</li> </ul>
No sound from surround back speakers.	<ul> <li>Refer to Surround back speaker setting on page 40 to check the surround back speaker settings.</li> <li>Refer to the table on page 33 to make sure the 6.1 channel setting and the sound mode are set for surround back sound.</li> </ul>
Noise during playback of a cassette deck.	Move the cassette deck further from your receiver, until the noise disappears.
Sound is produced from other components, but not from LD or DVD player.	<ul> <li>Set the SIGNAL SELECT to AUTO, DIGITAL or ANALOG according to the type of connections made. (refer to page 34).</li> <li>Set the digital input settings correctly (refer to page 43).</li> <li>Make digital connections (refer to page 14) and set the SIGNAL SELECT to DIGITAL (refer to page 34).</li> <li>Refer to the instruction manual supplied with the DVD player.</li> </ul>
No sound is output or a noise is output when software with DTS is played back.	Set the digital volume level of the player to full, or to the neutral position.
When a search is performed by a DTS compatible CD player during playback, noise is output.	This is not a malfunction, but be sure to turn the volume down to prevent the output of loud noise from your speakers.
Can't operate the remote control.	<ul> <li>Replace the batteries (refer to page 6).</li> <li>Operate within 23 feet (7 m), 30° of the remote sensor on the front panel (refer to page 6).</li> <li>Remove the obstacle or operate from another position.</li> <li>Avoid exposing the remote sensor on the front panel to direct light.</li> </ul>
The display is dark or off.	Press <b>FL DIMMER</b> on the remote control repeatedly to return to the default.



If the unit does not operate normally due to external effects such as static electricity disconnect the power plug from the outlet and insert again to return to normal operating conditions.

69

Er

XRB3013A.68.74 69



### **Specifications**

### **Amplifier Section**

Continuous average power output of 100 watts\* per channel, min., at 8 ohms, from 20 Hz to 20,000 Hz with no more than 0.2 %\*\* total harmonic distortion (front).

#### **Continuous Power Output**

Front	100 W per channel
	(1kHz, 1.0 %, 8 Ω)
Center 1	100 W (1kHz, 1.0 %, 8 <b>Ω</b> )
Surround	100 W per channel
	(1kHz, 1.0 %, 8 Ω)
Surround Back*	100 W per channel
	(1kHz, 1.0 %, 8 Ω)
* VSX-D811S only	

### Input (Sensitivity/Impedance)

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT ...... 200 mV/47 k $\Omega$ 

### **Frequency Response**

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT ...... 5 Hz to 100,000 Hz  $^{+0}_{-3}$ dB

### Output (Level/Impedance)

VCR/DVR REC, CD-R/TAPE/ MD REC ...... 200 mV/2.2 k $\Omega$ 

### **Tone Control**

BASS	$_{.} \pm 6  dB  (100  Hz)$
TREBLE	$\pm$ 6 dB (10 kHz)
LOUDNESS	+9 dB/+9 dB
	(100 Hz/10 kHz)

#### Signal-to-Noise Ratio (IHF, short circuited, A network)

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT ...... 96 dB

#### Signal-to Noise Ratio [EIA, at 1 W (1 kHz)]

CD, VCR/DVR, CD-R/TAPE/MD, DVD/LD, TV/SAT ...... 79 dB

### **Video Section**

#### Input (Sensitivity/Impedance)

VCR/DVR, DVD/LD, TV/SAT ...... 1 Vp-p/75  $\Omega$ 

#### Output (Level/Impedance)

VCR/DVR ...... 1 Vp-p/75  $\Omega$ 

### **Frequency Response**

VCR/DVR, DVD/LD,

TV/SAT  $\Rightarrow$  MONITOR...... 5 Hz to 7 MHz<sub>-3</sub> dB Signal-to-Noise Ratio ...... 55 dB Cross Talk ...... 55 dB

### FM Tuner Section

rivi luller section	
Frequency Range 87.5	MHz to 108 MHz
Usable Sensitivity Mo	no:13.2 dBf, IHF
	$(1.3 \mu\text{V}/\ 75\Omega)$
50 dB Quieting Sensitivity	Mono: 20.2 dB
	Stereo: 38.6 dBf
	1.4 70 10

Signal-to-Noise Ratio ...... Mono: 73 dB (at 85 dBf)

Stereo: 70 dB (at 85 dBf) Distortion ...... Stereo: 0.5 % (1 kHz) Alternate Channel Selectivity ...... 60 dB

Frequency Response ...... 30 Hz to 15 kHz  $(\pm 1 dB)$ 

#### **AM Tuner Section**

Frequency Range530 kHz to 1,700 kHz
Sensitivity (IHF, Loop antenna) 350 μV/m
Selectivity
Signal-to-Noise Ratio 50 dB
Antenna Loop antenna

XRB3013A.68.74

### Miscellaneous

Power Requirements	AC 120 V, 60Hz
Power Consumption	
VSX-D711	260W, 340 VA
VSX-D811S	300W, 420 VA
In Standby	1 W
AC Outlet 100 \	W MAX. (SWITCHED)
Dimensions 420 (W) x	158 (H) x 401 (D) mm
(16-9/16 (W) x 6-4/16	(H) x 15-6/16 (D) in.)
Weight (without package)	
VSX-D711	9.0 kg
	(19.8 lb)
VSX-D811S	10.5 kg
	(23.2 lb)

### **Furnished Parts**

AM loop antenna	1
FM wire antenna	1
Dry cell batteries (AA size IEC R6P)	2
Remote control	1
Operating instructions	1



# **Note**

Specifications and the design are subject to possible modifications without notice, due to improvements.

- \* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.
- \*\* Measured by Audio Spectrum Analyzer.





71

Fr





# Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

#### To establish a safe level:

- · Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

#### Once you have established a comfortable sound level:

Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime

### We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

### Decibel

#### <u>Level</u> <u>Example</u>

- Quiet library, soft whispers
- 40 Living room, refrigerator, bedroom away from traffic
- 50 Light traffic, normal conversation, quiet office
- Air conditioner at 20 feet, sewing machine
- 70 Vacuum cleaner, hair dryer, noisy restaurant 80 Average city traffic, garbage disposals, alarm
- 80 Average city traffic, garbage disposals, alarm clock at two feet.

### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

- Subway, motorcycle, truck traffic, lawn mower
- Garbage truck, chain saw, pneumatic drill
- 120 Rock band concert in front of speakers, thunderclap
- 140 Gunshot blast, jet plane
- 180 Rocket launching pad

Information courtesy of the Deafness Research Foundation.





72

En

XRB3013A.68.74



XRB3013A.68.74 01.12.12, 5:13 PM

Downloaded from www.Manualslib.com manuals search engine

74

XRB3013A.68.74 74 01.12.12, 5:13 PM

XRB3013A.68.74 01.12.12, 5:13 PM



### 800-421-1404

Please do not ship your product to Pioneer without first calling the Customer Service Department at the above listed number for assistance.

PIONEER ELECTRONICS (USA) INC. CUSTOMER SERVICE DEPARTMENT P.O. BOX 1760, LONG BEACH, CA 90801-1760, U.S.A.

For warranty information please see the Limited Warranty sheet included with your product.

Should this product require service in Canada, please contact a Pioneer Canadian Authorized Dealer to locate the nearest Pioneer Authorized Service Company in Canada.

Alternatively, please contact the Customer Service Department at the following address:

Pioneer Electronics of Canada, Inc. Customer Service Department 300 Allstate Parkway, Markham, Ontario L3R OP2 (905) 479-4411 1-877-283-5901

For warranty information please see the Limited Warranty sheet included with your product.

Si ce produit doit être réparé au Canada, veuillez vous adresser à un distributeur autorisée Pioneer au Canada pour obtenir le nom de la Société de Service Autorisée Pioneer le plus près de chez vous. Ou encore, veuillez vous communiquer avec le Service de Clientèle de Pioneer:

> Pioneer électroniques du Canada, Inc. Département de service au consommateurs 300 Allstate Parkway, Markham, Ontario L3R OP2 (905) 479-4411 1-877-283-5901

Pour obtenir des renseignements sur la garantie, veuillez vous reporter au feuillet sur la Garantie Limitée gui accompagne le produit.

Published by Pioneer Corporation. Copyright © 2001 Pioneer Corporation. All rights reserved.

### PIONEER CORPORATION

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS [USA] INC. P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway, Markham, Ontario L3R OP2, Canada

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium TEL: 03/570.05.11

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 9586-6300
PIONEER ELECTRONICS DE MEXICO S.A. DE C.V. San Lorenzo 1009 3er Piso Desp. 302 Col. Del Valle Mexico D.F. C.P. 03100
TFI: 55-5688-5290

<TNGZF/01L00001>

Printed in

<XRB3013-A>

XRB3013A.68.74

-