


RTD Temperature EZO™

Circuit

Reads	Temperature
Range	-126.000 °C – 1254 °C
Resolution	0.001
Accuracy	+/- (0.10°C + 0.0017* °C)
Speed	1 reading per sec
Supported probes	Any type & brand PT-100 or PT-1000 RTD
Calibration	Single point
Temperature output	°C, °K, or °F
Data protocol	UART & I²C
Default I ² C address	102 (0x66)
Operating voltage	3.3V – 5.5V
Data format	ASCII
Onboard Data Logger	50 Readings

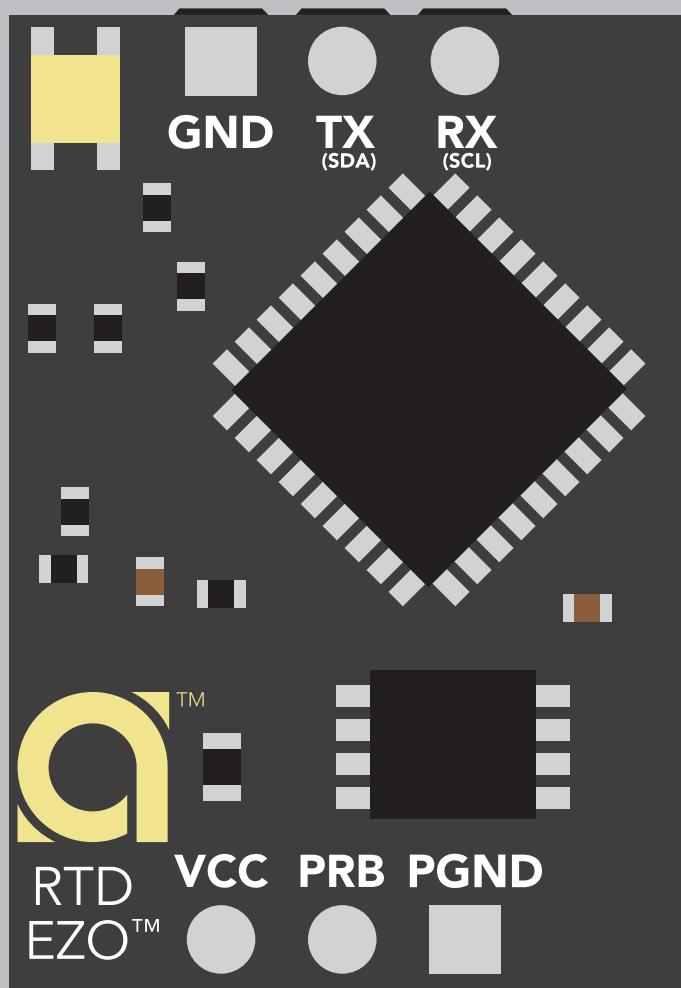

Electrical Isolation not needed






STOP

SOLDERING THIS DEVICE VOIDS YOUR WARRANTY.

This is sensitive electronic equipment. Get this device working in a solderless breadboard first. Once this device has been soldered it is no longer covered by our warranty.

This device has been designed to be soldered and can be soldered at any time. Once that decision has been made, Atlas Scientific no longer assumes responsibility for the device's continued operation. The embedded systems engineer is now the responsible party.

Get this device working in a solderless breadboard first!

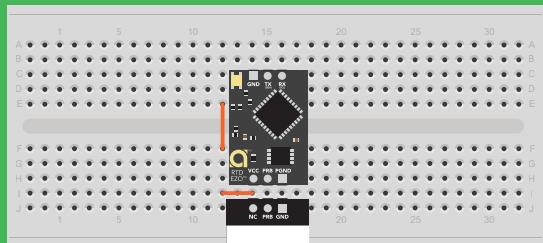

Do not embed this device without testing it in a solderless breadboard!

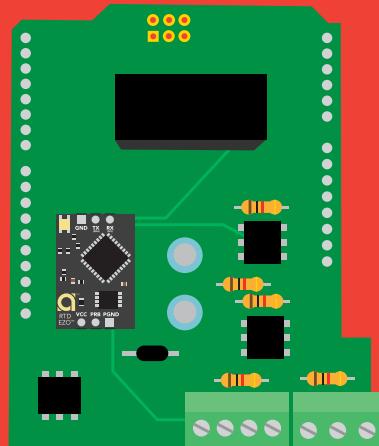


Table of contents

Circuit dimensions	4	Using other brand PT-100/PT-1000	7
Power consumption	4	Operating principle	8
Absolute max ratings	4	Calibration theory	9
Temperature circuit range	5	On board data logger	10
Temperature circuit accuracy	5	Correct wiring	12
Atlas Scientific PT-1000 probe	6	Available data protocols	13


UART

UART mode	15
Default state	16
Receiving data from device	17
Sending commands to device	18
LED color definition	19
UART quick command page	20
LED control	21
Find	22
Continuous reading mode	23
Single reading mode	24
Calibration	25
Export/import calibration	26
Temperature scale	27
Enable/disable data logger	28
Memory recall	29
Memory clear	30
Naming device	31
Device information	32
Response codes	33
Reading device status	34
Sleep mode/low power	35
Change baud rate	36
Protocol lock	37
Factory reset	38
Change to I ² C mode	39
Manual switching to I ² C	40

I²C

I ² C mode	42
Sending commands	43
Requesting data	44
Response codes	45
LED color definition	46
I ² C quick command page	47
LED control	48
Find	49
Taking reading	50
Calibration	51
Export/import calibration	52
Temperature scale	53
Enable/disable data logger	54
Memory recall	55
Memory clear	56
Device information	57
Reading device status	58
Sleep mode/low power	59
Protocol lock	60
I ² C address change	61
Factory reset	62
Change to UART mode	63
Manual switching to UART	64
Circuit footprint	65
Datasheet change log	66
Warranty	67

EZO™ circuit dimensions

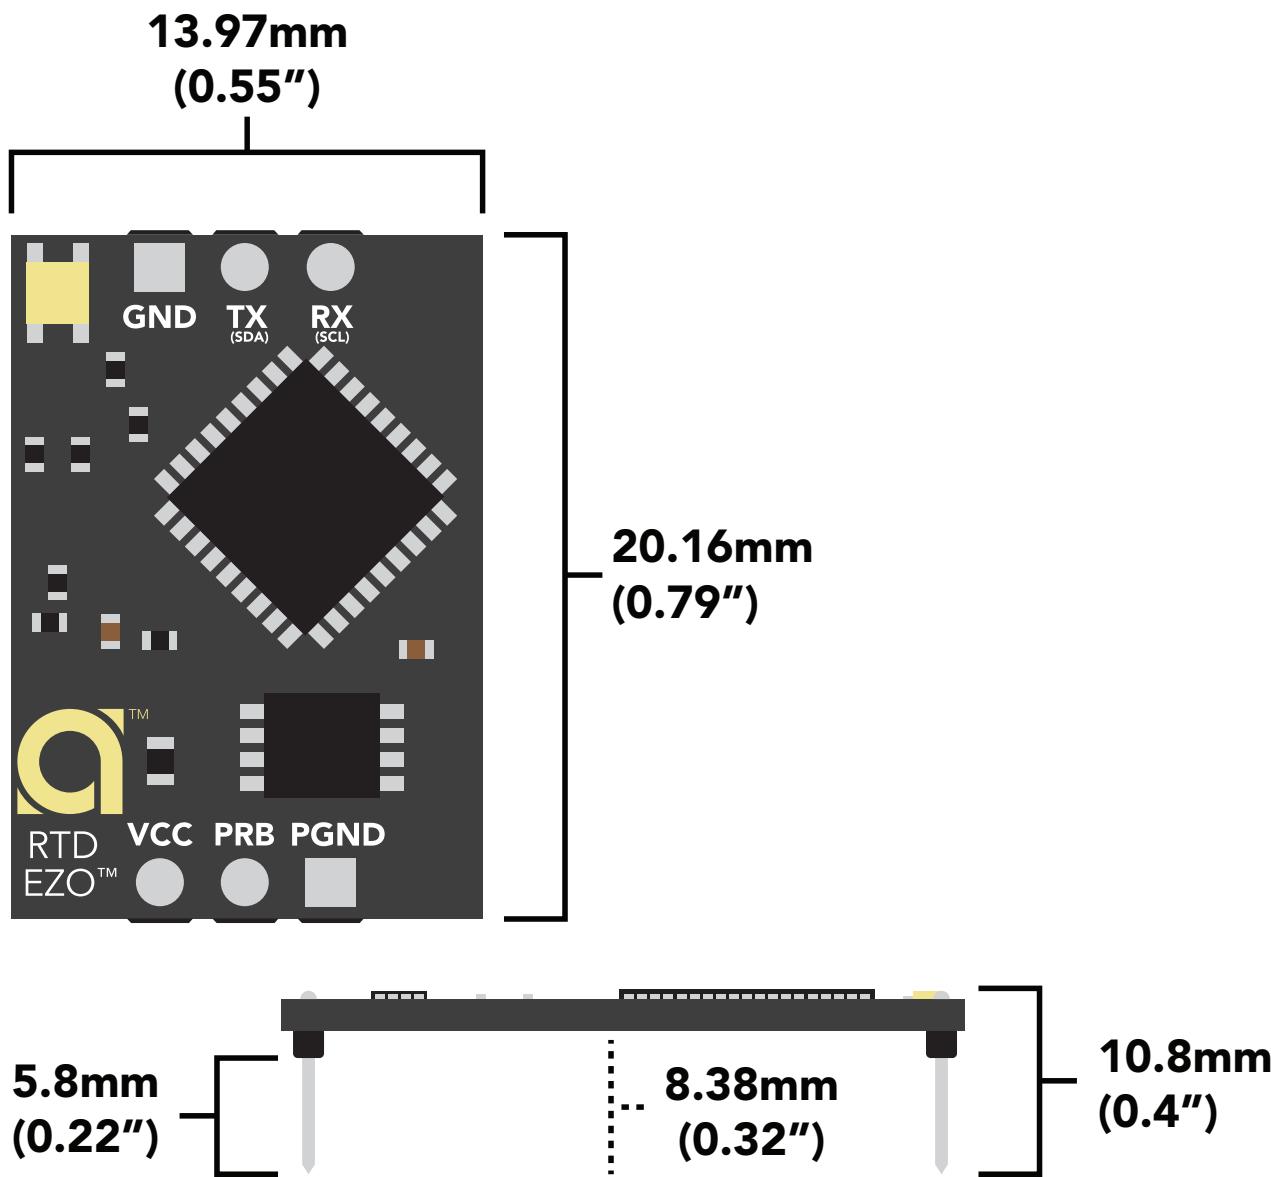


Power consumption

	LED	MAX	STANDBY	SLEEP
5V	ON	16 mA	15.4 mA	0.4 mA
	OFF	15.3 mA	15 mA	
3.3V	ON	14.3 mA	13.8 mA	0.09 mA
	OFF	14 mA	13.6 mA	


Absolute max ratings

Parameter	MIN	TYP	MAX
Storage temperature (EZO™ RTD)	-65 °C		125 °C
Operational temperature (EZO™ RTD)	-40 °C	25 °C	85 °C
VCC	3.3V	5V	5.5V

EZO™ RTD temperature circuit range

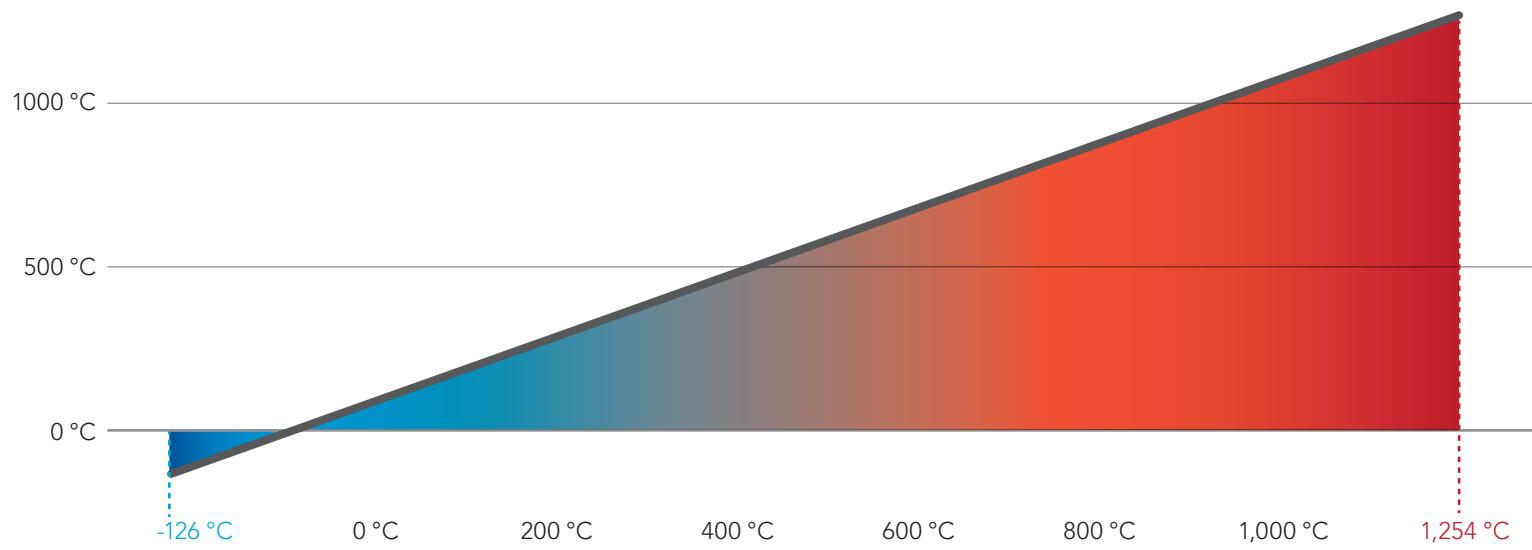

EZO™ RTD temperature circuit accuracy

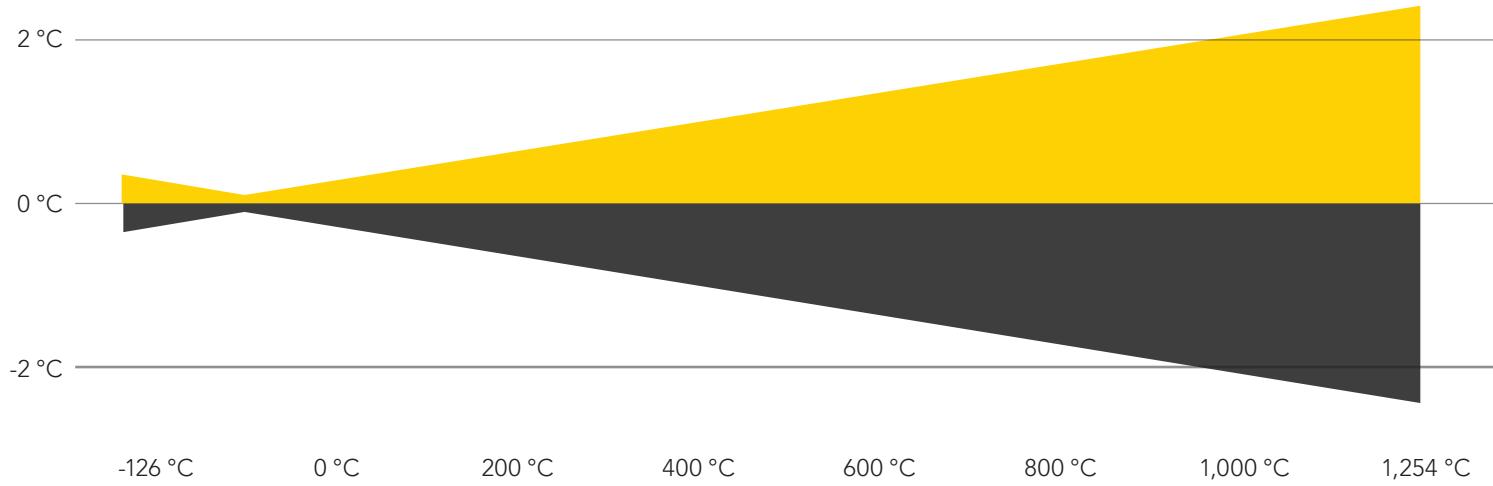

Atlas Scientific PT-1000 probe

- Accuracy +/- (0.15 + (0.002*t))
- Probe type: class A platinum, RTD
- Cable length: 81cm (32")
- Cable material: silicone rubber
- 30mm sensing area (304 SS)
- 6mm diameter
- BNC connector
- Reaction time: 90% value in 13 seconds
- Probe output: analog
- Full sensing range -200 °C to 850 °C
- Cable max temp 125 °C
- Cable min temp -55 °C

The Atlas Scientific EZO™ RTD Temperature circuit only works with PT-100 and PT-1000 probes.



To read temperatures above, or below the max cable temperature, an additional probe housing (thermowell) is needed to protect the cable.



100mm Temperature Thermowell



50mm Temperature Thermowell





30mm Temperature Thermowell

Using other brand PT-100/PT-1000


The EZO™ RTD Temperature circuit will auto-detect if the connected probe is PT-100 or PT-1000.

Probe class	Accuracy
AA	$\pm(0.10^\circ\text{C} + 0.0017^* \text{T})$
A	$\pm(0.15^\circ\text{C} + 0.002^* \text{T})$
B	$\pm(0.3^\circ\text{C} + 0.005^* \text{T})$
C	$\pm(0.6^\circ\text{C} + 0.01^* \text{T})$

It makes no difference which lead of the temperature probe is connected to the two probe pins.

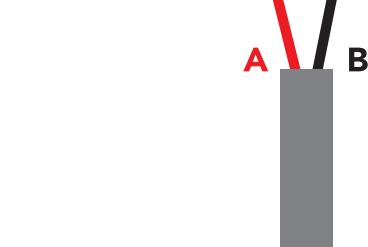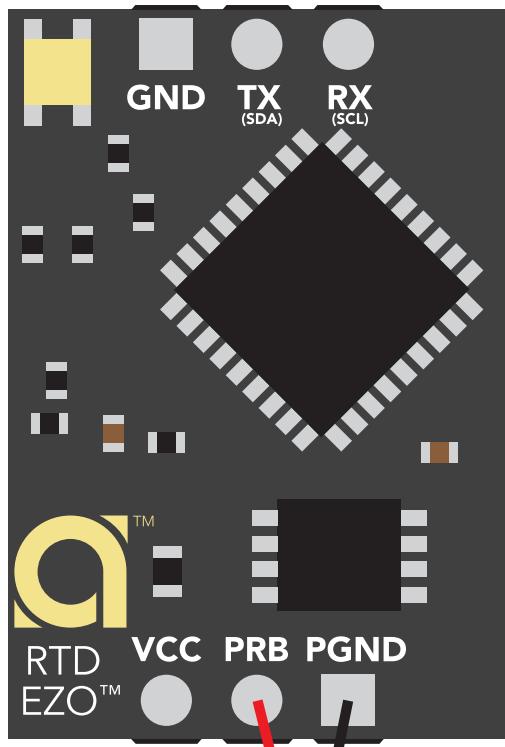

BOTH ARE CORRECT

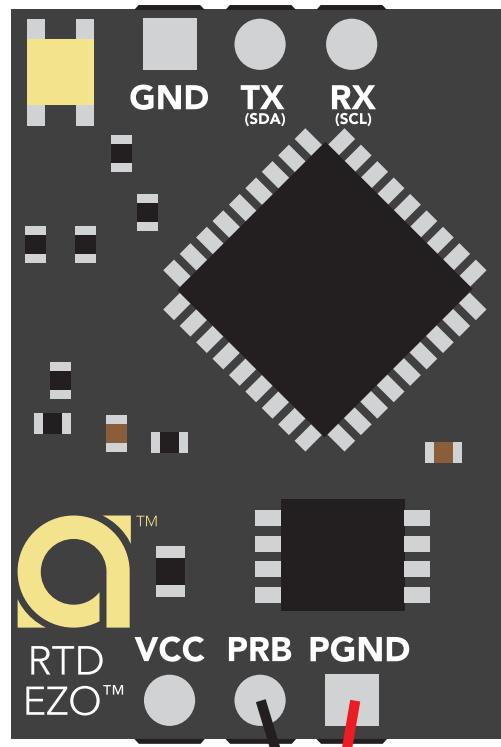

Operating principle

The Atlas Scientific EZO™ RTD Temperature circuit is a small footprint computer system that is specifically designed to be used in robotic applications where the embedded systems engineer requires accurate and precise measurements of temperature through a generic PT-100/PT-1000 temperature probe.


RTD = Resistance Temperature Detector

PT = Platinum

PT-100 = 100 Ω at 0°C

PT-1000 = 1k Ω at 0°C

Unlike any other material, platinum's correlation between resistance and temperature seems to be woven into the fabric of the universe. It is for this reason, that the platinum RTD temperature sensor is the industrial standard for temperature measurement.

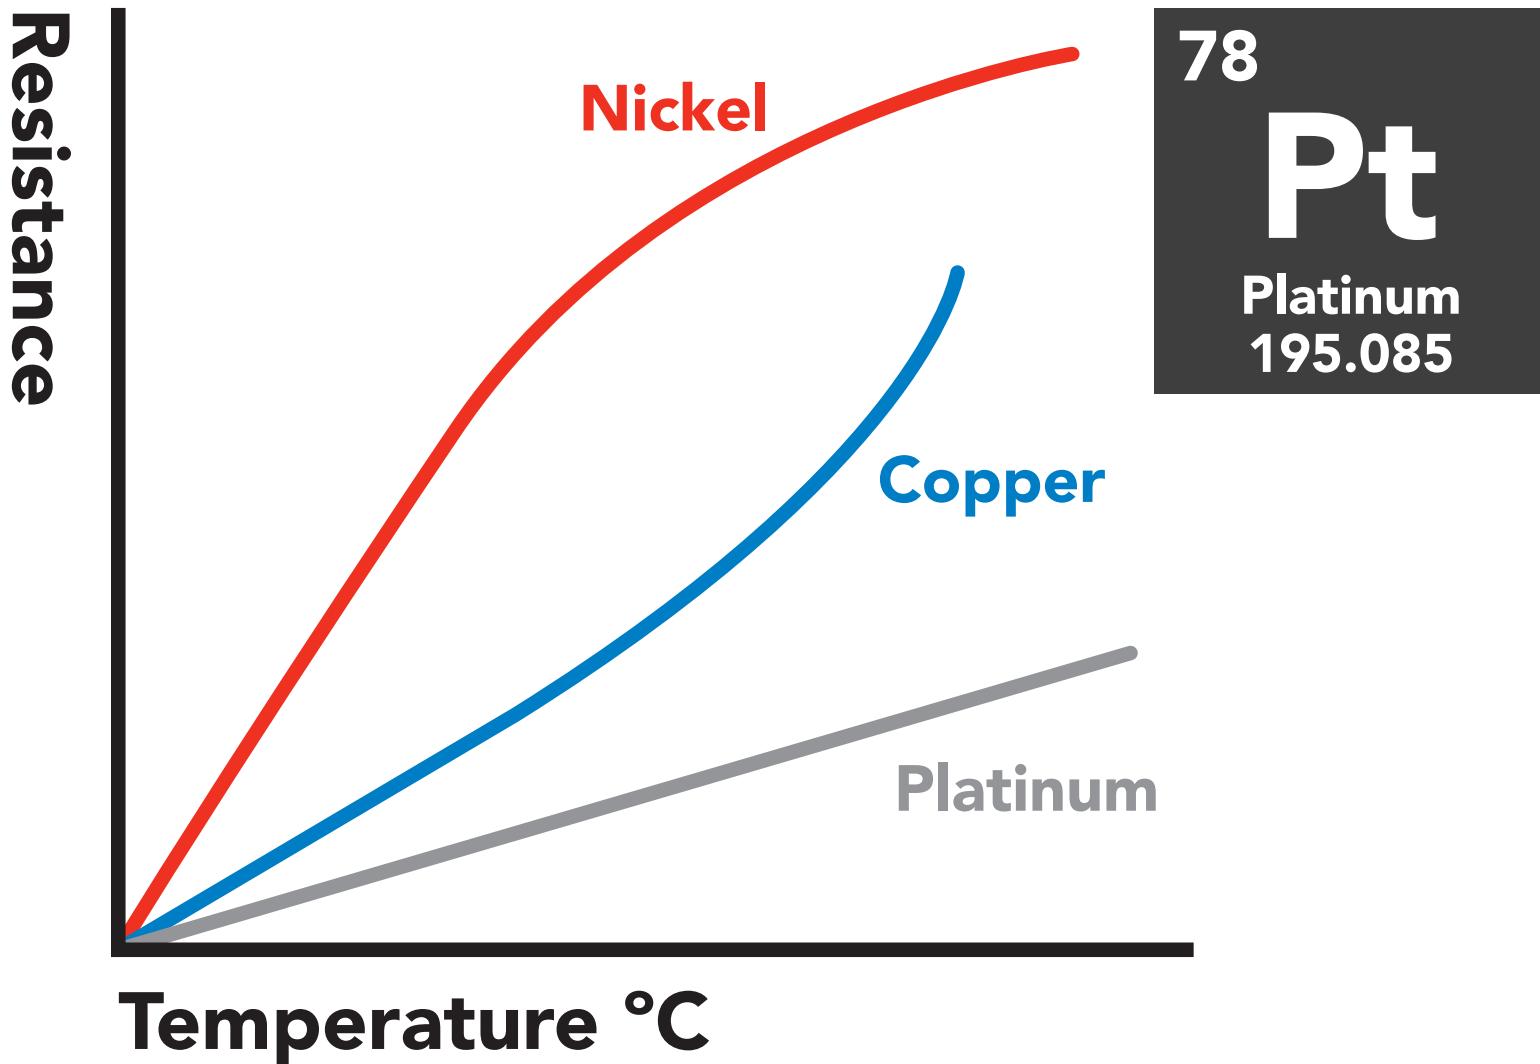

Calibration theory

Calibration can be done at any value, a simple method is to calibrate the probe in boiling water.


100 °C

Atlas Scientific recommends calibration be done every three years.

Elevation and Boiling Point table

Elevation in meters
305
229
152
76
0
-76
-152

Boiling point
98.9 °C
99.2 °C
99.5 °C
99.7 °C
100 °C
100.3 °C
100.5 °C

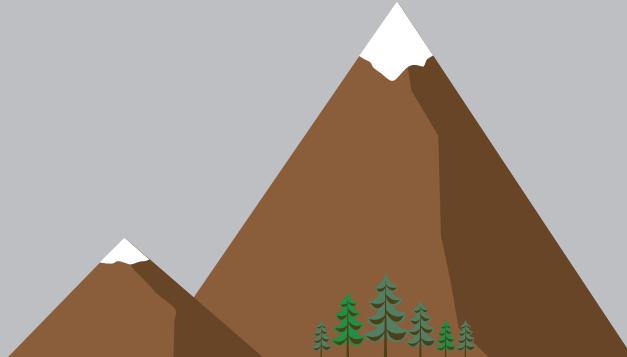

Use purified/distilled water

For accurate calibration using different temperature values, you must use a tool called a "dry block calibrator."


On board data logger

- 50 readings
- Programmable storage interval


Minimum – 10 seconds

Maximum – 320,000 seconds

Temperature readings that are stored to the data logger will be retained even if the power is cut.


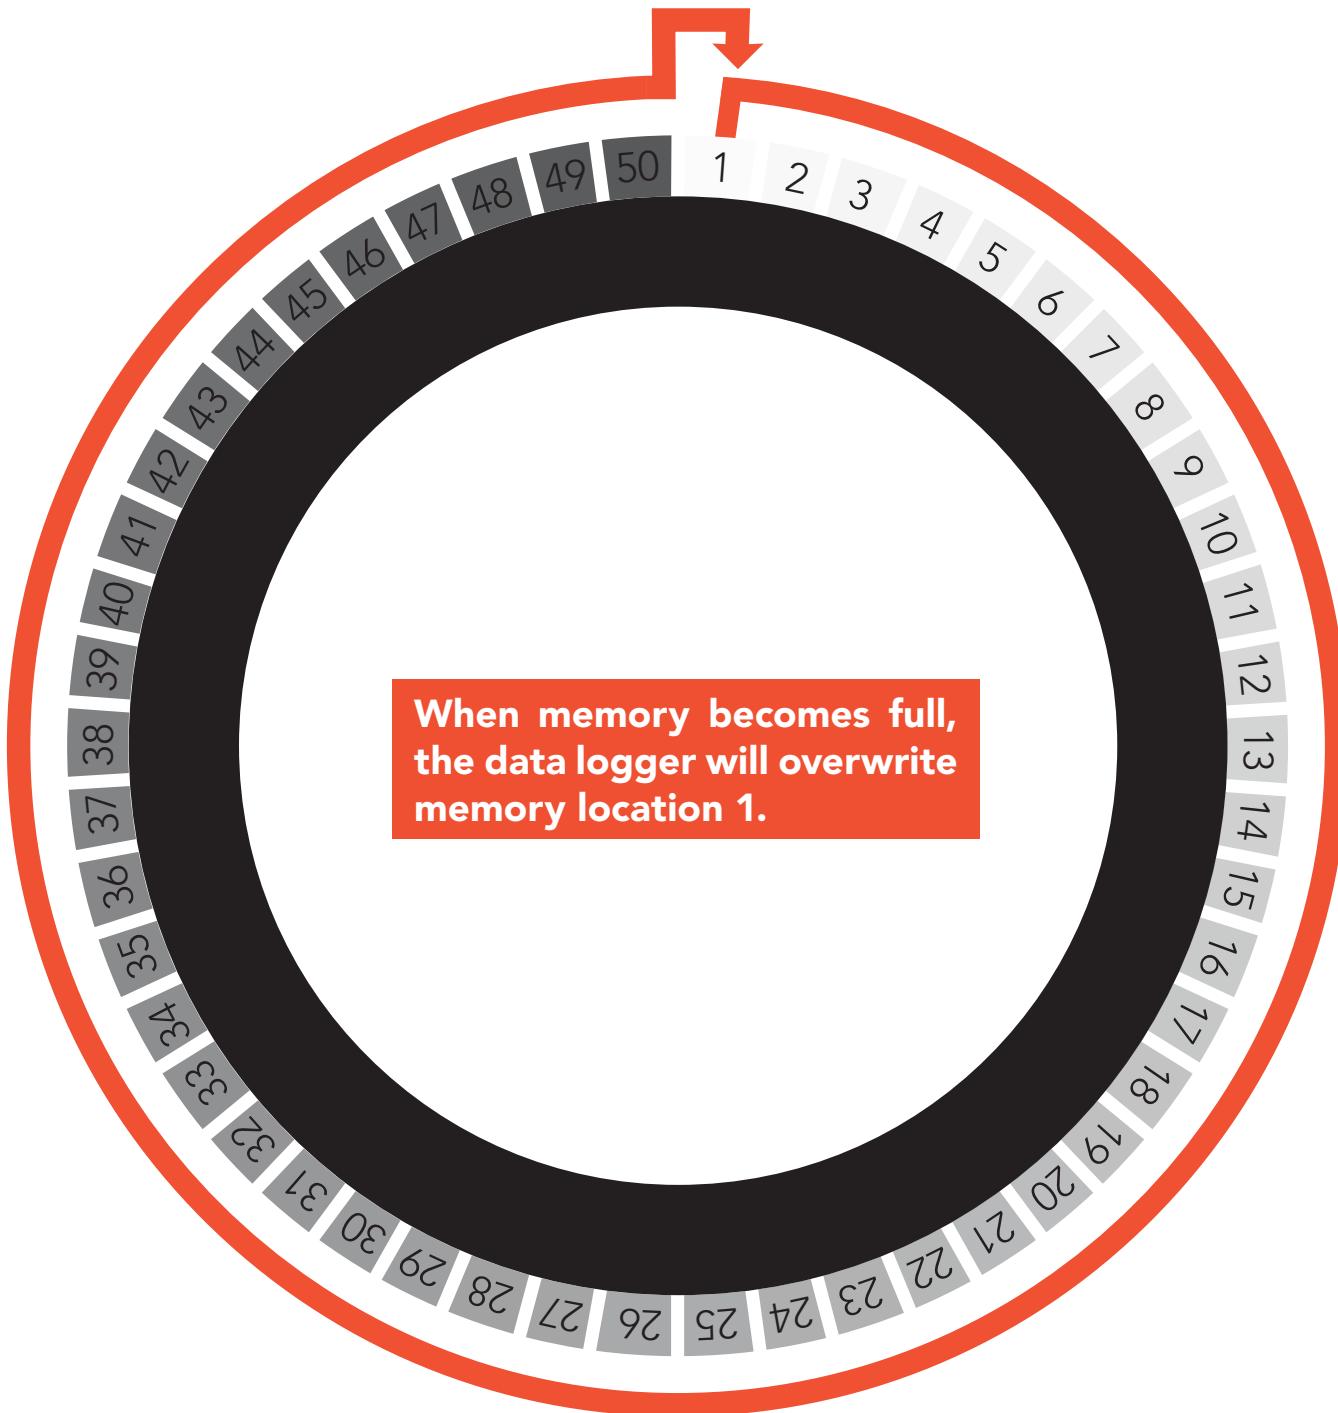


Power and data isolation

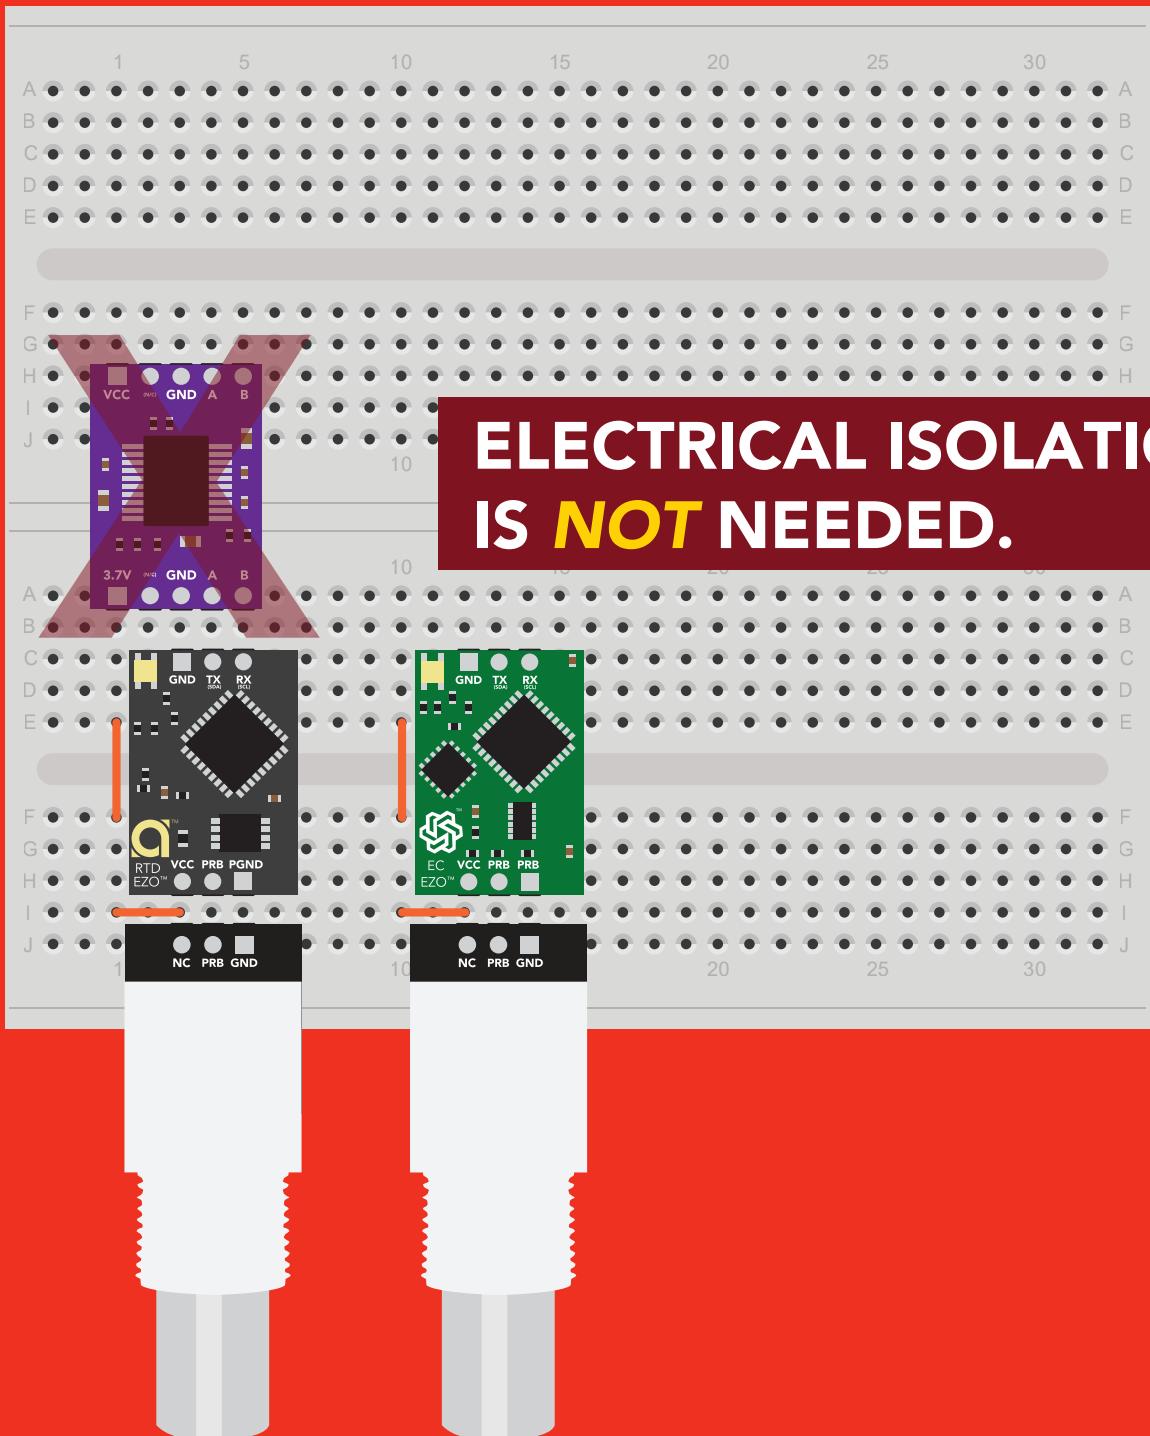


✓ Correct wiring

Bread board

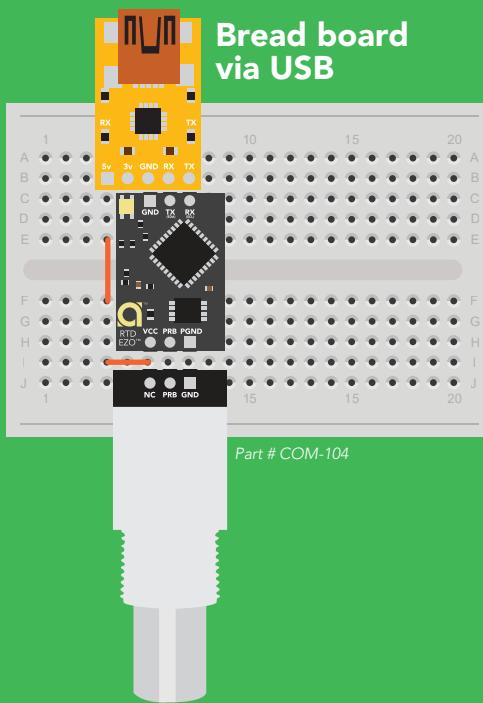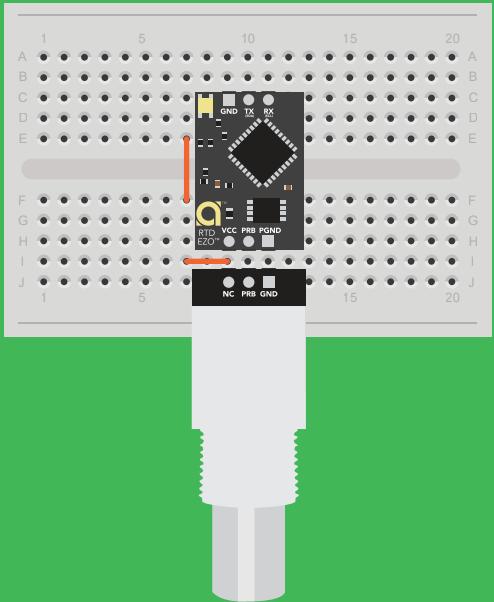

Carrier board

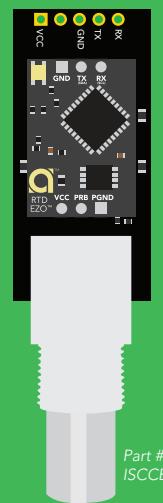


USB carrier board




✗ Incorrect wiring


Extended leads

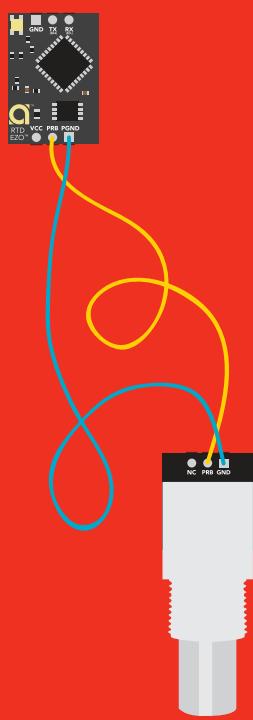


Sloppy setup

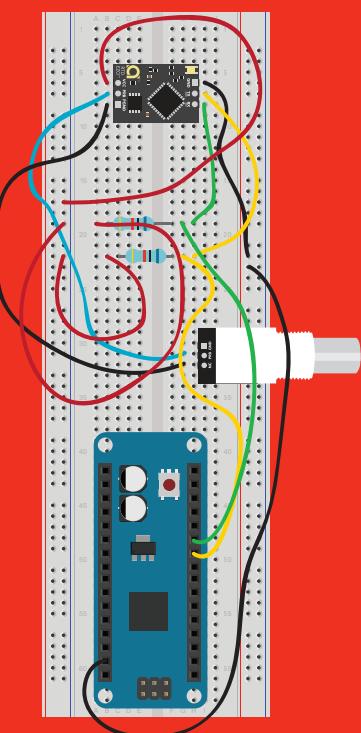

Perfboards or Protoboards

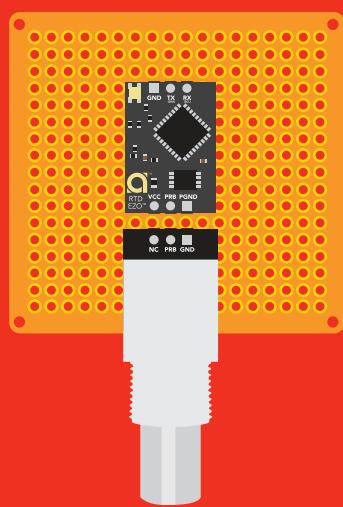

*Embedded into your device

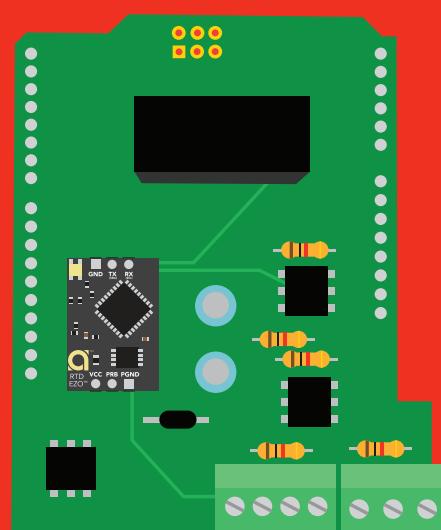

NEVER
use Perfboards
or Protoboards

*Only after you are familiar
with EZO™ circuits operation

 Available data protocols

UART

Default

I²C

 Unavailable data protocols

SPI

Analog

RS-485

Mod Bus

4–20mA

UART mode

Settings that are retained if power is cut

Baud rate
Calibration
Continuous mode
Device name
Enable/disable response codes
Hardware switch to I²C mode
LED control
Protocol lock
Software switch to I²C mode

Settings that are **NOT** retained if power is cut

Find
Sleep mode

UART mode

8 data bits no parity
1 stop bit no flow control

Baud 300
1,200
2,400
9,600 default
19,200
38,400
57,600
115,200

RX Data in




TX Data out



Vcc 3.3V – 5.5V

 VCC

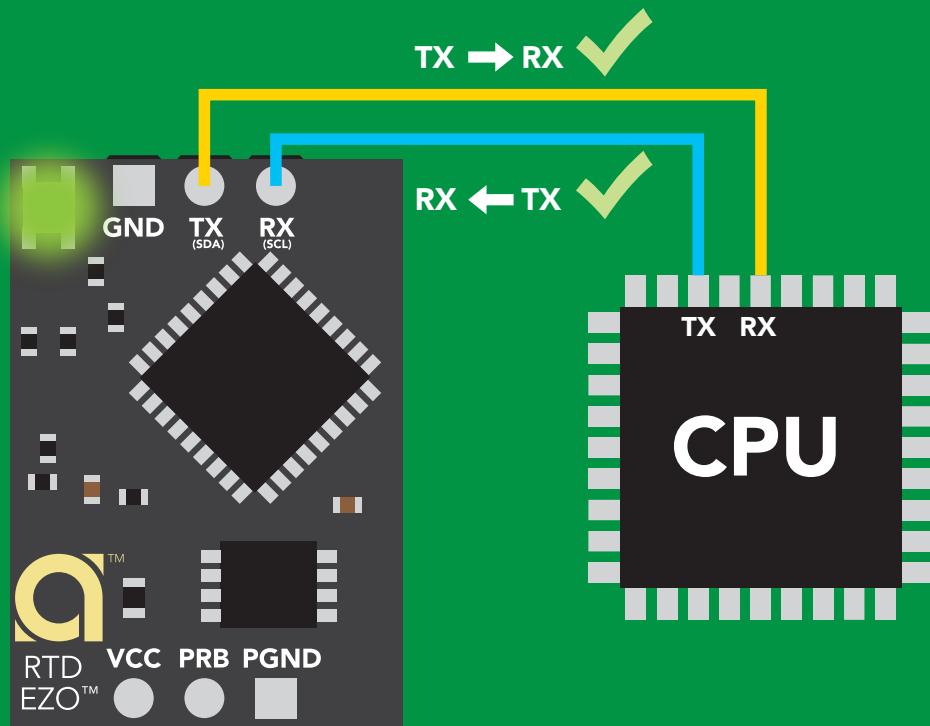 0V


Data format

Reading temperature
Units °C, °K, or °F
Encoding ASCII
Format string
Terminator carriage return

Data type floating point
Decimal places 3
Smallest string 4 characters
Largest string 399 characters



Default state

Mode	UART
Baud	9,600
Temperature	°C
Readings	continuous
Speed	1 reading per second
With probe	ttt.ttt
Without probe	-1023.000
LED	on

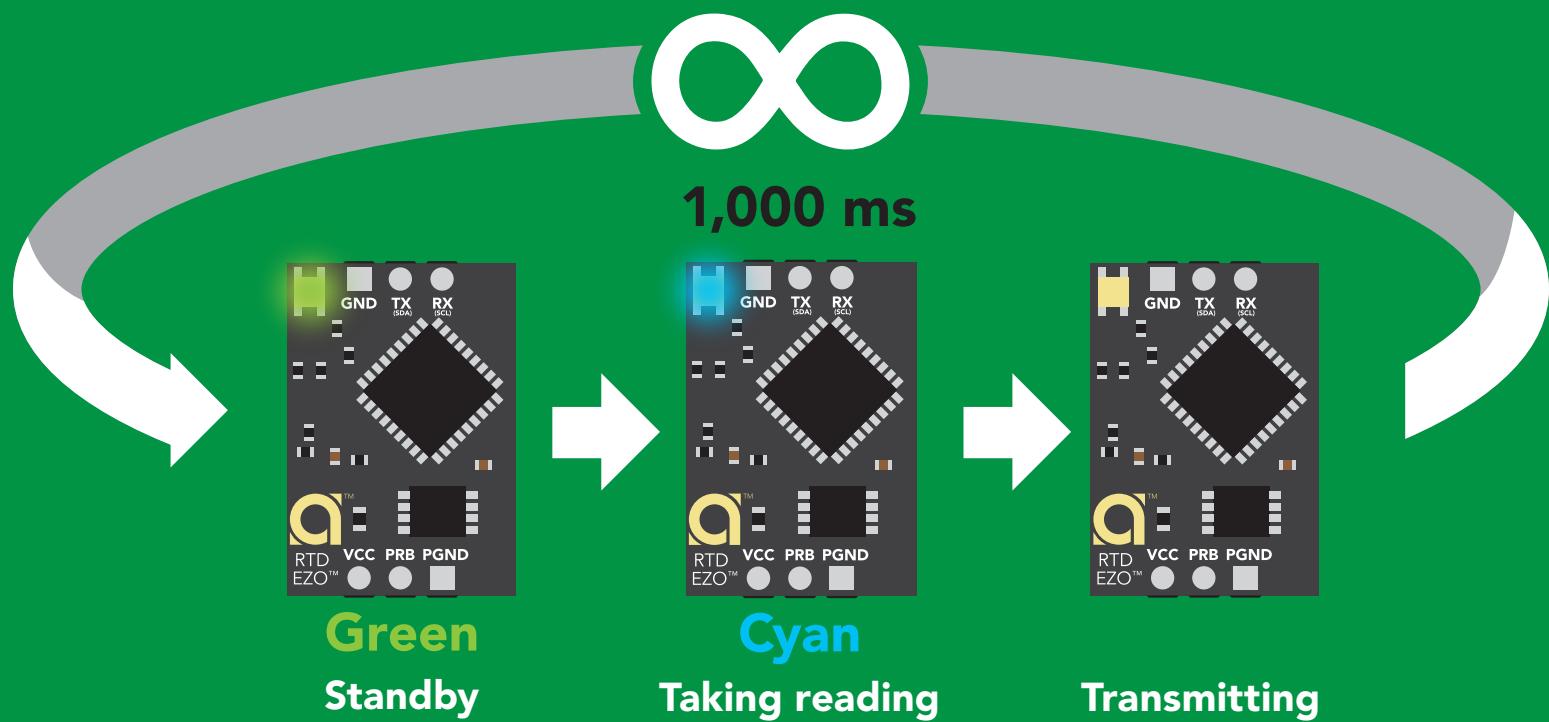

Receiving data from device

2 parts

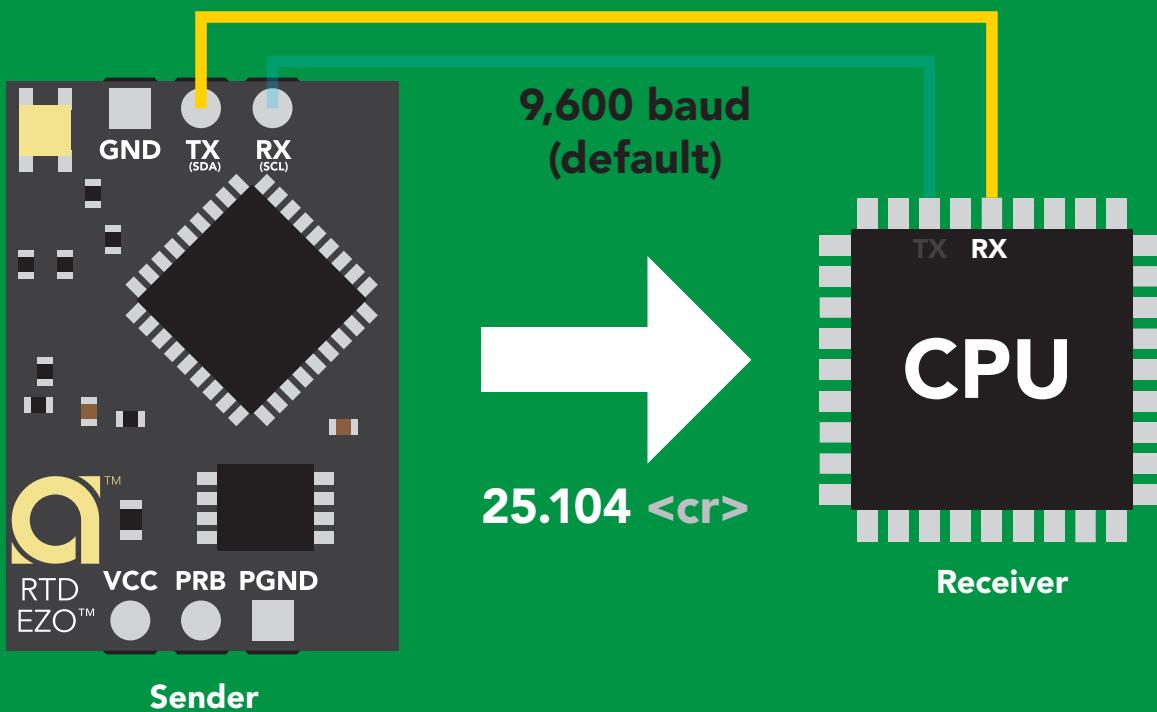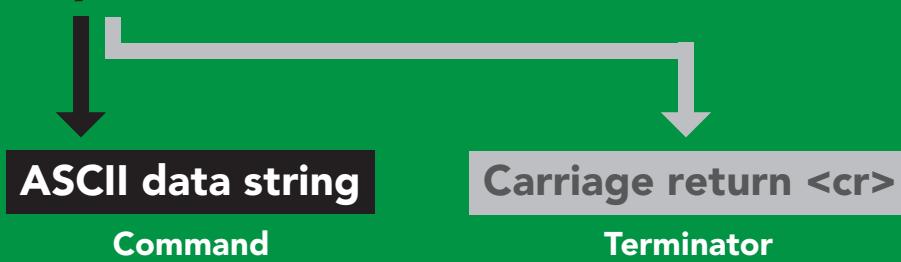

Advanced


ASCII: 2 5 . 1 0 4 <cr>

Hex: 32 35 2E 31 30 34 0D

Dec: 50 53 46 49 48 52 13

Sending commands to device

2 parts

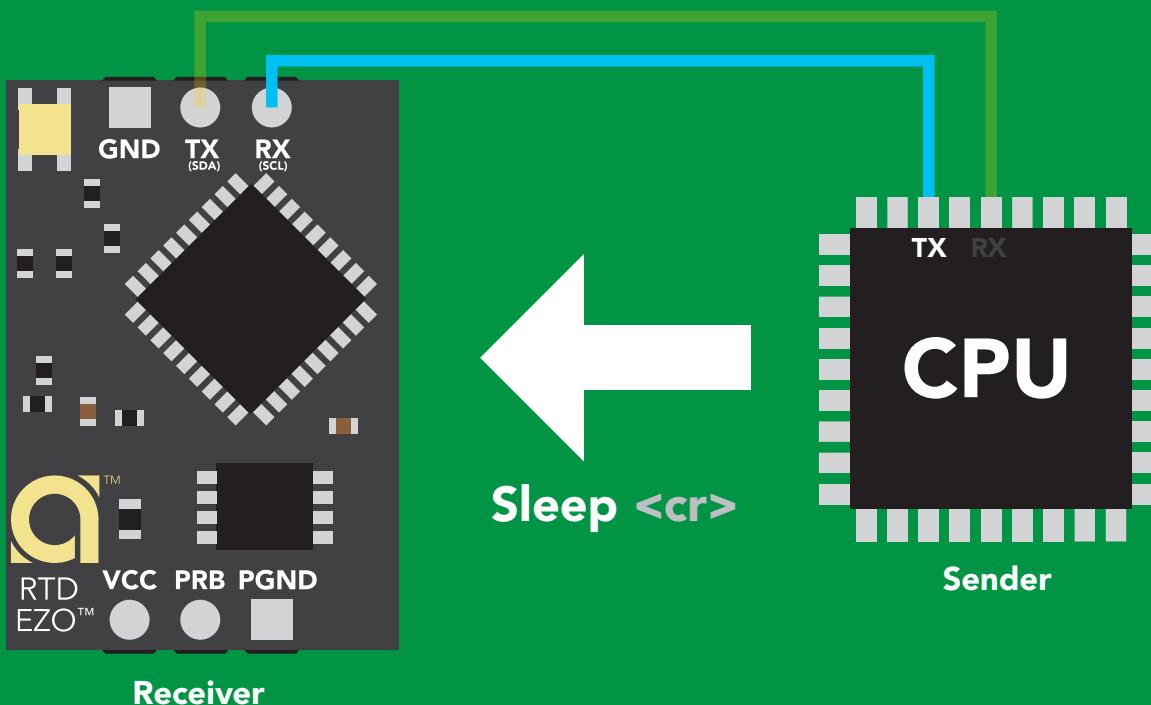


Advanced

ASCII: S I e e p <cr>


Hex: 53 6C 65 65 70 0D

Dec: 83 108 101 101 112 13


LED color definition

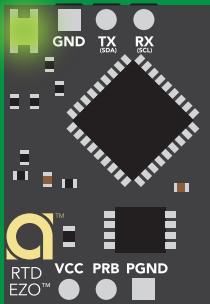


Green
UART standby

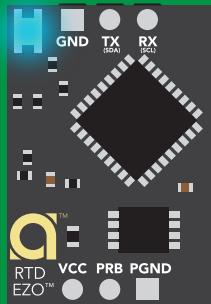


Cyan
Taking reading

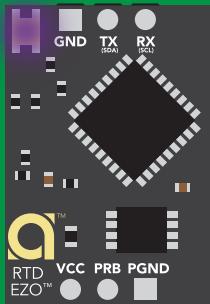

Purple
Changing baud rate

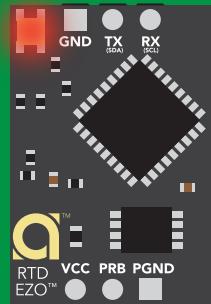

Red
Command not understood

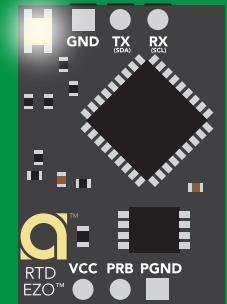

White
Find

5V	LED ON +0.4 mA
3.3V	+0.2 mA

UART mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	Default state
Baud	change baud rate	9,600
C	enable/disable continuous reading	enabled
Cal	performs calibration	n/a
D	enable/disable data logger	disabled
Export/import	export/import calibration	n/a
Factory	enable factory reset	n/a
Find	finds device with blinking white LED	n/a
i	device information	n/a
I2C	change to I ² C mode	not set
L	enable/disable LED	enabled
M	memory recall/clear	n/a
Name	set/show name of device	not set
Plock	enable/disable protocol lock	disabled
R	returns a single reading	n/a
S	temperature scale (°C, °K, °F)	celsius
Sleep	enter sleep mode/low power	n/a
Status	retrieve status information	n/a
*OK	enable/disable response codes	enable

LED control

Command syntax

L,1 <cr> LED on **default**

L,0 <cr> LED off

L,? <cr> LED state on/off?

Example

Response

L,1 <cr>

*OK <cr>


L,0 <cr>

*OK <cr>


L,? <cr>

?L,1 <cr> or ?L,0 <cr>

*OK <cr>

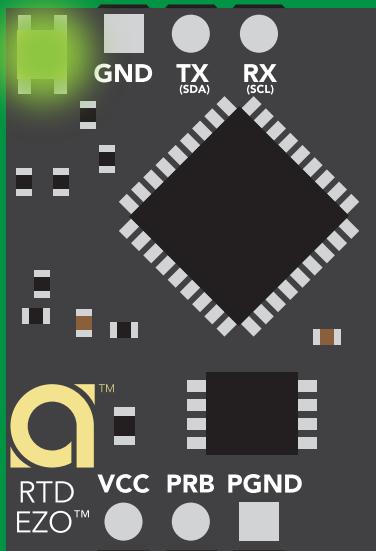

L,1

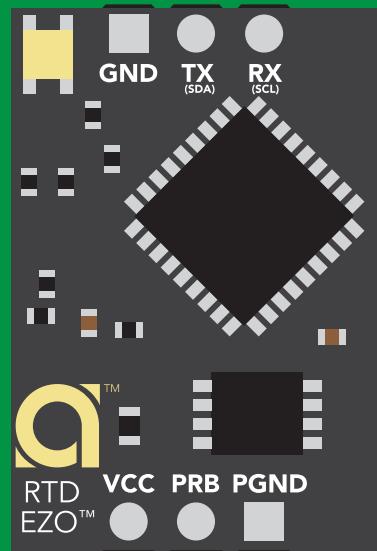

L,0

Find

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.


Find <cr> LED rapidly blinks white, used to help find device*

*This command is only available for firmware version 2.10 and above.

Example Response

Find <cr>

*OK <cr>

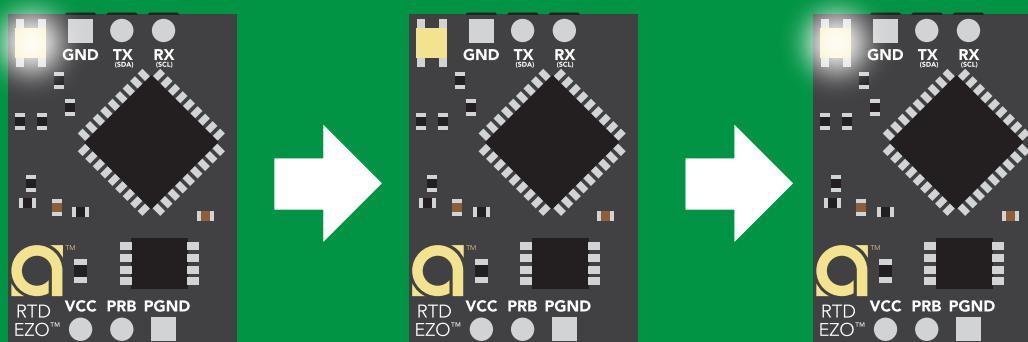

Continuous reading mode

Command syntax

- C,1 <cr> enable continuous readings once per second **default**
- C,n <cr> continuous readings every n seconds (n = 2 to 99 sec)*
- C,0 <cr> disable continuous readings
- C,? <cr> continuous reading mode on/off?

*This command is only available for firmware version 2.10 and above.

Example Response

C,1 <cr>

*OK <cr>

°C (1 sec) <cr>

°C (2 sec) <cr>

°C (n sec) <cr>

C,30 <cr>

*OK <cr>

°C (30 sec) <cr>

°C (60 sec) <cr>

°C (90 sec) <cr>

C,0 <cr>

*OK <cr>

C,? <cr>

?C,1 <cr> or ?C,0 <cr> or ?C,30 <cr>

*OK <cr>

Single reading mode

Command syntax


R <cr> takes single reading

Example Response


R <cr>

25.104 <cr>


*OK <cr>

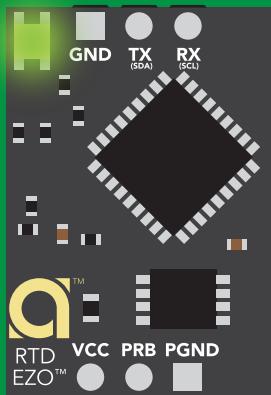

Green
Standby

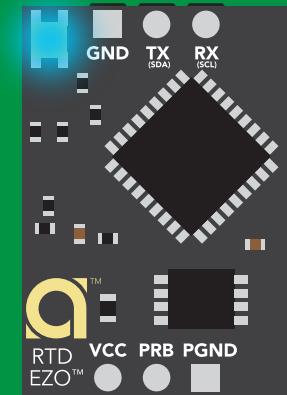

Cyan
Taking reading

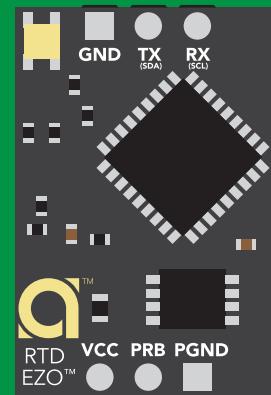

Transmitting



Calibration

Command syntax

The EZO™ RTD circuit uses single point calibration.

Cal,t <cr> t = any temperature

Cal,clear <cr> delete calibration data

Cal,? <cr> device calibrated?

Example

Cal,100.00 <cr>

Response

***OK <cr>**


Cal,clear <cr>

***OK <cr>**

Cal,? <cr>

?Cal,1 <cr> or ?Cal,0 <cr>

***OK <cr>**

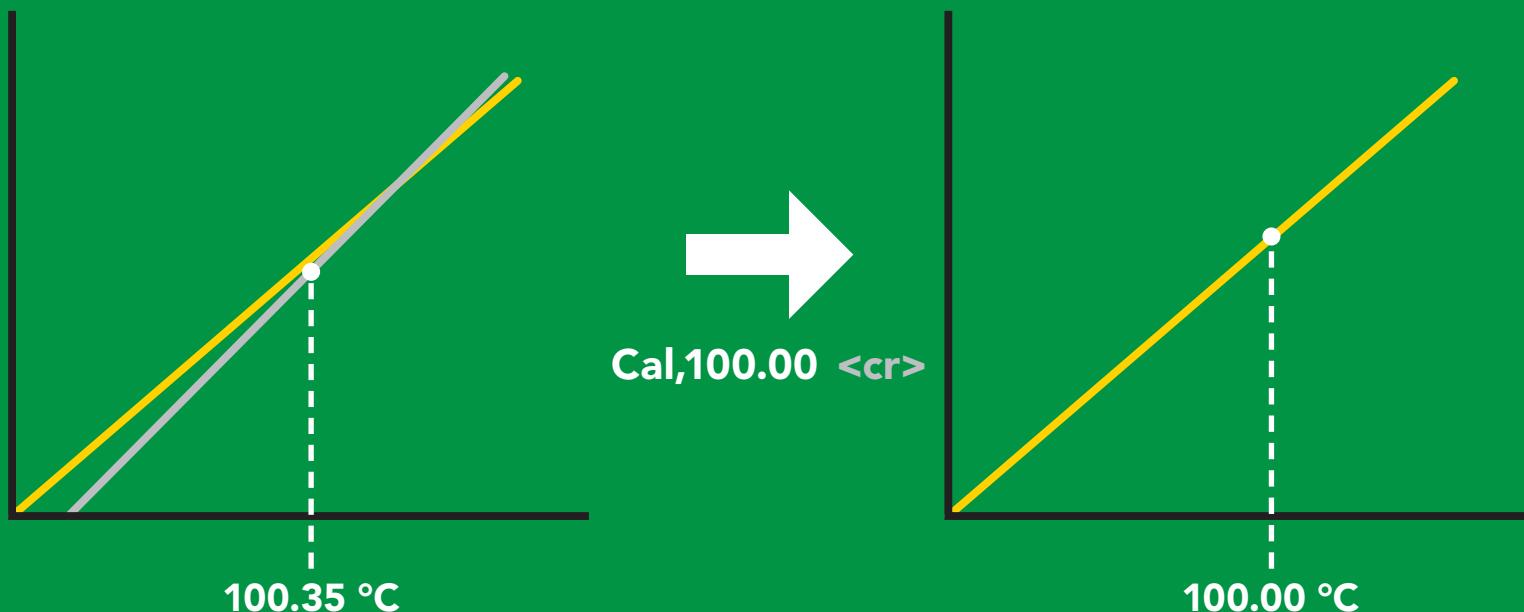

Export/import calibration

Command syntax

Export: Use this command to save calibration settings
Import: Use this command to load calibration settings to one or more devices.

Export <cr> export calibration string from calibrated device*
Import <cr> import calibration string to new device*
Export,? <cr> calibration string info*

*This command is only available for firmware version 2.10 and above.

Example

Export,? <cr>

Response

10,120 <cr>

Response breakdown

10, 120

↑ ↑
of strings to export # of bytes to export

Export strings can be up to 12 characters long, and is always followed by <cr>

Export <cr>

59 6F 75 20 61 72 <cr> (1 of 10)

Export <cr>

65 20 61 20 63 6F <cr> (2 of 10)

(7 more)

⋮

Export <cr>

6F 6C 20 67 75 79 <cr> (10 of 10)

Export <cr>

*DONE

Disabling *OK simplifies this process

Import, n
(FIFO)

Import, 59 6F 75 20 61 72 <cr> (1 of 10)

Temperature scale (°C, °K, °F)

Command syntax

S,c <cr> celsius **default**
S,k <cr> kelvin
S,f <cr> fahrenheit
S,? <cr> temperature scale?

Example Response

S,c <cr>

***OK <cr>**

S,k <cr>

***OK <cr>**




S,f <cr>

***OK <cr>**

S,? <cr>

?S,c <cr> or ?S,k <cr> or ?S,f <cr>

***OK <cr>**

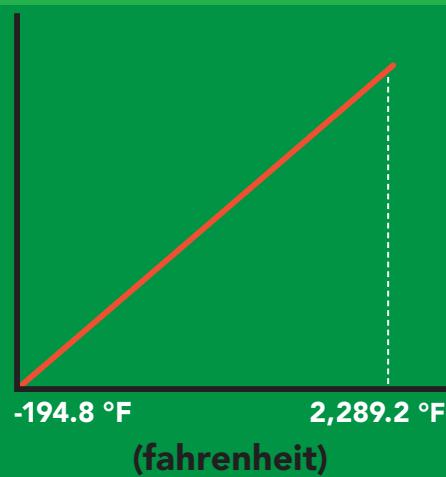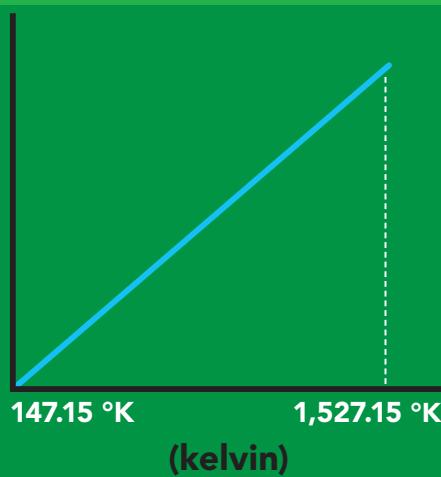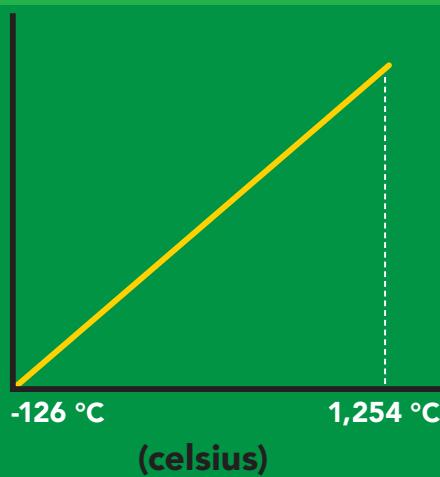

Enable/disable data logger

Command syntax

The time period (n) is in 10 second intervals and can be any value from 1 to 32,000.

D,n <cr> n = (n x 10 seconds)

D,0 <cr> disable default

D,? <cr> data logger storage interval?

Example

D,6 <cr>

*OK <cr>



D,0 <cr>

*OK <cr>

D,? <cr>

?D,6 <cr>
*OK <cr>

Response

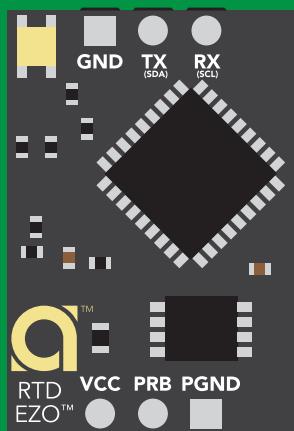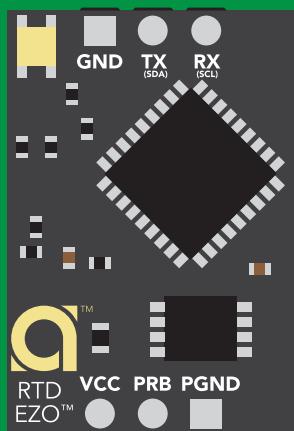

D,6

60 seconds

* <cr>

* indicates reading has been logged

Memory recall

Command syntax

Disable data logger to recall memory.

M <cr> recall 1 sequential stored reading

M,all <cr> recall all readings in a CSV string

M,? <cr> display memory location of last stored reading

Example

Response

M <cr>


1,100.00 <cr> 2,104.00 <cr> *OK <cr>

M,all <cr>

100.00,104.00,108.00,112.00 <cr>

M,? <cr>

?M,4 <cr>
*OK <cr>

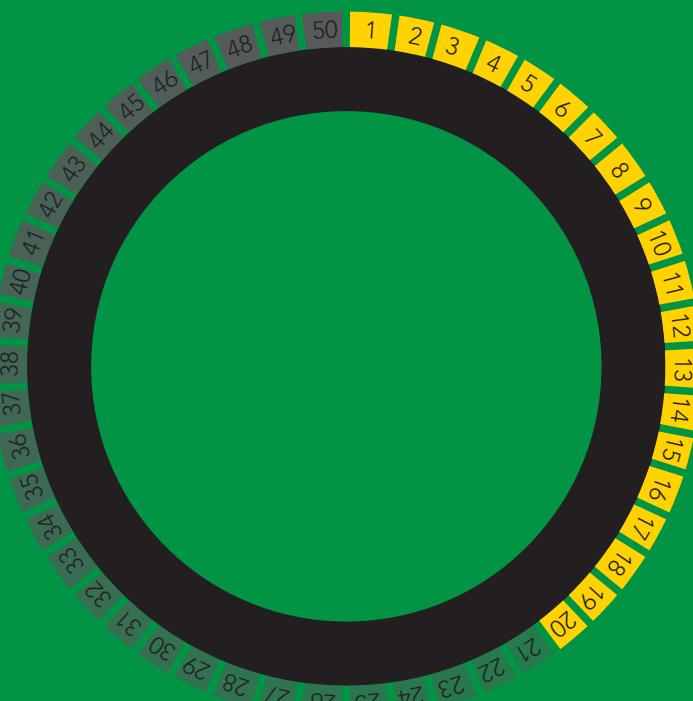

Memory clear


Command syntax

M,clear <cr> clear all stored memory

Example Response

M,clear <cr>

***OK <cr>**

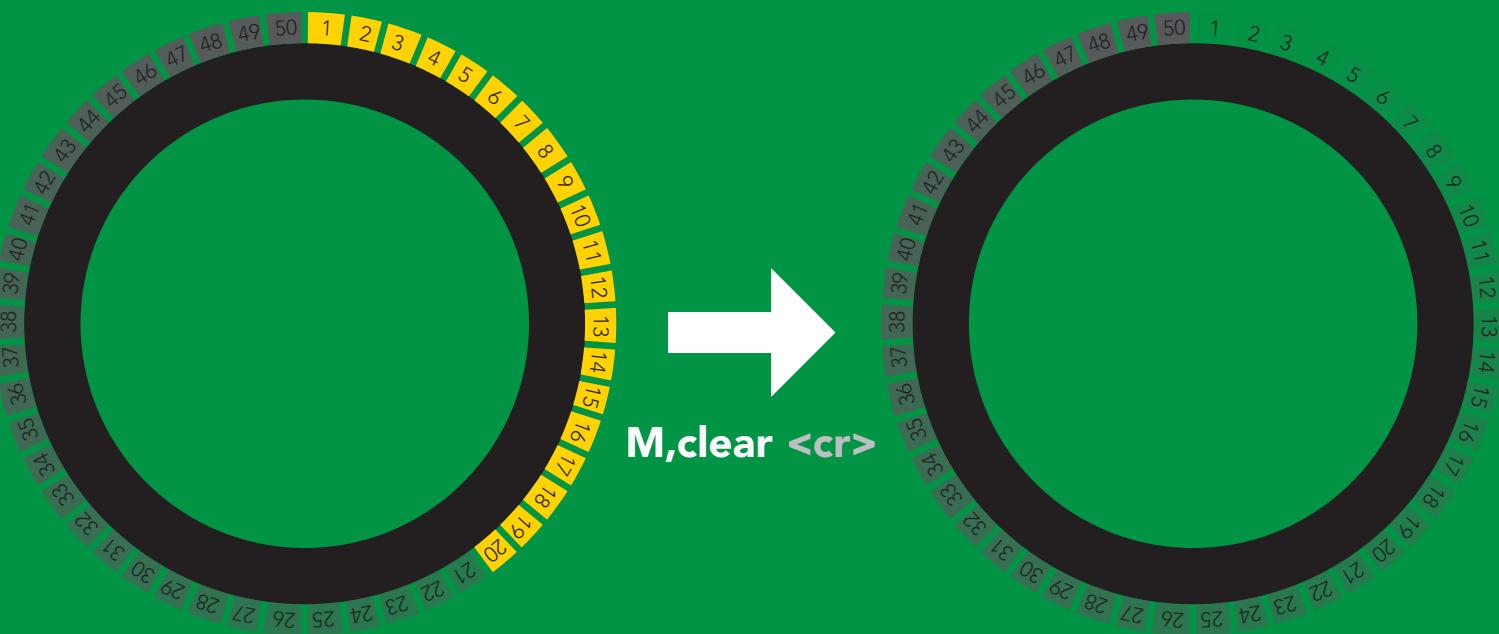

Naming device

Command syntax

Name,n <cr> set name

n =
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Name,? <cr> show name

Up to 16 ASCII characters

Example

Name,zzt <cr>

*OK <cr>


Name,? <cr>

?Name,zzt <cr>

*OK <cr>


Response

Name,zzt

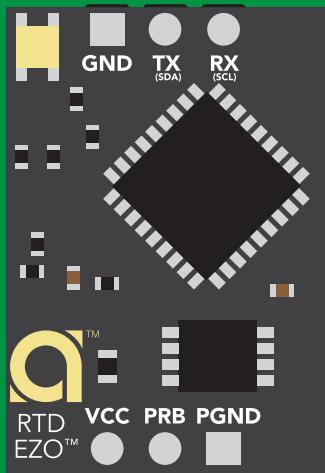

*OK <cr>

Name,?

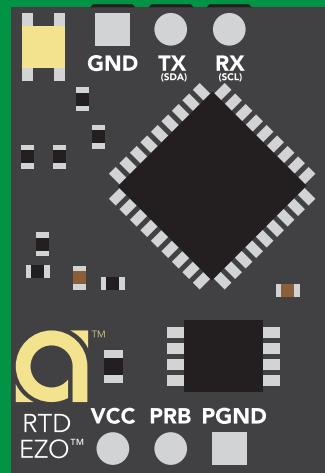

Name,zzt <cr>
*OK <cr>

Device information

Command syntax

i <cr> device information

Example Response

i <cr>

?i,RTD,2.01 <cr>
*OK <cr>

Response breakdown

?i, RTD, 2.01
↑ ↑
Device Firmware

Response codes

Command syntax

*OK,1 <cr> enable response **default**
*OK,0 <cr> disable response
*OK,? <cr> response on/off?

Example

Response

R <cr>

25.104 <cr>

***OK <cr>**

***OK,0 <cr>**

no response, *OK disabled

R <cr>

25.104 <cr> *OK disabled

***OK,? <cr>**

?*OK,1 <cr> or ?*OK,0 <cr>

Other response codes

*ER unknown command
*OV over volt (VCC>=5.5V)
*UV under volt (VCC<=3.1V)
*RS reset
*RE boot up complete, ready
*SL entering sleep mode
*WA wake up

These response codes
cannot be disabled

Reading device status

Command syntax

Status <cr> voltage at Vcc pin and reason for last restart

Example Response

Status <cr>

?Status,P,5.038 <cr>

***OK <cr>**

Response breakdown

?Status, P, 5.038

Reason for restart

Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Send any character or command to awaken device.

Sleep <cr> enter sleep mode/low power

Example

Sleep <cr>

Response


*SL

Any command


*WA <cr> wakes up device

	STANDBY	SLEEP
5V	15.40 mA	0.4 mA


3.3V	13.80 mA	0.09 mA
------	----------	---------

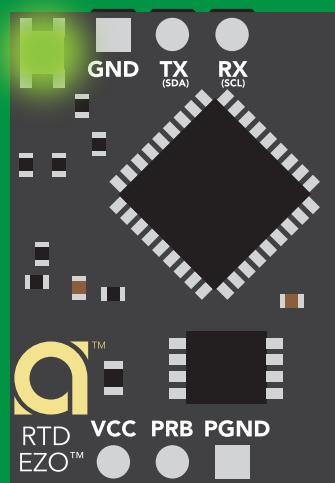

Standby
15.40 mA

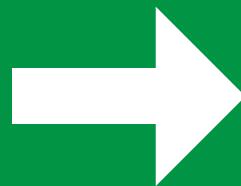

Sleep <cr>

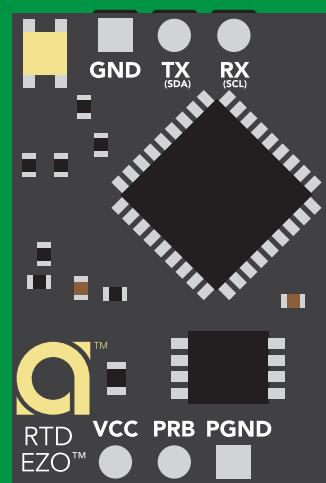

Sleep
3.00 mA

Change baud rate

Command syntax

Baud,n <cr> change baud rate

Example

Baud,38400 <cr>

Response


*OK <cr>

Baud,? <cr>

?Baud,38400 <cr>

*OK <cr>


n = [300
1200
2400
9600 default
19200
38400
57600
115200]

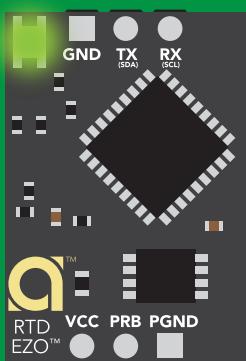

Standby



Baud,38400 <cr>

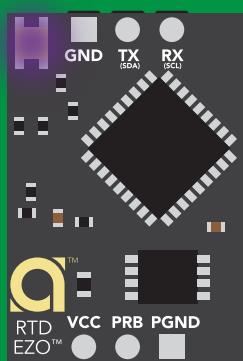


Changing
baud rate

*OK <cr>



(reboot)

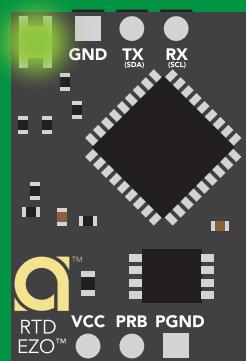

Standby

Protocol lock

Command syntax

Locks device to UART mode.

Plock,1 <cr> enable Plock

Plock,0 <cr> disable Plock

Plock,? <cr> Plock on/off?

Example

Plock,1 <cr>

Plock,0 <cr>


Plock,? <cr>

Response

***OK <cr>**


***OK <cr>**

?Plock,1 <cr> or ?Plock,0 <cr>

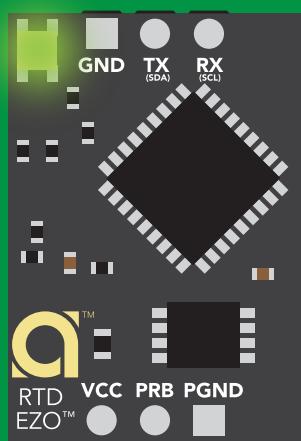

***OK <cr>**


I²C,100

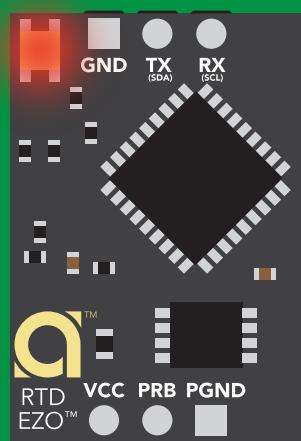

cannot change to I²C

***ER <cr>**

Short

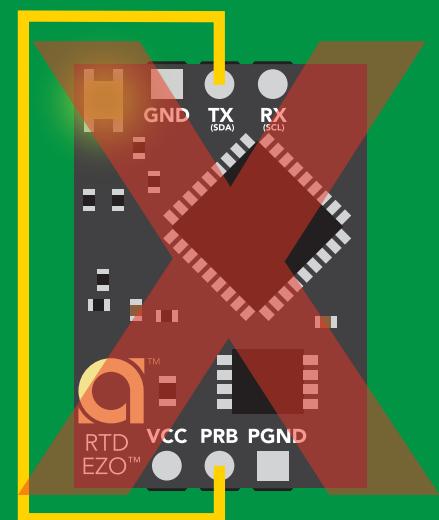

cannot change to I²C

Factory reset

Command syntax

Clears calibration
LED on
"*OK" enabled
Clears data logger


Factory <cr> enable factory reset

Example Response


Factory <cr>

*OK <cr>

Factory <cr>

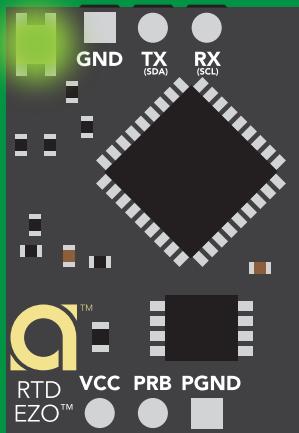

(reboot)

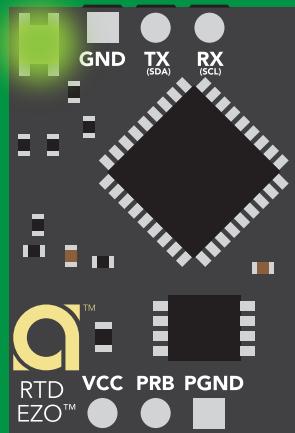

*OK <cr>

*RS <cr>

*RE <cr>

Baud rate will not change

Change to I²C mode

Command syntax

Default I²C address 102 (0x66)

I²C,n <cr> sets I²C address and reboots into I²C mode

n = any number 1 – 127

Example Response

I²C,100 <cr>

*OK (reboot in I²C mode)



Wrong example

I²C,139 <cr> n ≠ 127


Response

*ER <cr>

I²C,100

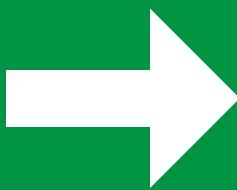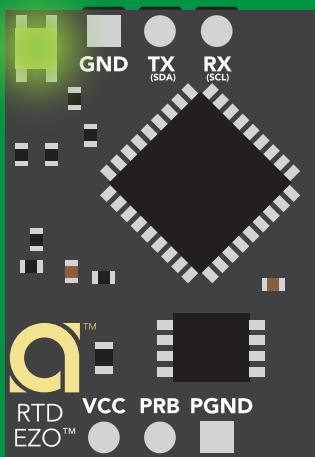

(reboot)

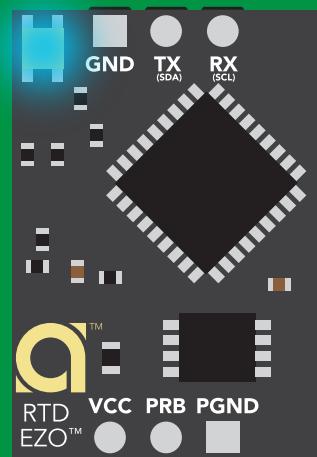

Green
*OK <cr>

Blue
now in I²C mode


Manual switching to I²C

- Make sure Plock is set to 0
- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from Green to Blue
- Disconnect ground (power off)
- Reconnect all data and power


Connecting TX to PRB only works for the EZO™ RTD Temperature circuit.

Manually switching to I²C will set the I²C address to 102 (0x66)

Example

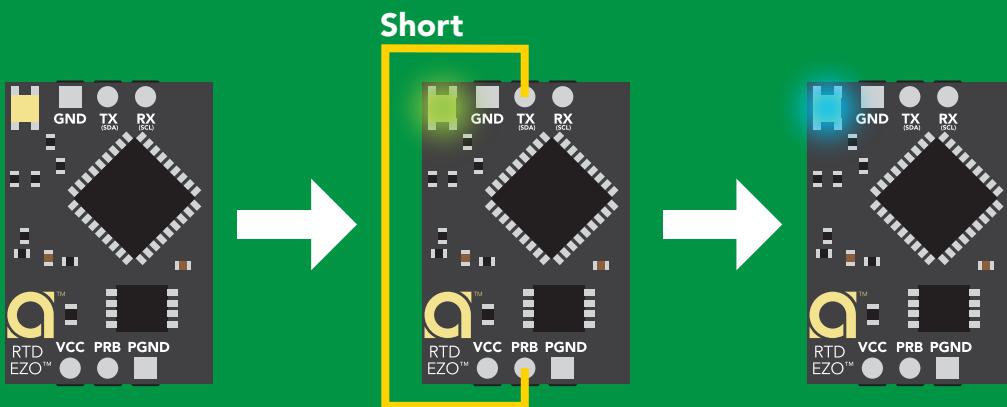

Wrong Example

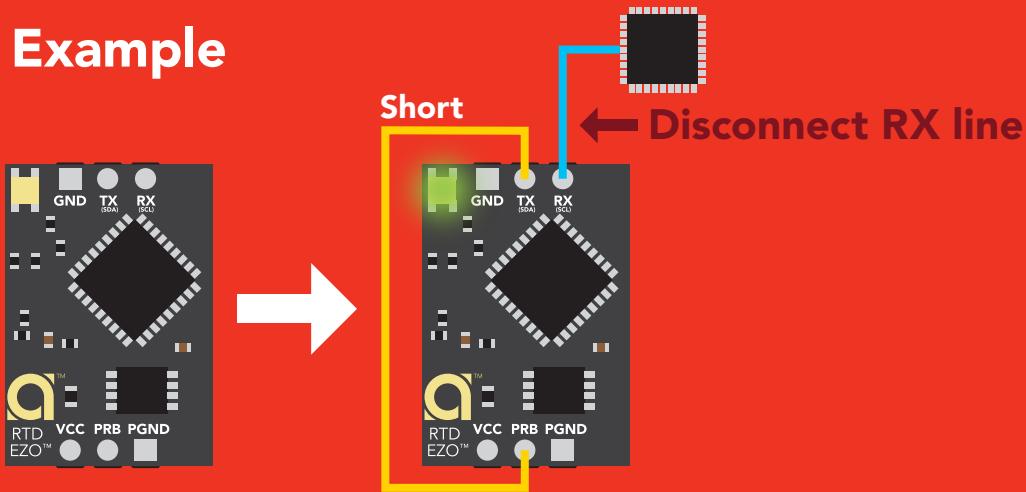

I²C mode

The I²C protocol is **considerably more complex** than the UART (RS-232) protocol. Atlas Scientific assumes the embedded systems engineer understands this protocol.

To set your EZO™ device into I²C mode [click here](#)

Settings that are retained if power is cut

Calibration
Change I²C address
Hardware switch to UART mode
LED control
Protocol lock
Software switch to UART mode

Settings that are **NOT** retained if power is cut



Find
Sleep mode

I²C mode

I²C address (0x01 – 0x7F)
102 (0x66) default

V_{cc} 3.3V – 5.5V

Clock speed 100 – 400 kHz

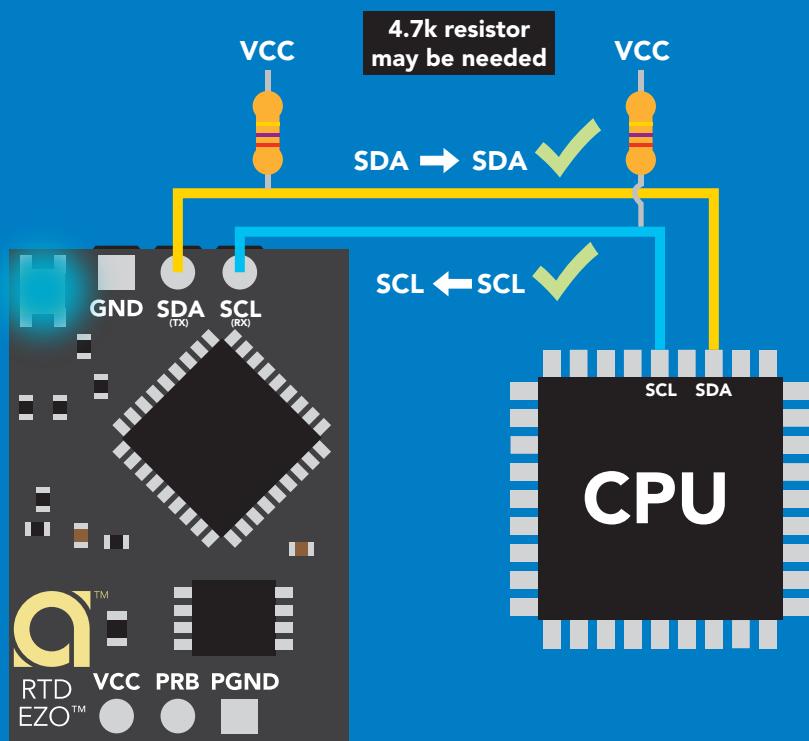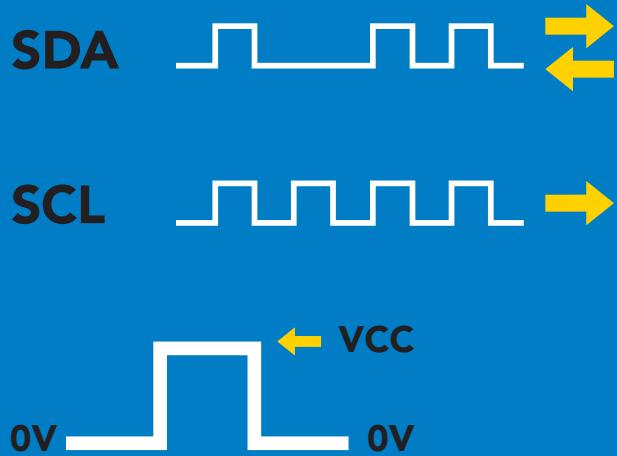

Data format

Reading temperature
Units °C, °K, or °F
Encoding ASCII
Format string

Data type floating point
Decimal places 3
Smallest string 4 characters
Largest string 14 characters


Sending commands to device




Example

Start 102 (0x66) Write Sleep Stop



I²C address Command

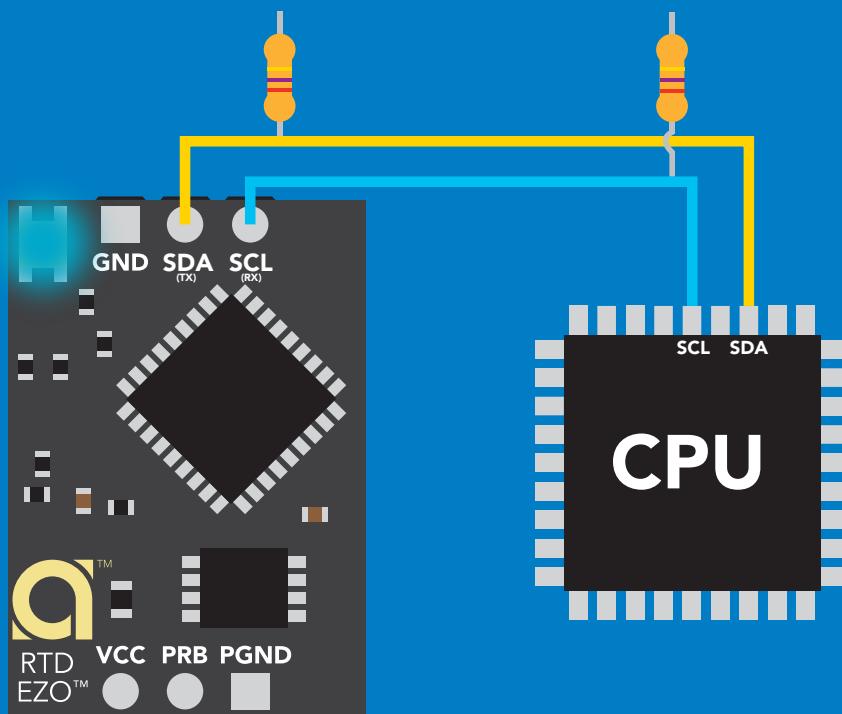


Advanced

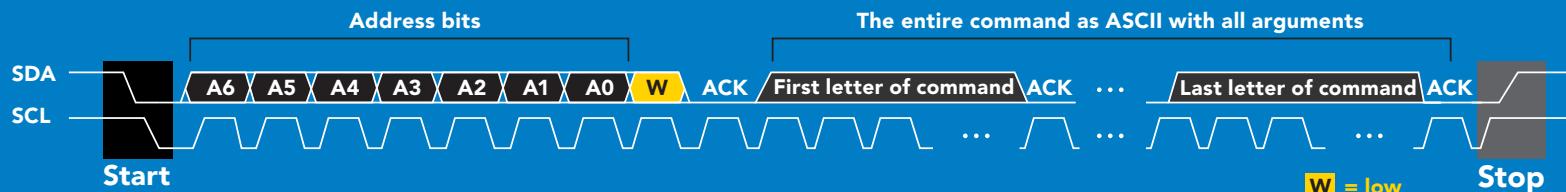

Requesting data from device

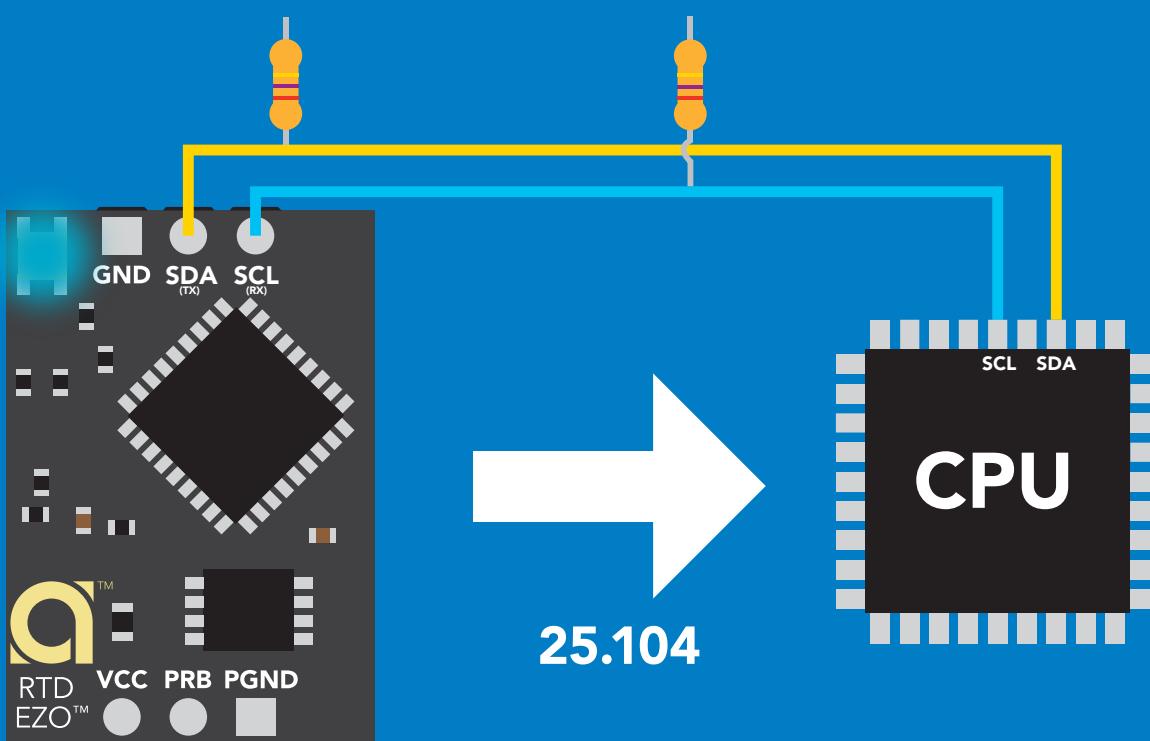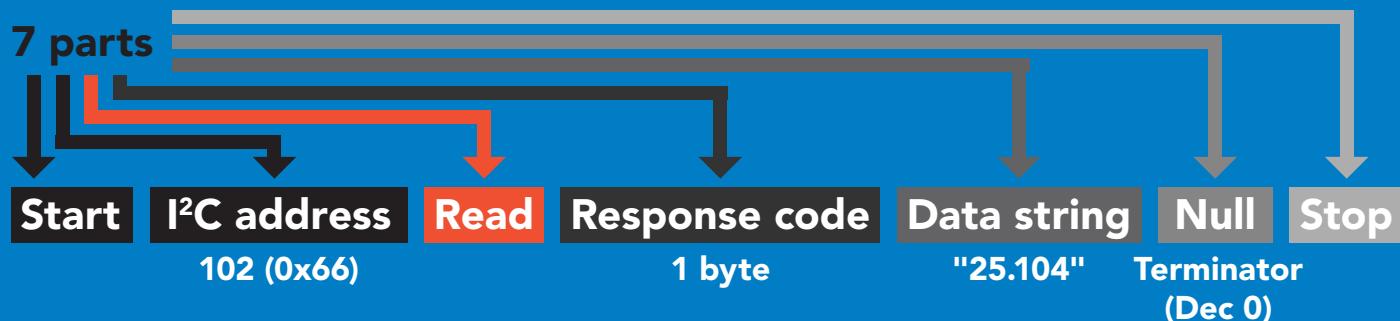

Advanced

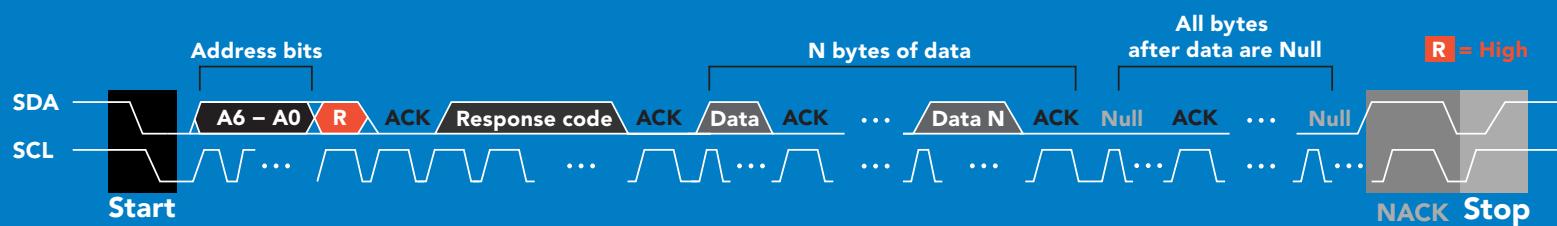


Dec | ASCII | Dec

15053464948520 = 25.104

Response codes

After a command has been issued, a 1 byte response code can be read in order to confirm that the command was processed successfully.

Reading back the response code is completely optional, and is not required for normal operation.

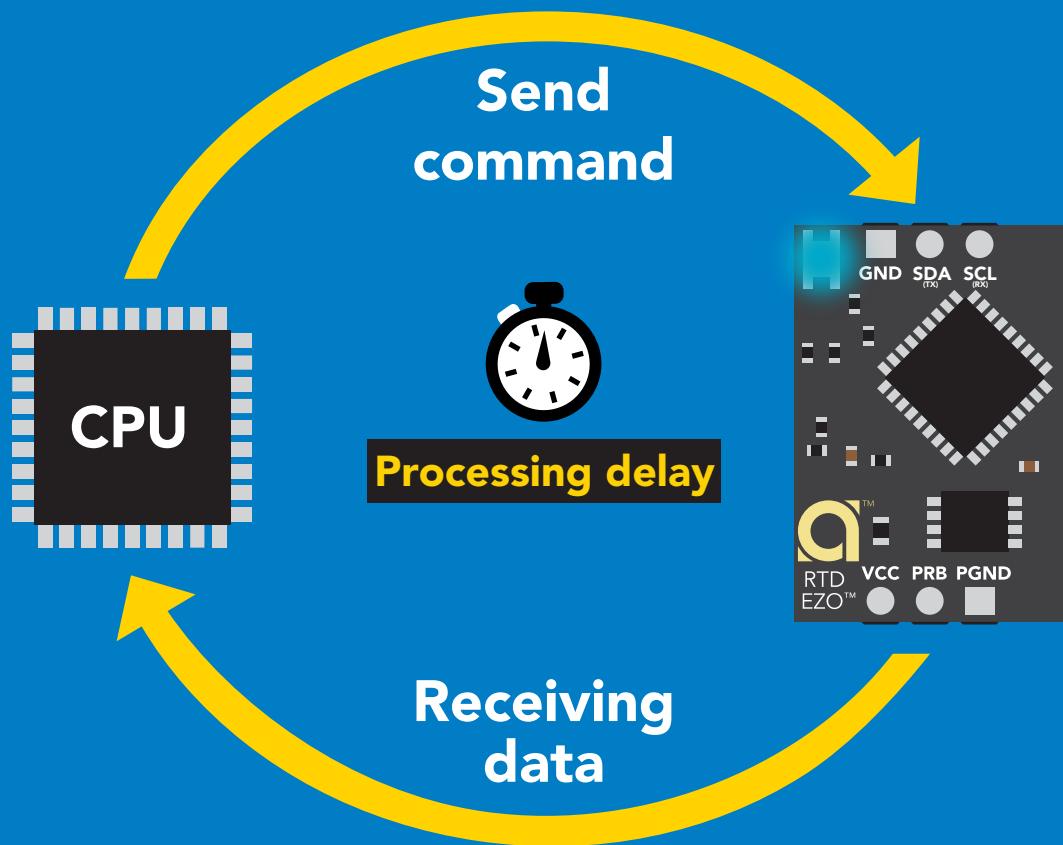

Example

```
I2C_start;  
I2C_address;  
I2C_write(EZO_command);  
I2C_stop;
```

```
delay(300);
```



Processing delay

```
I2C_start;  
I2C_address;  
Char[ ] = I2C_read;  
I2C_stop;
```

If there is no processing delay or the processing delay is too short, the response code will always be 254.

Response codes

Single byte, not string


255 no data to send

254 still processing, not ready

2 error


1 successful request

LED color definition

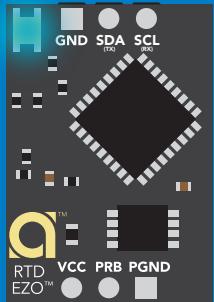


Blue

I²C standby

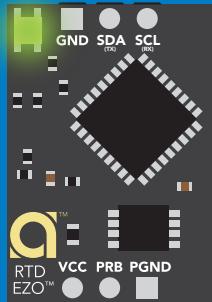


Green

Taking reading

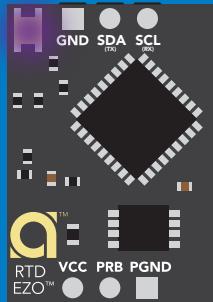


Purple

Changing
I²C ID#

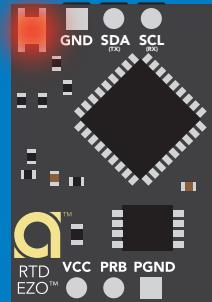

Red

Command
not understood

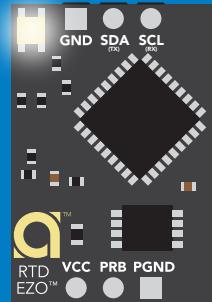

White

Find

5V	LED ON +0.4 mA
3.3V	+0.2 mA

I²C mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	
Baud	switch back to UART mode	pg. 63
Cal	performs calibration	pg. 51
D	enable/disable data logger	pg. 54
Export/import	export/import calibration	pg. 52
Factory	enable factory reset	pg. 62
Find	finds devices with white blinking LED	pg. 49
i	device information	pg. 57
I2C	change I ² C address	pg. 61
L	enable/disable LED	pg. 48
M	memory recall/clear	pg. 55
Plock	enable/disable protocol lock	pg. 60
R	returns a single reading	pg. 50
S	temperature scale (°C, °K, °F)	pg. 53
Sleep	enter sleep mode/low power	pg. 59
Status	retrieve status information	pg. 58

LED control

Command syntax

300ms  processing delay

L,1 LED on **default**

L,0 LED off

L,? LED state on/off?

Example

L,1


 Wait 300ms
1 Dec 0 Null

L,0


 Wait 300ms
1 Dec 0 Null

L,?

 Wait 300ms
1 Dec ?L,1 0 or 1 Dec ?L,0 0 ASCII Null Null

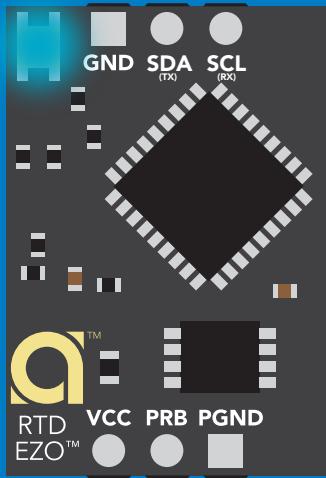

L,1

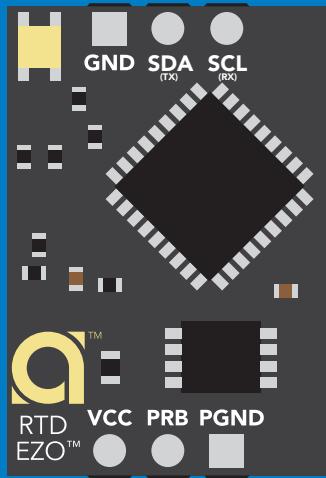

L,0

Find

300ms  processing delay

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.

Find <cr> LED rapidly blinks white, used to help find device*

*This command is only available for firmware version 2.10 and above.


Example

Response

Find <cr>

 Wait 300ms

1 Dec 0 Null

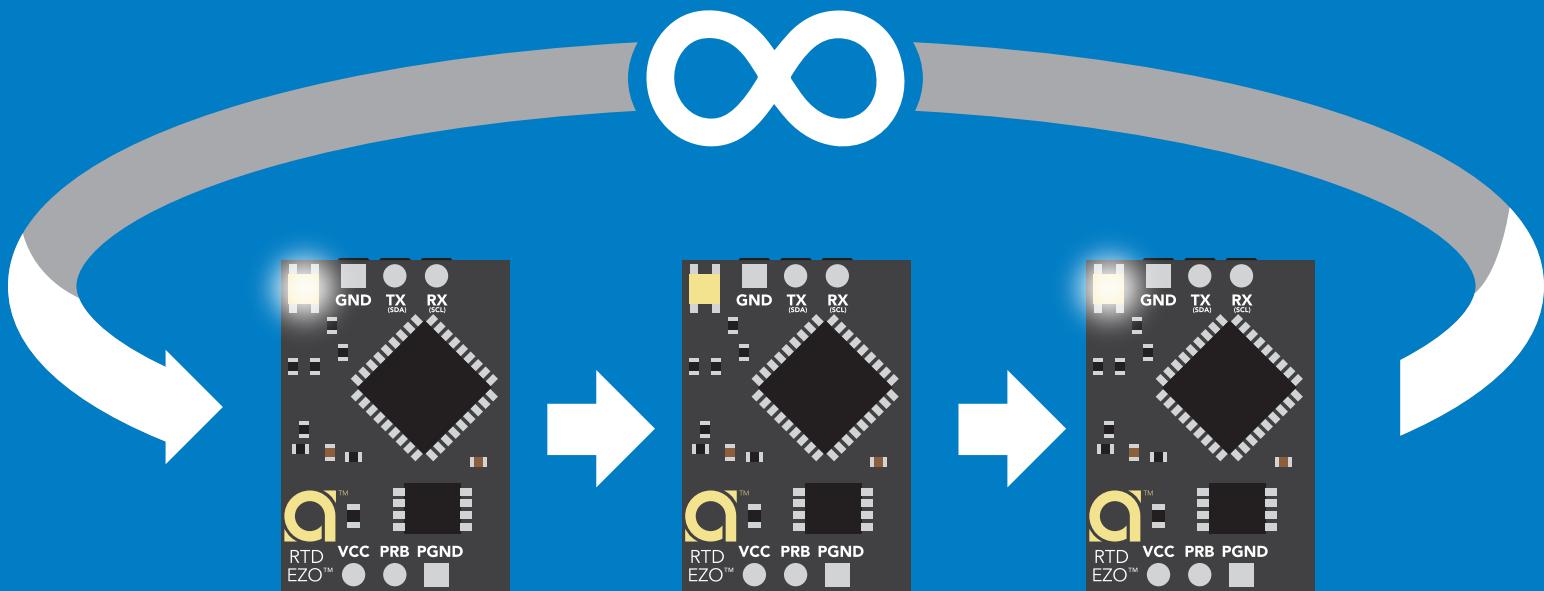

Taking reading

Command syntax

600ms  processing delay

R return 1 reading

Example

Response

R



1


25.104

0

Dec


ASCII

Null

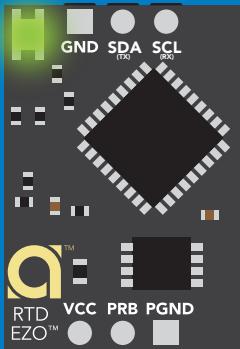


Green



Taking reading

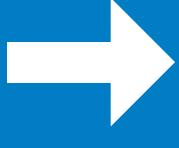

Wait 600ms

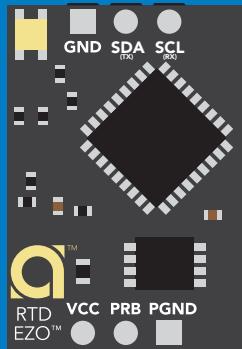

Transmitting

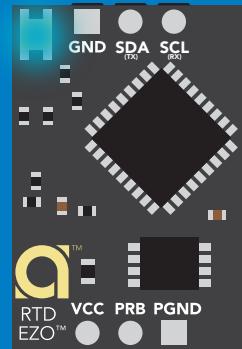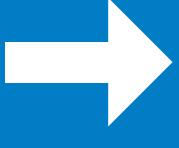

Blue

Standby

Calibration

Command syntax

1000ms  processing delay

Cal,t t = any temperature

EZO™ RTD circuit uses
single point calibration.

Cal,clear delete calibration data

Cal,? device calibrated?

Example

Response

Cal,t



Wait 1000ms 1 Dec 0 Null

Cal,clear



Wait 300ms 1 Dec 0 Null

Cal,?


Wait 300ms 1 Dec ?Cal,1 0 Null or 1 Dec ?Cal,0 0 Null

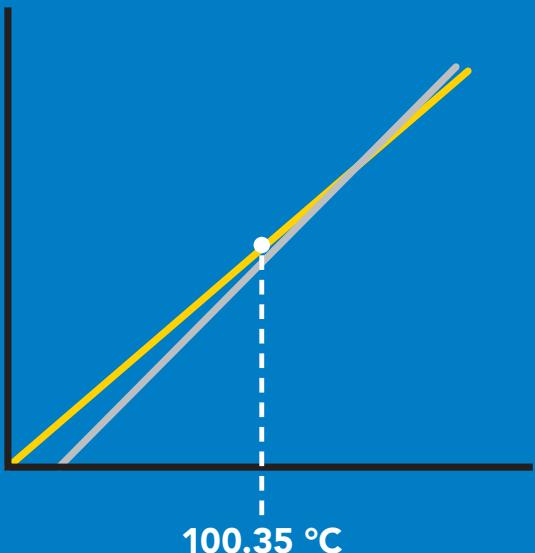

Cal,100.00

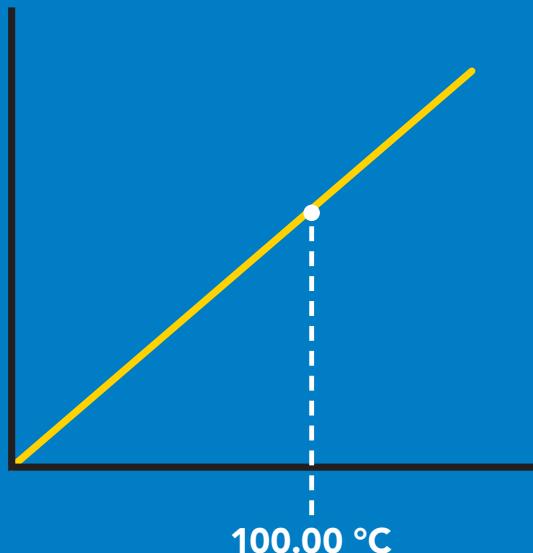

Export/import calibration

Command syntax

Export: Use this command to save calibration settings
Import: Use this command to load calibration settings to one or more devices.

Export

export calibration string from calibrated device*

Import

import calibration string to new device*

Export,?

calibration string info*

300ms  processing delay

*This command is only available for firmware version 2.10 and above.

Example

Response

Export,?


Wait 300ms

1 **10,120** **0**
Dec ASCII Null

Response breakdown

10, 120

of strings to export # of bytes to export

Export strings can be up to 12 characters long

Export


Wait 300ms

1 **59 6F 75 20 61 72** **0**

(1 of 10)

(8 more)

⋮

Export


Wait 300ms

1 **65 20 61 20 63 6F** **0**

(10 of 10)

Export


Wait 300ms

1 ***DONE** **0**

Import, n
(FIFO)

Import, 59 6F 75 20 61 72 (1 of 10)
ASCII

Temperature scale ($^{\circ}\text{C}$, $^{\circ}\text{K}$, $^{\circ}\text{F}$)

Command syntax

300ms  processing delay

S,c celsius **default**

S,k kelvin

S,f fahrenheit

S,? temperature scale?

Example

S,c


Wait 300ms

1 Dec **0** Null

S,k


Wait 300ms

1 Dec **0** Null

S,f





Wait 300ms

1 Dec **0** Null

S,?


Wait 300ms

1 Dec **?S,f** **0** or **1** Dec **?S,k** **0** or **1** Dec **?S,k** **0**

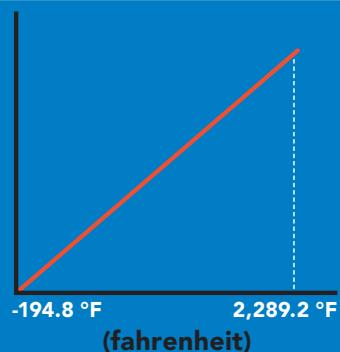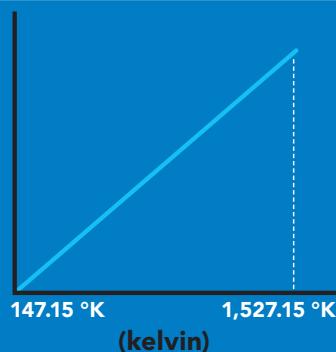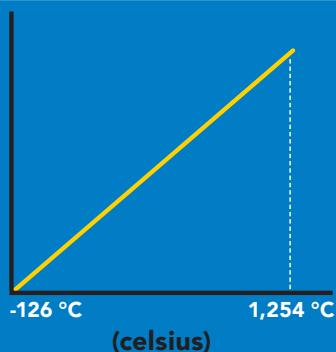

Enable/disable data logger

Command syntax

D,n n = (n x 10 seconds)

D,0 disable

D,? data logger storage interval?

300ms  processing delay

The time period (n) is in 10 second intervals and can be any value from 1 to 32,000.

Example

D,6

 Wait 300ms
1 Dec 0 Null




D,0

 Wait 300ms
1 Dec 0 Null

D,?

 Wait 300ms
1 Dec ?D,6 ASCII 0 Null

D,6
(after 60 seconds)

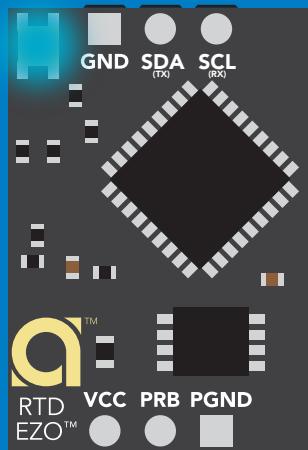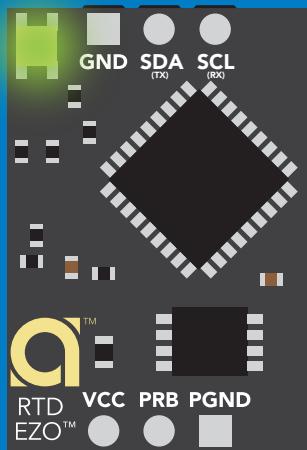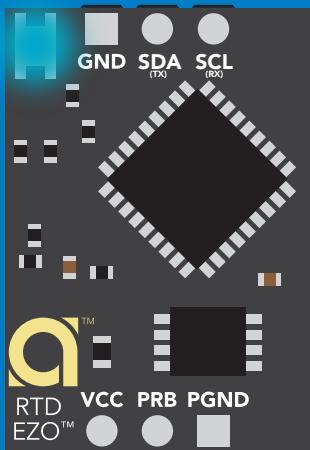

Memory recall

Disable data logger to recall memory.

Command syntax

300ms  processing delay

M recall 1 sequential stored reading

M,? display memory location of last stored reading

Example

M




1 1,100.00 0
Dec ASCII Null

M,?



1 4,112.00 0
Dec ASCII Null

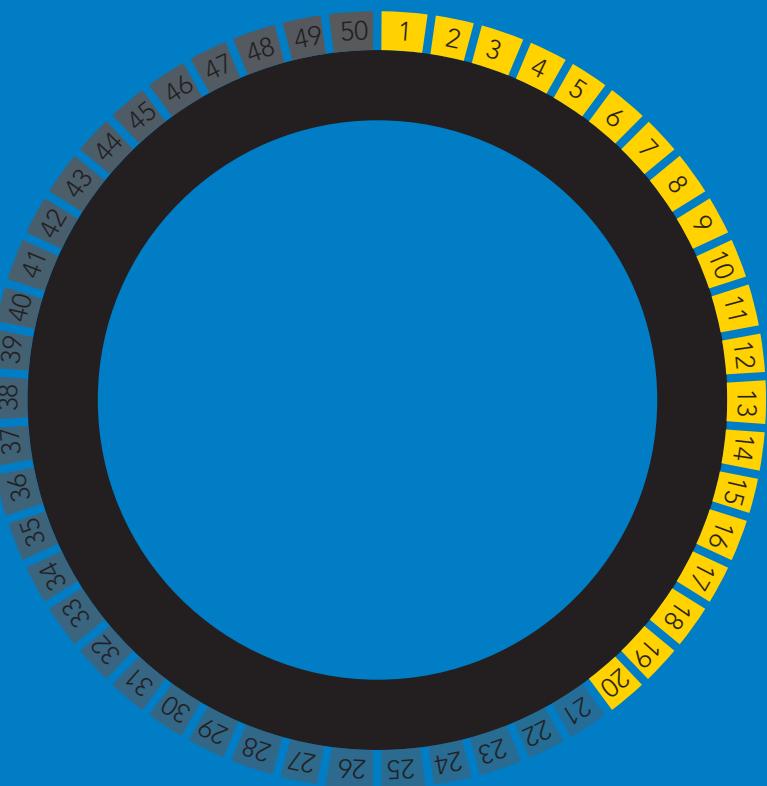

Memory clear

Command syntax

300ms  processing delay

M,clear clear all stored memory

Example


Response

M,clear




1
Dec

0
Null

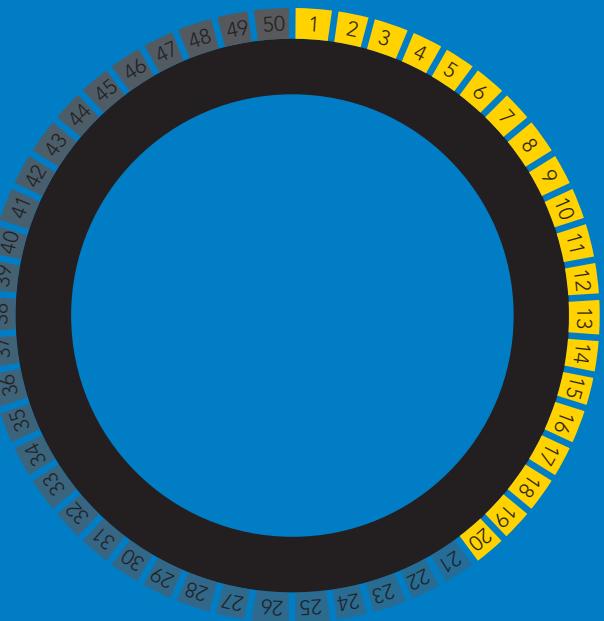

M,clear

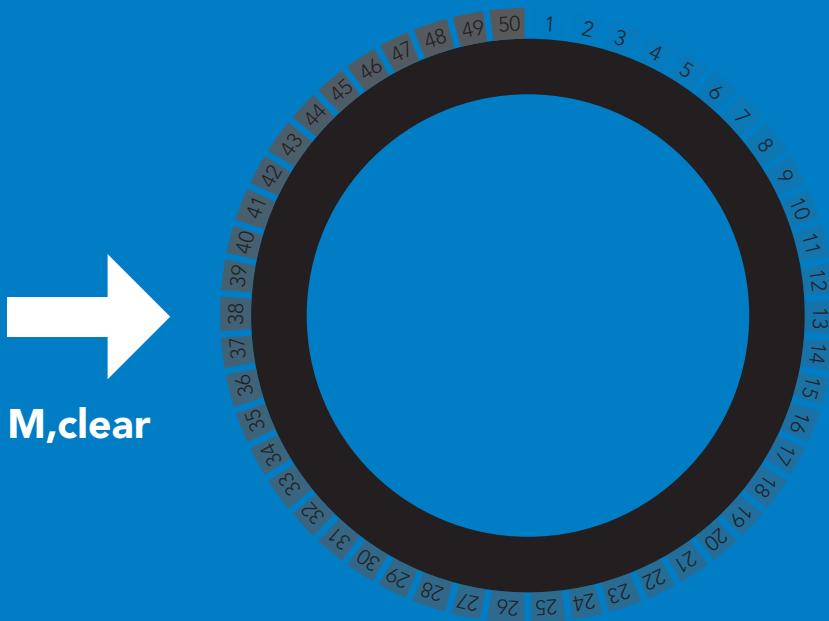

Device information

Command syntax

300ms  processing delay

i device information

Example Response

i



Wait 300ms

1
Dec

?i,RTD,2.01
ASCII

0
Null

Response breakdown

?i, RTD, 2.01
↑ ↑
Device Firmware

Reading device status

Command syntax

300ms  processing delay

Status voltage at Vcc pin and reason for last restart

Example Response

Status



Wait 300ms

1

?Status,P,5.038

Dec

ASCII

0

Null

Response breakdown

?Status, P, 5.038
↑ ↑
Reason for restart Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Sleep enter sleep mode/low power

Send any character or command to awaken device.

Example Response

Sleep

no response


Do not read status byte after issuing sleep command.

Any command


***WA wakes up device**

5V	STANDBY	SLEEP
	15.40 mA	0.4 mA


3.3V	13.80 mA	0.09 mA
------	----------	---------

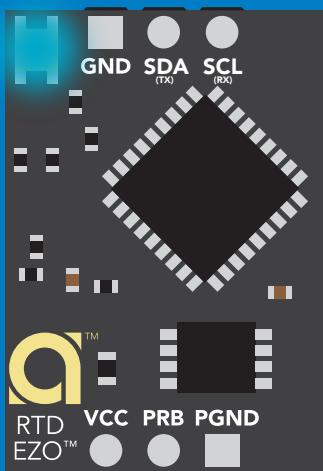

Standby

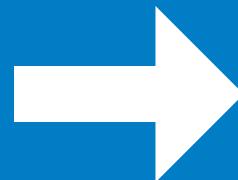

Sleep

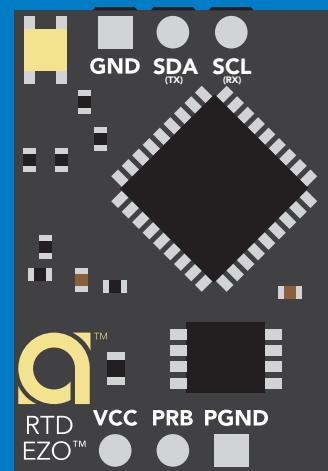

Sleep

Protocol lock

Command syntax

300ms  processing delay

Plock,1 enable Plock

Locks device to I²C mode.

Plock,0 disable Plock

Plock,? Plock on/off?

Example

Plock,1


Wait 300ms

1
Dec
0
Null

Plock,0



Wait 300ms

1
Dec
0
Null


Plock,?


Wait 300ms


1
Dec
?Plock,1
ASCII
0
Null

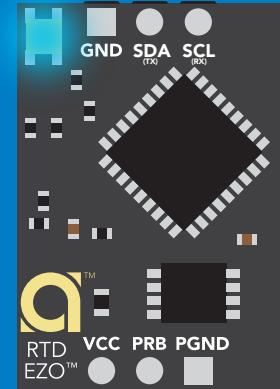

Serial, 9600

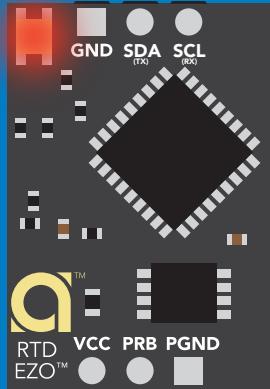

cannot change to UART

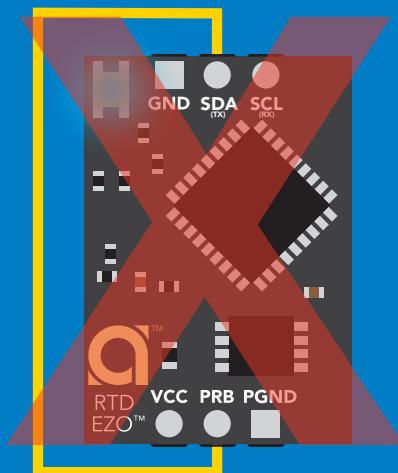

cannot change to UART

I²C address change

Command syntax

300ms  processing delay

I²C,n sets I²C address and reboots into I²C mode

Example Response

I²C,100

device reboot



Warning!

Changing the I²C address will prevent communication between the circuit and the CPU, until the CPU is updated with the new I²C address.


Default I²C address is 102 (0x66).

n = any number 1 – 127

I²C,100

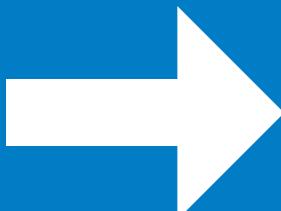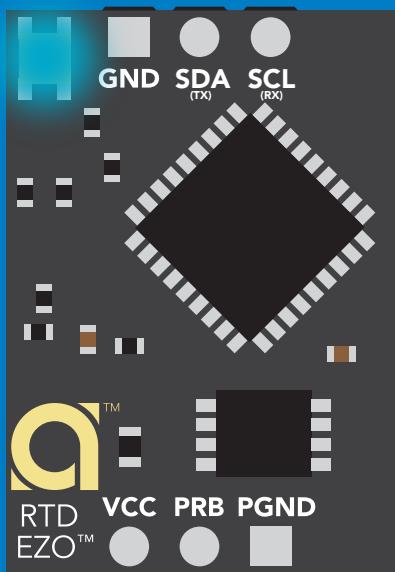

(reboot)

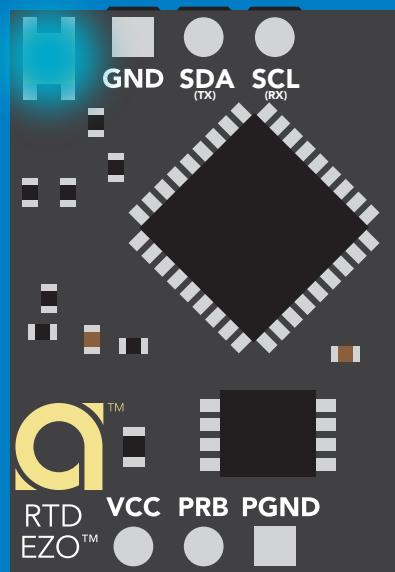

Factory reset

Command syntax

Factory enable factory reset

I²C address will not change



Example Response

Factory


device reboot

Clears calibration
LED on
Response codes enabled
Clears data logger

Factory

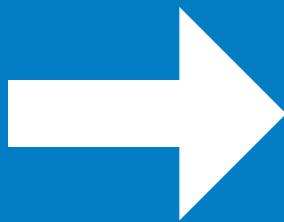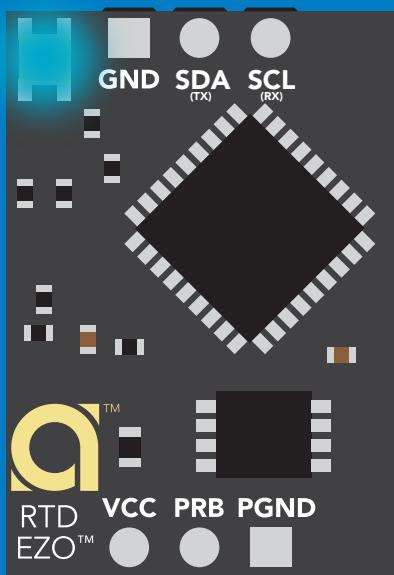

(reboot)

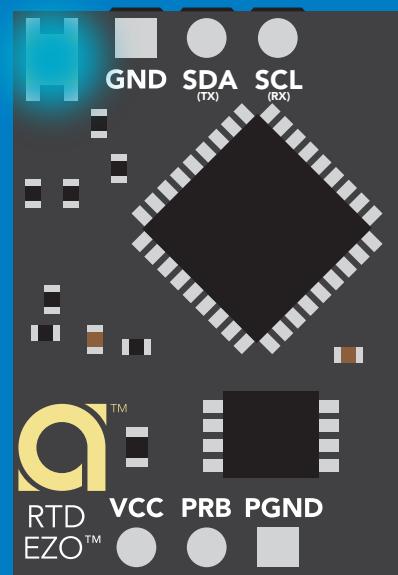

Change to UART mode

Command syntax


Baud,n switch from I²C to UART

Example Response



Baud,9600

reboot in UART mode


n = [300
1200
2400
9600
19200
38400
57600
115200]

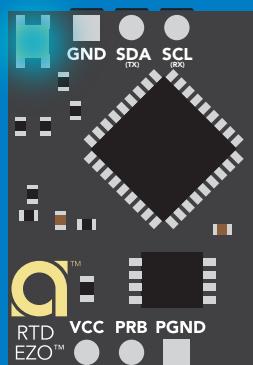

Serial,9600

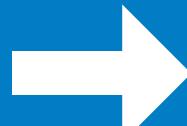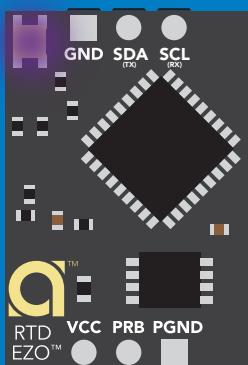

(reboot)

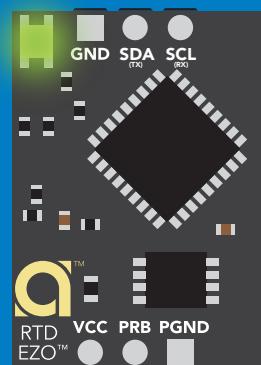


Changing to UART
mode

Manual switching to UART


- Make sure Plock is set to 0
- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from **Blue** to **Green**
- Disconnect ground (power off)
- Reconnect all data and power

Connecting TX to PRB only works for the EZO™ RTD Temperature circuit.



Example

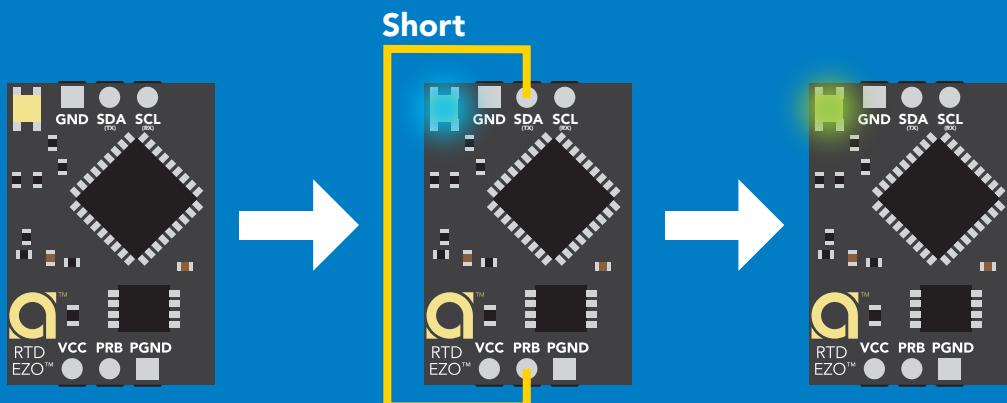

Wrong Example

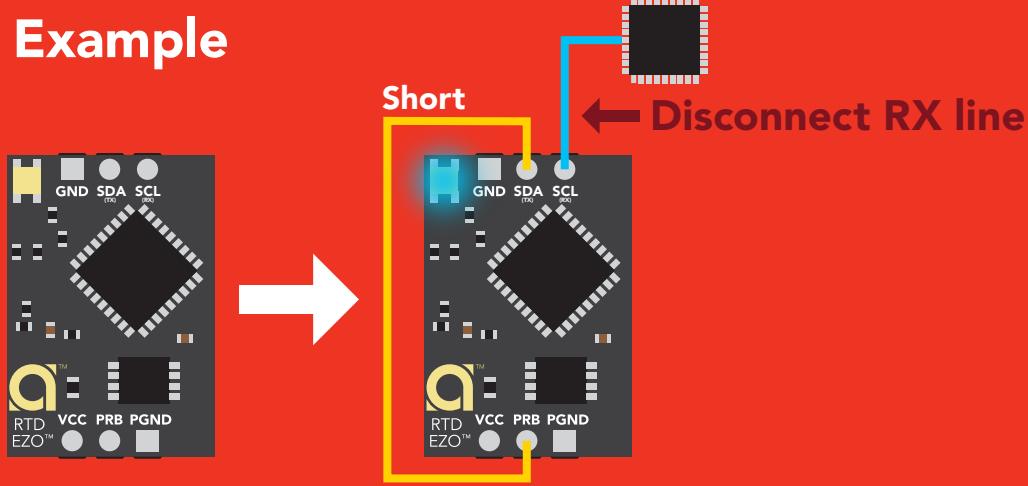


EZO™ circuit footprint

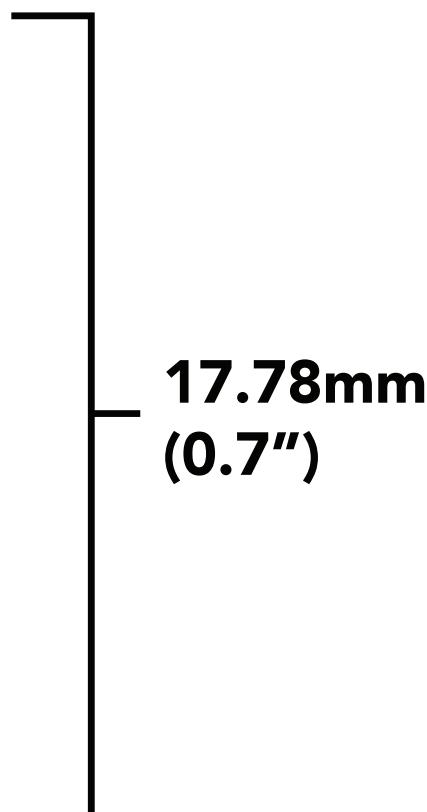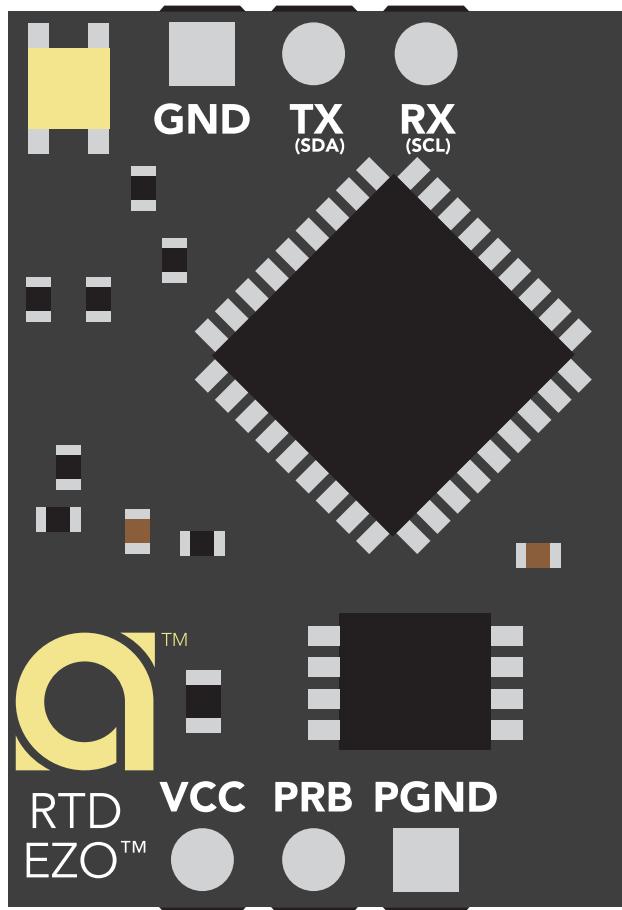


**2.54mm
(0.1")**


1 In your CAD software place an 8 position header.

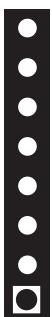

2 Place a 3 position header at both top and bottom of the 8 position.

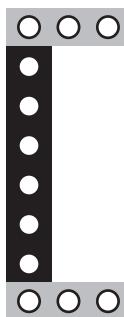

3 Delete the 8 position header. The two 3 position headers are now 17.78mm (0.7") apart from each other.

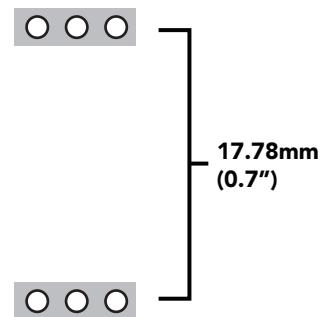

Datasheet change log

Datasheet V 2.4

Added new commands:

- "Find" pages 22 & 49.
- "Export/Import calibration" pages 26 & 52.
- Added new feature to continuous mode "C,n" pg 23.

Datasheet V 2.3

Added manual switching to UART information on pg. 59

Datasheet V 2.2

Revised Baud command information on pg 33.

Datasheet V 2.1

Revised entire datasheet

Temperature circuit firmware changes

V1.02 – Plock (March 31, 2016)

- Added protocol lock feature "Plock"

V1.03 – EEPROM (April 26, 2016)

- Fixed glitch where EEPROM would get erased if the circuit lost power 900ms into startup

V1.11 – Glitch Fix (June 9, 2016)

- Fixed glitch where a blank name would result in garbage output

V2.01 – Update (January 1, 2017)

- Replaced command "response" with "*OK"
- Replaced command "Serial" with "Baud"

V2.02 – Glitch Fix (February 16, 2017)

- Fixed glitch where calibration would not accept floating point numbers.

V2.10 – (May 9, 2017)

- Added "Find" command.
- Added "Export/import" command.
- Modified continuous mode to be able to send readings every "n" seconds.
- Sleep current is lowered.

Warranty

Atlas Scientific™ Warranties the EZO™ class RTD circuit to be free of defect during the debugging phase of device implementation, or 30 days after receiving the EZO™ class RTD circuit (which ever comes first).

The debugging phase

The debugging phase as defined by Atlas Scientific™ is the time period when the EZO™ class RTD circuit is inserted into a bread board, or shield. If the EZO™ class RTD circuit is being debugged in a bread board, the bread board must be devoid of other components. If the EZO™ class RTD circuit is being connected to a microcontroller, the microcontroller must be running code that has been designed to drive the EZO™ class RTD circuit exclusively and output the EZO™ class RTD circuit data as a serial string.

It is important for the embedded systems engineer to keep in mind that the following activities will void the EZO™ class RTD circuit warranty:

- **Soldering any part of the EZO™ class RTD circuit.**
- **Running any code, that does not exclusively drive the EZO™ class RTD circuit and output its data in a serial string.**
- **Embedding the EZO™ class RTD circuit into a custom made device.**
- **Removing any potting compound.**

Reasoning behind this warranty

Because Atlas Scientific™ does not sell consumer electronics; once the device has been embedded into a custom made system, Atlas Scientific™ cannot possibly warranty the EZO™ class RTD circuit, against the thousands of possible variables that may cause the EZO™ class RTD circuit to no longer function properly.

Please keep this in mind:

- 1. All Atlas Scientific™ devices have been designed to be embedded into a custom made system by you, the embedded systems engineer.**
- 2. All Atlas Scientific™ devices have been designed to run indefinitely without failure in the field.**
- 3. All Atlas Scientific™ devices can be soldered into place, however you do so at your own risk.**

Atlas Scientific™ is simply stating that once the device is being used in your application, Atlas Scientific™ can no longer take responsibility for the EZO™ class RTD circuits continued operation. This is because that would be equivalent to Atlas Scientific™ taking responsibility over the correct operation of your entire device.