

# An Object Oriented Finite Element Library

Reference Guide

Rachid Touzani Laboratoire de Mathématiques Blaise Pascal Université Clermont Auvergne 63177 Aubière, France

e-mail: rachid.touzani@univ-bpclermont.fr

i

# **Contents**

1	Module Index 1.1 Modules	<b>3</b>
2	Namespace Index	5
3	Hierarchical Index 3.1 Class Hierarchy	<b>7</b>
4		<b>11</b> 11
5	5.1 Conservation Law Equations 5.2 Electromagnetics 5.3 Finite Element Mesh 5.4 Fluid Dynamics 5.5 General Purpose Equations 5.6 Global Variables 5.7 Heat Transfer 5.8 Input/Output 5.9 Interface Problems 5.10 Laplace equation 5.11 OFELI 5.12 Physical properties of media 5.13 Shape Function 5.14 Solid Mechanics 5.15 Solver 5.16 Utilities 5.16 Utilities 5.17 Conservation 10 5.18 Solver 10 5.19 Conservation 10 5.10 Conservation 10 5.11 Conservation 10 5.12 Conservation 10 5.13 Shape Function 10 5.14 Solid Mechanics 10 5.15 Solver 10 5.16 Utilities 11	17 18 19 35 36 40 43 44 45 46 47 05 06 07 08 21 43
6	T	<b>51</b> 51
7	7.1 AbsEqua < T_ > Class Template Reference       1         7.2 Bar2DL2 Class Reference       1         7.3 Beam3DL2 Class Reference       1         7.4 BiotSavart Class Reference       2         7.5 BMatrix < T_ > Class Template Reference       2         7.6 Brick Class Reference       2         7.7 Circle Class Reference       2         7.8 DC1DL2 Class Reference       2	73 91 08 13 20

CONTENTS

7.10	DC2DT6 Class Reference	271
7.11	DC3DAT3 Class Reference	291
7.12	DC3DT4 Class Reference	312
7.13	DMatrix < T_ > Class Template Reference	334
	Domain Class Reference	
	DSMatrix $<$ T $>$ Class Template Reference	
	EC2D1T3 Class Reference	
	Edge Class Reference	
	EdgeList Class Reference	
7 19	EigenProblemSolver Class Reference	384
7.17	Elas2DQ4 Class Reference	389
	Elas2DT3 Class Reference	
	Elas3DH8 Class Reference	
	Elas3DT4 Class Reference	
	Element Class Reference	
	ElementList Class Reference	
	Ellipse Class Reference	
	Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	
	Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	
	Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	
	Equa_Solid $<$ T, NEN, NEE, NSN, NSE $>$ Class Template Reference	
	Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ > Class Template Reference	
	Equation $<$ T <sub>-</sub> , NEN <sub>-</sub> , NEE <sub>-</sub> , NSN <sub>-</sub> , NSE <sub>-</sub> $>$ Class Template Reference	
	Estimator Class Reference	
7.34	FastMarching2D Class Reference	569
7.35	FEShape Class Reference	570
7.36	Figure Class Reference	572
	FMM2D Class Reference	
	FMM3D Class Reference	
	FMMSolver Class Reference	
	Funct Class Reference	
	Gauss Class Reference	
	Grid Class Reference	
	HelmholtzBT3 Class Reference	
	Hexa8 Class Reference	
	ICPG1D Class Reference	
	ICPG2DT Class Reference	
	ICPG3DT Class Reference	
	IOField Class Reference	619
		-
	IPF Class Reference	620
	Iter< T_> Class Template Reference	629
	Laplace1DL2 Class Reference	630
	Laplace1DL3 Class Reference	645
	Laplace2DFVT Class Reference	661
	Laplace2DMHRT0 Class Reference	676
7.55	Laplace2DT3 Class Reference	691
	LCL1D Class Reference	708
	LCL2DT Class Reference	713
7.58	LCL3DT Class Reference	718
7.59	Line2 Class Reference	724
7.60	Line2H Class Reference	727
7.61	Line3 Class Reference	729
	LinearSolver < T_ > Class Template Reference	731
	•	736
	· · · · · · · · · · · · · · · · · · ·	

CONTENTS

	$LocalVect < T_{-}, N_{-} > Class Template Reference$	
	Material Class Reference	
7.66	$Matrix < T_{-} > Class \ Template \ Reference \qquad \dots \qquad \dots \qquad \dots$	743
7.67	Mesh Class Reference	752
7.68	Muscl Class Reference	
7.69	Muscl1D Class Reference	777
7.70	Muscl2DT Class Reference	781
	Muscl3DT Class Reference	
7.72	MyOpt Class Reference	788
7.73	Node Class Reference	789
7.74	NodeList Class Reference	793
	NSP2DQ41 Class Reference	
7.76	ODESolver Class Reference	811
7.77	OptSolver Class Reference	818
7.78	Partition Class Reference	825
7.79	Penta6 Class Reference	829
	PETScMatrix < T_ > Class Template Reference	
7.81	$PETScVect < T_{-} > Class \ Template \ Reference \ \dots $	843
7.82	PETScWrapper $< T > Class$ Template Reference	864
7.83	PhaseChange Class Reference	872
7.84	Point< T_> Class Template Reference	873
	Point2D< T_> Class Template Reference	
7.86	Polygon Class Reference	879
7.87	$Prec < T_{-} > Class \ Template \ Reference \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	881
	Prescription Class Reference	
	Quad4 Class Reference	
	Reconstruction Class Reference	
	Rectangle Class Reference	
	Side Class Reference	
	SideList Class Reference	
	$SkMatrix < T_{-} > Class \ Template \ Reference \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	
	$SkSMatrix < T_{-} > Class \ Template \ Reference \ \dots $	
7.96	Sphere Class Reference	923
7.97	$SpMatrix < T_{-} > Class \ Template \ Reference \ . \ . \ . \ . \ . \ . \ . \ . \ . \ $	925
	SteklovPoincare2DBE Class Reference	
	Tabulation Class Reference	
	Tetra4 Class Reference	
	Timer Class Reference	
	2TimeStepping Class Reference	948
	BTINS2DT3B Class Reference	953
	Triang3 Class Reference	968
	Triang6S Class Reference	971
	Striangle Class Reference	973
	7 triangle Class Reference	976
	RTrMatrix $R$ Tr $R$ Class Template Reference	978
	OUserData < T_ > Class Template Reference	986
7.110	Vect < T > Class Template Reference	990

CONTENTS

# **Module Index**

# 1.1 Modules

Here is a list of all modules:	
OFELI	47
Conservation Law Equations	17
Electromagnetics	18
Finite Element Mesh	19
Fluid Dynamics	35
General Purpose Equations	36
Global Variables	40
Heat Transfer	43
Input/Output	44
Interface Problems	45
Laplace equation	46
Physical properties of media	105
Shape Function	
Solid Mechanics	107
Solver	108
Utilities	<b>121</b>
Vector and Matrix	143

# Namespace Index

# **Hierarchical Index**

# 3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:	
AbsEqua < complex_t >	171
Equation < complex_t, NEN_, NEE_, NSN_, NSE_ >	553
Equa_Electromagnetics< complex_t, 3, 3, 2, 2 >	475
EC2D1T3	364
HelmholtzBT3	583
AbsEqua< double >	171
Equation< double, NEN_, NEE_, NSN_, NSE_>	553
Equa_Solid < double, 8, 24, 4, 12 >	518
Elas3DH8	430
AbsEqua < real_t >	171
Equation< real_t, NEN_, NEE_, NSN_, NSE_>	553
Equa_Electromagnetics< real_t, 3, 6, 2, 4 >	475
Equa_Fluid < real_t, 3, 6, 2, 4 >	489
TINS2DT3B	953
Equa_Fluid< real_t, 4, 8, 2, 4 >	489
NSP2DQ41	794
Equa_Laplace< real_t, 2, 2, 1, 1 >	504
Laplace1DL2	630
Equa_Laplace< real_t, 3, 3, 1, 1 >	504
Laplace1DL3	645
Equa_Laplace< real_t, 3, 3, 2, 2 >	504
Laplace2DFVT	661
Laplace2DMHRT0	676
Laplace2DT3	691
Equa_Laplace< real_t, 4, 4, 3, 3 >	504
Equa_Solid< real_t, 2, 12, 1, 1 >	518
Beam3DL2	<ul><li>191</li><li>518</li></ul>
Equa_Solid < real_t, 2, 4, 1, 2 >	173
	518
Equa_Solid < real_t, 3, 6, 2, 4 >	409
Equa_Solid < real_t, 4, 12, 3, 9 >	518
Elas3DT4	
	TT/

Equa Solid $< \text{real} + 4 + 2 + 4 < 5 $	
1 , , , ,	18
Elas2DQ4	
Equa_Therm $<$ real_t, 2, 2, 1, 1 $>$	
DC1DL2	<u>2</u> 5
Equa_Therm< real_t, 3, 3, 2, 2 >	35
DC2DT3	<del>1</del> 6
DC3DAT3	<del>)</del> 1
Equa_Therm< real_t, 4, 4, 3, 3 >	35
DC3DT4	12
Equa_Therm< real_t, 6, 6, 3, 3 >	
DC2DT6	
LocalMatrix < complex_t, NEE_, NEE_ >	
LocalMatrix < complex_t, NSE_, NSE_>	
LocalMatrix< double, NEE_, NEE_>	
LocalMatrix< double, NSE_, NSE_>	
LocalMatrix< real_t, NEE_, NEE_>	
LocalMatrix< real_t, NSE_, NSE_>	
LocalMatrix < T_, NEE_, NEE_ >	
$Local Matrix < T_{-}, NSE_{-}, NSE_{-} > \dots \qquad . \qquad$	-
LocalVect< complex_t, NEE_>	
LocalVect< complex_t, NSE_>	
LocalVect< double, NEE_>	38
LocalVect< double, NSE_>	38
LocalVect< real_t, NEE_>	38
$LocalVect < real\_t, NSE\_ > \dots 73$	38
LocalVect< T_, NEE_ >	38
	• •
LocalVect< T_, NSE_>	38
$\label{eq:LocalVect} LocalVect < T, NSE > \dots \qquad \qquad$	
$AbsEqua < T_{-} > \dots $	71
$AbsEqua < T_{-} > \dots $	71 53
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47	71 53 75
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48	71 53 75 89
AbsEqua< T_ >       17         Equation< T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >       50	71 53 75 39 04
AbsEqua< T_ >       17         Equation< T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >       51	71 53 75 39 04 18
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53	71 53 75 39 04 18 35
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20	71 53 75 89 04 18 35
AbsEqua< T_ >       17         Equation< T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35	71 53 75 89 04 18 35 08 51
AbsEqua< T_ >       17         Equation< T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38	71 53 75 39 04 18 35 08 51
AbsEqua< T_ >       17         Equation< T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38	71 53 75 89 04 18 35 08 51 80 83
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38	71 53 75 89 04 18 35 08 51 80 83 84
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46	71 53 75 89 04 18 35 08 51 80 83 84 63
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47	71 53 75 89 04 18 35 08 51 80 83 63 72
$AbsEqua < T> \\ Equation < T, NEN, NEE, NSN, NSE> \\ Equa_Electromagnetics < T, NEN, NEE, NSN, NSE> \\ Equa_Fluid < T, NEN, NEE, NSN, NSE> \\ Equa_Laplace < T, NEN, NEE, NSN, NSE> \\ Equa_Solid < T, NEN, NEE, NSN, NSE> \\ Equa_Therm < T, NEN, NEE, NSN, NSE> \\ Equa_Therm < T, NEN, NEE, NSN, NSE> \\ Edge \\ Edge \\ Edge \\ Edge \\ Element \\ Element \\ Element \\ Estimator \\ 56$	71 53 75 89 04 18 35 08 51 80 83 72 68
AbsEqua< T_>       17         Equation< T_, NEN_, NEE_, NSN_, NSE_>       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_>       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_>       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_>       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_>       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_>       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56	71 53 75 89 04 18 35 08 51 83 63 72 68 69
AbsEqua< T_>       17         Equation< T_, NEN_, NEE_, NSN_, NSE_>       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_>       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_>       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_>       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_>       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_>       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57	71 53 75 89 04 18 35 08 51 80 83 72 68 69 70
AbsEqua< T_>       17         Equation       T_, NEN_, NEE_, NSN_, NSE_>       55         Equa_Electromagnetics<	71 53 75 39 04 18 35 08 51 33 63 72 68 69 70
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72	71 53 75 39 04 18 35 08 51 80 83 72 68 69 70 97
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72         Line2H       72	71 53 75 89 04 18 35 08 51 83 63 72 68 69 70 24 27
AbsEqua < T_ >       17         Equation < T_, NEN_, NEE_, NSN_, NSE_ >       55         Equa_Electromagnetics < T_, NEN_, NEE_, NSN_, NSE_ >       47         Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >       48         Equa_Laplace < T_, NEN_, NEE_, NSN_, NSE_ >       50         Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >       51         Equa_Therm < T_, NEN_, NEE_, NSN_, NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72         Line2H       72         Line3       72	71 53 75 39 04 18 50 83 83 84 63 72 68 69 70 72 72 72 72 72 72 73
AbsEqua< T_>       17         Equation< T_, NEN_, NEE_, NSN_, NSE_>       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_>       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_>       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_>       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_>       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_>       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72         Line2H       72         Line3       72         Penta6       82	71 53 75 39 18 35 36 31 36 37 28 37 29 29
AbsEqua < T_ >       17         Equation < T_ NEN_ NEE_ NSN_ NSE_ >       55         Equa Electromagnetics < T_ NEN_ NEE_ NSN_ NSE_ >       47         Equa Fluid < T_ NEN_ NEE_ NSN_ NSE_ >       48         Equa Laplace < T_ NEN_ NEE_ NSN_ NSE_ >       50         Equa_Solid < T_ NEN_ NEE_ NSN_ NSE_ >       51         Equa_Therm < T_ NEN_ NEE_ NSN_ NSE_ >       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72         Line2H       72         Line3       72         Penta6       82         Quad4       88	71 53 75 39 04 18 35 08 31 33 34 53 72 27 29 29 36
AbsEqua< T_>       17         Equation< T_, NEN_, NEE_, NSN_, NSE_>       55         Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_>       47         Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_>       48         Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_>       50         Equa_Solid< T_, NEN_, NEE_, NSN_, NSE_>       51         Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_>       53         BiotSavart       20         Domain       35         Edge       38         EdgeList       38         EigenProblemSolver       38         Element       46         ElementList       47         Estimator       56         FastMarching2D       56         FEShape       57         Hexa8       59         Line2       72         Line2H       72         Line3       72         Penta6       82	71 53 75 39 04 18 35 08 31 33 34 53 72 27 29 29 36

Triang3	
Triang6S	
Figure	
Brick	
Circle	
Ellipse	473
Polygon	879 891
Rectangle	923
Triangle	??
FMM2D	
FMM3D	575
FMMSolver	577
Funct	
Gauss	
Grid	
IOField	
IPF	
$Iter < T_{-} > \dots \dots \dots \dots$	629
LinearSolver $< T > \dots$	731
LocalMatrix< T_, NR_, NC_>	736
Local Vect $<$ T $_{-}$ , N $_{-}$ $>$	738
Material	740
$Matrix < T > \dots \dots \dots \dots$	743
BMatrix $<$ T $_{-}$ $> \dots \dots$	 213
DMatrix $< T > \dots \dots \dots$	334
$DSMatrix < T > \dots$	356
SkMatrix $< T > \dots \dots \dots \dots \dots$	900
SkSMatrix $<$ T $>$	915
SpMatrix $<$ T $>$	925
$\hat{Tr}Matrix < T_{-} > \dots \dots \dots \dots \dots$	 978
Mesh	 752
Muscl	 774
Muscl1D	 777
ICPG1D	
LCL1D	
Muscl2DT	781
ICPG2DT	607
LCL2DT	713
Muscl3DT	784
ICPG3DT	614
LCL3DT	718
	788
MyOpt	789
NodeList	 793
ODESolver	811
OptSolver	818
Partition	 825
PETScMatrix< T <sub>-</sub> >	831
PETScVect< T_>	843
$PETScWrapper < T_{-} > \dots \dots \dots \dots$	864
PhaseChange	
$\sigma$	_

# CHAPTER 3. HIERARCHICAL INDEX

$\operatorname{oint} < \operatorname{T} > \ldots \ldots \ldots \ldots \ldots$	873
$oint2D < T > \dots$	876
$rec < T > \dots$	881
rescription	885
econstruction	889
ide	893
ideList	899
teklovPoincare2DBE	942
abulation	944
imer	947
imeStepping	948
$JserData < T_{-} > \dots$	986
$\text{'ect} < T_{-} > \dots $	990
oint< real_t >	873
JserData < double >	986
ect< real_t >	990

# **Class Index**

# 4.1 Class List

	classes, structs, unions and interfaces with brief descriptions:	
AbsEqua		4 = 4
	Mother abstract class to describe equation	171
Bar2DL2		
	To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node	173
Beam3D1	, 1	
F	To build element equations for 3-D beam equations using 2-node lines	191
BiotSava	rt	
	Class to compute the magnetic induction from the current density using the Biot-Savart formula	208
BMatrix<	$\langle T_{-} \rangle$	
-	To handle band matrices	213
Brick		
	To store and treat a brick (parallelepiped) figure	220
Circle		
	To store and treat a circular figure	222
DC1DL2		
	Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements	225
DC2DT3		
	Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles	246
DC2DT6		
	Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles	271
DC3DAT	č č	
	Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles	291
DC3DT4		271
]	Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra	312
DMatrix-	O Company of the comp	
	To handle dense matrices	334
Domain		
-	To store and treat finite element geometric information	351

DSMatrix < T >	
To handle symmetric dense matrices	356
EC2D1T3	
Eddy current problems in 2-D domains using solenoidal approximation	364
Edge	
To describe an edge	380
EdgeList	200
Class to construct a list of edges having some common properties	383
EigenProblemSolver  Class to find airconvalues and someon anding airconvectors of a given matrix in	
Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, <i>i.e.</i> Find scalars I and non-null vectors v such that	
$[K]\{v\} = I[M]\{v\}$ where $[K]$ and $[M]$ are symmetric matrices. The eigenproblem	
can be originated from a PDE. For this, we will refer to the matrices K and M as	
Stiffness and Mass matrices respectively	384
Elas2DQ4	
To build element equations for 2-D linearized elasticity using 4-node quadrilat-	
erals	389
Elas2DT3	
To build element equations for 2-D linearized elasticity using 3-node triangles	409
Elas3DH8	
To build element equations for 3-D linearized elasticity using 8-node hexahedra	430
Elas3DT4	4.45
To build element equations for 3-D linearized elasticity using 4-node tetrahedra	447
To store and treat finite element geometric information	463
ElementList	400
Class to construct a list of elements having some common properties	472
Ellipse	
To store and treat an ellipsoidal figure	473
Equa_Electromagnetics< T_, NEN_, NEE_, NSN_, NSE_>	
Abstract class for Electromagnetics Equation classes	475
Equa_Fluid < T_, NEN_, NEE_, NSN_, NSE_ >	
Abstract class for Fluid Dynamics Equation classes	489
Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_>	
Abstract class for classes about the Laplace equation	504
Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >	<b>-</b> 10
Abstract class for Solid Mechanics Finite Element classes	518
Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_> Abstract class for Heat transfer Finite Element classes	E25
Equation < T_, NEN_, NEE_, NSN_, NSE_ >	330
Abstract class for all equation classes	552
Estimator	000
To calculate an a posteriori estimator of the solution	568
FastMarching2D	
To run a Fast Marching Method on 2-D structured uniform grids	569
FEShape	
Parent class from which inherit all finite element shape classes	570
Figure	
To store and treat a figure (or shape) information	572
FMM2D	
Class for the fast marching 2-D algorithm	574
FMM3D  Class for the 2 D fact morphing algorithm	EDE
Class for the 3-D fast marching algorithm	5/5

EN AN AC	Towns	
FMMSo		577
Funct	A simple class to parse real valued functions	578
Gauss		580
Grid		
Helmho	1 0	581
Hexa8	Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles	583
	Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparame interpolation	
ICPG1E	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D	599
ICPG3E	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D	607
	Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D	614
IOField	Enables working with files in the XML Format	619
IPF	To read project parameters from a file in IPF format	<b>62</b> 0
Iter< T.		
Laplace	1DL2	02)
т 1	To build element equation for a 1-D elliptic equation using the 2-Node line element $(P_1)$	630
Laplace	To build element equation for the 1-D elliptic equation using the 3-Node line	C 4 E
Laplace	2DFVT	645
Laplace	To build and solve the Laplace equation using a standard Finite Volume method 2DMHRT0	661
•	To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT <sub>0</sub> )	676
Laplace	To build element equation for the Laplace equation using the 2-D triangle element $(P_1)$	691
LCL1D	Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a	
	MUSCL Finite Volume scheme	708
LCL2D	Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles	<b>7</b> 13
LCL3D	Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra	718
Line2	To describe a 2-Node planar line finite element	

Line2H		
Line3	To describe a 2-Node Hermite planar line finite element	727
Lines	To describe a 3-Node quadratic planar line finite element	729
LinearSo	olver< T_>	
	Class to solve systems of linear equations by iterative methods	731
Localivia	ntrix< T_, NR_, NC_>	72.0
T 13.7	Handles small size matrices like element matrices, with a priori known size	736
Localve	ct< T_, N_ >	700
	Handles small size vectors like element vectors	738
Materia		
	To treat material data. This class enables reading material data in material data	
	files. It also returns these informations by means of its members	740
Matrix<		
	Virtual class to handle matrices for all storage formats	<b>74</b> 3
Mesh		
	To store and manipulate finite element meshes	752
Muscl		
	Parent class for hyperbolic solvers with Muscl scheme	774
Muscl1I		
	Class for 1-D hyperbolic solvers with Muscl scheme	777
Muscl2I	OT Control of the con	
	Class for 2-D hyperbolic solvers with Muscl scheme	781
Muscl3I	DT	
	Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra	784
MyOpt		
<i>J</i> 1	Abstract class to define by user specified optimization function	788
Node	7 1 1	
	To describe a node	789
NodeLis		
- 10 010 -	Class to construct a list of nodes having some common properties	793
NSP2DQ		
1,0120,	Builds finite element arrays for incompressible Navier-Stokes equations in 2-D	
	domains using $Q_1/P_0$ element and a penaly formulation for the incompressibil-	
	ity condition	794
ODESol		1 ) 3
ODLOG	To solve a system of ordinary differential equations	Q11
OptSolv		011
Optoorv	To solve an optimization problem with bound constraints	010
Partition	* *	010
1 al titioi	To partition a finite element mesh into balanced submeshes	825
Dombo6	To partition a finite element mesh into balanced submeshes	020
Penta6	Define a Constant of the last College law at the Define Define at the last and	
	Defines a 6-node pentahedral finite element using P <sub>1</sub> interpolation in local coor-	
	dinates (s.x,s.y) and $Q_1$ isoparametric interpolation in local coordinates (s. $\leftarrow$	000
DEED A	x,s.z) and (s.y,s.z)	829
PE15cM	Tatrix< T <sub>-</sub> >	001
	To handle matrices in sparse storage format using the Petsc library	831
PETScV	ect < T >	
	To handle general purpose vectors using Petsc	843
PETScW	$V_{\text{rapper}} < T_{-} > T_{-}$	
	This class is a wrapper to be used when the library Petsc is installed and used	
	with OFELI	864
PhaseCl		
	This class enables defining phase change laws for a given material	872

Point< T <sub>-</sub> >  Defines a point with arbitrary type coordinates	873
Point2D $<$ T $>$	0.0
Defines a 2-D point with arbitrary type coordinates	876
Polygon  To store and treat a polygonal figure	879
$Prec < T_{-} >$	
To set a preconditioner	881
To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable	885
Quad4  Defines a 4-node quadrilateral finite element using $Q_1$ isoparametric interpola-	
tion	886
Reconstruction	000
To perform various reconstruction operations	889
	891
To store and treat finite element sides (edges in 2-D or faces in 3-D)	893
SideList  Class to construct a list of sides having some common properties	899
SkMatrix $<$ T $>$ To handle square matrices in skyline storage format	900
SkSMatrix $<$ T $_{-}>$	900
, , ,	915
Sphere  To store and treat a sphere	923
SpMatrix< T <sub>-</sub> >	025
To handle matrices in sparse storage format	925
Solver of the Steklov Poincare problem in 2-D geometries using piecewie constant boundary elemen	942
Tabulation	
To read and manipulate tabulated functions	944
Defines a three-dimensional 4-node tetrahedral finite element using P <sub>1</sub> interpolation	044
Timer	
To handle elapsed time counting	947
TimeStepping  To solve time stepping problems, i.e. systems of linear ordinary differential	
equations of the form $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}$	948
Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles	953
Triang3 Defines a 3-Node ( $P_1$ ) triangle	968
Triang6S	
Defines a 6-Node straight triangular finite element using P <sub>2</sub> interpolation	971
Defines a triangle. The reference element is the rectangle triangle with two unit edges	976

Triangle
To store and treat a triangle
TrMatrix < T >
To handle tridiagonal matrices
UserData< T_>
Abstract class to define by user various problem data
Vect < T >
To handle general purpose vectors

# **Module Documentation**

# 5.1 Conservation Law Equations

For solvers of conservation law equations.

# Classes

• class ICPG1D

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.

class ICPG2DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.

class ICPG3DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.

• class LCL1D

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

class LCL2DT

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

• class LCL3DT

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

class Muscl

Parent class for hyperbolic solvers with Muscl scheme.

• class Muscl1D

Class for 1-D hyperbolic solvers with Muscl scheme.

• class Muscl2DT

Class for 2-D hyperbolic solvers with Muscl scheme.

• class Muscl3DT

Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra.

# 5.1.1 Detailed Description

For solvers of conservation law equations.

# 5.2 Electromagnetics

Gathers electromagnetic equation classes.

### Classes

• class BiotSavart

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

• class EC2D1T3

Eddy current problems in 2-D domains using solenoidal approximation.

• class Equa\_Electromagnetics< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Electromagnetics Equation classes.

• class HelmholtzBT3

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.

# 5.2.1 Detailed Description

Gathers electromagnetic equation classes.

# 5.3 Finite Element Mesh

Gathers mesh related classes.

### Classes

• class Domain

 ${\it To store and treat finite element geometric information.}$ 

class Edge

To describe an edge.

• class Element

To store and treat finite element geometric information.

• class Figure

To store and treat a figure (or shape) information.

• class Rectangle

To store and treat a rectangular figure.

• class Brick

To store and treat a brick (parallelepiped) figure.

class Circle

To store and treat a circular figure.

• class Sphere

To store and treat a sphere.

• class Ellipse

To store and treat an ellipsoidal figure.

class Triangle

To store and treat a triangle.

• class Polygon

To store and treat a polygonal figure.

• class Grid

To manipulate structured grids.

• class Mesh

To store and manipulate finite element meshes.

class NodeList

Class to construct a list of nodes having some common properties.

class ElementList

 ${\it Class\ to\ construct\ a\ list\ of\ elements\ having\ some\ common\ properties}.$ 

• class SideList

Class to construct a list of sides having some common properties.

• class EdgeList

Class to construct a list of edges having some common properties.

class Node

To describe a node.

• class Partition

To partition a finite element mesh into balanced submeshes.

• class Side

To store and treat finite element sides (edges in 2-D or faces in 3-D)

### **Macros**

• #define GRAPH\_MEMORY 1000000

Memory necessary to store matrix graph.

• #define MAX\_NB\_ELEMENTS 10000

Maximal Number of elements.

• #define MAX\_NB\_NODES 10000

Maximal number of nodes.

• #define MAX\_NB\_SIDES 30000

Maximal number of sides in.

• #define MAX\_NB\_EDGES 30000

Maximal Number of edges.

• #define MAX\_NBDOF\_NODE 6

Maximum number of DOF supported by each node.

• #define MAX\_NBDOF\_SIDE 6

Maximum number of DOF supported by each side.

#define MAX\_NBDOF\_EDGE 2

Maximum number of DOF supported by each edge.

• #define MAX\_NB\_ELEMENT\_NODES 20

Maximum number of nodes by element.

• #define MAX\_NB\_ELEMENT\_EDGES 10

Maximum number of edges by element.

#define MAX\_NB\_SIDE\_NODES 9

Maximum number of nodes by side.

• #define MAX\_NB\_ELEMENT\_SIDES 8

*Maximum number of sides by element.* 

#define MAX\_NB\_ELEMENT\_DOF 27

*Maximum number of dof by element.* 

• #define MAX\_NB\_SIDE\_DOF 4

Maximum number of dof by side.

• #define MAX\_NB\_INT\_PTS 20

Maximum number of integration points in element.

• #define MAX\_NB\_MATERIALS 10

Maximum number of materials.

- #define TheNode (\*theNode)
- #define TheElement (\*theElement)
- #define TheSide (\*theSide)
- #define TheEdge (\*theEdge)
- #define MeshElements(mesh) for ((mesh).topElement(); (theElement=(mesh).getElement());)
- #define MeshActiveElements(mesh) for ((mesh).topElement(); (theElement=(mesh).get← ActiveElement());)
- #define MeshNodeLoop(mesh, node) for ((mesh).topNode(); ((node)=(mesh).getNode());)
- #define MeshNodes(mesh) for ((mesh).topNode(); (theNode=(mesh).getNode());)
- #define MeshSides(mesh) for ((mesh).topSide(); (theSide=(mesh).getSide());)
- #define MeshSideSet(sl) for ((sl).top(); (theSide=(sl).get());)
- #define MeshBoundarySides(mesh) for ((mesh).topBoundarySide(); (theSide=(mesh).get← BoundarySide());)

- #define MeshEdges(mesh) for ((mesh).topEdge(); (theEdge=(mesh).getEdge());)
- #define the Node->n()
- #define theSideLabel theSide->n()

A macro that returns side label in a loop using macro MeshSides

#define theSideNodeLabel(i) theSide->getNodeLabel(i)

A macro that returns label of i-th node of side using macro MeshSides

• #define the Element Label the Element -> n()

A macro that returns element label in a loop using macro MeshElements

• #define the Element Node Label (i) the Element -> get Node Label (i)

A macro that returns label of i-th node of element using macro MeshElements

### **Functions**

• ostream & operator<< (ostream &s, const Edge &ed)

Output edge data.

ostream & operator<< (ostream &s, const Element &el)</li>

Output element data.

• Figure operator&& (const Figure &f1, const Figure &f2)

Function to define a Figure instance as the intersection of two Figure instances.

• Figure operator- (const Figure &f1, const Figure &f2)

Function to define a Figure instance as the set subtraction of two Figure instances.

• ostream & operator << (ostream &s, const Material &m)

Output material data.

• ostream & operator<< (ostream &s, const Mesh &ms)

Output mesh data.

• ostream & operator << (ostream &s, const NodeList &nl)

Output NodeList instance.

• ostream & operator<< (ostream &s, const ElementList &el)

Output ElementList instance.

• ostream & operator << (ostream &s, const SideList &sl)

Output SideList instance.

• ostream & operator<< (ostream &s, const EdgeList &el)

Output EdgeList instance.

• size\_t Label (const Node &nd)

Return label of a given node.

• size\_t Label (const Element &el)

Return label of a given element.

• size\_t Label (const Side &sd)

Return label of a given side.

• size\_t Label (const Edge &ed)

Return label of a given edge.

size\_t NodeLabel (const Element &el, size\_t n)

Return global label of node local label in element.

• size\_t NodeLabel (const Side &sd, size\_t n)

Return global label of node local label in side.

• Point< real\_t > Coord (const Node &nd)

Return coordinates of a given node.

• int Code (const Node &nd, size\_t i=1)

Return code of a given (degree of freedom of) node.

• int Code (const Element &el)

Return code of a given element.

• int Code (const Side &sd, size\_t i=1)

Return code of a given (degree of freedom of) side.

• bool operator== (const Element &el1, const Element &el2)

*Check equality between 2 elements.* 

• bool operator== (const Side &sd1, const Side &sd2)

Check equality between 2 sides.

void DeformMesh (Mesh &mesh, const Vect < real\_t > &u, real\_t a=1)

Calculate deformed mesh using a displacement field.

• void DeformMesh (Mesh &mesh, const PETScVect< real\_t > &u, real\_t a=1)

Calculate deformed mesh using a displacement field as instance of PETScVect.

void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real\_t > &u1, Vect< real\_t > &u2, size\_t nx, size\_t ny=0, size\_t nz=0, size\_t dof=1)

Function to redefine a vector defined on a mesh to a new mesh.

void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real\_t > &u1, Vect< real\_t > &u2, const Point< real\_t > &xmin, const Point< real\_t > &xmax, size\_t nx, size\_t ny, size\_t nz, size\_t dof=1)

Function to redefine a vector defined on a mesh to a new mesh.

• real\_t getMaxSize (const Mesh &m)

Return maximal size of element edges for given mesh.

• real\_t getMinSize (const Mesh &m)

Return minimal size of element edges for given mesh.

• real\_t getMinElementMeasure (const Mesh &m)

Return minimal measure (length, area or volume) of elements of given mesh.

real\_t getMinSideMeasure (const Mesh &m)

Return minimal measure (length or area) of sides of given mesh.

real\_t getMaxSideMeasure (const Mesh &m)

Return maximal measure (length or area) of sides of given mesh.

real\_t getMeanElementMeasure (const Mesh &m)

Return average measure (length, area or volume) of elements of given mesh.

real\_t getMeanSideMeasure (const Mesh &m)

Return average measure (length or area) of sides of given mesh.

void setNodeCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all nodes satisfying a boolean expression using node coordinates.

void setBoundaryNodeCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.

• void setSideCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all sides satisfying a boolean expression using node coordinates.

void setBoundarySideCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.

• void setElementCodes (Mesh &m, const string &exp, int code)

Assign a given code to all elements satisfying a boolean expression using node coordinates.

• int NodeInElement (const Node \*nd, const Element \*el)

Say if a given node belongs to a given element.

- int NodeInSide (const Node \*nd, const Side \*sd)
  - Say if a given node belongs to a given side.
- int SideInElement (const Side \*sd, const Element \*el)
  - Say if a given side belongs to a given element.
- ostream & operator<< (ostream &s, const Node &nd)
  - Output node data.
- ostream & operator << (ostream &s, const Side &sd)
  - Output side data.

# 5.3.1 Detailed Description

Gathers mesh related classes.

### 5.3.2 Macro Definition Documentation

### #define GRAPH\_MEMORY 1000000

Memory necessary to store matrix graph.

This value is necessary only if nodes are to be renumbered.

#### #define TheNode (\*theNode)

A macro that gives the instance pointed by the Node

# #define The Element (\*the Element)

A macro that gives the instance pointed by the Element

#### #define TheSide (\*theSide)

A macro that gives the instance pointed by the Side

# #define TheEdge (\*theEdge)

A macro that gives the instance pointed by the Edge

# #define MeshElements( mesh ) for ((mesh).topElement(); (theElement=(mesh).getElement());)

A macro to loop on mesh elements mesh: Instance of Mesh

Note

: Each iteration updates the pointer the Element to current Element

# #define MeshActiveElements( mesh ) for ((mesh).topElement(); (theElement=(mesh).getActiveElement());)

A macro to loop on mesh active elements *mesh*: Instance of Mesh

Note

- : Each iteration updates the pointer the Element to current Element
- : This macro is necessary only if adaptive meshing is used

# #define MeshNodeLoop( mesh, node ) for ((mesh).topNode(); ((node)=(mesh).getNode());)

A macro to loop on mesh nodes mesh: Instance of Mesh node: Pointer to pointed node

# #define MeshNodes( mesh ) for ((mesh).topNode(); (theNode=(mesh).getNode());)

A macro to loop on mesh nodes mesh: Instance of Mesh

Note

: Each iteration updates the pointer the Node to current Node

# #define MeshBoundaryNodes( mesh ) for ((mesh).topBoundaryNode(); (theNode=(mesh).getBoundaryNode());)

A macro to loop on mesh nodes mesh: Instance of Mesh

Note

: Each iteration updates the pointer the Node to current Node

# #define MeshSides( mesh ) for ((mesh).topSide(); (theSide=(mesh).getSide());)

A macro to loop on mesh sides mesh: Instance of Mesh

Note

: Each iteration updates the pointer the Side to current Side

# #define MeshSideSet( sl ) for ((sl).top(); (theSide=(sl).get());)

A macro to loop on a subset of mesh sides s1: Instance of SideList class

Note

: Each iteration updates the pointer the Side to current Side

# #define MeshBoundarySides( mesh ) for ((mesh).topBoundarySide(); (theSide=(mesh).getBoundarySide());)

A macro to loop on mesh boundary sides mesh: Instance of Mesh Notes:

- List of boundary sides must have been previously created by using class SideList
- Each iteration updates the pointer the Side to current Side

# #define MeshEdges( mesh ) for ((mesh).topEdge(); (theEdge=(mesh).getEdge());)

A macro to loop on mesh edges mesh: Instance of Mesh

Note

: Each iteration updates the pointer the Edge to current Edge

### #define the Node->n()

A macro that returns node label in a loop using macro MeshNodes

# 5.3.3 Function Documentation

# Figure operator&& ( const Figure & f1, const Figure & f2 )

Function to define a Figure instance as the intersection of two Figure instances. Function to define a Figure instance as the union of two Figure instances.

### **Parameters**

in	f1	First Figure instance
in	<i>f</i> 2	Second Figure instance

#### Returns

Updated resulting Figure instance

# Figure operator- (const Figure & f1, const Figure & f2)

Function to define a Figure instance as the set subtraction of two Figure instances.

#### **Parameters**

in   f1		First Figure instance to subtract from
in	<i>f</i> 2	Second Figure instance to subtract

### Returns

Updated resulting Figure instance

### size\_t Label (const Node & nd)

Return label of a given node.

### **Parameters**

in	nd	Reference to Node instance
----	----	----------------------------

# Returns

Label of node

# size\_t Label ( const Element & el )

Return label of a given element.

# Parameters

in	el	Reference to Element instance
----	----	-------------------------------

# Returns

Label of element

# size\_t Label ( const Side & sd )

Return label of a given side.

### **Parameters**

in	sd	Reference to Side instance
----	----	----------------------------

# Returns

Label of side

# size\_t Label ( const Edge & ed )

Return label of a given edge.

# Parameters

in	ed	Reference to Edge instance

# Returns

Label of edge

# size\_t NodeLabel ( const Element & el, size\_t n )

Return global label of node local label in element.

# Parameters

in	el	Reference to Element instance
in	n	Local label of node in element

# Returns

Global label of node

# size\_t NodeLabel ( const Side & sd, size\_t n )

Return global label of node local label in side.

### Parameters

in	sd	Reference to Side instance
in	n	Local label of node in side

# Returns

Global label of node

# Point < real\_t > Coord ( const Node & nd )

Return coordinates of a given node.

# Parameters

i	n	nd	Reference to Node instance
---	---	----	----------------------------

### Returns

Coordinates of node

# int Code ( const Node & nd, size\_t i = 1 )

Return code of a given (degree of freedom of) node.

### Parameters

in	nd	Reference to Node instance
in	i	Label of dof [Default: 1]

#### Returns

Code of dof of node

# int Code (const Element & el)

Return code of a given element.

### **Parameters**

in	el	Reference to Element instance
----	----	-------------------------------

# Returns

Code of element

# int Code ( const Side & sd, size\_t i = 1 )

Return code of a given (degree of freedom of) side.

### Parameters

in	sd	Reference to Side instance
in	i	Label of dof [Default: 1]

### Returns

Code of dof of side

# operator== ( const Element & el1, const Element & el2 )

Check equality between 2 elements.

### Parameters

in	el1	Reference to first Side instance
in	el2	Reference to second Side instance

#### Returns

true is elements are equal, *i.e.* if they have the same nodes, false if not.

# bool operator== ( const Side & sd1, const Side & sd2 )

Check equality between 2 sides.

### Parameters

in	sd1	Reference to first Side instance
in	sd2	Reference to second Side instance

### Returns

true is sides are equal, *i.e.* if they have the same nodes, false if not.

# void DeformMesh ( Mesh & mesh, const Vect < real\_t > & u, real\_t a = 1 )

Calculate deformed mesh using a displacement field.

# Parameters

in,out	mesh	Mesh instance. On output, node coordinates are modified to take into account the displacement
in	и	Displacement field at nodes
in	а	Amplification factor [Default: 1]. The displacement is multiplied by a before to be added to node coordinates

### void DeformMesh (Mesh & mesh, const PETScVect < real\_t > & u, real\_t a = 1)

Calculate deformed mesh using a displacement field as instance of PETScVect.

#### **Parameters**

in,out	mesh	Mesh instance. On output, node coordinates are modified to take into account the displacement
in	и	Displacement field at nodes
in	а	Amplification factor [Default: 1]. The displacement is multiplied by a before to be added to node coordinates

void MeshToMesh (Mesh & m1, Mesh & m2, const Vect< real\_t > & u1, Vect< real\_t > & u2, size\_t nx, size\_t ny = 0, size\_t nz = 0.

Function to redefine a vector defined on a mesh to a new mesh.

The program interpolates (piecewise linear) first the vector on a finer structured grid. Then the values on the new mesh nodes are computed.

### Remarks

For efficiency the number of grid cells must be large enough so that interpolation provides efficient accuracy

### **Parameters**

in	m1	Reference to the first mesh instance	
out	<i>m</i> 2	Reference to the second mesh instance	
in	и1	Input vector of nodal values defined on first mesh	
out	и2	Output vector of nodal values defined on second mesh	
in	nx	Number of cells in the x-direction in the fine structured grid	
in	ny	Number of cells in the y-direction in the fine structured grid The default value of ny is 0, i.e. a 1-D grid	
in	nz	Number of cells in the z-direction in the fine structured grid The default value of nz is 0, i.e. a 1-D or 2-D grid	
in	dof	Label of degree of freedom of vector u. Only this dof is considered. [Default: 1]	

# Note

The input vector u1 is a one degree of freedom per node vector, i.e. its size must be equal (or greater than) the total number of nodes of mesh m1. The size of vector u2 is deduced from the mesh m2

void MeshToMesh ( Mesh & m1, Mesh & m2, const Vect< real\_t > & u1, Vect< real\_t > & u2, const Point< real\_t > & xmin, const Point< real\_t > & xmax, size\_t nx, size\_t nx,

Function to redefine a vector defined on a mesh to a new mesh.

The program interpolates (piecewise linear) first the vector on a finer structured grid. Then the values on the new mesh nodes are computed. In this function the grid rectangle is defined so that this one can cover only a submesh of m1.

### Remarks

For efficiency the number of grid cells must be large enough so that interpolation provides efficient accuracy

### Parameters

in	m1	Reference to the first mesh instance	
out	m2	Reference to the second mesh instance	
in	и1	Input vector of nodal values defined on first mesh	
out	и2	Output vector of nodal values defined on second mesh	
in	xmin	Point instance containing minimal coordinates of the rectangle that defines the grid	
in	xmax	Point instance containing maximal coordinates of the rectangle that defines the grid	
in	пх	Number of cells in the x-direction in the fine structured grid	
in	пу	Number of cells in the y-direction in the fine structured grid The default value of ny is 0, i.e. a 1-D grid	
in	nz	Number of cells in the z-direction in the fine structured grid The default value of nz is 0, i.e. a 1-D or 2-D grid	
in	dof	Label of degree of freedom of vector u. Only this dof is considered. [Default: 1]	

# Note

The input vector u1 is a one degree of freedom per node vector, i.e. its size must be equal (or greater than) the total number of nodes of mesh m1. The size of vector u2 is deduced from the mesh m2

# real\_t getMaxSize ( const Mesh & m )

Return maximal size of element edges for given mesh.

### Parameters

in	m	Reference to mesh instance
----	---	----------------------------

# real\_t getMinSize ( const Mesh & m )

Return minimal size of element edges for given mesh.

### **Parameters**

in	m	Reference to mesh instance
----	---	----------------------------

# real\_t getMinElementMeasure ( const Mesh & m )

Return minimal measure (length, area or volume) of elements of given mesh. Return maximal measure (length, area or volume) of elements of given mesh.

### **Parameters**

in	m	Reference to mesh instance

# real\_t getMinSideMeasure ( const Mesh & m )

Return minimal measure (length or area) of sides of given mesh.

#### **Parameters**

in	m	Reference to mesh instance
----	---	----------------------------

### Note

Use this function only if sides are present in the mesh and for 2-D meshes

# real\_t getMaxSideMeasure ( const Mesh & m )

Return maximal measure (length or area) of sides of given mesh.

### Parameters

in	m	Reference to mesh instance
----	---	----------------------------

#### Note

Use this function only if sides are present in the mesh and for 2-D meshes

# real\_t getMeanElementMeasure ( const Mesh & m )

Return average measure (length, area or volume) of elements of given mesh.

### Parameters

in	m	Reference to mesh instance
----	---	----------------------------

# real\_t getMeanSideMeasure ( const Mesh & m )

Return average measure (length or area) of sides of given mesh.

#### **Parameters**

#### Note

Use this function only if sides are present in the mesh and for 2-D meshes

# void setNodeCodes ( Mesh & $m_r$ , const string & $exp_r$ , int $code_r$ , size\_t dof = 1 )

Assign a given code to all nodes satisfying a boolean expression using node coordinates.

#### **Parameters**

in	m	Reference to mesh instance		
in	ехр	Regular expression using x, y, and z coordinates of nodes, according to fparser		
		parser		
in	code	Code to assign		
in	dof	Degree of freedom for which code is assigned [Default: 1]		

# void setBoundaryNodeCodes (Mesh & m, const string & exp, int code, size\_t dof = 1)

Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.

#### Parameters

in	m	Reference to mesh instance	
in	exp	Regular expression using x, y, and z coordinates of nodes, according to fparser	
		parser	
in	code	Code to assign	
in	dof	Degree of freedom for which code is assigned [Default: 1]	

# void setSideCodes ( Mesh & m, const string & exp, int code, size\_t dof = 1 )

Assign a given code to all sides satisfying a boolean expression using node coordinates.

#### Parameters

in	m	Reference to mesh instance		
in	exp	egular expression using x, y, and z coordinates of side nodes, according to		
		fparser parser		
in	code	Code to assign		
in	dof	Degree of freedom for which code is assigned [Default: 1]		

# void setBoundarySideCodes (Mesh & m, const string & exp, int code, size\_t dof = 1)

Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.

#### Parameters

in	m	Reference to mesh instance		
in	exp	egular expression using x, y, and z coordinates of side nodes, according to		
		fparser parser		
in	code	Code to assign		
in	dof	Degree of freedom for which code is assigned [Default: 1]		

# void setElementCodes ( Mesh & m, const string & exp, int code )

Assign a given code to all elements satisfying a boolean expression using node coordinates.

#### Parameters

in	m	Reference to mesh instance	
in	ехр	Regular expression using $x$ , $y$ , and $z$ coordinates of element nodes, according to Eparser parser	
in	code	Code to assign	

# int NodeInElement ( const Node \* nd, const Element \* el )

Say if a given node belongs to a given element.

#### Parameters

in	nd	Pointer to Node
in	el	Pointer to Element

### Returns

Local label of the node if this one is found, 0 if not.

# int NodeInSide ( const Node \* nd, const Side \* sd )

Say if a given node belongs to a given side.

# Parameters

in	nd	Pointer to Node
in	sd	Pointer to Side

#### Returns

Local label of the node if this one is found, 0 if not.

# int SideInElement ( const Side \*sd, const Element \*el )

Say if a given side belongs to a given element.

# Parameters

in	sd	Pointer to Side
in	el	Pointer to Element

# Returns

Local label of the side if this one is found, 0 if not.

# 5.4 Fluid Dynamics

Gathers Fluid Dynamics equation classes.

#### Classes

- class Equa\_Fluid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Abstract class for Fluid Dynamics Equation classes.
- class NSP2DQ41

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using  $Q_1/P_0$  element and a penaly formulation for the incompressibility condition.

• class TINS2DT3B

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

# 5.4.1 Detailed Description

Gathers Fluid Dynamics equation classes.

# 5.5 General Purpose Equations

Gathers equation related classes.

#### Classes

• class AbsEqua < T\_>

Mother abstract class to describe equation.

• class Equation < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >

Abstract class for all equation classes.

class Estimator

*To calculate an a posteriori estimator of the solution.* 

#### **Functions**

• template < class  $T_-$ , size\_t  $N_-$ , class  $E_-$  > void element\_assembly (const  $E_-$  &e, const LocalVect <  $T_-$ ,  $N_-$  > &be, Vect <  $T_-$  > &b)

Assemble local vector into global vector.

template < class T\_, size\_t N\_, class E\_ > void element\_assembly (const E\_ &e, const LocalMatrix < T\_, N\_, N\_ > &ae, Vect < T\_ > &b)
 Assemble diagonal local vector into global vector.

• template < class T\_ , size\_t N\_ , class E\_ > void element\_assembly (const E\_ &e, const LocalMatrix < T\_ , N\_ , N\_ > &ae, Matrix < T\_ > \*A)

Assemble local matrix into global matrix.

• template < class T\_, size\_t N\_, class E\_ > void element\_assembly (const E\_ &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SkMatrix < T\_ > &A)

Assemble local matrix into global skyline matrix.

• template < class  $T_-$ , size\_t  $N_-$ , class  $E_-$  > void element\_assembly (const  $E_-$  &e, const LocalMatrix <  $T_-$ ,  $N_-$ ,  $N_-$  > &ae, SkSMatrix <  $T_-$  > &A)

Assemble local matrix into global symmetric skyline matrix.

template < class T\_, size\_t N\_, class E\_ > void element\_assembly (const E\_ &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SpMatrix < T\_ > &A)

Assemble local matrix into global sparse matrix.

• template < class T\_, size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SpMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SpMatrix).

• template < class T\_ , size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_ , N\_ , N\_ > &ae, SkSMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SkSMatrix).

• template < class T\_ , size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_ , N\_ , N\_ > &ae, SkMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SkMatrix).

- template < class T\_, size\_t N\_>
   void side\_assembly (const Element &e, const LocalVect < T\_, N\_ > &be, Vect < T\_ > &b)
   Side assembly of local vector into global vector.
- ostream & operator << (ostream &s, const Estimator &r)

  Output estimator vector in output stream.

# 5.5.1 Detailed Description

Gathers equation related classes.

#### 5.5.2 Function Documentation

void element\_assembly ( const  $E_- \& e$ , const LocalVect $< T_-$ ,  $N_- > \& be$ , Vect $< T_- > \& b$ )

Assemble local vector into global vector.

#### **Parameters**

in	е	Reference to local entity (Element or Side)	
in	be	Local vector	
in,out	b	Global vector	

void element\_assembly ( const E\_ & e, const LocalMatrix< T\_, N\_, N\_ > & ae, Vect< T\_ > & b )

Assemble diagonal local vector into global vector.

#### **Parameters**

in	е	Reference to local entity (Element or Side)	
in	ae	Local matrix	
in,out	b	Global vector	

void element\_assembly ( const E\_ & e, const LocalMatrix< T\_, N\_, N\_ > & ae, Matrix< T\_ > \* A )

Assemble local matrix into global matrix.

This function is to be called with an abstract pointer to matrix (class Matrix)

#### Parameters

in	е	Reference to local entity (Element or Side)
in	ae	Local matrix
in,out	A	Pointer to global matrix

# void element\_assembly ( const E\_ & e, const LocalMatrix< T\_, N\_, N\_ > & ae, SkMatrix< T\_ > & A )

Assemble local matrix into global skyline matrix.

#### Parameters

in	е	Reference to local entity (Element or Side)	
in	ae	Local matrix	
in,out	Α	Global matrix	

# void element\_assembly ( const E\_ & e, const LocalMatrix< T\_, N\_, N\_ > & ae, SkSMatrix< T\_ > & A )

Assemble local matrix into global symmetric skyline matrix.

#### **Parameters**

in	е	Reference to local entity (Element or Side)
in	ae	Local matrix
in,out	Α	Global matrix

# void element\_assembly ( const E\_ & e, const LocalMatrix< T\_, N\_, N\_ > & ae, SpMatrix< T\_ > & A )

Assemble local matrix into global sparse matrix.

### Parameters

in	е	Reference to local entity (Element or Side)
in	ae	Local matrix
in,out	A	Global matrix

# void side\_assembly ( const Element & e, const LocalMatrix< T\_-, N\_-, N\_- > & ae, SpMatrix< T\_- > & A )

Side assembly of local matrix into global matrix (as instance of class SpMatrix).

#### Parameters

in	e	Reference to local Element
in	ae	Local matrix
in,out	Α	Global matrix

# void side\_assembly ( const Element & e, const LocalMatrix< T\_, N\_, N\_ > & ae, SkSMatrix< T\_ > & A )

Side assembly of local matrix into global matrix (as instance of class SkSMatrix).

#### Parameters

in	е	Reference to local Element
in	ae	Local matrix
in,out	Α	Global matrix

# void side\_assembly ( const Element & e, const LocalMatrix< T\_-, N\_-, N\_- > & ae, SkMatrix< T\_- > & A)

Side assembly of local matrix into global matrix (as instance of class SkMatrix).

#### Parameters

in	е	Reference to local Element
in	ae	Local matrix
in,out	Α	Global matrix

# void side\_assembly ( const Element & e, const LocalVect< $T_-$ , $N_-$ > & be, Vect< $T_-$ > & b ) Side assembly of local vector into global vector.

### Parameters

in	е	Reference to local Element
in	be	Local vector
in,out	b	Global vector

# 5.6 Global Variables

Gathers all global variables in the library.

#### **Variables**

• Node \* theNode

A pointer to Node.

• Element \* the Element

A pointer to Element.

• Side \* theSide

A pointer to Side.

• Edge \* theEdge

A pointer to Edge.

• int theStep

Time step counter.

• int theIteration

Iteration counter.

int NbTimeSteps

Number of time steps.

• int MaxNbIterations

Maximal number of iterations.

• int Verbosity

Parameter for verbosity of message outputting.

real\_t theTimeStep

Time step label.

• real\_t theTime

Time value.

• real\_t theFinalTime

Final time value.

• real\_t theTolerance

Tolerance value for convergence.

• real\_t theDiscrepancy

Value of discrepancy for an iterative procedure Its default value is 1.0.

• bool Converged

Boolean variable to say if an iterative procedure has converged.

• bool InitPetsc

# 5.6.1 Detailed Description

Gathers all global variables in the library.

#### 5.6.2 Variable Documentation

#### Node\* theNode

A pointer to Node.

Useful for loops on nodes

#### **Element\* the Element**

A pointer to Element.

Useful for loops on elements

#### Side\* theSide

A pointer to Side.

Useful for loops on sides

# Edge\* theEdge

A pointer to Edge.

Useful for loops on edges

# int theStep

Time step counter.

This counter must be initialized by the user if the macro timeLoop is not used

#### Remarks

May be used in conjunction with the macro TimeLoop. In this case, it has to be initialized before. Its default value is 1

#### int theIteration

Iteration counter.

This counter must be initialized by the user

#### Remarks

May be used in conjunction with the macro IterationLoop. Its default value is 1

# int NbTimeSteps

Number of time steps.

Remarks

May be used in conjunction with the macro TimeLoop.

#### int MaxNbIterations

Maximal number of iterations.

Remarks

May be used in conjunction with the macro IterationLoop. Its default value is 1000

#### int Verbosity

Parameter for verbosity of message outputting.

Its default value is 1

#### real\_t theTimeStep

Time step label.

#### Remarks

May be used in conjunction with the macro TimeLoop. In this case, it has to be initialized before

#### real\_t theTime

Time value.

Remarks

May be used in conjunction with the macro TimeLoop. Its default value is 0.0

#### real\_t theFinalTime

Final time value.

Remarks

May be used in conjunction with the macro TimeLoop. In this case, it has to be initialized before

#### real\_t theTolerance

Tolerance value for convergence.

Remarks

May be used within an iterative procedure. Its default value is 1.e-8

# bool Converged

Boolean variable to say if an iterative procedure has converged. Its default value is false

#### bool InitPetsc

Boolean to say if PETSc use was initialized. Useful only if PETSc is used

# 5.7 Heat Transfer

Gathers Heat Transfer equation classes.

#### Classes

• class DC1DL2

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.

• class DC2DT3

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

• class DC2DT6

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

• class DC3DAT3

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

• class DC3DT4

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

• class Equa\_Therm< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Heat transfer Finite Element classes.

class PhaseChange

This class enables defining phase change laws for a given material.

# 5.7.1 Detailed Description

Gathers Heat Transfer equation classes.

# 5.8 Input/Output

Gathers Input/Output utility classes.

#### Classes

• class IOField

Enables working with files in the XML Format.

• class IPF

To read project parameters from a file in IPF format.

• class Prescription

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

#### **Macros**

• #define MAX\_NB\_PAR 50

Maximum number of parameters.

• #define MAX\_ARRAY\_SIZE 100

Maximum array size.

• #define MAX\_INPUT\_STRING\_LENGTH 100

Maximum string length.

• #define FILENAME\_LENGTH 150

Length of a string defining a file name.

# 5.8.1 Detailed Description

Gathers Input/Output utility classes.

# 5.8.2 Macro Definition Documentation

# #define MAX\_NB\_PAR 50

Maximum number of parameters. Used in class IPF

#### #define MAX\_ARRAY\_SIZE 100

Maximum array size. Used in class IPF

# #define MAX\_INPUT\_STRING\_LENGTH 100

Maximum string length.

Used in class IPF

# 5.9 Interface Problems

Gathers classes and functions for general interface problems, including image processing.

# Classes

• class FastMarching2D

To run a Fast Marching Method on 2-D structured uniform grids.

• class FMMSolver

The Fast Marching Method solver.

# 5.9.1 Detailed Description

Gathers classes and functions for general interface problems, including image processing.

# 5.10 Laplace equation

Gathers equation classes for the Laplace equation.

#### Classes

- class Equa\_Laplace< T\_, NEN\_, NEE\_, NSN\_, NSE\_ >
  - Abstract class for classes about the Laplace equation.
- class Laplace1DL2

To build element equation for a 1-D elliptic equation using the 2-Node line element  $(P_1)$ .

• class Laplace1DL3

To build element equation for the 1-D elliptic equation using the 3-Node line  $(P_2)$ .

class Laplace2DFVT

To build and solve the Laplace equation using a standard Finite Volume method.

• class Laplace2DMHRT0

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT<sub>0</sub>).

• class Laplace2DT3

To build element equation for the Laplace equation using the 2-D triangle element  $(P_1)$ .

• class SteklovPoincare2DBE

Solver of the Steklov Poincare problem in 2-D geometries using piecewie constant boundary elemen.

# 5.10.1 Detailed Description

Gathers equation classes for the Laplace equation.

# **5.11 OFELI**

### **Modules**

• Conservation Law Equations

For solvers of conservation law equations.

Electromagnetics

Gathers electromagnetic equation classes.

• Finite Element Mesh

Gathers mesh related classes.

• Fluid Dynamics

Gathers Fluid Dynamics equation classes.

• General Purpose Equations

Gathers equation related classes.

• Global Variables

Gathers all global variables in the library.

Heat Transfer

Gathers Heat Transfer equation classes.

• Input/Output

Gathers Input/Output utility classes.

• Interface Problems

Gathers classes and functions for general interface problems, including image processing.

• Laplace equation

*Gathers equation classes for the Laplace equation.* 

Physical properties of media

A module that contains classes for physical properties of materials and media.

• Shape Function

Gathers shape function classes.

• Solid Mechanics

Gathers Solid Mechanics finite element equations related classes.

Solver

Gathers Solver functions.

• Utilities

Gathers utility functions and classes.

• Vector and Matrix

Gathers vector and matrix related classes.

# **Files**

• file AbsEqua.h

Definition file for abstract class AbsEqua.

• file ICPG1D.h

Definition file for class ICPG1D.

• file ICPG2DT.h

Definition file for class ICPG2DT.

• file ICPG3DT.h

Definition file for class ICPG3DT.

• file LCL1D.h

Definition file for class LCL1D.

• file LCL2DT.h

Definition file for class LCL2DT.

• file LCL3DT.h

Definition file for class LCL3DT.

• file Muscl.h

Definition file for class Muscl.

• file Muscl1D.h

Definition file for class Muscl1D.

• file Muscl2DT.h

Definition file for class Muscl2DT.

• file Muscl3DT.h

Definition file for class Muscl3DT.

• file BiotSavart.h

Definition file for class BiotSavart.

file EC2D1T3.h

Definition file for class EC2D1T3.

• file Equa\_Electromagnetics.h

Definition file for class FE\_Electromagnetics.

• file HelmholtzBT3.h

Definition file for class HelmholtzBT3.

• file Equation.h

Definition file for class Equation.

• file Equa\_Fluid.h

Definition file for class Equa\_Fluid.

• file NSP2DQ41.h

Definition file for class NSP2DQ41.

• file TINS2DT3B.h

Definition file for class TINS2DT3B.

• file Equa\_Laplace.h

Definition file for class Equa\_Laplace.

• file Laplace1DL2.h

Definition file for class Laplace1DL2.

• file Laplace1DL3.h

Definition file for class Laplace1DL3.

• file Laplace2DFVT.h

Definition file for class Laplace.

• file Laplace2DMHRT0.h

Definition file for class Laplace2DMHRT0.

• file Laplace2DT3.h

Definition file for class Laplace2DT3.

• file Laplace3DT4.h

Definition file for class Laplace3DT4.

• file SteklovPoincare2DBE.h

Definition file for class SteklovPoincare2DBE.

• file Bar2DL2.h

Definition file for class Bar2DL2.

• file Beam3DL2.h

Definition file for class Beam3DL2.

• file Elas2DQ4.h

Definition file for class Elas2DQ4.

• file Elas2DT3.h

Definition file for class Elas2DT3.

• file Elas3DH8.h

Definition file for class Elas3DH8.

• file Elas3DT4.h

Definition file for class Elas3DT4.

• file Equa\_Solid.h

Definition file for class Equa\_Solid.

• file DC1DL2.h

Definition file for class DC1DL2.

file DC2DT3.h

Definition file for class DC2DT3.

• file DC2DT6.h

Definition file for class DC2DT6.

• file DC3DAT3.h

Definition file for class DC3DAT3.

• file DC3DT4.h

Definition file for class DC3DT4.

• file Equa\_Therm.h

Definition file for class Equa\_Therm.

• file PhaseChange.h

Definition file for class PhaseChange and its parent abstract class.

• file Funct.h

Definition file for class Funct.

• file IOField.h

Definition file for class IOField.

• file IPF.h

Definition file for class IPF.

• file output.h

File that contains some output utility functions.

• file Prescription.h

Definition file for class Prescription.

• file saveField.h

Prototypes for functions to save mesh in various file formats.

• file saveField.h

Prototypes for functions to save mesh in various file formats.

• file Tabulation.h

Definition file for class Tabulation.

• file UserData.h

Definition file for abstract class UserData.

• file BMatrix.h

Definition file for class BMatrix.

• file DMatrix.h

Definition file for class DMatrix.

• file DSMatrix.h

Definition file for abstract class DSMatrix.

• file LocalMatrix.h

Definition file for class LocalMatrix.

• file LocalVect.h

Definition file for class LocalVect.

• file Matrix.h

Definition file for abstract class Matrix.

• file PETScMatrix.h

Definition file for class PETScMatrix.

• file Point.h

Definition file and implementation for class Point.

• file Point2D.h

Definition file for class Point2D.

• file SkMatrix.h

Definition file for class SkMatrix.

• file SkSMatrix.h

Definition file for class SkSMatrix.

• file SpMatrix.h

Definition file for class SpMatrix.

• file TrMatrix.h

 $Definition\ file\ for\ class\ Tr Matrix.$ 

• file Domain.h

Definition file for class Domain.

• file Edge.h

Definition file for class Edge.

• file Element.h

Definition file for class Element.

• file Figure.h

Definition file for figure classes.

• file getMesh.h

Definition file for mesh conversion functions.

• file Grid.h

Definition file for class Grid.

• file Material.h

Definition file for class Material.

• file Mesh.h

Definition file for class Mesh.

• file MeshExtract.h

Definition file for classes for extracting submeshes.

• file MeshUtil.h

Definitions of utility functions for meshes.

• file Node.h

Definition file for class Node.

• file saveMesh.h

Prototypes for functions to save mesh in various file formats.

• file Side.h

Definition file for class Side.

• file FEShape.h

Definition file for class FEShape.

• file Hexa8.h

Definition file for class Hexa8.

• file Line2.h

Definition file for class Line2.

• file Line2H.h

Definition file for class Line2H.

• file Line3.h

Definition file for class Line3.

• file Penta6.h

Definition file for class Penta6.

• file Quad4.h

Definition file for class Quad4.

• file Tetra4.h

Definition file for class Tetra4.

• file Triang3.h

Definition file for class Triang3.

file Triang6S.h

Definition file for class Triang6S.

• file BiCG.h

Solves an unsymmetric linear system of equations using the BiConjugate Gradient method.

• file BSpline.h

Function to perform a B-spline interpolation.

• file CG.h

Functions to solve a symmetric positive definite linear system of equations using the Conjugate Gradient method.

• file CGS.h

Solves an unsymmetric linear system of equations using the Conjugate Gradient Squared method.

• file EigenProblemSolver.h

Definition file for class EigenProblemSolver.

• file GMRes.h

 $Function\ to\ solve\ a\ linear\ system\ of\ equations\ using\ the\ Generalized\ Minimum\ Residual\ method.$ 

• file GS.h

Function to solve a linear system of equations using the Gauss-Seidel method.

file Jacobi.h

Function to solve a linear system of equations using the Jacobi method.

file MyOpt.h

Definition file for abstract class MyOpt.

• file ODESolver.h

Definition file for class ODESolver.

• file Prec.h

Definition file for preconditioning classes.

• file Richardson.h

Function to solve a linear system of equations using the Richardson method.

• file SSOR.h

Function to solve a linear system of equations using the Symmetric Successive Over Relaxation method.

• file TimeStepping.h

Definition file for class TimeStepping.

file constants.h

File that contains some widely used constants.

• file Gauss.h

Definition file for struct Gauss.

• file qksort.h

File that contains template quick sorting function.

• file Timer.h

Definition file for class Timer.

• file util.h

File that contains various utility functions.

#### Classes

• class SkMatrix< T\_>

To handle square matrices in skyline storage format.

class SkSMatrix< T\_>

To handle symmetric matrices in skyline storage format.

• class SpMatrix< T\_>

To handle matrices in sparse storage format.

• class AbsEqua< T\_>

*Mother abstract class to describe equation.* 

• class LocalVect< T\_, N\_>

Handles small size vectors like element vectors.

class ICPG1D

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.

class ICPG2DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.

class ICPG3DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.

• class LCL1D

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

class LCL2DT

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

• class LCL3DT

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

class Muscl

Parent class for hyperbolic solvers with Muscl scheme.

• class Vect< T\_>

To handle general purpose vectors.

• class Muscl1D

Class for 1-D hyperbolic solvers with Muscl scheme.

• class Muscl2DT

Class for 2-D hyperbolic solvers with Muscl scheme.

• class Muscl3DT

Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra.

class BiotSavart

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

class EC2D1T3

Eddy current problems in 2-D domains using solenoidal approximation.

class Equa\_Electromagnetics< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Electromagnetics Equation classes.

• class HelmholtzBT3

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.

• class Equation < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >

Abstract class for all equation classes.

• class Equa\_Fluid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >

Abstract class for Fluid Dynamics Equation classes.

• class NSP2DQ41

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using  $Q_1/P_0$  element and a penaly formulation for the incompressibility condition.

• class TINS2DT3B

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

class FastMarching2D

To run a Fast Marching Method on 2-D structured uniform grids.

class FMM2D

class for the fast marching 2-D algorithm

• class FMM3D

class for the 3-D fast marching algorithm

class FMMSolver

The Fast Marching Method solver.

• class Equa\_Laplace< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for classes about the Laplace equation.

class Laplace1DL2

To build element equation for a 1-D elliptic equation using the 2-Node line element  $(P_1)$ .

• class Laplace1DL3

To build element equation for the 1-D elliptic equation using the 3-Node line  $(P_2)$ .

• class Laplace2DFVT

To build and solve the Laplace equation using a standard Finite Volume method.

• class Laplace2DMHRT0

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT<sub>0</sub>).

class Laplace2DT3

To build element equation for the Laplace equation using the 2-D triangle element  $(P_1)$ .

• class SteklovPoincare2DBE

Solver of the Steklov Poincare problem in 2-D geometries using piecewie constant boundary elemen.

• class Bar2DL2

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

• class Beam3DL2

To build element equations for 3-D beam equations using 2-node lines.

class Elas2DQ4

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.

• class Elas2DT3

To build element equations for 2-D linearized elasticity using 3-node triangles.

• class Elas3DH8

To build element equations for 3-D linearized elasticity using 8-node hexahedra.

• class Elas3DT4

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.

• class Equa\_Solid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >

Abstract class for Solid Mechanics Finite Element classes.

class DC1DL2

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements.

class DC2DT3

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

class DC2DT6

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

class DC3DAT3

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

• class DC3DT4

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

• class Equa\_Therm< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Heat transfer Finite Element classes.

class PhaseChange

This class enables defining phase change laws for a given material.

• class Funct

A simple class to parse real valued functions.

• class IOField

Enables working with files in the XML Format.

class IPF

To read project parameters from a file in IPF format.

class Prescription

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

• class Tabulation

To read and manipulate tabulated functions.

• class UserData < T\_>

Abstract class to define by user various problem data.

• class BMatrix< T\_>

To handle band matrices.

• class DMatrix< T\_>

To handle dense matrices.

• class DSMatrix< T\_>

To handle symmetric dense matrices.

• class LocalMatrix< T\_, NR\_, NC\_>

Handles small size matrices like element matrices, with a priori known size.

• class Matrix< T\_>

Virtual class to handle matrices for all storage formats.

• class PETScVect< T\_>

To handle general purpose vectors using Petsc.

• class PETScMatrix< T\_>

To handle matrices in sparse storage format using the Petsc library.

• class PETScWrapper< T\_>

This class is a wrapper to be used when the library Petsc is installed and used with OFELI.

• class Point< T\_>

Defines a point with arbitrary type coordinates.

class Point2D< T<sub>-</sub>>

*Defines a 2-D point with arbitrary type coordinates.* 

• class Prec< T\_>

To set a preconditioner.

• class TrMatrix< T\_>

To handle tridiagonal matrices.

• class Domain

To store and treat finite element geometric information.

class Edge

To describe an edge.

• class Element

To store and treat finite element geometric information.

class Figure

To store and treat a figure (or shape) information.

• class Rectangle

To store and treat a rectangular figure.

• class Brick

To store and treat a brick (parallelepiped) figure.

• class Circle

To store and treat a circular figure.

• class Sphere

To store and treat a sphere.

class Ellipse

To store and treat an ellipsoidal figure.

• class Triangle

To store and treat a triangle.

class Polygon

To store and treat a polygonal figure.

class Grid

To manipulate structured grids.

class Material

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

class Mesh

To store and manipulate finite element meshes.

class NodeList

Class to construct a list of nodes having some common properties.

• class ElementList

Class to construct a list of elements having some common properties.

class SideList

Class to construct a list of sides having some common properties.

class EdgeList

Class to construct a list of edges having some common properties.

class Node

To describe a node.

class Partition

To partition a finite element mesh into balanced submeshes.

• class Side

To store and treat finite element sides (edges in 2-D or faces in 3-D)

• class FEShape

Parent class from which inherit all finite element shape classes.

class triangle

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

• class Hexa8

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

• class Line2

To describe a 2-Node planar line finite element.

class Line2H

To describe a 2-Node Hermite planar line finite element.

• class Line3

*To describe a 3-Node quadratic planar line finite element.* 

• class Penta6

Defines a 6-node pentahedral finite element using  $P_1$  interpolation in local coordinates (s.x, s.y) and  $Q_1$  isoparametric interpolation in local coordinates (s.x, s.z) and (s.y, s.z).

class Quad4

Defines a 4-node quadrilateral finite element using  $Q_1$  isoparametric interpolation.

class Tetra4

Defines a three-dimensional 4-node tetrahedral finite element using  $P_1$  interpolation.

class Triang3

Defines a 3-Node  $(P_1)$  triangle.

class Triang6S

Defines a 6-Node straight triangular finite element using P2 interpolation.

class EigenProblemSolver

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars l and non-null vectors v such that  $[K]\{v\} = l[M]\{v\}$  where [K] and [M] are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.

• class Iter< T\_>

Class to drive an iterative process.

• class LinearSolver< T\_>

Class to solve systems of linear equations by iterative methods.

• class MyOpt

Abstract class to define by user specified optimization function.

• class ODESolver

To solve a system of ordinary differential equations.

• class TimeStepping

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form  $[A2]\{y''\}+[A1]\{y'\}+[A0]\{y\}=\{b\}.$ 

class Gauss

Calculate data for Gauss integration.

class Timer

To handle elapsed time counting.

#### **Enumerations**

# **Functions**

• T<sub>-</sub> \* A ()

Return element matrix.

• T<sub>-</sub> \* b ()

Return element right-hand side.

• T\_ \* Prev ()

Return element previous vector.

• IOField ()

Default constructor.

• IOField (const string &file, AccessType access, bool compact=true)

Constructor using file name.

• IOField (const string &mesh\_file, const string &file, Mesh &ms, AccessType access, bool compact=true)

Constructor using file name, mesh file and mesh.

• IOField (const string &file, Mesh &ms, AccessType access, bool compact=true)

Constructor using file name and mesh.

• IOField (const string &file, AccessType access, const string &name)

Constructor using file name and field name.

• ∼IOField ()

Destructor.

• void setMeshFile (const string &file)

Set mesh file.

• void open ()

Open file.

void open (const string &file, AccessType access)

Open file.

• void close ()

Close file.

• void put (Mesh &ms)

Store mesh in file.

• void put (const Vect< real\_t > &v)

Store Vect instance v in file.

• void put (const PETScVect< real\_t > &v)

Store PETScVect instance v in file.

```
• real_t get (Vect< real_t > &v)
```

Get Vect v instance from file.

• int get (Vect< real\_t > &v, const string &name)

*Get Vect v instance from file if the field has the given name.* 

• int get (DMatrix < real\_t > &A, const string &name)

Get DMatrix A instance from file if the field has the given name.

• int get (DSMatrix < real\_t > &A, const string &name)

Get DSMatrix A instance from file if the field has the given name.

• int get (Vect< real\_t > &v, real\_t t)

Get Vect v instance from file corresponding to a specific time value.

• void saveGMSH (string output\_file, string mesh\_file)

Save field vectors in a file using GMSH format.

• Tabulation ()

Default constructor.

• Tabulation (string file)

Constructor using file name.

• ∼Tabulation ()

Destructor.

• void setFile (string file)

Set file name.

• real\_t getValue (string funct, real\_t v)

Return the calculated value of the function.

• real\_t getDerivative (string funct, real\_t v)

Return the derivative of the function at a given point.

• real\_t getValue (string funct, real\_t v1, real\_t v2)

Return the calculated value of the function.

• real\_t getValue (string funct, real\_t v1, real\_t v2, real\_t v3)

Return the calculated value of the function.

• Point< double > CrossProduct (const Point< double > &lp, const Point< double > &rp)

Return Cross product of two vectors lp and rp

• Grid ()

Construct a default grid with 10 intervals in each direction.

• Grid (real\_t xm, real\_t xM, size\_t npx)

Construct a 1-D structured grid given its extremal coordinates and number of intervals.

• Grid (real\_t xm, real\_t xM, real\_t ym, real\_t yM, size\_t npx, size\_t npy)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

• Grid (Point< real\_t > m, Point< real\_t > M, size\_t npx, size\_t npy)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

• Grid (real\_t xm, real\_t xM, real\_t ym, real\_t yM, real\_t zm, real\_t zM, size\_t npx, size\_t npx, size\_t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

• Grid (Point< real\_t > m, Point< real\_t > M, size\_t npx, size\_t npy, size\_t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

• void setXMin (const Point < real\_t > &x)

Set min. coordinates of the domain.

- void setXMax (const Point< real\_t > &x)
- void setDomain (real\_t xmin, real\_t xmax)

Set Dimensions of the domain: 1-D case.

void setDomain (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax)

Set Dimensions of the domain: 2-D case.

- void setDomain (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, real\_t zmin, real\_t zmax) Set Dimensions of the domain: 3-D case.
- void setDomain (Point< real\_t > xmin, Point< real\_t > xmax)

Set Dimensions of the domain: 3-D case.

• const Point< real\_t > & getXMin () const

Return min. Coordinates of the domain.

• const Point < real\_t > & getXMax () const

Return max. Coordinates of the domain.

• void setN (size\_t nx, size\_t ny=0, size\_t nz=0)

Set number of grid intervals in the x, y and z-directions.

• size\_t getNx () const

Return number of grid intervals in the x-direction.

• size\_t getNy () const

Return number of grid intervals in the y-direction.

• size\_t getNz () const

Return number of grid intervals in the z-direction.

• real\_t getHx () const

Return grid size in the x-direction.

• real\_t getHy () const

Return grid size in the y-direction.

• real\_t getHz () const

Return grid size in the z-direction.

Point< real\_t > getCoord (size\_t i) const

Return coordinates a point with label i in a 1-D grid.

Point< real\_t > getCoord (size\_t i, size\_t j) const

Return coordinates a point with label (i, j) in a 2-D grid.

Point< real\_t > getCoord (size\_t i, size\_t j, size\_t k) const

Return coordinates a point with label (i, j, k) in a 3-D grid.

real\_t getX (size\_t i) const

Return x-coordinate of point with index i

• real\_t getY (size\_t j) const

Return y-coordinate of point with index j

• real\_t getZ (size\_t k) const

Return z-coordinate of point with index k

• Point2D< real\_t > getXY (size\_t i, size\_t j) const

Return coordinates of point with indices (i, j)

• Point< real\_t > getXYZ (size\_t i, size\_t j, size\_t k) const

Return coordinates of point with indices (i, j, k)

real\_t getCenter (size\_t i) const

Return coordinates of center of a 1-D cell with indices i, i+1

• Point< real\_t > getCenter (size\_t i, size\_t j) const

Return coordinates of center of a 2-D cell with indices (i,j), (i+1,j), (i+1,j+1), (i,j+1)

• Point< real\_t > getCenter (size\_t i, size\_t j, size\_t k) const

Return coordinates of center of a 3-D cell with indices (i,j,k), (i+1,j,k), (i+1,j+1,k), (i,j+1,k), (i,j,k+1), (i+1,j,k+1), (i+1,j+1,k+1), (i,j+1,k+1)

• void setCode (string exp, int code)

Set a code for some grid points.

• void setCode (int side, int code)

Set a code for grid points on sides.

• int getCode (int side) const

Return code for a side number.

int getCode (size\_t i, size\_t j) const

Return code for a grid point.

int getCode (size\_t i, size\_t j, size\_t k) const

Return code for a grid point.

• size\_t getDim () const

Return space dimension.

• void Deactivate (size\_t i)

Change state of a cell from active to inactive (1-D grid)

• void Deactivate (size\_t i, size\_t j)

Change state of a cell from active to inactive (2-D grid)

• void Deactivate (size\_t i, size\_t j, size\_t k)

Change state of a cell from active to inactive (2-D grid)

• int isActive (size\_t i) const

Say if cell is active or not (1-D grid)

• int isActive (size\_t i, size\_t j) const

Say if cell is active or not (2-D grid)

• int isActive (size\_t i, size\_t j, size\_t k) const

Say if cell is active or not (3-D grid)

• ostream & operator << (ostream &s, const Grid &g)

Output grid data.

• BMatrix ()

Default constructor.

• BMatrix (size\_t size, int ld, int ud)

Constructor that for a band matrix with given size and bandwidth.

• BMatrix (const BMatrix &m)

Copy Constructor.

• void setSize (size\_t size, int ld, int ud)

Set size (number of rows) and storage of matrix.

• void MultAdd (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector  $\boldsymbol{x}$  and add result to  $\boldsymbol{y}$ 

• void MultAdd ( $T_a$ , const Vect<  $T_a$  > &x, Vect<  $T_a$  > &y) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add result to  $\mathbf{y}$ 

• void Mult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and save result in y

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector  $\mathbf{x}$  and save result in  $\mathbf{y}$ 

• void Axpy  $(T_a, const BMatrix < T_b > x)$ 

Add to matrix the product of a matrix by a scalar.

• void Axpy  $(T_- a, const Matrix < T_- > *x)$ 

Add to matrix the product of a matrix by a scalar.

• void set (size\_t i, size\_t j, const T\_ &val)

Add constant val to an entry (i, j) of the matrix.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant val value to an entry (i, j) of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)

Operator () (Non constant version).

• BMatrix< T<sub>-</sub> > & operator= (const BMatrix< T<sub>-</sub> > &m)

Operator = .

• BMatrix $< T_- > & operator = (const T_- & x)$ 

 $Operator = Assign \ matrix \ to \ identity \ times \ x.$ 

• BMatrix $< T_- > & operator*= (const T_- &x)$ 

*Operator* \*=.

• BMatrix $< T_- > & operator += (const T_- & x)$ 

*Operator* +=.

• int setLU ()

Factorize the matrix (LU factorization)

• int solve (Vect $< T_- > \&b$ )

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

• DSMatrix ()

Default constructor.

• DSMatrix (size\_t dim)

Constructor that for a symmetric matrix with given number of rgows.

• DSMatrix (const DSMatrix < T\_ > &m)

Copy Constructor.

void setDiag ()

Store diagonal entries in a separate internal vector.

• void setSize (size\_t dim)

Set size (number of rows) of matrix.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign constant to entry (i, j) of the matrix.

• void setDiag (const T<sub>-</sub> &a)

Set matrix as diagonal and assign its diagonal entries as a constant.

• void setDiag (const vector < T\_ > &d)

Set matrix as diagonal and assign its diagonal entries.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant to an entry of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T\_ & operator() (size\_t i, size\_t j)

Operator () (Non constant version).

• DSMatrix< T<sub>-</sub> > & operator= (const DSMatrix< T<sub>-</sub> > &m)

Operator = Copy matrix m to current matrix instance.

• DSMatrix $< T_- > & operator = (const T_- & x)$ 

Operator = Assign matrix to identity times x.

• int setLDLt ()

Factorize matrix  $(LDL^T)$ 

• void getColumn (size\_t j, Vect< T\_ > &v) const

Get j-th column vector.

• Vect< T\_> getColumn (size\_t j) const

Get j-th column vector.

• void setColumn (size\_t i, const Vect< T\_ > &v)

Copy a given vector to a prescribed column in the matrix.

void getRow (size\_t i, Vect< T\_ > &v) const

Get i-th row vector.

• Vect< T\_> getRow (size\_t i) const

Get i-th row vector.

• void setRow (size\_t i, const Vect< T\_> &v)

Copy a given vector to a prescribed row in the matrix.

• void MultAdd (const Vect $< T_- > &x$ , Vect $< T_- > &y$ ) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add result to  $\mathbf{y}$ .

• void MultAdd ( $T_-$  a, const Vect<  $T_-$  > &x, Vect<  $T_-$  > &y) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add to  $\mathbf{y}$ .

• void Mult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and save result in y.

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and add result in y.

• int solve (Vect $< T_- > \&b$ )

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• T<sub>\_</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

• void Axpy (T\_a, const DSMatrix< T\_> &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix< T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• LocalMatrix ()

Default constructor.

LocalMatrix (const LocalMatrix < T\_, NR\_, NC\_ > &m)

Copy constructor.

• LocalMatrix (Element \*el, const SpMatrix < T\_ > &a)

Constructor of a local matrix associated to element from a SpMatrix.

• LocalMatrix (Element \*el, const SkMatrix < T\_ > &a)

Constructor of a local matrix associated to element from a SkMatrix.

• LocalMatrix (Element \*el, const SkSMatrix< T<sub>−</sub> > &a)

Constructor of a local matrix associated to element from a SkSMatrix.

• void Localize (Element \*el, const SpMatrix< T\_> &a)

Initialize matrix as element matrix from global SpMatrix.

• void Localize (Element \*el, const SkMatrix< T\_> &a)

*Initialize matrix as element matrix from global SkMatrix.* 

• void Localize (Element \*el, const SkSMatrix< T\_> &a)

*Initialize matrix as element matrix from global SkSMatrix.* 

• LocalMatrix< T\_, NR\_, NC\_ > & operator= (const LocalMatrix< T\_, NR\_, NC\_ > &m)

• LocalMatrix< T\_, NR\_, NC\_ > & operator= (const T\_ &x)

Operator =

LocalMatrix< T\_, NR\_, NC\_ > & operator+= (const LocalMatrix< T\_, NR\_, NC\_ > &m)
 Operator +=

LocalMatrix< T\_, NR\_, NC\_ > & operator= (const LocalMatrix< T\_, NR\_, NC\_ > &m)
 Operator =

• LocalVect< T\_, NR\_ > operator\* (LocalVect< T\_, NC\_ > &x)

Operator \*

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub> > & operator+= (const T<sub>-</sub> &x)

Operator +=

• LocalMatrix $< T_-$ , NR\_-, NC\_ $> & operator= (const T_- &x)$ 

Operator -=

LocalMatrix< T\_, NR\_, NC\_> & operator\*= (const T\_ &x)

Operator \*=

• LocalMatrix< T\_, NR\_, NC\_ > & operator/= (const T\_ &x)

Operator /=

void MultAdd (const LocalVect< T\_, NC\_> &x, LocalVect< T\_, NR\_> &y)

Multiply matrix by vector and add result to vector.

void MultAddScal (const T<sub>-</sub> &a, const LocalVect< T<sub>-</sub>, NC<sub>-</sub> > &x, LocalVect< T<sub>-</sub>, NR<sub>-</sub> > &y)
 Multiply matrix by scaled vector and add result to vector.

• void Mult (const Local Vect< T\_-, NC\_ > &x, Local Vect< T\_-, NR\_ > &y)

Multiply matrix by vector.

• void Symmetrize ()

Symmetrize matrix.

• int Factor ()

Factorize matrix.

• int Solve (LocalVect< T\_, NR\_> &b)

Forward and backsubstitute to solve a linear system.

• int FactorAndSolve (LocalVect< T\_, NR\_ > &b)

Factorize matrix and solve linear system.

• void Invert (LocalMatrix < T\_, NR\_, NC\_ > &A)

Calculate inverse of matrix.

• T\_ getInnerProduct (const LocalVect< T\_, NC\_> &x, const LocalVect< T\_, NR\_> &y) Calculate inner product witrh respect to matrix.

• LocalVect ()

Default constructor.

• LocalVect (const T<sub>−</sub> \*a)

Constructor using a C-array.

• LocalVect (const Element \*el)

Constructor using **Element** pointer.

• LocalVect (const Side \*sd)

Constructor using Side pointer.

• LocalVect (const LocalVect< T\_, N\_ > &v)

Copy constructor.

• LocalVect (const Element \*el, const Vect< T\_> &v, int opt=0)

Constructor of an element vector from a global Vect instance.

• LocalVect (const Side \*sd, const Vect< T\_> &v, int opt=0)

Constructor of a side vector from a global Vect instance.

• void getLocal (const Element &el, const Vect< T\_> &v, int type)

Localize an element vector from a global Vect instance.

• void Localize (const Element \*el, const Vect< T\_> &v, size\_t k=0)

Localize an element vector from a global Vect instance.

• void Localize (const Side \*sd, const Vect< T\_> &v, size\_t k=0)

Localize a side vector from a global Vect instance.

LocalVect< T<sub>-</sub>, N<sub>-</sub> > & operator= (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &v)
 Operator =

• LocalVect< T<sub>-</sub>, N<sub>-</sub> > & operator= (const T<sub>-</sub> &x)

Operator =

• Local Vect< T\_, N\_ > & operator+= (const Local Vect< T\_, N\_ > &v)

Operator +=

• LocalVect $< T_-$ ,  $N_- > & operator += (const <math>T_- & a)$ 

Operator +=

• LocalVect $< T_-, N_- > \& operator = (const LocalVect<math>< T_-, N_- > \&v)$ 

Operator -=

• LocalVect< T\_, N\_ > & operator== (const T\_ &a)

Operator -=

• LocalVect< T $_-$ , N $_ > & operator*= (const T<math>_-$  &a)

Operator \*=

• LocalVect $< T_-, N_- > & operator/= (const T_- & a)$ 

Operator /=

• T\_ operator, (const LocalVect< T\_, N\_ > &v) const

Return Dot (scalar) product of two vectors.

• SkSMatrix ()

Default constructor.

• SkSMatrix (size\_t size, int is\_diagonal=false)

Constructor that initializes a dense symmetric matrix.

• SkSMatrix (Mesh &mesh, size\_t dof=0, int is\_diagonal=false)

Constructor using mesh to initialize skyline structure of matrix.

• SkSMatrix (const Vect< size\_t > &ColHt)

Constructor that initializes skyline structure of matrix using vector of column height.

• SkSMatrix (const Vect< size\_t > &I, const Vect< size\_t > &J, int opt=1)

Constructor for a square matrix using non zero row and column indices.

• SkSMatrix (const Vect< size\_t > &I, const Vect< size\_t > &J, const Vect< T\_ > &a, int opt=1)

Constructor for a square matrix using non zero row and column indices.

• SkSMatrix (const SkSMatrix < T\_ > &m)

Copy Constructor.

• void setMesh (Mesh &mesh, size\_t dof=0)

Determine mesh graph and initialize matrix.

• void setSkyline (Mesh &mesh)

Determine matrix structure.

void setDiag ()

Store diagonal entries in a separate internal vector.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign a value to an entry of the matrix.

• void MultAdd (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and add to y.

• void MultAdd ( $T_a$ , const Vect<  $T_a$  > &x, Vect<  $T_a$  > &y) const

Multiply matrix by vector **a**\***x** and add to y.

• void Mult (const Vect<  $T_-> &x$ , Vect<  $T_-> &y$ ) const

Multiply matrix by vector x and save in y

• void TMult (const Vect $< T_- > &x$ , Vect $< T_- > &y$ ) const

Multiply transpose of matrix by vector x and save in y.

• void add (size\_t i, size\_t j, const T\_ &val)

Add a constant to an entry of the matrix.

size\_t getColHeight (size\_t i) const

Return column height.

• Vect< T\_> getColumn (size\_t j) const

Get j-th column vector.

• Vect< T\_> getRow (size\_t i) const

Get i-th row vector.

• T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)

Operator () (Non constant version).

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• SkSMatrix< T\_> & operator= (const SkSMatrix< T\_> &m)

Operator =.

• SkSMatrix< T\_> & operator= (const T\_ &x)

Operator = .

• SkSMatrix< T<sub>-</sub> > & operator+= (const SkSMatrix< T<sub>-</sub> > &m)

Operator +=.

• SkSMatrix $< T_- > & operator*= (const T_- &x)$ 

Operator \*=.

• int setLDLt ()

Factorize matrix (LDLt (Crout) factorization).

• int solve (Vect< T\_> &b)

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• int solveLDLt (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve a linear system using the LDLt (Crout) factorization.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix if this one is stored, 0 else.

• void Axpy  $(T_a, const SkSMatrix < T_b > m)$ 

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix< T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• TrMatrix ()

Default constructor.

• TrMatrix (size\_t size)

Constructor for a tridiagonal matrix with size rows.

• TrMatrix (const TrMatrix &m)

Copy Constructor.

void setSize (size\_t size)

Set size (number of rows) of matrix.

• void MultAdd (const Vect<  $T_-> &x$ , Vect<  $T_-> &y$ ) const

Multiply matrix by vector x and add result to y.

• void MultAdd ( $T_-$  a, const Vect<  $T_-$  > &x, Vect<  $T_-$  > &v) const

Multiply matrix by vector **a**\***x** and add result to y.

• void Mult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and save result in y.

• void TMult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply transpose of matrix by vector x and save result in y.

• void Axpy (T<sub>-</sub> a, const TrMatrix< T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy  $(T_a, const Matrix < T_s * m)$ 

Add to matrix the product of a matrix by a scalar.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign constant val to an entry (i, j) of the matrix.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant val value to an entry (i, j) of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T\_ & operator() (size\_t i, size\_t j)

Operator () (Non constant version).

• TrMatrix $< T_- > \& operator = (const TrMatrix<math>< T_- > \&m)$ 

Operator =.

• TrMatrix $< T_- > & operator = (const T_- & x)$ 

 $Operator = Assign \ matrix \ to \ identity \ times \ x.$ 

• TrMatrix $< T_- > & operator*= (const T_- &x)$ 

Operator \*=.

• int solve (Vect< T\_> &b)

Solve a linear system with current matrix (forward and back substitution).

• int solve (const Vect $< T_- > \&b$ , Vect $< T_- > \&x$ )

Solve a linear system with current matrix (forward and back substitution).

• T<sub>\_</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

• Iter ()

Default Constructor.

• Iter (int max\_it, real\_t toler, int verbose=0)

Constructor with iteration parameters.

• bool check (Vect< T $_->$  &u, const Vect< T $_->$  &v, int opt=2)

Check convergence.

• int solve (Iteration s, Preconditioner p=DIAG\_PREC)

Solve equations using prescribed solver and preconditioner.

# 5.11.1 Detailed Description

# 5.11.2 Enumeration Type Documentation

#### enum PDE\_Terms

Enumerate variable that selects various terms in partial differential equations

#### Enumerator

MASS Consistent mass term

CONSISTENT\_MASS Consistent mass term

LUMPED\_MASS Lumped mass term

CAPACITY Consistent capacity term

CONSISTENT\_CAPACITY Consistent capacity term

LUMPED\_CAPACITY Lumped capacity term

VISCOSITY Viscosity term

STIFFNESS Stiffness term

**DIFFUSION** Diffusion term

**CONVECTION** Convection term

**DEVIATORIC** Deviatoric term

**DILATATION** Dilatational term

**ELECTRIC** Electric term

MAGNETIC Magnetic term

LOAD Body load term

HEAT\_SOURCE Body heat source term

BOUNDARY\_TRACTION Boundary traction (pressure) term

HEAT\_FLUX Boundary heat flux term

CONTACT Signorini contact

**BUOYANCY** Buoyancy force term

LORENTZ\_FORCE Lorentz force term

#### enum EqDataType

Enumerate variable that selects equation data type

#### Enumerator

INITIAL\_FIELD Initial condition

**SOLUTION** Solution vector (same as Initial)

INITIAL\_AUX\_1 Initial auxiliary field

INITIAL\_AUX\_2 Initial auxiliary field

INITIAL\_AUX\_3 Initial auxiliary field

INITIAL\_AUX\_4 Initial auxiliary field

BOUNDARY\_CONDITION Boundary condition data

BODY\_FORCE Body force data

**SOURCE** Source data (same as Body force)

POINT\_FORCE Localized (at point) force

BOUNDARY\_FORCE Boundary force data

FLUX Flux data (same as Boundary force)

**TRACTION** Traction data (same as Boundary force)

AUX\_INPUT\_FIELD\_1 Auxiliary input field 1

AUX\_INPUT\_FIELD\_2 Auxiliary input field 2

AUX\_INPUT\_FIELD\_3 Auxiliary input field 3

AUX\_INPUT\_FIELD\_4 Auxiliary input field 4

DISPLACEMENT\_FIELD A displacement field

VELOCITY\_FIELD A velocity field

TEMPERATURE\_FIELD A temperature field

# enum ArrayType

Selects local or global option for array as argument.

# Enumerator

LOCAL ARRAY For a local array labeled with local numbering GLOBAL ARRAY For a local array labeled with global numbering

# enum TimeScheme

Selects time integration scheme

#### Enumerator

STATIONARY No time scheme: stationary

FORWARD\_EULER Forward Euler scheme (Explicit)

BACKWARD\_EULER Backward Euler scheme (Implicit)

CRANK\_NICOLSON Crank-Nicolson scheme

**HEUN** Heun scheme

**NEWMARK** Newmark scheme

**LEAP\_FROG** Leap Frog scheme

ADAMS\_BASHFORTH Adams-Bashforth scheme (2nd Order)

AB2 Adams-Bashforth scheme (2nd Order)

RUNGE\_KUTTA 4-th Order Runge-Kutta scheme (4th Order)

RK4 4-th Order Runge-Kutta scheme

RK3\_TVD 3-rd Order Runge-Kutta TVD scheme

BDF2 Backward Difference Formula (2nd Order)

#### enum PDE

Choose partial differential equation to '

#### Enumerator

**LAPLACE** Laplace equation

DIFFUSION\_CONVECTION Diffusion Convection equation

THERMAL\_PHASE\_CHANGE Thermal phase change problem (Stefan)

INCOMPRESSIBLE\_NAVIER\_STOKES Incompressible Navier-Stokes equations

LINEARIZED\_ELASTICITY Linearized elasticity equations

PLANAR\_TRUSS 2-D truss equation

SPATIAL\_BEAM 3-D beam equations

# enum FEType

Choose Finite Element Type

#### Enumerator

FE\_2D\_3N 2-D elements, 3-Nodes (P1)

FE\_2D\_6N 2-D elements, 6-Nodes (P2)

FE\_2D\_4N 2-D elements, 4-Nodes (Q1)

FE\_3D\_AXI\_3N 3-D Axisymmetric elements, 3-Nodes (P1)

FE\_3D\_4N 3-D elements, 4-Nodes (P1)

FE\_3D\_8N 3-D elements, 8-Nodes (Q1)

## enum AnalysisType

Choose analysis type

#### Enumerator

STEADY\_STATE Steady state analysis

TRANSIENT Transient analysis

**OPTIMIZATION** Optimization analysis

#### enum MatrixType

Choose matrix storage and type

## Enumerator

SKYLINE Skyline storage

SPARSE Sparse storage

DIAGONAL Diagonal storage

TRIDIAGONAL Tridiagonal storage

SYMMETRIC Symmetric matrix

UNSYMMETRIC Unsymmetric matrix

IDENTITY Identity matrix

#### enum Iteration

Choose iterative solver for the linear system.

#### Enumerator

DIRECT\_SOLVER Direct solver

CG\_SOLVER CG Method

CGS\_SOLVER CGS Metod

BICG\_SOLVER BiCG Method

BICG\_STAB\_SOLVER BiCGStab Method

GMRES\_SOLVER GMRes Method

# enum Preconditioner

Choose preconditioner for the linear system.

#### Enumerator

IDENT\_PREC Identity (No preconditioning)
 DIAG\_PREC Diagonal preconditioner
 DILU\_PREC ILU (Incomplete factorization) preconditioner
 ILU\_PREC DILU (Diagonal Incomplete factorization) preconditioner
 SSOR\_PREC SSOR preconditioner

# enum BCType

To select special boundary conditions.

## Enumerator

PERIODIC\_A Periodic Boundary conditions (first side)
PERIODIC\_B Periodic Boundary conditions (second side)
CONTACT\_BC Contact Boundary conditions
SLIP Slip Boundary conditions

# 5.11.3 Function Documentation

## T\_\* OFELI::A ( )

Return element matrix.

Matrix is returned as a C-array

# T\_\* OFELI::b ( )

Return element right-hand side.

Right-hand side is returned as a C-array

## T\_\* OFELI::Prev ( )

Return element previous vector.

This is the vector given in time dependent constructor. It is returned as a C-array.

# IOField ( const string & file, AccessType access, bool compact = true )

Constructor using file name.

#### **Parameters**

in	file	File name.	
in	access	Access code. This number is to be chosen among two enumerated values:	
		• IOField::IN to read the file	
		• IOField::OUT to write on it	
in	compact	Flag to choose a compact storage or not [Default: true]	

# IOField ( const string & $mesh\_file$ , const string & file, Mesh & ms, AccessType access, bool compact = true )

Constructor using file name, mesh file and mesh.

in	mesh_file	File containing mesh	
in	file	File that contains field stored or to store	
in	ms	Mesh instance	
in	access	Access code. This number is to be chosen among two enumerated values:  • IOField::IN to read the file  • IOField::OUT to write on it	
in	compact	Flag to choose a compact storage or not [Default: true]	

# IOField ( const string & file, Mesh & ms, AccessType access, bool compact = true )

Constructor using file name and mesh.

## Parameters

in	file	File that contains field stored or to store	
in	ms	Mesh instance	
in	access	Access code. This number is to be chosen among two enumerated values:  • IOField::IN to read the file  • IOField::OUT to write on it	
in	compact	Flag to choose a compact storage or not [Default: true]	

# IOField (const string & file, AccessType access, const string & name)

Constructor using file name and field name.

#### Parameters

in	file	File that contains field stored or to store	
in	access	Access code. This number is to be chosen among two enumerated values:	
		• IOField::IN to read the file	
		• IOField::OUT to write on it	
in	name	Seek a specific field with given name	

# void setMeshFile ( const string & file )

Set mesh file.

Parameters

in	file	Mesh file

# void open ( )

Open file.

Case where file name has been previously given (in the constructor).

void open ( const string & file, AccessType access )

Open file.

in	file	File name.	
in	access	Access code. This number is to be chosen among two enumerated values:	
		• IOField::IN to read the file	
		• IOField::OUT to write on it	

# void put ( const Vect< real\_t > & v )

Store Vect instance v in file.

#### Parameters

in	v	Vect instance to store
----	---	------------------------

# void put ( const PETScVect< real\_t > & v )

Store PETScVect instance v in file.

#### Parameters

in	v	PETScVect instance to store

# real\_t get ( Vect< real\_t > & v )

Get Vect v instance from file.

First time step is read from the XML file.

# int get ( Vect< real\_t > & v, const string & name )

Get Vect v instance from file if the field has the given name. First time step is read from the XML file.

#### Parameters

in,out	v	Vect instance
in	name	Name to seek in the XML file

# int get ( DMatrix< real\_t> & A, const string & name )

Get DMatrix A instance from file if the field has the given name. First time step is read from the XML file.

in,out	A	DMatrix instance

in	name	Name to seek in the XML file
----	------	------------------------------

# int get ( DSMatrix < real\_t > & A, const string & name )

Get DSMatrix A instance from file if the field has the given name. First time step is read from the XML file.

#### **Parameters**

in,out	A	DSMatrix instance
in	name	Name to seek in the XML file

## int get ( Vect< real\_t > & v, real\_t t )

Get Vect v instance from file corresponding to a specific time value.

The sought vector corresponding to the time value is read from the XML file.

#### **Parameters**

in,out	v	Vector instance
in	t	Time value

# void saveGMSH ( string output\_file, string mesh\_file )

Save field vectors in a file using **GMSH** format.

This member function enables avoiding the use of cfield. It must be used once all field vectors have been stored in output file. It closes this file and copies its contents to a **GMSH** file.

# Parameters

j	in	output_file	Output file name where to store using <b>GMSH</b> format
j	in	mesh_file	File containing mesh data

# void setFile ( string file )

Set file name.

This function is to be used when the default constructor is invoked.

# real\_t getValue ( string funct, real\_t v )

Return the calculated value of the function.

Case of a function of one variable

in	funct	Name of the function to be evaluated, as read from input file

in	v	Value of the variable
----	---	-----------------------

## Returns

Computed value of the function

# real\_t getDerivative ( string funct, real\_t v )

Return the derivative of the function at a given point.

Case of a function of one variable

## Parameters

in	funct	Name of the function to be evaluated, as read from input file
in	v	Value of the variable

#### Returns

Derivative value

# real\_t getValue ( string funct, real\_t v1, real\_t v2 )

Return the calculated value of the function.

Case of a function of two variables

#### **Parameters**

in	funct	Name of the function to be evaluated, as read from input file
in	v1	Value of the first variable
in	<i>v</i> 2	Value of the second variable

#### Returns

Computed value of the function

# real\_t getValue ( string funct, real\_t v1, real\_t v2, real\_t v3 )

Return the calculated value of the function.

Case of a function of three variables

in	funct	Name of the funct to be evaluated, as read from input file
in	v1	Value of the first variable
in	<i>v</i> 2	Value of the second variable
in	<i>v</i> 3	Value of the third variable

#### Returns

Computed value of the function

# Grid ( real\_t xm, real\_t xM, size\_t npx )

Construct a 1-D structured grid given its extremal coordinates and number of intervals.

#### Parameters

in	xm	Minimal value for x
in	хM	Maximal value for x
in	прх	Number of grid intervals in the x-direction

# Grid ( real\_t xm, real\_t xM, real\_t ym, real\_t yM, size\_t npx, size\_t npy )

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

#### Parameters

in	xm	Minimal value for x
in	хM	Maximal value for x
in	ут	Minimal value for y
in	yМ	Maximal value for y
in	прх	Number of grid intervals in the x-direction
in	пру	Number of grid intervals in the y-direction

# Grid ( Point < real\_t > m, Point < real\_t > M, size\_t npx, size\_t npy)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

# Parameters

in	m	Minimal coordinate value
in	M	Maximal coordinate value
in	прх	Number of grid intervals in the x-direction
in	пру	Number of grid intervals in the y-direction

# Grid ( real\_t xm, real\_t xM, real\_t ym, real\_t yM, real\_t zm, real\_t zM, size\_t npx, size\_t npy, size\_t npz )

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

in	xm	Minimal value for x
in	хM	Maximal value for x

in	ут	Minimal value for y
in	уМ	Maximal value for y
in	zm	Minimal value for z
in	zM	Maximal value for z
in	прх	Number of grid intervals in the x-direction
in	пру	Number of grid intervals in the y-direction
in	npz	Number of grid intervals in the z-direction

# Grid ( Point< real\_t > m, Point< real\_t > M, size\_t npx, size\_t npy, size\_t npy, size\_t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

#### Parameters

in	m	Minimal coordinate value
in	M	Maximal coordinate value
in	прх	Number of grid intervals in the x-direction
in	пру	Number of grid intervals in the y-direction
in	npz	Number of grid intervals in the z-direction

# void setXMin ( const Point < real\_t > & x )

Set min. coordinates of the domain.

# Parameters

in	x	Minimal values of coordinates

## void setXMax ( const Point < real\_t > & x )

Set max. coordinates of the domain.

# Parameters

in	x	Maximal values of coordinates
----	---	-------------------------------

# void setDomain ( real\_t xmin, real\_t xmax )

Set Dimensions of the domain: 1-D case.

in	xmin	Minimal value of x-coordinate
in	xmax	Maximal value of x-coordinate

# void setDomain ( real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax )

Set Dimensions of the domain: 2-D case.

#### **Parameters**

in	xmin	Minimal value of x-coordinate
in	xmax	Maximal value of x-coordinate
in	ymin	Minimal value of y-coordinate
in	ymax	Maximal value of y-coordinate

# void setDomain ( real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, real\_t zmin, real\_t zmax )

Set Dimensions of the domain: 3-D case.

#### **Parameters**

in	xmin	Minimal value of x-coordinate
in	xmax	Maximal value of x-coordinate
in	ymin	Minimal value of y-coordinate
in	ymax	Maximal value of y-coordinate
in	zmin	Minimal value of z-coordinate
in	zmax	Maximal value of z-coordinate

# void setDomain ( Point< real\_t > xmin, Point< real\_t > xmax )

Set Dimensions of the domain: 3-D case.

# Parameters

in	xmin	Minimal coordinate value
in	xmax	Maximal coordinate value

# void setN ( size\_t nx, size\_t ny = 0, size\_t nz = 0 )

Set number of grid intervals in the x, y and z-directions. Number of points is the number of intervals plus one in each direction

in	nx	Number of grid intervals in the x-direction
in	пу	Number of grid intervals in the y-direction (Default=0: 1-D grid)
in	nz	Number of grid intervals in the z-direction (Default=0: 1-D or 2-D grid)

## Remarks

: The size of the grid (xmin and xmax) must have been defined before.

# size\_t getNy ( ) const

Return number of grid intervals in the y-direction. ny=0 for 1-D domains (segments)

# size\_t getNz ( ) const

Return number of grid intervals in the z-direction. nz=0 for 1-D (segments) and 2-D domains (rectangles)

# void setCode ( string exp, int code )

Set a code for some grid points.

#### **Parameters**

in	exp	Regular expression that determines the set of grid points on which the code is applied.
in	code	Code to assign.

# void setCode ( int side, int code )

Set a code for grid points on sides.

# Parameters

in	side	Side for which code is assigned. Possible values are: MIN_X, MAX_X, MIN_Y, MAX_Y, MIN_Z, MAX_Z
in	code	Code to assign.

# int getCode ( int side ) const

Return code for a side number.

### Parameters

in	side	Side for which code is returned. Possible values are: MIN_X, MAX_X, MIN_Y, MAX_Y,
		MIN_Z, MAX_Z

# int getCode ( size\_t i, size\_t j ) const

Return code for a grid point.

ſ	in	i	i-th index for node for which code is to be returned.

in	j	j-th index for node for which code is to be returned.
----	---	---

# int getCode ( size\_t i, size\_t j, size\_t k ) const

Return code for a grid point.

#### Parameters

in	i	i-th index for node for which code is to be returned.
in	j	j-th index for node for which code is to be returned.
in	k	k-th index for node for which code is to be returned.

## void Deactivate ( size\_t i )

Change state of a cell from active to inactive (1-D grid)

## Parameters

	in	i	grid cell to remove
--	----	---	---------------------

# void Deactivate ( size\_t i, size\_t j )

Change state of a cell from active to inactive (2-D grid)

# Parameters

in	i	i-th index for grid cell to remove. If this value is 0, all cells (*, j) are deactivated
in	j	j-th index for grid cell to remove If this value is 0, all cells (i,*) are deactivated

## Remarks

if i and j have value 0 all grid cells are deactivated!!

# void Deactivate ( size\_t i, size\_t j, size\_t k )

Change state of a cell from active to inactive (2-D grid)

in	i	i-th index for grid cell to remove. If this value is 0, all cells (*,j,k) are deactivated
in	j	j-th index for grid cell to remove If this value is 0, all cells (i,*,k) are deactivated
in	k	k-th index for grid cell to remove If this value is 0, all cells (i,j,*) are deactivated

## int is Active ( size $\pm i$ ) const

Say if cell is active or not (1-D grid)

## Parameters

in i	Index of cell
------	---------------

#### Returns

1 if cell is active, 0 if not

# int isActive ( size\_t i, size\_t j ) const

Say if cell is active or not (2-D grid)

#### **Parameters**

iı	ı	i	i-th index of cell
iı	1	j	j-th index of cell

#### Returns

1 if cell is active, 0 if not

# int is Active ( size\_t i, size\_t j, size\_t k ) const

Say if cell is active or not (3-D grid)

# Parameters

in	i	i-th index of cell
in	j	j-th index of cell
in	k	k-th index of cell

# Returns

1 if cell is active, 0 if not

# BMatrix ( )

Default constructor.

Initialize a zero dimension band matrix

## BMatrix ( size\_t size, int ld, int ud )

Constructor that for a band matrix with given size and bandwidth. Assign 0 to all matrix entries.

in	size	Number of rows and columns
in	ld	Number of lower co-diagonals (must be $> 0$ )
in	ud	Number of upper co-diagonals (must be $> 0$ )

# void setSize ( size\_t size, int ld, int ud )

Set size (number of rows) and storage of matrix.

#### Parameters

in	size	Number of rows and columns
in	ld	Number of lower co-diagonals (must be $> 0$ )
in	ud	Number of upper co-diagonals (must be $> 0$ )

# void Axpy ( $T_-a$ , const BMatrix< $T_- > \& x$ )

Add to matrix the product of a matrix by a scalar.

#### **Parameters**

in	а	Scalar to premultiply
in	x	Matrix by which a is multiplied. The result is added to current instance

# void Axpy ( $T_-a$ , const Matrix< $T_- > *x$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

# Parameters

in	а	Scalar to premultiply
in	x	Matrix by which a is multiplied. The result is added to current instance

Implements Matrix  $< T_- >$ .

# T\_ operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version).

# Parameters

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

## T<sub>-</sub> & operator() ( size<sub>-</sub>t *i*, size<sub>-</sub>t *j* ) [virtual]

Operator () (Non constant version).

#### **Parameters**

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# BMatrix $< T_- > & operator = ( const BMatrix<math>< T_- > & m )$

Operator =.

Copy matrix m to current matrix instance.

BMatrix
$$< T_- > \& operator*= ( const  $T_- \& x )$$$

Operator \*=.

Premultiply matrix entries by constant value x

## BMatrix $< T_- > \& operator += ( const T_- \& x )$

Operator +=.

Add constant x to matrix entries.

#### int setLU ( )

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

## Returns

- 0 if factorization was normally performed,
- n if the n-th pivot is null.

# Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

#### int solve ( Vect< $T_- > \& b$ ) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

in,out	b	Vect instance that contains right-hand side on input and solution on output.	1
--------	---	--	---

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements Matrix  $< T_- >$ .

#### int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

#### **Parameters**

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

# DSMatrix ( size\_t dim )

Constructor that for a symmetric matrix with given number of rqows.

## Parameters

in	dim	Number of rows

# DSMatrix ( const DSMatrix $< T_- > & m$ )

Copy Constructor.

in	m	DSMatrix instance to copy

# void setSize ( size\_t dim )

Set size (number of rows) of matrix.

#### Parameters

	in	dim	Number of rows and columns.
--	----	-----	-----------------------------

# void set ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Assign constant to entry (i,j) of the matrix.

#### Parameters

in	i	row index
in	j	column index
in	val	value to assign to a(i,j)

Implements Matrix  $< T_- >$ .

# void setDiag ( const $T_- \& a$ )

Set matrix as diagonal and assign its diagonal entries as a constant.

#### Parameters

in a	Value to assign to all diagonal entries
------	---

# void setDiag ( const vector $< T_- > & d$ )

Set matrix as diagonal and assign its diagonal entries.

## Parameters

in	d	Vector entries to assign to matrix diagonal entries

# void add ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Add constant to an entry of the matrix.

#### **Parameters**

in	i	row index
in	j	column index
in	val	value to add to a(i,j)

Implements Matrix  $< T_->$ .

# $T_-$ operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version).

#### Parameters

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# $T_-$ & operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version).

#### Parameters

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# int setLDLt ( )

Factorize matrix (LDL<sup>T</sup>)

# Returns

- 0, if factorization was normally performed,
- n, if the n-th pivot is null.

# void getColumn ( size\_t j, Vect< $T_- > \& v$ ) const

Get j-th column vector.

#### **Parameters**

in	j	Index of column to extract	
out	v	Reference to Vect instance where the column is stored	

#### Remarks

Vector v does not need to be sized before. It is resized in the function

# $Vect < T_- > getColumn ( size_t j ) const$

Get j-th column vector.

in	j	Index of column to extract

#### Returns

Vect instance where the column is stored

#### Remarks

Vector v does not need to be sized before. It is resized in the function

# void setColumn ( size\_t i, const Vect< T\_- > & v )

Copy a given vector to a prescribed column in the matrix.

#### Parameters

in	i	column index to be assigned
in	v	Vect instance to copy

# void getRow ( size\_t i, Vect< $T_- > \& v$ ) const

Get i-th row vector.

## Parameters

in	i	Index of row to extract
out	v	Reference to Vect instance where the row is stored

## Remarks

Vector v does not need to be sized before. It is resized in the function

# $Vect < T_- > getRow ( size_t i ) const$

Get i-th row vector.

#### **Parameters**

in i	Index of row to extract
------	-------------------------

#### Returns

Vect instance where the row is stored

#### Remarks

Vector v does not need to be sized before. It is resized in the function

# void setRow ( size\_t i, const Vect< $T_- > \& v$ )

Copy a given vector to a prescribed row in the matrix.

in	i	row index to be assigned
in	v	Vect instance to copy

# void MultAdd ( $T_-a$ , const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const [virtual]

Multiply matrix by vector a\*x and add to y.

#### Parameters

in	а	Constant to multiply by matrix
in	x	Vector to multiply by matrix
in,out	у	Vector to add to the result. y contains on output the result.

Implements Matrix  $< T_- >$ .

# void TMult ( const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const [virtual]

Multiply transpose of matrix by vector x and add result in y.

#### Parameters

in	x	Vector to add to y
in,out	y	on input, vector to add to. On output, result.

Implements Matrix  $< T_->$ .

# int solve ( Vect< $T_-> \& b$ ) [virtual]

Solve linear system.

The matrix is factorized using the LDLt (Crout) decomposition. If this one is already factorized, no further factorization is performed. If the matrix has been modified the user has to refactorize it using the function setLDLt.

#### **Parameters**

	in,out	b	Vect instance that contains right-hand side on input and solution on output.	
--	--------	---	--	--

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements Matrix  $< T_- >$ .

# int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve linear system.

The matrix is factorized using the LDLt (Crout) decomposition. If this one is already factorized, no further factorization is performed. If the matrix has been modified the user has to refactorize it using the function setLDLt.

#### **Parameters**

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

# void Axpy ( $T_-a$ , const DSMatrix< $T_- > \& m$ )

Add to matrix the product of a matrix by a scalar.

#### Parameters

in	а	Scalar to premultiply	
in	m	Matrix by which a is multiplied. The result is added to current instance	

# void Axpy ( $T_-a_r$ const Matrix $< T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

# Parameters

in	а	Scalar to premultiply	
in	Matrix by which a is multiplied. The result is added to current ins		

Implements Matrix  $< T_- >$ .

# LocalMatrix ( )

Default constructor.

Constructs a matrix with 0 rows and 0 columns

# LocalMatrix ( Element \* el, const SpMatrix < $T_- > & a$ )

Constructor of a local matrix associated to element from a SpMatrix.

i	n	el Pointer to Element	
i	n	а	Global matrix as instance of class SpMatrix.

# LocalMatrix ( Element \* el, const SkMatrix < $T_- > & a$ )

Constructor of a local matrix associated to element from a SkMatrix.

#### Parameters

in	el	Pointer to Element
in	а	Global matrix as instance of class SkMatrix.

# LocalMatrix ( Element \* el, const SkSMatrix < $T_- > & a$ )

Constructor of a local matrix associated to element from a SkSMatrix.

#### Parameters

in	el	Pointer to Element
in	а	Global matrix as instance of class SkSMatrix.

# void Localize ( Element \* el, const SpMatrix< $T_- > \& a$ )

Initialize matrix as element matrix from global SpMatrix.

#### Parameters

in	el	Pointer to Element
in	а	Global matrix as instance of class SpMatrix. This function is called by its
		corresponding constructor.

# void Localize ( Element \* el, const SkMatrix< $T_- > & a$ )

Initialize matrix as element matrix from global SkMatrix.

#### **Parameters**

in	el	Pointer to Element
in a Global matrix as instance of class SkMatrix. This function is called by		Global matrix as instance of class SkMatrix. This function is called by its
corresponding constructor.		corresponding constructor.

# void Localize ( Element \* el, const SkSMatrix< $T_- > \& a$ )

Initialize matrix as element matrix from global SkSMatrix.

in	el	Pointer to Element	
in	in   <i>a</i>   Global matrix as instance of class SkSMatrix. This function is called by its		
		corresponding constructor.	

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & operator= ( const LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & m )

Operator =

Copy instance m into current instance.

LocalMatrix $< T_-, NR_-, NC_- > \& operator = ( const <math>T_- \& x )$ 

Operator =

Assign matrix to identity times x

LocalMatrix $< T_-$ , NR\_-, NC\_- > & operator+= ( const LocalMatrix $< T_-$ , NR\_-, NC\_- > & m )

Operator +=

Add m to current matrix.

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & operator== ( const LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & m )

Operator -=

Subtract m from current matrix.

LocalVect< T<sub>-</sub>, NR<sub>-</sub>> operator\* ( LocalVect< T<sub>-</sub>, NC<sub>-</sub>> & x )

Operator \*

Return a Vect instance as product of current matrix by vector x.

LocalMatrix $< T_-$ , NR\_-, NC\_ $> & operator += ( const T_- & x )$ 

Operator +=

Add constant x to current matrix entries.

LocalMatrix $< T_-$ , NR\_-, NC\_- > & operator== ( const  $T_-$  & x )

Operator -=

Subtract x from current matrix entries.

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & operator\*= ( const T<sub>-</sub> & x )

Operator \*=

Multiply matrix entries by constant x.

LocalMatrix<  $T_-$ ,  $NR_-$ ,  $NC_-$  > & operator/= ( const  $T_-$  & x )

Operator /=

Divide by x current matrix entries.

void MultAdd ( const LocalVect<  $T_-$ ,  $NC_-$  > & x, LocalVect<  $T_-$ ,  $NR_-$  > & y)

Multiply matrix by vector and add result to vector.

in	x	Vector to multiply matrix by.
out	y	Resulting vector (y += a * x)

# void MultAddScal ( const T\_ & a, const LocalVect< T\_, NC\_ > & x, LocalVect< T\_, NR\_ > & y )

Multiply matrix by scaled vector and add result to vector.

#### **Parameters**

in	а	Constant to premultiply by vector x.
in	х	(Scaled) vector to multiply matrix by.
out	у	Resulting vector (y += a * x)

# void Mult ( const LocalVect< T\_, NC\_ > & x, LocalVect< T\_, NR\_ > & y)

Multiply matrix by vector.

#### Parameters

in	х	Vector to multiply matrix by.
out	y	Resulting vector.

# void Symmetrize ( )

Symmetrize matrix.

Fill upper triangle to form a symmetric matrix.

# int Factor ( )

Factorize matrix.

Performs a LU factorization.

# Returns

- 0: Factorization has ended normally,
- n: n-th pivot was zero.

#### int Solve ( Local Vect< T\_, NR\_ > & b )

Forward and backsubstitute to solve a linear system.

# Parameters

in	b	Right-hand side in input and solution vector in output.
----	---	---

# Returns

- 0: Solution was performed normally.
- n: n-th pivot is zero.

## Note

Matrix must have been factorized at first.

# int FactorAndSolve ( LocalVect< T $_{-}$ , NR $_{-}$ > & b )

Factorize matrix and solve linear system.

#### **Parameters**

	in,out b	Right-hand side in input and solution vector in output.
--	----------	---

#### Returns

0 if solution was performed normally. n if n-th pivot is zero. This function simply calls **Factor()** then **Solve(b)**.

# void Invert ( LocalMatrix< T $_-$ , NR $_-$ , NC $_-$ > & A )

Calculate inverse of matrix.

#### **Parameters**

out	A	Inverse of matrix
-----	---	-------------------

# T\_ getInnerProduct ( const LocalVect< T\_, NC\_ > & x, const LocalVect< T\_, NR\_ > & y)

Calculate inner product witrh respect to matrix.

Returns the product x<sup>T</sup>Ay

#### **Parameters**

in	х	Left vector
in	y	Right vector

# Returns

Resulting product

# LocalVect ( const Element \* el, const Vect< $T_- > & v$ , int opt = 0)

Constructor of an element vector from a global Vect instance.

The constructed vector has local numbering of nodes

in	el	Pointer to Element to localize
in	v	Global vector to localize

in	opt	Option for DOF treatment
		• = 0, Normal case [Default]
		Any other value : only one DOF is handled (Local vector has as dimension number of degrees of freedom)

# LocalVect ( const Side \* sd, const Vect< $T_- > \& v$ , int opt = 0)

Constructor of a side vector from a global Vect instance.

The constructed vector has local numbering of nodes

#### **Parameters**

in	sd	Pointer to Side to localize	
in	v	Global vector to localize	
in	opt	Option for DOF treatment	
		• = 0, Normal case [Default]	
		Any other value: only one DOF is handled (Local vector has as dimension number of degrees of freedom)	

# void getLocal ( const Element & el, const Vect $< T_- > \& v$ , int type )

Localize an element vector from a global Vect instance.

The constructed vector has local numbering of nodes This function is called by the constructor  $\leftarrow$ : LocalVect(const Element \*el, const Vect<T $_->$  &v)

#### **Parameters**

in	el	Pointer to Element to localize	
in	v	Global vector to localize	
in	type	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4, TETRA4, HEXA8, PENTA6	

## void Localize (const Element \* el, const Vect< $T_- > \& v$ , size\_t k = 0)

Localize an element vector from a global Vect instance.

The constructed vector has local numbering of nodes This function is called by the constructor  $\leftarrow$ : Local Vect(const Element \*el, const Vect< $T_-$ > &v)

in	el	Pointer to Side to localize	
in	v	Global vector to localize	
in	k	Degree of freedom to localize [Default: All degrees of freedom are stored]	

void Localize (const Side \* sd, const Vect<  $T_- > \& v$ , size\_t k = 0)

Localize a side vector from a global Vect instance.

The constructed vector has local numbering of nodes This function is called by the constructor  $\leftarrow$ : Local Vect(const Side \*sd, const Vect< $T_-$ > &v)

#### **Parameters**

in	sd	Pointer to Side to localize	
in	v	Global vector to localize	
in	k	Degree of freedom to localize [Default: All degrees of freedom are stored]	

LocalVect< T $_-$ , N $_-$ > & operator= ( const LocalVect<math>< T $_-$ , N $_-$ > & <math>v )

Operator =

Copy a LocalVect instance to the current one

LocalVect< T $_-$ , N $_ > & operator= ( const T<math>_-$  & x )

Operator =

Assign value x to all vector entries

LocalVect< T<sub>-</sub>, N<sub>-</sub>> & operator+= ( const LocalVect< T<sub>-</sub>, N<sub>-</sub>> & v )

Operator +=

Add vector v to this instance

LocalVect< T<sub>-</sub>, N<sub>-</sub>> & operator+= ( const T<sub>-</sub> & a )

Operator +=

Add constant a to vector entries

LocalVect< T $_{-}$ , N $_{-}$  > & operator== ( const LocalVect< T $_{-}$ , N $_{-}$  > & v )

Operator -=

Subtract vector v from this instance

LocalVect $< T_-$ ,  $N_- > \&$  operator== ( const  $T_- \& a$  )

Operator -=

Subtract constant a from vector entries

LocalVect< T<sub>-</sub>, N<sub>-</sub>> & operator\*= ( const T<sub>-</sub> & a )

Operator \*=

Multiply vector by constant a

LocalVect< T<sub>-</sub>, N<sub>-</sub>> & operator/= ( const T<sub>-</sub> & a )

Operator /=

Divide vector by constant a

# $T_-$ operator, ( const LocalVect< $T_-$ , $N_- > \& v$ ) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (v,w) where v and w are 2 instances of Local $\leftarrow$  Vect<double,n>

#### **Parameters**

in	v	LocalVect instance by which the current instance is multiplied
----	---	--

## SkSMatrix ( )

Default constructor.

Initializes a zero-dimension matrix

## SkSMatrix ( size\_t size, int is\_diagonal = false )

Constructor that initializes a dense symmetric matrix. Normally, for a dense matrix this is not the right class.

#### Parameters

in	size	Number of matrix rows (and columns).
in	is_diagonal	Boolean to select if the matrix is diagonal or not [Default: false]

# SkSMatrix ( Mesh & mesh, size\_t dof = 0, int is\_diagonal = false )

Constructor using mesh to initialize skyline structure of matrix.

#### **Parameters**

in	mesh	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.
in	is_diagonal	Boolean argument to say is the matrix is actually a diagonal matrix or not.

## SkSMatrix ( const Vect< size\_t > & ColHt )

Constructor that initializes skyline structure of matrix using vector of column height.

in	ColHt	Vect instance that contains rows lengths of matrix.
----	-------	---

## SkSMatrix ( const Vect< size\_t > & I, const Vect< size\_t > & J, int opt = 1 )

Constructor for a square matrix using non zero row and column indices.

#### Parameters

in	I	Vector containing row indices
in	J	Vector containing column indices
in	opt	Flag indicating if vectors I and J are cleaned and ordered (opt=1) or not (opt=0). In the latter case, these vectors can contain the same contents more than once and are not necessarily ordered.

# SkSMatrix ( const Vect< size\_t > & I, const Vect< size\_t > & J, const Vect< $T_-$ > & a, int opt = 1)

Constructor for a square matrix using non zero row and column indices.

#### **Parameters**

in	I	Vector containing row indices	
in	J	Vector containing column indices	
in	а	Vector containing matrix entries in the same order than the one given by I and	
in	opt	Flag indicating if vectors I and J are cleaned and ordered (opt=1) or not (opt=0). In the latter case, these vectors can contain the same contents more than once and are not necessarily ordered	

# void setMesh ( Mesh & mesh, size\_t dof = 0 )

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

## Parameters

in	mesh	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

# void setSkyline ( Mesh & mesh )

Determine matrix structure.

This member function calculates matrix structure using Mesh instance mesh.

# void set ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Assign a value to an entry of the matrix.

in	i	Row index
in	j	Column index
in	val	Value to assign to a(i,j)

Implements Matrix  $< T_- >$ .

void MultAdd ( const Vect<  $T_- > \& x$ , Vect<  $T_- > \& y$  ) const [virtual]

Multiply matrix by vector x and add to y.

#### **Parameters**

in	x	Vector to multiply by matrix	
in,out	y	Vector to add to the result. y contains on output the result.	

Implements Matrix  $< T_- >$ .

void MultAdd (  $T_-a$ , const Vect<  $T_- > \& x$ , Vect<  $T_- > \& y$  ) const [virtual]

Multiply matrix by vector a\*x and add to y.

#### Parameters

in	а	Constant to multiply by matrix	
in	x	Vector to multiply by matrix	
in,out	y	Vector to add to the result. y contains on output the result.	

Implements Matrix  $< T_- >$ .

void Mult ( const Vect<  $T_-> & x$ , Vect<  $T_-> & y$  ) const [virtual]

Multiply matrix by vector x and save in y

# Parameters

in	x	Vector to multiply by matrix
out	y	Vector that contains on output the result.

Implements Matrix  $< T_- >$ .

void TMult ( const Vect<  $T_- > & x$ , Vect<  $T_- > & y$  ) const [virtual]

Multiply transpose of matrix by vector x and save in y.

in	x	Vector to multiply by matrix
out	y	Vector that contains on output the result.

Implements Matrix $< T_->$ .

# void add ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Add a constant to an entry of the matrix.

#### Parameters

in	i	Row index
in	j	Column index
in	val	Constant value to add to a(i,j)

Implements Matrix  $< T_- >$ .

# size\_t getColHeight ( size\_t i ) const

Return column height.

Column height at entry i is returned.

# $T_-$ & operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version).

## Parameters

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# T\_operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version).

## Parameters

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# SkSMatrix $< T_- > & operator = ( const SkSMatrix<math>< T_- > & m )$

Operator =.

Copy matrix m to current matrix instance.

# SkSMatrix $< T_- > & operator = ( const T_- & x )$

Operator =.

define the matrix as a diagonal one with all diagonal entries equal to x.

#### SkSMatrix $< T_- > & operator += ( const SkSMatrix<math>< T_- > & m )$

Operator +=.

Add matrix m to current matrix instance.

# SkSMatrix $< T_- > \& operator*= ( const <math>T_- \& x )$

Operator \*=.

Premultiply matrix entries by constant value x.

#### int setLDLt ( )

Factorize matrix (LDLt (Crout) factorization).

#### Returns

- 0 if factorization was normally performed
- n if the n-th pivot is null

#### int solve ( Vect< $T_- > \& b$ ) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LDLt decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLDLt realizes the factorization step only.

## Parameters

in,out	b	Vect instance that contains right-hand side on input and solution on output.	
--------	---	--	--

# Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements Matrix  $< T_- >$ .

## int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LDLt decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLDLt. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLDLt realizes the factorization step only.

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

# int solveLDLt ( const Vect< $T_- > \& b$ , Vect< $T_- > \& x$ )

Solve a linear system using the LDLt (Crout) factorization.

This function solves a linear system. The LDLt factorization is performed if this was not already done using the function setLU.

#### **Parameters**

in	b	Vect instance that contains right-hand side	
out	x	Vect instance that contains solution	

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null

Solution is performed only is factorization has previouly been invoked.

# void Axpy ( $T_-a$ , const SkSMatrix< $T_- > \& m$ )

Add to matrix the product of a matrix by a scalar.

# Parameters

in	а	Scalar to premultiply	
in	m	Matrix by which a is multiplied. The result is added to current instance	

# void Axpy ( $T_-a$ , const Matrix< $T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

#### **Parameters**

in	а	Scalar to premultiply	
in	m	Pointer to Matrix by which a is multiplied. The result is added to current instance	

Implements Matrix $< T_->$ .

## TrMatrix ( )

Default constructor.

Initialize a zero dimension tridiagonal matrix

# void setSize ( size\_t size )

Set size (number of rows) of matrix.

#### **Parameters**

	in	size	Number of rows and columns.
--	----	------	-----------------------------

# void Axpy ( $T_- a$ , const TrMatrix< $T_- > \& m$ )

Add to matrix the product of a matrix by a scalar.

## Parameters

in	а	Scalar to premultiply	
in	m	Matrix by which a is multiplied. The result is added to current instance	

# void Axpy ( $T_-a$ , const Matrix $< T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

# Parameters

in	а	Scalar to premultiply	
in	m	Matrix by which a is multiplied. The result is added to current instance	

Implements Matrix  $< T_- >$ .

# T\_ operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version).

### Parameters

in	i	Row index
in	j	Column index

Implements Matrix $< T_- >$ .

# $T_-$ & operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version).

in	i	Row index
in	j	Column index

Implements Matrix $< T_- >$ .

 $TrMatrix < T_- > \& operator = ( const TrMatrix < T_- > \& m )$ 

Operator =.

Copy matrix m to current matrix instance.

TrMatrix< T $_->$  & operator\*= ( const T $_-$  & x )

Operator \*=.

Premultiply matrix entries by constant value x.

int solve ( Vect<  $T_-> & b$  ) [virtual]

Solve a linear system with current matrix (forward and back substitution).

#### **Parameters**

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Warning: Matrix is modified after this function.

Implements Matrix  $< T_- >$ .

int solve ( const Vect< T $_->$  & b, Vect< T $_->$  & x )

Solve a linear system with current matrix (forward and back substitution).

## Parameters

in	b	Vect instance that contains right-hand side.	
out	x	Vect instance that contains solution.	

## Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Warning: Matrix is modified after this function.

Iter ( )

Default Constructor.

This constructor set default values: the maximal number of iterations is set to 100 and the tolerance to 1.e-8

# Iter ( int max\_it, real\_t toler, int verbose = 0 )

Constructor with iteration parameters.

## Parameters

	in	max←	Maximum number of iterations
_it		_it	
in toler Tolerance value for convergence		toler	Tolerance value for convergence
	in	verbose	Verbosity parameter [default: 0] 0: No message output, > 0: message output with increasing display.

# bool check ( Vect< $T_-$ > & u, const Vect< $T_-$ > & v, int opt = 2)

Check convergence.

## Parameters

in,out	и	Solution vector at previous iteration
in	v	Solution vector at current iteration
in	opt	Vector norm for convergence checking 1: 1-norm, 2: 2-norm, 0: Max. norm [default: 2]

## Returns

true if convergence criterion is satisfied, false if not

After checking, this function copied v into u.

# int solve ( Iteration s, Preconditioner $p = DIAG\_PREC$ )

Solve equations using prescribed solver and preconditioner.

## Parameters

in	S	Solver identification parameter To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: CGS_SOLVER]
in	р	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner:  IDENT_PREC, DIAG_PREC, SSOR_PREC, DILU_PREC, ILU_PREC [Default: DIAG_PREC]

## Note

The argument p has no effect if the solver is DIRECT\_SOLVER

# 5.12 Physical properties of media

A module that contains classes for physical properties of materials and media.

#### Classes

• class Material

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

# 5.12.1 Detailed Description

A module that contains classes for physical properties of materials and media.

**OFELI's Reference Guide** 

# 5.13 Shape Function

Gathers shape function classes.

#### Classes

• class FEShape

Parent class from which inherit all finite element shape classes.

• class triangle

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

• class Hexa8

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

• class Line2

To describe a 2-Node planar line finite element.

class Line2H

To describe a 2-Node Hermite planar line finite element.

• class Line3

To describe a 3-Node quadratic planar line finite element.

• class Penta6

Defines a 6-node pentahedral finite element using  $P_1$  interpolation in local coordinates (s.x,s.y) and  $Q_1$  isoparametric interpolation in local coordinates (s.x,s.z) and (s.y,s.z).

• class Quad4

Defines a 4-node quadrilateral finite element using  $Q_1$  isoparametric interpolation.

• class Tetra4

Defines a three-dimensional 4-node tetrahedral finite element using  $P_1$  interpolation.

• class Triang3

Defines a 3-Node  $(P_1)$  triangle.

class Triang6S

Defines a 6-Node straight triangular finite element using P2 interpolation.

# 5.13.1 Detailed Description

Gathers shape function classes.

# 5.14 Solid Mechanics

Gathers Solid Mechanics finite element equations related classes.

#### Classes

- class Bar2DL2
  - To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.
- class Beam3DL2
  - To build element equations for 3-D beam equations using 2-node lines.
- class Elas2DQ4
  - To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.
- class Elas2DT3
  - To build element equations for 2-D linearized elasticity using 3-node triangles.
- class Elas3DH8
  - To build element equations for 3-D linearized elasticity using 8-node hexahedra.
- class Elas3DT4
  - To build element equations for 3-D linearized elasticity using 4-node tetrahedra.
- class Equa\_Solid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >
  - Abstract class for Solid Mechanics Finite Element classes.

# 5.14.1 Detailed Description

Gathers Solid Mechanics finite element equations related classes.

# 5.15 Solver

Gathers Solver functions.

## **Classes**

class Reconstruction

To perform various reconstruction operations.

• class EigenProblemSolver

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars l and non-null vectors v such that  $[K]\{v\} = l[M]\{v\}$  where [K] and [M] are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.

• class Iter< T\_>

Class to drive an iterative process.

class LinearSolver< T\_>

Class to solve systems of linear equations by iterative methods.

• class MyOpt

Abstract class to define by user specified optimization function.

class ODESolver

To solve a system of ordinary differential equations.

class OptSolver

To solve an optimization problem with bound constraints.

• class Prec< T\_>

To set a preconditioner.

class TimeStepping

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form  $[A2]\{y''\}+[A1]\{y'\}+[A0]\{y\}=\{b\}$ .

# Macros

• #define MAX\_NB\_EQUATIONS 5

Maximum number of equations.

• #define MAX\_NB\_INPUT\_FIELDS 3

Maximum number of fields for an equation.

• #define MAX\_NB\_MESHES 10

Maximum number of meshes.

• #define TIME\_LOOP(ts, t, ft, n)

A macro to loop on time steps to integrate on time ts: Time step t: Initial time value updated at each time step ft: Final time value n: Time step index.

• #define TimeLoop

A macro to loop on time steps to integrate on time.

#define IterationLoop while (++theIteration<MaxNbIterations && Converged==false)</li>

A macro to loop on iterations for an iterative procedure.

## **Functions**

• ostream & operator << (ostream &s, const Muscl3DT &m)

Output mesh data as calculated in class Muscl3DT.

• template<class T\_>

int BiCG (const SpMatrix<  $T_->$  &A, int prec, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, int max\_it, real\_t toler, int verbose)

Biconjugate gradient solver function.

• template<class T\_>

int BiCGStab (const SpMatrix< T $_-$  > &A, const Prec< T $_-$  > &P, const Vect< T $_-$  > &b, Vect< T $_-$  > &x, int max $_i$ t, real $_i$ t toler, int verbose)

Biconjugate gradient stabilized solver function.

• template<class T\_>

int BiCGStab (const SpMatrix<  $T_->$  &A, int prec, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, int max\_it, real\_t toler, int verbose)

Biconjugate gradient stabilized solver function.

• template<class T\_>

int CG (const SpMatrix<  $T_->$  &A, const Prec<  $T_->$  &P, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, int max\_it, real\_t toler, int verbose)

Conjugate gradient solver function.

• template<class T\_>

int CG (const SpMatrix<  $T_->$  &A, int prec, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, int max\_it, real\_t toler, int verbose)

Conjugate gradient solver function.

• template<class T\_>

int CGS (const SpMatrix $< T_- > &A$ , int prec, const Vect $< T_- > &b$ , Vect $< T_- > &x$ , int max\_it, real\_t toler, int verbose)

Conjugate Gradient Squared solver function.

• template<class T\_>

int GMRes (const SpMatrix $< T_- > &A$ , const Prec $< T_- > &P$ , const Vect $< T_- > &b$ , Vect $< T_- > &x$ , size\_t m, int max\_it, real\_t toler, int verbose)

GMRes solver function.

• template<class T\_>

int GMRes (const SpMatrix< T $_-$  > &A, int prec, const Vect< T $_-$  > &b, Vect< T $_-$  > &x, size $_-$ t m, int max $_-$ it, real $_-$ t toler, int verbose)

GMRes solver function.

template<class T\_>

int GS (const SpMatrix<  $T_-$  > &A, const Vect<  $T_-$  > &b, Vect<  $T_-$  > &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Gauss-Seidel solver function.

• template<class T\_>

int Jacobi (const SpMatrix<  $T_->$  &A, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Jacobi solver function.

• ostream & operator << (ostream &s, const OptSolver &os)

Output differential system information.

template < class T\_, class M\_>

int Richardson (const  $M_-$  &A, const Vect<  $T_-$  > &b, Vect<  $T_-$  > &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Richardson solver function.

template < class T<sub>-</sub> > void Schur (SkMatrix < T<sub>-</sub> > &A, SpMatrix < T<sub>-</sub> > &U, SpMatrix < T<sub>-</sub> > &L, SpMatrix < T<sub>-</sub> > &D, Vect < T<sub>-</sub> > &b, Vect < T<sub>-</sub> > &c)

*Solve a linear system of equations with a 2x2-block matrix.* 

• template<class T\_>

```
void Schur (PETScMatrix< T_- > &A, PETScMatrix< T_- > &U, PETScMatrix< T_- > &L, PETScMatrix< T_- > &D, PETScVect< T_- > &b, PETScVect< T_- > &c)
```

Solve a linear system of equations with a 2x2-block matrix.

• template < class  $T_-$ , class  $M_-$  > int SSOR (const  $M_-$  &A, const Vect<  $T_-$  > &b, Vect<  $T_-$  > &x, int max\_it, real\_t toler, int verbose)

SSOR solver function.

• ostream & operator<< (ostream &s, const TimeStepping &ts)

Output differential system information.

# 5.15.1 Detailed Description

Gathers Solver functions.

#### 5.15.2 Macro Definition Documentation

## #define MAX\_NB\_EQUATIONS 5

Maximum number of equations. Useful for coupled problems

#### #define MAX\_NB\_INPUT\_FIELDS 3

Maximum number of fields for an equation. Useful for coupled problems

#### #define MAX\_NB\_MESHES 10

Maximum number of meshes.
Useful for coupled problems

## #define TimeLoop

## Value:

```
NbTimeSteps = int(theFinalTime/theTimeStep); \
    for (theTime=theTimeStep, theStep=1; theTime
theFinalTime+0.001*theTimeStep; theTime+=
theTimeStep, ++theStep)
```

A macro to loop on time steps to integrate on time.

It uses the following global variables defined in OFELI: the Step, the Time, the Time Step, the Final Time

# #define IterationLoop while (++theIteration<MaxNbIterations && Converged==false)

A macro to loop on iterations for an iterative procedure.

It uses the following global variables defined in **OFELI**: theIteration, MaxNbIterations, Converged

# 5.15.3 Function Documentation

int BiCG ( const SpMatrix<  $T_-$  > & A, int prec, const Vect<  $T_-$  > & b, Vect<  $T_-$  > & x, int  $max\_it$ , real\_t toler, int verbose)

Biconjugate gradient solver function.

#### **Parameters**

in	A	Problem matrix (Instance of class SpMatrix).
in	prec	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max← _it	Maximum number of iterations.
	toler	[in] Tolerance for convergence (measured in relative weighted 2-Norm).
	verbose	<ul> <li>[in] Information output parameter</li> <li>0: No output</li> <li>1: Output iteration information,</li> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

## Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>	]
_>		

int BiCGStab ( const SpMatrix<  $T_-$  > & A, const Prec<  $T_-$  > & P, const Vect<  $T_-$  > & b, Vect<  $T_-$  > & x, int  $max\_it$ , real\_t toler, int verbose)

Biconjugate gradient stabilized solver function.

in	A	Problem matrix (Instance of class SpMatrix).
in	P	Preconditioner (Instance of class Prec).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess on input and solution of the linear system on output (If iterations have succeeded).
in	max⇔ _it	Maximum number of iterations.

in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter
		• 0: No output
		• 1: Output iteration information,
		<ul> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

## Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

int BiCGStab ( const SpMatrix<  $T_-> \& A$ , int prec, const Vect<  $T_-> \& b$ , Vect<  $T_-> \& x$ , int max\_it, real\_t toler, int verbose )

Biconjugate gradient stabilized solver function.

in	A	Problem matrix (Instance of class SpMatrix).
in	prec	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max⇔ _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	<ul> <li>Information output parameter</li> <li>0: No output</li> <li>1: Output iteration information,</li> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

#### Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

# int CG ( const SpMatrix< $T_-$ > & A, const Prec< $T_-$ > & P, const Vect< $T_-$ > & b, Vect< $T_-$ > & x, int $max\_it$ , real\_t toler, int verbose)

Conjugate gradient solver function.

## Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	P	Preconditioner (Instance of class Prec).
in	b	Right-hand side vector (class Vect)
in,out	х	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	<ul> <li>Information output parameter</li> <li>0: No output</li> <li>1: Output iteration information,</li> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

# Returns

Number of performed iterations,

## **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

int CG ( const SpMatrix<  $T_-> \& A$ , int prec, const Vect<  $T_-> \& b$ , Vect<  $T_-> \& x$ , int max\_it, real\_t toler, int verbose )

Conjugate gradient solver function.

in	A	Problem matrix (Instance of abstract class SpMatrix).
in	prec	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	<ul> <li>Information output parameter</li> <li>0: No output</li> <li>1: Output iteration information,</li> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

## Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

# int CGS ( const SpMatrix< $T_-> \& A$ , int prec, const Vect< $T_-> \& b$ , Vect< $T_-> \& x$ , int max\_it, real\_t toler, int verbose )

Conjugate Gradient Squared solver function.

in	A	Problem matrix (Instance of class SpMatrix).
in	prec	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	х	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).

in	verbose	Information output parameter
		• 0: No output
		1: Output iteration information,
		2 and greater: Output iteration information and solution at each iteration.

#### Returns

Number of performed iterations

# **Template Parameters**

< <i>T</i> ←	Data type (real_t, float, complex <real_t>,)</real_t>	
_>		

int GMRes ( const SpMatrix< T $_->$  & A, const Prec< T $_->$  & P, const Vect< T $_->$  & b, Vect< T $_->$  & x, size $_-$ t m, int max $_-$ it, real $_-$ t toler, int verbose )

GMRes solver function.

#### Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	P	Preconditioner (Instance of class Prec).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	m	Number of subspaces to generate for iterations.
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

# Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

int GMRes ( const SpMatrix $< T_- > & A$ , int prec, const Vect $< T_- > & b$ , Vect $< T_- > & x$ , size\_t m, int max\_it, real\_t toler, int verbose )

GMRes solver function.

## Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	prec	Enum variable selecting a preconditioner, among the values IDENT_PREC, DIAG_PREC, ILU_PREC or SSOR_PREC
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	m	Number of subspaces to generate for iterations.
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

# Returns

Number of performed iterations,

# **Template Parameters**

< <i>T</i> ←	Data type (double, float, complex <double>,)</double>
_>	

int GS ( const SpMatrix<  $T_-$  > & A, const Vect<  $T_-$  > & b, Vect<  $T_-$  > & x, real\_t omega, int max\_it, real\_t toler, int verbose )

Gauss-Seidel solver function.

in	A	Problem matrix (Instance of class SpMatrix).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	omega	Relaxation parameter.
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).

in	verbose	Information output parameter
		• 0: No output
		• 1: Output iteration information
		<ul> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>

## Returns

Number of performed iterations

# **Template Parameters**

< <i>T</i> ←	Data type (real_t, float, complex <real_t>,)</real_t>
_>	

int Jacobi ( const SpMatrix  $< T_- > & A$ , const Vect  $< T_- > & b$ , Vect  $< T_- > & x$ , real\_t omega, int max\_it, real\_t toler, int verbose )

Jacobi solver function.

## Parameters

in	A	Problem matrix (Instance of class SpMatrix).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	omega	Relaxation parameter.
in	max← _it	Maximum number of iterations.
in,out	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

## Returns

Number of performed iterations,

# **Template Parameters**

<t_></t_>	Data type (real_t, float, complex <real_t>,)</real_t>
<m←< th=""><th>Matrix storage class</th></m←<>	Matrix storage class
_>	

int Richardson ( const  $M_- \& A$ , const  $Vect < T_- > \& b$ ,  $Vect < T_- > \& x$ , real\_t omega, int  $max\_it$ , real\_t toler, int verbose)

Richardson solver function.

## Parameters

in	A	Problem matrix problem (Instance of abstract class $\mathbf{M}_{-}$ ).
in	b	Right-hand side vector (class Vect)
	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	omega	Relaxation parameter.
in	max↔ _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

## Returns

nb\_it Number of performed iterations,

# **Template Parameters**

<t_></t_>	Data type (real_t, float, complex <real_t>,)</real_t>
<m⊷< th=""><th>Matrix storage class</th></m⊷<>	Matrix storage class
_>	

void Schur ( SkMatrix< T\_ > & A, SpMatrix< T\_ > & U, SpMatrix< T\_ > & L, SpMatrix< T\_ > & D, Vect< T\_ > & b, Vect< T\_ > & c )

Solve a linear system of equations with a 2x2-block matrix.

The linear system is of the form

in	A	Instance of class SkMatrix class for the first diagonal block. The matrix must be invertible and factorizable (Do not use SpMatrix class) where A, U, L, D are instances of matrix classes,
in	U	Instance of class SpMatrix for the upper triangle block. The matrix can be rectangular
in	L	Instance of class SpMatrix for the lower triangle block. The matrix can be rectangular
in	D	Instance of class SpMatrix for the second diagonal block. The matrix must be factorizable (Do not use SpMatrix class)

in,out	b	Vector (Instance of class Vect) that contains the first block of right-hand side on input and the first block of the solution on output. b must have the same size
		as the dimension of A.
in,out	С	Vect instance that contains the second block of right-hand side on output and
		the first block of the solution on output. c must have the same size as the
		dimension of D.

# Template Argument:

# **Template Parameters**

< <i>T</i> ←	data type (real_t, float,)
_>	

void Schur ( PETScMatrix<  $T_-$  > & A, PETScMatrix<  $T_-$  > & U, PETScMatrix<  $T_-$  > & L, PETScMatrix<  $T_-$  > & D, PETScVect<  $T_-$  > & D, PETScVect<  $T_-$  > & D

Solve a linear system of equations with a 2x2-block matrix.

The linear system is of the form

# Parameters

in	A	Instance of class SkMatrix class for the first diagonal block. The matrix must be invertible and factorizable (Do not use SpMatrix class) where A, U, L, D are instances of matrix classes,
in	U	Instance of class PETScMatrix for the upper triangle block. The matrix can be rectangular
in	L	Instance of class PETScMatrix for the lower triangle block. The matrix can be rectangular
in	D	Instance of class PETScMatrix for the second diagonal block. The matrix must be factorizable (Do not use SpMatrix class)
in,out	b	Vector (Instance of class PETScVect) that contains the first block of right-hand side on input and the first block of the solution on output. b must have the same size as the dimension of A.
in,out	С	PETScVect instance that contains the second block of right-hand side on output and the first block of the solution on output. c must have the same size as the dimension of D.

# **Template Argument:**

# **Template Parameters**

< <i>T</i> ←	data type (real_t, float,)
_>	

# int SSOR ( const $M_-$ & A, const Vect< $T_-$ > & b, Vect< $T_-$ > & x, int $max\_it$ , real\_t toler, int verbose)

SSOR solver function.

# Parameters

in	A	Problem matrix (Instance of abstract class <b>M</b> _).
in	b	Right-hand side vector (class Vect)
in,out	x	Vect instance containing initial solution guess in input and solution of the linear system in output (If iterations have succeeded).
in	max← _it	Maximum number of iterations.
in	toler	Tolerance for convergence (measured in relative weighted 2-Norm).
in	verbose	Information output parameter (0: No output, 1: Output iteration information, 2 and greater: Output iteration information and solution at each iteration.

# Returns

Number of performed iterations,

# **Template Arguments:**

- *T*<sub>-</sub> data type (double, float, ...)
- *M*<sub>-</sub> Matrix storage class

# 5.16 Utilities

Gathers utility functions and classes.

## **Files**

• file OFELI.h

Header file that includes all kernel classes of the library.

• file OFELI\_Config.h

File that contains some macros.

• file constants.h

File that contains some widely used constants.

#### Classes

• class Funct

A simple class to parse real valued functions.

• class Tabulation

To read and manipulate tabulated functions.

• class UserData< T\_>

Abstract class to define by user various problem data.

• class Point< T\_>

Defines a point with arbitrary type coordinates.

• class Point2D < T\_>

Defines a 2-D point with arbitrary type coordinates.

class Gauss

Calculate data for Gauss integration.

class Timer

To handle elapsed time counting.

#### **Macros**

- #define OFELLE 2.71828182845904523536028747135
- #define OFELI\_PI 3.14159265358979323846264338328

- #define OFELI\_SQRT2 1.41421356237309504880168872421
- #define OFELI\_SQRT3 1.73205080756887729352744634151
- #define OFELI\_ONEOVERPI 0.31830988618379067153776752675
- #define OFELI\_GAUSS2 0.57735026918962576450914878050196
- #define OFELI\_EPSMCH DBL\_EPSILON
- #define OFELI\_TOLERANCE OFELI\_EPSMCH\*10000
- #define OFELI\_IMAG std::complex<double>(0.,1.);
- #define PARSE(exp, var) the Parser. Parse(exp, var)
- #define EVAL(d) the Parser. Eval(d)

# **Typedefs**

```
• typedef unsigned long <a href="mailto:lsize_t">lsize_t</a>
```

This type stands for type unsigned long.

• typedef double real\_t

This type stands for double.

typedef std::complex< double > complex\_t

This type stands for type std::complex<double>

#### **Functions**

```
• ostream & operator << (ostream &s, const complex_t &x)
```

Output a complex number.

• ostream & operator << (ostream &s, const std::string &c)

Output a string.

• template<class T\_>

ostream & operator << (ostream &s, const vector <  $T_->$  &v)

Output a vector instance.

• template < class T\_>

ostream & operator << (ostream &s, const std::pair < T\_, T\_ > &a)

Output a pair instance.

void saveField (Vect< real\_t > &v, string output\_file, int opt)

Save a vector to an output file in a given file format.

void saveField (PETScVect< real\_t > &v, string output\_file, int opt)

Save a PETSc vector to an output file in a given file format.

void saveField (PETScVect < real\_t > &v, const Mesh &mesh, string output\_file, int opt)

Save a PETSc vector to an output file in a given file format.

• void saveField (Vect< real\_t > &v, const Grid &g, string output\_file, int opt)

Save a vector to an output file in a given file format, for a structured grid data.

• void <a href="mailto:saveGnuplot">saveGnuplot</a> (string input\_file, string output\_file, string mesh\_file)

Save a vector to an input Gnuplot file.

• void saveTecplot (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output file to an input Tecplot file.

void saveVTK (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output VTK file.

void saveGmsh (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output Gmsh file.

• ostream & operator<< (ostream &s, const Tabulation &t)

Output Tabulated function data.

template<class T₋>

```
bool operator== (const Point< T_-> &a, const Point< T_-> &b)
```

Operator ==

• template<class T\_>

```
Point < T_{-} > operator + (const\ Point < T_{-} > \&a, const\ Point < T_{-} > \&b)
```

Operator +

template<class T₋>

```
Point< T_-> operator+ (const Point< T_-> &a, const T_- &x)
```

Operator +

```
    template<class T<sub>−</sub>>

  Point< T_- > operator- (const Point < T_- > &a)
      Unary Operator -
• template<class T_>
  Point< T_- > operator- (const Point< T_- > \&a, const Point< T_- > \&b)
      Operator -
• template<class T_>
  Point< T_- > operator- (const Point< T_- > \&a, const T_- \&x)
      Operator -

    template < class T_>

  Point< T_- > operator* (const T_- &a, const Point<math>< T_- > &b)
      Operator *
• template<class T_>
  Point< T_- > operator* (const int &a, const Point< T_- > &b)
      Operator *.
  template < class T_>
  Point< T_- > operator* (const Point< T_- > &b, const T_- &a)
      Operator /
• template<class T_>
  Point< T_- > operator* (const Point< T_- > &b, const int &a)
      Operator *

    template<class T₋>

  T_- operator* (const Point< T_- > &a, const Point< T_- > &b)
      Operator *

    template<class T_>

  Point< T_- > operator / (const Point < T_- > &b, const T_- &a)
• bool areClose (const Point < double > &a, const Point < double > &b, double toler=OFE ←
  LI_TOLERANCE)
      Return true if both instances of class Point < double > are distant with less then toler

    double SqrDistance (const Point < double > &a, const Point < double > &b)

      Return squared euclidean distance between points a and b
• double Distance (const Point< double > &a, const Point< double > &b)
      Return euclidean distance between points a and b
• template<class T_>
  std::ostream & operator<< (std::ostream &s, const Point< T_> &a)
      Output point coordinates.
• template<class T_>
  bool operator== (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator ==.
• template<class T_>
  Point2D< T_-> operator+ (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator +.
  template < class T_>
  Point2D< T_-> operator+ (const Point2D< T_-> &a, const T_- &x)
      Operator +.
• template<class T₋>
  Point2D< T_-> operator- (const Point2D< T_-> &a)
```

```
Unary Operator -

    template<class T₋>

  Point2D< T_-> operator- (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator -

    template < class T_>

  Point2D< T_-> operator- (const Point2D< T_-> &a, const T_- &x)
      Operator -
• template<class T_>
  Point2D< T_-> operator* (const T_- &a, const Point2D< T_-> &b)
      Operator *.
• template<class T_>
  Point2D< T_-> operator* (const int &a, const Point2D< T_-> &b)

    template<class T_>

  Point2D< T_-> operator* (const Point2D< T_-> &b, const T_- &a)
      Operator /
• template<class T₋>
  Point2D< T_-> operator* (const Point2D< T_-> &b, const int &a)
      Operator *

    template<class T_>

  T_- operator* (const Point2D< T_- > &b, const Point2D< T_- > &a)
      Operator *.

    template<class T_>

  Point2D< T_-> operator/ (const Point2D< T_-> &b, const T_- &a)

    bool areClose (const Point2D < real_t > &a, const Point2D < real_t > &b, real_t toler=OFE ←

  LI_TOLERANCE)
      Return true if both instances of class Point2D<real_t> are distant with less then toler [Default: OFEL←
      I\_EPSMCH].
• real_t SqrDistance (const Point2D< real_t > &a, const Point2D< real_t > &b)
      Return squared euclidean distance between points a and b
• real_t Distance (const Point2D< real_t > &a, const Point2D< real_t > &b)
      Return euclidean distance between points a and b
• template<class T₋>
  std::ostream & operator<< (std::ostream &s, const Point2D< T_> &a)
      Output point coordinates.

    void getMesh (string file, ExternalFileFormat form, Mesh &mesh, size_t nb_dof=1)

      Construct an instance of class Mesh from a mesh file stored in an external file format.

    void getBamg (string file, Mesh &mesh, size_t nb_dof=1)

      Construct an instance of class Mesh from a mesh file stored in Bamg format.
• void getEasymesh (string file, Mesh &mesh, size_t nb_dof=1)
      Construct an instance of class Mesh from a mesh file stored in Easymesh format.

    void getGambit (string file, Mesh &mesh, size_t nb_dof=1)

      Construct an instance of class Mesh from a mesh file stored in Gambit neutral format.
• void getGmsh (string file, Mesh &mesh, size_t nb_dof=1)
      Construct an instance of class Mesh from a mesh file stored in Gmsh format.

    void getMatlab (string file, Mesh &mesh, size_t nb_dof=1)

      Construct an instance of class Mesh from a Matlab mesh data.
• void getNetgen (string file, Mesh &mesh, size_t nb_dof=1)
```

Construct an instance of class Mesh from a mesh file stored in Netgen format.

• void getTetgen (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Tetgen format.

• void getTriangle (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Triangle format.

void saveMesh (const string &file, const Mesh &mesh, ExternalFileFormat form)

This function saves mesh data a file for a given external format.

• void saveGmsh (const string &gp\_file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Gmsh format.

void saveGnuplot (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Gmsh format.

• void saveMatlab (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Matlab format.

• void saveTecplot (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Tecplot format.

void saveVTK (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in VTK format.

void saveBamg (const string &file, Mesh &mesh)

This function outputs a Mesh instance in a file in Bamg format.

void BSpline (size\_t n, size\_t t, Vect< Point< real\_t >> &control, Vect< Point< real\_t >> &output, size\_t num\_output)

Function to perform a B-spline interpolation.

• void banner (const string &prog="")

Outputs a banner as header of any developed program.

• template<class  $T_->$ 

void QuickSort (std::vector  $< T_- > &a$ , int begin, int end)

Function to sort a vector.

template<class T₋>

void qksort (std::vector  $< T_- > &a$ , int begin, int end)

Function to sort a vector.

• template < class  $T_-$ , class  $C_- >$ 

void qksort (std::vector < T\_ > &a, int begin, int end, C\_ compare)

Function to sort a vector according to a key function.

• int Sgn (real\_t a)

Return sign of a: - 1 or 1.

real\_t Abs2 (complex\_t a)

Return square of modulus of complex number a

real\_t Abs2 (real\_t a)

Return square of real number a

• real\_t Abs (real\_t a)

Return absolute value of a

real\_t Abs (complex\_t a)

Return modulus of complex number a

• real\_t Abs (const Point < real\_t > &p)

Return Norm of vector a

real\_t Conjg (real\_t a)

Return complex conjugate of real number a

```
    complex_t Conjg (complex_t a)

      Return complex conjugate of complex number a
• real_t Max (real_t a, real_t b, real_t c)
      Return maximum value of real numbers a, b and c
• int Max (int a, int b, int c)
      Return maximum value of integer numbers a, b and c
• real_t Min (real_t a, real_t b, real_t c)
      Return minimum value of real numbers a, b and c
• int Min (int a, int b, int c)
      Return minimum value of integer numbers a, b and c
• real_t Max (real_t a, real_t b, real_t c, real_t d)
      Return maximum value of integer numbers a, b, c and d
• int Max (int a, int b, int c, int d)
      Return maximum value of integer numbers a, b, c and d
• real_t Min (real_t a, real_t b, real_t c, real_t d)
      Return minimum value of real numbers a, b, c and d
• int Min (int a, int b, int c, int d)
      Return minimum value of integer numbers a, b, c and d

    real_t Arg (complex_t x)

      Return argument of complex number x

    complex_t Log (complex_t x)

      Return principal determination of logarithm of complex number x
• template<class T_>
  T_{-} Sqr (T_{-}x)
      Return square of value x
• template<class T_>
  void Scale (T_- a, const vector < T_- > &x, vector < T_- > &y)
      Mutiply vector x by a and save result in vector y
• template<class T_>
  void Scale (T_- a, const Vect< T_- > &x, Vect< T_- > &y)
      Mutiply vector x by a and save result in vector y
• template<class T_>
  void Scale (T_- a, vector < T_- > &x)
      Mutiply vector x by a

    template<class T₋>

  void Xpy (size_t n, T_-*x, T_-*y)
      Add array x to y

    template<class T_>

  void Xpy (const vector < T_- > &x, vector < T_- > &y)
      Add vector x to y
• template<class T_>
  void Axpy (size_t n, T_a, T_*, T_*)
      Multiply array x by a and add result to y
• template<class T_>
  void Axpy (T_- a, const vector< T_- > &x, vector< T_- > &y)
      Multiply vector x by a and add result to y
• template<class T_>
```

void Axpy  $(T_a, const Vect < T_s & x, Vect < T_s & y)$ 

```
Multiply vector x by a and add result to y
• template<class T_>
  void Copy (size_t n, T_-*x, T_-*y)
      Copy array x to y n is the arrays size.
• real_t Error2 (const vector< real_t > &x, const vector< real_t > &y)
      Return absolute L2 error between vectors x and y
• real_t RError2 (const vector< real_t > &x, const vector< real_t > &y)
      Return absolute L^2 error between vectors x and y

    real_t ErrorMax (const vector < real_t > &x, const vector < real_t > &y)

      Return absolute Max. error between vectors x and y
• real_t RErrorMax (const vector < real_t > &x, const vector < real_t > &y)
      Return relative Max. error between vectors x and y
• template<class T_>
  T_- Dot (size_t n, T_- *x, T_- *y)
      Return dot product of arrays x and y
• real_t Dot (const vector < real_t > &x, const vector < real_t > &y)
      Return dot product of vectors x and y.
• real_t Dot (const Vect< real_t > &x, const Vect< real_t > &y)
      Return dot product of vectors x and y
• template<class T_>
  T_{-} Dot (const Point< T_{-} > &x, const Point< T_{-} > &y)
      Return dot product of x and y
• template<class T_>
  void Assign (vector< T_- > &v, const T_- &a)
      Assign the value a to all entries of a vector v
• template<class T_>
  void Clear (vector < T_- > &v)
      Assign 0 to all entries of a vector.
• template<class T_>
  void Clear (Vect< T_- > \&v)
      Assign 0 to all entries of a vector.
real_t Nrm2 (size_t n, real_t *x)
      Return 2-norm of array x

    real_t Nrm2 (const vector < real_t > &x)

      Return 2-norm of vector x
• template<class T_>
  real_t Nrm2 (const Point< T_- > &a)
      Return 2-norm of a
• bool Equal (real_t x, real_t y, real_t toler=OFELI_EPSMCH)
      Function to return true if numbers x and y are close up to a given tolerance toler
• char itoc (int i)
      Function to convert an integer to a character.
• string itos (int i)
      Function to convert an integer to a string.
• std::string itos (size_t i)
      Function to convert an integer to a string.
```

• string dtos (real\_t d)

Function to convert a real to a string.

template<class T₋>

T\_stringTo (const std::string &s)

Function to convert a string to a template type parameter.

• void RTrim (char \*s)

Function to remove blanks at the end of a string.

• void LTrim (char \*s)

Function to remove blanks at the beginning of a string.

• void Trim (char \*s)

Function to remove blanks at the beginning and end of a string.

template<class T<sub>-</sub>> void Swap (T<sub>-</sub> &a, T<sub>-</sub> &b)

Swap elements a and b.

# 5.16.1 Detailed Description

Gathers utility functions and classes.

## 5.16.2 Macro Definition Documentation

#### #define OFELI\_E 2.71828182845904523536028747135

Value of *e* or *exp* (with 28 digits)

#### #define OFELI\_PI 3.14159265358979323846264338328

Value of Pi (with 28 digits)

#### 

Value of 1/3 (with 28 digits)

## 

Value of 1/6 (with 28 digits)

## 

Value of 1/12 (with 28 digits)

#### #define OFELI\_SQRT2 1.41421356237309504880168872421

Value of sqrt(2) (with 28 digits)

## #define OFELI\_SQRT3 1.73205080756887729352744634151

Value of sqrt(3) (with 28 digits)

# #define OFELI\_ONEOVERPI 0.31830988618379067153776752675

Value of 1/Pi (with 28 digits)

#### #define OFELI\_GAUSS2 0.57735026918962576450914878050196

Value of 1/sqrt(3) (with 32 digits)

#### #define OFELI\_EPSMCH DBL\_EPSILON

Value of Machine Epsilon

#### #define OFELI\_TOLERANCE OFELI\_EPSMCH\*10000

Default tolerance for an iterative process = OFELI\_EPSMCH \* 10000

## #define OFELI\_IMAG std::complex<double>(0.,1.);

= Unit imaginary number (i)

## #define PARSE( exp, var ) the Parser. Parse (exp, var)

A macro that parses a regular expression exp using the variables in the string var. For instance, to parse the function sin(x+y) one must declare PARSE("sin(x+y)","x,y")

#### #define EVAL( d ) the Parser. Eval(d)

A macro that evaluates a parsed regular expression For instance, with a declaration  $PARSE("\sin(x+y)","x,y")$  the data x=1 and y=2 using this function must be evaluated as follows: EVAL(d) with d[0]=1, d[1]=2

## 5.16.3 Function Documentation

# void saveField ( Vect< real\_t > & v, string output\_file, int opt )

Save a vector to an output file in a given file format.

Case where the vector contains mesh information

#### Parameters

in	v	Vect instance to save
in	output_file	Output file where to save the vector
in	opt	Option to choose file format to save. This is to be chosen among
		enumerated values: GMSH GNUPLOT MATLAB TECPLOT VTK

## void saveField ( PETScVect< real\_t > & v, string output\_file, int opt )

Save a PETSc vector to an output file in a given file format.

Case where the vector does not contain mesh information

in	v	PETScVect instance to save
in	output_file	Output file where to save the vector
in	opt	Option to choose file format to save. This is to be chosen among
		enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT, VTK

## void saveField ( PETScVect < real.t > & v, const Mesh & mesh, string output file, int opt )

Save a PETSc vector to an output file in a given file format.

Case where the vector does not contain mesh information

#### **Parameters**

i	. <i>v</i>	PETScVect instance to save
i	mesh	Mesh instance
i	output_file	Output file where to save the vector
i	. opt	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT, VTK

## void saveField ( Vect< real\_t > & v, const Grid & g, string output\_file, int opt = VTK )

Save a vector to an output file in a given file format, for a structured grid data.

#### **Parameters**

in	v	Vect instance to save	
in	g	g Grid instance	
in	output_file	Output file where to save the vector	
in	opt	Option to choose file format to save. This is to be chosen among	
		enumerated values: VTK	

## void saveGnuplot ( string input\_file, string output\_file, string mesh\_file )

Save a vector to an input Gnuplot file.

Gnuplot is a command-line driven program for producing 2D and 3D plots. It is under the GNU General Public License. Available information can be found in the site:

http://www.gnuplot.info/

#### **Parameters**

in	input_file	Input file (OFELI XML file containing a field).
in	output_file	Output file (gnuplot format file)
in	mesh_file	File containing mesh data

# void saveTecplot ( string input\_file, string output\_file, string mesh\_file )

Save a vector to an output file to an input Tecplot file.

Tecplot is high quality post graphical commercial processing program developed by **Amtec**. Available information can be found in the site: http://www.tecplot.com

in	input_file	Input file (OFELI XML file containing a field).
in	output_file	Output file (gnuplot format file)

	in	mesh_file	File containing mesh data
--	----	-----------	---------------------------

## saveVTK ( string input\_file, string output\_file, string mesh\_file )

Save a vector to an output VTK file.

http://public.kitware.com/VTK/

The Visualization ToolKit (VTK) is an open source, freely available software system for 3D computer graphics. Available information can be found in the site:

# Parameters

in	input_file	Input file (OFELI XML file containing a field).
in	output_file	Output file (VTK format file)
in	mesh_file	File containing mesh data

# void saveGmsh ( string input\_file, string output\_file, string mesh\_file )

Save a vector to an output Gmsh file.

Gmsh is a free mesh generator and postprocessor that can be downloaded from the site: http://www.geuz.org/gmsh/

## Parameters

in	input_file	Input file (OFELI XML file containing a field).
in	output_file	Output file (Gmsh format file)
in	mesh_file	File containing mesh data

bool operator== ( const Point< T $_->$  & a, const Point< T $_->$  & b)

Operator ==

Return true if a=b, false if not.

Point< T $_->$  operator+ ( const Point< T $_->$  & a, const Point< T $_->$  & b )

Operator +

Return sum of two points a and b

Point $< T_- >$  operator+ ( const Point $< T_- > & a$ , const  $T_- & x$ )

Operator +

Translate a by x

Point $< T_- >$  operator- (const Point $< T_- > & a$ )

Unary Operator -

Return minus a

```
Point< T_-> operator- ( const Point< T_-> & a, const Point< T_-> & b
Operator -
   Return point a minus point b
Point< T_- > operator- ( const Point< T_- > & a, const T_- & x)
Operator -
   Translate a by -x
Point< T_-> operator* ( const T_- & a, const Point< T_-> & b )
Operator *
   Return point b premultiplied by constant a
Point< T_- > operator* ( const int & a, const Point< T_- > & b )
Operator *.
   Return point b divided by integer constant a
Point< T_- > operator* ( const Point< T_- > \& b, const T_- \& a)
Operator /
   Return point b multiplied by constant a
Point< T_- > operator* ( const Point< T_- > & b, const int & a )
Operator *
   Return point b postmultiplied by constant a
T_- operator* ( const Point< T_- > & b, const Point< T_- > & a)
Operator *
   Return inner (scalar) product of points a and b
Point< T_- > operator/ ( const Point< T_- > \& b, const T_- \& a)
Operator /
   Return point b divided by constant a
bool operator== ( const Point2D< T_-> & a, const Point2D< T_-> & b)
Operator ==.
   Return true if a=b, false if not.
Point2D< T_-> operator+ ( const Point2D< T_-> & a, const Point2D< T_-> & b)
Operator +.
   Return sum of two points a and b
Point2D< T_-> operator+ ( const Point2D< T_-> & a, const T_- & x )
Operator +.
   Translate a by x
```

```
Point2D< T_-> operator- ( const Point2D< T_-> & a )
Unary Operator -
   Return minus a
Point2D< T_-> operator-( const Point2D< T_-> & a, const Point2D< T_-> & b)
Operator -
   Return point a minus point b
Point2D< T_-> operator- ( const Point2D< T_-> & a, const T_- & x )
Operator -
   Translate a by -x
Point2D< T_-> operator* ( const T_- & a, const Point2D< T_-> & b )
Operator *.
   Return point b premultiplied by constant a
Point2D< T_-> operator* ( const int & a, const Point2D< T_-> & b)
Operator *.
   Return point b divided by integer constant a
Point2D< T_-> operator* ( const Point2D< T_-> & b, const T_- & a)
Operator /
   Return point b postmultiplied by constant a
Point2D< T_-> operator* ( const Point2D< T_-> & b, const int & a )
Operator *
   Return point b postmultiplied by constant a
T_ operator* ( const Point2D< T_ > & b, const Point2D< T_ > & a )
Operator *.
   Return point b postmultiplied by integer constant a.
Point2D< T_-> operator/ ( const Point2D< T_-> & b, const T_- & a)
Operator /
   Return point b divided by constant a
void getMesh ( string file, ExternalFileFormat form, Mesh & mesh, size_t nb\_dof = 1 )
Construct an instance of class Mesh from a mesh file stored in an external file format.
Parameters
       file
               Input mesh file name.
```

OFELI's Reference Guide

in	form	Format of the mesh file. This one can be chosen among the enumerated values:
		GMSH: Mesh generator <b>Gmsh</b> , see site:     http://www.geuz.org/gmsh/
		• MATLAB: Matlab file, see site: http://www.mathworks.com/products/matlab/
		• EASYMESH: Easymesh is a 2-D mesh generator, see site: http://web.mit.edu/easymesh_v1.4/www/easymesh.html
		• GAMBIT: <b>Gambit</b> is a mesh generator associated to <b>Fluent</b> http://www.stanford.edu/class/me469b/gambit_download.html
		• BAMG: Mesh generator Bamg, see site: http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.← html
		<ul> <li>NETGEN: Netgen is a 3-D mesh generator, see site: http://www.hpfem.jku.at/netgen/</li> </ul>
		• TETGEN: <b>Tetgen</b> is a 3-D mesh generator, see site: http://tetgen.berlios.de/
		• TRIANGLE_FF: Triangle is a 2-D mesh generator, see site: http://www.cs.cmu.edu/~quake/triangle.html
out	mesh	Mesh instance created by the function.
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

# void getBamg ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a mesh file stored in Bamg format.

#### Parameters

in	file	Name of a file written in the Bamg format.

# Note

**Bamg** is a 2-D mesh generator. It allows to construct adapted meshes from a given metric. It was developed at INRIA, France. Available information can be found in the site: http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.html

out	mesh	Mesh instance created by the function.
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

## void getEasymesh ( string file, Mesh & mesh, size\_t nb\_dof = 1 )

Construct an instance of class Mesh from a mesh file stored in Easymesh format.

#### **Parameters**

in	file	Name of a file (without extension) written in <b>Easymesh</b> format. Actually, the
		function Easymesh2MDF attempts to read mesh data from files file.e, file.n
		and file.s produced by <b>Easymesh</b> .

#### Note

**Easymesh** is a free program that generates 2-D, unstructured, Delaunay and constrained Delaunay triangulations in general domains. It can be downloaded from the site:

http://www-dinma.univ.trieste.it/nirftc/research/easymesh/Default.htm

#### **Parameters**

i	in	mesh	Mesh instance created by the function.
i	in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

# void getGambit ( string file, Mesh & mesh, size\_t nb\_dof = 1 )

Construct an instance of class Mesh from a mesh file stored in Gambit neutral format.

#### Note

**Gambit** is a commercial mesh generator associated to the CFD code **Fluent**. Informations about **Gambit** can be found in the site:

http://www.fluent.com/software/gambit/

## Parameters

in	file	Name of a file written in the <b>Gambit</b> neutral format.	
out	mesh	Mesh instance created by the function.	
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.	

# void getGmsh ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a mesh file stored in Gmsh format.

#### Note

**Gmsh** is a free mesh generator that can be downloaded from the site: http://www.geuz.org/gmsh/

in	file	Name of a file written in the <b>Gmsh</b> format.	
out	mesh	Mesh instance created by the function.	
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.	

# void getMatlab ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a Matlab mesh data.

#### Note

**Matlab** is a language of scientific computing including visualization. It is developed by MathWorks. Available information can be found in the site:

http://www.mathworks.com/products/matlab/

#### **Parameters**

j	in	file	Name of a file created by Matlab by executing the script file Matlab20FELI.m
C	out	mesh	Mesh instance created by the function.
j	in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.

# void getNetgen ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a mesh file stored in Netgen format.

#### Note

**Netgen** is a tetrahedral mesh generator that can be downloaded from the site: http://www.hpfem.jku.at/netgen/

#### **Parameters**

in	file	Name of a file written in the Netgen format.	
out	mesh	Mesh instance created by the function.	
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. [ default = 1 ]	

# void getTetgen ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a mesh file stored in Tetgen format.

# Note

**Tetgen** is a free three-dimensional mesh generator that can be downloaded in the site: http://tetgen.berlios.de/

in	file	Name of a file written in the <b>Tetgen</b> format.	
out	mesh	Mesh instance created by the function.	
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.	

# void getTriangle ( string file, Mesh & mesh, size\_t $nb\_dof = 1$ )

Construct an instance of class Mesh from a mesh file stored in Triangle format.

#### Note

**TRIANGLE** is a C program that can generate meshes, Delaunay triangulations and Voronoi diagrams for 2D pointsets that can be downloaded in the site:

http://people.scs.fsu.edu/~burkardt/c\_src/triangle/triangle.html/

#### **Parameters**

in	file	Name of a file written in the <b>Tetgen</b> format.	
out	mesh	Mesh instance created by the function.	
in	nb_dof	Number of degrees of freedom for each node. This information is not provided, in general, by mesh generators. Its default value here is 1.	

# void saveMesh (const string & file, const Mesh & mesh, ExternalFileFormat form)

This function saves mesh data a file for a given external format.

## Parameters

in	file	File where to store mesh	
in	mesh	Mesh instance to save	
in	form	Format of the mesh file. This one can be chosen among the enumerated values:	
		<ul> <li>GMSH: Mesh generator and graphical postprocessor Gmsh: http://www.geuz.org/gmsh/</li> </ul>	
		• GNUPLOT: Well known graphics software: http://www.gnuplot.info/	
		• MATLAB: Matlab file: http://www.mathworks.com/products/matlab/	
		• TECPLOT: Commercial graphics software: http://www.tecplot.com	
		<ul> <li>VTK: Graphics format for the free postprocessor ParaView: http://public.kitware.com/VTK/</li> </ul>	

# void saveGmsh (const string & file, const Mesh & mesh)

This function outputs a Mesh instance in a file in Gmsh format.

#### Note

**Gmsh** is a free mesh generator that can be downloaded from the site: http://www.geuz. ← org/gmsh/

#### **Parameters**

out	file	Output file in <b>Gmsh</b> format.
in	mesh	Mesh instance to save.

## void saveGnuplot (const string & file, const Mesh & mesh)

This function outputs a Mesh instance in a file in Gmsh format.

#### Note

**Gnuplot** is a command-line driven program for producing 2D and 3D plots. It is under the GNU General Public License. Available information can be found in the site: http://www.gnuplot.info/

#### **Parameters**

out	file	Output file in <b>Gnuplot</b> format.
in	mesh	Mesh instance to save.

# void saveMatlab (const string & file, const Mesh & mesh)

This function outputs a Mesh instance in a file in Matlab format.

#### Note

**Matlab** is a language of scientific computing including visualization. It is developed by MathWorks. Available information can be found in the site: http://www.mathworks.com/products/matlab/

#### **Parameters**

out	file	Output file in <b>Matlab</b> format.
in	mesh	Mesh instance to save.

# void saveTecplot (const string & file, const Mesh & mesh)

This function outputs a Mesh instance in a file in Tecplot format.

# Note

**Tecplot** is high quality post graphical commercial processing program developed by Amtec. Available information can be found in the site:

http://www.tecplot.com

out	file	Output file in <b>Tecplot</b> format.
in	mesh	Mesh instance to save.

## void saveVTK (const string & file, const Mesh & mesh)

This function outputs a Mesh instance in a file in VTK format.

#### Note

The Visualization ToolKit (VTK) is an open source, freely available software system for 3D computer graphics. Available information can be found in the site: http://public.kitware.com/VTK/

## Parameters

out	file	Output file in <b>VTK</b> format.
in	mesh	Mesh instance to save.

# void saveBamg (const string & file, Mesh & mesh)

This function outputs a Mesh instance in a file in Bamg format.

#### **Parameters**

in	file	Name of a file written in the Bamg format.

## Note

**Bamg** is a 2-D mesh generator. It allows to construct adapted meshes from a given metric. It was developed at INRIA, France. Available information can be found in the site:

http://raweb.inria.fr/rapportsactivite/RA2002/gamma/uid25.html

## Parameters

in	mesh	Mesh instance.

BSpline ( size\_t n, size\_t t, Vect< Point< real\_t >> & control, Vect< Point< real\_t >> & output, size\_t num\_output )

Function to perform a B-spline interpolation.

This program is adapted from a free program ditributed by Keith Vertanen (vertankd@cda. ← mrs.umn.edu) in 1994.

#### **Parameters**

#### **Parameters**

in	n	Number of control points minus 1.
in	t	Degree of the polynomial plus 1.
in	control	Control point array made up of Point stucture.
out	output	Vector in which the calculated spline points are to be put.
in	num_output	How many points on the spline are to be calculated.

#### Note

Condition: n+2>t (No curve results if n+2<=t) Control vector contains the number of points specified by n Output array is the proper size to hold num\_output point structures

# void banner ( const string & prog = " ")

Outputs a banner as header of any developed program.

#### Parameters

:	in	prog	Calling program name. Enables writing a copyright notice accompanying the
			program.

# void QuickSort ( std::vector $< T_- > & a$ , int begin, int end )

Function to sort a vector.

qksort uses the famous quick sorting algorithm.

# Parameters

in,out	а	Vector to sort.
in	begin	index of starting iterator
in	end	index of ending iterator

The calling program must provide an overloading of the operator < for the type T\_

# void qksort ( std::vector $< T_- > & a$ , int begin, int end )

Function to sort a vector.

qksort uses the famous quick sorting algorithm.

#### Parameters

in,out	а	Vector to sort.	
in	begin	index of starting index (default value is 0)	
in	end	index of ending index (default value is the vector size - 1)	

# void qksort ( std::vector< $T_-$ > & a, int begin, int end, $C_-$ compare )

Function to sort a vector according to a key function. qksort uses the famous quick sorting algorithm.

#### **Parameters**

in,out	а	Vector to sort.
in	begin	index of starting index (0 for the beginning of the vector)
in	end	index of ending index
in	compare	A function object that implements the ordering. The user must provide this function that returns a boolean function that is true if the first argument is less than the second and false if not.

#### void Scale ( $T_-a_r$ const vector< $T_- > \& x_r$ vector< $T_- > \& y$ )

Mutiply vector x by a and save result in vector y x and y are instances of class vector<T\_>

# void Scale ( $T_-a$ , const Vect< $T_-> \& x$ , Vect< $T_-> \& y$ )

Mutiply vector x by a and save result in vector y x and y are instances of class Vect<T\_>

#### void Scale ( $T_-a$ , vector< $T_-> \& x$ )

Mutiply vector x by a x is an instance of class vector<T\_>

# void Xpy ( const vector< $T_- > \& x$ , vector< $T_- > \& y$ )

Add vector x to y

x and y are instances of class vector<T $_>$ 

# void Axpy ( size\_t n, $T_- a$ , $T_- * x$ , $T_- * y$ )

Multiply array x by a and add result to y n is the arrays size.

# void Axpy ( $T_- a$ , const vector< $T_- > \& x$ , vector< $T_- > \& y$ )

Multiply vector x by a and add result to y x and y are instances of class vector<T\_>

# void Axpy ( $T_-a$ , const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ )

Multiply vector x by a and add result to y x and y are instances of class Vect<T\_>

# $T_-$ Dot ( size\_t n, $T_- * x$ , $T_- * y$ )

Return dot product of arrays x and y n is the arrays size.

#### double Dot ( const vector< real\_t > & x, const vector< real\_t > & y)

Return dot product of vectors x and y.

x and y are instances of class vector<double>

# real\_t Dot ( const Vect< real\_t > & x, const Vect< real\_t > & y)

Return dot product of vectors x and y x and y are instances of class Vect<T $_->$ 

# void Clear ( vector< T $_->$ & v )

Assign 0 to all entries of a vector.

#### Parameters

in v	Vector to clear
------	-----------------

#### void Clear ( Vect< T $_->$ & v )

Assign 0 to all entries of a vector.

#### Parameters

in v	Vector to clear
------	-----------------

#### real\_t Nrm2 ( size\_t n, real\_t \* x )

Return 2-norm of array x

#### Parameters

in	n	is Array length
in	х	Array to treat

# bool Equal ( real\_t x, real\_t y, real\_t toler = OFELI\_EPSMCH )

Function to return true if numbers x and y are close up to a given tolerance toler Default value of tolerance is the constant OFELI\_EPSMCH

# 5.17 Vector and Matrix

Gathers vector and matrix related classes.

#### Classes

```
• class BMatrix< T_>
```

To handle band matrices.

class DMatrix< T<sub>-</sub>>

To handle dense matrices.

• class DSMatrix< T\_>

To handle symmetric dense matrices.

• class LocalMatrix< T\_, NR\_, NC\_>

Handles small size matrices like element matrices, with a priori known size.

• class LocalVect< T<sub>-</sub>, N<sub>-</sub>>

Handles small size vectors like element vectors.

• class PETScMatrix< T\_>

To handle matrices in sparse storage format using the Petsc library.

• class PETScVect< T\_>

To handle general purpose vectors using Petsc.

class PETScWrapper < T\_>

This class is a wrapper to be used when the library Petsc is installed and used with OFELI.

class SkMatrix< T<sub>-</sub>>

To handle square matrices in skyline storage format.

• class SkSMatrix< T\_>

To handle symmetric matrices in skyline storage format.

• class SpMatrix< T\_>

To handle matrices in sparse storage format.

• class TrMatrix< T\_>

To handle tridiagonal matrices.

• class Vect< T\_>

To handle general purpose vectors.

# **Typedefs**

• typedef Eigen::Matrix< T\_, Eigen::Dynamic, 1 > VectorX

This type is the vector type in the Eigen library.

# **Functions**

```
    template<class T->
```

```
Vect < T_- > operator* (const BMatrix < T_- > &A, const Vect < T_- > &b)
```

Operator \* (Multiply vector by matrix and return resulting vector.

• template<class T\_>

```
BMatrix< T_- > operator* (T_- a, const BMatrix<math>< T_- > \&A)
```

Operator \* (Premultiplication of matrix by constant)

• template<class T\_>

```
ostream & operator << (ostream &s, const BMatrix < T_> &a)
```

Output matrix in output stream.

```
• template<class T_>
  Vect < T_- > operator* (const DMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const DMatrix < T_- > &a)
      Output matrix in output stream.
• template<class T_>
  Vect < T_- > operator* (const DSMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const DSMatrix < T_> &a)
      Output matrix in output stream.
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T_, NR_, NC_ > operator* (T_ a, const LocalMatrix < T_, NR_, NC_ > &x)
      Operator * (Multiply matrix x by scalar a)
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T_, NR_, NC_ > operator / (T_ a, const LocalMatrix < T_, NR_, NC_ > &x)
      Operator / (Divide matrix x by scalar a)
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T_, NR_, NC_ > operator+ (const LocalMatrix < T_, NR_, NC_ > &x, const
  LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub> > &y)
      Operator + (Add matrix x to y)
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T_, NR_, NC_ > operator- (const LocalMatrix < T_, NR_, NC_ > &x, const
  LocalMatrix< T_-, NR_-, NC_- > \&y)
      Operator - (Subtract matrix y from x)

    template<class T_, size_t NR_, size_t NC_>

  ostream & operator << (ostream &s, const LocalMatrix < T_, NR_, NC_ > &a)
      Output vector in output stream.
• template < class T_, size_t N_>
  LocalVect< T_-, N_- > operator + (const LocalVect < T_-, N_- > &x, const LocalVect < T_-, N_- >
  &y)
      Operator + (Add two vectors)
• template < class T_, size_t N_>
  LocalVect< T<sub>-</sub>, N<sub>-</sub> > operator- (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &x, const LocalVect< T<sub>-</sub>, N<sub>-</sub> >
  &y)
      Operator - (Subtract two vectors)
• template < class T_, size_t N_>
  LocalVect< T<sub>-</sub>, N<sub>-</sub> > operator* (T<sub>-</sub> a, const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &x)
      Operator * (Premultiplication of vector by constant)
• template < class T_, size_t N_>
  LocalVect< T<sub>-</sub>, N<sub>-</sub>> operator/ (T<sub>-</sub> a, const LocalVect< T<sub>-</sub>, N<sub>-</sub>> &x)
      Operator / (Division of vector by constant)
• template < class T_, size_t N_>
  real_t Dot (const LocalVect< T_-, N_- > &a, const LocalVect< T_-, N_- > &b)
      Calculate dot product of 2 vectors (instances of class Local Vect)
• template < class T_, size_t N_>
  void Scale (T_- a, const LocalVect< T_-, N_- > &x, LocalVect< T_-, N_- > &y)
      Multiply vector x by constant a and store result in y.
```

```
• template < class T_, size_t N_>
  void Scale (T_- a, LocalVect< T_-, N_- > &x)
      Multiply vector x by constant a and store result in x.
• template < class T_, size_t N_>
  void Axpy (T_- a, const LocalVect< T_-, N_- > &x, LocalVect< T_-, N_- > &y)
      Add a*x to vector y.
• template < class T_-, size_t N_->
  void Copy (const LocalVect< T_-, N_-> &x, LocalVect< T_-, N_-> &y)
      Copy vector x into vector y.
• template < class T_, size_t N_>
  ostream & operator << (ostream &s, const Local Vect < T<sub>-</sub>, N<sub>-</sub> > &v)
      Output vector in output stream.
• template<class T_>
  PETScVect < T_- > operator* (const PETScMatrix < T_- > &A, const PETScVect < T_- > &x)

    template<class T<sub>-</sub>>

  ostream & operator << (ostream &s, PETScMatrix < T_> &A)
      Output matrix in output stream.
• template<class T_>
  ostream & operator << (ostream &s, const PETScWrapper < T_> &w)
      Output Petsc Wrapper data in output stream.

    template<class T₋>

  Vect < T_- > operator* (const SkMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.

    template<class T_>

  ostream & operator << (ostream &s, const SkMatrix < T_> &a)
      Output matrix in output stream.
• template<class T_>
  Vect < T_- > operator* (const SkSMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const SkSMatrix < T_> &a)
      Output matrix in output stream.
• template<class T_>
  Vect < T_- > operator* (const SpMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.

    template<class T₋>

  ostream & operator << (ostream &s, const SpMatrix < T<sub>-</sub> > &A)
  template<class T_>
  Vect < T_- > operator* (const TrMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  TrMatrix < T_- > operator* (T_- a, const TrMatrix < T_- > &A)
      Operator * (Premultiplication of matrix by constant)
• template<class T_>
  ostream & operator << (ostream &s, const TrMatrix < T<sub>-</sub> > &A)
      Output matrix in output stream.

    real_t operator* (const vector < real_t > &x, const vector < real_t > &y)

      Operator * (Dot product of 2 vector instances)
```

# **Friends**

template<class TT\_>
 ostream & operator<< (ostream &s, const SpMatrix< TT\_> &A)

# 5.17.1 Detailed Description

Gathers vector and matrix related classes.

# 5.17.2 Typedef Documentation

#### VectorX

This type is the vector type in the Eigen library.

#### Remarks

: This type is available only if the Eigen library was installed in conjunction with OFELI

#### 5.17.3 Function Documentation

Vect
$$<$$
 T $_->$  operator $*$  ( const BMatrix $<$  T $_->$  &  $A$ , const Vect $<$  T $_->$  &  $b$  )

Operator \* (Multiply vector by matrix and return resulting vector.

#### **Parameters**

in	Α	BMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

Vect instance containing A\*b

# BMatrix $< T_- >$ operator\* ( $T_- a$ , const BMatrix $< T_- > & A$ )

Operator \* (Premultiplication of matrix by constant)

Returns

a\*A

# Vect< $T_- >$ operator\* ( const DMatrix< $T_- > \& A$ , const Vect< $T_- > \& b$ )

Operator \* (Multiply vector by matrix and return resulting vector.

#### Parameters

in	A	DMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

**Vect** instance containing A\*b

# Vect< T $_->$ operator\* ( const DSMatrix< T $_->$ & A, const Vect< T $_->$ & b )

Operator \* (Multiply vector by matrix and return resulting vector.

#### **Parameters**

in	A	DSMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

Vect instance containing A\*b

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> operator\* ( T<sub>-</sub> a, const LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & x )

Operator \* (Multiply matrix x by scalar a)

Returns

a\*x

LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> operator/ ( T<sub>-</sub> a, const LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & x )

Operator / (Divide matrix x by scalar a)

Returns

x/a

LocalMatrix<br/>< T\_, NR\_, NC\_ > operator+ ( const LocalMatrix<br/>< T\_, NR\_, NC\_ > & x, const LocalMatrix<br/>< T\_, NR\_, NC\_ > & y )

Operator + (Add matrix x to y)

Returns

x+y

LocalMatrix<br/>< T\_, NR\_, NC\_ > operator- ( const LocalMatrix<br/>< T\_, NR\_, NC\_ > & x, const LocalMatrix<br/>< T\_, NR\_, NC\_ > & y )

Operator – (Subtract matrix y from x)

Returns

х-у

Local Vect< T\_, N\_ > operator+ ( const Local Vect< T\_, N\_ > & x, const Local Vect< T\_, N\_ > & y )

Operator + (Add two vectors)

Returns

x+y

Local Vect< T\_, N\_ > operator- ( const Local Vect< T\_, N\_ > & x, const Local Vect< T\_, N\_ > & y )

Operator - (Subtract two vectors)

Returns

х-у

LocalVect< T $_-$ , N $_-$ > operator\* ( T $_-$  a, const LocalVect< T $_-$ , N $_-$ > & <math>x )

Operator \* (Premultiplication of vector by constant)

Returns

a\*x

LocalVect< T $_-$ , N $_-$ > operator/ ( T $_-$  a, const LocalVect< T $_-$ , N $_-$ > & x )

Operator / (Division of vector by constant)

Returns

x/a

double Dot ( const LocalVect< T\_, N\_ > & a, const LocalVect< T\_, N\_ > & b )

Calculate dot product of 2 vectors (instances of class LocalVect)

Returns

Dot product

PETScVect< T $_->$  operator\* ( const PETScMatrix< T $_->$  & A, const PETScVect< T $_->$  & x)

Multiply a matrix by a vector

# Parameters

in	Α	Matrix to multiply by (Instance of class PETScMatrix)
in	х	Vector to multiply by (Instance of class PETScVect)

#### Returns

Vector product y = Ax

# Vect< T $_->$ operator\* ( const SkMatrix< T $_->$ & A, const Vect< T $_->$ & b )

Operator \* (Multiply vector by matrix and return resulting vector.

#### **Parameters**

in	A	SkMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

**Vect** instance containing A\*b

# Vect< $T_- >$ operator\* ( const SkSMatrix< $T_- > \& A$ , const Vect< $T_- > \& b$ )

Operator \* (Multiply vector by matrix and return resulting vector.

#### **Parameters**

in	A	SkSMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

**Vect** instance containing A\*b

# Vect< $T_-$ > operator\* ( const SpMatrix< $T_-$ > & A, const Vect< $T_-$ > & b)

Operator \* (Multiply vector by matrix and return resulting vector.

#### Parameters

in	A	SpMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

**Vect** instance containing A\*b

# ostream & operator << ( ostream & s, const SpMatrix < T $_->$ & A )

Output matrix in output stream

Vect< 
$$T_-$$
 > operator\* ( const TrMatrix<  $T_-$  > &  $A$ , const Vect<  $T_-$  > &  $b$ )

Operator \* (Multiply vector by matrix and return resulting vector.

#### Parameters

in	A	TrMatrix instance to multiply by vector
in	b	Vect instance

#### Returns

**Vect** instance containing A\*b

 $TrMatrix < T_- > operator* ( T_- a, const TrMatrix < T_- > & A )$ 

Operator \* (Premultiplication of matrix by constant)

Returns

a\*A

real\_t operator\* ( const vector< real\_t > & x, const vector< real\_t > & y)

Operator \* (Dot product of 2 vector instances)

Returns

x.y

# **5.17.4** Friends

ostream & operator << ( ostream & s, const SpMatrix <  $TT_->$  & A ) [friend]

Output matrix in output stream

# Chapter 6

# Namespace Documentation

# 6.1 OFELI Namespace Reference

A namespace to group all library classes, functions, ...

#### Classes

class AbsEqua

Mother abstract class to describe equation.

• class Bar2DL2

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

class Beam3DL2

To build element equations for 3-D beam equations using 2-node lines.

• class BiotSavart

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

class BMatrix

To handle band matrices.

• class Brick

To store and treat a brick (parallelepiped) figure.

• class Circle

To store and treat a circular figure.

• class DC1DL2

 $Builds\ finite\ element\ arrays\ for\ thermal\ diffusion\ and\ convection\ in\ 1-D\ using\ 2-Node\ elements.$ 

• class DC2DT3

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

• class DC2DT6

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

• class DC3DAT3

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

• class DC3DT4

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

• class DMatrix

To handle dense matrices.

• class Domain

To store and treat finite element geometric information.

• class DSMatrix

To handle symmetric dense matrices.

• class EC2D1T3

Eddy current problems in 2-D domains using solenoidal approximation.

class Edge

To describe an edge.

class EdgeList

Class to construct a list of edges having some common properties.

class EigenProblemSolver

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, i.e. Find scalars l and non-null vectors v such that  $[K]\{v\} = l[M]\{v\}$  where [K] and [M] are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as Stiffness and Mass matrices respectively.

class Elas2DQ4

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.

• class Elas2DT3

 $\label{thm:condition} \textit{To build element equations for 2-D linearized elasticity using 3-node triangles.}$ 

class Elas3DH8

To build element equations for 3-D linearized elasticity using 8-node hexahedra.

• class Elas3DT4

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.

• class Element

To store and treat finite element geometric information.

class ElementList

Class to construct a list of elements having some common properties.

class Ellipse

To store and treat an ellipsoidal figure.

class Equa\_Electromagnetics

Abstract class for Electromagnetics Equation classes.

class Equa\_Fluid

Abstract class for Fluid Dynamics Equation classes.

class Equa\_Laplace

Abstract class for classes about the Laplace equation.

• class Equa\_Solid

Abstract class for Solid Mechanics Finite Element classes.

• class Equa\_Therm

Abstract class for Heat transfer Finite Element classes.

• class Equation

Abstract class for all equation classes.

• class Estimator

To calculate an a posteriori estimator of the solution.

class FastMarching2D

To run a Fast Marching Method on 2-D structured uniform grids.

• class FEShape

Parent class from which inherit all finite element shape classes.

• class Figure

To store and treat a figure (or shape) information.

• class FMM2D

class for the fast marching 2-D algorithm

• class FMM3D

class for the 3-D fast marching algorithm

• class FMMSolver

The Fast Marching Method solver.

class Funct

A simple class to parse real valued functions.

class Gauss

Calculate data for Gauss integration.

class Grid

To manipulate structured grids.

class HelmholtzBT3

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles.

• class Hexa8

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

• class ICPG1D

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D.

class ICPG2DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D.

• class ICPG3DT

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D.

class IOField

Enables working with files in the XML Format.

class IPF

To read project parameters from a file in IPF format.

• class Iter

Class to drive an iterative process.

• class Laplace1DL2

To build element equation for a 1-D elliptic equation using the 2-Node line element  $(P_1)$ .

class Laplace1DL3

To build element equation for the 1-D elliptic equation using the 3-Node line (P2).

class Laplace2DFVT

To build and solve the Laplace equation using a standard Finite Volume method.

• class Laplace2DMHRT0

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas  $RT_0$ ).

• class Laplace2DT3

To build element equation for the Laplace equation using the 2-D triangle element  $(P_1)$ .

• class LCL1D

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

class LCL2DT

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

• class LCL3DT

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

• class Line2

To describe a 2-Node planar line finite element.

• class Line2H

To describe a 2-Node Hermite planar line finite element.

• class Line3

To describe a 3-Node quadratic planar line finite element.

• class LinearSolver

Class to solve systems of linear equations by iterative methods.

class LocalMatrix

Handles small size matrices like element matrices, with a priori known size.

• class LocalVect

Handles small size vectors like element vectors.

· class Material

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

• class Matrix

Virtual class to handle matrices for all storage formats.

class Mesh

To store and manipulate finite element meshes.

class Muscl

Parent class for hyperbolic solvers with Muscl scheme.

• class Muscl1D

Class for 1-D hyperbolic solvers with Muscl scheme.

• class Muscl2DT

Class for 2-D hyperbolic solvers with Muscl scheme.

class Muscl3DT

Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra.

• class MyOpt

Abstract class to define by user specified optimization function.

class Node

To describe a node.

class NodeList

Class to construct a list of nodes having some common properties.

class NSP2DQ41

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using  $Q_1/P_0$  element and a penaly formulation for the incompressibility condition.

• class ODESolver

 ${\it To solve a system of ordinary differential equations.}$ 

class OptSolver

To solve an optimization problem with bound constraints.

class Partition

To partition a finite element mesh into balanced submeshes.

• class Penta6

Defines a 6-node pentahedral finite element using  $P_1$  interpolation in local coordinates (s.x, s.y) and  $Q_1$  isoparametric interpolation in local coordinates (s.x, s.z) and (s.y, s.z).

• class PETScMatrix

To handle matrices in sparse storage format using the Petsc library.

class PETScVect

To handle general purpose vectors using Petsc.

• class PETScWrapper

This class is a wrapper to be used when the library Petsc is installed and used with OFELI.

class PhaseChange

This class enables defining phase change laws for a given material.

class Point

Defines a point with arbitrary type coordinates.

• class Point2D

Defines a 2-D point with arbitrary type coordinates.

class Polygon

To store and treat a polygonal figure.

• class Prec

To set a preconditioner.

• class Prescription

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable

• class Quad4

Defines a 4-node quadrilateral finite element using  $Q_1$  isoparametric interpolation.

class Reconstruction

To perform various reconstruction operations.

class Rectangle

To store and treat a rectangular figure.

class Side

To store and treat finite element sides (edges in 2-D or faces in 3-D)

• class SideList

Class to construct a list of sides having some common properties.

class SkMatrix

To handle square matrices in skyline storage format.

• class SkSMatrix

To handle symmetric matrices in skyline storage format.

class Sphere

To store and treat a sphere.

• class SpMatrix

To handle matrices in sparse storage format.

• class SteklovPoincare2DBE

 $Solver\ of\ the\ Steklov\ Poincare\ problem\ in\ 2-D\ geometries\ using\ piecewie\ constant\ boundary\ elemen.$ 

• class Tabulation

To read and manipulate tabulated functions.

class Tetra4

Defines a three-dimensional 4-node tetrahedral finite element using  $P_1$  interpolation.

• class Timer

To handle elapsed time counting.

class TimeStepping

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form  $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}.$ 

• class TINS2DT3B

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

• class Triang3

Defines a 3-Node  $(P_1)$  triangle.

• class Triang6S

Defines a 6-Node straight triangular finite element using P2 interpolation.

• class Triangle

To store and treat a triangle.

class triangle

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

• class TrMatrix

To handle tridiagonal matrices.

• class UserData

Abstract class to define by user various problem data.

class Vect

To handle general purpose vectors.

# **Enumerations**

#### **Functions**

- ostream & operator << (ostream &s, const Muscl3DT &m)
  - Output mesh data as calculated in class Muscl3DT.
- T\_\*A()

Return element matrix.

• T\_\*b()

Return element right-hand side.

• T\_ \* Prev ()

Return element previous vector.

• ostream & operator << (ostream &s, const complex\_t &x)

Output a complex number.

• ostream & operator<< (ostream &s, const std::string &c)

Output a string.

• template<class T₋>

ostream & operator << (ostream &s, const vector <  $T_- >$  &v)

Output a vector instance.

• template<class T\_>

ostream & operator << (ostream &s, const std::pair < T\_-, T\_- > &a)

Output a pair instance.

void saveField (Vect< real\_t > &v, string output\_file, int opt)

Save a vector to an output file in a given file format.

void saveField (PETScVect< real\_t > &v, string output\_file, int opt)

Save a PETSc vector to an output file in a given file format.

- void saveField (PETScVect< real\_t > &v, const Mesh &mesh, string output\_file, int opt)

  Save a PETSc vector to an output file in a given file format.
- void saveField (Vect< real\_t > &v, const Grid &g, string output\_file, int opt)

Save a vector to an output file in a given file format, for a structured grid data.

• void saveGnuplot (string input\_file, string output\_file, string mesh\_file)

Save a vector to an input Gnuplot file.

• void saveTecplot (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output file to an input Tecplot file.

void saveVTK (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output VTK file.

void saveGmsh (string input\_file, string output\_file, string mesh\_file)

Save a vector to an output Gmsh file.

• ostream & operator << (ostream &s, const Tabulation &t)

Output Tabulated function data.

• template<class T\_, size\_t N\_, class E\_>

void element\_assembly (const E\_ &e, const LocalVect<  $T_-$ ,  $N_-$  > &be, Vect<  $T_-$  > &b)

Assemble local vector into global vector.

• template < class  $T_-$  , size\_t  $N_-$ , class  $E_- >$ 

 $void \ element\_assembly \ (const \ E\_ \ \&e, const \ Local Matrix < T\_, \ N\_, \ N_- > \&ae, \ Vect < T_- > \&b)$ 

Assemble diagonal local vector into global vector.

• template < class  $T_-$ , size\_t  $N_-$ , class  $E_-$  > void element\_assembly (const  $E_-$  &e, const LocalMatrix <  $T_-$ ,  $N_-$ ,  $N_-$  > &ae, Matrix <  $T_-$  > \*A)

Assemble local matrix into global matrix.

• template < class  $T_-$ , size\_t  $N_-$ , class  $E_-$  > void element\_assembly (const  $E_-$  &e, const LocalMatrix <  $T_-$ ,  $N_-$ ,  $N_-$  > &ae, SkMatrix <  $T_-$  > &A)

Assemble local matrix into global skyline matrix.

• template < class  $T_-$ , size t  $N_-$ , class  $E_-$  > void element assembly (const  $E_-$  &e, const LocalMatrix <  $T_-$ ,  $N_-$ ,  $N_-$  > &ae, SkSMatrix <  $T_-$  > &A)

Assemble local matrix into global symmetric skyline matrix.

• template < class  $T_-$ , size\_t  $N_-$ , class  $E_-$  > void element\_assembly (const  $E_-$  &e, const LocalMatrix <  $T_-$ ,  $N_-$ ,  $N_-$  > &ae, SpMatrix <  $T_-$  > &A)

Assemble local matrix into global sparse matrix.

• template < class T\_, size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SpMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SpMatrix).

• template < class T\_, size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SkSMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SkSMatrix).

• template < class T\_, size\_t N\_> void side\_assembly (const Element &e, const LocalMatrix < T\_, N\_, N\_ > &ae, SkMatrix < T\_ > &A)

Side assembly of local matrix into global matrix (as instance of class SkMatrix).

template < class T\_, size\_t N\_>
 void side\_assembly (const Element &e, const LocalVect < T\_, N\_ > &be, Vect < T\_ > &b)
 Side assembly of local vector into global vector.

template<class T<sub>−</sub>>

 $Vect < T_- > operator* (const BMatrix < T_- > &A, const Vect < T_- > &b)$ 

Operator \* (Multiply vector by matrix and return resulting vector.

```
• template<class T_>
  BMatrix< T_-> operator* (T_- a, const BMatrix< T_-> &A)
      Operator * (Premultiplication of matrix by constant)
• template<class T_>
  ostream & operator << (ostream &s, const BMatrix < T_-> &a)
      Output matrix in output stream.
• template<class T_>
  Vect < T_- > operator* (const DMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const DMatrix < T_> &a)
      Output matrix in output stream.

    template<class T₋>

  Vect < T_- > operator* (const DSMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
  ostream & operator << (ostream &s, const DSMatrix < T_> &a)
      Output matrix in output stream.
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T., NR., NC. > operator* (T. a, const LocalMatrix < T., NR., NC. > &x)
      Operator * (Multiply matrix x by scalar a)
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T., NR., NC. > operator / (T. a, const LocalMatrix < T., NR., NC. > &x)
      Operator / (Divide matrix x by scalar a)
• template<class T_, size_t NR_, size_t NC_>
  LocalMatrix < T., NR., NC. > operator+ (const LocalMatrix < T., NR., NC. > &x, const
  LocalMatrix< T_-, NR_-, NC_- > &y)
      Operator + (Add matrix x to y)
• template < class T_, size_t NR_, size_t NC_>
  LocalMatrix < T_, NR_, NC_ > operator- (const LocalMatrix < T_, NR_, NC_ > &x, const
  LocalMatrix< T_-, NR_-, NC_- > &y)
      Operator - (Subtract matrix y from x)
• template < class T_, size_t NR_, size_t NC_>
  ostream & operator << (ostream &s, const LocalMatrix < T_-, NR_-, NC_- > &a)
      Output vector in output stream.
• template < class T_, size_t N_>
  LocalVect< T_-, N_-> operator+ (const LocalVect< T_-, N_-> &x, const LocalVect< T_-, N_->
      Operator + (Add two vectors)

    template < class T_, size_t N_>

  LocalVect< T<sub>-</sub>, N<sub>-</sub> > operator- (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &x, const LocalVect< T<sub>-</sub>, N<sub>-</sub> >
  &y)
      Operator - (Subtract two vectors)
• template < class T_, size_t N_>
  LocalVect< T<sub>-</sub>, N<sub>-</sub>> operator* (T<sub>-</sub> a, const LocalVect< T<sub>-</sub>, N<sub>-</sub>> &x)
      Operator * (Premultiplication of vector by constant)
• template < class T_, size_t N_>
  LocalVect< T_-, N_- > operator / (T_- a, const LocalVect<math>< T_-, N_- > \&x)
      Operator / (Division of vector by constant)
```

```
• template < class T_, size_t N_>
  real_t Dot (const LocalVect< T_, N_> &a, const LocalVect< T_, N_> &b)
      Calculate dot product of 2 vectors (instances of class LocalVect)
• template < class T_, size_t N_>
  void Scale (T_- a, const LocalVect< T_-, N_- > &x, LocalVect< T_-, N_- > &y)
      Multiply vector x by constant a and store result in y.
• template < class T_-, size_t N_->
  void Scale (T_- a, LocalVect< T_-, N_- > \&x)
      Multiply vector x by constant a and store result in x.
• template<class T_, size_t N_>
  void Axpy (T_a, const LocalVect< T_a, N_a > &x, LocalVect< T_a, N_a > &y)
      Add a*x to vector y.
• template < class T_, size_t N_>
  void Copy (const LocalVect< T<sub>-</sub>, N<sub>-</sub>> &x, LocalVect< T<sub>-</sub>, N<sub>-</sub>> &y)
      Copy vector x into vector y.
• template < class T_-, size_t N_->
  ostream & operator << (ostream &s, const Local Vect < T<sub>-</sub>, N<sub>-</sub> > &v)
      Output vector in output stream.
• template<class T_>
  PETScVect< T_-> operator* (const PETScMatrix< T_-> &A, const PETScVect< T_-> &x)
• template<class T_>
  ostream & operator << (ostream &s, PETScMatrix < T_> &A)
      Output matrix in output stream.
• string itos (int i)
      Function to convert an integer to a string.

    string dtos (real_t d)

      Function to convert a real to a string.
• template<class T_>
  ostream & operator << (ostream &s, const PETScWrapper < T_> &w)
      Output Petsc Wrapper data in output stream.
• template<class T_>
  bool operator== (const Point< T_- > &a, const Point< T_- > &b)
      Operator ==
• template<class T_>
  Point< T_- > operator + (const Point < T_- > &a, const Point < T_- > &b)
      Operator +

    template < class T_>

  Point < T_- > operator + (const Point < T_- > &a, const T_- &x)
      Operator +
• template<class T_>
  Point< T_- > operator- (const Point< T_- > &a)
      Unary Operator -
  template<class T_>
  Point< T_- > operator- (const Point< T_- > &a, const Point< T_- > &b)
      Operator -
• template<class T_>
  Point < T_- > operator- (const Point < T_- > &a, const T_- &x)
      Operator -
```

```
• template<class T_>
  Point< T_- > operator* (const T_- &a, const Point<math>< T_- > &b)
      Operator *
• template<class T_>
  Point < T_- > operator* (const int &a, const Point < T_- > \&b)
      Operator *.

    template < class T<sub>−</sub> >

  Point< T_- > operator* (const Point < T_- > &b, const T_- &a)
• template<class T_>
  Point < T_- > operator* (const Point < T_- > &b, const int &a)
      Operator *
  template<class T_>
  T_- operator* (const Point< T_- > &a, const Point< T_- > &b)
      Operator *
 template<class T_>
  Point< T_- > operator / (const Point < T_- > &b, const T_- &a)
      Operator /
• Point < double > CrossProduct (const Point < double > &lp, const Point < double > &rp)
      Return Cross product of two vectors lp and rp
• bool areClose (const Point < double > &a, const Point < double > &b, double toler=OFE ←
  LI_TOLERANCE)
      Return true if both instances of class Point < double > are distant with less then toler
• double SqrDistance (const Point < double > &a, const Point < double > &b)
      Return squared euclidean distance between points a and b

    double Distance (const Point < double > &a, const Point < double > &b)

      Return euclidean distance between points a and b

    template<class T₋>

  std::ostream & operator<< (std::ostream &s, const Point< T_> &a)
      Output point coordinates.
  template<class T_>
  bool operator== (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator ==.
• template<class T_>
  Point2D< T_-> operator+ (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator +.
• template<class T_>
  Point2D< T_-> operator+ (const Point2D< T_-> &a, const T_- &x)
      Operator +.
• template<class T₋>
  Point2D< T_-> operator- (const Point2D< T_-> &a)
      Unary Operator -
• template<class T_>
  Point2D< T_-> operator- (const Point2D< T_-> &a, const Point2D< T_-> &b)
      Operator -
• template<class T_>
  Point2D< T_-> operator- (const Point2D< T_-> &a, const T_- &x)
      Operator -
```

```
    template<class T<sub>−</sub>>

  Point2D< T_-> operator* (const T_- &a, const Point2D< T_-> &b)
      Operator *.
• template<class T_>
  Point2D< T_-> operator* (const int &a, const Point2D< T_-> &b)

    template<class T₋>

  Point2D< T_-> operator* (const Point2D< T_-> &b, const T_- &a)
      Operator /
• template<class T_>
  Point2D< T_-> operator* (const Point2D< T_-> &b, const int &a)
      Operator *

    template<class T_>

  T_- operator* (const Point2D< T_- > &b, const Point2D< T_- > &a)

    template < class T<sub>−</sub> >

  Point2D< T_-> operator/ (const Point2D< T_-> &b, const T_- &a)

    bool areClose (const Point2D < real_t > &a, const Point2D < real_t > &b, real_t toler=OFE ←

  LI_TOLERANCE)
      Return true if both instances of class Point2D<real_t> are distant with less then toler [Default: OFEL←
      I\_EPSMCH].
• real_t SqrDistance (const Point2D< real_t > &a, const Point2D< real_t > &b)
      Return squared euclidean distance between points a and b

    real_t Distance (const Point2D< real_t > &a, const Point2D< real_t > &b)

      Return euclidean distance between points a and b

    template<class T<sub>−</sub>>

  std::ostream & operator<< (std::ostream &s, const Point2D< T_> &a)
      Output point coordinates.

    template<class T_>

  Vect < T_- > operator* (const SkMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const SkMatrix < T<sub>-</sub> > &a)
      Output matrix in output stream.
• template<class T_>
  Vect < T_- > operator* (const SkSMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T_>
  ostream & operator << (ostream &s, const SkSMatrix < T_> &a)
      Output matrix in output stream.
  template < class T_>
  Vect < T_- > operator* (const SpMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
• template<class T<sub>-</sub>>
  ostream & operator << (ostream &s, const SpMatrix < T_> &A)
  template<class T_>
  Vect < T_- > operator* (const TrMatrix < T_- > &A, const Vect < T_- > &b)
      Operator * (Multiply vector by matrix and return resulting vector.
```

```
    template<class T_>

        TrMatrix< T_> operator* (T_ a, const TrMatrix< T_> &A)
```

*Operator* \* (*Premultiplication of matrix by constant*)

template<class T\_>

ostream & operator << (ostream &s, const TrMatrix < T\_ > &A)

Output matrix in output stream.

ostream & operator<< (ostream &s, const Edge &ed)</li>

Output edge data.

• ostream & operator<< (ostream &s, const Element &el)

Output element data.

• Figure operator&& (const Figure &f1, const Figure &f2)

Function to define a Figure instance as the intersection of two Figure instances.

• Figure operator- (const Figure &f1, const Figure &f2)

Function to define a Figure instance as the set subtraction of two Figure instances.

void getMesh (string file, ExternalFileFormat form, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in an external file format.

• void getBamg (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Bamg format.

• void getEasymesh (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Easymesh format.

void getGambit (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Gambit neutral format.

void getGmsh (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Gmsh format.

void getMatlab (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a Matlab mesh data.

void getNetgen (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Netgen format.

void getTetgen (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Tetgen format.

• void getTriangle (string file, Mesh &mesh, size\_t nb\_dof=1)

Construct an instance of class Mesh from a mesh file stored in Triangle format.

ostream & operator<< (ostream &s, const Grid &g)</li>

Output grid data.

• ostream & operator<< (ostream &s, const Material &m)

Output material data.

ostream & operator<< (ostream &s, const Mesh &ms)</li>

Output mesh data.

• ostream & operator<< (ostream &s, const NodeList &nl)

Output NodeList instance.

ostream & operator<< (ostream &s, const ElementList &el)</li>

Output ElementList instance.

ostream & operator<< (ostream &s, const SideList &sl)</li>

Output SideList instance.

• ostream & operator<< (ostream &s, const EdgeList &el)

Output EdgeList instance.

• size\_t Label (const Node &nd)

Return label of a given node.

• size\_t Label (const Element &el)

Return label of a given element.

• size\_t Label (const Side &sd)

Return label of a given side.

• size\_t Label (const Edge &ed)

Return label of a given edge.

• size\_t NodeLabel (const Element &el, size\_t n)

Return global label of node local label in element.

• size\_t NodeLabel (const Side &sd, size\_t n)

Return global label of node local label in side.

• Point< real\_t > Coord (const Node &nd)

Return coordinates of a given node.

• int Code (const Node &nd, size\_t i=1)

Return code of a given (degree of freedom of) node.

• int Code (const Element &el)

Return code of a given element.

• int Code (const Side &sd, size\_t i=1)

Return code of a given (degree of freedom of) side.

• bool operator== (const Element &el1, const Element &el2)

Check equality between 2 elements.

• bool operator== (const Side &sd1, const Side &sd2)

Check equality between 2 sides.

void DeformMesh (Mesh &mesh, const Vect< real\_t > &u, real\_t a=1)

Calculate deformed mesh using a displacement field.

• void DeformMesh (Mesh &mesh, const PETScVect< real\_t > &u, real\_t a=1)

Calculate deformed mesh using a displacement field as instance of PETScVect.

void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real\_t > &u1, Vect< real\_t > &u2, size\_t nx, size\_t ny=0, size\_t dof=1)

Function to redefine a vector defined on a mesh to a new mesh.

void MeshToMesh (Mesh &m1, Mesh &m2, const Vect< real\_t > &u1, Vect< real\_t > &u2, const Point< real\_t > &xmin, const Point< real\_t > &xmax, size\_t nx, size\_t ny, size\_t nz, size\_t dof=1)

Function to redefine a vector defined on a mesh to a new mesh.

real\_t getMaxSize (const Mesh &m)

Return maximal size of element edges for given mesh.

real\_t getMinSize (const Mesh &m)

Return minimal size of element edges for given mesh.

real\_t getMinElementMeasure (const Mesh &m)

Return minimal measure (length, area or volume) of elements of given mesh.

real\_t getMinSideMeasure (const Mesh &m)

Return minimal measure (length or area) of sides of given mesh.

real\_t getMaxSideMeasure (const Mesh &m)

Return maximal measure (length or area) of sides of given mesh.

• real\_t getMeanElementMeasure (const Mesh &m)

Return average measure (length, area or volume) of elements of given mesh.

real\_t getMeanSideMeasure (const Mesh &m)

Return average measure (length or area) of sides of given mesh.

void setNodeCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all nodes satisfying a boolean expression using node coordinates.

void setBoundaryNodeCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all nodes on boundary that satisfy a boolean expression using node coordinates.

void setSideCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all sides satisfying a boolean expression using node coordinates.

void setBoundarySideCodes (Mesh &m, const string &exp, int code, size\_t dof=1)

Assign a given code to all sides on boundary that satisfy a boolean expression using node coordinates.

void setElementCodes (Mesh &m, const string &exp, int code)

Assign a given code to all elements satisfying a boolean expression using node coordinates.

• int NodeInElement (const Node \*nd, const Element \*el)

Say if a given node belongs to a given element.

• int NodeInSide (const Node \*nd, const Side \*sd)

Say if a given node belongs to a given side.

• int SideInElement (const Side \*sd, const Element \*el)

Say if a given side belongs to a given element.

ostream & operator<< (ostream &s, const Node &nd)</li>

Output node data.

void saveMesh (const string &file, const Mesh &mesh, ExternalFileFormat form)

This function saves mesh data a file for a given external format.

void saveGmsh (const string &gp\_file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Gmsh format.

• void saveGnuplot (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Gmsh format.

void saveMatlab (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Matlab format.

• void saveTecplot (const string &file, const Mesh &mesh)

This function outputs a Mesh instance in a file in Tecplot format.

This function outputs a Mesh instance in a file in VTK format.

• void saveVTK (const string &file, const Mesh &mesh)

void saveBamg (const string &file, Mesh &mesh)

This function outputs a Mesh instance in a file in Bamg format.

ostream & operator<< (ostream &s, const Side &sd)</li>

Output side data.

• ostream & operator << (ostream &s, const Estimator &r)

Output estimator vector in output stream.

• template<class T\_>

int BiCG (const SpMatrix  $< T_- > &A$ , int prec, const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ , int max\_it, real\_t toler, int verbose)

Biconjugate gradient solver function.

• template<class T\_>

int BiCGStab (const SpMatrix  $< T_- > &A$ , const Prec $< T_- > &P$ , const Vect $< T_- > &b$ , Vect< $T_- > &x$ , int max\_it, real\_t toler, int verbose)

Biconjugate gradient stabilized solver function.

template < class T\_>

int BiCGStab (const SpMatrix  $< T_- > &A$ , int prec, const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ , int max\_it, real\_t toler, int verbose)

Biconjugate gradient stabilized solver function.

void BSpline (size\_t n, size\_t t, Vect< Point< real\_t >> &control, Vect< Point< real\_t >> &output, size\_t num\_output)

Function to perform a B-spline interpolation.

• template<class T\_>

int CG (const SpMatrix< T $_->$  &A, const Prec< T $_->$  &P, const Vect< T $_->$  &b, Vect< T $_->$  &x, int max\_it, real\_t toler, int verbose)

Conjugate gradient solver function.

• template<class T\_>

int CG (const SpMatrix < T $_->$  &A, int prec, const Vect < T $_->$  &b, Vect < T $_->$  &x, int max\_it, real\_t toler, int verbose)

Conjugate gradient solver function.

template<class T₋>

int CGS (const SpMatrix $< T_- > &A$ , int prec, const Vect $< T_- > &b$ , Vect $< T_- > &x$ , int max\_it, real\_t toler, int verbose)

Conjugate Gradient Squared solver function.

• template<class T\_>

int GMRes (const SpMatrix< T $_-$  > &A, const Prec< T $_-$  > &P, const Vect< T $_-$  > &b, Vect< T $_-$  > &x, size $_+$ t m, int max $_+$ it, real $_+$ t toler, int verbose)

GMRes solver function.

• template<class T\_>

int GMRes (const SpMatrix< T $_-$  > &A, int prec, const Vect< T $_-$  > &b, Vect< T $_-$  > &x, size $_-$ t m, int max $_-$ it, real $_-$ t toler, int verbose)

GMRes solver function.

• template<class T\_>

int GS (const SpMatrix<  $T_->$  &A, const Vect<  $T_->$  &b, Vect<  $T_->$  &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Gauss-Seidel solver function.

• template<class T\_>

int Jacobi (const SpMatrix< T $_-$  > &A, const Vect< T $_-$  > &b, Vect< T $_-$  > &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Jacobi solver function.

• ostream & operator<< (ostream &s, const OptSolver &os)

Output differential system information.

• template<class  $T_-$ , class  $M_->$ 

int Richardson (const  $M_-$  &A, const Vect<  $T_-$  > &b, Vect<  $T_-$  > &x, real\_t omega, int max\_it, real\_t toler, int verbose)

Richardson solver function.

template<class T₋>

```
void Schur (SkMatrix< T_- > &A, SpMatrix< T_- > &U, SpMatrix< T_- > &L, SpMatrix< T_- > &D, Vect< T_- > &b, Vect< T_- > &c)
```

Solve a linear system of equations with a 2x2-block matrix.

• template<class T\_>

```
void Schur (PETScMatrix< T_- > &A, PETScMatrix< T_- > &U, PETScMatrix< T_- > &L, PETScMatrix< T_- > &D, PETScVect< T_- > &b, PETScVect< T_- > &c)
```

*Solve a linear system of equations with a 2x2-block matrix.* 

• template<class  $T_-$ , class  $M_->$ 

int SSOR (const  $M_-$  &A, const Vect<  $T_-$  > &b, Vect<  $T_-$  > &x, int max\_it, real\_t toler, int verbose)

SSOR solver function.

• ostream & operator << (ostream &s, const TimeStepping &ts)

```
Output differential system information.
• void banner (const string &prog=" ")
      Outputs a banner as header of any developed program.

    template<class T₋>

  void QuickSort (std::vector < T_- > &a, int begin, int end)
      Function to sort a vector.
• template<class T_>
  void qksort (std::vector< T_-> &a, int begin, int end)
      Function to sort a vector.

    template < class T_, class C_>

  void qksort (std::vector < T<sub>-</sub> > &a, int begin, int end, C<sub>-</sub> compare)
      Function to sort a vector according to a key function.
• int Sgn (real_t a)
      Return sign of a: - 1 or 1.

    real_t Abs2 (complex_t a)

      Return square of modulus of complex number a

    real_t Abs2 (real_t a)

      Return square of real number a
• real_t Abs (real_t a)
      Return absolute value of a
• real_t Abs (complex_t a)
      Return modulus of complex number a
• real_t Abs (const Point < real_t > &p)
      Return Norm of vector a

    real_t Conjg (real_t a)

      Return complex conjugate of real number a

    complex_t Conjg (complex_t a)

      Return complex conjugate of complex number a

    real_t Max (real_t a, real_t b, real_t c)

      Return maximum value of real numbers a, b and c
• int Max (int a, int b, int c)
      Return maximum value of integer numbers a, b and c
• real_t Min (real_t a, real_t b, real_t c)
      Return minimum value of real numbers a, b and c
• int Min (int a, int b, int c)
      Return minimum value of integer numbers a, b and c
• real_t Max (real_t a, real_t b, real_t c, real_t d)
      Return maximum value of integer numbers a, b, c and d
• int Max (int a, int b, int c, int d)
      Return maximum value of integer numbers a, b, c and d

    real_t Min (real_t a, real_t b, real_t c, real_t d)

      Return minimum value of real numbers a, b, c and d
• int Min (int a, int b, int c, int d)
      Return minimum value of integer numbers a, b, c and d

    real_t Arg (complex_t x)
```

Return argument of complex number x

```
    complex_t Log (complex_t x)

      Return principal determination of logarithm of complex number x

    template<class T₋>

  T_- Sqr (T_-x)
      Return square of value x
• template<class T_>
  void Scale (T_a, const vector < T_a > &x, vector < T_a > &y)
      Mutiply vector x by a and save result in vector y
• template<class T_>
  void Scale (T_- a, const Vect< T_- > &x, Vect< T_- > &y)
      Mutiply vector x by a and save result in vector y
• template<class T_>
  void Scale (T_- a, vector< T_- > &x)
      Mutiply vector x by a
• template<class T_>
  void Xpy (size_t n, T_-*x, T_-*y)
      Add array x to y
• template<class T_>
  void Xpy (const vector < T_- > &x, vector < T_- > &y)
      Add vector x to y
• template<class T_>
  void Axpy (size_t n, T_- a, T_-*x, T_-*y)
      Multiply array x by a and add result to y
• template<class T_>
  void Axpy (T_a, const vector < T_b > &x, vector < T_b > &y)
      Multiply vector x by a and add result to y
• template<class T_>
  void Axpy (T_a, const Vect< T_a > &x, Vect< T_a > &y)
      Multiply vector x by a and add result to y
• template<class T_>
  void Copy (size_t n, T_-*x, T_-*y)
      Copy array x to y n is the arrays size.
• real_t Error2 (const vector < real_t > &x, const vector < real_t > &y)
      Return absolute L2 error between vectors x and y
• real_t RError2 (const vector < real_t > &x, const vector < real_t > &y)
      Return absolute L^2 error between vectors x and y

    real_t ErrorMax (const vector < real_t > &x, const vector < real_t > &y)

      Return absolute Max. error between vectors x and y
• real_t RErrorMax (const vector < real_t > &x, const vector < real_t > &y)
      Return relative Max. error between vectors x and y

    template<class T₋>

  T_- Dot (size_t n, T_- *x, T_- *y)
      Return dot product of arrays x and y
• real_t Dot (const vector < real_t > &x, const vector < real_t > &y)
      Return dot product of vectors x and y.

    real_t operator* (const vector < real_t > &x, const vector < real_t > &y)

      Operator * (Dot product of 2 vector instances)

    real_t Dot (const Vect< real_t > &x, const Vect< real_t > &y)
```

Return dot product of vectors x and y

• template<class T\_>

```
T_- Dot (const Point < T_- > &x, const Point < T_- > &y)
```

Return dot product of x and y

template<class T₋>

```
void Assign (vector < T_- > &v, const T_- &a)
```

Assign the value a to all entries of a vector v

• template<class T\_>

```
void Clear (vector < T_- > \&v)
```

Assign 0 to all entries of a vector.

template<class T<sub>-</sub>>

```
void Clear (Vect< T_- > &v)
```

Assign 0 to all entries of a vector.

• real\_t Nrm2 (size\_t n, real\_t \*x)

Return 2-norm of array x

• real\_t Nrm2 (const vector< real\_t > &x)

Return 2-norm of vector x

• template<class T\_>

```
real_t Nrm2 (const Point< T_- > &a)
```

Return 2-norm of a

• bool Equal (real\_t x, real\_t y, real\_t toler=OFELI\_EPSMCH)

Function to return true if numbers x and y are close up to a given tolerance toler

• char itoc (int i)

Function to convert an integer to a character.

• std::string itos (size\_t i)

Function to convert an integer to a string.

• template<class T\_>

```
T<sub>-</sub> stringTo (const std::string &s)
```

Function to convert a string to a template type parameter.

• void RTrim (char \*s)

Function to remove blanks at the end of a string.

• void LTrim (char \*s)

Function to remove blanks at the beginning of a string.

void Trim (char \*s)

Function to remove blanks at the beginning and end of a string.

• template<class T\_>

```
void Swap (T_- &a, T_- &b)
```

Swap elements a and b.

#### **Variables**

• Node \* theNode

A pointer to Node.

• Element \* theElement

A pointer to Element.

• Side \* theSide

A pointer to Side.

• Edge \* theEdge

A pointer to Edge.

• int theStep

Time step counter.

• int theIteration

Iteration counter.

• int NbTimeSteps

Number of time steps.

int MaxNbIterations

Maximal number of iterations.

• int Verbosity

Parameter for verbosity of message outputting.

• real\_t theTimeStep

Time step label.

• real\_t theTime

Time value.

• real\_t theFinalTime

Final time value.

• real\_t theTolerance

Tolerance value for convergence.

• real\_t theDiscrepancy

Value of discrepancy for an iterative procedure Its default value is 1.0.

• bool Converged

Boolean variable to say if an iterative procedure has converged.

• bool InitPetsc

# 6.1.1 Detailed Description

A namespace to group all library classes, functions, ...

Namespace OFELI groups all OFELI library classes, functions and global variables.

# Chapter 7

# **Class Documentation**

# 7.1 AbsEqua< T $_->$ Class Template Reference

Mother abstract class to describe equation. Inheritance diagram for AbsEqua< T $_->$ :



#### **Public Member Functions**

• AbsEqua ()

Default constructor.

AbsEqua (Mesh &mesh)

Constructor with mesh instance.

virtual ~AbsEqua ()

Destructor.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix  $< T_- > *A$ , Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Solve the linear system.

# 7.1.1 Detailed Description

template < class  $T_->$  class OFELI:: Abs Equa  $< T_->$ 

Mother abstract class to describe equation.

# CHAPTER 7. CLASS DOCUMENTATION ABSEQUA $< T_- >$ CLASS TEMPLATE REFERENCE

# **Template Parameters**

< <i>T</i> ←	Data type (real_t, float, complex <real_t>,)</real_t>
_>	

# 7.1.2 Member Function Documentation

# Mesh& getMesh ( ) const

Return reference to Mesh instance.

Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ )

Choose solver for the linear system.

#### Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER  • DIRECT_SOLVER, Use a facorization solver [default]  • CG_SOLVER, Conjugate Gradient iterative solver  • CGS_SOLVER, Squared Conjugate Gradient iterative solver  • BICG_SOLVER, BiConjugate Gradient iterative solver  • BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver  • GMRES_SOLVER, GMRES iterative solver  • QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:  • IDENT_PREC, Identity preconditioner (no preconditioning [default])  • DIAG_PREC, Diagonal preconditioner  • ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< $T_- > *A$ , Vect< $T_- > \&b$ , Vect< $T_- > \&x$ )

Solve the linear system.

#### Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
----	---	--


#### **Parameters**

in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.2 Bar2DL2 Class Reference

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

Inheritance diagram for Bar2DL2:

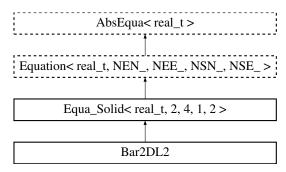

#### **Public Member Functions**

• Bar2DL2 ()

Default Constructor.

• Bar2DL2 (Element \*el, real\_t section)

Constructor using element data.

• ~Bar2DL2 ()

Destructor.

• void Mass (real\_t coef=1.)

Add element consistent mass contribution to matrix and right-hand side after multiplication by coef

• void LMass (real\_t coef=1.)

Add element lumped mass contribution to matrix ans right-hand side after multiplication by coef

• void LMassToLHS (real\_t coef=1)

Add lumped mass matrix to left-hand side after multiplying it by coefficient coef

• void LMassToRHS (real\_t coef=1)

Add lumped mass contribution to right-hand side after multiplying it by coefficient coef

• void MassToLHS (real\_t coef=1)

Add consistent mass matrix to left-hand side after multiplying it by coefficient coef

• void MassToRHS (real\_t coef=1)

Add consistent mass contribution to right-hand side after multiplying it by coefficient coef

• void Stiffness (real\_t coef=1.)

Add element stiffness to left hand side.

void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right hand side.

• real\_t Stress () const

Return stresses in bar.

void getStresses (const Vect< real\_t > &u, Vect< real\_t > &s)

Return stresses in the truss structure (elementwise)

• int runOneTimeStep ()

Run one time step.

• int run ()

Solve the equation.

• void build ()

Build the linear system of equations.

void buildEigen (SkSMatrix< real\_t > &K, SkSMatrix< real\_t > &M)

Build global stiffness and mass matrices for the eigen system.

• void buildEigen (SkSMatrix< real\_t > &K, Vect< real\_t > &M)

Build global stiffness and mass matrices for the eigen system.

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

• void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Deviator (real\_t coef=1)

Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void Dilatation (real\_t coef=1)

Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

virtual void DilatationToRHS (real\_t coef=1)

Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void DeviatorToRHS (real\_t coef=1)

Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

• void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void updateBC (const Element &el, const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

  Localize Element Vector.
- void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix< real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

# **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.2.1 Detailed Description

To build element equations for Planar Elastic Bar element with 2 DOF (Degrees of Freedom) per node.

This class implements a planar (two-dimensional) elastic bar using 2-node lines. Note that members calculating element arrays have as an argument a real coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.2.2 Constructor & Destructor Documentation

# Bar2DL2()

Default Constructor.

Constructs an empty equation.

# Bar2DL2 ( Element \* el, real\_t section )

Constructor using element data.

## **Parameters**

in	el	Pointer to Element
in	section	Section of bar at present element

# 7.2.3 Member Function Documentation

void Mass ( real\_t coef = 1. ) [virtual]

Add element consistent mass contribution to matrix and right-hand side after multiplication by coef

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void LMass ( real\_t coef = 1. ) [virtual]

Add element lumped mass contribution to matrix ans right-hand side after multiplication by coef

#### **Parameters**

	in	coef	Coefficient to multiply by added term [Default: 1].	
--	----	------	---	--

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void LMassToLHS ( real\_t coef = 1 ) [virtual]

Add lumped mass matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

	in	coef	Coefficient to multiply by added term [Default: 1].
--	----	------	---

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void LMassToRHS ( real\_t coef = 1 ) [virtual]

Add lumped mass contribution to right-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void MassToLHS ( real\_t coef = 1 ) [virtual]

Add consistent mass matrix to left-hand side after multiplying it by coefficient coef

## **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void MassToRHS ( real\_t coef = 1 ) [virtual]

Add consistent mass contribution to right-hand side after multiplying it by coefficient coef

in   coef   Coefficient to multiply by added term [Default	1].
--	-----

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void Stiffness ( real\_t coef = 1. ) [virtual]

Add element stiffness to left hand side.

## **Parameters**

in	coef	Coefficient to multuply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 2, 4, 1, 2 >.

# void BodyRHS ( UserData< real\_t > & ud )

Add body right-hand side term to right hand side.

## **Parameters**

in	ud	instance containing user data with prescribes loads
----	----	---

# void getStresses ( const Vect< real\_t > & u, Vect< real\_t > & s)

Return stresses in the truss structure (elementwise)

# Parameters

in	и	Vect instance containing displacements at nodes
in	S	Vect instance containing axial stresses in elements

# int runOneTimeStep ( )

Run one time step.

This function performs one time step in equation solving. It is to be used only if a TRANSIENT analysis is required.

## Returns

Return error from the linear system solver

# int run ( )

Solve the equation.

If the analysis (see function **setAnalysis**) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

## void build ( )

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent mass matrix
- The choice of desired linear system solver

# void buildEigen ( SkSMatrix< real\_t > & K, SkSMatrix< real\_t > & M)

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is consistent

## **Parameters**

in	K	Stiffness matrix
in	M	Consistent mass matrix

# void buildEigen ( SkSMatrix< real\_t > & K, Vect< real\_t > & M )

Build global stiffness and mass matrices for the eigen system.

Case where the mass matrix is lumped

# Parameters

in	K	Stiffness matrix
in	M	Vector containing diagonal mass matrix

# void updateBC ( const Element & el, const Vect< real.t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by  $\_\texttt{theElement}$ 

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# void LocalNodeVector ( Vect< real\_t> & b ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	n b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	out be Local vector, the length of which is the total number of element equation	
in dof Degree of freedom to transfer to the local vector		Degree of freedom to transfer to the local vector

# Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_- > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

# void SideVector ( const Vect< real $_t > \& b$ ) [inherited]

Localize Side Vector.

# Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

# Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_\mathtt{theSide}$ 

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

# Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Element pointer \_theElement

# void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix $< real_t > & A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScVect< real $_{-}$ t > & b ) [inherited]

Assemble element right-hand side vector into global one.

# **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( BMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $SkSMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

## **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

 $void\ ElementAssembly\ (\ SkMatrix < real\_t > \&\ A\ )\ [inherited]$ 

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance

## Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SpMatrix < real\_t > \&\ A \ ) \ \ [inherited]}$ 

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

in	A	Global matrix stored as an TrMatrix instance	
----	---	--	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

# Parameters

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

# Warning

The element pointer is given by the global variable the Element

# ${f void\ Side Assembly\ (\ PETScMatrix < real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble side matrix into global one.

## Parameters

$\boldsymbol{A}$	Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# ${\bf void\ Side Assembly\ (\ Matrix {<}\ real\_t > *A\ )} \quad \hbox{\tt [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SkMatrix{<}\, real\_t>\&\, A\ )}\quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

# Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix < real_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

$\boldsymbol{A}$	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

## Warning

The element pointer is given by the global variable the Element

# ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\ real\_t>\&\ A\ )\ \ [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A	Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SpMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

iı	A	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

# Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

# Parameters

in	sd	Reference to Side instance
in	х	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

## Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

# Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

ted values:	
Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
lver	
terative solver	
GMRES_SOLVER, GMRES iterative solver	
ect solver was chosen for oose among the	
ning [default])	
h	

int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.2.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.3 Beam3DL2 Class Reference

To build element equations for 3-D beam equations using 2-node lines. Inheritance diagram for Beam3DL2:

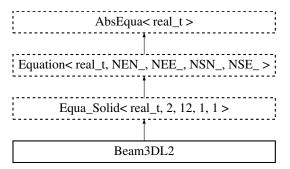

# **Public Member Functions**

• Beam3DL2 ()

Default Constructor.

• Beam3DL2 (Element \*el, real\_t A, real\_t I1, real\_t I2)

Constructor using element data.

• Beam3DL2 (Element \*el, real\_t A, real\_t I1, real\_t I2, const Vect< real\_t > &u, const real\_t &time=0)

Constructor for dynamic problems.

• Beam3DL2 (Mesh &ms, const Vect< real\_t > &u, Vect< real\_t > &d)

Constructor to determine displacements.

• ~Beam3DL2 ()

Destructor.

• void LMassToLHS (real\_t coef=1.)

Add element lumped Mass contribution to matrix after multiplication by coef

• void LMassToRHS (real\_t coef=1.)

Add element lumped Mass contribution to RHS after multiplication by coef

• void MassToLHS (real\_t coef=1.)

Add element consistent Mass contribution to matrix after multiplication by coef (not implemented)

• void MassToRHS (real\_t coef=1.)

Add element consistent Mass contribution to RHS after multiplication by coef (not implemented)

• void Stiffness (real\_t coef=1.)

Add element stiffness to left hand side.

void Load (const Vect< real\_t > &f)

Add contributions for loads.

• void setBending ()

Set bending contribution to stiffness.

• void setAxial ()

Set axial contribution to stiffness.

• void setShear ()

Set shear contribution to stiffness.

• void setTorsion ()

Set torsion contribution to stiffness.

• void setNoBending ()

Set no bending contribution.

• void setNoAxial ()

Set no axial contribution.

• void setNoShear ()

Set no shear contribution.

• void setNoTorsion ()

Set no torsion contribution.

void setReducedIntegration ()

Set reduced integration.

• real\_t AxialForce () const

Return axial force in element.

• Point< real\_t > ShearForce () const

Return shear force in element.

• Point< real\_t > BendingMoment () const

Return bending moment in element.

• real\_t TwistingMoment () const

Return twisting moment in element.

void buildEigen (SkSMatrix< real\_t > &K, Vect< real\_t > &M)

Build global stiffness and mass matrices for the eigen system.

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

• void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Mass (real\_t coef=1)

Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].

• virtual void LMass (real\_t coef=1)

Add lumped mass matrix to left-hand side after multiplication by coef [Default: 1].

virtual void Deviator (real\_t coef=1)

Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void Dilatation (real\_t coef=1)

Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void DilatationToRHS (real\_t coef=1)

Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void DeviatorToRHS (real\_t coef=1)

Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

• void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

# **Public Attributes**

LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.3.1 Detailed Description

To build element equations for 3-D beam equations using 2-node lines.

This class enables building finite element arrays for 3-D beam elements using 6 degrees of freedom per node and 2-Node line elements.

# 7.3.2 Constructor & Destructor Documentation

# Beam3DL2 ( Element \* el, real\_t A, real\_t I1, real\_t I2 )

Constructor using element data.

#### **Parameters**

in	el	Pointer to Element
in	A	Section area of the beam
in	I1	first (x) momentum of inertia
in	I2	second (y) momentum of inertia

# Beam3DL2 ( Element \* el, real\_t A, real\_t I1, real\_t I2, const Vect< real\_t > & u, const real\_t & time = 0 )

Constructor for dynamic problems.

## **Parameters**

in	el	Pointer to Element
in	Α	Section area of the beam
in	I1	first (x) momentum of inertia
in	I2	second (y) momentum of inertia
in	и	Vector containing previous solution (at previous time step)
in	time	Current time value

# Beam3DL2 ( Mesh & ms, const Vect< real\_t > & u, Vect< real\_t > & d )

Constructor to determine displacements.

The unknowns consist in planar and rotational degrees of freedom. This member function construct a 3-D node vector that gives the displacement vector at each node.

in	ms	Mesh instance
in	и	Vector containing the solution vector

out	d	Vector containing three components for each node that are x, y and z
		displacements.

# 7.3.3 Member Function Documentation

# void buildEigen ( SkSMatrix< real\_t > & K, Vect< real\_t > & M)

Build global stiffness and mass matrices for the eigen system. Case where the mass matrix is lumped

#### **Parameters**

in	K	Stiffness matrix
in	M	Vector containing diagonal mass matrix

# void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# ${f void\ updateBC\ (\ const\ Vect < real\_t > \&\ bc}$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# Parameters

in	bc	Vector that contains imposed values at all DOFs

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	in b Global vector to be localized.	
ou	; be	Local vector, the length of which is the total number of element equations.

# Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

in	in b Global vector to be localized.	
out be Local vector, the length of which is the total number of element equat		Local vector, the length of which is the total number of element equations.
in dof Degree of freedom to transfer to the local vector		Degree of freedom to transfer to the local vector

# Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized	
in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		ELEMENT_FIELD, DOFs are supported by elements	
		SIDE_FIELD, DOFs are supported by sides	
in	flag	Option to set:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF number dof is handled in the system	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_{-}$ t> & b ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Side pointer \_theSide

# void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Element pointer \_theElement

# void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# $void\ ElementAssembly\ (\ PETScMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

## **Parameters**

A Reference to global matrix

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## **Parameters**

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# $void ElementAssembly (SkMatrix < real_t > \& A)$ [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( Vect< real\_t> & v ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < real\_t > \&\ A\ ) \ \ [{\tt inherited}]}$

Assemble side matrix into global one.

## **Parameters**

A Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

# **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SpMatrix< real $_{-}t>\&A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

# Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

# Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	Α	Global matrix stored as an SpMatrix instance	]
----	---	--	---

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

# Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		<ul> <li>IDENT_PREC, Identity preconditioner (no preconditioning [default])</li> </ul>
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

# Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)	
in	b	Vector containing right-hand side	
in,out	х	Vector containing initial guess of solution on input, actual solution on output	

# 7.3.4 Member Data Documentation

 $LocalVect < real\_t \; , NEE\_> ePrev \quad \texttt{[inherited]}$ 

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.4 BiotSavart Class Reference

Class to compute the magnetic induction from the current density using the Biot-Savart formula.

# **Public Member Functions**

• BiotSavart ()

Default constructor.

• BiotSavart (Mesh &ms)

Constructor using mesh data.

• BiotSavart (Mesh &ms, const Vect< real\_t > &J, Vect< real\_t > &B, int code=0)

Constructor using mesh and vector of real current density.

BiotSavart (Mesh &ms, const Vect < complex\_t > &J, Vect < complex\_t > &B, int code=0)

Constructor using mesh and vector of complex current density.

• ∼BiotSavart ()

Destructor.

• void setCurrentDensity (const Vect< real\_t > &J)

Set (real) current density given at elements.

void setCurrentDensity (const Vect< complex\_t > &J)

Set (real) current density given at elements.

void setMagneticInduction (Vect< real\_t > &B)

Transmit (real) magnetic induction vector given at nodes.

void setMagneticInduction (Vect< complex\_t > &B)

Transmit (complex) magnetic induction vector given at nodes.

• void selectCode (int code)

Choose code of faces or edges at which current density is given.

• void setPermeability (real\_t mu)

Set the magnetic permeability coefficient.

void setBoundary ()

Choose to compute the magnetic induction at boundary nodes only.

• Point < real\_t > getB3 (Point < real\_t > x)

Compute the real magnetic induction at a given point using the volume Biot-Savart formula.

• Point< real\_t > getB2 (Point< real\_t > x)

Compute the real magnetic induction at a given point using the surface Biot-Savart formula.

• Point< real\_t > getB1 (Point< real\_t > x)

Compute the real magnetic induction at a given point using the line Biot-Savart formula.

• Point< complex\_t > getBC3 (Point< real\_t > x)

Compute the complex magnetic induction at a given point using the volume Biot-Savart formula.

• Point< complex\_t > getBC2 (Point< real\_t > x)

Compute the complex magnetic induction at a given point using the surface Biot-Savart formula.

• Point< complex\_t > getBC1 (Point< real\_t > x)

Compute the complex magnetic induction at a given point using the line Biot-Savart formula.

• int run ()

Run the calculation by the Biot-Savart formula.

# 7.4.1 Detailed Description

Class to compute the magnetic induction from the current density using the Biot-Savart formula. Given a current density vector given at elements, a collection of sides of edges (piecewise constant), this class enables computing the magnetic induction vector (continuous and piecewise linear) using the Ampere equation. This magnetic induction is obtained by using the Biot-Savart formula which can be either a volume, surface or line formula depending on the nature of the current density vector.

## 7.4.2 Constructor & Destructor Documentation

# BiotSavart ( Mesh & ms )

Constructor using mesh data.

# Parameters

in	ms	Mesh instance
----	----	---------------

# BiotSavart ( Mesh & ms, const Vect < real\_t > & J, Vect < real\_t > & B, int code = 0 )

Constructor using mesh and vector of real current density.

The current density is assumed piecewise constant

#### **Parameters**

in	ms	Mesh instance	
in	J	Sidewise vector of current density (J is a real valued vector), in the case of a surface supported current	
in	В	Nodewise vector that contains, once the member function run is used, the magnetic induction	
in	code	Only sides with given <i>code</i> support current [Default: 0]	

# BiotSavart (Mesh & ms, const Vect < complex t > & J, Vect < complex t > & B, int code = 0)

Constructor using mesh and vector of complex current density.

The current density is assumed piecewise constant

in	ms	Mesh instance	
in	J	Sidewise vector of current density (J is a complex valued vector), in the case of a surface supported current	
in	В	Nodewise vector that contains, once the member function run is used, the magnetic induction	
in	code	Only sides with given code support current [Default: 0]	

# 7.4.3 Member Function Documentation

# void setCurrentDensity ( const Vect< real\_t > & J )

Set (real) current density given at elements.

The current density is assumed piecewise constant and real valued. This function can be used in the case of the volume Biot-Savart formula.

#### **Parameters**

in	J	Current density vector (Vect instance) and real entries
----	---	---

# void setCurrentDensity ( const Vect< complex\_t > & J )

Set (real) current density given at elements.

The current density is assumed piecewise constant and complex valued. This function can be used in the case of the volume Biot-Savart formula.

#### **Parameters**

in	J	Current density vector (Vect instance) of complex entries
----	---	---

# void setMagneticInduction ( Vect< real\_t > & B )

Transmit (real) magnetic induction vector given at nodes.

#### **Parameters**

out	В	Magnetic induction vector (Vect instance) and real entries
-----	---	--

# void setMagneticInduction ( Vect< complex\_t > & B )

Transmit (complex) magnetic induction vector given at nodes.

#### Parameters

out	В	Magnetic induction vector (Vect instance) and complex entries
-----	---	---

# void setPermeability ( real\_t mu )

Set the magnetic permeability coefficient.

ı			
	in	ти	Magnetic permeability

# void setBoundary ( )

Choose to compute the magnetic induction at boundary nodes only.

By default the magnetic induction is computed (using the function run) at all mesh nodes

#### Note

This function has no effect for surface of line Biot-Savart formula

# Point<real $_t>$ getB3 ( Point< real $_t>$ x )

Compute the real magnetic induction at a given point using the volume Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

## **Parameters**

in	x	Coordinates of point at which the magnetic induction is computed	
----	---	--	--

#### Returns

Value of the magnetic induction at x

# Point<real\_t> getB2 ( Point< real\_t> x )

Compute the real magnetic induction at a given point using the surface Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

## **Parameters**

in	x	Coordinates of point at which the magnetic induction is computed
----	---	--

## Returns

Value of the magnetic induction at x

# Point<real $_t>$ getB1 ( Point< real $_t>$ x )

Compute the real magnetic induction at a given point using the line Biot-Savart formula.

This function computes a real valued magnetic induction for a real valued current density field

## **Parameters**

in	x	Coordinates of point at which the magnetic induction is computed
----	---	--

# Returns

Value of the magnetic induction at x

## Point<complex $_t>$ getBC3 ( Point< real $_t>x$ )

Compute the complex magnetic induction at a given point using the volume Biot-Savart formula. This function computes a complex valued magnetic induction for a complex valued current density field

#### **Parameters**

in	х	Coordinates of point at which the magnetic induction is computed
----	---	--

#### Returns

Value of the magnetic induction at x

## Point<complex $_t>$ getBC2 ( Point< real $_t>x$ )

Compute the complex magnetic induction at a given point using the surface Biot-Savart formula. This function computes a complex valued magnetic induction for a complex valued current density field

#### **Parameters**

in	x	Coordinates of point at which the magnetic induction is computed
----	---	--

#### Returns

Value of the magnetic induction at x

## Point<complex $_t>$ getBC1 ( Point< real $_t>x$ )

Compute the complex magnetic induction at a given point using the line Biot-Savart formula.

This function computes a complex valued magnetic induction for a complex valued current density field

## **Parameters**

in	x	Coordinates of point at which the magnetic induction is computed
----	---	--

#### Returns

Value of the magnetic induction at x

## int run ( )


Run the calculation by the Biot-Savart formula.

This function computes the magnetic induction, which is stored in the vector B given in the constructor

# 7.5 BMatrix< T\_> Class Template Reference

To handle band matrices.

Inheritance diagram for BMatrix< T $_->$ :

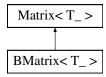

## **Public Member Functions**

• BMatrix ()

Default constructor.

• BMatrix (size\_t size, int ld, int ud)

Constructor that for a band matrix with given size and bandwidth.

• BMatrix (const BMatrix &m)

Copy Constructor.

• ∼BMatrix ()

Destructor.

void setSize (size\_t size, int ld, int ud)

Set size (number of rows) and storage of matrix.

void MultAdd (const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &y) const

Multiply matrix by vector x and add result to y

• void MultAdd (T\_a, const Vect< T\_> &x, Vect< T\_> &y) const

Multiply matrix by vector **a**\***x** and add result to **y** 

• void Mult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply matrix by vector x and save result in y

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and save result in y

• void Axpy (T<sub>-</sub> a, const BMatrix < T<sub>-</sub> > &x)

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix < T<sub>-</sub> > \*x)

*Add to matrix the product of a matrix by a scalar.* 

void set (size\_t i, size\_t j, const T\_ &val)

Add constant val to an entry (i, j) of the matrix.

void add (size\_t i, size\_t j, const T\_ &val)

Add constant val value to an entry (i, j) of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)

Operator () (Non constant version).

• BMatrix< T<sub>-</sub> > & operator= (const BMatrix< T<sub>-</sub> > &m)

Operator =.

• BMatrix< T\_> & operator= (const T\_ &x)

 $Operator = Assign \ matrix \ to \ identity \ times \ x.$ 

BMatrix< T<sub>-</sub> > & operator\*= (const T<sub>-</sub> &x)

```
Operator *=.
```

• BMatrix $< T_- > & operator += (const T_- & x)$ 

*Operator* +=.

• int setLU ()

Factorize the matrix (LU factorization)

• int solve (Vect< T\_> &b)

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• T<sub>-</sub> \* get () const

Return C-Array.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

size\_t getNbRows () const

Return number of rows.

• size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

• void setDiagonal ()

Set the matrix as diagonal.

• void setDiagonal (Mesh &mesh)

*Initialize matrix storage in the case where only diagonal terms are stored.* 

• T\_getDiag (size\_t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

• void Assembly (const Element &el, T\_\*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix< T\_> &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix< T<sub>-</sub> > &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect<  $T_->$  &b, const Vect<  $T_->$  &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect $< T_- > \&b$ , const Vect $< T_- > \&u$ , int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T<sub>-</sub> > &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T<sub>-</sub> > &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect<  $T_->$  &b, Vect<  $T_->$  &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• T\_operator[] (size\_t k) const

Operator [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

*Operator* +=.

• Matrix & operator= (const Matrix < T\_ > &m)

*Operator* -=.

• Matrix & operator-= (const T<sub>-</sub> &x)

Operator -=.

## 7.5.1 Detailed Description

```
template<class T_> class OFELI::BMatrix< T_>
```

To handle band matrices.

This class enables storing and manipulating band matrices. The matrix can have different numbers of lower and upper co-diagonals

**Template Parameters** 

$T \leftarrow$	Data type (double, float, complex <double>,)</double>
_~	

## 7.5.2 Member Function Documentation

## void setDiagonal ( Mesh & mesh ) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored. This member function is to be used for explicit time integration schemes

## T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

## void Assembly (const Element & el, $T_- * a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### Parameters

in	el	Pointer to element instance
in	а	Element matrix as a C-array

## void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

## void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

#### **Parameters**

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

## void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance
----	----	--------------------------

## 7.5. BMATRIX< T\_> CLASS TEMPLATE REFERENCEIAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

in	а	Side matrix as a DMatrix instance
----	---	-----------------------------------

## void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0 ) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## Parameters

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

## void Prescribe ( Vect< $T_-$ > & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty

parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

### void Prescribe ( size\_t dof, Vect< $T_- > & b$ , const Vect< $T_- > & u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).	
in,out	b	Vect instance that contains right-hand side.	
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

## void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

#### **Parameters**

in,out	b	Vect instance that contains right-hand side on input and solution on output
--------	---	---

## int FactorAndSolve ( const Vect< T $_->$ & b, Vect< T $_->$ & x ) [inherited]

Factorize matrix and solve the linear system.

## 7.5. BMATRIX< T\_> CLASS TEMPLATE REFERENCE APTER 7. CLASS DOCUMENTATION

This is available only if the storage class enables it.

#### **Parameters**

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

## int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

## T\_ operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

## T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

## Parameters

in	i	entry index

## T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

## T\_operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

#### Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator-= ( const Matrix $< T_- > \& m$  ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator=( const  $T_- & x )$  [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

## 7.6 Brick Class Reference

To store and treat a brick (parallelepiped) figure. Inheritance diagram for Brick:



### **Public Member Functions**

• Brick ()

Default constructor.

• Brick (const Point< real\_t > &bbm, const Point< real\_t > &bbM, int code=1)

Constructor.

void setBoundingBox (const Point< real\_t > &bbm, const Point< real\_t > &bbM)

Assign bounding box of the brick.

Point< real\_t > getBoundingBox1 () const

Return first point of bounding box (xmin,ymin,zmin)

• Point< real\_t > getBoundingBox2 () const

Return second point of bounding box (xmax,ymax,zmax)

• real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current brick.

• Brick & operator+= (Point< real\_t > a)

Operator +=.

• Brick & operator+= (real\_t a)

Operator \*=.

• void setCode (int code)

Choose a code for the domain defined by the figure.

void getSignedDistance (const Grid &g, Vect< real\_t > &d) const

Calculate signed distance to current figure with respect to grid points.

real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
 const

Compute signed distance from a line.

## 7.6.1 Detailed Description

To store and treat a brick (parallelepiped) figure.

## 7.6.2 Constructor & Destructor Documentation

Brick ( const Point< real\_t > & bbm, const Point< real\_t > & bbM, int code = 1 )

Constructor.

#### **Parameters**

in	bbm	first point (xmin,ymin,zmin)
in	bbM	second point (xmax,ymax,zmax)
in	code	Code to assign to rectangle

## 7.6.3 Member Function Documentation

void setBoundingBox ( const Point< real\_t > & bbm, const Point< real\_t > & bbM )

Assign bounding box of the brick.

#### **Parameters**

in	bbm	first point (xmin,ymin,zmin)
in	bbM	second point (xmax,ymax,zmax)

## real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current brick.

The computed distance is negative if p lies in the brick, negative if it is outside, and 0 on its boundary

#### **Parameters**

in	р	Point <double> instance</double>
----	---	----------------------------------

Reimplemented from Figure.

## Brick& operator+= ( Point< real\_t > a )

Operator +=.

Translate brick by a vector a

## Brick& operator+= $( real_t a )$

Operator \*=.

Scale brick by a factor a

## void getSignedDistance ( const Grid & g, Vect< real\_t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

#### **Parameters**

in	8	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

#### Remarks

Vector d doesn't need to be sized before invoking this function

# real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const [inherited]

Compute signed distance from a line.

#### **Parameters**

in	p	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line

#### Returns

Signed distance

# 7.7 Circle Class Reference

To store and treat a circular figure. Inheritance diagram for Circle:



## **Public Member Functions**

• Circle ()

Default construcor.

• Circle (const Point< real\_t > &c, real\_t r, int code=1)

Constructor.

• void setRadius (real\_t r)

Assign radius of circle.

• real\_t getRadius () const

Return radius of circle.

• void setCenter (const Point< real\_t > &c)

Assign coordinates of center of circle.

• Point< real\_t > getCenter () const

Return coordinates of center of circle.

real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current circle.

• Circle & operator+= (Point< real\_t > a)

Operator +=.

• Circle & operator+= (real\_t a)

Operator \*=.

• void setCode (int code)

Choose a code for the domain defined by the figure.

• void getSignedDistance (const Grid &g, Vect< real\_t > &d) const

Calculate signed distance to current figure with respect to grid points.

real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
 const

Compute signed distance from a line.

## 7.7.1 Detailed Description

To store and treat a circular figure.

#### 7.7.2 Constructor & Destructor Documentation

Circle ( const Point< real\_t > &  $c_r$  real\_t  $r_r$  int code = 1 )

Constructor.

#### **Parameters**

in	С	Coordinates of center of circle	
in	r	Radius	
in	code	Code to assign to the generated domain [Default: 1]	

## 7.7.3 Member Function Documentation

real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current circle.

The computed distance is negative if p lies in the disk, positive if it is outside, and 0 on the circle

### **Parameters**

in	р	Point <double> instance</double>
----	---	----------------------------------

Reimplemented from Figure.

Circle& operator+= ( Point< real\_t > a )

Operator +=.

Translate circle by a vector a

Circle& operator+= ( real\_t a )

Operator \*=.

Scale circle by a factor a

void getSignedDistance ( const Grid & g, Vect< real\_t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

## Parameters

in	8	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

## Remarks

Vector d doesn't need to be sized before invoking this function

real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const [inherited]

Compute signed distance from a line.


in	p	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line

Returns

Signed distance

## 7.8 DC1DL2 Class Reference

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements. Inheritance diagram for DC1DL2:

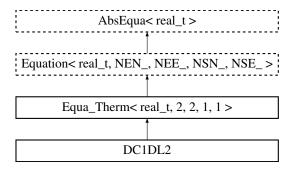

## **Public Member Functions**

• DC1DL2()

Default Constructor.

DC1DL2 (const Element \*el)

Constructor for an element.

• DC1DL2 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor for an element (transient case).

DC1DL2 (const Element \*el, const Vect < real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for an element (transient case) with specification of time integration scheme.

• ~DC1DL2 ()

Destructor.

• void build ()

Build the linear system without solving.

void LCapacityToLHS (real\_t coef=1)

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

• void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

void LCapacity (real\_t coef)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

• void CapacityToLHS (real\_t coef=1)

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef.

• void CapacityToRHS (real\_t coef=1)

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef

• void Capacity (real\_t coef=1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef

• void Diffusion (real\_t coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient coef

• void DiffusionToRHS (real\_t coef=1)

Add diffusion contribution to right hand side after multiplying it by coefficient coef

void Convection (const real\_t &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (const Vect< real\_t > &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

void ConvectionToRHS (const real\_t &v, real\_t coef=1)

Add convection contribution to right-hand side after multiplying it by coefficient coef

void ConvectionToRHS (real\_t coef=1)

Add convection contribution to right-hand side after multiplying it by coefficient coef

• void BodyRHS (UserData < real\_t > &ud, real\_t coef=1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

void BodyRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

• void BoundaryRHS (UserData < real\_t > &ud, real\_t coef=1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

• void BoundaryRHS (real\_t flux)

Add boundary right-hand side flux to right hand side.

void BoundaryRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

• real\_t Flux () const

Return (constant) heat flux in element.

void setInput (EqDataType opt, Vect< real\_t > &u)

Set equation input data.

virtual void setStab ()

Set stabilized formulation.

• void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void build (TimeStepping &s)

*Build the linear system of equations.* 

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

• void setRhoCp (const real\_t &rhocp)

Set product of Density by Specific heat (constants)

• void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

• void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

• void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect < real\_t > &x, Vect < real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

void Init (const Side \*sd)

Set side arrays to zero.

# 7.8.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 1-D using 2-Node elements. Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

#### 7.8.2 Constructor & Destructor Documentation

### DC1DL2()

Default Constructor.

Constructs an empty equation.

## DC1DL2 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for an element (transient case).

el	[in] Pointer to element
и	[in] Vect instance that contains solution at previous time step
time	[in] Current time value (Default value is 0)

## DC1DL2 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

#### **Parameters**

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value (Default value is 0).
in	deltat	Value of time step
in	scheme	Time Integration Scheme:
		FORWARD_EULER for Forward Euler scheme
		BACKWARD_EULER for Backward Euler scheme
		CRANK_NICOLSON for Crank-Nicolson Euler scheme

## 7.8.3 Member Function Documentation

## void LCapacityToLHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

i	coef	Coefficient to multiply by added term [default: 1]
---	------	--

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void LCapacityToRHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void LCapacity ( real\_t coef )

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

in	coef	Coefficient to multiply by added term [default: 1]
----	------	--

## void CapacityToLHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef.

#### **Parameters**

in coef	Coefficient to multiply by added term [default: 1]
---------	--

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void CapacityToRHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void Capacity ( real\_t coef = 1 )

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [default: 1]
----	------	--

## void Diffusion ( real\_t coef = 1 ) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient coef

## Parameters

in	coef	Coefficient to multiply by added term [default: 1]

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void DiffusionToRHS ( real\_t coef = 1 ) [virtual]

Add diffusion contribution to right hand side after multiplying it by coefficient coef To be used for explicit diffusion term

#### Parameters

1			
	in	coef	Coefficient to multiply by added term [default: 1]

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void Convection ( const real\_t & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

in	v	Constant velocity vector
in	coef	Coefficient to multiply by added term [default: 1]

## void Convection ( const Vect< real\_t > & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field is given by a vector v

#### **Parameters**

in	v	Velocity vector
in	coef	Coefficient to multiply by added term [default: 1]

## void Convection ( real\_t coef = 1 ) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

#### **Parameters**

in	coef	Coefficient to multiply by added term [default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void ConvectionToRHS ( const real\_t & v, real\_t coef = 1 )

Add convection contribution to right-hand side after multiplying it by coefficient coef To be used for explicit convection term.

#### **Parameters**

in	v	Velocity vector
in	coef	Coefficient to multiply by added term [default: 1]

## void ConvectionToRHS ( real\_t coef = 1 ) [virtual]

Add convection contribution to right-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

in	coef	Coefficient to multiply by added term [default: 1]

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void BodyRHS ( UserData< real\_t > & ud, real\_t coef = 1 )

Add body right-hand side term to right hand side after multiplying it by coefficient coef

#### **Parameters**

in	ud	nstance of UserData or of a derived class. Contains a member function that provides body source.	
in	coef	Coefficient to multiply by added term [default: 1]	

## void BodyRHS ( const Vect < real t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add body right-hand side term to right hand side.

#### **Parameters**

in	<i>b</i> Vector containing source at element nodes.	
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

# void BoundaryRHS ( UserData< real\_t > & ud, real\_t coef = 1 )

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

## Parameters

in	ud	Instance of <b>UserData</b> or of an inherited class. Contains a member function that provides body source.	
in	coef	Coefficient to multiply by added term [default: 1]	

## void BoundaryRHS ( real\_t flux )

Add boundary right-hand side flux to right hand side.

#### **Parameters**

	in	flux	Vector containing source at side nodes.
--	----	------	---

## void BoundaryRHS ( const Vect < real\_t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

#### **Parameters**

in	b	Vector containing source at side nodes.
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 2, 2, 1, 1 >.

## void setInput ( EqDataType opt, Vect< real t > & u )

Set equation input data.

#### **Parameters**

in	opt	Parameter that selects data type for input. This parameter is to be chosen in the enumerated variable EqDataType
		INITIAL_FIELD: Initial temperature
		BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet)
		SOURCE_DATA: Heat source
		FLUX_DATA: Heat flux (Neumann boundary condition)
		VELOCITY: Velocity vector (for the convection term)
in	и	Vector containing input data

## virtual void setStab ( ) [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

## void build ( TimeStepping & s ) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

in	S	Reference to used TimeStepping instance
----	---	---

## void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	е	Reference to used EigenProblemSolver instance
----	---	---

#### int runTransient( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

#### Returns

Return error from the linear system solver

## int runOneTimeStep( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function run← Transient.

#### Returns

Return error from the linear system solver

## int run ( ) [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

## void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by  $\_\texttt{theElement}$ 

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

## $void\ LocalNodeVector\ (\ Vect < real\_t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_t > \& b$ ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_$ theSide

## void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real $_{-}$ t > & b ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( $BMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{void ElementAssembly ( $SkSMatrix{<}\,real\_t > \&\,A\ ) \quad [\mbox{inherited}] \\$ 

Assemble element matrix into global one.

**Parameters** 

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SkMatrix < real\_t > \& A ) \ [inherited]}$ 

Assemble element matrix into global one.

**Parameters** 

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SpMatrix < real\_t > \& A ) \ [inherited]}$ 

Assemble element matrix into global one.

Parameters

ir	. A	Global matrix stored as an SpMatrix instance	
----	-----	--	--

## Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( TrMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one.

in A	Global matrix stored as an TrMatrix instance
------	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)
	-	

## Warning

The element pointer is given by the global variable the Element

# ${\bf void \ Side Assembly \ ( \ PETScMatrix {< \ real\_t > \& \ } A \ ) \quad [{\tt inherited}]}$

Assemble side matrix into global one.

## Parameters

A	Reference to global matrix


## Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

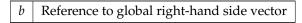

## Warning

The side pointer is given by the global variable the Side

## ${f void \ Side Assembly \ ( \ Matrix < real\_t > *A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

## Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ SkMatrix{<}\, real\_t>\&\, A\ )}\quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

## $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void DGElementAssembly ( $SkSMatrix{<}\,real.t{}>\&\,A\ ) \quad [\mbox{inherited}] \\$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

		_
A	Global matrix stored as an SkSMatrix instance	

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## $void\ DGElementAssembly\ (\ SpMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

	in	A	Global matrix stored as an TrMatrix instance	
--	----	---	--	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]
CG_SOLVER, Conjugate Gradient iterative solver		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
	BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)	
in	b	Vector containing right-hand side	
in,out	x	Vector containing initial guess of solution on input, actual solution on output	

## 7.8.4 Member Data Documentation

LocalVect<real\_t,NEE\_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.9 DC2DT3 Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Inheritance diagram for DC2DT3:

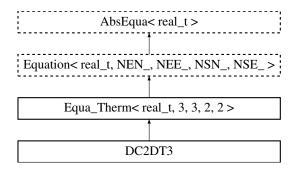

## **Public Member Functions**

• DC2DT3 ()

Default Constructor. Constructs an empty equation.

DC2DT3 (Mesh &ms)

Constructor using Mesh data.

• DC2DT3 (Mesh &ms, Vect< real\_t > &u)

Constructor using Mesh and initial condition.

• DC2DT3 (const Element \*el)

Constructor for an element.

• DC2DT3 (const Side \*sd)

Constructor for a boundary side.

• DC2DT3 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor for an element (transient case).

- DC2DT3 (const Element \*el, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

  Constructor for an element (transient case) with specification of time integration scheme.
- DC2DT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time=0.)

Constructor for a boundary side (transient case).

• DC2DT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for a side (transient case) with specification of time integration scheme.

• ~DC2DT3 ()

Destructor.

• void LCapacityToLHS (real\_t coef=1)

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

• void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

void LCapacity (real\_t coef)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

void CapacityToLHS (real\_t coef=1)

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef

• void CapacityToRHS (real\_t coef=1)

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef

• void Capacity (real\_t coef=1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef

• void Diffusion (real\_t coef=1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

• void Diffusion (const LocalMatrix < real\_t, 2, 2 > &diff, real\_t coef=1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

void DiffusionToRHS (real\_t coef=1)

Add diffusion contribution to right-hand side after multiplying it by coefficient coef To be used for explicit diffusion term.

void Convection (const Point < real\_t > &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (const Vect< real\_t > &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

void ConvectionToRHS (const Point < real\_t > &v, real\_t coef=1)

Add convection contribution to right-hand side after multiplying it by coefficient coef

• void ConvectionToRHS (real\_t coef=1)

Add convection contribution to right-hand side after multiplying it by coefficient coef

void LinearExchange (real\_t coef, real\_t T)

Add an edge linear exchange term to left and right-hand sides.

• void BodyRHS (UserData < real\_t > &ud, real\_t coef=1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

void BodyRHS (const Vect< real\_t > &bf, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

void BodyRHS (real\_t bf)

Add body right-hand side term to right hand side.

void BoundaryRHS (UserData < real\_t > &ud, real\_t coef=1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

void BoundaryRHS (real\_t flux)

Add boundary right-hand side flux to right hand side.

void BoundaryRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

• void Periodic (real\_t coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

• Point< real\_t > & Flux () const

Return (constant) heat flux in element.

• Point< real\_t > & Grad (const LocalVect< real\_t, 3 > &u) const

Return gradient of a vector in element.

• Point< real\_t > & Grad (const Vect< real\_t > &u) const

Return gradient of a vector in element.

void setInput (EqDataType opt, Vect< real\_t > &u)

Set equation input data.

void JouleHeating (const Vect< real\_t > &sigma, const Vect< real\_t > &psi)

Set Joule heating term as source.

• void build ()

Build the linear system of equations.

• virtual void setStab ()

Set stabilized formulation.

void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

void setRhoCp (const real\_t &rhocp)

*Set product of Density by Specific heat (constants)* 

void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

• void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void <a href="DiagBC">DiagBC</a> (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)
   Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

  Localize Element Vector.
- void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void set (const Element \*el)

Run the equation.

void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.9.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

#### 7.9.2 Constructor & Destructor Documentation

#### DC2DT3 (Mesh & ms)

Constructor using Mesh data.

### Parameters

in m	Mesh instance
------	---------------

### DC2DT3 ( Mesh & ms, Vect< real\_t > & u )

Constructor using Mesh and initial condition.

in	ms	Mesh instance

in	и	Vect instance containing initial solution
----	---	---

# DC2DT3 ( const Element \*el )

Constructor for an element.

#### **Parameters**

el Pointer to Element instance

# DC2DT3 (const Side \* sd)

Constructor for a boundary side.

#### Parameters

in s	sd	Pointer to Side instance
------	----	--------------------------

# DC2DT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for an element (transient case).

#### Parameters

ir	ı	el	Pointer to element
ir	1	и	Vect instance that contains solution at previous time step
ir	1	time	Current time value [Default: 0]

# DC2DT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].
in	deltat	Value of time step.
in	scheme	Time Integration Scheme:
		FORWARD_EULER for Forward Euler scheme
		BACKWARD_EULER for Backward Euler scheme
		CRANK_NICOLSON for Crank-Nicolson Euler scheme

## DC2DT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for a boundary side (transient case).

#### **Parameters**

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0]

# DC2DT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for a side (transient case) with specification of time integration scheme.

#### **Parameters**

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].
in	deltat	Value of time step.
in	scheme	Time Integration Scheme:
		FORWARD_EULER for Forward Euler scheme
		BACKWARD_EULER for Backward Euler scheme
		CRANK_NICOLSON for Crank-Nicolson Euler scheme

## 7.9.3 Member Function Documentation

# void LCapacityToLHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

iı	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void LCapacityToRHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void LCapacity ( real\_t coef )

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

#### Parameters

in	coef	Coefficient to multiply by added term [Default: 1]
----	------	--

# void CapacityToLHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

|--|

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

## void CapacityToRHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void Capacity ( real\_t coef = 1 )

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef

## Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

# void Diffusion ( real\_t coef = 1 ) [virtual]

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

## void Diffusion (const LocalMatrix< real\_t, 2, 2 > & diff, real\_t coef = 1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef Case where the diffusivity matrix is given as an argument.

#### **Parameters**

in	diff	Diffusion matrix (class LocalMatrix).	
in	coef	Coefficient to multiply by added term [Default: 1]	

# void DiffusionToRHS ( real\_t coef = 1 ) [virtual]

Add diffusion contribution to right-hand side after multiplying it by coefficient coef To be used for explicit diffusion term.

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void Convection ( const Point < real\_t > & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef

#### **Parameters**

in	v	Constant velocity vector
in	coef	Coefficient to multiply by added term [Default: 1]

## void Convection ( const Vect< real\_t > & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field is given by a vector v

#### **Parameters**

in	v	Velocity vector	
in	coef	Coefficient to multiply by added term (Default: 1]	

## void Convection ( real\_t coef = 1 ) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

in	coef	Coefficient to multiply by added term [Default: 1]	]
----	------	--	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void ConvectionToRHS ( const Point< real\_t > & v, real\_t coef = 1 )

Add convection contribution to right-hand side after multiplying it by coefficient coef To be used for explicit convection term.

## **Parameters**

in	v	Velocity vector	
in	coef Coefficient to multiply by added term [Default:		

# void ConvectionToRHS ( real\_t coef = 1 ) [virtual]

Add convection contribution to right-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

#### **Parameters**

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

## void LinearExchange ( real\_t coef, real\_t T )

Add an edge linear exchange term to left and right-hand sides.

#### **Parameters**

in	coef	Coefficient of exchange
in	T	External value for exchange

# Remarks

This assumes a constant value of T

# void BodyRHS ( UserData < real\_t > & ud, real\_t coef = 1 )

Add body right-hand side term to right hand side after multiplying it by coefficient coef

in	ud	Instance of UserData or of a derived class. Contains a member function that provides body source.
in	coef	Coefficient to multiply by added term [Default: 1]

## void BodyRHS ( const Vect < real t > & bf, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add body right-hand side term to right hand side.

#### **Parameters**

in	n bf Vector containing source at element nodes.	
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void BodyRHS ( real\_t bf )

Add body right-hand side term to right hand side. Case where the body right-hand side is piecewise constant.

#### **Parameters**

in	bf	Value of thermal source (Constant in element).
----	----	--

# void BoundaryRHS ( UserData < real\_t > & ud, real\_t coef = 1 )

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

## Parameters

in	ud	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	coef	Coefficient to multiply by added term [Default: 1]

# void BoundaryRHS ( real\_t flux )

Add boundary right-hand side flux to right hand side.

# Parameters

in	flux	Vector containing source at side nodes.

# void BoundaryRHS ( const Vect < real t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

in	n b Vector containing source at side nodes	
in	opt	Vector is local (LOCAL_ARRAY) with size 2 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void Periodic ( real\_t coef = 1.e20 )

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC\_A on one side and PERIODIC\_B on the opposite side.

## Parameters

in	coef	Value of penalty parameter [Default: 1.e20]	1
----	------	---	---

# Point<real\_t>& Grad ( const LocalVect< real\_t, 3 > & u ) const

Return gradient of a vector in element.

#### Parameters

	in	и	Vector for which gradient is computed.
--	----	---	--

#### Point<real $_t>$ & Grad ( const Vect< real $_t>$ & u ) const

Return gradient of a vector in element.

## Parameters

in	и	Global vector for which gradient is computed. Vector u has as size the total number	
		of nodes	

# void setInput ( EqDataType opt, Vect< real\_t > & u )

Set equation input data.

in	opt	Parameter to select type of input (enumerated values)
		INITIAL_FIELD: Initial temperature
		BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet)
		SOURCE_DATA: Heat source
		FLUX_DATA: Heat flux (Neumann boundary condition)
		VELOCITY_FIELD: Velocity vector (for the convection term)
in	и	Vector containing input data

## void JouleHeating (const Vect< real\_t > & sigma, const Vect< real\_t > & psi)

Set Joule heating term as source.

#### **Parameters**

in	in <i>sigma</i>	Vect instance containing electric conductivity (elementwise)
in	psi	Vect instance containing electric potential (elementwise)

#### void build ( )

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

## void set (const Element \* el) [protected]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

#### virtual void setStab ( ) [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

## void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### Parameters

in	e	Reference to used EigenProblemSolver instance

## int runTransient( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

#### Returns

Return error from the linear system solver

## int runOneTimeStep( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function run← Transient.

#### Returns

Return error from the linear system solver

## int run ( ) [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

## void updateBC ( const Element & el, const Vect< real.t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

#### Remarks

The current element is pointed by \_theElement

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
ou	; be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< real\_t > \& \ b, \ \mbox{LocalVect} < \ real\_t \ , \ \mbox{NEN}\_> \& \ be, \ \mbox{int } dof \ \mbox{ [inherited]}$

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

# Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

### void SideVector ( const Vect< real $_{-}$ t> & b ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

# ${f void \ Element Assembly ( \ Matrix < real\_t > *A ) \ [inherited]}$

Assemble element matrix into global one.

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real $_t > \& A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( BMatrix $< real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void ElementAssembly ( $SkMatrix{<}$ real_t > \& A ) \quad [\mbox{inherited}] \\$

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ SpMatrix < real.t > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix< real.t> & A ) [inherited]

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix< real $_t>*A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

### Parameters

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

## Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ Vect < real\_t > \&\ v\ )}$ [inherited]

Assemble side (edge or face) vector into global one.

# Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Global matrix stored as an SkSMatrix instance
---	---

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in	A	Global matrix stored as an SkMatrix instance	
--	----	---	--	--

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in A	Global matrix stored as an SpMatrix instance	
--	------	--	--

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	х	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

# Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [{\tt inherited}]$

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER		
		DIRECT_SOLVER, Use a facorization solver [default]		
		CG_SOLVER, Conjugate Gradient iterative solver		
		CGS_SOLVER, Squared Conjugate Gradient iterative solver		
		BICG_SOLVER, BiConjugate Gradient iterative solver		
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver		
		GMRES_SOLVER, GMRES iterative solver		
		QMR_SOLVER, QMR iterative solver		
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:		
		IDENT_PREC, Identity preconditioner (no preconditioning [default])		
		DIAG_PREC, Diagonal preconditioner		
		ILU_PREC, Incomplete LU factorization preconditioner		

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.9.4 Member Data Documentation

 $LocalVect{<}real\_t\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.10 DC2DT6 Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

Inheritance diagram for DC2DT6:

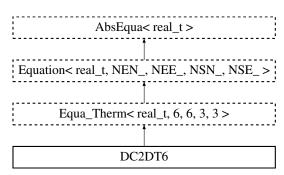

## **Public Member Functions**

• DC2DT6 ()

Default Constructor.

DC2DT6 (const Element \*el)

Constructor for an element.

• DC2DT6 (const Side \*sd)

Constructor for a boundary side.

DC2DT6 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor for an element (Transient case).

• DC2DT6 (const Element \*el, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for an element (transient case) with specification of time integration scheme.

• DC2DT6 (const Side \*sd, const Vect< real\_t > &u, real\_t time=0.)

Constructor for a boundary side (transient case).

• DC2DT6 (const Side \*sd, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for a side (transient case) with specification of time integration scheme.

• ~DC2DT6 ()

Destructor.

void Diffusion (real\_t coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient coef

void Convection (real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (Point< real\_t > &v, real\_t coef=1)

Add convection matrix to left hand side after multiplying it by coefficient coef

void Convection (const Vect< real\_t > &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

void BodyRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

void BoundaryRHS (const Vect< real\_t > &sf, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

• virtual void setStab ()

Set stabilized formulation.

• virtual void LCapacityToLHS (real\_t coef=1)

Add lumped capacity contribution to left-hand side.

• virtual void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side.

• virtual void CapacityToLHS (real\_t coef=1)

Add consistent capacity contribution to left-hand side.

• virtual void CapacityToRHS (real\_t coef=1)

Add consistent capacity contribution to right-hand side.

void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• virtual void DiffusionToRHS (real\_t coef=1.)

Add diffusion term to right-hand side.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• virtual void ConvectionToRHS (real\_t coef=1.)

Add convection term to right-hand side.

• void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void build ()

Build the linear system of equations.

void build (TimeStepping &s)

Build the linear system of equations.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

void setRhoCp (const real\_t &rhocp)

Set product of Density by Specific heat (constants)

void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

• void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)
 Localize Element Vector.

• void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

 $\bullet \ \ void \ AxbAssembly \ (const \ Side \ \&sd, \ const \ Vect < \ real\_t > \&x, \ Vect < \ real\_t > \&b)$ 

Assemble product of side matrix by side vector into global vector.

size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)
 Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.10.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 6-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

#### 7.10.2 Constructor & Destructor Documentation

## DC2DT6()

Default Constructor.

Constructs an empty equation.

## DC2DT6 ( const Element \* el )

Constructor for an element.

**Parameters** 

in   el   Pointer to element.
-------------------------------

# DC2DT6 ( const Side \* sd )

Constructor for a boundary side.

Parameters

in	sd	Pointer to side.

## DC2DT6 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for an element (Transient case).

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# DC2DT6 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

## Parameters

in	el	Pointer to element.	
in	и	Vect instance that contains solution at previous time step.	
in	time	Current time value [Default: 1]	
in	deltat	Value of time step	
in	scheme	Time Integration Scheme:	
		FORWARD_EULER: Forward Euler scheme	
		BACKWARD_EULER: Backward Euler scheme,	
		CRANK_NICOLSON: Crank-Nicolson Euler scheme.	

# DC2DT6 ( const Side \* sd, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for a boundary side (transient case).

## Parameters

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# DC2DT6 ( const Side \* sd, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for a side (transient case) with specification of time integration scheme.

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value
in	deltat	Value of time step

in	scheme	Time Integration Scheme: To be chosen among the enumerated values:	
		FORWARD_EULER: Forward Euler scheme	
		BACKWARD_EULER: Backward Euler scheme,	
		CRANK_NICOLSON: Crank-Nicolson Euler scheme.	
1	I		í .

# 7.10.3 Member Function Documentation

## void Diffusion ( real\_t coef = 1 ) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient coef

#### **Parameters**

Reimplemented from Equa\_Therm< real\_t, 6, 6, 3, 3 >.

# void Convection ( real\_t coef = 1 ) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

#### Parameters

i	. coef	Coefficient to multiply by added term [Default: 1].
---	--------	---

Reimplemented from Equa\_Therm< real\_t, 6, 6, 3, 3 >.

# void Convection ( Point< real\_t > & v, real\_t coef = 1 )

Add convection matrix to left hand side after multiplying it by coefficient coef

### Parameters

i	n	v	Constant velocity vector.
i	n	coef	Coefficient to multiply by added term [Default: 1].

# void Convection ( const Vect< real\_t > & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field is given by a vector v

in	v	Velocity vector.
----	---	------------------

coef Coefficient to multiply by add	ded term [Default: 1].
-------------------------------------	------------------------

void BodyRHS ( const Vect< real\_t > & b, int  $opt = GLOBAL\_ARRAY$  ) [virtual] Add body right-hand side term to right hand side.

#### **Parameters**

in	b	Local vector (of size 6) containing source at element nodes
in	opt	Vector is local (LOCAL_ARRAY) with size 6 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 6, 6, 3, 3 >.

void BoundaryRHS ( const Vect < real\_t > & sf, int opt = GLOBAL\_ARRAY ) [virtual] Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

#### **Parameters**

in	sf	Vector containing source at side nodes	
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].	

Reimplemented from Equa\_Therm< real\_t, 6, 6, 3, 3 >.

virtual void setStab ( ) [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

virtual void LCapacityToLHS ( real\_t coef = 1 ) [virtual], [inherited]

Add lumped capacity contribution to left-hand side.

## Parameters

in	coef	coefficient to multiply by the matrix before adding [Default: 1]

virtual void LCapacityToRHS ( real\_t coef = 1 ) [virtual], [inherited]

Add lumped capacity contribution to right-hand side.

in	coef	coefficient to multiply by the vector before adding [Default: 1]

## virtual void CapacityToLHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent capacity contribution to left-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

## virtual void CapacityToRHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent capacity contribution to right-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the vector before adding [Default: 1]	1
----	------	--	---

## void build ( ) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

## void build ( TimeStepping & s ) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

### **Parameters**

in	S	Reference to used TimeStepping instance
----	---	---

### void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

in	e	Reference to used EigenProblemSolver instance
----	---	---

## int runTransient( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

#### Returns

Return error from the linear system solver

## int runOneTimeStep( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function run← Transient.

#### Returns

Return error from the linear system solver

## int run ( ) [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

# void updateBC ( const Element & el, const Vect< real t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by  $\_\texttt{theElement}$ 

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector\ (\ Vect < real\_t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in		b	Global vector to be localized.
ou	t	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.	
in	dof	Degree of freedom to transfer to the local vector	

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.	

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized	
in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>	
		SIDE_FIELD, DOFs are supported by sides	
in	flag	Option to set:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF number dof is handled in the system	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_{-}$ t > & b ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_$ theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

### void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}^{t}$ 

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

# Parameters

A Reference to global matrix

### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real $_{-}$ t > & b ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly (\ BMatrix < real\_t > \&\ A\ )} \quad {f [inherited]}$

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{void ElementAssembly ( $SkSMatrix{<}$ real\_t > \& A ) \ [\mbox{inherited}] \\$ 

Assemble element matrix into global one.

### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

 $void\ ElementAssembly\ (\ SkMatrix < real\_t > \&\ A\ )\ [inherited]$ 

Assemble element matrix into global one.

### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

in A
------

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < {\it real\_t} > \&\ A\ )} \quad {\it [inherited]}$

Assemble side matrix into global one.

### Parameters

A	Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# ${\bf void\ Side Assembly\ (\ Matrix {<}\ real\_t > *A\ )} \quad \hbox{\tt [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SkMatrix{<}\, real\_t>\&\, A\ )}\quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

# Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix < real_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

### Warning

The element pointer is given by the global variable the Element

# ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\ real\_t>\&\ A\ )\quad [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SpMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	A	Global matrix stored as an TrMatrix instance	
----	---	--	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh() const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		• GMRES_SOLVER, GMRES iterative solver	
		• QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.10.4 Member Data Documentation

LocalVect<real\_t,NEE\_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.11 DC3DAT3 Class Reference

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

Inheritance diagram for DC3DAT3:

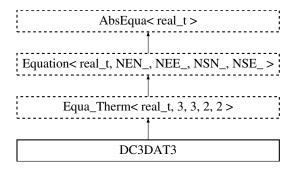

# **Public Member Functions**

• DC3DAT3 ()

Default Constructor.

• DC3DAT3 (const Element \*el)

Constructor for an element.

• DC3DAT3 (const Side \*sd)

Constructor for a boundary side.

• DC3DAT3 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor for an element (transient case).

• DC3DAT3 (const Element \*el, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for an element (transient case) with specification of time integration scheme.

• DC3DAT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time=0.)

Constructor for a boundary side (transient case).

• DC3DAT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for a side (transient case) with specification of time integration scheme.

• ~DC3DAT3 ()

Destructor.

void LCapacityToLHS (real\_t coef=1)

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef.

• void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef.

• void LCapacity (real\_t coef=1)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

• void CapacityToLHS (real\_t coef=1)

Add Consistent capacity matrix to left-hand side after multiplying it by coefficient coef

void CapacityToRHS (real\_t coef=1)

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef.

• void Capacity (real\_t coef=1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

• void Diffusion (real\_t coef=1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

• void Diffusion (const LocalMatrix < real\_t, 2, 2 > &diff, real\_t coef=1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

void DiffusionToRHS (real\_t coef=1)

Add diffusion contribution to right-hand side after multiplying it by coefficient coef

void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right-hand side after multiplying it by coefficient coef

void BodyRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

• void BoundaryRHS (real\_t flux)

Add boundary right-hand side term to right hand side.

void BoundaryRHS (const Vect< real\_t > &sf, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

Point< real\_t > & Grad (const Vect< real\_t > &u)

Return gradient of a vector in element.

• void build ()

Build the linear system without solving.

virtual void setStab ()

Set stabilized formulation.

void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• virtual void Convection (real\_t coef=1.)

Add convection term to left-hand side.

• virtual void ConvectionToRHS (real\_t coef=1.)

Add convection term to right-hand side.

void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

• void build (TimeStepping &s)

*Build the linear system of equations.* 

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

• void setRhoCp (const real\_t &rhocp)

Set product of Density by Specific heat (constants)

void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

• void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

• void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

### **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.11.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 3-D domains with axisymmetry using 3-Node triangles.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

# 7.11.2 Constructor & Destructor Documentation

# DC3DAT3()

Default Constructor.

Constructs an empty equation.

# DC3DAT3 (const Element \* el)

Constructor for an element.

### Parameters

	in	el	Pointer to element.
--	----	----	---------------------

# DC3DAT3 (const Side \* sd)

Constructor for a boundary side.

### Parameters

# DC3DAT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for an element (transient case).

### Parameters

in	el	Pointer to element
in	и	Vect instance that contains solution at previous time step
in	time	Current time value [Default: 0]

# DC3DAT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

in	el	Pointer to element.	
in	и	Vect instance that contains solution at previous time step.	
in	time	Current time value.	
in	deltat	Value of time step	
in	scheme	Time Integration Scheme ():	
		<ul> <li>FORWARD_EULER for Forward Euler scheme, BACKWARD_EULER for Backward Euler scheme,</li> </ul>	
		CRANK_NICOLSON for Crank-Nicolson Euler scheme.	

# DC3DAT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for a boundary side (transient case).

### Parameters

in	sd	Pointer to side	
in	и	Vect instance that contains solution at previous time step	
in	time	Current time value [Default: 0]	

# DC3DAT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for a side (transient case) with specification of time integration scheme.

### **Parameters**

in	sd	Pointer to side
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value.
in	deltat	Value of time step
in	scheme	Time Integration Scheme (enumerated values):
		FORWARD_EULER: Forward Euler scheme
		BACKWARD_EULER: Backward Euler scheme
		CRANK_NICOLSON: Crank-Nicolson Euler scheme
1	1	

# 7.11.3 Member Function Documentation

# void LCapacityToLHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef.

# Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void LCapacityToRHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef.

### **Parameters**

	in	coef	Coefficient to multiply by added term [Default: 1].
--	----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void LCapacity ( real\_t coef = 1 )

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef

### Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

# void CapacityToLHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity matrix to left-hand side after multiplying it by coefficientcoef

### **Parameters**

in coef	Coefficient to multiply by added term [Default: 1].
---------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void CapacityToRHS ( real\_t coef = 1 ) [virtual]

Add Consistent capacity contribution to right-hand side after multiplying it by coefficient coef.

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void Capacity ( real\_t coef = 1 )

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

# Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

# void Diffusion ( real\_t coef = 1 ) [virtual]

Add diffusion matrix to left-hand side after multiplying it by coefficient coef

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

## void Diffusion (const LocalMatrix< real\_t, 2, 2 > & diff, real\_t coef = 1)

Add diffusion matrix to left-hand side after multiplying it by coefficient coef Case where the diffusivity matrix is given as an argument

### **Parameters**

in	diff	Instance of class DMatrix containing diffusivity matrix
in	coef	Coefficient to multiply by added term [Default: 1]

# void DiffusionToRHS ( real\_t coef = 1 ) [virtual]

Add diffusion contribution to right-hand side after multiplying it by coefficient coef To be used for explicit diffusion term

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1]
----	------	--

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right-hand side after multiplying it by coefficient coef

### **Parameters**

in	ud	Instance of UserData or of an inherited class. Contains a member function that
		provides body source.

## void BodyRHS ( const Vect < real t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add body right-hand side term to right hand side.

### **Parameters**

in	b	Local vector (of size 3) containing source at element nodes.
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

# void BoundaryRHS ( real\_t flux )

Add boundary right-hand side term to right hand side.

	in flux	Value of flux to impose on the side	
--	---------	-------------------------------------	--

## void BoundaryRHS (const Vect < real.t > & sf, int opt = GLOBAL\_ARRAY) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

### **Parameters**

in	sf	Vector containing source at side nodes
in	opt	Vector is local (LOCAL_ARRAY) with size 2 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented from Equa\_Therm< real\_t, 3, 3, 2, 2 >.

### Point<real\_t>& Grad ( const Vect< real\_t>& u )

Return gradient of a vector in element.

### Parameters

ſ	in	и	Vector for which gradient is computed.
---	----	---	--

# virtual void setStab ( ) [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

# void build ( TimeStepping & s ) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

### Parameters

in	S	Reference to used TimeStepping instance	
----	---	---	--

# void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

in	e	Reference to used EigenProblemSolver instance

### int runTransient( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

### Returns

Return error from the linear system solver

## int runOneTimeStep( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function run← Transient.

### Returns

Return error from the linear system solver

## int run ( ) [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

### void updateBC (const Element & el, const Vect< real.t > & bc) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

### **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real $_{ ext{-}}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

### **Parameters**

ir	bc	Vector that contains imposed values at all DOFs
----	----	---

### Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< real\_t > \& b, LocalVect< real\_t , NEN_- > \& be, int dof ) \ \mbox{ [inherited]}$

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

### void SideVector ( const Vect< real $_{-}$ t> & b ) [inherited]

Localize Side Vector.

### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

### Remarks

This member function uses the Side pointer \_theSide

# void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

# void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real $_t > \& A$ ) [inherited]

Assemble element matrix into global one.

### **Parameters**

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

### **Parameters**

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

### Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( Vect< real\_t> & v ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# ${\bf void \ Side Assembly \ ( \ PETScMatrix {< \ real\_t > \& \ A \ ) } \quad [{\tt inherited}]$

Assemble side matrix into global one.

### **Parameters**

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

$\boldsymbol{A}$	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

in	A	Global matrix stored as an SkMatrix instance	
----	---	--	--

### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

### Parameters

in $v$	Global vector (Vect instance)
--------	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### **Parameters**

A Global matrix stored as an SkSMatrix instance

### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )}\ \ {f [inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

### void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

### **Parameters**

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

### Returns

Reference to Mesh instance

# ${\bf void\ setSolver\ (\ Iteration\ } {\it ls,\ } {\it Preconditioner\ } {\it pc = IDENT\_PREC\ )} \quad [{\tt inherited}]$

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

# Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.11.4 Member Data Documentation

 $LocalVect{<}real\_t\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.12 DC3DT4 Class Reference

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

Inheritance diagram for DC3DT4:

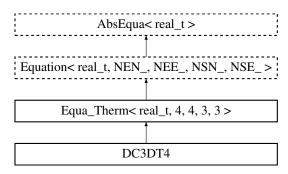

## **Public Member Functions**

• DC3DT4()

Default Constructor.

DC3DT4 (const Element \*el)

Constructor for an element.

• DC3DT4 (const Side \*sd)

Constructor for a boundary side.

• DC3DT4 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor for an element (transient case).

• DC3DT4 (const Side \*sd, const Vect< real\_t > &u, real\_t time=0.)

Constructor for a boundary side (transient case).

- DC3DT4 (const Element \*el, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)
  - Constructor for an element (transient case) with specification of time integration scheme.

• DC3DT4 (const Side \*sd, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for a side (transient case) with specification of time integration scheme.

• ~DC3DT4 ()

Destructor.

void build ()

Build the linear system without solving.

• void LCapacity (real\_t coef=1.)

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

• void LCapacityToLHS (real\_t coef=1)

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

• void Capacity (real\_t coef=1)

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

• void CapacityToLHS (real\_t coef=1)

Add consistent capacity matrix to left-hand side after multiplying it by coefficient coef

• void CapacityToRHS (real\_t coef=1)

Add consistent capacity contribution to right-hand side after multiplying it by coefficient coef

void Diffusion (real\_t coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient coef.

• void Diffusion (const DMatrix < real\_t > &diff, real\_t coef=1)

Add diffusion matrix to left hand side after multiplying it by coefficient coef

• void DiffusionToRHS (real\_t coef=1)

Add diffusion contribution to right hand side after multiplying it by coefficient coef

• void Convection (real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

void Convection (const Point < real\_t > &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

• void Convection (const Vect< Point< real\_t >> &v, real\_t coef=1)

Add convection matrix to left-hand side after multiplying it by coefficient coef

void RHS\_Convection (const Point< real\_t > &v, real\_t coef=1.)

Add convection contribution to right-hand side after multiplying it by coefficient coef

• void BodyRHS (UserData < real\_t > &ud, real\_t coef=1)

Add body right-hand side term to right hand side after multiplying it by coefficient coef

void BodyRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

• void BoundaryRHS (UserData < real\_t > &ud, real\_t coef=1)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

void BoundaryRHS (const Vect< real\_t > &b, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

void BoundaryRHS (real\_t flux)

Add boundary right-hand side flux to right hand side.

Point< real\_t > Flux () const

Return (constant) heat flux in element.

• Point< real\_t > Grad (const Vect< real\_t > &u) const

Return gradient of vector u in element. u is a local vector.

• void Periodic (real\_t coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

• virtual void setStab ()

Set stabilized formulation.

void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• virtual void ConvectionToRHS (real\_t coef=1.)

Add convection term to right-hand side.

void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

• void build (TimeStepping &s)

Build the linear system of equations.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

void setRhoCp (const real\_t &rhocp)

Set product of Density by Specific heat (constants)

void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

• void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

• void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

• void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect < real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver< real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)

Solve the linear system.

### **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

LocalVect< real\_t, NEE\_> eRes

Local Vect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

### **Protected Member Functions**

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.12.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 3-D domains using 4-Node tetrahedra.

Note that members calculating element arrays have as an argument a real coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.12.2 Constructor & Destructor Documentation

### DC3DT4()

Default Constructor.

Constructs an empty equation.

## DC3DT4 (const Element \* el)

Constructor for an element.

### Parameters

in el	Pointer to element.
-------	---------------------

# DC3DT4 ( const Side \* sd )

Constructor for a boundary side.

### **Parameters**

sd [in] Pointer t	o side.
-------------------	---------

# DC3DT4 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for an element (transient case).

### **Parameters**

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# DC3DT4 ( const Side \* sd, const Vect< real\_t > & u, real\_t time = 0. )

Constructor for a boundary side (transient case).

# Parameters

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# DC3DT4 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value.
in	deltat	Value of time step

in	scheme	Time Integration Scheme:
		• FORWARD_EULER: Forward Euler scheme
		BACKWARD_EULER: Backward Euler scheme
		CRANK_NICOLSON: Crank-Nicolson Euler scheme

# DC3DT4 ( const Side \* sd, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for a side (transient case) with specification of time integration scheme.

### Parameters

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value.
in	deltat	Value of time step
in	scheme	Time Integration Scheme ():
		FORWARD_EULER: for Forward Euler scheme
		BACKWARD_EULER: for Backward Euler scheme
		CRANK_NICOLSON: for Crank-Nicolson Euler scheme

# 7.12.3 Member Function Documentation

# void LCapacity ( real\_t coef = 1. )

Add lumped capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

# Parameters

in	coef	Coefficient to multiply by added term [Default: 1].

# void LCapacityToLHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity matrix to left-hand side after multiplying it by coefficient coef

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

## void LCapacityToRHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to right-hand side after multiplying it by coefficient coef

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void Capacity ( real\_t coef = 1 )

Add Consistent capacity contribution to left and right-hand sides after multiplying it by coefficient coef.

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

# void CapacityToLHS ( real\_t coef = 1 ) [virtual]

Add consistent capacity matrix to left-hand side after multiplying it by coefficient coef

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void CapacityToRHS ( real\_t coef = 1 ) [virtual]

Add consistent capacity contribution to right-hand side after multiplying it by coefficient coef

## Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void Diffusion ( real\_t coef = 1 ) [virtual]

Add diffusion matrix to left hand side after multiplying it by coefficient coef.

### **Parameters**

in	coef	Coefficient to multiply by added term (default value = 1).
----	------	--

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

## void Diffusion ( const DMatrix< real\_t > & diff, real\_t coef = 1 )

Add diffusion matrix to left hand side after multiplying it by coefficient coef Case where the diffusivity matrix is given as an argument.

#### **Parameters**

in	diff	Diffusion matrix (class DMatrix).
in	coef	Coefficient to multiply by added term [Default: 1].

## void DiffusionToRHS ( real\_t coef = 1 ) [virtual]

Add diffusion contribution to right hand side after multiplying it by coefficient coef To be used for explicit diffusion term

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void Convection ( real\_t coef = 1 ) [virtual]

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field has been previouly defined

## Parameters

iı	1 C	oef	Coefficient to multiply by added term [Default: 1].

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void Convection ( const Point< real\_t > & v, real\_t coef = 1 )

Add convection matrix to left-hand side after multiplying it by coefficient coef

# Parameters

in	v	Constant velocity vector
in	coef	Coefficient to multiply by added term [Default: 1].

## void Convection ( const Vect< Point< real\_t >> & v, real\_t coef = 1)

Add convection matrix to left-hand side after multiplying it by coefficient coef Case where velocity field is given by a vector v.

in	v	Velocity vector.
in	coef	Coefficient to multiply by added term [Default: 1].

## void RHS\_Convection ( const Point < real\_t > & v, real\_t coef = 1. )

Add convection contribution to right-hand side after multiplying it by coefficient coef To be used for explicit convection term.

#### **Parameters**

in	v	Velocity vector.
in	coef	Coefficient to multiply by added term [Default: 1].

# void BodyRHS ( UserData < real\_t > & ud, real\_t coef = 1 )

Add body right-hand side term to right hand side after multiplying it by coefficient coef

#### **Parameters**

in	ud	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	coef	Coefficient to multiply by added term [Default: 1].

## void BodyRHS ( const Vect < real.t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add body right-hand side term to right hand side.

#### **Parameters**

in	b	Local vector containing source at element nodes.	
in	opt	Vector is local (LOCAL_ARRAY) with size 4 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].	

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

# void BoundaryRHS ( UserData< real\_t > & ud, real\_t coef = 1 )

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef

# Parameters

in	ud	Instance of UserData or of an inherited class. Contains a member function that provides body source.
in	coef	Value by which the added term is multiplied [Default: 1].

## void BoundaryRHS ( const Vect < real\_t > & b, int $opt = GLOBAL\_ARRAY$ ) [virtual]

Add boundary right-hand side term to right hand side after multiplying it by coefficient coef Case where body source is given by a vector

in	b	Vector containing source at side nodes.	
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].	

Reimplemented from Equa\_Therm< real\_t, 4, 4, 3, 3 >.

## void BoundaryRHS ( real\_t flux )

Add boundary right-hand side flux to right hand side.

#### **Parameters**

in	flux	Vector containing source at side nodes.
----	------	---

#### void Periodic ( real\_t coef = 1.e20 )

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC\_A on one side and PERIODIC\_B on the opposite side.

#### **Parameters**

in	coef	Value of penalty parameter [Default: 1.e20].
----	------	--

# virtual void setStab ( ) [virtual], [inherited]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

#### void build ( TimeStepping & s ) [inherited]

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

	in	S	Reference to used TimeStepping instance
--	----	---	---

## void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	е	Reference to used EigenProblemSolver instance
----	---	---

#### int runTransient( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

#### Returns

Return error from the linear system solver

# int runOneTimeStep( ) [inherited]

Run one time step.

This function performs one time step in equation solving. It is identical to the function run← Transient.

#### Returns

Return error from the linear system solver

#### int run ( ) [inherited]

Run the equation.

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

# void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by  $\_\texttt{theElement}$ 

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector\ (\ Vect < real\_t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN $_->$ & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real\_t > & b ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_\mathtt{theSide}$ 

# void ElementNodeCoordinates ( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

### void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real $_{ ext{-}}t > \& b$ ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( $BMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{\bf void ElementAssembly ( $SkSMatrix{<}\,real\_t > \&\,A\ ) \quad [\mbox{\it inherited}]}$ 

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $SkMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

	in	A	Global matrix stored as an TrMatrix instance	
--	----	---	--	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

#### **Parameters**

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < {\it real\_t} > \&\ A\ )} \quad {\it [inherited]}$

Assemble side matrix into global one.

## Parameters

A Reference to global mat	ix
---------------------------	----


# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

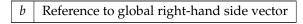

# Warning

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ (\ Matrix < real\_t > *A\ )} \quad \hbox{\tt [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SkMatrix{<}\, real\_t>\&\, A\ )}\quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \textbf{void DGElementAssembly ( SkSMatrix} < \textbf{real.t} > \&\, A \ \textbf{)} \quad \texttt{[inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ SpMatrix{<}\ real\_t>\&A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

	A	Global matrix stored as an SpMatrix instance	]
--	---	--	---

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		GMRES_SOLVER, GMRES iterative solver	
		• QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.12.4 Member Data Documentation

LocalVect<real\_t,NEE\_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.13 DMatrix < T\_ > Class Template Reference

To handle dense matrices.

Inheritance diagram for DMatrix< T $_->$ :



# **Public Member Functions**

• DMatrix ()

Default constructor.

• DMatrix (size\_t nr)

Constructor for a matrix with nr rows and nr columns.

• DMatrix (size\_t nr, size\_t nc)

Constructor for a matrix with nr rows and nc columns.

• DMatrix (Vect< T<sub>−</sub> > &v)

Constructor that uses a Vect instance. The class uses the memory space occupied by this vector.

• DMatrix (const DMatrix < T\_> &m)

Copy Constructor.

• ~DMatrix ()

Destructor.

• void setDiag ()

Store diagonal entries in a separate internal vector.

• void setDiag (const T<sub>-</sub> &a)

Set matrix as diagonal and assign its diagonal entries as a constant.

• void setDiag (const vector < T\_> &d)

Set matrix as diagonal and assign its diagonal entries.

• void setSize (size\_t size)

Set size (number of rows) of matrix.

• void setSize (size\_t nr, size\_t nc)

Set size (number of rows and columns) of matrix.

• void getColumn (size\_t j, Vect< T\_ > &v) const

Get j-th column vector.

• Vect< T\_> getColumn (size\_t j) const

Get j-th column vector.

• void getRow (size\_t i, Vect< T\_ > &v) const

Get i-th row vector.

• Vect< T\_> getRow (size\_t i) const

Get i-th row vector.

void set (size\_t i, size\_t j, const T\_ &val)

Assign a constant value to an entry of the matrix.

• void setRow (size\_t i, const Vect< T\_> &v)

Copy a given vector to a prescribed row in the matrix.

• void setColumn (size\_t i, const Vect< T\_> &v)

Copy a given vector to a prescribed column in the matrix.

void MultAdd (T<sub>-</sub> a, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &y) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add result to  $\mathbf{y}$ .

• void MultAdd (const Vect< T\_> &x, Vect< T\_> &y) const

Multiply matrix by vector x and add result to y.

• void Mult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and save result in y.

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and add result in y.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant val to entry (i, j) of the matrix.

• void Axpy (T<sub>-</sub> a, const DMatrix < T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix< T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• int setQR ()

Construct a QR factorization of the matrix.

• int setTransQR ()

Construct a QR factorization of the transpose of the matrix.

• int solveQR (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve a linear system by QR decomposition.

• int solveTransQR (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve a transpose linear system by QR decomposition.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version). Return a(i, j)

• T<sub>-</sub> & operator() (size\_t i, size\_t j)

Operator () (Non constant version). Return a(i, j)

• int setLU ()

Factorize the matrix (LU factorization)

• int setTransLU ()

Factorize the transpose of the matrix (LU factorization)

• int solve (Vect $< T_- > \&b$ )

Solve linear system.

• int solveTrans (Vect< T\_> &b)

Solve the transpose linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• int solveTrans (const Vect< T $_->$  &b, Vect< T $_->$  &x)

*Solve the transpose linear system.* 

DMatrix & operator= (DMatrix < T<sub>−</sub> > &m)

Operator =

• DMatrix & operator+= (const DMatrix < T\_> &m)

Operator +=.

• DMatrix & operator-= (const DMatrix < T\_ > &m)

*Operator* -=.

• DMatrix & operator= (const T<sub>-</sub> &x)

Operator =

• DMatrix & operator\*= (const T<sub>-</sub> &x)

Operator \*=

• DMatrix & operator+= (const T<sub>-</sub> &x)

Operator +=

• DMatrix & operator-= (const T<sub>-</sub> &x)

Operator -=

• T<sub>-</sub> \* getArray () const

Return matrix as C-Array.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

• size\_t getNbRows () const

Return number of rows.

size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

void setDiagonal ()

Set the matrix as diagonal.

• void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

T<sub>-</sub> getDiag (size<sub>-</sub>t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

• void Assembly (const Element &el, T\_ \*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix < T\_ > &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T\_ \*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix < T\_ > &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect $< T_- > \&b$ , const Vect $< T_- > \&u$ , int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T<sub>-</sub> > &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

• void Prescribe (size\_t dof, Vect< T\_ > &b, const Vect< T\_ > &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T<sub>-</sub> > &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect $< T_- > \&b$ , Vect $< T_- > \&x$ )

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

T<sub>-</sub> operator[] (size<sub>-</sub>t k) const

Operator [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

• Matrix & operator= (const Matrix < T\_ > &m)

Operator -=.

# 7.13.1 Detailed Description

template<class T\_> class OFELI::DMatrix< T\_>

To handle dense matrices.

This class enables storing and manipulating general dense matrices. Matrices can be square or rectangle ones.

**Template Parameters** 

$T \leftarrow$	Data type (double, float, complex <double>,)</double>
_←	

# 7.13.2 Constructor & Destructor Documentation

## DMatrix ( )

Default constructor.

Initializes a zero-dimension matrix.

## DMatrix ( size\_t nr )

Constructor for a matrix with nr rows and nr columns.

Matrix entries are set to 0.

# DMatrix ( size\_t nr, size\_t nc )

Constructor for a matrix with nr rows and nc columns.

Matrix entries are set to 0.

# DMatrix ( Vect< T $_->$ & v )

Constructor that uses a Vect instance. The class uses the memory space occupied by this vector.

#### **Parameters**

in	v	Vector to copy

#### DMatrix (const DMatrix $< T_- > & m$ )

Copy Constructor.

in m	Matrix to copy
------	----------------

# 7.13.3 Member Function Documentation

# void setDiag ( const $T_- \& a$ )

Set matrix as diagonal and assign its diagonal entries as a constant.

#### Parameters

in	а	Value to assign to all diagonal entries
----	---	---

# void setDiag ( const vector $< T_- > & d$ )

Set matrix as diagonal and assign its diagonal entries.

#### **Parameters**

in	d	Vector entries to assign to matrix diagonal entries
----	---	---

# void setSize ( size\_t size )

Set size (number of rows) of matrix.

#### Parameters

in	size	Number of rows and columns.
----	------	-----------------------------

# void setSize ( size\_t nr, size\_t nc )

Set size (number of rows and columns) of matrix.

#### Parameters

in	nr	Number of rows.
in	пс	Number of columns.

# void getColumn ( size\_t j, Vect< T\_> & v ) const

Get j-th column vector.

## Parameters

in	j	Index of column to extract
out	v	Reference to Vect instance where the column is stored

## Remarks

Vector v does not need to be sized before. It is resized in the function

OFELI's Reference Guide

# $Vect < T_- > getColumn ( size_t j ) const$

Get j-th column vector.

#### **Parameters**

	in	j	Index of column to extract
--	----	---	----------------------------

## Returns

Vect instance where the column is stored

#### Remarks

Vector v does not need to be sized before. It is resized in the function

# void getRow ( size\_t i, Vect< T $_->$ & v ) const

Get i-th row vector.

## Parameters

in	i	Index of row to extract
out	v	Reference to Vect instance where the row is stored

## Remarks

Vector v does not need to be sized before. It is resized in the function

# $Vect < T_- > getRow ( size_t i ) const$

Get i-th row vector.

#### **Parameters**

in	i	Index of row to extract
----	---	-------------------------

#### Returns

Vect instance where the row is stored

#### Remarks

Vector v does not need to be sized before. It is resized in the function

# void set ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Assign a constant value to an entry of the matrix.

in	i	row index of matrix
----	---	---------------------

## 7.13. DMATRIX < T\_ > CLASS TEMPLATE REFERENCEAPTER 7. CLASS DOCUMENTATION

#### Parameters

in	j	column index of matrix
in	val	Value to assign to a(i,j).

Implements Matrix  $< T_- >$ .

# void setRow ( size\_t i, const Vect< $T_- > \& v$ )

Copy a given vector to a prescribed row in the matrix.

#### **Parameters**

in	i	row index to be assigned
in	v	Vect instance to copy

# void setColumn ( size\_t i, const Vect< $T_- > \& v$ )

Copy a given vector to a prescribed column in the matrix.

#### **Parameters**

in	i	column index to be assigned
in	v	Vect instance to copy

# void MultAdd ( $T_-a$ , const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const [virtual]

Multiply matrix by vector a\*x and add result to y.

## Parameters

in	а	constant to multiply by
in	x	Vector to multiply by a
in,out	у	on input, vector to add to. On output, result.

Implements Matrix  $< T_- >$ .

# $void\ MultAdd\ (\ const\ Vect < T_-> \&\ \textit{x,}\ \ Vect < T_-> \&\ \textit{y}\ \ )\ const\quad \texttt{[virtual]}$

Multiply matrix by vector x and add result to y.

#### Parameters

in	х	Vector to add to y
in,out	y	on input, vector to add to. On output, result.

Implements Matrix $< T_->$ .

# void Mult ( const Vect< $T_-> & x$ , Vect< $T_-> & y$ ) const [virtual]

Multiply matrix by vector x and save result in y.

#### Parameters

in	х	Vector to add to y
out	y	Result.

Implements Matrix  $< T_- >$ .

# void TMult ( const Vect< T\_ > & x, Vect< T\_ > & y ) const [virtual]

Multiply transpose of matrix by vector x and add result in y.

#### Parameters

in	x	Vector to add to y
in,out	y	on input, vector to add to. On output, result.

Implements Matrix  $< T_- >$ .

# void add ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Add constant val to entry (i,j) of the matrix.

## Parameters

in	i	row index
in	j	column index
in	val	Constant to add

Implements Matrix  $< T_- >$ .

# void Axpy ( $T_-a$ , const DMatrix< $T_- > \& m$ )

Add to matrix the product of a matrix by a scalar.

# Parameters

in	а	Scalar to premultiply
in	m	Matrix by which a is multiplied. The result is added to current instance

# void Axpy ( $T_-a$ , const Matrix $< T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

in	а	Scalar to premultiply
----	---	-----------------------

in	m	Matrix by which a is multiplied. The result is added to current instance	]
----	---	--	---

Implements Matrix $< T_->$ .

## int setQR ( )

Construct a QR factorization of the matrix.

This function constructs the QR decomposition using the Householder method. The upper triangular matrix R is returned in the upper triangle of the current matrix, except for the diagonal elements of R which are stored in an internal vector. The orthogonal matrix Q is represented as a product of n-1 Householder matrices Q1 . . . Qn-1, where Qj = 1 - uj.uj/cj. The i-th component of uj is zero for i = 1, ..., j-1 while the nonzero components are returned in a[i][j] for i = j, ..., n.

#### Returns

0 if the decomposition was successful, k is the k-th row is singular

#### Remarks

The matrix can be square or rectangle

## int setTransQR ( )

Construct a QR factorization of the transpose of the matrix.

This function constructs the QR decomposition using the Householder method. The upper triangular matrix R is returned in the upper triangle of the current matrix, except for the diagonal elements of R which are stored in an internal vector. The orthogonal matrix Q is represented as a product of n-1 Householder matrices Q1 . . . Qn-1, where Qj = 1 - uj.uj/cj. The i-th component of uj is zero for i = 1, ..., j-1 while the nonzero components are returned in a[i][j] for i = j, ..., n.

#### Returns

0 if the decomposition was successful, k is the k-th row is singular

#### Remarks

The matrix can be square or rectangle

## int solveQR ( const Vect< $T_-$ > & b, Vect< $T_-$ > & x )

Solve a linear system by QR decomposition.

This function constructs the QR decomposition, if this was not already done by using the member function QR and solves the linear system

in	b	Right-hand side vector
out	x	Solution vector. Must have been sized before using this function.

#### Returns

The same value as returned by the function QR

## int solveTransQR ( const Vect< $T_-$ > & b, Vect< $T_-$ > & x)

Solve a transpose linear system by QR decomposition.

This function constructs the QR decomposition, if this was not already done by using the member function QR and solves the linear system

#### **Parameters**

in	b	Right-hand side vector
out	х	Solution vector. Must have been sized before using this function.

#### Returns

The same value as returned by the function QR

## T\_operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version). Return a(i,j)

#### **Parameters**

in	i	row index
in	j	column index

Implements Matrix  $< T_- >$ .

## T\_& operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version). Return a(i,j)

#### Parameters

in	i	row index
in	j	column index

Implements Matrix  $< T_- >$ .

## int setLU ( )

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

## Returns

- 0 if factorization was normally performed,
- n if the n-th pivot is null.

#### Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

#### int setTransLU( )

Factorize the transpose of the matrix (LU factorization)

LU factorization of the transpose of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

#### Returns

- 0 if factorization was normally performed,
- n if the n-th pivot is null.

#### Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

#### int solve ( Vect< T $_->$ & b ) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

#### Parameters

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements Matrix $< T_- >$ .

### int solveTrans ( Vect< T $_->$ & b )

Solve the transpose linear system.

The linear system having the current instance as a transpose matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

in,out	b	Vect instance that contains right-hand side on input and solution on output.	
--------	---	--	--

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

#### int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

#### **Parameters**

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

## Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

#### int solveTrans (const Vect< T $_->$ & b, Vect< T $_->$ & x)

Solve the transpose linear system.

The linear system having the current instance as a transpose matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

# DMatrix& operator= ( DMatrix $< T_- > & m$ )

Operator =

Copy matrix m to current matrix instance.

#### DMatrix& operator+= ( const DMatrix $< T_- > \& m$ )

Operator +=.

Add matrix m to current matrix instance.

#### DMatrix& operator== ( const DMatrix $< T_- > \& m$ )

Operator -=.

Subtract matrix m from current matrix instance.

#### DMatrix& operator= ( const $T_- & x$ )

Operator =

Assign matrix to identity times x

#### DMatrix& operator\*= ( const $T_- \& x$ )

Operator \*=

Premultiply matrix entries by constant value x.

## DMatrix& operator+= ( const $T_- \& x$ )

Operator +=

Add constant value x to matrix entries

## DMatrix& operator== ( const $T_{-}$ & x )

Operator -=

Subtract constant value x from matrix entries.

## T\_\* getArray ( ) const

Return matrix as C-Array.

Matrix is stored row by row.

## void setDiagonal ( Mesh & mesh ) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored. This member function is to be used for explicit time integration schemes

#### T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by getDiag(1).

## void Assembly (const Element & el, $T_- * a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a C-array

# void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

## void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

#### **Parameters**

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

# void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

## **Parameters**

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

# void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( Vect< $T_-$ > & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### Parameters

in,out	b	Vect instance that contains right-hand side.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

void Prescribe ( size\_t dof, Vect<  $T_-> \& b$ , const Vect<  $T_-> \& u$ , int flag = 0 ) [inherited] Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

## void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function set← Penal(..).

## int FactorAndSolve ( Vect< T $_->$ & b ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

#### Parameters

in,	out	b	Vect instance that contains right-hand side on input and solution on output	
-----	-----	---	---	--

# int FactorAndSolve ( const Vect< T $_->$ & b, Vect< T $_->$ & x ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

## Parameters

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

#### int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

## T\_operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

## T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

## T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

# T\_operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

## Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

# Matrix& operator== ( const Matrix< $T_->$ & m ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

# 7.14 Domain Class Reference

To store and treat finite element geometric information.

# **Public Member Functions**

• Domain ()

Constructor of a null domain.

• Domain (const string &file)

Constructor with an input file.

• ∼Domain ()

Destructor.

• void setFile (string file)

Set file containing Domain data.

• void setDim (size\_t d)

Set space dimension.

• size\_t getDim () const

Return space dimension.

• void setNbDOF (size\_t n)

Set number of degrees of freedom.

• size\_t getNbDOF () const

Return number of degrees of freedom.

• size\_t getNbVertices () const

Return number of vertices.

• size\_t getNbLines () const

Return number of lines.

• size\_t getNbContours () const

Return number of contours.

• size\_t getNbHoles () const

Return number of holes.

• size\_t getNbSubDomains () const

Return number of sub-domains.

• int get ()

Read domain data interactively.

• void get (const string &file)

Read domain data from a data file.

• Mesh & getMesh () const

Return reference to generated Mesh instance.

• void genGeo (string file)

Generate geometry file.

• void genMesh ()

Generate 2-D mesh.

• void genMesh (const string &file)

Generate 2-D mesh and save in file (OFELI format)

void genMesh (string geo\_file, string bamg\_file, string mesh\_file)

Generate 2-D mesh and save geo, bamg and mesh file (OFELI format)

void generateMesh ()

Generate 2-D mesh using the BAMG mesh generator.

• Domain & operator\*= (real\_t a)

Operator \*=

• void insertVertex (real\_t x, real\_t y, real\_t h, int code)

Insert a vertex.

• void insertLine (size\_t n1, size\_t n2, int dc, int nc)

Insert a straight line.

• void insertCircle (size\_t n1, size\_t n2, size\_t n3, int dc, int nc)

Insert a circluar arc.

void insertRequiredVertex (size\_t v)

*Insert a required (imposed) vertex.* 

• void insertRequiredEdge (size\_t e)

Insert a required (imposed) edge (or line)

• void insertSubDomain (size\_t n, int code)

Insert subdomain.

• void insertSubDomain (size\_t ln, int orient, int code)

Insert subdomain.

• Point< real\_t > getMinCoord () const

Return minimum coordinates of vertices.

Point< real\_t > getMaxCoord () const

Return maximum coordinates of vertices.

real\_t getMinh () const

Return minimal value of mesh size.

void setOutputFile (string file)

Define output mesh file.

# 7.14.1 Detailed Description

To store and treat finite element geometric information.

This class is essentially useful to construct data for mesh generators.

# 7.14.2 Constructor & Destructor Documentation

## Domain ( )

Constructor of a null domain.

This constructor assigns maximal values of parameters.

## Domain (const string & file)

Constructor with an input file.

Parameters

in	file	Input file in the XML format defining the domain
----	------	--

## 7.14.3 Member Function Documentation

void get ( const string & file )

Read domain data from a data file.

|--|

# void genMesh ( const string & file )

Generate 2-D mesh and save in file (OFELI format)

#### Parameters

in	file	File where the generated mesh is saved
----	------	--

# void genMesh ( string geo file, string bamg file, string mesh file )

Generate 2-D mesh and save geo, bamg and mesh file (OFELI format)

## Parameters

in	geo_file	Geo file
in	bamg_file	Bamg file
in	mesh_file	File where the generated mesh is saved

# Domain& operator\*= ( real\_t a )

Operator \*=

Rescale domain coordinates by myltiplying by a factor

# Parameters

in	а	Value to multiply by

# void insertVertex ( real\_t x, real\_t y, real\_t h, int code )

Insert a vertex.

#### Parameters

in	x	x-coordinate of vertex
in	y	y-coordinate of vertex
in	h	mesh size around vertex
in	code	code of coordinate

# void insertLine ( size\_t n1, size\_t n2, int dc, int nc )

Insert a straight line.

in	n1	Label of the first vertex of line
in	n2	Label of the second vertex of line
in	dc	Code to associate to created nodes (Dirichlet)
in	пс	Code to associate to line (Neumann)

# void insertCircle ( size\_t n1, size\_t n2, size\_t n3, int dc, int nc )

Insert a circluar arc.

## Parameters

in	n1	Label of vertex defining the first end of the arc
in	n2	Label of vertex defining the second end of the arc
in	п3	Label of vertex defining the center of the arc
in	dc	Dirichlet code for nodes on the arc
in	пс	Neumann code for sides on the arc

# void insertRequiredVertex ( $\operatorname{size}_{-}\operatorname{t} v$ )

Insert a required (imposed) vertex.

# Parameters

in v	Label of vertex
------	-----------------

# void insertRequiredEdge ( $size_t e$ )

Insert a required (imposed) edge (or line)

## Parameters

in	е	Label of line
----	---	---------------

# void insertSubDomain ( size\_t n, int code )

Insert subdomain.

in	п	
in	code	

## void insertSubDomain ( size\_t ln, int orient, int code )

Insert subdomain.

#### Parameters

in	ln	Line label
in	orient	Orientation (1 or -1)
in	code	Subdomain code or reference

## void setOutputFile ( string file )


Define output mesh file.

#### **Parameters**

in	file	String defining output mesh file
----	------	----------------------------------

# 7.15 DSMatrix $< T_- >$ Class Template Reference

To handle symmetric dense matrices. Inheritance diagram for DSMatrix< T $_->$ :



## **Public Member Functions**

• DSMatrix ()

Default constructor.

• DSMatrix (size\_t dim)

Constructor that for a symmetric matrix with given number of rqows.

• DSMatrix (const DSMatrix < T\_> &m)

Copy Constructor.

• ∼DSMatrix ()

Destructor.

• void setDiag ()

Store diagonal entries in a separate internal vector.

void setSize (size\_t dim)

Set size (number of rows) of matrix.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign constant to entry (i, j) of the matrix.

• void getColumn (size\_t j, Vect< T\_ > &v) const

Get j-th column vector.

Vect< T<sub>-</sub> > getColumn (size\_t j) const

Get j-th column vector.

• void getRow (size\_t i, Vect< T\_ > &v) const

Get i-th row vector.

• Vect< T\_> getRow (size\_t i) const

Get i-th row vector.

• void setRow (size\_t i, const Vect< T\_> &v)

Copy a given vector to a prescribed row in the matrix.

• void setColumn (size\_t i, const Vect< T\_> &v)

Copy a given vector to a prescribed column in the matrix.

• void setDiag (const T<sub>-</sub> &a)

Set matrix as diagonal and assign its diagonal entries as a constant.

• void setDiag (const vector < T\_ > &d)

Set matrix as diagonal and assign its diagonal entries.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant to an entry of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T<sub>-</sub> & operator() (size\_t i, size\_t j)

Operator () (Non constant version).

• DSMatrix $< T_- > \& operator = (const DSMatrix<math>< T_- > \& m)$ 

*Operator = Copy matrix m to current matrix instance.* 

• DSMatrix< T\_> & operator= (const T\_ &x)

 $Operator = Assign \ matrix \ to \ identity \ times \ x.$ 

• int setLDLt ()

Factorize matrix  $(LDL^T)$ 

void MultAdd (const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &y) const

Multiply matrix by vector **a**\***x** and add result to **y**.

• void MultAdd ( $T_-$  a, const Vect<  $T_-$  > &x, Vect<  $T_-$  > &y) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add to  $\mathbf{y}$ .

• void Mult (const Vect<  $T_-> &x$ , Vect<  $T_-> &y$ ) const

Multiply matrix by vector x and save result in y.

• void TMult (const Vect<  $T_-> &x$ , Vect<  $T_-> &y$ ) const

Multiply transpose of matrix by vector x and add result in y.

• void Axpy (T<sub>-</sub> a, const DSMatrix < T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

void Axpy (T<sub>-</sub> a, const Matrix < T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• int solve (Vect $< T_- > \&b$ )

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• int setLDLt (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve a linear system using the LDLt (Crout) factorization.

• T<sub>-</sub> \* getArray () const

Return matrix as C-Array. Matrix is stored row by row. Only lower triangle is stored.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

size\_t getNbRows () const

Return number of rows.

• size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

void setDiagonal ()

Set the matrix as diagonal.

void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

T<sub>-</sub> getDiag (size\_t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

• void Assembly (const Element &el, T<sub>-</sub>\*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix< T<sub>-</sub>> &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

void Assembly (const Side &sd, const DMatrix < T<sub>-</sub> > &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

void Prescribe (int dof, int code, Vect< T<sub>-</sub> > &b, const Vect< T<sub>-</sub> > &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T\_> &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T<sub>-</sub> > &b)

*Factorize matrix and solve the linear system.* 

• int FactorAndSolve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• T\_ operator[] (size\_t k) const

*Operator* [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

• Matrix & operator+= (const T<sub>-</sub> &x)

Operator +=.

• Matrix & operator= (const Matrix < T\_ > &m)

Operator -=.

Matrix & operator-= (const T<sub>-</sub> &x)

*Operator* -=.

• Matrix & operator\*= (const T<sub>-</sub> &x)

*Operator* \*=.

## 7.15.1 Detailed Description

```
template < class T_> class OFELI::DSMatrix < T_>
```

To handle symmetric dense matrices.

This class enables storing and manipulating symmetric dense matrices.

**Template Parameters** 

```
T \leftarrow  Data type (double, float, complex<double>, ...)
```

## 7.15.2 Member Function Documentation

```
int setLDLt ( const Vect< T_- > & b, Vect< T_- > & x )
```

Solve a linear system using the LDLt (Crout) factorization.

This function solves a linear system. The LDLt factorization is performed if this was not already done using the function setLU.

## Parameters

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

## CHAPTER 7. CLASS DOCUMENTATION DSMATRIX < T\_ > CLASS TEMPLATE REFERENCE

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is null

## void setDiagonal ( Mesh & mesh ) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored. This member function is to be used for explicit time integration schemes

## T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix. First entry is given by **getDiag(1)**.

## void Assembly (const Element & el, $T_- * a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a C-array

## void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

## void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

#### **Parameters**

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

## void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

## void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0 ) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

## void Prescribe ( Vect< T $_->$ & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty

parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void Prescribe ( size\_t dof, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

## void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

#### **Parameters**

in,out	b	Vect instance that contains right-hand side on input and solution on output
--------	---	---

## int FactorAndSolve (const Vect< T $_->$ & b, Vect< T $_->$ & x ) [inherited]

Factorize matrix and solve the linear system.

## 7.15. DSMATRIX < T\_ > CLASS TEMPLATE REFERENCEPTER 7. CLASS DOCUMENTATION

This is available only if the storage class enables it.

#### **Parameters**

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

## int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

## T\_ operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

## T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

## Parameters

in	i	entry index

## T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

## T\_operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

#### Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

Matrix& operator+= ( const  $T_- & x$  ) [inherited]

Operator +=.

Add constant value x to all matrix entries.

Matrix& operator-= ( const Matrix $< T_- > & m$  ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

Matrix& operator= ( const  $T_- & x$  ) [inherited]

Operator -=.

Subtract constant value x from all matrix entries.


Matrix& operator\*= ( const  $T_- & x$  ) [inherited]

Operator \*=.

Premultiply matrix entries by constant value x

## 7.16 EC2D1T3 Class Reference

Eddy current problems in 2-D domains using solenoidal approximation. Inheritance diagram for EC2D1T3:

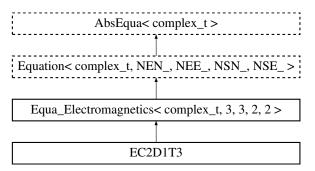

## **Public Member Functions**

• EC2D1T3 ()

 $Default\ constructor.$ 

• EC2D1T3 (const Element \*el)

Constructor using element data.

• EC2D1T3 (const Side \*side)

Constructor using side data.

- EC2D1T3 (const Element \*el, const Vect< complex\_t > &u, const real\_t &time=0.)
  - Constructor using element and previous time data.
- EC2D1T3 (const Side \*sd, const Vect< complex\_t > &u, const real\_t &time=0.)

Constructor using side and previous time data.

• ~EC2D1T3 ()

Destructor.

• void Magnetic (real\_t omega, real\_t coef=1.)

Add magnetic contribution to matrix.

• void Electric (real\_t coef=1.)

Add electric contribution to matrix.

• real\_t Joule ()

Compute Joule density in element.

• complex\_t IntegMF ()

Add element integral contribution.

complex\_t IntegND (const Vect< complex\_t > &h, int opt=GLOBAL\_ARRAY)

Compute integral of normal derivative on edge.

• real\_t VacuumArea ()

Add contribution to vacuum area calculation.

void updateBC (const Element &el, const Vect< complex\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< complex\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< complex\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

 void ElementNodeVectorSingleDOF (const Vect< complex\_t > &b, LocalVect< complex\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< complex\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

  Localize Element Vector.
- void SideVector (const Vect< complex\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

 $Localize\ coordinates\ of\ side\ nodes.$ 

void ElementAssembly (Matrix < complex\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < complex\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< complex\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < complex\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < complex\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< complex\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < complex\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< complex\_t > &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix < complex\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< complex\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < complex\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< complex\_t > &x, Vect< complex\_t > &b)

Assemble product of element matrix by element vector into global vector.

- void AxbAssembly (const Side &sd, const Vect< complex\_t > &x, Vect< complex\_t > &b)
   Assemble product of side matrix by side vector into global vector.
- size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

void setInitialSolution (const Vect< complex\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < complex\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix< complex\_t > \*A, Vect< complex\_t > &b, Vect< complex\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< complex\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< complex\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< complex\_t, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< complex\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< complex\_t, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< complex\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

• void MagneticPermeability (const real\_t &mu)

Set (constant) magnetic permeability.

void MagneticPermeability (const string &exp)

Set magnetic permeability given by an algebraic expression.

• void ElectricConductivity (const real\_t &sigma)

Set (constant) electric conductivity.

• void ElectricConductivity (const string &exp)

set electric conductivity given by an algebraic expression

void ElectricResistivity (const real\_t &rho)

Set (constant) electric resistivity.

• void ElectricResistivity (const string &exp)

Set electric resistivity given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.16.1 Detailed Description

Eddy current problems in 2-D domains using solenoidal approximation.

Builds finite element arrays for time harmonic eddy current problems in 2-D domains with solenoidal configurations (Magnetic field has only one nonzero component). Magnetic field is constant in the vacuum, and then zero in the outer vacuum. Uses 3-Node triangles.

The unknown is the time-harmonic magnetic induction (complex valued).

## 7.16.2 Constructor & Destructor Documentation

## EC2D1T3 (const Element \* el)

Constructor using element data.

## Parameters

in	el	Pointer to Element instance
----	----	-----------------------------

## EC2D1T3 (const Side \* side)

Constructor using side data.

#### **Parameters**

	in	side	Pointer to Side instance
--	----	------	--------------------------

## EC2D1T3 ( const Element \* el, const Vect< complex\_t > & u, const real\_t & time = 0.)

Constructor using element and previous time data.

#### **Parameters**

in	el	Pointer to Element instance
in	и	Solution at previous iteration
in	time	Time value [Default: 0]

## EC2D1T3 ( const Side \* sd, const Vect< complex\_t > & u, const real\_t & time = 0. )

Constructor using side and previous time data.

#### **Parameters**

in	sd	Pointer to Side instance
in	и	Solution at previous iteration
in	time	Time value [Default: 0]

## 7.16.3 Member Function Documentation

void Magnetic ( real\_t omega, real\_t coef = 1. )

Add magnetic contribution to matrix.

#### Parameters

in	omega	Angular frequency
in	coef	Coefficient to multiply by [Default: 1]

## void Electric ( real\_t coef = 1. )

Add electric contribution to matrix.

#### **Parameters**

in	coef	Coefficient to multiply by [Default: 1]
----	------	---

## complex\_t IntegND ( const Vect< complex\_t > & $h_t$ int $opt = GLOBAL\_ARRAY$ )

Compute integral of normal derivative on edge.

## Parameters

in	h	Vect instance containing magnetic field at element nodes
in	opt	Vector h is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

## Note

This member function is to be called within each element, it detects boundary sides as the ones with nonzero code

## void updateBC ( const Element & el, const Vect< complex\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< complex $_{ ext{-}}t > \&\ bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

## void DiagBC ( int $dof\_type = NODE\_DOF$ , int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		ELEMENT_FIELD, DOFs are supported by elements	
		SIDE_FIELD, DOFs are supported by sides	
in	dof	DOF setting:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF No. dof is handled in the system	

## ${\bf void}\; {\bf LocalNodeVector} \; (\; {\bf Vect} {<} \; {\bf complex}\_{\bf t} > \& \; b \; \; ) \quad [{\tt inherited}]$

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# $void \; ElementNodeVector ( \; const \; Vect < complex\_t > \& \; b, \; LocalVect < complex\_t \; , \; NEE\_ > \& \; be \; ) \quad [\texttt{inherited}]$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# $\label{localVect} woid \ ElementNodeVector (\ const \ Vect < complex_t > \&\ b,\ LocalVect < complex_t \ , \ NEN_- > \&\ be,\ int\ dof\ ) \ \ [inherited]$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< complex\_t > & b, LocalVect< complex\_t , NEN\_> & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< complex\_t > & b, LocalVect< complex\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< complex\_t > & b, int  $dof\_type = NODE\_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized	
in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>	
		SIDE_FIELD, DOFs are supported by sides	
in	flag	Option to set:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF number dof is handled in the system	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## ${f void\ SideVector\ (\ const\ Vect < complex\_t > \&\ b}$ ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized	
		NODE_FIELD, DOFs are supported by nodes [ default ]	
		ELEMENT_FIELD, DOFs are supported by elements	
		SIDE_FIELD, DOFs are supported by sides	
		The resulting local vector can be accessed by attribute ePrev.	

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_\mathtt{theSide}$ 

## void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}$ 

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < complex_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $PETScMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< complex\_t > & b ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( BMatrix< complex\_t > & A ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## $void\ ElementAssembly\ (\ SkSMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## $void\ ElementAssembly\ (\ SkMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

#### **Parameters**

in	Α	Global matrix stored as an SkMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( SpMatrix< complex\_t > & A ) [inherited]

Assemble element matrix into global one.

## Parameters

ir	. A	Global matrix stored as an SpMatrix instance	
----	-----	--	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( TrMatrix < complex.t > & A ) [inherited]

Assemble element matrix into global one.

in   A   Global matrix stored as an TrMatrix instance
---

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $Vect < complex_t > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

## void SideAssembly ( PETScMatrix< complex\_t > & A ) [inherited]

Assemble side matrix into global one.

#### Parameters

d		
	$\boldsymbol{A}$	Reference to global matrix


## Warning

The side pointer is given by the global variable the Side

## ${f void \ Side Assembly \ (\ PETScVect < complex_t > \&\ b}\ ) \quad {f [inherited]}$

Assemble side right-hand side vector into global one.

#### **Parameters**

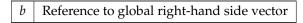

## Warning

The side pointer is given by the global variable the Side

## ${f void \ Side Assembly \ (\ Matrix{<}\ complex_t>*A\ )} \quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

## $void\ SideAssembly\ (\ SkSMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

## Warning

The side pointer is given by the global variable the Side

## ${f void \ Side Assembly \ ( \ SkMatrix < complex_t > \&\ A \ ) \ \ [{\tt inherited}]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < complex\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Vect< complex $_{ ext{-}}t > \& v$ ) [inherited]

Assemble side (edge or face) vector into global one.

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

## $void\ DGElementAssembly\ (\ Matrix < complex_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

## ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\,complex\_t>\&\,A\ )\quad [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

A	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## $void\ DGElementAssembly\ (\ SkMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## ${f void\ DGElementAssembly\ (\ SpMatrix{<\ complex\_t}>\&\ A\ )} \quad {f [inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< complex\_t > & x, Vect< complex\_t > & b) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# $\label{lem:const} \mbox{ void AxbAssembly ( const Side \& \it{sd}, const Vect < complex\_t > \& \it{x}, Vect < complex\_t > \& \it{b} ) } \\ \mbox{ [inherited]}$

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

## Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

## void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		GMRES_SOLVER, GMRES iterative solver	
		• QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

# int SolveLinearSystem ( Matrix< complex\_t > \* A, Vect< complex\_t > & b, Vect< complex\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.16.4 Member Data Documentation

LocalVect<complex\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

## 7.17 Edge Class Reference

To describe an edge.

## **Public Member Functions**

• Edge ()

Default Constructor.

• Edge (size\_t label)

Constructor with label.

• Edge (const Edge &ed)

Copy constructor.

• ~Edge ()

Destructor.

• void Add (Node \*node)

Insert a node at end of list of nodes of edge.

• void setLabel (size\_t i)

Assign label of edge.

void setFirstDOF (size\_t n)

Define First DOF.

void setNbDOF (size\_t nb\_dof)

Define number of DOF of edge.

void DOF (size\_t i, size\_t dof)

Define label of DOF.

• void setDOF (size\_t &first\_dof, size\_t nb\_dof)

Define number of DOF.

• void setCode (size\_t dof, int code)

Assign code code to DOF number dof.

void AddNeighbor (Side \*sd)

Add side pointed by sd to list of edge sides.

size\_t getLabel () const

Return label of edge.

• size\_t n () const

Return label of edge.

• size\_t getNbEq () const

Return number of edge equations.

• size\_t getNbDOF () const

Return number of DOF.

• int getCode (size\_t dof=1) const

Return code for a given DOF of node.

• size\_t getDOF (size\_t i) const

Return label of i-th DOF.

• size\_t getFirstDOF () const

Return number of first dof of node.

Node \* getPtrNode (size\_t i) const

List of element nodes.

Node \* operator() (size\_t i) const

Operator ().

• size\_t getNodeLabel (size\_t i) const

Return node label.

Side \* getNeighborSide (size\_t i) const

Return pointer to neighbor i-th side.

• int isOnBoundary () const

Say if current edge is a boundary edge or not.

• void setOnBoundary ()

Say that the edge is on the boundary.

Node \* operator() (size\_t i)

Operator ().

## 7.17.1 Detailed Description

To describe an edge.

Defines an edge of a 3-D finite element mesh. The edges are given in particular by a list of nodes. Each node can be accessed by the member function getPtrNode.

## 7.17.2 Constructor & Destructor Documentation

## Edge ( )

Default Constructor.

Initializes data to zero

## Edge ( size\_t label )

Constructor with label.

Define an edge by giving its label

#### 7.17.3 Member Function Documentation

void DOF ( size\_t i, size\_t dof )

Define label of DOF.

in	i	DOF index
in	dof	Its label

## void setDOF ( size\_t & first\_dof, size\_t nb\_dof )

Define number of DOF.

#### **Parameters**

in,out	first_dof	Label of the first DOF in input that is actualized
in	nb_dof	Number of DOF

## void setCode ( size\_t dof, int code )

Assign code code to DOF number dof.

#### Parameters

in	dof	index of dof for assignment.
in	code	Value of code to assign.

## int getCode ( $size_t dof = 1$ ) const

Return code for a given DOF of node. Default value is 1

## Node\* operator() ( size\_t i ) const

Operator ().

Return pointer to node of local label i.

## size\_t getNodeLabel ( size\_t i ) const

Return node label.

#### Parameters

in	i	Local label of node for which global label is returned
----	---	--

## int isOnBoundary ( ) const

Say if current edge is a boundary edge or not.

Note this information is available only if boundary edges were determined. See class Mesh

## Node\* operator() ( size\_t i )

Operator ().

Returns pointer to node of local label i

## 7.18 EdgeList Class Reference

Class to construct a list of edges having some common properties.

## **Public Member Functions**

• EdgeList (Mesh &ms)

Constructor using a Mesh instance.

• ∼EdgeList ()

Destructor.

• void selectCode (int code, int dof=1)

Select edges having a given code for a given degree of freedom.

void unselectCode (int code, int dof=1)

Unselect edges having a given code for a given degree of freedom.

• size\_t getNbEdges () const

Return number of selected edges.

• void top ()

Reset list of edges at its top position (Non constant version)

• void top () const

Reset list of edges at its top position (Constant version)

• Edge \* get ()

Return pointer to current edge and move to next one (Non constant version)

• Edge \* get () const

Return pointer to current edge and move to next one (Constant version)

## 7.18.1 Detailed Description

Class to construct a list of edges having some common properties.

This class enables choosing multiple selection criteria by using function select... However, the intersection of these properties must be empty.

#### 7.18.2 Member Function Documentation

void selectCode ( int code, int dof = 1 )

Select edges having a given code for a given degree of freedom.

#### Parameters

in	code	Code that edges share
in	dof	Degree of Freedom label [Default: 1]

#### void unselectCode ( int code, int dof = 1 )

Unselect edges having a given code for a given degree of freedom.

#### **Parameters**

in	code	Code of edges to exclude
in	dof	Degree of Freedom label [Default: 1]

## 7.19 EigenProblemSolver Class Reference

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, *i.e.* Find scalars 1 and non-null vectors v such that  $[K]\{v\} = l[M]\{v\}$  where [K] and [M] are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as *Stiffness* and *Mass* matrices respectively.

## **Public Member Functions**

• EigenProblemSolver ()

Default constructor.

• EigenProblemSolver (DSMatrix< real\_t > &K, int n=0)

Constructor for a dense symmetric matrix that computes the eigenvalues.

 $\bullet \ \ EigenProblemSolver \ (SkSMatrix < real\_t > \&K, SkSMatrix < real\_t > \&M, int \ n=0) \\$ 

Constructor for Symmetric Skyline Matrices.

• EigenProblemSolver (SkSMatrix < real\_t > &K, Vect < real\_t > &M, int n=0)

Constructor for Symmetric Skyline Matrices.

• EigenProblemSolver (DSMatrix< real\_t > &A, Vect< real\_t > &ev, int n=0)

Constructor for a dense matrix that compute the eigenvalues.

• EigenProblemSolver (AbsEqua < real\_t > &eq, bool lumped=true)

Consttuctor using partial differential equation.

• ~EigenProblemSolver ()

Destructor.

void setMatrix (SkSMatrix < real\_t > &K, SkSMatrix < real\_t > &M)

Set matrix instances (Symmetric matrices).

void setMatrix (SkSMatrix < real\_t > &K, Vect < real\_t > &M)

Set matrix instances (Symmetric matrices).

• void setMatrix (DSMatrix < real\_t > &K)

Set matrix instance (Symmetric matrix).

void setPDE (AbsEqua < real\_t > &eq, bool lumped=true)

Define partial differential equation to solve.

• int run (int nb=0)

Run the eigenproblem solver.

void Assembly (const Element &el, real\_t \*eK, real\_t \*eM)

Assemble element arrays into global matrices.

• void SAssembly (const Side &sd, real\_t \*sK)

Assemble side arrays into global matrix and right-hand side.

int runSubSpace (size\_t nb\_eigv, size\_t ss\_dim=0)

Run the subspace iteration solver.

• void setSubspaceDimension (int dim)

Define the subspace dimension.

• void setMaxIter (int max\_it)

set maximal number of iterations.

void setTolerance (real\_t eps)

set tolerance value

int checkSturm (int &nb\_found, int &nb\_lost)

Check how many eigenvalues have been found using Sturm sequence method.

• int getNbIter () const

Return actual number of performed iterations.

• real\_t getEigenValue (int n) const

Return the n-th eigenvalue.

• void getEigenVector (int n, Vect< real\_t > &v) const

Return the n-th eigenvector.

## 7.19.1 Detailed Description

Class to find eigenvalues and corresponding eigenvectors of a given matrix in a generalized eigenproblem, *i.e.* Find scalars I and non-null vectors v such that  $[K]\{v\} = I[M]\{v\}$  where [K] and [M] are symmetric matrices. The eigenproblem can be originated from a PDE. For this, we will refer to the matrices K and M as *Stiffness* and *Mass* matrices respectively.

## 7.19.2 Constructor & Destructor Documentation

## EigenProblemSolver ( DSMatrix < real t > & K, int n = 0 )

Constructor for a dense symmetric matrix that computes the eigenvalues.

This constructor solves in place the eigenvalues problem and stores them in a vector (No need to use the function runSubSpace). The eigenvectors can be obtained by calling the member function getEigenVector.

## Parameters

in	K	Matrix for which eigenmodes are sought.
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

## EigenProblemSolver ( SkSMatrix < real\_t > & M, int n = 0 )

Constructor for Symmetric Skyline Matrices.

#### **Parameters**

j	in	K	"Stiffness" matrix	
j	in	M	Diagonal "Mass" matrix stored as a Vect instance	
j	in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.	

#### Note

The generalized eigenvalue problem is defined by Kx = aMx, where K and M are referred to as stiffness and mass matrix.

## EigenProblemSolver (SkSMatrix< real\_t > & K, Vect< real\_t > & M, int n = 0)

Constructor for Symmetric Skyline Matrices.

#### **Parameters**

in	K	"Stiffness" matrix
in	M	Diagonal "Mass" matrix stored as a Vect instance
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

#### Note

The generalized eigenvalue problem is defined by Kx = aMx, where K and M are referred to as stiffness and mass matrix.

## EigenProblemSolver ( DSMatrix< real\_t > & A, Vect< real\_t > & ev, int n = 0 )

Constructor for a dense matrix that compute the eigenvalues.

This constructor solves in place the eigenvalues problem and stores them in a vector (No need to use the function runSubSpace). The eigenvectors can be obtained by calling the member function getEigenVector.

## **Parameters**

in	A	Matrix for which eigenmodes are sought.
in	ev	Vector containing all computed eigenvalues sorted increasingly.
in	n	Number of eigenvalues to extract. By default all eigenvalues are computed.

#### Remarks

The vector ev does not need to be sized before.

## EigenProblemSolver ( AbsEqua < real\_t > & eq, bool lumped = true )

Consttuctor using partial differential equation.

The used equation class must have been constructed using the Mesh instance

#### **Parameters**

in	eq	Reference to equation instance
in	lumped	Mass matrix is lumped (true) or not (false) [Default: true]

## 7.19.3 Member Function Documentation

## void setMatrix ( SkSMatrix < real\_t > & K, SkSMatrix < real\_t > & M )

Set matrix instances (Symmetric matrices).

This function is to be used when the default constructor is applied. Case where the mass matrix is consistent.

#### **Parameters**

in	K	Stiffness matrix instance
in	M	Mass matrix instance

## void setMatrix ( SkSMatrix < real\_t > & K, Vect < real\_t > & M )

Set matrix instances (Symmetric matrices).

This function is to be used when the default constructor is applied. Case where the mass matrix is (lumped) diagonal and stored in a vector.

#### **Parameters**

ir	. K	Stiffness matrix instance
ir	. M	Mass matrix instance where diagonal terms are stored as a vector.

## void setMatrix ( DSMatrix < real\_t > & K )

Set matrix instance (Symmetric matrix).

This function is to be used when the default constructor is applied. Case of a standard (not generalized) eigen problem is to be solved

## Parameters

in	K	Stiffness matrix instance

## void setPDE ( $AbsEqua < real_t > & eq$ , bool lumped = true )

Define partial differential equation to solve.

The used equation class must have been constructed using the Mesh instance

#### **Parameters**

i	in	eq	Reference to equation instance
i	in	lumped	Mass matrix is lumped (true) or not (false) [Default: true]

## int run ( int nb = 0 )

Run the eigenproblem solver.

in	nb	Number of eigenvalues to be computed. By default, all eigenvalues are computed.
----	----	---

## void Assembly ( const Element & el, real\_t \* eK, real\_t \* eM )

Assemble element arrays into global matrices.

This member function is to be called from finite element equation classes

#### **Parameters**

in	el	Reference to Element class
in	еK	Pointer to element stiffness (or assimilated) matrix
in	eМ	Pointer to element mass (or assimilated) matrix

## void SAssembly ( const Side & sd, real\_t \* sK )

Assemble side arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes

#### **Parameters**

in	sd	Reference to Side class
in	sK	Pointer to side stiffness

## int runSubSpace ( size\_t nb\_eigv, size\_t ss\_dim = 0 )

Run the subspace iteration solver.

This function rune the Bathe subspace iteration method.

## Parameters

in	nb_eigv	Number of eigenvalues to be extracted
in	ss_dim	Subspace dimension. Must be at least equal to the number eigenvalues to seek. [Default: nb_eigv]

## Returns

1: Normal execution. Convergence has been achieved. 2: Convergence for eigenvalues has not been attained.

## void setSubspaceDimension (int dim)

Define the subspace dimension.

in	dim	Subspace dimension. Must be larger or equal to the number of wanted
		eigenvalues. By default this value will be set to the number of wanted
		eigenvalues

## void setTolerance ( real\_t eps )

set tolerance value

#### Parameters

i	.n	eps	Convergence tolerance for eigenvalues [Default: 1.e-8]
---	----	-----	--

## int checkSturm ( int & nb\_found, int & nb\_lost )

Check how many eigenvalues have been found using Sturm sequence method.

#### **Parameters**

out	nb_found	number of eigenvalues actually found
out	nb_lost	number of eigenvalues missing

## Returns

- 0, Successful completion of subroutine.
  - 1, No convergent eigenvalues found.

## void getEigenVector ( int n, Vect< real\_t > & v ) const


Return the n-th eigenvector.

## Parameters

in	n	Label of eigenvector (They are stored in ascending order of eigenvalues)
in,out	v	Vect instance where the eigenvector is stored.

## 7.20 Elas2DQ4 Class Reference

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals. Inheritance diagram for Elas2DQ4:

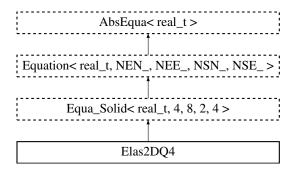

#### **Public Member Functions**

• Elas2DQ4 ()

Default Constructor.

• Elas2DQ4 (const Element \*el)

Constructor using element data.

• Elas2DQ4 (const Side \*sd)

Constructor using side data.

• Elas2DQ4 (const Element \*element, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using element and previous time data.

• Elas2DQ4 (const Side \*side, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using side and previous time data.

• ~Elas2DQ4 ()

Destructor.

• void PlaneStrain ()

Set plane strain hypothesis.

• void PlaneStrain (real\_t E, real\_t nu)

Set plane strain hypothesis by giving values of Young's modulus and Poisson ratio.

• void PlaneStress ()

Set plane stress hypothesis.

• void PlaneStress (real\_t E, real\_t nu)

Set plane stress hypothesis by giving values of Young's modulus and Poisson ratio.

• void LMassToLHS (real\_t coef=1.)

Add element lumped mass contribution to matrix after multiplication by coef [Default: 1].

• void LMassToRHS (real\_t coef=1.)

Add element lumped mass contribution to right-hand side after multiplication by coef [Default: 1].

• void LMass (real\_t coef=1.)

Add element lumped mass contribution to matrix and right-hand side after multiplication by  $coef[Default \leftarrow : 1]$ .

• void Mass (real\_t coef=1.)

Add element consistent mass contribution to matrix and right-hand side after multiplication by coef [Default: 1].

• void Deviator (real\_t coef=1.)

Add element deviatoric matrix to left-hand side after multiplication by coef [Default: 1].

• void DeviatorToRHS (real\_t coef=1.)

Add element deviatoric contribution to right-hand side after multiplication by coef [Default: 1].

• void Dilatation (real\_t coef=1.)

Add element dilatational contribution to left-hand side after multiplication by coef [Default: 1].

• void DilatationToRHS (real\_t coef=1.)

Add element dilatational contribution to right hand side after multiplication by coef [Default: 1].

void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right hand side after multiplication by coef

void BodyRHS (const Vect< real\_t > &bf, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

• void BoundaryRHS (UserData < real\_t > &ud)

Add boundary right-hand side term to right hand side after multiplication by coef

void BoundaryRHS (const Vect< real\_t > &sf)

Add boundary right-hand side term to right hand side.

int SignoriniContact (UserData< real\_t > &ud, real\_t coef=1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

• void Strain (LocalVect< real\_t, 3 > &eps)

Calculate strains at element barycenter.

• void Stress (LocalVect< real\_t, 3 > &s, real\_t &vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

• void Stress (LocalVect< real\_t, 3 > &sigma, LocalVect< real\_t, 3 > &s, real\_t &vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

• virtual void MassToLHS (real\_t coef=1)

Add consistent mass contribution to left-hand side.

virtual void MassToRHS (real\_t coef=1)

Add consistent mass contribution to right-hand side.

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

virtual void Stiffness (real\_t coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

• void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void updateBC (const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

```
    void ElementNodeVector (const Vect< real_t > &b, LocalVect< real_t, NEE_ > &be)
    Localize Element Vector from a Vect instance.
```

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)
   Localize Element Vector.
- void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

 $Return\ reference\ to\ linear\ solver\ instance.$ 

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)
 Solve the linear system.

#### **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

void Init (const Side \*sd)

Set side arrays to zero.

# 7.20.1 Detailed Description

To build element equations for 2-D linearized elasticity using 4-node quadrilaterals.

This class enables building finite element arrays for linearized isotropic elasticity problem in 2-D domains using 4-Node quadrilaterals.

Unilateral contact is handled using a penalty function. Note that members calculating element arrays have as an argument a real coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.20.2 Constructor & Destructor Documentation

### Elas2DQ4()

Default Constructor.

Constructs an empty equation.

Elas2DQ4 ( const Element \* element, const Vect < real\_t > & u, const real\_t & time = 0. )

Constructor using element and previous time data.

#### **Parameters**

in	element	Pointer to element
in	и	Vect instance containing solution at previous time step
in	time	Current time value [Default: 0]

Elas2DQ4 ( const Side \* side, const Vect < real\_t > & u, const real\_t & time = 0. )

Constructor using side and previous time data.

in	side	Pointer to side
in	и	Vect instance containing solution at previous time step
in	time	Current time value [Default: 0]

## 7.20.3 Member Function Documentation

## void PlaneStrain ( real\_t E, real\_t nu )

Set plane strain hypothesis by giving values of Young's modulus and Poisson ratio.

#### **Parameters**

in	Ε	Young's modulus
in	пи	Poisson ratio

### void PlaneStress ( real\_t E, real\_t nu )

Set plane stress hypothesis by giving values of Young's modulus and Poisson ratio.

#### **Parameters**

in	Е	Young's modulus
in	пи	Poisson ratio

## void DilatationToRHS ( real\_t coef = 1. ) [virtual]

Add element dilatational contribution to right hand side after multiplication by coef [Default: 1].

To use for explicit formulations

Reimplemented from Equa\_Solid < real\_t, 4, 8, 2, 4 >.

## void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right hand side after multiplication by coef Body forces are deduced from UserData instance ud

# void BodyRHS ( const Vect< real\_t > & bf, int $opt = GLOBAL\_ARRAY$ )

Add body right-hand side term to right hand side.

## Parameters

in	bf	Vector containing source at element nodes (DOF by DOF).
in	opt	Vector is local (LOCAL_ARRAY) with size 8 or global (GLOBAL_ARRAY) with size = Total number of DOF [Default: GLOBAL_ARRAY].

## void BoundaryRHS ( UserData < real\_t > & ud )

Add boundary right-hand side term to right hand side after multiplication by coef Boundary forces are deduced from UserData instance ud

## void BoundaryRHS ( const Vect< real\_t > & sf )

Add boundary right-hand side term to right hand side.

#### **Parameters**

in   sf   Vector containing source at element nodes (DOF by DOF).
---

## Warning

The vector sf is sidewise constant, *i.e.* its size is twice the number of sides.

# int SignoriniContact ( UserData < real\_t > & ud, real\_t coef = 1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

#### **Parameters**

in	ud	UserData instance defining contact data
in	coef	Penalty value by which the added term is multiplied [Default: 1.e07]

### Returns

0 if no contact was realized on this side, 1 otherwise

## void Strain ( LocalVect< real\_t, 3 > & eps )

Calculate strains at element barycenter.

#### Parameters

out	eps	Vector containing strains in element
-----	-----	--------------------------------------

## void Stress ( LocalVect< real\_t, 3 > & s, real\_t & vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

#### **Parameters**

out	S	LocalVect containing principal stresses in element
out	vm	Value of Von-Mises stress in element

## void Stress ( LocalVect< real\_t, 3 > & sigma, LocalVect< real\_t, 3 > & s, real\_t & vm)

Calculate principal stresses and Von-Mises stress at element barycenter.

#### **Parameters**

out	sigma	Vector containing principal stresses in element
out	S	Vector containing principal stresses in element
out	vm	Value of Von-Mises stress in element

## virtual void MassToLHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

#### Parameters

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

# virtual void MassToRHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

### Parameters

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

### void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real $_{ ext{-}}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs

### Remarks

The current element is pointed by \_theElement

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

### $void\ LocalNodeVector\ (\ Vect < real.t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.

### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations	
in dof Degree of freedom to transfer to the local vector		Degree of freedom to transfer to the local vector	

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_-type = NODE_-FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

### Parameters

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides

in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

# ${f void\ SideVector\ (\ const\ Vect < real\_t > \&\ b}$ ) [inherited]

Localize Side Vector.

#### **Parameters**

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Element pointer \_theElement

 ${\bf void} \; {\bf ElementAssembly} \; ( \; {\bf Matrix} {<} \; {\bf real} \; {\bf t} > * \; A \; \; ) \quad [{\tt inherited}]$ 

Assemble element matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( PETScMatrix< real.t> & A ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

### Warning

The element pointer is given by the global variable the Element

## $void\ ElementAssembly\ (\ PETScVect < real\_t > \&\ b\ )\ [inherited]$

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

## $void\ ElementAssembly\ (\ BMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

# Parameters

A Global matrix stored as a BMatrix instance

### Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void ElementAssembly ( $SkSMatrix{<}\,real\_t > \&\,A\ ) \quad [\mbox{inherited}] \\$

Assemble element matrix into global one.

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one.

### Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

# $void\ ElementAssembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

#### **Parameters**

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( Vect< real\_t > & v ) [inherited]

Assemble element vector into global one.

	in	v	Global vector (Vect instance)	
--	----	---	-------------------------------	--

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < real\_t > \&\ A\ ) \ [inherited]}$

Assemble side matrix into global one.

#### Parameters

A Reference to global matrix

#### Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

b Reference to global right-hand side vector

### Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ Matrix{<}\ real\_t>*A\ )}$ [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# ${\bf void\ Side Assembly\ (\ SkSMatrix{<}\ real.t>\&\ A\ )\quad [{\tt inherited}]}$

Assemble side (edge or face) matrix into global one.

in A Global matrix stored as	s an SkSMatrix instance
------------------------------	-------------------------

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

### Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

#### Parameters

ir	L	v	Global vector (Vect instance)
----	---	---	-------------------------------

### Warning

The side pointer is given by the global variable the Side

# ${\bf void} \ {\bf DGElementAssembly} \ ( \ {\bf Matrix} {<} \ {\bf real\_t} > {*A} \ ) \quad [{\tt inherited}]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void DGElementAssembly ( $SkMatrix{<}$ real_t > \& A ) } \mbox{ [inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

### void DGElementAssembly ( SpMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	1
--	----	---	--	---

## Warning

The element pointer is given by the global variable the Element

### void DGElementAssembly ( TrMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in A	Global matrix stored as an TrMatrix instance
------	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### Parameters

in	el	Reference to Element instance
in	х	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

## Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver( Iteration ls, Preconditioner pc = IDENT\_PREC) [inherited]

Choose solver for the linear system.

#### Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

# Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.20.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

## 7.21 Elas2DT3 Class Reference

To build element equations for 2-D linearized elasticity using 3-node triangles. Inheritance diagram for Elas2DT3:

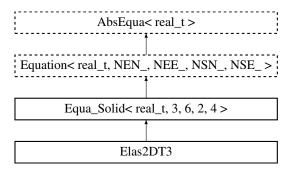

#### **Public Member Functions**

• Elas2DT3 ()

Default Constructor.

• Elas2DT3 (Mesh &ms)

Constructor using Mesh data.

• Elas2DT3 (const Element \*el)

Constructor using element data.

• Elas2DT3 (const Side \*sd)

Constructor using side data.

• Elas2DT3 (const Element \*el, const Vect< real\_t > &u, real\_t time=0.)

Constructor using element, previous time solution u and time value.

• Elas2DT3 (const Element \*el, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for an element (transient case) with specification of time integration scheme.

• Elas2DT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time=0.)

Constructor using side, previous time solution u and time value.

• Elas2DT3 (const Side \*sd, const Vect< real\_t > &u, real\_t time, real\_t deltat, int scheme)

Constructor for a side (transient case) with specification of time integration scheme.

• ~Elas2DT3 ()

Destructor.

• void Media (real\_t E, real\_t nu, real\_t rho)

Set media properties.

• void PlaneStrain ()

Set plane strain hypothesis.

• void PlaneStrain (real\_t E, real\_t nu)

Set plane strain hypothesis by giving values of Young's modulus E and Poisson ratio nu

void PlaneStress ()

Set plane stress hypothesis.

void PlaneStress (real\_t E, real\_t nu)

Set plane stress hypothesis by giving values of Young's modulus E and Poisson ratio nu

• void LMassToLHS (real\_t coef=1.)

Add element lumped mass contribution to matrix after multiplication by coef

• void LMassToRHS (real\_t coef=1.)

Add element lumped mass contribution to right-hand side after multiplication by coef

• void LMass (real\_t coef=1.)

Add element lumped mass contribution to matrix and right-hand side after multiplication by coef

• void MassToLHS (real\_t coef=1.)

Add element consistent mass contribution to matrix after multiplication by coef

• void MassToRHS (real\_t coef=1.)

Add element consistent mass contribution to right-hand side after multiplication by coef

• void Mass (real\_t coef=1.)

Add element consistent mass contribution to matrix and right-hand side after multiplication by coef

• void Deviator (real\_t coef=1.)

Add element deviatoric matrix to left-hand side after multiplication by coef

• void DeviatorToRHS (real\_t coef=1.)

Add element deviatoric contribution to right-hand side after multiplication by coef

• void Dilatation (real\_t coef=1.)

Add element dilatational contribution to left-hand side after multiplication by coef

• void DilatationToRHS (real\_t coef=1.)

Add element dilatational contribution to right-hand side after multiplication by coef

• void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right-hand side after multiplication by coef

void BodyRHS (const Vect< real\_t > &f, int opt=GLOBAL\_ARRAY)

Add body right-hand side term to right hand side.

• void BoundaryRHS (UserData < real\_t > &ud)

Add boundary right-hand side term to right hand side after multiplication by coef

void BoundaryRHS (const Vect< real\_t > &f)

Add boundary right-hand side term to right hand side.

• int SignoriniContact (UserData< real\_t > &ud, real\_t coef=1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

int SignoriniContact (Vect< real\_t > &f, real\_t coef=1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

void Reaction (Vect< real\_t > &r)

Calculate reactions.

• void ContactPressure (const Vect< real\_t > &f, real\_t penal, Point< real\_t > &p)

Calculate contact pressure.

void Strain (Vect< real\_t > &eps)

Calculate strains in element.

• void Stress (Vect< real\_t > &s, real\_t &vm)

Calculate principal stresses and Von-Mises stress in element.

• void Periodic (real\_t coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Stiffness (real\_t coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void updateBC (const Element &el, const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void updateBC (const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementVector (const Vect < real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect < real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x)

Solve the linear system.

#### **Public Attributes**

LocalMatrix < real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.21.1 Detailed Description

To build element equations for 2-D linearized elasticity using 3-node triangles.

This class enables building finite element arrays for linearized isotropic elasticity problem in 2-D domains using 3-Node triangles.

Unilateral contact is handled using a penalty function. Note that members calculating element arrays have as an argument a real coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.21.2 Constructor & Destructor Documentation

### Elas2DT3()

Default Constructor.

Constructs an empty equation.

### Elas2DT3 (Mesh & ms)

Constructor using Mesh data.

#### **Parameters**

in ms Mesh instanc	e
--------------------	---

# Elas2DT3 ( const Element \*el )

Constructor using element data.

#### **Parameters**

el Pointer to Element instance

### Elas2DT3 (const Side \* sd)

Constructor using side data.

#### **Parameters**

sd Pointer to Side instance

### Elas2DT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time = 0. )

Constructor using element, previous time solution u and time value.

#### **Parameters**

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# Elas2DT3 ( const Element \* el, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for an element (transient case) with specification of time integration scheme.

#### **Parameters**

in	el	Pointer to element.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value.
in	deltat	Time step.
in	scheme	Time Integration Scheme: To be chosen among the enumerated values:
		FORWARD_EULER: Forward Euler scheme
		BACKWARD_EULER: Backward Euler scheme,
		CRANK_NICOLSON: Crank-Nicolson Euler scheme.

## Elas2DT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time = 0. )

Constructor using side, previous time solution u and time value.

### Parameters

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].

# Elas2DT3 ( const Side \* sd, const Vect< real\_t > & u, real\_t time, real\_t deltat, int scheme )

Constructor for a side (transient case) with specification of time integration scheme.

#### Parameters

in	sd	Pointer to side.
in	и	Vect instance that contains solution at previous time step.
in	time	Current time value [Default: 0].
in	deltat	Time step.
in	scheme	Time Integration Scheme

## 7.21.3 Member Function Documentation

void Media ( real\_t E, real\_t nu, real\_t rho )

Set media properties.

Useful to override material properties deduced from mesh file.

### void LMassToLHS ( real\_t coef = 1. ) [virtual]

Add element lumped mass contribution to matrix after multiplication by coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

## void LMassToRHS ( real\_t coef = 1. ) [virtual]

Add element lumped mass contribution to right-hand side after multiplication by coef

#### **Parameters**

	in	coef	Coefficient to multiply by added term [Default: 1].
--	----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

## void LMass ( real\_t coef = 1. ) [virtual]

Add element lumped mass contribution to matrix and right-hand side after multiplication by coef

#### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

### void MassToLHS ( real\_t coef = 1. ) [virtual]

Add element consistent mass contribution to matrix after multiplication by coef

### **Parameters**

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

#### void MassToRHS ( real\_t coef = 1. ) [virtual]

Add element consistent mass contribution to right-hand side after multiplication by coef

# Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
111	coej	Coefficient to muniphy by added term [Default. 1].

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

### void Mass ( real\_t coef = 1. ) [virtual]

Add element consistent mass contribution to matrix and right-hand side after multiplication by coef

**Parameters** 

in   coef   Coefficient to multiply by added term [Default: 1].
---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

## void Deviator ( real\_t coef = 1. ) [virtual]

Add element deviatoric matrix to left-hand side after multiplication by coef

**Parameters** 

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

### void DeviatorToRHS ( real\_t coef = 1. ) [virtual]

Add element deviatoric contribution to right-hand side after multiplication by coef

**Parameters** 

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

### void Dilatation ( real\_t coef = 1. ) [virtual]

Add element dilatational contribution to left-hand side after multiplication by coef

Parameters

in	coef	Coefficient to multiply by added term [Default: 1].
----	------	---

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

## void DilatationToRHS ( real\_t coef = 1. ) [virtual]

Add element dilatational contribution to right-hand side after multiplication by coef To use for explicit formulations

**Parameters** 

in	coef	Coefficient to multiply by added term [Default: 1]

Reimplemented from Equa\_Solid < real\_t, 3, 6, 2, 4 >.

### void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right-hand side after multiplication by coef Body forces are deduced from UserData instance ud

### void BodyRHS ( const Vect< real\_t > & f, int $opt = GLOBAL\_ARRAY$ )

Add body right-hand side term to right hand side.

#### **Parameters**

in $f$ Vector containing source at element nodes (DOF		Vector containing source at element nodes (DOF by DOF)
in	opt	Vector is local (LOCAL_ARRAY) with size 6 or global (GLOBAL_ARRAY) with size = Number of element DOF [Default: GLOBAL_ARRAY].

# void BoundaryRHS ( UserData < real\_t > & ud )

Add boundary right-hand side term to right hand side after multiplication by coef

#### **Parameters**

	in	ud	UserData instance defining boundary forces	1
--	----	----	--	---

# void BoundaryRHS ( const Vect< real\_t > & f )

Add boundary right-hand side term to right hand side.

### Parameters

in	f	Vect instance that contains constant traction to impose to side.
----	---	--

## int SignoriniContact ( UserData< real\_t > & ud, real\_t coef = 1.e07)

Penalty Signorini contact side contribution to matrix and right-hand side.

#### Parameters

in	ud	UserData instance defining contact data
in	coef	Penalty value by which the added term is multiplied [Default: 1.e07]

### Returns

= 0 if no contact is achieved on this side, 1 otherwise

## int SignoriniContact ( Vect< real\_t > & f, real\_t coef = 1.e07 )

Penalty Signorini contact side contribution to matrix and right-hand side.

in	f	Vect instance that contains contact data	
in	coef	Penalty value by which the added term is multiplied [Default: 1.e07]	

#### Returns

= 0 if no contact is achieved on this side, 1 otherwise

### void Reaction ( Vect< real\_t > & r )

Calculate reactions.

This function can be invoked in postprocessing

#### Parameters

in r Reaction on th	he side
---------------------	---------

## void ContactPressure ( const Vect< real\_t > & f, real\_t penal, Point< real\_t > & p)

Calculate contact pressure.

This function can be invoked in postprocessing

#### **Parameters**

in	f	
in	penal	Penalty parameter that was used to impose contact condition
out	р	Contact pressure

## void Strain ( Vect< real\_t > & eps )

Calculate strains in element.

This function can be invoked in postprocessing.

## void Stress ( Vect< real\_t > & s, real\_t & vm )

Calculate principal stresses and Von-Mises stress in element.

#### **Parameters**

in	S	vector of principal stresses
in	vm	Von-Mises stress. This function can be invoked in postprocessing.

## void Periodic ( real\_t coef = 1.e20 )

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC\_A on one side and PERIODIC\_B on the opposite side.

#### **Parameters**

in	coef	Value of penalty parameter [Default: 1.e20]	]
----	------	---	---

# void updateBC ( const Element & el, const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real $_{ ext{-}}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

## $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< real\_t > \& b, LocalVect< real\_t , NEN_- > \& be, int dof ) \ \mbox{ [inherited]}$

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

## Remarks

Only yhe dega dof is transferred to the local vector

# $\label{lem:const} \begin{tabular}{ll} void ElementNodeVectorSingleDOF ( const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& b, LocalVect < real\_t , NEN\_ > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin{tabular}{ll} (const Vect < real\_t > \& be \end{tabular} \begin$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0) [inherited]

Localize Element Vector.

#### Parameters

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer  $\_$ theElement

 ${f void\ SideVector\ (\ const\ Vect< real\_t>\&\ b}$  ) [inherited]

Localize Side Vector.

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

#### void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}$ 

## Remarks

This member function uses the Element pointer \_theElement

### void ElementAssembly ( Matrix < real.t > \*A ) [inherited]

Assemble element matrix into global one.

#### Parameters

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## ${f void \ Element Assembly \ ( \ PETScMatrix < {\it real\_t} > \& A \ ) \ \ [{\it inherited}]}$

Assemble element matrix into global one.

A Reference to global matrix

### Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

#### Warning

The element pointer is given by the global variable the Element

 $void\ ElementAssembly\ (\ BMatrix < real\_t > \&\ A\ )\ [inherited]$ 

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as a BMatrix instance

#### Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $SkSMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{void ElementAssembly ( $SkMatrix{<}$ real\_t > \& A ) \quad [\mbox{inherited}] \\$ 

Assemble element matrix into global one.

in	A	Global matrix stored as an SkMatrix instance	
----	---	--	--

## Warning

The element pointer is given by the global variable the Element

# ${\bf void} \; {\bf ElementAssembly} \; ( \; {\bf SpMatrix} {<} \; {\bf real\_t} > \& \; A \; ) \quad [{\tt inherited}]$

Assemble element matrix into global one.

### Parameters

	in	A	Global matrix stored as an SpMatrix instance	1
--	----	---	--	---

### Warning

The element pointer is given by the global variable the Element

## ${f void \ Element Assembly \ ( \ TrMatrix < real.t > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an TrMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real\_t > \& v$ ) [inherited]

Assemble element vector into global one.

#### Parameters

ir	L	v	Global vector (Vect instance)
----	---	---	-------------------------------

### Warning

The element pointer is given by the global variable the Element

# ${\bf void \ Side Assembly \ ( \ PETScMatrix {< \ real\_t > \& \ A \ ) \quad [inherited]}$

Assemble side matrix into global one.

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

b Reference to global right-hand side vector

#### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ Matrix{<}\ real\_t>*A\ )}$ [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# $\begin{tabular}{ll} {\bf void SideAssembly (SkSMatrix < real.t > \& A) & [inherited] \\ \end{tabular}$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

### Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

### Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ Vect < real\_t > \&\ v\ )}$ [inherited]

Assemble side (edge or face) vector into global one.

# Parameters

in	v	Global vector (Vect instance)

### Warning

The side pointer is given by the global variable the Side

## ${f void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

$\boldsymbol{A}$	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	exp	Algebraic expression
in	prop	Property name

# Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

# Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

# Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.21.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.22 Elas3DH8 Class Reference

To build element equations for 3-D linearized elasticity using 8-node hexahedra. Inheritance diagram for Elas3DH8:

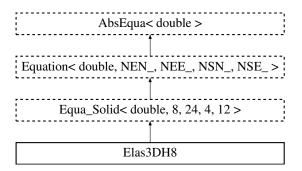

## **Public Member Functions**

• Elas3DH8 ()

Default Constructor.

• Elas3DH8 (const Element \*el)

Constructor using element data.

• Elas3DH8 (const Side \*sd)

Constructor using side data.

• Elas3DH8 (const Element \*element, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using element, previous time solution u and time value.

• Elas3DH8 (const Side \*side, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using side, previous time solution u and time value.

• ~Elas3DH8 ()

Destructor.

• void LMassToLHS (real\_t coef=1.)

Add element lumped mass contribution to matrix after multiplication by coef.

• void LMassToRHS (real\_t coef=1.)

Add element lumped mass contribution to right-hand side after multiplication by coef.

void LMass (real\_t coef)

Add element lumped mass contribution to right-hand and left-hand sides after multiplication by coef.

• void Mass (real\_t coef=1.)

Add element lumped mass contribution to matrix and right-hand side after multiplication by coef.

• void Deviator (real\_t coef=1.)

Add element deviatoric matrix to left-hand side after multiplication by coef.

• void DeviatorToRHS (real\_t coef=1.)

Add element deviatoric matrix to right-hand side after multiplication by coef.

• void Dilatation (real\_t coef=1.)

Add element dilatational contribution to left hand-side after multiplication by coef.

• void DilatationToRHS (real\_t coef=1.)

Add element dilatational contribution to right hand-side after multiplication by coef.

• void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right hand side.

void BoundaryRHS (const Vect< real\_t > &f)

Add boundary right-hand side term to right hand side.

void BodyRHS (const Vect< real\_t > &bf, int opt=LOCAL\_ARRAY)

Add body right-hand side term to right hand side.

• virtual void MassToLHS (real\_t coef=1)

Add consistent mass contribution to left-hand side.

• virtual void MassToRHS (real\_t coef=1)

Add consistent mass contribution to right-hand side.

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Stiffness (real\_t coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

• void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

• void updateBC (const Element &el, const Vect< double > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< double > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< double > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< double > &b, LocalVect< double, NEE\_> &be)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< double > &b, LocalVect< double, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

• void ElementNodeVectorSingleDOF (const Vect< double > &b, LocalVect< double, NE  $\sim$  N\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< double > &b, LocalVect< double, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< double > &b, int dof\_type=NODE\_FIELD, int flag=0)

• void SideVector (const Vect< double > &b)

Localize Side Vector.

Localize Element Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< double > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < double > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< double > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< double > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < double > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < double > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < double > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< double > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< double > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < double > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< double > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< double > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< double > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< double > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< double > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< double > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< double > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < double > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< double > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < double > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< double > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< double > &x, Vect< double > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< double > &x, Vect< double > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< double > &u)

Set initial solution (previous time step)

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < double > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< double > \*A, Vect< double > &b, Vect< double > &x) *Solve the linear system.* 

## **Public Attributes**

LocalMatrix< double, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

LocalMatrix< double, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< double, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< double, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< double, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< double, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.22.1 Detailed Description

To build element equations for 3-D linearized elasticity using 8-node hexahedra.

This class enables building finite element arrays for linearized isotropic elasticity problem in 3-D domains using 8-Node hexahedra.

Note that members calculating element arrays have as an argument a double coef that is multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.22.2 Constructor & Destructor Documentation

#### Elas3DH8()

Default Constructor.

Constructs an empty equation.

## 7.22.3 Member Function Documentation

## void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right hand side. Body forces are deduced from UserData instance *ud*.

## void BoundaryRHS ( const Vect< real\_t > & f )

Add boundary right-hand side term to right hand side.

### Parameters

in	f	Vector containing traction (boundary force) at sides

## void BodyRHS ( const Vect< real\_t > & bf, int opt = LOCAL\_ARRAY )

Add body right-hand side term to right hand side.

## Parameters

in	bf	Vector containing source at element nodes (DOF by DOF).
in	opt	Vector is local (LOCAL_ARRAY) with size 24 or global (GLOBAL_ARRAY) with size = Number of element DOF.
		size = Number of element DOF.

## virtual void MassToLHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

# virtual void MassToRHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

### **Parameters**

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

# void updateBC ( const Element & el, const Vect< double > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# ${f void\ update BC\ (\ const\ Vect < double > \&\ bc}$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# Parameters

in	bc	Vector that contains imposed values at all DOFs

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

i	.n	dof_type	DOF type option. To choose among the enumerated values:
			NODE_FIELD, DOFs are supported by nodes [Default]
			ELEMENT_FIELD, DOFs are supported by elements
			SIDE_FIELD, DOFs are supported by sides

in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# ${f void\ LocalNodeVector}$ ( ${f Vect}<{f double}>\&\,b$ ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< double > & b, LocalVect< double , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# $\label{local_vect} \mbox{void ElementNodeVector ( const Vect< double > \& \ b, \ \mbox{LocalVect} < \mbox{double , NEN}_- > \& \ be, \ \mbox{int } \ \mbox{dof )} \ \ [\mbox{inherited}]$

Localize Element Vector from a Vect instance.

in b Global vector to be localized.		Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< double > & b, LocalVect< double , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
ou	t be	Local vector, the length of which is the total number of element equations.

## Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< double > & b, LocalVect< double , NSE\_> & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< double > & b, int $dof\_type = NODE\_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized	
in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		ELEMENT_FIELD, DOFs are supported by elements	
		SIDE_FIELD, DOFs are supported by sides	
in	flag	Option to set:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF number dof is handled in the system	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer  $\_$ theElement

## void SideVector ( const Vect< double > & b ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

### Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

# ${f void \ Element Assembly \ ( \ Matrix < double > *A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# $void\ ElementAssembly\ (\ PETScMatrix < double > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

# Parameters

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< double > & b ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( BMatrix < double > & A ) [inherited]

Assemble element matrix into global one.

## **Parameters**

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## ${f void \ Element Assembly \ ( \ SkSMatrix < double > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ SkMatrix < double > \& A \ ) \ \ [{\tt inherited}]}$

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ SpMatrix < double > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < double > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ Vect < double > \&\ v \ ) \ \ [inherited]}$

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ ( \ PETScMatrix < double > \& A \ ) \ \ [inherited]}$

Assemble side matrix into global one.

## **Parameters**

A Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ PETScVect<\ double>\&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

## $void\ SideAssembly\ (\ Matrix < double > *A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

## **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SkSMatrix < double > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ ( \ SkMatrix < double > \& A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix < double > \&\ A\ )} \quad {f [inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ Vect < double > \&\ v\ )}$ [inherited]

Assemble side (edge or face) vector into global one.

## Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# ${f void\ DGElementAssembly\ (\ Matrix{<}\ double>*A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SkSMatrix < double > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly (SkMatrix < double > & A) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SpMatrix < double > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( TrMatrix < double > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< double > & x, Vect< double > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< double > & x, Vect< double > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

# Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int Solve LinearSystem ( Matrix< double > \* A, Vect< double > & b, Vect< double > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.22.4 Member Data Documentation


 $LocalVect{<}double\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.23 Elas3DT4 Class Reference

To build element equations for 3-D linearized elasticity using 4-node tetrahedra. Inheritance diagram for Elas3DT4:

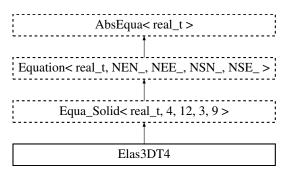

## **Public Member Functions**

• Elas3DT4 ()

Default Constructor.

• Elas3DT4 (const Element \*el)

Constructor using element data.

• Elas3DT4 (const Side \*sd)

Constructor using side data.

- Elas3DT4 (const Element \*element, const Vect< real\_t > &u, const real\_t &time=0.)
  - $Constructor\ using\ element\ and\ previous\ time\ data.$
- Elas3DT4 (const Side \*side, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using side and previous time data.

• ~Elas3DT4 ()

Destructor.

• void Media (real\_t E, real\_t nu, real\_t rho)

Set Media properties.

• void LMassToLHS (real\_t coef=1)

Add element lumped mass contribution to matrix after multiplication by coef.

• void LMassToRHS (real\_t coef=1)

Add element lumped mass contribution to right-hand side after multiplication by coef.

void LMass (real\_t coef)

Add element lumped mass contribution to matrix and right-hand side after multiplication by coef.

• void Deviator (real\_t coef=1.)

Add element deviatoric matrix to left hand-side after multiplication by coef.

• void DeviatorToRHS (real\_t coef=1.)

Add element deviatoric matrix to right hand-side after multiplication by coef.

• void Dilatation (real\_t coef=1.)

Add element dilatational contribution to left-hand side after multiplication by coef.

• void DilatationToRHS (real\_t coef=1.)

Add element dilatational contribution to right-hand side after multiplication by coef.

void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right hand side after multiplication by coef.

void BodyRHS (const Vect< real\_t > &f, int opt=LOCAL\_ARRAY)

Add body right-hand side term to right hand side.

void BoundaryRHS (const Vect< real\_t > &f)

Add boundary right-hand side term to right hand side.

void buildEigen (SkSMatrix< real\_t > &K, Vect< real\_t > &M)

Build global stiffness and mass matrices for the eigen system.

• virtual void MassToLHS (real\_t coef=1)

Add consistent mass contribution to left-hand side.

• virtual void MassToRHS (real\_t coef=1)

Add consistent mass contribution to right-hand side.

void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Mass (real\_t coef=1)

Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].

• virtual void Stiffness (real\_t coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

• void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

 $\bullet \ \ void \ Element Side Vector \ (const \ Vect < real\_t > \&b, \ Local Vect < real\_t, \ NSE\_ > \&be) \\$ 

Localize Element Vector from a Vect instance.

void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)
 Localize Element Vector.

void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect < real\_t > &x, Vect < real\_t > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

Local Vect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const real\_t &rho)

Set (constant) density.

void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.23.1 Detailed Description

To build element equations for 3-D linearized elasticity using 4-node tetrahedra.

This class enables building finite element arrays for linearized isotropic elasticity problem in 3-D domains using 4-Node tetrahedra.

# 7.23.2 Member Function Documentation

void Media ( real\_t E, real\_t nu, real\_t rho )

Set Media properties.

## **Parameters**

in	Ε	Young's modulus
in	пи	Poisson ratio
in	rho	Density

# void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right hand side after multiplication by *coef*. Body forces are deduced from UserData instance *ud*.

# void BodyRHS ( const Vect< real\_t > & f, int $opt = LOCAL\_ARRAY$ )

Add body right-hand side term to right hand side.

in	f	Vect instance containing source at element nodes (DOF by DOF).
in	opt	Vector is local (LOCAL_ARRAY) with size 12 or global (GLOBAL_ARRAY) with size = Number of element DOF.

## void BoundaryRHS ( const Vect< real\_t > & f )

Add boundary right-hand side term to right hand side.

#### **Parameters**

in	f	Vect instance that contains constant traction to impose to side.
----	---	--

# void buildEigen ( SkSMatrix< real\_t > & K, Vect< real\_t > & M)

Build global stiffness and mass matrices for the eigen system. Case where the mass matrix is lumped

## **Parameters**

in	K	Stiffness matrix
in	M	Vector containing diagonal mass matrix

## virtual void MassToLHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to left-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

# virtual void MassToRHS ( real\_t coef = 1 ) [virtual], [inherited]

Add consistent mass contribution to right-hand side.

# Parameters

in	coef	coefficient to multiply by the vector before adding [Default: 1]

# void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real $_{-}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		• SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector\ (\ Vect < real\_t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

# Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	L	b	Global vector to be localized.
ou	ıt	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.	
in	dof	Degree of freedom to transfer to the local vector	

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_- > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_{-}$ t > & b ) [inherited]

Localize Side Vector.

# Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_\mathtt{theSide}$ 

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}^{t}$ 

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real $_{ ext{-}}t > \& b$ ) [inherited]

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly (\ BMatrix < real\_t > \&\ A\ )} \quad \hbox{\tt [inherited]}$

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $SkSMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

## **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SkMatrix < real\_t > \&\ A \ ) \ \ [inherited]}$ 

Assemble element matrix into global one.

### **Parameters**

in	A	Global matrix stored as an SkMatrix instance

# Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SpMatrix < real\_t > \&\ A \ ) \ \ [inherited]}$ 

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance

## Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

in   A   Global matrix stored as an TrMatrix instance
---

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# ${f void\ Side Assembly\ (\ PETScMatrix < real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble side matrix into global one.

## Parameters

d		
	$\boldsymbol{A}$	Reference to global matrix


# Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

### **Parameters**

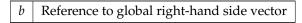

# Warning

The side pointer is given by the global variable the Side

# ${\bf void\ Side Assembly\ (\ Matrix {<}\ real\_t > *A\ )} \quad \hbox{\tt [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ ( \ SkMatrix < real\_t > \&\ A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix < real_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

## Warning

The element pointer is given by the global variable the Element

# ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\ real\_t>\&\ A\ )\ \ [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

## Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh() const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER		
		DIRECT_SOLVER, Use a facorization solver [default]		
		CG_SOLVER, Conjugate Gradient iterative solver		
		CGS_SOLVER, Squared Conjugate Gradient iterative solver		
		BICG_SOLVER, BiConjugate Gradient iterative solver		
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver		
		GMRES_SOLVER, GMRES iterative solver		
		• QMR_SOLVER, QMR iterative solver		
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:		
		IDENT_PREC, Identity preconditioner (no preconditioning [default])		
		DIAG_PREC, Diagonal preconditioner		
		ILU_PREC, Incomplete LU factorization preconditioner		

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.23.3 Member Data Documentation

LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.24 Element Class Reference

To store and treat finite element geometric information.

## **Public Member Functions**

• Element ()

Default constructor.

Element (size\_t label, const string &shape)

Constructor initializing label, shape of element.

• Element (size\_t label, int shape)

Constructor initializing label, shape of element.

• Element (size\_t label, const string &shape, int c)

Constructor initializing label, shape and code of element.

• Element (size\_t label, int shape, int c)

Constructor initializing label, shape and code of element.

• Element (const Element &el)

Copy constructor.

~Element ()

Destructor.

void setLabel (size\_t i)

Define label of element.

void setCode (int c)

Define code of element.

• void setCode (const string &exp, int code)

Define code by a boolean algebraic expression invoking coordinates of element nodes.

• void Add (Node \*node)

Insert a node at end of list of nodes of element.

• void Add (Node \*node, int n)

*Insert a node and set its local node number.* 

void Replace (size\_t label, Node \*node)

Replace a node at a given local label.

• void Replace (size\_t label, Side \*side)

Replace a side at a given local label.

• void Add (Side \*sd)

Assign Side to Element.

• void Add (Side \*sd, int k)

Assign Side to Element with assigned local label.

void Add (Element \*el)

Add a neighbor element.

• void set (Element \*el, int n)

Add a neighbor element and set its label.

void setDOF (size\_t i, size\_t dof)

Define label of DOF.

• void setCode (size\_t dof, int code)

Assign code to a DOF.

• void setNode (size\_t i, Node \*node)

Assign a node given by its pointer as the i-th node of element.

void setNbDOF (size\_t i)

Set number of degrees of freedom of element.

• void setFirstDOF (size\_t i)

Set label of first DOF in element.

• int getShape () const

Return element shape.

• size\_t getLabel () const

Return label of element.

• size\_t n () const

 $Return\ label\ of\ element.$ 

• int getCode () const

Return code of element.

size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbVertices () const

Return number of element vertices.

• size\_t getNbSides () const

Return number of element sides (Constant version)

• size\_t getNbEq () const

Return number of element equations.

• size\_t getNbDOF () const

return element nb of DOF

• size\_t getDOF (size\_t i=1) const

Return element DOF label.

• size\_t getFirstDOF () const

Return element first DOF label.

• size\_t getNodeLabel (size\_t n) const

Return global label of node of local label i.

size\_t getSideLabel (size\_t n) const

Return global label of side of local label i.

• Node \* getPtrNode (size\_t i) const

Return pointer to node of label i (Local labelling).

Node \* operator() (size\_t i) const

Operator ().

• Side \* getPtrSide (size\_t i) const

Return pointer to side of label i (Local labelling).

• int Contains (const Node \*nd) const

Say if element contains given node.

• int Contains (const Node &nd) const

Say if element contains given node.

• int Contains (const Side \*sd) const

Say if element contains given side.

• int Contains (const Side &sd) const

Say if element contains given side.

• Element \* getNeighborElement (size\_t i) const

Return pointer to element Neighboring element.

• size\_t getNbNeigElements () const

Return number of neigboring elements.

real\_t getMeasure () const

Return measure of element.

• Point< real\_t > getUnitNormal (size\_t i) const

Return outward unit normal to i-th side of element.

• bool isOnBoundary () const

Say if current element is a boundary element or not.

• Node \* operator() (size\_t i)

Operator ().

• int setSide (size\_t n, size\_t \*nd)

Initialize information on element sides.

• bool isActive () const

Return true or false whether element is active or not.

• int getLevel () const

Return element level *Element* level decreases when element is refined (starting from 0). If the level is 0, then the element has no father.

void setChild (Element \*el)

Assign element as child of current one and assign current element as father This function is principally used when refining is invoked (e.g. for mesh adaption)

• Element \* getChild (size\_t i) const

Return pointer to i-th child element Return null pointer is no childs.

size\_t getNbChilds () const

Return number of children of element.

• Element \* getParent () const

Return pointer to parent element Return null if no parent.

• size\_t IsIn (const Node \*nd)

Check if a given node belongs to current element.

# 7.24.1 Detailed Description

To store and treat finite element geometric information.

Class Element enables defining an element of a finite element mesh. The element is given in particular by its shape and a list of nodes. Each node can be accessed by the member function getPtrNode. Moreover, class Mesh can generate for each element its list of sides. The string that defines the element shape must be chosen according to the following list:

#### Remarks

Once a Mesh instance is constructed, one has access for each Element of the mesh to pointers to element sides provided the member function getAllSides of Mesh has been invoked. With this, an element can be tested to see if it is on the boundary, i.e. if it has at least one side on the boundary

# 7.24.2 Constructor & Destructor Documentation

# Element ( size\_t label, const string & shape )

Constructor initializing label, shape of element.

#### **Parameters**

iı	ı label	Label to assign to element.
iı	shape	Shape of element (See class description).

### Element ( size\_t label, int shape )

Constructor initializing label, shape of element.

#### **Parameters**

in	label Label to assign to element.	
in	shape	Shape of element (See enum ElementShape in Mesh)

### Element ( size\_t label, const string & shape, int c )

Constructor initializing label, shape and code of element.

### Parameters

in	label	Label to assign to element.
in	shape	Shape of element (See class description).
in	С	Code to assign to element (useful for media properties).

#### Element ( size\_t label, int shape, int c )

Constructor initializing label, shape and code of element.

in	label	abel Label to assign to element.  Shape of element (See enum ElementShape in Mesh).	
in	shape		
in	С	Code to assign to element (useful for media properties).	

# 7.24.3 Member Function Documentation

# void setLabel ( $size_t i$ )

Define label of element.

#### **Parameters**

	in	i	Label to assign to element
--	----	---	----------------------------

# void setCode ( int c )

Define code of element.

# Parameters

in	С	Code to assign to element.
----	---	----------------------------

# void setCode ( const string & exp, int code )

Define code by a boolean algebraic expression invoking coordinates of element nodes.

#### Parameters

in	ехр	Boolean algebraic expression as required by fparser
in	n code Code to assign to node if the algebraic expression is	

# void Add ( Node \* node )

Insert a node at end of list of nodes of element.

# Parameters

in	node	Pointer to Node instance.

# void Add ( Node \* node, int n )

Insert a node and set its local node number.

	node	[in] Pointer to Node instance
in	n	Element node number to assign

# void Replace ( size\_t label, Node \* node )

Replace a node at a given local label.

# Parameters

in	label	Node to replace.	
in	node	Pointer to Node instance to copy to current instance.	

# void Replace ( size\_t label, Side \* side )

Replace a side at a given local label.

# Parameters

in	label	Side to replace.
in	side	Pointer to Side instance to copy to current instance.

# void Add ( Side \* sd )

Assign Side to Element.

#### Parameters

in	sd	Pointer to Side instance.

# void Add ( Side \* sd, int k )

Assign Side to Element with assigned local label.

# Parameters

in	sd	Pointer to Side instance.
in	k	Local label.

# void Add ( Element \*el )

Add a neighbor element.

	in	el	Pointer to Element instance	
--	----	----	-----------------------------	--

# void set ( Element \*el, int n )

Add a neighbor element and set its label.

#### Parameters

in	el	Pointer to Element instance
in	n	Neighbor element number to assign

# void setDOF ( size\_t i, size\_t dof )

Define label of DOF.

# Parameters

in	i	Index of DOF.
in	dof	Label of DOF to assign.

# void setCode ( size\_t dof, int code )

Assign code to a DOF.

#### Parameters

in	dof	Index of dof for assignment.
in	code	Code to assign.

# Node\* operator() ( size\_t i ) const

Operator ().

Return pointer to node of local label i.

# int Contains (const Node \* nd) const

Say if element contains given node.

This function tests if the element contains a node with the same pointer at the sought one

in	nd	Pointer to Node instance
----	----	--------------------------

#### Returns

Local node label in element. If 0, the element does not contain this node

#### int Contains (const Node & nd) const

Say if element contains given node.

This function tests if the element contains a node with the same label at the sought one

#### **Parameters**

in	nd	Reference to Node instance

#### Returns

Local node label in element. If 0, the element does not contain this node

# int Contains (const Side \* sd) const

Say if element contains given side.

This function tests if the element contains a side with the same pointer at the sought one

#### **Parameters**

in sd	Pointer to Side instance
-------	--------------------------

#### Returns

Local side label in element. If 0, the element does not contain this side

# int Contains (const Side & sd) const

Say if element contains given side.

This function tests if the element contains a side with the same label at the sought one

# Parameters

in	sd	Reference to Side instance

#### Returns

Local side label in element. If 0, the element does not contain this side

# Element\* getNeighborElement ( size\_t i ) const

Return pointer to element Neighboring element.

in	i	Index of element to look for.

#### Note

This method returns valid information only if the Mesh member function Mesh::getElement ← NeighborElements() has been called before.

# size\_t getNbNeigElements ( ) const

Return number of neigboring elements.

Note

This method returns valid information only if the Mesh member function Mesh::getElement ← NeighborElements() has been called before.

#### real\_t getMeasure ( ) const

Return measure of element.

This member function returns length, area or volume of element. In case of quadrilaterals and hexahedrals it returns determinant of Jacobian of mapping between reference and actual element

# Point<real\_t> getUnitNormal ( size\_t i ) const

Return outward unit normal to i-th side of element.

Sides are ordered [node\_1,node\_2], [node\_2,node\_3], ...

# bool isOnBoundary ( ) const

Say if current element is a boundary element or not.

Note

this information is available only if boundary elements were determined i.e. if member function Mesh::getBoundarySides or Mesh::getAllSides has been invoked before.

#### Node\* operator() ( size\_t i )

Operator ().

Return pointer to node of local label i.

# int setSide ( size\_t n, size\_t \* nd )

Initialize information on element sides.

This function is to be used to initialize loops over sides.

in	п	Label of side.	
in	nd	Array of pointers to nodes of the side (nd[0], nd[1], point to first, second nodes,	

#### void setChild ( Element \* el )

Assign element as child of current one and assign current element as father This function is principally used when refining is invoked (e.g. for mesh adaption)

#### **Parameters**

in	el	Pointer to element to assign
----	----	------------------------------

# size\_t IsIn ( const Node \* nd )

Check if a given node belongs to current element.

#### **Parameters**

in	nd	Pointer to node to locate
----	----	---------------------------

#### Returns

local label of node if this one is found, 0 otherwise

# 7.25 ElementList Class Reference

Class to construct a list of elements having some common properties.

# **Public Member Functions**

• ElementList (Mesh &ms)

Constructor using a Mesh instance.

• ∼ElementList ()

Destructor.

• void selectCode (int code)

Select elements having a given code.

• void unselectCode (int code)

Unselect elements having a given code.

void selectLevel (int level)

Select elements having a given level.

• size\_t getNbElements () const

Return number of selected elements.

• void top ()

Reset list of elements at its top position (Non constant version)

• void top () const

*Reset list of elements at its top position (Constant version)* 

• Element \* get ()

Return pointer to current element and move to next one (Non constant version)

• Element \* get () const

Return pointer to current element and move to next one (Constant version)

# 7.25.1 Detailed Description

Class to construct a list of elements having some common properties.

This class enables choosing multiple selection criteria by using function select... However, the intersection of these properties must be empty.

# 7.25.2 Member Function Documentation

void unselectCode ( int code )

Unselect elements having a given code.

**Parameters** 

in code	Code of elements to exclude
---------	-----------------------------

# void selectLevel ( int level )

Select elements having a given level.

**Parameters** 

in	level	Level of elements to select
----	-------	-----------------------------

Elements having a given level (for mesh adaption) are selected in a list

# 7.26 Ellipse Class Reference

To store and treat an ellipsoidal figure. Inheritance diagram for Ellipse:



# **Public Member Functions**

• Ellipse ()

Default constructor.

• Ellipse (Point< real\_t > c, real\_t a, real\_t b, int code=1)

Constructor with given data.

real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current ellipse.

• Ellipse & operator+= (Point< real\_t > a)

Operator +=

• Ellipse & operator+= (real\_t a)

Operator \*=

• void setCode (int code)

Choose a code for the domain defined by the figure.

- void getSignedDistance (const Grid &g, Vect< real\_t > &d) const
  - Calculate signed distance to current figure with respect to grid points.
- real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
   const

Compute signed distance from a line.

# 7.26.1 Detailed Description

To store and treat an ellipsoidal figure.

# 7.26.2 Constructor & Destructor Documentation

# Ellipse ( )

Default constructor.

Constructs an ellipse with semimajor axis = 1, and semiminor axis = 1

# Ellipse ( Point< real\_t > c, real\_t a, real\_t b, int code = 1 )

Constructor with given data.

#### **Parameters**

in	С	Coordinates of center
in	а	Semimajor axis
in	b	Semiminor axis
in	code	Code to assign to the generated figure [Default: 1]

# 7.26.3 Member Function Documentation

real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current ellipse.

The computed distance is negative if p lies in the ellipse, positive if it is outside, and 0 on its boundary

#### **Parameters**

in	p	Point <double> instance</double>
----	---	----------------------------------

Reimplemented from Figure.

# Ellipse& operator+= ( Point< real\_t > a )

Operator +=

Translate ellipse by a vector a

# 7.27. EQUA\_ELECTROMAGNETICS < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE REFERENCE CHAPTER 7. CLASS DOCUMENTATION

# Ellipse& operator+= ( real\_t a )

Operator \*=

Scale ellipse by a factor a

# void getSignedDistance ( const Grid & g, Vect< real\_t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

#### **Parameters**

in	8	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

#### Remarks

Vector d doesn't need to be sized before invoking this function

# real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const [inherited]

Compute signed distance from a line.

#### **Parameters**

in	р	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line


#### Returns

Signed distance

# 7.27 Equa\_Electromagnetics< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Class Template Reference

Abstract class for Electromagnetics Equation classes.

Inheritance diagram for Equa\_Electromagnetics < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >:

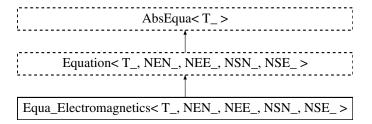

# **Public Member Functions**

• void updateBC (const Element &el, const Vect< T\_> &bc)

# 7.27. EQUA\_ELECTROMAGNETICS< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION REFERENCE

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

• void LocalNodeVector (Vect< T<sub>-</sub> > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_-> &b, LocalVect< T\_-, NEN\_-> &be, int dof)

Localize Element Vector from a Vect instance.

• void ElementNodeVectorSingleDOF (const Vect< T\_> &b, LocalVect< T\_, NEN\_> &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_, NSE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< T\_> &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect< T<sub>-</sub> > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< T\_> &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< T\_> &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< T<sub>-</sub> > &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix< T\_> &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< T<sub>-</sub>>\*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< T<sub>−</sub> > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix < T\_ > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void AxbAssembly (const Element &el, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T<sub>-</sub> > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix < T\_> \*A, Vect < T\_> &b, Vect < T\_> &x)

Solve the linear system.

#### **Public Attributes**

• LocalMatrix< T\_, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< T\_, NSE\_, NSE\_> sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< T\_, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< T\_, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< T\_, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< T\_, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

void MagneticPermeability (const real\_t &mu)

Set (constant) magnetic permeability.

• void MagneticPermeability (const string &exp)

Set magnetic permeability given by an algebraic expression.

void ElectricConductivity (const real\_t &sigma)

Set (constant) electric conductivity.

• void ElectricConductivity (const string &exp)

set electric conductivity given by an algebraic expression

• void ElectricResistivity (const real\_t &rho)

Set (constant) electric resistivity.

• void ElectricResistivity (const string &exp)

Set electric resistivity given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.27.1 Detailed Description

template<class T\_, size\_t NEN\_, size\_t NEE\_, size\_t NSN\_, size\_t NSE\_> class OFELI::Equa\_Electromagnetics< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Electromagnetics Equation classes.

# Template Parameters

<t_></t_>	data type (double, float,)
<nen></nen>	Number of element nodes
<nee←< td=""><td>Number of element equations</td></nee←<>	Number of element equations
_>	

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE<br/> REFERENCE CHAPTER 7. CLASS DOCUMENTATION

# **Template Parameters**

<nsn←< th=""><th>Number of side nodes</th></nsn←<>	Number of side nodes
_>	
<nse_></nse_>	Number of side equations

# 7.27.2 Member Function Documentation

void updateBC ( const Element & el, const Vect<  $T_- > \& bc$  ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< $T_-> \&\ bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION<br/> REFERENCE

# void LocalNodeVector ( Vect< $T_->$ & b ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEE $_-> \& be$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEN $_-> \& be$ , int dof ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	in b Global vector to be localized.	
out be Local vector, the length of which is the total number of element equation		
in	dof Degree of freedom to transfer to the local vector	

# Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< T $_->$ & b, LocalVect< T $_-$ , NEN $_->$ & be) [inherited]

Localize Element Vector from a Vect instance.

i	.n	b	Global vector to be localized.
0	out	be	Local vector, the length of which is the total number of element equations.

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE<br/> REFERENCE CHAPTER 7. CLASS DOCUMENTATION

# Remarks

Vector b is assumed to contain only one degree of freedom by node.

void ElementSideVector ( const Vect<  $T_-> \& b$ , LocalVect<  $T_-$ , NSE\_-> & be ) [inherited] Localize Element Vector from a Vect instance.

# Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect<  $T_- > \& b$ , int  $dof_-type = NODE_-FIELD$ , int flag = 0) [inherited]

Localize **Element** Vector.

#### Parameters

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

void SideVector ( const Vect<  $T_-> \& b$  ) [inherited]

Localize Side Vector.

# 7.27. EQUA\_ELECTROMAGNETICS< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION REFERENCE

#### **Parameters**

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

#### void ElementNodeCoordinates() [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{coint}<_{coint}$ 

#### Remarks

This member function uses the Side pointer \_theSide

# void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}$ 

# Remarks

This member function uses the **Element** pointer \_theElement

# void ElementAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix $< T_- > \& A$ ) [inherited]

Assemble element matrix into global one.





A Reference to global matrix

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $BMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly (SkSMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < T_- > \& A$ ) [inherited]

Assemble element matrix into global one.

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION<br/> REFERENCE

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $TrMatrix < T_- > \& A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( Vect< $T_- > \& v$ ) [inherited]

Assemble element vector into global one.

#### Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

# Warning

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix $< T_- > \& A$ ) [inherited]

Assemble side matrix into global one.

# 7.27. EQUA\_ELECTROMAGNETICS< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE REFERENCE CHAPTER 7. CLASS DOCUMENTATION

**Parameters** 

A Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

b Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

# Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkSMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

#### Warning

The side pointer is given by the global variable theSide

# void SideAssembly ( SkMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION<br/> REFERENCE

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< $T_- > \& v$ ) [inherited]

Assemble side (edge or face) vector into global one.

# Parameters

in	v	Global vector (Vect instance)

#### Warning

The side pointer is given by the global variable the Side

# void DGElementAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# 7.27. EQUA\_ELECTROMAGNETICS < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE REFERENCE CHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < T_- > \&A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly (SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< $T_- > & x$ , Vect< $T_- > & b$ ) [inherited]

Assemble product of element matrix by element vector into global vector.

# 7.27. EQUA\_ELECTROMAGNETICS<br/> < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CLASS TEMPLATE CHAPTER 7. CLASS DOCUMENTATION<br/> REFERENCE

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly ( const Side & sd, const Vect<  $T_- > \& x$ , Vect<  $T_- > \& b$  ) [inherited] Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

# Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

void setSolver ( Iteration ls, Preconditioner  $pc = IDENT\_PREC$  ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		<ul> <li>IDENT_PREC, Identity preconditioner (no preconditioning [default])</li> </ul>
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix <  $T_- > *A$ , Vect <  $T_- > \&$  b, Vect <  $T_- > \&$  x ) [inherited] Solve the linear system.

# Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.27.3 Member Data Documentation

 $LocalVect {<} T\_, NEE\_{>} \, ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.28 Equa\_Fluid< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Class Template Reference

Abstract class for Fluid Dynamics Equation classes.

Inheritance diagram for Equa\_Fluid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >:

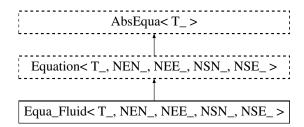

#### **Public Member Functions**

• Equa\_Fluid ()

Default constructor.

• virtual ~Equa\_Fluid ()

Destructor.

• void updateBC (const Element &el, const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

• void LocalNodeVector (Vect< T\_> &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEN\_> &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< T<sub>-</sub> > &b, LocalVect< T<sub>-</sub>, NEN<sub>-</sub> > &be)
 Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_-, NSE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< T\_> &b, int dof\_type=NODE\_FIELD, int flag=0)

• void SideVector (const Vect< T\_> &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize Element Vector.

Localize coordinates of side nodes.

void ElementAssembly (Matrix< T<sub>-</sub> > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < T\_ > &A)

Assemble element matrix into global one.

void ElementAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< T<sub>-</sub> > &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix< T<sub>-</sub> > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < T<sub>-</sub> > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix < T\_ > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< T\_> &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< T<sub>-</sub>>&A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T\_> &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix < T\_ > \*A, Vect < T\_ > &b, Vect < T\_ > &x)

Solve the linear system.

# **Public Attributes**

• LocalMatrix< T\_, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< T\_, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< T\_, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< T\_, NEE\_ > eRHS

Local Vect instance containing local right-hand side vector associated to current element.

• LocalVect< T\_, NEE\_ > eRes

Local Vect instance containing local residual vector associated to current element.

• LocalVect< T\_, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

• void Viscosity (const real\_t &visc)

Set (constant) Viscosity.

• void Viscosity (const string &exp)

Set viscosity given by an algebraic expression.

• void Density (const real\_t &dens)

Set (constant) Viscosity.

• void Density (const string &exp)

Set Density given by an algebraic expression.

• void ThermalExpansion (const real\_t \*e)

Set (constant) thermal expansion coefficient.

• void ThermalExpansion (const string &exp)

Set thermal expansion coefficient given by an algebraic expression.

void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.28.1 Detailed Description

template<class  $T_-$  = real\_t, size\_t NEN\_ = 3, size\_t NEE\_ = 3, size\_t NSN\_ = 2, size\_t NSE\_ = 2> class OFELI::Equa\_Fluid<  $T_-$ , NEN\_, NEE\_, NSN\_, NSE\_ >

Abstract class for Fluid Dynamics Equation classes.

**Template Parameters** 

<t_></t_>	data type (double, float,)
<nen></nen>	Number of element nodes
<nee↔< th=""><th>Number of element equations</th></nee↔<>	Number of element equations
_>	
<nsn←< th=""><th>Number of side nodes</th></nsn←<>	Number of side nodes
_>	
< <i>NSE_&gt;</i>	Number of side equations

# 7.28.2 Constructor & Destructor Documentation

# Equa\_Fluid ( )

Default constructor.

Constructs an empty equation.

# 7.28.3 Member Function Documentation

void updateBC (const Element & el, const Vect<  $T_- > \& bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

ir	el	Reference to current element instance
ir	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< $T_-> \&\ bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

# Remarks

The current element is pointed by \_theElement

void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

**OFELI's Reference Guide** 

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect< T_-> \&\ b$ ) [inherited]

Localize **Element** Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# 

Localize Element Vector from a Vect instance.

# Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

# Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEN $_-> \& be$ , int dof ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

# Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< $T_-> \& b$ , LocalVect< $T_-, NEN_-> \& be$ ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< T $_->$ & b, LocalVect< T $_-$ , NSE $_->$ & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< $T_- > \& b$ , int $dof_-type = NODE_-FIELD$ , int flag = 0) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

### void SideVector ( const Vect< T $_-> & b$ ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized	
		NODE_FIELD, DOFs are supported by nodes [ default ]	
		ELEMENT_FIELD, DOFs are supported by elements	
		SIDE_FIELD, DOFs are supported by sides	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Side pointer \_theSide

# void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the **Element** pointer \_theElement

# void ElementAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# 7.28. EQUA\_FLUID< T\_, NEN\_, NEE\_, NSN\_, NSE\_ XCHIAAPSEREMIZILAISS INCREDIBINISTATION

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( BMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkSMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# CHAPTERS. KQIAASHDOIDEMIENTENIQNEE., NSN., NSE. > CLASS TEMPLATE REFERENCE

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix $< T_- > \& A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( Vect< T $_->$ & v ) [inherited]

Assemble element vector into global one.

ir	ı	v	Global vector (Vect instance)
----	---	---	-------------------------------

# 7.28. EQUA\_FLUID< T\_, NEN\_, NEE\_, NSN\_, NSE\_ & CHIARSSEREMIZILAISS INDEPENDENTATION

# Warning

The element pointer is given by the global variable the Element

# ${\bf void \ Side Assembly \ ( \ PETScMatrix {< \ T_{-} > \& \ A \ ) \quad [inherited]}$

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

# **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkSMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ SpMatrix{<\ T_->\&\ A}\ )\ \ [inherited]$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< $T_- > \& v$ ) [inherited]

Assemble side (edge or face) vector into global one.

#### Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

# void DGElementAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### 7.28. EQUA\_FLUID< T., NEN., NEE., NSN., NSE., XCHIARSEREMEILARS EXPERIMENTATION

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

# Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< $T_->$ & x, Vect< $T_->$ & b) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance	
in	х	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

void AxbAssembly ( const Side & sd, const Vect<  $T_- > \& x$ , Vect<  $T_- > \& b$  ) [inherited] Assemble product of side matrix by side vector into global vector.

#### Parameters

in	sd	Reference to Side instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited] Define a material property by an algebraic expression.

#### Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

#### Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix <  $T_- > *$  A, Vect <  $T_- > & b$ , Vect <  $T_- > & x$  ) [inherited] Solve the linear system.

#### Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)	
in	b	Vector containing right-hand side	
in,out	x	Vector containing initial guess of solution on input, actual solution on output	

# 7.28.4 Member Data Documentation

 $LocalVect {<} T\_, NEE\_{>} \, ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.29 Equa\_Laplace< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Class Template Reference

Abstract class for classes about the Laplace equation.

Inheritance diagram for Equa\_Laplace < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >:

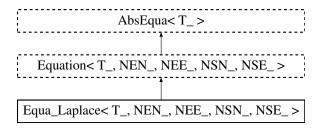

# **Public Member Functions**

• Equa\_Laplace ()

Default constructor.

• virtual ~Equa\_Laplace ()

Destructor.

• virtual void build ()

*Solve the equation.* 

• virtual void buildEigen (int opt=0)

Build matrices for an eigenvalue problem.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• void updateBC (const Element &el, const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< T<sub>-</sub> > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

• void LocalNodeVector (Vect< T<sub>-</sub> > &b)

Localize *Element Vector from a Vect instance*.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEN\_> &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< T<sub>-</sub> > &b, LocalVect< T<sub>-</sub>, NEN<sub>-</sub> > &be)
 Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_, NSE\_> &be)

Localize Element Vector from a Vect instance.

 $\bullet \ \ void \ \underline{ElementVector} \ (const \ \underline{Vect} < T_{-} > \&b, int \ dof\_type=NODE\_FIELD, int \ flag=0) \\$ 

Localize Element Vector.

• void SideVector (const Vect< T\_> &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

• void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< T<sub>-</sub> > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < T\_> &A)

Assemble element matrix into global one.

void ElementAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< T\_> &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< T<sub>-</sub>>&A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< T<sub>-</sub> > &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix < T\_> &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< T\_> &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < T<sub>-</sub> > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< T\_> &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< T<sub>-</sub>>\*A)

 $Assemble\ element\ matrix\ into\ global\ one\ for\ the\ Discontinuous\ Galerkin\ approximation.$ 

• void DGElementAssembly (SkSMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T\_> &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < T<sub>-</sub> > \*A, Vect < T<sub>-</sub> > &b, Vect < T<sub>-</sub> > &x)
 Solve the linear system.

## **Public Attributes**

• LocalMatrix< T\_, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < T\_, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< T\_, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< T\_, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< T\_, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

LocalVect< T\_, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.29.1 Detailed Description

template<class T\_, size\_t NEN\_, size\_t NEE\_, size\_t NSN\_, size\_t NSE\_> class OFELI::Equa\_Laplace< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for classes about the Laplace equation.

#### **Template Arguments:**

- T<sub>-</sub>: data type (double, float, ...)
- NEN\_: Number of element nodes
- **NEE**\_: Number of element equations
- NSN\_: Number of side nodes
- NSE\_: Number of side equations

#### 7.29.2 Constructor & Destructor Documentation

#### Equa\_Laplace ( )

Default constructor.

Constructs an empty equation.

#### 7.29.3 Member Function Documentation

#### void build ( EigenProblemSolver & e )

Build the linear system for an eigenvalue problem.

#### Parameters

in	0	Reference to used EigenProblemSolver instance
TII	е	Reference to used Eigeni Toblemsorver instance

## void updateBC (const Element & $el_r$ const Vect< T $_->$ & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< $T_-> \& bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	bc	Vector that contains imposed values at all DOFs
----	----	---

OFELI's Reference Guide

# Remarks

The current element is pointed by  $\_\texttt{theElement}$ 

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# void LocalNodeVector ( Vect< T $_->$ & b ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEE $_-> \& be$ ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEN $_-> \& be$ , int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEN $_-> \& be$ ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# $void \ Element Side Vector \ (\ const \ Vect < T_-> \& \ b, \ Local Vect < T_-, \ NSE_-> \& \ be \ ) \quad \texttt{[inherited]}$

Localize Element Vector from a Vect instance.

# Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< $T_-$ > & b, int $dof_-type = NODE_-FIELD$ , int flag = 0 ) [inherited]

Localize **Element** Vector.

#### **Parameters**

in	b	Global vector to be localized
----	---	-------------------------------

#### **Parameters**

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		• SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
	, ,	1
	, 0	• = 0, All DOFs are taken into account [Default]
		*

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

#### void SideVector ( const Vect< T $_-> & b$ ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with  $\underline{\mathsf{Side}}$  was invoked. It uses the  $\underline{\mathsf{Side}}$  pointer  $\underline{\mathtt{theSide}}$ 

#### void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Side pointer \_theSide

#### 7.29. EQUA\_LAPLACE< T\_, NEN\_, NEE\_, NSN\_, NSEHAPTIAS9.TEMASSAIDEREHIRENIATION

#### void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}^{t}$ 

#### Remarks

This member function uses the **Element** pointer \_theElement

#### void ElementAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( BMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkSMatrix < T_- > \&A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### 7.29. EQUA\_LAPLACE< T\_, NEN\_, NEE\_, NSN\_, NSEHAPTASS.TEMASSADEREHIRENIATION

#### **Parameters**

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( Vect< $T_- > \& v$ ) [inherited]

Assemble element vector into global one.

#### **Parameters**

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix $< T_- > \& A$ ) [inherited]

Assemble side matrix into global one.

#### Parameters

A Reference to global matrix

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

A Po

Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkSMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix< $T_- > \& A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

#### void SideAssembly (SpMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< T $_->$ & v ) [inherited]

Assemble side (edge or face) vector into global one.

# 7.29. EQUA\_LAPLACE< T\_, NEN\_, NEE\_, NSN\_, NSEHAPTIASS.TEMASSAIDEREIMIRINIATEION

#### **Parameters**

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# void DGElementAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < T_- > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix $< T_- > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

OFELI's Reference Guide

#### CHAIZPERQUALASP DOCKEMENTANIONEE\_, NSN\_, NSE\_ > CLASS TEMPLATE REFERENCE

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< $T_- > \& x$ , Vect< $T_- > \& b$ ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly ( const Side & sd, const Vect<  $T_- > \& x$ , Vect<  $T_- > \& b$  ) [inherited] Assemble product of side matrix by side vector into global vector.

# Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited] Define a material property by an algebraic expression.

# 7.29. EQUA\_LAPLACE<br/>< T\_, NEN\_, NEE\_, NSN\_, NSEHA**CUAIS**5.T**EMASSADE/REHMRINIA**EION

#### Parameters

# Parameters

in	ехр	Algebraic expression
in	prop	Property name

# Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh() const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

#### Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix<  $T_->*A$ , Vect<  $T_->\&b$ , Vect<  $T_->\&x$ ) [inherited] Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.29.4 Member Data Documentation

LocalVect<T\_,NEE\_> ePrev [inherited]


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.30 Equa\_Solid< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Class Template Reference

Abstract class for Solid Mechanics Finite Element classes.

Inheritance diagram for Equa\_Solid < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >:

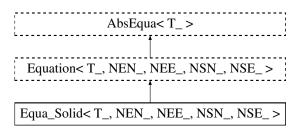

# **Public Member Functions**

• Equa\_Solid ()

Default constructor.

• virtual ~Equa\_Solid ()

Destructor.

virtual void LMassToLHS (real\_t coef=1)

Add lumped mass contribution to left-hand side.

• virtual void LMassToRHS (real\_t coef=1)

Add lumped mass contribution to right-hand side.

• virtual void MassToLHS (real\_t coef=1)

Add consistent mass contribution to left-hand side.

• virtual void MassToRHS (real\_t coef=1)

Add consistent mass contribution to right-hand side.

• void setLumpedMass ()

Add lumped mass contribution to left and right-hand sides taking into account time integration scheme.

• void setMass ()

Add consistent mass contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Mass (real\_t coef=1)

Add consistent mass matrix to left-hand side after multiplication by coef [Default: 1].

• virtual void LMass (real\_t coef=1)

Add lumped mass matrix to left-hand side after multiplication by coef [Default: 1].

• virtual void Deviator (real\_t coef=1)

Add deviator matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

virtual void Dilatation (real\_t coef=1)

Add dilatation matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

virtual void DilatationToRHS (real\_t coef=1)

Add dilatation vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void DeviatorToRHS (real\_t coef=1)

Add deviator vector to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void Stiffness (real\_t coef=1)

Add stiffness matrix to left-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

• virtual void StiffnessToRHS (real\_t coef=1)

Add stiffness matrix to right-hand side taking into account time integration scheme, after multiplication by coef [Default: 1].

void setDilatation ()

Add dilatation matrix to left and/or right-hand side taking into account time.

• void setDeviator ()

Add deviator matrix to left and/or right-hand side taking into account time integration scheme.

• void setStiffness ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

• void updateBC (const Element &el, const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< T<sub>-</sub> > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

void LocalNodeVector (Vect< T<sub>-</sub> > &b)

Localize *Element Vector from a Vect instance*.

void ElementNodeVector (const Vect< T<sub>-</sub> > &b, LocalVect< T<sub>-</sub>, NEE<sub>-</sub> > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_-> &b, LocalVect< T\_-, NEN\_-> &be, int dof)

Localize Element Vector from a Vect instance.

• void ElementNodeVectorSingleDOF (const Vect< T\_> &b, LocalVect< T\_, NEN\_> &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_, NSE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< T\_> &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize *Element Vector*.

void SideVector (const Vect< T<sub>-</sub> > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< T\_> &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix < T\_> &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< T\_> &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix< T<sub>-</sub> > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix< T<sub>-</sub> > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< T<sub>-</sub> > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< T<sub>-</sub>> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void AxbAssembly (const Element &el, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of side matrix by side vector into global vector.

size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T\_> &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< T\_> \*A, Vect< T\_> &b, Vect< T\_> &x)

Solve the linear system.

#### **Public Attributes**

• LocalMatrix< T\_, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< T\_, NSE\_, NSE\_> sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< T\_, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< T\_, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< T\_, NEE\_ > eRes

Local Vect instance containing local residual vector associated to current element.

• LocalVect< T\_, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void Young (const real\_t &E)

Set (constant) Young modulus.

• void Poisson (const real\_t &nu)

Set (constant) Poisson ratio.

• void Density (const real\_t &rho)

Set (constant) density.

• void Young (const string &exp)

Set Young modulus given by an algebraic expression.

• void Poisson (const string &exp)

Set Poisson ratio given by an algebraic expression.

• void Density (const string &exp)

Set density given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.30.1 Detailed Description

template<class T\_, size\_t NEN\_, size\_t NEE\_, size\_t NSN\_, size\_t NSE\_> class OFELI::Equa\_Solid< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Solid Mechanics Finite Element classes.

**Template Parameters** 

<t_></t_>	data type (double, float,)
<nen></nen>	Number of element nodes
<nee←< th=""><th>Number of element equations</th></nee←<>	Number of element equations
_>	
<nsn←< th=""><th>Number of side nodes</th></nsn←<>	Number of side nodes
_>	
< <i>NSE_&gt;</i>	Number of side equations

# 7.30.2 Constructor & Destructor Documentation

Equa\_Solid ( )

Default constructor.

Constructs an empty equation.

# 7.30.3 Member Function Documentation

virtual void LMassToLHS ( real\_t coef = 1 ) [virtual]

Add lumped mass contribution to left-hand side.

**Parameters** 

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

Reimplemented in Elas2DT3, Elas2DQ4, Beam3DL2, Elas3DH8, Elas3DT4, and Bar2DL2.

#### 7.30. EQUA\_SOLID< T\_, NEN\_, NEE\_, NSN\_, NSE\_ XCHIARSEREMEILARS REPERIMENTATION

#### virtual void LMassToRHS ( real\_t coef = 1 ) [virtual]

Add lumped mass contribution to right-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

Reimplemented in Elas2DT3, Elas2DQ4, Beam3DL2, Elas3DH8, Elas3DT4, and Bar2DL2.

# virtual void MassToLHS ( real\_t coef = 1 ) [virtual]

Add consistent mass contribution to left-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the matrix before adding [Default: 1]
----	------	--

Reimplemented in Elas2DT3, Beam3DL2, and Bar2DL2.

# virtual void MassToRHS ( real\_t coef = 1 ) [virtual]

Add consistent mass contribution to right-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

Reimplemented in Elas2DT3, Beam3DL2, and Bar2DL2.

# void updateBC ( const Element & el, const Vect< $T_- > \& bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< $T_- > \& bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

#### void LocalNodeVector ( Vect< T $_->$ & b ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEE $_-> \& be$ ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

void ElementNodeVector ( const Vect<  $T_-> \& b$ , LocalVect<  $T_-$ , NEN $_-> \& be$ , int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< $T_-$ > & b, LocalVect< $T_-$ , NEN $_-$ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# $void \ Element Side Vector \ ( \ const \ Vect < T_-> \& \ b, \ Local Vect < T_-, \ NSE_-> \& \ be \ ) \quad \texttt{[inherited]}$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< $T_- > \& b$ , int $dof_-type = NODE_-FIELD$ , int flag = 0) [inherited]

Localize **Element** Vector.

#### Parameters

in	b	Global vector to be localized		
in	dof_type	DOF type option. To choose among the enumerated values		
		NODE_FIELD, DOFs are supported by nodes [Default]		
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>		
		• SIDE_FIELD, DOFs are supported by sides		

#### **Parameters**

in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

# void SideVector ( const Vect< T $_->$ & b ) [inherited]

Localize Side Vector.

#### **Parameters**

in	b	Global vector to be localized		
		NODE_FIELD, DOFs are supported by nodes [ default ]		
		ELEMENT_FIELD, DOFs are supported by elements		
		SIDE_FIELD, DOFs are supported by sides		
		The resulting local vector can be accessed by attribute ePrev.		

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Side pointer \_theSide

# void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the **Element** pointer \_theElement

# 7.30. EQUA\_SOLID < T\_, NEN\_, NEE\_, NSN\_, NSE\_ > CHIARSETEM RILATES INCOCRIMENTATION

void ElementAssembly (  $Matrix < T_- > *A$  ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( PETScMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

Parameters

Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble element right-hand side vector into global one.

**Parameters** 

Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $BMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

**Parameters** 

Global matrix stored as a **BMatrix** instance

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly (SkSMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### 7.30. EQUA\_SOLID< T., NEN., NEE., NSN., NSE., XCHARSEREMELLARS REPERIMENTATION

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( Vect< T $_->$ & v ) [inherited]

Assemble element vector into global one.

#### CHAPTEROT. HQLAASSOODDAMENTANIONEE., NSN., NSE. > CLASS TEMPLATE REFERENCE

#### **Parameters**

	in	v	Global vector (Vect instance)	
--	----	---	-------------------------------	--

## Warning

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix $< T_- > & A$ ) [inherited]

Assemble side matrix into global one.

#### Parameters

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

b Reference to global right-hand side vector

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkSMatrix $< T_- > \& A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### 7.30. EQUA\_SOLID< T., NEN., NEE., NSN., NSE., XCHARSEREMELLARS REPERIMENTATION

#### **Parameters**

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix $< T_- > \& A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

i	n	A	Global matrix stored as an SkMatrix instance
---	---	---	--

#### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

#### void SideAssembly ( Vect< $T_-> \& v$ ) [inherited]

Assemble side (edge or face) vector into global one.

#### Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

# $\mbox{\bf void DGElementAssembly ( Matrix} < T_- > *A \mbox{ ) } \mbox{ [inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $SkSMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly (SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in /	A	Global matrix stored as an SpMatrix instance	]
--	------	---	--	---

## Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# 7.30. EQUA\_SOLID< T\_, NEN\_, NEE\_, NSN\_, NSE\_ & CHIARSSEREM RILAISS IRROPERIEMENTATION

#### **Parameters**

in	A	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< $T_->$ & x, Vect< $T_->$ & b) [inherited]

Assemble product of element matrix by element vector into global vector.

#### Parameters

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

void AxbAssembly ( const Side & sd, const Vect<  $T_- > \& x$ , Vect<  $T_- > \& b$  ) [inherited] Assemble product of side matrix by side vector into global vector.

#### Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]
Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

#### **Parameters**

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix <  $T_->*A$ , Vect <  $T_->&b$ , Vect <  $T_->&x$  ) [inherited] Solve the linear system.

#### Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.30.4 Member Data Documentation

 $LocalVect < T\_, NEE\_> ePrev \quad [\texttt{inherited}]$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.31 Equa\_Therm< T\_, NEN\_, NEE\_, NSN\_, NSE\_ > Class Template Reference

Abstract class for Heat transfer Finite Element classes.

Inheritance diagram for Equa\_Therm< T\_, NEN\_, NEE\_, NSN\_, NSE\_>:

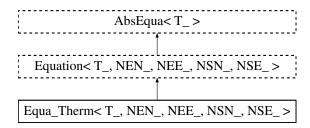

#### **Public Member Functions**

• Equa\_Therm ()

Default constructor.

• virtual ~Equa\_Therm ()

Destructor.

• virtual void setStab ()

Set stabilized formulation.

• virtual void LCapacityToLHS (real\_t coef=1)

Add lumped capacity contribution to left-hand side.

• virtual void LCapacityToRHS (real\_t coef=1)

Add lumped capacity contribution to right-hand side.

• virtual void CapacityToLHS (real\_t coef=1)

Add consistent capacity contribution to left-hand side.

virtual void CapacityToRHS (real\_t coef=1)

Add consistent capacity contribution to right-hand side.

void setLumpedCapacity ()

Add lumped capacity contribution to left and right-hand sides taking into account time integration scheme.

void setCapacity ()

Add consistent capacity contribution to left and right-hand sides taking into account time integration scheme.

• virtual void Diffusion (real\_t coef=1.)

Add diffusion term to left-hand side.

• virtual void DiffusionToRHS (real\_t coef=1.)

Add diffusion term to right-hand side.

• void setDiffusion ()

Add diffusion contribution to left and/or right-hand side taking into account time integration scheme.

• virtual void Convection (real\_t coef=1.)

Add convection term to left-hand side.

• virtual void ConvectionToRHS (real\_t coef=1.)

Add convection term to right-hand side.

• void setConvection ()

Add convection contribution to left and/or right-hand side taking into account time integration scheme.

OFELI's Reference Guide 535

```
    virtual void BodyRHS (const Vect< real_t > &bf, int opt=GLOBAL_ARRAY)
```

Add body right-hand side term to right-hand side.

virtual void BoundaryRHS (const Vect< real\_t > &sf, int opt=GLOBAL\_ARRAY)

Add boundary right-hand side term to right-hand side.

• void build ()

Build the linear system of equations.

void build (TimeStepping &s)

Build the linear system of equations.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• int runTransient ()

Run one time step.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run the equation.

void setRhoCp (const real\_t &rhocp)

*Set product of Density by Specific heat (constants)* 

void setConductivity (const real\_t &diff)

Set (constant) thermal conductivity.

• void RhoCp (const string &exp)

Set product of Density by Specific heat given by an algebraic expression.

• void Conduc (const string &exp)

Set thermal conductivity given by an algebraic expression.

• void updateBC (const Element &el, const Vect< T\_> &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void updateBC (const Vect< T<sub>-</sub> > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< T<sub>-</sub> > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEE\_> &be)

Localize *Element Vector from a Vect instance*.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEN\_> &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< T<sub>-</sub>> &b, LocalVect< T<sub>-</sub>, NEN<sub>-</sub>> &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_, NSE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< T\_> &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect< T<sub>-</sub> > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix< T\_> &A)

Assemble element matrix into global one.

• void ElementAssembly (SpMatrix< T\_> &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix< T\_> &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< T\_> &v)

Assemble element vector into global one.

• void SideAssembly (PETScMatrix < T\_> &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< T\_> &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix < T\_> \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< T<sub>-</sub>> &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< T\_> &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< T<sub>-</sub>>\*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix< T\_> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< T\_> &x, Vect< T\_> &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T\_> &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< T\_> \*A, Vect< T\_> &b, Vect< T\_> &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< T\_, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< T\_, NSE\_, NSE\_> sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< T\_, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< T\_, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< T\_, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< T\_, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.31.1 Detailed Description

template<class T\_, size\_t NEN\_, size\_t NEE\_, size\_t NSN\_, size\_t NSE\_> class OFELI::Equa\_Therm< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for Heat transfer Finite Element classes.

## **Template Parameters**

<t_></t_>	data type (real_t, float,)
<nen></nen>	Number of element nodes
<nee↔< th=""><th>Number of element equations</th></nee↔<>	Number of element equations
_>	
<nsn←< th=""><th>Number of side nodes</th></nsn←<>	Number of side nodes
_>	
< <i>NSE_&gt;</i>	Number of side equations

## 7.31.2 Constructor & Destructor Documentation

## Equa\_Therm ( )

Default constructor.

Constructs an empty equation.

## 7.31.3 Member Function Documentation

virtual void setStab ( ) [virtual]

Set stabilized formulation.

Stabilized variational formulations are to be used when the Pclet number is large. By default, no stabilization is used.

## virtual void LCapacityToLHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to left-hand side.

## Parameters

in	coef	coefficient to multiply by the matrix before adding [Default: 1]

Reimplemented in DC2DT3, DC3DT4, DC3DAT3, and DC1DL2.

## virtual void LCapacityToRHS ( real\_t coef = 1 ) [virtual]

Add lumped capacity contribution to right-hand side.

## Parameters

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

Reimplemented in DC2DT3, DC3DT4, DC3DAT3, and DC1DL2.

## virtual void CapacityToLHS ( real.t coef = 1 ) [virtual]

Add consistent capacity contribution to left-hand side.

## 7.31. EQUA\_THERM< T., NEN., NEE., NSN., NSE\_CHAPASSIZEMPLASSHIRDFFRHENDIATION

#### **Parameters**

#### **Parameters**

in	coef	coefficient to multiply by the matrix before adding [Default: 1]

Reimplemented in DC2DT3, DC3DT4, DC3DAT3, and DC1DL2.

## virtual void CapacityToRHS ( real\_t coef = 1 ) [virtual]

Add consistent capacity contribution to right-hand side.

#### **Parameters**

in	coef	coefficient to multiply by the vector before adding [Default: 1]
----	------	--

Reimplemented in DC2DT3, DC3DT4, DC3DAT3, and DC1DL2.

virtual void BodyRHS ( const Vect < real\_t > & bf, int  $opt = GLOBAL\_ARRAY$  ) [virtual] Add body right-hand side term to right-hand side.

#### **Parameters**

in	bf	Vector containing source at element nodes.
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in DC2DT3, DC3DT4, DC2DT6, DC1DL2, and DC3DAT3.

## virtual void BoundaryRHS ( const Vect< real\_t > & sf, int opt = GLOBAL\_ARRAY ) [virtual]

Add boundary right-hand side term to right-hand side.

#### Parameters

in	sf	Vector containing source at side nodes.
in	opt	Vector is local (LOCAL_ARRAY) with size 3 or global (GLOBAL_ARRAY) with size = Number of nodes [Default: GLOBAL_ARRAY].

Reimplemented in DC2DT3, DC3DT4, DC2DT6, DC1DL2, and DC3DAT3.

## void build ( )

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix

option is chosen by default, and the implicit Euler scheme is used by default for time integration.

## void build ( TimeStepping & s )

Build the linear system of equations.

Before using this function, one must have properly selected appropriate options for:

- The choice of a steady state or transient analysis. By default, the analysis is stationary
- In the case of transient analysis, the choice of a time integration scheme and a lumped or consistent capacity matrix. If transient analysis is chosen, the lumped capacity matrix option is chosen by default, and the implicit Euler scheme is used by default for time integration.

#### **Parameters**

i	S	Reference to used TimeStepping instance	
---	---	---	--

## void build ( EigenProblemSolver & e )

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	е	Reference to used EigenProblemSolver instance
----	---	---

#### int runTransient( )

Run one time step.

This function performs one time step in equation solving. It is to be used only if a *TRANSIENT* analysis is required.

#### Returns

Return error from the linear system solver

## int runOneTimeStep ( )

Run one time step.

This function performs one time step in equation solving. It is identical to the function  $run \leftarrow$  Transient.

#### Returns

Return error from the linear system solver

#### int run ( )

Run the equation.

## 7.31. EQUA\_THERM< T\_, NEN\_, NEE\_, NSN\_, NSE\_CHAPASSKIZEMIPLASSHIZEMENUFATION

If the analysis (see function setAnalysis) is STEADY\_STATE, then the function solves the stationary equation.

If the analysis is TRANSIENT, then the function performs time stepping until the final time is reached.

## void updateBC ( const Element & el, const Vect< $T_- > \& bc$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< T $_->$ & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	bc	Vector that contains imposed values at all DOFs
----	----	---

#### Remarks

The current element is pointed by \_theElement

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

## void LocalNodeVector ( Vect< $T_-> & b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

## void ElementNodeVector ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEE\_- > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

## void ElementNodeVector ( const Vect< $T_-$ > & b, LocalVect< $T_-$ , NEN $_-$ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.	
in	dof	Degree of freedom to transfer to the local vector	

#### Remarks

Only yhe dega dof is transferred to the local vector

## void ElementNodeVectorSingleDOF ( const Vect< $T_-> \& b$ , LocalVect< $T_-$ , NEN\_-> & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

## 7.31. EQUA\_THERM< T\_, NEN\_, NEE\_, NSN\_, NSE\_CHAPASSRIZEMINASSELECTED THE NOTE AT ION

void ElementSideVector ( const Vect<  $T_-> \& b$ , LocalVect<  $T_-$ , NSE\_-> & be ) [inherited] Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect<  $T_- > \& b$ , int  $dof_-type = NODE_-FIELD$ , int flag = 0) [inherited]

Localize **Element** Vector.

#### **Parameters**

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

void SideVector ( const Vect< T $_->$  & b ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

**OFELI's Reference Guide** 

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

#### void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

#### Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the **Element** pointer \_theElement

## void ElementAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< T $_->$ & b ) [inherited]

Assemble element right-hand side vector into global one.

## 7.31. EQUA\_THERM< T\_, NEN\_, NEE\_, NSN\_, NSE\_CHAPASSRIZEMPLASSHIZEFERMENDIATION

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $BMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $SkSMatrix < T_- > \&A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly (SkMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly (SpMatrix $< T_- > & A$ ) [inherited]

Assemble element matrix into global one.

## CHAPTER 7EQUIASEHEROLEMIENTENIQNEE., NSN., NSE. > CLASS TEMPLATE REFERENCE

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $TrMatrix < T_- > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

	in	A	Global matrix stored as an TrMatrix instance	
--	----	---	--	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( Vect< $T_- > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)

#### Warning

The element pointer is given by the global variable the Element

## ${\bf void \ Side Assembly \ ( \ PETScMatrix {< T_- > \& A \ ) \quad [inherited]}$

Assemble side matrix into global one.

#### **Parameters**



## Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ PETScVect} {<\ T_{-}} > \&\ b$ ) [inherited]

Assemble side right-hand side vector into global one.

## 7.31. EQUA\_THERM< T\_, NEN\_, NEE\_, NSN\_, NSE\_CHAPASSKIZEMIPLASSELECTEMENTED TO N

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix $< T_- > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable theSide

## void SideAssembly ( SkSMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	Α	Global matrix stored as an SkSMatrix instance
----	---	---

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SkMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

_			
:	in	A	Global matrix stored as an SkMatrix instance

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix $< T_- > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

## CHAPTER 7EQUIASEHEROLEMIENTENIQNEE., NSN., NSE. > CLASS TEMPLATE REFERENCE

#### **Parameters**

in A Global matrix stored as a	n SpMatrix instance
--------------------------------	---------------------

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Vect< T $_-> & v$ ) [inherited]

Assemble side (edge or face) vector into global one.

#### Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

## void DGElementAssembly ( $Matrix < T_- > *A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## $\label{eq:condition} \mbox{void DGElementAssembly ( $SkSMatrix{<}$ $T_{-}$ > \& $A$ ) [inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkMatrix < T_- > \&A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## 7.31. EQUA\_THERM< T\_, NEN\_, NEE\_, NSN\_, NSE\_CHAPASSRIZEMPLASSHIZEFERMENDIATION

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SpMatrix $< T_- > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

## Warning

The element pointer is given by the global variable the Element

## ${f void} \ {f DGElementAssembly} \ ( \ {f TrMatrix} {<{f T_-}} {>} \ \& \ A \ ) \ \ [{\tt inherited}]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

## Parameters

in	A	Global matrix stored as an TrMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void AxbAssembly ( const Element & el, const Vect< $T_- > & x$ , Vect< $T_- > & b$ ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

void AxbAssembly ( const Side & sd, const Vect<  $T_- > \& x$ , Vect<  $T_- > \& b$  ) [inherited] Assemble product of side matrix by side vector into global vector.

#### Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

## Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

## Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

## void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver

#### **Parameters**

in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		<ul> <li>IDENT_PREC, Identity preconditioner (no preconditioning [default])</li> </ul>	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	
			1

int SolveLinearSystem ( Matrix <  $T_- > *A$ , Vect <  $T_- > \&$  b, Vect <  $T_- > \&$  x ) [inherited] Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.31.4 Member Data Documentation

LocalVect<T\_,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.32 Equation < T $_-$ , NEN $_-$ , NEE $_-$ , NSN $_-$ , NSE $_-$ > Class Template Reference

Abstract class for all equation classes.

Inheritance diagram for Equation < T\_, NEN\_, NEE\_, NSN\_, NSE\_ >:



## **Public Member Functions**

- Equation ()
- Equation (Mesh &mesh)

Constructor with mesh instance.

• Equation (Mesh &mesh, Vect< T\_> &b, real\_t &t, real\_t &ts)

Constructor with mesh instance, matrix and right-hand side.

• Equation (const Element \*el)

Constructor using Element data.

Equation (const Side \*sd)

Constructor using Side data.

• Equation (const Element \*el, const Vect< T\_> &u, real\_t time=0)

Constructor using element data, solution at previous time step and time value.

• Equation (const Side \*sd, const Vect< T\_> &u, real\_t time=0)

Constructor using side data, solution at previous time step and time value.

• virtual ~Equation ()

Destructor.

void updateBC (const Element &el, const Vect< T<sub>-</sub> > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< T\_> &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

• void LocalNodeVector (Vect< T<sub>-</sub> > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< T\_> &b, LocalVect< T\_, NEE\_> &be)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< T<sub>-</sub> > &b, LocalVect< T<sub>-</sub>, NEN<sub>-</sub> > &be)
 Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< T<sub>-</sub> > &b, LocalVect< T<sub>-</sub>, NEN<sub>-</sub> > &be, int dof)
 Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< T\_> &b, LocalVect< T\_, NSE\_> &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< T\_> &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

void SideVector (const Vect< T<sub>-</sub> > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

• void ElementAssembly (Matrix< T\_> \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < T\_> &A)

Assemble element matrix into global one.

void SideAssembly (PETScMatrix< T<sub>-</sub>>&A)

Assemble side matrix into global one.

• void ElementAssembly (PETScVect< T\_> &b)

Assemble element right-hand side vector into global one.

void SideAssembly (PETScVect< T<sub>-</sub> > &b)

Assemble side right-hand side vector into global one.

• void ElementAssembly (BMatrix< T<sub>−</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< T\_> &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void ElementAssembly (SpMatrix< T\_> &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one.

• void DGElementAssembly (Matrix < T\_> \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< T<sub>-</sub>> &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< T<sub>-</sub> > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void SideAssembly (Matrix< T\_> \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < T<sub>-</sub> > &A)

Assemble side (edge or face) matrix into global one.

• void ElementAssembly (Vect< T\_> &v)

Assemble element vector into global one.

void SideAssembly (Vect< T<sub>-</sub> > &v)

Assemble side (edge or face) vector into global one.

void AxbAssembly (const Element &el, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< T\_> &u)

Set initial solution (previous time step)

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < T\_> & getLinearSolver ()

Return reference to linear solver instance.

- void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)
  - Choose solver for the linear system.
- int SolveLinearSystem (Matrix < T<sub>-</sub> > \*A, Vect < T<sub>-</sub> > &b, Vect < T<sub>-</sub> > &x)
   Solve the linear system.

## **Public Attributes**

- LocalMatrix< T\_, NEE\_, NEE\_ > eMat
  - LocalMatrix instance containing local matrix associated to current element.
- LocalMatrix< T\_, NSE\_, NSE\_ > sMat
  - LocalMatrix instance containing local matrix associated to current side.
- LocalVect< T\_, NEE\_ > ePrev
  - LocalVect instance containing local vector associated to current element.
- LocalVect< T\_, NEE\_ > eRHS
  - LocalVect instance containing local right-hand side vector associated to current element.
- LocalVect< T\_, NEE\_> eRes
  - LocalVect instance containing local residual vector associated to current element.
- LocalVect< T<sub>-</sub>, NSE<sub>-</sub> > sRHS
  - LocalVect instance containing local right-hand side vector associated to current side.

#### **Protected Member Functions**

- void Init (const Element \*el)
  - Set element arrays to zero.
- void Init (const Side \*sd)
  - Set side arrays to zero.

## 7.32.1 Detailed Description

template<class T\_, size\_t NEN\_, size\_t NEE\_, size\_t NSN\_, size\_t NSE\_> class OFELI::Equation< T\_, NEN\_, NEE\_, NSN\_, NSE\_>

Abstract class for all equation classes.

**Template Arguments:** 

- T\_: data type (real\_t, float, ...)
- NEN\_: Number of element nodes
- **NEE**\_: Number of element equations
- NSN\_: Number of side nodes
- **NSN**<sub>-</sub>: Number of side equations

#### 7.32.2 Constructor & Destructor Documentation

#### Equation ( )

Default constructor. Constructs an "empty" equation

## Equation (Mesh & mesh)

Constructor with mesh instance.

## 7.32. EQUATION $< T_-$ , NEN\_, NEE\_, NSN\_, NSE\_ > CLEASE THE MP LOAD ASSET ENAMENTATION

#### Parameters

in	mesh	Mesh instance

## Equation ( Mesh & mesh, Vect< $T_- > \& b$ , real\_t & t, real\_t & ts )

Constructor with mesh instance, matrix and right-hand side.

## Parameters

in	mesh	Mesh instance
in	b	Vect instance containing Right-hand side.
in	t	Time value
in	ts	Time step

## Equation ( const Element \*el )

Constructor using Element data.

## Parameters

	in	el	Pointer to Element
--	----	----	--------------------

## Equation (const Element \* el, const Vect< $T_- > & u$ , real\_t time = 0)

Constructor using element data, solution at previous time step and time value.

#### Parameters

in	el	Pointer to element
in	и	Vect instance containing solution at previous time step
in	time	Time value (Default value is 0)

## Equation (const Side \* sd, const Vect< $T_- > & u$ , real\_t time = 0)

Constructor using side data, solution at previous time step and time value.

in	sd	Pointer to side
in	и	Vect instance containing solution at previous time step
in	time	Time value (Default value is 0)

## 7.32.3 Member Function Documentation

## void updateBC (const Element & el, const Vect< $T_- > \& bc$ )

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< T $_->$ & bc )

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

#### Remarks

The current element is pointed by \_theElement

## void DiagBC ( int $dof\_type = NODE\_DOF$ , int dof = 0 )

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

## void LocalNodeVector ( Vect< T $_->$ & b )

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

## void ElementNodeVector ( const Vect< $T_-$ > & b, LocalVect< $T_-$ , NEE\_- > & be)

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

## void ElementNodeVectorSingleDOF ( const Vect< T $_->$ & b, LocalVect< T $_-$ , NEN $_->$ & be)

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

Vector b is assumed to contain only one degree of freedom by node.

## void ElementNodeVector ( const Vect< T $_->$ & b, LocalVect< T $_-$ , NEN $_->$ & be, int dof)

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

## void ElementSideVector ( const Vect< $T_-$ > & b, LocalVect< $T_-$ , NSE\_- > & be)

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

## void ElementVector ( const Vect< $T_- > & b$ , int $dof_-type = NODE_-FIELD$ , int flag = 0)

Localize **Element** Vector.

#### **Parameters**

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< $T_- > \& b$ )

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with  $\underline{\text{Side}}$  was invoked. It uses the  $\underline{\text{Side}}$  pointer  $\underline{\text{-theSide}}$ 

## void ElementNodeCoordinates ( )

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}$ 

#### Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates ( )

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the **Element** pointer \_theElement

## void ElementAssembly ( Matrix $< T_- > *A$ )

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScMatrix $< T_- > & A$ )

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void SideAssembly ( PETScMatrix $< T_- > & A$ )

Assemble side matrix into global one.

## Parameters

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void ElementAssembly ( PETScVect< T $_->$ & b )

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

## void SideAssembly ( PETScVect< T $_->$ & b )

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The side pointer is given by the global variable the Side

## void ElementAssembly ( BMatrix $< T_- > & A$ )

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( SkSMatrix $< T_- > & A$ )

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## 7.32. EQUATION < T., NEN., NEE., NSN., NSE. > CLEASBTILLATASSHDEKTENMOENTATION

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( SkMatrix $< T_- > & A$ )

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( SpMatrix $< T_- > & A$ )

Assemble element matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $TrMatrix < T_- > & A$ )

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an TrMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( Matrix $< T_- > *A$ )

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

$\boldsymbol{A}$	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkSMatrix $< T_- > & A$ )

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix $< T_- > & A$ )

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly (SpMatrix $< T_- > & A$ )

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	Α	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < T_- > & A$ )

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

## 7.32. EQUATION < T., NEN., NEE., NSN., NSE. > CLEASBTILL NPLATE SHIP OF THE NEW TATION

#### Warning

The element pointer is given by the global variable the Element

## void SideAssembly ( Matrix $< T_- > *A$ )

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SkSMatrix $< T_- > & A$ )

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

#### Warning

The side pointer is given by the global variable the Side

## void SideAssembly (SkMatrix $< T_- > & A$ )

Assemble side (edge or face) matrix into global one.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

## void SideAssembly (SpMatrix $< T_- > & A$ )

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SpMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

## void ElementAssembly ( Vect< T $_->$ & v )

Assemble element vector into global one.

#### **Parameters**

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

## void SideAssembly ( Vect< T $_->$ & v )

Assemble side (edge or face) vector into global one.

#### Parameters

in v Glo	obal vector (Vect instance)
----------	-----------------------------

## Warning

The side pointer is given by the global variable the Side

## void AxbAssembly (const Element & el, const Vect< T $_->$ & x, Vect< T $_->$ & b)

Assemble product of element matrix by element vector into global vector.

#### Parameters

in	el	Reference to Element instance	
in	х	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

## void AxbAssembly (const Side & sd, const Vect< T $_->$ & x, Vect< T $_->$ & b)

Assemble product of side matrix by side vector into global vector.

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop )

Define a material property by an algebraic expression.

## Parameters

in	ехр	Algebraic expression
in	prop	Property name

## Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

## Mesh& getMesh() const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

## void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		GMRES_SOLVER, GMRES iterative solver	
		• QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

int SolveLinearSystem ( Matrix<  $T_->*A$ , Vect<  $T_->&b$ , Vect<  $T_->&x$ ) [inherited] Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

#### 7.32.4 Member Data Documentation

 $LocalVect < T_{-}, NEE_{-} > ePrev$ 

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

## 7.33 Estimator Class Reference

To calculate an a posteriori estimator of the solution.

## **Public Member Functions**

• Estimator ()

Default Constructor.

• Estimator (Mesh &m)

Constructor using finite element mesh.

• ~Estimator ()

Destructor.

• void setError (const Vect< real\_t > &u)

Calculate error using Vect solution vector u.

• real\_t getAverage () const

Return averaged error.

Mesh & getMesh () const

Return a reference to the finite element mesh.

## **Public Attributes**

• Vect< real\_t > Err

Elementwise vector error.

## 7.33.1 Detailed Description

To calculate an a posteriori estimator of the solution.

This class enables calculating an estimator of a solution in order to evaluate reliability. Estimation uses the so-called Zienkiewicz-Zhu estimator.

## 7.34 FastMarching2D Class Reference

To run a Fast Marching Method on 2-D structured uniform grids.

#### **Public Member Functions**

• FastMarching2D ()

Default constructor.

FastMarching2D (const Grid &g, Vect< real\_t > &ls)

Constructor using grid and level set function.

• FastMarching2D (const Grid &g, Vect< real\_t > &ls, Vect< real\_t > &F)

Constructor using grid, level set function and velocity to extend.

• ~FastMarching2D ()

Destructor.

• void execute ()

Execute Fast Marching Procedure.

• void Check ()

Check distance function.

## 7.34.1 Detailed Description

To run a Fast Marching Method on 2-D structured uniform grids.

This class enables running a Fast Marching procedure to calculate the signed distance function and extend a given front speed.

#### 7.34.2 Constructor & Destructor Documentation

FastMarching2D ( const Grid & g, Vect < real\_t > & ls )

Constructor using grid and level set function.

#### **Parameters**

in	8	Instance of class Grid
in	ls	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.

## FastMarching2D ( const Grid & g, Vect< real\_t > & ls, Vect< real\_t > & F)

Constructor using grid, level set function and velocity to extend.

in	g	Instance of class Grid

#### Parameters

in	ls	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided their sign is right.
in	F	Vector containing the front speed at grid nodes. Only values on nodes surrounding the interface are relevant.

## 7.34.3 Member Function Documentation


## void execute ( )

Execute Fast Marching Procedure.

Once this function was called, the vector 1s used in the constructor will contain the signed distance function and F will contain the extended speed.

## 7.35 FEShape Class Reference

Parent class from which inherit all finite element shape classes. Inheritance diagram for FEShape:

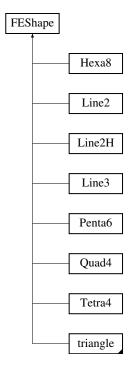

## **Public Member Functions**

- FEShape ()
  - Default Constructor.
- FEShape (const Element \*el)

Constructor for an element.

• FEShape (const Side \*sd)

Constructor for a side.

• virtual ~FEShape ()

Destructor.

real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t Sh (size\_t i, Point< real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node *i* at a given point.

• real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

• Point< real\_t > getLocalPoint () const

Localize a point in the element.

Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

## 7.35.1 Detailed Description

Parent class from which inherit all finite element shape classes.

## 7.35.2 Constructor & Destructor Documentation

## FEShape (const Element \* el)

Constructor for an element.

Parameters

in el	Pointer to element
-------	--------------------

## FEShape (const Side \* sd)

Constructor for a side.

**Parameters** 

in sd	Pointer to side
-------	-----------------

## 7.35.3 Member Function Documentation

## real\_t Sh ( size\_t i, Point< real\_t > s ) const

Calculate shape function of node i at a given point s.

in	i	Local node label	

#### Point<real $_t>$ DSh ( size $_ti$ ) const

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

#### **Parameters**

	in	i	Partial derivative index (1, 2 or 3)
--	----	---	--------------------------------------

# real\_t getDet ( ) const

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint ( ) const

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint ( const Point< real\_t> & s ) const


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.36 Figure Class Reference

To store and treat a figure (or shape) information.

Inheritance diagram for Figure:



# **Public Member Functions**

• Figure ()

Default constructor.

• Figure (const Figure &f)

Copy constructor.

virtual ~Figure ()

Destructor.

• void setCode (int code)

Choose a code for the domain defined by the figure.

virtual real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance from a given point to current figure.

• Figure & operator= (const Figure &f)

Operator =.

void getSignedDistance (const Grid &g, Vect< real\_t > &d) const

Calculate signed distance to current figure with respect to grid points.

real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
 const

Compute signed distance from a line.

# 7.36.1 Detailed Description

To store and treat a figure (or shape) information.

This class is essentially useful to construct data for mesh generators and for distance calculations.

## 7.36.2 Member Function Documentation

virtual real\_t getSignedDistance ( const Point < real\_t > & p ) const [virtual]

Return signed distance from a given point to current figure.

#### **Parameters**

in	p	Point instance from which distance is computed
----	---	--

Reimplemented in Polygon, Triangle, Ellipse, Sphere, Circle, Brick, and Rectangle.

## void getSignedDistance ( const Grid & g, Vect< real\_t > & d ) const

Calculate signed distance to current figure with respect to grid points.

## **Parameters**

in	8	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

## Remarks

Vector d doesn't need to be sized before invoking this function

real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const

Compute signed distance from a line.

in	р	Point for which distance is computed	
in	а	First vertex of line	
in	b	Second vertex of line	

#### Returns

Signed distance

# 7.37 FMM2D Class Reference

class for the fast marching 2-D algorithm Inherits FMM.

## **Public Member Functions**

- FMM2D (const Grid &g, Vect< real\_t > \*phi, bool HA)
- void InitHeap (Heap &NarrowPt)
- void solve ()

Execute Fast Marching Procedure.

- void Evaluate (IPoint &pt, int sign)
  - compute the distance from node to interface
- void ExtendSpeed (Vect< real\_t > &F)

Extend the speed function to the whole grid.

real\_t check\_error ()

Check error by comparing with the gradient norm.

# 7.37.1 Detailed Description

class for the fast marching 2-D algorithm

This class manages the 2-D Fast Marching method

## 7.37.2 Constructor & Destructor Documentation

FMM2D ( const Grid & g, Vect< real\_t > \* phi, bool HA )

Constructor.

in	g	Instance of class Grid
in	phi	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.
in	HA	true if the program must be executed with high accuracy, false otherwise

# 7.37.3 Member Function Documentation

# void InitHeap ( Heap & NarrowPt )

Initialize the heap

#### **Parameters**

in,out	NarrowPt	Heap containing Narrow points
--------	----------	-------------------------------

# void Evaluate ( IPoint & pt, int sign )

compute the distance from node to interface

#### Parameters

in	pt	node to treat
in	sign	Node sign

#### Returns

distance from node pt to interface

# void ExtendSpeed ( Vect< real\_t > & F )

Extend the speed function to the whole grid.

## Parameters

in,out	F	Vector containing the speed at interface nodes on input and extended speed to
		all grid nodes

## real\_t check\_error( )

Check error by comparing with the gradient norm.

This function returns discrete L<sup>2</sup> and Max. errors

# 7.38 FMM3D Class Reference

class for the 3-D fast marching algorithm Inherits FMM.

## **Public Member Functions**

• FMM3D (const Grid &g, Vect< real\_t > \*phi, bool HA)

Constructor.

• void InitHeap (Heap &NarrowPt)

Initialize heap.

• void solve ()

Execute Fast Marching Procedure.

• void Evaluate (IPoint &pt, int sign)

Compute the distance from node to interface.

• void ExtendSpeed (Vect< real\_t > &F)

Extend the speed function to the whole grid.

• real\_t check\_error ()

Check error by comparing with the gradient norm.

# 7.38.1 Detailed Description

class for the 3-D fast marching algorithm
This class manages the 3-D Fast Marching Method

# 7.38.2 Constructor & Destructor Documentation

FMM3D ( const Grid & g, Vect < real\_t > \* phi, bool HA )

Constructor.

## Parameters

in	8	Instance of class Grid
in	phi	Vector containing the level set function at grid nodes. The values are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface but can take any value on other nodes, provided they have the right sign.
in	HA	true if the program must be executed with high accuracy, false otherwise

# 7.38.3 Member Function Documentation

void InitHeap ( Heap & NarrowPt )

Initialize heap.

Parameters

NarrowPt

# void Evaluate ( IPoint & pt, int sign )

Compute the distance from node to interface.

in	pt	node to treat
in	sign	the node's sign

#### Returns

distance from node pt to interface

## void ExtendSpeed ( Vect< real\_t > & F )

Extend the speed function to the whole grid.

#### **Parameters**

in,out	F	Vector containing the speed at interface nodes on input and extended speed at
		whole grid nodes

#### real\_t check\_error ( )

Check error by comparing with the gradient norm.

This function prints discrete L<sup>2</sup> and Max. errors

# 7.39 FMMSolver Class Reference

The Fast Marching Method solver.

## **Public Member Functions**

• FMMSolver (const Grid &g, Vect< real\_t > &phi, bool ha=false)

Constructor.

• ∼FMMSolver ()

Destructor.

• void solve ()

Execute the fast marching program.

void ExtendSpeed (Vect< real\_t > &F)

Extend speed by Sethian's method.

• real\_t check\_error ()

Return the consistency error of the method.

# 7.39.1 Detailed Description

The Fast Marching Method solver.

This class enables computing the signed distance function with respect to an interface. It works in 2-D and 3-D on a structured grid. The class is an interface for client. It points to FMM

#### 7.39.2 Constructor & Destructor Documentation

FMMSolver ( const Grid & g, Vect < real\_t > & phi, bool ha = false)

Constructor.

in	8	Instance of class Grid defining the grid on which the distance is computed.
----	---	---

in	phi	Vector containing the level set function at grid nodes. The vector entries are 0 on the interface (from which the distance is computed), positive on one side and negative on the other side. They must contain the signed distance on the nodes surrounding the interface. These values identify by linear interpolation the interface position. The vector entries can take any value on other grid nodes, provided they have the right sign.
in	ha	true if high accuracy FMM is active. The high accuracy version is more accurate but requires more accurate values on the nodes neighbouring the interface.

## 7.39.3 Member Function Documentation

## void ExtendSpeed ( Vect< real\_t > & F )

Extend speed by Sethian's method.

The method consists in calculating a speed F such that its gradient is orthogonal to the gradient of the level set function

#### **Parameters**

in,out	F	Speed function where on input the value of the function is meaningful on the
		interface. On output F contains the extended speed

## real\_t check\_error( )

Return the consistency error of the method.

Consistency is measured by computing the discrete value of the norm of the gradient of the signed distance and subtracting the obtained norm from 1. The absolute value of the result is returned.

# 7.40 Funct Class Reference

A simple class to parse real valued functions.

# **Public Member Functions**

• Funct ()

Default constructor.

• Funct (string v)

Constructor for a function of one variable.

• Funct (string v1, string v2)

 $Constructor\ for\ a\ function\ of\ two\ variables.$ 

• Funct (string v1, string v2, string v3)

Constructor for a function of three variables.

• Funct (string v1, string v2, string v3, string v4)

Constructor for a function of four variables.

• ~Funct ()

Destructor.

• real\_t operator() (real\_t x) const

Operator () to evaluate the function with one variable x

• real\_t operator() (real\_t x, real\_t y) const

Operator () to evaluate the function with two variables x, y

• real\_t operator() (real\_t x, real\_t y, real\_t z) const

Operator () to evaluate the function with three variables x, y, z

• real\_t operator() (real\_t x, real\_t y, real\_t z, real\_t t) const

Operator () to evaluate the function with four variables x, y, z

• void operator= (string e)

Operator = .

# 7.40.1 Detailed Description

A simple class to parse real valued functions.

Functions must have 1, 2, 3 or at most 4 variables.

## Warning

Data in the file must be listed in the following order:

```
for x=x_0,...,x_I

for y=y_0,...,y_J

for z=z_0,...,z_K

read v(x,y,z)
```

# 7.40.2 Constructor & Destructor Documentation

# Funct ( string v )

Constructor for a function of one variable.

## Parameters

in	v	Name of the variable

# Funct ( string v1, string v2 )

Constructor for a function of two variables.

#### **Parameters**

in	v1	Name of the first variable
in	<i>v</i> 2	Name of the second variable

## Funct ( string v1, string v2, string v3 )

Constructor for a function of three variables.

in	v1	Name of the first variable
----	----	----------------------------

in	<i>v</i> 2	Name of the second variable
in	<i>v</i> 3	Name of the third variable

# Funct ( string v1, string v2, string v3, string v4 )

Constructor for a function of four variables.

#### **Parameters**

in	v1	Name of the first variable
in	<i>v</i> 2	Name of the second variable
in	<i>v</i> 3	Name of the third variable
in	v4	Name of the fourth variable

## 7.40.3 Member Function Documentation

void operator= ( string e )

Operator =.

Define the function by an algebraic expression following regexp rules

#### **Parameters**

	in	e	Algebraic expression defining the function.
--	----	---	---

# 7.41 Gauss Class Reference

Calculate data for Gauss integration.

## **Public Member Functions**

• Gauss ()

Default constructor.

• Gauss (size\_t np)

Constructor using number of Gauss points.

• void setTriangle (LocalVect< real\_t, 7 > &w, LocalVect< Point< real\_t >, 7 > &x)

Choose integration on triangle (7-point formula)

• real\_t x (size\_t i) const

Return coordinate of i-th Gauss-Legendre point.

• const Point < real\_t > & xt (size\_t i) const

Return coordinates of points in the reference triangle.

• real\_t w (size\_t i) const

Return weight of i-th Gauss-Legendre point.

# 7.41.1 Detailed Description

Calculate data for Gauss integration.

#### 7.41.2 Member Function Documentation

void setTriangle ( LocalVect< real\_t, 7 > & w, LocalVect< Point< real\_t >, 7 > & x)

Choose integration on triangle (7-point formula)

If this is not selected, Gauss integration formula on [-1,1] is calculated.

## 7.42 Grid Class Reference

To manipulate structured grids.

#### **Public Member Functions**

• Grid ()

Construct a default grid with 10 intervals in each direction.

• Grid (real\_t xm, real\_t xM, size\_t npx)

Construct a 1-D structured grid given its extremal coordinates and number of intervals.

• Grid (real\_t xm, real\_t xM, real\_t ym, real\_t yM, size\_t npx, size\_t npy)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

• Grid (Point< real\_t > m, Point< real\_t > M, size\_t npx, size\_t npy)

Construct a 2-D structured grid given its extremal coordinates and number of intervals.

• Grid (real\_t xm, real\_t xM, real\_t ym, real\_t yM, real\_t zm, real\_t zM, size\_t npx, size\_t npx, size\_t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

Grid (Point < real\_t > m, Point < real\_t > M, size\_t npx, size\_t npy, size\_t npz)

Construct a 3-D structured grid given its extremal coordinates and number of intervals.

void setXMin (const Point< real\_t > &x)

Set min. coordinates of the domain.

- void setXMax (const Point < real\_t > &x)
- void setDomain (real\_t xmin, real\_t xmax)

Set Dimensions of the domain: 1-D case.

void setDomain (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax)

Set Dimensions of the domain: 2-D case.

• void setDomain (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, real\_t zmin, real\_t zmax)

Set Dimensions of the domain: 3-D case.

void setDomain (Point< real\_t > xmin, Point< real\_t > xmax)

Set Dimensions of the domain: 3-D case.

• const Point< real\_t > & getXMin () const

Return min. Coordinates of the domain.

• const Point< real\_t > & getXMax () const

Return max. Coordinates of the domain.

• void setN (size\_t nx, size\_t ny=0, size\_t nz=0)

Set number of grid intervals in the x, y and z-directions.

• size\_t getNx () const

Return number of grid intervals in the x-direction.

size\_t getNy () const

Return number of grid intervals in the y-direction.

• size\_t getNz () const

Return number of grid intervals in the z-direction.

real\_t getHx () const

Return grid size in the x-direction.

• real\_t getHy () const

Return grid size in the y-direction.

real\_t getHz () const

Return grid size in the z-direction.

Point< real\_t > getCoord (size\_t i) const

Return coordinates a point with label i in a 1-D grid.

Point< real\_t > getCoord (size\_t i, size\_t j) const

Return coordinates a point with label (i, j) in a 2-D grid.

Point< real\_t > getCoord (size\_t i, size\_t j, size\_t k) const

Return coordinates a point with label (i, j, k) in a 3-D grid.

• real\_t getX (size\_t i) const

Return x-coordinate of point with index i

real\_t getY (size\_t j) const

Return y-coordinate of point with index j

real\_t getZ (size\_t k) const

Return z-coordinate of point with index k

Point2D < real\_t > getXY (size\_t i, size\_t j) const

Return coordinates of point with indices (i, j)

Point< real\_t > getXYZ (size\_t i, size\_t j, size\_t k) const

Return coordinates of point with indices (i, j, k)

• real\_t getCenter (size\_t i) const

Return coordinates of center of a 1-D cell with indices i, i+1

Point < real\_t > getCenter (size\_t i, size\_t j) const

Return coordinates of center of a 2-D cell with indices (i, j), (i+1, j), (i+1, j+1), (i, j+1)

• Point< real\_t > getCenter (size\_t i, size\_t j, size\_t k) const

Return coordinates of center of a 3-D cell with indices (i,j,k), (i+1,j,k), (i+1,j+1,k), (i,j+1,k), (i,j,k+1), (i+1,j,k+1), (i+1,j+1,k+1), (i,j+1,k+1)

• void setCode (string exp, int code)

Set a code for some grid points.

• void setCode (int side, int code)

Set a code for grid points on sides.

• int getCode (int side) const

Return code for a side number.

• int getCode (size\_t i, size\_t j) const

Return code for a grid point.

• int getCode (size\_t i, size\_t j, size\_t k) const

Return code for a grid point.

size\_t getDim () const

Return space dimension.

• void Deactivate (size\_t i)

Change state of a cell from active to inactive (1-D grid)

void Deactivate (size\_t i, size\_t j)

Change state of a cell from active to inactive (2-D grid)

• void Deactivate (size\_t i, size\_t j, size\_t k)

Change state of a cell from active to inactive (2-D grid)

• int isActive (size\_t i) const

Say if cell is active or not (1-D grid)

• int isActive (size\_t i, size\_t j) const

Say if cell is active or not (2-D grid)

• int isActive (size\_t i, size\_t j, size\_t k) const


Say if cell is active or not (3-D grid)

# 7.42.1 Detailed Description

To manipulate structured grids.

# 7.43 HelmholtzBT3 Class Reference

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles. Inheritance diagram for HelmholtzBT3:

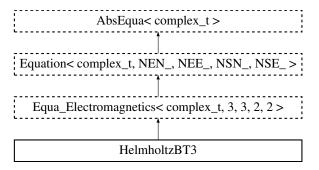

## **Public Member Functions**

• HelmholtzBT3 ()

Default Constructor.

• HelmholtzBT3 (Element \*el)

Constructor using element data.

HelmholtzBT3 (Side \*sd)

Constructor using side data.

• ~HelmholtzBT3 ()

Destructor.

void LHS (real\_t wave\_nb)

Add element Left-Hand Side.

• void BoundaryRHS (UserData < complex\_t > &ud)

Add element Right-Hand Side using a UserData instance.

void updateBC (const Element &el, const Vect< complex\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void updateBC (const Vect< complex\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

void LocalNodeVector (Vect< complex\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

 void ElementNodeVectorSingleDOF (const Vect< complex\_t > &b, LocalVect< complex\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< complex\_t > &b, LocalVect< complex\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< complex\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

  Localize Element Vector.
- void SideVector (const Vect < complex\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix < complex\_t > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < complex\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< complex\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < complex\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< complex\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < complex\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< complex\_t > &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix < complex\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < complex\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< complex<sub>-</sub>t > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix < complex\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < complex\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< complex\_t > &x, Vect< complex\_t > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< complex\_t > &x, Vect< complex\_t > &b)

Assemble product of side matrix by side vector into global vector.

size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< complex\_t > &u)

Set initial solution (previous time step)

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < complex\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < complex\_t > \*A, Vect < complex\_t > &b, Vect < complex\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< complex\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< complex\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< complex\_t, NEE\_ > ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< complex\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< complex\_t, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< complex\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

void MagneticPermeability (const real\_t &mu)

Set (constant) magnetic permeability.

void MagneticPermeability (const string &exp)

Set magnetic permeability given by an algebraic expression.

• void ElectricConductivity (const real\_t &sigma)

Set (constant) electric conductivity.

• void ElectricConductivity (const string &exp)

set electric conductivity given by an algebraic expression

• void ElectricResistivity (const real\_t &rho)

Set (constant) electric resistivity.

• void ElectricResistivity (const string &exp)

Set electric resistivity given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.43.1 Detailed Description

Builds finite element arrays for Helmholtz equations in a bounded media using 3-Node triangles. Problem being formulated in time harmonics, the solution is complex valued.

# 7.43.2 Member Function Documentation

void updateBC ( const Element & el, const Vect< complex t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

586 OFELI's Reference Guide

# void updateBC ( const Vect< complex $_{ ext{-}}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < complex_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< complex_t > \& b, LocalVect< complex_t , NEE_> \& be ) [inherited]$

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	; be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# $\label{localVect} woid \ ElementNodeVector (\ const \ Vect < complex_t > \&\ b,\ LocalVect < complex_t \ , \ NEN_- > \&\ be,\ int\ dof\ ) \ \ [inherited]$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equation	
in	dof	Degree of freedom to transfer to the local vector	

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< complex\_t > & b, LocalVect< complex\_t , NEN\_> & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< complex\_t > & b, LocalVect< complex\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< complex\_t > & b, int $dof\_type = NODE\_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		• SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

# ${f void\ SideVector\ (\ const\ Vect < complex\_t > \&\ b}$ ) [inherited]

Localize Side Vector.

# Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates ( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < complex_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $PETScMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

# ${\bf void} \; {\bf ElementAssembly} \; ( \; {\bf PETScVect} {<} \; {\bf complex\_t} > \& \; b \; \; ) \quad {\tt [inherited]}$

Assemble element right-hand side vector into global one.

## **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( BMatrix< complex\_t > & A ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

# $void\ ElementAssembly\ (\ SkSMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one.

#### Parameters

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

# ${\bf void} \; {\bf ElementAssembly} \; ( \; {\bf SkMatrix} {<} \; {\bf complex}\_{\bf t} > \& \; A \; ) \quad [{\tt inherited}]$

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance	1
----	---	--	---

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix< complex\_t > & A ) [inherited]

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $TrMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one.

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < complex_t > \& v$ ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# $void\ SideAssembly\ (\ PETScMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble side matrix into global one.

#### Parameters

d		
	A	Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ PETScVect < complex_t > \&\ b\ )\ [inherited]$

Assemble side right-hand side vector into global one.

#### **Parameters**

b Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# ${\bf void \ Side Assembly \ ( \ Matrix{<} \ complex\_t > *A \ ) \quad [{\tt inherited}]}$

Assemble side (edge or face) matrix into global one.

Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ SkSMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ SkMatrix{<}\ complex_t > \&\ A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ ( \ SpMatrix < complex_t > \& \ A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< complex $_{ ext{-}}t > \& v$ ) [inherited]

Assemble side (edge or face) vector into global one.

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix < complex_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkSMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

Α	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## $void\ DGElementAssembly\ (\ SkMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SpMatrix < complex_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

	in	A	Global matrix stored as an SpMatrix instance	]
--	----	---	--	---

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < complex_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< complex\_t > & x, Vect< complex\_t > & b) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance Global vector to multiply by (Vect instance) Global vector to add (Vect instance)	
in	x		
out	b		

# void AxbAssembly ( const Side & sd, const Vect< complex\_t > & x, Vect< complex\_t > & b) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance	
in	х	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	exp	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

int SolveLinearSystem ( Matrix< complex\_t > \* A, Vect< complex\_t > & b, Vect< complex\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.43.3 Member Data Documentation

LocalVect<complex\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.44 Hexa8 Class Reference

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation.

Inheritance diagram for Hexa8:



# **Public Member Functions**

• Hexa8 ()

Default Constructor.

• Hexa8 (const Element \*el)

Constructor when data of Element el are given.

• ∼Hexa8 ()

Destructor.

• void setLocal (const Point < real\_t > &s)

Initialize local point coordinates in element.

• Point< real\_t > DSh (size\_t i)

Return x, y and z partial derivatives of shape function of node i at a given point.

• void atGauss1 (LocalVect< Point< real\_t >, 8 > &dsh, real\_t &w)

Calculate shape function derivatives and integration weights for 1-point Gauss rule.

• void atGauss2 (LocalMatrix< Point< real\_t >, 8, 8 > &dsh, LocalVect< real\_t, 8 > &w)

Calculate shape function derivatives and integration weights for 2x2x2-point Gauss rule.

• real\_t getMaxEdgeLength () const

Return maximal edge length.

real\_t getMinEdgeLength () const

Return minimal edge length.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node *i* at a given point.

real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.44.1 Detailed Description

Defines a three-dimensional 8-node hexahedral finite element using Q1-isoparametric interpolation

The reference element is the cube [-1,1]\*[-1,1]\*[-1,1]. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function **getLocal(s)** must be invoked.

#### 7.44.2 Member Function Documentation

void setLocal ( const Point< real\_t > & s )

Initialize local point coordinates in element.

# Parameters

in	S	Point in the reference element This function computes jacobian, shape functions and
		their partial derivatives at s. Other member functions only return these values.

#### Point<real\_t> DSh ( size\_t i )

Return x, y and z partial derivatives of shape function of node i at a given point.

Member function *setLocal* must have been called before in order to calculate relevant quantities.

#### real\_t Sh ( size\_t i, Point < real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

in	i	Local node label

in	S	Point in the reference triangle where the shape function is evaluated	]
----	---	---	---

## Point<real\_t> DSh ( size\_t i ) const [inherited]

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

#### **Parameters**

	in	i	Partial derivative index (1, 2 or 3)
--	----	---	--------------------------------------

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.


# $Point < real_t > getLocalPoint (const Point < real_t > & s) const [inherited]$

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.45 ICPG1D Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D. Inheritance diagram for ICPG1D:



# **Public Types**

# **Public Member Functions**

• ICPG1D (Mesh &ms)

Constructor using Mesh instance.

ICPG1D (Mesh &ms, Vect< real\_t > &r, Vect< real\_t > &v, Vect< real\_t > &p)

Constructor using mesh and initial data.

• ~ICPG1D ()

Destructor.

• void setReconstruction ()

Set reconstruction from class Muscl.

real\_t runOneTimeStep ()

Advance one time step.

void Forward (const Vect< real\_t > &flux, Vect< real\_t > &field)

Add flux to field.

• void setSolver (SolverType solver)

Choose solver type.

• void setGamma (real\_t gamma)

Set value of constant Gamma for gases.

• void setCv (real\_t Cv)

Set value of Cv (specific heat at constant volume)

void setCp (real\_t Cp)

Set value of  $C_v$  (specific heat at constant pressure)

• void setKappa (real\_t Kappa)

Set value of constant Kappa.

• real\_t getGamma () const

Return value of constant Gamma.

• real\_t getCv () const

Return value of  $C_v$  (specific heat at constant volume)

real\_t getCp () const

*Return value of*  $C_p$  (specific heat at constant pressure)

• real\_t getKappa () const

Return value of constant Kappa.

• void getMomentum (Vect< real\_t > &m) const

Get vector of momentum at elements.

• void getInternalEnergy (Vect< real\_t > &ie) const

Get vector of internal energy at elements.

• void getTotalEnergy (Vect< real\_t > &te) const

Get vector of total energy at elements.

void getSoundSpeed (Vect< real\_t > &s) const

Get vector of sound speed at elements.

• void getMach (Vect< real\_t > &m) const

Get vector of elementwise Mach number.

void setInitialCondition\_shock\_tube (const LocalVect< real\_t, 3 > &BcG, const LocalVect< real\_t, 3 > &BcD, real\_t x0)

*Initial condition corresponding to the shock tube.* 

• void setInitialCondition (const LocalVect< real\_t, 3 > &u)

A constant initial condition.

• void setBC (const Side &sd, real\_t u)

Assign a boundary condition as a constant to a given side.

• void setBC (int code, real\_t a)

Assign a boundary condition value.

• void setBC (real\_t a)

Assign a boundary condition value.

• void setBC (const Side &sd, const LocalVect< real\_t, 3 > &u)

Assign a Dirichlet boundary condition vector.

• void setBC (int code, const LocalVect< real\_t, 3 > &U)

Assign a Dirichlet boundary condition vector.

• void setBC (const LocalVect< real\_t, 3 > &u)

Assign a Dirichlet boundary condition vector.

• void setInOutflowBC (const Side &sd, const LocalVect< real\_t, 3 > &u)

Impose a constant inflow or outflow boundary condition on a given side.

• void setInOutflowBC (int code, const LocalVect< real\_t, 3 > &u)

Impose a constant inflow or outflow boundary condition on sides with a given code.

• void setInOutflowBC (const LocalVect< real\_t, 3 > &u)

Impose a constant inflow or outflow boundary condition on boundary sides.

• real\_t getMeanLength () const

Return mean length.

• real\_t getMaximumLength () const

Return maximal length.

• real\_t getMinimumLength () const

Return mimal length.

• real\_t getTauLim () const

Return mean length.

void print\_mesh\_stat ()

Output mesh information.

void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• void setReferenceLength (real\_t dx)

Assign reference length value.

real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.45.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 1-D. Solution method is a second-order MUSCL Finite Volume scheme

## 7.45.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

# 7.45.3 Constructor & Destructor Documentation

ICPG1D ( Mesh & ms, Vect< real\_t > & r, Vect< real\_t > & v, Vect< real\_t > & p)

Constructor using mesh and initial data.

#### Parameters

in	ms	Reference to Mesh instance
in	r	Vector containing initial (elementwise) density
in	v	Vector containing initial (elementwise) velocity
in	p	Vector containing initial (elementwise) pressure

## 7.45.4 Member Function Documentation

void Forward ( const Vect< real\_t > & flux, Vect< real\_t > & field )

Add flux to field.

If this function is used, the user must call getFlux himself

#### Parameters

in	flux	Vector containing fluxes at sides (points)
out	field	Vector containing solution vector

# void getMomentum ( Vect< real\_t > & m ) const

Get vector of momentum at elements.

#### **Parameters**

in,out	m	Vect instance that contains on output element momentum	
--------	---	--	--

# void getInternalEnergy ( $Vect < real_t > \& ie$ ) const

Get vector of internal energy at elements.

#### Parameters

in out	iρ	Vect instance that contains on output element internal energy
III, Out	ii	veet histairee that contains on output element internal chergy

# void getTotalEnergy ( Vect< real\_t > & te ) const

Get vector of total energy at elements.

in,out	te	Vect instance that contains on output element total energy	
--------	----	--	--

# void getSoundSpeed ( Vect< real\_t > & s ) const

Get vector of sound speed at elements.

## Parameters

in,out	s	Vect instance that contains on output element sound speed
--------	---	---

# void getMach ( Vect< real\_t > & m ) const

Get vector of elementwise Mach number.

#### **Parameters**

	in,out	m	Vect instance that contains on output element Mach number	
--	--------	---	---	--

# void setInitialCondition ( const LocalVect< real\_t, 3 > & u )

A constant initial condition.

#### **Parameters**

in	и	LocalVect instance containing density, velocity and pressure
----	---	--

# void setBC ( const Side & sd, real\_t u )

Assign a boundary condition as a constant to a given side.

## Parameters

in	sd	Side to which the value is assigned
in	и	Value to assign

# void setBC ( int code, real\_t a )

Assign a boundary condition value.

## Parameters

in	code	Code value to which boundary condition is assigned
in	а	Value to assign to sides that have code code

# void setBC ( real\_t a )

Assign a boundary condition value.

	in	а	Value to assign to all boundary sides
--	----	---	---------------------------------------

# void setBC ( const Side & sd, const LocalVect< real\_t, 3 > & u)

Assign a Dirichlet boundary condition vector.

#### Parameters

in	sd	Side instance to which the values are assigned
in	и	LocalVect instance that contains values to assign to the side

# void setBC ( int *code*, const LocalVect< real\_t, 3 > & U )

Assign a Dirichlet boundary condition vector.

#### Parameters

in	code	Side code for which the values are assigned
in	U	LocalVect instance that contains values to assign to sides with code <i>code</i>

# void setBC ( const LocalVect< real\_t, 3 > & u )

Assign a Dirichlet boundary condition vector.

## Parameters

in	и	LocalVect instance that contains values to assign to all boundary sides	
----	---	---	--

# void setInOutflowBC ( const Side & sd, const LocalVect< real\_t, 3 > & u)

Impose a constant inflow or outflow boundary condition on a given side.

# Parameters

in	sd	Instance of Side on which the condition is prescribed
in	и	LocalVect instance that contains values to assign to the side

# void setInOutflowBC ( int code, const LocalVect< real\_t, 3 > & u )

Impose a constant inflow or outflow boundary condition on sides with a given code.

in	code	Value of code for which the condition is prescribed

in	и	LocalVect instance that contains values to assign to the sides
----	---	--

# void setInOutflowBC ( const LocalVect< real\_t, 3 > & u )

Impose a constant inflow or outflow boundary condition on boundary sides.

#### Parameters

	in	и	LocalVect instance that contains values to assign to the sides	
--	----	---	--	--

# $void setTimeStep ( real_t dt ) [inherited]$

Assign time step value.

## Parameters

in	dt	Time step value
----	----	-----------------

# void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

#### Parameters

in CFL	Value of CFL
--------	--------------

# ${f void \ setReferenceLength \ ( \ real\_t \ dx \ ) \ \ [inherited]}$

Assign reference length value.

## Parameters

in	dx	Value of reference length
----	----	---------------------------

# ${f void\ setVerbose\ (\ int\ v\ )}$ [inherited]

Set verbosity parameter.

in	v	Value of verbosity parameter

bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof) [inherited]

Function to reconstruct by the Muscl method.

#### Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

# ${f void\ setMethod\ (\ const\ Method\ \&\ s\ )}$ [inherited]

Choose a flux solver.

#### Parameters

in	S	Solver to choose
----	---	------------------

# void setLimiter( Limiter l) [inherited]


Choose a flux limiter.

## Parameters

in	1	Limiter to choose
111	ı	Limite to choos

# 7.46 ICPG2DT Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D. Inheritance diagram for ICPG2DT:



# **Public Types**

# **Public Member Functions**

• ICPG2DT (Mesh &ms)

Constructor using mesh instance.

• ICPG2DT (Mesh &ms, Vect< real\_t > &r, Vect< real\_t > &v, Vect< real\_t > &p)

Constructor using mesh and initial data.

• ~ICPG2DT ()

Destructor.

• void setReconstruction ()

Reconstruct.

• real\_t runOneTimeStep ()

Advance one time step.

void Forward (const Vect< real\_t > &Flux, Vect< real\_t > &Field)

Add Flux to Field.

real\_t getFlux ()

Get flux.

• void setSolver (SolverType s)

Choose solver.

• void setGamma (real\_t gamma)

Set Gamma value.

void setCv (real\_t Cv)

Set value of heat capacity at constant volume.

void setCp (real\_t Cp)

Set value of heat capacity at constant pressure.

• void setKappa (real\_t Kappa)

Set Kappa value.

• real\_t getGamma () const

Return value of Gamma.

real\_t getCv () const

Return value of heat capacity at constant volume.

real\_t getCp () const

Return value of heat capacity at constant pressure.

• real\_t getKappa () const

Return value of Kappa.

Mesh & getMesh ()

Return reference to mesh instance.

• void getMomentum (Vect< real\_t > &m) const

Calculate elementwise momentum.

• void getInternalEnergy (Vect< real\_t > &e) const

Calculate elementwise internal energy.

void getTotalEnergy (Vect< real\_t > &e) const

Return elementwise total energy.

• void getSoundSpeed (Vect< real\_t > &s) const

 $Return\ elementwise\ sound\ speed.$ 

• void getMach (Vect< real\_t > &m) const

Return elementwise Mach number.

• void setBC (const Side &sd, real\_t a)

Prescribe a constant boundary condition at given side.

• void setBC (int code, real\_t a)

Prescribe a constant boundary condition for a given code.

• void setBC (real\_t u)

Prescribe a constant boundary condition on all boundary sides.

• void setBC (const Side &sd, const LocalVect< real\_t, 4 > &u)

Prescribe a constant boundary condition at a given side.

• void setBC (int code, const LocalVect< real\_t, 4 > &u)

Prescribe a constant boundary condition for a given code.

• void setBC (const LocalVect< real\_t, 4 > &u)

Prescribe a constant boundary condition at all boundary sides.

• real\_t getR (size\_t i) const

Return density at given element label.

- real\_t getV (size\_t i, size\_t j) const
- real\_t getP (size\_t i) const

Return pressure at given element label.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

• void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

void setReferenceLength (real\_t dx)

Assign reference length value.

• real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter 1)

Choose a flux limiter.

#### **Protected Member Functions**

• void Initialize ()

Construction of normals to sides.

# 7.46.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 2-D. Solution method is a second-order MUSCL Finite Volume scheme on triangles

#### 7.46.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

#### enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

#### Enumerator

ROE\_SOLVER Roe solver

VFROE\_SOLVER Finite Volume Roe solver

LF\_SOLVER LF solver

RUSANOV\_SOLVER Rusanov solver

HLL\_SOLVER HLL solver

HLLC\_SOLVER HLLC solver

MAX\_SOLVER Max solver

#### 7.46.3 Constructor & Destructor Documentation

ICPG2DT ( Mesh & ms, Vect< real\_t > & r, Vect< real\_t > & v, Vect< real\_t > & p)

Constructor using mesh and initial data.

in	ms	Mesh instance
in	r	Initial density vector (as instance of Vect)
6 <del>10</del>	v	Initial velocity vector (as instance of Vect)
in	p	Initial pressure vector (as instance of Vect)

# 7.46.4 Member Function Documentation

#### void setReconstruction ( )

Reconstruct.

exit(3) if reconstruction fails

# void Forward ( const Vect< real\_t > & Flux, Vect< real\_t > & Field )

Add Flux to Field.

If this function is used, the function getFlux must be called

# void setSolver ( SolverType s )

Choose solver.

#### **Parameters**

in	S	Index of solver in the enumerated variable SolverType Available values are:
		ROE_SOLVER, VFROE_SOLVER, LF_SOLVER, RUSANOV_SOLVER, HLL_SOLVER, HLLC_SOLVER,
		MAX_SOLVER

# void setBC ( const Side & sd, real\_t a )

Prescribe a constant boundary condition at given side.

# Parameters

in	sd	Reference to Side instance
in	а	Value to prescribe

# void setBC ( int code, real\_t a )

Prescribe a constant boundary condition for a given code.

#### **Parameters**

in	code	Code for which value is imposed
in	а	Value to prescribe

# void setBC ( real\_t u )

Prescribe a constant boundary condition on all boundary sides.

in	и	Value to prescribe

# void setBC ( const Side & sd, const LocalVect< real\_t, 4 > & u )

Prescribe a constant boundary condition at a given side.

#### Parameters

in	sd	Reference to Side instance
in	и	Vector (instance of class LocalVect) with as components the constant values to
		prescribe for the four fields (r, vx, vy, p)

# void setBC ( int *code*, const LocalVect< real\_t, 4 > & u )

Prescribe a constant boundary condition for a given code.

#### **Parameters**

in	code	Code for which value is imposed
in	и	Vector (instance of class LocalVect) with as components the constant values to
		prescribe for the four fields (r, vx, vy, p)

# void setBC ( const LocalVect< real\_t, 4 > & u )

Prescribe a constant boundary condition at all boundary sides.

### Parameters

in	и	Vector (instance of class Local Vect) with as components the constant values to
		prescribe for the four fields (r, vx, vy, p)

# real\_t getR ( size\_t i ) const

Return density at given element label.

## Parameters

in	i	Element label

# real\_t getV ( size\_t i, size\_t j ) const

Return velocity at given element label

in	i	Element label
in	j	component index (1 or 2)

### real\_t getP ( size\_t i ) const

Return pressure at given element label.

#### Parameters

in i Element label
--------------------

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof ) [inherited]

Function to reconstruct by the Muscl method.

#### **Parameters**

in	U	Field to reconstruct	
out	LU	Left gradient vector	
out	RU	Right gradient vector	
in	dof	Label of dof to reconstruct	

# void Initialize( ) [protected], [inherited]

Construction of normals to sides.

Convention: for a given side, getPtrElement(1) is the left element and getPtrElement(2) is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

#### void setTimeStep ( real\_t dt ) [inherited]

Assign time step value.

#### **Parameters**

i	n	dt	Time step value
---	---	----	-----------------

# void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

# Parameters

in	CFL	Value of CFL

# void setReferenceLength ( real\_t dx ) [inherited]

Assign reference length value.

	in	dx	Value of reference length
--	----	----	---------------------------

# ${f void\ setVerbose\ (\ int\ v\ )}$ [inherited]

Set verbosity parameter.

#### Parameters

	in	v	Value of verbosity parameter	
--	----	---	------------------------------	--

#### void setMethod ( const Method & s ) [inherited]

Choose a flux solver.

#### Parameters

in	S	Solver to choose
----	---	------------------

# void setLimiter( Limiter l) [inherited]


Choose a flux limiter.

#### **Parameters**

in <i>l</i> Lim	niter to choose
-----------------	-----------------

# 7.47 ICPG3DT Class Reference

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D. Inheritance diagram for ICPG3DT:



# **Public Types**

# **Public Member Functions**

• ICPG3DT (Mesh &ms)

Constructor using mesh data.

• ICPG3DT (Mesh &ms, Vect< real\_t > &r, Vect< real\_t > &v, Vect< real\_t > &p)

Constructor using mesh and initial data.

• ~ICPG3DT ()

Destructor.

void setReconstruction ()

Reconstruct.

real\_t runOneTimeStep ()

Advance one time step.

void Forward (const Vect< real\_t > &flux, Vect< real\_t > &field)

Add flux to field.

real\_t getFlux ()

Return flux.

• void setReferenceLength (real\_t dx)

Assign a reference length.

• void setTimeStep (real\_t dt)

Assign a time step.

• void setCFL (real\_t CFL)

Assign CFL value.

real\_t getReferenceLength () const

Return reference length.

real\_t getTimeStep () const

Return time step.

real\_t getCFL () const

Return CFL.

• void setGamma (real\_t gamma)

Set  $\gamma$  value.

void setCv (real\_t Cv)

Set value of  $C_v$  (Heat capacity at constant volume)

• void setCp (real\_t Cp)

*Set value of*  $C_p$  (*Heat capacity at constant pressure*)

• void setKappa (real\_t Kappa)

Set Kappa value.

• real\_t getGamma () const

Return value of  $\gamma$ .

• real\_t getCv () const

Return value of  $C_v$  (Heat capacity at constant volume)

real\_t getCp () const

Return value of  $C_p$  (Heat capacity at constant pressure)

• real\_t getKappa () const

Return value of  $\kappa$ .

Mesh & getMesh ()

Return reference to mesh instance.

Mesh \* getPtrMesh ()

Return pointer to mesh.

• void getMomentum (Vect< real\_t > &m) const

Calculate elementwise momentum.

void getInternalEnergy (Vect< real\_t > &e) const

Calculate elementwise internal energy.

void getTotalEnergy (Vect< real\_t > &e) const

Return elementwise total energy.

void getSoundSpeed (Vect< real\_t > &s) const

Return elementwise sound speed.

void getMach (Vect< real\_t > &m) const

Return elementwise Mach number.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

real\_t getMinimumFaceArea () const

Return minimum area of faces in the mesh.

• real\_t getMinimumElementVolume () const

Return minimum volume of elements in the mesh.

real\_t getMaximumFaceArea () const

Return maximum area of faces in the mesh.

real\_t getMaximumElementVolume () const

Return maximum volume of elements in the mesh.

real\_t getMeanFaceArea () const

Return mean area of faces in the mesh.

real\_t getMeanElementVolume () const

Return mean volume of elements in the mesh.

real\_t getMinimumEdgeLength () const

Return minimum length of edges in the mesh.

• real\_t getMinimumVolumebyArea () const

Return minimum volume by area in the mesh.

 $\bullet \ \ real\_t \ getMaximumEdgeLength \ () \ const$ 

Return maximum length of edges in the mesh.

• real\_t getTauLim () const

Return value of tau lim.

real\_t getComega () const

Return value of Comega.

• void setbetalim (real\_t bl)

Assign value of beta lim.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.47.1 Detailed Description

Class to solve the Inviscid compressible fluid flows (Euler equations) for perfect gas in 3-D. Solution method is a second-order MUSCL Finite Volume scheme with tetrahedra

#### 7.47.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

#### enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver

VFROE\_SOLVER Finite Volume Roe solver

LF\_SOLVER LF solver

RUSANOV\_SOLVER Rusanov solver

HLL\_SOLVER HLL solver

HLLC\_SOLVER HLLC solver

MAX\_SOLVER Max solver

#### 7.47.3 Constructor & Destructor Documentation

ICPG3DT ( Mesh & ms )

Constructor using mesh data.

Parameters

in ms Mesh instance

# ICPG3DT ( Mesh & ms, Vect< real\_t > & r, Vect< real\_t > & v, Vect< real\_t > & p )

Constructor using mesh and initial data.

#### Parameters

in	ms	Mesh instance
in	r	Elementwise initial density vector (as instance of Element Vect)
in	v	Elementwise initial velocity vector (as instance of Element Vect)
in	р	Elementwise initial pressure vector (as instance of Element Vect)

# 7.47.4 Member Function Documentation

void setReconstruction ( )

Reconstruct.

exit(3) if reconstruction failed

bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof ) [inherited]

Function to reconstruct by the Muscl method.

#### Parameters

in	U	Field to reconstruct	
out	LU	Left gradient vector	
out	RU	Right gradient vector	
in	dof	Label of dof to reconstruct	

# void setVerbose ( int v ) [inherited]

Set verbosity parameter.

#### Parameters

in	v	Value of verbosity parameter

# void setMethod ( const Method & s ) [inherited]

Choose a flux solver.

in	s	Solver to choose

#### void setLimiter( Limiter l) [inherited]

Choose a flux limiter.

**Parameters** 

in *l* Limiter to choose

# 7.48 IOField Class Reference

Enables working with files in the XML Format. Inherits XMLParser.

# **Public Types**

# **Public Member Functions**

• IOField ()

Default constructor.

• IOField (const string &file, AccessType access, bool compact=true)

Constructor using file name.

• IOField (const string &mesh\_file, const string &file, Mesh &ms, AccessType access, bool compact=true)

Constructor using file name, mesh file and mesh.

• IOField (const string &file, Mesh &ms, AccessType access, bool compact=true)

Constructor using file name and mesh.

• IOField (const string &file, AccessType access, const string &name)

Constructor using file name and field name.

• ∼IOField ()

Destructor.

• void setMeshFile (const string &file)

Set mesh file.

• void open ()

Open file.

• void open (const string &file, AccessType access)

Open file.

• void close ()

Close file.

• void put (Mesh &ms)

Store mesh in file.

• void put (const Vect< real\_t > &v)

Store Vect instance v in file.

• void put (const PETScVect< real\_t > &v)

Store PETScVect instance v in file.

real\_t get (Vect< real\_t > &v)

Get Vect v instance from file.

int get (Vect< real\_t > &v, const string &name)

Get Vect v instance from file if the field has the given name.

• int get (DMatrix < real\_t > &A, const string &name)

Get DMatrix A instance from file if the field has the given name.

int get (DSMatrix < real\_t > &A, const string &name)

Get DSMatrix A instance from file if the field has the given name.

• int get (Vect< real\_t > &v, real\_t t)

Get Vect v instance from file corresponding to a specific time value.

• void saveGMSH (string output\_file, string mesh\_file)

Save field vectors in a file using GMSH format.

# 7.48.1 Detailed Description

Enables working with files in the XML Format.

This class has methods to store vectors in files and read from files.

# 7.49 IPF Class Reference

To read project parameters from a file in IPF format.

## **Public Member Functions**

• IPF ()

Default constructor.

• IPF (const string &file)

Constructor that gives the data file name.

IPF (const string &prog, const string &file)

Constructor that reads parameters in file file and prints header information for the calling program prog. It reads parameters in IPF Format from this file.

• ~IPF ()

Destructor.

real\_t getDisplay ()

Display acquired parameters.

• int getVerbose () const

Return parameter read using keyword Verbose.

• int getOutput () const

Return parameter read using keyword **Output**.

• int getSave () const

Return parameter read using keyword Save.

• int getPlot () const

Return parameter read using keyword Plot.

• int getBC () const

Return parameter read using keyword BC.

• int getBF () const

Return parameter read using keyword BF.

• int getSF () const

Return parameter read using keyword SF.

• int getInit () const

Return parameter read using keyword Init.

• int getData () const

Return parameter read using keyword Data.

• size\_t getNbSteps () const

Return parameter read using keyword NbSteps.

• size\_t getNbIter () const

Return parameter read using keyword NbIter.

• real\_t getTimeStep () const

Return parameter read using keyword TimeStep.

real\_t getMaxTime () const

Return parameter read using keyword MaxTime.

• real\_t getTolerance () const

Return parameter read using keyword **Tolerance**.

• int getIntPar (size\_t n=1) const

Return n-th parameter read using keyword IntPar

• string getStringPar (size\_t n=1) const

Return n-th parameter read using keyword StringPar.

real\_t getDoublePar (size\_t n=1) const

Return n-th parameter read using keyword **DoublePar**.

• Point< real\_t > getPointDoublePar (size\_t n=1) const

Return n-th parameter read using keyword PointDoublePar.

complex\_t getComplexPar (size\_t n=1) const

Return n-th parameter read using keyword StringPar.

• string getString (const string &label) const

Return parameter corresponding to a given label, when its value is a string.

• string getString (const string &label, string def) const

Return parameter corresponding to a given label, when its value is a string.

• int getInteger (const string &label) const

Return parameter corresponding to a given label, when its value is an integer.

• int getInteger (const string &label, int def) const

Return parameter corresponding to a given label, when its value is an integer.

real\_t getDouble (const string &label) const

Return parameter corresponding to a given label, when its value is a real\_t.

real\_t getDouble (const string &label, real\_t def) const

Return parameter corresponding to a given label, when its value is a real\_t.

complex\_t getComplex (const string &label) const

Return parameter corresponding to a given label, when its value is a complex number.

complex\_t getComplex (const string &label, complex\_t def) const

Return parameter corresponding to a given label, when its value is a complex number.

• int contains (const string &label) const

check if the project file contains a given parameter

void get (const string &label, Vect< real\_t > &a) const

Read an array of real values, corresponding to a given label.

• real\_t getArraySize (const string &label, size\_t j) const

Return an array entry for a given label.

• void get (const string &label, int &a) const

Return integer parameter corresponding to a given label.

void get (const string &label, real\_t &a) const

Return real parameter corresponding to a given label.

• void get (const string &label, complex\_t &a) const

Return complex parameter corresponding to a given label.

• void get (const string &label, string &a) const

Return string parameter corresponding to a given label.

• string getProject () const

Return parameter read using keyword Project.

• string getDomainFile () const

Return pameter using keyword Mesh.

• string getMeshFile (size\_t i=1) const

Return i-th parameter read using keyword mesh\_file.

• string getInitFile () const

Return parameter read using keyword InitFile.

• string getRestartFile () const

Return parameter read using keyword **RestartFile**.

• string getBCFile () const

Return parameter read using keyword BCFile.

• string getBFFile () const

Return parameter read using keyword **BFFile**.

• string getSFFile () const

Return parameter read using keyword SFFile.

• string getSaveFile () const

Return parameter read using keyword SaveFile.

• string getPlotFile (int i=1) const

Return i-th parameter read using keyword PlotFile.

• string getPrescriptionFile (int i=1) const

Return parameter read using keyword **DataFile**.

• string getAuxFile (size\_t i=1) const

Return i-th parameter read using keyword Auxfile.

• string getDensity () const

Return expression (to be parsed, function of x, y, z, t) for density function.

string getElectricConductivity () const

Return expression (to be parsed, function of x, y, z, t) for electric conductivity.

• string getElectricPermittivity () const

Return expression (to be parsed, function of x, y, z, t) for electric permittivity.

• string getMagneticPermeability () const

Return expression (to be parsed, function of x, y, z, t) for magnetic permeability.

• string getPoissonRatio () const

Return expression (to be parsed, function of x, y, z, t) for Poisson ratio.

• string getThermalConductivity () const

Return expression (to be parsed, function of x, y, z, t) for thermal conductivity.

• string getRhoCp () const

Return expression (to be parsed, function of x, y, z, t) for density \* specific heat.

• string getViscosity () const

Return expression (to be parsed, function of x, y, z, t) for viscosity.

• string getYoungModulus () const

Return expression (to be parsed, function of x, y, z, t) for Young's modulus.

# 7.49.1 Detailed Description

To read project parameters from a file in IPF format.

This class can be used to acquire various parameters from a parameter file of IPF (Input Project File). The declaration of an instance of this class avoids reading data in your main program. The acquired parameters are retrieved through information members of the class. Note that all the parameters have default values

# 7.49.2 Constructor & Destructor Documentation

#### IPF (const string & file)

Constructor that gives the data file name.

It reads parameters in IPF Format from this file.

#### 7.49.3 Member Function Documentation

#### int getOutput ( ) const

Return parameter read using keyword Output.

This parameter can be used to control output behavior in a program.

#### int getSave ( ) const

Return parameter read using keyword Save.

This parameter can be used to control result saving in a program (e.g. for a restarting purpose).

#### int getPlot ( ) const

Return parameter read using keyword Plot.

This parameter can be used to control result saving for plotting in a program.

#### int getBC ( ) const

Return parameter read using keyword **BC**.

This parameter can be used to set a boundary condition flag.

#### int getBF ( ) const

Return parameter read using keyword BF.

This parameter can be used to set a body force flag.

# int getSF ( ) const

Return parameter read using keyword SF.

This parameter can be used to set a surface force flag.

## int getInit ( ) const

Return parameter read using keyword Init.

This parameter can be used to set an initial data flag.

#### int getData ( ) const

Return parameter read using keyword **Data**.

This parameter can be used to set a various data flag.

## size\_t getNbSteps ( ) const

Return parameter read using keyword NbSteps.

This parameter can be used to read a number of time steps.

#### size\_t getNbIter ( ) const

Return parameter read using keyword NbIter.

This parameter can be used to read a number of iterations.

# real\_t getTimeStep ( ) const

Return parameter read using keyword TimeStep.

This parameter can be used to read a time step value.

### real\_t getMaxTime ( ) const

Return parameter read using keyword **MaxTime**.

This parameter can be used to read a maximum time value.

#### real\_t getTolerance ( ) const

Return parameter read using keyword **Tolerance**.

This parameter can be used to read a tolerance value to control convergence.

#### int getIntPar ( $size_t n = 1$ ) const

Return n-th parameter read using keyword IntPar

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

# string getStringPar ( size\_t n = 1 ) const

Return *n-th* parameter read using keyword **StringPar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

#### real\_t getDoublePar ( size\_t n = 1 ) const

Return n-th parameter read using keyword **DoublePar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

#### Point<real\_t> getPointDoublePar ( size\_t n = 1 ) const

Return n-th parameter read using keyword PointDoublePar.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

#### complex\_t getComplexPar ( size\_t n = 1 ) const

Return n-th parameter read using keyword **StringPar**.

Here we have at most 20 integer extra parameters that can be used for any purpose. Default value for n is 1

#### string getString (const string & label) const

Return parameter corresponding to a given label, when its value is a string.

#### **Parameters**

in	label	Label that identifies the string (read from input file) If this label is not found an
		error message is displayed and program stops

# string getString ( const string & label, string def ) const

Return parameter corresponding to a given label, when its value is a string. Case where a default value is provided

#### **Parameters**

in	label	Label that identifies the string (read from input file)
in	def	Default value: Value to assign if the sought parameter is not found

## int getInteger ( const string & label ) const

Return parameter corresponding to a given label, when its value is an integer.

#### Parameters

in	label	Label that identifies the integer number (read from input file) If this label is not
		found an error message is displayed and program stops

# int getInteger ( const string & label, int def ) const

Return parameter corresponding to a given label, when its value is an integer. Case where a default value is provided

#### **Parameters**

in	label	Label that identifies the integer number (read from input file).
in	def	Default value: Value to assign if the sought parameter is not found

#### real\_t getDouble ( const string & label ) const

Return parameter corresponding to a given label, when its value is a real\_t.

in	label	Label that identifies the real number (read from input file). If this label is not
		found an error message is displayed and program stops.

# real\_t getDouble ( const string & label, real\_t def ) const

Return parameter corresponding to a given label, when its value is a real\_t. Case where a default value is provided

#### Parameters

in	label	Label that identifies the real number (read from input file)
in	def	Default value: Value to assign if the sought parameter is not found

# complex\_t getComplex ( const string & label ) const

Return parameter corresponding to a given label, when its value is a complex number.

#### Parameters

in	label	Label that identifies the complex number (read from input file) If this label is not
		found an error message is displayed and program stops

# complex\_t getComplex ( const string & label, complex\_t def ) const

Return parameter corresponding to a given label, when its value is a complex number. Case where a default value is provided

#### Parameters

in	label	Label that identifies the complex number (read from input file)
in	def	Default value: Value to assign if the sought parameter is not found

# int contains ( const string & label ) const

check if the project file contains a given parameter

#### **Parameters**

in	label	Label that identifies the label to seek in file
----	-------	---

#### Returns

0 if the parameter is not found, n if the parameter is found, where n is the parameter index in the parameter list

#### void get ( const string & label, Vect < real\_t > & a ) const

Read an array of real values, corresponding to a given label.

#### Parameters

iı	la	abel	Label that identifies the array (read from input file).
iı	a		Vector that contain the array. The vector is properly resized before filling.

#### Remarks

If this label is not found an error message is displayed.

# real\_t getArraySize ( const string & label, size\_t j ) const

Return an array entry for a given label.

#### **Parameters**

in	label	Label that identifies the array (read from input file).
in	j	Index of entry in the array (Starting from 1)

#### Remarks

If this label is not found an error message is displayed and program stops.

# void get (const string & label, int & a) const

Return integer parameter corresponding to a given label.

#### Parameters

in <i>label</i> Label that identifies the integer number (read from input file).		Label that identifies the integer number (read from input file).	
	out	а	Returned value. If this label is not found an error message is displayed and
			program stops. Note: This member function can be used instead of getInteger

# void get ( const string & label, real\_t & a ) const

Return real parameter corresponding to a given label.

in	in <i>label</i> Label that identifies the real (real_t) number (read from input file).	
out	а	Returned value. If this label is not found an error message is displayed and program stops. Note: This member function can be used instead of getReal_T

### void get ( const string & label, complex\_t & a ) const

Return complex parameter corresponding to a given label.

#### **Parameters**

in	label	Label that identifies the complex number (read from input file).	
out	а	Returned value. If this label is not found an error message is displayed and program stops.	

# void get (const string & label, string & a) const

Return string parameter corresponding to a given label.

#### **Parameters**

in	label	Label that identifies the atring (read from input file).
out	a	Returned value. Note: This member function can be used instead of getString If this label is not found an error message is displayed and program stops. Note: This member function can be used instead of getString

# string getProject ( ) const

Return parameter read using keyword Project.

This parameter can be used to read a project's name.

# string getMeshFile ( size\_t i = 1 ) const

Return i-th parameter read using keyword **mesh\_file**.

Here we have at most 10 integer extra parameters that can be used for any purpose. Default value for i is 1

### string getInitFile ( ) const

Return parameter read using keyword InitFile.

This parameter can be used to read an initial data file name.

### string getRestartFile ( ) const

Return parameter read using keyword RestartFile.

This parameter can be used to read a restart file name.

### string getBCFile ( ) const

Return parameter read using keyword BCFile.

This parameter can be used to read a boundary condition file name.

# string getBFFile ( ) const

Return parameter read using keyword BFFile.

This parameter can be used to read a body force file name.

### string getSFFile ( ) const

Return parameter read using keyword SFFile.

This parameter can be used to read a source force file name.

#### string getSaveFile ( ) const

Return parameter read using keyword SaveFile.

This parameter can be used to read a save file name.

## string getPlotFile ( int i = 1 ) const

Return i-th parameter read using keyword PlotFile.

Here we have at most 10 integer extra parameters that can be used for plot file names. Default value for  $\mathtt{i}$  is  $\mathtt{1}$ 

#### string getPrescriptionFile ( int i = 1 ) const

Return parameter read using keyword DataFile.

This parameter can be used to read a Prescription file.

#### string getAuxFile ( $size_t i = 1$ ) const

Return i-th parameter read using keyword Auxfile.

Here we have at most 10 integer extra parameters that can be used for any auxiliary file names. Default value for i is 1

# 7.50 Iter< T $_->$ Class Template Reference

Class to drive an iterative process.

#### **Public Member Functions**

• Iter ()

Default Constructor.

• Iter (int max\_it, real\_t toler, int verbose=0)

Constructor with iteration parameters.

• ~Iter ()

Destructor.

void setMaxIter (int max\_it)

Set maximal number of iterations.

void setTolerance (real\_t toler)

Set tolerance value for convergence.

• void setVerbose (int v)

Set verbosity parameter.

• bool check (Vect< T $_->$  &u, const Vect< T $_->$  &v, int opt=2)

Check convergence.

# 7.50.1 Detailed Description


template < class T\_> class OFELI::Iter < T\_>

Class to drive an iterative process.

This template class enables monitoring any iterative process. It simply sets default values for tolerance, maximal number of iterations and enables checking convergence using two successive iterates.

# 7.51 Laplace1DL2 Class Reference

To build element equation for a 1-D elliptic equation using the 2-Node line element  $(P_1)$ . Inheritance diagram for Laplace1DL2:

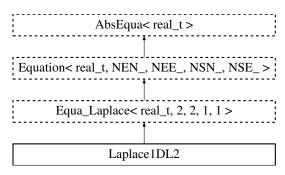

# **Public Member Functions**

• Laplace1DL2 (Element \*el)

Constructor for an element.

- Laplace1DL2 (Mesh &ms, Vect< real\_t > &u)
- ~Laplace1DL2 ()

Destructor.

• void Matrix (real\_t coef=1.)

Add finite element matrix to left hand side.

void BodyRHS (const Vect< real\_t > &f)

Add Right-Hand Side Contribution.

• void BoundaryRHS (int n, real\_t p)

Add Neumann contribution to Right-Hand Side.

void setBoundaryCondition (real\_t f, int lr)

Set Dirichlet boundary data.

• void setTraction (real\_t f, int lr)

Set Traction data.

- int run ()
- virtual void build ()

*Solve the equation.* 

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• virtual void buildEigen (int opt=0)

Build matrices for an eigenvalue problem.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void updateBC (const Vect< real\_t > &bc)

*Update Right-Hand side by taking into account essential boundary conditions.* 

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

 $\bullet \ \ void \ ElementNodeVector \ (const \ Vect < real\_t > \&b, \ LocalVect < real\_t, \ NEE\_ > \&be)\\$ 

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_> &be)

Localize Element Vector from a Vect instance.

void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x)

Solve the linear system.

#### **Public Attributes**

• LocalMatrix < real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

void Init (const Side \*sd)

Set side arrays to zero.

# 7.51.1 Detailed Description

To build element equation for a 1-D elliptic equation using the 2-Node line element (P<sub>1</sub>).

### 7.51.2 Constructor & Destructor Documentation

Laplace1DL2 ( Mesh & ms, Vect< real\_t > & u )

Constructor using mesh instance and solution vector

#### Parameters

in	ms	Mesh instance
in,out	и	Vect instance that contains, after execution of run() the solution

# 7.51.3 Member Function Documentation

void Matrix ( real\_t coef = 1. )

Add finite element matrix to left hand side.

### Parameters

in	coef	Value to multiply by the added matrix
----	------	---------------------------------------

void BodyRHS ( const Vect< real\_t > & f )

Add Right-Hand Side Contribution.

in	f	Vector containing the source given function at mesh nodes	
----	---	---	--

# void BoundaryRHS ( int n, real\_t p )

Add Neumann contribution to Right-Hand Side.

#### **Parameters**

i	n n	Parameter to select equal to 0 if the condition is at the left end of the domain and different if it is at the right of it
i	p	Value of flux to add

# Note

This member function is to be called only for the first or last element

# void setBoundaryCondition ( real\_t f, int lr )

Set Dirichlet boundary data.

#### Parameters

in	f	Value to assign
in	lr	Option to choose location of the value (-1: Left end, 1: Right end)

# void setTraction ( real\_t f, int lr )

Set Traction data.

#### **Parameters**

in	f	Value of traction (Neumann boundary condition)
in	lr	Option to choose location of the traction (-1: Left end, 1: Right end)

# int run ( )

Run solution procedure This function is to be called when the constructor **Laplace1DL2(mesh,u)** is used.

#### Returns

return code for the solution of the linear system

# ${f void\ build\ (\ EigenProblemSolver\ \&\ e\ )\ [inherited]}$

Build the linear system for an eigenvalue problem.

in	е	Reference to used EigenProblemSolver instance	
----	---	---	--

# void updateBC ( const Element & el, const Vect< real.t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

#### Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

# Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

#### $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equation	
in	dof	Degree of freedom to transfer to the local vector	

#### Remarks

Only yhe dega dof is transferred to the local vector

# $\label{lem:lementNodeVectorSingleDOF} \mbox{ ( const Vect$<$ real$_t$ > & $b$, LocalVect$<$ real$_t$ , NEN$_-$ > & $be$ ) [inherited]}$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

#### Parameters

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

# ${f void\ SideVector\ (\ const\ Vect< real\_t>\&\ b}$ ) [inherited]

Localize Side Vector.

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

#### void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

#### Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{coint}<_{coint}<_{coint}$ 

#### Remarks

This member function uses the Element pointer \_theElement

# ${f void \ Element Assembly \ ( \ Matrix < {f real\_t} > *A \ ) \ \ [{\tt inherited}]}$

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( PETScMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

#### Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly (\ BMatrix < real\_t > \&\ A\ )} \quad {f [inherited]}$

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

#### Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void ElementAssembly ( $SkSMatrix{<}$ real\_t > \& A ) \quad [\mbox{inherited}] \\$

Assemble element matrix into global one.

# Parameters

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

# $\begin{tabular}{ll} {\bf void \ Element Assembly ( \ SkMatrix{< real\_t} > \& A \ ) & [inherited] \end{tabular}$

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble element matrix into global one.

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( Vect < real.t > &v ) [inherited]

Assemble element vector into global one.

## Parameters

in	v	Global vector (Vect instance)


#### Warning

The element pointer is given by the global variable the Element

# ${\bf void\ Side Assembly\ (\ PETScMatrix < real\_t > \&\ A\ )} \quad \hbox{\tt [inherited]}$

Assemble side matrix into global one.

#### **Parameters**



# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real.t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

#### void SideAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	Α	Global matrix stored as an SkSMatrix instance
----	---	---

#### Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ SkMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance

### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

# Warning

The side pointer is given by the global variable the Side

#### void SideAssembly ( Vect< real\_t> & v ) [inherited]

Assemble side (edge or face) vector into global one.

#### **Parameters**

in	v	Global vector (Vect instance)
----	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix < real\_t > *A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# $\label{eq:condition} \textbf{void DGElementAssembly ( SkSMatrix} < \textbf{real.t} > \&\, A \ \textbf{)} \quad \texttt{[inherited]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ TrMatrix{<}\ real\_t > \&\ A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an TrMatrix instance

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	х	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

## Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh() const [inherited]

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver

#### **Parameters**

in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	
			1

int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

## 7.51.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.52 Laplace1DL3 Class Reference

To build element equation for the 1-D elliptic equation using the 3-Node line (P<sub>2</sub>). Inheritance diagram for Laplace1DL3:

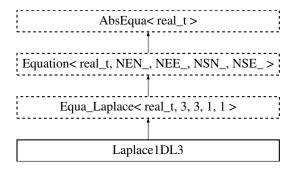

# **Public Member Functions**

• Laplace1DL3 (Mesh &ms, Vect< real\_t > &u)

Laplace1DL3 (Element \*el)

Constructor for an element.

• ~Laplace1DL3 ()

Destructor.

• void Matrix (real\_t coef=1.)

Add finite element matrix to left hand side.

• void BodyRHS (const Vect< real\_t > &f)

Add Right-hand side contribution.

void BoundaryRHS (int n, real\_t p)

Add Neumann contribution to Right-Hand Side.

• void setTraction (real\_t f, int lr)

Set Traction data.

- int run ()
- virtual void build ()

*Solve the equation.* 

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• virtual void buildEigen (int opt=0)

Build matrices for an eigenvalue problem.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect < real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.52.1 Detailed Description

To build element equation for the 1-D elliptic equation using the 3-Node line  $(P_2)$ .

## 7.52.2 Constructor & Destructor Documentation

Laplace1DL3 ( Mesh & ms, Vect< real\_t > & u )

Constructor using mesh instance and solution vector

#### Parameters

in	ms	Mesh instance
in,out	и	Vect instance that contains, after execution of run() the solution

# 7.52.3 Member Function Documentation

# void Matrix ( real\_t coef = 1. )

Add finite element matrix to left hand side.

#### Parameters

	in	coef	Value to multiply by the added matrix	
--	----	------	---------------------------------------	--

# void BodyRHS ( const Vect< real\_t > & f )

Add Right-hand side contribution.

## Parameters

i	n	f	Vector of right-hand side of the Poisson equation at nodes
---	---	---	--

# void BoundaryRHS ( int n, real\_t p )

Add Neumann contribution to Right-Hand Side.

# Parameters

iı	n n	Parameter to select equal to 0 if the condition is at the left end of the domain and different if it is at the right of it
iı	p	Value of flux to add

# Note

This member function is to be invoked only for the first or last element

# void setTraction ( real\_t f, int lr )

Set Traction data.

in	f	Value of traction (Neumann boundary condition)
in	lr	Option to choose location of the traction (-1: Left end, 1: Right end)

#### int run ( )

Run solution procedure This function is to be called when the constructor **Laplace1DL2(mesh,u)** is used.

#### Returns

return code for the solution of the linear system

# void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

## Parameters

in	е	Reference to used EigenProblemSolver instance
		O

# void updateBC ( const Element & el, const Vect< real t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

### **Parameters**

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in b		Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< real\_t > \& b, LocalVect< real\_t , NEN_- > \& be, int dof ) \ \mbox{ [inherited]}$

Localize Element Vector from a Vect instance.

in	in b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		• SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer  $\_$ theElement

### void SideVector ( const Vect< real $_{-}$ t> & b ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

# ${f void \ Element Assembly ( \ Matrix < real\_t > *A ) \ [inherited]}$

Assemble element matrix into global one.

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real $_t > \& A$ ) [inherited]

Assemble element matrix into global one.

# Parameters

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# $\label{eq:condition} \mbox{void ElementAssembly ( $SkMatrix{<}$ real_t > \& A ) \quad [\mbox{inherited}] \\$

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

#### Parameters

	in	A	Global matrix stored as an SpMatrix instance	1
--	----	---	--	---

# Warning

The element pointer is given by the global variable the Element

# $void ElementAssembly ( TrMatrix < real_t > \&A ) [inherited]$

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an TrMatrix instance

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix< real t > & A ) [inherited]

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

### Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	A	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

# Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.52.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.53 Laplace2DFVT Class Reference

To build and solve the Laplace equation using a standard Finite Volume method. Inheritance diagram for Laplace2DFVT:

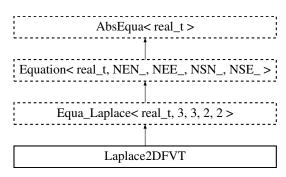

## **Public Member Functions**

- Laplace2DFVT (Mesh &ms, Vect< real\_t > &b, Vect< real\_t > &u)
   Standard constructor.
- Laplace2DFVT (Mesh &ms, SpMatrix< real\_t > &A, Vect< real\_t > &b) Standard constructor.
- ~Laplace2DFVT ()

Destructor.

• int checkDelaunay (int verb=0)

Check whether triangles are Delaunay ones.

void build (const Vect< real\_t > &f)

Build the linear system of equations.

• int run (const Vect< real\_t > &f)

Build and solve the linear system of equations.

void LHS (const Element \*e1, const Element \*e2)

Calculate left-hand side.

void RHS (const Vect< real\_t > &f)

Add right-hand side Contribution.

• virtual void build ()

Solve the equation.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• virtual void buildEigen (int opt=0)

Build matrices for an eigenvalue problem.

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)
   Localize Element Vector from a Vect instance.
- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)
   Localize Element Vector.
- void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

- void SideAssembly (PETScMatrix < real\_t > &A)
  - Assemble side matrix into global one.
- void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)
 Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

 $Return\ reference\ to\ linear\ solver\ instance.$ 

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)
 Solve the linear system.

### **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

# **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.53.1 Detailed Description

To build and solve the Laplace equation using a standard Finite Volume method.

## 7.53.2 Constructor & Destructor Documentation

Laplace2DFVT ( Mesh & ms, Vect< real\_t > & b, Vect< real\_t > & u )

Standard constructor.

## Parameters

in	ms	Mesh instance
in	b	Vect instance that contains Right-hand side
in	и	Vect instance that contains solution

# Laplace2DFVT ( Mesh & ms, SpMatrix< real\_t > & A, Vect< real\_t > & b )

Standard constructor.

### Parameters

in	ms	Mesh instance. The mesh must have been assigned the attribute ELEMENT_DOF to say that unknowns are supported by elements.
in	A	Problem matrix to be stored in sparse format (class SpMatrix)
in	b	Vect instance that contains Right-hand side

## 7.53.3 Member Function Documentation

int checkDelaunay ( int verb = 0 )

Check whether triangles are Delaunay ones.

in	verb	Output (>0) or not (0) list of failing elements
----	------	---

#### Returns

ret Number of Non Delaunay triangles

# void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	e	Reference to used EigenProblemSolver instance	1
111	L	Reference to used Ligerii Tobicii Borver instance	ı

# void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### **Parameters**

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real $_{-}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated
		values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides

#### Parameters

in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# ${f void\ LocalNodeVector}$ ( ${f Vect}{<{f real\_t}}>\&\,b$ ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations	
in	dof	Degree of freedom to transfer to the local vector	

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer  $\_$ theElement

### void SideVector ( const Vect< real\_t> & b ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

# Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real $_t > \& A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ SpMatrix < real.t > \& A \ ) \ \ [inherited]}$

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

# Parameters

in A Global matrix stored as an TrMatrix instance
---

# Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( Vect< real\_t> & v ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < real\_t > \&\ A\ )} \quad {f [inherited]}$

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

## **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

### Parameters

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

# Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance
---

### Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.53.4 Member Data Documentation

 $LocalVect{<}real\_t\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.54 Laplace2DMHRT0 Class Reference

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas  $RT_0$ ).

Inheritance diagram for Laplace2DMHRT0:

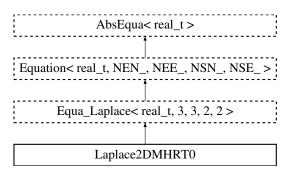

## **Public Member Functions**

• Laplace2DMHRT0 ()

Default Constructor.

Laplace2DMHRT0 (Mesh &ms, SpMatrix < real\_t > &A, Vect < real\_t > &b)

Constructor with problem data.

• ~Laplace2DMHRT0 ()

Destructor.

• void setDiffusivity (const LocalMatrix < real\_t, 2, 2 > &K)

Define Diffusivity (or permeability) matrix.

• void build ()

Build global matrix and right-hand side.

void Post (const Vect< real\_t > &lambda, const Vect< real\_t > &f, Vect< real\_t > &v, Vect
 Point< real\_t >> &p, Vect< real\_t > &u)

Perform post calculations.

• int solve (Vect< real\_t > &u)

Solve the linear system of equations using the Conjugate Gradient iterative method.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• virtual void buildEigen (int opt=0)

Build matrices for an eigenvalue problem.

• void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

*Return number of element equations.* 

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)
 Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

void Init (const Side \*sd)

Set side arrays to zero.

# 7.54.1 Detailed Description

To build element equation for the 2-D elliptic equation using the Mixed Hybrid finite element at lowest degree (Raviart-Thomas RT<sub>0</sub>).

# 7.54.2 Constructor & Destructor Documentation

# Laplace2DMHRT0()

Default Constructor.

Constructs an empty equation.

# Laplace2DMHRT0 ( Mesh & ms, SpMatrix< real\_t > & A, Vect< real\_t > & b )

Constructor with problem data.

#### **Parameters**

in	ms	Mesh instance
in	A	Problem matrix in Sparse format. This matrix must be zeroed before calling the constructor
in	b	Problem right-hand side

## 7.54.3 Member Function Documentation

void setDiffusivity ( const LocalMatrix< real\_t, 2, 2 > & K )

Define Diffusivity (or permeability) matrix.

By default (if this function is not called) the identity matrix (Laplace equation) is used.

#### **Parameters**

in	K	Diffusivity matrix as <b>LocalMatrix</b> instance. Must be symmetric positive definite
----	---	--

# void build ( ) [virtual]

Build global matrix and right-hand side.

The problem matrix and right-hand side are the ones used in the constructor. They are updated in this member function.

Reimplemented from Equa\_Laplace< real\_t, 3, 3, 2, 2 >.

void Post ( const Vect< real\_t > & lambda, const Vect< real\_t > & f, Vect< real\_t > & v, Vect< Point< real\_t > > & p, Vect< real\_t > & u )

Perform post calculations.

#### **Parameters**

in	lambda	Solution (Lagrange multiplier) calculated at edges	
in	f	Vect instance containing the right-hand side of the Laplace equation	
in	v	Vect instance containing solution at mesh nodes	
in	p	Vect instance containing gradient at elements	
in	и	Vect instance containing solution at elements	

# int solve ( Vect< real\_t > & u )

Solve the linear system of equations using the Conjugate Gradient iterative method. The matrix is preconditioned by an ILU method.

#### **Parameters**

out	и	Vector containing the solution at all sides (Sides where boundary conditions are
		prescribed are included).

## Returns

Number of performed iterations in the CG method. Note that the maximal number is 1000 and the tolerance is 1.e-8

# void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	е	Reference to used EigenProblemSolver instance
----	---	---

# void updateBC ( const Element & el, const Vect< real.t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

### 7.54. LAPLACE2DMHRT0 CLASS REFERENCE CHAPTER 7. CLASS DOCUMENTATION

# void updateBC ( const Vect< real $_{ ext{-}}$ t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

### Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

### Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

# Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	b Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

#### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

#### **Parameters**

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_{-}$ t > & b ) [inherited]

Localize Side Vector.

# Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_$ theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{t}^{t}$ 

#### Remarks

This member function uses the Element pointer \_theElement

### void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly (\ BMatrix < real\_t > \&\ A\ )} \quad \hbox{\tt [inherited]}$

Assemble element matrix into global one.

## 7.54. LAPLACE2DMHRT0 CLASS REFERENCE CHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{\bf void ElementAssembly ( $SkSMatrix{<}\,real\_t > \&\,A\ ) \quad [\mbox{\it inherited}]}$ 

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

# Warning

The element pointer is given by the global variable the Element

 ${f void \; Element Assembly \; (\; SkMatrix < real\_t > \& A \; ) \; \; [inherited]}$ 

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SpMatrix < real\_t > \& A ) \ [inherited]}$ 

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

## CHAPTER 7. CLASS DOCUMENTATION 7.54. LAPLACE2DMHRT0 CLASS REFERENCE

#### **Parameters**

in A	Global matrix stored as an TrMatrix instance
------	--

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

### Parameters

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# ${f void \ Side Assembly \ (\ PETScMatrix < real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble side matrix into global one.

#### Parameters

$\boldsymbol{A}$	Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ ( \ Matrix < real\_t > *A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

## 7.54. LAPLACE2DMHRT0 CLASS REFERENCE CHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SkMatrix{<}\, real\_t>\&\, A\ )}\quad \hbox{[inherited]}$

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

# $void\ SideAssembly\ (\ SpMatrix < real_t > \&\ A\ )\ [inherited]$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

## Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

### CHAPTER 7. CLASS DOCUMENTATION 7.54. LAPLACE2DMHRT0 CLASS REFERENCE

#### Parameters

in	v	Global vector (Vect instance)
----	---	-------------------------------

### Warning

The side pointer is given by the global variable the Side

# void DGElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix	ix,
	SpMatrix)	

#### Warning

The element pointer is given by the global variable the Element

# ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\ real\_t>\&\ A\ )\quad [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

A	Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# ${f void\ DGElementAssembly\ (\ SpMatrix{<}\ real\_t > \&\ A\ )}$ [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

### 7.54. LAPLACE2DMHRT0 CLASS REFERENCE CHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

i	n	A	Global matrix stored as an SpMatrix instance	1
---	---	---	--	---

# Warning

The element pointer is given by the global variable the Element

### void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	4	Clabal matrice of an Alama TaMatrice in terms
1 n	Α	Global matrix stored as an TrMatrix instance

### Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

### Parameters

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

# Parameters

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh( ) const [inherited]

Return reference to Mesh instance.

### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		IDENT_PREC, Identity preconditioner (no preconditioning [default])
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

## 7.54.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.55 Laplace2DT3 Class Reference

To build element equation for the Laplace equation using the 2-D triangle element (P<sub>1</sub>). Inheritance diagram for Laplace2DT3:

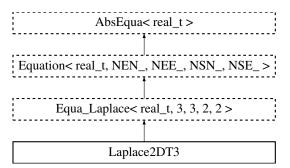

# **Public Member Functions**

• Laplace2DT3 (Mesh &ms)

Constructor with mesh.

Laplace2DT3 (Mesh &ms, SpMatrix < real\_t > &A, Vect < real\_t > &b)

Constructor with problem data.

• Laplace2DT3 (Mesh &ms, Vect< real\_t > &b)

Constructor using mesh and solution vector.

• Laplace2DT3 (Element \*el)

Constructor for an element.

• Laplace2DT3 (Side \*sd)

Constructor for a side.

• ∼Laplace2DT3 ()

Destructor.

• void LHS (real\_t coef=1.)

Add finite element matrix to left-hand side.

• void BodyRHS (const Vect< real\_t > &f)

Add body source term to right-hand side.

void BoundaryRHS (const Vect< real\_t > &h)

Add boundary source term to right-hand side.

• void setSource (const Vect< real\_t > &f)

Define Source right-hand side of the equation.

• void build ()

Build global matrix and right-hand side.

void buildEigen (int opt=0)

Build global stiffness and mass matrices for the eigen system.

void Post (const Vect< real\_t > &u, Vect< Point< real\_t >> &p)

Perform post calculations.

• int solve (Vect< real\_t > &u)

Solve the linear system of equations using the Conjugate Gradient iterative method.

• void Axb (const Vect< real\_t > &x, Vect< real\_t > &b)

Compute the product of the stiffness matrix by a given vector.

• void build (EigenProblemSolver &e)

Build the linear system for an eigenvalue problem.

• void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

Localize Element Vector from a Vect instance.

void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect < real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

• void ElementAssembly (PETScMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

• void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix< real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

• void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

• void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

• size\_t getNbEq () const

Return number of element equations.

• void setInitialSolution (const Vect< real\_t > &u)

*Set initial solution (previous time step)* 

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x) Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix < real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.55.1 Detailed Description

To build element equation for the Laplace equation using the 2-D triangle element  $(P_1)$ . To build element equation for the Laplace equation using the 3-D tetrahedral element  $(P_1)$ .

## 7.55.2 Constructor & Destructor Documentation

Laplace2DT3 ( Mesh & ms )

Constructor with mesh.

#### Parameters

# Laplace2DT3 ( Mesh & ms, SpMatrix< real\_t > & A, Vect< real\_t > & b )

Constructor with problem data.

### Parameters

in	ms	Mesh instance	
in	A	Problem matrix in Sparse format. This matrix must be zeroed before calling the	
		constructor	
in	b	Problem right-hand side	

# Laplace2DT3 ( Mesh & ms, Vect< real\_t > & b )

Constructor using mesh and solution vector.

#### **Parameters**

in	ms	Mesh instance
in	b	Problem right-hand side

# 7.55.3 Member Function Documentation

# void LHS ( real\_t coef = 1. )

Add finite element matrix to left-hand side.

# Parameters

in	. coef	Value to multiply by the added matrix	
----	--------	---------------------------------------	--

# void BodyRHS ( const Vect< real\_t> & f )

Add body source term to right-hand side.

#### Parameters

in	f	Vector containing the source given function at mesh nodes	
----	---	---	--

# void BoundaryRHS ( const Vect< real\_t > & h )

Add boundary source term to right-hand side.

#### **Parameters**

in	h	Vector containing the source given function at mesh nodes
----	---	---

#### void setSource ( const Vect< real\_t > & f )

Define Source right-hand side of the equation.

#### **Parameters**

f [in] Vector containing source values at nodes

# void build ( ) [virtual]

Build global matrix and right-hand side.

The problem matrix and right-hand side are the ones used in the constructor. They are updated in this member function.

Reimplemented from Equa\_Laplace< real\_t, 3, 3, 2, 2 >.

# **void buildEigen ( int** opt = 0 ) [virtual]

Build global stiffness and mass matrices for the eigen system.

#### **Parameters**

in	opt	Flag to choose a lumed mass matrix (0) or consistent (1) [Default: 0]
----	-----	---

Reimplemented from Equa\_Laplace< real\_t, 3, 3, 2, 2 >.

# void Post ( const Vect< real\_t > & u, Vect< Point< real\_t > > & p)

Perform post calculations.

# Parameters

in	и	Solution at nodes
out	p	Vector containing gradient at elements

## int solve ( Vect< real\_t > & u )

Solve the linear system of equations using the Conjugate Gradient iterative method. The matrix is preconditioned by an ILU method.

in	и	Vector containing the solution at all sides (Sides where boundary conditions are
		prescribed are included).

#### Returns

Number of performed iterations in the CG method. Note that the maximal number is 1000 and the tolerance is 1.e-8

### void Axb ( const Vect< real\_t > & x, Vect< real\_t > & b)

Compute the product of the stiffness matrix by a given vector.

#### **Parameters**

in	x	Vector by which the matrix is multiplied
in	b	Product vector

# void build ( EigenProblemSolver & e ) [inherited]

Build the linear system for an eigenvalue problem.

#### **Parameters**

in	е	Reference to used EigenProblemSolver instance
----	---	---

# void updateBC ( const Element & el, const Vect< real t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# void updateBC ( const Vect< real\_t> & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

# Parameters

in	bc	Vector that contains imposed values at all DOFs

#### Remarks

The current element is pointed by \_theElement

### void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

#### Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	in b Global vector to be localized.	
ou	; be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	dof	Degree of freedom to transfer to the local vector

### Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

#### void SideVector ( const Vect< real $_{-}$ t> & b ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

#### Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

### Remarks

This member function uses the Element pointer \_theElement

# ${f void \ Element Assembly ( \ Matrix < real\_t > *A ) \ [inherited]}$

Assemble element matrix into global one.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real $_t > \& A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as a BMatrix instance

### Warning

The element pointer is given by the global variable the Element

### void ElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

# void ElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

#### Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

### Warning

The element pointer is given by the global variable the Element

# ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

# Parameters

in A Global matrix stored as an TrMatrix instance
---

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)
----	---	-------------------------------

The element pointer is given by the global variable the Element

# void SideAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

### Warning

The side pointer is given by the global variable the Side

### void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

### void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

# Warning

The side pointer is given by the global variable the Side

### void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SkMatrix instance
--	----	---	--

#### Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

	in A	Global matrix stored as an SpMatrix instance	]
--	------	--	---

### Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( Vect< real $_{ ext{-}}$ t > & v ) [inherited]

Assemble side (edge or face) vector into global one.

#### Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

### Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

# void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

#### Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void DGElementAssembly ( SpMatrix< real\_t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

#### void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	Α	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance
in	х	Global vector to multiply by (Vect instance)
out	b	Global vector to add (Vect instance)

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

#### **Parameters**

in	sd	Reference to Side instance
in	x	Global vector to multiply by (Vect instance)
out	b	Global vector (Vect instance)

### real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

### Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		GMRES_SOLVER, GMRES iterative solver	
		QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

# 7.55.4 Member Data Documentation

 $LocalVect{<}real\_t\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 


LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.56 LCL1D Class Reference

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

Inheritance diagram for LCL1D:



# **Public Types**

## **Public Member Functions**

• LCL1D (Mesh &m)

Constructor using mesh instance.

• LCL1D (Mesh &m, Vect < real\_t > &U)

Constructor.

• ~LCL1D ()

Destructor.

• Vect< real\_t > & getFlux ()

Return sidewise fluxes.

• void setInitialCondition (Vect< real\_t > &u)

Assign initial condition by a vector.

void setInitialCondition (real\_t u)

Assign a constant initial condition.

• void setReconstruction ()

Run MUSCL reconstruction.

real\_t runOneTimeStep ()

Run one time step of the linear conservation law.

void setBC (real\_t u)

Set Dirichlet boundary condition.

• void setBC (const Side &sd, real\_t u)

Set Dirichlet boundary condition.

• void setBC (int code, real\_t u)

Set Dirichlet boundary condition.

• void setVelocity (Vect< real\_t > &v)

Set convection velocity.

void setVelocity (real\_t v)

Set (constant) convection velocity.

• void setReferenceLength (real\_t dx)

Assign reference length value.

real\_t getReferenceLength () const

Return reference length.

• void Forward (const Vect< real\_t > &Flux, Vect< real\_t > &Field)

Computation of the primal variable n->n+1.

real\_t getMeanLength () const

Return mean length.

• real\_t getMaximumLength () const

Return maximal length.

• real\_t getMinimumLength () const

Return mimal length.

• real\_t getTauLim () const

Return mean length.

void print\_mesh\_stat ()

Output mesh information.

• void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.56.1 Detailed Description

Class to solve the linear conservation law (Hyperbolic equation) in 1-D by a MUSCL Finite Volume scheme.

# 7.56.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

## enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

#### 7.56.3 Member Function Documentation

void setInitialCondition ( Vect< real\_t > & u )

Assign initial condition by a vector.

Parameters

in	и	Vector containing initial condition
----	---	-------------------------------------

## void setInitialCondition ( real\_t u )

Assign a constant initial condition.

#### **Parameters**

# real\_t runOneTimeStep ( )

Run one time step of the linear conservation law.

#### Returns

Value of the time step

### void setBC ( real\_t u )

Set Dirichlet boundary condition.
Assign a constant value u to all boundary sides

# void setBC ( const Side & sd, real\_t u )

Set Dirichlet boundary condition.
Assign a constant value to a side

#### **Parameters**

in	sd	Side to which value is prescibed
in	и	Value to prescribe

# void setBC ( int code, real\_t u )

Set Dirichlet boundary condition.

Assign a constant value sides with a given code

### Parameters

in	code	Code of sides to which value is prescibed
in	и	Value to prescribe

# void setVelocity ( Vect< real $_{-}$ t> & v )

Set convection velocity.

#### Parameters

in $v$ Vec	t instance containing velocity
------------	--------------------------------

# void Forward ( const Vect< real\_t > & Flux, Vect< real\_t > & Field )

Computation of the primal variable n->n+1.

Vector **Flux** contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighbor**← **Element(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

# void setTimeStep ( real\_t dt ) [inherited]

Assign time step value.

### Parameters

in	dt	Time step value
----	----	-----------------

# void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

#### Parameters

in	CFL	Value of CFL

#### void setVerbose ( int v ) [inherited]

Set verbosity parameter.

#### Parameters

in	v	Value of verbosity parameter
----	---	------------------------------

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof) [inherited]

Function to reconstruct by the Muscl method.

#### Parameters

in	И	Field to reconstruct	
out	LU	Left gradient vector	
out	RU	Right gradient vector	
in	dof	Label of dof to reconstruct	

# ${f void}\ {f setMethod}\ (\ {f const}\ {f Method}\ \&\ s\ )\ \ [{\tt inherited}]$

Choose a flux solver.

in	S	Solver to choose

#### void setLimiter( Limiter l) [inherited]

Choose a flux limiter.


Parameters

in l	Limiter to choose
------	-------------------

# 7.57 LCL2DT Class Reference

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

Inheritance diagram for LCL2DT:

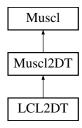

# **Public Types**

# **Public Member Functions**

• LCL2DT (Mesh &m)

Constructor using Mesh instance.

• LCL2DT (Mesh &m, Vect < real\_t > &U)

Constructor using mesh and initial data.

• ~LCL2DT ()

Destructor.

• Vect< real\_t > & getFlux ()

Return sidewise flux vector.

void setInitialCondition (Vect< real\_t > &u)

Set elementwise initial condition.

• void setInitialCondition (real\_t u)

Set a constant initial condition.

• void setReconstruction ()

Reconstruct flux using Muscl scheme.

real\_t runOneTimeStep ()

Run one time step of the linear conservation law.

• void setBC (real\_t u)

Set Dirichlet boundary condition.

• void setBC (const Side &sd, real\_t u)

Set Dirichlet boundary condition.

• void setBC (int code, real\_t u)

Set Dirichlet boundary condition.

• void setVelocity (const Vect< real\_t > &v)

Set convection velocity.

• void setVelocity (const LocalVect< real\_t, 2 > &v)

Set (constant) convection velocity.

void Forward (const Vect< real\_t > &Flux, Vect< real\_t > &Field)

Computation of the primal variable n->n+1.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

void setTimeStep (real\_t dt)

Assign time step value.

real\_t getTimeStep () const

Return time step value.

void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• void setReferenceLength (real\_t dx)

Assign reference length value.

• real\_t getReferenceLength () const

Return reference length.

Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

#### **Protected Member Functions**

• void Initialize ()

 $Construction\ of\ normals\ to\ sides.$ 

## 7.57.1 Detailed Description

Class to solve the linear hyperbolic equation in 2-D by a MUSCL Finite Volume scheme on triangles.

# 7.57.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

# enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

#### 7.57.3 Constructor & Destructor Documentation

LCL2DT ( Mesh & m, Vect< real\_t > & U )

Constructor using mesh and initial data.

	in	m	Reference to Mesh instance	
:	in	U	Vector containing initial (elementwise) solution	

# 7.57.4 Member Function Documentation

# void setInitialCondition ( Vect< real\_t > & u )

Set elementwise initial condition.

#### **Parameters**

in	и	Vect instance containing initial condition values
----	---	---

### void setInitialCondition ( real\_t u )

Set a constant initial condition.

### Parameters

in	и	Value of initial condition to assign to all elements
----	---	--

# real\_t runOneTimeStep ( )

Run one time step of the linear conservation law.

#### Returns

Value of the time step

### void setBC ( real\_t u )

Set Dirichlet boundary condition.
Assign a constant value u to all boundary sides

# void setBC ( const Side & sd, real\_t u )

Set Dirichlet boundary condition.
Assign a constant value to a side

### Parameters

in	sd	Side to which value is prescibed
in	и	Value to prescribe

# void setBC ( int code, real\_t u )

Set Dirichlet boundary condition.
Assign a constant value sides with a given code

in	code	Code of sides to which value is prescibed
in	и	Value to prescribe

# void setVelocity ( const Vect< real\_t > & v )

Set convection velocity.

#### Parameters

in	v	Vect instance containing velocity
----	---	-----------------------------------

### void setVelocity ( const LocalVect< real\_t, 2 > & v )

Set (constant) convection velocity.

#### **Parameters**

in	v	Vector containing constant velocity to prescribe
----	---	--

### void Forward ( const Vect< real\_t > & Flux, Vect< real\_t > & Field )

Computation of the primal variable n->n+1.

Vector *Flux* contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighbor**← **Element(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof) [inherited]

Function to reconstruct by the Muscl method.

### Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

### void Initialize( ) [protected], [inherited]

Construction of normals to sides.

Convention: for a given side, getPtrElement(1) is the left element and getPtrElement(2) is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

# $void setTimeStep ( real_t dt ) [inherited]$

Assign time step value.

in	dt	Time step value
----	----	-----------------

# void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

Parameters

in   CFL   Value of CFL
-------------------------

# void setReferenceLength ( real t dx ) [inherited]

Assign reference length value.

**Parameters** 

in $dx$ Value of refe	erence length
-----------------------	---------------

# void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in v Value of verbosity parame
--------------------------------

# void setMethod ( const Method & s ) [inherited]

Choose a flux solver.

Parameters

in s	Solver to choose
------	------------------

# void setLimiter( Limiter l) [inherited]

Choose a flux limiter.


Parameters

in l	Limiter to choose
------	-------------------

# 7.58 LCL3DT Class Reference

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

Inheritance diagram for LCL3DT:



# **Public Types**

# **Public Member Functions**

• LCL3DT (Mesh &m)

Constructor using mesh.

• LCL3DT (Mesh &m, Vect < real\_t > &U)

Constructor using mesh and initial field.

• ~LCL3DT ()

Destructor.

• void setInitialCondition (Vect< real\_t > &u)

Set elementwise initial condition.

• void setInitialCondition (real\_t u)

Set a constant initial condition.

void setReconstruction ()

Reconstruct flux using Muscl scheme.

• real\_t runOneTimeStep ()

Run one time step.

• void setBC (real\_t u)

Set Dirichlet boundary condition. Assign a constant value u to all boundary sides.

• void setBC (const Side &sd, real\_t u)

Set Dirichlet boundary condition.

• void setBC (int code, real\_t u)

Set Dirichlet boundary condition.

void setVelocity (const Vect< real\_t > &v)

Set convection velocity.

• void setVelocity (const LocalVect< real\_t, 3 > &v)

Set (constant) convection velocity.

void setReferenceLength (real\_t dx)

Assign reference length value.

real\_t getReferenceLength () const

Return reference length.

void Forward (const Vect< real\_t > &Flux, Vect< real\_t > &Field)

Computation of the primal variable n->n+1.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

• real\_t getMinimumFaceArea () const

Return minimum area of faces in the mesh.

real\_t getMinimumElementVolume () const

Return minimum volume of elements in the mesh.

• real\_t getMaximumFaceArea () const

Return maximum area of faces in the mesh.

• real\_t getMaximumElementVolume () const

Return maximum volume of elements in the mesh.

real\_t getMeanFaceArea () const

Return mean area of faces in the mesh.

real\_t getMeanElementVolume () const

Return mean volume of elements in the mesh.

• real\_t getMinimumEdgeLength () const

Return minimum length of edges in the mesh.

real\_t getMinimumVolumebyArea () const

Return minimum volume by area in the mesh.

• real\_t getMaximumEdgeLength () const

Return maximum length of edges in the mesh.

• real\_t getTauLim () const

Return value of tau lim.

• real\_t getComega () const

Return value of Comega.

void setbetalim (real\_t bl)

Assign value of beta lim.

• void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.58.1 Detailed Description

Class to solve the linear conservation law equation in 3-D by a MUSCL Finite Volume scheme on tetrahedra.

### 7.58.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

#### Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

#### enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

#### Enumerator

ROE\_SOLVER Roe solver

VFROE\_SOLVER Finite Volume Roe solver

LF\_SOLVER LF solver

RUSANOV\_SOLVER Rusanov solver

HLL\_SOLVER HLL solver

HLLC\_SOLVER HLLC solver

MAX\_SOLVER Max solver

### 7.58.3 Constructor & Destructor Documentation

LCL3DT ( Mesh & m, Vect< real\_t > & U )

Constructor using mesh and initial field.

in	m	Reference to Mesh instance
in	U	Vector containing initial (elementwise) solution

# 7.58.4 Member Function Documentation

# void setInitialCondition ( Vect< real\_t > & u )

Set elementwise initial condition.

#### Parameters

in u	Vect instance containing initial condition values
------	---

### void setInitialCondition ( real\_t u )

Set a constant initial condition.

# Parameters

in	и	Value of initial condition to assign to all elements
----	---	--

# void setBC ( const Side & sd, real\_t u )

Set Dirichlet boundary condition.
Assign a constant value to a side

#### **Parameters**

in	sd	Side to which value is prescibed
in	и	Value to prescribe

# void setBC ( int code, real\_t u )

Set Dirichlet boundary condition.
Assign a constant value sides with a given code

### Parameters

in	code	Code of sides to which value is prescibed
in	и	Value to prescribe

# void setVelocity ( const Vect< real\_t > & v )

Set convection velocity.

in	v	Vect instance containing velocity
----	---	-----------------------------------

# void setVelocity ( const LocalVect< real\_t, 3 > & v )

Set (constant) convection velocity.

#### **Parameters**

in	v	Vector containing constant velocity to prescribe
----	---	--

### void Forward ( const Vect< real\_t > & Flux, Vect< real\_t > & Field )

Computation of the primal variable n-n+1.

Vector Flux contains elementwise fluxes issued from the Riemann problem, calculated with, as left element, **getNeighborElement(1)** and right element **getNeighborElement(2)** if **getNeighbor**← **Element(2)** doesn't exist, we are on a boundary and we prescribe a symmetry condition

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof) [inherited]

Function to reconstruct by the Muscl method.

#### **Parameters**

in	U	Field to reconstruct	
out	LU	Left gradient vector	
out	RU	Right gradient vector	
in	dof	Label of dof to reconstruct	

# ${f void\ setTimeStep\ (\ real\_t\ dt\ )}$ [inherited]

Assign time step value.

### Parameters

in	dt	Time step value
----	----	-----------------

### void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

#### **Parameters**

in CFL	Value of CFL
--------	--------------

# ${f void\ setVerbose}$ ( ${f int}\ v$ ) [inherited]

Set verbosity parameter.

#### **Parameters**

in $v$ Value of verbosit	y parameter
--------------------------	-------------

# ${f void}$ setMethod ( ${f const}$ Method & ${f s}$ ) [inherited]

Choose a flux solver.

#### **Parameters**

in	s	Solver to choose
----	---	------------------

### void setLimiter( Limiter l) [inherited]

Choose a flux limiter.

### Parameters

	in	1	Limiter to choose
--	----	---	-------------------

# 7.59 Line2 Class Reference

To describe a 2-Node planar line finite element. Inheritance diagram for Line2:



# **Public Member Functions**

• Line2 ()

Default Constructor.

• Line2 (const Element \*el)

Constructor for an element.

• Line2 (const Side \*side)

Constructor for a side.

• Line2 (const Edge \*edge)

Constructor for an edge.

• ~Line2 ()

Destructor.

• real\_t getLength () const

Return element length.

• Point< real\_t > getNormal () const

Return unit normal vector to line.

• Point< real\_t > getTangent () const

Return unit tangent vector to line.

• real\_t Sh (size\_t i, real\_t s) const

Calculate shape function of a given node at a given point.

• real\_t DSh (size\_t i) const

Calculate partial derivative of shape function of a node.

Point< real\_t > getRefCoord (const Point< real\_t > &x)

Return reference coordinates of a point x in element.

bool isIn (const Point < real\_t > &x)

Check whether point x is in current line element or not.

real\_t getInterpolate (const Point< real\_t > &x, const LocalVect< real\_t, 2 > &v)

Return interpolated value at a given point.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

real\_t getDet () const

Return determinant of jacobian.

Point< real\_t > getCenter () const

Return coordinates of center of element.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.59.1 Detailed Description

To describe a 2-Node planar line finite element.

Defines geometric quantities associated to 2-node linear segment element  $P_1$  in the space. The reference element is the segment [-1,1]. Note that the line length is not checked unless the function check is called.

### 7.59.2 Constructor & Destructor Documentation

### Line2 (const Element \* el)

Constructor for an element.

Parameters

in	el	Pointer to element
----	----	--------------------

### Line2 (const Side \* side )

Constructor for a side.

in	side	Pointer to side

# Line2 (const Edge \* edge )

Constructor for an edge.

#### Parameters

in	edge	Pointer to edge
----	------	-----------------

# 7.59.3 Member Function Documentation

# real\_t Sh ( size\_t i, real\_t s ) const

Calculate shape function of a given node at a given point.

#### **Parameters**

in	i	Node number (1 or 2).
in	s	Localization of point in natural coordinates (must be between -1 and 1).

# real\_t DSh ( size\_t i ) const

Calculate partial derivative of shape function of a node.

# Parameters

i	n	i	Nod	e number	(1	or 2).
---	---	---	-----	----------	----	--------

# Point<real $_{-}$ t> getRefCoord ( const Point< real $_{-}$ t> & x )

Return reference coordinates of a point x in element.

Only the x-coordinate of the returned value has a meaning

# real\_t getInterpolate ( const Point< real\_t > & $x_t$ const LocalVect< real\_t, 2 > & v )

Return interpolated value at a given point.

#### **Parameters**

in	x	Point where interpolation is evaluated (in the reference element).	
out	v	Computed value.	

# $real_t Sh ( size_t i, Point < real_t > s ) const [inherited]$

Calculate shape function of node i at a given point s.

in	i	Local node label

#### **Parameters**

in	S	Point in the reference triangle where the shape function is evaluated	]
----	---	---	---

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

# Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

### Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.60 Line2H Class Reference

To describe a 2-Node Hermite planar line finite element. Inheritance diagram for Line2H:



### **Public Member Functions**

• Line2H ()

Default Constructor.

• Line2H (const Element \*el)

Constructor for an element.

• Line2H (const Side \*side)

Constructor for a side.

• ~Line2H ()

Destructor.

• Point< real\_t > getLocalPoint (real\_t s) const

Localize a point in the element.

• real\_t Sh (size\_t i, real\_t s) const

Return shape function value of node i at given point s

real\_t DSh (size\_t i, real\_t s) const

Return first derivative (along the abscissa) of shape function of node i at a given point.

real\_t D2Sh (size\_t i, real\_t s) const

Return second derivatives (along the abscissa) of shape function of node i

• real\_t getDet () const

Return determinant of jacobian.

real\_t getLength ()

Return element length.

• real\_t check () const

Check line length and number of line nodes.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.60.1 Detailed Description

To describe a 2-Node Hermite planar line finite element.

Defines geometric quantities associated to 2-node segment element in the space using Hermite  $(C^1)$  interpolation. The interpolation functions are polynomials of degree 3. The reference element is the segment [-1,1]. The unknowns are supported by extremities of the interval: each extremity supports two unknowns, the function and its line derivative.

# 7.60.2 Member Function Documentation

# Point<real\_t> getLocalPoint ( real\_t s ) const

Localize a point in the element.

For a point s in the reference element, return coordinates in the real element.

# real\_t check ( ) const

Check line length and number of line nodes.

### Returns

- > 0: m is the length
- = 0: zero length (=> Error)

#### real\_t Sh ( size\_t $i_t$ Point< real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

#### **Parameters**

in	i	Local node label
in	s	Point in the reference triangle where the shape function is evaluated

### Point<real\_t> DSh ( size\_t i ) const [inherited]

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

#### **Parameters**

	in	i	Partial derivative index (1, 2 or 3)
--	----	---	--------------------------------------

# Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

#### Point<real\_t> getLocalPoint ( const Point< real\_t > & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.61 Line3 Class Reference

To describe a 3-Node quadratic planar line finite element. Inheritance diagram for Line3:



### **Public Member Functions**

• Line3()

Default Constructor.

• Line3 (const Element \*el)

Constructor for an element.

• Line3 (const Side \*sd)

Constructor for a side.

• ~Line3 ()

Destructor.

void setLocal (real\_t s)

Initialize local point coordinates in element.

• real\_t DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

Point< real\_t > getLocalPoint () const

Return actual coordinates of localized point.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t Sh (size\_t i, Point< real\_t > s) const

Calculate shape function of node i at a given point s.

real\_t getDet () const

Return determinant of jacobian.

Point< real\_t > getCenter () const

Return coordinates of center of element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.61.1 Detailed Description

To describe a 3-Node quadratic planar line finite element.

Defines geometric quantities associated to 3-node quadratic element  $P_2$  in the space. The reference element is the segment [-1,1]. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function **setLocal()** must be invoked.

Element nodes are ordered as the following: the left one, the central one and the right one.

### 7.61.2 Member Function Documentation

 $real_t Sh ( size_t i, Point < real_t > s ) const [inherited]$ 

Calculate shape function of node i at a given point s.

#### **Parameters**

in	i	Local node label	
in	S	Point in the reference triangle where the shape function is evaluated	

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.62 LinearSolver< T $_->$ Class Template Reference

Class to solve systems of linear equations by iterative methods.

#### **Public Member Functions**

• LinearSolver ()

Default Constructor.

• LinearSolver (int max\_it, real\_t tolerance, int verbose)

Constructor with iteration parameters.

• LinearSolver (SpMatrix  $< T_- > &A$ , const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Constructor using matrix, right-hand side and solution vector.

• LinearSolver (SkMatrix< T $_->$  &A, const Vect< T $_->$  &b, Vect< T $_->$  &x)

Constructor using skyline-stored matrix, right-hand side and solution vector.

• LinearSolver (TrMatrix< T $_-$  > &A, const Vect< T $_-$  > &b, Vect< T $_-$  > &x)

Constructor using a tridiagonal matrix, right-hand side and solution vector.

• LinearSolver (BMatrix  $< T_- > &A$ , const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Constructor using a banded matrix, right-hand side and solution vector.

• LinearSolver (DMatrix  $< T_- > &A$ , const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Constructor using a dense matrix, right-hand side and solution vector.

• LinearSolver (DSMatrix $< T_- > &A$ , const Vect $< T_- > &b$ , Vect $< T_- > &x$ )

Constructor using a dense symmetric matrix, right-hand side and solution vector.

• LinearSolver (SkSMatrix < T\_ > &A, const Vect < T\_ > &b, Vect < T\_ > &x)

Constructor using skyline-stored symmetric matrix, right-hand side and solution vector.

• LinearSolver (SkMatrix  $< T_- > &A$ , Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Constructor using matrix, right-hand side.

• virtual ~LinearSolver ()

Destructor.

• void setVerbose (int verb)

Set message level.

• void setMaxIter (int m)

Set Maximum number of iterations.

void setTolerance (real\_t tol)

Set tolerance value.

void setSolution (Vect< T<sub>-</sub> > &x)

Set solution vector.

void setRHS (Vect< T<sub>-</sub> > &b)

Set right-hand side vector.

• void setMatrix (OFELI::Matrix < T\_> \*A)

*Set matrix in the case of a pointer to Matrix.* 

void setMatrix (SpMatrix < T<sub>−</sub> > &A)

Set matrix in the case of a pointer to matrix.

• void setMatrix (SkMatrix < T<sub>−</sub> > &A)

Set matrix in the case of a skyline matrix.

• void set (SpMatrix  $< T_- > &A$ , const Vect  $< T_- > &b$ , Vect  $< T_- > &x$ )

Set matrix, right-hand side and initial guess.

void setSolver (Iteration s, Preconditioner p=DIAG\_PREC)

Set solver and preconditioner.

• int getSolver () const

Return solver code.

int solve (SpMatrix < T<sub>-</sub> > &A, const Vect < T<sub>-</sub> > &b, Vect < T<sub>-</sub> > &x, Iteration s, Preconditioner p=DIAG\_PREC)

Solve equations using system data, prescribed solver and preconditioner.

• int solve (Iteration s, Preconditioner p=DIAG\_PREC)

Solve equations using prescribed solver and preconditioner.

• int solve ()

Solve equations all arguments must have given by other member functions.

• void setFact ()

Factorize matrix.

• void setNoFact ()

Do not factorize matrix.

# 7.62.1 Detailed Description

template < class T\_> class OFELI::LinearSolver < T\_>

Class to solve systems of linear equations by iterative methods.

### 7.62.2 Constructor & Destructor Documentation

#### LinearSolver ( )

Default Constructor.

Initializes default parameters and pointers to 0.

#### LinearSolver ( int max\_it, real\_t tolerance, int verbose )

Constructor with iteration parameters.

#### **Parameters**

in	max_it	Maximal number of iterations	
in	tolerance	Tolerance for convergence (measured in relative weighted 2-Norm) in input, effective discrepancy in output.	
in	verbose	<ul> <li>Information output parameter</li> <li>0: No output</li> <li>1: Output iteration information,</li> <li>2 and greater: Output iteration information and solution at each iteration.</li> </ul>	

### LinearSolver (SpMatrix< T $_->$ & A, const Vect< T $_->$ & b, Vect< T $_->$ & x)

Constructor using matrix, right-hand side and solution vector.

#### **Parameters**

in	A	Reference to instance of class SpMatrix	
in	b	Vect instance that contains the right-hand side	
in,out	x	Vect instance that contains initial guess on input and solution on outpu	

# LinearSolver (SkMatrix $< T_- > & A$ , const Vect $< T_- > & b$ , Vect $< T_- > & x$ )

Constructor using skyline-stored matrix, right-hand side and solution vector.

#### Parameters

in	Α	SkMatrix instance that contains matrix	
in	b	Vect instance that contains the right-hand side	
in,out	х	Vect instance that contains initial guess on input and solution on output	

# LinearSolver ( TrMatrix< T $_->$ & A, const Vect< T $_->$ & b, Vect< T $_->$ & x)

Constructor using a tridiagonal matrix, right-hand side and solution vector.

#### **Parameters**

in	A	TrMatrix instance that contains matrix  Vect instance that contains the right-hand side  Vect instance that contains initial guess on input and solution on output	
in	b		
in,out	х		

# LinearSolver ( BMatrix< $T_-$ > & A, const Vect< $T_-$ > & b, Vect< $T_-$ > & x)

Constructor using a banded matrix, right-hand side and solution vector.

# Parameters

in	A	BMatrix instance that contains matrix	
in	b	Vect instance that contains the right-hand side	
in,out	х	Vect instance that contains initial guess on input and solution on output	

# LinearSolver ( DMatrix $< T_- > & A$ , const Vect $< T_- > & b$ , Vect $< T_- > & x$ )

Constructor using a dense matrix, right-hand side and solution vector.

in	A	DMatrix instance that contains matrix	
in	b	Vect instance that contains the right-hand side	
in,out	x	Vect instance that contains initial guess on input and solution on outpu	

### LinearSolver ( DSMatrix $< T_- > & A$ , const Vect $< T_- > & b$ , Vect $< T_- > & x$ )

Constructor using a dense symmetric matrix, right-hand side and solution vector.

#### **Parameters**

in	A DSMatrix instance that contains matrix		
in	b	Vect instance that contains the right-hand side	
in,out	х	Vect instance that contains initial guess on input and solution on outp	

### LinearSolver (SkSMatrix $< T_- > & A$ , const Vect $< T_- > & b$ , Vect $< T_- > & x$ )

Constructor using skyline-stored symmetric matrix, right-hand side and solution vector.

#### **Parameters**

in	A   SkMatrix instance that contains matrix		
in	b	Vect instance that contains the right-hand side	
in,out	х	Vect instance that contains initial guess on input and solution on outp	

# LinearSolver (SkMatrix< T $_->$ & A, Vect< T $_->$ & b, Vect< T $_->$ & x)

Constructor using matrix, right-hand side.

# Parameters

in	A	SkMatrix instance that contains matrix	
in	b	Vect instance that contains the right-hand side	
in,out	x	Vect instance that contains the initial guess on input and solution on output	

# 7.62.3 Member Function Documentation

void setVerbose ( int verb )

Set message level. Default value is 0

void setMaxIter ( int m )

Set Maximum number of iterations. Default value is 1000

# void setMatrix ( OFELI::Matrix $< T_- > *A$ )

Set matrix in the case of a pointer to Matrix.

in	A	Pointer to abstract Matrix class

### 7.62. LINEARSOLVER < T\_ > CLASS TEMPLATE RIGHRENIEME 7. CLASS DOCUMENTATION

# void setMatrix ( SpMatrix $< T_- > & A$ )

Set matrix in the case of a pointer to matrix.

#### Parameters

in	A	Pointer to abstract Matrix class
----	---	----------------------------------

### void setMatrix ( SkMatrix $< T_- > & A$ )

Set matrix in the case of a skyline matrix.

#### **Parameters**

	in	Α	Matrix as instance of class SkMatrix	1
--	----	---	--------------------------------------	---

# void set (SpMatrix< T $_->$ & A, const Vect< T $_->$ & b, Vect< T $_->$ & x)

Set matrix, right-hand side and initial guess.

#### Parameters

in	A	Reference to matrix as a SpMatrix instance
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess on input and solution on output

# void setSolver ( Iteration s, Preconditioner $p = DIAG_PREC$ )

Set solver and preconditioner.

#### Parameters

in	S	Solver identification parameter. To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER
in	р	Preconditioner identification parameter. By default, the diagonal preconditioner is used. To be chosen in the enumeration variable Preconditioner:  IDENT_PREC, DIAG_PREC, SSOR_PREC, ILU_PREC [Default: ILU_PREC]

#### Note

The argument p has no effect if the solver is DIRECT\_SOLVER

# int solve ( SpMatrix< $T_-$ > & A, const Vect< $T_-$ > & b, Vect< $T_-$ > & x, Iteration s, Preconditioner p = DIAG\_PREC )

Solve equations using system data, prescribed solver and preconditioner.

#### **Parameters**

in	A	Reference to matrix as a SpMatrix instance	
in	b	Vector containing right-hand side	
in,out	х	Vector containing initial guess on input and solution on output	
in	S	Solver identification parameter To be chosen in the enumeration variable Iteration:  DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: CGS_SOLVER]	
in	р	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner:  IDENT_PREC, DIAG_PREC, SSOR_PREC, ILU_PREC, DILU_PREC [Default: DIAG_PREC]	

#### Remarks

The argument p has no effect if the solver is DIRECT\_SOLVER

### Warning

If the library eigen is used, only the preconditioners IDENT\_PREC, DIAG\_PREC and ILU\_PREC are available.

### int solve ( )

Solve equations all arguments must have given by other member functions.

Solver and preconditioner parameters must have been set by function setSolver. Otherwise, default values are set.

# 7.63 LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> Class Template Reference

Handles small size matrices like element matrices, with a priori known size.

### **Public Member Functions**

• LocalMatrix ()

Default constructor.

• LocalMatrix (const LocalMatrix < T\_, NR\_, NC\_ > &m)

Copy constructor.

• LocalMatrix (Element \*el, const SpMatrix < T\_ > &a)

Constructor of a local matrix associated to element from a SpMatrix.

• LocalMatrix (Element \*el, const SkMatrix < T\_ > &a)

Constructor of a local matrix associated to element from a SkMatrix.

• LocalMatrix (Element \*el, const SkSMatrix < T<sub>−</sub> > &a)

Constructor of a local matrix associated to element from a SkSMatrix.

• ~LocalMatrix ()

Destructor.

• T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)

Operator () (Non constant version)

```
• T_ operator() (size_t i, size_t j) const
      Operator () (Constant version)
• void Localize (Element *el, const SpMatrix< T_> &a)
      Initialize matrix as element matrix from global SpMatrix.

    void Localize (Element *el, const SkMatrix < T<sub>-</sub> > &a)

      Initialize matrix as element matrix from global SkMatrix.
• void Localize (Element *el, const SkSMatrix< T_> &a)
      Initialize matrix as element matrix from global SkSMatrix.

    LocalMatrix < T., NR., NC. > & operator = (const LocalMatrix < T., NR., NC. > &m)

      Operator =
• LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub> > & operator= (const T<sub>-</sub> &x)
      Operator =

    LocalMatrix < T., NR., NC. > & operator += (const LocalMatrix < T., NR., NC. > &m)

      Operator +=

    LocalMatrix < T., NR., NC. > & operator = (const LocalMatrix < T., NR., NC. > &m)

      Operator -=
• LocalVect< T_, NR_ > operator* (LocalVect< T_, NC_ > &x)
      Operator *
• LocalMatrix< T_-, NR_-, NC_> & operator += (const T_- &x)
      Operator +=
• LocalMatrix< T_, NR_, NC_ > & operator== (const T_ &x)
      Operator -=
• LocalMatrix< T_, NR_, NC_> & operator*= (const T_ &x)
      Operator *=
• LocalMatrix< T<sub>-</sub>, NR<sub>-</sub>, NC<sub>-</sub>> & operator/= (const T<sub>-</sub> &x)
      Operator /=

    void MultAdd (const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)

      Multiply matrix by vector and add result to vector.

    void MultAddScal (const T_ &a, const LocalVect< T_, NC_ > &x, LocalVect< T_, NR_ > &y)

      Multiply matrix by scaled vector and add result to vector.
• void Mult (const LocalVect< T_, NC_> &x, LocalVect< T_, NR_> &y)
      Multiply matrix by vector.

    void Symmetrize ()

      Symmetrize matrix.
• int Factor ()
      Factorize matrix.
• int Solve (LocalVect< T_, NR_ > &b)
      Forward and backsubstitute to solve a linear system.
• int FactorAndSolve (LocalVect< T_, NR_ > &b)
      Factorize matrix and solve linear system.
• void Invert (LocalMatrix < T_, NR_, NC_ > &A)
      Calculate inverse of matrix.
• T_getInnerProduct (const LocalVect< T_, NC_> &x, const LocalVect< T_, NR_> &y)
      Calculate inner product witrh respect to matrix.
• T_* get ()
      Return pointer to matrix as a C-array.
```

# 7.63.1 Detailed Description

template < class  $T_-$ , size\_t  $NR_-$ , size\_t  $NC_-$ > class OFELI::LocalMatrix  $< T_-$ ,  $NR_-$ ,  $NC_-$  >

Handles small size matrices like element matrices, with a priori known size.

The template class LocalMatrix treats small size matrices. Typically, this class is recommended to store element and side arrays.

Internally, no dynamic storage is used.

# **Template Parameters**

$T \leftarrow$	Data type (double, float, complex <double>,)</double>
_	
N⊷	number of rows of matrix
R←	
_	
N⊷	number of columns of matrix
C←	
_	

# 7.63.2 Member Function Documentation

T\_& operator() ( size\_t i, size\_t j )

Operator () (Non constant version)
Returns entry at row i and column j.

 $T_{-}$  operator() ( size\_t i, size\_t j ) const

Operator () (Constant version)
Returns entry at row i and column j.

# 7.64 LocalVect< T $_{-}$ , N $_{-}$ > Class Template Reference

Handles small size vectors like element vectors.

### **Public Member Functions**

• LocalVect ()

Default constructor.

• LocalVect (const T<sub>-</sub> \*a)

Constructor using a C-array.

• LocalVect (const Element \*el)

Constructor using Element pointer.

• LocalVect (const Side \*sd)

Constructor using Side pointer.

• LocalVect (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &v)

Copy constructor.

• LocalVect (const Element \*el, const Vect< T\_> &v, int opt=0)

Constructor of an element vector from a global Vect instance.

```
• LocalVect (const Side *sd, const Vect< T_> &v, int opt=0)
      Constructor of a side vector from a global Vect instance.
• ∼LocalVect ()
      Destructor.
• void getLocal (const Element &el, const Vect< T_> &v, int type)
      Localize an element vector from a global Vect instance.
• void Localize (const Element *el, const Vect< T_> &v, size_t k=0)
      Localize an element vector from a global Vect instance.
• void Localize (const Side *sd, const Vect< T_> &v, size_t k=0)
      Localize a side vector from a global Vect instance.
• T<sub>-</sub> & operator[] (size<sub>-</sub>t i)
      Operator [] (Non constant version).
• T_operator[] (size_t i) const
      Operator [] (Constant version).
• T<sub>-</sub> & operator() (size_t i)
      Operator () (Non constant version).
• T_ operator() (size_t i) const
      Operator () (Constant version).
• Element * El ()
      Return pointer to Element if vector was constructed using an element and NULL otherwise.
• Side * Sd ()
      Return pointer to Side if vector was constructed using a side and NULL otherwise.
• LocalVect< T<sub>-</sub>, N<sub>-</sub> > & operator= (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &v)
      Operator =
• LocalVect< T_-, N_- > & operator = (const T_- & x)
      Operator =
• LocalVect< T_-, N_- > \& operator += (const LocalVect<math>< T_-, N_- > \&v)
      Operator +=
• LocalVect< T_-, N_- > \& operator += (const <math>T_- \& a)
      Operator +=
• LocalVect< T<sub>-</sub>, N<sub>-</sub> > & operator= (const LocalVect< T<sub>-</sub>, N<sub>-</sub> > &v)
      Operator -=
• LocalVect< T_-, N_- > \& operator = (const T_- \& a)
      Operator -=
• LocalVect< T_-, N_- > \& operator*= (const T_- \& a)
      Operator *=
• LocalVect< T_-, N_- > \& operator/= (const T_- \& a)
      Operator /=
• T_* get ()
      Return pointer to vector as a C-Array.
• T_ operator, (const LocalVect< T_, N_ > &v) const
      Return Dot (scalar) product of two vectors.
```

# 7.64.1 Detailed Description

```
template < class T_-, size_t N_- > class OFELI::LocalVect < T_-, N_- >
```

Handles small size vectors like element vectors.

The template class LocalVect treats small size vectors. Typically, this class is recommended to store element and side arrays. Operators =, [] and () are overloaded so that one can write for instance:

```
LocalVect<double,10> u, v;
v = -1.0;
u = v;
u(3) = -2.0;
```

to set vector  $\mathbf{v}$  entries to -1, copy vector  $\mathbf{v}$  into vector  $\mathbf{u}$  and assign third entry of  $\mathbf{v}$  to -2. Notice that entries of  $\mathbf{v}$  are here  $\mathbf{v}(1)$ ,  $\mathbf{v}(2)$ , ...,  $\mathbf{v}(10)$ , *i.e.* vector entries start at index 1. Internally, no dynamic storage is used.

### **Template Parameters**

$T \leftarrow$	Data type (double, float, complex <double>,)</double>
_←	
N⊷	Vector size
_←	

# 7.64.2 Member Function Documentation

```
T_{\&} operator[] ( size_t i )
```

```
Operator [] (Non constant version). v[i] starts at v[0] to v[size()-1]
```

### $T_{-}$ operator[] ( size\_t i ) const

```
Operator [] (Constant version). v[i] starts at v[0] to v[size()-1]
```

### $T_{\pm}$ operator() ( size\_t i )

```
Operator () (Non constant version). v(i) starts at v(1) to v(size()). v(i) is the same element as v[i-1]
```

#### $T_{-}$ operator() ( size\_t i ) const

```
Operator () (Constant version). v(i) starts at v(1) to v(size()) v(i) is the same element as v[i-1]
```

# 7.65 Material Class Reference

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

### **Public Member Functions**

• Material ()

Default consructor.

Material (const Material &m)

Copy constructor.

• ∼Material ()

Destructor.

• int set (int m, const string &name)

Associate to material code number n the material named name

• string getName (int m) const

Return material name for material with code m

• int getCode (size\_t i) const

Return material code for *i*-th material.

size\_t getNbMat () const

Return Number of read materials.

• void setCode (int m)

Associate code m to current material.

- int check (int c)
- real\_t Density ()

Return constant density.

• real\_t Density (const Point< real\_t > &x, real\_t t)

Return density at point x and time t

real\_t SpecificHeat ()

Return constant specific heat.

real\_t SpecificHeat (const Point < real\_t > &x, real\_t t)

Return specific heat at point x and time t

real\_t ThermalConductivity ()

Return constant thermal conductivity.

real\_t ThermalConductivity (const Point < real\_t > &x, real\_t t)

Return thermal conductivity at point x and time t

• real\_t MeltingTemperature ()

Return constant melting temperature.

• real\_t MeltingTemperature (const Point< real\_t > &x, real\_t t)

Return melting temperature at point x and time t

real\_t EvaporationTemperature ()

Return constant evaporation temperature.

real\_t EvaporationTemperature (const Point< real\_t > &x, real\_t t)

Return evaporation temperature at point x and time t

real\_t ThermalExpansion ()

Return constant thermal expansion coefficient.

real\_t ThermalExpansion (const Point< real\_t > &x, real\_t t)

Return thermal expansion coefficient at point x and time t

real\_t LatentHeatForMelting ()

Return constant latent heat for melting.

real\_t LatentHeatForMelting (const Point< real\_t > &x, real\_t t)

Return latent heat for melting at point x and time t

real\_t LatentHeatForEvaporation ()

Return constant latent heat for evaporation.

real\_t LatentHeatForEvaporation (const Point< real\_t > &x, real\_t t)

Return latent heat for evaporation at point x and time t

real\_t DielectricConstant ()

Return constant dielectric constant.

real\_t DielectricConstant (const Point< real\_t > &x, real\_t t)

Return dielectric constant at point x and time t

real\_t ElectricConductivity ()

Return constant electric conductivity.

real\_t ElectricConductivity (const Point< real\_t > &x, real\_t t)

Return electric conductivity at point x and time t

real\_t ElectricResistivity ()

Return constant electric resistivity.

real\_t ElectricResistivity (const Point< real\_t > &x, real\_t t)

Return electric resistivity at point x and time t

real\_t MagneticPermeability ()

Return constant magnetic permeability.

• real\_t MagneticPermeability (const Point< real\_t > &x, real\_t t)

Return magnetic permeability at point x and time t

• real\_t Viscosity ()

Return constant viscosity.

real\_t Viscosity (const Point< real\_t > &x, real\_t t)

Return viscosity at point x and time t

real\_t YoungModulus ()

Return constant Young modulus.

real\_t YoungModulus (const Point< real\_t > &x, real\_t t)

Return Young modulus at point x and time t

• real\_t PoissonRatio ()

Return constant Poisson ratio.

real\_t PoissonRatio (const Point < real\_t > &x, real\_t t)

Return Poisson ratio at point x and time t

• real\_t Property (int i)

Return constant i-th property.

real\_t Property (int i, const Point < real\_t > &x, real\_t t)

Return i-th property at point x and time t

• Material & operator= (const Material &m)

Operator =.

# 7.65.1 Detailed Description

To treat material data. This class enables reading material data in material data files. It also returns these informations by means of its members.

#### 7.65.2 Constructor & Destructor Documentation

#### Material ( )

Default consructor.

It initializes the class and searches for the path where are material data files.

# 7.65.3 Member Function Documentation

### int set ( int m, const string & name )

Associate to material code number n the material named name

Returns

Number of materials

### string getName ( int m ) const

Return material name for material with code m

If such a material is not found, return a blank string.

### int check ( int c )


Check if material code c is present.

Returns

0 if succeeded, 1 if not.

# 7.66 Matrix < T\_ > Class Template Reference

Virtual class to handle matrices for all storage formats. Inheritance diagram for Matrix<  $T_->$ :

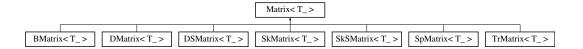

# **Public Member Functions**

• Matrix ()

Default constructor.

Matrix (const Matrix < T<sub>-</sub> > &m)

Copy Constructor.

• virtual ~Matrix ()

Destructor.

• size\_t getNbRows () const

Return number of rows.

• size\_t getNbColumns () const

 $Return\ number\ of\ columns.$ 

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

void setDiagonal ()

Set the matrix as diagonal.

T\_getDiag (size\_t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

• virtual void MultAdd (const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &y) const =0

Multiply matrix by vector x and add to y

• virtual void MultAdd (T\_a, const Vect< T\_> &x, Vect< T\_> &y) const =0

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add to  $\mathbf{y}$ 

• virtual void Mult (const Vect< T\_> &x, Vect< T\_> &y) const =0

Multiply matrix by vector x and save in y

• virtual void TMult (const Vect< T\_> &v, Vect< T\_> &w) const =0

Multiply transpose of matrix by vector x and save in y

virtual void Axpy (T<sub>-</sub> a, const Matrix < T<sub>-</sub> > \*x)=0

Add to matrix the product of a matrix by a scalar.

void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

• void Assembly (const Element &el, T<sub>-</sub> \*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix < T\_ > &a)

Assembly of element matrix into global matrix.

void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix < T\_ > &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

void Prescribe (int dof, int code, Vect< T<sub>-</sub> > &b, const Vect< T<sub>-</sub> > &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T\_> &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

• void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual void add (size\_t i, size\_t j, const T\_ &val)=0

Add val to entry (i, j).

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• virtual int solve (Vect< T<sub>-</sub> > &b)=0

Solve the linear system by a direct method.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve system with factorized matrix (forward and back substitution).

int FactorAndSolve (Vect< T<sub>-</sub> > &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect<  $T_->$  &b, Vect<  $T_->$  &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• virtual void set (size\_t i, size\_t j, const T\_ &val)=0

Assign a value to an entry of the matrix.

• virtual T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)=0

Operator () (Non constant version).

• virtual T\_ operator() (size\_t i, size\_t j) const =0

Operator () (Non constant version).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

T\_ operator[] (size\_t k) const

Operator [] (Constant version).

• Matrix & operator= (Matrix < T\_ > &m)

Operator = .

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

• Matrix & operator= (const Matrix < T\_ > &m)

*Operator* -=.

• Matrix & operator= (const T<sub>-</sub> &x)

Operator =.

• Matrix & operator\*= (const T<sub>-</sub> &x)

Operator \*=.

• Matrix & operator+= (const T<sub>-</sub> &x)

Operator +=.

Matrix & operator-= (const T<sub>-</sub> &x)

Operator -=.

• virtual T\_get (size\_t i, size\_t j) const =0

Return entry (i, j) of matrix if this one is stored, 0 else.

# 7.66.1 Detailed Description

template < class T\_> class OFELI::Matrix < T\_>

Virtual class to handle matrices for all storage formats.

**Template Parameters** 

< <i>T</i> ←	Data type (real_t, float, complex <real_t>,)</real_t>
_>	

# 7.66.2 Constructor & Destructor Documentation

### Matrix ( )

Default constructor.

Initializes a zero-size matrix.

# 7.66.3 Member Function Documentation

### $T_{-}$ getDiag ( size\_t k ) const

Return k-th diagonal entry of matrix. First entry is given by **getDiag(1)**.

# virtual void Axpy ( $T_-a$ , const Matrix $< T_- > *x$ ) [pure virtual]

Add to matrix the product of a matrix by a scalar.

### **Parameters**

in	а	Scalar to premultiply
in	x	Matrix by which a is multiplied. The result is added to current instance

Implemented in SpMatrix<  $T_->$ , DSMatrix<  $T_->$ , DMatrix<  $T_->$ , SkSMatrix<  $T_->$ , Sk $\leftrightarrow$  Matrix<  $T_->$ , TrMatrix<  $T_->$ , and BMatrix<  $T_->$ .

#### void setDiagonal ( Mesh & mesh )

Initialize matrix storage in the case where only diagonal terms are stored. This member function is to be used for explicit time integration schemes

### void Assembly (const Element & el, $T_-*a$ )

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

### Parameters

in	el	Pointer to element instance
in	а	Element matrix as a C-array

### void Assembly (const Element & el, const DMatrix $< T_- > & a$ )

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

# void Assembly (const Side & sd, $T_-*a$ )

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

#### **Parameters**

	in	sd	Pointer to side instance
:	in	а	Side matrix as a C-array instance

### void Assembly (const Side & sd, const DMatrix $< T_- > & a$ )

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

#### **Parameters**

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

## void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.	
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

# void Prescribe (int dof, int code, Vect< $T_->$ & b, const Vect< $T_->$ & u, int flag = 0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in	dof	Degree of freedom for which a boundary condition is to be enforced	
in	code	Code for which a boundary condition is to be enforced	
in,out	b	Vect instance that contains right-hand side.	
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

# void Prescribe ( Vect< $T_-$ > & b, int flag = 0 )

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

### void Prescribe ( size\_t dof, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).	
in,out	b	Vect instance that contains right-hand side.	
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

### void PrescribeSide ( )

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

# virtual int solve ( Vect< $T_- > \& b$ ) [pure virtual]

Solve the linear system by a direct method.

This is available only if the storage class enables it and if matrix has been primarily factorized (See **isFactorized**).

Implemented in SpMatrix<  $T_-$  >, DMatrix<  $T_-$  >, SkSMatrix<  $T_-$  >, SkMatrix<  $T_-$  >, DS $\leftarrow$  Matrix<  $T_-$  >, BMatrix<  $T_-$  >, and TrMatrix<  $T_-$  >.

### int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve system with factorized matrix (forward and back substitution).

#### **Parameters**

in	b	Vect instance that contains right-hand side	
out	x	Vect instance that contains solution	

#### Returns

- \_
- 0 if solution was normally performed
- n if the n-th pivot is null Solution is performed only is factorization has previouly been invoked.

# int FactorAndSolve ( Vect< T $_->$ & b )

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

# Parameters

	7	**
in out	h	Vect instance that contains right-hand side on input and solution on output
111,000		veet instance that contains right hand state on hip at and solution on statp at

### int FactorAndSolve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

in	b	Vect instance that contains right-hand side	
out	x	Vect instance that contains solution	

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

#### int isFactorized ( ) const

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

# virtual void set ( size\_t i, size\_t j, const T\_ & val ) [pure virtual]

Assign a value to an entry of the matrix.

#### **Parameters**

in	i	Row index
in	j	Column index
in	val	Value to assign

Implemented in SpMatrix<  $T_-$  >, SkSMatrix<  $T_-$  >, DMatrix<  $T_-$  >, SkMatrix<  $T_-$  >, Tr $\leftarrow$  Matrix<  $T_-$  >, BMatrix<  $T_-$  >, and DSMatrix<  $T_-$  >.

# virtual T\_& operator() ( size\_t i, size\_t j ) [pure virtual]

Operator () (Non constant version).

Returns the (i,j) entry of the matrix.

#### **Parameters**

in	i	Row index
in	j	Column index

Implemented in SpMatrix<  $T_-$  >, DMatrix<  $T_-$  >, SkSMatrix<  $T_-$  >, SkMatrix<  $T_-$  >, DS $\leftarrow$  Matrix<  $T_-$  >, TrMatrix<  $T_-$  >, and BMatrix<  $T_-$  >.

### virtual T\_ operator() ( size\_t i, size\_t j ) const [pure virtual]

Operator () (Non constant version).

Returns the (i, j) entry of the matrix.

### Parameters

in	i	Row index
in	j	Column index

Implemented in SpMatrix<  $T_-$  >, DMatrix<  $T_-$  >, SkSMatrix<  $T_-$  >, SkMatrix<  $T_-$  >, DS $\leftarrow$  Matrix<  $T_-$  >, TrMatrix<  $T_-$  >, and BMatrix<  $T_-$  >.

#### $T_{-}$ operator() ( size\_t i ) const

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
		J

# $T_{-}$ % operator() ( size\_t i )

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

### $T_{-}$ operator[] ( size\_t k )

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

### $T_{-}$ operator[] ( size\_t k ) const

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

# Matrix& operator= ( Matrix $< T_- > & m$ )

Operator =.

Copy matrix m to current matrix instance.

### Matrix& operator+= ( const Matrix $< T_- > & m$ )

Operator +=.

Add matrix m to current matrix instance.

### Matrix& operator== ( const Matrix $< T_- > & m$ )

Operator -=.

Subtract matrix m from current matrix instance.

### Matrix& operator= ( const $T_- \& x$ )

Operator =.

Assign constant value x to all matrix entries.

#### Matrix& operator\*= ( const $T_- \& x$ )

Operator \*=.

Premultiply matrix entries by constant value x

## Matrix& operator+= ( const $T_- \& x$ )

Operator +=.

Add constant value x to all matrix entries.

## Matrix& operator== ( const $T_- & x$ )

Operator -=.

Subtract constant value x from all matrix entries.

# 7.67 Mesh Class Reference

To store and manipulate finite element meshes.

## **Public Member Functions**

• Mesh ()

Default constructor (Empty mesh)

• Mesh (const string &file, bool bc=false, int opt=NODE\_DOF, int nb\_dof=1)

Constructor using a mesh file.

• Mesh (real\_t L, size\_t nb\_el, size\_t p=1, size\_t nb\_dof=1)

Constructor for a 1-D mesh. The domain is the interval [0,L].

Mesh (const Grid &g, int opt=QUADRILATERAL)

Constructor for a uniform finite difference grid given by and instance of class Grid.

• Mesh (const Grid &g, int shape, int opt)

Constructor of dual mesh for a uniform finite difference grid given by and instance of class Grid.

• Mesh (real\_t xmin, real\_t xmax, size\_t ne, int c1, int c2, int opt=0)

Constructor for a uniform 1-D finite element mesh.

• Mesh (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, size\_t nx, size\_t ny, int cx0, int cxN, int cy0, int cyN, int opt=0)

Constructor for a uniform 2-D structured finite element mesh.

• Mesh (real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, real\_t zmin, real\_t zmax, size\_t nx, size\_t ny, size\_t nz, int cx0, int cxN, int cy0, int cyN, int cz0, int czN, int opt)

Constructor for a uniform 3-D structured finite element mesh.

Mesh (const Mesh &m, const Point< real\_t > &x\_bl, const Point< real\_t > &x\_tr)

Constructor that extracts the mesh of a rectangular region from an initial mesh.

• Mesh (const Mesh &mesh, int opt, size\_t dof1, size\_t dof2, bool bc=false)

Constructor that copies the input mesh and selects given degrees of freedom.

Mesh (const Mesh &ms)

 $Copy\ Constructor.$ 

• ~Mesh ()

Destructor.

• void setDim (size\_t dim)

Define space dimension. Normally, between 1 and 3.

• void setVerbose (int verb)

Define Verbose Parameter. Controls output details.

• void Add (Node \*nd)

Add a node to mesh.

• void Add (Element \*el)

Add an element to mesh.

• void Add (Side \*sd)

Add a side to mesh.

• void Add (Edge \*ed)

Add an edge to mesh.

• Mesh & operator\*= (real\_t a)

Operator \*=

void get (const string &mesh\_file)

Read mesh data in file.

• void get (const string &mesh\_file, int ff, int nb\_dof=1)

Read mesh data in file with giving its format.

• void setDOFSupport (int opt, int nb\_nodes=1)

Define supports of degrees of freedom.

void setNbDOFPerNode (size\_t nb\_dof=1)

Define number of degrees of freedom for each node.

• void setPointInDomain (Point< real\_t > x)

Define a point in the domain. This function makes sense only if boundary mesh is given without internal mesh (Case of Boundary Elements)

• void removeImposedDOF()

Eliminate equations corresponding to imposed DOF.

• size\_t NumberEquations (size\_t dof=0)

Renumber Equations.

• size\_t NumberEquations (size\_t dof, int c)

Renumber Equations.

• int getAllSides (int opt=0)

Determine all mesh sides.

• size\_t getNbSideNodes () const

Return the number of nodes on each side.

• size\_t getNbElementNodes () const

Return the number of nodes in each element.

• int getBoundarySides ()

Determine all boundary sides.

• int createBoundarySideList ()

Create list of boundary sides.

int getBoundaryNodes ()

Determine all boundary nodes.

• int createInternalSideList ()

Create list of internal sides (not on the boundary).

int getAllEdges ()

Determine all edges.

• void getNodeNeighborElements ()

Create node neighboring elements.

• void getElementNeighborElements ()

Create element neighboring elements.

• void setMaterial (int code, const string &mname)

Associate material to code of element.

• void Reorder (size\_t m=GRAPH\_MEMORY)

Renumber mesh nodes according to reverse Cuthill Mc Kee algorithm.

void Add (size\_t num, real\_t \*x)

Add a node by giving its label and an array containing its coordinates.

void DeleteNode (size\_t label)

Remove a node given by its label.

• void DeleteElement (size\_t label)

Remove an element given by its label.

void DeleteSide (size\_t label)

Remove a side given by its label.

void Delete (Node \*nd)

Remove a node given by its pointer.

void Delete (Element \*el)

Remove a node given by its pointer.

• void Delete (Side \*sd)

Remove a side given by its pointer.

• void Delete (Edge \*ed)

Remove an edge given by its pointer.

void RenumberNode (size\_t n1, size\_t n2)

Renumber a node.

• void RenumberElement (size\_t n1, size\_t n2)

Renumber an element.

• void RenumberSide (size\_t n1, size\_t n2)

Renumber a side.

• void RenumberEdge (size\_t n1, size\_t n2)

Renumber an edge.

void setNodeView (size\_t n1, size\_t n2)

Set viewing window for nodes.

void setElementView (size\_t n1, size\_t n2)

Set viewing window for elements.

• void setSideView (size\_t n1, size\_t n2)

Set viewing window for sides.

• void setEdgeView (size\_t n1, size\_t n2)

Set viewing window for edges.

• void setList (const std::vector < Node \* > &nl)

*Initialize list of mesh nodes using the input vector.* 

void setList (const std::vector< Element \* > &el)

*Initialize list of mesh elements using the input vector.* 

• void setList (const std::vector < Side \* > &sl)

*Initialize list of mesh sides using the input vector.* 

• void Rescale (real\_t sx, real\_t sy=0., real\_t sz=0.)

Rescale mesh by multiplying node coordinates by constants.

• int getVerbose () const

Return Verbose Parameter.

• size\_t getDim () const

Return space dimension.

• size\_t getNbNodes () const

Return number of nodes.

size\_t getNbMarkedNodes () const

Return number of marked nodes.

• size\_t getNbVertices () const

Return number of vertices.

• size\_t getNbDOF () const

Return total number of degrees of freedom (DOF)

• size\_t getNbEq () const

Return number of equations.

size\_t getNbEq (int i) const

Return number of equations for the i-th set of degrees of freedom.

size\_t getNbElements () const

Return number of elements.

• size\_t getNbSides () const

Return number of sides.

• size\_t getNbEdges () const

Return number of sides.

• size\_t getNbBoundarySides () const

Return number of boundary sides.

• size\_t getNbInternalSides () const

Return number of internal sides.

• size\_t getNbMat () const

Return number of materials.

• void AddMidNodes (int g=0)

Add mid-side nodes.

Point< real\_t > getMaxCoord () const

Return maximum coordinates of nodes.

Point< real\_t > getMinCoord () const

Return minimum coordinates of nodes.

• void set (Node \*nd)

Replace node in the mesh.

• void set (Element \*el)

 $Replace\ element\ in\ the\ mesh.$ 

• void set (Side \*sd)

Choose side in the mesh.

• bool NodesAreDOF () const

Return information about DOF type.

• bool SidesAreDOF () const

Return information about DOF type.

• bool EdgesAreDOF () const

Return information about DOF type.

• bool ElementsAreDOF () const

Return information about DOF type.

• int getDOFSupport () const

Return information on dof support Return an integer according to enumerated values: NODE\_DOF,  $EL \leftarrow EMENT\_DOF$  SIDE\_DOF.

• void put (const string &mesh\_file) const

Write mesh data on file.

void save (const string &mesh\_file) const

Write mesh data on file in various formats.

• bool withImposedDOF () const

Return true if imposed DOF count in equations, false if not.

• bool isStructured () const

Return true is mesh is structured, false if not.

size\_t getNodeNewLabel (size\_t n) const

Return new label of node of a renumbered node.

void getList (vector < Node \* > &nl) const

Fill vector nl with list of pointers to nodes.

• void getList (vector< Element \* > &el) const

Fill vector el with list of pointers to elements.

• void getList (vector< Side \* > &sl) const

Fill vector sl with list of pointers to sides.

Node \* getPtrNode (size\_t i) const

Return pointer to node with label i.

• Node & getNode (size\_t i) const

Return refenrece to node with label i

• Element \* getPtrElement (size\_t i) const

Return pointer to element with label i

• Element & getElement (size\_t i) const

Return reference to element with label i

Side \* getPtrSide (size\_t i) const

Return pointer to side with label i

• Side & getSide (size\_t i) const

Return reference to side with label i

• Edge \* getPtrEdge (size\_t i) const

Return pointer to edge with label i

Edge & getEdge (size\_t i) const

Return reference to edge with label i

• size\_t getNodeLabel (size\_t i) const

Return label of i-th node.

• size\_t getElementLabel (size\_t i) const

Return label of i-th element.

• size\_t getSideLabel (size\_t i) const

Return label of i-th side.

size\_t getEdgeLabel (size\_t i) const

Return label of i-th edge.

• void topNode () const

Reset list of nodes at its top position (Non constant version)

void topBoundaryNode () const

Reset list of boundary nodes at its top position (Non constant version)

void topMarkedNode () const

Reset list of marked nodes at its top position (Non constant version)

• void topElement () const

Reset list of elements at its top position (Non constant version)

• void topSide () const

Reset list of sides at its top position (Non constant version)

void topBoundarySide () const

Reset list of boundary sides at its top position (Non constant version)

void topInternalSide () const

Reset list of intrenal sides at its top position (Non constant version)

• void topEdge () const

Reset list of edges at its top position (Non constant version)

• void topBoundaryEdge () const

Reset list of boundary edges at its top position (Non constant version)

Node \* getNode () const

Return pointer to current node and move to next one (Non constant version)

Node \* getBoundaryNode () const

Return pointer to current boundary node and move to next one (Non constant version)

Node \* getMarkedNode () const

Return pointer to current marked node and move to next one (Non constant version)

• Element \* getElement () const

Return pointer to current element and move to next one (Non constant version)

Element \* getActiveElement () const

Return pointer to current element and move to next one (Non constant version)

• Side \* getSide () const

Return pointer to current side and move to next one (Non constant version)

Side \* getBoundarySide () const

Return pointer to current boundary side and move to next one (Non constant version)

Side \* getInternalSide () const

Return pointer to current internal side and move to next one (Non constant version)

• Edge \* getEdge () const

Return pointer to current edge and move to next one (Non constant version)

Edge \* getBoundaryEdge () const

Return pointer to current boundary edge and move to next one (Non constant version)

• int getShape () const

Determine shape of elements Return Shape index (see enum ElementShape) if all elements have the same shape, 0 if not.

• Element \* operator() (size\_t i) const

*Operator (): Return pointer to i-th element.* 

Node \* operator[] (size\_t i) const

Operator []: Return pointer to i-th node.

• size\_t operator() (size\_t i, size\_t n) const

Operator (): Return pointer to i-th node of n-th element.

• Mesh & operator= (Mesh &ms)

*Operator* = : *Assign a Mesh instance*.

## Friends

• void Refine (Mesh &in\_mesh, Mesh &out\_mesh)

Refine mesh. Subdivide each triangle into 4 subtriangles. This member function is valid for 2-D triangular meshes only.

## 7.67.1 Detailed Description

To store and manipulate finite element meshes.

Class Mesh enables defining as an object a finite element mesh. A finite element mesh is characterized by its nodes, elements and sides. Each of these types of data constitutes a class in the OFELI library.

The standard procedure to introduce the finite element mesh is to provide an input file containing its data. For this, we have defined our own mesh data file (following the XML syntax). Of course, a developer can write his own function to read his finite element mesh file using the methods in Mesh.

# 7.67.2 Constructor & Destructor Documentation

Mesh (const string & file, bool bc = false, int  $opt = NODE\_DOF$ , int  $nb\_dof = 1$ )

Constructor using a mesh file.

#### **Parameters**

in	file	File containing mesh data. The extension of the file yields the file format: The extension .m implies OFELI file format and .msh implies GMSH msh file.	
in	bc	Flag to remove (true) or not (false) imposed Degrees of Freedom [default: false]	
in	opt	Type of DOF support: To choose among enumerated values NODE_DOF, SIDE_DOF or ELEMENT_DOF.  Say if degrees of freedom (unknowns) are supported by nodes, sides or elements.	
in	nb_dof	Number of degrees of freedom per node [Default: 1]. This value is meaningful only if other format than OFELI's one is used. Otherwise, the information is contained in the OFELI file format.	

## Mesh ( real\_t L, size\_t $nb_el$ , size\_t p = 1, size\_t $nb_dof = 1$ )

Constructor for a 1-D mesh. The domain is the interval [0,L].

## Parameters

in	L	Length of the interval	
in	nb_el	Number of elements to generate	
in	p	Degree of finite element polynomial (Default = 1)	
in	nb_dof	Number of degrees of freedom for each node (Default = 1)	

## Mesh ( const Grid & g, int opt = QUADRILATERAL )

Constructor for a uniform finite difference grid given by and instance of class Grid.

in	g	Grid instance	
in	opt	Optional value to say which type of elements to generate	
		TRIANGLE: Mesh elements are triangles	
		QUADRILATERAL: Mesh elements are quadrilaterals [default]	

# Mesh (const Grid & g, int shape, int opt)

Constructor of dual mesh for a uniform finite difference grid given by and instance of class Grid.

## Parameters

in	g	Grid instance	
in	shape	Value to say which type of elements to generate	
		TRIANGLE: Mesh elements are triangles	
		QUADRILATERAL: Mesh elements are quadrilaterals [default]	
in	opt	This argument can take any value. It is here only to distinguish from the other constructor using Grid instance.	

#### Remarks

This constructor is to be used to obtain a dual mesh from a structured grid. It is mainly useful if a cell centered finite volume method is used.

# Mesh ( real\_t xmin, real\_t xmax, size\_t ne, int c1, int c2, int opt = 0 )

Constructor for a uniform 1-D finite element mesh.

The domain is the line (xmin,xmax)

in	xmin	Minimal coordinate
in	xmax	Maximal coordinate
in	пе	Number of elements
in	c1	Code for the first node (x=xmin)
in	c2	Code for the last node (x=xmax)
in	opt	Flag to generate elements as well (if not zero) [Default: 0].

## Remarks

The option opt can be set to 0 if the user intends to use finite differences.

Mesh ( real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, size\_t nx, size\_t ny, int cx0, int cxN, int cyN, int cyN, int opt = 0)

Constructor for a uniform 2-D structured finite element mesh. The domain is the rectangle (xmin,xmax)x(ymin,ymax)

#### **Parameters**

in	xmin	Minimal x-coordinate
in	xmax	Maximal x-coordinate
in	ymin	Minimal y-coordinate
in	ymax	Maximal y-coordinate
in	nx	Number of subintervals on the x-axis
in	ny	Number of subintervals on the y-axis
in	cx0	Code for nodes generated on the line $x=x0$ if $>0$ , for sides on this line if $<0$
in	cxN	Code for nodes generated on the line $x=xN$ if $>0$ , for sides on this line if $<0$
in	су0	Code for nodes generated on the line $y=y0$ if $>0$ , for sides on this line if $<0$
in	cyN	Code for nodes generated on the line $y=yN$ if $>0$ , for sides on this line if $<0$
in	opt	Flag to generate elements as well (if not zero) [Default: 0]. If the flag is not 0, it can take one of the enumerated values: TRIANGLE or QUADRILATERAL, with obvious meaning.

#### Remarks

The option opt can be set to 0 if the user intends to use finite differences.

Mesh ( real\_t xmin, real\_t xmax, real\_t ymin, real\_t ymax, real\_t zmin, real\_t zmax, size\_t nx, size\_t ny, size\_t nz, int cx0, int cxN, int cy0, int cyN, int cz0, int czN, int opt )

Constructor for a uniform 3-D structured finite element mesh.

The domain is the parallepiped (xmin,xmax)x(ymin,ymax)x(zmin,zmax)

in	xmin	Minimal x-coordinate	
in	xmax	Maximal x-coordinate	
in	ymin	Minimal y-coordinate	
in	ymax	Maximal y-coordinate	
in	zmin	Minimal z-coordinate	
in	zmax	Maximal z-coordinate	
in	nx	Number of subintervals on the x-axis	
in	пу	Number of subintervals on the y-axis	
in	nz	Number of subintervals on the z-axis	
in	cx0	Code for nodes generated on the line $x=xmin if >0$ , for sides on this line if $<0$	

in	cxN	Code for nodes generated on the line $x=xmax$ if $>0$ , for sides on this line if $<0$	
in	су0	Code for nodes generated on the line y=ymin if $>0$ , for sides on this line if $<0$	
in	cyN	Code for nodes generated on the line $y=y$ max if $>0$ , for sides on this line if $<0$	
in	cz0	Code for nodes generated on the line $z=zmin\ if >0$ , for sides on this line if $<0$	
in	czN	Code for nodes generated on the line $z=zmax$ if $>0$ , for sides on this line if $<0$	
in	opt	Flag to generate elements as well (if not zero) [Default: 0]. If the flag is not 0, it can take one of the enumerated values: HEXAHEDRON or TETRAHEDRON, with obvious meaning.	

#### Remarks

The option opt can be set to 0 if the user intends to use finite differences.

## Mesh ( const Mesh & m, const Point< real\_t > & x\_bl, const Point< real\_t > & x\_tr)

Constructor that extracts the mesh of a rectangular region from an initial mesh. This constructor is useful for zooming purposes for instance.

#### **Parameters**

in	m	Initial mesh from which the submesh is extracted
in	$x \leftarrow bl$	Coordinate of bottom left vertex of the rectangle
in	$x \leftarrow$	Coordinate of top right vertex of the rectangle
	$_{tr}$	

# Mesh ( const Mesh & mesh, int opt, size\_t dof1, size\_t dof2, bool bc = false)

Constructor that copies the input mesh and selects given degrees of freedom.

This constructor is to be used for coupled problems where each subproblem uses a choice of degrees of freedom.

## Parameters

in	mesh	Initial mesh from which the submesh is extracted
in	opt	Type of DOF support: To choose among enumerated values NODE_DOF, SIDE_DOF or ELEMENT_DOF.
in	dof1	Label of first degree of freedom to select to the output mesh
in	dof2	Label of last degree of freedom to select to the output mesh
in	bc	Flag to remove (true) or not (false) imposed Degrees of Freedom [Default: false]

## Mesh (const Mesh & ms)

## Copy Constructor.

in	ms	Mesh instance to copy
----	----	-----------------------

# 7.67.3 Member Function Documentation

## void setDim ( size\_t dim )

Define space dimension. Normally, between 1 and 3.

## Parameters

in	dim	Space dimension to set (must be between 1 and 3)
----	-----	--

## void setVerbose ( int verb )

Define Verbose Parameter. Controls output details.

## Parameters

in	verb	verbosity parameter (Must be between 0 and 10)
----	------	--

# void Add ( Node \* nd )

Add a node to mesh.

## Parameters

in	11 d	Pointer to Node to add
TII	riu	romiter to Node to add

## void Add ( Element \* el )

Add an element to mesh.

### Parameters

in   el   Pointer to Element to ad	d
------------------------------------	---

# void Add ( Side \*sd )

Add a side to mesh.

in	sd	Pointer to Side to add

## void Add ( Edge \* ed )

Add an edge to mesh.

## Parameters

in e	ed .	Pointer to Edge to add
------	------	------------------------

## Mesh& operator\*= ( real\_t a )

#### Operator \*=

Rescale mesh coordinates by myltiplying by a factor

#### **Parameters**

in a Value to mu	altiply by
------------------	------------

## void get ( const string & mesh\_file )

Read mesh data in file.

Mesh file must be in OFELI format. See "File Formats" page

#### Parameters

in   mesh_file   Mesh file name
---------------------------------

# void get ( const string & $mesh\_file$ , int ff, int $nb\_dof = 1$ )

Read mesh data in file with giving its format.

File format can be chosen among a variety of choices. See "File Formats" page

## Parameters

in	mesh_file	Mesh file name
in	ff	File format: Integer to chose among enumerated values: OFELI_FF, GMSH,
		MATLAB, EASYMESH, GAMBIT, BAMG, NETGEN, TRIANGLE_FF
in	nb_dof	Number of degrees of freedom per node (Default value: 1)

## void setDOFSupport ( int opt, int nb\_nodes = 1 )

Define supports of degrees of freedom.

in	opt	DOF type:
		<ul> <li>NODE_DOF: Degrees of freedom are supported by nodes</li> </ul>
		<ul> <li>SIDE_DOF: Degrees of freedom are supported by sides</li> </ul>
		<ul> <li>EDGE_DOF: Degrees of freedom are supported by edges</li> </ul>
		ELEMENT_DOF: Degrees of freedom are supported by elements
in	nb_nodes	Number of nodes on sides or elements (default=1). This parameter is useful only if dofs are supported by sides or elements

#### Note

This member function creates all mesh sides if the option ELEMENT\_DOF or SIDE\_DOF is selected. So it not necessary to call getAllSides() after

## void setNbDOFPerNode ( size\_t nb\_dof = 1 )

Define number of degrees of freedom for each node.

#### Parameters

in	nb_dof	Number of degrees of freedom (unknowns) for each mesh node (Default value
		is 1)

## Note

This function first declares nodes as unknown supports, sets the number of degrees of freedom and renumbers equations

## void setPointInDomain ( Point < real\_t > x )

Define a point in the domain. This function makes sense only if boundary mesh is given without internal mesh (Case of Boundary Elements)

## Parameters

in	x	Coordinates of point to define
----	---	--------------------------------

# size\_t NumberEquations ( size\_t dof = 0 )

Renumber Equations.

in	dof	Label of degree of freedom for which numbering is performed. Default value (0)	
		means that all degrees of freedom are taken into account	

## size\_t NumberEquations ( size\_t dof, int c )

Renumber Equations.

#### **Parameters**

in	dof	Label of degree of freedom for which numbering is performed.	
in	С	code for which degrees of freedom are enforced.	

## int getAllSides ( int opt = 0 )

Determine all mesh sides.

Returns

Number of all sides.

# int getBoundarySides ( )

Determine all boundary sides.

Returns

Number of boundary sides.

## int createBoundarySideList ( )

Create list of boundary sides.

This function is useful to loop over boundary sides without testing Once this one is called, the function <code>getNbBoundarySides()</code> is available. Moreover, looping over boundary sides is available via the member functions <code>topBoundarySide()</code> and <code>getBoundarySide()</code>

#### Returns

Number of boundary sides.

## int getBoundaryNodes ( )

Determine all boundary nodes.

Returns

n Number of boundary nodes.

# int createInternalSideList ( )

Create list of internal sides (not on the boundary).

This function is useful to loop over internal sides without testing Once this one is called, the function <a href="mailto:getNbInternalSides">getNbInternalSides</a>() is available. Moreover, looping over internal sides is available via the member functions topInternalSide() and <a href="mailto:getInternalSide">getInternalSide</a>()

## Returns

n Number of internal sides.

## int getAllEdges ( )

Determine all edges.

#### Returns

Number of all edges.

## void getNodeNeighborElements ( )

Create node neighboring elements.

This function is generally useful when, for a numerical method, one looks for a given node to the list of elements that share this node. Once this function is invoked, one can retrieve the list of neighboring elements of any node (Node::getNeigEl)

## void getElementNeighborElements ( )

Create element neighboring elements.

This function creates for each element the list of elements that share a side with it. Once this function is invoked, one can retrieve the list of neighboring elements of any element (Element← ::getNeigborElement)

## void setMaterial ( int code, const string & mname )

Associate material to code of element.

#### **Parameters**

in	code	Element code for which material is assigned
in	mname	Name of material

## void Reorder ( $size_t m = GRAPH_MEMORY$ )

Renumber mesh nodes according to reverse Cuthill Mc Kee algorithm.

#### Parameters

in	т	Memory size needed for matrix graph (default value is GRAPH_MEMORY, see OFELI_Config.h)
----	---	---

## void Add ( size\_t num, real\_t \* x )

Add a node by giving its label and an array containing its coordinates.

in	num	Label of node to add
in	x	C-array of node coordinates

#### void DeleteNode ( size\_t label )

Remove a node given by its label.

This function does not release the space previously occupied

#### **Parameters**

## void DeleteElement ( size\_t label )

Remove an element given by its label.

This function does not release the space previously occupied

#### **Parameters**

in	label	Label of element to delete
----	-------	----------------------------

## void DeleteSide ( size\_t label )

Remove a side given by its label.

This function does not release the space previously occupied

#### Parameters

in <i>label</i> Label of side to delete
---

# void Delete ( Node \* nd )

Remove a node given by its pointer.

This function does not release the space previously occupied

#### Parameters

in	nd	Pointer to node to delete
----	----	---------------------------

## void Delete ( Element \* el )

Remove a node given by its pointer.

This function does not release the space previously occupied

#### **Parameters**

|--|

## void Delete (Side \* sd)

Remove a side given by its pointer.

This function does not release the space previously occupied

#### Parameters

in	sd	Pointer to side to delete
----	----	---------------------------

# void Delete ( Edge \*ed )

Remove an edge given by its pointer.

This function does not release the space previously occupied

## Parameters

in	ed	Pointer to edge to delete
----	----	---------------------------

# void RenumberNode ( size\_t n1, size\_t n2 )

Renumber a node.

#### **Parameters**

in	n1	Old label
in	n2	New label

# void RenumberElement ( size\_t n1, size\_t n2 )

Renumber an element.

#### **Parameters**

in	n1	Old label
in	n2	New label

# void RenumberSide ( size\_t n1, size\_t n2 )

Renumber a side.

#### Parameters

in	n1	Old label
in	n2	New label

# void RenumberEdge ( size\_t n1, size\_t n2 )

Renumber an edge.

in	n1	Old label
in	n2	New label

# void setNodeView ( size\_t n1, size\_t n2 )

Set viewing window for nodes.

## Parameters

in	n1	First node to view
in	n2	last node to view

# void setElementView ( size\_t n1, size\_t n2 )

Set viewing window for elements.

#### Parameters

in	n1	First element to view
in	n2	last element to view

## void setSideView ( size\_t n1, size\_t n2 )

Set viewing window for sides.

## Parameters

in	n1	First side to view
in	n2	last side to view

## void setEdgeView ( size\_t n1, size\_t n2 )

Set viewing window for edges.

#### **Parameters**

in	n1	First edge to view
in	n2	last edge to view

# void setList ( const std::vector< Node \* > & nl )

Initialize list of mesh nodes using the input vector.

i	in nl	vector instance that contains the list of pointers to nodes	
---	-------	---	--

## void setList ( const std::vector< Element \* > & el )

Initialize list of mesh elements using the input vector.

#### **Parameters**

in	el	vector instance that contains the list of pointers to elements
----	----	--

## void setList ( const std::vector < Side \* > & sl )

Initialize list of mesh sides using the input vector.

#### Parameters

	in	sl	vector instance that contains the list of pointers to sides
--	----	----	---

## void Rescale ( real\_t sx, real\_t sy = 0., real\_t sz = 0. )

Rescale mesh by multiplying node coordinates by constants.

This function can be used e.g. for changing coordinate units

#### **Parameters**

in	sx	Factor to multiply by x coordinates
in	sy	Factor to multiply by y coordinates [Default: sx]
in	SZ	Factor to multiply by z coordinates [Default: sx]

## size\_t getNbBoundarySides ( ) const

Return number of boundary sides.

This function is valid if member function **getAllSides** or **getBoundarySides** has been invoked before

# size\_t getNbInternalSides ( ) const

Return number of internal sides.

This function is valid if member functions **getAllSides** and **createInternalSideList** have been invoked before

## void AddMidNodes ( int g = 0 )

Add mid-side nodes.

This is function is valid for triangles only

in	8	Option to say of barycentre node is to be added (>0) or not (=0)
----	---	--

## void set ( Node \* nd )

Replace node in the mesh.

If the node label exists already, the existing node pointer will be replaced by the current one. If not, an error message is displayed.

#### Parameters

in   <i>nd</i>   Pointer to node
----------------------------------

## void set ( Element \* el )

Replace element in the mesh.

If the element label exists already, the existing element pointer will be replaced by the current one. If not, an error message is displayed.

#### Parameters

in	el	Pointer to element
----	----	--------------------

#### void set ( Side \* sd )

Choose side in the mesh.

If the side label exists already, the existing side pointer will be replaced by the current one. If not, an error message is displayed.

#### **Parameters**

in	sd	Pointer to side

## bool NodesAreDOF ( ) const

Return information about DOF type.

Returns

true if DOF are supported by nodes, false otherwise

## bool SidesAreDOF ( ) const

Return information about DOF type.

Returns

true if DOF are supported by sides, false otherwise

## bool EdgesAreDOF ( ) const

Return information about DOF type.

Returns

true if DOF are supported by edges, false otherwise

## bool ElementsAreDOF ( ) const

Return information about DOF type.

Returns

true if DOF are supported by elements, false otherwise

# void put ( const string & mesh\_file ) const

Write mesh data on file.

**Parameters** 

	in	mesh_file	Mesh file name
--	----	-----------	----------------

## void save ( const string & mesh\_file ) const

Write mesh data on file in various formats. File format depends on the extension in file name

## Parameters

in	mesh_file	Mesh file name If the extension is '.m', the output file is an OFELI file If the	
		extension is '.gpl', the output file is a Gnuplot file If the extension is '.msh' or	
		'.geo', the output file is a Gmsh file If the extension is '.vtk', the output file is	
		VTK file	

# void getList ( vector< Node \* > & nl ) const

Fill vector nl with list of pointers to nodes.

## Parameters

out	nl	Instance of class vector that contain on output the list

## void getList ( vector< Element \* > & el ) const

Fill vector el with list of pointers to elements.

out	el	Instance of class vector that contain on output the list

## void getList ( vector< Side \* > & sl ) const

Fill vector s1 with list of pointers to sides.

#### Parameters

	out	sl	Instance of class vector that contain on output the list	
--	-----	----	--	--

## size\_t getNodeLabel ( size\_t i ) const

Return label of i-th node.

#### Parameters

in i	Node index
------	------------

## size\_t getElementLabel ( size\_t i ) const

Return label of i-th element.

#### Parameters

in i	Element index
------	---------------

# size\_t getSideLabel ( size\_t i ) const

Return label of i-th side.

#### **Parameters**

in	i	Side index

## size\_t getEdgeLabel ( size\_t i ) const

Return label of i-th edge.

#### Parameters

in	i	Edge index

## Element\* getActiveElement() const

Return pointer to current element and move to next one (Non constant version)

This function returns pointer to the current element only is this one is active. Otherwise it goes to the next active element (To be used when adaptive meshing is involved)

## 7.67.4 Friends And Related Function Documentation

void Refine ( Mesh & in\_mesh, Mesh & out\_mesh ) [friend]


Refine mesh. Subdivide each triangle into 4 subtriangles. This member function is valid for 2-D triangular meshes only.

#### **Parameters**

in	in_mesh	Input mesh
out	out_mesh	Output mesh

# 7.68 Muscl Class Reference

Parent class for hyperbolic solvers with Muscl scheme. Inheritance diagram for Muscl:



# **Public Types**

#### **Public Member Functions**

• Muscl (Mesh &m)

Constructor using mesh instance.

• virtual ~Muscl ()

Destructor.

void setTimeStep (real\_t dt)

Assign time step value.

real\_t getTimeStep () const

 $Return\ time\ step\ value.$ 

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• void setReferenceLength (real\_t dx)

Assign reference length value.

• real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

void setMethod (const Method &s)

Choose a flux solver.

void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.68.1 Detailed Description

Parent class for hyperbolic solvers with Muscl scheme.

Everything here is common for both 2D and 3D muscl methods! Virtual functions are implemented in Muscl2D and Muscl3D classes

## 7.68.2 Member Enumeration Documentation

#### enum Method

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method

MULTI\_SLOPE\_Q\_METHOD Multislope Q method

MULTI\_SLOPE\_M\_METHOD Multislope M method

#### enum Limiter

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

## enum SolverType

Enumeration of various solvers for the Riemann problem.

## Enumerator

ROE\_SOLVER Roe solver

VFROE\_SOLVER Finite Volume Roe solver

*LF\_SOLVER* LF solver

RUSANOV\_SOLVER Rusanov solver

**HLL\_SOLVER** HLL solver

HLLC\_SOLVER HLLC solver

MAX\_SOLVER Max solver

## 7.68.3 Member Function Documentation

## void setTimeStep ( real\_t dt )

Assign time step value.

#### Parameters

	in	dt	Time step value
--	----	----	-----------------

## void setCFL ( real\_t CFL )

Assign CFL value.

Parameters

	CTI	Value of CEI
ın	(.F1,	Value of CFL

# void setReferenceLength ( real\_t dx )

Assign reference length value.

## Parameters

in	dx	Value of reference length

## void set Verbose ( int v )

Set verbosity parameter.

in	v	Value of verbosity parameter
----	---	------------------------------

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof )

Function to reconstruct by the Muscl method.

#### Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

## void setMethod ( const Method & s )

Choose a flux solver.

## Parameters

in	S	Solver to choose
----	---	------------------

## void setLimiter ( Limiter l )


Choose a flux limiter.

## Parameters

	in	1	Limiter to choose
1	T11	ı	Limite to choos

# 7.69 Muscl1D Class Reference

Class for 1-D hyperbolic solvers with Muscl scheme. Inheritance diagram for Muscl1D:

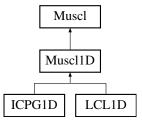

# **Public Types**

## **Public Member Functions**

• Muscl1D (Mesh &m)

Constructor using mesh instance.

• ~Muscl1D ()

Destructor.

• real\_t getMeanLength () const

Return mean length.

real\_t getMaximumLength () const

Return maximal length.

• real\_t getMinimumLength () const

Return mimal length.

• real\_t getTauLim () const

Return mean length.

void print\_mesh\_stat ()

Output mesh information.

• void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• void setReferenceLength (real\_t dx)

Assign reference length value.

real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

*Return code of solid zone, 0 if this one is not present.* 

• void setLimiter (Limiter l)

Choose a flux limiter.

# 7.69.1 Detailed Description

Class for 1-D hyperbolic solvers with Muscl scheme.

## 7.69.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

## enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

#### 7.69.3 Member Function Documentation

 $void setTimeStep ( real_t dt ) [inherited]$ 

Assign time step value.

Parameters

in dt Tim	ne step value
-----------	---------------

void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

in CFL	Value of CFL
--------	--------------

# ${f void \ setReferenceLength \ ( \ real\_t \ dx \ ) \ \ [inherited]}$

Assign reference length value.

## Parameters

	in $dx$	Value of reference length
--	---------	---------------------------

## void setVerbose ( int v ) [inherited]

Set verbosity parameter.

#### Parameters

	in	v	Value of verbosity parameter
--	----	---	------------------------------

# bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof ) [inherited]

Function to reconstruct by the Muscl method.

#### Parameters

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

# ${f void\ setMethod\ (\ const\ Method\ \&\ s\ )}$ [inherited]

Choose a flux solver.

## Parameters

in s Solver to choose	e
-----------------------	---


# void setLimiter( Limiter l) [inherited]

Choose a flux limiter.

in	1	Limiter to choose

# 7.70 Muscl2DT Class Reference

Class for 2-D hyperbolic solvers with Muscl scheme. Inheritance diagram for Muscl2DT:

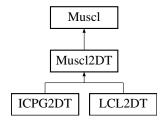

# **Public Types**

## **Public Member Functions**

• Muscl2DT (Mesh &m)

Constructor using mesh.

• ~Muscl2DT ()

Destructor.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

void setTimeStep (real\_t dt)

Assign time step value.

real\_t getTimeStep () const

Return time step value.

void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

• void setReferenceLength (real\_t dx)

Assign reference length value.

• real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

Return code of solid zone, 0 if this one is not present.

• void setLimiter (Limiter l)

Choose a flux limiter.

## **Protected Member Functions**

• void Initialize ()

Construction of normals to sides.

## 7.70.1 Detailed Description

Class for 2-D hyperbolic solvers with Muscl scheme.

## 7.70.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

## enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

## enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

## 7.70.3 Member Function Documentation

bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof )

Function to reconstruct by the Muscl method.

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

# void Initialize( ) [protected]

Construction of normals to sides.

Convention: for a given side, getPtrElement(1) is the left element and getPtrElement(2) is the right element. The normal goes from left to right. For boundary sides, the normal points outward.

# ${f void\ setTimeStep\ (\ real\_t\ dt\ )}$ [inherited]

Assign time step value.

#### Parameters

	in	dt	Time step value
--	----	----	-----------------

## void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

# Parameters

in	CFL	Value of CFL

# $void setReferenceLength ( real_t dx ) [inherited]$

Assign reference length value.

## Parameters

in	dx	Value of reference length

## void setVerbose ( int v ) [inherited]

Set verbosity parameter.

in	v	Value of verbosity parameter
----	---	------------------------------

## void setMethod ( const Method & s ) [inherited]

Choose a flux solver.

**Parameters** 

in	s	Solver to choose
----	---	------------------

## void setLimiter( Limiter l) [inherited]


Choose a flux limiter.

**Parameters** 

in	1	Limiter to choose
----	---	-------------------

# 7.71 Muscl3DT Class Reference

Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra. Inheritance diagram for Muscl3DT:



# **Public Types**

## **Public Member Functions**

- Muscl3DT (Mesh &m)
  - Constructor using mesh.
- ~Muscl3DT ()

Destructor.

bool setReconstruction (const Vect< real\_t > &U, Vect< real\_t > &LU, Vect< real\_t > &RU, size\_t dof)

Function to reconstruct by the Muscl method.

• real\_t getMinimumFaceArea () const

Return minimum area of faces in the mesh.

real\_t getMinimumElementVolume () const

Return minimum volume of elements in the mesh.

real\_t getMaximumFaceArea () const

Return maximum area of faces in the mesh.

• real\_t getMaximumElementVolume () const

Return maximum volume of elements in the mesh.

real\_t getMeanFaceArea () const

Return mean area of faces in the mesh.

• real\_t getMeanElementVolume () const

Return mean volume of elements in the mesh.

real\_t getMinimumEdgeLength () const

Return minimum length of edges in the mesh.

• real\_t getMinimumVolumebyArea () const

Return minimum volume by area in the mesh.

real\_t getMaximumEdgeLength () const

Return maximum length of edges in the mesh.

• real\_t getTauLim () const

Return value of tau lim.

• real\_t getComega () const

Return value of Comega.

void setbetalim (real\_t bl)

Assign value of beta lim.

void setTimeStep (real\_t dt)

Assign time step value.

• real\_t getTimeStep () const

Return time step value.

• void setCFL (real\_t CFL)

Assign CFL value.

• real\_t getCFL () const

Return CFL value.

void setReferenceLength (real\_t dx)

Assign reference length value.

real\_t getReferenceLength () const

Return reference length.

• Mesh & getMesh () const

Return reference to Mesh instance.

• void setVerbose (int v)

Set verbosity parameter.

• void setMethod (const Method &s)

Choose a flux solver.

• void setSolidZoneCode (int c)

Choose a code for solid zone.

• bool getSolidZone () const

Return flag for presence of solid zones.

• int getSolidZoneCode () const

*Return code of solid zone, 0 if this one is not present.* 

• void setLimiter (Limiter l)

Choose a flux limiter.

## 7.71.1 Detailed Description

Class for 3-D hyperbolic solvers with Muscl scheme using tetrahedra.

## 7.71.2 Member Enumeration Documentation

enum Method [inherited]

Enumeration for flux choice.

Enumerator

FIRST\_ORDER\_METHOD First Order upwind method MULTI\_SLOPE\_Q\_METHOD Multislope Q method MULTI\_SLOPE\_M\_METHOD Multislope M method

enum Limiter [inherited]

Enumeration of flux limiting methods.

Enumerator

MINMOD\_LIMITER MinMod limiter

VANLEER\_LIMITER Van Leer limiter

SUPERBEE\_LIMITER Superbee limiter

VANALBADA\_LIMITER Van Albada limiter

MAX\_LIMITER Max limiter

## enum SolverType [inherited]

Enumeration of various solvers for the Riemann problem.

Enumerator

ROE\_SOLVER Roe solver
VFROE\_SOLVER Finite Volume Roe solver
LF\_SOLVER LF solver
RUSANOV\_SOLVER Rusanov solver
HLL\_SOLVER HLL solver
HLLC\_SOLVER HLLC solver
MAX\_SOLVER Max solver

#### 7.71.3 Member Function Documentation

bool setReconstruction ( const Vect< real\_t > & U, Vect< real\_t > & LU, Vect< real\_t > & RU, size\_t dof )

Function to reconstruct by the Muscl method.

in	U	Field to reconstruct
out	LU	Left gradient vector
out	RU	Right gradient vector
in	dof	Label of dof to reconstruct

# void setTimeStep ( real\_t dt ) [inherited]

Assign time step value.

Parameters

in dt	Time step value
-------	-----------------

# void setCFL ( real\_t CFL ) [inherited]

Assign CFL value.

Parameters

in	CFL	Value of CFL
----	-----	--------------

# void setReferenceLength ( real\_t dx ) [inherited]

Assign reference length value.

Parameters

ſ	in	dx	Value of reference length
---	----	----	---------------------------

## void setVerbose (int v) [inherited]

Set verbosity parameter.

Parameters

in	v	Value of verbosity parameter
----	---	------------------------------

## ${f void}$ setMethod ( ${f const}$ Method & ${f s}$ ) [inherited]

Choose a flux solver.

Parameters

in	S	Solver to choose

## void setLimiter( Limiter l) [inherited]

Choose a flux limiter.

in	1	Limiter to choose

## 7.72 MyOpt Class Reference

Abstract class to define by user specified optimization function.

#### **Public Member Functions**

• MyOpt ()

Default Constructor.

• MyOpt (const Mesh &mesh)

Constructor using mesh instance.

• virtual ~MyOpt ()

Destructor.

• virtual real\_t Objective (const Vect< real\_t > &x)=0

Virtual member function to define objective.

virtual void Gradient (const Vect< real\_t > &x, Vect< real\_t > &g)

Virtual member function to define gradient vector of objective.

## 7.72.1 Detailed Description

Abstract class to define by user specified optimization function.

The user has to implement a class that inherits from the present one where the virtual functions are implemented.

#### 7.72.2 Constructor & Destructor Documentation

MyOpt (const Mesh & mesh)

Constructor using mesh instance.

Parameters

*mesh* Reference to Mesh instance

#### 7.72.3 Member Function Documentation

virtual real\_t Objective ( const Vect < real\_t > & x ) [pure virtual]

Virtual member function to define objective.

**Parameters** 

	in	x	Vector of optimization variables
--	----	---	----------------------------------

#### Returns

Value of objective

virtual void Gradient ( const Vect < real\_t > & x, Vect < real\_t > & g ) [virtual]

Virtual member function to define gradient vector of objective.

in	x	Vector of optimization variables
out	8	Gradient vector

## 7.73 Node Class Reference

To describe a node.

## **Public Member Functions**

• Node ()

Default constructor.

Node (size\_t label, const Point< real\_t > &x)

Constructor with label and coordinates.

• Node (const Node &node)

Copy Constructor.

• ~Node ()

Destructor.

• void setLabel (size\_t label)

Define label of node.

• void setNbDOF (size\_t n)

Define number of DOF.

• void setFirstDOF (size\_t n)

Define First DOF.

• void setCode (size\_t dof, int code)

Define code for a given DOF of node.

• void setCode (const vector< int > &code)

Define codes for all node DOFs.

• void setCode (int \*code)

Define codes for all node DOFs.

• void setCode (const string &exp, int code, size\_t dof=1)

Define code by a boolean algebraic expression invoking node coordinates.

void setCoord (size\_t i, real\_t x)

Set i-th coordinate.

void DOF (size\_t i, size\_t dof)

Define label of DOF.

void setDOF (size\_t &first\_dof, size\_t nb\_dof)

Define number of DOF.

• void setOnBoundary ()

Set node as boundary node.

• size\_t n () const

Return label of node.

• size\_t getNbDOF () const

Return number of degrees of freedom (DOF)

• int getCode (size\_t dof=1) const

Return code for a given DOF of node.

real\_t getCoord (size\_t i) const

Return i-th coordinate of node. i = 1..3.

• Point< real\_t > getCoord () const

Return coordinates of node.

• real\_t getX () const

Return x-coordinate of node.

• real\_t getY () const

Return y-coordinate of node.

• real\_t getZ () const

Return z-coordinate of node.

Point< real\_t > getXYZ () const

Return coordinates of node.

• size\_t getDOF (size\_t i) const

Return label of i-th dof.

size\_t getNbNeigEl () const

Return number of neighbor elements.

Element \* getNeigEl (size\_t i) const

Return i-th neighbor element.

• size\_t getFirstDOF () const

Return label of first DOF of node.

• bool isOnBoundary () const

Say if node is a boundary node.

• void Add (Element \*el)

Add element pointed by el as neighbor element to node.

• void setLevel (int level)

Assign a level to current node.

• int getLevel () const

Return node level Node level decreases when element is refined (starting from 0). If the level is 0, then the element has no parents.

## 7.73.1 Detailed Description

To describe a node.

A node is characterized by its label, its coordinates, its number of degrees of freedom (DOF) and codes that are associated to each DOF.

#### Remarks

Once the mesh is constructed, information on neighboring elements of node can be retrieved (see appropriate member functions). However, the member function getNode $\leftarrow$  NeighborElements of Mesh must have been called before. If this is not the case, the program crashes down since no preliminary checking is done for efficiency reasons.

#### 7.73.2 Constructor & Destructor Documentation

#### Node ( )

Default constructor.

Initialize data to zero

## Node ( size\_t label, const Point < real\_t > & x )

Constructor with label and coordinates.

#### Parameters

in	label	Label of node
in	x	Node coordinates

## 7.73.3 Member Function Documentation

## void setCode ( size\_t dof, int code )

Define code for a given DOF of node.

#### Parameters

in	dof	DOF index
in	code	Code to assign to DOF

## void setCode ( const vector< int > & code )

Define codes for all node DOFs.

#### Parameters

in	code	vector instance that contains code for each DOF of current node
----	------	---

#### void setCode ( int \* code )

Define codes for all node DOFs.

### Parameters

		T
in	code	C-array that contains code for each DOF of current node

## void setCode ( const string & exp, int code, size\_t dof = 1 )

Define code by a boolean algebraic expression invoking node coordinates.

in	ехр	Boolean algebraic expression as required by fparser
in	code	Code to assign to node if the algebraic expression is true
in	dof	Degree of Freedom for which code is assigned [Default: 1]

## void setCoord ( size\_t i, real\_t x )

Set i-th coordinate.

#### Parameters

in	i	Coordinate index (13)
in	x	Coordinate value

## void DOF ( size\_t i, size\_t dof )

Define label of DOF.

## Parameters

in	i	DOF index
in	dof	Label of DOF

## void setDOF ( size\_t & first\_dof, size\_t nb\_dof )

Define number of DOF.

#### **Parameters**

in,out	first_dof	Label of the first DOF in input that is actualized
in	nb_dof	Number of DOF

## void setOnBoundary ( )

Set node as boundary node.

This function is mostly internally used (Especially in class Mesh)

## int getCode ( size\_t dof = 1 ) const

Return code for a given DOF of node.

#### **Parameters**

in	dof	label of degree of freedom for which code is to be returned. Default value is 1.
----	-----	--

## Point<real\_t> getCoord ( ) const

Return coordinates of node.

Return value is an instance of class Point

## Point<real\_t> getXYZ ( ) const

Return coordinates of node.

Return value is an instance of class Point

#### size\_t getNbNeigEl ( ) const

Return number of neighbor elements.

Neighbor elements are those that share node. Note that the returned information is valid only if the Mesh member function **getNodeNeighborElements()** has been invoked before

## Element\* getNeigEl ( $size_t i$ ) const

Return i-th neighbor element.

Note that the returned information is valid only if the Mesh member function **getNode**← **NeighborElements()** has been invoked before

## bool isOnBoundary ( ) const

Say if node is a boundary node.

Note this information is available only if boundary sides (and nodes) were determined (See class Mesh).

## void setLevel ( int level )

Assign a level to current node.

This member function is useful for mesh adaption.

Default node's level is zero

## 7.74 NodeList Class Reference

Class to construct a list of nodes having some common properties.

#### **Public Member Functions**

• NodeList (Mesh &ms)

Constructor using a Mesh instance.

• ∼NodeList ()

Destructor.

• void selectCode (int code, int dof=1)

Select nodes having a given code for a given degree of freedom.

• void unselectCode (int code, int dof=1)

Unselect nodes having a given code for a given degree of freedom.

• void selectCoordinate (real\_t x, real\_t y=ANY, real\_t z=ANY)

Select nodes having given coordinates.

size\_t getNbNodes () const

Return number of selected nodes.

• void top ()

Reset list of nodes at its top position (Non constant version)

• void top () const

Reset list of nodes at its top position (Constant version)

Node \* get ()

Return pointer to current node and move to next one (Non constant version)

Node \* get () const

Return pointer to current node and move to next one (Constant version)

## 7.74.1 Detailed Description

Class to construct a list of nodes having some common properties.

This class enables choosing multiple selection criteria by using function select... However, the intersection of these properties must be empty.

## 7.74.2 Member Function Documentation

void selectCode ( int code, int dof = 1 )

Select nodes having a given code for a given degree of freedom.

#### **Parameters**

in	code	Code that nodes share
in	dof	Degree of Freedom label [Default: 1]

## void unselectCode ( int code, int dof = 1 )

Unselect nodes having a given code for a given degree of freedom.

#### **Parameters**

in	code	Code of nodes to exclude
in	dof	Degree of Freedom label [Default: 1]

## void selectCoordinate ( real\_t x, real\_t y = ANY, real\_t z = ANY )

Select nodes having given coordinates.

#### Parameters


in	x	x-coordinate that share the selected nodes
in	y	y-coordinate that share the selected nodes [Default: ANY]
in	z	z-coordinate that share the selected nodes [Default: ANY]

Coordinates can be assigned the value ANY. This means that any coordinate value is accepted. For instance, to select all nodes with x=0, use **selectCoordinate**(0.,ANY,ANY);

## 7.75 NSP2DQ41 Class Reference

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using  $Q_1/P_0$  element and a penaly formulation for the incompressibility condition.

Inheritance diagram for NSP2DQ41:

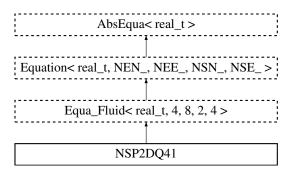

## **Public Member Functions**

• NSP2DQ41 ()

Default Constructor.

• NSP2DQ41 (const Element \*el)

Constructor using Element data.

• NSP2DQ41 (const Side \*sd)

Constructor using Side data.

• NSP2DQ41 (const Element \*el, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using element and previous time data.

• NSP2DQ41 (const Side \*sd, const Vect< real\_t > &u, const real\_t &time=0.)

Constructor using side and previous time data.

• ~NSP2DQ41 ()

Destructor.

• void Viscosity (real\_t visc)

Define constant viscosity.

• void Density (real\_t dens)

Define constant density.

• void LMass (real\_t coef=1.)

Add element lumped mass contribution to matrix after multiplication by coef [Default: 1].

• void Mass (real\_t coef=1.)

Add element consistent mass contribution to matrix after multiplication by coef [Default: 1].

• void Viscous (real\_t coef=1.)

Add element viscous contribution to matrix after multiplication by coef [Default: 1].

• void RHS\_Viscous (real\_t coef=1.)

Add element viscous contribution to right-hand side after multiplication by coef [Default: 1].

• void Penal (real\_t coef=1.)

Add element penalty contribution to matrix after multiplication by coef [Default: 1].

• void LHS1\_Convection (real\_t coef=1.)

Add convection contribution to left-hand side after multiplication by coef [Default: 1].

• void LHS2\_Convection (real\_t coef=1.)

Add convection contribution to left-hand side after multiplication by coef [Default: 1].

• void RHS\_Convection (real\_t coef=1.)

Add convection contribution to right-hand side after multiplication by coef [Default: 1].

• void BodyRHS (UserData < real\_t > &ud)

Add body right-hand side term to right-hand side.

void BoundaryRHS (UserData < real\_t > &ud)

Add boundary right-hand side term to right-hand side.

• void Periodic (real\_t coef=1.e20)

Add contribution of periodic boundary condition (by a penalty technique).

• real\_t Pressure (real\_t coef=1.)

Calculate element pressure by penalization after multiplication by coef [Default: 1].

void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

*Update element matrix to impose bc by diagonalization technique.* 

void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

Localize Element Vector from a Vect instance.

• void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)

Localize Element Vector.

• void SideVector (const Vect < real\_t > &b)

Localize Side Vector.

• void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

• void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix< real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix< real\_t > &A)

Assemble side (edge or face) matrix into global one.

• void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

• void DGElementAssembly (Matrix < real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

• void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

Mesh & getMesh () const

Return reference to Mesh instance.

LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix< real\_t > \*A, Vect< real\_t > &b, Vect< real\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_> eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_> eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRes

LocalVect instance containing local residual vector associated to current element.

• LocalVect< real\_t, NSE\_ > sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Viscosity (const real\_t &visc)

Set (constant) Viscosity.

• void Viscosity (const string &exp)

Set viscosity given by an algebraic expression.

• void Density (const real\_t &dens)

Set (constant) Viscosity.

• void Density (const string &exp)

Set Density given by an algebraic expression.

• void ThermalExpansion (const real\_t \*e)

Set (constant) thermal expansion coefficient.

void ThermalExpansion (const string &exp)

Set thermal expansion coefficient given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

## 7.75.1 Detailed Description

Builds finite element arrays for incompressible Navier-Stokes equations in 2-D domains using  $Q_1/P_0$  element and a penaly formulation for the incompressibility condition.

## 7.75.2 Constructor & Destructor Documentation

## NSP2DQ41()

Default Constructor.

Builds an empty equation

#### NSP2DQ41 (const Element \* el )

Constructor using Element data.

	in	el	Pointer to Element instance
--	----	----	-----------------------------

## NSP2DQ41 ( const Side \*sd )

Constructor using Side data.

#### Parameters

in sd P	ointer to Side instance
---------	-------------------------

## NSP2DQ41 ( const Element \* el, const Vect< real\_t > & u, const real\_t & time = 0. )

Constructor using element and previous time data.

#### **Parameters**

in	el	Pointer to Element instance
in	и	Vector that contains velocity at previous time step
in	time	Time value [Default: 0.]

## NSP2DQ41 ( const Side \* sd, const Vect< real\_t > & u, const real\_t & time = 0. )

Constructor using side and previous time data.

#### **Parameters**

in	sd	Pointer to Side instance
in	и	Vector that contains velocity at previous time step
in	time	Time value [Default: 0.]

## 7.75.3 Member Function Documentation

## void LHS1\_Convection ( real\_t coef = 1. )

Add convection contribution to left-hand side after multiplication by coef [Default: 1]. First term, explicit velocity, implicit velocity derivatives

## void LHS2\_Convection ( real\_t coef = 1. )

Add convection contribution to left-hand side after multiplication by coef [Default: 1]. Second term, implicit velocity, explicit velocity derivatives

## void BodyRHS ( UserData < real\_t > & ud )

Add body right-hand side term to right-hand side.

in	ud	UserData instance that defines data	
----	----	-------------------------------------	--

## void BoundaryRHS ( UserData < real\_t > & ud )

Add boundary right-hand side term to right-hand side.

#### **Parameters**

in   ud   UserData instance that defir	nes data
--	----------

## void Periodic ( real\_t coef = 1.e20 )

Add contribution of periodic boundary condition (by a penalty technique).

Boundary nodes where periodic boundary conditions are to be imposed must have codes equal to PERIODIC\_A on one side and PERIODIC\_B on the opposite side.

#### **Parameters**

	in	coef	Value of penalty parameter [Default: 1.e20].	
--	----	------	--	--

## void updateBC ( const Element & el, const Vect< real.t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

## void updateBC ( const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

## Remarks

The current element is pointed by \_theElement

## void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

## $void\ LocalNodeVector(\ Vect < real\_t > \&\ b$ ) [inherited]

Localize Element Vector from a Vect instance.

#### **Parameters**

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
ou	; be	Local vector, the length of which is the total number of element equations.

## Remarks

All degrees of freedom are transferred to the local vector

# $\label{lementNodeVector} \mbox{ void ElementNodeVector ( const Vect< real\_t > \& b, LocalVect< real\_t , NEN_- > \& be, int dof ) \ \mbox{ [inherited]}$

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.	
out	t be Local vector, the length of which is the total number of element equation		
in	dof	Degree of freedom to transfer to the local vector	

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in b Global vector to be localized.		Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

## void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

# void ElementVector ( const Vect< real\_t > & b, int $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized	
in	dof_type	DOF type option. To choose among the enumerated values:	
		NODE_FIELD, DOFs are supported by nodes [Default]	
		ELEMENT_FIELD, DOFs are supported by elements	
		• SIDE_FIELD, DOFs are supported by sides	
in	flag	Option to set:	
		• = 0, All DOFs are taken into account [Default]	
		• != 0, Only DOF number dof is handled in the system	
		The resulting local vector can be accessed by attribute ePrev.	

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer  $\_$ theElement

#### void SideVector ( const Vect< real\_t> & b ) [inherited]

Localize Side Vector.

#### Parameters

in	b	Global vector to be localized	
		NODE_FIELD, DOFs are supported by nodes [ default ]	
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>	
		SIDE_FIELD, DOFs are supported by sides	
		The resulting local vector can be accessed by attribute ePrev.	

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer \_theSide

## void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Side pointer \_theSide

## void SideNodeCoordinates ( ) [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array \_x[0], \_x[1], ... which are instances of class Point<real\_t>

## Remarks

This member function uses the Element pointer \_theElement

## ${f void \ Element Assembly ( \ Matrix < real\_t > *A ) \ [inherited]}$

Assemble element matrix into global one.

Α	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

void ElementAssembly ( PETScMatrix< real $_t > \& A$  ) [inherited]

Assemble element matrix into global one.

Parameters

A Reference to global matrix

Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble element right-hand side vector into global one.

**Parameters** 

*b* Reference to global right-hand side vector

Warning

The element pointer is given by the global variable the Element

void ElementAssembly ( BMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

**Parameters** 

A Global matrix stored as a BMatrix instance

Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $SkSMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

**Parameters** 

A Global matrix stored as an SkSMatrix instance

The element pointer is given by the global variable the Element

## void ElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( SpMatrix< real t > & A ) [inherited]

Assemble element matrix into global one.

#### Parameters

	in	A	Global matrix stored as an SpMatrix instance	1
--	----	---	--	---

## Warning

The element pointer is given by the global variable the Element

## ${f void \ Element Assembly \ ( \ TrMatrix < {f real.t} > \& A \ ) \ \ [{f inherited}]}$

Assemble element matrix into global one.

## Parameters

in	A	Global matrix stored as an TrMatrix instance

## Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

in	v	Global vector (Vect instance)

The element pointer is given by the global variable the Element

## void SideAssembly ( PETScMatrix< real t > & A ) [inherited]

Assemble side matrix into global one.

#### **Parameters**

A Reference to global matrix

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( PETScVect< real\_t> & b ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( Matrix < real\_t > \*A ) [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble side (edge or face) matrix into global one.

in	Α	Global matrix stored as an SkSMatrix instance
----	---	---

The side pointer is given by the global variable the Side

## void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance
----	---	--

#### Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ SpMatrix{<}\, real\_t>\&\, A}$ ) [inherited]

Assemble side (edge or face) matrix into global one.

#### Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The side pointer is given by the global variable the Side

## ${f void\ Side Assembly\ (\ Vect < real\_t > \&\ v\ )} \quad {f [inherited]}$

Assemble side (edge or face) vector into global one.

#### Parameters

in a	v	Global vector (Vect instance)
------	---	-------------------------------

#### Warning

The side pointer is given by the global variable the Side

## $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkSMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance
---

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $SkMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	Α	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## $void\ DGElementAssembly\ (\ SpMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

in	A	Global matrix stored as an SpMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	A	Global matrix stored as an TrMatrix instance
----	---	--

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

#### **Parameters**

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

## void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

## real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

#### **Parameters**

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

## $Mesh\&\ getMesh\ (\ \ )\ const\ \ [\texttt{inherited}]$

Return reference to Mesh instance.

#### Returns

Reference to Mesh instance

## void setSolver( Iteration ls, Preconditioner pc = IDENT\_PREC ) [inherited]

Choose solver for the linear system.

## Parameters

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER
		DIRECT_SOLVER, Use a facorization solver [default]
		CG_SOLVER, Conjugate Gradient iterative solver
		CGS_SOLVER, Squared Conjugate Gradient iterative solver
		BICG_SOLVER, BiConjugate Gradient iterative solver
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver
		GMRES_SOLVER, GMRES iterative solver
		• QMR_SOLVER, QMR iterative solver
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:
		<ul> <li>IDENT_PREC, Identity preconditioner (no preconditioning [default])</li> </ul>
		DIAG_PREC, Diagonal preconditioner
		ILU_PREC, Incomplete LU factorization preconditioner

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

## Parameters

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	х	Vector containing initial guess of solution on input, actual solution on output

## 7.75.4 Member Data Documentation

 $LocalVect{<}real\_t\;, NEE\_{>}\;ePrev \quad \texttt{[inherited]}$ 

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

## 7.76 ODESolver Class Reference

To solve a system of ordinary differential equations.

#### **Public Member Functions**

• ODESolver ()

Default constructor.

• ODESolver (TimeScheme s, real\_t time\_step=theTimeStep, real\_t final\_time=theFinalTime, size\_t nb\_eq=1)

Constructor using time discretization data.

• ∼ODESolver ()

Destructor.

• void set (TimeScheme s, real\_t time\_step=theTimeStep, real\_t final\_time=theFinalTime)

Define data of the differential equation or system.

void setNbEq (size\_t nb\_eq)

Set the number of equations [Default: 1].

• void setCoef (real\_t a0, real\_t a1, real\_t a2, real\_t f)

Define coefficients in the case of a scalar differential equation.

• void setCoef (string a0, string a1, string a2, string f)

Define coefficients in the case of a scalar differential equation.

• void setF (string F)

Set time derivative, given as an algebraic expression, for a nonlinear ODE.

• void setRK4RHS (real\_t f)

Set intermediate right-hand side vector for the Runge-Kutta method.

• void setRK4RHS (Vect< real\_t > &f)

Set intermediate right-hand side vector for the Runge-Kutta method.

• void setInitial (Vect< real\_t > &u)

Set initial condition for a first-oder system of differential equations.

• void setInitial (Vect< real\_t > &u, Vect< real\_t > &v)

Set initial condition for a second-order system of differential equations.

• void setInitialRHS (Vect< real\_t > &f)

Set initial RHS for a system of differential equations.

• void setInitial (real\_t u, real\_t v)

Set initial condition for a second-order ordinary differential equation.

• void setInitial (real\_t u)

Set initial condition for a first-order ordinary differential equation.

• void setInitialRHS (real\_t f)

Set initial right-hand side for a single differential equation.

• void setMatrices (DMatrix< real\_t > &A0, DMatrix< real\_t > &A1)

Define matrices for a system of first-order ODEs.

• void setMatrices (DMatrix < real\_t > &A0, DMatrix < real\_t > &A1, DMatrix < real\_t > &A2)

Define matrices for a system of second ODEs.

void setRHS (Vect< real\_t > &b)

Set right-hand side vector for a system of ODE.

• void setRHS (real\_t f)

Set right-hand side for a linear ODE.

void setRHS (string f)

Set right-hand side value for a linear ODE.

• void setNewmarkParameters (real\_t beta, real\_t gamma)

Define parameters for the Newmarxk scheme.

void setConstantMatrix ()

*Say that matrix problem is constant.* 

void setNonConstantMatrix ()

Say that matrix problem is variable.

void setLinearSolver (Iteration s=DIRECT\_SOLVER, Preconditioner p=DIAG\_PREC)

Set linear solver data.

• void setVerbose (int v=0)

*Set verbosity parameter:* 

real\_t runOneTimeStep ()

Run one time step.

• void run (bool opt=false)

Run the time stepping procedure.

LinearSolver< real\_t > & getLSolver ()

Return LinearSolver instance.

• real\_t get () const

Return solution in the case of a scalar equation.

## 7.76.1 Detailed Description

To solve a system of ordinary differential equations.

The class ODESolver enables solving by a numerical scheme a system or ordinary differential equations taking one of the forms:

• A linear system of differential equations of the first-order:

```
A_1(t)u'(t) + A_0(t)u(t) = f(t)
```

• A linear system of differential equations of the second-order:

```
A_2(t)u''(t) + A_1(t)u'(t) + A_0(t)u(t) = f(t)
```

• A system of ordinary differential equations of the form: f(x) = f(x) - f(x)

```
\mathbf{u}'(t) = \mathbf{f}(t, \mathbf{u}(t))
```

The following time integration schemes can be used:

- Forward Euler scheme (value: FORWARD\_EULER) for first-order systems
- Backward Euler scheme (value: BACKWARD\_EULER) for first-order linear systems
- Crank-Nicolson (value: CRANK\_NICOLSON) for first-order linear systems
- Heun (value: HEUN) for first-order systems
- 2nd Order Adams-Bashforth (value: AB2) for first-order systems
- 4-th order Runge-Kutta (value: RK4) for first-order systems
- 2nd order Backward Differentiation Formula (value: BDF2) for linear first-order systems
- Newmark (value: NEWMARK) for linear second-order systems with constant matrices

## 7.76.2 Constructor & Destructor Documentation

ODESolver ( TimeScheme s, real\_t  $time\_step$  = theTimeStep, real\_t  $final\_time$  = theFinalTime, size\_t  $nb\_eq = 1$  )

Constructor using time discretization data.

#### **Parameters**

in	S	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	time_step	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter if the value given by the global variable theTimeStep
in	final_time	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable theFinalTime
in	nb_eq	Number of differential equations (size of the system) [Default: 1]

## 7.76.3 Member Function Documentation

void set ( TimeScheme s, real\_t time\_step = theTimeStep, real\_t final\_time = theFinalTime )

Define data of the differential equation or system.

#### **Parameters**

in	S	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	time_step	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter if the value given by the global variable theTimeStep
in	final_time	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable theFinalTime

## void setNbEq ( size\_t nb\_eq )

Set the number of equations [Default: 1].

This function is to be used if the default constructor was used

## void setCoef ( real\_t a0, real\_t a1, real\_t a2, real\_t f )

Define coefficients in the case of a scalar differential equation.

This function enables giving coefficients of the differential equation as an algebraic expression of time t (see the function fparse)

in	a0	Coefficient of the 0-th order term
in	a1	Coefficient of the 1-st order term
in	a2	Coefficient of the 2-nd order term

in	f	Value of the right-hand side
----	---	------------------------------

#### Note

Naturally, the equation is of the first order if *a*2=0

## void setCoef ( string a0, string a1, string a2, string f)

Define coefficients in the case of a scalar differential equation.

#### Parameters

in	a0	Coefficient of the 0-th order term
in	a1	Coefficient of the 1-st order term
in	a2	Coefficient of the 2-nd order term
in	f	Value of the right-hand side

#### Note

Naturally, the equation if of the first order if a2=0

## void setF ( string F )

Set time derivative, given as an algebraic expression, for a nonlinear ODE.


This function enables prescribing the value of the 1-st derivative for a 1st order ODE or the 2nd one for a 2nd-order ODE. It is to be used for nonlinear ODEs of the form y'(t) = f(t,y(t)) or y''(t) = f(t,y(t),y'(t))

In the case of a system of ODEs, this function can be called once for each equation, given in the order of the unknowns

## void setRK4RHS ( real\_t f )

Set intermediate right-hand side vector for the Runge-Kutta method.

#### **Parameters**

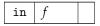

## void setRK4RHS ( Vect< real\_t > & f )

Set intermediate right-hand side vector for the Runge-Kutta method.

in $f$ right-h	nand side vector
----------------	------------------

#### void setInitial ( Vect < real\_t > & u )

Set initial condition for a first-oder system of differential equations.

#### **Parameters**

in <i>u</i> Vector containing initial condition for the un	ınknown
--	---------

## void setInitial ( Vect< real\_t > & u, Vect< real\_t > & v)

Set initial condition for a second-order system of differential equations.

Giving the right-hand side at initial time is somtimes required for high order methods like Runge-Kutta

#### **Parameters**

iı	n	и	Vector containing initial condition for the unknown
iı	n	v	Vector containing initial condition for the time derivative of the unknown

## void setInitialRHS ( Vect< real\_t > & f )

Set initial RHS for a system of differential equations.

Giving the right-hand side at initial time is somtimes required for high order methods like Runge-Kutta

## Parameters

in	f	Vector containing right-hand side at initial time. This vector is helpful for high order
		methods

## void setInitial ( real\_t u, real\_t v )

Set initial condition for a second-order ordinary differential equation.

## Parameters

in	и	Initial condition (unknown) value
in	v	Initial condition (time derivative of the unknown) value

## void setInitial ( real\_t u )

Set initial condition for a first-order ordinary differential equation.

in	и	Initial condition (unknown) value	
----	---	-----------------------------------	--

## void setInitialRHS ( real\_t f )

Set initial right-hand side for a single differential equation.

#### **Parameters**

in	f	Value of right-hand side at initial time. This value is helpful for high order methods	1
----	---	--	---

## void setMatrices ( DMatrix< real\_t > & A0, DMatrix< real\_t > & A1 )

Define matrices for a system of first-order ODEs.

Matrices are given as references to class DMatrix.

#### **Parameters**

in	A0	Reference to matrix in front of the 0-th order term (no time derivative)
in	A1	Reference to matrix in front of the 1-st order term (first time derivative)

#### Remarks

This function has to be called at each time step

## void setMatrices ( DMatrix< real\_t > & A0, DMatrix< real\_t > & A1, DMatrix< real\_t > & A2 )

Define matrices for a system of second ODEs.

Matrices are given as references to class DMatrix.

## Parameters

in	A0	Reference to matrix in front of the 0-th order term (no time derivative)
in	A1	Reference to matrix in front of the 1-st order term (first time derivative)
in	A2	Reference to matrix in front of the 2-nd order term (second time derivative)

#### Remarks

This function has to be called at each time step

## void setRHS ( Vect< real\_t > & b )

Set right-hand side vector for a system of ODE.

in	b	Vect instance containing right-hand side for a linear system of ordinary differential
		equations

## void setRHS ( real\_t f )

Set right-hand side for a linear ODE.

#### **Parameters**

in	f	Value of the right-hand side for a linear ordinary differential equation
----	---	--

## void setNewmarkParameters ( real\_t beta, real\_t gamma )

Define parameters for the Newmarxk scheme.

#### **Parameters**

in	beta	Parameter beta [Default: 0.25]
in	gamma	Parameter gamma [Default: 0.5]

## void setConstantMatrix ( )

Say that matrix problem is constant.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

## void setNonConstantMatrix ( )

Say that matrix problem is variable.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

## void setLinearSolver ( Iteration $s = DIRECT\_SOLVER$ , Preconditioner $p = DIAG\_PREC$ )

Set linear solver data.

### Parameters

in	S	Solver identification parameter. To be chosen in the enumeration variable Iteration: DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER, BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: DIRECT_SOLVER]
in	р	Preconditioner identification parameter. To be chosen in the enumeration variable Preconditioner:  IDENT_PREC, DIAG_PREC, ILU_PREC [Default: DIAG_PREC]

## Note

The argument *p* has no effect if the solver is DIRECT\_SOLVER

## void setVerbose ( int v = 0 )

Set verbosity parameter:

• = 0, No output

- = 1, Print step label and time value
- = 2, Print step label, time value, time step and integration scheme

## real\_t runOneTimeStep ( )

Run one time step.

Returns

Value of new time step if this one is updated

## void run ( bool opt = false )

Run the time stepping procedure.

#### **Parameters**

in	opt	Flag to say if problem matrix is constant while time stepping (true) or not (Default
		value is false)

Note

This argument is not used if the time stepping scheme is explicit

## 7.77 OptSolver Class Reference

To solve an optimization problem with bound constraints.

## **Public Types**

## **Public Member Functions**

• OptSolver ()

Default constructor.

OptSolver (Vect< real\_t > &x)

Constructor using vector of optimization variables.

OptSolver (MyOpt &opt, Vect< real\_t > &x)

Constructor using vector of optimization variables.

∼OptSolver ()

Destructor.

int getNbFctEval () const

Return the total number of function evaluations.

void setOptMethod (OptMethod m)

Choose optimization method.

void setBC (const Vect< real\_t > &bc)

Prescribe boundary conditions as constraints.

• void setObjective (string exp)

Define the objective function to minimize by an algebraic expression.

• void setGradient (string exp, int i=1)

Define a component of the gradient of the objective function to minimize by an algebraic expression.

void setOptClass (MyOpt &opt)

Choose user defined optimization class.

void setUpperBound (real\_t ub)

Define upper bound for optimization variable.

• void setUpperBounds (Vect< real\_t > &ub)

Define upper bounds for optimization variables.

void setLowerBound (real\_t lb)

Define lower bound for optimization variable.

• void setVerbosity (int verb)

Set verbosity parameter.

void setLowerBounds (Vect< real\_t > &lb)

Define lower bounds for optimization variables.

 void setSAOpt (real\_t rt, int ns, int nt, int &neps, int maxevl, real\_t t, Vect< real\_t > &vm, Vect< real\_t > &xopt, real\_t &fopt)

Set Simulated annealing options.

void setTolerance (real\_t toler)

Set error tolerance.

• void setMaxIterations (int n)

Set maximal number of iterations.

• int getNbObjEval () const

Return number of objective function evaluations.

• real\_t getTemperature () const

Return the final temperature.

• int getNbAcc () const

Return the number of accepted objective function evaluations.

int getNbOutOfBounds () const

Return the total number of trial function evaluations that would have been out of bounds.

• real\_t getOptObj () const

Return Optimal value of the objective.

• int run ()

Run the optimization algorithm.

int run (real\_t toler, int max\_it, int verb)

Run the optimization algorithm.

• real\_t getSolution () const

Return solution in the case of a one variable optimization.

void getSolution (Vect< real\_t > &x) const

Get solution vector.

#### **Friends**

ostream & operator << (ostream &s, const OptSolver &os)</li>
 Output class information.

## 7.77.1 Detailed Description

To solve an optimization problem with bound constraints.

## 7.77.2 Member Enumeration Documentation

## enum OptMethod

#### Enumerator

GRADIENT Gradient method

TRUNCATED\_NEWTON Truncated Newton method

SIMULATED\_ANNEALING Simulated annealing global optimization method

NELDER\_MEAD Nelder-Mead global optimization method

## 7.77.3 Constructor & Destructor Documentation

## OptSolver ( Vect< real\_t > & x )

Constructor using vector of optimization variables.

#### **Parameters**

in	x	Vector having as size the number of optimization variables. It contains the initial
		guess for the optimization algorithm.

#### Remarks

After using the member function run, the vector x contains the obtained solution if the optimization procedure was successful

## OptSolver ( MyOpt & opt, Vect< real\_t > & x )

Constructor using vector of optimization variables.

in	opt	Reference to instance of used defined optimization class. This class inherits from abstract class MyOpt. It must contain the member function double Objective(const Vect <double> &amp;x) which returns the value of the objective for a given solution vector x. The user defined class must contain, if the optimization algothm requires it the member function Gradient(const Vect<double> &amp;x, Vect<double> &amp;g) which stores the gradient of the objective in the vector g for a given optimization vector x. The user defined class must also contain, if the optimization algothm requires it the member function</double></double></double>
in	x	Vector having as size the number of optimization variables. It contains the initial guess for the optimization algorithm.

## Remarks

After using the member function run, the vector x contains the obtained solution if the optimization procedure was successful

## 7.77.4 Member Function Documentation

## void setOptMethod ( OptMethod m )

Choose optimization method.

#### **Parameters**

in	т	Enumerated value to choose the optimization algorithm to use. Must be chosen among the enumerated values:  • GRADIENT: Gradient steepest descent method with projection for bounded
		constrained problems
		• TRUNCATED_NEWTON: The Nash's Truncated Newton Algorithm, due to S.G. Nash (Newton-type Minimization via the Lanczos method, SIAM J. Numer. Anal. 21 (1984) 770-778).
		• SIMULATED_ANNEALING: Global optimization simulated annealing method. See Corana et al.'s article: "Minimizing Multimodal Functions of Continuous Variables with the Simulated Annealing Algorithm" in the September 1987 (vol. 13, no. 3, pp. 262-280) issue of the ACM Transactions on Mathematical Software.
		• NELDER_MEAD: Global optimization Nelder-Mead method due to John Nelder, Roger Mead (A simplex method for function minimization, Computer Journal, Volume 7, 1965, pages 308-313). As implemented by R. ONeill (Algorithm AS 47: Function Minimization Using a Simplex Procedure, Applied Statistics, Volume 20, Number 3, 1971, pages 338-345).

#### void setBC ( const Vect< real\_t > & bc )

Prescribe boundary conditions as constraints.

This member function is useful in the case of optimization problems where the optimization variable vector is the solution of a partial differential equation. For this case, Dirichlet boundary conditions can be prescribed as constraints for the optimization problem

#### **Parameters**

in	bc	Vector containing the values to impose on degrees of freedom. This vector must have been constructed using the Mesh instance.
		That's been constructed using the Mesh Instance.

## Remarks

Only degrees of freedom with positive code are taken into account as prescribed

## void setObjective ( string exp )

Define the objective function to minimize by an algebraic expression.

in	ехр	Regular expression defining the objective function
----	-----	--

## void setGradient ( string exp, int i = 1 )

Define a component of the gradient of the objective function to minimize by an algebraic expression.

#### **Parameters**

in	exp	Regular expression defining the objective function	
in	i	Component of gradient [Default: 1]	

## void setOptClass ( MyOpt & opt )

Choose user defined optimization class.

## Parameters

in	opt	Reference to inherited user specified optimization class
----	-----	--

## void setUpperBound ( real\_t ub )

Define upper bound for optimization variable.

Case of a one-variable problem

## Parameters

in	иb	Upper bound

## void setUpperBounds ( Vect< real\_t > & ub )

Define upper bounds for optimization variables.

#### **Parameters**

in	иb	Vector containing upper values for variables
----	----	--

## void setLowerBound ( real\_t lb )

Define lower bound for optimization variable. Case of a one-variable problem

ſ	in	lb	Lower value

## void setVerbosity ( int verb )

Set verbosity parameter.

## Parameters

in	verb	Verbosity parameter
----	------	---------------------

## void setLowerBounds ( Vect< real\_t > & lb )

Define lower bounds for optimization variables.

#### Parameters

	in	lb	Vector containing lower values for variables	
--	----	----	--	--

void setSAOpt ( real\_t rt, int ns, int nt, int & neps, int maxevl, real\_t , Vect< real\_t > & vm, Vect< real\_t > & xopt, real\_t & fopt )

Set Simulated annealing options.

#### Remarks

This member function is useful only if simulated annealing is used.

in	rt	The temperature reduction factor. The value suggested by Corana et al. is .85. See Goffe et al. for more advice.
	maxevl	[in] The maximum number of function evaluations. If it is exceeded, the return <i>code</i> =1.
in	ns	Number of cycles. After $ns*nb\_var$ function evaluations, each element of $vm$ is adjusted so that approximately half of all function evaluations are accepted. The suggested value is 20.
in	nt	Number of iterations before temperature reduction. After $nt*ns*n$ function evaluations, temperature (t) is changed by the factor $rt$ . Value suggested by Corana et al. is $max(100,5*nb\_var)$ . See Goffe et al. for further advice.
in	neps	Number of final function values used to decide upon termination. See eps. Suggested value is $4$
in	maxevl	
in	t	The initial temperature. See Goffe et al. for advice.
in	vm	The step length vector. On input it should encompass the region of interest given the starting value $x$ . For point $x[i]$ , the next trial point is selected is from $x[i]$ -vm[i] to $x[i]$ +vm[i]. Since $vm$ is adjusted so that about half of all points are accepted, the input value is not very important (i.e. is the value is off, $OptimSA$ adjusts $vm$ to the correct value).
in	xopt	
in	fopt	

### void setTolerance ( real\_t toler )

Set error tolerance.

#### **Parameters**

in	toler	Error tolerance for termination. If the final function values from the last neps	
		temperatures differ from the corresponding value at the current temperature by	
		less than eps and the final function value at the current temperature differs from	
		the current optimal function value by less than toler, execution terminates and	
		the value 0 is returned.	

## real\_t getTemperature ( ) const

Return the final temperature.

This function is meaningful only if the Simulated Annealing algorithm is used

## int getNbAcc ( ) const

Return the number of accepted objective function evaluations.

This function is meaningful only if the Simulated Annealing algorithm is used

## int getNbOutOfBounds ( ) const

Return the total number of trial function evaluations that would have been out of bounds. This function is meaningful only if the Simulated Annealing algorithm is used

### int run ( )

Run the optimization algorithm.

This function runs the optimization procedure using default values for parameters. To modify these values, user the function run with arguments

## int run ( real\_t toler, int max\_it, int verb )

Run the optimization algorithm.

### Parameters

in	toler	Tolerance value for convergence testing	
in	max⇔ it	Maximal number of iterations to achieve convergence	
	_11		
in	verb	Verbosity parameter (to choose between 0 and 10)	

## real\_t getSolution ( ) const

Return solution in the case of a one variable optimization.

In the case of a one variable problem, the solution value is returned, if the optimization procedure was successful

## void getSolution ( Vect< real\_t > & x ) const

Get solution vector.

The vector *x* contains the solution of the optimization problem. Note that if the constructor using an initial vector was used, the vector will contain the solution once the member function run has beed used (If the optimization procedure was successful)

#### **Parameters**

out	x	solution vector
-----	---	-----------------

## 7.78 Partition Class Reference

To partition a finite element mesh into balanced submeshes.

### **Public Member Functions**

• Partition ()

Default constructor.

• Partition (Mesh &mesh, size\_t n, int verb=0)

Constructor to partition a mesh into submeshes.

• Partition (Mesh &mesh, int n, vector < int > &epart, int verb=0)

Constructor using already created submeshes.

• ∼Partition ()

Destructor.

• size\_t getNbSubMeshes () const

Return number of submeshes.

size\_t getNbNodes (size\_t i) const

Return number of nodes in given submesh.

size\_t getNbElements (size\_t i) const

Return number of elements in given submesh.

Mesh \* getMesh ()

Return the global Mesh instance.

• Mesh \* getMesh (size\_t i)

Return the submesh of label i

size\_t getNodeLabelInSubMesh (size\_t sm, size\_t label) const

Return node label in subdomain by giving its label in initial mesh.

size\_t getElementLabelInSubMesh (size\_t sm, size\_t label) const

Return element label in subdomain by giving its label in initial mesh.

• size\_t getNodeLabelInMesh (size\_t sm, size\_t label) const

Return node label in initial mesh by giving its label in submesh.

• size\_t getElementLabelInMesh (size\_t sm, size\_t label) const

Return element label in initial mesh by giving its label in submesh.

size\_t getNbInterfaceSides (size\_t sm) const

Return Number of interface sides for a given sub-mesh.

• size\_t getSubMesh (size\_t sm, size\_t i) const

Return index of submesh that contains the i-th side label in sub-mesh sm

Mesh & getSubMesh (size\_t i) const

Return reference to submesh.

• size\_t getFirstSideLabel (size\_t sm, size\_t i) const

Return i-th side label in a given submesh.

size\_t getSecondSideLabel (size\_t sm, size\_t i) const

Return side label in the neighbouring submesh corresponding to i-th side label in sub-mesh sm

• int getNbConnectInSubMesh (int n, int s) const

Get number of connected nodes in a submesh.

• int getNbConnectOutSubMesh (int n, int s) const

Get number of connected nodes out of a submesh.

• void put (size\_t n, string file) const

Save a submesh in file.

• void setVerbose (int verb)

Set Message Level.

• void set (Mesh &mesh, size\_t n)

Set Mesh instance.

## **Friends**

• ostream & operator << (ostream &s, const Partition &p)

Output class information.

## 7.78.1 Detailed Description

To partition a finite element mesh into balanced submeshes.

Class Partition enables partitioning a given mesh into a given number of submeshes with a minimal connectivity. Partition uses the well known metis library that is included in the OFELI library. A more detailed description of metis can be found in the web site:

http://www.csit.fsu.edu/~burkardt/c\_src/metis/metis.html

### 7.78.2 Constructor & Destructor Documentation

Partition (Mesh & mesh, size\_t n, int verb = 0)

Constructor to partition a mesh into submeshes.

#### **Parameters**

in	mesh	Mesh instance
in	n	Number of submeshes
in	verb	Verbosity parameter [Default: 0]

Partition (Mesh & mesh, int n, vector < int > & epart, int verb = 0)

Constructor using already created submeshes.

in	mesh	Mesh instance

#### **Parameters**

in	n	Number of submeshes	
in	epart	Vector containing for each element its submesh label (Running from 0 to n-1	
in	verb	Verbosity parameter [Default: 0]	

## 7.78.3 Member Function Documentation

## size\_t getNodeLabelInSubMesh ( size\_t sm, size\_t label ) const

Return node label in subdomain by giving its label in initial mesh.

### **Parameters**

in	sm	Label of submesh	
in	label	Label of node in initial mesh	

## size\_t getNodeLabelInMesh ( size\_t sm, size\_t label ) const

Return node label in initial mesh by giving its label in submesh.

### **Parameters**

in	sm	Label of submesh
in	label	Node label

## size\_t getSubMesh ( size\_t sm, size\_t i ) const

Return index of submesh that contains the i-th side label in sub-mesh sm

## Parameters

in	sm	Submesh index
in	i	Side label

## Returns

Index of submesh

## Mesh& getSubMesh ( size\_t i ) const

Return reference to submesh.

in	i	Submesh index

## Returns

Reference to corresponding Mesh instance

## size\_t getFirstSideLabel ( size\_t sm, size\_t i ) const

Return i-th side label in a given submesh.

### Parameters

in	sm	Index of submesh
in	i	Label of side

## size\_t getSecondSideLabel ( size\_t sm, size\_t i ) const

Return side label in the neighbouring submesh corresponding to i-th side label in sub-mesh sm

### Parameters

ſ	in	sm	Label of submesh
Ī	in	i	Side label

## int getNbConnectInSubMesh ( int n, int s ) const

Get number of connected nodes in a submesh.

## Parameters

in	n	Label of node for which connections are counted
in	S	Label of submesh (starting from 0)

## int getNbConnectOutSubMesh ( int n, int s ) const

Get number of connected nodes out of a submesh.

### Parameters

in	n	Label of node for which connections are counted
in	s	Label of submesh (starting from 0)

## void put ( size\_t n, string file ) const

Save a submesh in file.

in	n	Label of submesh
in	file	Name of file in which submesh is saved

## 7.79 Penta6 Class Reference

Defines a 6-node pentahedral finite element using  $P_1$  interpolation in local coordinates (s.x,s.y) and  $Q_1$  isoparametric interpolation in local coordinates (s.x,s.z) and (s.y,s.z).

Inheritance diagram for Penta6:



## **Public Member Functions**

• Penta6 ()

Default Constructor.

• Penta6 (const Element \*element)

Constructor when data of Element el are given.

• ~Penta6 ()

Destructor.

• void set (const Element \*el)

Choose element by giving its pointer.

void setLocal (const Point< real\_t > &s)

Initialize local point coordinates in element.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

• real\_t getMaxEdgeLength () const

Return Maximum length of pentahedron edges.

real\_t getMinEdgeLength () const

Return Mimimum length of pentahedron edges.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

• Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

## 7.79.1 Detailed Description

Defines a 6-node pentahedral finite element using  $P_1$  interpolation in local coordinates (s.x,s.y) and  $Q_1$  isoparametric interpolation in local coordinates (s.x,s.z) and (s.y,s.z).

The reference element is the cartesian product of the standard reference triangle with the line [-1,1]. The nodes are ordered as follows: Node 1 in reference element is at s=(1,0,0) Node 2 in reference element is at s=(0,1,0) Node 3 in reference element is at s=(0,0,0) Node 4 in reference element is at s=(0,0,0) Node 5 in reference element is at s=(0,0,0) Node 6 in reference element is at s=(0,0,0)

The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function **setLocal()** must be invoked.

### 7.79.2 Constructor & Destructor Documentation

#### Penta6 (const Element \* element)

Constructor when data of Element el are given.

#### **Parameters**

in element	Pointer to Element
------------	--------------------

### 7.79.3 Member Function Documentation

void setLocal ( const Point< real $_{-}$ t > & s )

Initialize local point coordinates in element.

## Parameters

in	s	Point in the reference element This function computes jacobian, shape functions and
		their partial derivatives at s. Other member functions only return these values.

### Point<real\_t> DSh ( size\_t i ) const

Return derivatives of shape function of node i at a given point.

Member function **setLocal()** must have been called before in order to calculate relevant quantities.

## real\_t Sh ( size\_t i, Point < real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

in	i	Local node label
in	S	Point in the reference triangle where the shape function is evaluated

### real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

### Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

### Point<real\_t> getLocalPoint ( const Point< real\_t > & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

## 7.80 PETScMatrix< T $_->$ Class Template Reference

To handle matrices in sparse storage format using the Petsc library.

## **Public Member Functions**

• PETScMatrix ()

Default constructor.

• PETScMatrix (size\_t nr, size\_t nc)

Constructor that initializes current instance as a dense matrix.

• PETScMatrix (size\_t size)

Constructor that initializes current instance as a dense matrix.

• PETScMatrix (Mesh &mesh, size\_t dof=0)

Constructor using a Mesh instance.

• PETScMatrix (const vector< std::pair< size\_t, size\_t >> &I, int opt=1)

Constructor for a square matrix using non zero row and column indices.

• PETScMatrix (const PETScMatrix &m)

Copy constructor.

• ~PETScMatrix (void)

Destructor.

• void Identity ()

Define matrix as identity matrix.

• void Diagonal ()

Define matrix as a diagonal one.

• void Diagonal (const T<sub>-</sub> &a)

Define matrix as a diagonal one with diagonal entries equal to a

- void setAIJ (const vector< int > &nnz)
- void setAIJ\_MPI (const vector< int > &diag\_nnz, const vector< int > &off\_nnz)
- void setMesh (Mesh &mesh, size\_t dof=0)

Determine mesh graph and initialize matrix.

• void setPartition (Partition &p)

Set a Partition instance in the class.

• void setRank (int np, int r=0)

Set number of processors and processor rank.

void setOneDOF ()

Activate 1-DOF per node option.

• void setSides ()

Activate Sides option.

• void setSymmetric ()

Set matrix as a symmetric one.

• void DiagPrescribe (PETScVect< T\_> &b, const PETScVect< T\_> &u)

Impose by a diagonal method an essential boundary condition using the Mesh instance provided by the constructor.

void setSize (size\_t size)

*Set size of matrix (case where it's a square matrix).* 

• void setSize (size\_t nr, size\_t nc)

Set size (number of rows) of matrix.

• void getRange (int istart, int iend)

Return the range of matrix rows owned by this processor.

• void setGraph (const vector< std::pair< size\_t, size\_t >> &I, int opt=1)

Set graph of matrix by giving a vector of its nonzero entries.

• T\_ operator() (size\_t i, size\_t j) const

Operator ()

size\_t getNbRows () const

Return number of matrix rows.

• size\_t getNbColumns () const

Return number of matrix columns.

• size\_t getLength () const

Return length of matrix.

• void getMesh (Mesh &mesh)

Get Mesh instance whose reference will be stored in current instance of PETScMatrix.

• void Mult (const PETScVect< T\_> &x, PETScVect< T\_> &y) const

Multiply matrix by vector and save in another one.

void MultAdd (const PETScVect< T<sub>-</sub> > &x, PETScVect< T<sub>-</sub> > &y) const

Multiply matrix by vector x and add to y.

• void MultAdd (T\_a, const PETScVect< T\_> &x, PETScVect< T\_> &y) const

Multiply matrix by vector  $\mathbf{a} * \mathbf{x}$  and add to  $\mathbf{y}$ .

• void set (size\_t i, size\_t j, const T\_ &a)

Assign a value to an entry of the matrix.

• void add (size\_t i, size\_t j, const T\_ &a)

Add a value to an entry of the matrix.

• void set (vector< int > &ir, vector< int > &ic, vector< T\_ > &val)

Assign values to a portion of the matrix.

• void operator= (const T<sub>-</sub> &a)

Operator =

• void clear ()

Set all matrix entries to zero.

• void Laplace1D (real\_t h, bool mpi=false)

Sets the matrix as the one for the Laplace equation in 1-D.

• void Laplace2D (size\_t nx, size\_t ny, bool mpi=false)

*Sets the matrix as the one for the Laplace equation in 2-D.* 

• int solve (PETScVect< T<sub>-</sub> > &b)

Solve the linear system of equations.

• int solve (const PETScVect< T $_->$  &b, PETScVect< T $_->$  &x)

Solve the linear system of equations.

• void setSolver (string solver, string prec, real\_t toler=1.e-12, int max\_it=1000)

Choose solver and preconditioner for an iterative procedure.

• T<sub>-</sub> \* get () const

Return C-Array.

• T\_get (size\_t i, size\_t j) const

Return entry (i, j) of matrix if this one is stored, 0 otherwise.

• operator Mat () const

Casting operator.

• PetscReal getNorm1 () const

Get 1-norm of matrix.

• PetscReal getFrobeniusNorm () const

Get Frobenius norm of matrix.

PetscReal getNormMax () const

Get infinity norm of matrix.

• void Assembly (const Element &el, T\_\*a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

void setAssembly ()

Matrix assembly.

void setMPI ()

Activate MPI option.

## 7.80.1 Detailed Description

```
template < class T_> class OFELI::PETScMatrix < T_>
```

To handle matrices in sparse storage format using the Petsc library.

Warning

This class is available only when OFELI has been installed with Petsc.

**Template Parameters** 

```
T \leftarrow \bigcup_{-\leftarrow} Data type (double, float, complex<double>, ...)
```

## 7.80.2 Constructor & Destructor Documentation

## PETScMatrix ( )

Default constructor.

Initialize a zero-dimension matrix

## PETScMatrix ( size\_t nr, size\_t nc )

Constructor that initializes current instance as a dense matrix. Normally, for a dense matrix this is not the right class.

### **Parameters**

in	nr	Number of matrix rows.
in	пс	Number of matrix columns.

## PETScMatrix ( size\_t size )

Constructor that initializes current instance as a dense matrix. Normally, for a dense matrix this is not the right class.

### **Parameters**

	in	size	Number of matrix rows (and columns).
--	----	------	--------------------------------------

## PETScMatrix ( Mesh & mesh, size\_t dof = 0 )

Constructor using a Mesh instance.

#### **Parameters**

in	mesh	Mesh instance from which matrix graph is extracted.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

## PETScMatrix ( const vector < std::pair < size\_t, size\_t > > & I, int opt = 1)

Constructor for a square matrix using non zero row and column indices.

in	I	Vector containing pairs of row and column indices
in	opt	Flag indicating if vectors I is cleaned and ordered (opt=1) or not (opt=0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

## 7.80.3 Member Function Documentation

void setAIJ ( const vector< int > & nnz )

## Parameters

in	nnz	
----	-----	--

void setAIJ\_MPI ( const vector< int > & diag\_nnz, const vector< int > & off\_nnz )

#### **Parameters**

in	diag_nnz	
in	off_nnz	

## void setMesh ( Mesh & mesh, size\_t dof = 0 )

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

#### **Parameters**

in	mesh	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

## void setPartition ( Partition & p )

Set a Partition instance in the class.

This member function is to be used when parallel computing is considered.

## Parameters

in	p	Reference to Partition instance

## void setRank ( int np, int r = 0 )

Set number of processors and processor rank.

in	пр	Total number of processors.	
in	r	Rank of current processor [Default: 0	

### Warning

If this member function is not called, only one processor is used and then sequential computing is involved.

## void DiagPrescribe ( PETScVect< T $_->$ & b, const PETScVect< T $_->$ & u)

Impose by a diagonal method an essential boundary condition using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

### **Parameters**

in,out	b	PETScVect instance that contains right-hand side.	
in	и	PETScVect instance that conatins imposed valued at DOFs where they are to be imposed.	

## void setSize ( size\_t size )

Set size of matrix (case where it's a square matrix).

#### **Parameters**

in	size	Number of rows and columns.
----	------	-----------------------------

### void setSize ( size\_t nr, size\_t nc )

Set size (number of rows) of matrix.

### Parameters

in	nr	Number of rows
in	пс	Number of columns

## void getRange ( int istart, int iend )

Return the range of matrix rows owned by this processor.

out	istart	Index of the first local row
out	iend	Index of the last local row

## 7.80. PETSCMATRIX < T\_ > CLASS TEMPLATE REFERENCER 7. CLASS DOCUMENTATION

## void setGraph ( const vector < std::pair < size\_t, size\_t > > & I, int opt = 1)

Set graph of matrix by giving a vector of its nonzero entries.

### Parameters

in	I	Vector containing pairs of row and column indices
in	opt	Flag indicating if vector I is cleaned and ordered (opt=1: default) or not (opt=0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

## $T_-$ operator() ( size\_t i, size\_t j ) const

## Operator ()

### **Parameters**

in	i	Row index
in	j	Column index

## size\_t getLength ( ) const

Return length of matrix.

The length is the total number of stored elements in the matrix

## void Mult ( const PETScVect< $T_- > \& x$ , PETScVect< $T_- > \& y$ ) const

Multiply matrix by vector and save in another one.

#### **Parameters**

in	x	Vector to multiply by matrix	
out	y	Vector that contains on output the result.	

## void MultAdd ( const PETScVect< T $_->$ & x, PETScVect< T $_->$ & y ) const

Multiply matrix by vector x and add to y.

### Parameters

in	x	Vector to multiply by matrix	
out	y	Vector to add to the result. y contains on output the result.	

## void MultAdd ( $T_-a_r$ const PETScVect $< T_- > \& x_r$ PETScVect $< T_- > \& y$ ) const

Multiply matrix by vector a\*x and add to y.

## CHAPTER 7. CLASS DOCUMENTENTICENTSCMATRIX $< T_{-} > CLASS$ TEMPLATE REFERENCE

### Parameters

in	а	Constant to multiply by matrix	
in	x	Vector to multiply by matrix	
out	y	Vector to add to the result. y contains on output the result.	

## void set ( size\_t i, size\_t j, const T\_ & a )

Assign a value to an entry of the matrix.

### Parameters

in	i	Row index
in	j	Column index
in	а	Value to assign to a(i,j)

## void add ( size\_t i, size\_t j, const T\_ & a )

Add a value to an entry of the matrix.

#### Parameters

in	i	Row index
in	j	Column index
in	а	Constant value to add to a(i,j)

## void set ( vector< int > & ir, vector< int > & ic, vector< $T_-$ > & val)

Assign values to a portion of the matrix.

## Parameters

in	ir	Vector of row indexes to assign (instance of class vector)
in	ic	Vector of column indexes to assign (instance of class vector)
in	val	Vector of values to assign (instance of class vector)

## void operator= ( const $T_- \& a$ )

## Operator =

Assign constant value a to matrix diagonal entries

## void Laplace1D ( real\_t h, bool mpi = false )

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from  $P_1$  finite element discretization of the classical elliptic operator -u'' = f with homogeneous Dirichlet boundary conditions

#### Remarks

This function is available for real valued matrices only.

### **Parameters**

in	h	Mesh size (assumed constant)
in	трі	true if MPI is used for parallel computing, false if not (sequential), [Default: false]

## void Laplace2D ( size\_t nx, size\_t ny, bool mpi = false )

Sets the matrix as the one for the Laplace equation in 2-D.

The matrix is initialized as the one resulting from  $P_1$  finite element discretization of the classical elliptic operator -Delta u = f with homogeneous Dirichlet boundary conditions

## Remarks

This function is available for real valued matrices only.

#### **Parameters**

in	пх	Number of unknowns in the x-direction
in	ny	Number of unknowns in the y-direction
in	трі	true if MPI is used for parallel computing, false if not (sequential), [Default: false]

## int solve ( PETScVect< T $_->$ & b )

Solve the linear system of equations.

The default parameters are: the Conjugate Gradient method and the Jacobi method for preconditioner. To change these values, call function setSolver before this function

#### **Parameters**

in,out	b	Vector that contains right-hand side on input and solution on output
--------	---	--

### Returns

Number of actual performed iterations

## int solve ( const PETScVect< $T_- > \& b$ , PETScVect< $T_- > \& x$ )

Solve the linear system of equations.

The default parameters are: the Conjugate Gradient method and the Jacobi method for preconditioner. To change these values, call function setSolver before this function

## CHAPTER 7. CLASS DOCUMENTENTICENTSCMATRIX $< T_{-} > CLASS$ TEMPLATE REFERENCE

## Parameters

in	b	Vector that contains right-hand side
out	х	Vector that contains the obtained solution

## Returns

Number of actual performed iterations

void setSolver ( string solver, string prec, real\_t toler = 1.e-12, int max.it = 1000 )

Choose solver and preconditioner for an iterative procedure.

#### **Parameters**

in

solver

Option to choose iterative solver among the macros (see PETSc documentation for more details):

- KSPRICHARDSON: The Richardson iterative method (Default damping parameter is 1.0)
- KSPCHEBYSHEV: The Chebyshev iterative method
- KSPCG: The conjugate gradient method [Default]
- KSPCGNE: The CG method for normal equations (without explicitly forming the product A^TA
- KSPGMRES: The GMRES iterative method (see A Generalized Minimal Residual Algorithm for Solving Nonsymmetric Linear Systems. Y. Saad and M. H. Schultz, SIAM J. Sci. Stat. Comput. Vol. 7, No. 3, July 1986, pp. 856-869)
- KSPFGMRES: The Flexible GMRES method (with restart)
- KSPLGMRES: The 'augmented' standard GMRES method where the subspace uses approximations to the error from previous restart cycles
- KSPTCQMR: A variant of QMR (quasi minimal residual) developed by Tony Chan
- KSPBCGS: The BiCGStab (Stabilized version of BiConjugate Gradient Squared) method
- KSPIBCGS: The IBiCGStab (Improved Stabilized version of BiConjugate Gradient Squared) method in an alternative form to have only a single global reduction operation instead of the usual 3 (or 4)
- KSPFBCGS: The flexible BiCGStab method.
- KSPCGS: The CGS (Conjugate Gradient Squared) method
- KSPTFQMR: A transpose free QMR (quasi minimal residual)
- KSPCR: The conjugate residuals method
- KSPLSQR: The LSQR method
- KSPBICG: The Biconjugate gradient method (similar to running the conjugate gradient on the normal equations)
- KSPMINRES: The MINRES (Minimum Residual) method
- KSPSYMMLQ: The SYMMLQ method
- KSPGCR: The Generalized Conjugate Residual method

### Parameters

in	prec	Option to choose preconditioner in an enumerated variable	
		PCJACOBI: [Default] Jacobi (i.e. diagonal scaling) preconditioning	
		<ul> <li>PCBJACOBI: Block Jacobi preconditioning, each block is (approximately) solved with its own KSP object</li> </ul>	
		PCSOR: (S)SOR (successive over relaxation, Gauss-Seidel) preconditioning	
		<ul> <li>PCEISENSTAT: An implementation of SSOR (symmetric successive over relaxation, symmetric Gauss-Seidel) preconditioning that incorporates Eisenstat's trick to reduce the amount of computation needed</li> </ul>	
		PCICC: Incomplete Cholesky factorization preconditioners	
		PCILU: Incomplete factorization preconditioners	
		PCASM: Use the (restricted) additive Schwarz method, each block is (approximately) solved with its own KSP object	
		PCLU: Uses a direct solver, based on LU factorization, as a preconditioner	
		PCCHOLESKY: Uses a direct solver, based on Cholesky factorization, as a preconditioner	
in	toler	Tolerance for convergence [Default: 1.e-12]	
in	max← _it	Maximum number of allowed iterations [Default: 1000]	

## $T_-*$ get ( ) const

Return C-Array.

Non zero terms of matrix is stored row by row.

## $T_{-}$ get ( size\_t i, size\_t j ) const

Return entry (i,j) of matrix if this one is stored, 0 otherwise.

### **Parameters**

in	i	Row index
in	j	Column index

## operator Mat ( ) const

Casting operator.

This member functions enables casting an instance of class PETScMatrix into the Petsc matrix type Mat. This is useful when one wants to usr any Petsc function that is not available in the wrapper (class PETScWrapper) or PETScMatrix.

## void Assembly (const Element & el, $T_-*a$ )

Assembly of element matrix into global matrix.

#### **Parameters**

in	el	Reference to element instance
in	а	Element matrix as a C-array

## void Assembly (const Side & sd, $T_-*a$ )

Assembly of side matrix into global matrix.

## Parameters

in	sd	Reference to side instance
in	а	Side matrix as a C-array

## void setAssembly ( )

Matrix assembly.

This function assembles matrix (begins and ends)

## 7.81 PETScVect< T\_> Class Template Reference

To handle general purpose vectors using Petsc.

## **Public Member Functions**

• PETScVect ()

Default Constructor. Initialize a zero-length vector.

PETScVect (size\_t n)

Constructor setting vector size.

• PETScVect (size\_t nx, size\_t ny)

Constructor of a 2-D index vector.

PETScVect (size\_t nx, size\_t ny, size\_t nz)

Constructor of a 3-D index vector.

• PETScVect (size\_t n, T\_ \*x)

Create an instance of class PETScVect as an image of a C/C++ array.

• PETScVect (MPI\_Comm comm, size\_t n)

Constructor of a MPI vector using its global size.

• PETScVect (Mesh &m, int nb\_dof=0, int dof\_type=NODE\_FIELD)

Constructor with a mesh instance.

• PETScVect (Mesh &m, string name, real\_t t=0.0, int nb\_dof=0, int dof\_type=NODE\_FIELD)

Constructor with a mesh instance giving name and time for vector.

• PETScVect (const PETScVect< T\_> &v, const PETScVect< T\_> &bc)

Constructor using boundary conditions.

• PETScVect (const PETScVect < T\_ > &v, size\_t nb\_dof, size\_t first\_dof)

Constructor to select some components of a given vector.

• PETScVect (const PETScVect< T<sub>-</sub> > &v)

Copy constructor.

• PETScVect (const PETScVect< T<sub>-</sub> > &v, size\_t n)

Constructor to select one component from a given 2 or 3-component vector.

• PETScVect (size\_t d, const PETScVect< T\_> &v, const string &name="")

Constructor that extracts some degrees of freedom (components) from given instance of PETScVect.

• ∼PETScVect ()

Destructor.

• void set (const T<sub>-</sub> \*v, size<sub>-</sub>t n)

Initialize vector with a c-array.

• void setMPI (MPI\_Comm comm, size\_t n, size\_t N)

Initialize a local vector using MPI.

• void select (const PETScVect< T\_> &v, size\_t nb\_dof=0, size\_t first\_dof=1)

Initialize vector with another PETScVect instance.

• void set (const string &exp, size\_t dof=1)

Initialize vector with an algebraic expression.

void set (const Mesh &ms, const string &exp, size\_t dof=1)

Initialize vector with an algebraic expression with providing mesh data.

• void set (const PETScVect< real\_t > &x, const string &exp)

Initialize vector with an algebraic expression.

• void setMesh (Mesh &m, int nb\_dof=0, int dof\_type=NODE\_FIELD)

Define mesh class to size vector.

• size\_t size () const

Return vector (global) size.

• PetscInt getLocalSize () const

Return vector local size.

• void setSize (size\_t nx, size\_t ny=1, size\_t nz=1)

Set vector size (for 1-D, 2-D or 3-D cases)

void setDOFType (int dof\_type)

Set DOF type of vector.

• size\_t getNbDOF () const

Return vector number of degrees of freedom.

• size\_t getNb () const

Return vector number of entities (nodes, elements or sides)

• Mesh & getMesh () const

Return Mesh instance.

• bool isWithMesh () const

Return true if vector contains a Mesh pointer, false if not.

- int getDOFType () const
- void setTime (real\_t t)

Set time value for vector.

• real\_t getTime () const

Get time value for vector.

Get time value for vector

• void setName (string name)

Set name of vector.

• string getName () const

Get name of vector.

• PetscScalar getNorm1 () const

Calculate 1-norm of vector.

• PetscScalar getNorm2 () const

Calculate 2-norm (Euclidean norm) of vector.

• PetscScalar getWNorm1 () const

Calculate weighted 1-norm of vector The wighted 1-norm is the 1-Norm of the vector divided by its size.

• PetscScalar getWNorm2 () const

 ${\it Calculate\ weighted\ 2-norm\ of\ vector.}$ 

• PetscScalar getNormMax () const

Calculate Max-norm (Infinite norm) of vector.

• T<sub>-</sub> getMin () const

Calculate Min value of vector entries.

• T<sub>-</sub> getMax () const

Calculate Max value of vector entries.

• size\_t getNx () const

Return number of grid points in the x-direction if grid indexing is set.

size\_t getNy () const

Return number of grid points in the y-direction if grid indexing is set.

• size\_t getNz () const

Return number of grid points in the z-direction if grid indexing is set.

void setNodeBC (Mesh &m, int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector with given code.

• void setNodeBC (Mesh &m, int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

void setNodeBC (int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector with given code.

• void setNodeBC (int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code

void removeBC (const Mesh &ms, const PETScVect< T<sub>-</sub> > &v, int dof=0)

Remove boundary conditions.

• void removeBC (const Mesh &ms, const Vect< T\_> &v, int dof=0)

Remove boundary conditions.

• void removeBC (const PETScVect< T\_> &v, int dof=0)

Remove boundary conditions.

void removeBC (const Vect< T<sub>-</sub> > &v, int dof=0)

Remove boundary conditions.

• void transferBC (const PETScVect< T\_> &bc, int dof=0)

Transfer boundary conditions to the vector.

void insertBC (Mesh &m, const PETScVect< T<sub>-</sub> > &v, const PETScVect< T<sub>-</sub> > &bc, int dof=0)

Insert boundary conditions.

• void insertBC (Mesh &m, const PETScVect< T\_> &v, int dof=0)

Insert boundary conditions.

 $\bullet \ \ void \ insertBC \ (const \ PETScVect < T_- > \&v, \ const \ PETScVect < T_- > \&bc, \ int \ dof = 0)$ 

Insert boundary conditions.

• void insertBC (const PETScVect< T\_> &v, int dof=0)

Insert boundary conditions.

• void Assembly (const Element &el, const T<sub>-</sub> \*b)

Assembly of element vector (as C-array) into Vect instance.

• void Assembly (const Side &sd, T\_\*b)

Assembly of side vector (as C-array) into PETScVect instance.

• void getGradient (PETScVect< T\_> &v)

*Evaluate the discrete Gradient vector of the current vector.* 

void getGradient (PETScVect< Point< T<sub>-</sub> >> &v)

Evaluate the discrete Gradient vector of the current vector.

• void getCurl (PETScVect< T<sub>-</sub> > &v)

Evaluate the discrete curl vector of the current vector.

void getCurl (PETScVect< Point< T<sub>-</sub> >> &v)

Evaluate the discrete curl vector of the current vector.

• void getSCurl (PETScVect< T<sub>-</sub> > &v)

Evaluate the discrete scalar curl in 2-D of the current vector.

• void getDivergence (PETScVect< T<sub>-</sub> > &v)

Evaluate the discrete Divergence of the current vector.

• real\_t getAverage (const Element &el, int type) const

Return average value of vector in a given element.

• void save (string file, int opt)

Save vector in a file according to a given format.

• PETScVect< T\_> & MultAdd (const PETScVect< T\_> &x, const T\_ &a)

Multiply by a constant then add to a vector.

void Axpy (T<sub>-</sub> a, const PETScVect< T<sub>-</sub> > &x)

Add to vector the product of a vector by a scalar.

• void set (size\_t i, T\_ a)

Assign a value to an entry for a 1-D vector.

• void set (size\_t i, size\_t j, T\_ a)

Assign a value to an entry for a 2-D vector.

• void set (size\_t i, size\_t j, size\_t k, T\_ a)

Assign a value to an entry for a 3-D vector.

• void add (size\_t i, T\_ a)

Add a value to an entry for a 1-index vector.

• void add (size\_t i, size\_t j, T\_a)

Add a value to an entry for a 2-index vector.

• void add (size\_t i, size\_t j, size\_t k, T\_ a)

Assign a value to an entry for a 3-index vector.

• void clear ()

Set all vector entries to zero.

• T\_operator[] (size\_t i) const

Operator []

• T\_operator() (size\_t i) const

```
Operator ()
• T_ operator() (size_t i, size_t j) const
      Operator () with 2-D indexing (Case of a grid vector)
• T_ operator() (size_t i, size_t j, size_t k) const
      Operator () with 3-D indexing (Case of a grid vector)
• PETScVect< T_> & operator= (const PETScVect< T_> &v)
      Operator = between vectors.
• PETScVect< T_> & operator= (const T_ &a)
      Operator =
• PETScVect< T_> & operator+= (const PETScVect< T_> &v)
      Operator +=
• PETScVect< T_> & operator+= (const T_ &a)
      Operator +=
• PETScVect< T_-> & operator== (const PETScVect< T_-> &v)
      Operator -=
• PETScVect< T_> & operator== (const T_ &a)
      Operator -=
• PETScVect< T_> & operator*= (const T_ &a)
      Operator *=
• PETScVect< T_> & operator/= (const T_ &a)
      Operator /=

    const Mesh & getMeshPtr () const

      Return reference to Mesh instance.
• T_ operator, (const PETScVect< T_ > &v) const
      Return Dot (scalar) product of two vectors.
• operator Vec () const
      Casting operator.

    void setAssembly ()

      Vector assembly.

    void Insert (const vector< int > &ii, const vector< Point< T<sub>-</sub> >> &v)

      Insert values into certain locations of the vector.
• void Add (const vector < int > &ii, const vector < T_ > &v)
      Add values into certain locations of the vector.
```

## 7.81.1 Detailed Description

```
template < class \ T_{-} > \\ class \ OFELI::PETScVect < T_{-} >
```

To handle general purpose vectors using Petsc.

This template class enables considering vectors of various data types. Operators =, [] and () are overloaded so that one can write for instance:

```
PETScVect<double> u(10), v(10);
v = -1.0;
u = v;
u.set(3,-2.0);
```

to set vector  $\mathbf{v}$  entries to -1, copy vector  $\mathbf{v}$  into vector  $\mathbf{u}$  and assign third entry of  $\mathbf{v}$  to -2. Note that entries of  $\mathbf{v}$  are here  $\mathbf{v}(1)$ ,  $\mathbf{v}(2)$ , ...,  $\mathbf{v}(10)$ , *i.e.* vector entries start at index 1.

### Remarks

A PETScVect instance can be 1-D, 2-D or 3-D, i.e. one can have 1, 2 or 3 indices. This is set while the vector is constructed. This can be helpful for instance in the case of a structured grid.

## Warning

This class is available only when OFELI has been installed with Petsc In this case, only vectors used for building and solving linear systems need to be instances of PETScVect.

## **Template Parameters**

$T \leftarrow$	Data type (double, int, complex <double>,)</double>
_←	

## 7.81.2 Constructor & Destructor Documentation

## PETScVect ( size\_t n )

Constructor setting vector size.

#### **Parameters**

in <i>n</i> Size	of vector
------------------	-----------

## PETScVect ( size\_t nx, size\_t ny )

Constructor of a 2-D index vector.

This constructor can be used for instance for a 2-D grid vector

#### **Parameters**

in	nx	Size for the first index
in	ny	Size for the second index

### Remarks

The size of resulting vector is nx\*ny

## PETScVect ( size\_t nx, size\_t ny, size\_t nz )

Constructor of a 3-D index vector.

This constructor can be used for instance for a 3-D grid vector

in	nv	Size for the first index
111	rix	Size for the first maex

## 7.81. PETSCVECT< T $_->$ CLASS TEMPLATE REFERENCETER 7. CLASS DOCUMENTATION

### Parameters

in	пу	Size for the second index
in	nz	Size for the third index

### Remarks

The size of resulting vector is nx\*ny\*nz

## PETScVect ( size\_t n, $T_- * x$ )

Create an instance of class PETScVect as an image of a C/C++ array.

### Parameters

in	n	Dimension of vector to construct
in	x	C-array to copy

## PETScVect ( MPI\_Comm comm, size\_t n )

Constructor of a MPI vector using its global size.

## Parameters

in	comm	Communicator which represents all the processs that PETSc knows about
in	n	Global size of vector

## PETScVect ( Mesh & m, int $nb\_dof = 0$ , int $dof\_type = NODE\_FIELD$ )

Constructor with a mesh instance.

### Parameters

i	n.	m	Mesh instance
i	n.	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0 (default value) the constructor picks this number from the Mesh instance
i	.n	dof_type	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD [Default: NODE_FIELD]

# PETScVect ( Mesh & m, string name, real\_t t = 0.0, int $nb\_dof = 0$ , int $dof\_type = NODE\_FIELD$ )

Constructor with a mesh instance giving name and time for vector.

in	m	Mesh instance

#### **Parameters**

in	name	Name of the vector
in	t	Time value for the vector
in	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	dof_type	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD [Default: NODE_FIELD]

## PETScVect ( const PETScVect < T $_->$ & v, const PETScVect < T $_->$ & bc)

Constructor using boundary conditions.

Boundary condition values contained in bc are reported to vector v

### **Parameters**

in	v	PETScVect instance to update
in	bc	PETScVect instance containing imposed valued at desired DOF

## PETScVect ( const PETScVect $< T_{-} > & v$ , size\_t nb\_dof, size\_t first\_dof )

Constructor to select some components of a given vector.

### **Parameters**

in	v	PETScVect instance to extract from
in	nb_dof	Number of DOF to extract
in	first_dof	First DOF to extract For instance, a choice first_dof=2 and nb_dof=1 means that the second DOF of each node is copied in the vector

## PETScVect ( const PETScVect $< T_- > & v$ , size\_t n)

Constructor to select one component from a given 2 or 3-component vector.

#### **Parameters**

in	v	PETScVect instance to extract from
in	n	Component to extract (must be $> 1$ and $< 4$ or).

## PETScVect ( size\_t d, const PETScVect $< T_- > & v$ , const string & name = " ")

Constructor that extracts some degrees of freedom (components) from given instance of PETSc⊷ Vect.

This constructor enables constructing a subvector of a given PETScVect instance. It selects a given list of degrees of freedom and put it according to a given order in the instance to construct.

### Parameters

in	d	Integer number giving the list of degrees of freedom. This number is made of n digits where n is the number of degrees of freedom. Let us give an example: Assume that the instance v has 3 DOF by entity (node, element or side). The choice d=201 means that the constructed instance has 2 DOF where the first DOF is the third one of v, and the second DOF is the first one of f v. Consequently, no digit can be larger than the number of DOF the constructed instance. In this example, a choice d=103 would produce an error message.
in	v	PETScVect instance from which extraction is performed.
in	name	Name to assign to vector instance [Default: ""].

## Warning

Don't give zeros as first digits for the argument d. The number is in this case interpreted as octal !!

## 7.81.3 Member Function Documentation

void set ( const  $T_- * v$ , size\_t n )

Initialize vector with a c-array.

### Parameters

in	v	c-array (pointer) to initialize PETScVect
in	n	size of array

## void setMPI ( MPI\_Comm comm, size\_t n, size\_t N )

Initialize a local vector using MPI.

### Parameters

in	comm	
in	n	local size of vector
in	N	global size of vector

## void select ( const PETScVect< T $_->$ & v, size\_t $nb\_dof = 0$ , size\_t $first\_dof = 1$ )

Initialize vector with another PETScVect instance.

in	v	PETScVect instance to extract from
in	nb_dof	Number of DOF per node, element or side (By default, 0: Number of degrees of freedom extracted from the Mesh instance)
in	first_dof	First DOF to extract (Default: 1) For instance, a choice first_dof=2 and nb_dof=1 means that the second DOF of each node is copied in the vector

## void set ( const string & exp, size\_t dof = 1 )

Initialize vector with an algebraic expression.

## Parameters

in	ехр	Regular algebraic expression that defines a function of x, y and z which are coordinates of nodes.
in	dof	Degree of freedom to which the value is assigned [Default: 1]

## void set ( const Mesh & ms, const string & exp, size\_t dof = 1 )

Initialize vector with an algebraic expression with providing mesh data.

### Parameters

in	ms	Mesh instance
in	ехр	Regular algebraic expression that defines a function of $x$ , $y$ and $z$ which are coordinates of nodes.
in	dof	Degree of freedom to which the value is assigned [Default: 1]

## void set ( const PETScVect< real\_t > & x, const string & exp )

Initialize vector with an algebraic expression.

## Parameters

in	x	PETScVect instance that contains coordinates of points
in	ехр	Regular algebraic expression that defines a function of x and i which are coordinates of nodes and indices starting from 1.

## void setMesh ( Mesh & m, int nb\_dof = 0, int dof\_type = NODE\_FIELD )

Define mesh class to size vector.

### Parameters

in	m	Mesh instance
in	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0
		the constructor picks this number from the Mesh instance
in	dof_type	Parameter to precise the type of degrees of freedom. To be chosen among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD, EDGE_FIELD [Default: NODE_FIELD]

## PetscInt getLocalSize ( ) const

Return vector local size.

Local size is the size on the current processor

## void setSize ( size\_t nx, size\_t ny = 1, size\_t nz = 1 )

Set vector size (for 1-D, 2-D or 3-D cases)

This function allocates memory for the vector but does not initialize its components

### **Parameters**

in	nx	Number of grid points in x-direction
in	ny	Number of grid points in y-direction [Default: 1]
in	nz	Number of grid points in z-direction [Default: 1]

## void setDOFType ( int dof\_type )

Set DOF type of vector.

The DOF type combined with number of DOF per component enable determining the size of vector

#### **Parameters**

in	dof_type	Type of degrees of freedom. Value to be chosen among the enumerated
		values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD

## bool isWithMesh ( ) const

Return true if vector contains a Mesh pointer, false if not.

A PETScVect instance can be constructed using mesh information

## int getDOFType ( ) const

Return DOF type of vector

#### Returns

dof\_type Type of degrees of freedom. Value among the enumerated values: NODE\_FIELD, ELEMENT\_FIELD, SIDE\_FIELD or EDGE\_FIELD

## PetscScalar getWNorm2 ( ) const

Calculate weighted 2-norm of vector.

The weighted 2-norm is the 2-Norm of the vector divided by the square root of its size

## void setNodeBC ( Mesh & m, int code, T\_val, size\_t dof = 1 )

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

-			
	in	m	Instance of mesh

## CHAPTER 7. CLASS DOCUMENTA'INONPETSCVECT < T\_ > CLASS TEMPLATE REFERENCE

#### **Parameters**

in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

## void setNodeBC ( Mesh & m, int code, const string & exp, size\_t dof = 1 )

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

## Parameters

in	m	Instance of mesh
in	code	Code for which nodes will be assigned prescribed value
in	ехр	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

## void setNodeBC ( int code, T\_val, size\_t dof = 1 )

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

## Parameters

in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe
in	dof	Degree of Freedom for which the value is assigned [Default: 1]

## void setNodeBC ( int code, const string & exp, size\_t dof = 1 )

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

### Parameters

in	code	Code for which nodes will be assigned prescribed value
in	ехр	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [Default: 1]

## void removeBC (const Mesh & ms, const PETScVect< T $_->$ & v, int dof = 0)

Remove boundary conditions.

## 7.81. PETSCVECT < T\_ > CLASS TEMPLATE REFE**RENCE**TER 7. CLASS DOCUMENTATION

This member function copies to current vector a vector where only non imposed DOF are retained.

#### **Parameters**

in	ms	Mesh instance
in	v	Vector (PETScVect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom

## void removeBC (const Mesh & ms, const Vect< $T_- > \& v$ , int dof = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

#### **Parameters**

in	ms	Mesh instance
in	v	Vector (Vect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom

## void removeBC ( const PETScVect< T $_->$ & v, int dof = 0 )

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

### Parameters

in	v	Vector (PETScVect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom.

## Remarks

This function is to be used only when the PETScVect instance was constructed by using the Mesh instance

## void removeBC ( const Vect< $T_-$ > & v, int dof = 0 )

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

### Parameters

in	v	Vector (Vect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom.

## Remarks

This function is to be used only when the PETScVect instance was constructed by using the Mesh instance

## void transferBC ( const PETScVect< T $_->$ & bc, int dof = 0 )

Transfer boundary conditions to the vector.

#### **Parameters**

in	bc	PETScVect instance from which imposed degrees of freedom are copied to current
		instance
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom.

# void insertBC ( Mesh & m, const PETScVect< $T_-$ > & v, const PETScVect< $T_-$ > & bc, int dof = 0 )

Insert boundary conditions.

## Parameters

in	m	Mesh instance.
in	υ	PETScVect instance from which free degrees of freedom are copied to current instance.
in	bc	PETScVect instance from which imposed degrees of freedom are copied to current instance.
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC ( Mesh & m, const PETScVect< $T_- > \& v$ , int dof = 0 )

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

in	m	Mesh instance.

## 7.81. PETSCVECT < T $_->$ CLASS TEMPLATE REFERENCETER 7. CLASS DOCUMENTATION

### Parameters

in	v	PETScVect instance from which free degrees of freedom are copied to current
		instance.
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC ( const PETScVect< T $_->$ & v, const PETScVect< T $_->$ & bc, int dof = 0)

Insert boundary conditions.

## Parameters

in	v	PETScVect instance from which free degrees of freedom are copied to current
		instance.
in	bc	PETScVect instance from which imposed degrees of freedom are copied to current
		instance.
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC ( const PETScVect< $T_- > \& v$ , int dof = 0)

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

#### **Parameters**

in	v	PETScVect instance from which free degrees of freedom are copied to current instance.	
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side	

## void Assembly (const Element & el, const $T_- * b$ )

Assembly of element vector (as C-array) into Vect instance.

## Parameters

in	el	Reference to element instance
in	b	Local vector to assemble (C-Array)

## void Assembly (const Side & sd, $T_-*b$ )

Assembly of side vector (as C-array) into PETScVect instance.

#### **Parameters**

in	sd	Reference to side instance
in	b	Local vector to assemble (C-Array)

## void getGradient ( PETScVect< T $_->$ & v )

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a PETScVect instance This function handles node vectors assuming  $P_1$  approximation The gradient is then a constant vector for each element.

#### **Parameters**

in	v	Vect instance that contains the gradient, where $v(n,1)$ , $v(n,2)$ and $v(n,3)$ are	
		respectively the x and y and z derivatives at element n.	

## void getGradient ( PETScVect< Point< $T_- >> \& v$ )

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a PETScVect instance This function handles node vectors assuming P<sub>1</sub> approximation The gradient is then a constant vector for each element.

### **Parameters**

in	v	Vect instance that contains the gradient, where $v(n,1) \cdot x$ , $v(n,2) \cdot y$ and $v(n,3)$	
		are respectively the x and y and z derivatives at element n.	

## void getCurl ( PETScVect< T $_->$ & v )

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a PETScVect instance This function handles node vectors assuming  $P_1$  approximation The curl is then a constant vector for each element.

### Parameters

in	v	Vect instance that contains the curl, where $v(n,1)$ , $v(n,2)$ and $v(n,3)$ are
		respectively the x and y and z curl components at element n.

## void getCurl ( PETScVect< Point< $T_- >$ & v )

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a PETScVect instance This function handles node vectors assuming P<sub>1</sub> approximation The curl is then a constant vector for each element.

in	v	Vect instance that contains the curl, where $v(n,1) \cdot x$ , $v(n,2) \cdot y$ and $v(n,3) \cdot z$ are	
		respectively the x and y and z curl components at element n.	

## void getSCurl ( PETScVect< T $_->$ & v )

Evaluate the discrete scalar curl in 2-D of the current vector.

The resulting curl is stored in a PETScVect instance This function handles node vectors assuming P<sub>1</sub> approximation The curl is then a constant vector for each element.

#### **Parameters**

	in		Vect instance that contains the scalar curl.
1	ΙΠ	U	vect instance that contains the scalar curl.

## void getDivergence ( PETScVect< T $_->$ & v )

Evaluate the discrete Divergence of the current vector.

The resulting divergence is stored in a PETScVect instance This function handles node vectors assuming P<sub>1</sub> approximation The divergence is then a constant vector for each element.

### **Parameters**

	in	v	Vect instance that contains the divergence.	
--	----	---	---	--

### real\_t getAverage ( const Element & el, int type ) const

Return average value of vector in a given element.

### **Parameters**

in	el	Element instance	
in	type	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4 TETRA4, HEXA8	

## void save ( string file, int opt )

Save vector in a file according to a given format.

## Parameters

in	file	Output file where to save the vector
in	opt	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT and VTK

## PETScVect<T $_->$ & MultAdd ( const PETScVect< T $_->$ & x, const T $_-$ & a)

Multiply by a constant then add to a vector.

in	х	PETScVect instance to add
in	а	Constant to multiply before adding

## void Axpy ( $T_-a$ , const PETScVect< $T_- > \& x$ )

Add to vector the product of a vector by a scalar.

#### Parameters

in	а	Scalar to premultiply
in	x	Vect instance by which a is multiplied. The result is added to current instance

## void set ( size\_t i, T\_ a )

Assign a value to an entry for a 1-D vector.

#### Parameters

in	i	Rank index in vector (starts at 1)
in	а	Value to assign

## void set ( size\_t i, size\_t j, T\_ a )

Assign a value to an entry for a 2-D vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	а	Value to assign

## void set ( size\_t i, size\_t j, size\_t k, T\_a)

Assign a value to an entry for a 3-D vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	k	Third index in vector (starts at 1)
in	а	Value to assign

## void add ( size\_t i, T\_a )

Add a value to an entry for a 1-index vector.

1			
	in	i	Rank index in vector (starts at 1)

## 7.81. PETSCVECT< $T_- >$ CLASS TEMPLATE REFE**RENCE**TER 7. CLASS DOCUMENTATION

## Parameters

:	in	а	Value to assign	l
---	----	---	-----------------	---

## void add ( size\_t i, size\_t j, $T_- a$ )

Add a value to an entry for a 2-index vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	а	Value to assign

## void add ( size\_t i, size\_t j, size\_t k, T\_a)

Assign a value to an entry for a 3-index vector.

## Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	k	Third index in vector (starts at 1)
in	а	Value to assign

## $T_{-}$ operator[] ( size\_t i ) const

Operator []

#### Parameters

in	i	Rank index in vector (starts at 0)
----	---	------------------------------------

## $T_-$ operator() ( size\_t i ) const

Operator ()

in	i	Rank index in vector (starts at 1)
		• v(i) starts at v(1) to v(size())
		• v(i) is the same element as v[i-1]

## $T_-$ operator() ( size\_t i, size\_t j ) const

Operator () with 2-D indexing (Case of a grid vector)

#### Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid) $v(i,j)$ starts at $v(1,1)$ to $v(getNx(),getNy())$

## $T_{-}$ operator() ( size\_t i, size\_t j, size\_t k ) const

Operator () with 3-D indexing (Case of a grid vector)

#### Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid)
in	k	third index in vector (Number of vector components in the z-grid) v(i,j,k) starts at v(1,1,1) to v(getNx(),getNy(),getNz())

## PETScVect<T $_->$ & operator= ( const T $_-$ & a )

Operator =

Assign a constant to vector entries

#### Parameters

in	а	Value to set
----	---	--------------

## PETScVect<T $_->$ & operator+= ( const PETScVect< T $_->$ & v )

Operator +=

Add vector x to current vector instance.

#### Parameters

in	v	PETScVect instance to add to instance
----	---	---------------------------------------

## PETScVect<T $_->$ & operator+= ( const T $_-$ & a )

Operator +=

Add a constant to current vector entries.

#### 7.81. PETSCVECT < T\_ > CLASS TEMPLATE REFE**RENCE**TER 7. CLASS DOCUMENTATION

#### PETScVect<T $_->$ & operator== ( const PETScVect< T $_->$ & v )

Operator -=

#### **Parameters**

## PETScVect<T $_->$ & operator=( const T $_-$ & a)

Operator -=

Subtract constant from vector entries.

#### **Parameters**

## PETScVect<T $_->$ & operator\*= ( const T $_-$ & a )

Operator \*=

#### Parameters

$\mid$ in $\mid a \mid$ Value to multiply by
--

#### PETScVect<T $_->$ & operator/= ( const T $_-$ & a )

Operator /=

#### Parameters

in a	Value to divide by
------	--------------------

## $T_-$ operator, ( const PETScVect $< T_- > \& v$ ) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (v,w) where v and w are 2 instances of PETSc $\leftarrow$  Vect<double>

#### **Parameters**

in	v	PETScVect instance by which the current instance is multiplied
----	---	--

## operator Vec ( ) const

Casting operator.

This member functions enables casting an instance of class PETScVect into the Petsc vector type Vec. This is useful when one wants to usr any Petsc function that is not available in the

wrapper (class PETScWrapper) or PETScVect.

#### void setAssembly ( )

Vector assembly.

This function assembles vector (begins and ends)

#### void Insert ( const vector< int > & ii, const vector< Point< $T_-$ > > & v)

Insert values into certain locations of the vector.

#### **Parameters**

in	ii	Vector containing indices where to insert (Note the indices start from 0 like any C-array)
in	υ	Vector of values to insert, corresponding to indices in ii. Here the vector has entries of type Point <t_>.</t_>

#### void Add ( const vector< int > & $ii_r$ const vector< $T_-$ > & v )

Add values into certain locations of the vector.

#### **Parameters**

in	ii	Vector containing indices where to add (Note the indices start from 0 like any C-array)
in	v	Vector of values to add, corresponding to indices in ii

## 7.82 PETScWrapper< T\_> Class Template Reference

This class is a wrapper to be used when the library Petsc is installed and used with OFELI.

## **Public Member Functions**

• PETScWrapper (int argc, char \*\*args, string help="")

Constructor with program arguments.

~PETScWrapper ()

Destructor.

• PetscErrorCode getIntOption (string s, PetscInt &n, PetscBool &set) const

Get an option as an integer number.

• PetscErrorCode getBoolOption (string s, PetscBool &b, PetscBool &set) const

Get an option as a bool variable.

• PetscMPIInt size () const

Return wrapper size, i.e. number of processors.

• void setMesh (Mesh &ms)

Set mesh.

• void setPartition (Partition &p)

Set mesh partition.

void setMatrix (PETScMatrix < T<sub>-</sub> > &A)

Define problem matrix.

 void setLinearSystem (PETScMatrix< T<sub>-</sub> > &A, PETScVect< T<sub>-</sub> > &b, string s=KSPCG, string p=PCJACOBI, real\_t tol=1.e-12, size\_t max\_it=1000)

Set linear system features.

• void setPreconditioner (string p)

Choose preconditioner for the iterative procedure.

• void setIterationParameters (real\_t tol, size\_t max\_it)

Choose iteration parameters.

void setIterationMethod (string m)

Choose the iterative method.

void solve (PETScVect < T<sub>−</sub> > &x)

Solve the linear system.

void solve (const PETScVect< T<sub>-</sub> > &b, PETScVect< T<sub>-</sub> > &x)

*Solve the linear system.* 

• void checkError (PETScVect< T\_> &u) const

Check residual error.

• int getIterationNumber () const

Return the number of iterations.

void setLSTolerances (real\_t rel\_tol, real\_t abs\_tol, real\_t div\_tol=PETSC\_DEFAULT, int max
 \_it=PETSC\_DEFAULT) const

Set tolerance parameters for a linear system.

• PetscMPIInt getRank () const

Return the rank of the current processor.

#### **Friends**

template < class S\_ >
 ostream & operator < < (ostream &s, const PETScWrapper < S\_ > &w)
 Output wrapper information.

#### 7.82.1 Detailed Description

```
template < class T_> class OFELI::PETScWrapper < T_>
```

This class is a wrapper to be used when the library Petsc is installed and used with OFELI.

When Petsc is used, an instance of class PETScWrapper is to be declared. It initializes the use of Petsc and enables calling solver functions in Petsc.

**Template Parameters** 

```
T \leftarrow Data type (double, int, complex<double>, ...)
```

When a linear system is invoked, the choice of iterative solvers can be made among the following methods (see Petsc documentation for more details):

• KSPRICHARDSON: The Richardson iterative method (Default damping parameter is 1.0)

- KSPCHEBYSHEV: The Chebyshev iterative method
- KSPCG: The conjugate gradient method [Default]
- KSPCGNE: The CG method for normal equations (without explicitly forming the product
   <sup>A^TA</sup>
- KSPGMRES: [Default] The GMRES iterative method (see A Generalized Minimal Residual Algorithm for Solving Nonsymmetric Linear Systems. Y. Saad and M. H. Schultz, SIAM J. Sci. Stat. Comput., Vol. 7, No. 3, July 1986, pp. 856-869)
- KSPFGMRES: The Flexible GMRES method (with restart)
- KSPLGMRES: The 'augmented' standard GMRES method where the subspace uses approximations to the error from previous restart cycles
- KSPTCQMR: A variant of QMR (quasi minimal residual) developed by Tony Chan
- KSPBCGS: The BiCGStab (Stabilized version of BiConjugate Gradient Squared) method
- KSPIBCGS: The IBiCGStab (Improved Stabilized version of BiConjugate Gradient Squared) method in an alternative form to have only a single global reduction operation instead of the usual 3 (or 4)
- KSPFBCGS: The flexible BiCGStab method.
- KSPCGS: The CGS (Conjugate Gradient Squared) method
- KSPTFQMR: A transpose free QMR (quasi minimal residual)
- KSPCR: The conjugate residuals method
- KSPLSQR: The LSQR method
- KSPBICG: The Biconjugate gradient method (similar to running the conjugate gradient on the normal equations)
- KSPMINRES: The MINRES (Minimum Residual) method
- KSPSYMMLQ: The SYMMLQ method
- KSPGCR: The Generalized Conjugate Residual method

When a linear system is invoked, the choice of a preconditioner can be made among the following methods (see Petsc documentation for more details):

- PCJACOBI: [Default] Jacobi (i.e. diagonal scaling) preconditioning
- PCBJACOBI: Block Jacobi preconditioning, each block is (approximately) solved with its own KSP object
- PCSOR: (S)SOR (successive over relaxation, Gauss-Seidel) preconditioning
- PCEISENSTAT: An implementation of SSOR (symmetric successive over relaxation, symmetric Gauss-Seidel) preconditioning that incorporates Eisenstat's trick to reduce the amount of computation needed
- PCICC: Incomplete Cholesky factorization preconditioners
- PCILU: Incomplete factorization preconditioners
- PCASM: Use the (restricted) additive Schwarz method, each block is (approximately) solved with its own KSP object
- PCLU: Uses a direct solver, based on LU factorization, as a preconditioner
- PCCHOLESKY: Uses a direct solver, based on Cholesky factorization, as a preconditioner

## 7.82.2 Constructor & Destructor Documentation

PETScWrapper ( int argc, char \*\* args, string help = "")

Constructor with program arguments.

in	argc Count of number of command line arguments	
----	--	--

in	args	The command line arguments. Here is the list of arguments:
		• -start_in_debugger [noxterm,dbx,xdb,gdb,]
		– Starts program in debugger
		<ul><li>-on_error_attach_debugger [noxterm,dbx,xdb,gdb,]</li></ul>
		<ul> <li>Starts debugger when error detected</li> </ul>
		• -on_error_emacs <machinename> causes emacsclient to jump to error file</machinename>
		<ul><li>on_error_abort calls abort() when error detected (no traceback)</li></ul>
		• -on_error_mpiabort calls MPI_abort() when error detected
		<ul> <li>error_output_stderr prints error messages to stderr instead of the default stdout</li> </ul>
		<ul> <li>-error_output_none does not print the error messages (but handles errors in the same way as if this was not called)</li> </ul>
		<ul><li>debugger_nodes [node1,node2,] - Indicates nodes to start in debugger</li></ul>
		• -debugger_pause [sleeptime] (in seconds)
		– Pauses debugger
		• -stop_for_debugger
		<ul> <li>Print message on how to attach debugger manually to process and wait (-debugger_pause) seconds for attachment</li> </ul>
		• -malloc
		<ul> <li>Indicates use of PETSc error-checking malloc (on by default for debug version of libraries)</li> </ul>
		• -malloc no
		<ul> <li>Indicates not to use error-checking malloc</li> </ul>
		• -malloc_debug
		<ul> <li>check for memory corruption at EVERY malloc or free</li> </ul>
		• -malloc_dump
		<ul> <li>prints a list of all unfreed memory at the end of the run</li> </ul>
		• -malloc_test
		<ul> <li>like -malloc_dump -malloc_debug, but only active for debugging builds</li> </ul>
		• -fp_trap
		<ul> <li>Stops on floating point exceptions (Note that on the IBM RS6000 this slows code by at least a factor of 10.)</li> </ul>
		• -no_signal_handler
868		<ul> <li>Indicates not to trap error signals</li> <li>OFELI's Reference Guide</li> </ul>
		• -shared_tmp
		<ul> <li>indicates /tmp directory is shared by all processors</li> </ul>
		• -not_shared_tmp

#### 7.82. PETSCWRAPPER< T\_ > CLASS TEMPLATE REFERENCE. CLASS DOCUMENTATION

#### **Parameters**

in	help	String that contains message to display when argument -v is used
----	------	--

## Warning

This class is available only when OFELI has been installed with Petsc

## ~PETScWrapper ( )

#### Destructor.

Destroy the KSP context and release memory allocated by petsc

## 7.82.3 Member Function Documentation

## PetscErrorCode getIntOption ( string s, PetscInt & n, PetscBool & set ) const

Get an option as an integer number.

#### Parameters

in	S	String to preprend the name of the option	
out	n	Obtained integer value	
out	set	true if found, false if not.	

## PetscErrorCode getBoolOption ( string s, PetscBool & b, PetscBool & set ) const

Get an option as a bool variable.

#### **Parameters**

in	S	String to preprend the name of the option
out	b	Obtained boolean value
out	set	true if found, false if not.

#### void setMesh ( Mesh & ms )

Set mesh.

### Parameters

in	ms	Mesh instance
T11	1110	Wicom mistarice

## void setPartition ( Partition & p )

Set mesh partition.

This function is to be used for parallel computing

## CHAPTER 7. CLASS DOCUM**ENZIAPROS**CWRAPPER $< T_- >$ CLASS TEMPLATE REFERENCE

#### Parameters

in	р	Partition instance
----	---	--------------------

## void setMatrix ( PETScMatrix $< T_- > & A$ )

Define problem matrix.

#### **Parameters**

in	A	PETScMatrix instance that contains matrix	
----	---	---	--

void setLinearSystem ( PETScMatrix<  $T_-$  > & A, PETScVect<  $T_-$  > & b, string s = KSPCG, string p = PCJACOBI, real\_t tol = 1.  $e^-12$ , size\_t  $max_it = 1000$ )

Set linear system features.

#### Parameters

in	A	PETScMatrix instance that contains matrix	
in	b	Vector containing the right-hand side	
in	S	Option to choose iterative solver. See the definition of the class for iterative methods	
in	p	Option to choose preconditioner. See the definition of the class for available preconditioners.	
in	tol	Tolerance for convergence of iteration process [Default: 1.e-12]	
in	max↔ _it	Maximum number of linear solver iterations [Default: 1000]	

## void setPreconditioner ( string p )

Choose preconditioner for the iterative procedure.

#### Parameters

in	p	Option to choose preconditioner. See the definition of the class for available
		preconditioners.

## void setIterationParameters ( real\_t tol, size\_t max\_it )

Choose iteration parameters.

in	tol	Tolerance for convergence of iteration process
in	max←	Maximum number of linear solver iterations
	_it	

#### void setIterationMethod ( string m )

Choose the iterative method.

#### Parameters

in	m	Option to choose iterative solver. See the definition of the class for available
		iterative solvers.

#### void solve ( PETScVect< T $_->$ & x )

Solve the linear system.

If the member functions setIterationMethod and setPreconditioner have not been used, default methods are used

#### **Parameters**

in,out	х	Vector containing the initial guess on input and, if convergence is achieved, the solution on output
		solution on output

#### void solve ( const PETScVect< T $_->$ & b, PETScVect< T $_->$ & x)

Solve the linear system.

If the member functions setIterationMethod and setPreconditioner have not been used, default methods are used

## Parameters

in	b	Vector containing the right-hand side
in,out	х	Vector containing the initial guess on input and, if convergence is achieved, the solution on output

#### void checkError ( PETScVect< T $_->$ & u ) const

Check residual error.

This function computes the residual A\*x - b and outputs the number of iterations

#### Parameters

out 1	и	Residual vector
-------	---	-----------------

# void setLSTolerances ( real\_t rel\_tol, real\_t abs\_tol, real\_t div\_tol = PETSC\_DEFAULT, int max\_it = PETSC\_DEFAULT ) const

Set tolerance parameters for a linear system.

in	rel_tol	Relative convergence tolerance, relative decrease in the preconditioned
		residual norm

in	abs_tol	Absolute convergence tolerance of the preconditioned residual norm
in	div_tol	Divergence tolerance: Amount preconditioned residual norm
in	max⇔ _it	Maximum number of iterations

## 7.83 PhaseChange Class Reference

This class enables defining phase change laws for a given material.

#### **Public Member Functions**

• virtual ~PhaseChange ()

Destructor.

• int E2T (real\_t &H, real\_t &T, real\_t &gamma)

Calculate temperature from enthalpy.

virtual int EnthalpyToTemperature (real\_t &H, real\_t &T, real\_t &gamma)

Virtual function to calculate temperature from enthalpy.

• void setMaterial (Material &m, int code)

Choose Material instance and material code.

• Material & getMaterial () const

Return reference to Material instance.

## 7.83.1 Detailed Description

This class enables defining phase change laws for a given material.

These laws are predefined for a certain number of materials. The user can set himself a specific behavior for his own materials by defining a class that inherits from PhaseChange. The derived class must has at least the member function

int EnthalpyToTemperature(real\_t &H, real\_t &T, real\_t &gamma)

#### 7.83.2 Member Function Documentation

int E2T ( real\_t & H, real\_t & T, real\_t & gamma )

Calculate temperature from enthalpy.

This member function is to be called in any equation class that needs phase change laws.

#### Parameters

in	Н	Enthalpy value
out	T	Calculated temperature value
out	gamma	Maximal slope of the curve H -> T

virtual int EnthalpyToTemperature ( real\_t & H, real\_t & T, real\_t & gamma ) [virtual]

Virtual function to calculate temperature from enthalpy.

This member function must be implemented in any derived class in order to define user's own material laws.

#### **Parameters**

in	Н	Enthalpy value
out	T	Calculated temperature value
out	gamma	Maximal slope of the curve H -> T

## 7.84 Point $< T_- >$ Class Template Reference

Defines a point with arbitrary type coordinates.

#### **Public Member Functions**

```
• Point ()
```

Default constructor.

• Point (T<sub>-</sub> a, T<sub>-</sub> b=T<sub>-</sub>(0), T<sub>-</sub> c=T<sub>-</sub>(0))

Constructor that assigns a, b to x-, y- and z-coordinates respectively.

• Point (const Point < T\_ > &p)

Copy constructor.

T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator (): Non constant version.

• const T\_ & operator() (size\_t i) const

Operator (): Constant version.

• T<sub>-</sub> & operator[] (size<sub>-</sub>t i)

Operator []: Non constant version.

• const T<sub>-</sub> & operator[] (size<sub>-</sub>t i) const

Operator []: Constant version.

• Point $< T_- > & operator += (const Point < T_- > &p)$ 

Operator +=

• Point $< T_- > & operator= (const Point<math>< T_- > & p)$ 

Operator -=

• Point< T\_> & operator= (const T\_ &a)

Operator =

• Point< T<sub>−</sub> > & operator+= (const T<sub>−</sub> &a)

Operator +=

• Point< T<sub>−</sub> > & operator-= (const T<sub>−</sub> &a)

Operator -=

• Point< T<sub>−</sub> > & operator\*= (const T<sub>−</sub> &a)

Operator \*=

• Point< T\_> & operator/= (const T\_ &a)

Operator /=

• bool operator== (const Point < T\_ > &p)

Operator ==

• bool operator!= (const Point< T<sub>-</sub> > &p)

Operator !=

• double NNorm () const

Return squared euclidean norm of vector.

• double Norm () const

Return norm (length) of vector.

• void Normalize ()

Normalize vector.

• Point< double > Director (const Point< double > &p) const

Return Director (Normalized vector)

• bool isCloseTo (const Point< double > &a, double toler=OFELL\_TOLERANCE) const

Return true if current point is close to instance a (up to tolerance toler)

• T\_ operator, (const Point< T\_ > &p) const

Return Dot (scalar) product of two vectors.

#### **Public Attributes**

• T\_x

First coordinate.

• T\_y

Second coordinate.

• T\_z

Third coordinate.

## 7.84.1 Detailed Description

template<class T\_> class OFELI::Point< T\_>

Defines a point with arbitrary type coordinates.

Operators = and () are overloaded.

**Template Parameters** 

 $T \leftarrow$  Data type (double, float, complex<double>, ...)

### 7.84.2 Constructor & Destructor Documentation

Point ( $T_-a$ ,  $T_-b = T_-(0)$ ,  $T_-c = T_-(0)$ )

Constructor that assigns a, b to x-, y- and z-coordinates respectively. Default values for b and c are 0

#### 7.84.3 Member Function Documentation

T<sub>\_</sub>& operator() ( size<sub>\_</sub>t i )

Operator (): Non constant version.

Values i = 1, 2, 3 correspond to x, y and z respectively

```
const T_& operator() ( size_t i ) const
Operator (): Constant version.
   Values i = 1, 2, 3 correspond to x, y and z respectively
T_& operator[]( size_t i )
Operator []: Non constant version.
   Values i = 0, 1, 2 correspond to x, y and z respectively
const T_& operator[] ( size_t i ) const
Operator []: Constant version.
   Values i = 0, 1, 2 correspond to x, y and z respectively
Point<T_->& operator+= ( const Point< T_-> & p )
Operator +=
   Add point p to current instance
Point<T_->& operator== ( const Point< T_->& p )
Operator -=
   Subtract point p from current instance
Point<T_->& operator= ( const T_- & a )
Operator =
   Assign constant a to current instance coordinates
Point<T_->& operator+= ( const T_-& a )
Operator +=
   Add constant a to current instance coordinates
Point<T_->& operator== ( const T_-& a )
Operator -=
   Subtract constant a from current instance coordinates
Point<T_->& operator*= ( const T_- & a )
Operator *=
   Multiply constant a by current instance coordinates
Point<T_->& operator/= ( const T_-& a )
Operator /=
   Divide current instance coordinates by a
bool operator== ( const Point< T_-> & p )
Operator ==
   Return true if current instance is equal to p, false otherwise.
```

#### bool operator!= ( const Point $< T_- > & p$ )

Operator !=

Return false if current instance is equal to p, true otherwise.

#### void Normalize ( )

Normalize vector.

Divide vector components by its 2-norm

#### bool isCloseTo ( const Point < double > & a, double toler = OFELI\_TOLERANCE ) const

Return true if current point is close to instance a (up to tolerance toler)

Default value for toler is the OFELI\_TOLERANCE constant.

#### $T_-$ operator, (const Point< $T_-$ > & p) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (p,q) where p and q are 2 instances of Point < double >

#### **Parameters**

in	p	<i>p</i> Point instance by which the current instance is multiplied
----	---	---

## 7.85 Point2D < T\_ > Class Template Reference

Defines a 2-D point with arbitrary type coordinates.

#### **Public Member Functions**

• Point2D ()

Default constructor.

• Point2D (T<sub>-</sub> a, T<sub>-</sub> b=T<sub>-</sub>(0))

Constructor that assigns a, b to x-, y- and y-coordinates respectively.

• Point2D (T\_\*a)

• Point2D (const Point2D < T\_ > &pt)

Copy constructor.

• Point2D (const Point < T\_ > &pt)

Copy constructor from class Point.

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

*Operator(): Non constant version.* 

const T<sub>-</sub> & operator() (size<sub>-</sub>t i) const

Operator(): Constant version.

• T<sub>-</sub> & operator[] (size<sub>-</sub>t i)

Operator []: Non constant version.

• const T<sub>-</sub> & operator[] (size<sub>-</sub>t i) const

Operator [] Constant version.

• Point2D< T $_->$  & operator= (const Point2D< T $_->$  &p)

```
Operator =
• Point2D< T_-> & operator+= (const Point2D< T_-> &p)
      Operator +=
• Point2D< T_-> & operator= (const Point2D< T_-> &p)
      Operator -=
• Point2D< T<sub>-</sub> > & operator= (const T<sub>-</sub> &a)
      Operator =
• Point2D< T_> & operator+= (const T_ &a)
      Operator +=
• Point2D< T<sub>−</sub> > & operator-= (const T<sub>−</sub> &a)
      Operator -=
• Point2D< T<sub>−</sub> > & operator*= (const T<sub>−</sub> &a)
      Operator *=
• Point2D< T_> & operator/= (const T_ &a)
      Operator /=
• bool operator== (const Point2D < T_ > &p)
      Operator ==
• bool operator!= (const Point2D < T_ > &p)
      Operator !=
• real_t CrossProduct (const Point2D< real_t > &lp, const Point2D< real_t > &rp)
      Return Cross product of two vectors lp and rp

    real_t NNorm () const

      Return squared norm (length) of vector.

    real_t Norm () const

      Return norm (length) of vector.
• Point2D< real_t > Director (const Point2D< real_t > &p) const
      Return Director (Normalized vector)

    bool isCloseTo (const Point2D < real_t > &a, real_t toler=OFELI_TOLERANCE) const

      Return true if current point is close to instance a (up to tolerance toler)
```

## **Public Attributes**

• T<sub>-</sub> x

First coordinate of point.

• T\_y

Second coordinate of point.

#### 7.85.1 Detailed Description

```
template < class \ T_{-}> \\ class \ OFELI::Point2D < T_{-}>
```

Defines a 2-D point with arbitrary type coordinates. Operators = and () are overloaded. The actual

#### **Template Parameters**

```
T_{\leftarrow} Data type (double, float, complex<double>, ...)
```

#### 7.85.2 Constructor & Destructor Documentation

```
Point2D ( T_-a, T_-b = T_-(0) )
```

Constructor that assigns a, b to x-, y- and y-coordinates respectively. Default value for b is 0

#### 7.85.3 Member Function Documentation

#### $T_{-}$ % operator() ( size\_t i )

Operator(): Non constant version.

Values i = 1,2 correspond to x and y respectively

#### const T\_& operator() ( size\_t i ) const

Operator(): Constant version.

Values i=1,2 correspond to x and y respectively

#### $T_{\infty}$ operator[] ( size\_t i )

Operator[]: Non constant version.

Values i=0,1 correspond to x and y respectively

#### const T\_& operator[]( size\_t i ) const

Operator [] Constant version.

Values i=0,1 correspond to x and y respectively

#### Point2D<T $_->$ & operator= ( const Point2D< T $_->$ & p )

Operator =

Assign point p to current instance

#### Point2D<T $_->$ & operator+= ( const Point2D< T $_->$ & p )

Operator +=

Add point p to current instance

## Point2D<T $_->$ & operator== ( const Point2D< T $_->$ & p )

Operator -=

Subtract point p from current instance

## Point2D<T $_->$ & operator= ( const T $_-$ & a )

Operator =

Assign constant a to current instance coordinates

#### Point2D<T $_->$ & operator+= ( const T $_-$ & a )

Operator +=

Add constant a to current instance coordinates

#### Point2D<T $_>$ & operator== ( const T $_$ & a )

Operator -=

Subtract constant a from current instance coordinates

## Point2D<T $_->$ & operator\*= ( const T $_-$ & a )

Operator \*=

Multiply constant a by current instance coordinates

#### Point2D<T $_>$ & operator/= ( const T $_$ & a )

Operator /=

Divide current instance coordinates by a

#### bool operator== ( const Point2D< T $_->$ & p )

Operator ==

Return true if current instance is equal to p, false otherwise.

#### bool operator!= ( const Point2D< T $_->$ & p )

Operator !=

Return false if current instance is equal to p, true otherwise.

## 7.86 Polygon Class Reference

To store and treat a polygonal figure.

Inheritance diagram for Polygon:



## **Public Member Functions**

• polygon ()

Default constructor.

Polygon (const Vect< Point< real\_t >> &v, int code=1)

Constructor.

• void setVertices (const Vect< Point< real\_t >> &v)

Assign vertices of polygon.

real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current polygon.

• Polygon & operator+= (Point< real\_t > a)

*Operator* +=.

• Polygon & operator+= (real\_t a)

Operator \*=.

• void setCode (int code)

Choose a code for the domain defined by the figure.

- void getSignedDistance (const Grid &g, Vect< real\_t > &d) const
  - Calculate signed distance to current figure with respect to grid points.
- real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
   const

Compute signed distance from a line.

## 7.86.1 Detailed Description

To store and treat a polygonal figure.

#### 7.86.2 Constructor & Destructor Documentation

Polygon ( const Vect< Point< real\_t >> & v, int code = 1 )

Constructor.

**Parameters** 

in	v	Vect instance containing list of coordinates of polygon vertices
in	code	Code to assign to the generated domain (Default value = 1)

## 7.86.3 Member Function Documentation

void setVertices ( const Vect< Point< real\_t >> & v )

Assign vertices of polygon.

Parameters

in	v	Vector containing vertices coordinates in counter clockwise order
----	---	---

## real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current polygon.

The computed distance is negative if p lies in the polygon, negative if it is outside, and 0 on its boundary

Parameters

in	p	Point <double> instance</double>
----	---	----------------------------------

Reimplemented from Figure.

#### Polygon& operator+= ( Point< real\_t > a )

Operator +=.

Translate polygon by a vector a

#### Polygon& operator+= $( real_t a )$

Operator \*=.

Scale polygon by a factor a

## void getSignedDistance ( const Grid & g, Vect< real t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

#### **Parameters**

ſ	in	8	Grid instance
	in	d	Vect instance containing calculated distance from each grid index to Figure

#### Remarks

Vector d doesn't need to be sized before invoking this function

# real\_t dLine ( const Point < real\_t > & p, const Point < real\_t > & a, const Point < real\_t > & b) const [inherited]

Compute signed distance from a line.

#### Parameters

in	p	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line

## Returns

Signed distance

## 7.87 Prec< T\_> Class Template Reference

To set a preconditioner.

#### **Public Member Functions**

• Prec ()

Default constructor.

• Prec (int type)

Constructor that chooses preconditioner.

• Prec (const SpMatrix < T\_ > &A, int type=DIAG\_PREC)

Constructor using matrix of the linear system to precondition.

• Prec (const Matrix < T\_> \*A, int type=DIAG\_PREC)

Constructor using matrix of the linear system to precondition.

• ~Prec ()

Destructor.

void setType (int type)

Define preconditioner type.

• void setMatrix (const Matrix < T\_ > \*A)

*Define pointer to matrix for preconditioning (if this one is abstract)* 

void setMatrix (const SpMatrix < T<sub>-</sub> > &A)

Define the matrix for preconditioning.

• void solve (Vect< T\_> &x) const

Solve a linear system with preconditioning matrix.

• void solve (const Vect< T $_->$  &b, Vect< T $_->$  &x) const

Solve a linear system with preconditioning matrix.

• void TransSolve (Vect< T<sub>-</sub> > &x) const

Solve a linear system with transposed preconditioning matrix.

void TransSolve (const Vect< T<sub>-</sub> > &b, Vect< T<sub>-</sub> > &x) const
 Solve a linear system with transposed preconditioning matrix.

• T\_ & getPivot (size\_t i) const

Return i-th pivot of preconditioning matrix.


## 7.87.1 Detailed Description

template<class T\_> class OFELI::Prec< T\_>

To set a preconditioner.

The preconditioner type is chosen in the constructor

**Template Parameters** 



## 7.87.2 Constructor & Destructor Documentation

Prec (int type)

Constructor that chooses preconditioner.

in	type	Preconditioner type:
		IDENT_PREC: Identity preconditioner (No preconditioning)
		DIAG_PREC: Diagonal preconditioner
		DILU_PREC: Diagonal Incomplete factorization preconditioner
		ILU_PREC: Incomplete factorization preconditioner
		SSOR_PREC: SSOR preconditioner

## Prec ( const SpMatrix< $T_-$ > & A, int $type = DIAG_PREC$ )

Constructor using matrix of the linear system to precondition.

#### Parameters

A	Matrix to precondition	
type	Preconditioner type:	
	IDENT_PREC: Identity preconditioner (No preconditioning)	
	DIAG_PREC: Diagonal preconditioner	
	DILU_PREC: Diagonal Incomplete factorization preconditioner	
	ILU_PREC: Incomplete factorization preconditioner	
	• SSOR_PREC: SSOR preconditioner	

## Prec ( const Matrix < T<sub>-</sub> > \* A, int type = DIAG\_PREC )

Constructor using matrix of the linear system to precondition.

## Parameters

in	A	Pointer to abstract Matrix class to precondition	
in	type	Preconditioner type:	
		IDENT_PREC: Identity preconditioner (No preconditioning)	
		DIAG_PREC: Diagonal preconditioner	
		DILU_PREC: Diagonal Incomplete factorization preconditioner	
		ILU_PREC: Incomplete factorization preconditioner	
		SSOR_PREC: SSOR preconditioner	

**OFELI's Reference Guide** 

## 7.87.3 Member Function Documentation

## void setType ( int type )

Define preconditioner type.

#### Parameters

in	type	Preconditioner type:	
		IDENT_PREC: Identity preconditioner (No preconditioning)	
		DIAG_PREC: Diagonal preconditioner	
		DILU_PREC: Diagonal Incomplete factorization preconditioner	
		ILU_PREC: Incomplete factorization preconditioner	
		SSOR_PREC: SSOR preconditioner	

## void setMatrix ( const Matrix $< T_- > *A$ )

Define pointer to matrix for preconditioning (if this one is abstract)

#### **Parameters**

in	A	Matrix to precondition
----	---	------------------------

## void setMatrix ( const SpMatrix $< T_- > & A$ )

Define the matrix for preconditioning.

#### Parameters

in	Α	Matrix to precondition (instance of class SpMatrix)
----	---	---

## void solve ( Vect< $T_-$ > & x ) const

Solve a linear system with preconditioning matrix.

### Parameters

j	n,out	х	Right-hand side on input and solution on output.
---	-------	---	--

## void solve ( const Vect< $T_-$ > & b, Vect< $T_-$ > & x ) const

Solve a linear system with preconditioning matrix.

in	b	Right-hand side
out	x	Solution vector

### void TransSolve ( Vect< T $_->$ & x ) const

Solve a linear system with transposed preconditioning matrix.

#### **Parameters**

in,out	x	Right-hand side in input and solution in output.
--------	---	--

#### void TransSolve ( const Vect< $T_-$ > & b, Vect< $T_-$ > & x ) const

Solve a linear system with transposed preconditioning matrix.

#### **Parameters**

in	b	Right-hand side vector
out	x	Solution vector

## 7.88 Prescription Class Reference

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

## **Public Member Functions**

• Prescription ()

Default constructor.

Prescription (Mesh &mesh, const string &file)

Constructor that gives an instance of class Mesh and the data file name.

• ∼Prescription ()

Destructor.

• int get (int type, Vect< real\_t > &v, real\_t time=0, size\_t dof=0)

## 7.88.1 Detailed Description

To prescribe various types of data by an algebraic expression. Data may consist in boundary conditions, forces, tractions, fluxes, initial condition. All these data types can be defined through an enumerated variable.

## 7.88.2 Constructor & Destructor Documentation

Prescription ( Mesh & mesh, const string & file )

Constructor that gives an instance of class Mesh and the data file name. It reads parameters in Prescription Format from this file.

#### **Parameters**

in	mesh	Mesh instance
in	file	Name of Prescription file

#### 7.88.3 Member Function Documentation

int get ( int type, Vect< real\_t > & v, real\_t time = 0, size\_t dof = 0 )

Read data in the given file and stores in a Vect instance for a chosen DOF. The input value type determines the type of data to read.

#### **Parameters**

in	type	Type of data to seek. To choose among the enumerated values:	
		BOUNDARY_CONDITION: Read values for (Dirichlet) boundary conditions	
		• BOUNDARY_FORCE: Read values for boundary force (Neumann boundary condition).	
		The values TRACTION and FLUX have the same effect.	
		<ul> <li>BODY_FORCE: Read values for body (or volume) forces.</li> <li>The value SOURCE has the same effect.</li> </ul>	
		POINT_FORCE: Read values for pointwise forces	
		INITIAL_FIELD: Read values for initial solution	
in,out	v	Vect instance that is instantiatd on input and filled on output	
in	time	Value of time for which data is read [Default: 0].	
in	dof	DOF to store (Default is 0: All DOFs are chosen).	

## 7.89 Quad4 Class Reference

Defines a 4-node quadrilateral finite element using  $Q_1$  isoparametric interpolation. Inheritance diagram for Quad4:



## **Public Member Functions**

• Quad4 ()

Default Constructor.

• Quad4 (const Element \*element)

Constructor when data of Element el are given.

• Quad4 (const Side \*side)

Constructor when data of Side sd are given.

• ~Quad4 ()

Destructor.

• void set (const Element \*el)

Choose element by giving its pointer.

• void set (const Side \*sd)

Choose side by giving its pointer.

void setLocal (const Point < real\_t > &s)

*Initialize local point coordinates in element.* 

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node *i* at a given point.

• Point< real\_t > Grad (const LocalVect< real\_t, 4 > &u, const Point< real\_t > &s)

Return gradient of a function defined at element nodes.

• real\_t getMaxEdgeLength () const

Return maximal edge length of quadrilateral.

real\_t getMinEdgeLength () const

Return minimal edge length of quadrilateral.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

## 7.89.1 Detailed Description

Defines a 4-node quadrilateral finite element using  $Q_1$  isoparametric interpolation.

The reference element is the square [-1,1]x[-1,1]. The user must take care to the fact that determinant of jacobian and other quantities depend on the point in the reference element where they are calculated. For this, before any utilization of shape functions or jacobian, function **set** $\leftarrow$ **Local()** must be invoked.

#### 7.89.2 Constructor & Destructor Documentation

Quad4 (const Element \* element)

Constructor when data of Element el are given.

in	element	Pointer to Element
----	---------	--------------------

#### Quad4 (const Side \* side )

Constructor when data of Side sd are given.

#### Parameters

in side	Pointer to Side
---------	-----------------

#### 7.89.3 Member Function Documentation

#### void setLocal ( const Point< real\_t > & s )

Initialize local point coordinates in element.

#### **Parameters**

in	S	Point in the reference element This function computes jacobian, shape functions and
		their partial derivatives at s. Other member functions only return these values.

#### Point<real $_{-}$ t> DSh ( size $_{-}$ t $_{i}$ ) const

Return derivatives of shape function of node i at a given point.

Member function **setLocal()** must have been called before in order to calculate relevant quantities.

#### Point<real\_t> Grad ( const LocalVect< real\_t, 4 > & u, const Point< real\_t> & s)

Return gradient of a function defined at element nodes.

#### **Parameters**

in	и	Vector of values at nodes
in	S	Local coordinates (in [-1,1]) of point where the gradient is evaluated

### Returns

Value of gradient

## Note

If the derivatives of shape functions were not computed before calling this function (by calling setLocal), this function will compute them

#### real\_t Sh ( size\_t i, Point < real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

in	i	Local node label
in	S	Point in the reference triangle where the shape function is evaluated

#### real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

#### Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

#### Point<real\_t> getLocalPoint ( const Point< real\_t > & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

## 7.90 Reconstruction Class Reference

To perform various reconstruction operations.

#### **Public Member Functions**

• Reconstruction ()

Default constructor.

Reconstruction (const Mesh &ms)

Constructor using a refrence to a Mesh instance.

• ~Reconstruction ()

Destructor.

• void setMesh (Mesh &ms)

Provide Mesh instance.

• void P0toP1 (const Vect< real\_t > &u, Vect< real\_t > &v)

Smooth an elementwise field to obtain a nodewise field by  $L^2$  projection.

• void DP1toP1 (const Vect< real\_t > &u, Vect< real\_t > &v)

Smooth an Discontinuous P1 field to obtain a nodewise (Continuous  $P_1$ ) field by  $L^2$  projection.

## 7.90.1 Detailed Description

To perform various reconstruction operations.

This class enables various reconstruction operations like smoothing, projections, ...

## 7.90.2 Member Function Documentation

void P0toP1 ( const Vect< real\_t > &  $u_t$  Vect< real\_t > & v )

Smooth an elementwise field to obtain a nodewise field by  $L^2$  projection.

in	и	Vect instance that contains field to smooth
out	v	Vect instance that contains on output smoothed field

#### void DP1toP1 ( const Vect< real\_t > & $u_t$ Vect< real\_t > & v )

Smooth an Discontinuous P1 field to obtain a nodewise (Continuous  $P_1$ ) field by  $L^2$  projection.

#### **Parameters**

in	и	Vect instance that contains field to smooth
out	v	Vect instance that contains on output smoothed field

#### Warning

This function is valid for  $P_1$  triangles (2-D) only.

## 7.91 Rectangle Class Reference

To store and treat a rectangular figure. Inheritance diagram for Rectangle:



#### **Public Member Functions**

• Rectangle ()

Default constructor.

- Rectangle (const Point < real\_t > &bbm, const Point < real\_t > &bbM, int code=1)
   Constructor.
- void setBoundingBox (const Point < real\_t > &bbm, const Point < real\_t > &bbM)
   Assign bounding box of the rectangle.
- Point< real\_t > getBoundingBox1 () const

Return first point of bounding box.

Point< real\_t > getBoundingBox2 () const

Return second point of bounding box.

real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current rectangle.

• Rectangle & operator+= (Point< real\_t > a)

Operator +=.

• Rectangle & operator+= (real\_t a)

Operator \*=.

• void setCode (int code)

Choose a code for the domain defined by the figure.

- void getSignedDistance (const Grid &g, Vect< real\_t > &d) const
  - Calculate signed distance to current figure with respect to grid points.
- real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
   const

Compute signed distance from a line.

## 7.91.1 Detailed Description

To store and treat a rectangular figure.

## 7.91.2 Constructor & Destructor Documentation

Rectangle (const Point < real t > & bbm, const Point < real t > & bbM, int code = 1)

Constructor.

#### **Parameters**

in	bbm	Left Bottom point of rectangle
in	bbM	Right Top point of rectangle
in	code	Code to assign to rectangle

## 7.91.3 Member Function Documentation

void setBoundingBox ( const Point< real\_t > & bbm, const Point< real\_t > & bbM )

Assign bounding box of the rectangle.

#### Parameters

in	bbm	Left Bottom point
in	bbM	Right Top point

#### real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current rectangle.

The computed distance is negative if p lies in the rectangle, negative if it is outside, and 0 on its boundary

#### **Parameters**

	in	р	Point <double> instance</double>	
--	----	---	----------------------------------	--

Reimplemented from Figure.

#### Rectangle& operator+= ( Point< real\_t > a )

Operator +=.

Translate rectangle by a vector a

### Rectangle & operator += ( real\_t a )

Operator \*=.

Scale rectangle by a factor a

## void getSignedDistance ( const Grid & g, Vect< real t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

#### Parameters

in	8	Grid instance
in	d	Vect instance containing calculated distance from each grid index to Figure

#### Remarks

Vector d doesn't need to be sized before invoking this function

# real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const [inherited]

Compute signed distance from a line.

#### Parameters

in	p	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line

#### Returns

Signed distance

## 7.92 Side Class Reference

To store and treat finite element sides (edges in 2-D or faces in 3-D)

## **Public Types**

### **Public Member Functions**

• Side ()

Default Constructor.

• Side (size\_t label, const string &shape)

Constructor initializing side label and shape.

• Side (size\_t label, int shape)

Constructor initializing side label and shape.

• Side (const Side &sd)

Copy constructor.

• ~Side ()

Destructor.

• void Add (Node \*node)

*Insert a node at end of list of nodes of side.* 

• void Add (Edge \*edge)

Insert an edge at end of list of edges of side.

• void setLabel (size\_t i)

Define label of side.

void setFirstDOF (size\_t n)

Define First DOF.

void setNbDOF (size\_t nb\_dof)

Set number of degrees of freedom (DOF).

void DOF (size\_t i, size\_t dof)

Define label of DOF.

void setDOF (size\_t &first\_dof, size\_t nb\_dof)

Define number of DOF.

• void setCode (size\_t dof, int code)

Assign code to a DOF.

void setCode (const string &exp, int code, size\_t dof=1)

Define code by a boolean algebraic expression invoking coordinates of side nodes.

• void Replace (size\_t label, Node \*node)

Replace a node at a given local label.

void Add (Element \*el)

Set pointer to neighbor element.

• void set (Element \*el, size\_t i)

Set pointer to neighbor element.

void setNode (size\_t i, Node \*node)

Assign a node given by its pointer as the *i*-th node of side.

• int getShape () const

Return side's shape.

• size\_t getLabel () const

Return label of side.

• size\_t n () const

Return label of side.

• size\_t getNbNodes () const

Return number of side nodes.

• size\_t getNbVertices () const

Return number of side vertices.

• size\_t getNbEq () const

Return number of side equations.

• size\_t getNbDOF () const

Return number of DOF.

• int getCode (size\_t dof=1) const

Return code for a given DOF of node.

• size\_t getDOF (size\_t i) const

Return label of i-th dof.

size\_t getFirstDOF () const

Return label of first dof of node.

• Node \* getPtrNode (size\_t i) const

Return pointer to node of local label i.

• Node \* operator() (size\_t i) const

Operator ().

size\_t getNodeLabel (size\_t i) const

Return global label of node with given local label.

Element \* getNeighborElement (size\_t i) const

Return pointer to i-th side neighboring element.

• Element \* getOtherNeighborElement (Element \*el) const

Return pointer to other neighboring element than given one.

• Point< real\_t > getNormal () const

Return normal vector to side.

Point< real\_t > getUnitNormal () const

Return unit normal vector to side.

• int isOnBoundary () const

Boundary side or not.

void setOnBoundary ()

Say that the side is on the boundary.

real\_t getMeasure () const

Return measure of side.

• size\_t Contains (const Node \*nd) const

Say if a given node belongs to current side.

• void setActive (bool opt=true)

Set side is active (default) or not if argument is false

bool isActive () const

Return true or false whether side is active or not.

• int getLevel () const

Return side level Side level increases when side is refined (starting from 0). If the level is 0, then the element has no father.

• void setChild (Side \*sd)

Assign side as child of current one and assign current side as father.

• Side \* getParent () const

Return pointer to parent side Return null if no parent.

• Side \* getChild (size\_t i) const

Return pointer to *i*-th child side Returns null pointer is no childs.

size\_t getNbChilds () const

Return number of children of side.

#### 7.92.1 Detailed Description

To store and treat finite element sides (edges in 2-D or faces in 3-D)

Defines a side of a finite element mesh. The sides are given in particular by their shapes and a list of nodes. Each node can be accessed by the member function **getPtrNode()**. The string defining the element shape must be chosen according to the following list:

# 7.92.2 Member Enumeration Documentation

# enum SideType

To select side type (boundary side or not).

Enumerator

INTERNAL\_SIDE Internal sideEXTERNAL\_BOUNDARY Side on external boundaryINTERNAL\_BOUNDARY Side on internal boundary

### 7.92.3 Constructor & Destructor Documentation

Side ( size\_t label, const string & shape )

Constructor initializing side label and shape.

### Parameters

in	label	Label to assign to side.
in	shape	Shape of side (See class description).

# Side ( size\_t label, int shape )

Constructor initializing side label and shape.

### Parameters

in	label	to assign to side.
in	shape	of side (See enum ElementShape in Mesh).

# 7.92.4 Member Function Documentation

void DOF ( size\_t i, size\_t dof )

Define label of DOF.

### Parameters

in	i	DOF index
in	dof	Its label

# void setDOF ( size\_t & first\_dof, size\_t nb\_dof )

Define number of DOF.

in,out	first_dof	Label of the first DOF in input that is actualized
in	nb_dof	Number of DOF

# void setCode ( size\_t dof, int code )

Assign code to a DOF.

### Parameters

in	dof	DOF to which code is assigned
in	code	Code to assign

# void setCode ( const string & exp, int code, size\_t dof = 1 )

Define code by a boolean algebraic expression invoking coordinates of side nodes.

#### Parameters

in	exp	Boolean algebraic expression as required by fparser
in	code	Code to assign to node if the algebraic expression is true
in	dof	Degree of Freedom for which code is assigned [Default: 1]

### void Add ( Element \* el )

Set pointer to neighbor element.

### Parameters

in	el	Pointer to element to add as a neigbor element
----	----	--

#### Remarks

This function adds the pointer el only if this one is not a null pointer

### void set ( Element \* el, size\_t i )

Set pointer to neighbor element.

### Parameters

in	el	Pointer to element to set as a neighbor element
in	i	Local number of neighbor element

### Remarks

This function differs from the Add by the fact that the local label of neighbor element is given

# int getCode ( $size_t dof = 1$ ) const

Return code for a given DOF of node.

#### **Parameters**

in   dof   Local label of degree of freedom. [Defau	lt: 1]
---	--------

#### Node\* operator() ( size\_t i ) const

Operator ().

Return pointer to node of local label i.

### Element\* getNeighborElement ( size\_t i ) const

Return pointer to i-th side neighboring element.

#### **Parameters**

in	i	Local label of neighbor element (must be equal to 1 or 2).
----	---	--

# Element\* getOtherNeighborElement ( Element \* el ) const

Return pointer to other neighboring element than given one.

#### **Parameters**

	in el	Pointer to a given neighbor element	]
--	-------	-------------------------------------	---

### Remarks

If the side is on the boundary this function returns null pointer

# Point<real\_t> getNormal ( ) const

Return normal vector to side.

The normal vector is oriented from the first neighbor element to the second one.

### Warning

The norm of this vector is equal to the measure of the side (length of the edge in 2-D and area of the face in 3-D), and To get the unit normal, use rather the member function get← UnitNormal.

### Point<real\_t> getUnitNormal ( ) const

Return unit normal vector to side.

The unit normal vector is oriented from the first neighbor element to the second one.

### Remarks

The norm of this vector is equal to one.

### int isOnBoundary ( ) const

Boundary side or not.

Returns 1 or -1 if side is on boundary Depending on whether the first or the second neighbor element is defined Returns 0 if side is an inner one

#### Remarks

This member function is valid only if member function Mesh::getAllSides() or Mesh::get← BoundarySides() has been called before.

### real\_t getMeasure ( ) const

Return measure of side.

This member function returns length or area of side. In case of quadrilaterals it returns determinant of Jacobian of mapping between reference and actual side

### size\_t Contains ( const Node \* nd ) const

Say if a given node belongs to current side.

#### **Parameters**

	in	nd	Pointer to searched node
--	----	----	--------------------------

### Returns

index (local label) of node if found, 0 if not

### void setChild ( Side \* sd )

Assign side as child of current one and assign current side as father.

This function is principally used when refining is invoked (e.g. for mesh adaption)

#### **Parameters**

in	sd	Pointer to side to assign
----	----	---------------------------

# 7.93 SideList Class Reference

Class to construct a list of sides having some common properties.

### **Public Member Functions**

• SideList (Mesh &ms)

Constructor using a Mesh instance.

• ~SideList ()

Destructor.

• void selectCode (int code, int dof=1)

Select sides having a given code for a given degree of freedom.

• void unselectCode (int code, int dof=1)

Unselect sides having a given code for a given degree of freedom.

• size\_t getNbSides () const

Return number of selected sides.

• void top ()

Reset list of sides at its top position (Non constant version)

• void top () const

Reset list of sides at its top position (Constant version)

• Side \* get ()

Return pointer to current side and move to next one (Non constant version)

• Side \* get () const

Return pointer to current side and move to next one (Constant version)

# 7.93.1 Detailed Description

Class to construct a list of sides having some common properties.

This class enables choosing multiple selection criteria by using function select... However, the intersection of these properties must be empty.

### 7.93.2 Member Function Documentation

void selectCode ( int code, int dof = 1 )

Select sides having a given code for a given degree of freedom.

### Parameters

in	code	Code that sides share
in	dof	Degree of Freedom label [Default: 1]

#### void unselectCode ( int code, int dof = 1 )

Unselect sides having a given code for a given degree of freedom.


# Parameters

in	code	Code of sides to exclude
in	dof	Degree of Freedom label [Default: 1]

# 7.94 SkMatrix $< T_- >$ Class Template Reference

To handle square matrices in skyline storage format.

Inheritance diagram for SkMatrix< T<sub>−</sub>>:

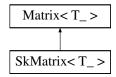

#### **Public Member Functions**

• SkMatrix ()

Default constructor.

• SkMatrix (size\_t size, int is\_diagonal=false)

Constructor that initializes a dense symmetric matrix.

• SkMatrix (Mesh &mesh, size\_t dof=0, int is\_diagonal=false)

Constructor using mesh to initialize skyline structure of matrix.

• SkMatrix (const Vect< size\_t > &ColHt)

Constructor that initializes skyline structure of matrix using vector of column heights.

• SkMatrix (const SkMatrix < T\_> &m)

Copy Constructor.

• ~SkMatrix ()

Destructor.

• void setMesh (Mesh &mesh, size\_t dof=0)

Determine mesh graph and initialize matrix.

• void setSkyline (Mesh &mesh)

Determine matrix structure.

• void setDiag ()

Store diagonal entries in a separate internal vector.

• void setDOF (size\_t i)

Choose DOF to activate.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign a value to an entry of the matrix.

• void Axpy (T<sub>-</sub> a, const SkMatrix < T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix < T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• void MultAdd (const Vect< T\_> &x, Vect< T\_> &y) const

Multiply matrix by vector  $\boldsymbol{x}$  and add to  $\boldsymbol{y}$ .

• void TMultAdd (const Vect< T\_> &x, Vect< T\_> &y) const

Multiply transpose of matrix by vector x and add to y.

• void MultAdd ( $T_a$ , const Vect<  $T_a$  > &x, Vect<  $T_a$  > &y) const

Multiply matrix by a vector and add to another one.

• void Mult (const Vect<  $T_->$  &x, Vect<  $T_->$  &y) const

Multiply matrix by vector x and save in y.

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and save in y.

• void add (size\_t i, size\_t j, const T\_ &val)

Add a constant value to an entry of the matrix.

size\_t getColHeight (size\_t i) const

```
Return column height.
```

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T\_ & operator() (size\_t i, size\_t j)

Operator () (Non constant version).

- void DiagPrescribe (Mesh &mesh, Vect< T<sub>-</sub> > &b, const Vect< T<sub>-</sub> > &u, int flag=0)
   Impose an essential boundary condition.
- void DiagPrescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose an essential boundary condition using the Mesh instance provided by the constructor.

• SkMatrix< T<sub>-</sub> > & operator= (const SkMatrix< T<sub>-</sub> > &m)

Operator = .

• SkMatrix< T<sub>-</sub> > & operator= (const T<sub>-</sub> &x)

Operator =.

• SkMatrix< T<sub>-</sub> > & operator+= (const SkMatrix< T<sub>-</sub> > &m)

*Operator* +=.

• SkMatrix $< T_- > & operator += (const T_- & x)$ 

Operator +=.

• SkMatrix $< T_- > & operator*= (const T_- &x)$ 

Operator \*=.

• int setLU ()

Factorize the matrix (LU factorization)

• int solve (Vect<  $T_->$  &b)

Solve linear system.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve linear system.

• T\_ \* get () const

Return C-Array.

• T<sub>-</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix if this one is stored, 0 else.

size\_t getNbRows () const

Return number of rows.

size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

void setDiagonal ()

Set the matrix as diagonal.

• void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

T<sub>-</sub> getDiag (size<sub>-</sub>t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

• void Assembly (const Element &el, T\_ \*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix< T<sub>-</sub> > &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix< T\_> &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

void Prescribe (Vect< T<sub>-</sub> > &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

• void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T<sub>-</sub>> &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect<  $T_->$  &b, Vect<  $T_->$  &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T<sub>-</sub> operator() (size<sub>-</sub>t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• T\_operator[] (size\_t k) const

Operator [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

• Matrix & operator-= (const Matrix < T\_> &m)

Operator -=.

• Matrix & operator-= (const T<sub>-</sub> &x)

Operator -=.

# 7.94.1 Detailed Description

template < class T\_> class OFELI::SkMatrix < T\_>

To handle square matrices in skyline storage format.

This template class allows storing and manipulating a matrix in skyline storage format. The matrix entries are stored in 2 vectors column by column as in the following example:

#### **Template Parameters**

```
T \leftarrow  Data type (double, float, complex<double>, ...)
```

# 7.94.2 Constructor & Destructor Documentation

### SkMatrix ( )

Default constructor.

Initializes a zero-dimension matrix

# SkMatrix ( size\_t size, int is\_diagonal = false )

Constructor that initializes a dense symmetric matrix. Normally, for a dense matrix this is not the right class.

### Parameters

in	size	Number of matrix rows (and columns).
in	is_diagonal	Boolean to select if the matrix is diagonal or not [Default: false]

### SkMatrix ( Mesh & mesh, size\_t dof = 0, int is\_diagonal = false )

Constructor using mesh to initialize skyline structure of matrix.

in	mesh	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.
in	is_diagonal	Boolean argument to say is the matrix is actually a diagonal matrix or not.

#### SkMatrix ( const Vect< size\_t> & ColHt )

Constructor that initializes skyline structure of matrix using vector of column heights.

#### **Parameters**

in	ColHt	Vect instance that contains rows lengths of matrix.
----	-------	---

# 7.94.3 Member Function Documentation

void setMesh ( Mesh & mesh, size\_t dof = 0 )

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

#### Parameters

in	mesh	Mesh instance for which matrix graph is determined.	
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side)	
		is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.	

# void setSkyline ( Mesh & mesh )

Determine matrix structure.

This member function calculates matrix structure using a Mesh instance.

### Parameters

in	mesh	Mesh instance

### void setDOF ( size\_t i )

Choose DOF to activate.

This function is available only if variable dof is equal to 1 in the constructor

#### **Parameters**

in $i$ Index of the DOF
-------------------------

# void set ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Assign a value to an entry of the matrix.

in	i	Row index (starting at i=1)

# CHAPTER 7. CLASS DOCUMENTA **7100**N SKMATRIX $< T_{-} > CLASS TEMPLATE REFERENCE$

#### Parameters

in	j	Column index (starting at i=1)
in	val	Value to assign to entry a(i,j)

Implements Matrix  $< T_- >$ .

# void Axpy ( $T_-a$ , const SkMatrix $< T_- > & m$ )

Add to matrix the product of a matrix by a scalar.

#### **Parameters**

in	а	Scalar to premultiply	
in	m	Matrix by which a is multiplied. The result is added to current instance	

# void Axpy ( $T_-a$ , const Matrix $< T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

#### Parameters

in	а	Scalar to premultiply
in	m	Matrix by which a is multiplied. The result is added to current instance

Implements Matrix  $< T_- >$ .

# void MultAdd ( const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const [virtual]

Multiply matrix by vector x and add to y.

### Parameters

in	x	x Vector to multiply by matrix	
in,out	y	Vector to add to the result. y contains on output the result.	

Implements Matrix  $< T_- >$ .

# void TMultAdd ( const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const

Multiply transpose of matrix by vector  $\mathbf{x}$  and add to  $\mathbf{y}$ .

in	x	Vector to multiply by matrix	
in,out	y	Vector to add to the result. y contains on output the result.	

# void MultAdd ( $T_-a$ , const Vect< $T_- > \& x$ , Vect< $T_- > \& y$ ) const [virtual]

Multiply matrix by a vector and add to another one.

#### **Parameters**

in	а	Constant to multiply by matrix	
in	x	Vector to multiply by matrix	
in,out	у	Vector to add to the result. y contains on output the result	

Implements Matrix  $< T_- >$ .

void Mult ( const Vect<  $T_- > \& x$ , Vect<  $T_- > \& y$  ) const [virtual]

Multiply matrix by vector x and save in y.

### Parameters

in	x	Vector to multiply by matrix
out	y	Vector that contains on output the result.

Implements Matrix  $< T_- >$ .

void TMult ( const Vect< T\_ > & x, Vect< T\_ > & y ) const [virtual]

Multiply transpose of matrix by vector x and save in y.

#### **Parameters**

in	х	Vector to multiply by matrix
out	out y Vector that contains on output the resu	

Implements Matrix  $< T_- >$ .

void add ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Add a constant value to an entry of the matrix.

#### **Parameters**

in	i Row index	
in	j	Column index
in	val Constant value to add to a(i,j)	

Implements Matrix  $< T_- >$ .

size\_t getColHeight ( size\_t i ) const

Return column height.

Column height at entry i is returned.

### T\_operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version).

#### **Parameters**

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

### T\_& operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version).

#### **Parameters**

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

### void DiagPrescribe (Mesh & mesh, Vect $< T_- > \& b$ , const Vect $< T_- > \& u$ , int flag = 0)

Impose an essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. It can be modified by member function **setPenal**(..).

### Parameters

in	mesh	Mesh instance from which information is extracted.	
in	b	Vect instance that contains right-hand side.	
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

# void DiagPrescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0)

Impose an essential boundary condition using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. It can be modified by member function **setPenal**(..).

in	b	Vect instance that contains right-hand side.

#### **Parameters**

in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

### SkMatrix<T $_->$ & operator= ( const SkMatrix< T $_->$ & m )

Operator =.

Copy matrix m to current matrix instance.

### SkMatrix<T $_->$ & operator= ( const T $_-$ & x )

Operator =.

define the matrix as a diagonal one with all diagonal entries equal to x.

### SkMatrix<T $_->$ & operator+= ( const SkMatrix< T $_->$ & m )

Operator +=.

Add matrix m to current matrix instance.

### SkMatrix<T $_->$ & operator+= ( const T $_-$ & x )

Operator +=.

Add constant value x to matrix entries.

# SkMatrix<T $_->$ & operator\*= ( const T $_-$ & x )

Operator \*=.

Premultiply matrix entries by constant value x.

### int setLU ( )

Factorize the matrix (LU factorization)

LU factorization of the matrix is realized. Note that since this is an in place factorization, the contents of the matrix are modified.

#### Returns

- 0 if factorization was normally performed,
- n if the n-th pivot is null.

### Remarks

A flag in this class indicates after factorization that this one has been realized, so that, if the member function solve is called after this no further factorization is done.

#### int solve ( Vect< $T_- > \& b$ ) [virtual]

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

#### **Parameters**

in,out	b	Vect instance that contains right-hand side on input and solution on output.
--------	---	--

#### Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

Implements Matrix  $< T_- >$ .

### int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x)

Solve linear system.

The linear system having the current instance as a matrix is solved by using the LU decomposition. Solution is thus realized after a factorization step and a forward/backward substitution step. The factorization step is realized only if this was not already done.

Note that this function modifies the matrix contents is a factorization is performed. Naturally, if the the matrix has been modified after using this function, the user has to refactorize it using the function setLU. This is because the class has no non-expensive way to detect if the matrix has been modified. The function setLU realizes the factorization step only.

#### **Parameters**

in	b	Vect instance that contains right-hand side.
out	x	Vect instance that contains solution

# Returns

- 0 if solution was normally performed,
- n if the n-th pivot is null.

# T\_\* get ( ) const

Return C-Array.

Skyline of matrix is stored row by row.

# ${\bf void\ setDiagonal\ (\ Mesh\ \&\ \it mesh\ )}$ [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

### T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

# void Assembly ( const Element & el, T\_\* a ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a C-array

# void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

### void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

### Parameters

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

### void Assembly ( const Side & sd, const DMatrix $< T_- > \& a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

### void Prescribe (Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

### **Parameters**

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void Prescribe ( Vect< T $_->$ & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

in,out	b	Vect instance that contains right-hand side.
--------	---	--

# 7.94. SKMATRIX< T $_-$ > CLASS TEMPLATE REFERENCEPTER 7. CLASS DOCUMENTATION

#### **Parameters**

in	flag	Parameter to determine whether only the right-hand side is to be modified
		(dof>0)
		or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( size\_t dof, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

### void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

### int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

### Parameters

$in,out \mid b \mid$ Vect instance that contains right-hand side on input and so	olution on output
--	-------------------

### int FactorAndSolve (const Vect< T $_->$ & b, Vect< T $_->$ & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

in	b	Vect instance that contains right-hand side

#### **Parameters**

out	x	Vect instance that contains solution	
-----	---	--------------------------------------	--

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

### int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

### T\_operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

# T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### Parameters

in	i	entry index
----	---	-------------

### T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

# $T_{-}$ operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

### Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

### Matrix& operator== ( const Matrix $< T_- > & m$ ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

### Matrix& operator= ( const $T_{-}$ & x ) [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

# 7.95 SkSMatrix< T $_->$ Class Template Reference

To handle symmetric matrices in skyline storage format. Inheritance diagram for SkSMatrix< T $_->$ :

Matrix< T\_ >

SkSMatrix< T\_ >

# **Public Member Functions**

• SkSMatrix ()

Default constructor.

• SkSMatrix (size\_t size, int is\_diagonal=false)

Constructor that initializes a dense symmetric matrix.

• SkSMatrix (Mesh &mesh, size\_t dof=0, int is\_diagonal=false)

Constructor using mesh to initialize skyline structure of matrix.

• SkSMatrix (const Vect< size\_t > &ColHt)

Constructor that initializes skyline structure of matrix using vector of column height.

• SkSMatrix (const Vect< size\_t > &I, const Vect< size\_t > &J, int opt=1)

Constructor for a square matrix using non zero row and column indices.

• SkSMatrix (const Vect< size\_t > &I, const Vect< size\_t > &J, const Vect< T\_ > &a, int opt=1)

Constructor for a square matrix using non zero row and column indices.

• SkSMatrix (const SkSMatrix < T\_ > &m)

Copy Constructor.

~SkSMatrix ()

Destructor.

• void setMesh (Mesh &mesh, size\_t dof=0)

Determine mesh graph and initialize matrix.

void setSkyline (Mesh &mesh)

Determine matrix structure.

void setDiag ()

Store diagonal entries in a separate internal vector.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign a value to an entry of the matrix.

• void Axpy (T<sub>-</sub> a, const SkSMatrix< T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy  $(T_- a, const Matrix < T_- > *m)$ 

```
Add to matrix the product of a matrix by a scalar.
• void MultAdd (const Vect< T_-> &x, Vect< T_-> &y) const
      Multiply matrix by vector x and add to y.
• void MultAdd (T_a, const Vect< T_a > &x, Vect< T_a > &y) const
      Multiply matrix by vector \mathbf{a} * \mathbf{x} and add to \mathbf{y}.
• void Mult (const Vect< T_-> &x, Vect< T_-> &y) const
      Multiply matrix by vector x and save in y
• void TMult (const Vect< T_-> &x, Vect< T_-> &y) const
      Multiply transpose of matrix by vector x and save in y.
• void add (size_t i, size_t j, const T_ &val)
      Add a constant to an entry of the matrix.

    size_t getColHeight (size_t i) const

      Return column height.
• Vect< T_> getColumn (size_t j) const
      Get j-th column vector.
• Vect< T_> getRow (size_t i) const
      Get i-th row vector.
• T_ & operator() (size_t i, size_t j)
      Operator () (Non constant version).
• T_ operator() (size_t i, size_t j) const
      Operator () (Constant version).
• SkSMatrix< T_> & operator= (const SkSMatrix< T_> &m)
• SkSMatrix< T_> & operator= (const T_ &x)
      Operator =.
• SkSMatrix< T<sub>-</sub> > & operator+= (const SkSMatrix< T<sub>-</sub> > &m)
• SkSMatrix< T_> & operator*= (const T_ &x)
      Operator *=.
• int setLDLt ()
      Factorize matrix (LDLt (Crout) factorization).
• int solveLDLt (const Vect< T_-> &b, Vect< T_-> &x)
      Solve a linear system using the LDLt (Crout) factorization.
• int solve (Vect< T_- > \&b)
      Solve linear system.
• int solve (const Vect< T_-> &b, Vect< T_-> &x)
      Solve linear system.
• T<sub>-</sub> * get () const
      Return C-Array.

    void set (size_t i, T_x)

      Assign a value to the i-th entry of C-array containing matrix.
• T<sub>-</sub> get (size_t i, size_t j) const
      Return entry (i, j) of matrix if this one is stored, 0 else.
• size_t getNbRows () const
      Return number of rows.
```

size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

void setDiagonal ()

Set the matrix as diagonal.

void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

• T<sub>\_</sub> getDiag (size\_t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

void Assembly (const Element &el, T<sub>-</sub> \*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix< T\_> &a)

Assembly of element matrix into global matrix.

void Assembly (const Side &sd, T<sub>-</sub> \*a)

Assembly of side matrix into global matrix.

void Assembly (const Side &sd, const DMatrix< T<sub>-</sub>> &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect<  $T_->$  &b, const Vect<  $T_->$  &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T\_> &b, int flag=0)

Impose by a penalty method a homegeneous (=0) essential boundary condition.

• void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T<sub>-</sub> > &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

*Operator () with one argument (Non Constant version).* 

T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• T\_operator[] (size\_t k) const

*Operator* [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

• Matrix & operator+= (const T<sub>-</sub> &x)

Operator +=.

• Matrix & operator= (const Matrix < T<sub>−</sub> > &m)

*Operator* -=.

• Matrix & operator-= (const T<sub>-</sub> &x)

Operator -=.

# 7.95.1 Detailed Description

```
template<class T_> class OFELI::SkSMatrix< T_>
```

To handle symmetric matrices in skyline storage format.

This template class allows storing and manipulating a symmetric matrix in skyline storage format.

The matrix entries are stored column by column as in the following example:

**Template Parameters** 

```
T \leftarrow  Data type (double, float, complex<double>, ...)
```

# 7.95.2 Member Function Documentation

```
T_* get ( ) const
```

Return C-Array.

Skyline of matrix is stored row by row.

```
void setDiagonal ( Mesh & mesh ) [inherited]
```

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

### T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

# void Assembly ( const Element & el, T\_\* a ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### **Parameters**

ir	in el Pointer to		Pointer to element instance
ir	1	а	Element matrix as a C-array

# void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance	
in	а	Element matrix as a DMatrix instance	

### void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

### Parameters

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

### void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

### void Prescribe (Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

# Parameters

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void Prescribe ( Vect< T $_->$ & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

in,out	b	Vect instance that contains right-hand side.
--------	---	--

# 7.95. SKSMATRIX $< T_- >$ CLASS TEMPLATE REFERENCETER 7. CLASS DOCUMENTATION

#### **Parameters**

in	flag	Parameter to determine whether only the right-hand side is to be modified
		(dof>0)
		or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( size\_t dof, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

### void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

### int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

### Parameters

$in,out \mid b \mid$ Vect instance that contains right-hand side on input and so	olution on output
--	-------------------

### int FactorAndSolve (const Vect< T $_->$ & b, Vect< T $_->$ & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

in	b	Vect instance that contains right-hand side

#### **Parameters**

out	$\boldsymbol{x}$	Vect instance that contains solution
-----	------------------	--------------------------------------

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

### int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

### T\_operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

### Parameters

in	i	entry index
----	---	-------------

# T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### Parameters

in i	entry index
------	-------------

### T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

# $T_{-}$ operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

### Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

### Matrix& operator+= ( const $T_- \& x$ ) [inherited]

Operator +=.

Add constant value x to all matrix entries.

#### Matrix& operator== ( const Matrix $< T_- > & m$ ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

### Matrix& operator=( const $T_- & x )$ [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

# 7.96 Sphere Class Reference

To store and treat a sphere.

Inheritance diagram for Sphere:



# **Public Member Functions**

• Sphere ()

Default construcor.

• Sphere (const Point < real\_t > &c, real\_t r, int code=1)

Constructor.

void setRadius (real\_t r)

Assign radius of sphere.

real\_t getRadius () const

Return radius of sphere.

void setCenter (const Point < real\_t > &c)

Assign coordinates of center of sphere.

• Point< real\_t > getCenter () const

 $Return\ coordinates\ of\ center\ of\ sphere.$ 

• real\_t getSignedDistance (const Point< real\_t > &p) const

Return signed distance of a given point from the current sphere.

• Sphere & operator+= (Point< real\_t > a)

Operator +=.

• Sphere & operator+= (real\_t a)

Operator \*=.

• void setCode (int code)

Choose a code for the domain defined by the figure.

• void getSignedDistance (const Grid &g, Vect< real\_t > &d) const

Calculate signed distance to current figure with respect to grid points.

real\_t dLine (const Point< real\_t > &p, const Point< real\_t > &a, const Point< real\_t > &b)
 const

Compute signed distance from a line.

# 7.96.1 Detailed Description

To store and treat a sphere.

### 7.96.2 Constructor & Destructor Documentation

Sphere ( const Point< real\_t > & c, real\_t r, int code = 1 )

Constructor.

#### **Parameters**

in	С	Coordinates of center of sphere
in	r	Radius
in	code	Code to assign to the generated sphere [Default: 1]

### 7.96.3 Member Function Documentation

real\_t getSignedDistance ( const Point< real\_t > & p ) const [virtual]

Return signed distance of a given point from the current sphere.

The computed distance is negative if p lies in the ball, positive if it is outside, and 0 on the sphere

#### **Parameters**

	in	р	Point <double> instance</double>	]
--	----	---	----------------------------------	---

Reimplemented from Figure.

Sphere& operator+= ( Point< real\_t > a )

Operator +=.

Translate sphere by a vector a

Sphere& operator+=  $( real_t a )$ 

Operator \*=.

Scale sphere by a factor a

void getSignedDistance ( const Grid & g, Vect< real\_t > & d ) const [inherited]

Calculate signed distance to current figure with respect to grid points.

in	8	Grid instance

#### **Parameters**

# Remarks

Vector d doesn't need to be sized before invoking this function

real\_t dLine ( const Point< real\_t > & p, const Point< real\_t > & a, const Point< real\_t > & b) const [inherited]

Compute signed distance from a line.

#### **Parameters**

in	p	Point for which distance is computed
in	а	First vertex of line
in	b	Second vertex of line


#### Returns

Signed distance

# 7.97 SpMatrix< T $_->$ Class Template Reference

To handle matrices in sparse storage format.

Inheritance diagram for SpMatrix < T\_>:



### **Public Member Functions**

• SpMatrix ()

Default constructor.

• SpMatrix (size\_t nr, size\_t nc)

Constructor that initializes current instance as a dense matrix.

• SpMatrix (size\_t size, int is\_diagonal=false)

Constructor that initializes current instance as a dense matrix.

• SpMatrix (Mesh &mesh, size\_t dof=0, int is\_diagonal=false)

Constructor using a Mesh instance.

SpMatrix (size\_t nr, size\_t nc, const vector< size\_t > &row\_ptr, const vector< size\_t > &col←
 \_ind, const vector< T\_ > &a)

Constructor for a rectangle matrix.

• SpMatrix (const SpMatrix &m)

Copy constructor.

• ~SpMatrix (void)

Destructor.

• void Dense ()

Define matrix as a dense one.

• void Identity ()

Define matrix as identity matrix.

• void Diagonal ()

Define matrix as a diagonal one.

void Diagonal (const T<sub>-</sub> &a)

Define matrix as a diagonal one with diagonal entries equal to a

• void Laplace1D (size\_t n, real\_t h)

*Sets the matrix as the one for the Laplace equation in 1-D.* 

• void Laplace2D (size\_t nx, size\_t ny)

*Sets the matrix as the one for the Laplace equation in 2-D.* 

• void setMesh (Mesh &mesh, size\_t dof=0)

Determine mesh graph and initialize matrix.

• void setOneDOF ()

Activate 1-DOF per node option.

• void setSides ()

Activate Sides option.

• void setDiag ()

Store diagonal entries in a separate internal vector.

• void DiagPrescribe (Mesh &mesh, Vect< T\_> &b, const Vect< T\_> &u)

Impose by a diagonal method an essential boundary condition.

• void DiagPrescribe (Vect< T\_> &b, const Vect< T\_> &u)

Impose by a diagonal method an essential boundary condition using the Mesh instance provided by the constructor.

void setSize (size\_t size)

*Set size of matrix (case where it's a square matrix).* 

• void setSize (size\_t nr, size\_t nc)

Set size (number of rows) of matrix.

• void setGraph (const vector< RC > &I, int opt=1)

Set graph of matrix by giving a vector of its nonzero entries.

• Vect< T\_> getRow (size\_t i) const

Get i-th row vector.

• Vect< T\_> getColumn (size\_t j) const

Get j-th column vector.

• T<sub>-</sub> & operator() (size<sub>-</sub>t i, size<sub>-</sub>t j)

Operator () (Non constant version)

• T\_operator() (size\_t i, size\_t j) const

Operator () (Constant version)

• const T\_ operator() (size\_t i) const

Operator () with one argument (Constant version)

• const T\_operator[] (size\_t i) const

Operator [] (Constant version).

• Vect< T\_> operator\* (const Vect< T\_> &x) const

*Operator* \* to multiply matrix by a vector.

• SpMatrix< T\_> & operator\*= (const T\_ &a)

*Operator* \*= to premultiply matrix by a constant.

• void getMesh (Mesh &mesh)

Get mesh instance whose reference will be stored in current instance of SpMatrix.

• void Mult (const Vect< T $_->$  &v, Vect< T $_->$  &w) const

Multiply matrix by vector and save in another one.

• void MultAdd (const Vect<  $T_-> &x$ , Vect<  $T_-> &y$ ) const

Multiply matrix by vector x and add to y.

• void MultAdd ( $T_-$  a, const Vect<  $T_-$  > &x, Vect<  $T_-$  > &y) const

Multiply matrix by vector **a**\***x** and add to y.

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and save in y.

void Axpy (T<sub>-</sub> a, const SpMatrix < T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy (T<sub>-</sub> a, const Matrix< T<sub>-</sub> > \*m)

Add to matrix the product of a matrix by a scalar.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign a value to an entry of the matrix.

• void add (size\_t i, size\_t j, const T\_ &val)

Add a value to an entry of the matrix.

• void operator= (const T<sub>-</sub> &x)

Operator = .

• size\_t getColInd (size\_t i) const

Return storage information.

size\_t getRowPtr (size\_t i) const

Return Row pointer at position i.

• int solve (Vect $< T_- > \&b$ )

Solve the linear system of equations.

• int solve (const Vect< T $_->$  &b, Vect< T $_->$  &x)

Solve the linear system of equations.

void setSolver (Iteration solver=CG\_SOLVER, Preconditioner prec=DIAG\_PREC, int max
 \_it=1000, real\_t toler=1.e-8)

Choose solver and preconditioner for an iterative procedure.

• void clear ()

brief Set all matrix entries to zero

• T\_\* get () const

Return C-Array.

• T\_get (size\_t i, size\_t j) const

Return entry (i, j) of matrix if this one is stored, 0 otherwise.

SpMat & getEigenMatrix ()

Return reference to the matrix instance in Eigen library.

size\_t getNbRows () const

Return number of rows.

• size\_t getNbColumns () const

Return number of columns.

• void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

• void setDiagonal ()

Set the matrix as diagonal.

• void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

• T<sub>-</sub> getDiag (size\_t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

void Assembly (const Element &el, T<sub>-</sub> \*a)

Assembly of element matrix into global matrix.

• void Assembly (const Element &el, const DMatrix < T\_ > &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix< T\_> &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T<sub>-</sub> > &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

• void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T\_> &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect< T\_> &b, Vect< T\_> &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

Operator +=.

Matrix & operator+= (const T<sub>-</sub> &x)

```
    Operator +=.
    Matrix & operator-= (const Matrix < T<sub>-</sub> > &m)
        Operator -=.

    Matrix & operator-= (const T<sub>-</sub> &x)
        Operator -=.
```

### **Friends**

template < class TT\_ >
 ostream & operator < < (ostream &s, const SpMatrix < TT\_ > &A)

# 7.97.1 Detailed Description

```
template<class T_> class OFELI::SpMatrix< T_>
```

To handle matrices in sparse storage format.

This template class enables storing and manipulating a sparse matrix, i.e. only nonzero terms are stored. Internally, the matrix is stored as a vector instance and uses for the definition of its graph a Vect<size\_t> instance row\_ptr and a Vect<size\_t> instance col\_ind that contains respectively addresses of first element of each row and column indices.

To illustrate this, consider the matrix

```
1 2 0
3 4 0
0 5 0
```

Such a matrix is stored in the vector<real\_t> instance  $\{1,2,3,4,5\}$ . The vectors row\_ptr and col\_ind are respectively:  $\{0,2,4,5\}$ ,  $\{1,2,1,2,2\}$ 

When the library eigen is used in conjunction with OFELI, the class uses the sparse matrix class of eigen and enables then access to specific solvers (see class LinearSolver)

### **Template Parameters**

```
T \leftarrow  Data type (double, float, complex<double>, ...)
```

# 7.97.2 Constructor & Destructor Documentation

### SpMatrix ( )

Default constructor.

Initialize a zero-dimension matrix

# SpMatrix ( size\_t nr, size\_t nc )

Constructor that initializes current instance as a dense matrix. Normally, for a dense matrix this is not the right class.

in	nr	Number of matrix rows.
in	пс	Number of matrix columns.

### SpMatrix ( size\_t size, int is\_diagonal = false )

Constructor that initializes current instance as a dense matrix. Normally, for a dense matrix this is not the right class.

#### **Parameters**

j	in	size	Number of matrix rows (and columns).
j	in	is_diagonal	Boolean argument to say is the matrix is actually a diagonal matrix or not.

# SpMatrix ( Mesh & mesh, size\_t dof = 0, int is\_diagonal = false )

Constructor using a Mesh instance.

#### **Parameters**

in	mesh	Mesh instance from which matrix graph is extracted.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that
		matrix structure is determined using all DOFs.
in	is_diagonal	Boolean argument to say is the matrix is actually a diagonal matrix or not.

# SpMatrix ( size\_t nr, size\_t nc, const vector< size\_t > & row\_ptr, const vector< size\_t > & col\_ind, const vector< $T_- >$ & a )

Constructor for a rectangle matrix.

### Parameters

in	nr	Number of rows
in	пс	Number of columns
in	row_ptr	Vector of row pointers (See the above description of this class).
in	col_ind	Vector of column indices (See the above description of this class).
in	а	vector instance containing matrix entries stored columnwise

# 7.97.3 Member Function Documentation

# void Laplace1D ( size\_t n, real\_t h )

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from  $P_1$  finite element discretization of the classical elliptic operator -u'' = f with homogeneous Dirichlet boundary conditions

### Remarks

This function is available for real valued matrices only.

#### **Parameters**

in	n	Size of matrix (Number of rows)
in	h	Mesh size (assumed constant)

### void Laplace2D ( size\_t nx, size\_t ny )

Sets the matrix as the one for the Laplace equation in 2-D.

The matrix is initialized as the one resulting from  $P_1$  finite element discretization of the classical elliptic operator -Delta u = f with homogeneous Dirichlet boundary conditions

# Remarks

This function is available for real valued matrices only.

### Parameters

in	nx	Number of unknowns in the x-direction
in	ny	Number of unknowns in the y-direction

#### Remarks

The number of rows is equal to nx\*ny

### void setMesh ( Mesh & mesh, size\_t dof = 0 )

Determine mesh graph and initialize matrix.

This member function is called by constructor with the same arguments

# Parameters

in	mesh	Mesh instance for which matrix graph is determined.
in	dof	Option parameter, with default value 0. dof=1 means that only one degree of freedom for each node (or element or side) is taken to determine matrix structure. The value dof=0 means that matrix structure is determined using all DOFs.

# void DiagPrescribe (Mesh & mesh, Vect $< T_- > \& b$ , const Vect $< T_- > \& u$ )

Impose by a diagonal method an essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

in	mesh	Mesh instance from which information is extracted.
in,out	b	Vect instance that contains right-hand side.

in	и	Vect instance that conatins imposed valued at DOFs where they are to be	
		imposed.	

# void DiagPrescribe ( Vect< $T_-$ > & b, const Vect< $T_-$ > & u)

Impose by a diagonal method an essential boundary condition using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### Parameters

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.

## void setSize ( size\_t size )

Set size of matrix (case where it's a square matrix).

#### **Parameters**

in	size	Number of rows and columns.
----	------	-----------------------------

## void setSize ( size\_t nr, size\_t nc )

Set size (number of rows) of matrix.

## Parameters

in	nr	Number of rows
in	пс	Number of columns

# void setGraph ( const vector < RC > & I, int opt = 1 )

Set graph of matrix by giving a vector of its nonzero entries.

in	I	Vector containing pairs of row and column indices
in	opt	Flag indicating if vector I is cleaned and ordered (opt=1: default) or not (opt=0). In the latter case, this vector can have the same contents more than once and are not necessarily ordered

## T\_& operator() ( size\_t i, size\_t j ) [virtual]

Operator () (Non constant version)

#### **Parameters**

in	i	Row index
in	j	Column index

Implements Matrix $< T_- >$ .

## T\_ operator() ( size\_t i, size\_t j ) const [virtual]

Operator () (Constant version)

#### **Parameters**

in	i	Row index
in	j	Column index

Implements Matrix  $< T_- >$ .

# const T\_ operator() ( size\_t i ) const

Operator () with one argument (Constant version)

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

# const T\_ operator[]( size\_t i ) const

Operator [] (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 0. Entries are stored row by row.

# $Vect < T_- > operator* ( const Vect < T_- > & x ) const$

Operator \* to multiply matrix by a vector.

## Parameters

in	x	Vect instance to multiply by

#### Returns

Vector product of matrix by x

## SpMatrix<T $_->$ & operator\*= ( const T $_-$ & a )

Operator \*= to premultiply matrix by a constant.

## CHAPTER 7. CLASS DOCUMENTATION SPMATRIX < T\_ > CLASS TEMPLATE REFERENCE

#### **Parameters**

	in a	Constant to multiply matrix by	
--	------	--------------------------------	--

## Returns

Resulting matrix

void Mult ( const Vect<  $T_- > \& v$ , Vect<  $T_- > \& w$  ) const [virtual]

Multiply matrix by vector and save in another one.

#### Parameters

in	v	Vector to multiply by matrix	
out	w	Vector that contains on output the result.	

Implements Matrix  $< T_- >$ .

void MultAdd ( const Vect<  $T_-$  > & x, Vect<  $T_-$  > & y ) const [virtual]

Multiply matrix by vector x and add to y.

#### Parameters

in	x	Vector to multiply by matrix	
out	y	Vector to add to the result. y contains on output the result.	

Implements Matrix  $< T_- >$ .

void MultAdd (  $T_-a$ , const Vect<  $T_- > \& x$ , Vect<  $T_- > \& y$  ) const [virtual]

Multiply matrix by vector a\*x and add to y.

#### Parameters

in	а	Constant to multiply by matrix	
in	х	ector to multiply by matrix	
out	y	Vector to add to the result. y contains on output the result.	

Implements Matrix  $< T_- >$ .

void TMult ( const Vect<  $T_- > & x$ , Vect<  $T_- > & y$  ) const [virtual]

Multiply transpose of matrix by vector x and save in y.

in	x	Vector to multiply by matrix
out	y	Vector that contains on output the result.

Implements Matrix $< T_- >$ .

# void Axpy ( $T_-a$ , const SpMatrix< $T_- > \& m$ )

Add to matrix the product of a matrix by a scalar.

#### **Parameters**

in	а	Scalar to premultiply
in	m	Matrix by which a is multiplied. The result is added to current instance

# void Axpy ( $T_-a$ , const Matrix $< T_- > * m$ ) [virtual]

Add to matrix the product of a matrix by a scalar.

#### **Parameters**

in	а	Scalar to premultiply	
in	m	Pointer to Matrix by which a is multiplied. The result is added to current instance	

Implements Matrix  $< T_- >$ .

# void set ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Assign a value to an entry of the matrix.

# Parameters

in	i	Row index
in	j	Column index
in	val	Value to assign to a(i,j)

Implements Matrix  $< T_- >$ .

# void add ( size\_t i, size\_t j, const T\_ & val ) [virtual]

Add a value to an entry of the matrix.

#### **Parameters**

in	i	Row index
in	j	Column index
in	val	Constant value to add to a(i,j)

Implements Matrix  $< T_- >$ .

void operator= ( const  $T_- \& x$  )

Operator =.

Assign constant value x to all matrix entries.

# size\_t getColInd ( size\_t i ) const [virtual]

Return storage information.

#### Returns

Column index of the i-th stored element in matrix

Reimplemented from Matrix $< T_- >$ .

## int solve ( Vect< $T_- > \& b$ ) [virtual]

Solve the linear system of equations.

The default parameters are:

- CG\_SOLVER for solver
- DIAG\_PREC for preconditioner
- Max. Number of iterations is 1000
- Tolerance is 1.e-8

To change these values, call function setSolver before this function

#### **Parameters**

	in,out	b	Vector that contains right-hand side on input and solution on output
--	--------	---	--

#### Returns

Number of actual performed iterations

Implements Matrix  $< T_- >$ .

# int solve ( const Vect< T $_->$ & b, Vect< T $_->$ & x )

Solve the linear system of equations.

The default parameters are:

- CG\_SOLVER for solver
- DIAG\_PREC for preconditioner
- Max. Number of iterations is 1000
- Tolerance is 1.e-8

To change these values, call function setSolver before this function

in	b	Vector that contains right-hand side
out	x	Vector that contains the obtained solution

## Returns

Number of actual performed iterations

void setSolver ( Iteration  $solver = CG\_SOLVER$ , Preconditioner  $prec = DIAG\_PREC$ , int  $max\_it = 1000$ , real\_t toler = 1.e-8)

Choose solver and preconditioner for an iterative procedure.

#### Parameters

in	toler	Tolerance for convergence. Default value is 1.e-8		
in	max⇔ _it	Maximum number of allowed iterations. Default value is 1000.		
		Default value is DIAG_PREC		
		ILU_PREC: ILU (Incomplete factorization) preconditioner		
		DILU_PREC: ILU (Diagonal Incomplete factorization) preconditioner		
		SSOR_PREC: SSOR (Symmetric Successive Over Relaxation) preconditioner		
		DIAG_PREC: Diagonal preconditioner [default]		
		IDENT_PREC: Identity preconditioner (no preconditioning)		
in	prec	Option to choose preconditioner in an enumerated variable		
		Default value is CG_SOLVER		
		GMRES_SOLVER: Generalized Minimal Residual		
		BICG_STAB_SOLVER: Biconjugate gradient stabilized		
		BICG_SOLVER: Biconjugate gradient		
		CGS_SOLVER: Squared conjugate gradient		
		CG_SOLVER: Conjugate Gradient [default]		
in	solver	Option to choose iterative solver in an enumerated variable		

# T\_\* get ( ) const

# Return C-Array.

Non zero terms of matrix is stored row by row.

# $T_-$ get ( size\_t i, size\_t j ) const [virtual]

Return entry (i,j) of matrix if this one is stored, 0 otherwise.

in	i	Row index (Starting from 1)
in	j	Column index (Starting from 1)

Implements Matrix  $< T_- >$ .

## void setDiagonal ( Mesh & mesh ) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

## T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix. First entry is given by **getDiag(1)**.

## void Assembly (const Element & el, $T_-*a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### Parameters

in	el	Pointer to element instance
in	а	Element matrix as a C-array

## void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### Parameters

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

## void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

#### Parameters

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

## void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance

in	а	Side matrix as a DMatrix instance
----	---	-----------------------------------

## void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0 ) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## Parameters

in,out	b	Vect instance that contains right-hand side.	
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.	
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).	

# void Prescribe ( int dof, int code, Vect< $T_- > \& b$ , const Vect< $T_- > \& u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### Parameters

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( Vect< $T_-$ > & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty

parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void Prescribe ( size\_t dof, Vect< $T_- > & b$ , const Vect< $T_- > & u$ , int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

## void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

# int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

#### **Parameters**

in,out	b	Vect instance that contains right-hand side on input and solution on output
,		

## int FactorAndSolve ( const Vect< T $_->$ & b, Vect< T $_->$ & x ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

#### **Parameters**

in	b	Vect instance that contains right-hand side
out	x	Vect instance that contains solution

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

# int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

# $T_{-}$ operator() ( $size_{-}ti$ ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### **Parameters**

in	i	entry index
----	---	-------------

# T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

# Matrix& operator+= ( const Matrix $< T_- > \& m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

# Matrix& operator+= ( const $T_- & x$ ) [inherited]

Operator +=.

Add constant value x to all matrix entries.

## Matrix& operator-= ( const Matrix $< T_- > \& m$ ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

## Matrix& operator== ( const $T_- & x$ ) [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

# 7.98 SteklovPoincare2DBE Class Reference

Solver of the Steklov Poincare problem in 2-D geometries using piecewie constant boundary elemen.

#### **Public Member Functions**

• SteklovPoincare2DBE (bool ext=false)

Default Constructor.

• SteklovPoincare2DBE (const Mesh &mesh, bool ext=false)

Constructor using mesh data.

SteklovPoincare2DBE (const Mesh &mesh, const Vect< real\_t > &g, Vect< real\_t > &b, bool ext=false)

Constructor that solves the Steklov Poincare problem.

• ~SteklovPoincare2DBE ()

Destructor.

• void setMesh (const Mesh &mesh, bool ext=false)

set Mesh instance

• void Solve ()

Build equation left and right-hand sides for  $P_0$  (piecewise constant) approximation.

• int Solve (Vect< real\_t > &b, const Vect< real\_t > &g)

Build equation left and right-hand sides for  $P_0$  (piecewise constant) approximation.

# 7.98.1 Detailed Description

Solver of the Steklov Poincare problem in 2-D geometries using piecewie constant boundary elemen.

SteklovPoincare2DBE solves the Steklov Poincare problem in 2-D: Given the trace of a harmonic function on the boundary of a given (inner or outer) domain, this class computes the normal derivative of the function. The normal is considered as oriented out of the bounded (inner) domain in both inner and outer configurations. The numerical approximation uses piecewise constant (P<sub>0</sub>) approximation on edges of the boundary. Solution is obtained from the GMRES iterative solver without preconditioning. The given data is the vector (instance of class Vect) of piecewise constant values of the harmonic function on the boundary and the returned solution is piecewise constant value of the normal derivative considered either as a Vect instance.

Note

Although the mesh of the inner domain is not necessary to solve the problem, this one must be provided in order to calculate the outward normal.

# 7.98.2 Constructor & Destructor Documentation

SteklovPoincare2DBE ( bool ext = false )

Default Constructor.

in	ext	Boolean variable to say if the domain is external (true) or internal (false: Default
		value).

## SteklovPoincare2DBE ( const Mesh & mesh, bool ext = false )

Constructor using mesh data.

This constructor calls member function setMesh.

#### **Parameters**

in	mesh	Reference to mesh instance.
in	ext	Boolean variable to say if the domain is external (true) or internal (false: Default
		value).

# SteklovPoincare2DBE ( const Mesh & mesh, const Vect< real\_t > & g, Vect< real\_t > & b, bool ext = false)

Constructor that solves the Steklov Poincare problem.

This constructor calls member function setMesh and Solve.

#### **Parameters**

in	mesh	Reference to mesh instance.	
in	8	Vect instance that contains imposed solution on the boundary	
in	b	Vect instance that contains the left hand side in input and the solution in output	
in	ext	Boolean variable to say if the domain is external (true) or internal (false: Default value).	

## 7.98.3 Member Function Documentation

void setMesh ( const Mesh & mesh, bool ext = false )

set Mesh instance

#### **Parameters**

ir	mesh	Mesh instance
ir	ext	Boolean variable to say if the domain is external (true) or internal (false: Default value).

## void Solve ( )

Build equation left and right-hand sides for P<sub>0</sub> (piecewise constant) approximation.

This member function is to be used if the constructor using mesh, b and g has been used.

## int Solve ( Vect< real\_t > & b, const Vect< real\_t > & g )

Build equation left and right-hand sides for P<sub>0</sub> (piecewise constant) approximation.

This member function is to be used if the constructor using mesh has been used. It concerns cases where the imposed boundary condition is given by sides

in	8	Vector that contains imposed solution on the boundary	
in	b	Vector that contains the left hand side in input and the solution in output	

# 7.99 Tabulation Class Reference

To read and manipulate tabulated functions.

#### **Public Member Functions**

• Tabulation ()

Default constructor.

• Tabulation (string file)

Constructor using file name.

• ∼Tabulation ()

Destructor.

• void setFile (string file)

Set file name.

• real\_t getValue (string funct, real\_t v)

Return the calculated value of the function.

• real\_t getDerivative (string funct, real\_t v)

Return the derivative of the function at a given point.

• real\_t getValue (string funct, real\_t v1, real\_t v2)

Return the calculated value of the function.

• real\_t getValue (string funct, real\_t v1, real\_t v2, real\_t v3)

Return the calculated value of the function.

# 7.99.1 Detailed Description

To read and manipulate tabulated functions.

This class enables reading a tabulated function of one to three variables and calculating the value of the function using piecewise multilinear interpolation.

The file defining the function is an XML file where any function is introduced via the tag " $\leftarrow$  Function".

# 7.100 Tetra4 Class Reference

Defines a three-dimensional 4-node tetrahedral finite element using P<sub>1</sub> interpolation. Inheritance diagram for Tetra4:



## **Public Member Functions**

• Tetra4 ()

Default Constructor.

• Tetra4 (const Element \*el)

Constructor when data of *Element el* are given.

• ~Tetra4 ()

Destructor.

• void set (const Element \*el)

Choose element by giving its pointer.

• real\_t Sh (size\_t i, Point< real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return x, y and z partial derivatives of shape function associated to node i.

• real\_t getVolume () const

Return volume of element.

Point< real\_t > getRefCoord (const Point< real\_t > &x) const

Return reference coordinates of a point x in element.

• bool isIn (const Point < real.t > &x)

Check whether point x is in current tetrahedron or not.

• real\_t getInterpolate (const Point< real\_t > &x, const LocalVect< real\_t, 4 > &v)

Return interpolated value at point of coordinate x

• Point< real\_t > EdgeSh (size\_t k, Point< real\_t > s)

Return edge shape function.

• Point< real\_t > CurlEdgeSh (size\_t k)

Return curl of edge shape function.

• real\_t getMaxEdgeLength () const

Return maximal edge length of tetrahedron.

• real\_t getMinEdgeLength () const

Return minimal edge length of tetrahedron.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

• Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.100.1 Detailed Description

Defines a three-dimensional 4-node tetrahedral finite element using  $P_1$  interpolation. The reference element is the right tetrahedron with four unit edges interpolation.

## 7.100.2 Member Function Documentation

## real\_t Sh ( size\_t i, Point < real\_t > s ) const

Calculate shape function of node i at a given point s. s is a point in the reference tetrahedron.

#### Point<real\_t> DSh ( size\_t i ) const

Return x, y and z partial derivatives of shape function associated to node i. Note that these are constant in element.

# Point<real $_t>$ EdgeSh ( size $_tk$ , Point< real $_t>s$ )

Return edge shape function.

#### **Parameters**

in	k	Local edge number for which the edge shape function is computed	
in	S	Local coordinates in element	

#### Remarks

Element edges are ordered as follows: Edge k has end vertices k and k+1

## Point<real\_t> CurlEdgeSh ( size\_t k )

Return curl of edge shape function.

#### **Parameters**

in	k	Local edge number for which the curl of the edge shape function is computed
----	---	---

#### Remarks

Element edges are ordered as follows: Edge k has end vertices k and k+1

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.101 Timer Class Reference

To handle elapsed time counting.

## **Public Member Functions**

• Timer ()

Default constructor.

• ~Timer ()

Destructor.

• bool Started () const

Say if time counter has started.

• void Start ()

Start (or resume) time counting.

• void Stop ()

Stop time counting.

• void Clear ()

Clear time value (Set to zero)

• real\_t get () const

Return elapsed time (in seconds)

• real\_t getTime () const

Return elapsed time (in seconds)

# 7.101.1 Detailed Description

To handle elapsed time counting.

This class is to be used when testing program performances. A normal usage of the class is, once an instance is constructed, to use alternatively, Start, Stop and Resume. Elapsed time can be obtained once the member function Stop is called.

## 7.101.2 Member Function Documentation

#### bool Started ( ) const

Say if time counter has started.

Return true if time has started, false if not

#### void Start ( )

Start (or resume) time counting.

This member function is to be used to start or resume time counting

## void Stop ( )

Stop time counting.

This function interrupts time counting. This one can be resumed by the function Start

#### real\_t getTime ( ) const

Return elapsed time (in seconds) Identical to get

# 7.102 TimeStepping Class Reference

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form  $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}.$ 

## **Public Member Functions**

• TimeStepping ()

Default constructor.

• TimeStepping (TimeScheme s, real\_t time\_step=theTimeStep, real\_t final\_time=theFinal ← Time)

Constructor using time discretization data.

∼TimeStepping ()

Destructor.

• void set (TimeScheme s, real\_t time\_step=theTimeStep, real\_t final\_time=theFinalTime)

*Define data of the differential equation or system.* 

• void setPDE (AbsEqua < real\_t > &eq)

Define partial differential equation to solve.

void setRK4RHS (Vect< real\_t > &f)

Set intermediate right-hand side vector for the Runge-Kutta method.

void setInitial (Vect< real\_t > &u)

Set initial condition for the system of differential equations.

• void setInitial (Vect< real\_t > &u, Vect< real\_t > &v)

Set initial condition for a system of differential equations.

void setInitialRHS (Vect< real\_t > &f)

Set initial RHS for a system of differential equations when the used scheme requires it.

• void setRHS (Vect< real\_t > &b)

Set right-hand side vector.

void setBC (Vect< real\_t > &u)

Set vector containing boundary condition to enforce.

void setNewmarkParameters (real\_t beta, real\_t gamma)

Define parameters for the Newmark scheme.

void setConstantMatrix ()

Say that matrix problem is constant.

void setNonConstantMatrix ()

Say that matrix problem is variable.

void setLinearSolver (Iteration s=DIRECT\_SOLVER, Preconditioner p=DIAG\_PREC)

Set linear solver data.

• void setVerbose (int v=0)

Set verbosity parameter:

• real\_t runOneTimeStep ()

Run one time step.

• void run (bool opt=false)

Run the time stepping procedure.

• void Assembly (const Element &el, real\_t \*b, real\_t \*A0, real\_t \*A1, real\_t \*A2=NULL)

Assemble element arrays into global matrix and right-hand side.

• void SAssembly (const Side &sd, real\_t \*b, real\_t \*A=NULL)

Assemble side arrays into global matrix and right-hand side.

• LinearSolver < real\_t > & getLSolver ()

Return LinearSolver instance.

# 7.102.1 Detailed Description

To solve time stepping problems, i.e. systems of linear ordinary differential equations of the form  $[A2]\{y''\} + [A1]\{y'\} + [A0]\{y\} = \{b\}.$ 

Features:

- The system may be first or second order (first and/or second order time derivatives
- The following time integration schemes can be used:
  - For first order systems: The following schemes are implemented Forward Euler (value ← FORWARD FIREER)

: FORWARD\_EULER)

Backward Euler (value: BACKWARD\_EULER) Crank-Nicolson (value: CRANK\_NICOLSON)

Heun (value: HEUN)

2nd Order Adams-Bashforth (value: *AB2*) 4-th order Runge-Kutta (value: *RK4*)

2nd order Backward Differentiation Formula (value: BDF2)

For second order systems: The following schemes are implemented Newmark (value ← : NEWMARK)

# 7.102.2 Constructor & Destructor Documentation

TimeStepping ( TimeScheme s, real\_t time\_step = theTimeStep, real\_t final\_time = theFinalTime )

Constructor using time discretization data.

#### **Parameters**

i	n S	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)	
i	n time_step	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter if the value given by the global variable theTimeStep	
i	n final_time	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable theFinalTime	

# 7.102.3 Member Function Documentation

void set ( TimeScheme s, real\_t time\_step = theTimeStep, real\_t final\_time = theFinalTime )

Define data of the differential equation or system.

in	S	Choice of the scheme: To be chosen in the enumerated variable <i>TimeScheme</i> (see the presentation of the class)
in	time_step	Value of the time step. This value will be modified if an adaptive method is used. The default value for this parameter if the value given by the global variable theTimeStep
in	final_time	Value of the final time (time starts at 0). The default value for this parameter is the value given by the global variable theFinalTime

# void setPDE ( AbsEqua < real\_t > & eq )

Define partial differential equation to solve.

The used equation class must have been constructed using the Mesh instance

#### **Parameters**

in	eq	Reference to equation instance	
----	----	--------------------------------	--

# void setRK4RHS ( Vect< real\_t > & f )

Set intermediate right-hand side vector for the Runge-Kutta method.

## Parameters

in	f	Vector containing the RHS

## void setInitial ( Vect< real\_t > & u )

Set initial condition for the system of differential equations.

#### **Parameters**

in	и	Vector containing initial condition for the unknown
----	---	---

#### Remarks

If a second-order differential equation is to be solved, use the same function with two initial vectors (one for the unknown, the second for its time derivative)

# void setInitial ( Vect< real\_t > & u, Vect< real\_t > & v)

Set initial condition for a system of differential equations.

in	и	Vector containing initial condition for the unknown	
in	v	Vector containing initial condition for the time derivative of the unknown	

#### Note

This function can be used to provide solution at previous time step if a restarting procedure is used.

This member function is to be used only in the case of a second order system

# void setInitialRHS ( Vect< real\_t > & f )

Set initial RHS for a system of differential equations when the used scheme requires it.

Giving the right-hand side at initial time is somtimes required for high order methods like Runge-Kutta

#### Parameters

in	f	Vector containing right-hand side at initial time. This vector is helpful for high order
		methods

#### Note

This function can be used to provide solution at previous time step if a restarting procedure is used.

## void setNewmarkParameters ( real\_t beta, real\_t gamma )

Define parameters for the Newmark scheme.

#### Parameters

in	beta	Parameter beta [Default: 0.25]
in	gamma	Parameter gamma [Default: 0.5]

## void setConstantMatrix ( )

Say that matrix problem is constant.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

# void setNonConstantMatrix ( )

Say that matrix problem is variable.

This is useful if the linear system is solved by a factorization method but has no effect otherwise

## void setLinearSolver (Iteration $s = DIRECT\_SOLVER$ , Preconditioner $p = DIAG\_PREC$ )

Set linear solver data.

in	s	Solver identification parameter. To be chosen in the enumeration variable Iteration:
		DIRECT_SOLVER, CG_SOLVER, CGS_SOLVER, BICG_SOLVER,
		BICG_STAB_SOLVER, GMRES_SOLVER, QMR_SOLVER [Default: DIRECT_SOLVER]

in	p	Preconditioner identification parameter. To be chosen in the enumeration variable
		Preconditioner:
		IDENT_PREC, DIAG_PREC, ILU_PREC [Default: DIAG_PREC]

## Note

The argument *p* has no effect if the solver is DIRECT\_SOLVER

#### void setVerbose ( int v = 0 )

Set verbosity parameter:

- = 0, No output
- = 1, Print step label and time value
- = 2, Print step label, time value, time step and integration scheme

# real\_t runOneTimeStep ( )

Run one time step.

#### Returns

Value of new time step if this one is updated

# void run ( bool opt = false )

Run the time stepping procedure.

#### **Parameters**

in	opt	Flag to say if problem matrix is constant while time stepping (true) or not (Default value is false)
----	-----	--

## Note

This argument is not used if the time stepping scheme is explicit

# void Assembly (const Element & el, real\_t \* b, real\_t \* A0, real\_t \* A1, real\_t \* A2 = NULL)

Assemble element arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes

in	el	Reference to Element class	
in	b	Pointer to element right-hand side	
in	A0	Pointer to matrix of 0-th order term (involving no time derivative)	

in	A1	Pointer to matrix of first order term (involving time first derivative)
in	A2	Pointer to matrix of second order term (involving time second derivative) [Default: NULL]

# void SAssembly ( const Side & sd, real\_t \* b, real\_t \* A = NULL )

Assemble side arrays into global matrix and right-hand side.

This member function is to be called from finite element equation classes


#### **Parameters**

in	sd	Reference to Side class
in	b	Pointer to side right-hand side
in	Α	Pointer to matrix e) [Default: NULL]

# 7.103 TINS2DT3B Class Reference

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Inheritance diagram for TINS2DT3B:

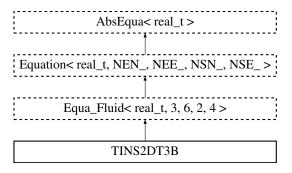

# **Public Member Functions**

• TINS2DT3B ()

Default Constructor.

- TINS2DT3B (Mesh &mesh, Vect< real\_t > &u, Vect< real\_t > &p, real\_t &ts, real\_t Re=0.) Constructor using mesh.
- ~TINS2DT3B ()

Destructor.

• void setInput (EqDataType opt, Vect< real\_t > &u)

Set equation input data.

• int runOneTimeStep ()

Run one time step.

• int run ()

Run (in the case of one step run)

• void updateBC (const Element &el, const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void updateBC (const Vect< real\_t > &bc)

Update Right-Hand side by taking into account essential boundary conditions.

• void DiagBC (int dof\_type=NODE\_DOF, int dof=0)

Update element matrix to impose bc by diagonalization technique.

• void LocalNodeVector (Vect< real\_t > &b)

Localize Element Vector from a Vect instance.

• void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEE\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementNodeVector (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be, int dof)

  Localize Element Vector from a Vect instance.
- void ElementNodeVectorSingleDOF (const Vect< real\_t > &b, LocalVect< real\_t, NEN\_ > &be)

Localize Element Vector from a Vect instance.

- void ElementSideVector (const Vect< real\_t > &b, LocalVect< real\_t, NSE\_ > &be)

  Localize Element Vector from a Vect instance.
- void ElementVector (const Vect< real\_t > &b, int dof\_type=NODE\_FIELD, int flag=0)
   Localize Element Vector.
- void SideVector (const Vect< real\_t > &b)

Localize Side Vector.

void ElementNodeCoordinates ()

Localize coordinates of element nodes.

void SideNodeCoordinates ()

Localize coordinates of side nodes.

void ElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one.

void ElementAssembly (PETScMatrix< real\_t > &A)

Assemble element matrix into global one.

• void ElementAssembly (PETScVect< real\_t > &b)

Assemble element right-hand side vector into global one.

void ElementAssembly (BMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkSMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SkMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (TrMatrix< real\_t > &A)

Assemble element matrix into global one.

void ElementAssembly (Vect< real\_t > &v)

Assemble element vector into global one.

void SideAssembly (PETScMatrix < real\_t > &A)

Assemble side matrix into global one.

void SideAssembly (PETScVect< real\_t > &b)

Assemble side right-hand side vector into global one.

void SideAssembly (Matrix < real\_t > \*A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkSMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SkMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (SpMatrix < real\_t > &A)

Assemble side (edge or face) matrix into global one.

void SideAssembly (Vect< real\_t > &v)

Assemble side (edge or face) vector into global one.

void DGElementAssembly (Matrix< real\_t > \*A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SkSMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void DGElementAssembly (SkMatrix< real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (SpMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

• void DGElementAssembly (TrMatrix < real\_t > &A)

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

void AxbAssembly (const Element &el, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of element matrix by element vector into global vector.

void AxbAssembly (const Side &sd, const Vect< real\_t > &x, Vect< real\_t > &b)

Assemble product of side matrix by side vector into global vector.

• size\_t getNbNodes () const

Return number of element nodes.

size\_t getNbEq () const

Return number of element equations.

void setInitialSolution (const Vect< real\_t > &u)

Set initial solution (previous time step)

• real\_t setMaterialProperty (const string &exp, const string &prop)

Define a material property by an algebraic expression.

void setMesh (Mesh &m)

Define mesh and renumber DOFs after removing imposed ones.

• Mesh & getMesh () const

Return reference to Mesh instance.

• LinearSolver < real\_t > & getLinearSolver ()

Return reference to linear solver instance.

• void setSolver (Iteration ls, Preconditioner pc=IDENT\_PREC)

Choose solver for the linear system.

• int SolveLinearSystem (Matrix < real\_t > \*A, Vect < real\_t > &b, Vect < real\_t > &x)

Solve the linear system.

## **Public Attributes**

• LocalMatrix< real\_t, NEE\_, NEE\_ > eMat

LocalMatrix instance containing local matrix associated to current element.

• LocalMatrix< real\_t, NSE\_, NSE\_ > sMat

LocalMatrix instance containing local matrix associated to current side.

• LocalVect< real\_t, NEE\_> ePrev

LocalVect instance containing local vector associated to current element.

• LocalVect< real\_t, NEE\_ > eRHS

LocalVect instance containing local right-hand side vector associated to current element.

• LocalVect< real\_t, NEE\_> eRes

LocalVect instance containing local residual vector associated to current element.

LocalVect< real\_t, NSE\_> sRHS

LocalVect instance containing local right-hand side vector associated to current side.

## **Protected Member Functions**

• void Viscosity (const real\_t &visc)

Set (constant) Viscosity.

• void Viscosity (const string &exp)

Set viscosity given by an algebraic expression.

• void Density (const real\_t &dens)

Set (constant) Viscosity.

void Density (const string &exp)

Set Density given by an algebraic expression.

void ThermalExpansion (const real\_t \*e)

Set (constant) thermal expansion coefficient.

void ThermalExpansion (const string &exp)

Set thermal expansion coefficient given by an algebraic expression.

• void setMaterial ()

Set material properties.

• void Init (const Element \*el)

Set element arrays to zero.

• void Init (const Side \*sd)

Set side arrays to zero.

# 7.103.1 Detailed Description

Builds finite element arrays for thermal diffusion and convection in 2-D domains using 3-Node triangles.

Note that members calculating element arrays have as an argument a double coef that will be multiplied by the contribution of the current element. This makes possible testing different algorithms.

## 7.103.2 Constructor & Destructor Documentation

TINS2DT3B ( Mesh & mesh, Vect< real\_t > & u, Vect< real\_t > & p, real\_t & ts, real\_t Re = 0. )

Constructor using mesh.

in	mesh	Mesh instance
in,out	и	Vect instance containing initial velocity. This vector is updated during computations and will therefore contain velocity at each time step
out	р	Vect instance that will contain pressure at nodes. This vector is updated during computations and will therefore contain pressure at each time step
in	ts	Time step
in	Re	Reynolds number. The default value (0) means that no Reynolds number is given and problem data are supplied by material properties. If Re has any other value, then nondimensional form of the equations is assumed and material properties are ignored.

# 7.103.3 Member Function Documentation

void setInput ( EqDataType opt, Vect< real\_t > & u )

Set equation input data.

#### Parameters

in	opt	Parameter to select type of input (enumerated values)
		INITIAL_FIELD: Initial temperature
		BOUNDARY_CONDITION_DATA: Boundary condition (Dirichlet)
		SOURCE_DATA: Heat source
		FLUX_DATA: Heat flux (Neumann boundary condition)
		VELOCITY_FIELD: Velocity vector (for the convection term)
in	и	Vector containing input data (Vect instance)

# void updateBC ( const Element & el, const Vect< real\_t > & bc ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

#### Parameters

in	el	Reference to current element instance
in	bc	Vector that contains imposed values at all DOFs

# ${f void\ update BC\ (\ const\ Vect < real\_t > \&\ bc}$ ) [inherited]

Update Right-Hand side by taking into account essential boundary conditions.

## Parameters

in	bc	Vector that contains imposed values at all DOFs
----	----	---

#### Remarks

The current element is pointed by \_theElement

# void DiagBC ( int dof\_type = NODE\_DOF, int dof = 0 ) [inherited]

Update element matrix to impose bc by diagonalization technique.

## Parameters

in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
in	dof	DOF setting:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF No. dof is handled in the system

# $void\ LocalNodeVector\ (\ Vect < real\_t > \&\ b\ )\ [inherited]$

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Reference to global vector to be localized. The resulting local vector can be accessed
		by attribute ePrev. This member function is to be used if a constructor with Element
		was invoked.

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

in	b	Global vector to be localized.	
out	be	Local vector, the length of which is the total number of element equations.	

#### Remarks

All degrees of freedom are transferred to the local vector

# void ElementNodeVector ( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be, int dof ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.
in	in dof Degree of freedom to transfer to the local vector	

## Remarks

Only yhe dega dof is transferred to the local vector

# void ElementNodeVectorSingleDOF( const Vect< real\_t > & b, LocalVect< real\_t , NEN\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

#### Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is the total number of element equations.

#### Remarks

Vector b is assumed to contain only one degree of freedom by node.

# void ElementSideVector ( const Vect< real\_t > & b, LocalVect< real\_t , NSE\_ > & be ) [inherited]

Localize Element Vector from a Vect instance.

## Parameters

in	b	Global vector to be localized.
out	be	Local vector, the length of which is

void ElementVector ( const Vect< real\_t > & b, int  $dof_type = NODE_FIELD$ , int flag = 0 ) [inherited]

Localize Element Vector.

in	b	Global vector to be localized
in	dof_type	DOF type option. To choose among the enumerated values:
		NODE_FIELD, DOFs are supported by nodes [Default]
		<ul> <li>ELEMENT_FIELD, DOFs are supported by elements</li> </ul>
		SIDE_FIELD, DOFs are supported by sides
in	flag	Option to set:
		• = 0, All DOFs are taken into account [Default]
		• != 0, Only DOF number dof is handled in the system
		The resulting local vector can be accessed by attribute ePrev.

#### Remarks

This member function is to be used if a constructor with Element was invoked. It uses the Element pointer \_theElement

## void SideVector ( const Vect< real $_t > \& b$ ) [inherited]

Localize Side Vector.

## Parameters

in	b	Global vector to be localized
		NODE_FIELD, DOFs are supported by nodes [ default ]
		ELEMENT_FIELD, DOFs are supported by elements
		SIDE_FIELD, DOFs are supported by sides
		The resulting local vector can be accessed by attribute ePrev.

## Remarks

This member function is to be used if a constructor with Side was invoked. It uses the Side pointer  $\_\mathtt{theSide}$ 

# void ElementNodeCoordinates( ) [inherited]

Localize coordinates of element nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}$ 

## Remarks

This member function uses the Side pointer \_theSide

#### void SideNodeCoordinates() [inherited]

Localize coordinates of side nodes.

Coordinates are stored in array  $_{x}[0]$ ,  $_{x}[1]$ , ... which are instances of class  $_{cont}<_{cont}$ 

#### Remarks

This member function uses the Element pointer \_theElement

## void ElementAssembly ( $Matrix < real_t > *A$ ) [inherited]

Assemble element matrix into global one.

#### **Parameters**

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( PETScMatrix< real\_t> & A ) [inherited]

Assemble element matrix into global one.

## Parameters

A Reference to global matrix

#### Warning

The element pointer is given by the global variable the Element

## void ElementAssembly ( PETScVect< real $_{ ext{-}}t > \& b$ ) [inherited]

Assemble element right-hand side vector into global one.

## Parameters

*b* Reference to global right-hand side vector

## Warning

The element pointer is given by the global variable the Element

#### void ElementAssembly ( $BMatrix < real_t > & A$ ) [inherited]

Assemble element matrix into global one.

A Global matrix stored as a BMatrix instance

# Warning

The element pointer is given by the global variable the Element

 $\label{eq:condition} \mbox{\bf void ElementAssembly ( $SkSMatrix{<}\,real\_t > \&\,A\ ) \quad [\mbox{\it inherited}]}$ 

Assemble element matrix into global one.

#### **Parameters**

A Global matrix stored as an SkSMatrix instance

## Warning

The element pointer is given by the global variable the Element

 $void\ ElementAssembly\ (\ SkMatrix{<}\ real\_t > \&\ A\ )\ [inherited]$ 

Assemble element matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkMatrix instance

## Warning

The element pointer is given by the global variable the Element

 ${f void \ Element Assembly ( \ SpMatrix < real\_t > \& A ) \ [inherited]}$ 

Assemble element matrix into global one.

# Parameters

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

void ElementAssembly (  $TrMatrix < real_t > & A$  ) [inherited]

Assemble element matrix into global one.

# Warning

The element pointer is given by the global variable the Element

# void ElementAssembly ( $Vect < real_t > \& v$ ) [inherited]

Assemble element vector into global one.

#### **Parameters**

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The element pointer is given by the global variable the Element

# ${f void\ Side Assembly\ (\ PETScMatrix < real\_t > \&\ A\ )} \quad \hbox{[inherited]}$

Assemble side matrix into global one.

#### Parameters

d		
	A	Reference to global matrix

# Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ PETScVect < real\_t > \&\ b}$ ) [inherited]

Assemble side right-hand side vector into global one.

#### **Parameters**

*b* Reference to global right-hand side vector

# Warning

The side pointer is given by the global variable the Side

# ${f void \ Side Assembly \ ( \ Matrix < real\_t > *A \ ) \ \ [inherited]}$

Assemble side (edge or face) matrix into global one.

A Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix, SpMatrix)

## Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ SkSMatrix{<}\ real\_t>\&A\ )}\quad [{\tt inherited}]$

Assemble side (edge or face) matrix into global one.

#### **Parameters**

in	A	Global matrix stored as an SkSMatrix instance
----	---	---

# Warning

The side pointer is given by the global variable the Side

# void SideAssembly ( SkMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

## Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

# Warning

The side pointer is given by the global variable the Side

## void SideAssembly ( SpMatrix < real\_t > & A ) [inherited]

Assemble side (edge or face) matrix into global one.

#### **Parameters**

	in	A	Global matrix stored as an SpMatrix instance
--	----	---	--

## Warning

The side pointer is given by the global variable the Side

# ${f void\ Side Assembly\ (\ Vect < real\_t > \&\ v\ )}$ [inherited]

Assemble side (edge or face) vector into global one.

	in	v	Global vector (Vect instance)
--	----	---	-------------------------------

## Warning

The side pointer is given by the global variable the Side

# $void\ DGElementAssembly\ (\ Matrix{<}\ real\_t>*A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### **Parameters**

A	Pointer to global matrix (abstract class: can be any of classes SkSMatrix, SkMatrix,
	SpMatrix)

#### Warning

The element pointer is given by the global variable the Element

# ${\bf void\ DGElement Assembly\ (\ SkSMatrix{<}\ real\_t>\&\ A\ )\quad [{\tt inherited}]}$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

		_
A	Global matrix stored as an SkSMatrix instance	

## Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( SkMatrix < real.t > & A ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

# Parameters

in	A	Global matrix stored as an SkMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# $void\ DGElementAssembly\ (\ SpMatrix < real\_t > \&\ A\ )\ [inherited]$

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

in	A	Global matrix stored as an SpMatrix instance
----	---	--

# Warning

The element pointer is given by the global variable the Element

## void DGElementAssembly ( $TrMatrix < real_t > \& A$ ) [inherited]

Assemble element matrix into global one for the Discontinuous Galerkin approximation.

#### Parameters

in	A	Global matrix stored as an TrMatrix instance
----	---	--

## Warning

The element pointer is given by the global variable the Element

# void AxbAssembly ( const Element & el, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of element matrix by element vector into global vector.

## Parameters

in	el	Reference to Element instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector to add (Vect instance)	

# void AxbAssembly ( const Side & sd, const Vect< real\_t > & x, Vect< real\_t > & b ) [inherited]

Assemble product of side matrix by side vector into global vector.

## Parameters

in	sd	Reference to Side instance	
in	x	Global vector to multiply by (Vect instance)	
out	b	Global vector (Vect instance)	

# real\_t setMaterialProperty ( const string & exp, const string & prop ) [inherited]

Define a material property by an algebraic expression.

in	ехр	Algebraic expression
in	prop	Property name

#### Returns

Return value in expression evaluation:

- =0, Normal evaluation
- !=0, An error message is displayed

# Mesh& getMesh ( ) const [inherited]

Return reference to Mesh instance.

## Returns

Reference to Mesh instance

# void setSolver ( Iteration ls, Preconditioner $pc = IDENT\_PREC$ ) [inherited]

Choose solver for the linear system.

in	ls	Solver of the linear system. To choose among the enumerated values: DIRECT_SOLVER, CG_SOLVER, GMRES_SOLVER	
		DIRECT_SOLVER, Use a facorization solver [default]	
		CG_SOLVER, Conjugate Gradient iterative solver	
		CGS_SOLVER, Squared Conjugate Gradient iterative solver	
		BICG_SOLVER, BiConjugate Gradient iterative solver	
		BICG_STAB_SOLVER, BiConjugate Gradient Stabilized iterative solver	
		GMRES_SOLVER, GMRES iterative solver	
		• QMR_SOLVER, QMR iterative solver	
in	рс	Preconditioner to associate to the iterative solver. If the direct solver was chosen for the first argument this argument is not used. Otherwise choose among the enumerated values:	
		IDENT_PREC, Identity preconditioner (no preconditioning [default])	
		DIAG_PREC, Diagonal preconditioner	
		ILU_PREC, Incomplete LU factorization preconditioner	

# int SolveLinearSystem ( Matrix< real\_t > \* A, Vect< real\_t > & b, Vect< real\_t > & x ) [inherited]

Solve the linear system.

#### **Parameters**

in	A	Pointer to matrix of the system (Instance of class SpMatrix)
in	b	Vector containing right-hand side
in,out	x	Vector containing initial guess of solution on input, actual solution on output

# 7.103.4 Member Data Documentation


LocalVect<real\_t,NEE\_> ePrev [inherited]

LocalVect instance containing local vector associated to current element.

This vector has been stored as the one at previous iteration or previous time step

# 7.104 Triang3 Class Reference

Defines a 3-Node (P<sub>1</sub>) triangle. Inheritance diagram for Triang3:

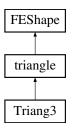

# **Public Member Functions**

• Triang3 ()

Default Constructor.

• Triang3 (const Element \*el)

Constructor for an element.

• Triang3 (const Side \*sd)

Constructor for a side.

• ~Triang3 ()

Destructor.

• void set (const Element \*el)

Choose element by giving its pointer.

• void set (const Side \*sd)

Choose side by giving its pointer.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node at a given point.

• Point< real\_t > DSh (size\_t i) const

Calculate derivatives of shape function of node i

• real\_t getInterpolate (const Point< real\_t > &x, const LocalVect< real\_t, 3 > &v)

Return interpolated value at point of coordinate x

real\_t check () const

Check element area and number of nodes.

• Point< real\_t > Grad (const LocalVect< real\_t, 3 > &u) const

Return constant gradient vector in triangle.

real\_t getMaxEdgeLength () const

Return maximal edge length of triangle.

real\_t getMinEdgeLength () const

Return minimal edge length of triangle.

real\_t getArea ()

Return element area.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

• Point< real\_t > getCircumcenter () const

Return coordinates of circumcenter of element.

• real\_t getCircumRadius () const

Return radius of circumscribed circle of triangle.

real\_t getInRadius () const

Return radius of inscribed circle of triangle.

Point< real\_t > getRefCoord (const Point< real\_t > &x) const

Return reference coordinates of a point x in element.

• bool isIn (const Point < real\_t > &x) const

Check whether point x is in current triangle or not.

• bool isStrictlyIn (const Point< real\_t > &x) const

Check whether point x is strictly in current triangle (not on the boundary) or not.

real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t getDet () const

Return determinant of jacobian.

• Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.104.1 Detailed Description

Defines a 3-Node  $(P_1)$  triangle.

The reference element is the rectangle triangle with two unit edges.

## 7.104.2 Constructor & Destructor Documentation

Triang3 (const Element \*el)

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

# Triang3 (const Side \* sd)

Constructor for a side.

The constructed triangle is a side in a 3-D mesh.

#### 7.104.3 Member Function Documentation

### real\_t Sh ( size\_t i, Point< real\_t > s ) const

Calculate shape function of node at a given point.

#### **Parameters**

in	i	Label (local) of node
in	S	Natural coordinates of node where to evaluate

## real\_t check ( ) const

Check element area and number of nodes.

#### Returns

- > 0: m is the length
- = 0: zero length (=> Error)

# Point<real\_t> Grad ( const LocalVect< real\_t, 3 > & u ) const

Return constant gradient vector in triangle.

# Parameters

in	и	Local vector for which the gradient is evaluated

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

# Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.


# $Point < real_t > getLocalPoint (const Point < real_t > & s) const [inherited]$

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.105 Triang6S Class Reference

Defines a 6-Node straight triangular finite element using P<sub>2</sub> interpolation. Inheritance diagram for Triang6S:

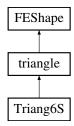

## **Public Member Functions**

• Triang6S ()

Default Constructor.

Triang6S (const Element \*el)

Constructor for an element.

• ~Triang6S ()

Destructor.

• real\_t Sh (size\_t i, const Point< real\_t > &s) const

Calculate shape function of a node.

• Point< real\_t > DSh (size\_t i, const Point< real\_t > &s) const

Calculate derivatives of shape function of a node.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

 $\bullet \ \ Point < real\_t > Grad \ (const \ Local Vect < real\_t, 6 > \&u, const \ Point < real\_t > \&s) \ const$ 

Return gradient vector in triangle at a given point.

real\_t getMaxEdgeLength () const

Return maximal edge length of triangle.

real\_t getMinEdgeLength () const

Return minimal edge length of triangle.

real\_t getArea ()

Return element area.

• Point< real\_t > getCircumcenter () const

Return coordinates of circumcenter of element.

• real\_t getCircumRadius () const

Return radius of circumscribed circle of triangle.

• real\_t getInRadius () const

Return radius of inscribed circle of triangle.

• Point< real\_t > getRefCoord (const Point< real\_t > &x) const

Return reference coordinates of a point x in element.

• bool isIn (const Point< real\_t > &x) const

Check whether point x is in current triangle or not.

• bool isStrictlyIn (const Point< real\_t > &x) const

Check whether point x is strictly in current triangle (not on the boundary) or not.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t Sh (size\_t i, Point< real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

• real\_t getDet () const

Return determinant of jacobian.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.105.1 Detailed Description

Defines a 6-Node straight triangular finite element using  $P_2$  interpolation. The reference element is the rectangle triangle with two unit edges.

## 7.105.2 Constructor & Destructor Documentation

# Triang6S (const Element \* el )

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

## Parameters

in	el	Pointer to Element instance
in	el	Pointer to Element instance

# 7.105.3 Member Function Documentation

real\_t Sh ( size\_t i, const Point< real\_t > & s ) const

Calculate shape function of a node.

## **Parameters**

in	i	Local label of the node $1 \le i \le 6$
in	S	Local coordinates of the point where the shape function is evaluated

# Point<real\_t> DSh ( size\_t i, const Point< real\_t> & s ) const

Calculate derivatives of shape function of a node.

in	i	Local label of node	
in	S	Local coordinates of the point where the gradient of the shape function is evaluated	

#### Point<real\_t> Grad ( const LocalVect< real\_t, 6 > & u, const Point< real\_t > & s ) const

Return gradient vector in triangle at a given point.

#### **Parameters**

in	S	Local coordinates of the point where the gradient of the shape function is evaluated
in	и	Local vector for which the gradient is evaluated

### real\_t Sh ( size\_t i, Point < real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

#### **Parameters**

in	i	Local node label
in	S	Point in the reference triangle where the shape function is evaluated

#### Point<real\_t> DSh ( size\_t i ) const [inherited]

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

# Parameters

ı			
	in	i	Partial derivative index (1, 2 or 3)

## real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.106 triangle Class Reference

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

Inheritance diagram for triangle:

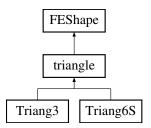

## **Public Member Functions**

• triangle ()

Default Constructor.

• triangle (const Element \*el)

Constructor for an element.

• triangle (const Side \*sd)

Constructor for a side.

• virtual ~triangle ()

Destructor.

• real\_t getArea ()

Return element area.

Point< real\_t > getCenter () const

 $Return\ coordinates\ of\ center\ of\ element.$ 

• Point< real\_t > getCircumcenter () const

Return coordinates of circumcenter of element.

real\_t getCircumRadius () const

Return radius of circumscribed circle of triangle.

• real\_t getInRadius () const

Return radius of inscribed circle of triangle.

• Point< real\_t > getRefCoord (const Point< real\_t > &x) const

Return reference coordinates of a point x in element.

• real\_t getMaxEdgeLength () const

Return maximal edge length of triangle.

real\_t getMinEdgeLength () const

Return minimal edge length of triangle.

• bool isIn (const Point< real\_t > &x) const

Check whether point x is in current triangle or not.

bool isStrictlyIn (const Point< real\_t > &x) const

Check whether point  $\boldsymbol{x}$  is strictly in current triangle (not on the boundary) or not.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

• real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

• real\_t getDet () const

Return determinant of jacobian.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

• Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.106.1 Detailed Description

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

## 7.106.2 Constructor & Destructor Documentation

### triangle ( const Element \*el )

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

## triangle (const Side \* sd)

Constructor for a side.

The constructed triangle is a side in a 3-D mesh.

## 7.106.3 Member Function Documentation

real\_t Sh ( size\_t i, Point< real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

# Parameters

in	i	Local node label
in	S	Point in the reference triangle where the shape function is evaluated

# Point<real\_t> DSh ( size\_t i ) const [inherited]

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

#### **Parameters**

	in	i	Partial derivative index (1, 2 or 3)
--	----	---	--------------------------------------

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

# Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.


## Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]

Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.107 triangle Class Reference

Defines a triangle. The reference element is the rectangle triangle with two unit edges. Inheritance diagram for triangle:

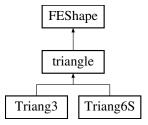

## **Public Member Functions**

• triangle ()

Default Constructor.

• triangle (const Element \*el)

Constructor for an element.

• triangle (const Side \*sd)

Constructor for a side.

• virtual ~triangle ()

Destructor.

real\_t getArea ()

Return element area.

• Point< real\_t > getCenter () const

Return coordinates of center of element.

Point< real\_t > getCircumcenter () const

Return coordinates of circumcenter of element.

• real\_t getCircumRadius () const

Return radius of circumscribed circle of triangle.

• real\_t getInRadius () const

Return radius of inscribed circle of triangle.

Point< real\_t > getRefCoord (const Point< real\_t > &x) const

Return reference coordinates of a point x in element.

real\_t getMaxEdgeLength () const

Return maximal edge length of triangle.

real\_t getMinEdgeLength () const

Return minimal edge length of triangle.

• bool isIn (const Point < real\_t > &x) const

Check whether point x is in current triangle or not.

bool isStrictlyIn (const Point< real\_t > &x) const

Check whether point x is strictly in current triangle (not on the boundary) or not.

• real\_t Sh (size\_t i) const

Return shape function of node i at given point.

real\_t Sh (size\_t i, Point < real\_t > s) const

Calculate shape function of node i at a given point s.

• Point< real\_t > DSh (size\_t i) const

Return derivatives of shape function of node i at a given point.

real\_t getDet () const

Return determinant of jacobian.

Point< real\_t > getLocalPoint () const

Localize a point in the element.

Point< real\_t > getLocalPoint (const Point< real\_t > &s) const

Localize a point in the element.

# 7.107.1 Detailed Description

Defines a triangle. The reference element is the rectangle triangle with two unit edges.

# 7.107.2 Constructor & Destructor Documentation

# triangle ( const Element \*el )

Constructor for an element.

The constructed triangle is an element in a 2-D mesh.

## triangle ( const Side \*sd )

Constructor for a side.

The constructed triangle is a side in a 3-D mesh.

## 7.107.3 Member Function Documentation

real\_t Sh ( size\_t i, Point < real\_t > s ) const [inherited]

Calculate shape function of node i at a given point s.

#### Parameters

in	i	Local node label
in	s	Point in the reference triangle where the shape function is evaluated

## Point<real\_t> DSh ( size\_t i ) const [inherited]

Return derivatives of shape function of node i at a given point.

If the transformation (Reference element -> Actual element) is not affine, member function setLocal() must have been called before in order to calcuate relevant quantities.

#### **Parameters**

in i	Partial derivative index (1, 2 or 3)
------	--------------------------------------

# real\_t getDet( ) const [inherited]

Return determinant of jacobian.

If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

#### Point<real\_t> getLocalPoint( ) const [inherited]

Localize a point in the element.

Return actual coordinates in the reference element. If the transformation (Reference element -> Actual element) is not affine, member function **setLocal()** must have been called before in order to calcuate relevant quantities.

## Point<real\_t> getLocalPoint( const Point< real\_t> & s ) const [inherited]


Localize a point in the element.

Return actual coordinates where s are coordinates in the reference element.

# 7.108 TrMatrix< T $_->$ Class Template Reference

To handle tridiagonal matrices.

Inheritance diagram for TrMatrix< T₋>:



# **Public Member Functions**

• TrMatrix ()

Default constructor.

• TrMatrix (size\_t size)

Constructor for a tridiagonal matrix with size rows.

• TrMatrix (const TrMatrix &m)

Copy Constructor.

• ∼TrMatrix ()

Destructor.

• void Identity ()

Define matrix as identity matrix.

• void Diagonal ()

Define matrix as a diagonal one.

• void Diagonal (const T<sub>-</sub> &a)

Define matrix as a diagonal one with diagonal entries equal to a

• void Laplace1D (real\_t h)

*Sets the matrix as the one for the Laplace equation in 1-D.* 

• void setSize (size\_t size)

Set size (number of rows) of matrix.

• void MultAdd (const Vect< T\_> &x, Vect< T\_> &y) const

Multiply matrix by vector x and add result to y.

void MultAdd (T<sub>-</sub> a, const Vect< T<sub>-</sub> > &x, Vect< T<sub>-</sub> > &y) const

Multiply matrix by vector **a**\***x** and add result to y.

• void Mult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply matrix by vector x and save result in y.

• void TMult (const Vect< T $_->$  &x, Vect< T $_->$  &y) const

Multiply transpose of matrix by vector x and save result in y.

• void Axpy (T<sub>-</sub> a, const TrMatrix < T<sub>-</sub> > &m)

Add to matrix the product of a matrix by a scalar.

• void Axpy  $(T_- a, const Matrix < T_- > *m)$ 

Add to matrix the product of a matrix by a scalar.

• void set (size\_t i, size\_t j, const T\_ &val)

Assign constant val to an entry (i, j) of the matrix.

• void add (size\_t i, size\_t j, const T\_ &val)

Add constant val value to an entry (i, j) of the matrix.

• T\_ operator() (size\_t i, size\_t j) const

Operator () (Constant version).

• T<sub>-</sub> & operator() (size\_t i, size\_t j)

Operator () (Non constant version).

• TrMatrix< T\_> & operator= (const TrMatrix< T\_> &m)

Operator =.

• TrMatrix< T\_> & operator= (const T\_ &x)

 $Operator = Assign \ matrix \ to \ identity \ times \ x.$ 

• TrMatrix< T<sub>−</sub> > & operator\*= (const T<sub>−</sub> &x)

*Operator* \*=.

• int solve (Vect<  $T_->$  &b)

Solve a linear system with current matrix (forward and back substitution).

• int solve (const Vect<  $T_->$  &b, Vect<  $T_->$  &x)

Solve a linear system with current matrix (forward and back substitution).

• T\_\* get () const

Return C-Array.

• T<sub>\_</sub> get (size\_t i, size\_t j) const

Return entry (i, j) of matrix.

• size\_t getNbRows () const

Return number of rows.

• size\_t getNbColumns () const

Return number of columns.

void setPenal (real\_t p)

Set Penalty Parameter (For boundary condition prescription).

• void setDiagonal ()

Set the matrix as diagonal.

• void setDiagonal (Mesh &mesh)

Initialize matrix storage in the case where only diagonal terms are stored.

• T<sub>-</sub> getDiag (size<sub>-</sub>t k) const

Return k-th diagonal entry of matrix.

• size\_t size () const

Return matrix dimension (Number of rows and columns).

void Assembly (const Element &el, T<sub>-</sub> \*a)

Assembly of element matrix into global matrix.

void Assembly (const Element &el, const DMatrix< T<sub>-</sub> > &a)

Assembly of element matrix into global matrix.

• void Assembly (const Side &sd, T<sub>-</sub>\*a)

Assembly of side matrix into global matrix.

• void Assembly (const Side &sd, const DMatrix < T\_ > &a)

Assembly of side matrix into global matrix.

• void Prescribe (Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

• void Prescribe (int dof, int code, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

• void Prescribe (Vect< T<sub>-</sub> > &b, int flag=0)

*Impose by a penalty method a homegeneous* (=0) *essential boundary condition.* 

• void Prescribe (size\_t dof, Vect< T\_> &b, const Vect< T\_> &u, int flag=0)

Impose by a penalty method an essential boundary condition when only one DOF is treated.

• void PrescribeSide ()

Impose by a penalty method an essential boundary condition when DOFs are supported by sides.

• virtual int Factor ()=0

Factorize matrix. Available only if the storage class enables it.

• int FactorAndSolve (Vect< T\_> &b)

Factorize matrix and solve the linear system.

• int FactorAndSolve (const Vect< T\_> &b, Vect< T\_> &x)

Factorize matrix and solve the linear system.

• size\_t getLength () const

Return number of stored terms in matrix.

• int isDiagonal () const

Say if matrix is diagonal or not.

• int isFactorized () const

Say if matrix is factorized or not.

• virtual size\_t getColInd (size\_t i) const

Return Column index for column i (See the description for class SpMatrix).

virtual size\_t getRowPtr (size\_t i) const

Return Row pointer for row i (See the description for class SpMatrix).

• T\_ operator() (size\_t i) const

Operator () with one argument (Constant version).

• T<sub>-</sub> & operator() (size<sub>-</sub>t i)

Operator () with one argument (Non Constant version).

• T<sub>-</sub> & operator[] (size<sub>-</sub>t k)

Operator [] (Non constant version).

• T\_ operator[] (size\_t k) const

Operator [] (Constant version).

• Matrix & operator+= (const Matrix < T\_ > &m)

*Operator* +=.

Matrix & operator+= (const T<sub>-</sub> &x)

*Operator* +=.

• Matrix & operator-= (const Matrix < T\_ > &m)

*Operator* -=.

• Matrix & operator-= (const T<sub>-</sub> &x)

Operator -=.

# 7.108.1 Detailed Description

```
template<class T_> class OFELI::TrMatrix< T_>
```

To handle tridiagonal matrices.

This class enables storing and manipulating tridiagonal matrices. The template parameter is the type of matrix entries

**Template Parameters** 

```
T_{\leftarrow} Data type (double, float, complex<double>, ...)
```

# 7.108.2 Member Function Documentation

# void Laplace1D ( real\_t h )

Sets the matrix as the one for the Laplace equation in 1-D.

The matrix is initialized as the one resulting from  $P_1$  finite element discretization of the classical elliptic operator -u'' = f with homogeneous Dirichlet boundary conditions

## Remarks

This function is available for real valued matrices only.

## Parameters

	in	h	Mesh size (assumed constant)	
--	----	---	------------------------------	--

## void setDiagonal ( Mesh & mesh ) [inherited]

Initialize matrix storage in the case where only diagonal terms are stored.

This member function is to be used for explicit time integration schemes

# T\_getDiag(size\_t k) const [inherited]

Return k-th diagonal entry of matrix.

First entry is given by **getDiag(1)**.

# void Assembly ( const Element & el, T\_\* a ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a C-array.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a C-array

# void Assembly (const Element & el, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of element matrix into global matrix.

Case where element matrix is given by a DMatrix instance.

#### **Parameters**

in	el	Pointer to element instance
in	а	Element matrix as a DMatrix instance

## void Assembly (const Side & sd, $T_-*a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a C-array.

## Parameters

in	sd	Pointer to side instance
in	а	Side matrix as a C-array instance

# void Assembly (const Side & sd, const DMatrix $< T_- > & a$ ) [inherited]

Assembly of side matrix into global matrix.

Case where side matrix is given by a DMatrix instance.

in	sd	Pointer to side instance
in	а	Side matrix as a DMatrix instance

# void Prescribe ( Vect< T $_->$ & b, const Vect< T $_->$ & u, int flag=0 ) [inherited]

Impose by a penalty method an essential boundary condition, using the Mesh instance provided by the constructor.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

#### **Parameters**

in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( int dof, int code, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition to a given degree of freedom for a given code.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

## Parameters

in	dof	Degree of freedom for which a boundary condition is to be enforced
in	code	Code for which a boundary condition is to be enforced
in,out	b	Vect instance that contains right-hand side.
in	и	Vect instance that contains imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void Prescribe ( Vect< T $_->$ & b, int flag = 0 ) [inherited]

Impose by a penalty method a homegeneous (=0) essential boundary condition.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

in,out	b	Vect instance that contains right-hand side.
--------	---	--

#### **Parameters**

in	flag	Parameter to determine whether only the right-hand side is to be modified
		(dof>0)
		or both matrix and right-hand side (dof=0, default value).

# void Prescribe ( size\_t dof, Vect< $T_-$ > & b, const Vect< $T_-$ > & u, int flag = 0 ) [inherited]

Impose by a penalty method an essential boundary condition when only one DOF is treated.

This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. This gunction is to be used if only one DOF per node is treated in the linear system. The penalty parameter is by default equal to 1.e20. It can be modified by member function setPenal.

#### **Parameters**

in	dof	Label of the concerned degree of freedom (DOF).
in,out	1, out b Vect instance that contains right-hand side.	
in	и	Vect instance that conatins imposed valued at DOFs where they are to be imposed.
in	flag	Parameter to determine whether only the right-hand side is to be modified (dof>0) or both matrix and right-hand side (dof=0, default value).

#### void PrescribeSide( ) [inherited]

Impose by a penalty method an essential boundary condition when DOFs are supported by sides. This member function modifies diagonal terms in matrix and terms in vector that correspond to degrees of freedom with nonzero code in order to impose a boundary condition. The penalty parameter is defined by default equal to 1.e20. It can be modified by member function **set**← **Penal**(..).

# int FactorAndSolve ( $Vect < T_- > \& b$ ) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage cass enables it.

# Parameters

$in,out \mid b \mid$ Vect instance that contains right-hand side on input and so	olution on output
--	-------------------

## int FactorAndSolve (const Vect< T $_->$ & b, Vect< T $_->$ & x) [inherited]

Factorize matrix and solve the linear system.

This is available only if the storage class enables it.

in	b	Vect instance that contains right-hand side

## 7.108. TRMATRIX < T\_ > CLASS TEMPLATE REFE**RENCE**TER 7. CLASS DOCUMENTATION

#### **Parameters**

out	x	Vect instance that contains solution	
-----	---	--------------------------------------	--

#### Returns

- 0 if solution was normally performed
- n if the n-th pivot is nul

### int isFactorized ( ) const [inherited]

Say if matrix is factorized or not.

If the matrix was not factorized, the class does not allow solving by a direct solver.

## T\_operator() ( size\_t i ) const [inherited]

Operator () with one argument (Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

## Parameters

in	i	entry index
----	---	-------------

# T\_& operator() ( size\_t i ) [inherited]

Operator () with one argument (Non Constant version).

Returns i-th position in the array storing matrix entries. The first entry is at location 1. Entries are stored row by row.

#### Parameters

in i	entry index
------	-------------

## T\_& operator[]( size\_t k ) [inherited]

Operator [] (Non constant version).

Returns k-th stored element in matrix Index k starts at 0.

# $T_{-}$ operator[]( size\_t k ) const [inherited]

Operator [] (Constant version).

Returns k-th stored element in matrix Index k starts at 0.

# Matrix& operator+= ( const Matrix $< T_- > & m$ ) [inherited]

Operator +=.

Add matrix m to current matrix instance.

## Matrix& operator+= ( const $T_- \& x$ ) [inherited]

Operator +=.

Add constant value x to all matrix entries.

## Matrix& operator== ( const Matrix< $T_->$ & m ) [inherited]

Operator -=.

Subtract matrix m from current matrix instance.

### Matrix& operator=( const $T_- & x )$ [inherited]

Operator -=.

Subtract constant value x from all matrix entries.

# 7.109 UserData $< T_- >$ Class Template Reference

Abstract class to define by user various problem data.

#### **Public Member Functions**

• UserData ()

Default Constructor.

UserData (const class Mesh &mesh)

Constructor using mesh instance.

• virtual ~UserData ()

Destructor.

• void setTime (real\_t time)

Set time value.

• void setDBC (Vect $< T_- > \&b$ )

Set Dirichlet Boundary Conditions.

• void setInitialData (Vect< T\_> &b)

Set initial data.

void setBodyForce (Vect< T<sub>-</sub> > &b)

Set Nodewise Body Force using a Vect instance.

• void setSurfaceForce (Vect< T\_> &b)

Set Surface Force.

• virtual T\_BoundaryCondition (Point< real\_t > x, int code, real\_t time=0., size\_t dof=1)

Define boundary condition to impose at point of coordinates x, with code code at time time, for DOF dof

• virtual T\_BodyForce (Point< real\_t > x, real\_t time=0., size\_t dof=1)

Define body force to impose at point of coordinates x, with code code at time time, for DOF dof

• virtual T\_SurfaceForce (Point< real\_t > x, int code, real\_t time=0., size\_t dof=1)

Define surface force to impose at point of coordinates x, with code code at time time, for DOF dof

• virtual T\_InitialData (Point< real\_t > x, size\_t dof=1)

Define initial data to impose at point of coordinates x, for DOF dof

# 7.109.1 Detailed Description

template<class T\_> class OFELI::UserData< T\_>

Abstract class to define by user various problem data.

The user has to implement a class that inherits from the present one where the virtual functions are implemented.

#### **Template Parameters**

< <i>T</i> ←	Data type (real_t, float, complex <real_t>,)</real_t>	1
_>		

# 7.109.2 Constructor & Destructor Documentation

UserData (const class Mesh & mesh)

Constructor using mesh instance.

#### **Parameters**

*mesh* Reference to Mesh instance

# 7.109.3 Member Function Documentation

void setDBC ( Vect<  $T_-$  > & b )

Set Dirichlet Boundary Conditions.

This function loops over all nodes and calls for each node the member function Boundary← Condition to assign the value defined by it

## **Parameters**

out	b	Vector that contains boundary conditions at nodes This vector must be sized before
		invoking this function

# void setInitialData ( Vect< T $_->$ & b )

Set initial data.

This function loops over all nodes and calls for each node the member function InitialData to assign the value defined by it

out	b	Vector that contains initial data at nodes This vector must be sized before invoking
		this function

# CHAPTER 7. CLASS DOCUMENT**XIII9**NUSERDATA $< T_- > CLASS$ TEMPLATE REFERENCE

## void setBodyForce ( Vect< $T_- > \& b$ )

Set Nodewise Body Force using a Vect instance.

## Parameters

in	b	Vector containing body forces at nodes to impose
----	---	--

This function loops over all nodes and calls for each node the member function BodyForce to assign the value defined by it

#### **Parameters**

out	b	Vector that contains body forces at nodes This vector must be sized before invoking
		this function

# void setSurfaceForce ( Vect< $T_- > \& b$ )

Set Surface Force.

#### Parameters

in	b	Vector containing surface forces at nodes to impose
----	---	---

This function loops over all nodes and calls for each node the member function SurfaceForce to assign the value defined by it

#### **Parameters**

out	b	Vector that contains body forces at nodes This vector must be sized before invoking
		this function

# virtual $T_-$ Boundary Condition ( Point < real\_t > x, int code, real\_t time = 0., size\_t dof = 1 ) [virtual]

Define boundary condition to impose at point of coordinates x, with code code at time time, for DOF dof

Function to implement by user

in	x	Coordinates of point at which the value is to be prescribed
in	code	Code of node for which the value is to be prescribed
in	time	Value of time [Default: 0.]
in	dof	Corresponding degree of freedom [Default: 1]

#### Returns

Value of boundary condition to prescribe corresponding to these parameters

# virtual T\_BodyForce ( Point< real\_t > x, real\_t time = 0., size\_t dof = 1 ) [virtual]

Define body force to impose at point of coordinates x, with code code at time time, for DOF dof Function to implement by user

#### **Parameters**

in	x	Coordinates of point at which the body force is given	
in	time	Value of time [Default: 0.]	
in	dof	dof Corresponding degree of freedom [Default: 1]	

#### Returns

Value of body force corresponding to these parameters

# virtual $T_-$ SurfaceForce ( Point< real\_t > x, int code, real\_t time = 0., size\_t dof = 1 ) [virtual]

Define surface force to impose at point of coordinates x, with code code at time time, for DOF dof

Function to implement by user

## Parameters

in	x	Coordinates of point at which the surface force is given	
in	code	Code of node for which the surface force is given	
in	time	Value of time [Default: 0.]	
in	dof	Corresponding degree of freedom [Default: 1]	

# Returns

Value of surface force corresponding to these parameters

# virtual $T_{-}$ Initial Data ( Point < real\_t > x, size\_t dof = 1 ) [virtual]

Define initial data to impose at point of coordinates x, for DOF dof Function to implement by user

iı	1	х	Coordinates of point at which the surface force is given
iı	1	dof	Corresponding degree of freedom [Default: 1]

#### Returns

Value of initial data corresponding to these parameters

# 7.110 Vect< T $_->$ Class Template Reference

To handle general purpose vectors.

# **Public Types**

typedef Eigen::Matrix< T\_, Eigen::Dynamic, 1 > VectorX
 This type is the vector type in the Eigen library.

### **Public Member Functions**

• Vect ()

Default Constructor. Initialize a zero-length vector.

• Vect (size\_t n)

Constructor setting vector size.

• Vect (size\_t nx, size\_t ny)

Constructor of a 2-D index vector.

• Vect (size\_t nx, size\_t ny, size\_t nz)

Constructor of a 3-D index vector.

• Vect (size\_t n, T\_ \*x)

Create an instance of class Vect as an image of a C/C++ array.

• Vect (Mesh &m, int nb\_dof=0, int dof\_type=NODE\_FIELD)

Constructor with a mesh instance.

• Vect (Mesh &m, string name, real\_t t=0.0, int nb\_dof=0, int dof\_type=NODE\_FIELD)

Constructor with a mesh instance giving name and time for vector.

• Vect (const Element \*el, const Vect < T\_ > &v)

Constructor of an element vector.

• Vect (const Side \*sd, const Vect< T\_> &v)

Constructor of a side vector.

• Vect (const Vect $< T_- > &v$ , const Vect $< T_- > &bc$ )

Constructor using boundary conditions.

• Vect (const Vect< T\_> &v, size\_t nb\_dof, size\_t first\_dof)

Constructor to select some components of a given vector.

• Vect (const Vect $< T_- > &v$ )

Copy constructor.

• Vect (const Vect< T\_> &v, size\_t n)

Constructor to select one component from a given 2 or 3-component vector.

• Vect (size\_t d, const Vect< T\_> &v, const string &name="")

Constructor that extracts some degrees of freedom (components) from given instance of Vect.

• Vect (const VectorX &v)

Constructor that copies the vector from a Eigen Vector instance.

• ~Vect ()

Destructor.

• void set (const T\_\*v, size\_t n)

*Initialize* vector with a c-array.

• void select (const Vect< T\_> &v, size\_t nb\_dof=0, size\_t first\_dof=1)

Initialize vector with another Vect instance.

• void set (const string &exp, size\_t dof=1)

Initialize vector with an algebraic expression.

• void set (const string &exp, const Vect< real\_t > &x)

Initialize vector with an algebraic expression.

void set (Mesh &ms, const string &exp, size\_t dof=1)

Initialize vector with an algebraic expression with providing mesh data.

void set (const Vect< real\_t > &x, const string &exp)

Initialize vector with an algebraic expression.

• void setMesh (Mesh &m, size\_t nb\_dof=0, size\_t dof\_type=NODE\_FIELD)

Define mesh class to size vector.

size\_t size () const

Return vector (global) size.

• void setSize (size\_t nx, size\_t ny=1, size\_t nz=1)

Set vector size (for 1-D, 2-D or 3-D cases)

• void resize (size\_t n)

Set vector size.

• void resize (size\_t n, T\_ v)

Set vector size and initialize to a constant value.

• void setDOFType (int dof\_type)

Set DOF type of vector.

• void setDG (int degree=1)

Set Discontinuous Galerkin type vector.

• size\_t getNbDOF () const

Return vector number of degrees of freedom.

• size\_t getNb () const

Return vector number of entities (nodes, elements or sides)

• Mesh & getMesh () const

Return Mesh instance.

bool WithMesh () const

Return true if vector contains a Mesh pointer, false if not.

- int getDOFType () const
- void setTime (real\_t t)

*Set time value for vector.* 

real\_t getTime () const

Get time value for vector.

void setName (string name)

Set name of vector.

• string getName () const

Get name of vector.

• real\_t getNorm1 () const

Calculate 1-norm of vector.

• real\_t getNorm2 () const

Calculate 2-norm (Euclidean norm) of vector.

real\_t getNormMax () const

Calculate Max-norm (Infinite norm) of vector.

• real\_t getWNorm1 () const

Calculate weighted 1-norm of vector The wighted 1-norm is the 1-Norm of the vector divided by its size.

real\_t getWNorm2 () const

Calculate weighted 2-norm of vector.

• T<sub>-</sub> getMin () const

Calculate Min value of vector entries.

• T<sub>-</sub> getMax () const

Calculate Max value of vector entries.

• size\_t getNx () const

Return number of grid points in the x-direction if grid indexing is set.

• size\_t getNy () const

Return number of grid points in the y-direction if grid indexing is set.

• size\_t getNz () const

Return number of grid points in the z-direction if grid indexing is set.

void setNodeBC (Mesh &m, int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector with given code.

• void setSideBC (Mesh &m, int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector corresponding to sides with given code.

• void setNodeBC (Mesh &m, int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

• void setSideBC (Mesh &m, int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector corresponding to sides with given code.

• void setNodeBC (int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector with given code.

void setNodeBC (int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

void setSideBC (int code, const string &exp, size\_t dof=1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

• void setSideBC (int code, T\_ val, size\_t dof=1)

Assign a given value to components of vector with given code.

• void removeBC (const Mesh &ms, const Vect< T\_> &v, int dof=0)

Remove boundary conditions.

• void removeBC (const Vect< T\_> &v, int dof=0)

Remove boundary conditions.

• void transferBC (const Vect< T<sub>-</sub> > &bc, int dof=0)

Transfer boundary conditions to the vector.

• void insertBC (Mesh &m, const Vect< T\_> &v, const Vect< T\_> &bc, int dof=0)

*Insert boundary conditions.* 

• void insertBC (Mesh &m, const Vect< T<sub>-</sub> > &v, int dof=0)

Insert boundary conditions.

• void insertBC (const Vect< T\_> &v, const Vect< T\_> &bc, int dof=0)

Insert boundary conditions.

• void insertBC (const Vect< T<sub>-</sub> > &v, int dof=0)

Insert boundary conditions.

• void Assembly (const Element &el, const Vect< T\_> &b)

Assembly of element vector into current instance.

• void Assembly (const Element &el, const T<sub>-</sub> \*b)

Assembly of element vector (as C-array) into Vect instance.

• void Assembly (const Side &sd, const Vect< T\_> &b)

Assembly of side vector into Vect instance.

• void Assembly (const Side &sd, T<sub>-</sub>\*b)

Assembly of side vector (as C-array) into Vect instance.

• void getGradient (class Vect< T\_> &v)

Evaluate the discrete Gradient vector of the current vector.

void getGradient (Vect< Point< T<sub>-</sub> >> &v)

Evaluate the discrete Gradient vector of the current vector.

• void getCurl (Vect< T\_> &v)

Evaluate the discrete curl vector of the current vector.

• void getCurl (Vect< Point< T\_> > &v)

Evaluate the discrete curl vector of the current vector.

• void getSCurl (Vect< T<sub>-</sub> > &v)

Evaluate the discrete scalar curl in 2-D of the current vector.

• void getDivergence (Vect< T\_> &v)

Evaluate the discrete Divergence of the current vector.

real\_t getAverage (const Element &el, int type) const

Return average value of vector in a given element.

• void save (string file, int opt)

Save vector in a file according to a given format.

• Vect< T $_->$  & MultAdd (const Vect< T $_->$  &x, const T $_-$  &a)

Multiply by a constant then add to a vector.

• void Axpy  $(T_- a, const \text{ Vect} < T_- > \&x)$ 

Add to vector the product of a vector by a scalar.

void set (size\_t i, T\_ val)

Assign a value to an entry for a 1-D vector.

• void set (size\_t i, size\_t j, T\_ val)

Assign a value to an entry for a 2-D vector.

• void set (size\_t i, size\_t j, size\_t k, T\_ val)

Assign a value to an entry for a 3-D vector.

• void add (size\_t i, T\_ val)

Add a value to an entry for a 1-index vector.

• void add (size\_t i, size\_t j, T\_ val)

Add a value to an entry for a 2-index vector.

void add (size\_t i, size\_t j, size\_t k, T\_ val)

Assign a value to an entry for a 3-index vector.

• void clear ()

Clear vector: Set all its elements to zero.

• T<sub>-</sub> & operator[] (size<sub>-</sub>t i)

Operator [] (Non constant version)

```
Operator [] (Constant version)
• T<sub>-</sub> & operator() (size<sub>-</sub>t i)
      Operator () (Non constant version)
• T_ operator() (size_t i) const
      Operator () (Constant version)
• T_ & operator() (size_t i, size_t j)
      Operator () with 2-D indexing (Non constant version, case of a grid vector).
• T_ operator() (size_t i, size_t j) const
      Operator () with 2-D indexing (Constant version).
• T_ & operator() (size_t i, size_t j, size_t k)
      Operator () with 3-D indexing (Non constant version).
• T_ operator() (size_t i, size_t j, size_t k) const
      Operator () with 3-D indexing (Constant version).
• Vect< T_-> & operator= (const Vect< T_-> &v)
      Operator = between vectors.
• Vect< T<sub>-</sub> > & operator= (const VectorX &v)
      Operator = for an instance of VectorX
• void operator= (string s)
      Operator =
• void setUniform (T_ vmin, T_ delta, T_ vmax)
      Initialize vector entries by setting extremal values and interval.
• Vect< T_-> & operator= (const T_- &a)
      Operator =
• Vect< T_-> & operator+= (const Vect< T_-> &v)
      Operator +=
• Vect< T_> & operator+= (const T_ &a)
      Operator +=
• Vect< T_-> & operator== (const Vect< T_-> &v)
      Operator -=
• Vect< T_> & operator== (const T_ &a)
      Operator -=
• Vect< T_> & operator*= (const T_ &a)
      Operator *=
• Vect< T_> & operator/= (const T_ &a)
      Operator /=
• void push_back (const T_ &v)
      Add an entry to the vector.
• const Mesh & getMeshPtr () const
      Return reference to Mesh instance.
• T_ operator, (const Vect< T_> &v) const
      Return Dot (scalar) product of two vectors.
• operator VectorX () const
      Casting operator.
```

• T\_operator[] (size\_t i) const

# 7.110.1 Detailed Description

```
template<class T_> class OFELI::Vect< T_>
```

To handle general purpose vectors.

This template class enables defining and manipulating vectors of various data types. It inherits from the class std::vector An instance of class Vect can be:

- A simple vector of given size
- A vector with up to three indices, *i.e.*, an entry of the vector can be a(i), a(i,j) or a(i,j,k). This feature is useful, for instance, in the case of a structured grid
- A vector associate to a finite element mesh. In this case, a constructor uses a reference to the Mesh instance. The size of the vector is by default equal to the number of nodes x the number of degrees of freedom by node. If the degrees of freedom are supported by elements or sides, then the vector is sized accordingly

Operators =, [] and () are overloaded so that one can write for instance:

```
Vect<real_t> u(10), v(10);
v = -1.0;
u = v;
u(3) = -2.0;
```

to set vector  $\mathbf{v}$  entries to -1, copy vector  $\mathbf{v}$  into vector  $\mathbf{u}$  and assign third entry of  $\mathbf{v}$  to -2. Note that entries of  $\mathbf{v}$  are here  $\mathbf{v}(1)$ ,  $\mathbf{v}(2)$ , ...,  $\mathbf{v}(10)$ , *i.e.* vector entries start at index 1.

**Template Parameters** 

```
T \leftarrow Data type (real_t, float, complex<real_t>, ...)
```

# 7.110.2 Constructor & Destructor Documentation

## Vect ( $size_t n$ )

Constructor setting vector size.

#### **Parameters**

$\mid$ in $\mid$ $n$ Size of vector
-------------------------------------

# Vect ( size\_t nx, size\_t ny )

Constructor of a 2-D index vector.

This constructor can be used for instance for a 2-D grid vector

i	n	nx	Size for the first index
i	n	ny	Size for the second index

# Remarks

The size of resulting vector is nx\*ny

# Vect ( size\_t nx, size\_t ny, size\_t nz )

Constructor of a 3-D index vector.

This constructor can be used for instance for a 3-D grid vector

#### Parameters

in	nx	Size for the first index
in	ny	Size for the second index
in	nz	Size for the third index

#### Remarks

The size of resulting vector is nx\*ny\*nz

# Vect ( size\_t n, $T_- * x$ )

Create an instance of class Vect as an image of a C/C++ array.

#### **Parameters**

in	n	Dimension of vector to construct
in	x	C-array to copy

# Vect ( Mesh & m, int $nb\_dof = 0$ , int $dof\_type = NODE\_FIELD$ )

Constructor with a mesh instance.

# Parameters

in	m	Mesh instance
in	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0 (default value) the constructor picks this number from the Mesh instance
in	dof_type	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD (Default: NODE_FIELD)

# Vect ( Mesh & m, string name, real\_t t = 0.0, int $nb\_dof = 0$ , int $dof\_type = NODE\_FIELD$ )

Constructor with a mesh instance giving name and time for vector.

in	т	Mesh instance	
in	name	Name of the vector	
in	t	t Time value for the vector	

#### **Parameters**

in	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance
in	dof_type	Type of degrees of freedom. To be given among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD (Default: NODE_FIELD)

## Vect ( const Element \* el, const Vect< $T_- > \& v$ )

Constructor of an element vector.

The constructed vector has local numbering of nodes

#### Parameters

in	el	Pointer to Element to localize
in	v	Global vector to localize

# Vect ( const Side \* sd, const Vect< $T_- > \& v$ )

Constructor of a side vector.

The constructed vector has local numbering of nodes

## Parameters

in	sd	Pointer to Side to localize
in	v	Global vector to localize

## Vect ( const Vect< $T_-$ > & v, const Vect< $T_-$ > & bc )

Constructor using boundary conditions.

Boundary condition values contained in bc are reported to vector v

# Parameters

in	v	Vect instance to update
in	bc	Vect instance containing imposed valued at desired DOF

# Vect ( const Vect< $T_-$ > & v, size\_t $nb\_dof$ , size\_t $first\_dof$ )

Constructor to select some components of a given vector.

in	v	Vect instance to extract from	
in	nb_dof	Number of DOF to extract	
in	first_dof	First DOF to extract For instance, a choice first_dof=2 and nb_dof=1 means that the second DOF of each node is copied in the vector	

## Vect ( const Vect< $T_-$ > & v, size\_t n)

Constructor to select one component from a given 2 or 3-component vector.

#### **Parameters**

in	v	Vect instance to extract from
in	n	Component to extract (must be $> 1$ and $< 4$ or).

# Vect ( size\_t d, const Vect< $T_-$ > & v, const string & name = " ")

Constructor that extracts some degrees of freedom (components) from given instance of Vect.

This constructor enables constructing a subvector of a given Vect instance. It selects a given list of degrees of freedom and put it according to a given order in the instance to construct.

#### **Parameters**

in	d	Integer number giving the list of degrees of freedom. This number is made of n digits where n is the number of degrees of freedom. Let us give an example: Assume that the instance v has 3 DOF by entity (node, element or side). The choice d=201 means that the constructed instance has 2 DOF where the first DOF is the third one of v, and the second DOF is the first one of f v. Consequently, no digit can be larger than the number of DOF the constructed instance. In this example, a choice d=103 would produce an error message.
in	v	Vect instance from which extraction is performed.
in	name	Name to assign to vector instance (Default value is " ").

## Warning

Don't give zeros as first digits for the argument d. The number is in this case interpreted as octal !!

# Vect ( const VectorX & v )

Constructor that copies the vector from a Eigen Vector instance.

## Parameters

in	v	VectorX instance from which extraction is performed

## Warning

This constructor is available only if the library eigen is used in conjunction with OFELI

# Remarks

: This constructor is available only if the Eigen library was installed in conjunction with OFELI

# 7.110.3 Member Function Documentation

## void set ( const $T_- * v$ , size\_t n )

Initialize vector with a c-array.

#### **Parameters**

in	v	c-array (pointer) to initialize Vect
in	n	size of array

# void select ( const Vect< $T_- > \& v$ , size\_t $nb\_dof = 0$ , size\_t $first\_dof = 1$ )

Initialize vector with another Vect instance.

#### **Parameters**

in	v	Vect instance to extract from	
in	nb_dof	Number of DOF per node, element or side (By default, 0: Number of degrees	
		of freedom extracted from the Mesh instance)	
in	first_dof	First DOF to extract (Default: 1) For instance, a choice first_dof=2 and	
		nb_dof=1 means that the second DOF of each node is copied in the vector	

# void set ( const string & exp, size\_t dof = 1 )

Initialize vector with an algebraic expression.

This function is to be used is a Mesh instance is associated to the vector

#### **Parameters**

in	ехр	Regular algebraic expression that defines a function of x, y, z which are coordinates of nodes and t which is the time value.
in	dof	Degree of freedom to which the value is assigned [Default: 1]

# Warning

If the time variable t is involved in the expression, the time value associated to the vector instance must be defined (Default value is 0) either by using the appropriate constructor or by the member function setTime.

## void set ( const string & exp, const Vect< real\_t > & x )

Initialize vector with an algebraic expression.

This function can be used for instance in 1-D

in	ехр	Regular algebraic expression that defines a function of x which are coordinates of nodes
in	х	Vector

# void set ( Mesh & ms, const string & exp, size\_t dof = 1 )

Initialize vector with an algebraic expression with providing mesh data.

#### Parameters

in	ms	Mesh instance	
in	exp	Regular algebraic expression that defines a function of x, y and z which are	
		coordinates of nodes.	
in	dof	Degree of freedom to which the value is assigned [Default: 1]	

# void set ( const Vect< real\_t > & x, const string & exp )

Initialize vector with an algebraic expression.

#### **Parameters**

in	х	Vect instance that contains coordinates of points	
in	ехр	Regular algebraic expression that defines a function of x and i which are coordinates of nodes and indices starting from 1.	

# void setMesh ( Mesh & m, size\_t nb\_dof = 0, size\_t dof\_type = NODE\_FIELD )

Define mesh class to size vector.

## **Parameters**

in	m	Mesh instance	
in	nb_dof	Number of degrees of freedom per node, element or side If nb_dof is set to 0 the constructor picks this number from the Mesh instance	
in	dof_type	Parameter to precise the type of degrees of freedom. To be chosen among the enumerated values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD, EDGE_FIELD [Default: NODE_FIELD]	

# size\_t size ( ) const

Return vector (global) size.

## Warning

This constructor is available only if the library eigen is used in conjunction with OFELI

# void setSize ( size\_t nx, size\_t ny = 1, size\_t nz = 1 )

Set vector size (for 1-D, 2-D or 3-D cases)

This function allocates memory for the vector but does not initialize its components

# 7.110. VECT< T\_> CLASS TEMPLATE REFERENCICHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

in	nx	Number of grid points in x-direction
in	ny	Number of grid points in y-direction [Default: 1]
in	nz	Number of grid points in z-direction [Default: 1]

## void resize ( $size_t n$ )

Set vector size.

This function allocates memory for the vector but does not initialize its components

#### **Parameters**

in	n	Size of vector

## void resize ( size\_t n, T\_ v )

Set vector size and initialize to a constant value.

This function allocates memory for the vector

## Parameters

in	n	Size of vector
in	v	Value to assign to vector entries

# void setDOFType ( int dof\_type )

Set DOF type of vector.

The DOF type combined with number of DOF per component enable determining the size of vector

## Parameters

in	dof_type	Type of degrees of freedom. Value to be chosen among the enumerated
		values: NODE_FIELD, ELEMENT_FIELD, SIDE_FIELD or EDGE_FIELD

# void setDG ( int degree = 1 )

Set Discontinuous Galerkin type vector.

When the vector is associated to a mesh, this one is sized differently if the DG method is used.

in	degree	Polynomial degree of the DG method [Default: 1]

#### bool WithMesh ( ) const

Return true if vector contains a Mesh pointer, false if not.

A Vect instance can be constructed using mesh information

# int getDOFType ( ) const

Return DOF type of vector

#### Returns

dof\_type Type of degrees of freedom. Value among the enumerated values: NODE\_FIELD, ELEMENT\_FIELD, SIDE\_FIELD or EDGE\_FIELD

## real\_t getNorm1 ( ) const

Calculate 1-norm of vector.

#### Remarks

This function is available only if the template parameter is double or complex<double>

# real\_t getNorm2 ( ) const

Calculate 2-norm (Euclidean norm) of vector.

#### Remarks

This function is available only if the template parameter is double or complex<double>

#### real\_t getNormMax ( ) const

Calculate Max-norm (Infinite norm) of vector.

## Remarks

This function is available only if the template parameter is double or complex<double>

# real\_t getWNorm2 ( ) const

Calculate weighted 2-norm of vector.

The weighted 2-norm is the 2-Norm of the vector divided by the square root of its size

# void setNodeBC ( Mesh & m, int code, $T_-val$ , size\_t dof = 1 )

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

in	m	Instance of mesh
in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

## void setSideBC (Mesh & m, int code, $T_-val$ , size\_t dof = 1)

Assign a given value to components of vector corresponding to sides with given code. Vector components are assumed nodewise

#### **Parameters**

in	m	Instance of mesh
in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

# void setNodeBC (Mesh & m, int code, const string & exp, size\_t dof = 1)

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

#### **Parameters**

in	т	Instance of mesh
in	code	Code for which nodes will be assigned prescribed value
in	ехр	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

# void setSideBC ( Mesh & m, int code, const string & exp, size\_t dof = 1 )

Assign a given function (given by an interpretable algebraic expression) to components of vector corresponding to sides with given code.

Vector components are assumed nodewise

## Parameters

in	m	Instance of mesh
in	code	Code for which nodes will be assigned prescribed value
in	exp	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

# void setNodeBC ( int code, T\_val, size\_t dof = 1 )

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe

#### **Parameters**

in	dof	Degree of Freedom for which the value is assigned [default: 1]
----	-----	--

#### void setNodeBC ( int code, const string & exp, size\_t dof = 1 )

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

#### Parameters

in	code	Code for which nodes will be assigned prescribed value
in	ехр	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

#### Warning

This member function is to be used in the case where a constructor with a Mesh has been used

## void setSideBC ( int code, const string & exp, size\_t dof = 1 )

Assign a given function (given by an interpretable algebraic expression) to components of vector with given code.

Vector components are assumed nodewise

## Parameters

in	code	Code for which nodes will be assigned prescribed value
in	ехр	Regular algebraic expression to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

#### Warning

This member function is to be used in the case where a constructor with a Mesh has been used

## void setSideBC ( int code, $T_val$ , size\_t dof = 1 )

Assign a given value to components of vector with given code.

Vector components are assumed nodewise

in	code	Code for which nodes will be assigned prescribed value
in	val	Value to prescribe
in	dof	Degree of Freedom for which the value is assigned [default: 1]

#### Warning

This member function is to be used in the case where a constructor with a Mesh has been used

## void removeBC (const Mesh & ms, const Vect< T $_->$ & v, int dof = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

#### **Parameters**

in	ms	Mesh instance
in	v	Vector (Vect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom

#### void removeBC ( const Vect< $T_- > & v$ , int dof = 0)

Remove boundary conditions.

This member function copies to current vector a vector where only non imposed DOF are retained.

#### Parameters

in	v	Vector (Vect instance to copy from)
in	dof	Parameter to say if all degrees of freedom are concerned [Default: 0] or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom.

## Warning

This member function is to be used in the case where a constructor with a Mesh has been used

## void transferBC ( const Vect< $T_- > \& bc$ , int dof = 0)

Transfer boundary conditions to the vector.

in	bc	Vect instance from which imposed degrees of freedom are copied to current
		instance
in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom.

## void insertBC ( Mesh & m, const Vect< $T_-$ > & v, const Vect< $T_-$ > & bc, int dof = 0 )

Insert boundary conditions.

#### Parameters

in	m	Mesh instance.
in	v	Vect instance from which free degrees of freedom are copied to current instance.
in	bc	Vect instance from which imposed degrees of freedom are copied to current instance.
in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC ( Mesh & m, const Vect< $T_- > \& v$ , int dof = 0 )

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

#### **Parameters**

in	m	Mesh instance.
in	v	Vect instance from which free degrees of freedom are copied to current instance.
in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC (const Vect< $T_-$ > & v, const Vect< $T_-$ > & bc, int dof = 0)

Insert boundary conditions.

#### Parameters

in	v	Vect instance from which free degrees of freedom are copied to current instance.
in	bc	Vect instance from which imposed degrees of freedom are copied to current
		instance.
in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only one degree of freedom (dof) is inserted into vector v which has only one degree of freedom by node or side

## void insertBC ( const Vect< $T_-$ > & v, int dof = 0 )

Insert boundary conditions.

DOF with imposed boundary conditions are set to zero.

in	v	Vect instance from which free degrees of freedom are copied to current instance.

## 7.110. VECT< $T_-$ > CLASS TEMPLATE REFERENCICHAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

in	dof	Parameter to say if all degrees of freedom are concerned (=0, Default) or if only
		one degree of freedom (dof) is inserted into vector v which has only one degree of
		freedom by node or side

## Warning

This member function is to be used in the case where a constructor with a Mesh has been used

## void Assembly (const Element & el, const Vect< $T_-$ > & b)

Assembly of element vector into current instance.

#### **Parameters**

in	el	Reference to Element instance
in	b	Local vector to assemble (Instance of class Vect)

## void Assembly (const Element & el, const $T_- * b$ )

Assembly of element vector (as C-array) into Vect instance.

## Parameters

in	el	Reference to Element instance
in	b	Local vector to assemble (C-Array)

## void Assembly ( const Side & sd, const Vect< $T_- > & b$ )

Assembly of side vector into Vect instance.

#### Parameters

in	sd	Reference to Side instance
in	b	Local vector to assemble (Instance of class Vect)

## void Assembly (const Side & sd, $T_-*b$ )

Assembly of side vector (as C-array) into Vect instance.

in	sd	Reference to Side instance
in	b	Local vector to assemble (C-Array)

#### void getGradient ( class Vect< T $_->$ & v )

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in a Vect instance. This function handles node vectors assuming  $P_1$  approximation. The gradient is then a constant vector for each element.

#### **Parameters**

in	v	Vect instance that contains the gradient, where v(n,1), v(n,2) and v(n,3) are
		respectively the x and y and z derivatives at element n.

## void getGradient ( Vect< Point< $T_->> \& v$ )

Evaluate the discrete Gradient vector of the current vector.

The resulting gradient is stored in an Vect instance. This function handles node vectors assuming P<sub>1</sub> approximation. The gradient is then a constant vector for each element.

#### **Parameters**

in	v	Vect instance that contains the gradient, where $v(n,1).x, v(n,2).y$ and $v(n,3).z$
		are respectively the x and y and z derivatives at element n.

#### void getCurl ( Vect< T $_->$ & v )

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a Vect instance. This function handles node vectors assuming  $P_1$  approximation. The curl is then a constant vector for each element.

#### **Parameters**

in	v	Vect instance that contains the curl, where $v(n,1)$ , $v(n,2)$ and $v(n,3)$ are
		respectively the x and y and z curl components at element n.

## void getCurl ( Vect< Point< $T_- >$ & v )

Evaluate the discrete curl vector of the current vector.

The resulting curl is stored in a Vect instance. This function handles node vectors assuming  $P_1$  approximation. The curl is then a constant vector for each element.

#### Parameters

in	v	Vect instance that contains the curl, where $v(n,1).x, v(n,2).y$ and $v(n,3).z$ are
		respectively the x and y and z curl components at element n.

#### void getSCurl ( Vect< $T_-$ > & v )

Evaluate the discrete scalar curl in 2-D of the current vector.

The resulting curl is stored in a Vect instance. This function handles node vectors assuming

## 7.110. VECT< T\_> CLASS TEMPLATE REFERENCE CHAPTER 7. CLASS DOCUMENTATION

P<sub>1</sub> approximation. The curl is then a constant vector for each element.

#### **Parameters**

in	v	Vect instance that contains the scalar curl.
----	---	--

## void getDivergence ( Vect< $T_- > \& v$ )

Evaluate the discrete Divergence of the current vector.

The resulting divergence is stored in a  $\frac{\text{Vect}}{\text{Vect}}$  instance. This function handles node vectors assuming  $P_1$  approximation. The divergence is then a constant vector for each element.

#### Parameters

	in	v	Vect instance that contains the divergence.
--	----	---	---

## real\_t getAverage ( const Element & el, int type ) const

Return average value of vector in a given element.

#### **Parameters**

in	el	Element instance
in	type	Type of element. This is to be chosen among enumerated values: LINE2, TRIANG3, QUAD4 TETRA4, HEXA8, PENTA6

#### void save ( string file, int opt )

Save vector in a file according to a given format.

#### Parameters

in	file	Output file where to save the vector	
in	opt	Option to choose file format to save. This is to be chosen among enumerated values: GMSH, GNUPLOT, MATLAB, TECPLOT and VTK	

## Vect<T $_->$ & MultAdd ( const Vect< T $_->$ & x, const T $_-$ & a)

Multiply by a constant then add to a vector.

in	x	Vect instance to add
in	а	Constant to multiply before adding

## void Axpy ( $T_- a_r$ , const Vect< $T_- > \& x$ )

Add to vector the product of a vector by a scalar.

#### Parameters

in	а	a Scalar to premultiply	
in	x	Vect instance by which a is multiplied. The result is added to current instance	

## void set ( size\_t i, T\_val )

Assign a value to an entry for a 1-D vector.

#### Parameters

in	i	Rank index in vector (starts at 1)
in	val	Value to assign

## void set ( size\_t i, size\_t j, T\_val )

Assign a value to an entry for a 2-D vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	val	Value to assign

## void set ( size\_t i, size\_t j, size\_t k, T\_val )

Assign a value to an entry for a 3-D vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	k	Third index in vector (starts at 1)
in	val	Value to assign

## void add ( size\_t i, T\_val )

Add a value to an entry for a 1-index vector.

in	i	Rank index in vector (starts at 1)

## 7.110. $VECT < T_- > CLASS TEMPLATE REFERENCICHAPTER 7$ . CLASS DOCUMENTATION

#### Parameters

in	val	Value to assign
----	-----	-----------------

## void add ( size\_t i, size\_t j, T\_val )

Add a value to an entry for a 2-index vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	val	Value to assign

## void add ( size\_t i, size\_t j, size\_t k, T\_val )

Assign a value to an entry for a 3-index vector.

#### Parameters

in	i	First index in vector (starts at 1)
in	j	Second index in vector (starts at 1)
in	k	Third index in vector (starts at 1)
in	val	Value to assign

## $T_{-}$ % operator[] ( size\_t i )

Operator [] (Non constant version)

#### Parameters

in	i	Rank index in vector (starts at 0)
----	---	------------------------------------

## $T_{-}$ operator[] ( size\_t i ) const

Operator [] (Constant version)

## Parameters

in	i	Rank index in vector (starts at 0)

## $T_{\&}$ operator() ( size\_t i )

Operator () (Non constant version)

#### Parameters

in	i	Rank index in vector (starts at 1)
		• v(i) starts at v(1) to v(size())
		• v(i) is the same element as v[i-1]

## $T_-$ operator() ( size\_t i ) const

Operator () (Constant version)

## Parameters

in	i	Rank index in vector (starts at 1)
		• v(i) starts at v(1) to v(size())
		• v(i) is the same element as v[i-1]

## T\_& operator() ( size\_t i, size\_t j )

Operator () with 2-D indexing (Non constant version, case of a grid vector).

#### Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid) $v(i,j)$ starts at $v(1,1)$ to $v(getNx(),getNy())$

## $T_{-}$ operator() ( size\_t i, size\_t j ) const

Operator () with 2-D indexing (Constant version).

## Parameters

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid) $v(i,j)$ starts at $v(1,1)$ to $v(getNx(),getNy())$

## $T_{-}$ % operator() ( size\_t i, size\_t j, size\_t k )

Operator () with 3-D indexing (Non constant version).

_			
	in	i	first index in vector (Number of vector components in the x-grid)

#### 7.110. VECT< T\_> CLASS TEMPLATE REFERENCE HAPTER 7. CLASS DOCUMENTATION

#### **Parameters**

in	j	second index in vector (Number of vector components in the y-grid)	
in	k	third index in vector (Number of vector components in the z-grid) v(i,j,k) starts at v(1,1,1) to v(getNx(),getNy(),getNz())	

## $T_{-}$ operator() ( size\_t i, size\_t j, size\_t k ) const

Operator () with 3-D indexing (Constant version).

#### **Parameters**

in	i	first index in vector (Number of vector components in the x-grid)
in	j	second index in vector (Number of vector components in the y-grid)
in	k	third index in vector (Number of vector components in the z-grid) v(i,j,k) starts at v(1,1,1) to v(getNx(),getNy(),getNz())

## Vect<T $_->$ & operator= ( const VectorX & v )

Operator = for an instance of VectorX

#### Parameters

in	v	Instance of vector class in library Eigen
----	---	---

#### Remarks

The Vect instance must have been sized before

This operator is available only if the Eigen library was installed in conjunction with OFELI

## void operator= ( string s )

#### Operator =

Assign an algebraic expression to vector entries. This operator has the same effect as the member function set(s)

#### Parameters

in	S	String defining the algebraic expression as a function of coordinates and time
----	---	--

#### Warning

A Mesh instance must has been introduced before (e.g. by a constructor)

## void setUniform ( T\_vmin, T\_delta, T\_vmax )

Initialize vector entries by setting extremal values and interval.

## CHAPTER 7. CLASS DOCUMENTATION 1.110. VECT $< T_{-} > CLASS$ TEMPLATE REFERENCE

#### Parameters

in	vmin	Minimal value to assign to the first entry	
in	delta	Interval	
in	vmax	Maximal value to assign to the lase entry	

#### Remarks

Vector's size is deduced from the arguments. The vector does not need to be sized before using this function

## Vect<T $_->$ & operator= ( const T $_-$ & a )

Operator =

Assign a constant to vector entries

#### Parameters

in a	Value to set
------	--------------

## Vect<T $_->$ & operator+= ( const Vect< T $_->$ & v )

Operator +=

Add vector x to current vector instance.

## Parameters

г			
	in	v	Vect instance to add to instance

## Vect<T $_->$ & operator+= ( const T $_-$ & a )

Operator +=

Add a constant to current vector entries.

#### Parameters

in	а	Value to add to vector entries
----	---	--------------------------------

## Vect<T $_->$ & operator== ( const Vect< T $_->$ & v )

Operator -=

in v Vect instance to subtract from	ı
-------------------------------------	---

## 7.110. VECT< $T_-$ > CLASS TEMPLATE REFERENCICHAPTER 7. CLASS DOCUMENTATION

#### Vect<T $_->$ & operator== ( const T $_-$ & a )

Operator -=

Subtract constant from vector entries.

#### Parameters

in a	Value to subtract from
------	------------------------

## Vect<T $_->$ & operator\*= ( const T $_-$ & a )

Operator \*=

#### **Parameters**

	in	а	Value to multiply by
--	----	---	----------------------

## Vect<T $_->$ & operator/= ( const T $_-$ & a )

Operator /=

#### Parameters

in a	Value to divide by
------	--------------------

## void push\_back ( const T\_ & v )

Add an entry to the vector.

This function is an overload of the member function push\_back of the parent class vector. It adjusts in addition some vector parameters

#### Parameters

in	v	Entry value to add
----	---	--------------------

## $T_-$ operator, ( const Vect< $T_-$ > & v ) const

Return Dot (scalar) product of two vectors.

A typical use of this operator is double a = (v,w) where v and w are 2 instances of Vect < double >

#### **Parameters**

in	v	Vect instance by which the current instance is multiplied
----	---	---

## operator VectorX ( ) const

Casting operator.

## CHAPTER 7. CLASS DOCUMENTATION 7.110. VECT < T $_->$ CLASS TEMPLATE REFERENCE

## Warning

1016

This constructor is available only if the library eigen is used in conjunction with OFELI

# Index

~PETScWrapper OFELI::PETScWrapper, 869 A OFELI, 71 AB2 OFELI, 69 ADAMS_BASHFORTH	OFELI::SkMatrix, 911 OFELI::SkSMatrix, 919 OFELI::SpMatrix, 938 OFELI::TimeStepping, 952 OFELI::TrMatrix, 982 OFELI::Vect, 1007 Axb OFELI::Laplace2DT3, 697
OFELI, 69 AUX_INPUT_FIELD_1 OFELI, 68 AUX_INPUT_FIELD_2 OFELI, 68 AUX_INPUT_FIELD_3 OFELI, 68	AxbAssembly OFELI::Bar2DL2, 189 OFELI::Beam3DL2, 206 OFELI::DC1DL2, 244 OFELI::DC2DT3, 269 OFELI::DC2DT6, 289 OFELI::DC3DAT3, 310
AUX_INPUT_FIELD_4 OFELI, 68 AbsEqua < T_ >, 171 Add OFELI::Element, 467, 468 OFELI::Mesh, 762, 766 OFELI::PETScVect, 864	OFELI::DC3DT4, 332 OFELI::EC2D1T3, 378 OFELI::Elas2DQ4, 407 OFELI::Elas2DT3, 428, 429 OFELI::Elas3DH8, 445 OFELI::Elas3DT4, 461
OFELI::Side, 897 add OFELI::DMatrix, 342 OFELI::PETScMatrix, 838 OFELI::PETScVect, 860, 861 OFELI::SkMatrix, 907 OFELI::SpMatrix, 935 OFELI::Vect, 1010, 1011 OFELI, 85, 99	OFELI::Equa_Electromagnetics, 487, 488 OFELI::Equa_Fluid, 502 OFELI::Equa_Laplace, 516 OFELI::Equa_Solid, 533 OFELI::Equa_Therm, 551 OFELI::Equation, 566 OFELI::HelmholtzBT3, 595 OFELI::Laplace1DL2, 643 OFELI::Laplace1DL3, 659
AddMidNodes OFELI::Mesh, 770 AnalysisType OFELI, 69 ArrayType OFELI, 68	OFELI::Laplace2DFVT, 674 OFELI::Laplace2DMHRT0, 689 OFELI::Laplace2DT3, 706 OFELI::NSP2DQ41, 809 OFELI::TINS2DT3B, 966 Axpy
Assembly OFELI::BMatrix, 216 OFELI::DMatrix, 347, 348 OFELI::DSMatrix, 360 OFELI::EigenProblemSolver, 388 OFELI::Matrix, 746, 747 OFELI::PETScMatrix, 842, 843 OFELI::PETScVect, 857	OFELI::DMatrix, 342 OFELI::Matrix, 746 OFELI::PETScVect, 860 OFELI::SkMatrix, 906 OFELI::SpMatrix, 935 OFELI::Vect, 1009 OFELI, 82, 89, 101, 102 Utilities, 141

b	OFELI::Laplace1DL3, 649
OFELI, 71	OFELI::Laplace2DT3, 695
BACKWARD_EULER	OFELI::NSP2DQ41, 799
OFELI, 68	BoundaryCondition
ВСТуре	OFELI::UserData, 988
OFELI, 70	BoundaryRHS
BDF2	OFELI::DC1DL2, 233
OFELI, 69	OFELI::DC2DT3, 257
BICG_SOLVER	OFELI::DC2DT6, 278
OFELI, 70	OFELI::DC3DAT3, 299, 300
BICG_STAB_SOLVER	OFELI::DC3DT4, 321, 322
OFELI, 70	OFELI::Elas2DQ4, 395, 396
BMatrix	OFELI::Elas2DT3, 418
OFELI, 81	OFELI::Elas3DH8, 435
BMatrix $< T >$ , 213	OFELI::Elas3DT4, 451
BODY_FORCE	OFELI::Equa_Therm, 541
OFELI, 68	OFELI::Laplace1DL2, 634
BOUNDARY_CONDITION	
	OFELI::Laplace1DL3, 649
OFELI, 68	OFELL NGP2DO41, 695
BOUNDARY_FORCE	OFELI::NSP2DQ41, 800
OFELI, 68	Brick, 220
BOUNDARY_TRACTION	OFELI::Brick, 221
OFELI, 67	build
BSpline	OFELI::Bar2DL2, 179
Utilities, 139	OFELI::DC1DL2, 234, 235
BUOYANCY	OFELI::DC2DT3, 259
OFELI, 67	OFELI::DC2DT6, 279
banner	OFELI::DC3DAT3, 300
Utilities, 140	OFELI::DC3DT4, 322
Bar2DL2, 173	OFELI::Equa_Laplace, 507
OFELI::Bar2DL2, 177	OFELI::Equa_Therm, 541, 542
Beam3DL2, 191	OFELI::Laplace1DL2, 634
OFELI::Beam3DL2, 196	OFELI::Laplace1DL3, 650
BiCGStab	OFELI::Laplace2DFVT, 665
Solver, 111, 112	OFELI::Laplace2DMHRT0, 679, 680
BiCG	OFELI::Laplace2DT3, 696, 697
Solver, 111	buildEigen
BiotSavart, 208	OFELI::Bar2DL2, 180
OFELI::BiotSavart, 209	OFELI::Beam3DL2, 197
BodyForce	OFELI::Elas3DT4, 452
OFELI::UserData, 989	OFELI::Laplace2DT3, 696
BodyRHS	•
OFELI::Bar2DL2, 179	CAPACITY
OFELI::DC1DL2, 233	OFELI, 67
OFELI::DC2DT3, 256, 257	CG_SOLVER
OFELI::DC2DT6, 278	OFELI, 70
OFELI::DC3DAT3, 299	CGS_SOLVER
OFELI::DC3DT4, 321	OFELI, 70
OFELI::Elas2DQ4, 395	CGS
OFELI::Elas2DT3, 417, 418	Solver, 114
OFELI::Elas3DH8, 435	CONSISTENT_CAPACITY
OFELI::Elas3DT4, 451	OFELI, 67
OFELI::Equa_Therm, 541	CONSISTENT_MASS
OFELI::Laplace1DL2, 633	OFELI, 67
	, •-

CONTACT_BC	OFELI::Element, 469, 470
OFELI, 70	OFELI::Side, 899
CONTACT	contains
OFELI, 67	OFELI::IPF, 626
CONVECTION	Convection
OFELI, 67	OFELI::DC1DL2, 231, 232
CRANK_NICOLSON	OFELI::DC2DT3, 255
OFELI, 68	OFELI::DC2DT6, 277
Capacity	OFELI::DC3DT4, 320
OFELI::DC1DL2, 231	ConvectionToRHS
OFELI::DC2DT3, 254	OFELI::DC1DL2, 232
OFELI::DC3DAT3, 298	OFELI::DC2DT3, 256
OFELI::DC3DT4, 319	Converged
CapacityToLHS	Global Variables, 42
OFELI::DC1DL2, 230	Coord
OFELI::DC2DT3, 254	Finite Element Mesh, 27
OFELI::DC2DT6, 279	createBoundarySideList
OFELI::DC3DAT3, 298	OFELI::Mesh, 765
OFELI::DC3DT4, 319	createInternalSideList
OFELI::Equa_Therm, 540	OFELI::Mesh, 765
CapacityToRHS	•
OFELI::DC1DL2, 231	CurlEdgeSh
	OFELI::Tetra4, 946
OFELI::DC2DT3, 254	DC1DL2, 225
OFELL::DC2DT6, 279	OFELI::DC1DL2, 229
OFELI::DC3DAT3, 298	DC2DT3, 246
OFELL::DC3DT4, 319	OFELI::DC2DT3, 251–253
OFELI::Equa_Therm, 541 CG	DC2DT6, 271
	OFELI::DC2DT6, 275, 276
Solver, 113 check	DC3DAT3, 291
OFELI::Line2H, 728	OFELI::DC3DAT3, 296, 297
OFELI::Material, 743	DC3DT4, 312
OFELI::Triang3, 970	OFELI::DC3DT4, 316–318
OFELI, 104	DEVIATORIC
check_error	OFELI, 67
OFELI::FMM2D, 575	DGElementAssembly
OFELI::FMM3D, 577	OFELI::Bar2DL2, 188, 189
OFELI::FMMSolver, 578	OFELI::Beam3DL2, 204, 205
checkDelaunay	OFELI::DC1DL2, 243, 244
OFELI::Laplace2DFVT, 664	OFELI::DC1DE2, 243, 244 OFELI::DC2DT3, 267, 268
checkError	OFELI::DC2DT6, 288, 289
OFELI::PETScWrapper, 871	OFELI::DC3DAT3, 308, 309
checkSturm	OFELI::DC3DT4, 331, 332
	OFELI::EC2D1T3, 377, 378
OFELI::EigenProblemSolver, 389	OFELI::Elas2DQ4, 405, 406
Circle, 222	OFELI::Elas2DT3, 427, 428
OFELI::Circle, 223 Clear	OFELI::Elas3DH8, 443, 444
	OFELI::Elas3DT4, 460, 461
Utilities, 142 Code	OFELI::Equa_Electromagnetics, 486, 487
Finite Element Mesh, 27	OFELI::Equa_Fluid, 500, 501
Conservation Law Equations, 17	OFELI::Equa_Laplace, 515, 516
ContactPressure	OFELI::Equa_Solid, 531, 532
OFELI::Elas2DT3, 419	OFELI::Equa_Therm, 550, 551
Contains	OFELI::Equation, 563, 564
Commit	01 D2:::2quation, 000, 001

OFELI::HelmholtzBT3, 594, 595	Deactivate
OFELI::Laplace1DL2, 642, 643	OFELI, 80
OFELI::Laplace1DL3, 657, 658	DeformMesh
OFELI::Laplace2DFVT, 672, 673	Finite Element Mesh, 28
OFELI::Laplace2DMHRT0, 688, 689	Delete
OFELI::Laplace2DT3, 704, 705	OFELI::Mesh, 767, 768
OFELI::NSP2DQ41, 807, 808	DeleteElement
OFELI::TINS2DT3B, 965, 966	OFELI::Mesh, 767
DIAG_PREC	DeleteNode
OFELI, 70	OFELI::Mesh, 766
DIAGONAL	DeleteSide
OFELI, 70	OFELI::Mesh, 767
DIFFUSION_CONVECTION	Deviator
OFELI, 69	OFELI::Elas2DT3, 417
DIFFUSION	DeviatorToRHS
OFELI, 67	OFELI::Elas2DT3, 417
DILATATION	DiagBC
OFELI, 67	OFELI::Bar2DL2, 181
DILU_PREC	OFELI::Beam3DL2, 197
OFELI, 70	OFELI::DC1DL2, 236
DIRECT_SOLVER	OFELI::DC2DT3, 260
OFELI, 70	OFELI::DC2DT6, 281
DISPLACEMENT_FIELD	OFELI::DC3DAT3, 301
OFELI, 68	OFELI::DC3DT4, 324
dLine	OFELI::EC2D1T3, 370
OFELI::Brick, 222	OFELI::Elas2DQ4, 397
OFELI::Circle, 224	OFELI::Elas2DT3, 420
OFELI::Ellipse, 475	OFELI::Elas3DH8, 436
OFELI::Figure, 573	OFELI::Elas3DT4, 453
OFELI::Polygon, 881	OFELI::Equa_Electromagnetics, 479
OFELI::Rectangle, 893	OFELI::Equa_Fluid, 493
OFELI::Sphere, 925	OFELI::Equa_Laplace, 508
DMatrix	OFELI::Equa_Solid, 523
OFELI::DMatrix, 338	OFELI::Equa_Therm, 543
DMatrix $< T >$ , 334	OFELI::Equation, 558
DOF	OFELI::HelmholtzBT3, 587
OFELI::Edge, 381	OFELI::Laplace1DL2, 635
OFELI::Node, 792	OFELI::Laplace1DL3, 650
OFELI::Side, 896	OFELI::Laplace2DFVT, 665
DP1toP1	OFELI::Laplace2DMHRT0, 681
OFELI::Reconstruction, 891	OFELI::Laplace2DT3, 697
DSMatrix	OFELI::NSP2DQ41, 800
OFELI, 84	OFELI::TINS2DT3B, 958
DSMatrix $< T >$ , 356	DiagPrescribe
DSh	OFELI::PETScMatrix, 836
OFELI::FEShape, 572	OFELI::SkMatrix, 908
OFELI::Hexa8, 598, 599	OFELI::SpMatrix, 931, 932
OFELI::Line2, 726	Diffusion
OFELI::Line2H, 729	OFELI::DC1DL2, 231
OFELI::Penta6, 830	OFELI::DC2DT3, 254
OFELI::Quad4, 888	OFELI::DC2DT6, 277
OFELI::Tetra4, 946	OFELI::DC3DAT3, 298
OFELI::Triang6S, 972, 973	OFELI::DC3DT4, 319
OFELI::triangle, 975, 977	DiffusionToRHS

OFELI::DC1DL2, 231	EdgeList, 383
OFELI::DC2DT3, 255	EdgeSh
OFELI::DC3DAT3, 299	OFELI::Tetra4, 946
OFELI::DC3DT4, 320	EdgesAreDOF
Dilatation	OFELI::Mesh, 771
OFELI::Elas2DT3, 417	EigenProblemSolver, 384
DilatationToRHS	OFELI::EigenProblemSolver, 385, 386
OFELI::Elas2DQ4, 395	Elas2DQ4, 389
OFELI::Elas2DT3, 417	OFELI::Elas2DQ4, 394
Domain, 351	Elas2DT3, 409
OFELI::Domain, 353	OFELI::Elas2DT3, 414, 415
Dot	Elas3DH8, 430
Utilities, 141, 142	OFELI::Elas3DH8, 435
Vector and Matrix, 148	Elas3DT4, 447
vector and manny 110	Electric
E2T	OFELI::EC2D1T3, 369
OFELI::PhaseChange, 872	Electromagnetics, 18
EC2D1T3, 364	Element, 463
OFELI::EC2D1T3, 368	OFELI::Element, 466
ELECTRIC	element_assembly
OFELI, 67	General Purpose Equations, 37, 38
ePrev	ElementAssembly
OFELI::Bar2DL2, 191	OFELI::Bar2DL2, 184–186
OFELI::Beam3DL2, 207	OFELI::Beam3DL2, 200–202
OFELI::DC1DL2, 246	OFELI::DC1DL2, 239–241
OFELI::DC1DE2, 240 OFELI::DC2DT3, 270	OFELI::DC2DT3, 263–265
OFELI::DC2DT6, 291	OFELI::DC2DT6, 284–286
OFELI::DC3DAT3, 311	OFELI::DC3DAT3, 304–306
OFELI::DC3DT4, 334	OFELI::DC3DT4, 327–329
OFELI::EC2D1T3, 380	OFELI::EC2D1T3, 373–375
OFELI::Elas2DQ4, 409	OFELI::Elas2DQ4, 400, 402, 403
OFELI::Elas2DT3, 430	OFELI::Elas2DT3, 423–425
OFELI::Elas3DH8, 446	OFELI::Elas3DH8, 439–441
OFELI::Elas3DT4, 463	OFELI::Elas3DT4, 456–458
OFELI::Equa_Electromagnetics, 489	OFELI::Equa_Electromagnetics, 482–484
OFELI::Equa_Fluid, 503	OFELI::Equa-Eluid, 496–498
OFELI::Equa_Laplace, 518	OFELI::Equa_Laplace, 511–513
OFELI::Equa_Solid, 534	OFELI::Equa_Solid, 526, 528, 529
OFELI::Equa_Therm, 553	OFELI::Equa_Therm, 546–548
OFELI::Equation, 568	OFELI::Equation, 561–563, 566
OFELI::HelmholtzBT3, 597	OFELI::HelmholtzBT3, 590–592
OFELI::Laplace1DL2, 645	OFELI::Laplace1DL2, 638–640
OFELI::Laplace1DL2, 660	OFELI::Laplace1DL2, 653–655
OFELI::Laplace1DE3, 600 OFELI::Laplace2DFVT, 675	
OFELI::Laplace2DMHRT0, 691	OFELI::Laplace2DFVT, 668–670
	OFELI::Laplace2DMHRT0, 684–686
OFELL:Laplace2DT3, 707	OFELL NGP2DO41 902 905
OFELL TINGAPTAR 000	OFELL::NSP2DQ41, 803–805
OFELI::TINS2DT3B, 968	OFELI::TINS2DT3B, 961–963
EVAL	ElementList, 472
Utilities, 129	ElementNodeCoordinates
EXTERNAL BOUNDARY	OFELI::Bar2DL2, 183
OFELI::Side, 896	OFELI::Beam3DL2, 200
Edge, 380	OFELI::DC1DL2, 238
OFELI::Edge, 381	OFELI::DC2DT3, 263

OFELI::DC2DT6, 283	OFELI::DC2DT6, 282
OFELI::DC3DAT3, 304	OFELI::DC3DAT3, 303
OFELI::DC3DT4, 326	OFELI::DC3DT4, 325
OFELI::EC2D1T3, 372	OFELI::EC2D1T3, 371
OFELI::Elas2DQ4, 400	OFELI::Elas2DQ4, 399
OFELI::Elas2DT3, 423	OFELI::Elas2DT3, 421
OFELI::Elas3DH8, 439	OFELI::Elas3DH8, 438
OFELI::Elas3DT4, 455	OFELI::Elas3DT4, 454
OFELI::Equa_Electromagnetics, 482	OFELI::Equa_Electromagnetics, 480
OFELI::Equa_Fluid, 496	OFELI::Equa_Fluid, 495
OFELI::Equa_Laplace, 510	OFELI::Equa_Laplace, 509
OFELI::Equa_Solid, 526	OFELI::Equa_Solid, 525
OFELI::Equa_Therm, 546	OFELI::Equa_Therm, 544
OFELI::Equation, 560	OFELI::Equation, 559
OFELI::HelmholtzBT3, 589	OFELI::HelmholtzBT3, 588
OFELI::Laplace1DL2, 638	OFELI::Laplace1DL2, 636
OFELI::Laplace1DL3, 653	OFELI::Laplace1DL3, 652
OFELI::Laplace2DFVT, 668	OFELI::Laplace2DFVT, 667
OFELI::Laplace2DMHRT0, 683	OFELI::Laplace2DMHRT0, 682
OFELI::Laplace2DT3, 700	OFELI::Laplace2DT3, 699
OFELI::NŜP2DQ41, 803	OFELI::NSP2DQ41, 802
OFELI::TINS2DT3B, 960	OFELI::TINS2DT3B, 959
ElementNodeVector	ElementSideVector
OFELI::Bar2DL2, 181, 182	OFELI::Bar2DL2, 182
OFELI::Beam3DL2, 198	OFELI::Beam3DL2, 199
OFELI::DC1DL2, 236, 237	OFELI::DC1DL2, 237
OFELI::DC2DT3, 261	OFELI::DC2DT3, 262
OFELI::DC2DT6, 281, 282	OFELI::DC2DT6, 282
OFELI::DC3DAT3, 302	OFELI::DC3DAT3, 303
OFELI::DC3DT4, 324, 325	OFELI::DC3DT4, 325
OFELI::EC2D1T3, 370, 371	OFELI::EC2D1T3, 371
OFELI::Elas2DQ4, 398	OFELI::Elas2DQ4, 399
OFELI::Elas2DT3, 421	OFELI::Elas2DT3, 422
OFELI::Elas3DH8, 437	OFELI::Elas3DH8, 438
OFELI::Elas3DT4, 453, 454	OFELI::Elas3DT4, 454
OFELI::Equa_Electromagnetics, 480	OFELI::Equa_Electromagnetics, 481
OFELI::Equa_Fluid, 494	OFELI::Equa_Fluid, 495
OFELI::Equa_Laplace, 508, 509	OFELI::Equa_Laplace, 509
OFELI::Equa_Solid, 524	OFELI::Equa_Solid, 525
OFELI::Equa_Therm, 544	OFELI::Equa_Therm, 544
OFELI::Equation, 559	OFELI::Equation, 559
OFELI::HelmholtzBT3, 587, 588	OFELI::HelmholtzBT3, 588
OFELI::Laplace1DL2, 636	OFELI::Laplace1DL2, 636
OFELI::Laplace1DL3, 651	OFELI::Laplace1DL3, 652
OFELI::Laplace2DFVT, 666	OFELI::Laplace2DFVT, 667
OFELI::Laplace2DMHRT0, 681, 682	OFELI::Laplace2DMHRT0, 682
OFELI::Laplace2DT3, 698	OFELI::Laplace2DT3, 699
OFELI::NSP2DQ41, 801	OFELI::NSP2DQ41, 802
OFELI::TINS2DT3B, 958, 959	OFELI::TINS2DT3B, 959
ElementNodeVectorSingleDOF	ElementVector
OFELI::Bar2DL2, 182	OFELI::Bar2DL2, 182
OFELI::Beam3DL2, 199	OFELI::Beam3DL2, 199
OFELI::DC1DL2, 237	OFELI::DC1DL2, 237
OFELI::DC2DT3, 262	OFELI::DC2DT3, 262
•	•

OFELI::DC2DT6, 282	Evaluate
OFELI::DC3DAT3, 303	OFELI::FMM2D, 575
OFELI::DC3DT4, 325	OFELI::FMM3D, 576
OFELI::EC2D1T3, 371	execute
OFELI::Elas2DQ4, 399	OFELI::FastMarching2D, 570
OFELI::Elas2DT3, 422	ExtendSpeed
OFELI::Elas3DH8, 438	OFELI::FMM2D, 575
OFELI::Elas3DT4, 454	OFELI::FMM3D, 577
OFELI::Equa_Electromagnetics, 481	OFELI::FMMSolver, 578
OFELI::Equa_Fluid, 495	01 22111 11212 017 017 07 0
OFELI::Equa_Laplace, 509	FE_2D_3N
OFELI::Equa_Solid, 525	OFELI, 69
OFELI::Equa_Therm, 545	FE_2D_4N
OFELI::Equation, 560	OFELI, 69
OFELI::HelmholtzBT3, 588	FE_2D_6N
OFELI::Laplace1DL2, 637	OFELI, 69
OFELI::Laplace1DL2, 657	FE.3D.4N
OFELI::Laplace2DFVT, 667	OFELI, 69
OFELI::Laplace2DFV1, 607 OFELI::Laplace2DMHRT0, 682	FE_3D_8N
	OFELI, 69
OFELL::Laplace2DT3, 699	FE_3D_AXI_3N
OFELL TINGADTAR 050	
OFELI::TINS2DT3B, 959	OFELI, 69
ElementsAreDOF	FEShape, 570
OFELI::Mesh, 772	OFELI::FEShape, 571
Ellipse, 473	FEType
OFELI::Ellipse, 474	OFELI, 69
EnthalpyToTemperature	FIRST_ORDER_METHOD
OFELI::PhaseChange, 872	OFELL LODGED (10
EqDataType	OFELI::ICPG2DT, 610
OFELI, 67	OFELI::ICPG3DT, 617
Equa_Electromagnetics< T_, NEN_, NEE_, N←	OFELI::LCL1D, 710
$SN_{-}, NSE_{-} >$ , 475	OFELI::LCL2DT, 715
Equa_Fluid	OFELI::LCL3DT, 721
OFELI::Equa_Fluid, 493	OFELI::Muscl, 775
Equa_Fluid< T_, NEN_, NEE_, NSN_, NSE_ >,	OFELI::Muscl1D, 779
489	OFELI::Muscl2DT, 782
Equa_Laplace	OFELI::Muscl3DT, 786
OFELI::Equa_Laplace, 507	FLUX
Equa_Laplace< T_, NEN_, NEE_, NSN_, NSE_	OFELI, 68
>, 504	FMM2D, 574
Equa_Solid	OFELI::FMM2D, 574
OFELI::Equa_Solid, 522	FMM3D, 575
Equa_Solid < T_, NEN_, NEE_, NSN_, NSE_ >,	OFELI::FMM3D, 576
518	FMMSolver, 577
Equa_Therm	OFELI::FMMSolver, 577
OFELI::Equa_Therm, 540	FORWARD_EULER
Equa_Therm< T_, NEN_, NEE_, NSN_, NSE_ >,	OFELI, 68
535	Factor
Equal	OFELI, 92
Utilities, 142	FactorAndSolve
Equation	OFELI::BMatrix, 218
OFELI::Equation, 556, 557	OFELI::DMatrix, 350
Equation < T_, NEN_, NEE_, NSN_, NSE_ >, 553	OFELI::DSMatrix, 362
Estimator, 568	OFELI::Matrix, 749
Louisianoi, ooo	OI DEMINING (1)

OFELI::SkMatrix, 913	OFELI::LCL3DT, 723
OFELI::SkSMatrix, 921	Funct, 578
OFELI::SpMatrix, 940	OFELI::Funct, 579, 580
OFELI::TrMatrix, 984	CLOPAL APPAN
OFELI, 93	GLOBAL_ARRAY
FastMarching2D, 569	OFELI, 68
OFELI::FastMarching2D, 569	GMRES_SOLVER
Figure, 572	OFELI, 70
Finite Element Mesh, 19	GMRes
Code, 27	Solver, 115, 116
Coord, 27	GRADIENT
DeformMesh, 28	OFELI::OptSolver, 820 GRAPH_MEMORY
GRAPH_MEMORY, 23	
getMaxSideMeasure, 31	Finite Element Mesh, 23
getMaxSize, 30	Gauss, 580
getMeanElementMeasure, 31	genMesh OFELI::Domain, 354
getMeanSideMeasure, 31	•
getMinElementMeasure, 30	General Purpose Equations, 36
getMinSideMeasure, 31	element_assembly, 37, 38
getMinSize, 30	side_assembly, 38, 39
Label, 25, 26	get
MeshActiveElements, 23	OFELI::Domain, 353 OFELI::IPF, 626–628
MeshBoundaryNodes, 24	OFELI::Mesh, 763
MeshBoundarySides, 24	OFELI::PETScMatrix, 842
MeshElements 22	OFELI::Prescription, 886
MeshNedel con 22	OFELI::SkMatrix, 910
MeshNodeLoop, 23	OFELI::SkSMatrix, 918
MeshNodes, 24	OFELI::SpMatrix, 937
MeshSideSet, 24	OFELI, 73, 74
MeshSides, 24 MeshToMesh, 29	getActiveElement
NodeInElement, 33	OFELI::Mesh, 773
NodeInSide, 33	getAllEdges
NodeLabel, 26	OFELI::Mesh, 765
operator-, 25	getAllSides
operator==, 28	OFELI::Mesh, 765
operator&&, 25	getArray
setBoundaryNodeCodes, 32	OFELI::DMatrix, 347
setBoundarySideCodes, 32	getArraySize
setElementCodes, 33	OFELI::IPF, 627
setNodeCodes, 32	getAuxFile
setSideCodes, 32	OFELI::IPF, 629
SideInElement, 33	getAverage
TheEdge, 23	OFELI::PETScVect, 859
TheElement, 23	OFELI::Vect, 1009
TheNode, 23	getB1
theNodeLabel, 24	OFELI::BiotSavart, 211
TheSide, 23	getB2
Fluid Dynamics, 35	OFELI::BiotSavart, 211
Forward	getB3
OFELI::ICPG1D, 603	OFELI::BiotSavart, 211
OFELI::ICPG2DT, 611	getBC1
OFELI::LCL1D, 711	OFELI::BiotSavart, 212
OFELI::LCL2DT, 717	getBC2
·	

OFELI::BiotSavart, 212	OFELI::Quad4, 889
getBC3	OFELI::Tetra4, 946
OFELI::BiotSavart, 211	OFELI::Triang3, 970
getBCFile	OFELI::Triang6S, 973
OFELI::IPF, 628	OFELI::triangle, 975, 978
getBFFile	getDiag
OFELI::IPF, 628	OFELI::BMatrix, 216
getBamg	OFELI::DMatrix, 347
Utilities, 134	OFELI::DSMatrix, 360
getBC	OFELI::Matrix, 746
OFELI::IPF, 623	OFELI::SkMatrix, 910
getBF	OFELI::SkSMatrix, 918
OFELI::IPF, 623	OFELI::SpMatrix, 938
	OFELI::TrMatrix, 981
getBoolOption OFFI In DETS a Wrappor, 860	
OFELI::PETScWrapper, 869	getDivergence
getBoundaryNodes	OFELL:PETScVect, 859
OFELI::Mesh, 765	OFELI::Vect, 1009
getBoundarySides	getDouble
OFELI::Mesh, 765	OFELI::IPF, 625, 626
getCode	getDoublePar
OFELI::Edge, 382	OFELI::IPF, 624
OFELI::Node, 792	getEasymesh
OFELI::Side, 897	Utilities, 135
OFELI, 79, 80	getEdgeLabel
getColHeight	OFELI::Mesh, 773
OFELI::SkMatrix, 907	getEigenVector
OFELI, 99	OFELI::EigenProblemSolver, 389
getColInd	getElementLabel
OFELI::SpMatrix, 936	OFELI::Mesh, 773
getColumn	getElementNeighborElements
OFELI::DMatrix, 339	OFELI::Mesh, 766
OFELI, 86	getFirstSideLabel
getComplex	OFELI::Partition, 828
OFELI::IPF, 626	getGambit
getComplexPar	Utilities, 135
OFELI::IPF, 624	getGmsh
getCoord	Utilities, 135
OFELI::Node, 792	getGradient
getCurl	OFELI::PETScVect, 858
OFELI::PETScVect, 858	OFELI::Vect, 1007, 1008
OFELI::Vect, 1008	getInit
getDOFType	OFELI::IPF, 623
OFELI::PETScVect, 853	getInitFile
	O
OFELI::Vect, 1002	OFELI::IPF, 628
getData	getInnerProduct
OFELI::IPF, 623	OFELI, 93
getDerivative	getIntOption
OFELI, 75	OFELI::PETScWrapper, 869
getDet	getIntPar
OFELI::FEShape, 572	OFELI::IPF, 624
OFELI::Hexa8, 599	getInteger
OFELI::Line2, 727	OFELI::IPF, 625
OFELI::Line3, 730	getInternalEnergy
	· .
OFELI::Penta6, 830	OFELI::ICPG1D, 603

getInterpolate	OFELI::Equa_Fluid, 502
OFELI::Line2, 726	OFELI::Equa_Laplace, 517
getLength	OFELI::Equa_Solid, 533
OFELI::PETScMatrix, 837	OFELI::Equa_Therm, 552
getList	OFELI::Equation, 567
OFELI::Mesh, 772, 773	OFELI::HelmholtzBT3, 596
getLocal	OFELI::Laplace1DL2, 644
OFELI, 94	OFELI::Laplace1DL3, 659
getLocalPoint	OFELI::Laplace2DFVT, 674
OFELI::FEShape, 572	OFELI::Laplace2DMHRT0, 690
OFELI::Hexa8, 599	OFELI::Laplace2DT3, 706
OFELI::Line2, 727	OFELI::NSP2DQ41, 809
OFELI::Line2H, 728, 729	OFELI::TINS2DT3B, 967
OFELI::Line3, 730	Utilities, 133
OFELL:Penta6, 831	getMeshFile
OFELL: Quad4, 889	OFELI::IPF, 628
OFELL:Tetra4, 946	getMinElementMeasure
OFELI::Triang3, 970	Finite Element Mesh, 30
OFELI::Triang6S, 973	getMinSideMeasure
OFELI::triangle, 975, 976, 978	Finite Element Mesh, 31
getLocalSize	getMinSize
OFELI::PETScVect, 852	Finite Element Mesh, 30
getMach	getMomentum
OFELI::ICPG1D, 604	OFELI::ICPG1D, 603
getMatlab	getName
Utilities, 136	OFELI::Material, 743
getMaxSideMeasure	getNbAcc
Finite Element Mesh, 31	OFELI::OptSolver, 824
getMaxSize	getNbBoundarySides
Finite Element Mesh, 30	OFELI::Mesh, 770
getMaxTime	getNbConnectInSubMesh
OFELI::IPF, 624	OFELI::Partition, 828
getMeanElementMeasure	getNbConnectOutSubMesh
Finite Element Mesh, 31	OFELI::Partition, 828
getMeanSideMeasure	getNbInternalSides
Finite Element Mesh, 31	OFELI::Mesh, 770
getMeasure	getNbIter
OFELI::Element, 471	OFELI::IPF, 624
OFELI::Side, 899	getNbNeigEl
getMesh	OFELI::Node, 792
OFELI::AbsEqua, 172	getNbNeigElements
OFELI::Bar2DL2, 190	OFELI::Element, 471
OFELI::Beam3DL2, 206	getNbOutOfBounds
OFELI::DC1DL2, 245	OFELI::OptSolver, 824
OFELI::DC2DT3, 269	getNbSteps
OFELI::DC2DT3, 209 OFELI::DC2DT6, 290	· .
	OFELI::IPF, 624
OFELI::DC3DAT3, 310	getNeigEl
OFELI::DC3DT4, 333	OFELI::Node, 793
OFELI::EC2D1T3, 379	getNeighborElement
OFELL::Elas2DQ4, 407	OFELL::Element, 470
OFELI::Elas2DT3, 429	OFELI::Side, 898
OFELL:Elas3DH8, 445	getNetgen
OFELL::Elas3DT4, 462	Utilities, 136
OFELI::Equa_Electromagnetics, 488	getNodeLabel

OFELI::Edge, 382	getSF
OFELI::Mesh, 773	OFELI::IPF, 623
getNodeLabelInMesh	getSideLabel
OFELI::Partition, 827	OFELI::Mesh, 773
getNodeLabelInSubMesh	getSignedDistance
OFELI::Partition, 827	OFELI::Brick, 221
getNodeNeighborElements	OFELI::Circle, 223, 224
OFELI::Mesh, 766	OFELI::Ellipse, 474, 475
getNorm1	OFELI::Figure, 573
OFELI::Vect, 1002	OFELI::Polygon, 880, 881
getNorm2	OFELI::Rectangle, 892, 893
OFELI::Vect, 1002	OFELI::Sphere, 924
getNormMax	getSolution
OFELI::Vect, 1002	OFELI::OptSolver, 824
getNormal	getSoundSpeed
OFELI::Side, 898	OFELI::ICPG1D, 604
getNy	getStresses
OFELI, 79	OFELI::Bar2DL2, 179
getNz	getString
OFELI, 79	OFELI::IPF, 625
getOtherNeighborElement	getStringPar
OFELI::Side, 898	OFELI::IPF, 624
getOutput	getSubMesh
OFELI::IPF, 623	OFELI::Partition, 827
getPlot	getTemperature
OFELI::IPF, 623	OFELI::OptSolver, 824
getPlotFile	getTetgen
OFELI::IPF, 629	Utilities, 136
getPointDoublePar	getTime
OFELI::IPF, 624	OFELI::Timer, 947
getPrescriptionFile	getTimeStep
OFELI::IPF, 629	OFELI::IPF, 624
getProject	getTolerance
getProject OFELI::IPF, 628	getTolerance OFELI::IPF, 624
getProject OFELI::IPF, 628 getRange	getTolerance OFELI::IPF, 624 getTotalEnergy
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628 getSave	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792 getP
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628 getSave OFELI::IPF, 623	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792 getP OFELI::ICPG2DT, 612
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628 getSave OFELI::IPF, 623 getSaveFile	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792 getP OFELI::ICPG2DT, 612 getR
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628 getSave OFELI::IPF, 623 getSaveFile OFELI::IPF, 629	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792 getP OFELI::ICPG2DT, 612 getR OFELI::ICPG2DT, 612
getProject OFELI::IPF, 628 getRange OFELI::PETScMatrix, 836 getRefCoord OFELI::Line2, 726 getRestartFile OFELI::IPF, 628 getRow OFELI::DMatrix, 340 OFELI, 87 getSCurl OFELI::PETScVect, 859 OFELI::Vect, 1008 getSFFile OFELI::IPF, 628 getSave OFELI::IPF, 623 getSaveFile	getTolerance OFELI::IPF, 624 getTotalEnergy OFELI::ICPG1D, 603 getTriangle Utilities, 137 getUnitNormal OFELI::Element, 471 OFELI::Side, 898 getValue OFELI, 74, 75 getWNorm2 OFELI::PETScVect, 853 OFELI::Vect, 1002 getXYZ OFELI::Node, 792 getP OFELI::ICPG2DT, 612 getR

Global Variables, 40	OFELI::Muscl1D, 779
Converged, 42	OFELI::Muscl2DT, 782
InitPetsc, 42	OFELI::Muscl3DT, 786
MaxNbIterations, 41	Heat Transfer, 43
NbTimeSteps, 41	HelmholtzBT3, 583
theEdge, 41	Hexa8, 597
theElement, 40	110,40,000
theFinalTime, 42	ICPG1D, 599
•	OFELI::ICPG1D, 603
theIteration, 41	ICPG2DT, 607
theNode, 40	
theSide, 41	OFELI::ICPG2DT, 610
theStep, 41	ICPG3DT, 614
theTime, 42	OFELI::ICPG3DT, 617, 618
theTimeStep, 41	IDENT_PREC
theTolerance, 42	OFELI, 70
Verbosity, 41	IDENTITY
Grad	OFELI, 70
OFELI::DC2DT3, 258	ILU_PREC
OFELI::DC3DAT3, 300	OFELI, 70
OFELI::Quad4, 888	INCOMPRESSIBLE_NAVIER_STOKES
OFELI::Triang3, 970	OFELI, 69
O T	INITIAL_AUX_1
OFELI::Triang6S, 972	OFELI, 68
Gradient	·
OFELI::MyOpt, 788	INITIAL_AUX_2
Grid, 581	OFELI, 68
OFELI, 76, 77	INITIAL_AUX_3
GS	OFELI, 68
Solver, 116	INITIAL_AUX_4
	OFELI, 68
HEAT_FLUX	INITIAL_FIELD
OFELI, 67	OFELI, 68
HEAT_SOURCE	INTERNAL_BOUNDARY
OFELI, 67	OFELI::Side, 896
HEUN	INTERNAL_SIDE
OFELI, 68	OFELI::Side, 896
HLL_SOLVER	•
	IOField, 619
OFELI::ICPG1D, 602	OFELI, 71, 72
OFELI::ICPG2DT, 610	IPF, 620
OFELI::ICPG3DT, 617	OFELI::IPF, 623
OFELI::LCL1D, 710	InitHeap
OFELI::LCL2DT, 715	OFELI::FMM2D, 575
OFELI::LCL3DT, 721	OFELI::FMM3D, 576
OFELI::Muscl, 776	InitPetsc
OFELI::Muscl1D, 779	Global Variables, 42
OFELI::Muscl2DT, 782	InitialData
OFELI::Muscl3DT, 786	OFELI::UserData, 989
HLLC_SOLVER	Initialize
OFELI::ICPG1D, 602	OFELI::ICPG2DT, 613
OFELI:ICPG2DT, 610	OFELI::LCL2DT, 717
·	
OFELL LCLID 710	OFELI::Muscl2DT, 783
OFELI::LCL1D, 710	Input/Output, 44
OFELI::LCL2DT, 715	MAX_ARRAY_SIZE, 44
OFELI::LCL3DT, 721	MAX_INPUT_STRING_LENGTH, 44
OFELI::Muscl, 776	MAX_NB_PAR, 44

Insert	JouleHeating
OFELI::PETScVect, 864	OFELI::DC2DT3, 258
insertBC	
OFELI::PETScVect, 856, 857	LAPLACE
OFELI::Vect, 1005, 1006	OFELI, 69
insertCircle	LCL1D, 708
OFELI::Domain, 355	LCL2DT, 713
insertLine	OFELI::LCL2DT, 715
OFELI::Domain, 354	LCL3DT, 718
•	OFELI::LCL3DT, 721
insertRequiredEdge	· · · · · · · · · · · · · · · · · · ·
OFELI::Domain, 355	LCapacity
insertRequiredVertex	OFELL::DC1DL2, 230
OFELI::Domain, 355	OFELL DC2DT3, 253
insertSubDomain	OFELI::DC3DAT3, 297
OFELI::Domain, 355	OFELI::DC3DT4, 318
insertVertex	LCapacityToLHS
OFELI::Domain, 354	OFELI::DC1DL2, 230
IntegND	OFELI::DC2DT3, 253
OFELI::EC2D1T3, 369	OFELI::DC2DT6, 278
Interface Problems, 45	OFELI::DC3DAT3, 297
Invert	OFELI::DC3DT4, 318
OFELI, 93	OFELI::Equa_Therm, 540
isActive	LCapacityToRHS
OFELI, 80, 81	OFELI::DC1DL2, 230
isCloseTo	OFELI::DC2DT3, 253
OFELI::Point, 876	OFELI::DC2DT6, 278
isFactorized	OFELI::DC3DAT3, 297
OFELI::BMatrix, 219	OFELI::DC3DT4, 318
•	OFELI::Equa_Therm, 540
OFELL DOMAIN 360	LEAP_FROG
OFELI::DSMatrix, 363	OFELI, 68
OFELI::Matrix, 750	•
OFELI::SkMatrix, 914	LF_SOLVER
OFELI::SkSMatrix, 922	OFELI::ICPG1D, 602
OFELI::SpMatrix, 941	OFELI::ICPG2DT, 610
OFELI::TrMatrix, 985	OFELI::ICPG3DT, 617
IsIn	OFELI::LCL1D, 710
OFELI::Element, 472	OFELI::LCL2DT, 715
isOnBoundary	OFELI::LCL3DT, 721
OFELI::Edge, 382	OFELI::Muscl, 776
OFELI::Element, 471	OFELI::Muscl1D, 779
OFELI::Node, 793	OFELI::Muscl2DT, 782
OFELI::Side, 898	OFELI::Muscl3DT, 786
isWithMesh	LHS1_Convection
OFELI::PETScVect, 853	OFELI::NSP2DQ41, 799
Iter	LHS2_Convection
OFELI, 103, 104	OFELI::NSP2DQ41, 799
Iter $< T_{-} >$ , 629	LHS
Iteration	OFELI::Laplace2DT3, 695
	LINEARIZED_ELASTICITY
OFELI, 70	OFELI, 69
IterationLoop	LMass
Solver, 110	
To colo:	OFELL::Bar2DL2, 178
Jacobi	OFELI::Elas2DT3, 416
Solver, 117	LMassToLHS

OFELL:Bar2DL2, 178 OFELL:Elas2DT3, 415 OFELL:Bar2DL2, 178 OFELL:Bar2DL2, 178 OFELL:Bar2DL2, 178 OFELL:Equa Solid, 522 LOAD OFELL:Equa Solid, 522 LOAD OFELL, 67 LOCAL ARRAY OFELL, 68 LORENTZ FORCE OFELL, 67 OFELL, 67 UMPED_CAPACITY OFELL, 67 LUMPED_MASS OFELL, 67 Label Finite Element Mesh, 25, 26 Laplace equation, 46 Laplace equation, 46 LaplacelDL2, 630 OFELL:ElaplacelDL2, 633 LaplacelDL3, 645 OFELL:EptScMatrix, 930 OFELL:EptMatrix, 981 Laplace2DFVT, 661 OFELL:Laplace2DFVT, 664 Laplace2DPWT, 661 OFELL:Laplace2DT3, 691 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 931 Limiter OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 931 Limiter OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 839 OFELL:EptScMatrix, 931 Limiter OFELL:EptScMatrix, 839 OFELL:Equa Laplace, 508 OFELL:Equa Laplace, 508 OFELL:Equa Laplace, 508		
OFELI:Equa Solid, 522  LMassToRHS  OFELI:Bar2D12, 178  OFELI:Blas2DT3, 416  OFELI:Blas2DT3, 416  OFELI:Bqua Solid, 522  LOAD  OFELI, 67  LOCAL ARRAY OFELI, 68  LORENTZ.FORCE OFELI, 67  LUMPED.CAPACITY OFELI, 67  LUMPED.ASS OFELI:DCAPACITY OFELI, 67  LUMPED MASS OFELI:DCAPACITY OFELI, 67  Lable Finite Element Mesh, 25, 26  Laplace equation, 46  Laplace equation, 46  LaplacetDL2, 630 OFELI:Laplace1DL2, 633  Laplace1DL3, 645 OFELI:ETSENdatrix, 838 OFELI:ETSPMatrix, 930 OFELI:EThaplace2DFVT, 664  Laplace2DDT3, 691 OFELI:Laplace2DMHRT0, 679  Laplace2DT3, 691 OFELI:Explanetrix, 931  Limiter OFELI:CPG3DT, 617 OFELI:CPG3DT, 617 OFELI:CPG3DT, 617 OFELI:CCPG1D, 602 OFELI:CCPG1DT, 610 OFELI:CCPG1DT, 610 OFELI:CCPG1DT, 610 OFELI:CCPG1DT, 617 OFELI:CLID, 710 OFELI:CLID, 710 OFELI:CLIMUSCJDT, 782 OFELI:MuscJDT, 786  IcalMatrix OFELI:Be, 9, 90 LocalMatrix ≺ T., NR., NC. >, 736 DcalMatrix ← T., NR., NC. >, 736 DcalMoteVector OFELI:Bac2DT3, 302 DcalNetvect ← T., N. >, 731 DcalMatrix ← T., NR., NC. >, 736 DcalNodeVector OFELI:Bac2DT3, 420 OFELI:Bac2DT3, 420 OFELI:Bac2DT3, 420 OFELI:Bac2DT3, 420 OFELI:Equa.SDD4, 398 OFELI:Bac2DT3, 420 OFELI:Equa.SDD4, 437 OFELI:Equa.Balac2DT3, 420 OFELI:Equa.Balac2DT4, 453 OFELI:Equa.Balac2DT4, 453 OFELI:Equa.Balac2DT4, 453 OFELI:Equa.Balac2DT4, 453 OFELI:Equa.Balac2DT4, 453 OFELI:Equa.Balac2DT5, 598 OFELI:Laplace2DWHRT0, 679 United for the formation of the first	OFELI::Bar2DL2, 178	LinearSolver
LMassToRHS  OFELL:Bar2DL2, 178  OFELL:Bar2D13, 416  OFELL:Equa Solid, 522  LOAD  OFELL:Bequa Solid, 522  LOAD  OFELL:Bequa Solid, 522  LOCAL ARRAY  OFELL:Beam3D12, 198  OFELL:Beam3D12, 198  OFELL:Beam3D12, 198  OFELL:DC2DT16, 281  OFELL:DC2DT16, 281  OFELL:DC2DT16, 281  OFELL:DC2DT16, 281  OFELL:DC2DT13, 370  OFELL:DC3DAT3, 302  OFELL:DC3DAT3, 302  OFELL:DC3DAT3, 302  OFELL:EQUA SOLIT, 324  OFELL:EQUA SOLIT, 324  OFELL:EQUA SOLIT, 324  OFELL:ELEBAR2D14, 398  OFELL:ELEBAR2D14, 398  OFELL:ELEBAR2D15, 349  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D15, 420  OFELL:ELEBAR2D16, 430  OFELL:ELEBAR2D17, 420  OFELL:ELEBAR2D17, 420  OFELL:ELEBAR2D18, 437  OFELL:ELBARSD17, 420  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 370  OFELL:EDC2D17, 281  OFELL:ELBARSD17, 370  OFELL:EDC2D17, 291  OFELL:ELBARSD12, 188  OFELL:EDC2D17, 370  OFELL:ELBARSD12, 189  OFELL:EDC2D17, 361  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 380  OFELL:ELBARSD17, 380  OFELL:ELBARSD17, 370  OFELL:ELBARSD17, 380  OFELL:ELBARSD17, 370  OFELL:ELBARSD17,	OFELI::Elas2DT3, 415	OFELI::LinearSolver, 732–734
OFELI::Blas2DT3, 416 OFELI::Blas2DT3, 416 OFELI::Blas2DT3, 416 OFELI::Blas2DT3, 416 OFELI::Blas2DT3, 416 OFELI::Blas2DT3, 416 OFELI::Blas2DL2, 181 OFELI::Blas2DL2, 181 OFELI::Blas2DL2, 198 OFELI::DCIDL2, 236 OFELI::DCIDL2, 236 OFELI::DCIDL2, 236 OFELI::DCIDL2, 236 OFELI::DCIDL3, 261 OFELI::DCIDT3, 261 OFELI::DCIDT3, 261 OFELI::DCIDT4, 236 OFELI::DCIDT4, 237 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT4, 281 OFELI::DCIDT4, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT5, 281 OFELI::DCIDT4, 281 OFELI::DCIDT5, 394 OFELI::Blas2DT4, 324 OFELI::Blas2DT4, 392 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Blas2DT3, 420 OFELI::Blas2DT3, 420 OFELI::Blas2DT3, 420 OFELI::Blas2DT3, 420 OFELI::Blas2DT3, 420 OFELI::Blas2DT3, 420 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Blas2DT4, 453 OFELI::Equa. Fluid, 494 OFELI::Equa. Solid, 524 OFELI::Equa. Solid, 524 OFELI::Equa. Solid, 524 OFELI::Equa. Therm, 543 OFELI::Equa. Therm, 543 OFELI::Equa. Therm, 543 OFELI::Equa. Therm, 543 OFELI::Laplace1DL2, 635 OFELI::Laplace2DTYT, 666 OFELI::Laplace2DMHRT0, 679 Laplace2DT3, 691 OFELI::Laplace2DMHRT0, 679 Laplace2DT3, 694 OFELI::Laplace2DMHRT0, 679 Laplace2DT3, 694 OFELI::SpMatrix, 931 Localize OFELI::Muscl2DT, 766 OFELI::Muscl2DT, 765 OFELI::CCIDT, 715 OFELI::Muscl2DT, 775 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 786 OFELI::Muscl2DT, 786 OFELI::Muscl2DT, 786 OFELI::Muscl2DT, 786	OFELI::Equa_Solid, 522	LinearSolver< T <sub>−</sub> >, 731
OFELI::Elas2DT3, 416 OFELI::Equa. Solid, 522 LOAD OFELI, 67 LOCAL ARRAY OFELI, 68 OFELI, 68 LORENTZ.FORCE OFELI, 67 LUMPED. CAPACITY OFELI, 67 LUMPED. MASS OFELI, 67 LOBEL GOFELI: DC2DT4, 224 OFELI: Elas2DQ4, 398 OFELI: Elas2DQ4, 398 OFELI: Elas2DQ4, 398 OFELI: Elas2DT3, 420 OFELI: Elas2DT3, 420 OFELI: Elas2DT8, 453 OFELI: Equa Electromagnetics, 479 OFELI: Equa Laplace, 508 OFELI: Equa Laplace, 508 OFELI: Equa Lo, 558 OFELI: Equa Lo, 568 OF	LMassToRHS	LocalMatrix
OFELI:Equa Solid, 522  LOAD OFELI, 67  LOCAL_ARRAY OFELI, 68 LORENTZ, FORCE OFELI, 67  LORENTZ, FORCE OFELI, 67  LUMPED_CAPACITY OFELI, 67  LUMPED_MASS OFELI, 67  Label Finite Element Mesh, 25, 26  Laplace equation, 46  Laplace1DL2, 630 OFELI::Laplace1DL2, 633  Laplace1DL3, 645 OFELI::PSEMatrix, 838 OFELI::PSTSCMatrix, 838 OFELI::PSTSCMatrix, 930 OFELI::Laplace2DFVT, 664 Laplace2DFVT, 661 OFELI::Laplace2DFVT, 664 Laplace2DD OFELI::Laplace2DFVT, 664 Cofeli::Laplace2DFVT, 664 Cofeli::PSPMatrix, 931 Limiter OFELI::Laplace2DT3, 694, 695 Laplace2D OFELI::Laplace2DT3, 694 OFELI::Laplace2DT3, 691 OFELI::Laplace2DT3, 691 OFELI::Laplace2DT3, 691 OFELI::CPG3DT, 610 OFELI::Lopla, 602 OFELI::CPG3DT, 610 OFELI::LC1D, 710 OFELI::LC1D, 715 OFELI::LC1D, 775 OFELI::Muscl3DT, 786  MAX_LIMITER  DAX_ARRAY_SIZE Input/Output, 44 MAX_LIMITER  DAX_ARRAY_SIZE Input/Output, 44 MAX_LIMITER	OFELI::Bar2DL2, 178	OFELI, 89, 90
OFELI:Equa_Solid, 522  LOAD OFELI, 67  LOCAL_ARRAY OFELI, 68 LORENTZ_FORCE OFELI, 67  LORENTZ_FORCE OFELI, 67  LUMPED_CAPACITY OFELI, 67  LUMPED_MASS OFELI, 67  Label Finite Element Mesh, 25, 26 Laplace quation, 46 Laplace1DL2, 630 OFELI::Laplace1DL2, 633 Laplace1DL3, 645 OFELI::Papace1DL3, 648 Laplace1D OFELI::PTSCMatrix, 838 OFELI::PSMatrix, 930 OFELI::PTSCMatrix, 931 COFELI::Laplace2DFVT, 664 Laplace2DWHRT0, 679 Caplace2D OFELI::Laplace2DHRT0, 679 Caplace2D OFELI::Laplace2DT7, 640 Cofeli::PSMAtrix, 931 Cofeli::PSMAtrix, 931 Cofeli::PSMAtrix, 931 Cofeli::PSMAtrix, 931 Cofeli::Coff, 61 OFELI::Laplace2DT7, 640 Cofeli::Coff, 61 OFELI::Laplace2DT7, 641 Cofeli::Coff, 61 OFELI::Laplace2DT7, 645 Cofeli::Coff, 61 OFELI::Laplace2DT7, 640 Cofeli::Coff, 61 OFELI::Laplace2DT7, 641 Cofeli::Coff, 61 OFELI::Coff, 62 OFELI::Coff, 61 OFELI::Coff, 62 OFELI::Coff, 62 OFELI::Coff, 62 OFELI::Coff, 63 OFELI::Coff, 64	OFELI::Elas2DT3, 416	
LOAD		
OFELI, 67         OFELI::Beam3DL2, 198           LOCAL ARRAY         OFELI::DCIDL2, 236           OFELI, 68         OFELI::DC2DT3, 261           LORENTZ FORCE         OFELI::DC2DT6, 281           OFELI, 67         OFELI::DC3DAT3, 302           LUMPED CAPACITY         OFELI::DC3DT4, 324           OFELI, 67         OFELI::BC2DIT3, 370           LUMPED MASS         OFELI::BC2DIT3, 370           OFELI, 67         OFELI::BC2DIT3, 370           Lumbel         OFELI::Bas2DQ4, 398           OFELI, 67         OFELI::Bas2DT3, 420           Label         OFELI::Bas2DT3, 420           Finite Element Mesh, 25, 26         OFELI::Blas3DT4, 453           Laplace equation, 46         OFELI::Equa Electromagnetics, 479           Laplace1DL2, 630         OFELI::Equa Electromagnetics, 479           OFELI::Laplace1DL3, 645         OFELI::Equa Fluid, 494           OFELI::Laplace1DL3, 645         OFELI::Equa Laplace, 508           OFELI::PETSCMatrix, 838         OFELI::Equa Laplace, 508           OFELI::PETSCMatrix, 838         OFELI::Equa Laplace, 508           OFELI::Taplace2DTT, 661         OFELI::Laplace2DTT, 666           OFELI::Laplace2DHTRT0, 679         OFELI::Laplace2DMHRT0, 679           Laplace2D         OFELI::DPATA, 691           OFELI::SpMatri	*	
LOCAL_ARRAY         OFELL:BC1DL2, 236           OFELL, 68         OFELL:DC2DT3, 261           LORENTZ_FORCE         OFELL:DC2DT6, 281           OFELL, 67         OFELL:DC3DAT3, 302           LUMPED_CAPACITY         OFELL::DC3DT4, 324           OFELL, 67         OFELL::EC2DIT3, 370           LUMPED_MASS         OFELL::Elas2DQ4, 398           OFELL, 67         OFELL::Ba32DQ4, 398           Label         OFELL::Ba3DT8, 437           Finite Element Mesh, 25, 26         OFELL::Ba32DT4, 453           Laplace equation, 46         OFELL::Ba3DT4, 453           Laplace equation, 46         OFELL::Bqua_Electromagnetics, 479           Laplace1DL2, 630         OFELL::Equa_Electromagnetics, 479           OFELL::Laplace1DL3, 645         OFELL::Equa_Electromagnetics, 479           OFELL::Laplace1DL3, 645         OFELL::Equa_Tluid, 494           OFELL::Laplace1DL3, 648         OFELL::Equa_Tluid, 494           Laplace1DL3, 648         OFELL::Equa_Therm, 543           Laplace1D         OFELL::Equa_Therm, 543           OFELL::PTSCMatrix, 838         OFELL::HelmholtzBT3, 587           OFELL::Thankirx, 981         OFELL::Laplace2DFVT, 666           Laplace2DHRT0, 676         OFELL::Laplace2DTMHRT0, 681           OFELL::Laplace2DTMHRT0, 679         OFELL::NP2DQ41, 801 <td></td> <td></td>		
OFELI, 68 LORENTZ_FORCE OFELI, 67 LUMPED_CAPACITY OFELI, 67 LUMPED_MASS OFELI, 67 LUMPED_MASS OFELI, 67  LUMPED_MASS OFELI, 67  Lumped Mesh, 25, 26 Label Eaplace equation, 46 Laplace equation, 46 Laplace1DL2, 630 OFELI::Laplace1DL2, 633 Laplace1DL3, 645 OFELI::Laplace1DL3, 648 Laplace1D OFELI::PetrscMatrix, 838 OFELI::PetrscMatrix, 930 OFELI::Laplace2DFVT, 661 OFELI::Laplace2DFVT, 664 Laplace2DMHRT0, 679 Laplace2DMHRT0, 679 Laplace2DMHRT0, 679 Laplace2DG, 610 OFELI::Laplace2DT3, 694, 695 Laplace2D OFELI::PetrscMatrix, 839 OFELI::PetrscMatrix, 839 OFELI::PetrscMatrix, 839 OFELI::Laplace2DT3, 694, 695 Laplace2D OFELI::Laplace2DT3, 694, 695 LocalVect OFELI::Laplace2DT3, 694, 695 LocalVect OFELI::CPG3DT, 617 OFELI::CPG3DT, 617 OFELI::CPG3DT, 617 OFELI::CPG3DT, 617 OFELI::CPG3DT, 721 OFELI::Muscl, 775 OFELI::Muscl, 775 OFELI::Muscl2DT, 782 OFELI::Muscl3DT, 786 MAX_LIMITER		·
LORENTZ_FORCE         OFELI.:DC2DT6, 281           OFELI, 67         OFELI::DC3DAT3, 302           LUMPED_CAPACITY         OFELI::DC3DAT3, 302           OFELI, 67         OFELI::C2D1T3, 370           LUMPED_MASS         OFELI::Elas2DQ4, 398           OFELI, 67         OFELI::Elas2DT3, 420           Label         OFELI::Elas3DH8, 437           Finite Element Mesh, 25, 26         OFELI::Elas3DT4, 453           Laplace equation, 46         OFELI::Elas3DT4, 453           Laplace equation, 46         OFELI::Equa_Fluid, 494           Laplace plot2, 630         OFELI::Equa_Fluid, 494           OFELI::Laplace1DL2, 633         OFELI::Equa Fluid, 494           OFELI::Laplace1DL3, 645         OFELI::Equa Laplace, 508           OFELI::Laplace1DL3, 648         OFELI::Equa Laplace, 508           Laplace1D         OFELI::Equa Solid, 524           OFELI::PETScMatrix, 838         OFELI::Equa Therm, 543           OFELI::PETScMatrix, 838         OFELI::Laplace1DL2, 635           OFELI::Aplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DHTRT0, 681           Laplace2DT3, 691         OFELI::MSP2DQ41, 801           OFELI::SpMatrix, 931         DGELI::MSP2DQ41, 801           Limiter         OFELI::MSP2DQ41, 801 <td></td> <td></td>		
OFELI, 67 LUMPED.CAPACITY OFELI, 67 OFELI:DC3DT4, 324 OFELI:DC3DT4, 324 OFELI:DC3DT4, 324 OFELI:DC3DT4, 324 OFELI:DC3DT4, 324 OFELI:DC3DT4, 324 OFELI:EC2DIT3, 370 UMPED.MASS OFELI, 67 OFELI:Elas2DQ4, 398 OFELI, 67 Label OFELI:Elas2DT3, 420 OFELI:Elas3DT4, 453 Laplace equation, 46 Laplace1DL2, 630 OFELI:Lequa Electromagnetics, 479 OFELI:Laplace1DL2, 633 OFELI:Equa Laplace, 508 Laplace1DL3, 645 OFELI:Laplace1DL3, 648 OFELI:Equa Laplace, 508 Laplace1D OFELI:PETSCMatrix, 838 OFELI:PETSCMatrix, 838 OFELI:PETSCMatrix, 930 OFELI:I-Aplace2DFVT, 664 Uaplace2DFVT, 661 OFELI:Laplace2DFVT, 664 Uaplace2DFVT, 664 Uaplace2DFVT, 664 Uaplace2DFVT, 664 Uaplace2DT3, 691 OFELI:Laplace2DMHRT0, 679 Uaplace2DT3, 691 OFELI:Laplace2DT3, 694, 695 Uaplace2D OFELI:PETSCMatrix, 839 OFELI:SpMatrix, 931 Umiter OFELI:I-CPG3DT, 617 OFELI:I-CPG3DT, 617 OFELI:LC1DT, 710 OFELI:LC1DT, 710 OFELI:LC1DT, 715 OFELI:LC1DT, 721 OFELI:Muscl, 775 OFELI:Muscl2DT, 782 OFELI:Muscl3DT, 786 MAX_INPUT_STRING_LENGTH Input/Output, 44 MAX_LIMITER		
LUMPED.CAPACITY         OFELI::DC3DT4, 324           OFELI, 67         OFELI::EC2D1T3, 370           LUMPED.MASS         OFELI::Elas2DQ4, 398           OFELI, 67         OFELI::Elas2DT3, 420           Label         OFELI::Elas3DH8, 437           Finite Element Mesh, 25, 26         OFELI::Elas3DT4, 453           Laplace equation, 46         OFELI::Equa Electromagnetics, 479           Laplace1DL2, 630         OFELI::Equa Laplace, 508           OFELI::Laplace1DL3, 645         OFELI::Equa Laplace, 508           OFELI::Laplace1DL3, 648         OFELI::Equa Solid, 524           Laplace1D         OFELI::Equa Therm, 543           OFELI::PETSCMatrix, 838         OFELI::Equa Therm, 543           OFELI::PETSCMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::Taplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DMHRT0, 681           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI::NSP2DQ41, 801           OFELI::PETSCMatrix, 931         LocalVect           Limiter         OFELI::QC2DT, 610         MAGNETIC           OFELI::CPC3DT, 610         MAGNETIC           OFELI::CPC3DT, 617         OFELI, 67		
OFELI, 67 LUMPED_MASS OFELI. 67 OFELI::Elas2DQ4, 398 OFELI. 67 Label OFELI::Elas2DT3, 420 OFELI::Elas3DT4, 437 Finite Element Mesh, 25, 26 Laplace equation, 46 Laplace1DL2, 630 OFELI::Laplace1DL2, 633 COFELI::Laplace1DL3, 645 OFELI::Laplace1DL3, 648 COFELI::PETScMatrix, 838 OFELI::PTMatrix, 981 Caplace2DFVT, 661 OFELI::Laplace2DFVT, 664 Caplace2DMHRT0, 676 OFELI::Laplace2DMHRT0, 679 Caplace2D OFELI::Laplace2DT3, 694, 695 Caplace2D OFELI::PETScMatrix, 839 OFELI::Laplace2DT3, 694, 695 Caplace2D OFELI::PETSCMatrix, 839 OFELI::Laplace2DT3, 694, 695 Caplace2D OFELI::Deface2DT3, 694, 695 Caplace2DT3 CofeLI::CPC3DT, 610 OFELI::CPC3DT, 617 OFELI::LC12DT, 715 OFELI::LC12DT, 721 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 782 OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 782 OFELI::Muscl3DT, 786	•	
LUMPED MASS OFELI, 67         OFELI:Elas2DQ4, 398 OFELI:Elas2DT3, 420           Label Finite Element Mesh, 25, 26         OFELI::Elas3DH8, 437 OFELI::Elas3DT4, 453           Laplace equation, 46         OFELI::Equa Electromagnetics, 479           Laplace1DL2, 630         OFELI::Equa Laplacetor, 494           OFELI::Laplace1DL2, 633         OFELI::Equa Laplace, 508           Laplace1DL3, 645         OFELI::Equa Laplace, 508           OFELI::Laplace1DL3, 648         OFELI::Equa Solid, 524           Laplace1D         OFELI::Equa Solid, 524           OFELI::PTScMatrix, 838         OFELI::Equation, 558           OFELI::PSpMatrix, 930         OFELI::Laplace1DL3, 651           OFELI::PAplace1DL3, 651         OFELI::Laplace1DL3, 651           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DTVT, 666           OFELI::Laplace2DMHRT0, 679         OFELI::Laplace2DT3, 698           Laplace2D         OFELI::Daplace2DT3, 694           OFELI::PETScMatrix, 839         OFELI::MSP2DQ41, 801           OFELI::SpMatrix, 931         LocalVect           Limiter         OFELI, 93, 94           OFELI::ICPG2DT, 610         MAGNETIC           OFELI::CLC2DT, 715         OFELI, 67           OFELI::CLC1D, 710         OFELI, 67		
OFELI, 67  Label Finite Element Mesh, 25, 26  Finite Element Mesh, 25, 26  Aplace equation, 46  Laplace1DL2, 630  OFELI::Equa Electromagnetics, 479  OFELI::Laplace1DL2, 633  Aplace1DL3, 645  OFELI::Laplace1DL3, 648  Aplace1D  OFELI::PETScMatrix, 838  OFELI::SpMatrix, 930  OFELI::Laplace2DFVT, 661  Aplace2DFVT, 661  Aplace2DMHRT0, 676  OFELI::Laplace2DMHRT0, 679  Laplace2DT3, 691  OFELI::Bplace2DT3, 694, 695  Laplace2D  OFELI::DpriscMatrix, 839  OFELI::EpriscMatrix, 839  OFELI::DpriscMatrix, 839  OFELI::Dpri	·	
Label		
Finite Element Mesh, 25, 26  Laplace equation, 46  Laplace 1DL2, 630  OFELI::Equa Electromagnetics, 479  OFELI::Laplace1DL2, 633  Laplace1DL3, 645  OFELI::Equa Fluid, 494  OFELI::Equa Fluid, 494  OFELI::Equa Solid, 524  OFELI::Equa Solid, 524  OFELI::Equa Solid, 524  OFELI::Equa Therm, 543  OFELI::Equation, 558  OFELI::PETScMatrix, 838  OFELI::PETScMatrix, 930  OFELI::ThMatrix, 981  Laplace2DFVT, 661  OFELI::Laplace2DFVT, 664  Laplace2DFVT, 661  OFELI::Laplace2DFVT, 664  Copeli::Laplace2DMHRT0, 679  Laplace2DT3, 691  OFELI::Laplace2DT3, 694, 695  Laplace2D  OFELI::SpMatrix, 931  Limiter  OFELI::SpMatrix, 931  Limiter  OFELI::CPG1D, 602  OFELI::CPG3DT, 617  OFELI::CPG3DT, 617  OFELI::LC13DT, 721  OFELI::Muscl2DT, 782  OFELI::Muscl2DT, 782  OFELI::Muscl2DT, 782  OFELI::Muscl2DT, 786		
Laplace equation, 46 Laplace1DL2, 630 OFELI::Equa .Fluid, 494 OFELI::Laplace1DL2, 633 OFELI::Equa .Laplace, 508  Laplace1DL3, 645 OFELI::Laplace1DL3, 648 COFELI::Laplace1DL3, 648 COFELI::PETScMatrix, 838 OFELI::PETScMatrix, 930 OFELI::TrMatrix, 981 OFELI::Laplace2DFVT, 661 OFELI::Laplace2DFVT, 664 COFELI::Laplace2DFVT, 664 COFELI::Laplace2DFVT, 664 COFELI::Laplace2DMHRT0, 679 COFELI::Laplace2DMHRT0, 679 COFELI::PETScMatrix, 839 OFELI::PETScMatrix, 839 OFELI::SpMatrix, 931 LocalVect Laplace2D OFELI::SpMatrix, 931 LocalVect Corell::CPG1D, 602 OFELI::IcPG3DT, 617 OFELI::LC1D, 710 OFELI::LC1D, 710 OFELI::LC1D, 775 OFELI::LC1D, 775 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 782 OFELI::Muscl2DT, 786 OFEL		
Laplace1DL2, 630         OFELI::Equa.Fluid, 494           OFELI::Laplace1DL2, 633         OFELI::Equa.Laplace, 508           Laplace1DL3, 645         OFELI::Equa.Solid, 524           OFELI::Laplace1DL3, 648         OFELI::Equa.Therm, 543           Laplace1D         OFELI::Equa.Therm, 543           OFELI::PETScMatrix, 838         OFELI::HelmoltzBT3, 587           OFELI::SpMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::TrMatrix, 981         OFELI::Laplace1DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DFVT, 666           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2D         OFELI::NSP2DQ41, 801           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI::NSP2DQ41, 801           OFELI::SpMatrix, 931         LocalVect           Limiter         OFELI:,93, 94           OFELI::ICPG3DT, 610         MAGNETIC           OFELI::ICPG2DT, 610         MAGNETIC           OFELI::LCL2DT, 715         OFELI, 67           OFELI::LCL2DT, 715         OFELI, 67           OFELI::Muscl, 775         MAX_ARRAY_SIZE           OFELI::Muscl1D, 779 </td <td></td> <td></td>		
OFELI::Laplace1DL2, 633  Laplace1DL3, 645	• •	
Laplace1DL3, 645         OFELI::Equa.Solid, 524           OFELI::Laplace1DL3, 648         OFELI::Equa.Therm, 543           Laplace1D         OFELI::Equation, 558           OFELI::PETScMatrix, 838         OFELI::HelmholtzBT3, 587           OFELI::SpMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::TMatrix, 981         OFELI::Laplace1DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DMHRT0, 681           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::NSP2DQ41, 801           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI, 93, 94           OFELI::PTScMatrix, 839         LocalVect           OFELI::93, 94         LocalVect           LocalVect         OFELI, 90, 94, 95           OFELI::OFG1D, 602         OFELI, 90, 94, 95           OFELI::ICPG3DT, 610         MAGNETIC           OFELI::LCL1D, 710         MASS           OFELI::LCL3DT, 721         MAX_ARAY_SIZE           Input/Output, 44         Input/Output, 44           OFELI::Muscl1D, 779         MAX_INPUT_STRING_LENGTH           OFELI::Muscl2DT, 782	•	
OFELI::Laplace1DL3, 648  Laplace1D  OFELI::PETScMatrix, 838  OFELI::SpMatrix, 930  OFELI::SpMatrix, 981  Coperation of the proof of the	*	
Laplace1D         OFELI::Equation, 558           OFELI::PETScMatrix, 838         OFELI::HelmholtzBT3, 587           OFELI::SpMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::TrMatrix, 981         OFELI::Laplace2DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DT3, 691         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::NSP2DQ41, 801           OFELI::Laplace2DT3B, 958         LocalVect           Loplace2D         OFELI::TINS2DT3B, 958           LocalVect         OFELI::TINS2DT3B, 958           LocalVect         T., N>, 738           LocalVect         T., N>, 738           LocalVect         T., N>, 738           LocalIze         OFELI::DOBLE OFELI::CPG1D, 602           OFELI::ICPG3DT, 610         MAGNETIC           OFELI::ICPG3DT, 617         OFELI, 67           OFELI::LCL1D, 710         MASS           OFELI::LCL2DT, 715         OFELI, 67           OFELI::Muscl, 775         Input/Output, 44           OFELI::Muscl1D, 779         MAX_INPUT_STRING_LENGTH           OFELI::Muscl2DT, 786         MAX_LIMITER		<u> </u>
OFELI::PETScMatrix, 930         OFELI::HelmholtzBT3, 587           OFELI::SpMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::TrMatrix, 981         OFELI::Laplace1DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::NSP2DQ41, 801           OFELI::Laplace2DT3B, 958         LocalVect           OFELI::SpMatrix, 839         LocalVect           OFELI::SpMatrix, 931         Localize           Limiter         OFELI, 90, 94, 95           OFELI::ICPG1D, 602         MAGNETIC           OFELI::ICPG2DT, 610         MAGNETIC           OFELI::LCPG3DT, 617         OFELI, 67           OFELI::LCL1D, 710         MASS           OFELI::LCL3DT, 721         MAX_ARRAY_SIZE           OFELI::Muscl, 775         Input/Output, 44           OFELI::Muscl2DT, 782         Input/Output, 44           OFELI::Muscl3DT, 786         MAX_LIMITER		OFELI::Equa_Therm, 543
OFELI::SpMatrix, 930         OFELI::Laplace1DL2, 635           OFELI::TrMatrix, 981         OFELI::Laplace1DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::NSP2DQ41, 801           OFELI::Laplace2DT3B, 958         OFELI::TINS2DT3B, 958           OFELI::Laplace2DT3B, 994         OFELI::NSP2DQ41, 801           OFELI::PETScMatrix, 839         LocalVect           OFELI::SpMatrix, 931         LocalVect < T-, N- >, 738           LocalVect < T-, N- >, 738         Localize           Limiter         OFELI, 90, 94, 95           OFELI::ICPG1D, 602         MAGNETIC           OFELI::ICPG3DT, 610         MAGNETIC           OFELI::ICPG3DT, 617         OFELI, 67           OFELI::LCL3DT, 710         MASS           OFELI::LCL3DT, 721         MAX_ARRAY_SIZE           OFELI::Muscl, 775         Input/Output, 44           OFELI::Muscl2DT, 782         Input/Output, 44           OFELI::Muscl3DT, 786         MAX_LIMITER	Laplace1D	OFELI::Equation, 558
OFELI::TrMatrix, 981         OFELI::Laplace1DL3, 651           Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::TINS2DT3B, 958           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI, 93, 94           OFELI::PETScMatrix, 839         LocalVect < T_, N_ >, 738           OFELI::SpMatrix, 931         Localize           Limiter         OFELI, 90, 94, 95           OFELI:ICPG1D, 602         MAGNETIC           OFELI:ICPG3DT, 610         MAGNETIC           OFELI, 67         OFELI, 67           OFELI:LCL1D, 710         MASS           OFELI:LCL2DT, 715         OFELI, 67           OFELI:Muscl, 775         MAX_ARRAY_SIZE           OFELI:Muscl1D, 779         MAX_INPUT_STRING_LENGTH           OFELI:Muscl2DT, 782         Input/Output, 44           OFELI:Muscl3DT, 786         MAX_LIMITER	OFELI::PETScMatrix, 838	OFELI::HelmholtzBT3, 587
Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::TINS2DT3B, 958           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI, 93, 94           OFELI::PETScMatrix, 839         LocalVect < T-, N- >, 738           OFELI::SpMatrix, 931         Localize           Limiter         OFELI, 90, 94, 95           OFELI::ICPG1D, 602         MAGNETIC           OFELI::ICPG2DT, 610         MAGNETIC           OFELI::LCPG3DT, 617         OFELI, 67           OFELI::LCL1D, 710         MASS           OFELI::LCL2DT, 715         OFELI, 67           OFELI::Muscl, 775         Input/Output, 44           OFELI::Muscl1D, 779         MAX_INPUT_STRING_LENGTH           OFELI::Muscl2DT, 782         Input/Output, 44           OFELI::Muscl3DT, 786         MAX_LIMITER	OFELI::SpMatrix, 930	OFELI::Laplace1DL2, 635
Laplace2DFVT, 661         OFELI::Laplace2DFVT, 666           OFELI::Laplace2DFVT, 664         OFELI::Laplace2DMHRT0, 681           Laplace2DMHRT0, 676         OFELI::Laplace2DT3, 698           OFELI::Laplace2DMHRT0, 679         OFELI::NSP2DQ41, 801           Laplace2DT3, 691         OFELI::TINS2DT3B, 958           OFELI::Laplace2DT3, 694, 695         LocalVect           Laplace2D         OFELI, 93, 94           OFELI::PETScMatrix, 839         LocalVect < T., N. >, 738           OFELI::SpMatrix, 931         Localize           Limiter         OFELI, 90, 94, 95           OFELI::ICPG1D, 602         MAGNETIC           OFELI::ICPG2DT, 610         MAGNETIC           OFELI::LCPG3DT, 617         OFELI, 67           OFELI::LCL1D, 710         MASS           OFELI::LCL2DT, 715         OFELI, 67           OFELI::Muscl, 775         Input/Output, 44           OFELI::Muscl1D, 779         MAX_INPUT_STRING_LENGTH           OFELI::Muscl2DT, 782         Input/Output, 44           OFELI::Muscl3DT, 786         MAX_LIMITER	OFELI::TrMatrix, 981	OFELI::Laplace1DL3, 651
OFELI::Laplace2DFVT, 664  Laplace2DMHRT0, 676  OFELI::Laplace2DT3, 698  OFELI::Laplace2DMHRT0, 679  Laplace2DT3, 691  OFELI::Laplace2DT3, 694, 695  LocalVect  Laplace2D  OFELI::PETScMatrix, 839  OFELI::SpMatrix, 931  Limiter  OFELI::ICPG1D, 602  OFELI::ICPG2DT, 610  OFELI::ICPG3DT, 617  OFELI::LCL1D, 710  OFELI::LCL2DT, 715  OFELI::LCL3DT, 721  OFELI::Muscl, 775  OFELI::Muscl1D, 779  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786  OFELI::Muscl2DT, 786  OFELI::Muscl2DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786	Laplace2DFVT, 661	
Laplace2DMHRT0, 676  OFELI::Laplace2DT3, 698  OFELI::Laplace2DMHRT0, 679  Laplace2DT3, 691  OFELI::Laplace2DT3, 694, 695  LocalVect  Laplace2D  OFELI::SpMatrix, 839  OFELI::SpMatrix, 931  Limiter  OFELI::ICPG1D, 602  OFELI::ICPG2DT, 610  OFELI::ICPG3DT, 617  OFELI::LCL1D, 710  OFELI::LCL2DT, 715  OFELI::LCL3DT, 721  OFELI::Muscl3DT, 779  OFELI::Muscl3DT, 782  OFELI::Muscl3DT, 786  OFELI::Mascl2DT, 786  OFELI::Mascl2DT, 786  OFELI::Mascl2DT, 786  OFELI::LCL3DT, 786	OFELI::Laplace2DFVT, 664	
OFELI::Laplace2DMHRT0, 679  Laplace2DT3, 691  OFELI::Laplace2DT3, 694, 695  LocalVect  Laplace2D  OFELI::PETScMatrix, 839  OFELI::SpMatrix, 931  Limiter  OFELI::ICPG1D, 602  OFELI::ICPG2DT, 610  OFELI::ICPG3DT, 617  OFELI::LCL1D, 710  OFELI::LCL2DT, 715  OFELI::LCL3DT, 721  OFELI::Muscl, 775  OFELI::Muscl1D, 779  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786  OFELI::Muscl3DT, 786  OFELI::NSP2DQ41, 801  OFELI::TINS2DT3B, 958  LocalVect  OFELI::TINS2DT3B, 958  LocalVect  OFELI::TINS2DT3B, 958  LocalVect  OFELI::N SP2DQ41, 801  OFELI::N SP2DQ41, 801  OFELI::NSP2DQ41, 801  OFELI::NSP2DT3B, 958  LocalVect  OFELI::NISP2DT3B, 958  LocalVect  OFELI::NISP2DT3B, 958  LocalVect  OFELI::NISP2DT3B, 958  LocalVect  OFELI::NISP3DT3B, 958  LocalVect  OFELI::NISP2DT3B, 958  LocalVect  OFELI::NISP2DT	Laplace2DMHRT0, 676	
Laplace2DT3, 691       OFELI::TINS2DT3B, 958         OFELI::Laplace2DT3, 694, 695       LocalVect         Laplace2D       OFELI, 93, 94         OFELI::PETScMatrix, 839       LocalVect < T., N. >, 738         OFELI::SpMatrix, 931       Localize         Limiter       OFELI, 90, 94, 95         OFELI::ICPG1D, 602       MAGNETIC         OFELI::ICPG2DT, 610       MAGNETIC         OFELI::LCPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER	OFELI::Laplace2DMHRT0, 679	
OFELI::Laplace2DT3, 694, 695       LocalVect         Laplace2D       OFELI, 93, 94         OFELI::PETScMatrix, 839       LocalVect < T_, N_ >, 738         OFELI::SpMatrix, 931       Localize         Limiter       OFELI, 90, 94, 95         OFELI::ICPG1D, 602       MAGNETIC         OFELI::ICPG2DT, 610       MAGNETIC         OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER		
Laplace2D       OFELI, 93, 94         OFELI::PETScMatrix, 839       LocalVect < T_, N_ >, 738         OFELI::SpMatrix, 931       Localize         Limiter       OFELI, 90, 94, 95         OFELI::ICPG1D, 602       MAGNETIC         OFELI::ICPG2DT, 610       MAGNETIC         OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER		
OFELI::PETScMatrix, 839 OFELI::SpMatrix, 931 Limiter OFELI::ICPG1D, 602 OFELI::ICPG2DT, 610 OFELI::ICPG3DT, 617 OFELI::LCL1D, 710 OFELI::LCL2DT, 715 OFELI::LCL3DT, 721 OFELI::LCL3DT, 721 OFELI::Muscl, 775 OFELI::Muscl1D, 779 OFELI::Muscl2DT, 782 OFELI::Muscl3DT, 786  LocalVect < T., N. >, 738 LocalVect < T., N.		
OFELI::SpMatrix, 931  Limiter OFELI::ICPG1D, 602 OFELI::ICPG2DT, 610 OFELI::ICPG3DT, 617 OFELI::LCL1D, 710 OFELI::LCL2DT, 715 OFELI::LCL2DT, 721 OFELI::Muscl, 775 OFELI::Muscl1D, 779 OFELI::Muscl2DT, 782 OFELI::Muscl3DT, 786  Localize OFELI, 90, 94, 95  MAGNETIC OFELI, 67 OFELI, 67 OFELI, 67  MASS OFELI, 67  MAX_ARRAY_SIZE Input/Output, 44  MAX_INPUT_STRING_LENGTH Input/Output, 44  MAX_LIMITER	*	
Limiter       OFELI, 90, 94, 95         OFELI::ICPG1D, 602       MAGNETIC         OFELI::ICPG2DT, 610       MAGNETIC         OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER	•	
OFELI::ICPG1D, 602       MAGNETIC         OFELI::ICPG2DT, 610       MAGNETIC         OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER	-	
OFELI::ICPG2DT, 610       MAGNETIC         OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER		C1 EEI, 70, 71, 70
OFELI::ICPG3DT, 617       OFELI, 67         OFELI::LCL1D, 710       MASS         OFELI::LCL2DT, 715       OFELI, 67         OFELI::LCL3DT, 721       MAX_ARRAY_SIZE         OFELI::Muscl, 775       Input/Output, 44         OFELI::Muscl1D, 779       MAX_INPUT_STRING_LENGTH         OFELI::Muscl2DT, 782       Input/Output, 44         OFELI::Muscl3DT, 786       MAX_LIMITER	· · · · · · · · · · · · · · · · · · ·	MAGNETIC
OFELI::LCL1D, 710  OFELI::LCL2DT, 715  OFELI::LCL3DT, 721  OFELI::Muscl, 775  OFELI::Muscl1D, 779  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786  MASS  OFELI, 67  MAX_ARRAY_SIZE  Input/Output, 44  MAX_INPUT_STRING_LENGTH  Input/Output, 44  MAX_LIMITER		
OFELI::LCL2DT, 715 OFELI::LCL3DT, 721 OFELI::Muscl, 775 OFELI::Muscl1D, 779 OFELI::Muscl2DT, 782 OFELI::Muscl3DT, 786 OFELI::Muscl3DT, 786 OFELI::Muscl3DT, 786 OFELI::Muscl3DT, 786 OFELI::Muscl3DT, 786	·	
OFELI::LCL3DT, 721  OFELI::Muscl, 775  OFELI::Muscl1D, 779  OFELI::Muscl2DT, 782  OFELI::Muscl3DT, 786  MAX_ARRAY_SIZE  Input/Output, 44  MAX_INPUT_STRING_LENGTH  Input/Output, 44  MAX_LIMITER		
OFELI::Muscl, 775 Input/Output, 44 OFELI::Muscl1D, 779 MAX_INPUT_STRING_LENGTH OFELI::Muscl2DT, 782 Input/Output, 44 OFELI::Muscl3DT, 786 MAX_LIMITER		The state of the s
OFELI::Muscl1D, 779 MAX_INPUT_STRING_LENGTH OFELI::Muscl2DT, 782 Input/Output, 44 OFELI::Muscl3DT, 786 MAX_LIMITER	· · · · · · · · · · · · · · · · · · ·	
OFELI::Muscl2DT, 782 Input/Output, 44 OFELI::Muscl3DT, 786 MAX_LIMITER	·	
OFELI::Muscl3DT, 786 MAX_LIMITER		
,	•	
Life2, 724 OFELIICF GID, 602	•	
OEEI II : no 2 705 706 OEEI II CDC 2DT 610		·
OFELI::Line2, 725, 726 OFELI::ICPG2DT, 610		
Line2H, 727 OFELI::ICPG3DT, 617		
Line3, 729 OFELI::LCL1D, 710		
LinearExchange OFELI::LCL2DT, 715	O Company of the comp	
OFELI::DC2DT3, 256 OFELI::LCL3DT, 721	OFELI::DC2D13, 230	Ofeli::LCL3D1, /21

OFELI::Muscl, 775	OFELI::Muscl2DT, 782
OFELI::Muscl1D, 779	OFELI::Muscl3DT, 786
OFELI::Muscl2DT, 782	Magnetic
OFELI::Muscl3DT, 786	OFELI::EC2D1T3, 369
MAX_NB_EQUATIONS	Mass
Solver, 110	OFELI::Bar2DL2, 177
MAX_NB_INPUT_FIELDS	OFELI::Elas2DT3, 416
Solver, 110	MassToLHS
MAX_NB_MESHES	OFELI::Bar2DL2, 178
Solver, 110	OFELI::Elas2DQ4, 397
MAX_NB_PAR	OFELI::Elas2DT3, 416
Input/Output, 44	OFELI::Elas3DH8, 435
MAX_SOLVER	OFELI::Elas3DT4, 452
OFELI::ICPG1D, 602	OFELI::Equa_Solid, 523
OFELI::ICPG2DT, 610	MassToRHS
OFELI::ICPG3DT, 617	OFELI::Bar2DL2, 178
OFELI::LCL1D, 710	OFELI::Elas2DQ4, 397
OFELI::LCL2DT, 715	OFELI::Elas2DT3, 416
OFELI::LCL3DT, 721	OFELI::Elas3DH8, 436
OFELI::Muscl, 776	OFELI::Elas3DT4, 452
OFELI::Muscl1, 779	OFELI::Equa_Solid, 523
	Material, 740
OFELL::Muscl2DT, 782	•
OFELI::Muscl3DT, 786	OFELI::Material, 742 Matrix
MINMOD_LIMITER	
OFELL ICPG1D, 602	OFELL:Laplace1DL2, 633
OFELL:ICPG2DT, 610	OFELL:Laplace1DL3, 649
OFELI:ICPG3DT, 617	OFELI::Matrix, 746
OFELI::LCL1D, 710	Matrix $<$ T $>$ , 743
OFELI::LCL2DT, 715	MatrixType
OFELI::LCL3DT, 721	OFELI, 69
OFELI::Muscl, 775	MaxNbIterations
OFELI::Muscl1D, 779	Global Variables, 41
OFELI::Muscl2DT, 782	Media
OFELI::Muscl3DT, 786	OFELI::Elas2DT3, 415
MULTI_SLOPE_M_METHOD	OFELI::Elas3DT4, 451
OFELI::ICPG1D, 602	Mesh, 752
OFELI::ICPG2DT, 610	OFELI::Mesh, 758–761
OFELI::ICPG3DT, 617	MeshActiveElements
OFELI::LCL1D, 710	Finite Element Mesh, 23
OFELI::LCL2DT, 715	MeshBoundaryNodes
OFELI::LCL3DT, 721	Finite Element Mesh, 24
OFELI::Muscl, 775	MeshBoundarySides
OFELI::Muscl1D, 779	Finite Element Mesh, 24
OFELI::Muscl2DT, 782	MeshEdges
OFELI::Muscl3DT, 786	Finite Element Mesh, 24
MULTI_SLOPE_Q_METHOD	MeshElements
OFELI::ICPG1D, 602	Finite Element Mesh, 23
OFELI::ICPG2DT, 610	MeshNodeLoop
OFELI::ICPG3DT, 617	Finite Element Mesh, 23
OFELI::LCL1D, 710	MeshNodes
OFELI::LCL2DT, 715	Finite Element Mesh, 24
OFELI::LCL3DT, 721	MeshSideSet
OFELI::Muscl, 775	Finite Element Mesh, 24
OFELI::Muscl1D, 779	MeshSides

Finite Element Mesh, 24	NodesAreDOF
MeshToMesh	OFELI::Mesh, 771
Finite Element Mesh, 29	Normalize
Method	OFELI::Point, 876
OFELI::ICPG1D, 602	Nrm2
OFELI::ICPG2DT, 610	Utilities, 142
OFELI::ICPG3DT, 617	NumberEquations
OFELI::LCL1D, 710	OFELI::Mesh, 764, 765
OFELI::LCL2DT, 715	, ,
OFELI::LCL3DT, 721	ODESolver, 811
OFELI::Muscl, 775	OFELI::ODESolver, 813
OFELI::Muscl1D, 779	OFELI::AbsEqua
OFELI::Muscl2DT, 782	getMesh, 172
OFELI::Muscl3DT, 786	setSolver, 172
Mult	SolveLinearSystem, 172
OFELI::DMatrix, 341	OFELI::BMatrix
	Assembly, 216
OFELI::PETScMatrix, 837	Factor And Solve, 218
OFELI::SkMatrix, 907	getDiag, 216
OFELI::SpMatrix, 934	
OFELI, 92, 98	isFactorized, 219
MultAdd	operator(), 219
OFELI::DMatrix, 341	operator+=, 219
OFELI::PETScMatrix, 837	operator-=, 220
OFELI::PETScVect, 859	operator[], 219
OFELI::SkMatrix, 906	Prescribe, 217, 218
OFELI::SpMatrix, 934	PrescribeSide, 218
OFELI::Vect, 1009	setDiagonal, 216
OFELI, 88, 91, 98	OFELI::Bar2DL2
MultAddScal	AxbAssembly, 189
OFELI, 91	Bar2DL2, 177
Muscl, 774	BodyRHS, 179
Muscl1D, 777	build, 179
Muscl2DT, 781	buildEigen, 180
Muscl3DT, 784	DGElementAssembly, 188, 189
MyOpt, 788	DiagBC, 181
OFELI::MyOpt, 788	ePrev, 191
0122mm, 0pt, 700	ElementAssembly, 184–186
NELDER_MEAD	ElementNodeCoordinates, 183
OFELI::OptSolver, 820	ElementNodeVector, 181, 182
NEWMARK	ElementNodeVectorSingleDOF, 182
OFELI, 68	ElementSideVector, 182
NSP2DQ41, 794	ElementVector, 182
OFELI::NSP2DQ41, 798, 799	getMesh, 190
NbTimeSteps	getStresses, 179
Global Variables, 41	LMass, 178
Node, 789	LMassToLHS, 178
OFELI::Node, 790	LMassToRHS, 178
NodeInElement	LocalNodeVector, 181
Finite Element Mesh, 33	Mass, 177
NodeInSide	MassToLHS, 178
Finite Element Mesh, 33	MassToRHS, 178
NodeLabel	run, 179
Finite Element Mesh, 26	runOneTimeStep, 179
NodeList, 793	setMaterialProperty, 189

setSolver, 190	AxbAssembly, 244
SideAssembly, 186, 187	BodyRHS, 233
SideNodeCoordinates, 183	BoundaryRHS, 233
SideVector, 183	build, 234, 235
SolveLinearSystem, 190	Capacity, 231
Stiffness, 179	CapacityToLHS, 230
updateBC, 180	CapacityToRHS, 231
OFELI::Beam3DL2	Convection, 231, 232
AxbAssembly, 206	ConvectionToRHS, 232
Beam3DL2, 196	DC1DL2, 229
buildEigen, 197	DGElementAssembly, 243, 244
DGElementAssembly, 204, 205	DiagBC, 236
DiagBC, 197	Diffusion, 231
ePrev, 207	DiffusionToRHS, 231
ElementAssembly, 200–202	ePrev, 246
ElementNodeCoordinates, 200	ElementAssembly, 239–241
ElementNodeVector, 198	ElementNodeCoordinates, 238
ElementNodeVectorSingleDOF, 199	ElementNodeVector, 236, 237
ElementSideVector, 199	ElementNodeVectorSingleDOF, 237
Element Vector, 199	ElementSideVector, 237
getMesh, 206	ElementVector, 237
LocalNodeVector, 198	getMesh, 245
setMaterialProperty, 206	LCapacity, 230
setSolver, 206	LCapacityToLHS, 230
SideAssembly, 203, 204	LCapacityToRHS, 230
SideNodeCoordinates, 200	LocalNodeVector, 236
SideVector, 200	run, 235
SolveLinearSystem, 207	runOneTimeStep, 235
updateBC, 197	runTransient, 235
OFELI::BiotSavart	setInput, 234
BiotSavart, 209	setMaterialProperty, 244
getB1, 211	setSolver, 245
getB2, 211	setStab, 234
getB3, 211	SideAssembly, 241, 242
getBC1, 212	SideNodeCoordinates, 238
getBC1, 212 getBC2, 212	SideVector, 238
getBC3, 211	·
run, 212	SolveLinearSystem, 245 updateBC, 235
	OFELI::DC2DT3
setBoundary, 210	
setCurrentDensity, 210	AxbAssembly, 269
setMagneticInduction, 210	BodyRHS, 256, 257
setPermeability, 210	BoundaryRHS, 257
OFELI::Brick	build, 259
Brick, 221	Capacity, 254
dLine, 222	CapacityToLHS, 254
getSignedDistance, 221	CapacityToRHS, 254
operator+=, 221	Convection, 255
setBoundingBox, 221	ConvectionToRHS, 256
OFELI::Circle	DC2DT3, 251–253
Circle, 223	DGElementAssembly, 267, 268
dLine, 224	DiagBC, 260
getSignedDistance, 223, 224	Diffusion, 254
operator+=, 223, 224	DiffusionToRHS, 255
OFELI::DC1DL2	ePrev, 270
	,

ElementNodeCoordinates, 263 ElementNodeVector, 261 ElementNodeVector, 262 ElementSideVector, 262 ElementSideVector, 262 ElementVector, 262 ElementVector, 262 ElementVector, 262 ElementVector, 262 ElementVector, 262 ElementSideVector, 262 ElementVector, 263  JouleHeating, 258 JouleHeating, 258 JCapacityToLHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runOreTimeStep, 260 runTransient, 259 set, 259 setSolver, 269 setStab, 259 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 Convection, 277  setSaleNodeCoordinates, 283 SideAssembly, 289 setSolver, 283 SolveLinearSystem, 290 updateBC, 280 OFELI::DC3DAT3 AxbAssembly, 310 CapacityToLHS, 299 BoundaryRHS, 299 BoundaryRHS, 299 BoundaryRHS, 299 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementNodeVector, 302 ElementNodeVector, 303 ElementNodeVector, 303 ElementNodeVector, 303 ElementNodeVector, 303 ElementVector, 303 ElementVect
ElementNodeVector, 261 ElementSideVector, 262 ElementSideVector, 262 ElementFodeVector, 262 ElementVector, 262 getMesh, 269 Grad, 258 JouleHeating, 258 LCapacity, 253 LCapacityToLHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 setMaterialProperty, 269 setSolver, 269 setSolver, 269 setSolver, 269 setSolver, 269 sideAssembly, 286, 287 SideNodeCoordinates, 283 SideVector, 283 SolveLinearSystem, 290 updateBC, 280 OFELI:DC3DAT3 AxbAssembly, 310 BodyRHS, 299 BoundaryRHS, 299, 300 build, 300 Capacity, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 298 DC3DAT3, 296, 297 DGElementAssembly, 308, 309 DiagBC, 301 Diffusion, 298 SetMaterialProperty, 269 setSolver, 269 setSolver, 269 setSolver, 269 setSolver, 269 SideNodeCoordinates, 263 SideVector, 261 ElementNodeVector, 302 ElementNodeCoordinates, 304 ElementNodeVector, 303 ElementVector, 303 ElementVodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 280 OFELI:DC3DAT3 AxbAssembly, 299 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 303 ElementNodeVector, 303 ElementVector, 303 ElementVe
ElementNodeVectorSingleDOF, 262 ElementSideVector, 262 ElementVector, 262 getMesh, 269 Grad, 258 JouleHeating, 258 LCapacity, 253 LCapacityToLHS, 253 LCapacityToRHS, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSolver, 269 SideVector, 263 SideVector, 263 SolveLinearSystem, 290 updateBC, 280 OFELI::DC3DAT3 AxbAssembly, 310 BodyRHS, 299 BoundaryRHS, 299, 300 build, 300 Capacity, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 299 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 303 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 IcapacityToRHS, 279 CapacityToRHS, 279
ElementSideVector, 262 ElementVector, 262 ElementVector, 262 getMesh, 269 Grad, 258 JouleHeating, 258 JouleHeating, 258 LCapacity, 253 LCapacityToLHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runTransient, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSolver, 269 setSolver, 263 SideVector, 263 SolveLinearSystem, 290 updateBC, 280 OFELI::DC3DAT3 AxbAssembly, 310 BodyRHS, 299 BoundaryRHS, 299, 300 build, 300 Capacity ToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 298 CapacityToRHS, 298 CapacityToRHS, 298 DC3DAT3, 296, 297 DGEIementAssembly, 308, 309 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 303 SolveLinearSystem, 270 updateBC, 260 GFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279 Capacit
ElementVector, 262 getMesh, 269 Grad, 258 JouleHeating, 258 LCapacity, 253 LCapacityToLHS, 253 LCapacityToLHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runTransient, 259 setSolver, 269 setStab, 259 SetStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 283 SolveLinearSystem, 290 updateBC, 280 OFELI::DC3DAT3 AxbAssembly, 310 BodyRHS, 299 BoundaryRHS, 299 BoundaryRHS, 299, 300 build, 300 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 298 CapacityToRHS, 298 DC3DAT3, 296, 297 DGElementAssembly, 308, 309 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementNodeCoordinates, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 IncalNodeVector, 302 run, 301
getMesh, 269 Grad, 258 JouleHeating, 258 LCapacity, 253 LCapacity ToLHS, 253 LCapacityToLHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 290 Grad, 258 Grad, 300 OFELI::DC3DAT3 AxbAssembly, 310 BodyRHS, 299 BoundaryRHS, 299 BoundaryRHS, 299, 300 build, 300 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 298 DC3DAT3, 296, 297 DGElementAssembly, 308, 309 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 SideVector, 263 SideVector, 263 SideVector, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 LCapacityToLHS, 297 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279
Grad, 258 JouleHeating, 258 JouleHeating, 258 LCapacity, 253 LCapacityToLHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runOneTimeStep, 260 runTransient, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSolver, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 build, 279 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToRHS, 299 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementNodeCoordinates, 304 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 ElementVector, 303 Grad, 300 LCapacityToLHS, 279 LCapacityToRHS, 279 LCapacityToRHS, 279 LocalNodeVector, 302 run, 301
JouleHeating, 258 LCapacity, 253 LCapacity, 253 LCapacityToLHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runOneTimeStep, 260 runTransient, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSolver, 269 SideAssembly, 266, 267 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 299 BodyRHS, 278 BoundaryRHS, 299 BodyRHS, 279 CapacityToLHS, 299 BodyRHS, 279 CapacityToLHS, 299 BodyRHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279  CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  run, 301
LCapacity, 253 LCapacityToLHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runOreTimeStep, 260 set, 259 setInput, 258 setMaterialProperty, 269 setSab, 259 setSab, 259 sideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI:DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 299 LCapacityToRHS, 299 LCapacityToRHS, 298 LCapacityToRHS, 298 DiagBC, 301 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 SideVector, 263 SideVector, 263 SideVector, 263 SideVector, 260 OFELI:DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279 LCapacityToRHS, 279 LocalNodeVector, 302 run, 301
LCapacityToLHS, 253 LCapacityToRHS, 253 LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 299 LcapacityToRHS, 299 RoundaryRHS, 299 BoundaryRHS, 299 CapacityToLHS, 299 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 298 CapacityToLHS, 299 DiagBC, 301 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 ElementVector, 303 CapacityToLHS, 279 LCapacityToLHS, 279 LocalNodeVector, 302 run, 301
LCapacityToRHS, 253 LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 SideAssembly, 266, 267 SideVector, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 299, 300 build, 300 Capacity, 298 CapacityToRHS, 298 CapacityToRHS, 298 CapacityToLHS, 298 CapacityToRHS, 299 DC3DAT3, 296, 297 DCElementAssembly, 308, 309 Diffusion, 298 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 ElementVector, 303 Cofeli::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 LCapacity, 297 LCapacityToLHS, 279 CapacityToLHS, 279 LocalNodeVector, 302 run, 301
LinearExchange, 256 LocalNodeVector, 261 Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 BoundaryRHS, 278 BoundaryRHS, 279 CapacityToRHS, 298 Capacity, 298 CapacityToLHS, 297 CapacityToLHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 Incomplete Capacity, 298 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 run, 301
LocalNodeVector, 261 Periodic, 258 Periodic, 258 run, 260 Run, 260 RunOneTimeStep, 260 RunTransient, 259 Set, 259 SetInput, 258 SetMaterialProperty, 269 SetSolver, 269 SideAssembly, 266, 267 SideVector, 263 SolveLinearSystem, 270 SupdateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 BoundaryRHS, 278 BoundaryRHS, 279 CapacityToLHS, 298 DC3DAT3, 296, 297 DC3DAT3, 296, 297 DC3DAT3, 296, 297 DGElementAssembly, 308, 309 DGElementAssembly, 308, 309 Diffusion, 298 Diffusion, 298 Diffusion, 298 Diffusion, 298 ElementAssembly, 304 ElementNodeCoordinates, 304 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 303 SolveLinearSystem, 270 ElementSideVector, 303 ElementVector, 303 CFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 LCapacity, 297 LCapacityToLHS, 297 LCapacityToLHS, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 298 DCapacityToRHS, 298 DCapacityToLHS, 298 DDGELentAssembly, 308, 309 Diffusion, 298 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 ElementVector, 303 CFELI::DC2DT6 QCAPACITY DLHS, 297 LCapacityToLHS, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
Periodic, 258 run, 260 runOneTimeStep, 260 runTransient, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 298 DCapacityToRHS, 298 DCapacityToLHS, 298 DDGELentAssembly, 308, 309 Diffusion, 298 Diffusion, 298 DiffusionToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 ElementVector, 303 CFELI::DC2DT6 QCAPACITY DLHS, 297 LCapacityToLHS, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
run, 260 runOneTimeStep, 260 runOneTimeStep, 260 runTransient, 259 set, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279  CapacityToRHS, 279 CapacityToRHS, 279  CapacityToRHS, 279  Diffusion ToRHS, 299 Diffusion ToRHS, 299 ePrev, 311 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementSideVector, 303 ElementVector, 303 ElementVector, 303 ElementVector, 303 Crad, 300 LCapacityToLHS, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
runOneTimeStep, 260  runTransient, 259  set, 259  setInput, 258  setMaterialProperty, 269  setSolver, 269  setStab, 259  SideAssembly, 266, 267  SideNodeCoordinates, 263  SolveLinearSystem, 270  updateBC, 260  OFELI::DC2DT6  AxbAssembly, 289  BoundaryRHS, 278  BoundaryRHS, 278  build, 279  CapacityToLHS, 279  CapacityToRHS, 279  DC3DAT3, 296, 297  DGElementAssembly, 308, 309  Diffusion, 298  Diffusion, 298  Diffusion, 298  DiffusionToRHS, 299  ePrev, 311  ElementAssembly, 304–306  ElementNodeCoordinates, 304  ElementNodeVector, 302  ElementNodeVector, 302  ElementSideVector, 303  ElementVector, 303  Grad, 300  LCapacity, 297  LCapacityToLHS, 279  LocalNodeVector, 302  run, 301
runTransient, 259 set, 259 set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 278 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279 DiagBC, 301 Diffusion, 298 Diffusion, 298 Diffusion, 298 Diffusion, 298 ElementAssembly, 299 ElementAssembly, 304–306 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVector, 302 ElementSideVector, 303 ElementSideVector, 303 Grad, 300 Grad, 300 LCapacityToLHS, 279 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
set, 259 setInput, 258 setMaterialProperty, 269 setSolver, 269 setSolver, 269 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279  DiagBC, 301 Diffusion, 298 Diffusion, 298 Diffusion, 298 Diffusion, 298 Diffusion, 298 ElementNodeNse, 299 ElementNodeCoordinates, 304 ElementNodeVector, 302 ElementNodeVectorSingleDOF, 303 ElementVector, 303 getMesh, 310 Grad, 300 LCapacity, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
setInput, 258 setMaterialProperty, 269 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279  SetStab, 259 Diffusion, 298 Diffusion ToRHS, 299 ElementNodeCoordinates, 304 ElementNodeVector, 302 CapacityToLHS, 299 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
setMaterialProperty, 269 setSolver, 269 setSolver, 269 setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279  SideVector, 269 ElementNodeVector, 302 ElementNodeVectorSingleDOF, 303 ElementSideVector, 303 ElementVector, 303 Grad, 300 LCapacityToLHS, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
setSolver, 269 setStab, 259 ElementAssembly, 304–306 SideAssembly, 266, 267 SideNodeCoordinates, 263 ElementNodeVector, 302 SideVector, 263 ElementNodeVectorSingleDOF, 303 SolveLinearSystem, 270 updateBC, 260 ElementVector, 303 ElementVector, 303 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279 LocalNodeVector, 302 run, 301
setStab, 259 SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279  ElementNodeVector, 302 ElementNodeVector, 303 ElementSideVector, 303 ElementVector, 303 Grad, 300 LCapacity, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
SideAssembly, 266, 267 SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 updateBC, 260 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279  ElementNodeVector, 302 ElementNodeVectorSingleDOF, 303 ElementSideVector, 303 ElementVector, 303 Grad, 300 ElementVector, 303 Crad, 300 LCapacity, 297 LCapacityToLHS, 297 LocalNodeVector, 302 run, 301
SideNodeCoordinates, 263 SideVector, 263 SolveLinearSystem, 270 UpdateBC, 260  OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 ElementNodeVector, 302 ElementNodeVector, 303 ElementVector, 303 Grad, 300 ElementVector, 303 ElementVector, 303 ElementVector, 303 ElementNodeVector, 303 ElementVector, 300 ElementVector, 3
SideVector, 263 SolveLinearSystem, 270 ElementSideVector, 303 updateBC, 260 ElementVector, 303 ElementVector, 303 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279
SolveLinearSystem, 270 updateBC, 260 ElementVector, 303 OFELI::DC2DT6 AxbAssembly, 289 BodyRHS, 278 BoundaryRHS, 278 BoundaryRHS, 278 build, 279 CapacityToLHS, 279 CapacityToLHS, 279 CapacityToRHS, 279
updateBC, 260 ElementVector, 303 OFELI::DC2DT6 getMesh, 310 AxbAssembly, 289 Grad, 300 BodyRHS, 278 LCapacity, 297 BoundaryRHS, 278 LCapacityToLHS, 297 build, 279 LCapacityToRHS, 297 CapacityToLHS, 279 LocalNodeVector, 302 CapacityToRHS, 279 run, 301
OFELI::DC2DT6  AxbAssembly, 289  BodyRHS, 278  BoundaryRHS, 278  build, 279  CapacityToLHS, 279  CapacityToLHS, 279  CapacityToRHS, 279
AxbAssembly, 289  BodyRHS, 278  BoundaryRHS, 278  build, 279  CapacityToLHS, 279  CapacityToLHS, 279  CapacityToRHS, 279
BodyRHS, 278  BoundaryRHS, 278  build, 279  CapacityToLHS, 279  CapacityToLHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  CapacityToRHS, 279  LocalNodeVector, 302  run, 301
BoundaryRHS, 278 LCapacityToLHS, 297 build, 279 LCapacityToRHS, 297 CapacityToLHS, 279 LocalNodeVector, 302 CapacityToRHS, 279 run, 301
build, 279 CapacityToLHS, 279 CapacityToRHS, 279 CapacityToRHS, 279 LocalNodeVector, 302 run, 301
CapacityToLHS, 279 LocalNodeVector, 302 CapacityToRHS, 279 run, 301
CapacityToRHS, 279 run, 301
( Onvoction 7// run incline true and
DC2DT6, 275, 276 runTransient, 300
DGElementAssembly, 288, 289 setMaterialProperty, 310
DiagBC, 281 setSolver, 310
Diffusion, 277 setStab, 300
ePrev, 291 SideAssembly, 307, 308
Element Assembly, 284–286 Side Node Coordinates, 304
ElementNodeCoordinates, 283 SideVector, 304
ElementNodeVector, 281, 282 SolveLinearSystem, 311
ElementNodeVectorSingleDOF, 282 updateBC, 301
ElementSideVector, 282 UpdateBC, 301  ElementSideVector, 282 OFELI::DC3DT4
ElementVector, 282 AxbAssembly, 332 getMesh, 290 BodyRHS, 321
LCapacityToLHS, 278  LCapacityToRHS, 278  BoundaryRHS, 321, 322  build, 322
1 7
LocalNodeVector, 281 Capacity, 319
run, 280 CapacityToLHS, 319
runOneTimeStep, 280 CapacityToRHS, 319
runTransient, 280 Convection, 320

DC3DT4, 316–318	setDiagonal, 347
DGElementAssembly, 331, 332	setLU, 344
DiagBC, 324	setQR, 343
Diffusion, 319	setRow, 341
DiffusionToRHS, 320	setSize, 339
ePrev, 334	setTransLU, 345
ElementAssembly, 327–329	setTransQR, 343
ElementNodeCoordinates, 326	solve, 345, 346
ElementNodeVector, 324, 325	solveQR, 343
ElementNodeVectorSingleDOF, 325	solveTrans, 345, 346
ElementSideVector, 325	solveTransQR, 344
ElementVector, 325	TMult, 342
getMesh, 333	OFELI::DSMatrix
LCapacity, 318	Assembly, 360
LCapacityToLHS, 318	FactorAndSolve, 362
LCapacityToRHS, 318	getDiag, 360
LocalNodeVector, 324	isFactorized, 363
Periodic, 322	operator*=, 364
RHS_Convection, 321	operator(), 363
run, 323	operator+=, 363, 364
runOneTimeStep, 323	operator-=, 364
runTransient, 323	operator[], 363
setMaterialProperty, 332	Prescribe, 361, 362
setSolver, 333	PrescribeSide, 362
setStab, 322	setDiagonal, 360
SideAssembly, 329, 330	setLDLt, 359
SideNodeCoordinates, 326	OFELI::Domain
SideVector, 326	Domain, 353
SolveLinearSystem, 333	genMesh, 354
updateBC, 323	get, 353
OFELI::DMatrix	insertCircle, 355
add, 342	insertLine, 354
Assembly, 347, 348	insertRequiredEdge, 355
Axpy, 342	insertRequiredVertex, 355
DMatrix, 338	insertSubDomain, 355
FactorAndSolve, 350	insertVertex, 354
getArray, 347	operator*=, 354
getColumn, 339	setOutputFile, 356 OFELI::EC2D1T3
getDiag, 347	
getRow, 340	AxbAssembly, 378
isFactorized, 350	DGElementAssembly, 377, 378
Mult, 341	DiagBC, 370
MultAdd, 341	EC2D1T3, 368
operator*=, 347	ePrev, 380
operator(), 344, 351	Electric, 369
operator+=, 347, 351	ElementAssembly, 373–375
operator-=, 347, 351	ElementNodeCoordinates, 372
operator=, 347	ElementNodeVector, 370, 371
operator[], 351	ElementNodeVectorSingleDOF, 371
Prescribe, 348, 349	ElementSideVector, 371
PrescribeSide, 350	ElementVector, 371
set, 340	getMesh, 379
setColumn, 341	IntegND, 369
setDiag, 339	LocalNodeVector, 370

Magnetic, 369	setSolver, 408
setMaterialProperty, 378	SideAssembly, 404, 405
setSolver, 379	SideNodeCoordinates, 400
SideAssembly, 375, 376	SideVector, 400
SideNodeCoordinates, 372	SignoriniContact, 396
SideVector, 372	SolveLinearSystem, 408
SolveLinearSystem, 379	Strain, 396
updateBC, 369	Stress, 396
OFELI::Edge	updateBC, 397
DOF, 381	OFELI::Elas2DT3
Edge, 381	AxbAssembly, 428, 429
getCode, 382	BodyRHS, 417, 418
getNodeLabel, 382	BoundaryRHS, 418
isOnBoundary, 382	ContactPressure, 419
operator(), 382	DGElementAssembly, 427, 428
setCode, 382	Deviator, 417
setDOF, 382	
•	DeviatorToRHS, 417
OFELI::EdgeList	DiagBC, 420
selectCode, 383	Dilatation, 417
unselectCode, 383	DilatationToRHS, 417
OFELI::EigenProblemSolver	ePrev, 430
Assembly, 388	Elas2DT3, 414, 415
checkSturm, 389	ElementAssembly, 423–425
EigenProblemSolver, 385, 386	ElementNodeCoordinates, 423
getEigenVector, 389	ElementNodeVector, 421
run, 387	ElementNodeVectorSingleDOF, 421
runSubSpace, 388	ElementSideVector, 422
SAssembly, 388	ElementVector, 422
setMatrix, 387	getMesh, 429
setPDE, 387	LMass, 416
setSubspaceDimension, 388	LMassToLHS, 415
setTolerance, 389	LMassToRHS, 416
OFELI::Elas2DQ4	LocalNodeVector, 420
AxbAssembly, 407	Mass, 416
BodyRHS, 395	MassToLHS, 416
BoundaryRHS, 395, 396	MassToRHS, 416
DGElementAssembly, 405, 406	Media, 415
DiagBC, 397	Periodic, 419
DilatationToRHS, 395	Reaction, 419
ePrev, 409	setMaterialProperty, 429
Elas2DQ4, 394	setSolver, 429
ElementAssembly, 400, 402, 403	SideAssembly, 425–427
ElementNodeCoordinates, 400	SideNodeCoordinates, 423
ElementNodeVector, 398	SideVector, 422
ElementNodeVectorSingleDOF, 399	SignoriniContact, 418
ElementSideVector, 399	SolveLinearSystem, 430
Element Vector, 399	Strain, 419
getMesh, 407	Stress, 419
LocalNodeVector, 398	updateBC, 420
MassToLHS, 397	OFELI::Elas3DH8
MassToRHS, 397	AxbAssembly, 445
PlaneStrain, 395	BodyRHS, 435
PlaneStress, 395	•
setMaterialProperty, 407	BoundaryRHS, 435 DGElementAssembly, 443, 444
sentiaterian roperty, 407	Dollement to the party of the p

DiagBC, 436	IsIn, 472
ePrev, 446	isOnBoundary, 471
Elas3DH8, 435	operator(), 469, 471
ElementAssembly, 439–441	Replace, 468
ElementNodeCoordinates, 439	set, 469
ElementNodeVector, 437	setChild, 471
ElementNodeVectorSingleDOF, 438	setCode, 467, 469
ElementSideVector, 438	setDOF, 469
ElementVector, 438	setLabel, 467
getMesh, 445	setSide, 471
LocalNodeVector, 437	OFELI::ElementList
MassToLHS, 435	selectLevel, 473
MassToRHS, 436	unselectCode, 473
setMaterialProperty, 445	OFELI::Ellipse
setSolver, 445	dLine, 475
SideAssembly, 442, 443	Ellipse, 474
SideNodeCoordinates, 439	getSignedDistance, 474, 475
SideVector, 439	operator+=, 474
•	OFELI::Equa_Electromagnetics
SolveLinearSystem, 446	
updateBC, 436 OFELI::Elas3DT4	AxbAssembly, 487, 488
	DGElementAssembly, 486, 487 DiagBC, 479
AxbAssembly, 461	O .
BodyRHS, 451	ePrev, 489
BoundaryRHS, 451	ElementAssembly, 482–484
buildEigen, 452	ElementNodeCoordinates, 482
DGElementAssembly, 460, 461	ElementNodeVector, 480
DiagBC, 453	ElementNodeVectorSingleDOF, 480
ePrev, 463	ElementSideVector, 481
ElementAssembly, 456–458	ElementVector, 481
ElementNodeCoordinates, 455	getMesh, 488
ElementNodeVector, 453, 454	LocalNodeVector, 479
ElementNodeVectorSingleDOF, 454	setMaterialProperty, 488
ElementSideVector, 454	setSolver, 488
ElementVector, 454	SideAssembly, 484–486
getMesh, 462	SideNodeCoordinates, 482
LocalNodeVector, 453	SideVector, 481
MassToLHS, 452	SolveLinearSystem, 489
MassToRHS, 452	updateBC, 479
Media, 451	OFELI::Equa_Fluid
setMaterialProperty, 461	AxbAssembly, 502
setSolver, 462	DGElementAssembly, 500, 501
SideAssembly, 458, 459	DiagBC, 493
SideNodeCoordinates, 455	ePrev, 503
SideVector, 455	ElementAssembly, 496–498
SolveLinearSystem, 462	ElementNodeCoordinates, 496
updateBC, 452	ElementNodeVector, 494
OFELI::Element	ElementNodeVectorSingleDOF, 495
Add, 467, 468	ElementSideVector, 495
Contains, 469, 470	ElementVector, 495
Element, 466	Equa_Fluid, 493
getMeasure, 471	getMesh, 502
getNbNeigElements, 471	LocalNodeVector, 494
getNeighborElement, 470	setMaterialProperty, 502
getUnitNormal, 471	setSolver, 502

C: 1 - A 1-1 - 400 F00	
SideAssembly, 499, 500	BodyRHS, 541
SideNodeCoordinates, 496	BoundaryRHS, 541
SideVector, 496	build, 541, 542
SolveLinearSystem, 503	CapacityToLHS, 540
updateBC, 493	
*	CapacityToRHS, 541
OFELI::Equa_Laplace	DGElementAssembly, 550, 551
AxbAssembly, 516	DiagBC, 543
build, 507	ePrev, 553
DGElementAssembly, 515, 516	ElementAssembly, 546–548
DiagBC, 508	ElementNodeCoordinates, 546
ePrev, 518	ElementNodeVector, 544
ElementAssembly, 511–513	ElementNodeVectorSingleDOF, 544
ElementNodeCoordinates, 510	ElementSideVector, 544
ElementNodeVector, 508, 509	ElementVector, 545
ElementNodeVectorSingleDOF, 509	Equa_Therm, 540
· · · · · · · · · · · · · · · · · · ·	
ElementSideVector, 509	getMesh, 552
ElementVector, 509	LCapacityToLHS, 540
Equa_Laplace, 507	LCapacityToRHS, 540
getMesh, 517	LocalNodeVector, 543
LocalNodeVector, 508	run, 542
setMaterialProperty, 516	runOneTimeStep, 542
setSolver, 517	runTransient, 542
SideAssembly, 513, 514	setMaterialProperty, 552
SideNodeCoordinates, 510	setSolver, 552
SideVector, 510	setStab, 540
SolveLinearSystem, 517	SideAssembly, 548–550
updateBC, 507	SideNodeCoordinates, 546
OFELI::Equa_Solid	SideVector, 545
AxbAssembly, 533	SolveLinearSystem, 553
	•
1)(FlementAssembly 531 532	undateK( 543
DGElementAssembly, 531, 532	updateBC, 543
DiagBC, 523	OFELÎ::Equation
DiagBC, 523 ePrev, 534	OFELÎ::Equation AxbAssembly, 566
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVector, 559 ElementSideVector, 559 ElementVector, 560
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVector, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LocalNodeVector, 524 MassToLHS, 523	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533 setSolver, 534	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToLHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526 SideVector, 526	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560 SolveLinearSystem, 568
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToLHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526 SideVector, 526 SolveLinearSystem, 534	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560 SolveLinearSystem, 568 updateBC, 558
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526 SideVector, 526 SolveLinearSystem, 534 updateBC, 523	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560 SolveLinearSystem, 568 updateBC, 558 OFELI::FEShape
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToLHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToLHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526 SideVector, 526 SolveLinearSystem, 534 updateBC, 523 OFELI::Equa_Therm	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560 SolveLinearSystem, 568 updateBC, 558 OFELI::FEShape DSh, 572
DiagBC, 523 ePrev, 534 ElementAssembly, 526, 528, 529 ElementNodeCoordinates, 526 ElementNodeVector, 524 ElementNodeVectorSingleDOF, 525 ElementSideVector, 525 ElementVector, 525 Equa_Solid, 522 getMesh, 533 LMassToLHS, 522 LMassToRHS, 522 LocalNodeVector, 524 MassToLHS, 523 MassToRHS, 523 setMaterialProperty, 533 setSolver, 534 SideAssembly, 530, 531 SideNodeCoordinates, 526 SideVector, 526 SolveLinearSystem, 534 updateBC, 523	OFELÎ::Equation AxbAssembly, 566 DGElementAssembly, 563, 564 DiagBC, 558 ePrev, 568 ElementAssembly, 561–563, 566 ElementNodeCoordinates, 560 ElementNodeVector, 559 ElementNodeVectorSingleDOF, 559 ElementSideVector, 559 ElementVector, 560 Equation, 556, 557 getMesh, 567 LocalNodeVector, 558 setMaterialProperty, 566 setSolver, 567 SideAssembly, 561, 562, 565, 566 SideNodeCoordinates, 561 SideVector, 560 SolveLinearSystem, 568 updateBC, 558 OFELI::FEShape

getDet, 572	setLocal, 598
getLocalPoint, 572	Sh, 598
Sh, 571	OFELI::ICPG1D
OFELI::FMM2D	FIRST_ORDER_METHOD, 602
check_error, 575	Forward, 603
Evaluate, 575	getInternalEnergy, 603
ExtendSpeed, 575	getMach, 604
FMM2D, 574	getMomentum, 603
InitHeap, 575	getSoundSpeed, 604
OFELI::FMM3D	getTotalEnergy, 603
check_error, 577	HLL_SOLVER, 602
Evaluate, 576	HLLC_SOLVER, 602
ExtendSpeed, 577	ICPG1D, 603
FMM3D, 576	LF_SOLVER, 602
InitHeap, 576	Limiter, 602
OFELI::FMMSolver	MAX_LIMITER, 602
check_error, 578	MAX_SOLVER, 602
	•
ExtendSpeed, 578	MINMOD_LIMITER, 602
FMMSolver, 577	MULTI-SLOPE M-METHOD, 602
OFELI::FastMarching2D	MULTI_SLOPE_Q_METHOD, 602
execute, 570	Method, 602
FastMarching2D, 569	ROE_SOLVER, 602
OFELI::Figure	RUSANOV_SOLVER, 602
dLine, 573	SUPERBEE_LIMITER, 602
getSignedDistance, 573	setBC, 604, 605
OFELI::Funct	setCFL, 606
Funct, 579, 580	setInOutflowBC, 605, 606
operator=, 580	setInitialCondition, 604
OFELI::Gauss	setLimiter, 607
setTriangle, 581	setMethod, 607
OFELI::HelmholtzBT3	setReconstruction, 606
AxbAssembly, 595	setReferenceLength, 606
DGElementAssembly, 594, 595	setTimeStep, 606
DiagBC, 587	setVerbose, 606
ePrev, 597	SolverType, 602
ElementAssembly, 590–592	VANALBADA_LIMITER, 602
ElementNodeCoordinates, 589	VANLEER_LIMITER, 602
ElementNodeVector, 587, 588	VFROE_SOLVER, 602
ElementNodeVectorSingleDOF, 588	OFELI::ICPG2DT
ElementSideVector, 588	FIRST_ORDER_METHOD, 610
ElementVector, 588	Forward, 611
getMesh, 596	getP, 612
LocalNodeVector, 587	getR, 612
setMaterialProperty, 595	getV, 612
setSolver, 596	HLL_SOLVER, 610
SideAssembly, 592, 593	HLLC_SOLVER, 610
SideNodeCoordinates, 589	ICPG2DT, 610
•	
SideVector, 589	Initialize, 613
SolveLinearSystem, 596	LF_SOLVER, 610
updateBC, 586, 587	Limiter, 610
OFELI::Hexa8	MAX SOLVER, 610
DSh, 598, 599	MAX_SOLVER, 610
getDet, 599	MINMOD_LIMITER, 610
getLocalPoint, 599	MULTI_SLOPE_M_METHOD, 610

MULTI_SLOPE_Q_METHOD, 610	getDouble, 625, 626
Method, 610	getDoublePar, 624
ROE_SOLVER, 610	getInit, 623
RUSANOV_SOLVER, 610	getInitFile, 628
SUPERBEE_LIMITER, 610	getIntPar, 624
setBC, 611, 612	getInteger, 625
setCFL, 613	getMaxTime, 624
setLimiter, 614	getMeshFile, 628
setMethod, 614	getNbIter, 624
setReconstruction, 611, 613	getNbSteps, 624
setReferenceLength, 613	getOutput, 623
setSolver, 611	getPlot, 623
setTimeStep, 613	getPlotFile, 629
setVerbose, 614	getPointDoublePar, 624
SolverType, 610	getPrescriptionFile, 629
* *	· .
VANALBADA_LIMITER, 610	getProject, 628
VANLEER_LIMITER, 610	getRestartFile, 628
VFROE_SOLVER, 610	getSFFile, 628
OFELI::ICPG3DT	getSave, 623
FIRST_ORDER_METHOD, 617	getSaveFile, 629
HLL_SOLVER, 617	getSF, 623
HLLC_SOLVER, 617	getString, 625
ICPG3DT, 617, 618	getStringPar, 624
LF_SOLVER, 617	getTimeStep, 624
Limiter, 617	getThlestep, 624
MAX_LIMITER, 617	IPF, 623
	· · · · · · · · · · · · · · · · · · ·
MAX_SOLVER, 617	OFELI::LCL1D
MINMOD_LIMITER, 617	FIRST_ORDER_METHOD, 710
MULTI_SLOPE_M_METHOD, 617	Forward, 711
MULTI_SLOPE_Q_METHOD, 617	HLL_SOLVER, 710
Method, 617	HLLC_SOLVER, 710
ROE_SOLVER, 617	LF_SOLVER, 710
RUSANOV_SOLVER, 617	Limiter, 710
SUPERBEE_LIMITER, 617	MAX_LIMITER, 710
setLimiter, 618	MAX_SOLVER, 710
setMethod, 618	MINMOD_LIMITER, 710
setReconstruction, 618	MULTI_SLOPE_M_METHOD, 710
setVerbose, 618	MULTI_SLOPE_Q_METHOD, 710
SolverType, 617	Method, 710
VANALBADA_LIMITER, 617	ROE_SOLVER, 710
VANLEER_LIMITER, 617	RUSANOV_SOLVER, 710
VFROE_SOLVER, 617	runOneTimeStep, 711
OFELI::IPF	SUPERBEE_LIMITER, 710
contains, 626	setBC, 711
get, 626–628	setCFL, 712
getArraySize, 627	setInitialCondition, 710
getAuxFile, 629	setLimiter, 713
getBCFile, 628	setMethod, 712
getBFFile, 628	setReconstruction, 712
getBC, 623	setTimeStep, 712
getBF, 623	setVelocity, 711
	•
getComplex, 626	setVerbose, 712
getComplexPar, 624	SolverType, 710
getData, 623	VANALBADA_LIMITER, 710

VANLEER_LIMITER, 710	setInitialCondition, 722
VFROE_SOLVER, 710	setLimiter, 724
OFELI::LCL2DT	setMethod, 724
FIRST_ORDER_METHOD, 715	setReconstruction, 723
Forward, 717	setTimeStep, 723
HLL_SOLVER, 715	setVelocity, 722
HLLC_SOLVER, 715	setVerbose, 723
Initialize, 717	SolverType, 721
LCL2DT, 715	VANALBADA_LIMITER, 721
LF_SOLVER, 715	
Limiter, 715	VANLEER_LIMITER, 721
· · · · · · · · · · · · · · · · · · ·	VFROE_SOLVER, 721
MAX_LIMITER, 715	OFELI::Laplace1DL2
MAX_SOLVER, 715	AxbAssembly, 643
MINMOD_LIMITER, 715	BodyRHS, 633
MULTI_SLOPE_M_METHOD, 715	BoundaryRHS, 634
MULTI_SLOPE_Q_METHOD, 715	build, 634
Method, 715	DGElementAssembly, 642, 643
ROE_SOLVER, 715	DiagBC, 635
RUSANOV_SOLVER, 715	ePrev, 645
runOneTimeStep, 716	ElementAssembly, 638–640
SUPERBEE_LIMITER, 715	ElementNodeCoordinates, 638
setBC, 716	ElementNodeVector, 636
setCFL, 718	ElementNodeVectorSingleDOF, 636
setInitialCondition, 716	ElementSideVector, 636
setLimiter, 718	ElementVector, 637
setMethod, 718	getMesh, 644
setReconstruction, 717	Laplace1DL2, 633
setReferenceLength, 718	LocalNodeVector, 635
setTimeStep, 717	Matrix, 633
setVelocity, 717	run, 634
setVerbose, 718	setBoundaryCondition, 634
SolverType, 715	setMaterialProperty, 644
VANALBADA_LIMITER, 715	setSolver, 644
VANLEER_LIMITER, 715	setTraction, 634
VFROE_SOLVER, 715	SideAssembly, 640–642
OFELI::LCL3DT	SideNodeCoordinates, 638
FIRST_ORDER_METHOD, 721	SideVector, 637
Forward, 723	SolveLinearSystem, 645
HLL_SOLVER, 721	updateBC, 635
HLLC_SOLVER, 721	OFELI::Laplace1DL3
LCL3DT, 721	*
	AxbAssembly, 659
LF_SOLVER, 721	BodyRHS, 649
Limiter, 721	BoundaryRHS, 649
MAX.LIMITER, 721	build, 650
MAX_SOLVER, 721	DGElementAssembly, 657, 658
MINMOD_LIMITER, 721	DiagBC, 650
MULTI_SLOPE_M_METHOD, 721	ePrev, 660
MULTI_SLOPE_Q_METHOD, 721	ElementAssembly, 653–655
Method, 721	ElementNodeCoordinates, 653
ROE_SOLVER, 721	ElementNodeVector, 651
RUSANOV_SOLVER, 721	ElementNodeVectorSingleDOF, 652
SUPERBEE_LIMITER, 721	ElementSideVector, 652
setBC, 722	ElementVector, 652
setCFL, 723	getMesh, 659

Laplace1DL3, 648	SideAssembly, 686, 687
LocalNodeVector, 651	SideNodeCoordinates, 683
Matrix, 649	SideVector, 683
run, 649	solve, 680
setMaterialProperty, 659	SolveLinearSystem, 690
setSolver, 659	updateBC, 680
setTraction, 649	OFELI::Laplace2DT3
SideAssembly, 656, 657	Axb, 697
SideNodeCoordinates, 653	AxbAssembly, 706
SideVector, 653	BodyRHS, 695
SolveLinearSystem, 660	BoundaryRHS, 695
updateBC, 650	build, 696, 697
OFELI::Laplace2DFVT	buildEigen, 696
AxbAssembly, 674	DGElementAssembly, 704, 705
build, 665	
	DiagBC, 697
checkDelaunay, 664	ePrev, 707
DGElementAssembly, 672, 673	ElementAssembly, 700–702
DiagBC, 665	ElementNodeCoordinates, 700
ePrev, 675	ElementNodeVector, 698
ElementAssembly, 668–670	ElementNodeVectorSingleDOF, 699
ElementNodeCoordinates, 668	ElementSideVector, 699
ElementNodeVector, 666	ElementVector, 699
ElementNodeVectorSingleDOF, 667	getMesh, 706
ElementSideVector, 667	LHS, 695
ElementVector, 667	Laplace2DT3, 694, 695
getMesh, 674	LocalNodeVector, 698
Laplace2DFVT, 664	Post, 696
LocalNodeVector, 666	setMaterialProperty, 706
setMaterialProperty, 674	setSolver, 706
setSolver, 674	setSource, 696
SideAssembly, 671, 672	SideAssembly, 703, 704
SideNodeCoordinates, 668	SideNodeCoordinates, 700
SideVector, 668	SideVector, 700
SolveLinearSystem, 675	solve, 696
updateBC, 665	SolveLinearSystem, 707
OFELI::Laplace2DMHRT0	updateBC, 697
AxbAssembly, 689	OFELI::Line2
build, 679, 680	DSh, 726
DGElementAssembly, 688, 689	getDet, 727
DiagBC, 681	getInterpolate, 726
ePrev, 691	getLocalPoint, 727
ElementAssembly, 684–686	getRefCoord, 726
ElementNodeCoordinates, 683	Line2, 725, 726
ElementNodeVector, 681, 682	Sh, 726
ElementNodeVectorSingleDOF, 682	OFELI::Line2H
ElementSideVector, 682	check, 728
Element Vector, 682	DSh, 729
	•
getMesh, 690 Laplace2DMHRT0, 679	getLocalPoint, 728, 729 Sh, 728
LocalNodeVector, 681	OFELI::Line3
Post, 679	getDet, 730
setDiffusivity, 679	getLocalPoint, 730
setMaterialProperty, 689	Sh, 730
setSolver, 690	OFELI::LinearSolver

LinearSolver, 732–734 getElementNeighborElements,	766
set, 735 getList, 772, 773	
setMatrix, 734, 735 getNbBoundarySides, 770	
setMaxIter, 734 getNbInternalSides, 770	
setSolver, 735 getNodeLabel, 773	
setVerbose, 734 getNodeNeighborElements, 760	5
solve, 735, 736 getSideLabel, 773	
OFELI::LocalMatrix Mesh, 758–761	
operator(), 738 NodesAreDOF, 771	
OFELI::LocalVect NumberEquations, 764, 765	
operator(), 740 operator*=, 763	
operator[], 740 put, 772	
OFELI::Material Refine, 774	
check, 743 RenumberEdge, 768	
getName, 743 RenumberElement, 768	
Material, 742 RenumberNode, 768	
set, 743 RenumberSide, 768	
OFELI::Matrix Reorder, 766	
Assembly, 746, 747 Rescale, 770	
Axpy, 746 save, 772	
FactorAndSolve, 749 set, 771	
getDiag, 746 setDOFSupport, 763	
isFactorized, 750 setDim, 762	
Matrix, 746 setEdgeView, 769	
operator*=, 751 setElementView, 769	
operator(), 750, 751 setList, 769, 770	
operator+=, 751, 752 setMaterial, 766	
operator-=, 751, 752 setNbDOFPerNode, 764	
operator=, 751 setNodeView, 769	
operator[], 751 setPointInDomain, 764	
Prescribe, 747, 748 setSideView, 769	
PrescribeSide, 748 setVerbose, 762	
set, 750 SidesAreDOF, 771	
setDiagonal, 746 OFELI::Muscl	
solve, 749 FIRST_ORDER_METHOD, 775	
OFELI::Mesh HLL_SOLVER, 776	
Add, 762, 766 HLLC_SOLVER, 776	
AddMidNodes, 770 LF_SOLVER, 776	
createBoundarySideList, 765 Limiter, 775	
createInternalSideList, 765 MAX_LIMITER, 775	
Delete, 767, 768 MAX_SOLVER, 776	
DeleteElement, 767 MINMOD_LIMITER, 775	
DeleteNode, 766 MULTI_SLOPE_M_METHOD, 7	75
DeleteSide, 767 MULTI_SLOPE_Q_METHOD, 7	
EdgesAreDOF, 771 Method, 775	
ElementsAreDOF, 772 ROE_SOLVER, 776	
get, 763 RUSANOV_SOLVER, 776	
getActiveElement, 773 SUPERBEE_LIMITER, 775	
getAllEdges, 765 setCFL, 776	
getAllSides, 765 setLimiter, 777	
getBoundaryNodes, 765 setMethod, 777	
getBoundarySides, 765 setReconstruction, 776	
getEdgeLabel, 773 setReferenceLength, 776	
getElementLabel, 773 setTimeStep, 776	

setVerbose, 776	SolverType, 782
SolverType, 775	VANALBADA_LIMITER, 782
VANALBADA_LIMITER, 775	VANLEER_LIMITER, 782
VANLEER_LIMITER, 775	VFROE_SOLVER, 782
VFROE_SOLVER, 776	OFELI::Muscl3DT
OFELI::Muscl1D	FIRST_ORDER_METHOD, 786
FIRST_ORDER_METHOD, 779	HLL_SOLVER, 786
HLL_SOLVER, 779	HLLC_SOLVER, 786
HLLC_SOLVER, 779	LF_SOLVER, 786
LF_SOLVER, 779	Limiter, 786
Limiter, 779	MAX_LIMITER, 786
MAX_LIMITER, 779	MAX_SOLVER, 786
MAX_SOLVER, 779	MINMOD_LIMITER, 786
MINMOD_LIMITER, 779	MULTI_SLOPE_M_METHOD, 786
MILTI_SLOPE_M_METHOD, 779	MULTI-SLOPE_Q_METHOD, 786
MULTI_SLOPE_Q_METHOD, 779	Method, 786
Method, 779	ROE_SOLVER, 786
ROE_SOLVER, 779	RUSANOV_SOLVER, 786
RUSANOV_SOLVER, 779	SUPERBEE_LIMITER, 786
SUPERBEE_LIMITER, 779	setCFL, 787
setCFL, 779	setLimiter, 787
setLimiter, 780	setMethod, 787
setMethod, 780	setReconstruction, 786
setReconstruction, 780	setReferenceLength, 787
setReferenceLength, 780	setTimeStep, 787
setTimeStep, 779	setVerbose, 787
setVerbose, 780	SolverType, 786
SolverType, 779	VANALBADA_LIMITER, 786
VANALBADA_LIMITER, 779	VANLEER_LIMITER, 786
VANLEER_LIMITER, 779	VFROE_SOLVER, 786
VFROE_SOLVER, 779	OFELI::MyOpt
OFELI::Muscl2DT	Gradient, 788
FIRST_ORDER_METHOD, 782	MyOpt, 788
HLL_SOLVER, 782	Objective, 788
HLLC_SOLVER, 782	OFELI::NSP2DQ41
Initialize, 783	AxbAssembly, 809
LF_SOLVER, 782	BodyRHS, 799
Limiter, 782	BoundaryRHS, 800
MAX_LIMITER, 782	DGElementAssembly, 807, 808
MAX_SOLVER, 782	DiagBC, 800
MINMOD_LIMITER, 782	ePrev, 810
MULTI_SLOPE_M_METHOD, 782	ElementAssembly, 803–805
MULTI_SLOPE_Q_METHOD, 782	ElementNodeCoordinates, 803
Method, 782	ElementNodeVector, 801
ROE_SOLVER, 782	ElementNodeVectorSingleDOF, 802
RUSANOV_SOLVER, 782	ElementSideVector, 802
SUPERBEE_LIMITER, 782	ElementVector, 802
setCFL, 783	getMesh, 809
setLimiter, 784	LHS1_Convection, 799
setMethod, 783	LHS2_Convection, 799
setReconstruction, 782	LocalNodeVector, 801
setReferenceLength, 783	NSP2DQ41, 798, 799
setTimeStep, 783	Periodic, 800
setVerbose, 783	setMaterialProperty, 809

setSolver, 809	setGradient, 822
SideAssembly, 806, 807	setLowerBound, 822
SideNodeCoordinates, 803	setLowerBounds, 823
SideVector, 803	setObjective, 821
SolveLinearSystem, 810	setOptClass, 822
updateBC, 800	setOptMethod, 821
OFELI::Node	setSAOpt, 823
DOF, 792	setTolerance, 824
getCode, 792	setUpperBound, 822
getCoord, 792	setUpperBounds, 822
getNbNeigEl, 792	setVerbosity, 823
getNoiNeigEl, 792 getNeigEl, 793	TRUNCATED_NEWTON, 820
	OFELI::PETScMatrix
getXYZ, 792	
isOnBoundary, 793	add, 838
Node, 790	Assembly, 842, 843
setCode, 791	DiagPrescribe, 836
setCoord, 791	get, 842
setDOF, 792	getLength, 837
setLevel, 793	getRange, 836
setOnBoundary, 792	Laplace1D, 838
OFELI::NodeList	Laplace2D, 839
selectCode, 794	Mult, 837
selectCoordinate, 794	MultAdd, 837
unselectCode, 794	operator Mat, 842
OFELI::ODESolver	operator(), 837
ODESolver, 813	operator=, 838
run, 818	PETScMatrix, 834
runOneTimeStep, 818	set, 838
set, 813	setAIJ_MPI, 835
setCoef, 813, 814	setAIJ, 835
setConstantMatrix, 817	setAssembly, 843
setInitial, 814, 815	setGraph, 836
setInitialRHS, 815	setMesh, 835
setLinearSolver, 817	setPartition, 835
setMatrices, 816	setRank, 835
setNbEq, 813	setSize, 836
setNewmarkParameters, 817	
•	setSolver, 840
setNonConstantMatrix, 817	solve, 839
setRHS, 816	OFELI::PETScVect
setRK4RHS, 814	Add, 864
setVerbose, 817	add, 860, 861
setF, 814	Assembly, 857
OFELI::OptSolver	Axpy, 860
GRADIENT, 820	getAverage, 859
getNbAcc, 824	getCurl, 858
getNbOutOfBounds, 824	getDOFType, 853
getSolution, 824	getDivergence, 859
getTemperature, 824	getGradient, 858
NELDER_MEAD, 820	getLocalSize, 852
OptMethod, 820	getSCurl, 859
OptSolver, 820	getWNorm2, 853
run, 824	Insert, 864
SIMULATED_ANNEALING, 820	insertBC, 856, 857
setBC, 821	isWithMesh, 853
,	

MultAdd, 859	OFELI::PhaseChange
operator Vec, 863	E2T, 872
operator*=, 863	EnthalpyToTemperature, 872
operator(), 861, 862	OFELI::Point
operator+=, 862	isCloseTo, 876
operator,, 863	Normalize, 876
operator-=, 862, 863	operator!=, 875
operator/=, 863	operator*=, 875
operator=, 862	operator(), 874
operator[], 861	operator+=, 875
PETScVect, 848–850	operator,, 876
removeBC, 854, 855	operator-=, 875
save, 859	operator/=, 875
select, 851	operator=, 875
set, 851, 852, 860	operator==, 875
setAssembly, 864	operator[], 875
setDOFType, 853	Point, 874
setMPI, 851	OFELI::Point2D
setMesh, 852	operator!=, 879
setNodeBC, 853, 854	operator*=, 879
setSize, 853	operator(), 878
transferBC, 856	operator+=, 878
OFELI::PETScWrapper	operator-=, 878, 879
~PETScWrapper, 869	operator/=, 879
checkError, 871	operator=, 878
getBoolOption, 869	operator==, 879
getIntOption, 869	operator[], 878
PETScWrapper, 867	Point2D, 878
setIterationMethod, 871	OFELI::Polygon
setIterationParameters, 870	dLine, 881
setLSTolerances, 871	
	getSignedDistance, 880, 881
setLinearSystem, 870	operator+=, 880, 881
setMatrix, 870	Polygon, 880
setMesh, 869	setVertices, 880
setPartition, 869	OFELI::Prec
setPreconditioner, 870	Prec, 882, 883
solve, 871	setMatrix, 884
OFELI::Partition	setType, 884
getFirstSideLabel, 828	solve, 884
getNbConnectInSubMesh, 828	TransSolve, 885
getNbConnectOutSubMesh, 828	OFELI::Prescription
getNodeLabelInMesh, 827	get, 886
getNodeLabelInSubMesh, 827	Prescription, 886
getSecondSideLabel, 828	OFELI::Quad4
getSubMesh, 827	DSh, 888
Partition, 826	getDet, 889
put, 828	getLocalPoint, 889
OFELI::Penta6	Grad, 888
DSh, 830	Quad4, 887, 888
getDet, 830	setLocal, 888
getLocalPoint, 831	Sh, 888
Penta6, 830	OFELI::Reconstruction
setLocal, 830	DP1toP1, 891
Sh, 830	P0toP1, 890

OFELI::Rectangle	setMesh, 905
dLine, 893	setSkyline, 905
getSignedDistance, 892, 893	SkMatrix, 904, 905
operator+=, 892, 893	solve, 909, 910
Rectangle, 892	TMult, 907
setBoundingBox, 892	TMultAdd, 906
OFELI::Side	OFELI::SkSMatrix
Add, 897	Assembly, 919
Contains, 899	FactorAndSolve, 921
DOF, 896	get, 918
EXTERNAL_BOUNDARY, 896	getDiag, 918
getCode, 897	isFactorized, 922
getMeasure, 899	operator(), 922
getNeighborElement, 898	operator+=, 922
getNormal, 898	operator-=, 923
getOtherNeighborElement, 898	operator[], 922
getUnitNormal, 898	Prescribe, 919–921
INTERNAL_BOUNDARY, 896	PrescribeSide, 921
INTERNAL_SIDE, 896	setDiagonal, 918
isOnBoundary, 898	OFELI::SpMatrix
operator(), 898	add, 935
set, 897	Assembly, 938
setChild, 899	Axpy, 935
setCode, 897	DiagPrescribe, 931, 932
setDOF, 896	Factor And Solve, 940
Side, 896	get, 937
SideType, 896	getColInd, 936
OFELI::SideList	Č .
	getDiag, 938
selectCode, 900	isFactorized, 941
unselectCode, 900	Laplace1D, 930
OFELI::SkMatrix	Laplace2D, 931
add, 907	Mult, 934
Assembly, 911	MultAdd, 934
Axpy, 906	operator*, 933
DiagPrescribe, 908	operator*=, 933
FactorAndSolve, 913	operator(), 933, 941
get, 910	operator+=, 941
getColHeight, 907	operator-=, 941
getDiag, 910	operator=, 935
isFactorized, 914	operator[], 933, 941
Mult, 907	Prescribe, 939, 940
MultAdd, 906	PrescribeSide, 940
operator*=, 909	set, 935
operator(), 907, 908, 914	setDiagonal, 938
operator+=, 909, 914	setGraph, 932
operator-=, 914, 915	setMesh, 931
operator=, 909	setSize, 932
operator[], 914	setSolver, 937
Prescribe, 911–913	solve, 936
PrescribeSide, 913	SpMatrix, 929, 930
set, 905	TMult, 934
setDOF, 905	OFELI::Sphere
setDiagonal, 910	dLine, 925
setLU, 909	getSignedDistance, 924

	0 1
operator+=, 924	Started, 947
Sphere, 924	Stop, 947
OFELI::SteklovPoincare2DBE	OFELI::TrMatrix
setMesh, 943	Assembly, 982
Solve, 943	FactorAndSolve, 984
SteklovPoincare2DBE, 942, 943	getDiag, 981
OFELI::TINS2DT3B	isFactorized, 985
AxbAssembly, 966	Laplace1D, 981
DGElementAssembly, 965, 966	operator(), 985
DiagBC, 958	operator+=, 985
ePrev, 968	operator-=, 986
ElementAssembly, 961–963	operator[], 985
ElementNodeCoordinates, 960	*
	Prescribe, 982–984
ElementNodeVector, 958, 959	PrescribeSide, 984
ElementNodeVectorSingleDOF, 959	setDiagonal, 981
ElementSideVector, 959	OFELI::Triang3
ElementVector, 959	check, 970
getMesh, 967	getDet, 970
LocalNodeVector, 958	getLocalPoint, 970
setInput, 957	Grad, 970
setMaterialProperty, 966	Sh, 970
setSolver, 967	Triang3, 969
SideAssembly, 963, 964	OFELI::Triang6S
SideNodeCoordinates, 960	DSh, 972, 973
SideVector, 960	getDet, 973
SolveLinearSystem, 967	getLocalPoint, 973
TINS2DT3B, 956	Grad, 972
updateBC, 957	Sh, 972, 973
OFELI::Tetra4	Triang6S, 972
CurlEdgeSh, 946	OFELI::UserData
DSh, 946	BodyForce, 989
	•
EdgeSh, 946	BoundaryCondition, 988
getDet, 946	InitialData, 989
getLocalPoint, 946	setBodyForce, 987
Sh, 946	setDBC, 987
OFELI::TimeStepping	setInitialData, 987
Assembly, 952	setSurfaceForce, 988
run, 952	SurfaceForce, 989
runOneTimeStep, 952	UserData, 987
SAssembly, 953	OFELI::Vect
set, 949	add, 1010, 1011
setConstantMatrix, 951	Assembly, 1007
setInitial, 950	Axpy, 1009
setInitialRHS, 951	getAverage, 1009
setLinearSolver, 951	getCurl, 1008
setNewmarkParameters, 951	getDOFType, 1002
setNonConstantMatrix, 951	getDivergence, 1009
setPDE, 950	getGradient, 1007, 1008
setRK4RHS, 950	getNorm1, 1002
setVerbose, 952	getNorm2, 1002
TimeStepping, 949	getNormMax, 1002
OFELI::Timer	getSCurl, 1008
getTime, 947	getWNorm2, 1002
Start, 947	insertBC, 1005, 1006

MultAdd, 1009	Utilities, 128
operator VectorX, 1015	OFELI_E
operator*=, 1015	Utilities, 128
operator(), 1011–1013	OFELI, 47, 151
operator+=, 1014	A, 71
operator,, 1015	AB2, 69
operator-=, 1014	ADAMS_BASHFORTH, 69
operator/=, 1015	AUX_INPUT_FIELD_1, 68
operator=, 1013, 1014	AUX_INPUT_FIELD_2, 68
operator[], 1011	AUX_INPUT_FIELD_3, 68
push_back, 1015	AUX_INPUT_FIELD_4, 68
removeBC, 1005	add, 85, 99
resize, 1001	AnalysisType, 69
save, 1009	ArrayType, 68
select, 999	Axpy, 82, 89, 101, 102
set, 999, 1000, 1010	b, 71
setDOFType, 1001	BACKWARD_EULER, 68
setDG, 1001	BCType, 70
setMesh, 1000	BDF2, 69
setNodeBC, 1002–1004	BICG_SOLVER, 70
setSideBC, 1003, 1004	BICG_STAB_SOLVER, 70
setSize, 1000	BMatrix, 81
setUniform, 1013	BODY_FORCE, 68
size, 1000	BOUNDARY_CONDITION, 68
transferBC, 1005	BOUNDARY_FORCE, 68
Vect, 995–998	BOUNDARY_TRACTION, 67
WithMesh, 1001	BUOYANCY, 67
OFELI::triangle	CAPACITY, 67
DSh, 975, 977	CG_SOLVER, 70
getDet, 975, 978	CGS-SOLVER, 70
getLocalPoint, 975, 976, 978	CONSISTENT_CAPACITY, 67
Sh, 975, 977	CONSISTENT MASS, 67
triangle, 975, 977	CONTACT_BC, 70
OFELI_EPSMCH	CONTACT BC, 70
Utilities, 129	CONVECTION, 67
OFELI_GAUSS2	CRANK_NICOLSON, 68
	check, 104
Utilities, 128 OFELI_IMAG	DEVIATORIC, 67
Utilities, 129	DIAG_PREC, 70
OFELI_ONEOVERPI	DIAGONAL, 70
Utilities, 128	DIFFUSION_CONVECTION, 69
OFELI_PI	DIFFUSION, 67
	DILATATION, 67
Utilities, 128 OFELLSIXTH	DILU_PREC, 70
	·
Utilities, 128	DIRECT_SOLVER, 70
OFELI_SQRT2 Utilities, 128	DISPLACEMENT_FIELD, 68
,	DSMatrix, 84
OFELLSQRT3	Deactivate, 80
Utilities, 128	ELECTRIC, 67
OFELI_THIRD	EqDataType, 67
Utilities, 128	FE 2D 4N 69
OFELL TOLERANCE	FE 2D 4N, 69
Utilities, 129 OFELI_TWELVETH	FE.2D.6N, 69 FE.3D.4N, 69
OT BEILT WELL VEITT	111_0D_ <del>1</del> 1N, U7

FE_3D_8N, 69	MultAddScal, 91
FE_3D_AXI_3N, 69	NEWMARK, 68
FEType, 69	OPTIMIZATION, 69
FLUX, 68	open, <mark>72</mark>
FORWARD_EULER, 68	operator*, 91
Factor, 92	operator*=, 83, 91, 95, 100, 103
FactorAndSolve, 93	operator(), 82, 85, 86, 99, 102
GLOBAL_ARRAY, 68	operator+=, 83, 91, 95, 99
GMRES_SOLVER, 70	operator,, 95
get, 73, 74	operator-=, 91, 95
getCode, 79, 80	operator/=, 91, 95
getColHeight, 99	operator=, 83, 90, 91, 95, 99, 103
getColumn, 86	PDE_Terms, 67
getDerivative, 75	PDE, 69
getInnerProduct, 93	PERIODIC_A, 70
getLocal, 94	PERIODIC_B, 70
getNy, 79	PLANAR_TRUSS, 69
getNz, 79	POINT_FORCE, 68
getRow, 87	Preconditioner, 70
getValue, 74, 75	Prev, 71
Grid, 76, 77	put, 73
HEAT_FLUX, 67	RK3_TVD, 69
HEAT_SOURCE, 67	RK4, 69
HEUN, 68	RUNGE_KUTTA, 69
IDENT_PREC, 70	SKYLINE, 70
IDENTITY, 70	SLIP, 70
ILU_PREC, 70	SOLUTION, 68
INCOMPRESSIBLE_NAVIER_STOKES, 69	SOURCE, 68
INITIAL_AUX_1, 68	SPARSE, 70
INITIAL_AUX_1, 68 INITIAL_AUX_2, 68	SPATIAL_BEAM, 69
INITIAL_AUX_2, 68 INITIAL_AUX_3, 68	SSOR_PREC, 70
INITIAL_AUX_3, 68 INITIAL_AUX_4, 68	STATIONARY, 68
INITIAL_FIELD, 68	STEADY_STATE, 69
	STIFFNESS, 67
IOField, 71, 72	•
Invert, 93	SYMMETRIC, 70
isActive, 80, 81	saveGMSH, 74
Iter, 103, 104	set, 85, 97
Iteration, 70	setCode, 79
LAPLACE, 69	setColumn, 87
LEAP_FROG, 68	setDiag, 85
LINEARIZED_ELASTICITY, 69	setDomain, 77, 78
LOAD, 67	setFile, 74
LOCAL_ARRAY, 68	setLDLt, 86, 100
LORENTZ_FORCE, 67	setLU, 83
LUMPED_CAPACITY, 67	setMesh, 97
LUMPED_MASS, 67	setMeshFile, 72
LocalMatrix, 89, 90	setRow, 87
LocalVect, 93, 94	setSize, 82, 84, 102
Localize, 90, 94, 95	setSkyline, 97
MAGNETIC, 67	setXMax, 77
MASS, 67	setXMin, 77
MatrixType, 69	setN, 78
Mult, 92, 98	SkSMatrix, 96, 97
MultAdd, 88, 91, 98	Solve, 92

solve, 83, 84, 88, 100, 103, 104	OFELI::Element, 469, 471
solveLDLt, 101	OFELI::LocalMatrix, 738
Symmetrize, 92	OFELI::LocalVect, 740
TEMPERATURE_FIELD, 68	OFELI::Matrix, 750, 751
THERMAL_PHASE_CHANGE, 69	OFELI::PETScMatrix, 837
TMult, 88, 98	OFELI::PETScVect, 861, 862
TRACTION, 68	OFELI::Point, 874
TRANSIENT, 69	OFELI::Point2D, 878
TRIDIAGONAL, 70	OFELI::Side, 898
TimeScheme, 68	OFELI::SkMatrix, 907, 908, 914
TrMatrix, 101	OFELL:SkSMatrix, 922
UNSYMMETRIC, 70	OFELI::SpMatrix, 933, 941
VELOCITY_FIELD, 68	OFELI::TrMatrix, 985
VISCOSITY, 67	OFELI::Vect, 1011–1013
OPTIMIZATION	OFELI, 82, 85, 86, 99, 102
OFELI, 69	operator+
Objective	Utilities, 131, 132
OFELI::MyOpt, 788	Vector and Matrix, 147
open	operator+=
OFELI, 72	OFELI::BMatrix, 219
operator Mat	OFELI::Brick, 221
OFELI::PETScMatrix, 842	OFELI::Circle, 223, 224
operator Vec	OFELI::DMatrix, 347, 351
OFELI::PETScVect, 863	OFELI::DSMatrix, 363, 364
operator VectorX	OFELI::Ellipse, 474
OFELI::Vect, 1015	OFELI::Matrix, 751, 752
operator!=	OFELI::PETScVect, 862
•	
OFELL:Point, 875	OFELI:Point, 875
OFELI::Point2D, 879	OFELL:Point2D, 878
operator<<	OFELL:Polygon, 880, 881
Vector and Matrix, 149, 150	OFELI::Rectangle, 892, 893
operator*	OFELI::SkMatrix, 909, 914
OFELI::SpMatrix, 933	OFELI::SkSMatrix, 922
OFELI, 91	OFELI::SpMatrix, 941
Utilities, 132, 133	OFELI::Sphere, 924
Vector and Matrix, 146–150	OFELI::TrMatrix, 985
operator*=	OFELI::Vect, 1014
OFELI::DMatrix, 347	OFELI, 83, 91, 95, 99
OFELI::DSMatrix, 364	operator,
OFELI::Domain, 354	OFELI::PETScVect, 863
OFELI::Matrix, 751	OFELI::Point, 876
OFELI::Mesh, 763	OFELI::Vect, 1015
OFELI::PETScVect, 863	OFELI, 95
OFELI::Point, 875	operator-
OFELI::Point2D, 879	Finite Element Mesh, 25
OFELI::SkMatrix, 909	Utilities, 131–133
OFELI::SpMatrix, 933	Vector and Matrix, 147, 148
OFELI::Vect, 1015	
	operator-=
OFELI, 83, 91, 95, 100, 103	OFELI::BMatrix, 220
operator()	OFELI::DMatrix, 347, 351
OFELL:BMatrix, 219	OFELL:DSMatrix, 364
OFELI::DMatrix, 344, 351	OFELI::Matrix, 751, 752
OFELI::DSMatrix, 363	OFELI::PETScVect, 862, 863
OFELI::Edge, 382	OFELI::Point, 875

OFELI::Point2D, 878, 879	P0toP1
OFELI::SkMatrix, 914, 915	OFELI::Reconstruction, 890
OFELI::SkSMatrix, 923	PARSE
OFELI::SpMatrix, 941	Utilities, 129
OFELI::TrMatrix, 986	PDE Terms
OFELI::Vect, 1014	OFELI, 67
-	PDE
OFELI, 91, 95	
operator/	OFELI, 69
Utilities, 132, 133	PERIODIC_A
Vector and Matrix, 147, 148	OFELI, 70
operator/=	PERIODIC_B
OFELI::PETScVect, 863	OFELI, 70
OFELI::Point, 875	PETScMatrix
OFELI::Point2D, 879	OFELI::PETScMatrix, 834
OFELI::Vect, 1015	PETScMatrix< T <sub>−</sub> >, 831
OFELI, 91, 95	PETScVect
	OFELI::PETScVect, 848–850
operator=	PETScVect $< T >$ , 843
OFELI::DMatrix, 347	PETScWrapper
OFELI::Funct, 580	OFELI::PETScWrapper, 867
OFELI::Matrix, 751	PETScWrapper < T_ >, 864
OFELI::PETScMatrix, 838	PLANAR_TRUSS
OFELI::PETScVect, 862	
OFELI::Point, 875	OFELI, 69
OFELI::Point2D, 878	POINT_FORCE
OFELI::SkMatrix, 909	OFELI, 68
OFELI::SpMatrix, 935	Partition, 825
OFELI::Vect, 1013, 1014	OFELI::Partition, 826
	Penta6, 829
OFELI, 83, 90, 91, 95, 99, 103	OFELI::Penta6, 830
operator==	Periodic
Finite Element Mesh, 28	OFELI::DC2DT3, 258
OFELI::Point, 875	OFELI::DC3DT4, 322
OFELI::Point2D, 879	OFELI::Elas2DT3, 419
Utilities, 131, 132	OFELI::NSP2DQ41, 800
operator&&	PhaseChange, 872
Finite Element Mesh, 25	Physical properties of media, 105
operator[]	
OFELI::BMatrix, 219	PlaneStrain
OFELI::DMatrix, 351	OFELI::Elas2DQ4, 395
OFELI::DSMatrix, 363	PlaneStress
	OFELI::Elas2DQ4, 395
OFELL:LocalVect, 740	Point
OFELI::Matrix, 751	OFELI::Point, 874
OFELI::PETScVect, 861	Point $< T >$ , 873
OFELI::Point, 875	Point2D $<$ T $>$ , 876
OFELI::Point2D, 878	Point2D
OFELI::SkMatrix, 914	OFELI::Point2D, 878
OFELI::SkSMatrix, 922	Polygon, 879
OFELI::SpMatrix, 933, 941	OFELI::Polygon, 880
OFELI::TrMatrix, 985	Post
OFELI::Vect, 1011	
OptMethod	OFELI::Laplace2DMHRT0, 679
	OFELI::Laplace2DT3, 696
OFELI::OptSolver, 820	Prec
OptSolver, 818	OFELI::Prec, 882, 883
OFELI::OptSolver, 820	$Prec < T_{-} >$ , 881

Preconditioner	OFELI::Muscl3DT, 786
OFELI, 70	RUNGE_KUTTA
Prescribe	OFELI, 69
OFELI::BMatrix, 217, 218	RUSANOV_SOLVER
OFELI::DMatrix, 348, 349	OFELI::ICPG1D, 602
OFELI::DSMatrix, 361, 362	OFELI::ICPG2DT, 610
	OFELI::ICPG3DT, 617
OFELI::Matrix, 747, 748	•
OFELI::SkMatrix, 911–913	OFELI::LCL1D, 710
OFELI::SkSMatrix, 919–921	OFELI::LCL2DT, 715
OFELI::SpMatrix, 939, 940	OFELI::LCL3DT, 721
OFELI::TrMatrix, 982–984	OFELI::Muscl, 776
PrescribeSide	OFELI::Muscl1D, 779
OFELI::BMatrix, 218	OFELI::Muscl2DT, 782
OFELI::DMatrix, 350	OFELI::Muscl3DT, 786
OFELI::DSMatrix, 362	Reaction
OFELI::Matrix, 748	OFELI::Elas2DT3, 419
OFELI::SkMatrix, 913	Reconstruction, 889
OFELI::SkSMatrix, 921	Rectangle, 891
OFELI::SpMatrix, 940	OFELI::Rectangle, 892
OFELI::TrMatrix, 984	Refine
•	OFELI::Mesh, 774
Prescription, 885	removeBC
OFELI::Prescription, 886	
Prev Carry I. Tr	OFELL:PETScVect, 854, 855
OFELI, 71	OFELI::Vect, 1005
push_back	RenumberEdge
OFELI::Vect, 1015	OFELI::Mesh, 768
put	RenumberElement
OFELI::Mesh, 772	OFELI::Mesh, 768
OFELI::Partition, 828	RenumberNode
OFELI, 73	OFELI::Mesh, 768
	RenumberSide
qksort	OFELI::Mesh, 768
Utilities, 140, 141	Reorder
Quad4, 886	OFELI::Mesh, 766
OFELI::Quad4, 887, 888	Replace
QuickSort	OFELI::Element, 468
Utilities, 140	Rescale
Ctiffics, 110	OFELI::Mesh, 770
RHS_Convection	resize
OFELI::DC3DT4, 321	OFELI::Vect, 1001
RK3_TVD	Richardson
OFELI, 69	Solver, 118
RK4	run
OFELI, 69	OFELI::Bar2DL2, 179
ROE_SOLVER	OFELI::BiotSavart, 212
OFELI::ICPG1D, 602	OFELI::DC1DL2, 235
OFELI::ICPG2DT, 610	OFELI::DC2DT3, 260
OFELI::ICPG3DT, 617	OFELI::DC2DT6, 280
OFELI::LCL1D, 710	OFELI::DC3DAT3, 301
OFELI::LCL2DT, 715	OFELI::DC3DT4, 323
OFELI::LCL3DT, 721	OFELI::EigenProblemSolver, 387
OFELI::Muscl, 776	OFELI::Equa_Therm, 542
OFELI::Muscl1D, 779	OFELI::Laplace1DL2, 634
OFELI::Muscl2DT, 782	OFELI::Laplace1DL3, 649
- / - / - / - / - / - / - / - / - / - /	

OFELI::ODESolver, 818	OFELI::ICPG2DT, 610
OFELI::OptSolver, 824	OFELI::ICPG3DT, 617
OFELI::TimeStepping, 952	OFELI::LCL1D, 710
runOneTimeStep	OFELI::LCL2DT, 715
OFELI::Bar2DL2, 179	OFELI::LCL3DT, 721
OFELI::DC1DL2, 235	OFELI::Muscl, 775
OFELI::DC2DT3, 260	OFELI::Muscl1D, 779
OFELI::DC2DT6, 280	OFELI::Muscl2DT, 782
OFELI::DC3DAT3, 301	OFELI::Muscl3DT, 786
OFELI::DC3DT4, 323	SYMMETRIC
OFELI::Equa_Therm, 542	OFELI, 70
	·
OFELL LGLODT 711	save
OFELI::LCL2DT, 716	OFELI::Mesh, 772
OFELI::ODESolver, 818	OFELI::PETScVect, 859
OFELI::TimeStepping, 952	OFELI::Vect, 1009
runSubSpace	saveBamg
OFELI::EigenProblemSolver, 388	Utilities, 139
runTransient	saveField
OFELI::DC1DL2, 235	Utilities, 129, 130
OFELI::DC2DT3, 259	saveGMSH
·	
OFELI::DC2DT6, 280	OFELI, 74
OFELI::DC3DAT3, 300	saveGmsh
OFELI::DC3DT4, 323	Utilities, 131, 137
OFELI::Equa_Therm, 542	saveGnuplot
-	Utilities, 130, 138
SAssembly	saveMatlab
OFELI::EigenProblemSolver, 388	Utilities, 138
OFELI::TimeStepping, 953	saveMesh
SIMULATED_ANNEALING	Utilities, 137
OFELI::OptSolver, 820	
1	saveTecplot
SKYLINE	Utilities, 130, 138
OFELI, 70	saveVTK
SLIP	Utilities, 131, 139
OFELI, 70	Scale
SOLUTION	Utilities, 141
OFELI, 68	Schur
SOURCE	Solver, 118, 119
OFELI, 68	
	SEIECT
SPARSF	OFFI I PFTS Voct 851
SPARSE OFFIL 70	OFELI::PETScVect, 851
OFELI, 70	OFELI::PETScVect, 851 OFELI::Vect, 999
OFELI, 70 SPATIAL_BEAM	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode
OFELI, 70 SPATIAL_BEAM OFELI, 69	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode
OFELI, 70 SPATIAL_BEAM OFELI, 69	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY_STATE	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY_STATE OFELI, 69	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set OFELI::DC2DT3, 259
OFELI, 70 SPATIAL BEAM OFELI, 69 SSOR PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY STATE OFELI, 69 STIFFNESS	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set OFELI::DC2DT3, 259 OFELI::DMatrix, 340
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY_STATE OFELI, 69 STIFFNESS OFELI, 67	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set OFELI::DC2DT3, 259 OFELI::DMatrix, 340 OFELI::Element, 469
OFELI, 70 SPATIAL BEAM OFELI, 69 SSOR PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY STATE OFELI, 69 STIFFNESS	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set OFELI::DC2DT3, 259 OFELI::DMatrix, 340
OFELI, 70 SPATIAL_BEAM OFELI, 69 SSOR_PREC OFELI, 70 SSOR Solver, 120 STATIONARY OFELI, 68 STEADY_STATE OFELI, 69 STIFFNESS OFELI, 67	OFELI::PETScVect, 851 OFELI::Vect, 999 selectCode OFELI::EdgeList, 383 OFELI::NodeList, 794 OFELI::SideList, 900 selectCoordinate OFELI::NodeList, 794 selectLevel OFELI::ElementList, 473 set OFELI::DC2DT3, 259 OFELI::DMatrix, 340 OFELI::Element, 469

OFELI::Matrix, 750	OFELI::Node, 791
OFELI::Mesh, 771	OFELI::Side, 897
OFELI::ODESolver, 813	OFELI, 79
OFELI::PETScMatrix, 838	setCoef
OFELI::PETScVect, 851, 852, 860	OFELI::ODESolver, 813, 814
OFELI::Side, 897	setColumn
OFELI::SkMatrix, 905	OFELI::DMatrix, 341
OFELI::SpMatrix, 935	OFELI, 87
OFELI::TimeStepping, 949	setConstantMatrix
OFELI::Vect, 999, 1000, 1010	OFELI::ODESolver, 817
OFELI, 85, 97	OFELI::TimeStepping, 951
setAIJ_MPI	setCoord
OFELI::PETScMatrix, 835	OFELI::Node, 791
setAIJ	setCurrentDensity
OFELI::PETScMatrix, 835	OFELI::BiotSavart, 210
setAssembly	setDBC
OFELI::PETScMatrix, 843	OFELI::UserData, 987
OFELI::PETScVect, 864	setDOFSupport
setBC	OFELI::Mesh, 763
OFELI::ICPG1D, 604, 605	setDOFType
OFELI::ICPG2DT, 611, 612	OFELI::PETScVect, 853
OFELI::LCL1D, 711	OFELI::Vect, 1001
OFELI::LCL2DT, 716	setDOF
OFELI::LCL3DT, 722	OFELI::Edge, 382
OFELI::OptSolver, 821	OFELI::Element, 469
setBodyForce	OFELI::Node, 792
OFELI::UserData, 987	OFELI::Side, 896
setBoundary	OFELI::SkMatrix, 905
OFELI::BiotSavart, 210	setDG
·	OFELI::Vect, 1001
setBoundaryCondition	
OFELI::Laplace1DL2, 634	setDiag
setBoundaryNodeCodes	OFELL 85
Finite Element Mesh, 32	OFELI, 85
setBoundarySideCodes	setDiagonal
Finite Element Mesh, 32	OFELL DM 4 : 247
setBoundingBox	OFELL DOMARTIX, 347
OFELI:Brick, 221	OFELI::DSMatrix, 360
OFELI::Rectangle, 892	OFELI::Matrix, 746
setCFL	OFELI::SkMatrix, 910
OFELI::ICPG1D, 606	OFELI::SkSMatrix, 918
OFELI::ICPG2DT, 613	OFELI::SpMatrix, 938
OFELI::LCL1D, 712	OFELI::TrMatrix, 981
OFELI::LCL2DT, 718	setDiffusivity
OFELI::LCL3DT, 723	OFELI::Laplace2DMHRT0, 679
OFELI::Muscl, 776	setDim
OFELI::Muscl1D, 779	OFELI::Mesh, 762
OFELI::Muscl2DT, 783	setDomain
OFELI::Muscl3DT, 787	OFELI, 77, 78
setChild	setEdgeView
OFELI::Element, 471	OFELI::Mesh, 769
OFELI::Side, 899	setElementCodes
setCode	Finite Element Mesh, 33
OFELI::Edge, 382	setElementView
OFELI::Element, 467, 469	OFELI::Mesh, 769

setFile	OFELI::PETScWrapper, 870
OFELI, 74	setList
setGradient	OFELI::Mesh, 769, 770
OFELI::OptSolver, 822	setLocal
setGraph	OFELI::Hexa8, 598
OFELI::PETScMatrix, 836	OFELI::Penta6, 830
OFELI::SpMatrix, 932	OFELI::Quad4, 888
setInOutflowBC	setLowerBound
OFELI::ICPG1D, 605, 606	OFELI::OptSolver, 822
setInitial	setLowerBounds
OFELI::ODESolver, 814, 815	OFELI::OptSolver, 823
OFELI::TimeStepping, 950	setLU
setInitialCondition	OFELI::DMatrix, 344
OFELI::ICPG1D, 604	OFELI::SkMatrix, 909
OFELI::LCL1D, 710	OFELI, 83
OFELI::LCL2DT, 716	setMPI
OFELI::LCL3DT, 722	OFELI::PETScVect, 851
setInitialData	setMagneticInduction
OFELI::UserData, 987	OFELI::BiotSavart, 210
setInitialRHS	setMaterial
OFELI::ODESolver, 815	OFELI::Mesh, 766
OFELI::TimeStepping, 951	setMaterialProperty
setInput	OFELI::Bar2DL2, 189
OFELI::DC1DL2, 234	OFELI::Beam3DL2, 206
OFELI::DC2DT3, 258	OFELI::DC1DL2, 244
OFELI::TINS2DT3B, 957	OFELI::DC2DT3, 269
setIterationMethod	OFELI::DC2DT6, 289
OFELI::PETScWrapper, 871	OFELI::DC3DAT3, 310
setIterationParameters	OFELI::DC3DT4, 332
OFELI::PETScWrapper, 870	OFELI::EC2D1T3, 378
setLDLt	OFELI::Elas2DQ4, 407
OFELI::DSMatrix, 359	OFELI::Elas2DT3, 429
OFELI, 86, 100	OFELI::Elas3DH8, 445
setLSTolerances	OFELI::Elas3DT4, 461
OFELI::PETScWrapper, 871	OFELI::Equa_Electromagnetics, 488
setLabel	OFELI::Equa_Fluid, 502
OFELI::Element, 467	OFELI::Equa_Laplace, 516
setLevel	OFELI::Equa_Solid, 533
OFELI::Node, 793	OFELI::Equa_Therm, 552
setLimiter	OFELI::Equation, 566
OFELI::ICPG1D, 607	OFELI::HelmholtzBT3, 595
OFELI::ICPG2DT, 614	OFELI::Laplace1DL2, 644
OFELI::ICPG3DT, 618	OFELI::Laplace1DL3, 659
OFELI::LCL1D, 713	OFELI::Laplace2DFVT, 674
OFELI::LCL2DT, 718	OFELI::Laplace2DMHRT0, 689
OFELI::LCL3DT, 724	OFELI::Laplace2DT3, 706
OFELI::Muscl, 777	OFELI::NSP2DQ41, 809
OFELI::Muscl1D, 780	OFELI::TINS2DT3B, 966
OFELI::Muscl2DT, 784	setMatrices
OFELI::Muscl3DT, 787	OFELI::ODESolver, 816
setLinearSolver	setMatrix
OFELI::ODESolver, 817	OFELI::EigenProblemSolver, 387
OFELI::TimeStepping, 951	OFELI::LinearSolver, 734, 735
setLinearSystem	OFELI::PETScWrapper, 870
,	11 '

OFELI::Prec, 884	OFELI::TimeStepping, 950
setMaxIter	setPartition
OFELI::LinearSolver, 734	OFELI::PETScMatrix, 835
setMesh	OFELI::PETScWrapper, 869
OFELI::PETScMatrix, 835	setPermeability
OFELI::PETScVect, 852	OFELI::BiotSavart, 210
OFELI::PETScWrapper, 869	setPointInDomain
OFELI::SkMatrix, 905	OFELI::Mesh, 764
OFELI::SpMatrix, 931	setPreconditioner
OFELI::SteklovPoincare2DBE, 943	OFELI::PETScWrapper, 870
OFELI::Vect, 1000	setQR
OFELI, 97	OFELI::DMatrix, 343
setMeshFile	setRHS
OFELI, 72	OFELI::ODESolver, 816
setMethod	setRK4RHS
OFELI::ICPG1D, 607	OFELI::ODESolver, 814
OFELI::ICPG2DT, 614	OFELI::TimeStepping, 950
OFELI::ICPG3DT, 618	setRank
OFELI::LCL1D, 712	OFELI::PETScMatrix, 835
OFELI::LCL2DT, 718	setReconstruction
OFELI::LCL3DT, 724	OFELI::ICPG1D, 606
OFELI::Muscl, 777	OFELI::ICPG2DT, 611, 613
OFELI::Muscl1D, 780	OFELI::ICPG3DT, 618
OFELI::Muscl2DT, 783	OFELI::LCL1D, 712
OFELI::Muscl3DT, 787	OFELI::LCL2DT, 717
setNbDOFPerNode	OFELI::LCL3DT, 723
OFELI::Mesh, 764	OFELI::Muscl, 776
setNbEq	OFELI::Muscl1D, 780
OFELI::ODESolver, 813	OFELI::Muscl2DT, 782
setNewmarkParameters	OFELI::Muscl3DT, 786
OFELI::ODESolver, 817	setReferenceLength
OFELI::TimeStepping, 951	OFELI::ICPG1D, 606
setNodeBC	OFELI::ICPG2DT, 613
OFELI::PETScVect, 853, 854	OFELI::LCL2DT, 718
OFELI::Vect, 1002–1004	OFELI::Muscl, 776
setNodeCodes	OFELI::Muscl1D, 780
Finite Element Mesh, 32	OFELI::Muscl2DT, 783
setNodeView	OFELI::Muscl3DT, 787
OFELI::Mesh, 769	setRow
setNonConstantMatrix	OFELI::DMatrix, 341
OFELI::ODESolver, 817	OFELI, 87
OFELI::TimeStepping, 951	setSAOpt
setObjective	OFELI::OptSolver, 823
OFELI::OptSolver, 821	setSide
setOnBoundary	OFELI::Element, 471
OFELI::Node, 792	setSideBC
setOptClass	OFELI::Vect, 1003, 1004
OFELI::OptSolver, 822	setSideCodes
setOptMethod	Finite Element Mesh, 32
OFELI::OptSolver, 821	setSideView
setOutputFile	OFELI::Mesh, 769
OFELI::Domain, 356	setSize
setPDE	OFELI::DMatrix, 339
OFELI::EigenProblemSolver, 387	OFELI::PETScMatrix, 836
•	•

OFELI::PETScVect, 853	OFELI::ICPG2DT, 613
OFELI::SpMatrix, 932	OFELI::LCL1D, 712
OFELI::Vect, 1000	OFELI::LCL2DT, 717
OFELI, 82, 84, 102	OFELI::LCL3DT, 723
setSkyline	OFELI::Muscl, 776
OFELI::SkMatrix, 905	OFELI::Muscl1D, 779
OFELI, 97	OFELI::Muscl2DT, 783
setSolver	OFELI::Muscl3DT, 787
OFELI::AbsEqua, 172	setTolerance
OFELI::Bar2DL2, 190	OFELI::EigenProblemSolver, 389
OFELI::Beam3DL2, 206	OFELI::OptSolver, 824
OFELI::DC1DL2, 245	setTraction
OFELI::DC2DT3, 269	OFELI::Laplace1DL2, 634
OFELI::DC2DT6, 290	OFELI::Laplace1DL3, 649
OFELI::DC3DAT3, 310	setTransLU
OFELI::DC3DT4, 333	OFELI::DMatrix, 345
OFELI::EC2D1T3, 379	setTransQR
OFELI::Elas2DQ4, 408	OFELI::DMatrix, 343
OFELI::Elas2DT3, 429	setTriangle
OFELI::Elas3DH8, 445	OFELI::Gauss, 581
OFELI::Elas3DT4, 462	setType
OFELI::Equa_Electromagnetics, 488	OFELI::Prec, 884
OFELI::Equa_Fluid, 502	setUniform
OFELI::Equa_Laplace, 517	OFELI::Vect, 1013
OFELI::Equa_Solid, 534	setUpperBound
OFELI::Equa_Therm, 552	OFELI::OptSolver, 822
OFELI::Equation, 567	setUpperBounds
OFELI::HelmholtzBT3, 596	OFELI::OptSolver, 822
OFELI::ICPG2DT, 611	setVelocity
OFELI::Laplace1DL2, 644	OFELI::LCL1D, 711
OFELI::Laplace1DL3, 659	OFELI::LCL2DT, 717
OFELI::Laplace2DFVT, 674	OFELI::LCL3DT, 722
OFELI::Laplace2DMHRT0, 690	setVerbose
OFELI::Laplace2DT3, 706	OFELI::ICPG1D, 606
OFELI::LinearSolver, 735	OFELI::ICPG2DT, 614
OFELI::NSP2DQ41, 809	OFELI::ICPG3DT, 618
· · · · · · · · · · · · · · · · · · ·	•
OFELL::PETScMatrix, 840	OFELI::LCL1D, 712
OFELL::SpMatrix, 937	OFELI:LCL2DT, 718
OFELI::TINS2DT3B, 967	OFELI::LCL3DT, 723
setSource	OFELL:LinearSolver, 734
OFELI::Laplace2DT3, 696	OFELI::Mesh, 762
setStab	OFELI::Muscl, 776
OFELI::DC1DL2, 234	OFELI::Muscl1D, 780
OFELI::DC2DT3, 259	OFELI::Muscl2DT, 783
OFELI::DC2DT6, 278	OFELI::Muscl3DT, 787
OFELI::DC3DAT3, 300	OFELI::ODESolver, 817
OFELI::DC3DT4, 322	OFELI::TimeStepping, 952
OFELI::Equa_Therm, 540	setVerbosity
setSubspaceDimension	OFELI::OptSolver, 823
OFELI::EigenProblemSolver, 388	setVertices
setSurfaceForce	OFELI::Polygon, 880
OFELI::UserData, 988	setXMax
setTimeStep	OFELI, 77
OFELI::ICPG1D, 606	setXMin

OFELI, 77	OFELI::Beam3DL2, 200
setF	OFELI::DC1DL2, 238
OFELI::ODESolver, 814	OFELI::DC2DT3, 263
setN	OFELI::DC2DT6, 283
OFELI, 78	OFELI::DC3DAT3, 304
Sh	OFELI::DC3DT4, 326
OFELI::FEShape, 571	OFELI::EC2D1T3, 372
OFELI::Hexa8, 598	OFELI::Elas2DQ4, 400
OFELI::Line2, 726	OFELI::Elas2DT3, 423
OFELI::Line2H, 728	OFELI::Elas3DH8, 439
OFELI::Line3, 730	OFELL:Elas3DT4, 455
OFELI::Penta6, 830	OFELL: Equa Electromagnetics, 482
OFELL::Quad4, 888	OFELL:Equa_Fluid, 496
OFELI::Tetra4, 946	OFELI::Equa_Laplace, 510
OFELI::Triang3, 970	OFELI::Equa_Solid, 526
OFELI::Triang6S, 972, 973	OFELI::Equa_Therm, 546
OFELI::triangle, 975, 977	OFELI::Equation, 561
Shape Function, 106	OFELI::HelmholtzBT3, 589
Side, 893	OFELI::Laplace1DL2, 638
OFELI::Side, 896	OFELI::Laplace1DL3, 653
side_assembly	OFELI::Laplace2DFVT, 668
General Purpose Equations, 38, 39	OFELI::Laplace2DMHRT0, 683
SideAssembly	OFELI::Laplace2DT3, 700
OFELI::Bar2DL2, 186, 187	OFELI::NSP2DQ41, 803
OFELI::Beam3DL2, 203, 204	OFELI::TINS2DT3B, 960
OFELI::DC1DL2, 241, 242	SideType
OFELI::DC2DT3, 266, 267	OFELI::Side, 896
	- · · · · · · · · · · · · · · · · · · ·
OFELI::DC2DT6, 286, 287	SideVector
OFELI::DC2DT6, 286, 287 OFELI::DC3DAT3, 307, 308	SideVector OFELL:Bar2DL2, 183
OFELI::DC3DAT3, 307, 308	OFELI::Bar2DL2, 183
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::Equation, 561, 562, 565, 566	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equation, 561, 562, 565, 566 OFELI::HelmholtzBT3, 592, 593	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equation, 561, 562, 565, 566 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Solid, 526
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Fluid, 496 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Solid, 526
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672	OFELI::Bar2DL2, 183 OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Fluid, 496 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DAT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equaation, 560
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equation, 561, 562, 565, 566 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DMHRT0, 686, 687	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DAT3, 304 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::HelmholtzBT3, 589
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DT3, 703, 704 OFELI::NSP2DQ41, 806, 807	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Elas3DT4, 455 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Laplace, 510 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::HelmholtzBT3, 589 OFELI::Laplace1DL2, 637
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Solid, 530, 531 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DT3, 703, 704 OFELI::NSP2DQ41, 806, 807 OFELI::TINS2DT3B, 963, 964	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::HelmholtzBT3, 589 OFELI::Laplace1DL2, 637 OFELI::Laplace1DL3, 653
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DT3, 703, 704 OFELI::NSP2DQ41, 806, 807 OFELI::TINS2DT3B, 963, 964 SideInElement	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DAT3, 304 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Laplace, 510 OFELI::Equa_Laplace, 510 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::Laplace1DL2, 637 OFELI::Laplace1DL2, 653 OFELI::Laplace2DFVT, 668 OFELI::Laplace2DMHRT0, 683
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DT3, 703, 704 OFELI::NSP2DQ41, 806, 807 OFELI::TINS2DT3B, 963, 964 SideInElement Finite Element Mesh, 33	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Fluid, 496 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::HelmholtzBT3, 589 OFELI::Laplace1DL2, 637 OFELI::Laplace2DFVT, 668
OFELI::DC3DAT3, 307, 308 OFELI::DC3DT4, 329, 330 OFELI::EC2D1T3, 375, 376 OFELI::Elas2DQ4, 404, 405 OFELI::Elas2DT3, 425–427 OFELI::Elas3DH8, 442, 443 OFELI::Elas3DT4, 458, 459 OFELI::Equa_Electromagnetics, 484–486 OFELI::Equa_Fluid, 499, 500 OFELI::Equa_Fluid, 530, 531 OFELI::Equa_Laplace, 513, 514 OFELI::Equa_Therm, 548–550 OFELI::Equa_Therm, 548–550 OFELI::HelmholtzBT3, 592, 593 OFELI::Laplace1DL2, 640–642 OFELI::Laplace1DL3, 656, 657 OFELI::Laplace2DFVT, 671, 672 OFELI::Laplace2DMHRT0, 686, 687 OFELI::Laplace2DT3, 703, 704 OFELI::NSP2DQ41, 806, 807 OFELI::TINS2DT3B, 963, 964 SideInElement Finite Element Mesh, 33 SideList, 899	OFELI::Beam3DL2, 200 OFELI::DC1DL2, 238 OFELI::DC2DT3, 263 OFELI::DC2DT6, 283 OFELI::DC3DAT3, 304 OFELI::DC3DAT4, 326 OFELI::EC2D1T3, 372 OFELI::Elas2DQ4, 400 OFELI::Elas2DT3, 422 OFELI::Elas3DH8, 439 OFELI::Equa_Electromagnetics, 481 OFELI::Equa_Fluid, 496 OFELI::Equa_Fluid, 496 OFELI::Equa_Solid, 526 OFELI::Equa_Therm, 545 OFELI::Equa_Therm, 545 OFELI::Equation, 560 OFELI::HelmholtzBT3, 589 OFELI::Laplace1DL2, 637 OFELI::Laplace2DFVT, 668 OFELI::Laplace2DMHRT0, 683 OFELI::Laplace2DT3, 700

SidesAreDOF	OFELI::Laplace2DFVT, 675
OFELI::Mesh, 771	OFELI::Laplace2DMHRT0, 690
SignoriniContact	OFELI::Laplace2DT3, 707
OFELI::Elas2DQ4, 396	OFELI::NSP2DQ41, 810
OFELI::Elas2DT3, 418	OFELI::TINS2DT3B, 967
	solveQR
OFFI InVest 1000	
OFELI::Vect, 1000	OFELI::DMatrix, 343
SkMatrix	solveTrans
OFELI::SkMatrix, 904, 905	OFELI::DMatrix, 345, 346
SkMatrix < T <sub>-</sub> >, 900	solveTransQR
SkSMatrix	OFELI::DMatrix, 344
OFELI, 96, 97	Solver, 108
SkSMatrix $<$ T $>$ , 915	BiCGStab, 111, 112
Solid Mechanics, 107	BiCG, 111
Solve	CGS, 114
OFELI::SteklovPoincare2DBE, 943	CG, 113
OFELI, 92	GMRes, 115, 116
solve	GS, 116
OFELI::DMatrix, 345, 346	IterationLoop, 110
OFELI::Laplace2DMHRT0, 680	Jacobi, 117
OFELI::Laplace2DT3, 696	MAX_NB_EQUATIONS, 110
OFELI::LinearSolver, 735, 736	MAX_NB_INPUT_FIELDS, 110
OFELI::Matrix, 749	MAX_NB_MESHES, 110
OFELI::PETScMatrix, 839	Richardson, 118
OFELL:PETScWrapper, 871	SSOR, 120
OFELI::Prec, 884	Schur, 118, 119
OFELI::SkMatrix, 909, 910	TimeLoop, 110
OFELI::SpMatrix, 936	SolverType
OFELI, 83, 84, 88, 100, 103, 104	OFELI::ICPG1D, 602
solveLDLt	OFELI::ICPG2DT, 610
OFELI, 101	OFELI::ICPG3DT, 617
SolveLinearSystem	OFELI::LCL1D, 710
OFELI::AbsEqua, 172	OFELI::LCL2DT, 715
OFELI::Bar2DL2, 190	OFELI::LCL3DT, 721
OFELI::Beam3DL2, 207	OFELI::Muscl, 775
OFELI::DC1DL2, 245	OFELI::Muscl1D, 779
OFELI::DC2DT3, 270	OFELI::Muscl2DT, 782
OFELI::DC2DT6, 290	OFELI::Muscl3DT, 786
OFELI::DC3DAT3, 311	SpMatrix
OFELI::DC3DT4, 333	OFELI::SpMatrix, 929, 930
OFELI::EC2D1T3, 379	SpMatrix $< T >$ , 925
OFELI::Elas2DQ4, 408	Sphere, 923
OFELI::Elas2DT3, 430	OFELI::Sphere, 924
OFELI::Elas3DH8, 446	Start
·	
OFELI::Elas3DT4, 462	OFELI::Timer, 947
OFELL: Equa_Electromagnetics, 489	Started
OFELI::Equa_Fluid, 503	OFELI::Timer, 947
OFELI::Equa_Laplace, 517	SteklovPoincare2DBE, 942
OFELI::Equa_Solid, 534	OFELI::SteklovPoincare2DBE, 942, 943
OFELI::Equa_Therm, 553	Stiffness
OFELI::Equation, 568	OFELI::Bar2DL2, 179
OFELI::HelmholtzBT3, 596	Stop
OFELI::Laplace1DL2, 645	OFELI::Timer, 947
OFELI::Laplace1DL3, 660	Strain
•	

OFELI::Elas2DQ4, 396	Global Variables, 41
OFELI::Elas2DT3, 419	theStep
Stress	Global Variables, 41
OFELI::Elas2DQ4, 396	theTime
OFELI::Elas2DT3, 419	Global Variables, 42
SurfaceForce	theTimeStep
OFELI::UserData, 989	Global Variables, 41
Symmetrize	theTolerance
OFELI, 92	Global Variables, 42
THE ADED A THINK HIELD	TimeLoop
TEMPERATURE_FIELD	Solver, 110
OFELI, 68	TimeScheme
THERMAL_PHASE_CHANGE	OFELI, 68
OFELI, 69	TimeStepping, 948
TINS2DT3B, 953	OFELI::TimeStepping, 949
OFELI::TINS2DT3B, 956	Timer, 947
TMult	TrMatrix
OFELI::DMatrix, 342	OFELI, 101
OFELI::SkMatrix, 907	TrMatrix < T >, 978
OFELI::SpMatrix, 934	TransSolve
OFELI, 88, 98	OFELI::Prec, 885
TMultAdd	transferBC
OFELI::SkMatrix, 906	OFELI::PETScVect, 856
TRACTION	OFELI::Vect, 1005
OFELI, 68	Triang3, 968
TRANSIENT	OFELI::Triang3, 969
OFELI, 69	Triang6S, 971
TRIDIAGONAL	OFELI::Triang6S, 972
OFELI, 70	triangle, 973, 976
TRUNCATED_NEWTON	OFELI::triangle, 975, 977
OFELI::OptSolver, 820	AN AN A A FETTILO
Tabulation, 944	UNSYMMETRIC
Tetra4, 944	OFELI, 70
TheEdge	unselectCode
Finite Element Mesh, 23	OFELI::EdgeList, 383
theEdge	OFELI::ElementList, 473
Global Variables, 41	OFELI::NodeList, 794
TheElement	OFELI::SideList, 900
Finite Element Mesh, 23	updateBC
theElement	OFELI::Bar2DL2, 180
Global Variables, 40	OFELI::Beam3DL2, 197
theFinalTime	OFELI::DC1DL2, 235
Global Variables, 42	OFELI::DC2DT3, 260
theIteration	OFELI::DC2DT6, 280
Global Variables, 41	OFELI::DC3DAT3, 301
TheNode	OFELI::DC3DT4, 323
Finite Element Mesh, 23	OFELI::EC2D1T3, 369
theNode	OFELI::Elas2DQ4, 397
Global Variables, 40	OFELI::Elas2DT3, 420
theNodeLabel	OFELI::Elas3DH8, 436
Finite Element Mesh, 24	OFELI::Elas3DT4, 452
TheSide	OFELI::Equa_Electromagnetics, 479
Finite Element Mesh, 23	OFELL:Equa_Fluid, 493
theSide	OFELI::Equa_Laplace, 507

OFELI::Equa_Solid, 523	saveGmsh, 131, 137
OFELI::Equa_Therm, 543	saveGnuplot, 130, 138
OFELI::Equation, 558	saveMatlab, 138
OFELI::HelmholtzBT3, 586, 587	saveMesh, 137
OFELI::Laplace1DL2, 635	saveTecplot, 130, 138
OFELI::Laplace1DL3, 650	saveVTK, 131, 139
OFELI::Laplace2DFVT, 665	Scale, 141
OFELI::Laplace2DI v 1, 600 OFELI::Laplace2DMHRT0, 680	Xpy, 141
OFELI::Laplace2Dtri 1670, 000 OFELI::Laplace2DT3, 697	хру, 141
OFELI::NSP2DQ41, 800	VANALBADA_LIMITER
OFELI::TINS2DT3B, 957	OFELI::ICPG1D, 602
UserData	OFELI::ICPG2DT, 610
OFELI::UserData, 987	OFELI::ICPG3DT, 617
UserData $< T > 0.986$	OFELI::LCL1D, 710
Utilities, 121	OFELI::LCL2DT, 715
	OFELI::LCL3DT, 721
Axpy, 141	OFELI::Muscl, 775
BSpline, 139	OFELI::Muscl1D, 779
banner, 140	OFELI::Muscl2DT, 782
Clear, 142	OFELI::Muscl3DT, 786
Dot, 141, 142	VANLEER_LIMITER
EVAL, 129	OFELI::ICPG1D, 602
Equal, 142	OFELI::ICPG2DT, 610
getBamg, 134	OFELI::ICPG2DT, 617
getEasymesh, 135	
getGambit, 135	OFELL::LCL1D, 710
getGmsh, 135	OFELL::LCL2DT, 715
getMatlab, 136	OFELI::LCL3DT, 721
getMesh, 133	OFELI::Muscl, 775
getNetgen, 136	OFELL:Muscl1D, 779
getTetgen, 136	OFELL:Muscl2DT, 782
getTriangle, 137	OFELI::Muscl3DT, 786
Nrm2, 142	VELOCITY_FIELD
OFELL CALICS2, 129	OFELI, 68
OFELL GAUSS2, 128	VFROE_SOLVER
OFELLIMAG, 129	OFELL:ICPG1D, 602
OFELL-ONEOVERPI, 128	OFELL:ICPG2DT, 610
OFELL-PI, 128	OFELL:ICPG3DT, 617
OFELL SIXTH, 128	OFELL: LCL1D, 710
OFELL CORTA 128	OFELL::LCL2DT, 715
OFELL THERE 128	OFELI::LCL3DT, 721
OFELL THIRD, 128	OFELI::Muscl, 776
OFELL TOLERANCE, 129	OFELL:Muscl1D, 779
OFELL TWELVETH, 128	OFELL:Muscl2DT, 782
OFELI_E, 128	OFELI::Muscl3DT, 786
operator*, 132, 133	VISCOSITY
operator+, 131, 132	OFELI, 67
operator-, 131–133	Vect
operator/, 132, 133	OFELI::Vect, 995–998
operator==, 131, 132	$Vect < T_{-} >, 990$
PARSE, 129	Vector and Matrix, 143
qksort, 140, 141	Dot, 148
QuickSort, 140	operator<<, 149, 150
saveBamg, 139	operator*, 146–150
saveField, 129, 130	operator+, 147

1062 OFELI's Reference Guide

```
operator-, 147, 148
operator/, 147, 148
VectorX, 146
VectorX
Vector and Matrix, 146
Verbosity
Global Variables, 41
WithMesh
OFELI::Vect, 1001
Xpy
Utilities, 141
```