
Motor Control Blockset™

Sensorless Field-Oriented Control (FOC) of PMSM Using Renesas®Evaluation System for BLDC Motor (With RX66T CPU Card)



MATLAB®

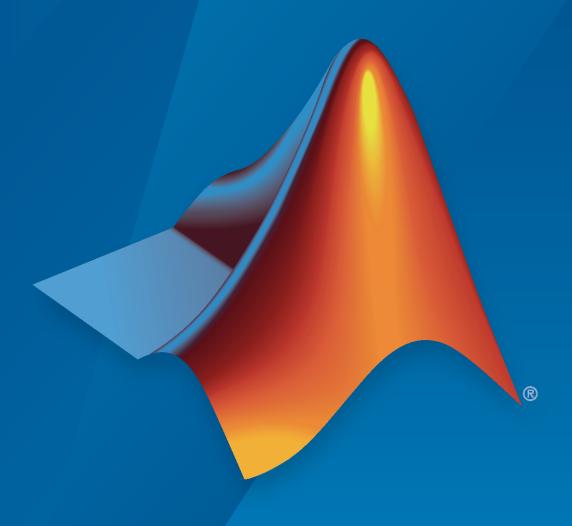

How to Contact MathWorks



Latest news: www.mathworks.com

Sales and services: www.mathworks.com/sales_and_services

User community: www.mathworks.com/matlabcentral

Technical support: www.mathworks.com/support/contact_us

T

Phone: 508-647-7000



The MathWorks, Inc. 1 Apple Hill Drive Natick, MA 01760-2098

Sensorless Field-Oriented Control (FOC) of PMSM Using Renesas® Evaluation System for BLDC Motor (With RX66T CPU Card)

© COPYRIGHT 2024 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

 $MathWorks\ products\ are\ protected\ by\ one\ or\ more\ U.S.\ patents.\ Please\ see\ www.mathworks.com/patents\ for\ more\ information.$

Revision History

June 2024 First printing "Release for R2024a"

Contents

	About This Exan	ıple
1		
	Introduction	1-2
	Hardware Requirements	1-3
	Software Requirements	1-4 1-4 1-4
	Contents of Downloaded ZIP Folder	1-5
2 [V/F (Open-Loop or Scalar) Control of PMSM Using Rend Hardw	
	Open MATLAB Project	2-2
	Update Motor and Inverter Parameters	2-3
	Simulate Model Containing V/F Control Algorithm	2-6
	Generate Code for V/F Control Algorithm	2-8
	Deploy V/F Control Algorithm Code and Drivers to Hardware	2-9
3 [Field-Oriented Control (FOC) of PMSM Using Ro Har	
	Open MATLAB Project	3-2
	Update Motor and Inverter Parameters	3-3
	Simulate Model Containing FOC Algorithm	3-6
	Generate Code for FOC Algorithm	3-8

Deploy FOC Algorithm Code and Drivers to Hardware	3-9
Deploy 1 00 mgorithm code and Differs to Hardware	0

About This Example

- "Introduction" on page 1-2
- "Hardware Requirements" on page 1-3
- "Software Requirements" on page 1-4
- "Contents of Downloaded ZIP Folder" on page 1-5

Introduction

This example implements V/F (open-loop or scalar) and field-oriented control (FOC) techniques to control the speed of a three-phase permanent magnet synchronous motor (PMSM). The FOC speed control algorithm that the example implements uses the Extended EMF Observer block to obtain realtime rotor position using sensorless position estimation.

In addition to simulation of the V/F and FOC control algorithms, the example supports deployment of these algorithms on the Renesas evaluation system for BLDC motor (with RX66T CPU card).

The evaluation system for BLDC motor is a low-voltage permanent magnet synchronous motor (brushless DC motor) solution that enables you to easily evaluate your motor. The evaluation system has these features:

- Support for different CPU cards (including motor control MCUs)
- Inverter board (with 48V rating)
- Support for permanent magnet synchronous motor (brushless DC motor)
- Three-shunt current detection function
- Overcurrent protection function
- Support for USB mini B.

For more information about this evaluation system, see Evaluation System for BLDC Motor.

This example uses the RX66T CPU card (RTK0EMX870C00000BJ) along with the evaluation system for BLDC motor. For more details about this CPU card, see CPU Card for Motor Control.

In addition, the example requires an on-chip debugger board. For more information about he debugger boards, see On-chip Debuggers.

Hardware Requirements

This section lists the hardware requirements to run the example:

- 1 Renesas evaluation system for BLDC motor (RTK0EMX270S00020BJ) that includes these peripherals:
 - Inverter board (RTK0EM0000B10020BJ)
 - Permanent magnet synchronous motor (TG-55L-KA) with rated voltage of 24 V and rated current of 0.42 A

For more details about this evaluation system, see Evaluation System for BLDC Motor and User's Manual for Evaluation System for BLDC Motor.

2 Renesas RX66T CPU card (RTK0EMX870C00000BJ)

For details about this CPU card, see CPU Card for Motor Control.

- **3** Renesas on-chip debugger board (either one of the following):
 - E1
 - E2
 - E2Lite
 - E20

For more information about these debugger boards, see On-chip Debuggers.

4 24V power supply

Software Requirements

This section lists the software products from MathWorks® and Renesas that you need to simulate and run the example models on the evaluation system for BLDC motor (with RX66T CPU card).

Required MathWorks Products

To simulate the example model:

- MATLAB®
- Simulink®
- · Motor Control Blockset
- Stateflow®

To generate code and deploy the example model:

- MATLAB
- Simulink
- · Motor Control Blockset
- Stateflow
- Embedded Coder®
- Simulink Coder™
- MATLAB Coder

Required Renesas Products

• CS+ (an integrated development environment (IDE) for Renesas MCUs)

For more details about this software, see CS+.

Contents of Downloaded ZIP Folder

The ZIP folder that you downloaded from the GitHub® repository, includes:

1 MATLAB project package for V/F and FOC control algorithms, which includes the following files and folders:

Folder Name	Description		
code	Contains generated code (if any).		
components	Contains Simulink model components for V/F and FOC control algorithms.		
data	Contains Simulink data dictionary file (motorControlData.sldd).		
model	Contains Simulink models for V/F and FOC algorithms that support both simulation and code generation.		
resources	Contains MATLAB project resource data and logs.		
script	Contains initialization and utility scripts to use the Simulink models.		
shortcuts	Contains shortcut utility scripts for the MATLAB project window.		
work	Contains any additional data or utility files (if any).		

File Name	Description
RX66TDemo.prj	File that launches the MATLAB project window.

2 Driver package for the evaluation system for BLDC motor (with RX66T CPU card), which includes the following folder:

Folder Name	Description
csPlusProject	Contains the control algorithm code along with driver package for the evaluation system for BLDC motor (with RX66T CPU card).
	The software CS+ uses this folder to launch the Renesas hardware project for the evaluation system for BLDC motor (with RX66T CPU card).
	The MotorControlDemo\genCode directory available inside this folder contains the control algorithm code generated by the MATLAB project window.


V/F (Open-Loop or Scalar) Control of PMSM Using Renesas Hardware

- "Open MATLAB Project" on page 2-2
- "Update Motor and Inverter Parameters" on page 2-3
- "Simulate Model Containing V/F Control Algorithm" on page 2-6
- "Generate Code for V/F Control Algorithm" on page 2-8
- "Deploy V/F Control Algorithm Code and Drivers to Hardware" on page 2-9


Open MATLAB Project

Follow these steps to open the MATLAB project associated with this example:

- 1 Unzip the RX66T.zip folder that you downloaded from the GitHub repository.
- 2 Open MATLAB and navigate to the folder you unzipped in step 1.

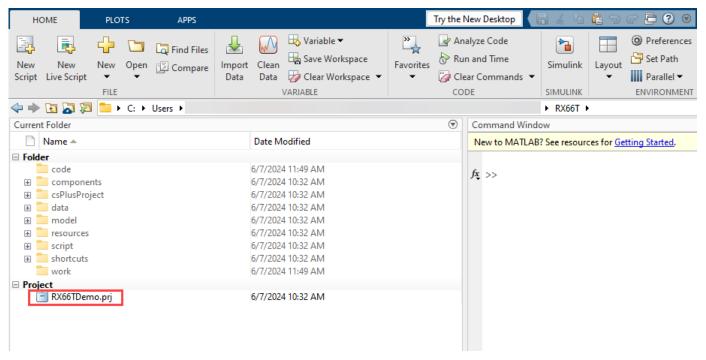


3 Double-click the file RX66TDemo.prj to open the following MATLAB project window.

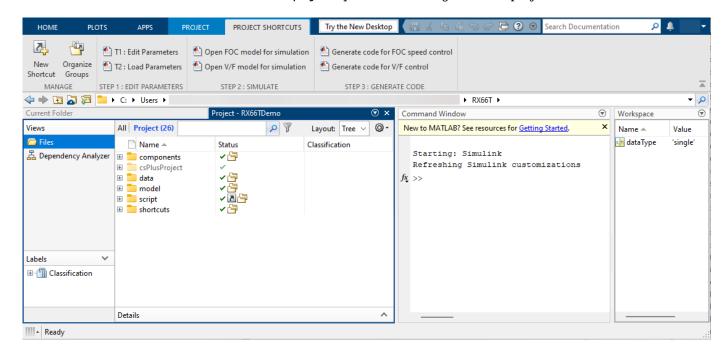

Update Motor and Inverter Parameters

The prerequisite to simulating or deploying the Simulink model containing V/F control algorithm is to edit the motor and inverter parameters and load them to MATLAB base workspace. Follow these steps to update and load the parameters:

In the **Project Shortcuts** tab of the MATLAB project window, click the **T1: Edit Parameters** shortcut button to open the model initialization script EnterParameters.m.

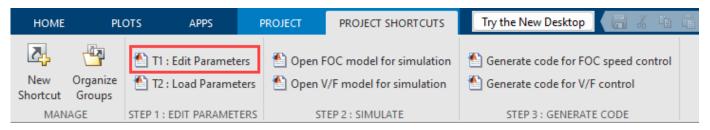



The Simulink model uses this script to obtain the motor, inverter, and other parameter values, which it uses to compute the derived parameters.

- 2 Update the following sections of the model initialization script EnterParameters.m:
 - Control Loop Frequencies
 - Inverter Parameters
 - Motor Parameters

```
EnterParameters.m × +
1
         % Copyright 2024 The MathWorks, Inc.
 3
         %% Control loop frequencies
                                             % Hz
 4
         fCurrentControl
                               = 20e3:
 5
         fSpeedControl
                                 = fCurrentControl/10;
                                                            % Hz
 6
         target.PWM_frequency
                                             % Hz
                                                             % The frequency configuration must be done in driver code too
                                = 20e3;
 8
         %% Inverter Parameters
 9
10
         inverter.V dc
                                = 24;
                                             % V
11
         inverter.ISenseMax
                                = 12.5;
                                             % A
                                                             % Maximum current sensed by inverter
                                                             % Rds ON + Rshunt/3
         inverter.R board
                              = 0.0033;
                                            % ohm
12
13
         inverter.ISenseGainFactor = -1;
14
15
         %% Motor Parameters
16
                                 = 2;
                                             %
                                                             % Pole pairs
         pmsm.p
                                             % A
17
         pmsm.I_rated
                                = 0.42;
18
         pmsm.N rated
                                 = 3500;
                                             % RPM
19
         pmsm.T_rated
                                 = 0.1;
                                             % Nm
                                = 1000:
                                             %
                                                             % Quadrature encoder slits
20
         pmsm.QEPSlits
21
         pmsm.Rs
                                 = 8.5;
                                             % ohm
22
         pmsm.Ld
                                 = 0.0045;
                                            % н
23
         pmsm.Lq
                                 = 0.0045;
                                             % н
24
         pmsm.Ke
                                 = 7.83;
                                             % Vpk_LL/kRPM
                                            % Kg-m2
25
         pmsm.J
                                 = 2.8e-6;
26
         pmsm.B
                                 = 8e-5;
                                             % Kg-m2/s
27
         pmsm.V_boost
                                 = 0.4;
                                             % PU volt
28
29
         %% Sensor selection
                                             % 'Encoder' , 'EEMF'
30
         sensor = 'EEMF';
31
32
         %% Derived Parameters
33
         T_pwm = 1/target.PWM_frequency;
34
         Ts = 1/fCurrentControl;
35
         Ts_speed = 1/fSpeedControl;
         Is_motor = Ts/2;
36
37
38
         Ts_SerialOut = 0.1;
                                                             % Required only for UART
39
40
         pmsm.FluxPM = (pmsm.Ke)/(sqrt(3)*2*pi*1000*pmsm.p/60);
41
         pmsm.N_base = mcb_getBaseSpeed(pmsm,inverter);
42
         PU System
                      = mcb SetPUSystem(pmsm,inverter);
43
                       = mcb_SetControllerParameters(pmsm,inverter,PU_System,T_pwm,Ts,Ts_speed);
44
         % Create copies for EEMF block as the parameters are not tunable
45
```

- 3 Click **Save** to save the file EnterParameters.m.
- 4 Switch to the MATLAB project window and navigate to the **Project Shortcuts** tab.
- 5 Click the **T2: Load Parameters** shortcut button to:
 - Compute derived parameters using the data available in the model initialization script.
 - Update all parameters to the Simulink data dictionary motorControlData.sldd.
 - Load necessary parameters from Simulink data dictionary to the MATLAB base workspace.

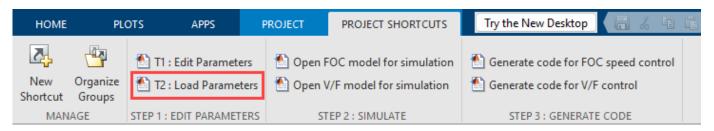

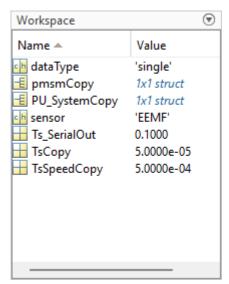


Note The shortcut **T2: Load Parameters** loads only the necessary parameters to the base workspace. The Simulink model reads the other parameters directly from the Simulink data dictionary.


Simulate Model Containing V/F Control Algorithm

This example supports simulation. Follow these steps to simulate the Simulink model containing the V/F control algorithm.


- **1** Ensure that you edit the motor and inverter parameters and load them to the MATLAB base workspace. For details, see the section Update Motor and Inverter Parameters.
- In the **Project Shortcuts** tab of the MATLAB project window, click the **Open V/F model for simulation** shortcut button to open the Simulink model SimVbyF.slx containing the V/F control algorithm.

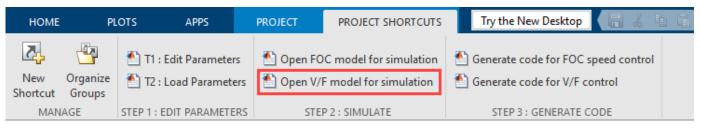

3 Click **Run** on the **Simulation** tab to simulate the model.

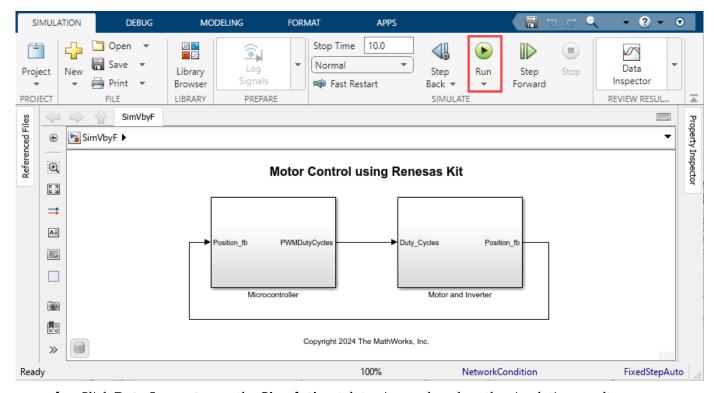

4 Click **Data Inspector** on the **Simulation** tab to view and analyze the simulation results.

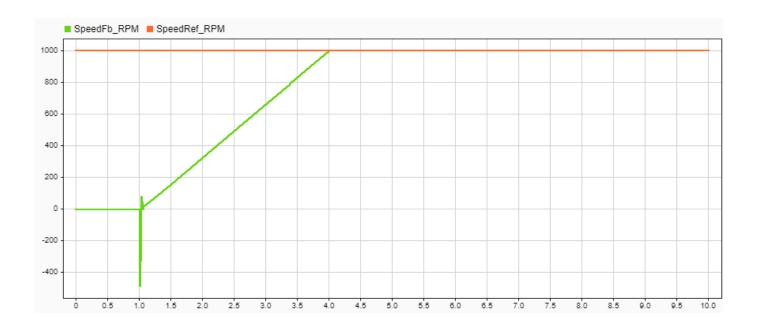


Generate Code for V/F Control Algorithm

This section explains how to use the Simulink model SimVbyF.slx to generate code for the V/F control algorithm.

Follow these steps to generate the code:


- Simulate the model SimVbyF.slx and observe the simulation results. For details, see the section Simulate Model Containing V/F Control Algorithm.
- 2 Click the Generate code for V/F control shortcut button to build the model SimVbyF.slx as well as generate and save code inside MotorControlDemo\genCode directory available in the csPlusProject folder.

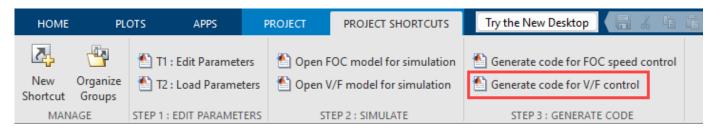


Deploy V/F Control Algorithm Code and Drivers to Hardware

Follow these steps to deploy the generated V/F control algorithm code along with hardware drivers to the evaluation system for BLDC motor (with RX66T CPU card) using the software CS+:


- 1 Complete the hardware connections between the evaluation system for BLDC motor, RX66T CPU card, and debugger board. Connect the evaluation system to your computer. For details, see User's Manual for Evaluation System for BLDC Motor.
- **2** Open the CS+ software.
- 3 Use the menu **File** > **Open** to navigate to the folder csPlusProject\MotorControlDemo, and select the file MotorControlDemo.mtpj.

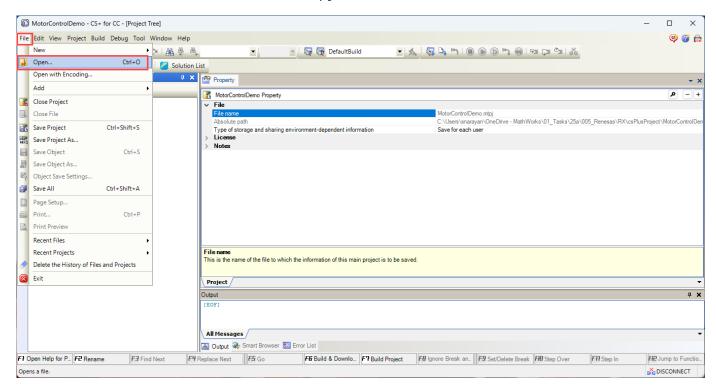

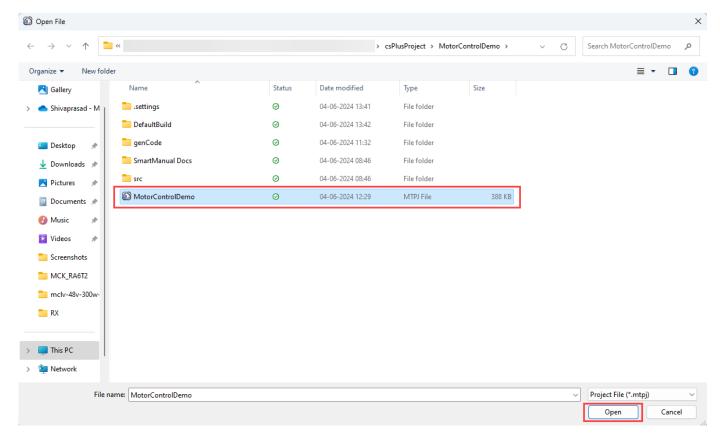


Click **Open** to open the Renesas hardware project for the evaluation system for BLDC motor (with RX66T CPU card) in the **Project Tree** panel of the CS+ software interface.

4 You can double-click the option **Smart Configurator (Design Tool)** to view the driver package configuration for the evaluation system for BLDC motor (with RX66T CPU card) as shown in the following figure.

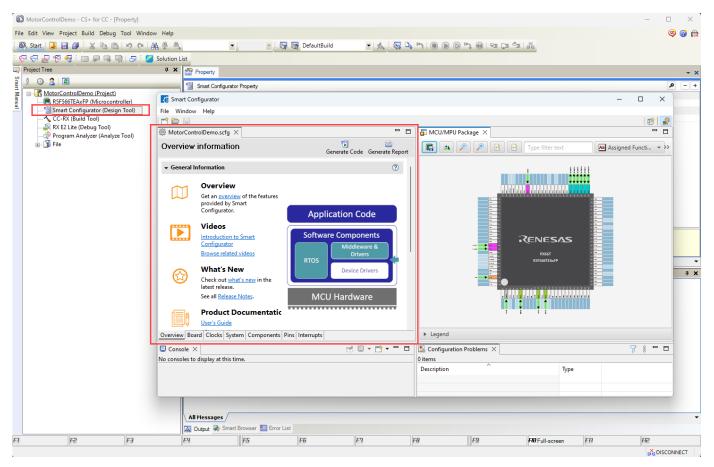


5 In the **Project Tree** panel, expand the folder File to open its contents.

Navigate to the folder Smart Configurator/Config_MTU3_MTU4 and double-click the file Config MTU3 MTU4 user.c to open it in the editor.

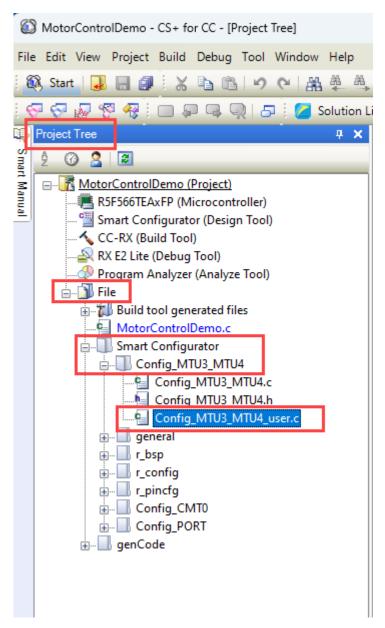


6 Set the macro CONTROLALGORITHM to OPENLOOPCONTROL as shown in the following figure.

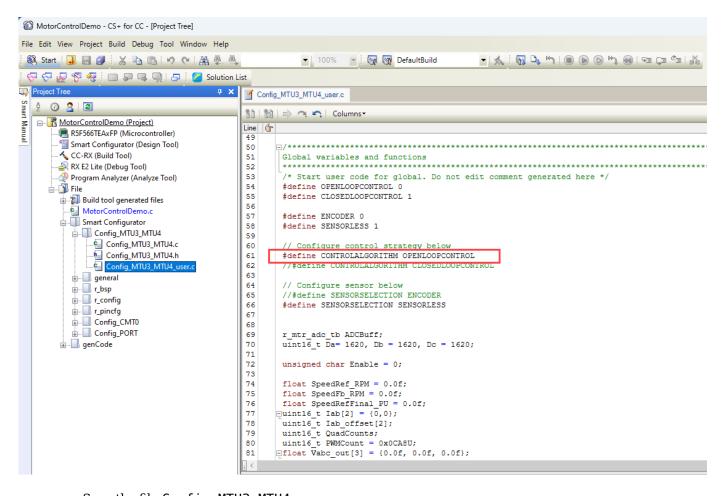


Save the file Config_MTU3_MTU4_user.c.


In the CS+ software interface, click **Build > Rebuild Project** to build the object code for the entire Renesas hardware project containing V/F control algorithm and hardware drivers.

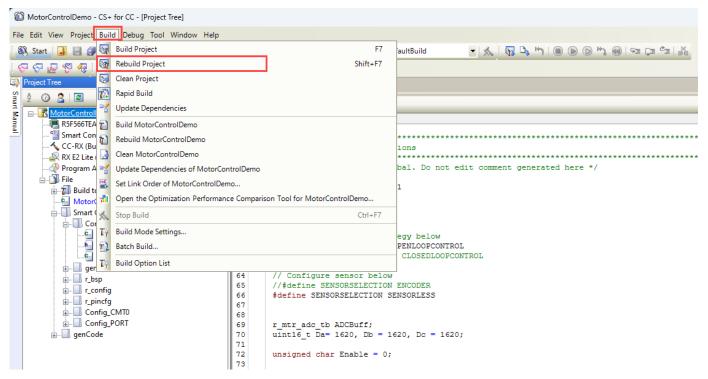

8 In the CS+ software interface, click **Debug > Rebuild & Download** to deploy the object code for the V/F control algorithm and hardware drivers to the evaluation system for BLDC motor (with RX66T CPU card).

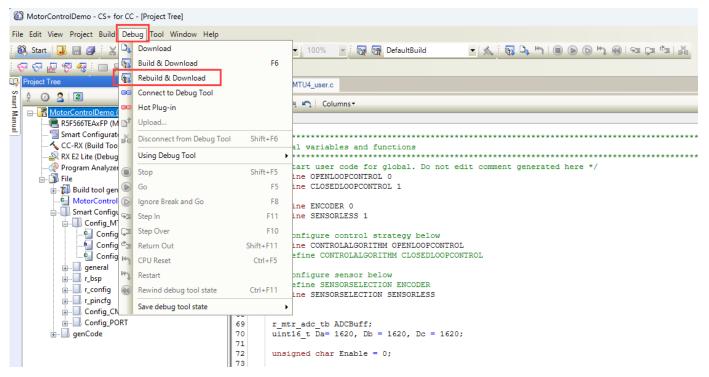


9 In the CS+ software interface, click **Debug > Go** to start running the deployed code.

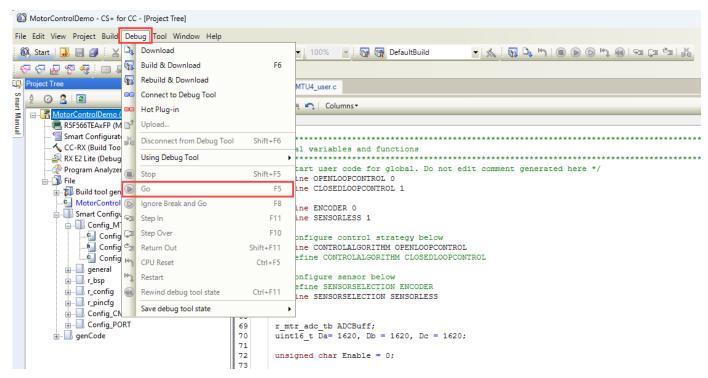

10 On the inverter board, turn the toggle switch to ON position to start running the motor.



During code execution on hardware, you can use the following pot (or dial) on the inverter board to change the reference speed for the V/F control algorithm.

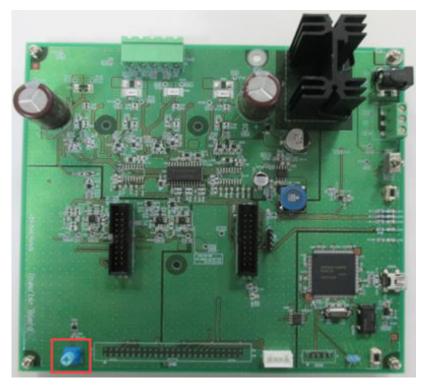

12 To stop running the motor turn the toggle switch on the inverter board to OFF position.

Note

- You can safely disconnect the evaluation system for BLDC motor (with RX66T CPU card) from the computer after completing step 9.
- After you disconnect the evaluation system from the computer, the deployed code stays on the
 evaluation system and resumes execution even when you disconnect and reconnect the hardware
 power supply.


Field-Oriented Control (FOC) of PMSM Using Renesas Hardware

- "Open MATLAB Project" on page 3-2
- "Update Motor and Inverter Parameters" on page 3-3
- "Simulate Model Containing FOC Algorithm" on page 3-6
- "Generate Code for FOC Algorithm" on page 3-8
- "Deploy FOC Algorithm Code and Drivers to Hardware" on page 3-9


Open MATLAB Project

Follow these steps to open the MATLAB project associated with this example:

- 1 Unzip the RX66T.zip folder that you downloaded from the GitHub repository.
- 2 Open MATLAB and navigate to the folder you unzipped in step 1.

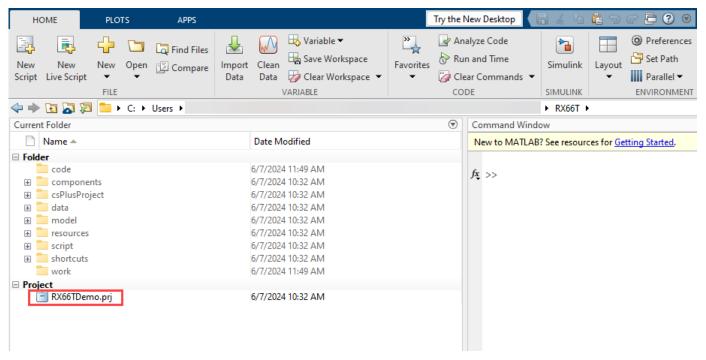


3 Double-click the file RX66TDemo.prj to open the following MATLAB project window.

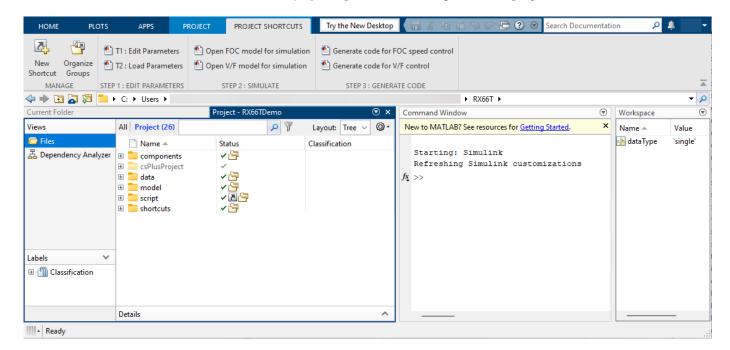

Update Motor and Inverter Parameters

The prerequisite to simulating or deploying the Simulink model containing FOC algorithm is to edit the motor and inverter parameters and load them to MATLAB base workspace. Follow these steps to update and load the parameters:

1 In the **Project Shortcuts** tab of the MATLAB project window, click the **T1: Edit Parameters** shortcut button to open the model initialization script EnterParameters.m.

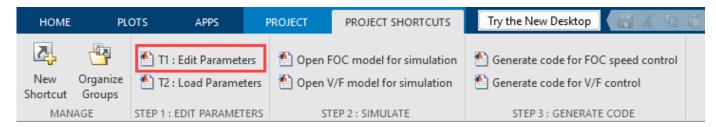



The Simulink model uses this script to obtain the motor, inverter, and other parameter values, which it uses to compute the derived parameters.

- 2 Update the following sections of the model initialization script EnterParameters.m:
 - Control Loop Frequencies
 - Inverter Parameters
 - Motor Parameters

```
EnterParameters.m × +
1
         % Copyright 2024 The MathWorks, Inc.
 3
         %% Control loop frequencies
                                             % Hz
 4
         fCurrentControl
                               = 20e3:
 5
         fSpeedControl
                                 = fCurrentControl/10;
                                                           % Hz
 6
         target.PWM_frequency
                                             % Hz
                                                            % The frequency configuration must be done in driver code too
                                = 20e3;
 8
         %% Inverter Parameters
 9
10
         inverter.V dc
                                = 24;
                                             % V
11
         inverter.ISenseMax
                                = 12.5;
                                             % A
                                                            % Maximum current sensed by inverter
                                                            % Rds ON + Rshunt/3
         inverter.R board
                              = 0.0033;
                                            % ohm
12
13
         inverter.ISenseGainFactor = -1;
14
15
         %% Motor Parameters
16
                                 = 2;
                                             %
                                                             % Pole pairs
         pmsm.p
                                             % A
17
         pmsm.I_rated
                                = 0.42;
18
         pmsm.N rated
                                 = 3500;
                                             % RPM
19
         pmsm.T_rated
                                 = 0.1;
                                             % Nm
                                = 1000:
                                             %
                                                             % Quadrature encoder slits
20
         pmsm.QEPSlits
21
         pmsm.Rs
                                 = 8.5;
                                             % ohm
22
         pmsm.Ld
                                 = 0.0045;
                                            % н
23
         pmsm.Lq
                                 = 0.0045:
                                             % н
24
         pmsm.Ke
                                 = 7.83;
                                             % Vpk_LL/kRPM
                                            % Kg-m2
25
         pmsm.J
                                 = 2.8e-6;
26
         pmsm.B
                                 = 8e-5;
                                             % Kg-m2/s
27
         pmsm.V_boost
                                 = 0.4;
                                             % PU volt
28
29
         %% Sensor selection
                                             % 'Encoder' , 'EEMF'
30
         sensor = 'EEMF';
31
32
         %% Derived Parameters
33
         T_pwm = 1/target.PWM_frequency;
34
         Ts = 1/fCurrentControl;
35
         Ts_speed = 1/fSpeedControl;
         Is_motor = Ts/2;
36
37
38
         Ts_SerialOut = 0.1;
                                                            % Required only for UART
39
40
         pmsm.FluxPM = (pmsm.Ke)/(sqrt(3)*2*pi*1000*pmsm.p/60);
41
         pmsm.N_base = mcb_getBaseSpeed(pmsm,inverter);
42
         PU System
                      = mcb SetPUSystem(pmsm,inverter);
43
                       = mcb_SetControllerParameters(pmsm,inverter,PU_System,T_pwm,Ts,Ts_speed);
44
45
         % Create copies for EEMF block as the parameters are not tunable
```

- 3 Click **Save** to save the file EnterParameters.m.
- 4 Switch to the MATLAB project window and navigate to the **Project Shortcuts** tab.
- 5 Click the **T2: Load Parameters** shortcut button to:
 - Compute derived parameters using the data available in the model initialization script.
 - Update all parameters to the Simulink data dictionary motorControlData.sldd.
 - Load necessary parameters from Simulink data dictionary to the MATLAB base workspace.

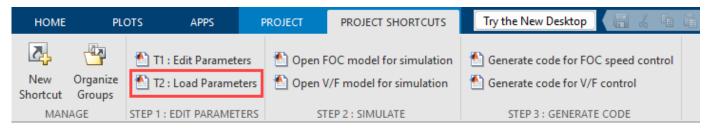

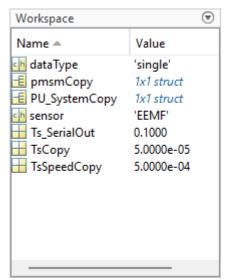


Note The shortcut **T2: Load Parameters** loads only the necessary parameters to the base workspace. The Simulink model reads the other parameters directly from the Simulink data dictionary.


Simulate Model Containing FOC Algorithm

This example supports simulation. Follow these steps to simulate the Simulink model containing the FOC speed control algorithm.


- **1** Ensure that you edit the motor and inverter parameters and load them to the MATLAB base workspace. For details, see the section Update Motor and Inverter Parameters.
- In the **Project Shortcuts** tab of the MATLAB project window, click the **Open FOC model for simulation** shortcut button to open the Simulink model SimFOCSpeedControl.slx containing the FOC speed control algorithm.

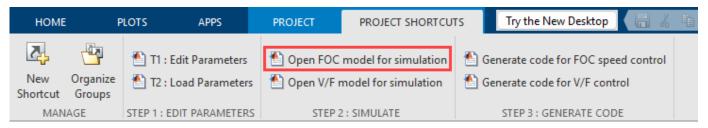

3 Click **Run** on the **Simulation** tab to simulate the model.

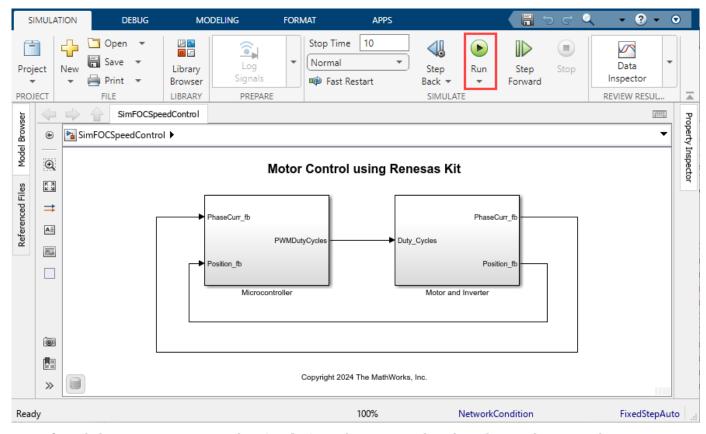

4 Click **Data Inspector** on the **Simulation** tab to view and analyze the simulation results.

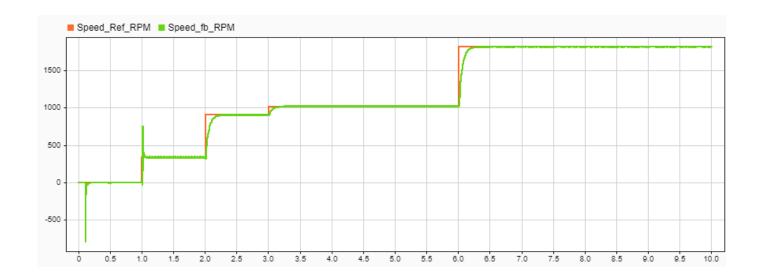


Generate Code for FOC Algorithm

This section explains how to use the Simulink model SimFOCSpeedControl.slx to generate code for the FOC speed control algorithm.

Follow these steps to generate the code:


- 1 Simulate the model SimFOCSpeedControl.slx and observe the simulation results. For details, see the section Simulate Model Containing FOC Algorithm.
- Click the Generate code for FOC speed control shortcut button to build the model SimFOCSpeedControl.slx as well as generate and save code inside MotorControlDemo \genCode directory available in the csPlusProject folder.

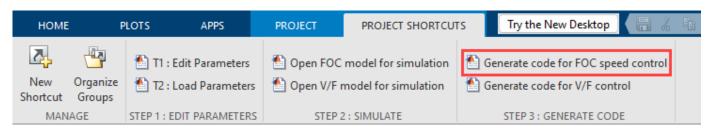


Deploy FOC Algorithm Code and Drivers to Hardware

Follow these steps to deploy the generated FOC speed control algorithm code along with hardware drivers to the evaluation system for BLDC motor (with RX66T CPU card) using the software CS+:


- 1 Complete the hardware connections between the evaluation system for BLDC motor, RX66T CPU card, and debugger board. Connect the evaluation system to your computer. For details, see User's Manual for Evaluation System for BLDC Motor.
- **2** Open the CS+ software.
- 3 Use the menu **File** > **Open** to navigate to the folder csPlusProject\MotorControlDemo, and select the file MotorControlDemo.mtpj.

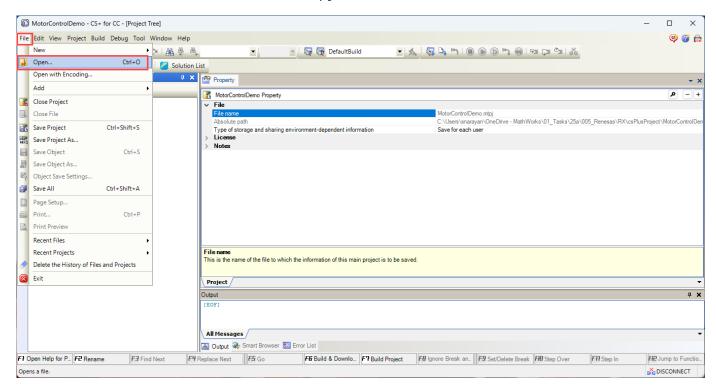

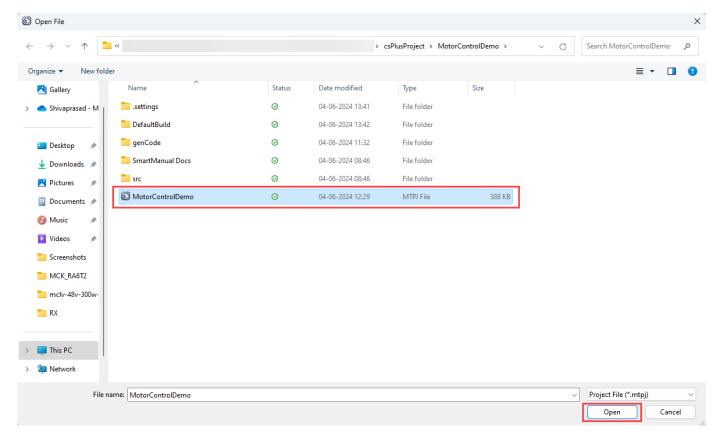


Click **Open** to open the Renesas hardware project for the evaluation system for BLDC motor (with RX66T CPU card) in the **Project Tree** panel of the CS+ software interface.

4 You can double-click the option **Smart Configurator (Design Tool)** to view the driver package configuration for the evaluation system for BLDC motor (with RX66T CPU card) as shown in the following figure.

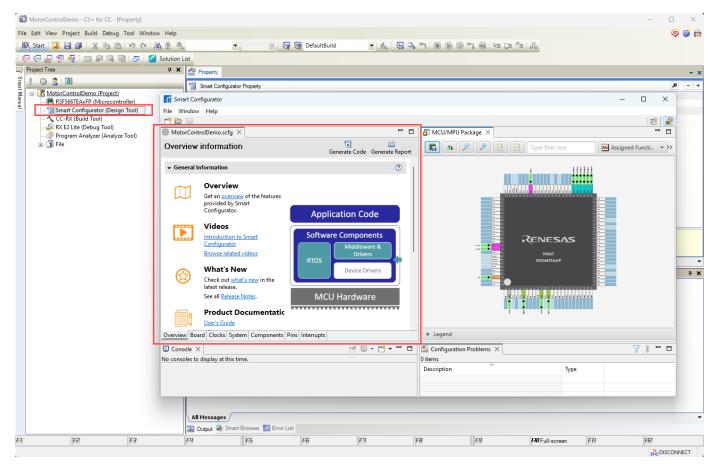


5 In the **Project Tree** panel, expand the folder File to open its contents.

Navigate to the folder Smart Configurator/Config_MTU3_MTU4 and double-click the file Config MTU3 MTU4 user.c to open it in the editor.

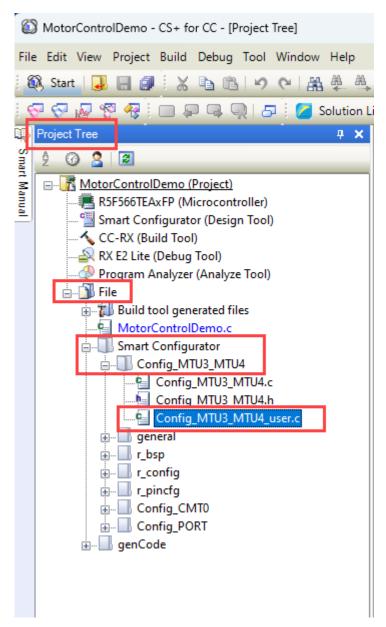


6 Set the macro CONTROLALGORITHM to CLOSEDLOOPCONTROL as shown in the following figure.

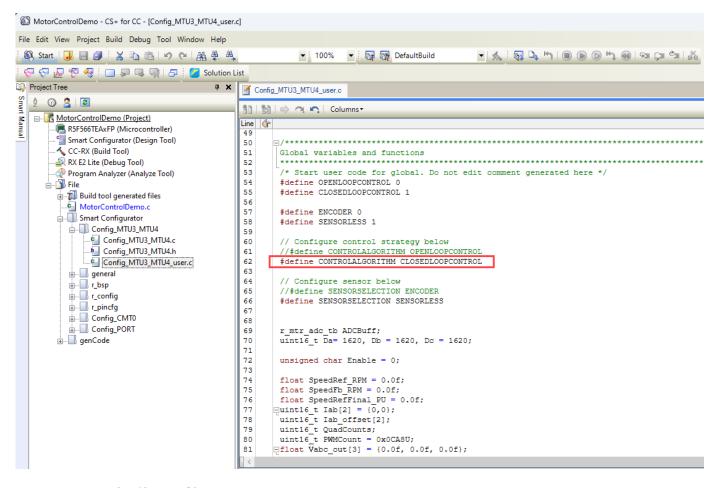


Save the file Config MTU3 MTU4 user.c.


7 In the CS+ software interface, click **Build > Rebuild Project** to build the object code for the entire Renesas hardware project containing FOC algorithm and hardware drivers.

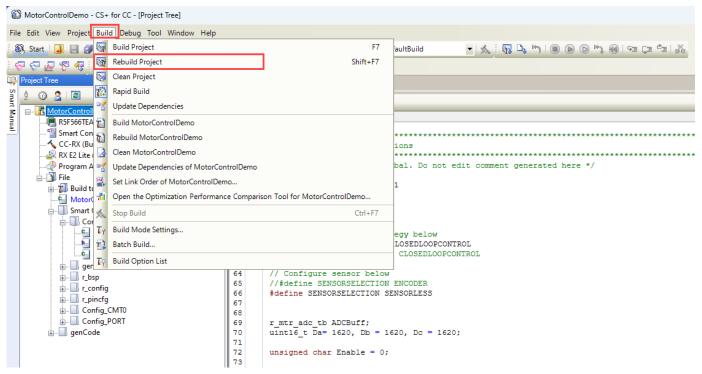

In the CS+ software interface, click **Debug > Rebuild & Download** to deploy the object code for the FOC algorithm and hardware drivers to the evaluation system for BLDC motor (with RX66T CPU card).

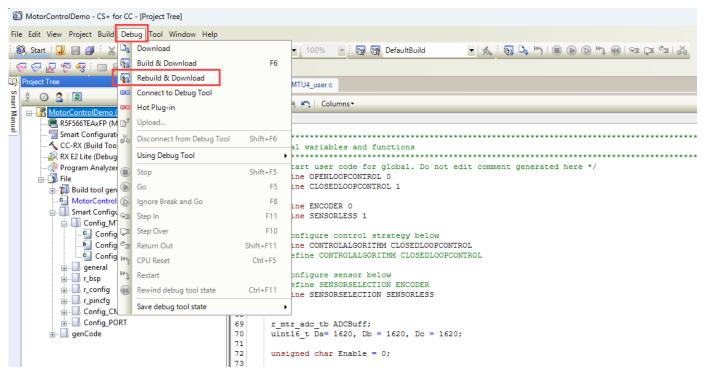


9 In the CS+ software interface, click **Debug > Go** to start running the deployed code.

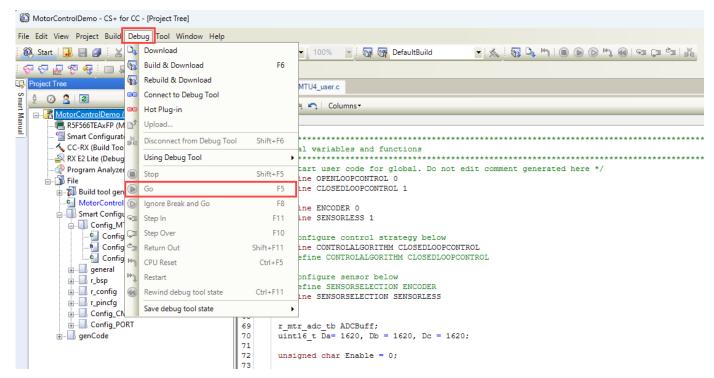

10 On the inverter board, turn the toggle switch to ON position to start running the motor.



During code execution on hardware, you can use the following pot (or dial) on the inverter board to change the reference speed for the FOC algorithm.

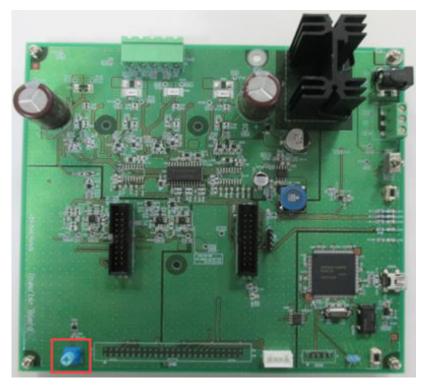

12 To stop running the motor turn the toggle switch on the inverter board to OFF position.

Note

- You can safely disconnect the evaluation system for BLDC motor (with RX66T CPU card) from the computer after completing step 9.
- After you disconnect the evaluation system from the computer, the deployed code stays on the
 evaluation system and resumes execution even when you disconnect and reconnect the hardware
 power supply.