# Penn State Integrated Hydrologic Model(PIHM)

**Technical Documentation** 

Lele Shu

2019-05-04

# **Contents**

1	Overview	5
	1.1 Why PIHM?	5
	1.2 History of PIHM system	6
	1.3 Steps of PIHM modeling	7
2	Workflow of PIHM System	11
3	Install PIHM and PIHMgisR	13
	3.1 SUNDIALS/CVODE	13
	3.2 PIHM	17
	3.3 PIHMgisR	19
4	Input and output	21
	4.1 Spatial data	23
	4.2 Model configuration files	27
	4.3 Time-series data	32
5	Applications	37
	5.1 Example 1: Vauclin Experiment	37
	5.2 Example 2: Shall Hill CZO	37
	5.3 Example 3: Conestoga Watershed, Pennsylvanis	37
6	Automatic hydrologic modeling with PIHM system	39
7	Course code and program design	41

## 1 Overview

This is the technical documentation of the PIHM system (PIHM and PIHMgisR).

**PIHM** The Penn State Integrated Hydrologic Model (PIHM) is a multiprocess, multiscale hydrologic model where the major hydrological processes are fully coupled using the semi-discrete Finite Volume Method.

**PIHMGIS** The model itself is "tightly-coupled" with PIHMgis, an open-source Geographical Information System designed for PIHM. The PIHMgis provides access to the digital data sets (terrain, forcing and parameters) and tools necessary to drive the model, as well as a collection of GIS-based pre- and post-processing tools.

Collectively the system is referred to as the **Penn State Integrated Hydrologic Modeling System (PIHMS)**.

The PIHM is an open source software, freely available for download at PIHM website or Github Page along with installation and user guides.

#### 1.1 Why PIHM?

It is our intention to begin a debate on the role of *Community Models* in the hydrologic sciences. Our research is a response to recent trends in US funding for *Observatory Science* that have emerged at NSF over the last few years, namely, the NSF-funded **CUAHSI** program (Consortium of Universities for Advancing Hydrologic Sciences).

PIHM represents our strategy for the synthesis of *multi-state*, *multiscale* distributed hydrologic models using the integral representation of the underlying physical process equations and state variables.

Our interest is in devising a concise representation of watershed and/or river basin hydrodynamics, which allows interactions among major physical processes operating simultaneously, but with the flexibility to add or eliminate states/processes/constitutive relations depending on the objective of the numerical experiment or purpose of the scientific or operational application.

To satisfy the objectives, the PIHM

is distributed hydrologic model, based on the semi-discrete Finite Volume
 Method (FVM) in which domain discretization is an unstructured triangular

irregular network (e.g. Delaunay triangles) generated with constraints (geometric, and parametric). A local prismatic control volume is formed by the vertical projection of the Delaunay triangles forming each layer of the model. Given a set of constraints (e.g. river network support, watershed boundary, altitude zones, ecological regions, hydraulic properties, climate zones, etc), an "optimal" mesh is generated. River volume elements are also prismatic, with trapezoidal or rectangular cross-section, and are generated along or cross edges of Delaunay triangles. The local control volume contains all equations to be solved and is referred to as the model kernel.

- is a physically-based model, in which all equations used are describing the physics of the hydrological processes which control the catchment. The physical model is able to predict the water in the ungage water system, to estimate the sediment, pullutants, and vegetation, etc, such that it is practical to be coupled with biochemistry, geomorphology, limnology, and other water-related research. The global ODE system is assembled by combining all local ODE systems throughout the domain and then solved by a state-of-the-art parallel ODE solver known as CVODE developed at the Lawrence Livermore National Laboratory.
- is a fully-coupled hydrologic model, where the state and flux variables in the hydrologic system are solved within the same time step and conserve the mass. The fluxes are infiltration, overland flow, groundwater recharge, lateral groundwater flow, exchange of river and soil/groundwater and river discharge.
- is of an adaptable temporal and spatial resolution. The spatial resolution of the model varies from meters to kilometers based requirement of modeling and computing resources. The internal time step of the iteration step is adjustable; it is able to export the status of the catchment in less 1 second to days. Also, the time interval for exporting results is configured flexibly. The flexible spatial and temporal resolution is rather valuable for community model coupling.
- is an open source model, anyone can access the source code, use and submit their improvement.
- is a long-term yield and single-event flood model.

An important partnership and motivation for this work was the Project Leaders participation in two community-science research activities over the last few years: The University of Arizona-led Science and Technology Center (SAHRA: Sustainability of Water Resources in Semi-Arid Regions), and the Chesapeake Community Modeling Project (CCMP). Each of these research programs has been essential in supporting the concept of **Community Models** for environmental prediction and helping to make it happen.

## 1.2 History of PIHM system

• 2005 PIHM v1.0

Dr. Yizhong Qu (Qu and Duffy, 2007) developed and verified the first version of PIHM

in 2001-2005 during his Ph.D. in Pennsylvania State University, following the blueprint of Freeze and Harlan (1969). This version of PIHM is the soul of the PIHM model.

#### • 2009 PIHMgis

Dr. Gopal Bhartt (Bhatt, 2012) developed the PIHMgis with support of C++, Qt GUI library, TRIANGLE library, and QGIS developing kit. The development of PIHMgis makes the learning curve of PIHM moderate and benefits the developing, modeling and coupling.

#### • 2015 MM-PIHM

Dr. Yuninh Shi led and developed the MM-PIHM (Multi-Module PIHM), which embedded all modules from PIHM family, such as RT-PIHM, LE-PIHM, flux-PIHM, BGC-PIHM, etc. together. The sophisticated design and coupling of the MM-PIHM is the summit of the PIHM as a *Community Model* that combined all water-related modules together.

#### • 2019 PIHM++

Based on the accumulated contribution of PIHM modeling and coupling with related researches, it is necessary to solve the known bugs and limitations, improve the performance of the model with parallel methods, and adopt new updates from SUNDIALS solver and programming strategy.

Several publications that may helps:

- (Qu, 2004)
- (Qu and Duffy, 2007)
- (Li, 2008)
- (Kumar et al., 2004)
- (Kumar et al., 2009)
- (Yu et al., 2015)
- (Yu et al., 2014)
- (Li and Duffy, 2011)
- (Shi et al., 2015a)
- (Shi et al., 2015b)
- (Bhatt et al., 2014)

## 1.3 Steps of PIHM modeling

#### 1.3.1 Essential Terrestrial Variables?

- Atmospheric forcing (precipitation, snow cover, wind, relative humidity, temperature, net radiation, albedo, photosynthetic atmospheric radiation, leaf area index)
- Digital elevation model (DEM)

- River/stream discharge
- Soil (class, hydrologic properties)
- Groundwater (levels, extent, hydro-geologic properties)
- Lake/Reservoir (levels, extent)
- Land cover and land use (biomass, human infrastructure, demography, ecosystem disturbance)
- Water use

Most data reside on federal servers ....many petabytes

#### 1.3.2 A-Priori Data Sources

Feature/Tir	me-	
Series	Property	Source
Soil	Porosity; Sand,	CONUS, SSURGO and STATSGO
	Silt, Clay	
	Fractions; Bulk	
	Density	
Geology	Bed Rock	http:
	Depth;	//www.dcnr.state.pa.us/topogeo/,
	Horizontal and	$\rm http://www.lias.psu.edu/emsl/$
	Vertical	$\mathrm{guides/X.html}$
	Hydraulic	
	Conductivity	
Land	LAI	UMC, LDASmapveg;
Cover		
Land	Manning's	Hernandez et. al., 2000
Cover	Roughness;	
River	Manning's	Dingman $(2002)$
	Roughness;	
River	Coefficient of	ModHms Manual (Panday and
	Discharge	Huyakorn, 2004)
River	Shape and	Derived from regression using depth,
	Dimensions;	width, and discharge data from
		USGS data
River	Topology:	Derived using PIHMgis (Bhatt et.
	Nodes,	al., 2008)
	Neighboring	
	Elements;	
Forcing	Prec, Temp.	National Land Data Assimilation
	RH, Wind, Rad.	System: NLDAS-2
Topography	DEM	http://seamless.usgs.gov/
		2 , ,

Feature/Time-					
Series	Property	Source			
Streamflow		http:			
		$//\mathrm{nwis.waterdata.usgs.gov/nwis/sw}$			
Groundwater		http:			
		//nwis.waterdata.usgs.gov/nwis/gw			

# 2 Workflow of PIHM System

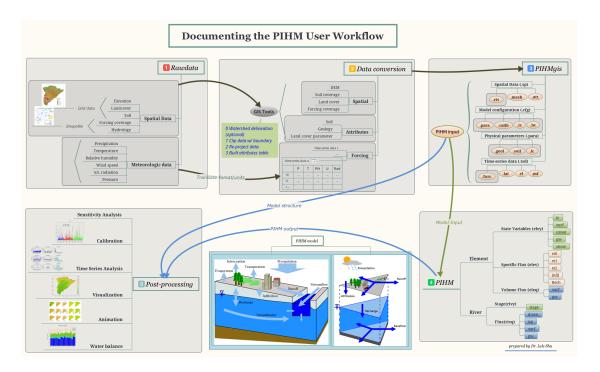


Figure 2.1: The workflow of modeling with PIHM System

- 1. Prepare raw Essential Terrestrial Variables (ETV)
- 2. Convert and crop raw data with the research area boundary.
- 3. Build the PIHM modeling domain with PIHMgis or PIHMgisR (Recommended for PIHM++)
- 4. Run PIHM on desktop or cluster.
- 5. Analysis the PIHM results with PIHMgisR or your hydrologic analysis tools.

# 3 Install PIHM and PIHMgisR

### 3.1 SUNDIALS/CVODE

The PIHM model requires the support of SUNDIALS or CVODE library. **SUNDIALS** is a SUite of Nonlinear and DIfferential/ALgebraic equation Solvers, consists of six solvers. **CVODE** is a solver for stiff and nonstiff ordinary differential equation (ODE) systems (initial value problem) given in explicit form y' = f(t, y). The methods used in CVODE are variable-order, variable-step multistep methods. You can install the entire SUNDIALS suite or CVODE only.

Since the SUNDIALS/CVODE keeps updating periodically and significantly, the function names and structure are changed accordingly, we suggest to use the specific version of the solver, rather than the latest solver.

PIHM Version	SUNDIALS/CVODE version
PIHM v1.x	v2.2 ~ v2.4
PIHM v2.x	$v2.2 \sim v2.4$
PIHM v3.x	$v2.2 \sim v2.4$
MM-PIHM v1.x	v2.4
PIHM++ v4.x	v3.x

 $SUNDIALS/CVODE \ is available \ in \ LLNL: \ https://computation.llnl.gov/projects/sundials/sundials-software$ 

The installation of CVODE v3.x:

- 1. Go to your Command Line and enter your workspace and unzip your CVODE source code here.
- 2. make directories for CVODE, including builddir, instdir and srcdir

```
mkdir builddir
mkdir instdir
mkdir srcdir
cd builddir/
```

3. Try ccmake. Install cmake if you don't have one.

#### 3 Install PIHM and PIHMgisR

ccmake

4. Run ccmake to configure your compile environment.

ccmake /Users/leleshu/Dropbox/PIHM/sundials/cvode-4.1.0

```
EMPTY CACHE:

Press [enter] to edit option Press [d] to delete an entry
Press [o] to configure
Press [n] to configure
Press [n] to relip Press [q] to quit without generating
Press [t] to toggle advanced mode (Currently Off)
```

This is an empty configure. Press  ${\tt c}$  to start the configuration.

```
• •
                                                                                                                                    builddir — ccmake ~/Dropbox/PIHM/sundials/cvode-4.1.0 — 97×41
                                                                                 -\text{/Dropbox/PIHM/sundials/InstallSundials/builddir/builddir} -- ccmake \text{--/Dropbox/PIHM/sundials/cvode-4.1.0}
                                                                                                                                                                                                                                                                           Page 1 of 2
 BLAS_ENABLE
BUILD_CVODE
BUILD_SHARED_LIBS
BUILD_STATIC_LIBS
BUILD_TESTING
CMAKE_BUILD_TYPE
CMAKE_C_COMPILER
CMAKE_C_FLAGS
CMAKE_INSTALL_LIBDIR
CMAKE_INSTALL_PREFIX
CMAKE_OSX_ARCHITECTURES
CMAKE_OSX_DEPLOYMENT_TARGET
CMAKE_OSX_SYSROOT
CUDA_ENABLE
EXAMPLES_ENABLE_C
EXAMPLES_ENABLE_C
EXAMPLES_ENABLE_C
EXAMPLES_INSTALL
EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLE
                                                                                                                                                                          * ON
* ON
* ON
* ON
                                                                                                                                                                            *
*/Applications/Xcode.app/Contents/Developer/Toolchains/Xco
                                                                                                                                                                          *lib
*/usr/local/sundials -
                                                                                                                                                                             *<mark>OFF</mark>
*ON
                                                                                                                                                                            *UN
*OFF
*ON
*/usr/local/sundials/examples
    F77_INTERFACE_ENABLE
HYPRE_ENABLE
KLU_ENABLE
      LAPACK_ENABLE
   MPI_ENABLE

OPENMP_DEVICE_ENABLE

OPENMP_ENABLE

PETSC_ENABLE

PTHREAD_ENABLE

RAJA_ENABLE
                                                                                                                                                                               OFF
                                                                                                                                                                                OFF
   SUNDIALS_INDEX_SIZE
SUNDIALS_PRECISION
SUPERLUMT_ENABLE
Trilinos_ENABLE
                                                                                                                                                                              *double
*OFF
     USE_GENERIC_MATH
                                                                                                                                                                             *ON
 BLAS_ENABLE: Enable BLAS support
 Press [enter] to edit option Press [d] to delete an entry
Press [c] to configure
Press [n] for help Press [q] to quit without ge
                                                                                                                                                                                                                                                                                                                                                                                                                 CMake Version 3.11.1
Press [n] Tor neip Press [q] to quit without generating Press [t] to toggle advanced mode (Currently Off)
```

The default configuration. Make sure the value for three lines:

```
BUILD_CVODE = ON
CMAKE_INSTALL_PREFIX = /usr/local/sundials
EXAMPLES_INSTALL_PATH = /usr/local/sundials/examples
```

After the modification of values, press c to confirm configuration.

```
builddir — ccmake ~/Dropbox/PIHM/sundials/cvode-4.1.0 — 97×41
                                                                                    / Dropbox/PIHM/sundials/InstallSundials/builddir/builddir -- ccmake ~/ Dropbox/PIHM/sundials/cvode-4.1.0
                                                                                                                                                                                                                                                                                         Page 1 of 2
 BLAS_ENABLE
BUILD_CVODE
BUILD_SHARED_LIBS
BUILD_STATIC_LIBS
BUILD_TESTING
CMAKE_BUILD_TYPE
CMAKE_C_COMPILER
CMAKE_C_FLAGS
CMAKE_INSTALL_LIBDIR
CMAKE_INSTALL_PREFIX
CMAKE_OSX_ARCHITECTURES
CMAKE_OSX_DEPLOYMENT_TARGET
CMAKE_OSX_SYSROOT
CUDA_ENABLE
EXAMPLES_ENABLE_C
EXAMPLES_ENABLE_C
EXAMPLES_ENABLE_C
EXAMPLES_INSTALL
EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPLES_EXAMPL
    BLAS_ENABLE
                                                                                                                                                                                      /Applications/Xcode.app/Contents/Developer/Toolchains/Xco
                                                                                                                                                                                     lib
                                                                                                                                                                                      /usr/local/sundials
                                                                                                                                                                                      /usr/local/sundials/examples
    F77_INTERFACE_ENABLE
HYPRE_ENABLE
KLU_ENABLE
     LAPACK_ENABLE
   LAPACK_ENABLE
MPI_ENABLE
OPENMP_DEVICE_ENABLE
OPENMP_ENABLE
PETSC_ENABLE
PTHREAD_ENABLE
RAJA_ENABLE
    SUNDIALS_INDEX_SIZE
SUNDIALS_PRECISION
SUPERLUMT_ENABLE
Trilinos_ENABLE
                                                                                                                                                                                     double
OFF
    USE_GENERIC_MATH
 BLAS_ENABLE: Enable BLAS support
Press [enter] to edit option Press [d] to delete an entry
Press [c] to configure Press [g] to generate and exit
Press [h] for help Press [q] to quit without generating
                                                                                                                                                                                                                                                                                                                                                                                                                           CMake Version 3.11.
 Press [t] to toggle advanced mode (Currently Off)
```

The ccmake configures the environment automatically. When the configuration is ready, press g to generate and exit.

1. Then you run commands below:

```
make
make install
```

- 2. Optional library copy Sometimes, the code might not find the right library support in your system, try to copy the library in sundials folder to your system library folder.
- cp /usr/local/sundials/lib/\* /usr/local/lib/

#### **3.2 PIHM**

Configuration in *Makefile*:

- 1. Path of SUNDIALS\_DIR. [CRITICAL]
- 2. Path of OpenMP if the parallel is preferred.
- 3. Path of SRC DIR, default is SRC\_DIR = .
- 4. Path of BUILT\_DIR, default is BUILT\_DIR = .

After updating the SUNDIALS path in the *Makefile*, user can compile the PIHM with:

```
make clean
make pihm
```

There are more options to compile the PIHM code:

- make all make both pihm and pihm\_omp
- make pihm make pihm executable
- make pihm\_omp make pihm\_omp with OpenMP support
- make calib\_mpi make calib\_mpi with MPI support
- make calib\_omp make calib\_omp with OpenMP support

#### 3.2.1 OpenMP

If parallel-computing is prefered, please install OpenMP. For mac:

```
brew install llvm clang
brew install libomp
compile flags for OpenMP:
   -Xpreprocessor -fopenmp -lomp
Library/Include paths:
   -L/usr/local/opt/libomp/lib
   -I/usr/local/opt/libomp/include
```

#### 3.2.2 Run pihm executables.

After the successful installation and compile, you can run PIHM models using

```
./pihm <projectname>
```

```
########
                         ##
                                  ##
                                       ##
                                               ##
                                                                  #
     ##
                         ##
                                  ##
                                       ###
     ##
                         ##
                                  ##
                                                               ######
                                       ####
                                            ####
                         #########
     ########
                                       ## ###
                                       ##
                                                    #######
     ##
                         ##
                                  ##
                                                ##
                         ##
                                  ##
                                       ##
     ##
                   ##
                                                ##
     ##
                                  ##
                                       ##
                                               ##
                                                        # Verion 4.0
           The Penn State Integrated Hydrologic Model v4.0
openMP disabled.
Usage: ./pihm [-p projectfile] [-o output_folder] [-n Num_Threads] <project name>
     -o output folder. Default is output/projname.out

    -p projectfile, which include the path for each input and output path.
    -n Number of threads to run with OpenMP for pihm++ or calib_omp.
```

Command line pattern is:

./pihm [-p projectfile] [-o output\_folder] [-n Num\_Threads] ct name>

- project name> is the name of the project
- [-p projectfile]
- [-o output\_folder] is to write all model output variables in the specified output directory
- [-n Num\_Threads] is number of OpenMP threads, which works with pihm\_omp only.

When the pihm++ program starts to run, the screen should look like this:

```
########
                ####
                       ##
                                   ##
                                           ##
     ##
                       ##
                                   ###
     ##
                       ##
                       #########
     ########
                                   ##
                       ##
                                               #######
     ##
                       ##
                                   ##
                                           ##
     ##
                                           ##
                                                  # Verion 4.0
                ####
                       ##
                                   ##
          The Penn State Integrated Hydrologic Model v4.0
openMP disabled.
      Project name: sh
      Project input folder: input/sh
      Project output folder: output/sh.out
*
      Reading file: input/sh/sh.cfg.para
1
2
      Reading file: input/sh/sh.sp.riv
The downstream of RIV 3 is negtive
      Reading file: input/sh/sh.sp.rivchn
Reading file: input/sh/sh.sp.mesh
4
5
6
      Reading file: input/sh/sh.sp.att
      Reading file: input/sh/sh.para.soil
7
8
      Reading file: input/sh/sh.para.geol
      Reading file: input/sh/sh.para.lc
9
      Reading file: input/sh/sh.tsd.forc
      Reading file: input/sh/sh.tsd.lai
10
      Reading file: input/sh/sh.tsd.rl
11
      Reading file: input/sh/sh.tsd.mf
12
13
      Reading file: input/sh/sh.cfg.calib
Initializing data structure ...
```

#### 3.3 PIHMgisR

This PIHMgisR is an R package. What you need is to install the package as a source code package. For example:

```
install github('shulele/PIHMgisR')
```

That is all you need to deploy the PIHMgisR.

List of input files:

File	Category	Comments	Header	# of column
.mesh	$\operatorname{sp}$	Domain <b>element</b> (triangular mesh)	Yes	
.att	$\operatorname{sp}$	Attribute table of triangular <b>elements</b>	Yes	
.riv	$\operatorname{sp}$	Rivers	Yes	
.rivchn	$\operatorname{sp}$	Topologic relation b/w <b>River</b> and <b>Element</b>	Yes	
.calib	$\operatorname{cfg}$	Calibration on physical parameters	Yes	
.para	$\operatorname{cfg}$	Parameters of the model configurature	Yes	
.ic	$\operatorname{cfg}$	Intial conditions	Yes	
.geol	para	Physical parameters for <b>Geology</b> layers	Yes	
.soil	para	Physical parameters for <b>Soil</b> layers	Yes	
.1c	para	Physical parameters for Land cover layers	Yes	
. forc	$\operatorname{tsd}$	List of files to the Time-series forcing data	Yes	
.csv	$\operatorname{tsd}$	Time-series forcing data	Yes	
.lai	$\operatorname{tsd}$	Time-series LAI data	Yes	
.obs	$\operatorname{tsd}$	Time-series observational data for calibration purpose only	Yes	
$.\mathrm{mf}$	$\operatorname{tsd}$	Time-series Melt Factor data	Yes	
.rl	$\operatorname{tsd}$	Time-series Roughness Length data	Yes	
gis/domain	Shapefile	Shapefile of .mesh file	X	X
gis/river	Shapefile	Shapefile of .riv file	X	X
gis/seg	Shapefile	Shapefile of .rivchn file	X	X

The files in folder gis and fig are not involved in PIHM modeling, but they are very useful for your data pre- and post-processing.

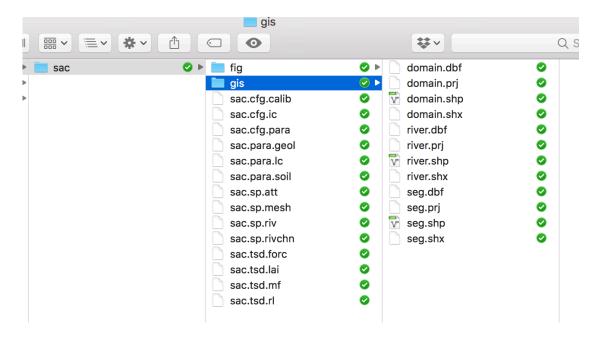


Figure 4.1: The screenshot of input files for PIHM++  $\,$ 

# 4.1 Spatial data

#### 4.1.1 .sp.mesh file

```
| Sac.sp.mesh |
```

There are two tables in the .mesh file, the one is a table of elements and the other is a table of nodes of elements.

• Block 1 (Element information)

#### • Pre-table

Value1	Value2
Number of rows ( $N_{element}$ )	Number of columns (8)

#### • Table

Colname	Meaning	Range	Unit	Comments
ID	Index of element $i$	$1 \sim N_{element}$	-	
Node1	Node 1 of element $i$	$1 \sim N_{node}$	-	
Node2	Node 2 of element $i$	$1 \sim N_{node}$	-	
Node3	Node 3 of element $i$	$1 \sim N_{node}$	-	
Nabr1	Index of Neighbor 1 of element $i$	$1 \sim N_{element}$	-	
Nabr2	Index of Neighbor 2 of element $i$	$1 \sim N_{element}$	-	
Nabr3	Index of Neighbor 3 of element $i$	$1 \sim N_{element}$	-	
Zmax	Surface elevation of element $i$	$-9999 \sim +\inf$	m	

## • Block 2 (node information)

• Pre-table:

Value1	Value2
Number of rows ( $N_{node}$ )	Number of columns (5)

#### • Table

Colname	Meaning	Range	Unit	Comments
ID	Index of node $i$	$1 \sim N_{element}$	-	
X	X coordinate of node $i$	$1 \sim N_{node}$	-	
Y	Y coordinate of node $i$	$1 \sim N_{node}$	-	
AqDepth	Thickness of aquifer $i$	$0 \sim +\inf$	m	
Elevation	Surface elevation of node $i$	$-9999 \sim +\inf$	m	

# 4.1.2 .sp.att file

• Pre-table

Value1	Value2		
$\overline{\text{Number of rows (}N_{element})}$	Number of columns (7)		

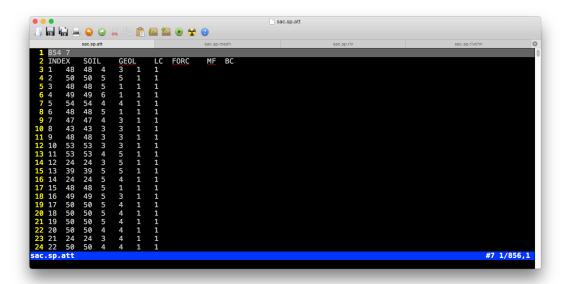


Figure 4.2: Example of .sp.att file

#### • Table

Colname	Meaning	Range	Unit	Comments
ID	Index of element $i$	$1 \sim N_{element}$	-	
SOIL	Index of soil type	$1 \sim N_{soil}$	-	
GEOL	Index of geology type	$1 \sim N_{geol}$	-	
LC	Index of land cover type	$1 \sim N_{lc}$	-	$N_{lc} = N_{lai}$
FORC	Index of forcing site	$1 \sim N_{forc}$	-	
MF	Index of melt factor	$1 \sim N_{mf}$	-	
BC	Index of boundary condition	$1 \sim N_{bc}$	-	

#### 4.1.3 .sp.riv file

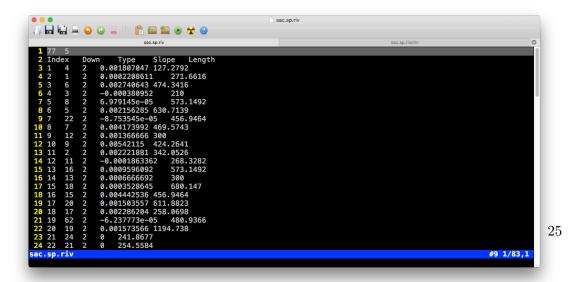


Figure 4.3: Example of .sp.riv file  $\,$ 

• Pre-table

Colname	Meaning	Range	Unit	Comments
ID	Index of river $i$	1 ~	-	
DOWN	Index of downstream	$N_{river}$ $1 \sim$	_	Negative vlaue indicates
	river	$N_{river}$		outlet
Type	Index of river	1 ~	-	
	parameters	$N_{rivertype}$		
Slope	Slope of river bed	-10 ~ 10	m/m	Height/Length
Length	Length of the river $i$	$0 \sim \inf$	m	

# 4.1.4 .sp.rivchn file

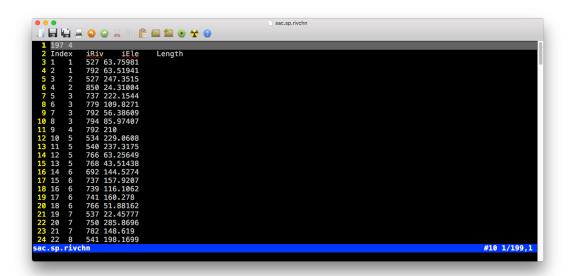


Figure 4.4: Example of .sp.rivchn file

#### • Pre-table

Value1	Value2
Number of rows ( $N_{segment}$ )	Number of columns (4)

Colname	Meaning	Range	Unit	Comments
ID	Index of segments $i$	$1 \sim N_{segment}$	-	
iRiv	Index of river	$1 \sim N_{river}$	-	

Colname	Meaning	Range	Unit	Comments
iEle	Index of element	$1 \sim N_{element}$	-	
Length	Length of the segments $i$	$0 \sim \inf$	m	

# 4.2 Model configuration files

# 4.2.1 .cfg.para file

Colname	Meaning	Range	Unit	Comments
VERBOSE	Verbose mode	-	-	
DEBUG	Debug mode	-	-	
INIT_MODE	Initial condition	1,2,3	-	1=Dry condition,
	$\operatorname{mode}$			2=Relief condition,
				3=Warm start
ASCII_OUTPU	JT ASCII ouput	1/0	-	
Binary_OUTP	ē <u>1</u>	1/0	-	
NUM_OPENM	IP Number of threads	0 ~	-	
	for OpenMP	$N_{threads}$		
ABSTOL	Abosolute tolerance	1e-6 $\sim$	-	
	for CVODE solver	0.1		
RELTOL	Relative tolerance	1e-6 $\sim$	-	
	for CVODE solver	0.1		
INIT_SOLVER	L_SANGAR time step for	?	-	
	CVODE solver	_		
MAX_SOLVER	R_MSENERum time step	?	-	
	for CVODE solver			
LSM_STEP	Time step of	$1 \sim 360$	min	
	Evapotranspiration			
START	Start Time	-	day	
END	End Time	-	day	
	CTORep size factor	-	-	Temporary value
<del></del>	PSIZModel step size	-	min	
$dt\_ye\_snow$	Time step of output	$0 \sim \inf$	m	
	snow storage			
$dt\_ye\_surf$	Time step of output	$0 \sim \inf$	m	
	surface storage			
$dt\_ye\_unsat$	Time step of output	$0 \sim \inf$	m	
	unsaturated storage			

Colname	Meaning	Range	Unit	Comments
dt_ye_gw	Time step of output groundwater head	0 ~ inf	m	
$dt\_Qe\_surf$	Time step of output surface element flux	$0 \sim \inf$	$m^3/day$	
$dt_Qe_sub$	Time step of output subsurface element flux	$0 \sim \inf$	$m^3/day$	
$ m dt\_qe\_et0$	Time step of output element flux, interception		m/day	
$ m dt\_qe\_et1$	Time step of output element flux, transpiration	$0 \sim \inf$	·	
$ m dt\_qe\_et2$	Time step of output element flux, evaporation	$0 \sim \inf$	, 5	
$ m dt\_qe\_etp$	Time step of output element flux, potential ET	$0 \sim \inf$	m/day	
dt_qe_prcp	Time step of output element flux, interception	$0 \sim \inf$	m/day	
$dt_qe_infil$	Time step of output element flux, interception	$0 \sim \inf$	m/day	
$dt_qe_rech$	Time step of output element flux, interception	$0 \sim \inf$	m/day	
$dt\_yr\_stage$	Time step of output river stage	$0 \sim \inf$	$m^3/day$	
$dt_Qr_down$	Time step of output river flux, downstream	$0 \sim \inf$	$m^3/day$	
dt_Qr_surf	Time step of output river flux, surface flow	$0 \sim \inf$	$m^3/day$	
$dt\_Qr\_sub$	Time step of output river flux, base flow	$0 \sim \inf$	$m^3/day$	
dt_Qr_up	Time step of output river flux, upstream	$0 \sim \inf$	$m^3/day$	

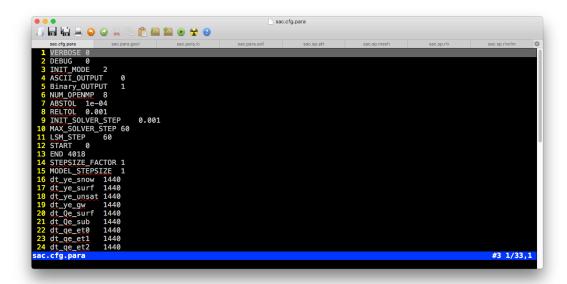


Figure 4.5: Example of .cfg.para file

# 4.2.2 .cfg.calib file

Colname	Meaning		Unit	Comments
KSATH	Horizontal conductivity of ground water		-	
KSATV	Vertical conductivity of ground water	?	-	
KINF	Vertical conductivity of top soil	?	-	
KMACSATH	Horizontal conductivity of macropore	?	-	
KMACSATV	Vertical conductivity of soil macropore	?	-	
DINF	Infiltration depth	?	-	
DROOT	Root depth		-	
DMAC	Macropore depth		-	
THETAS	Porosity, saturated soil moisture		-	
THETAR	Residual soil moisture		-	
ALPHA	$\alpha$ value in van Genuchten equation		-	
$\operatorname{BETA}$	$\beta$ value in van Genuchten equation		-	
MACVF	Vertical macropore areal fraction		-	
MACHF	Horizontal macropore areal fraction		-	
VEGFRAC	Vegetation fraction		-	
ALBEDO	Emissitive reflection ratio		-	
ROUGH	Manning's roughness of element surface		-	
AQUIFER	Thichness of aquifer		-	
PRCP	Precipitation		-	

Colname	Meaning	Range	Unit	Comments
SFCTMP	Temperature		-	
EC	Interception		-	
$\operatorname{ETT}$	Transpiration		-	
EDIR	Evaporation		-	
RIV_ROUGH	Manning's roughness of river		-	
RIV_KH	Conductivity of river bed		-	
RIV_DPTH	Depth of river cross section		-	
RIV_WDTH	Width of river cross section		-	
RIV_SINU	Sinusity of river path		-	
RIV_CWR	$C_{wr}$ in Chezy equation		-	
RIV_BSLOPE	Slope of river bed		-	
$SOIL\_DGD$	Soil degradation		-	
IMPAF	Impervious areal fraction		-	
ISMAX	Maximum interception		-	

# 4.2.3 .cfg.ic file

- Block 1 (Element initial condition)
- Pre-table

Value1	Value2
Number of rows ( $N_{element}$ )	Number of columns (6)

Colname	Meaning	Range	Unit	Comments
ID	Index of element $i$	$1 \sim N_{element}$	-	
Canopy	Canopy storage of element $i$	$0 \sim \inf$	m	
Snow	Snow storage of element $i$	$0 \sim \inf$	m	
Surface	Surface storage of element $i$	$0 \sim \inf$	m	
Unsat	Unsaturated storage of element $i$	$0 \sim \inf$	m	
GW	Groundwater head of element $i$	$0 \sim \inf$	m	

- Block 2 (river initial condition)
- Pre-table:

Value1	Value2
Number of rows ( $N_{riv}$ )	Number of columns (2)

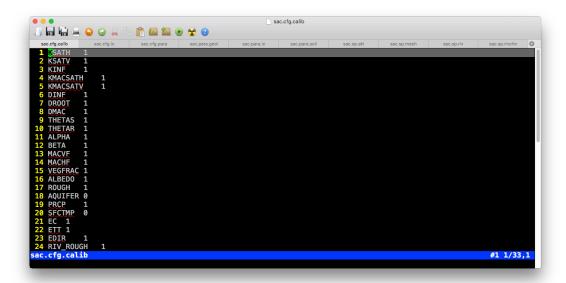


Figure 4.6: Example of .cfg.calib file

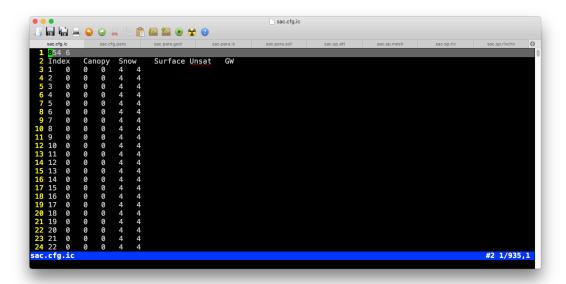


Figure 4.7: Example of .cfg.ic file

#### • Table

Colname	Meaning	Range	Unit	Comments
ID	Index of river $i$	$1 \sim N_{riv}$	-	
Stage	Stage of river $i$	$0 \sim \inf$	m	

# 4.3 Time-series data

#### 4.3.1 .tsd.forc file

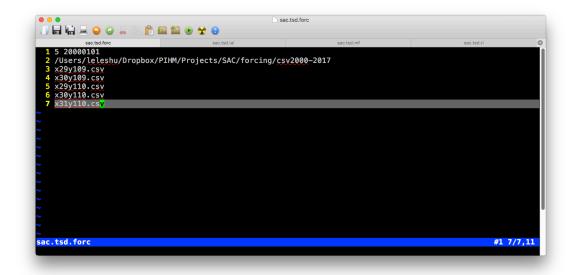


Figure 4.8: Example of .tsd.forc file

- Line 1: Number of forcing sites | Start day (YYYYMMDD)
- Line 2: Directory to the spreadsheet
- Line 3~N: Filenames of spreadsheet
- Pre-table:

Value1	Value2		
(0)	Number of columns (6)		

```
1 9.6
2 Day APCP TMP SPFH UGRD DSWRF
3 0.0416666666666667 0 10 0.614150030125929 357696 7748006.4
4 0.083333333333333333 0 7.089000000000000 0.684935747278354 372384 0
5 0.125 0 5.770000000000000 0.765373934343176 387936 0
6 0.16666666666666667 0 3.66000000000000 0.87528037598273 402624 0
7 0.208333333333333 3 3.87 0.86189917765612 361152 0
8 0.25 0 4.0900000000000 0.8673677261256 319680 0
9 0.291666666666666667 0 4.3000000000000 1.8872502543729716 2777344 0
10 0.333333333333 3 3.94 0.874029288083915 292032 0
11 0.375 0 3.580000000000000 4.875167291366 398385 0
12 0.4166666666666667 0 4.30000000000000 2.875847552515034 319680 0
13 0.45833333333333  3.94 0.87402928083915 292032 0
14 0.5 0 2.86000000000000 0.8673574027191979 305856 0
15 0.54166666666666667 0 4.30400000000000 2.875847552515034 319680 0
15 0.54166666666666667 0 4.6800000000000 2.877131119614509 312768 0
14 0.5 0 2.86000000000000 1 0.867374027191979 305856 0
15 0.54166666666666667 0 4.6800000000000 1 8.8672464815322 298944 0
16 0.58033333333333 3 2.25 8.66497734499223 306720 0
17 0.625 0 1.81 0.862168021503125 314496 0
18 0.6666666666666667 0 1.37 0.860940211164456 321408 0
19 0.708333333333333 3 3.160000000000000 1 .867372751467 382752 5116262.4
20 0.75 0 4.95000000000000000 6.706693380798342 4443232 16665782.4
21 0.791666666666666667 0 6.74000000000000 6.683732721468 382752 5116262.4
20 0.75 0 4.9500000000000000 6.063573722878003 524448 35977651.2
23 0.875 0 8.670000000000000 6.680537228787003 524448 35977651.2
23 0.875 0 8.670000000000000 6.680537228787003 524448 35977651.2
23 0.875 0 8.67000000000000 4.663053724879575688 224448 35977651.2
24 0.9166666666666667 0 6.6400000000000 6.6581811608559947 571968 31590604.8
25 1 0.8333333333333 3 8.8000000000000 4.6581811608559947 571968 31590604.8
26 1 0.8333333333333 3 8.8000000000000 4.6581811608559947 571968 31590604.8
27 1.0416666666666667 0 3.5600000000000 4.0713922595259345 581472 7028467.2
28 1.125 0.070464 4.8400000000000 4.0713922595259345 581472 7028467.2
28 1.125 0.070464 4.84000000000000 4.07
```

Figure 4.9: Example of .csv forcing file

Colname	Meaning	Range	Unit	Comments
Day	Time	$0 \sim N_{day}$	day	
PRCP	Precipitation	0 ~ 1	m/day	
TEMP	Temperature	$-100 \sim 70$	C	
RH	Relative Humidity	$0 \sim 1$	_	
wind	Wind Speed	$0 \sim \inf$	m/day	
$\operatorname{Rn}$	Solar (shortwave) radiation	?	$J/day/m^2$	

#### 4.3.2 .tsd.lai file

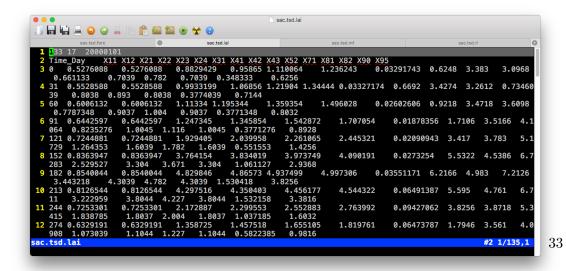


Figure 4.10: Example of .tsd.lai file

• Pre-table:

#### 4.3.3 .tsd.rl file

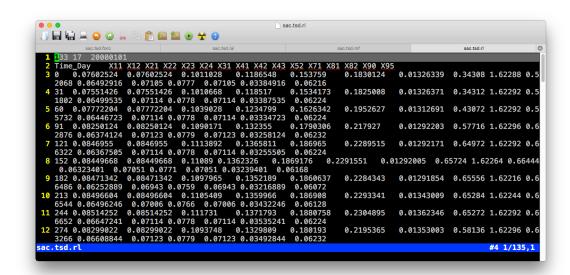


Figure 4.11: Example of .tsd.rl file

#### • Pre-table:

Value1	Value2	Value3
$\overline{\text{Number of day }(N_{time})}$	Number of columns $(N_{lc})$	Start day (YYYYMMDD)

#### • Table

Colname	Meaning	Range	Unit	Comments
TIME	Time	$0 \sim N_{time}$	day	
Column 2	Roughness length of land cover 1	$0 \sim \inf$	m	
Column i	Roughness length of land cover $i-1$	$0 \sim \inf$	m	

#### 4.3.4 .tsd.mf file

#### • Pre-table:

Value1	Value2	Value3
Number of day ( $N_{time}$ )	Number of columns $(N_{mf})$	Start day (YYYYMMDD)

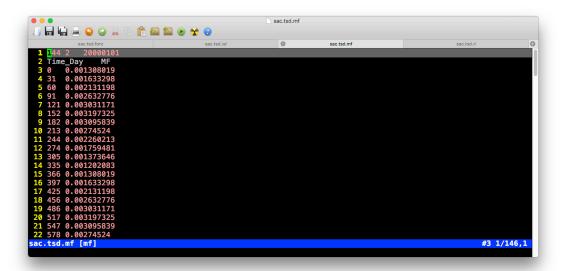


Figure 4.12: Example of .tsd.mf file

#### • Table

Colname	Meaning	Range	Unit	Comments
TIME	Time	$0 \sim N_{time}$	day	
Column 2	Melt factor 1	$0 \sim \inf$	-	
Column i	Melt factor $i-1$	$0 \sim \inf$	-	
		•••		

#### 4.3.5 .tsd.obs file

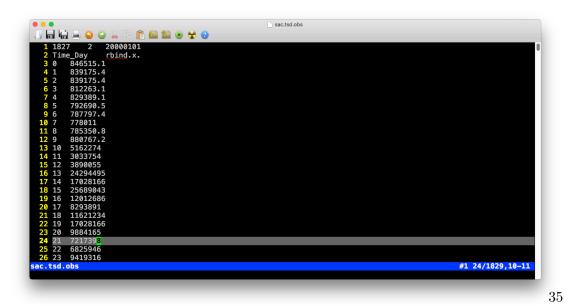


Figure 4.13: Example of .tsd.obs file

#### • Pre-table:

Value1	Value2	Value3
Number of day ( $N_{time}$ )	Number of columns $(N_{obs})$	Start day (YYYYMMDD)

Colname	Meaning	Range	Unit	Comments
			•••	

# **5** Applications

Some significant applications are demonstrated in this chapter.

- 5.1 Example 1: Vauclin Experiment
- 5.2 Example 2: Shall Hill CZO
- 5.3 Example 3: Conestoga Watershed, Pennsylvanis

# 6 Automatic hydrologic modeling with PIHM system

Automatic deployment of PIHM System

# 7 Course code and program design

The source code of PIHM++ and PIHMgisR are avaliable via Github: https://github.com/shulele/PIHM-4.0 and https://github.com/shulele/PIHMgisR.

# **Bibliography**

- Bhatt, G. (2012). A distributed hydrologic modeling system: Framework for discovery and management of water resources. PhD thesis, Pennsylvania State University.
- Bhatt, G., Kumar, M., and Duffy, C. J. (2014). A tightly coupled GIS and distributed hydrologic modeling framework. *Environmental Modelling and Software*, 62:70–84.
- Kumar, M., Bhatt, G., and Duffy, C. J. (2009). An efficient domain decomposition framework for accurate representation of geodata in distributed hydrologic models. *International Journal of Geographical Information Science*, 23(12):1569–1596.
- Kumar, M., Duffy, C. J., and Reed, P. M. (2004). Enhancing the performance of feature selection algorithms for classifying hyperspectral imagery. In *Geoscience and Remote Sensing Symposium*, 2004. IGARSS '04. Proceedings. 2004 IEEE International, volume 5, pages 3264–3267 vol.5.
- Li, S. (2008). INTEGRATED MODELING OF MULTI-SCALE HYDRODYNAMICS, SEDIMENT AND POLLUTANT TRANSPORT. PhD thesis.
- Li, S. and Duffy, C. J. (2011). Fully coupled approach to modeling shallow water flow, sediment transport, and bed evolution in rivers. Water Resources Research, 47(3):1–20.
- Qu, Y. (2004). An integrated hydrologic model for multi-process simulation using semidiscrete finite volume approach. PhD thesis.
- Qu, Y. and Duffy, C. J. (2007). A semidiscrete finite volume formulation for multiprocess watershed simulation. Water Resources Research, 43(8):1–18.
- Shi, Y., Baldwin, D. C., Davis, K. J., Yu, X., Duffy, C. J., and Lin, H. (2015a). Simulating high-resolution soil moisture patterns in the Shale Hills watershed using a land surface hydrologic model. *Hydrological Processes*, 29(21):4624–4637.
- Shi, Y., Davis, K. J., Zhang, F., Duffy, C. J., and Yu, X. (2015b). Parameter estimation of a physically-based land surface hydrologic model using an ensemble Kalman filter: A multivariate real-data experiment. *Advances in Water Resources*, 83:421–427.
- Yu, X., Duffy, C., Baldwin, D. C., and Lin, H. (2014). The role of macropores and multi-resolution soil survey datasets for distributed surface-subsurface flow modeling. *Journal of Hydrology*, 516:97–106.

#### Bibliography

Yu, X., Lamačová, A., Duffy, C., Krám, P., and Hruška, J. (2015). Hydrological model uncertainty due to spatial evapotranspiration estimation methods. Computers & Geosciences, 90:90–101.