Whammy 5 – NEO – Version 1.08
By melatroid

melatroid@gmail.com

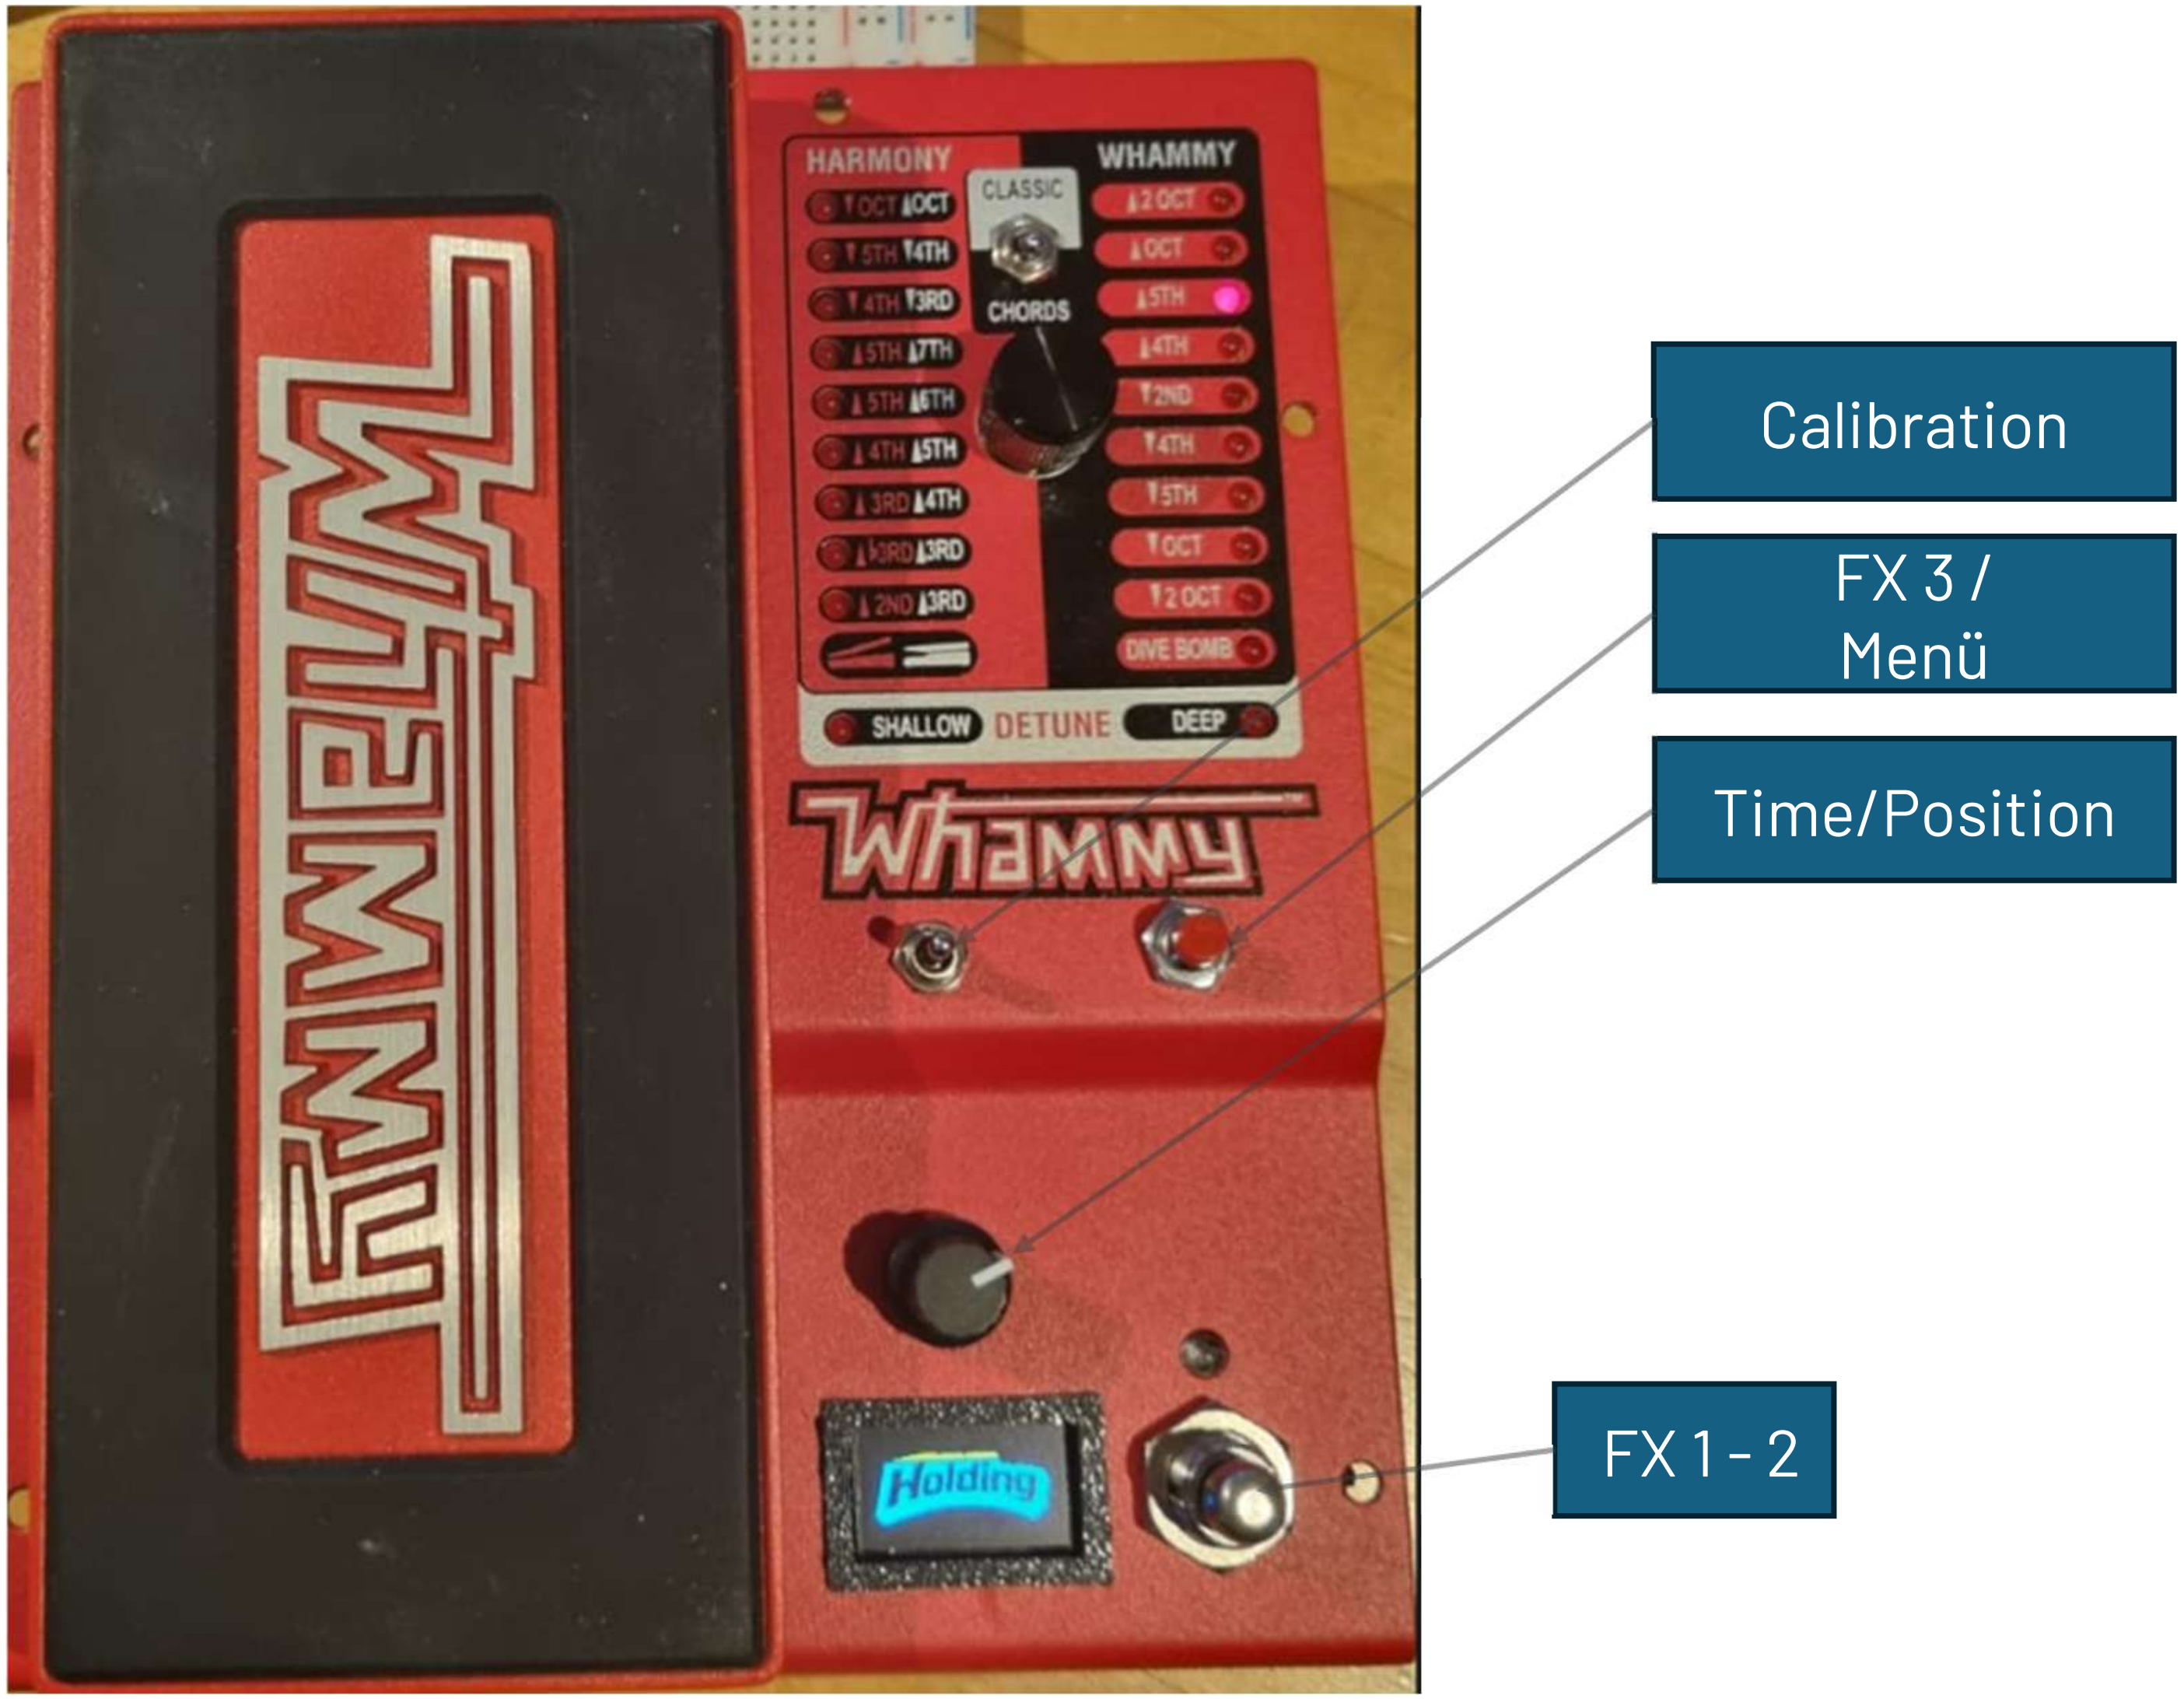

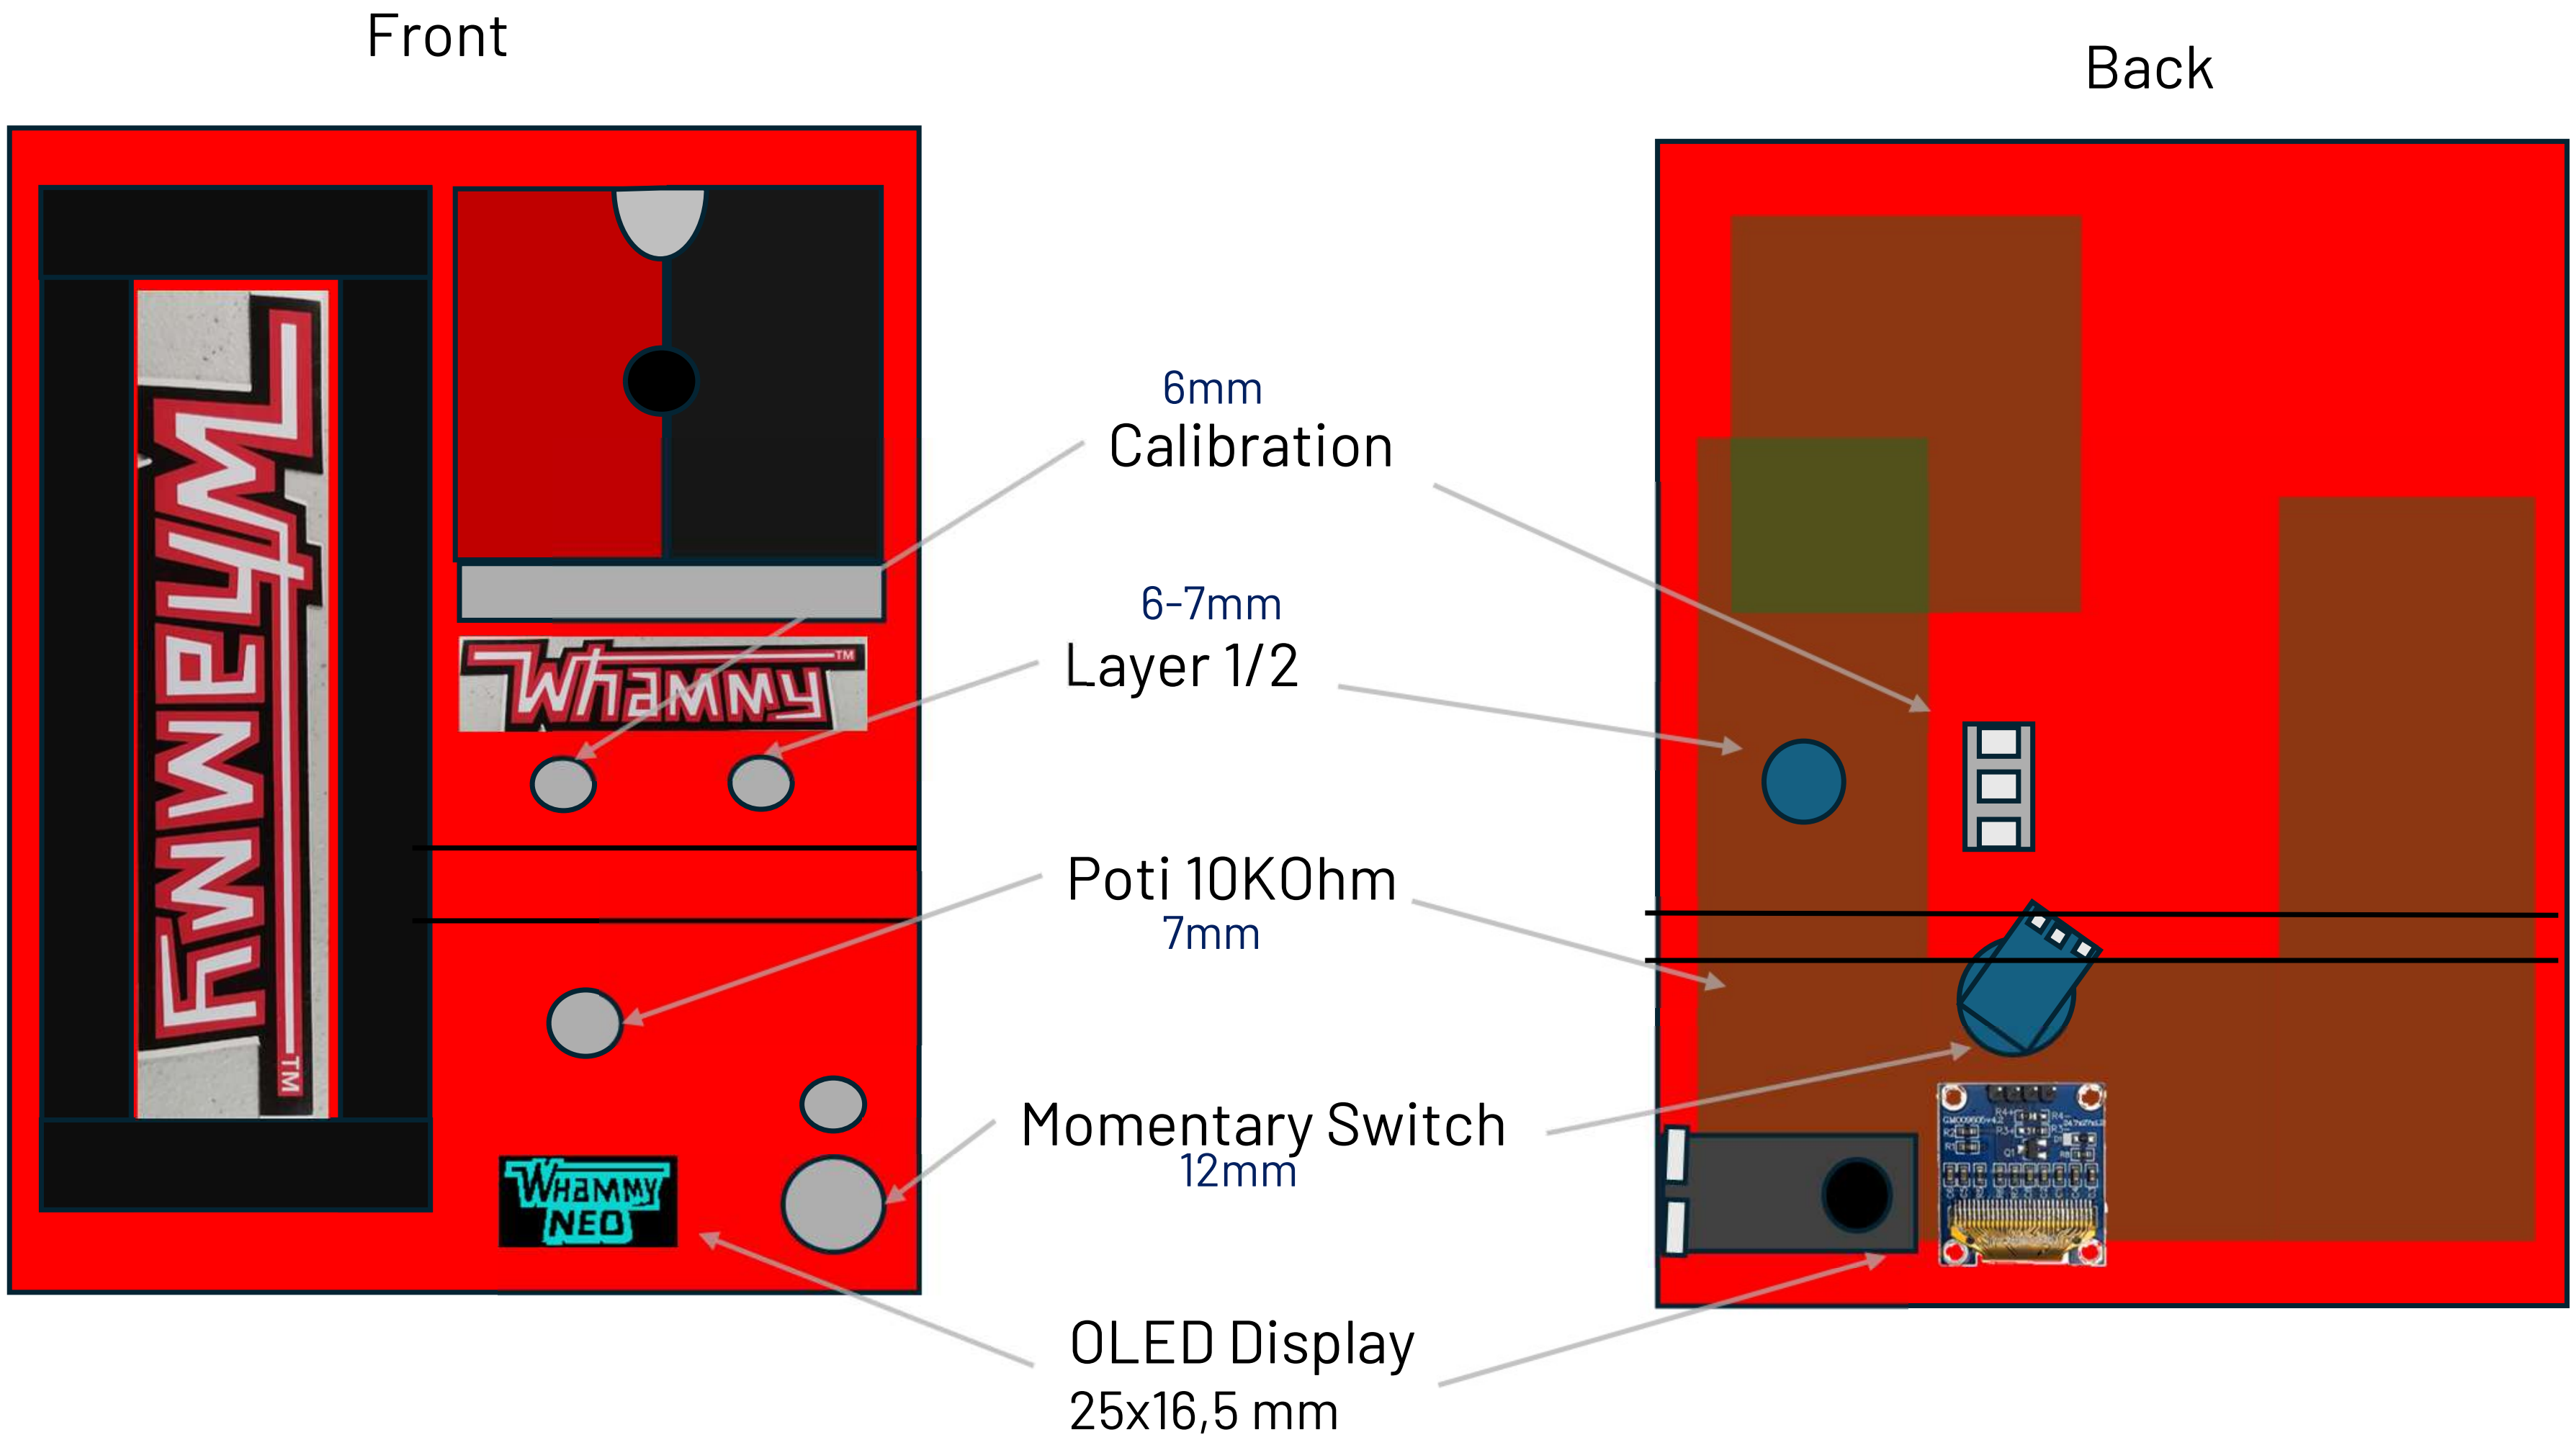
Front
Back
6mm
Calibration
6-7mm
Layer 1/2
Poti 10KOhm
7mm
Momentary Switch
12mm
OLED Display
25x16,5 mm

Drills

Print it with a 3D printer

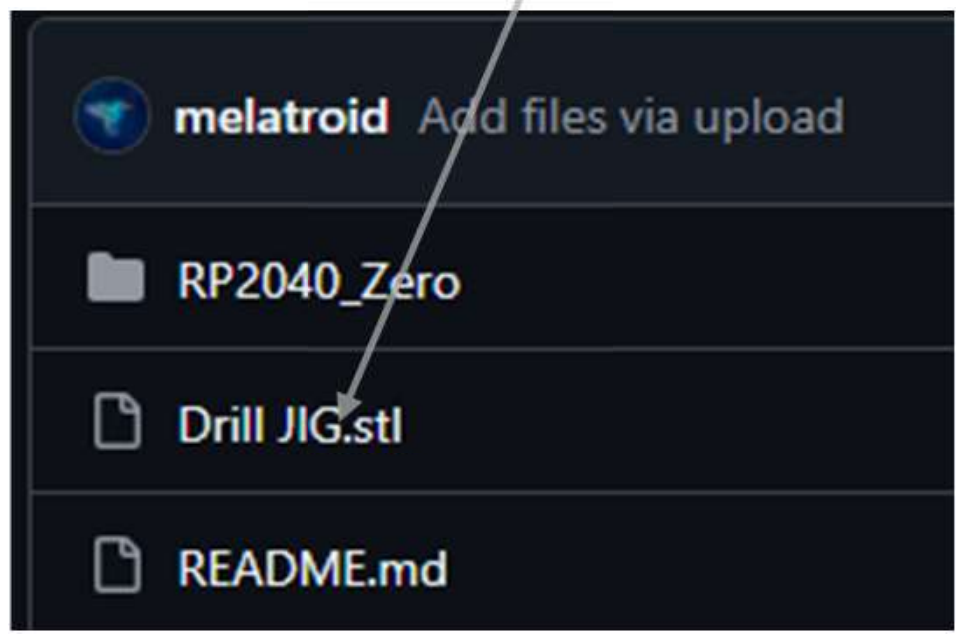

Be shure that layer switch is very short, there is only 9-10mm space to the circuity board

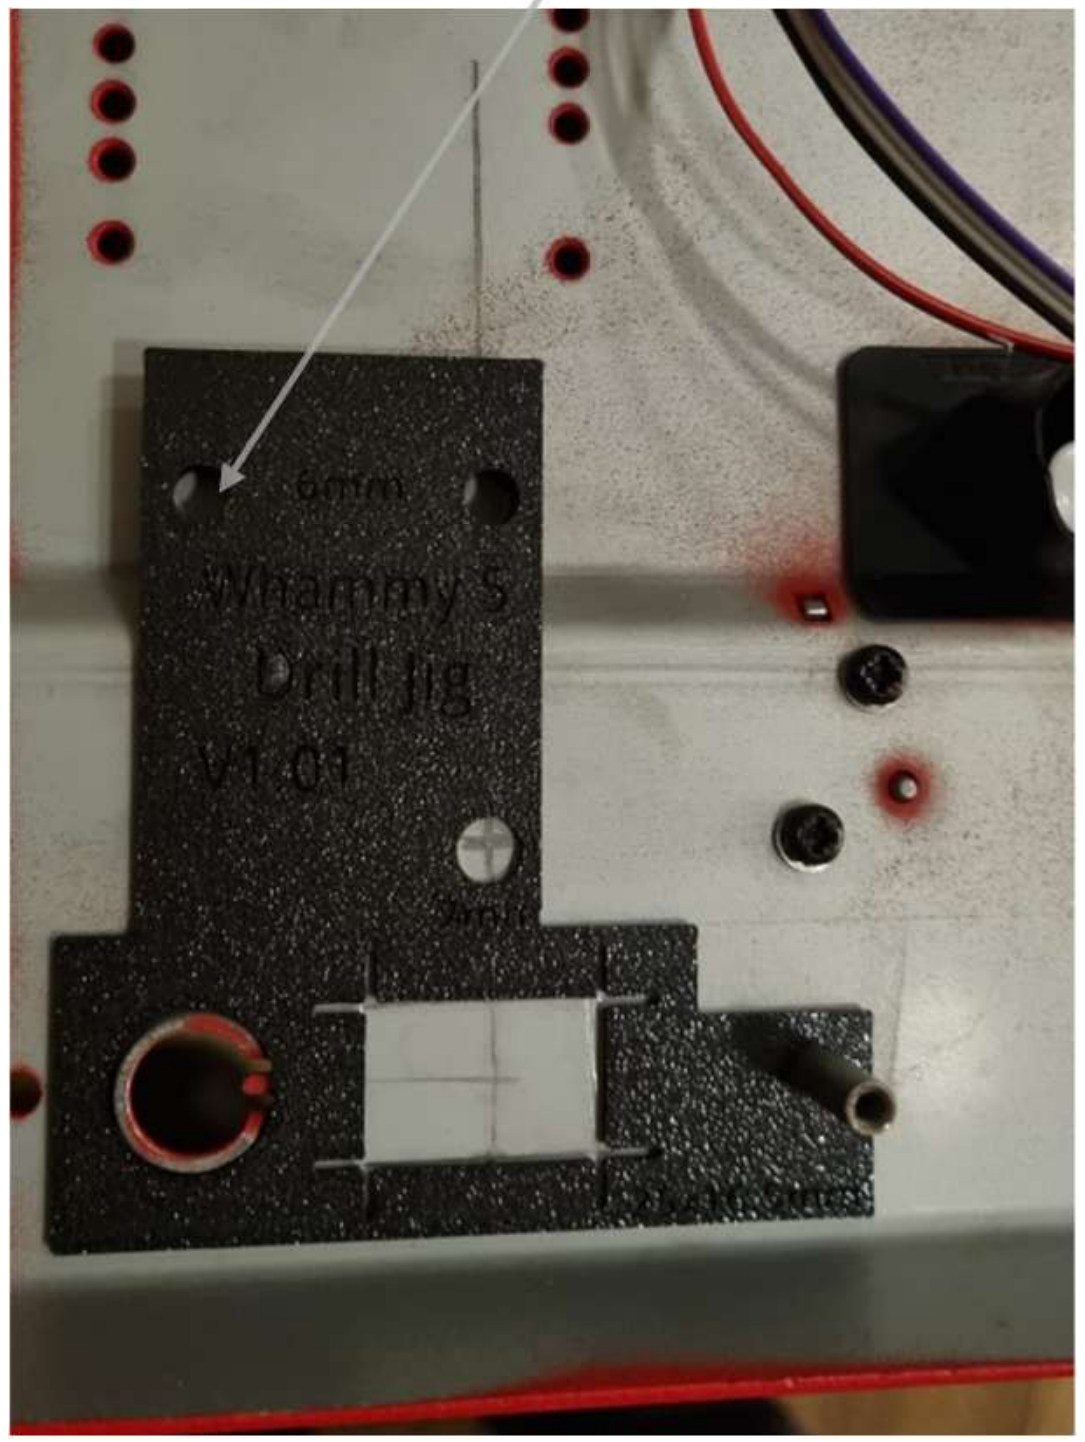

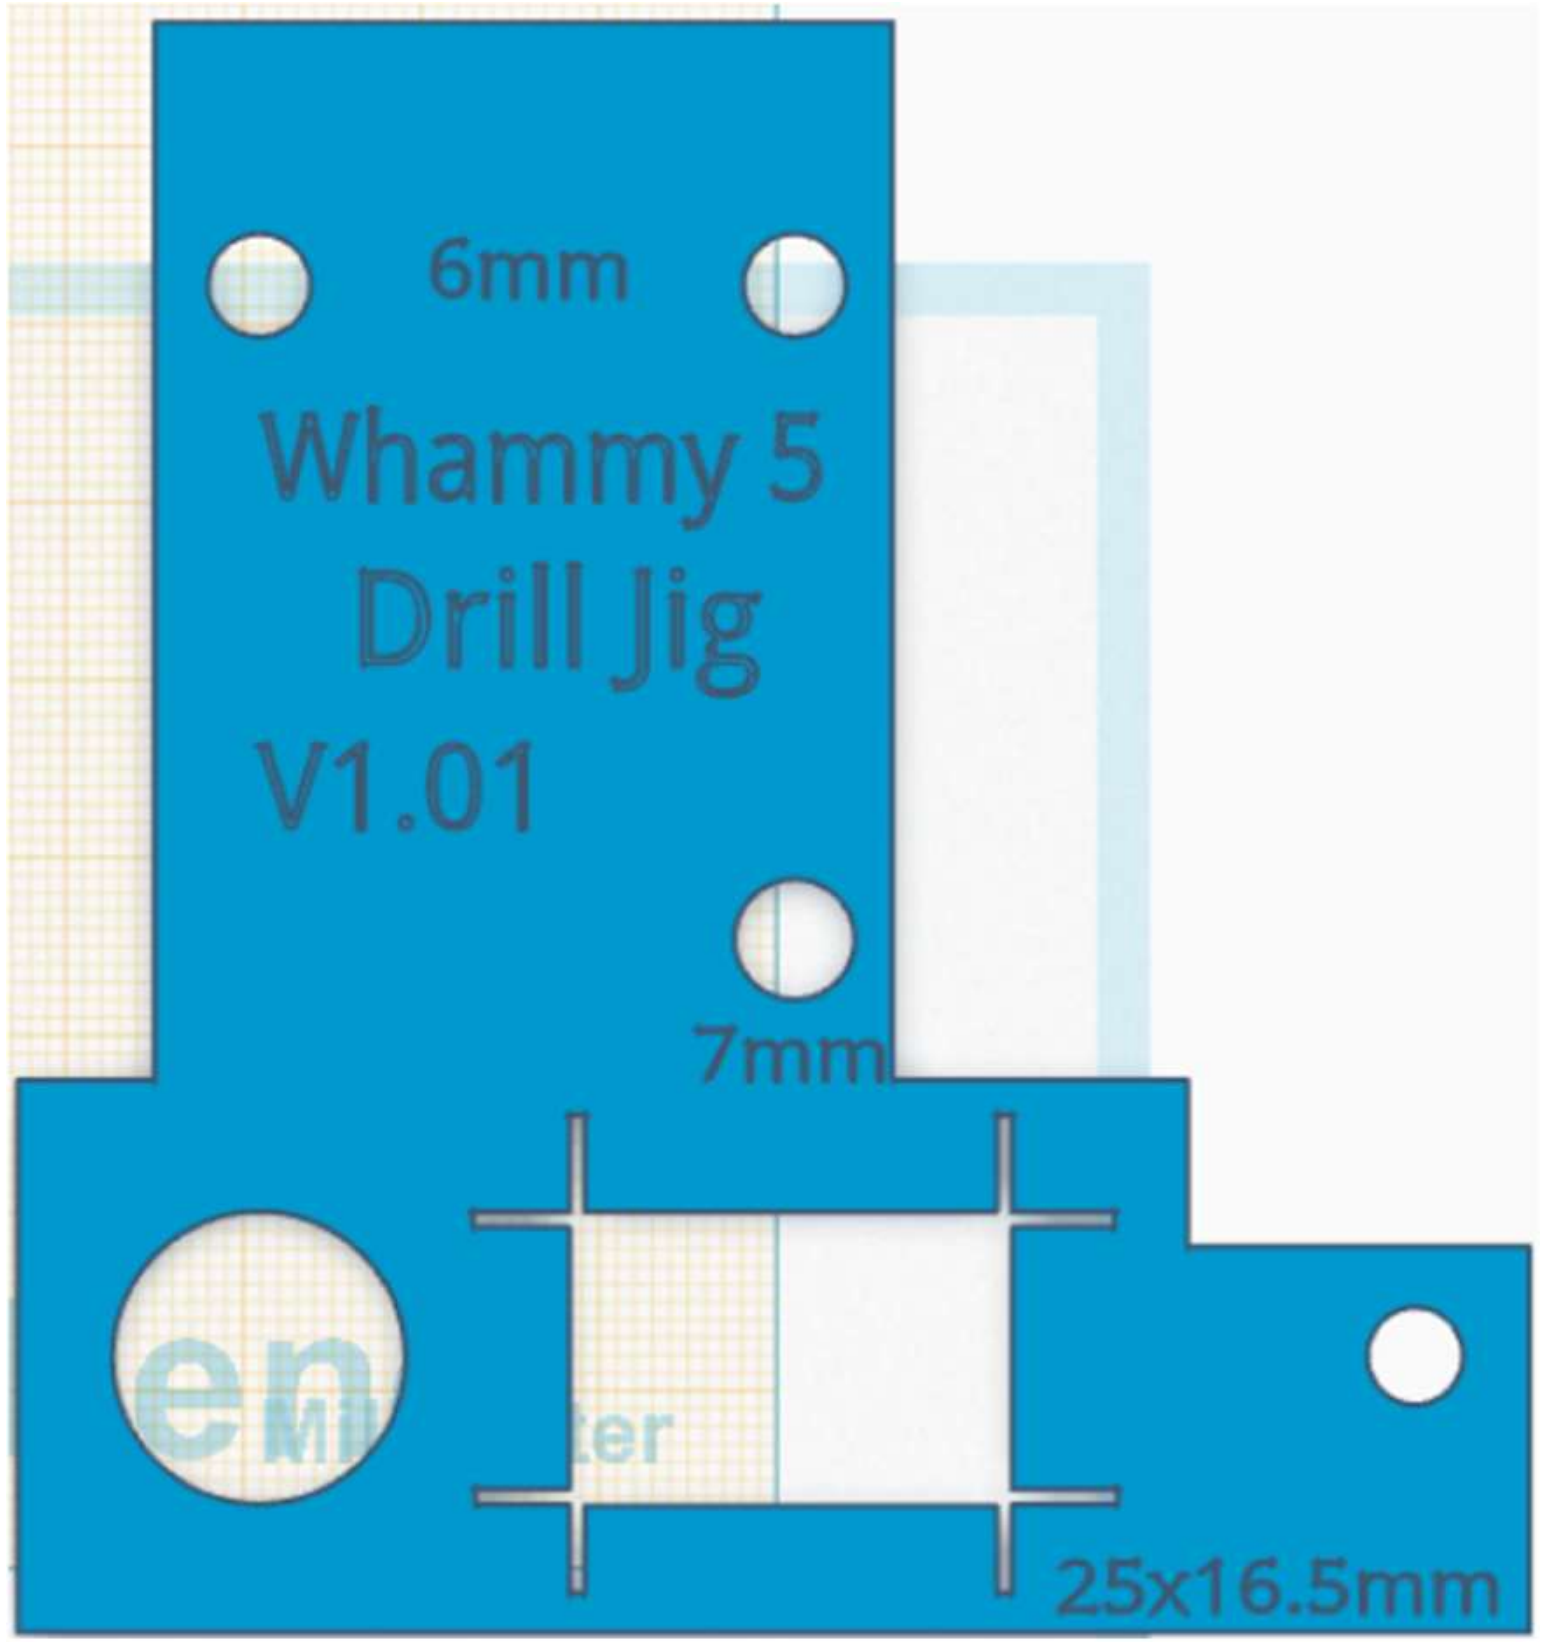

Parts

https://tweakable-parts.com/en/footswitches/175-spst-momentary-switch.html
Normally Open! → PBS 24B 4L
Long Version!

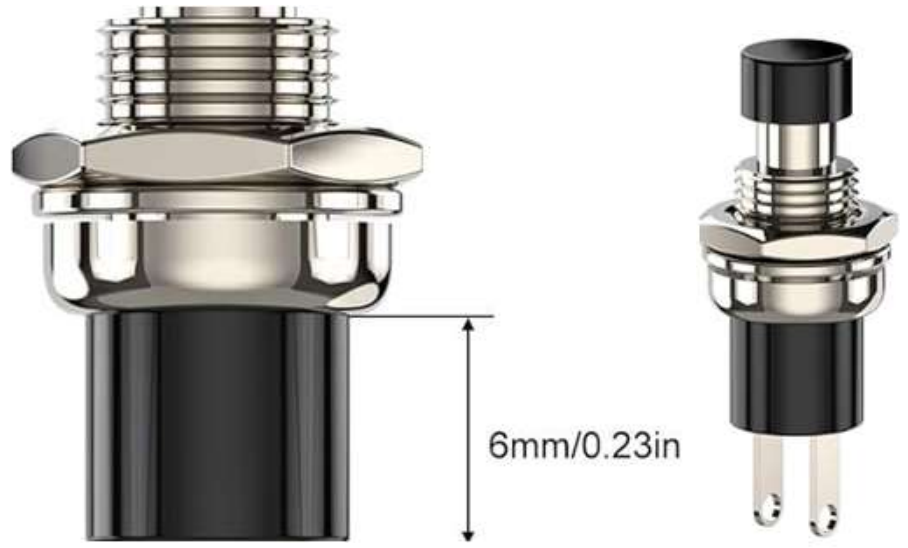

SPST, NO, 1x
Layer 1/2 Momentary !!!

Toogle Switch 1x
Calibration (3 Way)

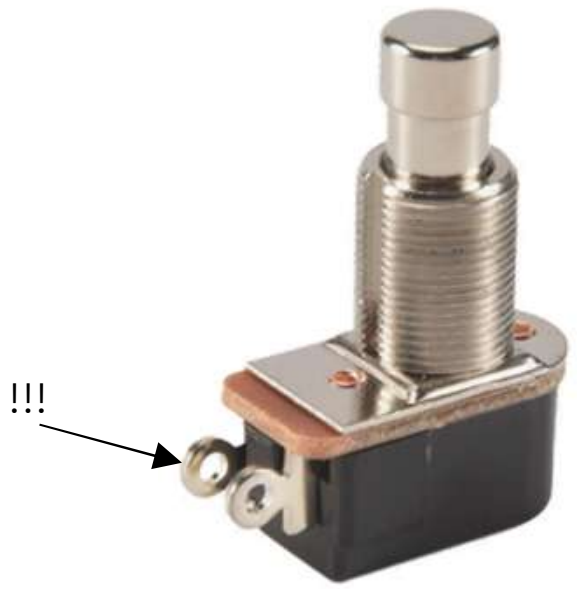

SPST, NO,
Momentary !!!

SSD1306 OR
SSD1315
O-LED
I^2C !!!

22-47
uF

100 nF
47 nF

ELKO/Ceramic
Condenser

220Ω 2x

B0505S-1W

DC/DC
LM2596

10KΩ

Raspberry Pi
2040 Zero

Tools

Solder Station

Multicutter
With metal
cutting disc

Dill Set

3D Printer (optional)

Hot Glue

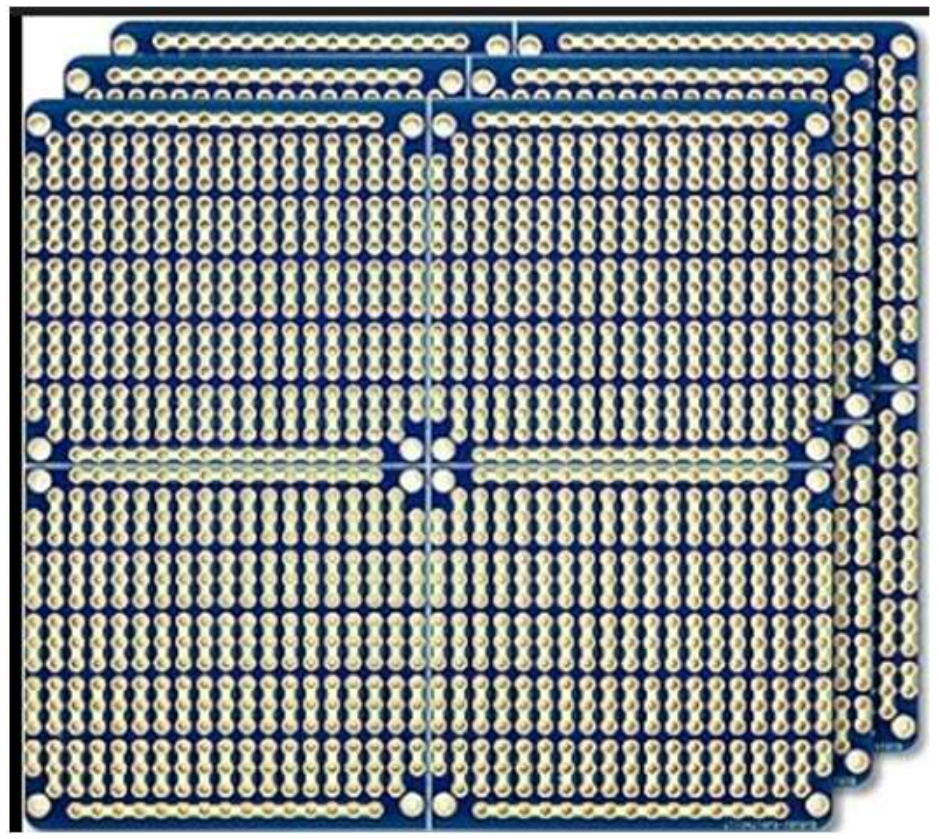

electroCookie pcb

Power Supply

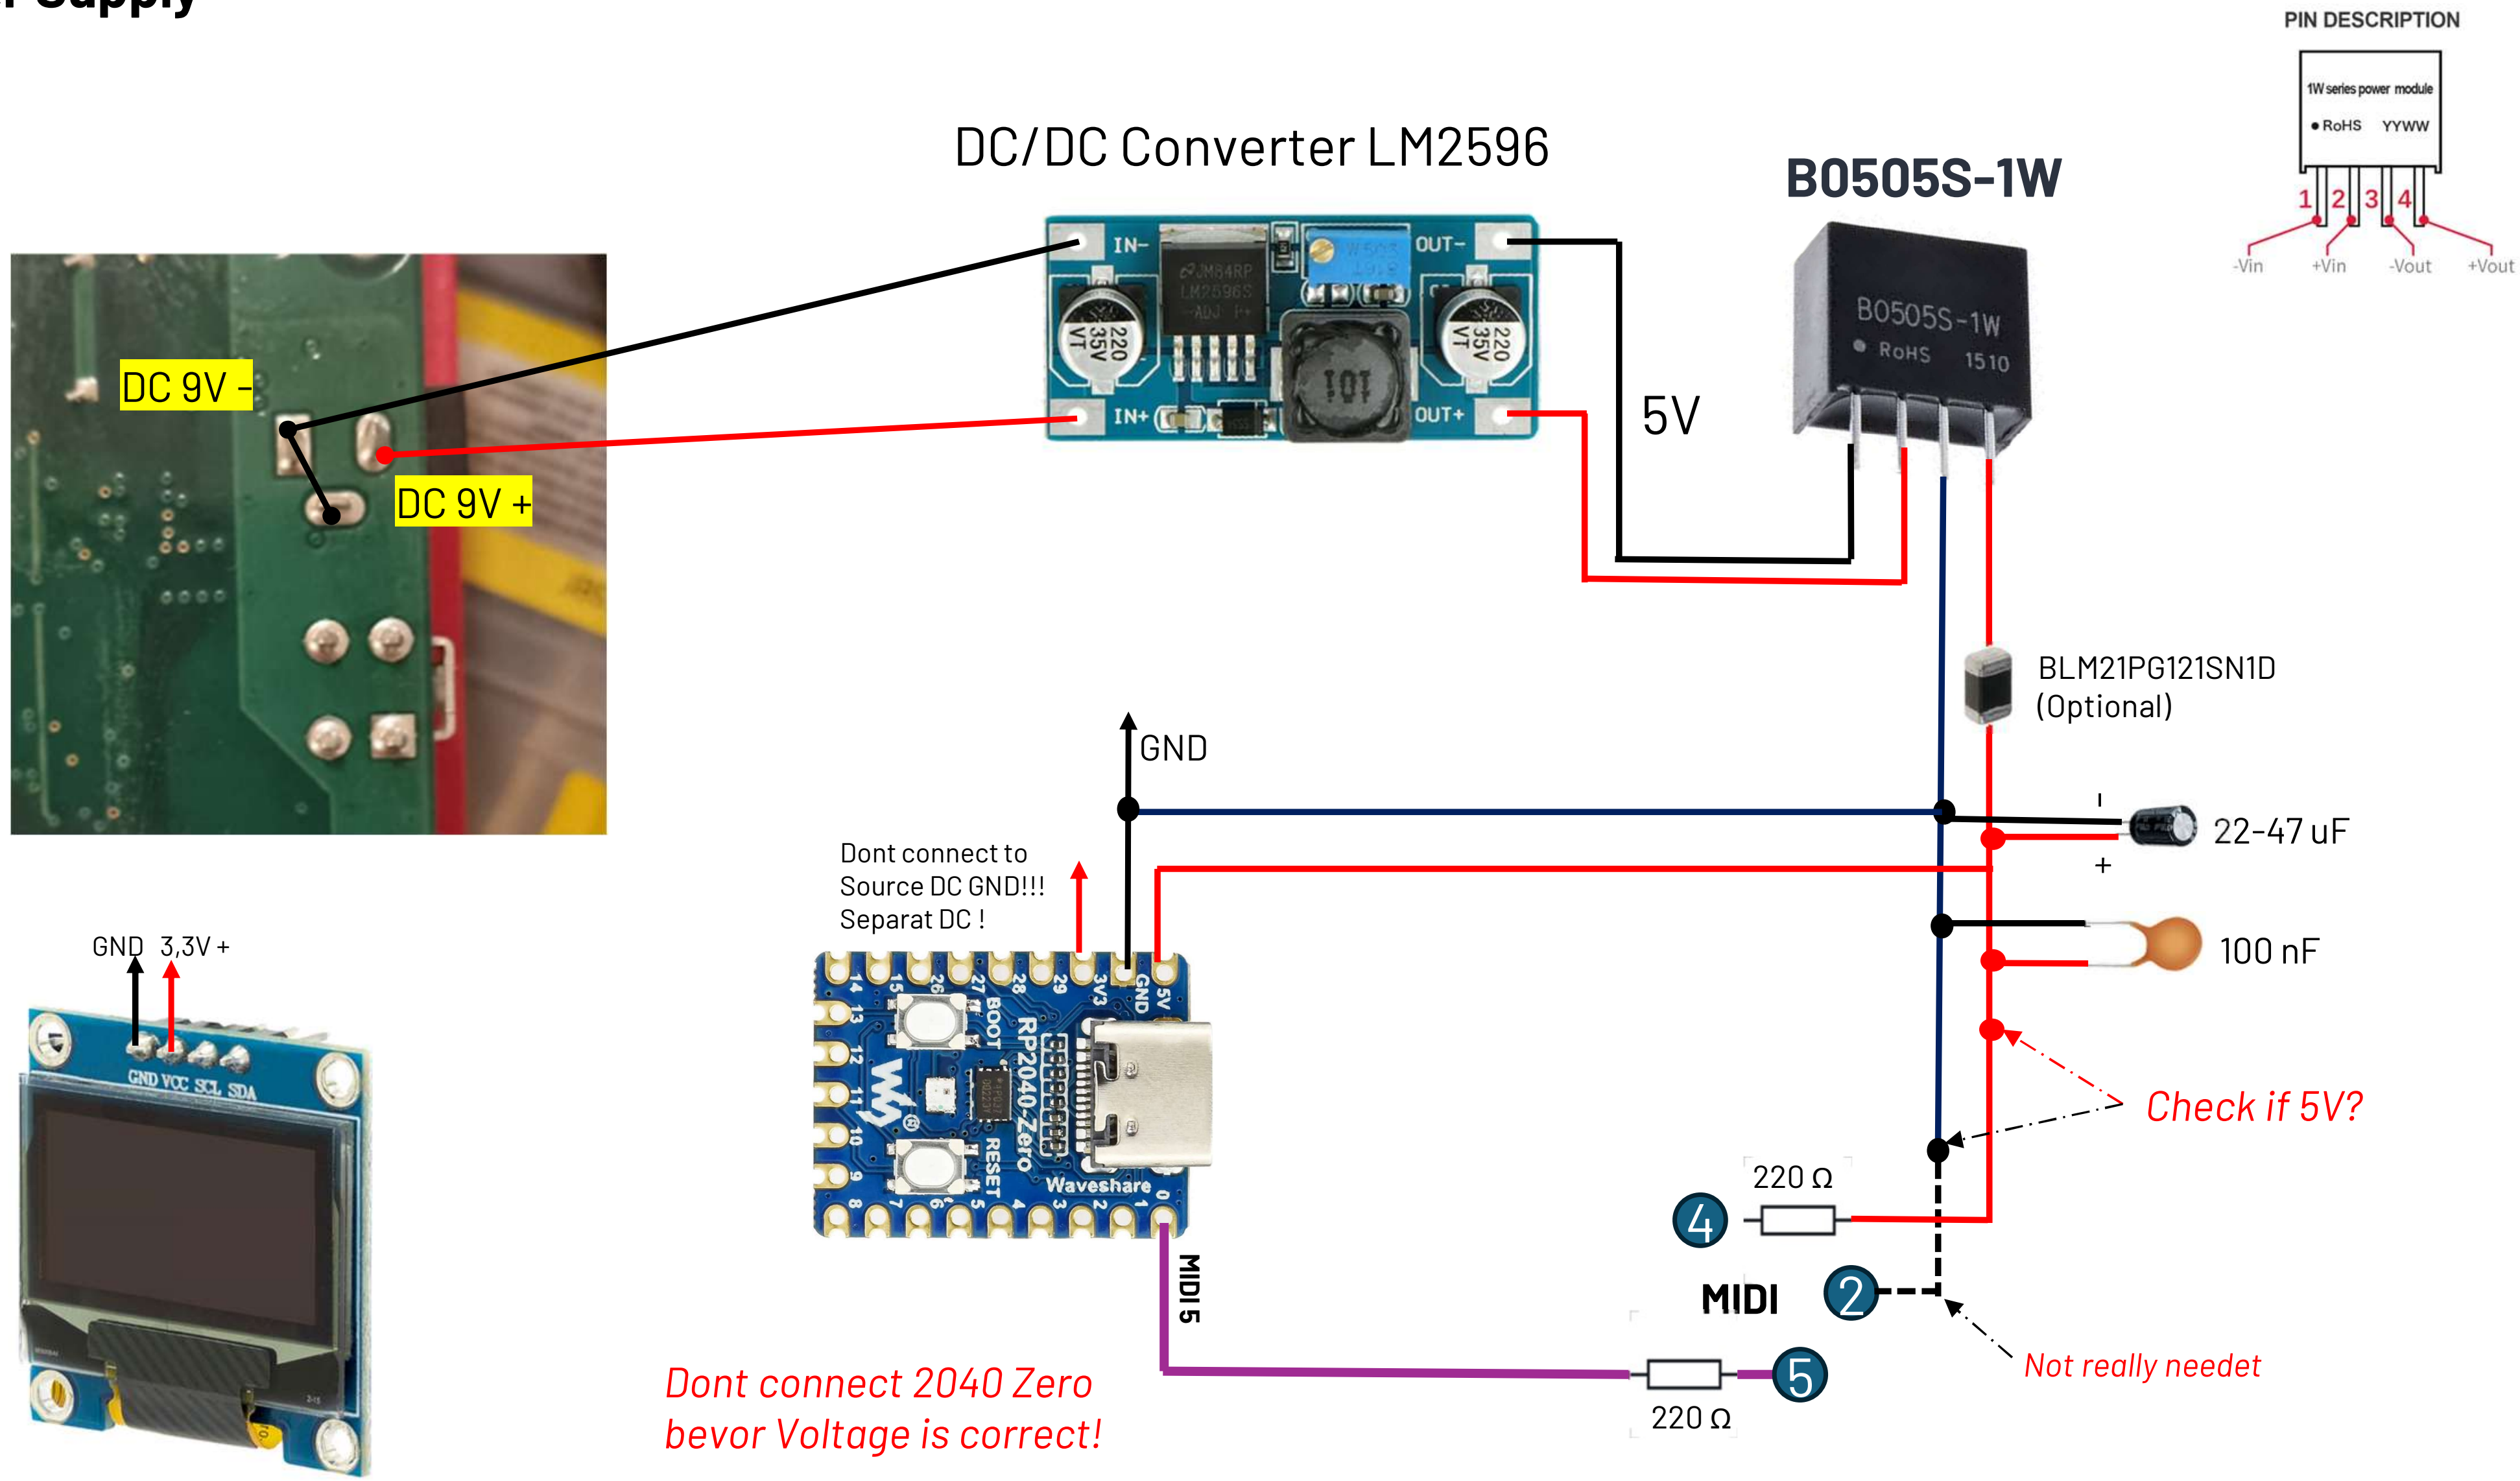

RP2040Z

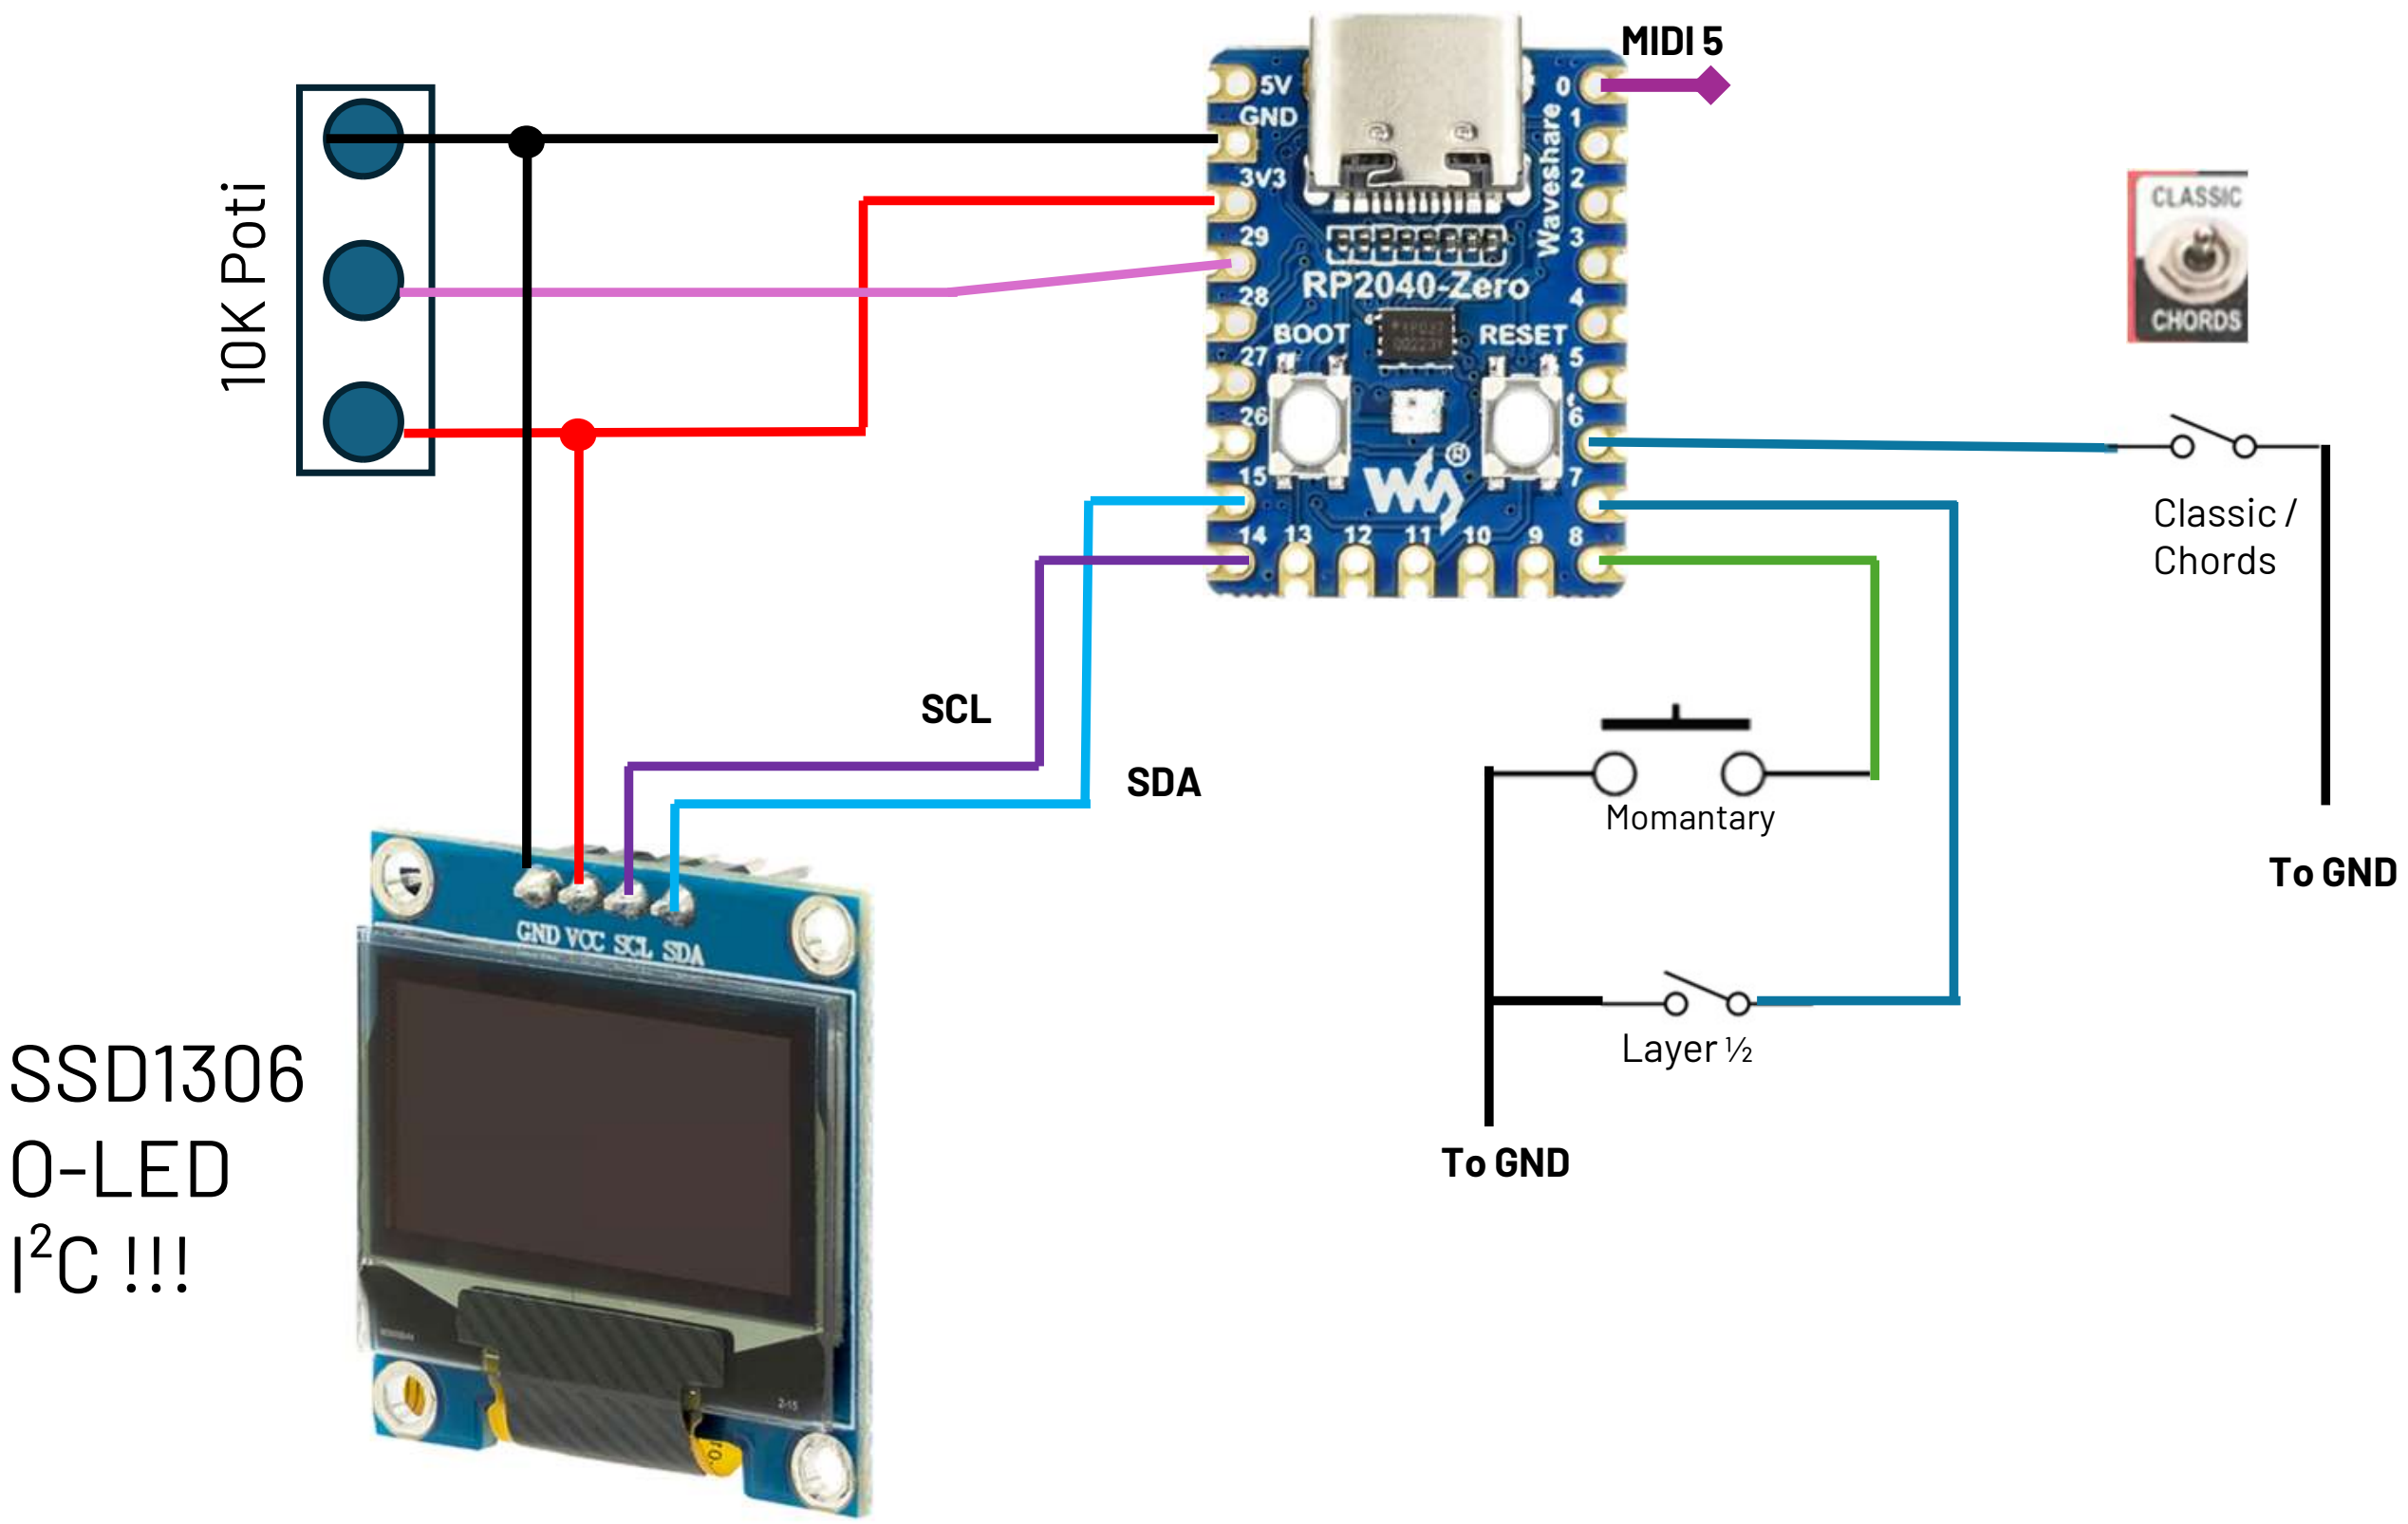
10K Poti
MIDI 5
CLASSIC
CHORDS
Classic / Chords
To GND
SCL
SDA
Momantary
Layer ½
To GND
GND VCC SCL SDA
SSD1306
O-LED
I²C !!!

Inside

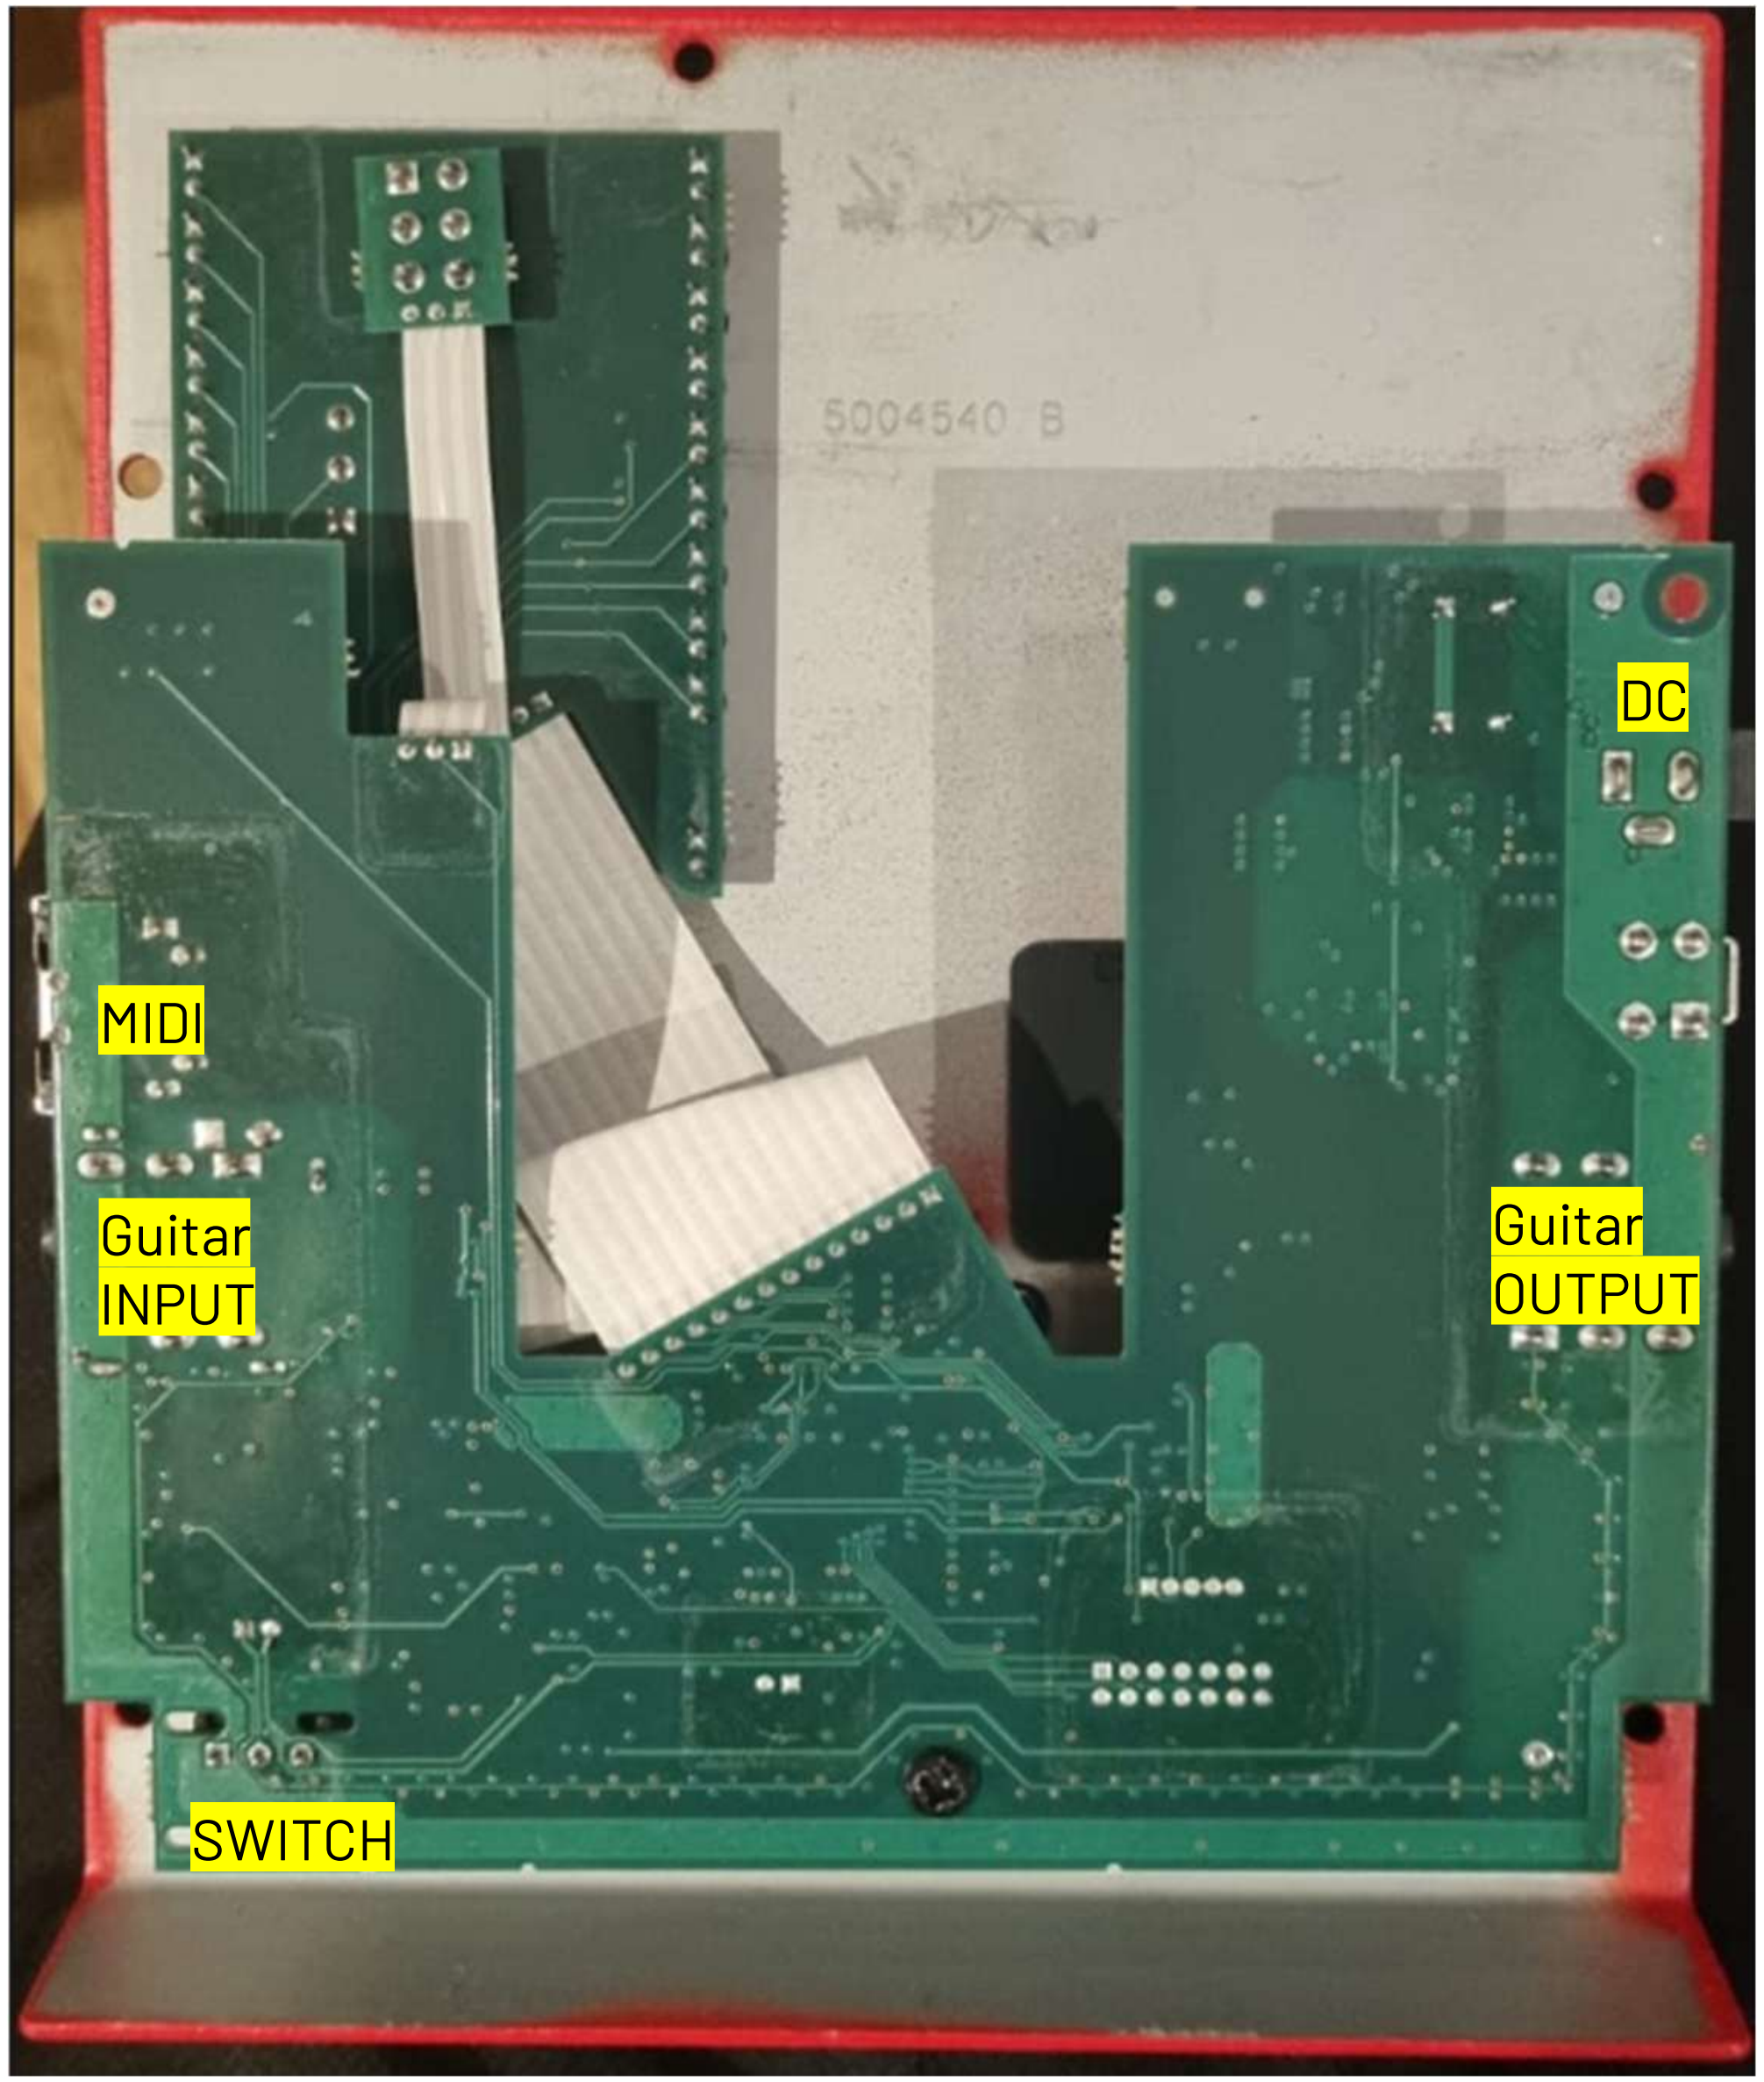

Midi

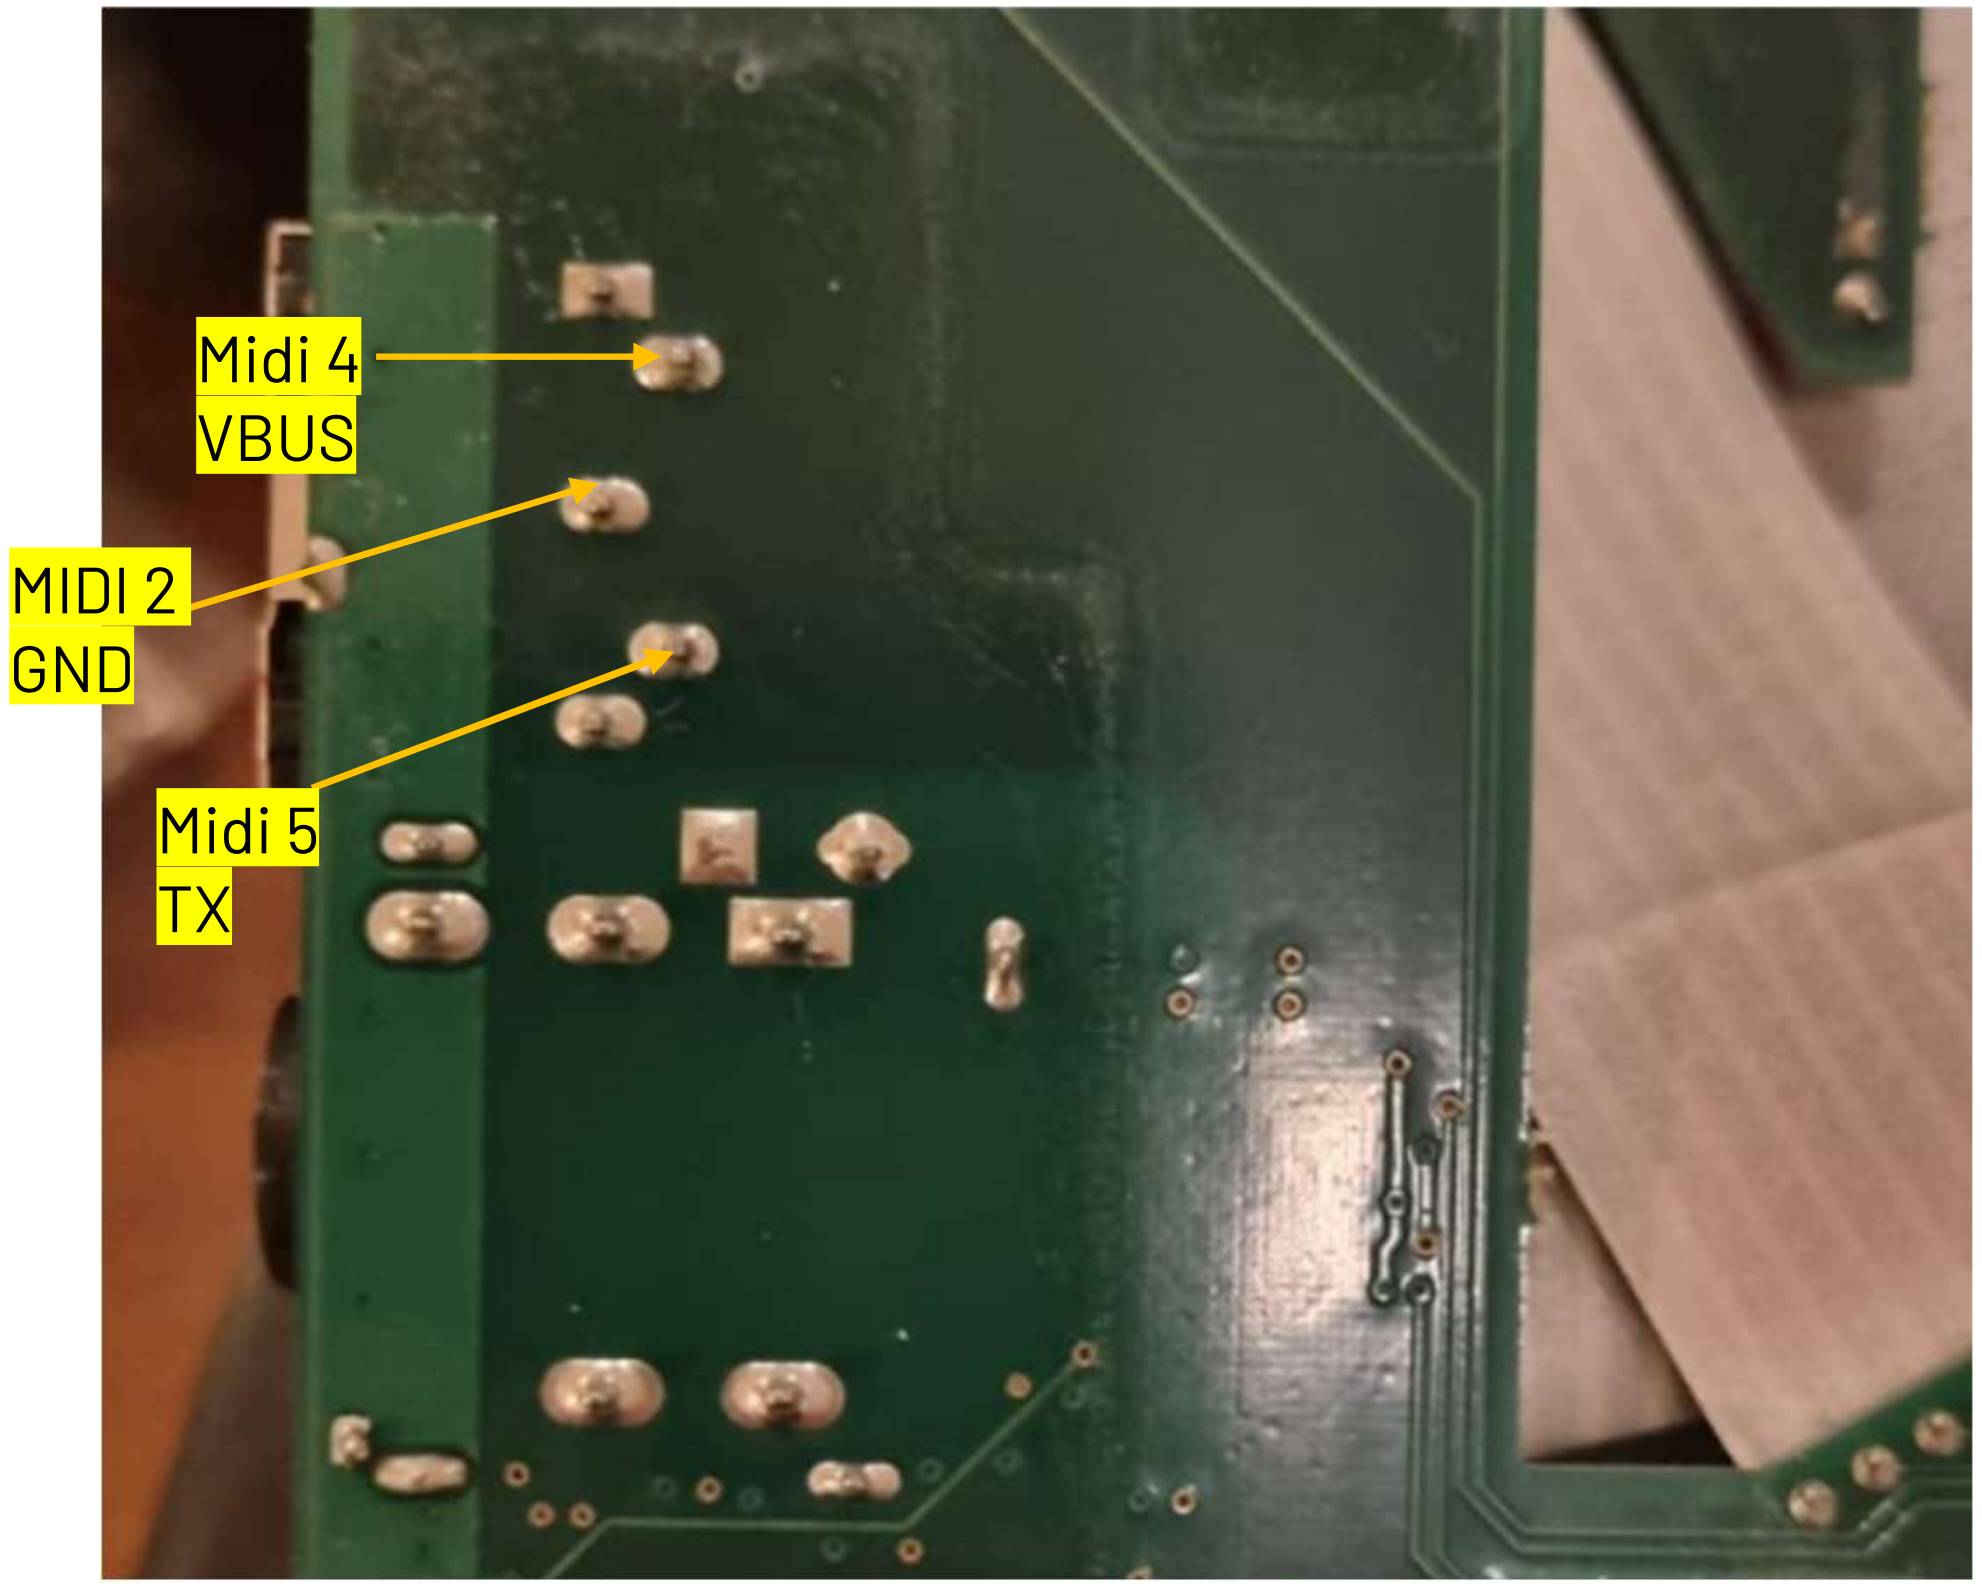

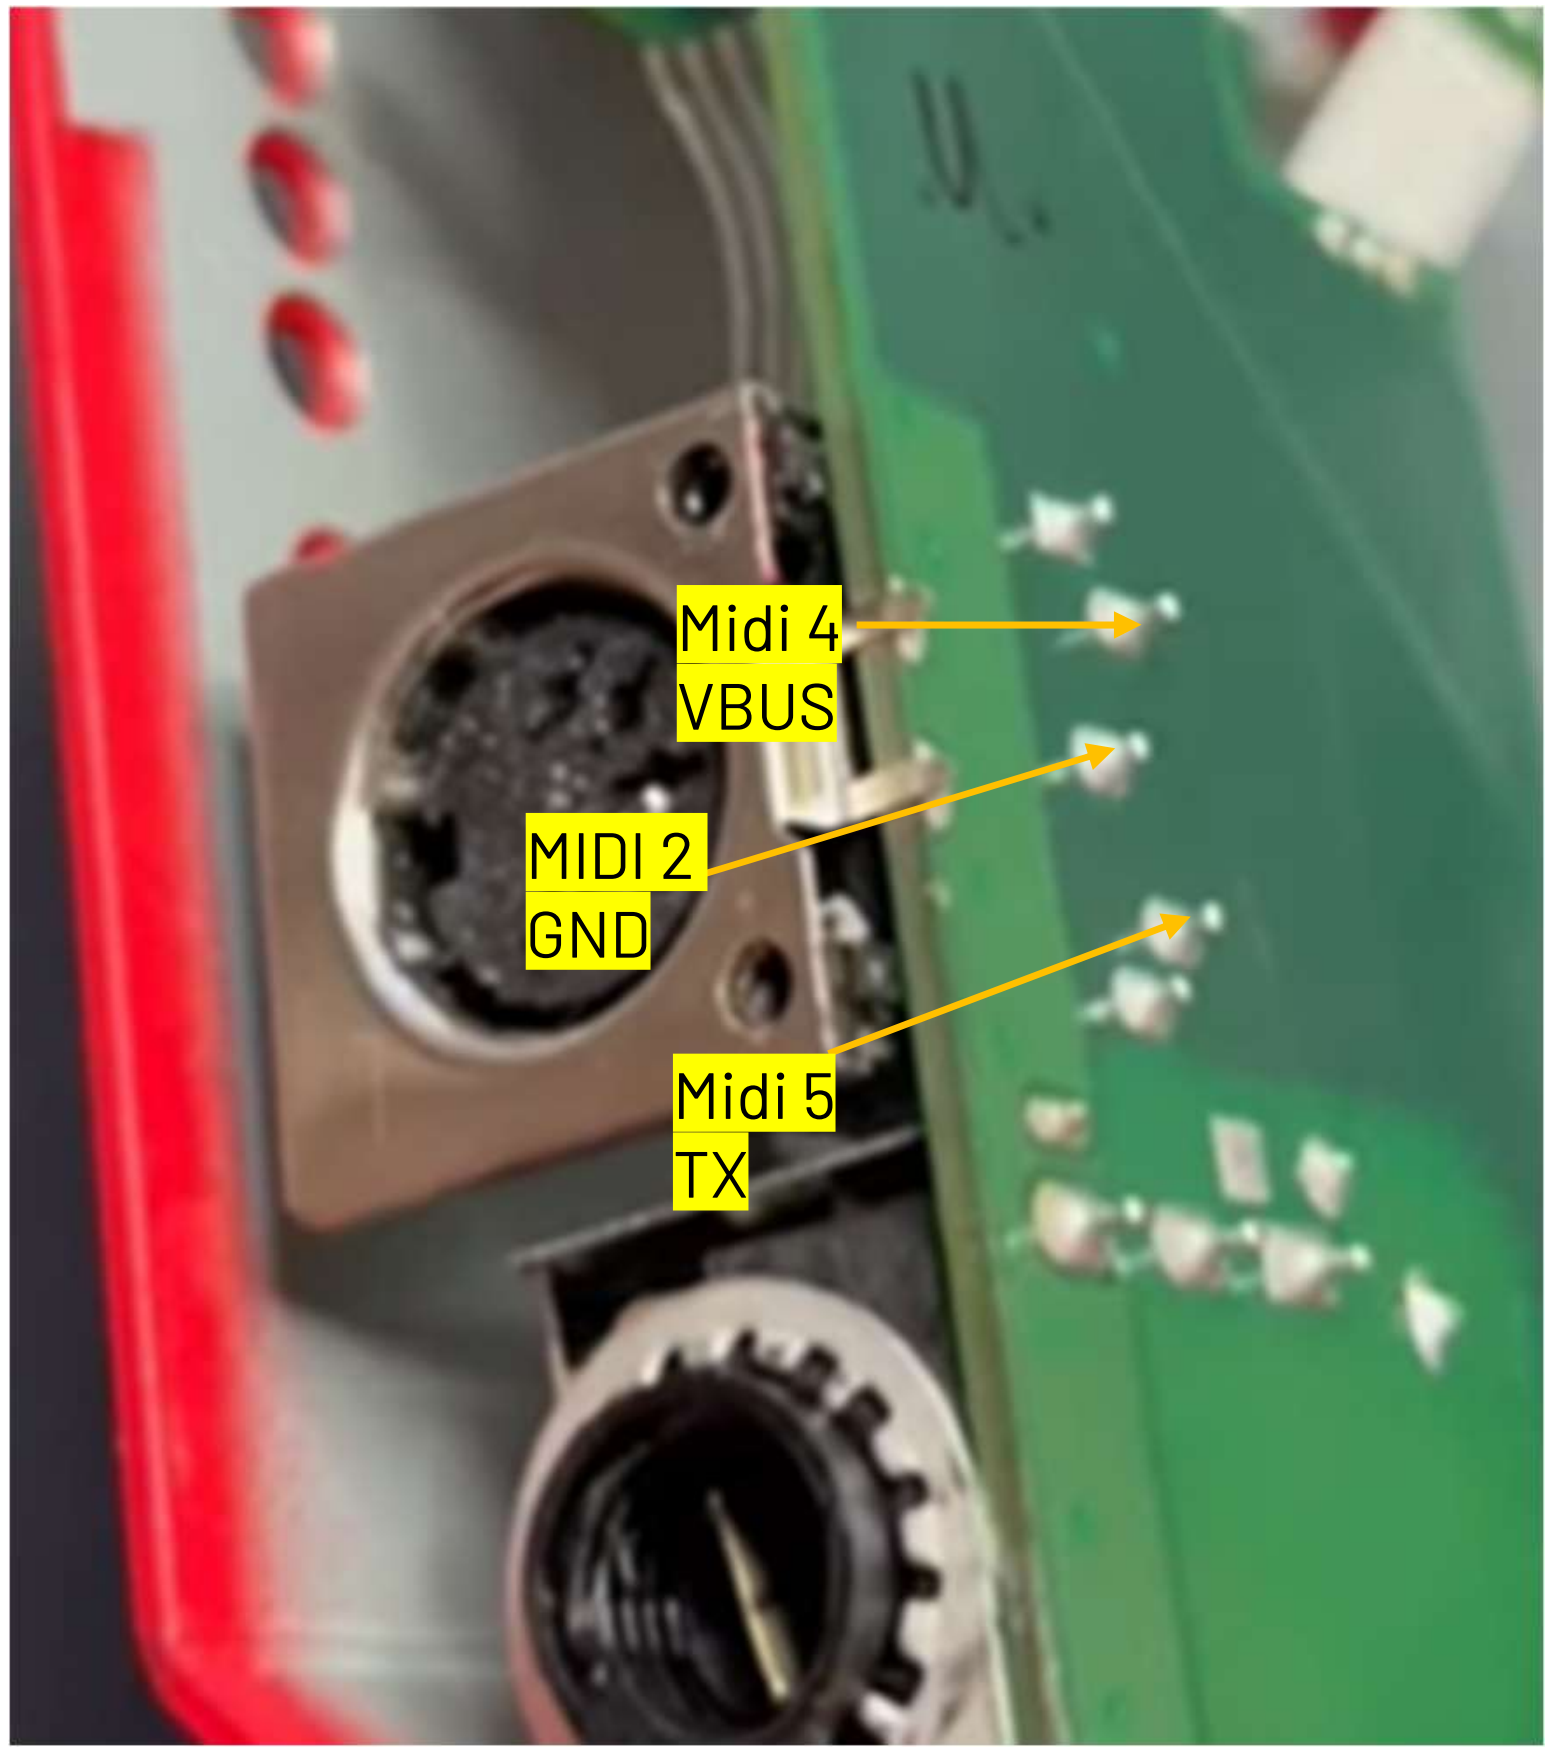

Circuit Bord

Purchase the components and solder a board according to the circuit diagram.

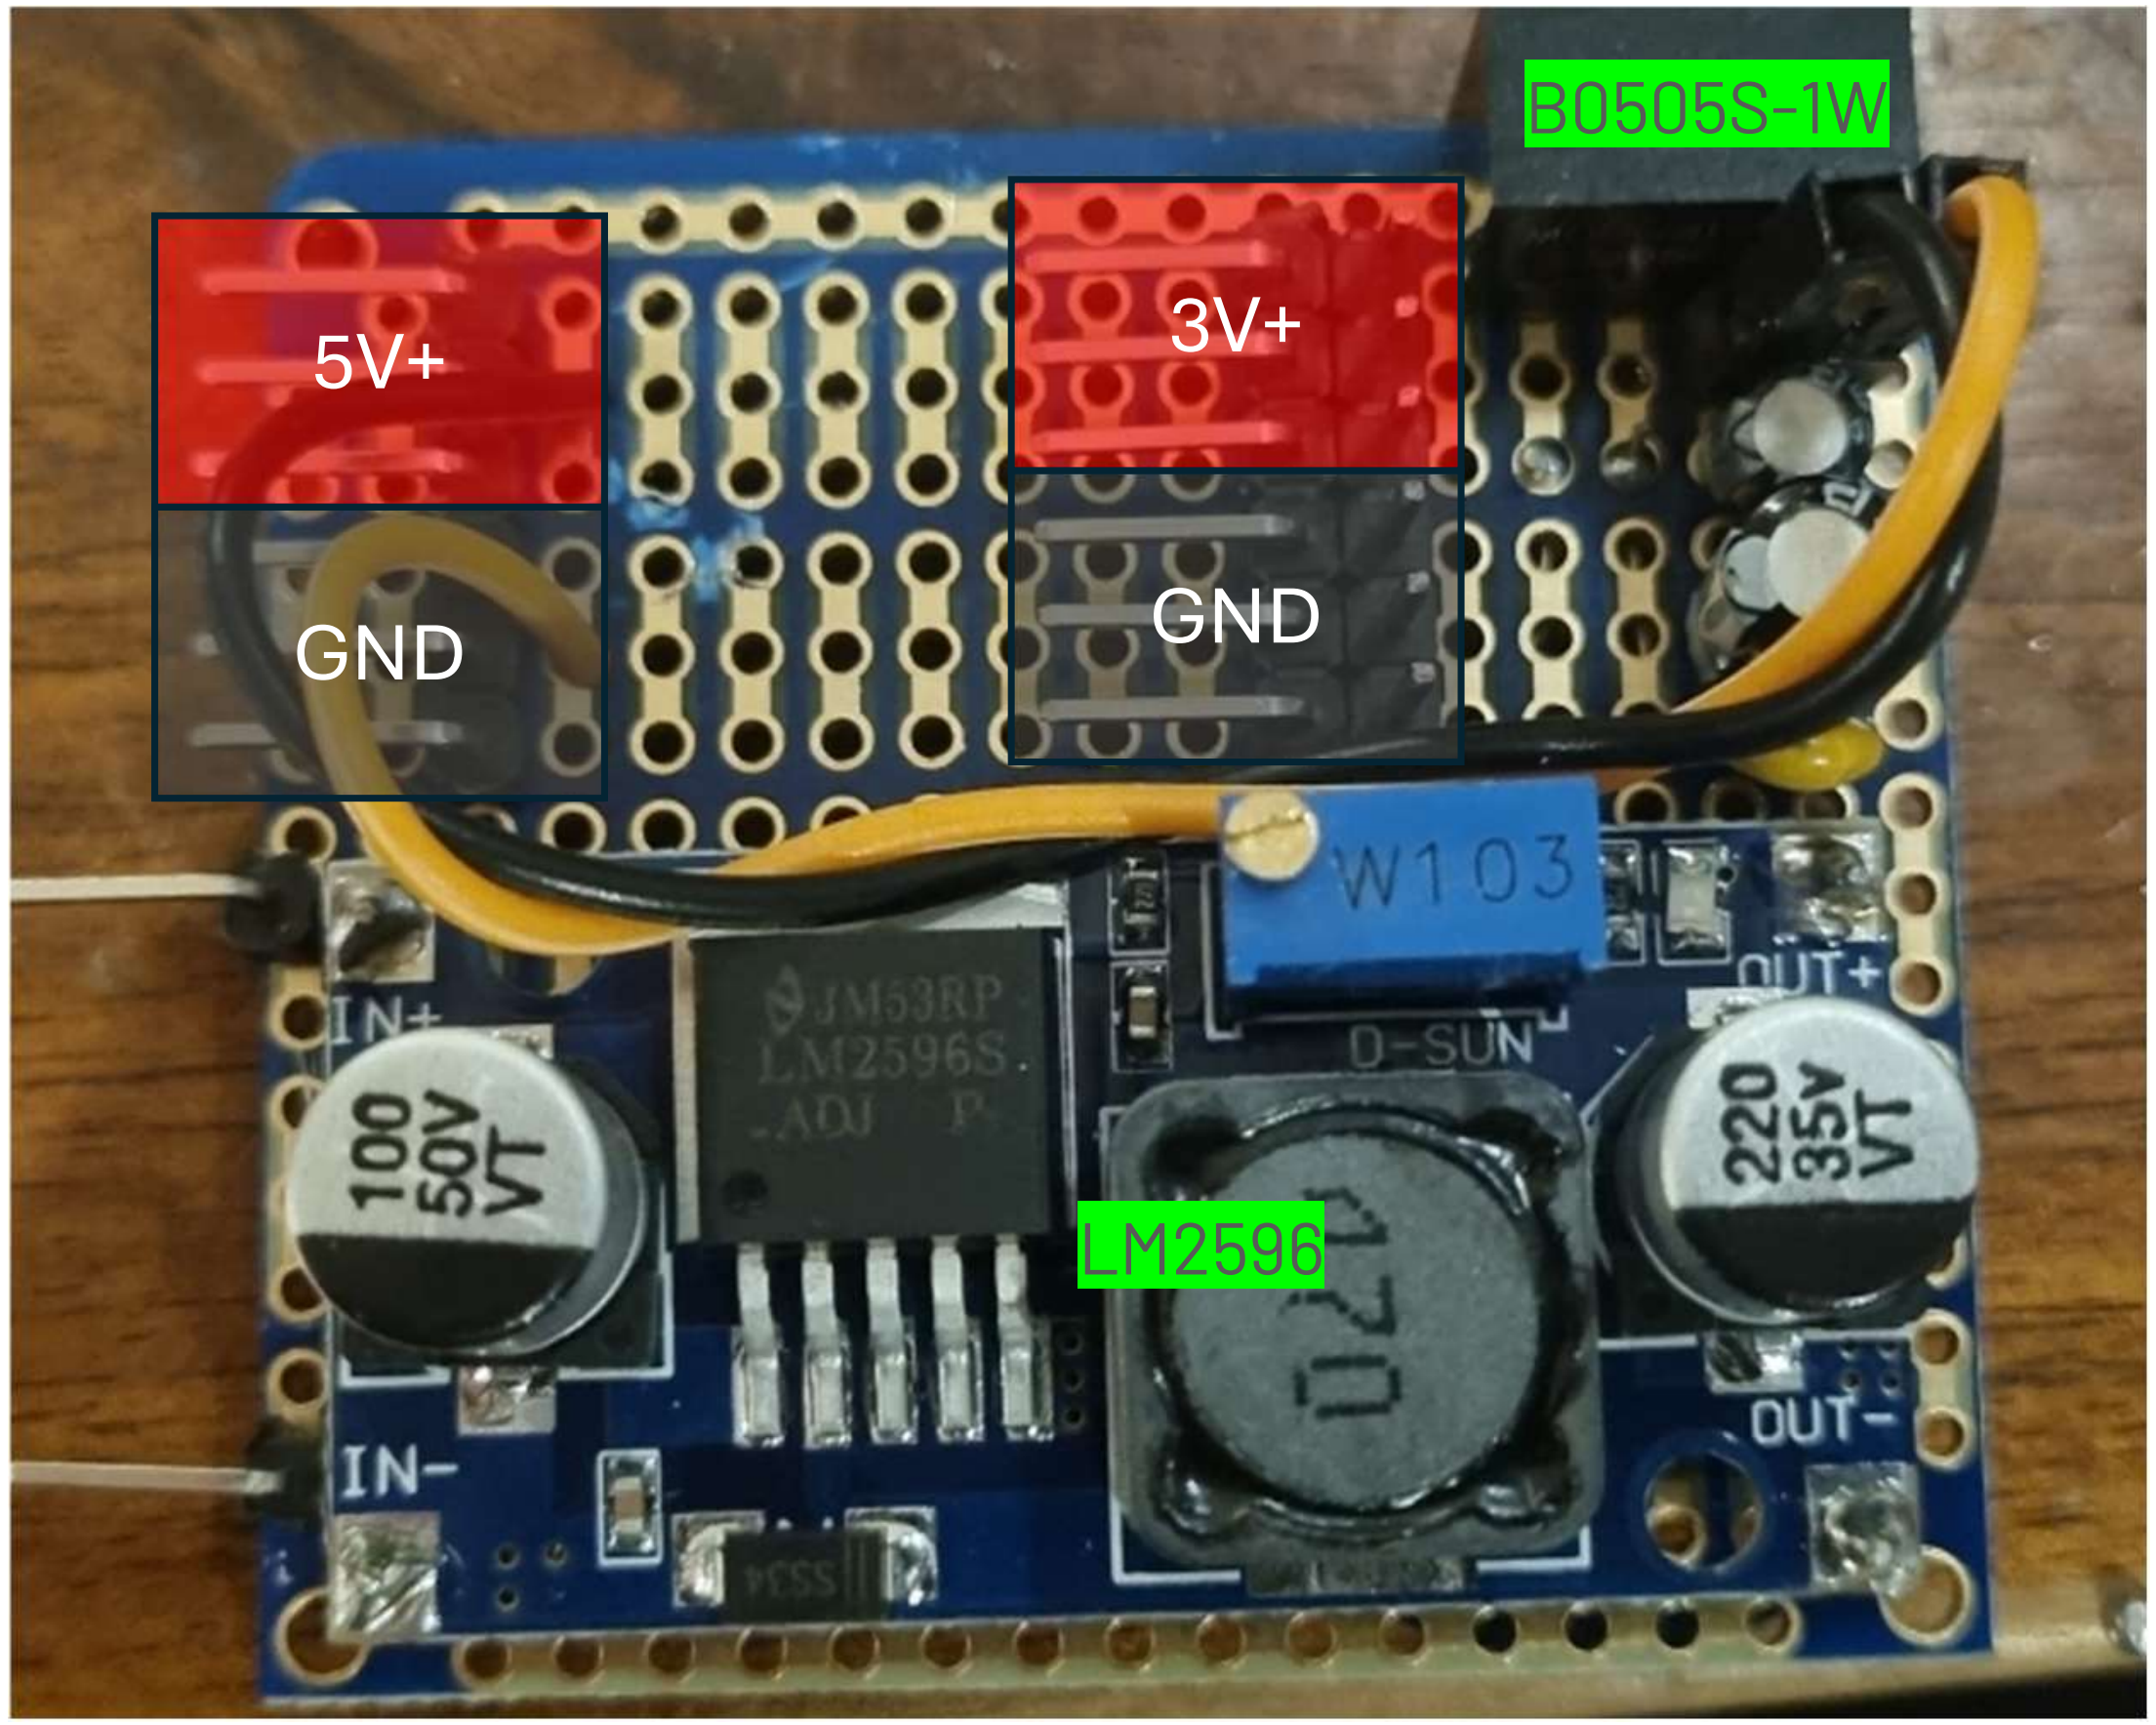

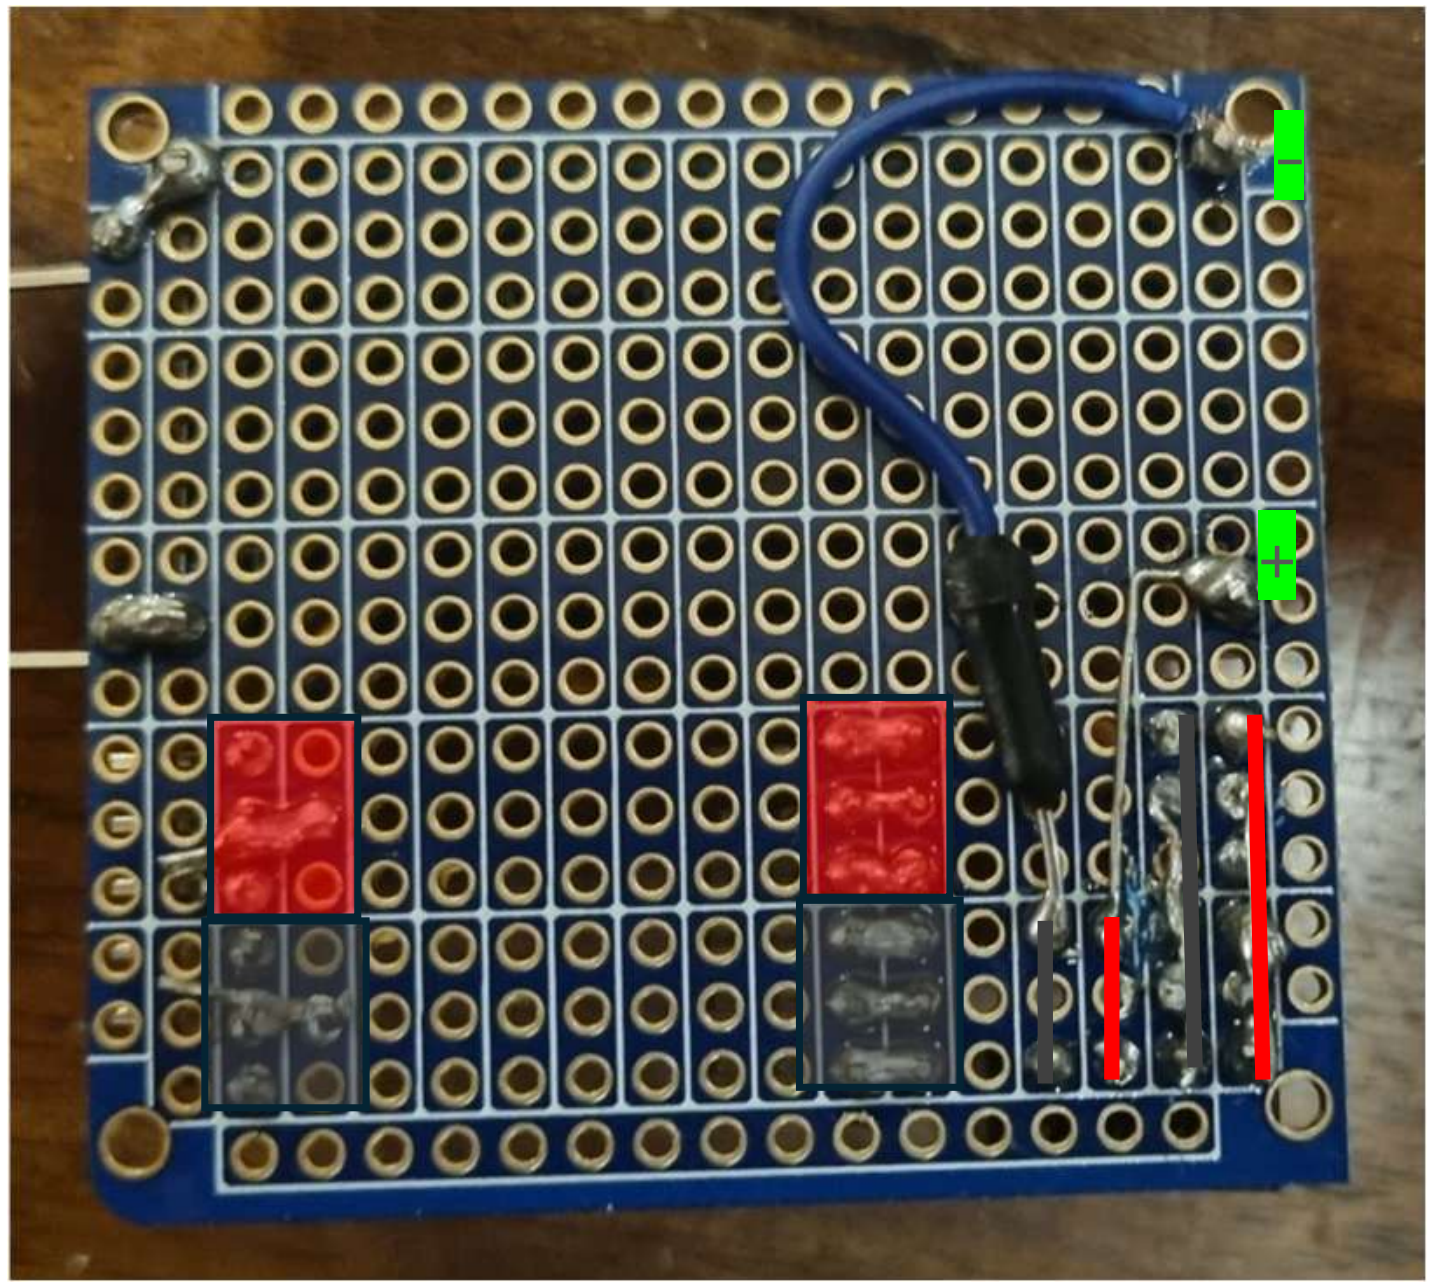

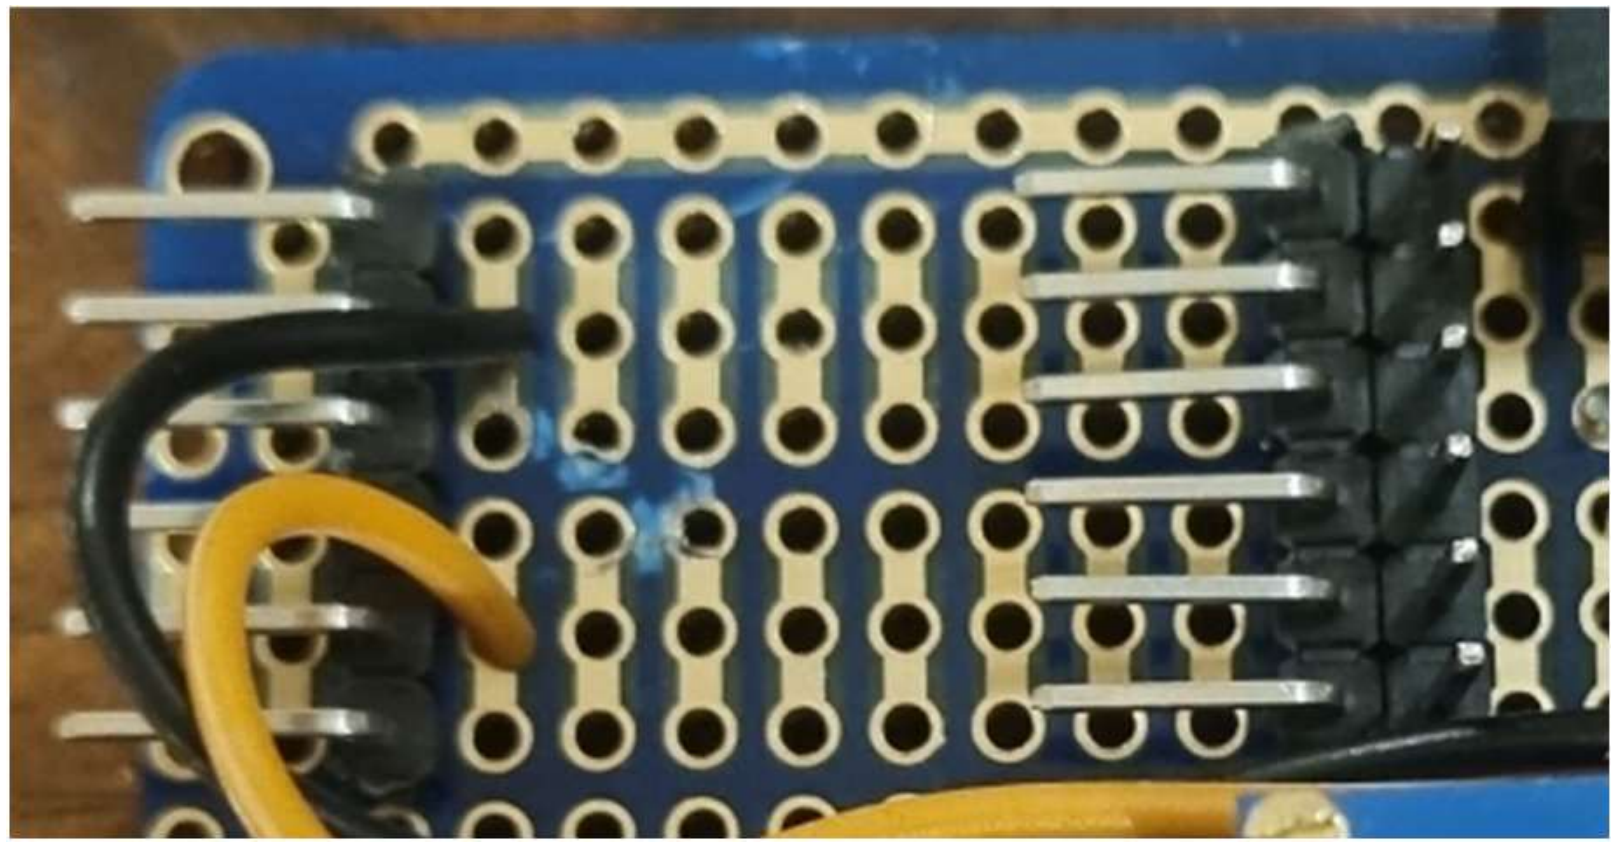

Test Circuit Board

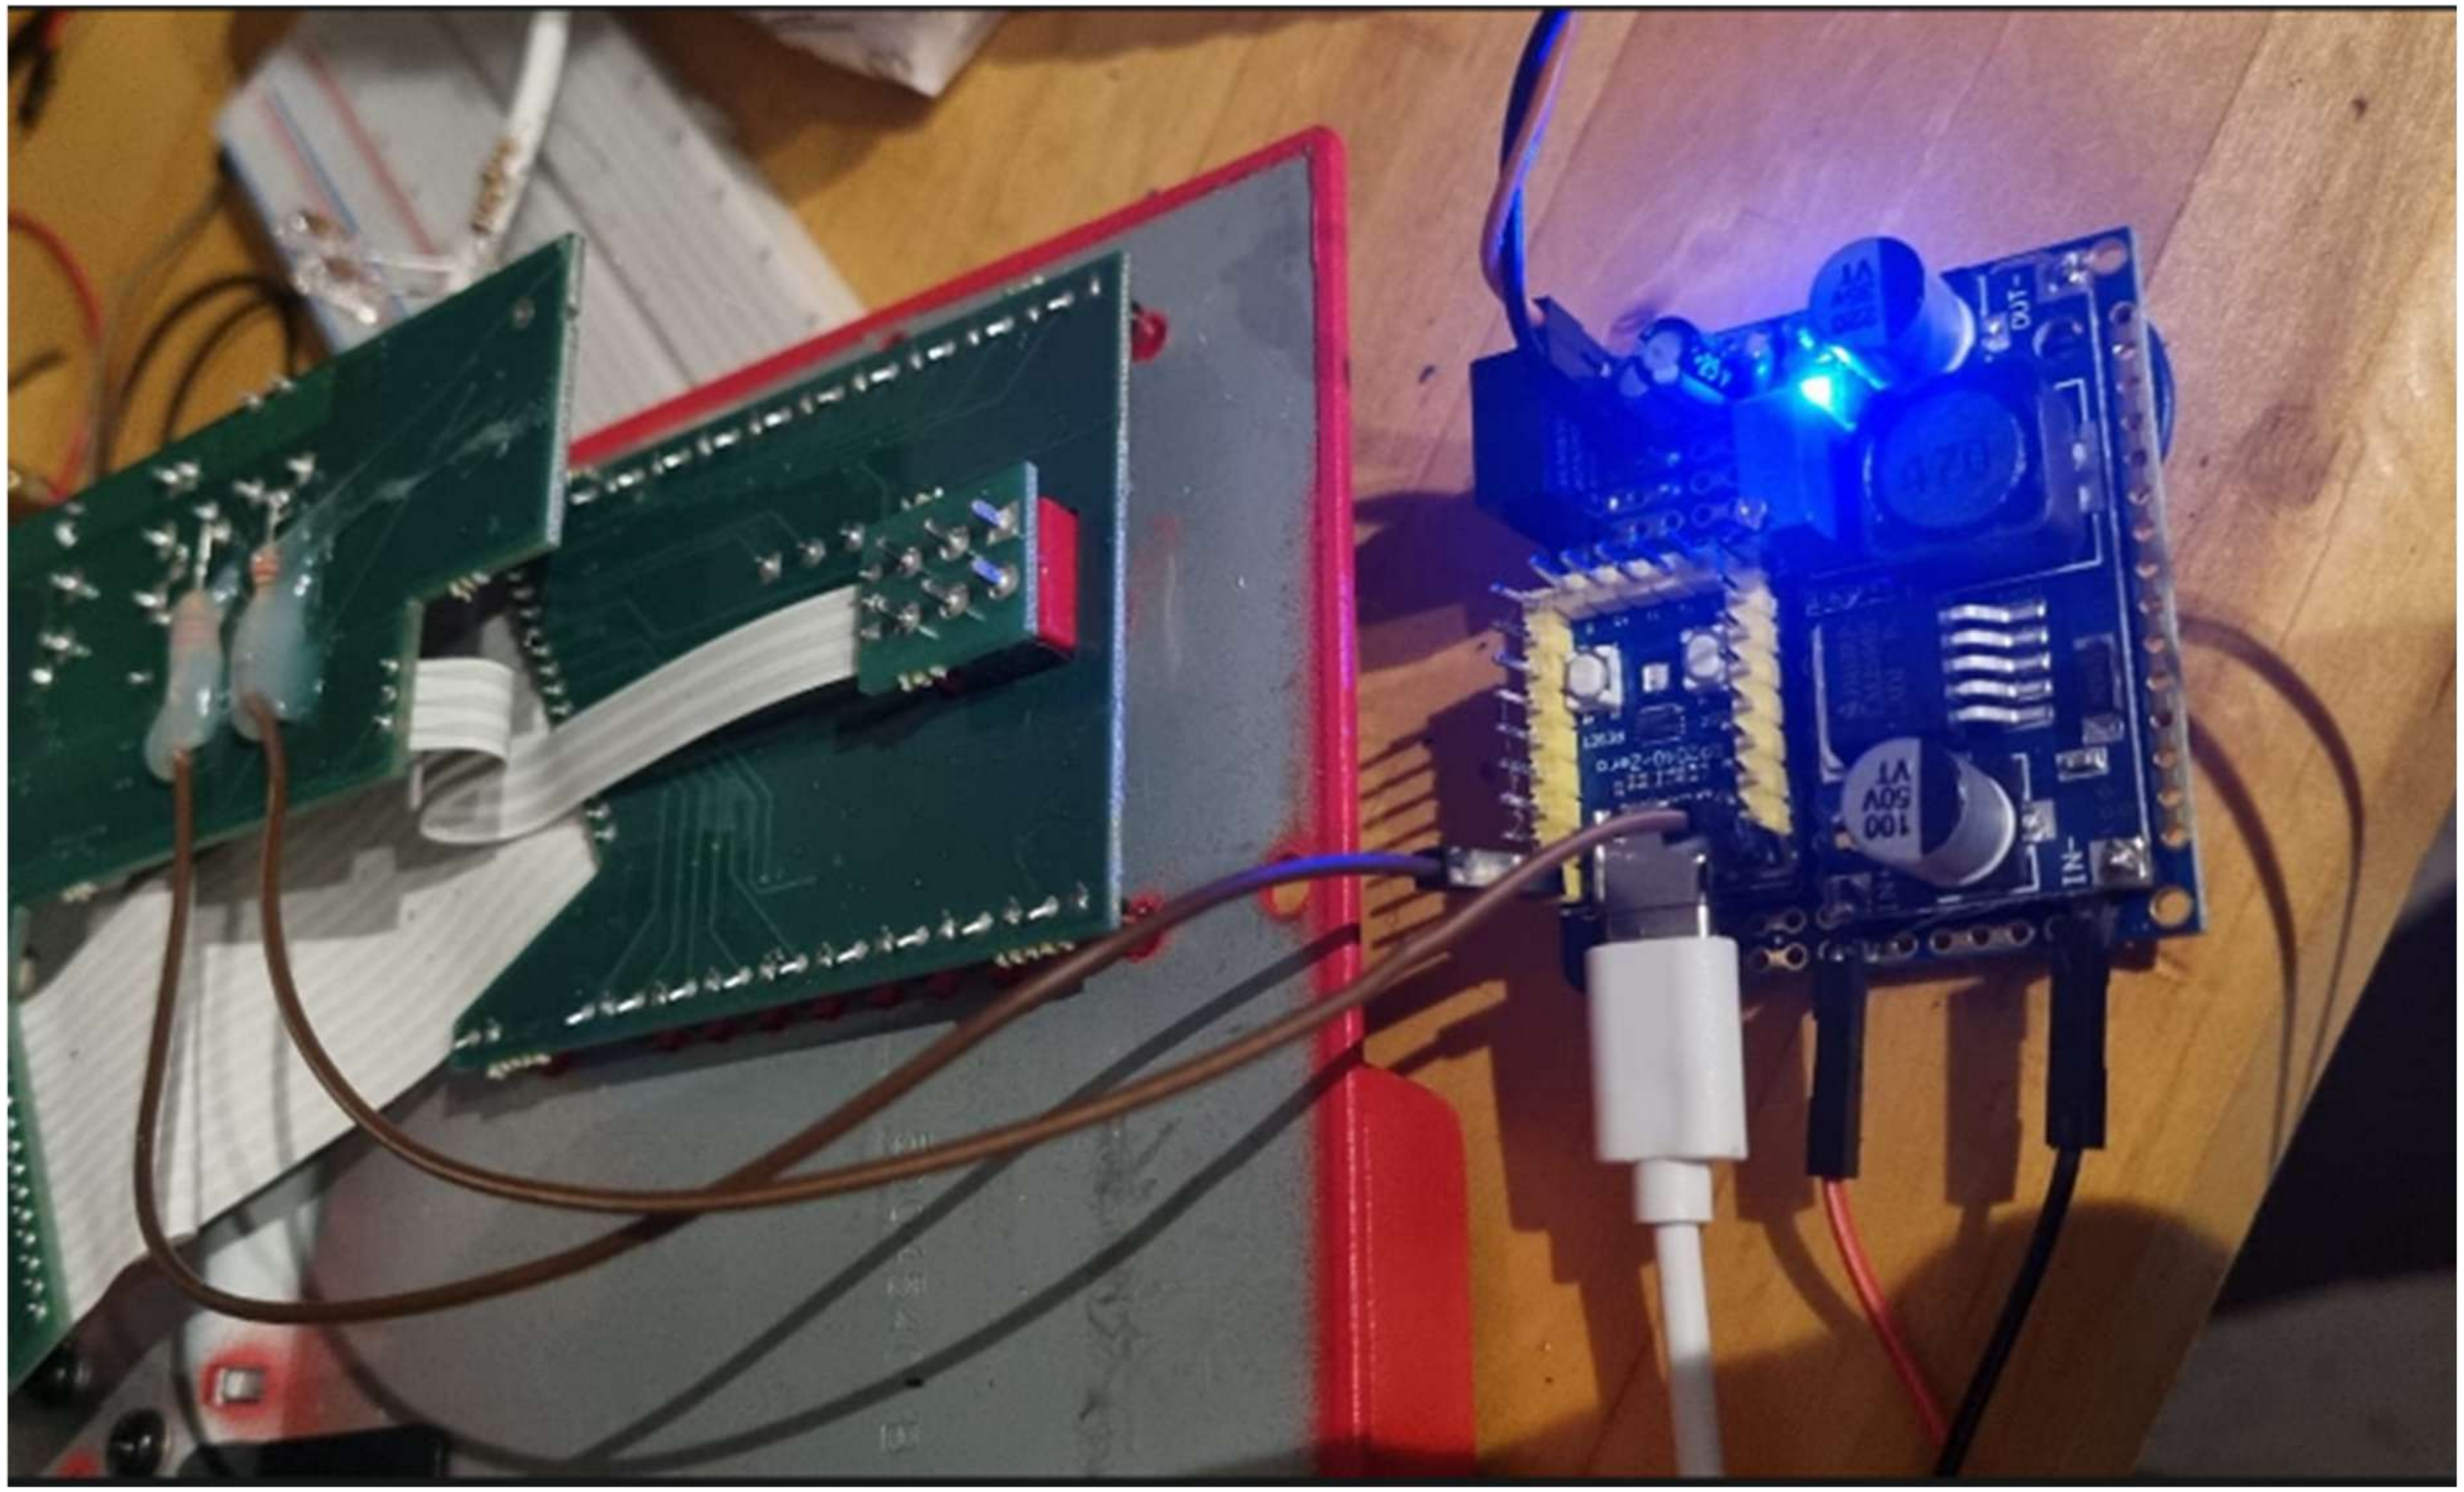

Display


R7 R6 R5 C5 C6
JMDO.96


GND VCC SCL SDA
Whammy 5
NEO TEST

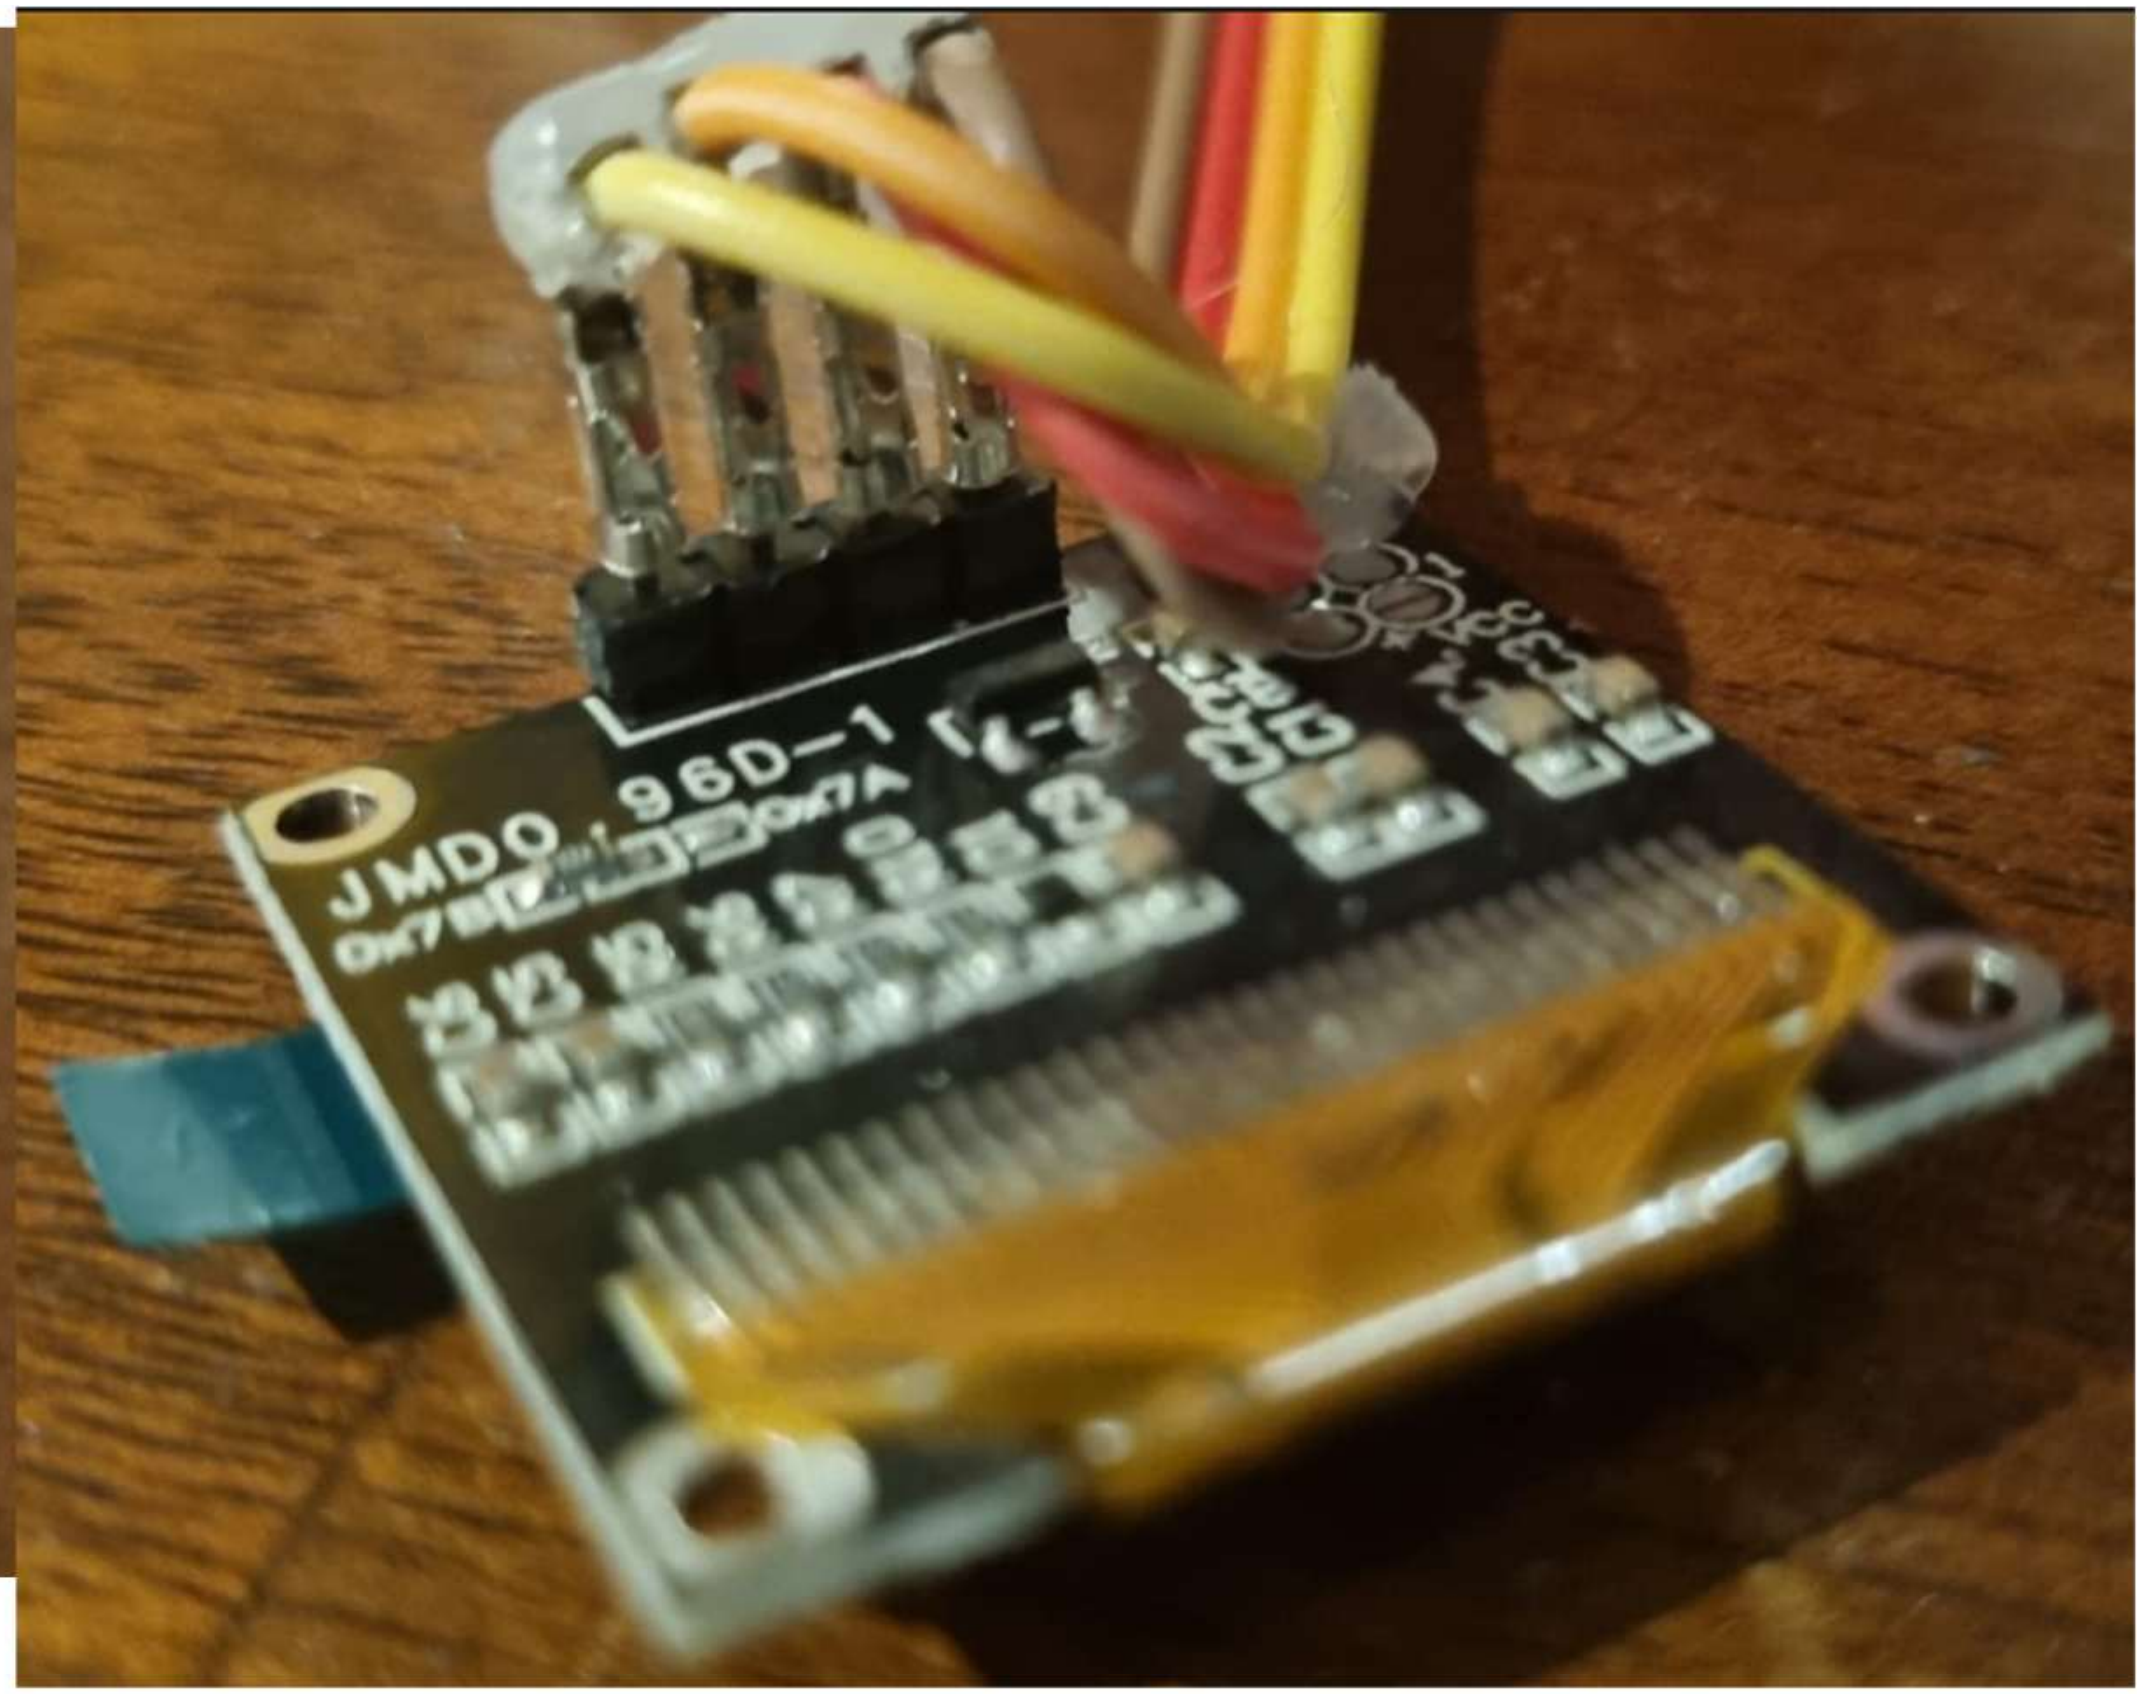
JMDO.96D-1

Display

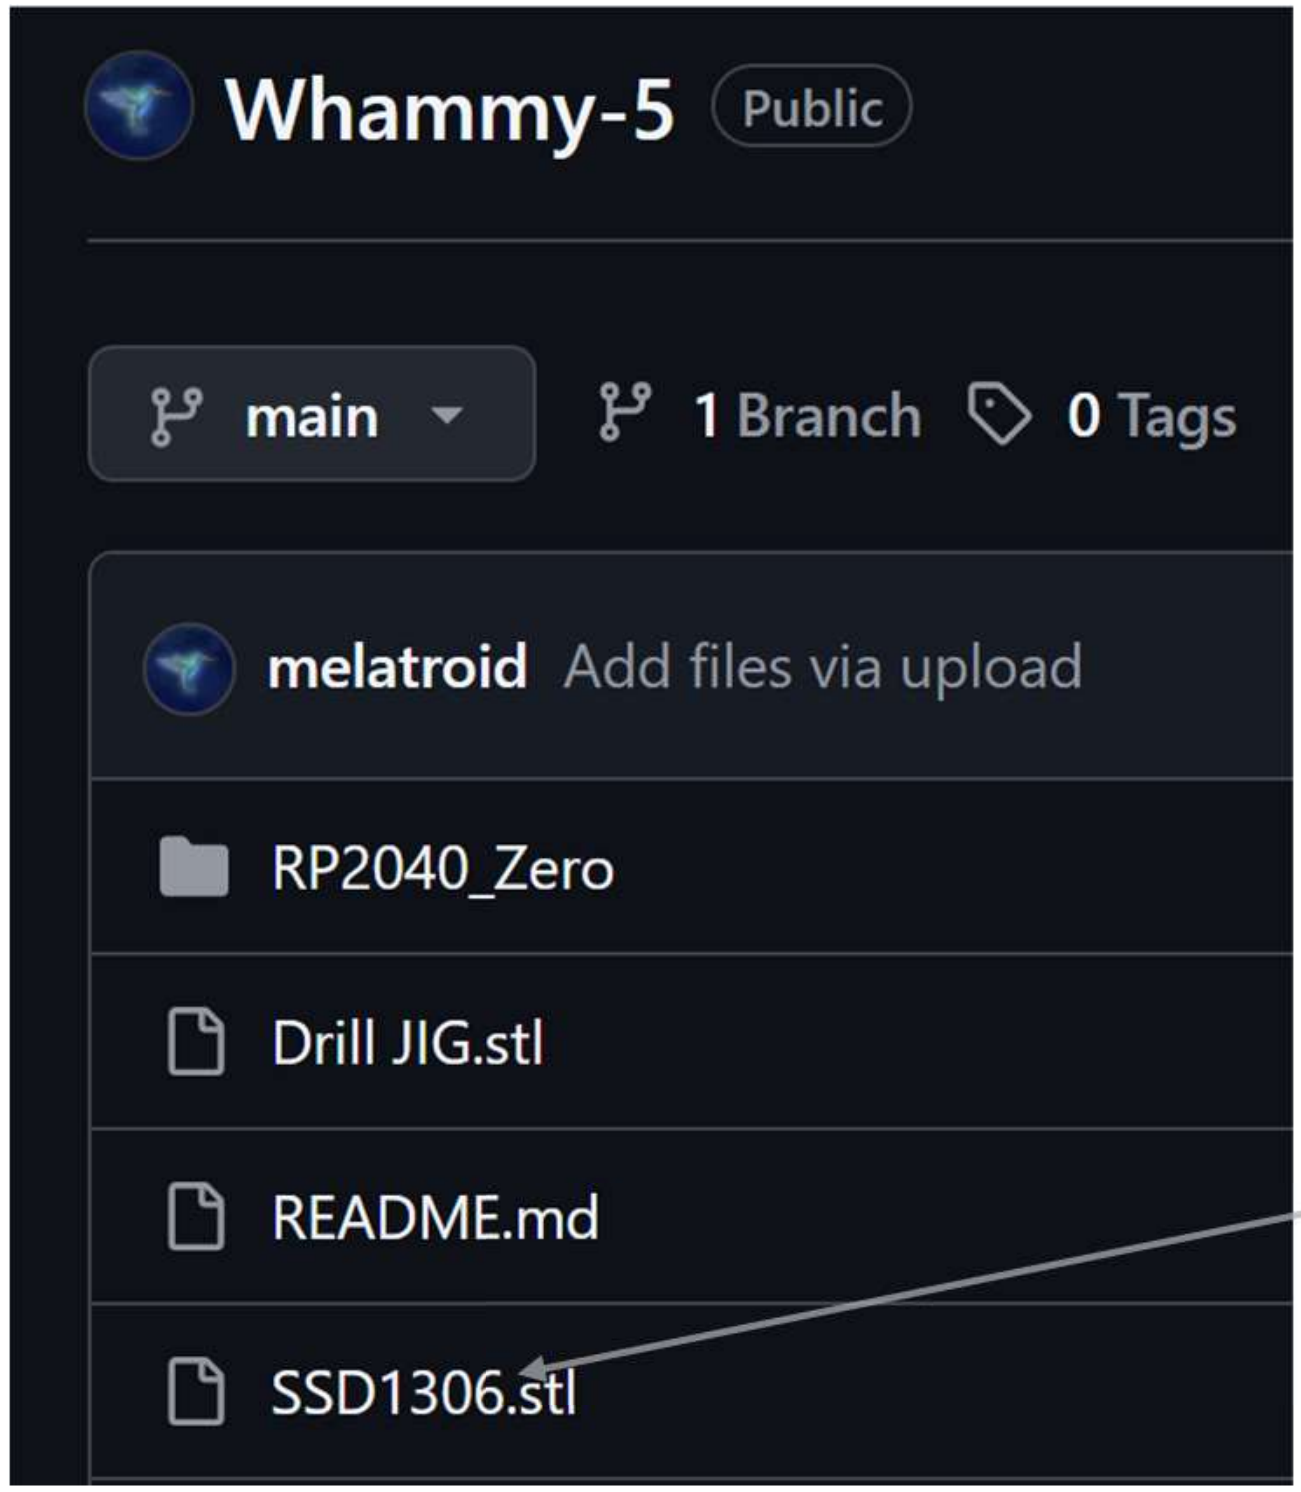

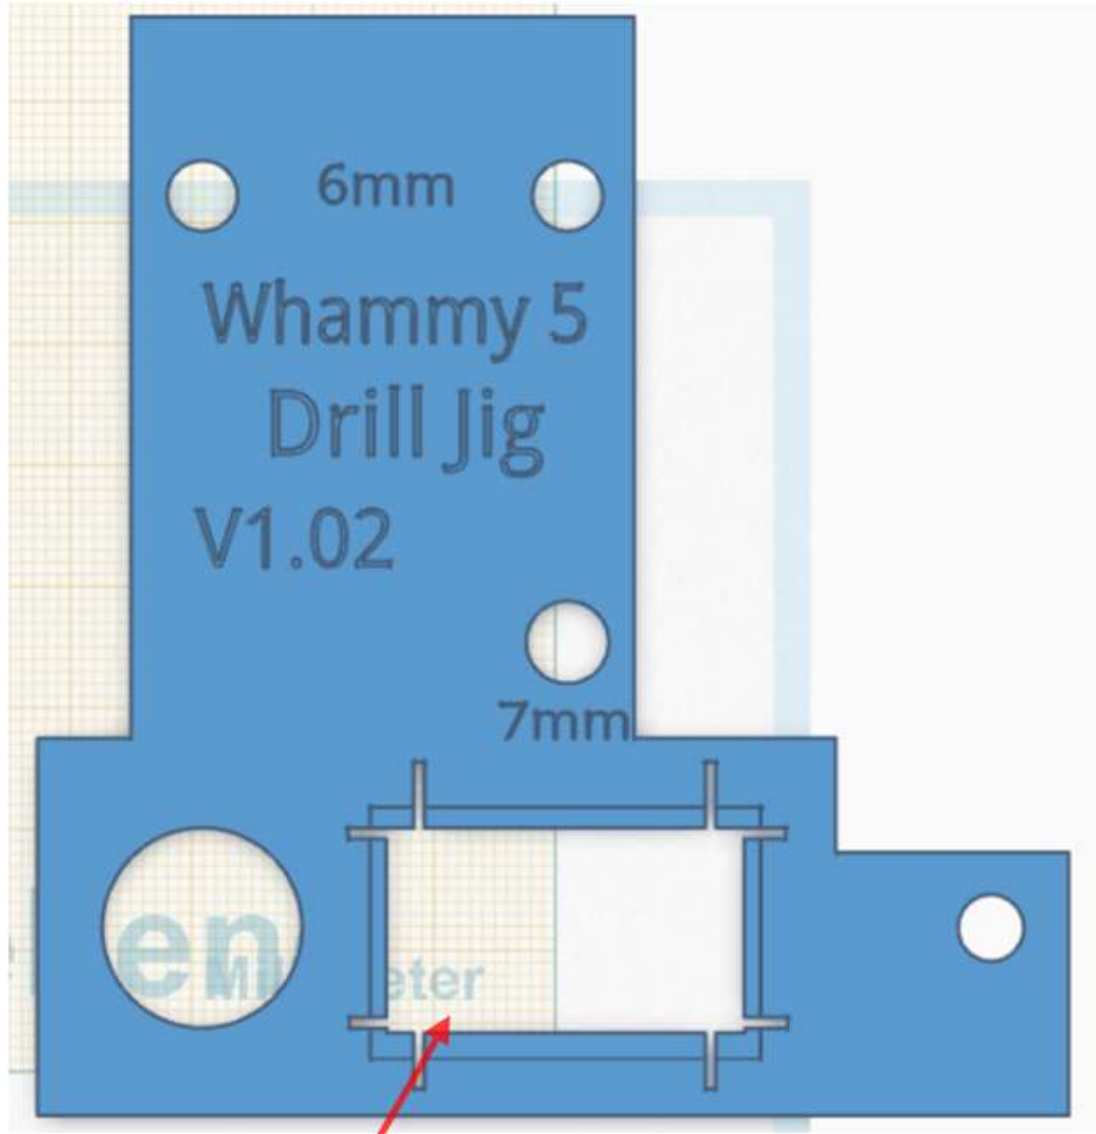

Print it with a 3D printer

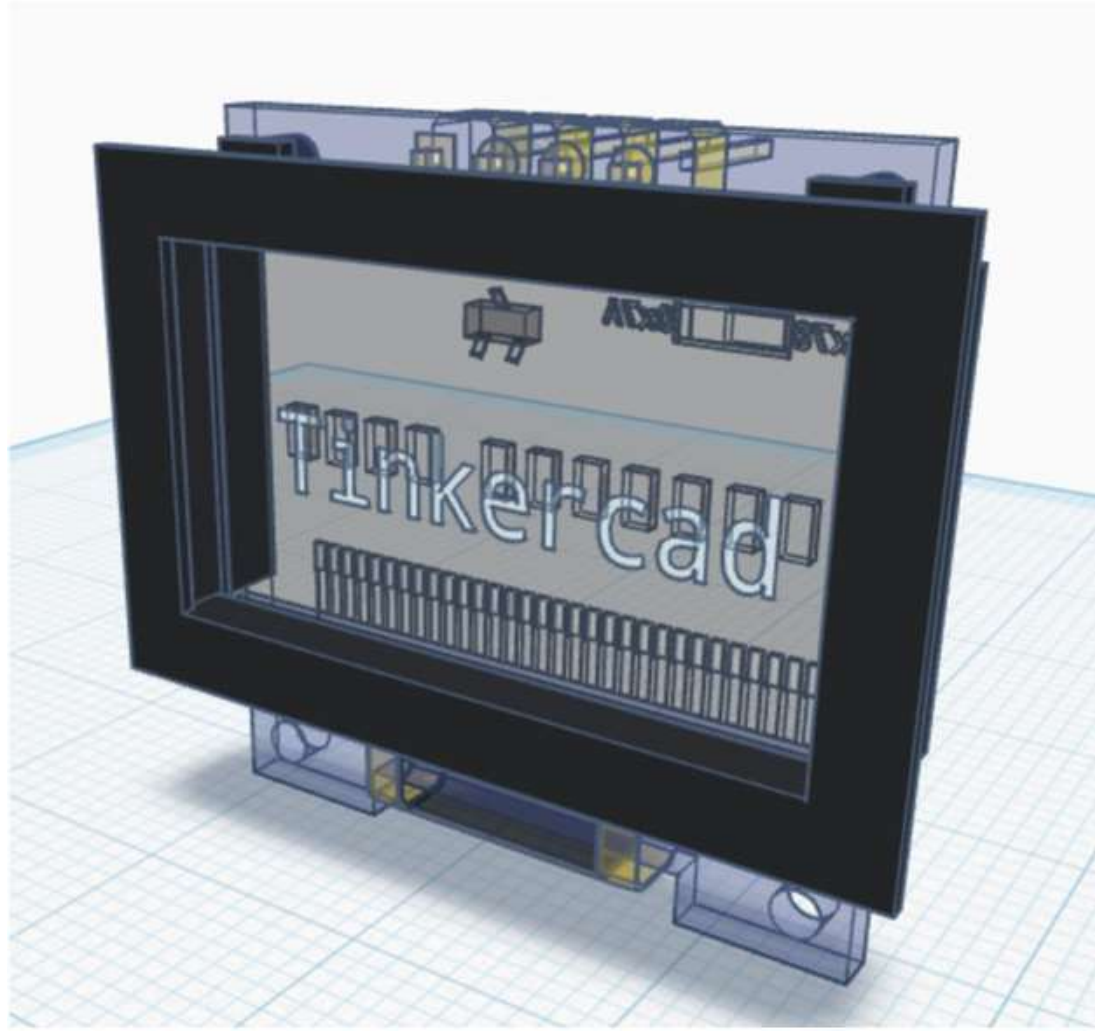

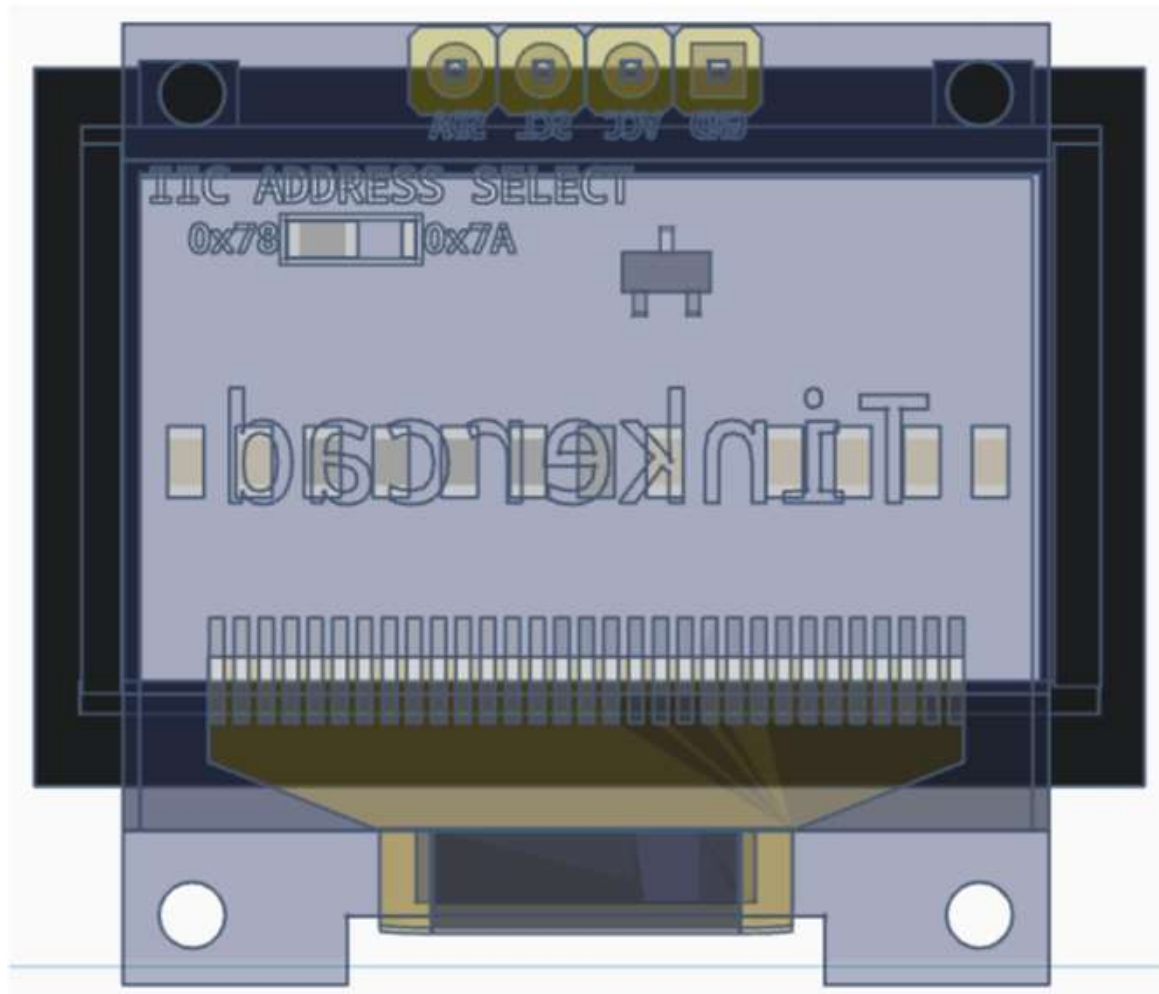

Calibration Switch

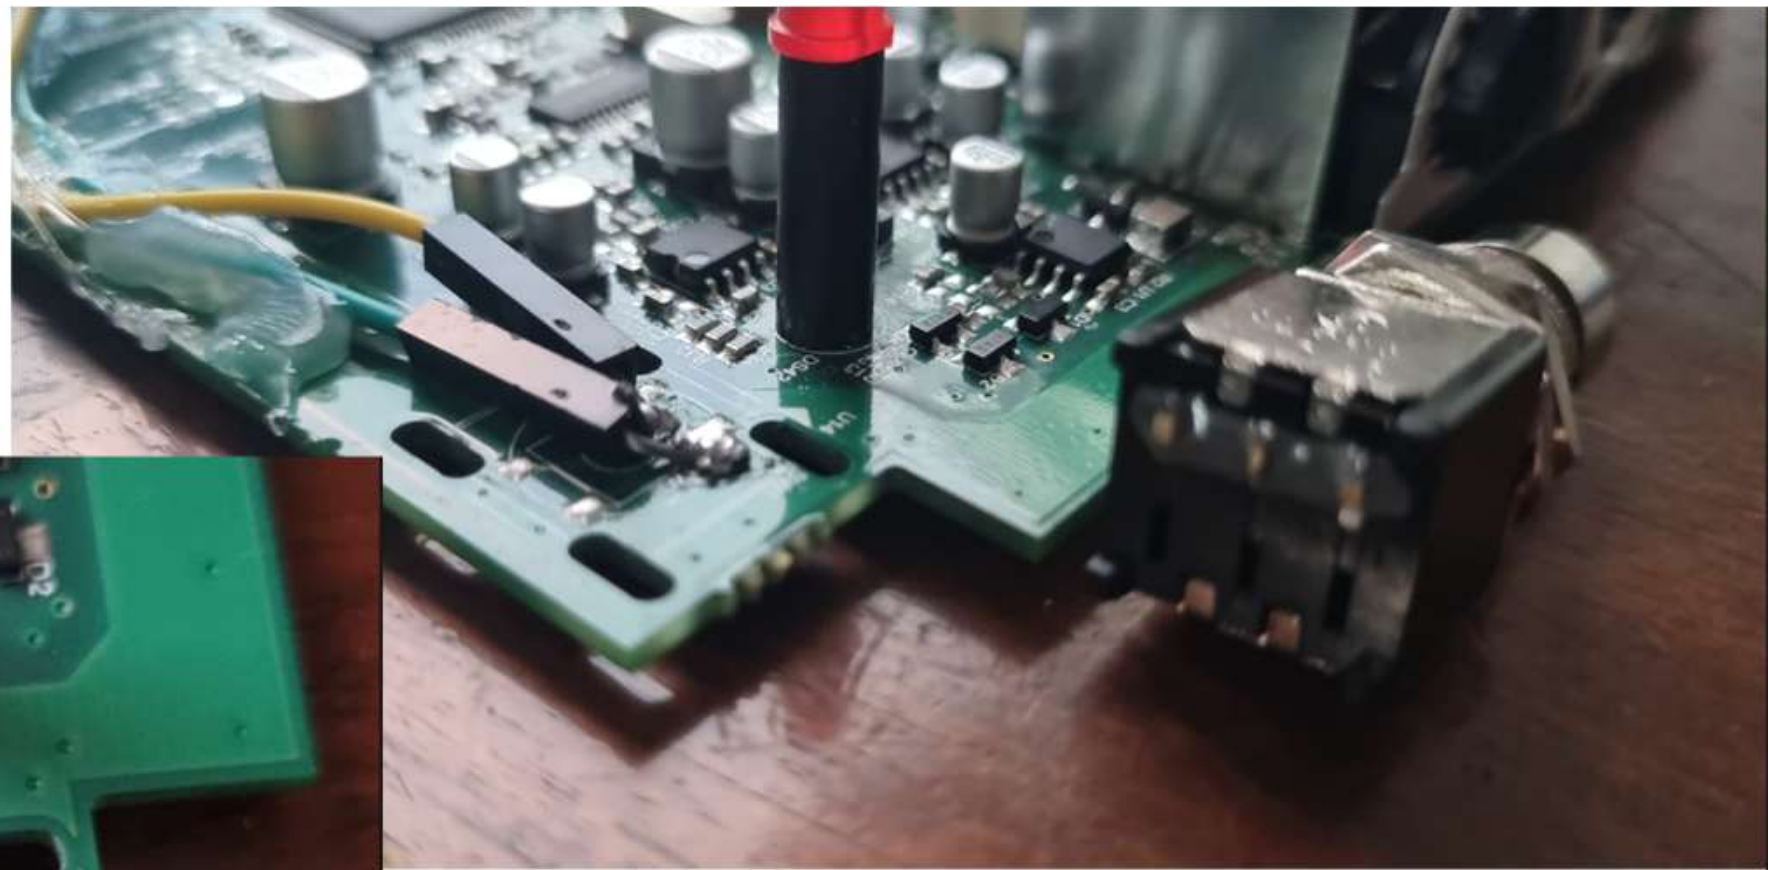

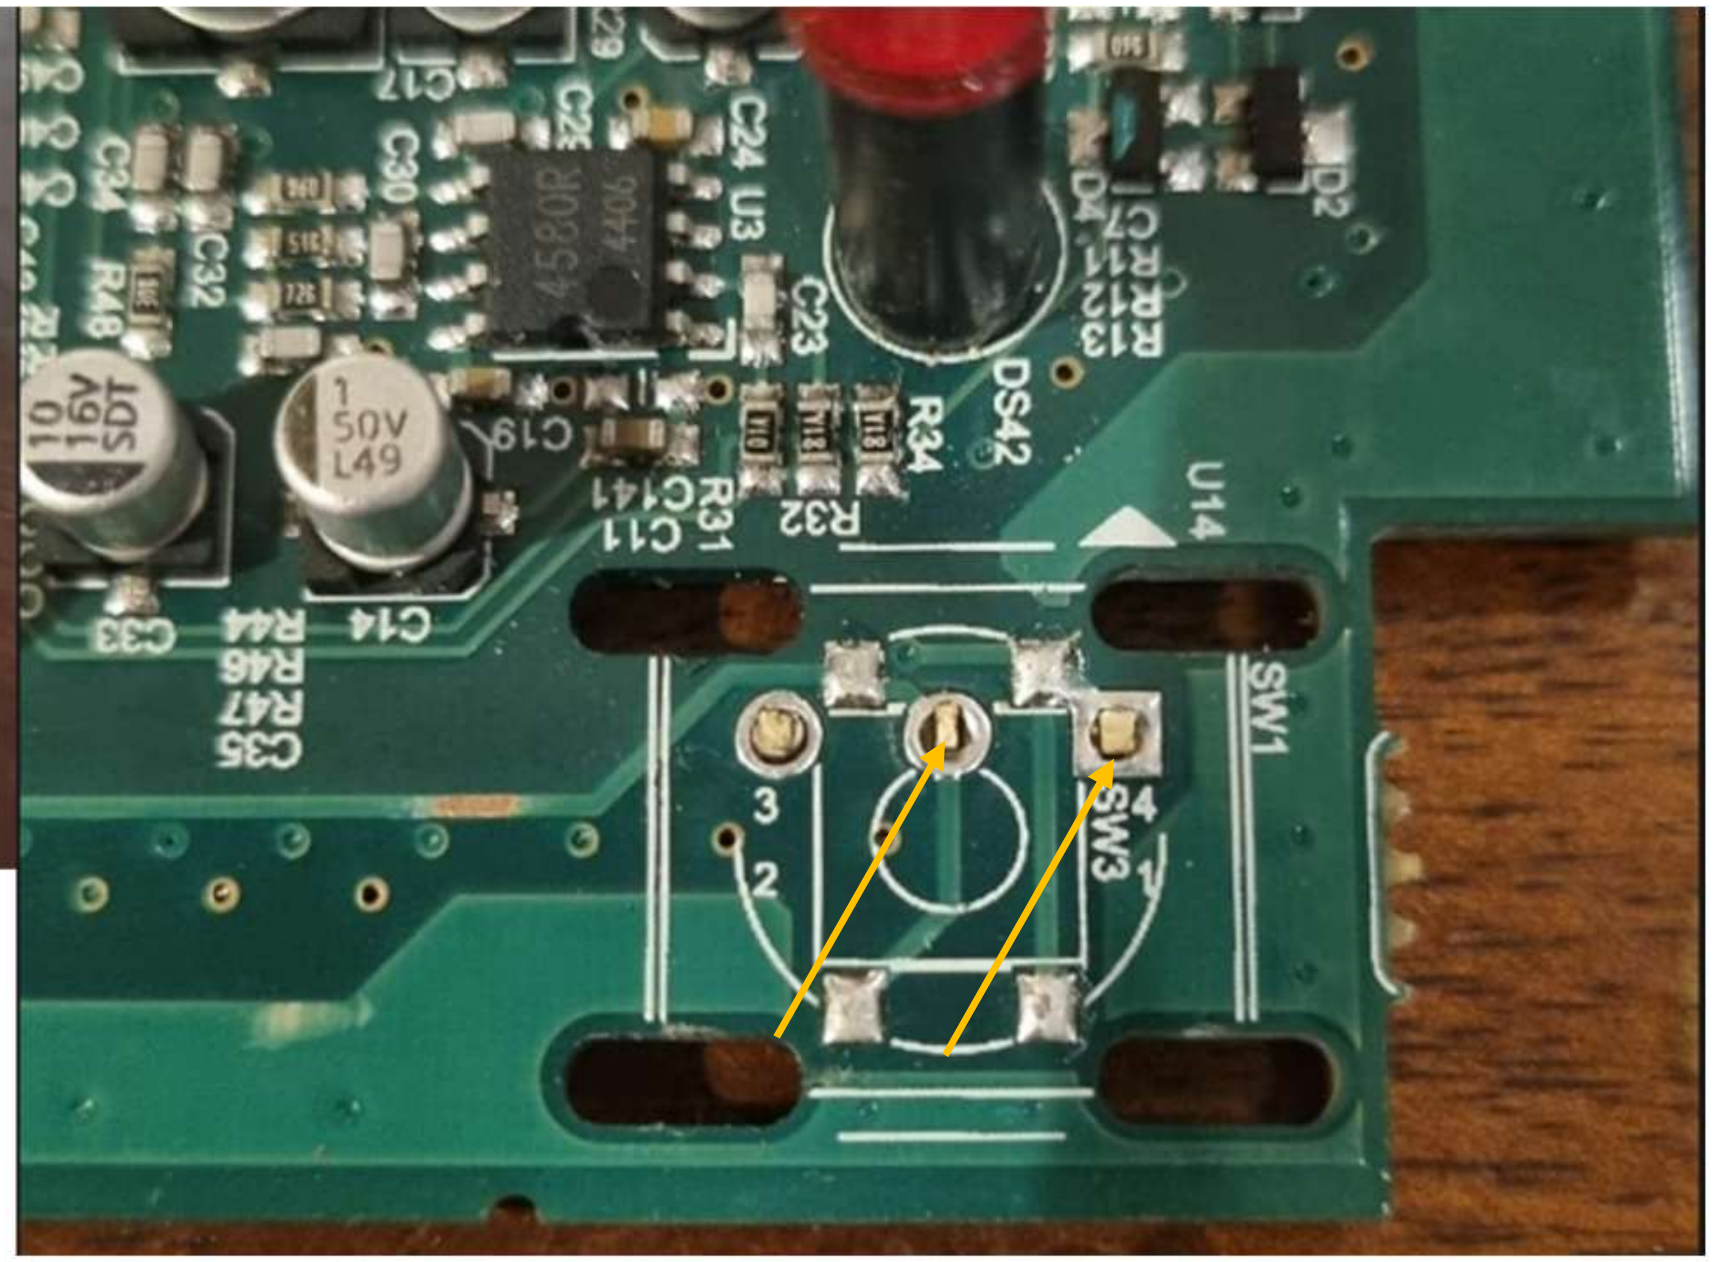

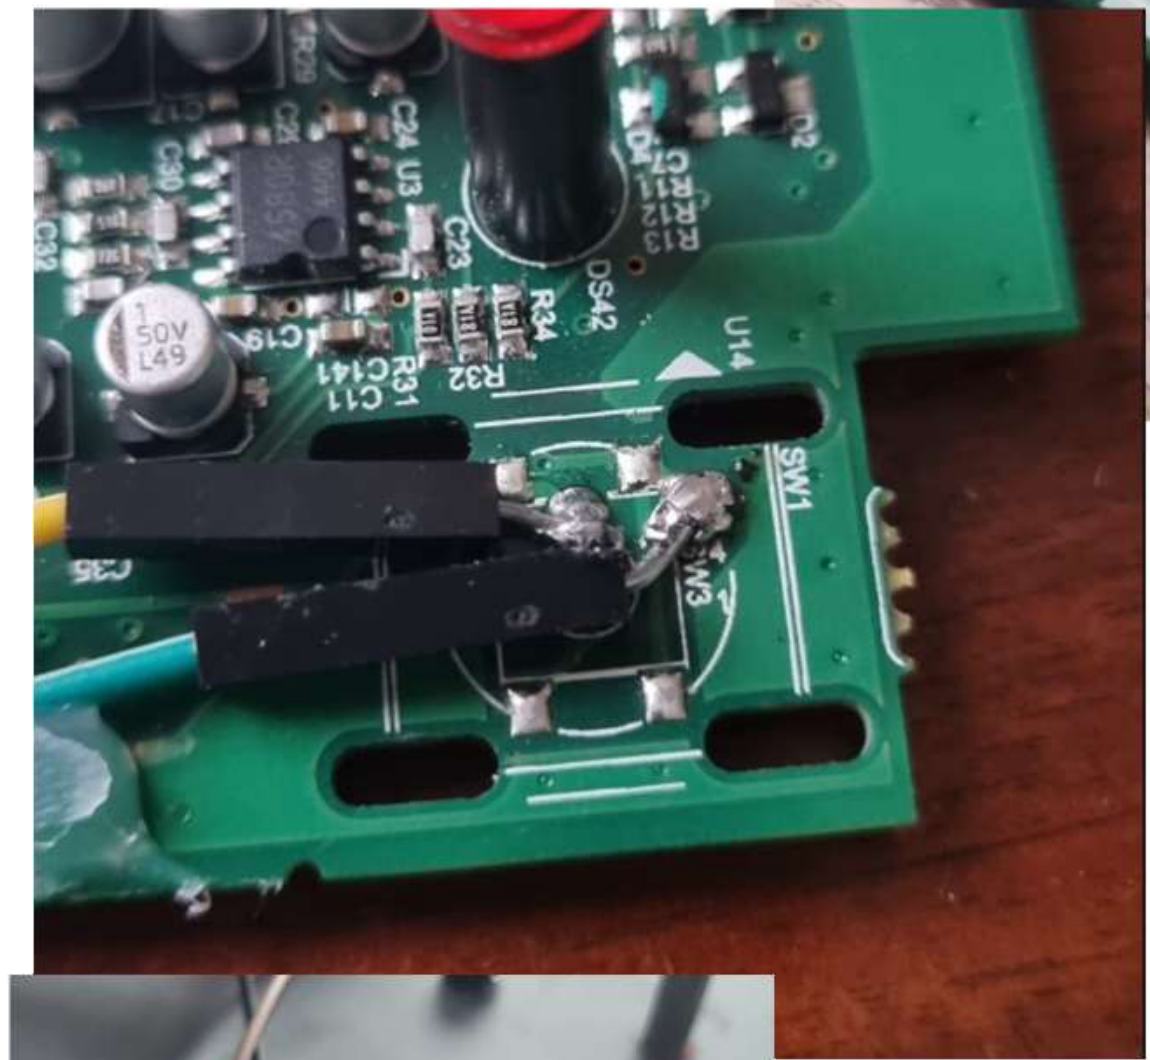

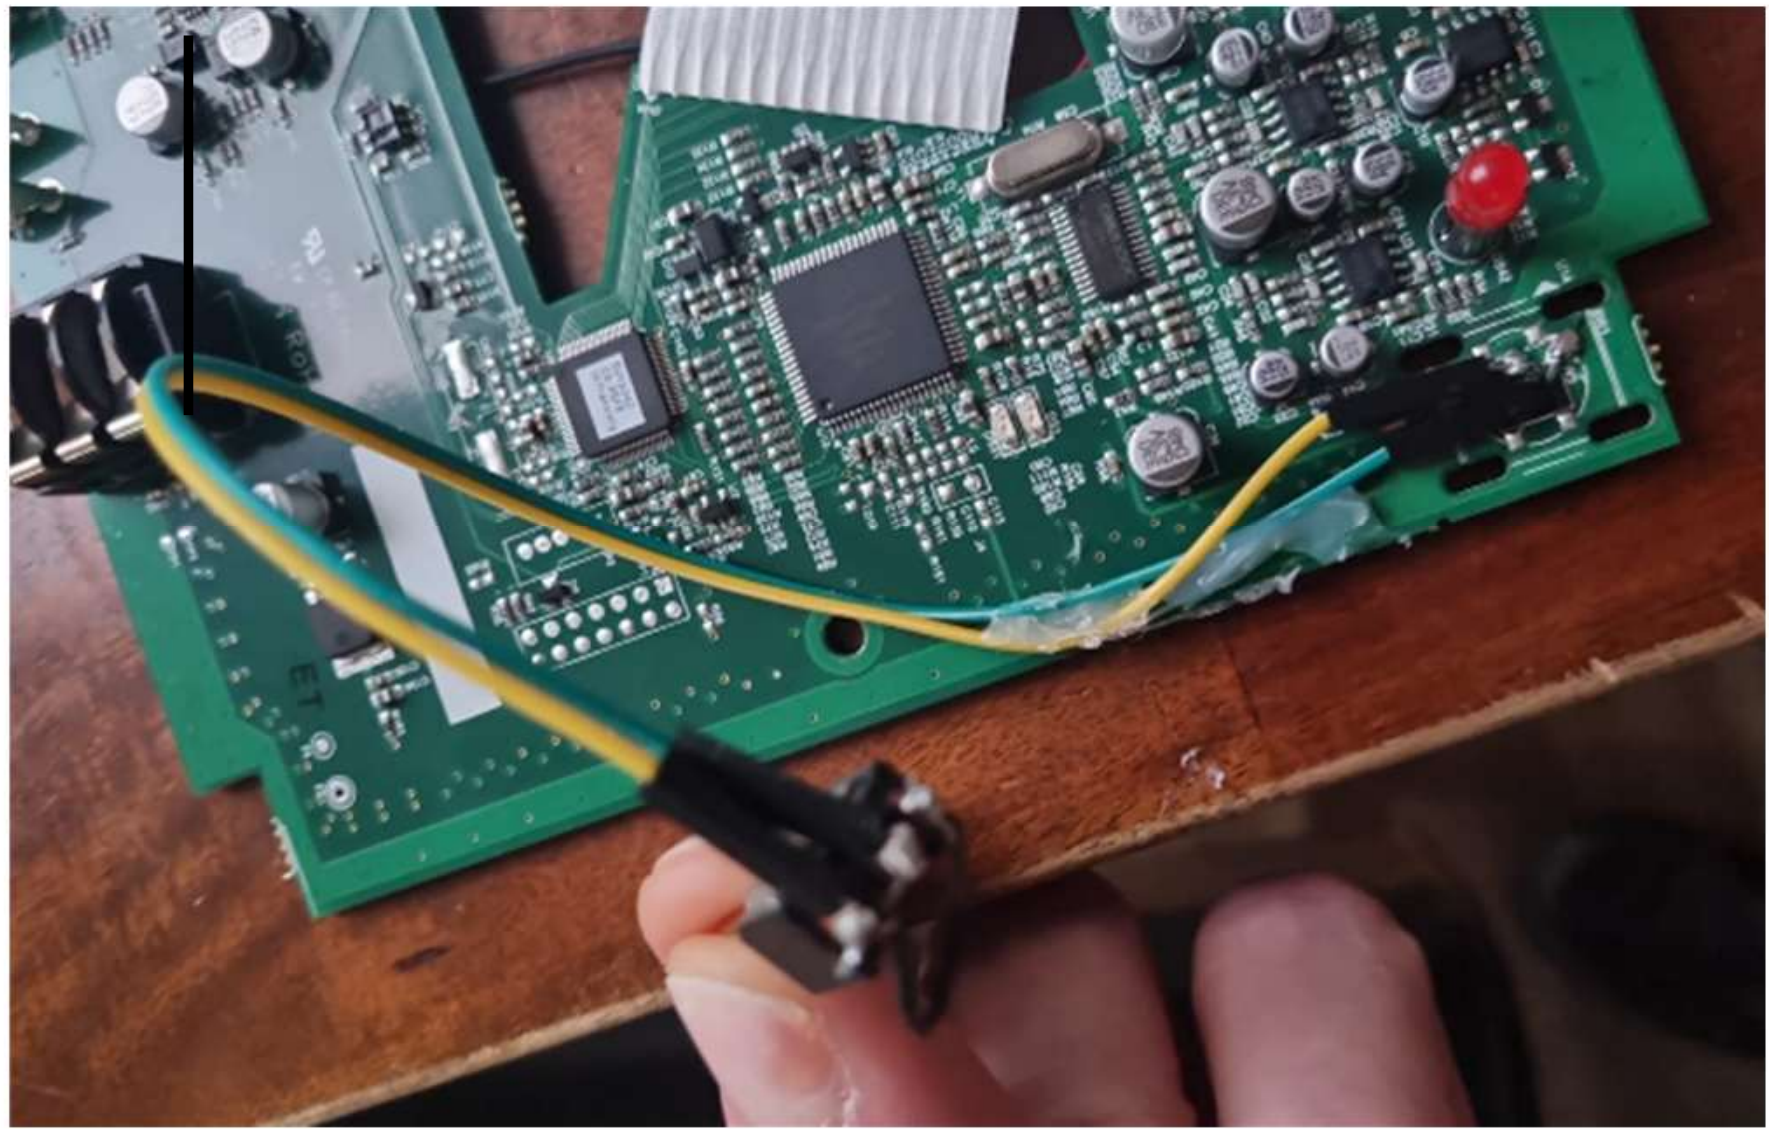

Remove the original Effect on/off switch by wiggling it back and forth so that the contacts break off on the switch side.

If you need more solder space, do it from behind.

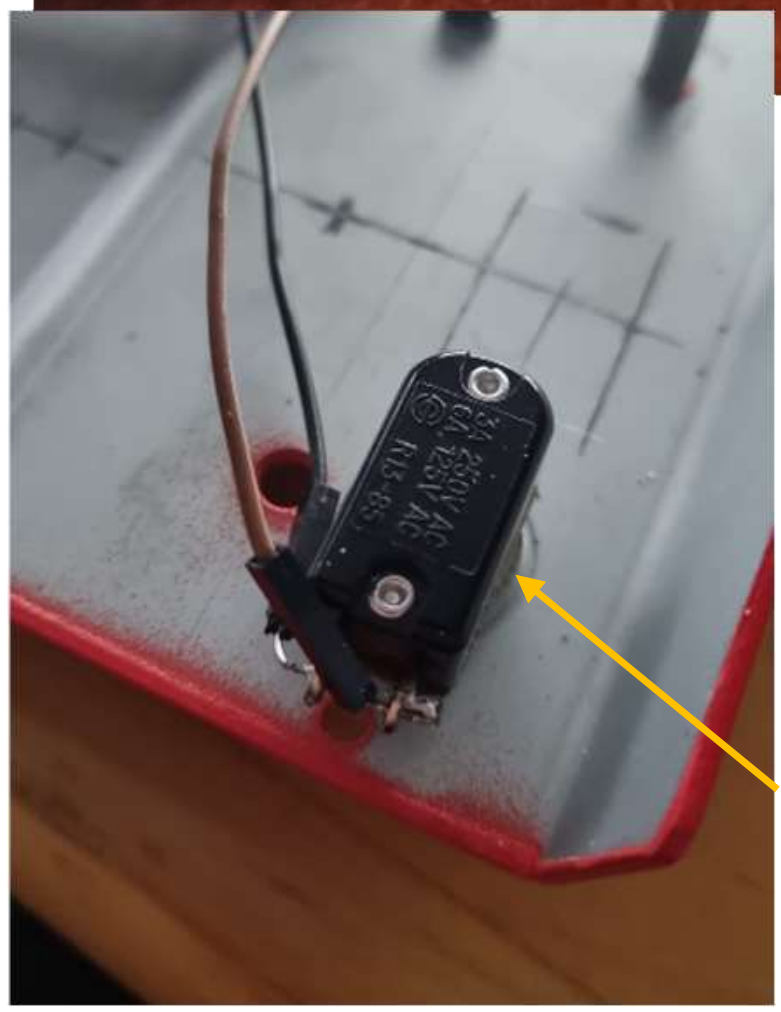

Replace the original switch with the SPST.

Classic / Chords

Cut cable in

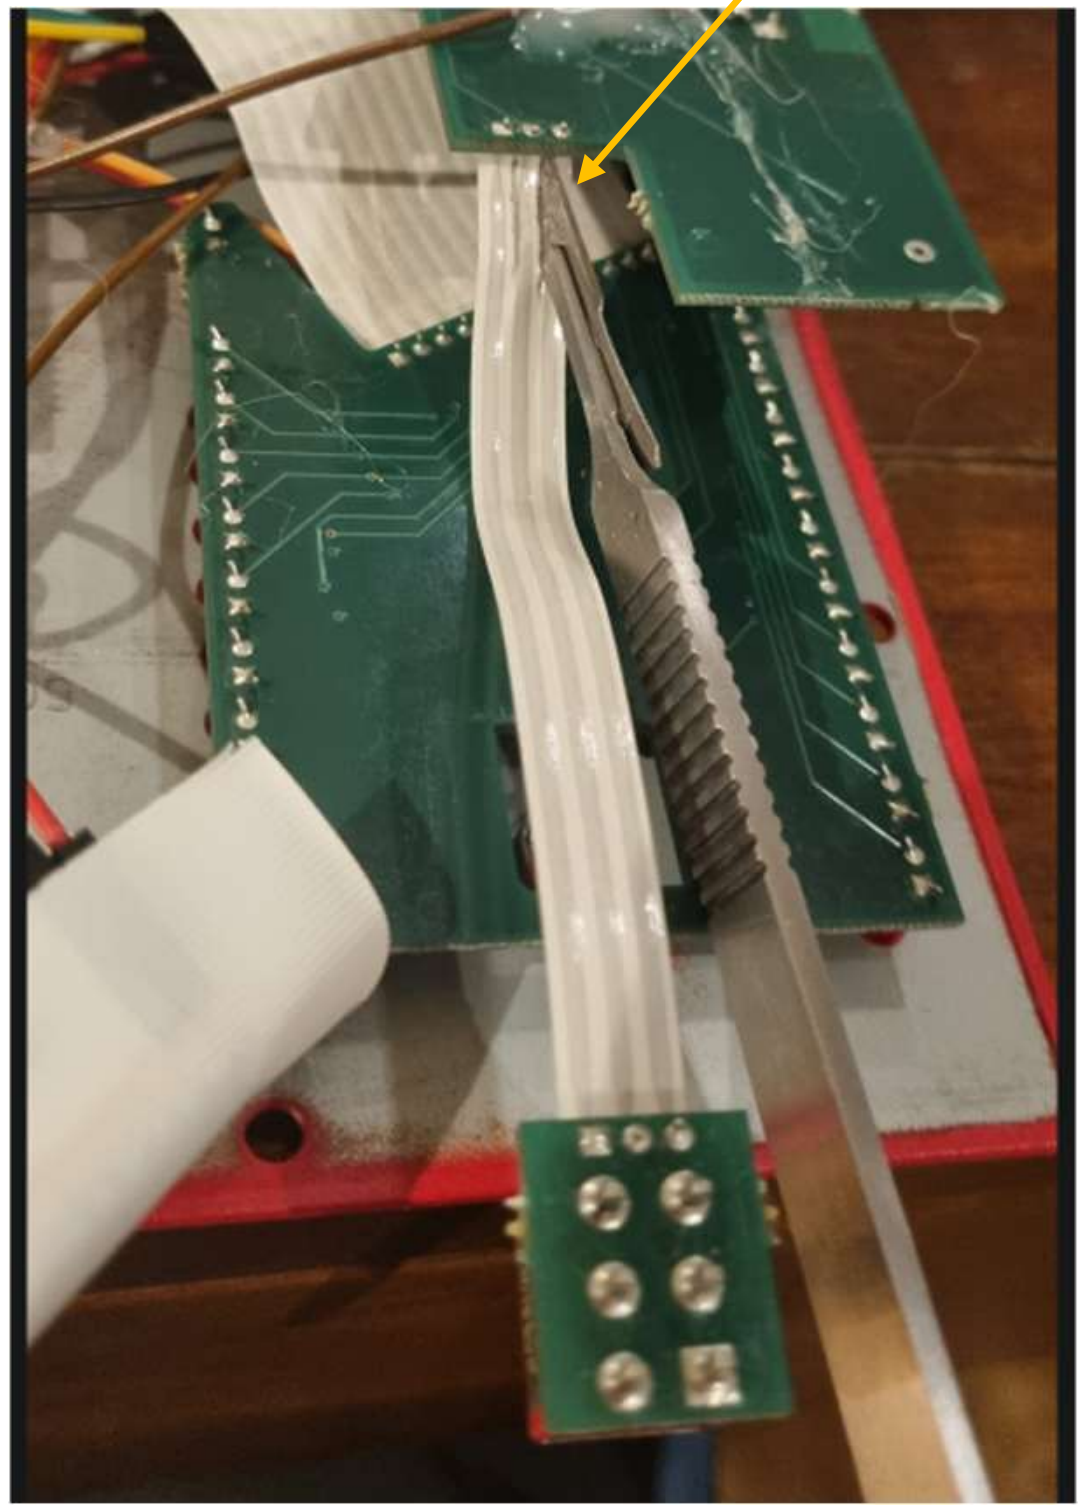

Solder cable out

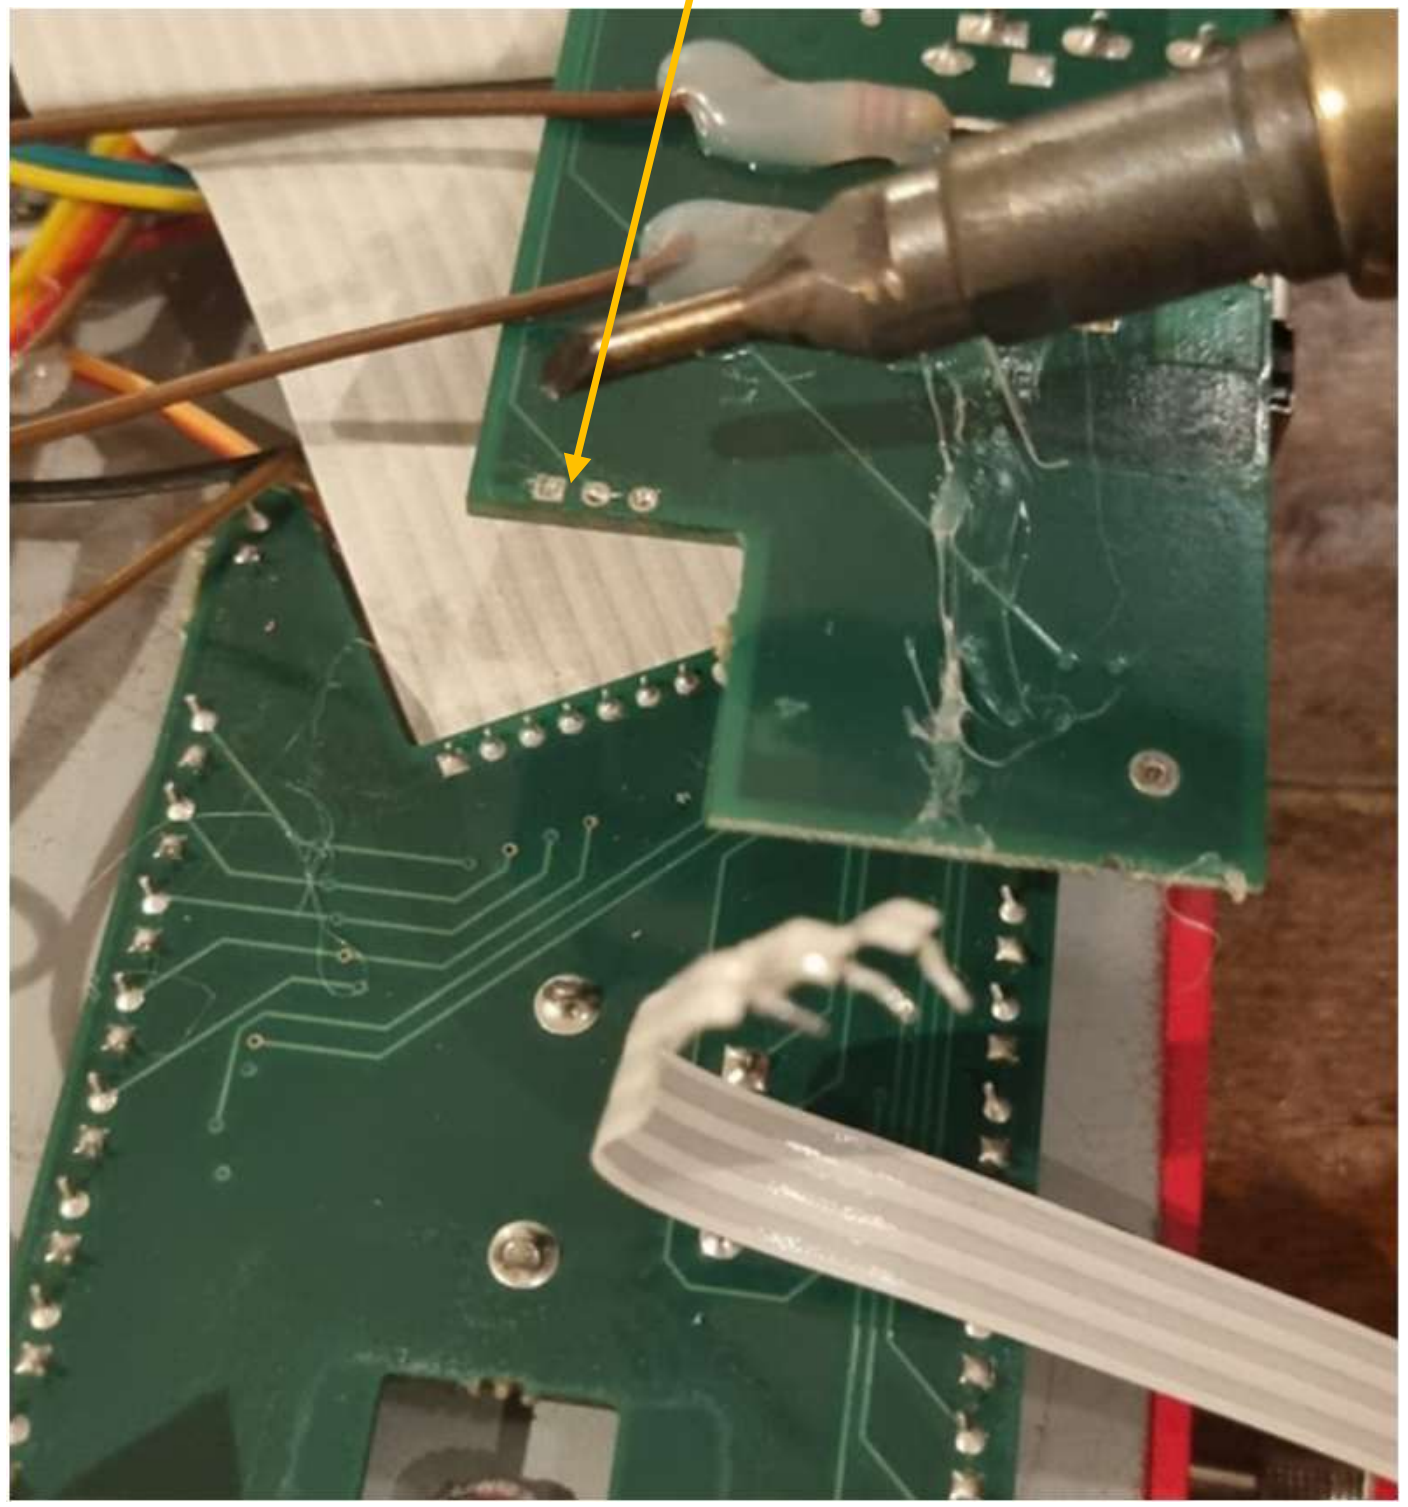

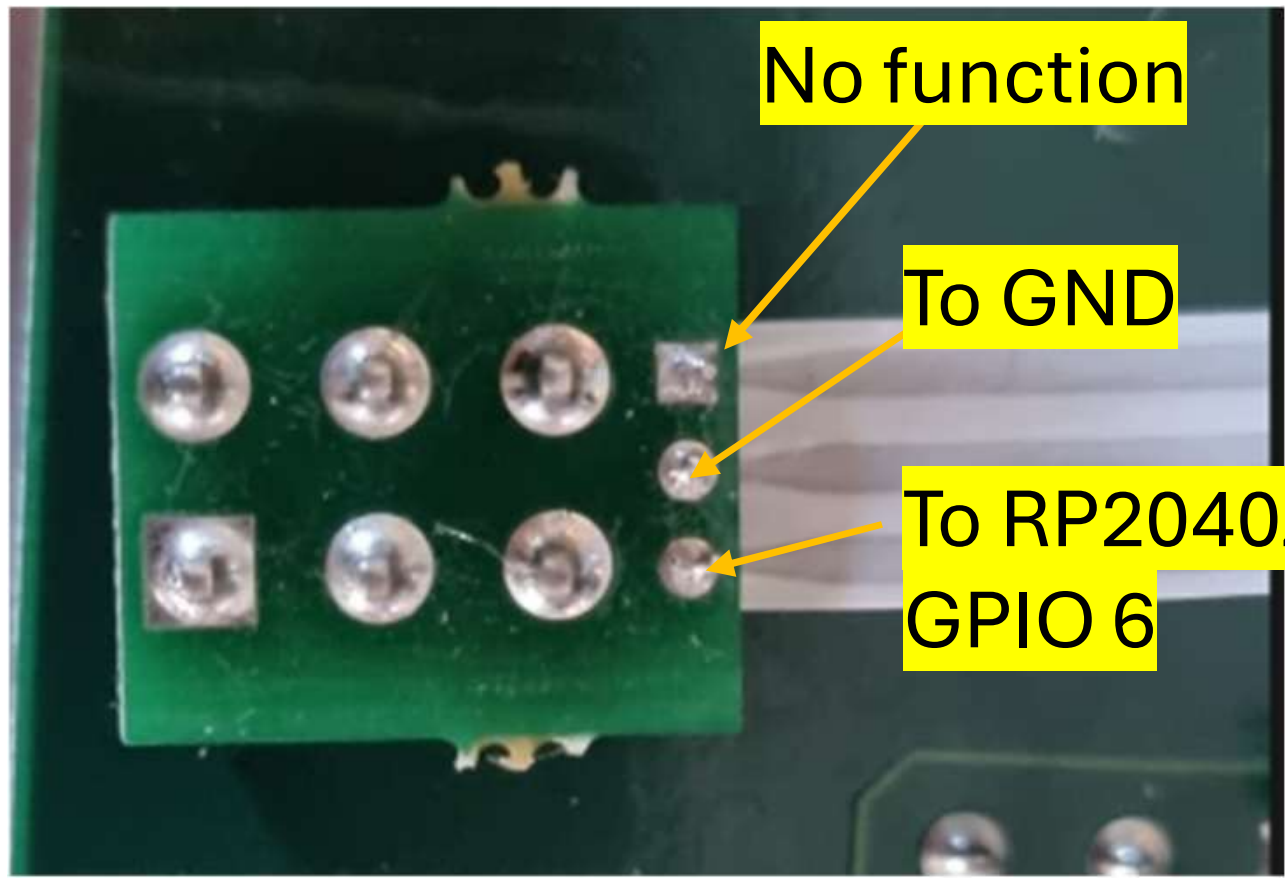

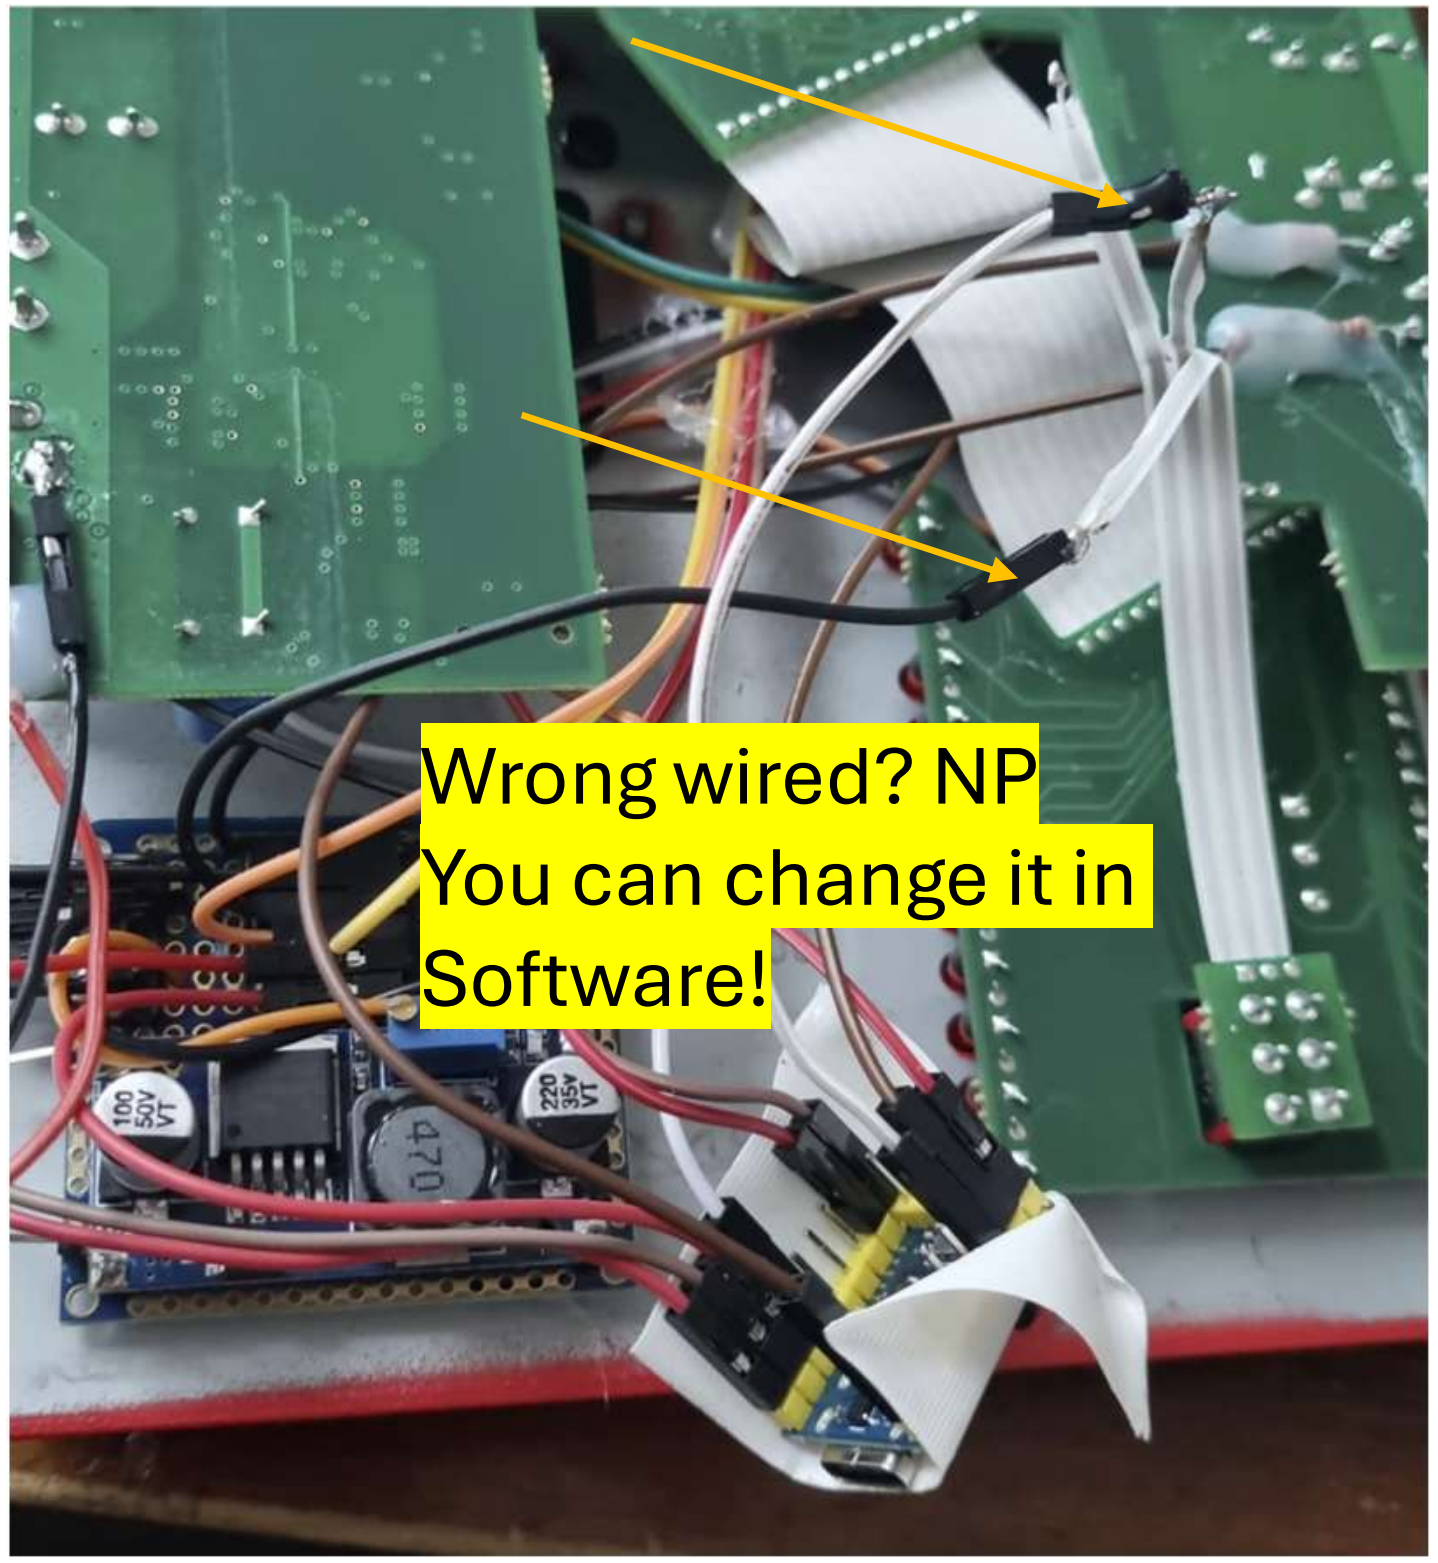

Anti Noise Filter

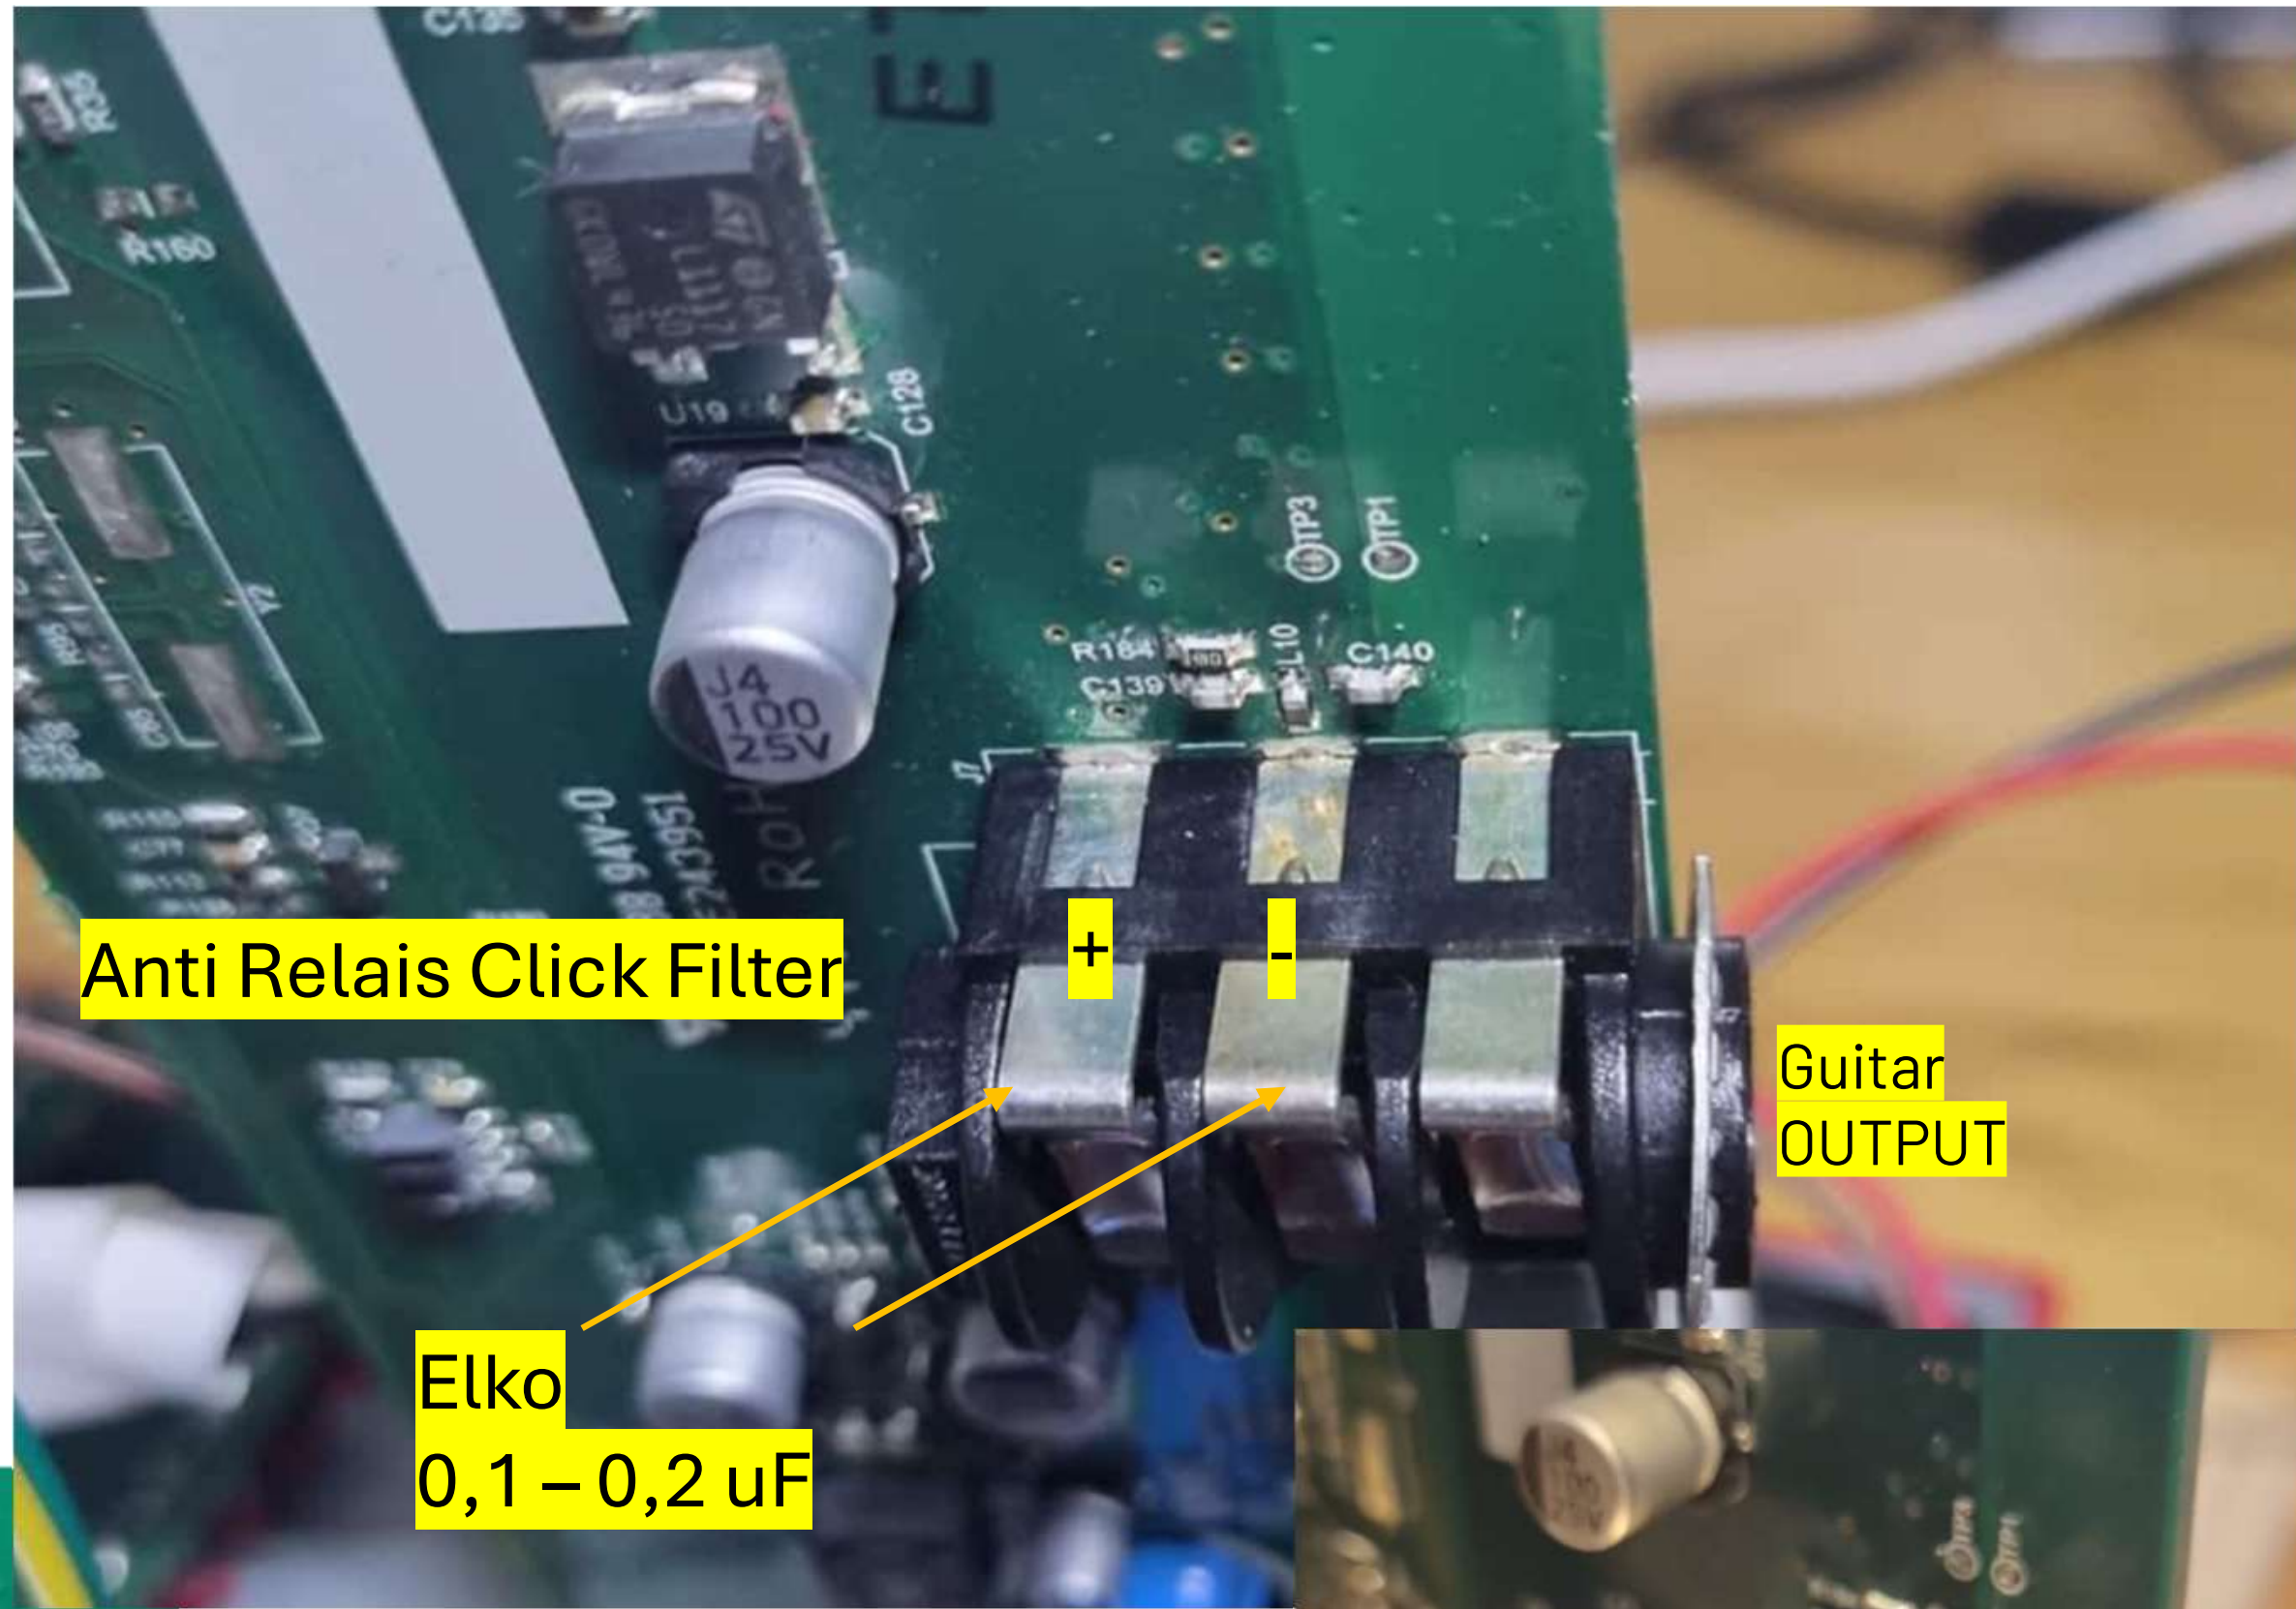

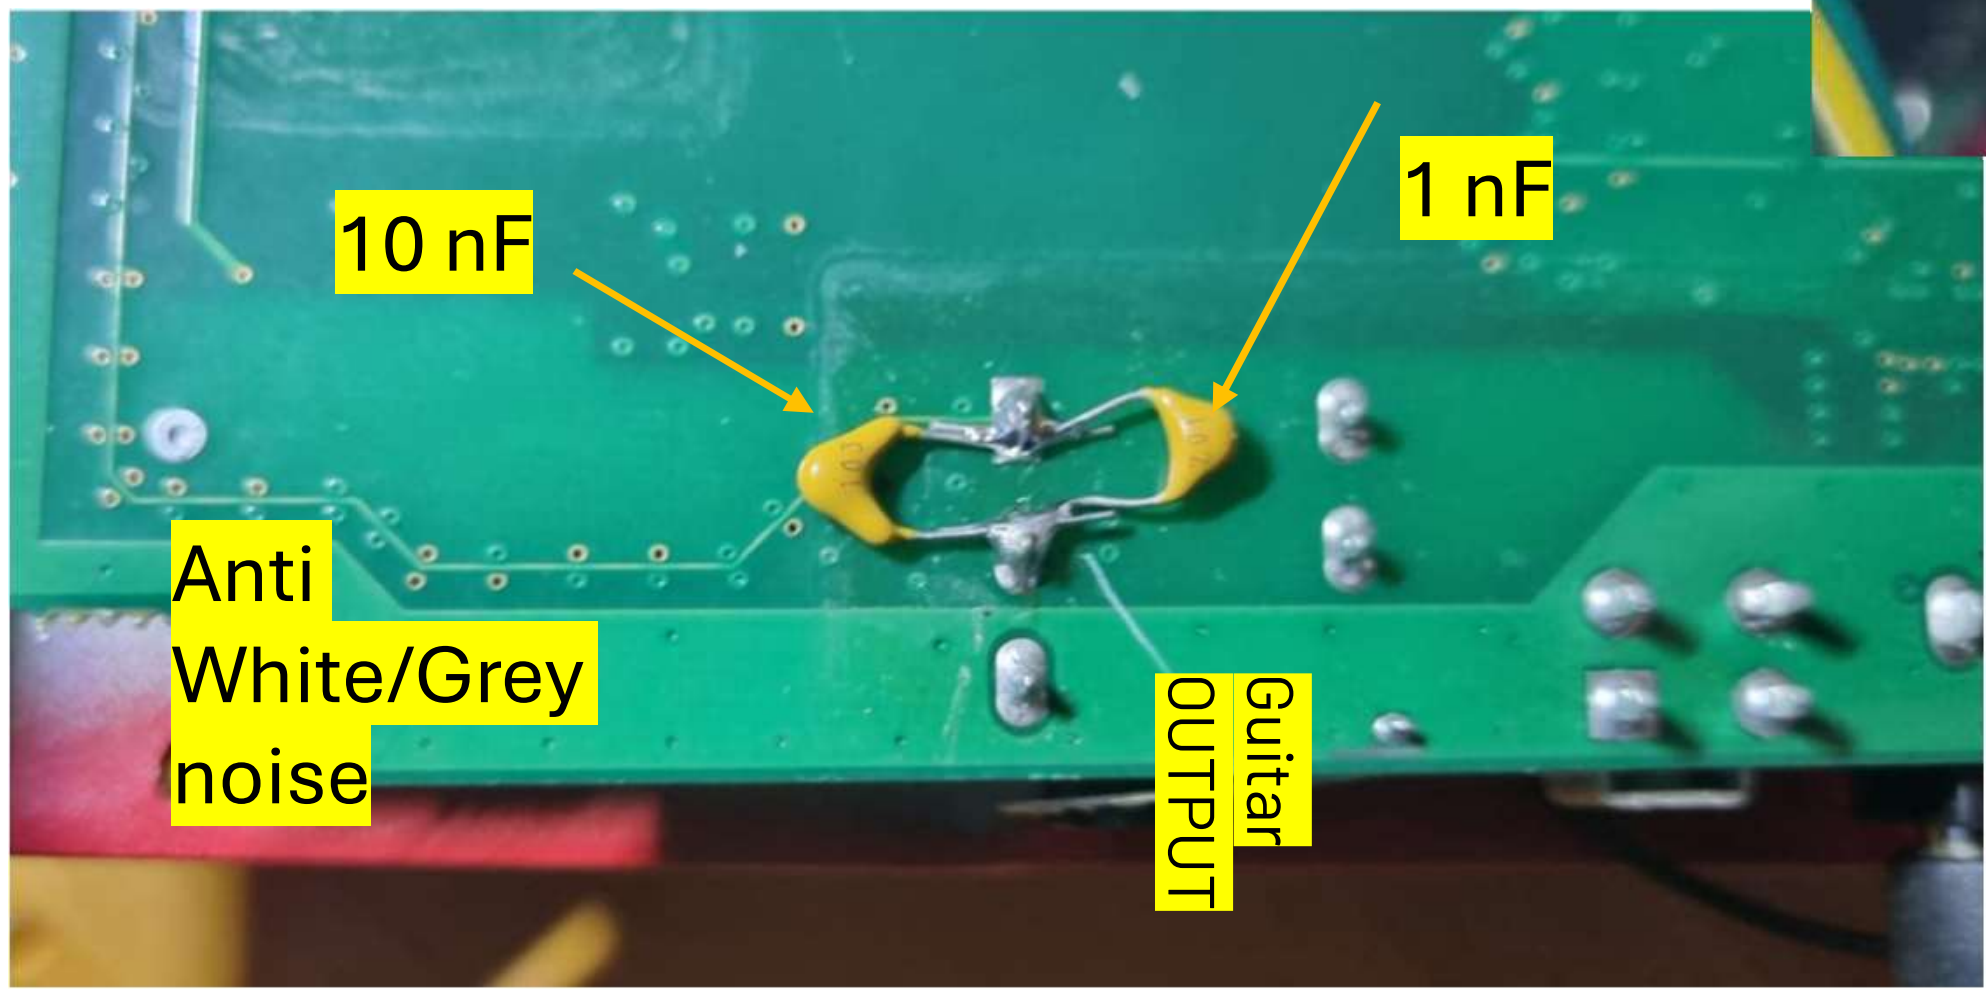

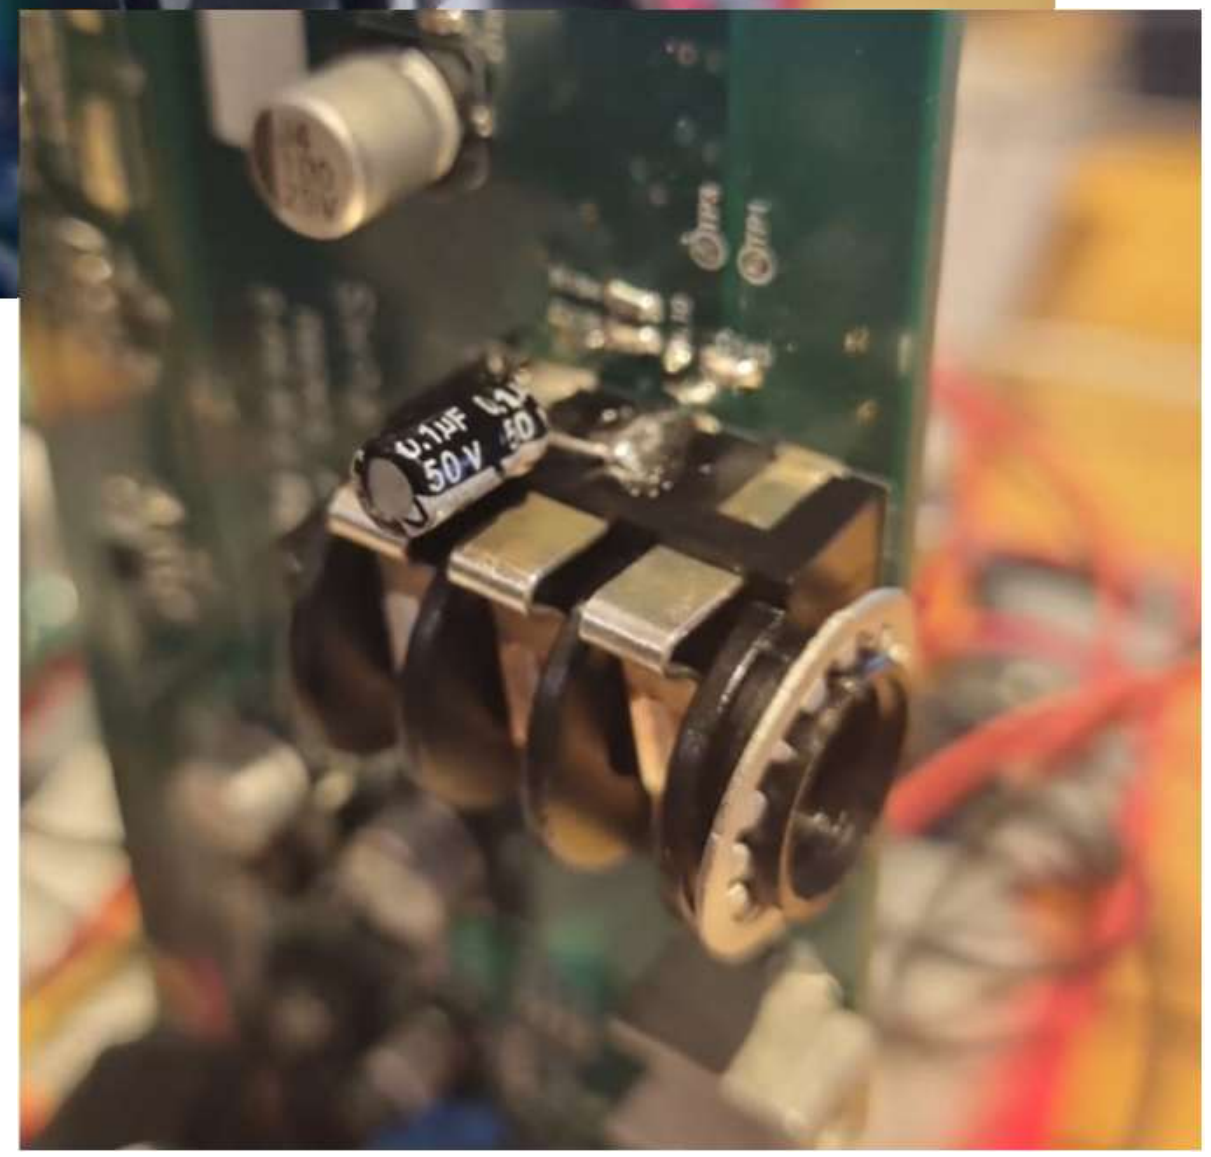

MAIN LED

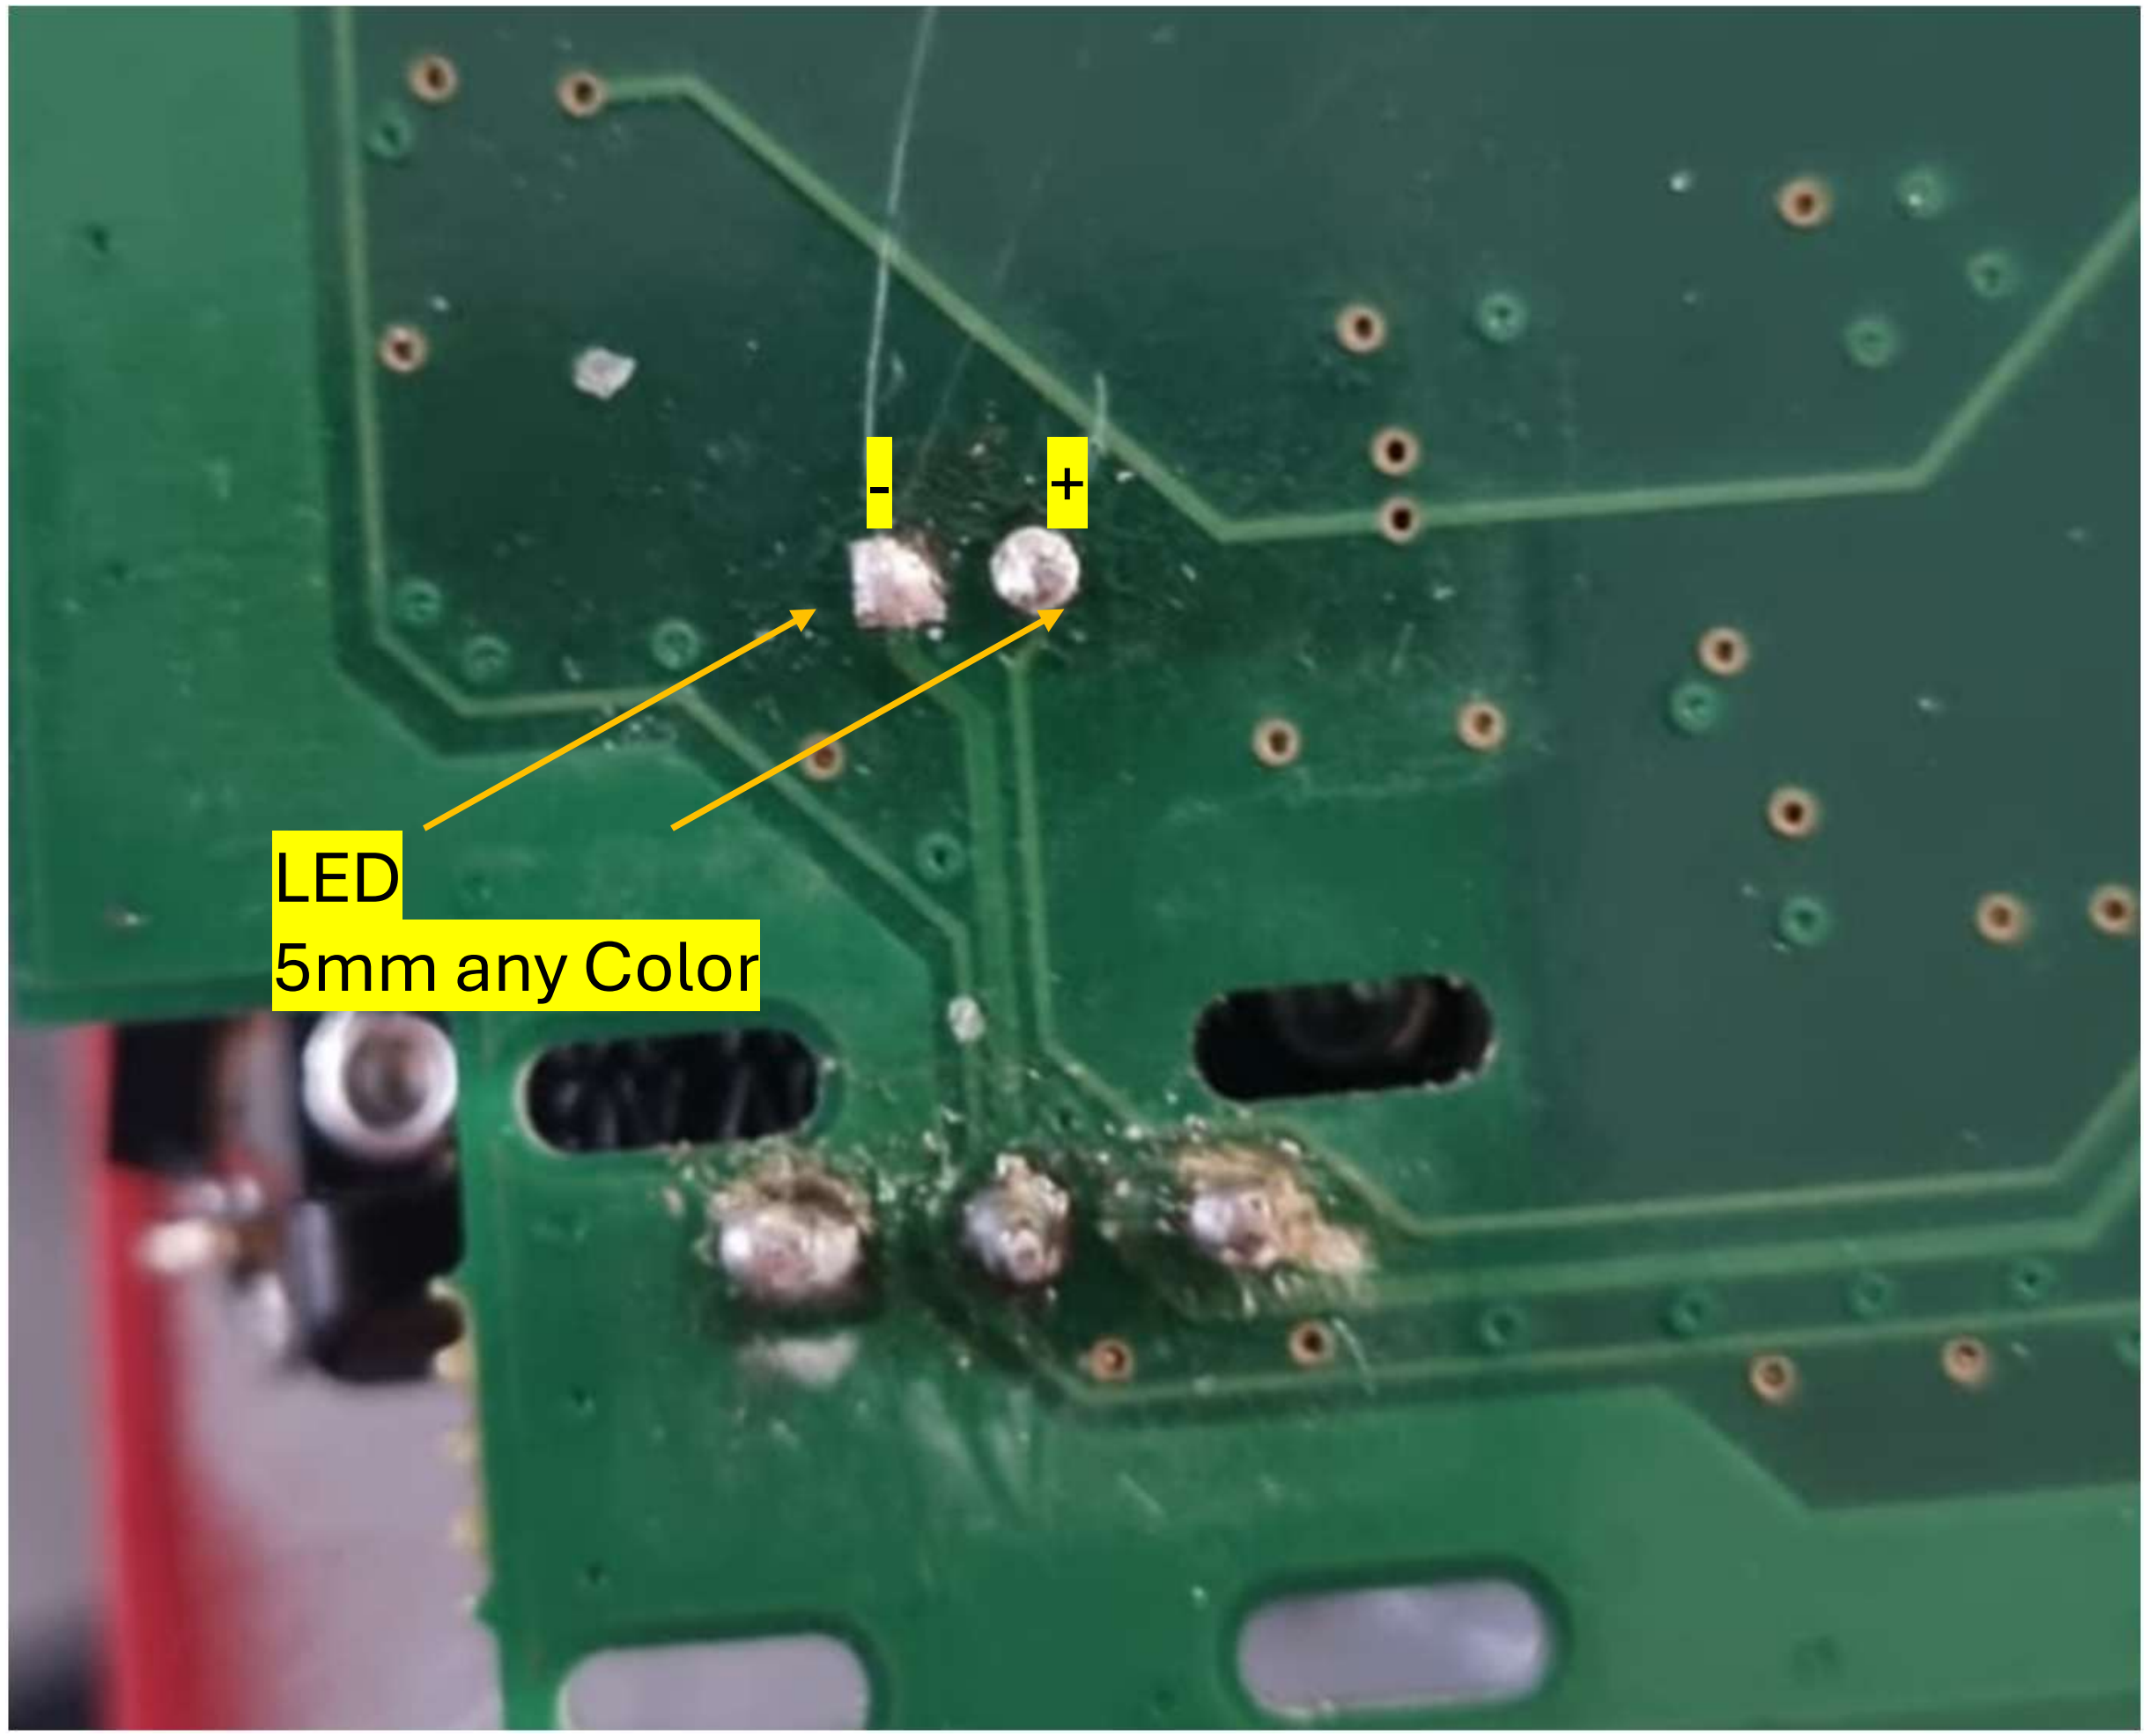

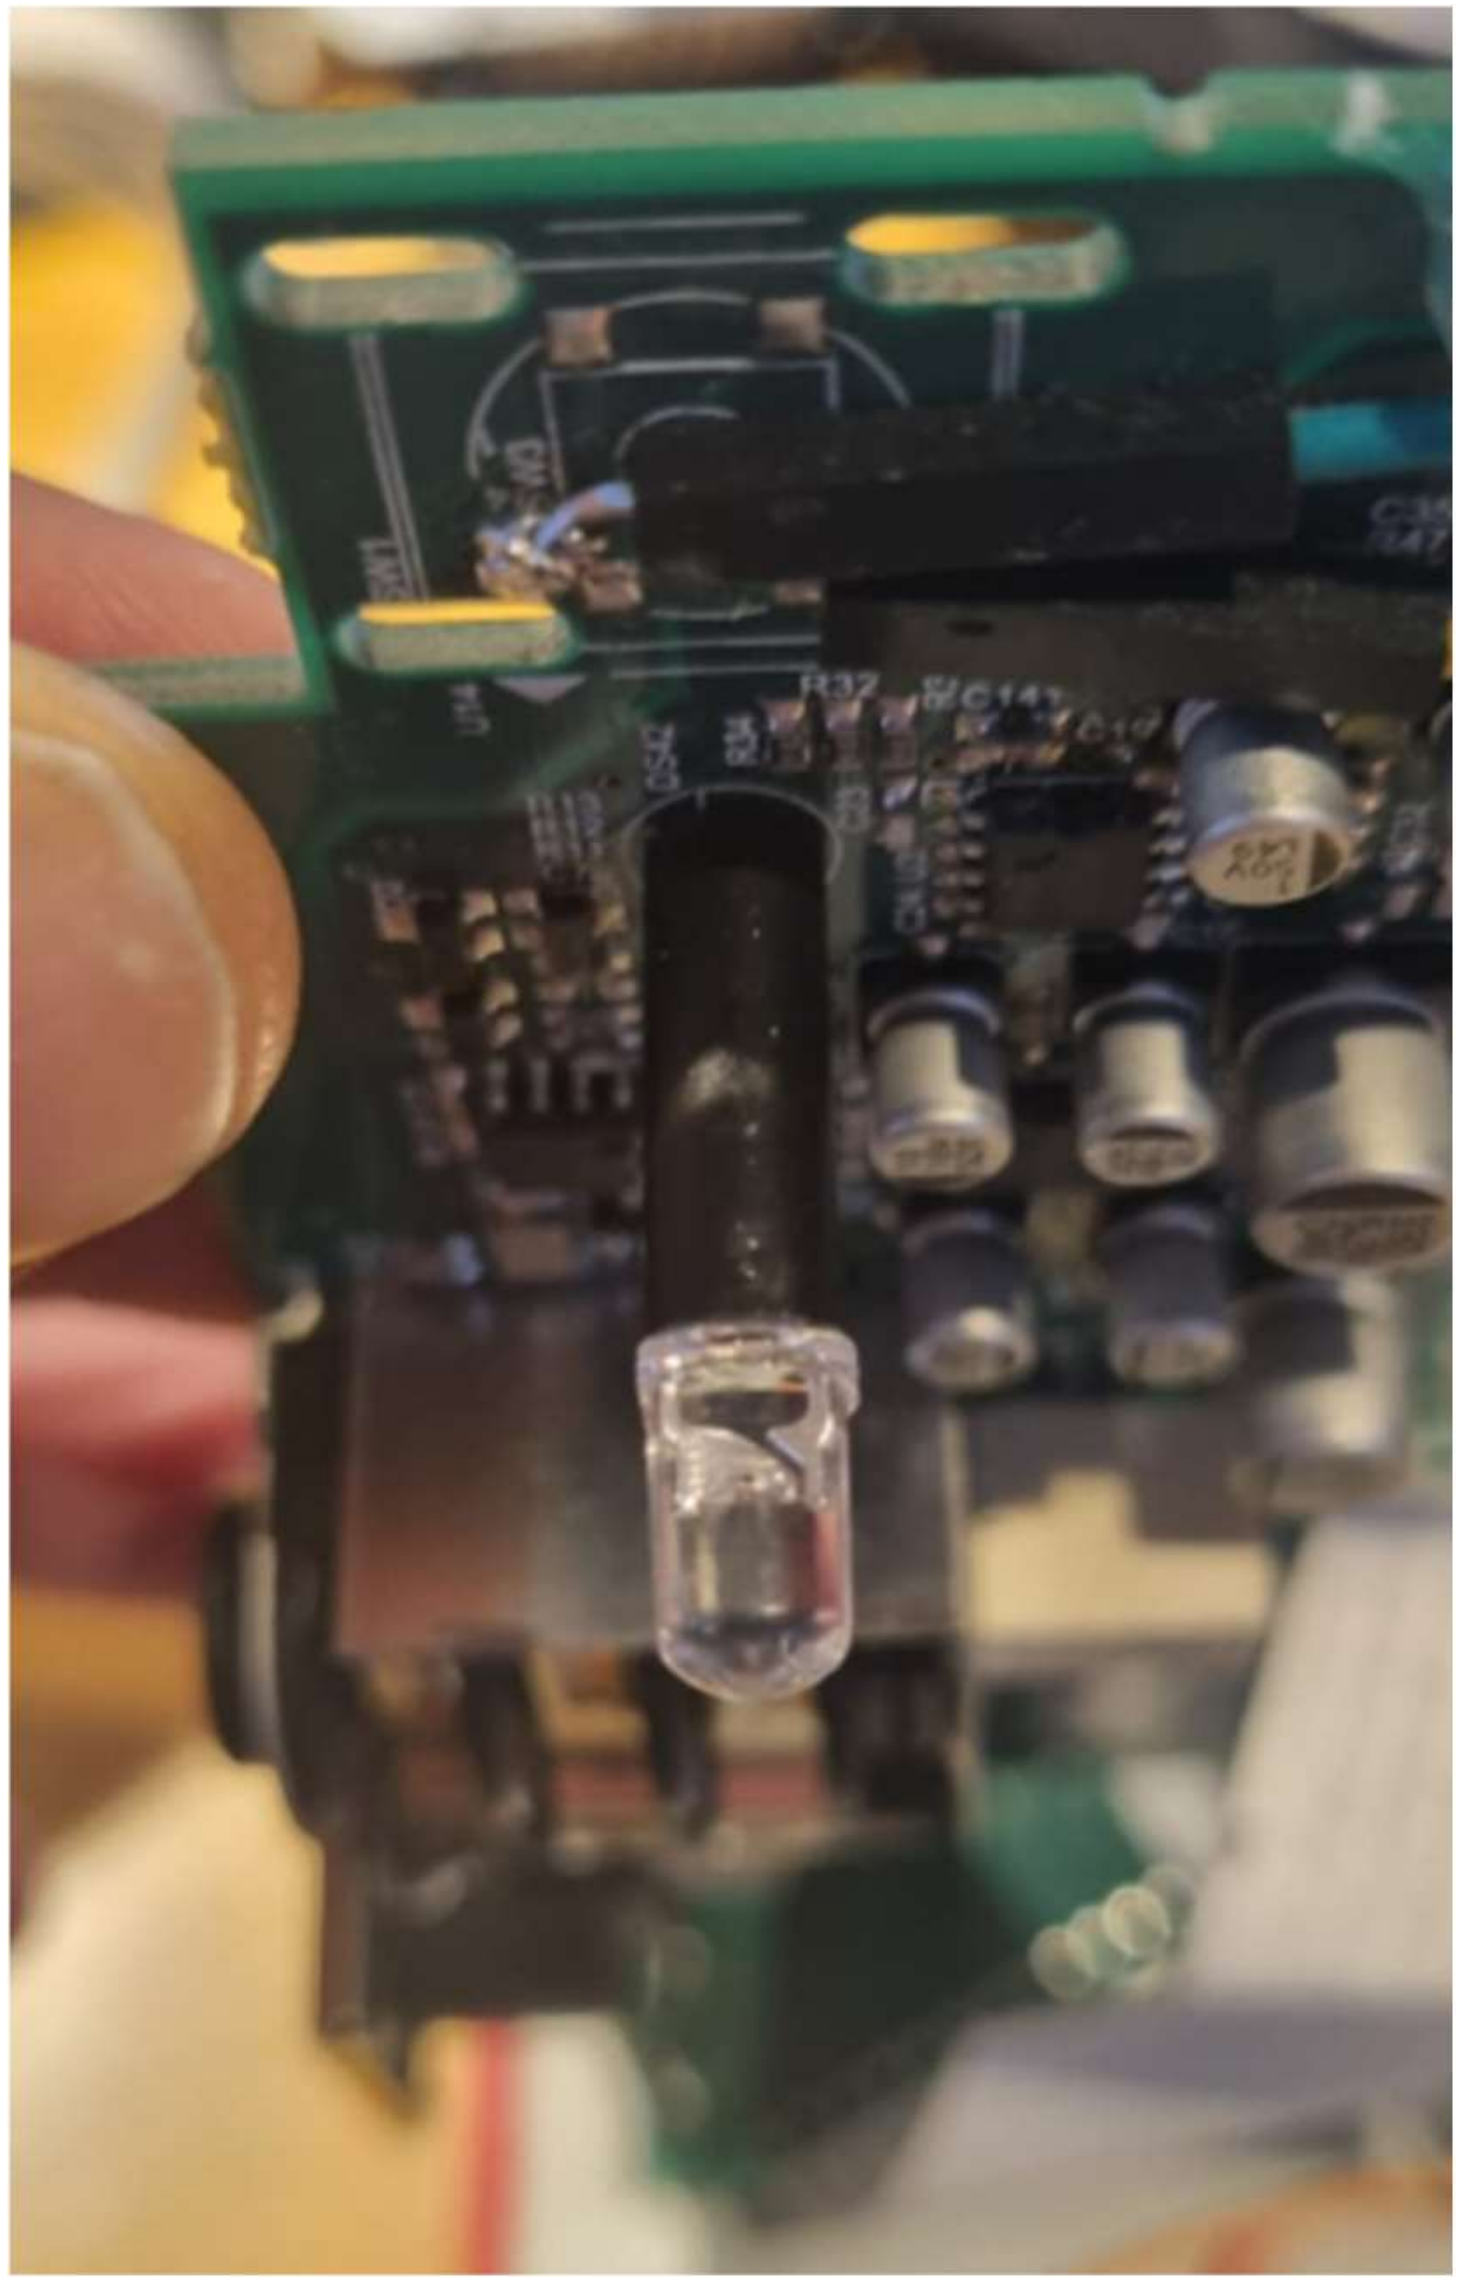

Final Wiring

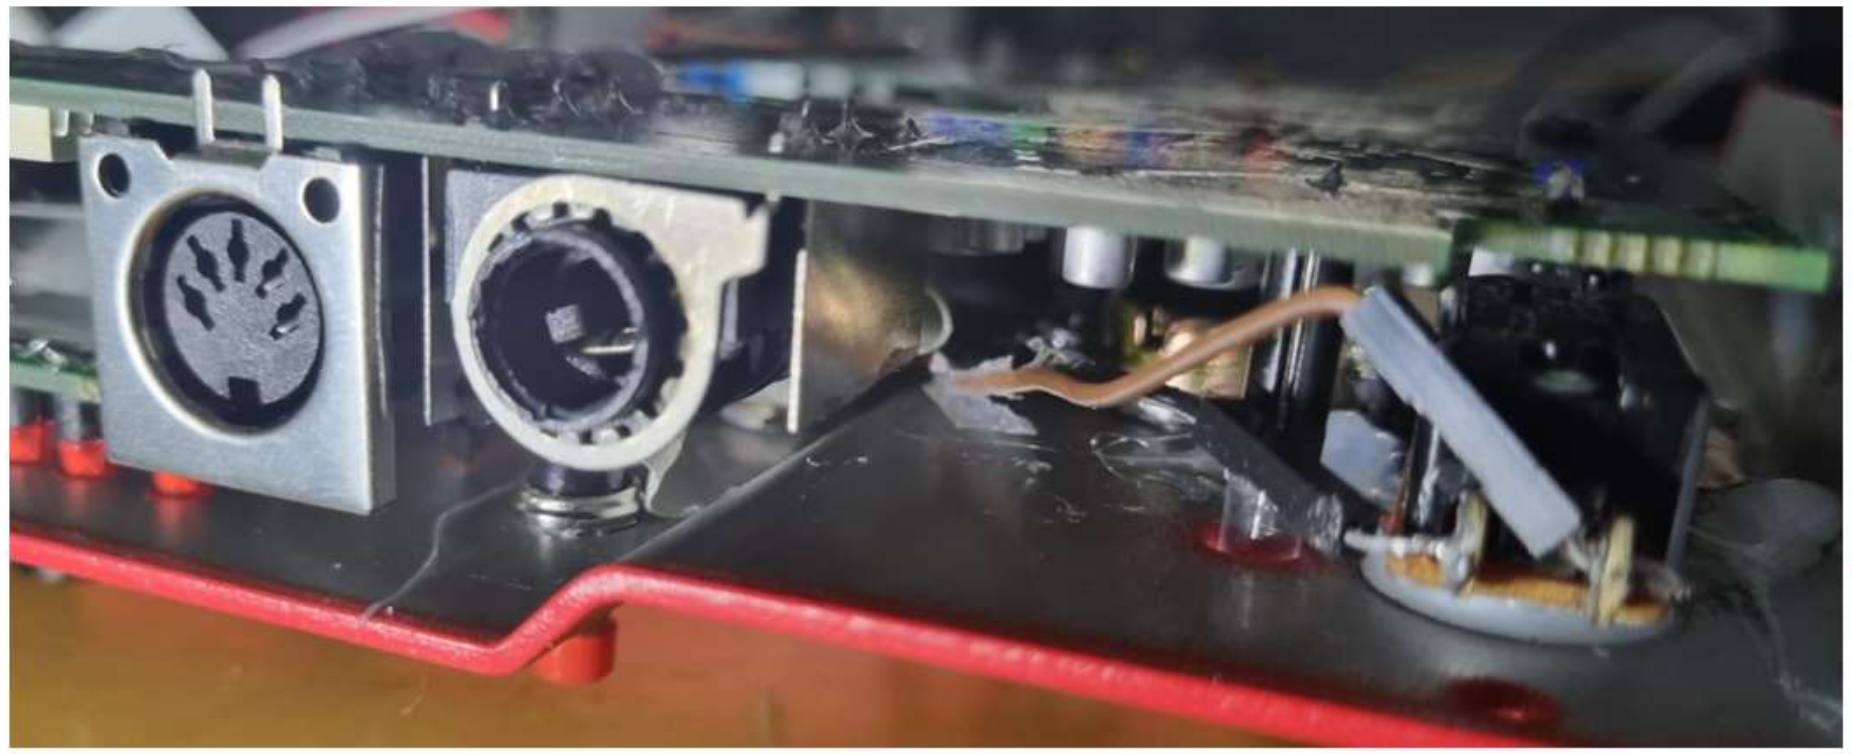

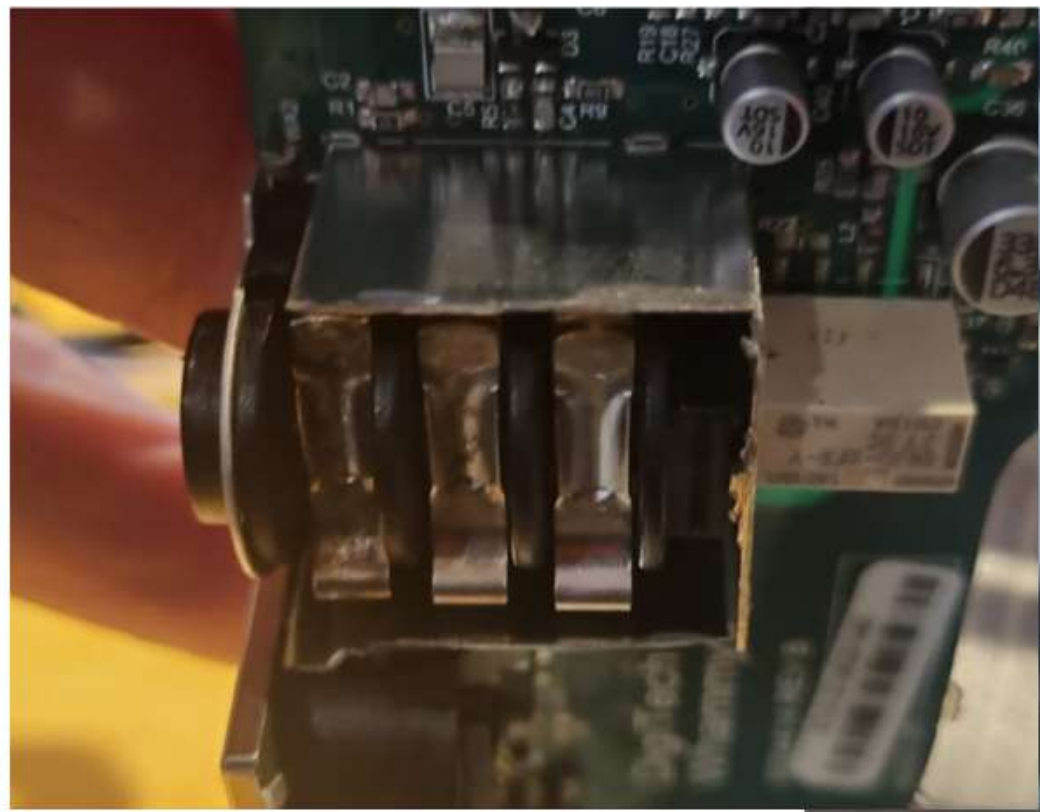

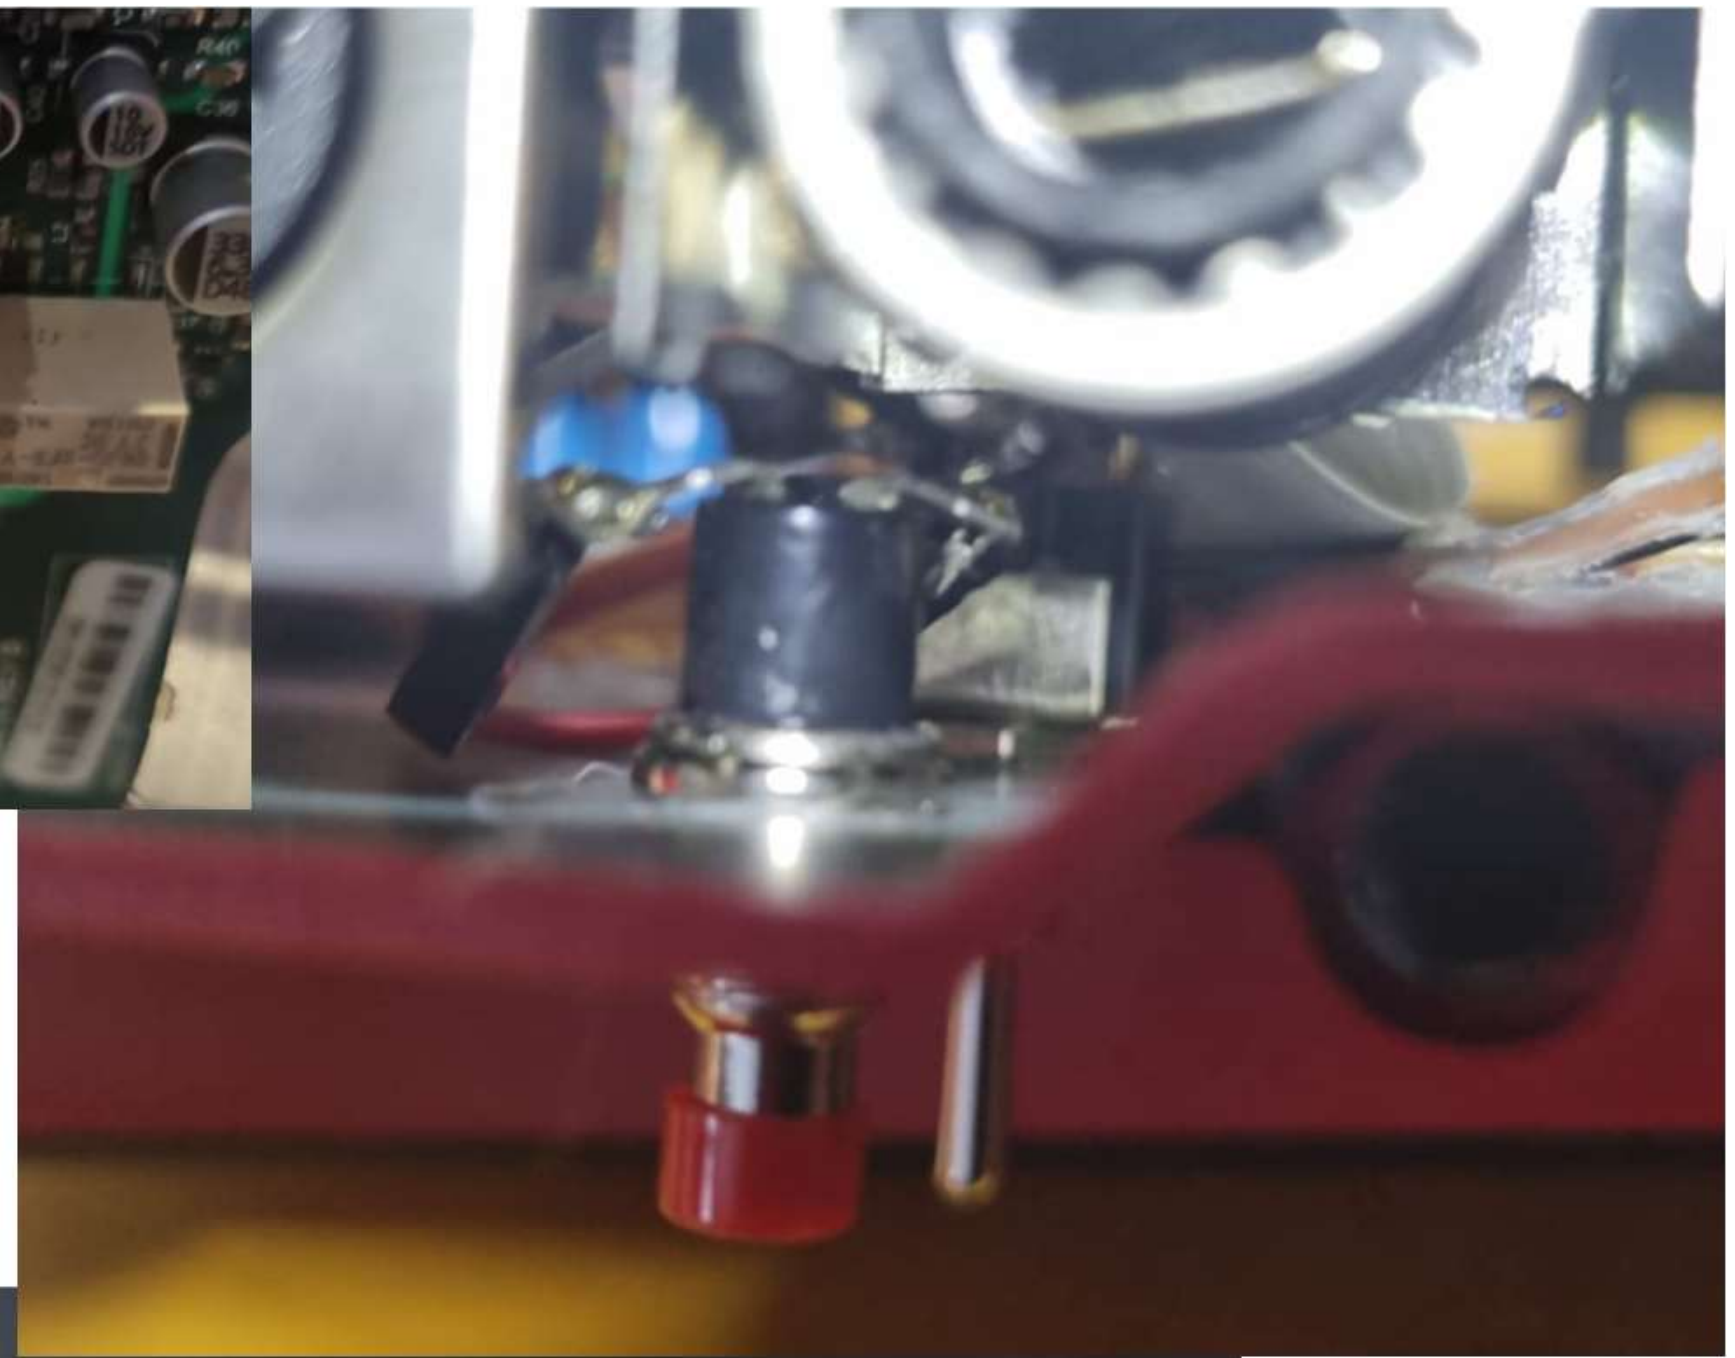

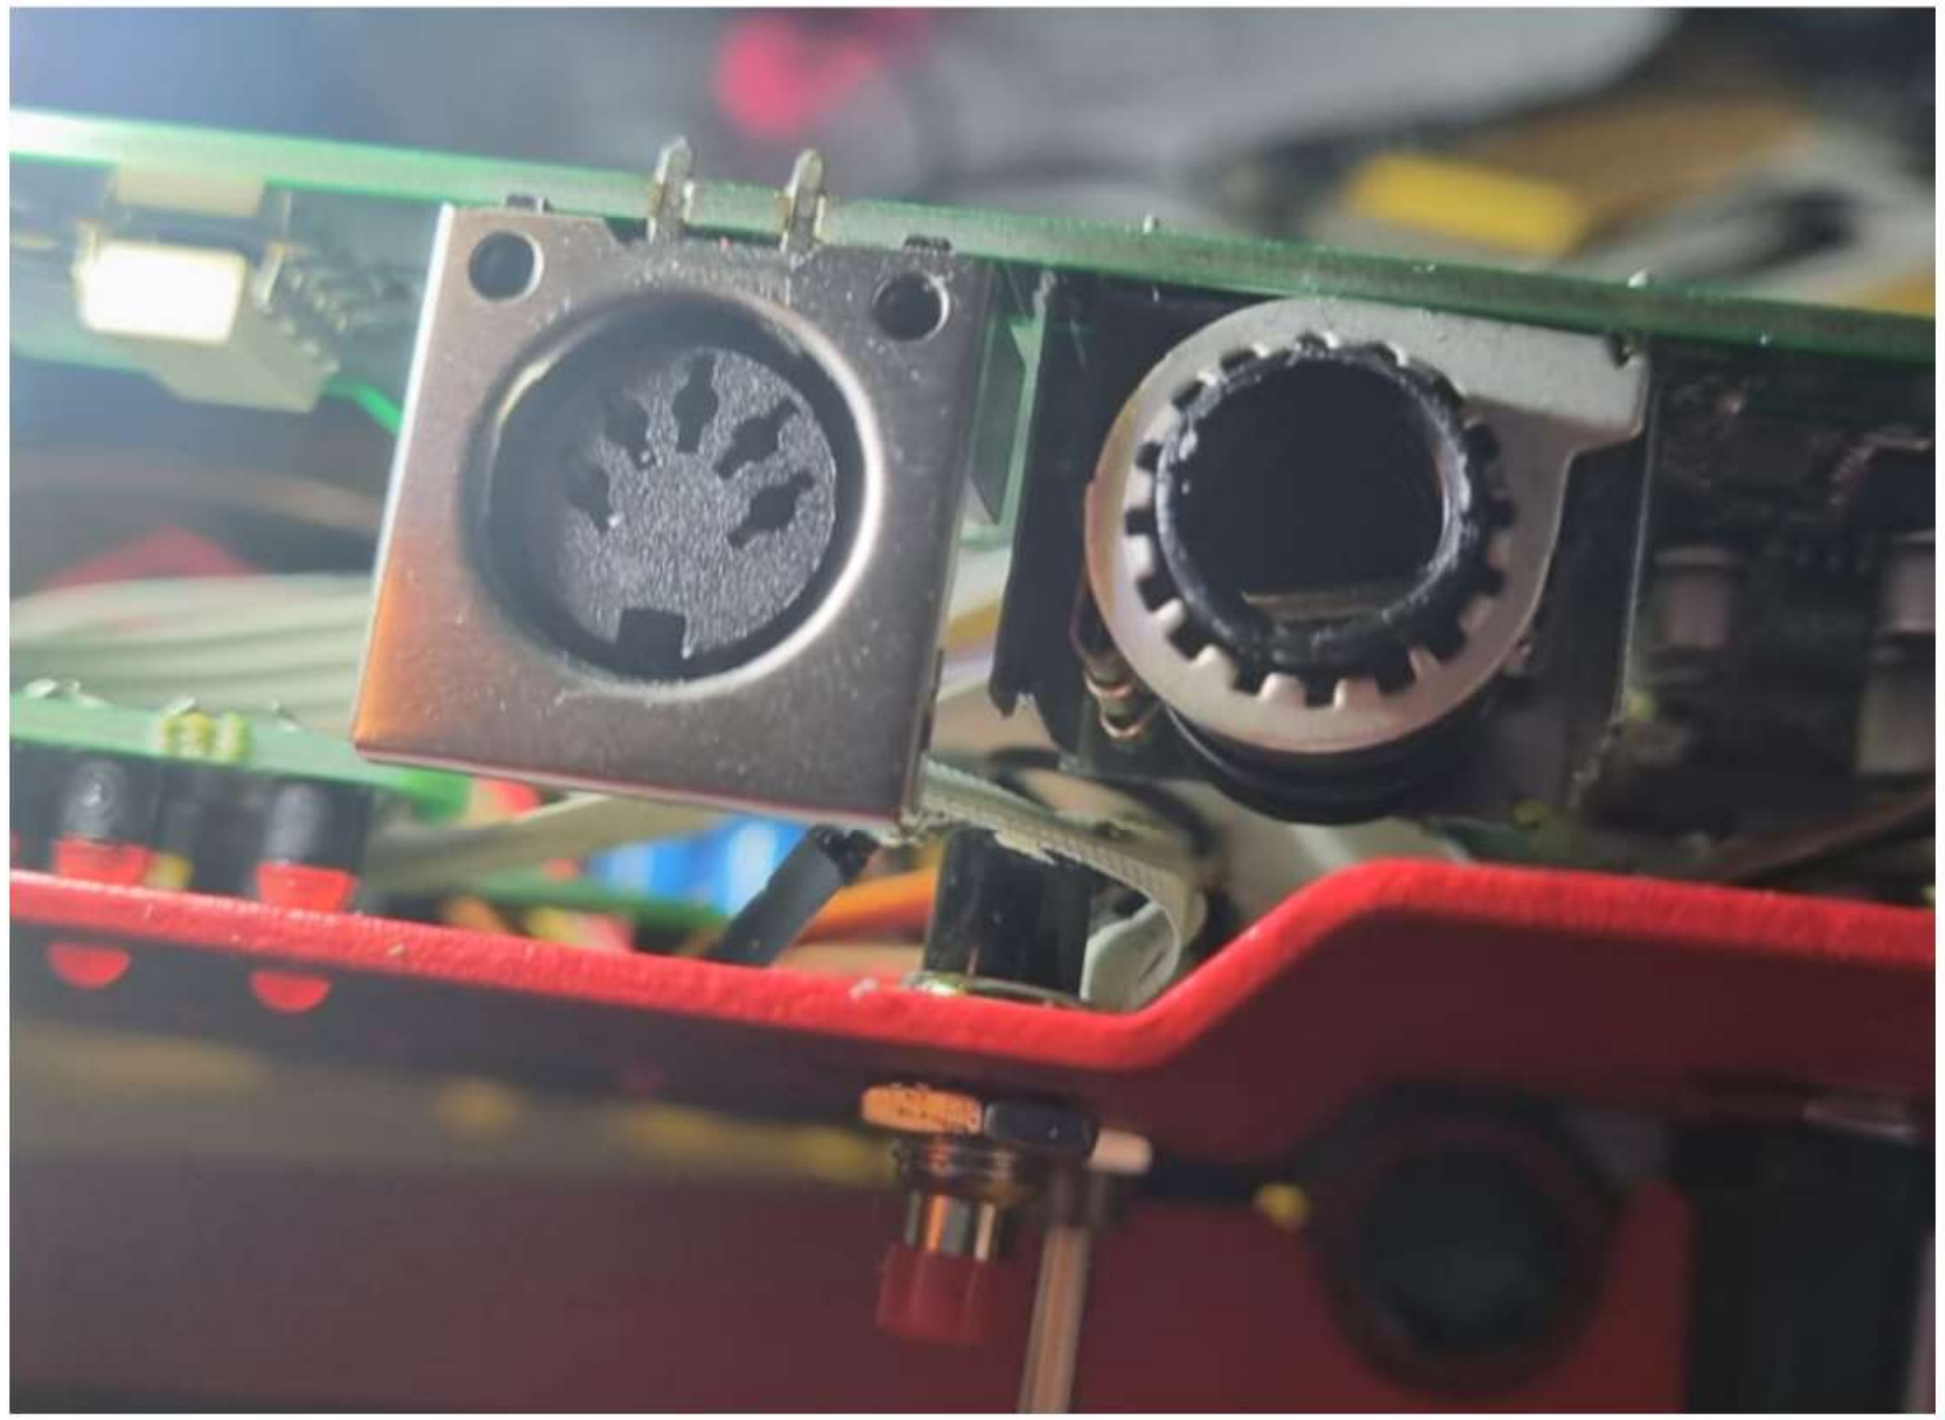

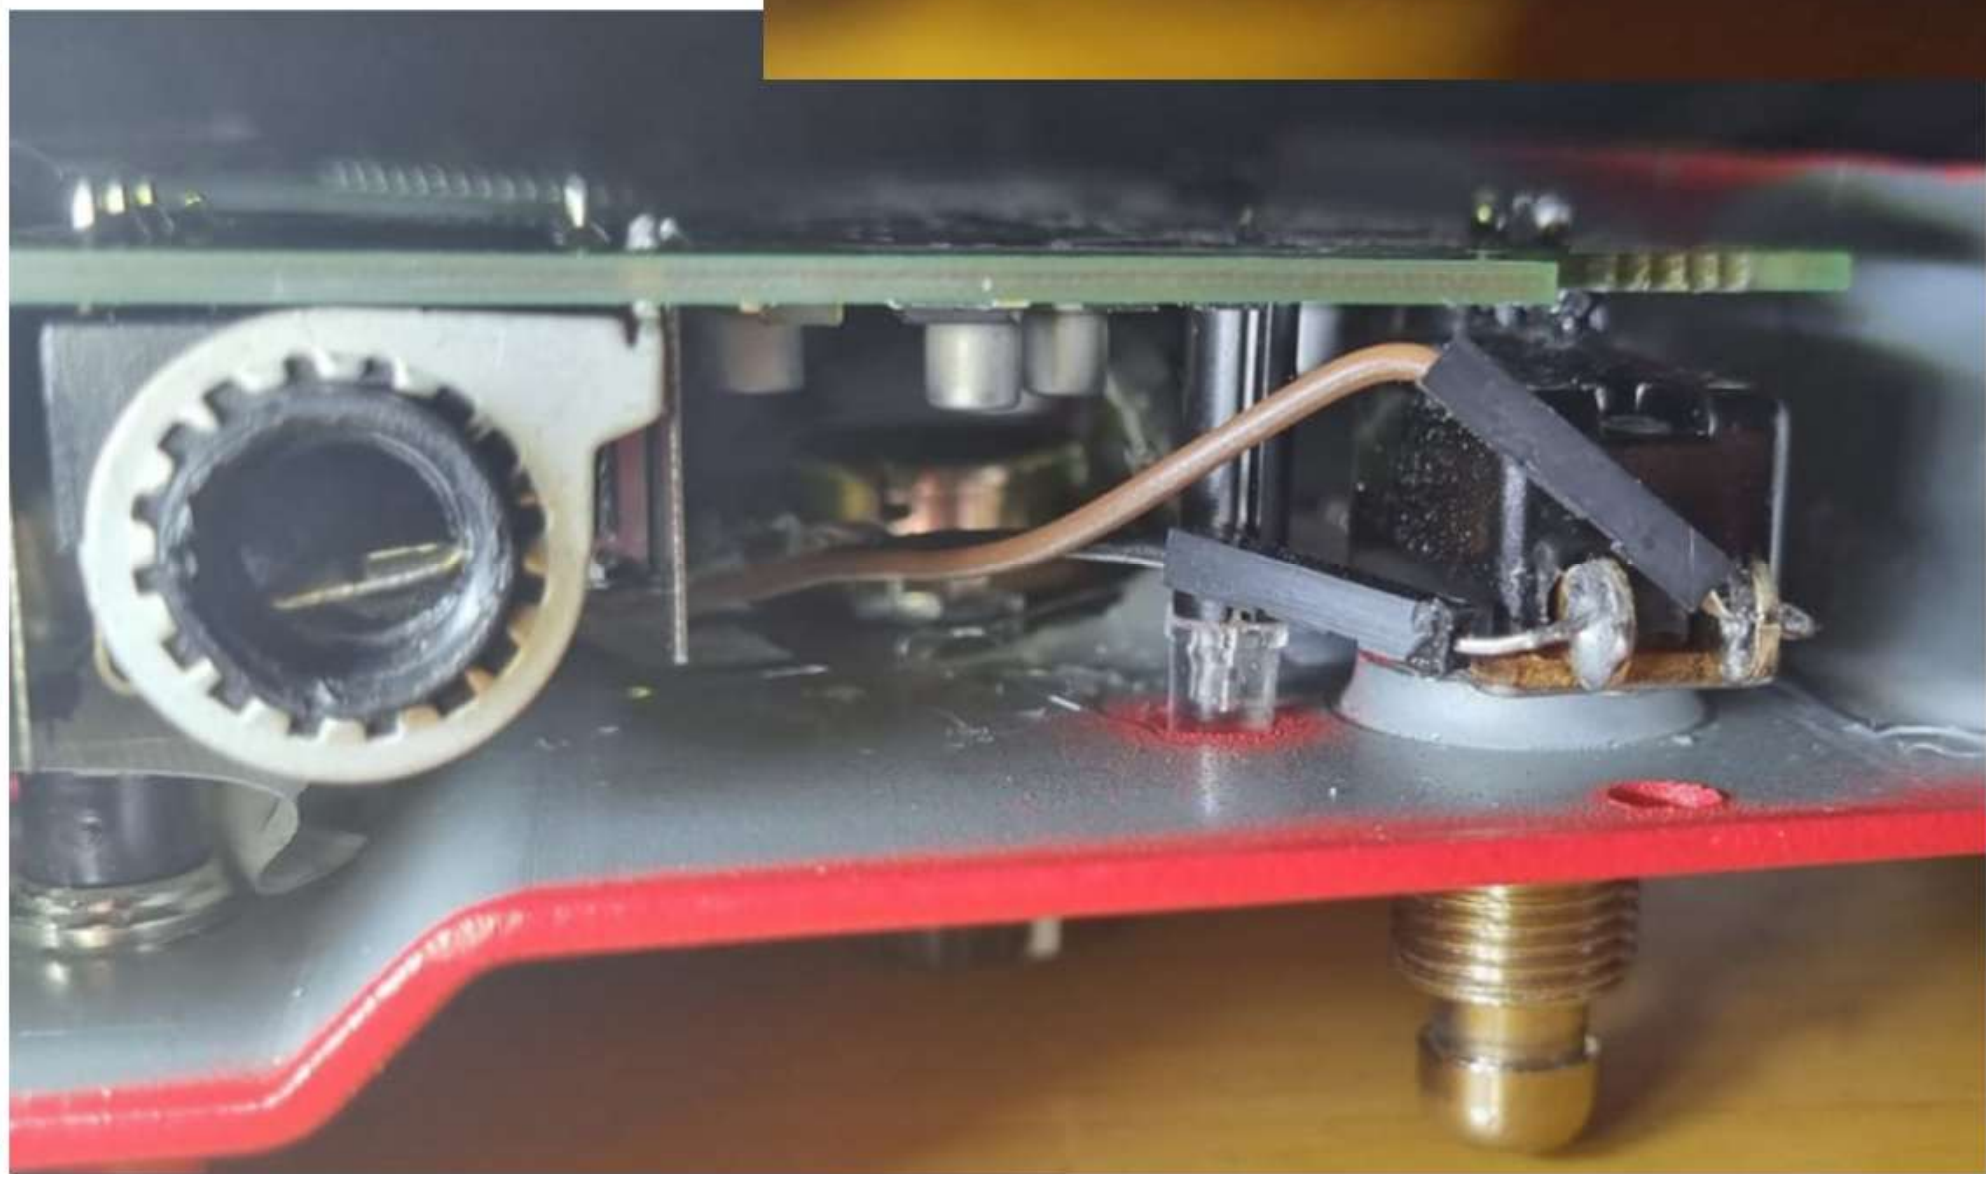

Final Wiring 2

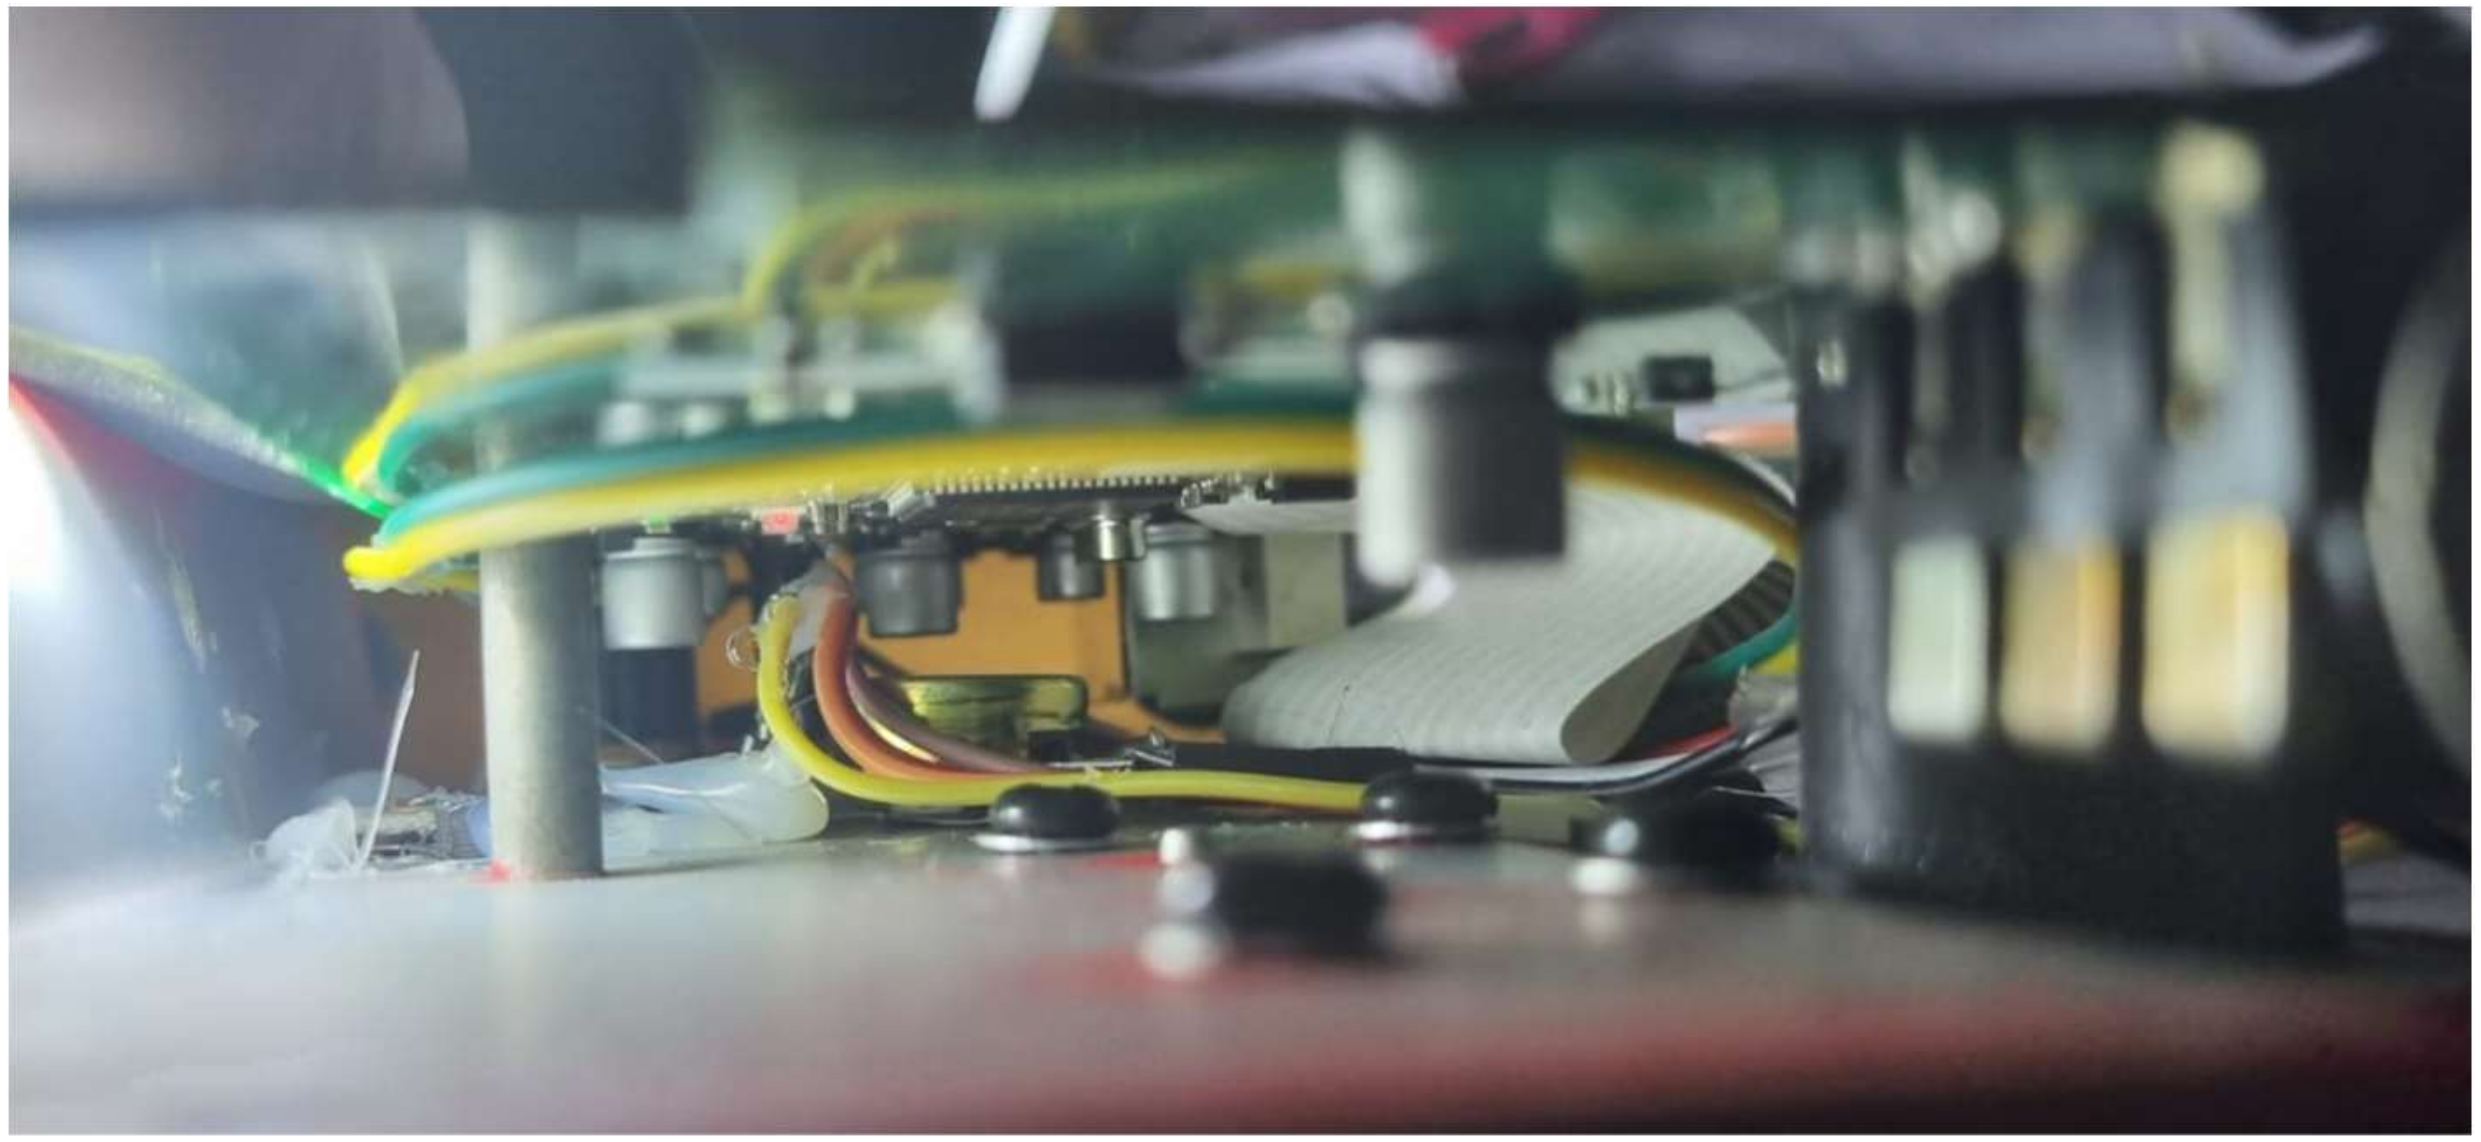

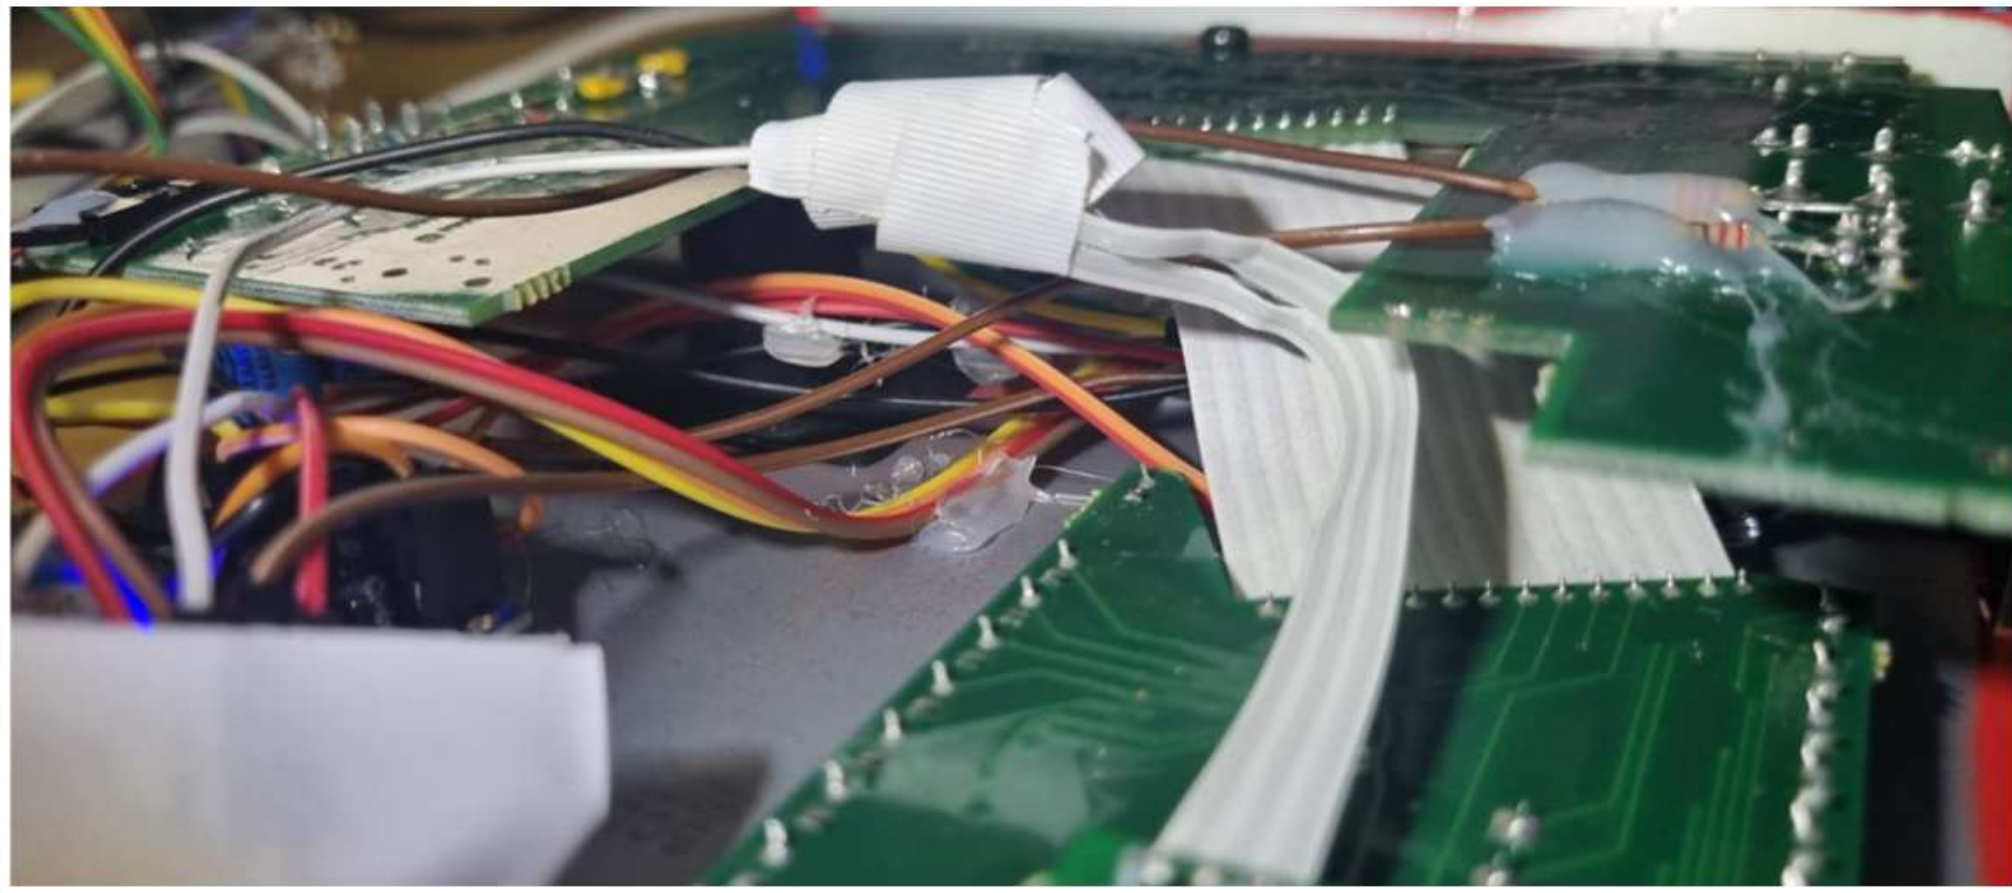

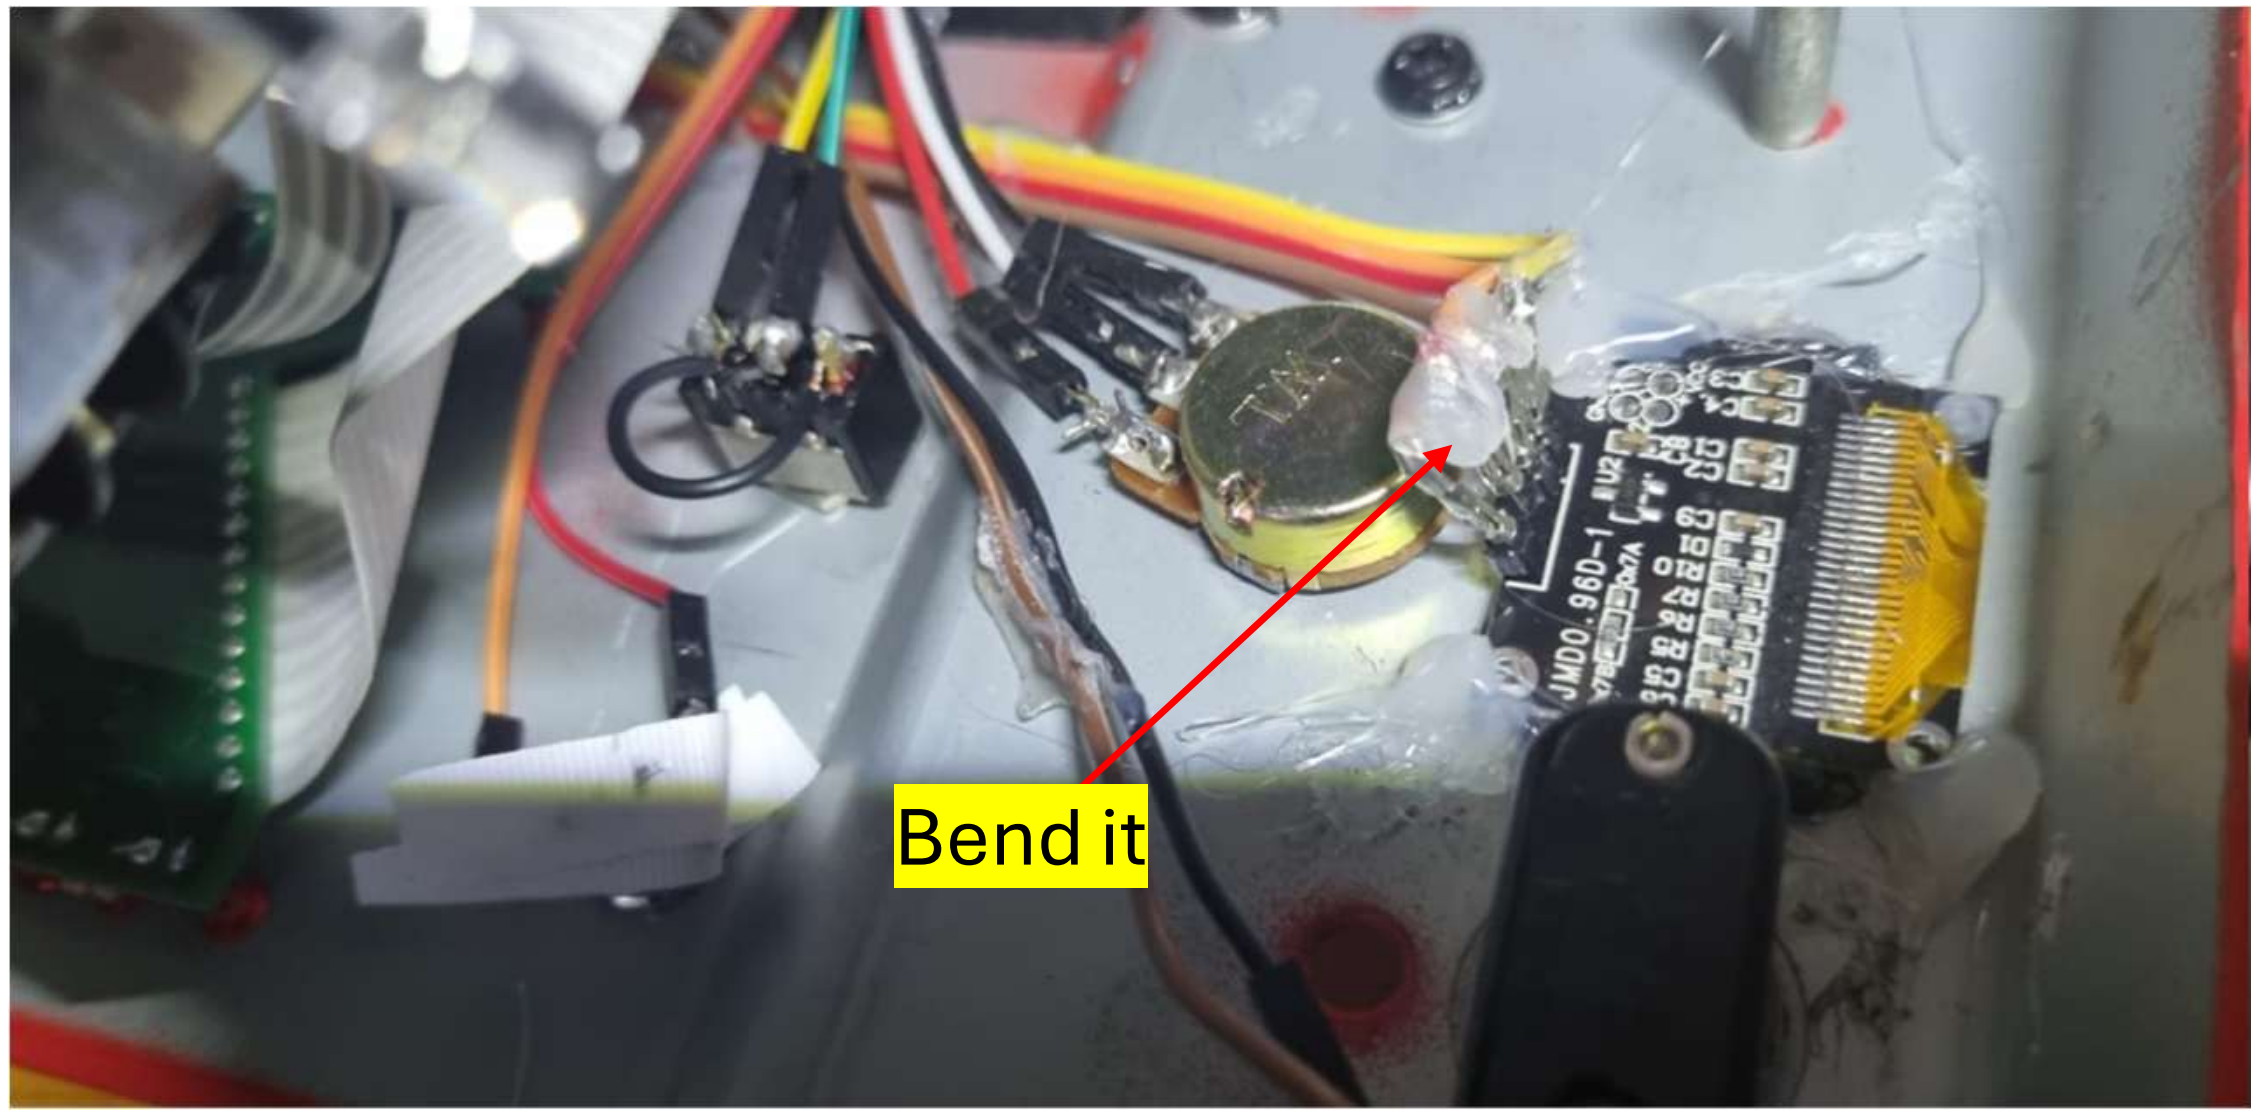

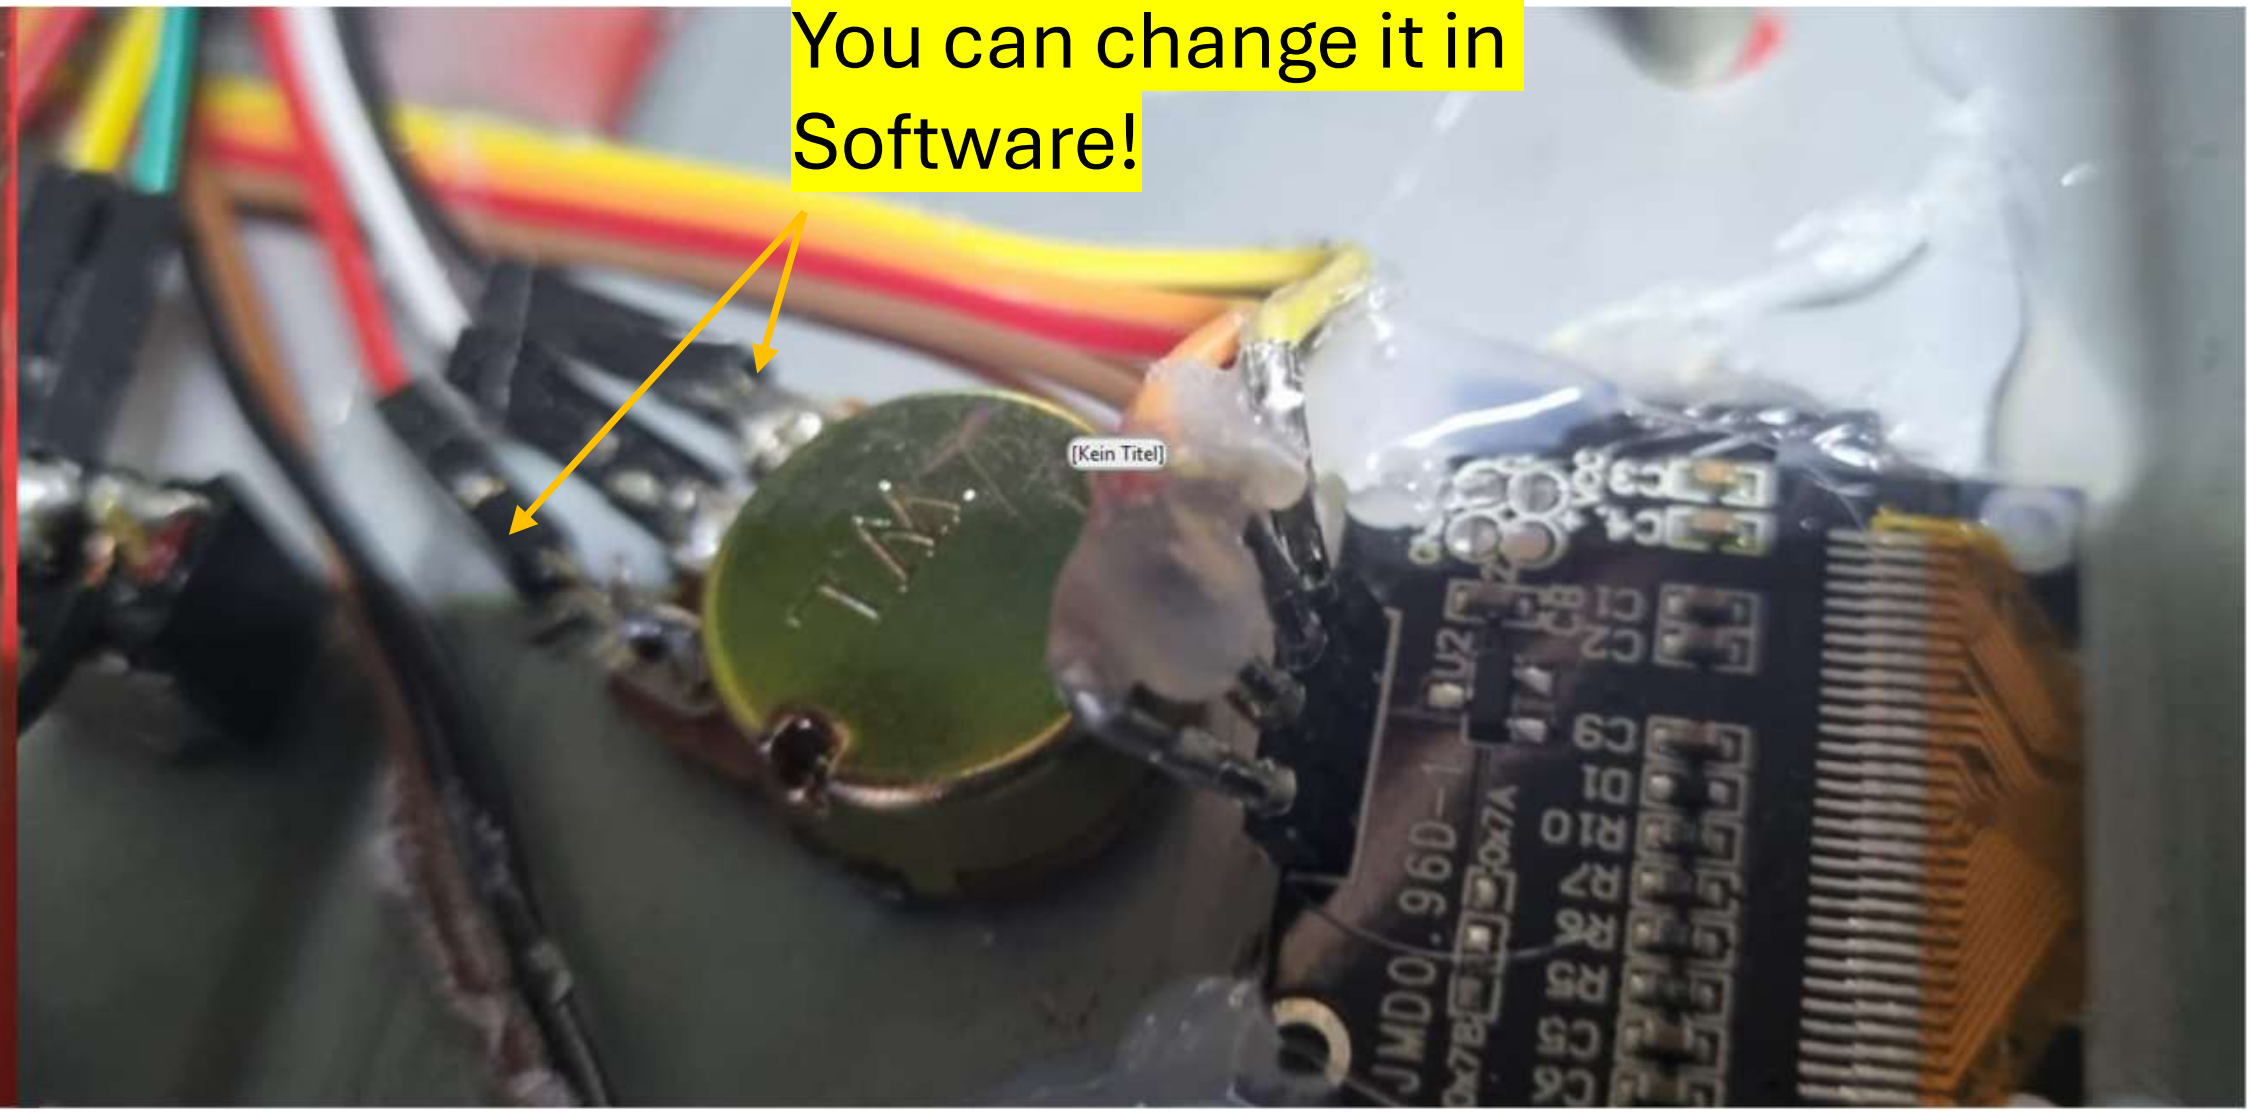

Final Wiring 3

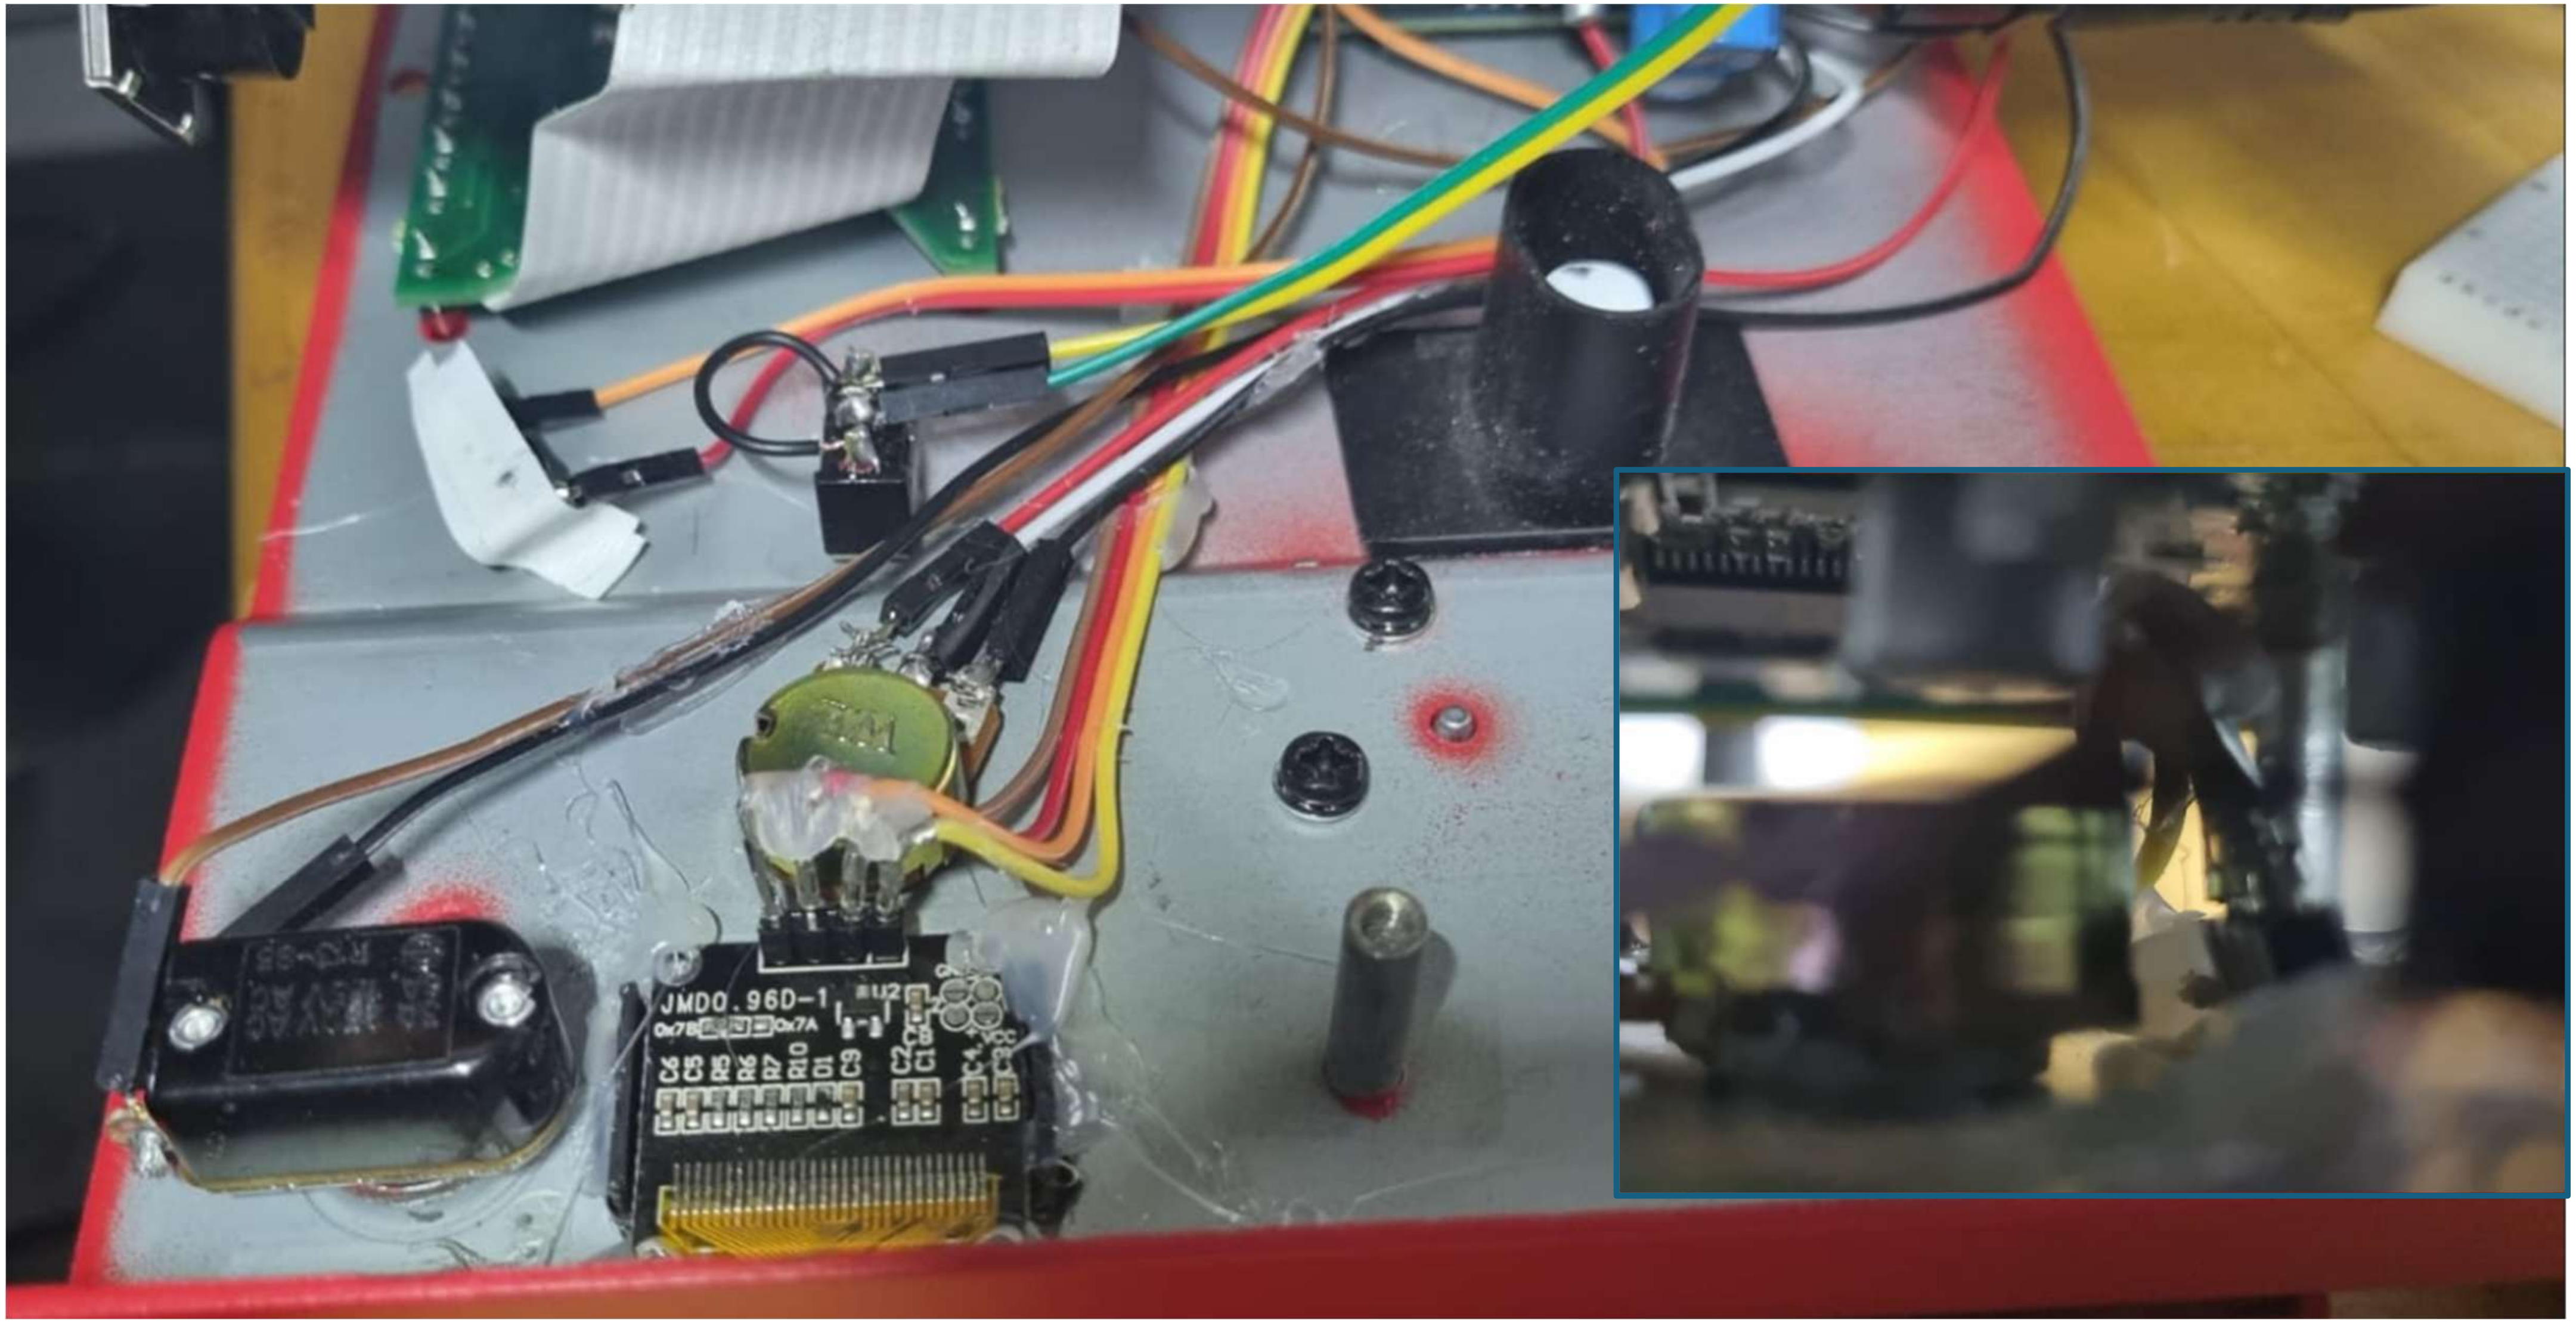

Auto Pedal Return

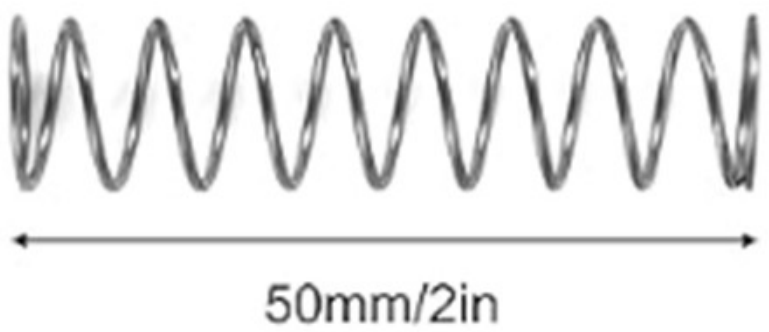

1,12kg

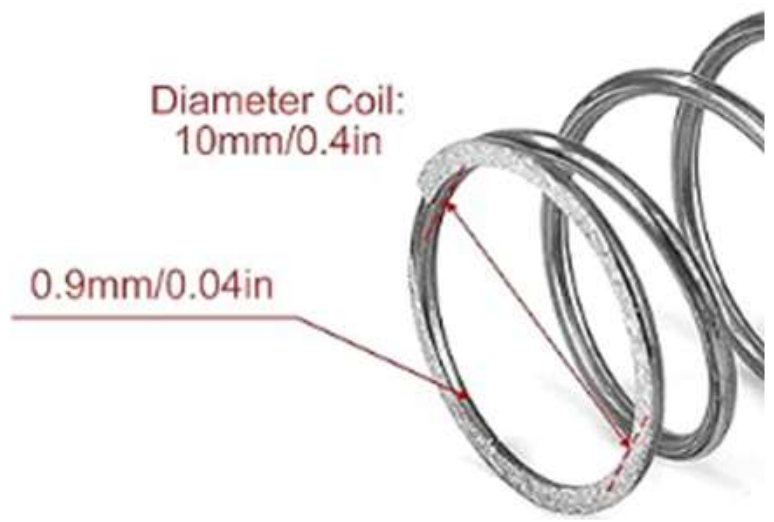

Software for RP2040 Zero

1.)
Download the Testsuite and flash it with Thonny IDE to RP2040

All wiring is fine?

Got to ->

https://www.nexosoft-engineering.de/neo/index.html

2.) Download Pro Flashing Tool

3.) Buy Software

4.) Flash to 2040 Zero

5.) ROCK