


# ENGINIUTY

## FLEXIBLE POWER SOLUTIONS

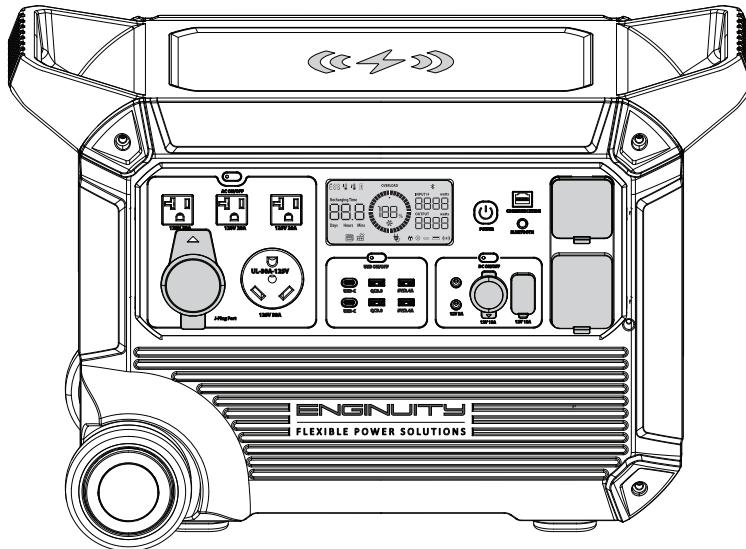

## E3600

# Portable Power Station / User Manual Central Eléctrica Portátil / Manual de Usuario

### ⚠️ WARNING:

This manual contains important information to ensure the safe operation, handling and storage of this product. To reduce the risk of injury read and understand this manual prior to use. Save the manual for future reference.

### ⚠️ ADVERTENCIA:

Este manual contiene información importante para garantizar la operación, manipulación y almacenamiento seguros de este producto. Para reducir el riesgo de lesiones, lea y comprenda este manual antes de usarlo. Guarde el manual para futuras consultas.

# IMPORTANT SAFETY RULES

---

## **WARNING:**

Risk of Electric Shock. If misused, the voltage generated by this power station can be deadly. Always use common sense and adhere to the manufacturer's instructions when using this product.

## **WARNING:**

Explosion Hazard. Do not burn or incinerate the power station. Do not expose this unit to temperatures above 140°F (60°C). Exposure to fire and extreme temperatures can cause an explosion resulting in property damage, personal injury, and death.

## **WARNING:**

Prior to using the DC charging feature, consult the vehicle operator's manual or the manufacturer's website to obtain the vehicle fuse ratings. Verify that the vehicle's electrical system and fuses can safely supply the energy required to charge the power station. If a fuse opens repeatedly during charging, disconnect the power station and determine the cause of the overload. Do not replace the fuse with a fuse rated higher than the vehicle manufacturer's recommendation or attempt to circumvent the safety features of the fuse. Doing so could create a risk of fire.

## **SAVE THESE INSTRUCTIONS**

- Follow the manufacturer's instructions when using this product. Misuse can reduce the protection provided by this equipment.
- Do not use this device to power life support devices or other necessary medical equipment.
- Do not overload the power station. Exceeding the unit's wattage/amperage capacity can damage the unit and/or electrical devices connected to it.
- Risk of electric shock. This tool does not provide an electrical path to earth ground when used with a grounded appliance.

- Do not operate, store or handle the power station in wet conditions. Do not submerge the power station. Water entering the power station will increase the risk of electric shock.
  - If the power station was lightly splashed, remove the surface water with a towel and allow the unit to dry completely before resuming operation.
  - If water got inside the power station, it is no longer safe to use. If possible, place the unit in safe area until it is fully dry. Do not touch any exposed components. Recycle or dispose of the power station in accordance with federal, state, and local regulations.
  - If the power station is submerged, **do not attempt to retrieve it!** Contact your local fire department for guidance. When it is safe to do so, recycle or dispose of the power station in accordance with federal, state, and local regulations.
- To reduce the risk of electric shock and property damage, the power station should only be used in dry locations.
- Always use the power station in well-ventilated areas. Do not use it in areas where flammable fumes or gases can accumulate, such as an inadequately vented bilge of a boat or near propane tanks.
- Always closely supervise this product when it is used near children.
- Do not insert fingers, hands, or foreign objects into the product.
- To avoid overheating the power station, do not obstruct the unit's vents. If the power station becomes too hot, it will automatically shut off.
- Keep power station cool. Do not place the unit near heat sources or expose it to excessive heat.
- Keep the power station away from fire or extreme temperatures. Exposure to fire or temperatures may cause an explosion.
- Never attempt to extinguish a fire if it is unsafe to do so. Contact your local fire department. If it is safe to do so use an Lithium appropriate fire extinguisher. Do not touch any hot or burnt components. Dispose of the unit only when safe to do so after the unit is extinguished and fully cooled.
- Do not operate or store the power station in locations colder than 4°F (-15.5°C) or hotter than 113°F (45°C). This product should not be stored outside or in your vehicle.
- Do not place the battery in a low air pressure environment, as this may cause flammable liquids to leak or even an explosion.
- Do not use this power station in an environment with strong static electricity or strong magnetic fields.

# IMPORTANT SAFETY RULES

---

- Do not stack any heavy objects on the power station.
- Do not use the power station or its charger if it has been dropped or received a sharp blow. A damaged power station will increase the risk of fire and electric shock.
- Do not charge the power station with a damaged cord, plug, or adapter.
- The power station should only be charged using the power sources listed in the product specifications.
- To avoid damaging the unit, only use cords that are provided or approved by the manufacturer to charge the power station.
- Do not attempt to modify this product or use it with accessories that are not recommended or sold by the product manufacturer. Using incompatible accessories may result in a risk of fire, electric shock, property damage, or injury to persons.
- Be careful when connecting/disconnecting the power station from an outlet or connecting/disconnecting loads from the power station. Do not force the power station's plug into an outlet. Do not force plugs into the power station.
- Do not force a polarized plug (one prong larger than the other) into this product. Flip plug over and retry.
- When disconnecting loads, pull the plug instead of the cord. Pulling the cord may damage the cord or the plug.
- Do not power items with damaged or frayed power cords.
- Do not touch the power station's port with wires or other metal objects to avoid short circuits or other risks.
- Do not disassemble the power station. All repairs should be performed by the manufacturer or authorized service person. Using an incorrectly reassembled power station may create a risk of fire or electric shock.
- Do not store the power station near fertilizers, gasoline, or other chemicals.
- Store the product indoors in a dry secure location away from children.
- To avoid damaging the internal battery, the power station should be stored in a partially charged state.

## RECYCLING AND DISPOSAL

---

### **WARNING:**

This power station contains batteries with potentially dangerous chemicals, so it is strictly prohibited to dispose of it in ordinary trash cans. Check and adhere to all applicable federal, state, and local regulations relating to disposal or recycling.

### GENERAL GUIDELINES

- Never dispose of this product or its battery in ordinary trash.
- If possible, make sure that the battery is fully discharged before disposing or recycling the product.
- If a product failure prevents the battery from fully discharging, contact a professional battery recycling company for processing instructions.
- Always follow applicable federal, state, and local regulations when disposing or recycling this product.

## BLUETOOTH® LICENSE STATEMENT

---

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Enginuity Power Systems is under license. Other trademarks and trade names are those of their respective owners.

# SPECIFICATIONS

---

## GENERAL

Model	E3600
Capacity	3686Wh, 51.2V
Size	25.6 in. (649 mm) [L] x 14.5 in. (368 mm) [W] x 16.6 in. (422mm) [H]
Net Weight	96.1 lbs. (43.6 kg)
Connection	<b>Bluetooth®</b> , App

## INPUT

AC Input Voltage	120V
AC Input Power	1500W (120V)
Solar Input	Up to 1200 W
DC Input	13V DC, 10A

## CHARGING

Solar Charging	approx. 3.07 hours @ 1200W charging power
AC Charging	approx. 3 hours @ 1500W charging power
DC Charging	approx. 28.35 hours @130W charging power
EV Charging	approx. 3.07 hours @ 1500W charging power

## OUTPUT

AC (x4)	120V 5-20A (x3) / 120V TT-30 (x1)
USB-A (x2)	5V DC, 2.4A, 12W Max per port
USB-A Fast Charge (x2)	5V DC, 3A/9V DC, 2A/12V DC, 1.5A, 18W Max per port

# SPECIFICATIONS

---

Type-C Fast Charge (x2)	5/9/12/15V/20V DC, 3A, up to 60W Max (x1) 5/9/12/15V/20V DC, 5A, up to 100W Max (x1)
Cigarette Lighter Port Output	12V DC, 10A, 120W Max
Anderson Port Output	12 V DC, 18 A, 216W Max
DC Output	12V DC, 5A, 120W Max
Wireless	15W

## OPERATING TEMPERATURES

Optimum ambient temperature	68~86°F (20~30°C)
Discharge ambient temperature	14 - 104°F (-10 - 40°C)
Charging ambient temperature	32 - 104°F (0 - 40°C)
Storage ambient temperature	14 - 104°F (-10 - 40°C)

## OTHER SPECIFICATIONS


Cell Type	Lithium Phosphate
Cycle Life	Residual capacity of battery after 2000 times ≥ 80%
Protection	High temperature protection, low temperature protection, overdischarge protection, overload protection, short circuit protection, overcharge protection, battery failure protection
EV Charging	Supports American standard charging points, 120V charging input
Battery Pack Expansion	Supports up to four EXB3600 battery packs in parallel Each connected battery pack adds 3.686 kWh of capacity (Battery packs sold separately)

# PACKING LIST


The following products and accessories are included with your purchase:



POWER STATION

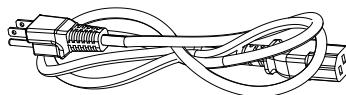


AC CHARGING CABLE

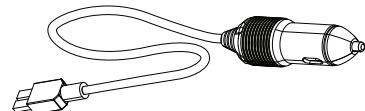


CAR CHARGING CABLE


## PRODUCT FEATURES

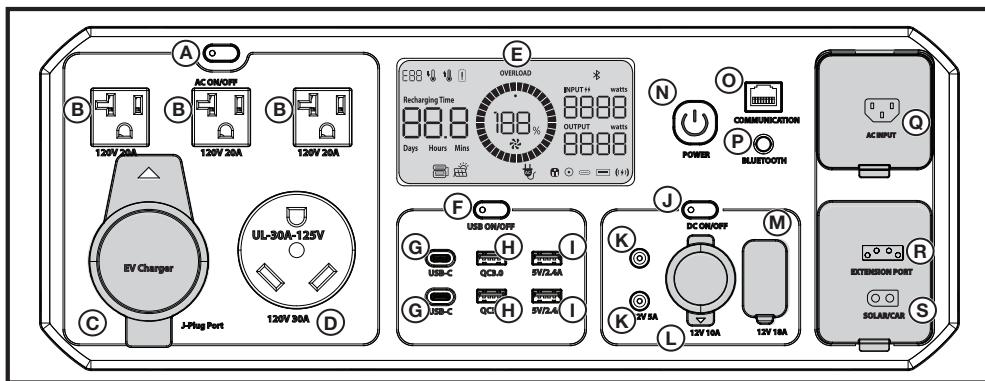

- A. AC On/Off Button
- B. 120V/20A Outlets
- C. J-Plug Port (EV Charge Port)
- D. 120V/30A Outlet
- E. LCD Screen
- F. USB On/Off Button
- G. USB-C Ports
- H. Fast Charge USB-A Ports
- I. USB-A Ports
- J. DC On/Off Button
- K. DC5521 Ports
- L. 12V/10A DC Port
- M. 12V/18A DC Port
- N. Power Button
- O. Communication Port  
(not available in this generation)
- P. Bluetooth® Button
- Q. AC Input
- R. Extension Port
- S. Solar/Car Port
- T. Wireless Charging Pad
- U. Carrying Handles
- V. Retractable Handle

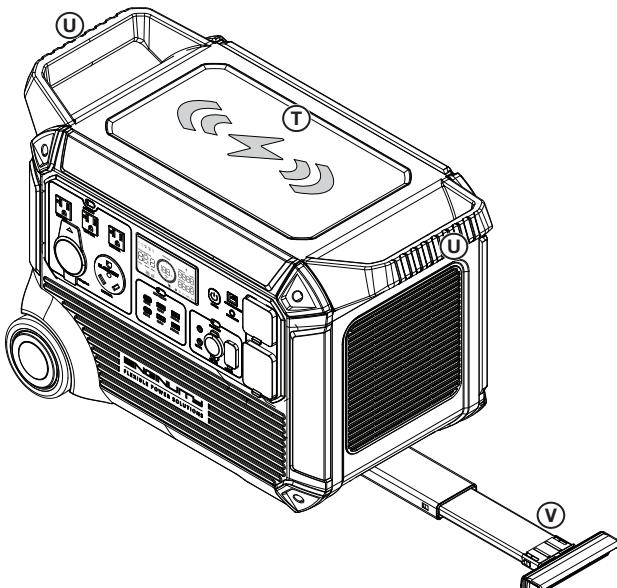

# LCD SCREEN DETAILS

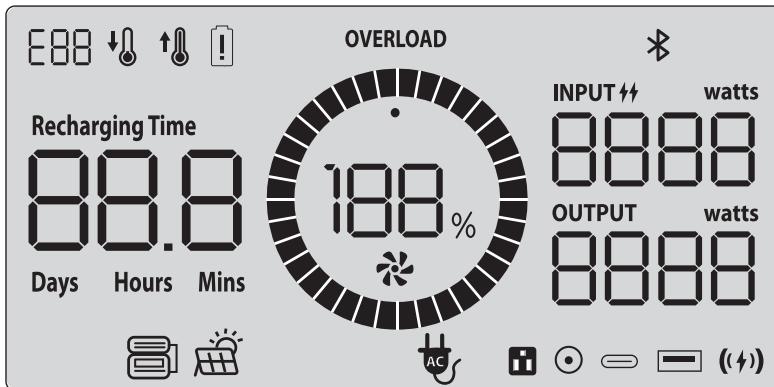

ICON	DESCRIPTION
E88	Indicates errors that are related to the internal battery such as over-temperature, over-current, etc.
🌡️ ⚡ !	Indicates that the power station is operating outside of normal temperature thresholds. Remove loads and/or disconnect cables (if applicable). Allow product to cool or warm to normal operating temperature.
OVERLOAD	Indicates an overload condition. To avoid this fault, verify that the power requirements for the connected device(s) do not exceed the unit's load capacity.
Recharging Time 88.8 Days Hours Mins	The estimated recharging time depends on the input power source and the current battery level. If the unit is recharging and discharging simultaneously, the recharging time reflects the net power flow into the battery. When the discharge rate exceeds the recharge rate, the display will show "99.9".
188%	Shows the battery charge level.
风扇	Indicates that the cooling fan is running.

ICON	DESCRIPTION
Bluetooth	Indicates that the power station is paired to a Bluetooth® enabled device.
INPUT (watts) 8888	Displays the input charging power (in watts).
OUTPUT (watts) 8888	Displays the load output (in watts).
Extension port	Indicates that the extension port is in use.
Solar/car port	Indicates that the solar/car port is in use.
AC port	Indicates that an AC power source is connected.
AC ports active	Indicates that the AC ports are active.
DC ports active	Indicates that the DC ports are active.
USB-C ports active	Indicates that the USB-C ports are in use.
USB-A ports active	Indicates that the USB-A ports are in use.
Wireless charging pad active	Indicates that the wireless charging pad is active.

For more fault display and handling information, please refer to the troubleshooting section later in this manual.

# CHARGING YOUR POWER STATION

---

The power station is shipped in a low charge condition. Using the AC charging cable, fully charge the power station before first use. The initial charge could take between 2 and 3 hours. Subsequent charge times will vary.

To avoid damaging the unit, only use cords that are provided or approved by the manufacturer to charge the power station. If desired, the power station can be used to power other devices while it is being charged. When the unit is both charging and discharging simultaneously, the recharging time is calculated based on the net power flow into the battery. This recharging time will be displayed on the LCD screen. If the discharge power exceeds the recharge power, the LCD will instead display the discharge time. Additionally, the "Smart Life" app (see page 11) will provide real-time data on both the recharge and discharge power for more accurate monitoring.

The unit has an extremely low standby power consumption. When left powered off, the battery level drops by only 1% over 30 days. When powered on with all output panels turned off, the battery level drops by approximately 1% every 1.5 hours. During charging, the cooling fan will adjust its speed based on the internal temperature. It is normal to hear fan noise when the system is under thermal load.

If the AC charger remains connected after the battery is fully charged, the unit will not immediately resume charging. Charging will automatically restart only when the state of charge (SOC) drops below 95%. To conserve energy, the unit will automatically shut down if no output is detected for 2 hours.

## AC CHARGING:

- Plug the AC charging cable into the power station's AC input port. Connect the other end to a 110V-120V AC power outlet. **(Use only a 110V-120V source. Using voltages outside this range may result in charging failure or permanent damage, which is not covered under warranty.)**
- Press and hold the power button to turn on the unit. Charging will not begin unless the unit is powered on.  
**NOTE:** The unit must be turned on to enable charging.
- The LCD screen will display the remaining charge time and battery charge level.

## DC CHARGING:

- Start the vehicle in a well-ventilated area that is a safe distance away from bystanders.
- Plug the car charging cable into the power station's solar/car input port and then connect it to the vehicle's 12V cigarette lighter port.  
**NOTE:** The provided car charging cable should only be used to charge the power station. Do not attempt to power other devices by using this cable.
- The LCD screen will display the remaining charge time and battery charge level.







## SOLAR CHARGING:

- Plug the XT60 cable or Mc4 cable with adapter (each sold separately) into the solar/car input port and then connect it to a solar panel or series of panels.
- The LCD screen will display the remaining charge time and battery charge level.

# CHARGING YOUR POWER STATION

## EV CHARGING:

- Remove the connector from the electric vehicle charging point and plug it into the J-plug port (EV charge port).  
**NOTE:** The input voltage should be 120V. Voltage over this amount will cause charging failure.  
**NOTE:** The power station is compatible with American standard electric vehicle charging points.
- The LCD screen will display the remaining charge time and battery charge level.

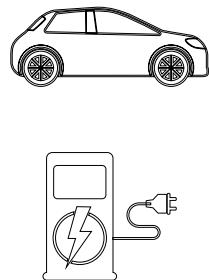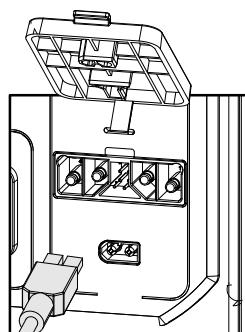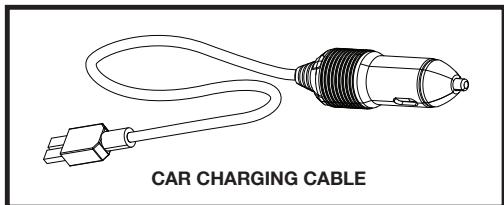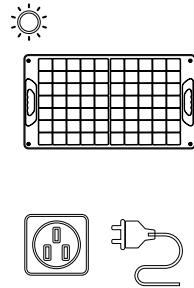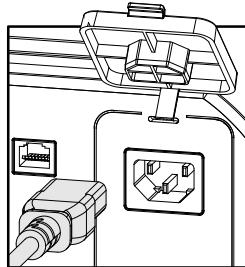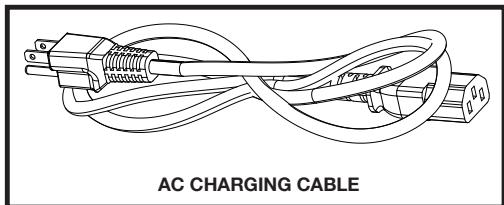

# USING YOUR POWER STATION

Once your power station is charged or while your power station is charging, it can be used to power other devices. Routinely monitor the power station's battery charge level, discharge time, and load output during use.

**NOTE:** If the AC receptacles are energized during AC charging, the power station's internal batteries are bypassed and the connected devices receive power directly from the grid. For details, see "UPS Functionality" later in this section.



## WARNING:

**Do not overload the power station.** Check the power requirements for all devices before connecting them to the power station. Power requirements are often listed on a device's data label or nameplate. Exceeding the unit's wattage/amperage capacity can damage the unit and/or electrical devices connected to it.

Some appliances and tools may have relatively low rated wattage but can draw inrush current 5 to 10 times higher than their nominal current during startup. The E3600 is designed to handle inrush currents up to 2 times of the E3600 rated output capacity. If an appliance exceeds this threshold, the unit's overload protection will be triggered.




## WARNING:

Not all appliances under the E3600's rated wattage are supported due to high inrush current. (Commonly seen high inrush current appliances: Miter saw, table saw, air compressor, MIG/TIG welder, refrigerator, etc.) If an overload occurs:

- **Do not attempt to restart the same appliance.**
- Repeated overload events may **permanently damage** the unit.
- Damage caused by misuse, including **continuous overloading, is not covered under warranty.**

## TO TURN THE POWER STATION ON/OFF

- Press and hold the power button for two seconds to turn the unit on. This will activate the LCD screen and allow the DC port, AC receptacles and USB ports to be used.  
**NOTE:** If the unit is inactive for two hours, it will automatically turn off.
- To toggle the LCD screen off and on, press and release the power button quickly.
- To turn the unit off, press and hold the power button.  
**NOTE:** The unit can not be turned off while it is being charged.

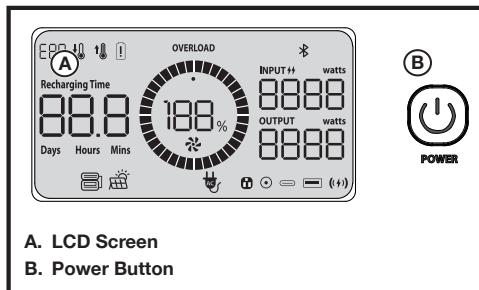

# USING YOUR POWER STATION

## TO USE THE DC OUTPUT

- Turn the unit on and wait five seconds for the unit to initialize.
- Press and release the DC on/off button to turn on DC power. The button's indicator light will turn on when the DC output ports are active.
- Plug the device or devices you want to power or charge into the power station's DC output port(s).
- Press and release the DC on/off button to turn off DC power. DC power will automatically turn off in two hours if no load is detected.

## DC OUTPUT PANEL PROTECTIONS

The DC output panel is equipped with multiple protection features to ensure safe and reliable operation:


- **Short Circuit Protection:**
  - Automatically shuts down the output if a short circuit occurs.
  - Trigger threshold: **15A for 2 milliseconds.**
- **Overcurrent Protection:**
  - Limits sustained high current draw to prevent damage.
  - Trigger threshold: **10A for 1 second.**
- **Low Voltage Protection:**
  - Disconnects the DC output to prevent over-discharge of the battery.
  - Trigger threshold: **11V sustained for 5 seconds.**
- **No Backfeed Protection:**
  - This system **does not support backfeed.** Connecting external power to the DC output may **permanently damage** the internal DC output control board.

## WARNING:


Do not connect any external voltage source to the DC output ports. Backfeeding will void the warranty.

## TO USE THE USB PORTS

- Turn the unit on and wait five seconds for the unit to initialize.
- Press and release the USB on/off button to turn on USB power. The button's indicator light will turn on when the USB ports are active.
- Plug the device or devices you want to power or charge into the power station's USB ports.  
**NOTE:** The fast charge USB ports can charge and power most compatible electronic devices, including tablets and smartphones.
- Press and release the USB on/off button to turn off USB power. USB power will automatically turn off in two hours if no load is detected.

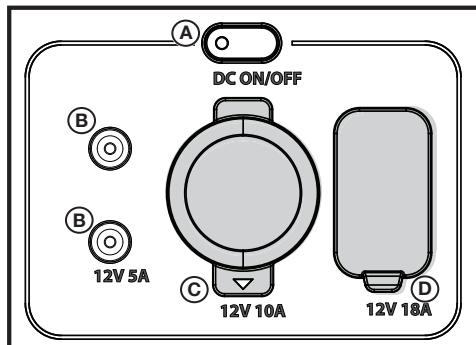

- A. DC On/Off Button
- B. DC5521 Ports
- C. 12V/10A DC Port
- D. 12V/18A DC Port

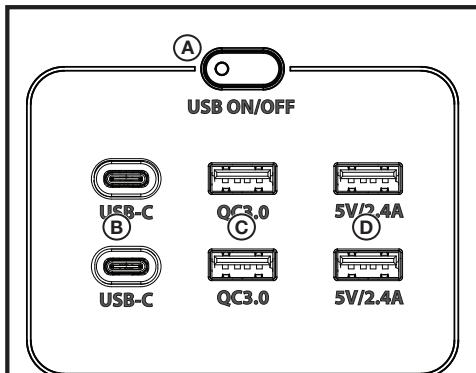

- A. USB On/Off Button
- B. USB-C Ports
- C. Fast Charge USB-A Ports
- D. USB-A Ports


# USING YOUR POWER STATION

## TO USE THE AC RECEPTACLE

- Turn the unit on and wait five seconds for the unit to initialize.
- Press and release the AC on/off button to turn on AC power. The button's indicator light will turn on when the AC receptacles are active.
- Plug the device or devices you want to power or charge into the power station's AC receptacles.
- Press and release the AC on/off button to turn off AC power. AC power will automatically turn off in two hours if no load is detected.

## UPS FUNCTIONALITY

This power station has limited UPS functionality. When the power station is connected to grid power through the AC input port, you can power electrical devices through the AC output port. In this case, the AC power comes from the grid instead of the power station. If there is a blackout it will automatically begin energizing connected devices using energy stored in the internal batteries within 30ms.

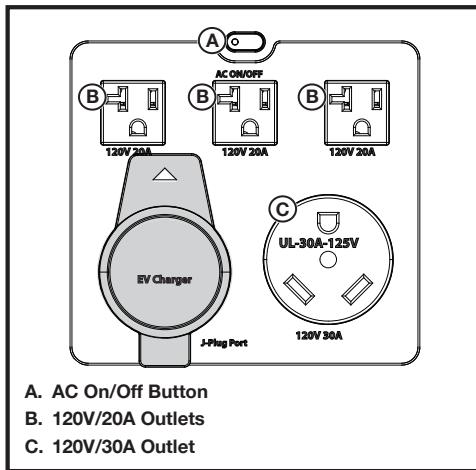


## ! CAUTION:

This device does not provide 0ms switching. Do not connect devices that require 0ms UPS, such as data servers and workstations, during AC charging.

## TO USE WIRELESS CHARGING


- Turn the unit on and wait five seconds for the unit to initialize.
- Press and release the USB on/off button to turn on wireless charging. The button's indicator light will turn on when wireless charging is available.
- Place a compatible device on the wireless charging pad to begin charging.
- Press and release the USB on/off button to turn off wireless charging.

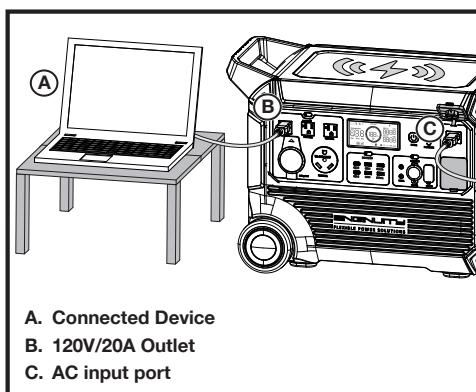

## OVERLOAD RESET

**Do not overload the power station!** Monitor the power station's output. If the unit is nearing overload, turn the power station off. Remove one or more connected devices to decrease the load and resume normal operation.

If the load is not reduced, the unit will reach an overload condition. To extend the life of the power station, avoid running the unit near capacity.

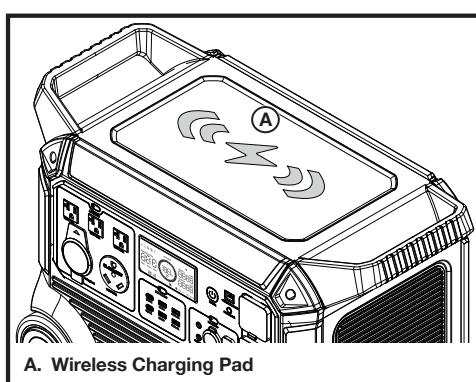

# USING YOUR POWER STATION

If the unit is overloaded or if there is a short circuit in a connected device, an error code and/or the OVERLOAD icon will appear in the display and the power station will automatically stop discharging.

## To restore electrical output:

- Remove all connected devices and turn the unit off.
- Turn the unit on and wait five seconds for the unit to initialize.
- Check the power requirements for the devices you want to power or charge. Ensure that the power requirements do not exceed the unit's load capacity.
- Connect and charge devices as previously described.

## TO USE THE COMMUNICATION PORT

The communication port will allow 2nd generation power stations to connect in parallel to the E3600.

## TO USE BLUETOOTH®

- Download the "Smart Life" app to your Bluetooth® enabled device using an app store or by scanning the QR code.




- Turn the power station on and wait five seconds for the unit to initialize.
- Press and hold the Bluetooth® button for two seconds. The unit will attempt to pair to a Bluetooth® enabled device or remote control.

**NOTE:** The power station will automatically attempt to connect to the last device it was paired to. If a connection cannot be established within five seconds, the unit will make itself available to other Bluetooth® enabled devices.

**NOTE:** The Bluetooth® icon will flash in the display while the power station searches for compatible devices. Once a device is paired, the icon will turn solid.

- Bluetooth® enabled devices must be within 32 ft. of the power station to pair with the unit.
- On the "Smart Life" app's home page, tap the "+" in the upper right corner, then select "Add Device". The Bluetooth® enabled device will find and pair with the power station automatically.
- Once paired, the device can be used to monitor and control the power station from a distance.
- To unpair the power station from the Bluetooth® enabled device, select the power station from the list of devices in the Smart Life App and select "Remove Device" in the bottom right hand corner.


**NOTE:** When a new device is paired, the unit will automatically unpair from a connected device.

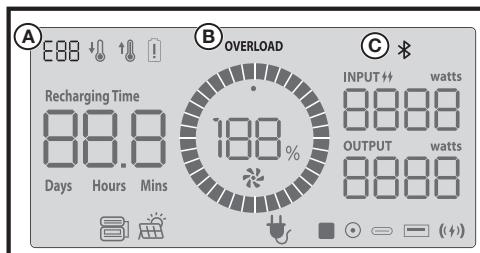

A. Error Code

B. OVERLOAD

C. Bluetooth® Icon

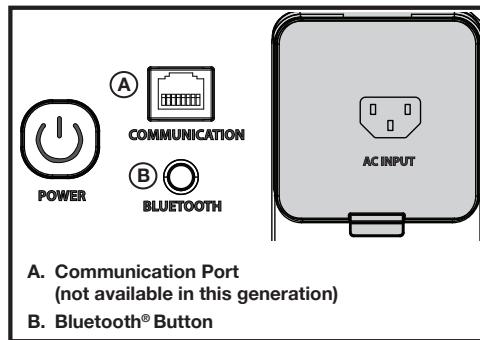


A. Communication Port  
(not available in this generation)

B. Bluetooth® Button



# USING YOUR POWER STATION




## UNDERSTANDING THE SMART LIFE APP

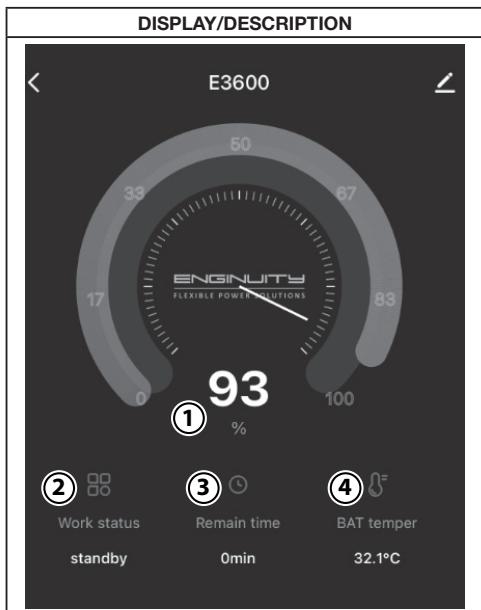

1. Shows the battery charge level.
2. Displays the work status.
3. Displays the remaining charge time (in minutes).
4. Shows battery temperature.



Used to toggle USB power on and off.

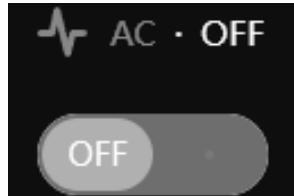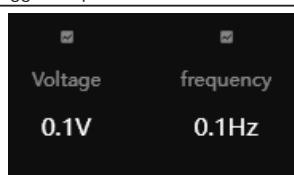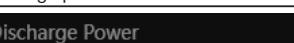
DISPLAY/DESCRIPTION	
 DC · OFF OFF	Used to toggle DC power on and off.
 AC · OFF OFF	Used to toggle AC power on and off.
 Voltage: 0.1V      Frequency: 0.1Hz	Displays voltage and frequency
 Recharge Power: 0.1w	Shows recharge power
 Discharge Power: 0.1w	Shows discharge power
 Error Code: normal >	Shows error codes/error status
 POWER OFF	Used to turn the power station on and off.

# USING YOUR POWER STATION


## TO EXPAND BATTERY CAPACITY

- Connect one end of a parallel cable (included with the EXB3600 and sold separately) to the extension port and the other end to an EXB3600 expansion battery pack (sold separately) to increase the capacity of the power station by 3.686 kWh.
- Up to four EXB3600 expansion battery packs can be connected in parallel for a total of 14.744 additional kWh.
- Refer to the expansion battery pack(s) user manual for charging and operating instructions.
- To remove an expansion battery pack, disconnect the parallel cable from the power station.

**NOTE:** The parallel cable should be connected only when the E3600 power station and EXB3600 battery pack(s) are powered OFF. If you connect or disconnect the parallel cable while the units are powered ON, they will automatically shut down within 10 seconds. To resume normal operation, turn the power station ON. Once the parallel cable is connected, all buttons and output panels on the battery pack(s) will be disabled. Controls and outputs must be accessed through the power station.

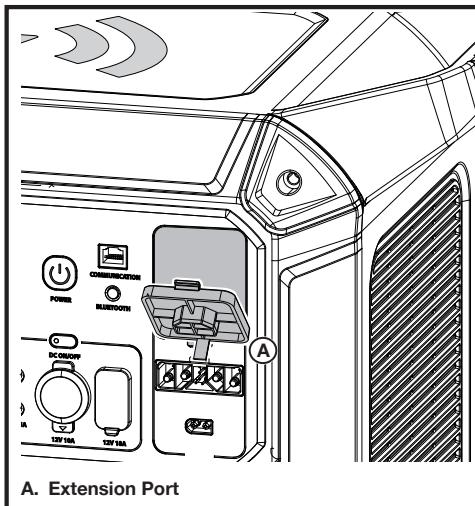

A. Extension Port

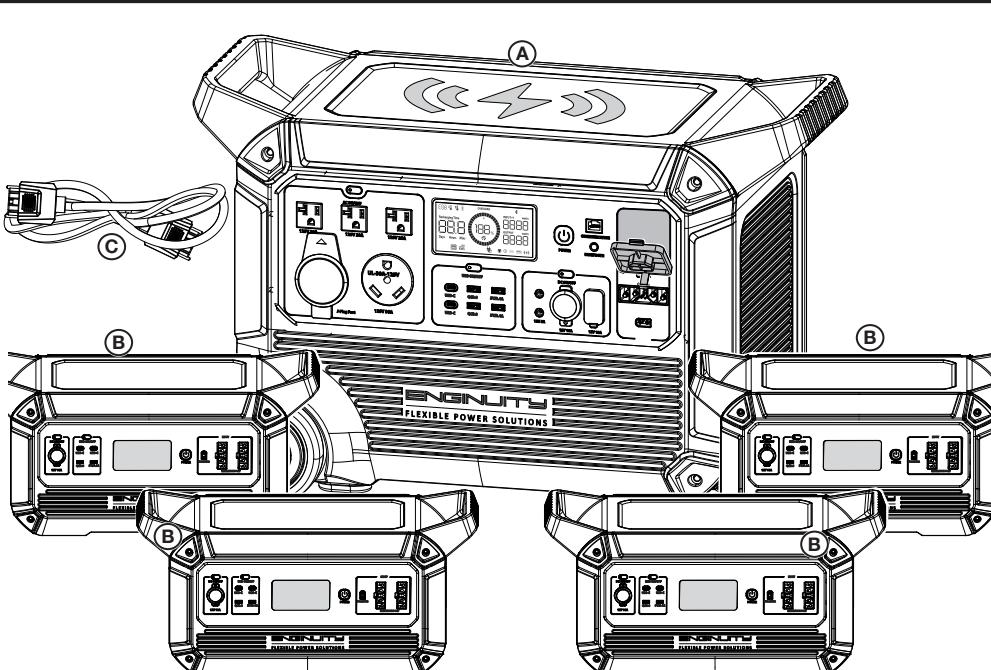

A. E3600 Power Station

B. EXB3600 Expansion Battery Pack (Sold Separately)

C. Parallel Cable (Included With the EXB3600 and Sold Separately)

# TROUBLESHOOTING AND ERRORS

DESCRIPTION	PROBLEM	SOLUTION
 Flashing	High Temperature (While Discharging)	Turn off the unit. Remove loads and/or disconnect charging cables. Allow product to cool to normal operating temperature before you resume charging or discharging.
 Solid	High Temperature (While Charging)	
 Flashing	Low Temperature (While Discharging)	Turn off the unit. Remove loads and/or disconnect charging cables. Allow product to warm to normal operating temperature before you resume charging or discharging.
 Solid	Low Temperature (While Charging)	
 Flashing	Battery Charge Level is Low	Turn off the unit. Remove loads and connect the unit to a power source for charging.
 Flashing	Fan Failure	Restart the device.
 Flashing	Solar/Car Input Error	Turn off the unit. Disconnect the solar panel or car charging cable from the battery pack. Wait 5 seconds and turn the unit ON. Reconnect the solar panel or car charging cable.
 Flashing	AC Discharge Error	Turn off the unit. Remove all connected devices. Wait 5 seconds, turn the unit on, and activate AC power. Verify power requirements for your device(s) before reconnecting. Do not exceed the unit's load capacity.
<b>OVERLOAD</b>	Overload Detected	Turn off the unit. Remove all connected devices. Wait 5 seconds and turn the unit on. Verify power requirements for your device(s) before reconnecting. Do not exceed the unit's load capacity.
<b>E88</b>	Power Station Fault	<ol style="list-style-type: none"> <li>1. Record the error code.</li> <li>2. Turn off the unit. Remove loads and/or disconnect charging cables.</li> <li>3. Contact customer services.</li> </ol>


If the error remains after trying the solutions listed above and restarting the unit, contact customer service for assistance.

# MAINTAINING AND STORING THE UNIT

---

## GENERAL MAINTENANCE

- Routinely clean the unit's exterior and vents. Turn the unit off. Use a clean cloth or soft bristle brush to remove dirt, oil, grease, etc. **Do not use water or solvents and never submerge the unit.**
- Inspect the unit for broken parts, damaged ports/ receptacles, loose screws, etc. **NEVER disassemble or attempt to service the power station.** If the unit is damaged, contact customer service for assistance.

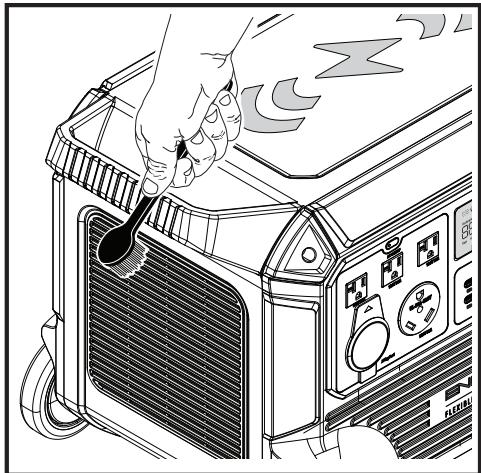

## STORING THE POWER STATION

- Store the product indoors in a dry secure location away from children.
- Do not store the power station near fertilizers, gasoline, or other chemicals.
- Do not operate or store the power station in locations colder than 4°F (-15.5°C) or hotter than 113°F (45°C). This product should not be stored outside or in your vehicle.
- To avoid damaging the internal battery, the power station should be stored in a partially charged state.
  - When storing the unit for less than three months (short-term storage), charge the unit to 50% .
  - When storing the unit for more than three months (long-term storage), charge the unit to 60% and add additional charge periodically.

## FCC WARNING

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

# **IC ID WARNING**

---

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20 cm.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil n'edoit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectriquesubj, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et compliance d'acquérir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20 cm.

# **WARRANTY INFORMATION**

---

## **LIMITED WARRANTY STATEMENT**

Enginuity Power Systems warrants to the original retail purchaser that this product is free from defects in workmanship and materials for two years from the date of purchase. Keep a copy of your purchase receipt as proof of purchase.

This warranty is non-transferable and does not cover damages from normal wear and tear, modifications, abuse, misuse, accidents, neglect, improper storage and maintenance, non-authorized servicing, or acts of God. The warranty is limited to the power station and the original purchaser. Enginuity Power Systems is not liable for any third party claims, property damage, data loss, financial hardship, etc. arising from the use of this product.

The product, and any defective parts, must be returned to Enginuity Power Systems or an authorized service repairer within the warranty period. At the discretion of Enginuity Power Systems, the owner may be responsible for some or all of the shipping and delivery costs. In respect to claims, Enginuity Power Systems is only responsible for repairing or replacing defective items.

This warranty provides specific legal rights; additional rights may differ by state. For more information, contact customer service at [service@eflexps.com](mailto:service@eflexps.com).

# **ENGINIUTY**

---

## **FLEXIBLE POWER SOLUTIONS**

### **E3600**

## **Portable Power Station / User Manual**

## **Central Eléctrica Portátil / Manual de Usuario**

**CUSTOMER SERVICE**  
**SERVICIO AL CLIENTE**

**[SERVICE@EFLEXPS.COM](mailto:SERVICE@EFLEXPS.COM)**

© 2024 Enginuity Power Systems. All Rights Reserved.  
730 S. Washington St., Alexandria, VA 22314

REV 04 - 04/10/25