Contents

- Michael James Keller
- Varible setup
- Part 1: Shaft Design Calculations
- Part 1: Finding Diameter
- Verifying with correct shaft diameter yeild check
- Part 2: Pulley Key design
- Part 2: Set screw design
- Part 2: Connection Pin design
- Part 3: Roller Bearing design

Michael James Keller

```
clc
clear
```

Varible setup

```
% forces
drf N x = -2013; %drive roller force N x
belt force N x = -1131; %loaded belt side N x
belt force N y = -595; %loaded belt side N y
% Distances
length between supports mm = 600; %length between supports mm
drive roller length mm = 580; %
drive roller diameter mm = 63.5; %
bearing width mm = 12.7; %bearing width mm
support to mid pulley mm = 70; %support to mid pulley mm
support to left drive roller mm = 16.35; %
support to right drive roller mm = 16.35; %
right pin mm = bearing width mm/2 + length between supports mm - 75;
pulley width mm = 25; %
pulley radius mm = 50; %
key length mm = 38; % should not excede 1.5 * shaft diameter =<39; 1.5 inch
key height mm = 6.35; % set later - 3/16 - made square with width
key width mm = 6.35; % 1/4 inch
keyway depth mm = 2.38; % 3/32
% Speeds
conveyor speed mm per s = 300; %
% Force Application Distances
rx1 mm = 0; %reaction 1 application distance mm
rx2 mm = length between supports mm + bearing width mm; %reaction 2 application distance mm
drapp mm = (bearing width mm/2) + (length between supports mm/2); %drive roller application d
istance mm
pullapp mm = (bearing width mm/2) + length between supports mm + bearing width mm + support t
o mid pulley mm; %pulley application distance mm
```


```
% Prices
price = 0;
```


Part 1: Shaft Design Calculations


```
% Finding reactions
drive roller distributed load N per mm = drf N x /drive roller length mm;
% Sum of Moments
reaction 2 N x = -1*((( drf N x * (drapp mm)) + ( belt force N x * (pullapp mm) ))/rx2 mm);
reaction 2 N y = -1*(((pullapp mm) * belt force N y) / rx2 mm);
reaction 2 N magnitude = sqrt(reaction 2 N y^2 + reaction 2 N x^2);
fprintf('Right bearing reaction = %.2f N \n', reaction 2 N magnitude);
% Sum of forces
reaction_1_N_x = -1*(drf_N_x + belt_force_N_x + reaction_2_N_x);
reaction 1 N y = -1* (belt force N y + reaction 2 N y);
reaction 1 N magnitude = sqrt(reaction 1 N y^2 + reaction 1 N x^2);
fprintf('Left bearing reaction = %.2f N \n', reaction 1 N magnitude);
% Finding Torque
belt force N magnitude = sqrt(belt force N x^2 + belt force N y^2);
belt torque N mm = belt_force_N_magnitude * pulley_radius_mm;
belt torque N m = belt torque N mm/1000;
% Where would we expect the highest stress in the shaft?
shaft length mm = bearing width mm + length between supports mm + bearing width mm + support
to_mid_pulley_mm +pulley_width_mm/2;
% Moment Diagram: X - Z plane
x = linspace(0, (shaft length mm), 1000);
V \times z = (\text{reaction 1 N} \times .* (x>0)) + (\text{drive roller distributed load N per mm.*}(x-support to lef
t drive roller mm).*((x<=(rx2 mm - support to right drive roller mm))&(x>=rx1 mm + support to
_left_drive_roller_mm))) + drf_N_x.*(x>rx2_mm - support_to_right_drive_roller_mm) + ((reactio
n 2 N x).*(x>(rx2 mm))) + (belt force N x.*(x>pullapp mm);
M xz = cumtrapz(x, V xz);
figure (1)
subplot (211)
xlabel('Distance (mm)')
ylabel('Shear (N)')
plot(x, V xz)
title('X - Z plane Shear')
grid on
subplot (212)
xlabel('Distance (mm)')
ylabel('Moment (N*mm)')
plot(x, M xz)
title('X - Z plane Moment')
grid on
% Moment Diagram: Y - Z plane
V_yz = (reaction_1 N_y .* (x>0)) + ((reaction_2 N_y) .* (x>(rx2 mm))) + (belt_force_N_y .* (x>pul_y) .* (x>0)) + (x>0)
lapp mm));
M yz = cumtrapz(x, V yz);
figure (2)
```


```
subplot (211)
xlabel('Distance (mm)')
ylabel('Shear (N)')
plot(x,V_yz)
title('Y - Z plane Shear')
grid on
subplot (212)
xlabel('Distance (mm)')
ylabel('Moment (N*mm)')
plot(x,M yz)
title('Y - Z plane Moment')
grid on
% sum of squares moments
V \text{ prime} = \text{sqrt}(V \text{ yz.}^2 + V \text{ xz.}^2);
M prime = sqrt(M yz.^2 + M xz.^2);
figure (3)
subplot (211)
xlabel('Distance (mm)')
ylabel('Shear (N)')
plot(x,V_prime)
title('resultant plane Shear')
grid on
subplot(212)
xlabel('Distance (mm)')
ylabel('Moment (N*mm)')
plot(x,M_prime)
title('resultant plane Moment')
grid on
% torque graph
torque = belt torque N mm .*((x> (bearing width mm/2)+ 600 - 75)&(x<shaft length mm));
figure (4)
plot(x,torque)
xlabel('Distance (mm)')
ylabel('Torque (N*mm)')
title('Torque')
grid on
% I am expecting to find the highest stress in that shaft at the right most
% retaining ring as the stress concentrations at this point will be great.
```


```
Right bearing reaction = 2374.66 \text{ N}
Left bearing reaction = 868.73 \text{ N}
```

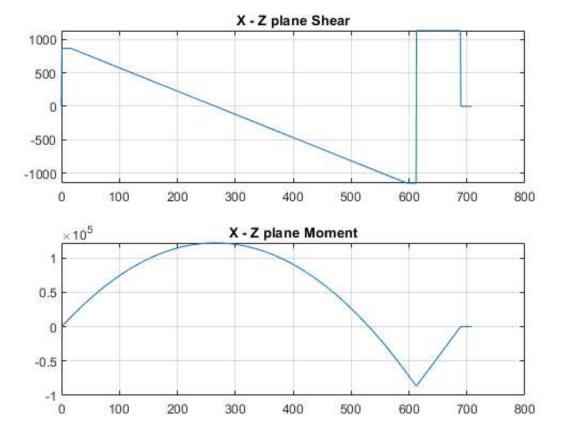

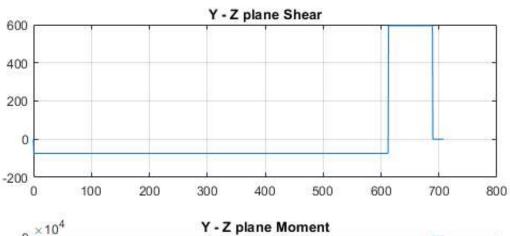

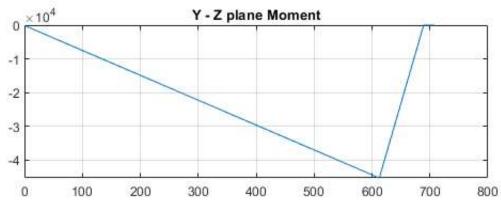

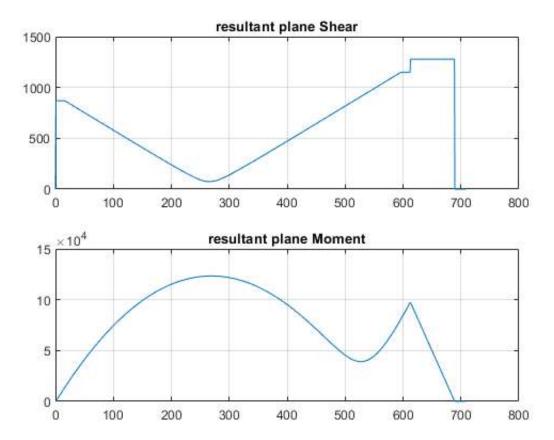

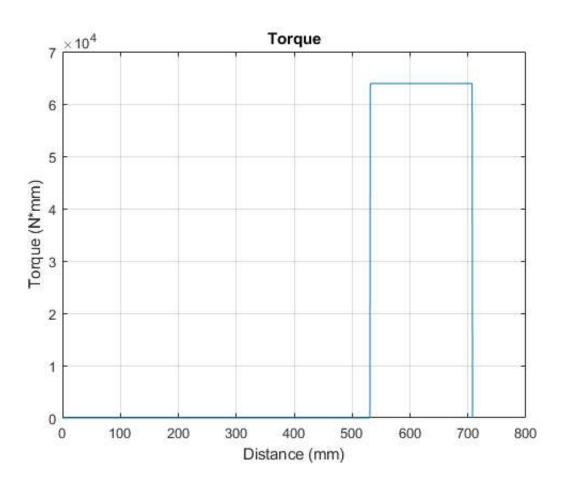


Part 1: Finding Diameter

```
close all
% Finding k a: surface finish factor (table 6-2), McMaster says ground
s ut MPA = 2206; %http://www.carbidedepot.com/formulas-hardness.htm rockwell c25 (855) use c
60 (2206) instead
k = 1.58*s \text{ ut MPA}^{(-0.085)}; % should be .8901
% stress concentrations
% shaft length mm
% Finding Kt (bending) and Kts (tortional): End mill keyseat table 7-1
k t = ones(1,1000);
k t(x>((12.7/2)+600+12.7) & x<(12.7/2)+600+12.7+4) = 4.8; % was 5, changed to 4.8 retaining rin
k t(x>((12.7/2)+600-75) &x<(12.7/2)+600+1-75) = 2; % 2. for pins
k t(x>((12.7/2)+75)&x<(12.7/2)+1+75) = 2; % 2. for pins
k t(x>(shaft length mm-key length mm)) = 2.14; % 45mm key length
k t(x>(shaft length mm-support to left drive roller mm)) = 00;
% going back to find real stress concentration using table A-16-18
% retaining ring 97633A300
% used
% https://www.fastenermart.com/files/external-retaining-ring-specifications.pdf
% for values, edge margin is 0.09 inches
ring t = (1 - 0.94)/2;
ring r = 0.005;
ring a = 0.046;
ring r per t = ring r/ring t;
ring a per t = ring a/ring t;
% K t is 4.8;
% k ts is 2.75;
%k ts = 3.0;
k ts = ones(1,1000);
k_{\pm}(x)((12.7/2)+600+12.7) & x<(12.7/2)+600+12.7+4) = 2.75; % initial guess 5, changed to 2.75
% input 2
k ts(x>((12.7/2)+600-75) &x<(12.7/2)+600+1-75) = 3.; % 3.6 for pins
k ts(x>((12.7/2)+75) &x<(12.7/2)+1+75) = 3.; % 3.6 for pins
k ts(x>(shaft length mm-key length mm)) = 3.0; % 45mm key length
k_ts(x>(shaft_length_mm-support_to_left_drive roller mm)) = 00;
% Finding k b: size factor page 296 (6-20)
d = 31.75; % experimental diamter mm
if (d < 51)
   k b = 1.24*d^{(-0.107)};
elseif (d > 51 \&\& d < 254)
    k b = 1.51*d^{(-0.157)};
end
% k b should be .8899 - maybe
% Finding Se value
k c = 1; % Loading Type, combined
k d = 1; % temp factor, normal temp
k e = .62; % reliability factor 99.9999, It will pretty much never fail and that is how I wan
% table 6-5, page 301, argue certain reliability factor
```

```
% Going back to find stress concentrations for pins, table A-15 10
% pins used 98381A552
% .25 inch pin
pin diameter = .25;
pin d per D = pin diameter / 1.25;
% x value 0.2
% table A-15-10 & A-15-11
% gives moment stress concentration of 2.2
% gives tortion stress concentration of 3.2
% finding k f - page 303 - Have no idea, k f = k t,
% page 304, notch sensitivity Neuber equation to find k f
% q r is 3.17 and q is 1.787
q=0.85; % from table 6-20 with Sut 0.855 and .5mm radius, was 0.8
q shear = .85; % was 0.8
% k_f = 1 + q^*(k_t - 1); %estimate k_f for first itteration
k fs = 1 + q shear*(k ts-1);
% used k f and k fs in goodman equation
k f = 1;
% finding s y, material prop
s y = 517; % 517 for 75,000 | 310 for 45,000
% Finding s e
s = prime = s ut MPA / 2;
% finding s e prime - Merin factors
se = ka * kb * kc * kd * ke * kf * se prime;
% find safety factor n in shaft
n = 1.5;
% find mean torque
t m = torque; %N*mm
% find bending moment amplitude
m a = M prime;
% DE - Goodman Equation
d = ((16*n/pi).*(((2.*k_t.*m_a)./s_e)+(sqrt(3).*k_ts.*t_m)./s_ut_MPA)).^(1/3);
figure (5)
plot(x,d)
xlabel('Distance (mm)')
ylabel('Minimum required diameter')
title('Diameter required vs distance')
grid on
% print varibles - location of greatest necessary diameter should be at
% location of greatest stress
[val, loc] = max(d);
fprintf('Required Diameter = %.2f mm \n', val);
fprintf('Required Diameter = %.2f inches \n', (val*0.0393701));
max moment = M prime(loc);
max_torque = torque(loc);
```

```
Required Diameter = 24.46 mm
Required Diameter = 0.96 inches
Required Length = 27.87 inches
Max moment = 89115.28 Nmm
Max torque = 63898.08 Nmm
```

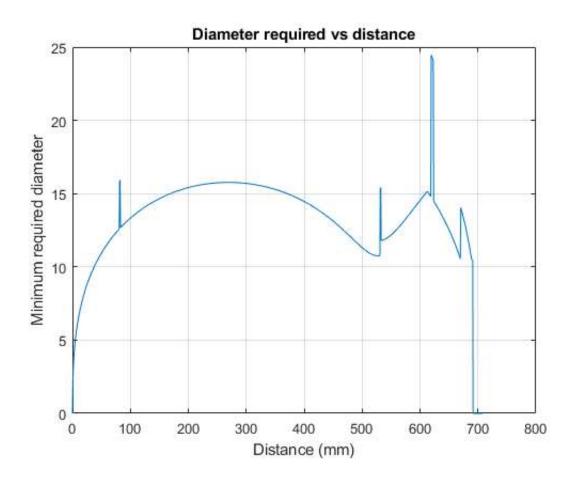

Verifying with correct shaft diameter yeild check

```
diameter = 32.75;% was 25.5
c = diameter/2;
i = (pi*diameter^4)/64;
% sigma_prime_m = sqrt(((k_f.*max_moment.*c)./i).^2+(3*max_torque).^2); % set equal to torque
```

```
% sigma_prime_a = sqrt(((k_fs.*t_m.*c)./(i/2)).^2+(3.*max_torque).^2); % set equal to bending
moment
sigma_prime_m = max_torque;
sigma_prime_a = max_moment;

simple_shaft_equation = n*max((((k_fs.*torque.*c)./(i/2)))./s_y + (((k_f.*M_prime.*c)./i))./s
_y);
% if this is less then 1, the yeil check succeeds
if (simple_shaft_equation < 1)
    fprintf('Shaft passes yeild check \n')
else
    fprintf('Shaft fails yeild check \n')
end
% Do von mises check for shaft with given moments and torque.</pre>
```

Shaft passes yeild check

Part 2: Pulley Key design

```
% Key width and height from table 7-6, page 383
% Diameter of shaft being 1", the key dimentions should be as put in
% above, or use stock for cheaper option, 98510A125
% Key selected Part#: 98870A215 Sy = 1606 MPA
key_shear_N_per_mm2 = 4*belt_torque_N_mm/(diameter * key_height_mm * key_length_mm);
key_torque_N_per_mm2 = 2*belt_torque_N_mm/(diameter * key_width_mm * key_length_mm);
% find Von Mises of stress to make sure it doesnt break
key_Von_mises = 1.2*sqrt(key_shear_N_per_mm2^2+(3*key_torque_N_per_mm2^2)); % add safey factor
fprintf('Key_Stress = %.2f_MPA_\n',key_Von_mises)
% This is well below the yeild stress
```

Key Stress = 51.34 MPA

Part 2: Set screw design

```
% Page 381 - table 7-4
% No axial load so what set screw we chose doesnt matter that much
% Screw selected Part #: 94105A142
```


Part 2: Connection Pin design

```
% One pin must resist all torque -
force_shaft_Nmm = 1.2 * belt_torque_N_mm /(diameter/2); %add saftey factor
pin_area = 2*force_shaft_Nmm/V_prime(751);
pin_radius = sqrt(pin_area/pi);
fprintf('Minimum pin radius = %.2f mm \n',pin_radius)
% rounded up to .25 inch pin because it was cheaper than a 3/16
% 98381A552
```

Part 3: Roller Bearing design

```
% part number: 5709K85
% table 7-9 for fit, page 389, H7, q6
% The shaft directly from McMaster is toleranced to LC 1 - h5
% The bearing directly from McMaster comes toleranced to LC 1 - H6
% This is a tight locational clearance
% from machinery handbook, page 32
% + 1 thou
% - .6 thou
% table A-12 for shaft fits and limits
% need to make shaft H,7 tolerance,
% bearing has to be thinner than 12.7 mm
f dynamic n = 9341.265; %newtons
f static n = 44482.22; % newtons
a = 10/3; %10/3 for thrust bearings
roller circumference = 199.49;
l catalog = 1*10^6;
1 design = conveyor speed mm per s / roller circumference * 3.154*10^7; % seconds per year
f catalog = reaction_2_N_magnitude * (l_design/l_catalog)^(1/a);
if((f catalog < f dynamic n) && (reaction 2 N magnitude < f static n))</pre>
    fprintf('Bearing passes \n')
else
   fprintf('Bearing fails \n')
end
% The outside of the bearing should have an interference fit with the
% journal of the rails. The tolerancing for the out side of the bearing is
% +0.001 / -0.0, similar to a n5 fit. We want an interference fit, H7, p6
% on Machine design handbook table 12 ANSI B4.1-1967 (R1999), giving us 0.0016 inches of
% interference worse case. Because of this, the journal the bearing sits
% inside should be should have a nominal measurement of 2.328125 inches
% from the drawing of the bearing with tolerances +0.001 / -0.0016 inches.
% Because both the shaft and the bearing come within these tolerances, we
% will not need to machine them, saving on cost.
```

Bearing passes

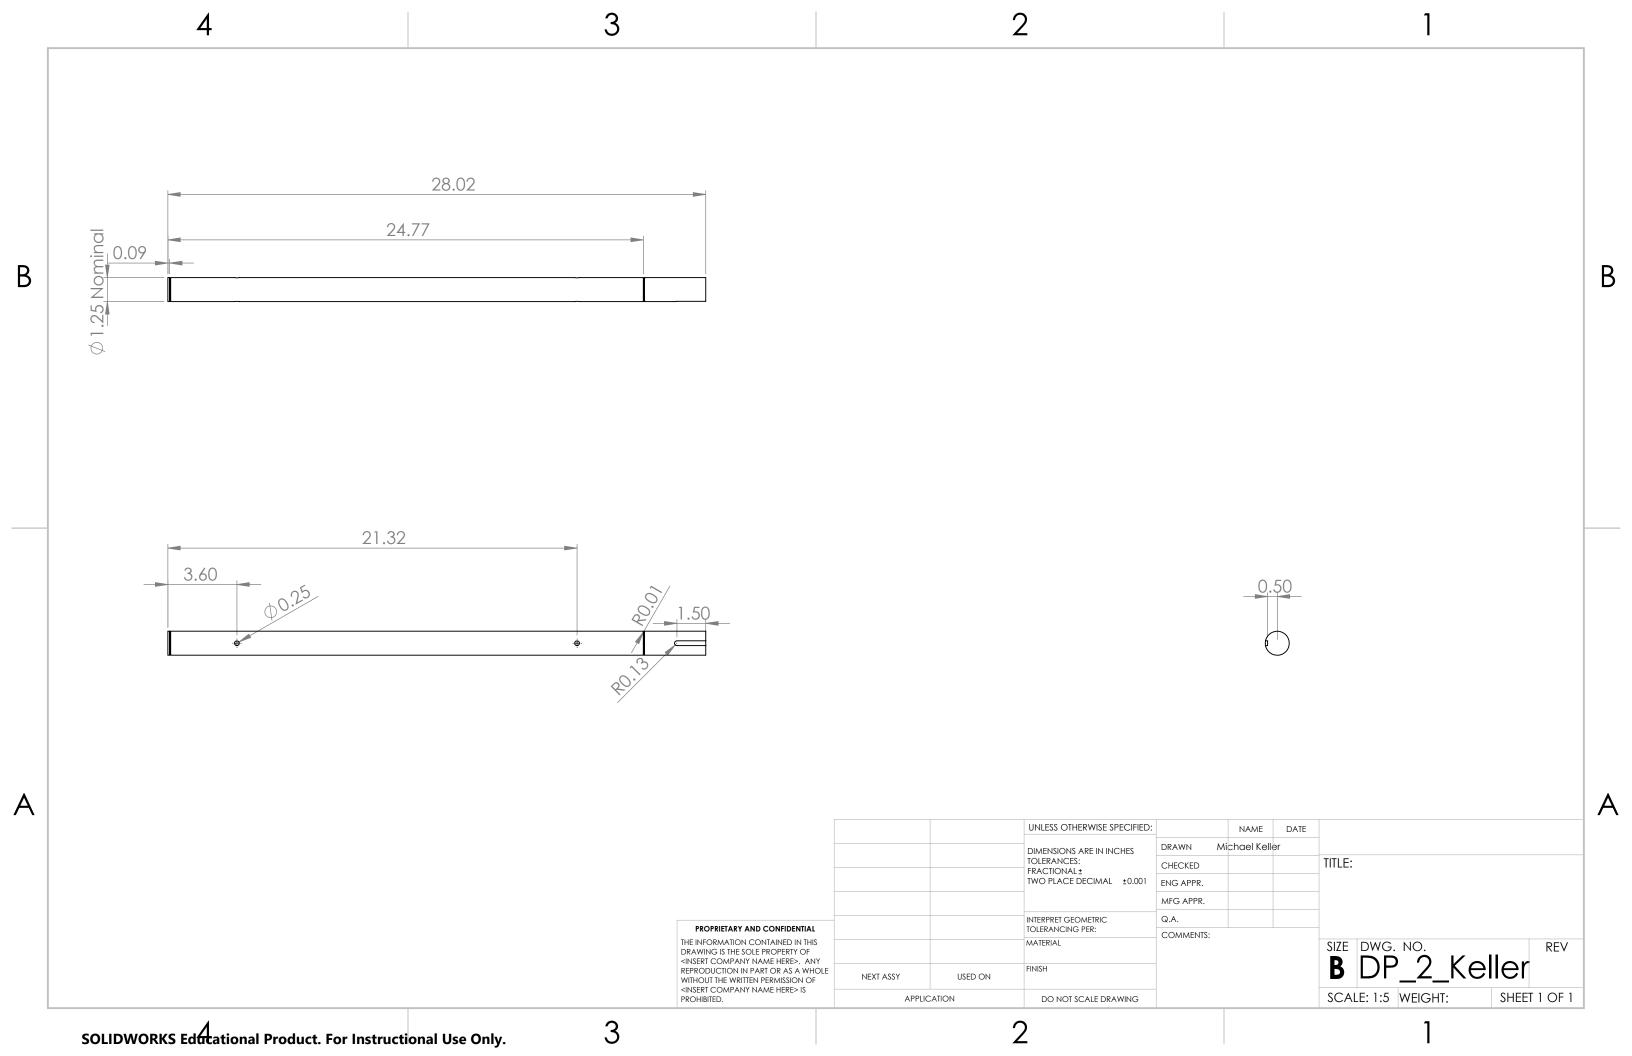

Part	Part number	Cost			
Shaft	5 947K55	\$	76.96		
Retaining Ring	9 7633A3402	\$	0.55	5.83 for 25	
Key	98870A2152	\$	0.42	4.23 per 10	
Set screw	94105A142	\$	0.15	7.52 for 50	
Pin	98381A552	\$	1.31	6.56 for 10	
Bearing	5709K85	\$	50.32		25.16
Machining		\$	-		
		\$ 129.71			