
# F9000X\_10x7000GiB\_nvme\_2xNDR400\_Ncli ents1

## 1. Hardware

The hardware is composed of one client and three servers connected to the same switch.

Hardware Diagram

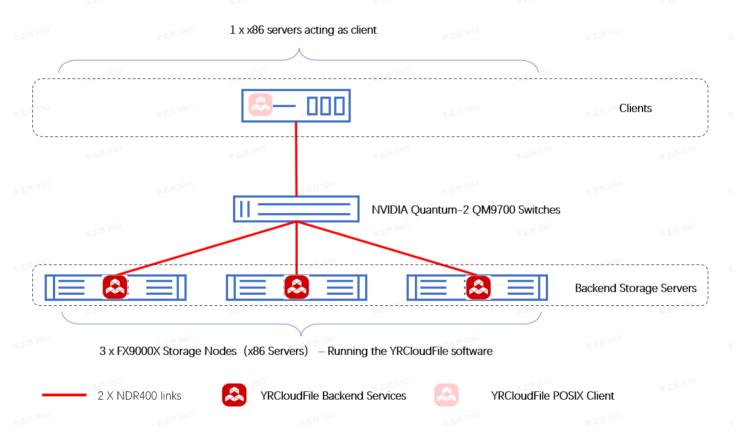

## 1.1 Client

The client is a commercial x86 architecture server node with 2 CPU socket and 256GiB of RAM based on Intel motherboard. The configuration is the default one. The client communicates with the server through IB using the two links dedicated for storage.

The detailed configuration of the client is shown in the following table:

Client Node components	Configuration Description	Client Node Count
Client CPU	• INTEL(R) XEON(R) PLATINUM 8558 x 2	1 享益然 3065
Client Memory	• 256GB DDR5 5600	李茹州

Client OS Boot Drive	•	446GiB nvme SSI	) x 2	享盖院 3005	
Client network_type	•	Mellanox CX7 Sin	gle-port N	DR400 InfiniBand HCAs	李孟然 3063
李孟然 3065		x 2			

#### 1.2 Server

The server is a commercial YanRongTech F9000X appliance (storage), based on the x86 server architecture, using the YRCloudFile distributed file storage system. For this testing environment, the F9000X storage system consists of 3 storage server nodes. The configuration of each storage node includes: 1 x 446GiB SATA SSD as the system OS drives, 2 x Intel P5620 1536 GiB NVMe SSDs as metadata drives, 10 x Memblaze 7940 7000 GiB NVMe SSDs as data drives, and 2 x single-port CX7 400Gbps NDR InfiniBand HCAs.

The server communicate with the client through IB:

2x single-port NDR400 adapters for a total of 2x NDR400 links

The detailed configuration of the servers is shown in the following table:

Server Node components	Configuration Description	Server Node Count
Server CPU	• Intel(R) Xeon(R) Gold 6430 x 2	
Server Memory	• 256GB DDR4 4800	
Server OS Boot Drive	• 446GiB SATA SSD x 1	李玉然 3065
Metadata drives	• Intel P5620 1536 GiB nvme SSD x 2	李盂然 3065
Data drives	• Memblaze 7940 7000 GiB nvme SSD x 10	
Server network_type	<ul> <li>Mellanox CX7 Single-port NDR400 InfiniBand HCAs x 2</li> </ul>	

## 1.3 Switch

The switch is a commercial NVIDIA (Mellanox) QM9700 The client and server is connected to it.

## 2. Software

## 2.1 Client

The configuration of the client-side software is shown in the table below:

Software Type	Software Version					
Client OS	Ubuntu 22.04	李盂然30	65	李孟然 3065		
Client Kernel	5.5.0-104-generic	李孟然 3065	李盂然 3065			
yrfs-client	YRCloudFile 6.10.5	李盂然 30	65	李孟然 3065		
Mellanox OFED version	MLNX_OFED_LINUX-23.10-2.1.3.1	李盂院 3005	李盂然 3065			

#### 2.2 Server

The configuration of the Server-side software is shown in the table below:

Software Type	Software Version				
YRCloudFile OS	YRCloudFile 6.10.5	字面就 300 <sup>5</sup> 字面就 306 <sup>5</sup>	李孟炔 3060		
Storage Servers OS	CentOS Linux release 7.9.2009 (Core)				
Storage Servers Kernel	5.3.18.20211010 x86_64 GNU/Linux				
Mellanox OFED version	OFED-internal-5.4-3.4.0				

# 3. Settings

## 3.1 Client

The standard yrfs-client (Version: YRCloudFile 6.10.5) is installed on the client using the default installation

procedure. yrfs-client is used for the client to access the remote YRCloudFile filesystem.

## 3.2 Server

For detailed configuration information about storage servers, see the table below:

storage_syste			Description			
盂然3065 <b>m</b>	李盂然 3065	李盂然 3065	李盂然 3065		李孟然 3065	
vendor_name	李无然	3,065	YanRongTech	李志然 3065		李盂然 306
solution_name			YRCloudFile			

model_name				F9000X			
version				6.10.5			
usable_capacity _GiB	李孟然 3065	李孟然 3065	李盂然 3065	81920	变盂然 3065	李盂然 3065	李孟然 3065
raw_capacity_G iB				163840			

### 3.3 Switch

No tuning applied.

# 4. Configuration

# **4.1** Configure Direct IO

# 4.1.1 Client Configuration

Edit the configuration file /etc/yrfs/yrfs-client.conf

```
1 cluster_addr = 100.10.10.30,100.10.10.31,100.10.10.32
2 enable_cache = false
3 enable_multi_channel = true
4 timeout_sock_conn_ms = 100
5 nr_conn_socks_pernode = 512
6 rdma_mode=0
7 mnt_wait_timeout_ms = 1600
```

## **4.1.2** Storage Backend Configuration

Configure storage through the yrcli command line:

```
1 yrcli --config --type=oss --key=enable_read_cache --op=set --value=false
2 yrcli --config --type=oss --key=enable_dio_read --op=set --value=true
```