

Remote Controllers (RCs)

Frank Tränkle*
Hochschule Heilbronn, Germany

September 15, 2025

*frank.traenkle@hs-heilbronn.de

Contents

1	Agenda	3
2	RC Cabling	4
3	RC Calibration	6

1 Agenda

- Connect remote controllers (RCs) to MAD76 IO (see Section 2)
- Calibrate RCs (see Section 3)

2 RC Cabling

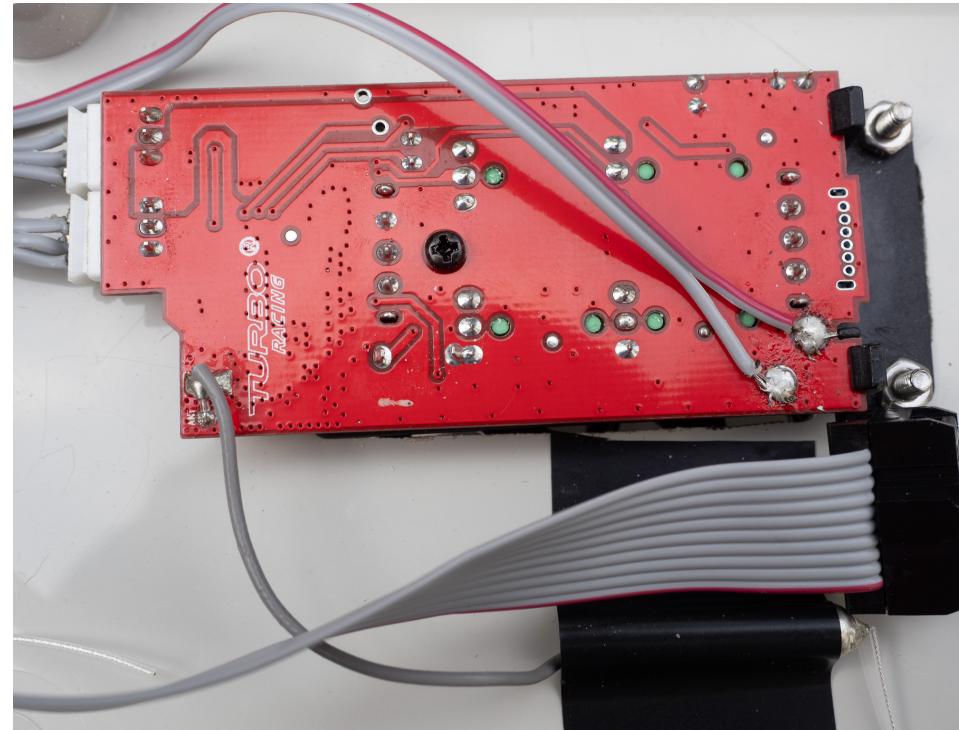


Figure 1: RC Cabling

- Ribbon cables connect the 4 RCs to ports SV1, SV2, SV3, and SV4 on the MAD76 IO board
- Use a length of at least 170mm for the 10-pin ribbon cables
- In Figure 1, the nose of the black SV1 connector is facing upward
- Solder the 5V and GND wires (SV1 pins 1 and 2) to the RC power supply pads
- Pins 3 and 4 are not used and can be cut off
- Crimp steering poti wires (SV1 pins 5, 6, 7) to the upper JST connector (from top to bottom)
- Crimp motor poti wires (SV1 pins 8, 9, 10) to the middle JST connector (from top to bottom)
- Please note that the cabling is designed in such a nice way, such that the individual wires of the ribbon cable do not cross each other
- Connect the cable to SV 1 of MAD76 IO

3 RC Calibration

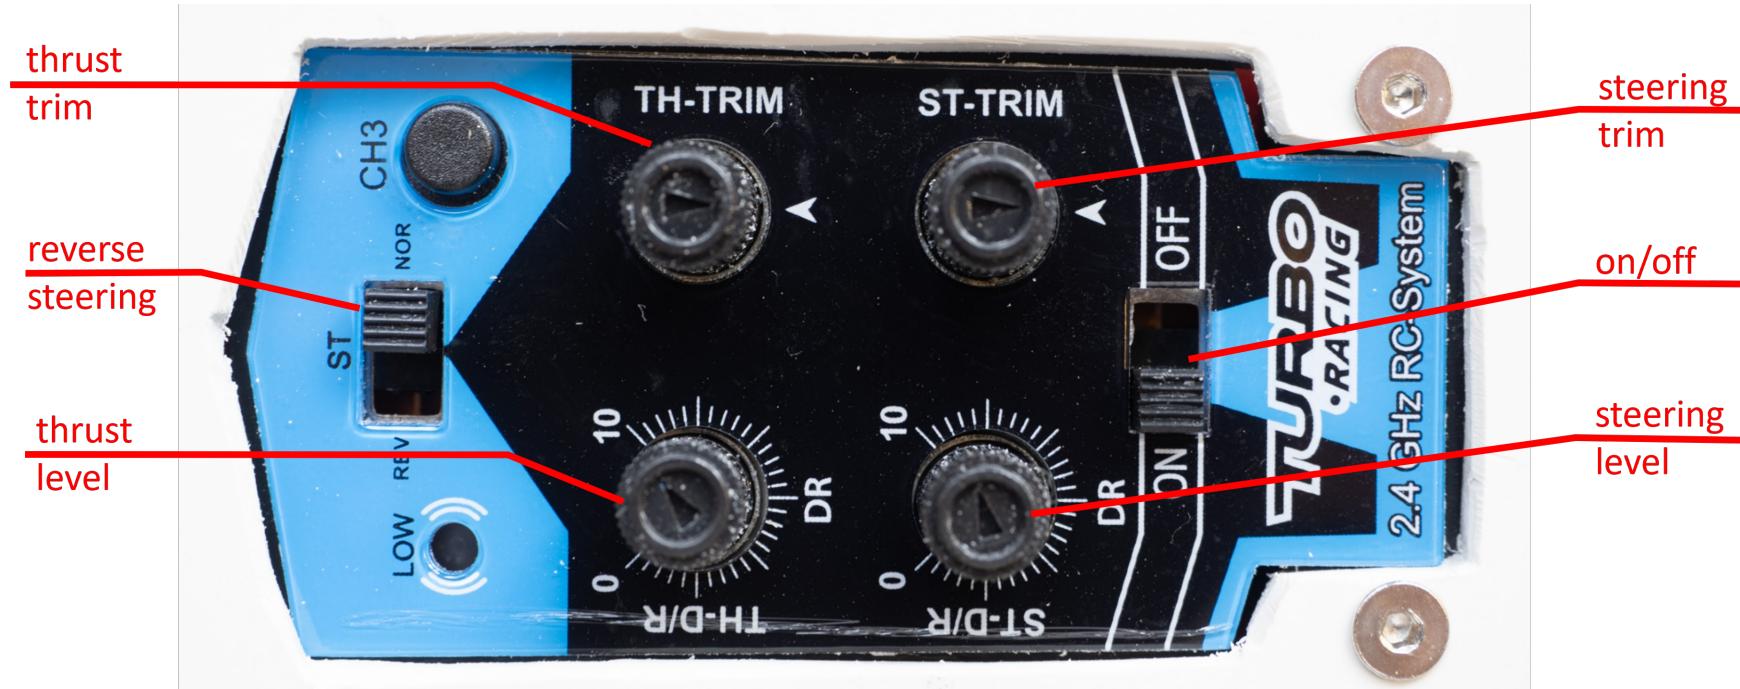


Figure 2: RC Buttons

Rationale

- The cars have tolerances in steering, motor propulsion and friction
- The RC microcontrollers (μ Cs) have tolerances in the 3.3V power supply for the potentiometers
- Due to these tolerances, each RC-to-car-coupling must be calibrated individually
- For calibration, **the car must be switched on before switching on the RC**
- By calibration, all cars will show similar dynamic behavior, such that all cars can be controlled by the same MAD76 driving stack with good performance

Before you start

1. If MAD76 is running, switch off the RC by stopping ROS by hitting Ctrl-C in the terminal
2. Move the RC button on/off to the on position, since MAD76 IO will do the powering automatically by the L293B
3. Move the button reverse steering to the NOR position, which typically is for right-handed drivers
4. Adjust the knobs thrust level and steering level all the way to the limit 10 in counter-clockwise direction, so that the car will show maximal performance
5. Switch on the car
6. Switch on the RC by starting MAD76 in manual mode with the following ROS command in a terminal:

```
ros2 launch mbmad madpiman.launch
```

This command starts the I/O of MAT76 but not the driving stack. Omit this step if you want to use the Python program `rctest.py` from MAD76 Academy MAD76 I/O Programming

7. If the car has not been coupled to the RC, yet (the car's headlights are flashing), the coupling must be done now
 - (a) Switch off all other RCs and cars
 - (b) Initiate the coupling process by placing a needle into the couple hole on the bottom of the car
 - (c) Wait for the car's headlights to stop flashing, indicating a successful coupling

Calibrate the motor

1. Calibrate standing still
 - (a) Adjust RC knobs thrust trim and steering trim to the neutral center positions, as depicted in Figure 2
 - (b) Set the normalized motor signal to zero: $u_n = 0$ by running the ROS command

```
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: 0.0, steering: 0.0}"
```

or by running the Python program `rctest.py` from MAD76 Academy MAD76 I/O Programming

```
python rctest.py 0 0.0 0.0
```

The command line arguments are

argument	description
carid	ID of the RC and car (0, 1, 2 or 3)
pedals	normalized motor signal $u_n \in [-1, 1]$
steering	normalized steering signal $\delta_n \in [-1, 1]$

- (c) Adjust RC knob thrust trim until the car stops and is in standing still
2. Calibrate break-off-torques to overcome friction to identical values for forward and reverse motion
 - (a) Increase u_n in small steps from 0 to 0.06

```
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: 0.01, steering: 0.0}"
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: 0.02, steering: 0.0}"
...

```

or by running the Python program `rctest.py`. The car should start moving forward at $u_n \approx 0.04$. If not, adjust the RC knob thrust trim.

- (b) Decrease u_n in small steps from 0 to -0.06

```
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: -0.01, steering: 0.0}"
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: -0.02, steering: 0.0}"
...

```

or by running the Python program `rctest.py`. The car should start moving backward at $u_n \approx -0.04$. If not, adjust the RC knob thrust trim.

- (c) Repeat this calibration procedure until the car starts moving forward and backward at the same absolute level, e.g., $|u_n| \approx 0.04$

Calibrate the steering

1. Set

- the normalized steering signal to zero for straight driving: $\delta_n = 0$
- the normalized motor signal for little thrust: $u_n \approx 0.06$

by running the ROS command

```
ros2 topic pub -1 /mad/car0/carinputs mbmadmsgs/msg/CarInputs "{carid: 0, pedals: 0.06, steering: 0.0}"
```

or by running the Python program `rctest.py` from MAD76 I/O Programming

```
python rctest.py 0 0.06 0.0
```

2. The car should move on a straight line. If not, adjust RC button steering trim
3. Check if the steering is operating with no faults in the total range $\delta_n = [-1, 1]$ by running `ros2 topic pub` or `rctest.py` with varying steering inputs