

piHPSDR User's Manual

For release version 2.2

Christoph van Wüllen, DL1YCF
email: dl1ycf@darc.de

October 26, 2023

Copyright Notice:

Copyright (C) 2023 Christoph van Wüllen, DL1YCF.

This work is licensed under the Creative Commons licence CC BY-SA, version 4 or later, so it can be freely distributed. This license also allows reusers to distribute, modify and build upon the material in any medium or format, as long as attribution is given to the creator. The license allows for commercial use. If you modify or build upon the material, you must license the modified material under identical terms.

Disclaimer. The manual has been written with the intention that it is useful. It is quite clear that it still contains errors, therefore it is stressed here that it comes without any warranty. The reader is hereby explicitly warned that through wrong use of an SDR program such as piHPSDR, it is possible to damage the radio hardware.

Trade marks. Registered trade marks are not marked with a sign in this manual. From the absence of a trademark sign, it cannot be concluded that a mark you find in this manual is not registered or not protected.

The author:

Christoph van Wüllen (DL1YCF) has contributed a lot to piHPSDR in the last few years, this manual refers to the code in his github account

<https://github.com/dl1ycf/pihpsdr>

where the L^AT_EX „source code” of this manual, together with all figures in .png format, can be found in the `release/LatexManual` directory. At this moment this code has significant developed compared to the piHPSDR code in John Melton’s master repository, but there is still hope that both versions can be merged in the future, although this will be hard work. This document corresponds to the release version 2.2, which can be found in the branch RELEASE-2.2-DL1YCF of the repository.

If you think you can improve the manual, you are welcome. Simply fork the above repository and make a pull request, or (this is the recommended way) write an email to the author: `dl1ycf@darc.de`

Contents

1	Introduction	1
2	Starting piHPSDR for the first time	5
3	Main window layout	13
3.1	One or two receivers	13
3.2	Spectrum scope options	15
3.3	Zoom and Pan	16
3.4	The Hide button	17
3.5	Window areas	18
3.6	Mouse clicks in the main window	20
3.7	VFO bar and status indicators	21
3.8	Meter section	25
4	The Main Menu: introduction	27
4.1	The Exit Menu	29
4.2	The About Menu	31
5	The Main Menu: Radio-related menus	33
5.1	The Radio Menu	33
5.2	The Screen Menu	39

5.3	The Display Menu	42
5.4	The Meter menu	44
5.5	The XVTR (Transverter) Menu	46
6	The Main Menu: VFO-related menus	51
6.1	The VFO menu	51
6.2	The Band menu	53
6.3	The BndStack (Bandstack) menu	54
6.4	The Mode menu	55
6.5	The Memory menu	57
7	The Main Menu: RX-related menus	59
7.1	The RX Menu	59
7.2	The Filter menu	61
7.3	The Noise Menu	64
7.4	The AGC Menu	66
7.5	The Diversity Menu	66
8	The Main Menu: TX-related menus	69
8.1	The TX Menu	69
8.2	The PA Menu	72
8.3	The VOX Menu	76
8.4	The PS (PureSignal) Menu	77
8.5	The CW Menu	82
9	The Main Menu: menus for RX and TX	85
9.1	The DSP (Signal Processing) Menu	85
9.2	The Equalizer Menu	87

9.3	The Ant (Antenna) Menu	88
9.4	The OC (OpenCollector) Menu	89
10	The Main Menu: controlling piHPSDR	91
10.1	The Toolbar Menu	91
10.2	The RigCtl (Rig control, or CAT) Menu	95
10.3	The MIDI Menu	97
10.4	The Encoders Menu	103
10.5	The Switches Menu	106
A	List of piHPSDR „Actions”	109
B	piHPSDR keyboard bindings	135
C	piHPSDR CAT commands	137
D	Connect a Morse Key	139
E	piHPSDR and digimode programs	149
F	Compile-time options	161
G	RaspPi: Activating I2C	165
H	RaspPi: binary piHPDSR installation	167
I	Linux: piHPDSR install from sources	171
J	MacOS: piHPDSR install from sources	177

Chapter 1

Introduction

piHPSDR is a program that can operate with software defined radios (SDRs). As a graphical user interface, it uses the GTK-3 toolkit, while the actual signal processing is done by Warren Pratt's WDSP library. Thus, piHPSDR organizes the transfer of digitized radio frequency (RF) data between the radio hardware and the WDSP library, the transfer of audio data (either from a microphone or to a headphone), as well as the processing of user input (either by mouse/touch-screen, keyboard, or external "knobs and buttons"), and the graphical display of the RF data. piHPSDR is intended to run on different variants of Unix. It runs on all sorts of Linux systems, including a Raspberry Pi (hence the name piHPSDR), but equally well on Linux desktop or laptop computers, and on Apple Macintosh (Mac OSX) computers which have a Unix variant under the hood. The present author is not aware of piHPSDR running under the Windows operating system, although with environments such as MinGW, this should be possible.

Although piHPSDR can be operated entirely by using mouse and keyboard as input devices, many users prefer to have physical push-buttons and/or knobs or dials. To this end, piHPSDR can control push-buttons and rotary encoders connected to the GPIO (general purpose input/output) lines of a Raspberry Pi. At least two generations of such controllers have been put on the market by Apache labs, and I know of several projects where home-brewn controllers have successfully been made. As an alternative, MIDI devices can be used for user interaction. For desktop/laptop computers that do not have GPIO lines, MIDI offers an easy-to-use possibility of having push-buttons and dials that

control piHPSDR. Apart from homebrew projects in which a micro-controller such as an Arduino Micro controls the actual buttons/knobs and acts as a MIDI device to the computer to which it is connected via USB, there are low-cost so-called "DJ controllers" (DJ stands for disk jockey) from various brands which have successfully been used with piHPSDR. A third possibility to control piHPSDR is via a serial interface through CAT (computer aided transceiver) commands. The CAT model used by piHPSDR is based on the Kenwood TS-2000 command set with lots of PowerSDR extensions.

Using a touch-screen instead of a mouse offers the possibility to put the actual radio hardware together with a Raspberry Pi running piHPSDR and an assortment of buttons/knobs into a single enclosure. This way, one can build an SDR radio which can be operated like a conventional analog one.

The piHPSDR program has been written by John Melton G0ORX/N6LYT. It is free software that is licensed under the GNU (free software foundation) general public license. Many other radio amateurs have contributed to the code. A lot of extensions and improvements have been added by myself, therefore this document refers to the version of piHPSDR that can be found on my github account <https://github.com/dl1ycf/pihpsdr>.

Because piHPSDR can be used on many different types of computers, and because operating systems change rather quickly over time, I generally do not recommend to do a „binary installation“ although such a bundle is provided in the repository (for the RapsberryPi only) and the process is decribed in Appendix H. Instead, my personal recommendation is to build piHPSDR from the sources, only this procedure guarantees compatibility of the final program with your operating system. Shell scripts for a semi-automatic installation have been provided, and the procedure is described in Appendix I for Linux (including RaspPi) computers and in Appendix J for Mac OSX. This manual starts in its first chapter with the first invocation of a freshly compiled piHPSDR.

Within this manual, we shall use a typewriter font in red color if we refer to a text or a button within a menu of within the VFO bar. piHPSDR menus and commands are indicated through a typewriter font printed in blue. The author hopes that this improves readability. In some cases, if the name of a command or menu is written on the screen, you may find the same string both typed in red and blue in the description, depending on whether the text refers to the command in an abstract sense or to the string as it can be found

on the screen. This may be confusing upon first reading, but I shall try to follow the coloring convention as laid out here.

Chapter 2

Starting piHPSDR for the first time

Let us assume you have an SDR (say, an ANAN-7000 or a HermesLite-II) powered up and connected to an antenna, and you have piHPSDR installed on a computer (say, a Raspberry Pi or an Apple Macintosh), the first thing to do is to establish a proper connection between the computer and the radio. Although advocated at many places, I do highly recommend against a WiFi connection. WiFi routers often use optimizations where they hold back data packets for a given client for a while, to be able to send a collection of them in a burst. While this certainly optimizes the through-put because it minimizes clear-channel arbitration events, such jitters are disastrous in SDR operation. The safest way of connecting the radio and the computer is to have a managed switch with a built-in DHCP server, and to connect both the computer and the radio with a suitable cable to the switch. If the computer has both a RJ45 jack for an ethernet cable, and a WiFi interface, my personal recommendation is to use WiFi to connect the computer to the internet, and use a single direct cable plugged into the RJ45 jacks of the computer and of the radio. This is a little bit tricky since both the computer and the radio have to be set to a fixed IP address (e.g. computer: 192.168.1.50, radio: 192.168.1.51) with the same netmask. However, once this has been done, this is the safest connection with no perturbations from elsewhere.

If the piHPSDR program is started for the first time, it opens a window that looks like Fig. 2.1. Besides stating a version number and when piHPSDR was

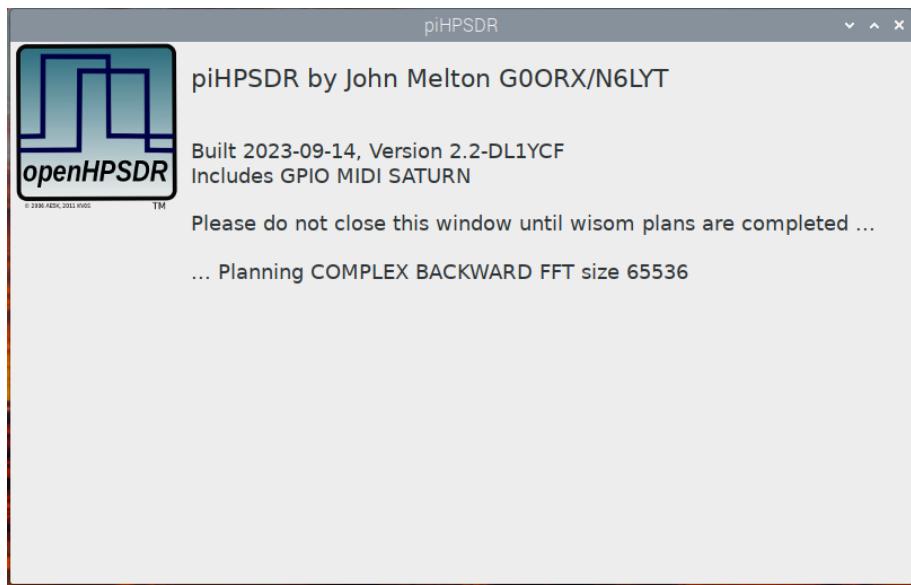


Fig. 2.1: piHPSDR screen while completing the *wisdom plans*.

built, a list of optional features (to be activated at compile time) is stated, in this case, GPIO, MIDI, SATURN. These are compile-time options that are detailed in Appendix F.

What is important here that you have to wait. This only applies to the very first time you start piHPSDR. On CPUs with a rather simple instruction set (like the ARM processor in the Raspberry Pi, or the Apple Silicon processor in recent Macintosh computers), this so-called *planning* step is quite fast. For example, on my Apple M2 Mac mini, this step only takes 6 seconds, and you have to wait for 34 seconds on a RaspberryPi 4. On the contrary, on CPUs with complex instruction sets, more planning is necessary: on my other Mac mini with a 3 GHz x86 processor, it takes 16 minutes! But note this has only to be done once, in subsequent starts of piHPSDR, the wisdom will simply be read from the file created during the *wisdom plans*. These plans contain, for a large number of dimensions, the fastest way how to perform FFTs (fast Fourier transformations) on the given CPU. When the wisdom is secured, piHPSDR tries to detect a radio on the network. If everything went well with the network connection, you then see a screen with a discovery menu (Fig. 2.2).

It is possible that the **Start** button is deactivated and shows another text.

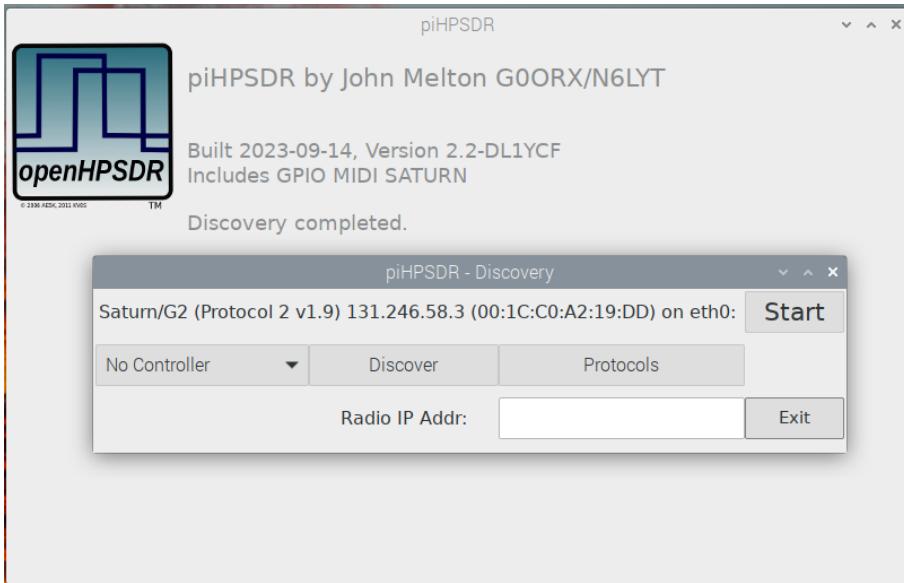


Fig. 2.2: A radio has been discovered. You are ready to start it.

In **Use** at this point means that the radio is already in use (connected by another SDR application), while **Incompatible** denotes that the radio is not compatible with this version of piHPSDR. This is only the case if piHPSDR runs natively on the CM4 module inside the new Anan Saturn/G2 radios and the FPGA firmware is known to be too old for direct (XDMA) data transfer between the CM4 module and the FPGA. Updating the FPGA firmware to the latest version should help in this case.

If more than one radio is available, or a radio can be connected via more than one network interface, you will see several **Start** buttons. If you see at least one **Start** button, you can start the corresponding radio simply by clicking that button. But let us first explain the purpose of the other buttons! Easiest to explain is the **Exit** button, this will simply terminate the program. Most likely, you may want to go into the **Protocols** menu sooner or later. By default, piHPSDR tries to discover the presence of a radio using all protocols known to piHPSDR. However, if you know that your radio, for example, uses P2 (Protocol 2), then trying to discover a P1 (Protocol 1) radio is just a waste of time. So if you know which types of radio you want to connect to, you can enable (only) these in the **Protocols** menu. The available protocols are

Protocol 1 This is the "original" HPSDR protocol.

Protocol 2 This is the "new" HPSDR protocol.

Saturn XDMA This is used to talk to a Saturn FPGA through the internal XDMA interface. Only available if piHPSDR is compiled with the **SATURN** option.

USB OZY This is used to talk to a radio using the legacy USB OZY interface. Only available if piHPSDR is compiled with the **USBOZY** option.

SoapySDR This is used to talk to a radio through the SoapySDR library, for example to an AdalmPLUTO. Only available if piHPSDR is compiled with the **SOAPYSDR** option.

STEMlab This is used to connect to RedPitaya based SDRs through the WEB interface. Only available if piHPSDR is compiled with the **STEMLAB_DISCOVERY** option. Starting the radio using this protocol is a two-step process: first, the RedPitaya's WEB interface is located, and the **Start** button then starts the SDR app on the RedPitaya. Then, piHPSDR tries to connect to this SDR app and upon success offers a new **Start** button to start the radio. If the RedPitaya is exclusively used as a radio, it is recommended to auto-start the SDR app when the RedPitaya is powered up. In this case, the STEMlab protocol is not used, because the SDR app can be started through Protocol-2.

Autostart This is a very useful option. It indicates that if exactly one radio has been found, it is automatically started. So in normal operation, when starting piHPSDR subsequently, and all settings are still valid, the radio is started without user intervention. If this option is activated and one radio is present, you will not see this menu, so in order to make further changes here, you have to disconnect the radio from the ethernet cable, start piHPSDR until you see this menu, and update the **Protocols** settings. Then you can re-discover using the **Discover** button.

Sometimes piHPSDR needs to know the IP address of the radio. This is, for example, the case for the **STEMlab** discovery described above. In such a case the IP address in numerical form (xxx.xxx.xxx.xxx) can be entered in the box with the label **Radio IP Addr:**. If a legal IP address is contained in this box, protocol-1 and protocol-2 discoveries will also send to the IP address specified, in addition to the standard broadcast discovery packets which can only reach radios on the same network segment. With a known IP address, one can connect to radios which are not on the same subnet as the computer, in principle you can connect to any radio on the world provided it is on the internet. However, the original HPSDR standard states that a broadcast packet must be used, so several radios won't reply. On the other hand, there are some radios such as a RedPitaya or a HermesLite-II which allow being discovered by such a routed packet.

The **Discover** button re-starts the discovery process. This is useful if the radio has been powered up too late and was not yet ready when piHPSDR was started. Simply press **Discover** to start another attempt.

The combo-box (pop-down menu) to the left of the **Discover** button lets you choose which type of GPIO controller you have attached to the computer. This menu is only available if piHPSDR has been compiled with the **GPIO** option, which is not the case on desktop/laptop computers. The menu lets you choose between

No Controller Choose this if no GPIO controller is wired to your Raspberry Pi. This is the default when you first start piHPSDR.

Controller1 Choose this if you have the original piHPSDR controller, called the Controller1 in the rest of this manual.

Controller2 V1 This option is valid for some early prototypes of the "version 2" controller with single encoders. This special case is not covered in this manual.

Controller2 V2 Choose this if you have a "version 2" piHPSDR controller with double encoders. This controller is denoted Controller2 in the rest of this manual.

G2 Front Panel Choose this if you have an ANAN G2 radio with a built-in controller.

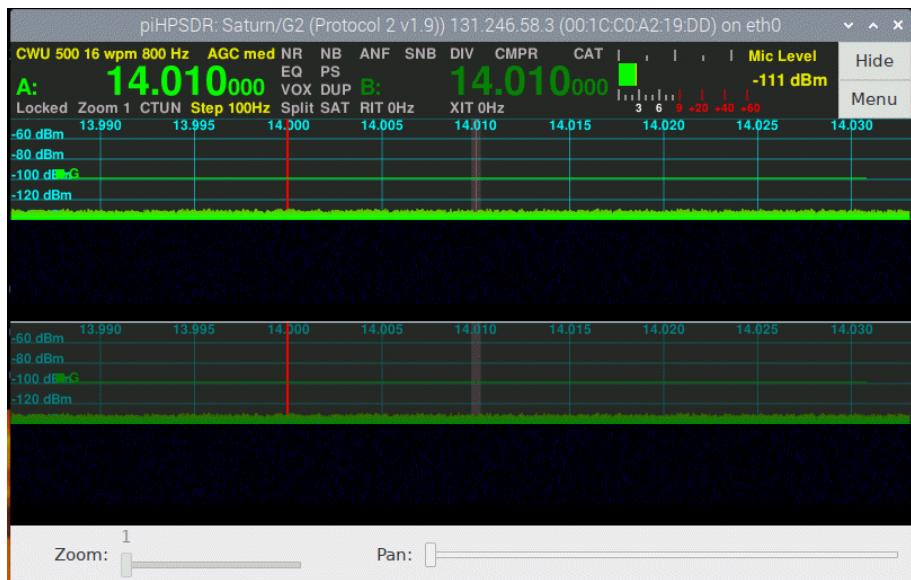


Fig. 2.3: The radio with two RX. Sliders and Toolbar are not on display by default when using a controller.

Attention. Be sure to choose a controller only if such a controller is actually connected to your Raspberry Pi. If you choose, for example, a controller which uses an I2C expander for the switches, but no I2C interface is present on your Raspberry Pi, the program may hang when trying to open the I2C connection.

All settings (protocols, controller, IP address) made in this menu are stored in the global (radio-independent) settings and are restored when piHPSDR is started the next time.

If all went well, a radio could be discovered and you hit the **Start** button, the radio is started, and if this succeeds, you see something like shown in Fig. 2.3.

The bottom of the window looks different (more controls) if you have chosen **No Controller** in the preceding menu. You see two receiver panels stacked vertically, both of them having a spectrum display and a waterfall area. At the top, just below the window title, you have the VFO bar which contains information on the frequencies of the two VFOs A and B, as well as lots of further information, to be explained later. At the top right, there are two

buttons **Hide** and **Menu** which will be explained in the next chapter. To the left of these two buttons, there is the meter bar which by default is a digital S-meter. At this point, you have started piHPSDR successfully for the first time.

Chapter 3

Main window layout

3.1 One or two receivers

At the end of the previous chapter (Fig. 2.3), there were two receiver panels in the piHPSDR window, stacked vertically, and both including a spectrum scope (the green-coloured noise floor) and a waterfall. The waterfall area is completely black in the above picture since there was no RF signal. piHPSDR can be switched between having one or two receivers in the `Radio` menu. If there are two receivers (called RX1 and RX2), one of the two is the *active receiver*. If you look closely at the above picture, you will note that the spectrum scope of the lower (RX2) panel is shaded, while it is in bright colour for RX1. This indicates that RX1 is currently the active receiver. By simply clicking into the panel of the other (inactive) receiver, either with a mouse or on a touch screen, the formerly inactive receiver becomes active.

Many conventional rigs with two independent receivers discriminate between the *main* and the *sub* receiver. It is important that this is **not** the case for piHPSDR. In piHPDSR, both receivers are largely equivalent. For example, if you start transmitting in normal (non-split) mode, the TX frequency matches the frequency of the active receiver, no matter whether this is RX1 or RX2. Likewise, in split mode, the TX frequency matches the frequency of the non-active receiver. Most of the receiver-specific controls, for example adjusting the AF volume or the AGC gain, refer to the current active receiver. If piHPSDR runs with two receivers, RX1 is always controlled by VFO-A

while RX2 is controlled by VFO-B. The VFO settings not only include the frequency but also the current mode (e.g. LSB or CWU), the filter setting, the band and bandstack setting, whether RIT is enabled or not, and the RIT offset. So changing the RIT value only changes it for the active receiver. If you want to change the RIT value for RX2 while RX1 is the active receiver, you have to make RX2 active, change the RIT value and then make RX1 active again.

RX1 and RX2 are largely independent. They can receive on different bands. They can receive from different antennas provided the radio has two RF frontend with two analog-to-digital converter4s (ADC, as most modern radios do. In this case, one usually assigns the first ADC (ADC0) to RX1 and the second ADC (ADC1) to RX2. This can be done in the [RX](#) menu.

By default, if there are two receivers, they are vertically stacked, with RX1 in the upper part and RX2 in the lower part of the display. This can be changed in the [Screen](#) menu to horizontal stacking, where RX1 is in the left half and RX2 in the right half of the display. Changing the stacking trades vertical against horizontal resolution, of course.



Fig. 3.1: piHPSDR with a single RX and all controls (Zoom/Pan, Sliders, Toolbar) at the bottom.

Fig. 3.1 picture shows, for demonstration purpose, a piHPSDR window with

a single receiver. The RX panel only contains a spectrum scope with a white line and no waterfall (this can be changed in the [Display](#) menu). In addition, you see the toolbar with eight buttons at the lower edge of the window, and above it an area with sliders. Showing the sliders is the default (and necessary) if there is no GPIO or MIDI controller attached, since then these sliders are the only way to change, for example, the AF volume. If there is only one receiver, it is controlled by VFO-A. VFO-B then actually controls nothing (except the TX frequency in split mode), but the data stored in VFO-B can be quickly used, for example by copying VFO-B to VFO-A (the [A<B](#) command), or by swapping the two VFOs (the [A<>B](#) command).

3.2 Spectrum scope options

You have already seen two different spectrum scopes: in the first picture, the spectrum was a filled green area, while in the last picture, there only was a white line (this is similar to what you would see on a spectrum analyzer). This can be adjusted to your personal preference in the [Display](#) menu (see below). There are two options which you can enable or disable, such that there are four different outcomes. The first option is the „Filled” option which discriminates between a line spectrum and a spectrum which is filled below the line. In the picture below, the first and third example have no filling, while the second and fourth spectrum are filled:

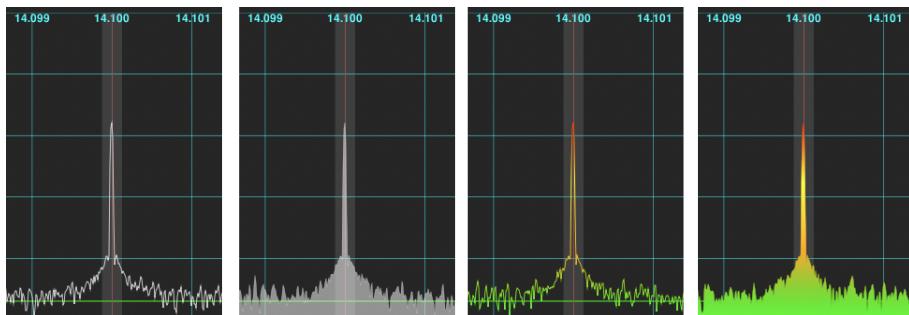


Fig. 3.2: Display options for the spectrum scope.

Then there is the „Gradient” option. Without this option, the spectrum is displayed in white colour. With the gradient option, the colour changes from green over yellow towards red depending on the signal strength (red colour

is reached for S9). The above picture demonstrates the four possible combinations, and in the [Display](#) menu, you can make your choice. This setting refers to both receivers when there are two. Note that the TX spectrum can be a filled one or a line spectrum, but that the gradient option does not apply.

3.3 Zoom and Pan

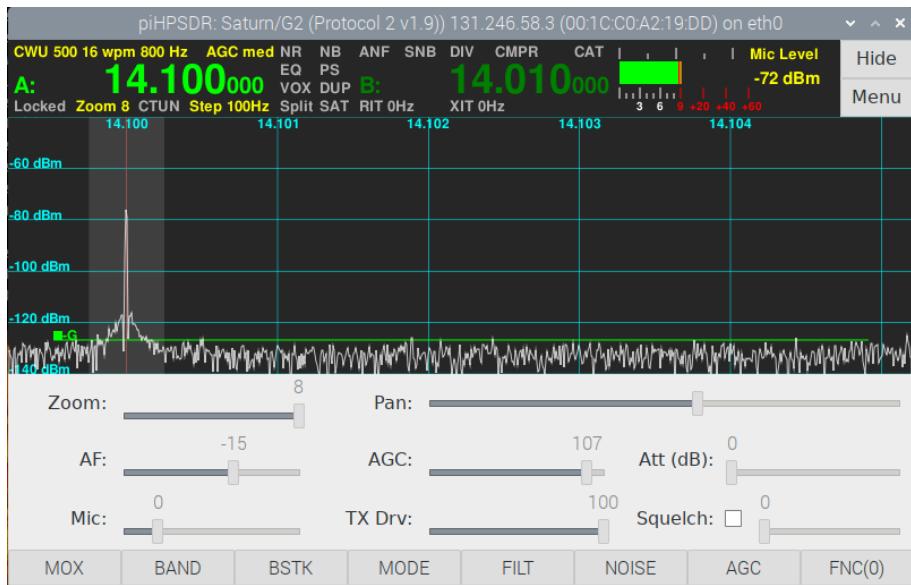


Fig. 3.3: The spectrum scope of Fig. 3.1 with a large Zoom value.

The width of the RX spectrum equals the sample rate of the receiver. This means that if you use, say, a sample rate of 96 kHz for a receiver, its spectrum will be 96 kHz wide, which may encompass a larger part of the spectrum than you are interested in. As a drawback, the part which is relevant to you may look a little bit compressed. This is where the [Zoom](#) command comes in. The zoom value can adopt integral values between 1 (no zoom) and 8. In the latter case, only 1/8 of the overall spectrum is displayed on the screen. In the picture below, you see that the RX scope is only 12 kHz wide (which is 1/8 of the RX sample rate, 96 kHz in our example). Note that what is displayed is in full resolution. Internally, a spectrum with 8 times the number of pixels

of the screen width is created and only a part of it is displayed. The zoom value can be changed using the **Zoom** slider (at the left edge below the RX panel).

When using a zoom value larger than one, this means that a spectrum with more pixels than the actual screen width is produced. One can select which part of that area is displayed on the screen with the **Pan** slider (below the RX panel at the right side). Normally (Zoom=1), the VFO dial frequency is exactly in the middle of the RX scope, and marked with a thin red line. On the picture above, the dial frequency (14.100 MHz) is found in the RX panel close to the left edge, and this has been done by moving the **Pan** slider.

3.4 The Hide button

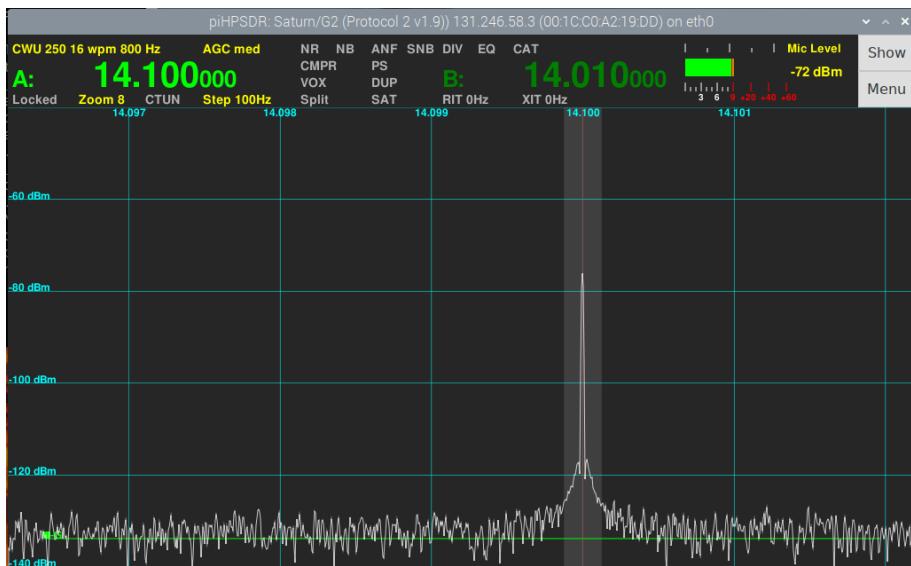


Fig. 3.4: piHPSDR window with the Toolbar/Sliders/Zoom area „hidden”.

On small screens, space is scarce. This is particularly true for the vertical space if one uses two RX panels and both with a spectrum scope and a waterfall. In this case, it may be hard to actually watch the signals if the screen is small. This is where the **Hide** button comes in. Clicking on this button „hides” the toolbar and slider area:

The text on the button then changes to **Show**, and clicking this button again will then return to the previous display.

3.5 Window areas

Look again at Fig. 3.1! Starting from the top, you see the title bar of the window. This bar is not visible in full screen mode, where the size of the piHPSDR window matches the display size. The title bar contains some basis information about the radio, e.g. its type, the protocol used, the IP and the hardware address of the radio. If you are really interested in this information, it is recommended to open the [About](#) menu.

Between the title bar and the RX spectrum scope, you see a small vertical area, most of which is taken by the VFO bar (containing the large frequency dials). At the rightmost end of this area, you see two buttons **Hide** (already discussed) and **Menu**. Clicking on the latter button opens the main menu, which will be discussed in detail in the following chapters. The **Menu** button is really important, since it enables access to one of the menus used for configuring piHPSDR. Between the VFO bar and the **Hide/Menu** buttons, you see the meter area where you find the S-meter (during RX) and information about output power, SWR, etc. during TX.

Below the RX spectrum scope, you see the Zoom/Pan area with the Zoom and Pan sliders, as already discussed. This area can be „hidden” with the [Display](#) menu to save some vertical space. Below the Zoom/Pan sliders you see a larger Sliders area containing several sliders for adjusting AF volume, TX drive level, RX AGC threshold, etc. Although the Sliders area can also be hidden via the [Display](#) menu, you should not do so unless you have a GPIO or MIDI controller which knobs that you can assign to the slider functions. This is so since for normal operation, having access to the sliders is vital. Remember that for temporarily enlarging the space for the RX panel, there is the **Hide** button!

If you have a GPIO or MIDI console, and, say, assigned a knob there to control the AF volume, then turning the knob will auto-magically also move the AF slider if its on display (that is, if the sliders area is not hidden). If you turn a knob for which function there is slider on display, either because the slider area is hidden or because this function does not have a slider in



Fig. 3.5: A pop-up attenuation slider.

that area, then a graphical slider will temporarily pop up in the middle of the window to inform you about the changes you have made. To give one example, a knob at a MIDI console has been assigned to the RF attenuator ([Atten](#) function, see Appendix A), which controls the step attenuator in the RF front-end (if there is one). As long as the sliders are on display, the [Att](#) slider in the right part of the slider area moves when turning the knob. But when the sliders are not displayed, then a slider image pops up on the middle of the screen, and the bar contained therein moves when turning the knob, and the numerical value is displayed as well (Fig. 3.5). Such a pop-up slider always occurs if a knob on the GPIO or MIDI console is turned and no slider associated with the value changing is on display.

At the very bottom of the window, there is the toolbar. This can also be individually hidden/shown via the [Display](#) menu. The toolbar consists of eight „buttons” which you can click with a mouse or on a touchscreen. If you are using the original (V1) piHPSDR GPIO controller, it has eight push buttons below the screen and pressing those is equivalent to clicking the buttons on the screen. You might still want to keep the toolbar on display even if you are using the Controller1 since it shows you to which functions the buttons are actually assigned. This assignment consists of six „layers”

(0 through 5). The rightmost button is hard-wired to the [Function](#) action which cycles through the layers. The button text includes the number of the currently active layer, and the button text of the other buttons reflect the functions assigned to the buttons in the current layer.

Bonus for mouse users only. For the first seven toolbar buttons, there is no difference if you do a primary or secondary mouse click on that button (that is, it does not matter whether you use the left or right mouse button). But for the rightmost toolbar button, a normally mouse click cycles forward through the layers, while a secondary mouse click cycles backwards. If you use a V2 or G2-frontpanel GPIO controller or a MIDI console, then you can also map this function ([FuncRev](#)) to a spare button.

3.6 Mouse clicks in the main window

The main window „accepts” mouse or touchscreen click events. Some of them come from the standard handlers of the GUI. It is clear, for example, that clicking the [Hide](#) or [Menu](#) buttons, as well as clicking one of the toolbar buttons, will activate the function associated with these buttons. Furthermore, the sliders (and the squelch enable/disable checkbox) in the sliders and Zoom/Pan are operated as usual. But there are additional functions coded into piHPSDR:

If there are two receivers, a mouse click (press and release) into the panel of the non-active receiver makes it active. On the other hand, a mouse click in the panel of the active receiver changes the VFO frequency of that receiver to the value clicked on. This means, if you see a signal in the spectrum scope, click on that signal and your VFO will move (*jump*) to that signal. Note the VFO frequency will be rounded to the next multiple of the VFO step size when jumping by a mouse click or touch screen press.

The second option to change the VFO frequency of the active receiver is to click (and hold) into its panel, then drag the mouse to the left or to the right, and then release the button. This will shift the VFO frequency by the amount dragged, it makes no difference where the first click actually occurred, only the difference in horizontal position between click and release is used. You must drag at least three pixels so there is clear discrimination between a , *VFO jump* (click then release) and a *VFO drag* (click, drag, and release)

operation. Finally, the VFO frequency of the active receiver can be changed by the scroll wheel of the mouse, if there is any. Using the scroll wheel lets the VFO frequency move in multiples of the VFO step size, while mouse dragging can also be used for finer tuning.

Clicking into the VFO bar opens the **FREQ** (VFO) menu, for the VFO-A if clicked into the left half of the bar, and for VFO-B if clicked into the right half. This menu not only offers the possibility for direct frequency entry, but also lets you alter the RIT/XIT or VFO step size, or alter the Lock, Duplex, CTUN, or Split states. So a simple click in the VFO bar gets you quick access to often-used functions.

Clicking in the meter section (between the VFO bar and the Hide/Menu buttons) opens the **METER** menu, where you can change the meter properties (see below).

When operating with a mouse, there are usually two mouse buttons, the primary button (for right-handed mouses, this is usually the left button) and a secondary one. Secondary mouse clicks are difficult to apply with a touch-screen. Although there are touch-screen drivers which convert long presses to secondary clicks, they generate, for a long press, a primary click first and a secondary one later, so it is not possible to generate a single „secondary press” event. But for the benefit of mouse users, secondary mouse clicks are handled in a special way:

A secondary click into the VFO bar will open the **BAND** menu, so a band change can be made with really few mouse clicks. Likewise, a secondary click into the panel of a receiver (no matter if it the active or the non-active one) will open the **RX** menu for that receiver. This can be used to change the settings of a non-active receiver without making it temporarily active. In the same way, a secondary click in the TX panel will open the **TX** menu.

3.7 VFO bar and status indicators



Fig. 3.6: The VFO bar

Fig. 3.6 shows the VFO bar layout in more detail. The example shown is a VFO bar whose width is 745 pixels and thus suitable for screens that are 1024 pixels wide (or more), since the meter area has a fixed width of 200 pixels, and the **Hide/Menu** buttons are 65 pixels wide. This layout is denoted **Large dials for 1024px windows**, as to the choice of VFO bar layouts, see the description of the **Screen** menu.

The large dials indicating the frequencies of VFO-A and VFO-B are easily recognized. The number to the left of the decimal point is the MHz part of the frequency, the three large digits to the right of the decimal point is the kHz part, and the last three (smaller) digits offer sub-kHz resolution. You may wonder why there is so much space to the left of the frequencies. This is so because with the advent of the QO-100 satellite, frequencies above 10 GHz can be used (with the transverter bands) and therefore eleven digits are needed!

Apart from the frequencies, you see a lot of text, most in light grey colour. As a general rule, a text in grey colour indicates a feature that is currently disabled, while features currently active are normally shown in yellow and sometimes in red.

At the top left corner of the VFO bar, the mode and filter of the currently active receiver is displayed. In Fig. 3.6, the text is **USB Var1** which indicates that the mode is USB using the Var1 filter with variable width (see the **Filter** menu). For the CW (CWU and CWL) modes, the CW speed (in wpm) and the side tone frequency (in Hz) is stated as well. For CW, the filter size may be appended by a „P”, which indicates whether the CW audio peak filter (see the **Filter** menu) is effective on top of the normal filter. For the FMN mode, an indicator of the form C=xxx.y is added if CTCSS is enabled, and then xxx.y shows the CTCSS frequency.

Now we continue line by line, from left to right and find the string **AGC med** printed in yellow. This means that automatic gain control (AGC) is effective in the active receiver, and that the AGC time constant is intermediate. Possible values for the time constant are Long, Slow, Medium and Fast which can be selected in the **AGC** menu. Here one can also disable AGC, in this case the VFO bar shows **AGC off** in grey colour.

Continuing to the left, we see the noise reduction settings, all printed in grey (that is, they are not effective). This can be changed in the **Noise** menu. We

have two different noise reduction capabilities **NR1** and **NR2**, these strings are printed in yellow instead of the grey **NR** if they are effective. There are also two different noise blankers **NB1** and **NB2**, the automatic notch filter **ANF** and the spectral noise blanker **SNB**. Besides enabling/disabling these functions, there are further parameters you can tweak in the **Noise** menu.

The next strings whether Diversity reception is enabled or disabled (**DIV**), or whether an equalizer is effective **EQ**. Since there is a separate equalizer for the RX and TX audio chain, the equalizer indicator, if it is effective, not only turns yellow but reads **RXEQ** while receiving and **TXEQ** while transmitting. This means, if only the TX equalizer is enabled, the indicator will show a grey **EQ** while receiving and a yellow **TXEQ** while transmitting.

The last indicator in the top row is **CAT** which indicates if the CAT module (see the **RIGCTL** menu) has accepted at least one connection. In total, piH-PSDR can be CAT-controlled simultaneously by five different sources, two of them using a serial line and three of them a TCP connection.

The indicators in the middle, between the VFO dials, are related to transmitting. **CMPR** indicates if a speech processor (compressor) is enabled, if so, it prints in yellow, followed by a number between 1 and 20 indicating the compression value in dB. **PS** indicates whether adaptive pre-distortion („PureSignal“) is enabled, PS settings can be made in the **PS** menu. **VOX** indicates whether VOX (voice control) is enabled. VOX means that if the microphone delivers an amplitude above a certain threshold, the radio is automatically put into TX mode. Enabling/Disabling VOX and setting the correct threshold can be done in the **VOX** menu. Finally, **DUP** indicates whether duplex mode is active. In duplex mode, the receiver(s) continue to work during transmit. Duplex mode when using the same antenna for RX and TX is no fun: you not only hear your own signal with a delay (from the cross-talk at the TRX relay), but this cross-talk signal is usually so strong that it leads to „AGC pumping“, so your receiver is virtually deaf during the first second after TX/RX transition. For satellite operation, on the other hand, duplex mode is very convenient. Here you usually have two separate and well-decoupled antennas for RX and TX.

The bottom line of the VFO bar indicators are related to the VFO status. If the **Locked** string is red, it indicates that the VFO is locked and will not accept changes. There is a **LOCK** action which toggles the LOCK status and which can be assigned to a toolbar button or a push-button on a GPIO or

MIDI console, but the Lock status can also be set/unset via the **FREQ** menu, accessibly by the main menu window, or just by clicking into the VFO bar.

The next indicator in the bottom line indicates the Zoom factor. If the Zoom factor is 1, the indicator is grey, otherwise it is yellow and also indicates the factor. Then there is a string **CTUN** which indicates whether the CTUN („click to tune“) mode is off or on (the string is yellow in the latter case). The step size of the VFO controlling the active receiver is displayed next, this string is always yellow.

The split status is displayed by the next indicator, which is red in split mode. If split mode is off, transmitting is done on the frequency and the mode of the active receiver (if there are two receivers), or on the frequency/mode of VFO-A (if there is only one receiver). If split mode is on, transmitting occurs on the frequency/mode of the non-active receiver (if there are 2) or on VFO-B (if there is only one receiver).

The next indicator shows the SAT (satellite) mode, which can be off (then the indicator reads **SAT** in grey), or which can be SAT or RSAT (then the indicator displays this string). Once SAT mode is engaged, the two VFOs are tied together such that any frequency change of one of the two VFOs also applies to the other VFO. This is the best way to do cross-band operation with, e.g. the QO-100 satellite which is at a fixed position. In RSAT mode, a frequency change of one of the VFOs is applied to the other VFO with an opposite sign (so if you move up VFO-A by 2 kHz, then VFO-B moves down by the same amount). This is what one needs for low-flying satellites which have inverting transponders which offer some sort of Doppler correction.

Finally there are the **RIT** (receiver incremental tuning) and **XIT** (transmitter incremental tuning) indicators. If RIT is off, receiving occurs on the VFO dial frequency. If RIT is on, the indicator becomes yellow and also indicates the RIT offset, that is, the frequency offset used while receiving. RIT is used, for example, if during your CW QSO the frequency of the transmitter of your QSO partner drifts and you want to follow without altering the frequency of your own transmitted signal. The RIT indicator corresponds to the active receiver. If XIT is active, the indicator becomes yellow and shows the offset of the true TX frequency from the VFO dial frequency.

Finally, in the top right corner you see a symbol with a green and a red line that only occurs if one of the variable filters (**Var1** or **Var2**) have been

selected. The green caret indicates the default filter edges, while the red one above denotes the current filter edges.

3.8 Meter section

Fig. 3.7 shows the different designs that exist for the meter. To the left (right) there are the digital (analog) meters, while the top panels show the meter during RX and the lower panels during TX.



Fig. 3.7: Different designs for the meter.

The design can be switched between digital and analog in the [Meter](#) menu, which can be accessed quickly just by clicking into the meter area. During RX, an S-meter is shown together with the signal level in dBm. Note that -73 dBm corresponds to S9 for frequencies up to 30 MHz, while above 30 MHz, S9 corresponds to -93 dBm. Since the S meter is in steps of 6 dB, a signal level of S1 (below 30 MHz) corresponds to -121 dBm.

During TX, the output power is displayed, provided that the radio actually reports this power. The output power meter can be calibrated (see the [PA](#) menu). If the SWR exceeds a threshold for SWR warnings (the default is 1:3, but this can be changed in the [TX](#) menu), the SWR indicator turns red. If, in addition, SWR protection is enabled in the [TX](#) menu, the output drive will be reduced to zero if the SWR exceeds that threshold. Furthermore, the ALC (automatic level control) value of the transmitter is shown. Negative ALC values (at least in peak mode) indicate that the volume of the TX input audio could be increased to get full output power.

Further info on the meters (e.g. switching between „peak” and „average” reporting) is described in the [Meter](#) menu.

Chapter 4

The Main Menu: introduction

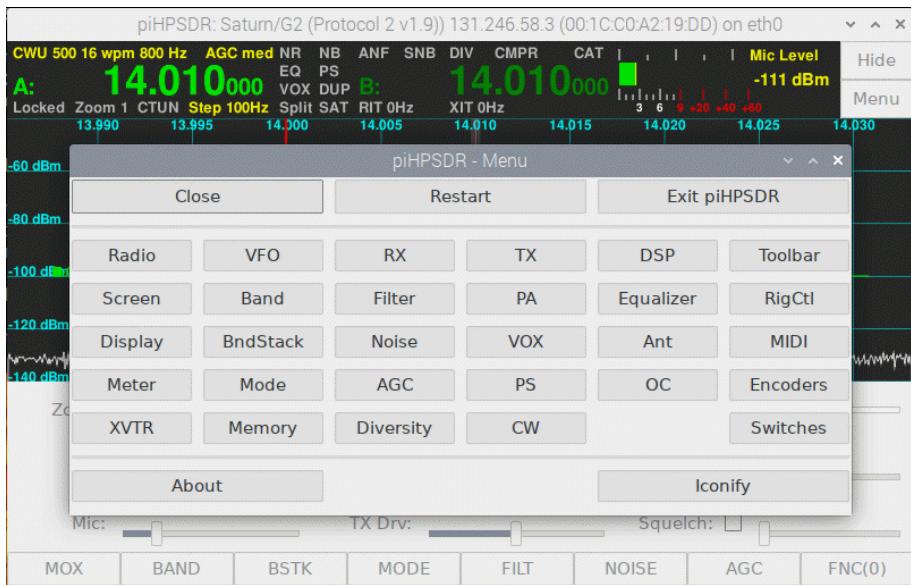


Fig. 4.1: The Main men, opened by the **Menu** button.

Now we have a series of chapters that discuss all the piHPDSR menus. Many menus can be opened by a button click (or a push-button on an external controller), e.g. hitting the **MODE**, **FILT**, or **NOISE** button on the toolbar you have seen in the last picture. You already know that the VFO and Meter menus can be opened by clicking into the VFO or meter section at the top of the window. When operating with a mouse, a secondary click in the RX

or TX panadapter opens the RX or TX menu. But there is one place from which *all* piHPSDR menus are at hand, and this is the "Main Menu". It can be opened by clicking into the **Menu** button at the top right corner of the piHPSDR window, the outcome is shown in Fig. 4.1.

Some remarks have to be made about menus in general. Since piHPSDR is optimized for working with small screens, only one menu can be open at a time. If a menu is open and one tries to open another one, the first menu will be destroyed (closed) and the new one will be opened. For example, if you hit the **FILT** button in the toolbar when starting from Fig. 4.1, the main menu closes and the **Filter** menu opens. If you try to open a menu that is already open, then the menu will be closed. So, starting from Fig. 4.1 hitting the **Menu** button again will close the menu. Likewise, when the Filter menu has been opened, either via the Main Menu or with the **FILT** button, then hitting this button again will close the **Filter** menu.

While the menus are looking quite diverse, some effort has been invested to keep some things consistent throughout. For example, at the top left corner of the menu you usually find the "Close" button which closes the menu. The close button is somewhat emphasised (slightly larger letters, and a thin border) so you will always quickly find it. Of course, it is possible to close a menu by deleting the menu window (on RaspberryPi, this is the small cross at the left of the title bar) but this is neither necessary nor recommended.

There are some commands available here that do not directly affect the radio operation, so these commands are found in the top and bottom line of the Main Menu. We first mention the **Restart** button in the middle of the top line. This restarts the radio protocol. While not needed under normal circumstances, it may happen (especially with beta releases of radio FPGA firmware) that the data exchange between piHPSDR and the radio gets out-of-sync. I observed such problems with early versions of the P2 firmware for Orion2 boards and that is the reason the **Restart** button is there, since this made a quick recovery possible without losing the QSO. At the bottom right, there is the **Iconify** button which „minimizes“ the piHPSDR window. Normally, if needed, one can do so by standard methods of the operating system in the title bar of the piHPSDR window. If piHPSDR, however, runs in full-screen mode (this is the case on very small touch screens), then the **Iconify** button to make the piHPSDR window temporarily disappear without breaking the connection to the radio, do some work with the operating

system, and get the piHPSDR window back. Note in earlier versions of piHPSDR this function was associated with the "Hide" button in the top right corner of the main window. Then, there are two menus ([Exit](#) and [About](#)) which are described in due course and which one can open by clicking either [Exit piHPDSR](#) or [About](#) in the main menu.

The other buttons, between the two horizontal separator lines, give access to piHPSDR control and fine tuning. They are organized in six columns, namely radio related menus (first column), VFO related menus (second column), RX and TX related menus (third and fourth column), menus affecting both RX and TX (fifth column) and, finally, menus for adjusting how you can control piHPSDR (sixth column), either via Toolbar, MIDI, or GPIO encoders or switches. „**Encoders**” are knobs which you can turn, and which can be used to change AF volume or TX output power. „**Switches**” are push-buttons which can be used to trigger a function such as transmitting a carrier for tuning, toggle between RX and TX, open a menu, and so forth.

4.1 The Exit Menu

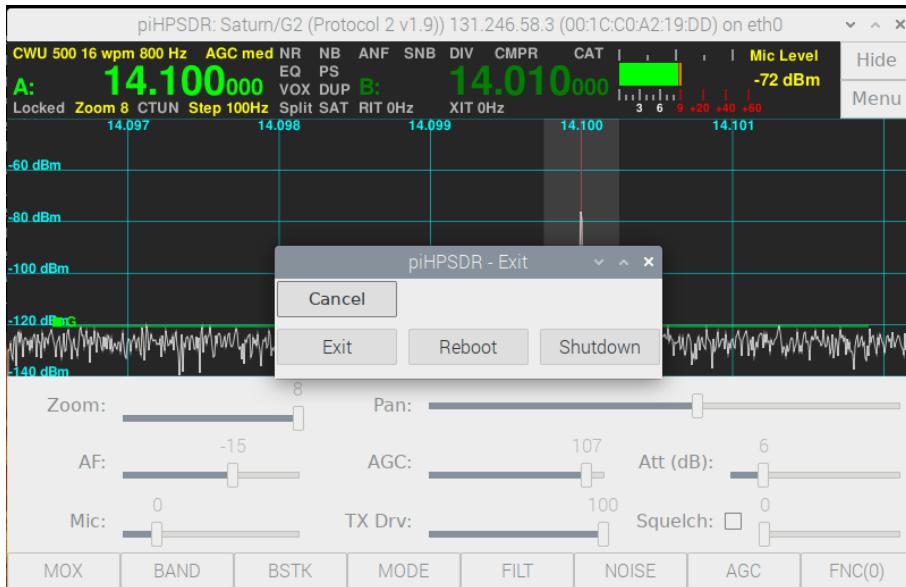


Fig. 4.2: The [Exit](#) menu.

Via the [Exit](#) menu, you can leave the piHPSDR program. When leaving the program, the radio protocol is stopped and all the settings are written to a preferences file. This file is located in the piHPSDR directory and takes the name xx-xx-xx-xx-xx-xx.props, where the xx encode the MAC address for the radio. So the preferences for different radios (if you have more than one) are stored in different files. To leave the program, just click the "Exit" button in this menu. If you decide you want to continue, you can leave the [Exit](#) menu by clicking the "Cancel" button. This is the button which closes the menu and has the same position and look as the "Close" buttons in all the other menus.

If piHPSDR runs with administrator privileges, you can even leave the program and either re-boot or switch off the computer via the "Reboot" and "Shutdown" buttons. This makes sense for setups where a Raspberry Pi running piHPSDR, a small SDR radio, a touch-screen and several encoders and switches are built into a single common enclosure. On the other hand, when running piHPSDR on desktop or laptop computers, clicking "Reboot" or "Shutdown" both leave the piHPSDR program but no re-boot or shutdown takes place, due to missing administrator privileges.

4.2 The About Menu

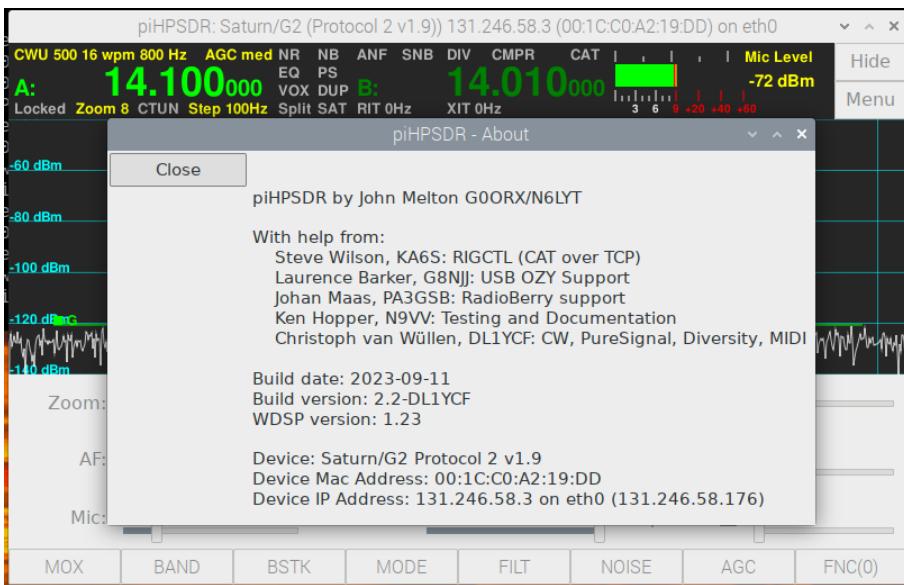


Fig. 4.3: The [About](#) menu.

The about menu gives you some information about piHPSDR, first the original author and an (incomplete) list of persons who contributed to the code, and then a statement which version of piHPSDR is working here, and when it has been compiled. Here you also find the version number of the WDSP library which is the „engine” running under the hood, and which does nearly all of the signal processing. Finally, there is some data on the radio, namely the device type and version numbers, and which protocol is running. For diagnostic purposes, you also see the MAC address of the radio, its IP address and the IP address of the computer running piHPSDR. The MAC address is of interest since the radio-specific preferences are stored in a file whose name is derived from the radio’s MAC address.

Chapter 5

The Main Menu: Radio-related menus

5.1 The Radio Menu

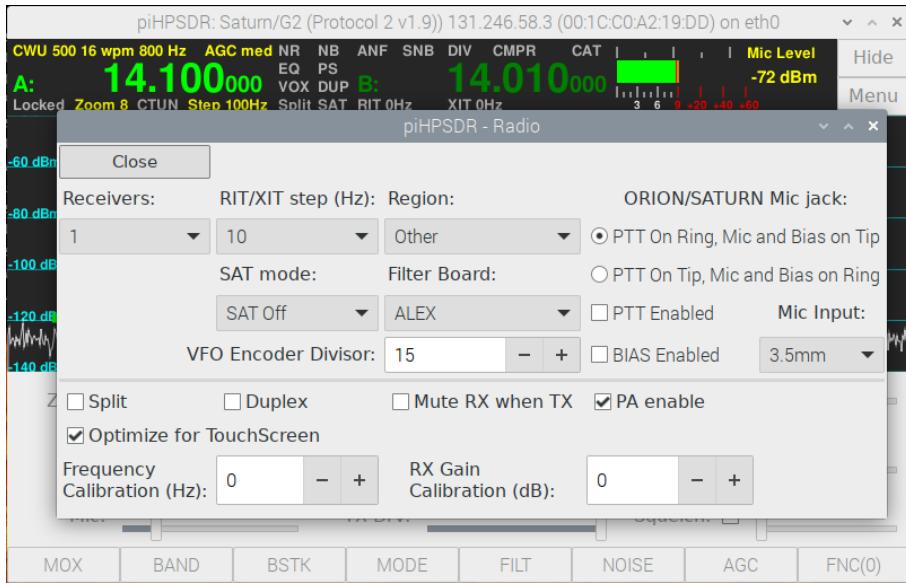


Fig. 5.1: The [Radio](#) menu.

The [Radio](#) menu lets you make settings which affect the general setting, and

the hardware of the radio. The following figure (Fig. 5.1) shows the menu as it opens on an Anan G2 radio. Note this menu looks slightly different for different radios and protocols, this will be discussed at the end of the section. First, we go through all the elements we see in Fig. 5.1, they will be colored red in the following list.

Receivers: In the pop-down menu (GTK combo-box) below this string, you can select the number of receivers that are running (well, you can choose between 1 and 2). When the number of receivers change, the radio communication will shortly be stopped and then resumed, so do not be surprised if the spectrum scope freezes for a second or so.

RIT/XIT step: In the pop-down menu you can choose among three (1 Hz, 10 Hz, 100 Hz) step sizes for RIT and XIT. For example, if the RIT step is 10 Hz, then you can change the RIT offset in steps of 10 Hz with the RIT+ or RIT- buttons in the toolbar or on the GPIO/MIDI controller.

Region: Although not obvious, this selects settings for the 60m band. Possible choices are "Other", "UK" and "WRC15". The **O**ther and **U**K choices implement the channel structure of the 60m band according to the regulations valid in the USA and Great Britain. "WRC15" gives you a small (15 kHz wide) 60m band according to the WRC15 (World Radio Conference 2015) document, which is now implemented in many countries.

Orion/Saturn Mic jack: This part of the menu is not shown for pre-Orion boards. The Orion, Orion2, and Saturn boards can switch the connections of the TRS microphone jack in software (hardware jumpers had to be used previously). While the ring of the TRS plug is always connected to ground, the microphone and PTT connections are on the ring and tip and you can choose which one is on the ring and which one on the tip. You can then separately enable the PTT function of the jack, and select whether a bias (DC offset) is applied to the mic connection (this is necessary for condenser microphones and detrimental if a dynamic microphone is connected without a blocking capacitor).

Mic Input: This is only shown for Saturn boards. These radios have two jacks for connecting a microphone, either a 3.5mm TRS jack in the front panel, or an XLR connection in the back panel. The pop-down menu lets you choose between these two options.

SAT mode: Here you can choose between **SAT off**, **SAT**, and **RSAT**. In **SAT**

mode, frequency moves applied to one of the two VFOs are applied to the other VFO as well. This is convenient for cross-band operation over satellites with (normal) linear transponders. In RSAT mode, frequency moves applied to one of the two VFOs are applied to the other with the sign inversed, that is, if for example you move the frequency of VFO A up by 3 kHz, the frequency of VFO B moves down by the same amount. This is convenient for cross-band operation over satellites with inverted transponders. Inverted transponders are sometimes find in low and fast moving satellites because this leads to some Doppler correction.

Filter board: Normally SDRs have some sort of built-in PA with a filter board. Filters in the TX path between the PA and the antenna are always required, and filters in the RX path provide some protection against ADC overloads from strong out-of-band signals. Here you can choose between **NONE**, **ALEX**, **APOLLO**, **CHARLY25**, and **N2ADR**. Choose **NONE** if none of the other cases apply, and hope your radio does things right automatically. **ALEX** is the most frequent choice and applies to the largest part of current HPSDR radios. **APOLLO** is an early design of a PA/filter combination for Hermes boards, choose this if you have one. **CHARLY25** is a filter board used in some RedPitaya based radios (STEMlab and HAMlab). If you choose this, the Attenuator slider will disappear from the Slider area (because this design does not have a step attenuator), instead, you get a combined Attenuator/Preamp check-box which lets you choose between zero, preamp values of 18 and 36 dB, and attenuation values of 12, 24, and 36 dB. **N2ADR**, finally, is the filter board usually used in combination with a HermesLite-II radio. It is controlled by the OC (open collector) bits in the HPSDR protocoll. This means if you use **N2ADR**, this will override your OC settings upon program startup. It is possible to change the OC settings in the **OC** menu, and these settings are saved with the preferences. Upon next program start, however, these preferences will again be overwritten as long as the **N2ADR** filter board is chosen.

VFO Encoder Divisor: This option is normally only used for GPIO controllers. Often, the encoders of the main VFO dial generate too many ticks per revolution, such that it is difficult to fine tune on a signal. If the VFO Encoder Divisor, as shown in the example, has a value of 15, only every 15th tick will we processed. The Divisor is also effective if you control piHPSDR with an ANDROMEDA console. So, if the frequency moves too fast if you turn the VFO knob, you have to increase the Divisor, and if it moves too

slowly, decrease it.

Split Use this checkbox to enable/disable Split mode. In Split mode, the frequency of the non-active receiver (when using two receivers) or the frequency of VFO-B (when using one receiver) controls the TX frequency. In normal (non-Split) mode, it is the frequency of the active receiver (2 RX) or the frequency of VFO-A (1 RX) that matters.

Duplex Use this checkbox to enable/disable Duplex mode. In Duplex mode, the receiver(s) continue working during TX. In normal setup, this is detrimental since the very strong signal that originates from the crosstalk at the T/R relay will lead to AGC pumping, making your receiver(s) essentially deaf for a short period after TX/RX switching. However, when using different and well-decoupled antennas for RX and TX (this is typical for some satellite operations), Duplex mode gives you important information, as you can see your own downlink signal. In contrast to what is often stated, Duplex mode does not affect the data stream between the computer and the radio, it *only* determines whether the receivers (within the WDSP library) are shut down during transmit or not.

Mute RX when TX This option mutes the RX audio while transmitting. It is important to note that the RX continue to work, so you can see the signals on the RX panel, the S-meter works, etc. This option is largely equivalent to moving the AF slider to the minimum position while transmitting.

PA enable This enables/disables the PA in the radio. In addition to this global flag, there is a per-band PA enable option for the transverter bands (see the [XVTR](#) menu).

Note that the last four options (**Split**, **Duplex**, **Mute RX when TX**, and **PA enable**) are not shown for RX-only radios.

Optimize for TouchScreen The normal procedure to make a selection from a pop-down menu (such as the **Receivers:** button on this screen) is to click (and hold) it with a mouse, then drag the mouse to your choice, and then the selection is made by releasing the mouse button. This is very difficult to achieve on a touch screen. Therefore, if **Optimize for TouchScreen** checkbox is checked, the pop-down menus are modified as follows: You click and release on the menu button, then it pops down and stays open. Then you make your selection by a second click/release sequence on your choice. While this is (only a little bit) more involved than the normal procedure when using

a mouse, it is a great helper when using a touch screen. Therefore this option is set by default, but you can uncheck it here if you prefer normal mouse operation. Note that this option becomes effective when the next menu is opened.

Frequency Calibration Here you can set a frequency offset (in Hz). This offset will be added to all frequencies sent to the radio. This means that if you discover that a reference signal occurs in your RX panel at 10001 kHz where it should occur at 10000 kHz, you have to set the calibration value to -1000. Note it is an absolute value, which will be applied to all frequencies.

RX Gain Calibration Here you can calibrate your RF front end. To this end, you need a highly accurate signal source of, say, -73 dBm. Connect this source to your radio and tune on the signal. If the signal appears at, say, -70 dBm, decrease the calibration value. At -3 dBm, your S-meter should then state the correct signal strength. The value is the amplification/attenuation of a virtual device you would need in your RF front end. Therefore, you need a negative value (attenuation) if the signal shown is too strong. For normal HPSDR radios, the default value is zero. For the HermesLite-II and other radios using the AD9866 chip, the default value is 14.

There are some further check boxes in the [Radio](#) menu that you cannot see in Fig. 5.1, since they only appear for specific radio hardware. They appear to the right of the touch screen optimization check box and will be listed here.

HL2 audio codec This box only appears if the radio is a HermesLite-II (HL2). Some of these radios are equipped with an audio codec and a modified firmware. The audio codec must be enabled by setting a specific bit in the HL2 protocol, and this check box enables/disables this bit. Furthermore, if this check box is enabled, RX audio data is sent to the HL2.

Anan-10E/100B This box only appears for Hermes boards. While the Anan-10E and the Anan-100B identify themselves as Hermes boards, they have a FPGA with limited resources and this affects the allocation of PureSignal feedback channels. To make PureSignal work on these machines, you have to check this box in the [Radio](#) menu.

Swap IQ This box only appears for radios connected via the SoapySDR library. If checked the I and Q samples are exchanged, both in the receivers and in the transmitter. An indication that this is necessary is if you see

signals with a frequency above your dial frequency in the left half of the RX panel, or if you have to go to LSB to receive USB signals. If you observe this behaviour, check this box.

Hardware AGC This box only appears for radios connected via the SoapySDR library. If checked, automatic gain control (AGC) that is implemented in hardware in the radio is enabled.

ATLAS bus options. For legacy ATLAS bus radios, a number of additional settings have to be made. Therefore, the area where we have seen the Orion microphone options now contains ATLAS bus settings, as shown in Fig. 5.2. You will see this only if the radio identifies itself as a METIS board.

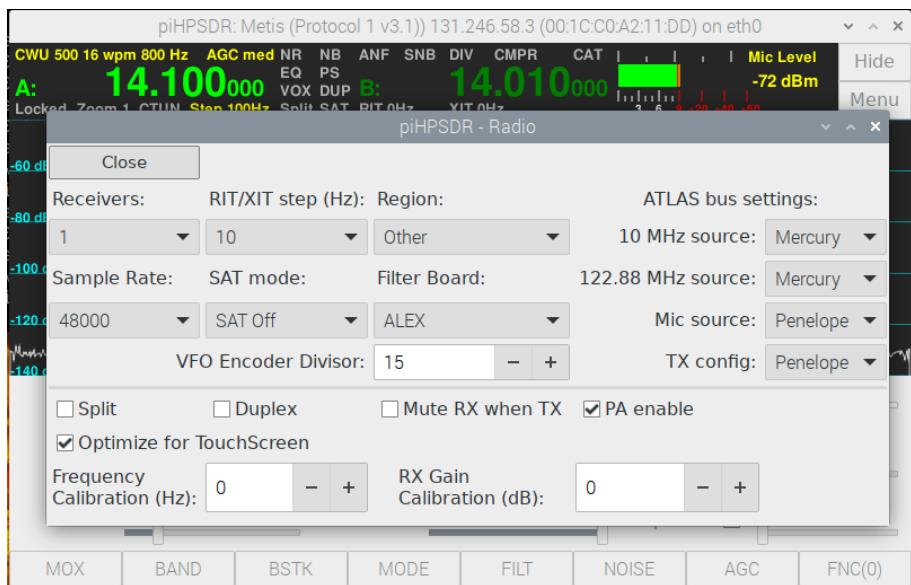


Fig. 5.2: The [Radio](#) menu for a legacy HPSDR board.

The first difference you notice is that at the left edge of the menu, in the middle, there is a new **Sample Rate:** pop-down menu. This has nothing to do with the ATLAS bus, this occurs if the radio is connected via P1, as it is often the case for legacy radios. In P1, all receivers share the sample rate, therefore it is set in the [Radio](#) menu. The same applies for SoapySDR radios. In P2 on the other hand, each of the two receivers can have its own sample rate, therefore the sample rate is specified in the [RX](#) menu. The ATLAS bus settings are at the right edge of the menu (see Fig. 5.2. The ATLAS bus has separate receiver and transmitter plug-in boards. To build a radio,

they must be synchronized somehow, and therefore their clocks cannot run independently, but there must be a master clock.

10 Mhz source: This selects the 10 Mhz master clock, which can be either **ATLAS** (the bus itself is the source), **Penelope** (the transmitter board is the source), or **Mercury** (the receiver board is the source).

122.88 MHz source: This selects the 122.88 Mhz master clock, which can be either **Penelope** or **Mercury**.

Mic source: This selects where the microphone samples that are sent to the computer originate, that is, where your microphone has to be connected. The default is **Penelope**, this means the microphone is connected to the transmitter board. The other choice is **Janus**. The **Janus** board is simply an ADC/DAC board (not a radio) and used in some very early setups.

TX config: This indicates which transmitter board is present on the bus. It can be **No TX**, if this is a receive-only radio, **Penelope** or **Pennylane**. The **Pennylane** is a later version of the Penelope transmitter board, the essential difference is that it can control the output signal level. In the Penelope case, piHPSDR will scale the IQ samples to provide TX drive control.

Janus Only This box is for ATLAS systems that only have an OZY and a Janus board, and will only appear for OZY (USB-connected) boards. While this hardware is not a radio, external hardware such as the SDR-1000 can be connected to the Janus interface. If this option is checked, piHPSDR assumes that the radio is controlled outside piHPSDR, and will thus only process the data stream but not try to send any commands to the radio.

Note that I have no access to such legacy radios, so the piHPSDR code to handle these radios is partly built on speculation (that is, studying the specs) and exchanging e-mails with people who still run such hardware. If you meet any inconsistencies, please contact the author.

5.2 The Screen Menu

The **Screen** menu lets you dynamically change the size of the piHPSDR main window, and choose between different VFO bar layouts. The possibility to adjust the screen size has been the most frequent feature request in the last years, so I finally decided to implement it. The menu is opened via the main

menu and the **Screen** button and is shown in Fig. 5.3.

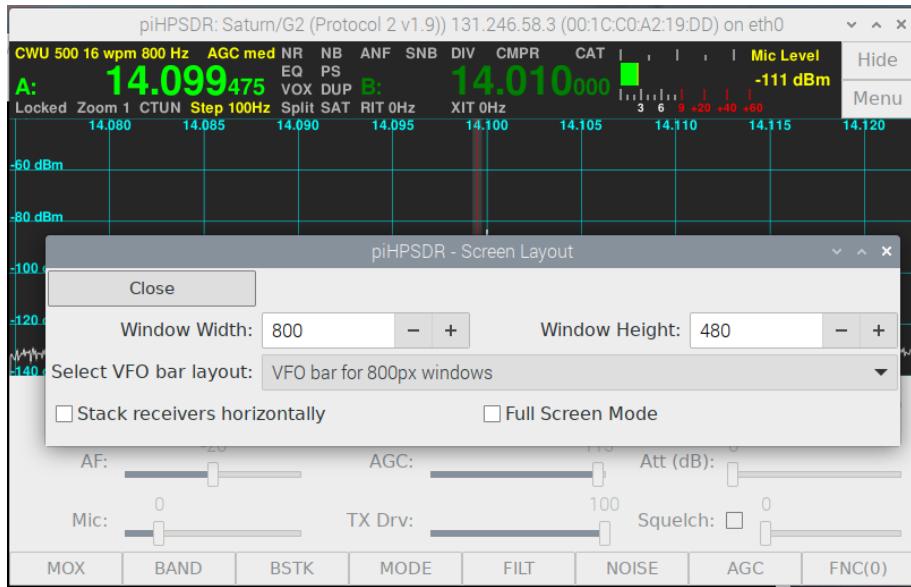


Fig. 5.3: The **Screen** menu.

The window width and height can be chosen with the spin buttons shown. The minimum values for width and height are 640 and 400, the maximum values are determined by the resolution of the monitor. If more than one monitor is attached, the dimension of the monitor on which the initial piHPSDR window was opened determines the maximum width and height. Changes made in the spin buttons become effective immediately. If piHPSDR is in full screen mode (see below), you can change the values of the window width and height, but they do not become effective until you leave the full screen mode.

If the window width is decreased such that the VFO bar chosen does no longer fit, the first one in the list that does fit is automatically selected, and the current choice shown in the pop-down menu **Select VFO bar layout** is updated. This menu lets you choose the layout of the VFO bar. In Fig. 5.4 the pre-defined layouts are shown.

These layouts require a screen size of 1010, 895, 795, and 635 pixels (from top to bottom). The VFO bar has been described in detail in chapter 3.7. If you choose a VFO bar layout that is wider than the current window width allows,

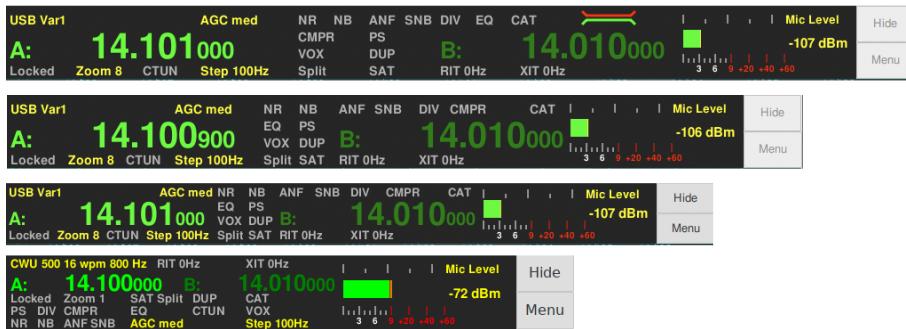


Fig. 5.4: Four choices for the VFO bar built into piHPSDR.

the window width is automatically adjusted (increased). On the other hand, choosing a VFO bar layout that is smaller than before does not affect the screen dimensions.

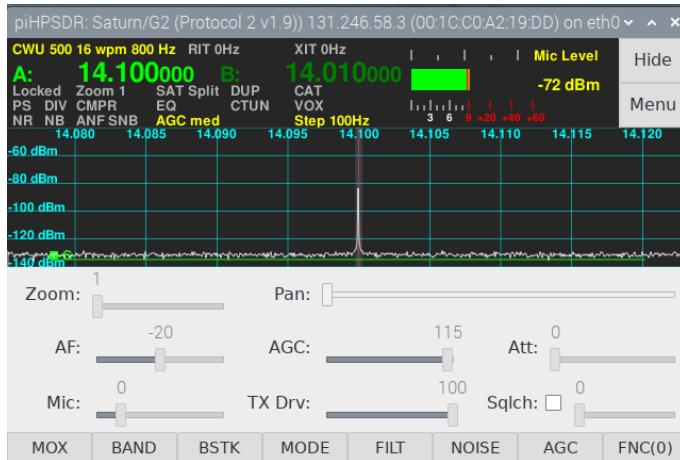


Fig. 5.5: piHPSDR running in a 640 x 400 window.

Fig. 5.5 shows, as an example, piHPSDR running in a window as small as 640*400 pixels. It is admitted that this looks rather squeezed, and this will only be useful if a single receiver is run with no waterfall. However, for portable operations such small windows are often desired, if piHPSDR is to be run alongside with a logbook and/or digimode program on a small laptop. Note that the piHPSDR menus are designed to fit on a window 800*480 pixels large, so it is not recommended to run piHPSDR on a *screen* that small. On the other hand, if piHPSDR is run on a laptop in a small

640*400 window, then menus may be larger than that but still fit well on the screen (thus hiding, momentarily, the window of, say, your logbook program) and are perfectly usable.

Stack receivers horizontally. If checked, this puts the panels of the two receivers (if two receivers are used) side-by-side instead of on top of each other.

Full Screen Mode. If you check this option, piHPSDR goes to full screen mode. In this mode, the window width and height is ignore, instead, piHPSDR occupies the whole area of the screen. In a multi-monitor setup, the area of the monitor on which the piHPSDR window was opened upon program start is filled. If you leave full screen mode, the size of the piHPSDR window is again determined by the width and height chosen above.

5.3 The Display Menu

The **Display** menu is used to customize the overall layout of the piHPSDR window and the RX panadapters. Adjustments for the TX panadapter must be done in the **TX** menu. The menu is shown in Fig. 5.6.

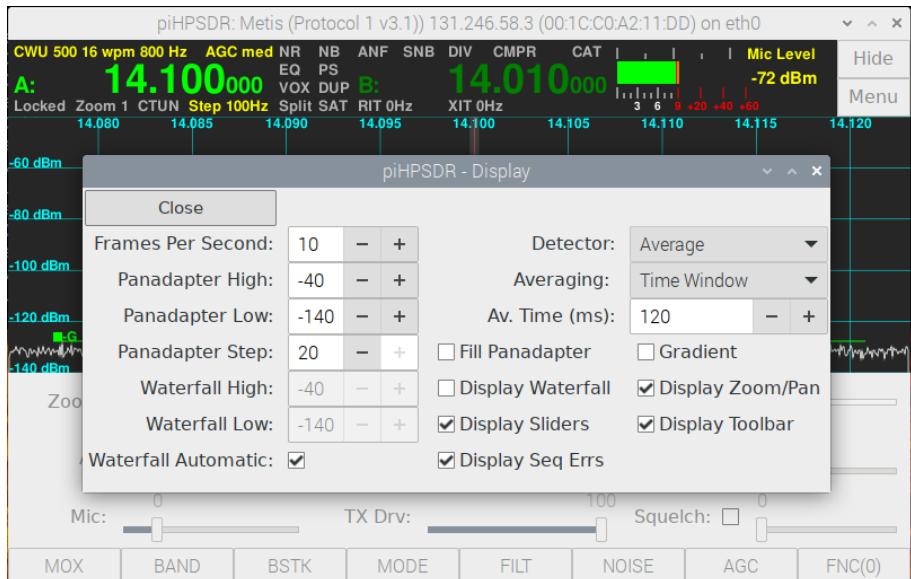


Fig. 5.6: The **Display** menu.

Frames Per Second: This adjust how often the RX and TX (!) displays are re-drawn. 10 frames per second (the default) is a good value.

Panadapter High: This value is the dBm value of the RX signal strength at the top of the RX spectrum scope. A value of -40 dBm corresponds to S9 + 33 dB for HF signals.

Panadapter Low: This value is the dBm value of the RX signal strength at the bottom of the RX spectrum scope. A value of -140 dBm is usually low enough such that the noise floor is still on display.

Panadapter Step: This value is the spacing of the horizontal lines on the spectrum scope. Lines are drawn at dBm values that are multiples of the step size.

Waterfall High: This is the RX dBm value that will lead to the brightest color (yellow) in the waterfall.

Waterfall Low: This is the RX dBm value below which the waterfall will be black.

Waterfall Automatic: If this box is checked, the **Waterfall High** and **Waterfall Low** controls are inactive and the values are not used. Instead, the lowest and highest signal strength in the RX spectrum are automaticall determined in each update of the waterfall, and these min/max values are then used instead of the waterfall High/Low control values to determine which colour belongs to which signal strength.

Detector: Here one can choose between Peak, Rosenfell, Average and Sample. The Rosenfell detector is probably closest to what one knows from a spectrum analyzer. The Average detector is usually preferred since it is less „nervous”.

Averaging: Here the possible choices are None, Recursive, Time Window and Log Recursive. For the details, see the WDSP manual.

Av. Time (ms): If averaging is used for the spectrum scope, the time constant involved in averaging can be set here.

Fill Panadapter This is used to enable/disable the „Filling” option for the RX and TX spectrum scopes (see chapter 3.2).

Gradient This is used to enable/disable the „Gradient” option (color coding) for the RX spectrum scope (see chapter 3.2). Note color coding is not

available for the TX panel.

Display Waterfall This option enables/disables the waterfall display of the RX panels. Note the spectrum scope is always shown (you cannot have the waterfall alone).

Display Zoom/Pan This option can be used to show/hide the Zoom and Pan slider below the RX or TX panel. If you do not use Zoom, or control Zoom via an external GPIO or MIDI controller, this can be used to save some vertical space.

Display Sliders This option can be used to show/hide the slider area (that is where the AF or TX Drive slider resides). Hiding them makes little sense unless you have a GPIO or MIDI controller. For temporarily gaining vertical space, use the **Hide** button at the top right of the main window.

Display Toolbar This option can be used to show/hide the toolbar. This only makes sense of using an external GPIO or MIDI controller. Note that when using the piHPSDR Controller1, the toolbar should remain on display since this then serves as an indication which function is associated with each of the 8 push buttons immediately below the screen.

Display Seq Errs All data packets from the radio to the PC contain a sequence number that is increased for each packet sent. piHPSDR checks for each incoming data packet whether the sequence number is exactly larger by 1 than the number of the previous packet. If this is not the case, this is a *sequence error*. Sequence errors may be caused by losing packets on the way from the radio to the computer, or (this is what is usually the reason) packets lost within the computer due to the computer being busy with something else (e.g. writing to disk). If the **Display Seq Errs** is checked, a red „Sequence error“ message appears in the RX panel for two seconds. Sequence errors during RX often cause cracks in the RX audio. Unless this happens regularly, it is no reason to worry.

5.4 The Meter menu

The **Meter** can either be opened simply by clicking in the meter area, or through the main menu. Only few choices can be made here.

Meter Type: Here you can select between a digital and an analog meter.

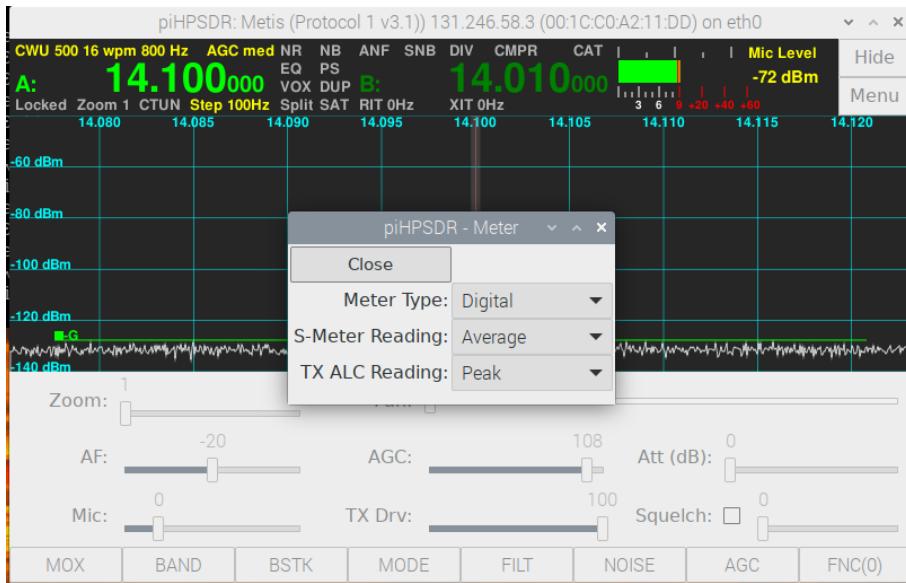


Fig. 5.7: The **Meter** menu.

The four different designs (either analog or digital, and during RX or TX) have already been shown in Sec. 3.8.

In both cases, there is a choice between Peak and Average reading, which refers to peak envelope power and average power. Here averaging is done over relatively short times. For a two-tone signal for example, the peak reading is 3 dB above the average reading.

S-Meter Reading: Here you can choose whether the S-meter reports a Peak or an Average value (default is Average). Note, however, that in order to make the display less „nervous” a moving average with a rather long time constant (about 0.5 sec) has been implemented on top of both the Peak and Average S-meter readings.

TX ALC reading: Here, the possible values are Peak, Average, and ALC gain. For a two-tone signal with maximum audio amplitude the Average ALC value is -3.0 dB, while the Peak value is 0.0 dB. Therefore I personally prefer the Peak value here and made it the default in piHPSDR: if the value is less than zero, one can and should increase either the amplitude of the incoming audio signal (e.g. boost the microphone preamp) or move the Mic gain slider to the right. The reason is, that PureSignal only works if the TX

audio input has maximum amplitude, so you can put the drive slider to zero, then put the radio into TX mode, whistle into the microphone and slowly increase the Mic gain until the ALC value shown is only slightly less than zero.

For RX-only radios, the TX ALC setting will not be shown in the menu.

5.5 The XVTR (Transverter) Menu

The **XVTR** menu lets you define additional bands that you can work on using transverters. The bands should normally be beyond the standard frequency range of the radio, otherwise the calculation of a band from a given frequency will sometimes not work. To give an example, suppose you have a transverter which you can drive with frequencies between 28 and 30 MHz and which will convert them to the frequency range 144 to 146 MHz, and which will receive frequencies in that range and mix them down to the 10m band. The data you have to enter in the **XVTR** menu (use the first free entry) are as follows:

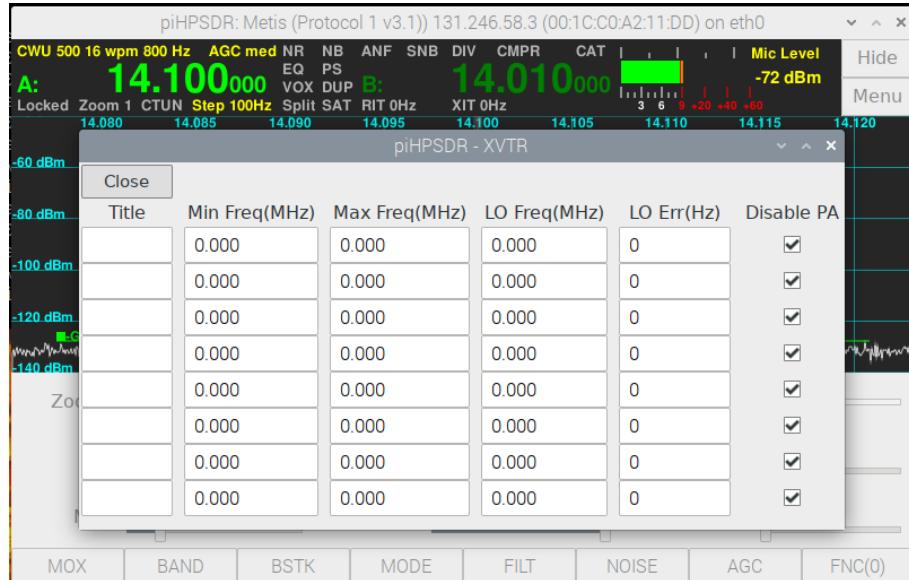


Fig. 5.8: The **XVTR** (transverter) menu.

Title In this column, enter a name for your band. You can choose whatever

name you want, this is the one that will be displayed in the **Band** menu. In the present example, use "144" or "144 MHz" or "2m".

Min Freq Enter the lowest frequency of the transverter band in MHz, in the present case, 144.

Max Freq Enter the highest frequency of the transverter band in MHz, in the present case, 146.

LO Freq This is the frequency offset (in MHz) between the radio frequency and the operating frequency. In this case, use 116. From this offset, radio frequencies between 28 and 30 MHz will be used for operating frequencies between 144 and 146 MHz.

LO Err This entry can be used for a fine calibration of the frequency. The value (in Hz) is added to the local oscillator (LO) freq in MHz.

Disable PA This checkbox indicates that the PA of the radio should be disabled when using the transverter band. This implies that the radio has some sort of low-power output that is used to drive the transverter.

piHPSDR - XVTR						x
Close	Title	Min Freq(MHz)	Max Freq(MHz)	LO Freq(MHz)	LO Err(Hz)	Disable PA
	QO100	10489.500	10490.000	9750.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>
		0.000	0.000	0.000	0	<input type="checkbox"/>

Fig. 5.9: [XVTR](#) setup for QO-100 operation.

To give an example of how to setup transverter operation, a sample setup for QO-100 operation with an Adalm Pluto is given. The Pluto is operated via the SoapySDR interface. For receiving in the 10 GHz band, one uses a so-called LNB (low noise block) in the focus of the parabol antenna which converts the 10 GHz signal down to about 740 MHz. The setup for defining

the "QO100" transverter band is shown in Fig. 5.9.

The LO (local oscillator) frequency is always chosen such that it is below the RX frequency, and the difference between the RX frequency and the LO frequency is the frequency the radio is operating on. The name (here: QO100) can be chosen as one likes, but it cannot be left empty. Once the transverter band has been defined, it shows up in the **BAND** menu (see Chapter 6.2), as shown in Fig. 5.10.



Fig. 5.10: The **Band** menu after defining the QO100 band.

To make QO-100 Operation easy, the working frequencies, the CTUN mode etc. should be stored in the first bandstack entry of the QO100 and the 13 cm band. To this end, click on the QO100 in the band menu (Fig. 5.10 and adjust the VFO-A frequency until the display reads 10489.500 MHz. Now swap VFO-A and VFO-B (**A<>B** command) and enter 2400 MHz into VFO-A using the **VFO** menu (Chapter 6.1). and swap the VFOs again. SAT mode will now ensure the 10.489 GHz Receive Frequencies and the 2.4GHz Transmit frequencies track correctly when changes are made to the Receive frequency. PiHPSDR will now remember these settings when you select the bands. The complicated swapping was necessary since band stack entries will only be stored from VFO-A.

Fig. 5.11 gives an impression of how this actually works. Note that the default setup is working Split, Duplex and SAT. Split mode implies that VFO-B is used for transmitting. Duplex mode implies that the receiver continues to work while transmitting so you can watch and hear your own signal. The TX spectrum scope then appears during transmitting in a small separate window.

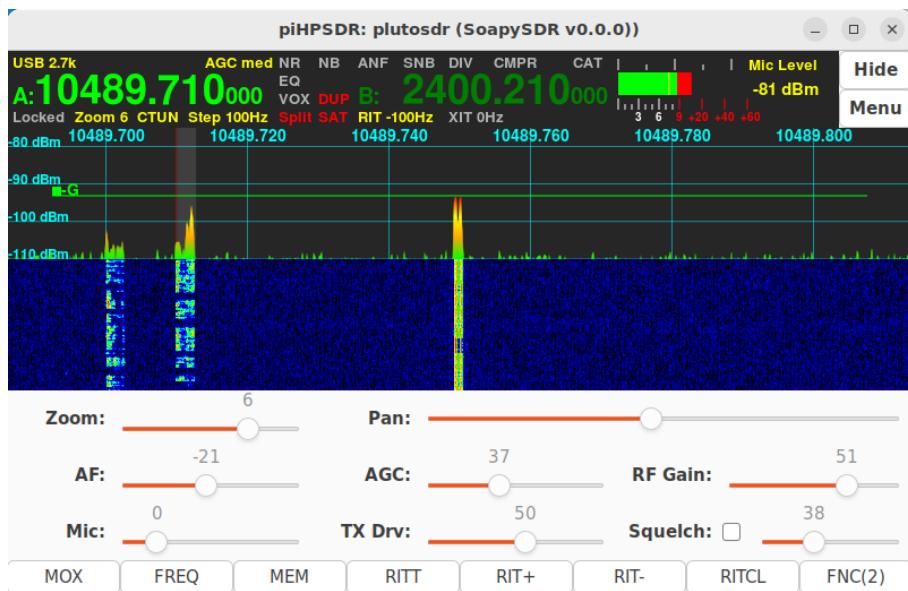


Fig. 5.11: Working QO100 with piHPSDR and the Pluto.

Chapter 6

The Main Menu: VFO-related menus

In this chapter we discuss the menus from the second column of the main menu. These are all VFO-related menus.

6.1 The VFO menu

The **VFO** menu can be used for direct frequency entry and to enable/disable some frequently used options. If the menu is opened, it refers either to VFO-A or VFO-B. If opened via the main menu, it automatically refers to the VFO controlling the active receiver. The easiest (and therefore recommended) way to open the **VFO** menu is just to make a mouse click (or a touch screen press) into the VFO bar. If clicked in the left half of the VFO bar, the menu is opened for VFO-A and if clicked in the right half, it is opened for VFO-B. The **VFO** menu is shown in Fig. 6.1.

The „keypad” is used for direct frequency entry. You can enter digits and a decimal point. While entering a number the string entered so far is not only shown in the upper part of the **VFO** menu, but also (in yellow digits) in the VFO bar. The other buttons of the „keypad” have a special meaning:

BS Backspace. This cancels the last entered character (digit or decimal point).

Hz This enters the frequency „as is”.

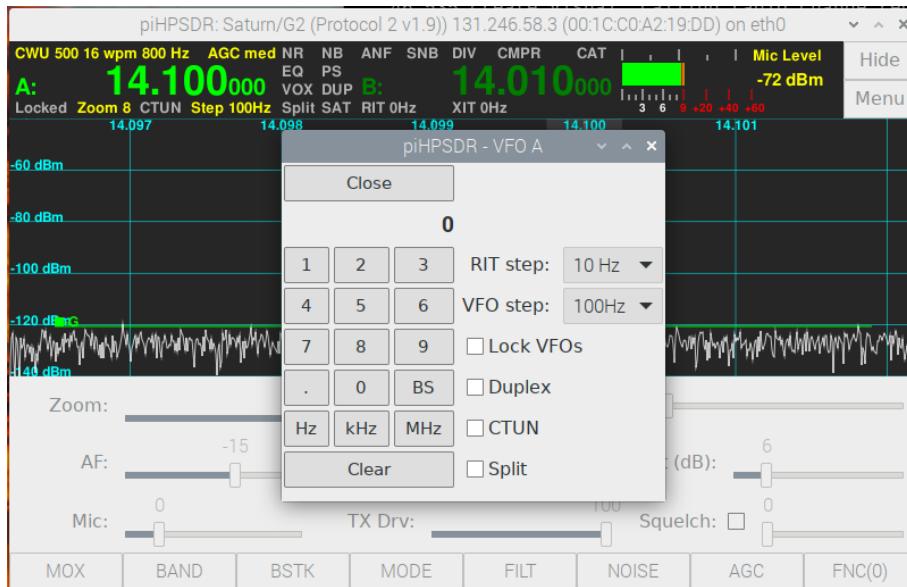


Fig. 6.1: The [VFO](#) menu.

kHz This multiplies the frequency just entered with 1000 and enters it. This means, the number entered is interpreted as a frequency in kHz.

MHz The string typed in so far is interpreted as a frequency in MHz and this frequency is transferred to the VFO.

Clear The string typed in so far is deleted, the VFO frequency is not updated. The commands entered by clicking the buttons of the keypad in the VFO menu can also be entered by push-buttons from a GPIO or MIDI controller, see the NumPad commands in Appendix A.

In addition to frequency entry, the VFO menu offers a convenient way of changing some piHPDSR settings, simply because the VFO menu can be opened by a simple mouse click into the VFO bar.

Rit Step: In this pop-down menu, the RIT/XIT step size can be chosen (1/10/100 Hz).

VFO Step: In this pop-down menu, the VFO step size can be chosen. The VFO step sizes range from 1 Hz to 1 MHz.

Lock VFOs With this check box enabled, VFO frequencies cannot be changed

by turning a VFO dial (GPIO or MIDI controller), or by clicking/dragging in the RX panel. Band changes (via the [Band](#) menu) and other VFO related functions still work.

Duplex and **Split**. With these check boxes, you can put the radio in Duplex or Split mode, see the [Radio](#) menu.

CTUN. With this check-box, you can put the VFO this menu is referring to into CTUN mode. In CTUN mode, the spectrum scope does not move when changing the frequency, rather, the RX „window” moves. CTUN mode does not affect TX operation.

6.2 The Band menu

The [Band](#) menu lets you change the band of the active receiver. It is shown in Fig. 6.2. When the menu opens, the button of the current band is highlighted.

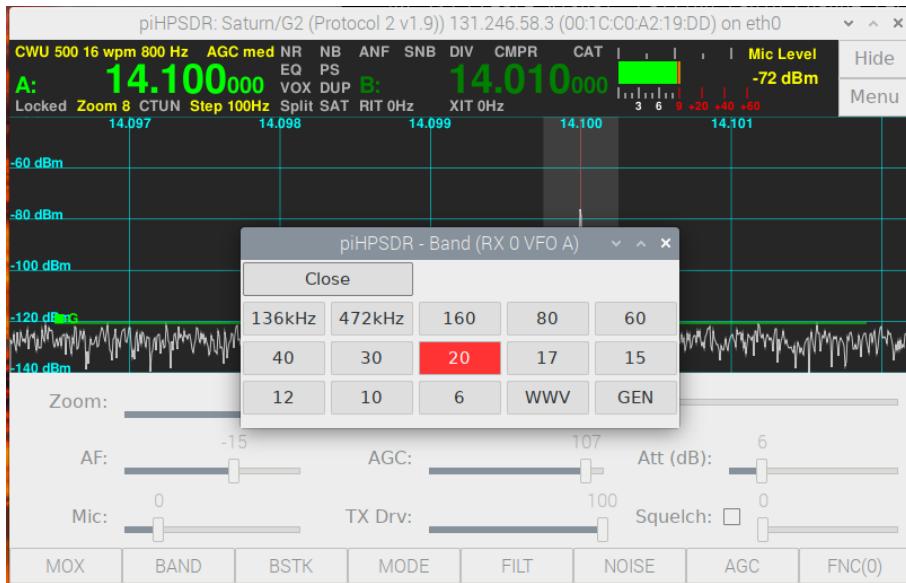


Fig. 6.2: The [Band](#) menu.

Pressing a button corresponding to another band, two things happen: first, if the active receiver is controlled by VFO-A, the current frequency is stored in

the current bandstack (which is thus updated). Then, the new band is chosen, the frequency and mode are from the active bandstack entry of the new band. This means that if you switch to another band and shortly thereafter switch back to the original band, the frequency and mode is restored to what you had before.

If you hit the highlighted button, you will not change the band (since you hit the button of the current band) but instead will cycle through the band stack of that band (see the [BndStack](#) menu).

Note that the band menu may look different from the one shown here: there are many bands (24 bands plus up to 8 transverter bands) defined in piH-PSDR. However, the bands that are outside of the radio's frequency limits are not shown. For example, a radio whose maximum frequency is 30 Mhz will not show the 6m band. The **GEN** (General) band encompasses the whole frequency range of the radio. If you set the frequency (e.g. via the [VFO](#) menu) to a frequency outside of any of the other bands, you will end up in the General band. If you have defined transverter bands (see the [XVTR](#) menu) they will be shown, with the title you have chosen, in the [Band](#) menu.

6.3 The BndStack (Bandstack) menu

For each band, the band stack is collection of operating frequencies/parameters. The idea is that you can have preferred or recently visited frequencies to which you can easily come back. The parameters that are actually stored are the frequency, the mode (e.g. USB or FMN), the filter, and whether CTUN is enabled or disabled. The bandstack parameters also encompass some FMN-specific parameters, namely the deviation and the CTCSS setting. If you open the [BndStack](#) menu (Fig. 6.3), the buttons tell you about the frequency and the mode, and the band stack entry currently selected is highlighted.

If you press the highlighted button, the parameters which are currently effective are stored in that band stack entry. If you press another (non highlighted) bandstack button, then first the current parameters are stored in the highlighted band stack entry, and then the parameters of the new entry become effective. Note that parameters in bandstack entries are only changed if the active receiver is controlled by VFO-A.

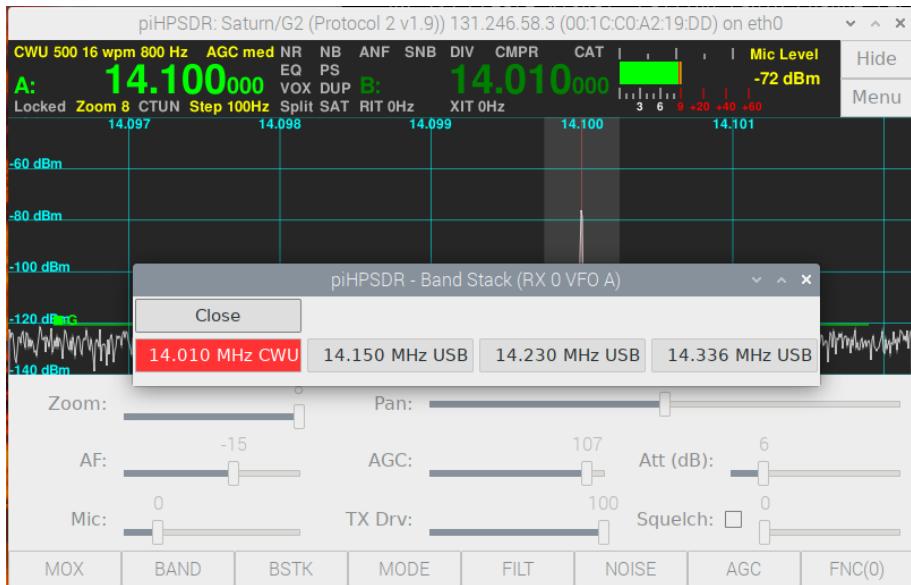


Fig. 6.3: The [BndStack](#) (Bandstack) menu.

6.4 The Mode menu

The [Mode](#) menu lets you change the mode of the active receiver, so you can switch, say, from LSB to CWU or DIGU. The mode menu simply lists the available modes, the current one is highlighted (Fig. 6.4).

Settings stored with the mode. Many settings such as filter choices, noise reduction and equalizer settings, and TX compressor settings are only reasonable with a specific mode in mind. Therefore, these settings are stored with the mode. If you later switch back to this mode, the settings that were effective the last time you used that mode are restored. This is the main reason why the USB and DIGU modes are separate (although technically they are the same), the same applies for LSB and DIGL. For digital operation, you will normally choose DIGU and have no noise reduction, no TX compressor, and no equalizer. For voice operation (USB/LSB) you may then have the noise reduction, equalizer and TX compressor settings as you like it. Then you can easily switch between DIGU and USB/LSB and have the correct settings automatically. The same applies to CWL/CWU where you will normally use different settings compared to both USB/LSB and DIGU.

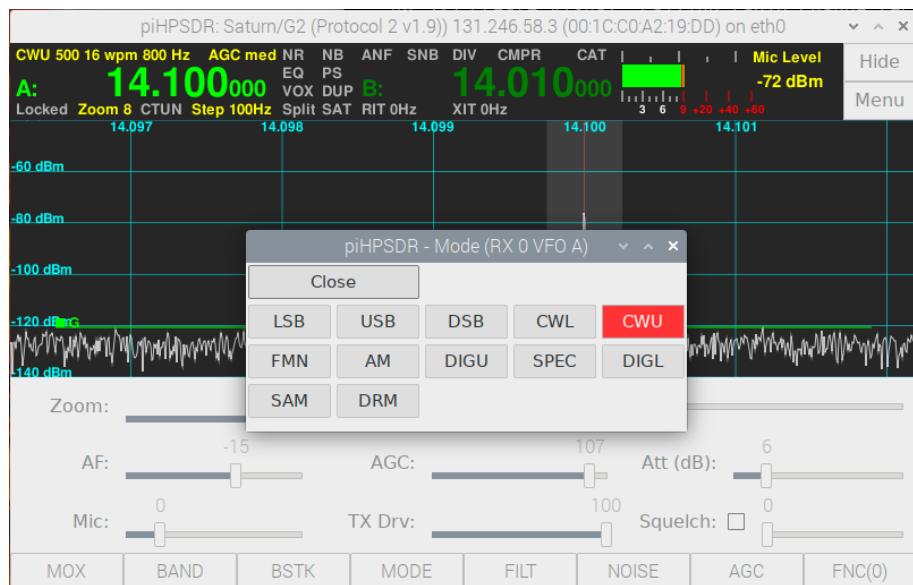


Fig. 6.4: The [Mode](#) menu.

6.5 The Memory menu

The [Memory](#) menu gives you access to five memory slots. The menu is shown in Fig. 6.5. You can store the current operating frequency of the active receiver in any of the five slots by clicking a button in the leftmost column (e.g. "Store M2"), or you can restore data from any slot. Parameters stored in the memory slot are the frequency and the mode, the filter used, the deviation, and the CTCSS setting. The right column shows the frequency, the mode, and filter currently stored in the memory slot and clicking on one of the five buttons there will restore the data. So if you have some often used frequencies (e.g. for a net), the [Memory](#) menu allows you to become QRV there with only few mouse clicks.

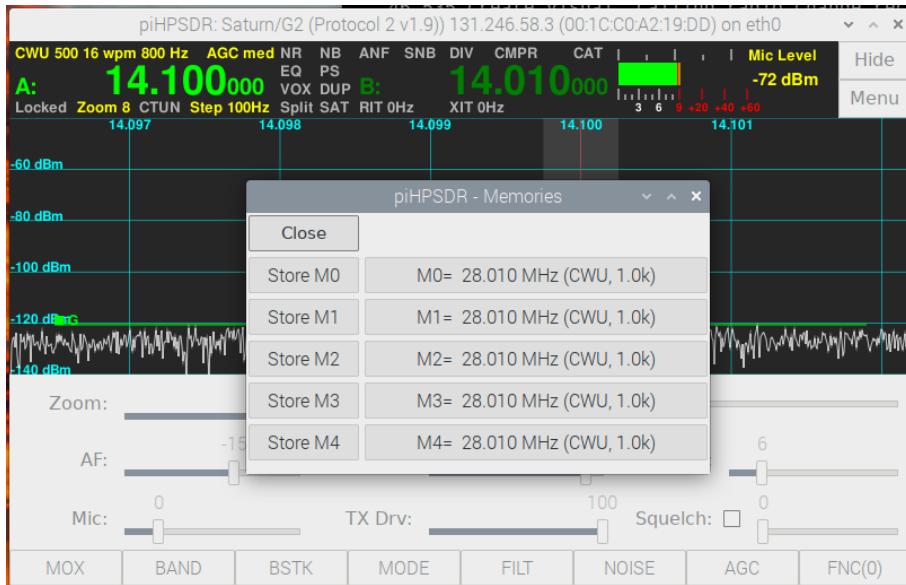


Fig. 6.5: The [Memory](#) menu.

Chapter 7

The Main Menu: RX-related menus

The second column of tge main menu contains menus which allow you to change receiver settings.

7.1 The RX Menu

Invoking the **RX** menu through the main menu always implies that the settings of the active receiver are to be modified. Using a mouse, you can also open the menu by a secondary click (using the right mouse button) into the receiver panel. This way, if piHPSDR is running two receivers, you can open the **RX** menu for both receivers (the active receiver as well as the other one), depending on in which panel you have right-clicked. Note secondary clicks are usually not possible with a touch screen. The menu is shown in Fig. 7.1.

Sample Rate This box is only shown for radios running P2, since only there the receivers can have an individual sample rate. For radios running P1 or radios accessed through the SoapySDR library, the sample rate is a global quantity that is modified throught the **Radio** menu (see above).

Select ADC This box is only shown if the radio has more than one analog-to-digital converter (ADC), such as Orion, Orion-II and Saturn boards. These radios have two ADCs so you can choose whether the receiver gets data from

ADC0 or ADC1. For these radios, nearly all antenna jacks go to ADC0, while there is a jack denoted "RX2" (or similar) that is connected with ADC1. In most cases, ADC0 is used for normal operation, while ADC1 can be used for connecting a dedicated RX antenna.

Note: Diversity. When using **Diversity** reception, the ADC setting is overridden, since there data streams from ADC0 and ADC1 are combined (mixed).

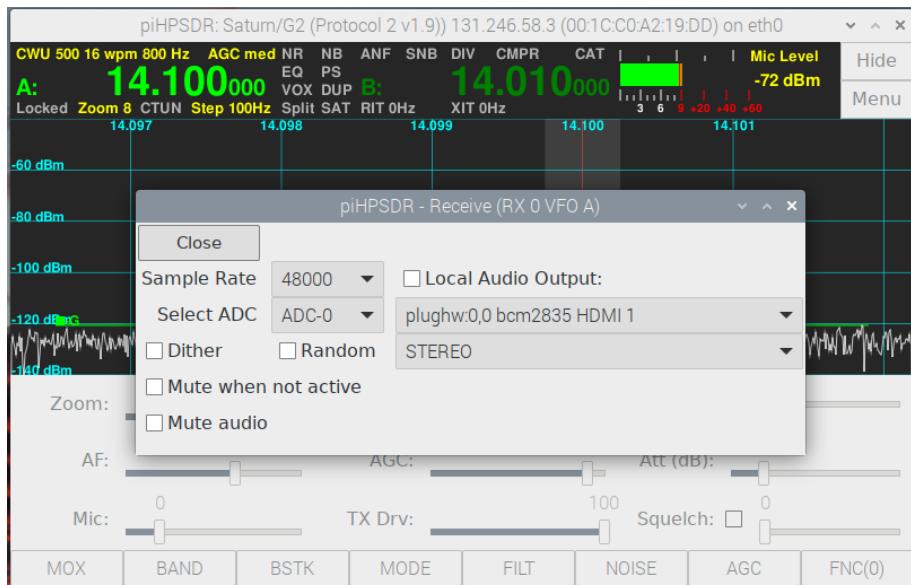


Fig. 7.1: The **RX** menu.

Dither. When checked, the „dither” bit is set which affects the operation of the ADC converter in some HPSDR boards.

Random. When checked, the „random” bit is set which affects the operation of the ADC converter in some HPSDR boards.

Preamplifier. This checkbox is not shown in Fig. 7.1, it only occurs for some legacy HPSDR boards which had a switchable RX preamp.

Mute when not active. If checked, the audio from this receiver is muted when it is not the active receiver.

Mute audio. If checked, the audio from this receiver is muted, no matter whether it is active or not.

Local Audio Output: If checked, the audio from this radio is sent to a local sound card (or virtual audio cable). The sound card itself is selected in the pop-down menu below this check box. One line below, one can select between STEREO, LEFT and RIGHT, and select whether the RX audio should be sent to both channels or to the left or right one only. This way, one can use one sound device for the first receiver and select LEFT, and choose another sound device for the second receiver and choose RIGHT. If one then mixes these two audio streams (either by operating system facilities or in hardware), one gets the first receiver audio on the left ear and the second receiver audio on the right ear, which may help in split operation in DX chasing.

In the example shown, checking the Local Audio box would send the RX audio samples to the HDMI monitor attached to the RaspPi, but one could equally well choose the headphone output or a virtual cable, if one wants to use digital modes.

If you are running two receivers, it depends on the audio output module whether it is possible to use the *same* audio output device as local audio output for both receivers. With PulseAudio, this is possible which gives you an additional bonus: Choose the same output device for RX1 and RX2 and activate only the left channel for the first and only the right channel for the second receiver. With this setup, one gets the audio output of the first receiver on the left ear and the audio output of the second receiver on the right ear. This can be very convenient for hunting DX in split mode, because one then hears the hounds and the fox on different ears.

7.2 The Filter menu

With the **Filter** menu, you can change the filter of the active receiver. There are ten fixed filters and two variable filters, see Fig. 7.2. It depends on the current mode which filters are at your disposal, and Fig. 7.2 is what you see for USB and LSB modes. The filter currently active is highlighted, and you can choose another filter simply clicking the button. For USB and LSB, the filters are such the low-frequency cut (in the audio domain) is at 150 Hz, so a 2.7k filter actually encompasses audio frequencies from 150 to 2850 Hz. With the variable filters (Var1 and Var2) you can be more flexible in the low audio frequency range. Here you can individually select the low- and high

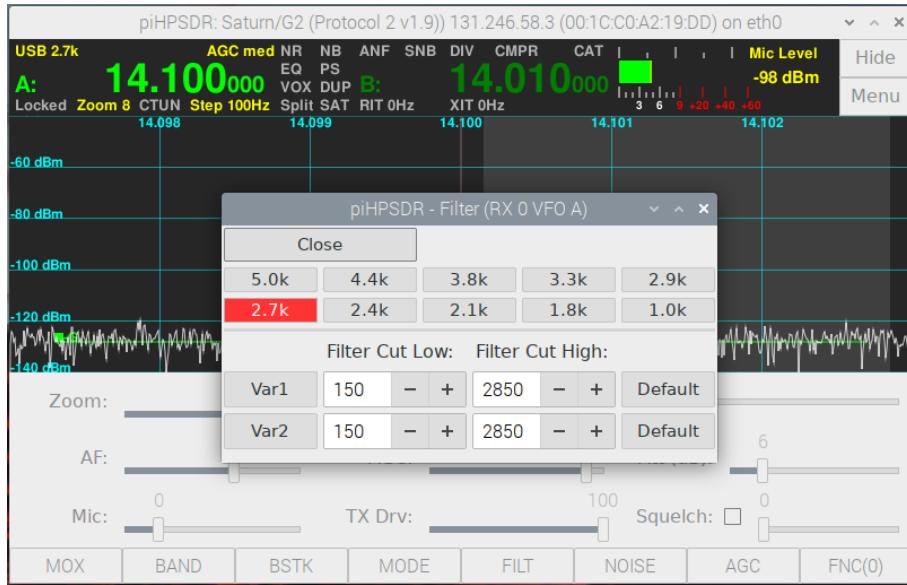


Fig. 7.2: The [Filter](#) menu (single side band modes).

frequency cut (both frequencies refer to the audio domain, and are thus both positive value for USB and LSB).

The pre-defined filters for the digital modes DIGU and DIGL are a little bit different. For filter widths up to 3 kHz, the filter is centered around 1500 Hz. For example, a 1.0k filter for DIGU/DIGL passes audio frequencies between 1000 and 2000 Hz.

For modes such as CW and AM, low/high cutoff frequencies have little meaning, so the [Filter](#) menu looks slightly different (Fig. 7.3). The fixed filters are designated by their width, they are centered around zero (for AM) or around the CW side tone frequency (for CWU and CWL). For the variable filters Var1 and Var2, the spin buttons can set the filter width and the filter shift. Normally you will not want to change the filter shift, but it may help in special cases.

Enable additional CW Audio peak filter. If the mode of the active receiver is CWL or CWU, there will be an addition check box in the top row of the menu. Here you can enable/disable an audio peak filter that is applied to the final audio output of the receiver, that is, on top of the regular filtering. The audio peak filter will only be effective in the CW modes, its center

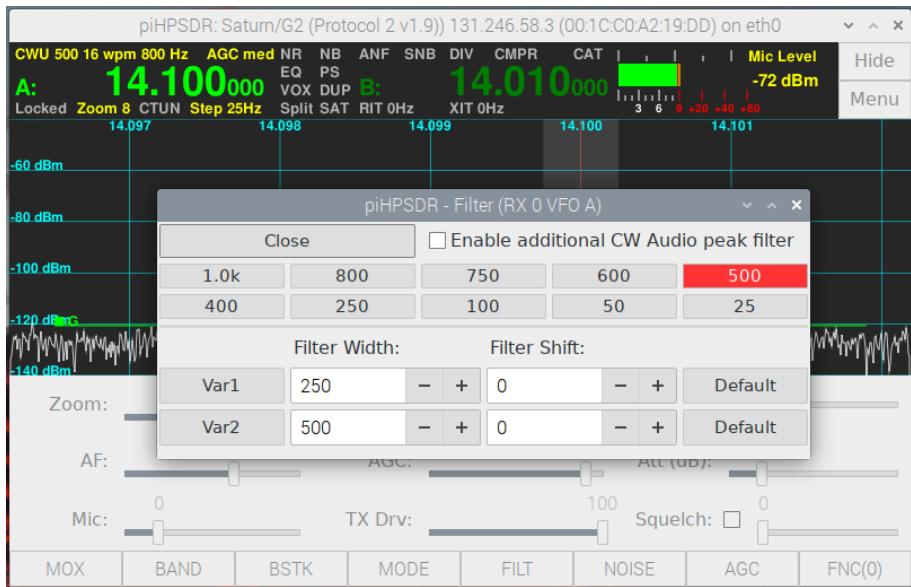


Fig. 7.3: The [Filter](#) menu for CWL/CWU.

frequency is given by the CW side tone frequency and its width is automatically calculated, depending on the width of the primary filter. The audio peak filter can be used to dig out the CW signal from the noise (making the regular filter narrower also does this job). The audio peak filter can also help to tune to the correct frequency: the regular filters have a flat pass band so the received signal equally loud as long as it is in the pass band. The audio peak filter has a marked peak at the side tone frequency so you can tune for maximum signal volume to adjust your frequency to the received signal.

There is the function [CW Audio Peak Filter](#) that can be mapped on toolbar buttons or GPIO/MIDI buttons so you can quickly enable/disable the audio peak filter.

Filter menu and FM mode. In FM mode, the [Filter](#) menu only lets you choose between a deviation of 2500 Hz or a deviation of 5000 Hz. Irrespective of whether the box [Use RX Filter](#) in the TX menu (see Chapter 8.1) is checked, the deviation setting is used both for RX and TX. Filter edges (both for TX and RX) are then calculated according to Carson's rule. Assuming a maximum audio frequency of 3000 Hz, a filter width of 11 kHz and 16 kHz result for deviations of 2500 and 5000 Hz.

7.3 The Noise Menu

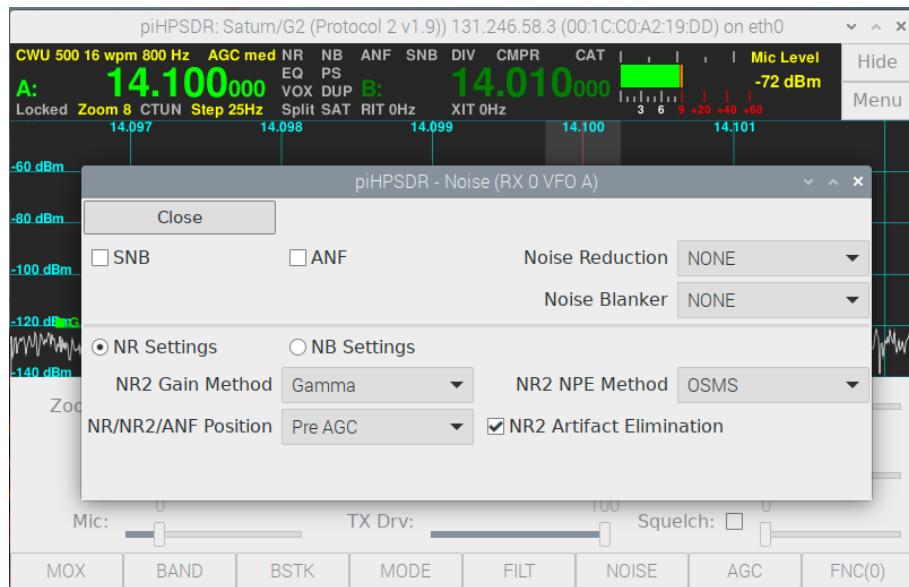


Fig. 7.4: The **Noise** menu (with NR settings).

With the **Noise** menu you can select a variety of noise reduction and/or noise blunker capabilities (Fig. 7.4). The upper part of the menu always looks the same, the lower part lets you fine-tune noise reduction or noise blunker parameters. For an in-depth explanation of the noise reduction and noise blunker capabilites, the reader is referred to the WDSP manual.

SNB This check box lets you enable/disable the spectral noise blunker.

ANF This check box enables/disables the automatic notch filter. The ANF is very good at eliminating a single-tone QRM carrier in SSB modes. It goes without saying that activating the ANF in CW is detrimental rather than beneficial, because here the signal is of the type the ANF tries to eliminate.

Noise Reduction With this pop-down menu, you can choose the type of noise reduction (no noise reduction, NR1 or NR2).

Noise Blunker With this pop-down menu, you can choose the type of noise blunker (no noise blunker, the preemptive wideband blunker NB or the interpolating wideband blunker NB2).

NR Settings/NB Settings Choosing one of the two buttons determines whether the lower part of the menu offers fine-tuning of the noise reduction or noise blanker settings. The set up for changing the noise reduction settings is shown in Fig. 7.4, below (Fig 7.5) you find the set up for changing the noise blanker settings. We discuss the noise reduction settings first, but note again for the details you have to study the WDSP manual.

NR2 Gain Method The available choices for the NR2 noise reduction here are Linear, Log, and Gamma, where Gamma is the default.

NR2 NPE Method The available choices for the NR2 noise reduction here are OSMS and MMSE, where OSMS is the default.

NR...Position In the RX chain, the noise reduction can be placed before or after the automatic gain control (AGC). The choice here refers to *all* noise reduction capabilities (SNB, ANF, NR1, NR2).

NR2 Artifact Elimination The NR2 noise reduction algorithm is prone to producing artifacts, so there is an option to reduce such artifacts which should normally be checked (artifact elmination „on“).

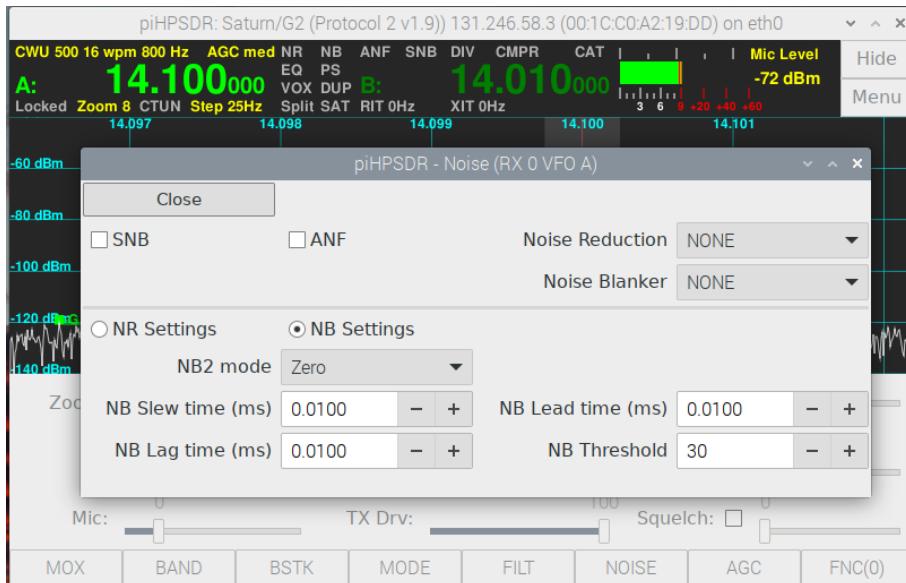


Fig. 7.5: The **Noise** menu (with NB settings).

Note the noise blanker works very different from the noise reduction, since noise blanking is applied to the original RX IQ samples before any frequency

shifts etc. take place. If you have a single source of noise (e.g. a Plasma TV) that drives you crazy, it is worth the effort to play around with the NB2 parameters, especially the timings. Different QRM sources will require different parameters! The default parameters have been proven useful for many situations, but for you a different setting may produce better results! The options to control the noise blanker algorithms are:

NB2 Mode The available choices for the interpolating NB2 noise blanker here are Zero, Sample&Hold, Mean Hold, Hold Sample, and Interpolate.

NB Slew time/Lag time/Lead time/Threshold These parameters apply both to NB and NB2. piHPSDR currently does not allow to have a separate set of parameters for NB and NB2.

7.4 The AGC Menu

Only few parameters can be controlled via the automatic gain control (AGC) menu. The first is the AGC time constant, which can be Off (no AGC), Long, Slow, Medium, and Fast. A very long AGC time constant protects your ears, but it also means that the receiver becomes „deaf” for a rather long time after a strong QRM burst. This phenomenon is known as ”AGC pumping”. Generally, if you do SSB on a quiet band, the AGC time constant can be longer, for CW on the other hand, I personally prefer short time constants (Medium or Fast).

The **AGC Hang Threshold** is only effective if the AGC time constant is Long or Slow, since the AGC hang time is turned off for Medium and Fast. In this case, the RX spectrum scope not only shows the „normal” AGC line in green, but also the hang threshold line in orange.

7.5 The Diversity Menu

Diversity is a very powerful tool to improve reception by using two different antennas and two ADCs. To explain how it works, suppose you live in a house which produces a lot of local QRM. Your „normal” antenna will pick up the wanted DX signals, but also a lot of noise that originates somewhere in your house. Now suppose you have a second receive-only antenna placed in your

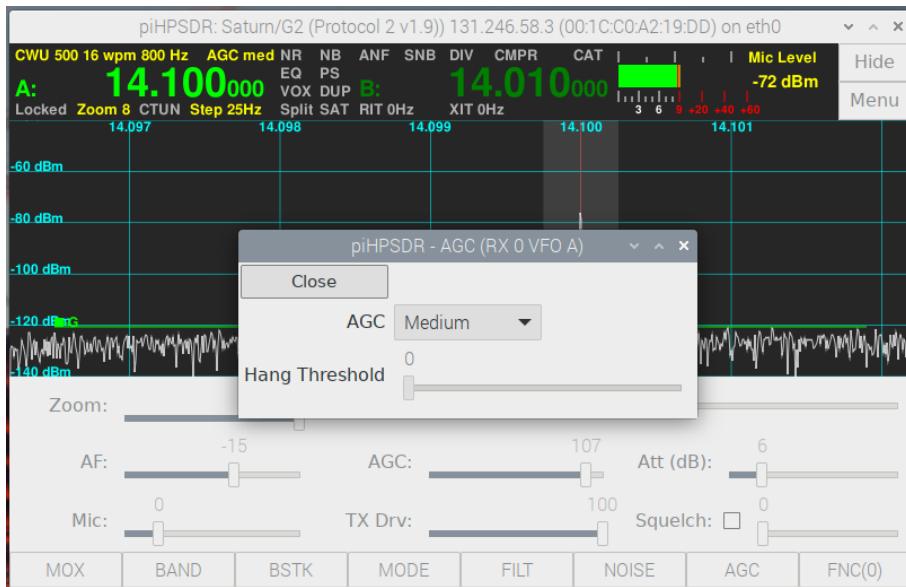


Fig. 7.6: The AGC menu.

house that will predominantly pick up your local QRM and only very little DX signal.

Of course, this RX-only antenna does not deliver anything useful at first sight. But, imagine you could shift the phase and the amplitude of the signal of the in-house antenna such that it exactly opposes the local QRM picked up by your DX antenna! Adding this (phase shifted and amplitude adjusted) signal from your in-house antenna to what comes from your DX antenna will produce a signal where the local QRM is largely eliminated while the DX signal is only weakly affected. This is what [Diversity](#) is all about.

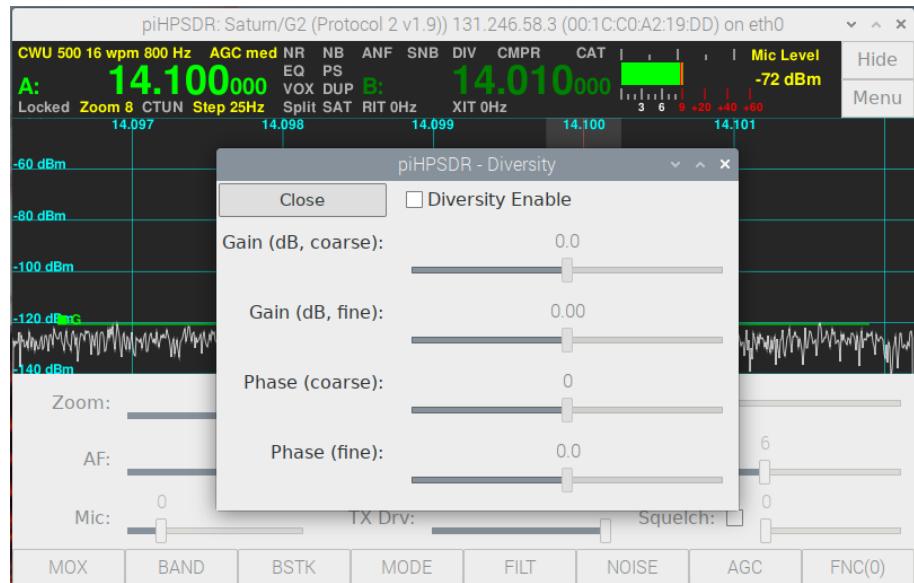


Fig. 7.7: The [Diversity](#) menu.

Chapter 8

The Main Menu: TX-related menus

Note that for RX-only radios, only the **CW** menu will be shown here because there one can set the pitch of the CW side tone, which also affects the RX „BFO frequency”.

8.1 The TX Menu

The **TX** menu can be opened from the main menu, or just by a secondary mouse click into the TX panadapter (while transmitting). The menu is shown in Fig. 8.1.

Local Microphone. If this box is checked, the TX audio samples come from a soundcard attached to the host computer, or from a virtual audio cable. The sound device can be selected from the pop-down menu to the right. This check box, and the pop-down menu, is absent if there are no output sound devices available.

Note: If the radio has the possibility to connect a microphone, and if PTT comes from the radio, the radio microphone samples and the local (sound device) microphone samples are mixed (added). This is very convenient if one does SSB with a microphone attached to the radio, and digital modes with a local sound device or virtual audio cable: when doing SSB, the local

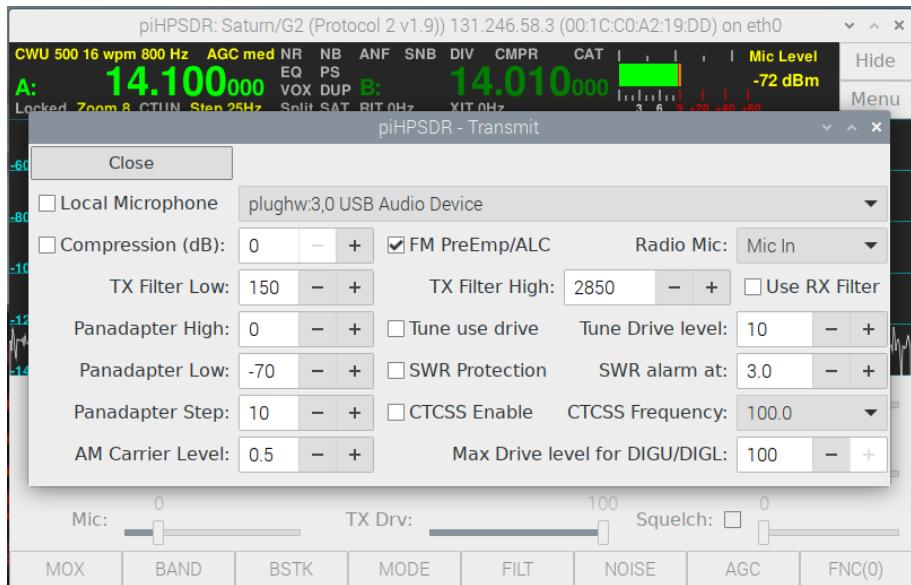


Fig. 8.1: The TX menu.

sound device normally produces no audio, and while pressing PTT at the microphone, you can work SSB normally. So you can go from digital mode to SSB without the need to change the microphone setup in the TX menu.

Compression (dB): With this box the TX compressor can be enabled/disabled. The compression level (0-20 dB) can be chosen in the spin button to the right.

Note: The compressor on/off flag, as well as the compression level, is „stored with the mode”. So it is possible to have the compressor enabled for SSB (LSB/USB) and disabled for digi modes (DIGL/DIGU), and when switching modes, the compressor settings for the new mode are automatically restored.

FM PreEmp/ALC. When transmitting FM, the audio input signals are „emphasized”. This means that from 300 to 3000 Hz (the usual range of audio frequencies in amateur radio FM), there is a 6 dB per octave (20 dB per decade) that leads to a 20 dB damping of an input signal at 300 Hz (8 dB damping at 1200 Hz, and no damping ad 3000 Hz). This of course distorts the audio, but the reverse process is built into FM demodulators to correct for this. Because there is a lot of damping of the audio signal, piHPDSR applies a 15 dB boost to the TX audio input samples when the mode is FMN.

This boost is nearly ineffective if the FM pre-emphasis takes place *after* the TX ALC stage, since the ALC will cancel most of the extra boost and the FM modulation sounds „thin”. If the **FM PreEmp/ALC** box is checked, FM pre-emphasis takes place *before* the TX ALC, such that the ALC „sees” the TX audio input after applying both the boost and the damping of the pre-emphasis. This gives the transmitted signal a little more „punch”. It is generally recommended to have this box checked if doing FM.

Radio Mic: This text, and the pop-down menu to its right, only occurs if a microphone can be connected to the radio. The pop-down menu lets you choose between **Mic In** which means that a microphone can be connected to the microphone input jack, **Mic Boost**, which additionally switches on a hardware 20 dB mic amp, and **Line In** which means that the "Line In" jack of the radio is used for the audio samples transferred from the radio to the host computer. This is part of the HPSDR protocol, it may well happen that your radio has a microphone jack but no line-in input. The optional 20 dB preamp may be necessary when connecting a dynamic microphone whose input level (few mV) is considerably lower than that of a condensor (electret) microphone, or a dynamic microphone with built-in preamp.

TX Filter low: With this spin button you can set the low cut of the TX filter. The frequency refers to the audio domain.

TX Filter high: With this spin button you can set the high cut of the TX filter. The frequency refers to the audio domain.

Use RX Filter If this check box is enabled, the TX filter low/high cuts are ignored, and the filter edges of the current RX filter are used instead.

Panadapter Low: This spin button sets the lower edge (in dBm) of the TX panadapter.

Panadapter High: This spin button sets the upper edge (in dBm) of the TX panadapter.

Panadapter Step: This spin button determines how many horizontal lines are drawn on the TX panadapter. If set to 10, for example, there will be a horizontal line for every multiple of 10 dBm.

AM carrier level: This sets the AM carrier level for the AM modulator. If set to zero, there is no carrier and the signal is a DSB signal. A reasonable value is 0.5 which leads to 100% modulation. Values larger than 0.5 have less

than 100% modulation. This means too much power goes into the carrier.

Tune use Drive If this box is checked, TUNEing will be done with the power that corresponds to the current position of the drive slider, and the tune drive level is ignored.

Tune Drive Level The value that can be adjusted with this spin box is the virtual position of the drive slider while TUNEing. This value is ignored if the **Tune use Drive** box is checked.

SWR protection If this box is checked, a very simple SWR protection is enabled. If the SWR exceeds the threshold value (see next point), the drive slider is set to zero. The SWR protection is disabled while TUNEing.

SWR alarm at The spin button to the right determines the SWR threshold. If the SWR is beyond the threshold, the SWR reported in the meter turns red. If SWR protection is enabled, the drive slider is set to zero if the SWR exceeds the threshold.

CTCSS Enable (FM only!) This checkbox enables/disables CTCSS (continuous tone coded squelch system). If enabled, a low-frequency tone is transmitted together with the normal TX audio. This can be used to trigger repeaters, or any other function implemented on the other side. The frequency itself can be chosen with the following menu point:

CTCSS Frequency This pop-down menu lets you choose the CTCSS frequency. This choice has no effect if CTCSS is disabled. The frequency list includes 38 standard TIA/EIA-603-D CTCSS frequencies between 67.0 and 250.3 Hz.

Mac Drive level for DIGU/DIGL This spin button restricts the range of the drive slider from 0 to the chosen value for the DIGU and DIGL modes. If the value is 100, this has no effect. The primary use of this menu point is PA protection, since many digital modes (unlike SSB voice) are constantly transmitting at full power.

8.2 The PA Menu

In the **PA** menu, you can adjust the output level of your HPSDR board to the PA being used, and you can establish a calibration of the power begin

displayed in the meter section while transmitting. The menu presents itself as shown in Fig. 8.2.

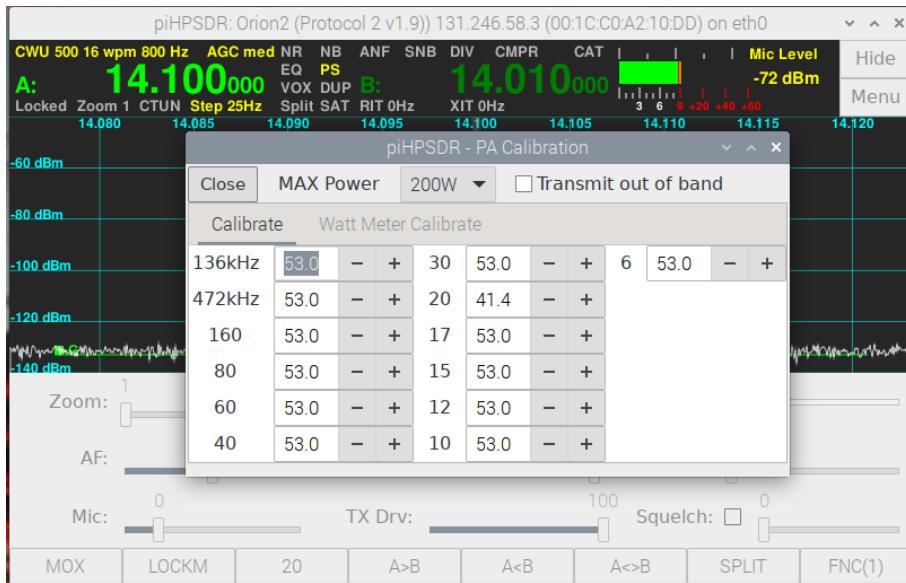


Fig. 8.2: The PA menu, PA calibration screen

In the first line, you can choose the maximum PA power of your radio. The available values are 1, 5, 10, 30, 50, 100, 200, and 500 Watt. If your radio has a different maximum power, choose the next largest value. The choice of this value only affects the watt meter calibration (see below). If the box **Transmit out of band** is checked, this allows piHPSDR to go TX if you are outside of the amateur radio bands.

PA calibration. If the **Calibrate** sub-menu is active (as shown in Fig. 8.2) you can adjust your HPSDR board to your PA. This has to be done for each band separately, and you need a dummy load and a watt meter to do so. Most watt meters used by radio amateurs are not highly accurate, so if you can borrow an accurate one, do so. The PA calibration values are the fictitious amplification of the PA. If the value is *increased*, piHPSDR assumes a higher amplification and will thus *decrease* the output power of the HPSDR board. Thus, *increasing* the PA calibration value will *decrease* the output power. A calibration value of 38.8 dB corresponds to the maximum RF output of the HPSDR board, so the allowed range of values starts at 38.8.

To start calibration, go to the **TX** menu and check the box **Tune use Drive**.

Then, hit the rightmost toolbar button until one of these buttons reads **TUNE**. This way, when TUNEing, you send a carrier with the power according to the drive slider. For each band, go to the middle of the band, open the PA menu, put the drive (**TX Drv**) slider at 50 and hit the TUNE button. If the output (measured with the Watt meter) is higher than half of your nominal PA power, increase the PA calibration value of that band, otherwise decrease it. Choose a value such that your Watt meter reads half the nominal output power. For fine adjusting, move the drive slider to 100 and adjust the PA calibration value until your Watt meter shows the nominal output power. The calibration values will (slightly) differ from band to band, often one needs smaller values for the higher bands since the amplification of the PA is smaller there. If transverter bands have been defined via the **XVTR** menu, they will also show up in this menu. Note that the PA calibration value affects the level of the low-power TX output of the HPSDR board and thus affects both the PA output (if the PA is enabled) as well as the low-power TX output (if the Xvtr port is active as RX antenna).

Watt meter calibration. When PA calibration is complete, you can calibrate the power reading within the meter section of the piHPSDR window. If you open the **PA** menu and click on the text **Watt Meter Calibrate**, the menu changes and looks like in Fig. 8.3.

You have 10 Watt values from $\frac{1}{10}$ to the full nominal power. Initially, the values of the spin buttons beside the Watt ratings have the nominal value. The calibration values can always be re-set to these nominal values by hitting the **Reset** button. Watt meter calibration is not done separately for all bands, so it is suggested to perform the following procedure on the 20m band. piHPSDR will convert the „measured” into the „reported” value by linear interpolation between two adjacent calibration values.

Start with resetting the value by hitting the **Reset** button. Then, move the drive slider to 100 (the unit of the drive slider is per cent, not Watt!) and hit TUNE. After the PA calibration described above, your (external) Watt meter should show the nominal PA output power (e.g. 100 Watt for an ANAN-7000). Now look at the forward power reported in the meter section (top right of the piHPSDR window). Suppose you read "250 W" there although your output is 200 Watt. Then simply insert the number 250 in the spin button to the right of the string **200W**. Now your watt meter reading should be close to 200W, you can fine-tune it with the spin button. Note that

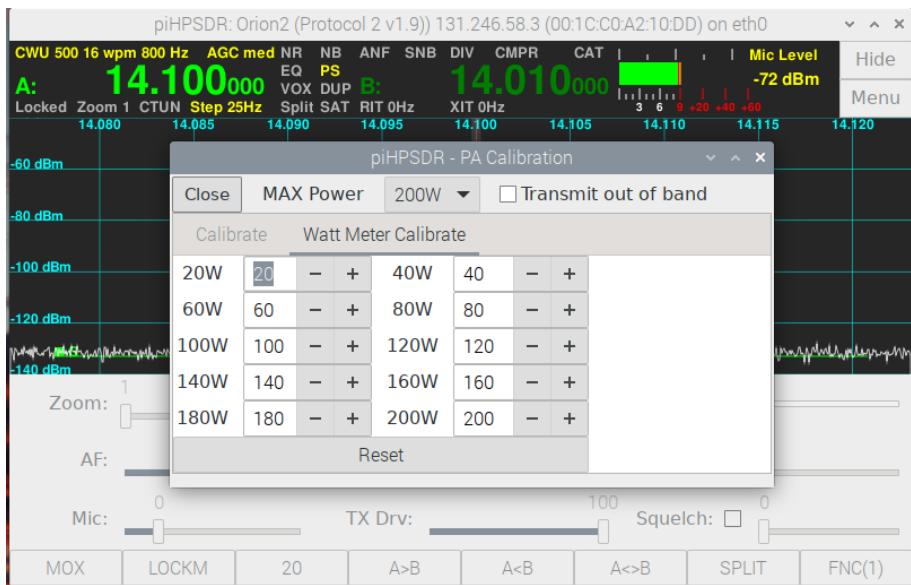


Fig. 8.3: The PA menu, Watt meter calibration

increasing the calibration value with the spin button will *decrease* the power indicated in the meter section.

You will observe that the calibration values for the lower powers also have changed. This only happens if you start from nominal calibration values and change the calibration value of the highest power. For example, if you have entered 250 in the 200W spin button, then the value in the 100W spin button will read 125. So in a single shot, you have roughly calibrated the Watt meter.

A finer calibration only makes sense if you have a highly accurate Watt meter. If you do, you can now move the drive slider until your Watt meter exactly reads one of the lower power values, and use the corresponding spin button to change the calibration until piHPSDR exactly reports the correct power.

The procedures is the virtually the same if our nominal output power is different. The only complication arises if your radio has a nominal power that is not in the menu, for example 150 Watt.

In this case, choose 200W in the top line of the PA menu. TUNE and move the drive slider until your Watt meter reads the largest value possible that occurs in the Watt meter calibration menu (in this example, it is 140W).

Adjust the 140W spin button until piHPSDR reports 140 Watt. Then go to full power (150W) and adjust the 200W spin button until piHPSDR reports 150 Watt. Then, proceed with 120, 100, 80, etc. Watts.

8.3 The VOX Menu

VOX (voice control) means that you can just speak into the microphone and the radio goes TX, without the need to press a PTT button. VOX can also be used in digital modes, if there is no possibility that the digimode program can put piHPSDR into TX mode via CAT commands or hardware lines. The VOX menu is shown in Fig. 8.4.

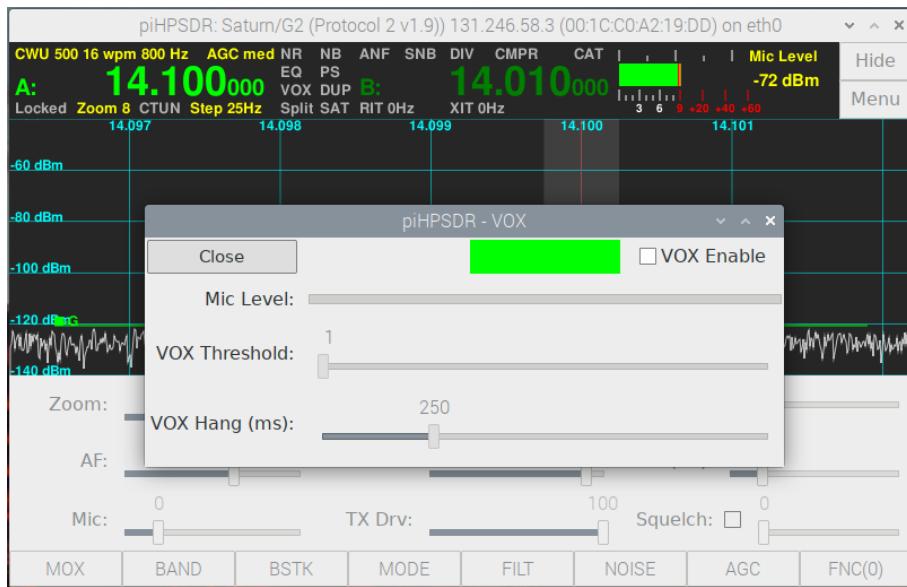


Fig. 8.4: The VOX menu

With the **VOX Enable** check box, you can enable/disable VOX. For VOX operation, there are two parameters, namely the VOX threshold and the VOX hang time. The VOX threshold is the microphone amplitude required to trigger a RX/TX transition. If the radio goes TX when the neighbour's hound starts barking, then the VOX threshold is too small. If the radio does not go TX although you speak loudly into the microphone, the threshold is too large. The VOX menu features an indicator which can be green or red (in

Fig. 8.4, this is the green bar). This indicator flashes red if the microphone amplitude is above the VOX threshold. Adjust the threshold with the slider such that the indicator becomes red if you speak into the microphone, but stays green if you don't speak.

The VOX hang time determines how long the radio stays in TX mode after the last time the microphone delivered a signal that was above the VOX threshold. Typical values are 250 to 500 milli seconds. If your radio produces relay chatter because it goes RX between your words, increase the hang time. However, this will also increase the turn-around between you finished your message and go RX.

VOX is very nice for rag-chew phone QSOs, I won't recommend it for contest operation.

8.4 The PS (PureSignal) Menu

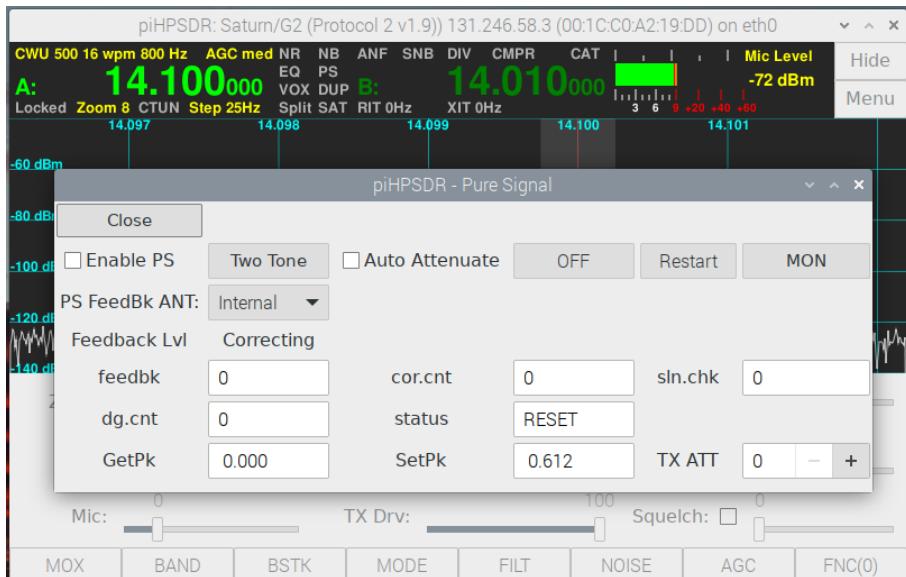


Fig. 8.5: The PureSignal (PS) menu

PureSignal is the „street name” for adaptive pre-distortion. What this means is, that the signal from the *output* of the PA (the „antenna signal”) is coupled back (through an attenuator of typically 40-60 dB) to the radio and

is analyzed whether it looks like it should. If it is distorted (e.g. by non-linearities of the PA), then the PureSignal algorithm calculates how an input signal to the PA should look like to produce the desired output. This is usually measured and calibrated with a so-called two-tone experiment. In this experiment, two constant carriers, for example 7100 kHz and 7101 kHz, are transmitted. If both carriers contain 25W power, this is a 100W PEP signal. Non-linearities of the PA first lead to the occurrence of harmonics (in this case around 14.2, 21.3, and 28.4 MHz). This is not a problem because such harmonics are damped by the TX low-pass filters. Higher-order non-linear effects, however, lead to additional in-band signals, in our example they occur at 7102/7099, 7103/7098 etc. kHz. The low-pass filters cannot eliminate these signals, they lead to unwanted signals („splatter“) that disturb QSOs on neighbouring frequencies. With PureSignal, you can greatly reduce these un-wanted signals. If you open the **PS** menu for the first time it looks like shown in Fig. 8.5.

The elements have the following function:

Enable PS With this check box, PS can be enabled/disabled.

Two Tone With this button, a two-tone experiment can be started/stopped. The button will be highlighted as long as the two-tone signal is transmitted.

Auto Attenuate This enables/disables automatic adjustment of the RF input attenuator to give the feedback level the correct strength. It is highly recommended to use this option.

OFF With this button, the PS correction can be stopped (the **status** will then change to RESET).

Restart With this button, the PS correction can be resumed, for example after it has been stopped.

MON With this button, it can be chosen whether the TX spectrum scope shows the signal sent to the PA (MON button not highlighted) or whether the feedback signal from the antenna is shown (MON button highlighted).

PS Feedback ANT Here it must be specified which antenna jack is used for the PS feedback signal. It can be **Internal** which means internal feedback (for example as built into the Anan-7000 or simply the cross-talk from the TX/RX relay), or it can be **Ext1** or **ByPass** which refers to the auxiliary antenna jacks.

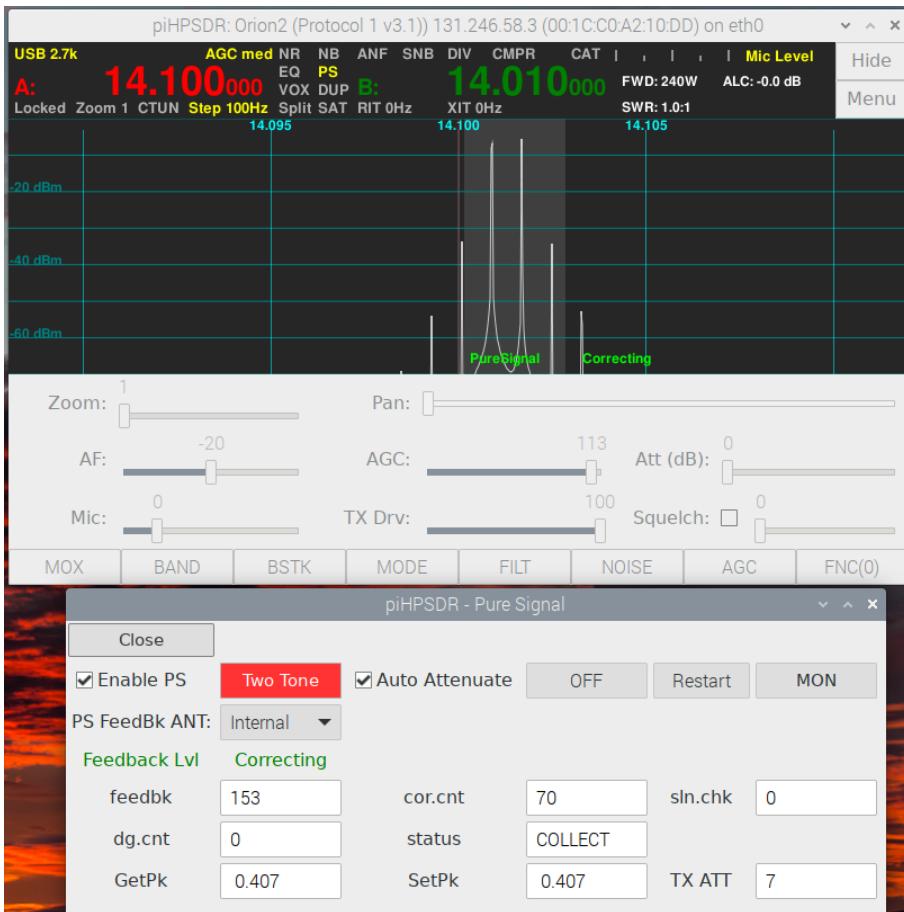


Fig. 8.6: PS: TwoTone without MON

Feedback Lvl When doing a PS calibration through a two-tone experiment, this string turns red if the feedback level is good. It turns yellow if the feedback level is slightly to weak and read if it is too weak. A blue colour indicates a too strong feedback level. The feedback level reported by the PS calibration algorithm is further reported in the „feedbk” field. The optimum value is about 154.

Correcting When doing a PS calibration through a two-tone experiment, this string is green if calibration was successful and PS correction takes place, and the string is red if no good calibration could be made.

TX ATT If **Auto Attenuate** is not enabled, this is a spin button with which

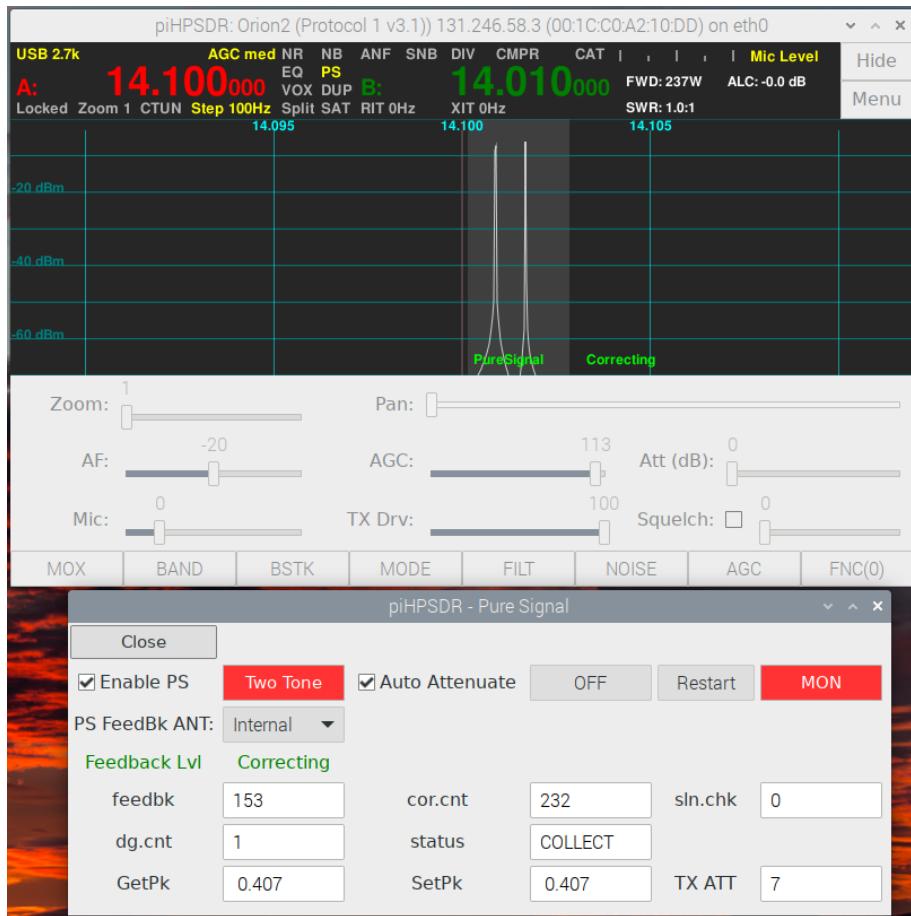


Fig. 8.7: PS: TwoTone with MON

you can manually adjust the RF attenuation. For normal HPSDR radios, this is a value between 0 and 31, other radios such as the HermesLite have an extended range from -29 to 31. If the feedback level is too strong, this value must be increased, if it is too strong, it must be decreased. It is, however, recommended to enable **Auto Attenuate**. In this case, the **TX ATT** just shows the current attenuation.

SetPk This field shows the currently assumed value of the peak value of the TX DAC feedback signal. piHPSDR chooses this automatically. It should match the value reported by the calibration algorithm in the GetPk field. The value chosen by piHPSDR can be incorrect if you use a highly experimental

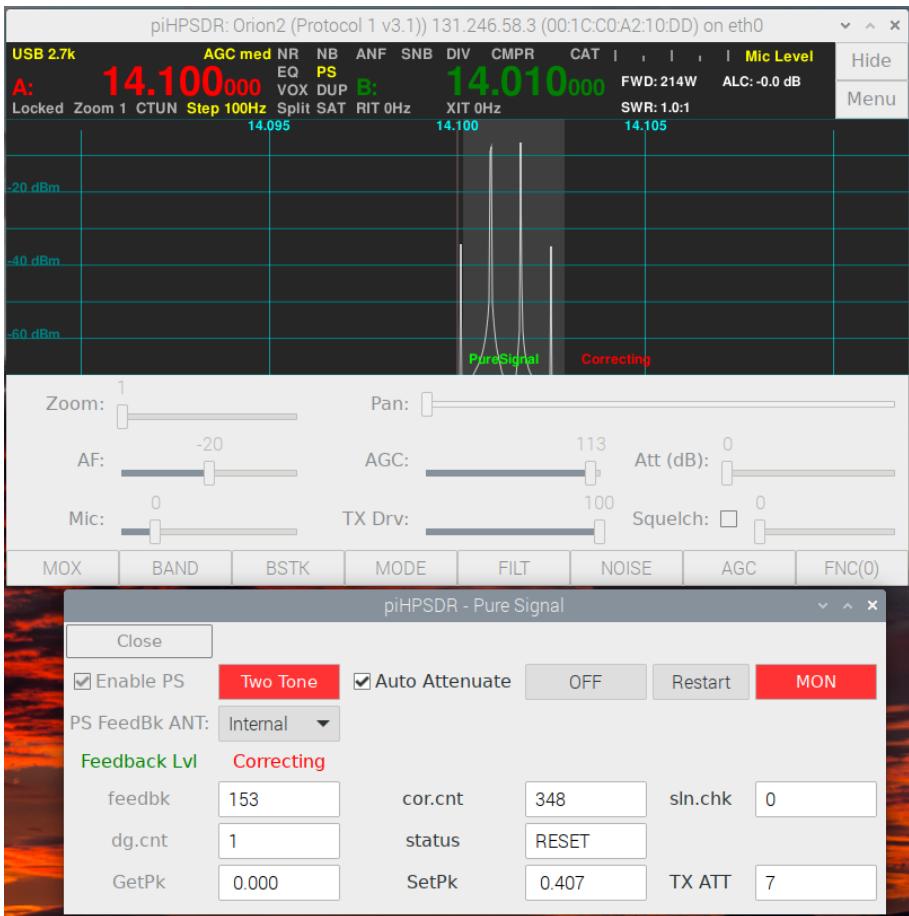


Fig. 8.8: PS: after hitting OFF

firmware on your HPSDR board with modified TX DAC filters, but this should normally not happen.

To demonstrate what happens, I show an example. Checking both **Enable PS** and **Auto Attenuation**, and hitting the **Two Tone** button, it need few seconds to stabilize and then Fig. 8.6 resulted, where the TX spectrum scope and the PS menu window have been arranged such that they do not cover each other. Although both the PS menu and the spectrum scope state that PS is working and correcting, the signal does not look as a good two-tone signal which would only have two peaks! The reason is, that the TX spectrum scope normally shows the signal that is sent to the PA, so we see a

distorted signal. However this distortion is magically exactly such that the PA makes a nice signal out of this. If one wants to see what one is actually transmitting, one must push the **MON** button such that it is highlighted. Then one sees that the feedback signal that shows what is going on at the antenna (Fig. 8.7):

Here one sees that the antenna emits a clean two-tone signal (no satellites can be seen, the IM3 value is better than 50 dBc). To demonstrate how effective the PS algorithm is, I have pushed the **OFF** button which stops the PureSignal calibration, the result is shown in Fig. 8.8. Here we see two satellites with an IM3 value of about 30 dBc, which reflects the non-linearity of the PA.

8.5 The CW Menu

The CW menu controls parameters related to CW operation. The menu is shown in Fig. 8.9.

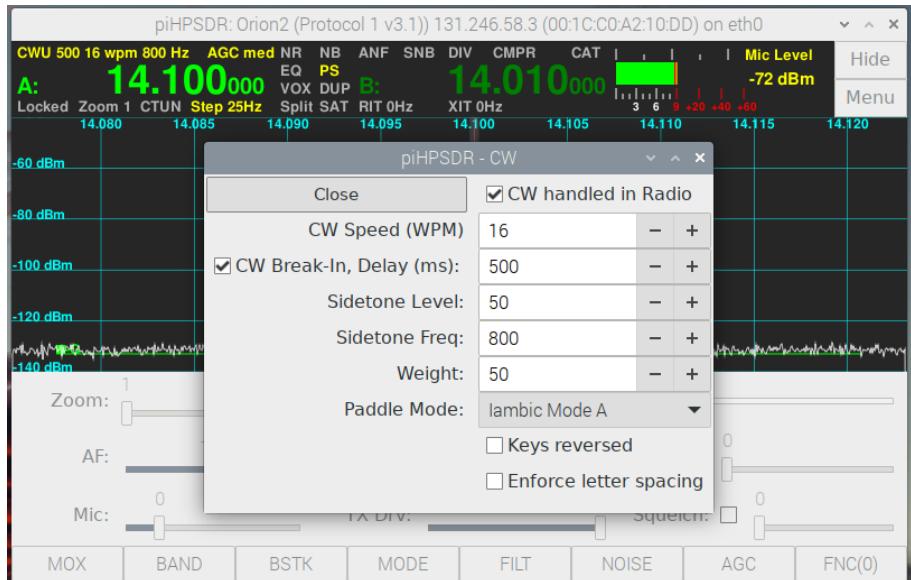


Fig. 8.9: The CW menu

Many radios have a connection for a paddle or at least for a straight key, and contain firmware to do CW. CW handling by the radio firmware is enabled by

the **CW handled in Radio** check box. If unchecked, CW (that is, generating and forming the RF pulses) is done by piHPSDR, which implies that a Morse paddle, straight key or an external keyer is connected to the host compute (see Appendix D).

CW Speed. Here the speed (in wpm) can be chosen. If CW is handled in the Radio, the value is simply sent to the radio firmware, which implements the (iambic) keyer. If CW is done within piHPSDR, this value is used by piHPSDR's built-in iambic keyer. If using a straight key, or an external keyer whose output is then treated like a straight key, the speed has no meaning.

In either case, this speed is operative when sending CW text via CAT commands (KY command), and it can also be changed by CAT (KS command).

CW Break-In This implements some sort of „CW-VOX”. In break-in mode, the radio is automatically switched to TX when a key or paddle is pressed. The delay, to be set by the spin button to the right, is the time the radio goes RX after the last Morse key closure.

Sidetone Level. This is the level of the side tone, either generated by the radio (if CW is handled there and the radio has an audio codec) or by piHPSDR (if CW is not handled in the radio). The allowed range is 0-255 (P1) or 0-127 (P1 or SoapySDR).

Sidetone Freq. This is the frequency of the side tone and the „BFO offset”. That is, if a CW signal is received exactly at the frequency one transmits on, the CW audio signal has this pitch.

Weight: If using a iambic keyer (either in the radio or the builtin keyer), this value (0-100) determines the dash/dot ratio. The normal value is 50, which means that a dash is three times longer than a dot. The dash length is proportional to this value, so it can be from zero to six times the dot length.

Paddle Mode: Here the choice is Iambic Mode A, Iambic Mode B, and Straight Key. In Straight Key mode, the key has to be connected to the dash paddle, since the built-in keyer implements a bug mode there (automatic dots from the dot paddle, straight key behaviour for the dash paddle). When using an external keyer, use StraightKey mode and connect the keyer output to the dash paddle input.

Keys reversed When checking this box, the dot and dash contacts are reversed.

Enforce letter spacing This option forces you to give „cleaner” CW when in iambic mode. If at the end of an inter-element pause no key is pressed, then there is a forced pause of two times a dot length. While this prevents you from sending too short spaces between two letters, this might also corrupt a letter you want to send. For example, when sending the letter ”X” and the dot paddle is pressed a little too late, you instead send ”TU”. This option might be good for practising, but I personally never use it.

Chapter 9

The Main Menu: menus for RX and TX

9.1 The DSP (Signal Processing) Menu

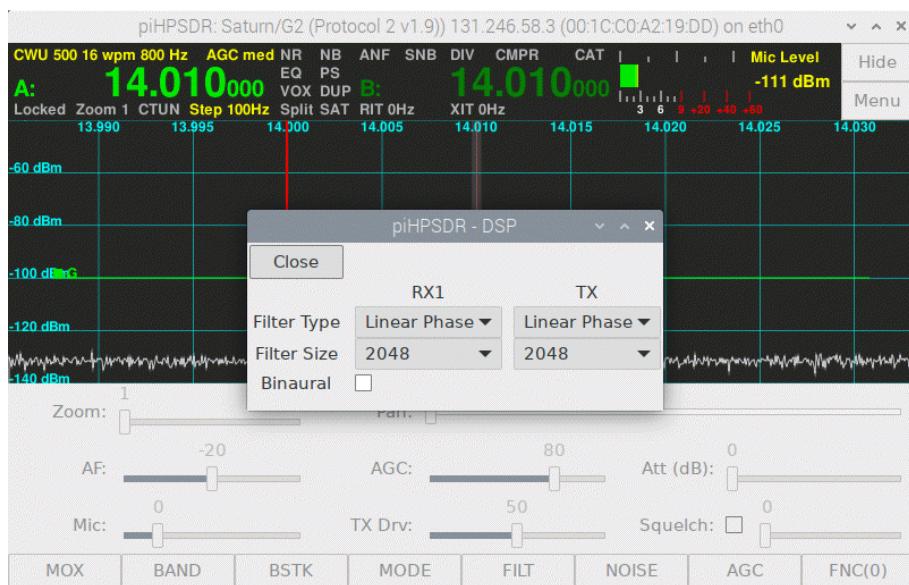


Fig. 9.1: The DSP menu.

The **DSP** menu sets parameters related to DSP (digital signal processing)

within the WDSP library. Filter characteristics can be specified separately for the RX1 (and RX2, if running two receivers) and TX (if the radio does have a transmitter) filters. In addition, enabling/disabling binaural receiver audio is done here. Most users will very rarely need to invoke this menu, which is shown in Fig. 9.1.

Filter Type. Digital filters can be designed such that a signal within the passband leaves the filter in a shape as similar as possible to what went into the filter. This requires that the phase difference between input and output signal is a linear function of the frequency. Another desirable property of a linear filter is that the time delay between a signal going into a filter and what comes out is as small as possible. Unfortunately there some sort of uncertainty relation between these two properties, so you only can trade one for the other. The options for the filter type are thus **Linear Phase** or **Low Latency**. But note that there is a lot of latency in the HPSDR data processing which you cannot avoid, so „low” latency is not really low. Therefore, the default option is **Linear Phase**, and there should be little reason to change this.

Filter Size. This is the number of „taps” of the digital filter. Increasing this size will inevitably increase the latency, but makes the filter edges steeper. The allowed values are powers of 2, and the minimum value equals the buffer size, which is hard-coded in piHPSDR to be 1024 (except for the transmitter in P2, where it is reduced to 512). The default value of 2048 should be fine in almost all cases, if you increase it, you can notice that the filter edges become little more „brick wall” like.

Binaural The RX audio signal by default is a mono signal. Although you have the RX audio signal on both ears if using a headphone, both the left and right channel are the same. Checking **Binaural** for a receiver implies that its RX audio signal is stereo (left and right channel differ). This is accomplished by copying the primary I and Q signal of the RX output to the left and right channels instead of using the I signal for both ears (which is the default). Some users report that in modes such as CW and SSB, binaural audio is more pleasant than the default. It is up to the user to try and set this parameter according to personal preferences. This checkbox is available for all receivers but not for the transmitter.

9.2 The Equalizer Menu

In the [Equalizer](#) menu, you can modify the frequency response of the RX and TX audio. You can adjust the RX equalizer to your personal preferences for listening to the RX audio. The TX equalizer affects your transmitted signal. You can, for example, provide some extra amplification to the low-frequency part of your voice. The menu is shown in Fig. 9.2.

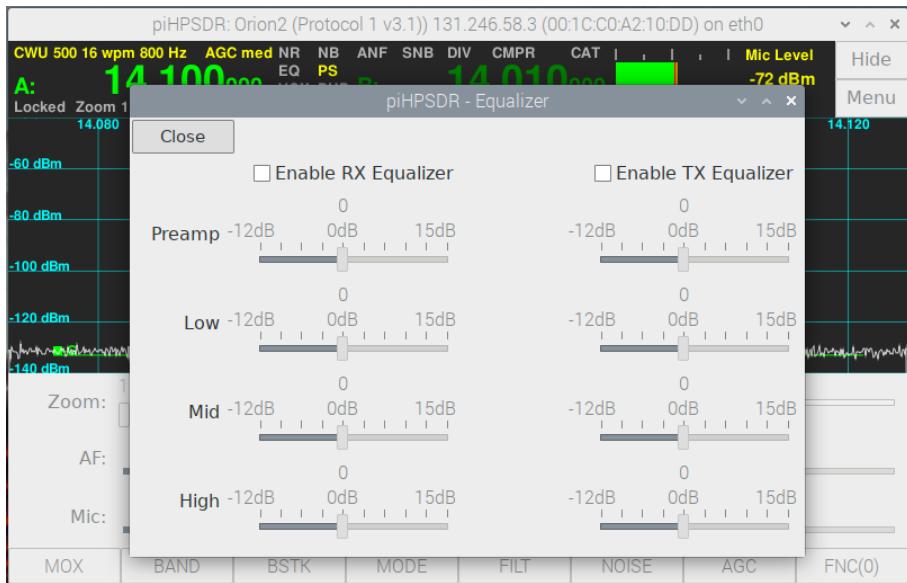


Fig. 9.2: The Equalizer menu

Using [Enable RX Equalizer](#) and [Enable TX Equalizer](#), you can individually enable/disable the RX and TX equalizer. If the RX equalizer is enabled, the EQ indicator in the VFO bar, upon receiving, turns yellow and reads [RxEQ](#). If the TX equalizer is enabled, this indicator turns yellow while transmitting and reads [TxEQ](#). So while receiving, you cannot tell, from the VFO bar, whether the TX equalizer is actually enabled or not!

For both equalizers, there are four sliders which affect the overall gain (Preamp), and the amplification in the low/mid/high frequency range. Equalizer settings are saved with the mode, so if you adjust the Equalizers when doing SSB, and then switch to DIGU, the equalizers are disabled and they resume their SSB settings upon going back to LSB/USB. This also applies to other modes such as CWU/CWL, where the TX equalizer has no meaning any-

way, and where the RX equalizer is normally not needed because CW filters usually are narrow.

For RX-only radios, the TX part of the equalizer menu is not shown.

9.3 The Ant (Antenna) Menu

The **Ant** menu, as shown in Fig. 9.3, applies to HPSDR radios. For SoapySDR radios, the layout is much simpler because there are much fewer choices possible.

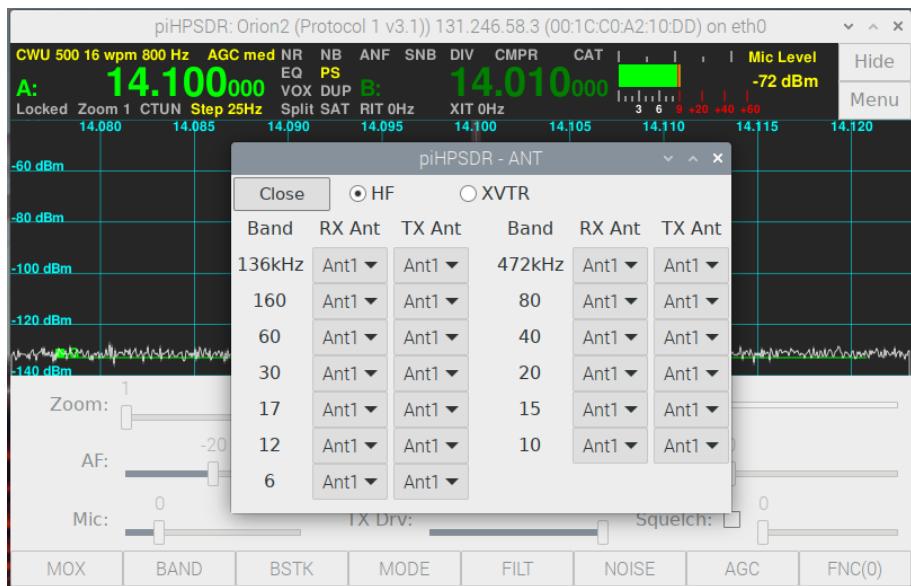


Fig. 9.3: The ANT (antenna) menu.

Standard HPSDR radios have, in most cases, three main antenna jacks denoted **Ant1**, **Ant2**, **Ant3**, which can be used both for receiving to the first ADC and transmitting. Then there are up to additional antenna jacks (**Ext1**, **Ext2**, and **Xvtr**) which can only be used for receiving and are also connected to the first ADC. If the radio has more than one ADC, the (RX only) antenna jack, usually denoted RX2, is hard-wired to the second ADC.

If the menu is opened, the **HF** button is checked, and the HF bands are displayed. If one checks the **XVTR** button, the transverter bands are shown

(this leads to an empty window if no transverter bands have yet been defined), and one can go back to the HF bands by re-checking **HF**. For each band, one can now choose one (out the three) antennas for transmitting and one (out of six) antennas for receiving. The main purpose of this is the possibility to connect an additional receive-only antenna such as a beverage antenna which often has a better signal-to-noise ration than standard antennas used for transmitting.

Transverter operation. Newer radios (Anan-7000, 8000, and Saturn/G2) have a switchable low-power TX output. This is enabled if **Xvtr** is selected as the RX antenna of RX1. The connector used for low-power TX output can also be used for receiving.

9.4 The OC (OpenCollector) Menu

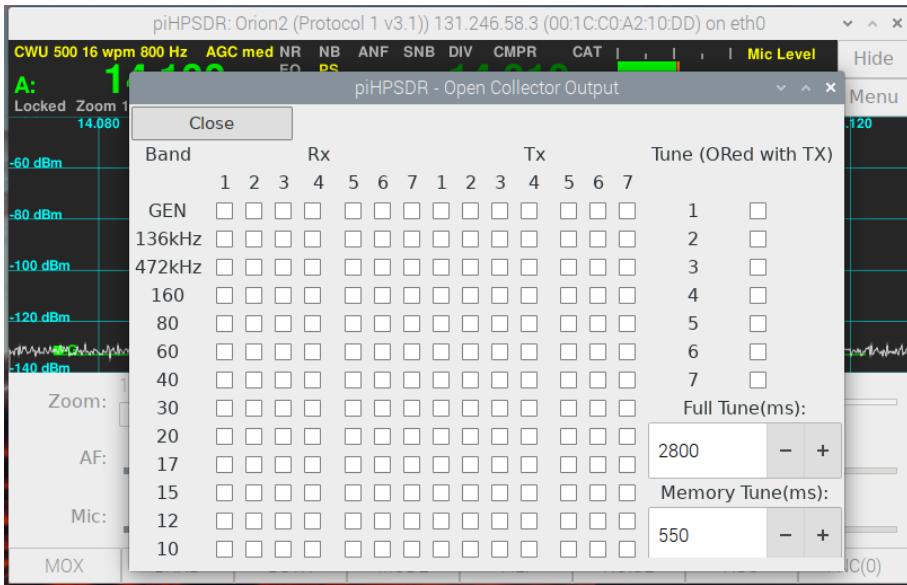


Fig. 9.4: The OC (open collector) menu.

Standard HPSDR radios have seven individually programmable outputs wired as open collector output. In the **OC** menu, you can specify, separately for each band, and separately for receive and transmit, which output should be „set”.

This can be used to switch the band filters of an external PA or of an external RX preselector, to control an automatic antenna tuner, and many more things, since it is your external hardware which in the end has to make sense of the output bit pattern.

For non-HPSDR radios, the [OC](#) menu does not appear in the main menu.

To facilitate control of an automatic tuner, there are seven [TUNE](#) bits which are ORed with the bit pattern chosen for TX on the actual band, as long as you are TUNEing with piHPSDR. Besides the [TUNE](#) action, there are the [Full TUNE](#) and [Memory Tune](#) actions which are functionally equivalent, except that the open collector tuning pattern is removed for [Full Tune](#) after the full tune delay, and for [Memory Tune](#) after the memory tune delay, which can also be specified in this menu. This can be used to send short tuning pulsed of varying length to the external automatic tuner at the beginning of the tuning.

Note that if you have chosen the N2ADR filter board (see the [Radio](#) menu, this is usually the case if you are working with a HermesLite-II radio), then the necessary [OC](#) settings for this filter board are enforced upon program start. The same applies if you enable the N2ADR filter board in the [Radio](#) menu.

Chapter 10

The Main Menu: controlling piHPSDR

In this chapter, the customization of the toolbar (at the bottom of the piHPSDR window), as well as how to configure GPIO and MIDI controllers, is described. Furthermore, in this chapter we discuss the RIGCTL menu which allows controlling piHPSDR by some external program such as a logbook or contest program, via standardized CAT commands that can be sent to piHPSDR either over a serial line or via TCP.

Note for Controller1 owners: The eight switches (push-buttons) of the controller, that are positioned below the screen, are bound to the eight toolbar buttons on the screen. Therefore, there is no "Switches" menu for this controller, and the switches are implicitly configured via the Toolbar menu.

10.1 The Toolbar Menu

We start with the "Toolbar" menu, that can be found at the top of the rightmost column in the main menu. The toolbar consists of eight buttons that can be assigned to a set of eight functions. There are six such sets, and pressing the rightmost button of the toolbar cycles through these six sets. The text on the rightmost toolbar button, **FNC(0)**, indicates which layer is currently active.

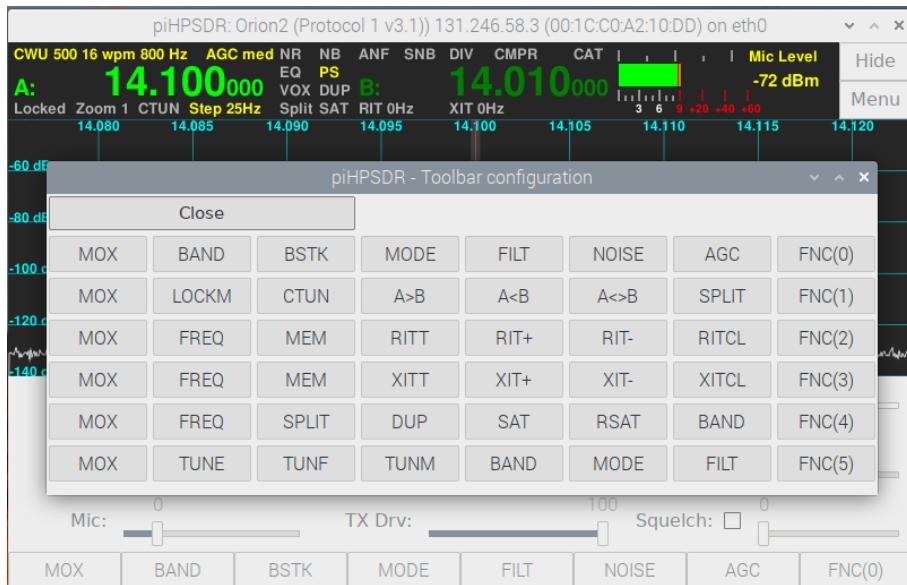


Fig. 10.1: The Toolbar menu, just opened.



Fig. 10.2: Toolbar menu. Changing second button in F1 layer.

If the **Toolbar** menu is opened, it looks like Fig. 10.1. The rows correspond to the six different layers, and the rightmost button in each row indicates to

which layer this row belongs. If one now clicks (just an example) the CTUN button (third button in the second row) an „action dialog” pops up that looks as in Fig. 10.2.



Fig. 10.3: Just selected Band20.

The current action selected (CTUN) is high-lighted. Lists of possible actions can be rather long, so it might be necessary that you have to scroll up or down in such an action dialog until you have found what you were looking for. Now (again just an example) the button Band 20 has been clicked in the action dialog, such that it gets high-lighted (Fig. 10.3).

If one now closes the action dialog by clicking the OK button, the action select menu closes and one sees that in the toolbar menu now reappearing (Fig. 10.4), the third button in the second line of the toolbar menu has changed, it now gives the short text (20) of the action, which will switch the active receiver to the 20m band (see the explanation of all the actions in Appendix A).

You also see that the toolbar itself has not changed, because we have just changed the FNC(1) set, while currently the FNC(0) set is active. If one now, however, clicks the rightmost toolbar button with the text FNC(0) one advances to the next set and the toolbar labels are updated (Fig. 10.5).

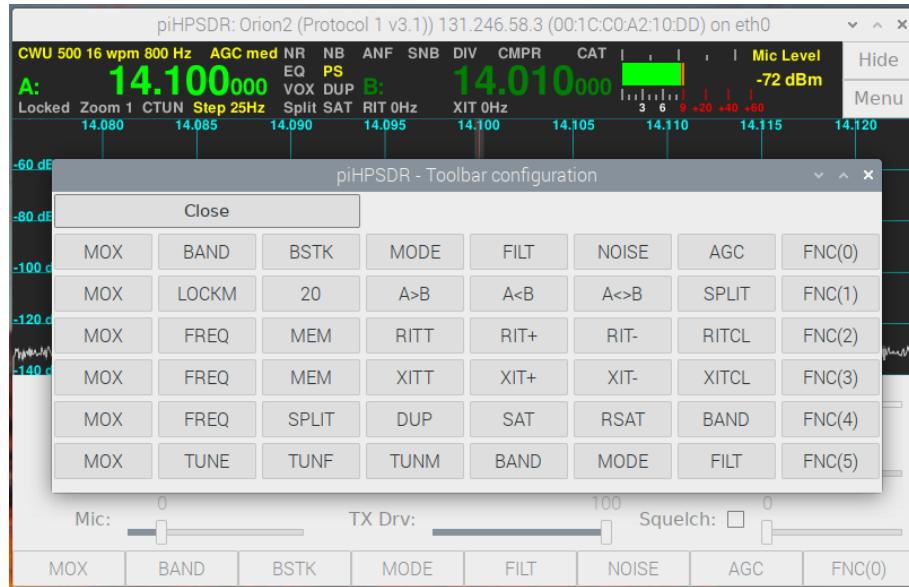


Fig. 10.4: Toolbar assignment accomplished.

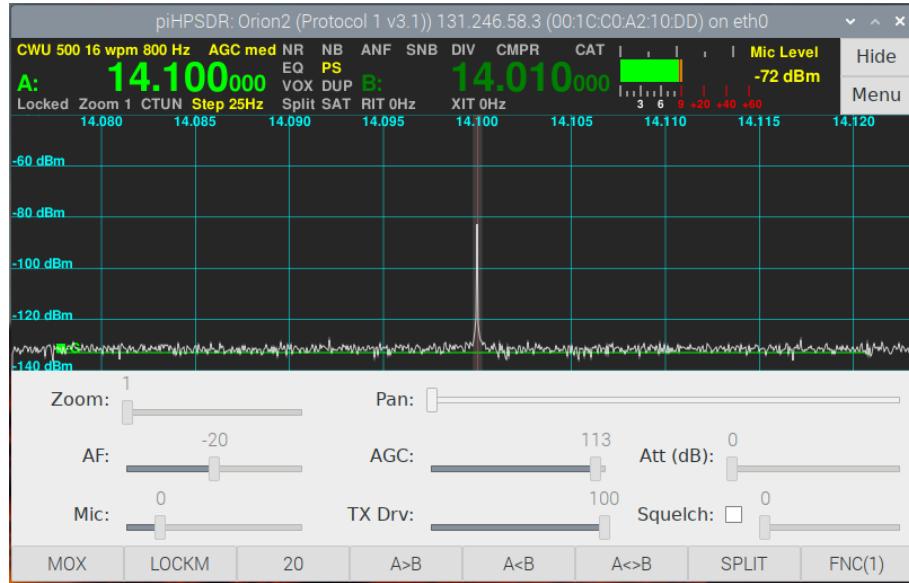


Fig. 10.5: The new F1 layer is operative.

It can be seen that the text of the first seven toolbar buttons has changed to reflect the functions of the F1 set, and also the rightmost button (which

is always mapped to **Function**) has changed to FNC(1) in order to indicate the F1 layer is now active. For mouse users (only), a secondary click on the rightmost toolbar button cycles through the layers in reverse order.

Note that it is not possible to change the assignment of the rightmost button of the toolbar, it will always be assigned to **Function**, since if one has no access to this function, one is stuck and can no longer cycle through the function layers.

10.2 The RigCtl (Rig control, or CAT) Menu

piHPSDR has a built-in rig control or CAT (computer aided transceiver) facility. This can be used to control piHPSDR from other programs or even other computers. You can have up to three simultaneous CAT connections via TCP, and two additional CAT connections via serial lines (provided the host computer running piHPSDR has those serial interfaces available). It is also possible to use FIFOs (also known as named pipes) instead of real serial devices, which offers a hardware-free connection of, say, a logbook program running on the same computer to piHPSDR, even if the logbook program cannot use TCP. On my Macintosh computer for example, using a named pipe and the Kenwood TS-2000 radio model, I can connect the MacLogger DX logbook program with piHPSDR. piHPSDR fully supports (thanks Rick!) the ANDROMEDA controller (see github.com/laurencebarker/Andromeda_front_panel). This controller (or rather the Arduino inside) is connected to the host computer via USB and appears as a USB-to-serial device on the host computer. The CAT command set is explained in Appendix C. In most cases, using the Kenwood TS-2000 as the radio model would do it, if the digimode or laptop program uses hamlib to interface with radios, either choose TS-2000 or (preferably) the „OpenHPSDR PiHPSDR” radio model because this uses time- out values adapted to piHPSDR. The **RigCtl** menu is shown in Fig. 10.6.

RigCtl TCP Port. This sets the TCP port number for CAT connection to TCP. The default value (19090) is rather standard, using another one is only necessary if you are running more than one SDR program on the host computer at the same time. This port number must match the port number used in the (digimode or logbook) program that wants to connect. This value

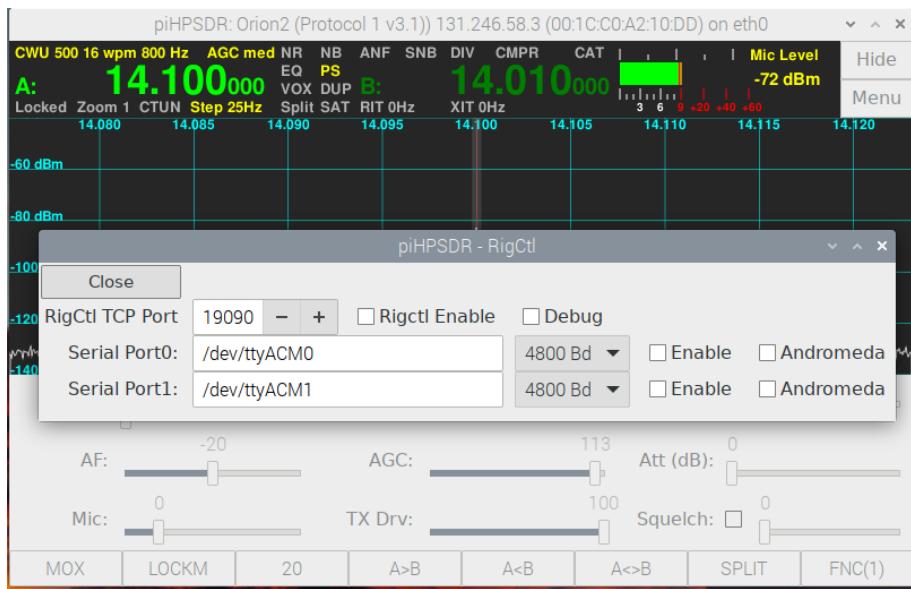


Fig. 10.6: The RigCtl (Rig Control) menu.

has no meaning for serial (or named pipe) connections.

RigCtl Enable. This checkbox enables or disables the piHPSDR CAT subsystem. Disabling it automatically also disables all serial ports.

Debug. If enabled, the piHPSDR CAT subsystem sends lots of debug messages to the standard output. If piHPSDR is run from within a terminal window, these messages appear in the terminal window. If it is run from double-clicking a desktop icon, these messages can be found in a log file within the piHSPDR working directory (this is the directory where the preferences are stored). This checkbox is only of interest for software developers to analyze programming or connection errors, and should not be checked for normal use.

Serial Port. In this text field, enter the device name of the serial port or the named pipe to use. Which names to use is highly operating system dependent. On a RaspPi, built-in serial ports have names such as `/dev/ttyACM0`. USB-to-serial adapters (which are nowadays the standard way to add serial ports to a computer) have names such as `/dev/ttyUSB0` (on RaspPi) or `/dev/tty.usbserial-....` (on MacOS). piHPSDR does not try to „detect” serial ports, you must know the proper name (e.g. by looking at the contents

of the `/dev` directory). Named pipes can be created everywhere in the file system hierarchy using the command `„mkdir -p <some_arbitrary_name>”`.

To the right of the serial port text field, there is a pop-down menu for choosing the baud rate. Only 4800, 9600, 19200, and 38400 baud are offered, but this should cover most cases. Then, further to the right, is the **Enable** button which enables a CAT connection on that serial line. Finally, there is the **Andromeda** check box which should be checked if that serial port is an ANDROMEDA controller.

If you enable **Andromeda**, the baud rate is automatically set to 9600 baud, and you cannot change this until you disable **Andromeda**. If you change the baud rate for a serial port that is already in use (enabled), the serial connection is closed and re-opened (disabled and enabled). This also applies if you enable **Andromeda** for a running serial connection with a baud rate different from 9600 baud.

The only effect of enabling **Andromeda**, besides fixing the baud rate to 9600 baud, is that the ANDROMEDA software version is requested (and put into the piHPSDR log file) once, and that status information is sent over the serial line such that the LEDs of the ANDROMEDA controller always reflect the current status of piHPSDR.

10.3 The MIDI Menu

MIDI (musical instrument digital interface) is a protocol designed for the communication of musical instruments, such as keyboards and tone generators. Because of its widespread use, support in all major operating systems, and its inherent ability to deliver real-time „events”, it is also an ideal protocol to control an SDR program. The only MIDI messages piHPSDR processes are NoteOn, NoteOff, and ControllerChange messages. Typically, a NoteOn message is sent if a key on a keyboard is hit. The first parameter of a NoteOn/Off message is the key it refers to. Although keyboards rarely have more than 88 keys, the allowed range for the key is 0-127. There is an additional parameter („velocity”, range 0-127) that tells how fast the key has been hit (this makes the difference between a soft and loud tone on the piano). NoteOn/Off messages are ideally suited for indicating button press and release events. In principle, piHPSDR does not need the velocity. How-

ever, several MIDI consoles, in a sloppy interpretation of the MIDI standard, send a NoteOn value with zero velocity if a button is released. Therefore, piHPSDR interprets a NoteOn message with a velocity different from zero as a „button press”, and interprets both a NoteOn messages with zero velocity and a NoteOff message as a „button release”.

The original MIDI standard was built upon a daisy-chained serial connection. Each device echos all messages it receives at its input side to the output. Therefore, a key-down message that originated on one keyboard is sent to all tone generators. Likewise, a tone generator receiving a key-down message cannot tell from which device the message was originally sent. To resolve possible conflicts, each MIDI message contains a channel number. There is some confusion about channel numbers: the MIDI says channel numbers go from 1 to 16. Because this is encoded in a 4-bit data field whose numerical value goes from 0 to 15, computer users normally refer to channel numbers from 0 to 15, and this convention is also followed by piHPDSR. Different channel numbers can be used to discriminate MIDI events from different sources (devices). An example of such a setup is if you connect a DJ console as well as a microcontroller to which a CW key is attached.

The second type of messages are ControllerChange messages. Typically, they report the value of an expression pedal, if it has changed. A ControllerChange message also has two parameters, namely the number of the controller (0-127) and the value (0-127). A ControllerChange message could be sent if the MIDI controller has a potentiometer, to report its position, encoded from 0 (full counter clock wise) to 127 (full clock wise). Such a message could then be used to control in piHPSDR, say, the AF volume or the TX drive. Such a potentiometer is not suited to become a „VFO knob”. Here one uses rotary encoders, a piece of hardware which you can turn (as long as you like) in either direction, and which reports (by hardware pulses) how fast and in which direction it is turned. Unfortunately, there is no standard how to encode these increments into MIDI ControllerChange messages. My Behringer CMD-PL1 console, for examples, uses ControllerChange numbers 65, 66, 67, ... for clockwise rotations and 63, 62, 61, ... for counter clock wise rotations, and further encodes the speed of rotation in how far the value differs from 64. Other brands interpret the 7-bit number as a signed quantity, such that values 0, 1, 2, ... correspond to clockwise, and numbers 127, 126, 125, ... to counter-clockwise rotations. It is clear that the piHPSDR MIDI configuration menu must be flexible enough to handle all these situations.

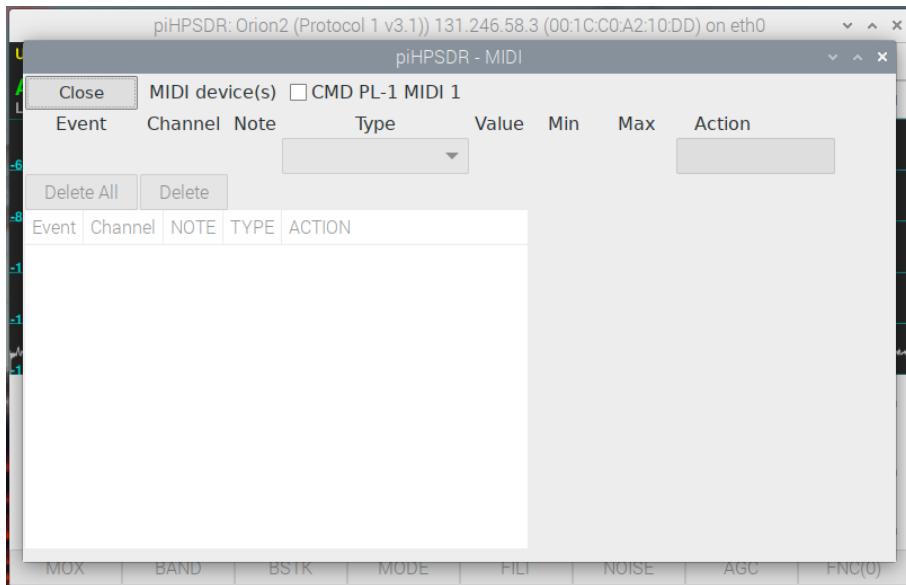


Fig. 10.7: The (virgin) MIDI menu.

From this it is clear that within piHPSDR, we have to distinguish three types of sources of MIDI commands:

KEY. This type is generated by NoteOn/Off MIDI events. piHPSDR functions („Actions“) that can be assigned to this type are typically those which can also be assigned to toolbar buttons.

KNOB/SLIDER. This type is generated by ControllerChange MIDI events. It can be used for piHPSDR functions that are usually controlled by a slider, such as adjusting the AF volume, setting the TX drive, setting the AGC gain, etc.

WHEEL. This type is also generated by ControllerChange MIDI events. This means that if such an event is configured, the user has to decide whether this event originated from a potentiometer or from a rotary encoder. The prototypical piHPSDR function controlled by a WHEEL is a VFO knob, which you can spin forever. However, you can also assign it to the AF volume control. piHPSDR takes care that the AF volume stops at the extreme cases (-40 and 0 dB for AF volume) even if you continue spinning.

The first kind of MIDI device which is often used for SDRs are the so-called MIDI DJ consoles. If you search the internet for „Hercules DJ controller“ or

„Behringer DJ controller” you will find lots of examples. For a very decent price, you can obtain a device which features lots of controls which you can conveniently use as VFO knobs, smaller knobs for controlling the AF volume etc., and push buttons to be used, for example, instead of toolbar buttons. The second kind of MIDI devices are small MIDI-capable microcontrollers, starting with Teensy and Arduino devices which have a 32U4 microcontroller which has built-in MIDI capability. With such a microcontroller, you can build your own ”DJ controller”. Let the 32U4 control lots of push buttons and rotary encoders, and send the MIDI messages via USB to the computer. Using such a micro controller is also the most convenient and general way to connect a Morse key or paddle to the host computer running piHPSDR (see Appendix D, you can but need not use the same micro controller for taking care of the buttons/encoders and the CW key).

If you open the [MIDI](#) menu for the first time, it presents itself as shown in Fig. 10.7.

At the top of the menu, besides the close button, you find a list of MIDI devices in the system, each of which with a check box. In Fig. 10.7, there is only one such device with name „CMD PL-1 MIDI 1”. You will find all MIDI devices attached to the host computer here. With the check box(es), enable those you want to use. This way it is possible to run two instances of piHPSDR on the same computer, both connected to different radios, and control them independently with two different MIDI consoles. The first thing you have to do is to check all MIDI devices you want to use.

It is important to note that as long as the MIDI menu is open, piHPSDR cannot be operated through MIDI. Instead all MIDI messages are captured by the menu and displayed. This is used to implement a „self-learning” configuration. To explain this in detail, we demonstrate how to configure MIDI such that the big wheel on the controller is used as a VFO knob. After I have activated the checkbox of our MIDI device, I just turned the big wheel of the MIDI console a bit. This resulted in a menu window that is shown in Fig. 10.8. In the third line, below **Event**, you see **CTRL** which indicates that the last MIDI messages received was a ControllerChange message. In the case of a NoteOn/Off messages, this field would read **NOTE**. You should rotate the knob in both directions to see what happens: below **Value** the ControllerChange value of the latest message is recorded, while the **Min** and **Max** fields report the smallest and largest value seen (all in the range 0-127).

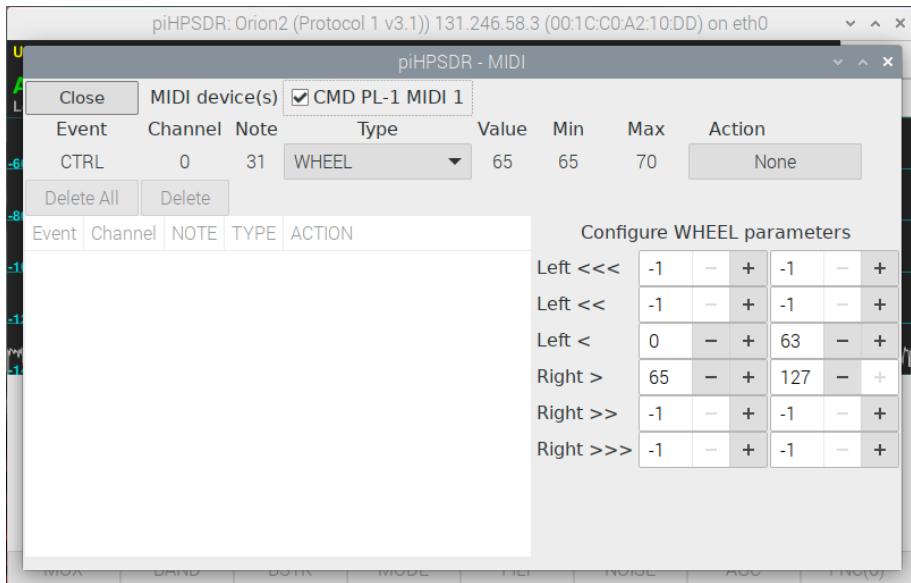


Fig. 10.8: The MIDI menu, VFO wheel turned.

By playing around, it became quickly clear that this is a rotary encoder, sending messages in the range 65, 66, 67, ... for clockwise rotation and values 63, 62, 61, ... for counter clockwise rotation. If it were a potentiometer, you would see values between 0 and 127 depending on the position of the potentiometer.

Below **Channel**, you see the value zero which indicates that the channel number of that MIDI message was 1 (see above on the different channel numberings). Below **Type**, you see a pop-down menu, here you can choose between **WHEEL** and **Knob/Slider**. In the example shown, it must be a **WHEEL** since this is a rotary encoder. Because there is no standard how the values map to increments, a separate panel **Configure WHEEL parameters** pops up when a wheel is to be configured. Here one has to define ranges of values that apply for very fast left turns, fast left turns, normal left turns, normal right turns, fast right turns, and very fast right turns. Specifying an interval from -1 to -1 means that this case will never be realized. In the example shown (Fig. 10.8), we have chosen to map all values from 0-63 to a left turn, and all values from 65-127 to a right turn.

Now we have to specify which piHPSDR function should be triggered when moving the wheel. The current action is shown in a button below the string



Fig. 10.9: The MIDI menu, selecting VFO action

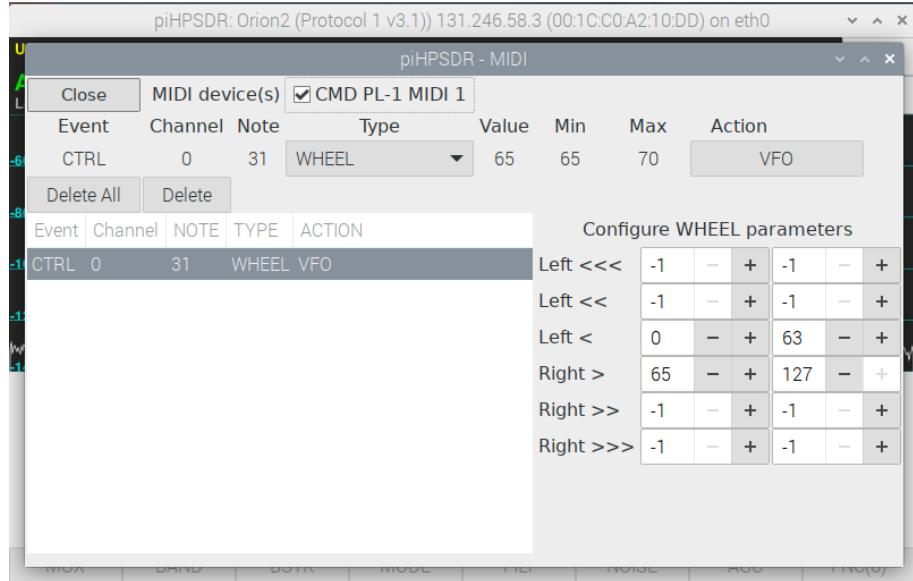


Fig. 10.10: The MIDI menu, VFO action selected

Action and defaults to **NONE**. By clicking this button, a dialog to choose the function opens as described for the **Toolbar** menu (chapter 10.1), with

the current choice (**NONE**) highlighted. The only difference is that now only functions are listed that can be assigned to encoders. Because we want to assign the wheel to the **VFO** function, we click the **VFO** button, which then becomes highlighted (Fig. 10.9).

Then one has to click the OK button to make the choice, and one returns to the MIDI menu (see Fig. 10.10).

One sees that the choice has entered the MIDI configuration, as documented by the list in the bottom right part of the menu. At this stage, we can continue assigning more encoders, potentiometers, or buttons. If we close the menu at this point, then the big wheel on the MIDI console can immediately be used to change the VFO frequency.

10.4 The Encoders Menu

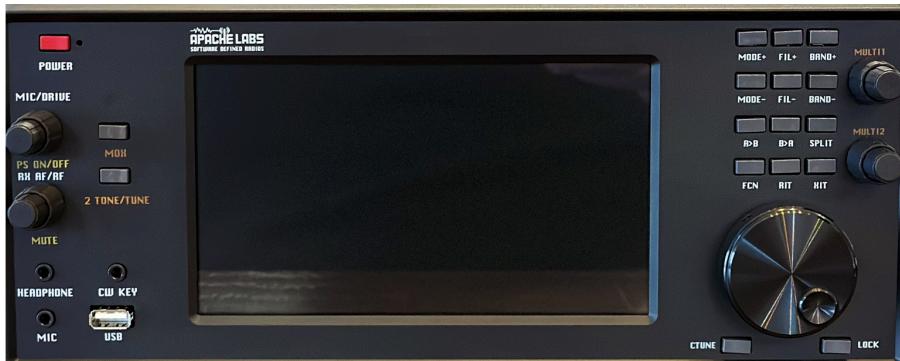


Fig. 10.11: A picture of the G2 frontpanel (image courtesy of Apache Labs).

The encoders menu can be used to assign functions to the encoders of a piHPSDR Controller1, Controller2 or the G2 front panel controller. If **No Controller** has been chosen in the initial discovery screen (Fig. 2.2), this menu is not available. Note that the „large knob” of these controllers cannot be assigned a function, it is hard-wired to the **VFO** function.

While the function of this menu is the same in all three cases (Controller1, Controller2, G2 frontpanel), the layout is different, because the position of the menu buttons are meant to indicate which encoder is referred to.

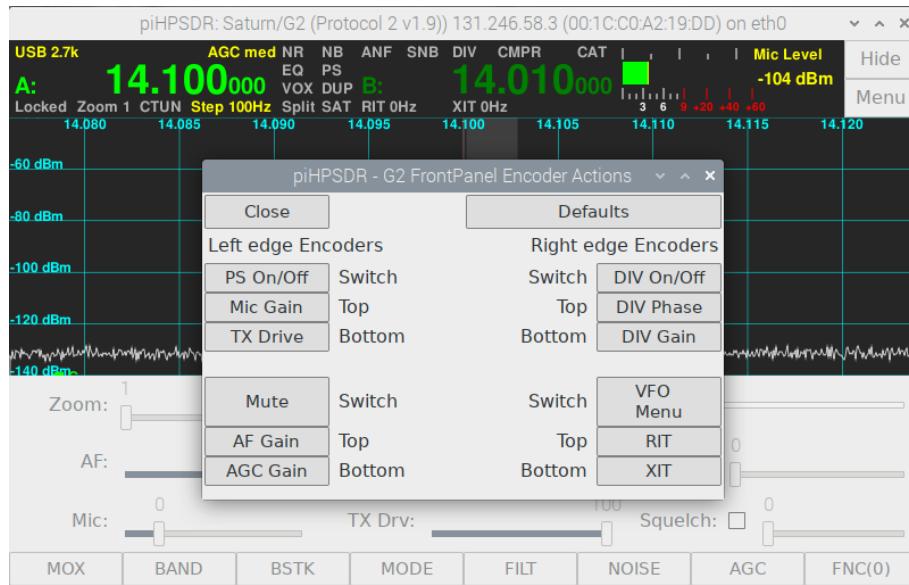


Fig. 10.12: The Encoder menu for the G2 frontpanel controller

The G2 frontpanel (Fig. 10.11) has, in addition to the large VFO knob at the bottom right, four small knobs, two (one above the other) at the left edge and two at the right edge. All four knobs are double encoders with a switch. This means that there is an inner/upper knob („top encoder“) and an outer/lower knob („bottom encoder“), which are two separate encoders. Furthermore, you can push the knob and have an additional push button function („Switch“). If you open the [Encoders](#) menu for a G2 frontpanel controller, the menu opens as shown in Fig. 10.12. You see four groups with three buttons (Switch, Top, Bottom) each, and it should be clear which group belongs to which encoder. With the buttons, you can choose which function to assign, in the same way as described for the [Toolbar](#) (chapter 10.1) and [MIDI](#) (chapter 10.3) menus. With the **Default** button, you can re-assign the default values (those shown in Fig. 10.12) to the encoder functions, which match the silk printing on the enclosure (see Fig. 10.11).

The Controller2 (see Fig. 10.13) has (besides the VFO knob at the bottom right) three knobs (arranged horizontally) at the bottom left, and a fourth knob at the top right, all of which are double encoders with a switch. So if you run piHPSDR with a Controller2, then the menu looks different (Fig. 10.14). The menu shows for groups with three buttons each, and it should



Fig. 10.13: A picture of the Controller2 (image by courtesy of Apache Labs).

be clear which group belongs to which button. The **Default** button again re-installs the default functions (those shown in Fig. 10.14).

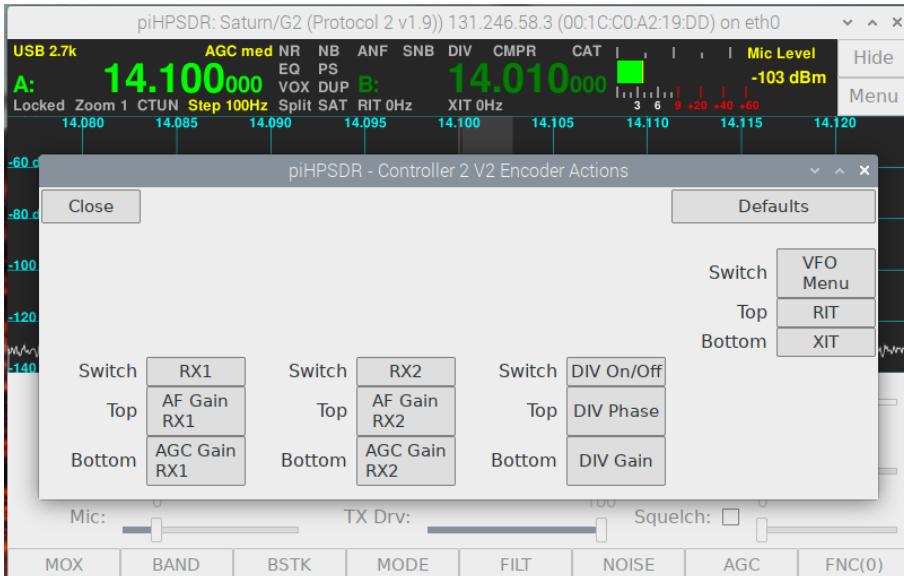


Fig. 10.14: The Encoder menu for Controller2

Finally, the Controller1 (see Fig. 10.15) has (besides the big VFO knob at the bottom right) three knobs (denoted E1, E2, E3), rranged vertically at the



Fig. 10.15: A picture of the Controller1 (image by courtesy of Apache Labs).

right edge. These knobs are single encoders with a switch (you can turn the knob, but you can also push it). Therefore, the [Encoders](#) menu in this case (Fig. 10.16) shows three groups with two buttons each. The [Default](#) button again re-installs the default values shown in Fig. 10.16, these are chosen just for convenience since there are no default function printed on the enclosure.

10.5 The Switches Menu

The encoders menu can be used to assign functions to the push buttons of a piHPSDR Controller2 or the G2 front panel controller. If [No Controller](#) or [Controller1](#) has been chosen in the initial discovery screen (Fig. 2.2), this menu is not available. This menu is not available for the Controller1 because the eight push buttons of this controller are hard-wired to the toolbar buttons and their functions as thus assigned via the [Toolbar](#) menu (see Chapter 10.1).

On the G2 frontpanel (see Fig. 10.11), there are a lot of push buttons: at the left edge, to the right of the left edge encoders, are two buttons, at the bottom right, below the VFO knob, there are two more buttons, and at

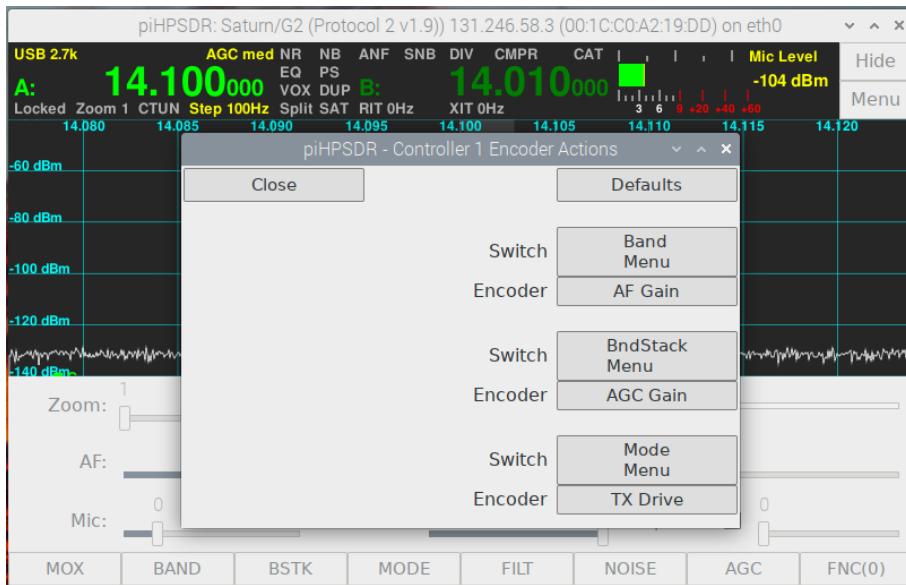


Fig. 10.16: The Encoder menu for Controller1

the top right, to the right of the left edge encoders, is an array of 12 (4x3) buttons. The layout of the **Switches** menu for the G2 frontpanel (Fig. 10.17) features (besides the Close button) sixteen buttons, and their arrangement is such that you can easily guess which menu button refers to which button on your G2 frontpanel. Assigning functions to these buttons is done exactly as described for the **Toolbar** menu (chapter 10.1). With **Default** one re-installs the default values shown in Fig. 10.17 which match the functions printed on the enclosure.

The Controller2 (see Fig. 10.13 in the last section) also has 16 push buttons, but they are arranged differently: at the bottom edge there are 7 buttons arranged horizontally. At the right edge, there is an array of 8 buttons (4x2) with one additional button above the right column that is to the right of the fourth encoder, just below the power button. Looking at the **Switches** menu for the Controller2 (Fig. 10.18), you see representations of these 16 buttons in an arrangement for which it is self evident which menu button refers to which Controller2 push button. Assigning functions to these buttons is done exactly as described for the **Toolbar** menu (chapter 10.1). With **Default** one re-installs the default values shown in Fig. 10.18 which match the functions printed on the enclosure.

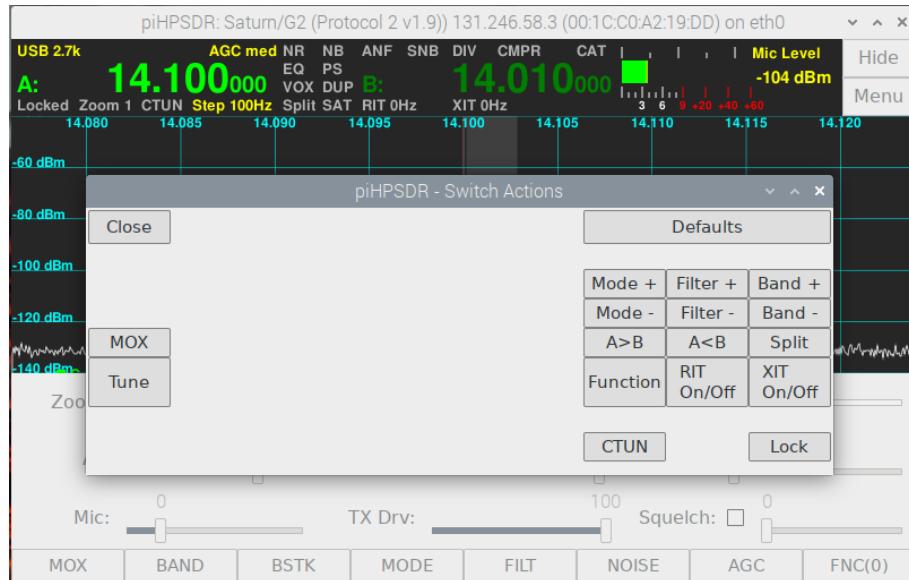


Fig. 10.17: The Switches menu for the G2 frontpanel controller.

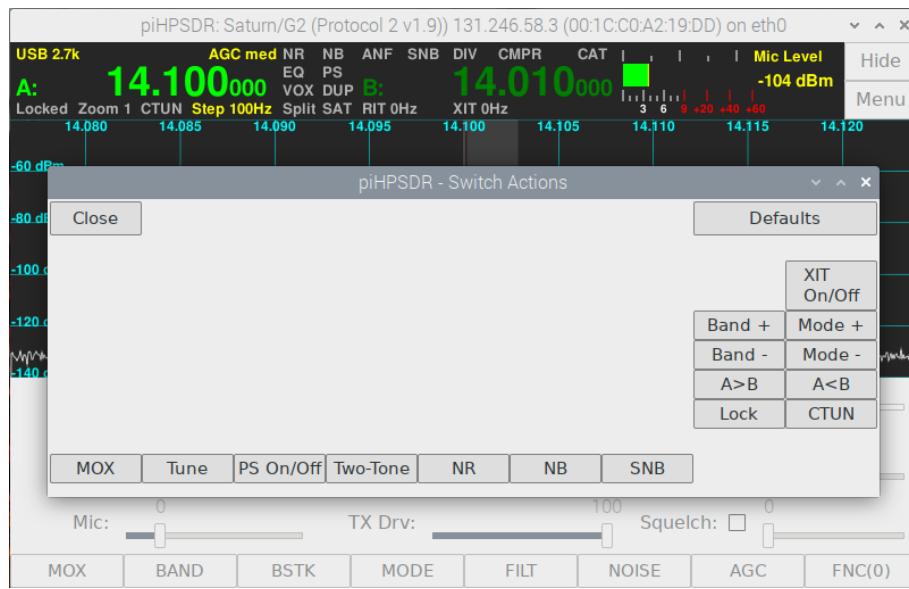


Fig. 10.18: The Switches menu for Controller2.

Appendix A

List of piHPSDR „Actions”

In this chapter, we give a list of „actions” implemented in the piHPSDR program. These actions can be assigned to toolbar buttons on the screen, or pushbuttons/encoders of a GPIO-connected or MIDI controller. Not all actions can be assigned to all control elements. Changing the AF volume, for example, can only be assigned to a knob which you can turn, while switching RIT on/off can only be assigned to a button that you can push. For each action in the following table, there is a long and a short string assigned. The long string will be used when there is enough space, while the short string is used for small buttons and to store actions in preference files (therefore the short strings never contain a blank character or a line break). Then, for each action we give the type of control element allowed for this action as a combination of the letters B, P, E, which stand for

- B ”Button”: A button in the toolbar, or a push-button or switch on a GPIO or MIDI connected console
- P ”Potentiometer”: A potentiometer or a slider on a MIDI connected console
- E ”Encoder”: A rotary encoder on a GPIO or MIDI connected console

The main difference between a ”potentiometer” and an ”encoder” is, that the former has a min and max position, while an encoder can be turned in either direction without stopping. This means that a potentiometer reports a value between min and max, while an encoder reports an increment,

that is, whether it has been turned clock wise or counter clock wise. The existing GPIO consoles do not have potentiometers (most likely because of the lack of analog inputs), but many MIDI consoles do have, and Arduino-based MIDI controllers might have it because there analog inputs to read out potentiometers are available.

To give an example, controlling the TX drive can be done both with a slider and with an encoder. While for a slider/potentiometer, the values from min to max are simply mapped to the TX drive values from 0 to 100, the signals from an encoder will just increase or decrease the value until one of a limits has been reached.

In the following, the actions are alphabetically sorted by their long name, with the "empty" action listed first.

NONE	NONE	BPE
This is an action which does nothing. It can be assigned to buttons or encoders that are often accidentally operated. Some MIDI consoles, for example, report a button press event if the VFO knob is touched, and this we want to ignore.		

A<>B	A<>B	B
Swap VFOs A and B. This will not only swap the frequencies, but also all other settings associated with that VFO, such as mode, filter, CTUN, and RIT settings.		

A<B	A<B	B
Copy VFO B to VFO A.		

A>B	A>B	B
Copy VFO A to VFO B.		

AF Gain	AFGAIN	PE
Change the AF gain (headphone volume) of the active receiver.		

AF Gain RX1	AFGAIN1	PE
Change the AF gain (headphone volume) of the RX1 receiver.		

AF Gain RX2	AFGAIN2	PE
Change the AF gain (headphone volume) of the RX2 receiver.		

AGC Menu	AGC	B
Opens the AGC menu.		

ANF	ANF	B
Toggles the state (on/off) of the automatic notch filter for the active receiver.		

Atten	ATTEN	PE
Changes the value (0-31 dB) of the step attenuator of the active receiver. This function is only available for radios that have such an attenuator.		

Band 10	10	B
Change band of the active receiver to the 10m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 12	12	B
Change band of the active receiver to the 12m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 1240	1240	B
Change band of the active receiver to the 1240 MHz (23 cm) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 144	144	B
Change band of the active receiver to the 144 MHz (2m) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 15	15	B
Change band of the active receiver to the 15m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 160	160	B
Change band of the active receiver to the 160m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 17	17	B
Change band of the active receiver to the 15m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 20	20	B
Change band of the active receiver to the 15m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 220	220	B
Change band of the active receiver to the 220 MHz (1.25 m) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 2300	2300	B
Change band of the active receiver to the 2300MHz (13 cm) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 30	30	B
Change band of the active receiver to the 30m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 3400	3400	B
Change band of the active receiver to the 3400 Mhz (9 cm) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 40	40	B
Change band of the active receiver to the 40m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 430	430	B
Change band of the active receiver to the 430 MHz (70 cm) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 6	6	B
Change band of the active receiver to the 6m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 60	60	B
Change band of the active receiver to the 60m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 70	70	B
Change band of the active receiver to the 70 MHz (4m) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 80	80	B
Change band of the active receiver to the 80m band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band 902	902	B
Change band of the active receiver to the 902 MHz (33 cm) band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band AIR	AIR	B
Change band of the active receiver to the 108 MHz band, used for aircraft communication. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band GEN	GEN	B
Change band of the active receiver to the current bandstack entry of the "general" band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

Band -	BND-	B
Change band of the active receiver to the next lower band in the list of bands. If already at the lowest band, switch to the highest band (including transverter bands which have been defined) whose frequency is with the radio's frequency range.		

Band +	BND+	B
Change band of the active receiver to the next higher band in the list of bands (including transverter bands that have been defined). If already at the highest band, switch to the lowest band whose frequency is with the radio's frequency range.		

Band WWV	WWV	B
Change band of the active receiver to the current bandstack entry of the WWV band. If already on that band, move to the next bandstack entry. This action is a no-op if the frequency of the band falls outside the frequency range of the radio.		

BndStack -	BSTK-	B
Cycle backward through the bandstack entries of the active receiver.		

BndStack +	BSTK+	B
Cycle forward through the bandstack entries of the active receiver.		

Band Menu	BAND	B
Open the BAND menu.		

BndStack MENU	BSTK	B
Open the BANDSTACK menu.		

Cmpr On/Off	COMP	B
Toggle the state (on/off) of the compressor used in the TX audio input.		

Cmpr Level	COMPVAL	PE
Change the value of the compressor (0-20 dB) used in the TX audio input. The compressor is automaticall switched on (off) if the "new" value of the compressor is larger then (equal to) zero.		

CTUN	CTUN	B
Toggle the state (on/off) of the CTUN state of the active receiver. CTUN stands for "click to tune". In CTUN mode, you can move the RX frequency over the whole spectrum scope, whose center then remains at a fixed frequency.		

CW Audio Peak Fltr	CW-APF	B
Toggle (on/off) the CW audio peak filter for the active receiver. Note that the width of this filter (default: 75 Hz) can only be modified through the CW menu.		

CW Frequency	CWFREQ	PE
Change the CW side tone frequency in the range 300-1000 Hz. This also changes the BFO frequency upon receive.		

CW Left	CWL	B
This action indicates the closure/opening of the left paddle of a CW key. It is usually assigned to a GPIO line or a MIDI controller to which a Morse paddle is attached, and works with the iambic keyer that is built into piHPSDR. This keyer is only active if CW is <i>not</i> handled in the radio (see CW menu).		

CW Right	CWR	B
This action indicates the closure/opening of the right paddle of a CW key. It is usually assigned to a GPIO line or a MIDI controller to which a Morse paddle is attached, and works with the iambic keyer that is built into piH-PSDR. This keyer is only active if CW is <i>not</i> handled in the radio (see CW menu).		

CW Speed	CWSPD	PE
Change the CW side tone frequency in the range 1-60 wpm. This affect the built-in iambic keyer or the keyer inside the radio, depending on whether CW is handled in the radio or not (see CW menu).		

CW Key (keyer)	CWKy	B
Straight key key-down or key-up event. Usually assigned to a GPIO line or a MIDI controller to which a straight key or an external keyer is attached. Note that this action does not automatically switch to TX, so it must be used together with either manual RX/TX switching, or with the "PTT (CW Keyer)" action.		

PTT (keyer)	CWKyPTT	B
This very similar to the PTT action (see below) with the exception that CW handling in the radio is temporarily disabled (thus, CW handling in piH-PSDR is enabled). This allows to have, e.g. a paddle attached to the radio while a contest logging program „talks” to piHPSDR.		

DIV On/Off	DIVT	B
Toggles (enabled/disabled) DIVERSITY reception.		

DIV Gain	DIVG	E
Adjust DIVERSITY gain. One tick of the encoder increments or decrements the gain by an amount of 0.5		

DIV Gain Coarse	DIVGC	E
Adjust DIVERSITY gain (coarse adjustment). One tick of the encoder increments of decrements the gain by an amount of 2.5		

DIV Gain Fine	DIVGF	E
Adjust DIVERSITY gain (fine adjustment). One tick of the encoder increments of decrements the gain by an amount of 0.1. Since adjusting the DIVERSITY gain (or phase) is sometimes difficult, assigning one encoder to a coarse and another encoder to a fine adjustment may help in locating the „sweet spot”.		

DIV Phase	DIVP	E
Adjust DIVERSITY phase (fine adjustment). One tick of the encoder increments of decrements the gain by an amount of 0.5		

DIV Phase Coarse	DIVPC	E
Adjust DIVERSITY gain (coarse adjustment). One tick of the encoder increments of decrements the gain by an amount of 2.5		

DIV Phase Fine	DIVPF	E
Adjust DIVERSITY gain (coarse adjustment). One tick of the encoder increments of decrements the gain by an amount of 20.1		

DIV Menu	DIV	B
Open the DIVERSITY menu.		

Duplex	DUP	B
Toggle (on/off) DUPLEX status. IN the DUPLEX mode, the receivers continue to work during TX, and the RX panels are not removed during TX. Instead, a separate TX window opens during transmitting. Generally, DUPLEX only make sense when using different and well decoupled RX and TX antennas.		

Filter -	FL-	B
Cycle forward (!) through the list of filters for the current mode of the active receiver. Normally, this means switching to a narrower filter (hence the name FILTER -). When reaching the last filter in the list, further cycling switches to the first (widest) filter.		

Filter +	FL+	B
Cycle backward (!) through the list of filters for the current mode of the active receiver. Normally, this means switching to a wider filter (hence the name FILTER +). When reaching the first filter in the list, further cycling switches to the last filter which is the variable Var2 filter.		

Filter Cut Low	FCUTL	E
Adjust the low-cut of the current filter. Note that the notion of „low” edge of the filter refers to audio frequencies for the single side band modes LSB, CWL, DIGL. This action is a no-op unless the current filter is one of the two variable filters Var1 or Var2.		

Filter Cut High	FCUTL	E
Adjust the high-cut of the current filter. Note that the notion of „high” edge of the filter refers to audio frequencies for the single side band modes LSB, CWL, DIGL. This action is a no-op unless the current filter is one of the two variable filters Var1 or Var2.		

Filter Cut Default	FCUTDEF	B
Reset the low and high cut of the current filter to the default values. This action is a no-op unless the current filter is one of the two variable filters Var1 or Var2.		

Filter Menu	FILT	B
This opens the Filter menu.		

VFO Menu	FREQ	B
This opens the FREQ (VFO) menu.		

Function	FUNC	B
Cycle through the six toolbar sets. For the piHPSDR GPIO Controller1, where the eight switches follow the toolbar buttons, this also affects the function of the switches. Note that this action is <i>always</i> connected with the right-most toolbar button.		

FuncRev	FUNC-	B
Cycle backwards through the six toolbar sets. For the piHPSDR GPIO Controller1, where the eight switches follow the toolbar buttons, this also affects the function of the switches. When using a mouse, this action can be invoked by a secondary mouse click on the rightmost toolbar button.		

IF Shift	IFSHFT	E
This command is effective only if one of the variable filters Var1 or Var2 is currently used in the active receiver, and shifts the filter, that is, it affects the low and high cut in the same way.		

IF Shift RX1	IFSHFT1	E
This command is effective only if one of the variable filters Var1 or Var2 is currently used in VFO-A, and shifts the filter, that is, it affects the low and high cut in the same way.		

IF Shift RX2	IFSHFT2	E
This command is effective only if one of the variable filters Var1 or Var2 is currently used in VFO-B, and shifts the filter, that is, it affects the low and high cut in the same way.		

IF Width	IFWIDTH	E
This command is effective only if one of the variable filters Var1 or Var2 is currently used in the active receiver, and changes the filter width, that is, it affects the low and high cut in an opposite way.		

IF Width RX1	IFWIDTH1	E
This command is effective only if one of the variable filters Var1 or Var2 is currently used in VFO-A, and changes the filter width, that is, it affects the low and high cut in an opposite way.		

action IF Width RX2 IFWIDTH2 E
 This command is effective only if one of the variable filters Var1 or Var2 is currently used in VFO-B, and changes the filter width, that is, it affects the low and high cut in an opposite way.

Linein Gain	LIGAIN	PE
Change the line-in gain of the radio. If the radio does not have a line-in input, this control has no effect.		

Lock	LOCK	B
Lock the VFOs. A locked VFO will not accept VFO frequency steps in either direction, and cannot be moved by dragging with the mouse. Band changes etc. are still possible, though. The command is intended to guard against accidentally moving the VFO dial.		

Memory Menu	MEM	B
Open the MEM (Memory) menu.		

Mic Gain	MICGAIN	PE
Change the mic gain (from -12 to 50 dB). The amplification of the microphone audio data is done in software, and applies to the TX audio input samples wherever they come from. (See the discussion of local microphones in the TX menu.)		

Mode -	MD-	B
Cycle backwards through the list of modes for the active receiver. When the first mode (LSB) has been reached, jump to the last one (DRM). Note that when changing the mode, the current filter, noise reduction, equalizer, VFO step size, and TX compressor settings are stored for the old mode, and the settings last used with the new mode are restored. This allows to quickly switch between SSB and CW, or between SSB and digi modes, without re-adjusting these settings.		

Mode +	MD+	B
Cycle forward through the list of modes for the active receiver. When the last mode (DRM) has been reached, jump to the first one (LSB). Note that when changing the mode, the current filter, noise reduction, equalizer, VFO step size, and TX compressor settings are stored for the old mode, and the settings last used with the new mode are restored. This allows to quickly switch between SSB and CW, or between SSB and digi modes, without re-adjusting these settings.		

Mode Menu	MODE	B
Open the Mode menu.		

MOX	MOX	B
Toggle between TX and RX. Unlike the PTT action, which puts the radio into TX when pressed and into RX when released, this button toggles the PTT state when pressed.		

Mute	MUTE	B
Toggles the „mute” state of the active receiver. If a receiver is muted, it produces zero-amplitude audio output.		

NB	NB	B
Cycles through the noise blanker states (NB off/NB1/NB2).		

NR	NR	B
Cycles through the noise reduction states (NR off/NR1/NR2).		

Noise Menu	NOISE	B
Opens the NOISE menu.		

NumPad 0	0	B
Used for direct frequency entry. This is the same as hitting the corresponding button „0“ in the VFO (VFO) menu.		

NumPad 1	1	B
Used for direct frequency entry. This is the same as hitting the corresponding button „1“ in the VFO menu.		

NumPad 2	2	B
Used for direct frequency entry. This is the same as hitting the corresponding button „2“ in the VFO menu.		

NumPad 3	3	B
Used for direct frequency entry. This is the same as hitting the corresponding button „3“ in the VFO menu.		

NumPad 4	4	B
Used for direct frequency entry. This is the same as hitting the corresponding button „4“ in the VFO menu.		

NumPad 5	5	B
Used for direct frequency entry. This is the same as hitting the corresponding button „5“ in the VFO menu.		

NumPad 6	6	B
Used for direct frequency entry. This is the same as hitting the corresponding button „6” in the VFO menu.		
NumPad 7	7	B
Used for direct frequency entry. This is the same as hitting the corresponding button „7” in the VFO menu.		
NumPad 8	8	B
(Used for direct frequency entry. This is the same as hitting the corresponding button „8” in the VFO menu.		
NumPad 9	9	B
Used for direct frequency entry. This is the same as hitting the corresponding button „9” in the VFO menu.		
NumPad BS	BS	B
Used for direct frequency entry (BS = backstep). This is the same as hitting the corresponding button in the VFO menu. It cancels the last-entered digit.		
NumPad CL	CL	B
Used for direct frequency entry (CL = clear). This is the same as hitting the corresponding button in the VFO menu. It cancels all entered digits so far.		
NumPad Dec	DEC	B
Used for direct frequency entry (DEC = decimal point). This is the same as hitting the corresponding button in the VFO menu.		
NumPad kHz	KHZ	B
Used for direct frequency entry. This is the same as hitting the corresponding button in the VFO menu. The VFO frequency is changed to the value entered so far, multiplied with 1000. For example, to go to 7.040 MHz, one can enter the sequence „7”, „0”, „4”, „0”, „KHZ”.		

NumPad MHz	MHZ	B
Used for direct frequency entry. This is the same as hitting the corresponding button in the VFO menu. The VFO frequency is changed to the value entered so far, multiplied with 1,000,000. For example, to go to 7.040 MHz, one can enter the sequence „7“, „DEC“, „0“, „4“, „MHz“.		

NumPad Enter	EN	B
Used for direct frequency entry. This is the same as hitting the corresponding button in the VFO menu. The VFO frequency is changed to the value entered so far. For example, to go to 7.040 MHz, one can enter the sequence „7“, „0“, „4“, „0“, „0“, „0“, „0“. This is rarely used but offers Hz-resolution for the direct frequency entry.		

PanZoom	PAN	E
Change the Pan value. This control is only effective when the Zoom value is larger than 1.		

Pan-	PAN-	B
Decrease the PAN value by 100. This control is only effective when the Zoom value is larger than 1.		

Pan+	PAN+	B
Increase the PAN value by 100. This control is only effective when the Zoom value is larger than 1.		

Panadapter High	PANH	PE
Change the dBm value (from -60 to +20) at the top of the spectrum scope of the active receiver. Values outside this range can be set in the DISPLAY menu.		

Panadapter Low	PANL	PE
Change the dBm value (from -160 to -60) at the bottom of the spectrum scope of the active receiver. Values outside this range can be set in the DISPLAY menu.		

Panadapter Step	PANS	PE
Change the step size (from 5 to 30) of the panadapter of the active receiver. This is the spacing of the thin horizontal lines in the spectrum scope.		

Preamp On/Off	PRE	B
Toggle the preamp of the active receiver. Although the preamp switching is part of the HPSDR protocol, this has no effect in current radio models since the preamp is hard-wired „on”.		

PS On/Off	PST	B
Toggle (on/off) adaptive predistortion (PureSignal).		

PS Menu	PS	B
Open the PS (PureSignal) menu.		

PTT	PTT	B
Put the radio into TX mode when the button is pressed, and go back to RX when the button is released. This is one of the few actions where a button release event is significant. When attaching, say, the PTT contact of a microphone to a GPIO line for this purpose, take care of proper debouncing, since piHPSDR is not good at debouncing switches where both the press and release events are significant.		

RF Gain	RFGAIN	PE
Set the gain of the RF front end of the active receiver. Only effective for radios that have such a gain control. Most HPSDR radios do not have RF gain, they have a step attenuator in the RF front end instead. Small SDR radios using the AD9866 chip (HermesLite, RadioBerry) and radios connected via the SoapySDR library usually do have an RF gain control.		

RF Gain RX1	RFGAIN1	PE
Set the gain of the RF front end of RX1. Only effective for radios that have such a gain control. Most HPSDR radios do not have RF gain, they have a step attenuator in the RF front end instead. Small SDR radios using the AD9866 chip (HermesLite, RadioBerry) and radios connected via the SoapySDR library usually do have an RF gain control.		

RF Gain RX2	RFGAIN2	PE
Set the gain of the RF front end of RX2. Only effective for radios that have such a gain control. Most HPSDR radios do not have RF gain, they have a step attenuator in the RF front end instead. Small SDR radios using the AD9866 chip (HermesLite, RadioBerry) and radios connected via the SoapySDR library usually do have an RF gain control.		

RIT	RIT	E
Change the RIT value of the active receiver in the range -9999 to 9999 Hz. If a zero value is set, RIT is automatically disabled, if a non-zero value is set, RIT is enabled.		

RIT Clear	RITCL	B
Set the RIT value of the active receiver to zero. As a side effect, RIT is disabled for the active receiver		

RIT On/Off	RITT	B
Toggle RIT (enabled/disabled) for the active receiver. Note the RIT value is not changed, so you can temporarily disable RIT, and then enable it with the same offset (RIT value) used before.		

RIT -	RIT-	B
Decrement the RIT value of the active receiver by the RIT step size, in the range -9999 to 9999 Hz. If a value of zero is reached, RIT is automatically disabled, and if a nonzero value is reached, RIT is automatically enabled. Note that this action belongs to the few ones for which a button release event has an effect. If you press and hold RIT- (either on the toolbar, or on a GPIO or MIDI console), there is an auto-repeat such that the action will be repeated every 250 msec until the RIT- button is released.		
RIT +	RIT+	B
Increment the RIT value of the active receiver by the RIT step size, in the range -9999 to 9999 Hz. If a value of zero is reached, RIT is automatically disabled, and if a nonzero value is reached, RIT is automatically enabled. Note that this action belongs to the few ones for which a button release event has an effect. If you press and hold RIT+ (either on the toolbar, or on a GPIO or MIDI console), there is an auto-repeat such that the action will be repeated every 250 msec until the RIT+ button is released.		
RIT RX1	RIT1	E
Change the RIT value of RX1 in the range -9999 to 9999 Hz. If a zero value is set, RIT is automatically disabled, if a non-zero value is set, RIT is enabled.		
RIT RX2	RIT2	E
Change the RIT value of RX2 in the range -9999 to 9999 Hz. If a zero value is set, RIT is automatically disabled, if a non-zero value is set, RIT is enabled.		
RIT Step	RITST	B
Cycle through the possible values (1 Hz, 10 Hz, 100 Hz) of the RIT step.		
RSAT	RSAT	B
If the SAT mode is either Off or SAT, change it to RSAT. If the SAT mode is RSAT, change it to Off. In RSAT mode all VFO frequency <i>changes</i> applied to one of the two VFOs will be applied to the other VFO with the sign reversed.		

RX1	RX1	B
Make the first receiver the active one, if piHPDSR is running two receivers.		

RX2	RX2	B
Make the second receiver the active one, if piHPDSR is running two receivers.		

SAT	SAT	B
If the SAT mode is either Off or RSAT, change it to SAT. If the SAT mode is SAT, change it to Off. In SAT mode all VFO frequency <i>changes</i> applied to one of the two VFOs will be applied to the other VFO as well.		

SNB	SNB	B
Toggle (enable/disable) the spectral noise blanker for the active receiver.		

Split	SPLIT	B
Toggle (on/off) the split status of the radio.		

Squelch	SQUELCH	PE
Change the squelch threshold value of the active receiver. Squelch is automatically enabled (disabled) if the resulting value is non-zero (zero).		

Squelch RX1	SQUELCH1	PE
Change the squelch threshold value of RX1. Squelch is automatically enabled (disabled) if the resulting value is non-zero (zero).		

Squelch RX2	SQUELCH2	PE
Change the squelch threshold value of RX2. Squelch is automatically enabled (disabled) if the resulting value is non-zero (zero).		

Swap RX	SWAPRX	B
Make the inactive receiver the active one. This action is only effective if piHPDSR is running two receivers.		

Tune	TUNE	B
Toggle (on/off) TUNE. If selected in the OC menu, an OC output will become active (low). This can then be used to start an external automatic tuner.		

Tune Drv	TUNDRV	E
Change the drive level (0-100) used for TUNEing. This is equivalent to changing the "Tune drive level" spin button in the TX menu and to check the "Tune use drive" box.		

Tune Full	TUNF	B
Set the "full tune" flag and clear the "memory tune" flag. If an OC output is assigned to the TUNE state, it will be cleared (go high again) 2800 msec after starting TUNE (this time can also be adjusted in the OC menu).		

Tune Mem	TUNM	B
Set the "memory tune" flag and clear the "full tune" flag. If an OC output is assigned to the TUNE state, it will be cleared (go high again) 550 msec after starting TUNE (this time can also be adjusted in the OC menu).		

TX Drive	TXDRV	PE
Set the TX drive level (0-100).		

Two-Tone	2TONE	B
Toggle (on/off) the two-tone state of the transmitter. If the two-tone state is engaged, the radio will go TX and emit a two-tone signal.		

VFO	VFO	E
This is the VFO frequency control of the active receiver.		

VFO A	VFOA	E
This is the VFO frequency control of VFO-A.		

VFO B	VFOB	E
This is the VFO frequency control of VFO-B.		

VOX On/Off	VOX	B
Toggle (on/off) vox status. If vox is enabled, you can automatically key the transmitter by talking into the microphone, without the need to press a PTT button. See the VOX menu.		

VOX Level	VOXLEV	E
Change the VOX level threshold. If you operate vox, and the radio does not go TX while talking into the microphone, decrease the VOX threshold. If the radio goes TX simply because the neighbour's hound starts barking, increase the VOX threshold.		

Wfall High	WFALLH	E
Change the "high" level (-100 dBm ... 0 dBm) of the waterfalls. Signal levels between low and high are colour coded from black to yellow, while signals above "high" are yellow and signals below "low" are black. This value has no effect if the automatic waterfall coloring is chosen ("waterfall automatic"), which is usually preferable.		

Wfall Low	WFALLL	E
Change the "low" level (-150 dBm ... -50 dBm) of the waterfalls. Signal levels between low and high are colour coded from black to yellow, while signals above "high" are yellow and signals below "low" are black. This value has no effect if the automatic waterfall coloring is chosen ("waterfall automatic"), which is usually preferable.		

XIT	XIT	E
Change the XIT value of the transceiver in the range -9999 to 9999 Hz. If a zero value is set, XIT is automatically disabled, if a non-zero value is set, XIT is enabled.		

XIT Clear	XITCL	B
Set the XIT value of the transmitter to zero. As a side effect, XIT is disabled.		

XIT On/Off	XITT	B
Toggle XIT (enabled/disabled) for the transceiver. Note the XIT value is not changed, so you can temporarily disable XIT, and then enable it with the same offset (XIT value) used before.		

XIT -	XIT-	B
Decrement the XIT value of the transmitter by the RIT (!) step size, in the range -9999 to 9999 Hz. If a value of zero is reached, XIT is automatically disabled, and if a nonzero value is reached, XIT is automatically enabled. Note that this action belongs to the few ones for which a button release event has an effect. If you press and hold XIT- (either on the toolbar, or on a GPIO or MIDI console), there is an auto-repeat such that the action will be repeated every 250 msec until the XIT- button is released.		

XIT +	XIT+	B
Increment the XIT value of the transmitter by the RIT (!) step size, in the range -9999 to 9999 Hz. If a value of zero is reached, XIT is automatically disabled, and if a nonzero value is reached, XIT is automatically enabled. Note that this action belongs to the few ones for which a button release event has an effect. If you press and hold XIT+ (either on the toolbar, or on a GPIO or MIDI console), there is an auto-repeat such that the action will be repeated every 250 msec until the XIT+ button is released.		

Zoom	ZOOM	PE
Change the ZOOM value (1...8) of the active receiver.		

Zoom -	ZOOM-	B
Decrease the ZOOM value of the active receiver by one. If the ZOOM value was already 1, this is a no-op.		

Zoom +	ZOOM+	B
Increase the ZOOM value of the active receiver by one. If the ZOOM value was already 8, this is a no-op.		

Appendix B

piHPSDR keyboard bindings

There are a lot of keyboard bindings effective if you run piHPSDR. Most of them are standard key bindings of the GTK user interface. For example, when using a normal slider, you can use the up-arrow and down-arrow keys to fine adjust the value. In this section we will only list the keyboard binding that are captured and processed by piHPSDR

space bar Hitting the space bar will execute the **MOX** command, that is, a transition from RX to TX or from TX to RX. Use this as the last resort for TRX switching if your microphone does not have PTT.

u Hitting a lower-caps letter „u” moves the VFO frequency up by the current VFO step size.

d Hitting a lower-caps letter „d” moves the VFO frequency up by the current VFO step size.

U Hitting a upper-caps letter „U” moves the VFO frequency of the „other” VFO, that is, the VFO that is *not* controlling the active receiver, up by 10 times the VFO step size.

D Hitting a upper-caps letter „D” moves the VFO frequency of the „other” VFO, that is, the VFO that is *not* controlling the active receiver, up by 10 times the VFO step size.

This (U/D) is for stations chasing DX and using split mode. One can tune to the DX station, then copy the VFO of the active receiver to the other one using **A>B** or **A<B**, then then one can move the TX frequency (in split mode)

using these keys in large steps.

Keypad 0 ... Keypad 9 Hitting a digit on the numerical keypad executes one of the **NumPad 0** to **NumPad 9** commands. This can be used for direct frequency entry via the keyboard.

Keypad Decimal Hitting the decimal point on the keypad executes the **NumPad Dec** command which will enter a decimal point during direct frequency entry.

Keypad Subtract Hitting the „subtract” (minus) key on the numerical keypad executes the **NumPad BS** (back space) command.

Keypad Divide Hitting the „divide” key on the numerical keypad executes the **NumPad CL** command which will clear any frequency entered so far.

Keypad Multiply Hitting the „multiply” key on the numerical keypad executes the **NumPad Hz** command which will transfer the frequency entered (in Hz) to the VFO of the active receiver.

Keypad Add Hitting the „add” (plus) key on the numerical keypad executes the **NumPad kHz** command which will transfer the frequency entered (in kHz) to the VFO of the active receiver.

Keypad Enter Hitting the „enter” key on the numerical keypad executes the **NumPad MHz** command which will enter the frequency entered (in MHz) to the VFO of the active receiver.

Appendix C

piHPSDR CAT commands

The CAT model of piHPSDR largely follows that for other SDR programs. It is based upon the Kenwood TS-2000 CAT command set, which can easily be found on the internet (see the Appendix of the Kenwood TS-2000 instruction manual) and will not be reproduced here for copyright reasons. So if you want to connect a logbook or contest logging program to piHPSDR, you will normally tell this program that it has to control a Kenwood TS-2000.

— piHPSDR vs. Kenwood TRX model —

Note that the transceiver model behind the CAT commands is „inherited” from the Kenwood protocol and differs from piHPSDR’s model in one important aspect: in piHPSDR, a control command such as changing the mode, the filter, or the frequency always affects the active receiver unless the VFO is explicitly specified. For CAT commands on the other hand, such a command without explicit VFO specification will always affect VFO-A.

No rule without an exception: the special CAT commands that support the ANDROMEDA console (see below) are such that they operate on the active receiver (ZZZD, ZZZE, ZZP, ZZZU commands).

In the SDR community, there exist a heavily extended TS-2000 CAT command set known as the „PowerSDR CAT command set”, the original source is probably

<https://www.flexradio.com/documentation/powersdr-cat-command-reference-guide/>

Many (but probably not all) of the commands listed there are implemented in piHPSDR, because it seems that there exist SDR controllers which communicate over the serial line. In recent years, such an open-source controller, the ANDROMEDA controller, has been developed by Laurence Barker G8NJJ, see

https://github.com/laurencebarker/Andromeda_front_panel

This controller uses some additional CAT commands to communicate with the radio, and these commands have also been implemented into the RIGCTL module of piHPSDR by Rick Koch N1GP (thanks Rick). These are the ZZZD and ZZZU commands for moving the VFO frequency down/up, and the ZZZP and ZZZE commands for sending information about push-buttons and encoders, and a ZZZS command which contains information on the ANDROMEDA version. Furthermore, if "Andromeda" is selected in the RIGCTL menu, piHPSDR will constantly *send* status information to the ANDROMEDA controller using a ZZZI command. Status information is sent if something changes (active receiver, diversity status, PTT status, TUNE mode, PS status, CTUN mode, RIT and XIT status, and LOCK status), such that the ANDROMEDA controller can update the corresponding LEDs.

Appendix D

How to connect a Morse key or paddle

Most SDR radios have the possibility to connect a Paddle or at least a straight key to the radio itself, and then the firmware inside the radio takes care of all the CW processing. If, in addition, the radio has the option to connect a headphone, you will get a low-latency side tone, generated by the radio firmware, in this headphon. This is the easiest case (do not forget to check [CW handled in Radio](#) within the [CW](#) menu). If the radio (such as the HermesLite-II) can only connect a straight key, use an external keyer and connect the output of the keyer to the straight key input of the radio. Note, however, that the HermesLite-II does not have an audio codec and thus does not produce a side tone. You can use the keyer output to key a hardware side tone generator and mix its output with the audio that you feed to your headphone. This gives a hardware generated low latency side tone.

More complications arise if you have to connect the Morse key to the host computer running piHPSDR. This is necessary, for example, if there is a considerable distance between the radio and the host computer running piH-PSDR. Imagine, for example, that the radio is in the attic close to the antenna feed point, but that you are sitting in your living room in front of the host computer running piHPSDR, and that there is a long ethernet cable between your computer and your radio.

RaspPi GPIO. If your host computer is a RaspPi, and if you are running either no controller or Controller1, then there are spare GPIO input lines

which you can use for connecting a Morse key. The pre-defined GPIO lines are, if there is "No Controller":

- GPIO line 7 for [CW Left](#)
- GPIO line 21 for [CW Right](#)
- GPIO line 14 for [PTT \(keyer\)](#)
- GPIO line 10 for [CW Key \(keyer\)](#)

In the case of **Controller1** the GPIO lines are

- GPIO line 9 for [CW Left](#)
- GPIO line 11 for [CW Right](#)
- GPIO line 14 for [PTT \(keyer\)](#)
- GPIO line 10 for [CW Key \(keyer\)](#)

All lines are active-low lines with a pull-up, so the active state is reached by connecting the input line to ground. See Appendix A for an explanation of the commands. Briefly, use [CW Left](#) and [CW Right](#) when using piHPSDR's internal iambic keyer, and use [PTT \(keyer\)](#) and [CW Key \(keyer\)](#) when using an external keyer. Note when using an external keyer, it must generate both a key-down and a PTT signal, and it must be configured such that the PTT signal arrives about 150 msec earlier than the first key-down. K1EL WinKey keyers and Arduino clones thereof, which are the most abundant sort of keyers used, can easily be configured to do so. Depending on the audio subsystem, the latency of the side tone, when using the internal keyer, may be a problem. The ALSA audio (instead of PulseAudio) module takes special provisions to keep this latency small.

MIDI If there are no spare GPIO lines (this is the case for the RaspPi if using the Controller2 or the G2 frontpanel), or if there are no GPIO lines at all (this is the case for piHPSDR running on Desktop Linux or Macintosh computers), the best choice to get "the key into the computer" is to use MIDI. There are low-cost microcontrollers which can be programmed such

that they act as MIDI input devices if connected (via USB) to the host computer (Arduino Leonardo, Teensy LC). You can run a Winkey Clone on the microcontroller and add code that for key-up/down and PTT on/off sends MIDI NoteOn/Off messages to the computer. The use the [MIDI](#) menu to configure. More powerful microcontrollers (e.g. the Teensy4) can even show up at the computer as a MIDI input device *and* a serial port, in this case you can even connect from a contest logging program to the keyer via the WinKey protocol over the serial port, and get the key-up/down messages via MIDI back to piHPSDR. The Teensy4 is even so powerful that it can act, in addition to a MIDI device and a serial port, as a USB audio sound card. Using all these three components together you can route the RX audio to the Teensy, which then takes care of mixing the CW side tone with this audio before sending it to the headphone attached. This is perhaps the most sophisticated way to connect a key, see <https://github.com/softerhardware/CWKeyer>. Using the [MIDI](#) menu to assign the [CW Key \(Keyer\)](#) and [PTT \(keyer\)](#) actions is a little bit tricky, since the menu only allows to assign an action to the latest event received. Proceed as follows:

- Press and hold one of the two paddles. The keyer will start sending a NoteOn message for PTT, and then infinitely send NoteOn/Off messages for key up/down. Use the [MIDI](#) menu to assign the [CW Key \(keyer\)](#) action to this MIDI event.
- Then, release the paddle. Some time (the hang time of the keyer) after the last key-up, a NoteOff message for PTT will be sent. After this, you can assign the [PTT \(keyer\)](#) action to this MIDI event. You should see that it has a different Note value than you saw while the keyer was sending the infinite string of dots or dashes.

As an example, we show a short sketch which has been tested with the Arduino Leonardo You must install the MIDIUSB library from within the Arduino IDE, through the `Tools → Manage Libraries ...` menu. The sketch monitors four input lines (0, 1, 2, 3 in the example) with debouncing. You can connect a CW paddle to lines 0 and 1, or the Key and PTT outputs of a Keyer to lines 2 and 3.

```
/*
 * define four I/O lines for the four inputs
 */

#define CWLEFT_IO    0 // Dot paddle
#define CWRIGHT_IO   1 // Dash paddle or StraightKey
#define CWKEY_IO     2 // from Keyer: CW
#define PTT_IO        3 // from Keyer: PTT

/*
 * define MIDI channel four MIDI notes for these four events
 */

#define MIDI_CHANNEL 10
#define CWLEFT_NOTE  10
#define CWRIGHT_NOTE 11
#define CWKEY_NOTE   12
#define PTT_NOTE     13

/*
 * define a debouncing time for CWLEFT/CWRIGHT
 * and a (possibly shorter) one for CWKEY/PTT
 */

#define DEBOUNCE_PADDLE 15
#define DEBOUNCE_KEYER   5

#include "MIDIUSB.h"

/*
 * Debouncing timers
 */

static uint8_t CWLEFT_time;
static uint8_t CWRIGHT_time;
static uint8_t CWKEY_time;
static uint8_t PTT_time;
```

```
/*
 * last reported states
 */

static uint8_t CWLEFT_last;
static uint8_t CWRIGHT_last;
static uint8_t CWKEY_last;
static uint8_t PTT_last;

void setup() {
    pinMode(CWLEFT_IO, INPUT_PULLUP);
    pinMode(CWRIGHT_IO, INPUT_PULLUP);
    pinMode(CWKEY_IO, INPUT_PULLUP);
    pinMode(PTT_IO, INPUT_PULLUP);
    CWLEFT_time =255;
    CWRIGHT_time=255;
    CWKEY_time  =255;
    PTT_time    =255;
    CWLEFT_last =0;
    CWRIGHT_last=0;
    CWKEY_last  =0;
    PTT_last    =0;
}
```

```
/*
 * Send MIDI NoteOn/Off message
 */

void SendOnOff(int note, int state) {
    midiEventPacket_t event;
    if (state) {
        // Note On
        event.header = 0x09;
        event.byte1 = 0x90 | MIDI_CHANNEL;
        event.byte2 = note;
        event.byte3 = 127;
    } else {
        // NoteOff, but we use NoteOn with velocity=0
        event.header = 0x09;
        event.byte1 = 0x90 | MIDI_CHANNEL;
        event.byte2 = note;
        event.byte3 = 0;
    }
    MidiUSB.sendMIDI(event);
    // this is CW, so flush each single event
    MidiUSB.flush();
}
```

```
/*
 * Process an input line.
 * Note that HIGH input means "inactive"
 * and LOW input means "active"
 * This function does noting during the debounce
 * settlement time.
 * After the settlement time, if the input state
 * has changed, the settlement time is reset and
 * a MIDI message (with the new state) sent.
 */

void process(uint8_t *time, uint8_t *oldstate,
             uint8_t ioline, uint8_t note,
             uint8_t debounce) {
    if (*time < 255) (*time)++;
    if (*time > debounce) {
        uint8_t newstate = !digitalRead(ioline);
        if (newstate != *oldstate) {
            *time=0;
            *oldstate = newstate;
            SendOnOff(note, newstate);
        }
    }
}
```

```
void loop() {
    uint8_t state;
    /*
     * For each line, do nothing during the debounce settlement
     * time. After that, look at the input line, if it changed,
     * reset debounce timer and report value
     */

    process (&CWLEFT_time,
              &CWLEFT_last,
              CWLEFT_IO,
              CWLEFT_NOTE,
              DEBOUNCE_PADDLE);

    process (&CWRIGHT_time,
              &CWRIGHT_last,
              CWRIGHT_IO,
              CWRIGHT_NOTE,
              DEBOUNCE_PADDLE);

    process (&CWKEY_time,
              &CWKEY_last,
              CWKEY_IO,
              CWKEY_NOTE,
              DEBOUNCE_KEYER);

    process (&PTT_time,
              &PTT_last,
              PTT_IO,
              PTT_NOTE,
              DEBOUNCE_KEYER);

    /*
     * Execute loop() approximately (!) once per milli-second
     */
    delayMicroseconds(950);
}
```

Copy-and-Paste from an PDF file often does not give you what you think, so this sketch is available under the name `MIDI.ino` in the `release` directory in the piHPSDR repository. Note you can also use this sketch to connect a microphone PTT button to input line 3. Once the Leonardo has been programmed, it will show up as an „Arduino Leonardo” in the `MIDI` menu. As a basic test, open the `MIDI` menu, check the box for the Leonardo device, and shortly ground input pin 0. Then the menu should report that a „NOTE” event on channel 10 with a note 10 occurred, which you can then (by clicking the `Action` button) assign to, say, `CW Left`.

Note. It should be obvious how to extend this sketch to monitor additional input lines where you can then connect push buttons to which you can assign piHPSDR functions via the MIDI menu. Monitoring rotary encoders is more difficult and not shown here.

Appendix E

Running piHPSDR alongside with DigiMode programs

In this section, we will cover four different scenarios, namely

- piHPDSR and digimode program running on different computers.
- piHPSDR and digimode program running on the same LINUX computer (including RaspPi) using ALSA.
- piHPSDR and digimode program running on the same LINUX computer (including RaspPi) using PulseAudio.
- piHPSDR and digimode program running on the same MacOS computer.

Running piHPSDR and Digi on different computers.

This typically is the situation if piHPSDR is running on a computer with a very small screen, such as it is the case if you are using a piHPSDR controller or the G2 frontpanel. This situation also occurs if you want to run the DigiMode program on a Windows computer, since (as far as I know) piHPSDR has not yet been adapted to run with the Windows operating system.

There is not much to say here, because this setup is largely the same as for conventional (analog) rigs: you need a sound interface connected to the computer running the digi program, and then you connect the sound interface

either to the headphone and mic jacks of the radio, or to the input/output of a sound card connected to the computer running piHPSDR. In the latter case, you have to select this soundcard for local audio output in the **RX** menu, and for local microphone input in the **TX** menu.

Unless you are using VOX, you also need a CAT command connection between the digimode program and piHPSDR. Via CAT commands, the digimode program can induce RX/TX transitions in piHPSDR, change frequencies or modes, etc. If both computers are connected via ethernet, TCP is the method of choice for such a connection. piHPSDR listens on port 19090 (by default, can be changed in the **RigCtl** menu). For standard digimode operation, choose the Kenwood TS-2000 radio model. If your digimode program can use the hamlib CAT connection library (for example, both Fldigi and WSJT-X can), choose the „OpenHPSDR PiHPSDR” radio model.

If there is no ethernet connection between the computer running piHPSDR and the computer running the digimode program, you need two USB-to-serial interfaces and must connect them via a null modem. Then use the serial port both in piHPSDR (**RigCtl** menu) and the digimode program.

Running piHPSDR and Digi on the same computer.

In this case it is strongly recommended that the audio never goes analog, but is exchanged (transferred to and from) as digital data between piHPSDR and the digimode program. To this end, you need virtual audio devices known as **virtual audio cables** or **loopbacks**. A virtual audio cable is a pair of connected (virtual) audio devices, one input („microphone”) device and one output („headphone”) device. You can, for example, open the output device of such a virtual cable in program X at a place where you could also open a device driving a headphone. In another program Y, you can open the input device of the same virtual audio cable at a place where you could also open a device attached to a microphone. The „trick” is now that all audio data which program X sends to the output device can be retrieved by program Y by reading the input device.

For digimode operation, you need two such virtual audio cables, which we will name here RXcable and TXcable, just to give an example. The idea behind the names is, that audio data flows through the RXcable upon RX and through the TXcable while transmitting. Having said this, it is clear that

- In the piHPSDR RX menu, chose the output device of RXcable for local audio output.
- In the piHPSDR TX menu, chose the input device of TXcable for local microphone input.
- In the audio menu of the digimode program, choose the input device of RXcable for audio input.
- In the audio menu of the digimode program, choose the output device of TXcable for output output.

With this, the only question remaining is, how to create virtual audio cables, and how to access them. This is not only different between Linux and MacOS, but also is different on Linux depending on whether the ALSA compile time option (see Appendix F) was activated during compilation of piHPSDR. For the binary installation on a RaspPi (see Appendix H) ALSA is active. If compiling from the sources you get the PulseAudio module if you do not change the Makefile (see Appendix F).

Virtual audio cables. ALSA case (Linux only).

The command for creating the two virtual cables (put everything in one line) is

```
sudo modprobe snd-aloop index=5,6 id=RXcable,TXcable
enable=1,1 pcm_substreams=2,2
```

The two indices chosen (5, 6) should leave enough head-room for sound devices already present. On a „naked” Pi4, indices 0 and 1 refer to the HDMI and headphone audio output devices, but more indices may already be assigned if you have plugged in additional sound cards. You can verify the existence of the virtual audio cables using the command

```
aplay -l
```

and part of the output, as obtained on my Pi4, is printed here:

```
card 5: RXcable [Loopback], device 0: Loopback PCM [Loopback PCM]
Subdevices: 2/2
Subdevice #0: subdevice #0
Subdevice #1: subdevice #1
```

```

card 5: RXcable [Loopback], device 1: Loopback PCM [Loopback PCM]
  Subdevices: 2/2
    Subdevice #0: subdevice #0
    Subdevice #1: subdevice #1
card 6: TXcable [Loopback], device 0: Loopback PCM [Loopback PCM]
  Subdevices: 2/2
    Subdevice #0: subdevice #0
    Subdevice #1: subdevice #1
card 6: TXcable [Loopback], device 1: Loopback PCM [Loopback PCM]
  Subdevices: 2/2
    Subdevice #0: subdevice #0
    Subdevice #1: subdevice #1

```

Remember that the device with index 5 is our RXcable and index 6 belongs to TXcable since not all programs (including piHPSDR) report the names (RXcable, TXcable) assigned. It is important to realize that each „cable” offers two devices: the first one (0) is the input device and the second one (1) is the output device. Note that the two devices created by „modprobe” only exist until the next shut-down of the computer and you have to re-create them each time after booting. There are ways to make this permanent (search the internet) or to include the „modprobe” in a startup script that is executed once after each boot (again, search the internet). Now we show how to set this up and show piHPSDR’s **RX** and **TX** menu, as well as the audio menu of WSJTX.

We begin with the piHPSDR settings in the **RX** (Fig. E.1) and **TX** (Fig. E.2) menu:

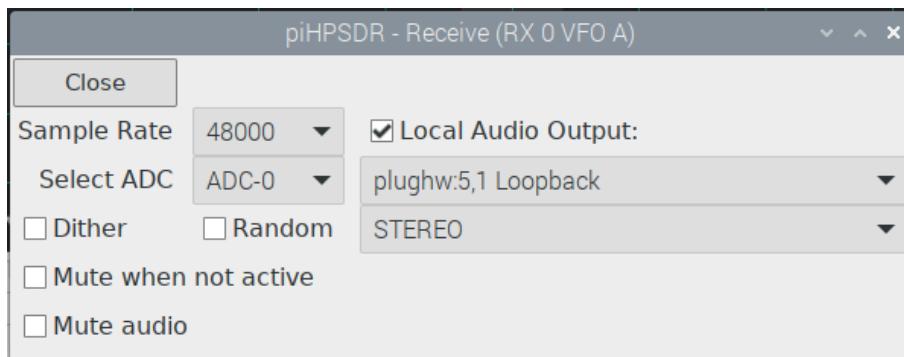


Fig. E.1: RX menu settings for using loopback with ALSA.

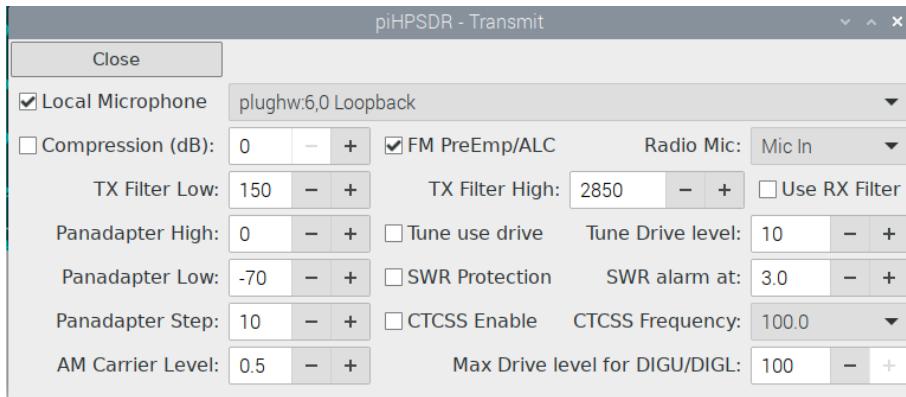


Fig. E.2: TX menu settings for using loopback with ALSA.

Is clearly seen that the output device of RXcable (5,1) is used for local RX audio, and the input device of TXcable (6,0) is used for local microphone input. The corresponding WSJT-X settings audio tab looks similar (Fig. E.3, only the upper part of the window is shown):

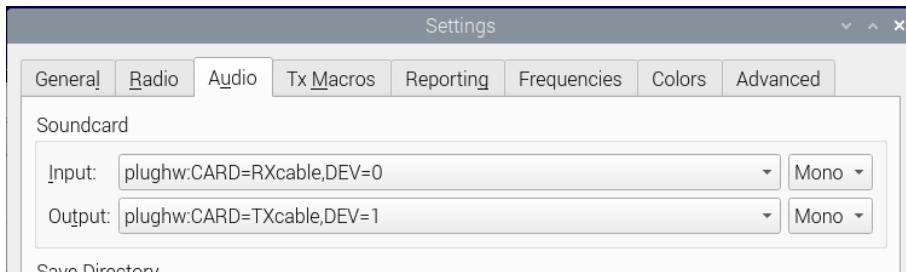


Fig. E.3: WSJT-X audio settings for using loopback with ALSA.

Here, the *input* device of RXcable is used for audio input, and the *output* device of TXcable for audio output. Note this program reports the clear names of the devices rather than its ID numbers. Finally, we show the WSJT-X „Radio“ tab for establishing the CAT connection, although this is not specific to ALSA (Fig. E.4):

Important here is to choose the correct rig model **OpenHPSDR PiHPSDR** and port **:19090** (note the colon!). The other parameters in the left side of the tab have no meaning for a TCP connection. In the right tab, choose **CAT** as the PTT method (TRX transition controlled by CAT commands). Checking **Data/Pkt** takes care WSJT-X switches piHPSDR to DIGU mode, and using

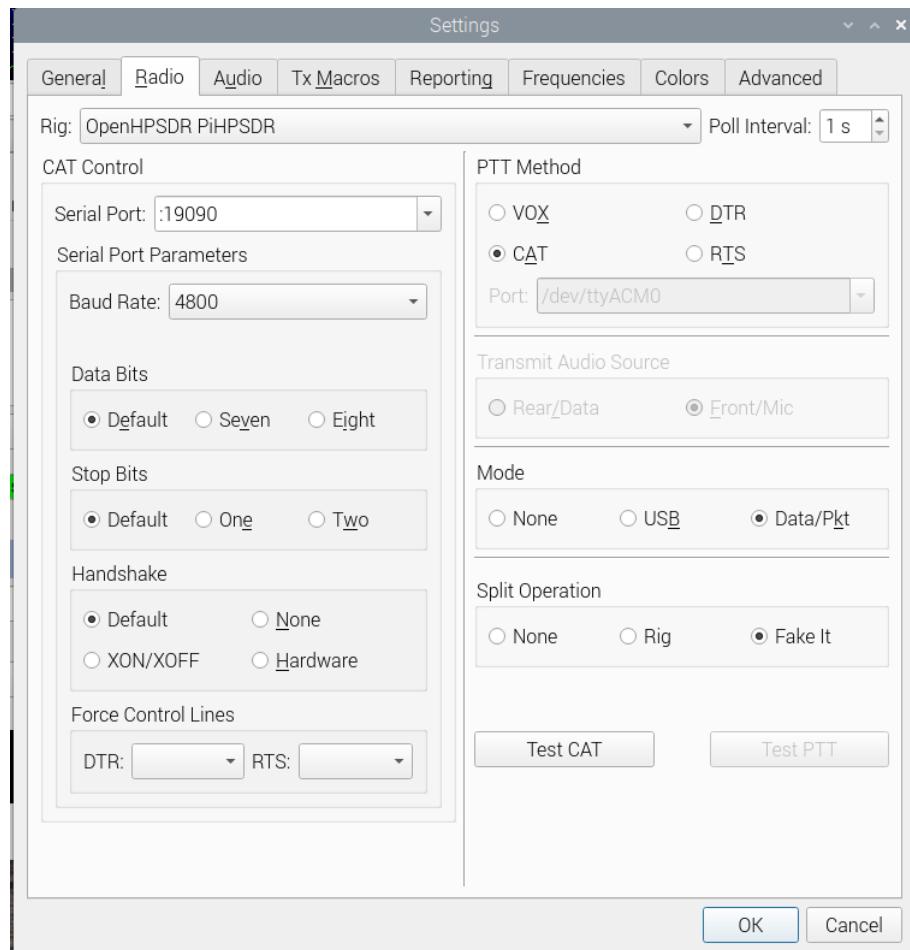


Fig. E.4: WSJT-X radio settings for CAT connection to piHPSDR.

Fake It for the Split Operation method is just my personal preference.

Virtual audio cables, PulseAudio case (Linux only).

There are no explicit loopback devices with PulseAudio since they are not needed. For *every* PulseAudio output device, there is a corresponding „Monitor” device which can be used for sound input, and where the data sent to the primary (output) device can be read. This means, you can send the RX audio to the headphone device as you would do for normal SSB operation, and can then use the Monitor of the headphone device as audio input in WSJTX. We describe a different setup where we create two dummy (“null-sink”) output devices. It should be clear how to change this procedure if you want to listen (with the headphone) to the digimode RX signal while it is processed in the digimode program. We call the two dummy output devices RXcable and TXcable just to demonstrate how it works. This is done by the commands (do not enter the line breaks)

```
pacmd load-module module-null-sink sink_name=RXcable rate=48000
sink_properties="device.description=RXcable"

pacmd load-module module-null-sink sink_name=TXcable rate=48000
sink_properties="device.description=TXcable"
```

To control whether the output devices have been created correctly, we use the command `pacmd list-sinks`, which produces a very long output from which only the relevant parts are reported here:

```
...
    index: 2
name: <RXcable>
driver: <module-null-sink.c>
flags: DECIBEL_VOLUME LATENCY DYNAMIC_LATENCY
state: IDLE
...
    index: 3
name: <TXcable>
driver: <module-null-sink.c>
flags: DECIBEL_VOLUME LATENCY DYNAMIC_LATENCY
state: IDLE
...
```

Note the index numbers which are 2 for RXcable and 3 for TXcable, these

index numbers may be different on your machine. The index number of TXcable (here: 3) is needed in the case of Fldigi and qSSTV (see note at the end of this section). The state may also be different from IDLE depending on whether you (already) make use of that device.

Likewise, check the availability of the input devices using the command `pacmd list-sources`, from the output we quote

```
...
    index: 2
name: <RXcable.monitor>
driver: <module-null-sink.c>
flags: DECIBEL_VOLUME LATENCY DYNAMIC_LATENCY
state: IDLE
...
    index: 3
name: <TXcable.monitor>
driver: <module-null-sink.c>
flags: DECIBEL_VOLUME LATENCY DYNAMIC_LATENCY
state: IDLE
...
```

Again, note the index numbers, here they are 2 for the Monitor of RXcable and 3 for the Monitor of TXcable. The index number of RXcable.monitor (here: 2) is needed in the case of Fldigi and qSSTV (see note at the end of this section). The state may also be different from IDLE depending on whether you (already) make use of that device.

Note that these devices are created once, the commands have to be repeated after rebooting the machine or restarting PulseAudio, the devices can be made permanent but you have to search the internet on how to do this. My recommendation is to include such command in a shell script that is automatically executed when you start the computer.

The necessary configuration for piHPSDR and WSJTX is not almost evident. The piHPSDR settings are shown in Fig. E.5 ([RX](#) menu) and in Fig. E.6 ([TX](#) menu): RXcable has been selected for local RX audio output, while the Monitor of TXcable is chosen as the local microphone.

In the WSJTX audio tab, the input/output assignments are just reversed, as

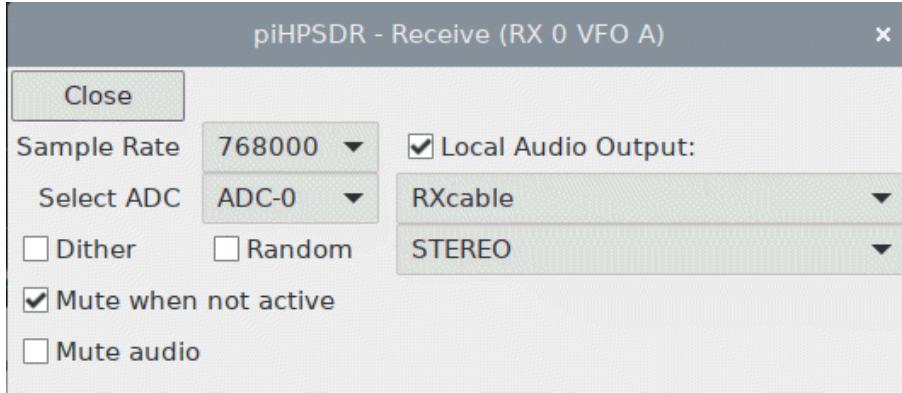


Fig. E.5: RX menu settings with PulseAudio

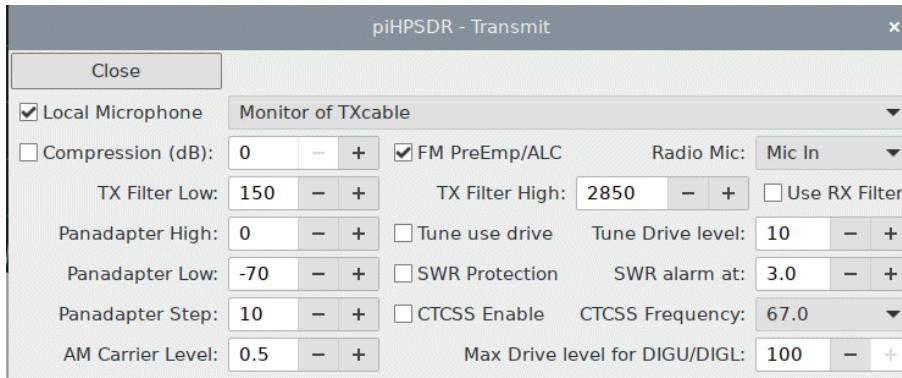


Fig. E.6: TX menu settings with PulseAudio

shown in Fig. E.7. The CAT connection between WSJTX and piHPSDR is the same as in the ALSA case.

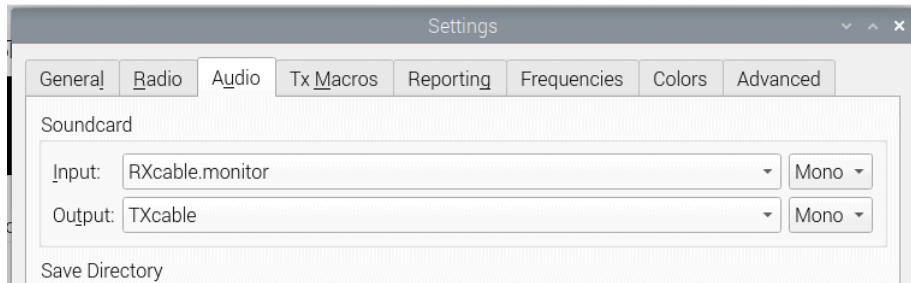


Fig. E.7: WSJT-X audio settings with PulseAudio

———— Note on Fldigi and qSSTV ——

Some popular programs, including Fldigi and qSSTV, can use PulseAudio but have not user interface to choose the PulseAudio device. This means, they will only use the default PulseAudio input and output device. So to use Fldigi and/or qSSTV, you have to make TXcable the default output device and the monitor of RXcable the default input device. This means Fldigi/qSSTV will always read their audio input from the monitor of RXcable and put the audio they produce to TXcable. To achieve this, simply use the two commands

```
pacmd set-default-sink <index of TXcable>
pacmd set-default-source <index of RXcable.monitor>
```

where the indices (small integer numbers) are those mentioned above, and are taken from the output of the `pacmd list-sinks` and the `pacmd list-sources` commands.

Using „loopback” in MacOS

The standard audio option for MacOS is PORTAUDIO which has no built-in virtual audio cables. In this case the easiest, most flexible, and (from my side) most recommended option is to buy a third-party product, „loopback” from RogueAmoeba (<https://rogueamoeba.com/loopback/>). Note I have no connections with that company, I am just using this product and can recommend it. It can not only be used to create loopback devices, but you get a patch panel so you can, for example, send the RX audio both to a headphone device and to a virtual cable, thus eliminating the need to change piHPSDR menu settings when switching between SSB and digi. The following picture just shows my setup (Figs. E.8 and E.9).

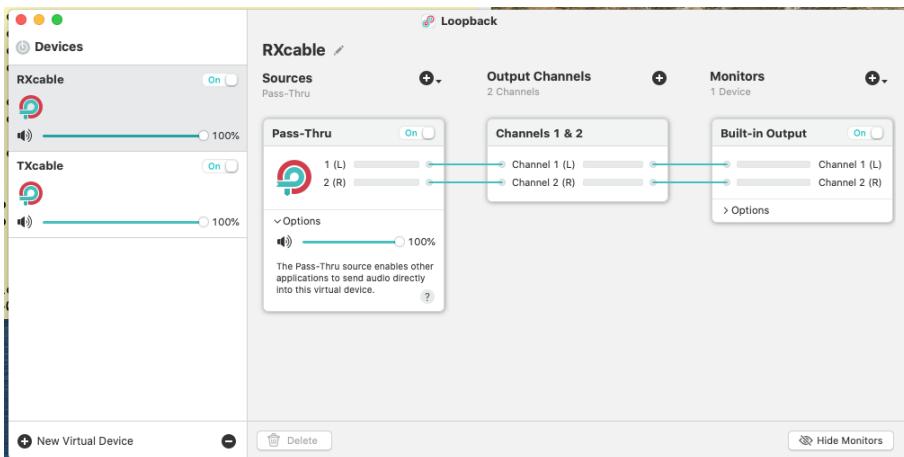


Fig. E.8: Setting up „loopback” on MacOS, RXcable

As one can see, two devices have been created, with name RXcable and TXcable. While the configuration of the TXcable is the minimum (default) one, all the output sent to RXcable is further routed to the Build-in Output (headphone connector) of the Macintosh. One could also modify the TXcable to accept a microphone as a second input, but then the microphone must be mutable (On/Off switch) such that it does not pickup noise while doing digimode. In piHPSDR, simply choose RXcable and local RX output in the **RX** menu, and a local microphone with device TXcable in the **TX** menu. In WSJT-X, simply choose RXcable as the input and TXcable as the output device.

As an additional bonus, loopback can also mix output devices. For example,

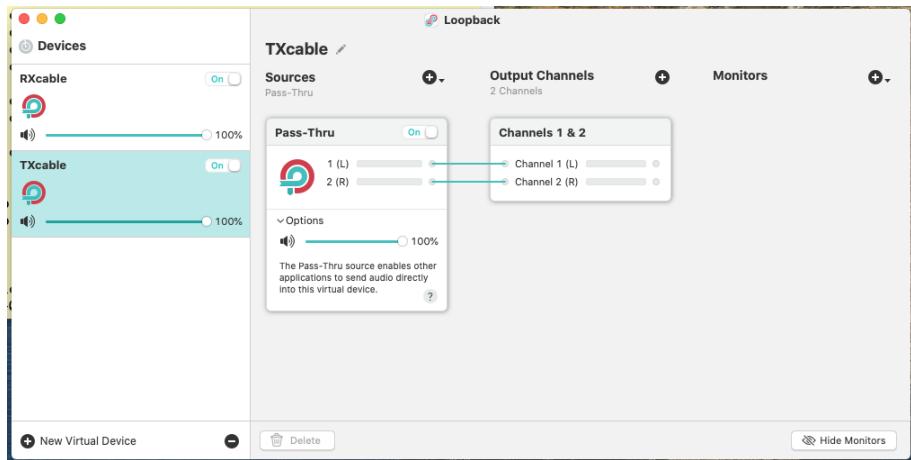


Fig. E.9: Setting up „loopback” on MacOS, TXcable

one can create an additional loopback device with, say, name RX2, which can also be connected to the headphone output as shown for RXcable. If piHPSDR is running two receivers, one can use the [RX](#) menu to send the audio output of the first receiver to RXcable and the audio output of the second receiver to RX2. Additionally one can activate only the left channel for the first and only the right channel for the second receiver (see the [RX](#) menu). With this setup, one gets the audio output of the first receiver on the left ear and the audio output of the second receiver on the right ear. This can be very convenient for hunting DX in split mode, because one then hears the hounds and the fox on different ears.

Transceiver control (CAT connection) in MacOS is the same as described for Linux.

Appendix F

Compile-time options

There is a number of compile-time options that are shown on the initial screen. If you are using a binary version, you have what you have. If you compile from the sources, you can choose which options you want (or want not). It is possible to change the options without actually changing one of the files in the piHPSDR repository. Simply go (in a terminal window) to the directory where you compile piHPSDR and type in

```
cp Makefile GNUmakefile
```

This „trick” takes care the further compilations use the file `GNUmakefile` rather than `Makefile`, and changing the compile time options is accomplished by changing the file `GNUmakefile` with a text editor. In the `GNUmakefile` in the first 50 lines, you will find a lot of assignments of the form

```
#AAAAAA=BBBBB  
XXXXXX=YYYYY
```

together with some comments what they are good for. The first form, with a number sign in the first column, means that option BBBB is not active, the second form, without a number sign, means that option YYYY is active. Here we give a list of available options. For each of these, we note if it is enabled or disabled in the `Makefile` of the standard repository.

GPIO. (default: enabled) This option is needed on a RaspberryPi if you want to use GPIO input/output lines from within piHPSDR, for example since you have a controller (Controller1, Controller2, or G2 frontpanel) attached

or want to use GPIO lines for CW or PTT. **It is important to deactivate this option if you compile for a Desktop PC running LINUX!**. This is so because Desktop PCs/Laptops do not have GPIO lines. For MacOS, this option is automatically disabled.

MIDI. (default: enabled) This option activates the possibility to control piHPSDR via MIDI devices. It should normally be activated, unless you port piHPSDR to some other operating system without MIDI support.

SATURN. (default: enabled) This option is for piHPSDR running on the CM4 module within a SATURN/G2 radio. It allows piHPSDR to directly communicate with the FPGA via XDMA. While it does no harm to have this option activated on other systems, it also has no function there.

USBOZY. (default: disabled) This option includes support for legacy HPSDR hardware connected via USB.

SOAPYSDR. (default: disabled) This option enables piHPSDR to communicate with radios through the SoapySDR library.

STEMLAB. (default: disabled) This is an option for RedPitaya based radios. These have an SDR app that must be started before one can connect. If you have a RedPitaya exclusively being used as a radio, this app is most likely auto-started when powering up the RedPitaya so you do not need the STEMLAB option. This option allows to start the SDR application on the RedPitaya through the web interface. If you have a RedPitaya and no autostart of the SDR application there, and not compiled piHPSDR with the STEMLAB option, you can open a web browser, start the SDR application on the RedPitaya, and then start piHPSDR. With the STEMLAB option, this can all be done by piHPSDR.

ALSA. (default: disabled) This option is only effective for LINUX systems including the Raspberry Pi. If this option is active, local audio output is done via the standard LINUX ALSA library, otherwise PulseAudio is used. Note that sending audio to HDMI monitors is not (yet) supported with the ALSA option (with PulseAudio, this is no problem). On MacOS, this option has no effect since the portaudio library is used in any case.

EXTNR. (default: disabled) There is a special version of the WDSP library that contains additional noise reduction facilities `rnnnoise` and `libspectbleach`, see

github.com/vu3rdd/wdsp. If you have such a version of WDSP installed,

these extended noise reduction facilities can be used with piHPSDR if the EXTNR option is active.

SERVER. (default: disabled) This is not yet completed but is mentioned here anyway. There are plans to have a client/server model in piHPSDR such that you can have a „distant” radio with a computer running piHPSDR connected to that radio, and a „local” computer running piHPSDR, and an internet connection between the two computers. All the time-critical data exchange happens between the „distant” radio and the „distant” computer using a straight internet cable connection, while the user interface data is exchanged between the two copies of piHPSDR running on the two computers.

Appendix G

RaspPi: Activating the I2C interface

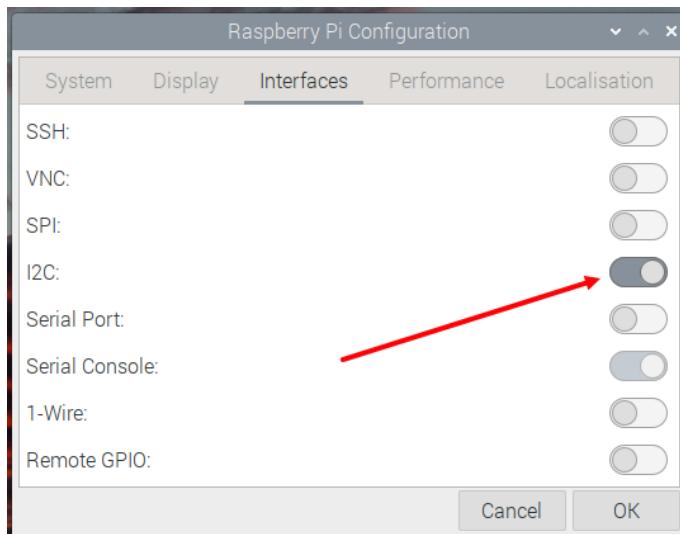


Fig. G.1: Enabling the I2C controller.

If you want to use the Controller2 or the G2 frontpanel controller, the Raspberry Pi I2C interface must be enabled. This is done by opening **Menu→Preferences→ Raspberry Pi Configuration** and moving to the **Interfaces** tab (shown in Fig. G.1. In the I2C line, move the button to the right (marked by the red arrows) and restart the computer. Do not

change the buttons in the other lines, the need not be as shown here.

Appendix H

Binary installation of piHPSDR (RaspPi only)

This procedure has been tested on a Pi 4B, with a fresh and plain vanilla operating system (32-bit „BullsEye”, released May 3rd 2023, Kernel version 6.1) obtained from

<https://www.raspberrypi.com/software/operating-systems/>.

For new-bees, an easy binary-only installation is provided. This binary has the following properties:

- It runs on a 32-bit Raspberry Pi OS, currently the ”bullseye” version.
- It has the GPIO, MIDI, SATURN options activated, and it uses the ALSA audio module. So it does *not* use PulseAudio which means you cannot send RX audio to HDMI monitors. See Appendix F for a detailed description of the compile time options. If you want another set of options, you have to compile from the sources.

The following *caveat* applies both to the binary installation and the compilation from the source code: If you want to use the Controller2 or the G2 frontpanel controller, the Raspberry Pi I2C interface must be enabled, as described in Appendix G.

If the program does not start

Binary installation means that the executable program has been compiled and linked on my machine, while it is intended to run on your machine. Because Linux heavily uses so-called shared libraries, the program can only run if the shared libraries that the executable depends on are present (and can be found) on your machine, and that the version numbers of the libraries are compatible. If piHPSDR does not start, and instead you find in the log file (for binary installations: in the directory `pihpsdr.release` in your home directory) a message stating a missing library, then you *have to* jump to the next appendix and compile from the sources, simply because the operating system on your RaspPi is too different from the operation system on my machine at the time I produced the binary.

Before you shout at me, because your most-wanted compile time option is deactivated in the binary installation, let me explain that I want to satisfy the maximum number of people but with minimum complexity in the installation process. Things such as using SoapySDR devices, or using PulseAudio, involve heavy installation work (special libraries, etc. etc.) that make the installation more complicated. So the decision was to offer a binary installation on *as is* basis, and refer to compilation from the sources (explained in Appendix I) for every feature beyond.

Administrator privileges on RaspPi systems

The installation procedure depends on that you can execute „sudo” commands in a terminal window. On a Raspberry Pi this should not be a problem, since the user account that you created during installation will have administrator privileges by default.

Probably the easiest way do download the binary installation file `pihpsdr.tar` is to clone the complete repository (as you would also do it for an installation from source code) since the binary installation file is contained therein. So open a terminal window. If you do so, you get a prompt and are in your

home directory. It is assumed that no directory named `pihpsdr` exists. If it does, and if you are a new-bee, then this is likely a left-over from some previous attempt to install the program and then it should be deleted.

again assuming that no file or directory named `JUNK` exists (if so, just replace this name by another one). But look, if you are a new-bee, then most likely these last two commands are not necessary since why should a `pihpsdr` directory exist at top level in your home directory?

The binary installation is then done via the following commands, which have to be typed in exactly as given here:

```
git clone https://github.com/dl1ycf/pihpsdr
cd pihpsdr
git checkout RELEASE-2.2-DL1YCF
cd release
tar xvf pihpsdr.tar
pihpsdr/install.sh
```

— Release and Development version —

You can leave out the command starting with `git checkout`, then you will get the latest (development) version. Because this is updated very frequently, it contains errors from time to time which will be normally corrected very quickly, but you could simply fall into this pit. Checking out the `RELEASE-2.2-DL1YCF` release version is safer since this is more stable, and will only be updated for simple bug fixes. New features will be included and accumulated in the development branch until eventually a new release (with version 2.3) is made in the future.

The last command (`install.sh`) takes some time (depending on the speed of your internet connection), since a lot of software need be installed that piHPSDR depends on. At the end, a piHPSDR desktop icon should appear. In principle, you can start piHPSDR now by double-clicking the icon. However (at least on my test system) I get always asked *how* I want to start the program (right away, in a terminal window, etc.). To get rid of this question, open the file manager and go to `Edit→Preferences` (Fig. H.1). Activate the check box where it is indicated by the red arrow and that's it.

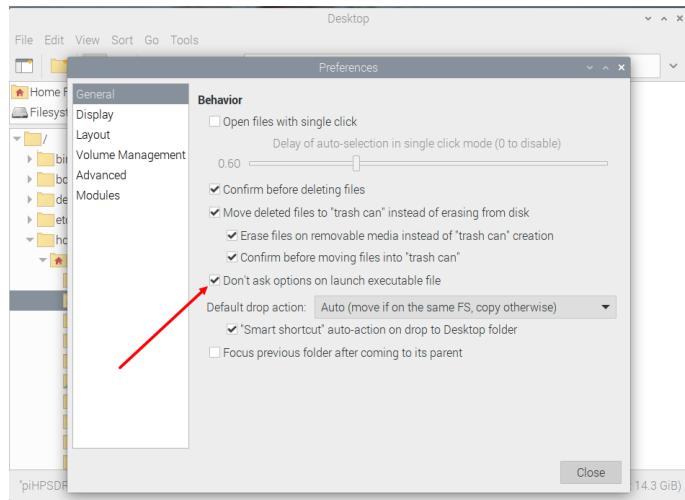


Fig. H.1: Suppress being asked options when clicking the piHPSDR desktop icon.

Note: Immediately after running the install script, the piHPSDR desktop icon looks quite generic and does not show the HPSDR logo. Log out and then log in again and the logo is there.

Appendix I

Installation of piHPSDR from the sources (Linux, RaspPi)

This procedure has been tested on a Pi 4B, with a fresh and plain vanilla operating system (32-bit „BullsEye”, released May 3rd 2023, Kernel version 6.1) obtained from

<https://www.raspberrypi.com/software/operating-systems/>.

Installation from the sources is the preferred way of installing piHPSDR, for the following reasons

- You get binaries that exactly „fit” to your operating system, it is not important which version of the operating system you use.
- The procedure is the same for 32-bit and 64-bit systems, so it does not matter which of the two variants you run.
- For all the compile time options (see Appendix F) you can individually choose whether you want to activate or deactivate this option.
- This implies that if you want to use SoapySDR devices (like the Adalm Pluto or RTL SDR sticks), or if you want to use PulseAudio as the backend for local RX audio, you *have to* compile from the sources, since these compile time options are not activated in the binary installation package.

The following *caveat* applies both to the binary installation and the compilation from the source code: If you want to use the Controller2 or the G2 frontpanel controller, the Raspberry Pi I2C interface must be enabled, as described in Appendix G.

— Administrator privileges on Linux systems —

The whole installation procedure depends on that your user account is an administrator account, such that you can execute „sudo” commands in a terminal window. Some Linux distributions maintain a „sudoers” file where users that are allowed to execute administrative task via the **sudo** program are listed. In normal cases (you own the computer and/or have installed the Linux operating system) you should have administrator privileges.

On a RaspBerry Pi, the user account that you created during installation will have administrator privileges by default, so you can execute **sudo** commands without being asked a password.

To install from the sources, open a terminal window. If you do so, you get a prompt and are in your home directory. It is assumed that no directory named **pihpsdr** exists. If it does, then this is likely a left-over from some previous attempt to install the program and then it should be moved elsewhere, since it may contain files with saved preferences (*.props) which you may want to re-use.

The piHPSDR repository is downloaded, and support libraries are installed, with the commands

```
git clone https://github.com/dl1ycf/pihpsdr  
cd pihpsdr  
git checkout RELEASE-2.2-DL1YCF  
LINUX/libinstall.sh
```

— Release and Development version —

You can leave out the command starting with `git checkout`, then you will get the latest (development) version. Because this is updated very frequently, it contains errors from time to time which will be normally corrected very quickly, but you could simply fall into this pit. Checking out the `RELEASE-2.2-DL1YCF` release version is safer since this is more stable, and will only be updated for simple bug fixes. New features will be included and accumulated in the development branch until eventually a new release (with version 2.3) is made in the future.

Depending on the internet speed (and the speed of your SD card or hard disk), the first and the last command may take some time. The first command loads the complete piHPSDR repository from my github account. The last command (`libinstall.sh`) contains all the magic, it not only loads all required RaspberryPi OS packages, but also loads and installs further libraries piHPSDR depends on, such as the WDSP library, and the SoapySDR library as well as SoapySDR modules for the Adalm Pluto and RTL SDR sticks.

Note. The SoapySDR library, and all SoapySDR modules, must be compiled from the sources (and the `libinstall.sh` script does so). The reason is, that SoapySDR in the standard repository is quite outdated (version 0.7) while piHPSDR requires a more recent version (0.8) because the SoapySDR API has changed from 0.7 to 0.8.

The `libinstall` procedure also does some other things for you, including creating a desktop icon for piHPSDR. If you are on a Desktop PC running LINUX, you will get error messages about libraries such as `libgpiod` that are missing in the repository, which you can ignore.

Note: If you install on a Desktop PC running LINUX, or if you are on a RaspPi but use the GPIO I/O lines for some other purpose, you must de-activate the GPIO compile time option first, as described in Appendix F.

It is clear that double-clicking the piHPSDR desktop icon at this stage leads nowhere, since first you need to compile the program. However, this is simply done by the three commands

```
cd $HOME/pihpsdr
make clean
```

make

and that's it! The first two commands are even not necessary (since you are in the pihpsdr directory at that point, and since there is nothing to be cleaned up). But if you make changes (e.g. changing the compile time options as described in Appendix F, or apply some code modifications) and want to recompile later, this sequence is the safest way to create a new binary, namely go to the pihpsdr directory, clean up, and recompile.

At this stage, double-clicking the piHPDSR desktop icon should start the program. See the end of Appendix H how to get rid of a window popping up and asking you how to execute the program.

Checking the SoapySDR installation. The installation of the SoapySDR core and the modules for the Adalm Pluto and for RTL SDR sticks is the most complicated task performed by the `libinstall.sh` command. Although I tried hard to let everything be done auto-magically, you may want to check if everything went well. If not, and if you do not plan to activate the SOAPYSDR compile time option, you can simply ignore this. To check the SoapySDR installation, open a new terminal window and just type the command (be careful to use the correct capitalization!)

SoapySDRUtil -info

On my test system, this command produced the following output:

```
#####
##   Soapy SDR -- the SDR abstraction library   ##
#####

Lib Version: v0.8.1-gbb33b2d2
API Version: v0.8.200
ABI Version: v0.8-3
Install root: /usr/local
Search path: /usr/local/lib/arm-linux-gnueabihf/SoapySDR/modules0.8-3
Module found: /usr/local/lib/arm-linux-gnueabihf/SoapySDR/modules0.8-3/libPlutoSDRSupport.so (0.2.1-b906b27)
Module found: /usr/local/lib/arm-linux-gnueabihf/SoapySDR/modules0.8-3/librtlsdrSupport.so (0.3.3-068aa77)
Available factories... plutosdr, rtlsdr
Available converters...
- CF32 -> [CF32, CS16, CS8, CU16, CU8]
- CS16 -> [CF32, CS16, CS8, CU16, CU8]
- CS32 -> [CS32]
- CS8 -> [CF32, CS16, CS8, CU16, CU8]
- CU16 -> [CF32, CS16, CS8]
- CU8 -> [CF32, CS16, CS8]
- F32 -> [F32, S16, S8, U16, U8]
- S16 -> [F32, S16, S8, U16, U8]
- S32 -> [S32]
- S8 -> [F32, S16, S8, U16, U8]
- U16 -> [F32, S16, S8]
- U8 -> [F32, S16, S8]
```

(Sorry for the tiny font, I did not want to wrap output lines.) Note the API/ABI version (0.8). If you see 0.7 then you probably have installed

SoapySDR on your computer from the standard repositories, and this is not going to work. The `libinstall.sh` command has been designed to work (and has been tested on) a plain vanilla operating system, not on a „spoiled” one where the user has manually installed additional software packages that may induce incompatibilities. The best way out of such a problem is to re-install Linux (on a RaspPi, simply use a new SD card to do so).

Appendix J

Installation of piHPSDR from the sources (MacOS)

This procedure has been tested on a fairly recent MacBookAir (2020 model, M1 Silicon CPU, running MacOS Ventura 13.5.2) and on old iMac (late 2013 model, Intel CPU, running MacOS Catalina 10.15.7. For the old iMac the installation procedure takes very long, because most of the HomeBrew packages are no longer available in pre-compiled form and have to be compiled from the sources – but it works!

If you want to run piHPDSR on an Apple Macintosh computer (iMac, Mac Mini, iBook Air, PowerBook), then you *have to* compile from the sources. The author personally uses piHPSDR on an iMac, and would like to provide piHPSDR as a program that you simply copy on your computer and double-click. However, this is rather involved for an application built upon the GTK graphical user interface. If you know how to do this, any help is welcome. But for the time being, compiling from the sources is the only option.

A note on administrator privileges

The whole installation procedure depends on that your user account is an administrator account, such that you can execute „sudo” commands in the terminal window. You may be asked the administrator password. If your user account does not qualify for administrator work, then you are simply not allowed to install the „HomeBrew” universe which is the prerequisite for compiling piHPSDR. In normal cases (you own the Mac) you should have administrator privileges.

I still do not know whether this is necessary or not, but the recommendation is to start installing an X Window manager on the Macintosh. To the end, in a web browser open the link

www.xquartz.org

and install the most recent package file found there. At the time of this writing, this is version 2.8.5 released in January 26, 2023. The package is good both for Intel and Silicon Macs. Download the package file (e.g. XQuartz-2.8.5.pkg) to your desktop and run it by double-clicking.

Compiling piHPSDR on a Mac requires some basic LINUX/Unix skills. The most important program to use is the Terminal application (`Terminal.app`), that can be found in the Utilities folder that resides in the Applications folder. It is suggested to drag this application into the „dock” so you have quick access. Although MacOS has a complete Unix „under the hood”, one needs additional software to do Linux-style programming. The most popular such „Unix enabler” packages are `MacPorts` and `HomeBrew`, I am using `HomeBrew` but I know that piHPSDR can be compiled and run successfully with `MacPorts` as well. The deal is as simple as follows: if you use `MacPorts` then you are on your own, or have to rely on piHPSDR installations done by the `MacPorts` folks. For `HomeBrew`, I provide semi-automatic installation scripts that do all the complicated stuff for you.

To install from the sources, open a terminal window. If you do so, you get a prompt and are in your home directory. It is assumed that no directory named `pihpsdr` exists. If it does, then this is likely a left-over from some previous attempt to install the program and then it should be moved elsewhere, since it may contain files with saved preferences (`*.props`) which you

may want to re-use.

The piHPSDR repository is downloaded, and support libraries are installed, with the commands

```
git clone https://github.com/dl1ycf/pihpsdr
cd pihpsdr
git checkout RELEASE-2.2-DL1YCF
MacOS/libinstall.sh
```

— Release and Development version —

You can leave out the command starting with `git checkout`, then you will get the latest (development) version. Because this is updated very frequently, it contains errors from time to time which will be normally corrected very quickly, but you could simply fall into this pit. Checking out the `RELEASE-2.2-DL1YCF` release version is safer since this is more stable, and will only be updated for simple bug fixes. New features will be included and accumulated in the development branch until eventually a new release (with version 2.3) is made in the future.

The last command starts with installing Apple's command line tools, in particular the Apple C and C++ compilers. You may get an error message from `xcode-select` that the tools are already installed, which you can safely ignore. Then, the `HomeBrew` universe is installed, and the installation starts with asking you for the administrator password, tells you what it wants to do and requires hitting `Enter` to proceed. On Apple Silicon Macs, you will be asked the administrator password another three times, since here we have to create three symbolic links in `/usr/local` (see the end of this section), each of which requires administrator privileges.

Do not worry if `HomeBrew` was already installed on your computer, the installation procedure works in this case as well and does no harm. In addition to the `HomeBrew` core, additional libraries that piHPSDR depends on (e.g. GTK+3), the SoapySDR core and SoapySDR modules for several radios are installed. The WDSP library is also downloaded, compiled, and stored as `/usr/local/lib/libwdsp.dylib`.

In case something went wrong, or simply to check that **HomeBrew** has been correctly installed, open a *new* terminal window and type the command

brew config

This should give you lots of information on the currently installed version of **HomeBrew**, but also on the CPU of your machine, the compilers and MacOS version info, etc. If the command fails stating that the "brew" command has not been found, something is wrong, since the automatic installation procedure should have taken care to update your shell profiles such that the "brew" command is found. This is the reason why you have to open a new terminal window to make this test, since in the originally opened window the update of the command search path is not yet effective.

If you want to use SoapySDR, please check the Soapy installation. Open a new terminal window and simply type the command (be careful to use the correct capitalization!)

SoapySDRUtil -info

On my test system, this command produced the following output:

```
#####
##   Soapy SDR -- the SDR abstraction library  ##
#####

Lib Version: v0.8.1-release
API Version: v0.8.0
ABI Version: v0.8
Install root: /usr/local
Search path: /usr/local/lib/SoapySDR/modules0.8
Module found: /usr/local/lib/SoapySDR/modules0.8/libblackRFSupport.so    (0.3.3)
Module found: /usr/local/lib/SoapySDR/modules0.8/libMS7Support.so    (20.10.0)
Module found: /usr/local/lib/SoapySDR/modules0.8/libplutoSDRSupport.so (0.2.1)
Module found: /usr/local/lib/SoapySDR/modules0.8/libRedPitaya.so    (0.1.1)
Module found: /usr/local/lib/SoapySDR/modules0.8/libairspySupport.so (0.2.0)
Module found: /usr/local/lib/SoapySDR/modules0.8/libairspyrhfSupport.so (0.2.0)
Module found: /usr/local/lib/SoapySDR/modules0.8/librtlsdrSupport.so (0.3.2)
Available factories... airspy, airspyrhf, blackrf, lime, plutosdr, redpitaya, rtlsdr
Available converters...
- CF32 -> [CF32, CS16, CS8, CU16, CU8]
- CS16 -> [CF32, CS16, CS8, CU16, CU8]
- CS32 -> [CS32]
- CS8 -> [CF32, CS16, CS8, CU16, CU8]
- CU16 -> [CF32, CS16, CS8]
- CU8 -> [CF32, CS16, CS8]
- F32 -> [F32, S16, S8, U16, U8]
- S16 -> [F32, S16, S8, U16, U8]
- S32 -> [S32]
- S8 -> [F32, S16, S8, U16, U8]
- U16 -> [F32, S16, S8]
- U8 -> [F32, S16, S8]
```

In contrast to the RaspPi installation, SoapySDR is already at version 0.8 in the **HomeBrew** repository so the modules can very simply be installed and need not be compiled from the sources. I have added (as you can see) support for

quite a few SoapySDR radios, and most likely even more SoapySDR modules are available in the [HomeBrew](#) repository.

If anything went wrong with the SoapySDR installation, you can safely ignore this if you do not plan to compile piHPSDR with the SOAPYSDR option. You also do not need to manually disable the GPIO option since on MacOS, the GPIO and SATURN options do not apply and are automatically deactivated. Without changing the compile time options (see Appendix F) the MIDI option is the only one you get on MacOS.

Compiling the program then only requires three commands

```
cd $HOME/pihpsdr
make clean
make app
```

and that's it! The first two commands are even not necessary at this point, since you are in the pihpsdr directory at that point, and since there is nothing to be cleaned up. But if you make changes in the future (e.g. changing the compile time options as described in Appendix F, or apply some code modifications) and want to re-compile later, this sequence of commands is the safest way to create a new binary.

Note that saying `make app` instead of just saying `make` has the bonus that a MacOS „app” bundle is automatically created within the piHPSDR directory. You can drag this bundle in the Finder, say, from the piHPSDR directory in your home directory, to the Desktop, this can also be accomplished with the additional command

```
mv pihpsdr.app $HOME/Desktop
```

(take care that any older piHPSDR application on the Desktop is moved or deleted first).

A note on Macs with Apple Processors

On Mac computers with Intel processors, HomeBrew is installed in `/usr/local`, while on Mac computers with Silicon (M1, M2, M2 pro) processors, it is installed in `/opt/homebrew`. However, the WDSP library is not aware of this and installs its library and include file as `/usr/local/lib/libwdsp.dylib` and `/usr/local/include/wdsp.h`. There is nothing wrong with this, but on a Silicon Mac `/usr/local` may not contain any sub-directories. Therefore, the installation procedure, after completing the HomeBrew installation, looks whether certain directories exist in `/usr/local` and, if not, places symbolic links there that point to

<code>/usr/local/lib</code>	\rightarrow	<code>/opt/homebrew/lib</code>
<code>/usr/local/include</code>	\rightarrow	<code>/opt/homebrew/include</code>
<code>/usr/local/bin</code>	\rightarrow	<code>/opt/homebrew/bin</code>

This also solves many problems with compiling packages, since the directories in `/usr/local` are usually in the standard compiler search paths, while `/opt/homebrew` is not.