AE 737: Mechanics of Damage Tolerance

Lecture 4 - Curved Boundaries

Dr. Nicholas Smith

Wichita State University, Department of Aerospace Engineering

27 January 2022

1

schedule

- 27 Jan Curved Boundaries, HW 1 Due
- 1 Feb Plastic Zone
- 3 Feb Plastic Zone, HW 2 Due, HW 1 Self-grade due
- 8 Feb Fracture Toughness

outline

- compounding
- curved boundaries
- stress concentration factors

3

supplemental material

- I was unable to find the source for all of Dr. Horn's formulas, but I have made an alternate set of equations (taken from the AFGROW user's manual) available on Blackboard under supplemental material.
- Can also be found here¹

¹http://ndaman.github.io/damagetolerance/classdocs/Sec11_31.pdf

compounding

superposition vs. compounding

- In this course, we use superposition to combine loading conditions
- We use *compounding* to combine edge effects
- Both are very powerful tools and important concepts

compounding

- Different types of boundaries create different correction factors to the usual stress intensity factor
- We often use β to indicate the total correction factor
- When multiple boundaries are present, we can combine them into one effective correction factor
- There are two general methods we use to create a compound correction factor

6

method 1

- The first method uses linear superposition, and thus is restricted to cases where the effect of each boundary can be assumed to add linearly
- While in most cases this is not strictly true, it provides a reasonable approximation

$$K_r = \bar{K} + \sum_{i=1}^N (K_i - \bar{K})$$

7

Where N is the number of boundaries, K
 is the stress
 intensity factor with no boundaries present and K
 is the
 stress intensity factor associated with the ith boundary.

8

method 1

We can rewrite this equation as

$$K_r = \sigma \sqrt{\pi a} \beta_r = \sigma \sqrt{\pi a} + \sum_{i=1}^{N} (\sigma \sqrt{\pi a} \beta_i - \sigma \sqrt{\pi a})$$

• Which leads to an expression for β_r as

$$\beta_r = 1 + \sum_{i=1}^N (\beta_i - 1)$$

method 2

 An alternative empirical method approximates the boundary effect as

$$\beta_r = \beta_1 \beta_2 ... \beta_N$$


If there is no interaction between the boundaries, method
 1 and method 2 will give the same result

10

p. 68 - example 1

- A crack in a finite-width panel is centered between two stiffeners
- Assume the β correction factor for this stiffener configuration is $\beta_s = 0.9$
- Assume the β correction factor for this finite-width panel is $\beta_{\rm w}=1.075$
- Use both compounding methods to estimate the stress intensity
- How accurate do you expect this to be?


p. 69 - example 3



b=1 inch


12

group 1



b = 0.4 inches


group 2




b=0.4 inches Hole diameter is 0.5 inches and spaced 0.5 inches away from the crack tip

14

group 3

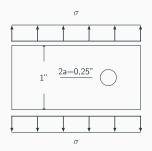

Hole diameter is 0.5 inches and spaced 0.5 inches away from the crack tip

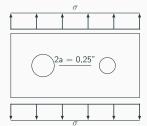

The right crack tip is 0.5 inches away from a 0.5 inch diameter hole and the left crack tip is 0.25 inches away from a 1 inch diameter hole.

16

errata and supplemental charts

textbook notes

- on p. 64 there is a + missing between two terms, see
 Lecture 2 for the fix
- Also on p. 64, in equation 29 it is not clear, but use the f_w from a previous equation, on p. 56
- Some of the black and white figures can be difficult to use, we have scanned and re-created the plots online
- Interactive versions of compounding figures from p. 50, 71-73 can be found at here²

17

finite height - p. 50

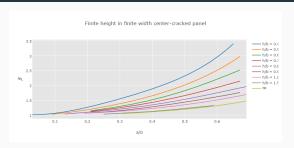


Figure 1: beta for finite height effects, see text p. 50 or interactive chart linked in previous slide

²../examples/Compounding%20Figures.html

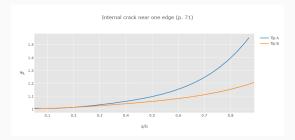


Figure 2: beta for offset internal crack, see text p. 71 or interactive chart linked previously

19

crack near hole - p. 72

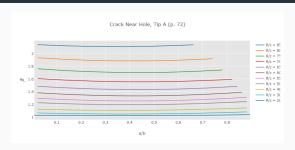


Figure 3: beta for the crack tip farther away from a hole, see text p. 72 or interactive chart linked previously

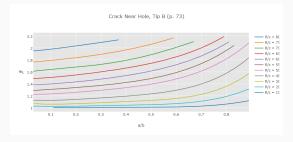


Figure 4: beta for the crack tip closer to a hole, see text p. 73 or interactive chart linked previously

2

curved boundaries

short cracks on curved boundaries

- For short cracks, we can use the stress concentration factor on a curved boundary to determine the stress intensity factor
- The stress concentration factor only gives the maximum stress at the curved boundary, thus the longer the crack is, the farther away from the curved boundary (and maximum stress) it is.
- Stress concentration factors can be found: pp. 82-85 in the text
- Also see supplemental text on Blackboard or here³


22

short cracks on curved boundaries

- Suppose we want to determine the stress intensity on a panel, panel B
- We find a similar panel with a known stress intensity factor, panel A
- We adjust the applied load on panel A such that $K_{LA} = K_{LB}$
- The magnitude of this load adjustment is determined using the stress concentration factors in panels B and A Note: the notation: K_t for stress concentration factor, K_I for stress intensity factor

³classdocs/stress concentrations.pdf

short cracks on curved boundaries

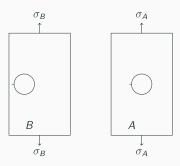

24

short cracks on curved boundaries

- Since A is a fictional panel, we set the applied stress, σ_A such that

$$\sigma_{max,B} = \sigma_{max,A}$$

• Substituting stress concentration factors

$$K_{t,B}\sigma_B = K_{t,A}\sigma_A$$

• Solving for σ_A

$$\sigma_A = \frac{K_{t,B}}{K_{t,A}} \sigma_B$$

short cracks on curved boundaries

• Since the crack is short and $\sigma_{max,A} = \sigma_{max,B}$ we can say

$$\begin{aligned} K_{I,B} &= K_{I,A} \\ &= \sigma_A \sqrt{\pi c} \beta_A \\ &= \frac{K_{t,B}}{K_{t,A}} \sigma_B \sqrt{\pi c} \beta_A \end{aligned}$$

26

example 6 (p. 86)

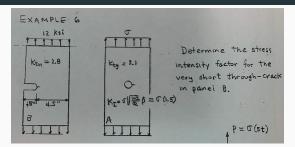



Figure 5: See p. 86, there is a short through crack on the edge of a 0.5" deep notch on a 5 inch wide panel with a remote 12 ksi stress applied. The net section stress concentration factor is 2.8, while the global stress concentration factor for a similar panel with a hole is

long cracks on curved boundaries

- As a crack becomes very large, the effect of the curved boundary diminishes
- We find expressions for β_L (long crack) and β_S (short crack)
- We connect β_S to β_L using a straight line from β_S to a tangent intersection with β_I

28

long cracks on curved boundaries

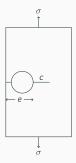


example

■ Example here⁴

30


group one



- c = 0.75, e = 2.25, r = 0.5
- assume a is short and calculate β for this case
- calculate in terms of β for known state

^{4../}examples/Long%20Cracks%20on%20Curved%20Boundaries.html


group two

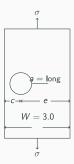

- c = 0.75, e = 2.25, r = 0.5
- assume a is long and calculate β for this case
- calculate in terms of β for known state


32

group three



- c = 0.75, e = 2.25, r = 0.5
- assume a is short and calculate β for this case
- calculate in terms of β for known state

group four



- c = 0.75, e = 2.25, r = 0.5
- assume a is long and calculate β for this case
- calculate in terms of β for known state

34

discussion

Draw a sketch to show how we could use this method to find cracks of intermediate length near a curved boundary

stress concentration factors

centered hole tension - p. 82


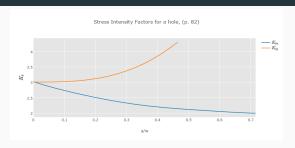


Figure 6: A plot of stress concentration factors near a hole, see text p. 82 or the interactive plots linked in the last slide.

 K_{tg} uses stress for the cross-sectional area if no hole was present, K_{tn} uses stress at the net section (subtracting hole

off-center hole tension - p. 83

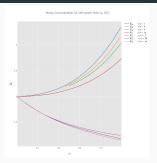

 $K_{\rm tg}$ uses stress for the cross-sectional area if no hole was present, $K_{\rm tn}$ uses stress at the net section (subtracting hole area). c is the distance from the closest edge to the center of

bending of a bar with u-shaped notch - p. 84


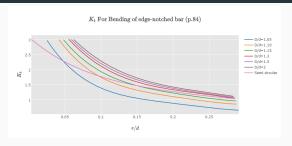


Figure 7: A plot of stress concentration factors in a bar with a u-shaped notch, see text p. 84 or the interactive plots linked in the last slide.

38

37

tension of a stepped bar with shoulder fillets - p. 85

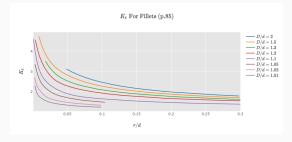

D is the larger width (before the step), d is the width after the step. Nominal stress is $\sigma_{nom} = P/hd$, where h is specimen thickness. r is the fillet radius.

interactive page

• An interactive page with these plots can be accessed here⁵

39

⁵../examples/Stress%20Concentration%20Factors.html