
MM7D Air quality measuring device

Technical manual

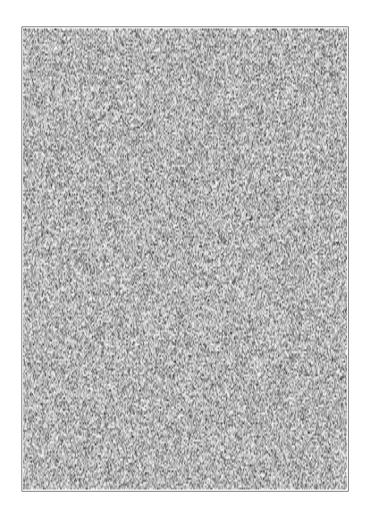

Hardware version: v200620 Software version: v0.1 Technical manual version: v1.0 Issue date: 2020.06.20. Draw number: 59/12/1

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	1/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

Content

I. Hardware	3
1. Technical data	4
2. General description	
3. Schematic and PCB draws	
4. Other draws and documents	
5. Terms of use	
6. Look of unit	
a) Manuals and connectors	
b) Internal construction	
c) Pinout of connectors	
7. Downloadable documentation	
II. Software	
1. General description	8
2. Setup	8
3. Installation	8
4. Using the device	8
a) Data set and retrieval via HTTP	8
b) Connect to console via serial port	10
5. Check operation	11
6. Terms of use	11
III. Related links	13
1. Hardware and software	14
2. Terms of use	
3. Developer and manufacturer	
IV. Annexes	15
Content	16

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	2/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

I. Hardware

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	3/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

1. Technical data

Supply voltage: 5 V DC

Supply current: max. 1 A

Isolation class: Class II

Mechanical size: $71 \times 71 \times 27 \text{ mm}$

IP protection: IP 20

Mass of cover: termoplast (ABS)

Communication: Wireless LAN,

TTL 3.3V serial port

Getting data: via HTTP

Administration: via serial connection

2. General description

This device can measure temperature and humidity of growing house air, and detect some unwanted gas (CO2, NH3, NOx, alcohol, benzene etc.) and smoke, and has got three different color status LED. The measured values can be queried and LEDs can be turn on and off via wireless network via HTTP. The device requires 5V DC supply voltage.

3. Schematic and PCB draws

The wiring diagrams of the device is shown in Annex 1, PCB draws are in Annex 2-4. You can download it as part of the complete documentation or in separate PDF, SVG and KiCAD formats from the developer/manufacturer's website. The Gerber files needed for production are included in the package.

4. Other draws and documents

Documentation package contents mechanical draw of used box in PDF and drilling draws in PDF and DXF format.

5. Terms of use

Hardware documentation can be modified and/or redistributed under the Creativ Commons 4.0 Attribution Non-Commercial (CC-BY-NC-4.0) License. You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	4/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

6. Look of unit

a) Manuals and connectors

- 1. POWER signal light (white LED)
- 2. ACT signal light (blue LED)
- 3. STATUS signal light (green LED)
- 4. STATUS signal light (yellow LED)
- 5. STATUS signal light (red LED)
- 6. Power supply connector (P1)
- 7. Console connector (P2)

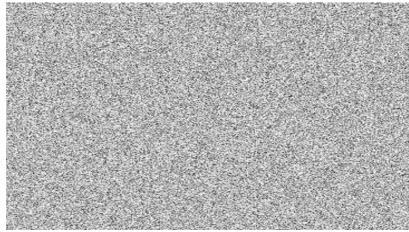


Figure 1: Manuals and connectors

b) Internal construction

- 1. ESP 8266 Huzzah Breakout microcontroller (U101)
- 2. DHT11 sensor (U103)
- 3. MQ-135M sensor (U102)
- 4. Power voltage connector (P1)
- 5. Console connector (P2)

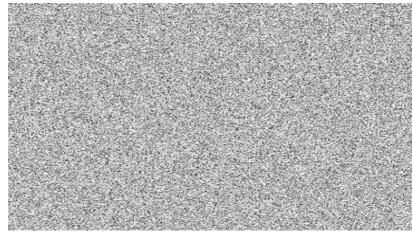


Figure 2: Internal construction

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	5/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.


c) Pinout of connectors

connector	pin	function	note
D1	center	+ 5 V supply voltage input	ø 5.5/2.1 mm
P1	shield	GND	power connector
	2	serial port RXD	
P2	3	serial port TXD	DB9F
	5	GND	

7. Downloadable documentation

The complete documentation of the hardware in the .tar.gz format compressed file can be downloaded from the manufacturer's website or Github. (Refer to Chapter III for references.) Name of package is: *mm7d-200620-0.1-1.0.tar.gz*.

Content of package - only important files:

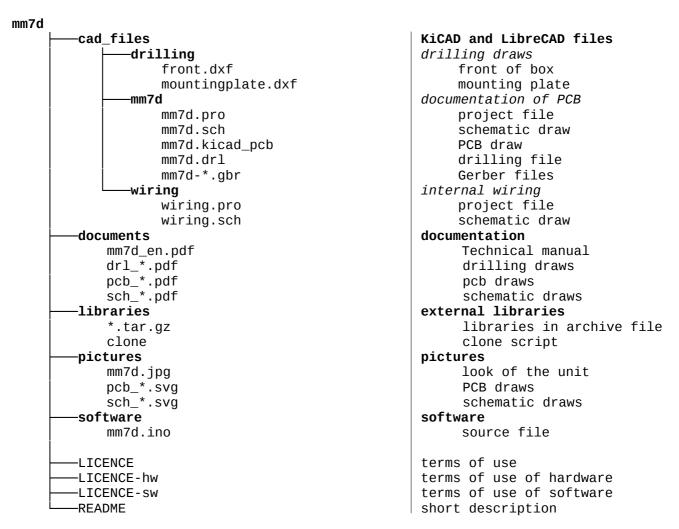

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	6/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

II. Software

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	7/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

1. General description

The device measures three characteristics of the air, which can be queried remotely and it has got three status LED, which can be set remotely.

The program displays initialization steps and error messages on the serial console.

When an HTTP request is received, the client's IP address and username / password arguments are checked. If appropriate, perform a measurement or turn the status LEDs on / off. After displays the result on the web interface. Incoming requests are indicated by the flashing of the blue activity LED.

2. Setup

You can found source file of software in *software* directory. Before installing the program, you need to set these values:

```
// settings
const char* wifi_ssid = "";
const char* wifi_password = "";
const String www_username = "";
const String allowedaddress = "";
```

3. Installation

Use a serial cable and Arduino IDE software to install program to microcontroller. Before installation procedure unpack required libraries from *libraries* directory or clone from Github.com to ~/Arduino/libraries/.

4. Using the device

The device operates automatically does not require any human intervention.

a) Data set and retrieval via HTTP

An example for how to use arguments:

http://192.168.1.12/set/greenled/off?username=bob

URL of information and data pages:

(On next page.)

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	8/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

URL	type	description	args.
http://ipaddress/	text/html	Start and information page	
http://ipaddress/version		Get software name and version	
http://ipaddress/get/all		Get all data	
http://ipaddress/get/humidity		Get relative humidity in %	
http://ipaddress/get/temperature		Get temperature in °C	
http://ipaddress/get/unwantedgaslevel		Get rel. level of unwanted gases in %	
http://ipaddress/set/all/off	tovet/plain	Switch off all LEDs	
http://ipaddress/set/greenled/off	text/plain	Switch off green LED	username
http://ipaddress/set/greenled/on		Switch on green LED	
http://ipaddress/set/redled/off		Switch off red LED	
http://ipaddress/set/redled/on		Switch on red LED	
http://ipaddress/set/yellowled/off		Switch off yellow LED	
http://ipaddress/set/yellowled/on		Switch on yellow LED	

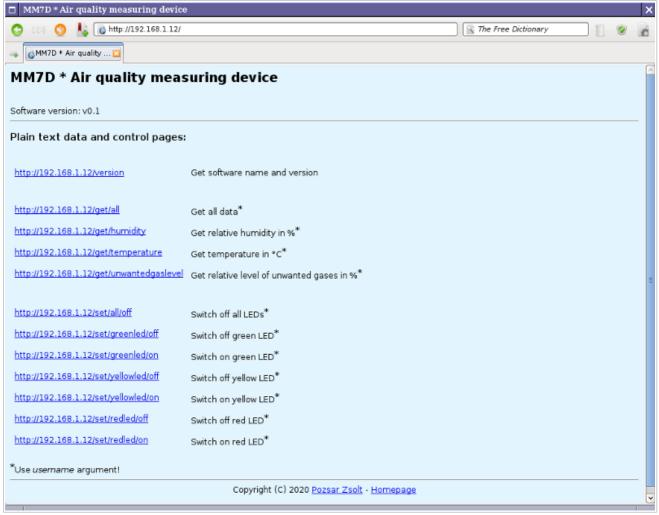


Figure 3: Start page

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	9/23	
	Technical manual					
N	lame:	Pozsár Zsolt			Date:	2020.06.20.

b) Connect to console via serial port

The console connector of the device and the RS-232 serial port of the computer must be connected by means of a level shifter adapter with a null modem cable. The level shifter adapter is required due to the different voltages of the logic levels (0 V / 3.3 V and -12 V / + 12 V).

The console connector of the device and the USB port of the computer must be connected using an Adafruit 954, FTDI TTL-232R-RPI or similar 3.3V serial / USB cable.

Connection parameters

speed (baudrate): 115 200 bps

data bits: 8
parity bit: no
stop bit: 1
flow control: no

Connect via linux terminal

Name of ports (device files):

RS-232 serial port: /dev/ttyS0, /dev/ttyS1, ...

serial/USB converter: /dev/ttyUSB0, /dev/ttyUSB1, ...

Make sure you are a member of the dialout group:

username@localhost\$ id

If not, set up your group membership:

username@localhost\$ sudo usermod -a -G dialout username

Connect with GNU Screen program:

username@localhost\$ screen port name 115200

Connect with Minicom program:

username@localhost\$ minicom -b 115200 -o -D port name

Connect with Windows terminal (Putty)

Name of ports:

RS-232 serial port: COM1, COM2, ...

serial port/USB converter: variable, see the device manager

Select the serial connection mode and communication port, set the speed and start the connection.

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	10/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

Figure 4: Serial console with messages

5. Check operation

You can check operation of controller with a web brower, use index.html in *testpage* folder or open http://szerafingomba.hu/equipments/mm7d/testpage/ url. It doesn't store any data on server.

6. Terms of use

This program is free software: you can redistribute it and/or modify it under the terms of the European Union Public License 1.1 version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

You can read the full text of the license online. (Refer to Chapter III for references.)

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	11/23
Titles:	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

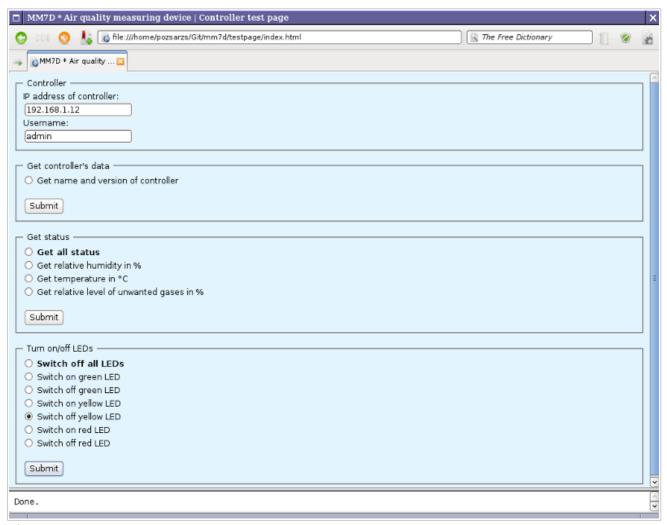


Figure 5: Test page

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	12/23
Titles:	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

III. Related links

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	13/23
Titles.	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

1. Hardware and software

Full package http://www.szerafingomba.hu/equipments/mm7d/mm7d-200620-0.1-1.0.tar.gz

Download from Github http://github.com/pozsarzs/mm7d.git

Technical manual http://www.szerafingomba.hu/equipments/mm7d/technical-manual-200620-0.1-1.0-en.pdf

Test page http://szerafingomba.hu/equipments/mm7d/testpage/

Schematic and PCB draws (PDF):

Schematics http://www.szerafingomba.hu/equipments/mm7d/sch_mm7d-1.pdf

http://www.szerafingomba.hu/equipments/mm7d/sch_mm7d-2.pdf

PCB solder side

http://www.szerafingomba.hu/equipments/mm7d/pcb_mm7d-sold.pdf

PCB component side

http://www.szerafingomba.hu/equipments/mm7d/pcb_mm7d-comp.pdf

http://www.szerafingomba.hu/equipments/mm7d/pcb_mm7d-silk.pdf

PCB silkscreen http://www.szerafingomba.hu/equipments/mm7d/pcb_mm7d-silk.pdf

2. Terms of use

CC-BY-NC-4.0 https://creativecommons.org/licenses/by-nc/4.0/legalcode

CC-BY-NC-4.0 https://creativecommons.org/licenses/by-nc/4.0/

EUPL v1.2 https://eupl.eu/1.2/en/

3. Developer and manufacturer

Homepage https://www.szerafingomba.hu

E-mail <u>info@szerafingomba.hu</u>

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	14/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

IV. Annexes

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	15/23
Titles.	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

Content


- 1. Error messages and signs
- 2. Internal wiring
- 3. Schematic of printed circuit board
- 4. PCB solder side
- 5. PCB component side
- 6. PCB silkscren

Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	16/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.


Failed to read CO ₂ sensor!	value:			
	999	yes	no	beep
Failed to read T/RH sensor!	value: 999	yes	no	beep
Authentication error!	yes	yes	no	2x beep
Not allowed client IP address!	yes	yes	no	3 x beep
	Authentication error!	Authentication error! yes	Authentication error! yes yes	Authentication error! yes yes no

Annex 1: Error messages and signs


Titles:	MM7D Air quality measuring device	Rev.:	200620	Pages:	17/23
	Technical manual				
Name:	Pozsár Zsolt			Date:	2020.06.20.

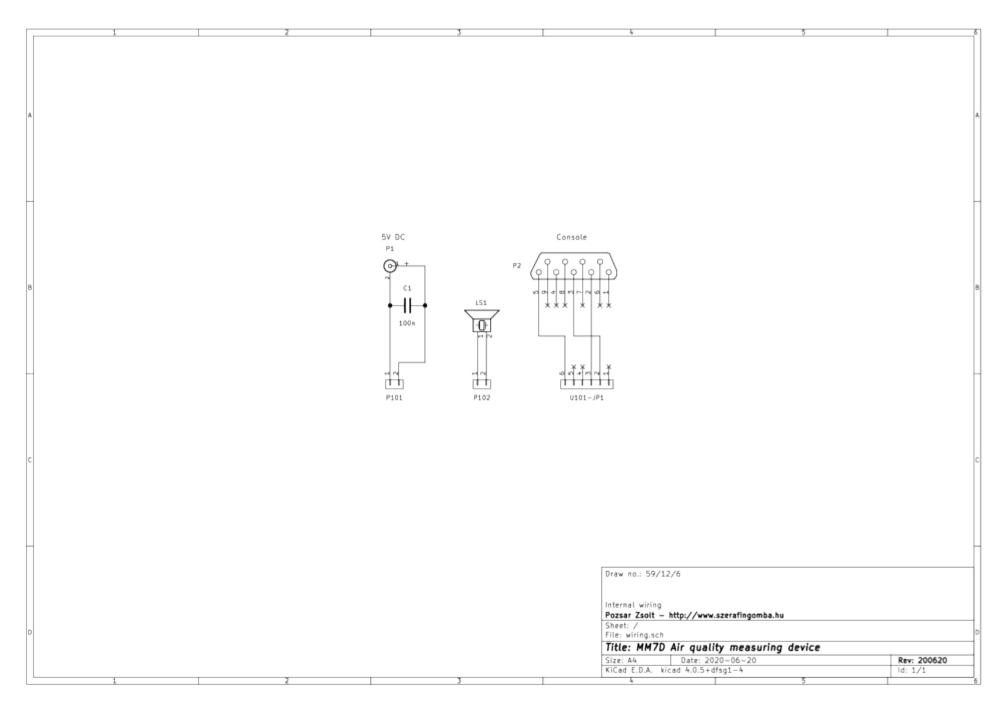


Annex 2: Internal wiring

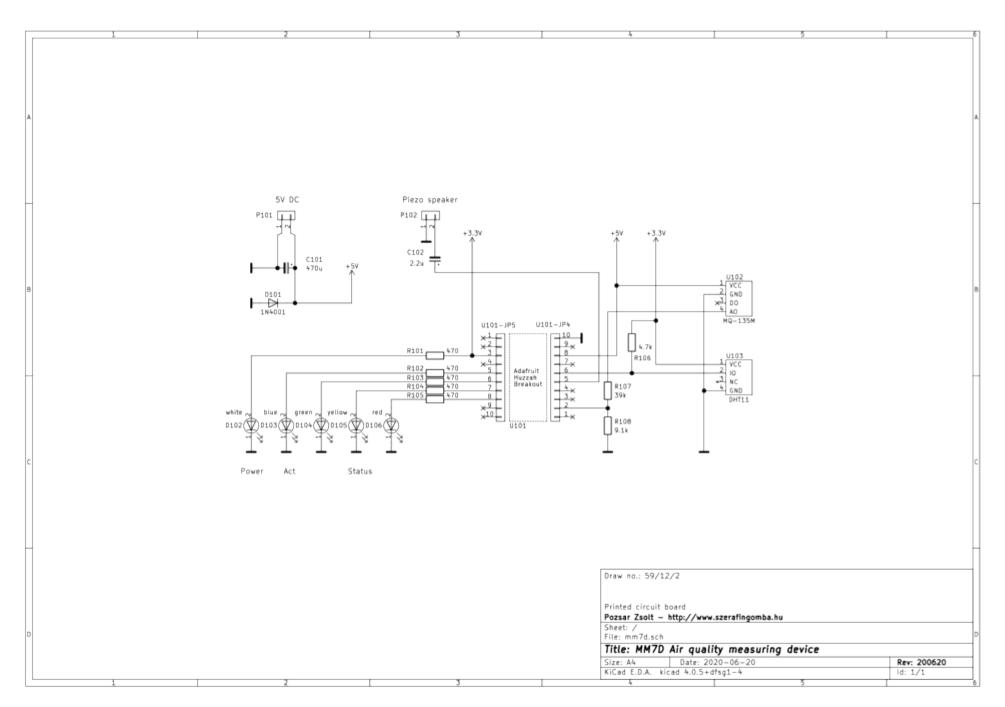

Annex 3: Schematic of printed circuit board

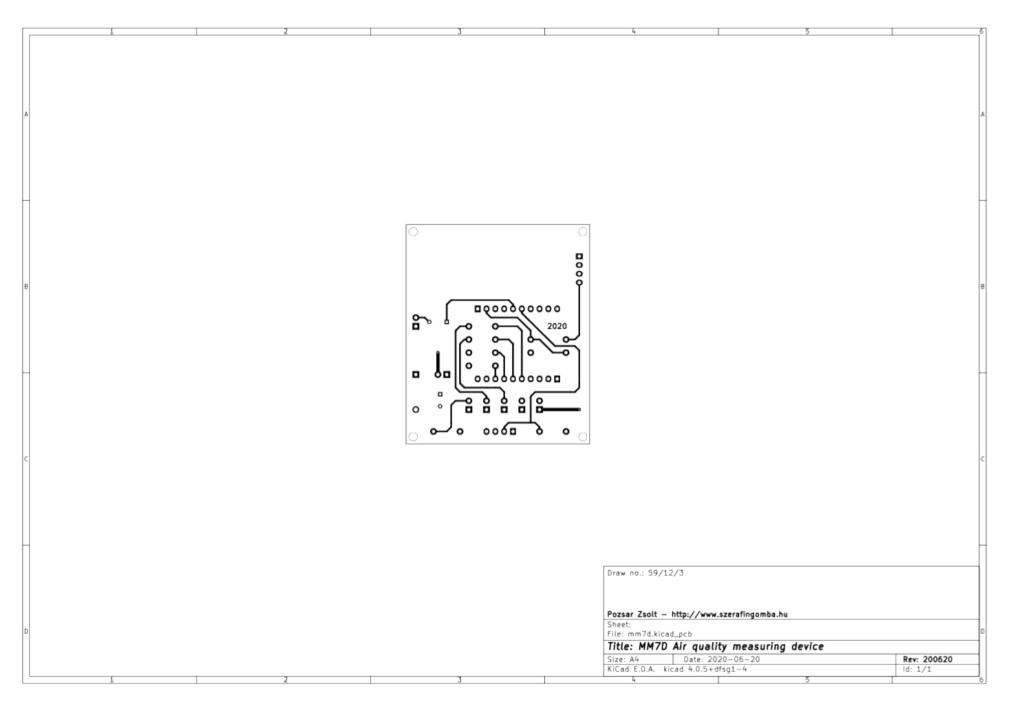

Annex 4: PCB solder side

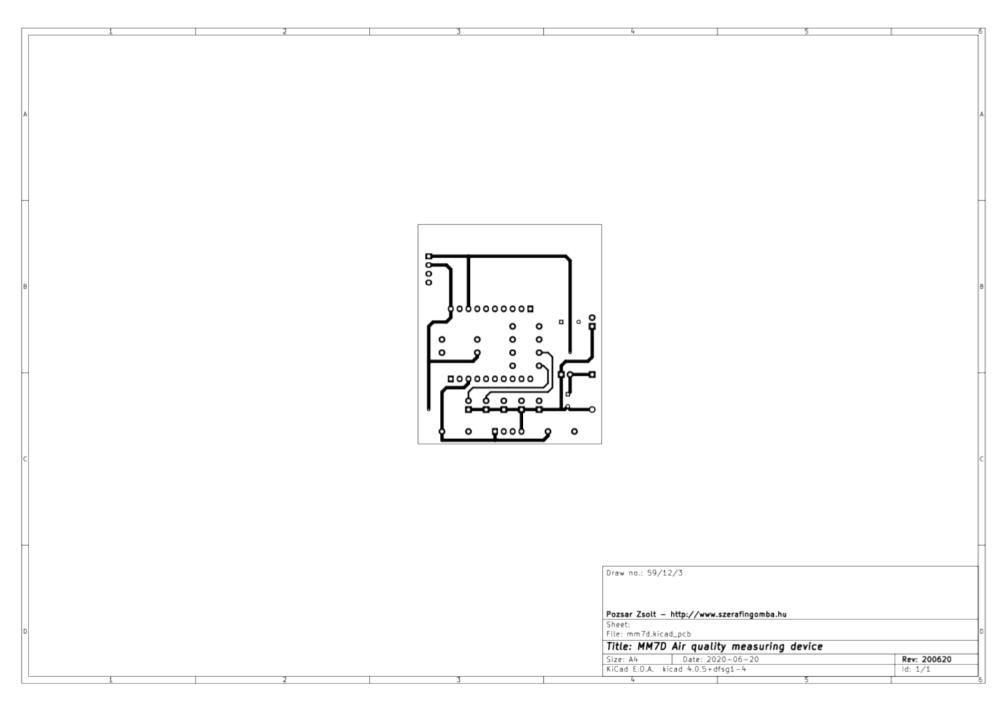

Annex 5: PCB component side

