


Simple  friendly



**Kawasaki Robot Controller  
E Series**

**Installation and  
Connection Manual**

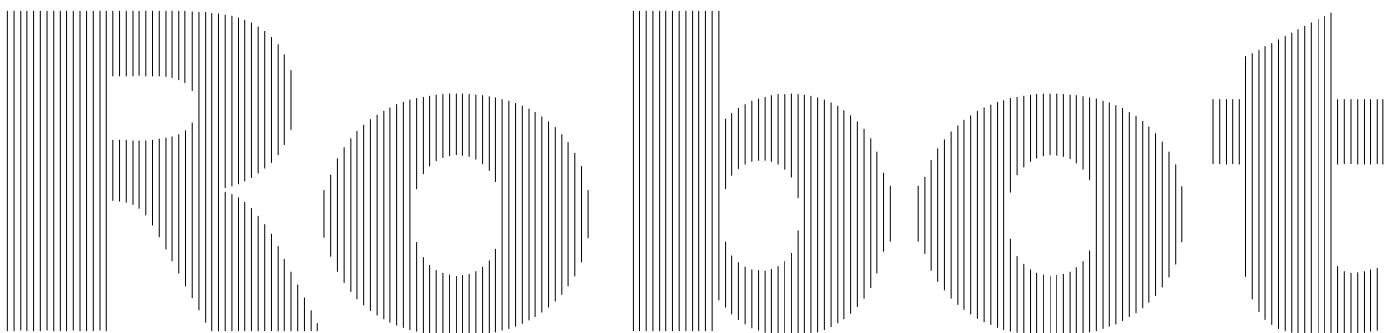

Kawasaki Heavy Industries, Ltd.

## PREFACE

This manual describes the installation and connection of the E series controllers.

This manual covers the installation, wiring and connection with external controller, devices and power. Please refer to “Operation Manual” and “External I/O Manual” for the operation of the controller.

Read and understand the contents of this and safety manuals thoroughly and strictly observe all rules for safety before proceeding with any operation.

This manual describes only the installation and connection of the controller. For the robot arms, please refer to the separate manuals for them.

This manual also describes devices equipped as an option; however, all the controllers might not include the devices explained here.

— This Manual describes the following controller models. —

E10, E12, E13, E14, E20, E22, E23, E24, E73, E74 (Japan spec.)  
E30, E32, E33, E34, E76, E77 (North America spec.)  
E40, E42, E43, E44, E70, E71 (Europe spec.)





- 
1. This manual does not constitute a guarantee of the systems in which the robot is utilized. Accordingly, Kawasaki is not responsible for any accidents, damages, and/or problems relating to industrial property rights as a result of using the system.
  2. It is recommended that all personnel assigned for activation of operation, teaching, maintenance or inspection of the robot attend the necessary education/training course(s) prepared by Kawasaki, before assuming their responsibilities.
  3. Kawasaki reserves the right to change, revise, or update this manual without prior notice.
  4. This manual may not, in whole or in part, be reprinted or copied without the prior written consent of Kawasaki.
  5. Store this manual with care and keep it available for use at any time. If the robot is reinstalled or moved to a different site or sold off to a different user, attach this manual to the robot without fail. In the event the manual is lost or damaged severely, contact Kawasaki.
- 

Copyright © 2012 Kawasaki Heavy Industries Ltd. All rights reserved.

## SYMBOLS

The items that require special attention in this manual are designated with the following symbols.

Ensure proper and safe operation of the robot and prevent physical injury or property damage by complying with the safety matters given in the boxes with these symbols.

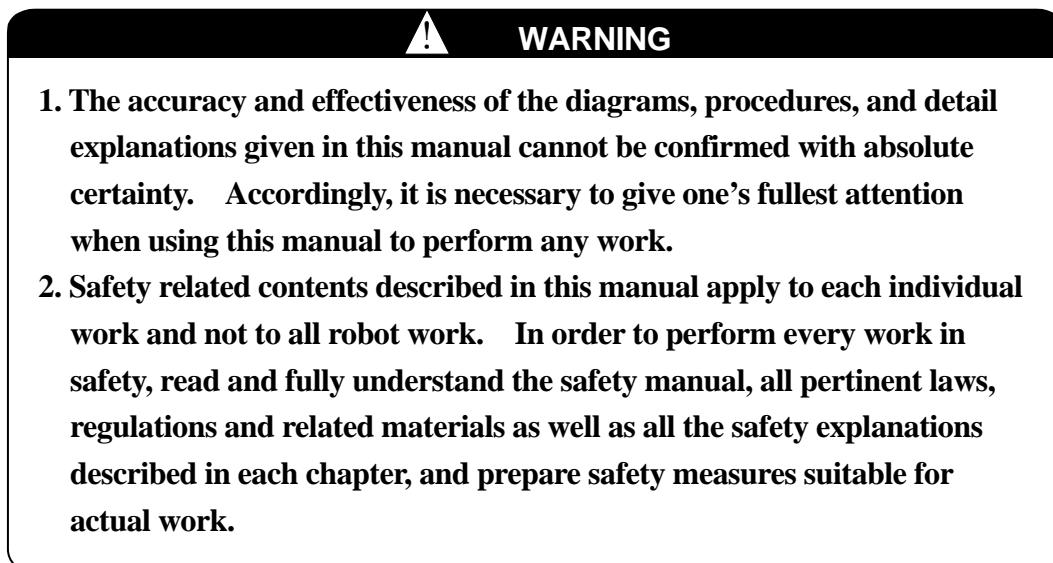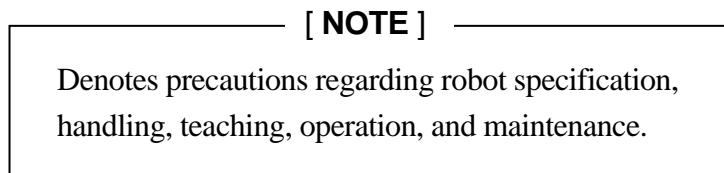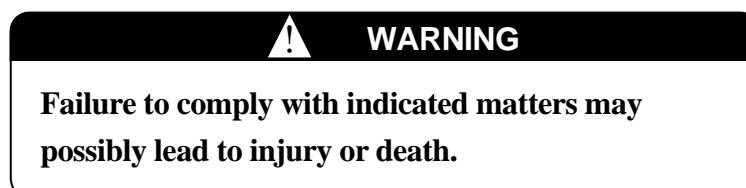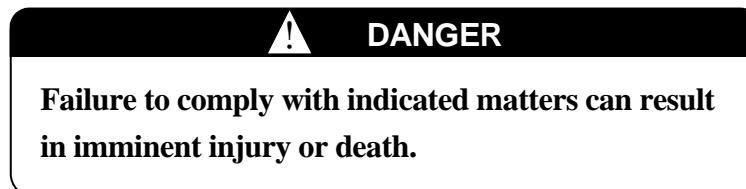

## CONTENTS

Preface .....	1
Symbols .....	2
1.0 Safety .....	5
1.1 Precautions during Transportation and Storage .....	5
1.2 Installation Environments of Robot Controller .....	6
1.3 Precautions when Connecting the Harness .....	9
1.4 Precautions when Connecting the External Power .....	10
1.5 Warning Label for Electric Shock .....	12
1.6 Battery and Fuse Use and Disposal .....	21
1.7 Safety Features .....	23
1.8 Emergency Movement without Drive Power .....	24
2.0 Workflow - Robot Controller Installation and Connection .....	29
3.0 Appearance and Specification of Robot Controller .....	31
3.1 Controller Appearance .....	31
3.2 Teach Pendant Appearance .....	54
3.3 E1x/E2x Controller Specification .....	55
3.4 E3x Controller Specification .....	56
3.5 E4x Controller Specification .....	58
3.6 E7x Controller Specification .....	59
4.0 Transportation of Robot Controller .....	60
4.1 By Crane Lifting (E1x, E2x, E3x, E4x) .....	60
4.2 By Caster (E1x, E2x, E3x, E4x) .....	61
4.3 By Forklift Truck (E1x, E3x, E4x) .....	62
4.4 By Two Persons (E7x) .....	63
5.0 Arrangement of Robot Controller .....	64
5.1 Arrangement of E1x/E2x/E3x/E4x Controllers .....	64
5.2 Arrangement of E7x Controller .....	67
6.0 Connection Instructions .....	70
6.1 Connection between Controller and Robot .....	70
6.2 Connection between Controller and Teach Pendant .....	81

7.0	Connection of External Power .....	82
7.1	Change of External Power Input Voltage (Only for E3x Controller with Optional Transformer).....	90
8.0	Connection of Peripheral Control Equipment.....	91
8.1	Connection Instructions .....	94
8.2	Connection of General Purpose Signal.....	95
8.3	Connection of Hardware Dedicated Signal.....	98
8.4	Connection of Personal Computer.....	98
8.5	Connection of RS-232C Serial Signal (Option).....	98
8.6	Connection of Ethernet Communication Signal (Option) .....	98
8.7	Connection of Fieldbus (Option).....	99
8.8	Connection of Sensors/Valves on Arm (Option) .....	99

## 1.0 SAFETY

This chapter only describes safety precautions during installation and connection of the controller. For all other safety matters, refer to the “Safety Manual”, a separate-volume.

### 1.1 PRECAUTIONS DURING TRANSPORTATION AND STORAGE

To transport the Kawasaki Robot Controller to its installation place, strictly observe the following cautions while carrying out the transportation and installation work.

#### [ NOTE ]

The installation shall be made by qualified installation personnel and should conform to all national and local codes.



#### WARNING

1. When transporting a controller with a crane or a forklift, never support the controller manually.
2. During the transportation, stay out from under the lifted controller.




#### CAUTION

1. Since the controller is composed of precision parts, be careful not to apply excessive shocks or vibrations to the controller during transportation.
2. To carry out smooth and safe installation, remove all obstacles before installing a controller. Clear a passage for the transportation of controller before using a crane or forklift.
3. When transporting or storing a controller:
  - (1) keep the ambient temperature within the range of minus 10 - 60°C
  - (2) keep the relative humidity within the range of 35 - 85% RH  
(Non condensing)
  - (3) keep free from excessively large shock and vibration.

## 1.2 INSTALLATION ENVIRONMENTS OF ROBOT CONTROLLER


Install the controller in a site that satisfies all the following environmental conditions:

1. Ambient temperature during operation: within 0 - 45 °C or within 0 - 40 °C when placing E7x controller vertically
2. Relative humidity: 35 - 85 %RH (Non condensing)
3. Altitude: up to 1000 meters above mean sea level
4. Free from dust, smoke, water, oil, etc. IEC60664-1 Pollution degree: 3 or below. Controller protection grade: IP53 for E2x controller, IP54 for E1x/E3x/E4x controller (not including transformer and heat sink section), IP54 for E7x controller. (See the figure below.)

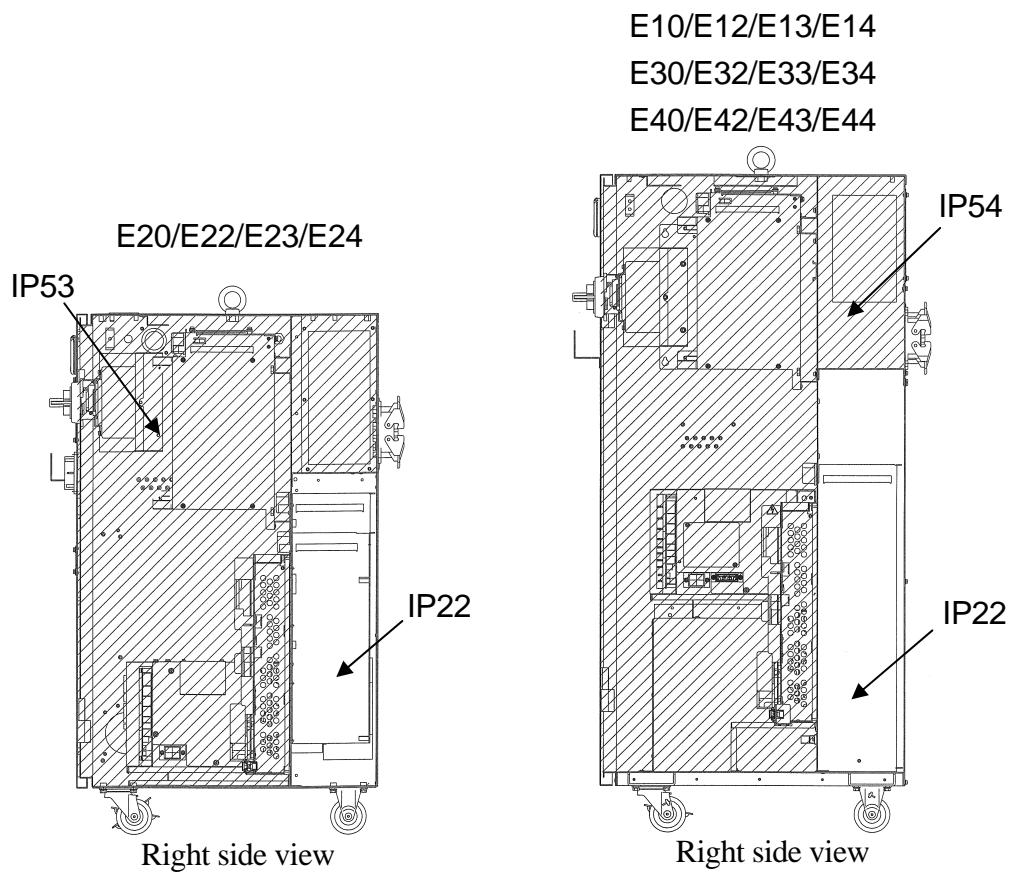


Controller with added regeneration resistors  
E13/E14(MD)/E33/E34(MD)/E43/E44(MD)

Controller with added regeneration resistors  
E23/E24(MD)

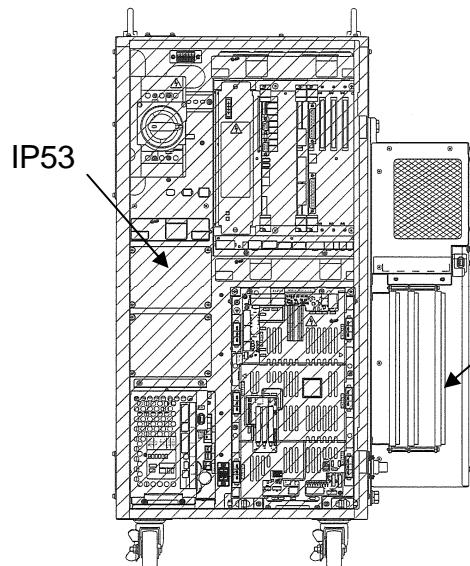


Front view (without door)

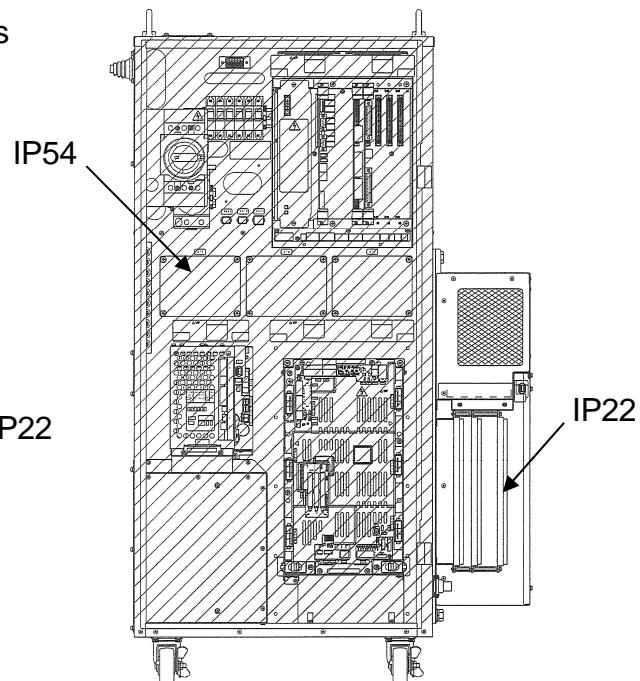


Front view (without door)

E70/E71/E73/E74/E76/E77

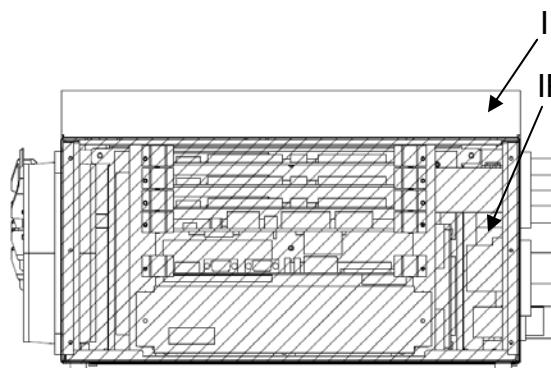

Left side view

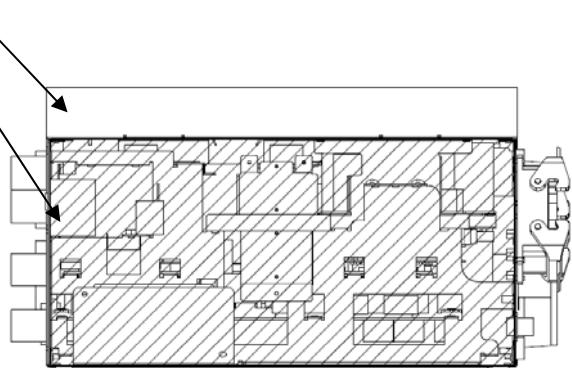

Right side view



### CAUTION

**When installing the controller in the environment where metal dust, etc. is generated in robot application to works shown below, mount fan filter prepared as option.**

- 1. Metal workpiece polishing**
- 2. Polished metal workpiece handling**
- 3. Metal workpiece deburring**
- 4. Deburred metal workpiece handling**
- 5. Metal workpiece shotblasting**
- 6. Other processing works where metal dust, etc. is generated.**

5. Free from flammable and/or corrosive liquid and gas.
6. Free from excessively strong vibration.
7. Free from electrical noise interference. (Controller external power noise: 1 kV/1 μs or less)



### CAUTION

**If the controller is installed near equipment that generates a lot of electrical noise, be sure to provide appropriate surge killers around that equipment. Noise producing equipment includes: induction motors, electromagnetic brakes, solenoids, or contact equipment, etc.**

8. Place where power is supplied within specifications.
9. Place where dedicated earthing is provided. (100 Ω or less)
10. Outside the safety fence with margin (min. 1 m) from the motion range of robot arm (with tools and workpieces).




### CAUTION

**The controller shall not be located inside of the robot's motion range/workcell/safety fence.**

In addition, ensure the followings:

- Enough space for easy access to the controller during maintenance
- Installing an entrance gate with a safety plug to the safety fence
- Referring the requirements established in each region for details of the safety fence (e.g. ISO13852-13855, ISO14119-14120, JISB9707-9708, JISB9710-9711, JISB9715-9716)

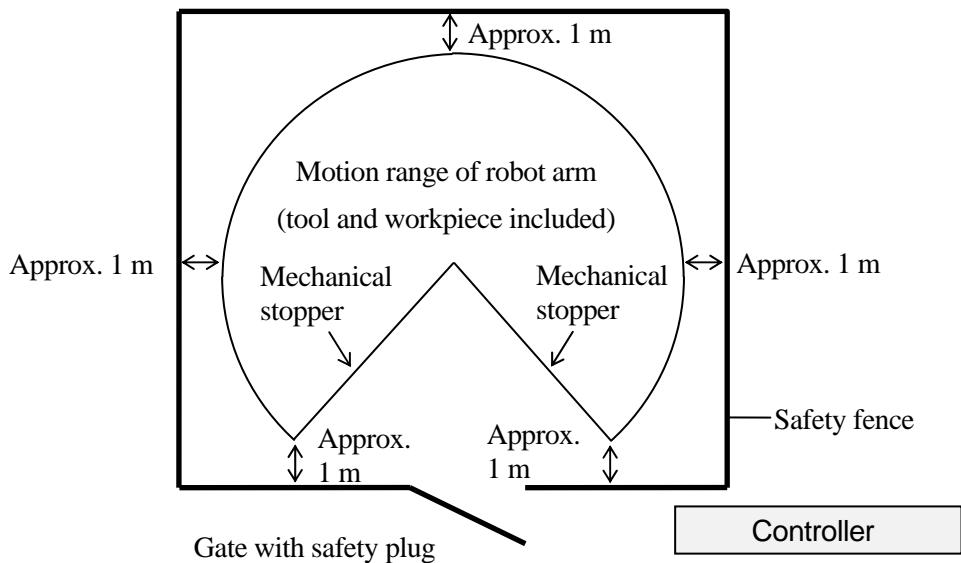

### 1.3 PRECAUTIONS WHEN CONNECTING THE HARNESS

Strictly observe the following precautions when connecting the robot arm with the robot controller.



#### WARNING

In order to prevent accidents caused by electric shock, do not connect the external power until connections between the robot arm and robot controller are complete.



#### CAUTION

1. Be careful when connecting the harnesses. Be sure to use the correct harnesses. Using an incorrect harness, or forcing or misconnecting the harness may damage connectors or cause a break in the electrical system.
2. Prevent people or equipment (forklift etc.) from stepping on or riding over the signal and motor harnesses. Otherwise, the harness may become damaged or the electrical system may break.
3. Separate the harnesses from any nearby high voltage lines (min. 1 m apart). Do not bundle or run the harnesses in parallel with other power lines. Otherwise, the noise generated from power lines will cause malfunctions.
4. Even when the harnesses are long, do not bundle them wended or bended. Bundling the harness causes the heat to build up in the harness, resulting in over-heat and furthermore may cause fire.

## 1.4 PRECAUTIONS WHEN CONNECTING THE EXTERNAL POWER

Strictly observe the following precautions when connecting the external power.



### DANGER

**Before beginning the connection work, confirm that the external power supply for the controller is cut off at the source. To prevent external power from being turned ON accidentally, tag the breaker and indicate clearly that work is in progress. Or, assign a supervisor in front of the breaker until all the connections are complete. Connecting components while power is supplied is extremely dangerous and may cause electric shock.**



### WARNING

1. Confirm that the connected supplying power meets specifications shown on the rating plate and the label attached on the side of the breaker. Supplying out-of-specification power will damage electric components in the controller.
2. Earth the controller to prevent against electrical noise and shock.
3. Use dedicated earth wire ( $100\ \Omega$  or less), which is equal to or larger than the recommended power cable size ( $3.5 - 8.0\ mm^2$ ).
4. Never share an earth line with workpiece to be welded or another machine (weld machine, etc.).
5. In arc welding applications, connect the minus pole of the weld power supply to a jig or directly to workpiece to be welded. Insulate the robot body and controller so that they do not share a common earth line.
6. Without fail, before turning ON the external power to controller, make sure the power supply wiring is complete and all the covers reattached properly. Otherwise, failure to do so may cause electric shock.



## CAUTION


1. Prepare external power that meets the specifications of the controller in terms of momentary power interruption, voltage fluctuation, power capacity, etc. If the power is interrupted or the voltage goes out of the controller's specified range (above/below ratings), then the power monitoring circuit activates cutting off the power, and an error is returned.
2. If the external power emits a lot of electrical noise, set up a noise filter to reduce the interference.
3. PWM noise from robot motor lines may cause malfunction of low noise-resistant devices\* via external power line. Confirm that there are no such devices in the vicinity.
4. Install a separate external power switch (breaker) for the robot, independent and unconnected to the weld machine.
5. To prevent shorting or accidental leakage on the external power switch, install an earth leakage breaker. (Use a time delay type with sensitivity of 100 mA or more.)
6. If there is a possibility that surge voltage such as lightning surge might be applied from external power line, decrease the surge voltage level by mounting a surge absorber.

**NOTE\*** Proximity switch directly connected with power line etc. may suffer from the influence.

## 1.5 WARNING LABEL FOR ELECTRIC SHOCK


Warning labels for electric shock are located on the controller s shown below.

E1x controller

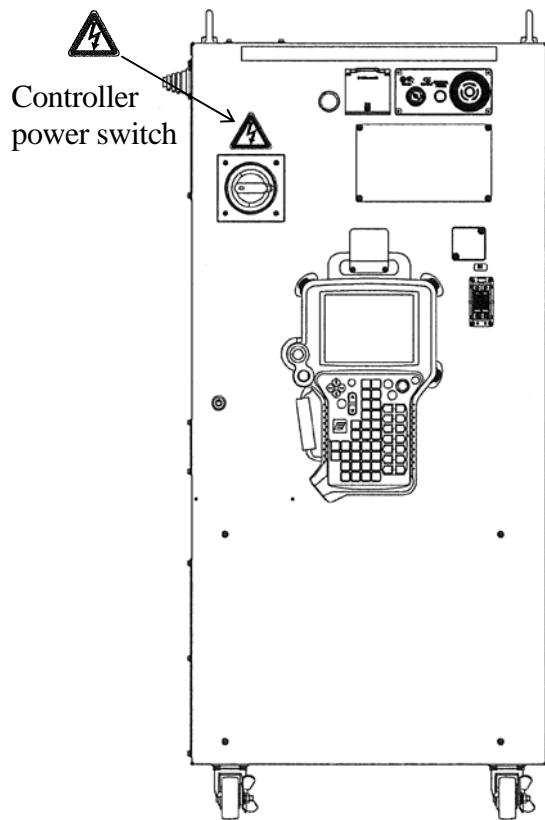

Front

The terminals are alive even when the controller power switch is OFF.

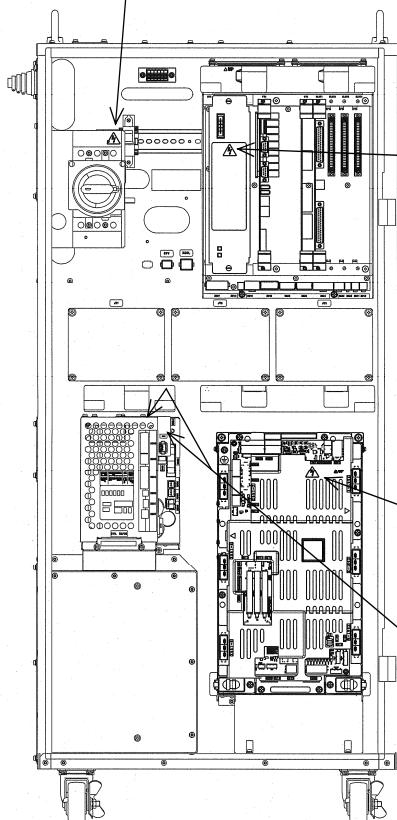


(Door omitted)

DC power supply (AVR)


Servo amplifier

MC unit

E2x controller

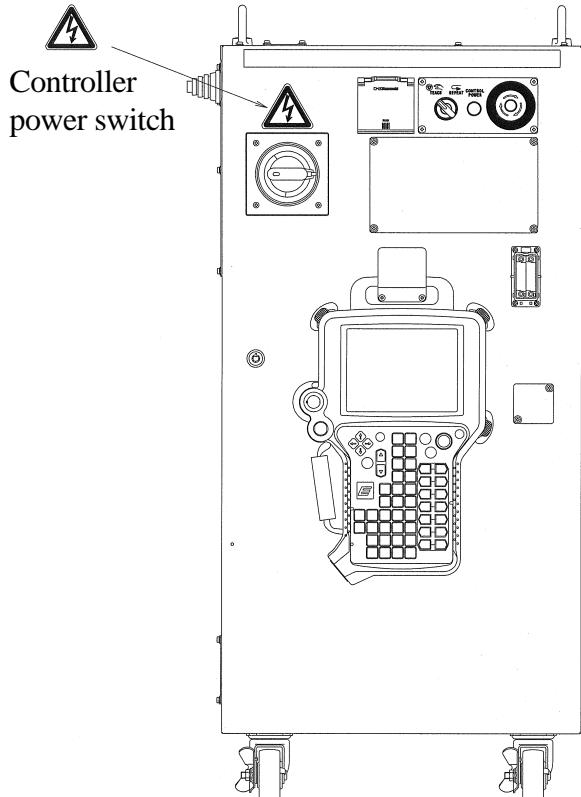


Front

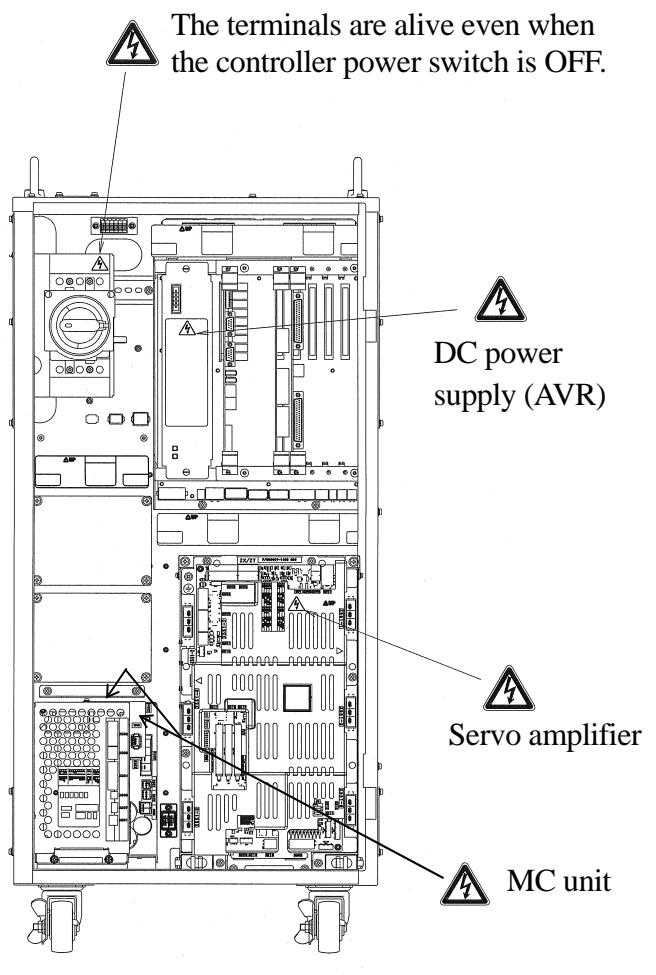

(Door omitted)


E3x controller

Controller power switch

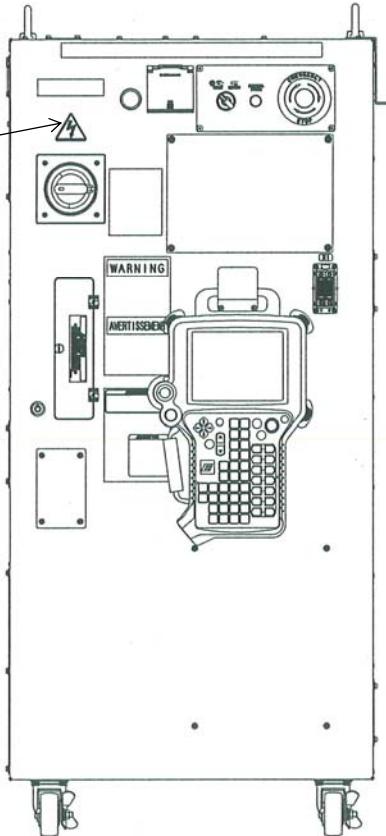

Front

The terminals are alive even when the controller power switch is OFF.

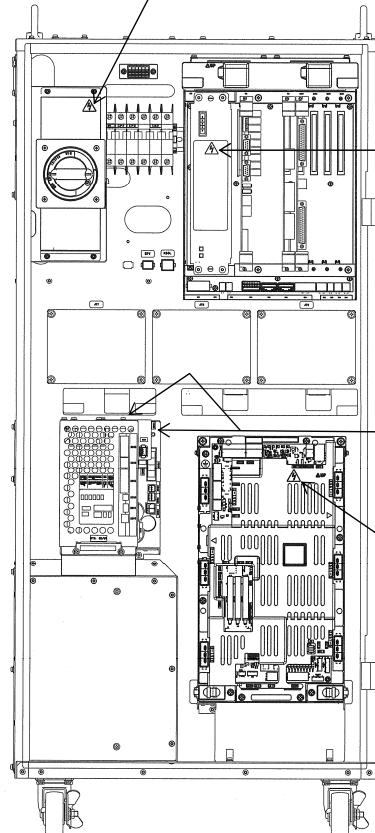


(Door omitted)

DC power supply (AVR)

MC unit


Servo amplifier

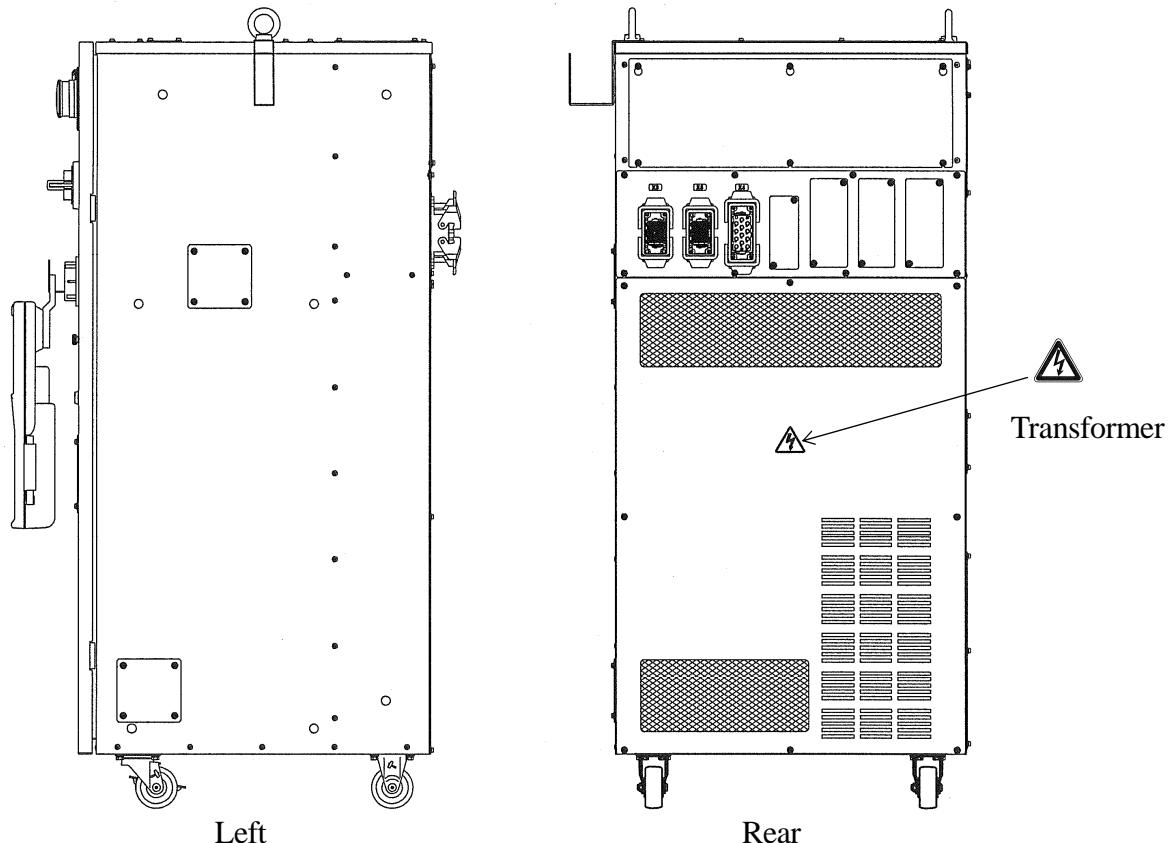

Left


Rear

Transformer

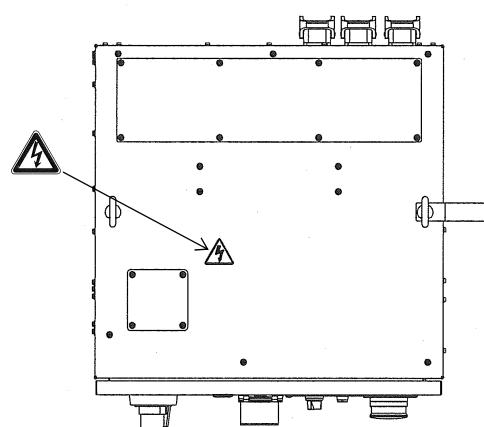


Top

E4x controller

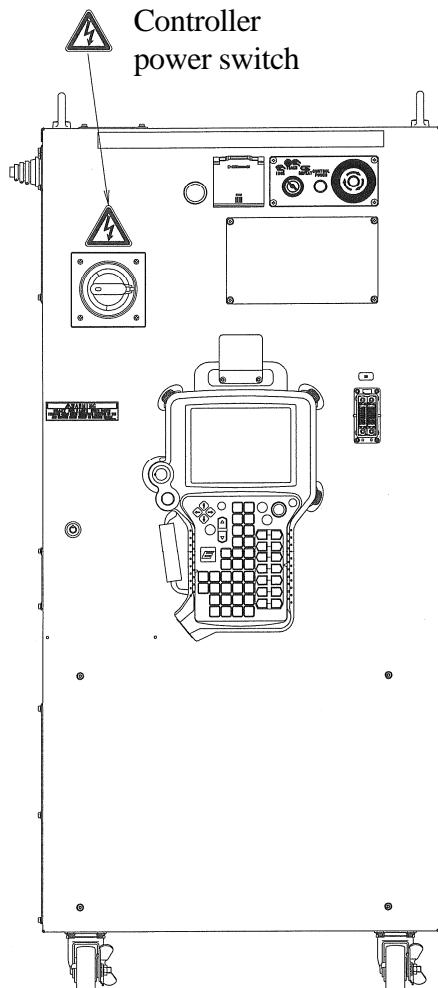

Controller power switch

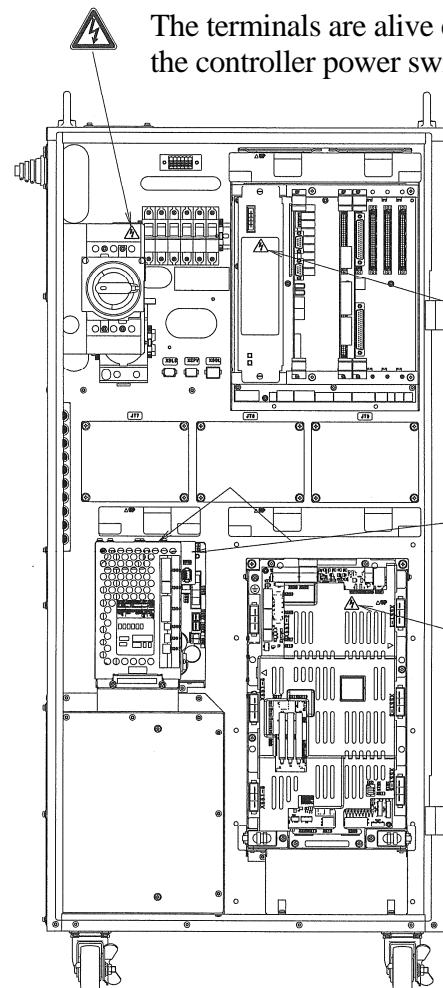

The terminals are alive even when the controller power switch is OFF.


DC power supply (AVR)

MC unit



Servo amplifier

Front


(Door omitted)

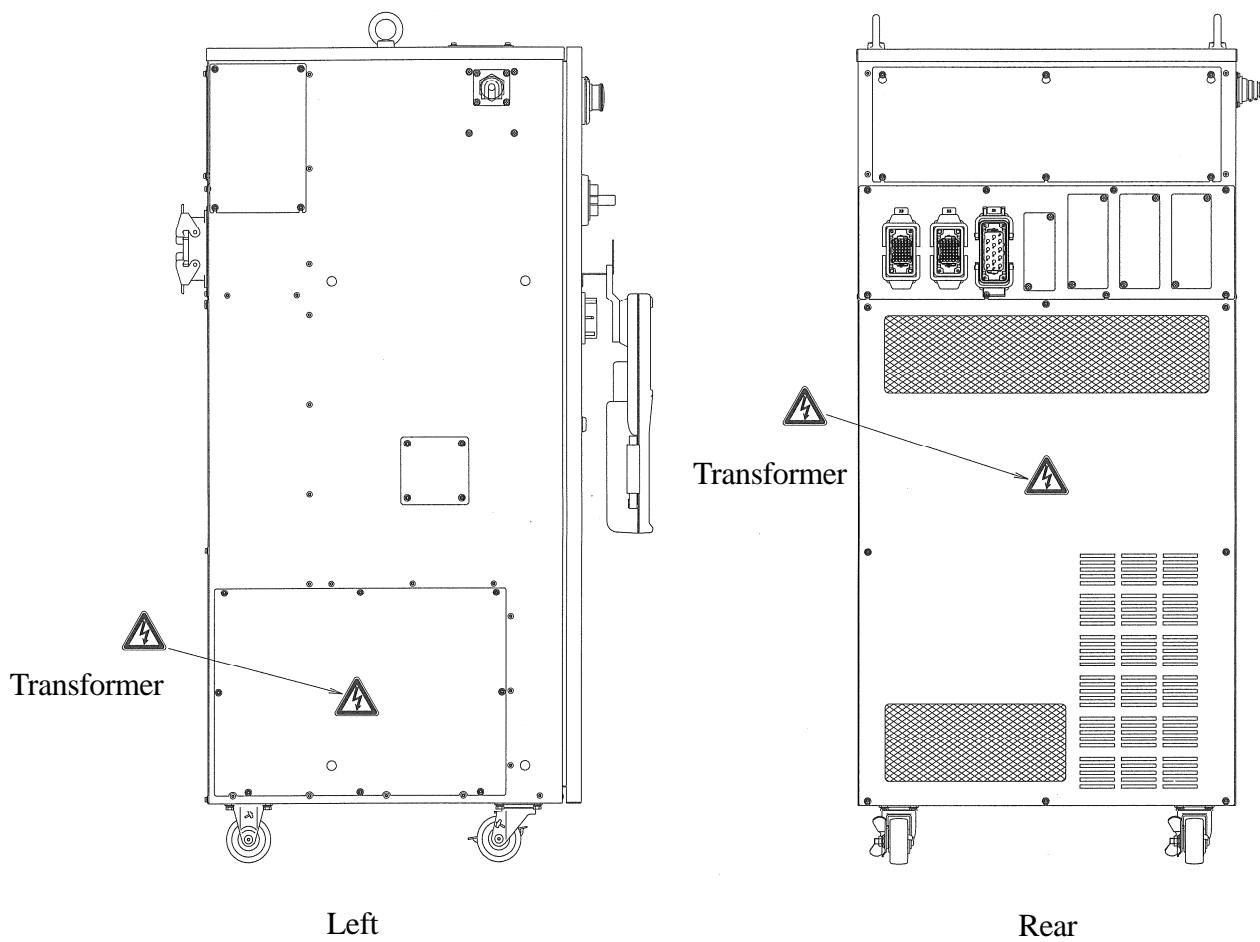


E7x controller

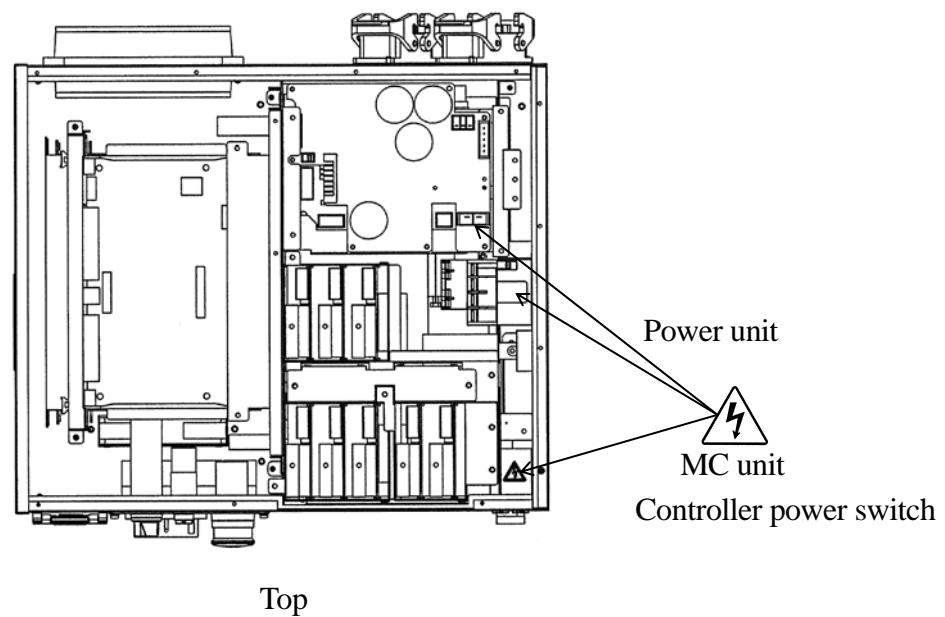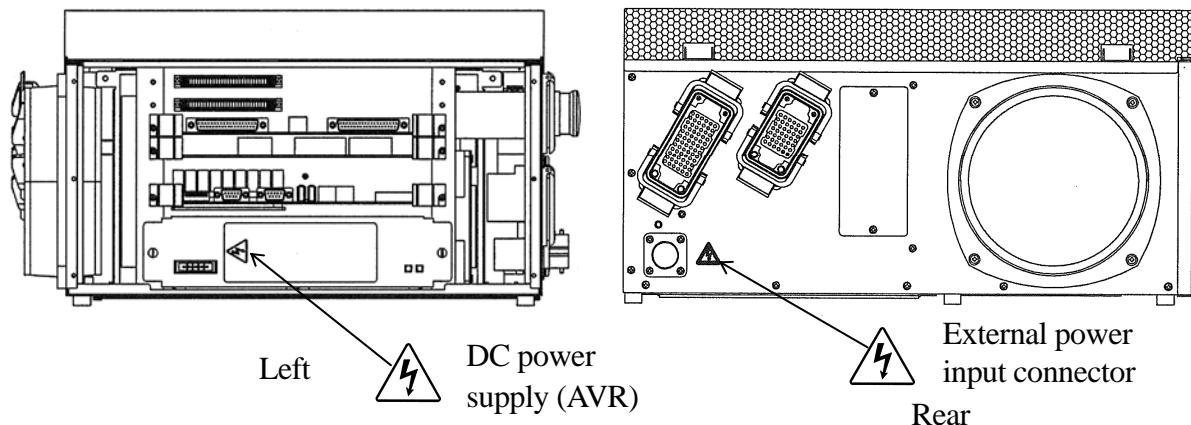


Connector plates on arm base section  
YF003N

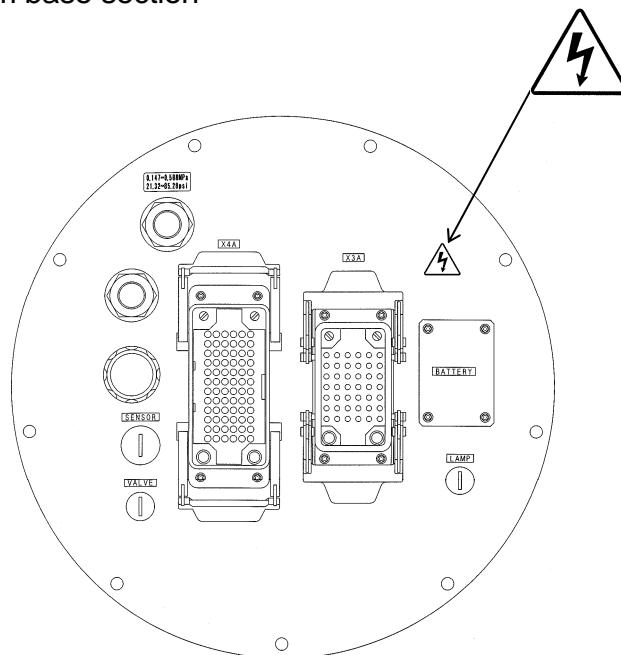


RS03N/RS05N/RS05L

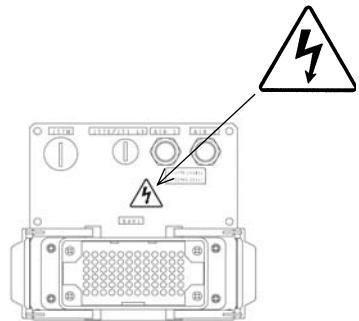


RS10N/RS06L

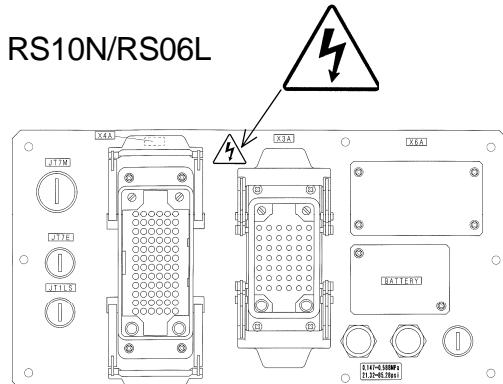


RS20N/RS10L

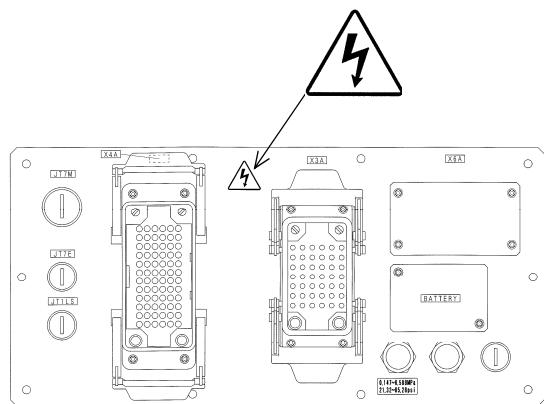


RS30N/RS50N/RS80N/RS15X/RD80N

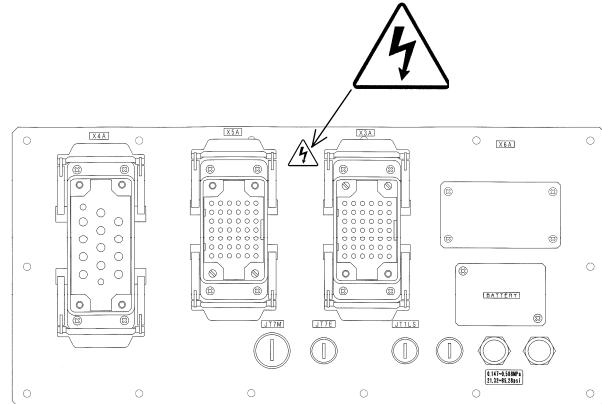


ZH

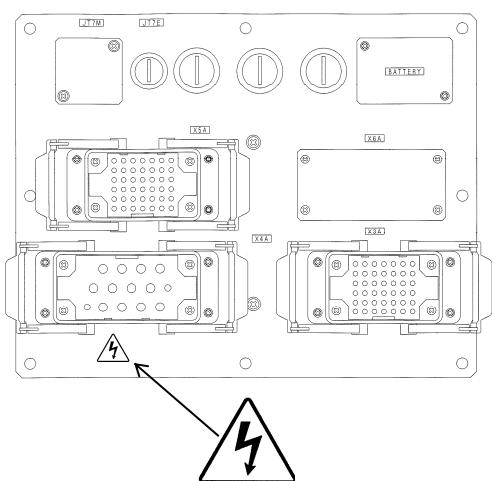


ZX/ZT/ZD

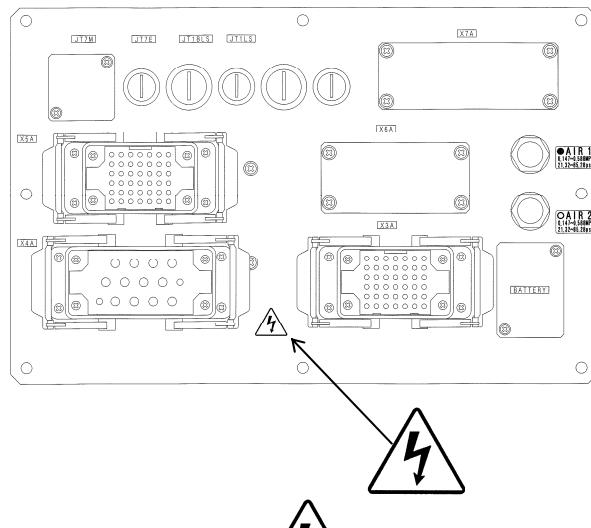


MT

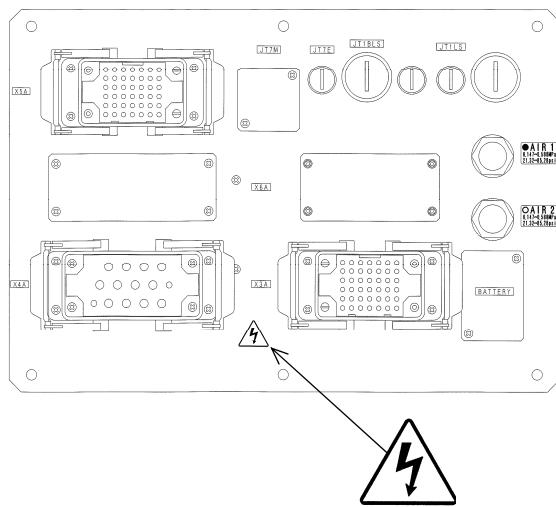

BX

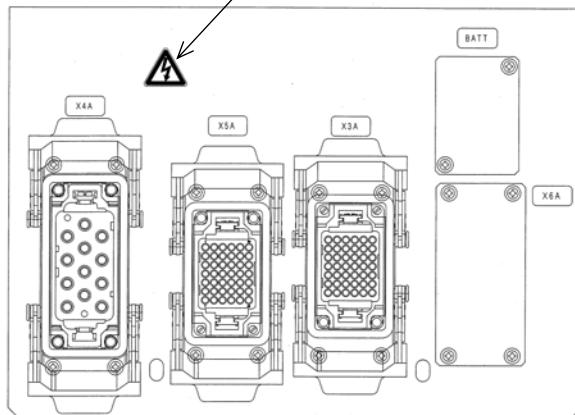

MX/MD

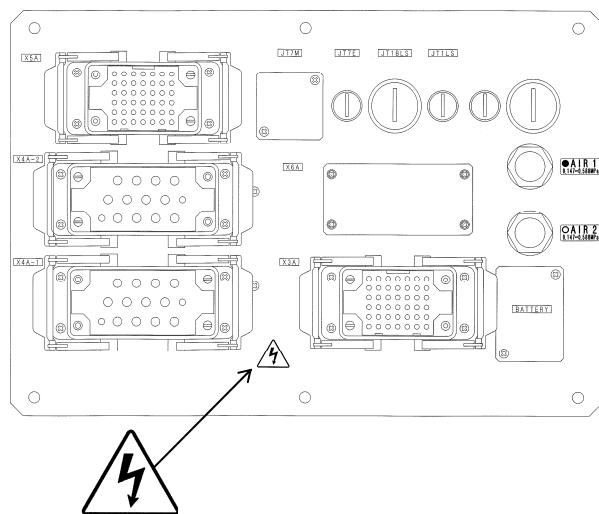

## 1.6 BATTERY AND FUSE USE AND DISPOSAL

Batteries are used for data backup in the robot mechanical unit and controller. Figures on the next page show the location of the batteries on the 1TA/1VA board and the 1FG/1HG boards. Batteries for 1FG/1HG board can be handled without removing connector plate on robot base, only with removing the plate indicating “BATTERY” shown in figure on the next page (bottom).

If not used and disposed of properly, these batteries may malfunction, ignite, overheat, explode, corrode, leak, etc. Always use and dispose of all batteries in compliance with the following warnings and cautions.

Figure on the page after next shows the location of fuse F1 (1.0 A, 125 V/250 V) on the 1TR board.

### ! WARNING

- 1. Only use batteries specified by Kawasaki.**
- 2. Never re-charge, dismantle, convert and/or overheat batteries.**
- 3. Never dispose of batteries into water or fire.**
- 4. Batteries with damaged cases may short internally and must not be used.**
- 5. Never short the positive and negative poles of a battery with material such as wire.**

### ! CAUTION

Never dispose of depleted batteries with garbage that is disposed of in an incinerator, land-fill, dumping-ground, etc. When disposing of batteries, insulate with tape so as not to contact other metal. Comply with local regulations and rules for battery disposal.


## Locations of Batteries

1TA/1VA board (in Card Rack)

Location Number: E1

Model: BR2032

Manufacturer: Panasonic

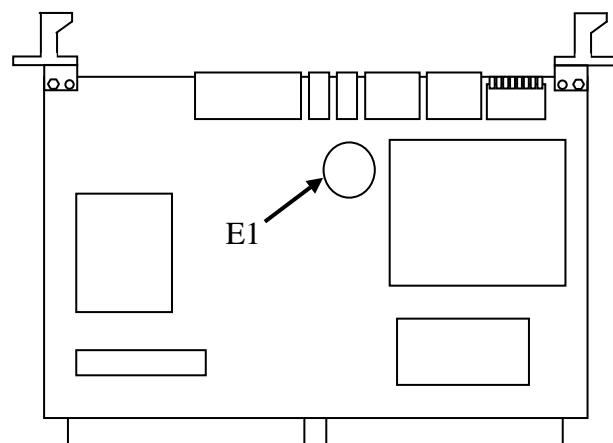


1FG board (in Robot Base)

Location Number: BAT1

Model: 50750-1007 or 50750-1018

Manufacturer: KHI

Connector: CN10

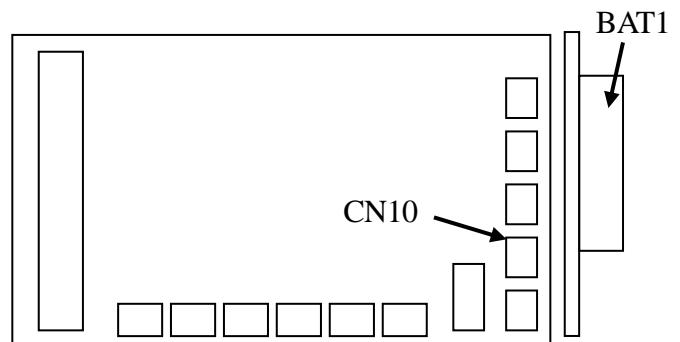



1HG board (in Robot Base)

Location Number: BAT1

Model: 50750-1007 or 50750-1018

Manufacturer: KHI

Connector: CN3

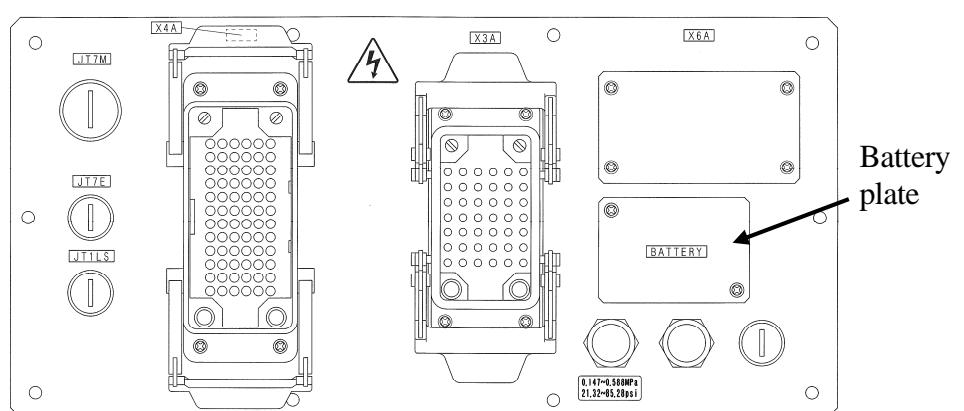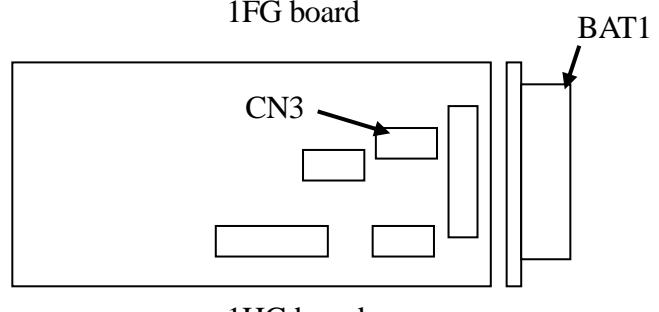

Connector plate on robot base


### Location of Fuse

1TR board (in Card Rack)

Location Number: F1

Rating: 1.0A 125/250V

UL Listed type

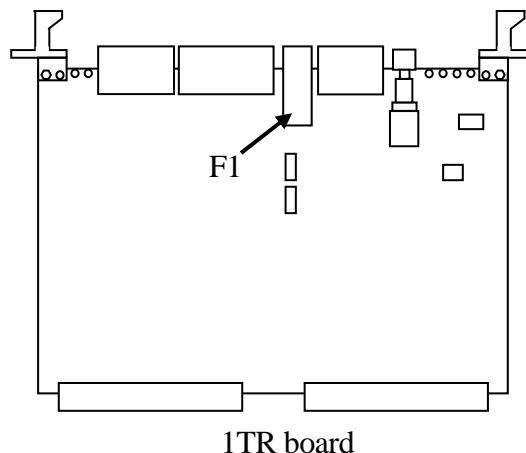

## 1.7 SAFETY FEATURES

To safeguard the user, Kawasaki robot systems are equipped with many safety features, including the following:

1. All E-stops are hard-wired.
2. All robot controllers are equipped with a redundant dual channel safety circuit. Both channels of the safety circuit must be closed to allow for robot operation in the teach and repeat modes.
3. Safety circuits of E3x/E76/E77 and E4x/E70/E71 controller satisfy requirements of PLd in category 3 defined by ISO 13849-1:2006. Category and Performance level (PL) are determined by the whole system and conditions. The safety circuit of this controller is available in the system of category: up to 3, PL: up to d.
4. (For E3x/E76/E77 Controller) When the servo ON lamp (located on the mechanical unit) is illuminated, servo motor power is available to the robot and motion is possible.
5. The teach pendant and operation panel are equipped with red mushroom-type E-stop switches. And all robot controllers have external E-stop inputs.
6. The teach pendant is equipped with two, three-position, enabling devices. One of the two enabling devices must be pressed to enable motor power in teach and check modes.
7. Teach and check mode velocities are limited to a maximum of 250 mm/s (10.0 in/s).
8. The velocities are not limited to 250 mm/s (10.0 in/s) in the Fast Check Mode that satisfy requirements for ISO 10218-1:2006. (E4x/E70/E71 controllers: Standard , E1x/E2x/E73/E74 controllers: Option)
9. JT1 is equipped with overtravel limit switches. Optional overtravel limit switches are available on JT2 and JT3 for Z series and M series robots.
10. All R-series, M-series, and Z-series mechanical units have overtravel hardstops on the JT1, JT2 and JT3 (optional for JT2 and JT3) axes. Mechanical hardstops are capable of stopping the robot at full speed and with maximum payload.
11. All robot axes are equipped with 24 VDC electromechanical brakes that engage when power is removed. If the robot loses power unexpectedly, the mechanical unit arm is held in position by the brakes.

## 1.8 EMERGENCY MOVEMENT WITHOUT DRIVE POWER

The manual brake release switches allow the operator to move individual robot axes without using motor power for maintenance and emergency situations. (E1x/E2x/E7x controllers: Option, E3x/E4x controllers: Standard)

The manual brake release switches are located;

E1x/E2x controller: Inside the door on the controller (E1x/E2x controller, Figure below, optional)

E3x controller: Under the access door on the controller (E3x controller, Figure on next page (top))


E4x controller: Inside the door on the controller (E4x controller, Figure on next page (bottom))

E7x controller: Front of the controller (E7x controller; Figure on the page after next)



### WARNING


**When no servo power is applied, electromagnetic brakes lock to maintain the robot arm posture. Unsupported axes may fall when the brake release switch is pressed. Axes which are overhung, particularly JT2 and JT3, will fall down the fastest, depending on robot position, weight of the end-of-arm tooling, and wrist axis position. Position yourself to observe the entire robot arm and keep your eyes on the arm when operating this switch.**

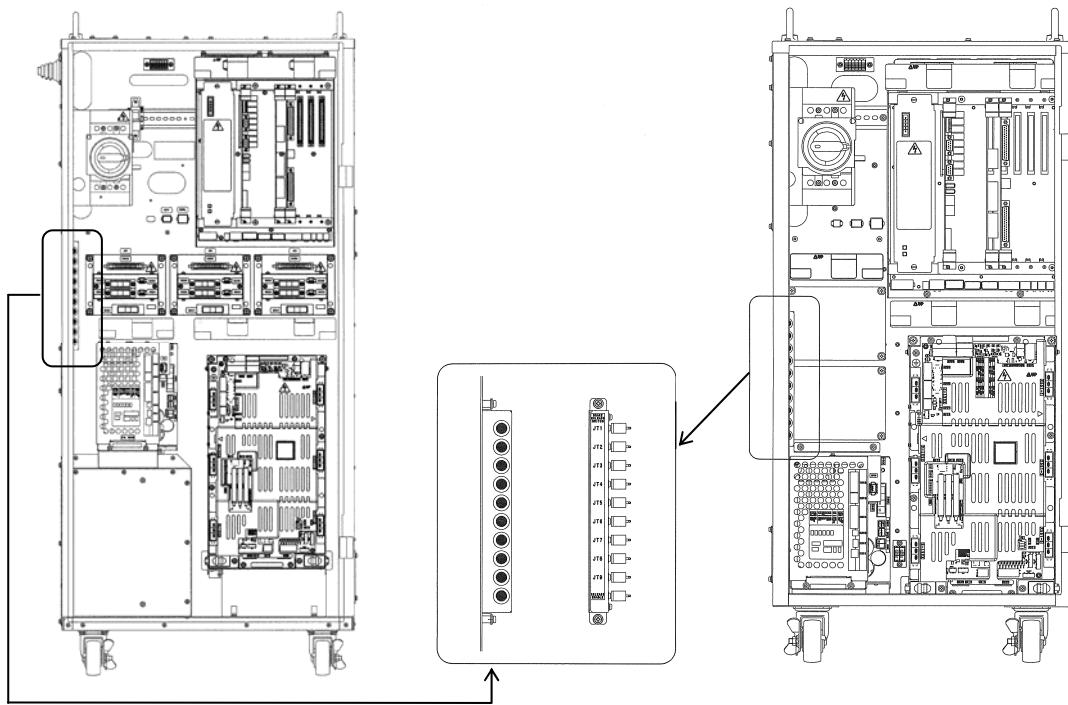


E1x controller

E2x controller


Manual brake release switches (optional)

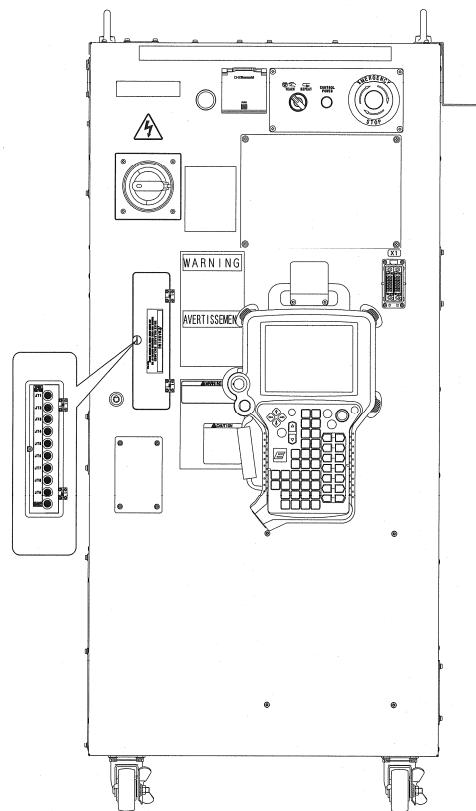

Manual brake release switches of E3x controller

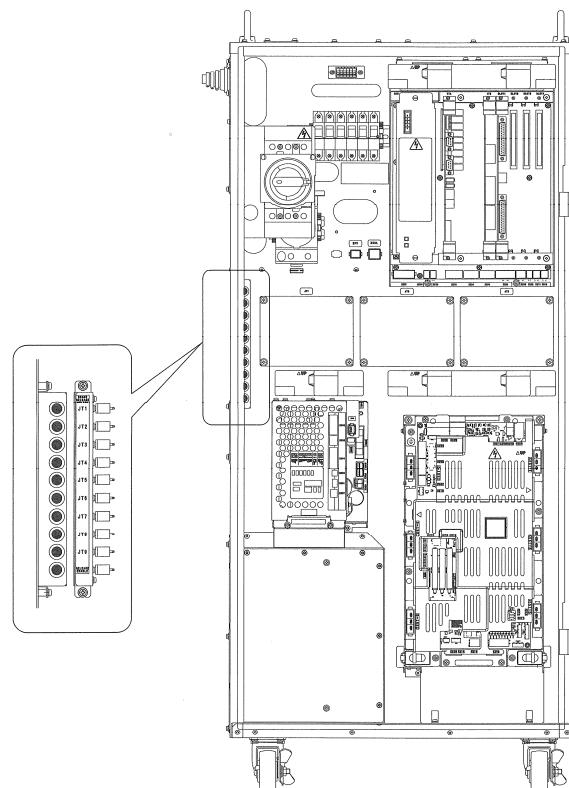


Manual brake release switches of E4x controller

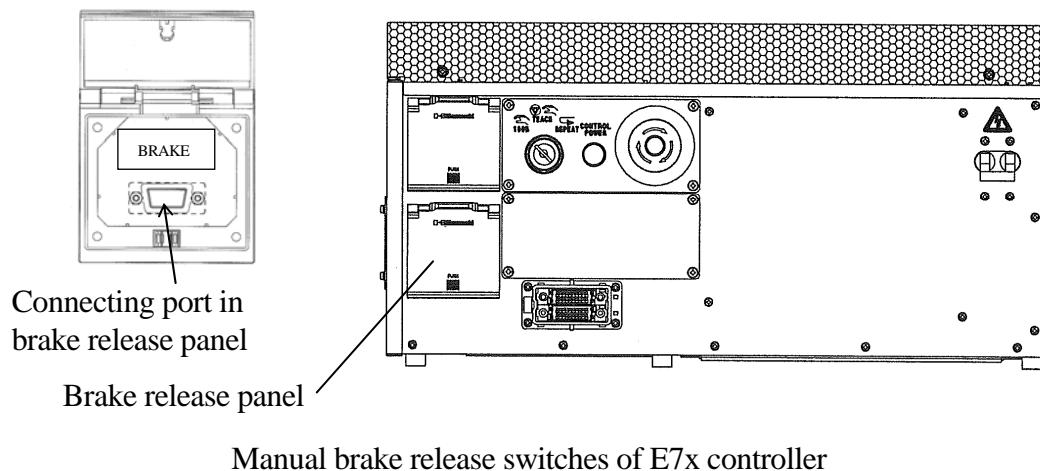

Connecting port of brake release switch is provided at the position shown in the figure.

- Brake release box is the option.

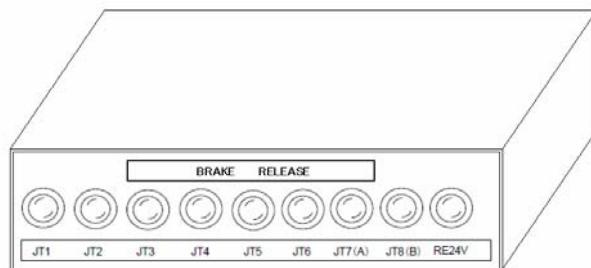


Brake release box



### WARNING

To prevent injury to persons or damage to robotic equipment provide suitable support for the robot arm, end-of-arm tooling and payload, before using a brake release switch. The robot arm can be supported overhead using a sling and an overhead crane (see figure below).

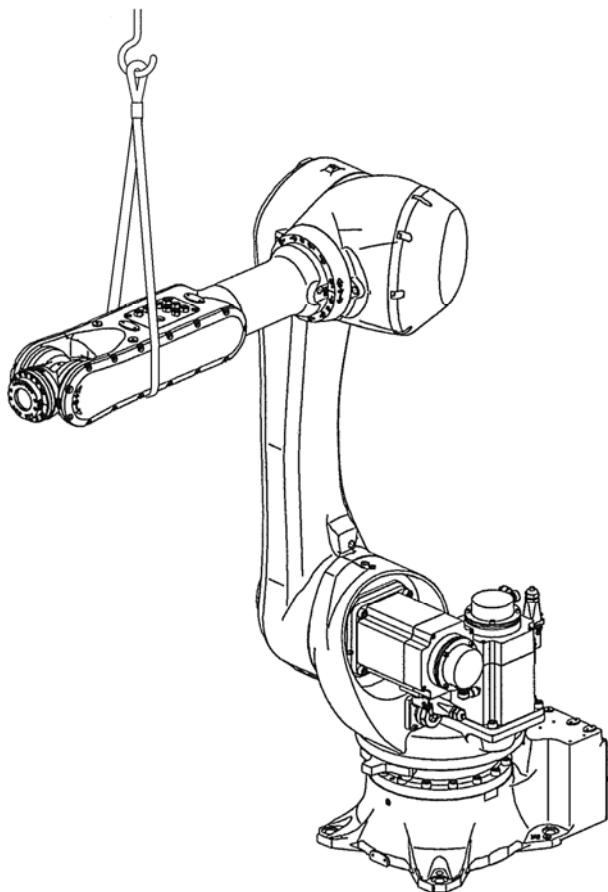

Robot arm support


To manually release axes brakes follow the procedure below.

1. Set motor power OFF.
2. Ensure all personnel are clear of site and all safety precautions are followed.
3. Provide suitable support of the robot arm, end-of-arm tooling, and payload if there is a risk of personal injury (see above figure).
4. Open the access door to the manual brake release switches.
5. Ensure the switches are in the OFF position and in operating condition.
6. Press the brake release switch of the axis to release for a moment, and confirm that the brake will not be released.


7. Press and hold the “RELEASE ENABLE” switch (see lower right figure). If the brake is released at this time, do not use the switch (see CAUTION).
8. Press the manual brake release switch for the axis to release the brake (see lower right figure).
9. The brake remains released until the brake release switch is released.
10. After using the brake release switches, close the access door.

**! CAUTION**

**Stop using the manual brake release switch immediately if the electromagnetic brake is released by pressing only one switch. The switch may be defective.**

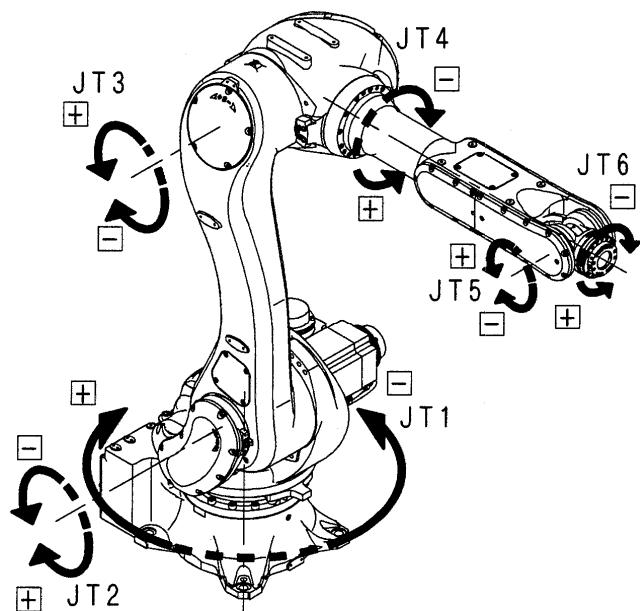


Robot brake release axes

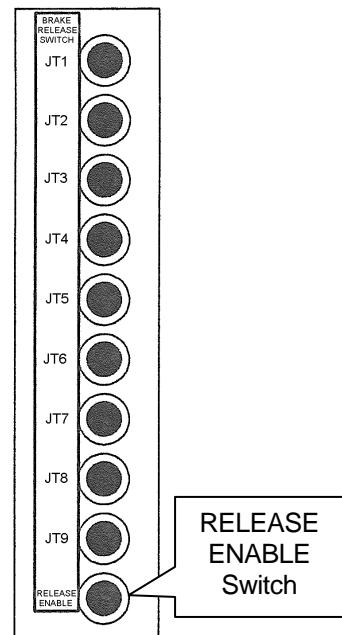


Manual brake release SW

## 2.0 WORKFLOW - ROBOT CONTROLLER INSTALLATION AND CONNECTION

This workflow describes only the robot controller. For the robot arms, refer to the separate manuals for them.

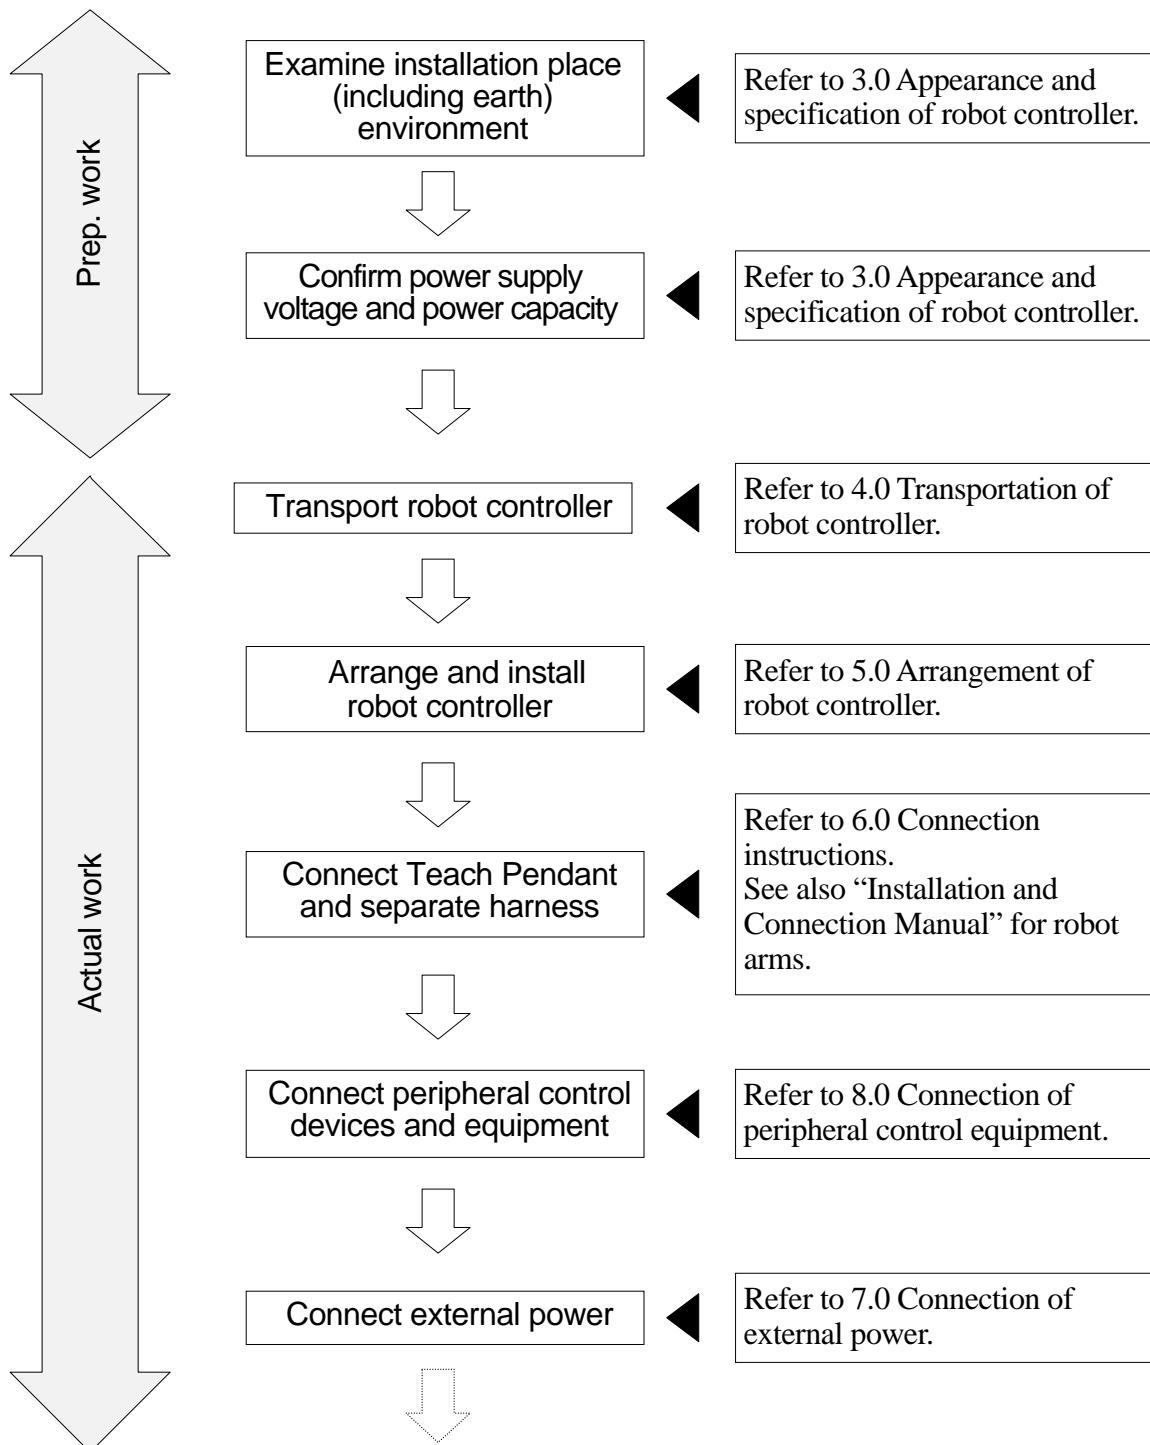

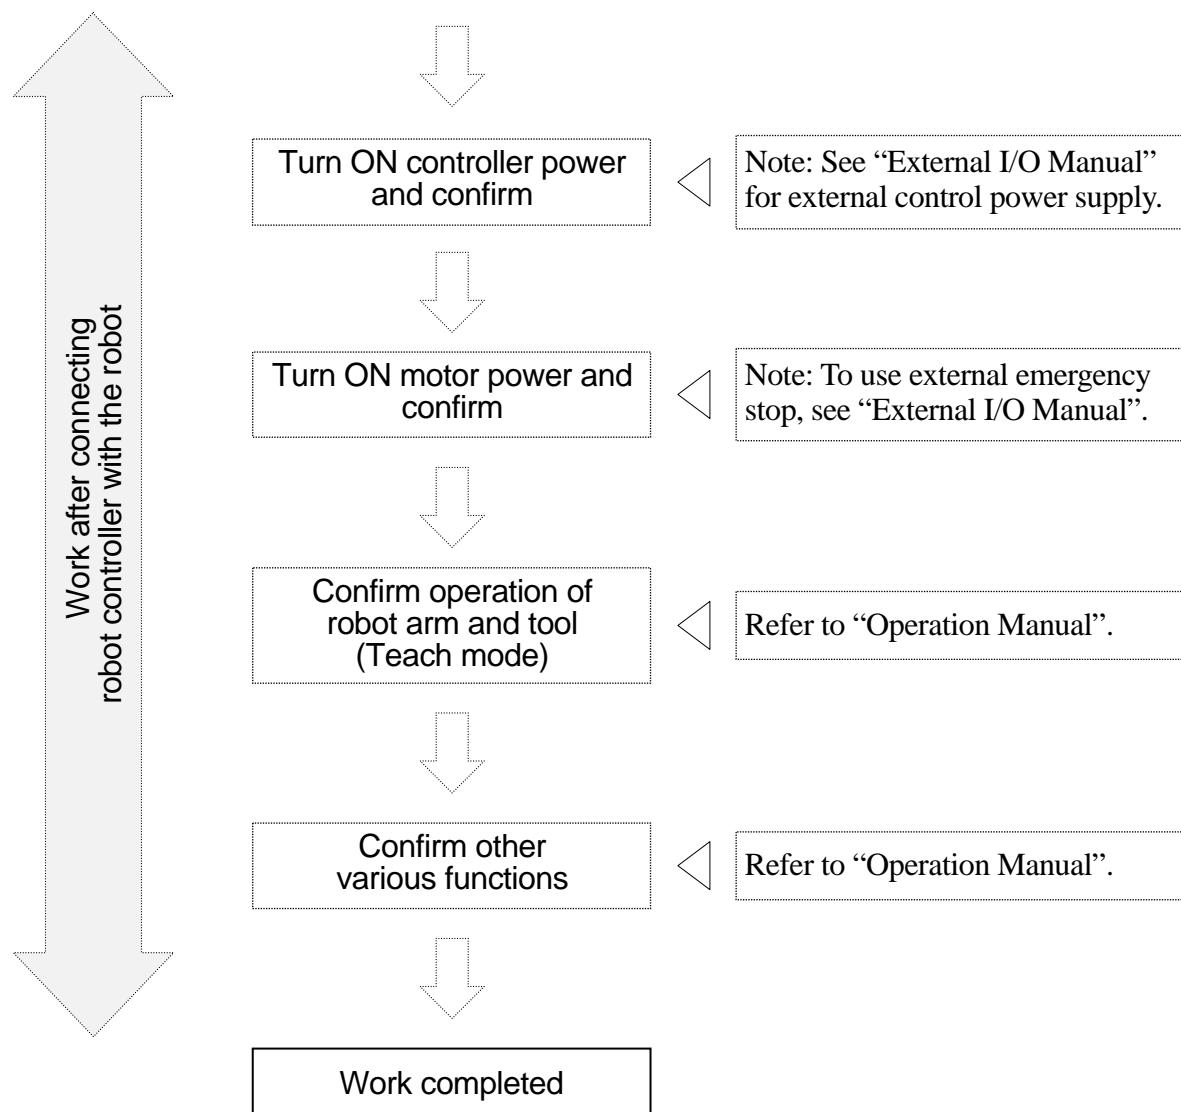


[ NOTE ]


This manual only describes procedures from installation place examination to connection with external power.

### 3.0 APPEARANCE AND SPECIFICATION OF ROBOT CONTROLLER


#### 3.1 CONTROLLER APPEARANCE

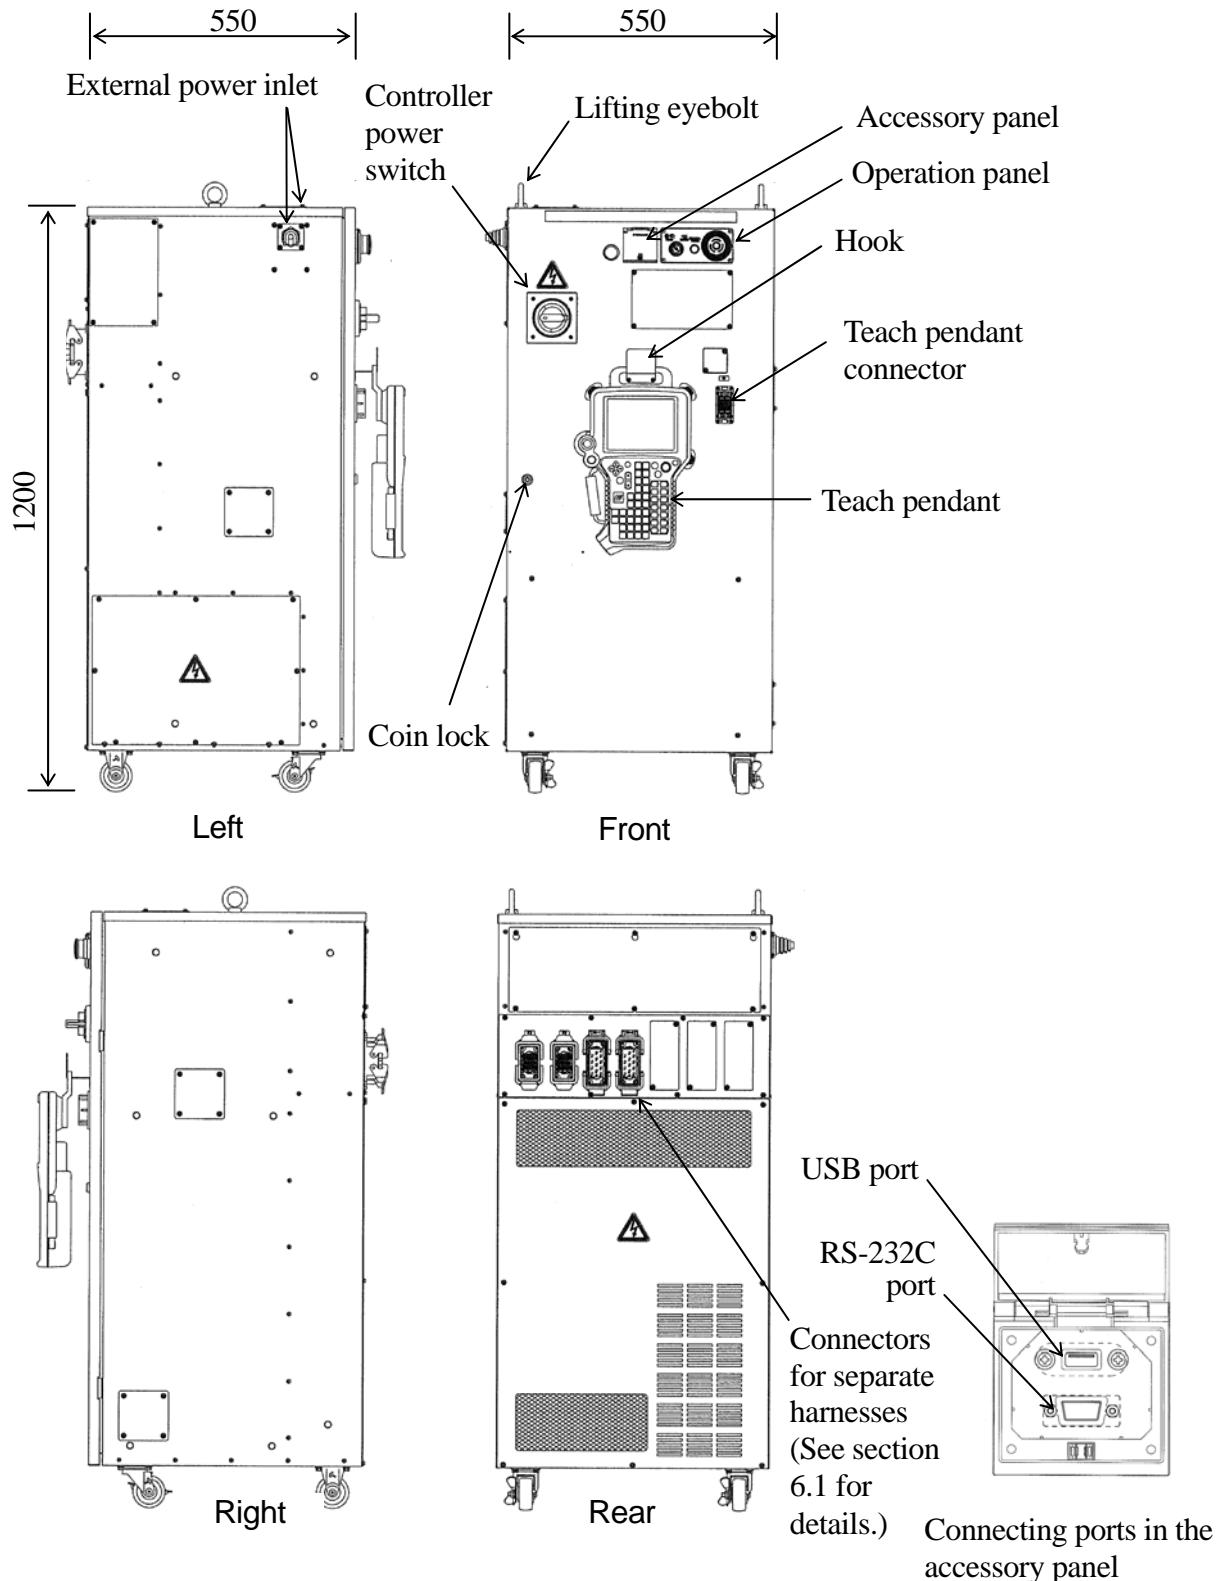


E10 controller

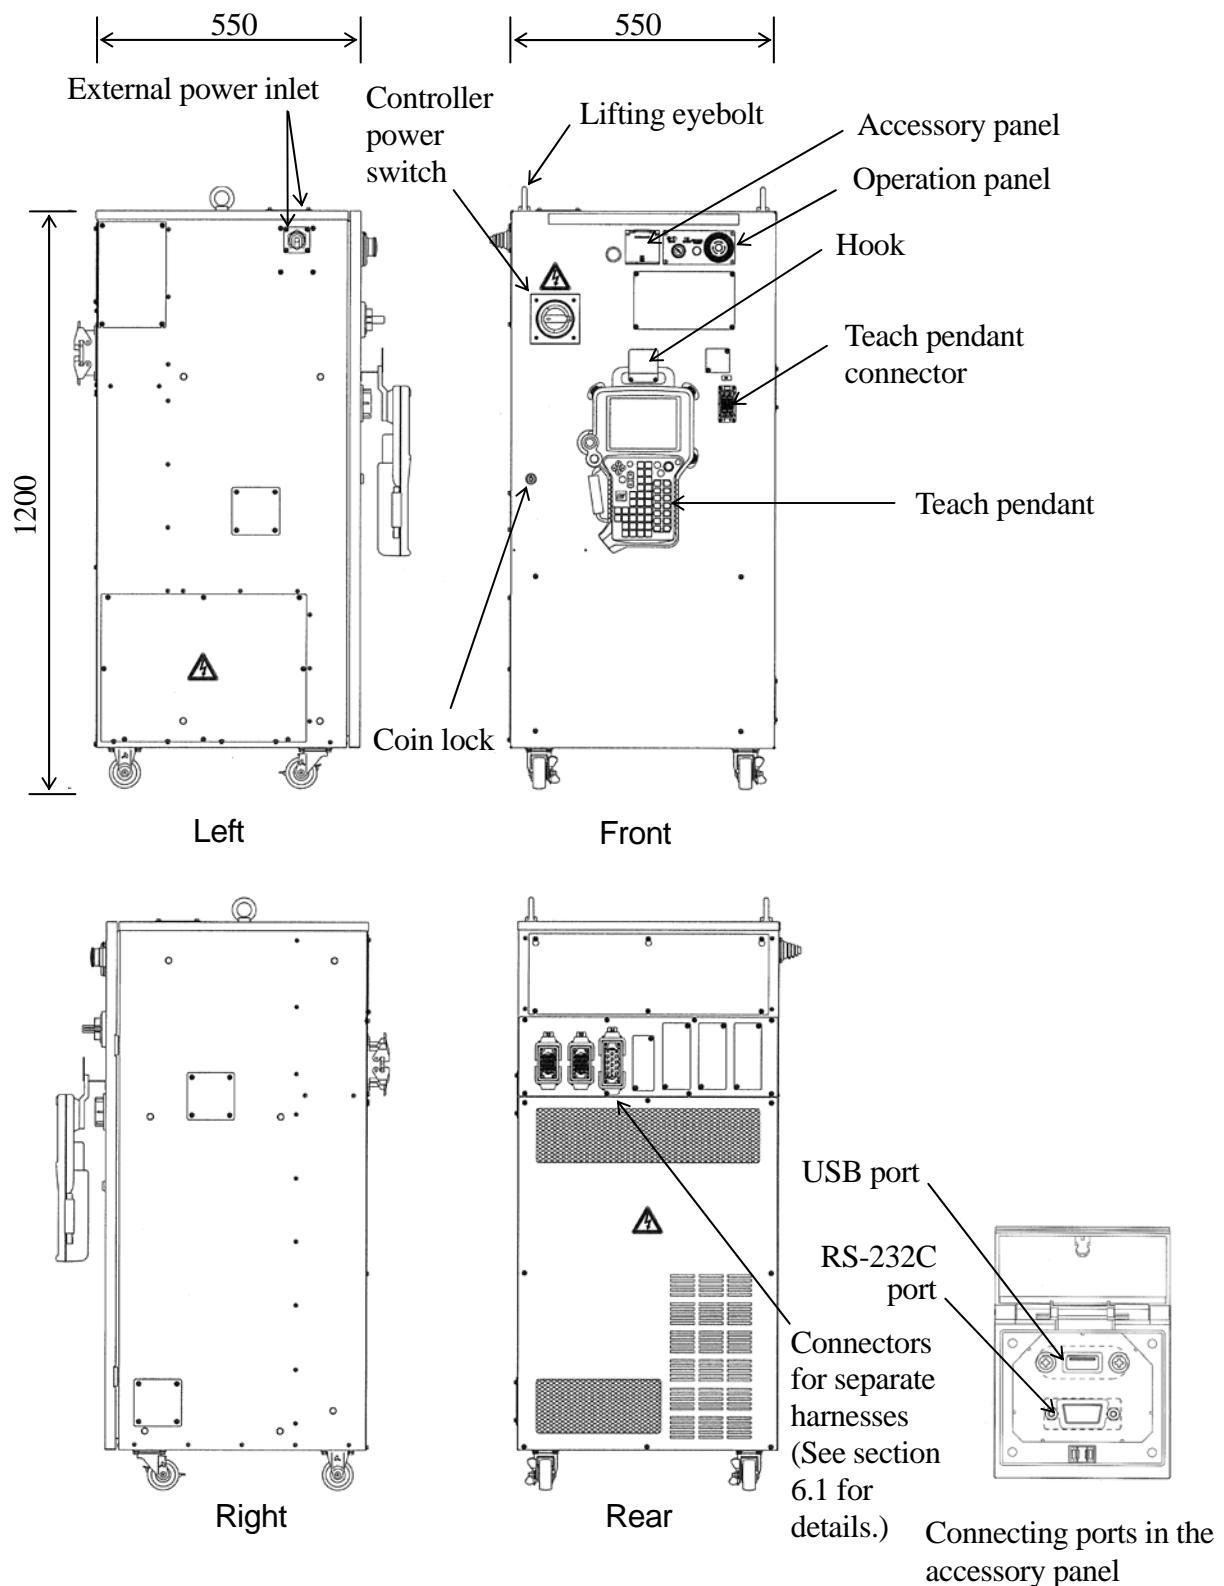



E12 controller

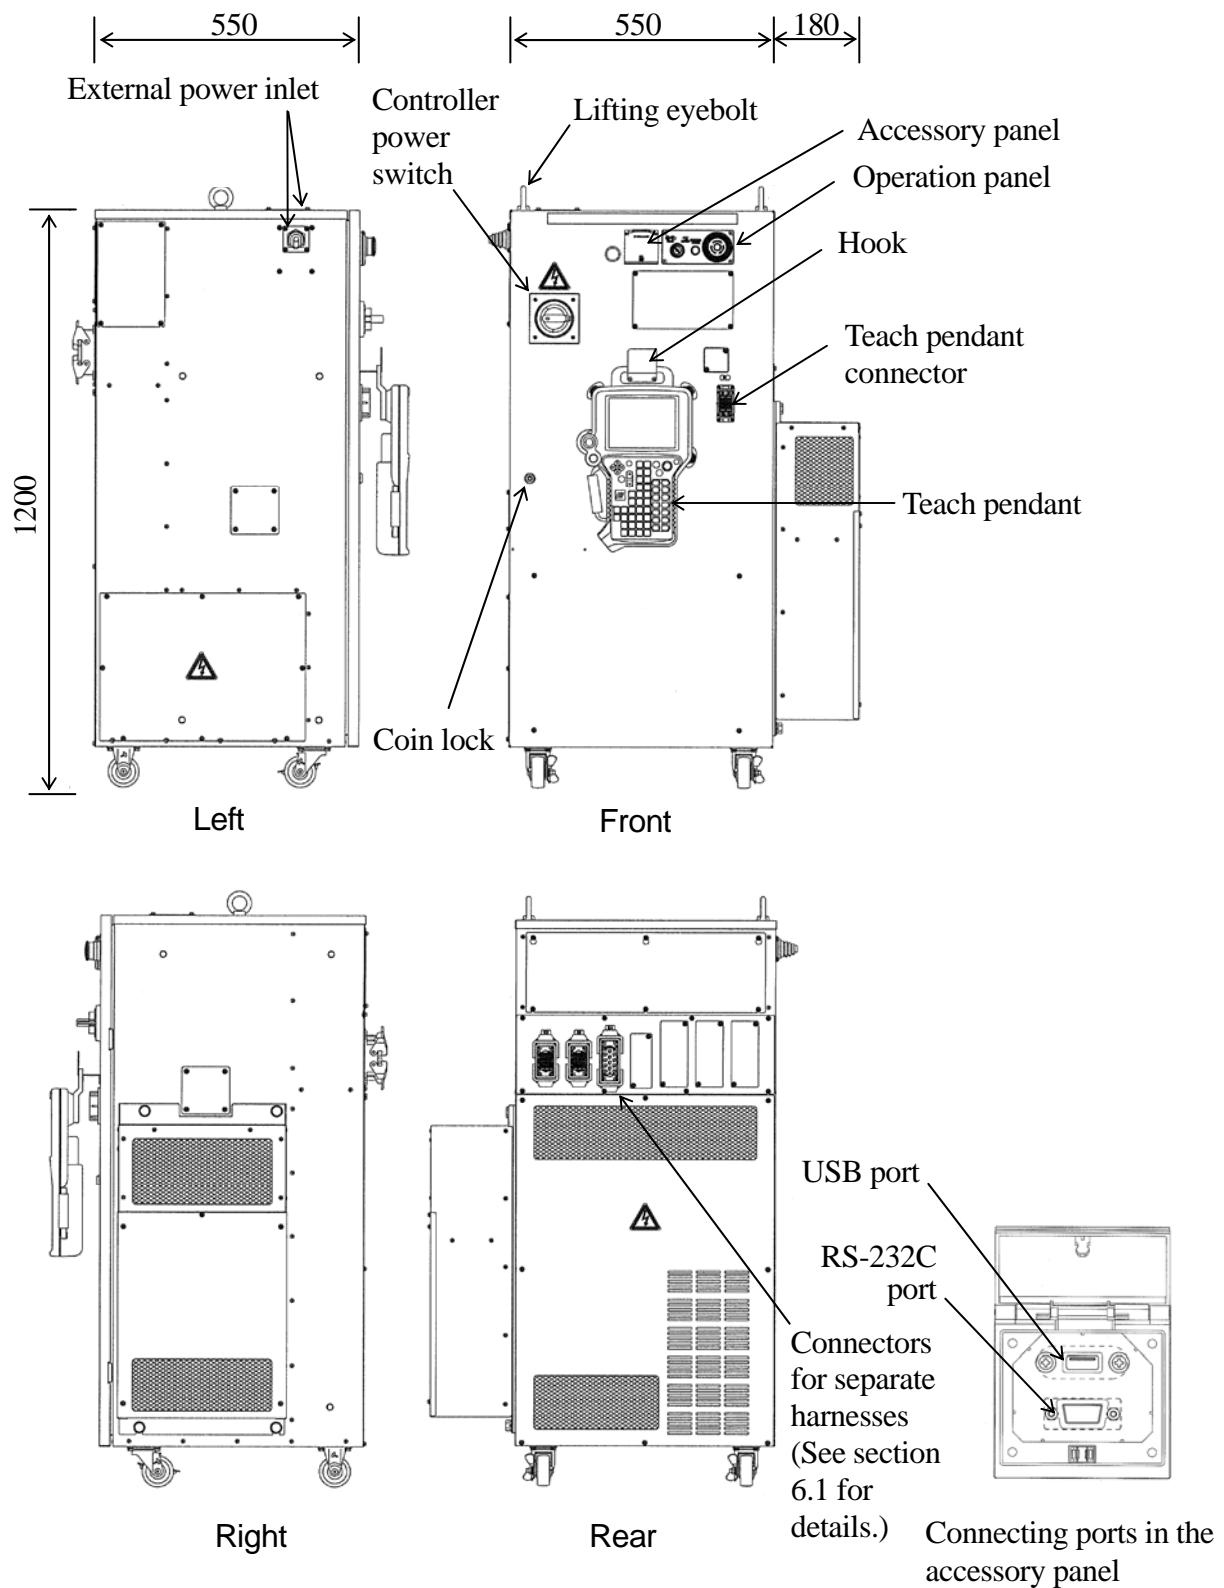



E13 controller

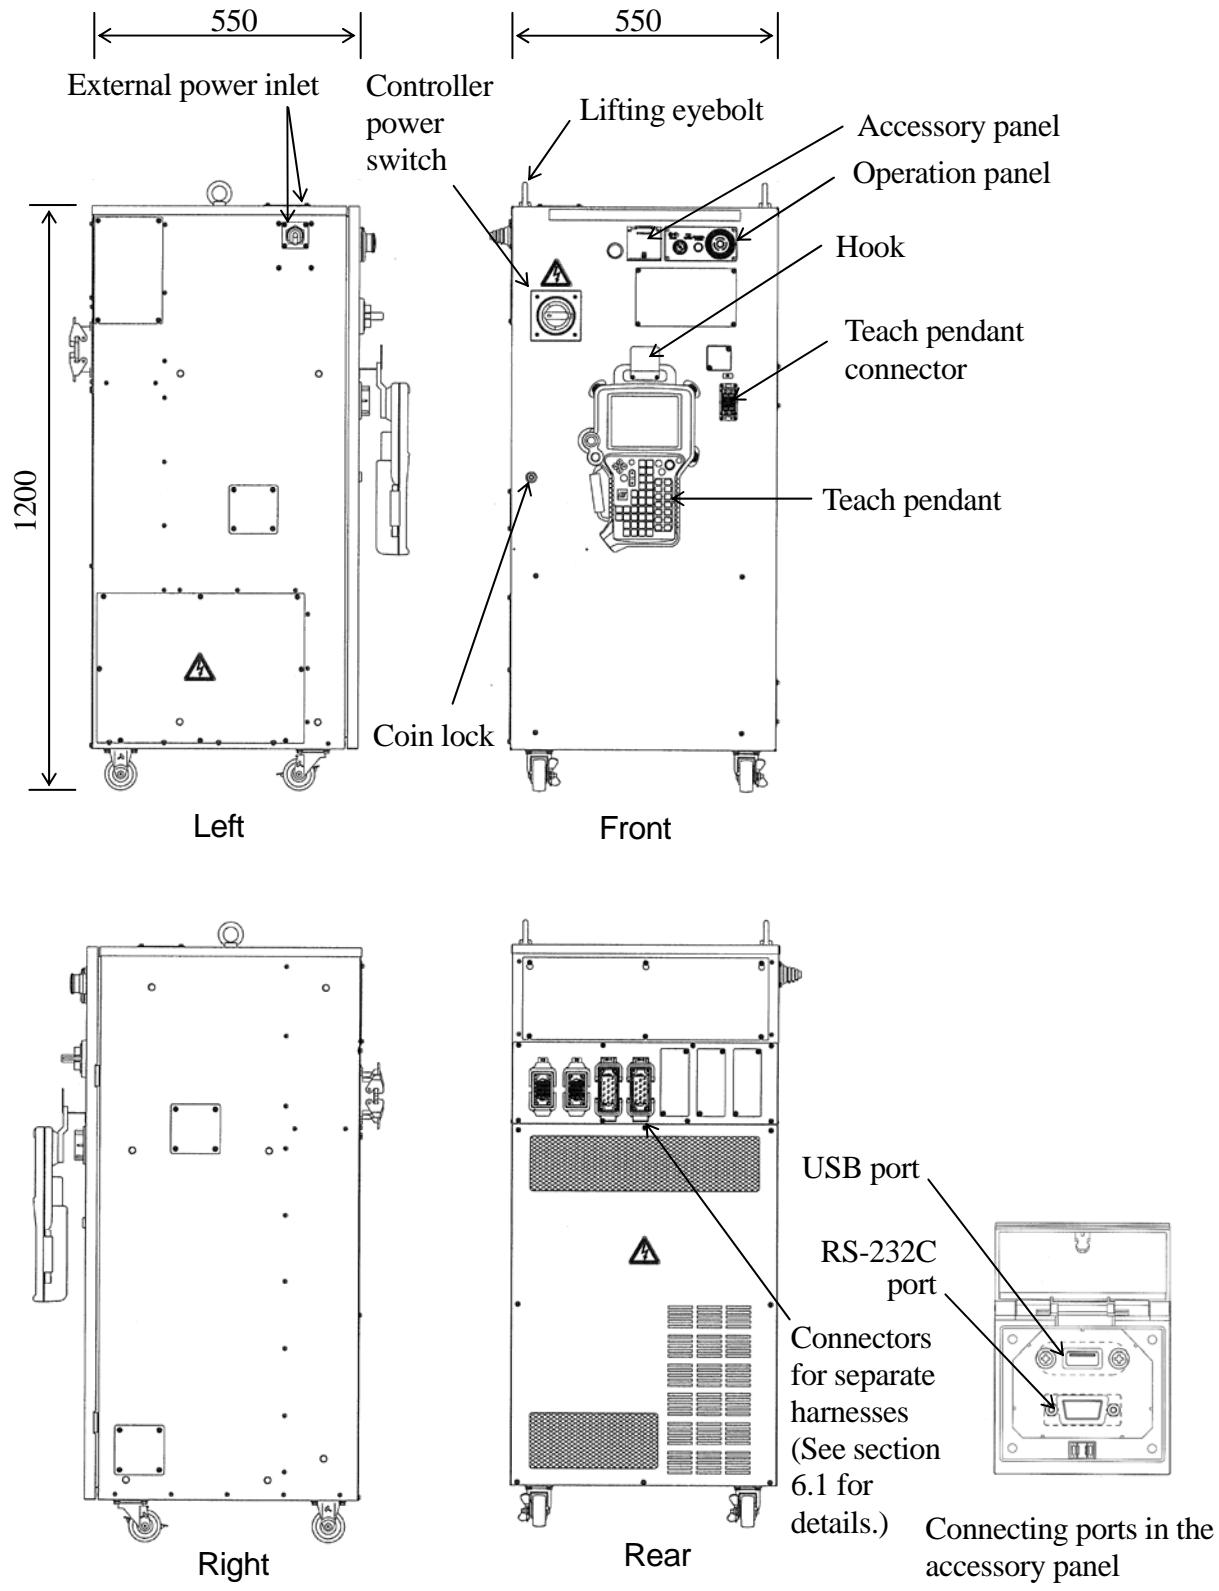



E14 controller (MX)

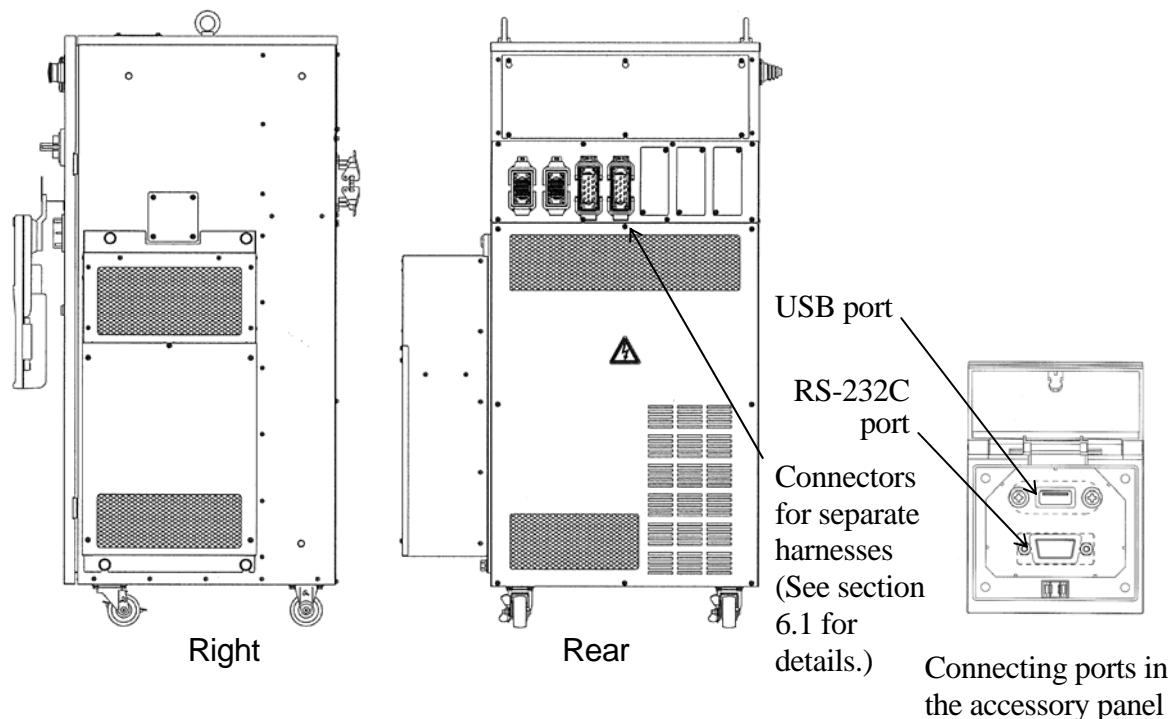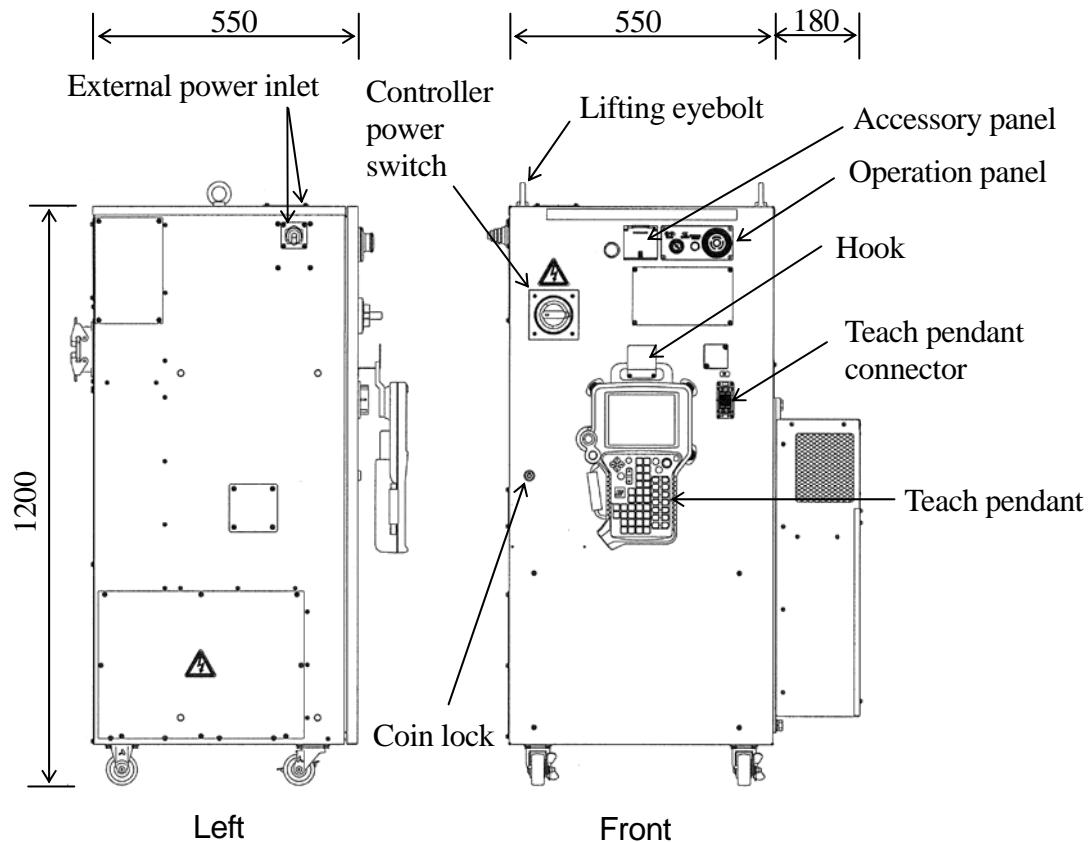



E14 controller (MD)

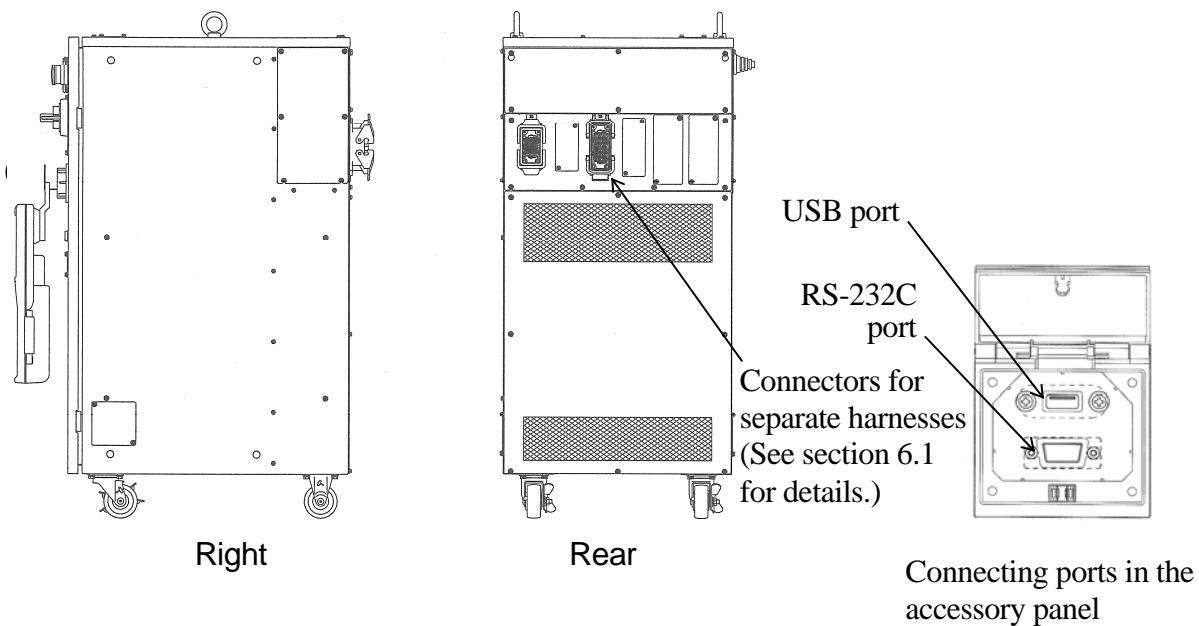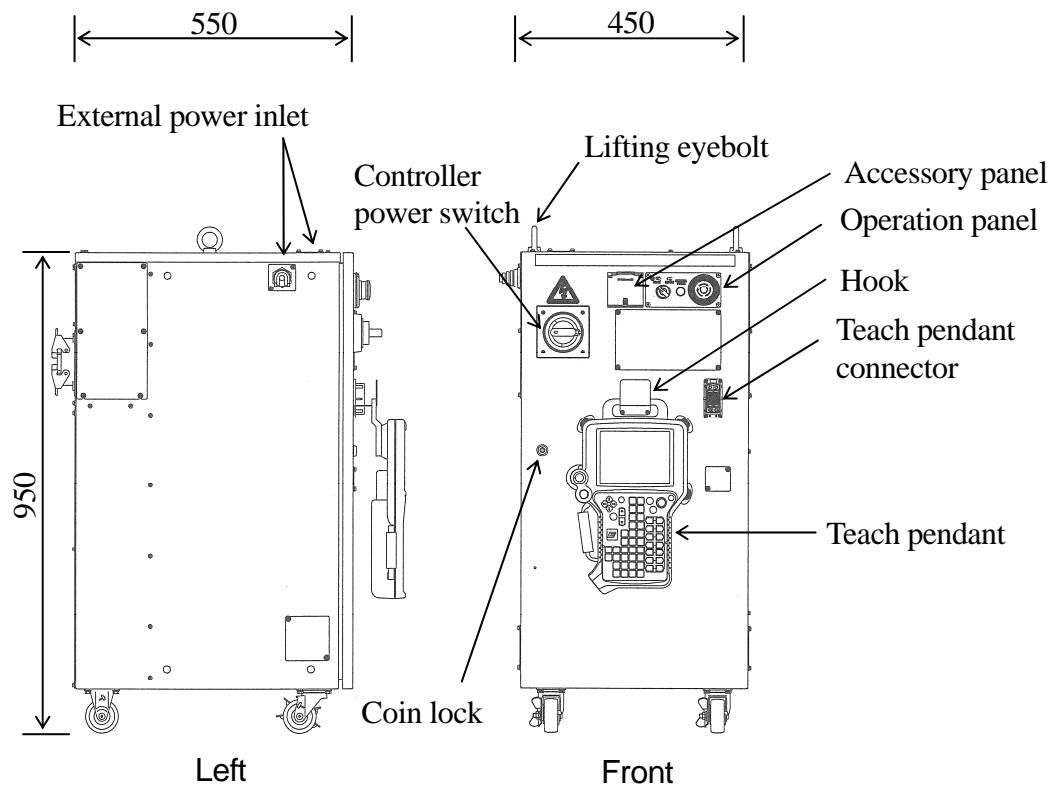


E20 controller

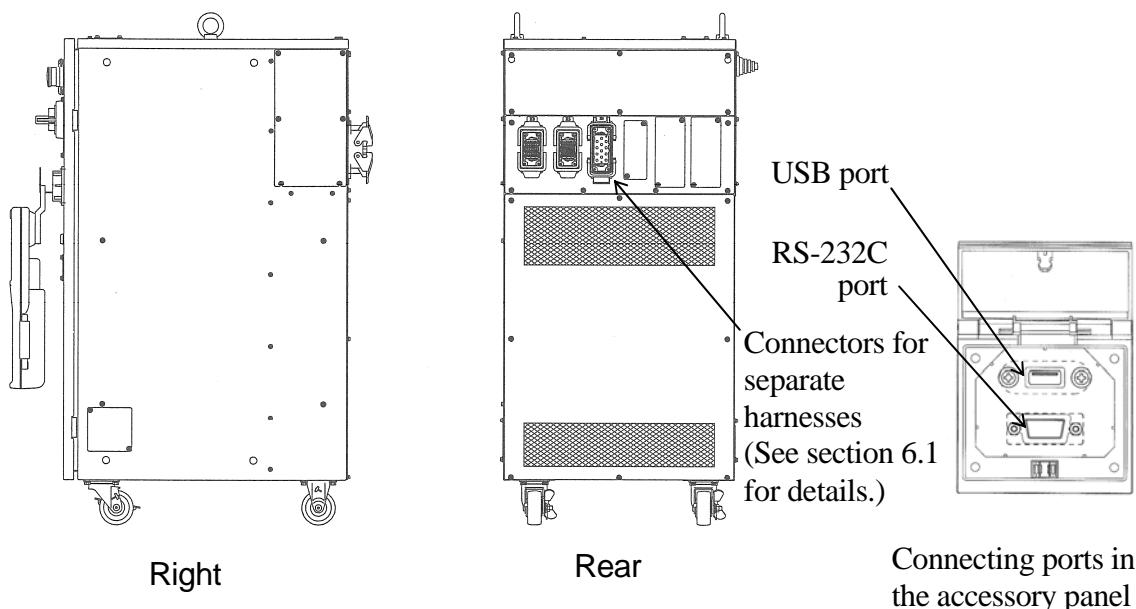
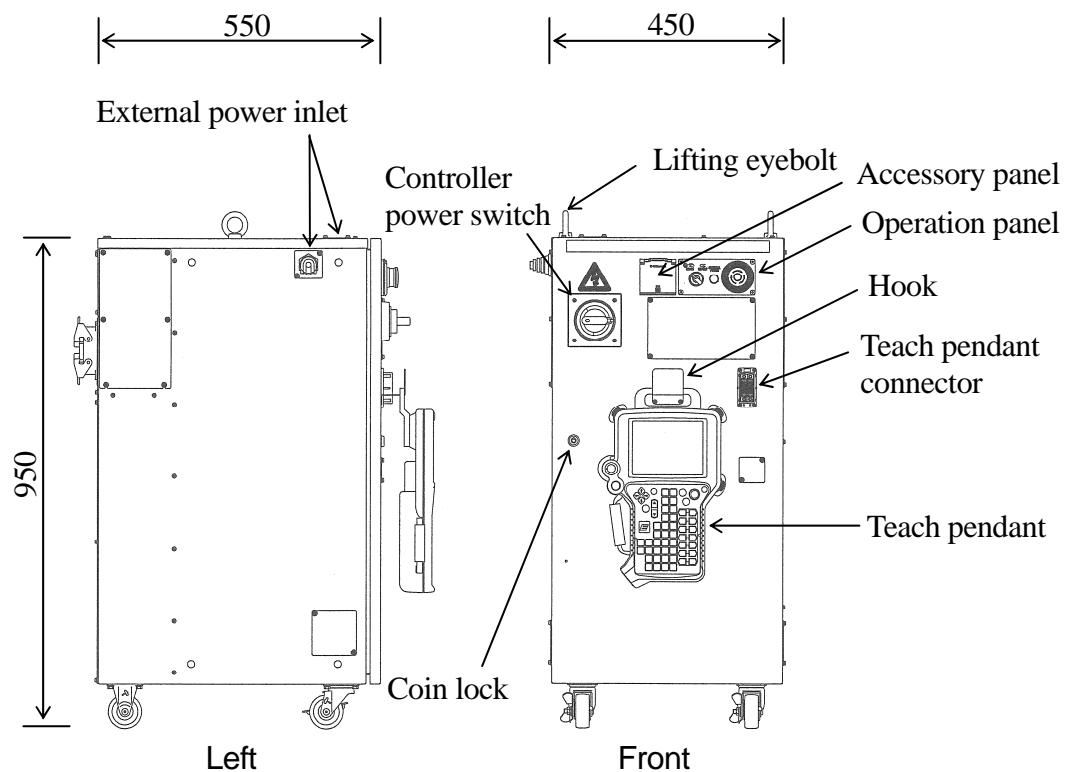


E22 controller

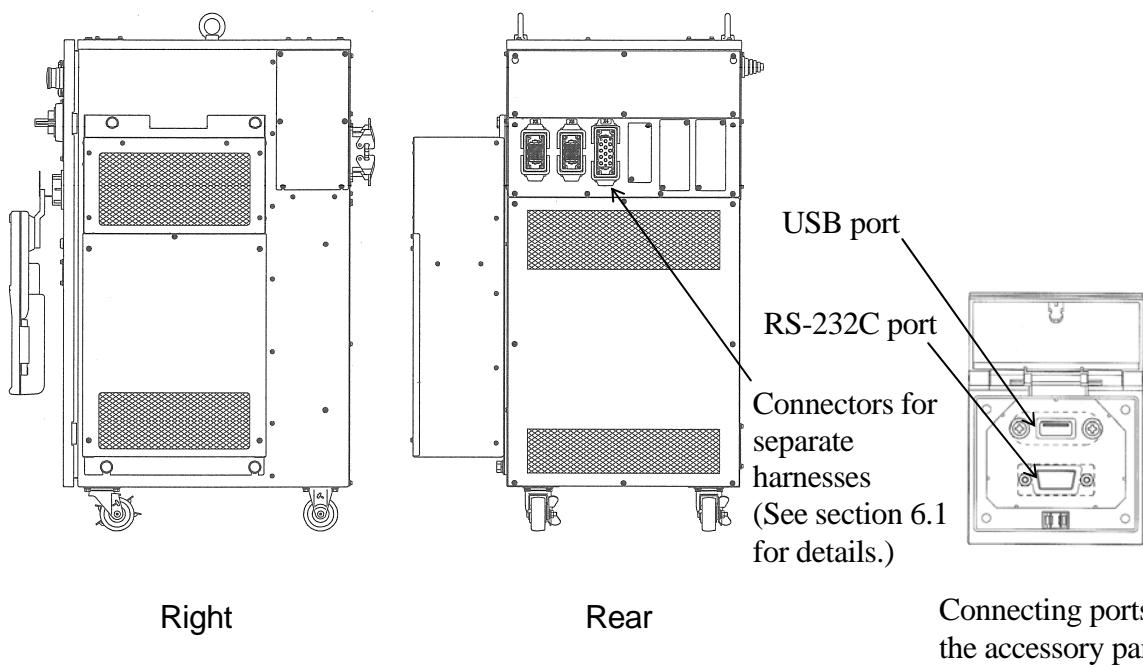
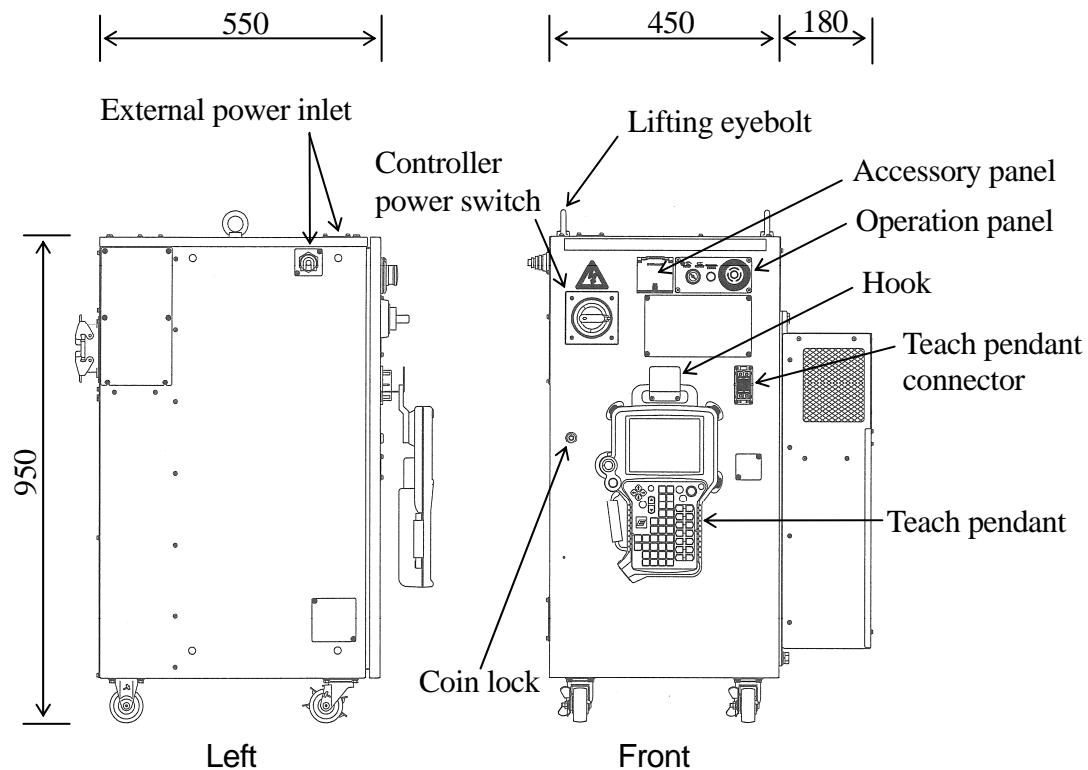


E23 controller


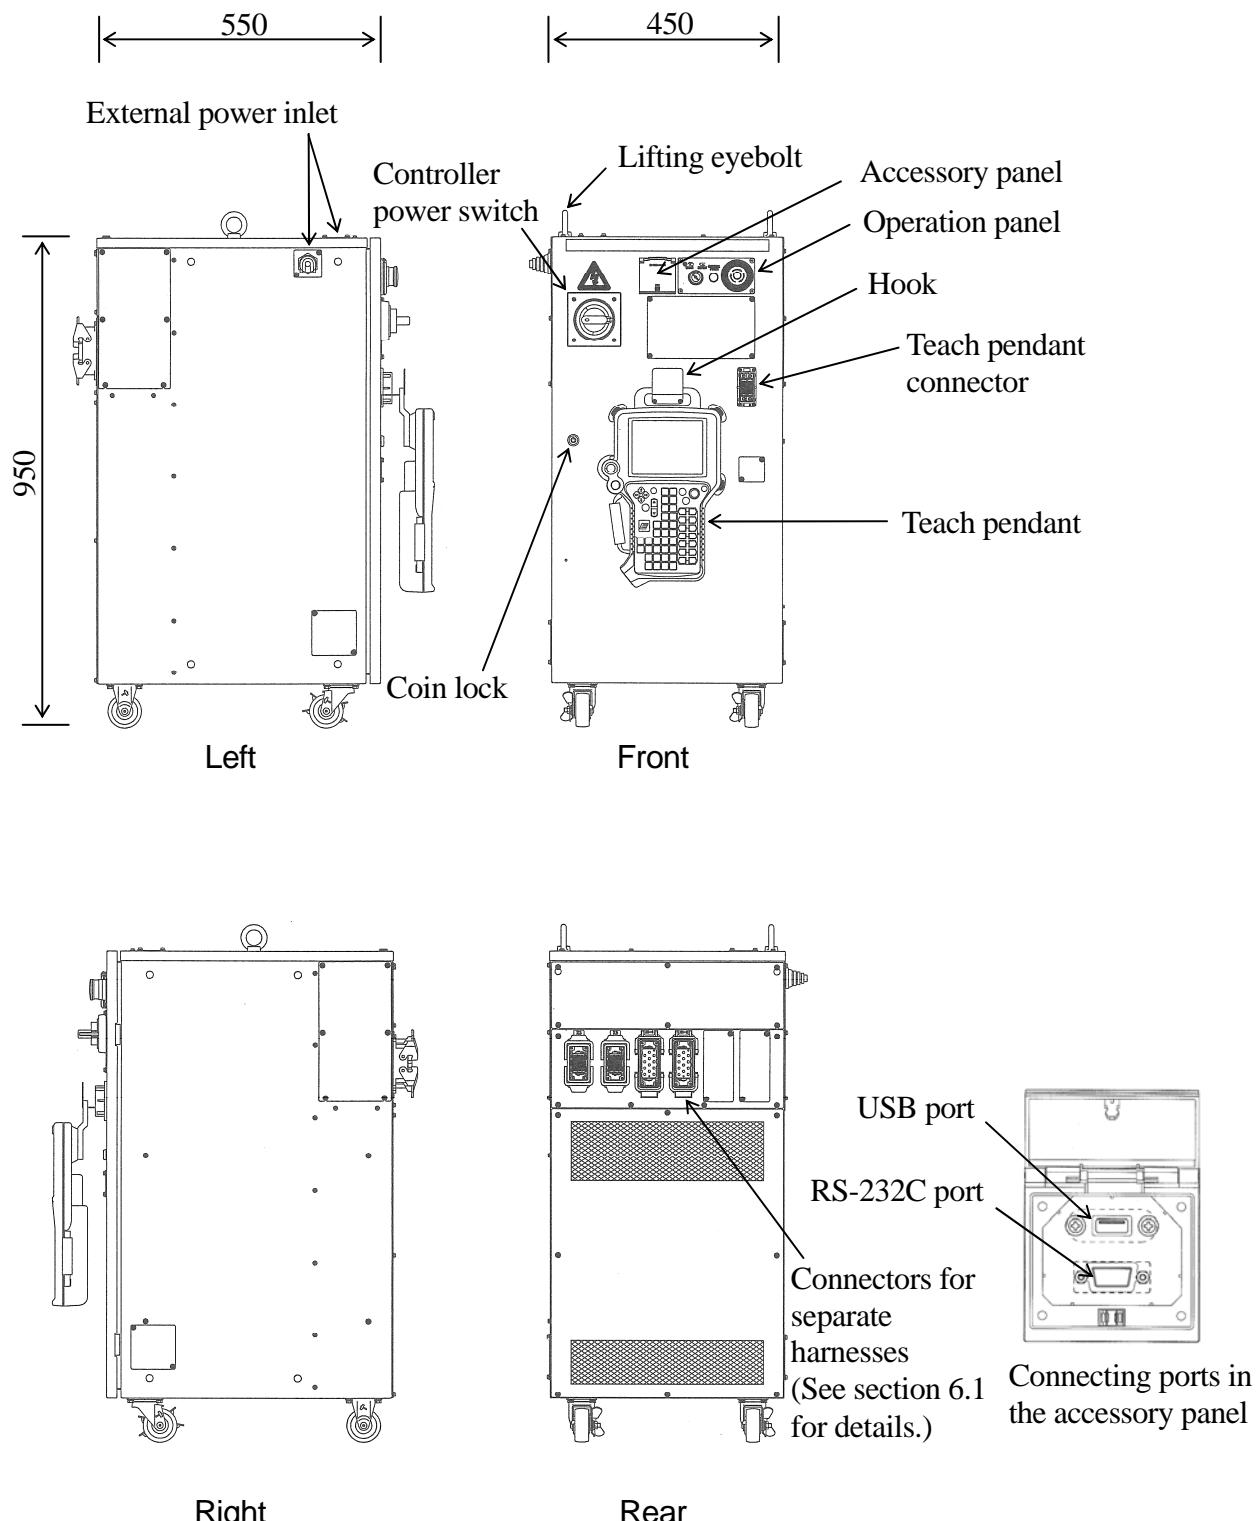


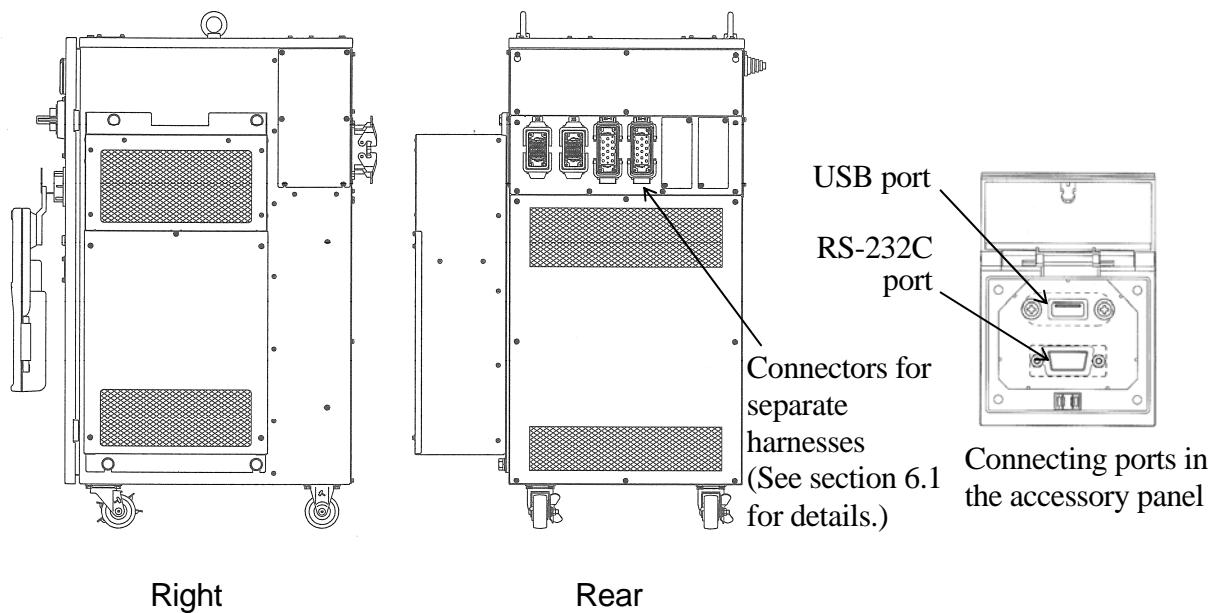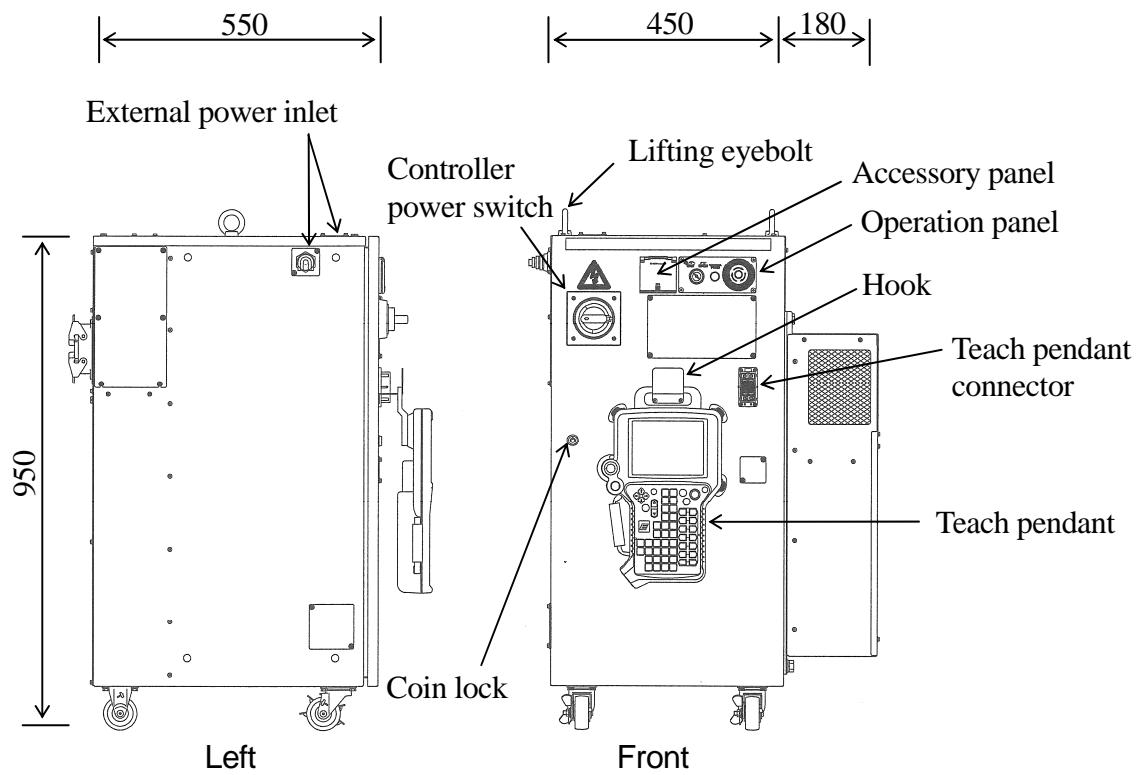



E24 controller (MD)

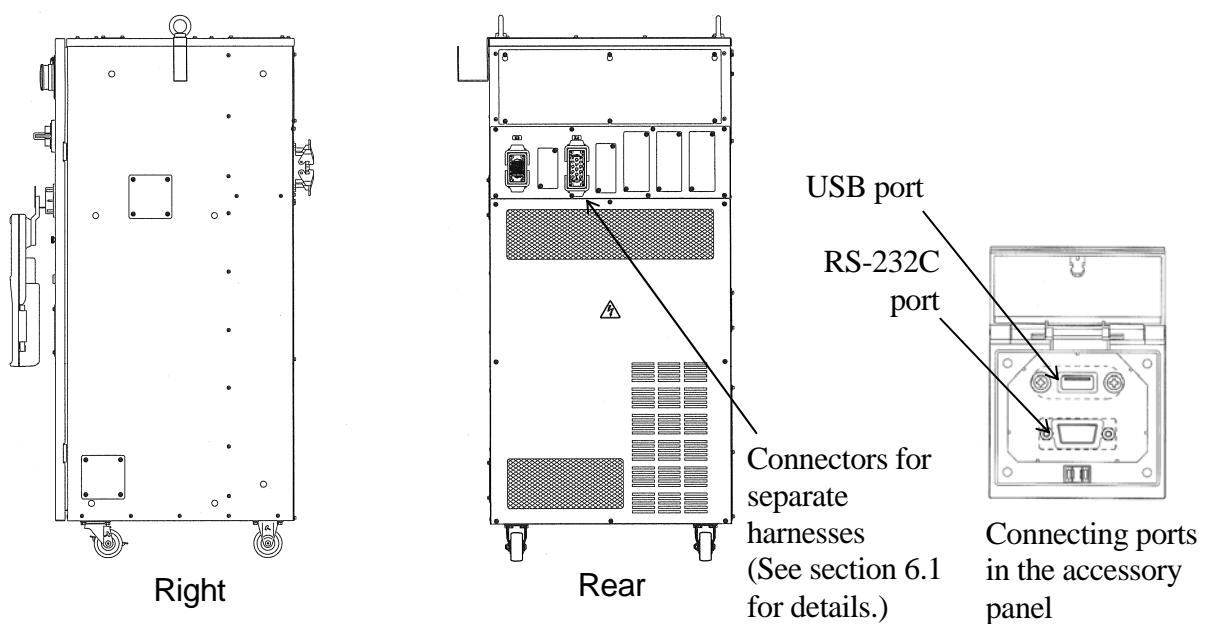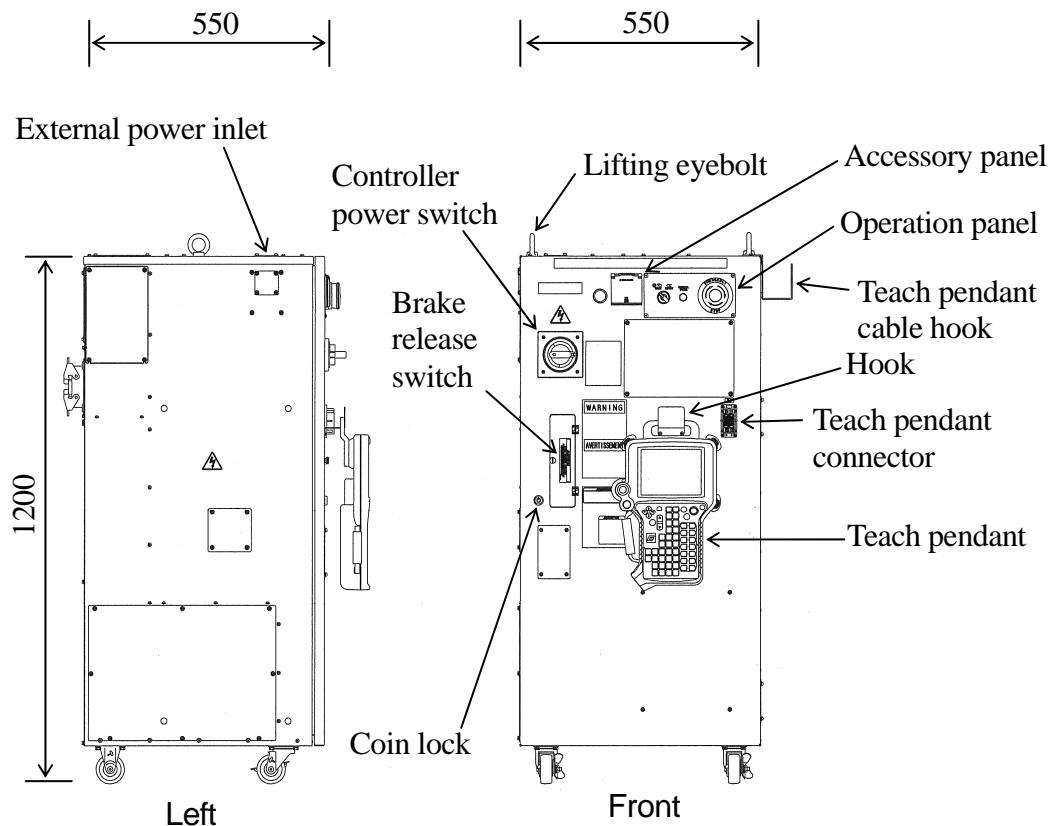


E30 controller

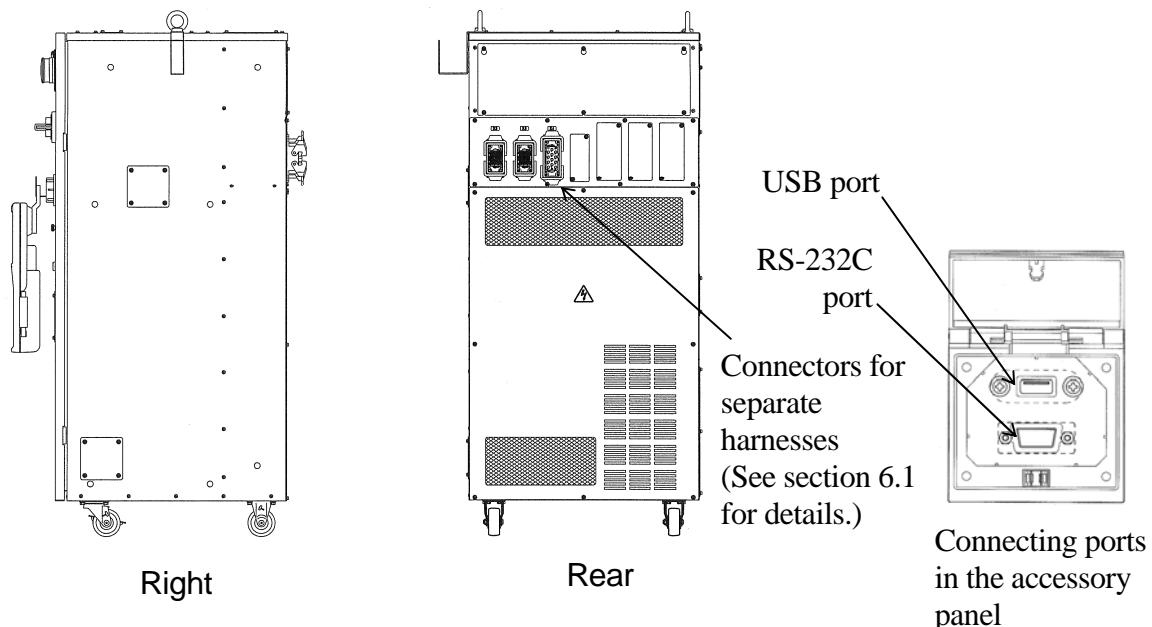
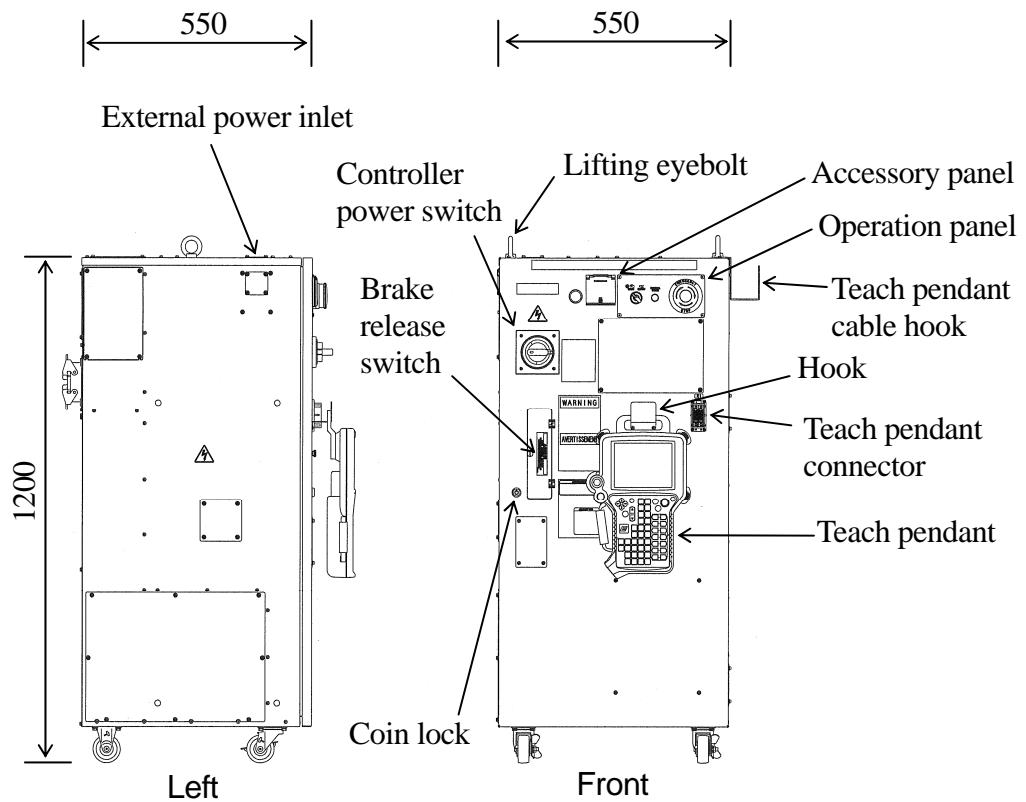


E32 controller

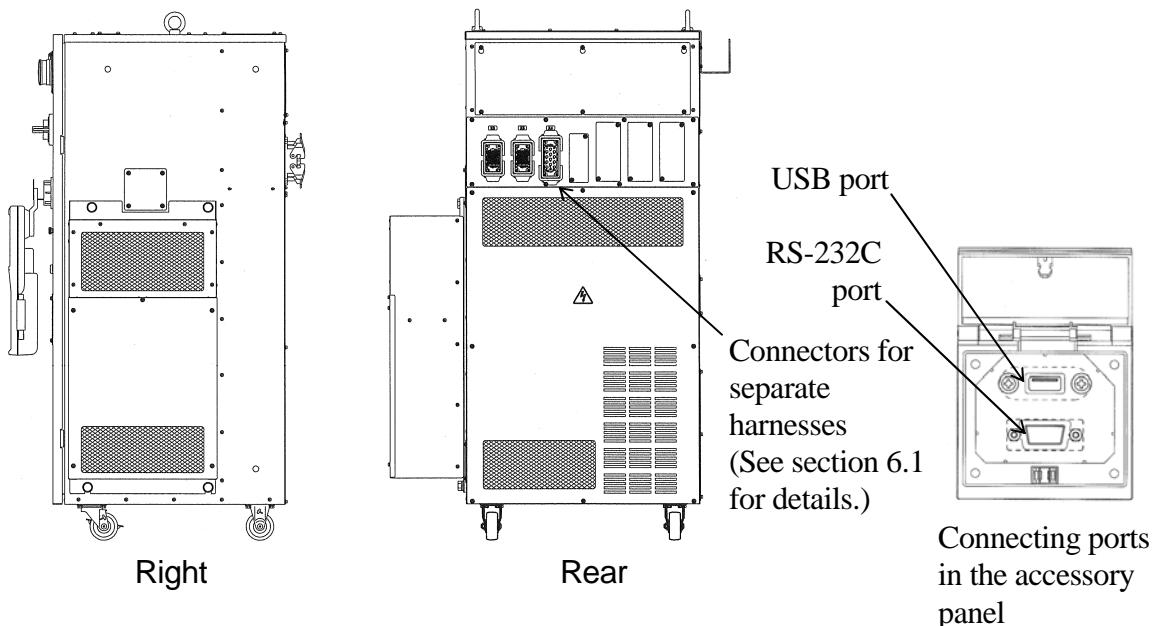
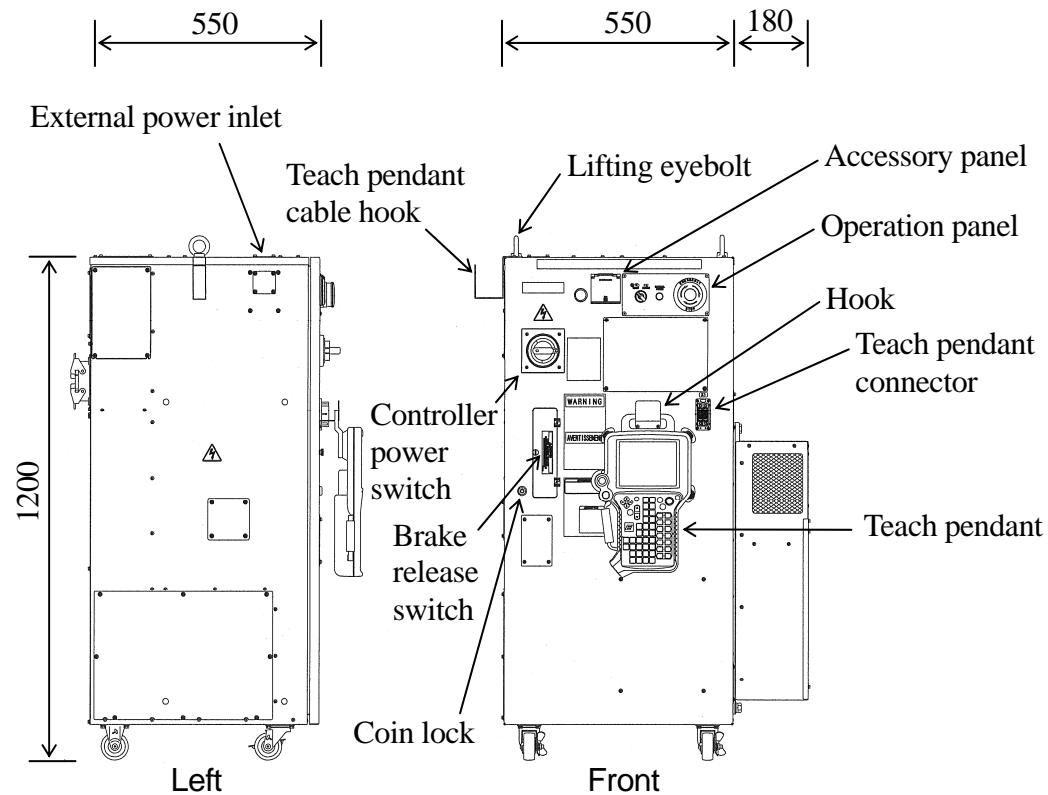


E33 controller


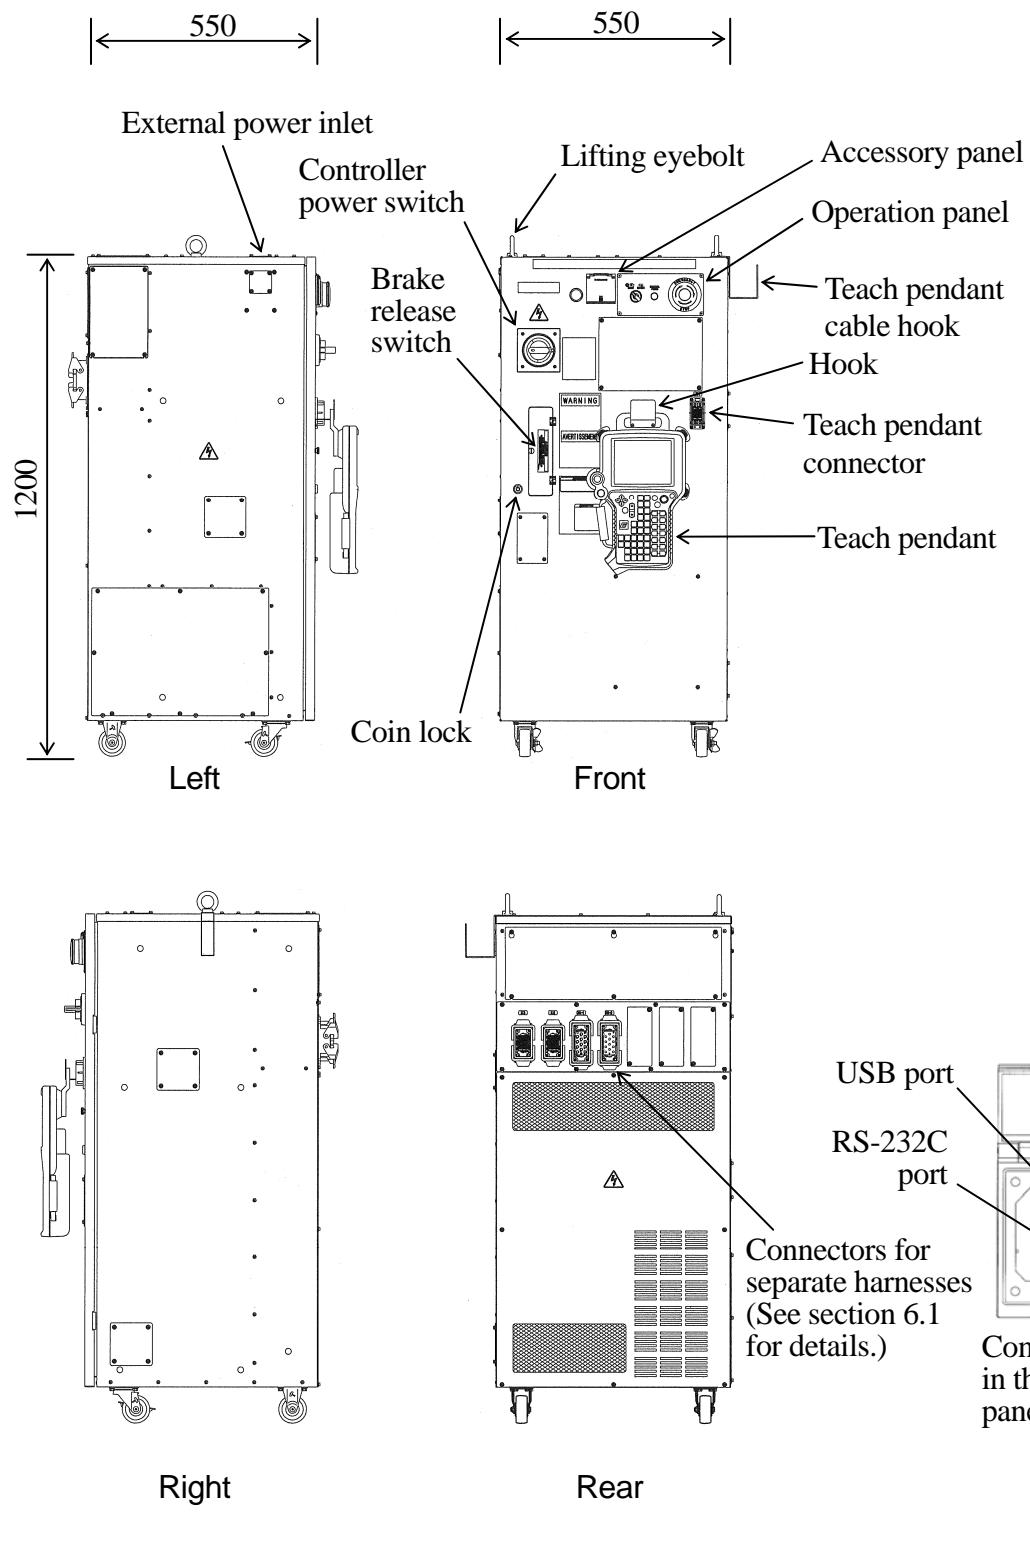


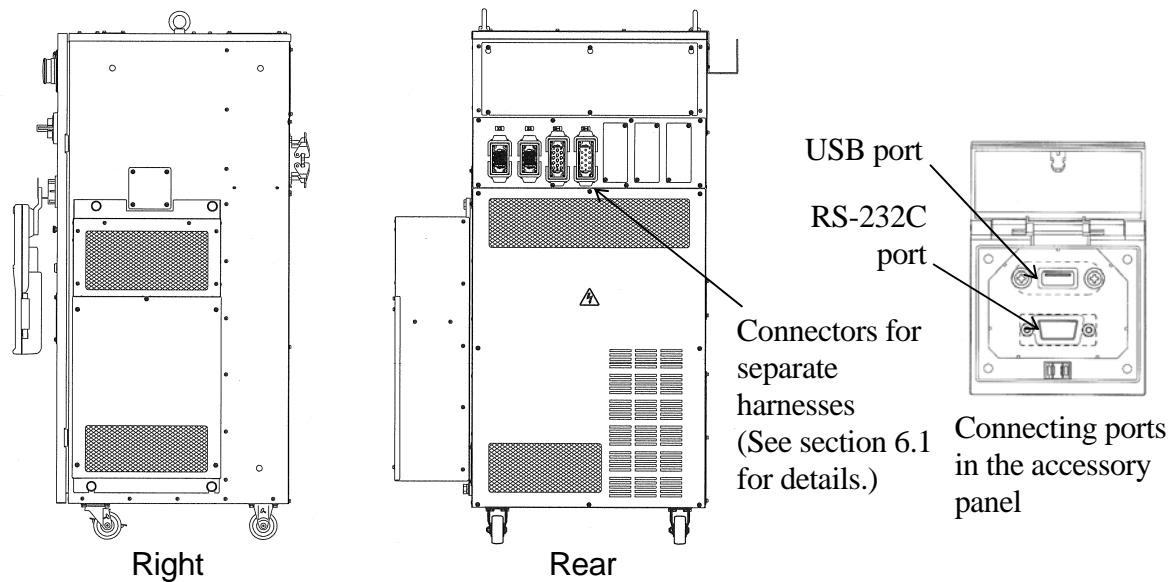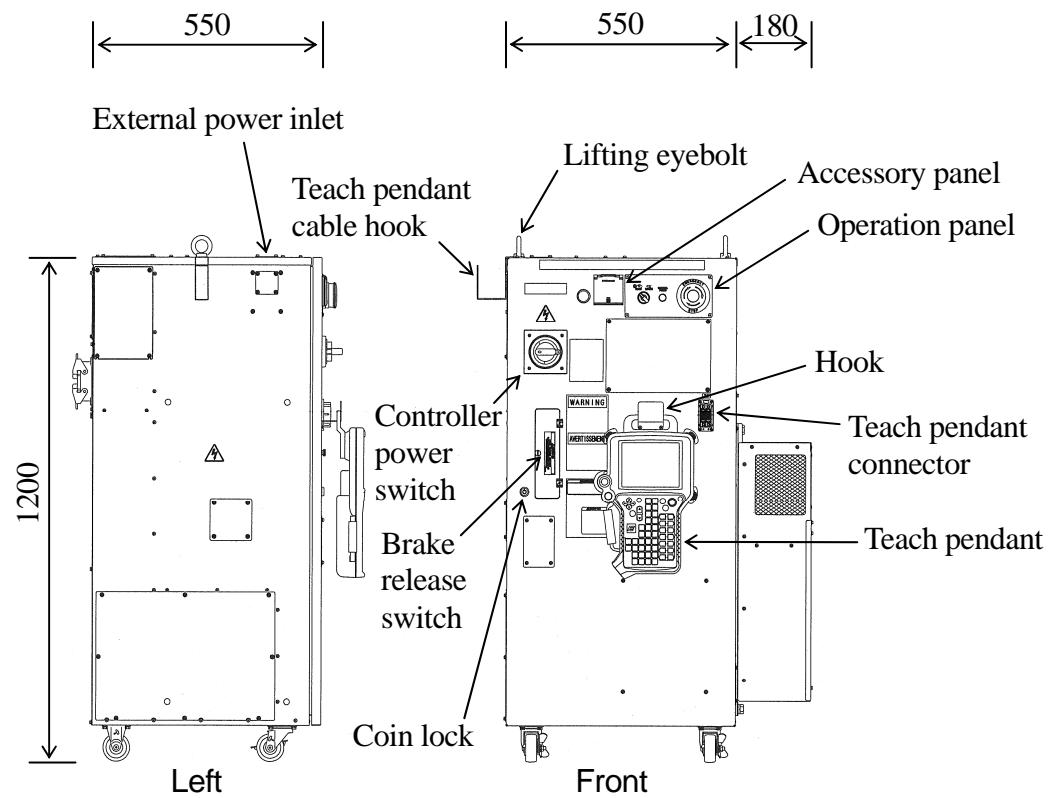



E34 controller (MD)

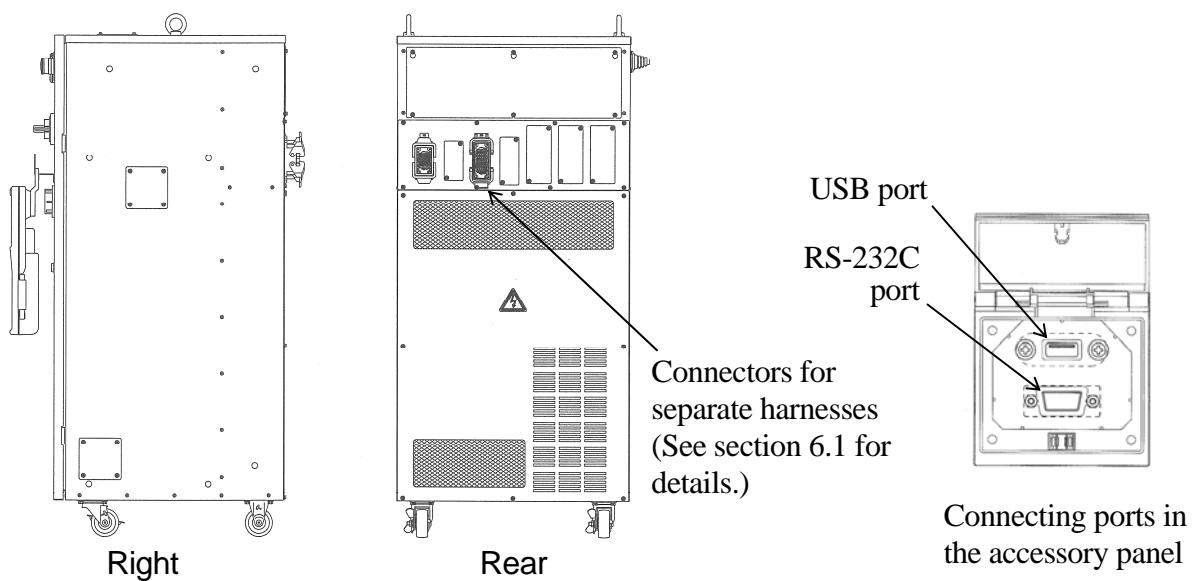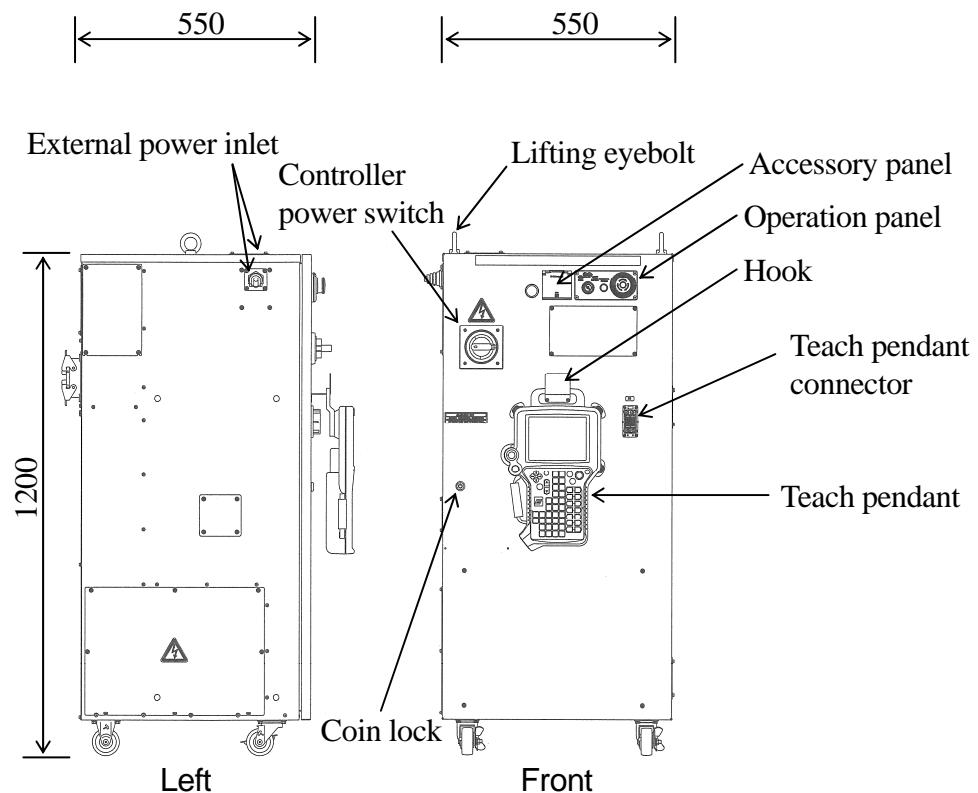



E40 controller

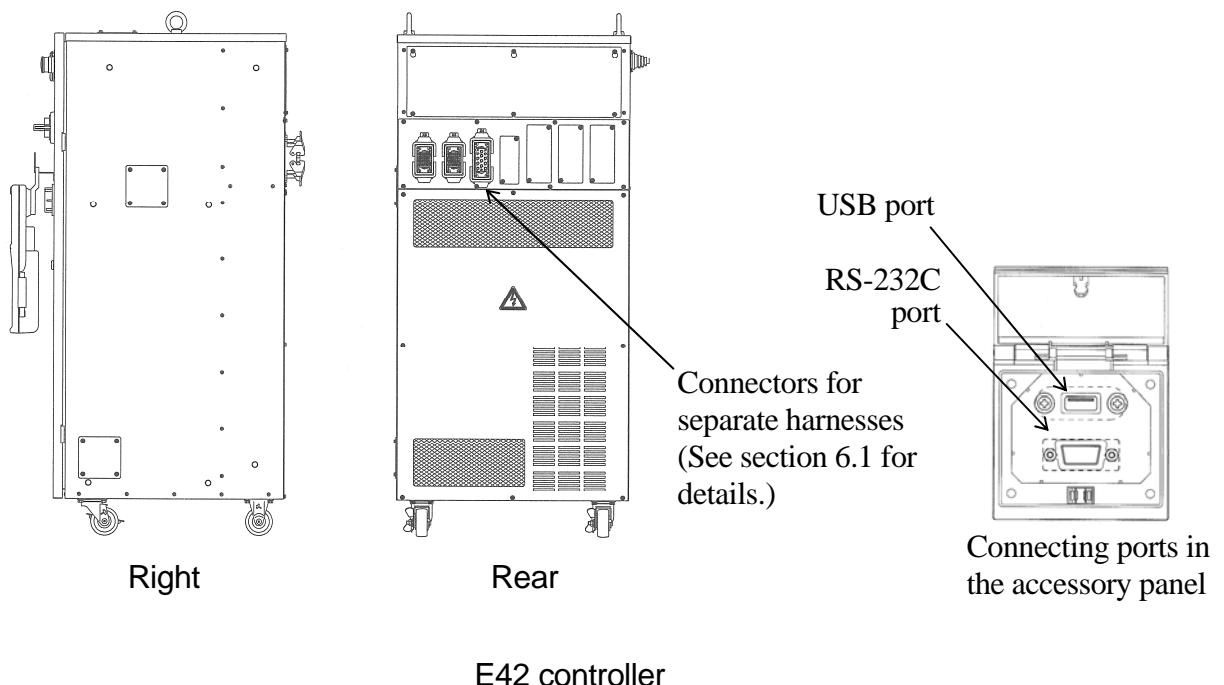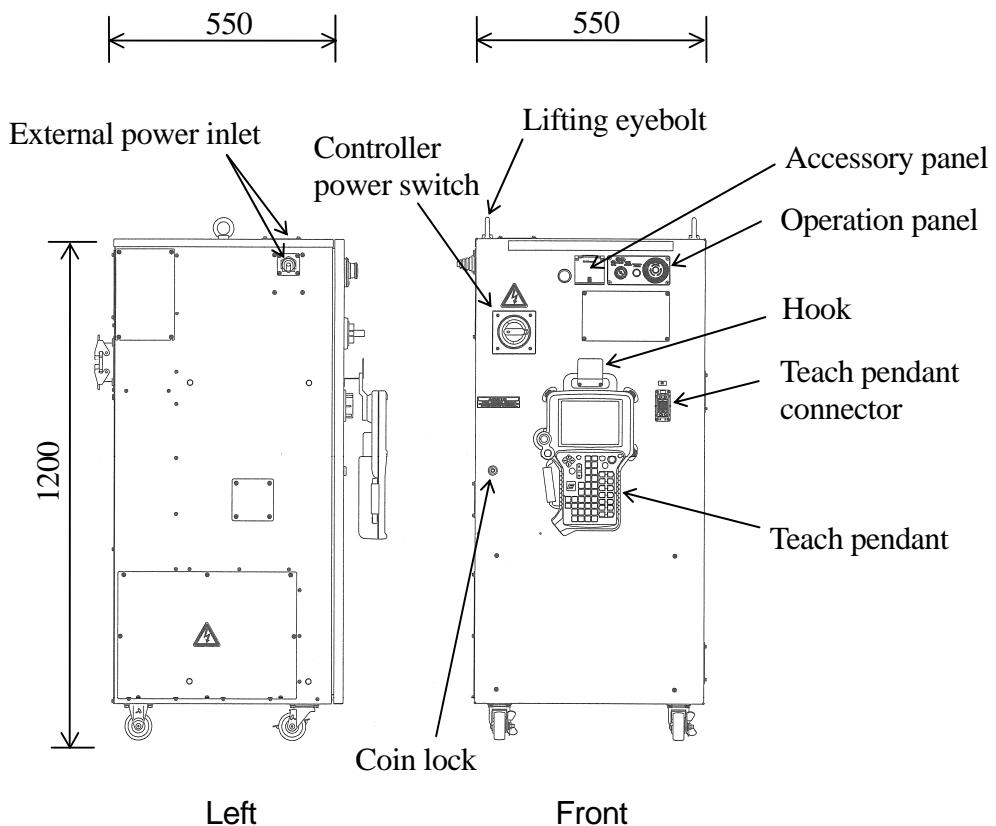



E42 controller

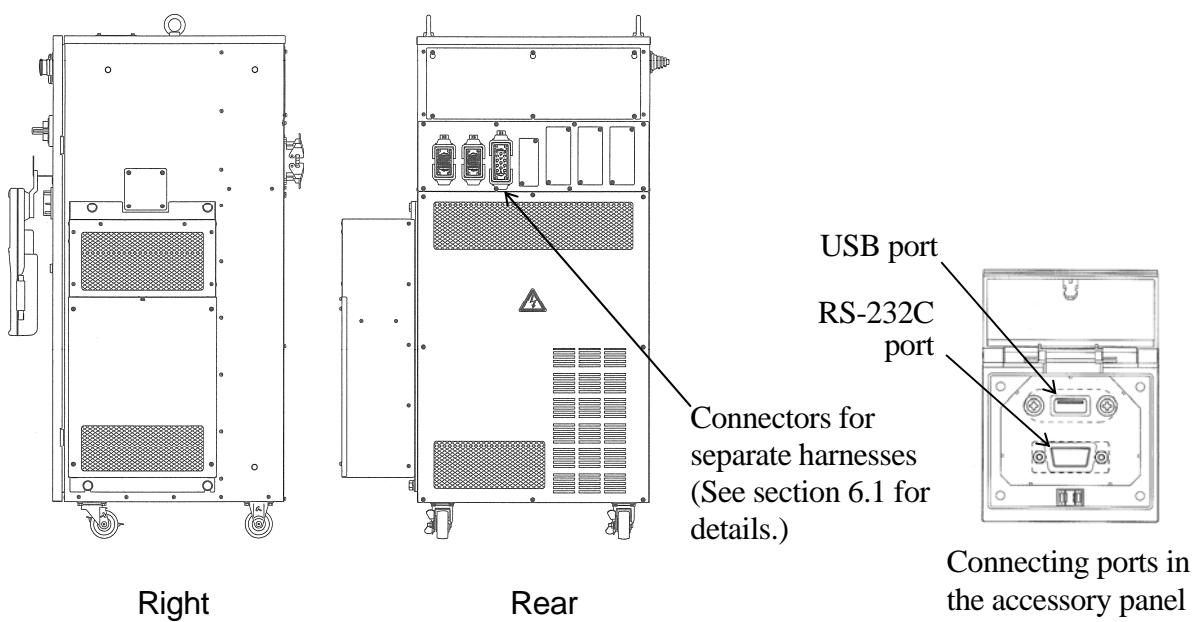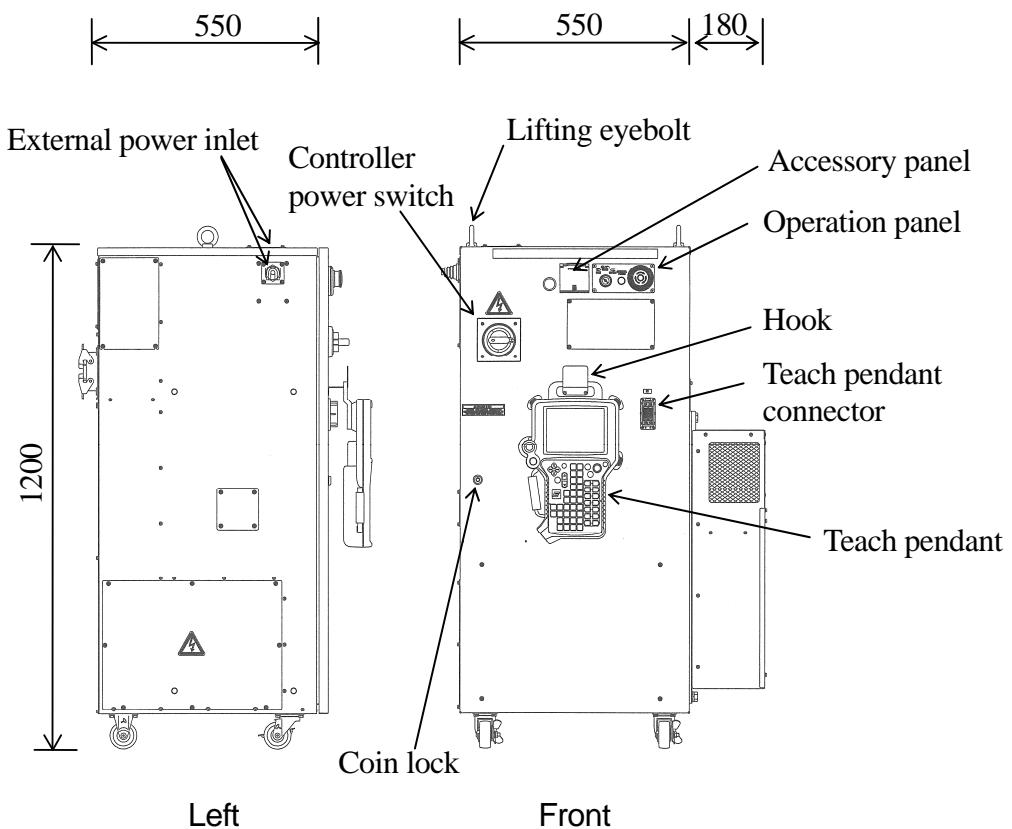


E43 controller

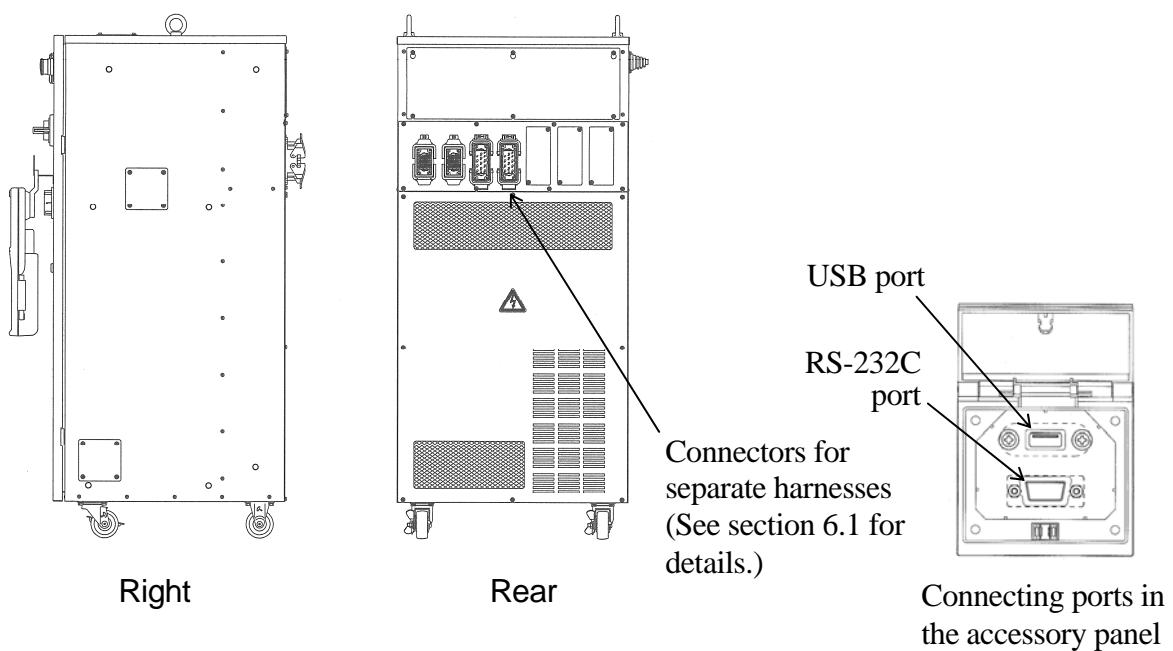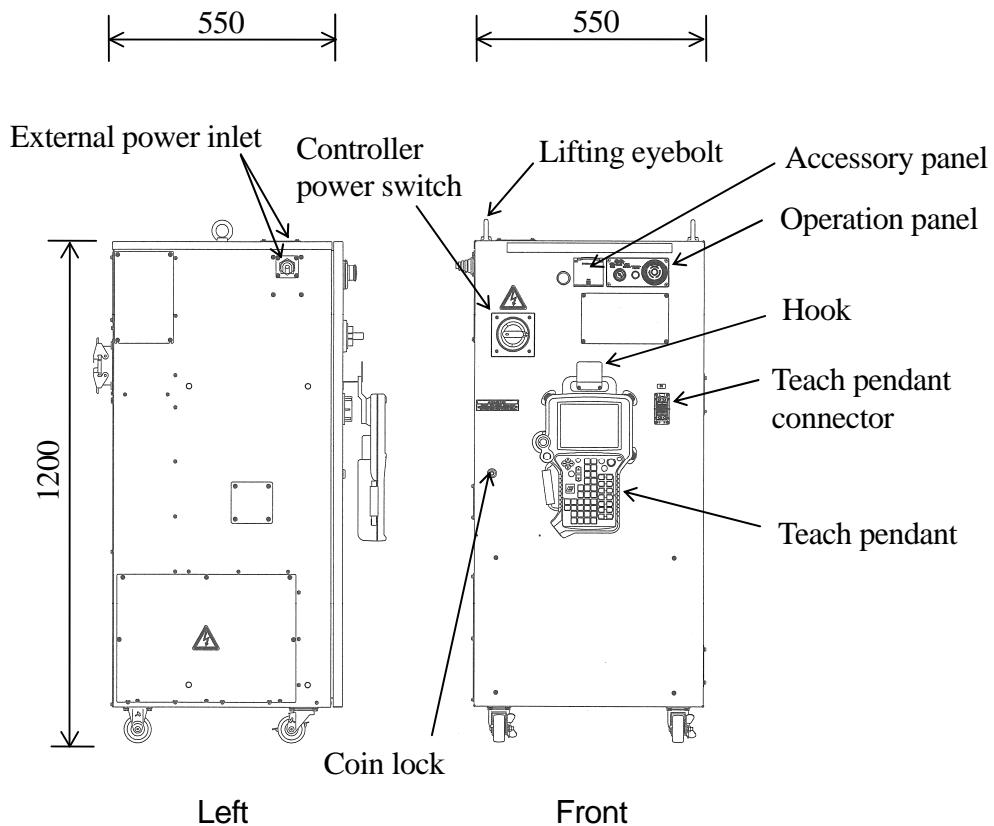


E44 controller (MX)

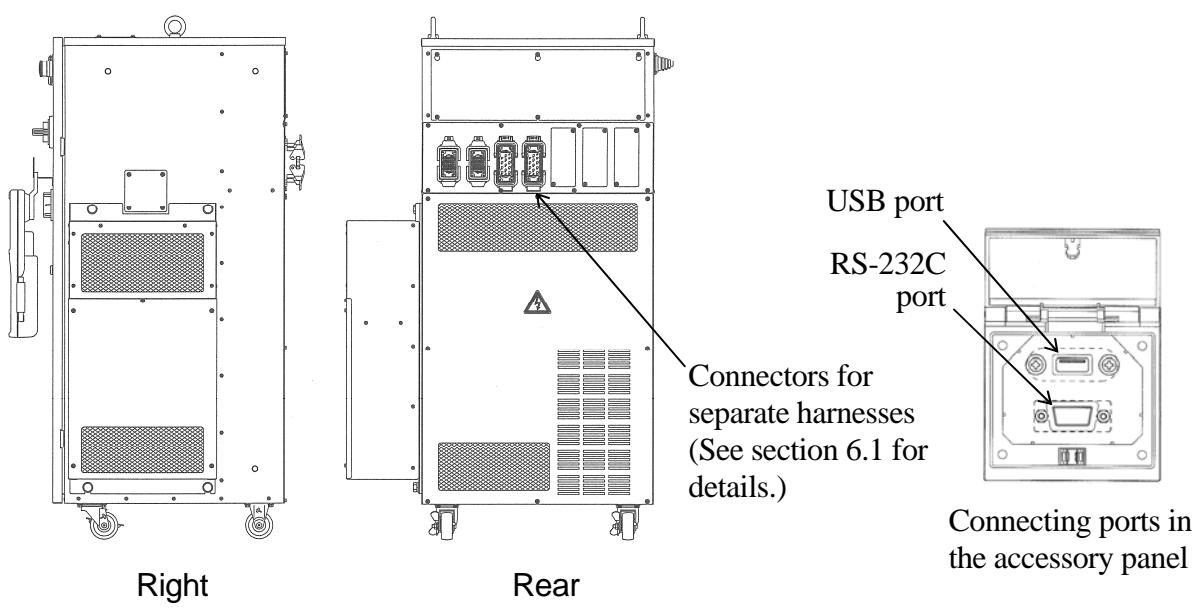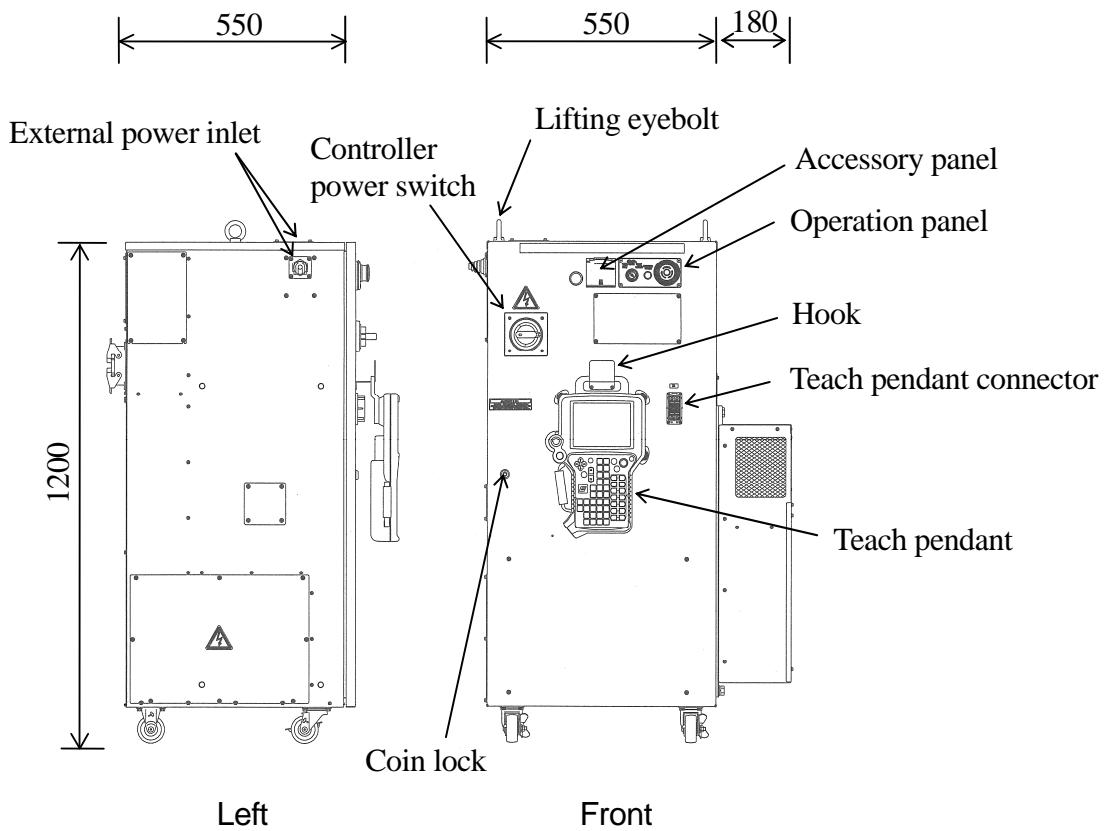


E44 controller (MD)

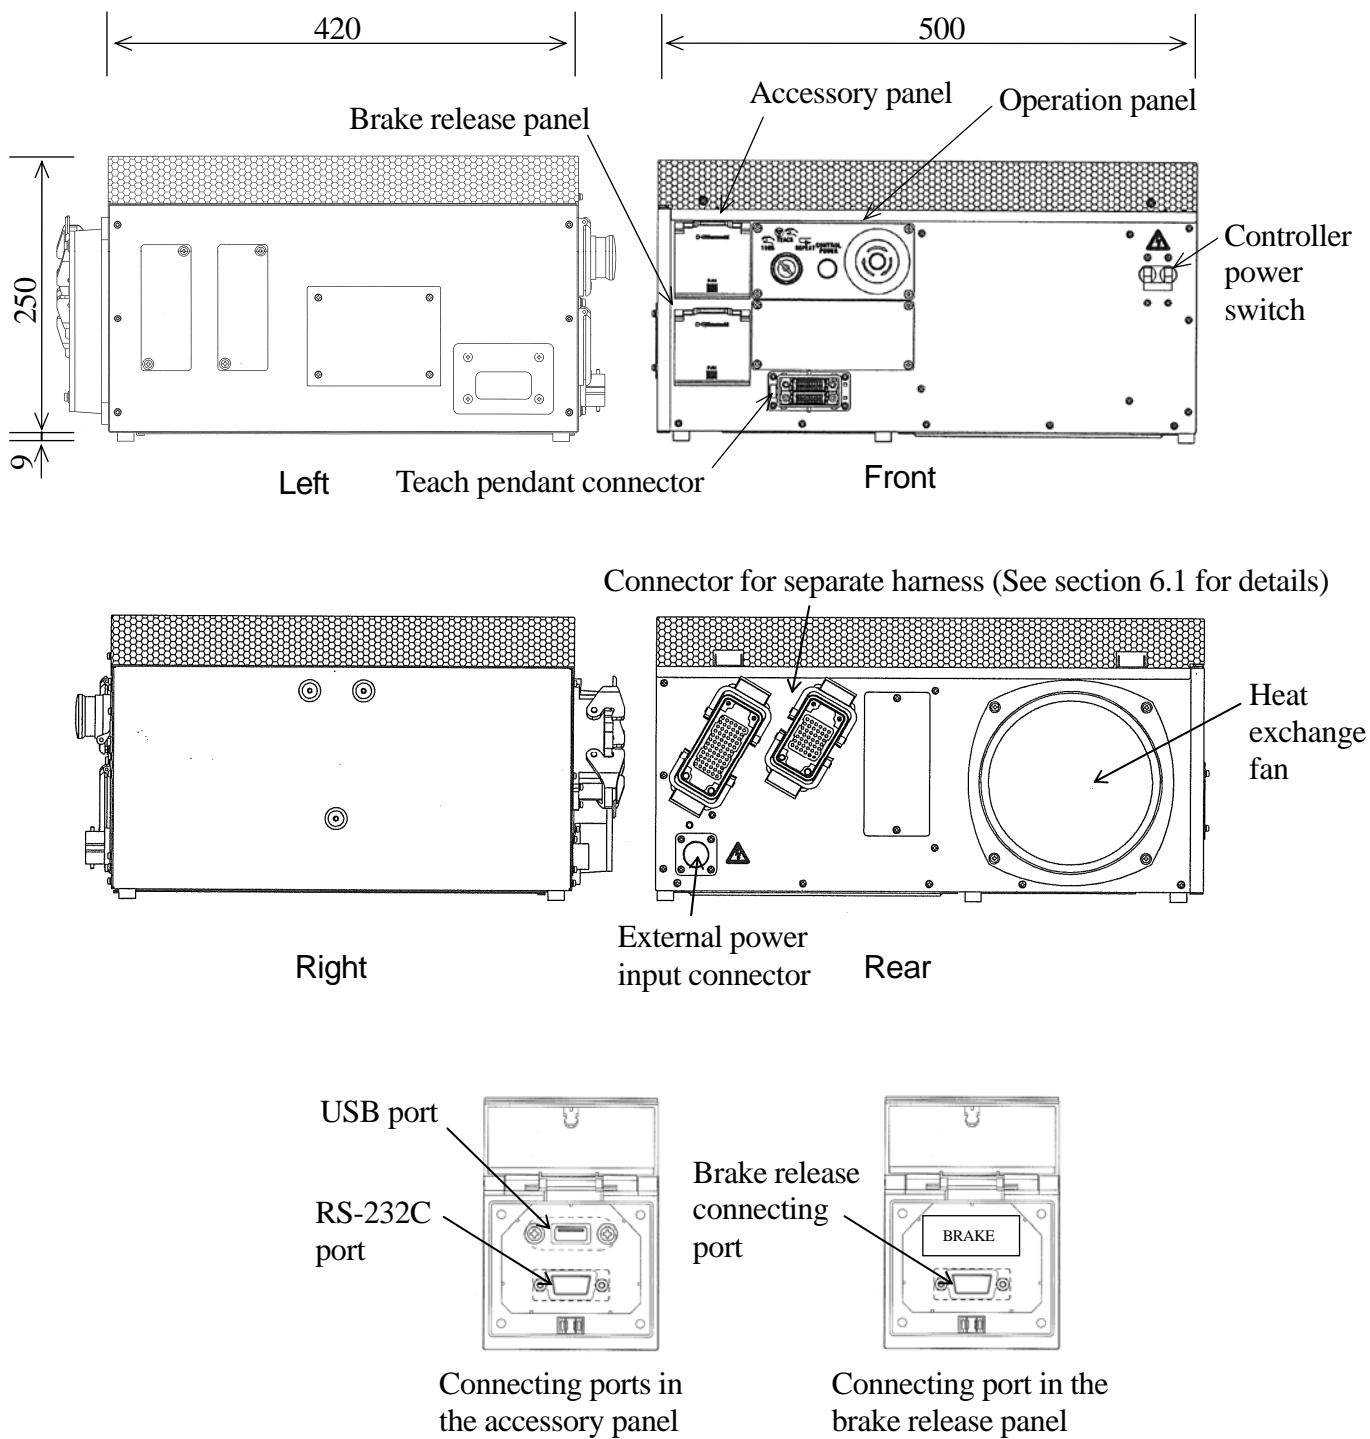


E70/E71 controllers

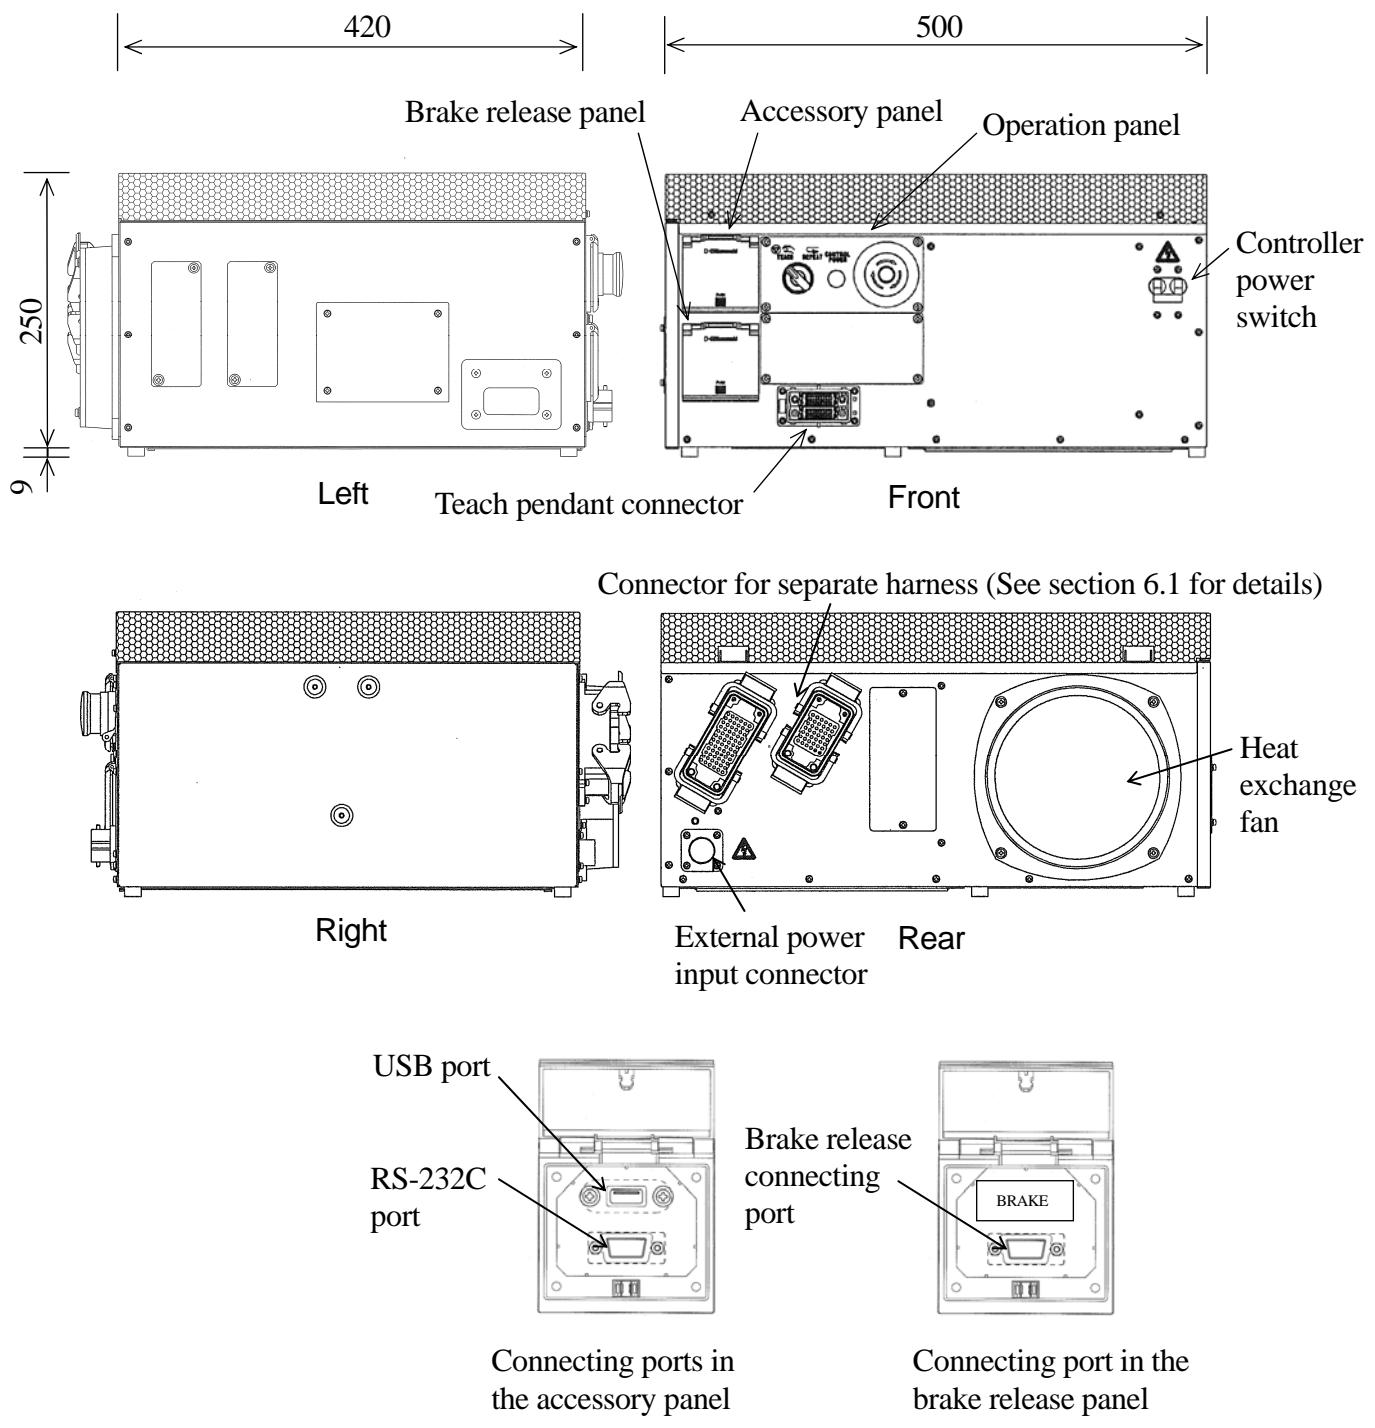


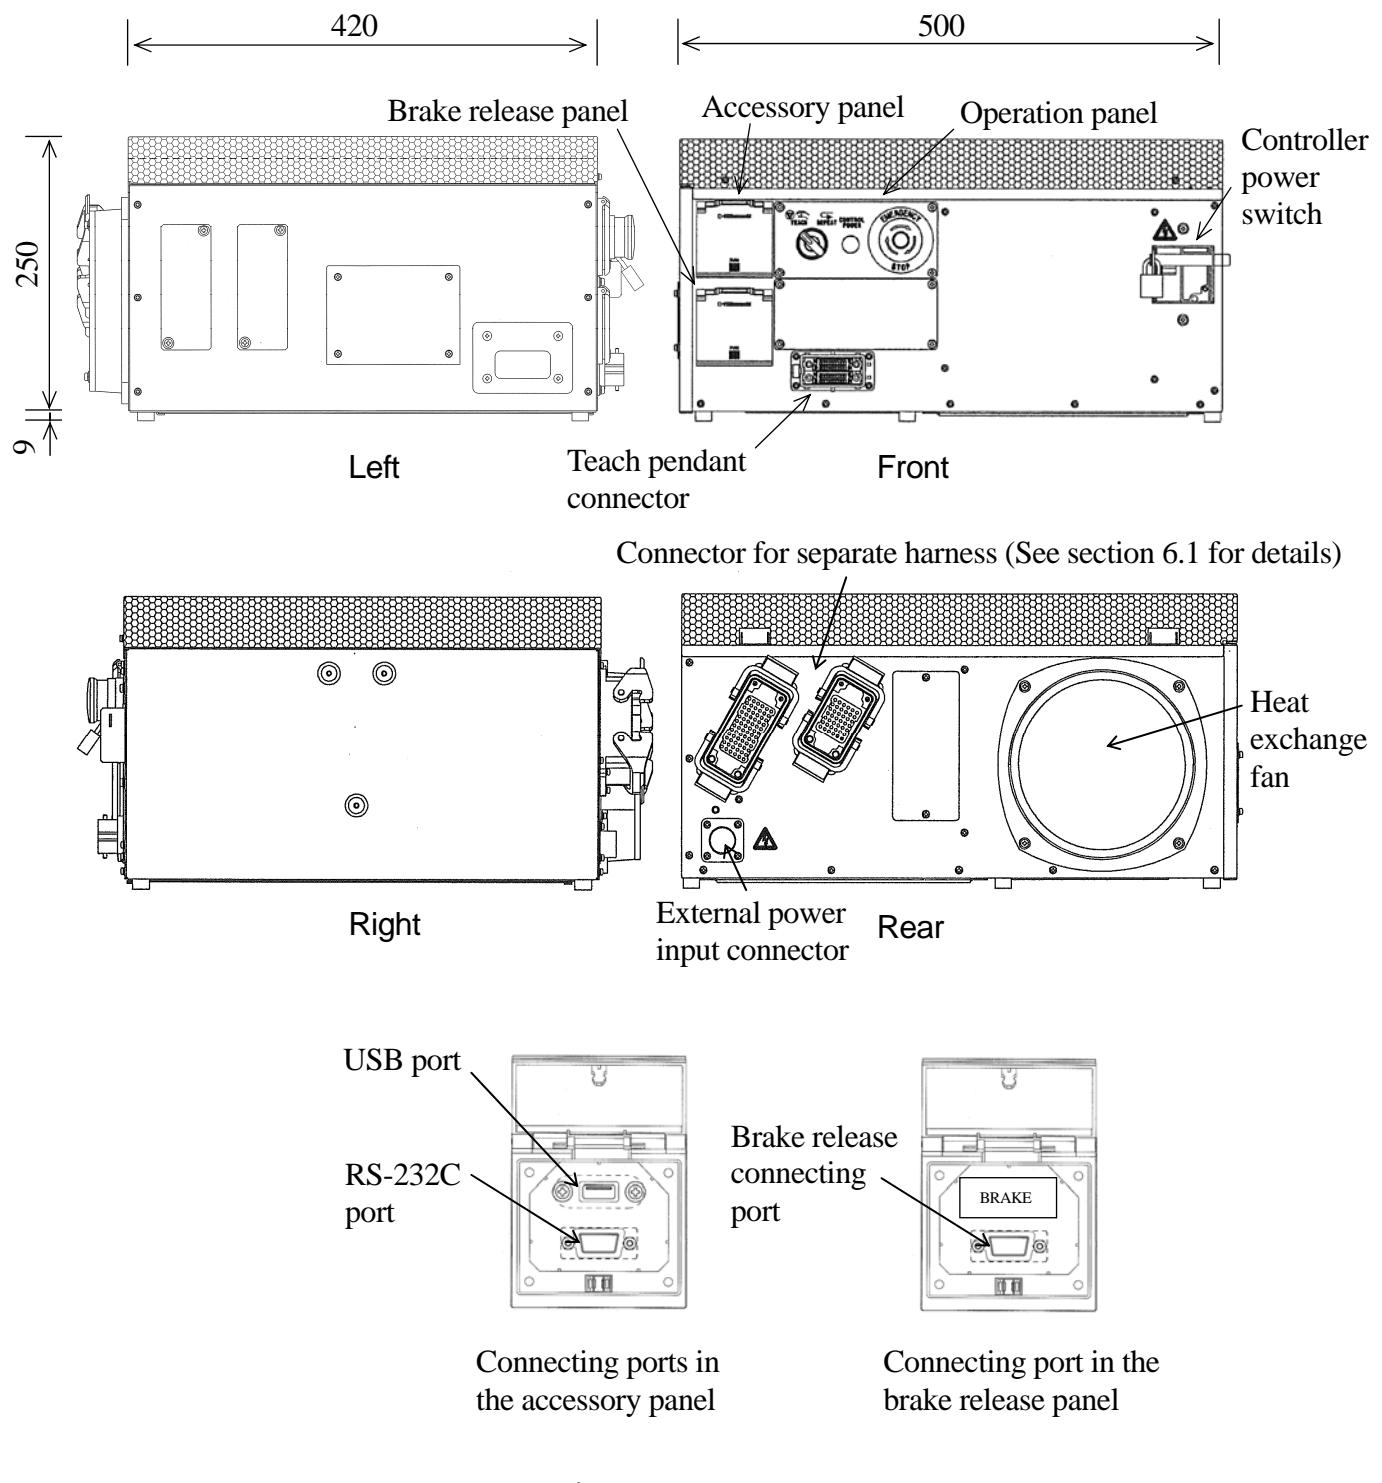

### 3.2 TEACH PENDANT APPEARANCE

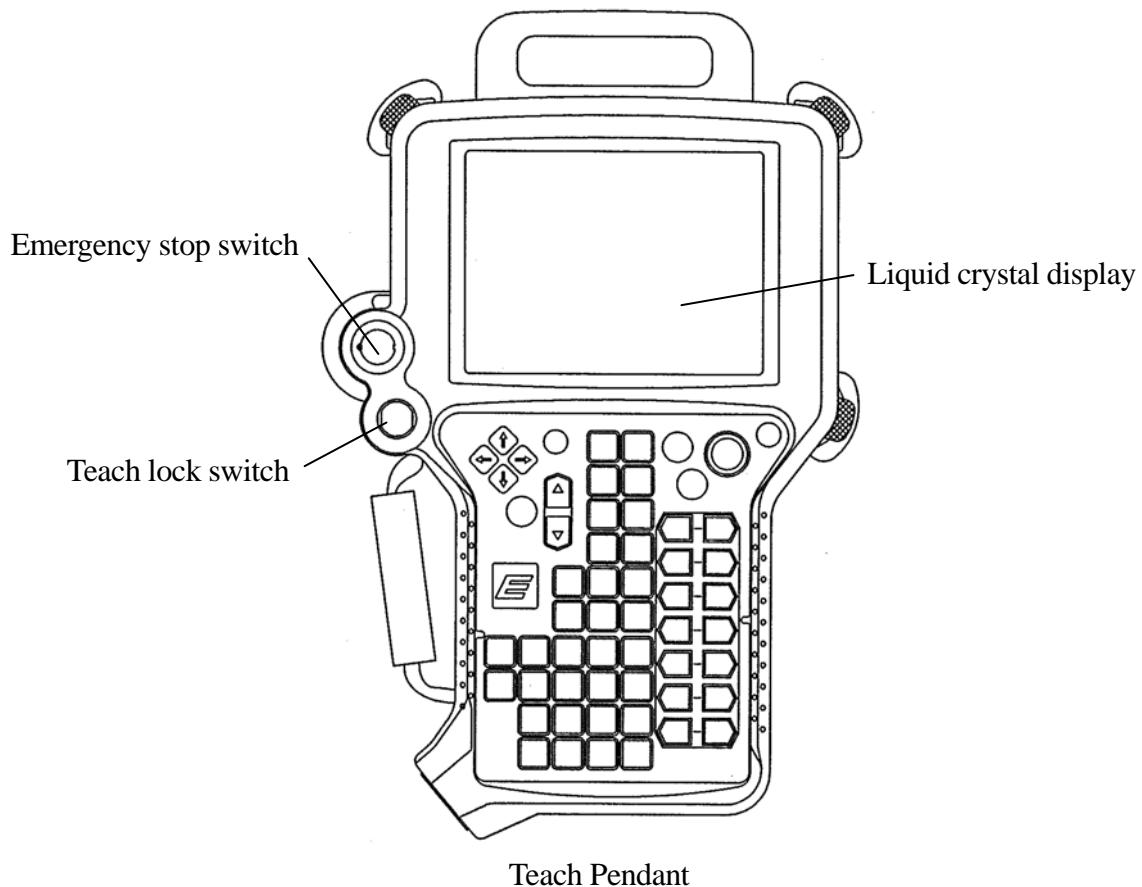

Teach Pendant

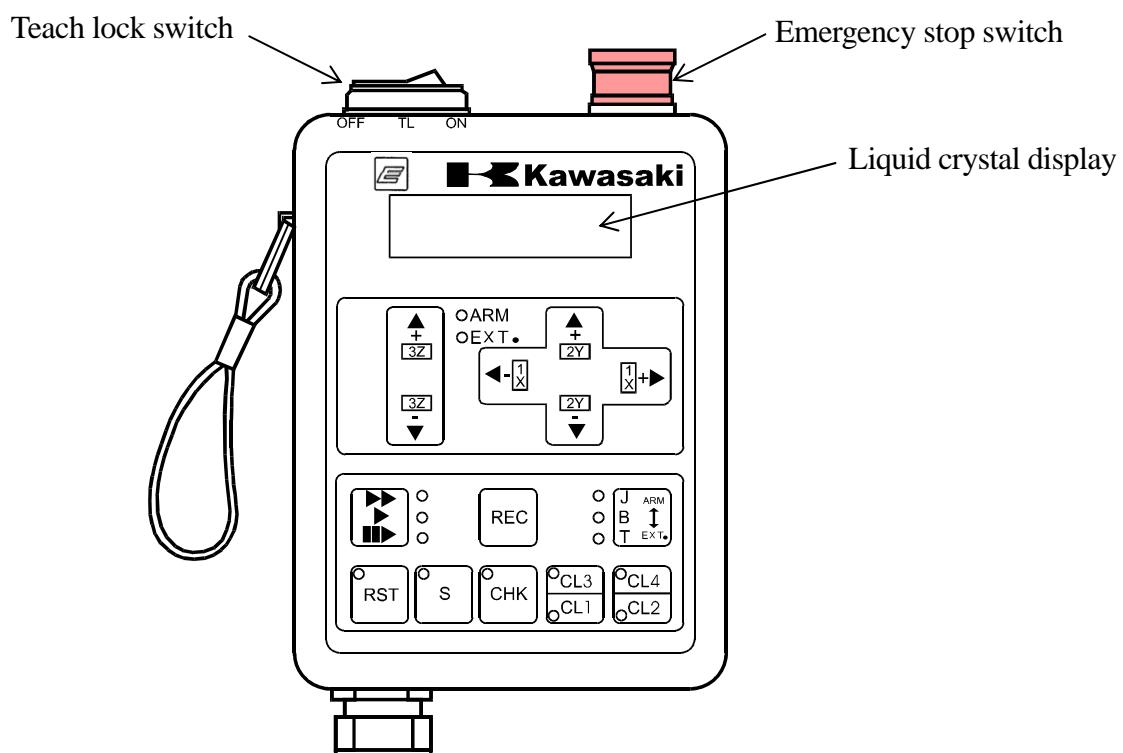

Small Teach Pendant

### 3.3 E1X/E2X CONTROLLER SPECIFICATION

Construction		Self-sustaining fully closed, indirect cooling system						
Mass		E10, E12, E14 (MX): Approx. 120 kg (without transformer), Approx. 180 kg (with transformer) E20, E22, E24 (MX): Approx. 95 kg, E13, E14 (MD): Approx. 135 kg (without transformer), Approx. 195 kg (with transformer) E23, E24 (MD): Approx. 110 kg						
Ambient environment		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">Temperature</td><td style="padding: 2px;">0 - 45 °C</td></tr> <tr> <td style="padding: 2px;">Humidity</td><td style="padding: 2px;">35 - 85 %RH (Non condensing)</td></tr> <tr> <td style="padding: 2px;">Altitude</td><td style="padding: 2px;">Up to 1000 meters above mean sea level</td></tr> </table>	Temperature	0 - 45 °C	Humidity	35 - 85 %RH (Non condensing)	Altitude	Up to 1000 meters above mean sea level
Temperature	0 - 45 °C							
Humidity	35 - 85 %RH (Non condensing)							
Altitude	Up to 1000 meters above mean sea level							
Power source		AC 200-220 V ±10 %, 50/60 Hz, 3 Phase						
Power capacity		Refer to the table below.						
Earthing		Dedicated earthing (100 Ω or less)						
Length of Teach pendant cable		5 m/10 m/15 m (10 m, 15 m are options.)						
Length of separate harnesses*		5 m/10 m/15 m (10 m, 15 m are options.)						

**NOTE\*** Harness length between robot arm and controller

Controller model	Arm model	Power capacity	Recommended power cable size (Including earth wire)	Length requirement
E10/E20	RS05-20 series RA series Y series	5.6 KVA max.	3.5 mm <sup>2</sup> or more (AWG #12 or more)	200 m or less
E12/E13/ E22/E23	RS30-80 series RD80 Z series MT series B series	10 KVA max.	8.0 mm <sup>2</sup> or more (AWG #8 or more)	200 m or less
E14/E24	MX/MD series	10 KVA max.	8.0 mm <sup>2</sup> or more (AWG #8 or more)	200 m or less

Circuit breaker spec. for external power connection

Controller model	Rated current	Rated voltage	Rated interrupting capacity
E1x (without transformer)/E2x	40 A	AC230 V	7.5 kA (Icu)
E1x (with transformer)	40 A	AC230 V	7.5 kA (Icu)
	20 A	AC400 V	5 kA (Icu)
		AC440 V	2.5 kA (Icu)

### 3.4 E3X CONTROLLER SPECIFICATION

Construction	Self-sustaining fully closed, indirect cooling system	
Mass	E30: 145 kg, E32, E34 (MX): 180 kg, E33, E34 (MD): 195 kg	
Ambient environment	Temperature	0 - 45 °C
	Humidity	35 - 85 %RH (Non condensing)
	Altitude	Up to 1000 meters above mean sea level
Power source	AC 440-480 V±10 %, 60 Hz, 3 Phase	
Optional	AC 380-415 V, 440-480 V, 515 V, 575 V±10 %, 50/60 Hz, 3 Phase	
	AC 200-220 V±10 %, 50/60 Hz, 3 Phase	
Power capacity	Refer to the table below.	
Earthing	Dedicated earthing (100 Ω or less)	
Length of Teach pendant cable	5 m/10 m/15 m (5 m, 15 m are options.)	
Length of separate harnesses*	5 m/7 m/10 m/15 m (5 m, 7 m, 15 m are options.)	

**NOTE\*** Harness length between robot arm and controller.

Controller model	Arm model	Power capacity	Recommended power cable size (Including earth wire)	Length requirement
E30	RS05-20 series RA series Y series	4.9 KVA max.	3.5 mm <sup>2</sup> (AWG #12) - 13 mm <sup>2</sup> (AWG #6)	200 m or less
E32/E33	RS30-80 series RD80 Z series MT series B series	9.9 KVA max.	8.0 mm <sup>2</sup> (AWG #8) - 13 mm <sup>2</sup> (AWG #6)	200 m or less
E34	MX/MD series	9.9 KVA max.	8.0 mm <sup>2</sup> (AWG #8 or more) - 13 mm <sup>2</sup> (AWG #6)	200 m or less

Circuit breaker spec. for external power connection

Controller model	External power voltage	Rated current	Rated voltage	Rated interrupting capacity
E30	AC 380-480 V	15 A	AC 480 Y/277 V	22 kA (UL 489)
	AC 515/575 V	20 A	AC 600 Y/347 V	14 kA (UL 489)
	AC 200-220 V	40 A	AC 240 Y	14 kA (UL 489)
E32/33/34	AC 380-480 V	20 A	AC 480 Y/277 V	22 kA (UL 489)
	AC 515/575 V	20 A	AC 600 Y/347 V	14 kA (UL 489)
	AC 200-220 V	40 A	AC 240 Y	14 kA (UL 489)

### 3.5 E4X CONTROLLER SPECIFICATION

Construction		Self-sustaining fully closed, indirect cooling system
Mass		E40: 145 kg, E42, E44 (MX): 180 kg E43, E44 (MD): 195 kg
Ambient environment	Temperature	0 - 45 °C
	Humidity	35 - 85 %RH (Non condensing)
	Altitude	Up to 1000 meters above mean sea level
Power source		AC 380-415 V±10 %, 50/60 Hz, 3 Phase
Power capacity		Refer to the table below.
Earthing		Dedicated earthing (100 Ω or less)
Length of Teach pendant cable		5 m/10 m/15 m (5 m, 15 m are options.)
Length of separate harnesses*		5 m/10 m/15 m (5 m, 15 m are options.)

**NOTE\*** Harness length between robot arm and controller.

Controller model	Arm model	Power capacity	Recommended power cable size (Including earth wire)	Length requirement
E40	RS05-20 series RA series Y series	4.9 KVA max.	3.5 mm <sup>2</sup> or more (AWG #12 or more)	200 m or less
E42/E43	RS30-80 series RD80 Z series MT series B series	9.9 KVA max.	8.0 mm <sup>2</sup> or more (AWG #8 or more)	200 m or less
E44	MX/MD series	9.9 KVA max.	8.0 mm <sup>2</sup> or more (AWG #8 or more)	200 m or less

Circuit breaker spec. for external power connection

Controller model	Rated current	Rated voltage	Rated interrupting capacity
E40	10 A	AC400 V	5 kA (Icu)
		AC415 V	2.5 kA (Icu)
E42/43/44	20 A	AC400 V	5 kA (Icu)
		AC415 V	2.5 kA (Icu)

### 3.6 E7X CONTROLLER SPECIFICATION

Construction		E70, E71, E73, E74, E76, E77: horizontal enclosed structure, indirect cooling system
Mass		E70, E71, E73, E74, E76, E77: 30 kg
Ambient environment	Temperature	0 - 45 °C (0 - 40°C in vertical placing)
	Humidity	35 - 85 %RH (Non condensing)
	Altitude	Up to 1000 meters above mean sea level
Power source		AC 200-240 V±10 %, 50/60 Hz, Single phase
Power capacity		Refer to the table below.
Earthing		Dedicated earthing (100 Ω or less)
Length of Teach pendant cable		5 m/10 m/15 m (5 m, 15 m are options.)
Length of separate harnesses*		5 m/10 m/15 m (5 m, 15 m are options.)

**NOTE\*** Harness length between robot arm and controller.

Controller model	Arm model	Power capacity	Recommended power cable size (Including earth wire)	Length requirement
E70/E73/E76	RS03 series	1.5 KVA max.	2-2.5 mm <sup>2</sup> or more (AWG #14)	200 m or less
E71/E74/E77	RS05 series RS10 series	3.0 KVA max.	2-2.5 mm <sup>2</sup> or more (AWG #14)	200 m or less

Circuit breaker spec. for external power connection

Controller model	Rated current	Rated voltage	Rated interrupting capacity
E70/71/73/74	10 A	AC250 V	1.5 kA (Icu)
E76/77	10 A	AC277 V	10 kA (UL 489)


## 4.0 TRANSPORTATION OF ROBOT CONTROLLER

When transporting the controller, strictly observe the precautions given in the sections below for whichever transport method is chosen.

### 4.1 BY CRANE LIFTING (E1X, E2X, E3X, E4X)

#### ⚠ WARNING

1. Never support the controller manually when it is lifted up. And, never go under or stay too close to the controller during transport.
2. Hook the wire at the lifting eyebolts as shown below.
3. Ensure that the lifting eyebolts are not loose. Check each one and retighten if loose. Otherwise, the controller may fall and suffer damage.

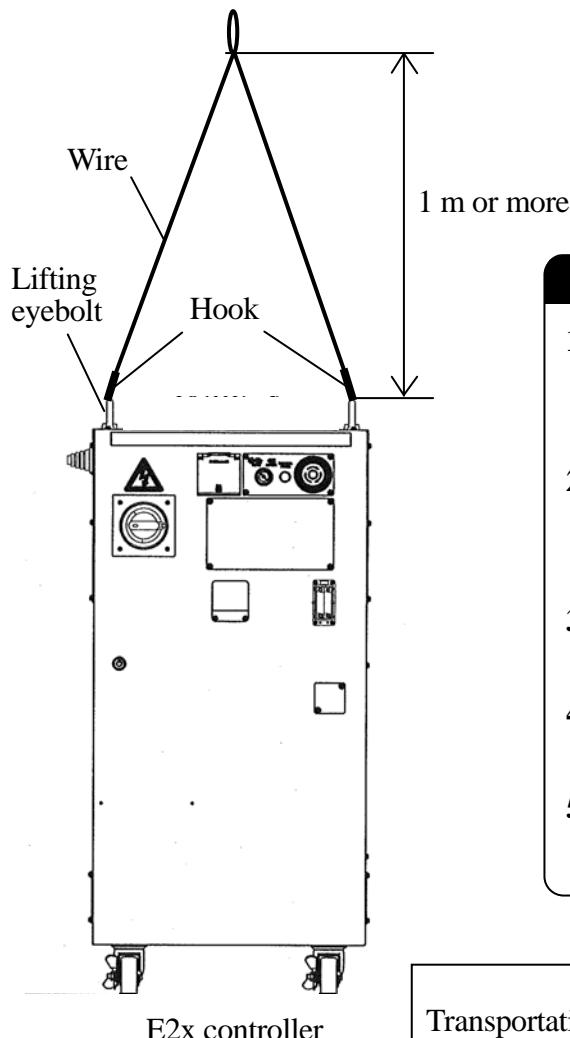

#### ⚠ CAUTION

1. Prepare wire and crane capable of hoisting 300 kg or more, sufficient for a controller loaded with full options.
2. Remove the teach pendant and teach pendant holder (if equipped) before lifting with the wire sling.
3. Wire length: 1 m or more as shown in left figure.
4. Be careful as the controller may lean when lifted up.
5. Be careful not to let the wire snag on other equipment.

#### [ NOTE ]

Transportation of E7x controllers by crane lifting is not possible.

## 4.2 BY CASTER (E1X, E2X, E3X, E4X)

### ⚠ WARNING

1. If the transport path is flat enough then the controller can be moved on its casters. Otherwise, it may happen that moving on an incline or an uneven surface will topple the controller, and cause serious damage.
2. The E2x controller falls if it is inclined as follows.  
Back or forth: Approx. 20° or more  
Right or left: Approx. 15° or more

The E1x/E3x/E4x controller falls if it is inclined as follows.

Back or forth: Approx. 15° or more  
Right or left: Approx. 15° or more

### ⚠ CAUTION

1. Release the stoppers on the two casters in front of the controller when moving the controller. (Push the “OFF” side pedal.)
2. Relock the casters after the transport is complete.  
(Push the “ON” side pedal for locking.)


### [ NOTE ]

Transportation of E7x controllers by caster is not possible.

### 4.3 BY FORKLIFT TRUCK (E1X, E3X, E4X)

#### ⚠ WARNING

To stop the controller from toppling over, fasten it to the forklift with a belt as shown below.

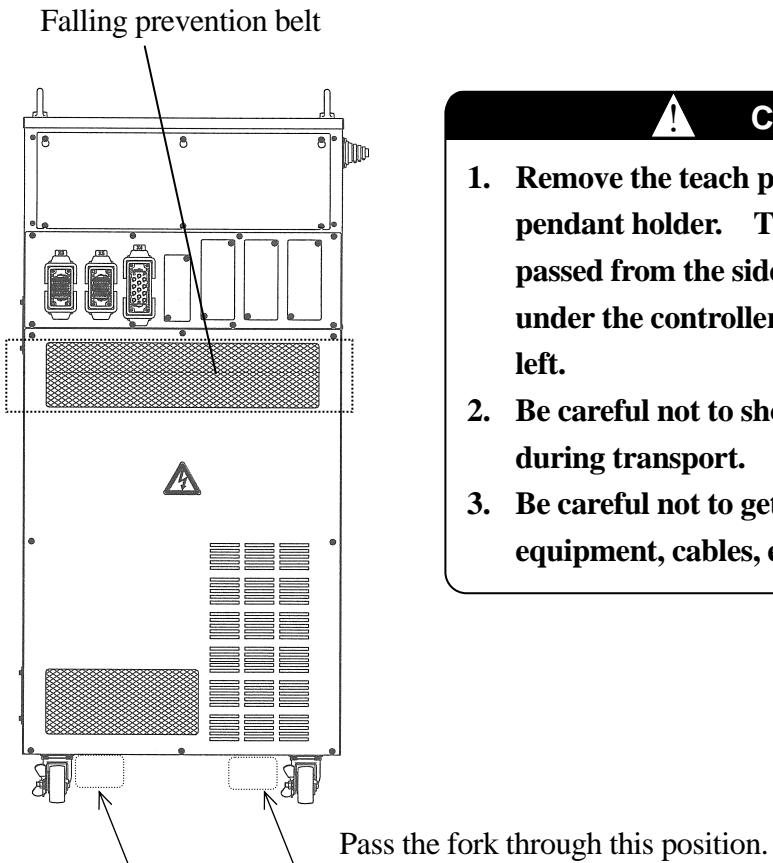

#### ⚠ CAUTION

1. Remove the teach pendant and teach pendant holder. The fork cannot be passed from the side. Pass the fork under the controller body as shown on the left.
2. Be careful not to shock the controller during transport.
3. Be careful not to get caught on other equipment, cables, etc.

#### [ NOTE ]


Transportation of E2x and E7x controllers by forklift is not possible.

#### 4.4 BY TWO PERSONS (E7X)



##### CAUTION

1. Disconnect the Teach Pendant.
2. Be careful not to put an impact on the controller during transportation.

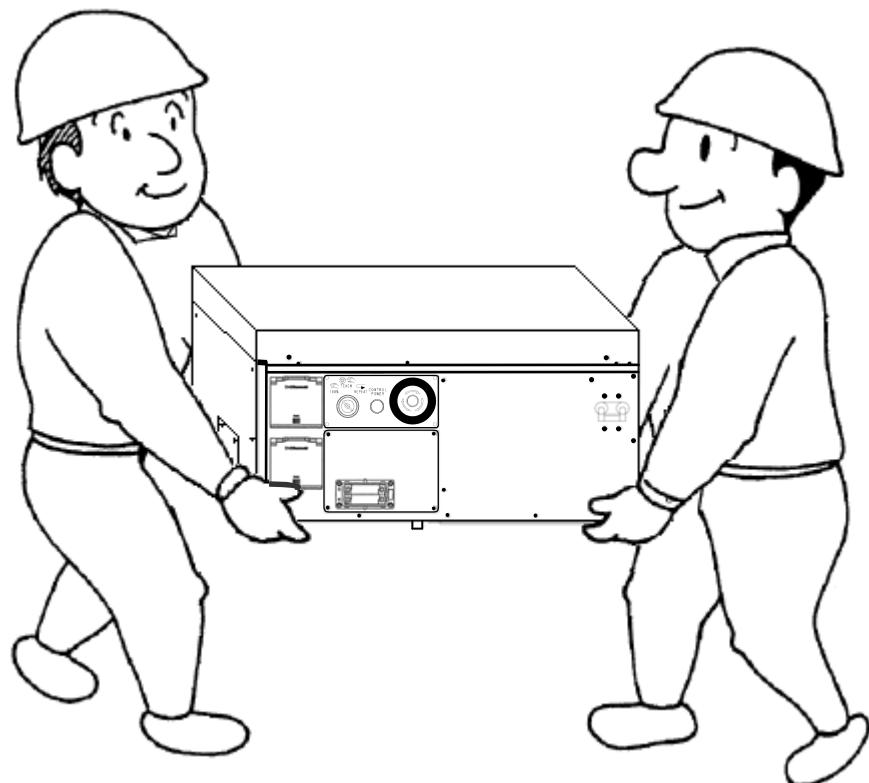


##### [ NOTE ]

Transportation of E1x, E2x, E3x and E4x controllers by two persons is not possible.


## 5.0 ARRANGEMENT OF ROBOT CONTROLLER

In order for the controller to maintain the proper internal temperature, the installation site must conform to the four points below.

### 5.1 ARRANGEMENT OF E1X/E2X/E3X/E4X CONTROLLERS

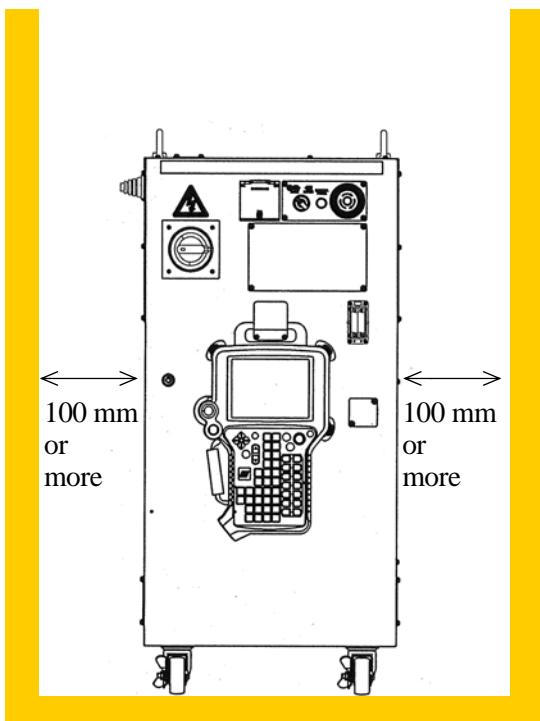

1. Arrange the controller on a flat, horizontal floor.

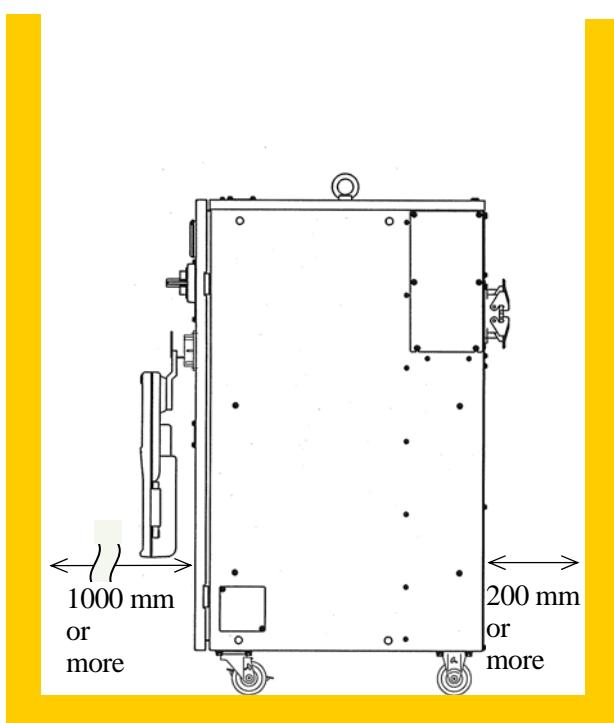

2. Separate the controller right/left side from the wall by 100 mm or more.


3. The inlet port for air-cooling is on the rear upside of the controller, and the air exhaust port is on the rear downside.

**CAUTION**


**Do not block the air inlet and exhaust ports when arranging the controller. Separate the controller backside from the wall by 200 mm or more.**

4. Make fixing bracket(s), and fix the controller with M12 bolts. See the figure on next page for reference.


E2x controller

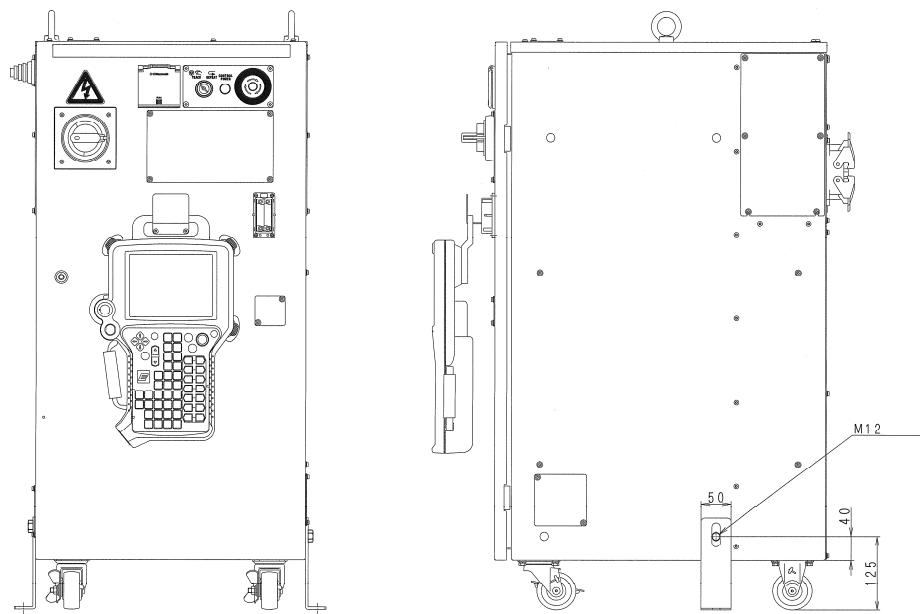

E3x controller

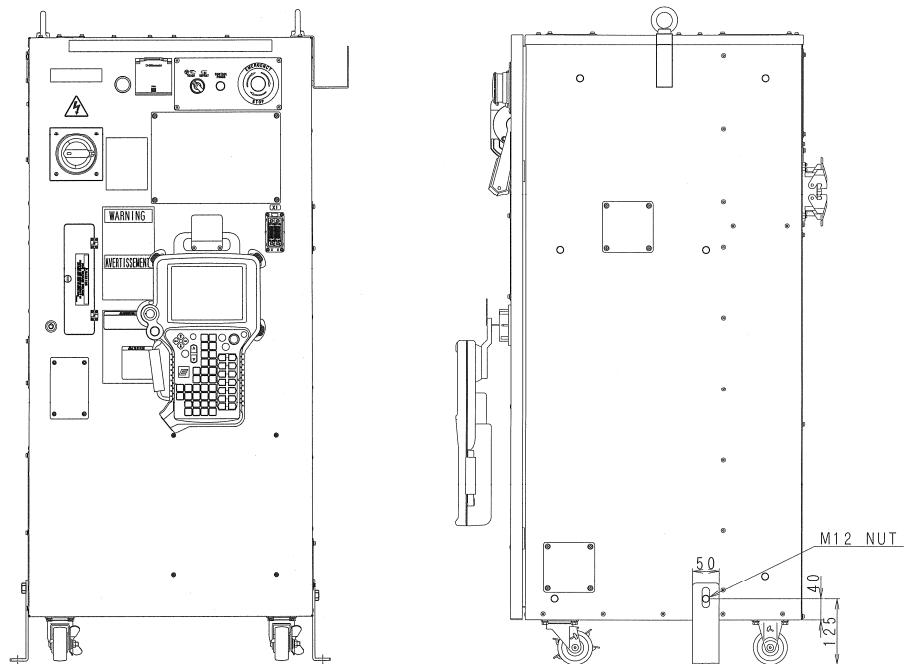

E1x/E4x controller

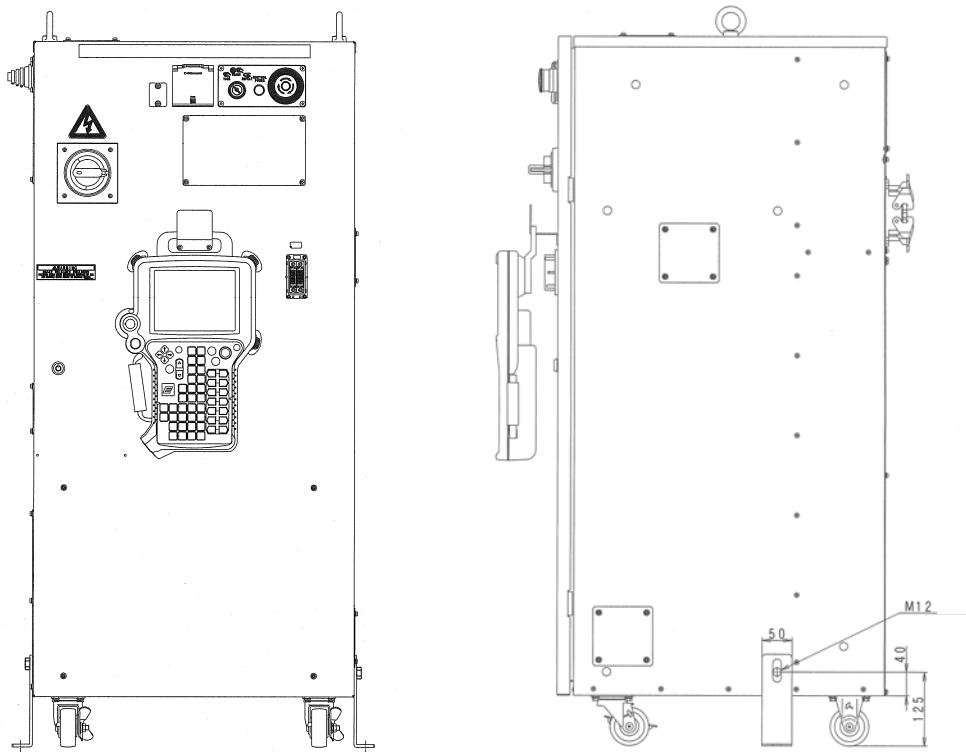


### CAUTION



- 1. Release the stoppers on the two casters in front of the controller when moving the controller. (Push the “OFF” side pedal.)**
- 2. Relock the casters after the transport is complete. (Push the “ON” side pedal for locking.)**

## 5.2 ARRANGEMENT OF E7X CONTROLLER


1. Arrange the controller on a flat, horizontal floor.
2. Separate the controller right/left side from the wall by 100 mm or more.
3. Separate the controller top surface from the wall by 200 mm or more.

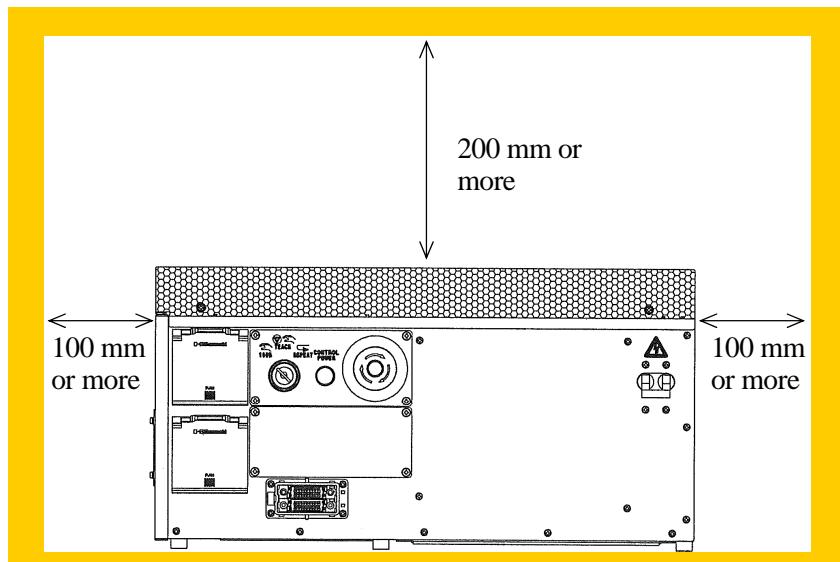


4. Heat exchange fan is provided on the rear of the controller.

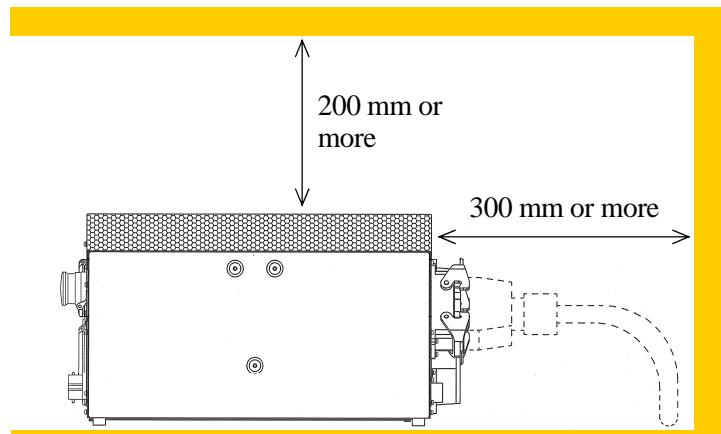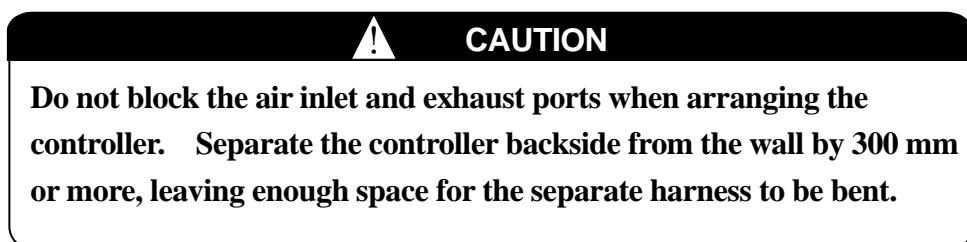


Follow the procedure below when arranging E7x controller vertically. The ambient temperature should be within 0-40 C°.

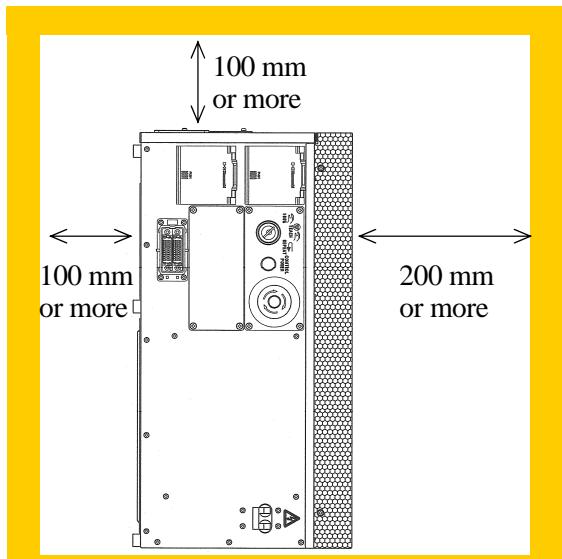

1. Arrange the controller on a horizontal floor. Arrange the controller with its controller power switch facing downward.
2. Separate the controller right side (or ceiling surface when arranging the controller vertically) from the wall by 200 mm or more.
3. Separate the controller top/left side from the wall by 100 mm or more.
4. Separate the controller rear side from the wall by 300 mm or more.
5. If needed, make metal fittings as shown in the figure on the next page to fix the controller.

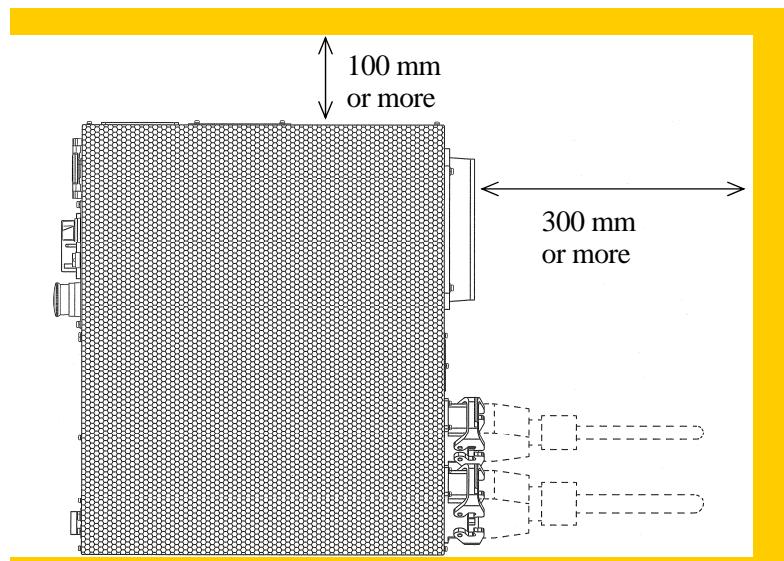

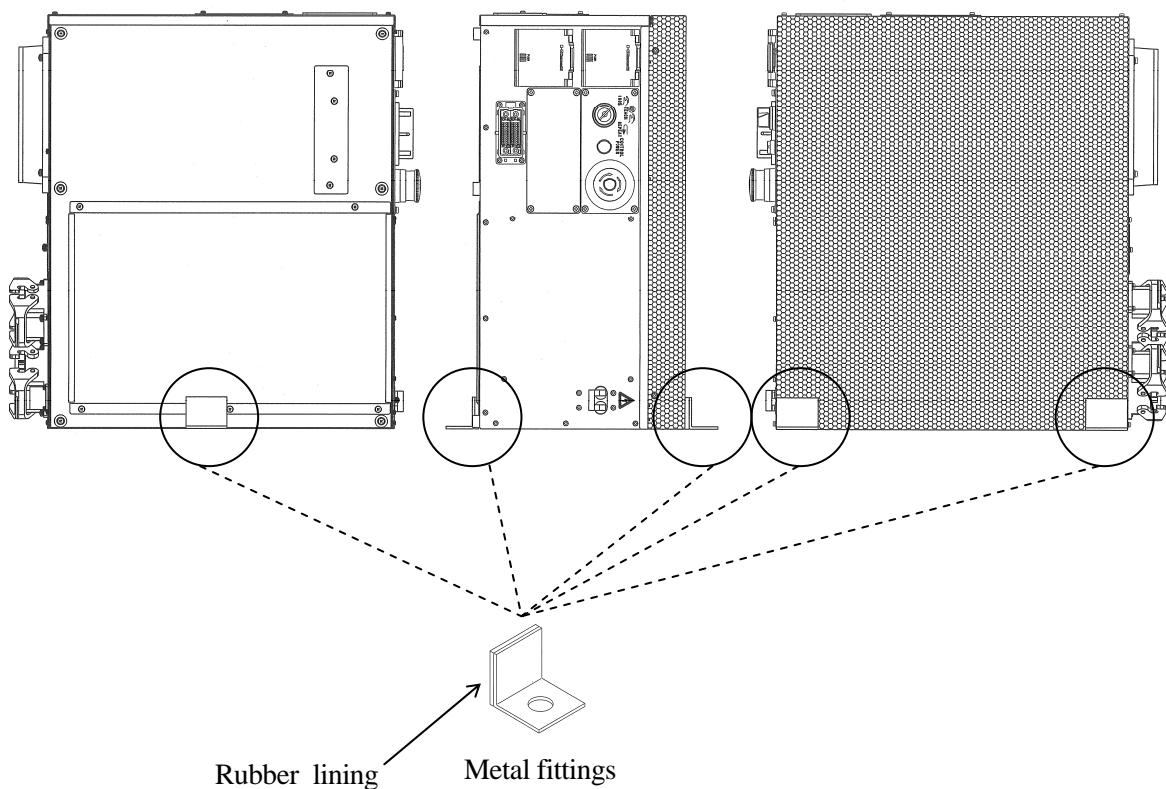

## 6.0 CONNECTION INSTRUCTIONS

### 6.1 CONNECTION BETWEEN CONTROLLER AND ROBOT



#### WARNING

**Do not connect the external power until connections between controller and robot are complete. Accidents, such as electric shock may occur.**




#### CAUTION

- 1. When connecting the harnesses, be sure to use the correct harnesses. Using an incorrect harness, or forcing or misconnecting the harness may damage connectors or cause a break in the electrical system.**
- 2. Prevent people or equipment (forklift etc.) from stepping on or riding over the signal and motor harness lines. Otherwise, the harness may become damaged or the electrical system may break.**
- 3. Even when the harnesses are long, do not bundle them wound or bended. Bundling the harness causes the heat to build up in the harness, resulting in over-heat and furthermore may cause fire.**
- 4. Separate the harnesses from any nearby high voltage lines (min. 1 m apart). Do not bundle or run the harnesses in parallel with other power lines. Otherwise, the noise generated from power lines will cause malfunctions.**
- 5. Separate the motor harness from the communication and sensor cables, and distribute the lines so they are neither bundled nor running in parallel. Moreover, connect the communication and sensor cables using shield mesh wire that includes twisted pair lines and connect the mesh wire to an adequate FG terminal. Otherwise, PWM noise radiated from the robot's motor drive lines may penetrate into various cables, such as communication cable and cause communication errors.**
- 6. Separate the welder secondary cable from the robot's signal harness. Do not wire them in the same duct.**
- 7. The motor harness (power line) between the robot and controller will generate PWM noise due to the PWM control driving the motors. This noise may cause interference with signal lines. Prevent interference using these countermeasures:**
  - (1) Separate the power and signal lines as much as possible.**
  - (2) Use the shortest possible length for the power line.**
  - (3) Avoid bundling, wiring in parallel the power and signal lines as much as possible.**
  - (4) Do not wire the power and signal line within the same duct/conduit.**
  - (5) Set and secure a firm earth line connection for the controller.**


Connect the separate harnesses to their designated ports as shown below.

### 1. Controller side

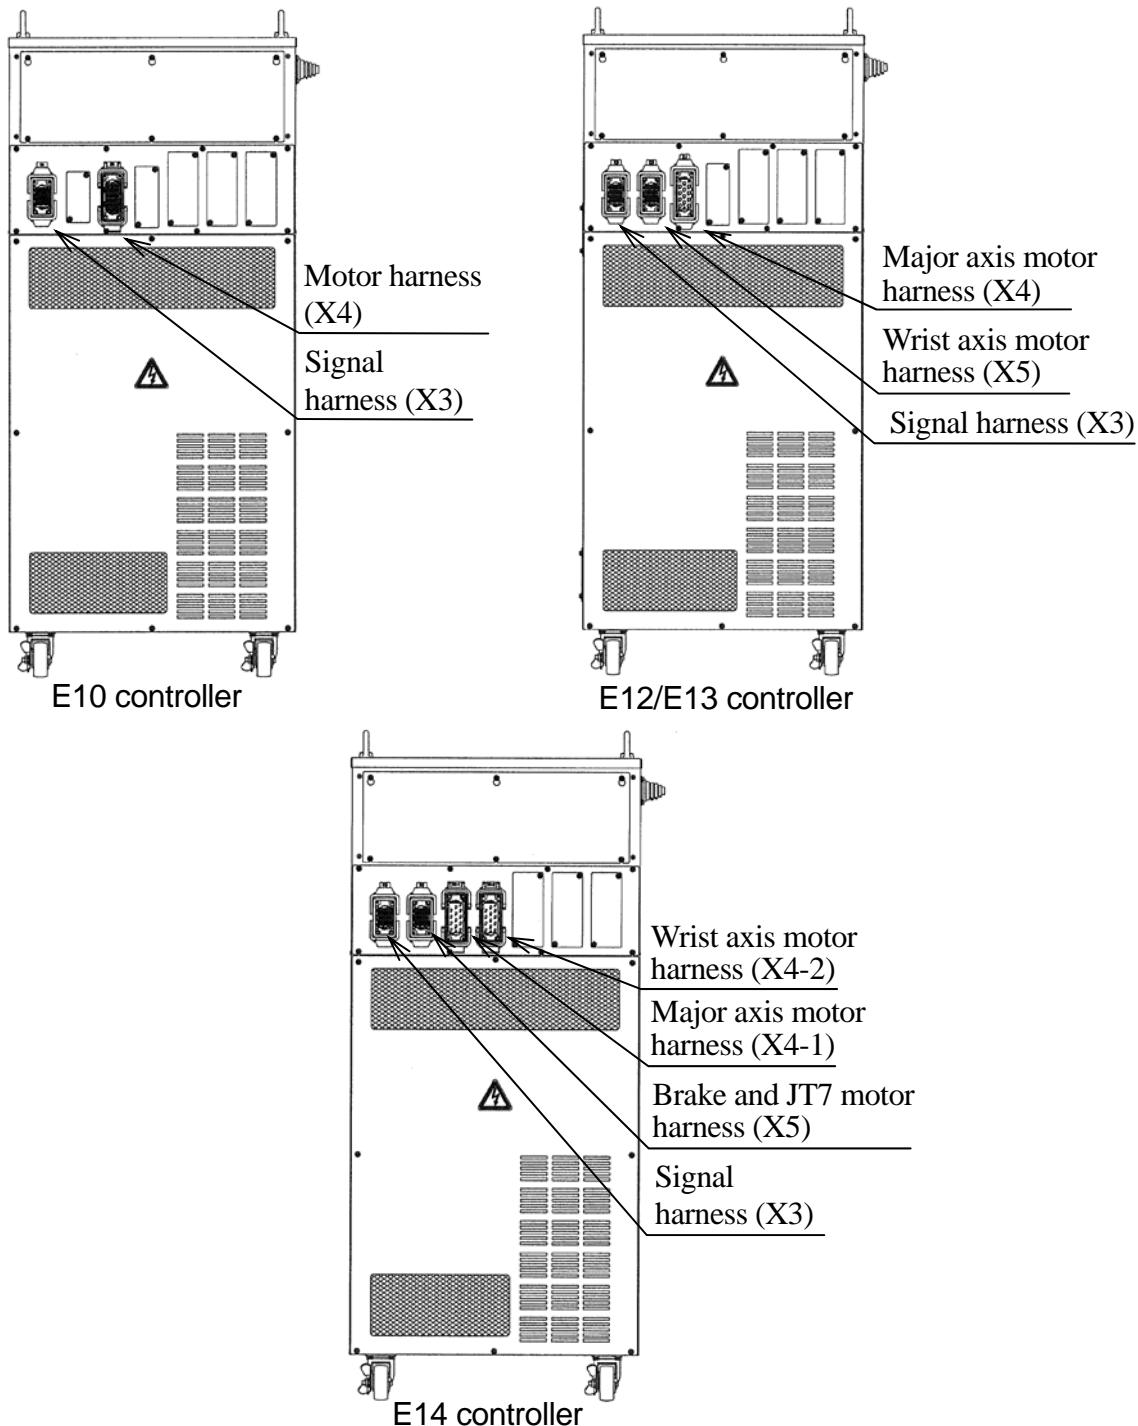


### CAUTION

1. Fix each connector securely. The robot may malfunction if connectors loosen or detach.
2. The harness should drop straight down from the connector. Because connectors are located at the upper part of controller, the controller might topple over if the connected harnesses are pulled to the controller side or to the rear direction.

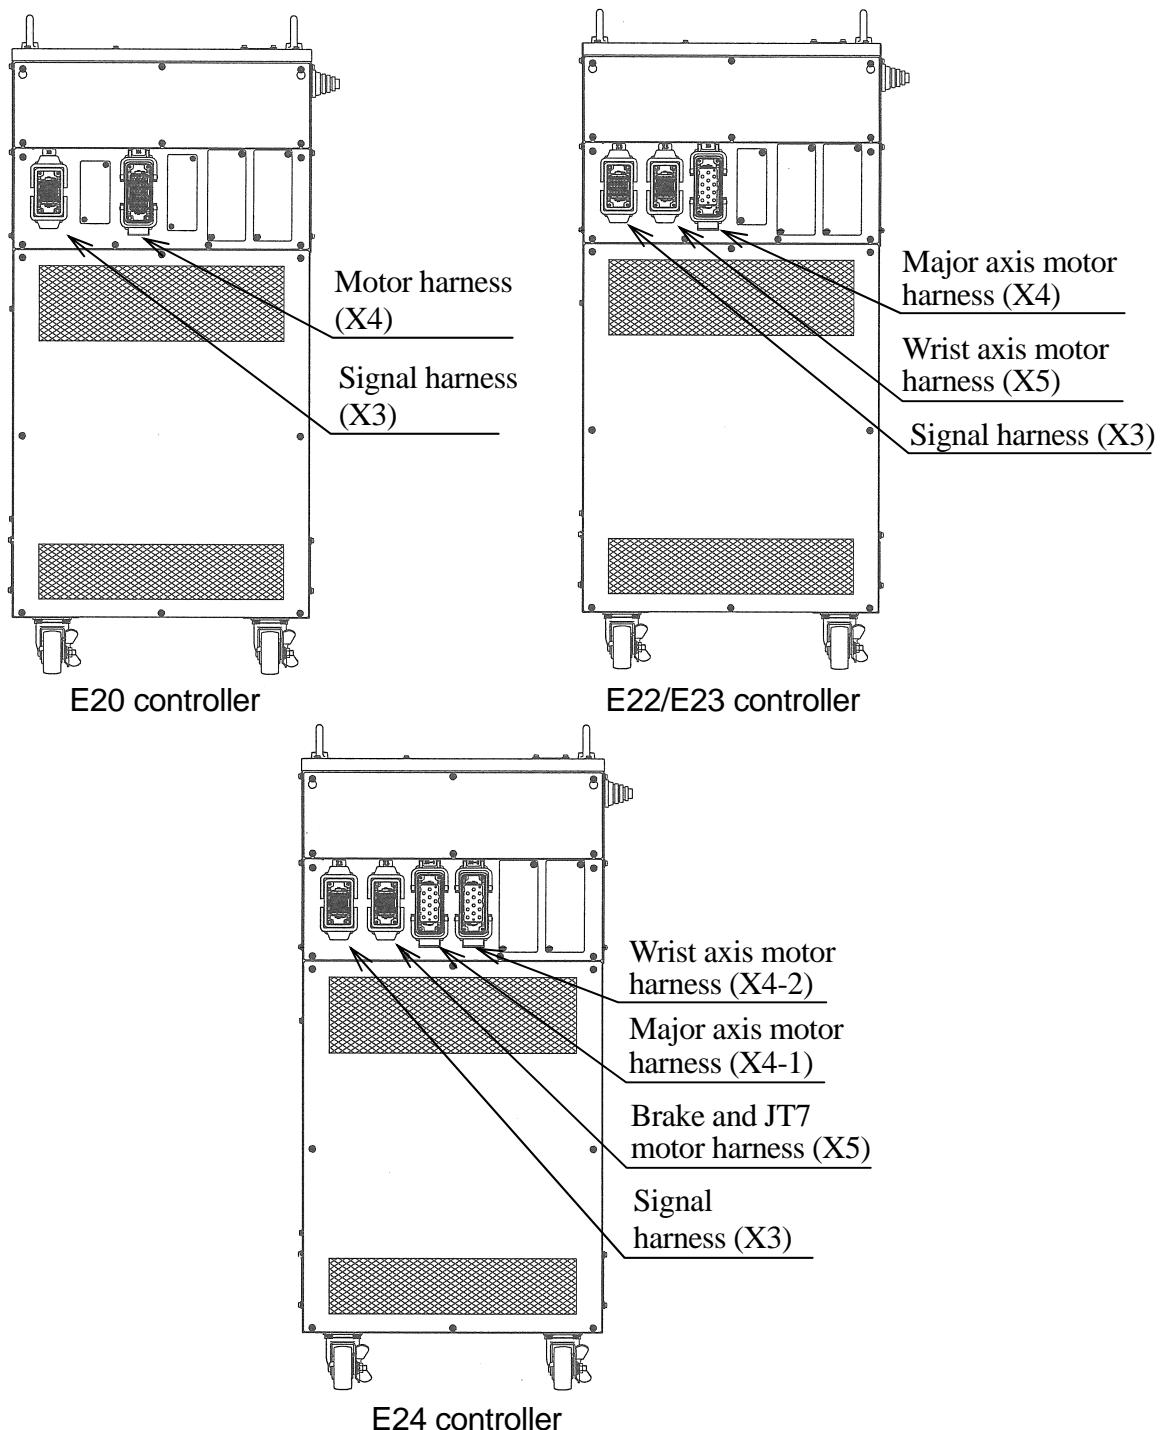


**CAUTION**

1. Fix each connector securely. The robot may malfunction if connectors loosen or detach.
2. The harness should drop straight down from the connector. Because connectors are located at the upper part of controller, the controller might topple over if the connected harnesses are pulled to the controller side or to the rear direction.

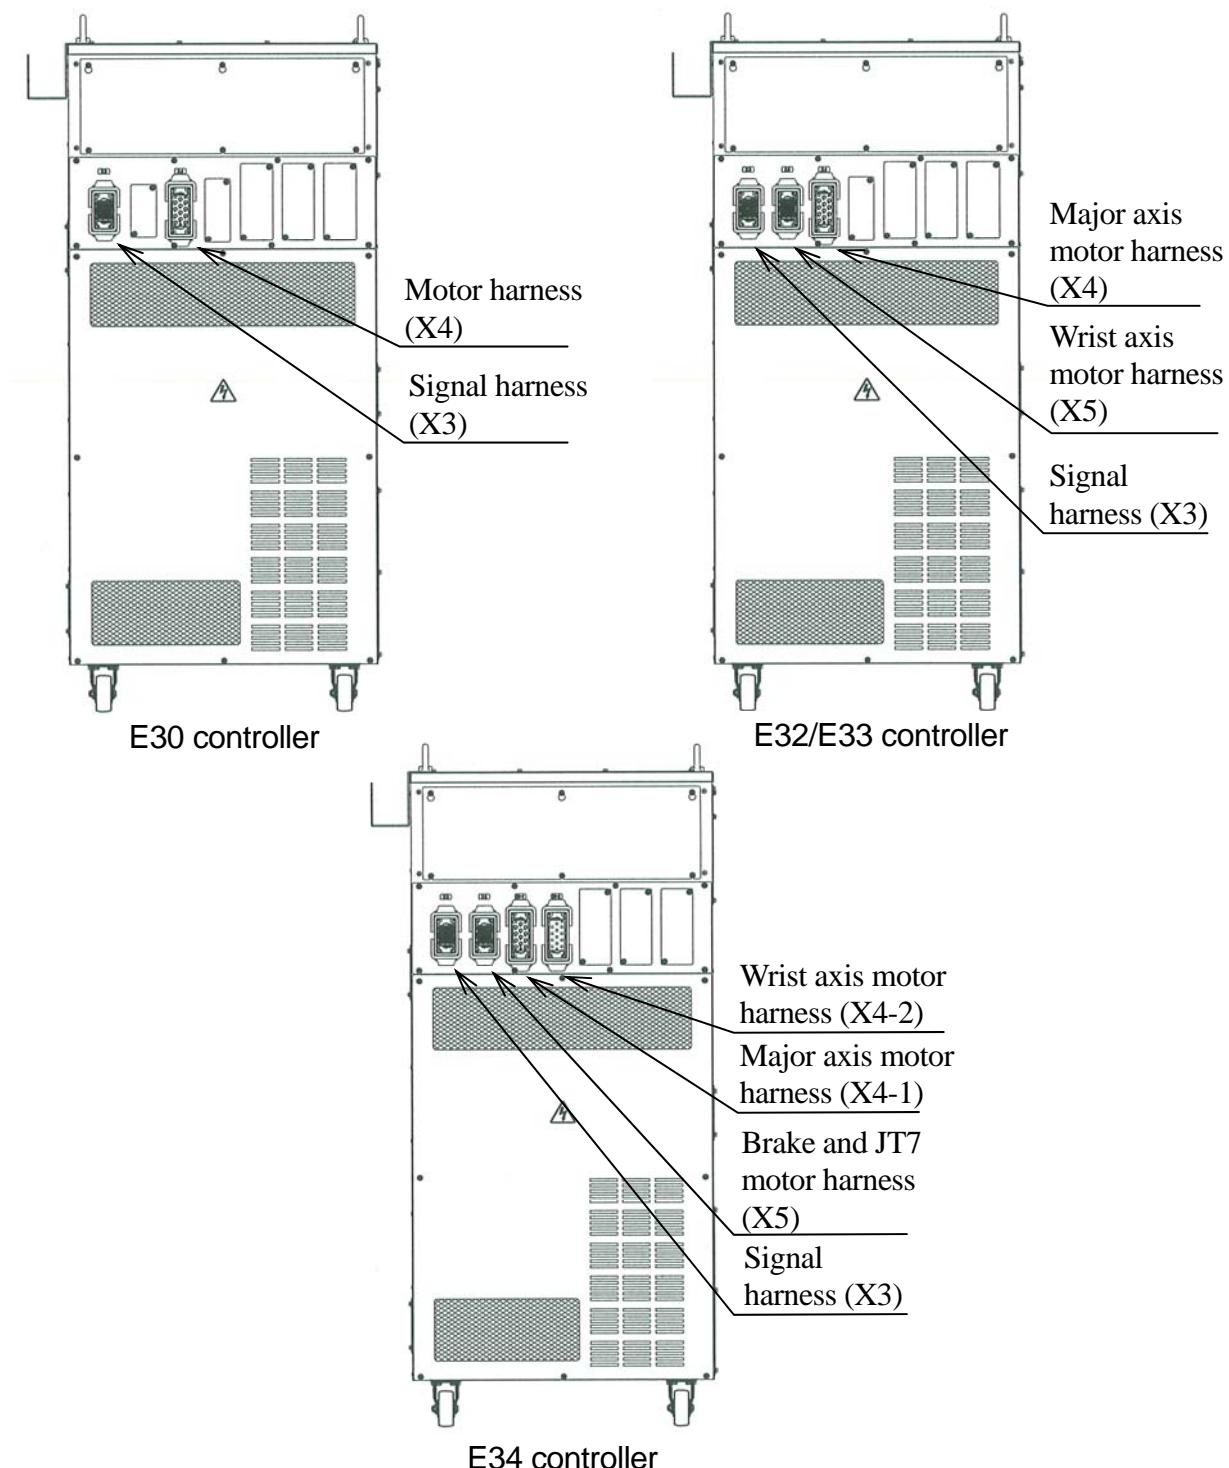


### CAUTION

1. Fix each connector securely. The robot may malfunction if connectors loosen or detach.
2. The harness should drop straight down from the connector. Because connectors are located at the upper part of controller, the controller might topple over if the connected harnesses are pulled to the controller side or to the rear direction.

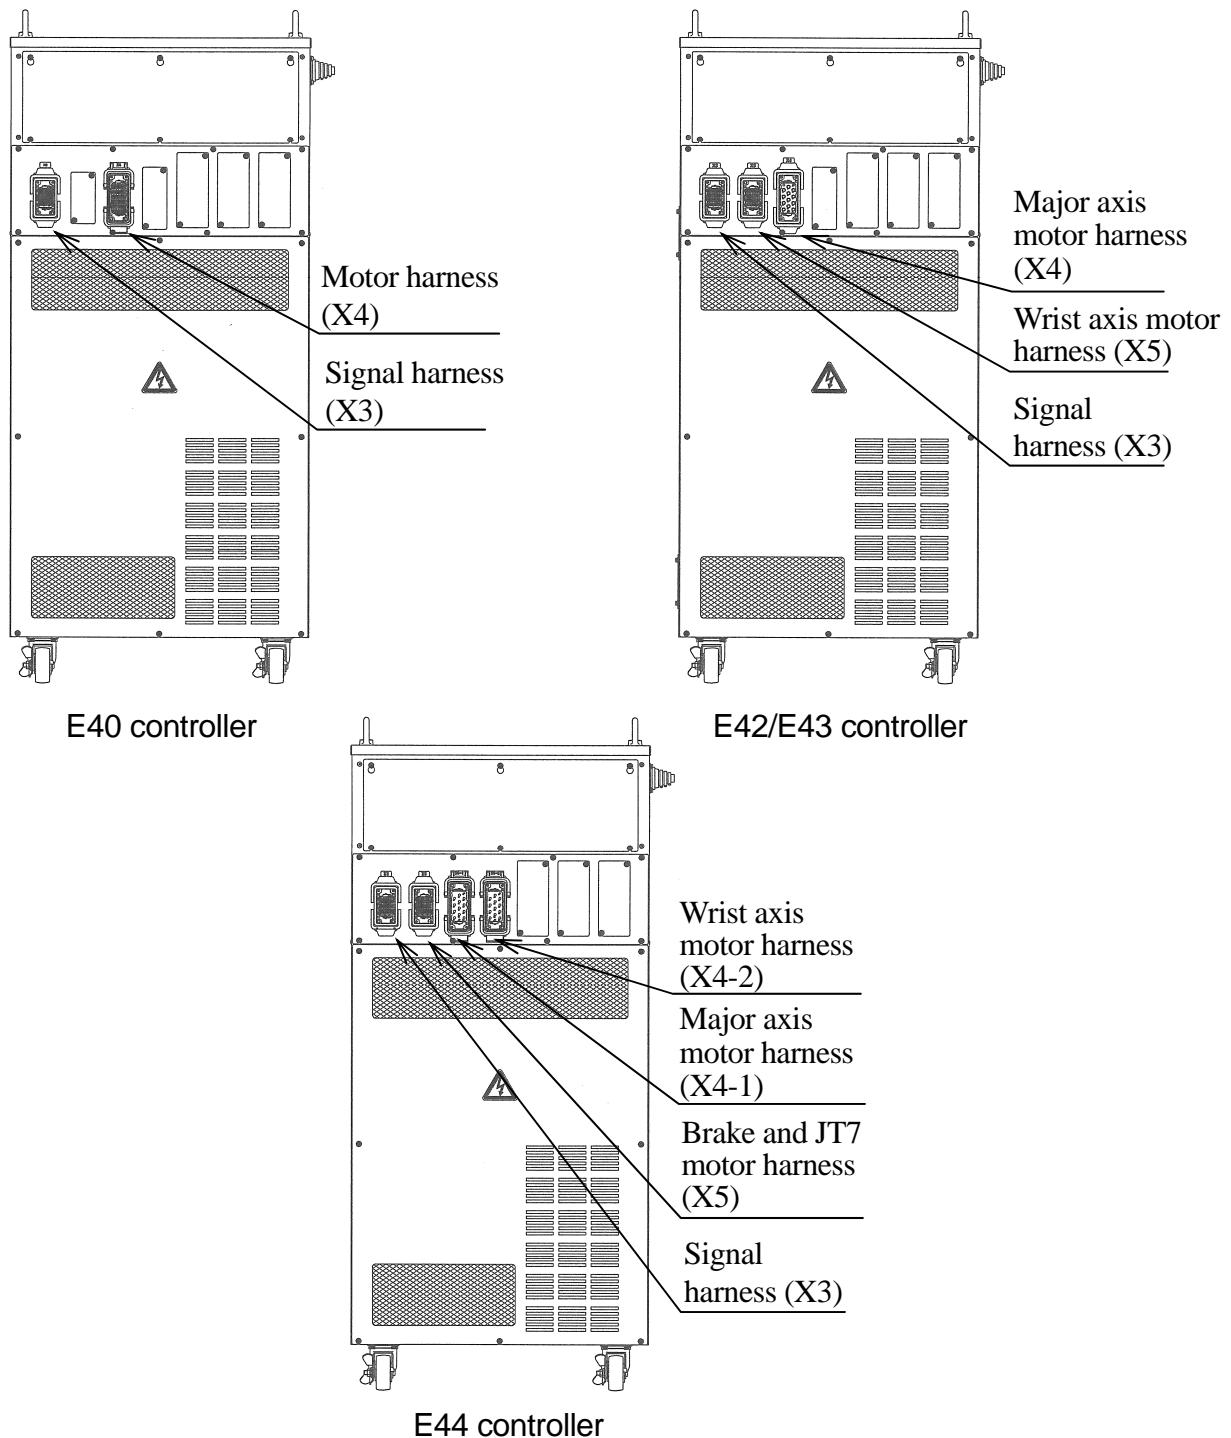

**CAUTION**

1. Fix each connector securely. The robot may malfunction if connectors loosen or detach.
2. The harness should drop straight down from the connector. Because connectors are located at the upper part of controller, the controller might topple over if the connected harnesses are pulled to the controller side or to the rear direction.

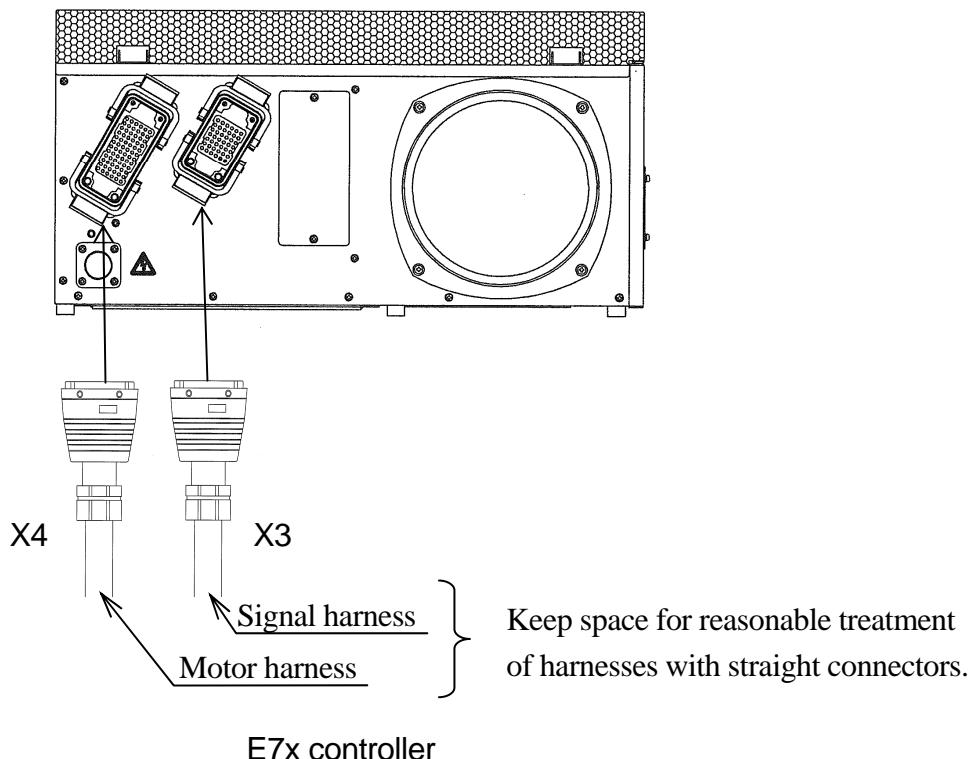


### CAUTION


**Fix each connector securely. The robot may malfunction if connectors loosen or detach.**

## 2. Arm side


YF003N

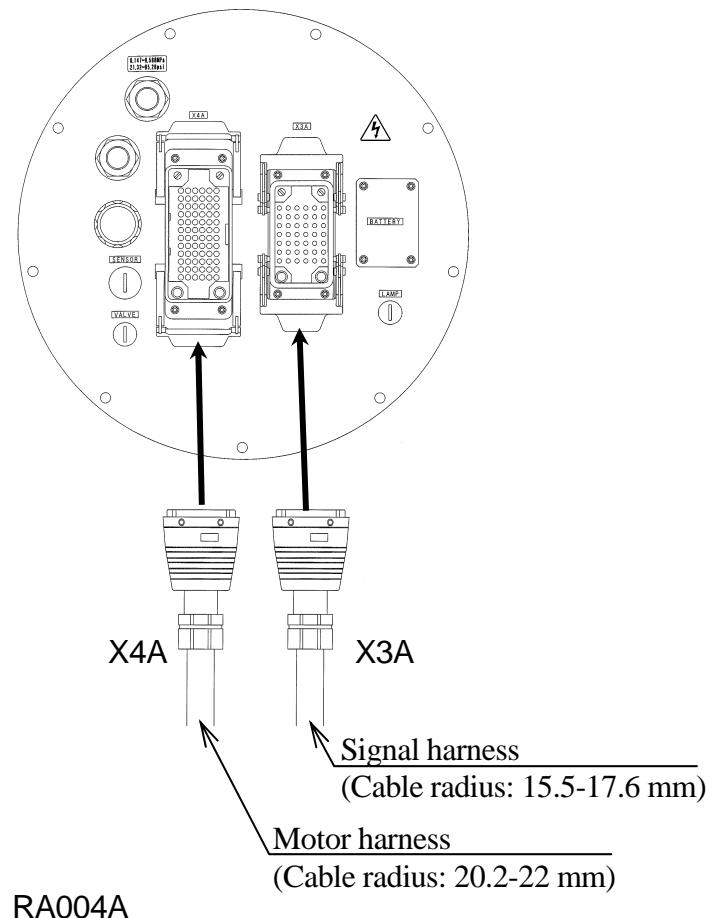


RA004A

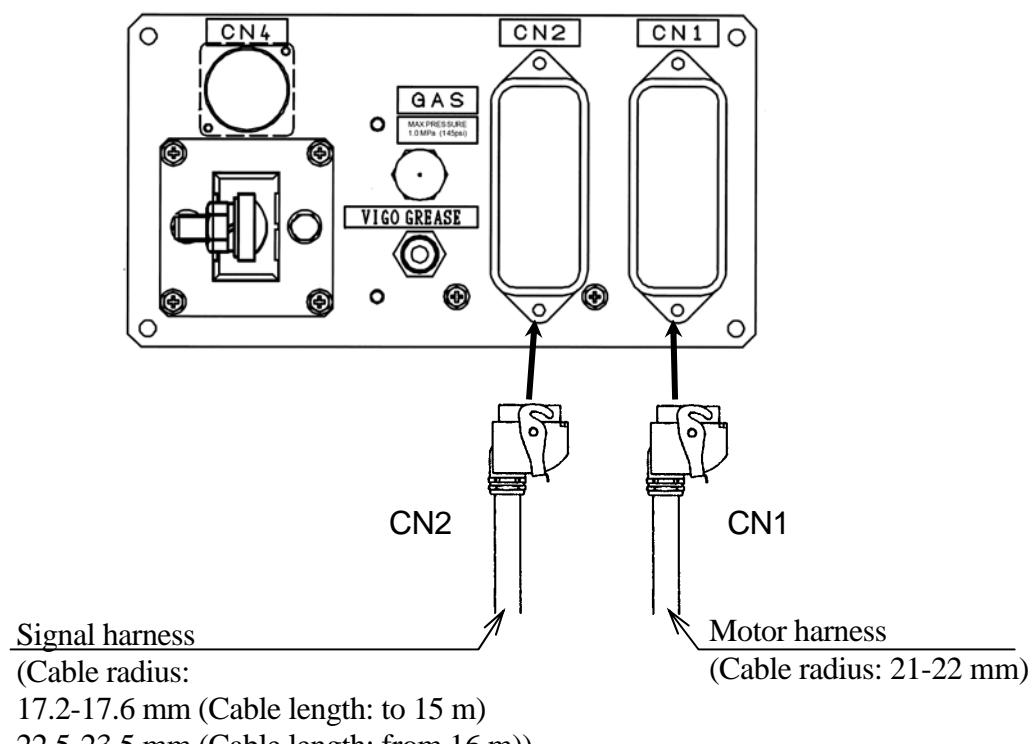


RS03N/RS05N/RS05L

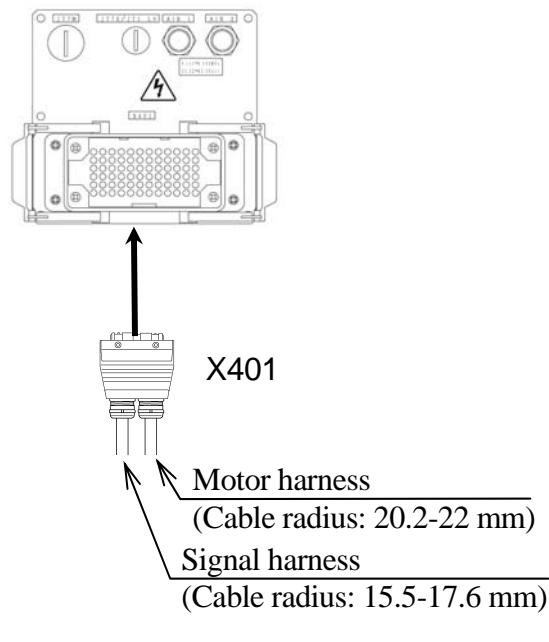


RS10N/RS06L

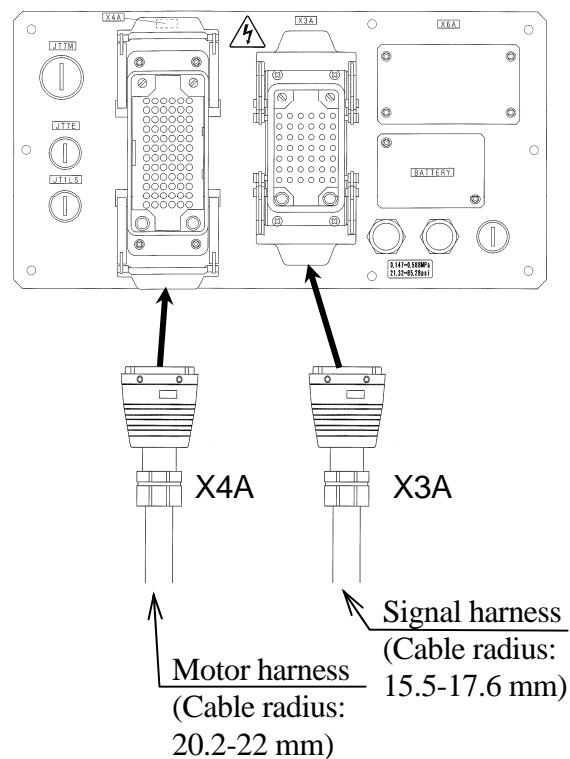


RS20N/RS10L

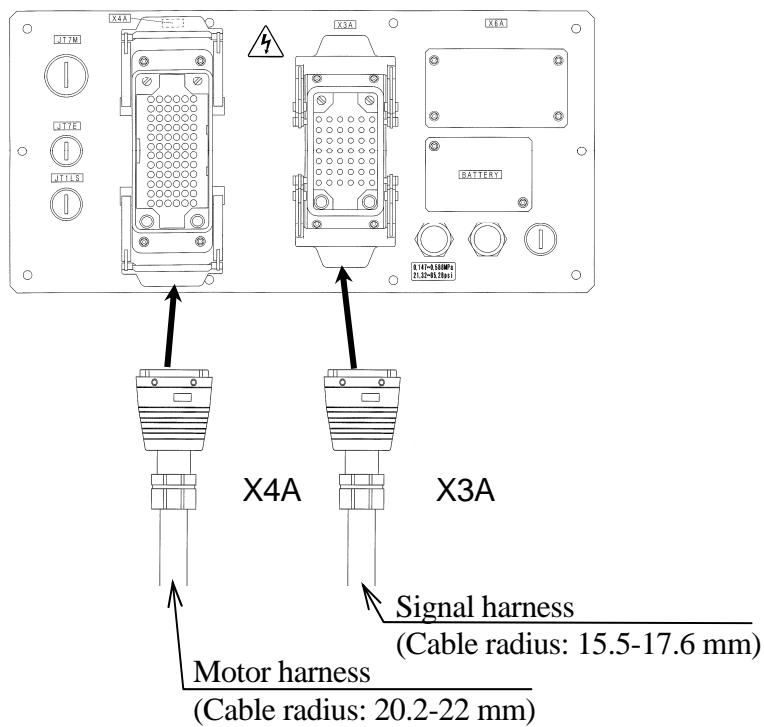


RS30N/RS50N/RS80N/RS15X/RD80N

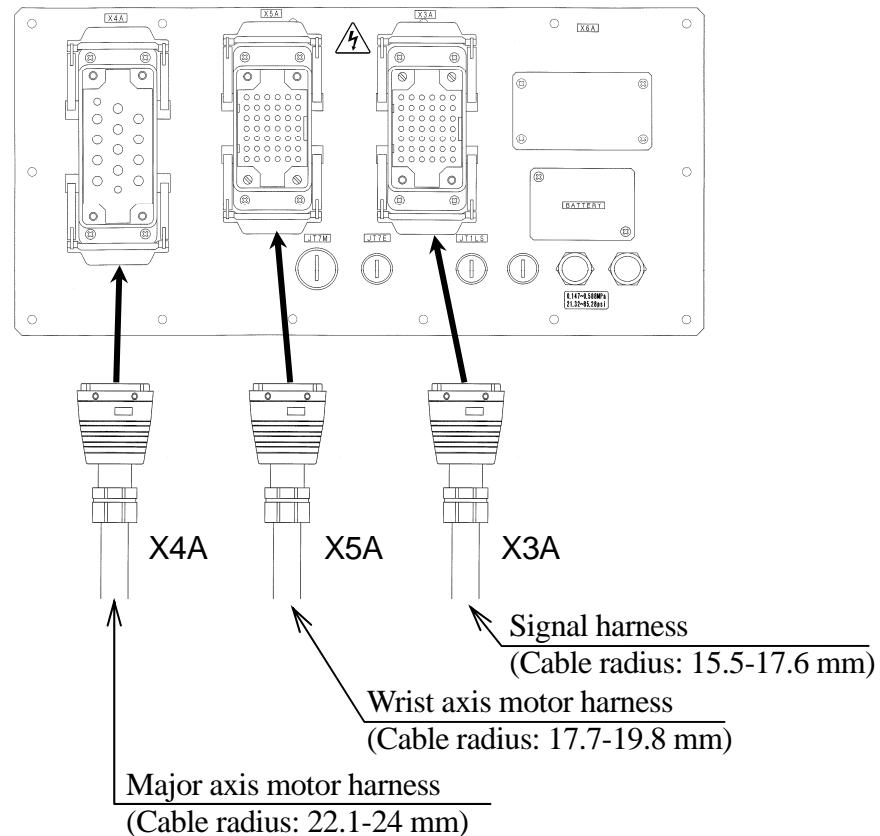


ZH

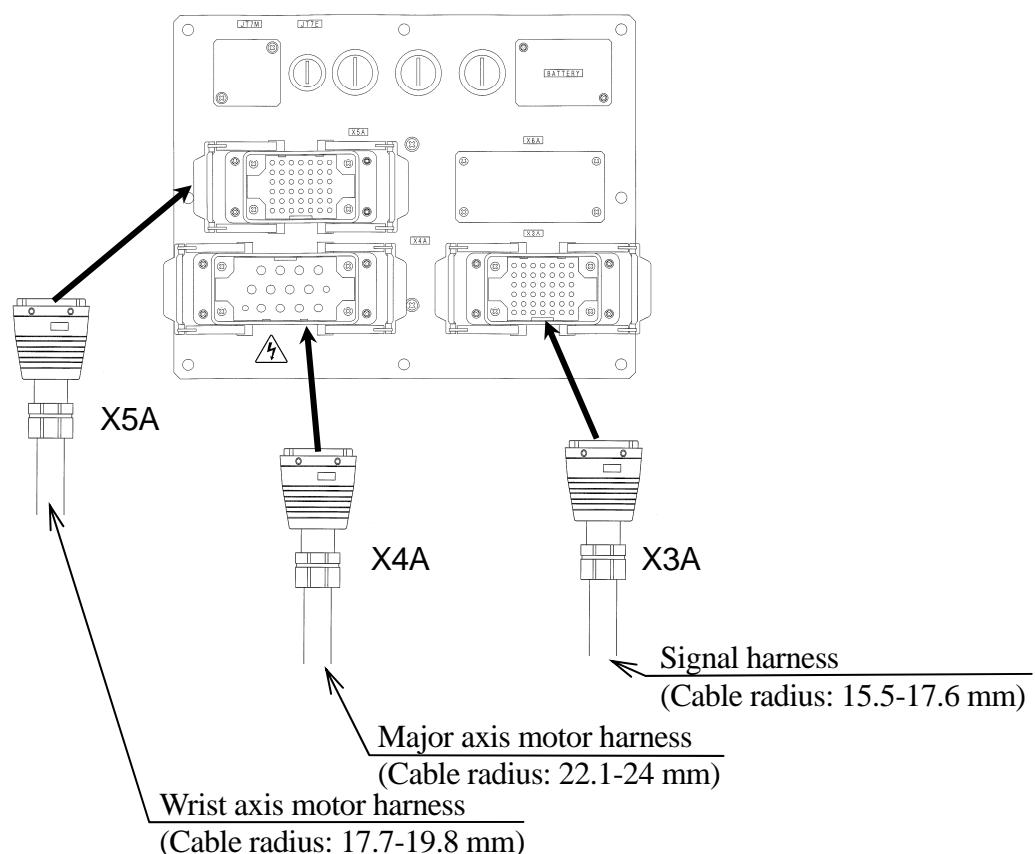


BX

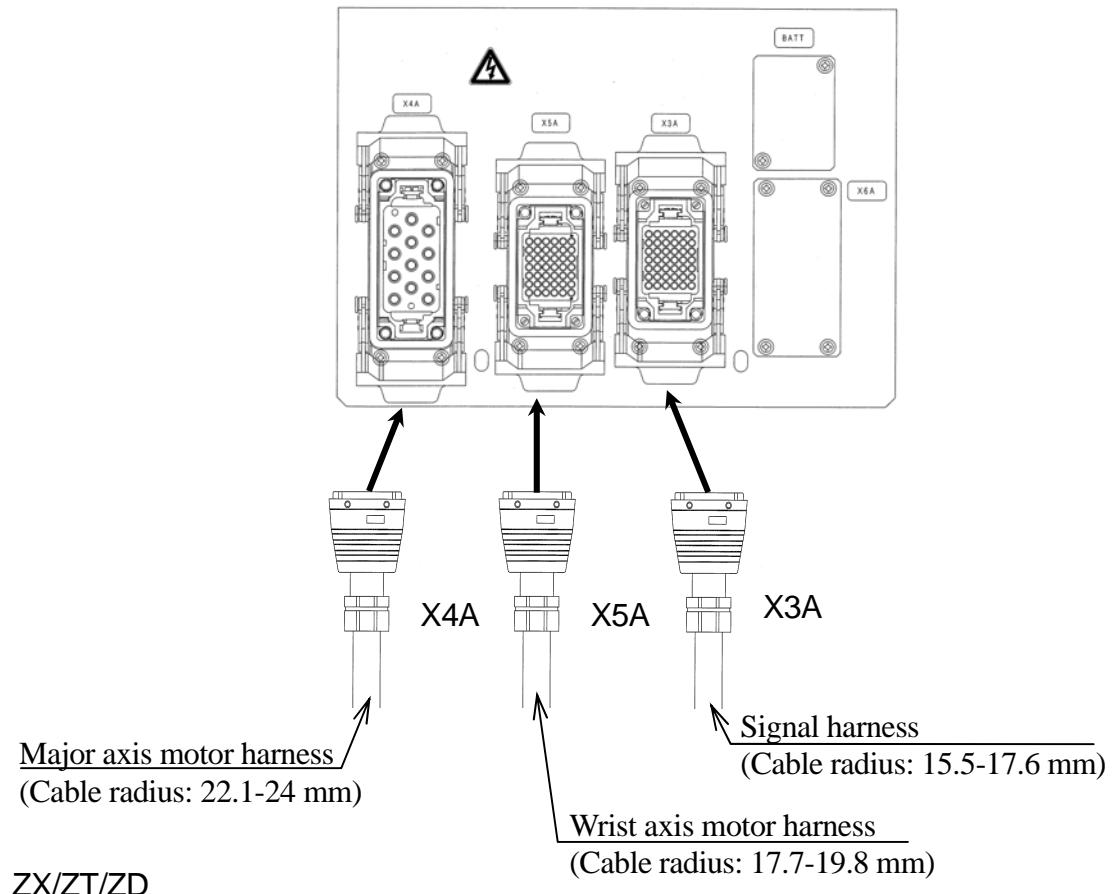


ZX/ZT/ZD

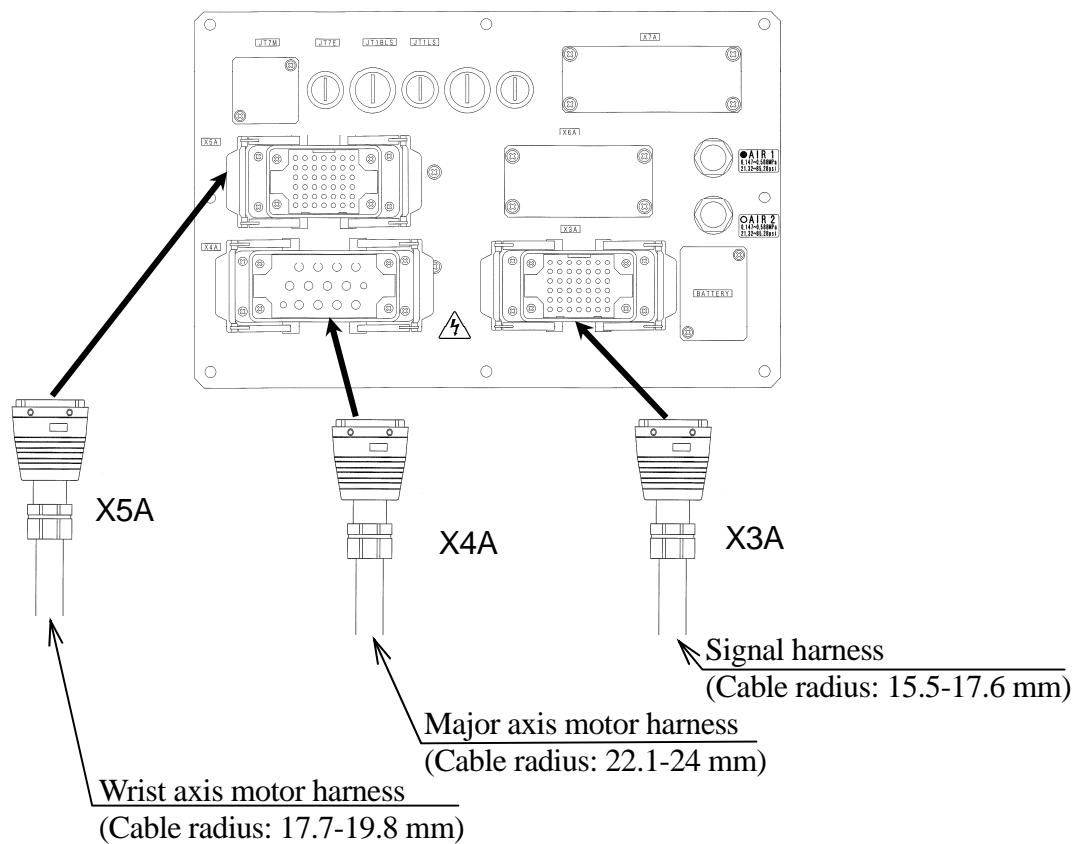

MT

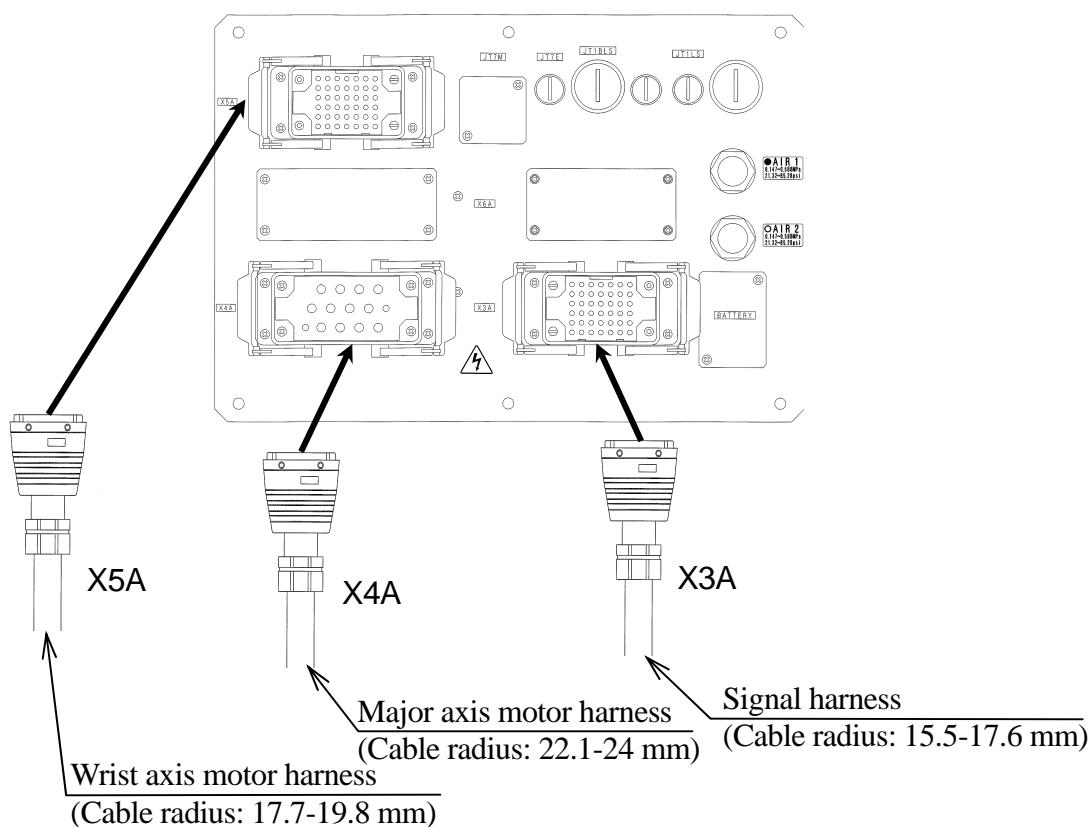


MX/MD

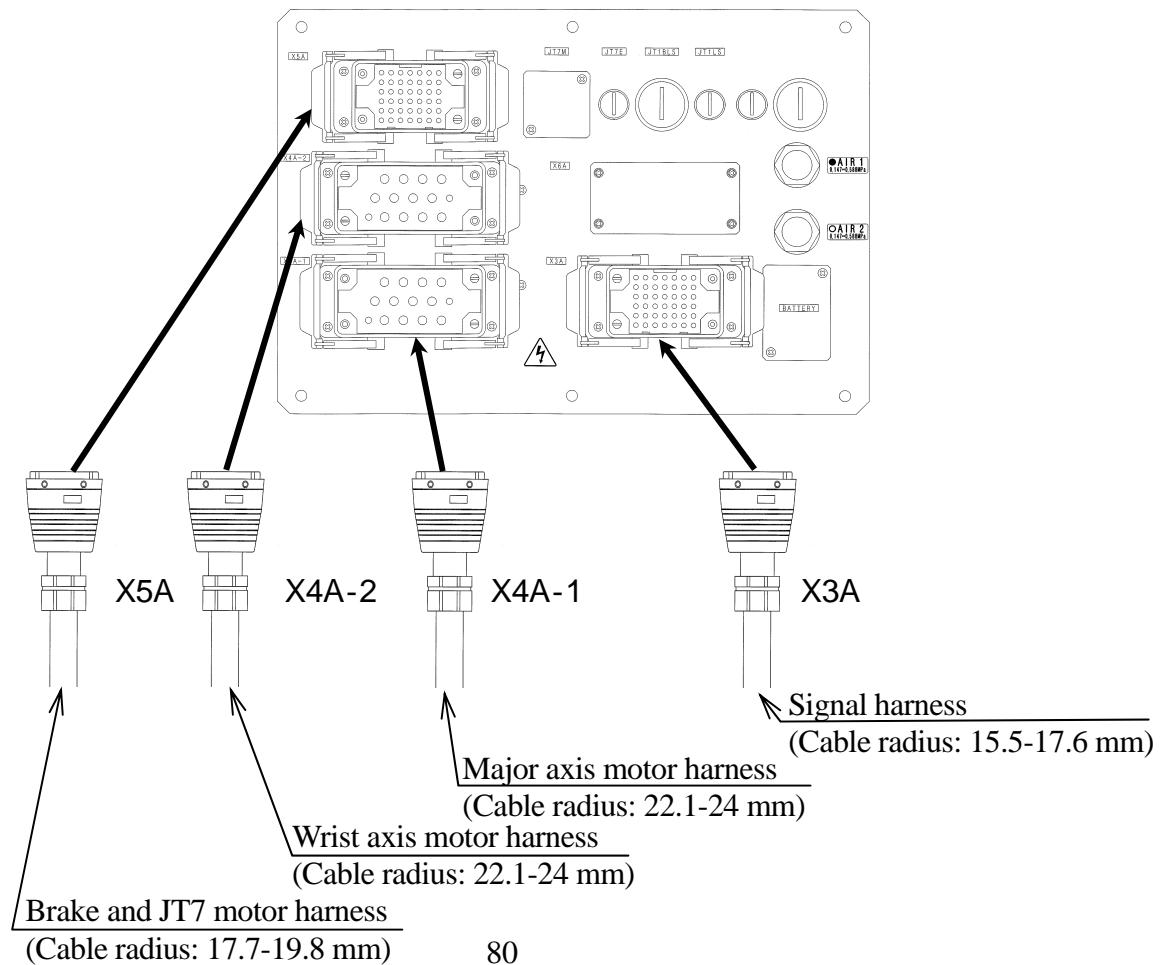


## 6.2 CONNECTION BETWEEN CONTROLLER AND TEACH PENDANT

1. Connect the teach pendant cable with the connector, lower of operation panel. Pull up the lever and insert the cable side connector, then pull down the lever to lock the connectors.
2. Hang the teach pendant and the teach pendant cable on the hook. (No hook is provided for E7x controller.)

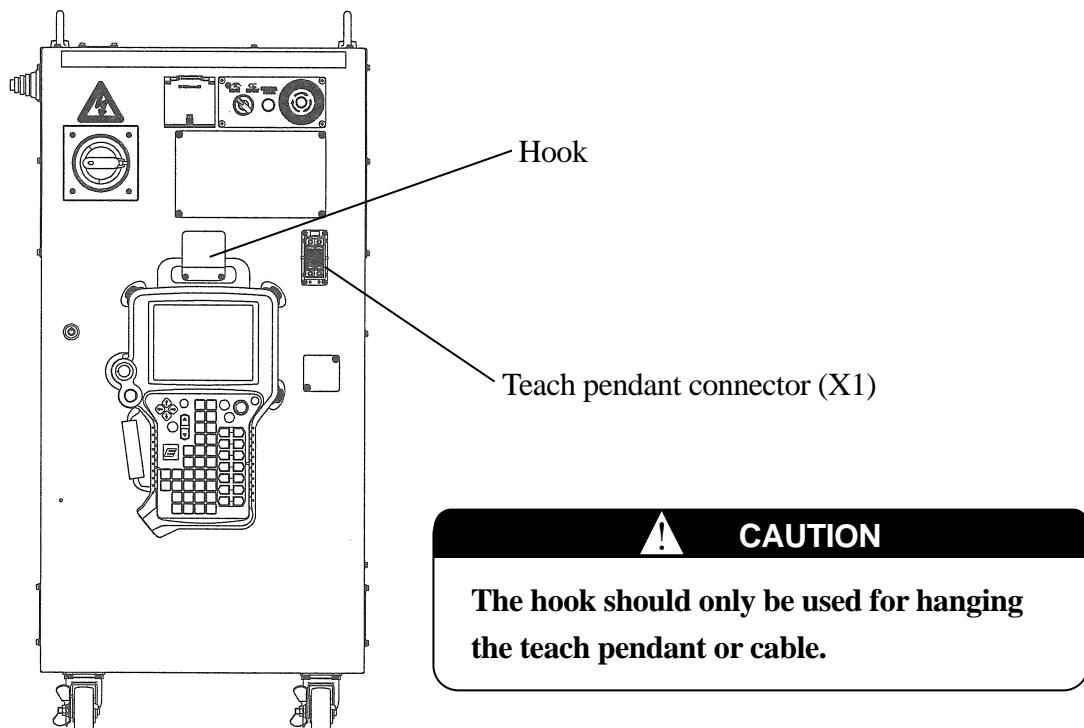

This figure shows E2x controller.

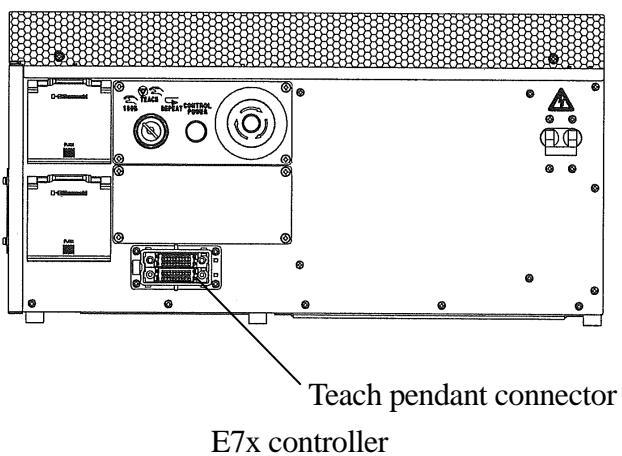

E7x controller

## 7.0 CONNECTION OF EXTERNAL POWER

Strictly observe the following precautions when connecting the external power.



### DANGER

**Before beginning the connection work, confirm that the external power supply for the controller is cut off at the source. To prevent external power from being turned ON accidentally, tag the breaker and indicate clearly that work is in progress. Or, assign a supervisor in front of the breaker until all the connections are complete. Connecting components while power is supplied is extremely dangerous and may cause electric shock.**



### WARNING


1. Confirm that the connected supplying power meets specifications shown on the rating plate and the label attached on the side of the breaker. Supplying out-of-specification power will damage electric components in the controller.
2. Earth the controller to prevent against electrical noise and shock.
3. Use dedicated earth wire ( $100\ \Omega$  or less), which is equal to or larger than the recommended power cable size ( $3.5 - 8.0\ mm^2$ ).
4. Never share an earth line with workpiece to be welded or another machine (weld machine, etc.).
5. In arc welding applications, connect the minus pole of the weld power supply to a jig or directly to workpiece to be welded. Insulate the robot body and controller so that they do not share a common earth line.
6. Without fail, before turning ON the external power to controller, make sure the power supply wiring is complete and all the covers reattached properly. Otherwise, failure to do so may cause electric shock.

**!** CAUTION

- 1. Prepare external power that meets the specifications of the controller in terms of momentary power interruption, voltage fluctuation, power capacity, etc. If the power is interrupted or the voltage goes out of the controller's specified range (above/below ratings), then the power monitoring circuit activates cutting off the power, and an error is returned.**
- 2. If the external power emits a lot of electrical noise, set up a noise filter to reduce the interference.**
- 3. PWM noise from robot motor lines may cause malfunction of low noise- resistant devices\* via external power line. Confirm that there are no such devices in the vicinity.**
- 4. Install a separate external power switch (breaker) for the robot, independent and unconnected to the weld machine.**
- 5. To prevent shorting or accidental leakage on the external power switch, install an earth leakage breaker. (Use a time delay type with sensitivity of 100 mA or more.)**
- 6. If there is a possibility that surge voltage such as lightning surge might be applied from external power line, decrease the surge voltage level by mounting a surge absorber.**



**NOTE\*** Proximity switch directly connected with power line etc. may suffer from the influence.

E1x/E2x/E4x controllers

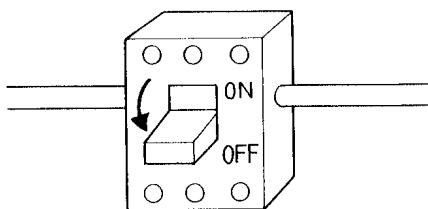

Connect with the external power circuit breaker at the installation site.

**CONTROLLER POWER** Switch

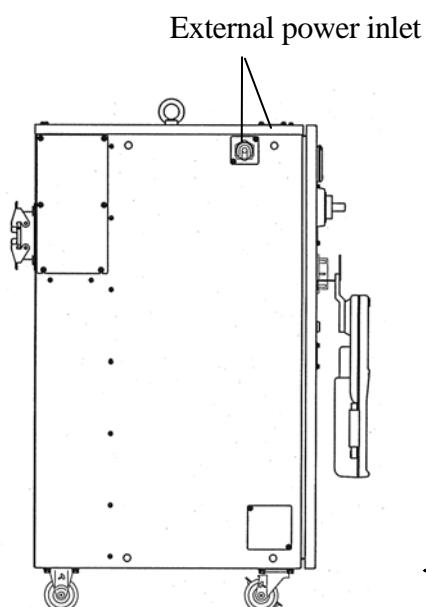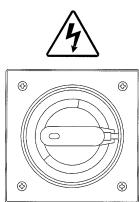


Connect the external power according to the following procedure.

1. Turn OFF the external power for the controller.
2. Set **CONTROLLER POWER** switch on the controller door to the OFF side.
3. Feed the external power cable into the inlet on the left side of controller.


Detailed procedure of fixing a cable is shown below.

- Cut a cable gland (supplied with the controller) in accordance with the diameter of the cable.
- Pass the cable through the cable gland.
- Tighten the screw after adjusting length of the cable.
- Pass the cable through the inlet and tighten the lock nut.


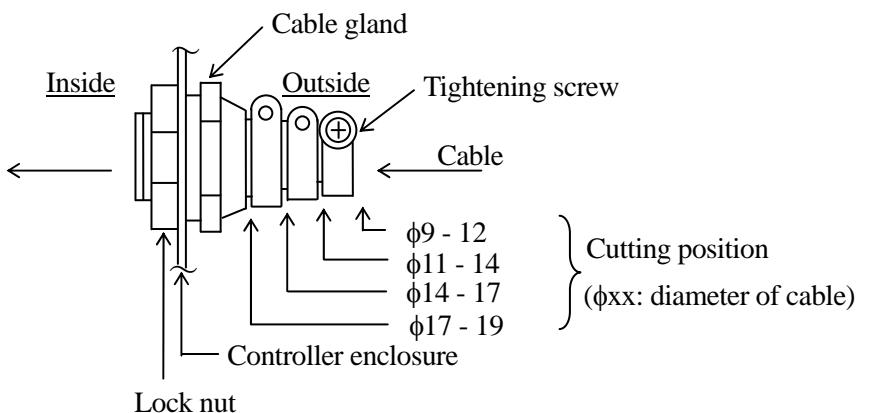


**CAUTION**

1. Confirm current requirements and select a power cable with adequate capacity. (See section 3.0.)
2. Do not install wire that is too small in diameter, the voltage may drop or the cable may overheat.

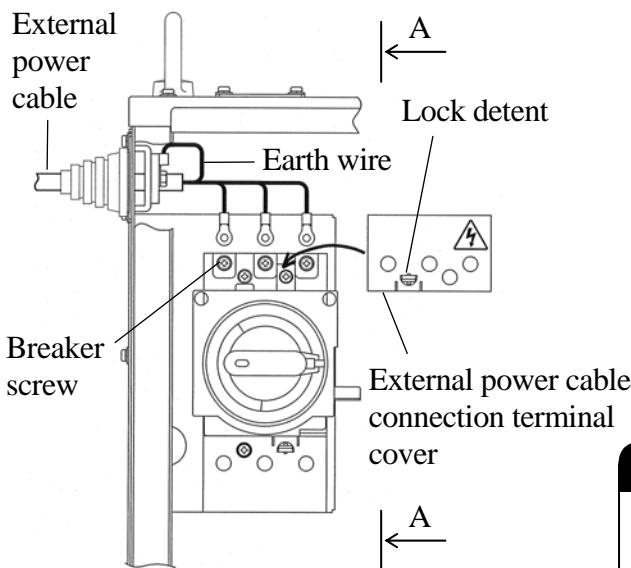

Connect the earth wire to the earth terminal as shown below.

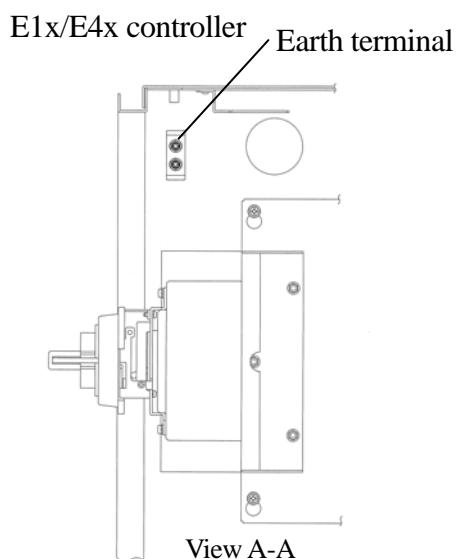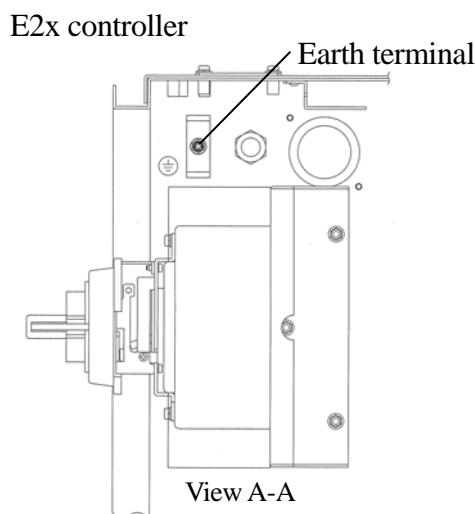

4. Attach round, crimp-type terminals on the ends of the individual wires of the power cable. Use round insulators on each of these wires to prevent contact between the crimped part and metal. (See left figure.)

5. Connect the external power cable to the breaker terminal (3 screws), and the dedicated earth terminal.

### **! WARNING**

**Tighten the terminal screws securely.**  
**Operating the robot with loose terminals is very dangerous and may lead to electric shock, robot malfunction, or breakdown of the electrical system.**

### **[ NOTE ]**

As to E1x/E2x controller without insulation transformer, make sure to connect earth phase S to the center terminal in the case of connecting external power to the breaker. If not, the earth leakage breaker might trip.


6. Mount the external power cable connection terminal cover.

### **! DANGER**

**Mount the external power cable connection terminal cover when the wiring is complete.**  
**Failing to mount the cover may lead to electric shock due to accidental contact with power line.**

Electric cable size to be used	Crimp-type terminal size	
	Breaker	Earth terminal
3.5 mm <sup>2</sup> (AWG12)	R5.5-5	R5.5-5
5.5 mm <sup>2</sup> (AWG10)		
8 mm <sup>2</sup> (AWG8)	R8-5	R8-5
13 mm <sup>2</sup> (AWG6)	R14-5	R14-5

E3x controller

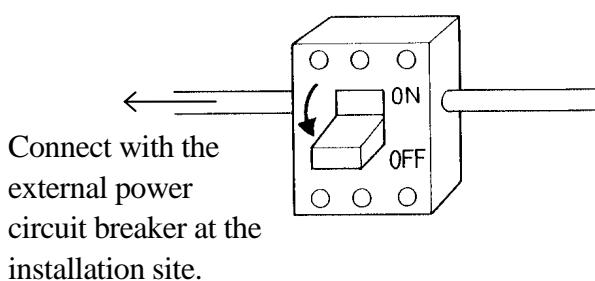


Connect the external power according to the following procedure.

1. Turn OFF the external power for the controller.

2. Set **CONTROLLER POWER** switch on the left front of the controller to the OFF position.



3. Feed the external power cable into the inlet on the top of the controller with following procedures.

- Prepare the cable gland that is suitable for the power cable diameter.
- Remove the plate on external power inlet, and make a hole for the cable gland.
- Pass the cable through the cable gland.
- Tighten the nut after adjusting length of the cable.
- Pass the cable through the inlet and tighten the lock nut.

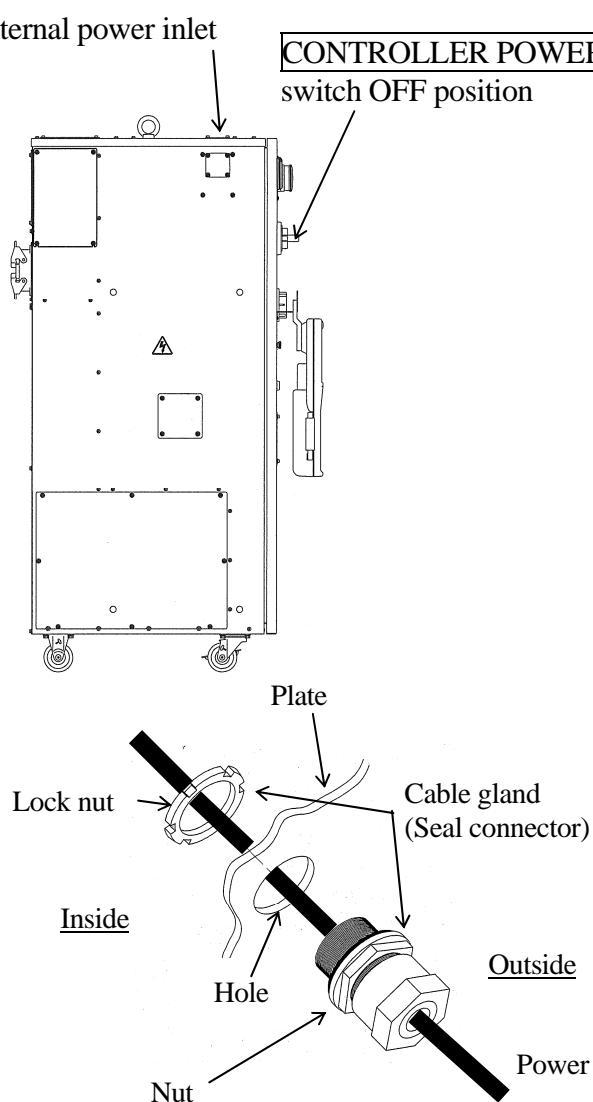

**CAUTION**

1. Confirm current requirements and select a power cable with adequate capacity. (See section 3.0.)
2. Do not install wire that is too small in diameter, the voltage may drop or the cable may overheat.

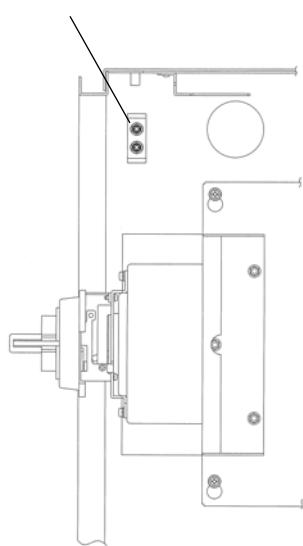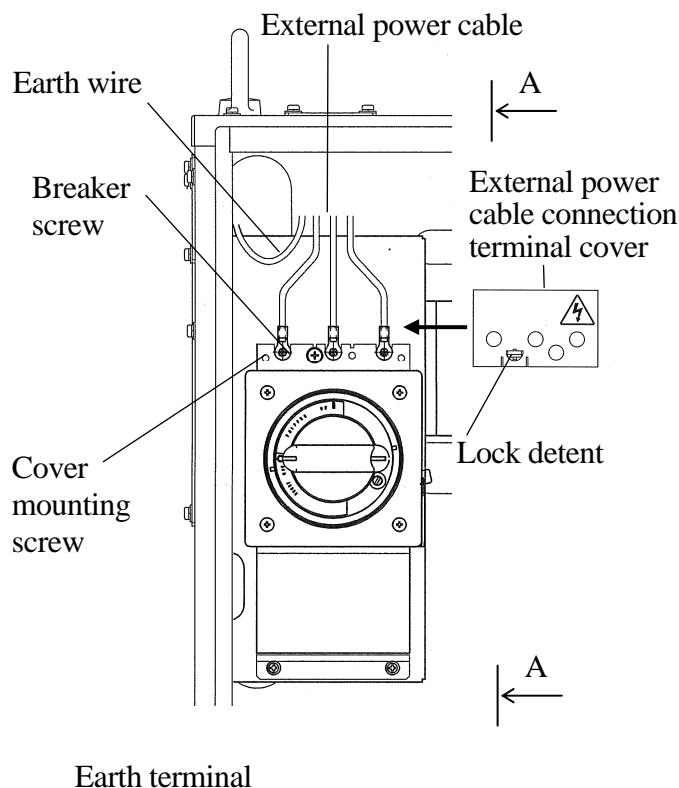

View A-A

4. Attach round, crimp-type terminals on the ends of the individual wires of the power cable.

- Use crimp-type terminal, UL listed type shown in the table below.
- The crimp-type terminal should be crimped with appropriate tools in accordance with manufacturer's instruction manual.

5. Attach the plate on external power inlet.

6. Unscrew the cover mounting screws, remove the breaker terminal cover (upper side), and connect the external power cable to the breaker terminal (3 screws), and the dedicated earth terminal.

Connect the ground wire with the ground terminal as shown left figure. After wiring, return the cover as it was.



### WARNING

**Tighten the terminal screws securely. Operating the robot with loose terminals is very dangerous and may lead to electric shock, robot malfunction, or breakdown of the electrical system.**



### DANGER

**Mount the external power cable connection terminal cover when the wiring is complete. Failing to mount the cover may lead to electric shock due to accidental contact with power line.**

External power voltage: AC380-415, AC440-480, 515, 575V


Electric cable size to be used	Crimp-type terminal size (Use the UL listed terminal)	
	Breaker	Earth terminal
3.5 mm <sup>2</sup> (AWG12)	R5.5-8	R5.5-5
5.5 mm <sup>2</sup> (AWG10)		
8 mm <sup>2</sup> (AWG8)	R8-8	R8-5
13 mm <sup>2</sup> (AWG6)	R14-8	R14-5

External power voltage: AC200-220V


Electric cable size to be used	Crimp-type terminal size (Use the UL listed terminal)	
	Breaker	Earth terminal
3.5 mm <sup>2</sup> (AWG12)	R5.5-5	R5.5-5
5.5 mm <sup>2</sup> (AWG10)		
8 mm <sup>2</sup> (AWG8)	R8-5	R8-5
13 mm <sup>2</sup> (AWG6)	R14-5	R14-5

E7x controller

Connect with the external power circuit breaker at the installation site.

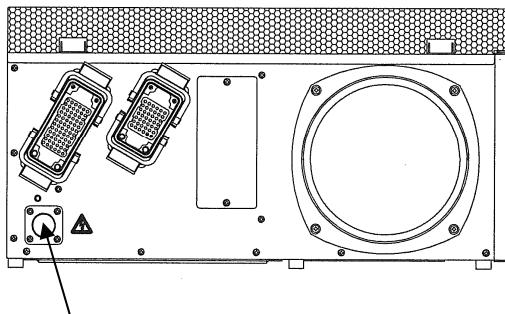

External power connector

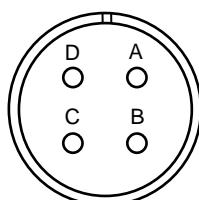

Connect the external power according to the following procedure.

1. Turn OFF the external power for the controller.
2. Set **CONTROLLER POWER** switch on the front of the controller to the OFF position without fail.
3. Connect the external power cable to the external power connector on the rear of the controller.
  - Solder the attached connector on the external power cable. The figure below shows pin configuration of connector.

A	AC(L)
B	(N.C.)
C	AC(N)
D	FG

Wiring diagram of attached connector



**CAUTION**


1. Confirm current requirements and select a power cable with adequate capacity. (See section 3.0.)
2. Do not install wire that is too small in diameter, the voltage may drop or the cable may overheat.

## 7.1 CHANGE OF EXTERNAL POWER INPUT VOLTAGE (ONLY FOR E3X CONTROLLER WITH OPTIONAL TRANSFORMER)

Change the connection of the transformer connector before changing the external power input voltage.

Specification	External power input voltage	Connector
E3x series (optional) 380-415/440-480/515/575 VAC	380/400/415 V	X601A
	440/460/480 V	X601B
	515 V	X601C
	575 V	X601D


To change the connection, remove the bottom panel on the back side of the cabinet.

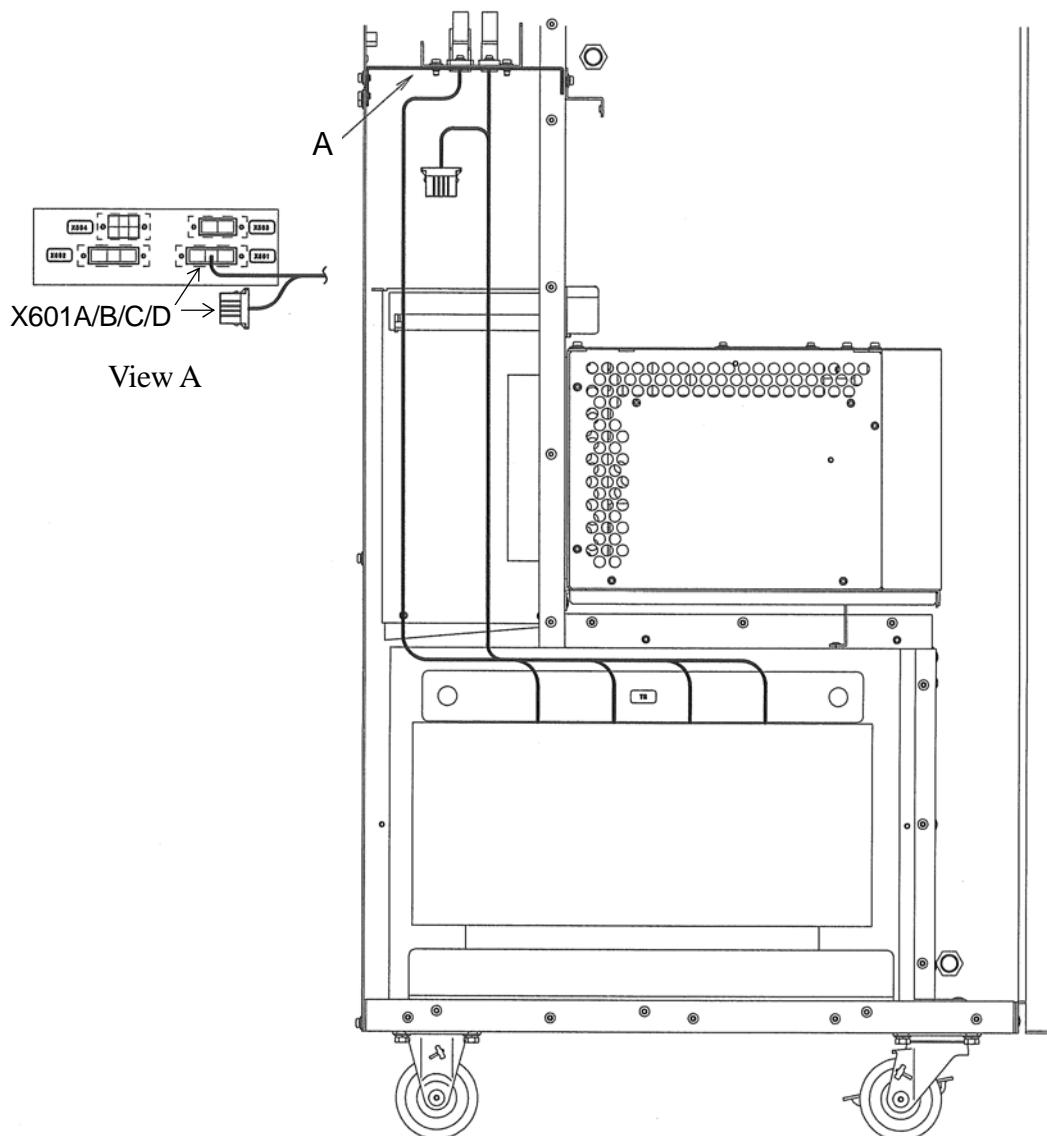


## 8.0 CONNECTION OF PERIPHERAL CONTROL EQUIPMENT

According to application specifications, connect the peripheral controller or devices to the respective connectors in the controller as shown below.


### E2x controller

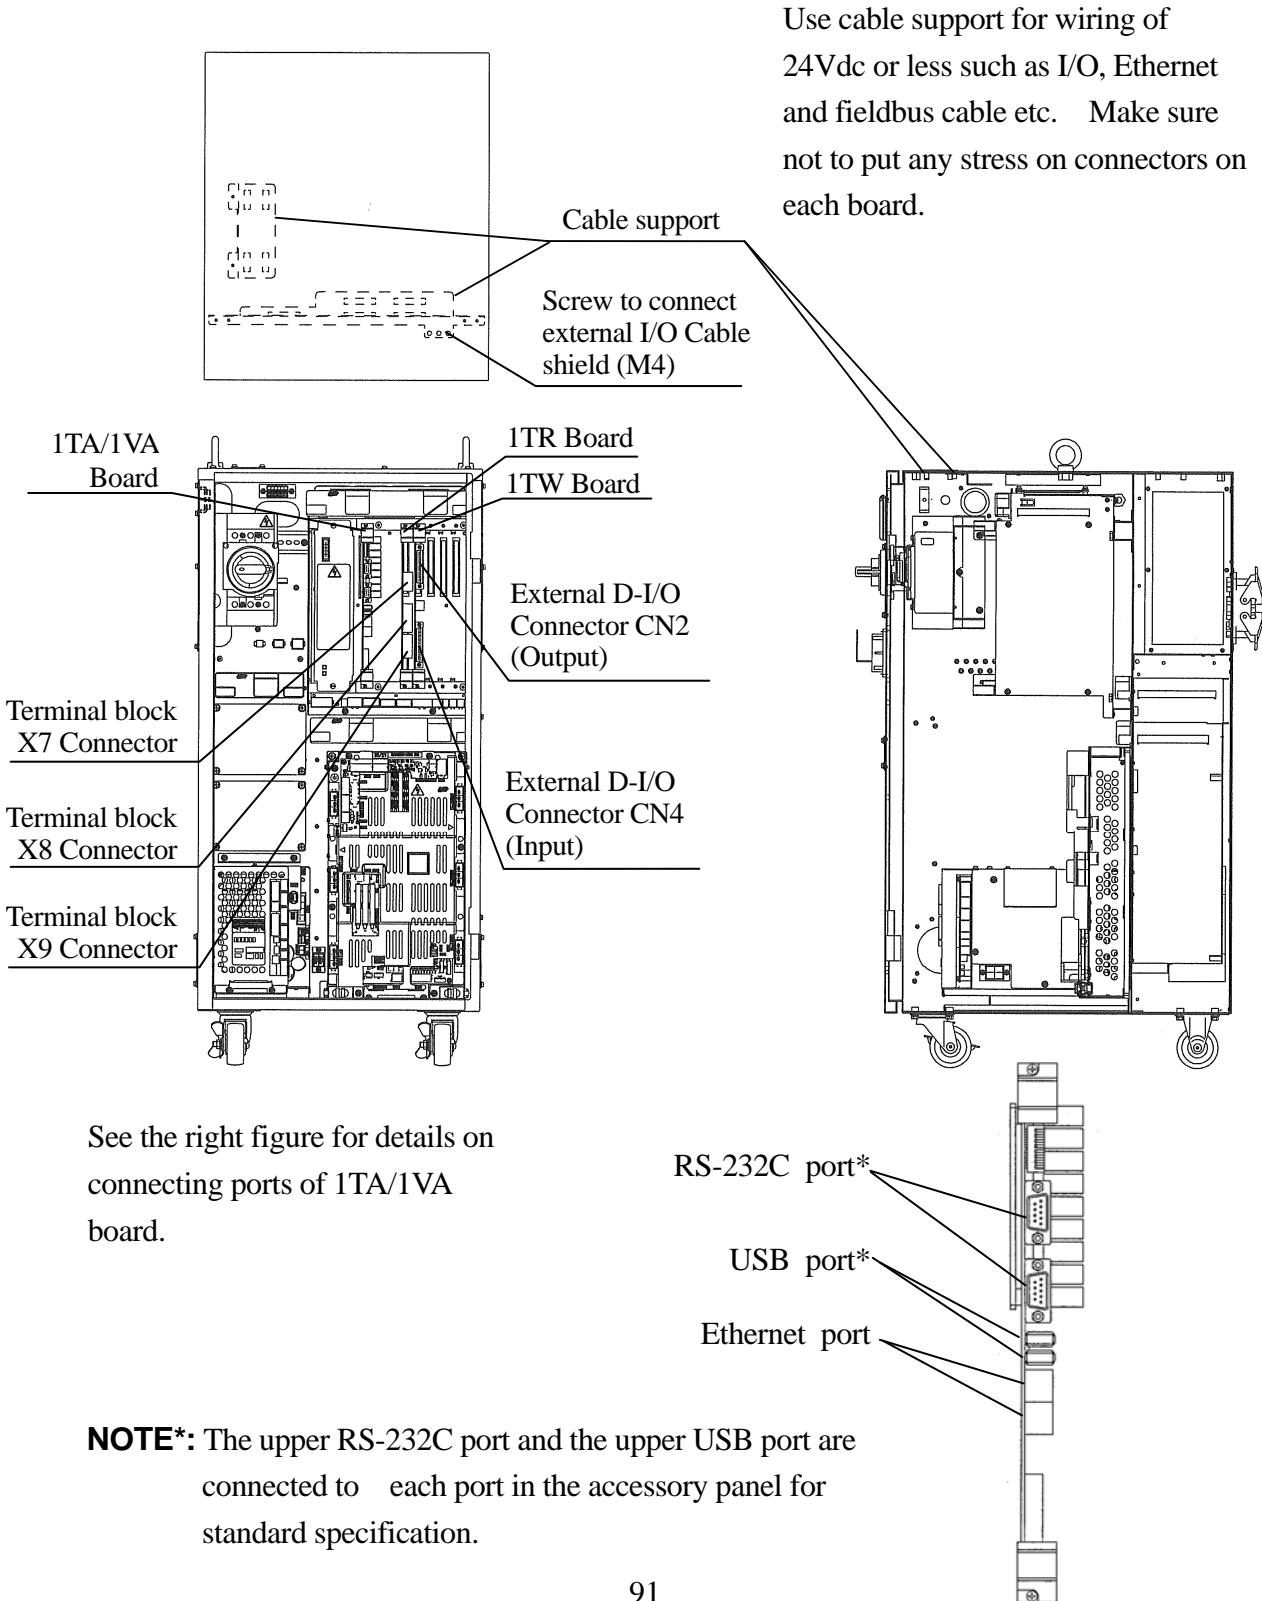

E1x/E3x/E4x controller

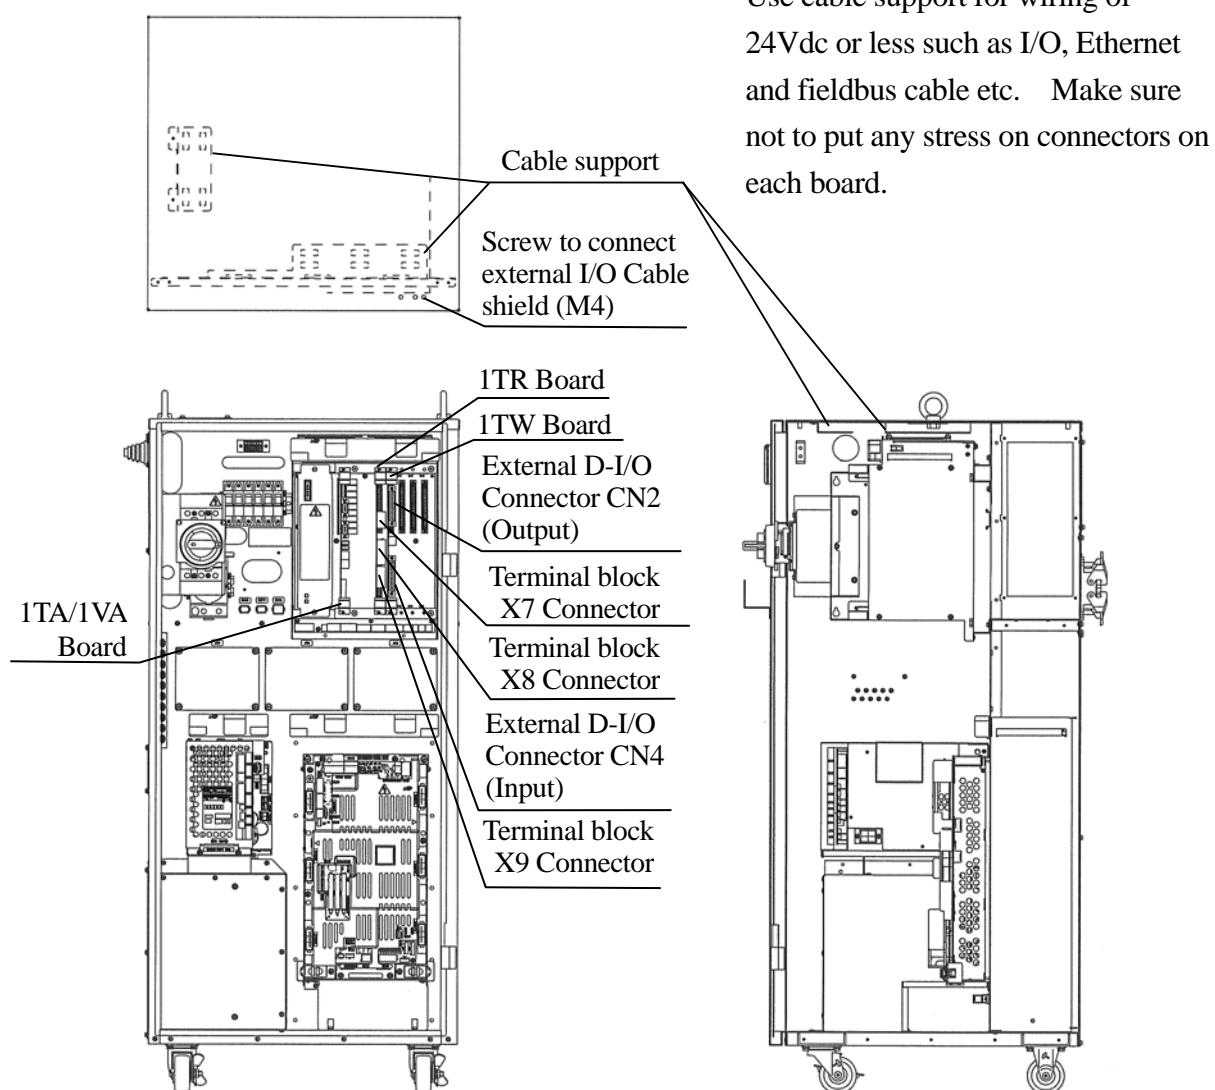


See the right figure for details on connecting ports of 1TA/1VA board.

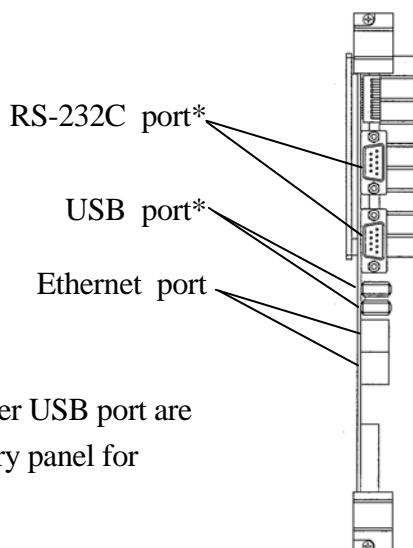


**NOTE\***: The upper RS-232C port and the upper USB port are connected to each port in the accessory panel for standard specification.

### E7x controller

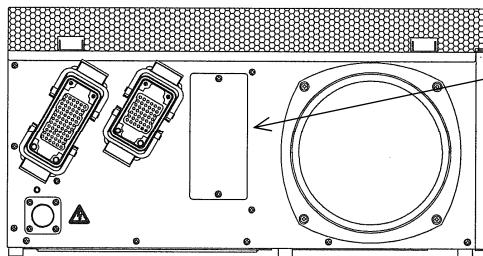


Rear

I/O signal inlet  
Connect each connecting port with peripheral equipment and devices, using the I/O signal inlet on the rear or the left side of the controller.

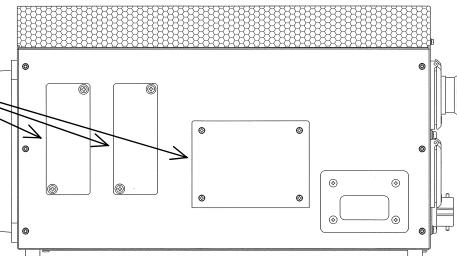


Left

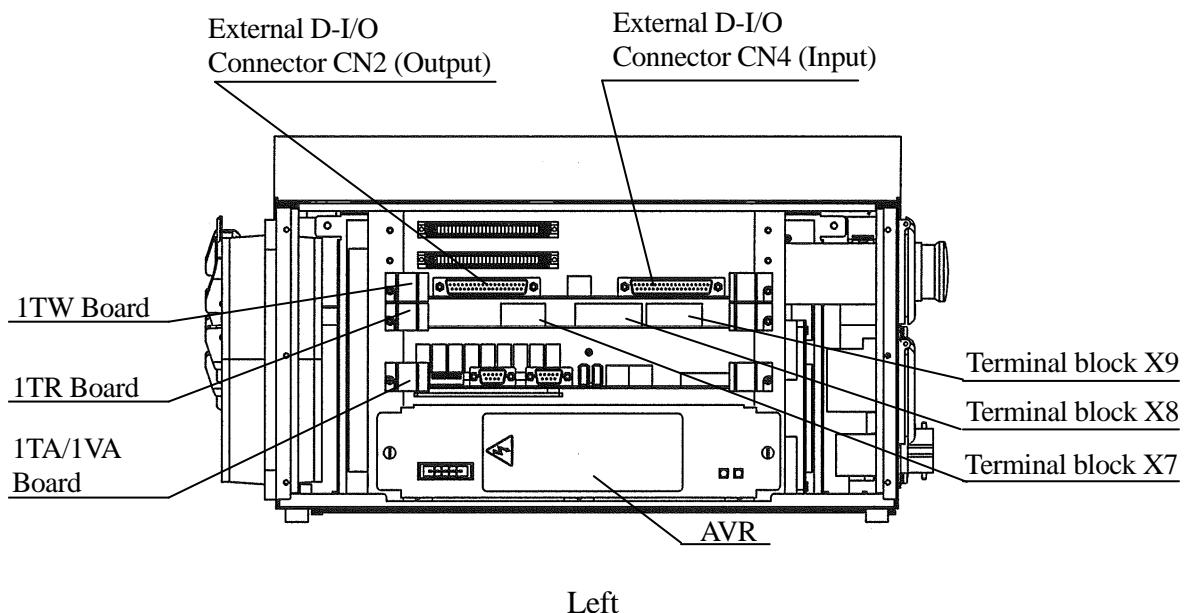

Left

See the right figure for details on connecting ports of 1TA/1VA board.

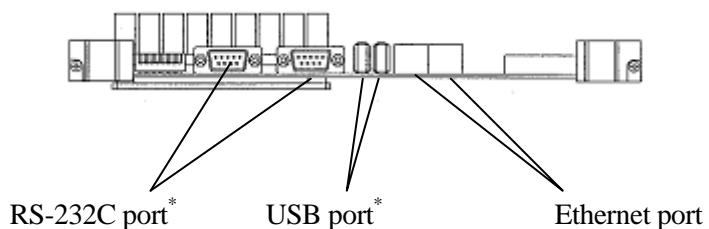

**NOTE\*:** The left RS-232C port and the left USB port are connected to each port in the accessory panel for standard specification.

## 8.1 CONNECTION INSTRUCTIONS



### WARNING

**Turn OFF the power supply to the controller and peripheral equipment when connecting external I/O. Prevent accidental turn ON of the power until all connections are complete by take procedures shown below or by tagging the breaker to indicate that work is in progress or by assigning a supervisor to stand in front of the breaker. Failure to do so is extremely dangerous and may result in electric shock or damage to the electrical system.**

Controller model	Procedure to prevent turning ON the power during operations
E1x/E2x/E3x/E4x	Padlock the main breaker handle.
E70/E71/E73/E74	Mount the attached lock part or disconnect the external power connector.
E76/E77	Lock by attached lock fitting or padlock, or disconnect the external power connector.



### CAUTION

- 1. Take the necessary noise countermeasures on equipment with external I/O connections to the controller. Electrical noise that interferes with the I/O signals may cause malfunction or damage to the electrical system.**
- 2. Do not mistake pin Nos. on the connectors when connecting external I/O. Misconnecting pins may cause breakdown of the electrical system.**
- 3. Prevent people or equipment (forklift, objects, etc.) from stepping on or riding over the external I/O cables. An unprotected cable may become damaged causing breaks in the electrical system.**
- 4. Avoid wiring the external I/O cables and the power lines close together or in parallel as much as possible. Separate the cables and lines by at least 20 cm. (either in or outside the controller) Electromagnetic induction noise from the robot motor cable, the power lines for peripheral equipment, welding cable, etc. may penetrate into the I/O cables and lead to malfunction.**
- 5. Use a shield cable for the external I/O cable and connect the shield wire to the controller.**
- 6. When connecting I/O cables to connectors or terminals, fix them with tying bands in the harness support set on the top of the controller, preventing them from excessive force. (pulling, snagging of cable, etc.)**
- 7. Install the seal connector so that external I/O cables never cause insulation failure or disconnection at the inlet.**

## 8.2 CONNECTION OF GENERAL PURPOSE SIGNAL


The robot can operate synchronously with the peripheral equipment or other robots when connecting I/O signals to the peripheral controller with connectors CN2 and CN4 on the 1TW board. (Connectors on the cable side of CN2 and CN4 are optional.)

### 1. Insert the cables into I/O signal inlet.

I/O signal inlet: Left side of the controller for E1x/E2x/E3x/E4x and rear of the controller for E7x

An example of installing the cable(s) is shown below.

- (1) Make a hole in the plate suitable for the seal connector.
- (2) Pass the cable through the seal connector
- (3) After passing the cable to the hole, tighten the nut(s) of the seal connector.

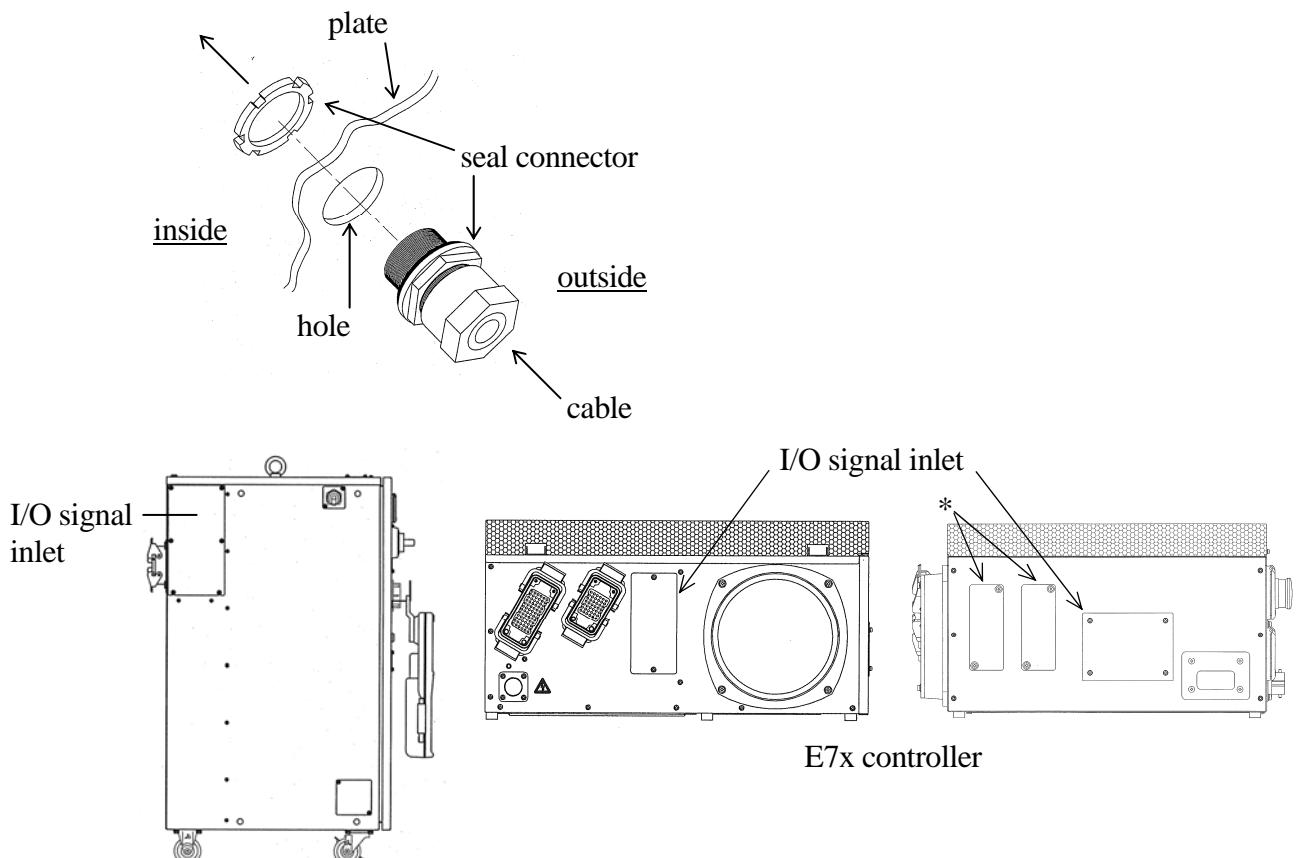

This figure shows E2x controller.

2. Remove the connector cover for CN2 and CN4, and wire for general purpose signal.
3. Solder the connector pin.
4. Strip off the cable coating by 2-3 mm and apply solder to the wire end.
5. Solder the cable to the connector pin.

[ NOTE ]

On the plate part shown with \*, cables can be put through by mounting commercial cable entry (manufactured by PHOENIX CONTACT, KEL cable entry system).

6. Cover the connector pin with the insulation tube.

[ NOTE ]


1. Use an insulation tube of heat shrinkage type, or bind the tube ends on each line so they do not come off.
2. We recommend using AWG22-24 or equivalent for cables.

7. After wiring is complete, attach connector cover and fix the cable securely.


8. Insert the connector into 1TW board and fix with locking screws at both ends.

[ NOTE ]

Tighten the screw thoroughly. The connection may fail if the screw is loose and the connector pins are exposed to excessive stress/force.

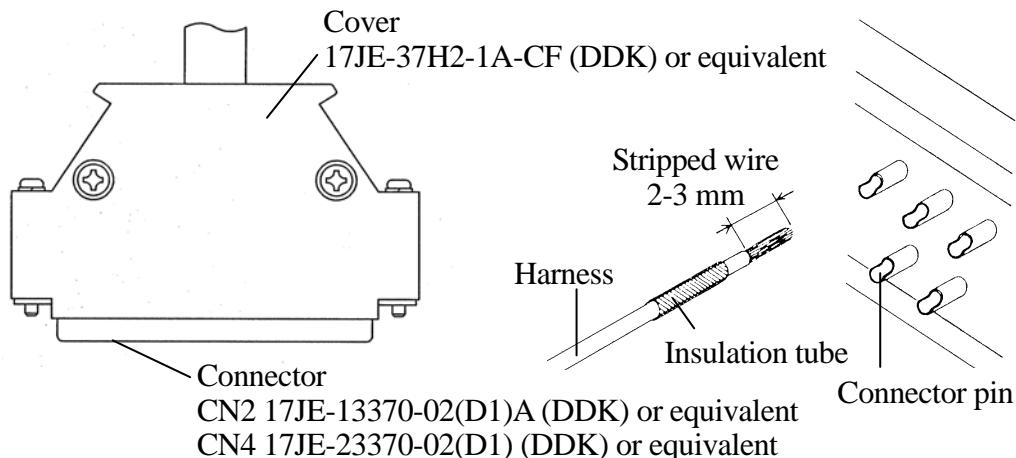

E1x/E2x/E3x/E4x controllers

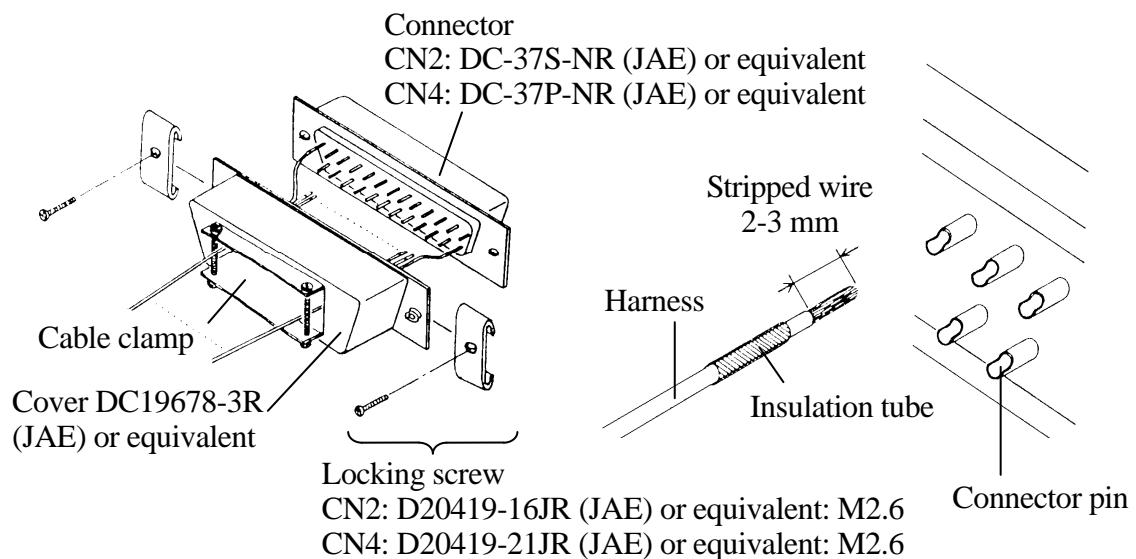


E7x controller

### 8.3 CONNECTION OF HARDWARE DEDICATED SIGNAL

It is possible to construct a safety circuit using the hardware circuit by connecting the external emergency stop signal or hold signal line to the terminal connector on the 1TR board. Refer to “External I/O Manual” for more details about signals and their connection to each terminal block.

Terminal block connections are held in place by springs. Push a thin flat-head screwdriver (width: 2.5 mm or less) into the hole on the right to open the spring in the left hole. Then insert the wire there to connect.

We recommend using AWG22-24 or equivalent for cables.  
(Stripped wire length: 7 mm)

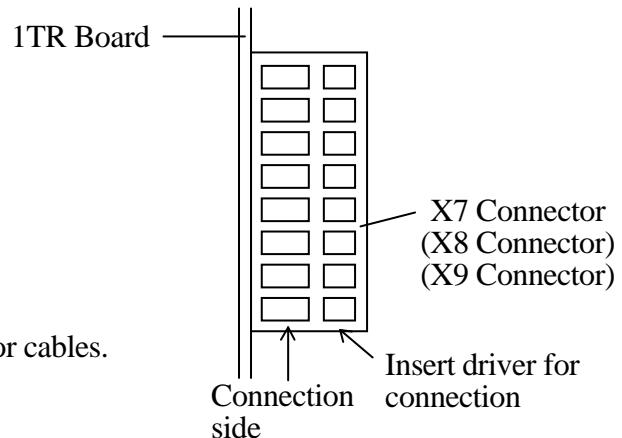

To assure the wiring, we recommend using ferrules;

Recommended model: 216-201 (WAGO)

Recommended crimping tool: 206-204 (WAGO)

(Stripped wire length: 9.5 mm)

### 8.4 CONNECTION OF PERSONAL COMPUTER

A PC can be used as a terminal for the robot controller, when loaded with terminal softwares KRterm/KCwin32 and connected to the RS-232C port in the accessory panel. Also a PC loaded with KRterm /KCwin TCPIP can be used as terminal by connecting it to the ethernet port on 1TA/1VA board with Ethernet cable. Refer to the “AS Language Reference Manual” for more details.

### 8.5 CONNECTION OF RS-232C SERIAL SIGNAL (OPTION)

Data communication is possible with the host computer when the host computer is connected to the RS-232C port on the 1TA/1VA board with an RS-232C cable. Refer to the option manual 90210-1177DE\* for details.

### 8.6 CONNECTION OF ETHERNET COMMUNICATION SIGNAL (OPTION)

It is possible to build an Ethernet LAN of 10BaseT/100BaseTX using the ethernet port on 1TA/1VA board. Refer to the option manual 90210-1248DE\* for details.

## **8.7 CONNECTION OF FIELDBUS (OPTION)**

Adding the 1TJ/1UK board for fieldbus (option) enables communication with peripheral devices such as DeviceNet on the fieldbus. Refer to the option manual 90210-1184DE\* for details.

## **8.8 CONNECTION OF SENSORS/VALVES ON ARM (OPTION)**

Input from sensors mounted on arm and control of output of driving energy to the valves become available by adding arm ID and machine I/O boards, such as 1PV, 1JD, 1JE, 1TK and 1TY boards. Refer to the option manuals 90210-1246DE\* and 90210-1247DE\* for details.



---

**Kawasaki Robot Controller E Series  
INSTALLATION AND CONNECTION MANUAL**

---

February 2009 : 1st Edition  
February 2012 : 7th Edition

Publication : KAWASAKI HEAVY INDUSTRIES, LTD.

90202-1110DEG

---

Copyright © 2012 KAWASAKI HEAVY INDUSTRIES, LTD. All rights reserved.