

Separator Sizes S 805 - S 826, P 605 - P 626, S 921 - S 927




Flex Separation System

Installation System Reference

Printed 01-2013

Book No. 584681-02, rev.8

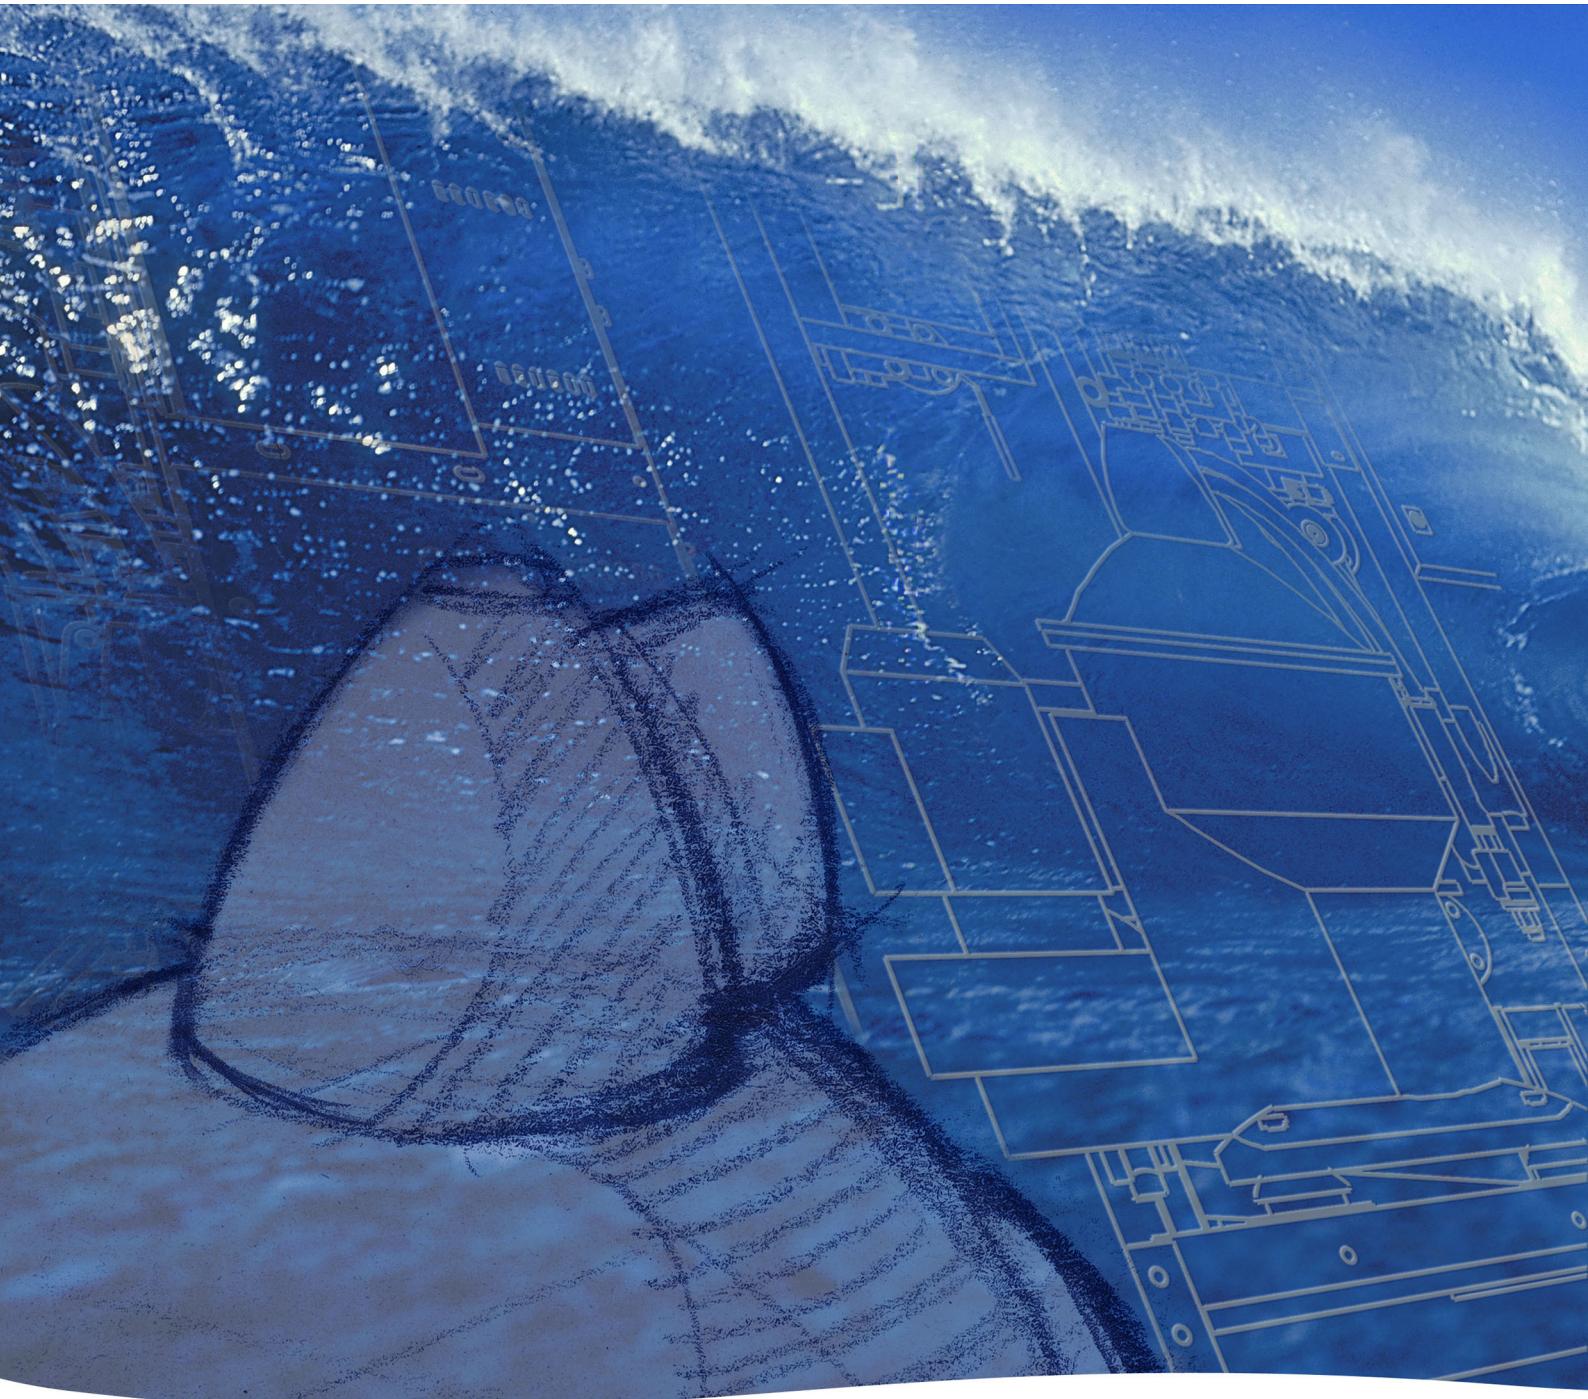

Published By:

Alfa Laval Tumba AB
SE-147 80 Tumba, Sweden

Telephone: +46 8 530 650 00

Telefax: +46 8 530 310 40

© Alfa Laval Tumba AB 01-2013
Original instructions

This publication or any part thereof may not be reproduced or transmitted by any process or means without prior written permission of Alfa Laval Tumba AB.

Contents

1	Technical Data	7
1.1	Demand Specifications Water	7
1.2	Demand Specifications Air	8
1.3	System Data	9
2	Mechanical Drawings	13
2.1	Flow charts	14
2.1.1	S 821 - S 927 Separator, Basic and Optional Components	14
2.1.2	P 605/615, P 625/626 Separator Basic and Optional Components	15
2.1.3	S 805/815 Separator Basic and Optional Components	16
2.2	Mounting Drawings	17
2.2.1	S 821 - S 927 Separator, DIN Mounting Drawing	17
2.2.2	S 821 - S 927 Separator JIS Mounting Drawing	18
2.2.3	P 605, P 615, P 625/626 Separator, DIN Mounting Drawing	19
2.2.4	P 605, P 615, P 625/626 Separator, JIS Mounting Drawing	20
2.2.5	S 805, S 815 Separator DIN Mounting Drawing	21
2.2.6	S 805, S 815 Separator JIS Mounting Drawing	22
2.3	Installation Drawings	23
2.3.1	S 805/815 Separator Installation Drawing	23
2.3.2	S 821 - S 927 Separator Installation Drawing	24
2.3.3	P 605/P 615 Separator Installation Drawing	25
2.3.4	P 625/626 Separator Installation Drawing	26
2.4	Basic Size Drawings	27
2.4.1	S 821 - S 927 Basic Size Drawing	27
2.4.2	P 605, S 805 Separator Basic Size Drawing	28
2.4.3	P 615, S 815 Separator Basic Size Drawing	29
2.4.4	P 625, S 626 Separator Basic Size Drawing	30
2.5	Foundation drawings	31
2.5.1	S 821 - S 927, P 625/626 Separator Foundation Drawing	31
2.5.2	P 605/615, S 805/815 Separator Foundation Drawing	32

2.6	S 821 - S 927 Separator, Pipe Arrangement	33
2.7	S 805, S 815 Separator Pipe Arrangement	34
2.8	P 605, P 615, P 625/626 Separator, Pipe Arrangement	35
2.9	Valve Block Oil Assembly Drawing	36
2.10	Valve Block Oil Assembly Drawing cont.	38
2.11	Valve Block Water Assembly Drawing	39
2.12	Air Distributer Kit	40
2.13	Control Cabinet Dimension Drawing	41
2.14	Control Cabinet Assembly Drawing, External	42
2.15	Control Cabinet Assembly Drawing, Internal	44
2.16	Change of EPC 60 Components	45
3	Electrical Drawings S 805/815	49
3.1	Electrical System Layout S 805/815	50
3.2	Control and Starter Electrical Diagrams	51
3.2.1	Starter cable list	51
3.2.2	Separator Interconnection Diagram	54
3.2.3	Steam Regulating Valve (optional) Interconnection Diagram	57
3.2.4	Vibration Switch (optional) Interconnection Diagram	58
3.2.5	Electric Heater (optional) Interconnection Diagram	59
3.2.6	I/O (optional) Interconnection Diagram	60
3.2.7	Heat Tracing (optional) Interconnection Diagram	62
3.2.8	Emergency Shutdown Interconnection Diagram	63
3.2.9	Circuit Diagram	64
3.2.10	Steam Regulating Valve (optional) Circuit Diagram	72
3.2.11	Vibration Switch (optional) Circuit Diagram	73
3.2.12	Electric Heater (optional) Circuit Diagram	74
3.2.13	I/O (optional) Circuit Diagram	76
3.2.14	Heat Tracing (optional) Circuit Diagram	78
3.2.15	Emergency Shutdown Circuit Diagram	80
4	Electrical Drawings S 821– S 927	81
4.1	Electrical System Layout S 821–S 927	82
4.2	Control and Starter Electrical Diagrams	83
4.2.1	Starter cable list	83
4.2.2	Separator Interconnection Diagram	86
4.2.3	Steam Regulating Valve (optional) Interconnection Diagram	89

4.2.4	Speed Transmitter (optional) Interconnection Diagram	90
4.2.5	Vibration Transmitter (optional) Interconnection Diagram	91
4.2.6	Electric Heater (optional) Interconnection Diagram	92
4.2.7	I/O (optional) Interconnection Diagram	93
4.2.8	Heat Tracing (optional) Interconnection Diagram	95
4.2.9	Emergency Shutdown Interconnection Diagram	96
4.2.10	Circuit Diagram	97
4.2.11	Steam Regulating Valve (optional) Circuit Diagram	105
4.2.12	Speed Transmitter (optional) Circuit Diagram	106
4.2.13	Vibration Transmitter (optional) Circuit Diagram	107
4.2.14	Electric Heater (optional) Circuit Diagram	108
4.2.15	I/O (optional) Circuit Diagram	110
4.2.16	Heat Tracing (optional) Circuit Diagram	112
4.2.17	Emergency Shutdown Circuit Diagram	114

5 Electrical Drawings P 605/615 115

5.1	Electrical System Layout P 605/615	116
5.2	Control and Starter Electrical Diagrams	117
5.2.1	Starter cable list	117
5.2.2	Separator Interconnection Diagram	120
5.2.3	Steam Regulating Valve (optional) Interconnection Diagram	123
5.2.4	Vibration Switch (optional) Interconnection Diagram	124
5.2.5	Electric Heater (optional) Interconnection Diagram	125
5.2.6	I/O (optional) Interconnection Diagram	126
5.2.7	Heat Tracing (optional) Interconnection Diagram	128
5.2.8	Emergency Shutdown Interconnection Diagram	129
5.2.9	Circuit Diagram	130
5.2.10	Steam Regulating Valve (optional) Circuit Diagram	138
5.2.11	Vibration Switch (optional) Circuit Diagram	139
5.2.12	Electric Heater (optional) Circuit Diagram	140
5.2.13	I/O (optional) Circuit Diagram	142
5.2.14	Heat Tracing (optional) Circuit Diagram	144
5.2.15	Emergency Shutdown Circuit Diagram	146

6 Electrical Drawings P 625/626 147

6.1	Electrical System Layout P 625/626	148
6.2	Control and Starter Electrical Diagrams	149
6.2.1	Starter cable list	149
6.2.2	Separator Interconnection Diagram	152
6.2.3	Steam Regulating Valve (optional) Interconnection Diagram	155
6.2.4	Speed Transmitter (optional) Interconnection Diagram	156
6.2.5	Vibration Transmitter (optional) Interconnection Diagram	157
6.2.6	Electric Heater (optional) Interconnection Diagram	158
6.2.7	I/O (optional) Interconnection Diagram	159
6.2.8	Heat Tracing (optional) Interconnection Diagram	161
6.2.9	Emergency Shutdown Interconnection Diagram	162

6.2.10	Circuit Diagram	163
6.2.11	Steam Regulating Valve (optional) Circuit Diagram	171
6.2.12	Speed Transmitter (optional) Circuit Diagram	172
6.2.13	Vibration Transmitter (optional) Circuit Diagram	173
6.2.14	Electric Heater (optional) Circuit Diagram	174
6.2.15	I/O (optional) Circuit Diagram	176
6.2.16	Heat Tracing (optional) Circuit Diagram	178
6.2.17	Emergency Shutdown Circuit Diagram	180
7	Specifications	181
7.1	Cables	182
7.2	Cable Routing	183
7.3	Oil, Water, Steam, and Condensate Piping	184
7.4	Ambient Temperature Limitation	184
7.5	Heat Tracing and Insulation of Fuel Oil, Sludge, and Steam Pipes	185
7.6	More than one Oil Tank	185
7.7	Sludge Removal Kit (Optional Equipment)	186
7.8	Sludge Tank	188
7.9	Sludge Piping	190
8	Commissioning and Initial Start	191
8.1	Completion Check List	191
8.2	Initial Start-up	192
8.2.1	Calculating Operating Pressure	195
9	Shut-down and Storage	197
9.1	Shut-down after Use	197
9.2	Protection and Storage	198
9.3	Reassembly and Start up	200

1 Technical Data

1.1 Demand Specifications Water

Alfa Laval ref. 574487 Rev. 1

Poor quality of the operating water may with time cause erosion, corrosion and/or operating problems. The water shall be treated to meet certain demands.

The following requirements are important:

1. Turbidity-free water, solids content <0,001% by volume.
Max. particle size 50 µm.
Deposits shall not be allowed to form in certain areas in the system.
2. Total hardness less than 180 mg CaCO₃ per litre, which corresponds to 10 °dH or 12,5 °E.
Hard water may with time form deposits in the operating mechanism. The precipitation rate is accelerated with increased operating temperature and low discharge frequency. These effects become more severe the harder the water is.
3. Chloride content max. 100 ppm NaCl (equivalent to 60 mg Cl/l). Chloride ions contribute to corrosion on surfaces in contact with the operating water. Corrosion is a process that is accelerated by increased separating temperature, low pH, and high chloride ion concentration.
4. 6,5 < pH < 9
Bicarbonate content (HCO₃) min. 70mg HCO₃ per litre, which corresponds to 3,2 °dKH.
5. Pressure 200 – 800 kPa (2 – 8 bar).

NOTE

Alfa Laval accepts no liability for consequences arising from unsatisfactorily purified operating water supplied by the customer.

1.2 Demand Specifications Air

Specific requirements regarding the quality of air

1. Pressure 500 – 800 kPa (5 – 8 bar).
2. Free from oil, and solid particles larger than 0.01 mm.
3. Dry, with dew point min. 10 °C below ambient temperature.

NOTE

Electrical interconnections must be made by qualified electricians.

Mechanical interconnections must be made by qualified mechanical technicians.

1.3 System Data

Application

Cleaning of fuel and lubricating oils	
Min. density	820 kg/m ³ at 15°C
Max. density	1010 Kg/m ³ at 15°C in ALCAP mode 991 kg/m ³ at 15°C in Purifier mode
Max. viscosity. S 805 – S 927	55 cSt at 100°C (700 cSt at 50°C)
Max. viscosity. P 605 – P 626	50 cSt at 100°C (600 cSt at 50°C)
Feed temperature	5°C to 100°C
Ambient temperature	5°C to 55°C
Feed capacity	In accordance with the separator size capacity table

Media inlet/outlet data at separator connections

Pressure	
Oil inlet	Max. 2 bar at separator inlet
Oil outlet	Max. 2.5 bar
Sludge outlet from separator	without pressure
Sludge outlet from sludge pump	Max. 5 bar at 6 bar air pressure
Separated water	Max. 4 bar (if not diverted into sludge outlet)
Temperature	According to capacity table, depending on oil viscosity ±2 °C Max. 100 °C

Sludge Removal kits (optional)

The systems can be equipped with their own sludge tank for collecting the sludge discharge from the separator.

Sludge Removal Kit tank volumes:

P 605, P 615, S 805, S 815 – 23 Litres

P 625, P 626, S 821, S 826, S 921, S 926, S 927 – 11.5 Litres.

Auxiliary systems	
Operating water	
- Operating water flow P 605, P 615	SV 10: 8.0 l/m SV 15: 18 l/m SV 16: 0.9 l/m
- Operating water flow S 805, S 815	SV 10: 1.3 l/m SV 15: 18 l/m SV 16: 0.9 l/m
- Operating water flow P 625, P 626	SV 10: 15 l/m SV 15: 11 l/m SV 16: 2.8 l/m
- Operating water flow S 821, S 826, S 921, S 926, S 927	SV 10: 0.9 l/m SV 15: 11.0 l/m SV 16: 2.8 l/m For further details see " 1.1 Demand Specifications Water on page 7 ".
Quality	
Pressure	2 – 8 bar
Temperature	5 °C – 55 °C (unheated water)
Air	
Quality	Instrument air
Pressure	5 – 8 bar (an optional pressure reducer is available for above 8 bar)
Consumption	
Air operated valves	10 N l/h
Sludge pump (pneumatic)	1000 N l/h at max. 1l/s For further details see " 1.2 Demand Specifications Air on page 8 ".
Mechanical design part:	
Oil and heating media piping	
Design pressure	Max. 6 bar (for steam / condensate Max. 9 bar)
Test pressure	Max. 9 bar (for steam/condensate Max. 14 bar)
Design temperature	5 °C – 180 °C
Flange connections	PN 16 DIN 2573/2633
Pipe data	Material ; ASTM A 106 gr. B seamless schedule 40 thickness. Sizes ; from ½" upto 4"
Auxiliary media - Operating water	
Design pressure	Max. 6 bar
Design temp.	5 °C – 55 °C

Auxiliary systems	
Auxiliary media - Air	
Design pressure	Max 10 bar
Material	Nitrile rubber-steel braided hose or PTFE pipes where possible.
Drip tray volume	Max. 17 litres
Drip tray Material	Steel sheet laser cut and welded parts
Drip tray Drain connection size	2 x 1" G (internally threaded)
Frame Baseplate Material	Steel sheet laser cut and welded parts
Electrical design	
Mains supply	
Voltage	3x 230 /400V/ 440V / 480V / 575V / 690V ± 10 %
Frequency	50 / 60 Hz
Separator el.motor	In accordance with the separator size selected and related data sheet
Separator el motor power range	From 2.2 kW up to 6.4 kW
Feed Pump el. Motor	In accordance with the pump size selected and related data sheet
Feed Pump el motor power range	from 0.25 kW up to 4 kW
EPC	
Voltage	24 V DC (internal)
Control voltage, operating supply	24 V AC (from internal transformer)
Frequency	50 or 60 Hz ± 5 %
Control cabinet	
Enclosure class	IP 55
Material	Steel sheet
Ambient temp.	Max 55 °C

Planned Maintenance Kits (not including wear items) P 605, P 615, S 805, S 815			
Hours	Period	Separator	Ancillary Equipment
2000	3 months	Inspection	
8000	12 months	Major	
16000	2 years	Major	
24000	3 years	Major	
As necessary			Repair (components)
With delivery		Commissioning Tools	

Planned Maintenance Kits (not including wear items) P 625, P 626, S 821, S 826, S 921, S 926, S 927								
Hours	Period	Separ- tor	Module	Sludge pump	Feed pump	Control cabinet	EI. heater	CBM
4000	6 months	Inspec- tion						
12000	18 months	Overhaul		Overhaul				
24000	3 years	Overhaul	Overhaul	Overhaul	Overhaul			
As necessary		CIP	Repair (compon- ents)				Repair	CIP
With delivery		Inspec- tion Tools						
Backup		Support				Support		

NOTE


The lifespan of wear items, such as friction blocks and main seal ring, depends on the number of startups, as well as plant and feed conditions. Check wear items regularly and change when necessary.

2 Mechanical Drawings

2.1 Flow charts


2.1.1 S 821 - S 927 Separator, Basic and Optional Components

Alfa Laval ref. 584767 Rev. 3

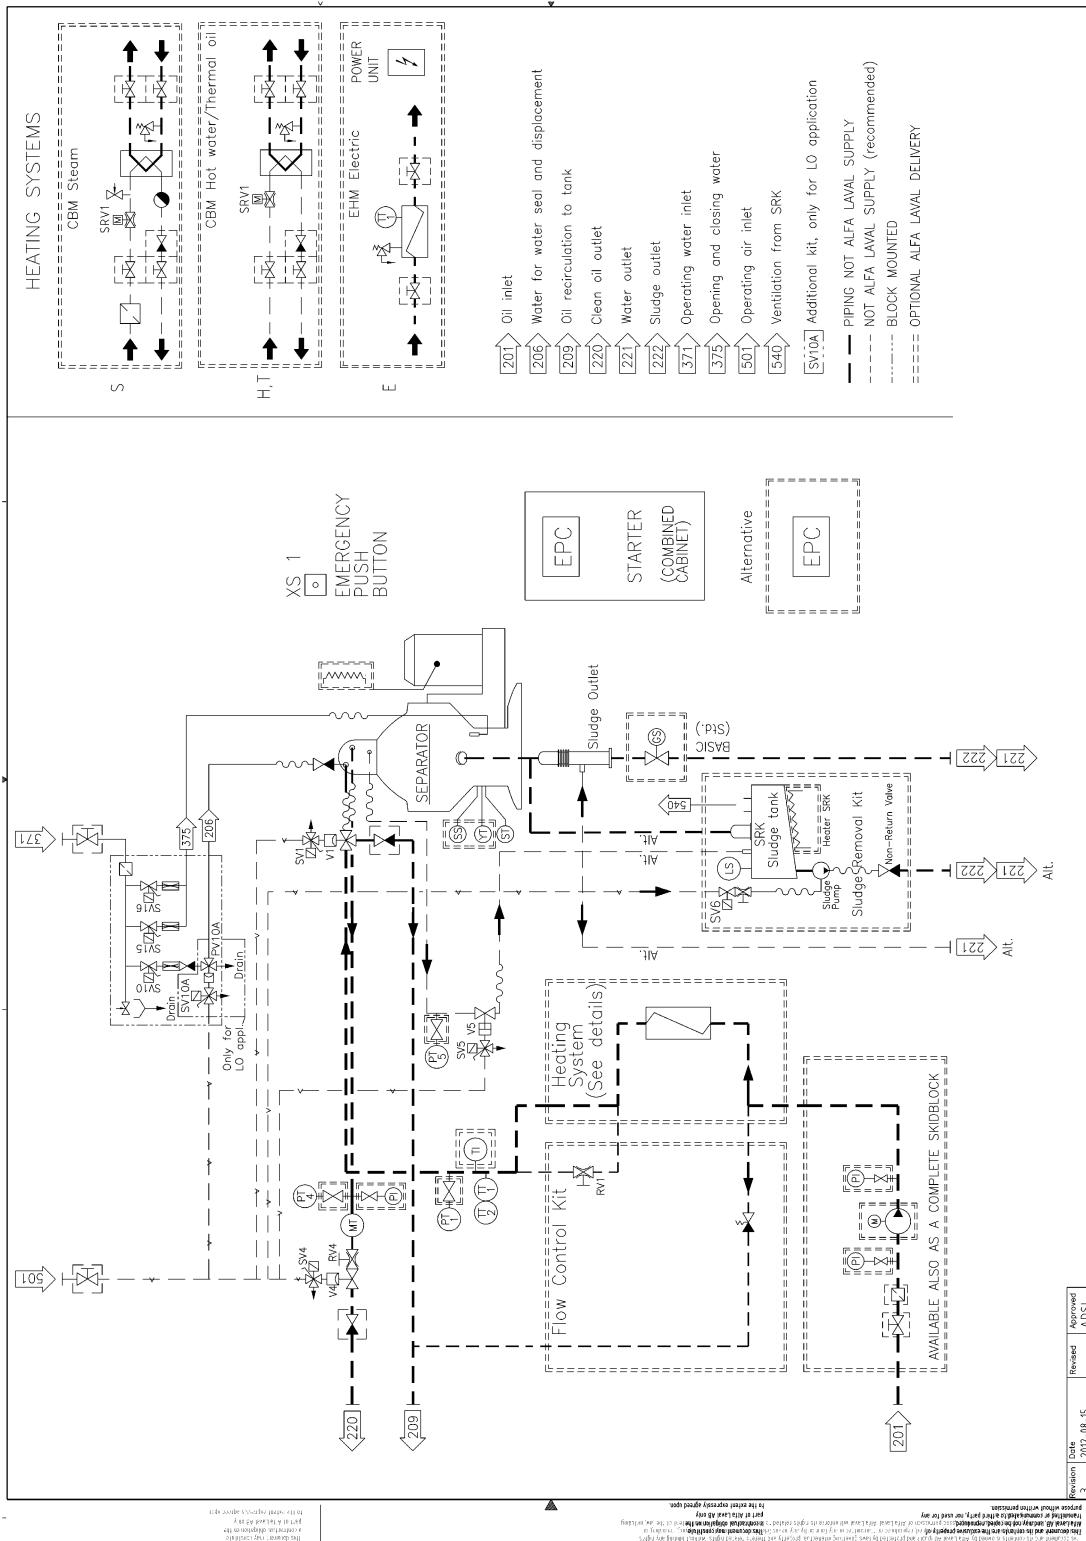


2.1.2 P 605/615, P 625/626 Separator Basic and Optional Components

Alfa Laval ref. 584768 Rev. 5

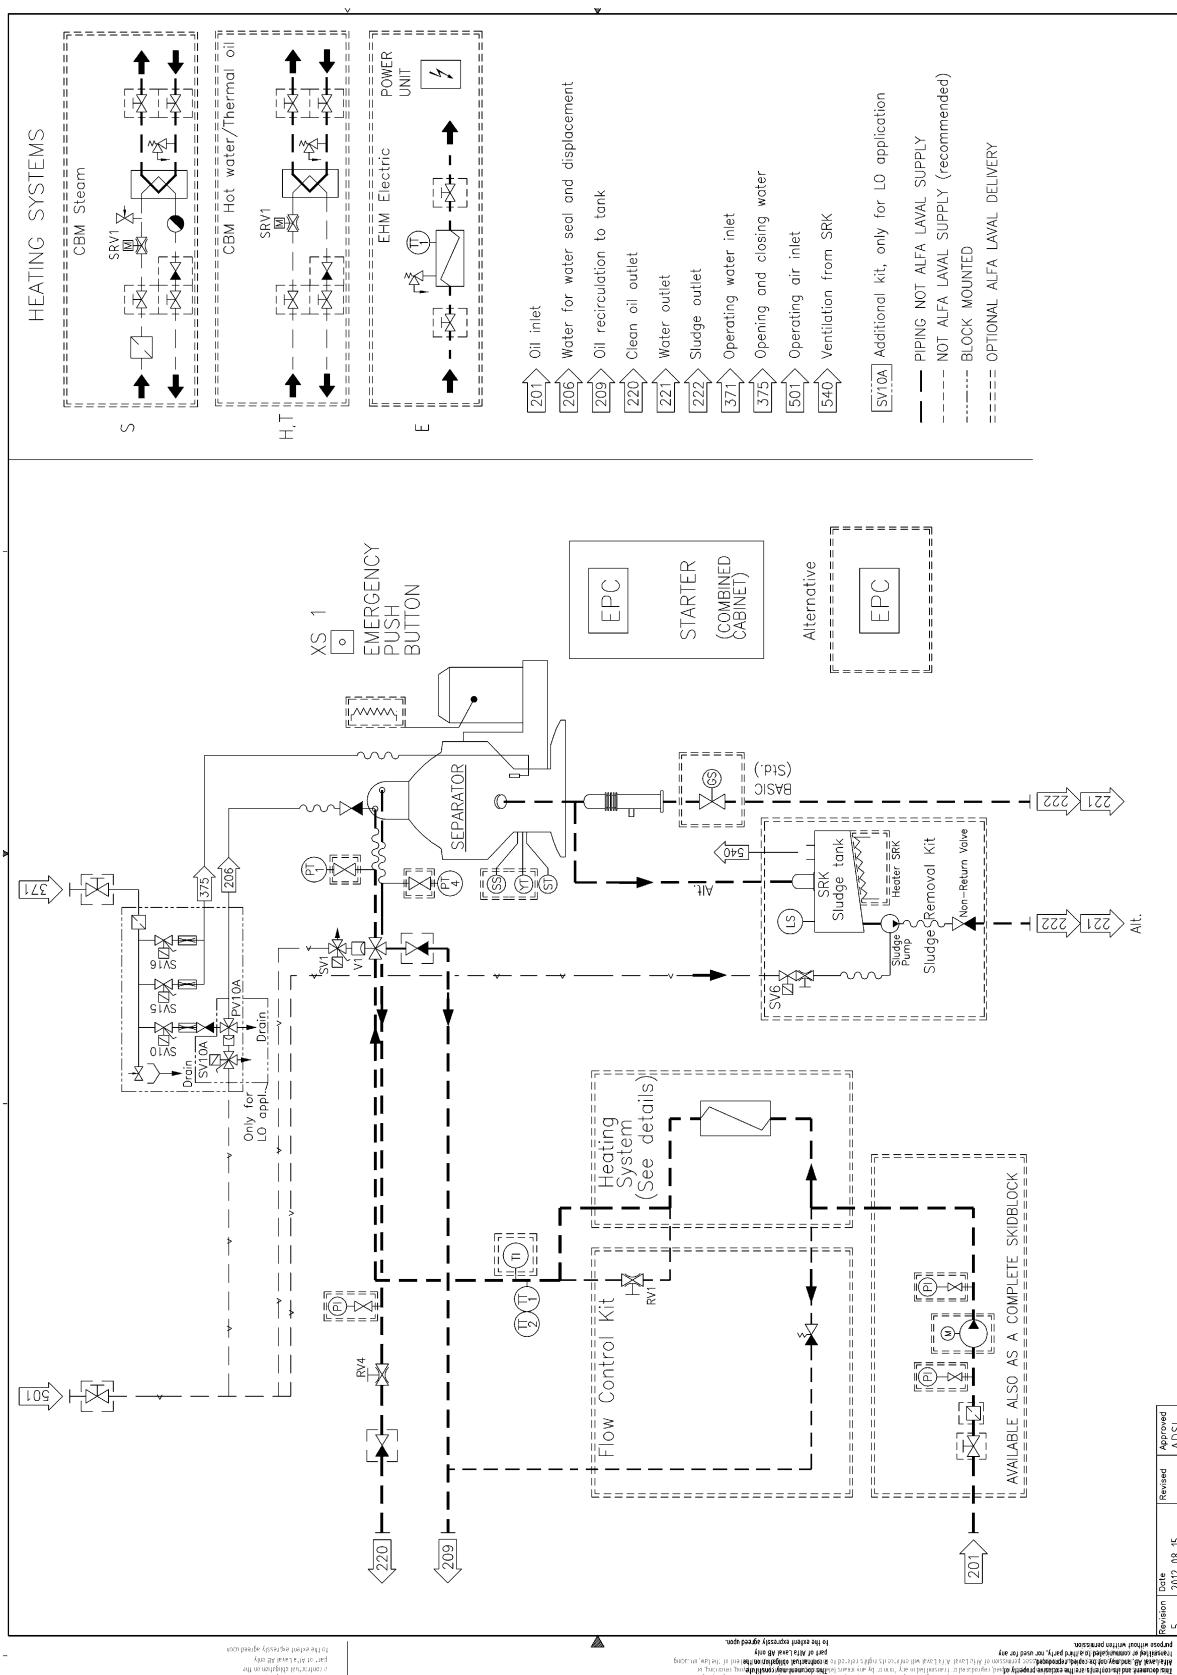

2.1.3 S 805/815 Separator Basic and Optional Components


Alfa Laval ref. 588919 Rev. 3

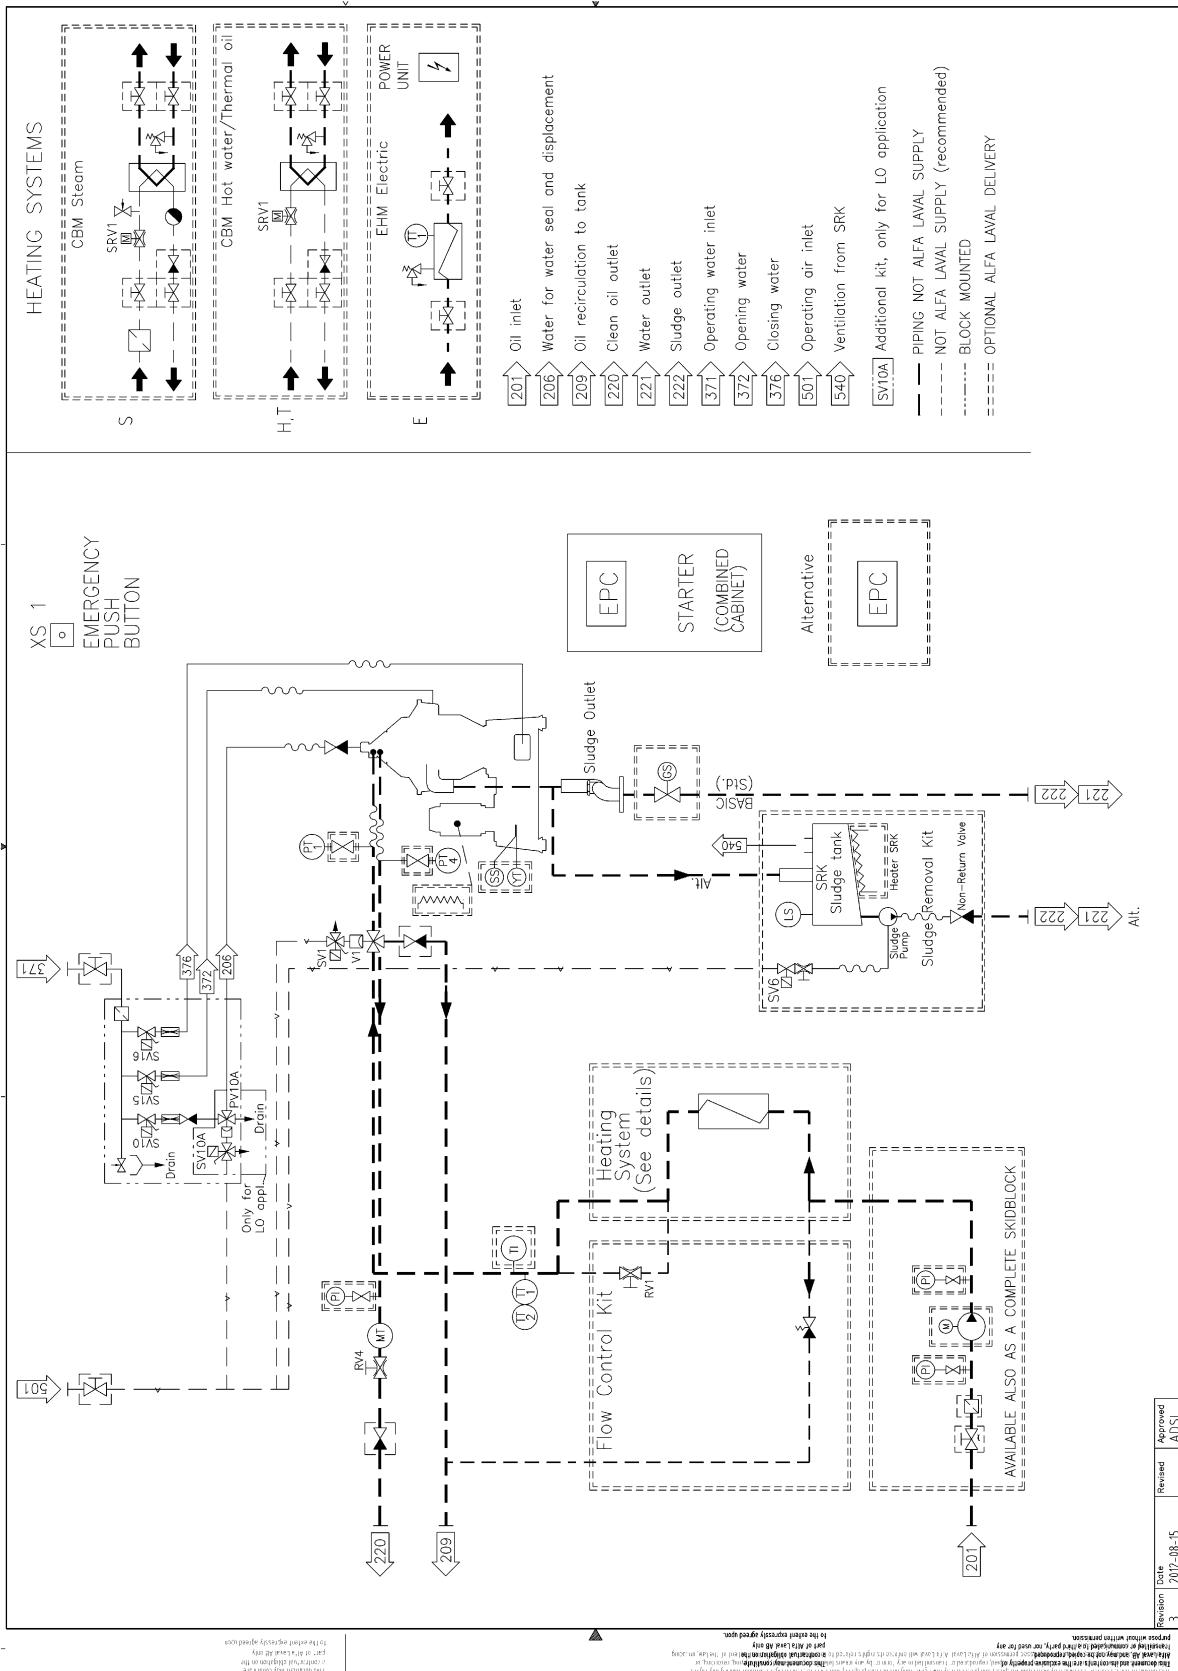

2.2 Mounting Drawings


2.2.1 S 821 - S 927 Separator, DIN Mounting Drawing

Alfa Laval ref. 584354 Rev. 7

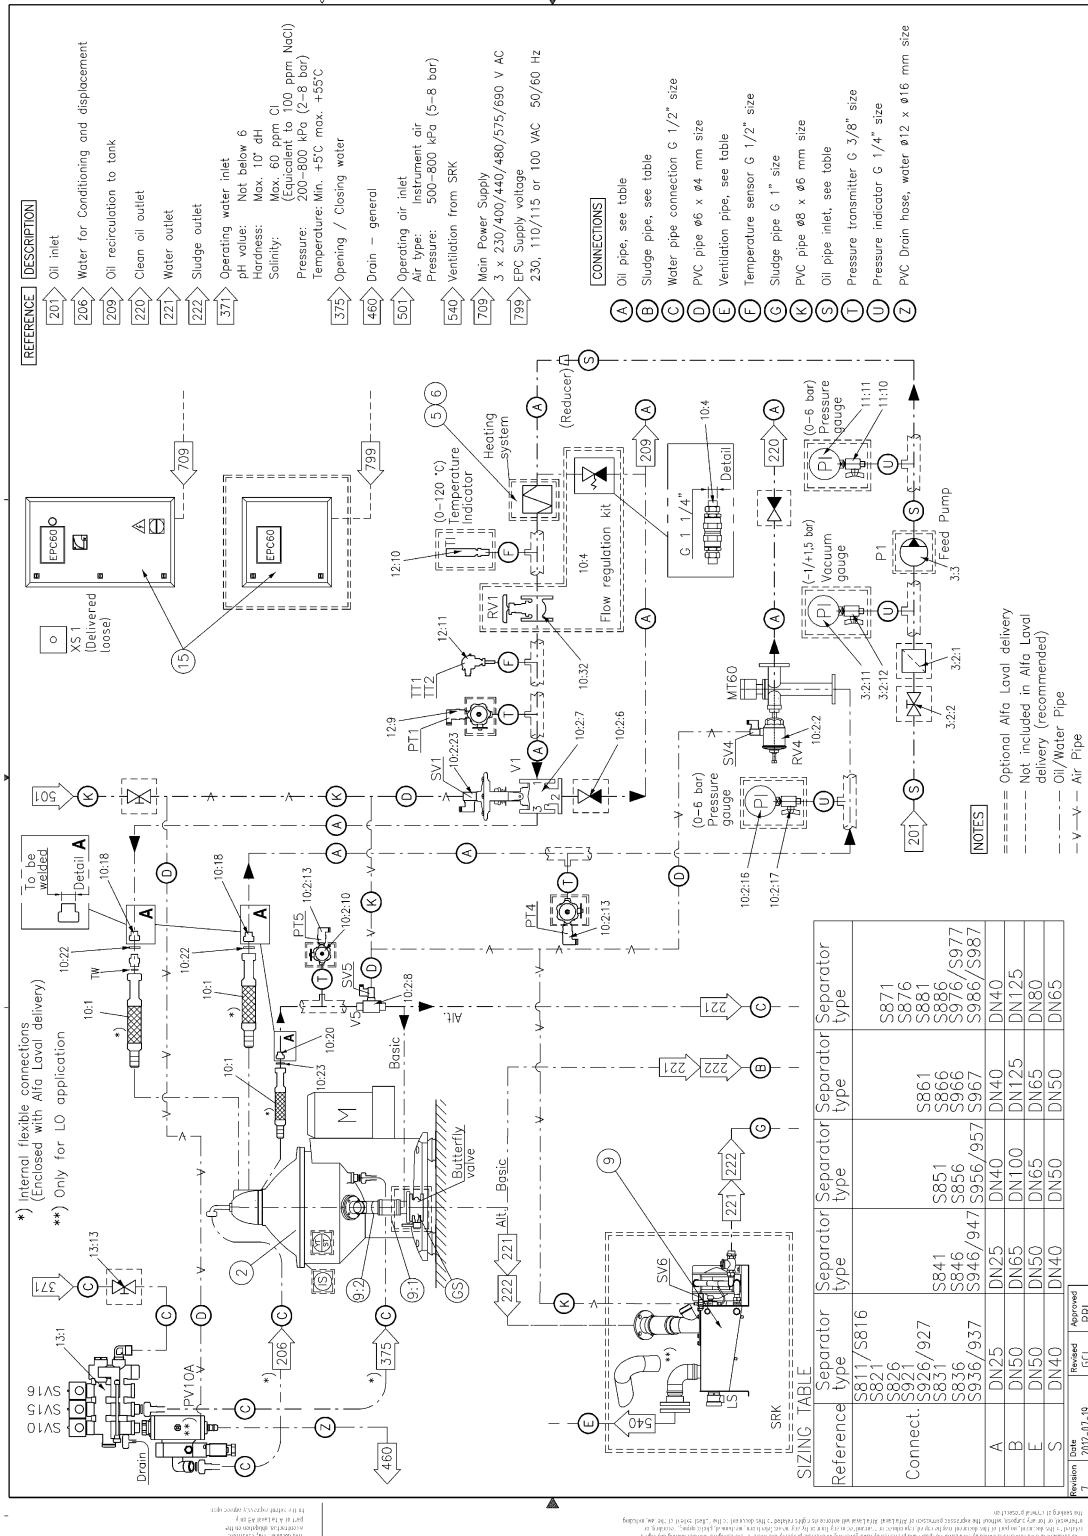


2.2.2 S 821 - S 927 Separator JIS Mounting Drawing

Alfa Laval ref. 584355 Rev. 8

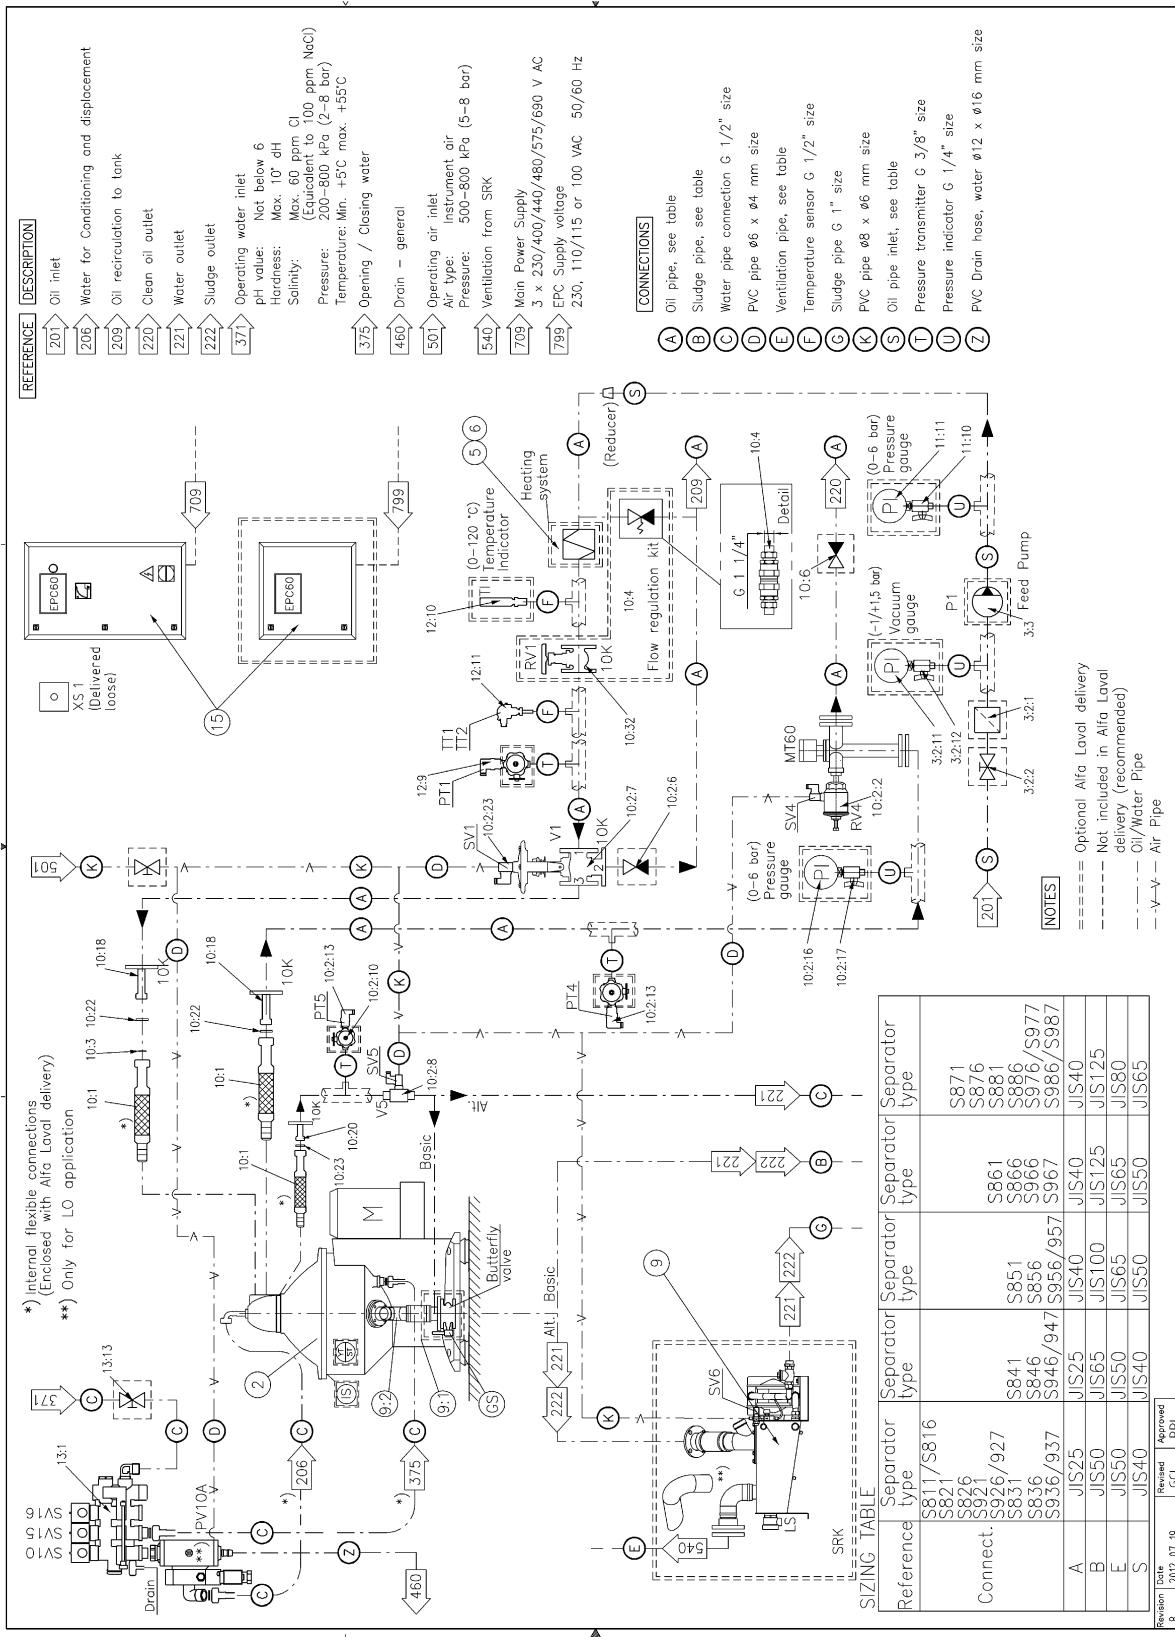


2.2.3 P 605, P 615, P 625/626 Separator, DIN Mounting Drawing

Alfa Laval ref. 584356 Rev. 8

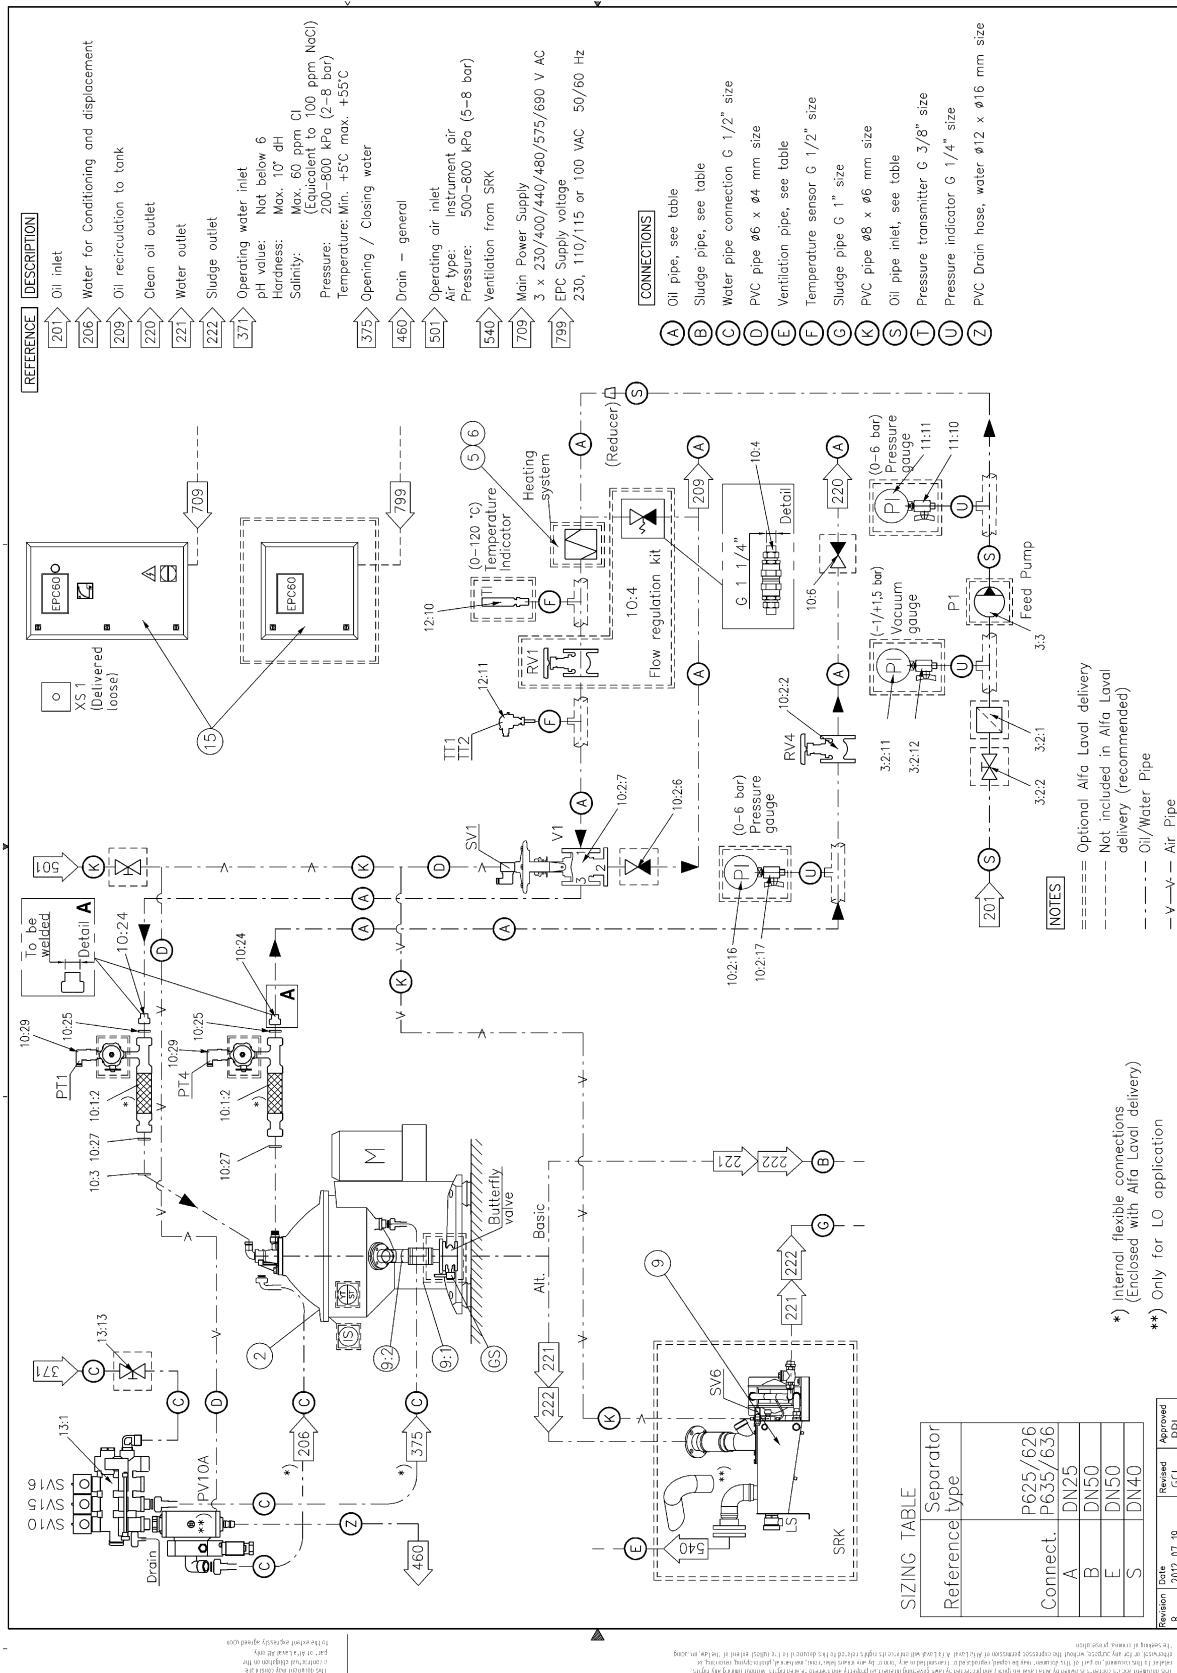


2.2.4 P 605, P 615, P 625/626 Separator, JIS Mounting Drawing

Alfa Laval ref. 584357 Rev. 7

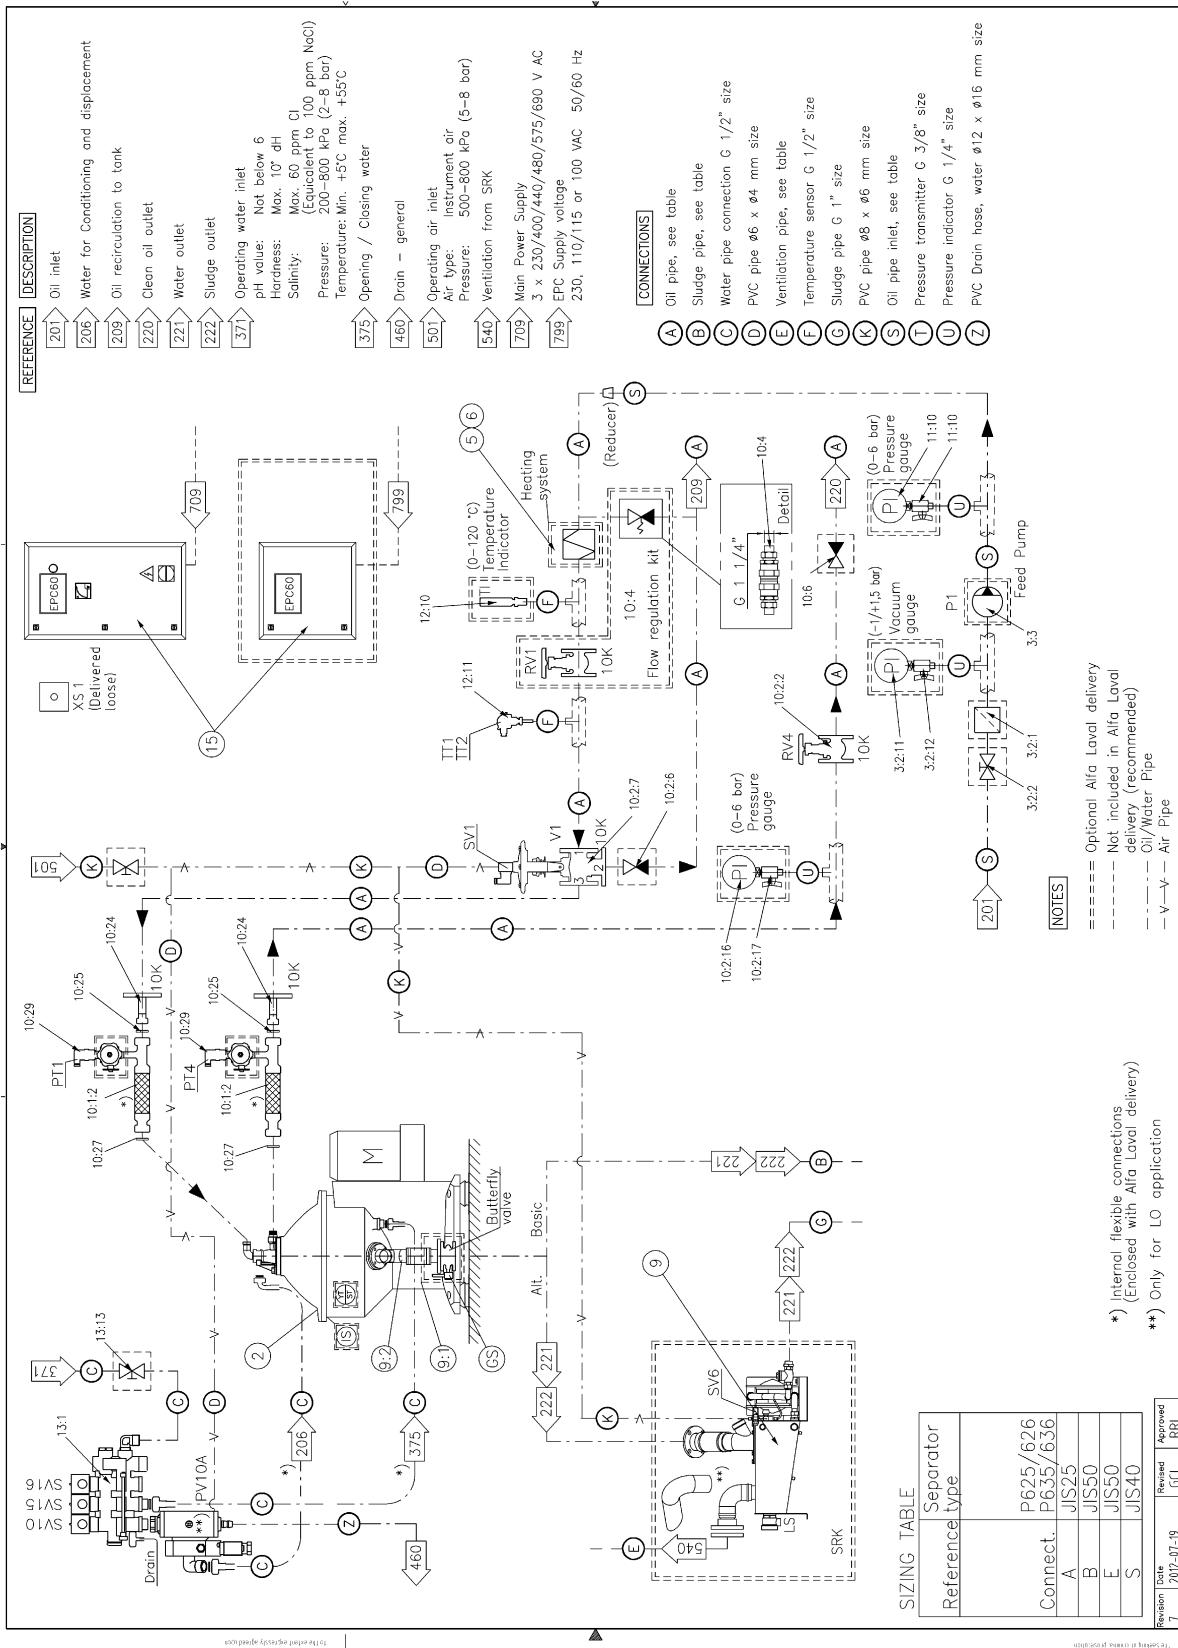


2.2.5 S 805, S 815 Separator DIN Mounting Drawing

Alfa Laval ref. 588920 Rev. 4

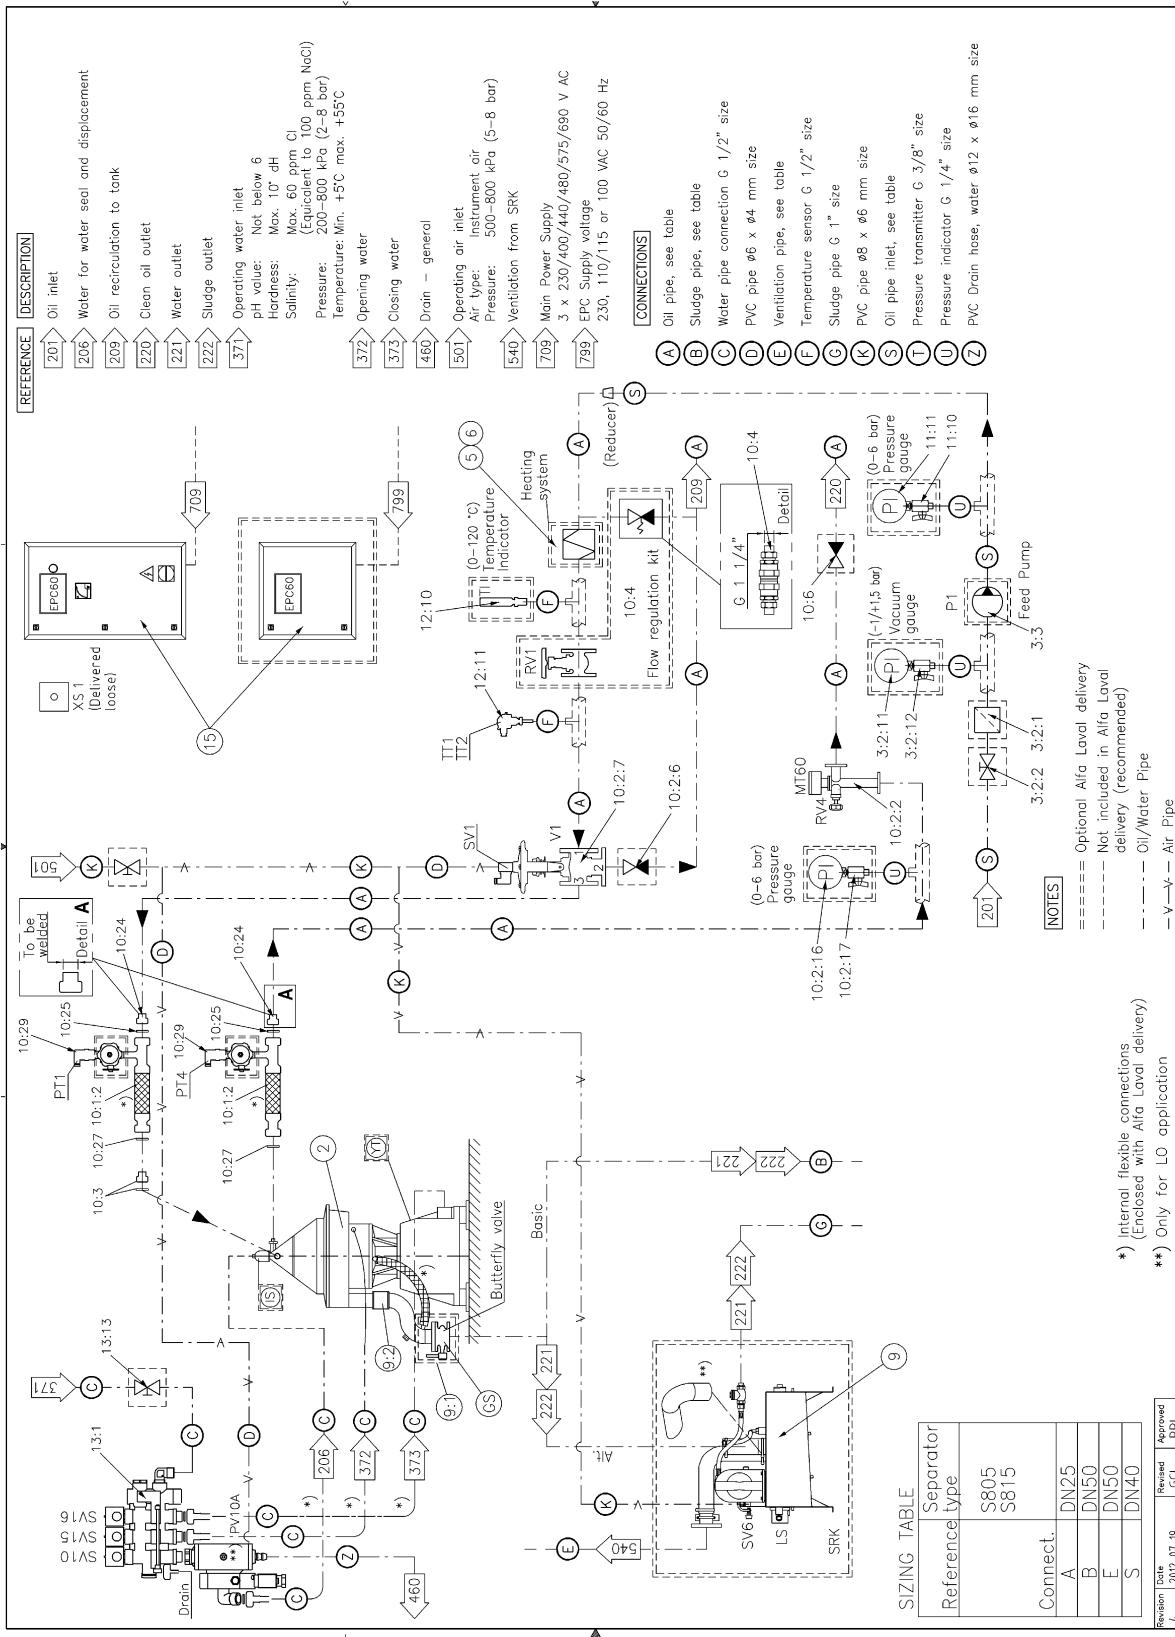

2.2.6 S 805, S 815 Separator JIS Mounting Drawing


Alfa Laval ref. 588921 Rev. 3

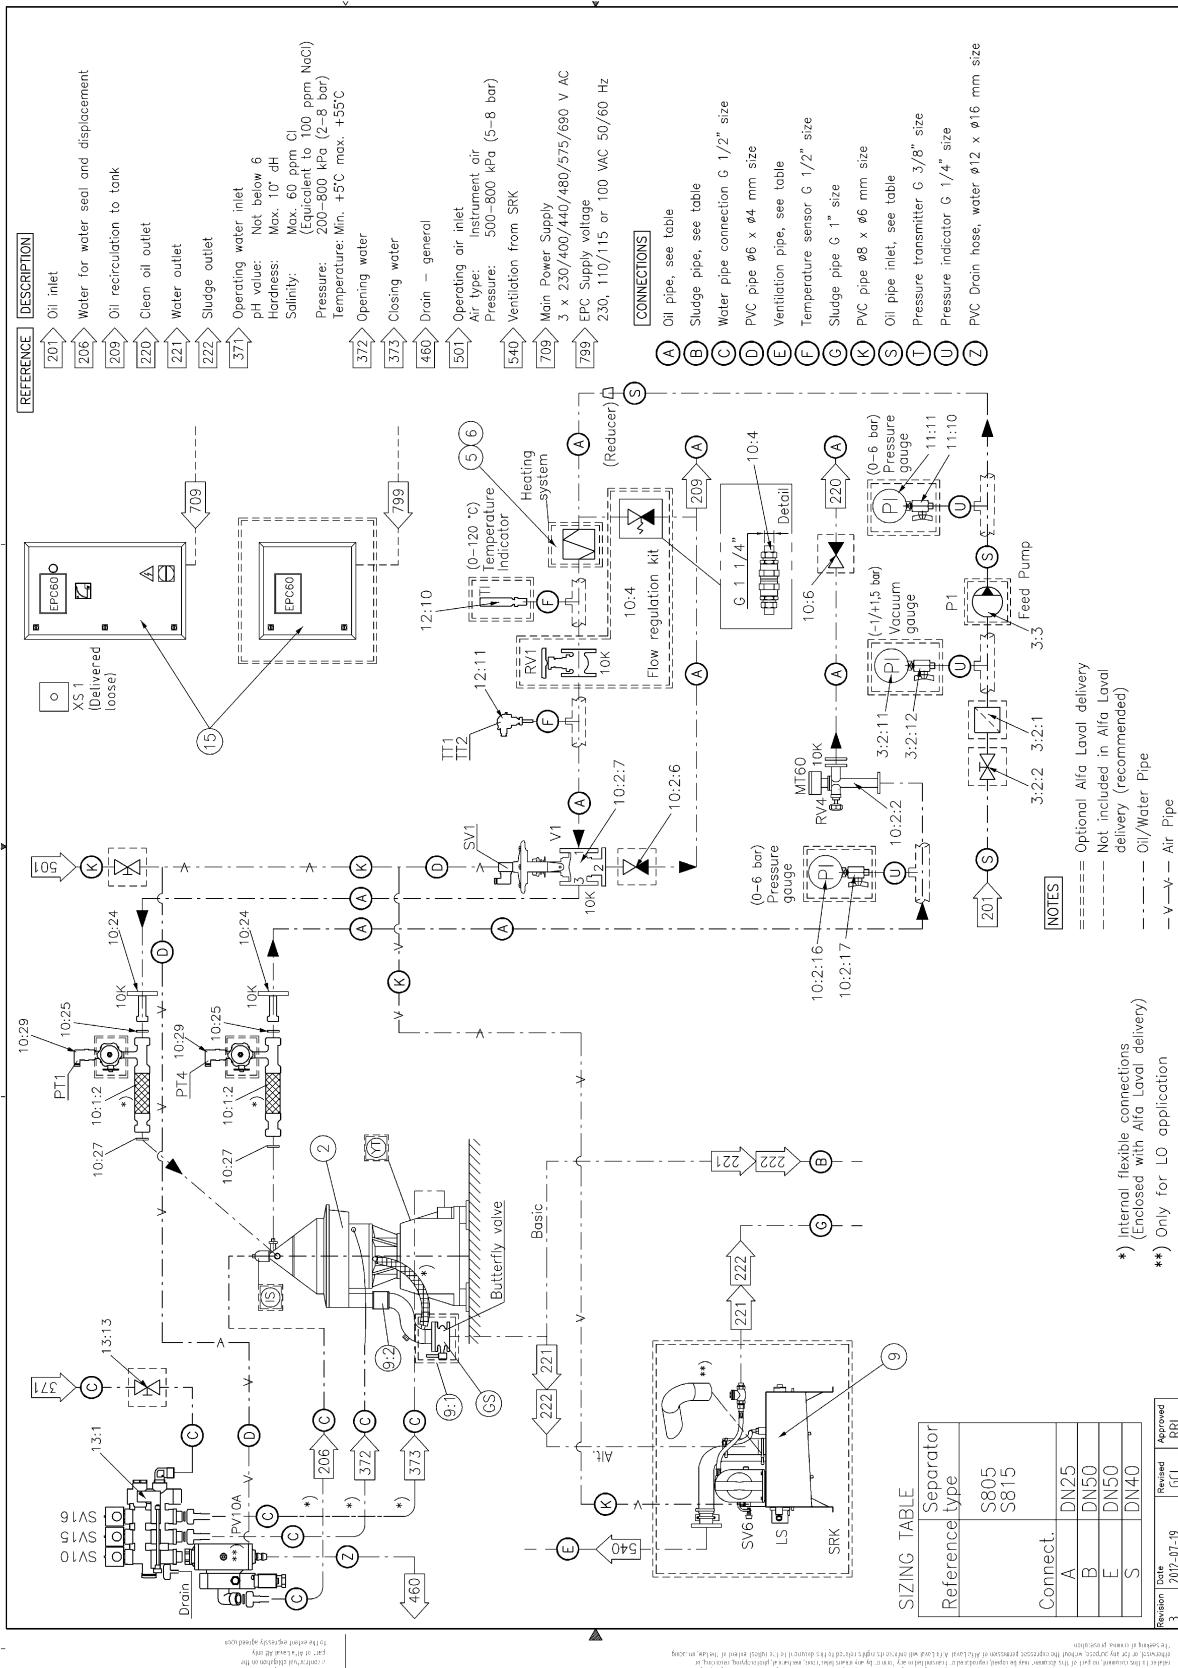

2.3 Installation Drawings


2.3.1 S 805/815 Separator Installation Drawing

Alfa Laval ref. 588922 Rev. 1

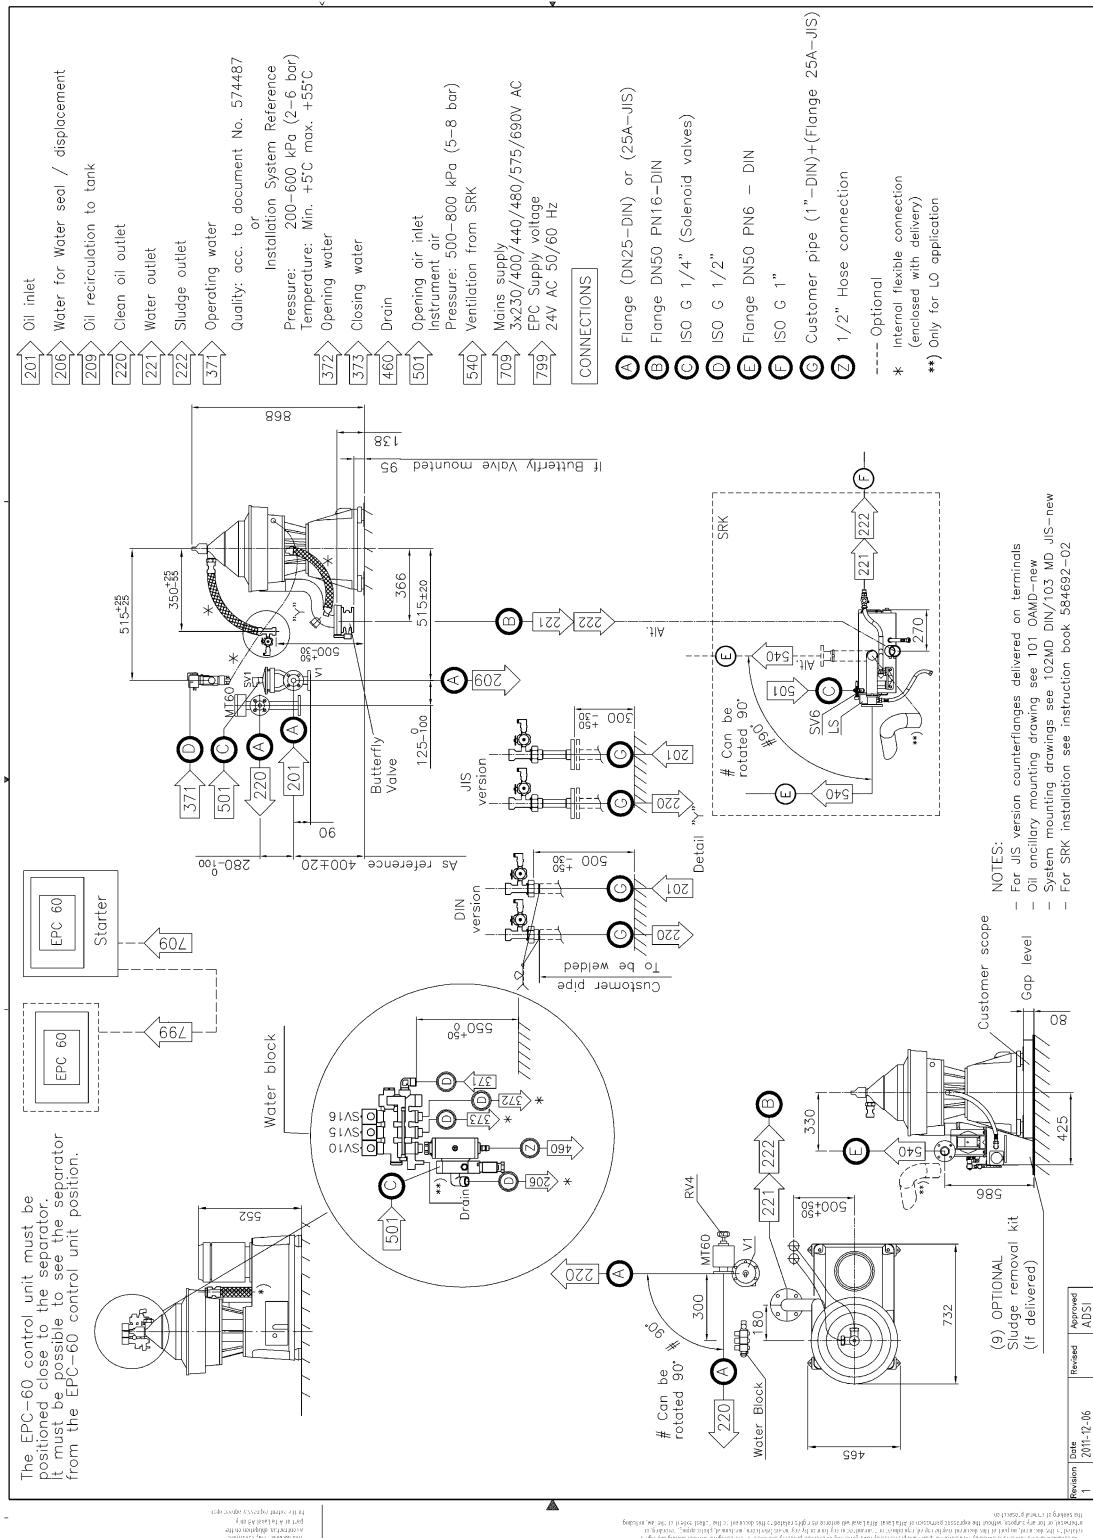


2.3.2 S 821 - S 927 Separator Installation Drawing

Alfa Laval ref. 585169 Rev. 5

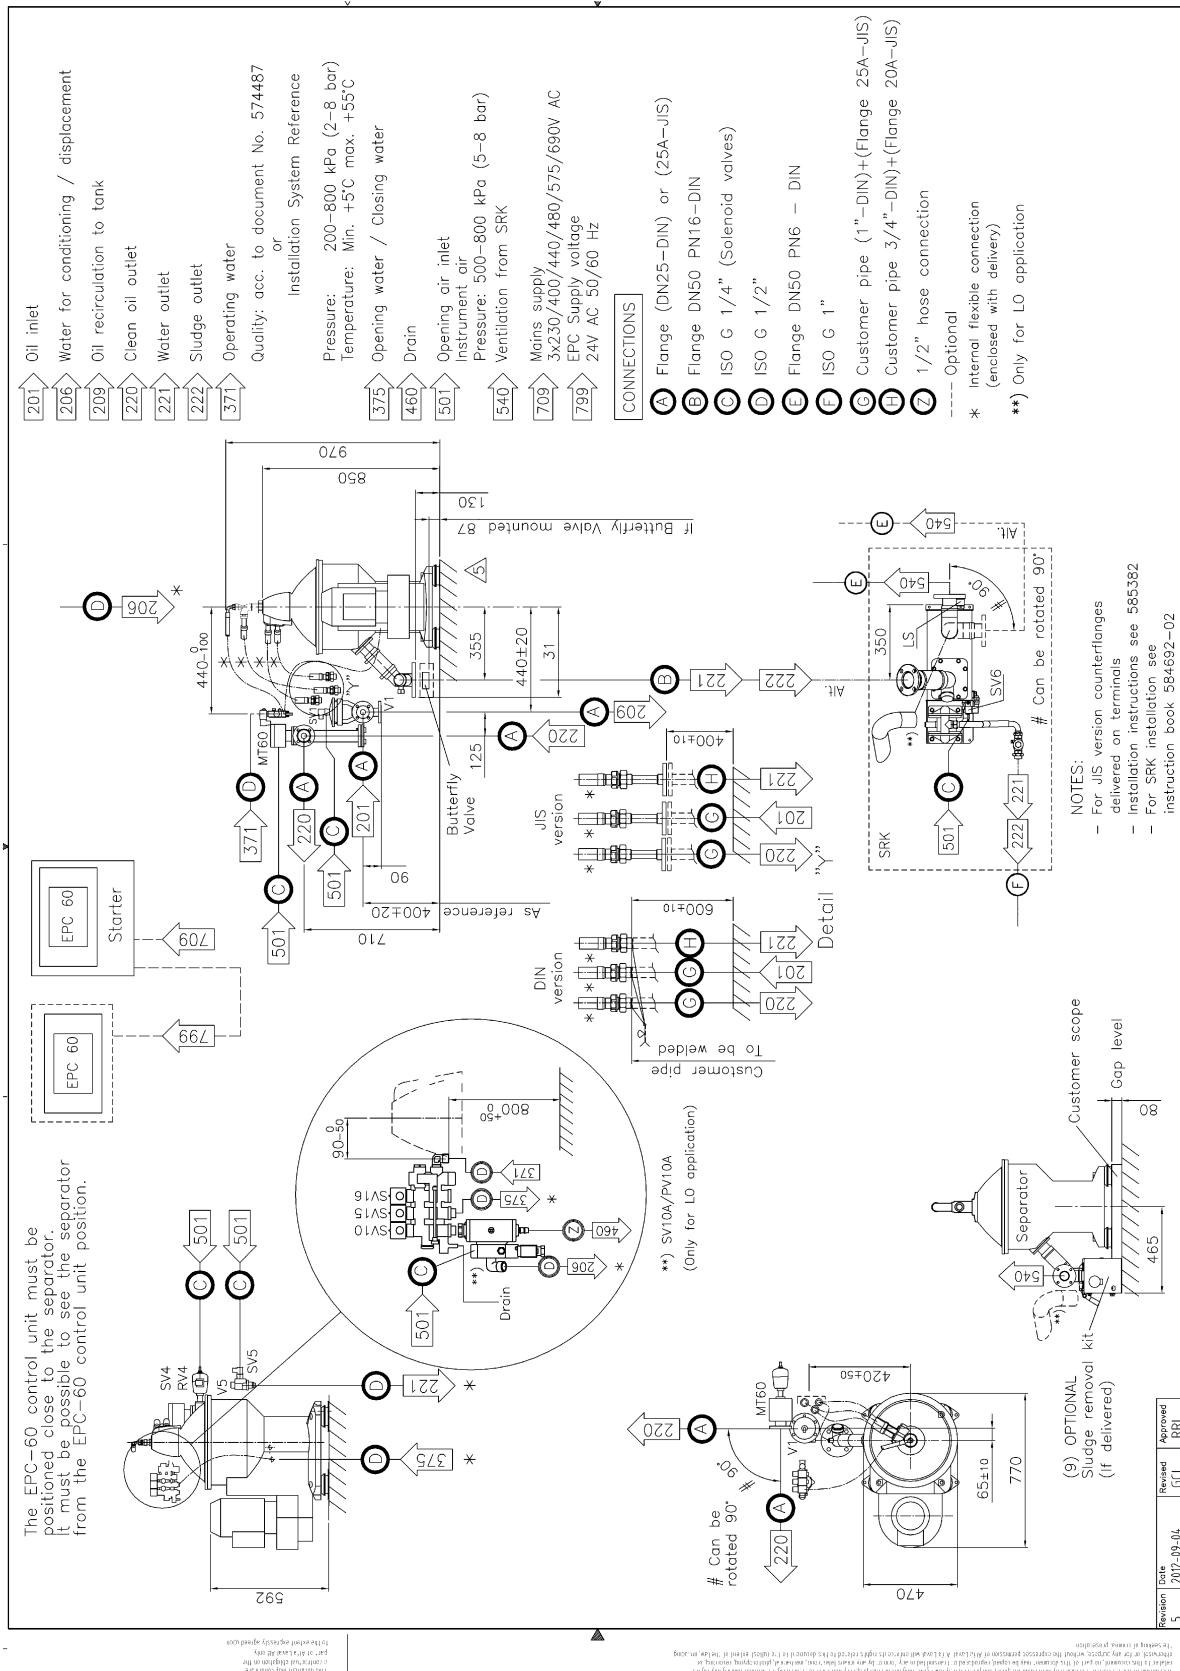


2.3.3 P 605/P 615 Separator Installation Drawing

Alfa Laval ref. 585165 Rev. 3

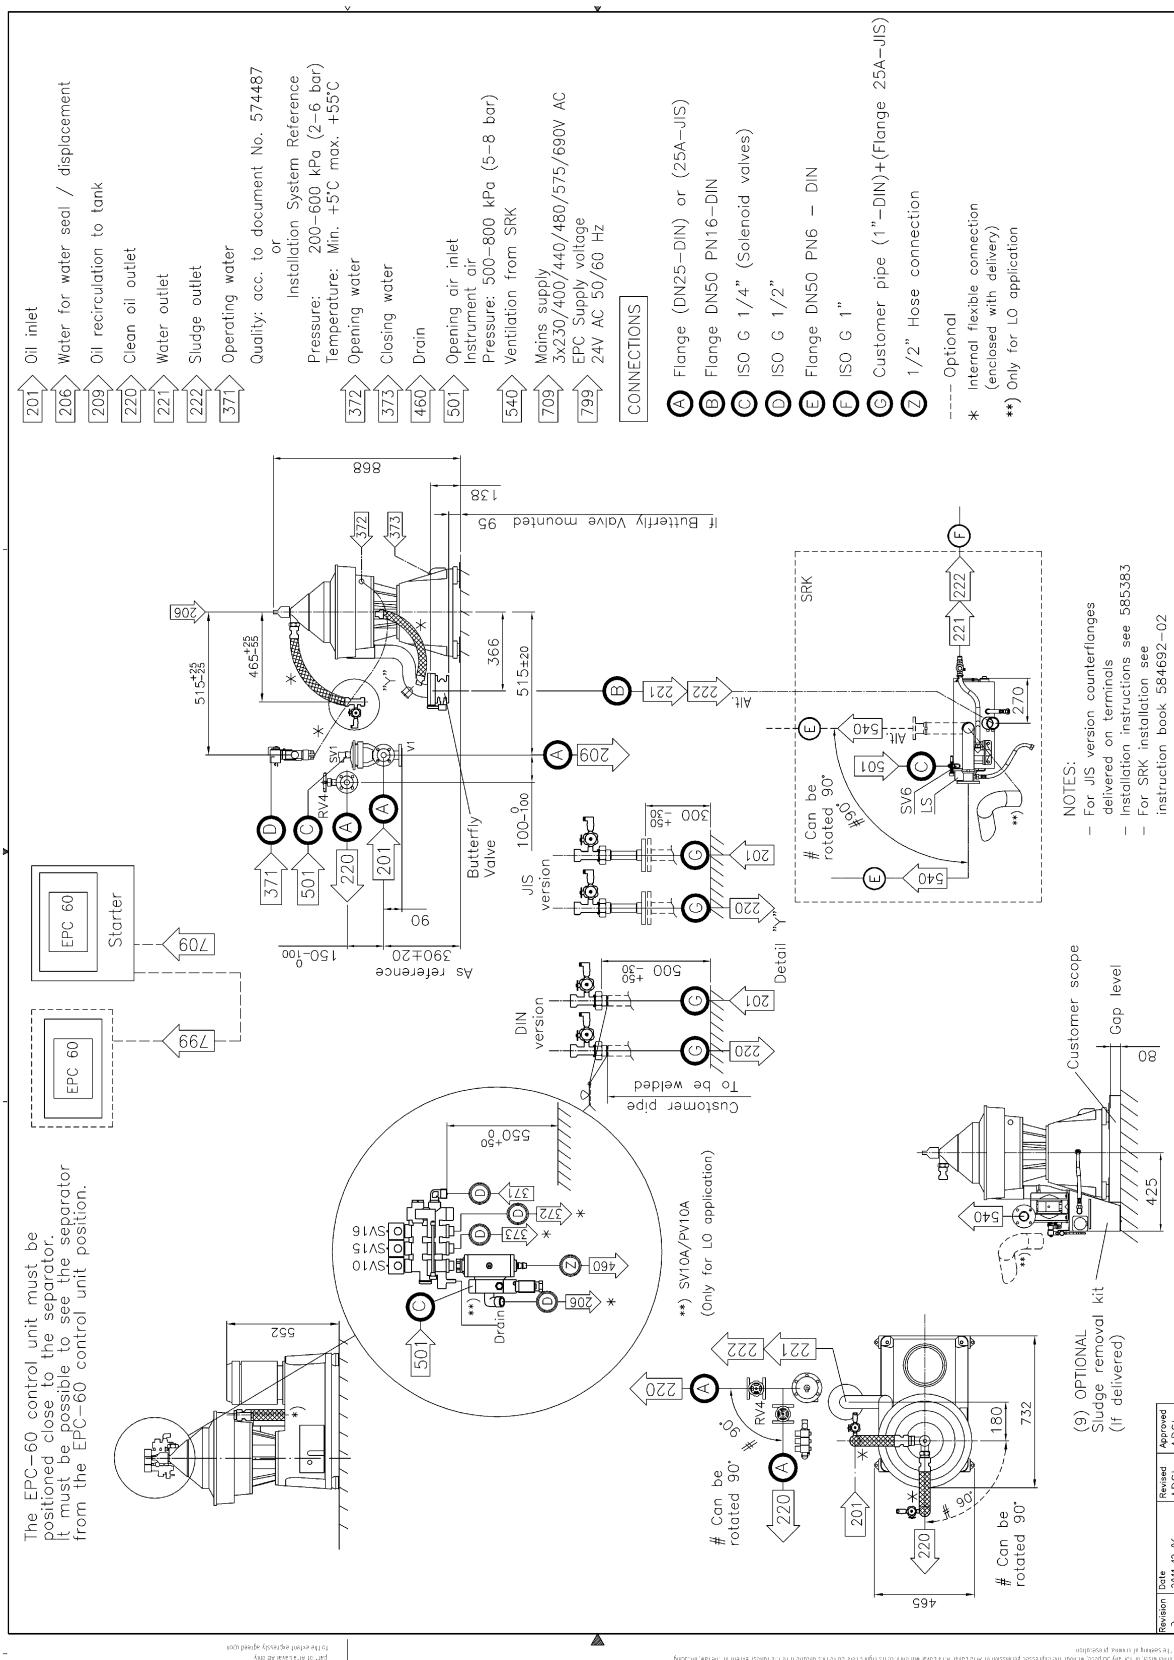

2.3.4 P 625/626 Separator Installation Drawing


Alfa Laval ref. 585166 Rev. 5

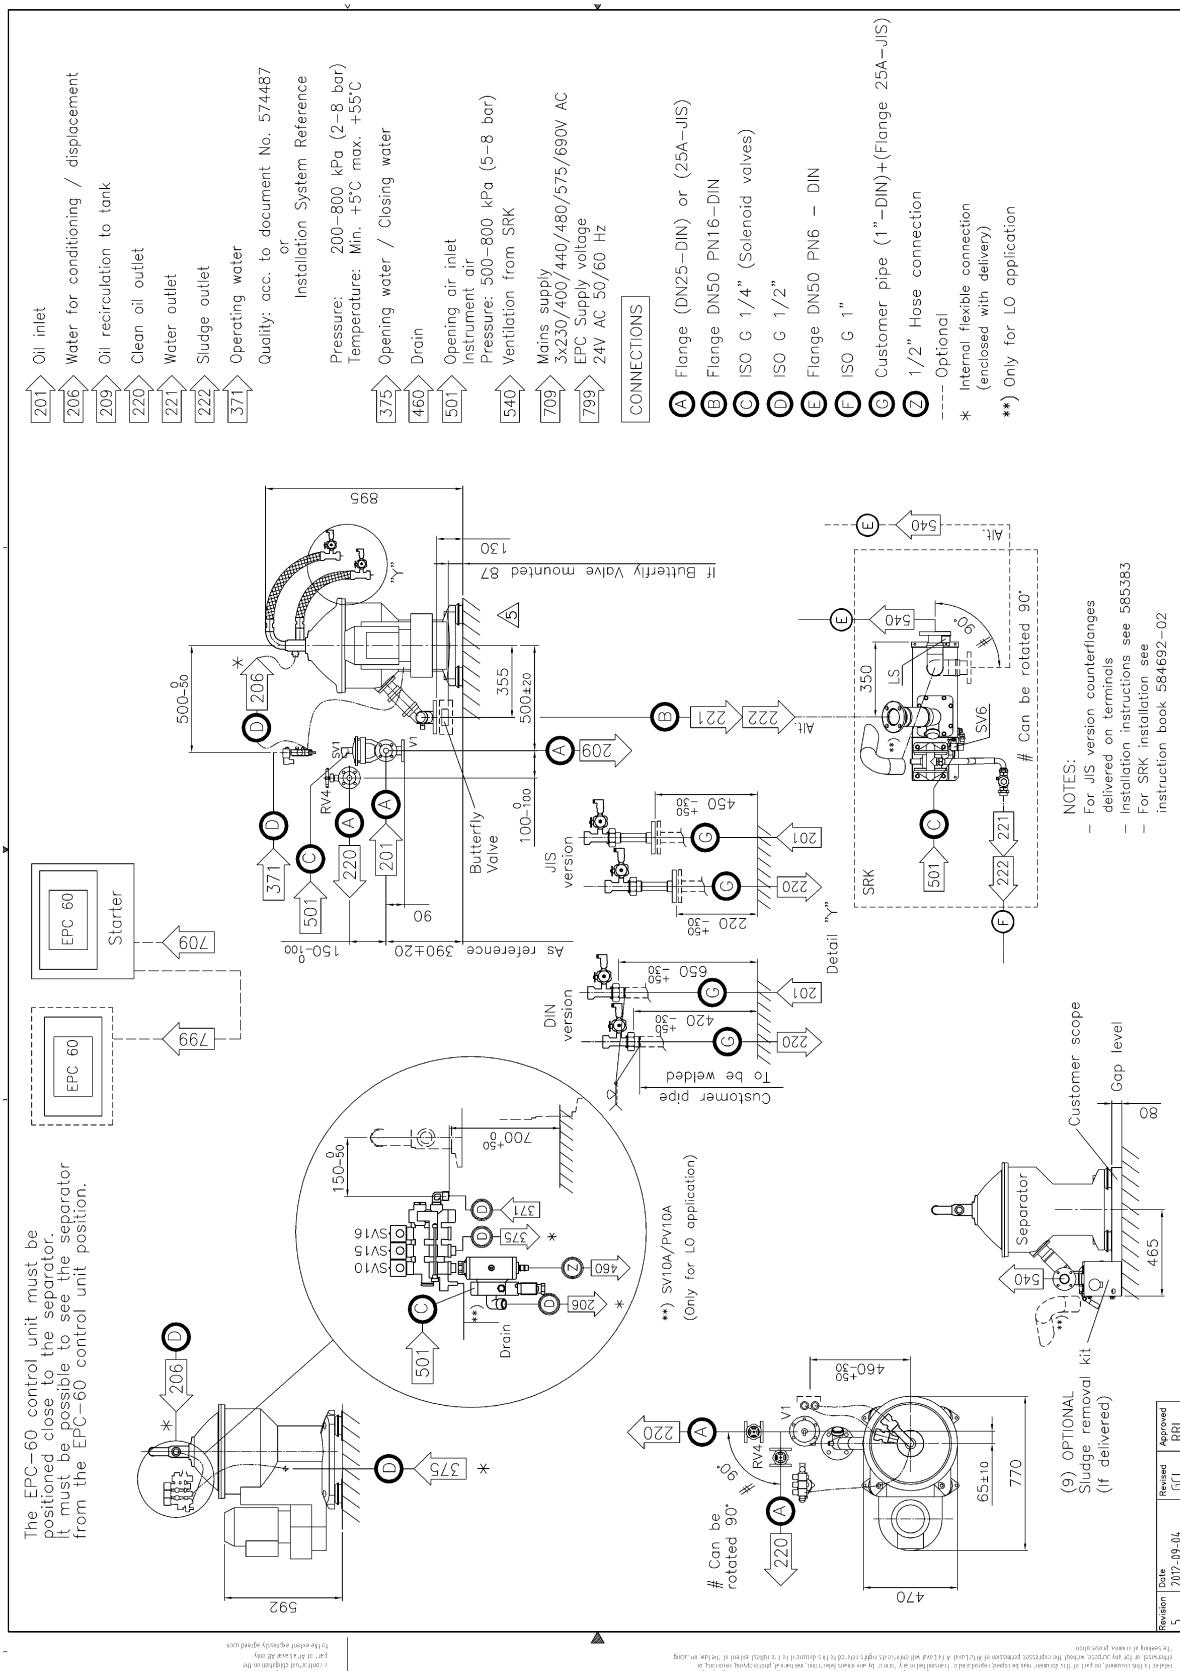

2.4 Basic Size Drawings


2.4.1 S 821 - S 927 Basic Size Drawing

Alfa Laval ref. 574283 Rev. 0

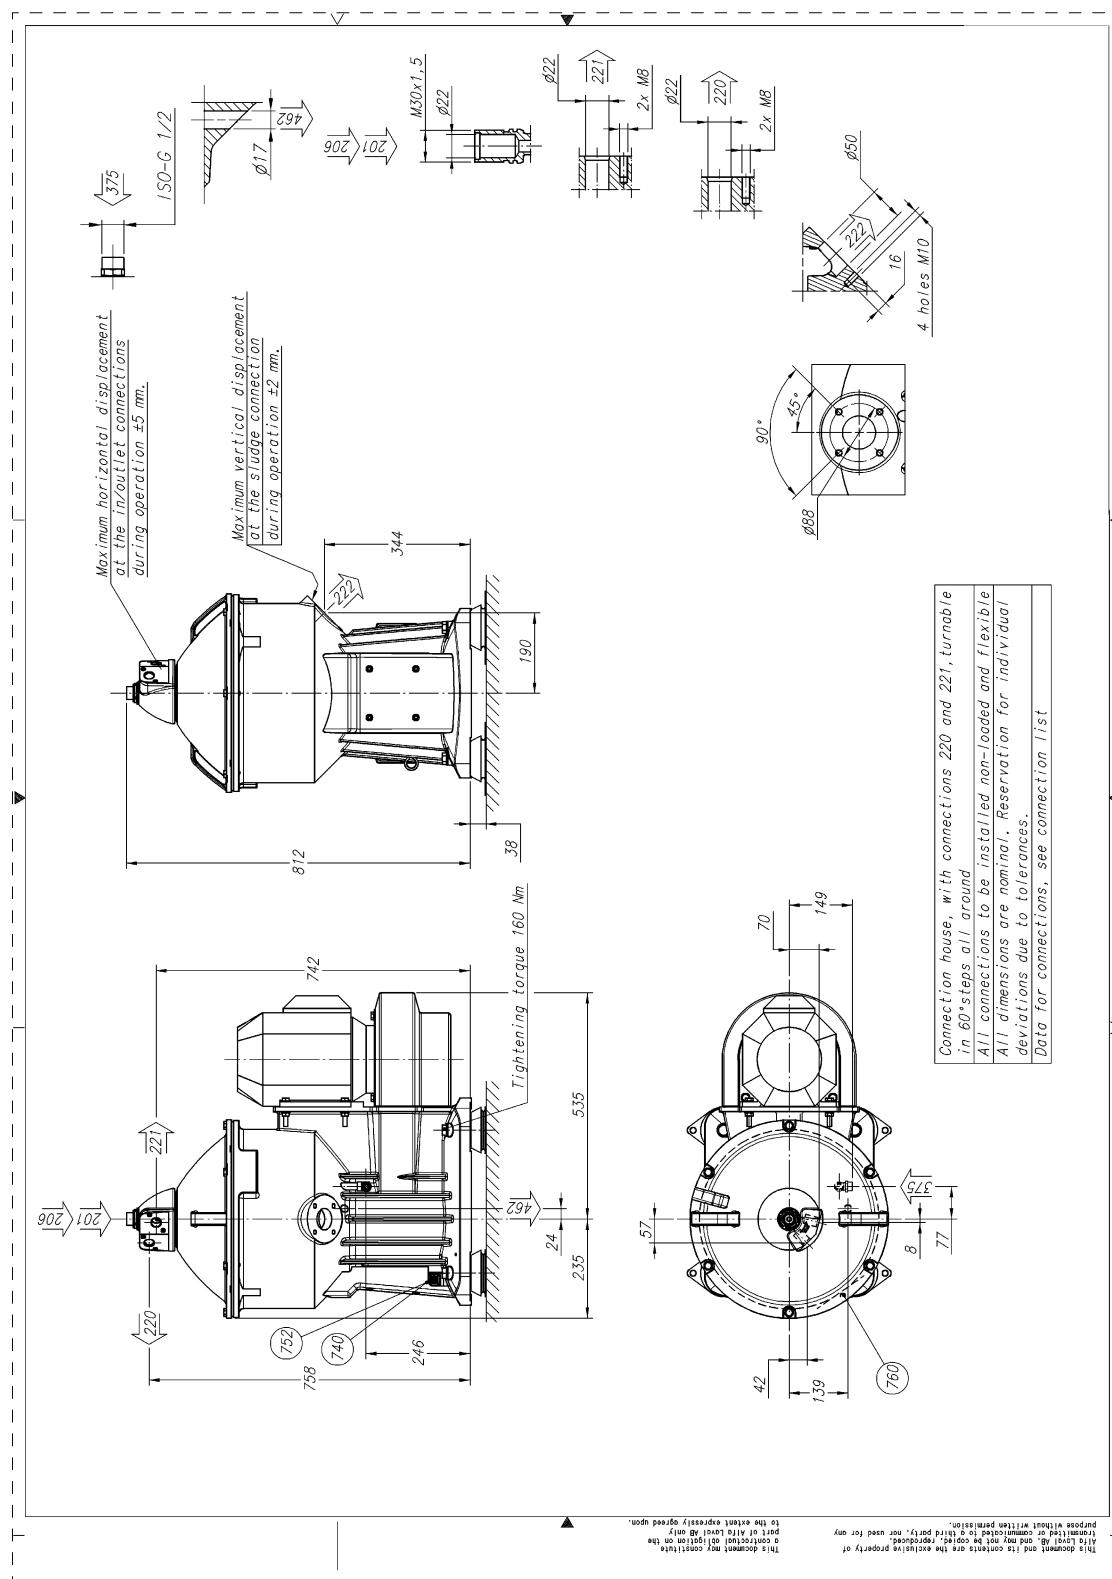


2.4.2 P 605, S 805 Separator Basic Size Drawing

Alfa Laval ref. 565297 Rev. 2

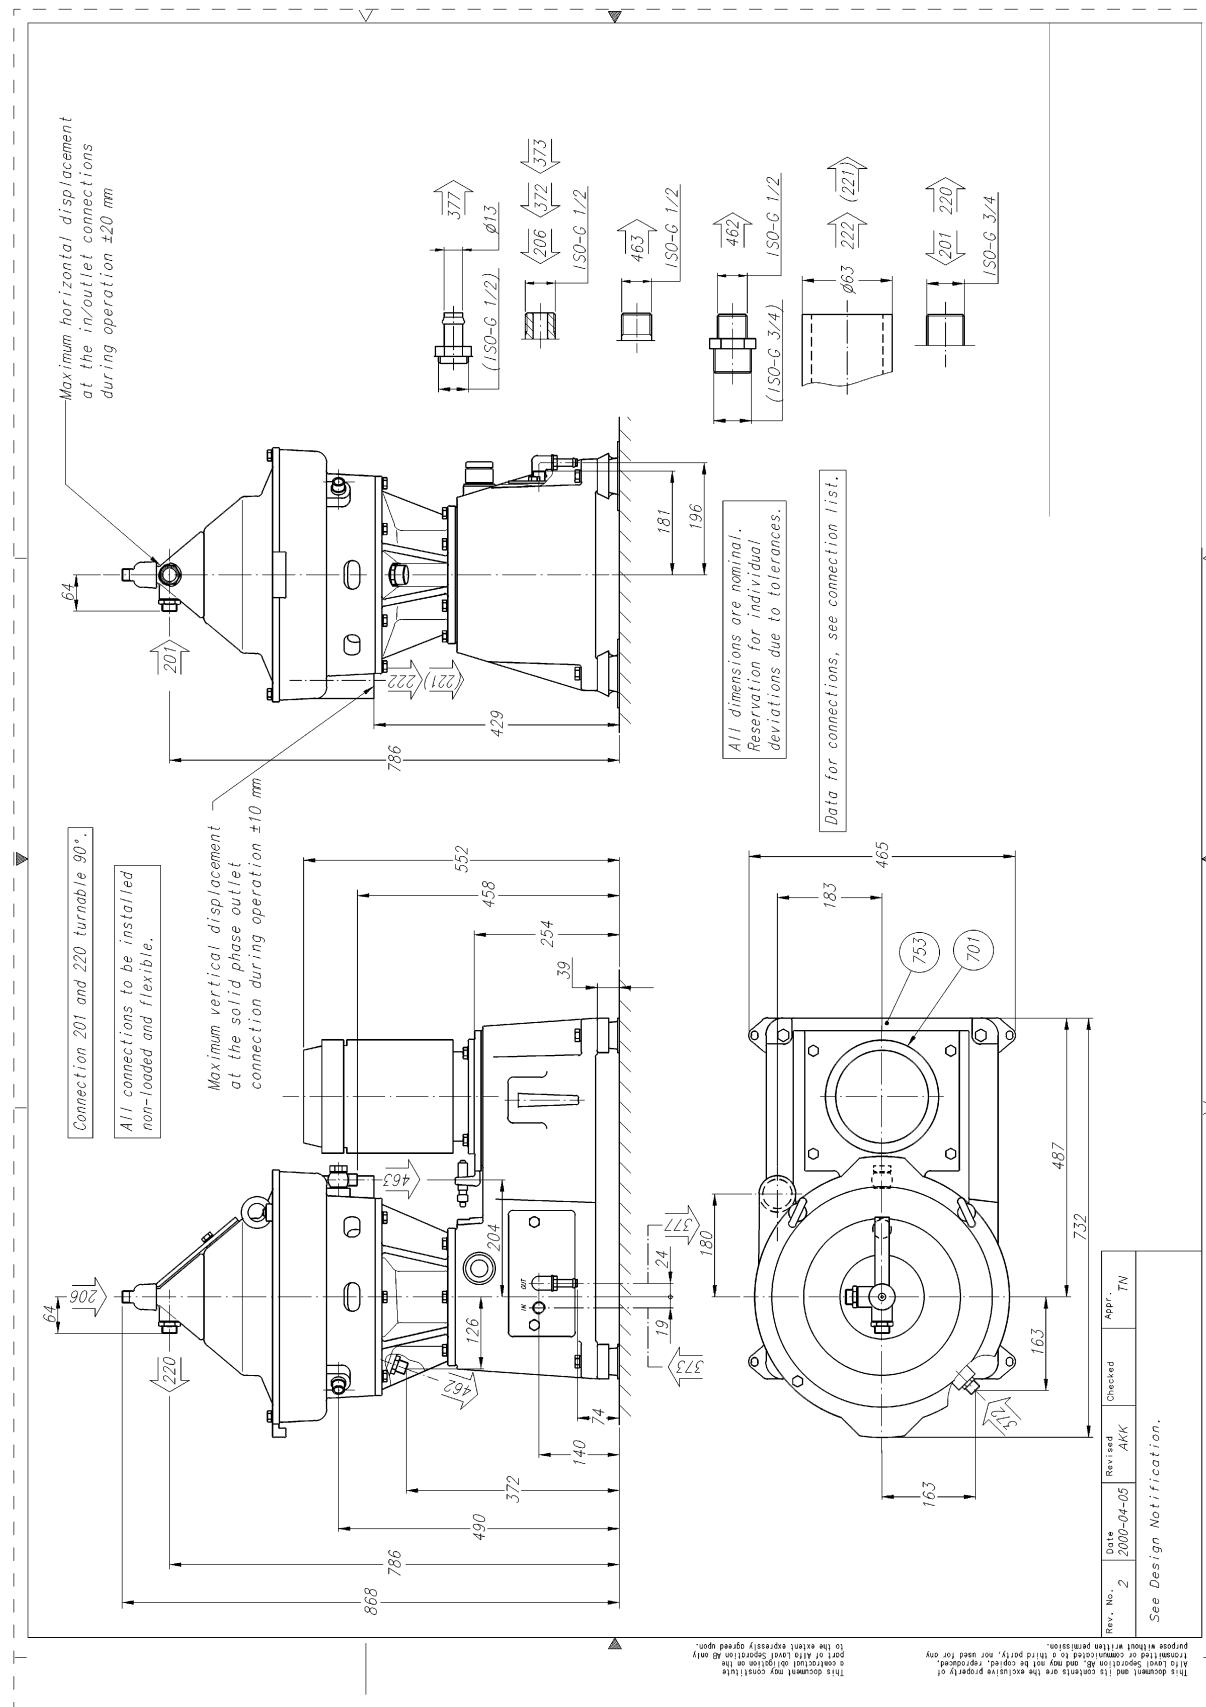


2.4.3 P 615, S 815 Separator Basic Size Drawing

Alfa Laval ref. 565298 Rev. 2

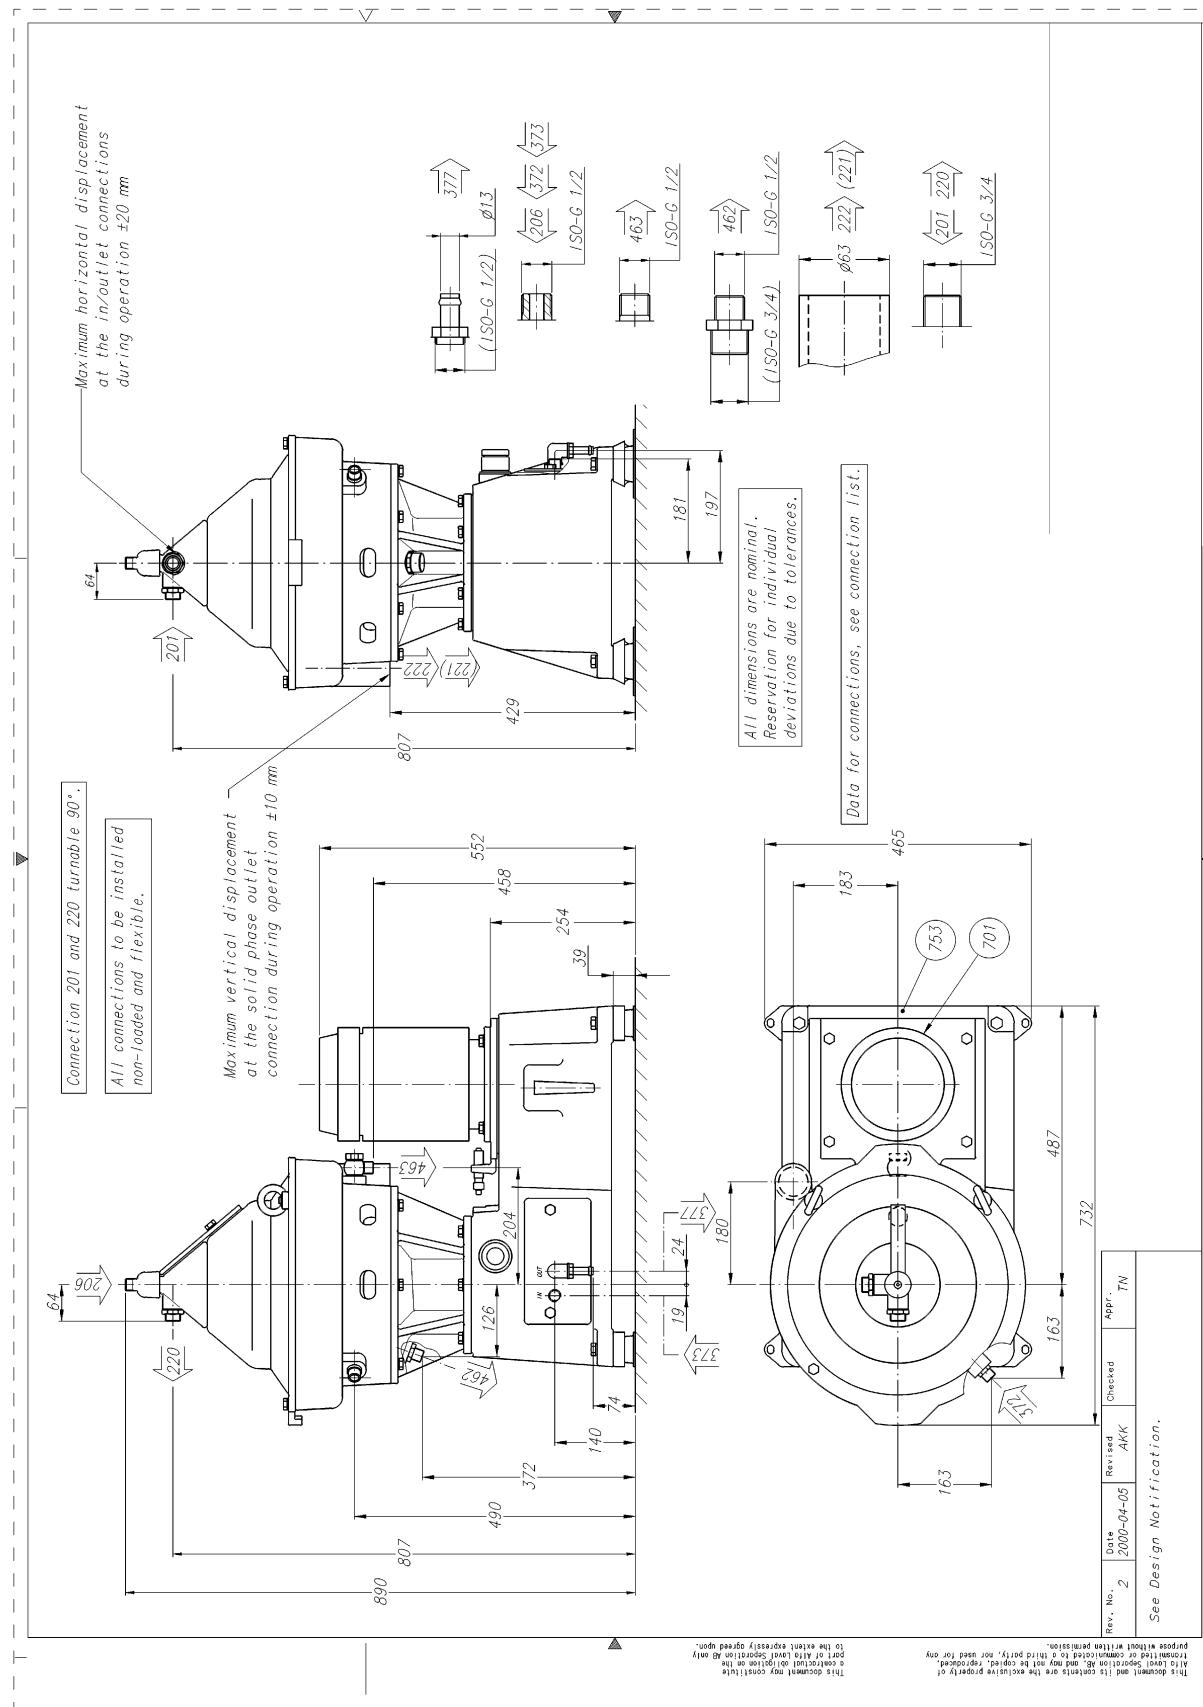

2.4.4 P 625, S 626 Separator Basic Size Drawing


Alfa Laval ref. 574932 Rev. 1

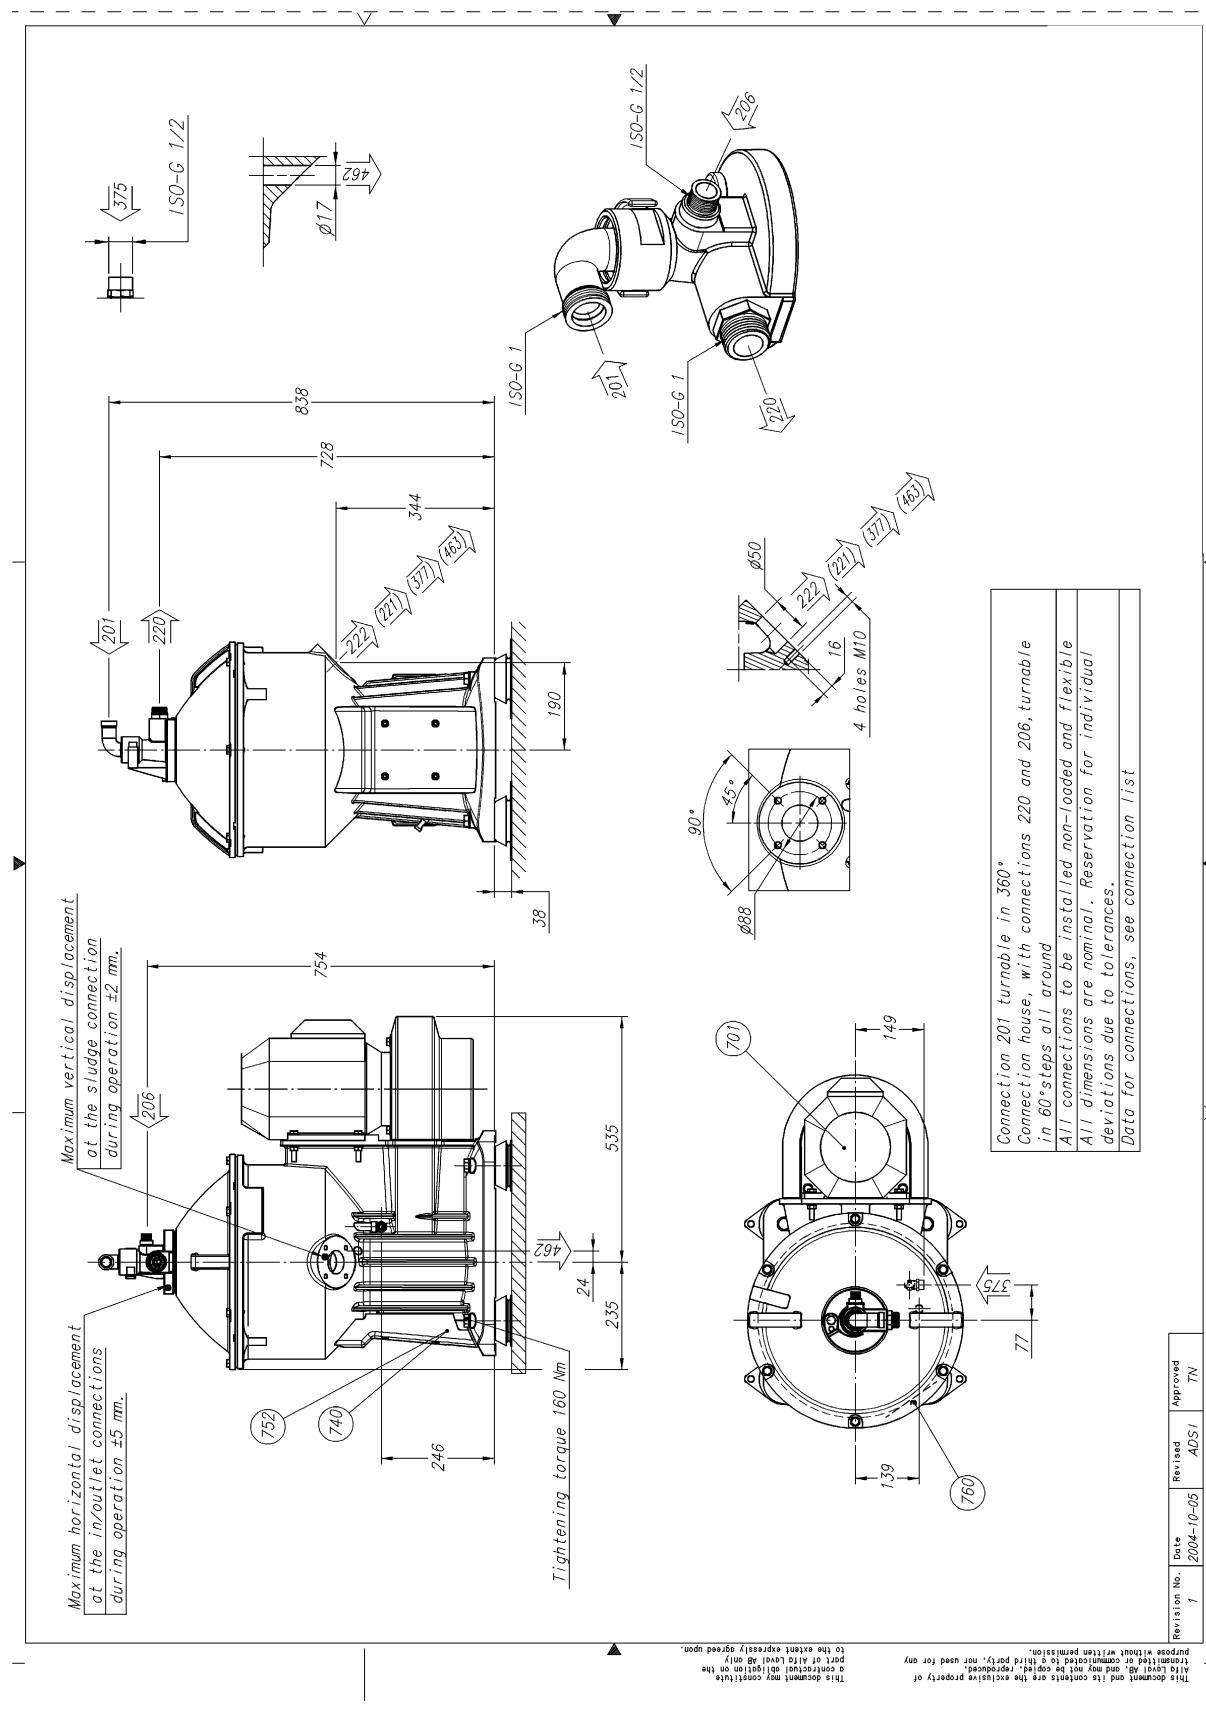

2.5 Foundation drawings


2.5.1 S 821 - S 927, P 625/626 Separator Foundation Drawing

Alfa Laval ref. 574284 Rev. 1

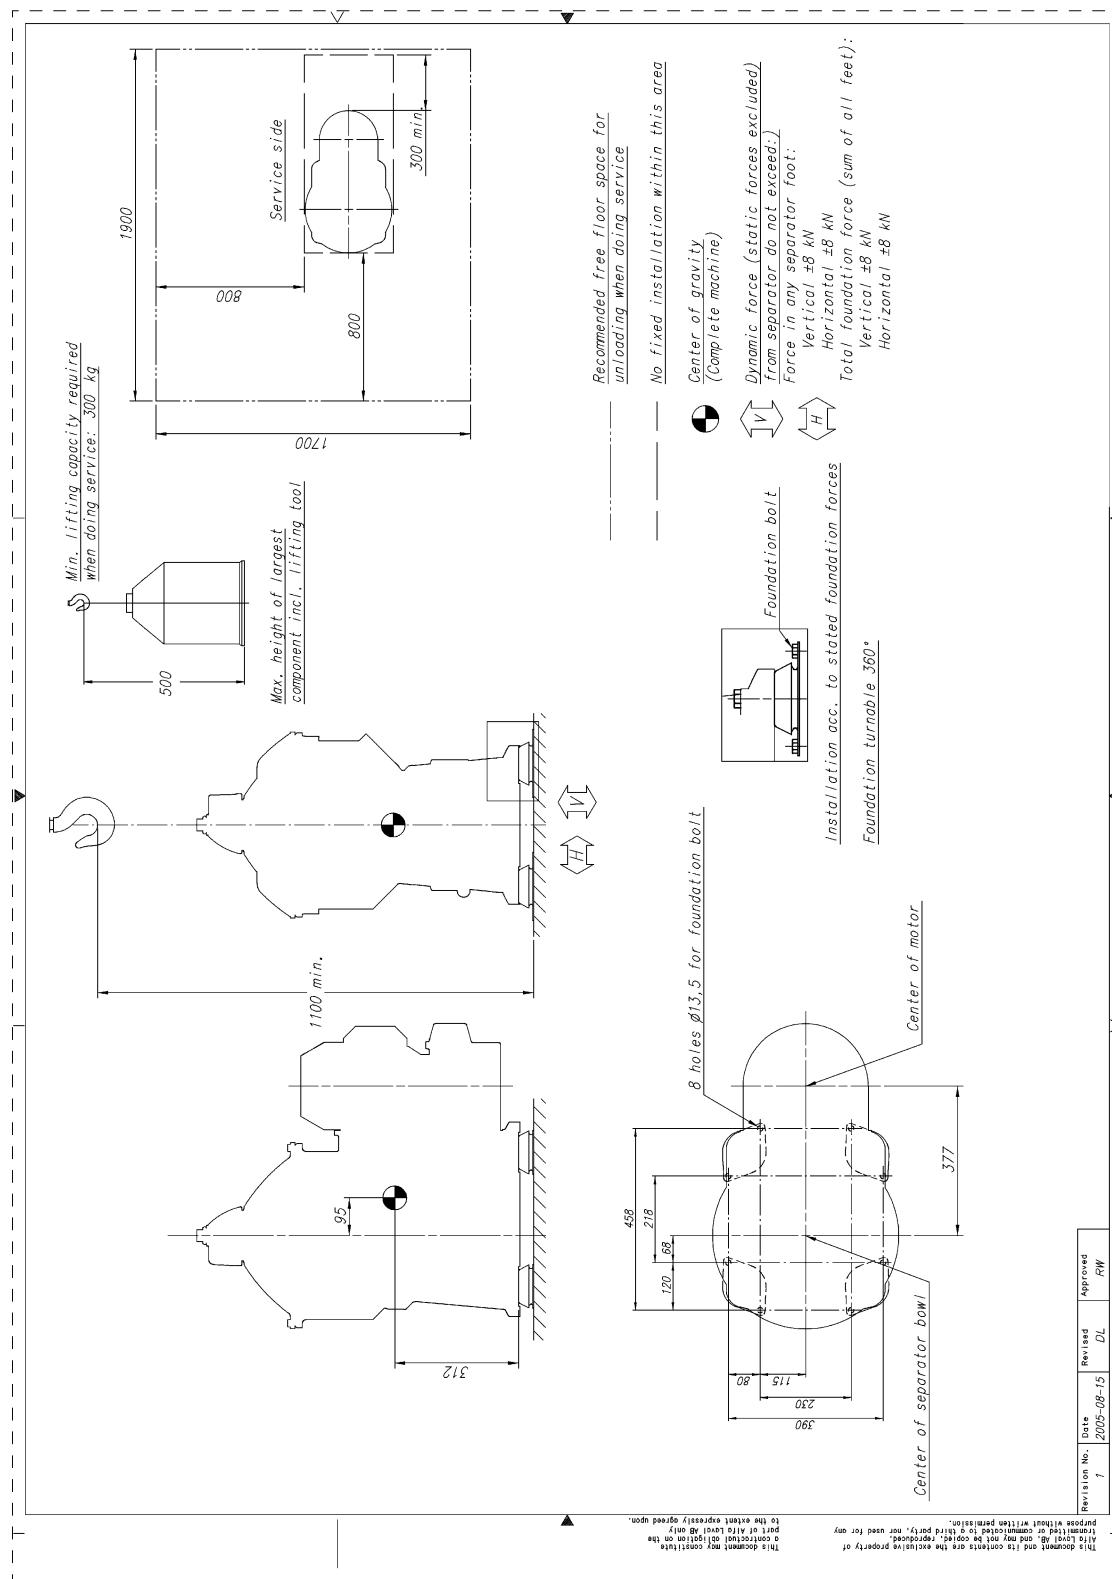


2.5.2 P 605/615, S 805/815 Separator Foundation Drawing

Alfa Laval ref. 548711 Rev. 2

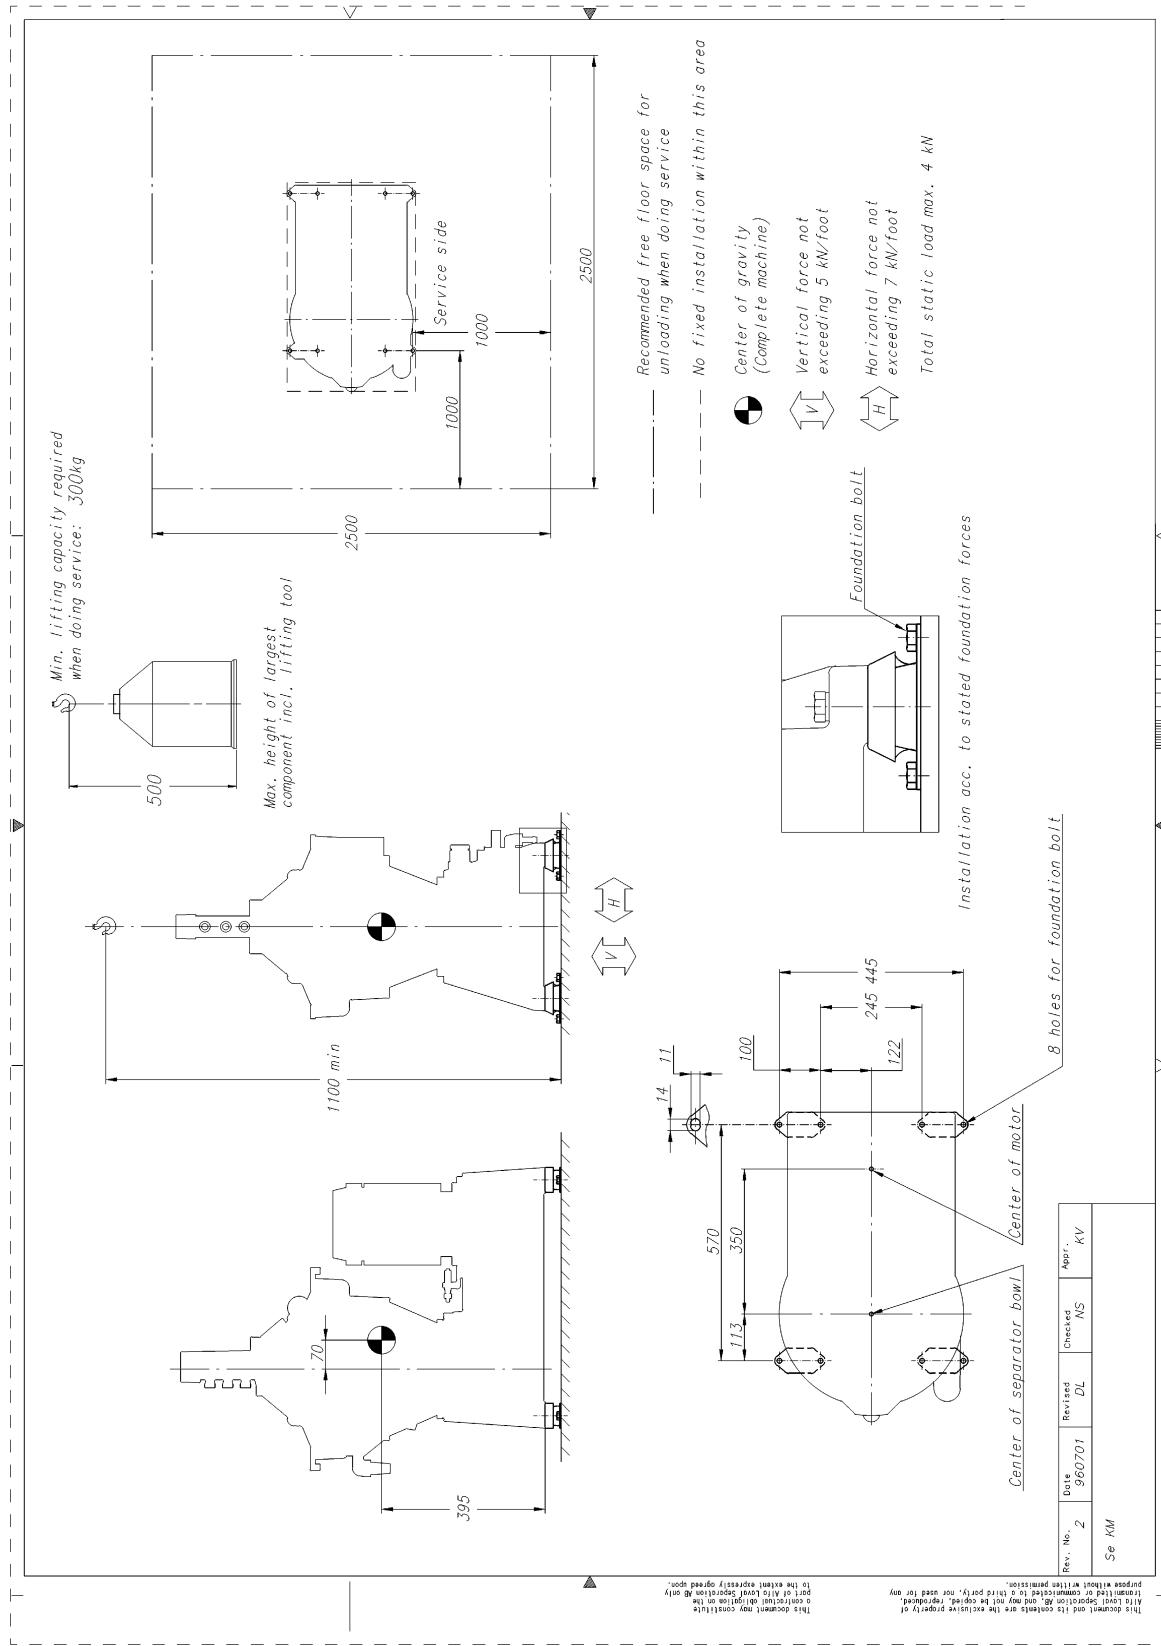

2.6 S 821 - S 927 Separator, Pipe Arrangement


Alfa Laval ref. 585382 Rev. 4

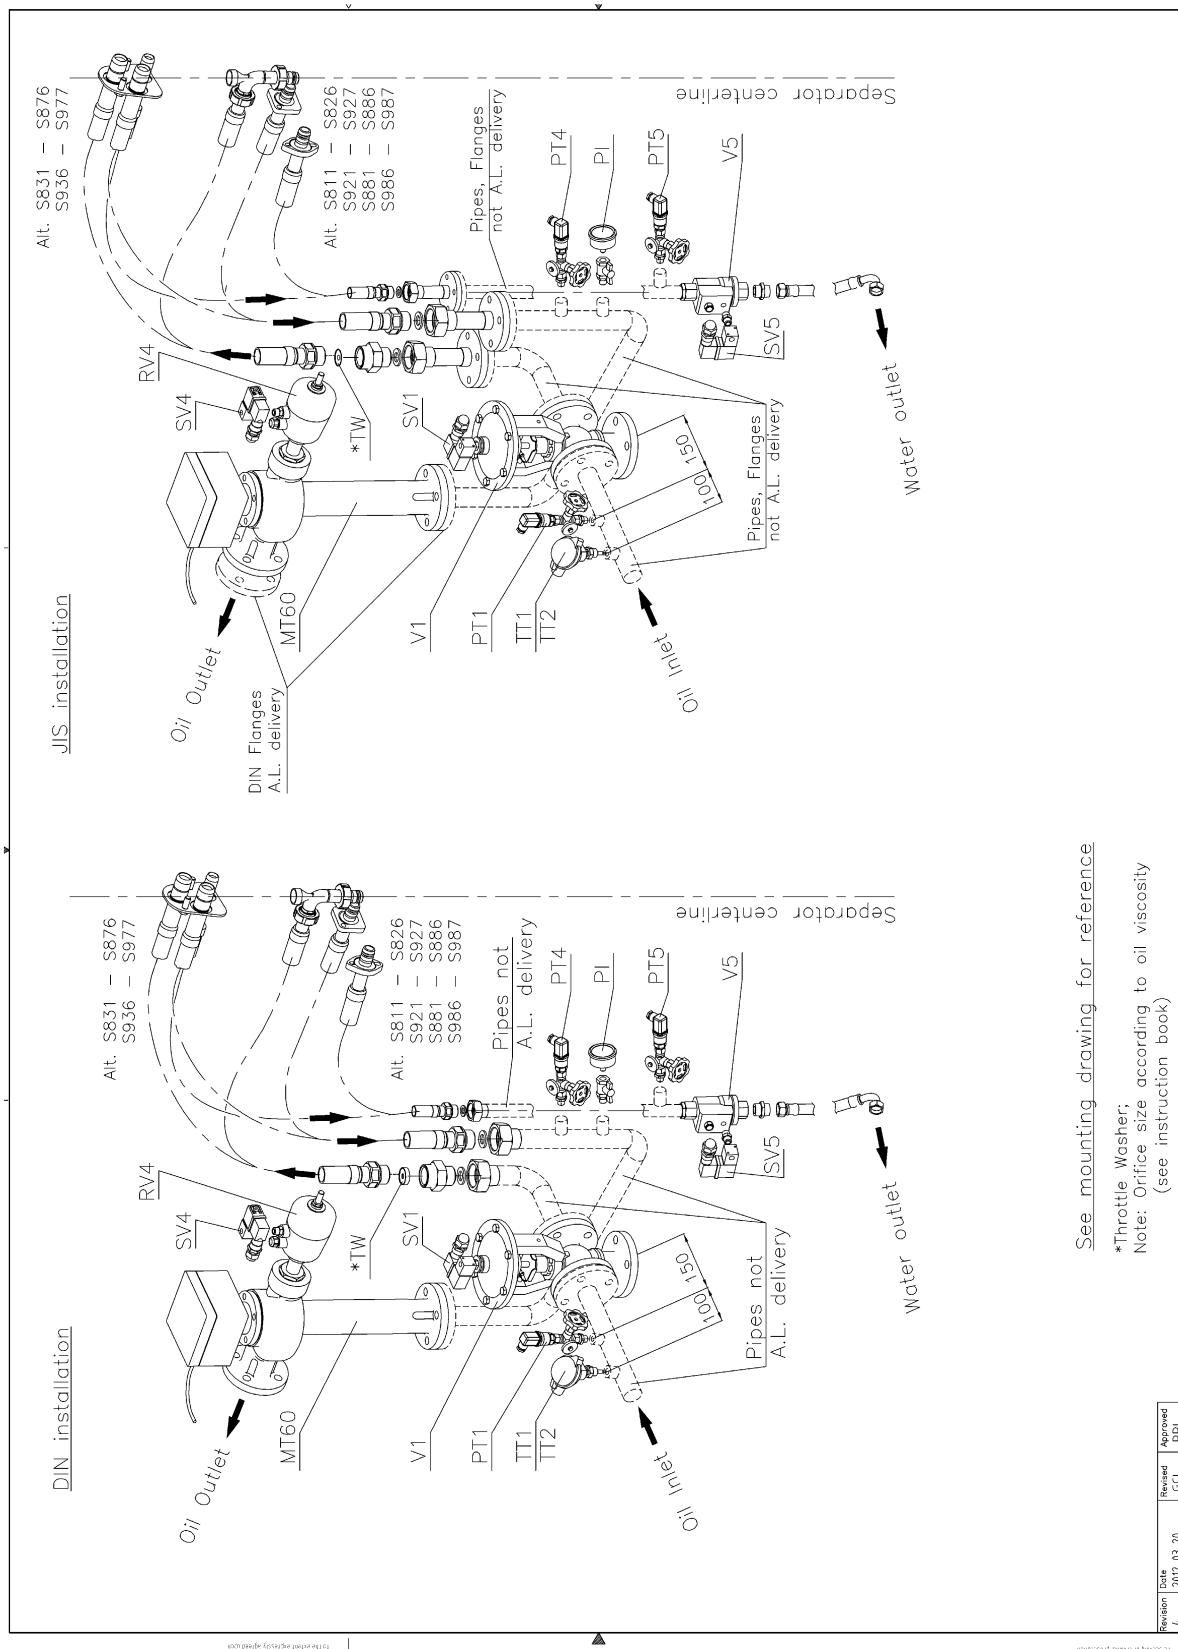

The detailed drawings and instructions for the assembly and commissioning of the separator can be found in the separate instruction book. This drawing is for guidance only. All dimensions and values given in this drawing are approximate. The detailed drawings and instructions for the assembly and commissioning of the separator can be found in the separate instruction book.


2.7 S 805, S 815 Separator Pipe Arrangement

Alfa Laval ref. 588923 Rev. 1

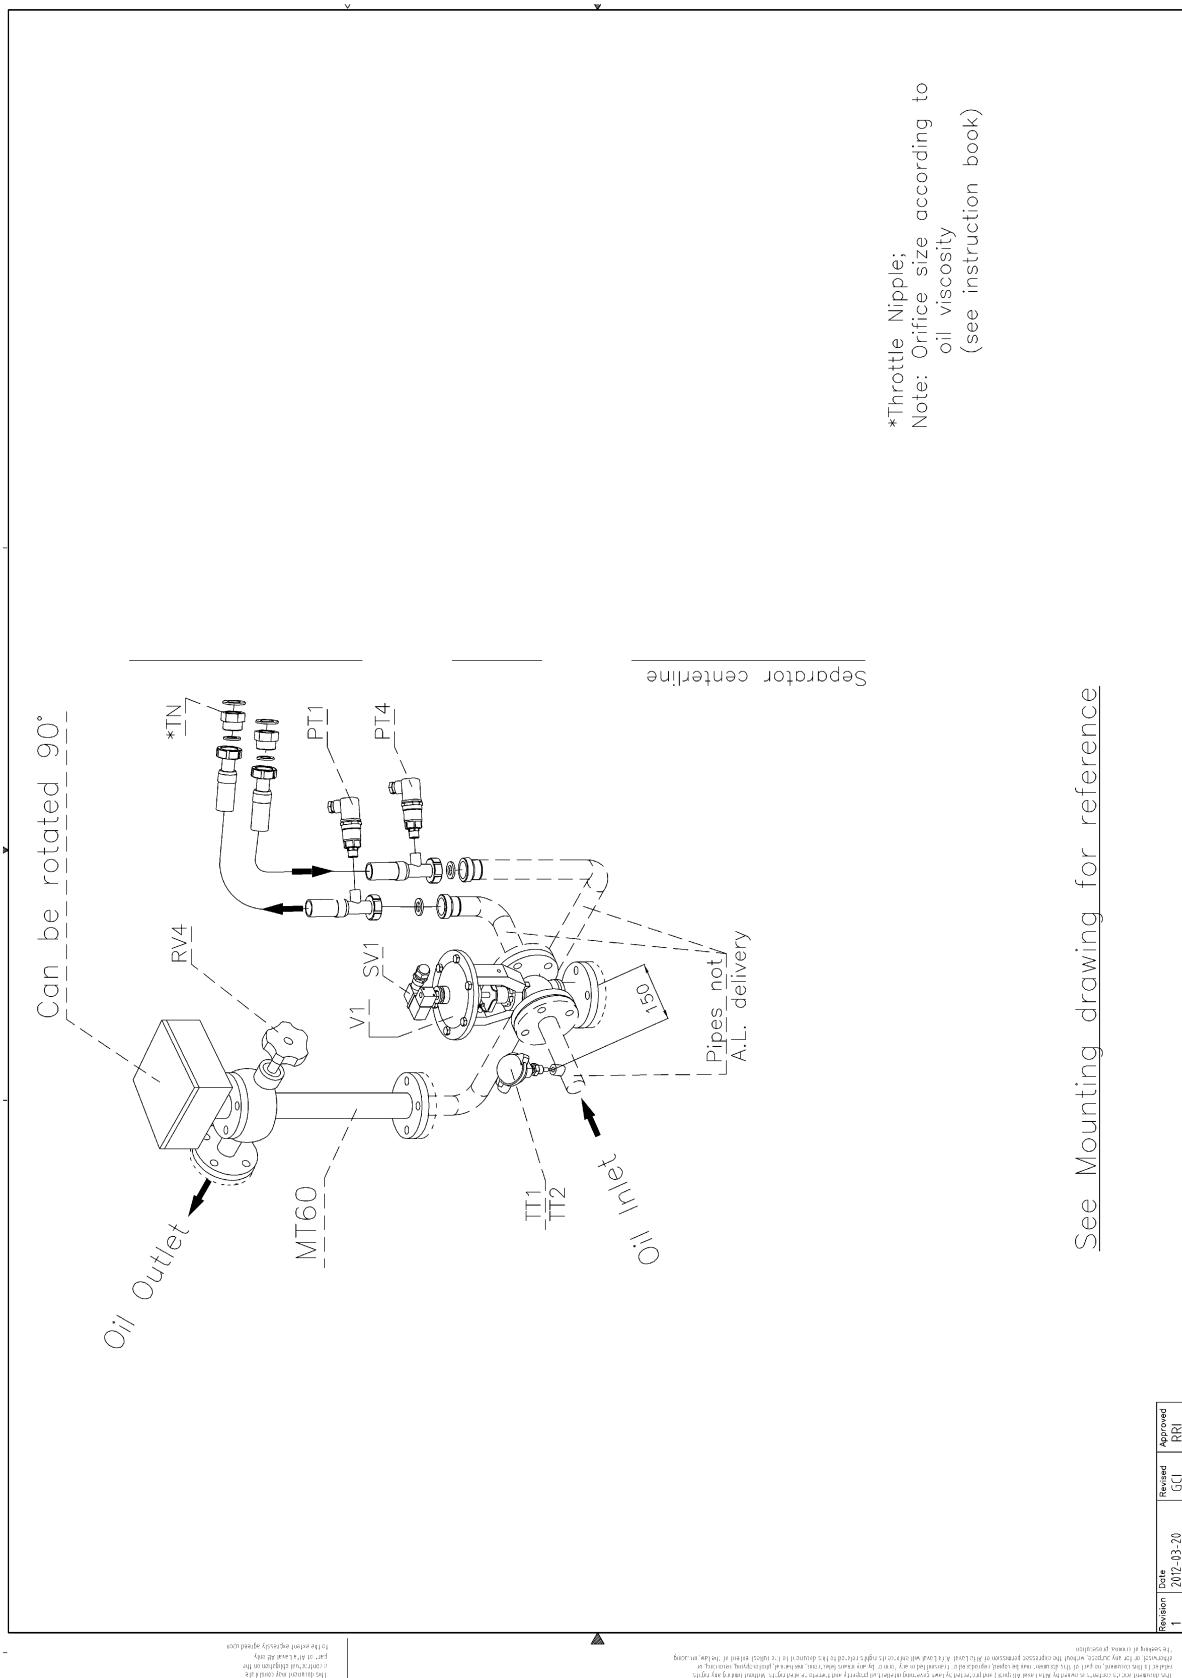


2.8 P 605, P 615, P 625/626 Separator, Pipe Arrangement

Alfa Laval ref. 585383 Rev. 4

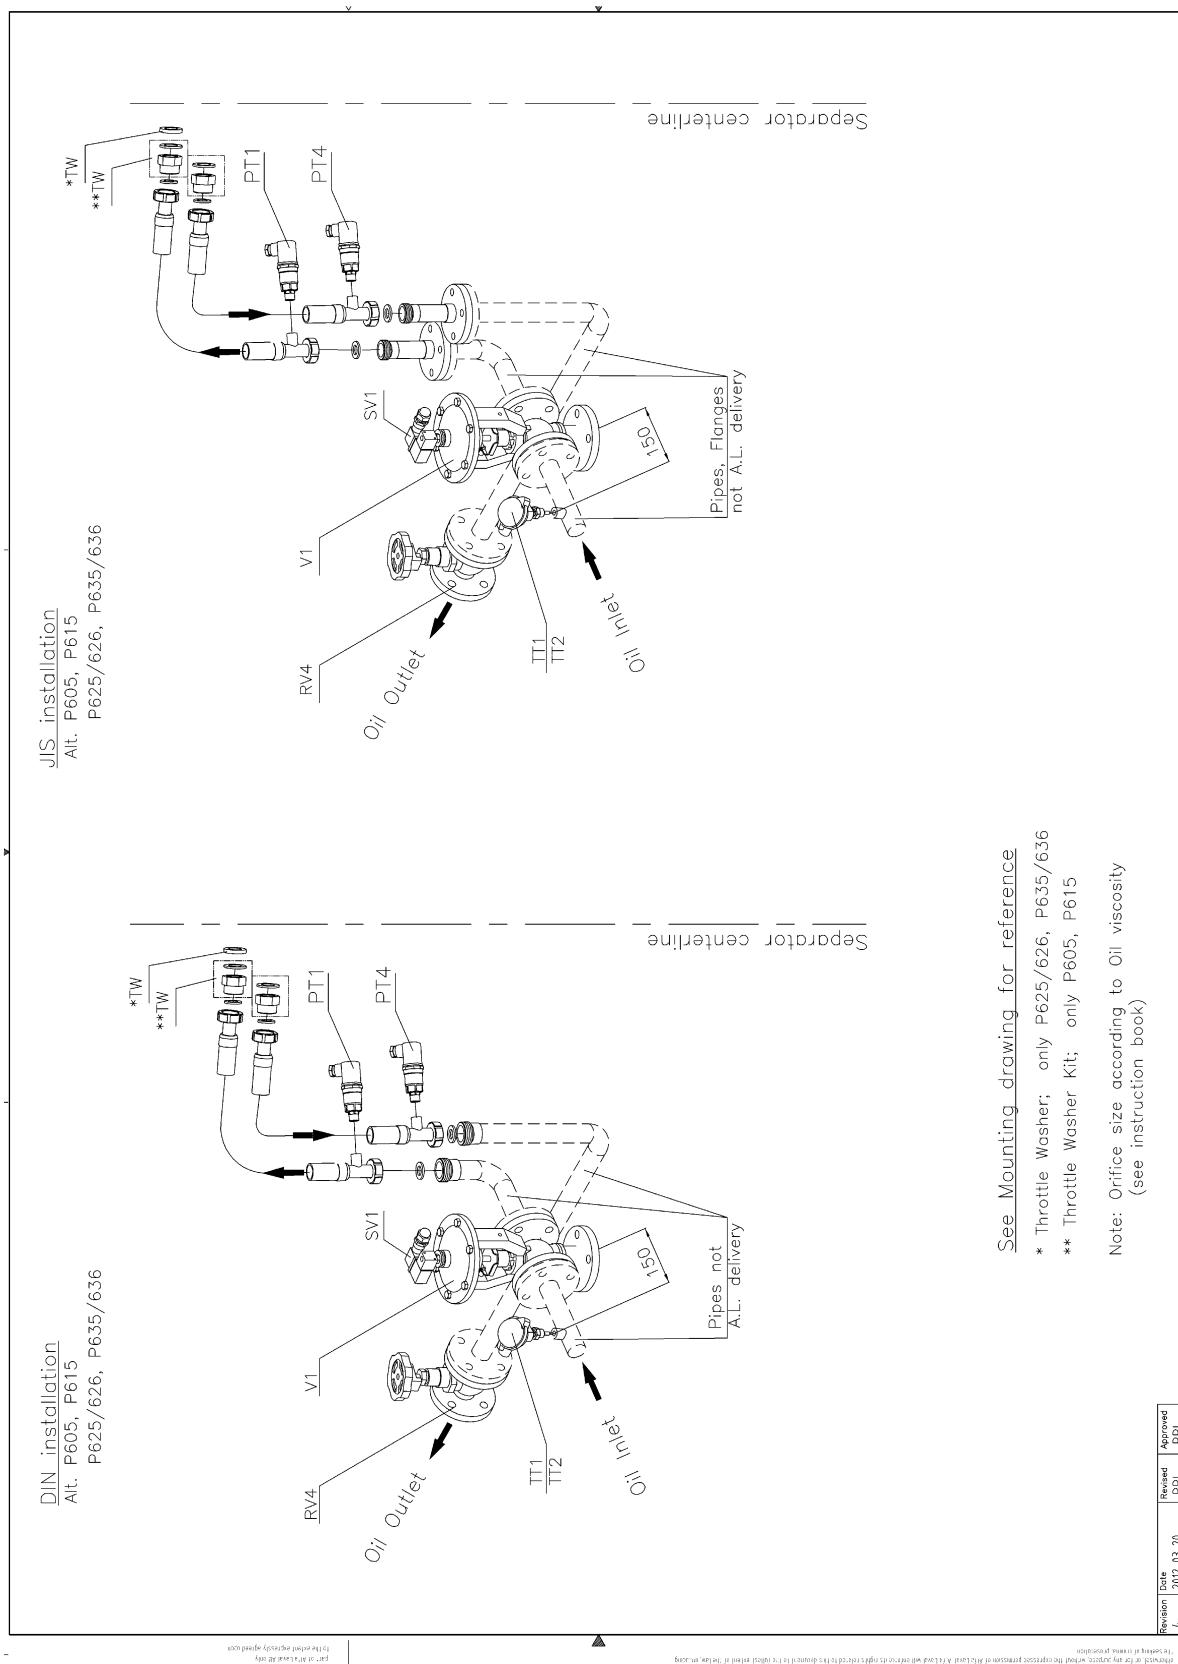

2.9 Valve Block Oil Assembly Drawing


Alfa Laval ref. 583476 Rev. 2

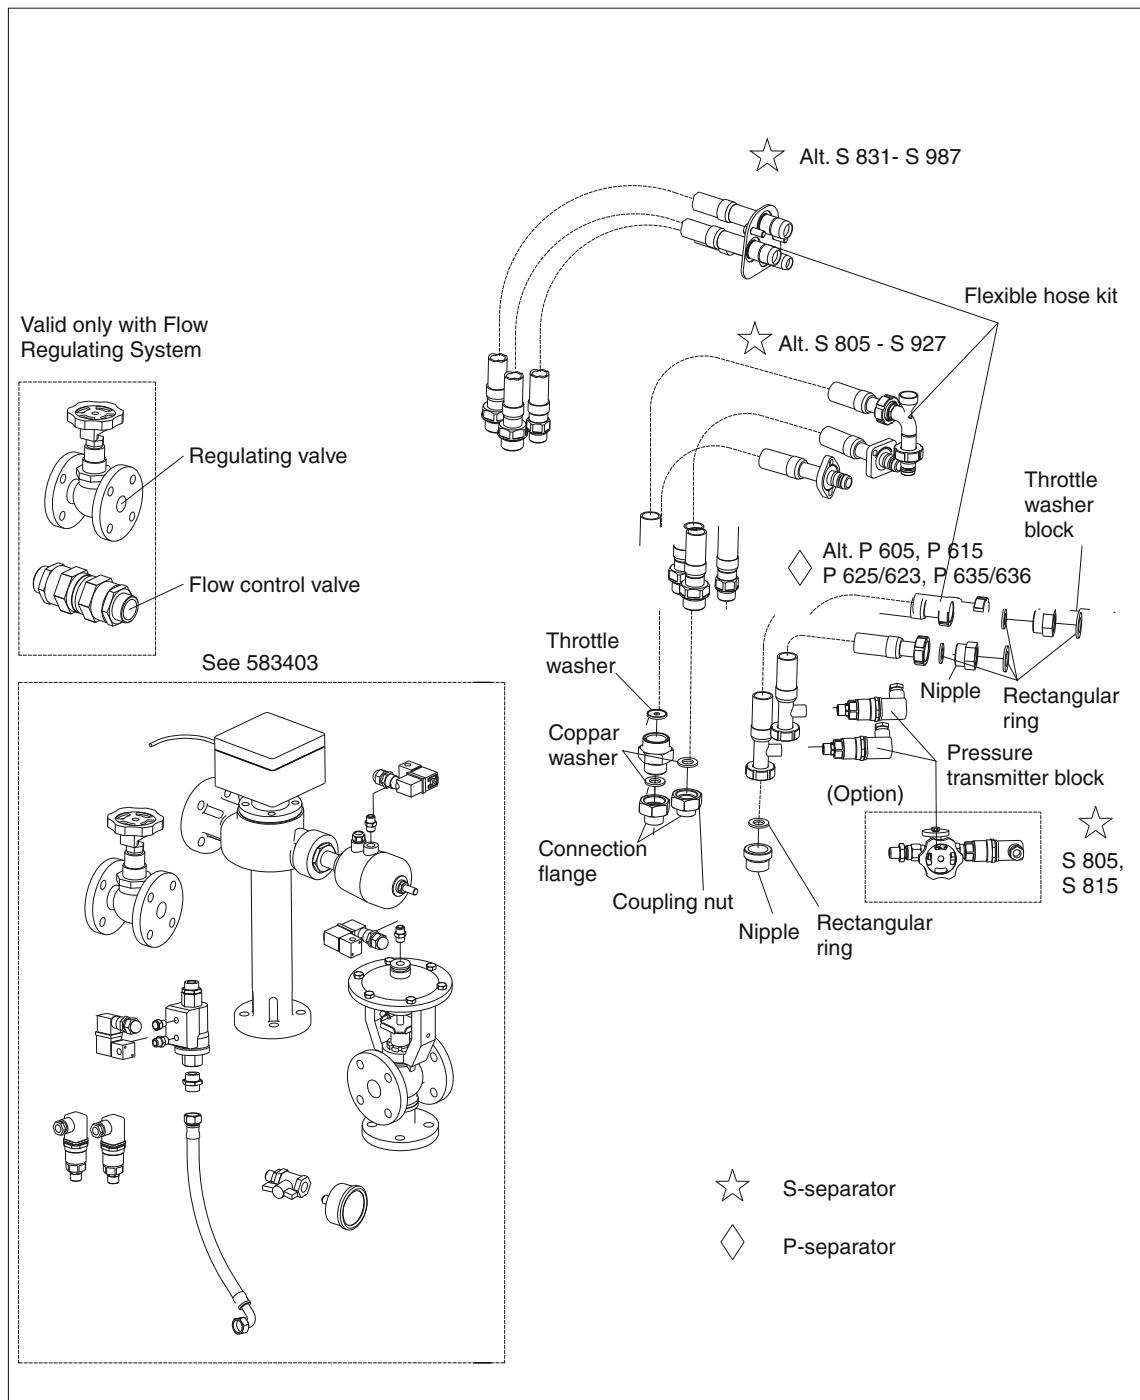

Throttle washers		
	Oil type	Hole diam. (mm)
P 625/626	IF60, IF100, LOTP, LOXH, HFO180, HFO380, HFO460, HFO6009	9
S 821 — S 927	LOTP, LOXH, HFO180, HFO380, HFO460, HFO600, HFO700	7,5

2.10 Valve Block Oil Assembly Drawing cont.


Alfa Laval ref. 583403 Rev. 2

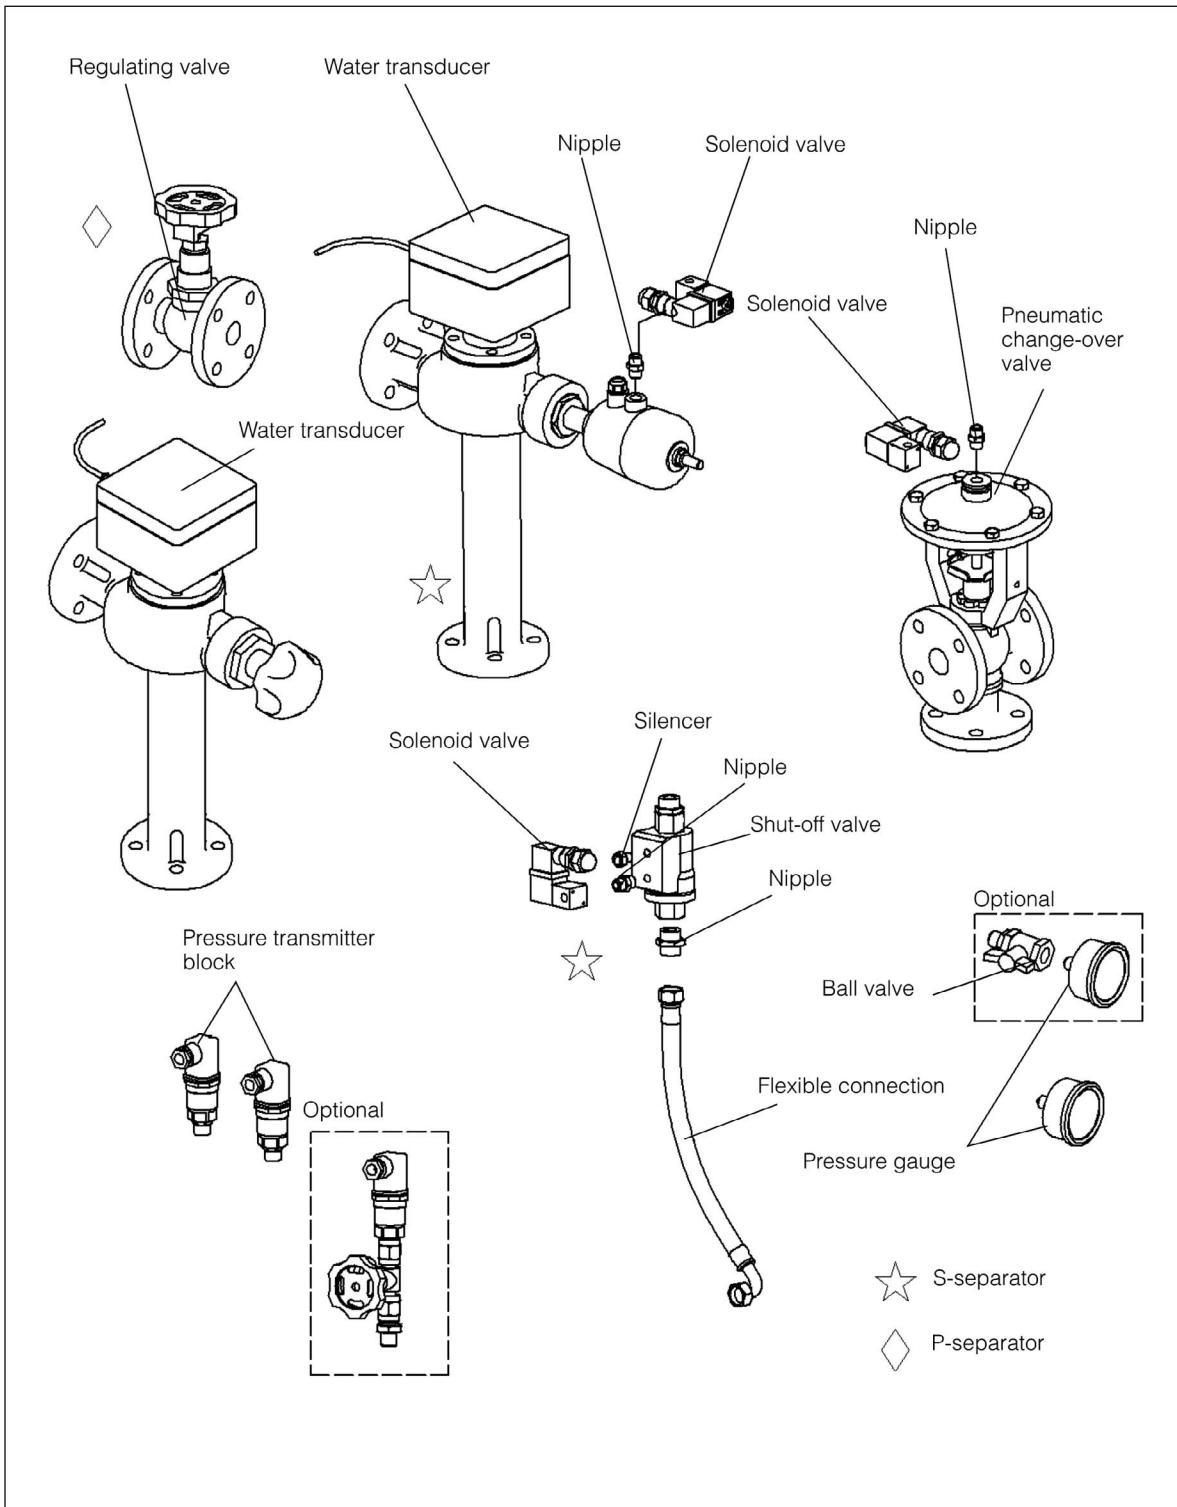

G091051A

2.11 Valve Block Water Assembly Drawing


Alfa Laval ref. 583410 Rev. 1

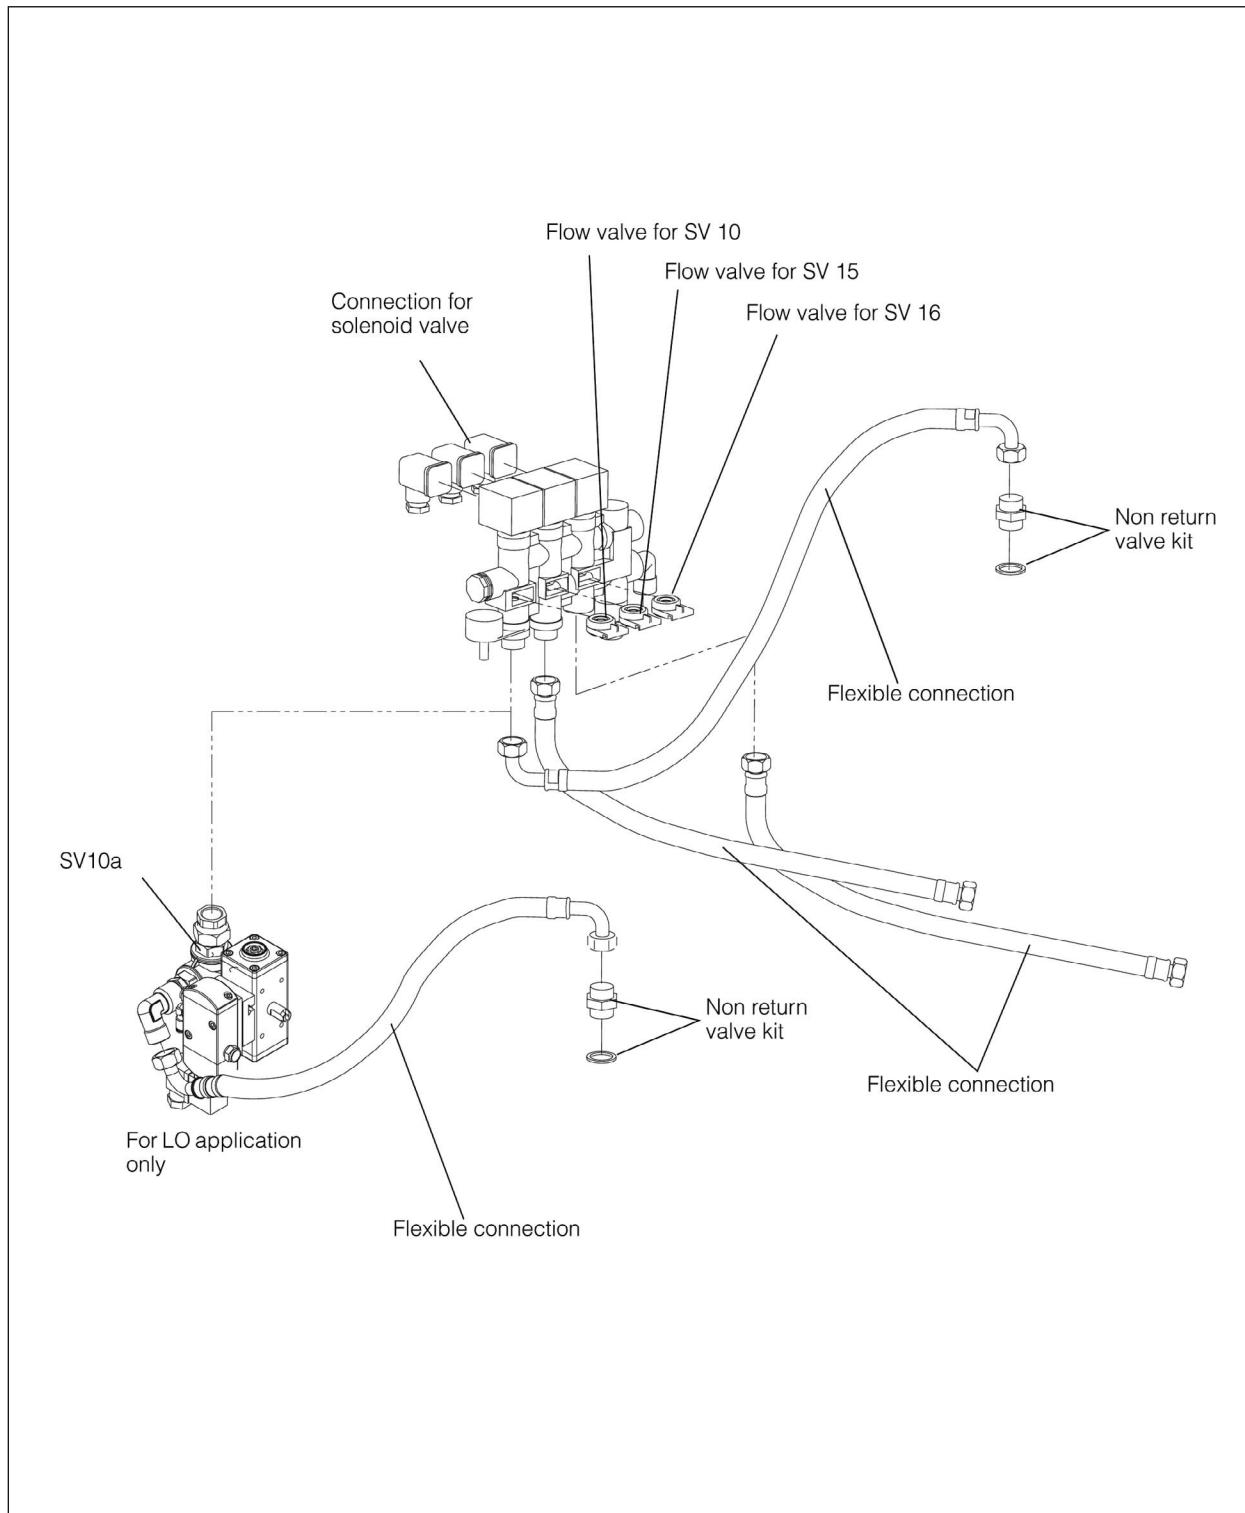

G091061A


2.12 Air Distributer Kit

Alfa Laval ref. 582806 Rev. 3

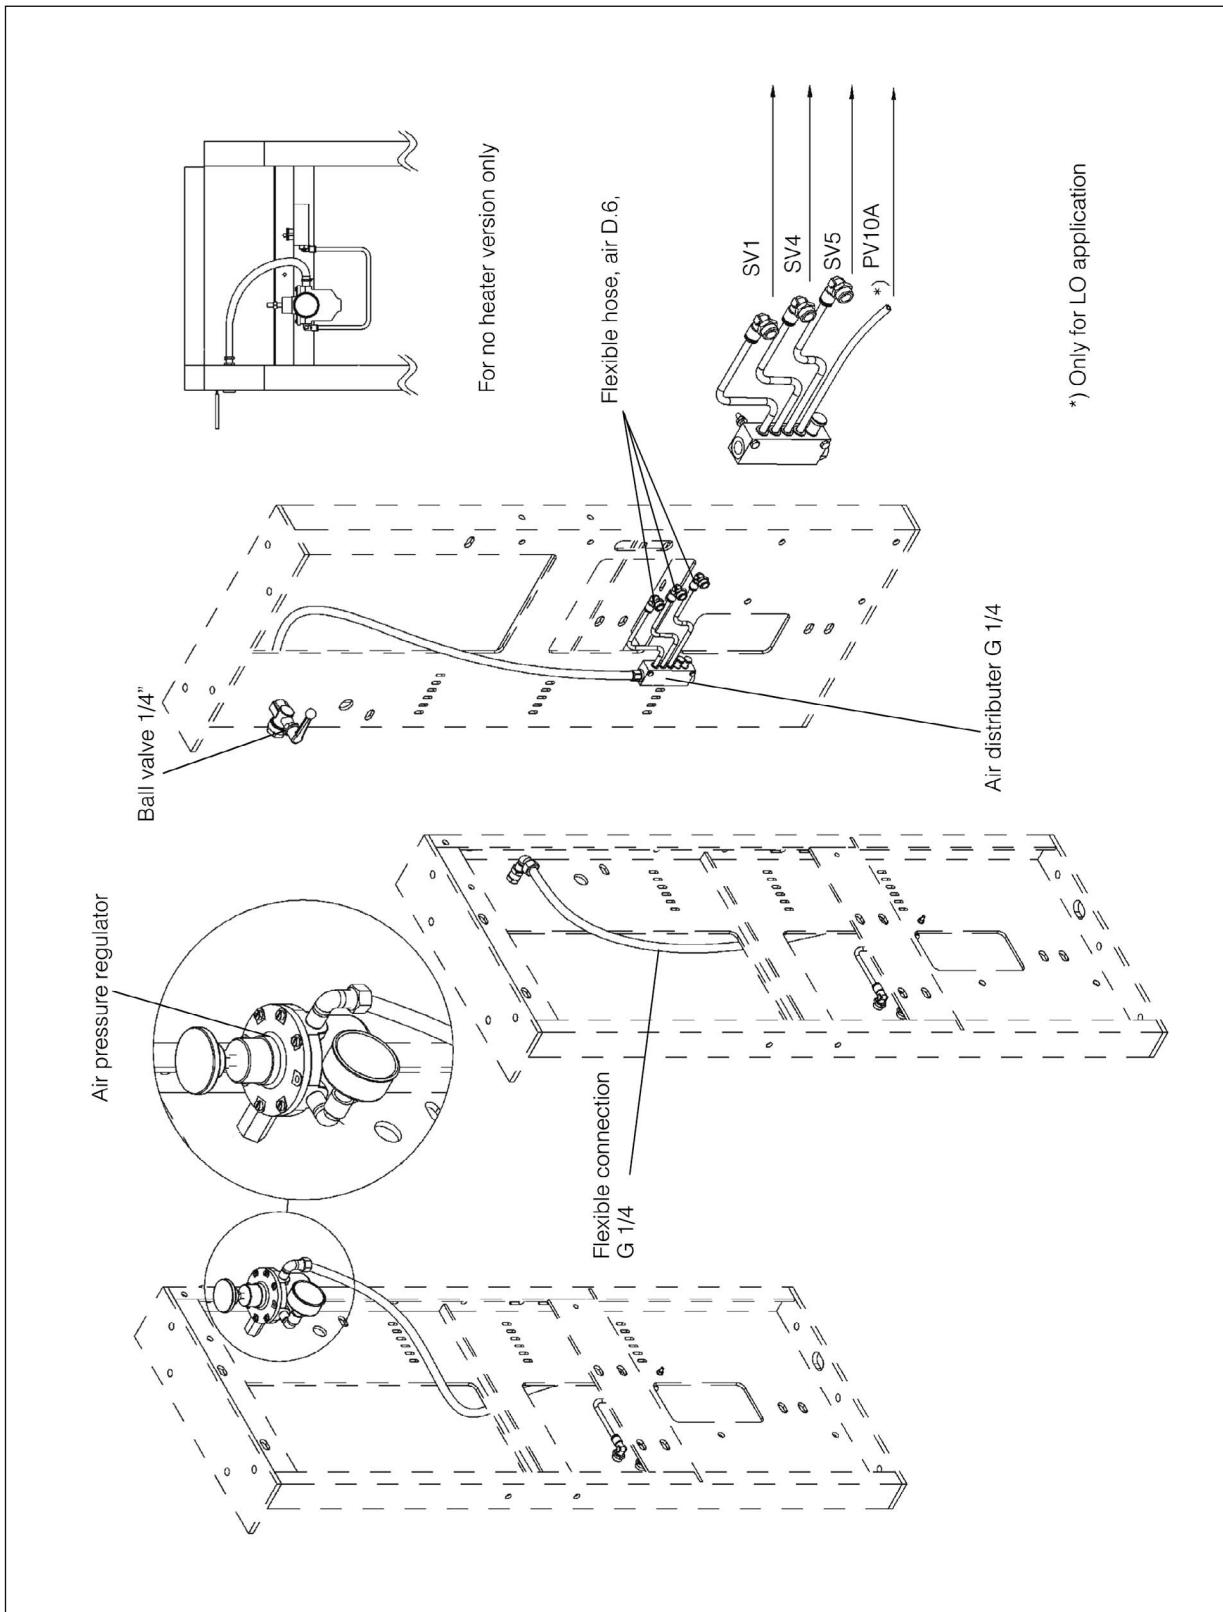


2.13 Control Cabinet Dimension Drawing

Alfa Laval ref. 580903 Rev. 3

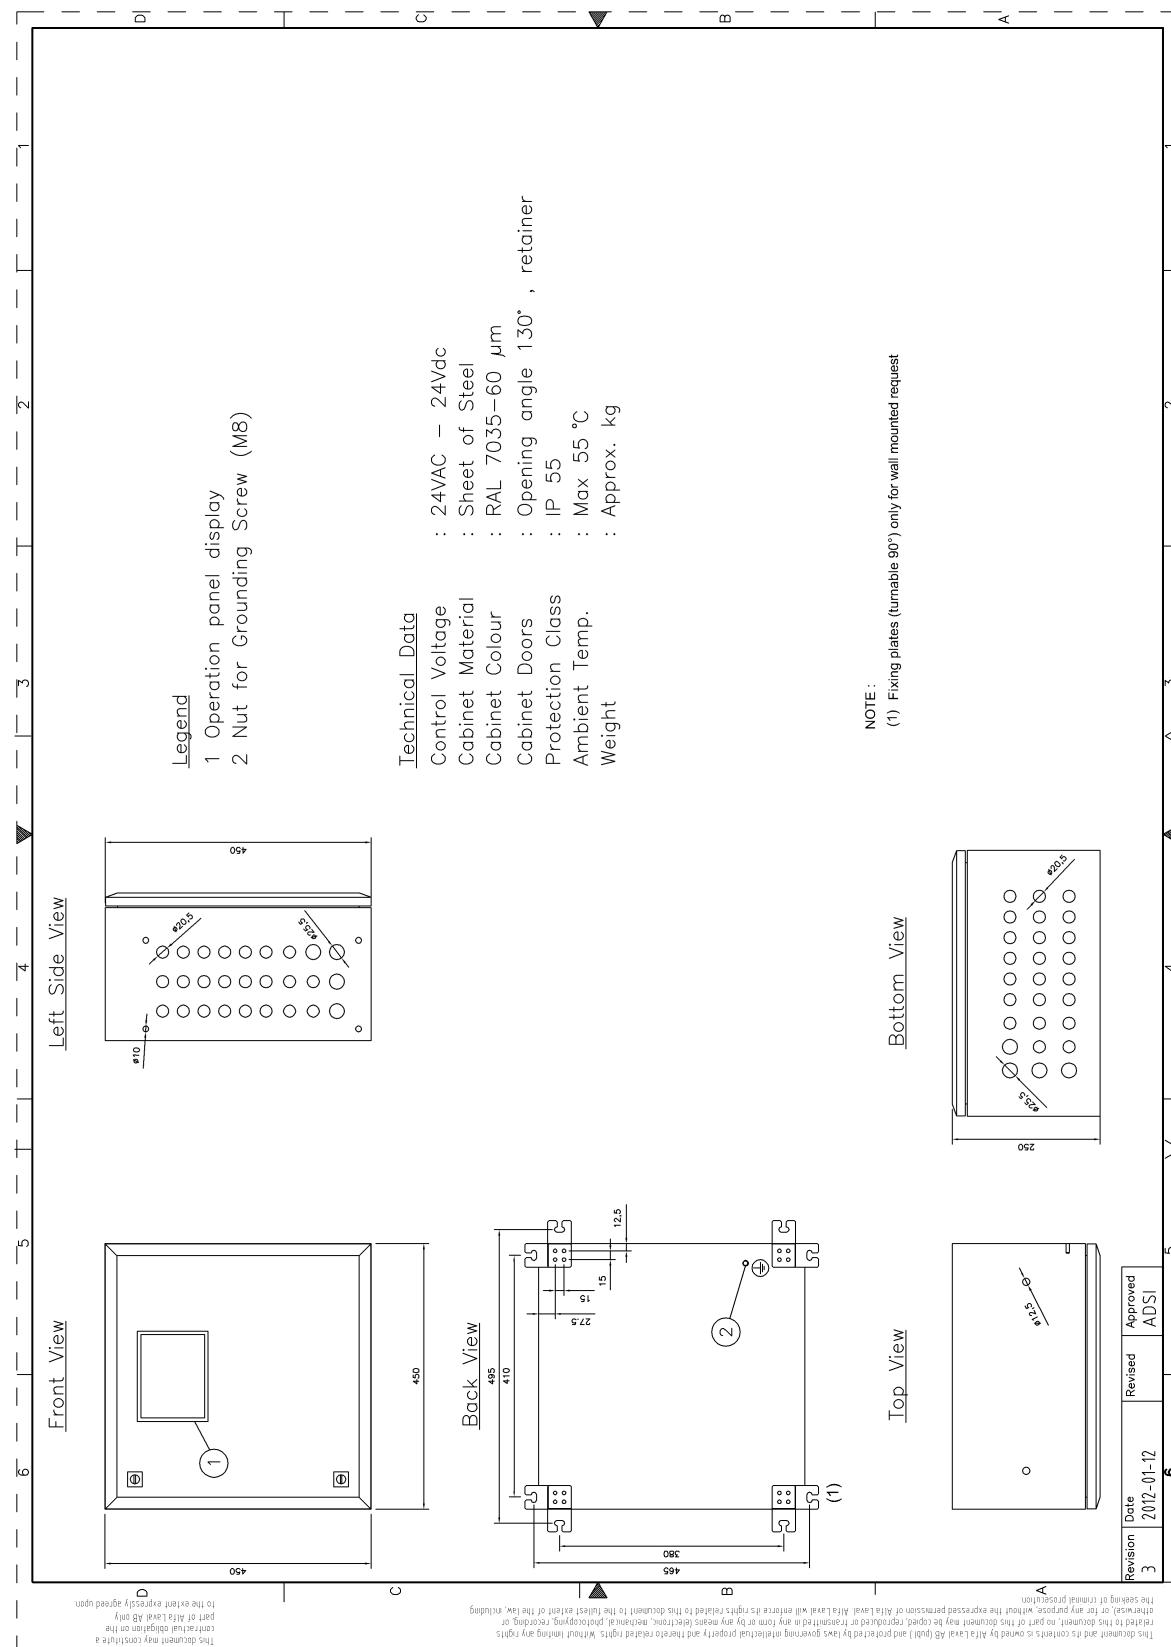


2.14 Control Cabinet Assembly Drawing, External

Alfa Laval ref. 580904 Rev. 5

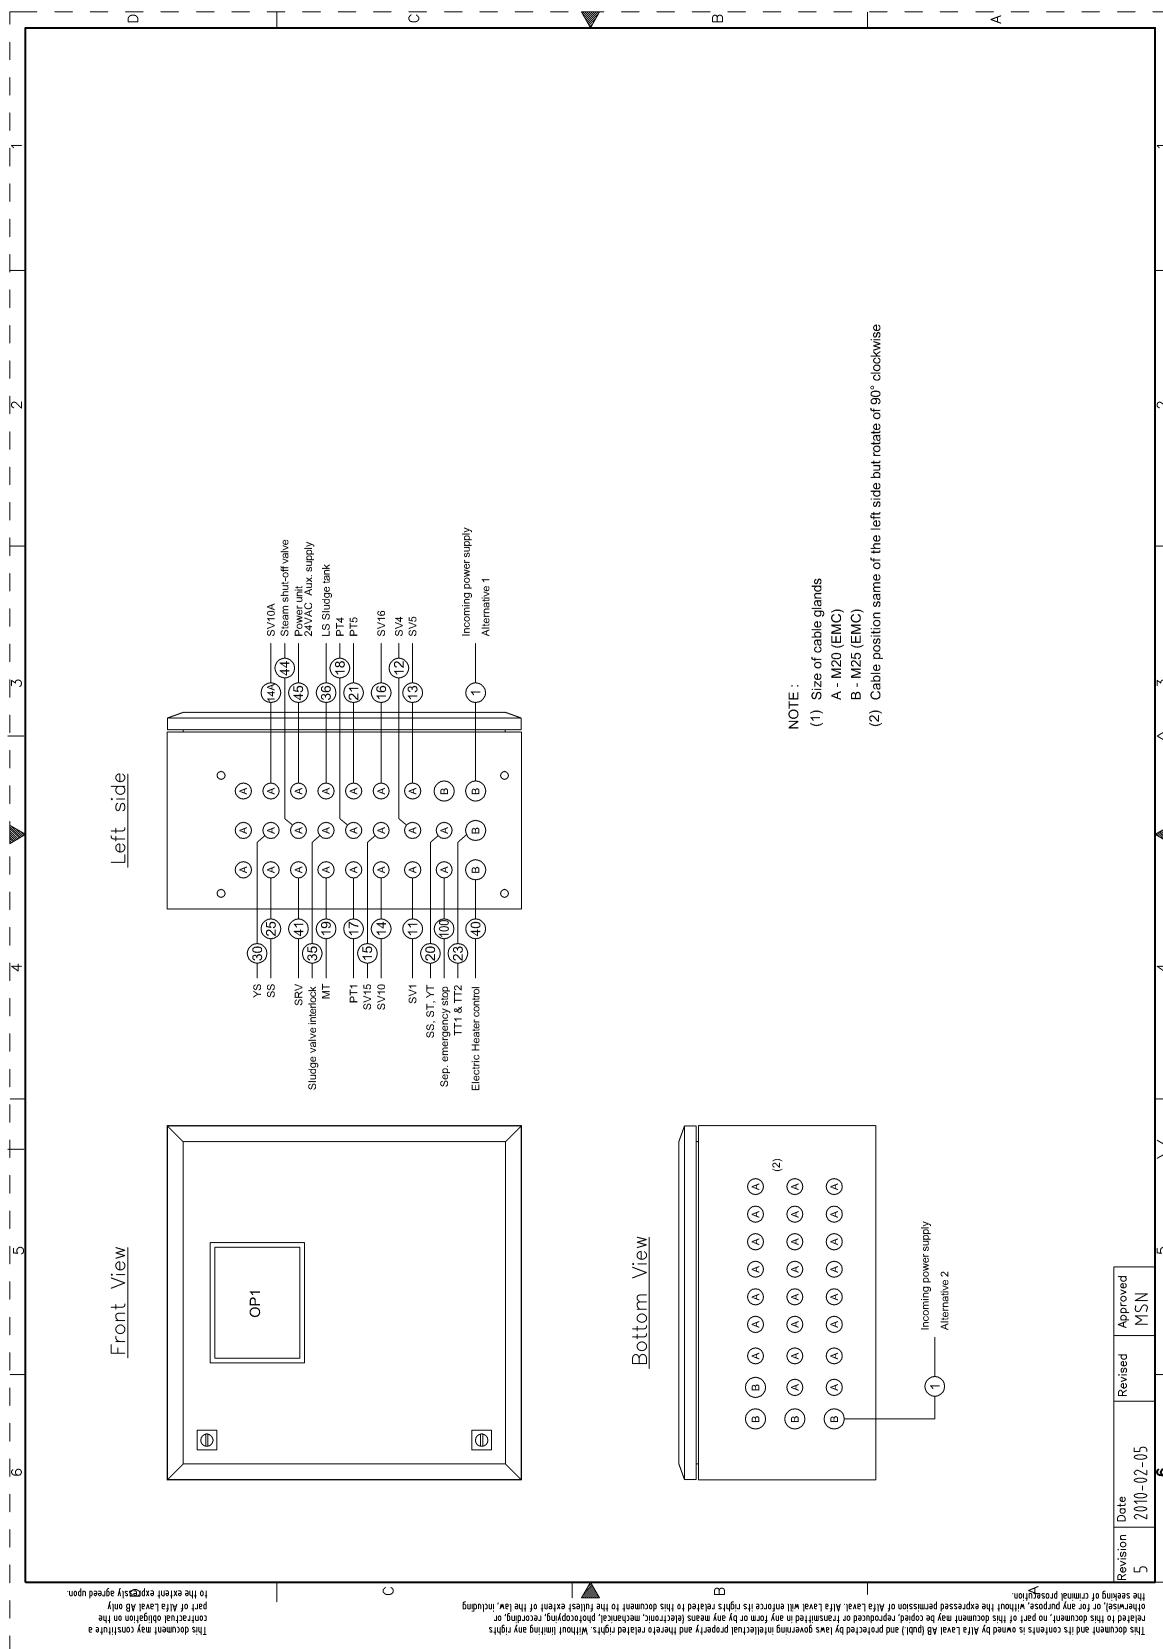


Alfa Laval ref. 580904 Rev. 5

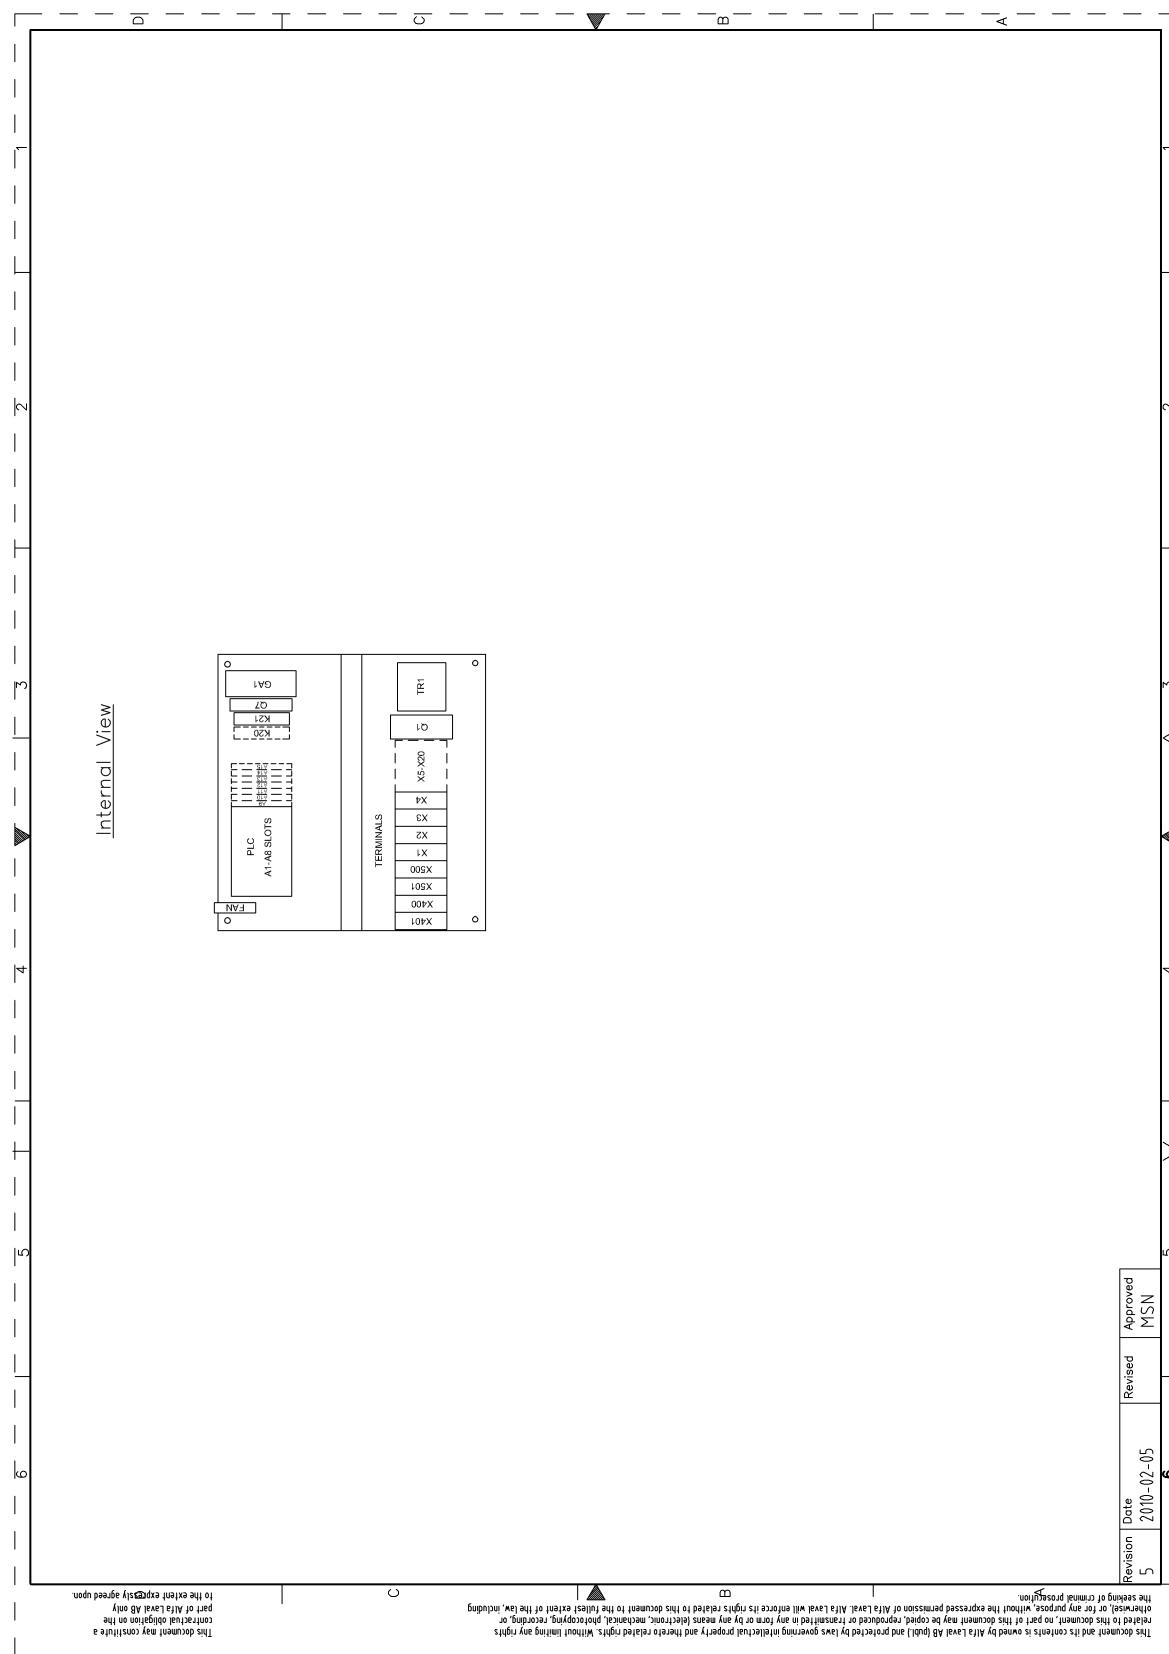


2.15 Control Cabinet Assembly Drawing, Internal

Alfa Laval ref. 581002 Rev. 6

Front view

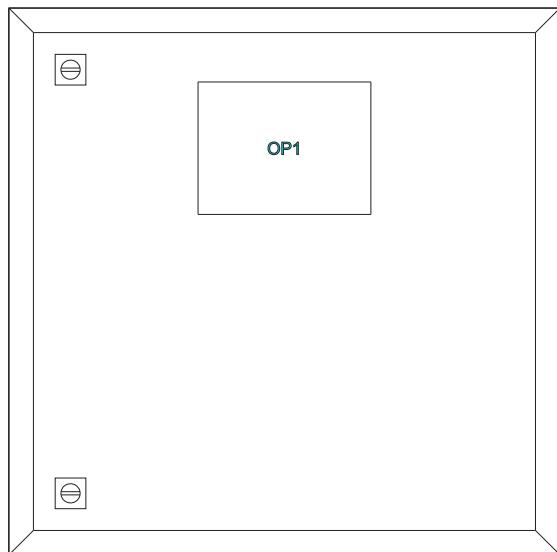

Internal view

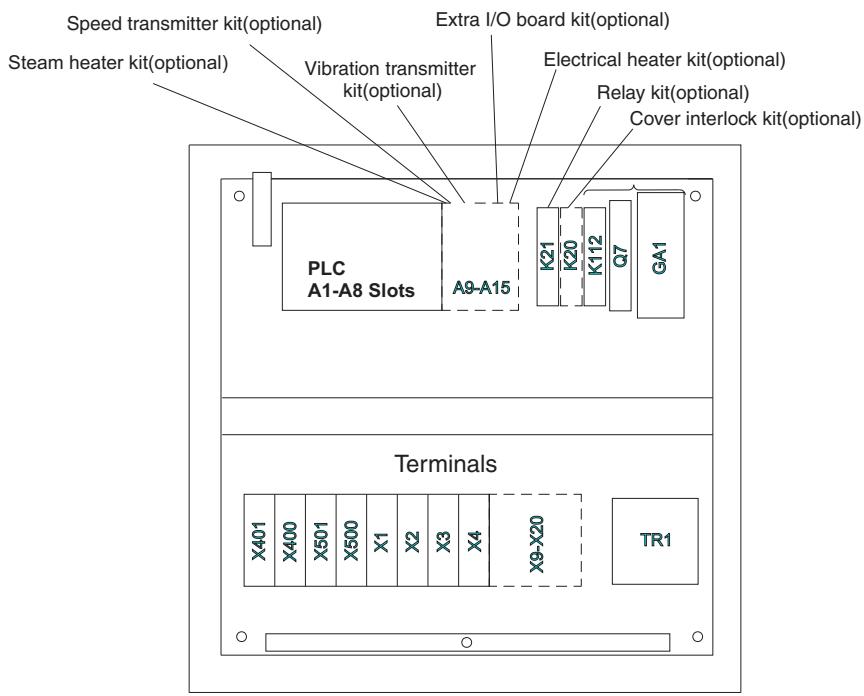

X024902D


2.16 Change of EPC 60 Components

Operating Panel


- Switch power off.
- Remove the connections on the reverse side of the panel.
- Unscrew the four screws holding the panel and remove the panel.
- Mount the new panel and connect in reverse order.

I/O-Board

- Switch power off.
- Hold down the plastic clip on the top of the cable terminal and pivot the cable terminal towards you.

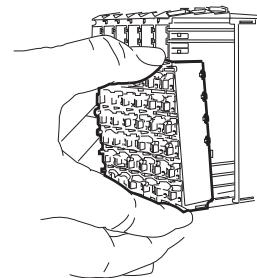


X025001A

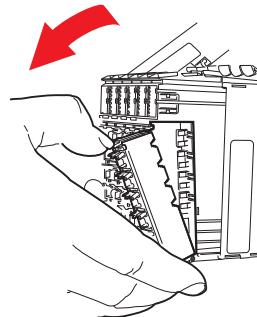


X025002A

- Pull away the cable terminal.

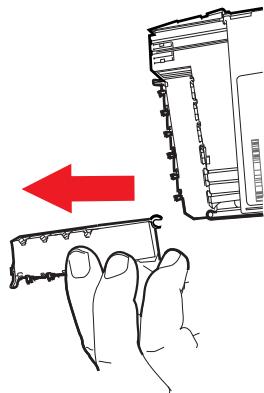


X025008A

- Hold down the triangle on the top of the I/O board and loosen the board.

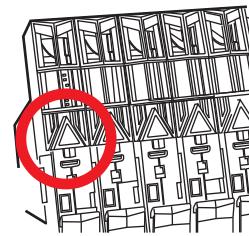

X025003A


- Pull the board straight out (otherwise it can fasten in one of its guides)

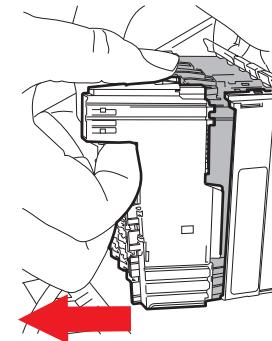

X025004A


- Compare the part number of the new I/O board to the old board to make sure it is correct.
- If changing more than one board at a time, check with the electrical diagram to ensure that the boards are mounted in the right places.

- Mount the new I/O board by pressing it straight into place. Make sure the board is firmly in place otherwise it will be impossible to mount the cable terminal.

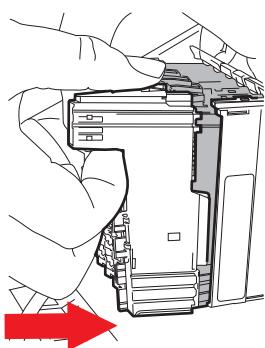


X025005A

- Remount the cable terminal. Make sure that the clip on the bottom of the terminal fastens properly in place on the axel on the bus holder.

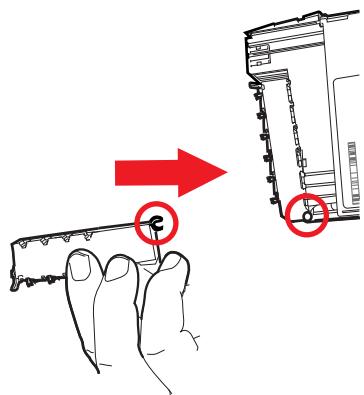

X025007A

- Pivot the terminal on the axel until the clip on the terminal top fastens into place in the I/O board.

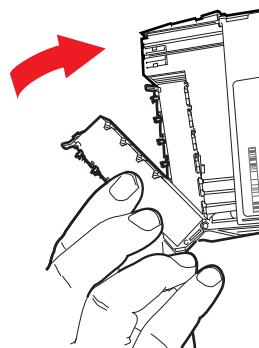


X025006A

3 *Electrical Drawings S 805/815*

3.1 Electrical System Layout S 805/815

Alfa Laval ref. 581082 Rev. 0

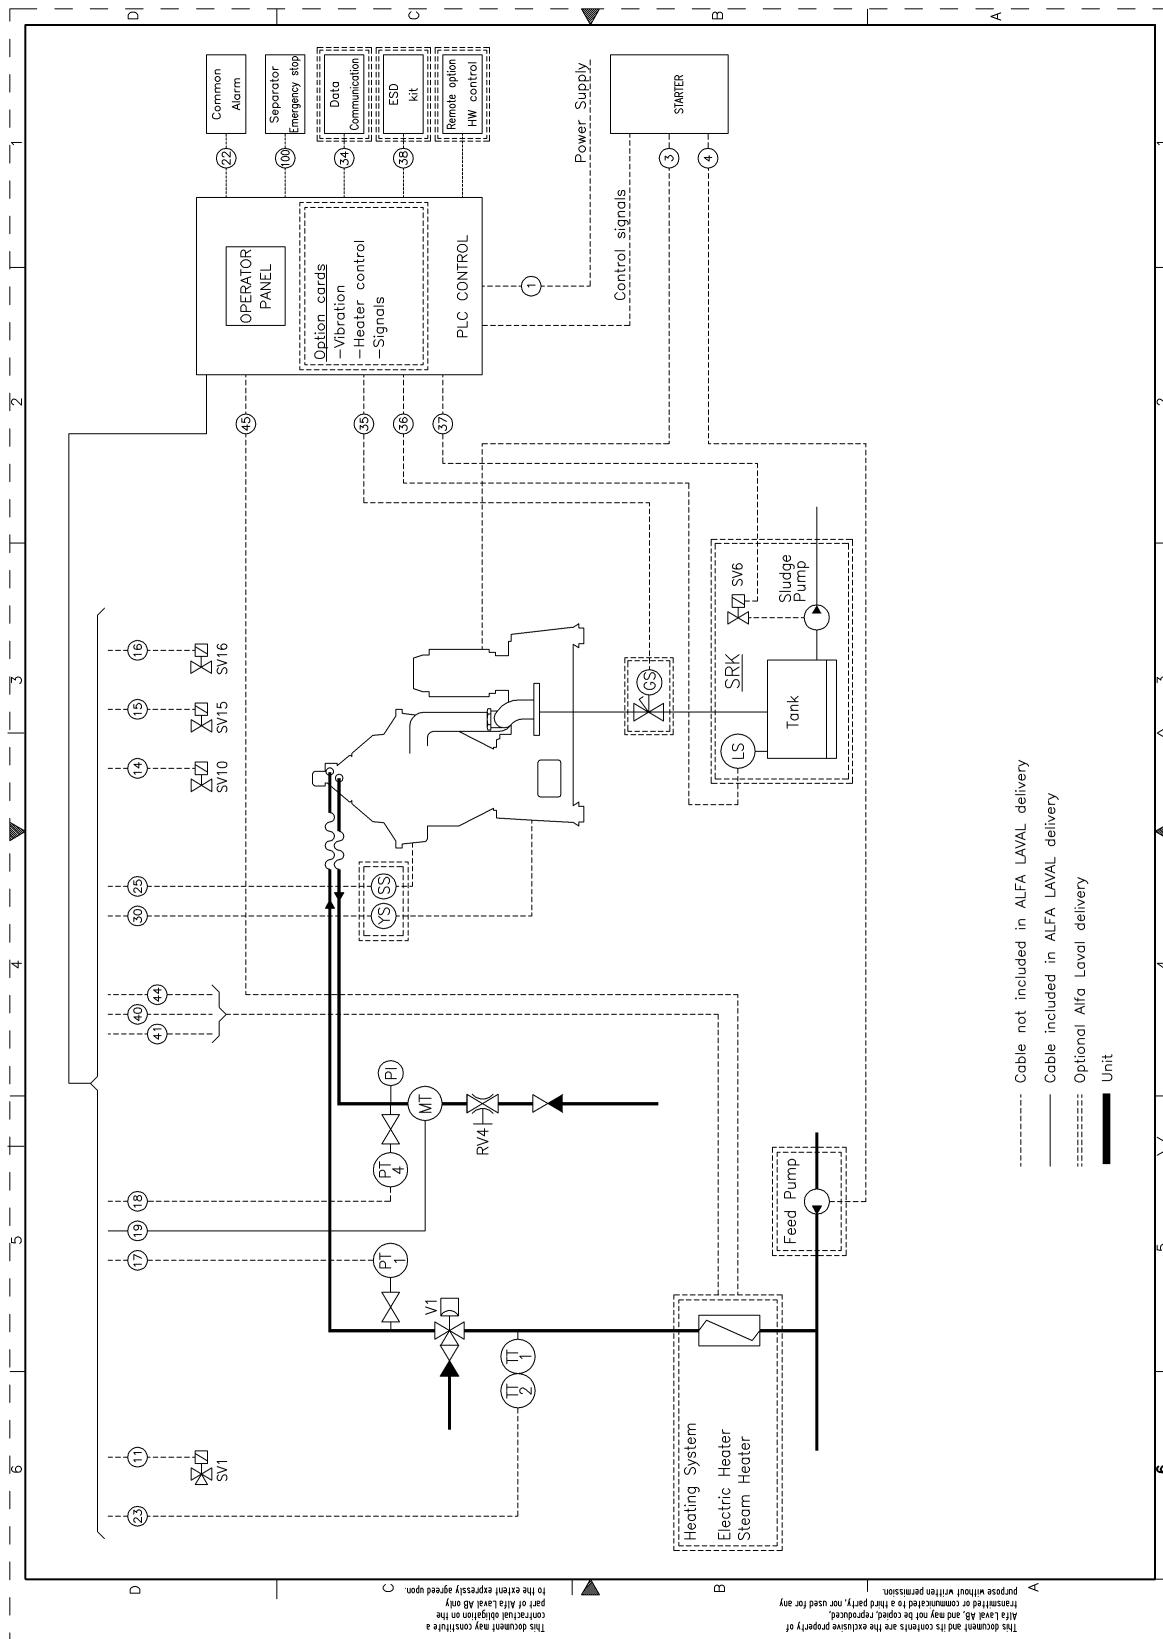

3.2 Control and Starter Electrical Diagrams

3.2.1 Starter cable list

Alfa Laval ref. 580881 Rev. 8

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Basic design (currents according to order)						
1	MPRXCX	3x4	Mains supply		Starter	1) Fuse 20 A
1	MPRXCX	3x10	Mains supply		Starter	1) Fuse 35A
1	MPRXCX	3x16	Mains supply		Starter	1) Fuse 50 A
1	MPRXCX	3x25	Mains supply		Starter	1) Fuse 63 A
1	MPRXCX	3x35	Mains supply		Starter	1) Fuse 80 A
2	MPRXCX	2x2m5	Supply		Starter	1) Fuse 16 A
3	MPRXCX	3x1,5	Starter	Marked 3A	Separator motor	4,0 – 6,3 A
3	MPRXCX	3x2,5	Starter	Marked 3B	Separator motor	6,3 – 16 A
3	MPRXCX	3x4	Starter	Marked 3C	Separator motor	16 – 20 A
3	MPRXCX	3x6	Starter	Marked 3D	Separator motor	20 – 25 A
3	MPRXCX	3x10	Starter	Marked 3E	Separator motor	25 – 32 A
3	MPRXCX	3x16	Starter	Marked 3F	Separator motor	32 – 45 A
3	MPRXCX	3x25	Starter	Marked 3G	Separator motor	45 – 63 A
Optional or customer's own feed pump (as ordered)						
4	MPRXCX	3x25	Starter		Feed pump	²⁾
Optional sludge handling (as ordered)						
35	RFE-HF	1x4x0,7 5	Starter		GS, Valve switch	
36	RFE-HF	1x2x0,7 5	Starter		LS, Sludge level	
37	RFE-HF	1x2x0,7 5	Starter		SV6, Solenoid valve	For pneumatic sludge pump
73	RFE-HF	2x0,75	Starter		Heatpac on tank	Included in heater element
Optional space heating (as ordered)						
71	MPRXCX	2x1,5	Starter		Separator pump	
73	MPRXCX	2x1,5	Starter		Feed pump	²⁾
Optional heat tracing (as ordered)						
74	MPRXCX	2x1,5	Starter		Thermostat	
75		3x1,5	Starter		Heating cable	

1) Cable not included in Alfa Laval delivery.

2) Cable only included in the Alfa Laval delivery when Feed Pump is delivered mounted on Module

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Signal cables (currents according to order)						
11	RFE-HF	1x2x0,7 5	EPC 60		SV1	
12	RFE-HF	1x2x0,7 5	EPC 60		SV4	
13	RFE-HF	1x2x0,7 5	EPC 60		SV5	S-type only
14	RFE-HF	1x2x0,7 5	EPC 60		SV10	
14 A	RFE-HF	1x2x0,7 5	EPC 60		SV10A	Lube oil only
15	RFE-HF	1x2x0,7 5	EPC 60		SV15	
16	RFE-HF	1x2x0,7 5	EPC 60		SV16	
17	RFE-HF	1x2x0,7 5	EPC 60		PT1	¹⁾
18	RFE-HF	1x2x0,7 5	EPC 60		PT4	
19	RFE-HF	1x4x0,7 5	EPC 60		MT	S-type only
20	RFE-HF	4x2x0,7 5	EPC 60		ST, (YT, SS)	Not for P605, P615, S805, S815
21	RFE-HF	1x2x0,7 5	EPC 60		PT5	S-type only
22	RFE-HF	1x2x0,7 5	EPC 60		Common alarm	²⁾
23	RFE-HF	4x2x0,7 5	EPC 60		TT1/TT2	³⁾
Options (as ordered)						
25	RFE-HF	1x4x0,7 5	EPC 60		SS	²⁾ Only for P605, P615, S805, S815
30	RFE-HF	1x4x0,7 5	EPC 60		YS	²⁾ Only for P605, P615, S805, S815
38	MPRXCX	4x1,5	EPC 60		Syst. Emergency	^{2) 4)}
100	MPRXCX	4x1,5	EPC 60		Sep. Emergency stop	^{2) 4)}
Optional Electric Heater (as ordered)						
40	RFE-HF	4x2x0,7 5	Starter		Power unit	
45	RFE-HF	1x2x0,7 5	Starter		Power unit	
Optional heat tracing (as ordered)						
41	RFE-HF	1x4x0,7 5	EPC 60		Steam reg. valve	
44	RFE-HF	1x2x0,7 5	EPC 60		Shut-off valve	
50	RJ45 Cat 5e		EPC 60 CPU		Client remote data communication	^{2), 5)}

- 1) Cable not included in Alfa Laval delivery
- 2) Cable only included in the Alfa Laval delivery when PT1 is delivered mounted on Module.
- 3)Cable only included in the Alfa Laval delivery when Electric Heater is delivered mounted on Module.
- 4) This cable cannot be longer than 25 m to avoid voltage drop.
- 5) Crossconnection cable only included in Alfa Laval delivery when multiple modules is delivered.

Other equivalent and approved cables may be used.

Cable areas are calculated with correction factor 0.7.

Cables used are Shipboard Cables, designed according to IEC 60092-3.

Flame retardant according to IEC 60332-1-2 and IEC 60332-3-22.

Halogen-free according to IEC 60754 series.


Smoke emission according to IEC 61034 series.

All power cables should be Signal Shielded Cables with the shield properly connected to earth as shown in the electrical drawings.

For armoured power cables, the armour must be connected to earth, as shown in the electrical drawings, and must give sufficient EMI protection. Copper wire armouring is normally used.

3.2.2 Separator Interconnection Diagram

Alfa Laval ref. 581086 Rev. 3

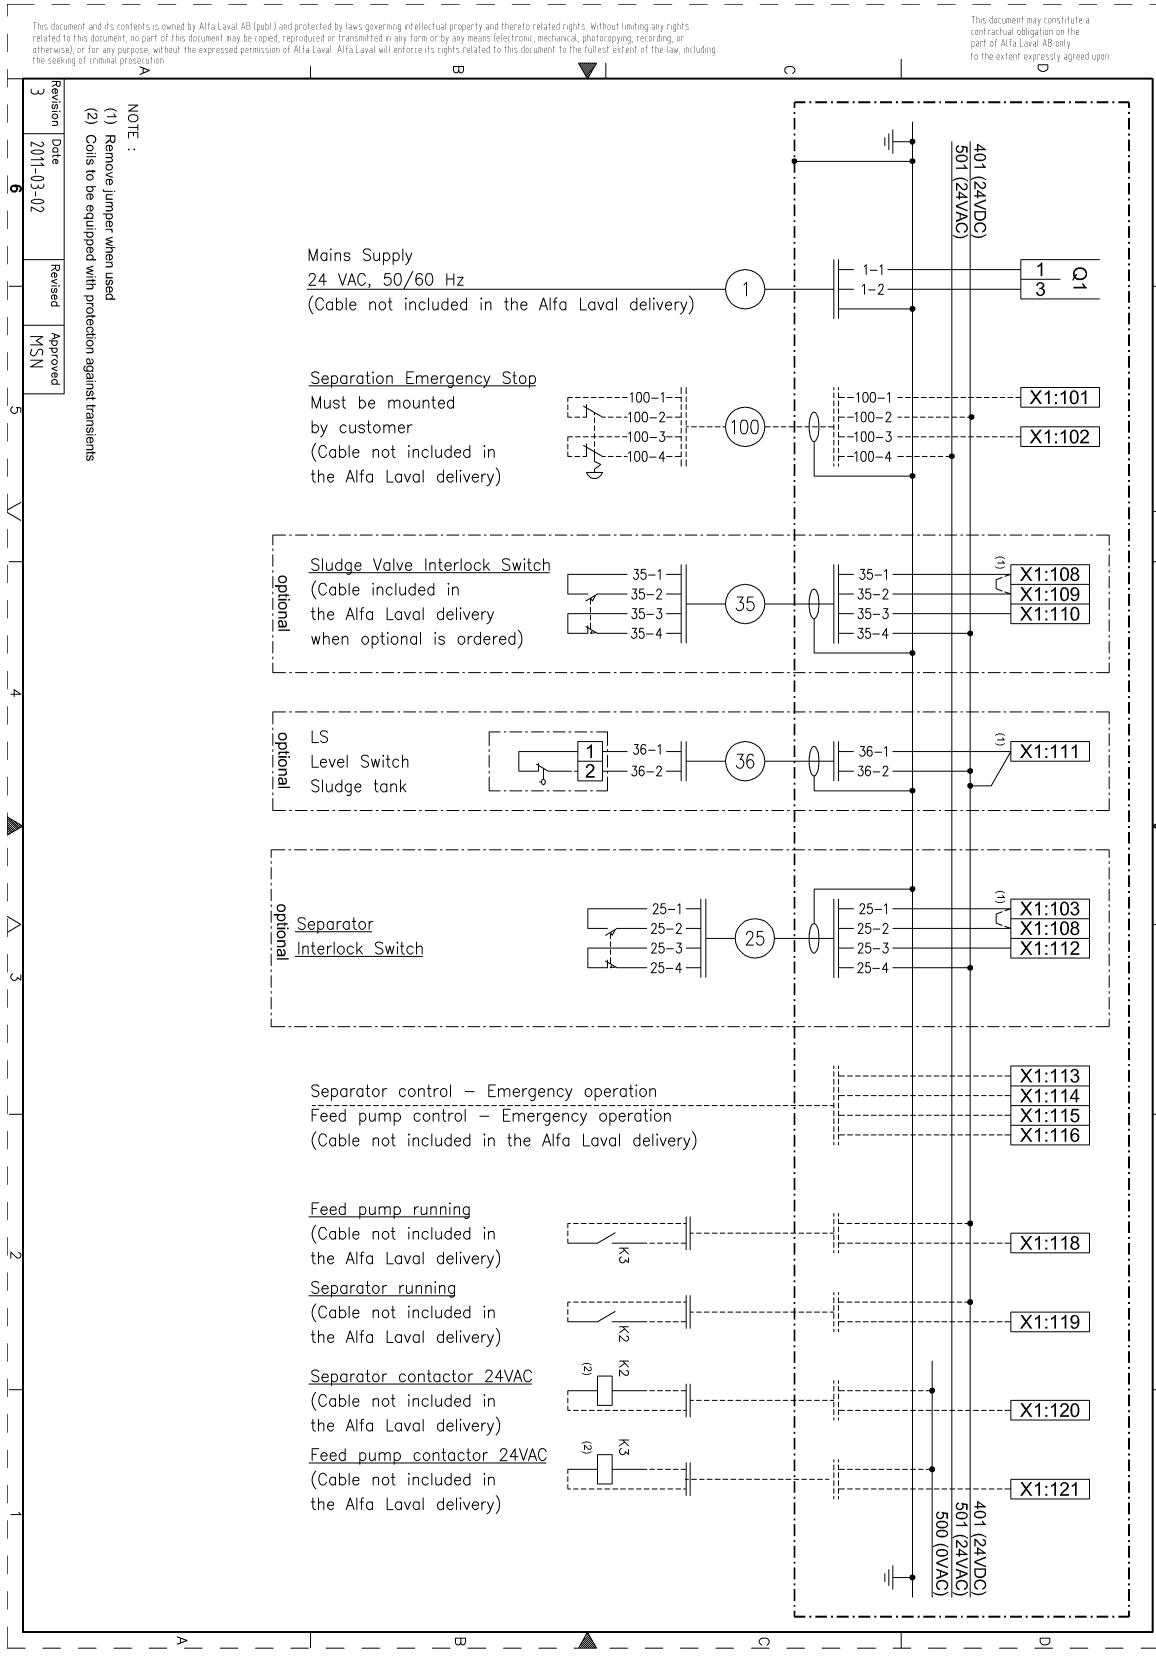


581086#3_00

Alfa Laval ref. 581086 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

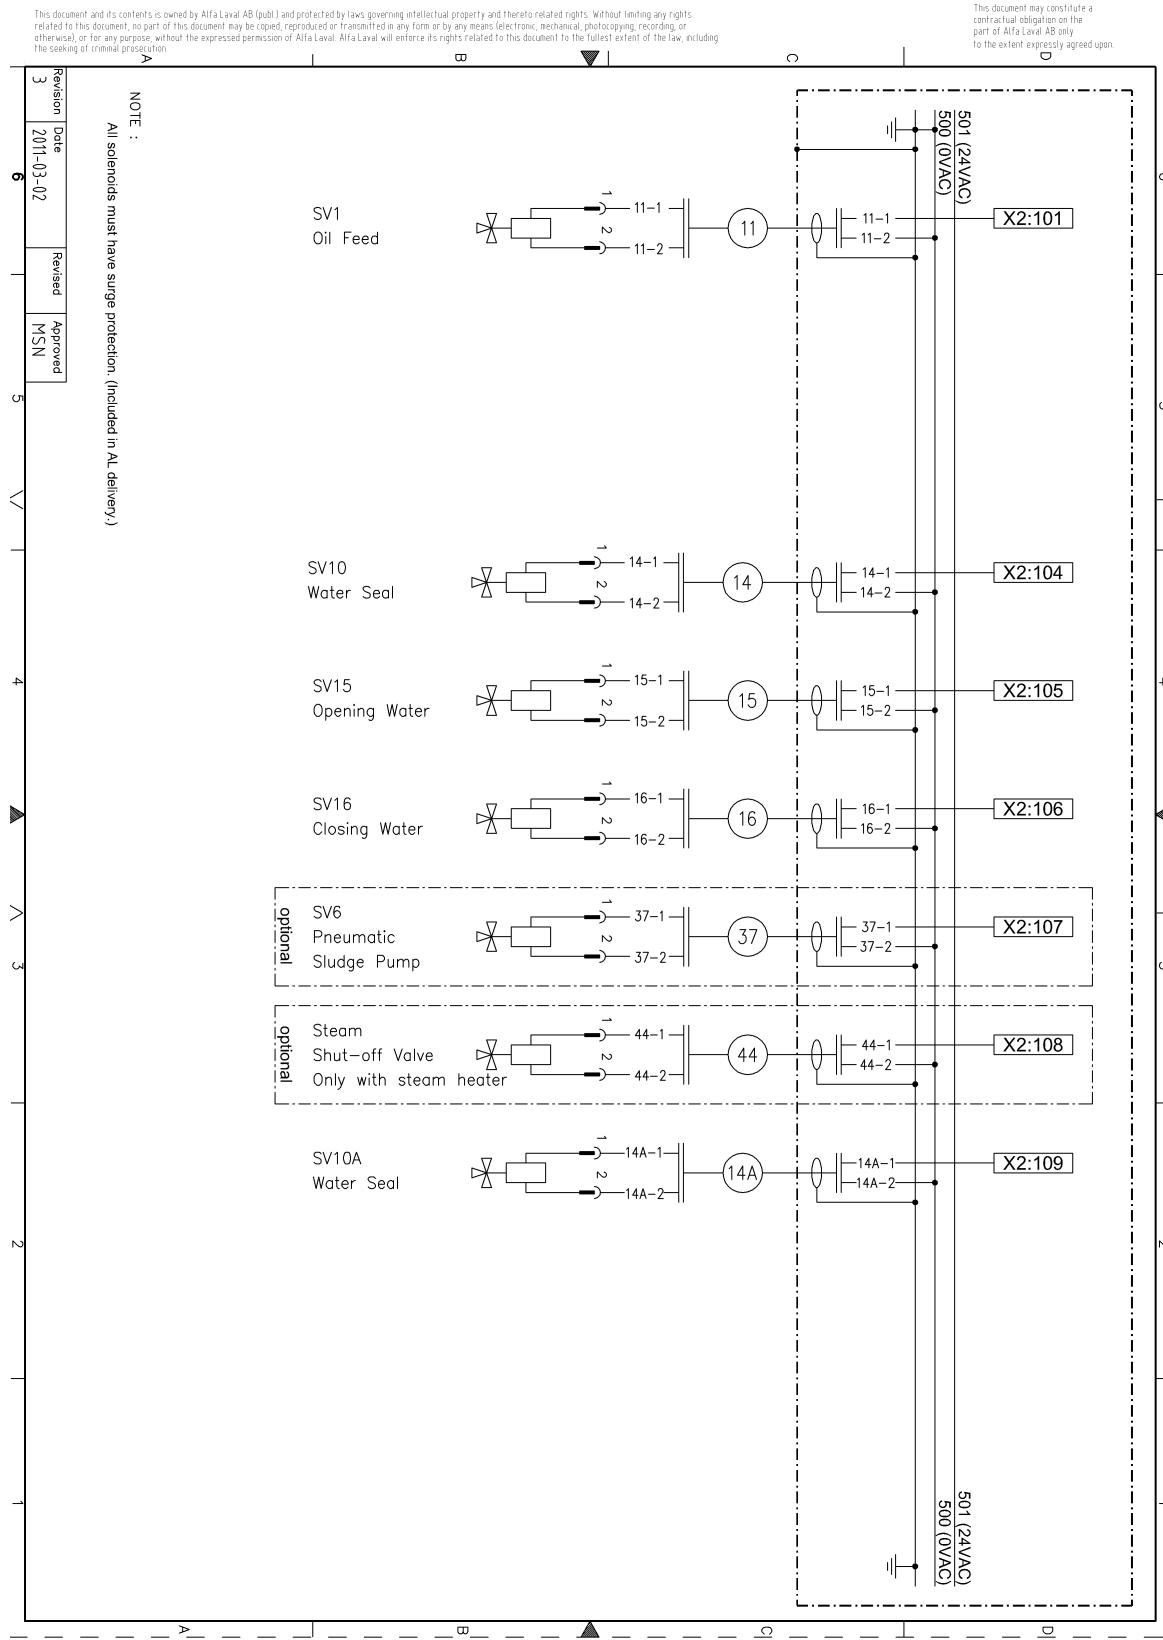

Alfa Laval ref. 581086 Rev. 3


This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

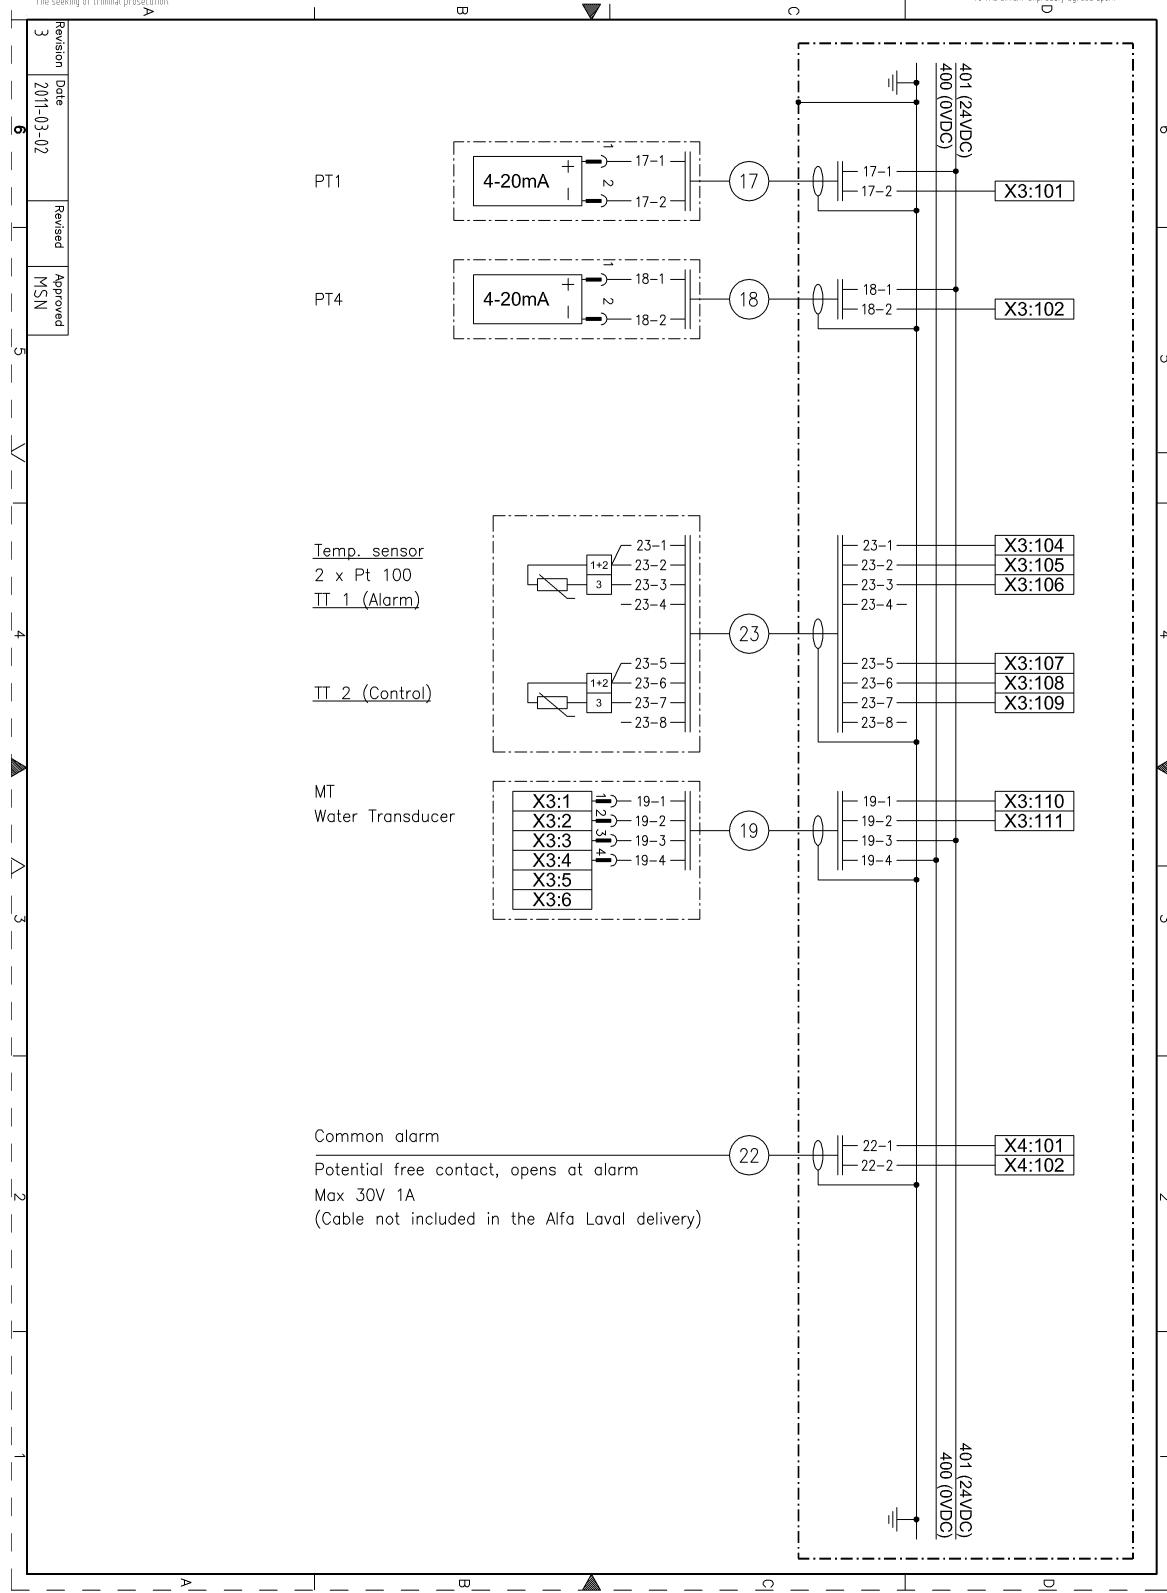


3.2.3 Steam Regulating Valve (optional) Interconnection Diagram

Alfa Laval ref. 580886 Rev. 1

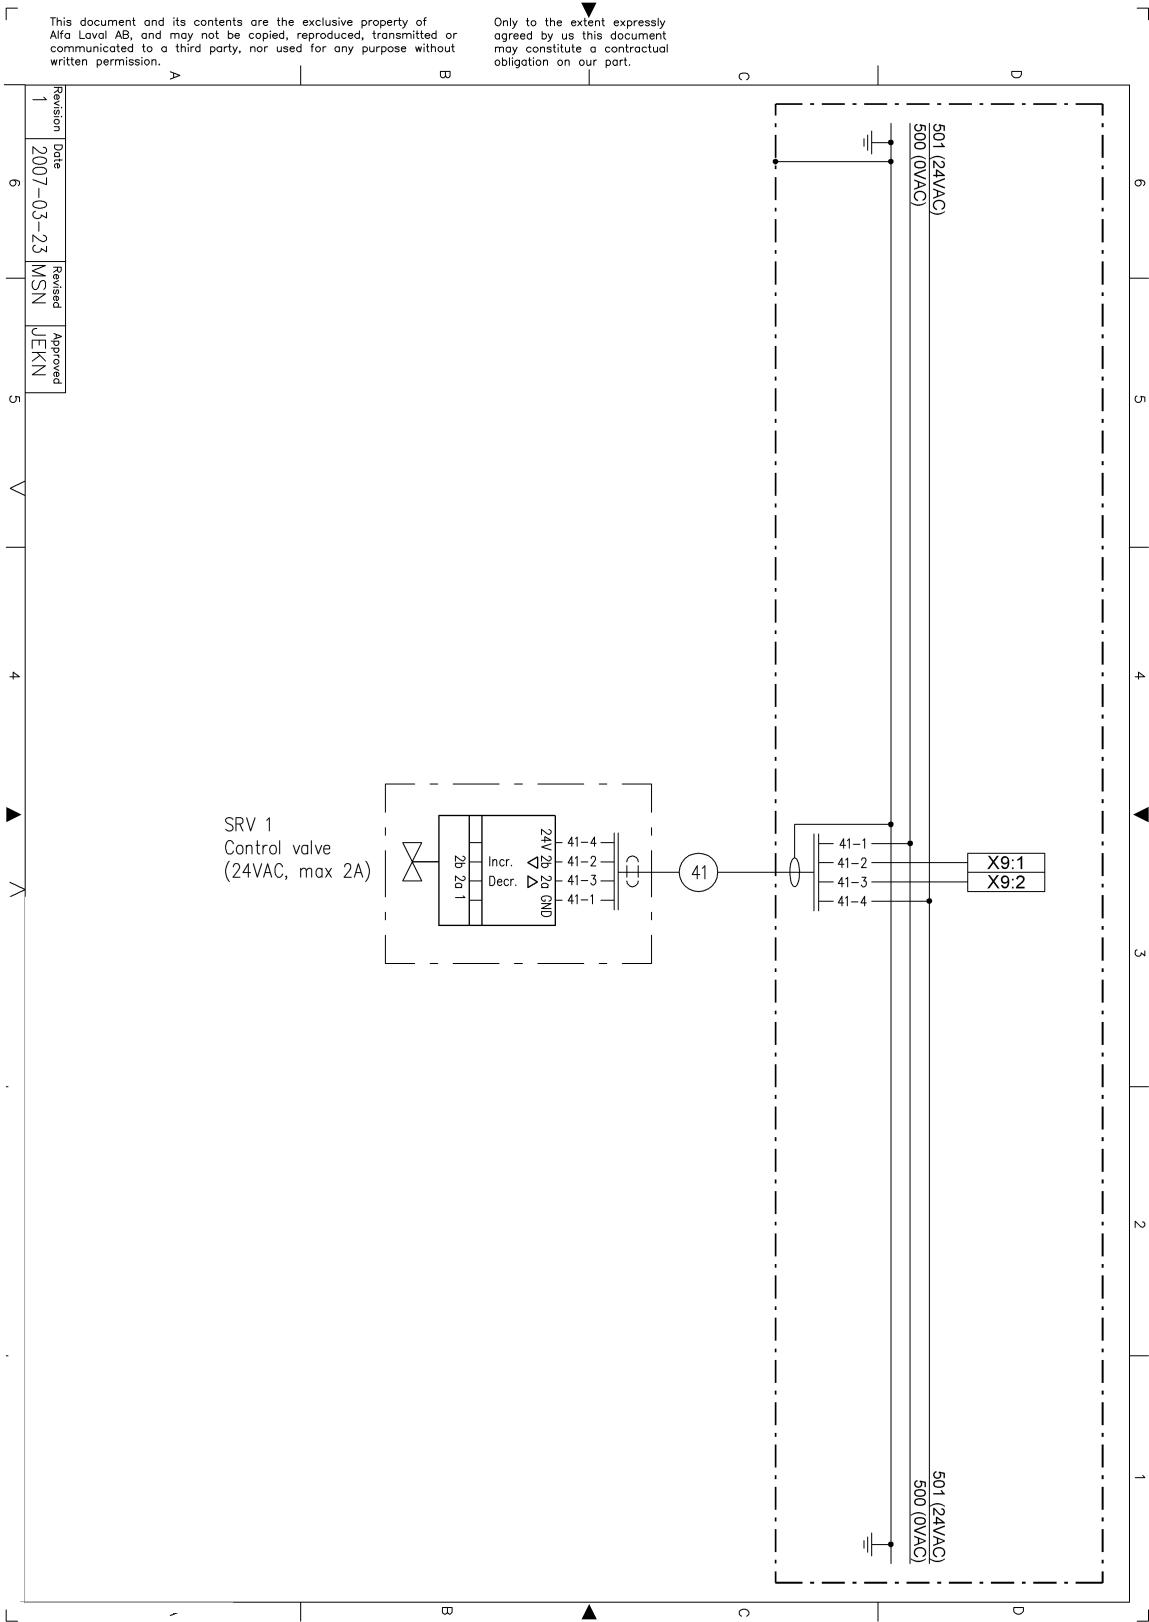

3.2.4 Vibration Switch (optional) Interconnection Diagram


Alfa Laval ref. 581063 Rev. 2

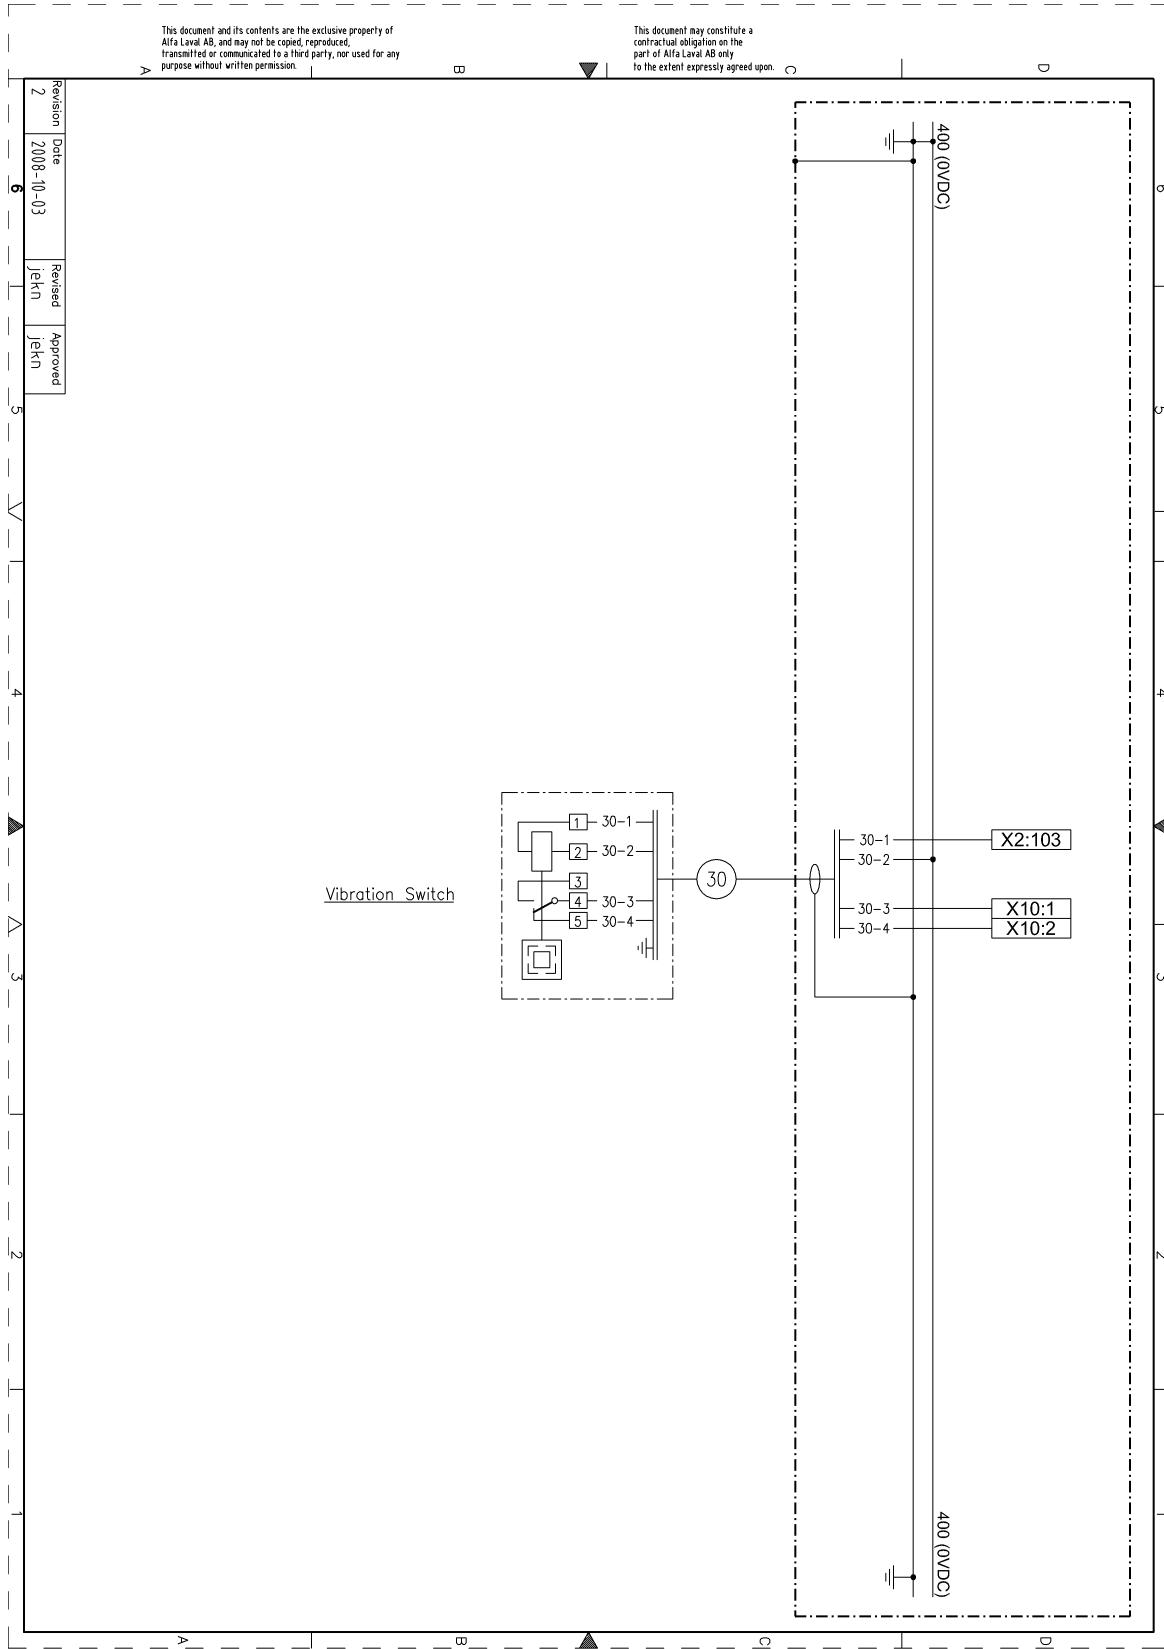

581063#2_00


3.2.5 Electric Heater (optional) Interconnection Diagram

Alfa Laval ref. 580896 Rev. 1

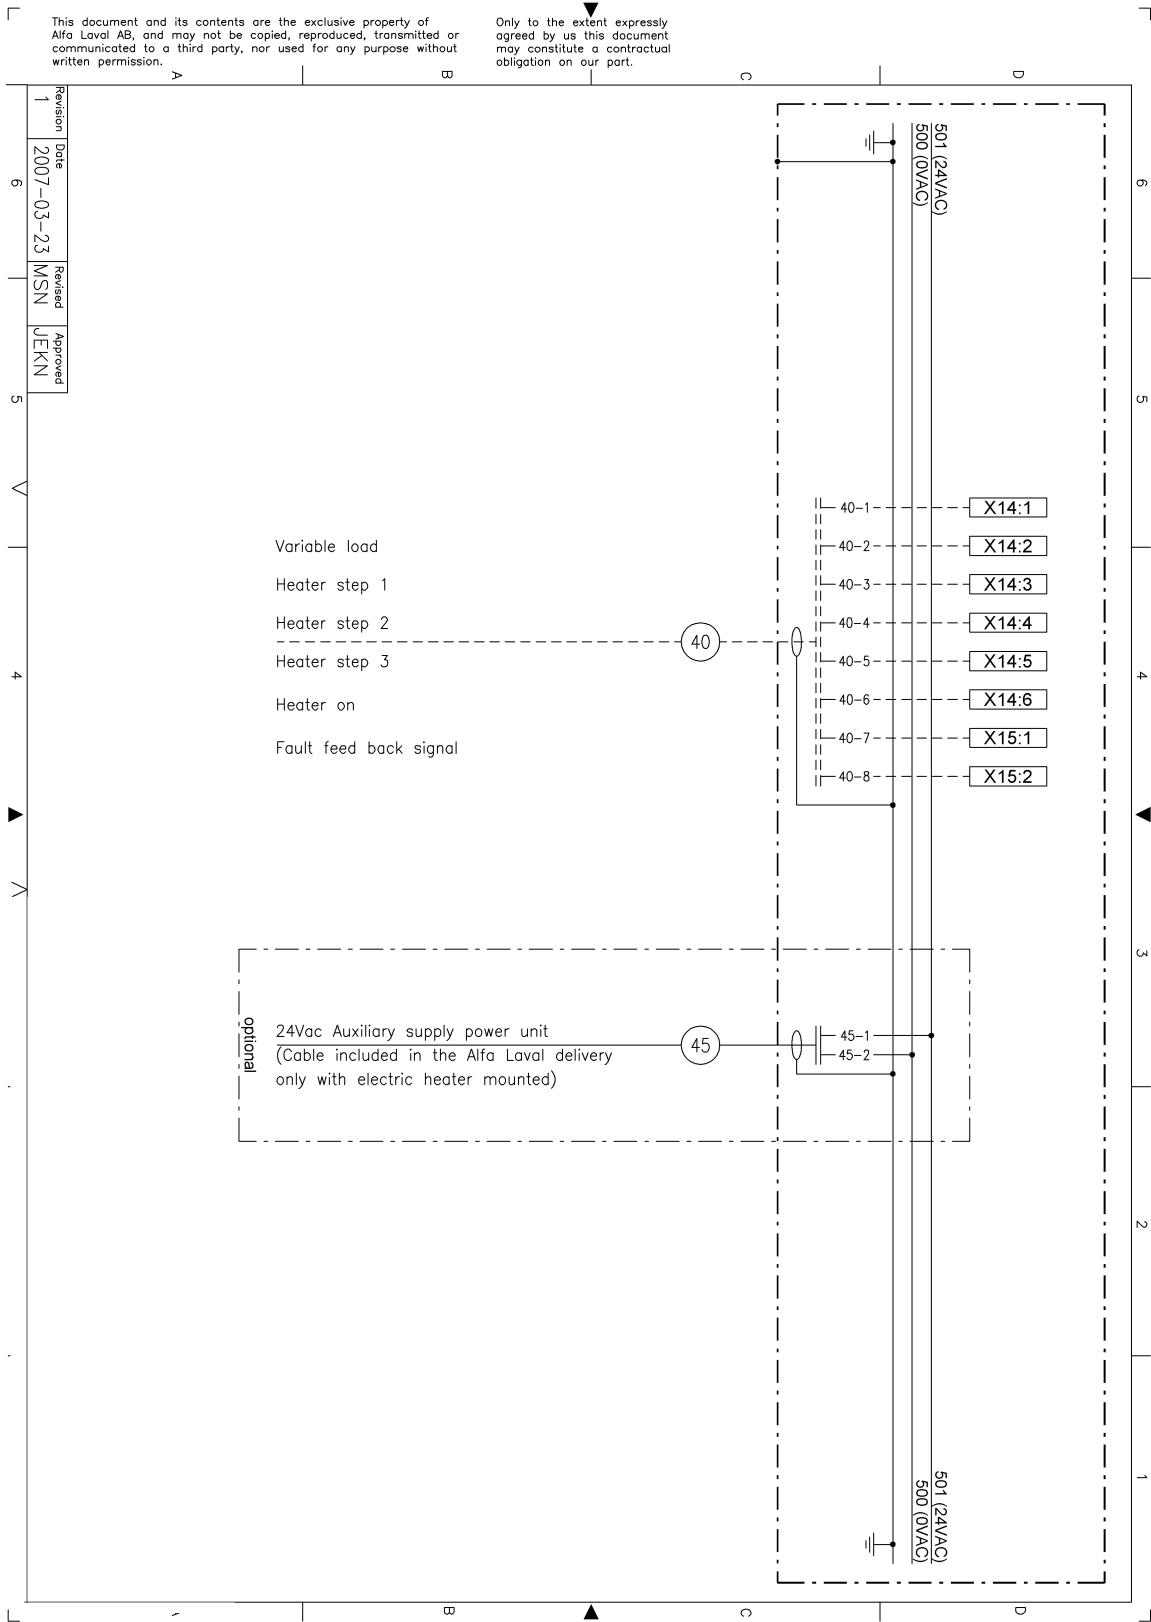

3.2.6 I/O (optional) Interconnection Diagram


Alfa Laval ref. 580894 Rev. 4

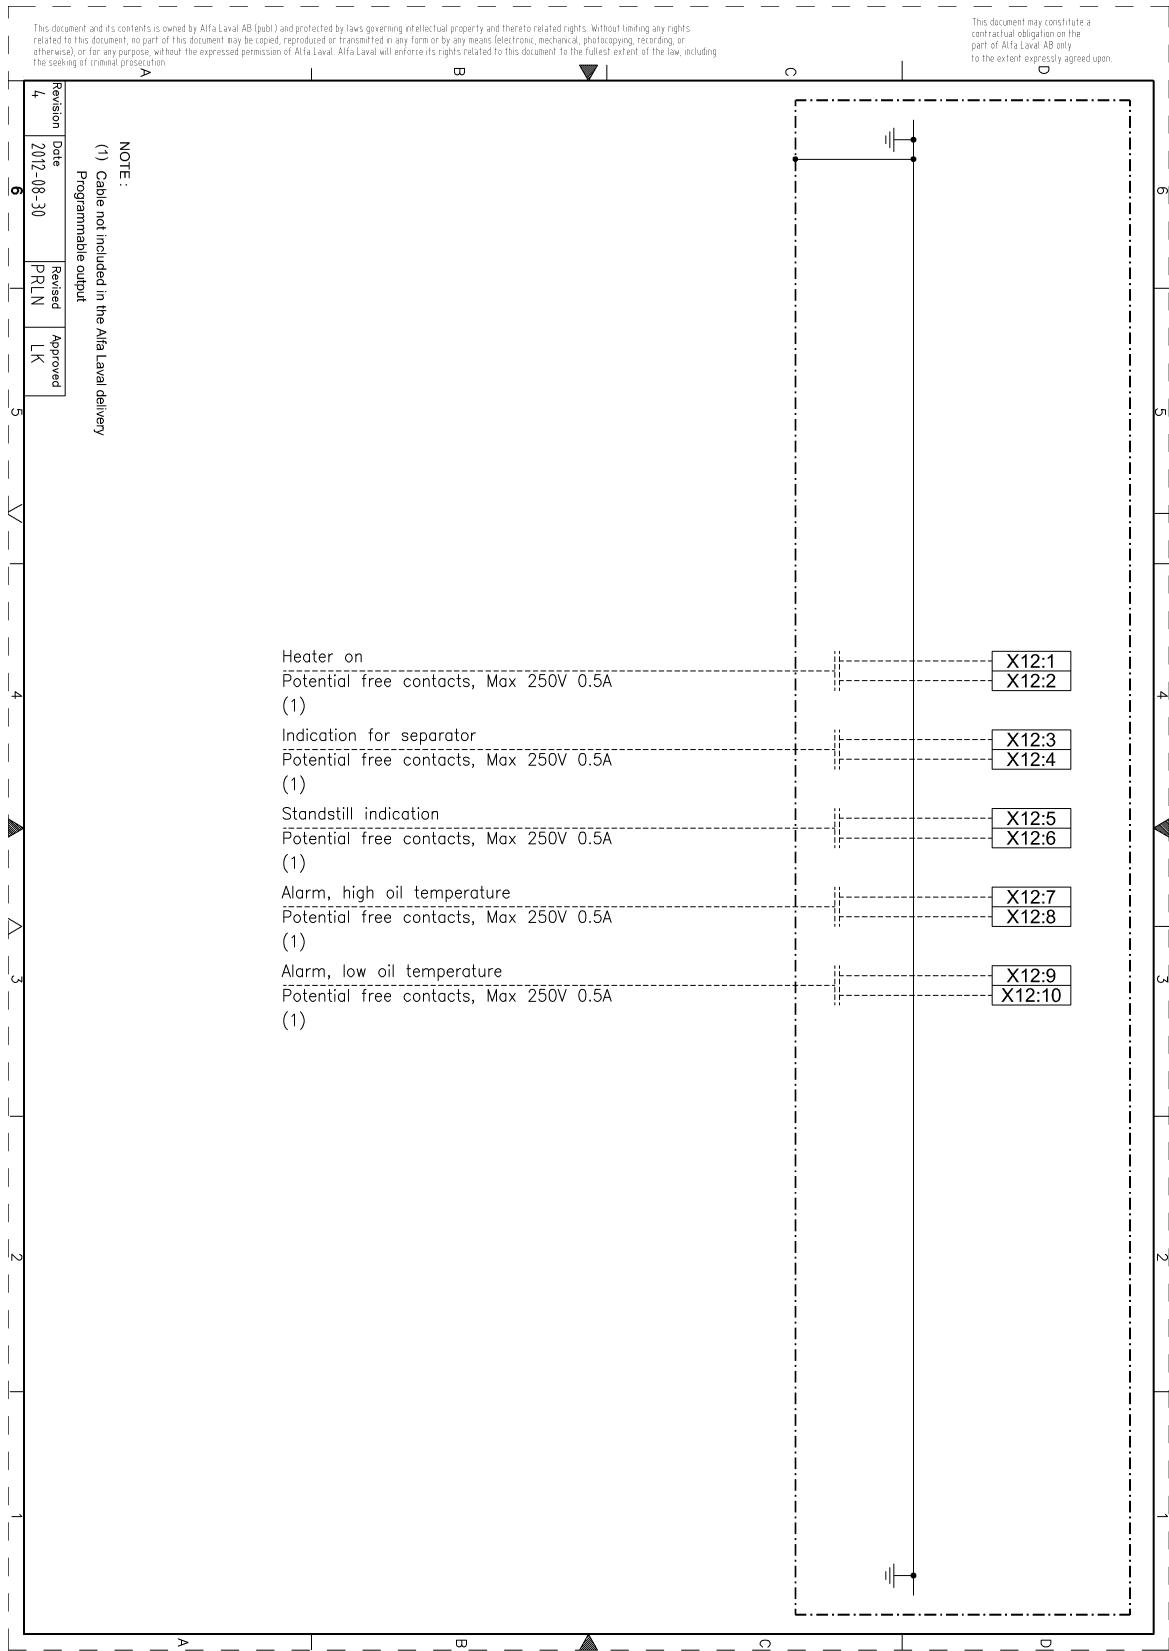

Alfa Laval ref. 580894 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

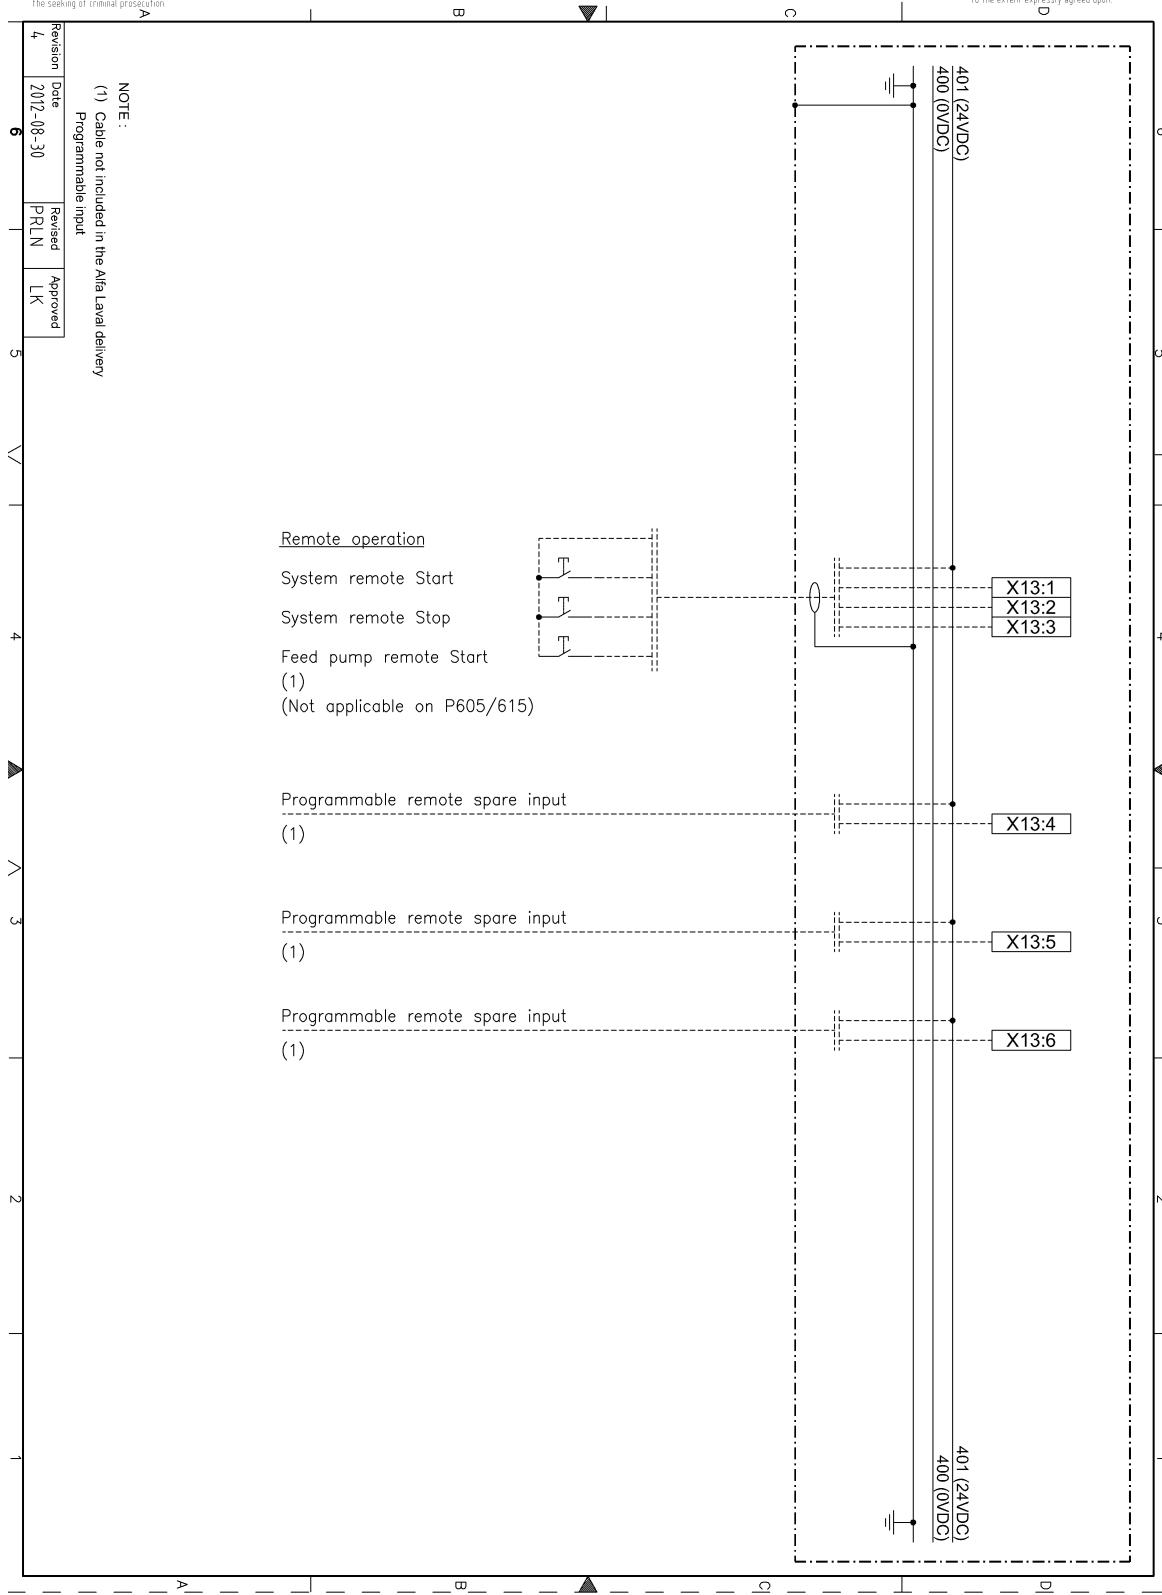


3.2.7 Heat Tracing (optional) Interconnection Diagram

Alfa Laval ref. 580884 Rev. 0


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

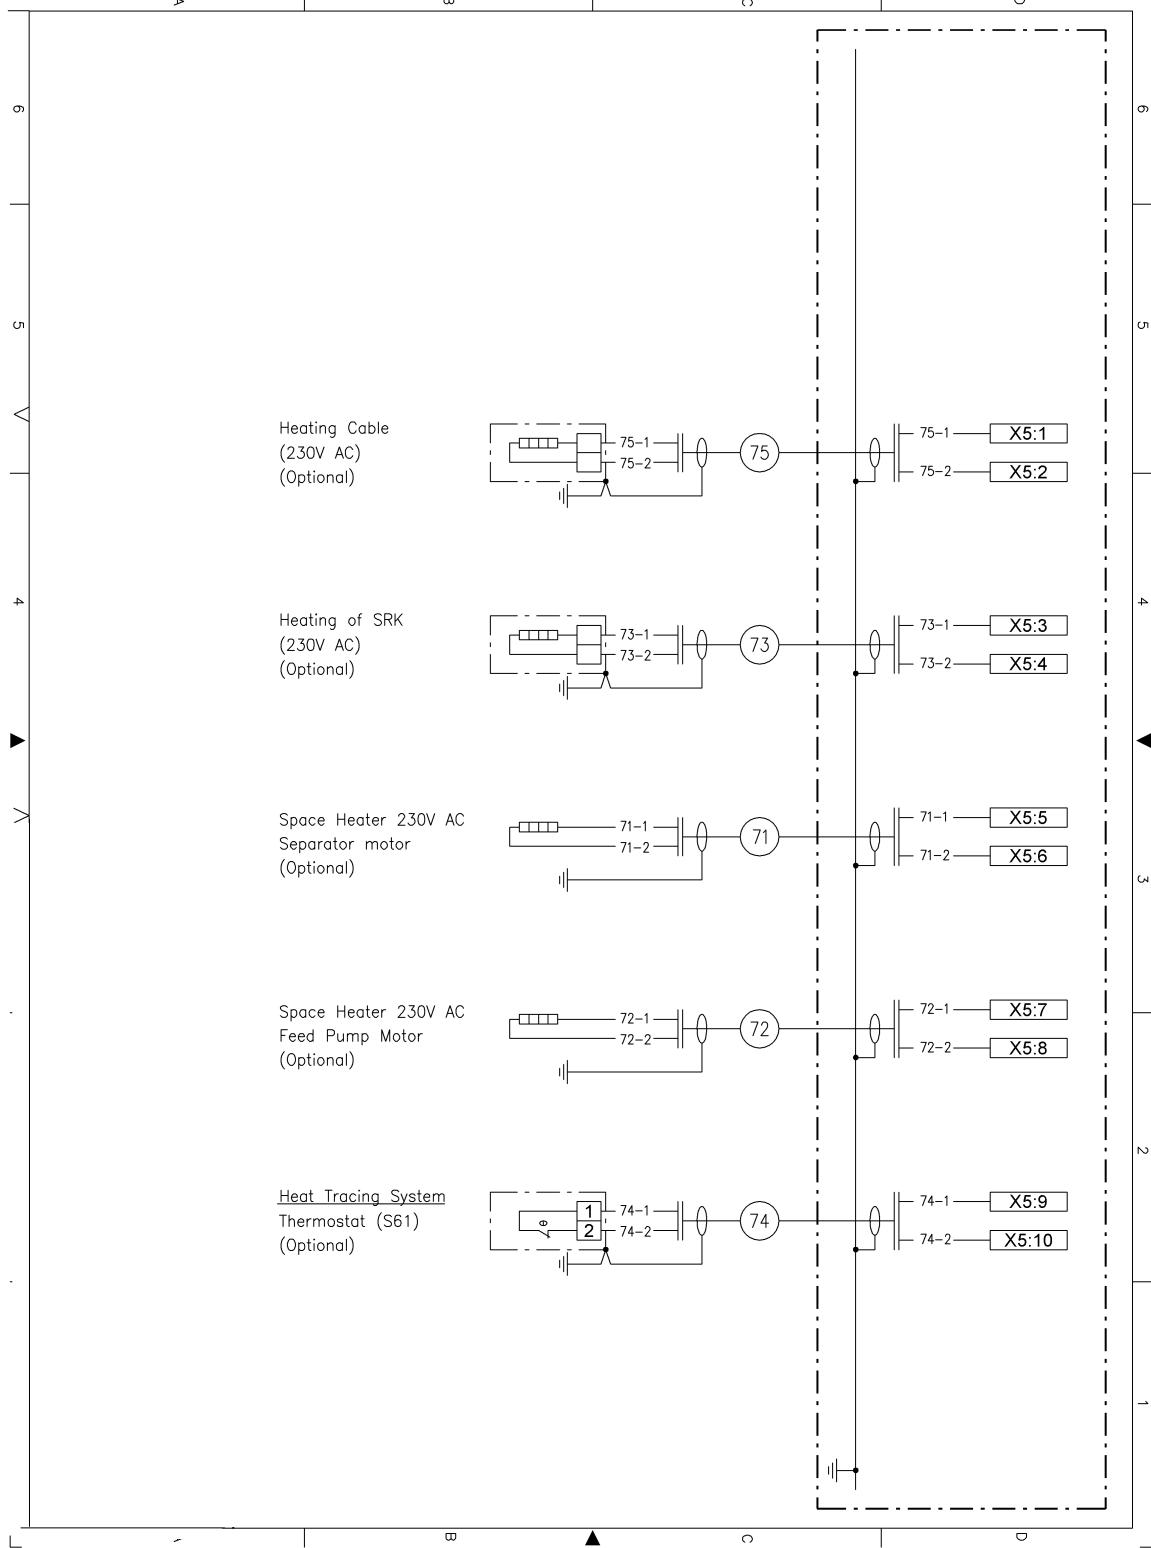


3.2.8 Emergency Shutdown Interconnection Diagram

Alfa Laval ref. 580898 Rev. 0

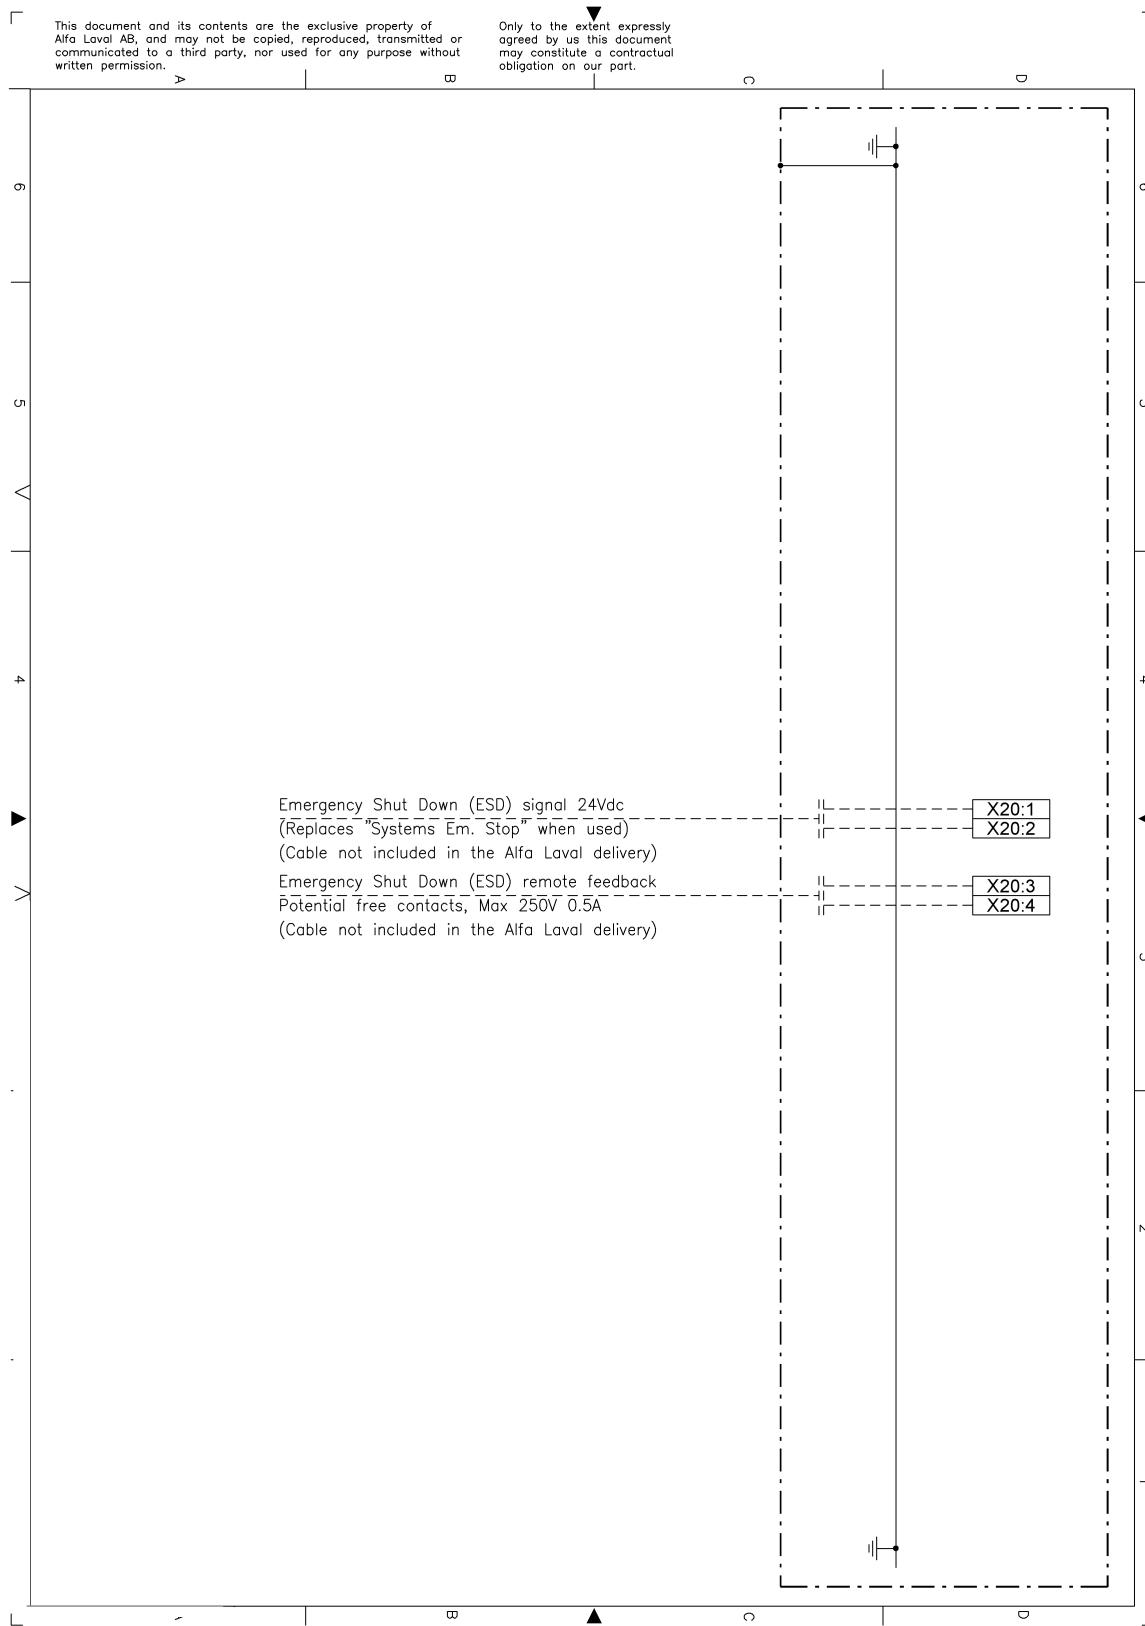

3.2.9 Circuit Diagram

Alfa Laval ref. 581085 Rev. 4

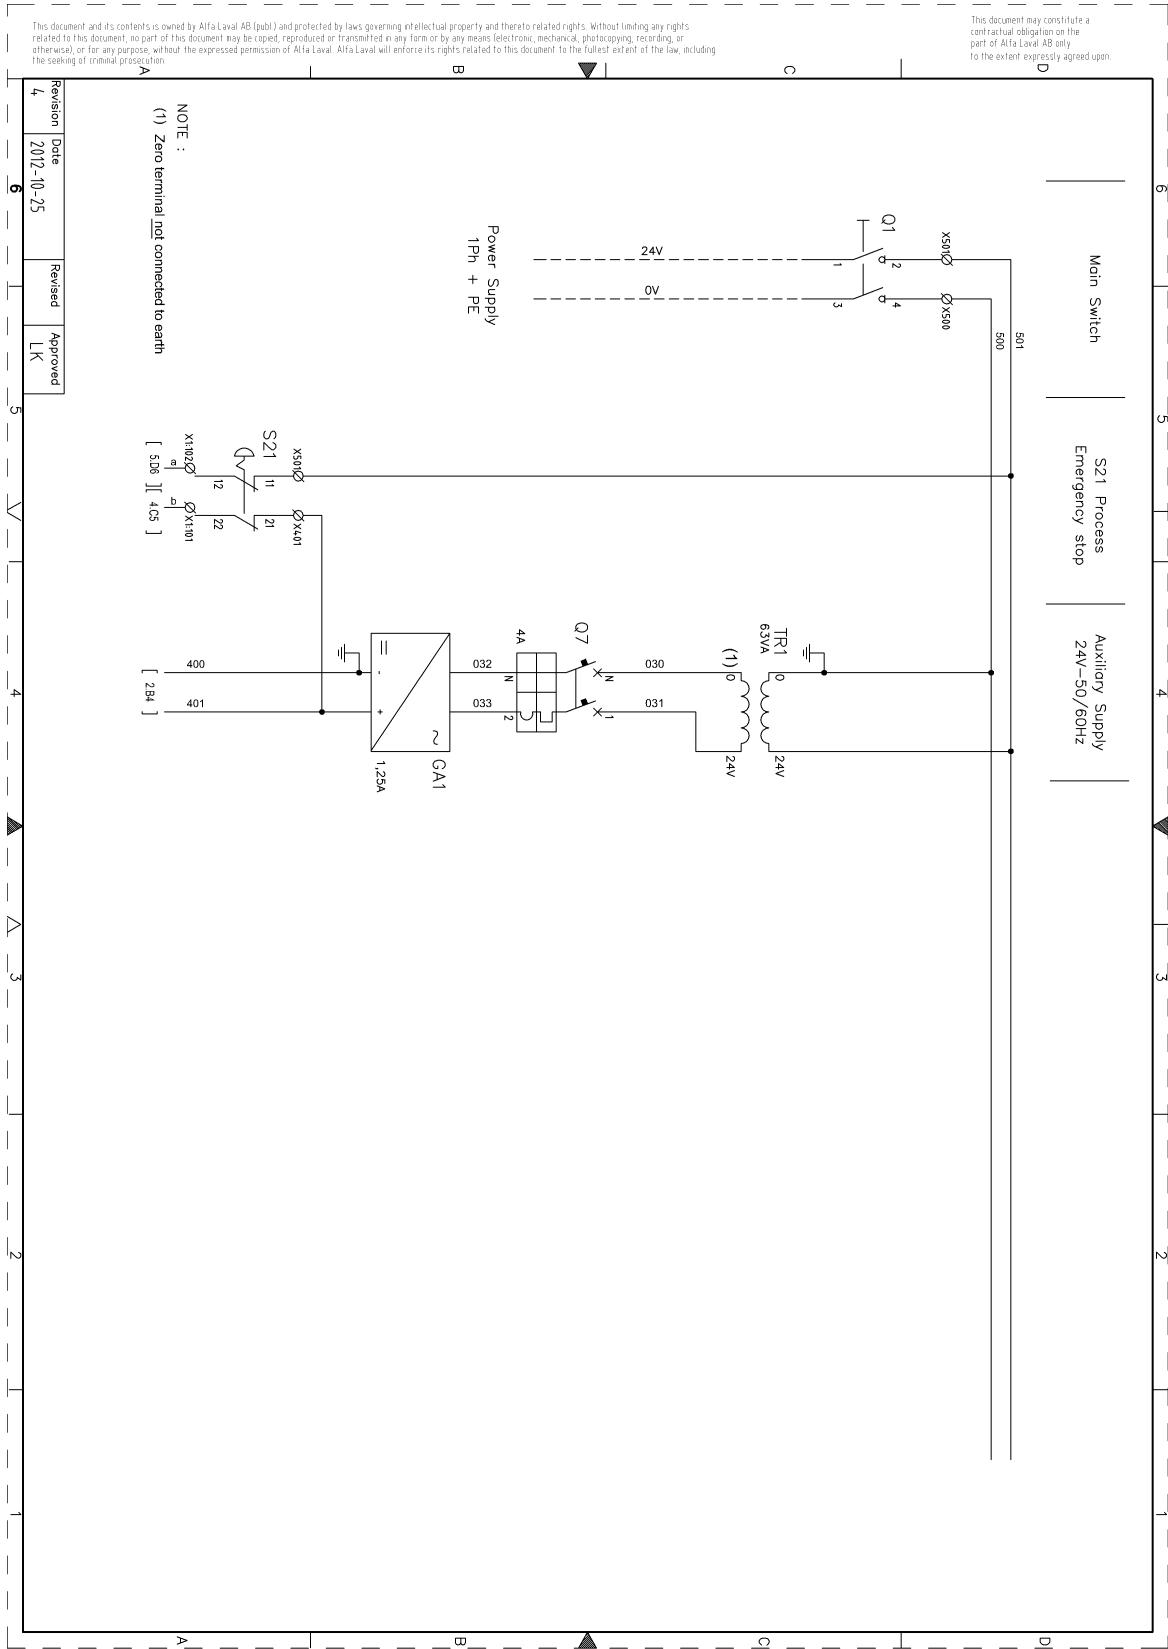


581085#4_00

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

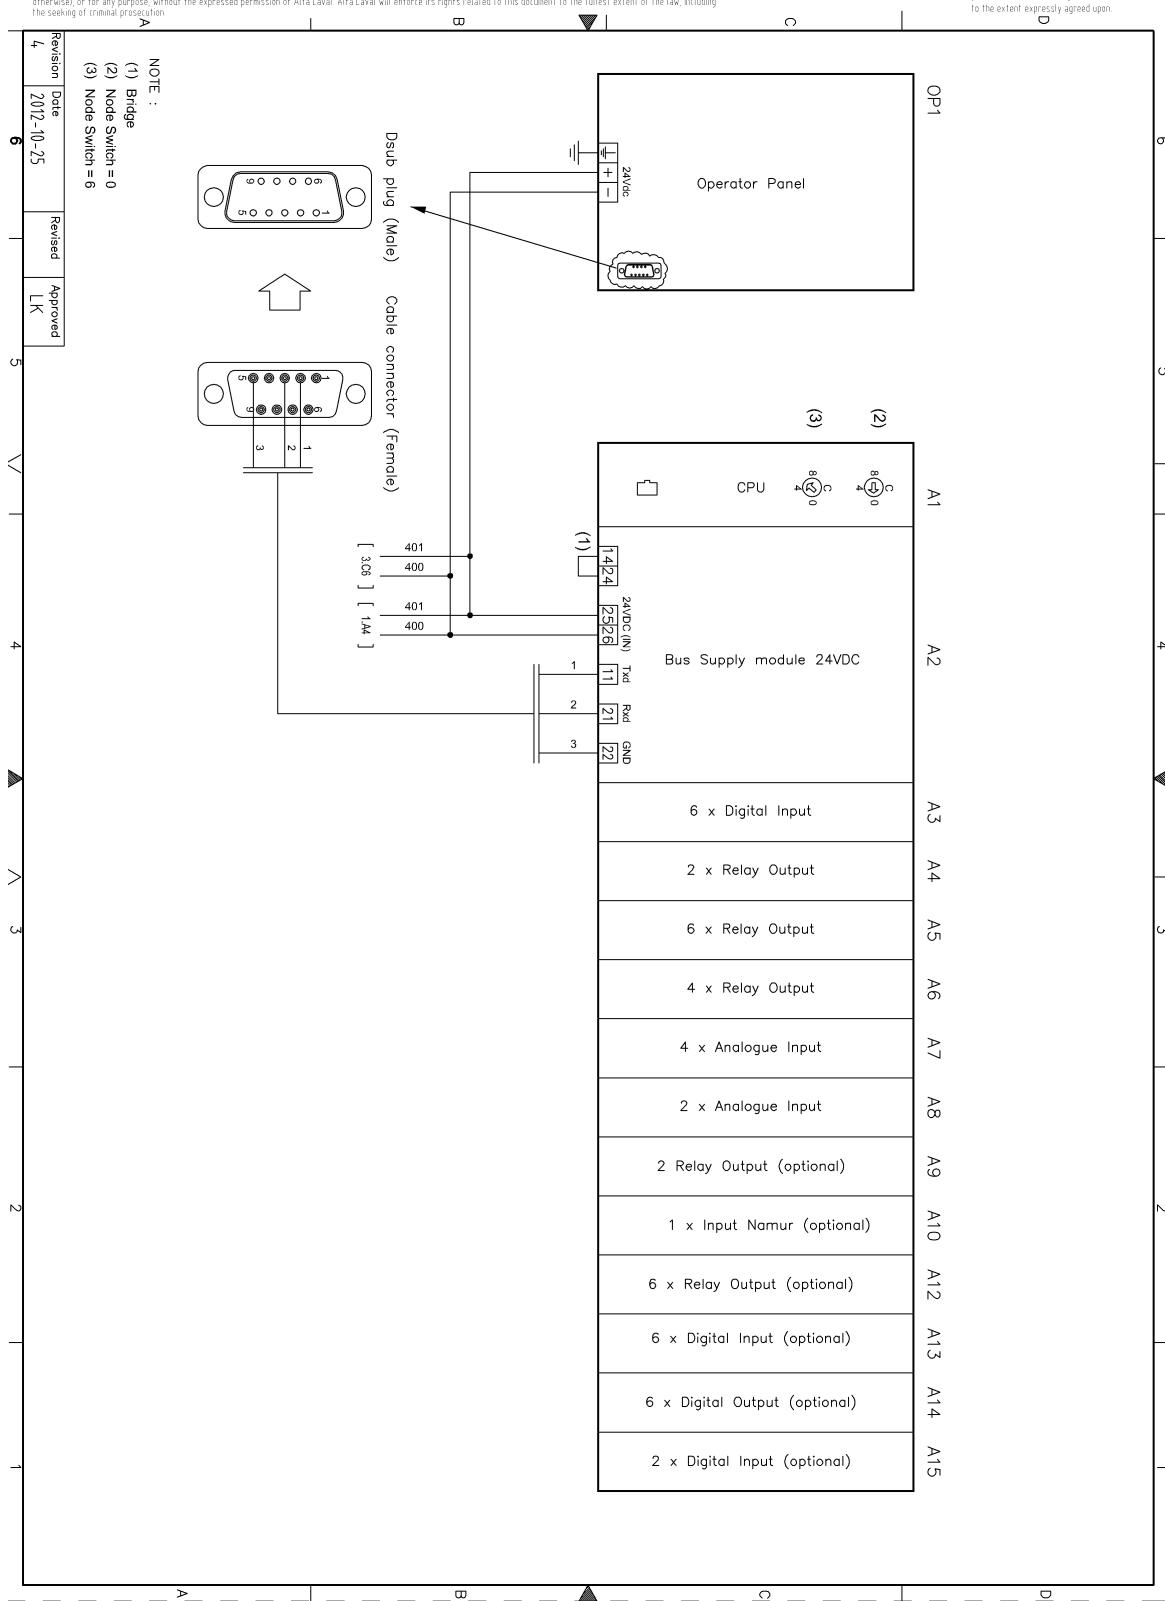

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

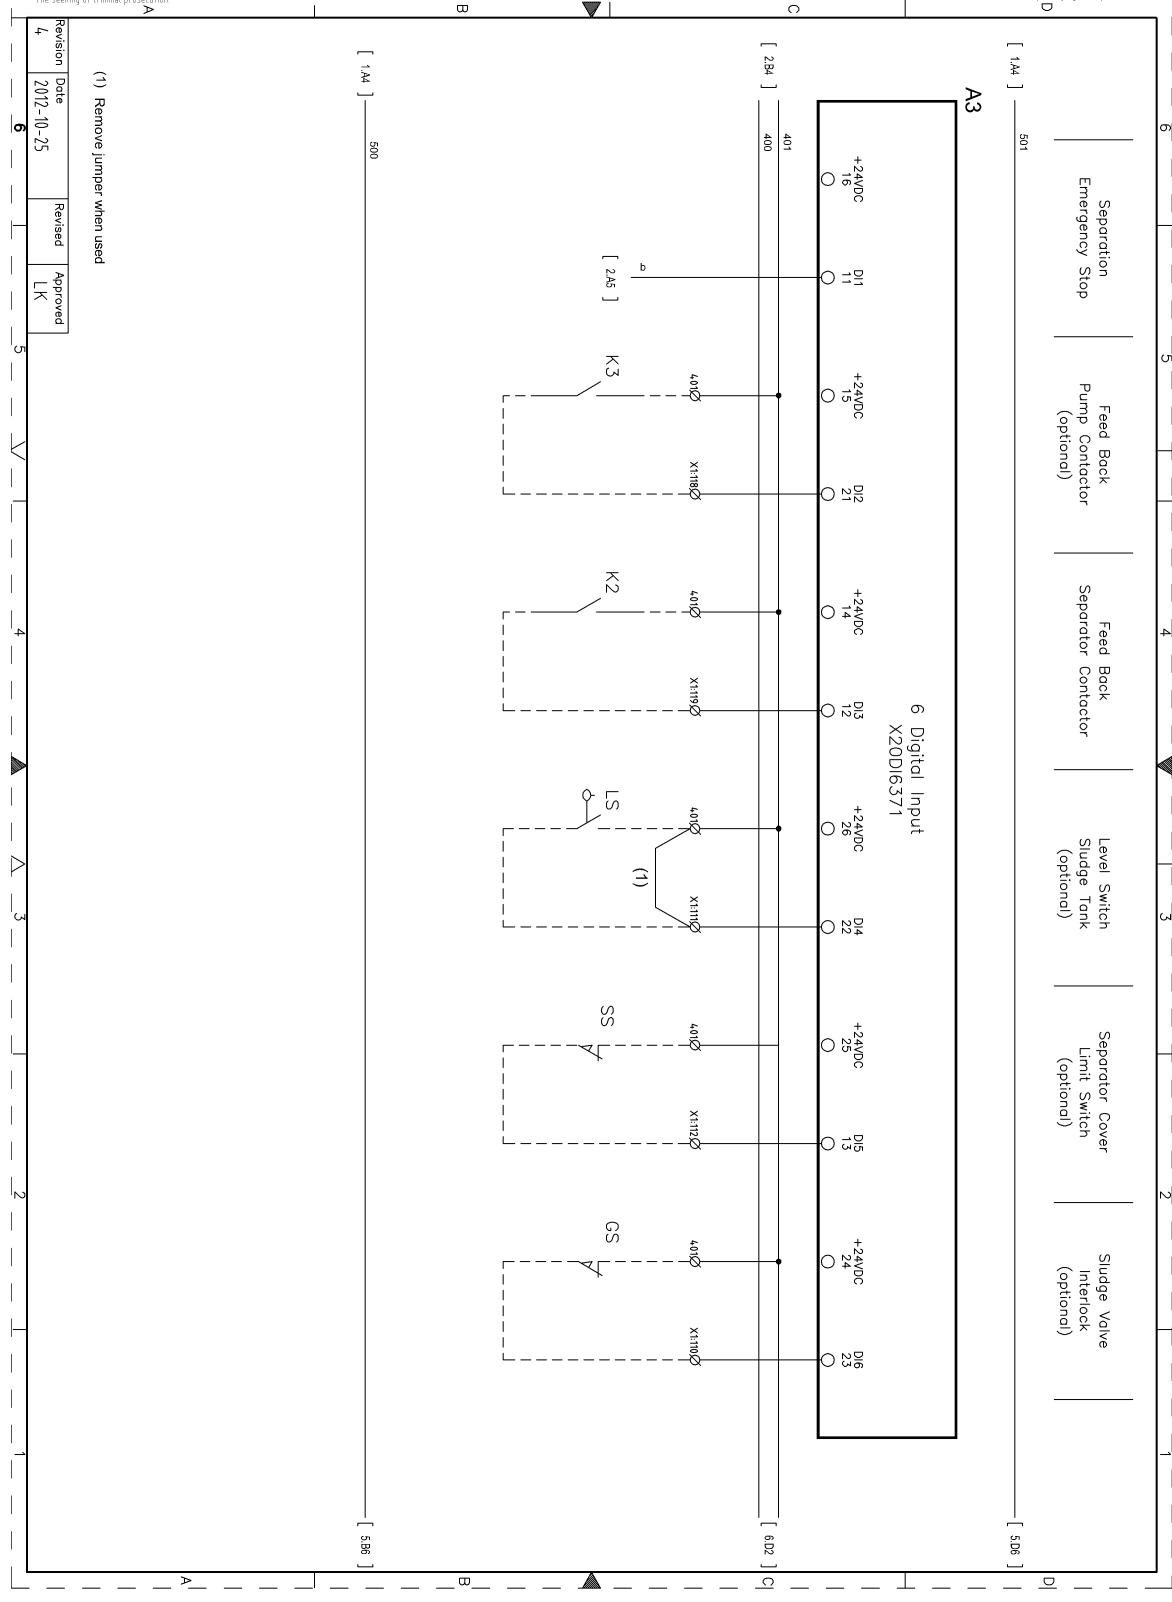

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

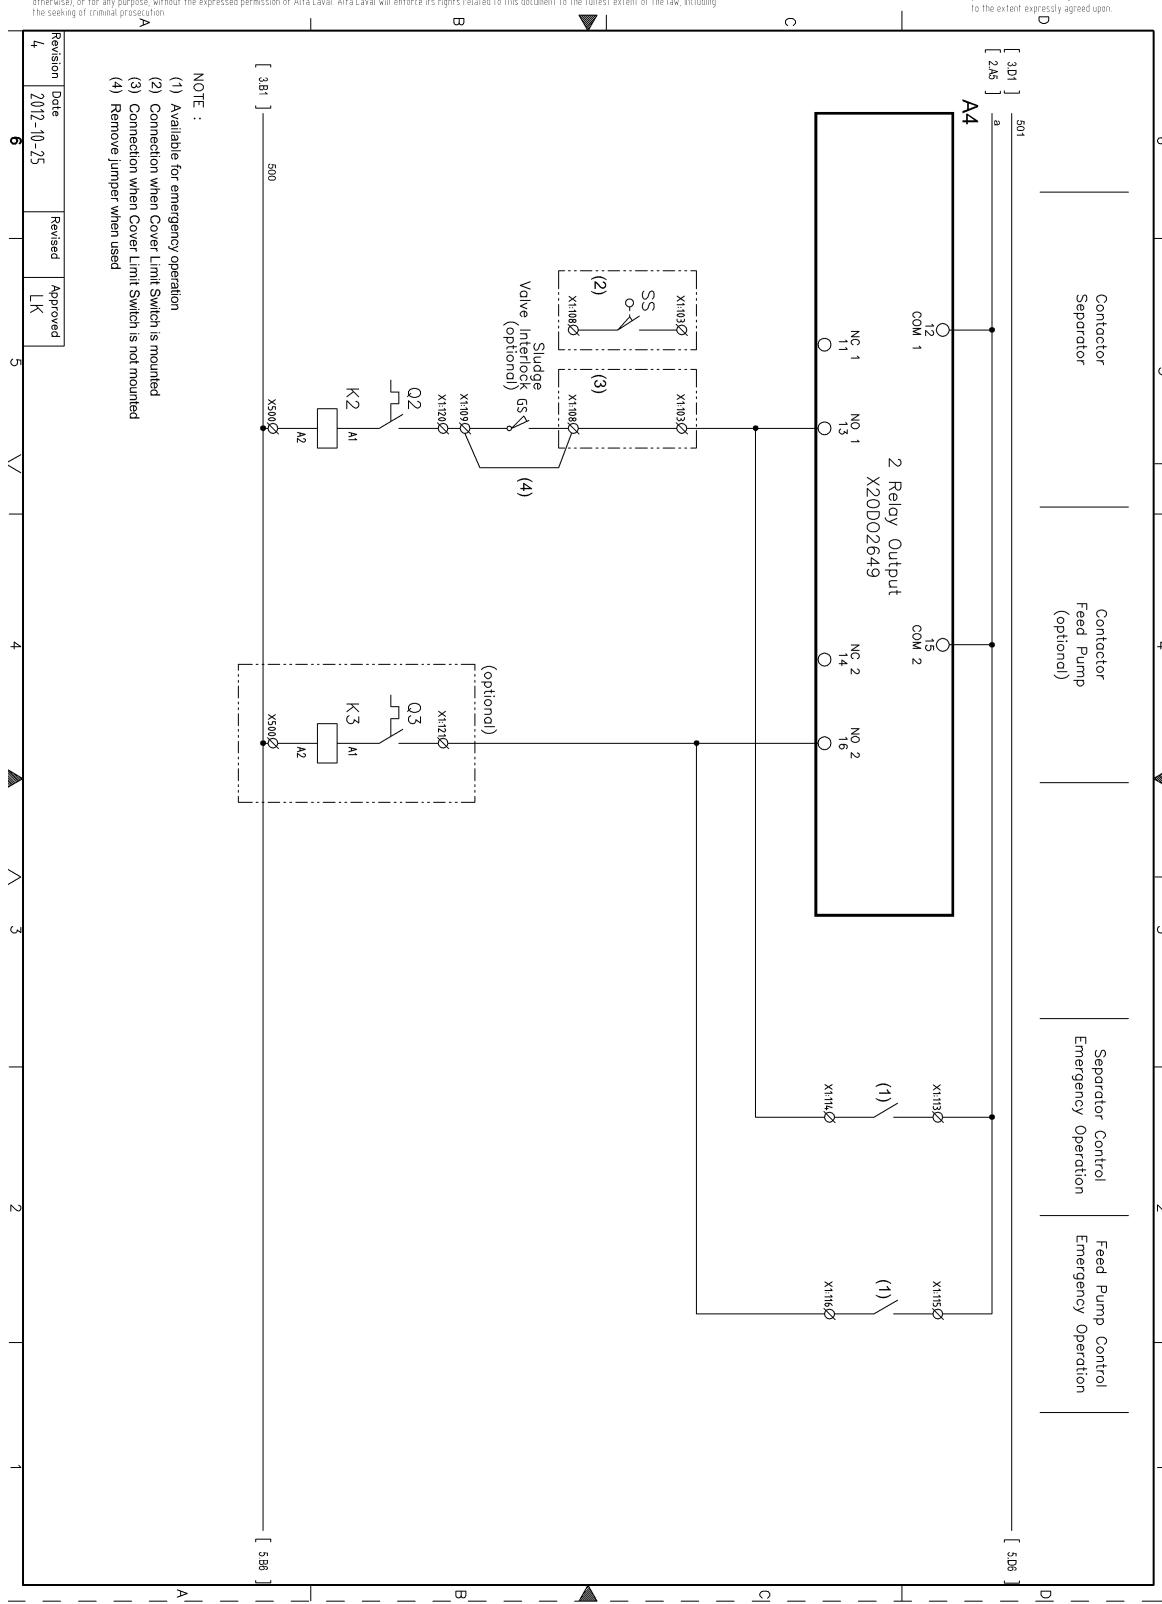


581085#4_03

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

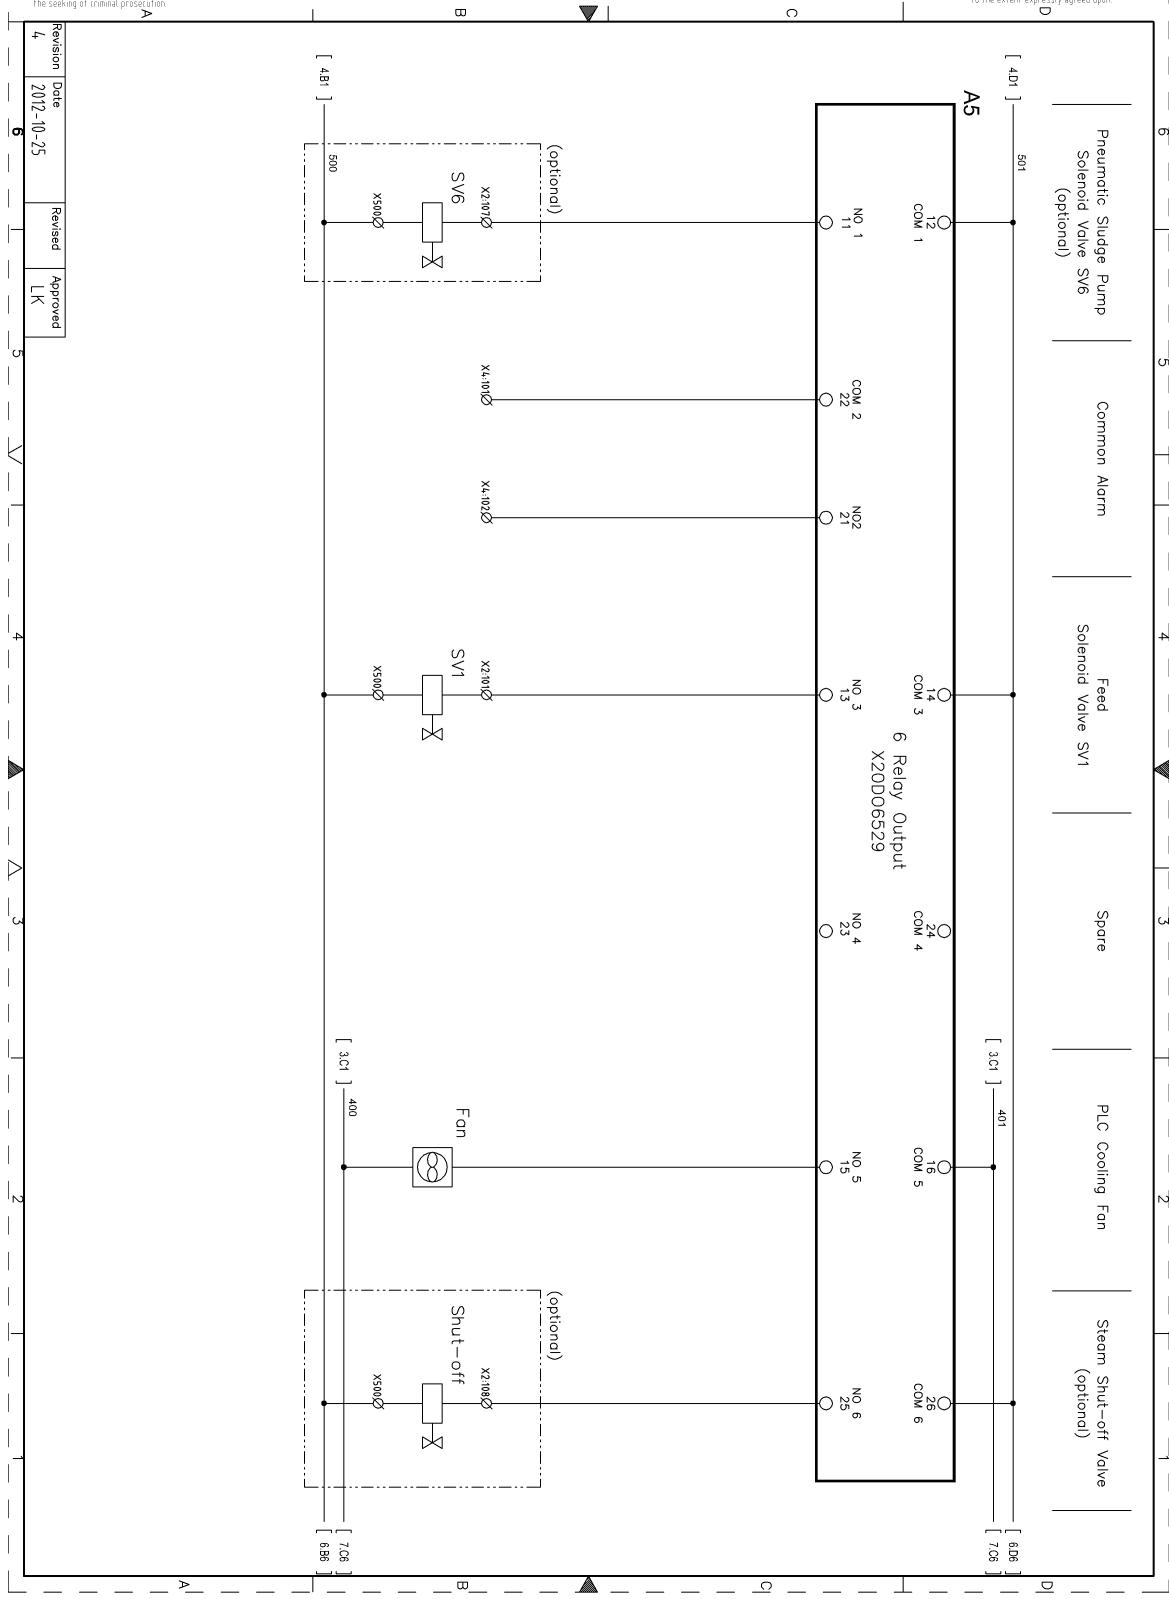


581085#4_04

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

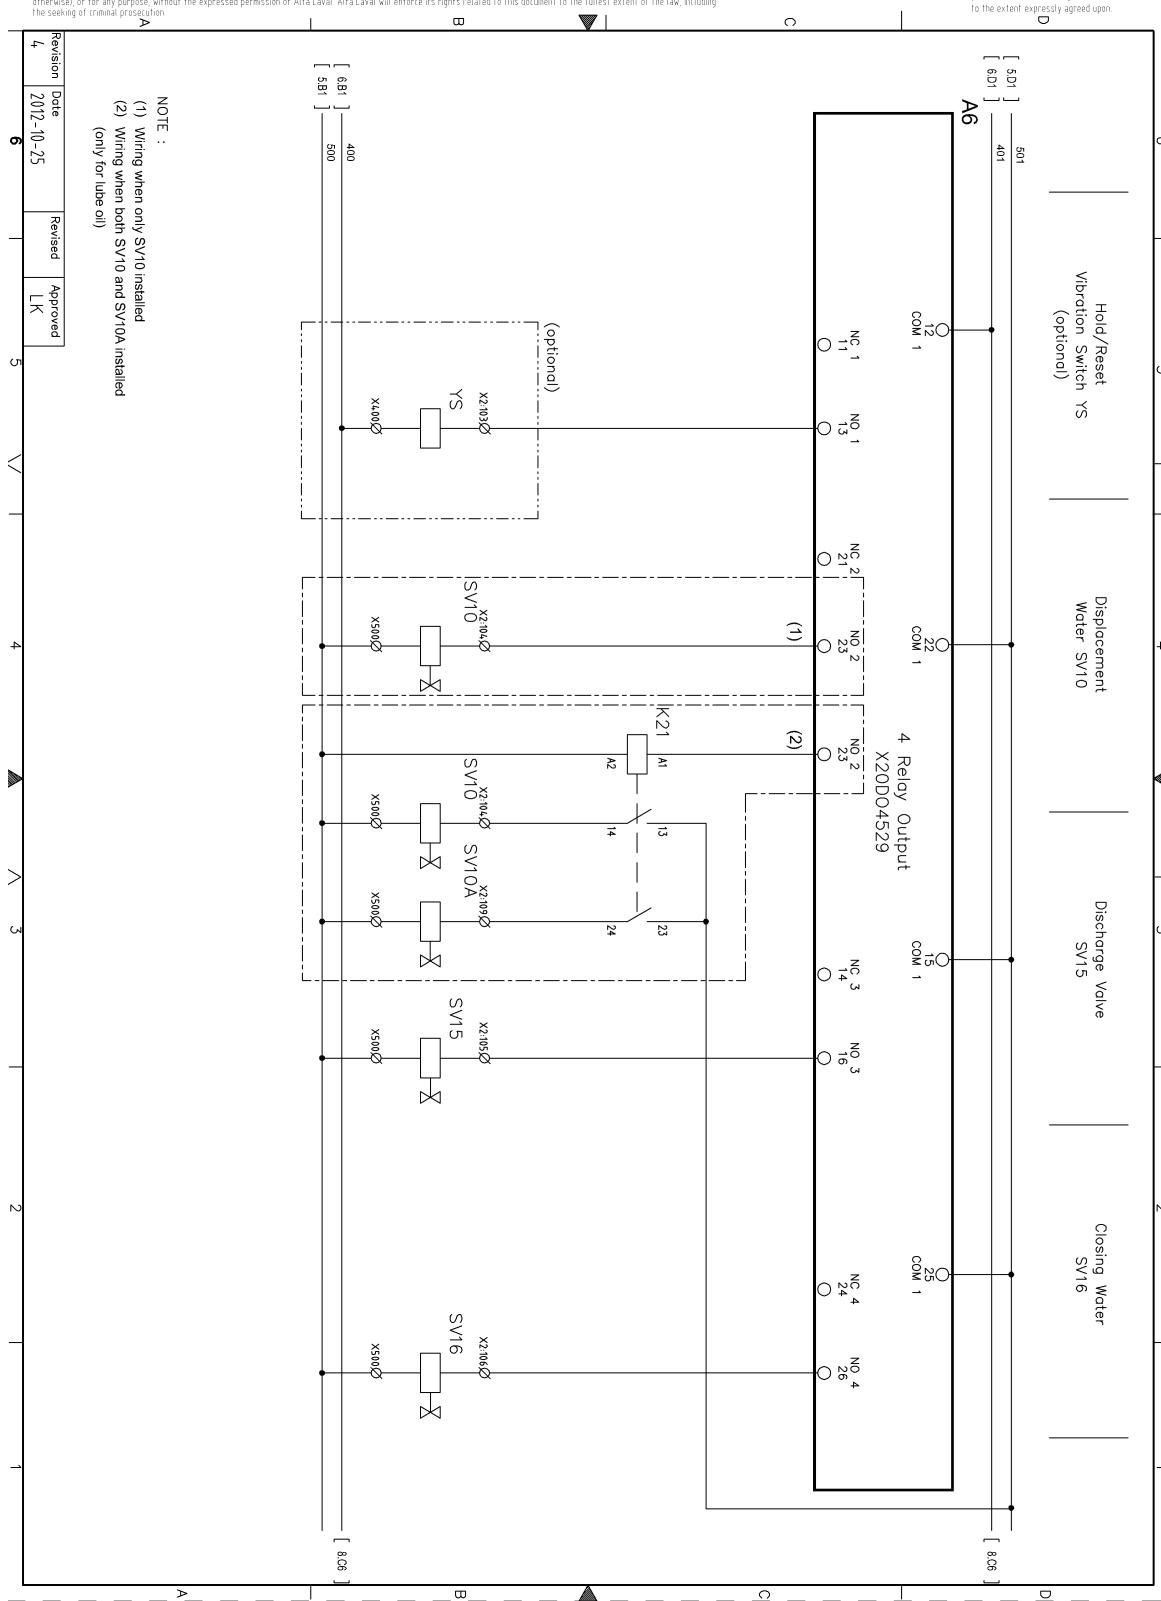


581085#4_05

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

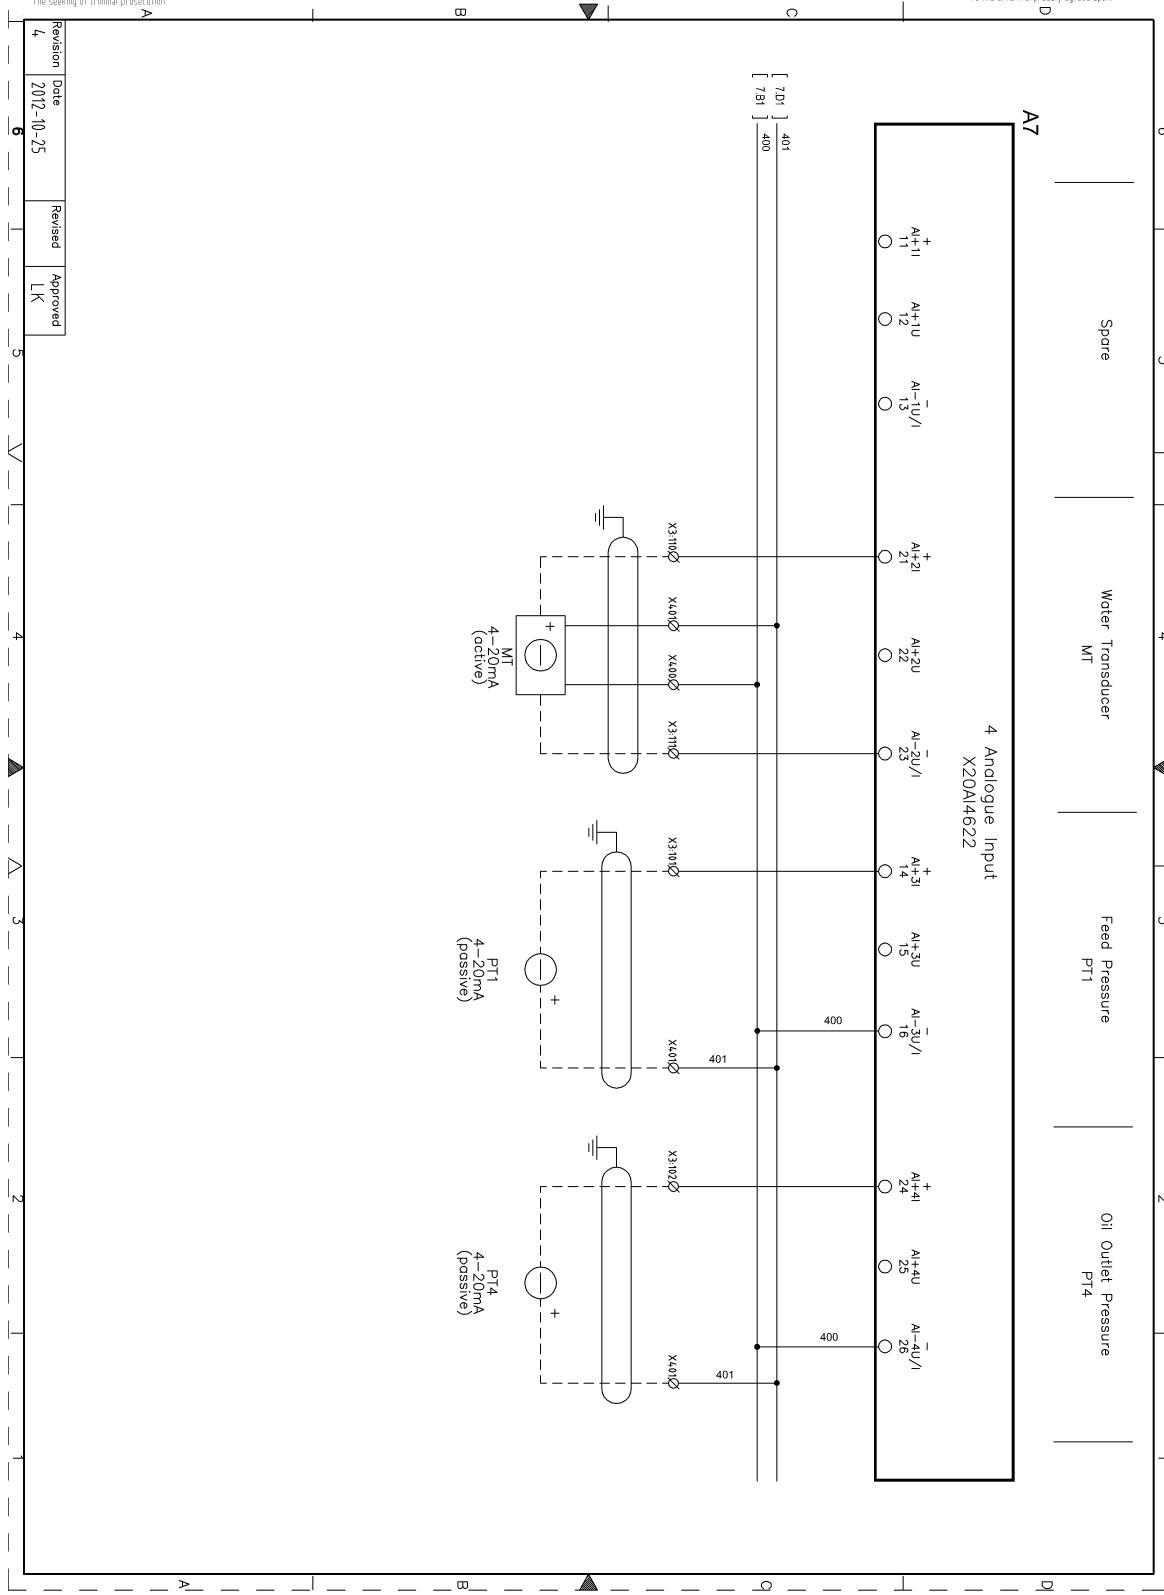

Alfa Laval ref. 581085 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

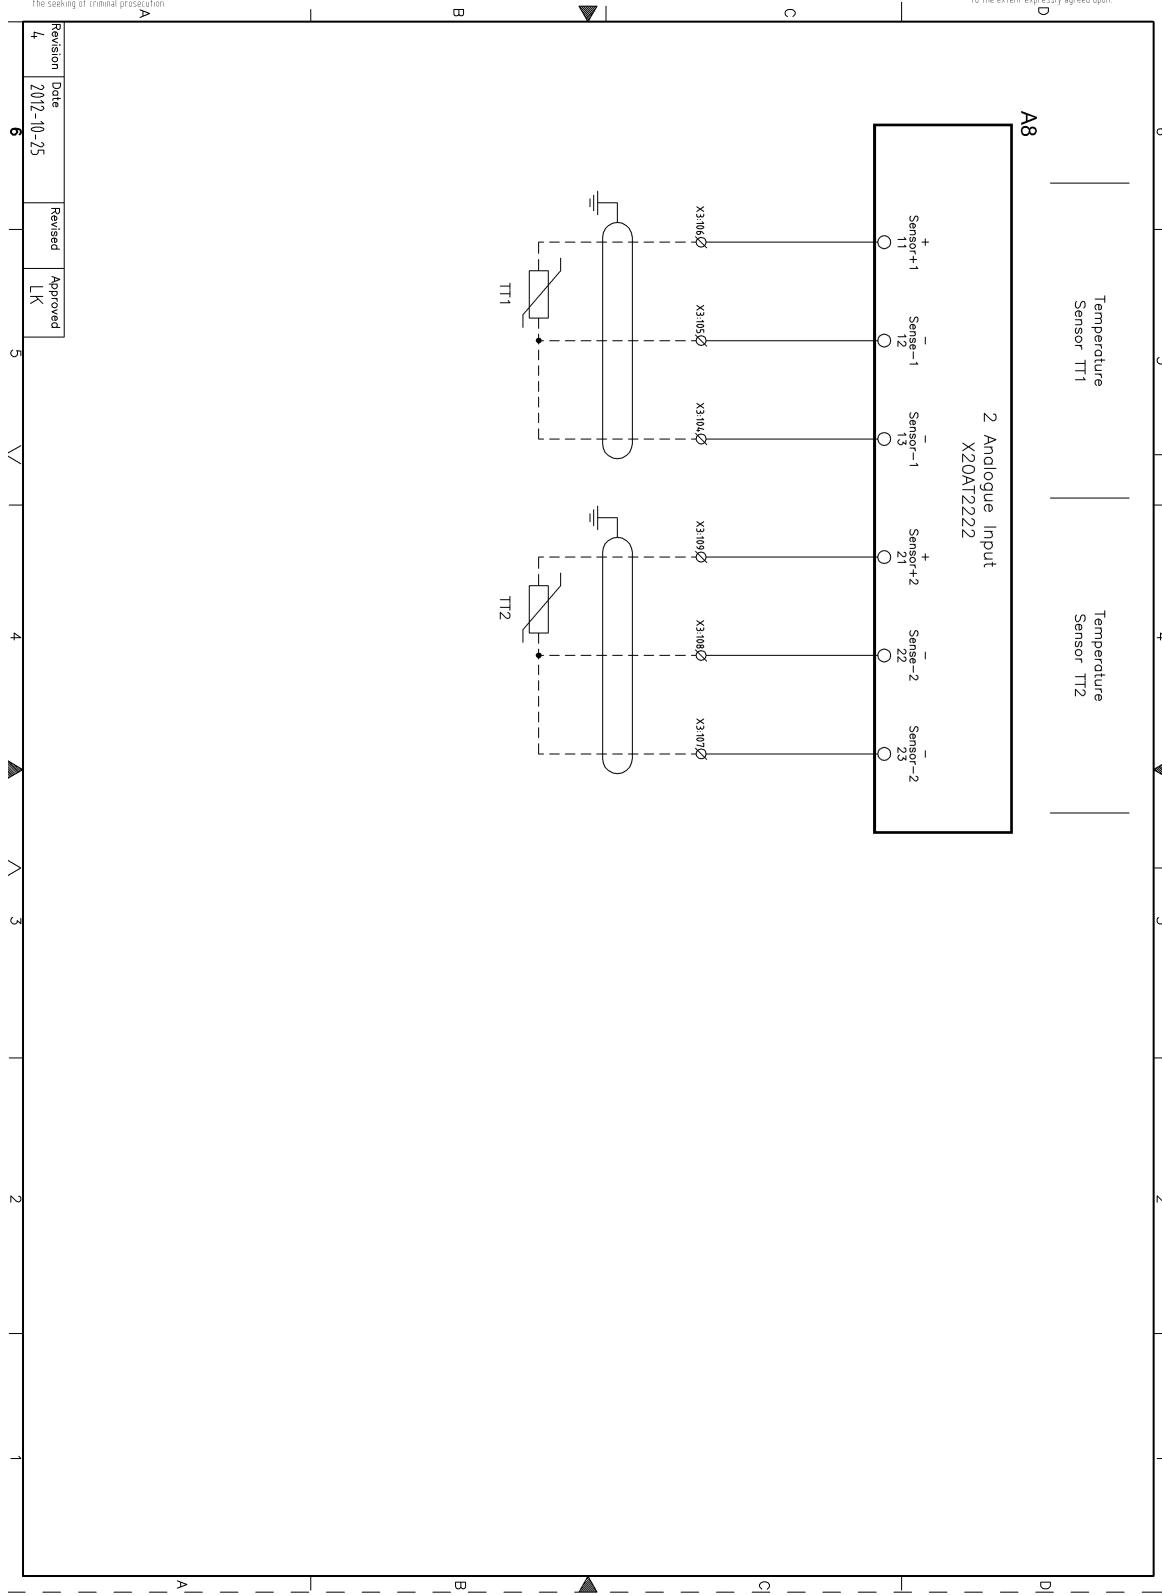


3.2.10 Steam Regulating Valve (optional) Circuit Diagram

Alfa Laval ref. 580885 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

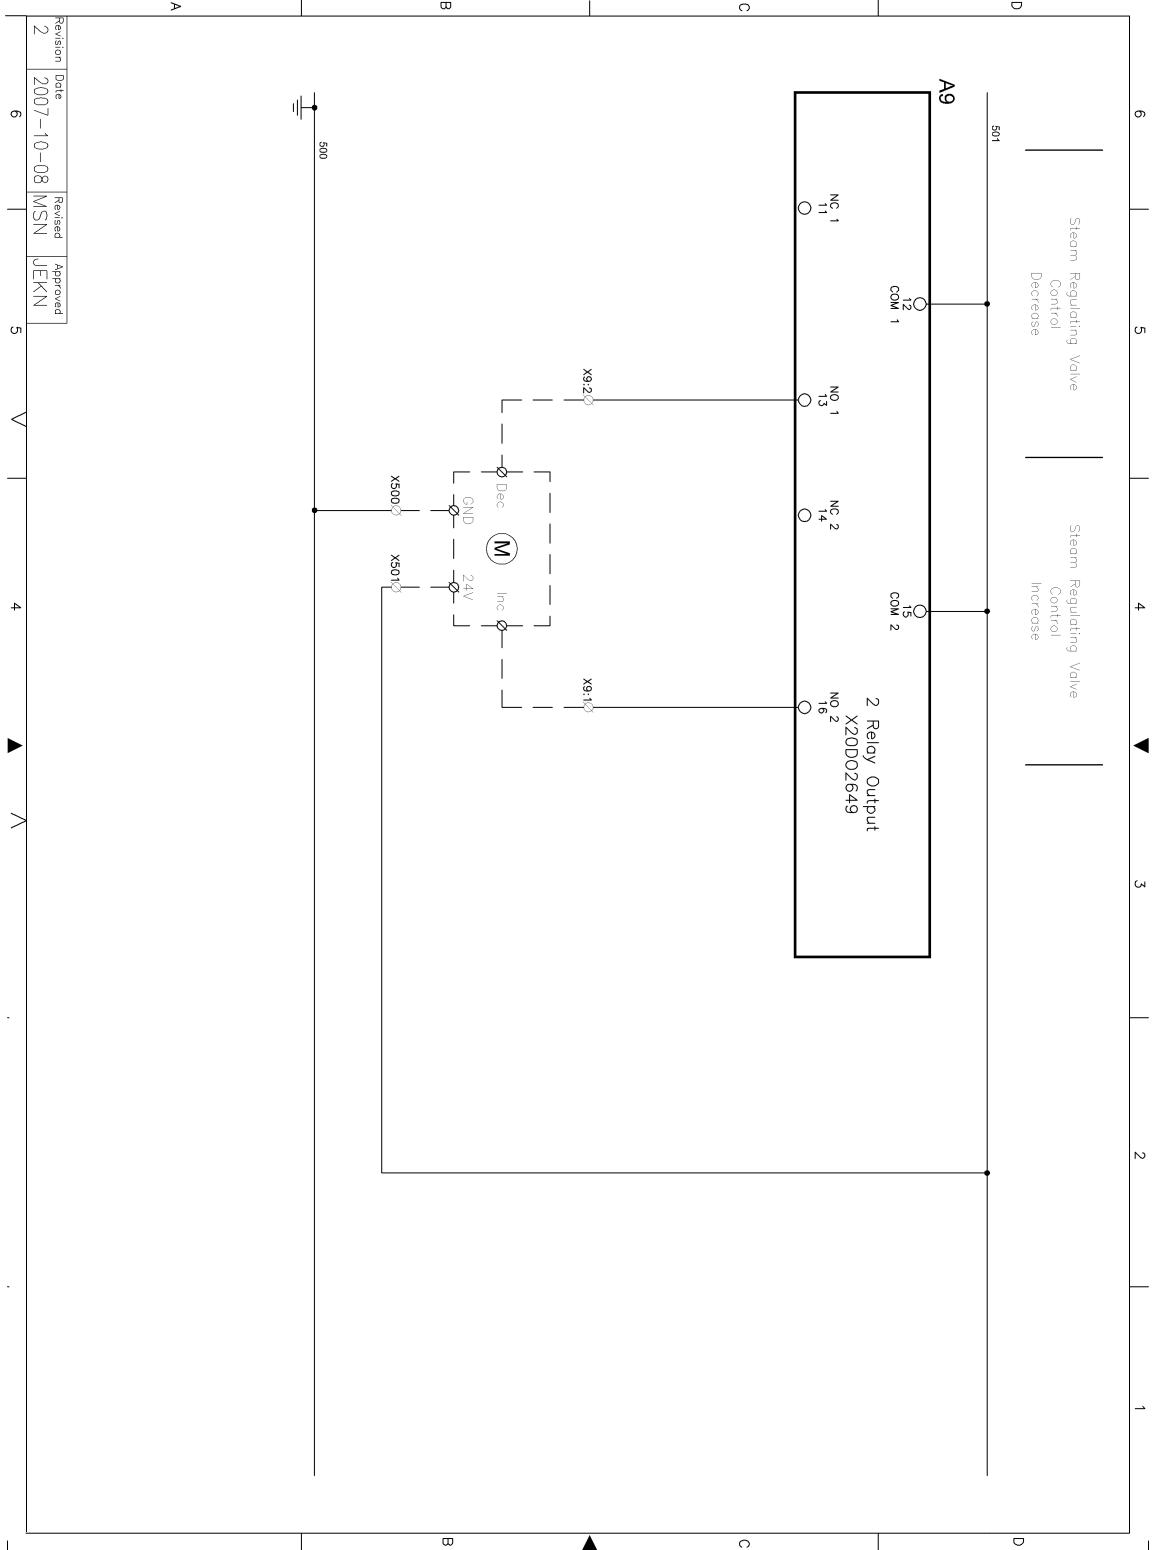

3.2.11 Vibration Switch (optional) Circuit Diagram

Alfa Laval ref. 581062 Rev. 1

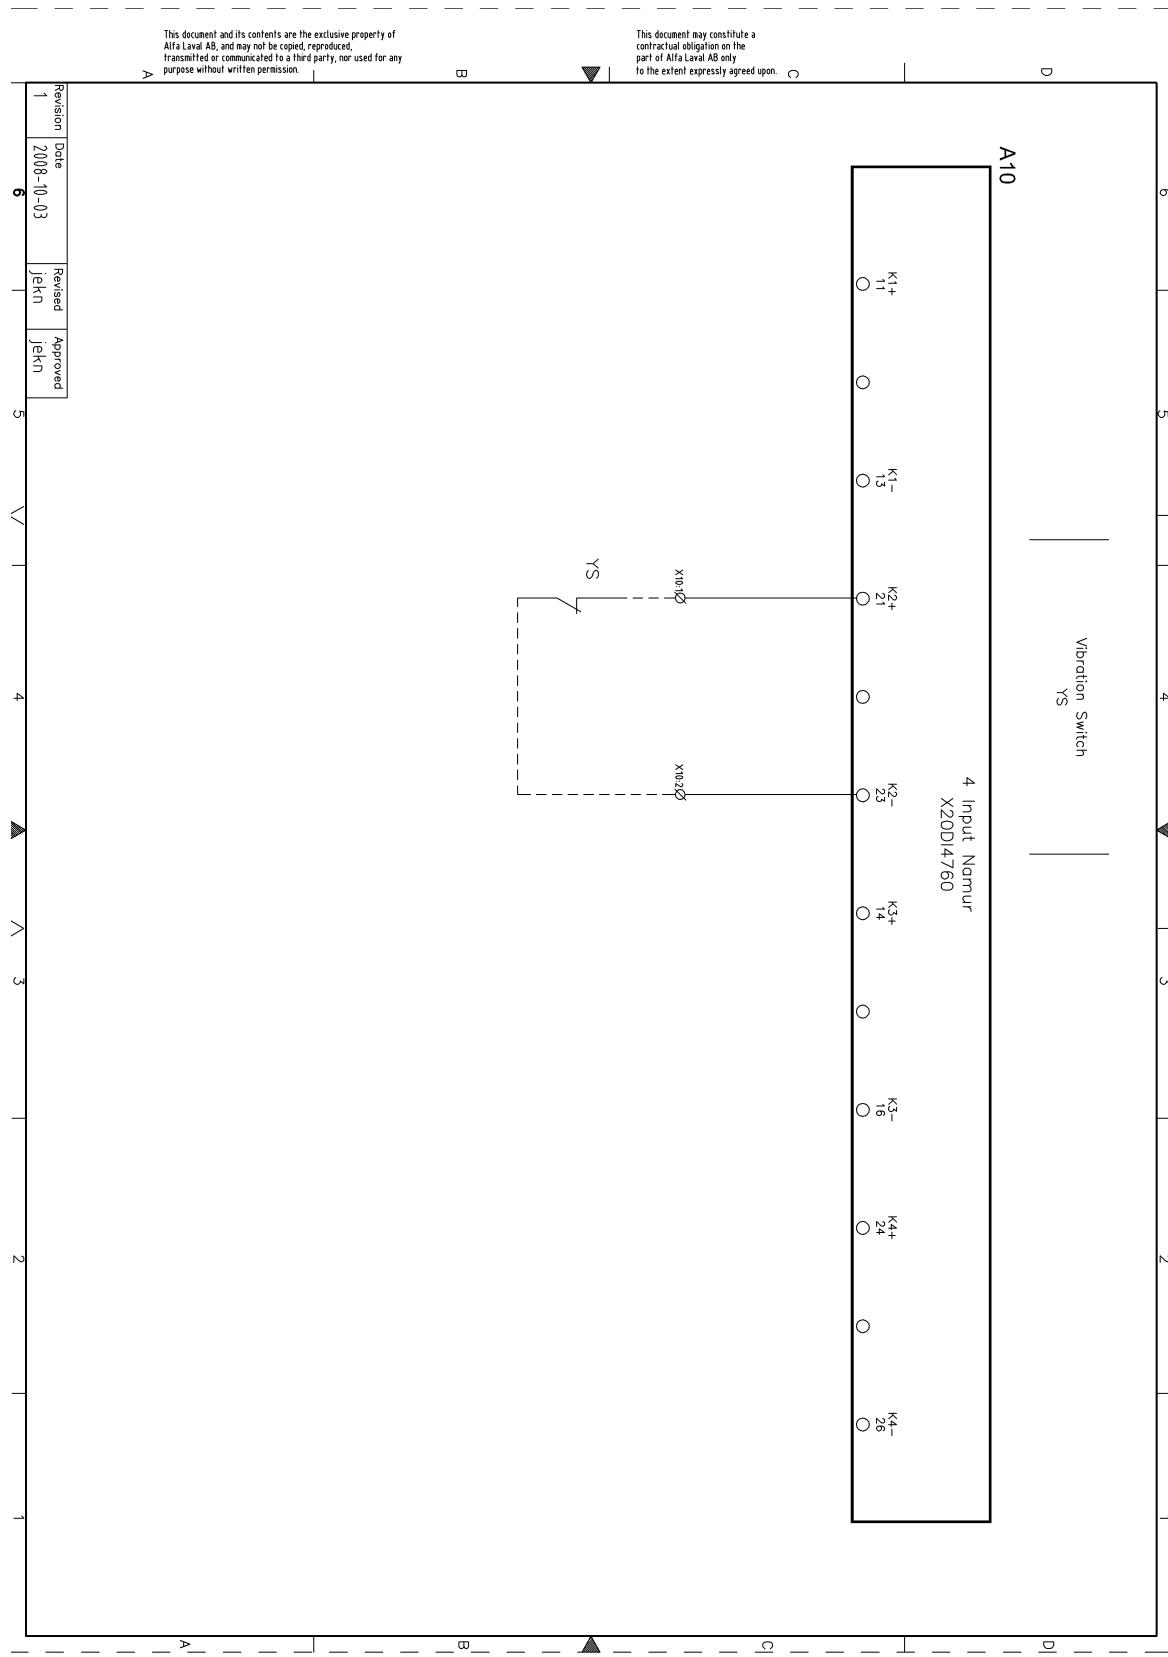


3.2.12 Electric Heater (optional) Circuit Diagram

Alfa Laval ref. 580895 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.


Only to the extent expressly
agreed by us this document
may constitute a contractual
obligation on our part.

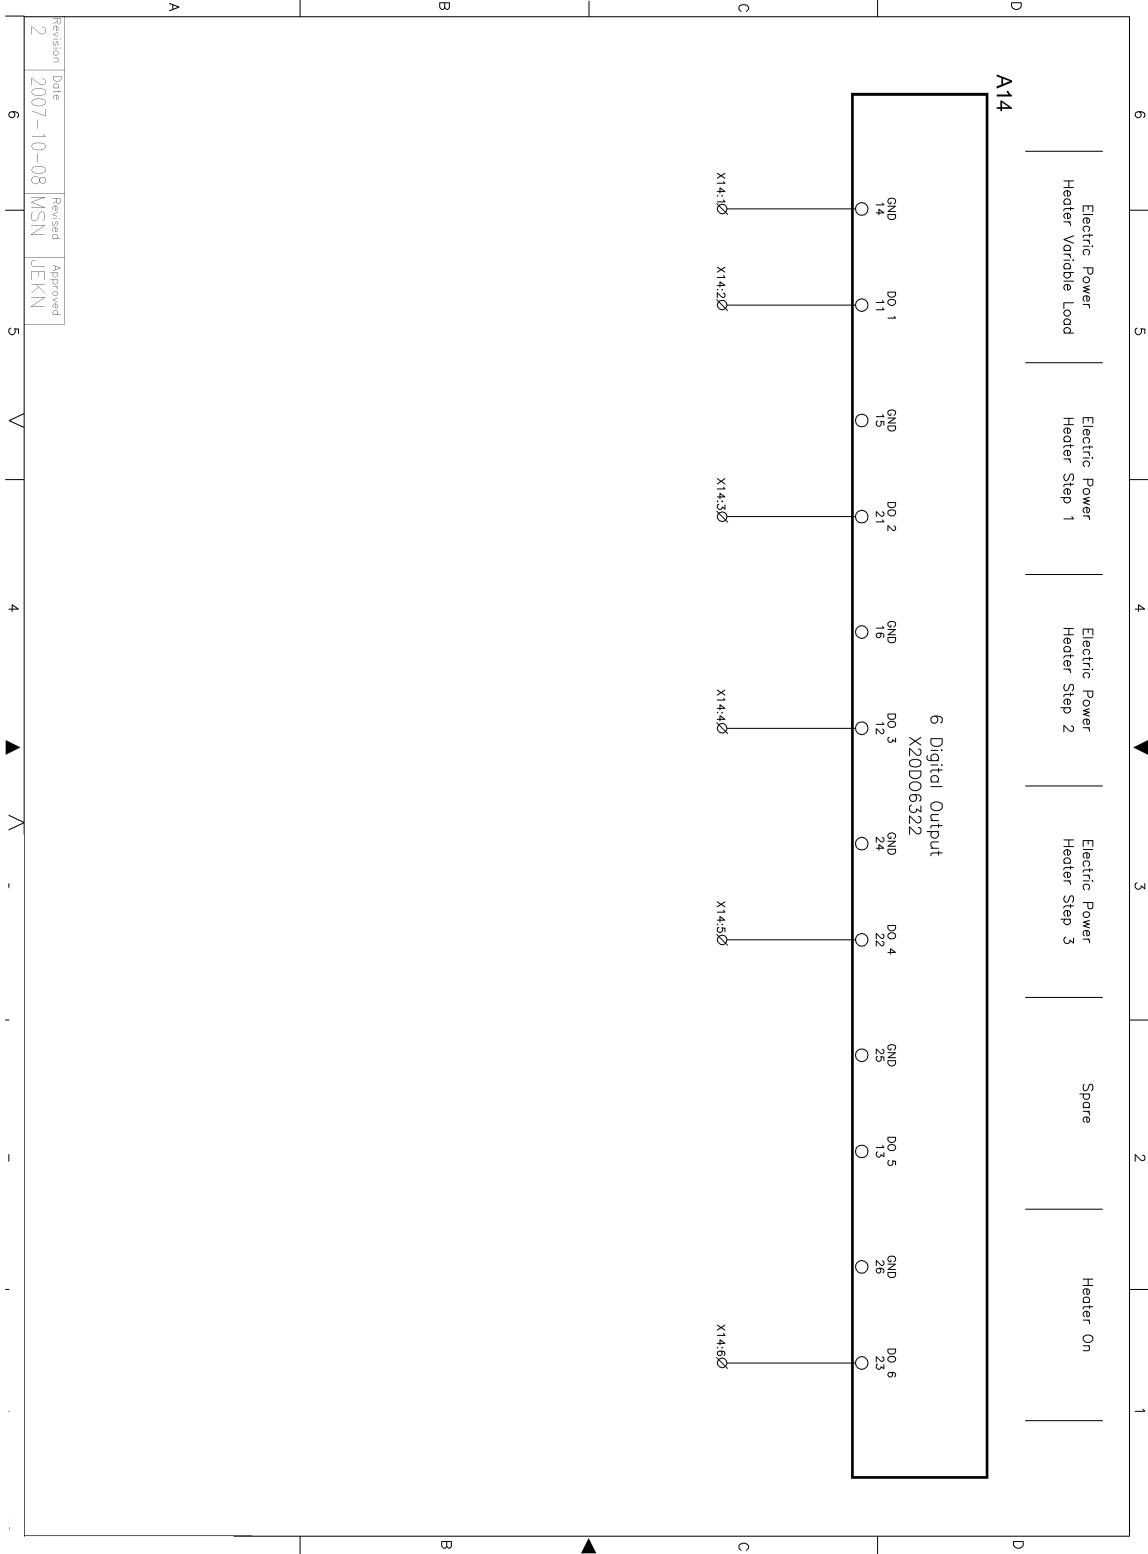

Alfa Laval ref. 580895 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

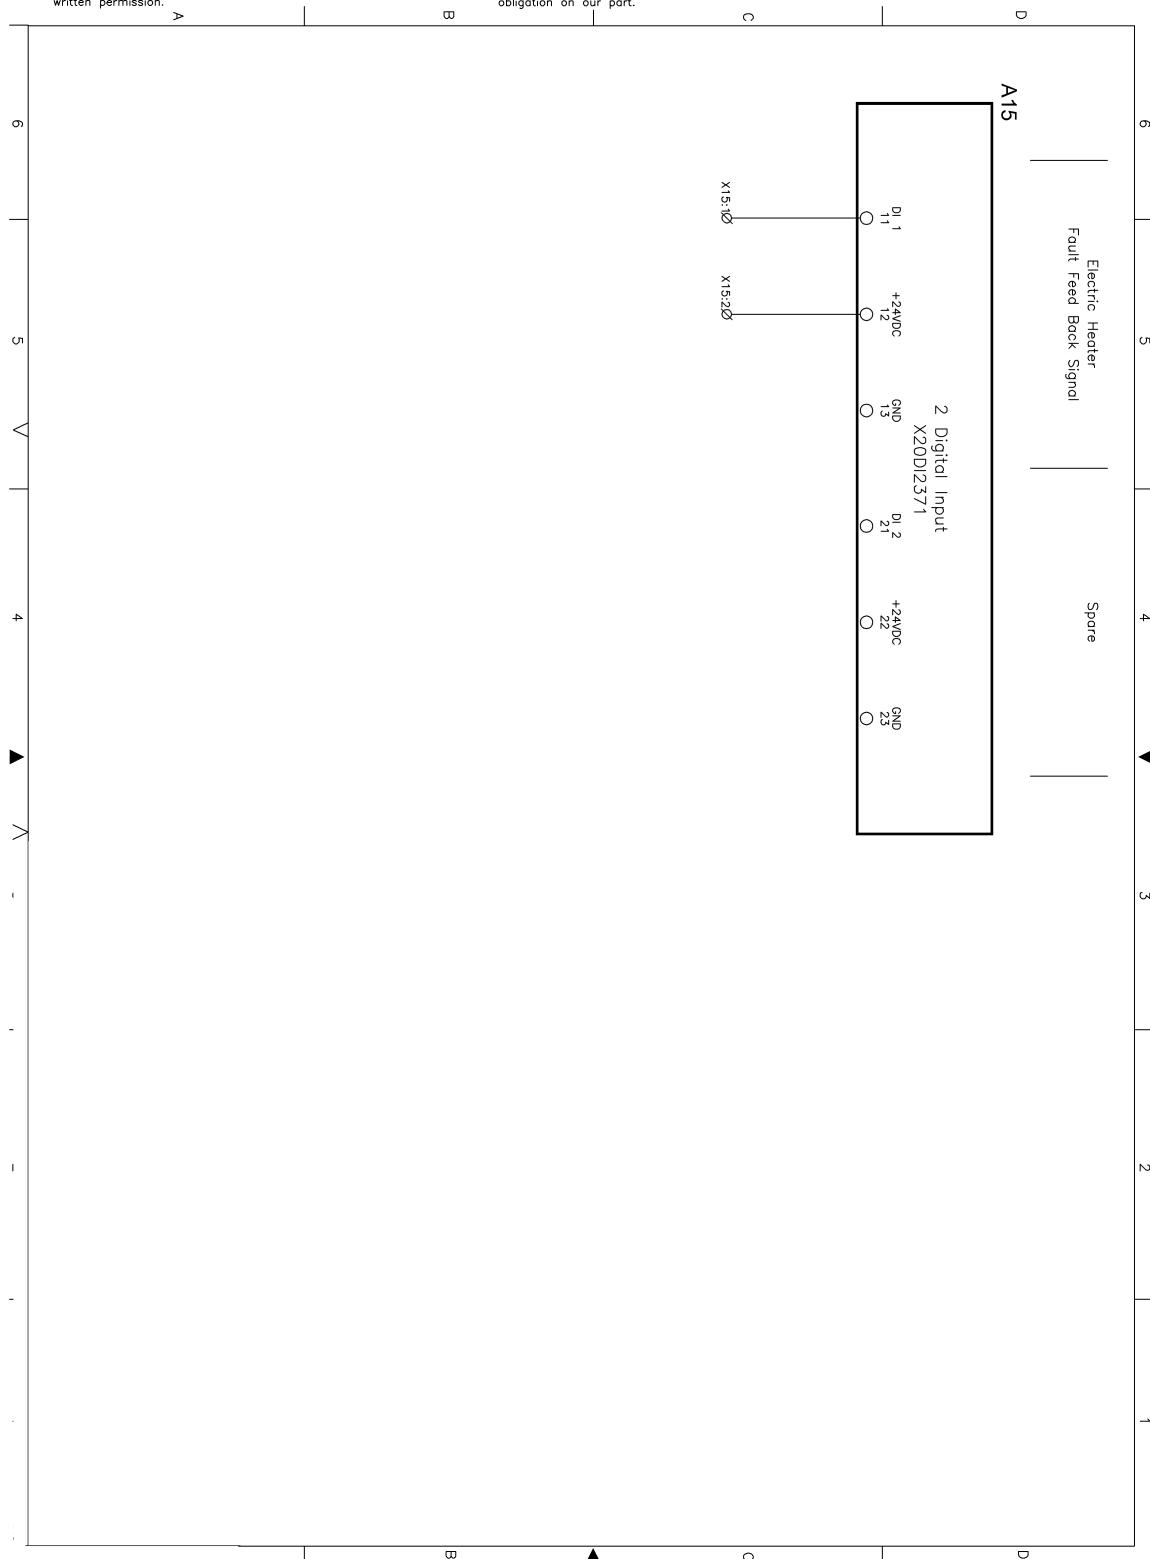

3.2.13 I/O (optional) Circuit Diagram

Alfa Laval ref. 580893 Rev. 3

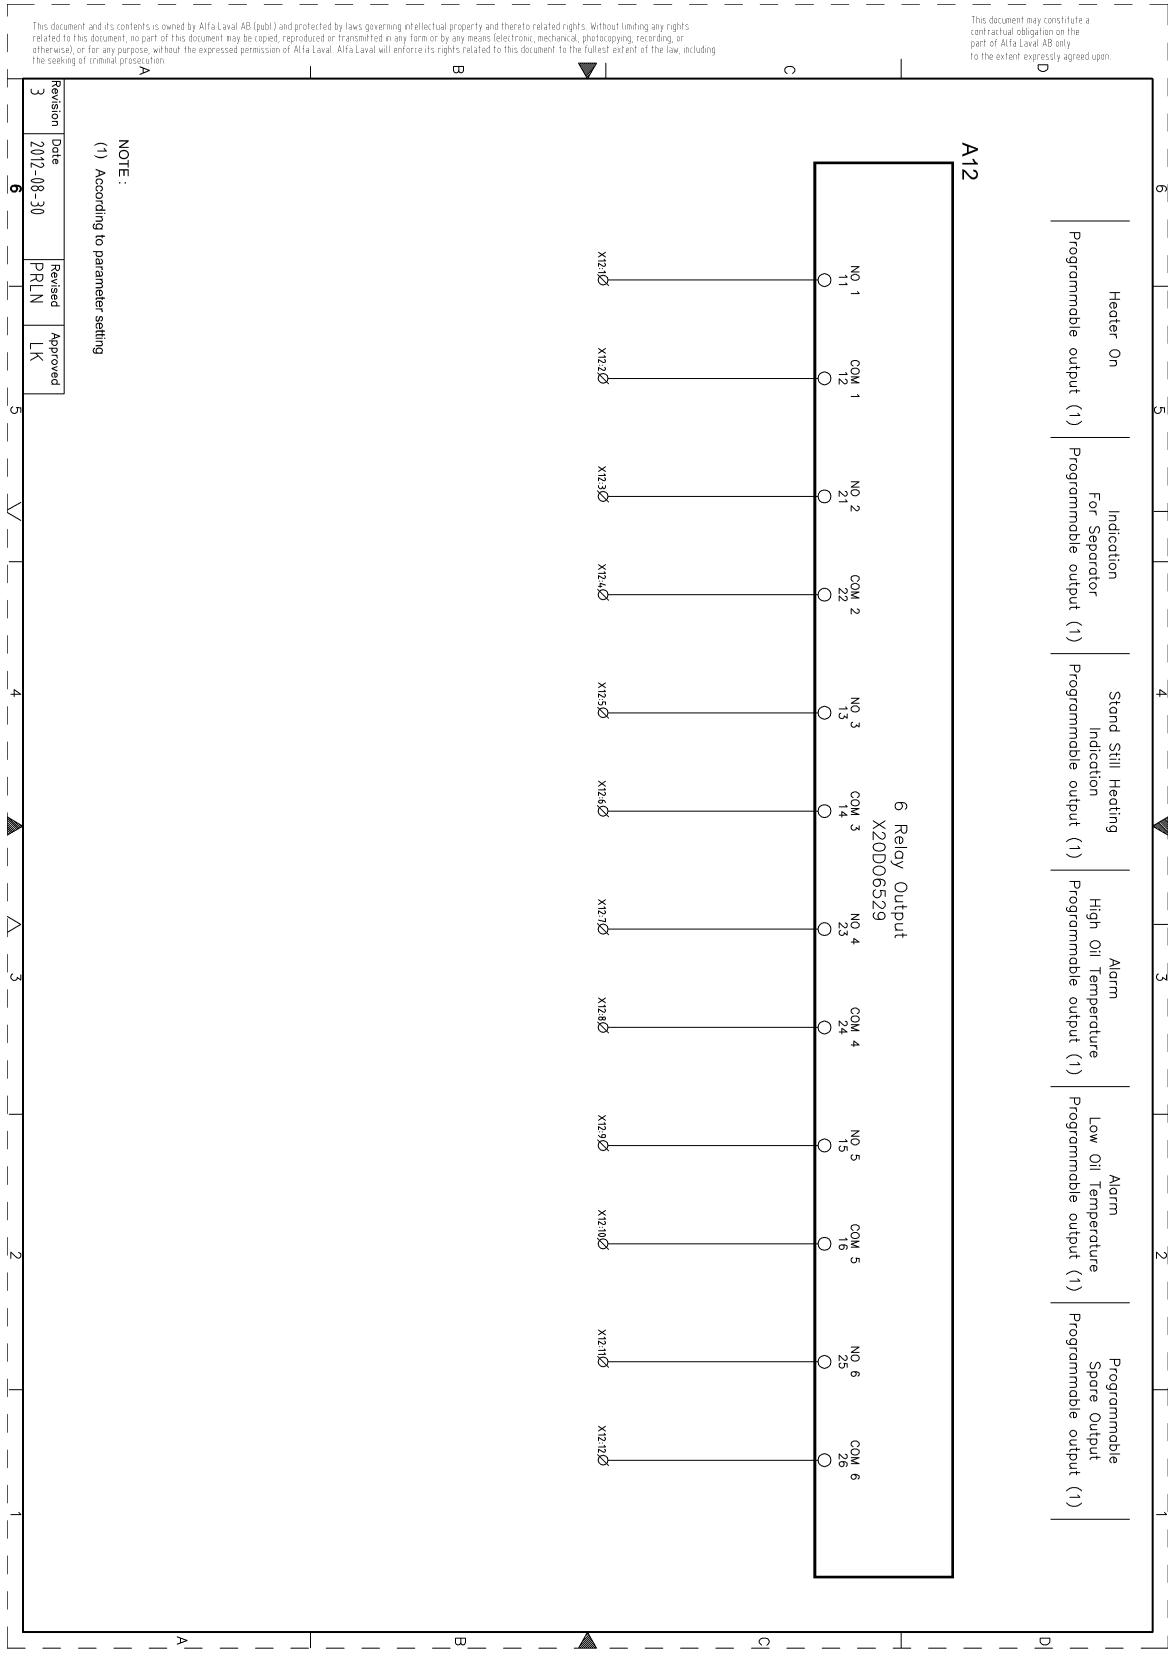


580893#3_00

Alfa Laval ref. 580893 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

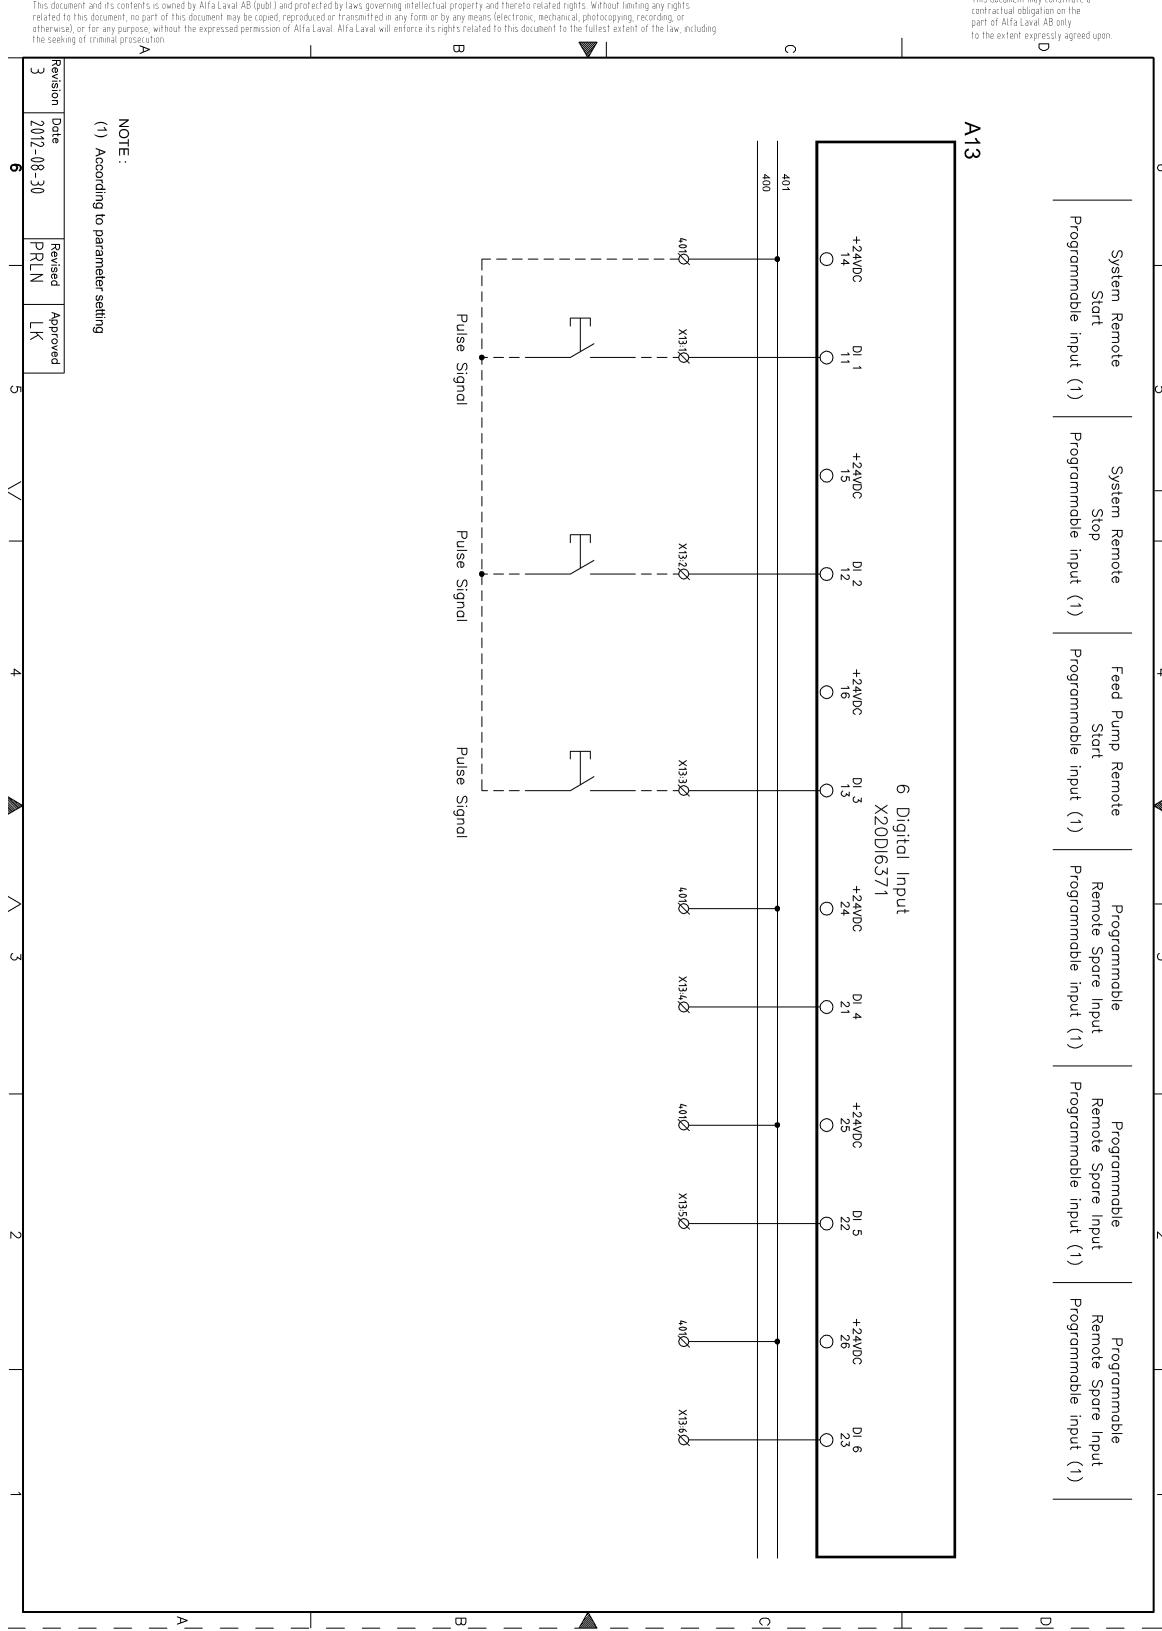

580893#3_01

3.2.14 Heat Tracing (optional) Circuit Diagram


Alfa Laval ref. 580883 Rev. 1

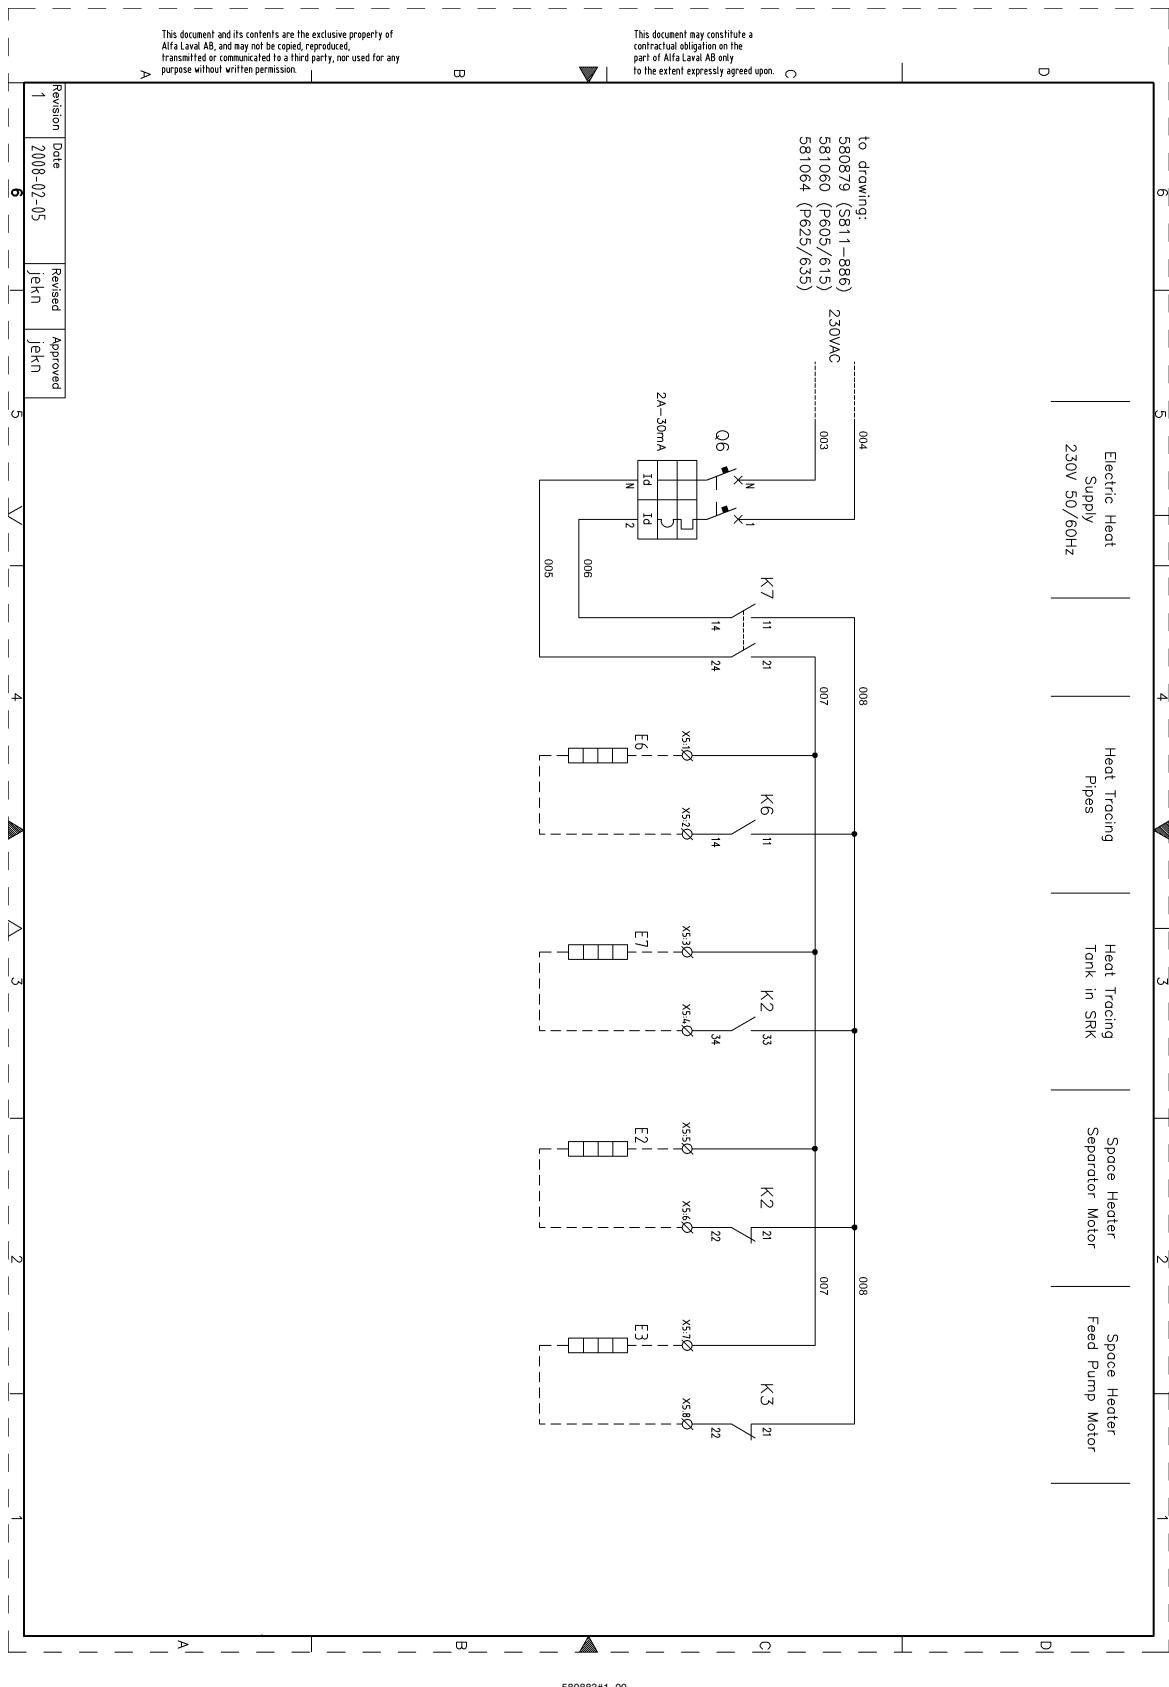

Alfa Laval ref. 580883 Rev. 1

This document and its contents are the exclusive property of
Alfa Laval AB, and may not be copied, reproduced,
transmitted or communicated to a third party, nor used for any
purpose without written permission.

This document may constitute a
contractual obligation on the
part of Alfa Laval AB only
to the extent expressly agreed upon.

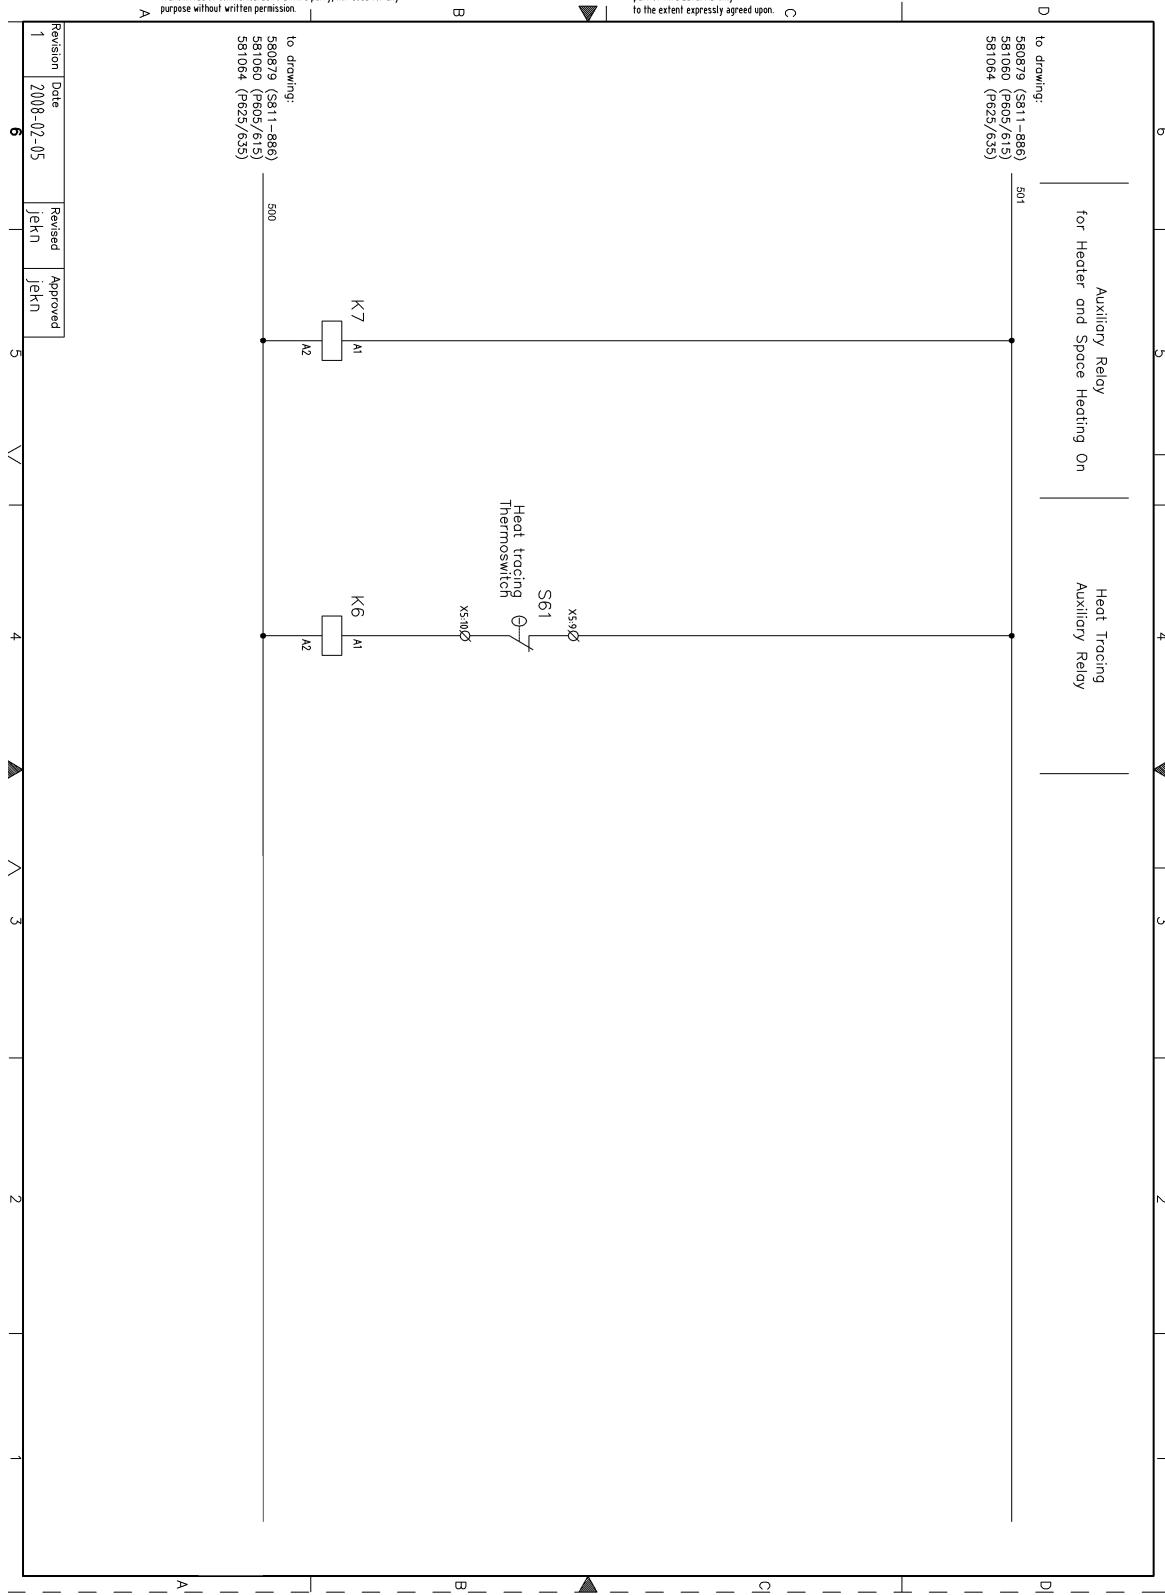


3.2.15 Emergency Shutdown Circuit Diagram

Alfa Laval ref. 580897 Rev. 1

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

Revision	Date	Revised	Approved
1	2009-12-18	MBM	MSN

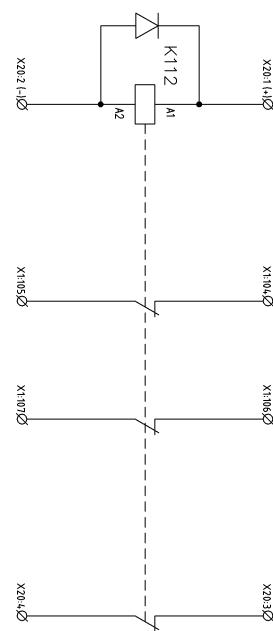


Remote ESD 24VDC
(See Circuit diagram
(internal connections))

ESD Feedback
to customer

4 *Electrical Drawings S 821– S 927*

4.1 Electrical System Layout S 821-S 927

Alfa Laval ref. 580907 Rev. 4

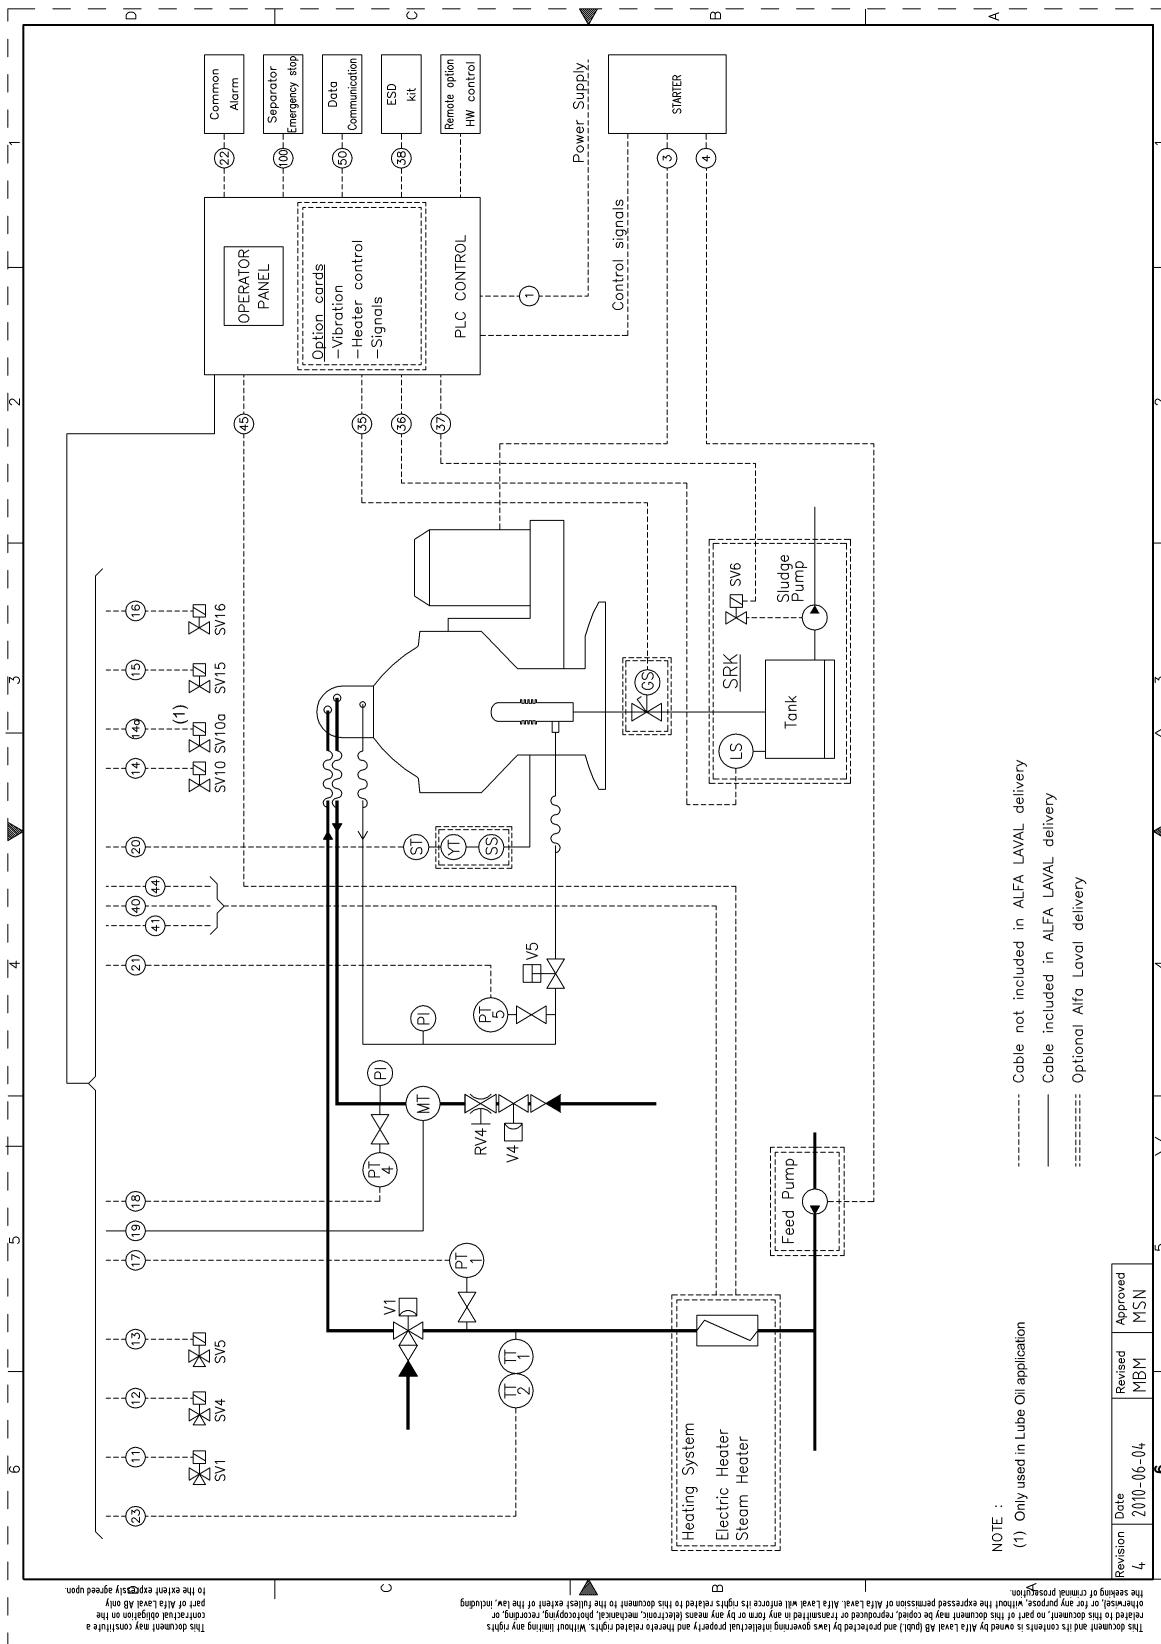

4.2 Control and Starter Electrical Diagrams

4.2.1 Starter cable list

Alfa Laval ref. 580881 Rev. 8

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Basic design (currents according to order)						
1	MPRXCX	3x4	Mains supply		Starter	1) Fuse 20 A
1	MPRXCX	3x10	Mains supply		Starter	1) Fuse 35A
1	MPRXCX	3x16	Mains supply		Starter	1) Fuse 50 A
1	MPRXCX	3x25	Mains supply		Starter	1) Fuse 63 A
1	MPRXCX	3x35	Mains supply		Starter	1) Fuse 80 A
2	MPRXCX	2x2m5	Supply		Starter	1) Fuse 16 A
3	MPRXCX	3x1,5	Starter	Marked 3A	Separator motor	4,0 – 6,3 A
3	MPRXCX	3x2,5	Starter	Marked 3B	Separator motor	6,3 – 16 A
3	MPRXCX	3x4	Starter	Marked 3C	Separator motor	16 – 20 A
3	MPRXCX	3x6	Starter	Marked 3D	Separator motor	20 – 25 A
3	MPRXCX	3x10	Starter	Marked 3E	Separator motor	25 – 32 A
3	MPRXCX	3x16	Starter	Marked 3F	Separator motor	32 – 45 A
3	MPRXCX	3x25	Starter	Marked 3G	Separator motor	45 – 63 A
Optional or customer's own feed pump (as ordered)						
4	MPRXCX	3x25	Starter		Feed pump	²⁾
Optional sludge handling (as ordered)						
35	RFE-HF	1x4x0,7 5	Starter		GS, Valve switch	
36	RFE-HF	1x2x0,7 5	Starter		LS, Sludge level	
37	RFE-HF	1x2x0,7 5	Starter		SV6, Solenoid valve	For pneumatic sludge pump
73	RFE-HF	2x0,75	Starter		Heatpac on tank	Included in heater element
Optional space heating (as ordered)						
71	MPRXCX	2x1,5	Starter		Separator pump	
73	MPRXCX	2x1,5	Starter		Feed pump	²⁾
Optional heat tracing (as ordered)						
74	MPRXCX	2x1,5	Starter		Thermostat	
75		3x1,5	Starter		Heating cable	

1) Cable not included in Alfa Laval delivery.

2) Cable only included in the Alfa Laval delivery when Feed Pump is delivered mounted on Module

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Signal cables (currents according to order)						
11	RFE-HF	1x2x0,7 5	EPC 60		SV1	
12	RFE-HF	1x2x0,7 5	EPC 60		SV4	
13	RFE-HF	1x2x0,7 5	EPC 60		SV5	S-type only
14	RFE-HF	1x2x0,7 5	EPC 60		SV10	
14 A	RFE-HF	1x2x0,7 5	EPC 60		SV10A	Lube oil only
15	RFE-HF	1x2x0,7 5	EPC 60		SV15	
16	RFE-HF	1x2x0,7 5	EPC 60		SV16	
17	RFE-HF	1x2x0,7 5	EPC 60		PT1	¹⁾
18	RFE-HF	1x2x0,7 5	EPC 60		PT4	
19	RFE-HF	1x4x0,7 5	EPC 60		MT	S-type only
20	RFE-HF	4x2x0,7 5	EPC 60		ST, (YT, SS)	Not for P605, P615, S805, S815
21	RFE-HF	1x2x0,7 5	EPC 60		PT5	S-type only
22	RFE-HF	1x2x0,7 5	EPC 60		Common alarm	²⁾
23	RFE-HF	4x2x0,7 5	EPC 60		TT1/TT2	³⁾
Options (as ordered)						
25	RFE-HF	1x4x0,7 5	EPC 60		SS	²⁾ Only for P605, P615, S805, S815
30	RFE-HF	1x4x0,7 5	EPC 60		YS	²⁾ Only for P605, P615, S805, S815
38	MPRXCX	4x1,5	EPC 60		Syst. Emergency	^{2) 4)}
100	MPRXCX	4x1,5	EPC 60		Sep. Emergency stop	^{2) 4)}
Optional Electric Heater (as ordered)						
40	RFE-HF	4x2x0,7 5	Starter		Power unit	
45	RFE-HF	1x2x0,7 5	Starter		Power unit	
Optional heat tracing (as ordered)						
41	RFE-HF	1x4x0,7 5	EPC 60		Steam reg. valve	
44	RFE-HF	1x2x0,7 5	EPC 60		Shut-off valve	
50	RJ45 Cat 5e		EPC 60 CPU		Client remote data communication	^{2), 5)}

- 1) Cable not included in Alfa Laval delivery
- 2) Cable only included in the Alfa Laval delivery when PT1 is delivered mounted on Module.
- 3)Cable only included in the Alfa Laval delivery when Electric Heater is delivered mounted on Module.
- 4) This cable cannot be longer than 25 m to avoid voltage drop.
- 5) Crossconnection cable only included in Alfa Laval delivery when multiple modules is delivered.

Other equivalent and approved cables may be used.

Cable areas are calculated with correction factor 0.7.

Cables used are Shipboard Cables, designed according to IEC 60092-3.

Flame retardant according to IEC 60332-1-2 and IEC 60332-3-22.

Halogen-free according to IEC 60754 series.


Smoke emission according to IEC 61034 series.

All power cables should be Signal Shielded Cables with the shield properly connected to earth as shown in the electrical drawings.

For armoured power cables, the armour must be connected to earth, as shown in the electrical drawings, and must give sufficient EMI protection. Copper wire armouring is normally used.

4.2.2 Separator Interconnection Diagram


Alfa Laval ref. 580906 Rev. 6

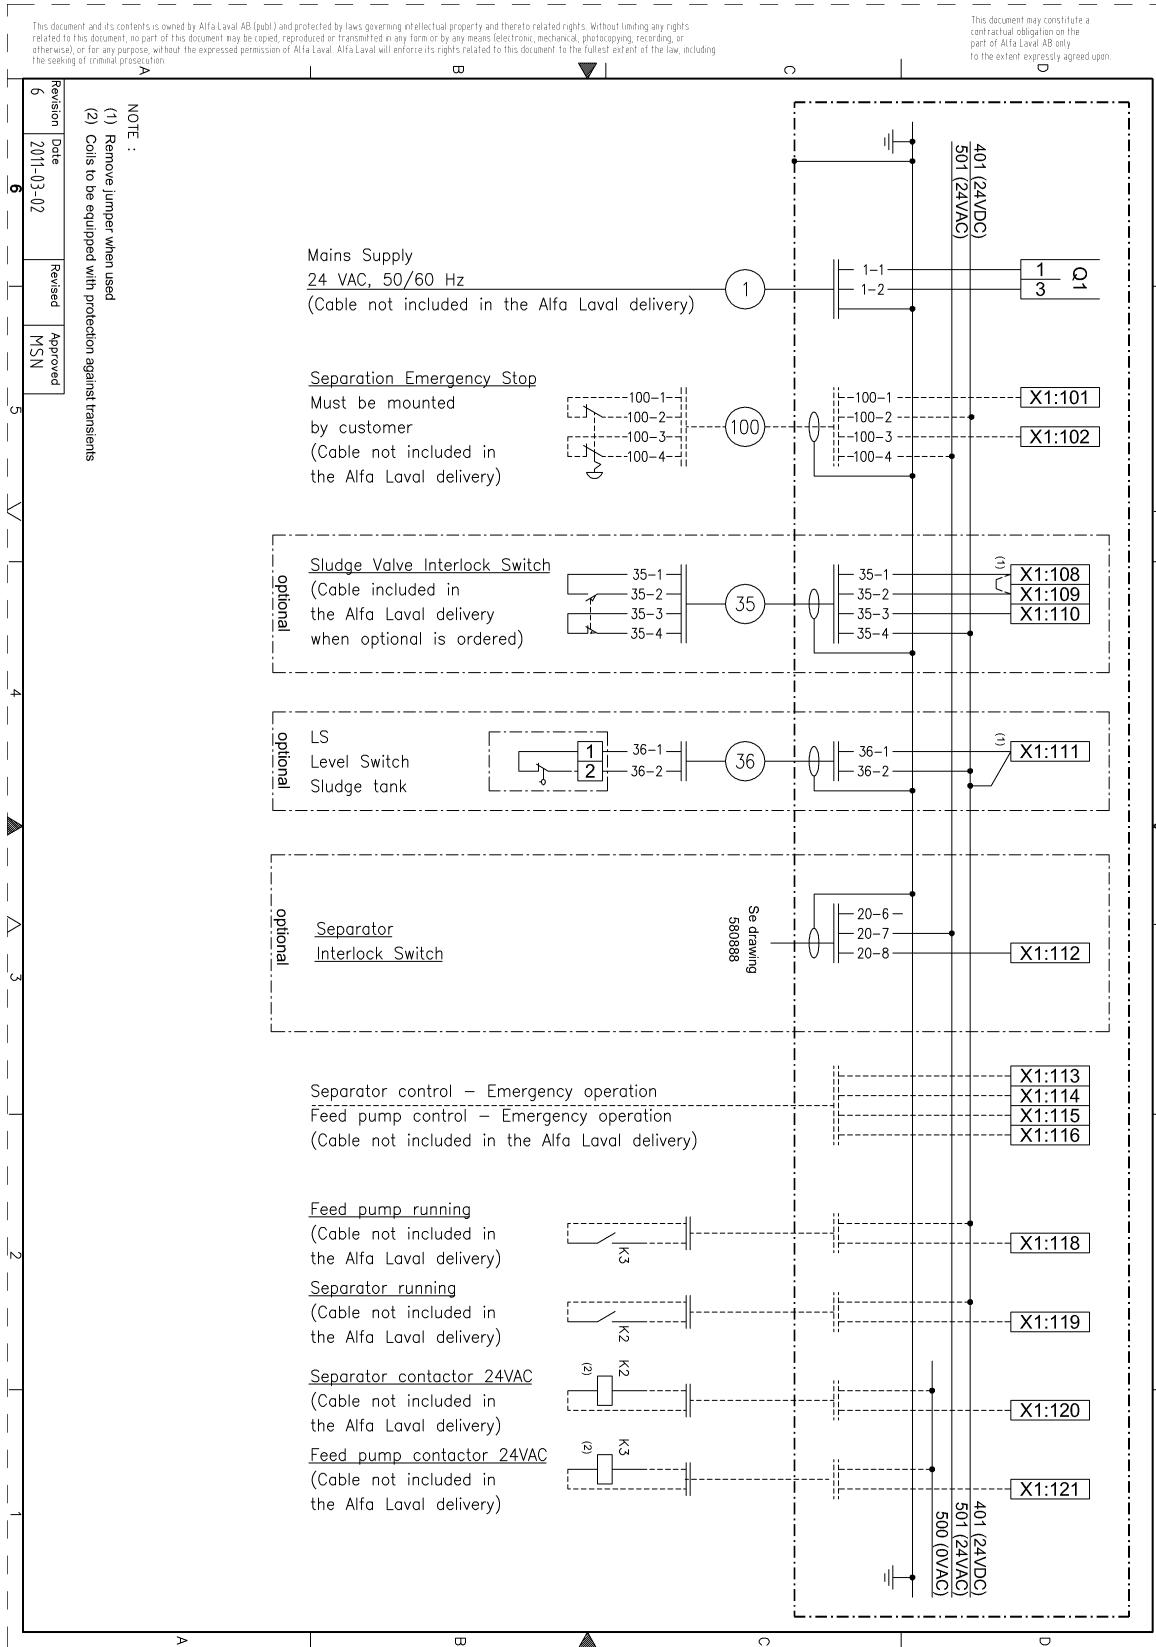

Alfa Laval ref. 580906 Rev. 6

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

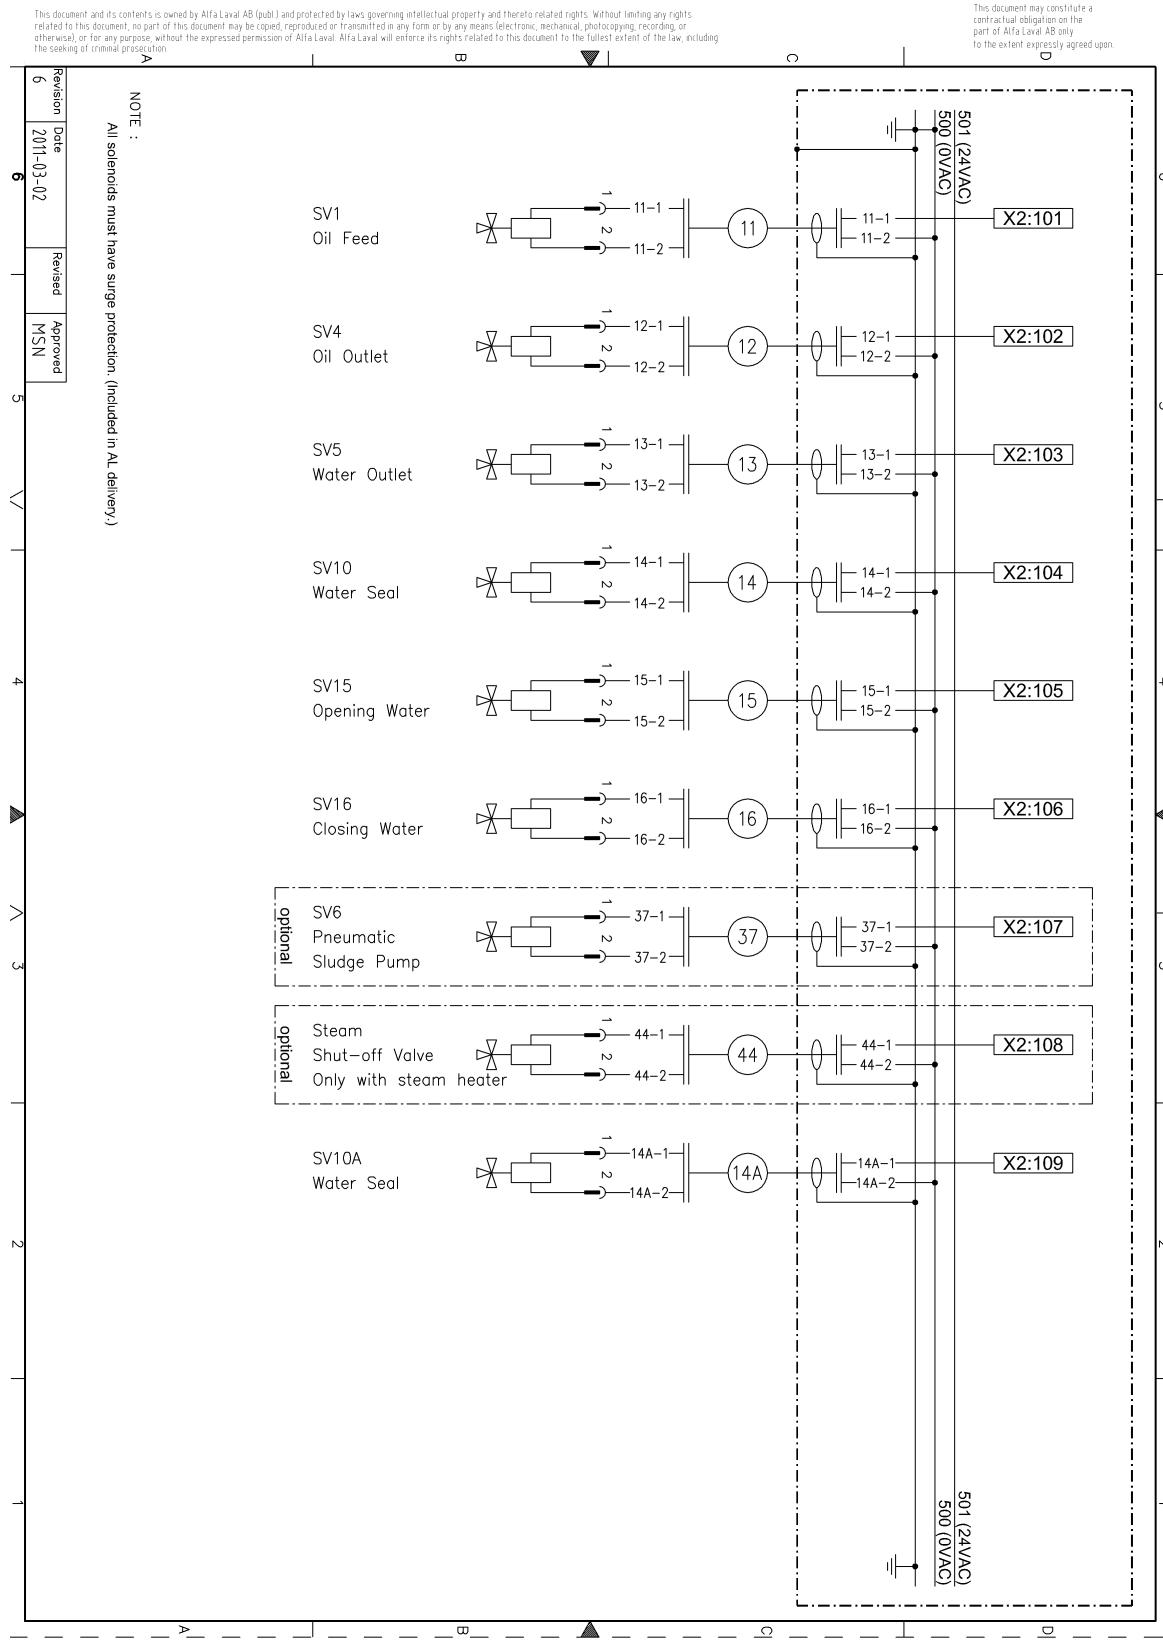

Alfa Laval ref. 580906 Rev. 6

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

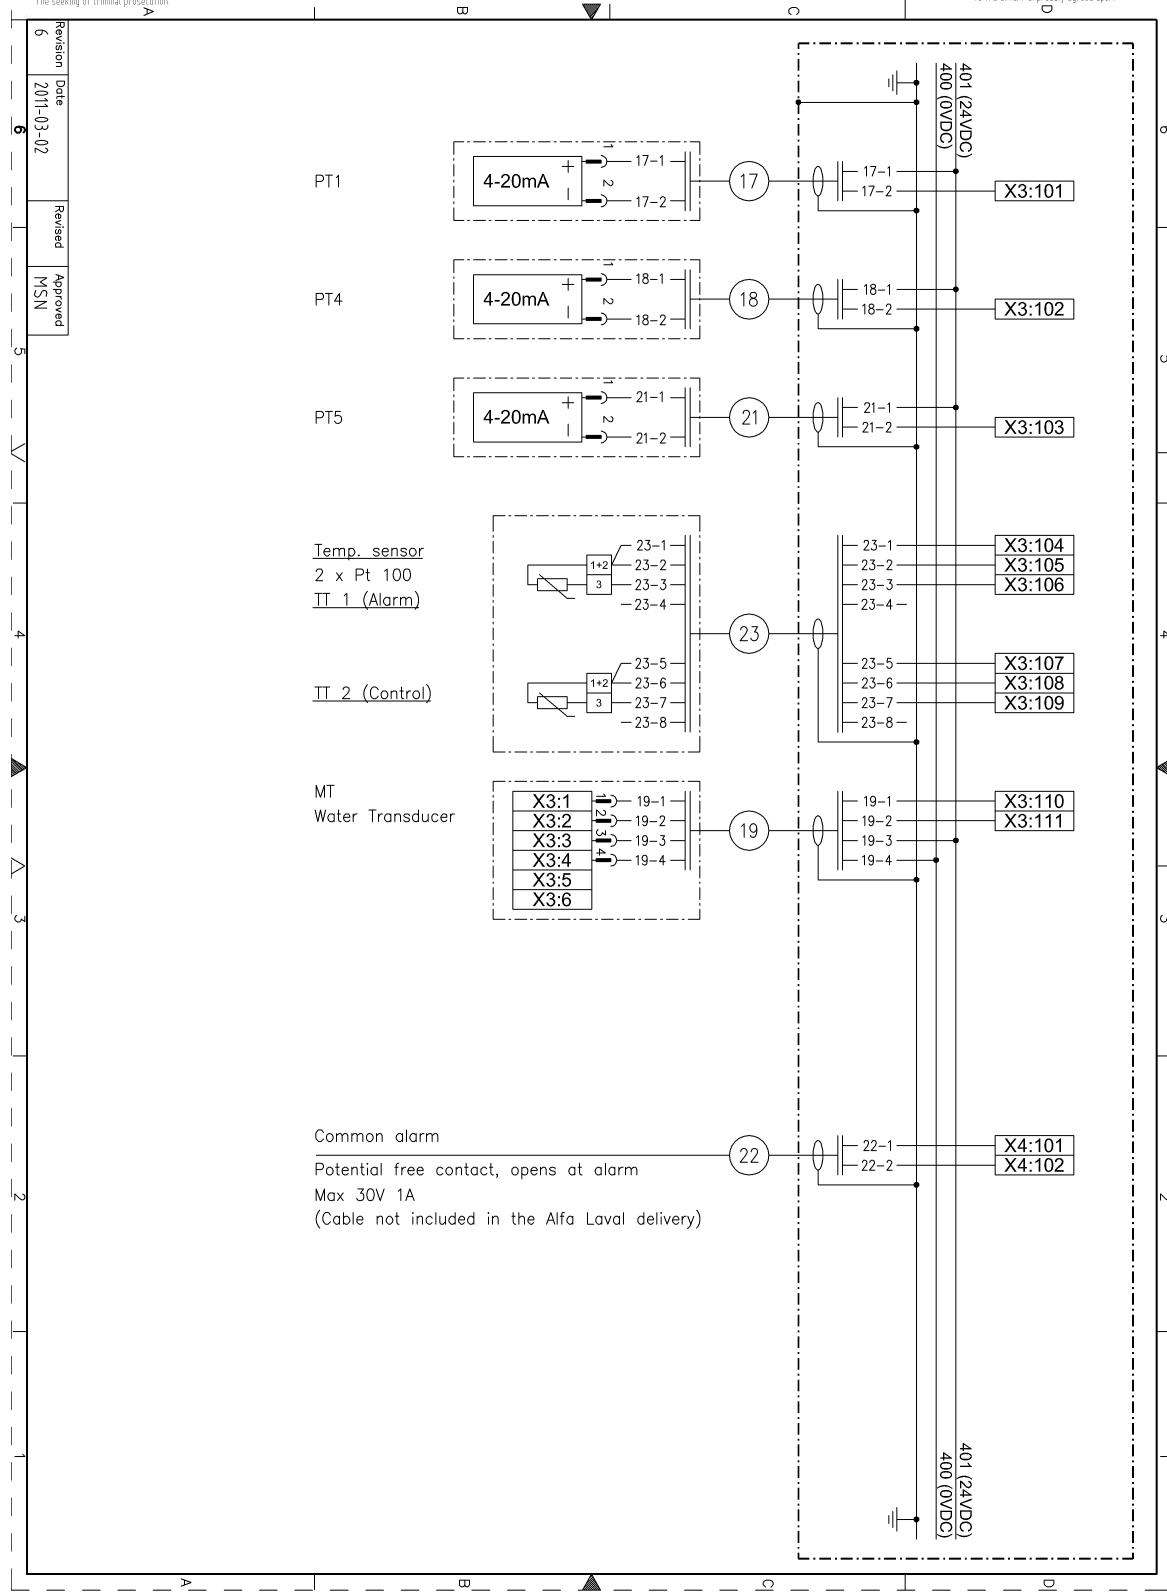

580906#6_02


4.2.3 Steam Regulating Valve (optional) Interconnection Diagram

Alfa Laval ref. 580886 Rev. 1

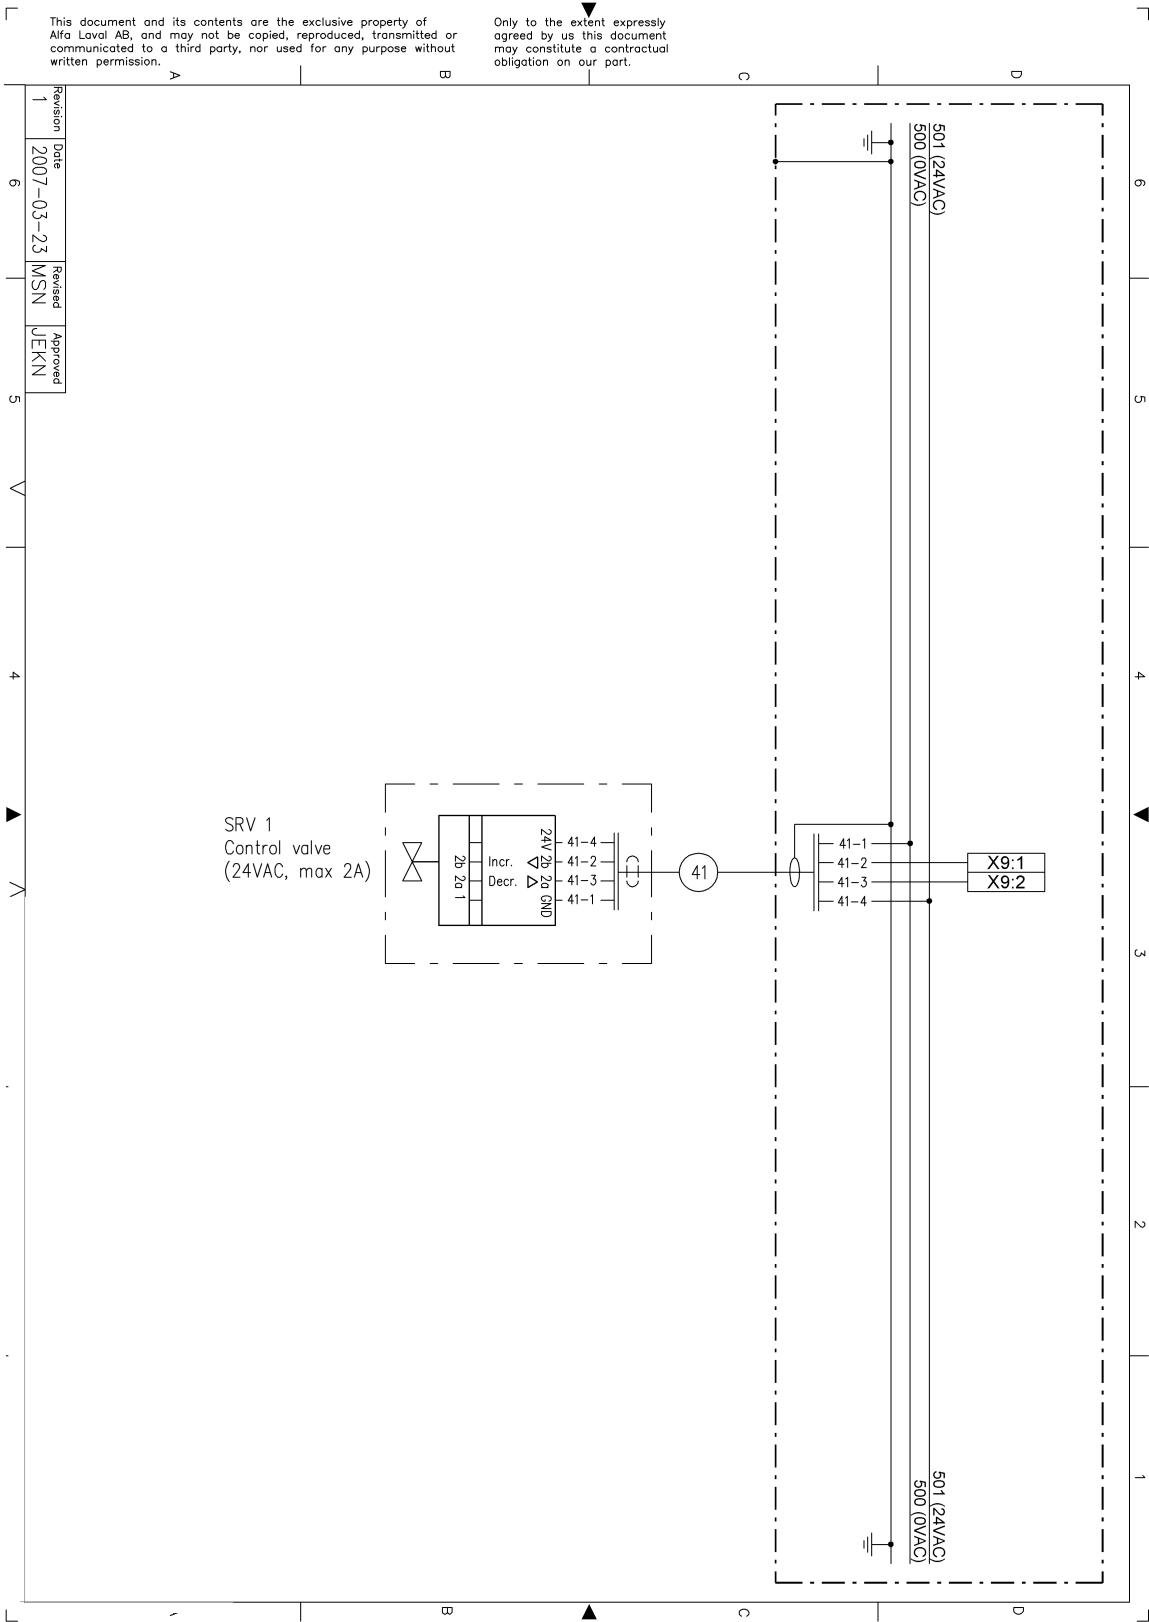

4.2.4 Speed Transmitter (optional) Interconnection Diagram


Alfa Laval ref. 580888 Rev. 4

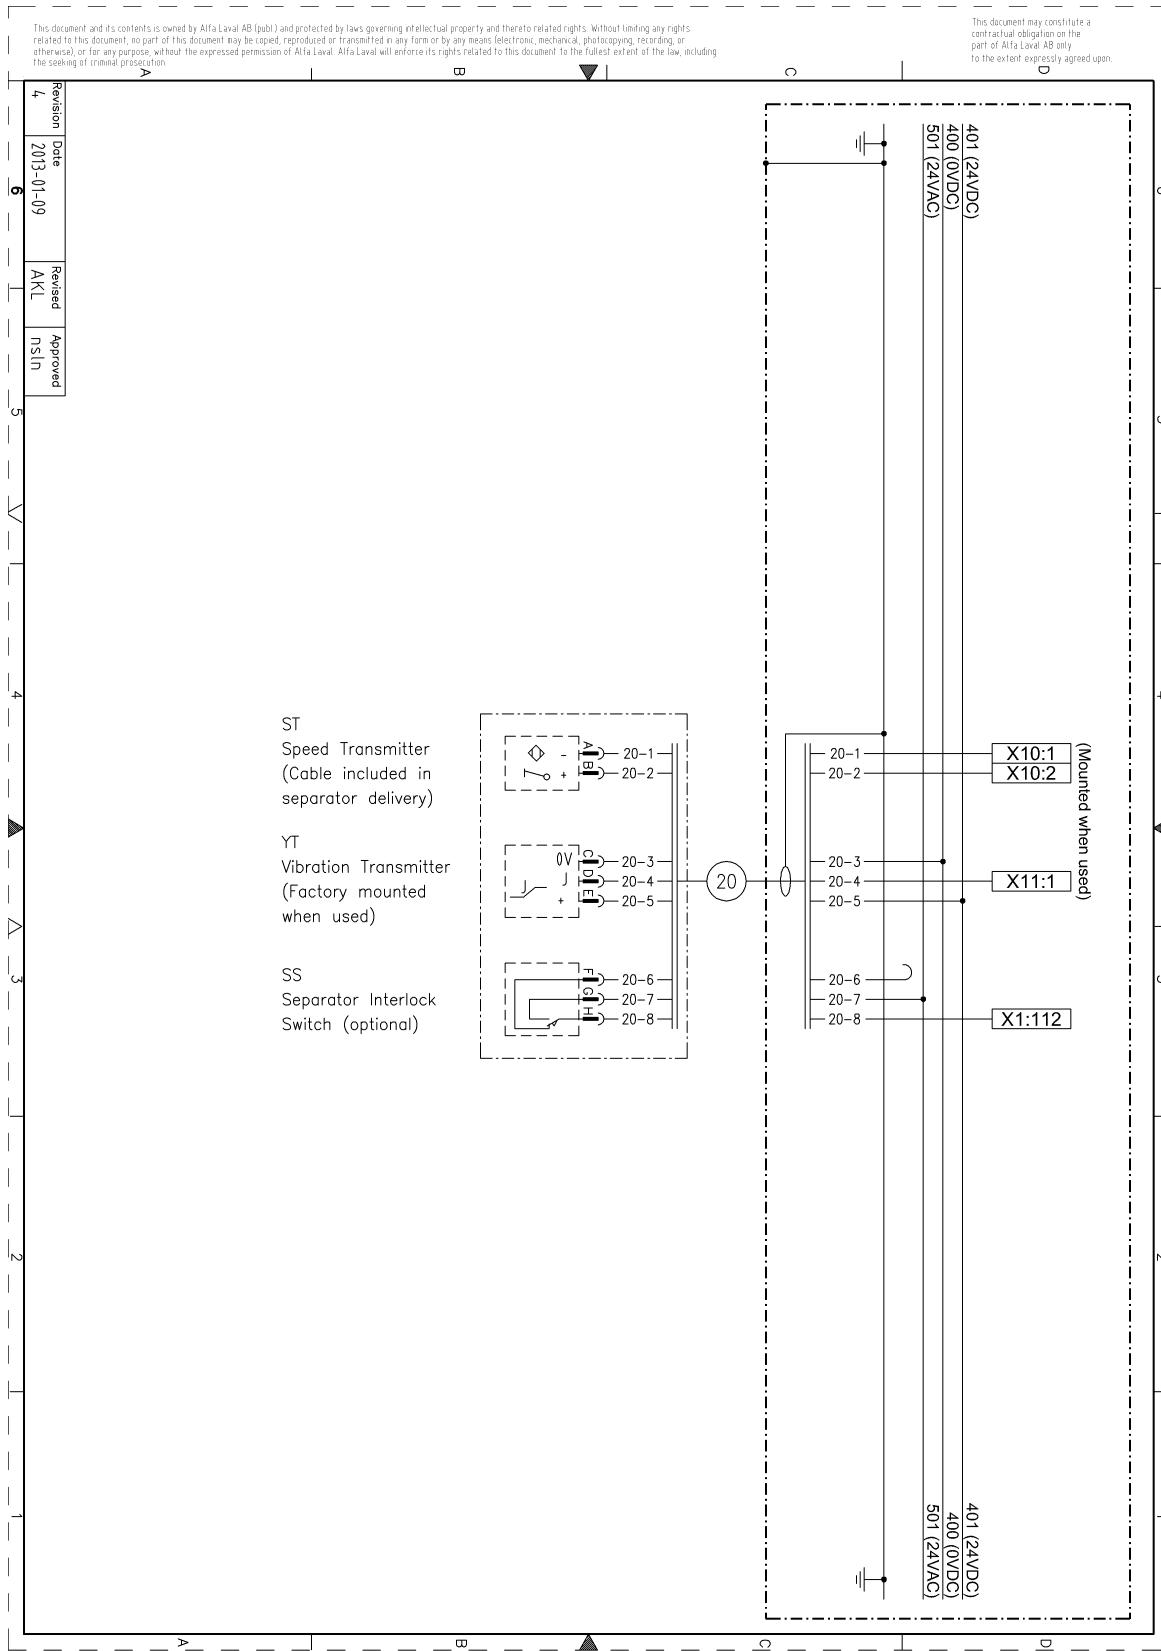

580888#4_00


4.2.5 Vibration Transmitter (optional) Interconnection Diagram

Alfa Laval ref. 580890 Rev. 1

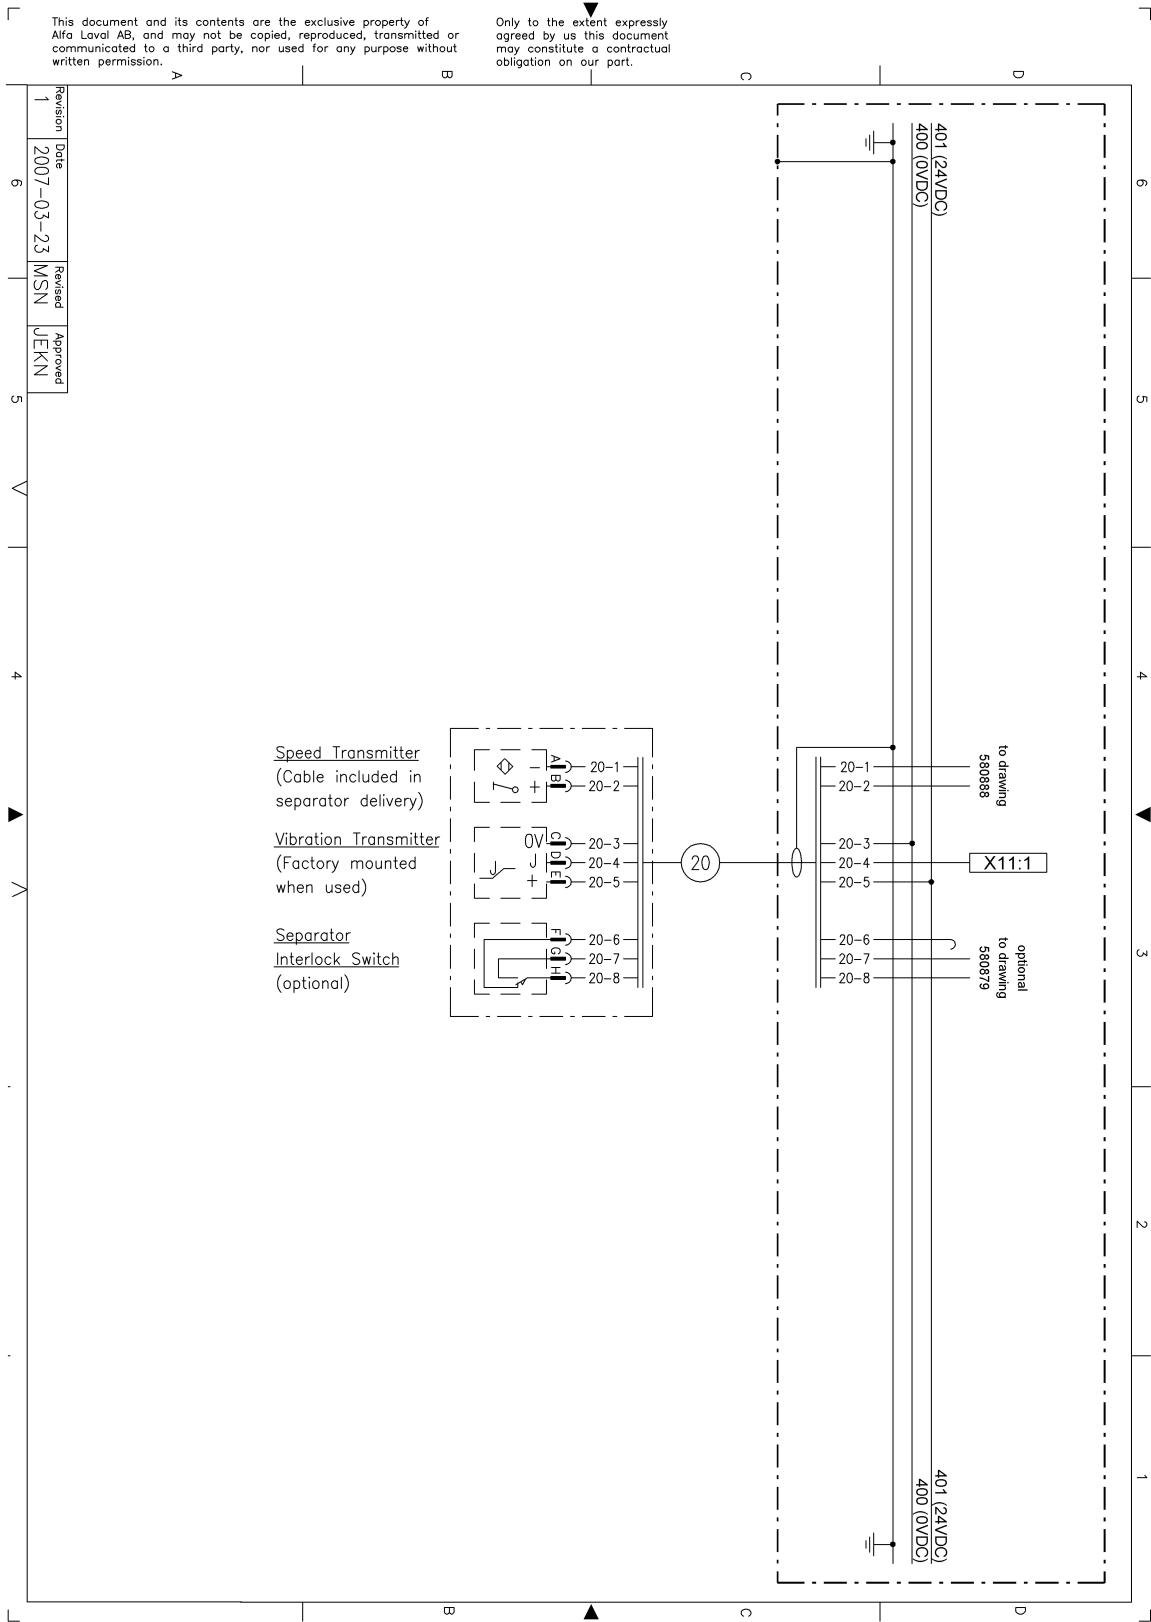


4.2.6 Electric Heater (optional) Interconnection Diagram

Alfa Laval ref. 580896 Rev. 1

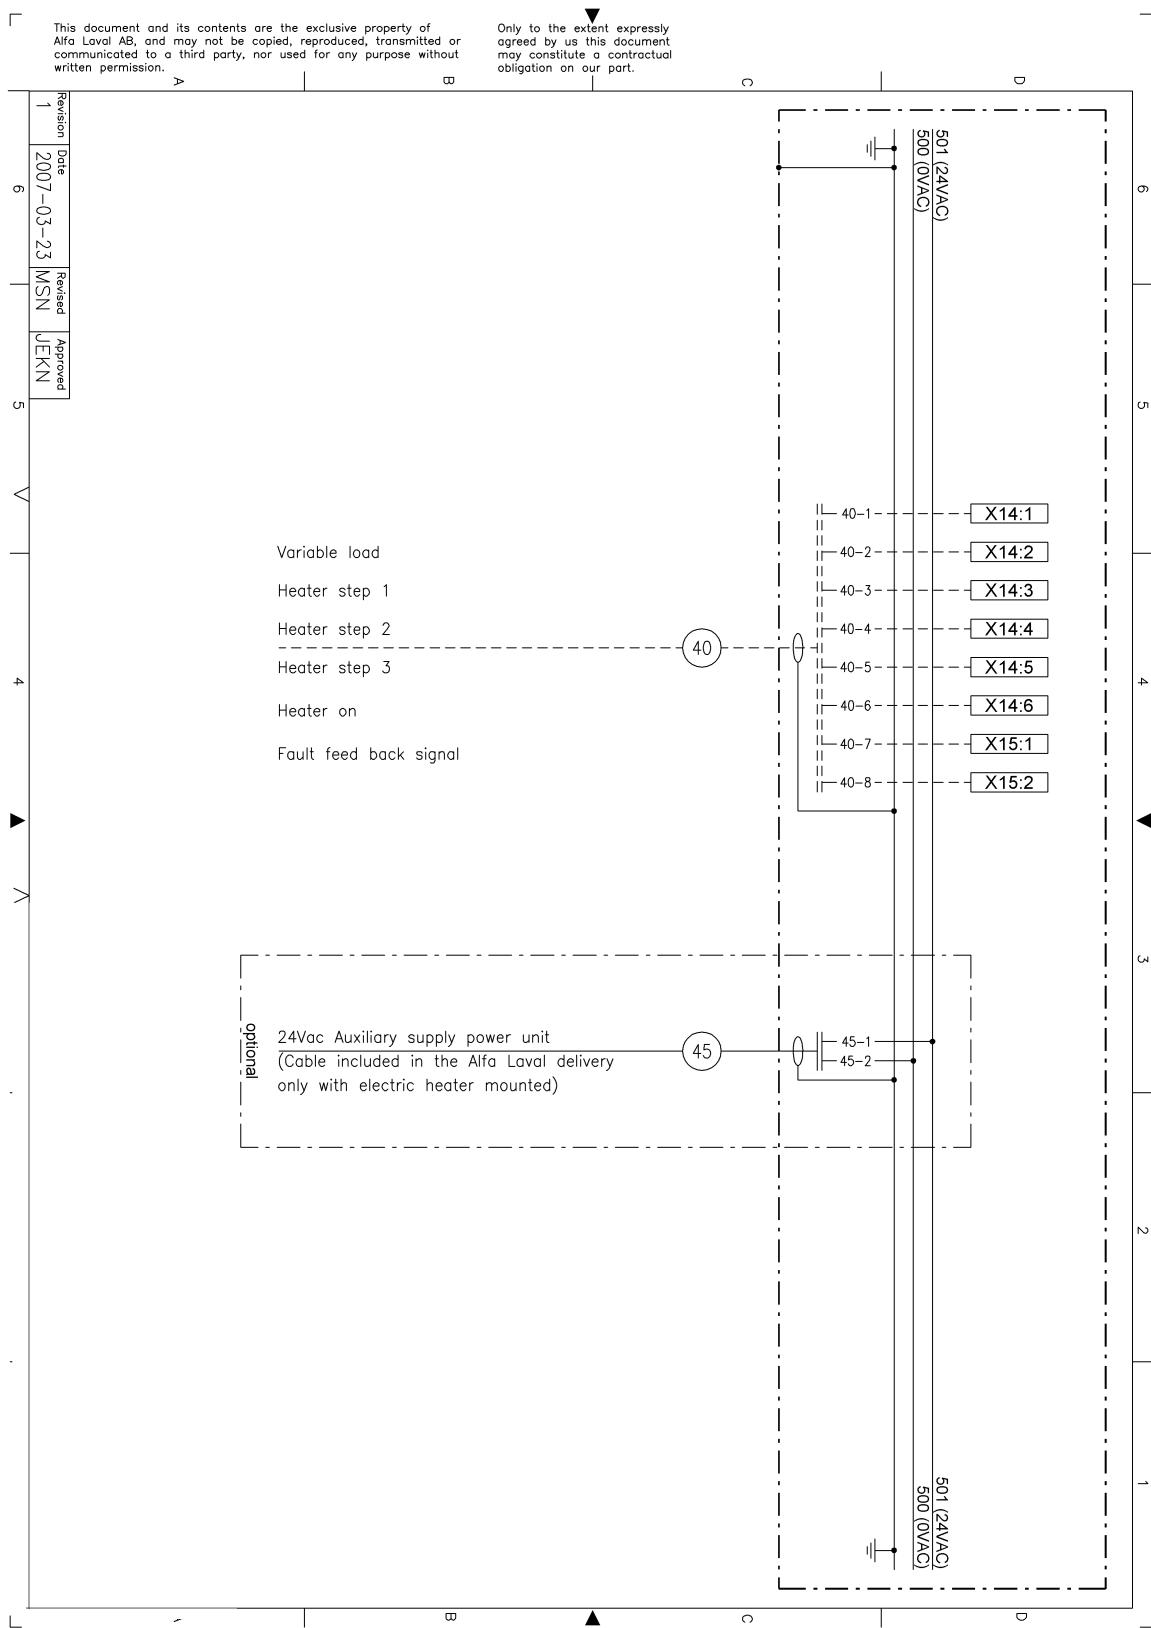

4.2.7 I/O (optional) Interconnection Diagram


Alfa Laval ref. 580894 Rev. 4

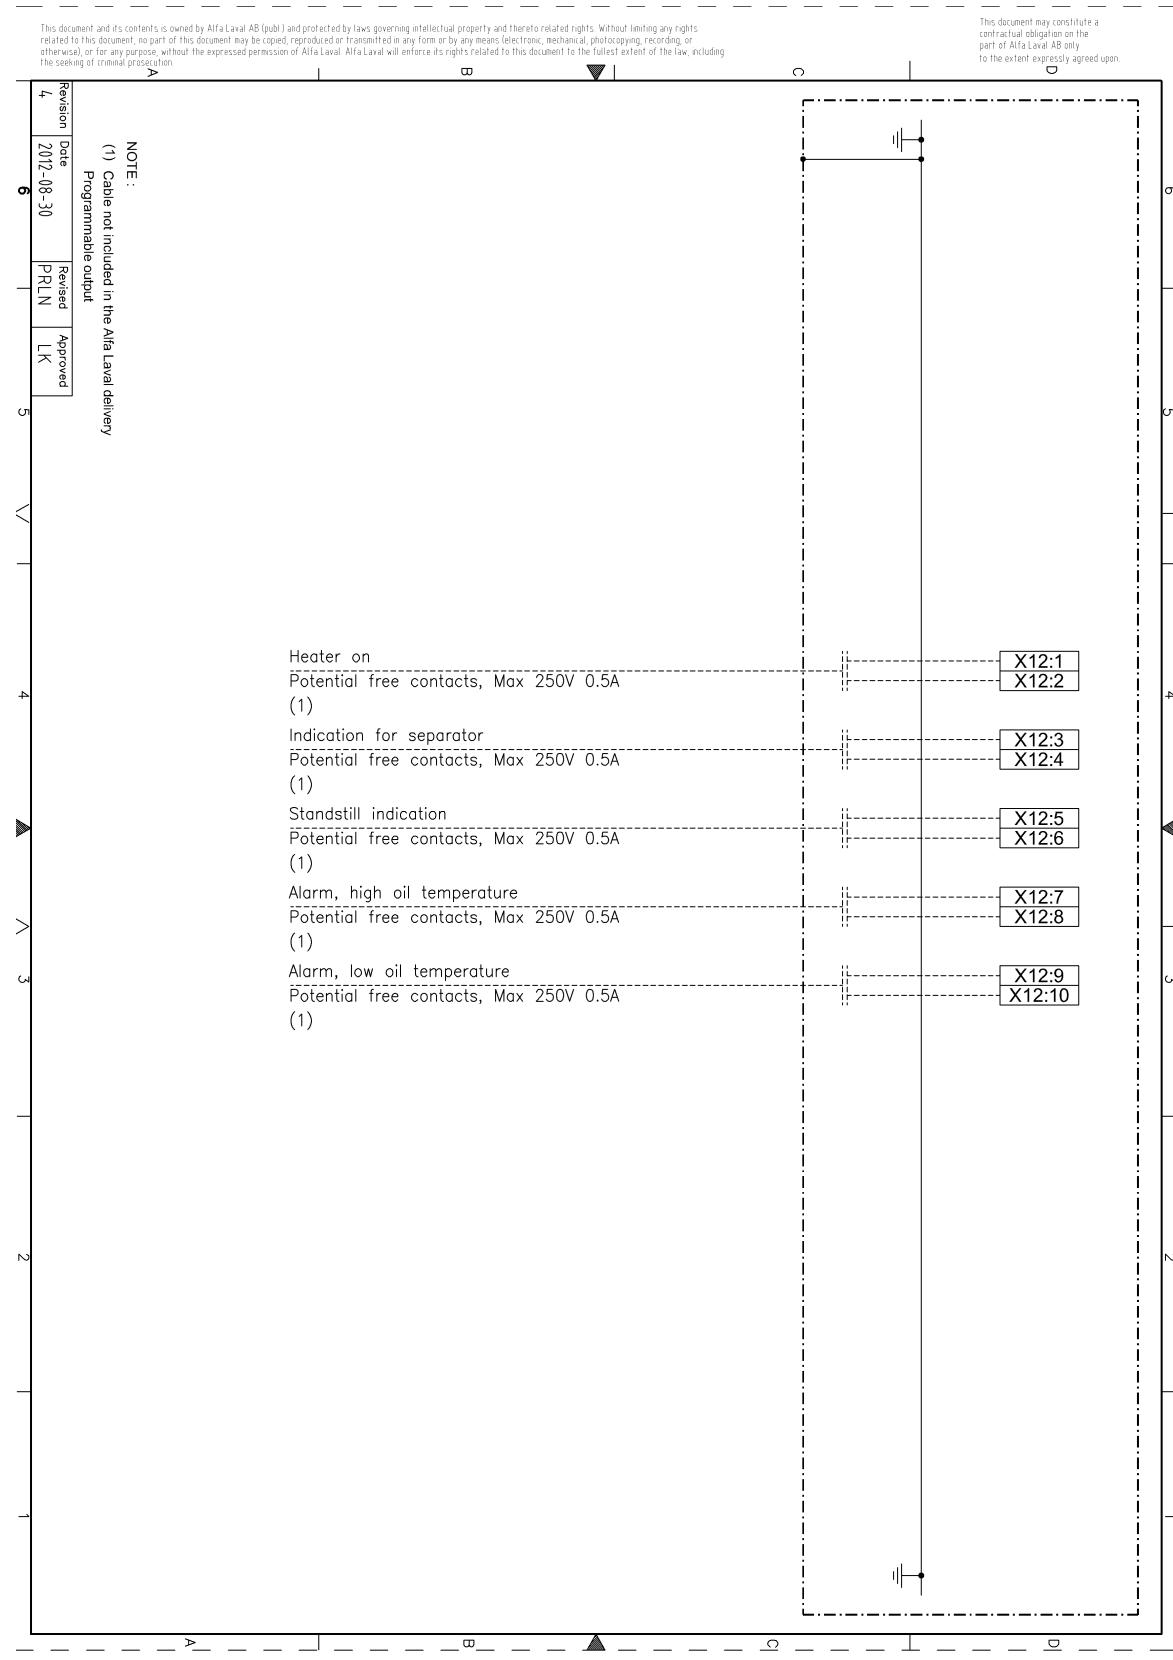

Alfa Laval ref. 580894 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the scaling of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

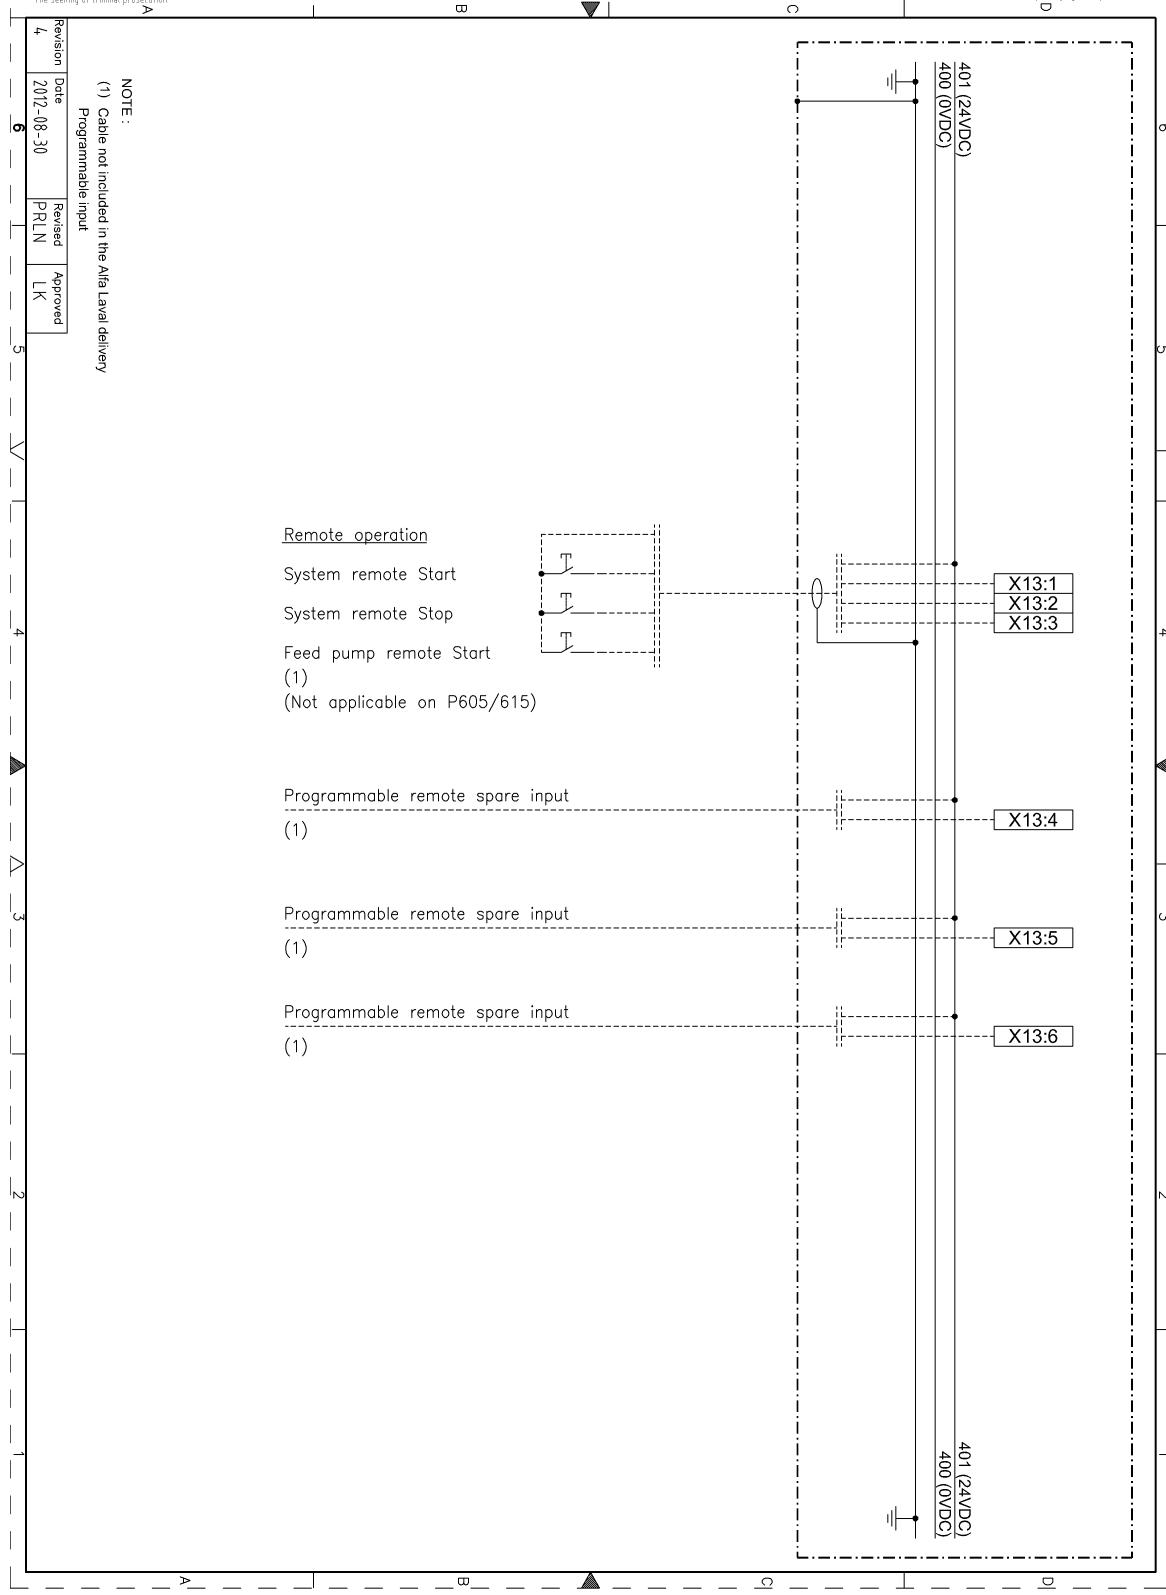

580894#4_01


4.2.8 Heat Tracing (optional) Interconnection Diagram

Alfa Laval ref. 580884 Rev. 0

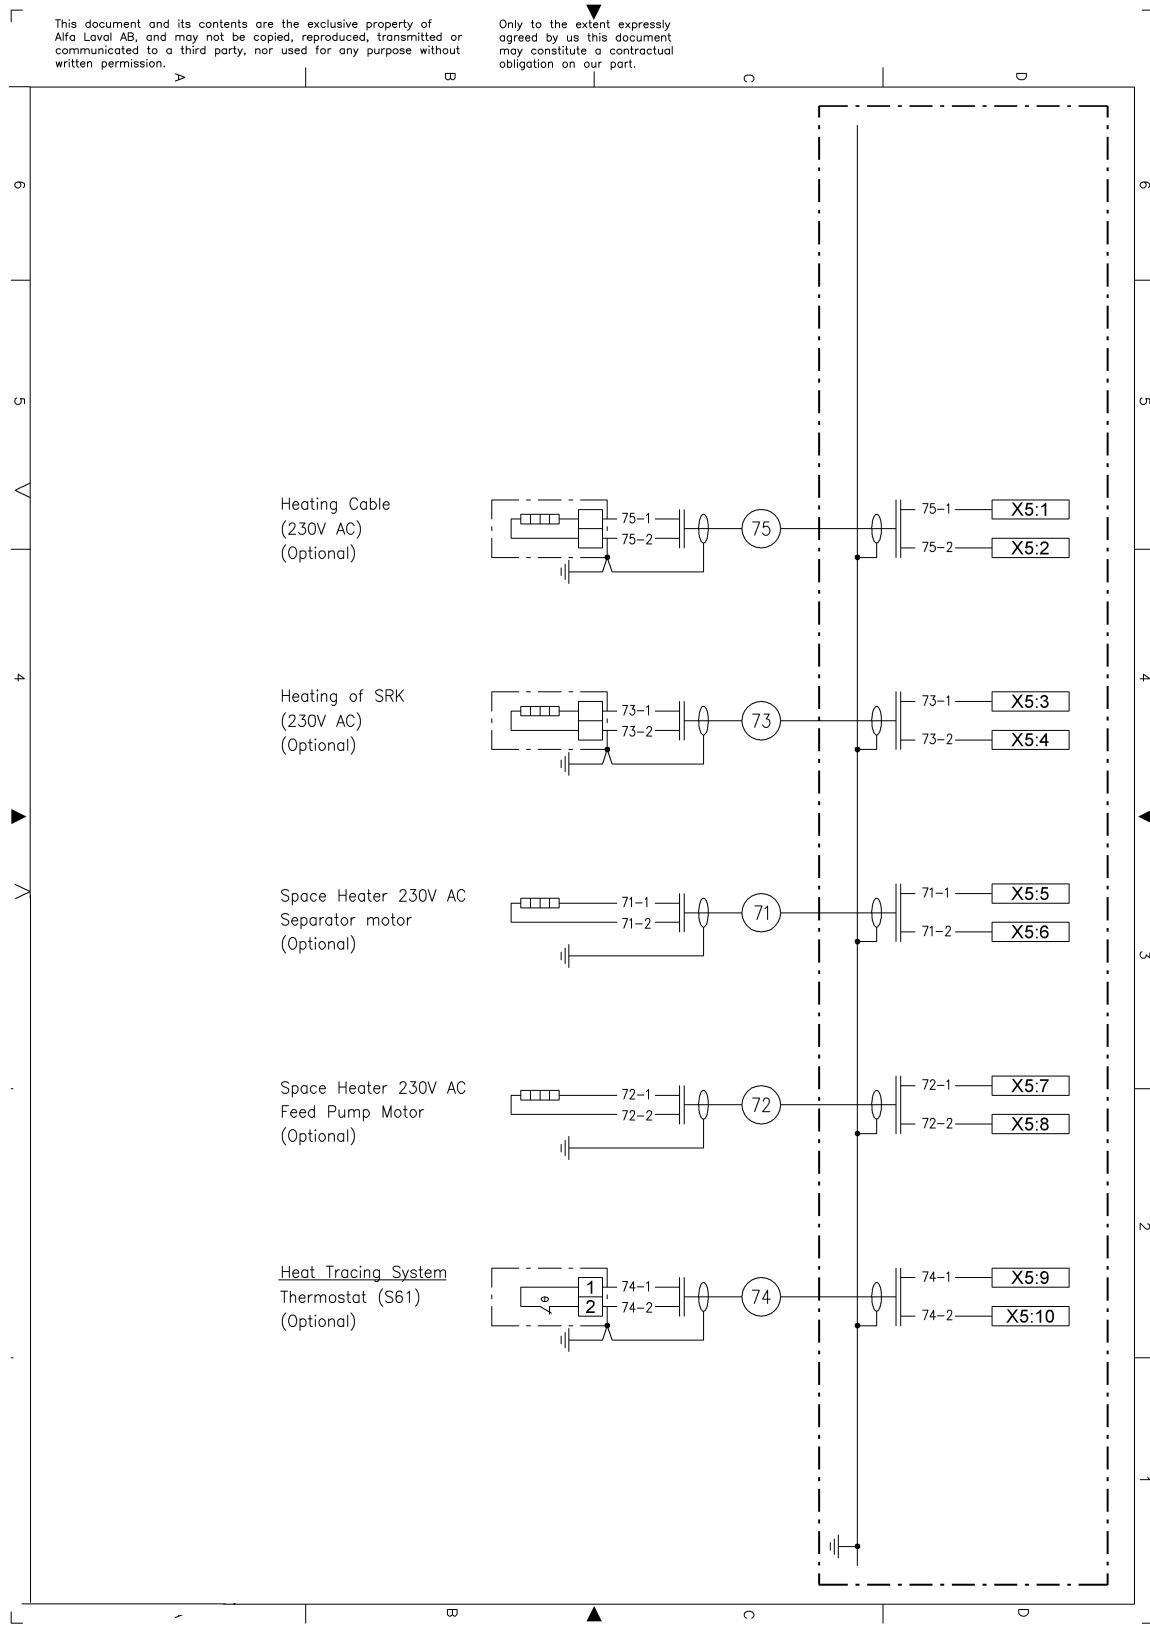

4.2.9 Emergency Shutdown Interconnection Diagram

Alfa Laval ref. 580898 Rev. 0

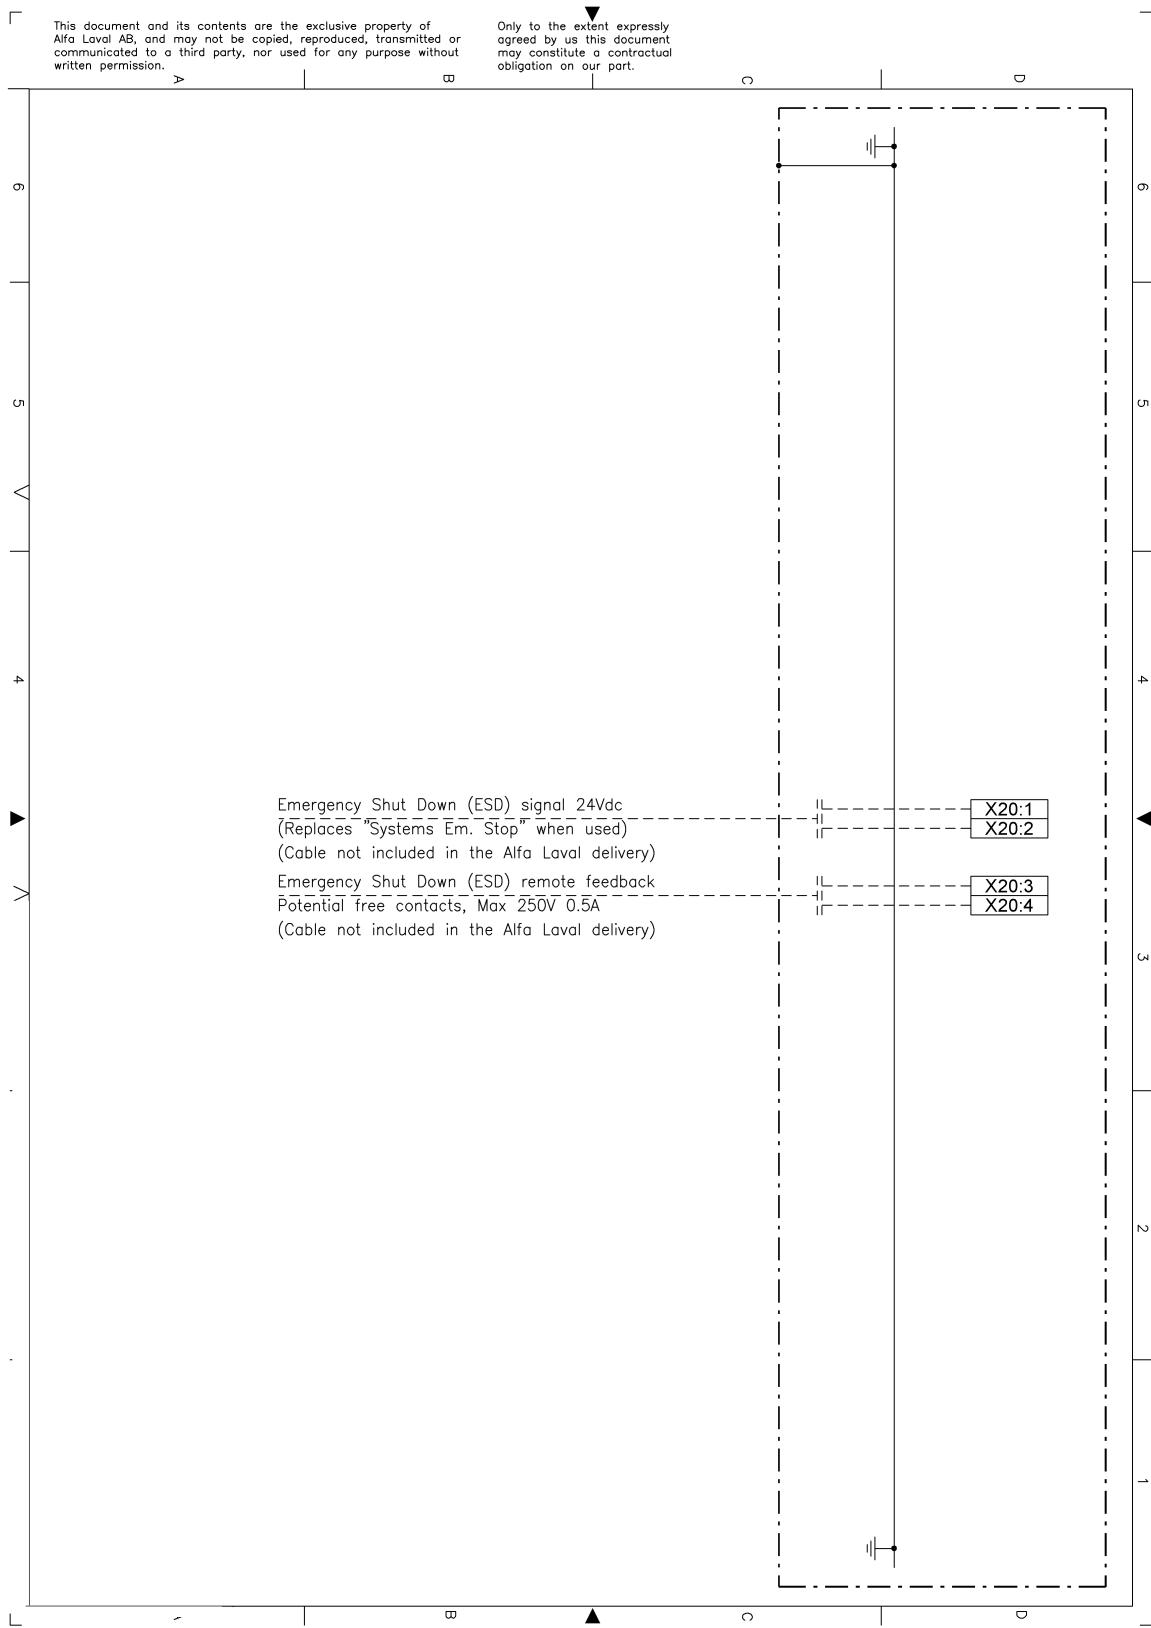


4.2.10 Circuit Diagram

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereby related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the express permission of Alfa Laval. Alfa Laval will enforce its right's related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

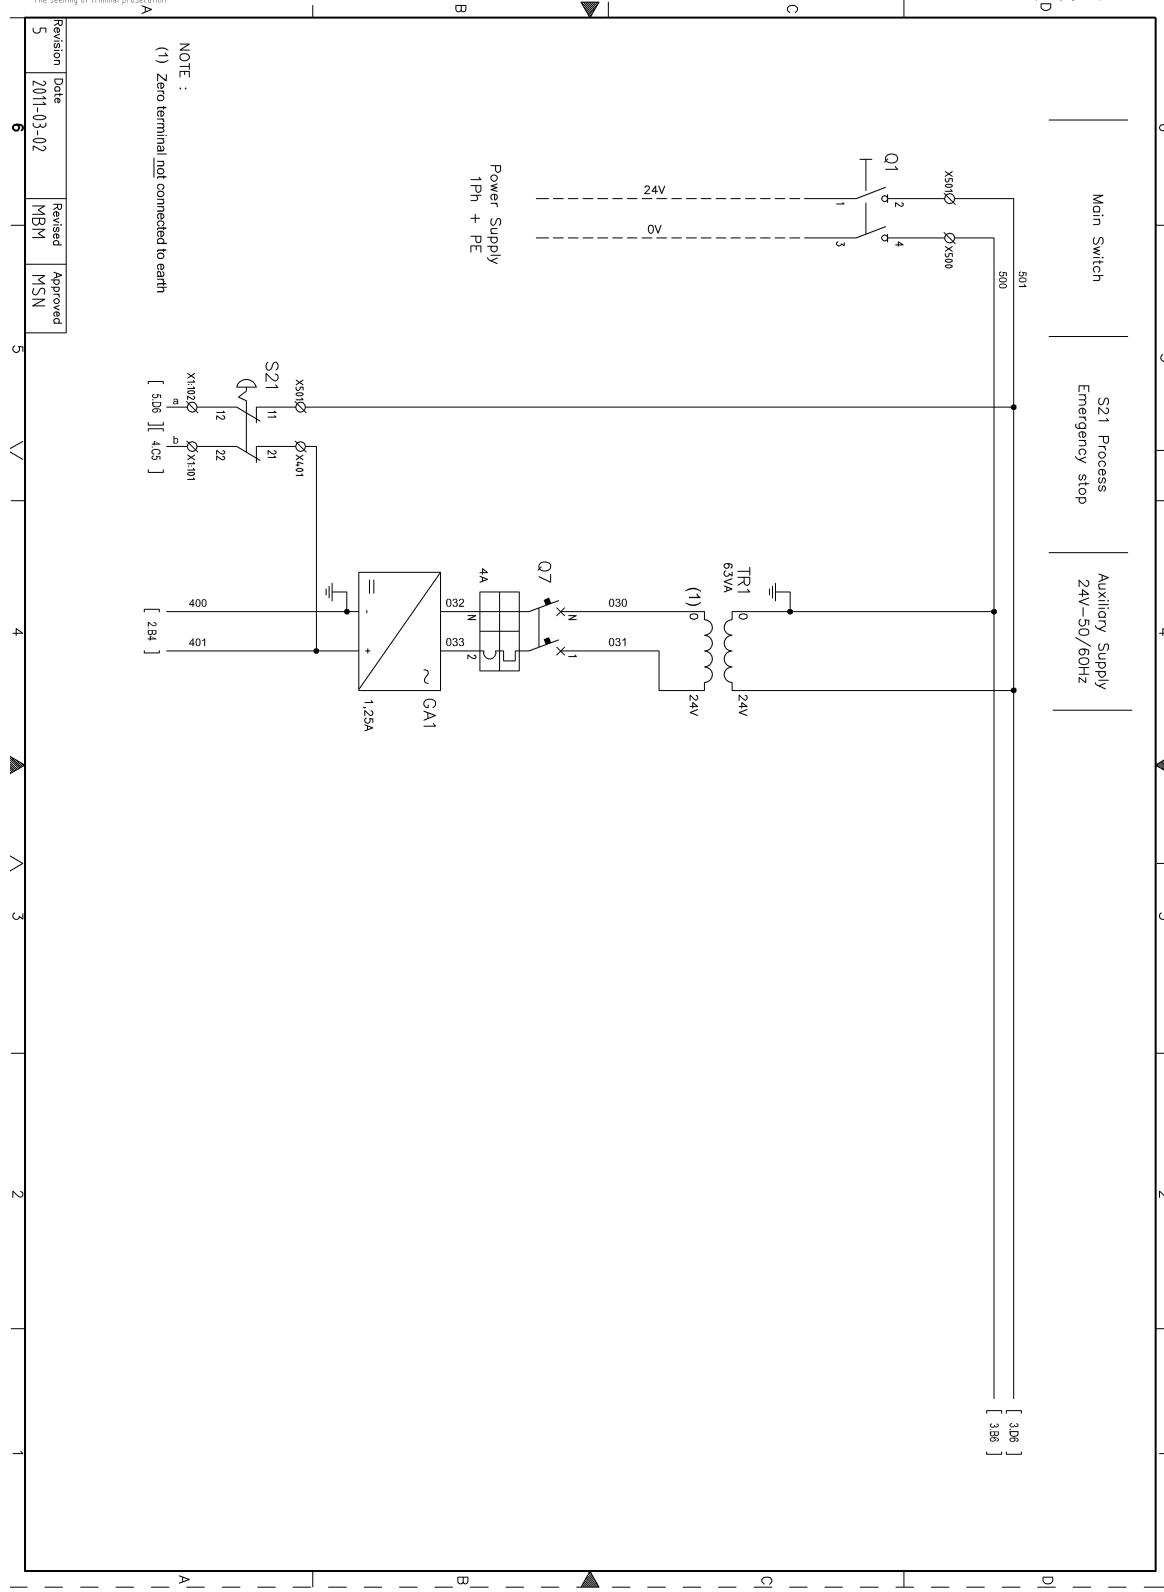

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

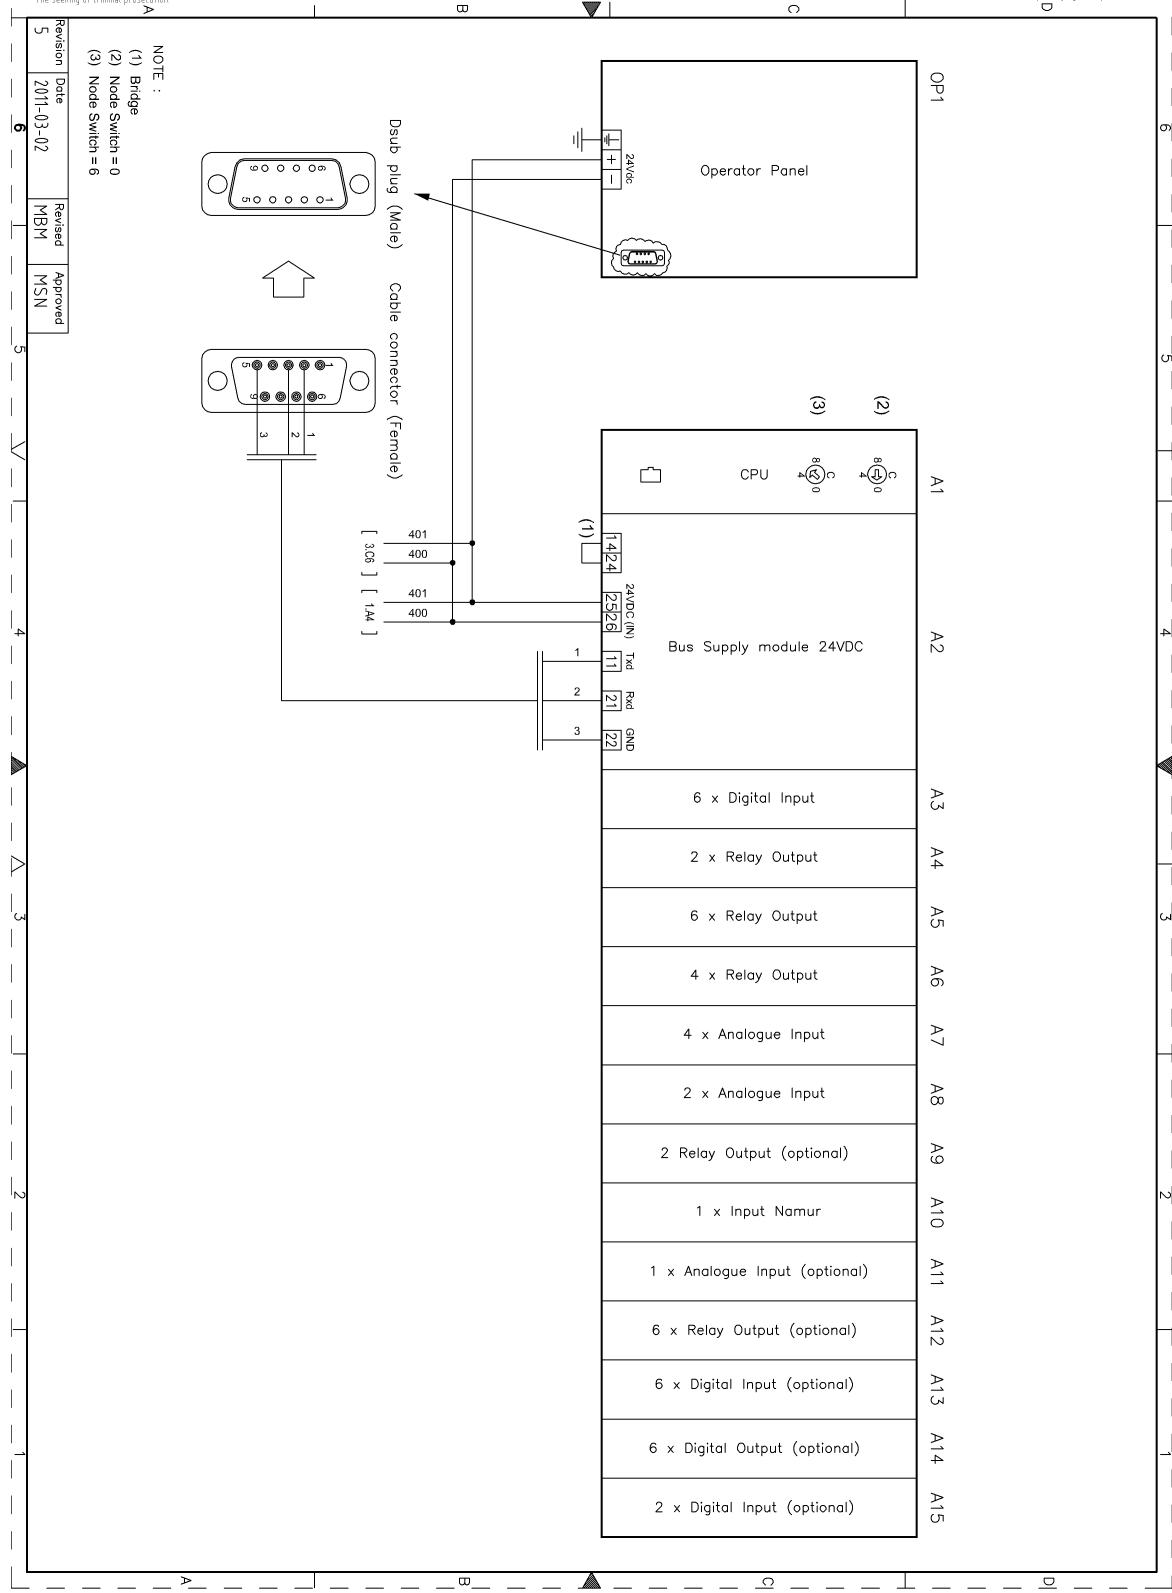


580905#_01

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

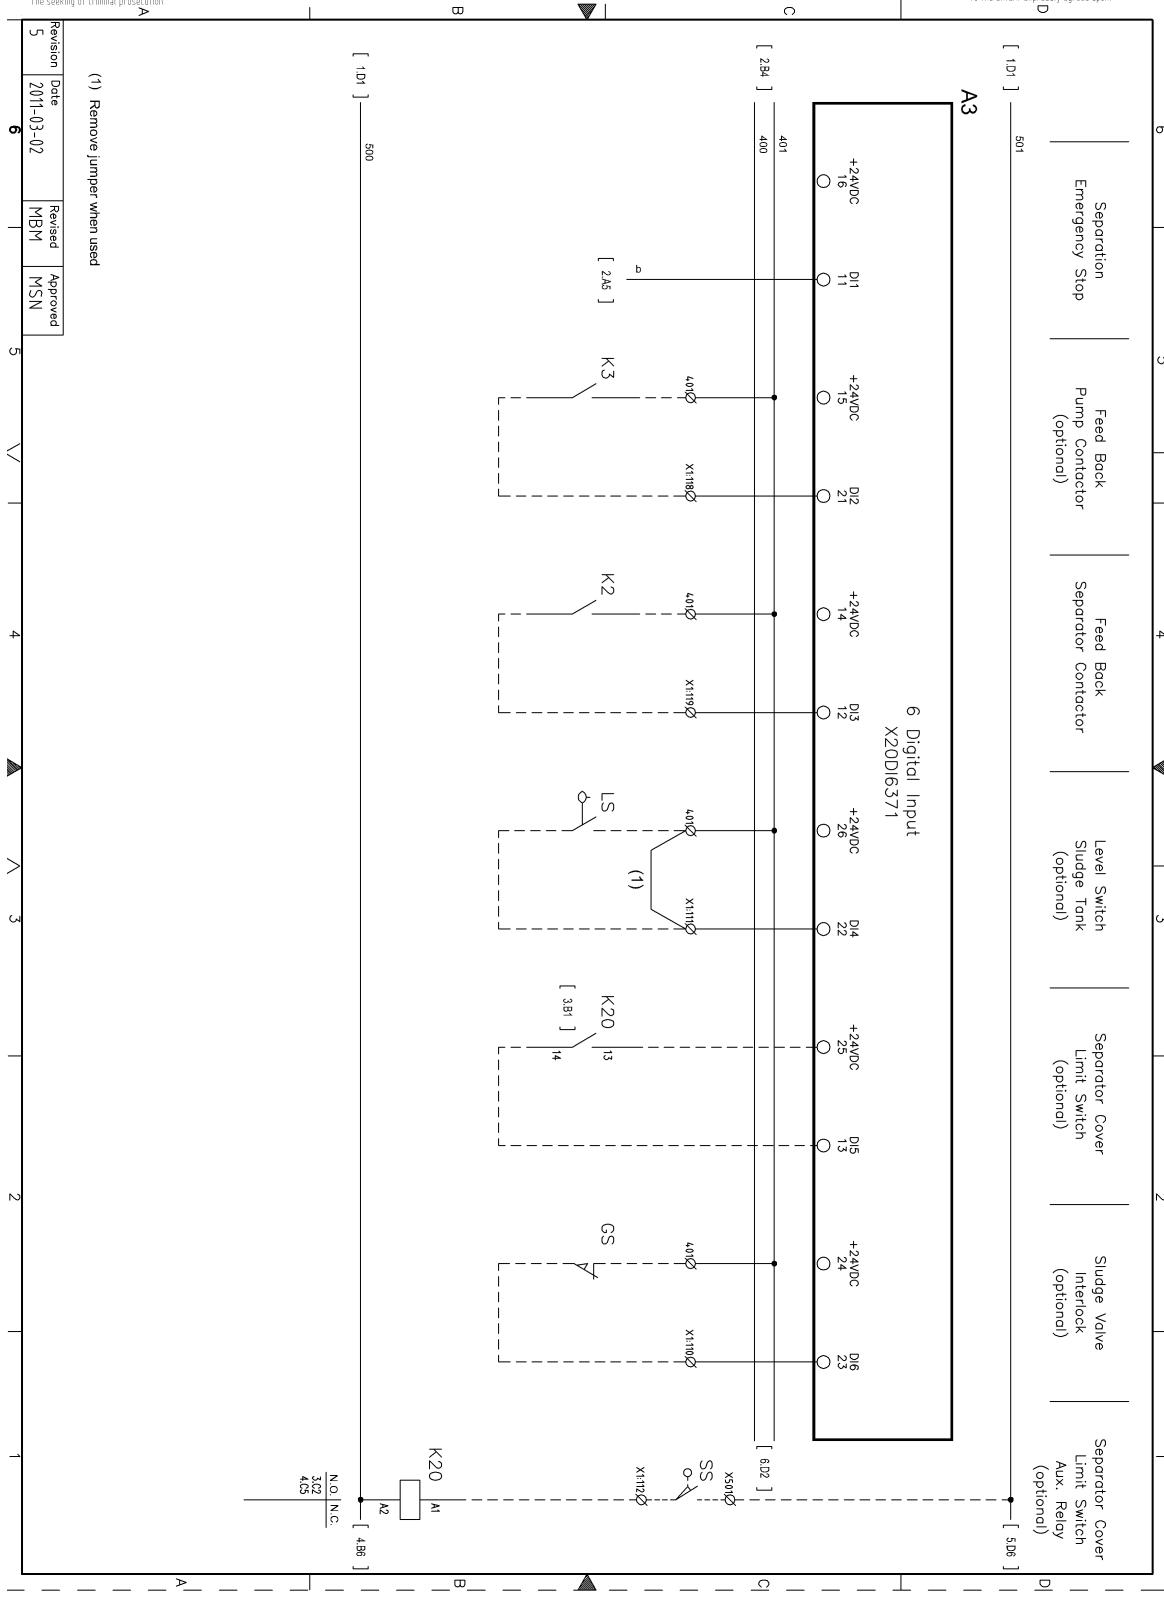


(1) Remove jumper when used

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

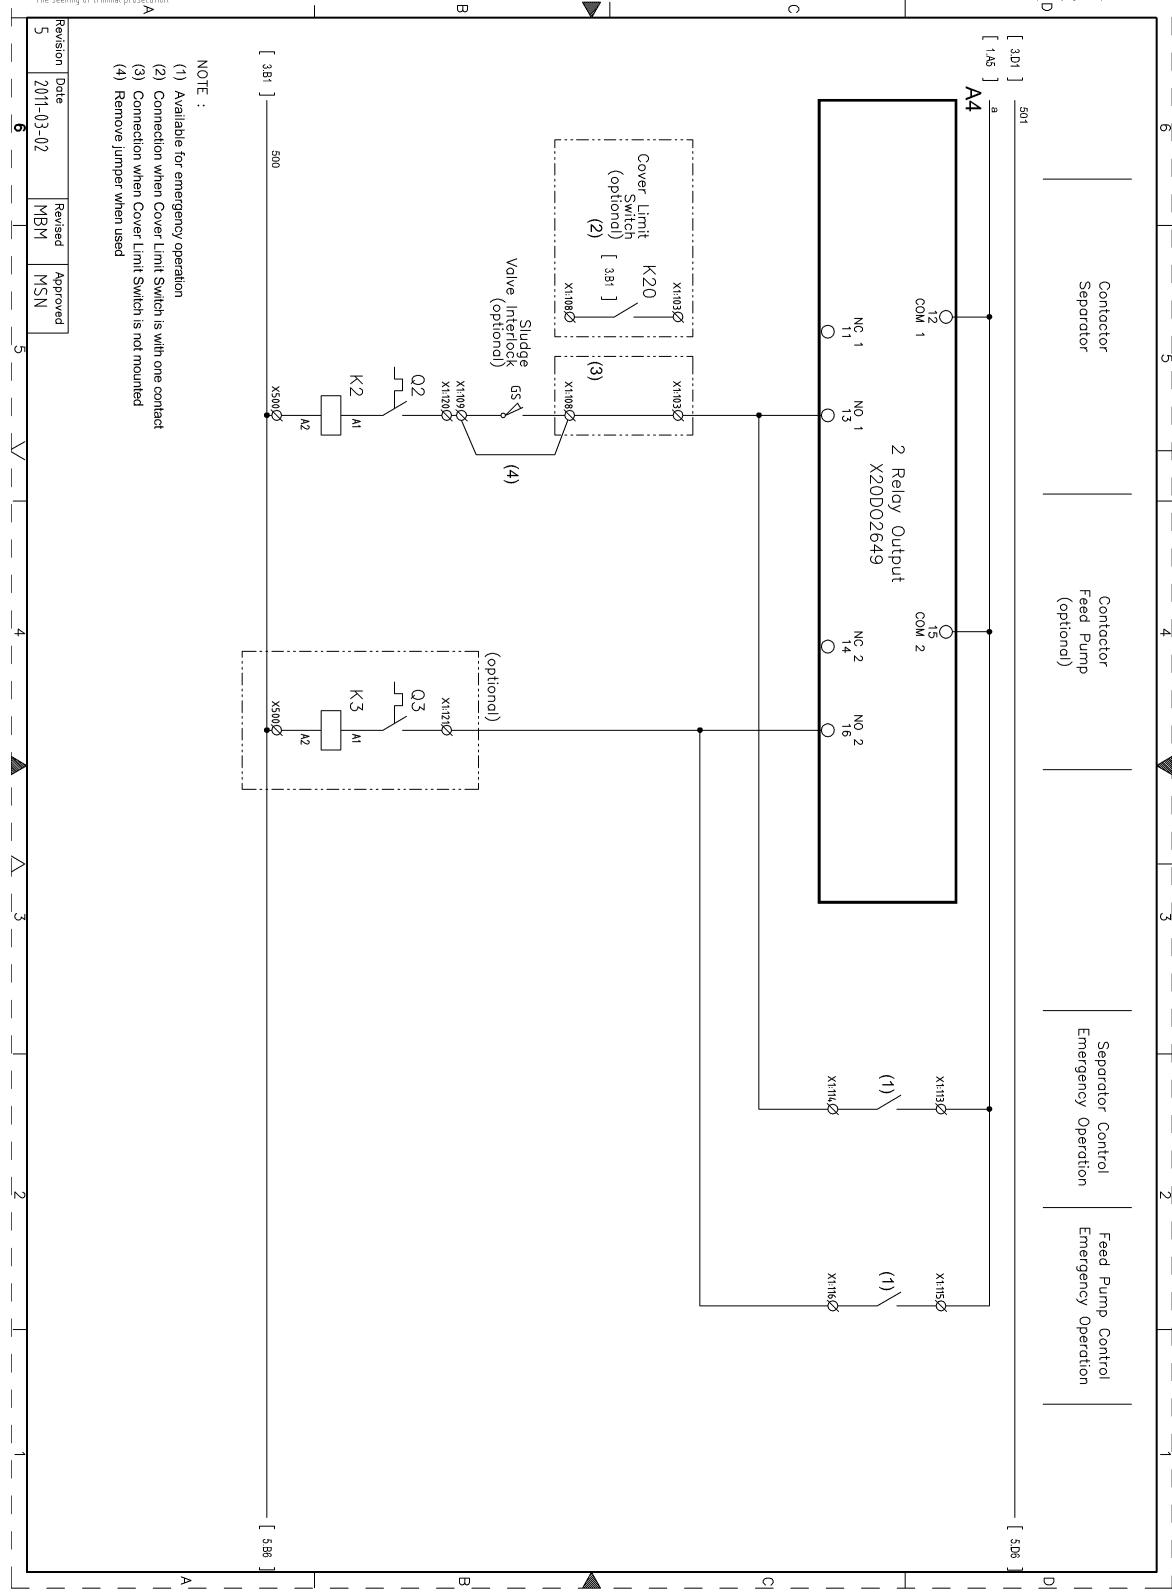


580905#5_03

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

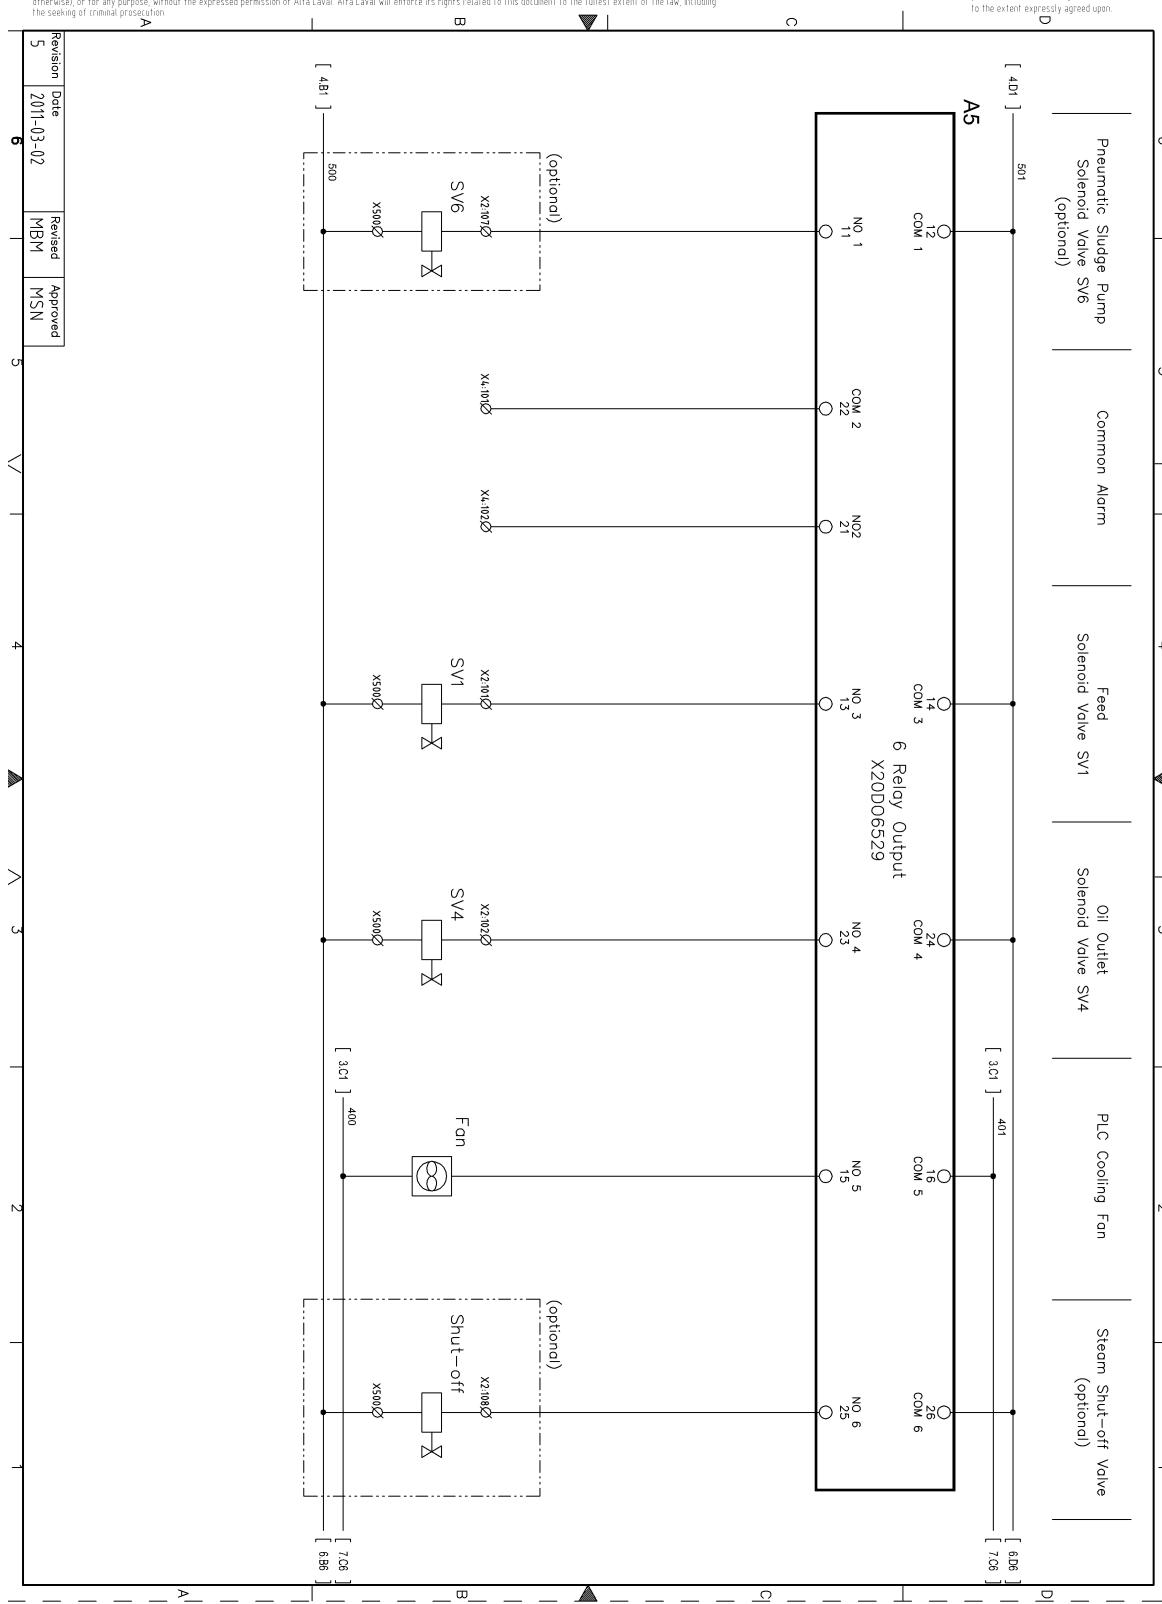


580905#5_04

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereby related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

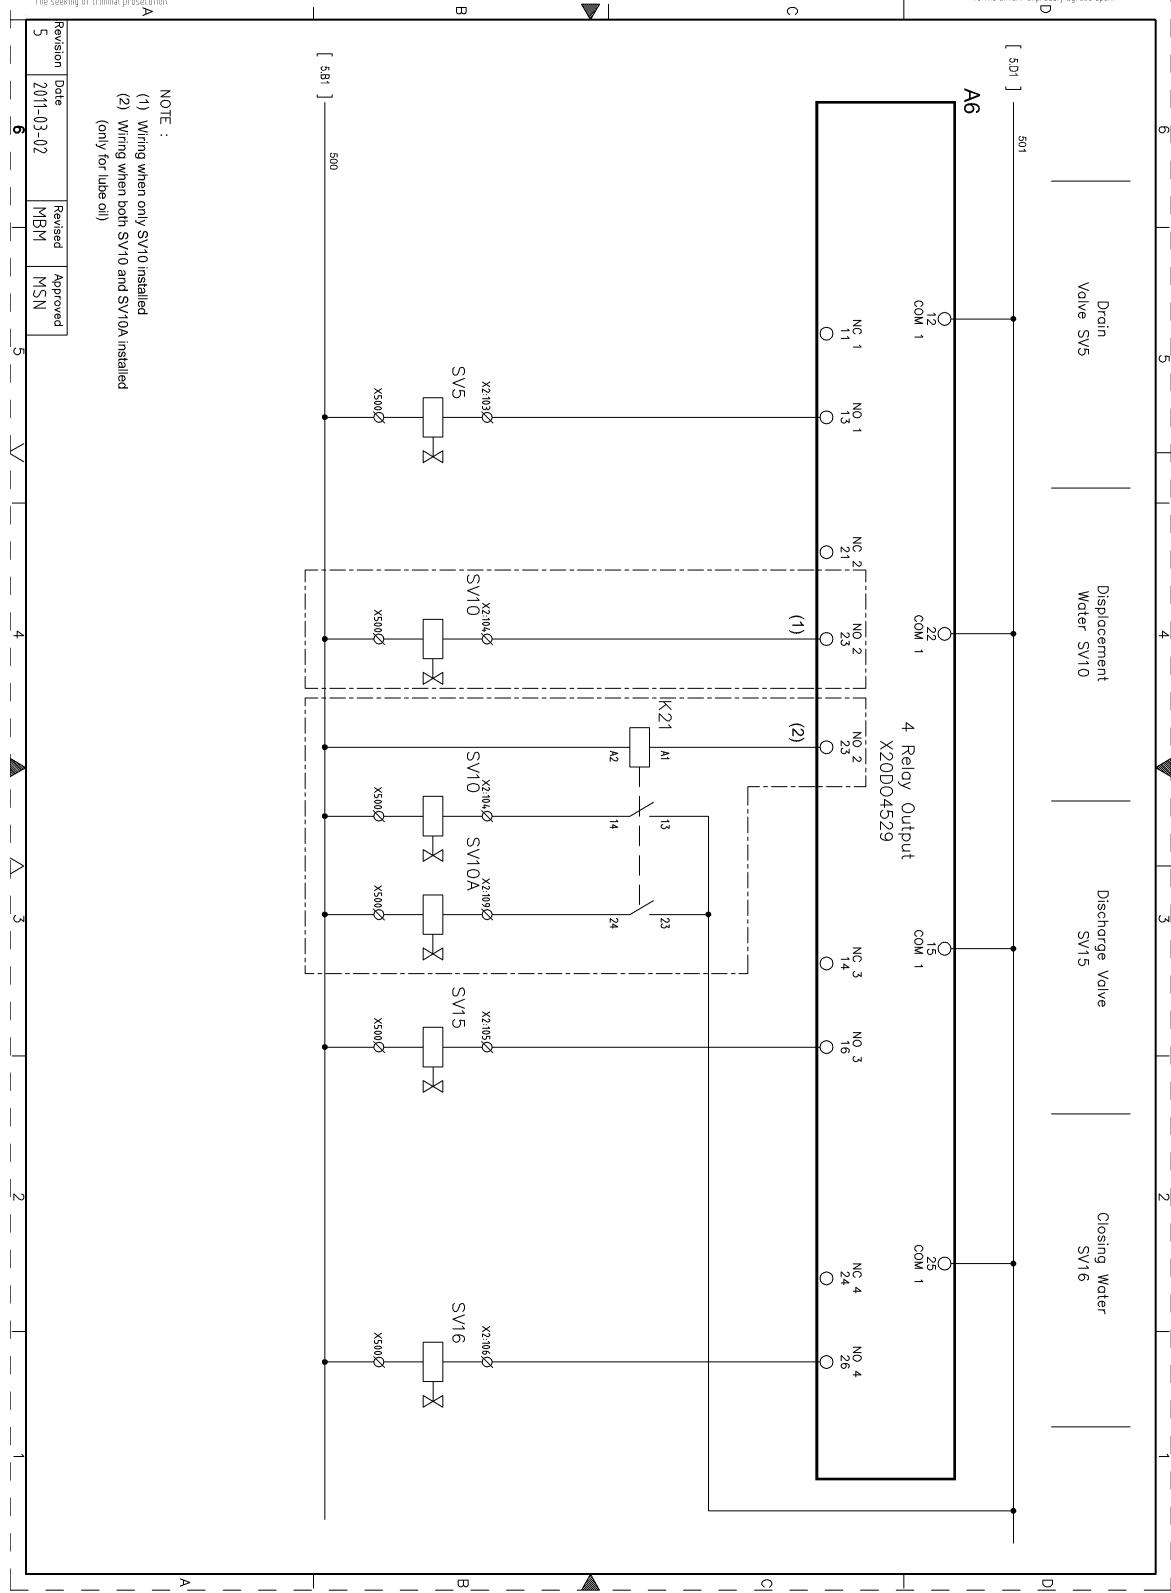

NOTE :


- (1) Wiring when only SV10 installed
 - (2) Wiring when both SV10 and SV10A installed
(only for lube oil)

Revision 5	Date 2011-03-02	Revised MBM	Approved MSN
---------------	--------------------	----------------	-----------------

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and their related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

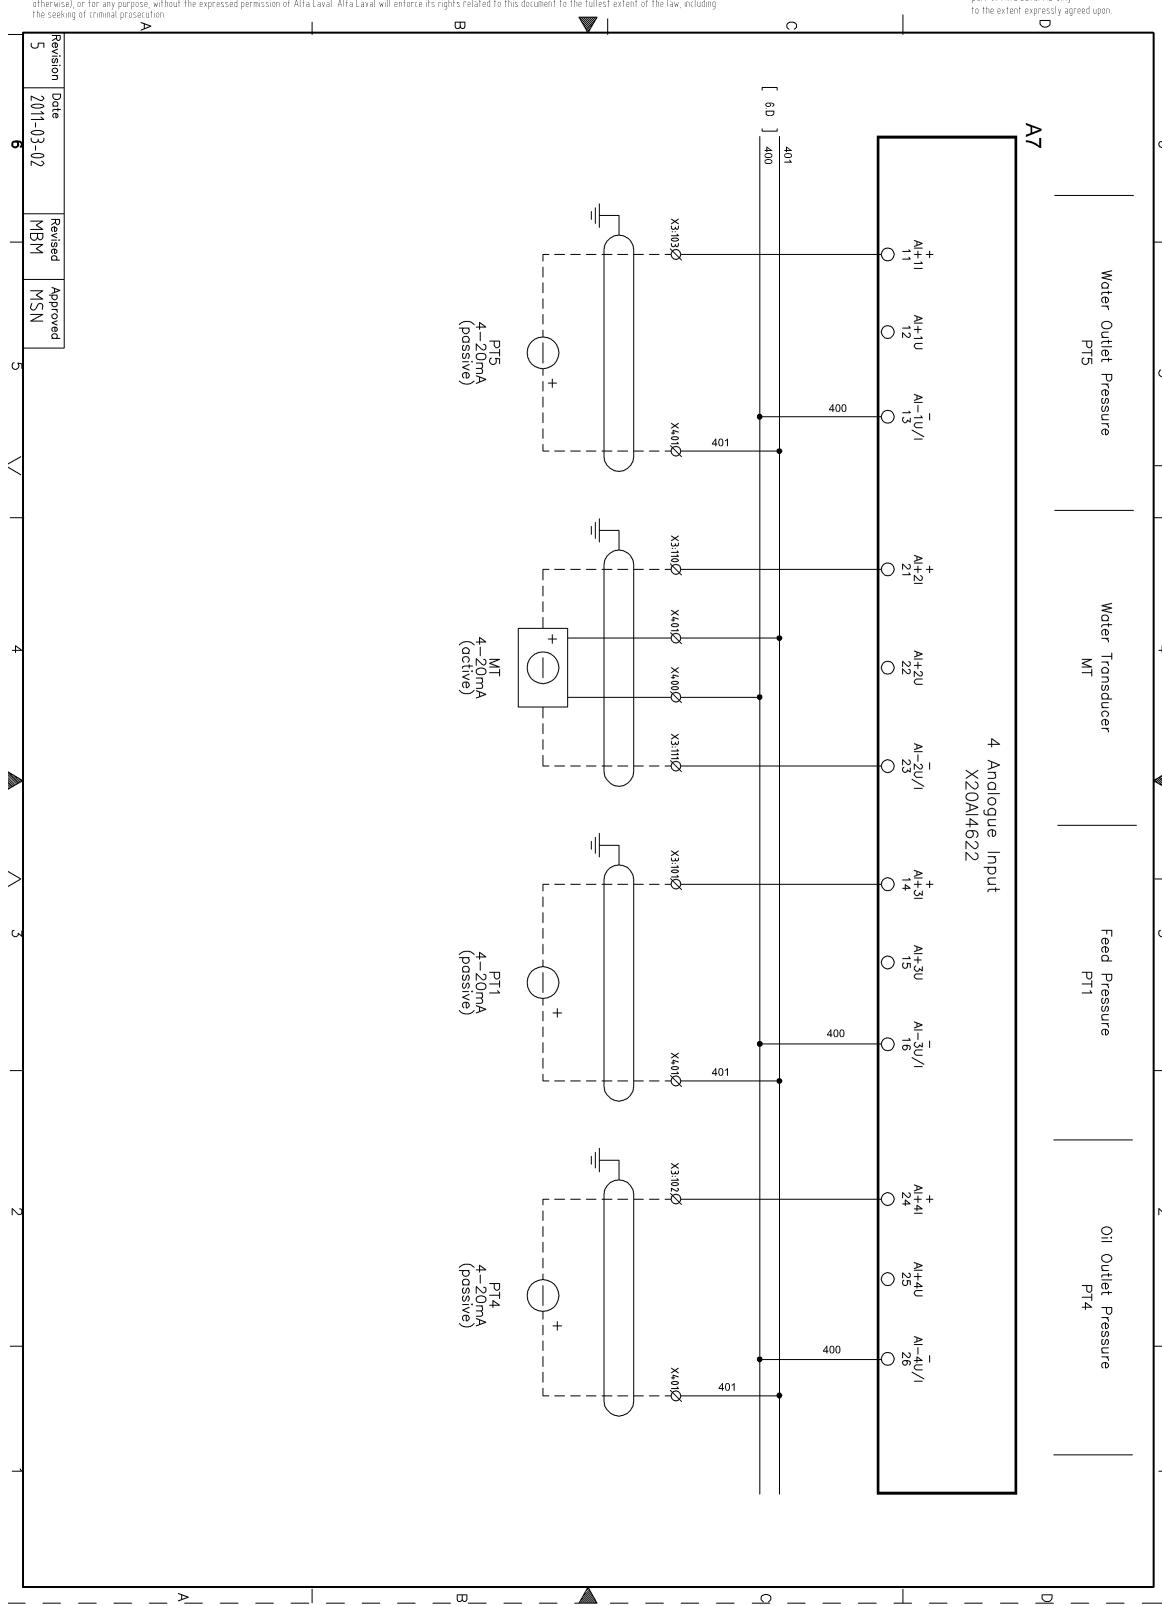

Alfa Laval ref. 580905 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the scaling of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

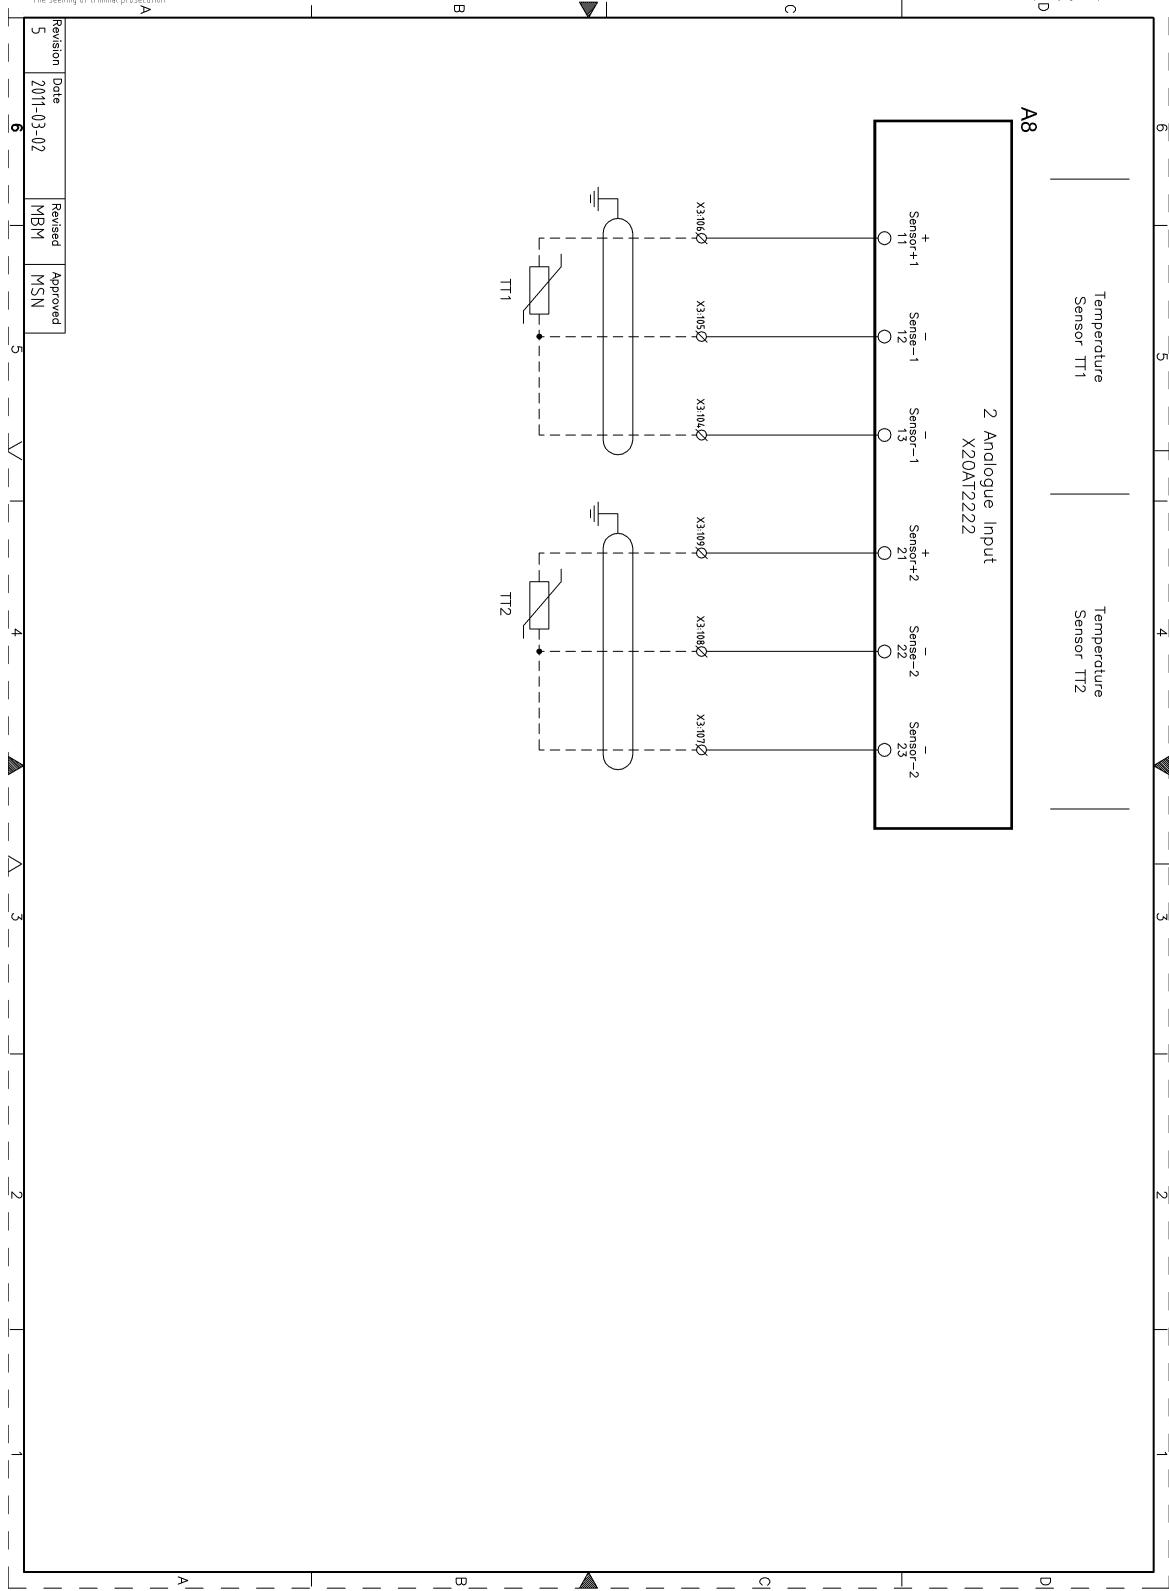


580905#5_07

4.2.11 Steam Regulating Valve (optional) Circuit Diagram

Alfa Laval ref. 580885 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

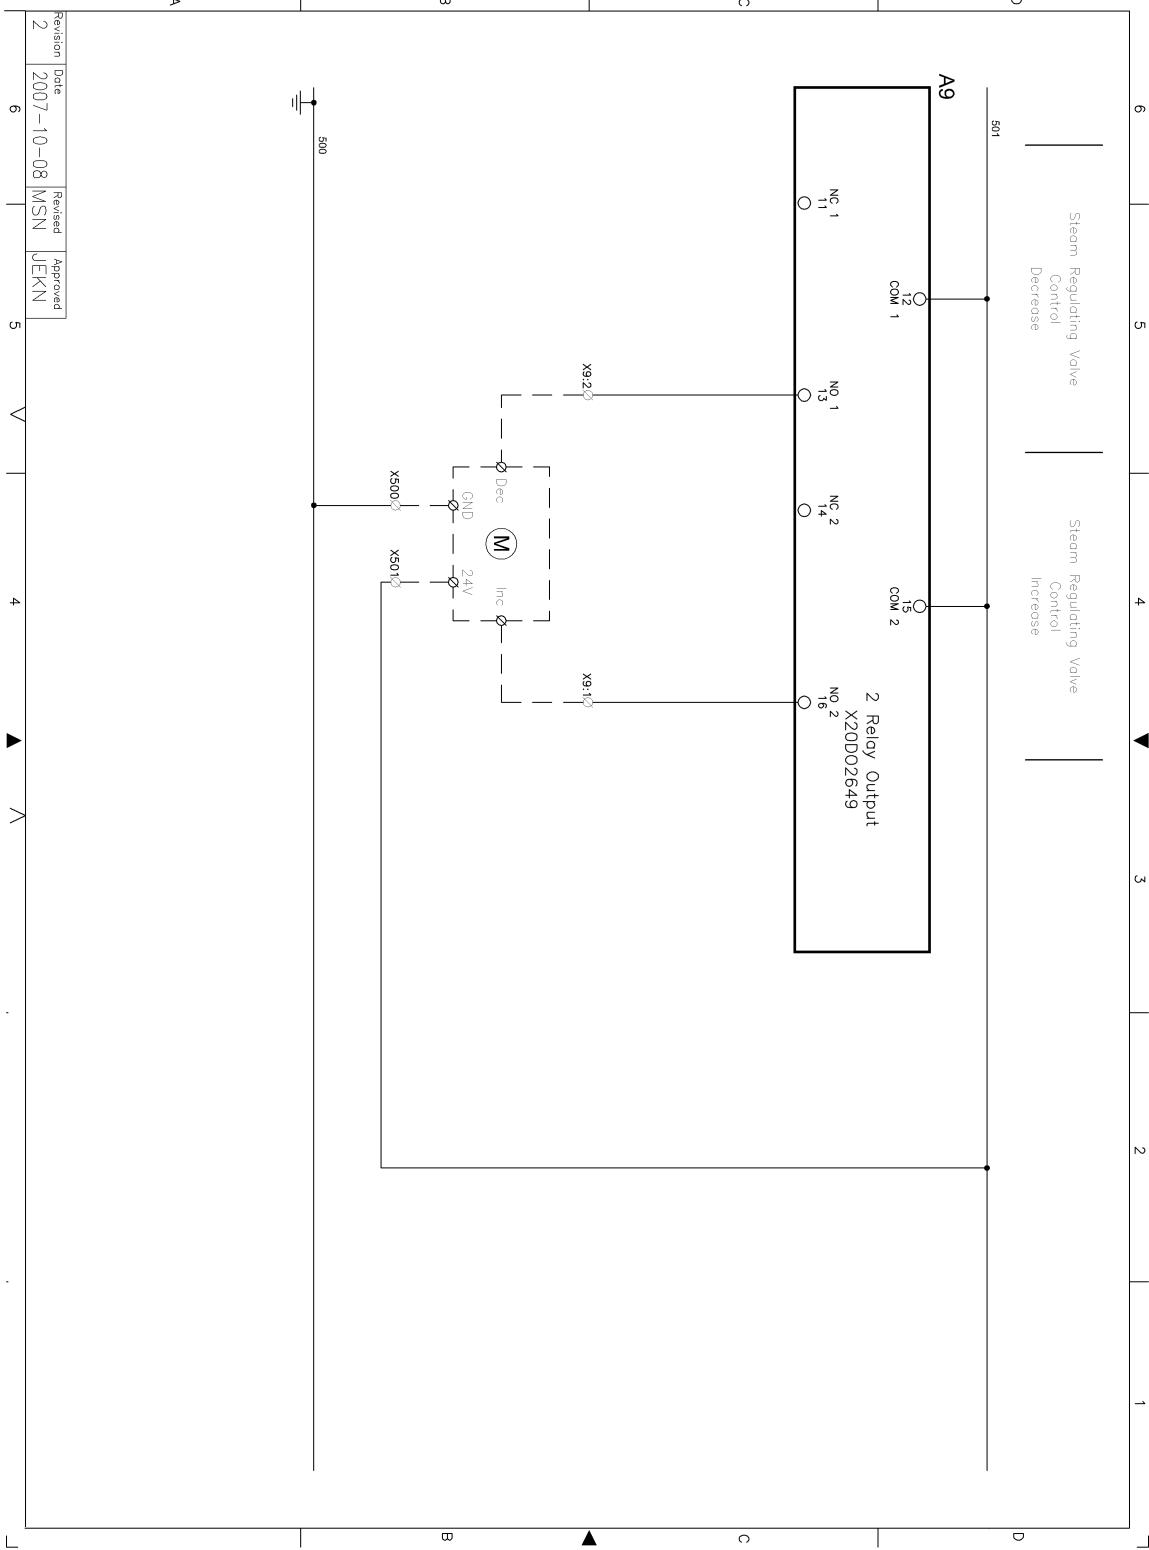


4.2.12 Speed Transmitter (optional) Circuit Diagram

Alfa Laval ref. 580887 Rev. 2

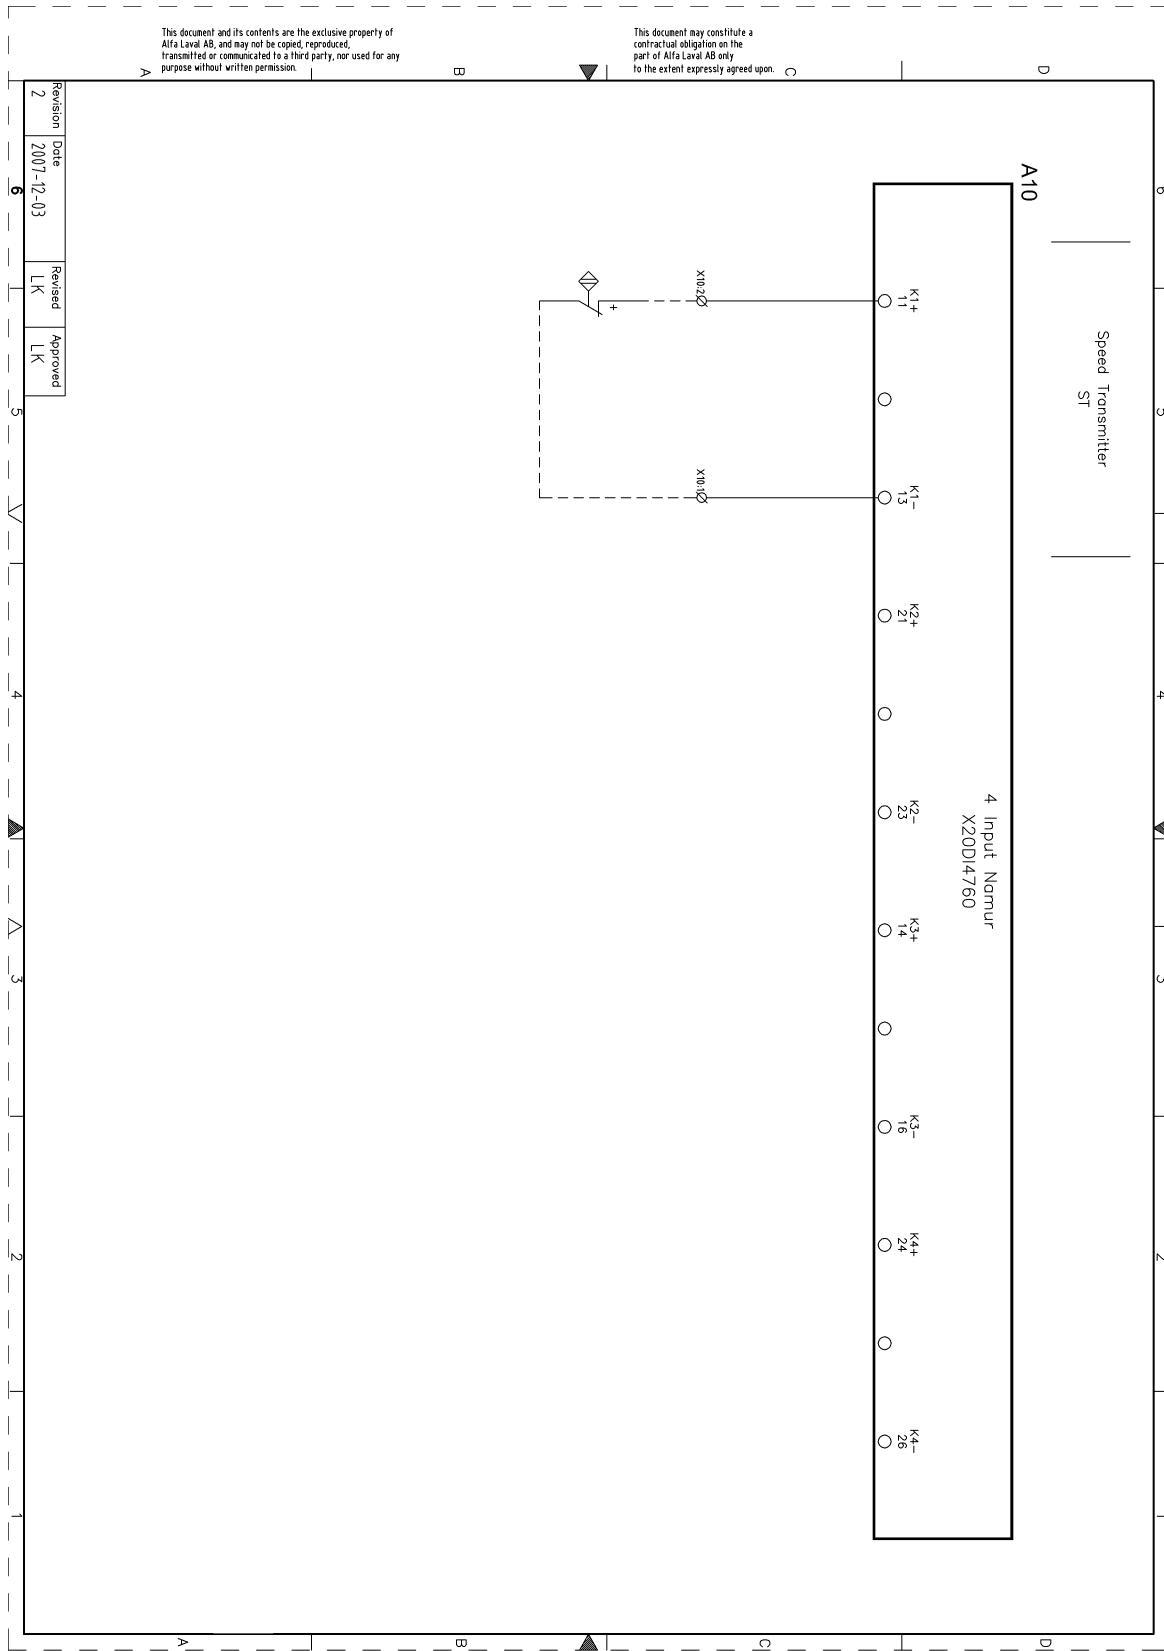

4.2.13 Vibration Transmitter (optional) Circuit Diagram

Alfa Laval ref. 580889 Rev. 2

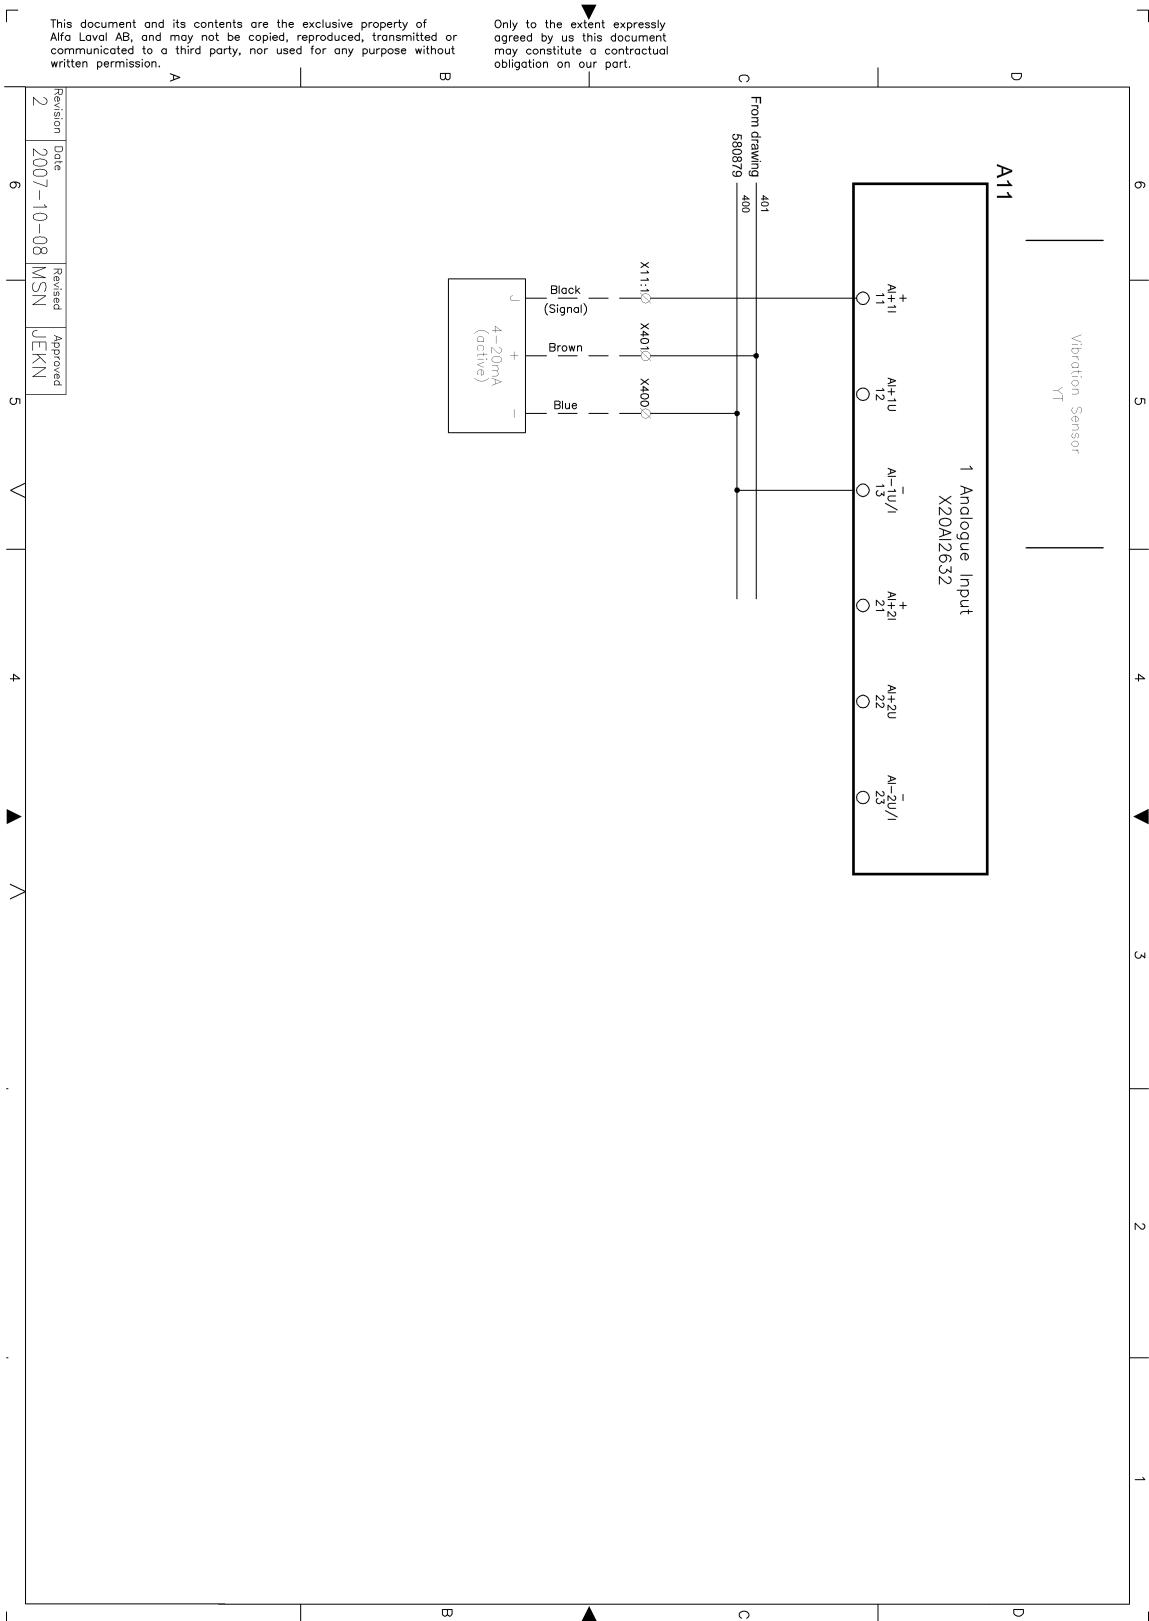


4.2.14 Electric Heater (optional) Circuit Diagram

Alfa Laval ref. 580895 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.


Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

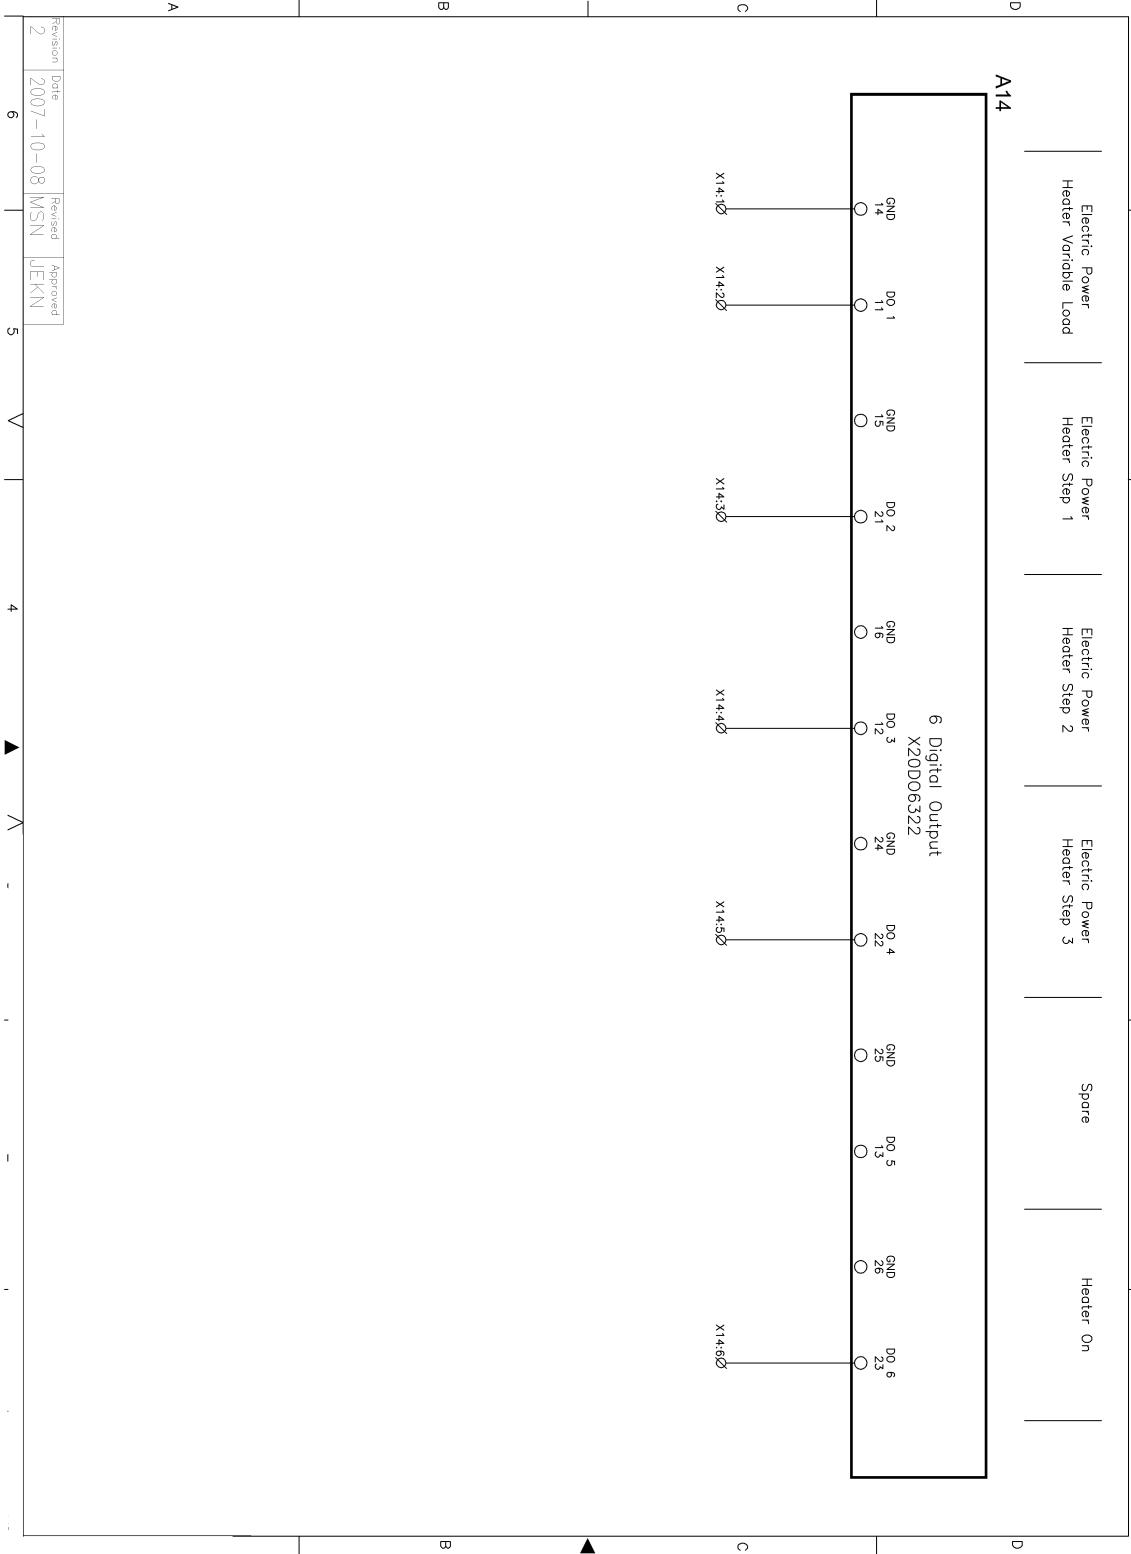

Alfa Laval ref. 580895 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

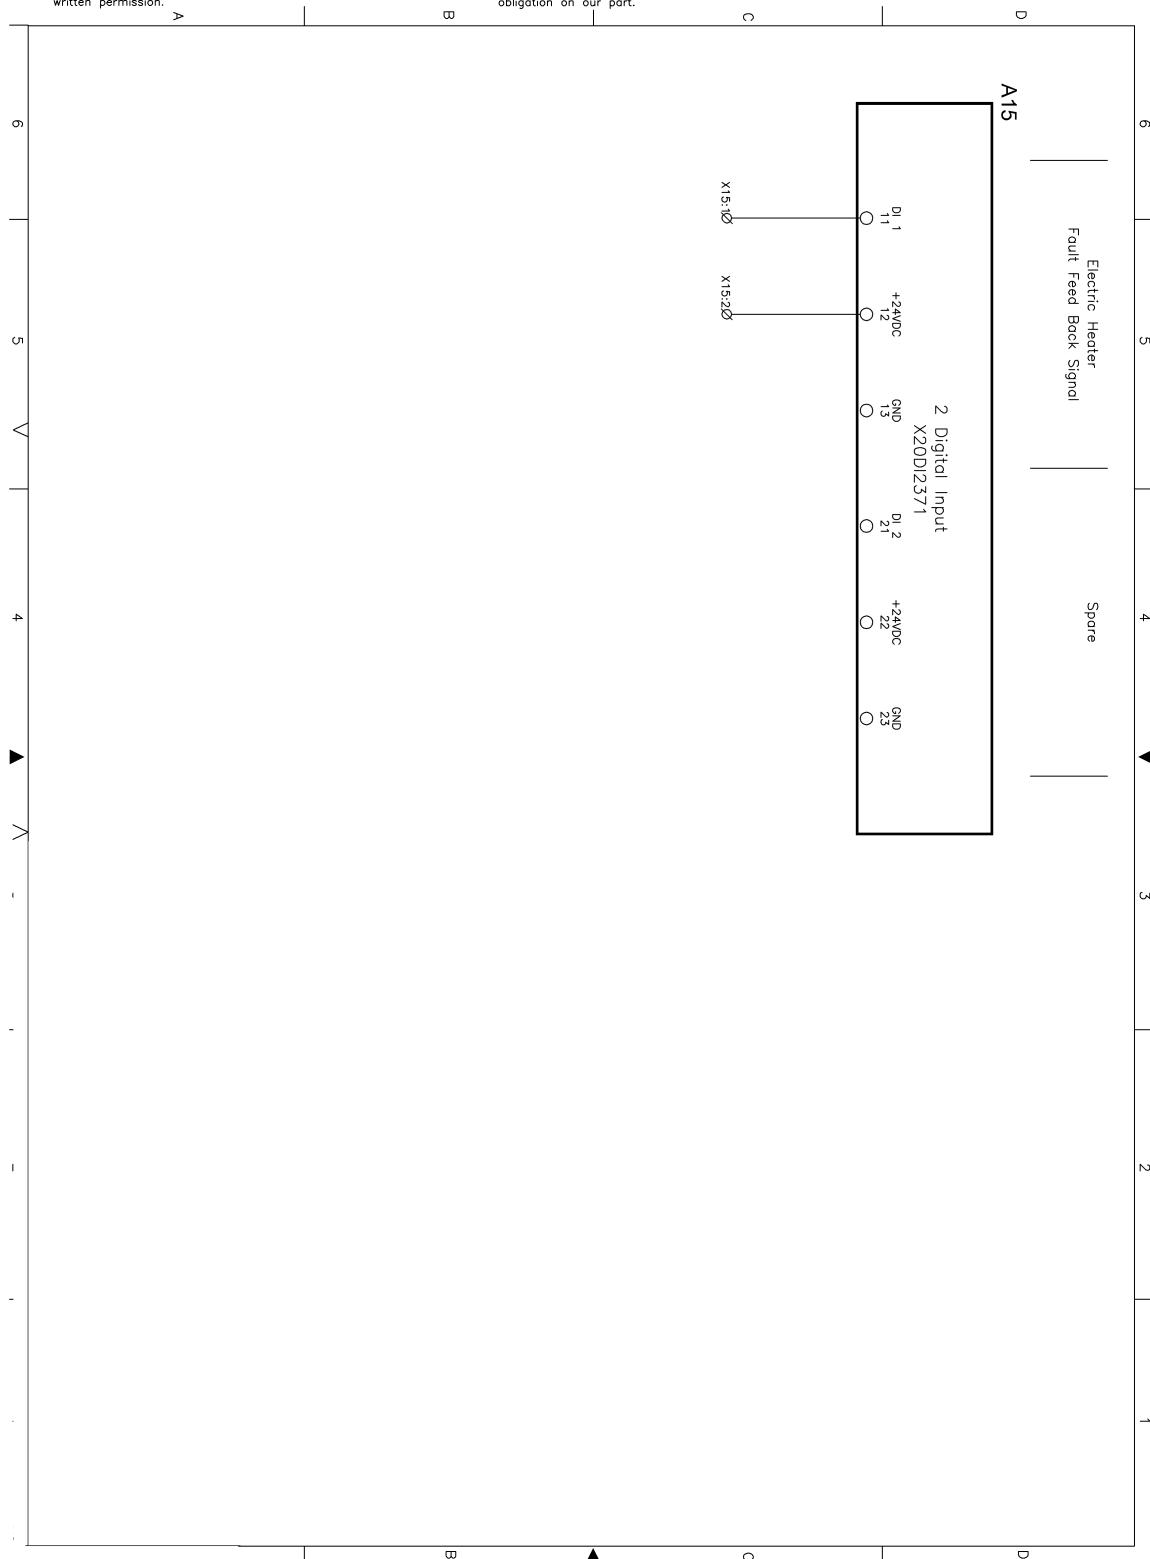

4.2.15 I/O (optional) Circuit Diagram


Alfa Laval ref. 580893 Rev. 3

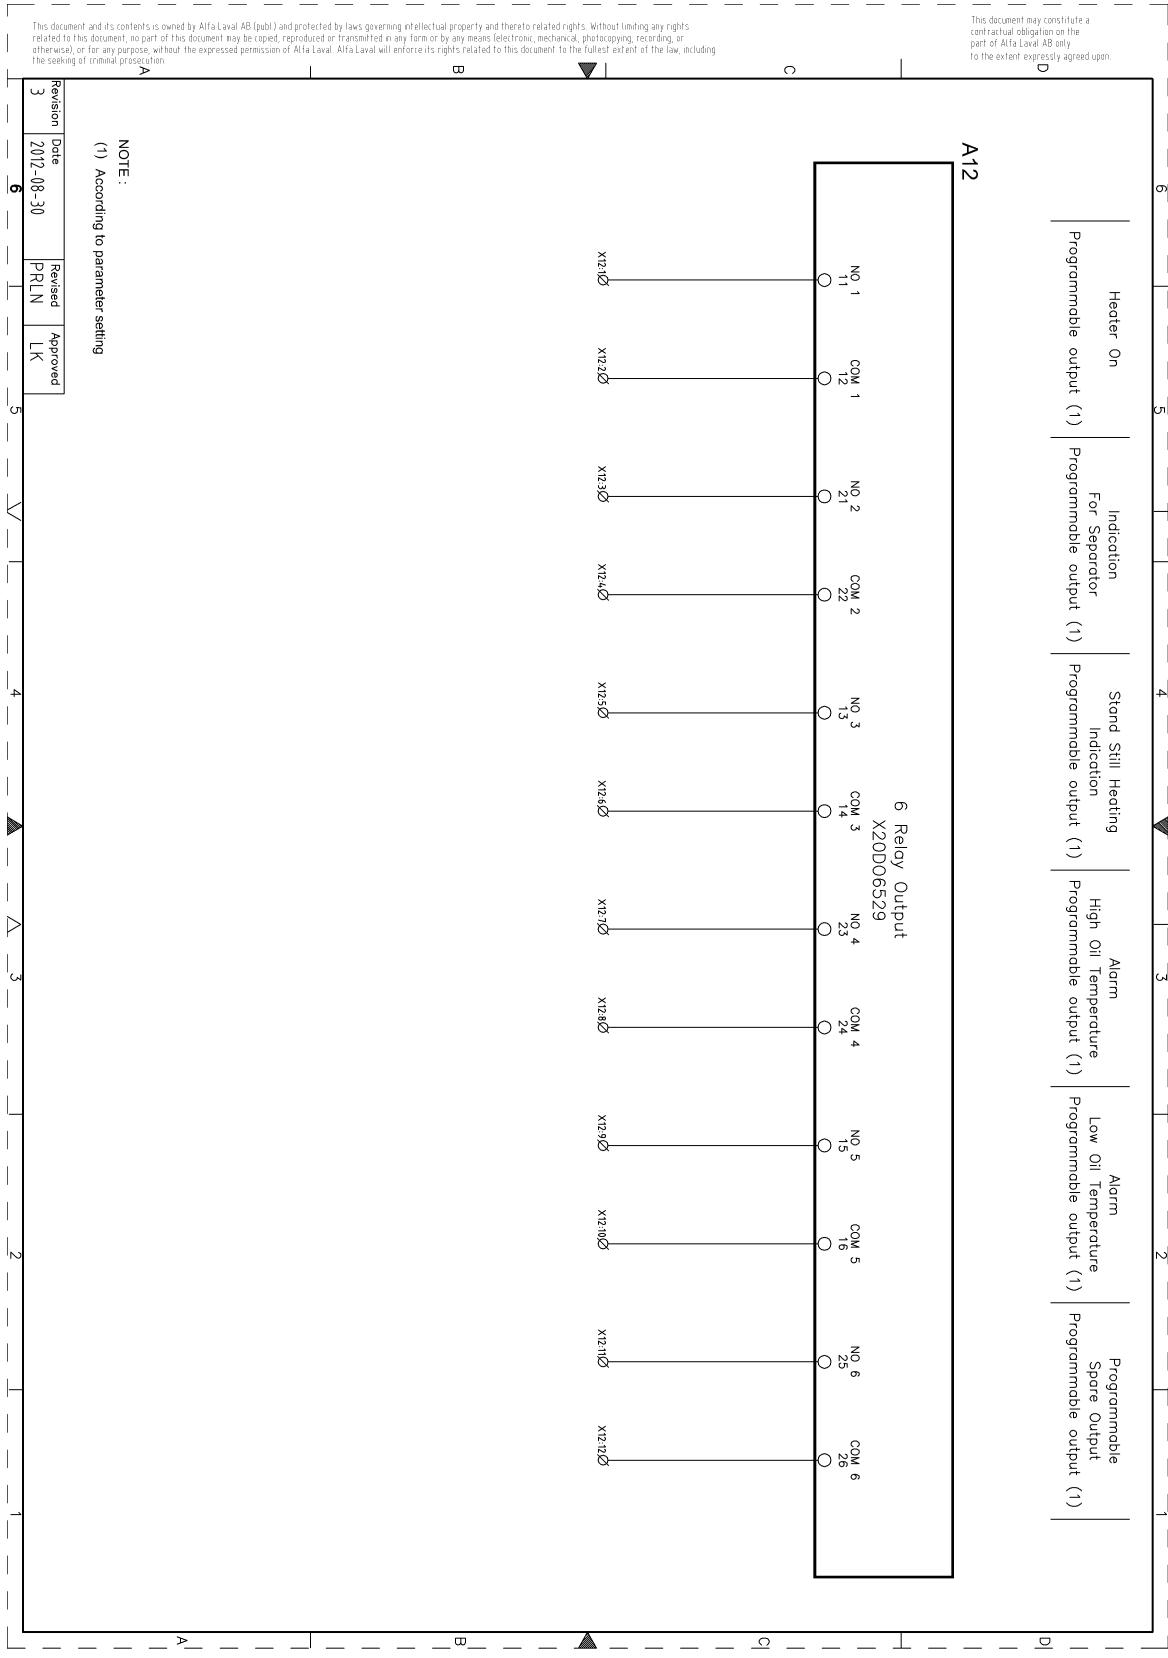

Alfa Laval ref. 580893 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

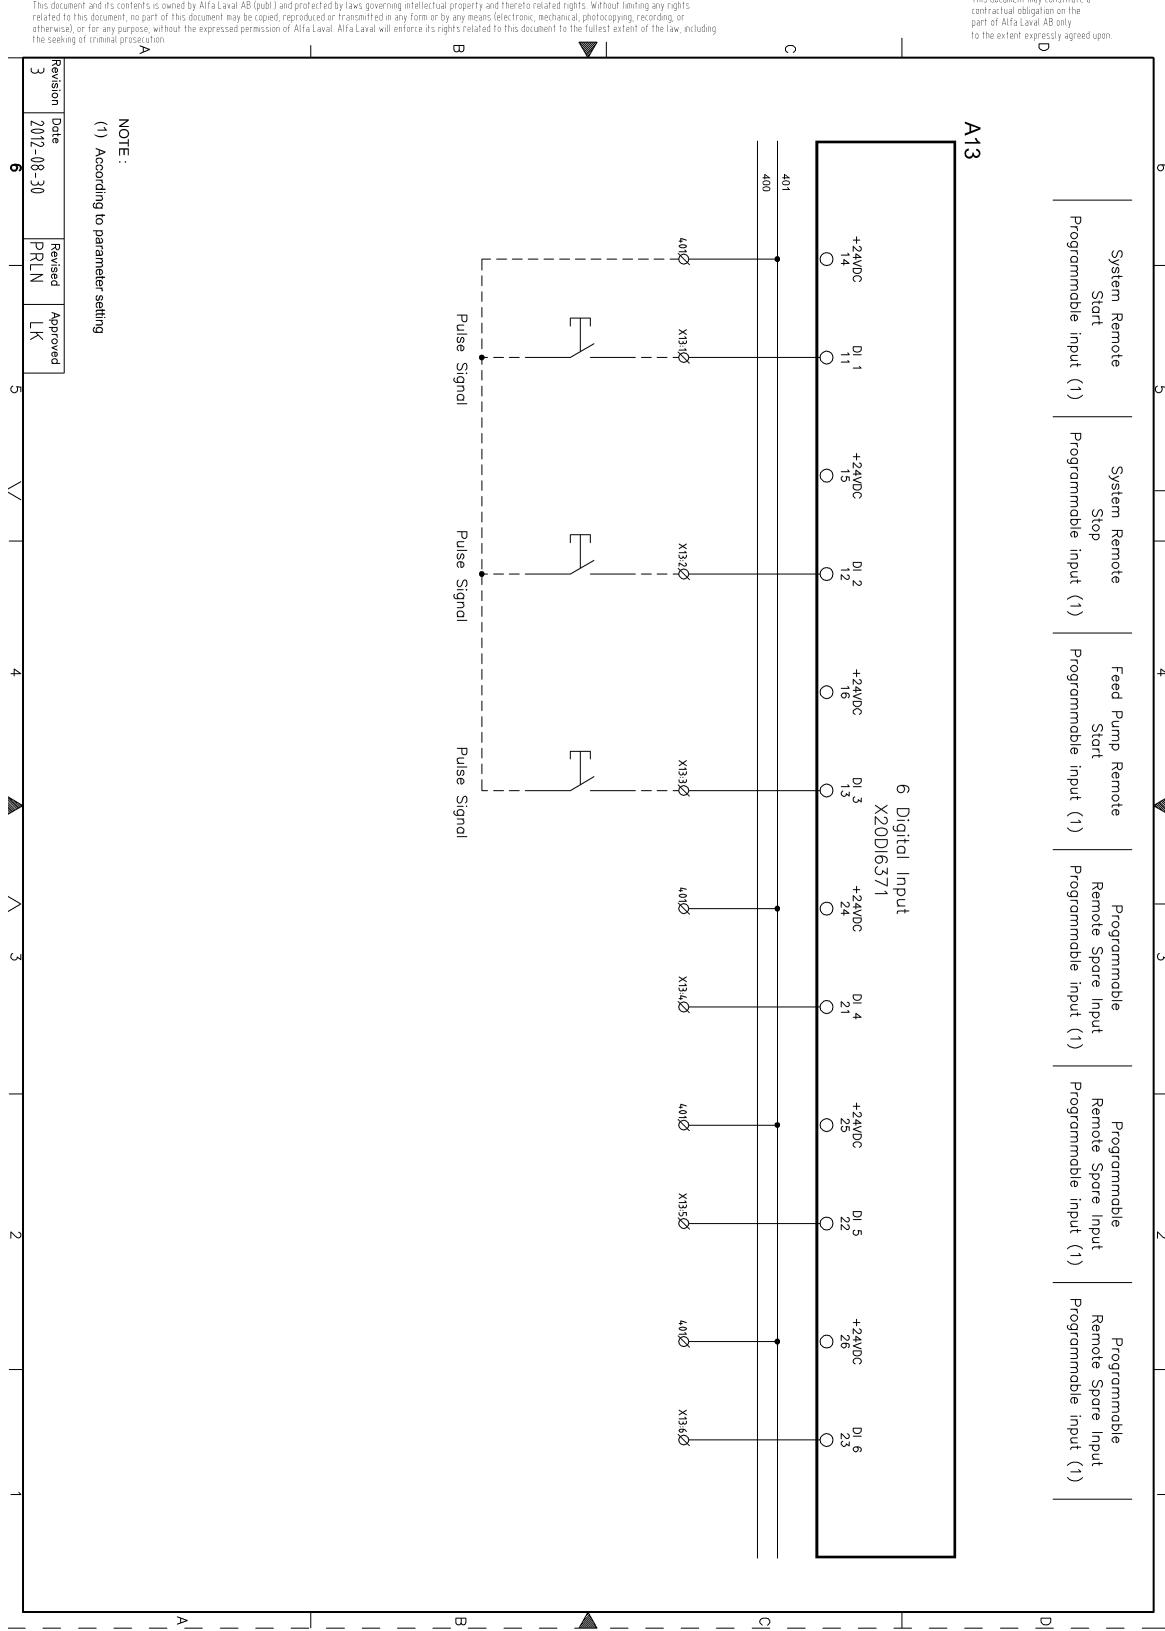


580893#3_01

Revision	Date	Revised	Approved
3	2012-08-30	PRIN	LK

5 ▼ 4 ▲ 3 ▲ 2 ▲ 1


4.2.16 Heat Tracing (optional) Circuit Diagram

Alfa Laval ref. 580883 Rev. 1

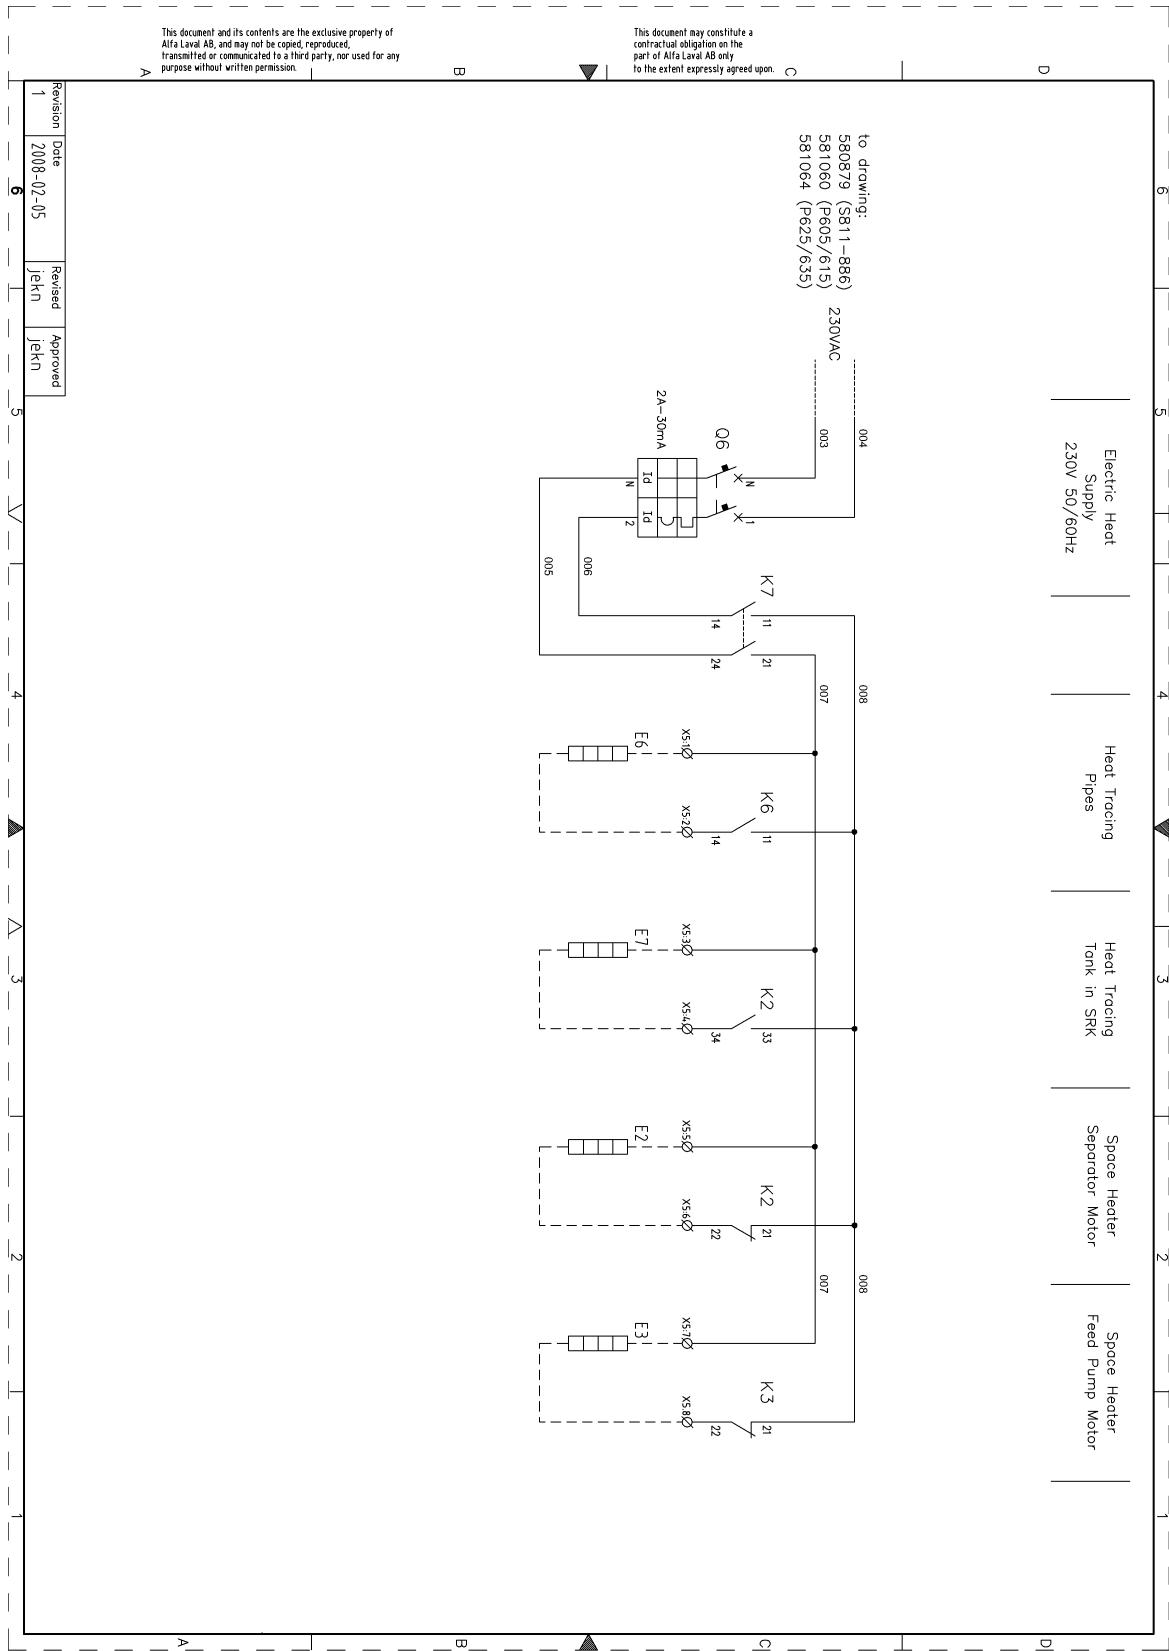

580883#1_00

Alfa Laval ref. 580883 Rev. 1

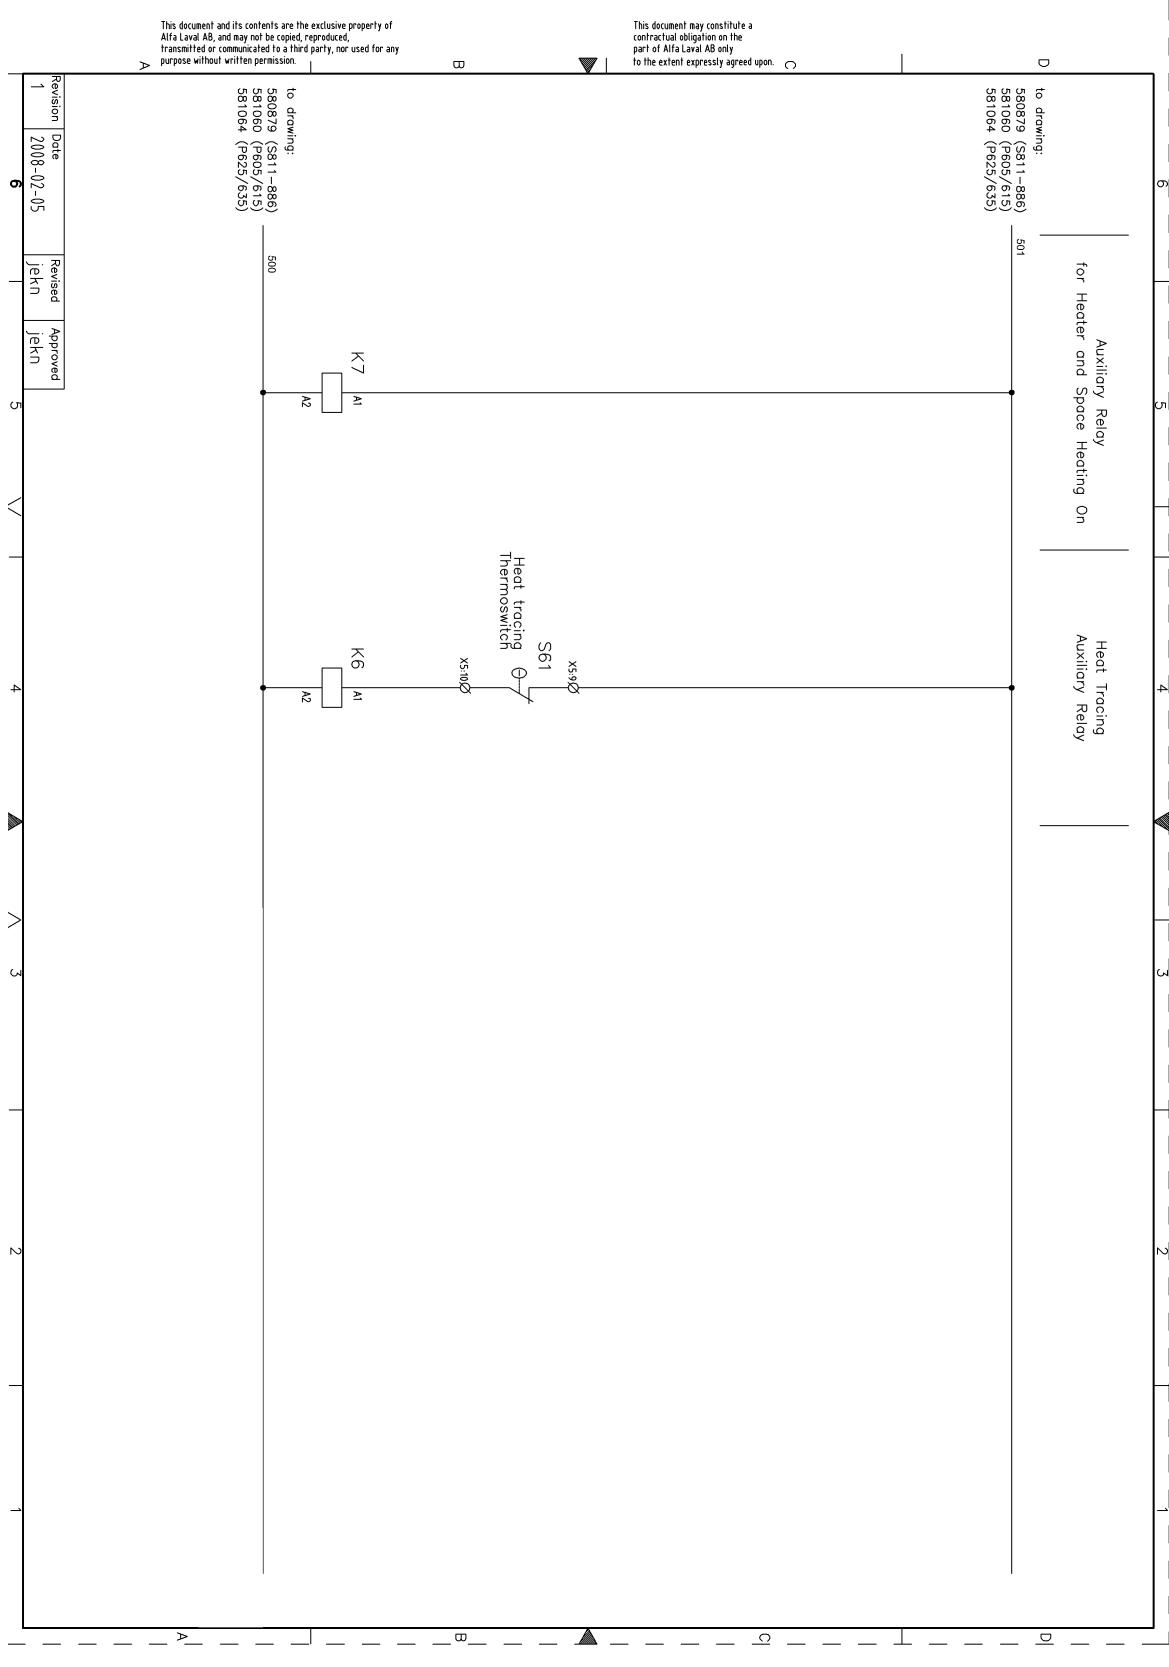


4.2.17 Emergency Shutdown Circuit Diagram

Alfa Laval ref. 580897 Rev. 1

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

Revision	Date	Revised	Approved
1	2009-12-18	MBM	MSN

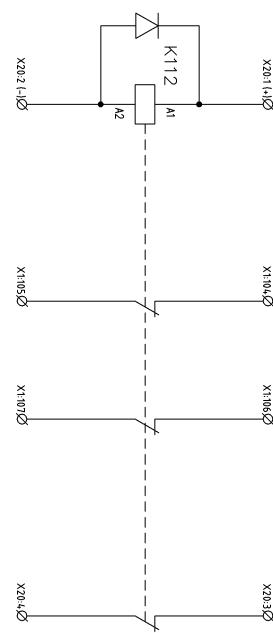


Remote ESD 24VDC
(See Circuit diagram
(internal connections))

ESD Feedback
to customer

5 *Electrical Drawings P 605/615*

5.1 Electrical System Layout P 605/615

Alfa Laval ref. 580909 Rev. 5

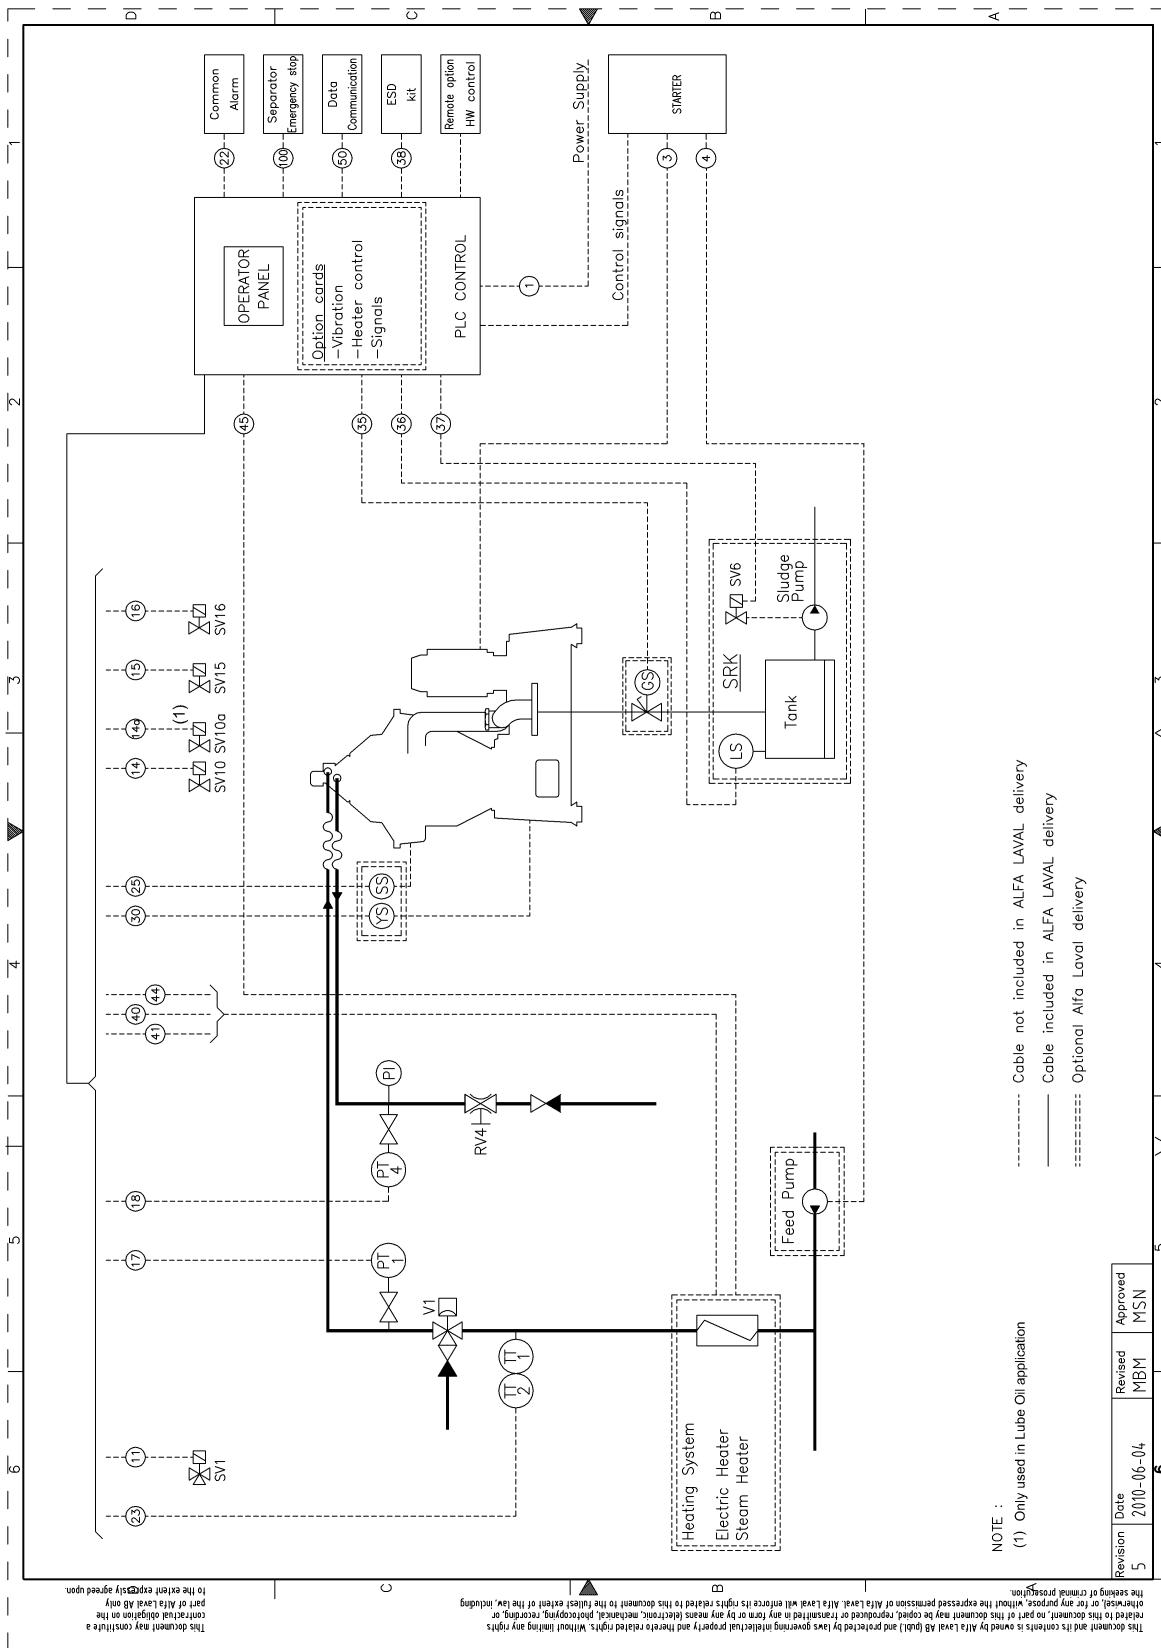

5.2 Control and Starter Electrical Diagrams

5.2.1 Starter cable list

Alfa Laval ref. 580881 Rev. 8

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Basic design (currents according to order)						
1	MPRXCX	3x4	Mains supply		Starter	1) Fuse 20 A
1	MPRXCX	3x10	Mains supply		Starter	1) Fuse 35A
1	MPRXCX	3x16	Mains supply		Starter	1) Fuse 50 A
1	MPRXCX	3x25	Mains supply		Starter	1) Fuse 63 A
1	MPRXCX	3x35	Mains supply		Starter	1) Fuse 80 A
2	MPRXCX	2x2m5	Supply		Starter	1) Fuse 16 A
3	MPRXCX	3x1,5	Starter	Marked 3A	Separator motor	4,0 – 6,3 A
3	MPRXCX	3x2,5	Starter	Marked 3B	Separator motor	6,3 – 16 A
3	MPRXCX	3x4	Starter	Marked 3C	Separator motor	16 – 20 A
3	MPRXCX	3x6	Starter	Marked 3D	Separator motor	20 – 25 A
3	MPRXCX	3x10	Starter	Marked 3E	Separator motor	25 – 32 A
3	MPRXCX	3x16	Starter	Marked 3F	Separator motor	32 – 45 A
3	MPRXCX	3x25	Starter	Marked 3G	Separator motor	45 – 63 A
Optional or customer's own feed pump (as ordered)						
4	MPRXCX	3x25	Starter		Feed pump	²⁾
Optional sludge handling (as ordered)						
35	RFE-HF	1x4x0,7 5	Starter		GS, Valve switch	
36	RFE-HF	1x2x0,7 5	Starter		LS, Sludge level	
37	RFE-HF	1x2x0,7 5	Starter		SV6, Solenoid valve	For pneumatic sludge pump
73	RFE-HF	2x0,75	Starter		Heatpac on tank	Included in heater element
Optional space heating (as ordered)						
71	MPRXCX	2x1,5	Starter		Separator pump	
73	MPRXCX	2x1,5	Starter		Feed pump	²⁾
Optional heat tracing (as ordered)						
74	MPRXCX	2x1,5	Starter		Thermostat	
75		3x1,5	Starter		Heating cable	

1) Cable not included in Alfa Laval delivery.

2) Cable only included in the Alfa Laval delivery when Feed Pump is delivered mounted on Module

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Signal cables (currents according to order)						
11	RFE-HF	1x2x0,7 5	EPC 60		SV1	
12	RFE-HF	1x2x0,7 5	EPC 60		SV4	
13	RFE-HF	1x2x0,7 5	EPC 60		SV5	S-type only
14	RFE-HF	1x2x0,7 5	EPC 60		SV10	
14 A	RFE-HF	1x2x0,7 5	EPC 60		SV10A	Lube oil only
15	RFE-HF	1x2x0,7 5	EPC 60		SV15	
16	RFE-HF	1x2x0,7 5	EPC 60		SV16	
17	RFE-HF	1x2x0,7 5	EPC 60		PT1	¹⁾
18	RFE-HF	1x2x0,7 5	EPC 60		PT4	
19	RFE-HF	1x4x0,7 5	EPC 60		MT	S-type only
20	RFE-HF	4x2x0,7 5	EPC 60		ST, (YT, SS)	Not for P605, P615, S805, S815
21	RFE-HF	1x2x0,7 5	EPC 60		PT5	S-type only
22	RFE-HF	1x2x0,7 5	EPC 60		Common alarm	²⁾
23	RFE-HF	4x2x0,7 5	EPC 60		TT1/TT2	³⁾
Options (as ordered)						
25	RFE-HF	1x4x0,7 5	EPC 60		SS	²⁾ Only for P605, P615, S805, S815
30	RFE-HF	1x4x0,7 5	EPC 60		YS	²⁾ Only for P605, P615, S805, S815
38	MPRXCX	4x1,5	EPC 60		Syst. Emergency	^{2) 4)}
100	MPRXCX	4x1,5	EPC 60		Sep. Emergency stop	^{2) 4)}
Optional Electric Heater (as ordered)						
40	RFE-HF	4x2x0,7 5	Starter		Power unit	
45	RFE-HF	1x2x0,7 5	Starter		Power unit	
Optional heat tracing (as ordered)						
41	RFE-HF	1x4x0,7 5	EPC 60		Steam reg. valve	
44	RFE-HF	1x2x0,7 5	EPC 60		Shut-off valve	
50	RJ45 Cat 5e		EPC 60 CPU		Client remote data communication	^{2), 5)}

- 1) Cable not included in Alfa Laval delivery
- 2) Cable only included in the Alfa Laval delivery when PT1 is delivered mounted on Module.
- 3)Cable only included in the Alfa Laval delivery when Electric Heater is delivered mounted on Module.
- 4) This cable cannot be longer than 25 m to avoid voltage drop.
- 5) Crossconnection cable only included in Alfa Laval delivery when multiple modules is delivered.

Other equivalent and approved cables may be used.

Cable areas are calculated with correction factor 0.7.

Cables used are Shipboard Cables, designed according to IEC 60092-3.

Flame retardant according to IEC 60332-1-2 and IEC 60332-3-22.

Halogen-free according to IEC 60754 series.


Smoke emission according to IEC 61034 series.

All power cables should be Signal Shielded Cables with the shield properly connected to earth as shown in the electrical drawings.

For armoured power cables, the armour must be connected to earth, as shown in the electrical drawings, and must give sufficient EMI protection. Copper wire armouring is normally used.

5.2.2 Separator Interconnection Diagram

Alfa Laval ref. 581067 Rev. 5

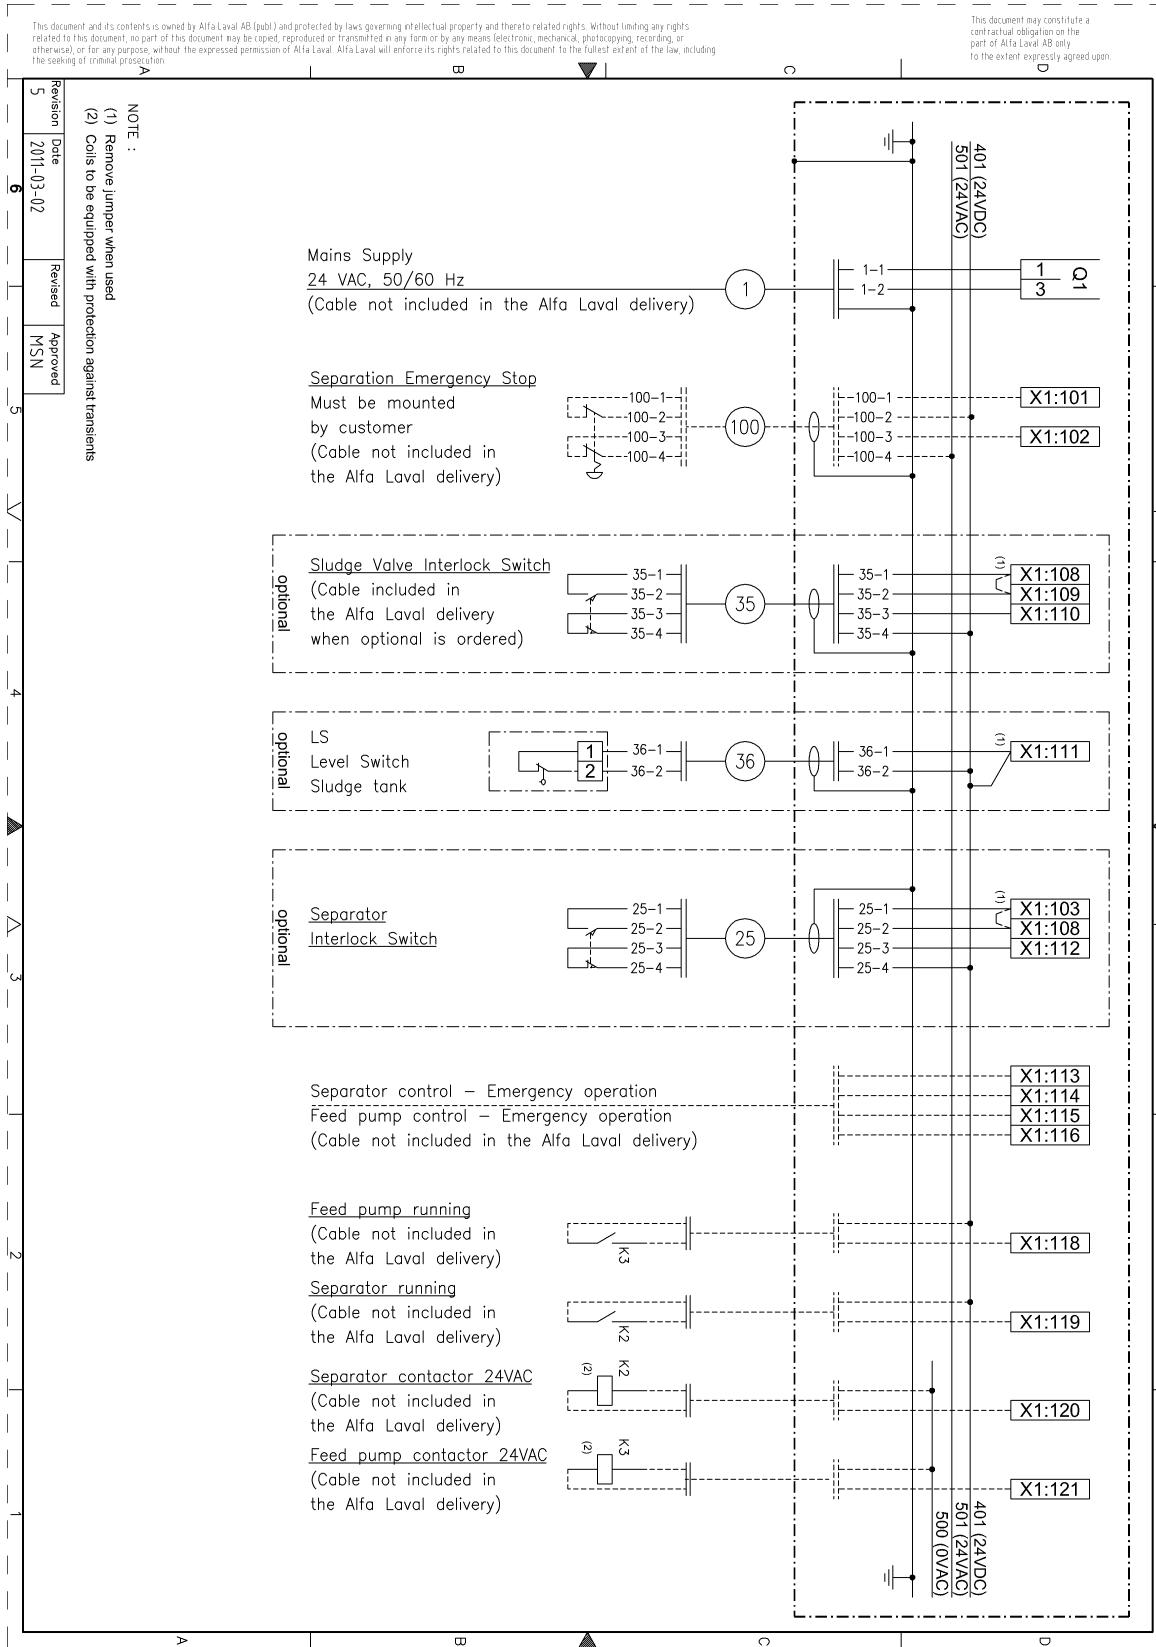


581067#5_00

Alfa Laval ref. 581067 Rev. 5

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

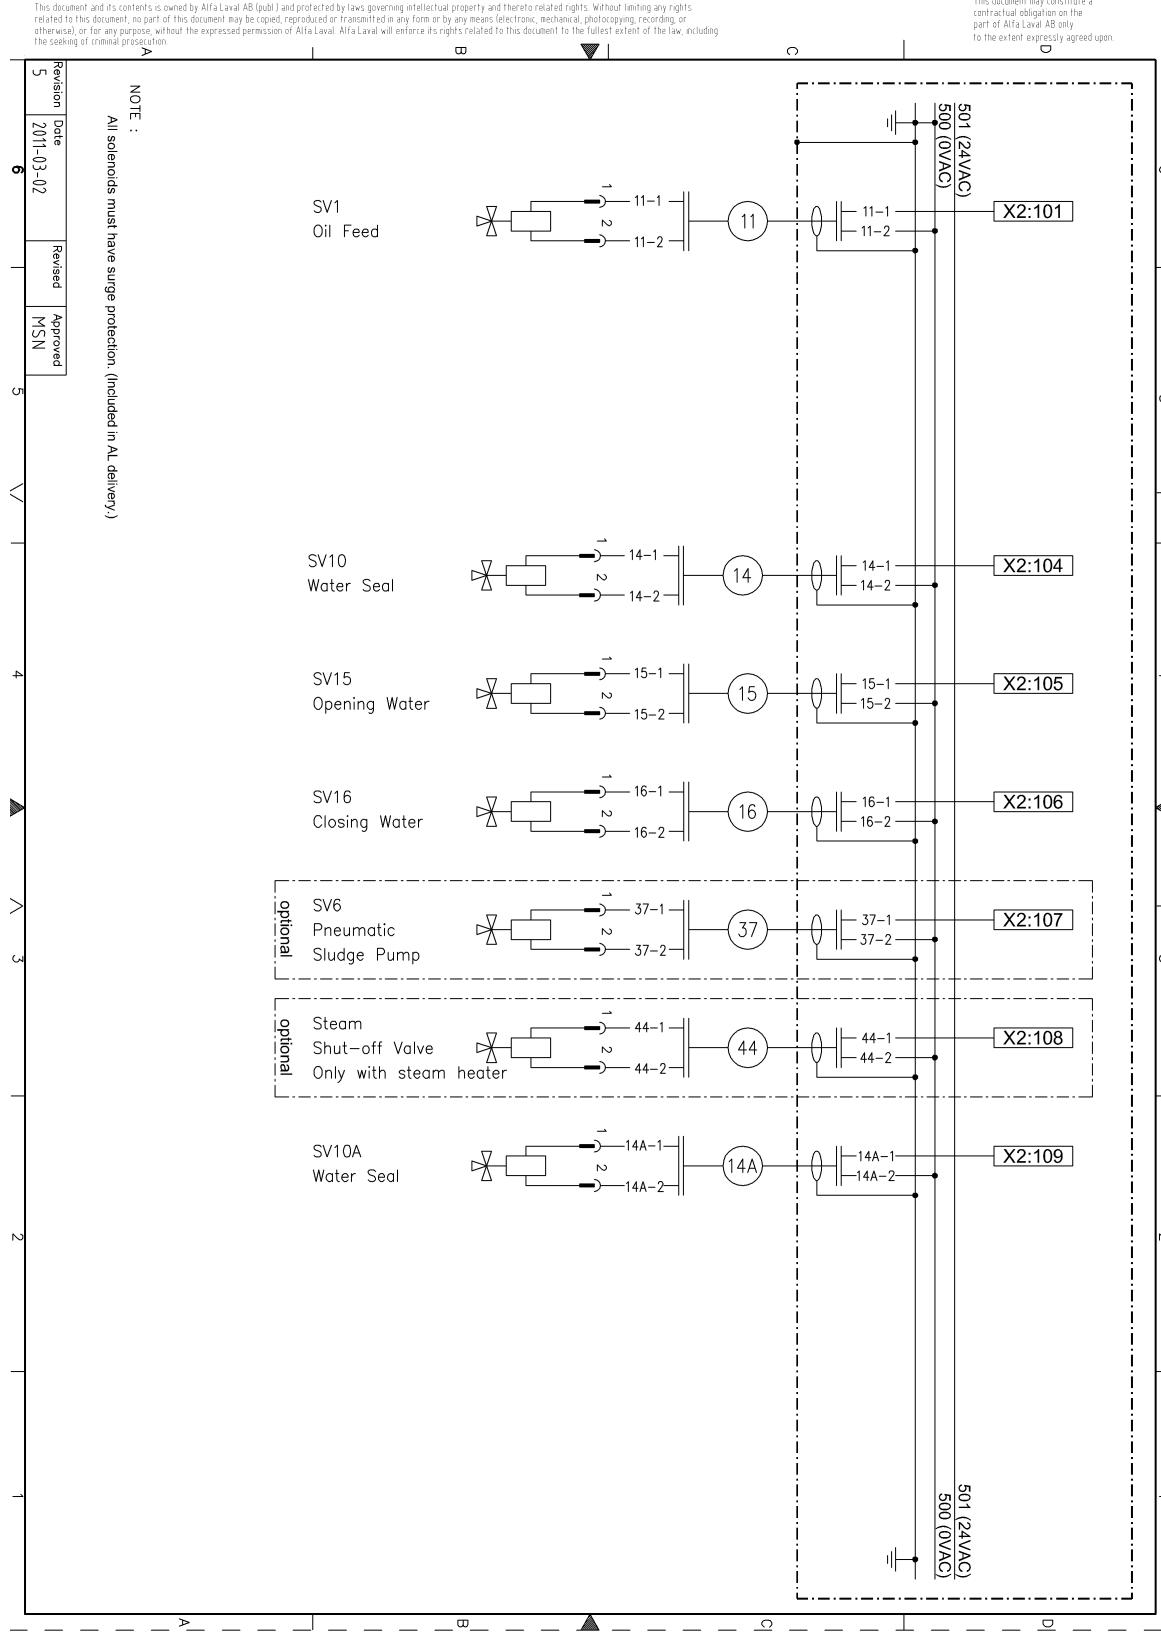

Alfa Laval ref. 581067 Rev. 5


This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

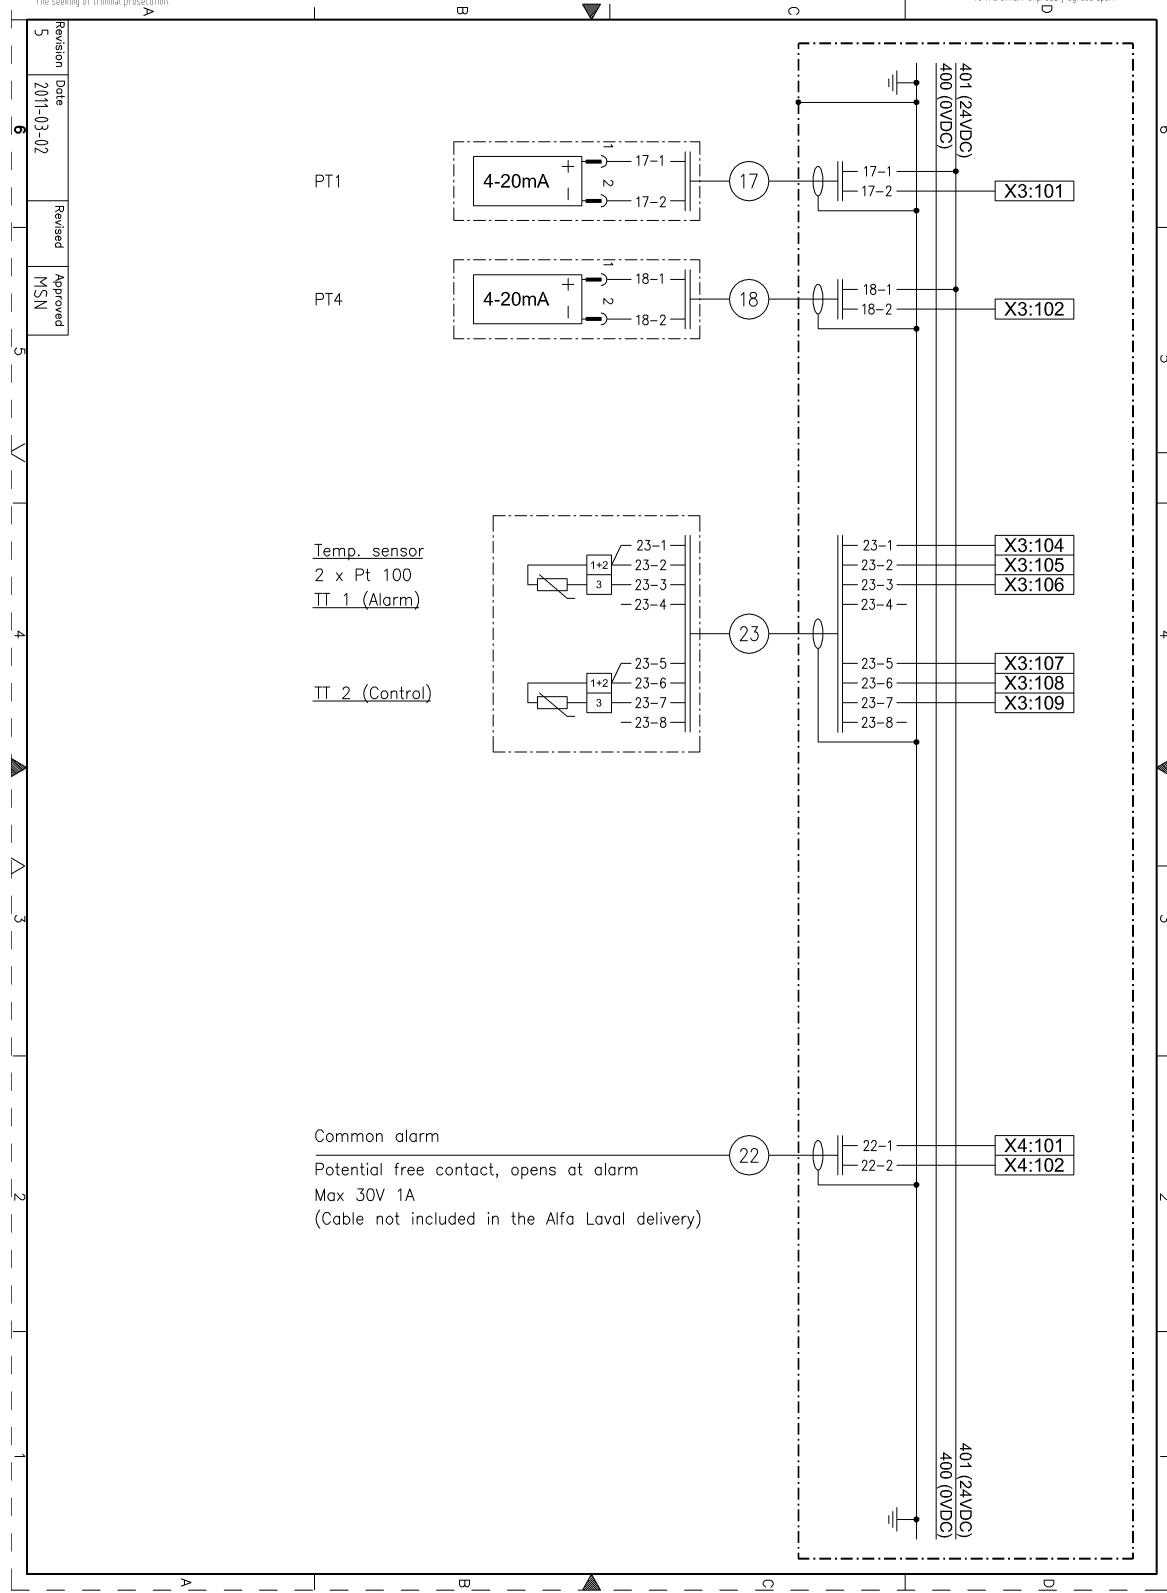


5.2.3 Steam Regulating Valve (optional) Interconnection Diagram

Alfa Laval ref. 580886 Rev. 1

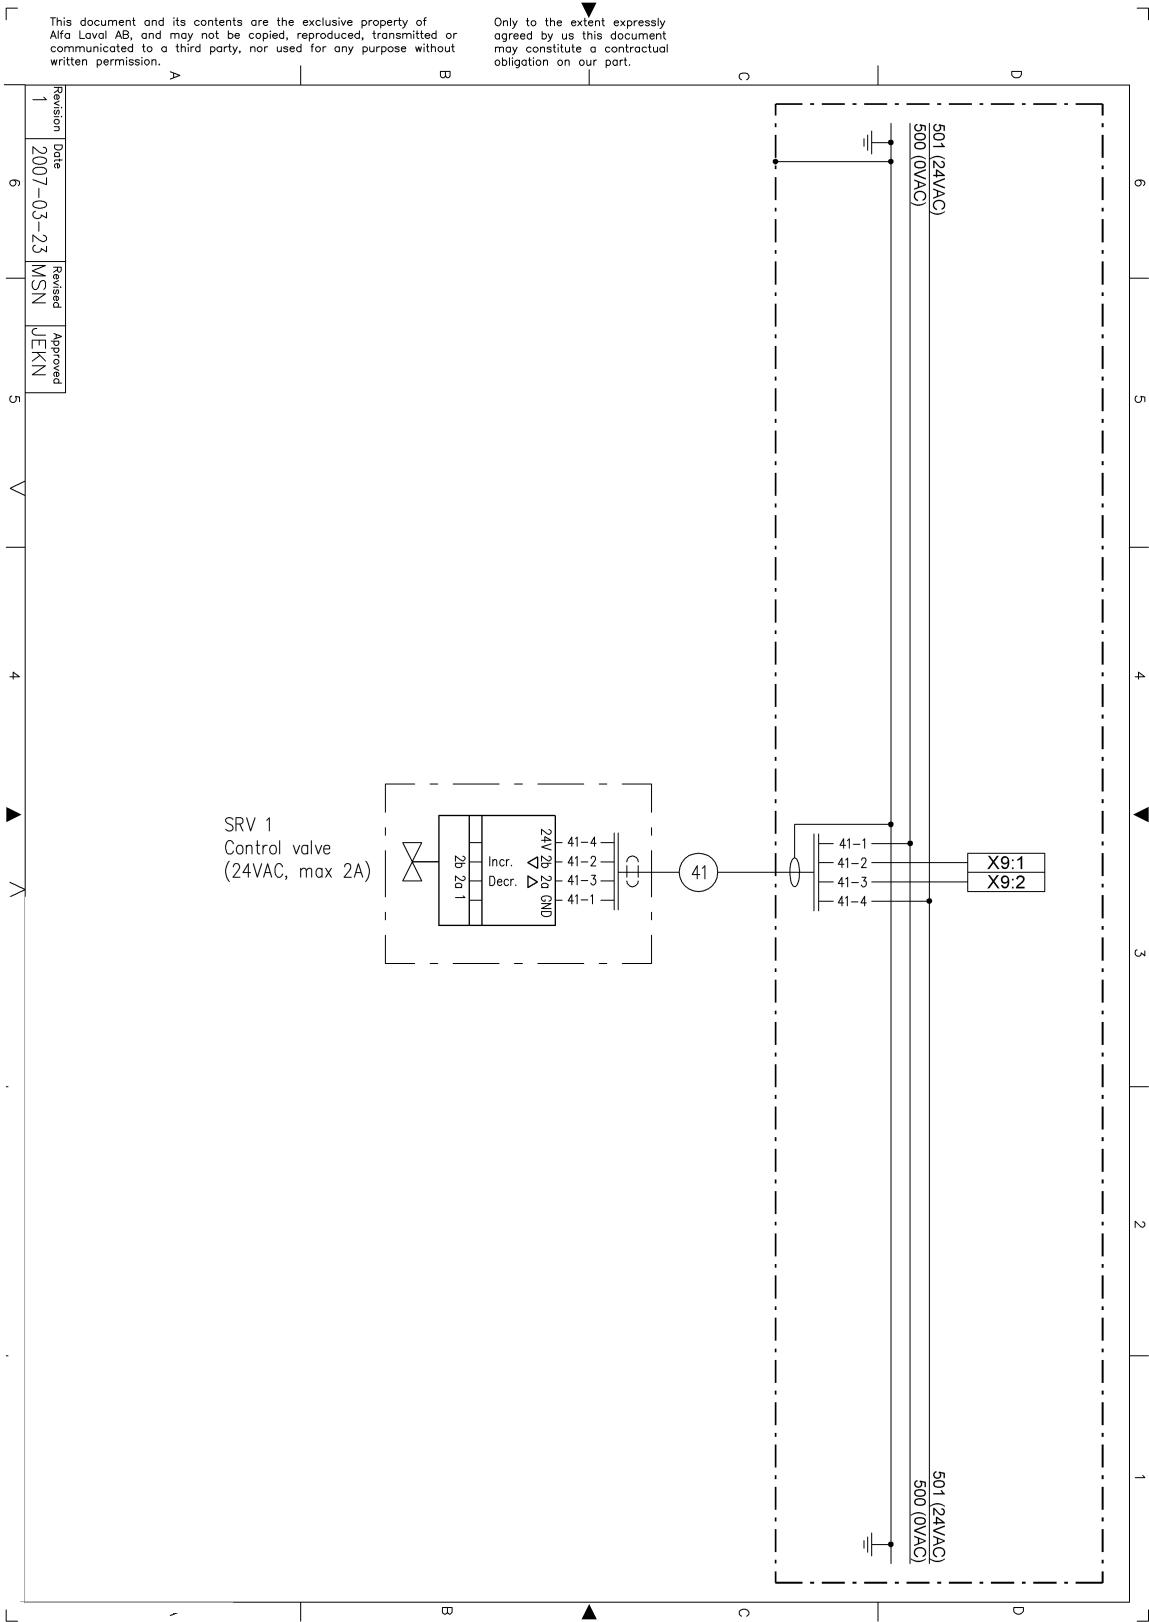

5.2.4 Vibration Switch (optional) Interconnection Diagram


Alfa Laval ref. 581063 Rev. 2

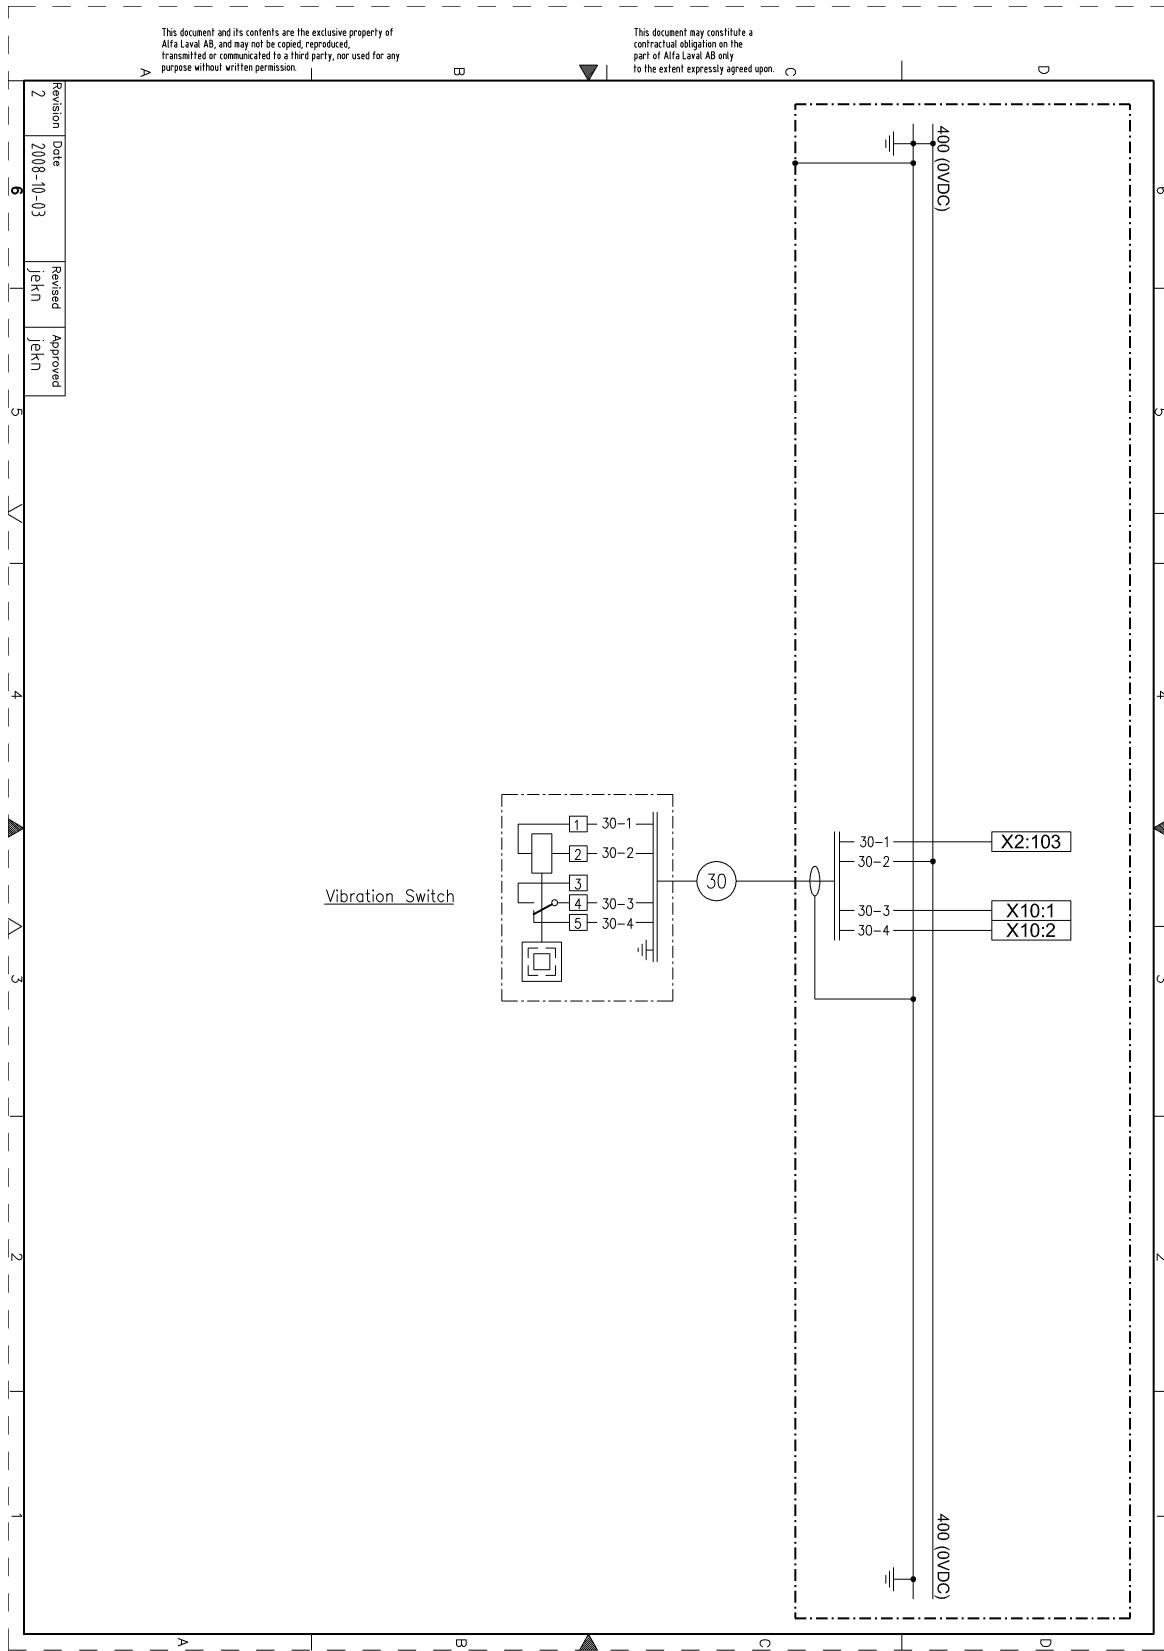

581063#2_00


5.2.5 Electric Heater (optional) Interconnection Diagram

Alfa Laval ref. 580896 Rev. 1

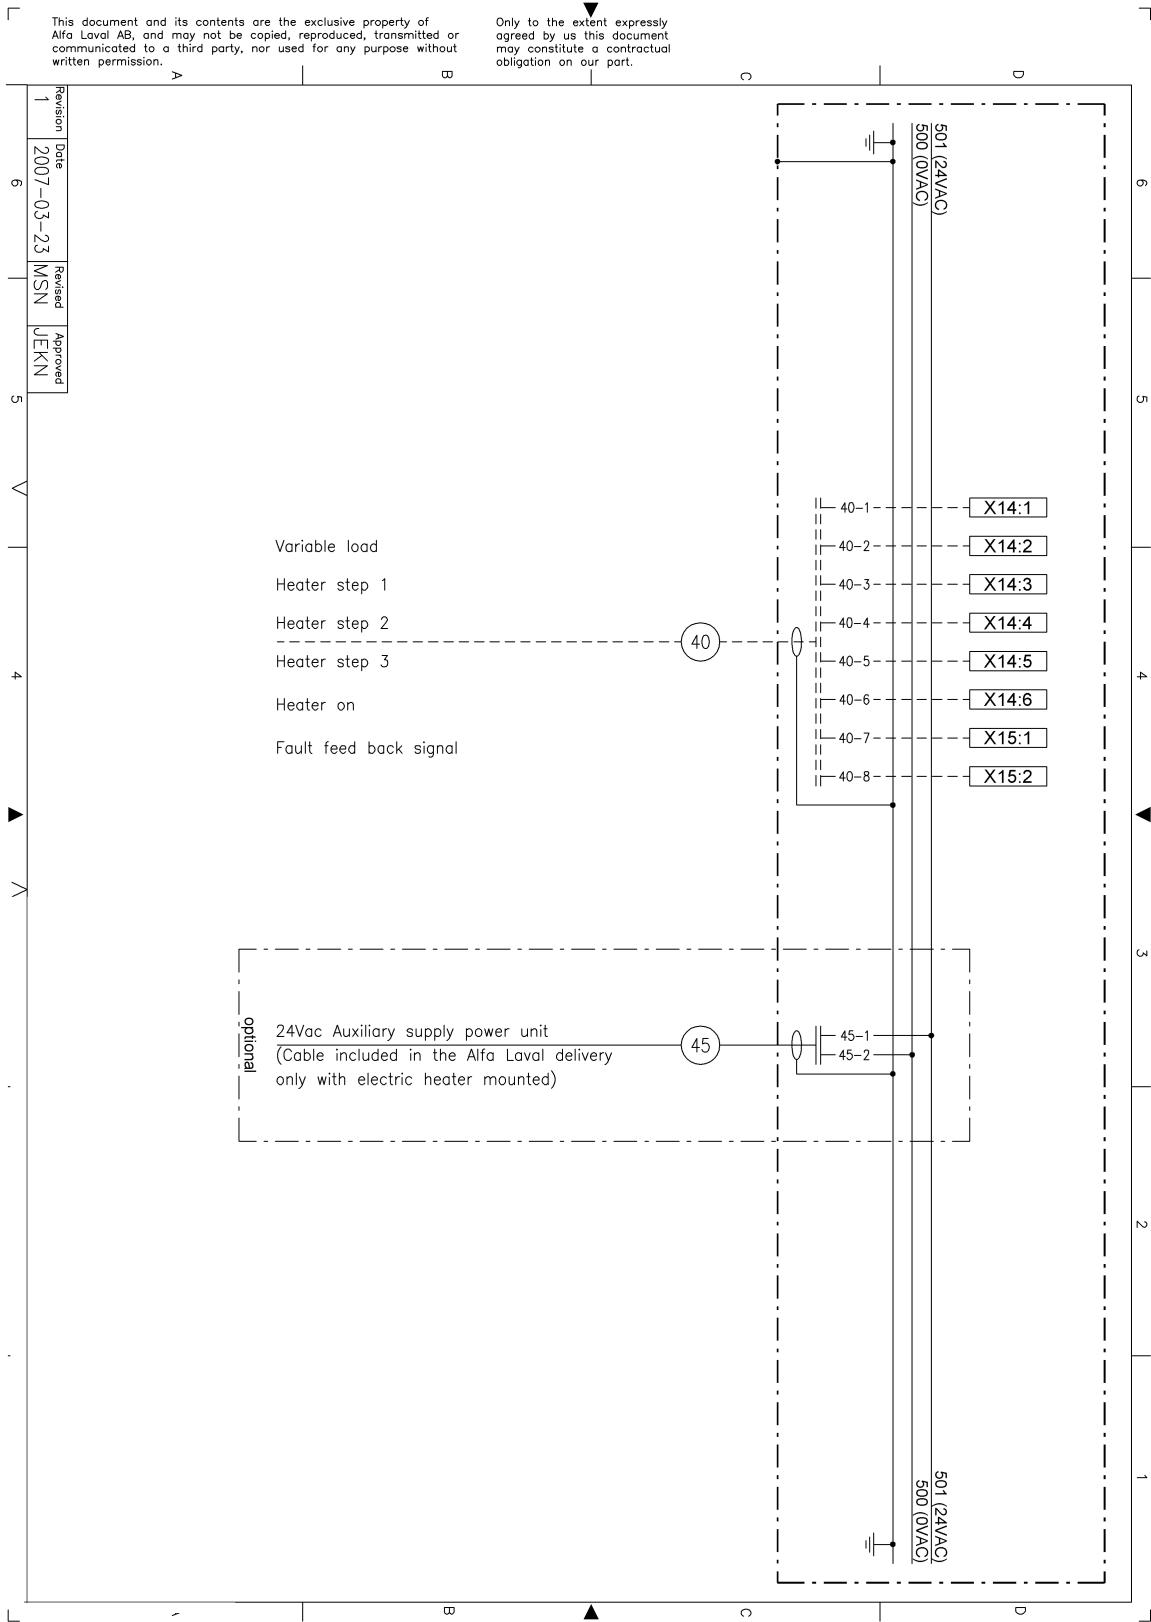

5.2.6 I/O (optional) Interconnection Diagram


Alfa Laval ref. 580894 Rev. 4

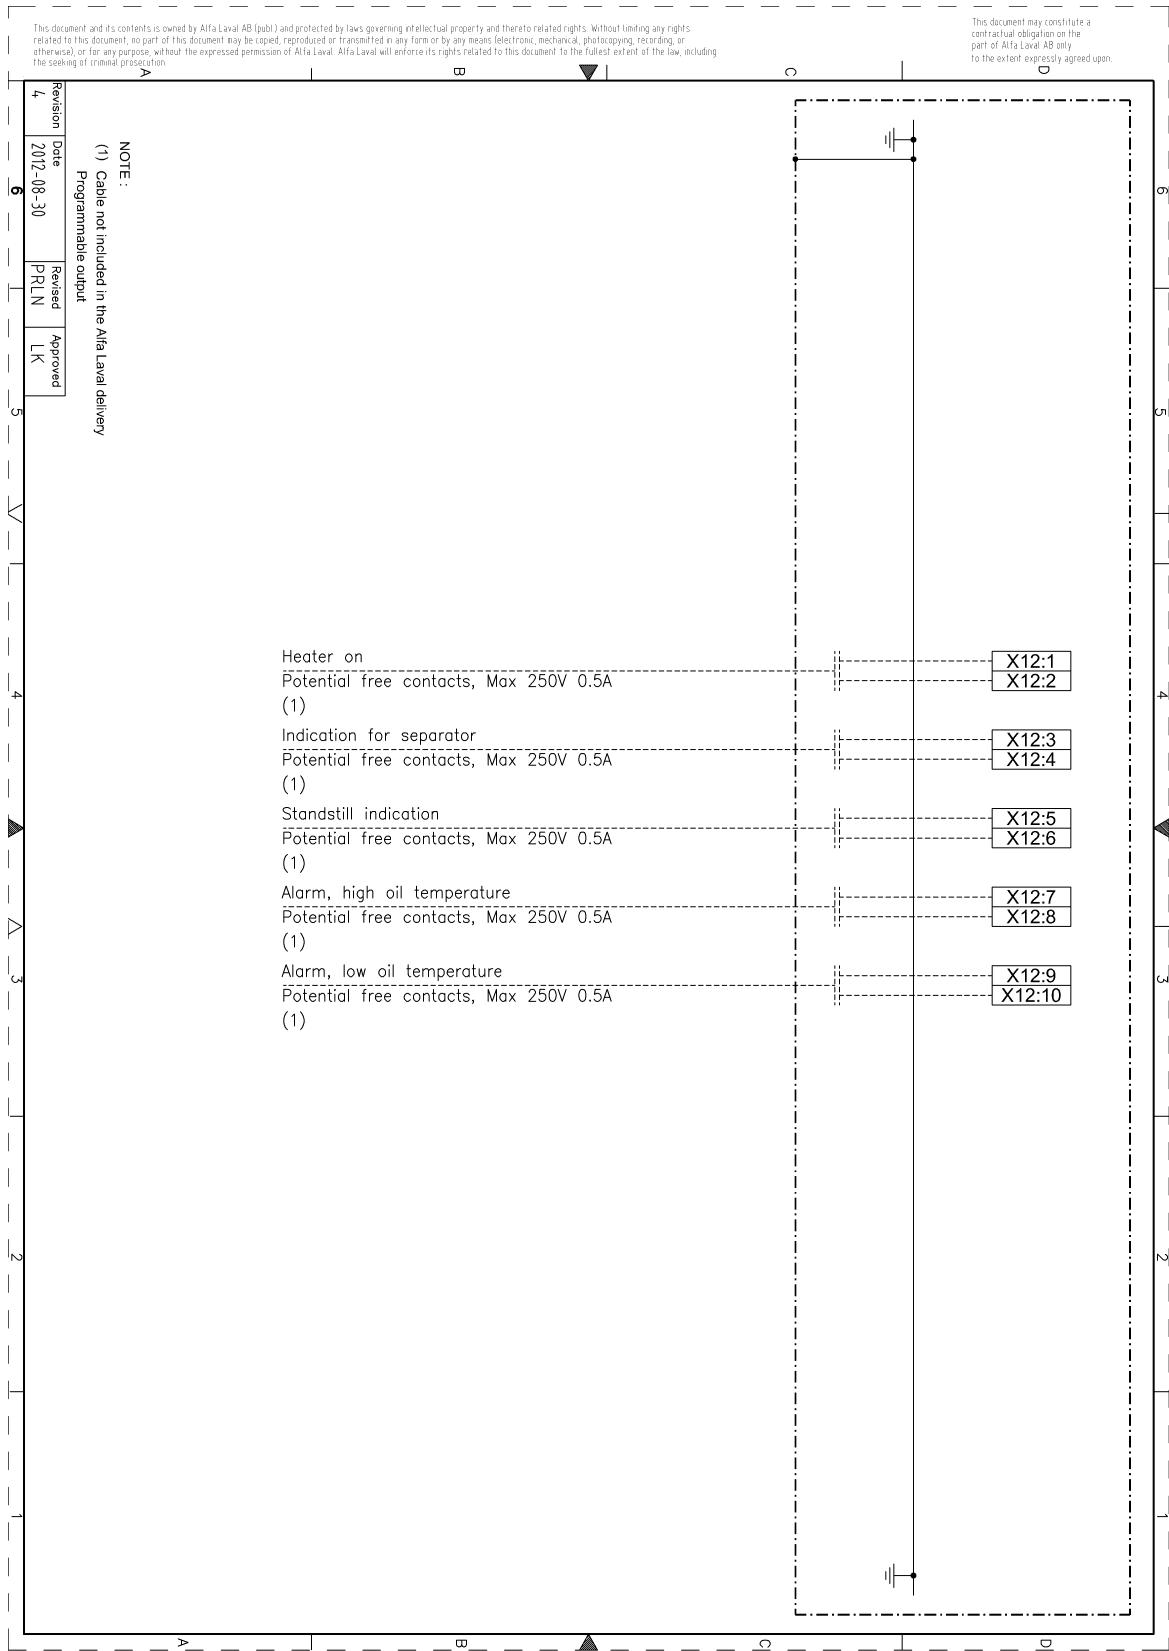

Alfa Laval ref. 580894 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

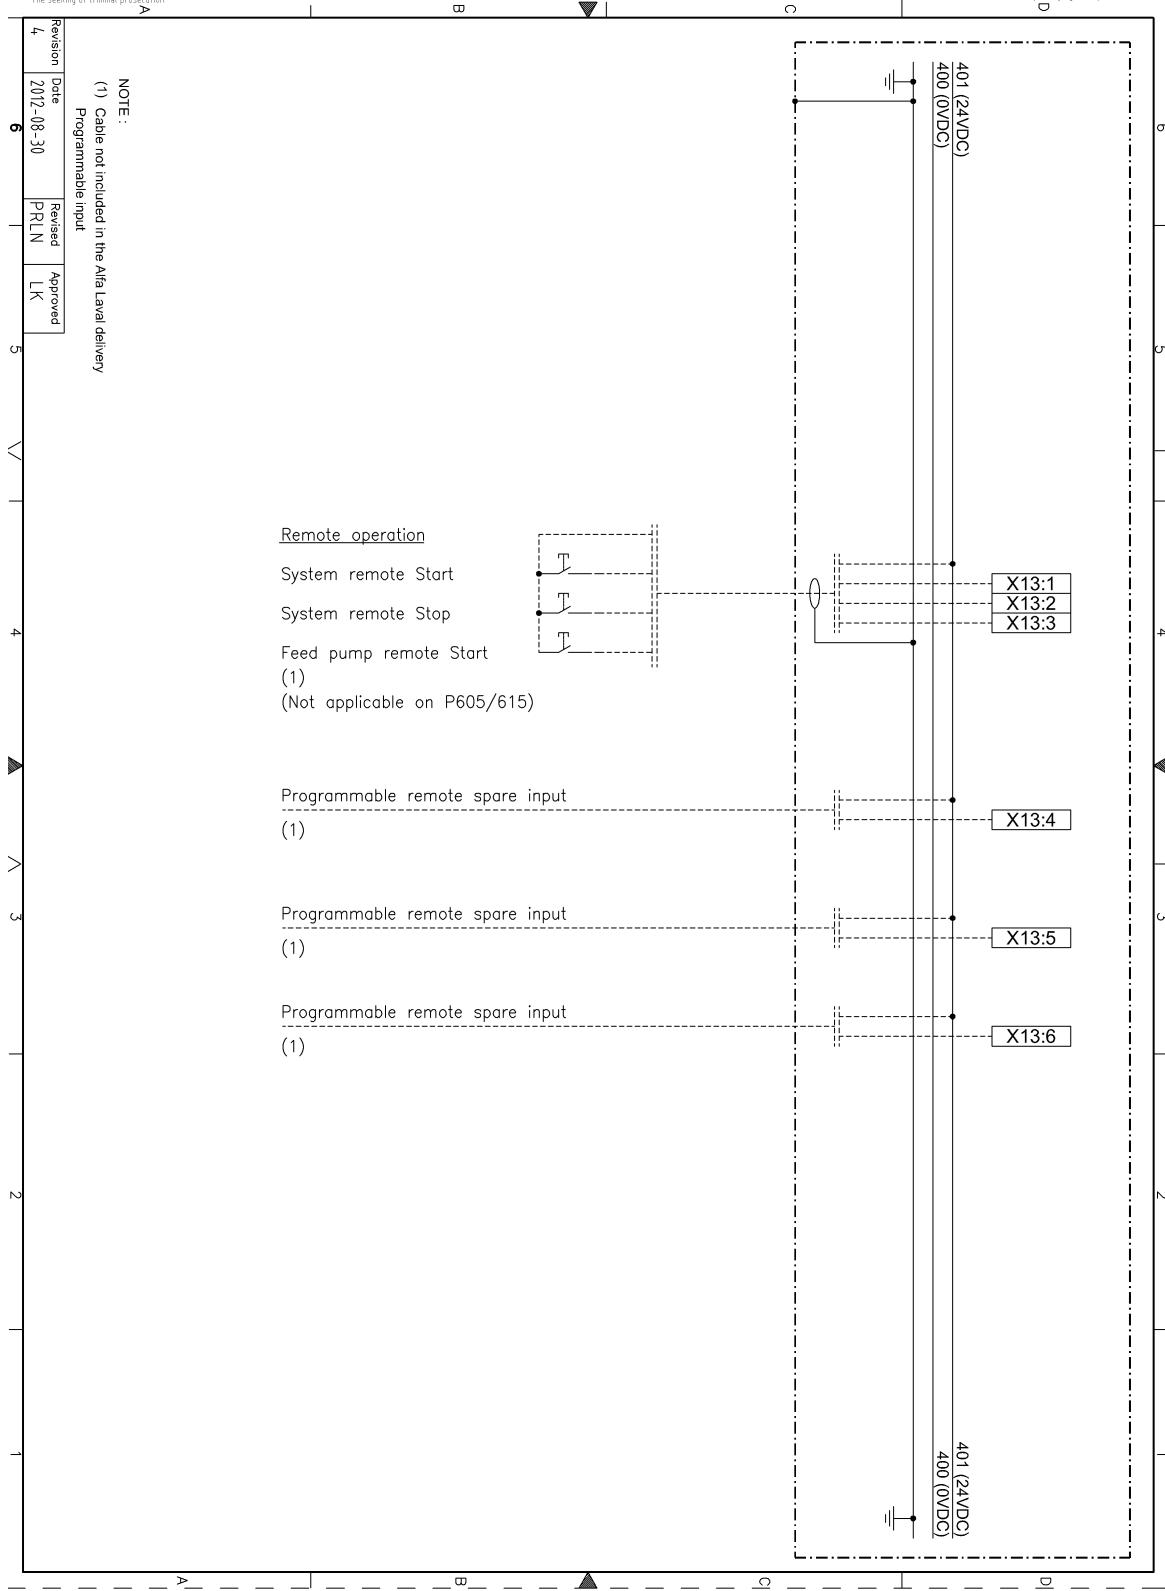


580894#4_01

5.2.7 Heat Tracing (optional) Interconnection Diagram

Alfa Laval ref. 580884 Rev. 0

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.


Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

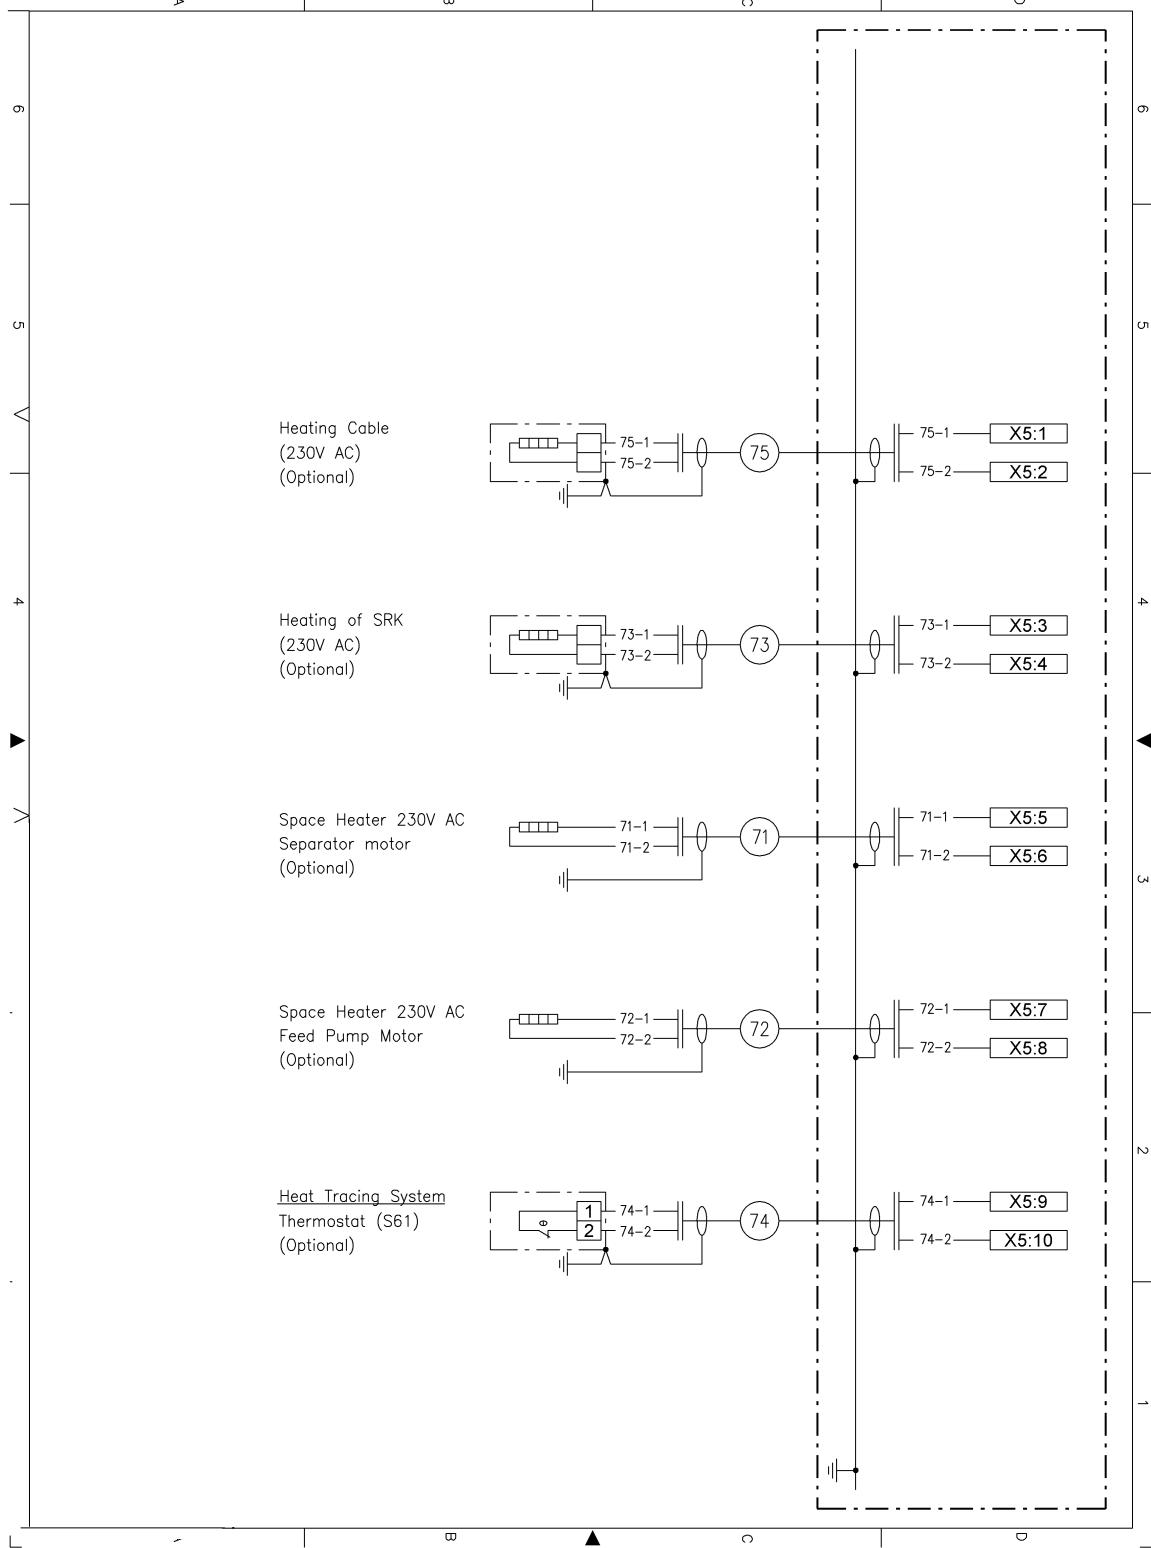

580884#0_00


5.2.8 Emergency Shutdown Interconnection Diagram

Alfa Laval ref. 580898 Rev. 0

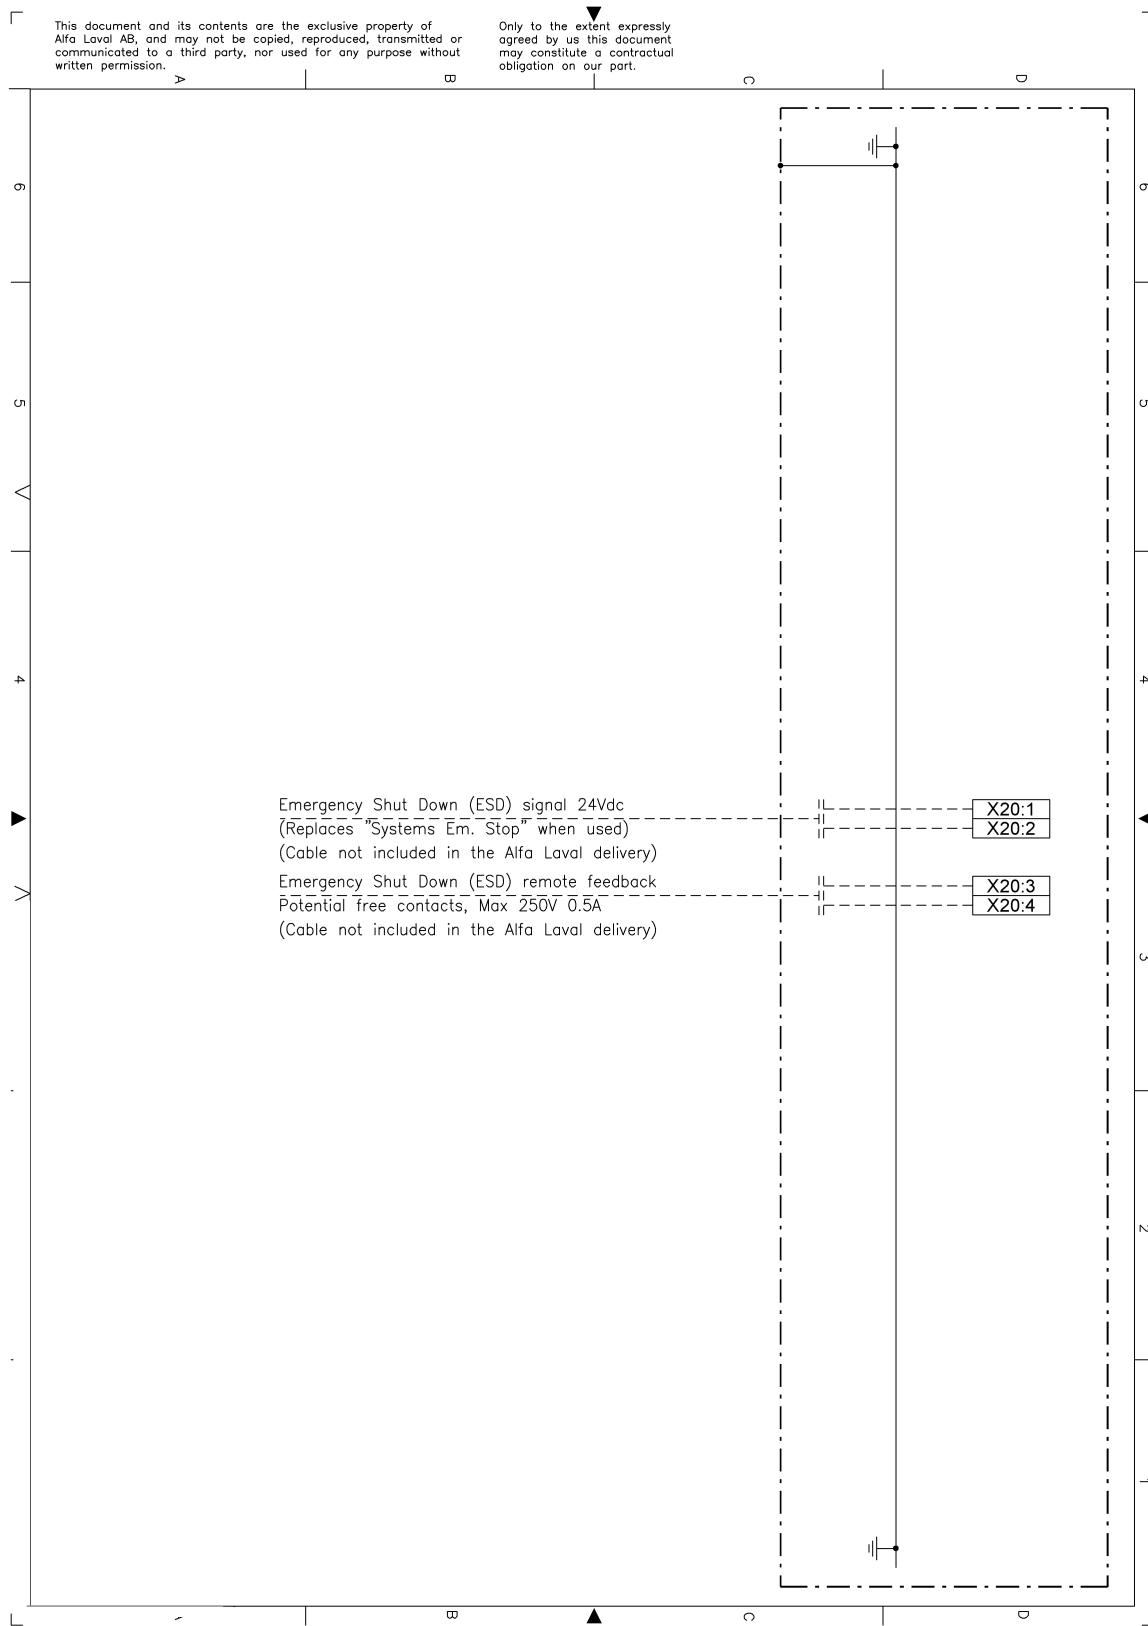

5.2.9 Circuit Diagram


Alfa Laval ref. 581066 Rev. 7

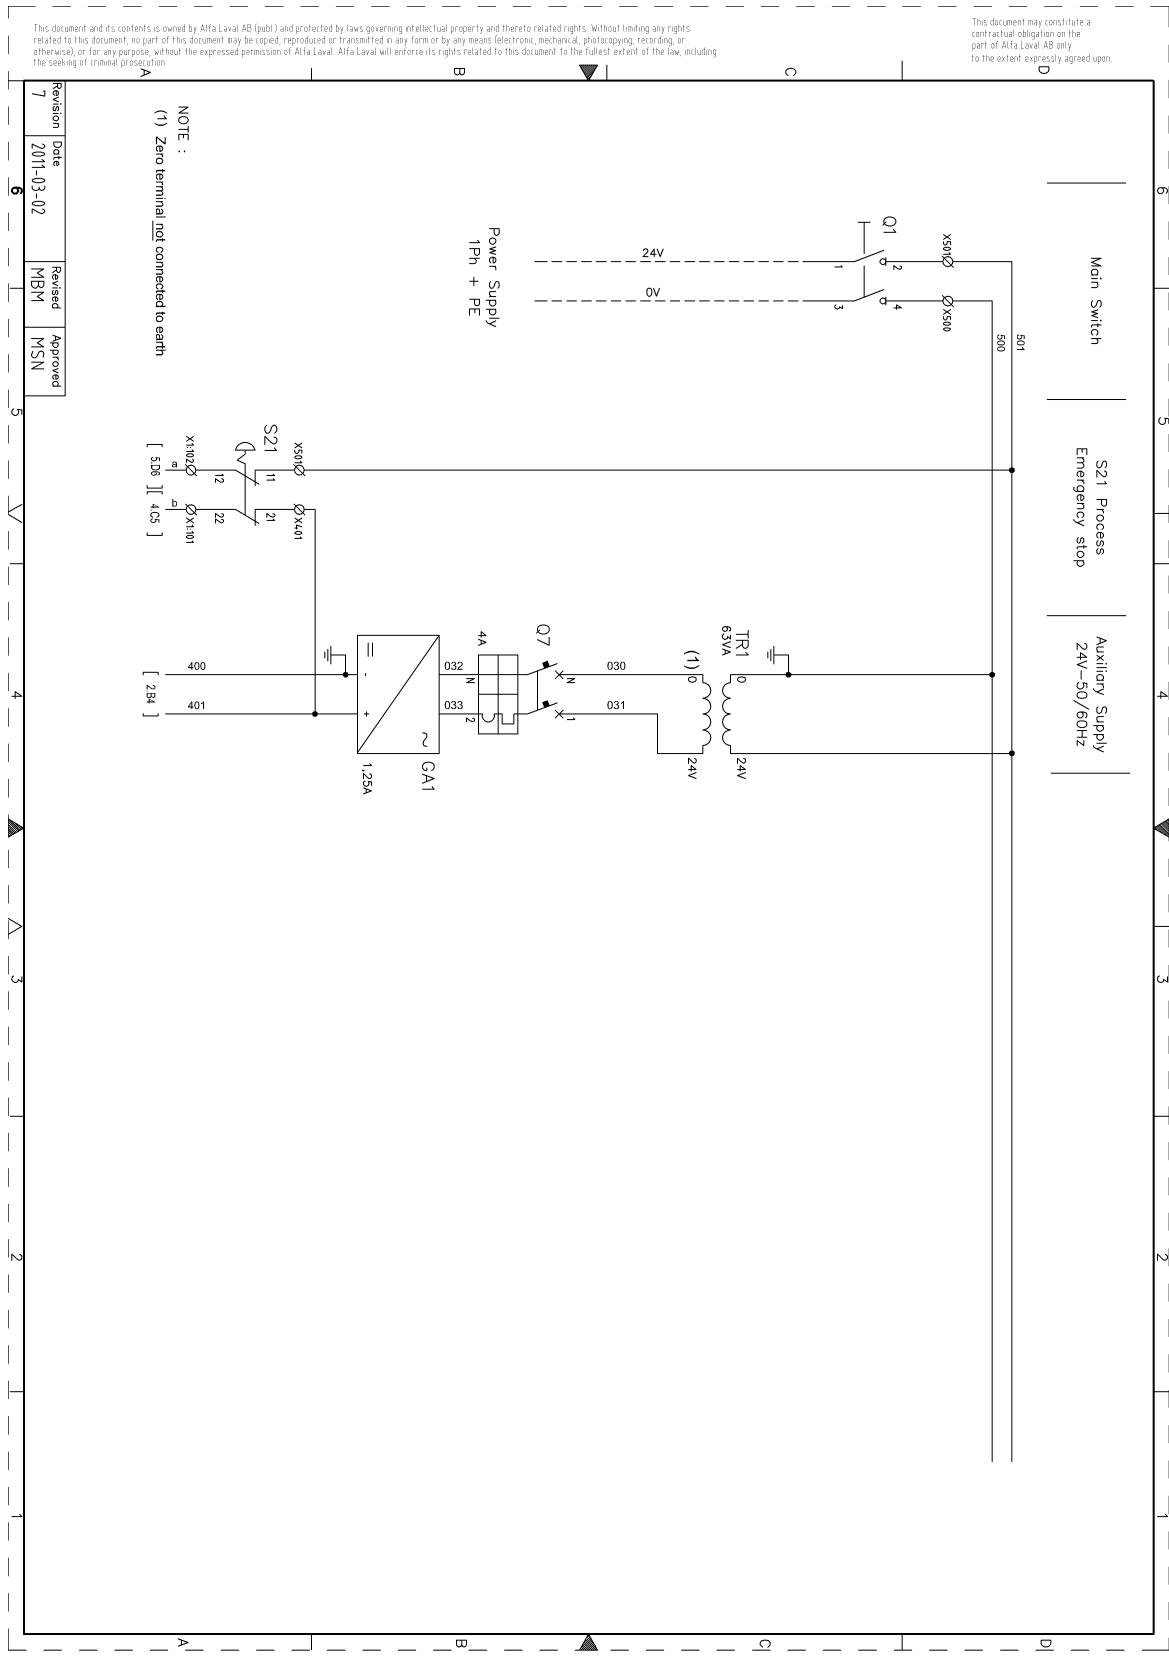

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

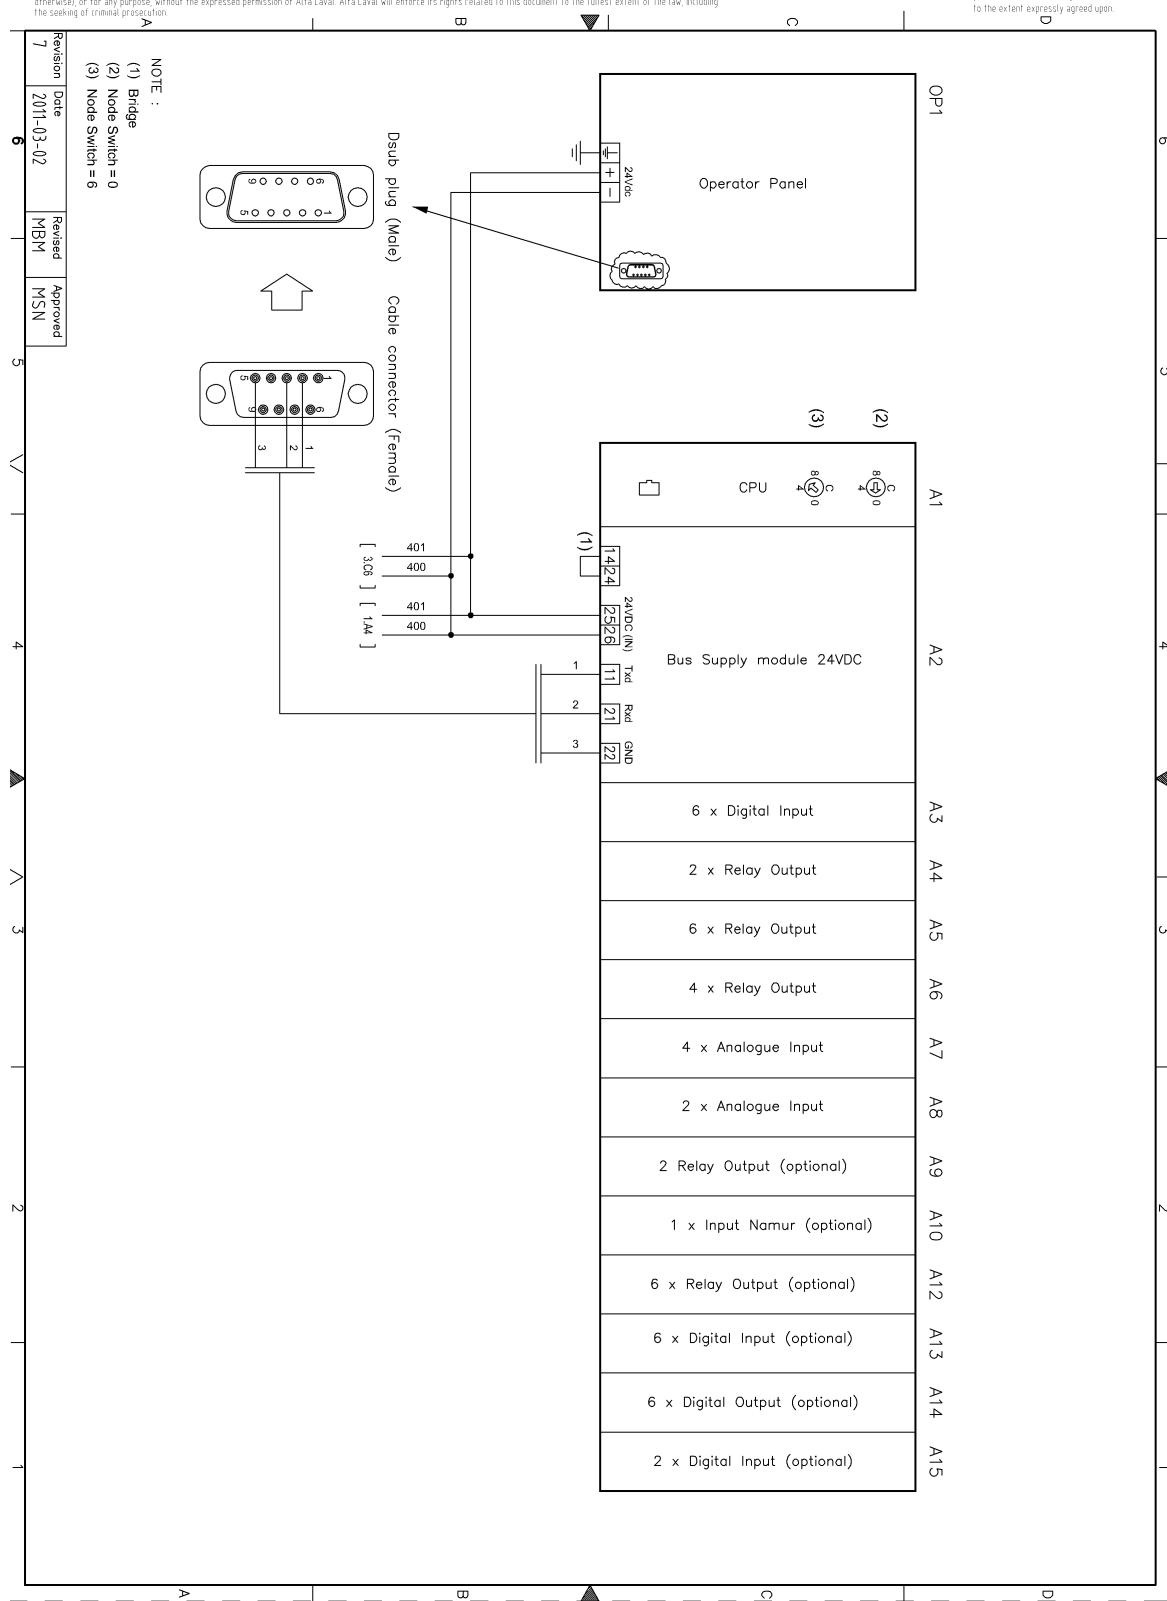


581066#_01

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

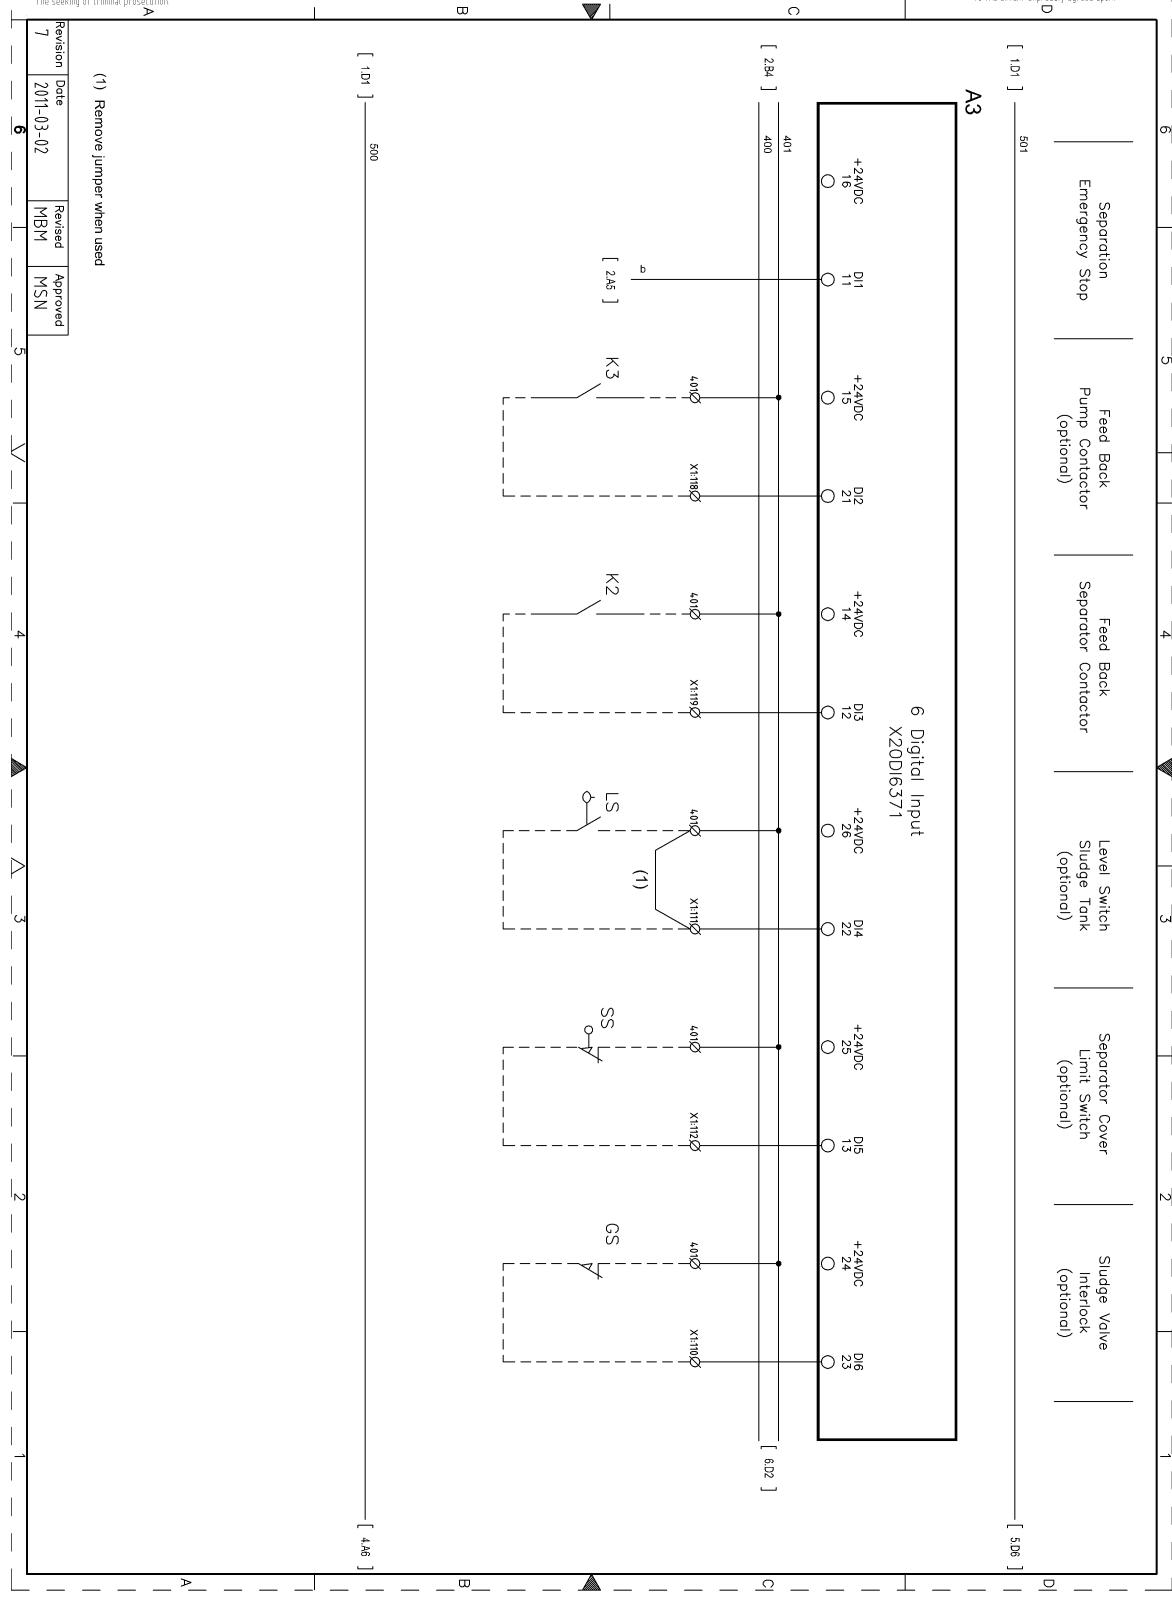

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and their related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

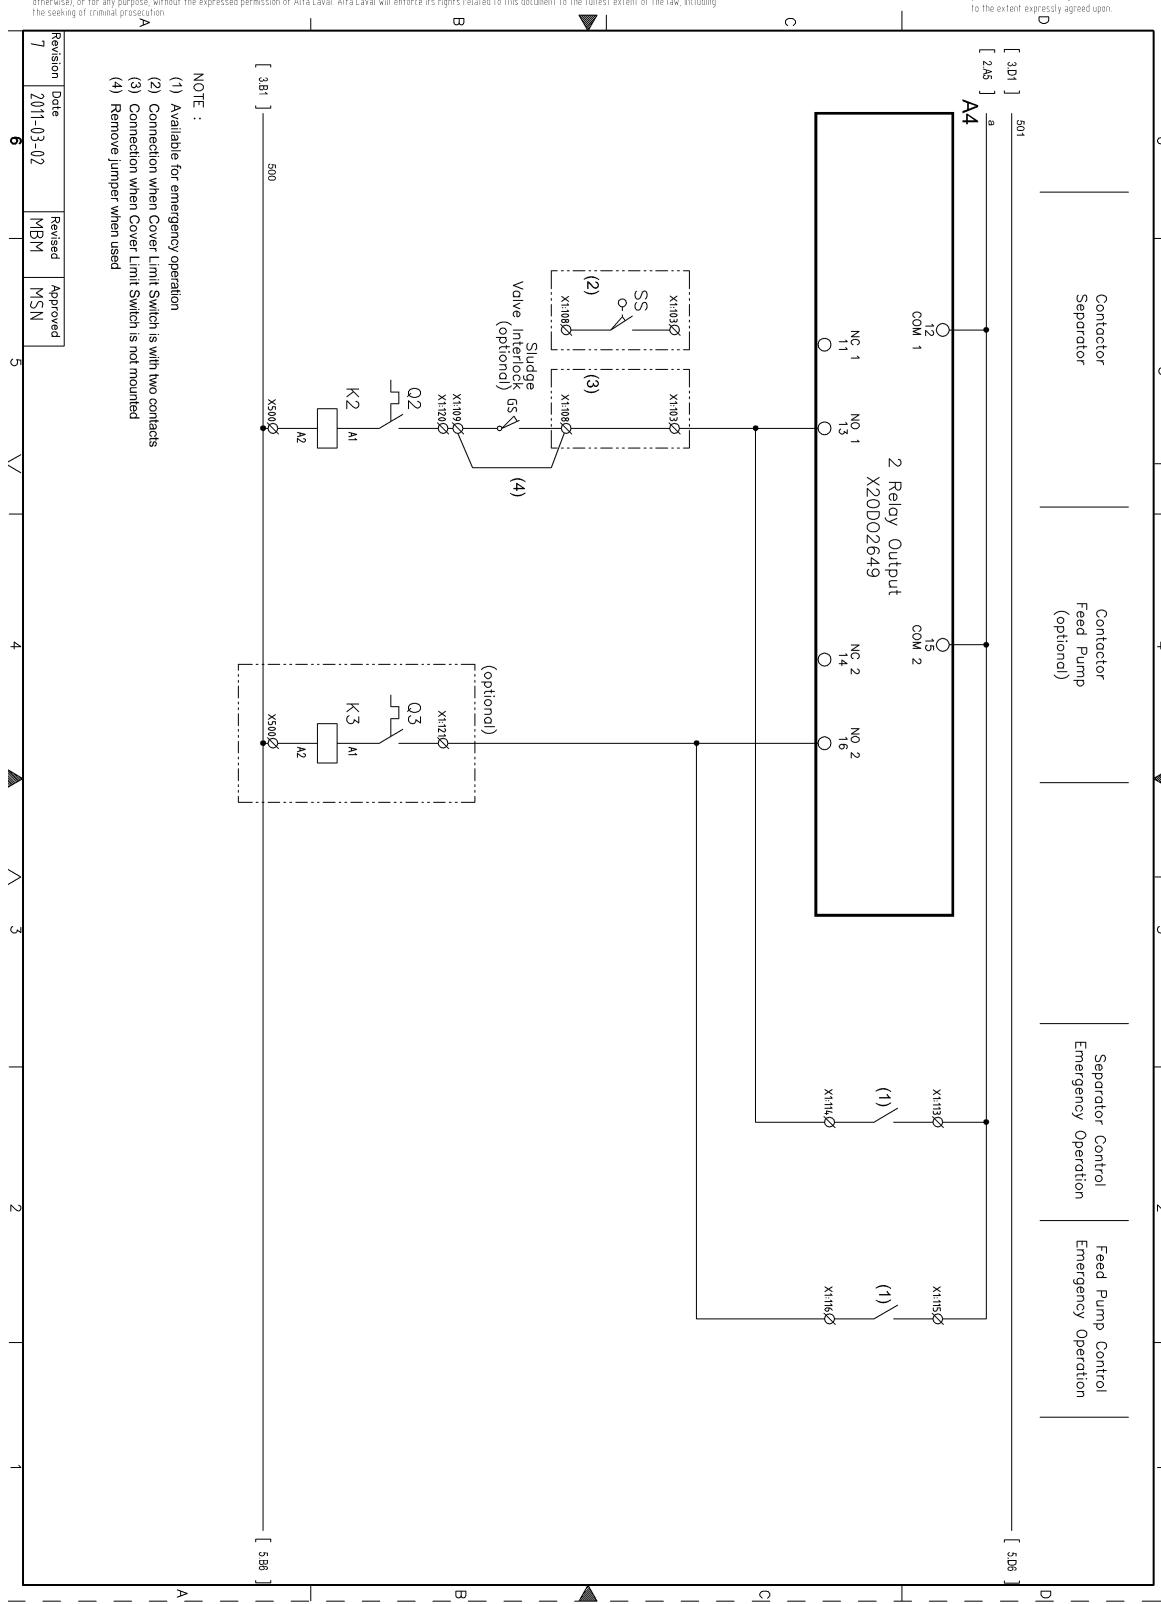


NOTE :

- (1) Available for emergency operation
- (2) Connection when Cover Limit Switch is with two contacts
- (3) Connection when Cover Limit Switch is not mounted
- (4) Remove jumper when used

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereby related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

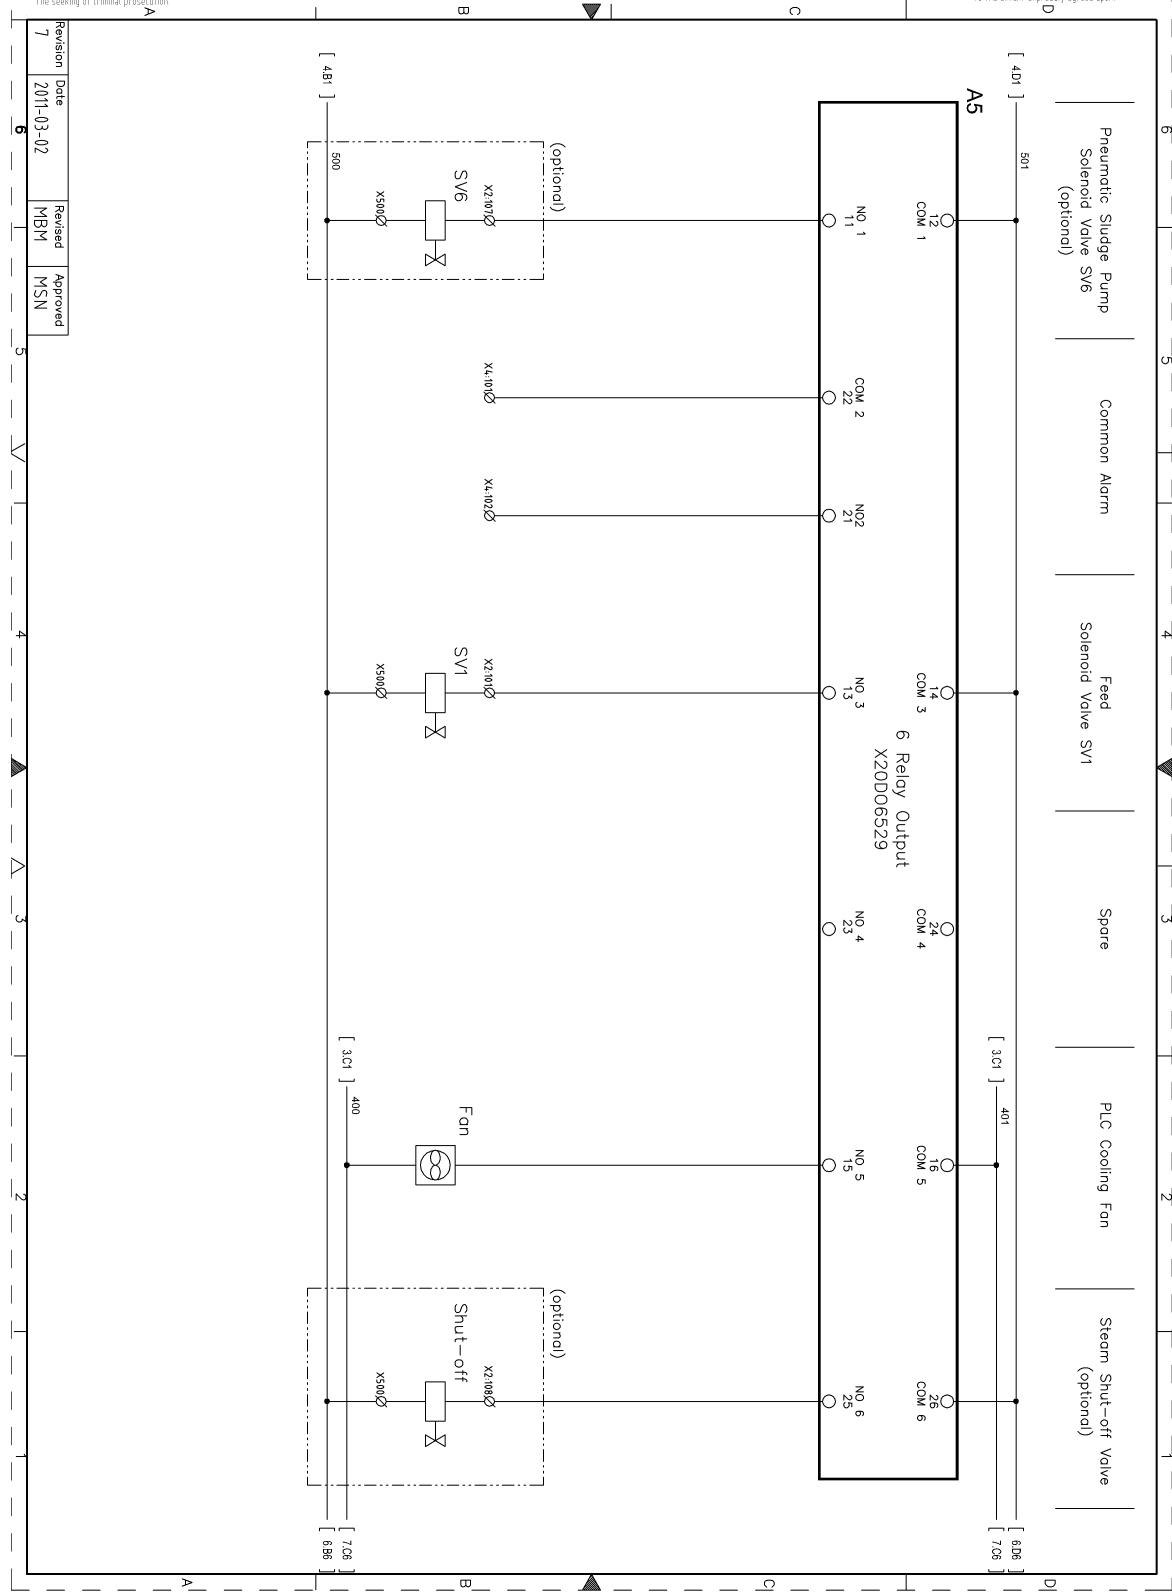

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

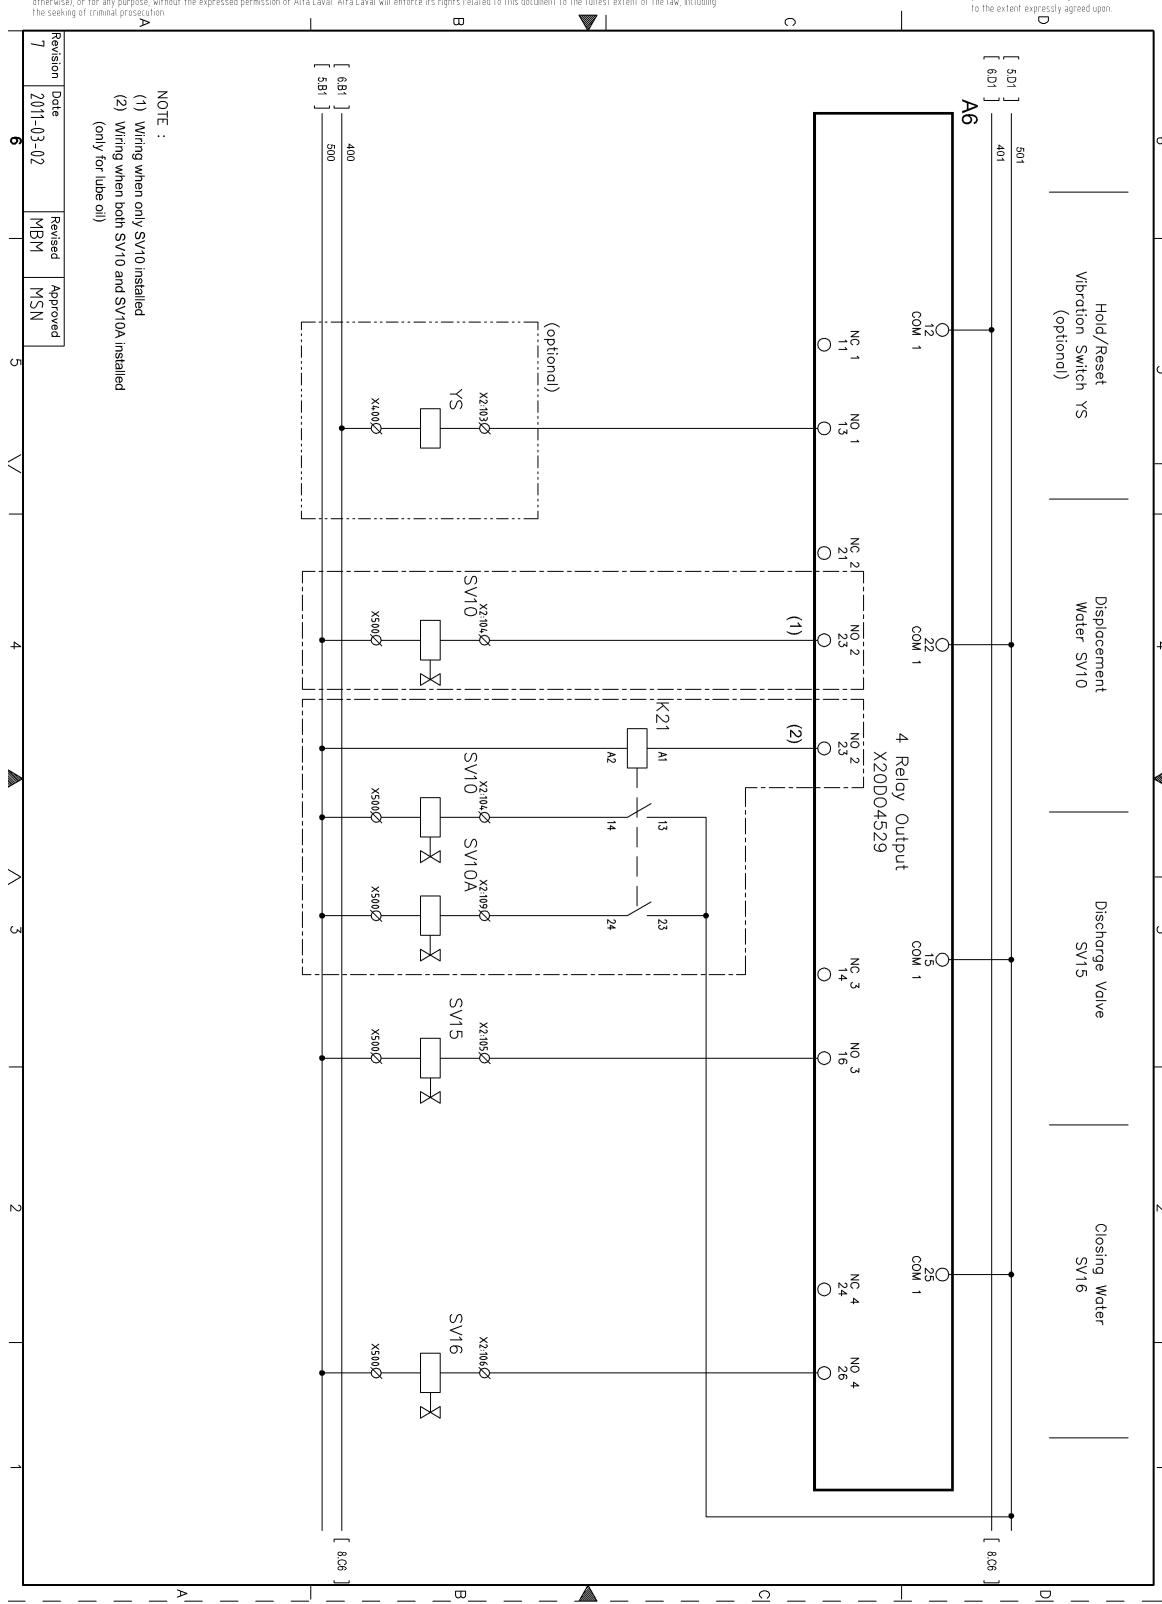


581066#7_05

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the scaling of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

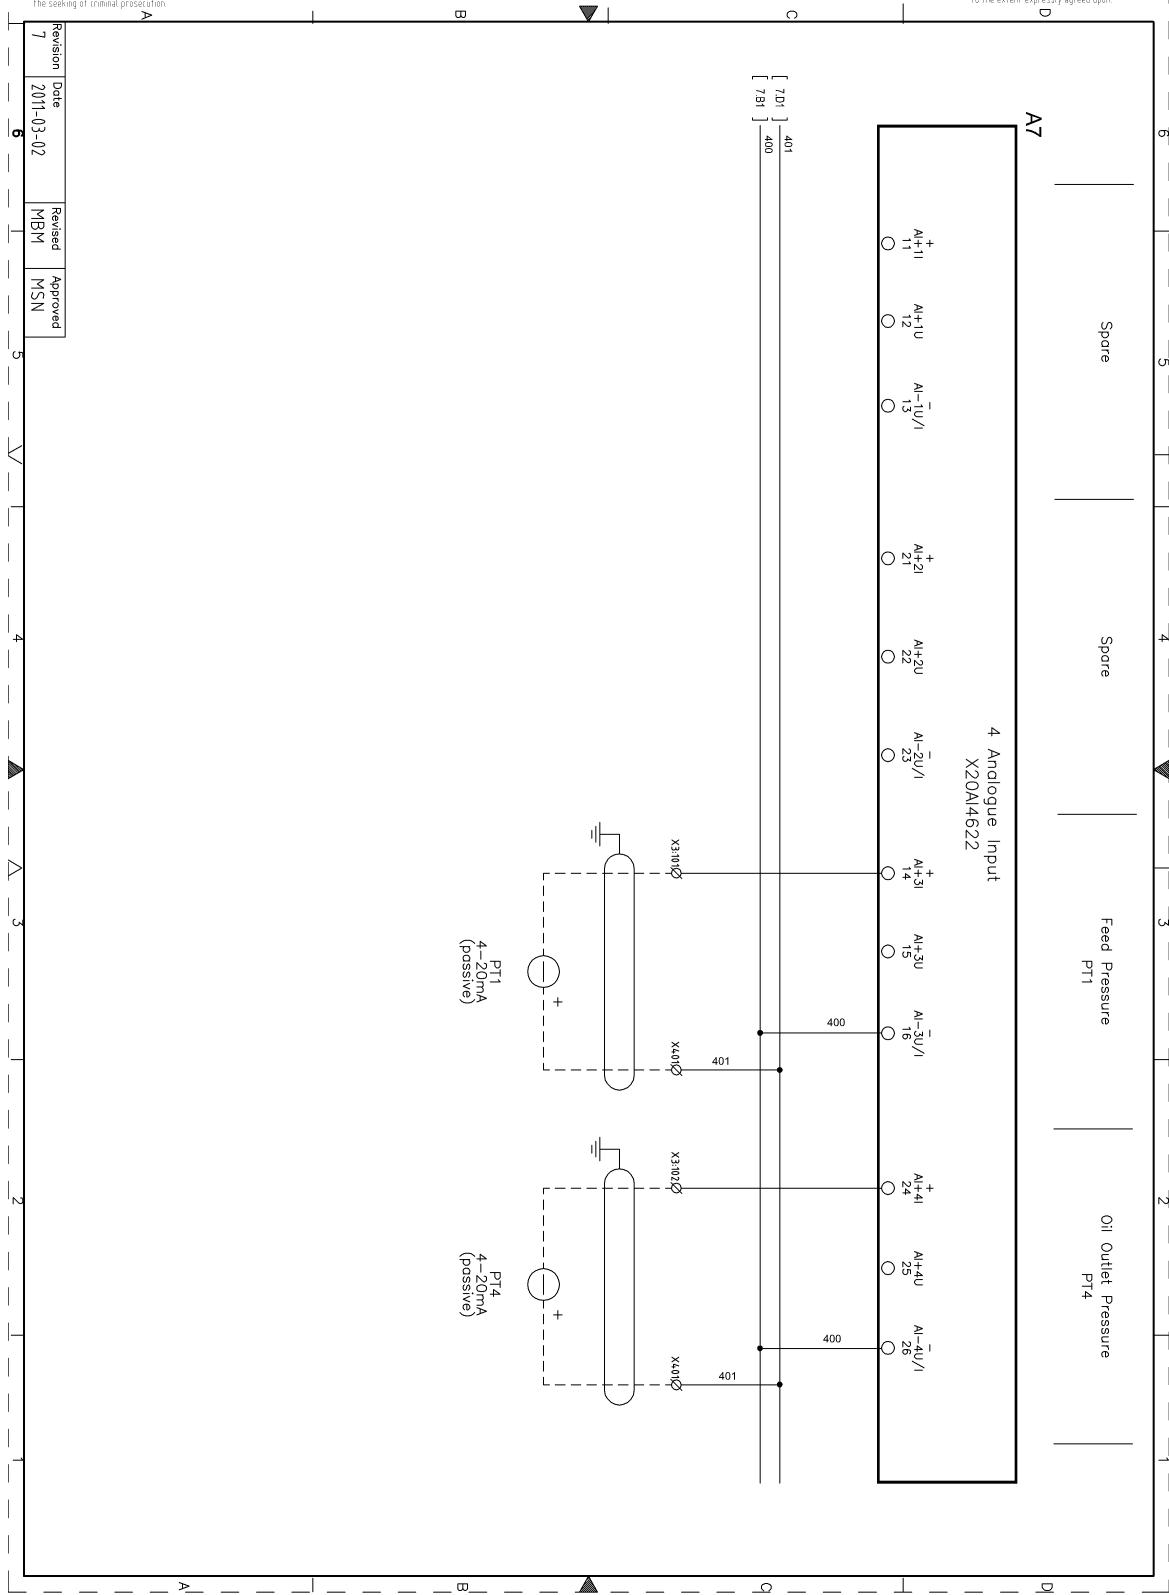


581066#7_06

Alfa Laval ref. 581066 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

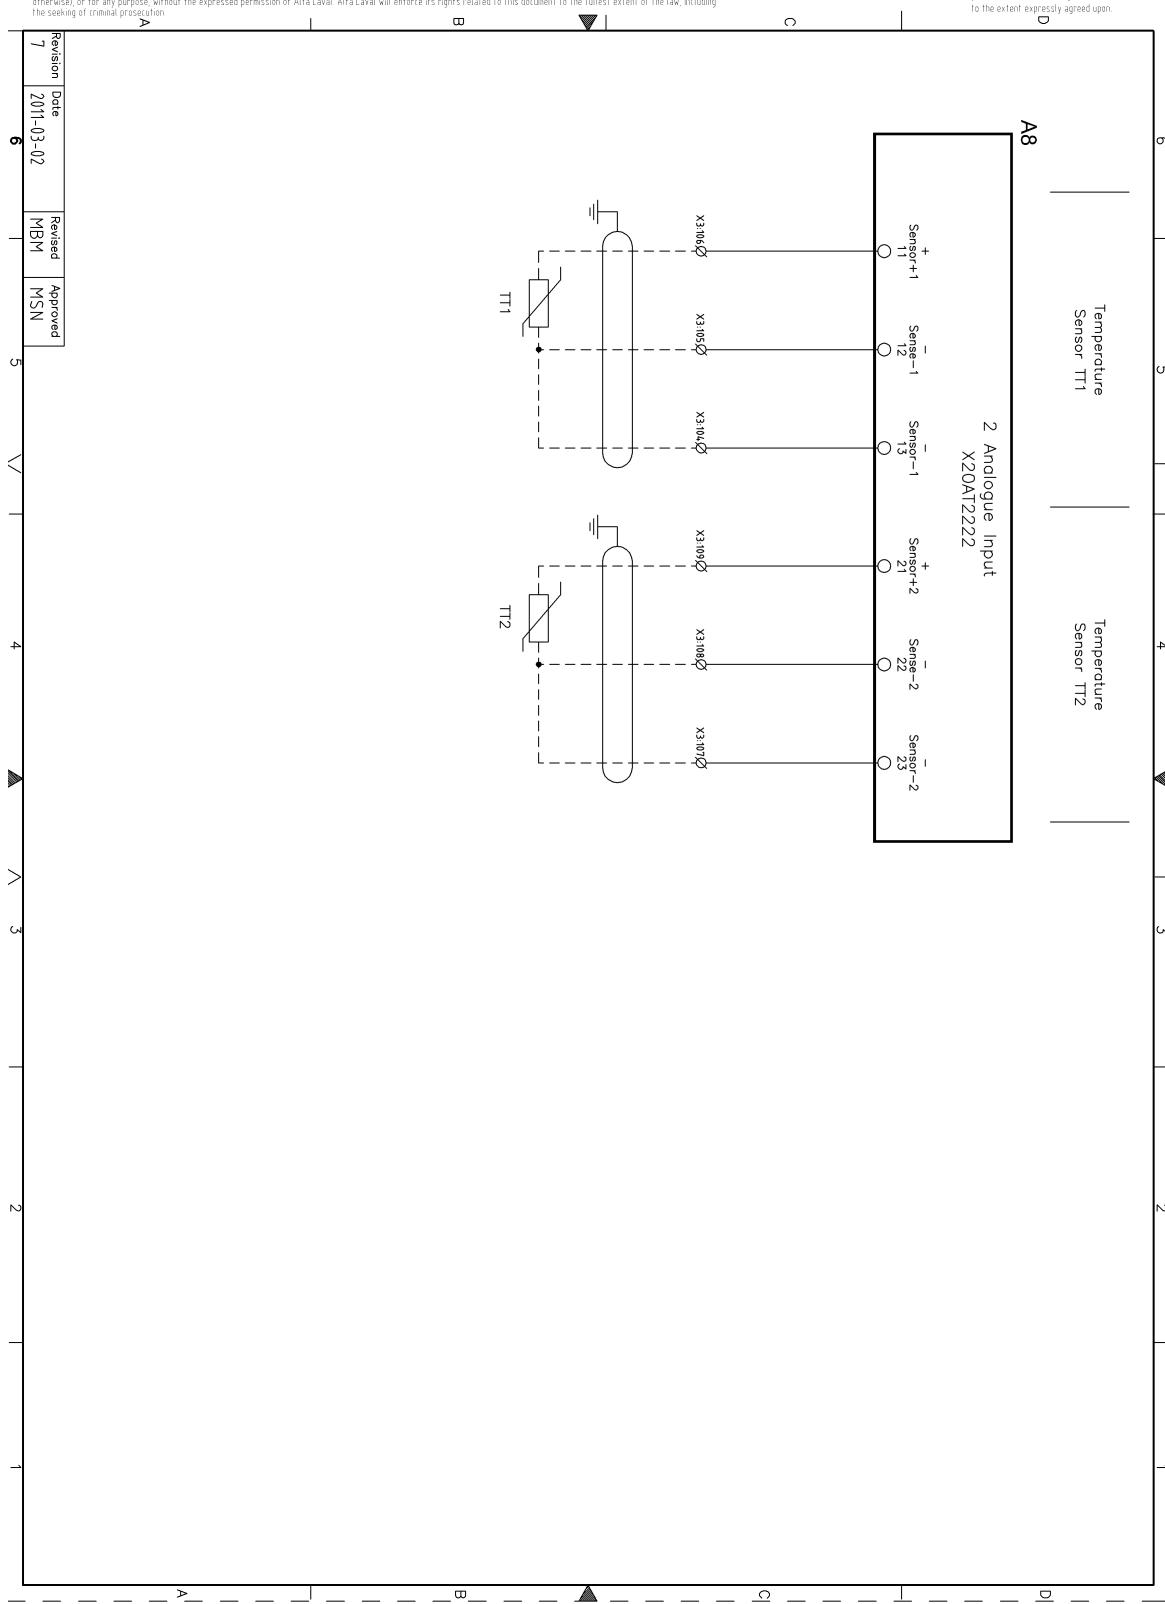

581066#7_07

5.2.10 Steam Regulating Valve (optional) Circuit Diagram


Alfa Laval ref. 580885 Rev. 2

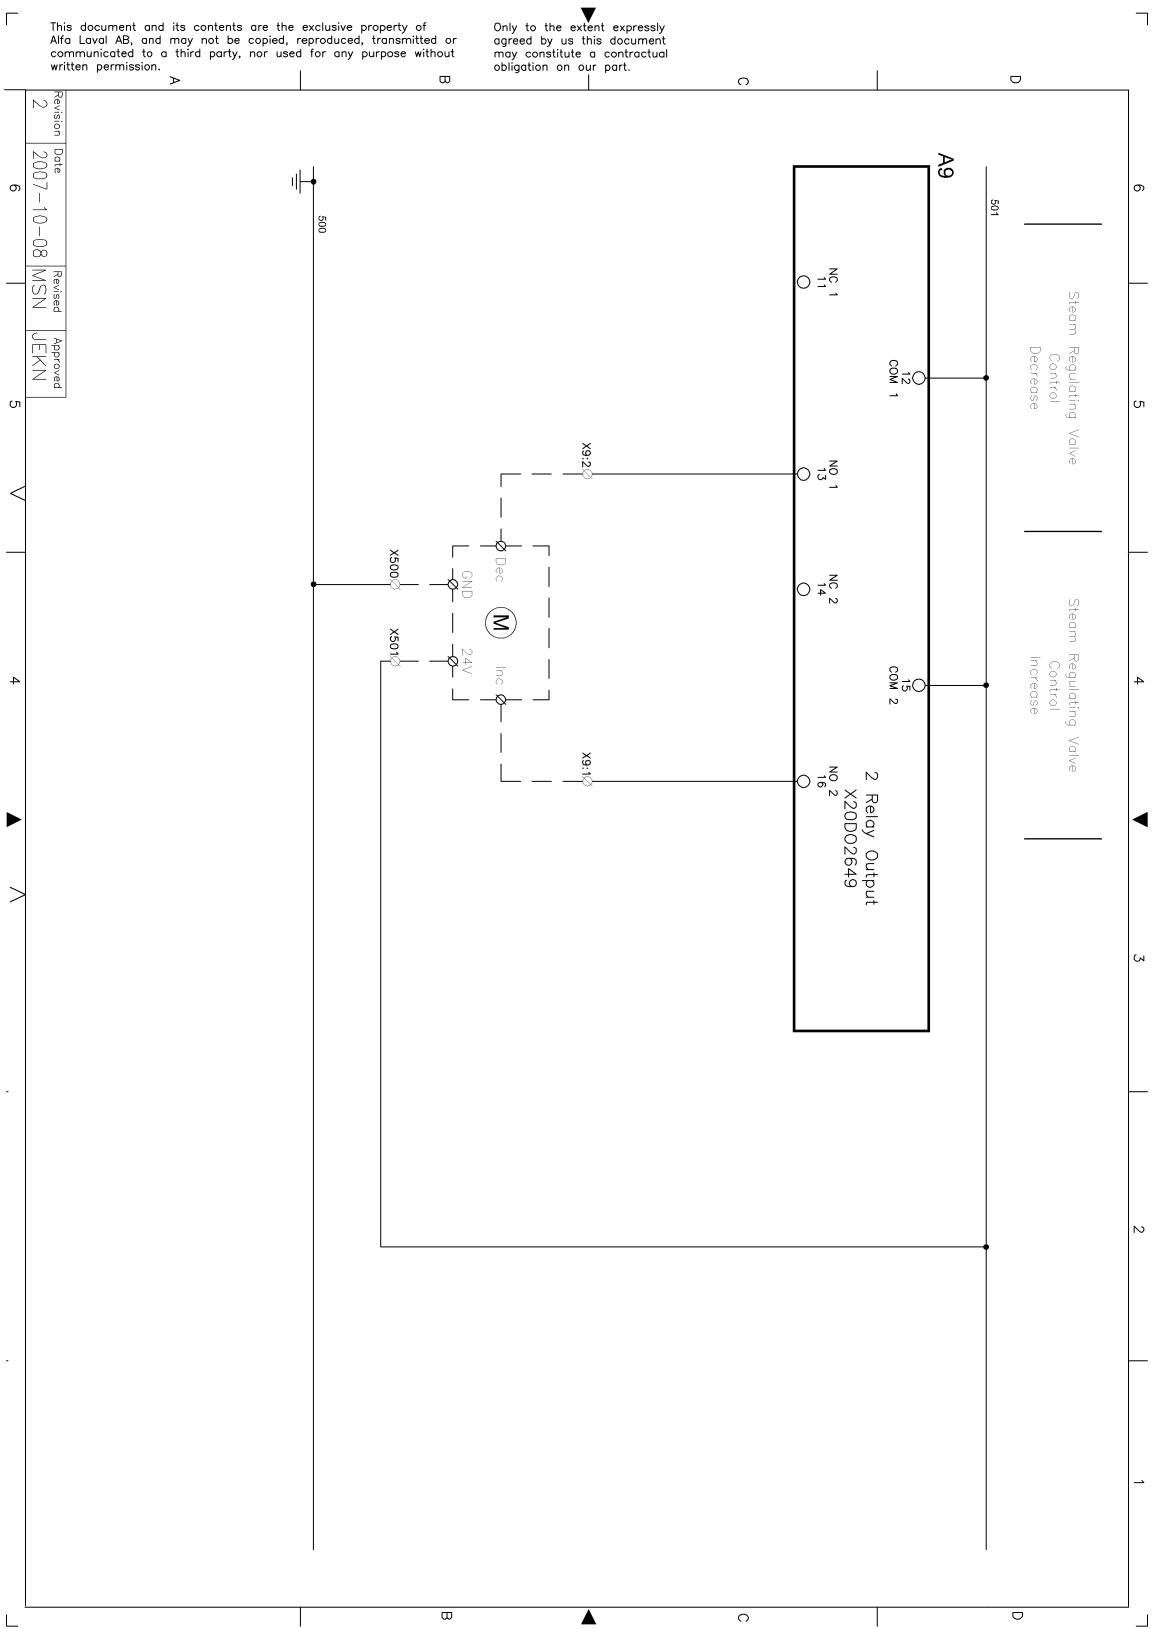

580885#2_00

5.2.11 Vibration Switch (optional) Circuit Diagram

Alfa Laval ref. 581062 Rev. 1

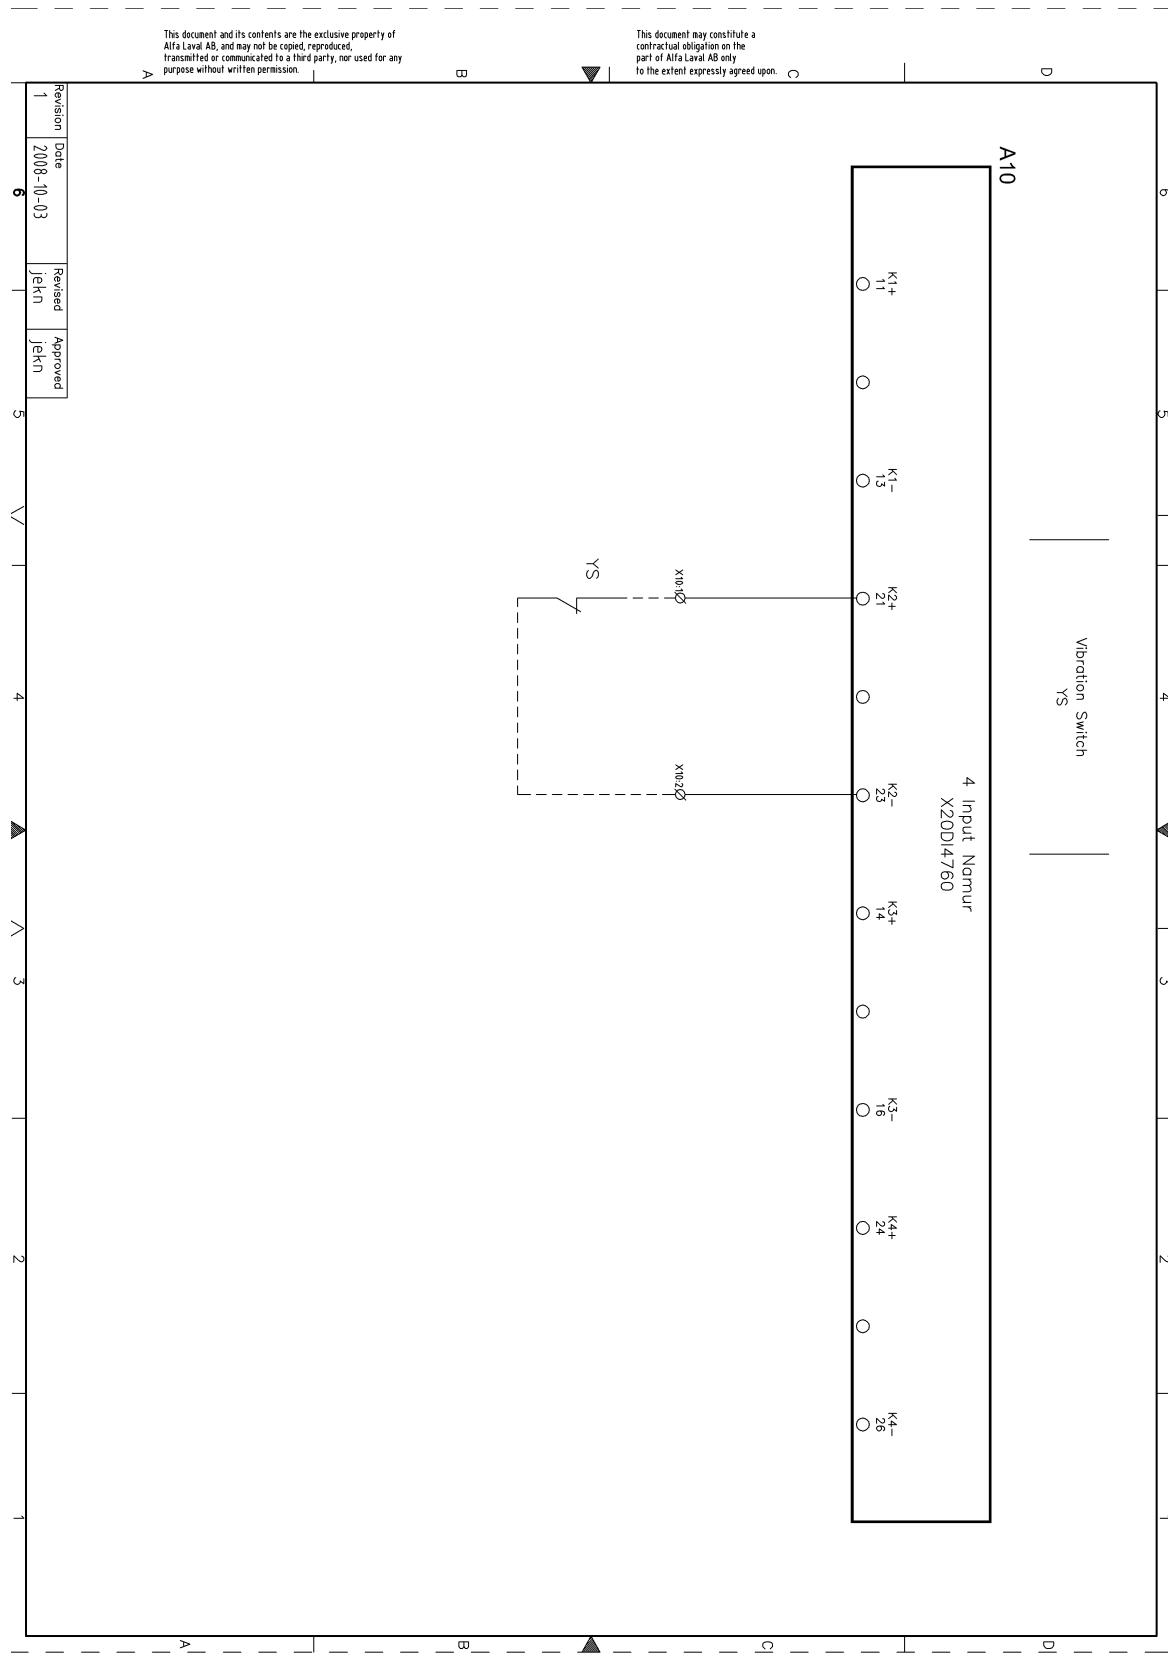


5.2.12 Electric Heater (optional) Circuit Diagram

Alfa Laval ref. 580895 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.


Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

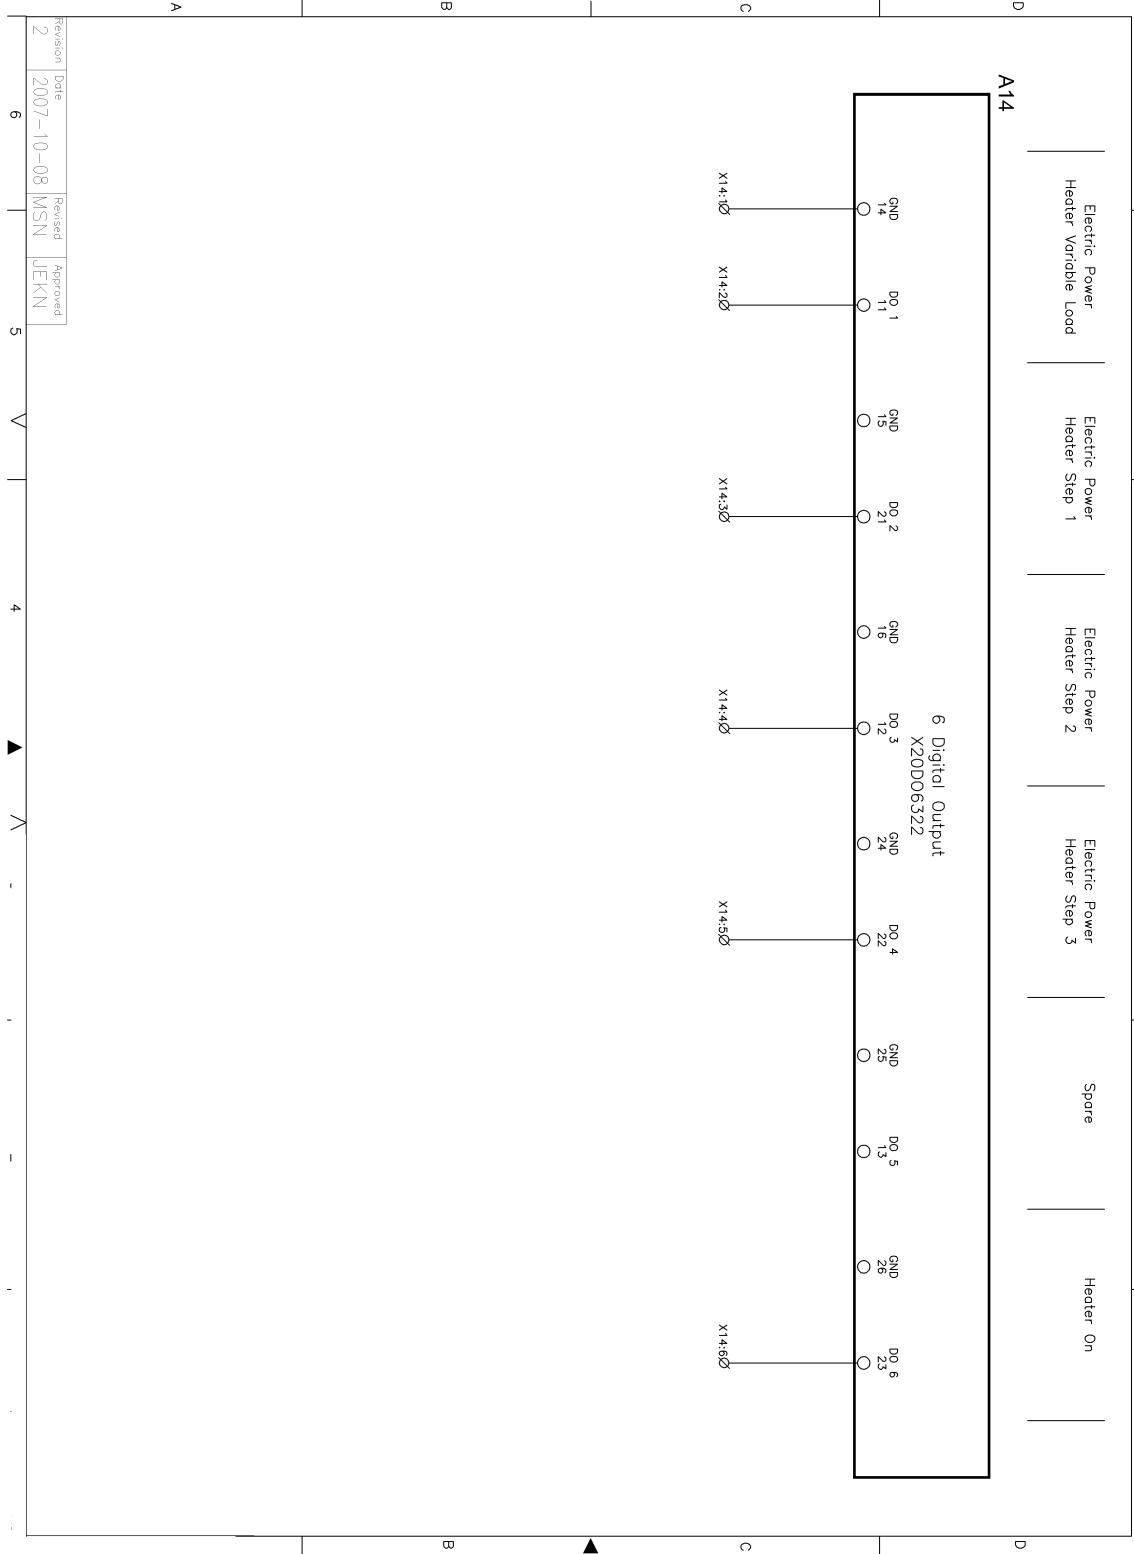

Alfa Laval ref. 580895 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

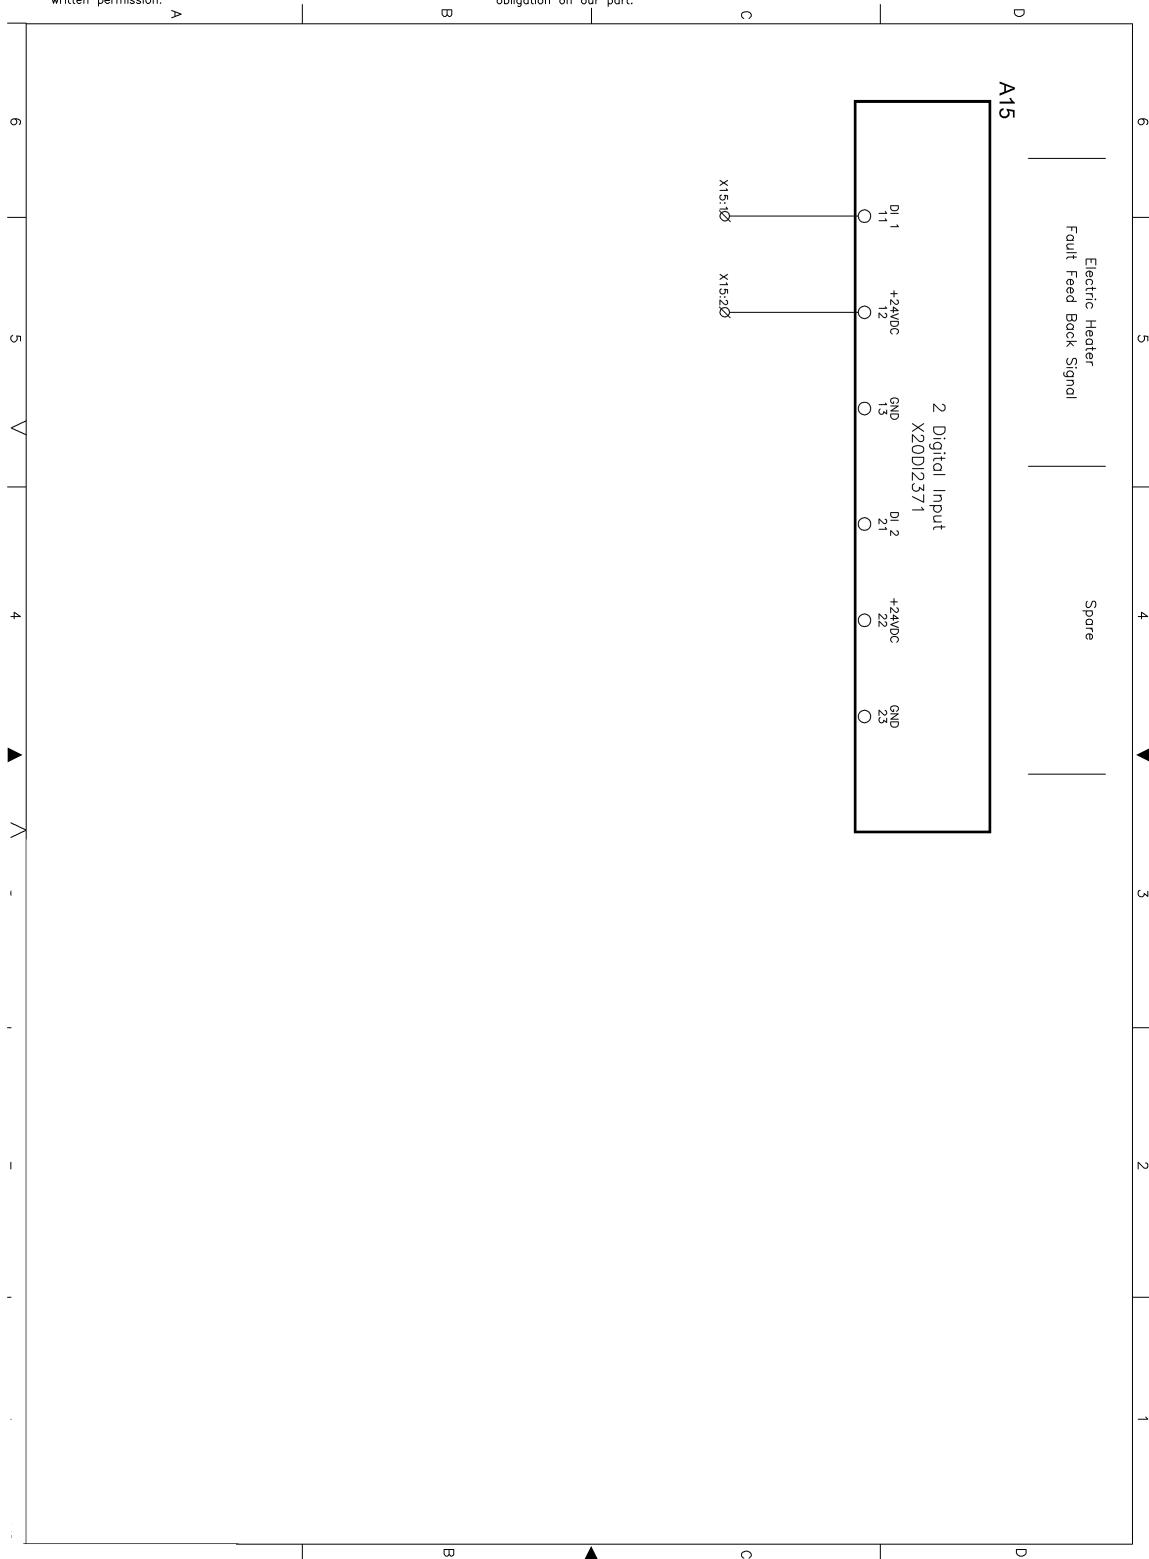


5.2.13 I/O (optional) Circuit Diagram

Alfa Laval ref. 580893 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by law governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

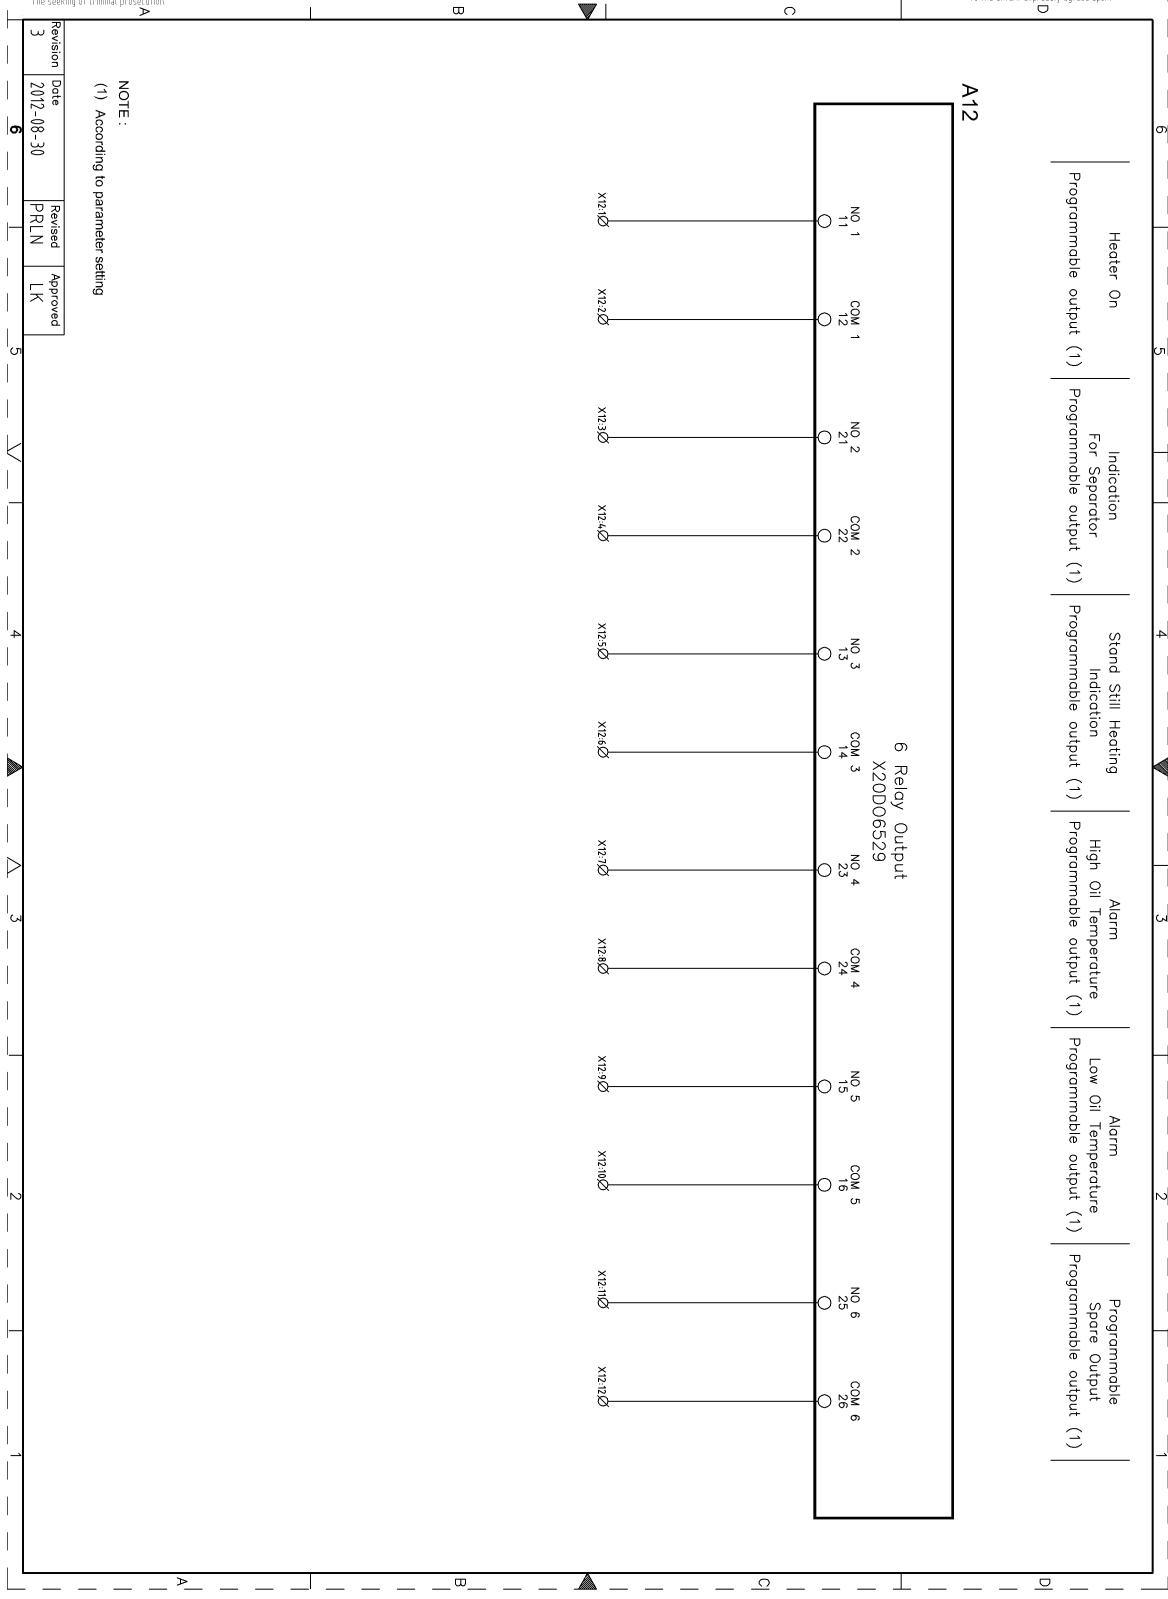


NOTE:

Revision 3	Date 2012-08-30	Revised PRLN	Approved LK
---------------	--------------------	-----------------	----------------

Alfa Laval ref. 580893 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

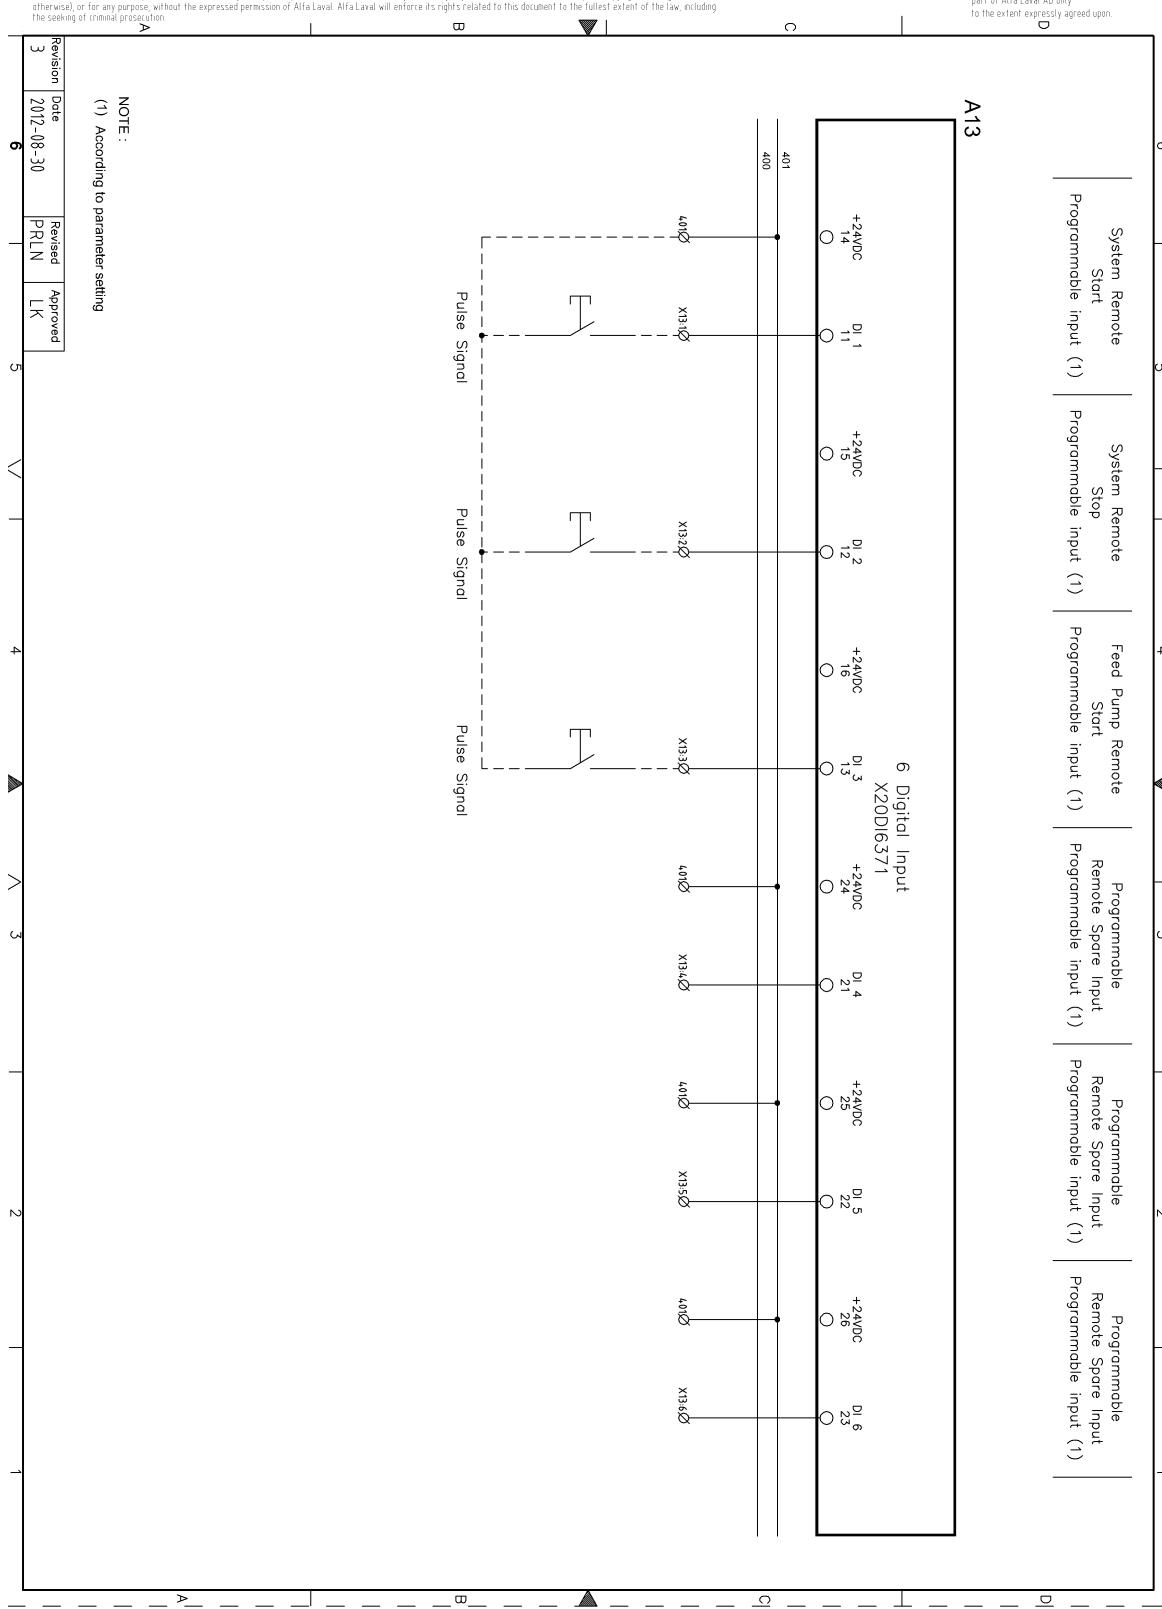


580893#3_01

5.2.14 Heat Tracing (optional) Circuit Diagram

Alfa Laval ref. 580883 Rev. 1

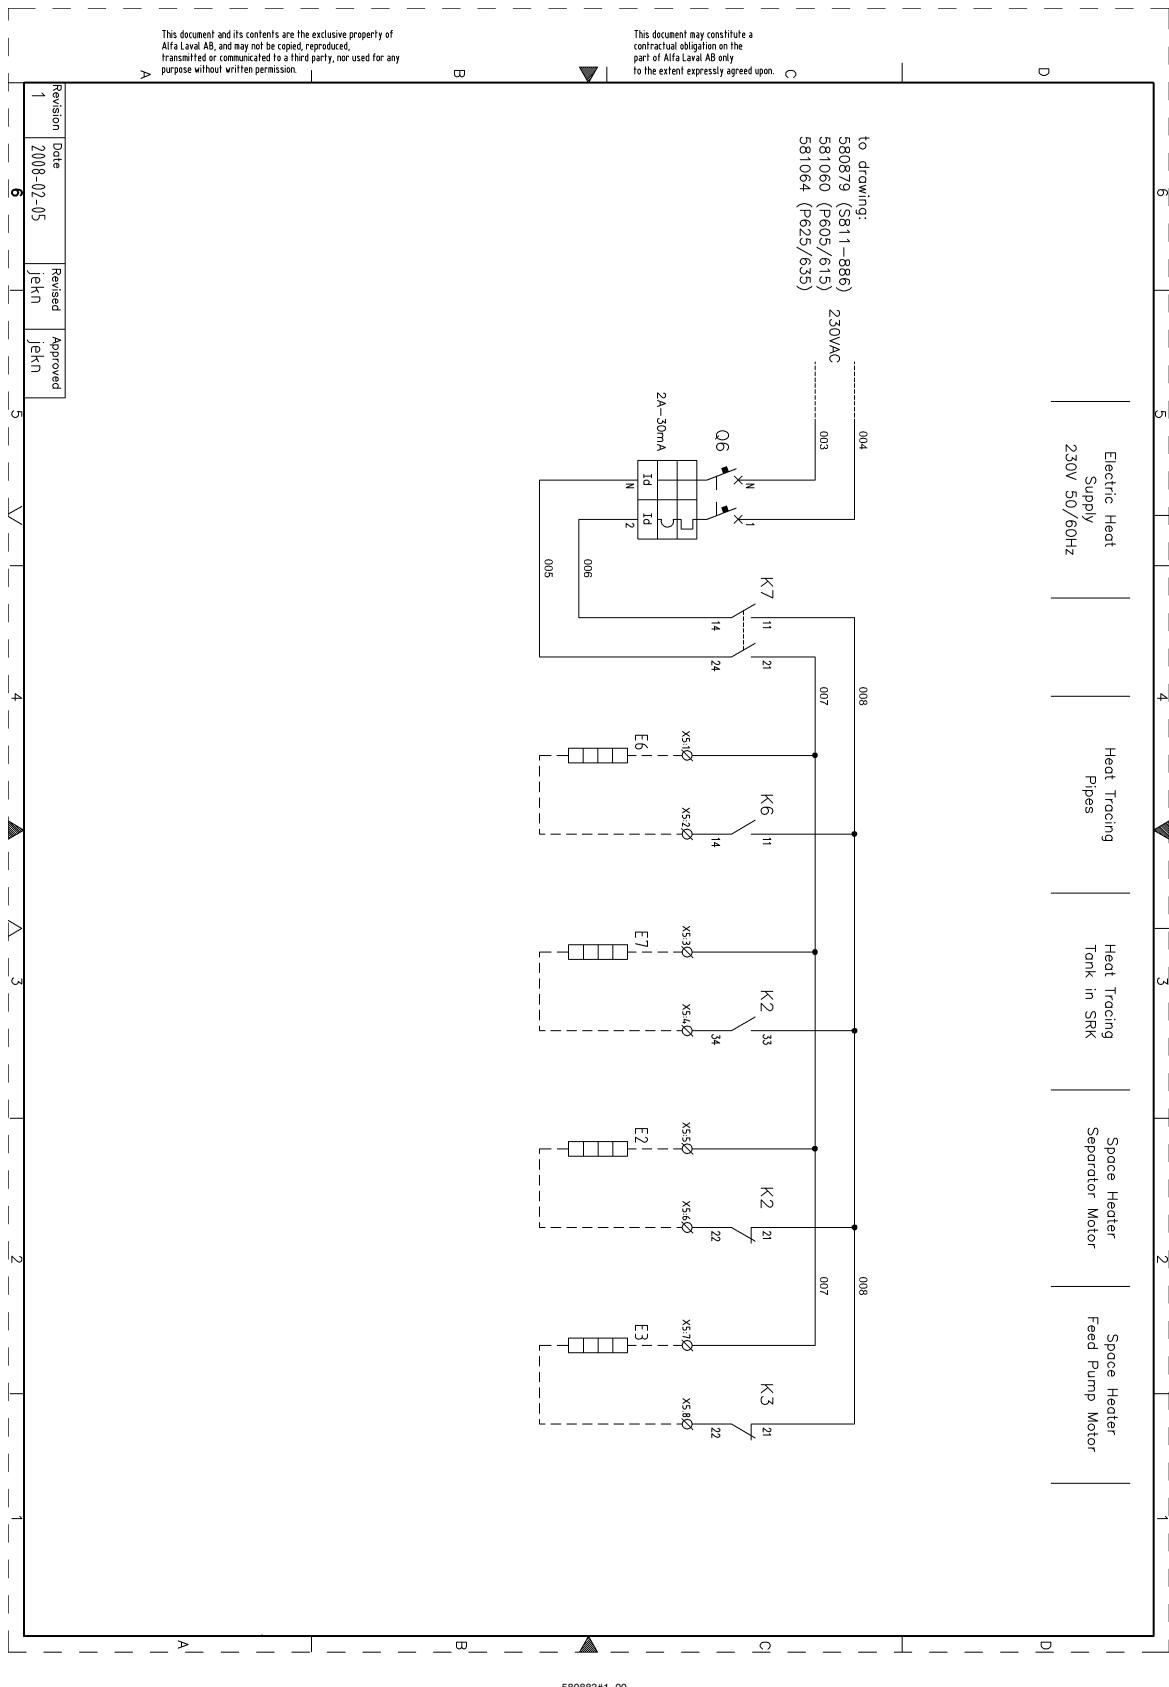

Alfa Laval ref. 580883 Rev. 1

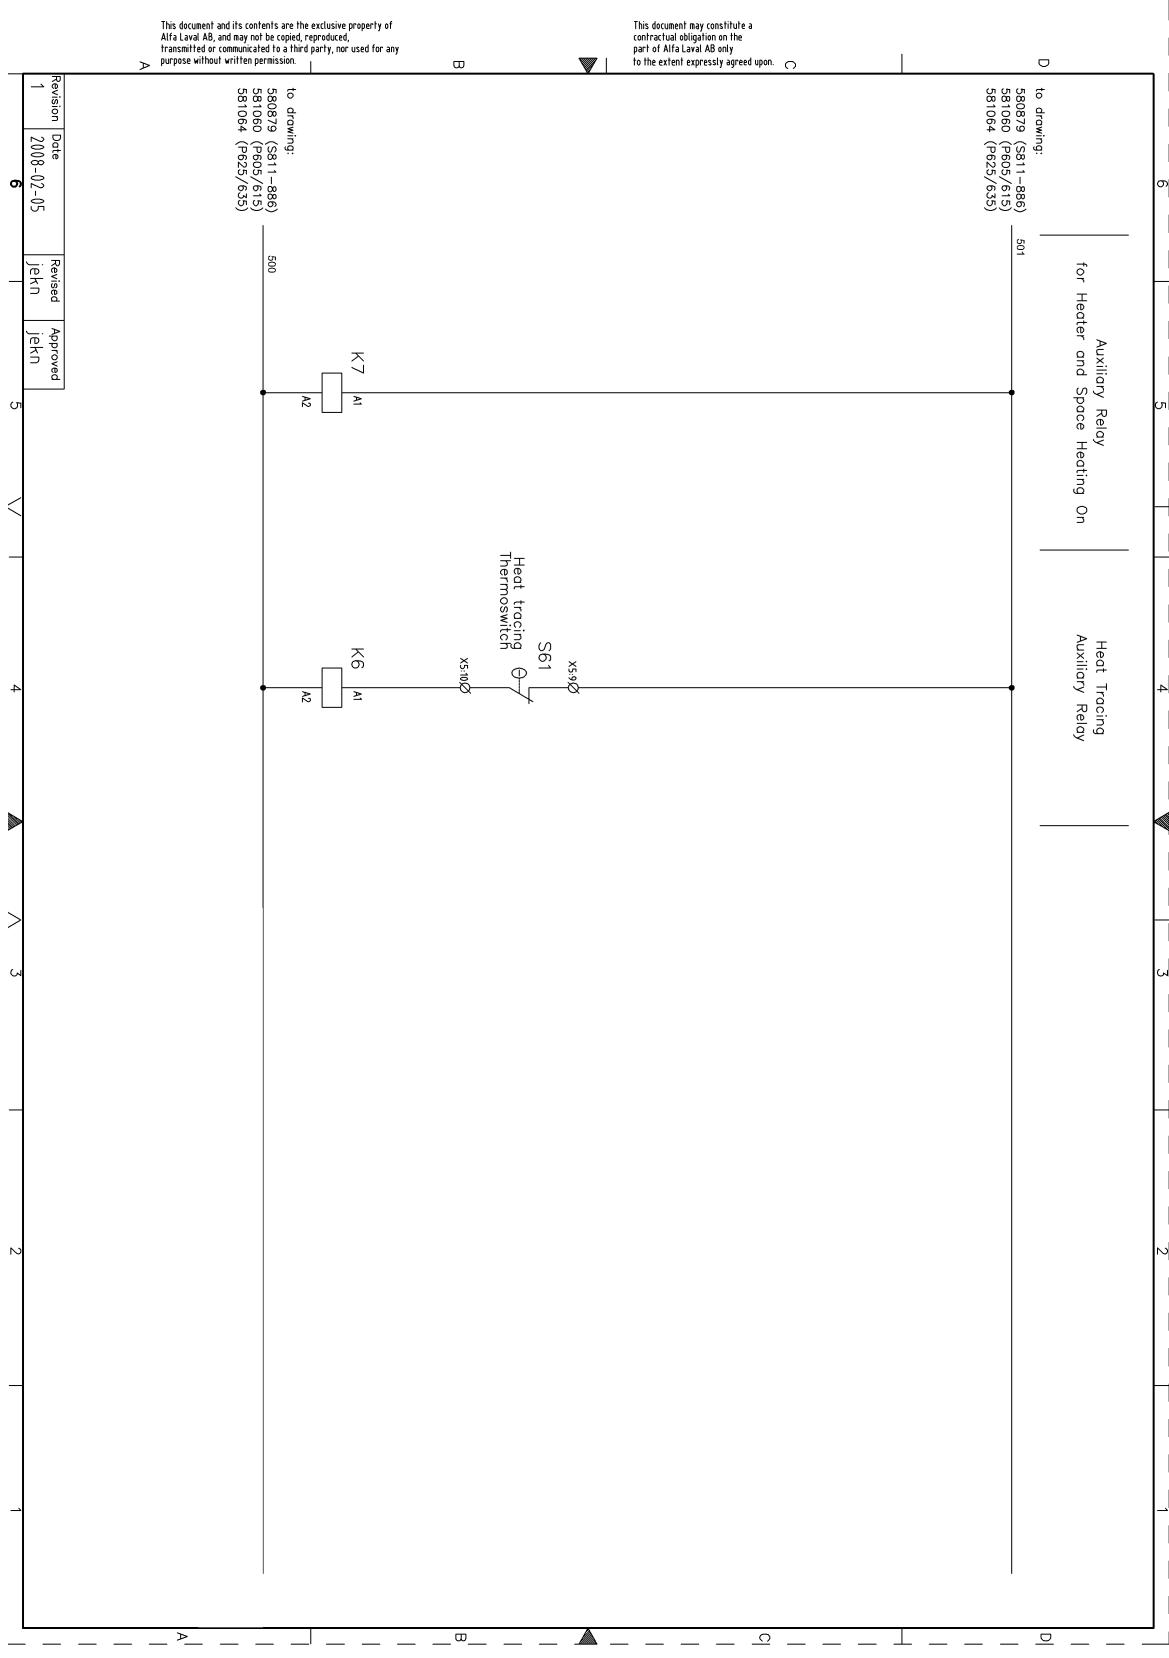


5.2.15 Emergency Shutdown Circuit Diagram

Alfa Laval ref. 580897 Rev. 1

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

Revision	Date	Revised	Approved
1	2009-12-18	MBM	MSN

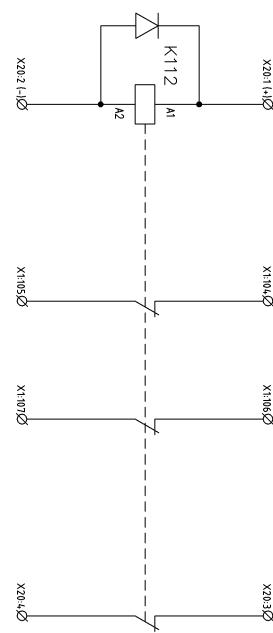


Remote ESD 24VDC
(See Circuit diagram
(internal connections))

ESD Feedback
to customer

6 *Electrical Drawings P 625/626*

6.1 Electrical System Layout P 625/626

Alfa Laval ref. 580908 Rev. 5

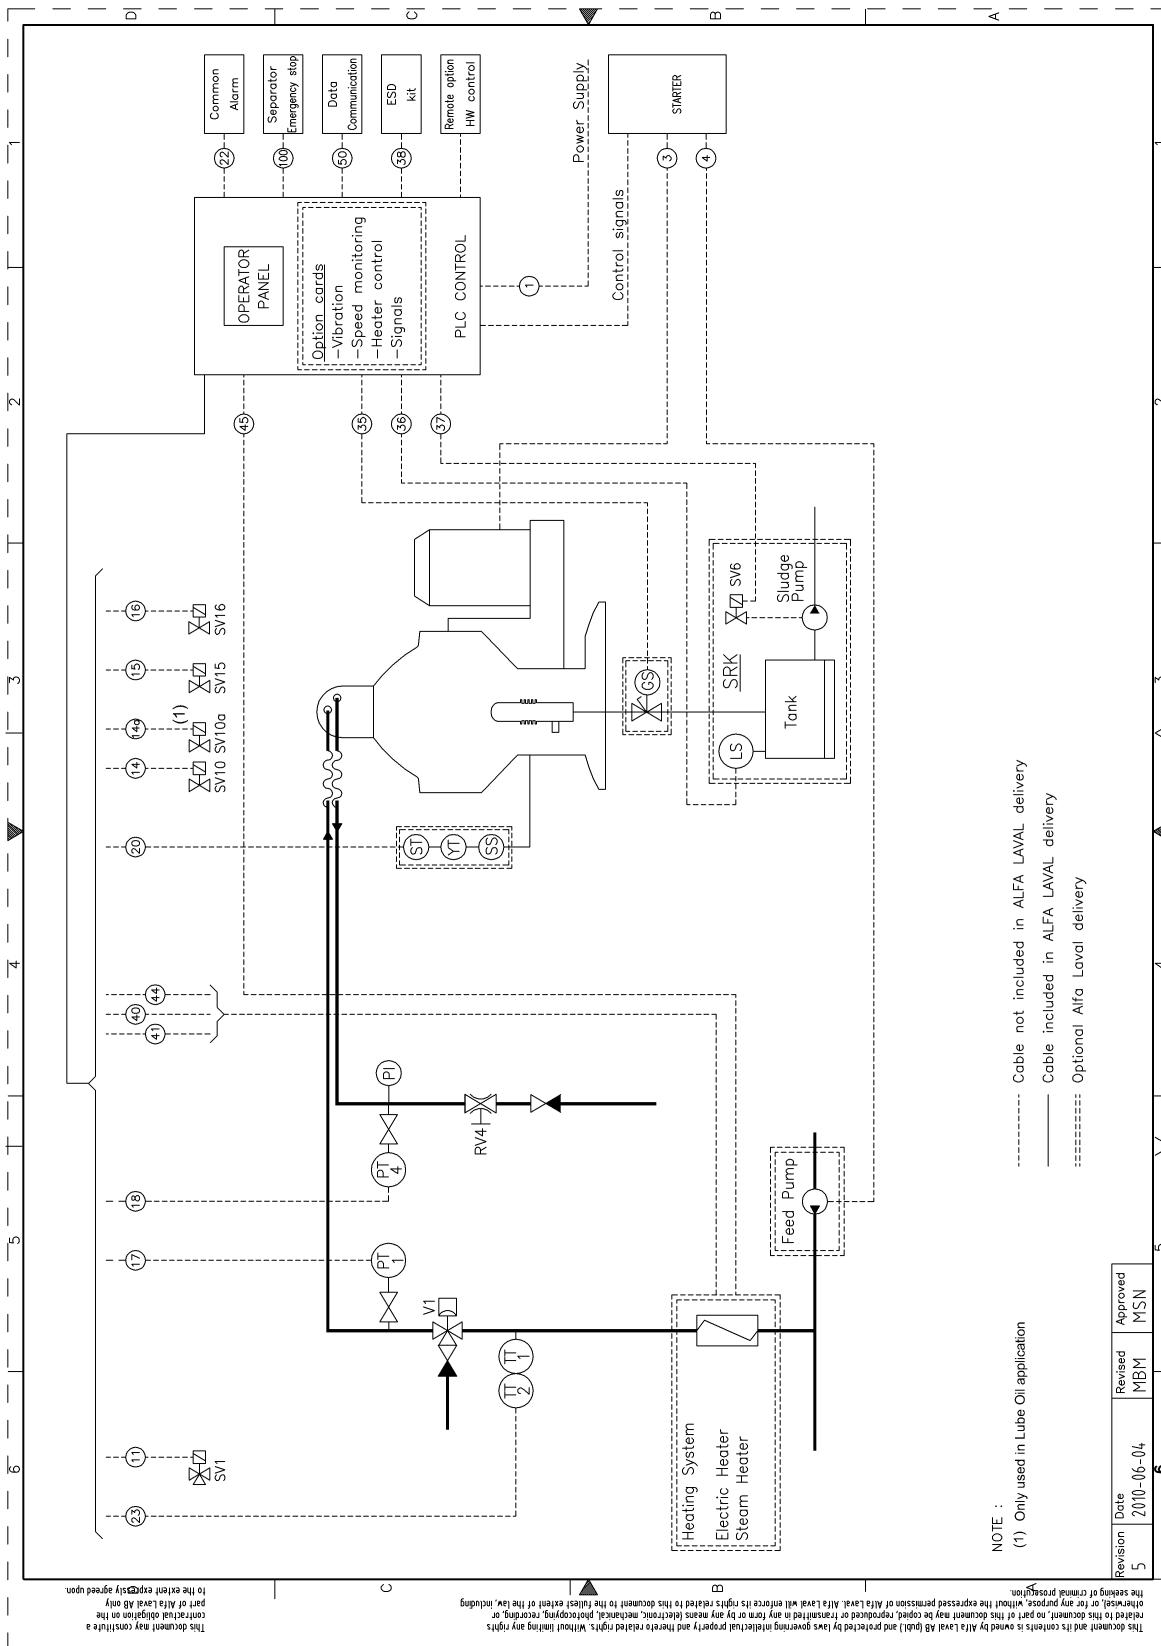

6.2 Control and Starter Electrical Diagrams

6.2.1 Starter cable list

Alfa Laval ref. 580881 Rev. 8

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Basic design (currents according to order)						
1	MPRXCX	3x4	Mains supply		Starter	1) Fuse 20 A
1	MPRXCX	3x10	Mains supply		Starter	1) Fuse 35A
1	MPRXCX	3x16	Mains supply		Starter	1) Fuse 50 A
1	MPRXCX	3x25	Mains supply		Starter	1) Fuse 63 A
1	MPRXCX	3x35	Mains supply		Starter	1) Fuse 80 A
2	MPRXCX	2x2m5	Supply		Starter	1) Fuse 16 A
3	MPRXCX	3x1,5	Starter	Marked 3A	Separator motor	4,0 – 6,3 A
3	MPRXCX	3x2,5	Starter	Marked 3B	Separator motor	6,3 – 16 A
3	MPRXCX	3x4	Starter	Marked 3C	Separator motor	16 – 20 A
3	MPRXCX	3x6	Starter	Marked 3D	Separator motor	20 – 25 A
3	MPRXCX	3x10	Starter	Marked 3E	Separator motor	25 – 32 A
3	MPRXCX	3x16	Starter	Marked 3F	Separator motor	32 – 45 A
3	MPRXCX	3x25	Starter	Marked 3G	Separator motor	45 – 63 A
Optional or customer's own feed pump (as ordered)						
4	MPRXCX	3x25	Starter		Feed pump	²⁾
Optional sludge handling (as ordered)						
35	RFE-HF	1x4x0,7 5	Starter		GS, Valve switch	
36	RFE-HF	1x2x0,7 5	Starter		LS, Sludge level	
37	RFE-HF	1x2x0,7 5	Starter		SV6, Solenoid valve	For pneumatic sludge pump
73	RFE-HF	2x0,75	Starter		Heatpac on tank	Included in heater element
Optional space heating (as ordered)						
71	MPRXCX	2x1,5	Starter		Separator pump	
73	MPRXCX	2x1,5	Starter		Feed pump	²⁾
Optional heat tracing (as ordered)						
74	MPRXCX	2x1,5	Starter		Thermostat	
75		3x1,5	Starter		Heating cable	

1) Cable not included in Alfa Laval delivery.

2) Cable only included in the Alfa Laval delivery when Feed Pump is delivered mounted on Module

No.	Type		Connection point A	Instruction	Connection point B	Remarks
Signal cables (currents according to order)						
11	RFE-HF	1x2x0,7 5	EPC 60		SV1	
12	RFE-HF	1x2x0,7 5	EPC 60		SV4	
13	RFE-HF	1x2x0,7 5	EPC 60		SV5	S-type only
14	RFE-HF	1x2x0,7 5	EPC 60		SV10	
14 A	RFE-HF	1x2x0,7 5	EPC 60		SV10A	Lube oil only
15	RFE-HF	1x2x0,7 5	EPC 60		SV15	
16	RFE-HF	1x2x0,7 5	EPC 60		SV16	
17	RFE-HF	1x2x0,7 5	EPC 60		PT1	¹⁾
18	RFE-HF	1x2x0,7 5	EPC 60		PT4	
19	RFE-HF	1x4x0,7 5	EPC 60		MT	S-type only
20	RFE-HF	4x2x0,7 5	EPC 60		ST, (YT, SS)	Not for P605, P615, S805, S815
21	RFE-HF	1x2x0,7 5	EPC 60		PT5	S-type only
22	RFE-HF	1x2x0,7 5	EPC 60		Common alarm	²⁾
23	RFE-HF	4x2x0,7 5	EPC 60		TT1/TT2	³⁾
Options (as ordered)						
25	RFE-HF	1x4x0,7 5	EPC 60		SS	²⁾ Only for P605, P615, S805, S815
30	RFE-HF	1x4x0,7 5	EPC 60		YS	²⁾ Only for P605, P615, S805, S815
38	MPRXCX	4x1,5	EPC 60		Syst. Emergency	^{2) 4)}
100	MPRXCX	4x1,5	EPC 60		Sep. Emergency stop	^{2) 4)}
Optional Electric Heater (as ordered)						
40	RFE-HF	4x2x0,7 5	Starter		Power unit	
45	RFE-HF	1x2x0,7 5	Starter		Power unit	
Optional heat tracing (as ordered)						
41	RFE-HF	1x4x0,7 5	EPC 60		Steam reg. valve	
44	RFE-HF	1x2x0,7 5	EPC 60		Shut-off valve	
50	RJ45 Cat 5e		EPC 60 CPU		Client remote data communication	^{2), 5)}

- 1) Cable not included in Alfa Laval delivery
- 2) Cable only included in the Alfa Laval delivery when PT1 is delivered mounted on Module.
- 3)Cable only included in the Alfa Laval delivery when Electric Heater is delivered mounted on Module.
- 4) This cable cannot be longer than 25 m to avoid voltage drop.
- 5) Crossconnection cable only included in Alfa Laval delivery when multiple modules is delivered.

Other equivalent and approved cables may be used.

Cable areas are calculated with correction factor 0.7.

Cables used are Shipboard Cables, designed according to IEC 60092-3.

Flame retardant according to IEC 60332-1-2 and IEC 60332-3-22.

Halogen-free according to IEC 60754 series.


Smoke emission according to IEC 61034 series.

All power cables should be Signal Shielded Cables with the shield properly connected to earth as shown in the electrical drawings.

For armoured power cables, the armour must be connected to earth, as shown in the electrical drawings, and must give sufficient EMI protection. Copper wire armouring is normally used.

6.2.2 Separator Interconnection Diagram

Alfa Laval ref. 581069 Rev. 6

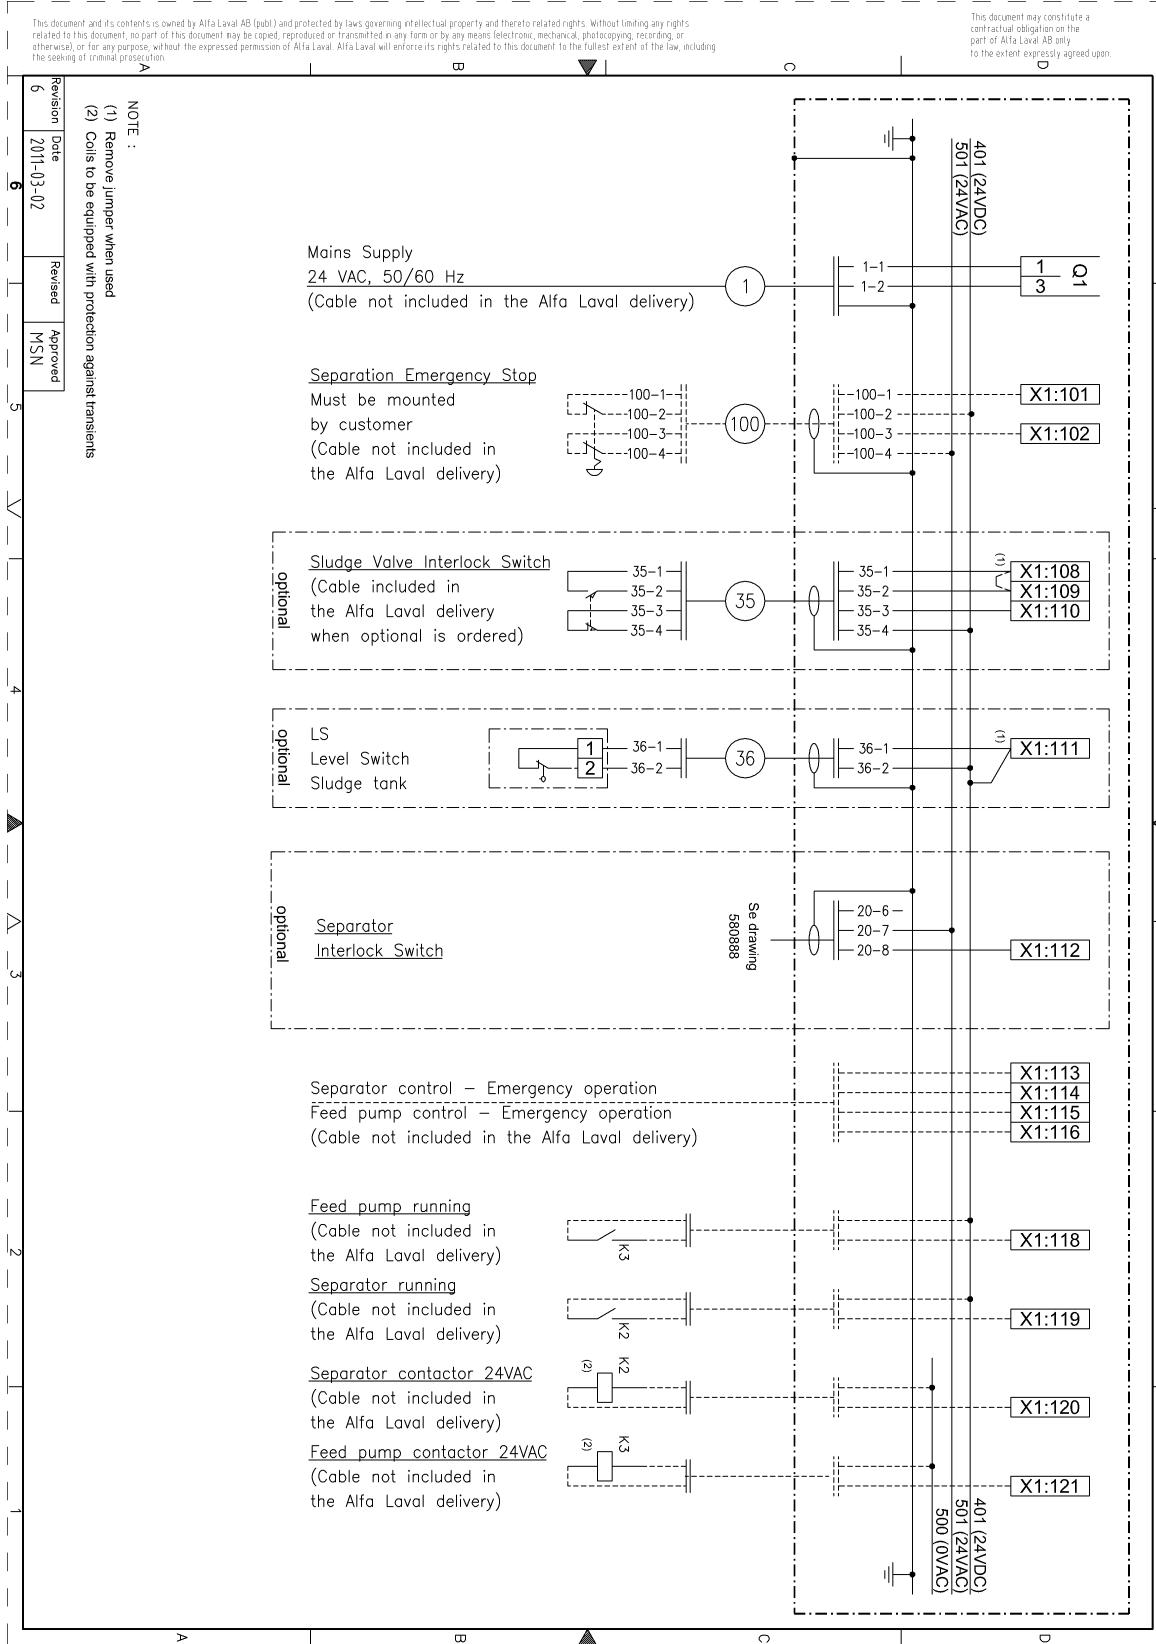


581069#6_00

Alfa Laval ref. 581069 Rev. 6

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

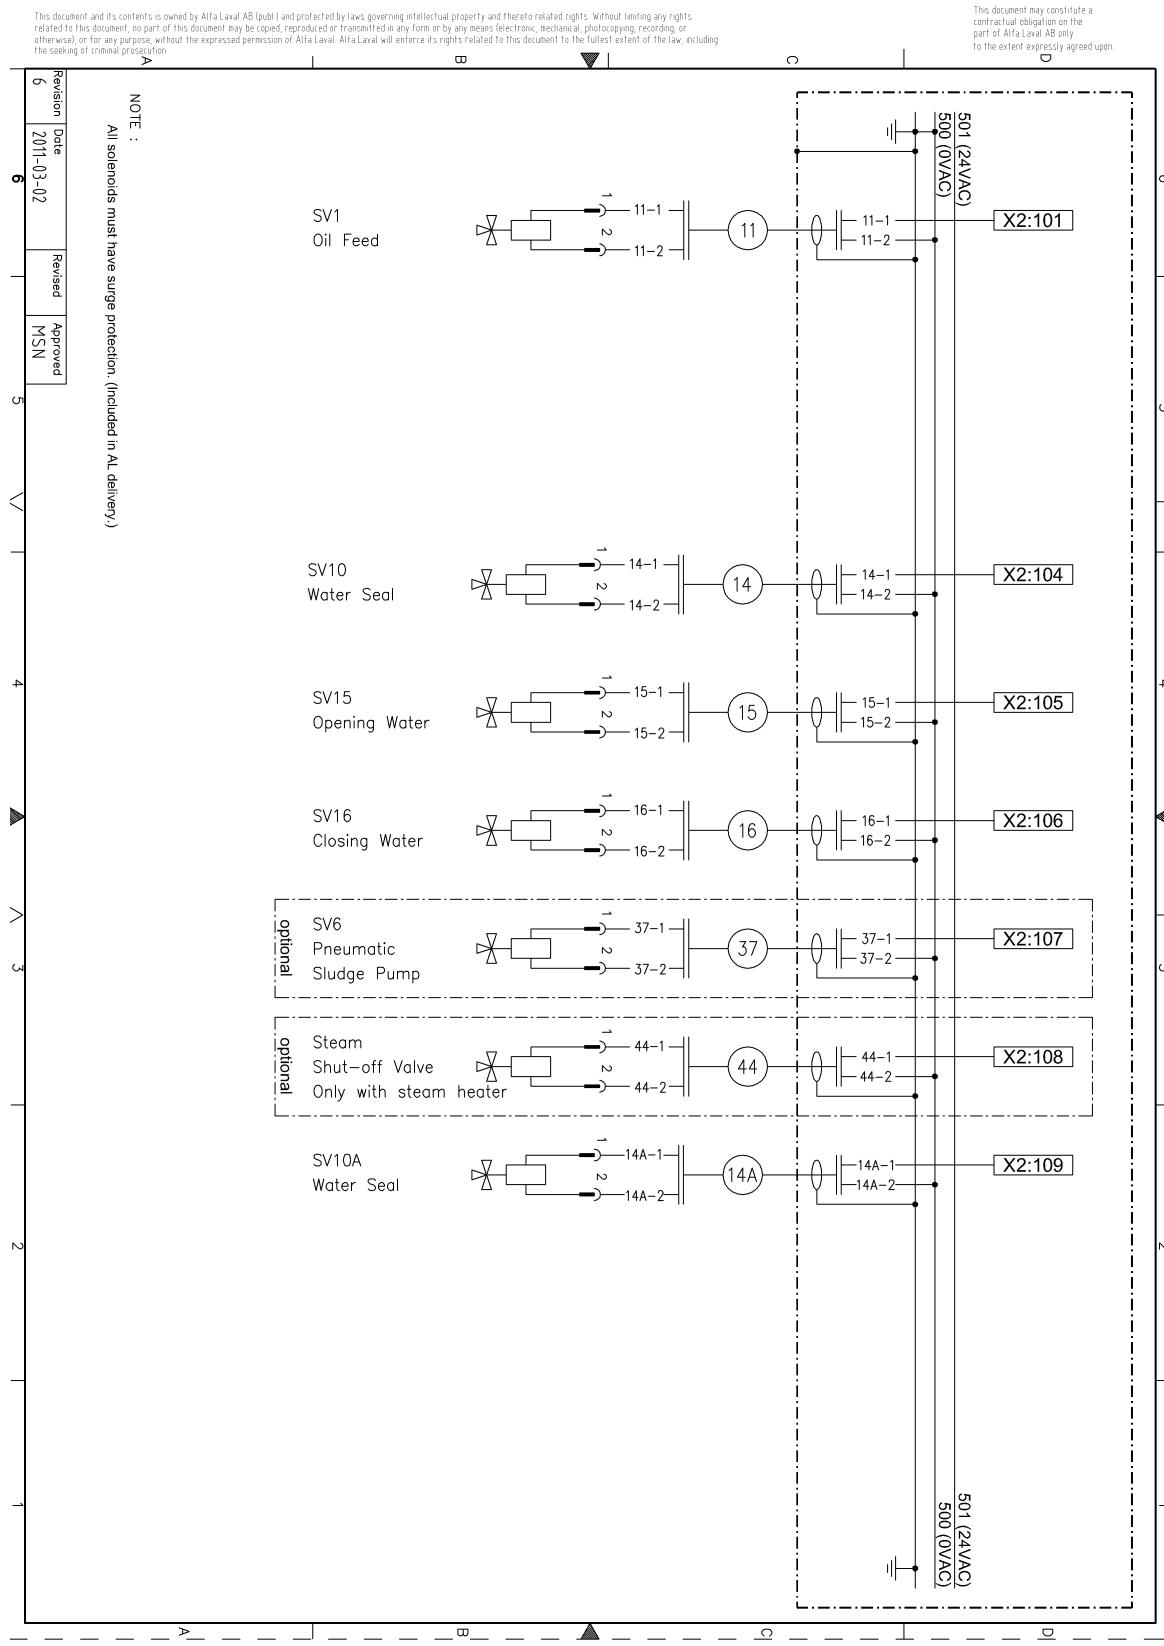

Alfa Laval ref. 581069 Rev. 6

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

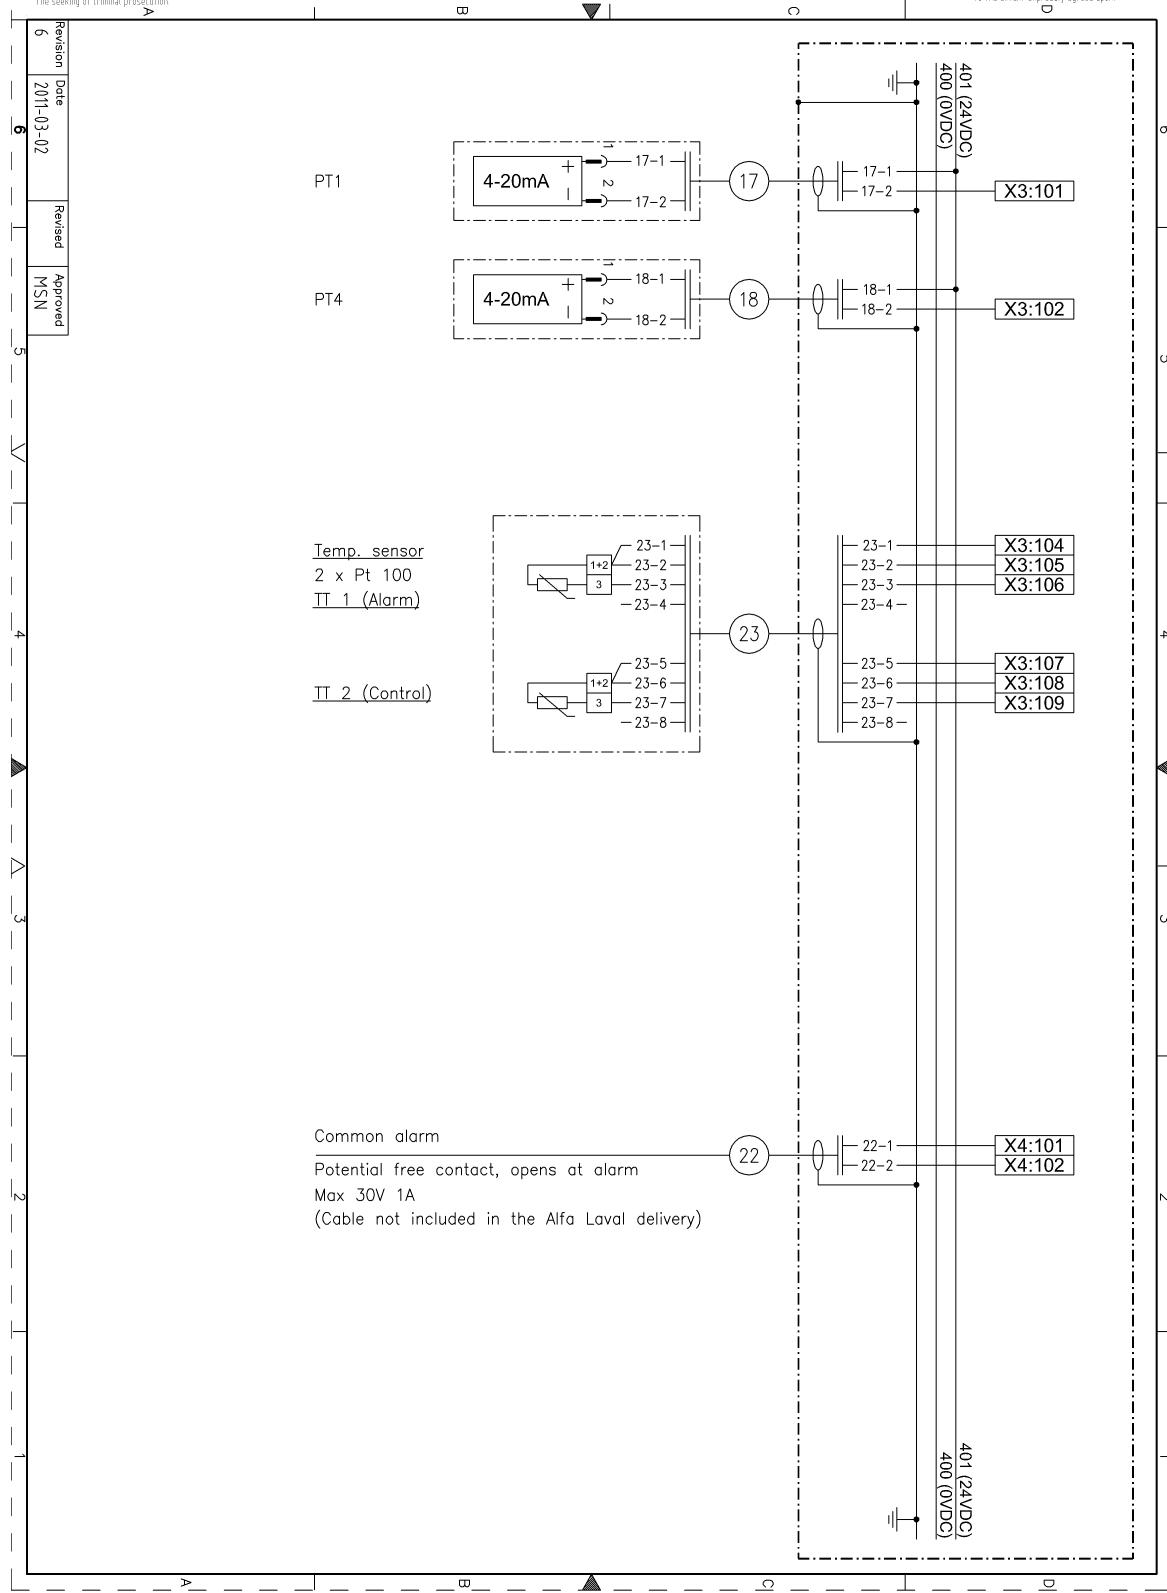

581069#6_02


6.2.3 Steam Regulating Valve (optional) Interconnection Diagram

Alfa Laval ref. 580886 Rev. 1

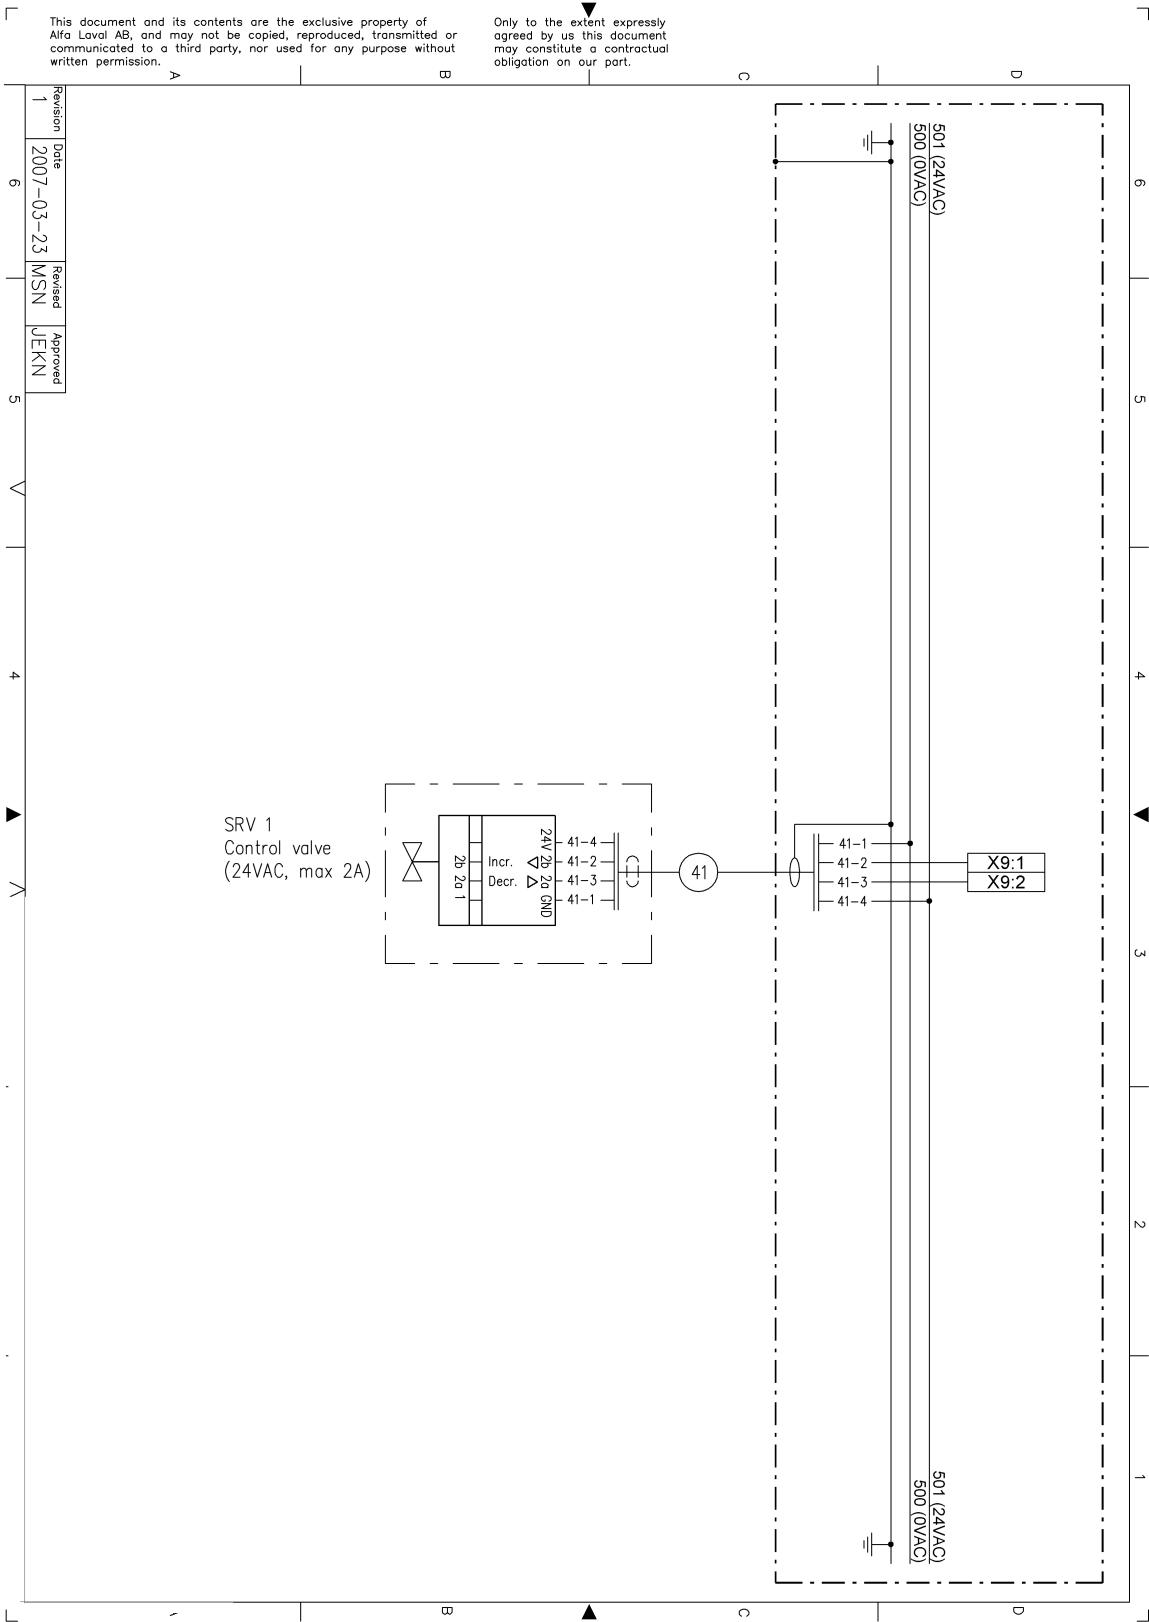

6.2.4 Speed Transmitter (optional) Interconnection Diagram


Alfa Laval ref. 580888 Rev. 4

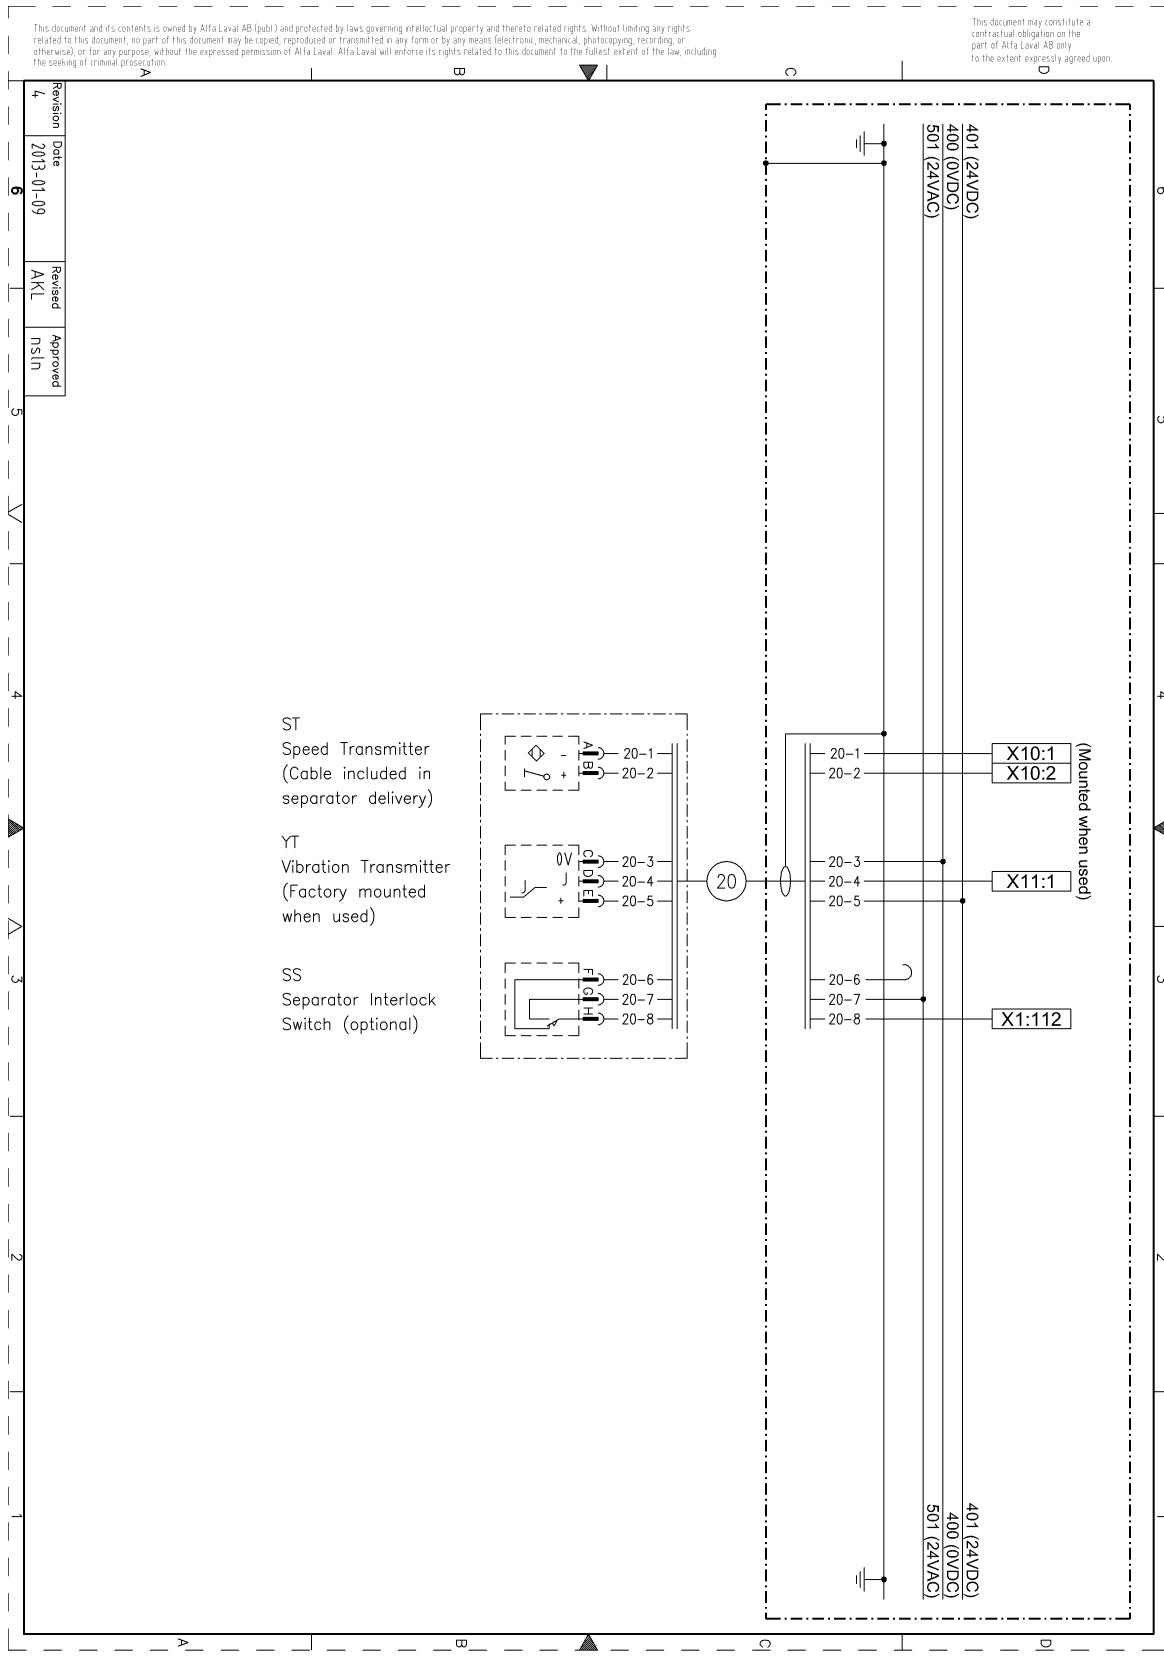

580888#4_00


6.2.5 Vibration Transmitter (optional) Interconnection Diagram

Alfa Laval ref. 580890 Rev. 1

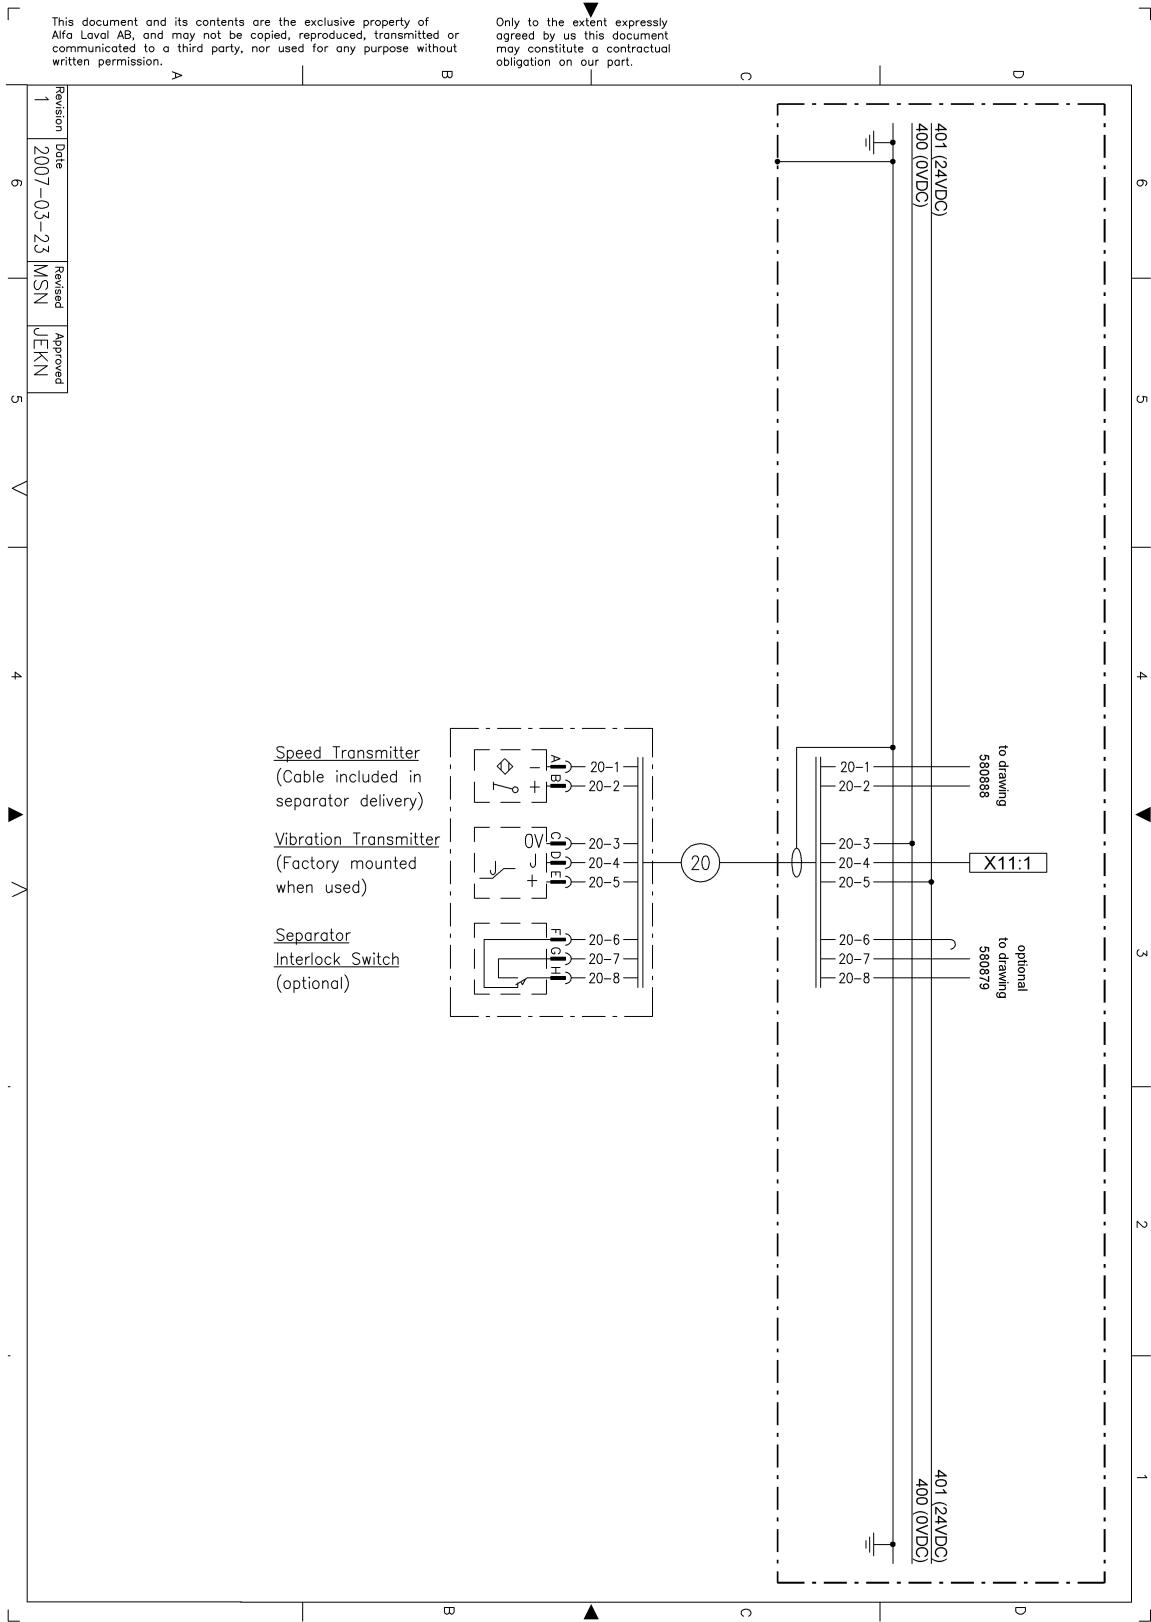


6.2.6 Electric Heater (optional) Interconnection Diagram

Alfa Laval ref. 580896 Rev. 1

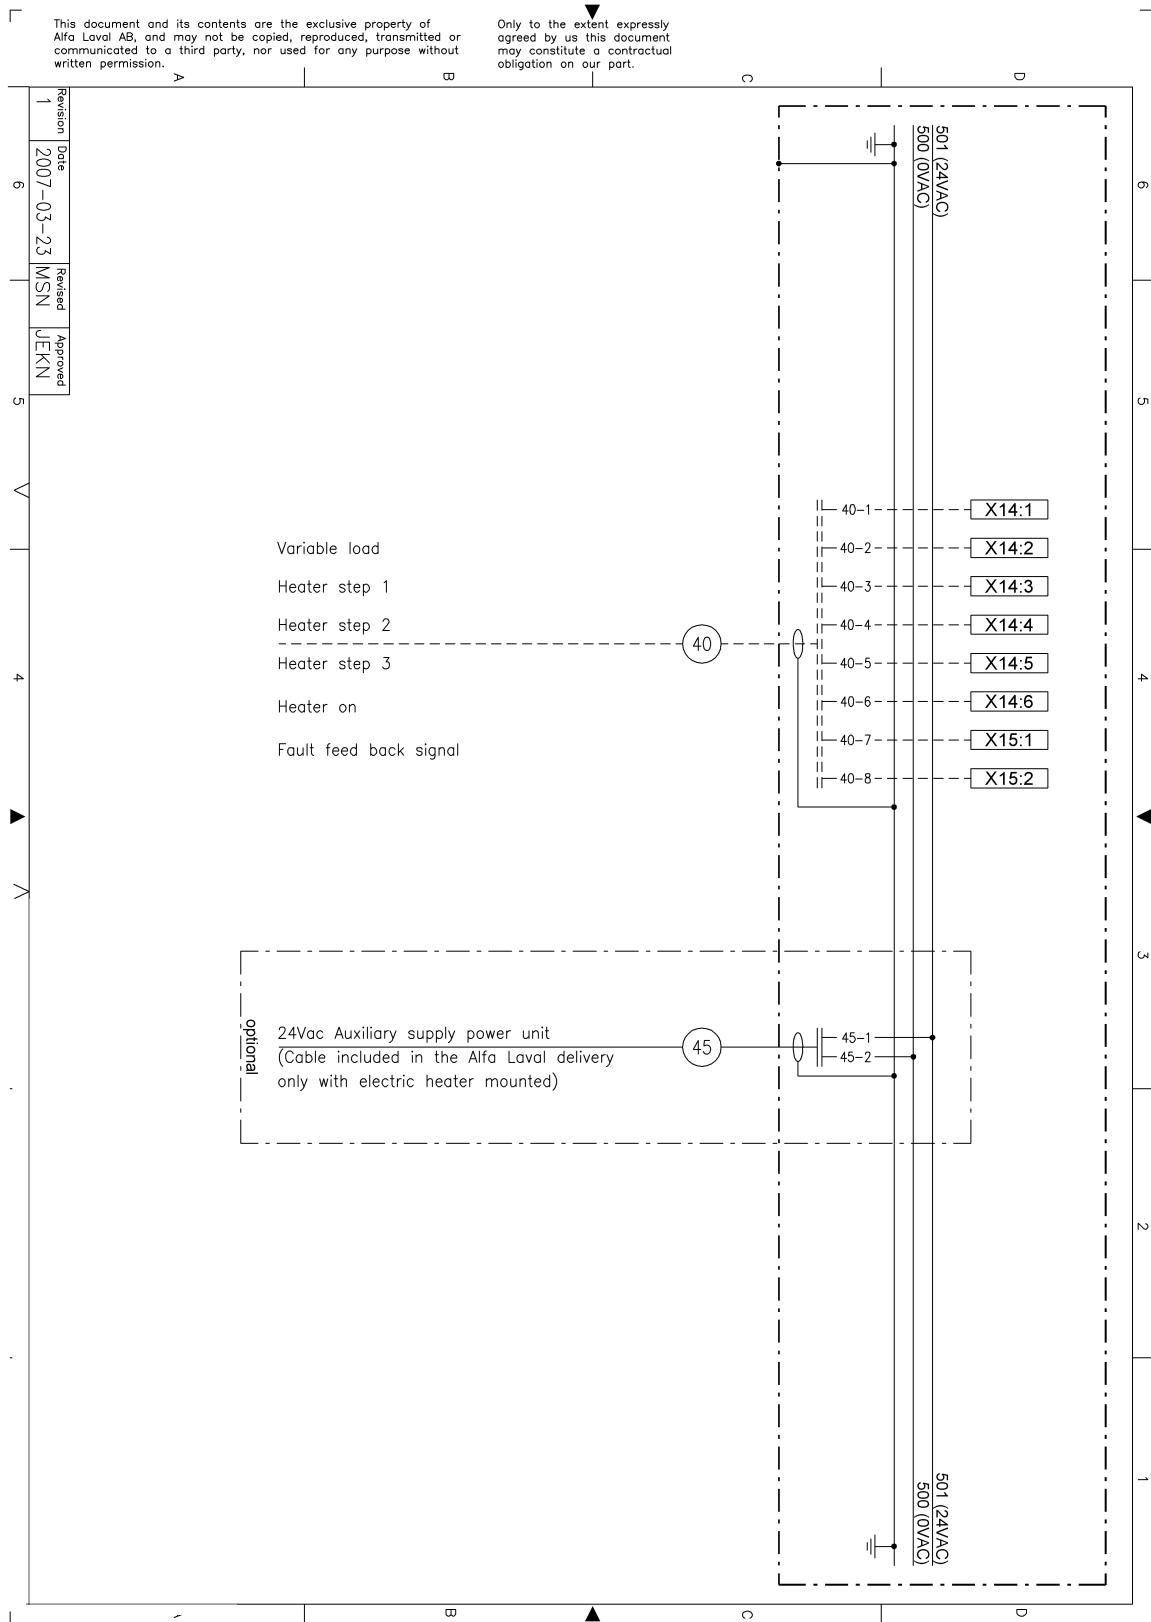

6.2.7 I/O (optional) Interconnection Diagram

Alfa Laval ref. 580894 Rev. 4

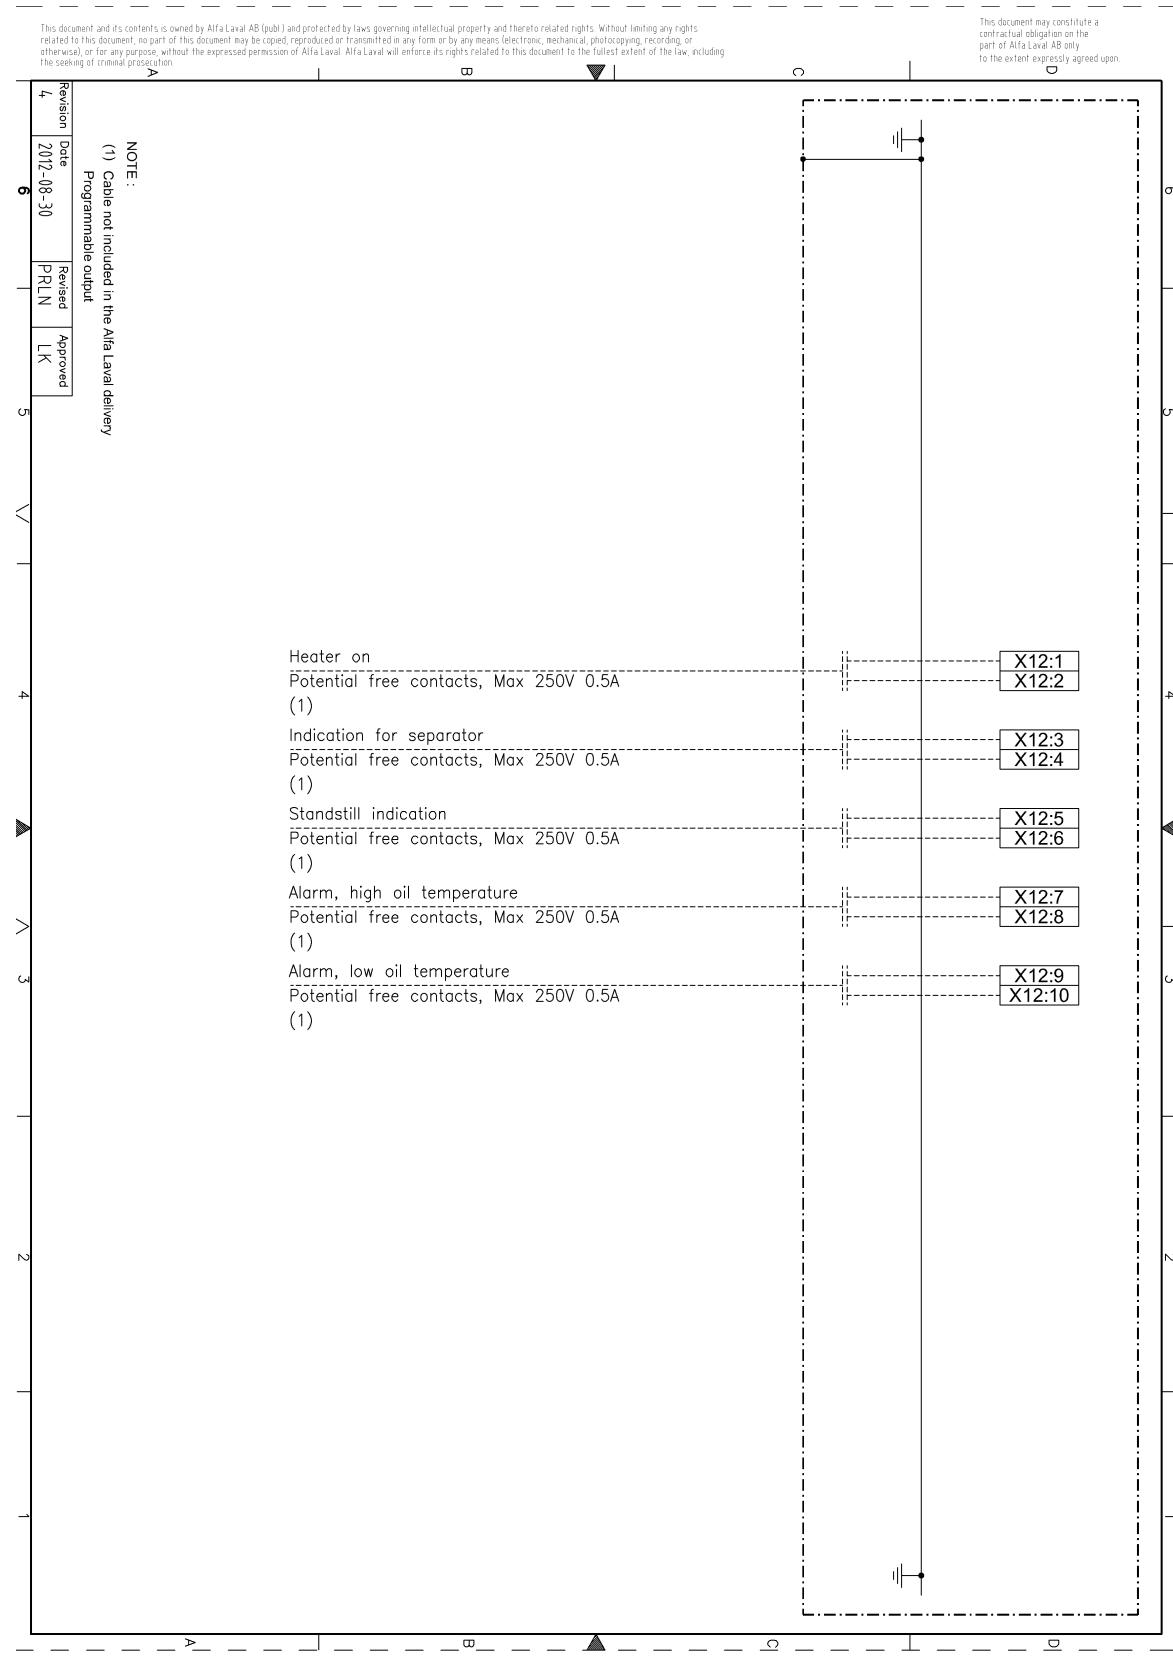


580894#4_00

Alfa Laval ref. 580894 Rev. 4

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

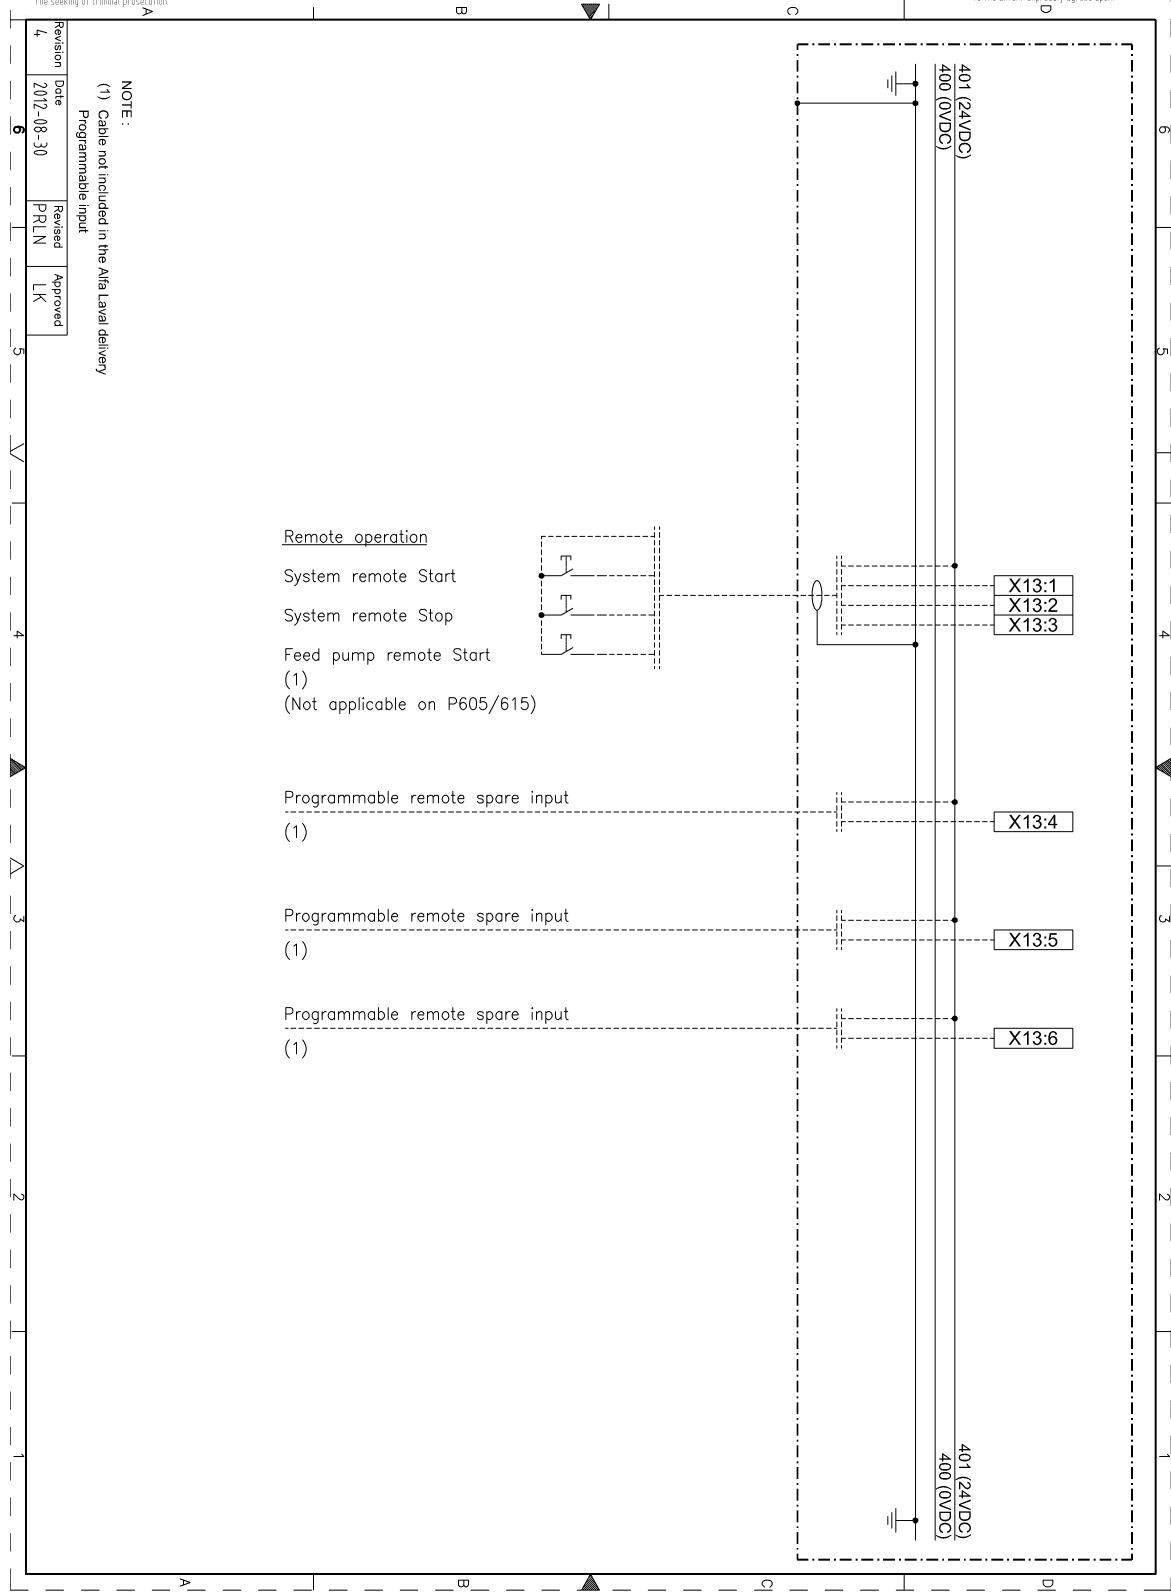

580894#4_01


6.2.8 Heat Tracing (optional) Interconnection Diagram

Alfa Laval ref. 580884 Rev. 0

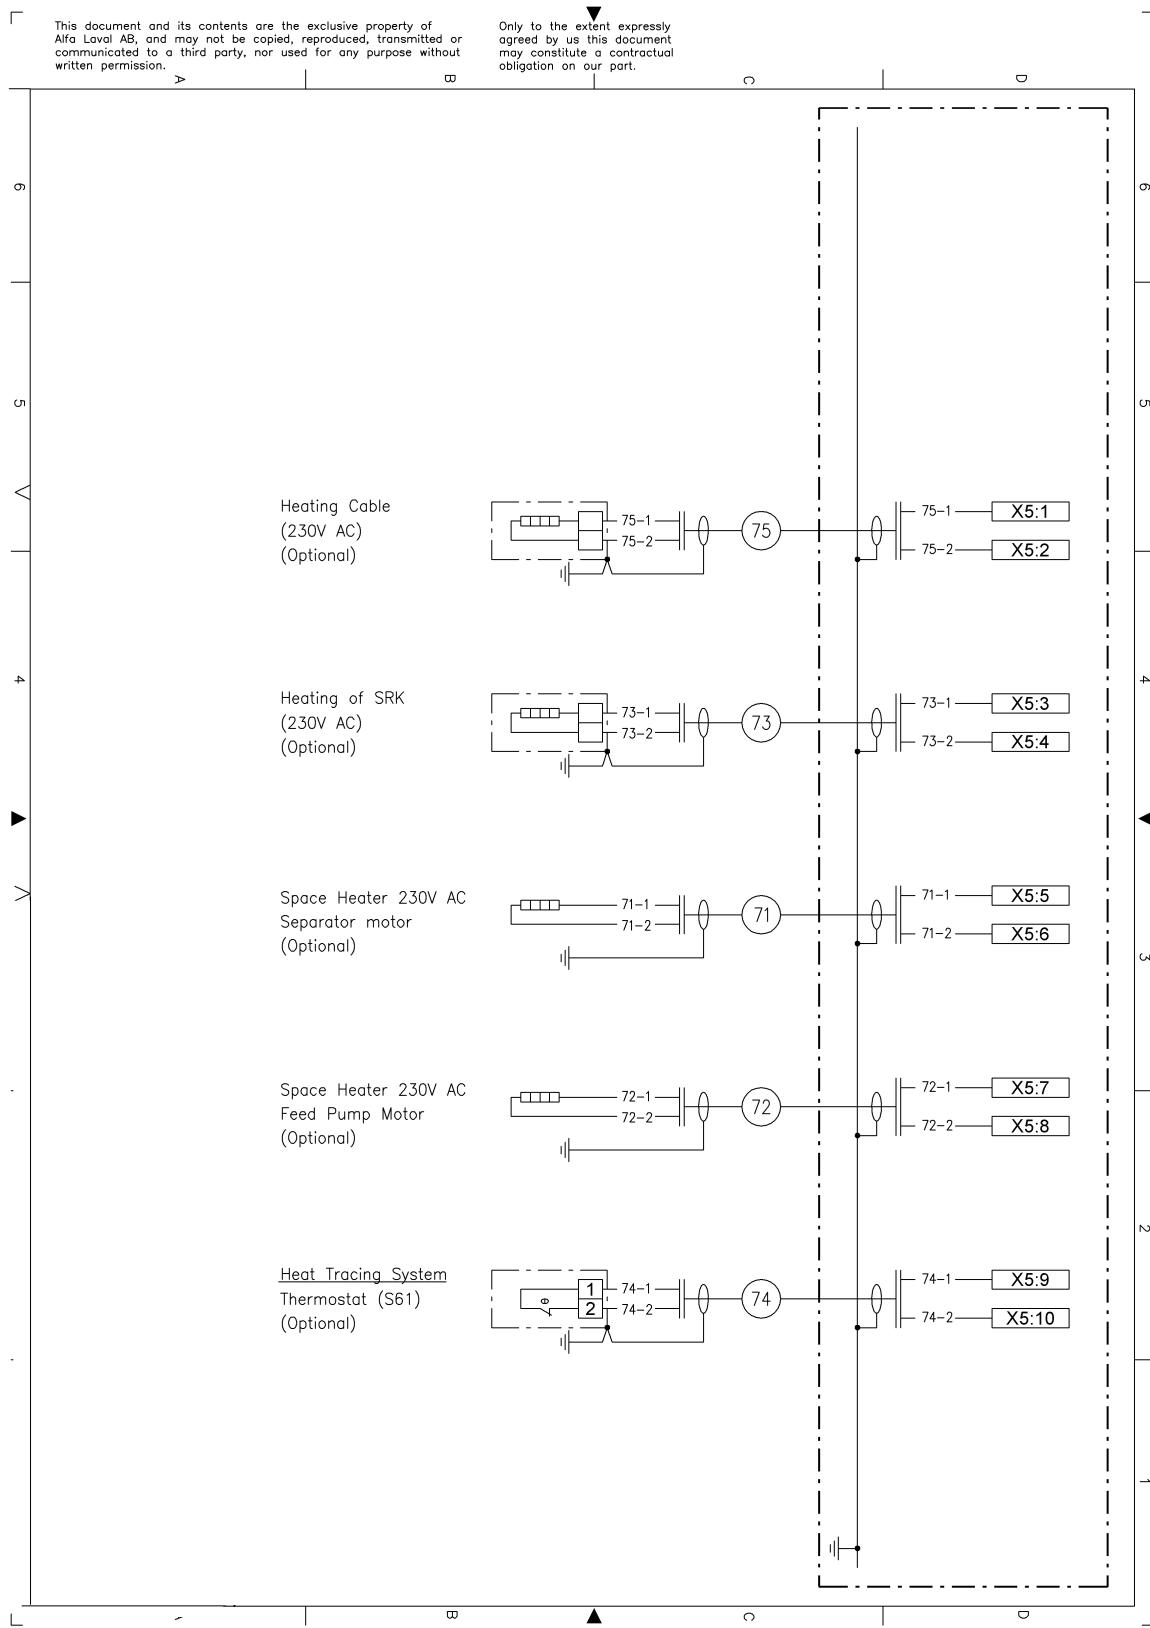

6.2.9 Emergency Shutdown Interconnection Diagram

Alfa Laval ref. 580898 Rev. 0

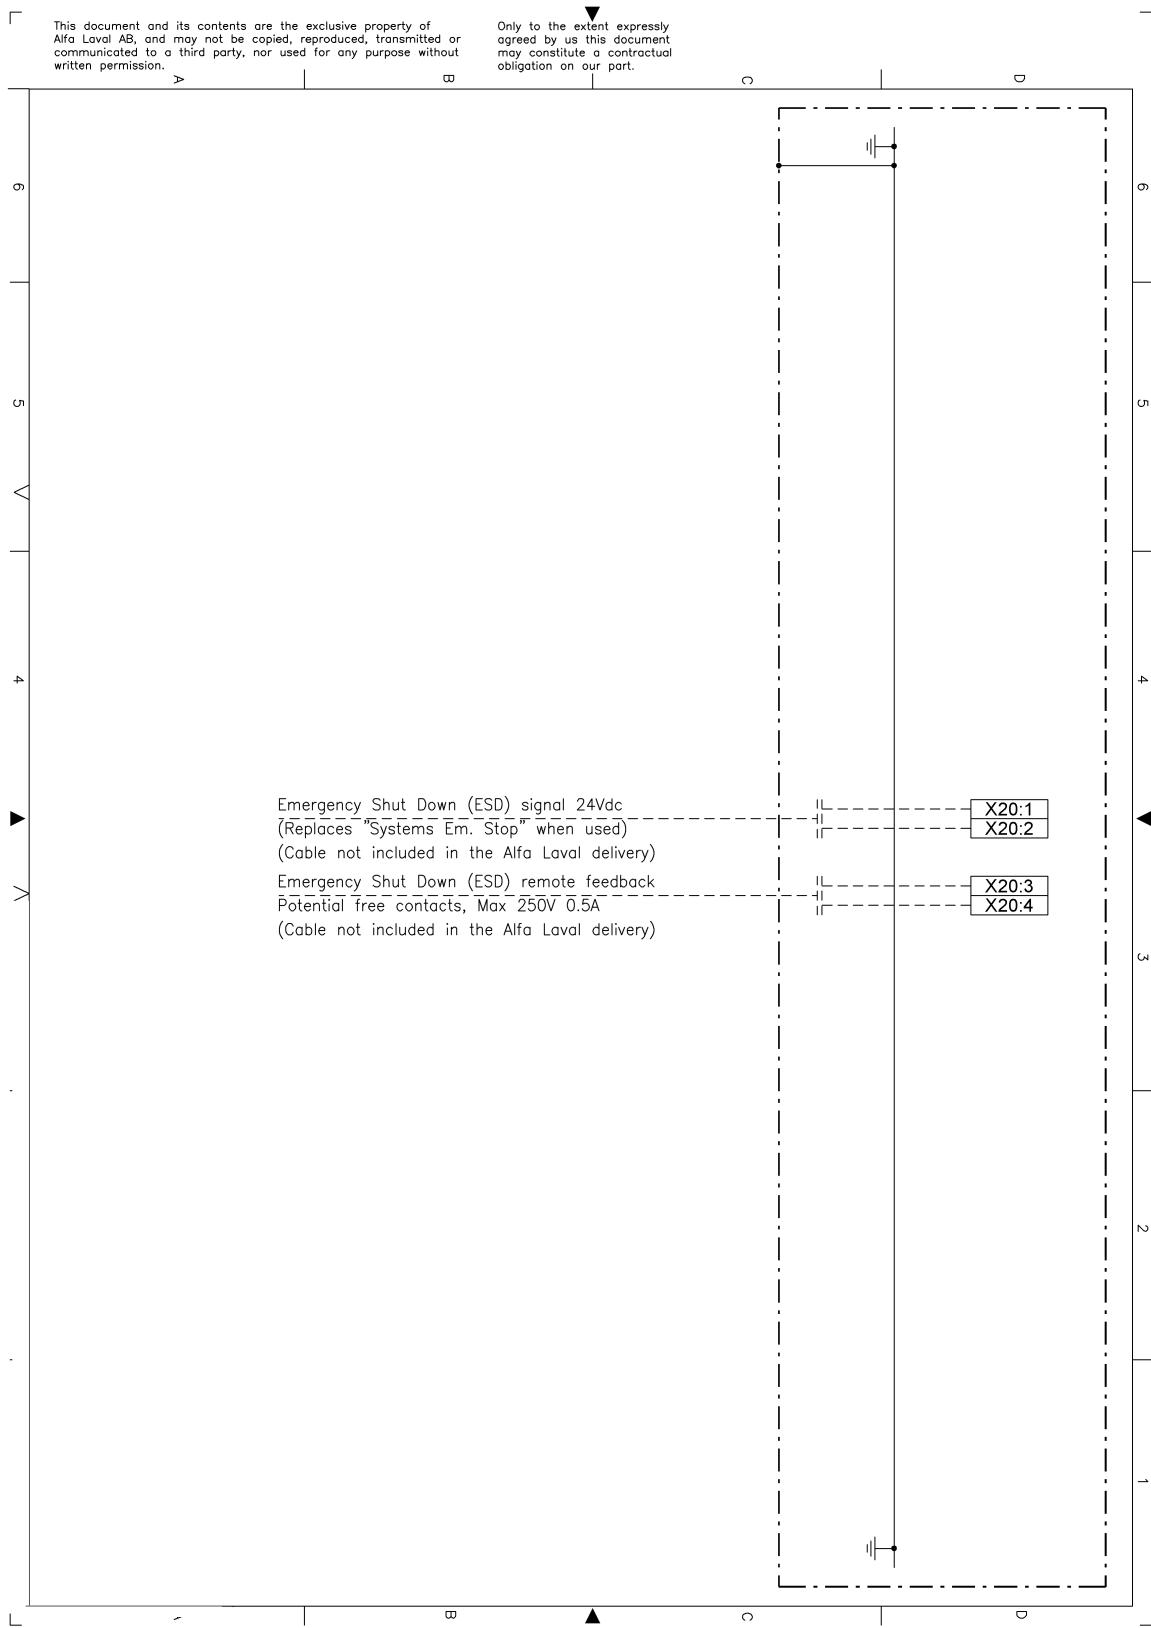


6.2.10 Circuit Diagram

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to the document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

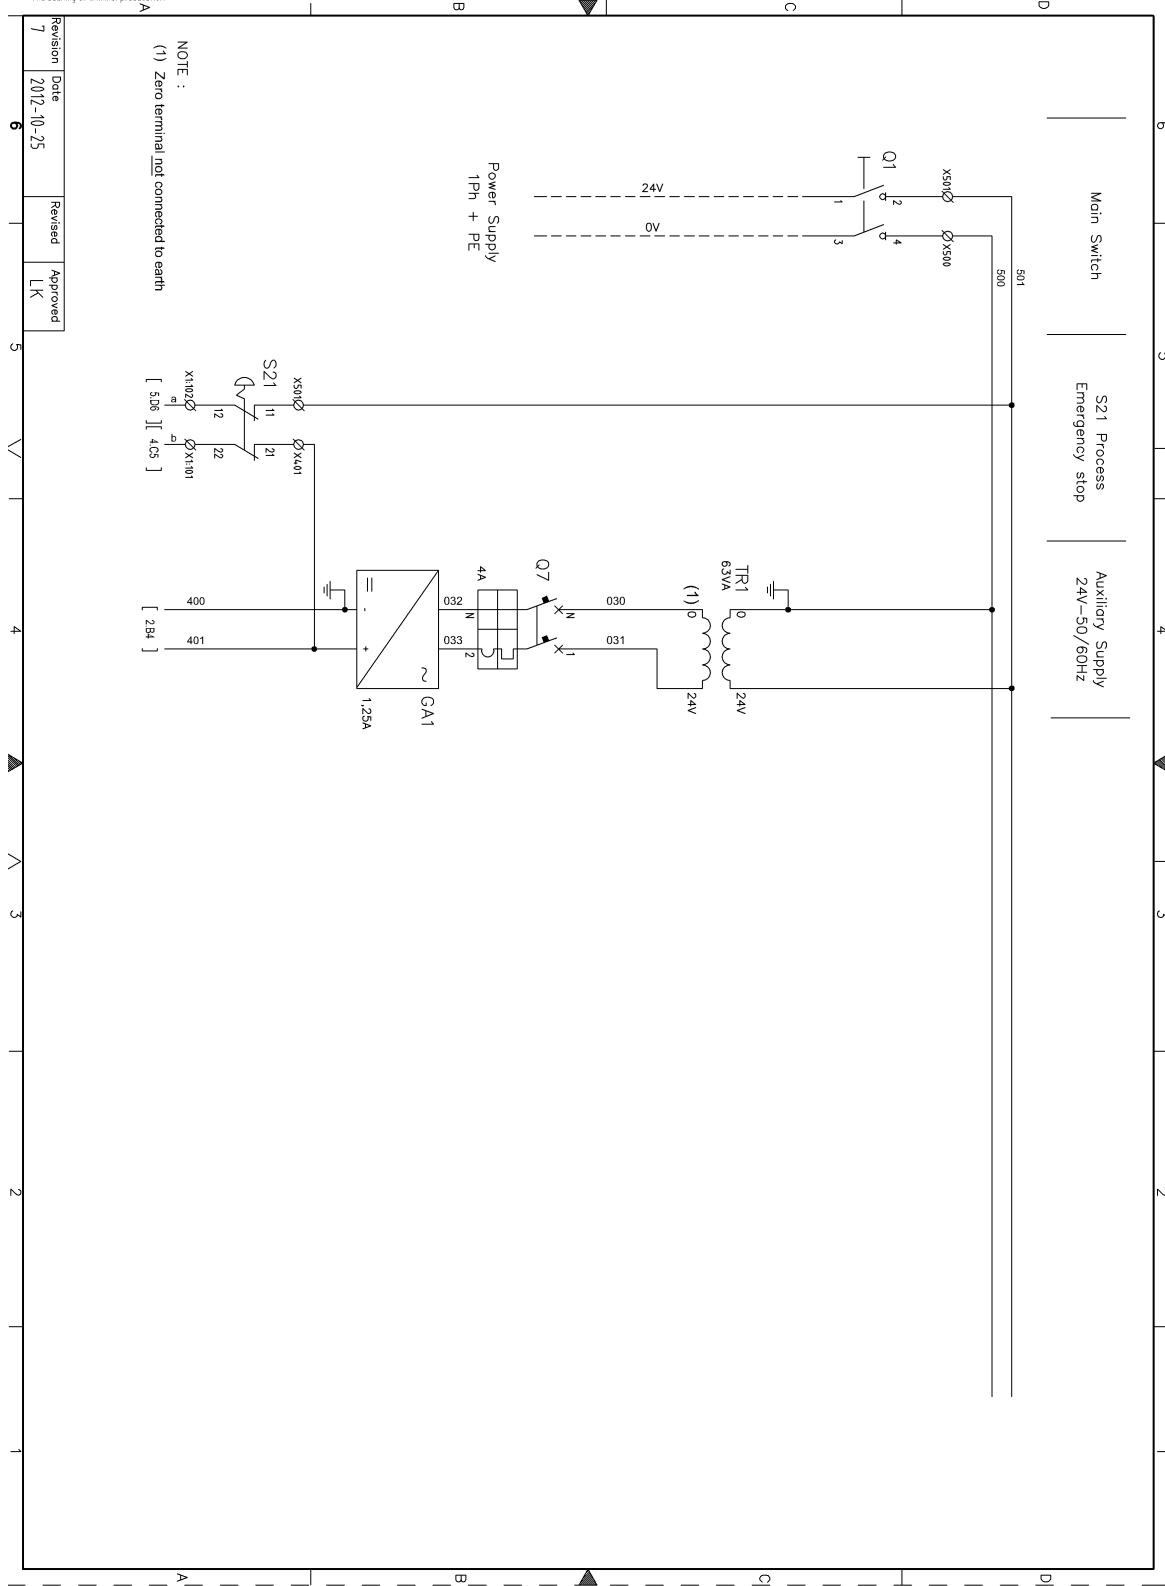


Revision	Date	Revised	Approved
7	2012-10-25		LK

NOTE :
(1) Zero terminal not connected to earth

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reprinted or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

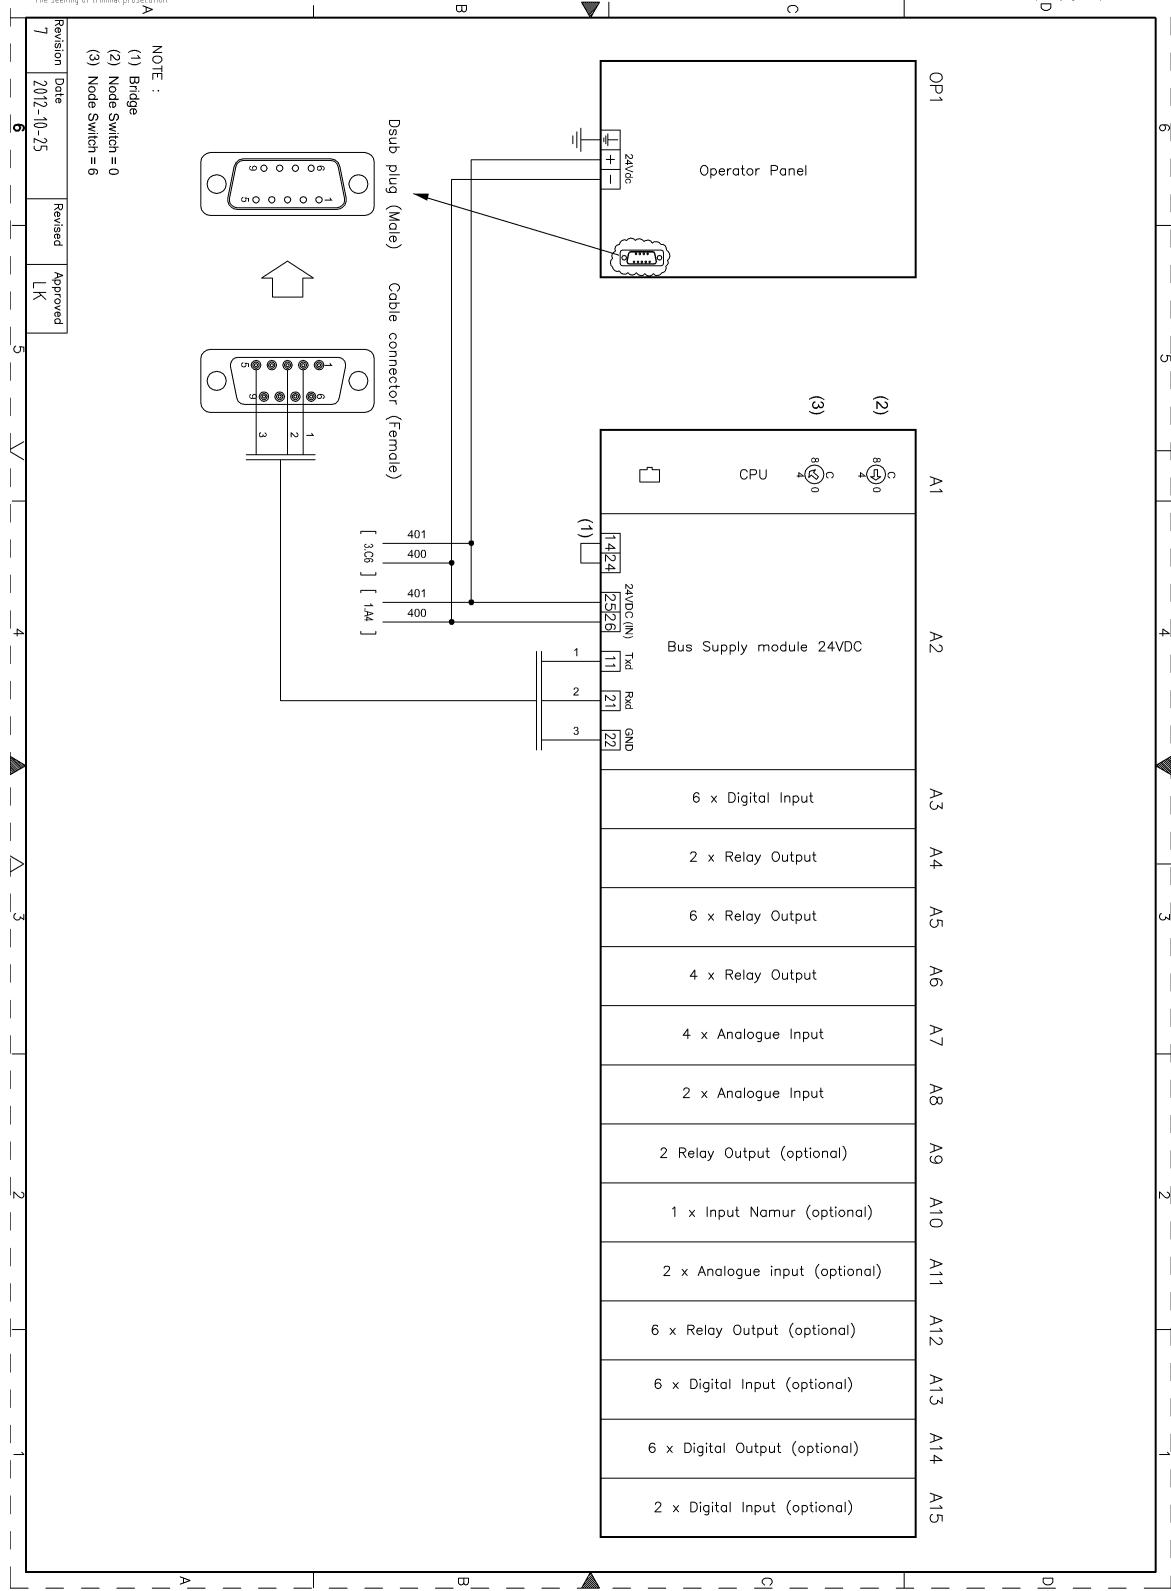

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

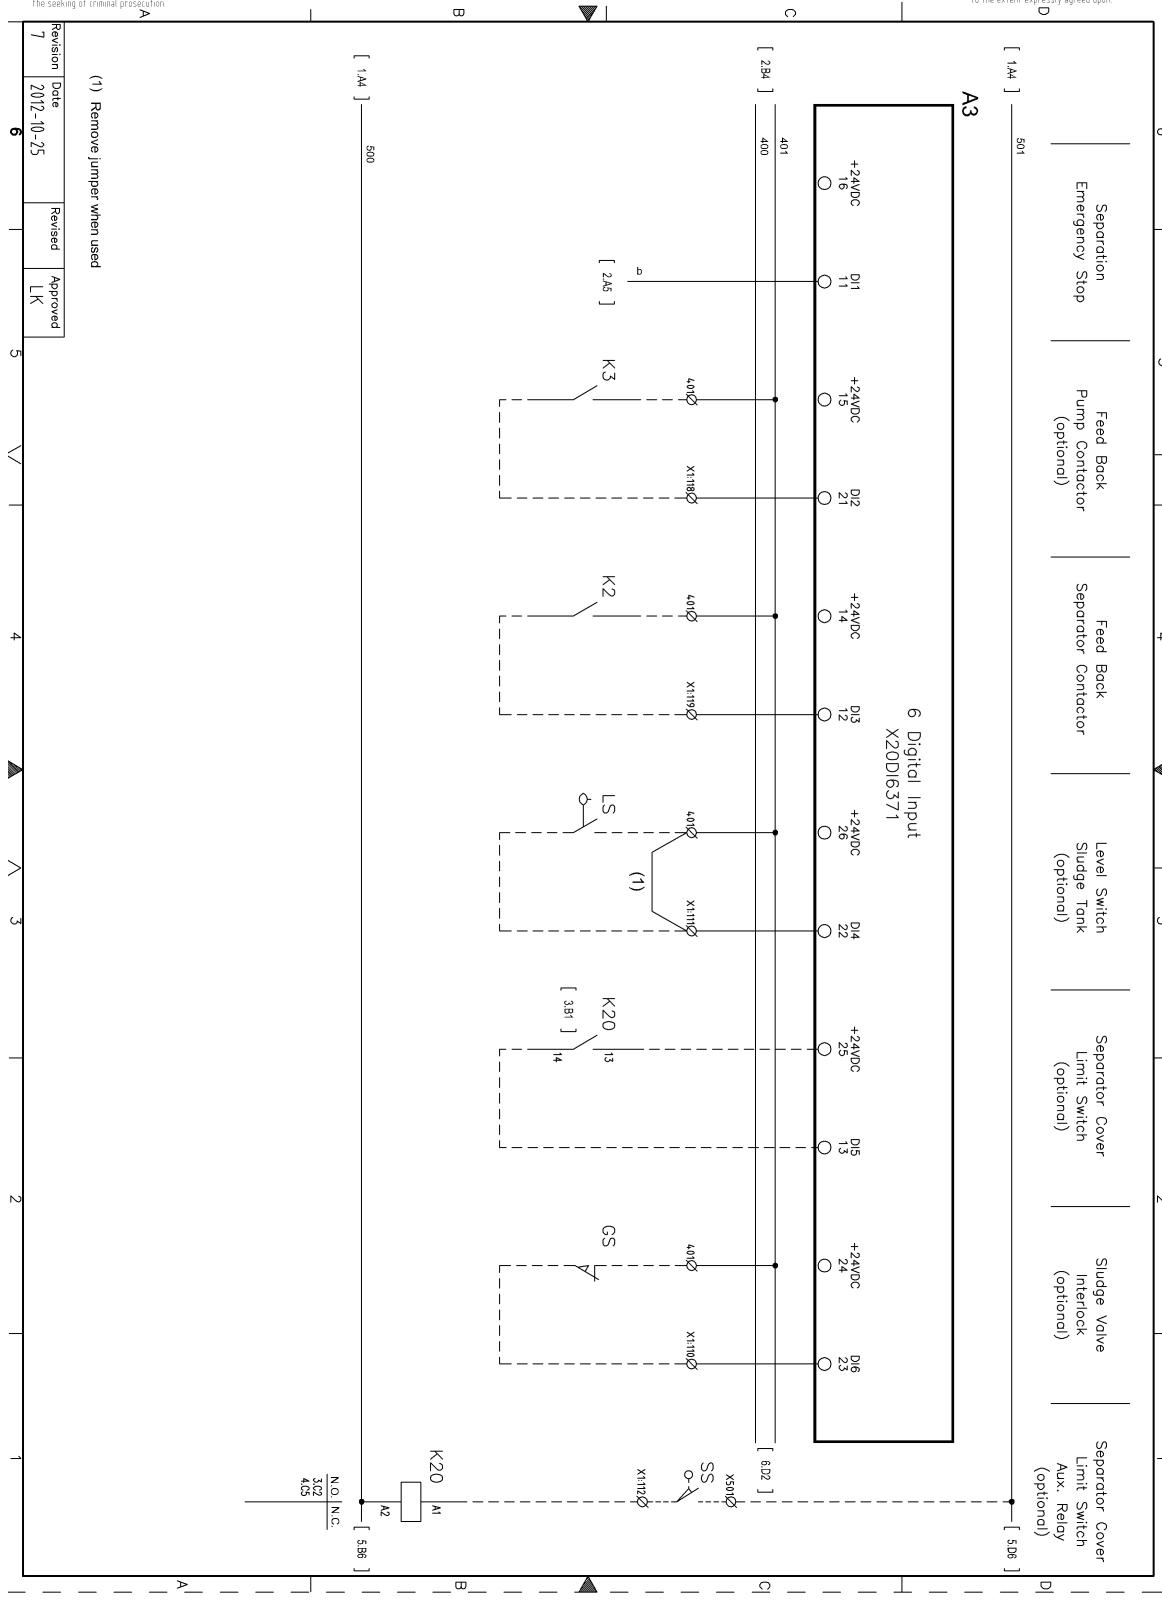


581068#7_02

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

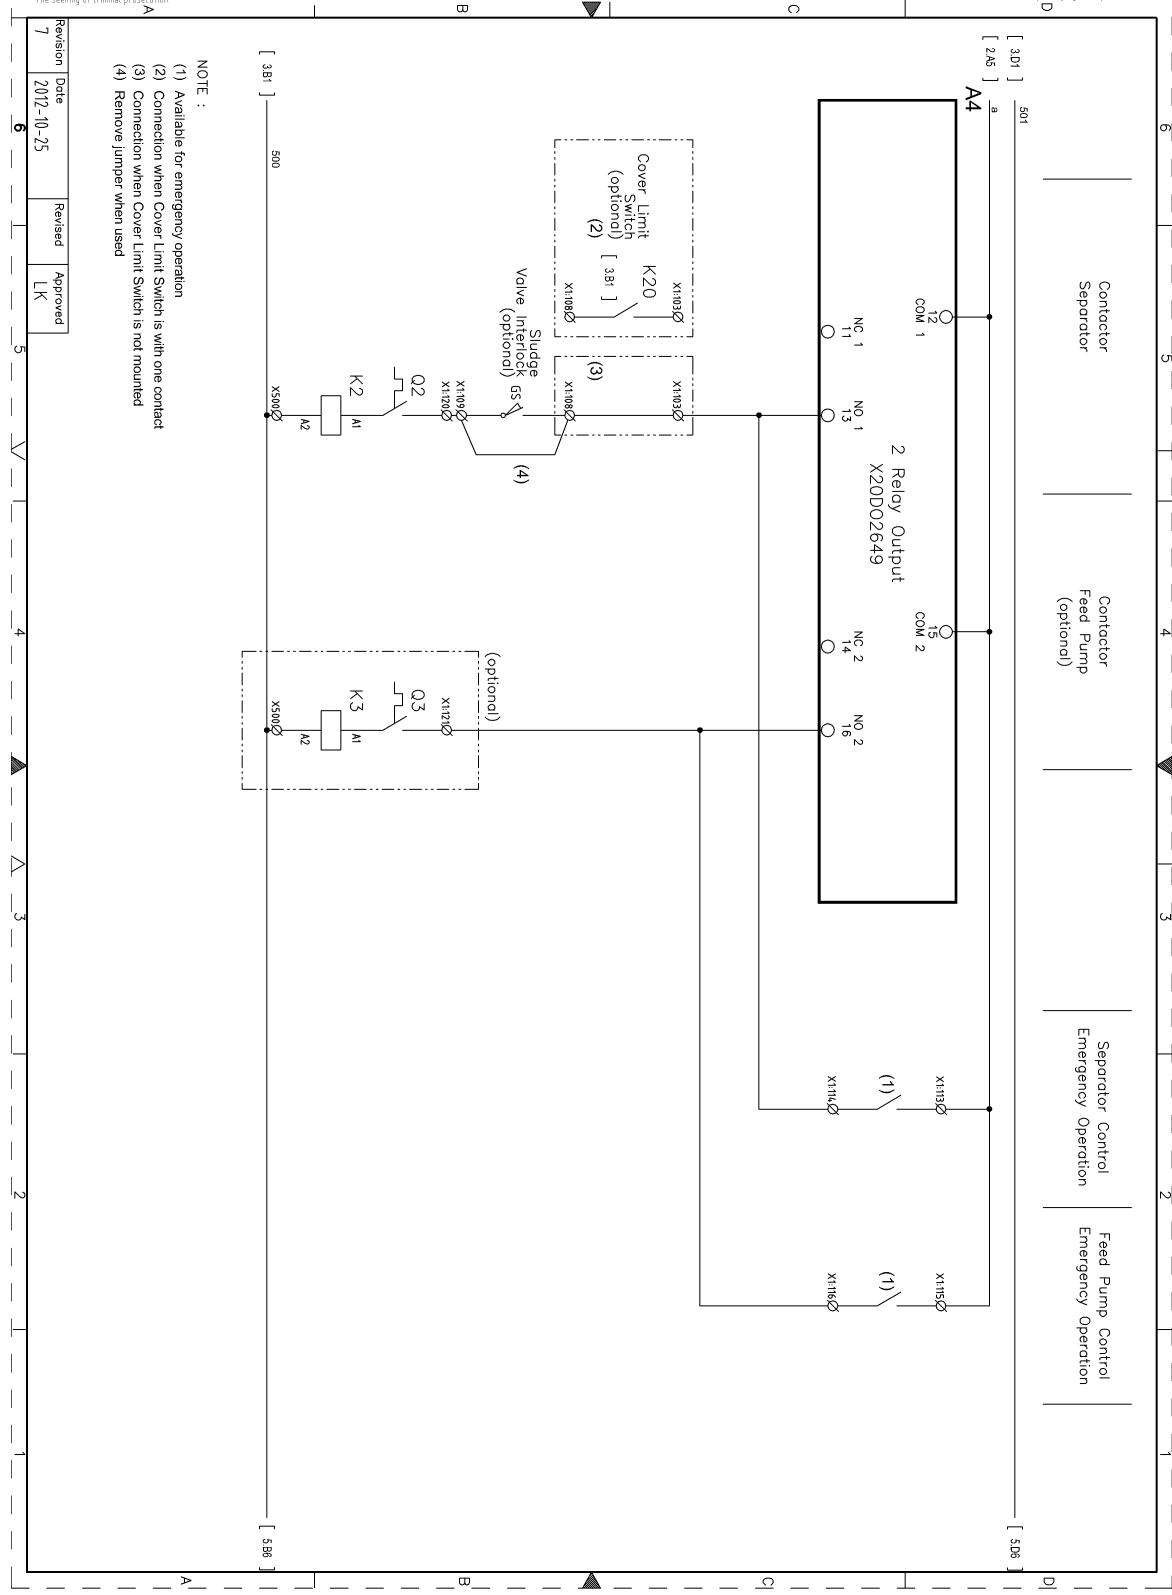


581068#7_03

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

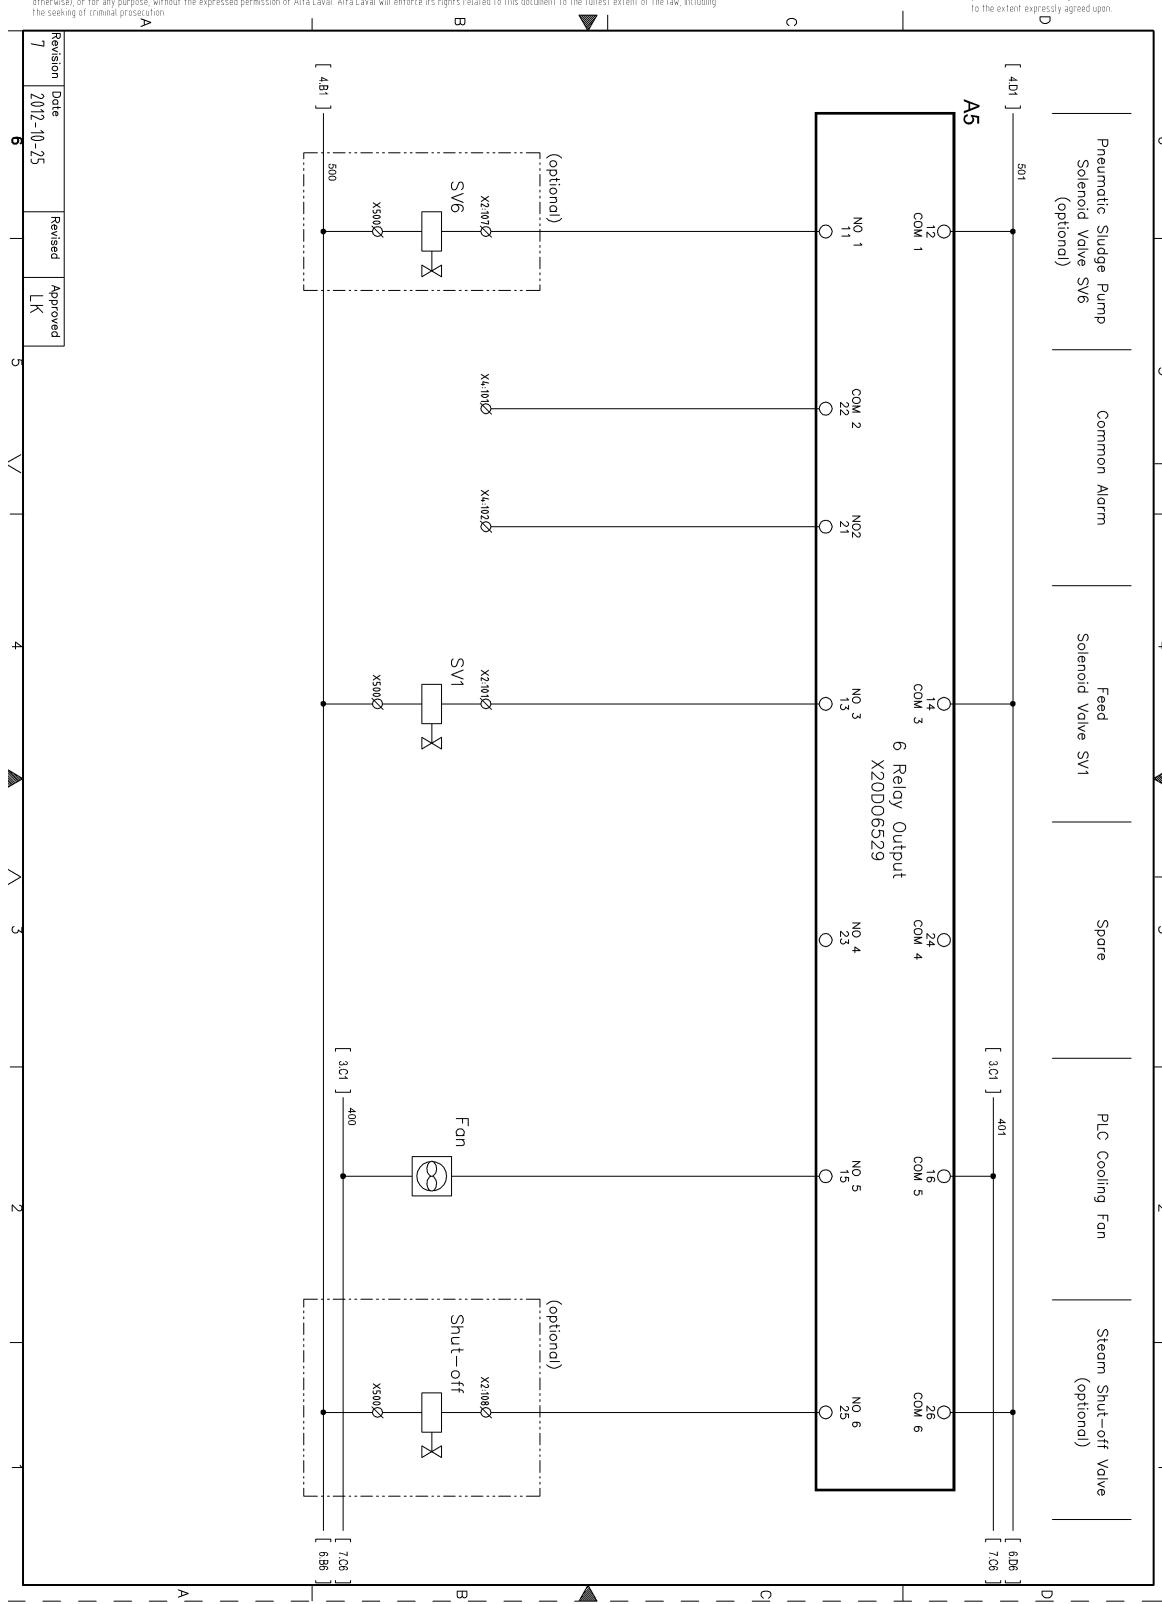


581068#7_04

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the sealing of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

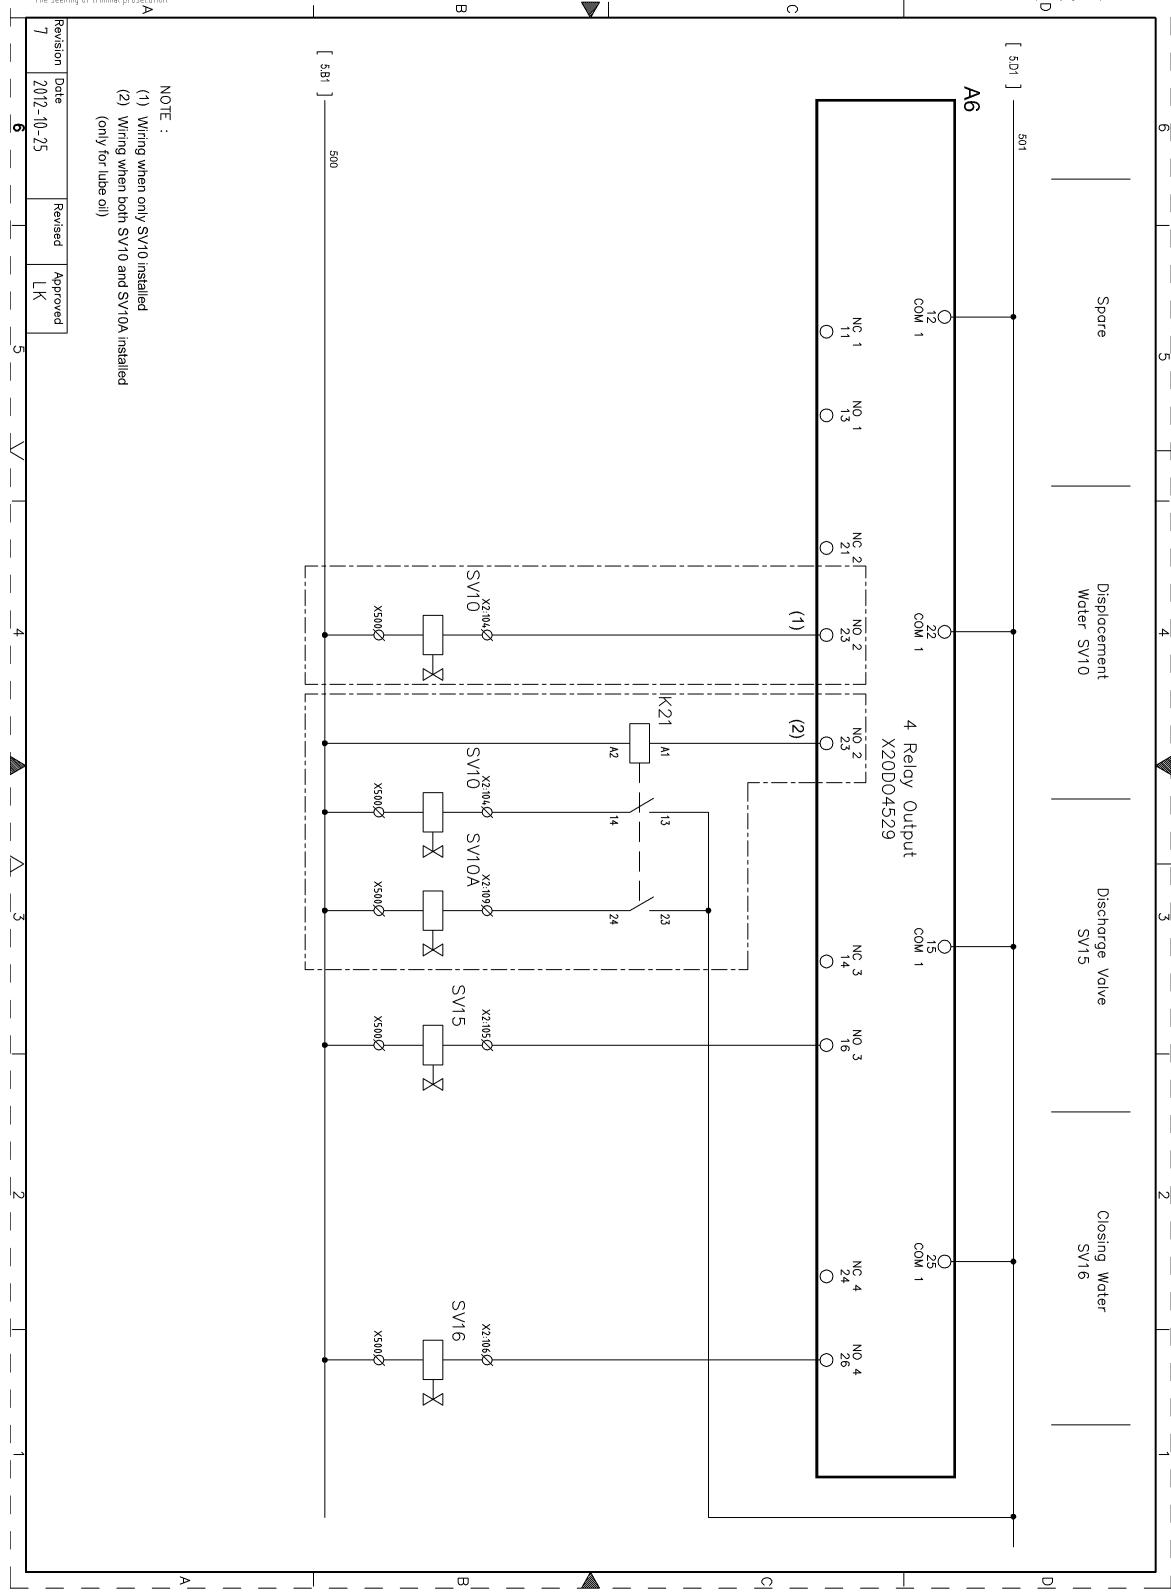


581068#7_05

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

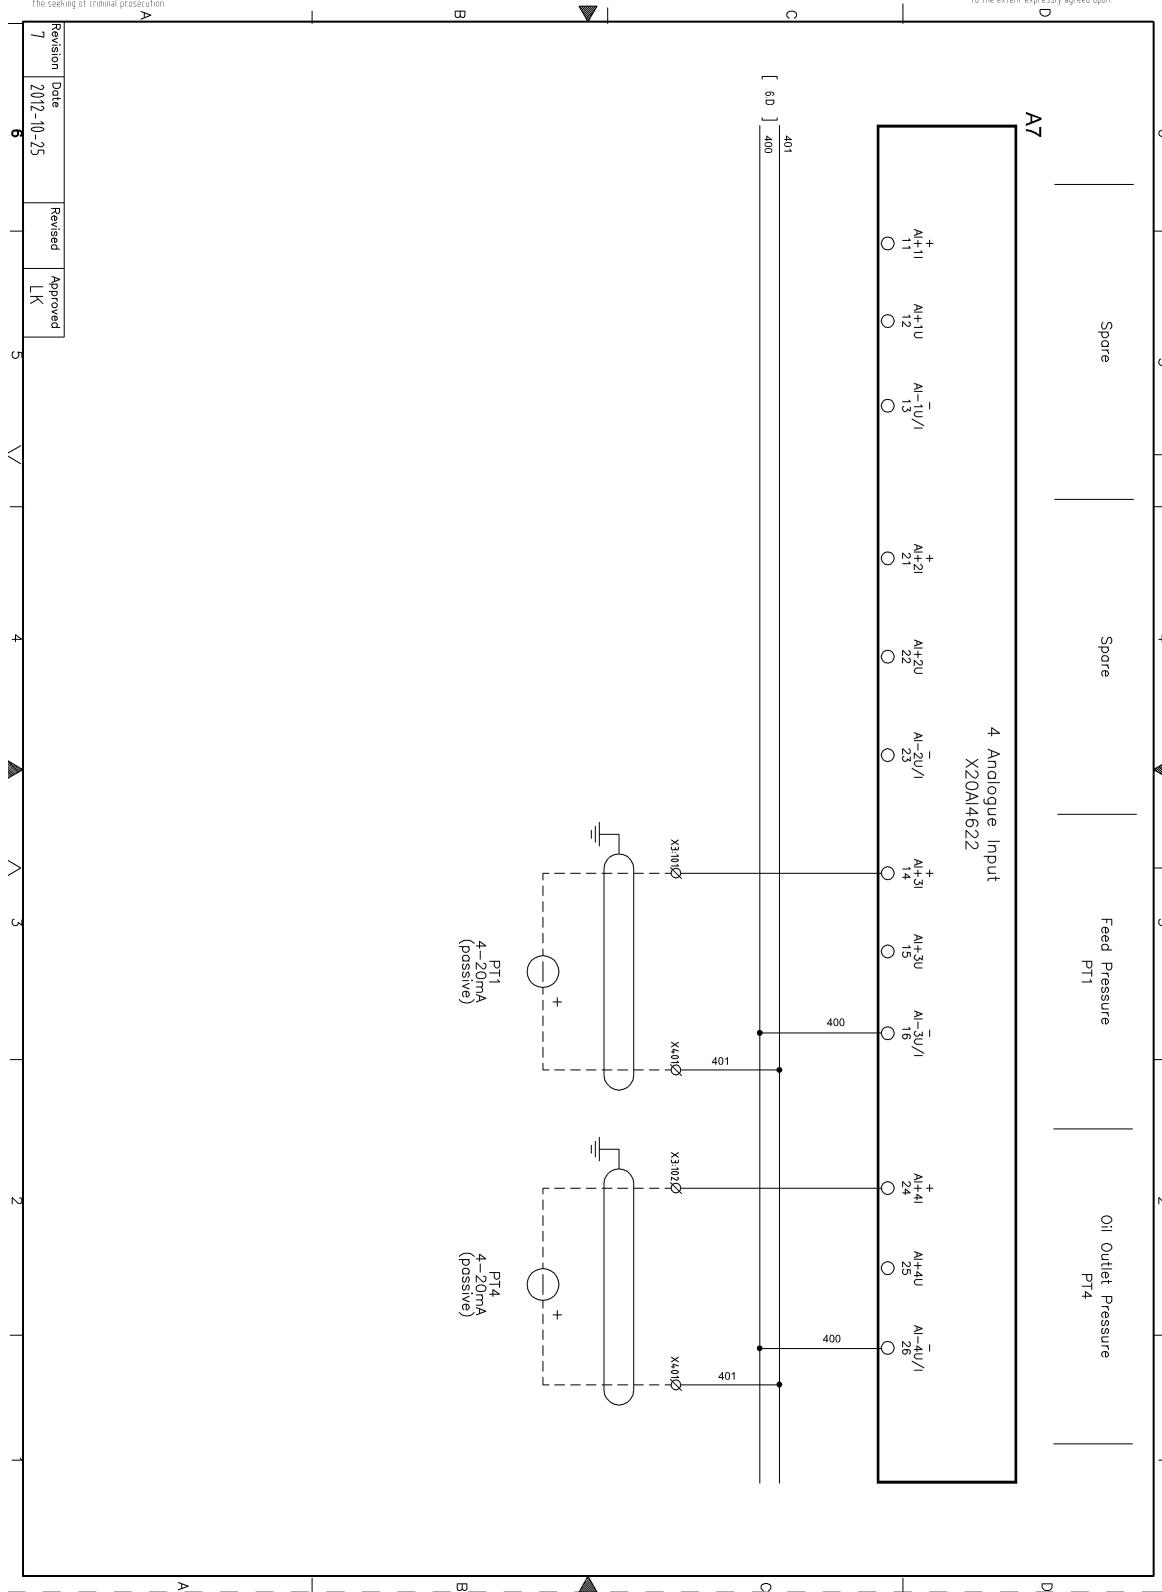


581068#7_06

Alfa Laval ref. 581068 Rev. 7

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means electronic, mechanical, photocopying, recording, or otherwise, or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the scaling of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

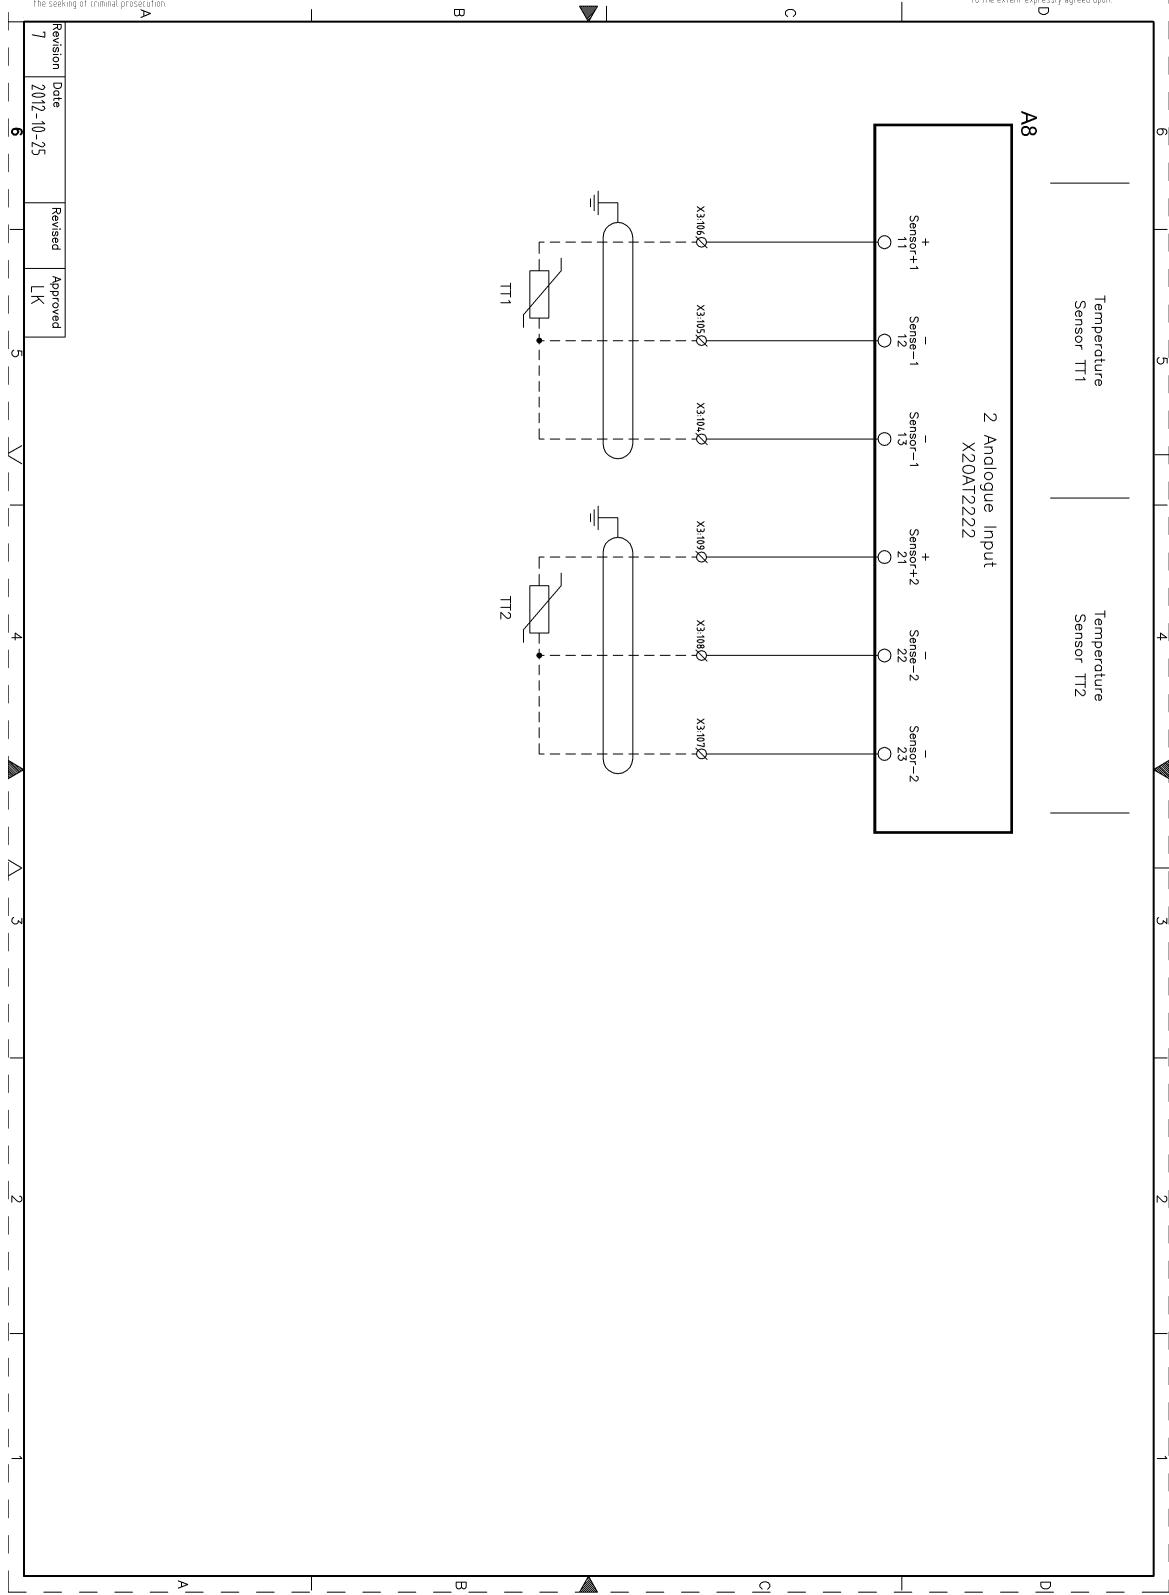


6.2.11 Steam Regulating Valve (optional) Circuit Diagram

Alfa Laval ref. 580885 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

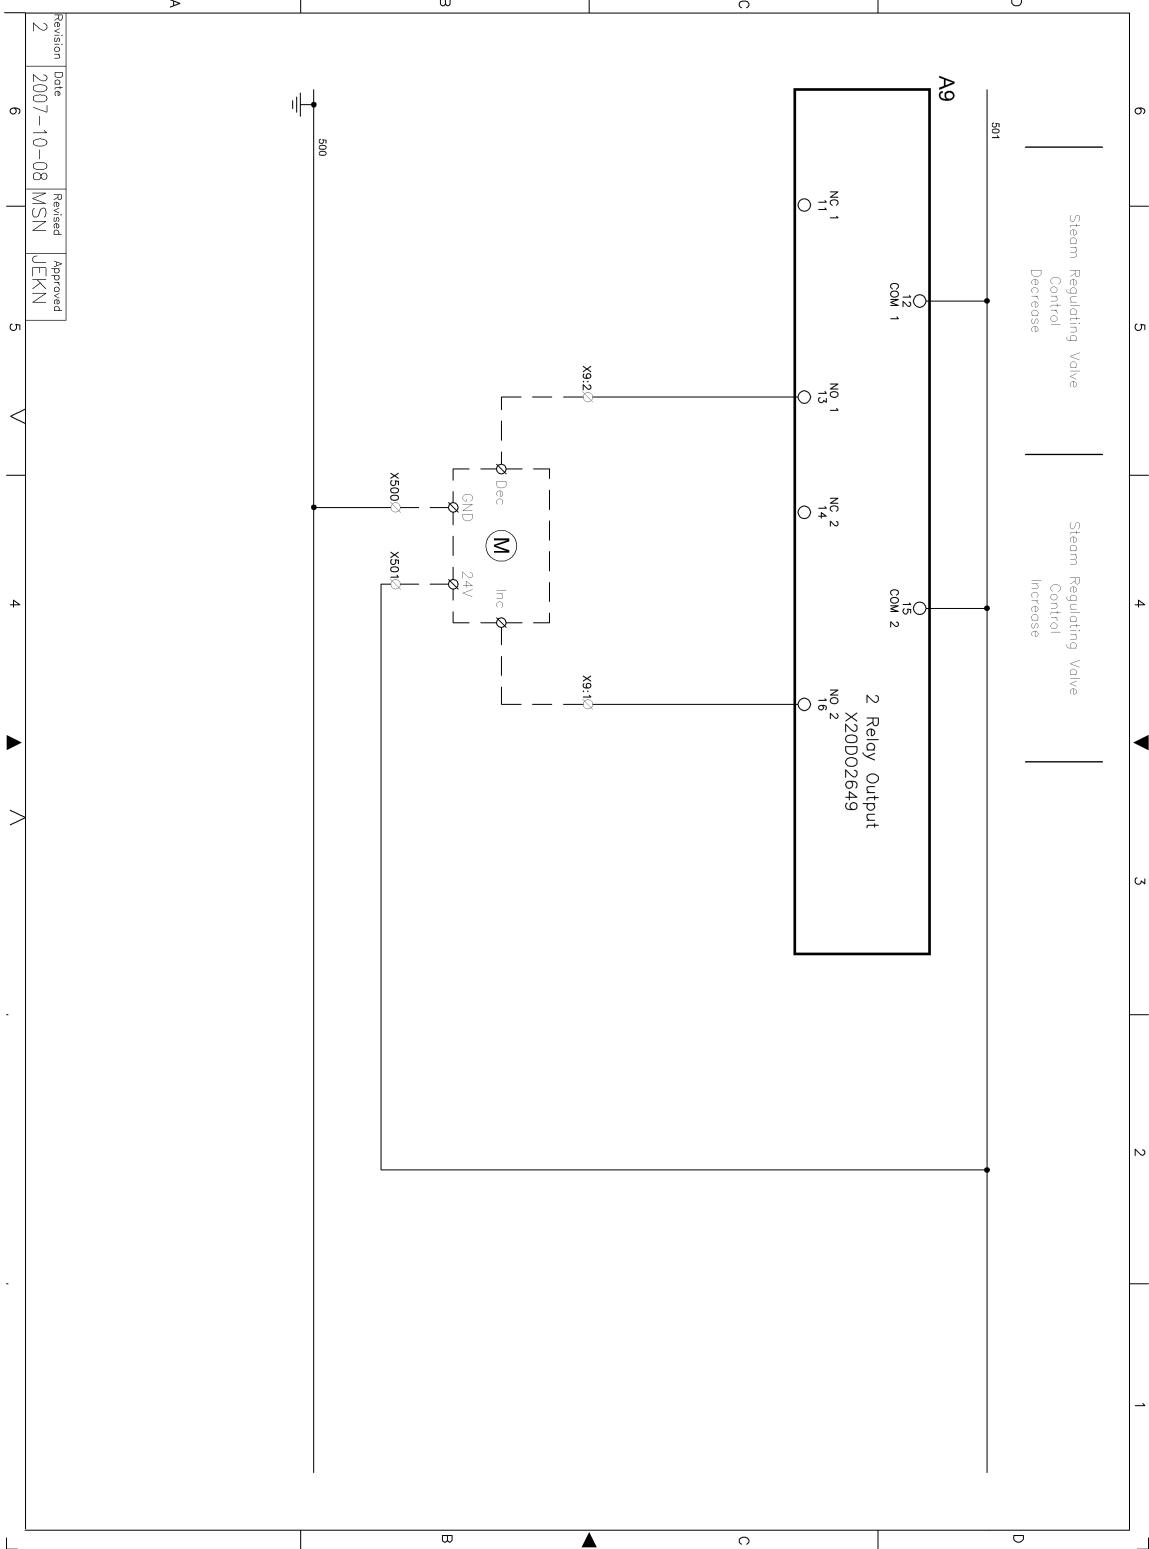

6.2.12 Speed Transmitter (optional) Circuit Diagram

Alfa Laval ref. 580887 Rev. 2

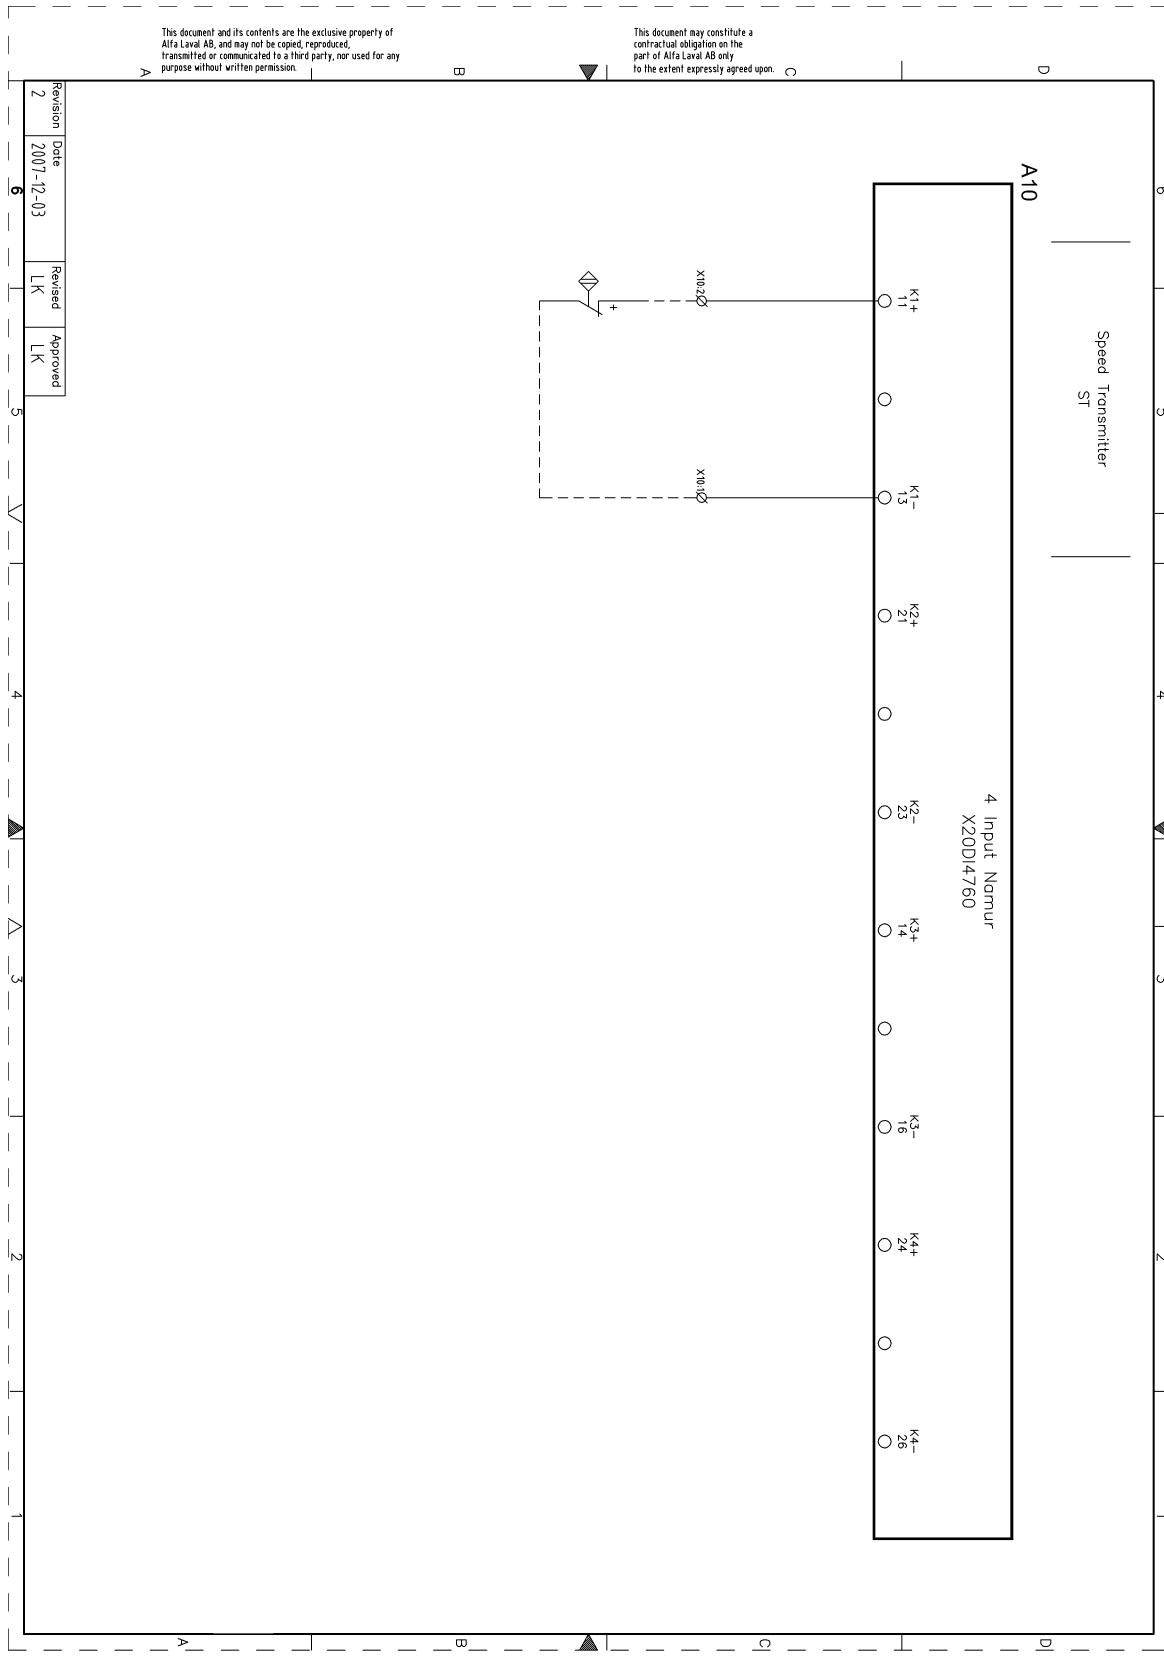


6.2.13 Vibration Transmitter (optional) Circuit Diagram

Alfa Laval ref. 580889 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

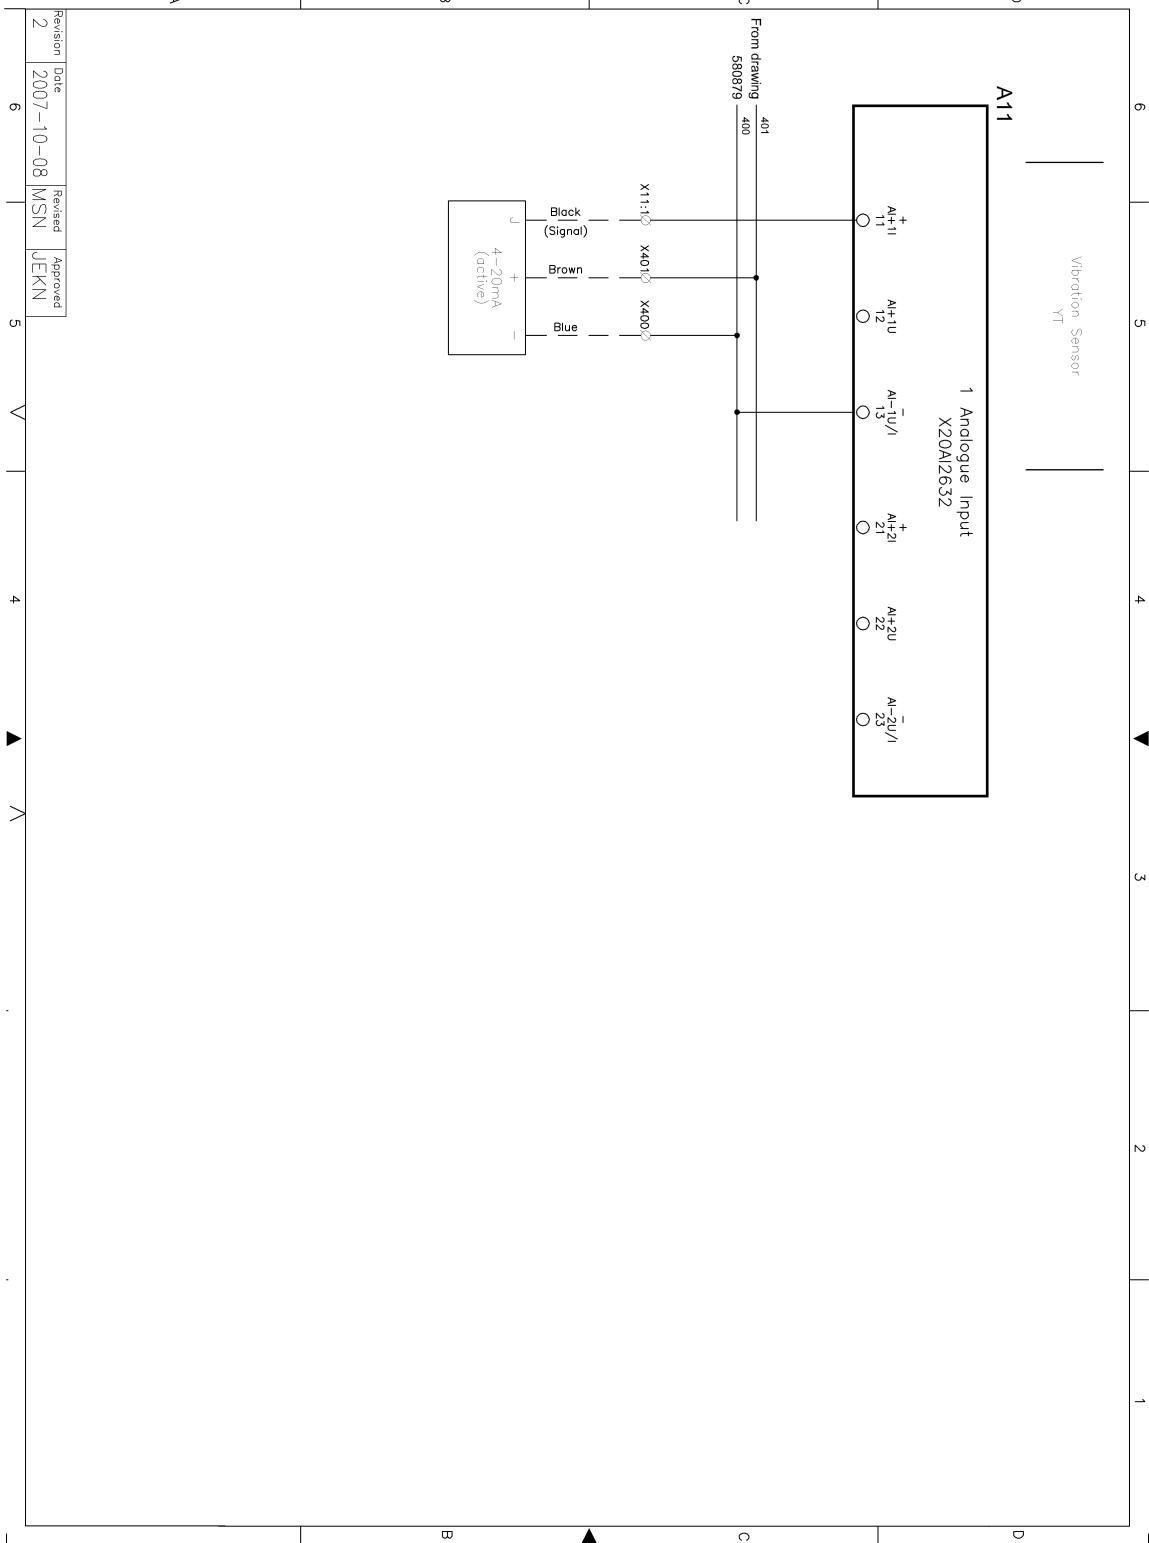


6.2.14 Electric Heater (optional) Circuit Diagram

Alfa Laval ref. 580895 Rev. 2

This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.


Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

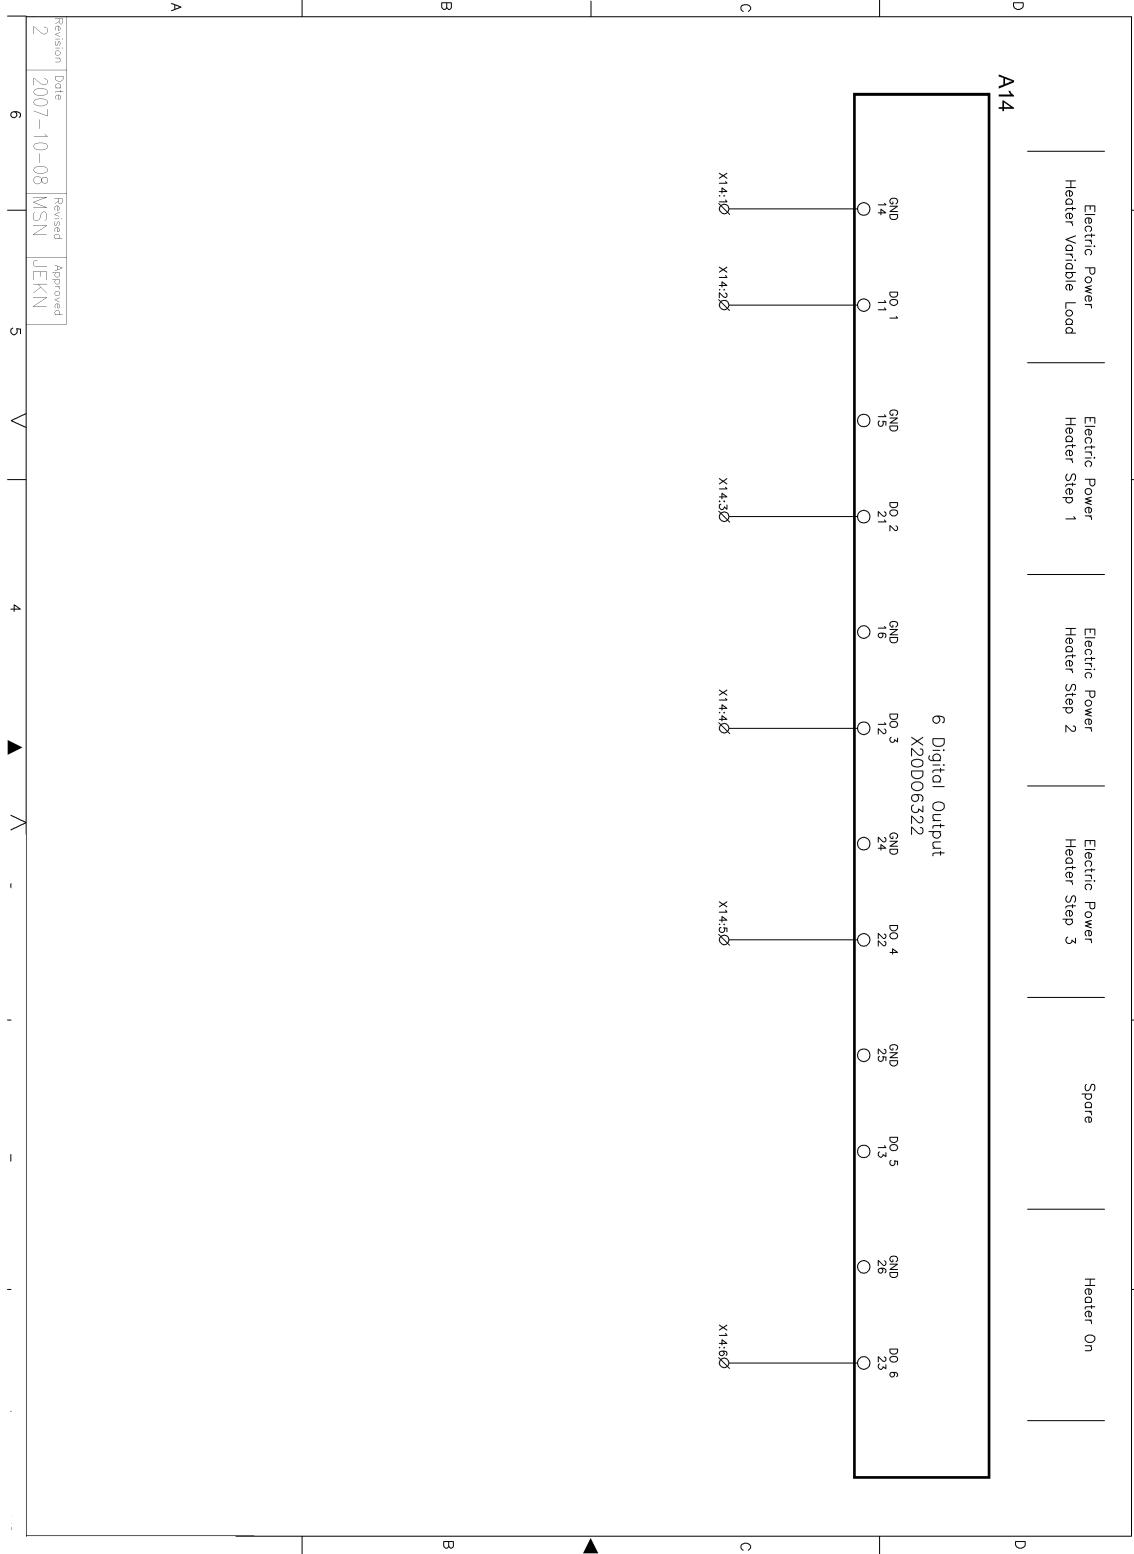

Alfa Laval ref. 580895 Rev. 2


This document and its contents are the exclusive property of Alfa Laval AB, and may not be copied, reproduced, transmitted or communicated to a third party, nor used for any purpose without written permission.

Only to the extent expressly agreed by us this document may constitute a contractual obligation on our part.

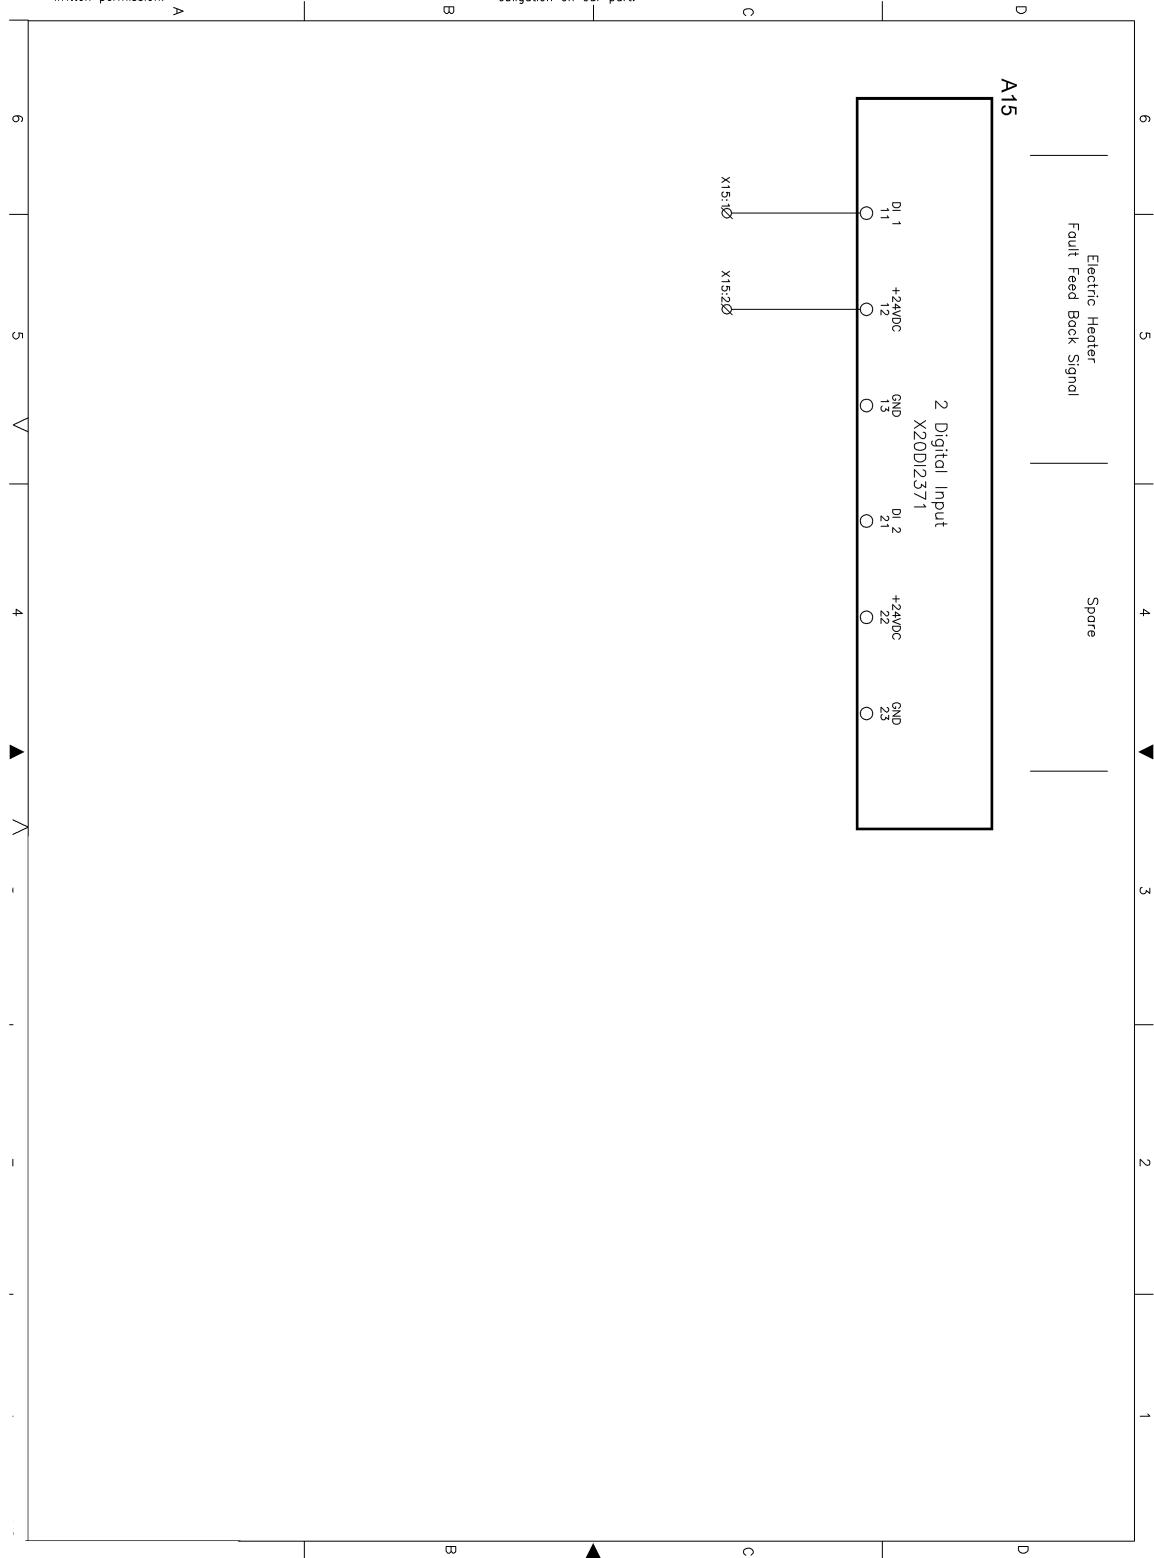

6.2.15 I/O (optional) Circuit Diagram

Alfa Laval ref. 580893 Rev. 3

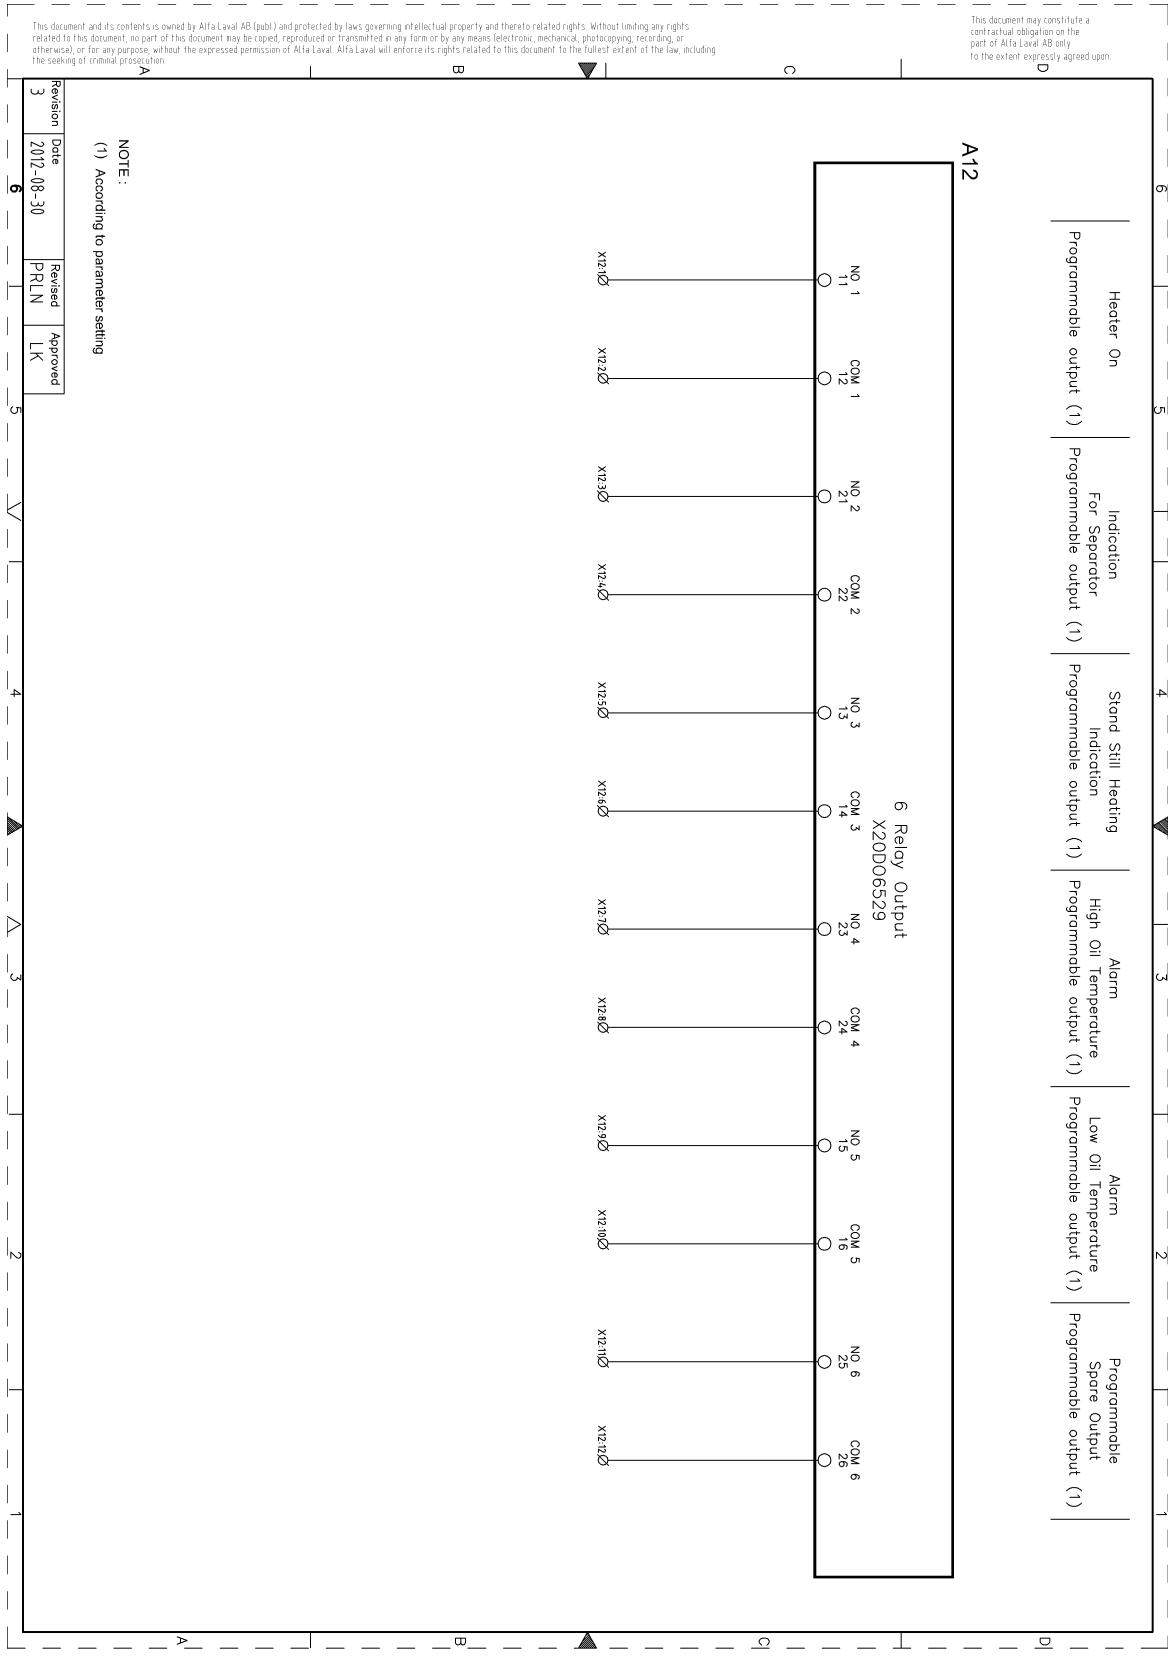


580893#3_00

Alfa Laval ref. 580893 Rev. 3

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.


This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

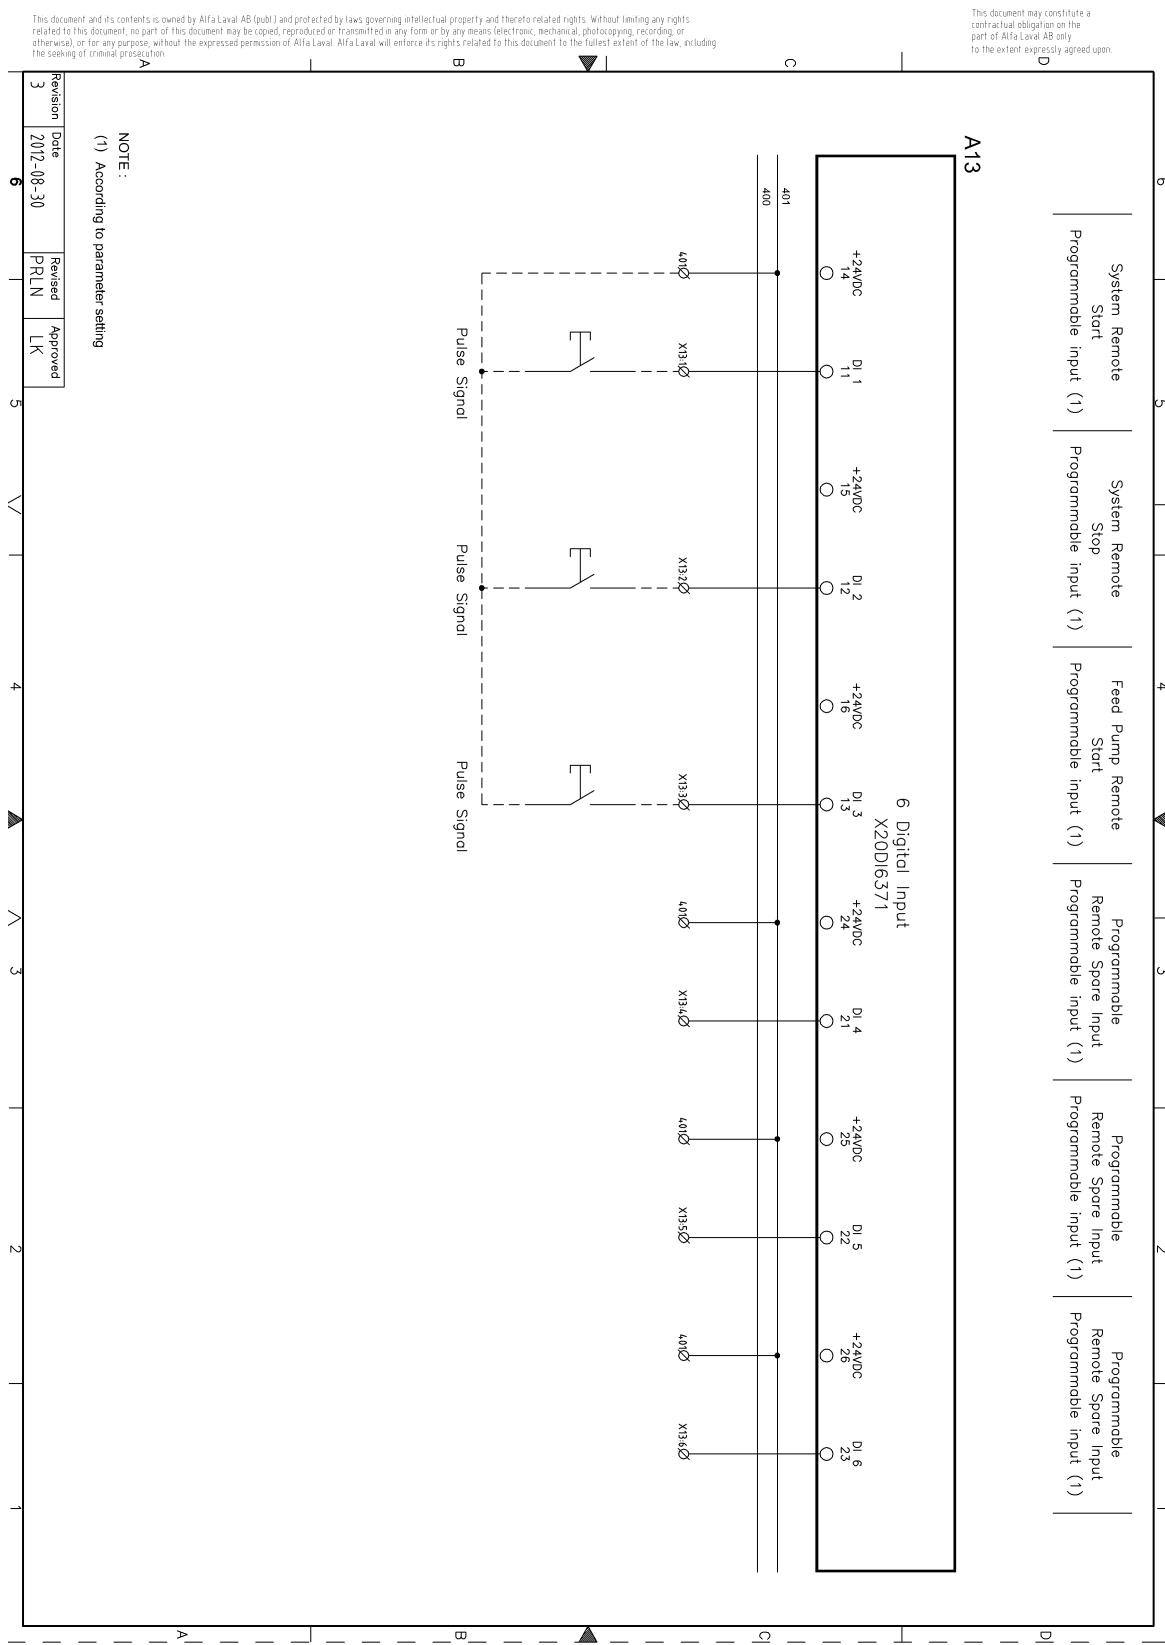

Revision	Date	Revised	Approved
3	2012-08-30	PRLN	LK

6.2.16 Heat Tracing (optional) Circuit Diagram

Alfa Laval ref. 580883 Rev. 1

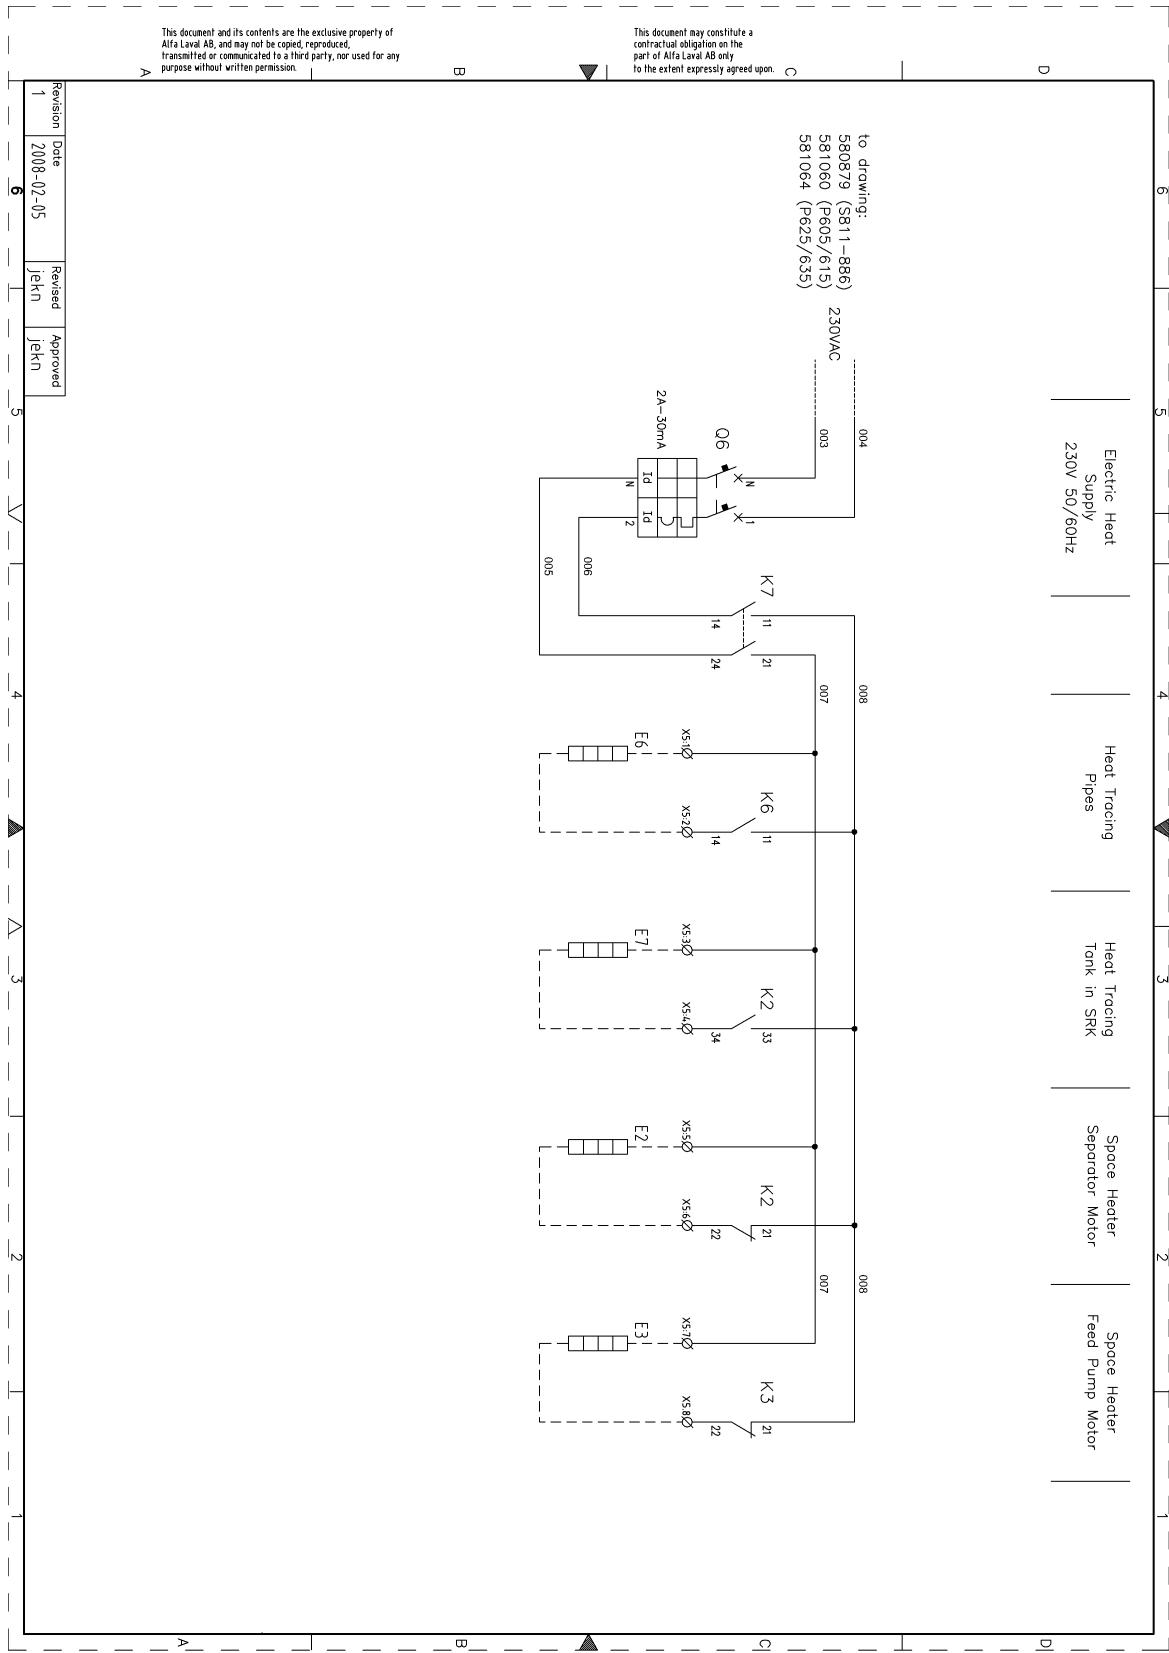


580883#1_00

Alfa Laval ref. 580883 Rev. 1

This document and its contents are the exclusive property of
Alfa Laval AB, and may not be copied, reproduced,
transmitted or communicated to a third party, nor used for any
purpose without written permission.

This document may constitute a
contractual obligation on the
part of Alfa Laval AB only
to the extent expressly agreed upon.

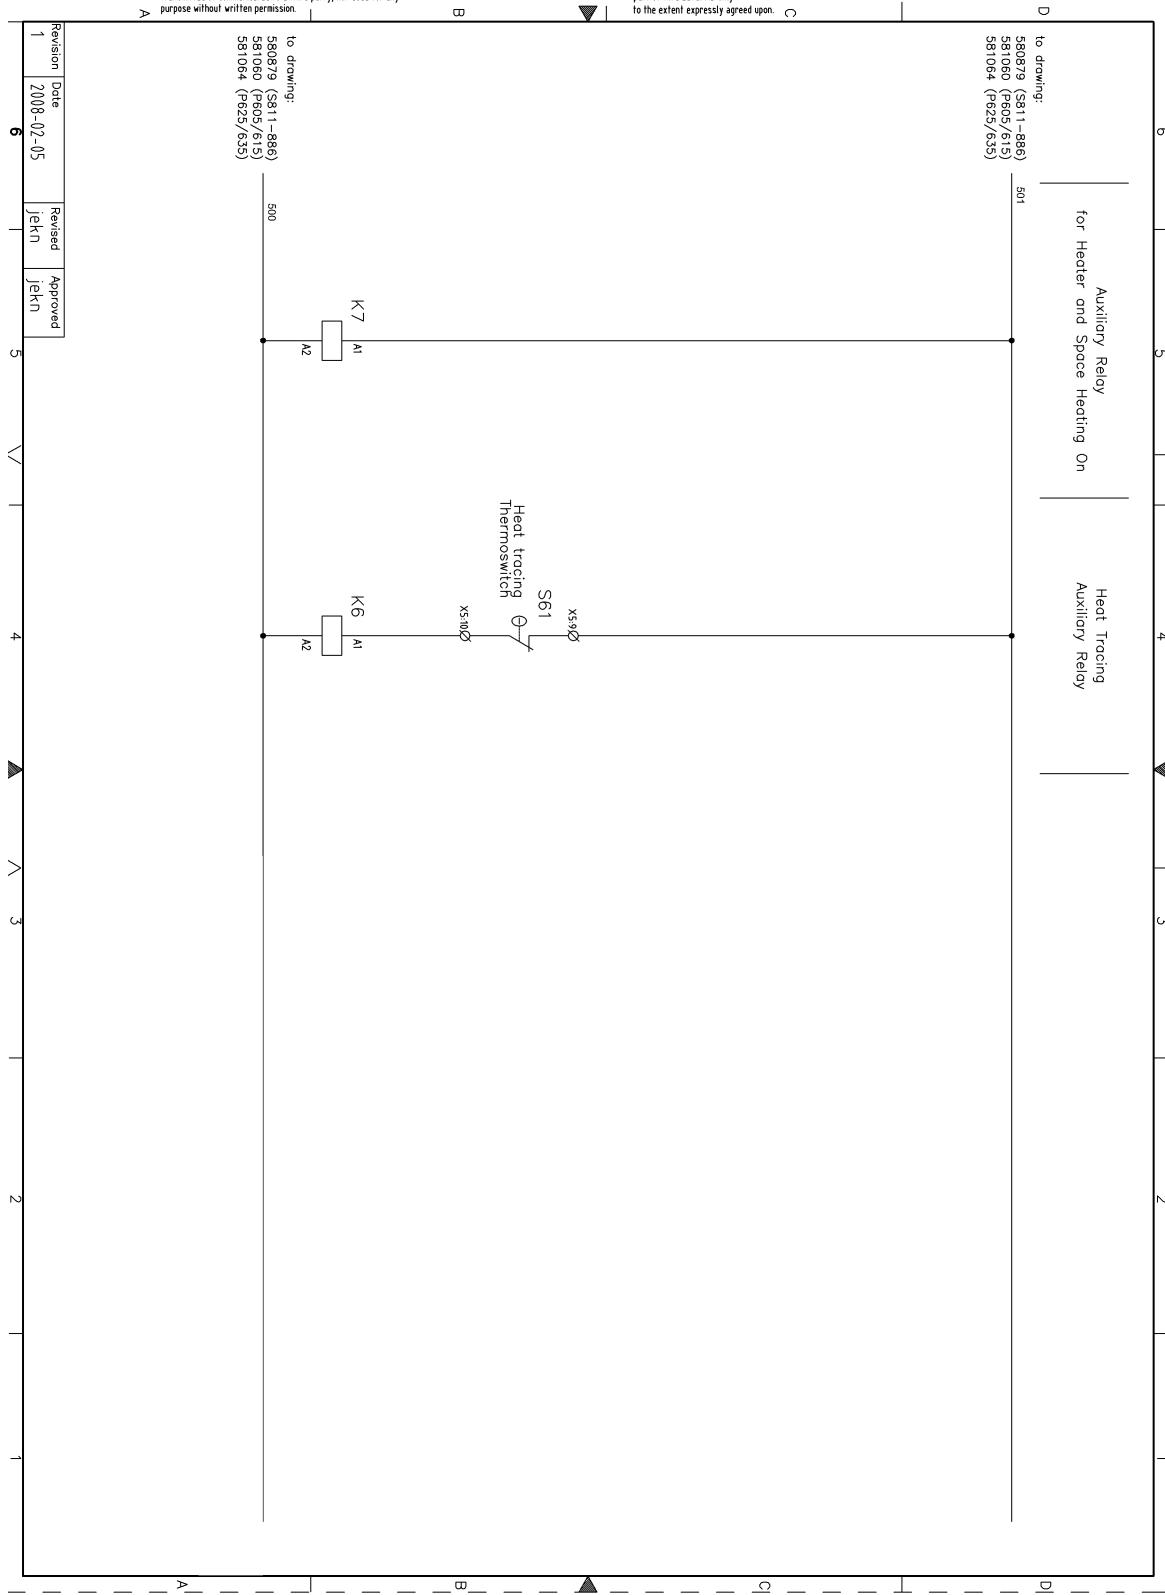

580883#1_01


6.2.17 Emergency Shutdown Circuit Diagram

Alfa Laval ref. 580897 Rev. 1

This document and its contents is owned by Alfa Laval AB (publ) and protected by laws governing intellectual property and thereto related rights. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval. Alfa Laval will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

This document may constitute a contractual obligation on the part of Alfa Laval AB only to the extent expressly agreed upon.

Revision	Date	Revised	Approved
1	2009-12-18	MBM	MSN

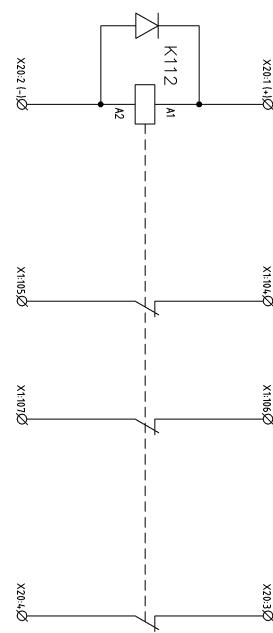

Remote ESD 24VDC
(See Circuit diagram
(internal connections))

ESD Feedback
to customer

7 Specifications

- Only qualified personnel are allowed to work with lifting of the module.
- Use only the lifting lugs as shown in the illustrations.
- Slings or wires used for lifting the Module must be adjusted so that the beam is located above the centre of gravity.
- Slings or wires used for lifting the Double Module must be of the same length to avoid instability.
- Slings/wires must be dimensioned locally depending on equipment used.
- For information on how to lift the separator, see the Separator Manual booklet.



Crush hazard

When lifting the Module, use only the lifting eyes specifically for this purpose. Always use a lifting beam.

7.1 Cables

Cable Identification

All cables are marked to simplify identification and fault finding.

Specifications

The following specifications apply to cables connected to and from Alfa Laval equipment. Follow the instructions given in the cable list. Examples of cable types that can be used:

- Steel armoured cable.




G032224A

- Copper armoured cable with a separate earth core.




G032244A

- Steel armoured and shielded signal cable; pair twisted or parallel.

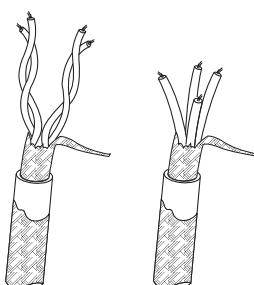

G032214A

- Shielded signal cable; pair twisted or parallel.

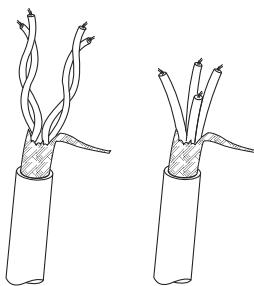

G032234A

7.2 Cable Routing

Recommendations

Power cables carry the power supply to motors, heaters, etc.
Any distance between signal and power cables reduces electrical noise transfer.

Examples of recommended routing of various cable types.

- Power cables and signal cables routed on a cable rack should be separated.
- Sattbus cables should be routed away from power cables.



G032273A

Left: Power Cables / Right: Signal cable

If the space is limited, cables can be routed in tubes.

7.3 Oil, Water, Steam, and Condensate Piping

For piping to and from Alfa Laval equipment, see the specifications below.


Specifications

- The correct pipe size must be used in the oil system.
- The number of bends in the oil pipes must be minimized.
- The suction height must be as low as possible.
- The oil feed pump must be of positive displacement type.
- The pump must be positioned close to the oil tank.
- The heater must be installed close to the separation module to maintain correct feed oil temperature.
- The recirculation line should be connected either directly to the settling tank (HFO) or to the oil outlet line from the separator (LO).
- The oil outlet line from the separator must be connected to the system tank for lube oil, or the service tank for fuel oil.

7.4 Ambient Temperature Limitation

Specification

Leading classification societies state in their regulations for engine room equipment that the maximum ambient temperature permissible is +55 °C. To meet this regulation, it is essential that electrical and electronic components have good ventilation, and temperature control.

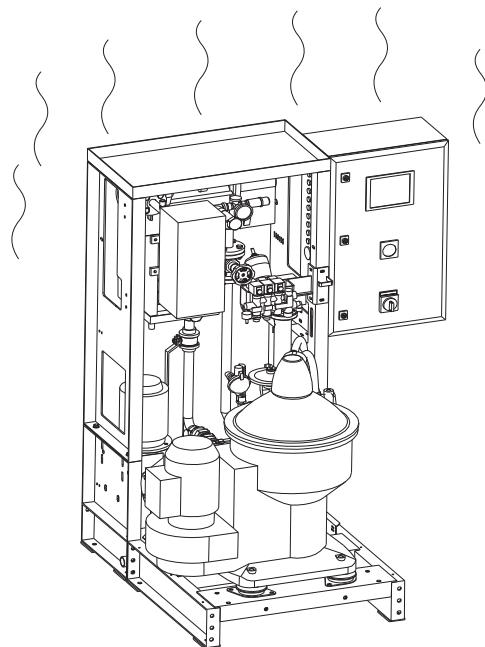


7.5 Heat Tracing and Insulation of Fuel Oil, Sludge, and Steam Pipes

Alfa Laval can, on request, supply modules which are heat traced and insulated, as optional equipment.

7.6 More than one Oil Tank

Recommendation

When one separator serves more than one oil tank, both the suction and the outlet lines should be fitted with change-over valves. To avoid oil transfer from one tank to another, these valves must be interlinked.

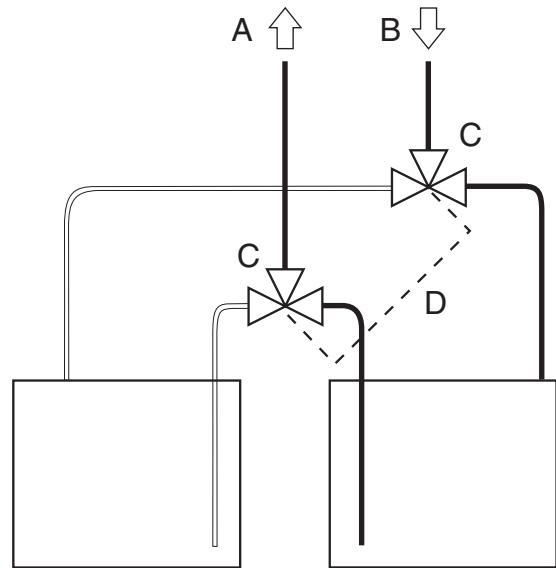

P000062B

- A. Unprocessed oil
- B. Clean oil
- C. Change over valve
- D. Interlink

7.7 Sludge Removal Kit (Optional Equipment)

If you have a Sludge Removal Kit, this must be connected to a ventilation pipe.

NOTE

The sludge removal pump must be set to the correct speed – circa 60 strokes/min, otherwise the lifetime of the diaphragm, valve balls, and air motor will be severely shortened.

WARNING

Health Risk

Oil mist and vaporized oil constituents from hot oily sludge may be dangerous to health and must not be inhaled.

A pipe or hose must be drawn from the flange to the nearest oil tank ventilation pipe.

The pipe/hose must have the same diameter as the flange opening.


The pipe/hose must be as straight as possible, with a steady upward incline.

The connection to the oil tank ventilation pipe must point upwards as shown.

NOTE

For HFO separation, it is not recommended to make the connection to the separator room ventilation system.

For LO separation, connection to the separator room ventilation system should be made **only** if the separator room ventilation is adequate. Use the optional connection hose (part no. 568023-80, -81, or -82) for this purpose. This hose is designed to entrap oil drops in the vent hose, and lead the oil back to the Sludge Removal Kit tank.

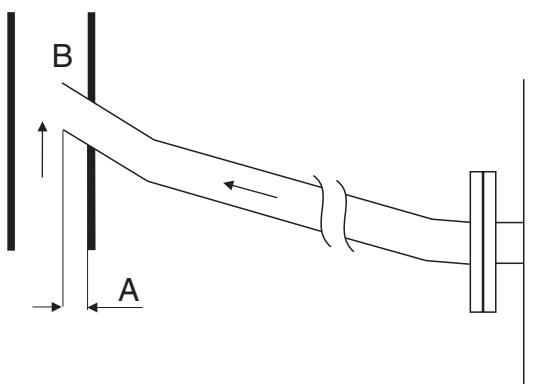

P000063B

A. ~5 mm

B. Oil tank ventilation pipe

NOTE

Impurities gather in the Sludge Removal Kit tank.

Regularly check the tank and level switch.

See instructions below.

Proceed as follows:

- From the Control Panel, run the sludge pump manually for a few seconds.
- Undo the four screws connecting the sludge pump to the sludge tank and remove the sludge pump.
- If necessary, clean the level switch and the inside of the tank using diesel oil.
- Check the seals and gaskets, and change if necessary.
- Loosen the hose clip and check the inside of the ventilation hose. Clean if necessary.

To avoid breakdown of the Sludge Removal system, the sludge pump must be regularly overhauled as follows using spare parts kit specified in the spare parts catalogue.

- Replace the diaphragms and the O-rings with those delivered in the spare parts kit.
- Perform a 4000 hour Inspection Service.


For Service and Overhaul intervals, see [1.3 System Data on page 9](#).

7.8 Sludge Tank

It is not necessary to have a sludge tank together with a Separation Module with sludge removal kit (for lube oil). If a sludge tank is required, follow the recommendations below:


Recommendations

- Sludge tank volume per Separation Module should cover approximately up to 2 days storage at a discharge interval of 2 hours (for discharge volumes see technical data).
- A manhole should be installed for inspection and cleaning.
- The tank should be fitted with a sounding pipe.
- The tank floor, or most of it, should have a slope (B) of minimum 15°.
- The sludge outlet pump connection should be positioned in the lowest part of the tank.
- A high level alarm switch, connected to the sludge pump, should be installed.
- A heating coil should be used to keep the sludge warm and fluid while being pumped out.
- Tank ventilation must follow the classification rules for evacuation of gases.
- There should be a ventilation pipe to fresh air.
- The ventilation pipe should be straight. If this is not possible, any bends must be gradual.
- The ventilation pipe must not extend below the tank top.
- A sludge tank with partition walls must have ventilation pipes in all compartments, or cutouts in the upper edge, to allow vapours to travel through the tank.

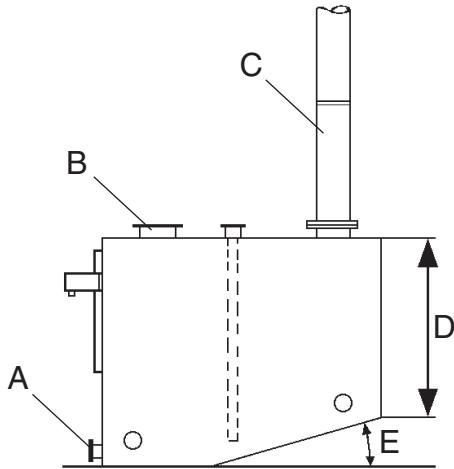

G004273B

- A. Sludge outlet pump connection
- B. Sludge pipe connection
- C. Ventilation pipe
- D. Min. height 400 mm
- E. Min. slope 15°

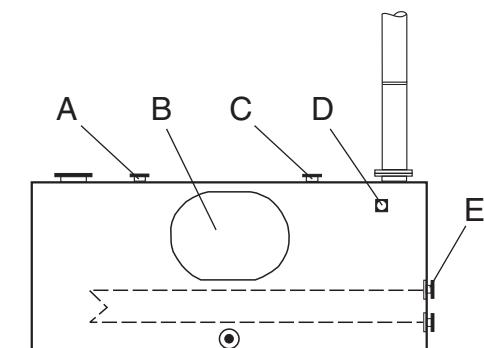

G004270B

- A. Bowl casing drain connection
- B. Manhole
- C. Water drain connection
- D. High level alarm switch
- E. Heating coil

In retrofit applications, where an Alfa Laval Separation Module will share a common separator sludge tank with existing separators, it is recommended to install a Sludge Removal Kit.

The number of ventilation pipes, and their minimum dimension, depend on the size and number of separators connected to the same tank. See table below.

Type	1 module	2/3 modules	4 modules
S805-S927, P605-P626	1 x Ø 60 mm	1 x Ø 75 mm	1 x Ø 100 mm


The Module generates almost no air during operation. At any discharge, the maximum volume of air produced is the same as the bowl volume (see technical data).

7.9 Sludge Piping

Specification

- The sludge pipe from the separator to the sludge tank should be vertical.

If a vertical pipe is not possible, the deviation (A) from the vertical line must not exceed 30°.

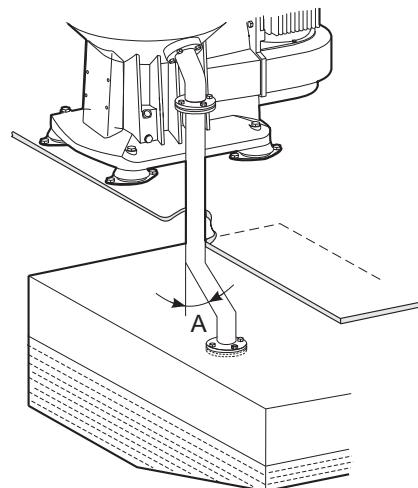


G004401A

- The sludge pipe must not extend below the tank top.

NOTE

An extended sludge pipe will obstruct ventilation and create back pressure that could cause separator problems.

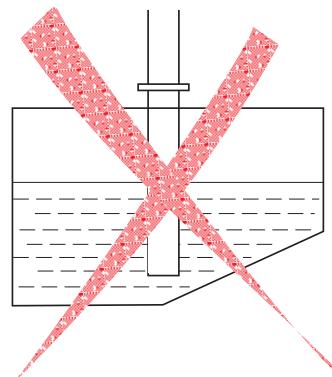

G004316A


Recommendation

In cases where sludge tank ventilation is not adequate, and more than one separator is connected to the same sludge tank, we recommend that a butterfly valve is installed in each sludge pipe.

NOTE

If a butterfly valve is not used, the bowl and the operating system may be affected by corrosive fumes and sludge from the sludge tank.

- If a butterfly valve is used, it should be equipped with an interlocking switch (connected to the separator starter) to prevent the separator from being started when the valve is not fully open.

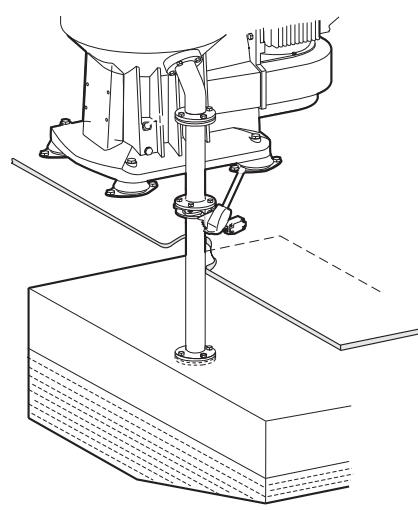

G004411A

8 Commissioning and Initial Start

8.1 Completion Check List

It is essential *before* starting up the separation system that all modules are in good operating condition and that all pipelines and control equipment are properly connected to assure correct operation.

Use this check list as a guide for completing the system installation:



Breakdown hazard

Check that the power frequency is in agreement with the machine plate. If incorrect, resulting overspeed may cause breakdown.

1. Check that transport seals are removed from all pipes.
2. Use flushing filters to prevent pipe work debris from being pumped into the separation module.

NOTE

The flushing filters must be removed after initial flushing.

3. Check that all separators are in proper working condition. Follow the manufacturer's instructions.
4. Make sure that separators are lubricated in accordance with instructions.

NOTE

Make sure that the spindle bearings are prelubricated



g08687t1

Drop some frame oil onto the bearings

5. Separators are delivered without oil in the oil sump. For information on oil filling and oil type, see the *Separator Manual booklet*.

NOTE

Too much, or too little oil may result in damage to separator bearings.

Neglecting an oil change may result in damage to separator bearings.

6. Power on.
7. Check that the separator rotation direction corresponds with the arrow on the frame by doing a quick start/stop (1–2 seconds.) and looking at the motor fan rotation.



If power cables have been installed incorrectly, the separator will rotate in reverse, and vital rotating parts can unscrew.

8. Check the pump function and direction.
9. If a Sludge Removal Kit is used, check that the sludge pump speed is set to circa 60 strokes/min. If necessary, adjust the throttling valve (positioned after solenoid valve SV 6).

8.2 Initial Start-up

NOTE

After every start the separator must always be run continuously for a minimum of 1 hour to ensure proper lubrication.

Use this check list for initial system start up:

1. Check that there is oil in the feed oil tank.
2. Check water and air supply. See [1.3 System Data](#).
3. Check power supplies to the control unit and that the voltage is in accordance with data in [1.3 System Data](#).

4. Check all parameter settings in the control unit.
See *Installation Parameters* in the *Parameter List* booklet.
5. Check the separator.

NOTE

Always lubricate the bearings before start-up.

NOTE

The Separation module is supplied with standard configuration parameters. You may have to make some changes to suit your installation.

6. Start the separation system as described in the *Operating Instructions* booklet.
7. Start up step by step, checking that the machine and module function properly.
8. Establish system pressures. The delivery height pressure is the pressure in the oil pipe work down stream from the separation module, due to the pipe bends and the height (head) to the cleaned oil tank. If the cleaned oil tank is below the separation module the delivery height pressure may be very low. The oil paring disc pressure will have to be greater than the delivery height pressure for any oil to flow.

Proceed as follows:

- Ensure the valves in the oil system are in the correct positions.
- The oil should be at separation temperature.

For S-type separators:

- The paring tube should be able to move freely.
- Ensure that V5 is closed.
- Fully open the back pressure regulating valve RV4.
- The shut off valve V4 should be open.
- Open SV15 for 3 seconds to prime the operating slide.
- Open SV16 for 15 seconds to close the bowl.
- Open SV10 for 1 minute to put water into the bowl.
- Feed oil to the separator at the normal flow rate by opening SV1.

- Note the pressure in the oil outlet PT4, both on the pressure gauge and in the EPC 60 display. This pressure is P min.
- Gradually close the back pressure regulating valve RV4. The pressure on PT4 will increase. The water pressure (PT5) decreases slightly as the paring tube moves inwards. The water pressure will suddenly drop when oil passes from the oil paring chamber to the water paring chamber. Note the pressure of PT4 both on the pressure gauge and in the EPC 60 display. This pressure is P max.
- Open RV4.
- Stop the oil feed to the separator and note the pressure in the oil outlet. This is the delivery height pressure P del.
- Stop the heater.
- Stop the separator.
- Stop the feed pump when the heater has cooled.

For P-type separators:

- Fully open the back pressure regulating valve RV4.
- Open SV15 for 5 seconds to prime the operating slide.
- Open SV16 for 15 seconds to close the bowl.
- Open SV10 for 5 seconds to put water into the bowl.
- Feed oil to the separator at the normal flow rate by opening SV1.
- Note the pressure in the oil outlet PT4, both on the pressure gauge and in the EPC 60 display. This pressure is P min.
- Gradually close the back pressure regulating valve RV4. The pressure on PT4 will increase. The oil pressure will suddenly drop when oil passes over to the water outlet. Note the pressure of PT4 both on the pressure gauge and in the EPC 60 display. This pressure is P max.
- Open RV4.
- Stop the oil feed to the separator and note the pressure in the oil outlet. This is the delivery height pressure P del.
- Stop the heater.
- Stop the separator.
- Stop the feed pump when the heater has cooled.

8.2.1 Calculating Operating Pressure

- Calculate the normal back pressure level during operation as follows:

$$\frac{P_{\min} + P_{\max}}{2} = P_{\text{normal}}$$

- Calculate the value for low pressure alarm setting (Pr 11) as follows:

$$\frac{P_{\min} + P_{\text{normal}}}{2} = P_{\text{low press.}}$$

- Calculate the value for high pressure alarm setting (Pr 10) as follows:

$$\frac{P_{\text{normal}} + P_{\max}}{2} = P_{\text{high press.}}$$

Adjust the back pressure to P_{normal}

Set P154 to give alarm at pressure *decreasing* below the $P_{\text{low press.}}$ value.

Set P153 to give alarm at pressure *increasing* above the $P_{\text{high press.}}$ value.

9 Shut-down and Storage

Storage before Installation

If the separation system is stored before installation, the following safeguards must be taken:

Storage period	1 < 6 months	≥6 months	See
Action before storage			
Protect from dust, dirt, water, etc.	X	X	This chapter
Protect with anti-rust oil	X	X	This chapter
Action before installation			
Inspection service		X	<i>Service manual</i>
Overhaul service		X	<i>Service manual</i>

9.1 Shut-down after Use

If the separation system is going to be shut down for a period of time, the following safeguards must be taken:

Shut-down period	1 < 6 months (stand-by)	6 – 18 months	> 18 months	See
Action before storage				
Remove bowl	X	X	X	<i>Dismantling and Assembly in the Service Manual</i>
Protect from dust, dirt, water, etc.	X	X	X	This chapter
Protect with anti-rust oil	X	X	X	This chapter
Inspection service		X	X	<i>Service manual</i>
Overhaul service			X	<i>Service manual</i>

9.2 Protection and Storage

All system equipment, both the separator and the ancillary equipment, must be stored indoors at 5 – 55°C, if not delivered in water-resistant box for outdoor storage.

If there is a risk for condensation of water, the equipment must be protected by ventilation and heating above dew point.

The following protection products are recommended:

- Anti-rust oil with long lasting effective treatment for external surfaces. The oil should prevent corrosion attacks and give a waxy surface.
- Anti-rust oil (Dinitrol 40 or equivalent) thin and lubricating for inside protection. It gives a lubricating transparent oil film.
- Solvent, e.g. white spirit, to remove the anti-rust oil after the shut-down.
- Moist remover to be packed together with separator equipment.
- If the storage time exceeds 12 months, the equipment must be inspected every 6 months and, if necessary, the protection be renewed.

Modules

- Clean unpainted steel parts with solvent and treat external surfaces with anti-rust oil (type 112).
- If necessary, clean other equipment on the module with solvent.
- Treat the equipment with anti-rust oil by following the description above accordingly.
- Bolts, nuts and other external steel components should be treated with anti-rust oil (type 112).

Rubber Parts

- Gaskets, O-rings and other rubber parts should not be stored for more than two years. After this time, they should be replaced.

Separator

Dismantle the separator bowl and take out the O-rings. Clean the bowl with oil and reassemble without the O-rings. Place in a plastic bag with silica dessicant bags and seal the plastic bag.

Grease the spindle.

Valves, Pipes and Similar Equipment

- Components such as valves need to be cleaned with solvent and treated with anti-rust oil (type 112).
- Water pipes should be drained and treated with anti-rust oil (type 112).
- Articles made of rubber or plastics (e.g. seals) must *not* be treated with anti-rust oil.

Electric Heater

- Fill the heater with a non-corrosive lubricating oil.
- Place a number of bags of silica gel inside the connection box to absorb humidity. Steam Heater •Drain the condensed water from the steam valve and the steam trap.
- Drain all condensed water from the heater.
- Fill the oil part of the heater with a non-corrosive lubricating oil.

Pump

- Clean the pump housing outside from oil and grease with solvent.
- Protect the pump by filling it with non-corrosive lubricating oil.
- Apply anti-rust oil on the pump housing outside.
- Fill the pump screws with lubricating oil to prevent rust.

9.3 Reassembly and Start up

- Clean away the anti-rust oil with white spirit.
- Remove the silica gel bags from all modules.
- Pre-lubricate the separator spindle bearings
- If stored for 6 months or longer, perform an inspection service (including change of oil in the separator sump).
- Follow all relevant instructions in this booklet and in the Separator Manual.
- Before operating the heater:
 - Check by lifting the safety valve handle that it functions correctly.
 - Follow the start-up check list for the heater in the manufacturer's instructions.
 - For plate heat exchangers: check the bolt connections to ensure that all gaskets are tight.

NOTE

Always lubricate the bearings before start-up.

NOTE

After every start the separator must always be run continuously for a minimum of 1 hour to ensure proper lubrication.