



ARIM Messaging Program v1.0 Help



Introduction

ARIM means "Amateur Radio Instant Messaging" and the ARIM program is a host mode program for the ARDOP TNC being developed by Rick KN6KB and John G8BPQ.

When the ARDOP TNC project was announced by KN6KB I starting planning a host mode program that could take advantage of the connectionless FEC mode it offered. ARIM is the result. It is written in C and distributed as source code under the terms of the GPL 3.0 license. Developed on Ubuntu Linux, it should compile and run on any modern Linux installation (including Raspbian for Raspberry Pi). Using Microsoft Windows? No problem, ARIM will build and run in the excellent [Cygwin](#) environment for Microsoft Windows.

Alternatively, on Windows 10, ARIM can be built in the [Bash on Ubuntu on Windows](#) environment too. Either of these environments let you build and run ARIM on the same Windows host that ARDOP_Win is installed on. Compiling the source code is easy, the only build dependency beyond the standard C libraries are the ncurses and zlib development libraries.

Features include:

- Uses a CUI (character user interface), suitable for running in an SSH session and using only the keyboard for input. If running in a GUI terminal emulator, ARIM automatically resizes itself when the terminal window is resized.
- Attaches to ARDOP TNCs running on the local host or remote hosts over a TCP connection. Works with both the *ARDOP_Win* TNC and the *ardopc* TNC by G8BPQ.
- Uses .ini style configuration file for program settings.
- Allows multiple TNC configurations to be defined in the configuration file. Operator may attach or detach from any of them while ARIM is running. Each TNC has separate station and net callsign list, port name etc.
- Uses a connectionless all-text protocol layered over the ARDOP FEC mode transport, using 8-bit character encoding. Selective call is supported and data payloads are verified by a 16-bit CCIT checksum.
- Allows the operator to send an ARDOP "ping" frame to another station and view the resulting signal report.
- Allows casual keyboard-to-keyboard chat using "unproto" FEC text transmissions.
- Supports ARDOP ARQ mode both as client and as a server for keyboard to keyboard chat and access to BPQ BBSs with ARDOP ports.
- Allows file uploads and downloads in ARQ mode (both text and binary file types), with a compression option. This sends the message or file in RFC 1950 "zlib" format, using the "deflate" compression method documented in RFC 1951. The data is automatically decompressed at the receiving station to recover the original file or message.
- Displays a "calls heard list" view showing stations heard on the air, including timestamp and type of frame last heard.
- Displays a "recents list" view showing recently received messages from other stations.

- Displays a "ping history" view showing ping activity, including signal reports and timestamps, for each station for which pings have been either sent or received.
- Displays a traffic monitor view showing heard ARIM and ARDOP frames, with a 500 line scrollback buffer and optional timestamps.
- Displays a TNC command/response view allowing the operator to issue commands to the TNC and monitor its "async response" stream.
- Supports beaconing with announcement of callsign, grid square and TNC name.
- Allows the operator to send text messages addressed to a specific station callsign or net callsign.
- Confirms message receipt with short ACK frame sent by receiving station to sending station (only when message is addressed to a station call, not a net call). At the receiving station, the message is automatically stored to the inbox for later reading. At the sending station, if no ACK frame is received, the operator is prompted with a choice to either store the message to the outbox or discard it.
- Allows the operator to forward received text messages to another station or a net, or to save received text messages to a file.
- Supports query of remote stations for information such as ARIM and TNC versions, grid square, "calls heard list", "shared" text files and "dynamic" text generated by scripts.
- Displays status flags in message listing to indicate if a message has been read (R), forwarded (F) or saved to file (S).
- Allows messages to be composed "off-line" (no TNC attached) and stored to the message outbox to be sent later. After transmission messages are stored in the "sent messages" mailbox.
- Offers option for automatically purging messages from mailboxes aged beyond a specified number of days. Alternatively, this process can be invoked manually from the message listing views.
- Offers option for automatically repeating attempts to send a message if the result is a NAK or an ACK timeout, with option to progressively "downshift" to a more robust FEC mode each time.
- Offers option for sending "pilot pings" in advance of attempts to send a message or query, or to initiate an ARQ session. If the destination station fails to respond to the pilot pings, the transaction is abandoned to prevent tying up the channel when propagation is poor or the destination station is off the air. In this case, the operator is prompted with a choice to either store the message to the outbox or to discard it.
- Offers options for separate message traffic logging and debug trace logging with automatic daily log rotation.
- Offers convenient menu driven control of TNC's FEC mode and frame repeat count settings.
- Includes text file reader for files in the shared files directory as well as the *arim.ini* configuration file.

The ARIM program is a work in progress and I am interested in feedback. I monitor the [ARDOP Users](#) group at groups.io and can be reached there, or at the [arim-ham](#) Yahoo group where files and other information will be posted.

[The ARIM Screen Layout](#)

[Configuration](#)

[Press 'h' for Help](#)

[Press 'f' to set FEC mode and repeat count](#)

[Press <ESC> to abort send or receive](#)

[Sending commands to the TNC](#)

[Color Coded Display Option](#)

[Rig Control/PTT](#)

[Press 'r' to toggle the Recents view](#)

[Press 't' to toggle the timestamp format](#)

[Scrolling back the Monitor View](#)

[Viewing and changing TNC settings](#)

[Downloading and Installing](#)

[Attaching to a TNC](#)

[Press 'p' to toggle the Ping History view](#)

[Press 'n' to clear new message and file counters](#)

[Using the command line](#)

[Pinging another station](#)

[Using Pilot Pings](#)

[ARQ: Sending messages to the remote station](#)

[ARQ: Uploading files to the remote station](#)

[FEC: Composing a message \(to outbox\)](#)

[FEC: Working with sent messages](#)

[FEC: Retrieving files from another station](#)

[Working with the shared files viewer](#)

[Logging](#)

[ARQ: Connecting to a remote station](#)

[ARQ: Reading files from the remote station](#)

[FEC: Sending an unproto message](#)

[FEC: Working with the message inbox](#)

[FEC: Reading messages](#)

[FEC: Using message send repeats](#)

[Reading files](#)

[ARQ: Sending queries to the remote station](#)

[ARQ: Downloading files from the remote station](#)

[FEC: Sending a message \(to TNC\)](#)

[FEC: Working with the message outbox](#)


[FEC: Querying another station for information](#)

[FEC: Beaconing](#)

[Serving dynamic files](#)

The ARIM Screen Layout

The ARIM screen is divided into different sections. Some of these can host more than one "view". The current view is identified by the title at the bottom of these sections.

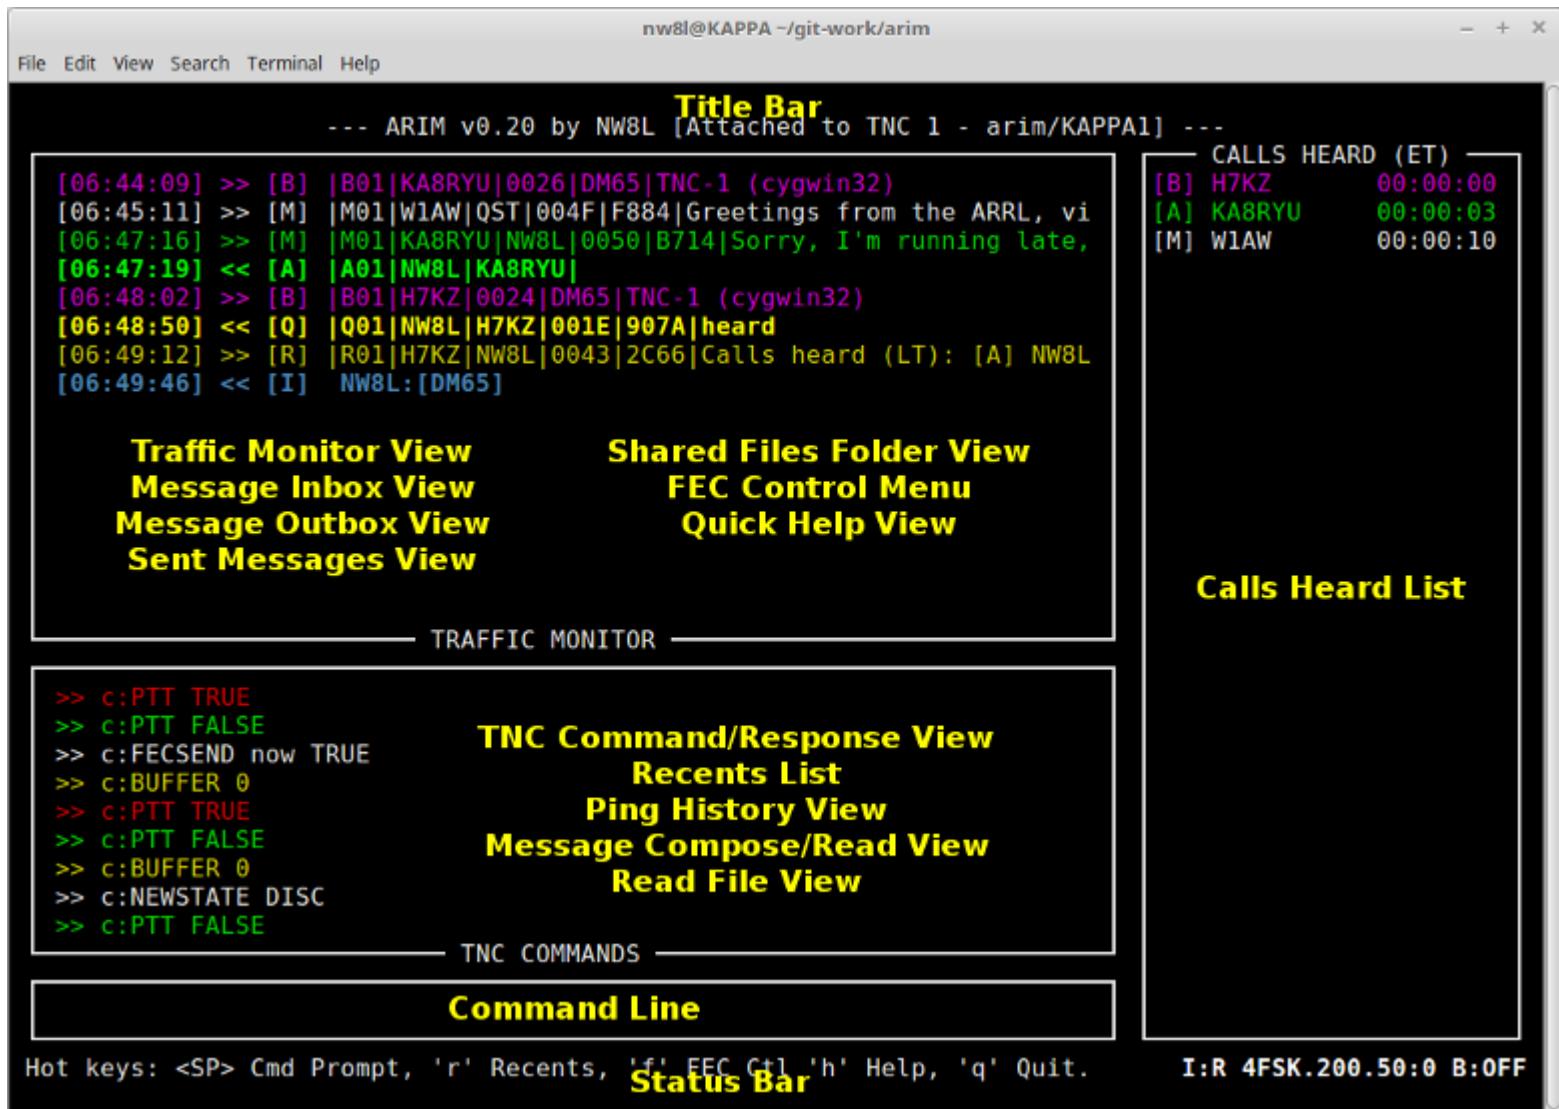

- **Title Bar** This includes:
 - Date and time
 - ARIM version
 - TNC attach status
 - Key TNC parameter data in format **L:v E:v**
Where **L** means "[listen](#)", **E** means "[enpingack](#)" and **v** is either **T** for TRUE or **F** for FALSE.
 - New message and file counters (press 'n' to clear)
- **Traffic Monitor View** This usually displays inbound and outbound ARIM and ARDOP frames. The different frame types are identified by a letter code:

- [B] indicates an ARIM beacon frame.
- [M] indicates an ARIM message frame.
- [Q] indicates an ARIM query frame.
- [R] indicates an ARIM response frame.
- [A] indicates an ARIM ACK frame.
- [N] indicates an ARIM NAK frame.
- [I] indicates an ARDOP ID frame.
- [P] indicates an ARDOP PING frame.
- [p] indicates an ARDOP PINGACK frame.
- [U] indicates an "unproto" (non-ARIM) ARDOP FEC frame.
- [@] indicates an ARDOP ARQ frame.
- [E] indicates a bad ARDOP frame.
- [!] indicates a bad ARIM frame.

The direction of data flow is shown by the << (outbound) and >> (inbound) arrows. A 500 line scrollback buffer allows review of past traffic. Outbound frames sent from ARIM to the TNC are printed in bold text to make them stand out. To enable timestamping of frames in the monitor view set the **mon-timestamp** parameter in the **[ui]** section of the [**arim.ini**](#) configuration file to TRUE. This area is also used for:

- Listing the message inbox contents in response to the **li** command.
- Listing the message outbox contents in response to the **lo** command.
- Listing sent messages in response to the **ls** command.
- Listing shared files in response to the **lf** command.
- Displaying the FEC Control Menu in response to the 'f' hot key.
- Displaying the Help contents in response to the 'h' hot key.

Any of these secondary views can be closed by pressing the 'q' key. When view titles are enabled these views will be identified by their title at the bottom of the monitor view area.

- **TNC Command/Response View** This usually displays the stream of TNC async responses when attached, together with any commands sent to the TNC by the ARIM program, or by the operator. The operator can send TNC commands by pressing SP for the command prompt, and entering the command prefixed by the ! (bang) character. The direction of data flow is shown by the << (outbound) and >> (inbound) arrows. Outbound commands sent from ARIM to the TNC are printed in bold text to make them stand out. This area is also used for:

- Listing recently received messages. Press 'r' to open this view; press 'r' again to close it.
- Listing the TNC's ping history. Press 'p' to open this view; press 'p' again to close it.
- Composing multi-line messages in response to the 'sm' and 'cm' commands. The message is entered line by line at the command prompt and displayed here.
- Displaying messages from the inbox or outbox in response to the **rm** command.

- **Command Line** Press <SP> to open a command prompt here. Commands can be directed to the TNC (if attached) by prefixing them with the '!' character. Text prefixed with the ':' character is sent over the air as "unproto" ARDOP FEC frames if attached to a TNC. Unproto transmissions allow interoperation with stations using ARDOP Chat FEC mode. In ARQ chat mode text entered here is sent to the connected station.

- **Calls Heard List** Here are displayed the callsigns of stations heard on the air, listed in reverse chronological order (most recent first). Each entry also shows the frame type and time heard. Time heard can be either *last time* heard, indicated by "(LT)" in the list

title, or *elapsed time* since last heard, indicated by "(ET)". The format is HH:MM:SS for last time heard, and DD:HH:MM for elapsed time.

- **Status Bar** A hot key menu appears here normally but status and warning messages appear here temporarily also. At the far right is a group of status indicators. In FEC mode they are:

- **ARIM:TNC status indicator** - format is **I/B:T/R** where ARIM state is either **I** (idle) or **B** (busy) and TNC state is either **T** (transmitting) or **R** (receiving). When busy, new transmissions are blocked. However, pressing the <ESC> key when busy will cancel the current operation and return ARIM to the idle state so that a new message or query can be sent immediately.
- **FEC mode and repeat count indicators** - format is **fecmode:fcrepeat**. These can be changed by pressing 'f' to open the FEC Control Menu and selecting new values.
- **Beacon status indicator** - shows the beacon interval time in minutes, or "OFF" if disabled. Use the **btime** command to change the beacon interval time.

In ARQ mode they are:

- **Input lockout indicator** - format is **!**, displayed when the TNC is busy with a file transfer. When present, text or commands entered at the command prompt are ignored.
- **Remote station callsign** - format is **ARQ:CALL**.
- **Connection bandwidth** - format is **BW** where BW is the maximum bandwidth negotiated when the ARQ connection was made, for example **2000**.
- **TNC state indicator** - format is **S:STATE** where STATE is usually one of **ISS**, **IRS**, **IDLE** or **DISC**.

Color Coded Display Option

Color coding can be enabled by setting the **color-code** parameter in the **[ui]** section of the [**arim.ini**](#) configuration file to TRUE (the default). When enabled, elements in the traffic monitor view, calls heard list and TNC command view are color coded to highlight the different frame/command types and group related traffic flows together.

The screenshot shows a terminal window titled "nw8l@KAPPA ~/git-work/arim". The window has three main sections:

- TRAFFIC MONITOR**: Displays a log of ARIM frames. Outgoing frames from NW8L are in bold green text, and incoming frames to NW8L are in bold cyan text. Other frames are in black.
- CALLS HEARD (ET)**: A table showing calls heard with their ET (Estimated Time) in seconds. The table includes columns for Call Sign, ET, and Duration.
- TNC COMMANDS**: Displays a series of TNC command lines related to PTT and FEC settings.

At the bottom of the window, it says "Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctl 'h' Help, 'q' Quit." and "I:R 4FSK.200.50:0 B:OFF".

```

--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPA1] ---
[06:44:09] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[06:45:11] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[06:47:16] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[06:47:19] << [A] |A01|NW8L|KA8RYU|
[06:48:02] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[06:48:50] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[06:49:12] >> [R] |R01|H7KZ|NW8L|0043|2C66|Calls heard (LT): [A] NW8L
[06:49:46] << [I] NW8L:[DM65]
[06:51:17] << [M] |M01|NW8L|KA8RYU|0043|C43D|Ok, I'll be at the house
[06:51:38] >> [A] |A01|KA8RYU|NW8L|
[06:52:31] << [M] |M01|NW8L|RRNET|004F|8A94|Don't forget, we moved th
[06:53:38] >> [U] Testing unproto mode de KA8RYU
[06:54:31] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[06:55:05] << [U] It's working here all right de NW8L

TRAFFIC MONITOR

>> c:PTT TRUE
>> c:PTT FALSE
>> c:FECSEND now TRUE
>> c:BUFFER 0
>> c:PTT TRUE
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:PTT FALSE

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctl 'h' Help, 'q' Quit.      I:R 4FSK.200.50:0 B:OFF

```

The traffic monitor view and TNC command view show very different types of information so different color coding schemes are used for each. The calls heard view is just a reflection of information in the traffic monitor view and uses the same color coding conventions.

- **Traffic Monitor/Calls Heard** ARIM frame types are color coded according to frame type and the callsign to which they are addressed. This makes it possible to distinguish traffic sent to or from the TNC call or net call from other traffic. Outgoing frames are printed in a bold font to distinguish them from incoming frames.
 - **ARIM Message/Ack frames (mycall)** [M] and [A] frames sent to or from the TNC 'mycall' callsign are colored green.
 - **ARIM Message frames (netcall)** [M] frames sent to or from a TNC 'netcall' callsign are colored cyan. This makes net traffic stand out in the traffic monitor view.

- **ARIM Query/Response frames** [Q] and [R] frames sent to or from the TNC 'mycall' callsign are colored **yellow**.
- **ARIM Nak frames** [N] frames sent to or from the TNC 'mycall' callsign are colored **red**.
- **ARIM Beacon frames** [B] frames sent or received from *any station* are colored **magenta**.
- **ARIM Error frames** [!] frames addressed to a TNC 'mycall' or 'netcall' callsigns are colored **red**.
- **ARDOP ID frames** [I] frames sent or received from *any station* are colored **blue**.
- **ARDOP PING/PINGACK frames** [P]/[p] frames sent to or from the TNC 'mycall' callsign are colored **blue**.
- **ARDOP Error frames** [E] frames sent or received from *any station* are colored **red**.
- **Other frames** All other monitored frames are colored white. This includes various ARDOP frame types (e.g. ARQ frames) and ARIM frames not addressed to the TNC callsign or net callsign.
- **TNC Commands** TNC commands are distinguished by function and direction of travel. This makes it easier to follow the interactions between the ARIM host program and the TNC and recognize TNC state changes announced in the asynchronous response stream.
 - **Commands from Host to TNC** These are bolded and colored **cyan**.
 - **Asynch Responses from TNC** These are color coded as follows:
 - PTT TRUE async responses are colored **red**.
 - PTT FALSE async responses are colored **green**.
 - BUFFER status async responses are colored **yellow**.
 - BUSY status async responses are colored **magenta**.

Downloading and Installing

The prerequisite for ARIM is the ARDOP TNC. Two versions are available: *ardopc* for Linux and *ARDOP_Win* for the Windows.

- **Starting with v1.0, ARIM is compatible with ARDOP TNC versions 1.0.2 and higher ONLY.** Note that ARDOP TNC versions 1.0.2 and higher are NOT interoperable with previous ARDOP TNC versions.
- **If upgrading from ARDOP TNC version 0.9.5, check your *arim.ini* file!** Make sure that 'fecmode' parameters in the [tnc] sections don't reference one of the FEC modes deleted in ARDOP TNC v1.0.2:
 - 8FSK.200.25, 4FSK.200.50
 - 16FSK.500.25S, 16FSK.500.25
 - 4FSK.1000.100, 4PSK.1000.167, 8PSK.1000.167
 - 4FSK.2000.100, 4PSK.2000.167, 8PSK.2000.167

Information about downloading and installing the ARDOP TNCs is found here:

[ardopc TNC for Linux Operating Systems](#)

[ARDOP_Win TNC \(part of the ARDOP Chat installation\) for Windows Operating Systems](#)

To download the ARDOP Chat installer you must be a member of the [ARDOP Users group](#) at groups.io. The installer is found in the Files area of the group.

If you plan to run ARIM in the Cygwin environment on Windows, then Cygwin must be installed first. The installer for this is found on the [Installing and Updating Cygwin Packages](#) page. The [Cygwin Walkthrough and Beginner's Guide](#) may be helpful in getting started.

If you plan to run ARIM in the Bash on Windows environment on Windows, then the Windows Subsystem for Linux must be installed first. [How to Install and Use the Linux Bash Shell on Windows 10](#) describes installation and use of Bash on Windows. Microsoft publishes a helpful [Bash on Windows FAQ](#) which is part of their official [Bash on ubuntu on Windows](#) site.

When using Cygwin, you will work in the Cygwin Terminal. A shortcut to the Cygwin Terminal should be placed on your Windows desktop by the Cygwin installer.

When using Bash on Windows, you will work in the Bash Terminal launched by the "Bash on Ubuntu on Windows" Start Menu item.

Next, you need to either build ARIM from source or download a "portable" precompiled binary package.

- To build from source, download the source code tarball:

[Current ARIM Version 1.0 source code and help file](#)

Enter this command:

```
tar xzvf arim-1.0.tar.gz
```

to unpack the *arim-1.0* directory. This contains source code files and other information including build instructions and this help file.

To compile and install ARIM, change directory to *arim-1.0* and enter these commands:

```
./configure  
make  
sudo make install (Linux)  
or  
make install (Cygwin)
```

This installs the *arim* executable, *arim(1)* and *arim(5)* man pages, and additional documentation including this help file. The *arim(1)* man page documents *arim* command line options and the *arim(5)* man page documents the *arim.ini* configuration file (use the command `man 5 arim` to read it).

To compile from sources you need the GNU compiler, *gcc*, the *make* utility and the *ncurses* and *zlib* development libraries and headers. The *INSTALL* file included with the source distribution contains detailed instructions for installing these and building ARIM from source.

To run ARIM, enter:

```
arim
```

at the command prompt. The first time ARIM runs it will create a directory named *arim* in your home directory containing data files and a model *arim.ini* configuration file. It also contains three subdirectories: *files* for shared files, *doc* with symbolic links to documentation including this Help file, and *log* for log files. Once created, the contents of the *arim* directory will not be overwritten by subsequent installations of ARIM or deleted if ARIM is uninstalled. The links in the *doc* directory will always point to the most recently installed documentation files.

To configure ARIM, open the [*arim.ini*](#) file in a text editor and edit as needed. You must define at least one TNC by setting callsigns, the grid square locator, and TNC IP address and port number.

- If editing the file in Windows, use a text editor that understands the Unix text file format, like *Wordpad* or the freeware text editor *Programmer's Notepad*.
- On Cygwin (and Bash on Windows), 'localhost' may not work as the address for an ARDOP_Win instance running on the same Windows PC. Use the IP address of the Windows host instead, e.g. "192.168.1.54". This can be discovered by running *ipconfig* from the command line in the Cygwin terminal (or the Bash on Windows terminal).
- If you prefer to install precompiled "portable" versions of ARIM, here are download links for 32 and 64-bit Ubuntu Linux (and derivatives like Linux Mint), Raspbian (on Raspberry Pi), and 32 and 64-bit Cygwin for Windows:

[Current Version 1.0 binary and help file \(32-bit Ubuntu Linux\)](#)

[Current Version 1.0 binary and help file \(64-bit Ubuntu Linux\)](#)

[Current Version 1.0 binary and help file \(Raspbian on Raspberry Pi\)](#)

[Current Version 1.0 binary and help file \(32-bit Cygwin on Windows\)](#)

[Current Version 1.0 binary and help file \(64-bit Cygwin on Windows\)](#)

Download the one you need and enter this command:

```
tar xzvf filename
```

to unpack the *arim-1.0* directory. This contains the executable file, data files and a model *arim.ini* file. It also contains three subdirectories: *files* for shared files, *doc* with copies of documentation files including this help file, and *log* for log files. The *arim-1.0* directory can be copied anywhere (e.g. a USB flash stick) and ARIM run from it locally, so it's called the "portable" installation. It's self-contained, with messages, shared files and log files moving with the directory if it's relocated.

To run ARIM, change directory to *arim-1.0* and enter:

```
./arim
```

The ". /" preceding the file name tells the system to run the copy of arim located in the current directory.

To configure ARIM, open the [*arim.ini*](#) file in a text editor and edit as needed. You must define at least one TNC by setting callsigns, the grid square locator, and TNC IP address and port number.

- If editing the file in Windows, use a text editor that understands the Unix text file format, like *Wordpad* or the freeware text editor *Programmer's Notepad*.
- On Cygwin (and Bash on Windows), 'localhost' may not work as the address for an ARDOP_Win instance running on the same Windows PC. Use the IP address of the Windows host instead, e.g. "192.168.1.54". This can be discovered by running *ipconfig* from the command line in the Cygwin terminal.

Run arim with the --help option to print out command line options:


```
Usage: arim [OPTION]
-v, --version      print version information
-f, --config-file FILE  use configuration file FILE
-p, --print-conf FILE  print configuration file listing to FILE
-h, --help          print this option help message
```

Configuration

By default, ARIM reads an "ini" format configuration file named *arim.ini* at startup. If you are using the portable binary ARIM distribution, this file is located in the same *arim-1.0* directory containing the ARIM executable file and data files. If you compiled and installed ARIM from the source distribution, this file is located in the *arim* data directory in your home directory. To override the default configuration file location, run arim with the --config-file command line option, for example:

```
arim --config-file /home/nw8l/HF/arim-net.ini
```

Here is an example configuration file:

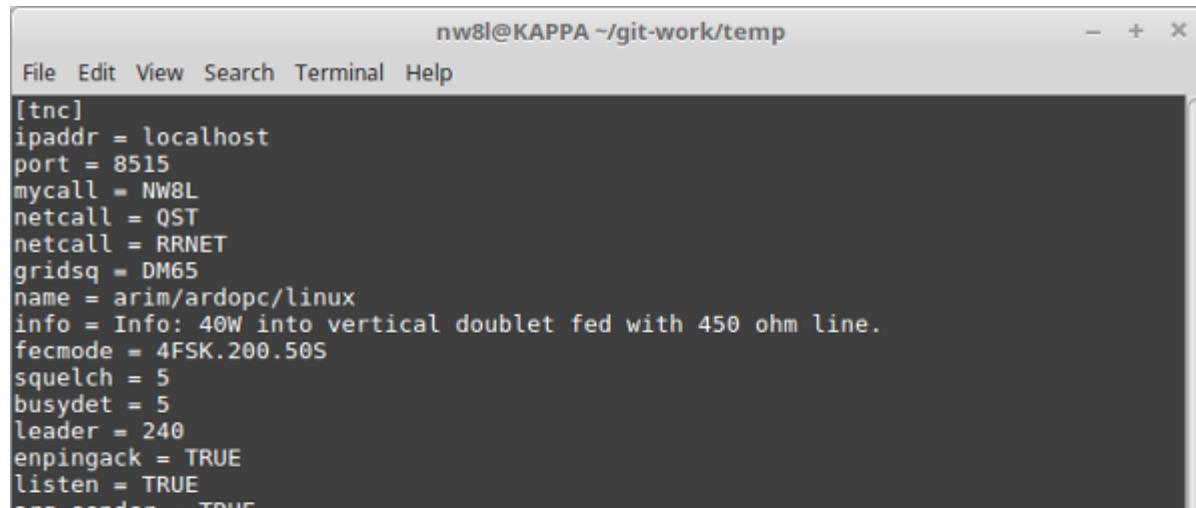

The screenshot shows a terminal window titled "nw8l@KAPPA ~/git-work/temp". The window contains the following configuration file content:

```
[tnc]
ipaddr = localhost
port = 8515
mycall = NW8L
netcall = QST
netcall = RRNET
gridsq = DM65
name = arim/ardopc/linux
info = Info: 40W into vertical doublet fed with 450 ohm line.
fecmode = 4FSK.200.50S
squelch = 5
busydet = 5
leader = 240
enpingack = TRUE
listen = TRUE
arp_sender = TRUE
```

```

arq-select = TRUE
arq-timeout = 120
arq-bandwidth = 500MAX
btime = 0
reset-btime-on-tx = FALSE
# In this section mycall is to be the call sign you want to
# use as the From: call in messages sent to other stations.
[arim]
mycall = NW8L
send-repeats = 0
ack-timeout = 30
fecmode-downshift = FALSE
frame-timeout = 30
pilot-ping = 0
pilot-ping-thr = 60
# path to shared files root directory, absolute or relative
files-dir = files/
# additional shared files directory, path relative to files-dir
add-files-dir = net-info/*
max-file-size = 5000
max-msg-days = 0
# dynamic files are defined as alias:command
dynamic-file = date:date
#dynamic-file = spwxfc:python forecast.py
# Set debug-log to TRUE to turn on the debug log. Normally
# set to FALSE unless you need to diagnose a problem.
[log]
debug-log = FALSE
# Set last-heard-time to control format of timestamps in the Calls Heard
# list and Ping History view. Set to CLOCK for last time heard in HH:MM:SS
# format, or to ELAPSED for elapsed time in DD:HH:MM format. Set utc-time
# to TRUE for UTC or FALSE for local time.
[ui]
last-time-heard = CLOCK
show-titles = TRUE
mon-timestamp = TRUE
color-code = TRUE
utc-time = TRUE
# More info at: http://www.whitemesa.net/arim/arim.html#conf
# or in the arim-help.pdf file included in this distribution.
arim.ini[utf-8,unix][text]
"arim.ini" 89L, 2666C written

```

61,88/89 97%

Multiple TNCs can be defined. A subset of the ARDOP TNC parameters are initialized here, but these can be overridden from the TNC command line after the program starts. Most options have reasonable default values which are used if they are not found in the .ini file.

- **[tnc]** Each TNC is configured in a separate [tnc] section. The first [tnc] section in the file defines port 1, the second port 2, and so on. The limit is 10 TNC definitions.
 - **ipaddr** The IP address of the TNC, either in "dotted quad" numerical form or a host name e.g. "localhost" or "DELL-1520.example.net". Max length for host names is 253 characters. Default: localhost. NOTE: on Cygwin, 'localhost' may not work as the address for an ARDOP_Win instance running on the same Windows PC. Use the IP address of the Windows

host instead, e.g. "192.168.1.54", as discovered by running ipconfig in the Cygwin terminal. Set this address in the ARDOP_Win TNC "Virtual TNC Setup" dialog box as well.

- **port** The TCP port on which the TNC is listening. Default: 8515.
- **mycall** The station callsign, e.g. NW8L or NW8L-4, max length 10 characters. Call must be no longer than 7 characters and may have optional SSID in ranges: -A to -Z or -0 to -15. ARIM will respond to queries and messages addressed to this call. Messages will be stored in the inbox. Default: NOCALL.
- **netcall** A net callsign, e.g. RRNET, max length 10 characters. Any printable characters are allowed. When sending a message to this call, no ACK is expected. When receiving, ARIM will recognize messages addressed to this call and store them in the inbox but no ACK will be returned to prevent channel congestion. ARIM will not respond to queries addressed to the net call. Starting with ARIM v0.27, up to 8 net callsigns may be defined for a TNC. Default: one netcall, QST.
- **gridsq** The station's grid square locator. It must be a well formed Maidenhead locator, either 4, 6 or 8 characters long. Examples: DM65 or DM65qf or DM65qf15. Letter pairs are not case-sensitive. Default: DM65.
- **btime** The beacon interval time in minutes, or 0 to disable the beacon. Max time is 999 minutes. Default: 0.
- **reset-btime-on-tx** Control whether or not the beacon timer is reset when the station transmits an ARDOP frame. This is useful to prevent beacon transmissions from interfering with traffic between stations, e.g. on a net. This setting has no effect when the beacon is disabled. Set to TRUE to enable beacon timer reset on transmit, FALSE to disable it. Default: FALSE.
- **pname** A name assigned to the TNC and advertised by the beacon, e.g. RRNET/ARIM. This is also returned when the TNC receives the ARIM 'pname' query. Max length is 31 characters. Default: Empty.
- **info** Information describing the TNC, returned in response to the 'info' query. Use the character pair \n to indicate a line break if you want to format the text into multiple lines; this will be converted to a newline character in the response. Max length is 127 characters. Default: Empty.
- **fecmode** The initial ARDOP FECMODE. This is the frame type, in the format *modulation.bandwidth.baudrate*. Max length is 20 characters. Default: 4FSK.200.50S.
- **fecrepeats** The initial ARDOP FECREPEATS value. This is the number of times each FEC frame will be repeated by the sender. This may be useful when propagation is poor, but at the cost of reduced throughput - depending on FEC mode, an ARIM frame may extend across multiple ARDOP FEC frames, each of which will be repeated. Max value is 5. Default: 0.
- **fecid** The initial ARDOP FECID value, which controls whether or not an ARDOP ID frame is sent by the TNC at the start of FEC transmissions. Set to TRUE to enable FECID, FALSE to disable it. Default: FALSE.
- **leader** The initial ARDOP LEADER time in msec. The leader is a special 50 baud two tone signal which precedes data transmission, used by the receiving TNC for synchronization. This may need to be adjusted to compensate for loss of leader due to delays in PTT or VOX keying or audio path latencies in some SDR radios. Range is 120-2500. Default: 240.
- **trailer** The initial ARDOP TRAILER time in msec. Range is 0-200. Non-zero trailer time is only needed for certain SDR radios and is a function of the audio processing latency relative to release of PTT. For these cases try a value of 100-200 msec. Default: 0.
- **squelch** The initial ARDOP SQUELCH setting. This controls the sensitivity of the TNC's leader detector. Lower values mean greater sensitivity but also greater risk of false triggering. Range is 1-10. Default: 5.
- **busydet** The initial ARDOP BUSYDET setting. This controls the sensitivity of the TNC's busy detector. Lower values mean greater sensitivity but also greater risk of false triggering. Setting the value to 0 disables the busy detector. The busy detector should be disabled only in an emergency situation or in very high local noise environments. Range is 0-10. Default: 5.
- **listen** Control whether or not the TNC listens for ARQ connect requests or pings from other stations. Set to TRUE to enable listening, FALSE to disable it. Default: TRUE.

- **enpingack** Control whether or not the TNC responds to pings from other stations. Set to TRUE to enable ping ACKs, FALSE to disable them. Default: TRUE. Note: works only with ARDOP TNC version 0.9.5 or higher.
- **arq-bandwidth** Set the ARQ connection bandwidth, either a maximum negotiated value, or a forced value. The value must be one of: 200MAX, 500MAX, 1000MAX, 2000MAX, 200FORCED, 500FORCED, 1000FORCED or 2000FORCED. Default is 2000MAX.
- **arq-timeout** The inactivity timeout for ARQ connections in seconds. Range is 30-600. Default: 120.
- **arq-sendcr** Control whether or not CRLF line endings are sent in ARQ mode, instead of Unix style LF endings. Set to TRUE to send CR, FALSE to send only LF. Default: TRUE.
- **[arim]** This section holds settings for the ARIM messaging protocol.
 - **mycall** The callsign used as the "from" address for messages. Default: NOCALL.
 - **send-repeats** The number of times an ARIM message will be repeated in the absence of an ACK response from the recipient. It is recommended that this value not exceed 3 to prevent tying up the channel with repeats in poor conditions. Default: 0.
 - **ack-timeout** The maximum time in seconds after sending a message that ARIM will wait for an ACK before repeating it. Applies when **send-repeats** is not 0. Max is 999 seconds. Default: 30.
 - **fecmode-downshift** Control whether or not the FEC mode is progressively "downshifted", or changed to a more robust mode each time an ARIM message is repeated after a NAK or ACK timeout. Set to TRUE to enable, FALSE to disable downshifting. Default: FALSE.
 This works in tandem with the 'send-repeats' parameter. If 'fecmode-downshift' is TRUE and 'send-repeats' is nonzero, then progressively more robust FEC modes are used for re-transmissions after a NAK or timeout. The strategy is to move to the next member of the same modulation family that uses less bandwidth. The mode of last resort is 4FSK.200.50S. For example, if the initial mode is 4PSK.1000.100, then downshifting would progress to 4PSK.500.100, then 4PSK.200.100, and so on. The original FEC mode is restored after the message send operation completes. This is experimental. There are many kinds of channel impairments and no single downshift strategy is best for all. For details look at the FEC mode downshift table in the *arim_proto.c* source code file.
 - **frame-timeout** The time in seconds after which an incomplete ARIM frame will be abandoned and the receive buffer cleared. Because an ARIM frame may be spread over many ARDOP frames, a failure to receive one or more ARDOP frames will cause an ARIM timeout. Max is 999 seconds. Default: 30.
 - **files-dir** The directory in which files available for other stations to read are located. This can be an absolute path or a relative path rooted in the ARIM working directory and must be terminated with a '/' character. Max length is 255 characters. Default: files/
 - **add-files-dir** Specifies an additional shared files directory accessible to remote stations. This must be a path relative to the shared files root directory specified by the **files-dir** parameter. By default, only files in the shared files root directory may be listed or downloaded, and any directories it contains are hidden. If you need to share files organized into multiple directories, use one or more **add-files-dir** parameters to expose them. For example:
`add-files-dir = forms/`
 This allows limited access to the *forms* directory in the shared files root directory. A remote station may list, read or download the files it contains, but any subdirectories are hidden. To grant full access to a directory, including the hierarchy of subdirectories rooted there, append the '*' wildcard character to the end of the path. For example:
`add-files-dir = contests/*`
 This grants full access to the *contests* directory in the shared files root directory. This exposes not only the files in *contests*,

but also the hierarchy of subdirectories rooted there. Subdirectories such as `contests/2016` or `contests/2016/June` are visible, and a remote station may list and download the files they contain. Max length is 255 characters. NOTE: you may define no more than 16 **add-files-dir** parameters. Default: None.

- **max-file-size** The maximum size of files that can be transferred in an ARIM message. The output of the **flist** query is filtered in accordance with this limit. To disable access to shared files, set this to 0. Max is 16384 bytes. Default: 4096.
- **max-msg-days** The maximum age, in days, for messages to be kept in the inbox, outbox and sent messages mailbox. Messages that exceed this limit are automatically purged whenever the corresponding message viewer is opened in ARIM (using the 'li', 'lo' or 'ls' commands). Set to 0 to disable the automatic message purge feature. Default: 0.
- **dynamic-file** A dynamic file definition of the form `alias:command` where `alias` is a "dummy" file name used to invoke the command `command`, with a colon ':' separating the two, for example:

```
spwxfc:python /home/nw8l/scripts/forecast.py
```

Use absolute paths to script files when ARIM is built from source and installed. Relative paths can be used for "portable" binary installations where the script files are contained in same directory as the `arim` executable file. Dynamic files are used to return the output of a script or system command in response to a file query. `alias` must be unique among any other dynamic file definitions and file names in the shared files root directory. In response to the query `sq file alias`, `command` will be executed in a shell and its output returned in the response. `command` can be a batch file, a script invocation like `python myscript` or a system command like `date` or `uname -a`. The output size in bytes is limited by the **max-file-size** parameter. Errors generated by dynamic file scripts are written to a file named `dyn-file-error-YYYYMMDD.log` in the `log` directory. Max length is 128 characters. NOTE: you may define no more than 16 **dynamic-file** parameters. Default: None.

- **pilot-ping** The number of times a *pilot ping* will be repeated in the absence of a PINGACK response from the recipient. It is recommended that this value not exceed 3 to prevent tying up the channel with repeats in poor conditions. Set to 0 to disable pilot pings; otherwise the range is 2-15. Default: 0.
- **pilot-ping-thr** When pilot pings are enabled, this is the threshold by which signal reports from the target station are judged. If the reported constellation quality is above the threshold, the message (or query) send proceeds; if below this threshold it is canceled. It is recommended that this value be 60 or higher; choose a threshold suitable for the FEC mode in use. Min is 50, Max is 100. Default: 60.

- **[log]** Logging settings appear in this section.

- **debug-log** Set to TRUE to enable debug logging, FALSE to disable it. Default: FALSE.
- **traffic-log** Set to TRUE to enable traffic logging, FALSE to disable it. Default: TRUE.

- **[ui]** User interface settings appear in this section.

- **color-code** Set to TRUE for color coding of items in the traffic monitor view, calls heard list and TNC command view according to the scheme discussed in the [Color Coded Display](#) section. Set to TRUE to enable, FALSE to disable color coding. Default: TRUE.
- **show-titles** Set to TRUE to show titles for all views (panes) in the UI, FALSE to hide them. Default: TRUE.
- **last-time-heard** Selects the timestamp format used in various views. Set to CLOCK to indicate time station was last heard, in HH:MM:SS format (either local time or UTC). Set to ELAPSED to indicate elapsed time since station last heard, in DD:HH:MM format. Default: CLOCK.
- **mon-timestamp** Set to TRUE to enable timestamps in the traffic monitor view. Set to FALSE to disable them. Default: FALSE. Prior to version 0.12 this was located in the **[arim]** section.
- **utc-time** Selects the time zone used for timestamps in the UI and log output, and for the clock in the title bar. Set to TRUE for UTC, and FALSE for local time. Default: TRUE.

Rig Control/PTT

The ARIM program has no rig control features! It depends on the rig control features embedded in the ARDOP TNC.

- **ARDOP_Win:** Choose "Optional Radio Setup" from the File menu. This opens the "Radio Settings" dialog where you may configure rig control. Be sure to check the "Enable TNC Control of Radio or PTT" box at the bottom of the dialog.
- **ardopc:** Starting with version 0.8.3.1-BPQ ardopc supports PTT. According to the announcement:

I've added hardware PTT to this version. All support PTT via the RTS line on a serial port, and the PI version also supports PTT on PI pin 11 (GPIO Pin 17). This is enabled by adding a 4th parameter to the ardopc command line, e.g.

```
./ardopc 8515 hw:1,0 hw:0,0 GPIO  
./ardopc 8515 hw:1,0 hw:0,0 /dev/ttyUSB0  
ardop_ptc 5 0 0 com1
```

I use VOX on my rig and it seems that Signalink cards work too. In both cases the VOX hold or SignaLink DLY must be set to minimum.

Attaching to a TNC

Make sure the ARDOP TNC is running. Press the spacebar to open the command prompt.



Enter the **att** command, a space and the TNC number, e.g. **att 1**. The TCP connection will be made and initialization commands from the program to the TNC will scroll by in the TNC Command view. The title bar will display the number and name of the attached TNC.

To detach from the TNC, open the command prompt and enter the **det** command.

Press 'h' for Help

Press the 'h' hot key to open the Help viewer.

nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

--- ARIM v0.24 by NW8L [Attached TNC 1: arim/KAPPA] [L:T E:T] ---

ARIM Quick Help - press 'q' to quit.

--- Press <ESC> to abort data transmission in progress. ---
----- Press <CTRL-X> to disconnect from ARQ session. -----

Hot keys:

Press 'r' to open the Recents view.
Press 'p' to open the Ping History view.
Press 'f' to open the FEC Control menu.
Press 'h' to open this Help view.
Press 't' to toggle timestamp format (UTC/Elapsed Time).

Press Spacebar to access interactive command line:
Type in the command and press ENTER to execute it.
To correct mistakes, use the LEFT, RIGHT, HOME, END,

ARIM QUICK HELP

<< C:LISTEN FALSE
>> c:LISTEN now FALSE
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
<< C:PROTOCOLMODE FEC
>> c:PROTOCOLMODE now FEC
<< C:LISTEN TRUE
>> c:LISTEN now TRUE

TNC COMMANDS

Scanning: UP DOWN PAGEUP PAGEDOWN HOME END, 'q' to quit.

I:R 4FSK.200.50:0 B:OFF

Here is a listing of all hot keys and commands. Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll the contents. Press 'q' to quit.

Press 'r' to toggle the Recents view

Press the 'r' hot key to toggle on the Recents view.

File Edit View Search Terminal Help nw8l@KAPPA ~/git-work/arim

--- ARIM v0.27 by NW8L [Attached TNC 1: arim/KAPPA1][L:T E:T] ---

[13:27:07] >> [B] B01 KA8RYU 0024 DM65 arim/ARDOP_Win	CALLS HEARD (LT)
[13:27:41] >> [M] M01 W1AW QST 0053 D014 Greetings from the ARRL, visit our	[R] H7KZ 13:34:35
[13:28:12] >> [M] M01 KA8RYU NW8L 004C 1909 Sorry, I'm running late, I'll ca	[M] KA8RYU 13:28:12
[13:28:15] << [A] A01 NW8L KA8RYU	[M] W1AW 13:27:41
[13:33:54] >> [B] B01 H7KZ 0022 DM65 arim/ARDOP_Win	
[13:34:14] << [Q] Q01 NW8L H7KZ 001E 907A heard	
[13:34:35] >> [R] R01 H7KZ NW8L 0044 47A3 Calls heard (ET): [A] NW8L 0	

TRAFFIC MONITOR

[1] From H7KZ Sat Jun 24 13:34:35 2017 To NW8L 47A3 ---
[2] From KA8RYU Sat Jun 24 13:28:12 2017 To NW8L 1909 ---

RECENT MESSAGES

--

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'p' Pings,'f' FEC Ctrl, 'h' Help, 'q' Quit. I:R 4FSK.200.50:0 B:OFF

This is a listing of headers for messages recently received. They are numbered in reverse chronological order (most recent first). Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll the contents. Press 'r' to toggle the Recents view off. Headers contain the following information, from left to right:

- **Message number**, most recent first.
- **Sending station callsign**
- **Date and time**
- **Destination station callsign**
- **Checksum** 16-bit CRC, in hexadecimal format.
- **Status flags** where R means *read*, F means *forwarded*, S means *saved* and - means *flag not set*.

To read messages from the Recents list, press the spacebar to open the command prompt and enter the command **rr nbr**, where *nbr* is the message number. This opens the message viewer.

The screenshot shows the ARIM v0.20 message viewer window. The title bar reads "nw8l@KAPPA ~/git-work/arim". The menu bar includes File, Edit, View, Search, Terminal, and Help. The main window has several sections:

- TRAFFIC MONITOR:** Displays a log of messages:

```
[16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[17:02:18] << [A] |A01|NW8L|KA8RYU|
[17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
```
- CALLS HEARD (LT):** Displays a list of calls heard:

CALLS	HEARD (LT)
[R] H7KZ	17:04:00
[M] KA8RYU	17:02:16
[M] W1AW	17:00:38
- Message Content:** A message from KA8RYU to NW8L:

```
From: KA8RYU
To: NW8L

Sorry, I'm running late, I'll call you when I get in.
```
- READ RECENT:** Shows "2" recent messages.
- Status Bar:** Displays "Msg: [2] 6 lines - use UP, DOWN keys to scroll, 'q' to quit" and "I:R 4FSK.200.50:0 B:OFF".

The message number and size in lines are shown in the Status Bar. Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the message. Press 'q' to quit the message viewer and return to the Recents view.

Press 'p' to toggle the Ping History view

Press the 'p' hot key to toggle on the Ping History view.

The screenshot shows the ARIM v0.21 software window. At the top, the title bar reads "nw8l@KAPPA ~/git-work/arim". Below the title bar is a menu bar with "File", "Edit", "View", "Search", "Terminal", and "Help".

The main window area has three sections:

- TRAFFIC MONITOR**: A large section containing a log of radio communications. It includes messages from stations like W1AW, KA8RYU, and H6KZ, along with system status messages such as "We seem to have a good path".
- PING HISTORY (LT)**: A section at the bottom left showing recent pings. It lists stations H6KZ, KA8RYU, and W1AW with their most recent signal reports.
- CALLS HEARD (LT)**: A section on the right side showing stations heard by the TNC. It lists H6KZ, KA8RYU, and W1AW with their last received times.

At the bottom of the window, a message displays "Hot keys: <SP> Cmd Prompt, 'r' Recents, 'p' Pings, 'f' FEC Ctrl, 'h' Help, 'q' Qui I:R 4FSK.200.50:0 B:OFF".

Here is a listing of signal reports resulting from ARDOP pings sent to other stations by the TNC or from pings sent to the TNC by other stations. The history shows a line for each remote station, sorted in reverse chronological order (most recent on top). Each line includes, from left to right:

- The callsign of the remote station
- The most recent report from that station to the TNC, showing signal-to-noise ratio, the constellation quality and a timestamp
- The most recent report to that station from the TNC, showing signal-to-noise ratio, the constellation quality and a timestamp

Press 't' to toggle the timestamp format between elapsed time or the clock time.

Press 'f' to set FEC mode and repeat count

Press the 'f' hot key to open the FEC Control Menu.

```
File Edit View Search Terminal Help
nw8l@KAPPA ~/git-work/arim
Nov 30 15:47 ARIM v1.0 [Attached TNC 1: arim/KAPPA][L:T E:T]
FEC Control Menu - press [key] to select
or 'q' to quit
-----
FSK Modes:          PSK Modes:
[a] 4FSK.200.50S   [f] 4PSK.200.100S
[b] 4FSK.500.100S  [g] 4PSK.200.100
[c] 4FSK.500.100   [h] 8PSK.200.100
[d] 4FSK.2000.600S [i] 4PSK.500.100
[e] 4FSK.2000.600  [j] 8PSK.500.100
                           [k] 4PSK.1000.100
QAM Modes:          [l] 8PSK.1000.100
[w] 16QAM.200.100   [m] 4PSK.2000.100
[x] 16QAM.500.100   [n] 8PSK.2000.100
[y] 16QAM.1000.100
[z] 16QAM.2000.100
----- FEC CONTROL MENU -----
>> BUFFER 0
>> NEWSTATE DISC
<< LISTEN FALSE
>> LISTEN now FALSE
<< PROTOCOLMODE FEC
>> PROTOCOLMODE now FEC
<< LISTEN TRUE
>> LISTEN now TRUE
>> INPUTPEAKS -4924 4916
----- TNC COMMANDS -----
Calls Heard (LT) New:5M,0F
[M] W1AW 15:47:15
[M] KA8RYU 15:44:38
----- I:R 4PSK.200.100:0 B:OFF
Scrolling: UP DOWN PAGEUP PAGEDOWN HOME END, 'q' to quit.
```

Press a key to select one of the options. All FEC modes are listed here, as well as options to set the FEC frame repeat count to either 0, 1, 2 or 3. Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll the menu contents. Press 'q' to quit. Note that these are ARDOP settings; the ARIM message repeat count found in the [arim.ini](#) configuration file is a different thing. The ARDOP FEC repeat count affects all FEC transmissions by the TNC.

NOTE: In all views, the current FEC mode and repeat count are indicated in the status bar, to the left of the beacon time indicator. The format is `fecmode:fecrepeat`. In this example we see mode `4PSK.200.100` and a repeat count of 0 (the default).

Press 't' to toggle the timestamp format

Press the 't' hot key to switch the timestamp format between:

- Time last heard (LT) in format HH:MM:SS.
- Elapsed time since last heard (ET) in format DD:HH:MM.

This affects the timestamps shown in the Calls Heard list, Ping History, Traffic Monitor and Recent Messages views.

Press 'n' to clear the new message and file counters

Press the 'n' hot key to clear the new message and new file counters, located on the right-hand side of the Title Bar.



If either counter is non-zero you'll be prompted to confirm the operation:



Press 'y' to proceed or 'n' to cancel. The counters increment when a new message or file is received. They are helpful as indicators of activity during periods of unattended operation. Note that files received in FEC mode are encapsulated in a message or query response frame, so the message counter is incremented, not the file counter. New messages are listed in the convenient [Recent Messages](#) view; press 'r' to toggle this on and off. New message and file counter values are lost when the program is closed.

Press <ESC> to abort send or receive

Sometimes it's necessary to abort a transmission in progress or halt a receive operation instead of waiting for it to time out. To do this press the <ESC> key to cancel the operation and return ARIM to the idle state. When transmitting, this makes the TNC stop sending, flushes the transmit buffer, and cancels any pending [message repeats](#). When receiving (or waiting for) an ARIM frame the time out counters are reset and any pending response is canceled, making the TNC available for a new send operation immediately. A confirmation message will appear briefly on the Status Bar and the Busy/Idle indicator will reflect the change.

In ARQ mode, pressing the <ESC> key to abort a connection results in a "dirty disconnect". Use CTRL-X to attempt a clean disconnect before resorting to <ESC>.

Scrolling back the Monitor View

A 500 line scrollback buffer allows review of past traffic. Press the UP or DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME or END keys to start scrolling.

The screenshot shows a terminal window titled "nw8l@KAPPA ~/git-work/arim". The window is divided into several sections:

- TRAFFIC MONITOR:** Displays a log of messages from various stations (QSL, R01, H7KZ, NW8L, KA8RYU, M01, W1AW) with timestamps and message content.
- CALLS HEARD (ET):** A table showing stations heard and their last contact time.
- TNC COMMANDS:** A list of commands sent to the TNC, including PTT toggling and buffer management.
- Status Bar:** Shows "Scrolling: UP DOWN PAGEUP PAGEDOWN HOME END, 'c' to cancel." and "I:R 4FSK.200.50:0 B:OFF".

The status bar is updated to indicate that scrolling is active. This state persists unless you stop using the movement keys for more than 30 seconds or press 'c' to cancel. Until then the view won't auto-scroll to the end when new traffic is posted.

Using the command line

Open the program and press the spacebar to open the command prompt.



```
Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.
```

There are multiple uses for the command line.

- **TNC commands** These are prefixed with the '!' character and are sent directly to the TNC e.g. !SENDID
- **Unproto messages** These are prefixed with the ':' character and are sent out over the air as raw ARDOP FEC frames, rather than being formatted as an ARIM message; e.g. :Hello John
- **ARQ chat** In ARQ chat mode text entered here is sent out over the air to the connected station.
- **ARIM commands** These manage TNCs, beacons, shared files and messages.
 - TNC commands
 - **att** *nbr* Attach to a TNC. *nbr* indicates the TNC number.
 - **det** Detach from the currently attached TNC.
 - **btime** *nbr* Set the beacon interval time and start it. *nbr* indicates the beacon interval in minutes, setting it to '0' disables beaconing.
 - **btest** Test the beacon.
 - **srpts** *nbr* Set the number of times a message send will be repeated in the absence of an ACK response from the recipient. Setting it to '0' disables send repeats.
 - **ackto** *nbr* Set the message ACK timeout in seconds.
 - **fecds** *TRUE or FALSE* - Enable or disables FEC mode downshifting when repeating messages.
 - **srset** Open a pop-up dialog showing the current message send repeat settings.
 - **mycall** *call* Set the TNC callsign to *call*.
 - **netcall add** *call* Add net callsign *call* to the list.
 - **netcall del** *call* Delete net callsign *call* from the list.
 - **gridsq** *loc* Set the grid square locator to *loc*.
 - **pname** *name* Set the TNC (port) name to *name*. This appears in ARIM beacon frames.
 - **listen** *TRUE or FALSE* - Control whether or not the TNC listens for ARQ connect requests or pings from another station.
 - **enpingack** *TRUE or FALSE* - Control whether or not the TNC responds to pings from another station. Works with ARDOP TNC version 0.9.5 or higher.
 - **tncset** Open a pop-up dialog showing the current TNC settings.
 - Ping commands
 - **ping** *call nbr* Send ping to remote station *call*. *nbr* is the number of pings to be sent to *call* in the absence of a response; it must be in the range 2-15.
 - **pping** *nbr* Enable/disable the ARIM *pilot ping* feature. If enabled, ARDOP pings are sent in advance of a message or query transmission to check if the RF path to the target station is adequate. The signal report contained in the PINGACK response is compared to the *pilot ping threshold* setting and the transmission of the message or query proceeds only if the reported signal constellation quality meets or exceeds the threshold; otherwise it is canceled. *nbr* sets the number of ping repeats sent in the absence of a response from the target station; it must be in the range 2-5. If *nbr* is 0, pilot pings are disabled.

- **ppthr** *nbr* Set the ARDOP signal constellation quality threshold for the pilot ping feature. This must be in the range 60-100.
- **ppset** Open a pop-up dialog showing the current pilot ping settings.
- ARQ mode commands
 - **conn** *call nbr* Initiate ARQ connection with remote station *call*. *nbr* is the number of connect requests to be sent to *call* in the absence of a response; it must be in the range 2-15.
 - **arqto** *nbr* Set the ARQ connection inactivity timeout. *nbr* is the time in seconds.
 - **arqbw** *bw* Set the ARQ connection bandwidth. This can be a *maximum negotiated* value or a *forced* value (no negotiation). *bw* is a specifier which must be one of: 200MAX, 500MAX, 1000MAX, 2000MAX, 200FORCED, 500FORCED, 1000FORCED or 2000FORCED.
 - **arqset** Open a pop-up dialog showing the current ARQ settings.
- Messaging commands at main prompt
 - **sm** *call [msg]* Send message to station *call*. The message text may follow the callsign, but if not given then the message composer opens for input. If attached to a TNC the message is sent over the air; if not it is stored in the outbox for sending later.
 - **cm** *call* Compose message for station *call*. The message composer opens for input. When done the message is stored in the outbox for sending later.
 - **sq** *call query* Send query *query* to station *call*. See the [Query another station for information](#) topic for a list of supported queries. Station *call* will return a message containing the requested information which is stored in the message inbox.
- Message viewer commands
 - **li** Open the message inbox view.
 - **lo** Open the message outbox view.
 - **ls** Open the sent message view.
 - **rm** *nbr* Read message number *nbr* in the message viewer. Only available in the message listing views.
 - **rr** *nbr* Read recent message number *nbr* in the message viewer. Only available in the recent messages view.
 - **fm [-z] nbr call** Forward message number *nbr* to station *call*. In ARQ mode *only*, the optional -z switch compresses the message to minimize transfer time. Only available from the message inbox and sent messages views when attached to a TNC.
 - **sv** *nbr fname* Save message *nbr* to file *fname*. *fname* can be an absolute path like /home/nw8l/foo.txt or a relative path like foo.txt or files/foo.txt. Relative paths are relative to the ARIM working directory (the current directory when arim was invoked). Only available in the message inbox and sent messages views.
 - **sm [-z] nbr** Send message number *nbr* to destination station. In ARQ mode *only*, the optional -z switch compresses the message to minimize transfer time. Only available from the message outbox viewer when attached to a TNC.
 - **km** *nbr* Kill (delete) message number *nbr*. Only available in the message listing views.
 - **pm** *nbr* Purge (delete) all messages older than *nbr* days. Only available in the message listing views.
 - **cf** *nbr flag* Clear flag *flag* on message number *nbr*. *flag* is one of R (read), F (forwarded), S (saved) or * (all flags). Only available in the message listing views.
- Shared files viewer commands
 - **lf** Open the shared files viewer.
 - **rf** *nbr* Read file number *nbr* in the file reader. Only available in the shared files viewer.

- **sf *nbr call*** (FEC Mode) Send file number *nbr* to station *call*. Only available in the shared files viewer.
- **sf [-z] *nbr [dir]*** (ARQ Mode) Send file number *nbr* to the remote station. The optional -z switch compresses the the file to minimize transfer time. The optional *dir* parameter specifies the destination directory at the remote station, which is a path relative to the shared files root directory. Only available in the shared files viewer.
- **ri** Read the *arim.ini* configuration file. Only available in the shared files viewer.
- **cd *nbr*** Open directory number *nbr* and list its files. Only available in the shared files viewer.
- ARQ mode messaging commands at main prompt
 - **/sm [-z] [*msg*]** Send message to the connected station. The -z option compresses the message to minimize transfer time. The message text may follow, but if not given then the message composer opens for input.
- ARQ mode file transfer commands at main prompt
 - **/flist [*dir*]** Return a list of shared files and directories. *dir* is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB. If *dir* is not given, then the the shared files root directory is listed; otherwise the specified directory is listed. By default only files in the shared files root directory and "dynamic" files are listed. Subdirectories are not listed unless they are made visible by an *add-files-dir* configuration file parameter.
 - **/file *fn*** Print a file to the traffic monitor view. *fn* is the name of a file in the shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log
 - **/fget [-z] *fn [> dir]*** Download a file to the local station. The -z option compresses the file to minimize transfer time. *fn* is the name of a file in the remote station's shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log. The optional *dir* parameter specifies the destination directory at the local station, relative to the shared files root directory, e.g. contests/2016. The destination directory must made visible by an *add-files-dir* configuration file parameter at the local station. If *dir* is not specified, the file is stored in the *download* subdirectory in the local station's shared files root directory. ARIM will create the destination directory if it doesn't already exist.
 - **/fput [-z] *fn [> dir]*** Upload a file to the remote station. The -z option compresses the file to minimize transfer time. *fn* is the name of a file in the local station's shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log. The optional *dir* parameter specifies the destination directory at the remote station, relative to the shared files root directory, e.g. contests/2016. If *dir* is not specified, the file is stored in the *download* subdirectory in the remote station's shared files root directory. The destination directory must made visible by an *add-files-dir* configuration file parameter at the remote station. ARIM will create the destination directory if it doesn't already exist.
- Housekeeping commands
 - **clrmon** Clear the Traffic Monitor view
 - **clrheard** Clear the Calls Heard view
 - **clrrec** Clear the Recent Messages view
 - **clrping** Clear the Ping History view

Basic line editing features are available on the command prompt. The left and right arrow keys, HOME, END, DEL and backspace keys work as expected. This makes it easy to correct mistakes in typing, whether a entering a command or composing a message. For those familiar with the Emacs style line editing in Linux: CTRL-A, CTRL-E, CTRL-F, CTRL-B, CTRL-D, CTRL-K and CTRL-U can be used instead.

The command prompt has a history buffer which holds the last 15 unique commands entered. Use the UP and DOWN keys to browse command history when you want to reuse a previously sent command. For those familiar with Linux command history navigation, the

CTRL-P and CTRL-N keys can be used instead.

Sending commands to the TNC

A TNC must be attached. Press the spacebar to open the command prompt.



Prefix the message with the '!' character. Press ENTER to send the command to the TNC. The command trace will appear in the TNC command view, followed by the TNC's response if it was a query. To set a TNC parameter, follow the command with the parameter, e.g. **!CWID TRUE**. To query a TNC parameter, send the command without any argument, e.g. **!CWID**. Complete control over the TNC is available using this interface. ARDOP TNC commands are documented in the *Host Interface Spec for the ARDOP TNC* by Rick Muething, KN6KB and available in the files area of the ARDOP users group at groups.io.

Viewing and changing TNC settings

TNC parameters are set in the [**tnc**] section of the [*arim.ini*](#) configuration file and loaded when attaching to a TNC. However, some of these settings can be modified on-the-fly from the ARIM command prompt with these commands:

- **mycall** Set the TNC callsign. Useful for testing or changing SSID quickly. Example: mycall NW8L-4
- **netcall add** Add a net callsign to the list. Useful for testing or quick net changes. Example: netcall add RRNET
- **netcall del** Delete a net callsign from the list. Useful for testing or quick net changes. Example: netcall del RRNET
- **gridsq** Set the grid square locator, which is contained in ARIM beacon frames. Example: gridsq DM65qf
- **pname** Set the TNC name, which is advertised in ARIM beacon frames, and also returned in response to the ARIM 'pname' query. Example: ARIM/ardopc
- **listen** Control whether or not the TNC responds to ARQ connect requests or pings. Value must be TRUE or FALSE. Example: listen
- **enpingack** Control whether or not the TNC responds to pings from another station. Works with ARDOP TNC version 0.9.5 or higher.
- **tncset** Open a pop-up dialog showing the TNC settings including IP address, port number, and other parameters. Example: tncset

```
ARDOP TNC SETTINGS

ip addr: localhost      port: 8515
mycall: NW8L           gridsq: DM65
fecid: FALSE          fecrepeats: 0
squelch: 5            busydet: 5
leader: 240            trailer: 0
listen: TRUE           enpingack: TRUE
pname: arim/KAPPA/ardopc
netcall 1: QST         netcall 2: RRNET
netcall 3:              netcall 4:
netcall 5:              netcall 6:
netcall 7:              netcall 8:
version: ARDOP TNC_0.9.5.7-BPQ

[0]k
```

To change one of these, press the spacebar to open the command prompt and enter the command like this:

```
netcall RRNET

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctl 'h' Help, 'q' Quit.
```

The change will be confirmed by a message on the Status Bar. When in doubt, use the tncset command to check settings.

Pinging another station

A TNC must be attached. Press the spacebar to open the command prompt and enter the ping command like this:

```
ping KA8RYU 3

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'p' Pings, 'f' FEC Ctl, 'h' Help, 'q' QUIT
```

The format is `ping call nbr`. The ping repeat count must follow the target callsign. This is the number of times the PING packet will be sent in the absence of a response from the target station before the TNC "gives up". The minimum repeat count is 2 and the maximum is 15. Ping transmissions and responses are displayed in the monitor view. The reponse will include a signal report including the signal-to-noise ratio and a constellation quality figure ranging from 0-100%.

Using Pilot Pings


Pilot pings are an experimental option which take advantage of the new PING and PINGACK frame types introduced in ARDOP v0.9.5. The PINGACK response to a PING sent to a remote station includes a signal report with signal-to-noise and constellation quality numbers, making it possible for a station to learn how it is being heard by other stations.

Pilot pings are ARDOP PING frames automatically sent in advance of an ARIM message or query transmission or ARQ connect request to test the RF path to the target station. If the signal constellation quality report from the target station meets a preset threshold, the message transmission proceeds; if not then it is canceled. This prevents hopeless attempts at message transmission from tying up the frequency in marginal conditions. The PING/PINGACK cycle is very short compared to the length of a typical FEC message transmission so the additional overhead is low, but the potential improvement in efficiency of channel use is high. Pilot pings are never sent in advance of ARIM messages directed to the net call. These parameters control pilot ping behavior:


- **pilot-ping** The number of times a pilot ping will be repeated in the absence of a response from the recipient. It is recommended that this value not exceed 3 to prevent tying up the channel with repeats in poor conditions. Set to 0 to disable pilot pings; otherwise the range is 2-5. Default: 0.
- **pilot-ping-thr** When pilot pings are enabled, this is the threshold by which signal reports from the target station are judged. If the reported constellation quality is above the threshold, message (or query) transmission proceeds; if below this threshold it is canceled. It is recommended that this value be 60 or higher; choose a threshold suitable for the FEC mode in use. Min is 50, Max is 100. Default: 60.

These parameters are set in the **[arim]** section of the [*arim.ini*](#) configuration file, but can also be modified on-the-fly from the ARIM command prompt so that the operator can adapt to changing conditions. Here are the commands you can use from the command prompt:

- **pping** Set the number of times the pilot ping will be repeated in the absence of a response from the target station. Value must be in the range 2-5. Setting it to '0' disables pilot pings. Example: pping 3
- **ppthr** Set the pilot ping signal report quality threshold. Value must be in the range 60-100. Example: ppthr 75
- **ppset** Open a pop-up dialog showing the pilot ping settings. Example: ppset

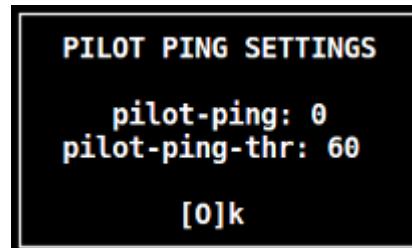

To change one of these, press the spacebar to open the command prompt and enter the command like this:

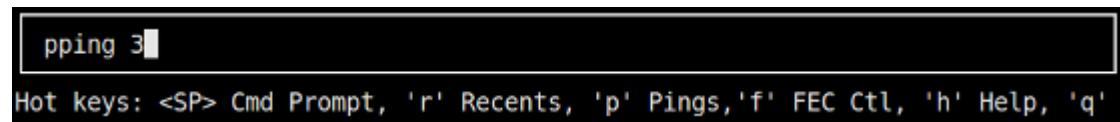

The change will be confirmed by a message on the Status Bar. When in doubt, use the ppset command to check settings.

ARQ: Connecting to a remote station

ARIM can act as an ARQ client or server, interoperating with ARDOP Chat or another ARIM station for keyboard to keyboard chat. ARIM may also be used as an ARQ client to connect to a BPQ BBS with a ARDOP port.

A TNC must be attached. Press the spacebar to open the command prompt and enter the conn command like this:

```
conn KA8RYU 5
Hot keys: <SP> Cmd Prompt, 'r' Recents, 'p' Pings, 'f' FEC Ctl, 'h' Help,
```

The format is `conn call nbr` where *call* is the callsign of the target station, and *nbr* is the request repeat count. This is the number of times the ARQCALL packet will be sent in the absence of a response from the target station before the TNC "gives up". The minimum repeat count is 2 and the maximum is 15. Connect requests and responses are displayed in the monitor view.

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 04 22:26 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[22:22:36] >> [B] |B01|W1AW|0019|DM65|TNC-1
[22:23:40] >> [M] |M01|KA8RYU|NW8L|003E|A5E1|I'll be at the keyboard
[22:23:43] << [A] |A01|NW8L|KA8RYU|
[22:24:02] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:24:05] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:24:08] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:24:09] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[22:24:31] << [@] hey, are you there?
[22:24:49] >> [@] yep, what's new?
[22:25:04] << [@] I'm working on that regen receiver kit
[22:25:31] >> [@] nice, I hope it turn out ok
[22:26:00] << [@] sorry, I have to take a phone call... cul
```

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ' ARQ:KA8RYU 2000 S:IDLE

When the connection is made, ARIM will be in ARQ mode, where text entered at the command prompt is sent directly to the remote station rather than processed as an ARIM command. The line editing and history recall features of the command prompt work as usual but the '!' prefix won't work to send commands directly to the TNC, and the ':' prefix won't work to send unproto FEC transmissions.

All text sent and received will be displayed on the Traffic Monitor, and the status bar will show the callsign of the remote station, the negotiated max connection bandwidth and the current TNC state. Note: the Recent Messages and Ping History views can't be opened during an ARQ session.

The shared files, message inbox, message outbox and sent messages viewers can be opened during an ARQ session by using these hot keys:


- 'f' Open the shared files viewer.
- 'i' Open the message inbox viewer.
- 'o' Open the message outbox viewer.
- 's' Open the sent messages viewer.

These work as usual in ARQ mode. Files can be uploaded to the remote station from the shared files viewer with the **sf [-z] n [dir]** command. Previously composed messages can be sent to the remote station from the message outbox viewer with the **sm n** command. Messages can be forwarded to the remote station from the message inbox and sent messages viewers with the **fm n** commands.

To disconnect, press CTRL-X or enter the special command '/dis' at the command prompt and press ENTER.



You'll be prompted to confirm:

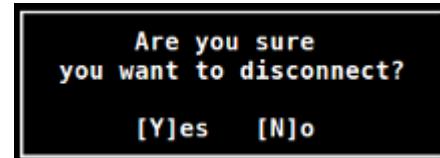

Type 'y' and a clean disconnect will be attempted.

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 04 22:27 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[22:22:36] >> [B] |B01|W1AW|0019|DM65|TNC-1
[22:23:40] >> [M] |M01|KA8RYU|NW8L|003E|A5E1|I'll be at the keyboard
[22:23:43] << [A] |A01|NW8L|KA8RYU|
[22:24:02] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:24:05] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:24:08] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:24:09] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[22:24:31] << [@] hey, are you there?
[22:24:49] >> [@] yep, what's new?
[22:25:04] << [@] I'm working on that regen receiver kit
[22:25:31] >> [@] nice, I hope it turn out ok
[22:26:00] << [@] sorry, I have to take a phone call... cul
[22:27:18] << [@] KA8RYU<NW8L (Disconnect request)
[22:27:21] >> [@] KA8RYU>NW8L (Disconnected)
[22:27:27] >> [I] ID:KA8RYU [DM65]:
```

CALLS HEARD (LT)

[I]	KA8RYU	22:27:27
[B]	W1AW	22:22:36

TRAFFIC MONITOR

```
>> c:BUFFER 0
>> c:PTT TRUE
<< C:PROTOCOLMODE FEC
<< C:LISTEN TRUE
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:PROTOCOLMODE now FEC
>> c:LISTEN now TRUE
```

TNC COMMANDS


Hot keys: <SP> Cmd Prompt, 'r' Recents, 'p' Pings, 'f' FEC Ctrl, 'h' Help, 'q' I:R 4FSK.200.50:0 B:OFF

These parameters control ARQ behavior:

- **listen** Control whether or not the TNC responds to ARQ connect requests or pings. Default: TRUE.
- **arq-bandwidth** Set the bandwidth for ARQ connections. This can be a *maximum negotiated* value or a *forced* value (no negotiation). The value must be one of: 200MAX, 500MAX, 1000MAX, 2000MAX, 200FORCED, 500FORCED, 1000FORCED or 2000FORCED. Default is 2000MAX. 60.
- **arq-timeout** Set the inactivity timeout for ARQ connections, in seconds. The value must be in the range 30 to 600. Default is 120. 60.
- **arq-sendcr** Control whether or not CRLF line endings are sent in ARQ mode, instead of Unix style LF endings. Default: TRUE.

These parameters are set in the [tnc] section of the [arim.ini](#) configuration file, but can also be modified on-the-fly from the ARIM command prompt by the operator. The following commands are available:

- **listen** Control whether or not the TNC responds to ARQ connect requests or pings. Value must be TRUE or FALSE. Example:
listen
- **arqto** Set the ARQ inactivity timeout in seconds. Value must be in the range 30-600. Example: arqto 120
- **arqbw** Set the ARQ connection bandwidth. This can be a *maximum negotiated* value or a *forced* value (no negotiation). The bandwidth must be specified as one of: 200MAX, 500MAX, 1000MAX, 2000MAX, 200FORCED, 500FORCED, 1000FORCED or 2000FORCED.Example: arqbw 500MAX
- **arqset** Open a pop-up dialog showing the ARQ settings. Example: arqset

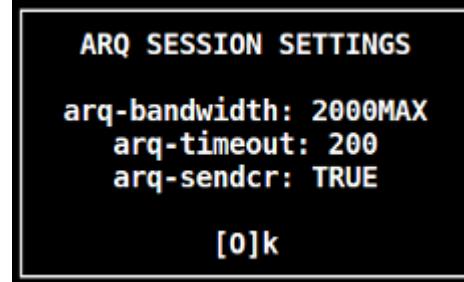

If pilot pings are enabled they will apply to ARQ connection requests, so that the RF path to the remote station can be tested in advance. If the pilot pings fail, the connection attempt will be canceled.

ARQ: Sending queries to the remote station

When connected to an ARIM station, the following query commands, prefixed by the '/' (slash) character, may be entered at the prompt to retrieve information from the remote station:

- **/version** Return the software version numbers for ARIM and the ARDOP TNC.
- **/gridsq** Return the Maidenhead locator (gridsquare).
- **/info** Return the info statement.
- **/pname** Return the port name for the TNC.
- **/heard** Return the calls heard list.
- **/netcalls** Return the net callsigns list.
- **/flist [dir]** Return a list of shared files and directories. *dir* is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB. If *dir* is not given, then the the shared files root directory is listed; otherwise the specified directory is listed. By default only files in the shared files root directory and "dynamic" files are listed. Subdirectories are not listed unless they are made visible by an *add-files-dir* configuration file parameter.
- **/file fn**, Print a file to the traffic monitor view. *fn* is the name of a file in the shared files root directory at the remote station, or a file path relative to it, e.g. contests/2016/F0BB.log.

Press the spacebar to open the command prompt and enter the command at the start of the line like this:

```
/heard
```

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox,

Here we see the response:

```
nw8l@KAPPA ~
```

File Edit View Search Terminal Help

Sep 04 22:51 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[22:49:08] >> [B] |B01|W1AW|0019|DM65|TNC-1
[22:50:08] << [P] NW8L>KA8RYU (1 of 3)
[22:50:10] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[22:50:19] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:50:22] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:50:25] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:50:27] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[22:50:42] << [@] /heard
[22:50:55] >> [@] Calls heard (LT):
[22:50:55] >> [@] [@] NW8L 22:50:23
[22:51:00] >> [@] [Q] H7KZ 22:48:23
[22:51:00] >> [@] [B] W1AW 22:47:18
[22:51:00] >> [@]
```

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ' ARQ:KA8RYU 2000 S:IRS

ARQ: Sending messages to the remote station

When connected to an ARIM station, single-line messages can be sent using the **/sm [-z][msg]** command where -z invokes compression, and *msg* is the message text. This is convenient when the message is short and you wish to bypass the message composer. Press the spacebar to open the command prompt and enter the command like this:

```
/sm Did the battery you ordered arrive yet? 73, Bob█
```

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox,

The remote station saves the message to its inbox and returns an /OK response to confirm receipt. A copy will be stored in your sent messages mailbox.

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 04 22:53 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[22:49:08] >> [B] |B01|W1AW|0019|DM65|TNC-1
[22:50:08] << [P] NW8L>KA8RYU (1 of 3)
[22:50:10] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[22:50:19] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:50:22] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:50:25] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:50:27] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[22:50:42] << [@] /heard
[22:50:55] >> [@] Calls heard (LT):
[22:50:55] >> [@] [Q] NW8L 22:50:23
[22:51:00] >> [@] [Q] H7KZ 22:48:23
[22:51:00] >> [@] [B] W1AW 22:47:18
[22:51:00] >> [@]
[22:52:53] << [@] /MPUT KA8RYU 47 AA7C
[22:53:08] << [@] Message to KA8RYU 47 of 47 bytes
[22:53:14] >> [@] /OK Message 47 AA7C saved
```

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ' ARQ:KA8RYU 2000 S:IRS

For longer, multi-line messages, press the spacebar to open the command prompt and enter the command like this:

```
/sm
```

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox,

Enter the message line-by-line at the command prompt. When done, enter /ex at the start of a new line to close the message composer view and send the message on its way.

```
nw8l@KAPPA ~
File Edit View Search Terminal Help
Sep 04 22:57 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]
[22:56:09] << [P] NW8L>KA8RYU (1 of 3)
[22:56:12] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[22:56:17] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:56:20] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:56:23] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:56:25] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
CALLS HEARD (LT)
[@] KA8RYU 22:56:25
[B] W1AW 22:49:08
TRAFFIC MONITOR
Hi Joe,
I won't get home tomorrow until late so
I'll miss the net. Can you take over for me?
Thanks and 73,
Bob
NEW MESSAGE to: KA8RYU
/ex
Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ARQ:KA8RYU 2000 S:IDLE
```

The remote station saves the message to its inbox and returns an /OK response to confirm receipt. A copy will be stored in your sent messages mailbox.

```
nw8l@KAPPA ~
File Edit View Search Terminal Help
Sep 04 22:58 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]
[22:56:09] << [P] NW8L>KA8RYU (1 of 3)
[22:56:12] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[22:56:17] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[22:56:20] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[22:56:23] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[22:56:25] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[22:57:47] << [@] /MPUT KA8RYU 112 78E2
[22:57:59] << [@] Message to KA8RYU 112 of 112 bytes
[22:58:05] >> [@] /OK Message 112 78E2 saved
CALLS HEARD (LT)
[@] KA8RYU 22:58:05
[B] W1AW 22:49:08
TRAFFIC MONITOR
>> c:NEWSTATE IRS
>> c:PTT TRUE
>> c:PTT FALSE
TNC COMMANDS
Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ARQ:KA8RYU 2000 S:IRS
```

To cancel a message you've started to send, enter **/can** at the start of a new line to close the message composer view and discard the message.

If the remote ARIM station encounters an error saving the message, it returns an **/ERROR** response and the message is discarded.

Use the **-z** option to compress the message to reduce transfer time. The message will be automatically decompressed at the receiving station before it is saved to the inbox there.

Existing messages in a local mailbox can also be sent to the remote station from one of the message viewers. During an ARQ session these are opened not by entering a command at the prompt, but by pressing a hot key:

- 'i' Open the message inbox viewer.
- 'o' Open the message outbox viewer.
- 's' Open the sent messages viewer.

Messages composed offline and stored in the outbox can be sent to the remote station. Press 'o' to open the message outbox viewer:

The screenshot shows the ARIM v0.34 software interface with the title bar "nw8l@KAPPA ~". The menu bar includes File, Edit, View, Search, Terminal, and Help. The main window is divided into several sections:

- MESSAGE OUTBOX LISTING:** Displays two entries:
 - [2] From NW8L Sun Sep 3 21:50:40 2017 To a2xx 7272 ---
 - [1] From NW8L Sun Sep 3 21:49:58 2017 To ka8ryu 5F3E ---
- CALLS HEARD (LT):** Displays two entries:
 - [@] KA8RYU 01:34:50
 - [B] W1AW 00:07:44
- TNC COMMANDS:** Displays a series of PTT status changes:

```
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
```
- PROMPT:** Shows the command "sm 2" followed by a cursor.
- PROMPT MESSAGE:** Displays "<SP> for prompt: 'rm n' read, 'km n' kill, 'sm n' send, 'cf n fl' clr flag," and the status "ARQ:KA8RYU 2000 S:IDLE".

Enter the **sm n** command to start the upload. This is a more efficient method than composing the messages during the ARQ session itself. Alternatively, use the **sm -z n** command to compress the message before it is sent. This can reduce transfer time for larger messages.

Messages in the inbox can be forwarded to the remote station. Press 'i' to open the message inbox viewer and enter the **fm n** command to start the upload. Alternatively, use the **fm -z n** command to compress the message before it is sent. This can reduce transfer time for larger messages.

Messages in the sent messages mailbox can also be forwarded to the remote station. Press 's' to open the sent messages viewer and enter the **fm n** command to start the upload. Alternatively, use the **fm -z n** command to compress the message before it is sent. This can reduce transfer time for larger messages.

If the remote ARIM station encounters an error saving the message, it returns an /ERROR response and the message is discarded.

ARQ: Reading files from the remote station

When connected to an ARIM station any shared files it offers can be listed and read in the Traffic Monitor view. Only text files and "dynamic" files with text output can be printed to the screen. Use these commands to list available files and read them:

- **/flist [dir]** Return a list of shared files and directories. *dir* is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB. If *dir* is not given, then the the shared files root directory is listed; otherwise the specified directory is listed. By default only files in the shared files root directory and "dynamic" files are listed. Subdirectories are not listed unless they are made visible by an *add-files-dir* configuration file parameter.
- **/file fn**, Print a file to the traffic monitor view. *fn* is the name of a file in the shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log

To list the files in the shared files root directory, press the spacebar to open the command prompt and enter the **/flist** command at the start of the line like this:



A screenshot of a terminal window with a black background and white text. The text '/flist' is typed into the command line. Below the command line, a status bar displays the text 'Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox,' in a smaller font.

The remote station responds:

```
[23:36:25] << [P] NW8L>KA8RYU (1 of 3)
[23:36:28] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[23:36:45] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[23:36:48] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[23:36:51] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[23:36:52] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[23:37:00] << [@] /flist
[23:37:15] >> [@] File list:
[23:37:15] >> [@]     contest-logs.zip      1669
[23:37:19] >> [@]             net-roster.txt    1822
[23:37:20] >> [@]                 test.txt      242
[23:37:20] >> [@]                 date       DYN
[23:37:24] >> [@]                 spwxfc      DYN
[23:37:24] >> [@]
```

TRAFFIC MONITOR

Choose a file, press the spacebar to open the command prompt and enter the **/file fn** command at the start of the line like this:

```
/file spwxfc
```

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox,

The file will be read:

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 04 23:15 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[23:14:57] >> [@]
[23:14:57] >> [@]
[23:15:02] >> [@] The greatest observed 3 hr Kp over the past 24 hour
[23:15:02] >> [@] Scale levels).
[23:15:02] >> [@] The greatest expected 3 hr Kp for Sep 04-Sep 06 201
[23:15:02] >> [@] Scale levels).
[23:15:03] >> [@]
[23:15:03] >> [@] NOAA Kp index breakdown Sep 04-Sep 06 2017
[23:15:03] >> [@]
[23:15:07] >> [@] Sep 04 Sep 05 Sep 06
[23:15:07] >> [@] 00-03UT 4 3 2
[23:15:07] >> [@] 03-06UT 3 2 2
[23:15:08] >> [@] 06-09UT 2 2 1
[23:15:08] >> [@] 09-12UT 2 2 1
[23:15:08] >> [@] 12-15UT 2 2 1
[23:15:08] >> [@] 15-18UT 1 2 1
```

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:STATUS BREAK received from Protocol State IDLE, new state IRS
>> c:NEWSTATE IRS
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ' ARQ:KA8RYU 2000 S:IRS

The text is printed the the Traffic Monitor view line by line as it is received.

ARQ: Downloading files from the remote station

When connected to an ARIM station any shared files it offers can be listed and downloaded. Both text and binary file types can be transferred over the ARQ connection. A compression option can be invoked to reduce transfer time for many file types, and you can specify a destination directory at the local station other than the default. Use these commands to list and download files:


- **/flist [dir]** Return a list of shared files and directories. *dir* is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB. If *dir* is not given, then the the shared files root directory is listed; otherwise the specified directory is listed. By default only files in the shared files root directory and "dynamic" files are listed. Subdirectories are not listed unless they are made visible by an *add-files-dir* configuration file parameter at the remote station.
- **/fget [-z] fn [> dir]** Download a file to the local station. The -z option compresses the file to minimize transfer time. *fn* is the name of a file in the remote station's shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log. The optional *dir* parameter specifies the destination directory at the local station, relative the the shared files root directory, e.g. contests/2016. The destination directory must made visible by an *add-files-dir* configuration file parameter at the local station. If *dir* is not specified, the file is stored in the *download* subdirectory in the local station's shared files root directory. ARIM will create the destination directory if it doesn't already exist.

To list the files in the shared files root directory, press the spacebar to open the command prompt and enter the **/flist** command at the start of the line like this:



The screenshot shows a terminal window with a black background and white text. A command-line interface is displayed. The user has typed the command **/flist** and is currently in a command prompt, indicated by the cursor position after the command. Below the command line, a message says "Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox," which is typical for many terminal emulators.

The remote station responds:

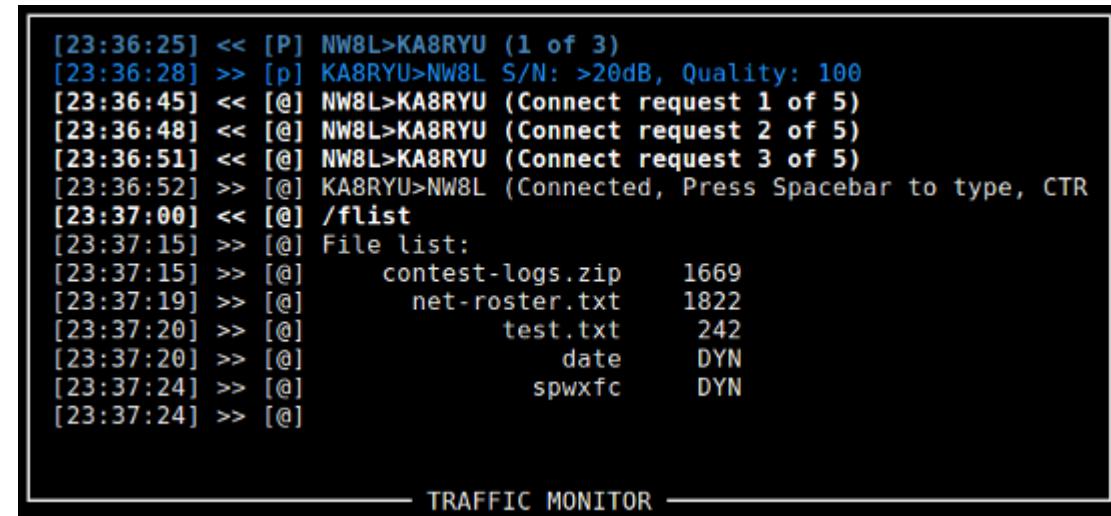

The screenshot shows the terminal window after the **/flist** command was executed. The output is as follows:

```
[23:36:25] << [P] NW8L>KA8RYU (1 of 3)
[23:36:28] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[23:36:45] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[23:36:48] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[23:36:51] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[23:36:52] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[23:37:00] << [@] /flist
[23:37:15] >> [@] File list:
[23:37:15] >> [@] contest-logs.zip      1669
[23:37:19] >> [@] net-roster.txt     1822
[23:37:20] >> [@]                 test.txt    242
[23:37:20] >> [@]                  date      DYN
[23:37:24] >> [@]                  spwxfc    DYN
[23:37:24] >> [@]
```

At the bottom of the window, there is a horizontal bar with the text "TRAFFIC MONITOR" centered.

Choose a file, press the spacebar to open the command prompt and enter the **/fget fn** command at the start of the line like this:



The screenshot shows the terminal window again, this time with the user having typed **/fget contest-logs.zip**. The user is in a command prompt, as indicated by the cursor position. Below the command line, the same hot key message is displayed: "Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox."

The download will begin:

The screenshot shows a terminal window titled "nw8l@KAPPA ~" running the ARIM v0.34 software. The window is divided into several sections:

- File list:** Shows a list of files in the current directory:

```
[23:37:00] << [@] /flist
[23:37:15] >> [@] File list:
[23:37:15] >> [@] contest-logs.zip      1669
[23:37:19] >> [@]          net-roster.txt  1822
[23:37:20] >> [@]            test.txt       242
[23:37:20] >> [@]           date        DYN
[23:37:24] >> [@]          spwxfc       DYN
[23:37:24] >> [@]
```
- TRAFFIC MONITOR:** Displays a log of received calls:

```
CALLS HEARD (LT)
[@] KA8RYU    23:39:05
[B] W1AW      22:49:08
```
- TNC COMMANDS:** Shows a sequence of PTT (Power Transistor Transistor) commands:

```
>> c:BUFFER 0
>> c:PTT TRUE
>> c:PTT FALSE
```
- Status Bar:** At the bottom, it displays "Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, 'ARQ:KA8RYU 2000 S:IDLE'".

The progress of the download is reported as each data frame is received. When it's complete an /OK response is sent to the remote station to confirm receipt. If the remote ARIM station encounters an error sending the file, it returns an /ERROR response and the download is canceled.

By default, downloaded files are stored in the *download* subdirectory in the local station's shared files root directory. ARIM will create this if it doesn't already exist.

While the download is in progress no text or commands are accepted from the command prompt. This condition is indicated by a ! character seen in the status bar indicator area:

```
! ARQ:KA8RYU 2000 S:IRS
```

To cancel the download, press CTRL-X to close the ARQ connection.

Use the **/fget -z n** command to compress the file before it is sent. This can reduce transfer time for larger files. Note that compression isn't useful for very small files, or files that are already compressed (e.g. "zip" files or many image file types). In these cases the zlib format overhead can make the file size increase, not decrease.

Use the **/fget [-z] n > dir** command to store the file to a location other than the default download directory. The *dir* parameter specifies the destination directory as a path relative to the shared files root directory at the local station, e.g. *contests/2016*. This option can be combined with the -z option.

ARQ: Uploading files to the remote station

When connected to an ARIM station local files can be uploaded to the remote station. Both text and binary file types can be transferred over the ARQ connection. A compression option can be invoked to reduce transfer time for many file types, and you can specify a destination directory at the remote station other than the default. If you do, the destination directory must be made visible by an *add-files-dir* configuration file parameter at the remote station. If not specified, the file is stored in the *download* subdirectory in the remote station's shared files root directory.

Press the 'f' hot key in ARQ mode to open the shared files viewer and locate the file you wish to send.

```
[ 1] test.txt                                242 Sep  5 00:05 2017
[ 2] contest-logs.zip                         1669 Sep  4 23:39 2017
[ 3] roster.txt                               792 Aug 26 21:45 2017
[ 4] net-sked.txt                            476 Aug 26 21:46 2017
[ 5] download                                DIRECTORY Aug 29 04:49 2017

LIST FILES: /home/nw8l/arim/files
```

To upload a file, press the spacebar to open the command prompt and enter the **sf nbr** command like this:

```
<SP> for prompt: 'cd n' ch dir, 'rf n' read, 'sf [-z] n [dir]' send, 'ri'
```

The upload will begin:

The screenshot shows the ARIM v0.34 software interface. At the top, the title bar reads "nw8l@KAPPA ~". Below it is a menu bar with File, Edit, View, Search, Terminal, and Help. The main window is divided into several panes:

- File List:** Shows a list of files and a directory structure:
 - Sep 05 00:10
 - ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]
 - [1] test.txt
 - [2] contest-logs.zip
 - [3] roster.txt
 - [4] net-sked.txt
 - [5] download
 - 242 Sep 5 00:05 2017
 - 1669 Sep 4 23:39 2017
 - 792 Aug 26 21:45 2017
 - 476 Aug 26 21:46 2017
 - DIRECTORY Aug 29 04:49 2017
- Logs:** Shows a log of received calls:

	CALLS HEARD (LT)
[@]	KA8RYU 00:08:30
[B]	W1AW 00:07:44
- TNC Commands:** Shows a list of commands sent to the TNC:

```
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE IDLE
>> c:BUFFER 0
>> c:PTT TRUE
>> c:PTT FALSE
>> c:BUFFER 1669
>> c:NEWSTATE ISS
>> c:PTT TRUE
```
- Status:** Shows the status "ARIM Busy: ARQ file upload in progress" at the bottom left and "! ARQ:KA8RYU 2000 S:ISS" at the bottom right.

Press 'q' to quit the shared files viewer.

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 05 00:49 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[00:48:31] << [P] NW8L>KA8RYU (1 of 3)
[00:48:34] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[00:48:49] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[00:48:52] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[00:48:55] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[00:48:56] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[00:49:07] << [@] /PUT contest-logs.zip 1669 DA7E
[00:49:22] << [@] contest-logs.zip 512 of 1669 bytes
[00:49:27] << [@] contest-logs.zip 1024 of 1669 bytes
[00:49:33] << [@] contest-logs.zip 1669 of 1669 bytes
[00:49:47] >> [@] /OK contest-logs.zip 1669 DA7E saved
```

CALLS HEARD (LT)

[@] KA8RYU	00:49:47
[B] W1AW	00:07:44

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
>> c:STATUS BREAK received from Protocol State IDLE, new state IRS
>> c:NEWSTATE IRS
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

```
>> c:PTT FALSE
```

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, '!' ARQ:KA8RYU 2000 S:IRS

The progress of the upload is reported as each data frame is sent. When it's complete an /OK response is received from the remote station to confirm the file was saved. If the remote ARIM station encounters an error receiving the file, it returns an /ERROR response and the upload is canceled.

Uploaded files are stored in the destination directory on the remote station. ARIM will create this if it doesn't already exist.

While the upload is in progress no text or commands are accepted from the command prompt. This condition is indicated by a ! character seen in the status bar indicator area:

! ARQ:KA8RYU 2000 S:IRS

To cancel the upload, press CTRL-X to close the ARQ connection.

Use the **sf -z n** command to compress the file before it is sent. This can reduce transfer time for larger files. Note that compression isn't useful for very small files, or files that are already compressed (e.g. "zip" files or many image file types). In these cases the zlib format overhead can make the file size increase, not decrease.

Use the **sf [-z] n dir** command to store the file to a location other than the default download directory. The *dir* parameter specifies the destination directory as a path relative to the shared files root directory at the remote station, e.g. *contests/2016*. If you do, the destination directory must be made visible by an *add-files-dir* configuration file parameter at the remote station. This option can be combined with the *-z* option.

FEC: Sending an unproto message

A TNC must be attached. Press the spacebar to open the command prompt.

```
:Hi Charlie, nice to see you here!
```

```
Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.
```

Prefix the message with the ':' character. Press ENTER to send the message out over the air as raw ARDOP FEC frames, rather than being formatted as an ARIM message. The message will appear in the monitor view tagged with the [U] indicator.

FEC: Sending a message (to TNC)


When attached to a TNC, single-line messages can be sent using the **sm call [msg]** command, where *call* is the callsign of the recipient and *msg* is the message text. This is useful when the message is short and you wish to bypass the message composer. Press the spacebar to open the command prompt and enter the command like this:

```
sm KA8RYU I'll shift to 40m at 2300 UTC.
```


```
Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.
```

The message will be sent immediately after pressing the ENTER key to complete the command. A copy will be stored in your sent messages mailbox.

For longer messages, press the spacebar to open the command prompt and enter the command like this:

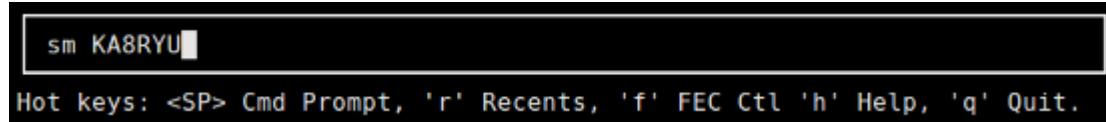

The message composer opens.

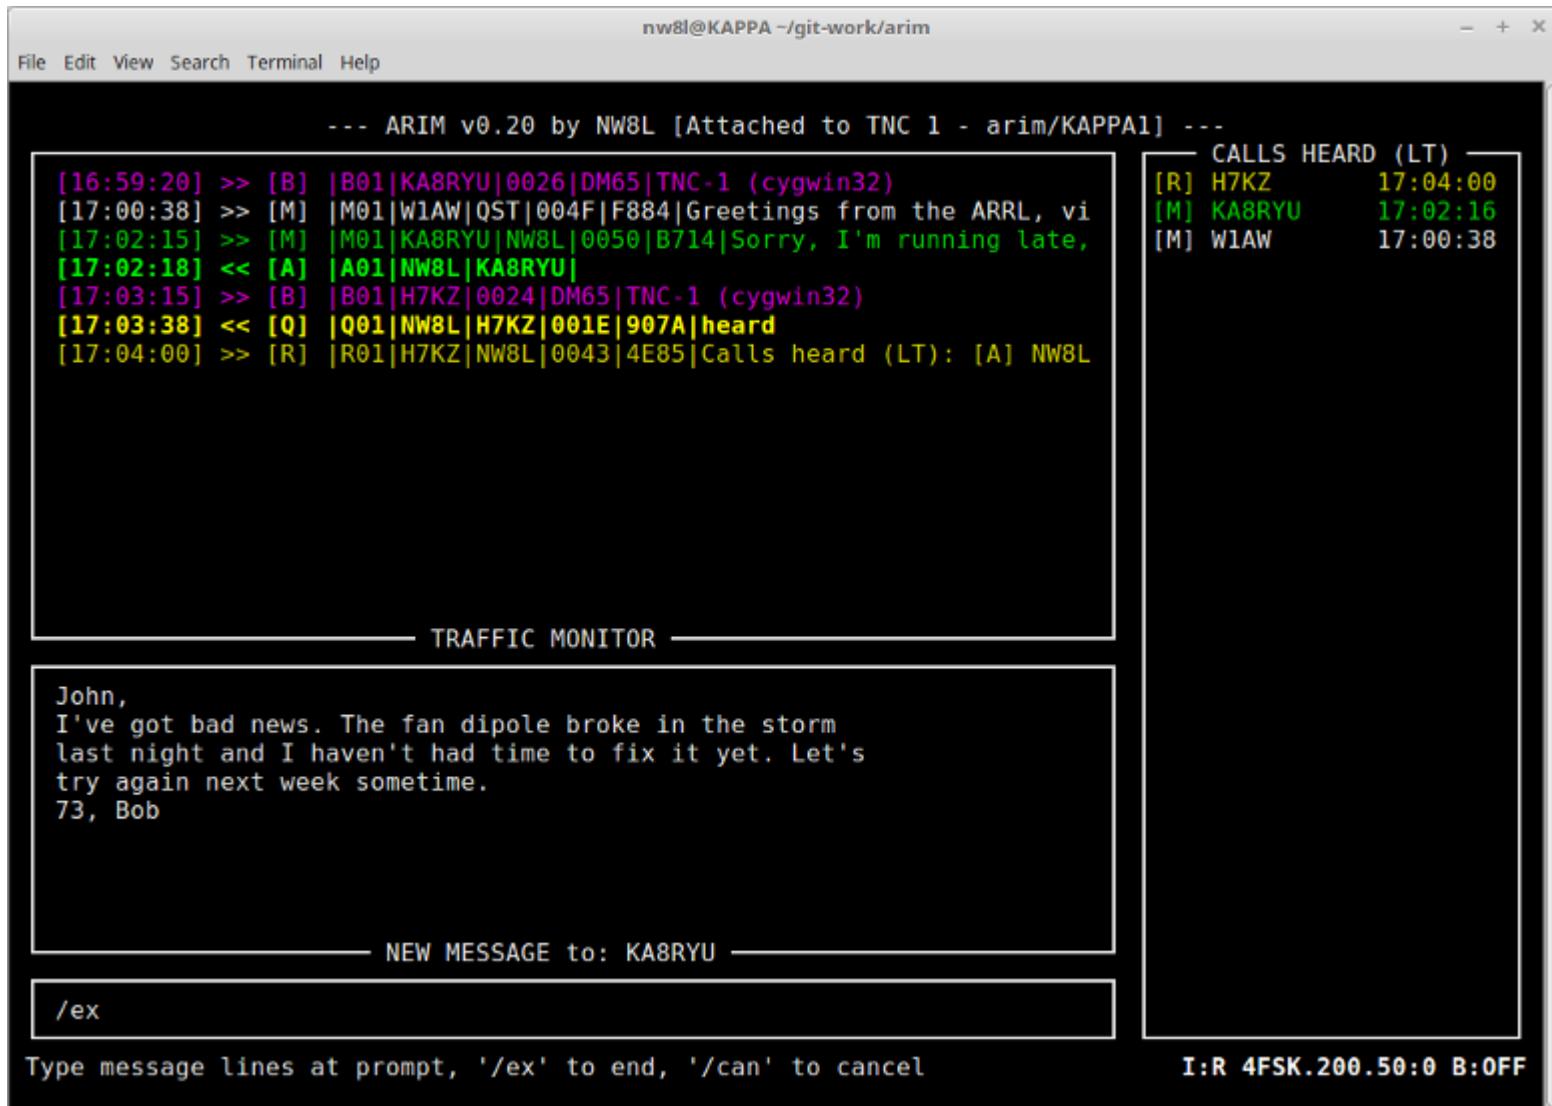

Enter the message line-by-line at the command prompt. When done, enter /ex at the start of a new line to close the message composer view and send the message on its way. A copy will be stored in your sent messages mailbox.

```
nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPA1] ---

[16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[17:02:18] << [A] |A01|NW8L|KA8RYU|
[17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
[04:15:13] << [M] |M01|NW8L|KA8RYU|00B3|9478|John, I've got bad news.
[04:17:35] >> [A] |A01|NW8L|KA8RYU|


----- TRAFFIC MONITOR -----



>> c:BUFFER 0
>> c:PTT TRUE
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:PTT FALSE
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
----- TNC COMMANDS -----



Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctl 'h' Help, 'q' Quit.      I:R 4FSK.200.50:0 B:OFF
```


The monitor view shows the outbound message and the inbound ACK from the recipient station.

To cancel a message you've started to send, enter `/can` at the start of a new line to close the message composer view and discard the message.

If the TNC is *busy* when the message is sent, the message will be stored in the outbox automatically. If the message send *fails* for some reason (NAK, ACK timeout, etc.) then this dialog will appear:



Press 'y' to store the message to the outbox, 'n' to discard it. If you cancel/ the message send then this dialog will appear:

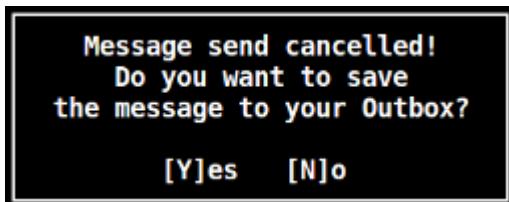

Press 'y' to store the message to the outbox, 'n' to discard it.

FEC: Composing a message (to outbox)

Whether or not attached to a TNC, messages can be composed and stored in the message outbox using the `cm call` command where `call` is the callsign of the recipient. Press the spacebar to open the command prompt and enter the command like this:



The message composer opens.

nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPA1] ---

```
[16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[17:02:18] << [A] |A01|NW8L|KA8RYU|
[17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
[04:15:13] << [M] |M01|NW8L|KA8RYU|00B3|9478|John, I've got bad news.
[04:17:35] >> [A] |A01|NW8L|KA8RYU|
```

CALLS HEARD (LT)		
[A]	NW8L	04:17:35
[R]	H7KZ	17:04:00
[M]	KA8RYU	17:02:16
[M]	W1AW	17:00:38

TRAFFIC MONITOR

Hi,
I've decided to try 7.101 from about 2300 UTC until I shut
down around 0400 UTC. 30m hasn't been good and 40m seems
quieter tonight. Hope to see you there.
73, Bob

NEW MESSAGE to: KA8RYU

/ex

Type message lines at prompt, '/ex' to end, '/can' to cancel

I:R 4FSK.200.50:0 B:OFF

Enter the message line-by-line at the command prompt, then enter **/ex** at the start of a new line to close the message composer view and send the message to the outbox. To cancel a message enter **/can** at the start of a new line. This will discard the message and close the composer view.

FEC: Working with the message inbox

Press the spacebar to open the command prompt and enter the **li** command to open the message inbox viewer.

nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

--- ARIM v0.27 by NW8L [Attached TNC 1: arim/KAPPA1][L:T E:T] ---

[3] From H7KZ Sat Jun 24 13:34:35 2017 To NW8L 47A3 ---	CALLS HEARD (LT)
[2] From KA8RYU Sat Jun 24 13:28:12 2017 To NW8L 1909 R--	[R] H7KZ 13:34:35
[1] From W1AW Sat Jun 24 13:27:41 2017 To QST D014 R-S	[M] KA8RYU 13:28:12
	[M] W1AW 13:27:41

MESSAGE INBOX LISTING

```
>> c:PTT TRUE
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:PTT FALSE
<< C:PROTOCOLMODE FEC
>> c:PROTOCOLMODE now FEC
<< C:LISTEN TRUE
>> c:LISTEN now TRUE
```

TNC COMMANDS

<SP> for prompt: 'rm n' read, 'sv n fn' save, 'km n' kill, 'fm n call' fwd, 'cf n fl I:R 4FSK.200.50:0 B:OFF'

Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the message header list. Headers contain the following information, from left to right:

- **Message number**, most recent first.
- **Sending station callsign**
- **Date and time**
- **Destination station callsign**
- **Checksum** 16-bit CRC, in hexadecimal format.
- **Status flags** where *R* means *read*, *F* means *forwarded*, *S* means *saved* and - means *flag not set*.

The following commands are available:

- **rm *nbr*** Read message number *nbr* in the message viewer.
- **km *nbr*** Kill (delete) message number *nbr*.
- **pm *nbr*** Purge (delete) all messages older than *nbr* days.
- **sv *nbr fname*** Save message *nbr* to file *fname*. *fname* can be an absolute path like `/home/nw8l/foo.txt` or a relative path like `foo.txt` or `files/foo.txt`. Relative paths are relative to the ARIM working directory (the current directory when `arim` was invoked).
- **fm *nbr call*** Forward message number *nbr* to station *call*. Only available when attached to a TNC.
- **cf *nbr flag*** Clear flag *flag* on message number *nbr*. *flag* is one of *R* (read), *F* (forwarded), *S* (saved) or *** (all flags).

Press 'q' to quit. **Note:** The automatic message purge process runs whenever this view is opened. This discards messages whose age in days exceeds the limit set by the `max-msg-days` parameter in the `[arim]` section of the [`arim.ini`](#) configuration file. Set it to `0` to disable automatic message purging. The default setting is 0.

FEC: Working with the message outbox

Press the spacebar to open the command prompt and enter the `lo` command to open the message outbox viewer.

The screenshot shows a terminal window titled "nw8l@KAPPA ~/git-work/arim". The window has a menu bar with File, Edit, View, Search, Terminal, and Help. The main area displays the ARIM software interface.

At the top, it says: "... ARIM v0.27 by NW8L [Attached TNC 1: arim/KAPPA1][L:T E:T] ...".

On the left, there is a large black rectangular area labeled "MESSAGE OUTBOX LISTING". Inside this area, the following message header is shown:

```
[ 1] From NW8L      Sat Jun 24 13:52:57 2017 To KA8RYU      51CC ...
```

To the right of this area is a smaller black rectangular box labeled "CALLS HEARD (LT)". It contains the following list of received calls:

	CALLS HEARD (LT)
[R]	H7KZ 13:34:35
[M]	KA8RYU 13:28:12
[M]	W1AW 13:27:41

Below the message listing is another black rectangular area labeled "TNC COMMANDS". It contains the following sequence of commands:

```
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
<< C:PROTOCOLMODE FEC
>> c:PROTOCOLMODE now FEC
<< C:LISTEN TRUE
>> c:LISTEN now TRUE
```

At the bottom of the window, a blue text area displays the command prompt: <SP> for prompt: 'rm n' read, 'km n' kill, 'sm n' send, 'cf n fl' clr flag, 'q' quit I:R 4FSK.200.50:0 B:OFF

Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the message header list. Headers contain the following information, from left to right:

- **Message number**, most recent first.
- **Sending station callsign**
- **Date and time**
- **Destination station callsign**
- **Checksum** 16-bit CRC, in hexadecimal format.
- **Status flags** where *R* means *read*, *F* means *forwarded*, *S* means *saved* and - means *flag not set*.

The following commands are available:

- **rm *nbr*** Read message number *nbr* in the message viewer.
- **km *nbr*** Kill (delete) message number *nbr*.
- **pm *nbr*** Purge (delete) all messages older than *nbr* days.
- **sm *nbr*** Send message *nbr* if attached to a TNC.
- **cf *nbr flag*** Clear flag *flag* on message number *nbr*. *flag* is one of *R* (read), *F* (forwarded), *S* (saved) or * (all flags).

Press 'q' to quit. **Note:** The automatic message purge process runs whenever this view is opened. This discards messages whose age in days exceeds the limit set by the **max-msg-days** parameter in the **[arim]** section of the [**arim.ini**](#) configuration file. Set it to **0** to disable automatic message purging. The default setting is 0.

FEC: Working with sent messages

Press the spacebar to open the command prompt and enter the **ls** command to open the sent message viewer.

File Edit View Search Terminal Help nw8l@KAPPA ~/git-work/arim

--- ARIM v0.27 by NW8L [Attached TNC 1: arim/KAPPA1][L:T E:T] ---

[2] From NW8L Sat Jun 24 14:03:03 2017 To KA8RYU 5C3E ...	CALLS HEARD (LT)
[1] From NW8L Sat Jun 24 14:02:17 2017 To QST B1D2 ...	[R] H7KZ 13:34:35

SENT MESSAGES LISTING

```
>> c:PTT TRUE
>> c:PTT FALSE
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:PTT FALSE
<< C:PROTOCOLMODE FEC
>> c:PROTOCOLMODE now FEC
<< C:LISTEN TRUE
>> c:LISTEN now TRUE
```

TNC COMMANDS

<SP> for prompt: 'rm n' read, 'sv n fn' save, 'km n' kill, 'fm n call' fwd, 'cf n fl I:R 4FSK.200.50:0 B:OFF'

Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the message header list. Headers contain the following information, from left to right:

- **Message number**, most recent first.
- **Sending station callsign**
- **Date and time**
- **Destination station callsign**
- **Checksum** 16-bit CRC, in hexadecimal format.
- **Status flags** where *R* means *read*, *F* means *forwarded*, *S* means *saved* and - means *flag not set*.

The following commands are available:

- **rm *nbr*** Read message number *nbr* in the message viewer.
- **km *nbr*** Kill (delete) message number *nbr*.
- **pm *nbr*** Purge (delete) all messages older than *nbr* days.
- **sv *nbr fname*** Save message *nbr* to file *fname*. *fname* can be an absolute path like `/home/nw8l/foo.txt` or a relative path like `foo.txt` or `files/foo.txt`. Relative paths are relative to the ARIM working directory (the current directory when `arim` was invoked).
- **fm *nbr call*** Forward message number *nbr* to station *call*. Only available when attached to a TNC.
- **cf *nbr flag*** Clear flag *flag* on message number *nbr*. *flag* is one of *R* (read), *F* (forwarded), *S* (saved) or *** (all flags).

Press 'q' to quit. **Note:** The automatic message purge process runs whenever this view is opened. This discards messages whose age in days exceeds the limit set by the `max-msg-days` parameter in the `[arim]` section of the [`arim.ini`](#) configuration file. Set it to **0** to disable automatic message purging. The default setting is 0.

FEC: Reading messages

When in the inbox or outbox viewer, press the spacebar to open the command prompt and enter the **rm *nbr*** command where *nbr* is the message number. This opens the message viewer.

```
nw8l@KAPPA ~/git-work/arim
File Edit View Search Terminal Help
--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPA1] ---
[ 5] From H7KZ      Wed Dec 21 17:04:00 2016 To NW8L      4E85
[ 4] From KA8RYU    Wed Dec 21 17:02:15 2016 To NW8L      B714
[ 3] From H7KZ      Wed Dec 21 06:49:12 2016 To NW8L      2C66
[ 2] From KA8RYU    Wed Dec 21 06:47:16 2016 To NW8L      B714
[ 1] From W1AW      Wed Dec 21 06:41:38 2016 To QST       D7D8
CALLS HEARD (LT)
[A] NW8L          04:17:35
[R] H7KZ           17:04:00
[M] KA8RYU         17:02:16
[M] W1AW           17:00:38
MESSAGE INBOX LISTING
From: KA8RYU
To: NW8L

Sorry, I'm running late, I'll call you when I get in.

READ MESSAGE: 2
Msg: [ 2] 6 lines - use UP, DOWN keys to scroll, 'q' to quit
I:R 4FSK.200.50:0 B:OFF
```

The message number and size in lines are shown in the Status Bar. Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the message. Press 'q' to quit the message viewer and return to the message header view.

FEC: Query another station for information

A TNC must be attached. Press the spacebar to open the command prompt and enter the `sq call query` command where `call` is the callsign of the target station and `query` is one of these:

- **version** Query version of ARIM program and attached ARDOP TNC.
- **gridsq** Query gridsquare of target station (from [*arim.ini*](#) configuration file).
- **pname** Query name of attached ARDOP TNC (from [*arim.ini*](#) configuration file).
- **info** Query info text for the attached ARDOP TNC (from [*arim.ini*](#) configuration file).
- **heard** Query calls heard list of target station.
- **netcalls** Query net callsigns list of target station.
- **flist [dir]** Query shared files listing from target station. *dir* is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB. If *dir* is not given, then the the shared files root directory is listed; otherwise the specified directory is listed. By default only files in the shared files root directory and "dynamic" files are listed. Subdirectories are not listed unless they are made visible by an *add-files-dir* configuration file parameter.
- **file fn** Query file *fn*, where *fn* is the name of a file in the shared files directory, or a file path relative to it, e.g. contests/2016/F0BB.log.



The target station will send the requested information in a response message.

nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

```
--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPA1] ---
[16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[17:02:18] << [A] |A01|NW8L|KA8RYU|
[17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
[04:15:13] << [M] |M01|NW8L|KA8RYU|00B3|9478|John, I've got bad news.
[04:17:35] >> [A] |A01|NW8L|KA8RYU|
[04:47:55] << [Q] |Q01|NW8L|KA8RYU|0022|82DF|version
[04:48:22] >> [R] |R01|KA8RYU|NW8L|0041|6B5D|VERSION: ARIM v0.19, ARD

----- TRAFFIC MONITOR -----
[ 1] From KA8RYU      Thu Dec 22 04:48:22 2016 To NW8L      6B5D
[ 2] From H7KZ        Wed Dec 21 17:04:00 2016 To NW8L      4E85
[ 3] From KA8RYU      Wed Dec 21 17:02:15 2016 To NW8L      B714

----- RECENT MESSAGES -----
[RECENT MESSAGES LIST]

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctl 'h' Help, 'q' Quit.    I:R 4FSK.200.50:0 B:OFF
```

The response message will appear in the monitor view tagged with the [R] indicator. It will be stored in the message inbox for later viewing, and also appear in the Recents list.

FEC: Retrieving files from another station

Use the `sq call flist [dir]` query to get a list of shared files from station `call` where `dir` is an optional directory path, relative to the shared files root directory, e.g. contests/2016/F0BB.

```
sq KA8RYU flist
```

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.

The list will be returned in the response message which is stored into the inbox.

The screenshot shows the ARIM v0.20 software interface running on a terminal window titled "nw8l@KAPPA ~/git-work/arim".

TRAFFIC MONITOR: Displays a log of radio communications. Key entries include:

- [16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
- [17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
- [17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
- [17:02:18] << [A] |A01|NW8L|KA8RYU|
- [17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
- [17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
- [17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
- [04:15:13] << [M] |M01|NW8L|KA8RYU|00B3|9478|John, I've got bad news.
- [04:17:35] >> [A] |A01|NW8L|KA8RYU|
- [04:47:55] << [Q] |Q01|NW8L|KA8RYU|0022|82DF|version
- [04:48:22] >> [R] |R01|KA8RYU|NW8L|0041|6B5D|VERSION: ARIM v0.19, ARD
- [05:00:38] << [Q] |Q01|NW8L|KA8RYU|0020|D02D|flist
- [05:01:00] >> [R] |R01|KA8RYU|NW8L|005C|8D8E|File list: net-notes.txt

CALLS HEARD (LT): Shows recent calls heard by the station.

Call Sign	Time
[R] KA8RYU	05:01:00
[A] NW8L	04:17:35
[R] H7KZ	17:04:00
[M] W1AW	17:00:38

TNC COMMANDS: Displays TNC command history.

- >> c:NEWSTATE FECRCV
- >> c:BUFFER 0
- >> c:NEWSTATE DISC
- >> c:NEWSTATE FECRCV
- >> c:BUFFER 0
- >> c:NEWSTATE DISC
- >> c:NEWSTATE FECRCV
- >> c:BUFFER 0
- >> c:NEWSTATE DISC

Bottom Status: Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit. I:R 4FSK.200.50:0 B:OFF

To see it, open the message inbox viewer with the `li` command, then use the `rm nbr` command to read the file list message:

```
nw8l@KAPPA ~
File Edit View Search Terminal Help
Sep 05 05:24          ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]
[ 9] From KA8RYU      Tue Sep  5 05:20:04 2017 To NW8L      B65A ---
[ 8] From KA8RYU      Mon Sep  4 22:23:40 2017 To NW8L      A5E1 ---
[ 7] From KA8RYU      Mon Sep  4 14:59:19 2017 To NW8L      25CD R--
[ 6] From KA8RYU      Mon Sep  4 06:53:29 2017 To NW8L      DD8A ---
[ 5] From KA8RYU      Mon Sep  4 06:52:42 2017 To NW8L      64A2 ---
[ 4] From KA8RYU      Mon Sep  4 06:48:55 2017 To qst       327F ---
[ 3] From KA8RYU      Mon Sep  4 06:30:44 2017 To NW8L      4D3B ---
[ 2] From KA8RYU      Sun Sep  3 21:52:21 2017 To NW8L      41DB ---
[ 1] From KA8RYU      Sun Sep  3 06:06:41 2017 To nw8l     44EF R--
CALLS HEARD (LT)
[R] KA8RYU      05:20:04
[B] W1AW        00:07:44
MESSAGE INBOX LISTING
To: NW8L
File list:
contest-logs.zip    1669
net-roster.txt      1822
test.txt            242
date                DYN
spwxfc              DYN
READ MESSAGE: 9
Msg: [ 9] 11 lines - use UP, DOWN keys to scroll, 'q' to quit
I:R 4FSK.200.50:0 B:OFF
```

Note the name of the file you wish to get. NOTE: Static files have their size in bytes listed with the file name. Dynamic files have the DYN label listed with the file name to indicate that their size is variable.

Press 'q' to close the message viewer and 'q' again to close the message inbox view.

Now use the **sq call file fname** command to query the file *fname* from station *call*. NOTE: file names are case sensitive!

```
sq KA8RYU file test.txt
```

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.

The file will be returned in the response message.

The screenshot shows the ARIM v0.20 software interface running on a Linux system (nw8l@KAPPA). The window title is "nw8l@KAPPA ~/git-work/arim".

TRAFFIC MONITOR:

```
-- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPAl] --
[16:59:20] >> [B] |B01|KA8RYU|0026|DM65|TNC-1 (cygwin32)
[17:00:38] >> [M] |M01|W1AW|QST|004F|F884|Greetings from the ARRL, vi
[17:02:15] >> [M] |M01|KA8RYU|NW8L|0050|B714|Sorry, I'm running late,
[17:02:18] << [A] |A01|NW8L|KA8RYU|
[17:03:15] >> [B] |B01|H7KZ|0024|DM65|TNC-1 (cygwin32)
[17:03:38] << [Q] |Q01|NW8L|H7KZ|001E|907A|heard
[17:04:00] >> [R] |R01|H7KZ|NW8L|0043|4E85|Calls heard (LT): [A] NW8L
[04:15:13] << [M] |M01|NW8L|KA8RYU|00B3|9478|John, I've got bad news.
[04:17:35] >> [A] |A01|NW8L|KA8RYU|
[04:47:55] << [Q] |Q01|NW8L|KA8RYU|0022|82DF|version
[04:48:22] >> [R] |R01|KA8RYU|NW8L|0041|6B5D|VERSION: ARIM v0.19, ARD
[05:00:38] << [Q] |Q01|NW8L|KA8RYU|0020|D02D|flist
[05:01:00] >> [R] |R01|KA8RYU|NW8L|005C|8D8E|File list: net-notes.txt
[05:07:16] << [Q] |Q01|NW8L|KA8RYU|0028|B05E|file test.txt
[05:08:09] >> [R] |R01|KA8RYU|NW8L|0112|B5EA|File: test.txt This is
```

CALLS HEARD (LT):

Call Sign	Date
[R] KA8RYU	05:08:09
[A] NW8L	04:17:35
[R] H7KZ	17:04:00
[M] W1AW	17:00:38

TNC COMMANDS:

```
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
```

Bottom Status:

Hot keys: <SP> Cmd Prompt, 'r' Recents, 'f' FEC Ctrl 'h' Help, 'q' Quit.

I:R 4FSK.200.50:0 B:OFF

The message is stored into the inbox where it can be viewed or saved to disk.

nw8l@KAPPA ~/git-work/arim

File Edit View Search Terminal Help

```
--- ARIM v0.20 by NW8L [Attached to TNC 1 - arim/KAPPAl] ---
[ 8] From KA8RYU    Thu Dec 22 05:08:09 2016 To NW8L      B5EA
[ 7] From KA8RYU    Thu Dec 22 05:01:00 2016 To NW8L      8D8E
[ 6] From KA8RYU    Thu Dec 22 04:48:22 2016 To NW8L      6B5D
[ 5] From H7KZ      Wed Dec 21 17:04:00 2016 To NW8L      4E85
[ 4] From KA8RYU    Wed Dec 21 17:02:15 2016 To NW8L      B714
[ 3] From H7KZ      Wed Dec 21 06:49:12 2016 To NW8L      2C66
[ 2] From KA8RYU    Wed Dec 21 06:47:16 2016 To NW8L      B714
[ 1] From W1AW      Wed Dec 21 06:41:38 2016 To QST       D7D8
```

CALLS HEARD (LT)		
[R]	KA8RYU	05:08:09
[A]	NW8L	04:17:35
[R]	H7KZ	17:04:00
[M]	W1AW	17:00:38

MESSAGE INBOX LISTING

From: KA8RYU
To: NW8L

File: test.txt

This is a test file. It can be used to demonstrate the "send file" feature. This is a short file. The maximum file size for ARIM transfers is set by the max-file-size parameter in the [arim] section of the arim.ini file.

READ MESSAGE: 8

Msg: [8] 13 lines - use UP, DOWN keys to scroll, 'q' to quit

I:R 4FSK.200.50:0 B:OFF

NOTE: the maximum file size is set by the `max-file-size` parameter in the `[arim]` section of the [`arim.ini`](#) configuration file. The file list returned by the `flist` query is filtered so that only static files less than the max size are listed, and the output of "dynamic" files is limited to the max size. At this time the absolute maximum allowed is 8192 bytes. The location of the shared files root directory is set by the `files-dir` parameter in the `[arim]` section of the [`arim.ini`](#) configuration file.

FEC: Using message send repeats

In difficult conditions it may be helpful to enable automatic repeats of messages if they are nak'd or an ACK timeout occurs. Three parameters control message send repeat behavior:


- **send repeats** - this is the number of times a message send will be repeated in the absence of an ACK response from the recipient.
- **ack timeout period** - after sending a message, this is the maximum time in seconds that ARIM will wait for an ACK before repeating it.
- **FEC mode downshifting** - if enabled, downshifting causes each message repeat to be made in a more robust FEC mode than the previous repeat in hopes of getting through in poor conditions. The starting FEC mode is automatically restored at the conclusion of the message repeats.

These parameters are set in the **[arim]** section of the [*arim.ini*](#) configuration file, but can also be modified on-the-fly from the ARIM command prompt so that the operator can adapt to changing conditions. Here are the commands you can use from the command prompt:

- **srpts** - sets the number of times a message send will be repeated in the absence of an ACK response from the recipient. Value must be in the range 0-5. Setting it to '0' disables send repeats. Example: srpts 3
- **ackto** - sets the message ACK timeout in seconds. Value must be in the range 10-999. Example: ackto 30
- **fecds** - enables or disables FEC mode downshifting when repeating messages. Value must be either TRUE or FALSE (not case sensitive, T or F are ok). Examples: fecds TRUE or fecds t
- **srset** - Open a pop-up dialog showing the message send repeat settings. Example: srset



To change one of these, press the spacebar to open the command prompt and enter the command like this:

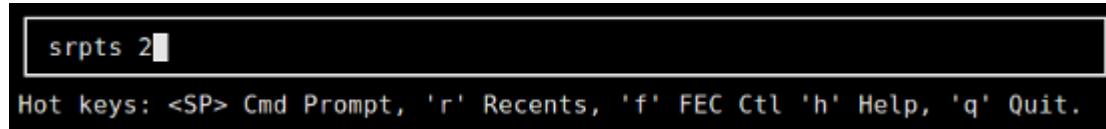

The change will be confirmed by a message on the Status Bar. When in doubt, use the **srset** command to check settings.

FEC: Beacons

Beaconing can be configured for each TNC by the **btime** parameter in the relevant [tnc] section of the [arim.ini](#) configuration file. This parameter defines the beacon interval time in minutes, with '0' meaning that beaconing is disabled.

When attached to a TNC, beaconing can be managed using the **btime** and **btest** commands. Use **btime nbr** to set the beacon interval to *nbr* minutes, and **btest** to test the beacon. The beacon status indicator in the Status Bar shows the interval time when beaconing is enabled, or "OFF" when disabled.

Working with the shared files viewer

Press the spacebar to open the command prompt and enter the **lf** command to open the shared files viewer.

The screenshot shows a terminal window titled "nw8l@KAPPA ~/git-work/arim". The window has a menu bar with File, Edit, View, Search, Terminal, and Help. The main area displays the following information:

- Aug 28 15:39 ARIM v0.32 [Attached TNC 1: arim/KAPPA][L:T E:T]**
- CALLS HEARD (LT)** [A] KA8RYU 15:38:17
- LIST FILES: /home/nw8l/arim/files/**
- TNC COMMANDS**
- <SP> for prompt: 'cd n' ch dir, 'rf n' read, 'sf n call' send, 'ri' arim.ini I:R 4FSK.200.50:0 B:OFF**

The file listing shows:

```

[ 1] test.txt          242 Aug 28 15:37 2017
[ 2] roster.txt        792 Aug 26 21:45 2017
[ 3] net-sked.txt      476 Aug 26 21:46 2017
[ 4] download          DIRECTORY Aug 28 04:59 2017

```

The TNC commands section contains:

```

>> c:NEWSTATE DISC
>> c:PTT FALSE
>> c:NEWSTATE FECRCV
>> c:BUFFER 0
>> c:NEWSTATE DISC
<< C:PROTOCOLMODE FEC
>> c:PROTOCOLMODE now FEC
<< C:LISTEN TRUE
>> c:LISTEN now TRUE

```

The viewer opens in the shared files root directory defined by the `files-dir` parameter in the `[arim]` section of the [`arim.ini`](#) configuration file. The directory path is shown in the title of the viewer window.

The contents of the directory are listed, one to a line. For files, the name, size in bytes and the last-modified date are shown. For subdirectories, the name and last-modified date are shown.

Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the listing. Each file or directory is given a number for use with commands. A list of available commands is printed in the Status Bar:

- **rf *nbr*** Read file number *nbr* in the file viewer.
- **sf *nbr call*** Send file number *nbr* to station *call* if attached to a TNC.
- **ri** Read the *arim.ini* configuration file, no matter where it is located.
- **cd *nbr*** Open directory *nbr* in the shared files viewer and list its files.

When you open a directory with the **cd** command, the listing includes the parent directory (..) as item number 1.

```
[ 1] ..                                DIRECTORY Aug 28 15:39 2017
[ 2] test.txt                           242 Aug 27 22:44 2017
[ 3] date                               30 Aug 20 06:25 2017
[ 4] spwxfc                            1583 Aug 19 21:09 2017
LIST FILES: /home/nw8l/arim/files/download/
```

Enter the command **cd 1** to return to it. Press 'q' to quit the file viewer.

Reading files

Text files listed in the shared files viewer can be opened for reading. Press the spacebar to open the command prompt and enter the **rm *nbr*** command where *nbr* is the message number. This opens the file reader.

```
nw8l@KAPPA ~/git-work/arim
File Edit View Search Terminal Help
Aug 28 15:41 ARIM v0.32 [Attached TNC 1: arim/KAPPA][L:T E:T]
[ 1] test.txt 242 Aug 28 15:37 2017
[ 2] roster.txt 792 Aug 26 21:45 2017
[ 3] net-sked.txt 476 Aug 26 21:46 2017
[ 4] download DIRECTORY Aug 28 04:59 2017
CALLS HEARD (LT)
[A] KA8RYU 15:38:17
LIST FILES: /home/nw8l/arim/files/
This is a test file. It can be used to demonstrate the "send file"
feature. This is a relatively short file. The maximum file size for
ARIM transfers is set by the max-file-size parameter in the [arim]
section of the arim.ini file.
73,
NW8L
READ FILE: test.txt
File [1]: 7 lines - use UP, DOWN keys to scroll, 'q' to quit
I:R 4FSK.200.50:0 B:OFF
```

The file number and size in lines are shown in the Status Bar. Use the UP and DOWN arrow keys or the PAGEUP, PAGEDOWN, HOME and END keys to scroll through the file. Press 'q' to quit the file reader and return to the shared files viewer.

Serving dynamic files

Dynamic files are used to return output from a script or system command executed by ARIM in response to a file query.

Dynamic file aliases are listed in the output of the **flist** query for the shared files root directory. Because the size of the output is not known in advance, no file size is shown; instead the DYN identifier appears, like this:

```
[23:36:25] << [P] NW8L>KA8RYU (1 of 3)
[23:36:28] >> [p] KA8RYU>NW8L S/N: >20dB, Quality: 100
[23:36:45] << [@] NW8L>KA8RYU (Connect request 1 of 5)
[23:36:48] << [@] NW8L>KA8RYU (Connect request 2 of 5)
[23:36:51] << [@] NW8L>KA8RYU (Connect request 3 of 5)
[23:36:52] >> [@] KA8RYU>NW8L (Connected, Press Spacebar to type, CTR
[23:37:00] << [@] /flist
[23:37:15] >> [@] File list:
[23:37:15] >> [@]     contest-logs.zip    1669
[23:37:19] >> [@]     net-roster.txt   1822
[23:37:20] >> [@]             test.txt    242
[23:37:20] >> [@]           date      DYN
[23:37:24] >> [@]           spwxfc    DYN
[23:37:24] >> [@]
```

TRAFFIC MONITOR —————

Here's a sample of the **spwxfc** dynamic file output as seen in an ARQ session:

nw8l@KAPPA ~

File Edit View Search Terminal Help

Sep 04 23:15 ARIM v0.34 [Attached TNC 1: arim/KAPPA][L:T E:T]

```
[23:14:57] >> [@]
[23:14:57] >> [@]
[23:15:02] >> [@] The greatest observed 3 hr Kp over the past 24 hour
[23:15:02] >> [@] Scale levels).
[23:15:02] >> [@] The greatest expected 3 hr Kp for Sep 04-Sep 06 201
[23:15:02] >> [@] Scale levels).
[23:15:03] >> [@]
[23:15:03] >> [@] NOAA Kp index breakdown Sep 04-Sep 06 2017
[23:15:03] >> [@]
[23:15:07] >> [@] Sep 04 Sep 05 Sep 06
[23:15:07] >> [@] 00-03UT 4 3 2
[23:15:07] >> [@] 03-06UT 3 2 2
[23:15:08] >> [@] 06-09UT 2 2 1
[23:15:08] >> [@] 09-12UT 2 2 1
[23:15:08] >> [@] 12-15UT 2 2 1
[23:15:08] >> [@] 15-18UT 1 2 1
```

TRAFFIC MONITOR

```
>> c:PTT FALSE
>> c:STATUS BREAK received from Protocol State IDLE, new state IRS
>> c:NEWSTATE IRS
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
>> c:PTT TRUE
>> c:PTT FALSE
```

TNC COMMANDS

Hot keys: <SP> Cmd Prompt, CTRL-X Disc, 'f' Files, 'i' Inbox, 'o' Outbox, ' ' ARQ:KA8RYU 2000 S:IRS

Dynamic file aliases are defined in the `[arim]` section of the [arim.ini](#) configuration file. The format is `alias:command` where `alias` is the name used to access the file and `command` is the invocation of the command or script, separated by a : (colon) character. For example:

```
dynamic-file = spwxfc:python /home/nw8l/scripts/forecast.py
```

Make sure that `alias` is unique among the other dynamic file definitions and file names in the shared files directory. Use absolute paths to script files when ARIM is built from source and installed. Relative paths can be used for "portable" binary installations where the script files are contained in same directory as the `arim` executable file. You may define no more than 16 dynamic files.

In response to the query `sq file alias`, *command* will be executed in a shell and its output returned in the response. *command* can be a batch file, a script invocation like `python myscript` or a system command like `date` or `uname -a`. The output size in bytes is limited by the **max-file-size** parameter in the **[arim]** section of the [*arim.ini*](#) configuration file. Errors generated by dynamic file scripts are written to a file named `dyn-file-error.log` in the `log` directory.

Logging

Two logs can be enabled or disabled in the [*arim.ini*](#) configuration file; the traffic log and the debug log. The traffic log is enabled by default and logs the content of all ARIM and ARDOP data frames sent and received by the TNC, with timestamping of each entry. The debug log is disabled by default. It logs all TNC commands sent and received by the ARIM program as well as exceptions encountered in operation like data wait timeouts, communication errors etc.

Set the **traffic-log** parameter in the **[log]** section of the [*arim.ini*](#) configuration file to TRUE to enable traffic logging and to FALSE to disable it. Set the **debug-log** parameter in the **[log]** section of the [*arim.ini*](#) configuration file to TRUE to enable debug logging and to FALSE to disable it.

Another log file, the "dynamic" file error log, is always enabled. It logs error messages from scripts or programs that generate "dynamic" file text output.

Logs are kept in the `logs` subdirectory of the ARIM working directory. They are automatically rotated every 24 hours. The file name format is `name-YYYYMMDD.log` where `name` is either `traffic`, `debug` or `dyn-file-error`, followed by the date, e.g. `traffic-20161114.log`.

Copyright © 2016, 2017 by Robert Cummings NW8L. Last modified: 02 Dec 2017.