

MCS™-51 MACRO ASSEMBLER USER'S GUIDE

Order Number: 9800937-02



MCS®51

Ceibo In-Circuit Emulator Supporting MCS®51: DS-51

<http://ceibo.com/eng/products/ds51.shtml>

Ceibo Low Cost Emulator Supporting MCS®51: EB-51

<http://ceibo.com/eng/products/eb51.shtml>

Ceibo Programmer Supporting MCS®51: MP-51

<http://ceibo.com/eng/products/mp51.shtml>

Ceibo Development Board Supporting MCS®51: DB-51

<http://ceibo.com/eng/products/db51.shtml>

Additional copies of this manual or other Intel literature may be obtained from:

**Literature Department
Intel Corporation
3065 Bowers Avenue
Santa Clara, CA 95051**

The information in this document is subject to change without notice.

Intel Corporation makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Intel Corporation assumes no responsibility for any errors that may appear in this document. Intel Corporation makes no commitment to update nor to keep current the information contained in this document.

Intel Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in an Intel product. No other circuit patent licenses are implied.

Intel software products are copyrighted by and shall remain the property of Intel Corporation. Use, duplication or disclosure is subject to restrictions stated in Intel's software license, or as defined in ASPR 7-104.9(a)(9).

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Intel Corporation.

The following are trademarks of Intel Corporation and its affiliates and may be used only to identify Intel products:

BXP	Intel	Library Manager	Plug-A-Bubble
CREDIT	int <u>e</u> l	MCS	PROMPT
i	Intlevision	Megachassis	Promware
ICE	Intelec	Micromainframe	RMX/80
iCS	iRMX	Micromap	System 2000
iM	iSBC	Multibus	UPI
Insite	iSBX	Multimodule	µScope

and the combination of ICE, iCS, iRMX, iSBC, iSBX, MCS, or RMX and a numerical suffix.

REV.	REVISION HISTORY	DATE
Change 1	-001 Original issue. -002 Add Macro Processing Language facility and correct minor errors. Add several new directives and the concepts of relocatable object code and intermodule linkage. Correct errors.	12/79 3/80 9/81



This manual describes how to program the MCS™-51 single-chip microcomputers in assembly language. It also describes the operating instructions for the MCS-51 Macro Assembler.

The term "MCS-51" refers to an entire family of single-chip microcomputers, all of which have the same basic processor design. They include:

- 8051—the 8x51 processor with 4K bytes ROM. It is manufactured by Intel with ROM memory pre-programmed.
- 8031—the 8x51 processor with no ROM on-chip.
- 8751—the 8x51 processor with 4K bytes EPROM. The 8751 can be programmed and erased many times by the user.

Throughout this manual when we wish to refer to a specific chip, but also point out something that applies to the entire family, we speak of the 8051. For software purposes, these processors are equivalent.

This book is intended as a reference, but it contains some instructional material as well. It is organized as follows:

- Chapter 1—Introduction, describes assembly language programming and provides an overview of the 8051 hardware.
- Chapter 2—Operands and Expressions, describes each operand class and discusses absolute and relocatable expressions.
- Chapter 3—Instruction Set, completely describes the operation of each instruction in alphabetical order.
- Chapter 4—Directives, describes how to define symbols and how to use all directives.
- Chapter 5—Macros, defines and describes the use of the Macro Processing Language.
- Chapter 6—Assembler Operation and Control, describes how to invoke the assembler and how to control assembler operation.
- Chapter 7—Assembler Output: Error Messages and Listing File Format, describes how to interpret error messages and the listing file.

Before you program one of the MCS-51 microcomputers, you should read the *MCS-51 User's Manual*, Order Number 121517.

Related Literature

To help you use this manual, you should familiarize yourself with the following manuals:

- *MCS-51 Utilities User's Guide*, Order Number 121737 (describes the RL51 Relocator and Linker process)
- *MCS-51 Family of Single-Chip Microcomputers User's Manual*, Order Number 121517
- *ISIS-II User's Guide*, Order Number 9800306
- *MCS-51 Macro Assembly Language Pocket Reference*, Order Number 9800935

- *MCS-51 Assembler and Utilities Pocket Reference*, Order Number 121817
- *ICE-51 In-Circuit Emulator Operating Instructions for ISIS-II Users*, Order Number 9801004
- *Universal PROM Programmer User's Manual*, Order Number 9800819
- *Universal PROM Programmer Reference Manual*, Order Number 9800133

CHAPTER 1	PAGE	PAGE	
INTRODUCTION			
What is an Assembler?	1-1	Using Operators in Expressions	2-13
How to Develop a Program	1-1	Arithmetic Operators	2-13
The Advantages of Modular Programming	1-2	Logical Operators	2-13
Efficient Program Development	1-2	Special Assembler Operators	2-14
Multiple Use of Subprograms	1-2	Relational Operators	2-14
Ease of Debugging and Modifying	1-2	Operator Precedence	2-15
MCS-51 Modular Program Development Process	1-2	Segment Typing in Expressions	2-15
Segments, Modules, and Programs	1-2	Relocatable Expression Evaluation	2-16
Program Entry and Edit	1-3	Simple Relocatable Expressions	2-16
Assembly	1-3	General Relocatable Expressions	2-16
Object File	1-3		
Listing File	1-4		
Relocation and Linkage	1-4		
Conversion to Hexadecimal Format	1-4		
Keeping Track of Files	1-4		
Writing, Assembling, and Debugging an MCS-51 Program	1-4		
CHAPTER 2			
OPERANDS AND EXPRESSIONS			
Operands	2-1	Introduction	4-1
Special Assembler Symbols	2-2	The Location Counter	4-2
Indirect Addressing	2-3	Symbol Names	4-2
Immediate Data	2-3	Statement Labels	4-2
Data Addressing	2-4	Symbol Definition	4-3
Bit Addressing	2-5	SEGMENT Directive	4-3
Code Addressing	2-7	EQU Directive	4-4
Relative Jump (SJMP) and Conditional Jumps	2-8	SET Directive	4-5
In Block Jumps and Calls (AJMP and ACALL)	2-8	BIT Directive	4-5
Long Jumps and Calls (LJMP and LCALL)	2-8	DATA Directive	4-6
Generic Jump and Call (JMP and CALL)	2-9	XDATA Directive	4-6
Assembly-Time Expression Evaluation	2-9	IDATA Directive	4-6
Specifying Numbers	2-9	CODE Directive	4-7
ASM51 Number Representation	2-10	Storage Initialization and Reservation	4-7
Character Strings in Expressions	2-10	DS Directive	4-7
Use of Symbols	2-11	DBIT Directive	4-7
		DB Directive	4-8
		DW Directive	4-8
		Program Linkage	4-9
		PUBLIC Directive	4-9
		EXTRN Directive	4-9
		NAME Directive	4-10
		Assembler State Controls	4-10
		END Directive	4-10
		ORG Directive	4-11
		Segment Selection Directives	4-11
		USING Directive	4-12
CHAPTER 3			
INSTRUCTION SET			
Introduction	3-1		
Notes	3-142		
CHAPTER 4			
ASSEMBLER DIRECTIVES			
Introduction	4-1		
The Location Counter	4-2		
Symbol Names	4-2		
Statement Labels	4-2		
Symbol Definition	4-3		
SEGMENT Directive	4-3		
EQU Directive	4-4		
SET Directive	4-5		
BIT Directive	4-5		
DATA Directive	4-6		
XDATA Directive	4-6		
IDATA Directive	4-6		
CODE Directive	4-7		
Storage Initialization and Reservation	4-7		
DS Directive	4-7		
DBIT Directive	4-7		
DB Directive	4-8		
DW Directive	4-8		
Program Linkage	4-9		
PUBLIC Directive	4-9		
EXTRN Directive	4-9		
NAME Directive	4-10		
Assembler State Controls	4-10		
END Directive	4-10		
ORG Directive	4-11		
Segment Selection Directives	4-11		
USING Directive	4-12		
CHAPTER 5			
THE MACRO PROCESSING LANGUAGE			
Introduction	5-1		
Macro Processor Overview	5-1		
Introduction to Creating and Calling Macros	5-2		
Creating Simple Macros	5-2		
Macros with Parameters	5-5		



CONTENTS (Cont'd.)

	PAGE
LOCAL Symbols List	5-6
The Macro Processor's Built-in Functions	5-7
Comment, Escape, Bracket and METACHAR	
Built-in Functions	5-8
Comment Function	5-8
Escape Function	5-9
Bracket Function	5-9
METACHAR Function	5-10
Numbers and Expressions in MPL	5-10
SET Macro	5-11
EVAL Macro	5-11
Logical Expressions and String Comparisons	
in MPL	5-12
Control Flow Functions	5-13
IF Function	5-13
WHILE Function	5-14
REPEAT Function	5-15
EXIT Function	5-15
String Manipulation Built-in Functions	5-16
LEN Function	5-16
SUBSTR Function	5-16
MATCH Function	5-17
Console I/O Built-in Functions	5-18
Advanced MPL Concepts	5-18
Macro Delimiters	5-18
Implied Blank Delimiters	5-19
Identifier Delimiters	5-19
Literal Delimiters	5-20
Literal vs. Normal Mode	5-21
Algorithm for Evaluating Macro Calls	5-22
 CHAPTER 6	
ASSEMBLER OPERATION	
AND CONTROLS	
How to Invoke the MCS-51 Macro Assembler	6-1
Assembler Controls	6-2
 CHAPTER 7	
ASSEMBLER OUTPUT: ERROR	
MESSAGES AND LISTING FILE FORMAT	
Error Messages and Recovery	7-1
Console Error Messages	7-1
I/O Errors	7-1
ASM51 Internal Errors	7-2
Invocation Line Errors	7-2
	 PAGE
Listing File Error Messages	7-4
Source File Error Messages	7-4
Macro Error Messages	7-10
Control Error Messages	7-13
Special Assembler Error Messages	7-14
Fatal Error Messages	7-15
Assembler Listing File Format	7-15
Listing File Heading	7-18
Source Listing	7-18
Format for Macros and INCLUDE Files	7-19
Symbol Table	7-20
Listing File Trailer	7-21
 APPENDIX A	
ASSEMBLY LANGUAGE	
BNF GRAMMAR	
 APPENDIX B	
INSTRUCTION SET SUMMARY	
 APPENDIX C	
ASSEMBLER DIRECTIVE SUMMARY	
 APPENDIX D	
ASSEMBLER CONTROL SUMMARY	
 APPENDIX E	
MPL BUILT-IN FUNCTIONS	
 APPENDIX F	
RESERVED SYMBOLS	
 APPENDIX G	
SAMPLE PROGRAM	
 APPENDIX H	
REFERENCE TABLES	
 APPENDIX J	
ERROR MESSAGES	
 APPENDIX K	
CHANGING ABSOLUTE PROGRAMS	
TO RELOCATABLE PROGRAMS	



TABLES

TABLE	TITLE	PAGE	TABLE	TITLE	PAGE
1-1	Register Bank Selection	1-11	2-6	Predefined Data Addresses for 8051	2-12
1-2	Symbolically Addressable Hardware Registers for the 8051	1-12	2-7	Arithmetic Assembly-Time Operators	2-13
1-3	State of the 8051 after Power-up	1-17	2-8	Logical Assembly-Time Operators	2-13
2-1	Special Assembler Symbols	2-2	2-9	Special Assembly-Time Operators	2-14
2-2	Predefined Bit Addresses for 8051	2-7	2-10	Relational Assembly-Time Operators	2-14
2-3	Assembly Language Number Representation	2-9	3-1	Abbreviations and Notations Used	3-3
2-4	Examples of Number Representation	2-9	6-1	Assembler Controls	6-2
2-5	Interpretations of Number Representation	2-10	B-1	Instruction Set Summary	B-2
			B-2	Instruction Opcodes in Hexadecimal	B-9
			C-1	Assembler Directives	C-1
			D-1	Assembler Controls	D-1



ILLUSTRATIONS

FIGURE	TITLE	PAGE	FIGURE	TITLE	PAGE
1-1	Assembler and Linker/Relocator Outputs	1-3	2-1	Hardware Register Address Area for 8051	2-4
1-2	MCS-51 Program Development Process	1-5	2-2a	Bit Addressable Bytes in RAM	2-6
1-3	Sample Program Listing	1-5	2-2b	Bit Addressable Bytes in Hardware Register Address Area for 8051.....	2-6
1-4	8051 Block Diagram	1-7	3-1	Format For Instruction Definitions	3-2
1-5	MCS-51 Code Address Space and External Data Address Space	1-8	5-1	Macro Processor versus Assembler— Two Different Views of a Source File	5-1
1-6	MCS-51 Data Address Space and Bit Address Space	1-9	7-1	Example Listing File Format	7-15
1-7	MCS-51 Data Units	1-10	7-2	Example Heading	7-18
1-8	Bit Descriptions of Program Status Word	1-13	7-3	Example Source Listing	7-18
1-9	Bit Descriptions of TCON	1-14	7-4	Examples of Macro Listing Modes	7-19
1-10	Bit Descriptions for Port 3	1-15	7-5	Example Symbol Table Listing	7-21
1-11	Bit Descriptions for Serial Port Control	1-15	G-1	Sample Relocatable Program	G-1
1-12	Bit Descriptions for Interrupt Enable and Interrupt Priority	1-16	K-1	Sample Absolute Program	K-1



CHAPTER 1 INTRODUCTION

This manual describes the MCS™-51 Macro Assembler and explains the process of developing software in assembly language for the MCS-51 family of processors. The 8051 is the primary processor described in this manual.

Assembly language programs translate directly into machine instructions which instruct the processor as to what operation it should perform. Therefore the assembly language programmer should be familiar with both the microcomputer architecture and assembly language. This chapter presents an overview of the MCS-51 Macro Assembler and how it is used, as well as a brief description of the 8051 architecture and hardware features.

What is an Assembler?

An assembler is a software tool—a program—designed to simplify the task of writing computer programs. It performs the clerical task of translating symbolic code into executable object code. This object code may then be programmed into one of the MCS-51 processors and executed. If you have ever written a computer program directly in machine-recognizable form, such as binary or hexadecimal code, you will appreciate the advantages of programming in a symbolic assembly language.

Assembly language operation codes (mnemonics) are easily remembered (MOV for move instructions, ADD for addition). You can also symbolically express addresses and values referenced in the operand field of instructions. Since you assign these names, you can make them as meaningful as the mnemonics for the instructions. For example, if your program must manipulate a date as data, you can assign it the symbolic name DATE. If your program contains a set of instructions used as a timing loop (a set of instructions executed repeatedly until a specific amount of time has passed), you can name the instruction group TIMER_LOOP.

The assembly program has three constituent parts:

- Machine instructions
- Assembler directives
- Assembler controls

A machine instruction is a machine code that can be executed by the machine. Detailed discussion of the machine instructions is presented in Chapter 3.

Assembler directives are used to define the program structure and symbols, and generate non-executable code (data, messages, etc.). See Chapter 4 for details on all of the assembler directives.

Assembler controls set the assembly modes and direct the assembly flow. Chapter 6 contains a comprehensive guide to all the assembler controls.

How to Develop a Program

ASM51 enables the user to program in a modular fashion. The following paragraphs explain the basics of modular program development.

The Advantages of Modular Programming

Many programs are too long or complex to write as a single unit. Programming becomes much simpler when the code is divided into small functional units. Modular programs are usually easier to code, debug, and change than monolithic programs.

The modular approach to programming is similar to the design of hardware which contains numerous circuits. The device or program is logically divided into "black boxes" with specific inputs and outputs. Once the interfaces between the units have been defined, detailed design of each unit can proceed separately.

Efficient Program Development

Programs can be developed more quickly with the modular approach since small subprograms are easier to understand, design, and test than large programs. With the module inputs and outputs defined, the programmer can supply the needed input and verify the correctness of the module by examining the output. The separate modules are then linked and located into one program module. Finally, the completed module is tested.

Multiple Use of Subprograms

Code written for one program is often useful in others. Modular programming allows these sections to be saved for future use. Because the code is relocatable, saved modules can be linked to any program which fulfills their input and output requirements. With monolithic programming, such sections of code are buried inside the program and are not so available for use by other programs.

Ease of Debugging and Modifying

Modular programs are generally easier to debug than monolithic programs. Because of the well-defined module interfaces of the program, problems can be isolated to specific modules. Once the faulty module has been identified, fixing the problem is considerably simpler. When a program must be modified, modular programming simplifies the job. You can link new or debugged modules to the existing program with the confidence that the rest of the program will not be changed.

MCS-51 Modular Program Development Process

This section is a brief discussion of the program development process with the relocatable MCS-51 assembler (ASM51), Linker/Relocator (RL51), and code conversion programs.

Segments, Modules, and Programs

In the initial design stages, the tasks to be performed by the program are defined, and then partitioned into subprograms. Here are brief introductions to the kinds of subprograms used with the MCS-51 assembler and linker/relocator.

A segment is a block of code or data memory. A segment may be relocatable or absolute. A relocatable segment has a name, type, and other attributes. Segments with the same name, from different modules, are considered part of the same segment and are called "partial segments." Partial segments are combined into segments by RL51. An absolute segment has no name and cannot be combined with other segments.

A module contains one or more segments or partial segments. A module has a name assigned by the user. The module definitions determine the scope of local symbols. An object file contains one or more modules. You can add modules to a file by simply appending another object file to that file (e.g., *COPY file1,file2 TO file3*).

A program consists of a single absolute module, merging all absolute and relocatable segments from all input modules.

Program Entry and Edit

After the design is completed, the source code for each module is entered into disk file using a text editor. When errors are detected in the development process, the text editor may be used to make corrections in the source code.

Assembly

The assembler (ASM51) translates the source code into object code. The assembler produces an object file (relocatable, when at least one input segment is relocatable, or absolute), and a listing file showing the results of the assembly. (Figure 1-1 summarizes the assembly and the link and relocate outputs.) When the ASM51 invocation contains the DEBUG control, the object file also receives the symbol table and other debug information for use in symbolic debugging of the program.

Object File. The object file contains machine language instructions and data that can be loaded into memory for execution or interpretation. In addition, it contains control information governing the loading process.

The assembler can produce object files in relocatable object code format. However, if the module contains only absolute segments and no external references, the object file resulting from assembly is absolute. It can be loaded without the need of the RL51 pass.

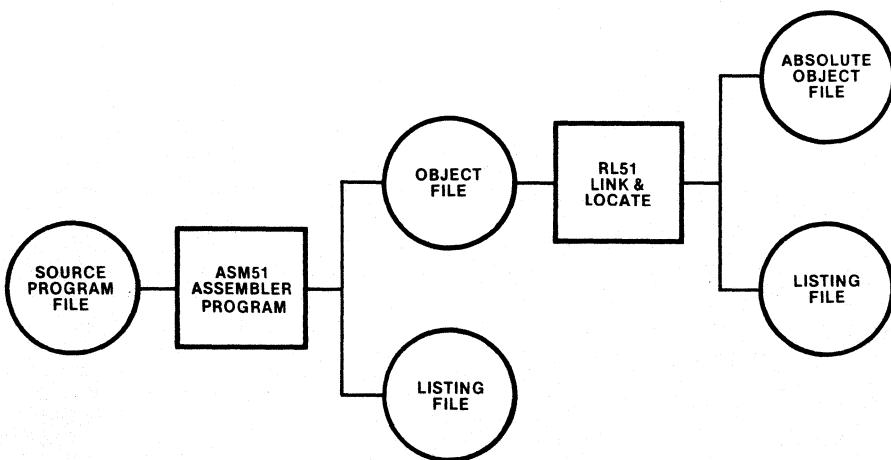


Figure 1-1. Assembler and Linker/Relocator Outputs

937-1

Listing File. The listing file provides a permanent record of both the source program and the object code. The assembler also provides diagnostic messages in the listing file for syntax and other coding errors. For example, if you specify a 16-bit value for an instruction that can only use an 8-bit value, the assembler tells you that the value exceeds the permissible range. Chapter 7 describes the format of the listing file. In addition, you can also request a symbol table to be appended to the listing. The symbol table lists all the symbols and their attributes.

Relocation and Linkage

After assembly of all modules of the program, RL51 processes the object module files. The RL51 program assigns absolute memory locations to all the relocatable segments, combining segments with the same name and type. RL51 also resolves all references between modules. RL51 outputs an absolute object module file with the completed program, and a summary listing file showing the results of the link/relocate process.

Conversion to Hexadecimal Format

The absolute object code produced by RL51 can be programmed into memory and executed by the target processor without further modification. However, certain MCS-51 support products (such as SDK-51) require the hexadecimal object code format. For use with these products, the absolute object file must be processed by the OBJHEX code conversion program. Refer to the *ISIS-II System User's Guide* (9800306).

Keeping Track of Files

It is convenient to use the extensions of filenames to indicate the stage in the process represented by the contents of each file. Thus, source code files can use extensions like .SRC or .A51 (indicating that the code is for input to ASM51). Object code files receive the extension .OBJ by default, or the user can specify another extension. Executable files generally have no extension. Listing files can use .LST, the default extension given by the assembler. RL51 uses .M51 for the default summary listing file extension.

Use caution with the extension .TMP, as many ISIS-II utilities create temporary files with this extension. These utilities will overwrite your file if it has the same name and extension as the temporary files they create.

Writing, Assembling, and Debugging an MCS-51 Program

There are several steps necessary to incorporate an MCS-51 microcomputer in your application. The flow chart in Figure 1-2 shows the steps involved in preparing the code. If you are developing hardware for your application in addition to the software, consult the *MCS-51 User's Manual*.

Figure 1-3 shows an assembly listing of a sample program. The assembler was invoked by:

```
-ASM51 :F1:DEMO.A51  
ISIS-II MCS-51 MACRO ASSEMBLER, V2.0
```

```
ASSEMBLY COMPLETE, NO ERRORS FOUND
```

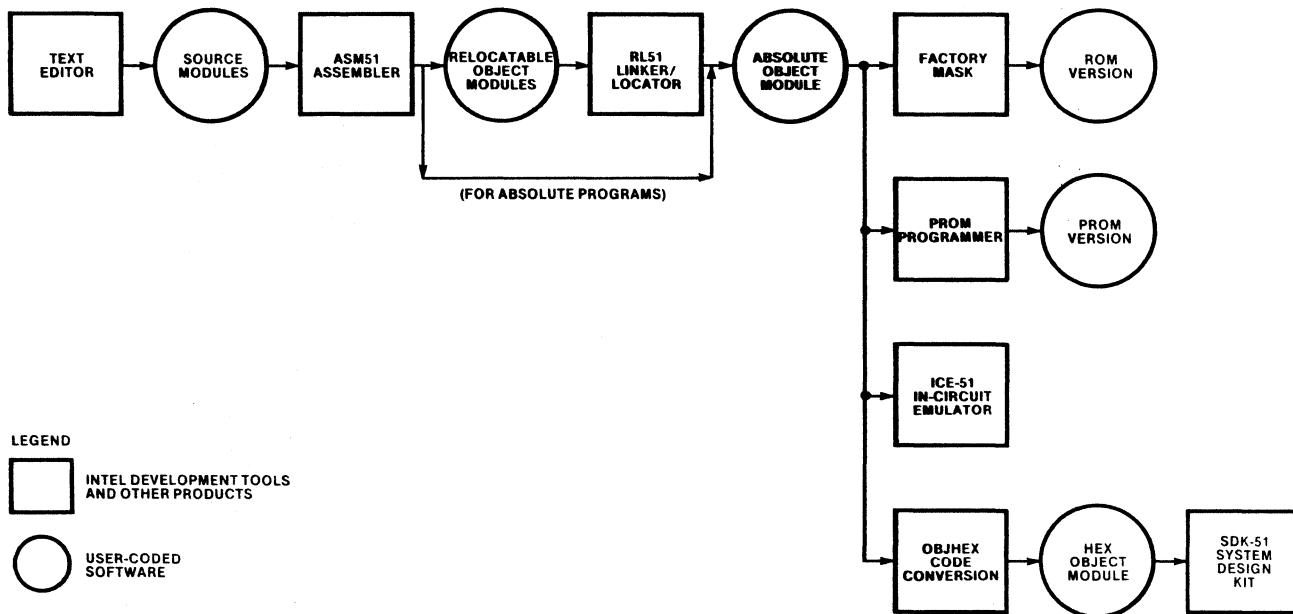


Figure 1-2. MCS-51 Program Development Process

937-2

MCS-51 MACRO ASSEMBLER 8051-BASED MONITOR

```
ISIS-II MCS-51 MACRO ASSEMBLER V2.0
OBJECT MODULE PLACED IN :F1:DEMO.OBJ
ASSEMBLER INVOKED SY: ASM51 :F1:D-MO.A51
```

LOC	OBJ	LINE	SOURCE
		1	\$TITLE(8051-BASED MONITOR)
		2	;The main module of an 8051-based monitor
		3	
		4	;Symbol definitions
0000		5	PROG_S SEGMENT CODE ;Contains the executable program
000A		6	TABLE_S SEGMENT CODE ;Contains tables and other constant data
		7	CR EQU 13 ;Carriage-Return character (ASCII)
		8	LF EQU 10 ;Line-Feed character (ASCII)
		9	EXTRN CODE(CONSOL_OUT, MONITOR) ;Defined elsewhere
		10	
		11	;The main program
0000 020000 F		12	CSEG AT 0 ;Skip interrupt vectors if any
		13	JMP START
		14	
		15	RSEG PROG_S
0000 900000 F		16	START: MOV DPTR,#SIGNON ;Print signon message
0003 120000 F		17	CALL CONSOL_OUT
0006 020000 F		18	JMP MONITOR ;Enter the monitoring loop
		19	
		20	
		21	RSEG TABLE_S
0000 1A		22	SIGNON: DB LEN,"8051-BASED MONITOR, V1.0", CR, LF
0001 38303531			
0005 20424153			
0009 45442040			
000D 4F4E4954			
0011 4F522C20			
0015 56312E30			
0019 00			
001A 0A			
001A		23	LEN EQU \$-SIGNON-1 ;Compute message length
		24	
		25	END

Figure 1-3. Sample Program Listing

 MCS-51 MACRO ASSEMBLER 8051-BASED MONITOR

SYMBOL TABLE LISTING

NAME	TYPE	VALUE	ATTRIBUTES
CONSOL_OUT	C ADDR	----	EXT
CR	NUMB	0000H	A
LEN.	NUMB	001AH	A
LF	NUMB	000AH	A
MONITOR. . . .	C ADDR	----	EXT
PROG_S. . . .	C SEG	0009H	REL=UNIT
SIGNON. . . .	C ADDR	0000H	R SEG=TABLE_S
START.	C ADDR	0000H	R SEG=PROG_S
TABLE_S. . . .	C SEG	001BH	REL=UNIT

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure 1-3. Sample Program Listing (Cont'd.)

Figure 1-3 shows the listing file of a simple module which is part of a larger program not shown here. A larger example is provided in Appendix H.

The next step after the program is assembled by ASM51 is to combine all modules into one program using RL51. RL51 produces a summary listing file consisting of a memory map and a symbol table. (Refer to the *MCS-51 Utilities User's Guide*, 121737.)

The next step in debugging your code is to program it into an EPROM 8751 and test it in a prototype environment. (Further testing could be done via ICE-51.) To program your code into an 8751, you must have a UPP connected to your Intellec system. For a complete description of how to use UPP and UPM, see *Universal PROM Programmer Reference Manual*, order number 9800133 and *Universal PROM Programmer User's Manual*, order number 9800819.

Hardware Overview

The 8051 is a high-density microcomputer on a single chip. Its major features are:

- Resident 4K bytes of ROM or EPROM program memory (no program memory resident on 8031), expandable to 64K bytes
- Resident 128 bytes of RAM memory, which includes four banks of 8 general-purpose registers and a stack for subroutine and interrupt routine calls
- 64K bytes of external RAM address space
- 16-bit Program Counter giving direct access to 64K bytes of memory
- 8-bit stack pointer that can be set to any address in on-chip RAM
- Two programmable 16-bit timers/counters
- Programmable full duplex serial I/O ports
- Four 8-bit bidirectional parallel I/O ports
- Timer and I/O interrupts with two levels of priority
- 111 instructions with 51 basic functions (including memory to memory move)
- Boolean functions with 128 software flags, numerous hardware flags, and 12 bit-operand instructions

- One microsecond instruction cycle time
- Arithmetic and logic unit that includes add, subtract, multiply, and divide arithmetic functions, as well as *and*, *or*, *exclusive or*, and *complement* logic functions.

Figure 1-4 is a block diagram of the 8051 processor. It shows the data paths and principal functional units accessible to the programmer.

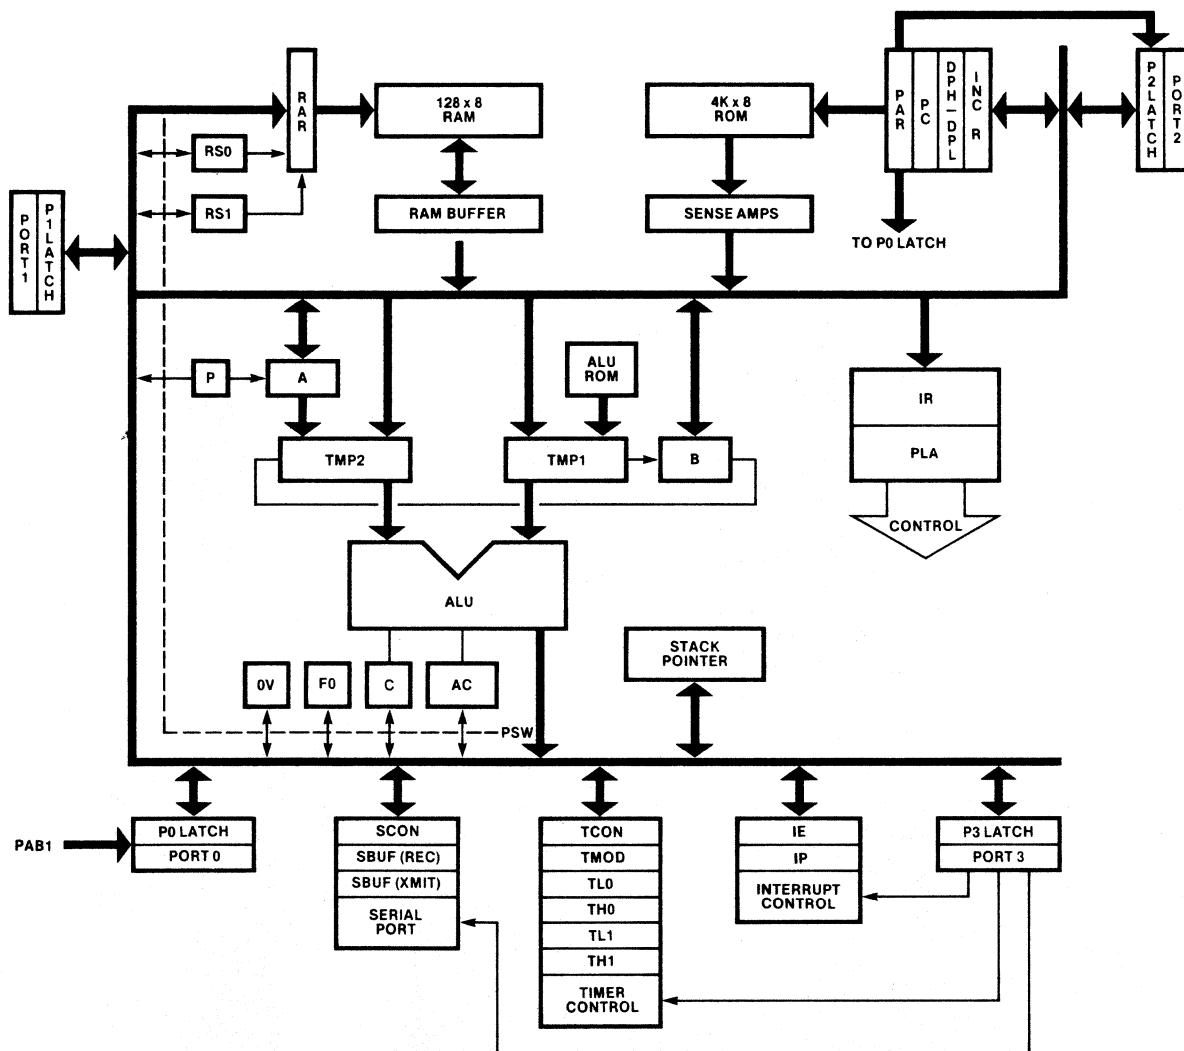


Figure 1-4. 8051 Block Diagram

Memory Addresses

The 8051 has five address spaces:

- Code address space—64K, of which 4K are on-chip (except for the 8031 which has no on-chip ROM).
- Directly addressable internal data address space—128 bytes of RAM (0 - 127) and 128-byte hardware register address space (128 - 255, only 20 addresses are used); accessible by direct addressing.
- Indirectly addressable internal data address space—128 bytes (0 - 127), all of which is accessible by indirect addressing.
- External data address space—up to 64K of off-chip memory added by the user.
- Bit address space—shares locations accessible in the data address space; accessible by direct addressing.

The code address space, internal data address space (including both the directly and indirectly addressable space and the bit address space), and external data space correspond to three physically distinct memories, and are addressed by different machine instructions. This is an important distinction that is a key to understanding how to program the 8051.

When you specify in an operand to an instruction a symbol with the wrong attribute, ASM-51 generates an error message to warn you of the inconsistency. Chapters 2 and 3 show what segment type attribute is expected in each instruction, and Chapter 4 describes how to define a symbol with any of the segment type attributes.

Figure 1-5 shows the code address space (usually ROM), and the external data address space (usually RAM). Off-chip ROM and RAM can be tailored to use all or part of the address space to better reflect the needs of your application. You can access data in ROM and off-chip RAM with the MOVC and MOVX instructions respectively.

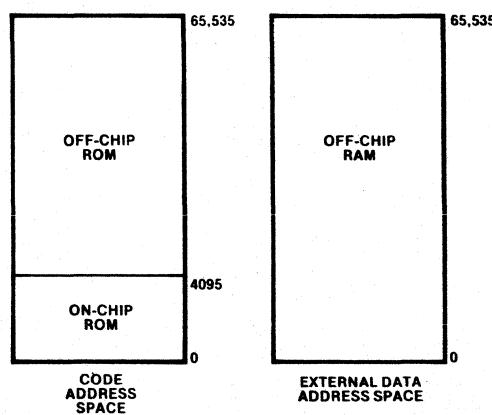


Figure 1-5. MCS-51 Code Address Space and External Data Address Space

To the programmer, there is no distinction between on-chip and off-chip code. The 16-bit program counter freely addresses on- and off-chip code memory with no change in instruction fetch time.

Figure 1-6 shows the data address space containing the bit address space. The data address space contains four banks of general-purpose registers in the low 32 bytes (0 - 1FH). In addition to the 128 bytes of RAM, the 8051's hardware registers are mapped to data addresses. The addresses from 128 to 255 are reserved for these registers, but not all of those addresses have hardware registers mapped to them. These reserved addresses are unusable.

When programming the 8051 and using indirect addressing, the user can access on-chip RAM from 0 to 127.

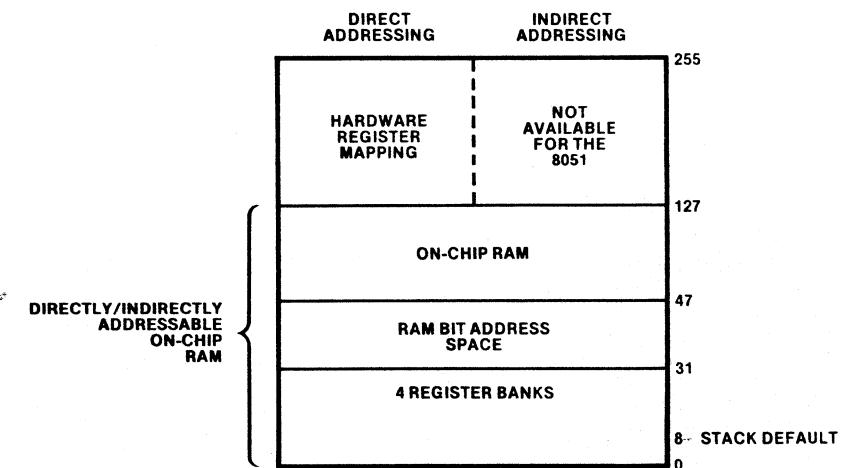


Figure 1-6. MCS-51 Data Address Space and Bit Address Space

937-5

Data Units

The 8051 manipulates data in four basic units—bits, nibbles (4 bits), bytes, and words (16 bits).

The most common data unit used is a byte; all of the internal data paths are 8 bits wide, and the code memory, the data memory, and the external data memory store and return data in byte units. However, there are many instructions that test and manipulate single bits. Bits can be set, cleared, complemented, logically combined with the carry flag, and tested for jumps. The nibble (BCD packed digit) is less commonly used in the 8051, but BCD arithmetic can be performed without conversion to binary representation.

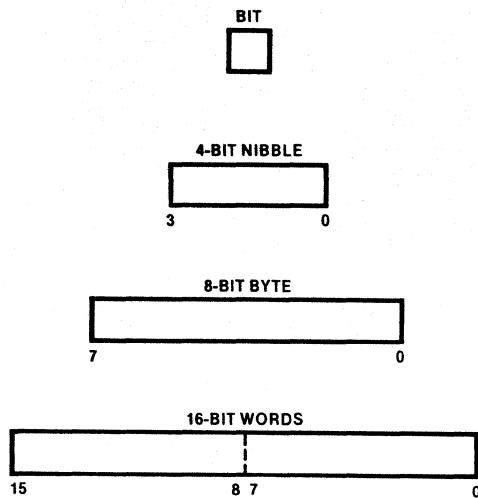


Figure 1-7. MCS-51 Data Units

937-6

Instructions that use 16-bit addresses deal with the Data Pointer (DPTR, a 16-bit register) and the Program Counter (jumps and subroutine calls). However, with the add with carry (ADDC) and subtract with borrow (SUBB) instructions, software implementation of 16-bit arithmetic is relatively easy.

Arithmetic and Logic Functions

The arithmetic functions include:

- ADD—signed 2's complement addition
- ADDC—signed 2's complement addition with carry
- SUBB—signed 2's complement subtraction with borrow
- DA—adjust 2 packed BCD digits after addition
- MUL—unsigned integer multiplication
- DIV—unsigned integer division
- INC—signed 2's complement increment
- DEC—signed 2's complement decrement

The accumulator receives the result of ADD, ADDC, SUBB, and DA functions. The accumulator receives partial result from MUL and DIV. DEC and INC can be applied to all byte operands, including the accumulator.

The logical functions include:

- ANL—logical *and* on each bit between 2 bytes or 2 bits
- CPL—logical *complement* of each bit within a byte or a single bit
- ORL—logical *or* on each bit between 2 bytes or 2 bits
- XRL—logical *exclusive or* on each bit between 2 bytes

The accumulator usually receives the result of the byte functions, and the carry flag usually receives the result of the bit functions, but some instructions place the result in a specified byte or bit in the data address space.

The instructions shown above are described in Chapter 3.

General-Purpose Registers

The 8051 has four banks of eight 1-byte general-purpose registers. They are located in the first 32 bytes of on-chip RAM (00H - 1FH). You can access the registers of the currently active bank through their special assembler symbols (R0, R1, R2, R3, R4, R5, R6, and R7). To change the active bank you modify the register bank select bits (RS0 and RS1) contained in the program status word (PSW, described in table 1-3). Table 1-1 below shows the bank selected for all values of RS0 and RS1.

Table 1-1. Register Bank Selection

RS1	RS0	Bank	Memory Locations
0	0	0	00H—07H
0	1	1	08H—0FH
1	0	2	10H—17H
1	1	3	18H—1FH

Registers R0 and R1 can be used for indirect addressing within the on-chip RAM. Each register is capable of addressing 256 bytes but the indirect addressing is limited by the physical range of the internal RAM. R0 and R1 also can address the external data space.

The Stack

The stack is located in on-chip RAM. It is a last-in-first-out storage mechanism used to hold the Program Counter during interrupts and subroutine calls. You can also use it to store and return data, especially the PSW, with the POP and PUSH instructions. The Stack Pointer contains the address of the top of the stack.

The Stack Pointer (SP) is an 8-bit register that may contain any address in on-chip RAM memory. However, on the 8051 it should never exceed 127. If it does, all data pushed is lost. *A pop, when the SP is greater than 127, returns invalid data.*

The SP always contains the address of the last byte pushed on the stack. On power-up (Reset) it is set to 07H, so the first byte pushed on the stack after reset will be at location 08H. This location is compatible with the 8048's stack. Most programs developed for the 8051 will reset the bottom of the stack by changing the contents of the SP before using the stack, because 08H-1FH is the area reserved for several of the 8051's general-purpose-register banks. The following instruction causes the next byte pushed on the stack to be placed at location 100.

```
MOV SP,#99      ; Initialize stack to start at location 100
                ; The hardware increments the SP
                ; BEFORE a push
```

Symbolically Addressable Hardware Registers

Each programmable register is accessible through a numeric data address, but the assembler supplies a predefined symbol that should be used instead of the register's numeric address. Table 1-2 identifies each hardware register, its numeric address, and its predefined symbol.

Table 1-2. Symbolically Addressable Hardware Registers for the 8051

Predefined Symbol	Data Address	Meaning
ACC	E0H	ACCUMULATOR (Data address of A)
B	F0H	MULTIPLICATION REGISTER
DPH	83H	DATA POINTER (high byte)
DPL	82H	DATA POINTER (low byte)
IE	A8H	INTERRUPT ENABLE
IP	B8H	INTERRUPT PRIORITY
P0	80H	PORT 0
P1	90H	PORT 1
P2	A0H	PORT 2
P3	B0H	PORT 3
PSW	D0H	PROGRAM STATUS WORD
SBUF	99H	SERIAL PORT BUFFER
SCON	98H	SERIAL PORT CONTROLLER
SP	81H	STACK POINTER
TCON	88H	TIMER CONTROL
TH0	8CH	TIMER 0 (high byte)
TH1	8DH	TIMER 1 (high byte)
TL0	8AH	TIMER 0 (low byte)
TL1	8BH	TIMER 1 (low byte)
TMOD	89H	TIMER MODE

The predefined symbols given in table 1-2 stand for the on-chip data addresses of the hardware registers. In many cases the only access to these registers is through these data addresses. However, some of the registers have an identity both as a special assembler symbol and as a data address symbol (e.g., both "ACC" and "A" stand for the accumulator), but even though these symbols may be semantically the same, they are syntactically different. For example,

ADD A,#27

is a valid instruction to add 27 to the contents of the accumulator, but

ADD ACC,#27

is invalid and will cause an error, because there is no form of ADD taking a data address as the destination (ACC specifies a data address). The differences become even more subtle in some assembly instructions where both symbols are valid but assemble into different machine instructions:

MOV A,#27	; assembles into a 2 byte instruction
MOV ACC,#27	; assembles into a 3 byte instruction

Chapter 2 describes the syntax for all instruction operands, and Chapter 3 describes the operands expected in each instruction.

Because the hardware registers are mapped to data addresses, there is no need for special I/O or control instructions. For example,

```
MOV A,P2
```

moves a copy of the input data at Port 2 to the accumulator. To output a character on the Serial I/O port (after preparing SCON), simply move the character into the Serial port buffer (SBUF):

```
MOV SBUF,#'?'
```

Bit Addressing

Many of the hardware control registers are also bit addressable. The flags contained in them can be accessed with a bit address as well as through the byte address shown above. One way to do this is through the bit selector ("."). For example, to access the 0 bit in the accumulator, you might specify ACC.0.

Bit addressing allows the same simplicity in testing and modifying control and status flags as was shown above with addressable registers. For example, to start Timer 0 running, set the run flag to 1 via its bit address (SETB TCON.4).

Throughout the remainder of this chapter, several programmable features, including predefined bit addresses of status and control flags, are discussed. To use these features, you simply modify the corresponding address as if it were a RAM location.

The Program Status Word

The Program Status Word (PSW) contains several status bits that reflect the state of the 8051. Figure 1-8 shows the predefined bit address symbol, the bit position, and meaning of each bit in the PSW.

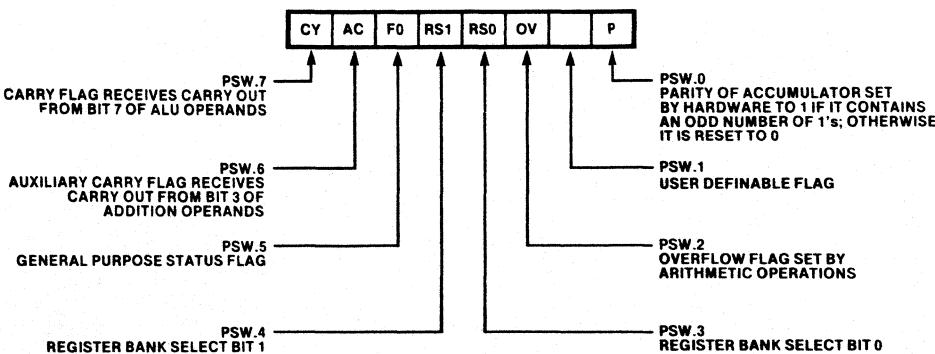


Figure 1-8. Bit Descriptions of Program Status Word

937-7

Timer and Counter

The 8051 has two independently programmable timers. They feature a 16-bit counter and are controlled by 2 registers, timer mode (TMOD) and timer control (TCON). Figure 1-9 shows the predefined bit address symbols, the positions and meanings of the bits in TCON. (For a complete description of the timer see the *MCS-51 User's Manual*.)

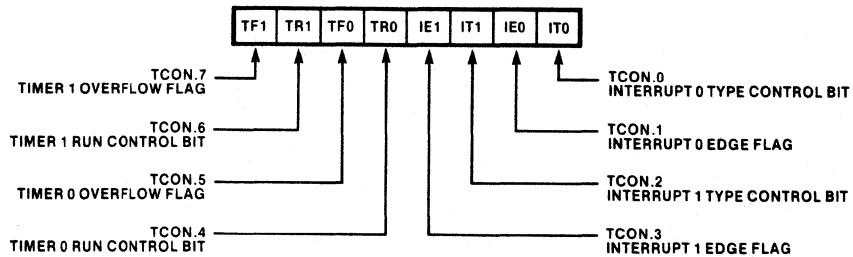


Figure 1-9. Bit Descriptions of TCON

937-8

I/O Ports

The 8051 has 4 8-bit I/O ports; each bit in the ports corresponds to a specific pin on the chip. All four ports are buffered by a port latch, and they are addressable through a data address (as a byte) or 8 bit addresses (as a set of bits). As noted earlier, this removes the need for special I/O instructions. The numeric data address and the predefined symbol for each port is shown below:

Port	Predefined Symbol	Data Address
0	P0	80H
1	P1	90H
2	P2	A0H
3	P3	B0H

Port 0 and Port 2 are used for external program and external data addressing. Port 0 also receives the input data from off-chip addressing. If off-chip memory is not implemented, then ports 0 and 2 are bidirectional I/O ports. Port 1 is a general purpose bidirectional I/O port.

Port 3 contains the external interrupt pins, the external timer, the external data memory read and write enables, and the serial I/O port transmit and receive pins. The bits that correspond to these pins are individually addressable via predefined bit address symbols. Figure 1-10 shows the meaning of each bit, its position in Port 3, and its predefined bit address symbol.

If the external interrupts, external data addressing, and serial I/O features of the 8051 are not used, Port 3 can function as a bidirectional I/O port.

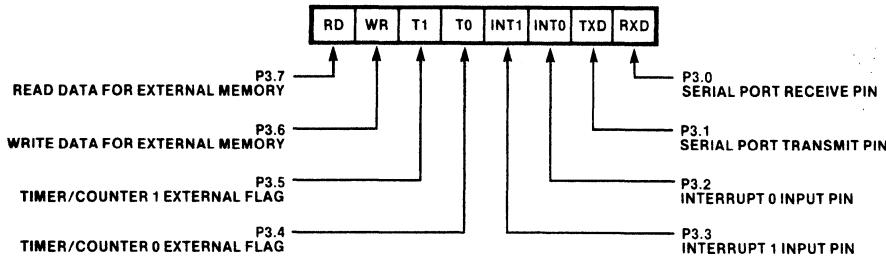


Figure 1-10. Bit Descriptions for Port 3

937-9

Serial I/O Port

The serial I/O port permits I/O expansion using UART protocols. The serial I/O port is controlled by Serial Port Controller (SCON), a register that is both bit addressable and byte addressable. Figure 1-11 shows the predefined bit address symbols, positions and meanings of the bits in SCON. For complete details of Serial I/O port control see the *MCS-51 User's Manual*.

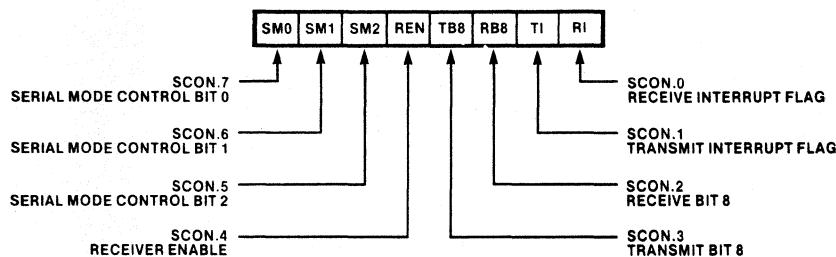


Figure 1-11. Bit Descriptions for Serial Port Control

937-10

Interrupt Control

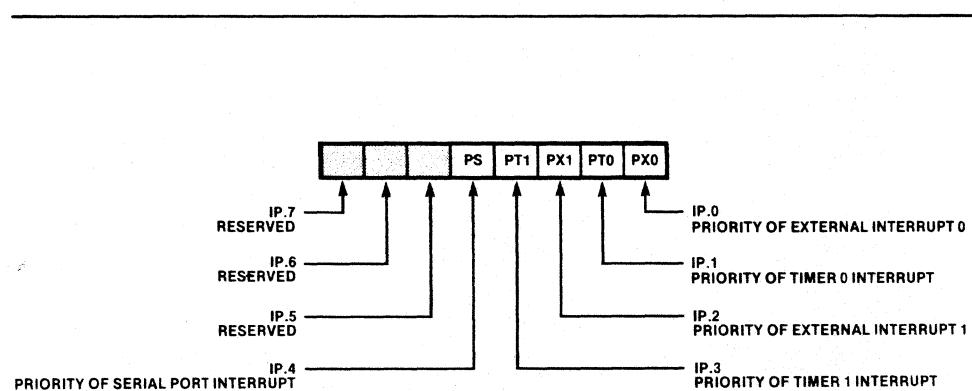
There are two registers that control timer and I/O interrupts and priorities. They are IE (Interrupt Enable) and IP (Interrupt Priority). When the interrupt enable bit for a device is 1, it can interrupt the processor. The 8051 does not respond to an interrupt until the instruction being executed has been completed (this can be as long as 4 cycles).

When it does respond, the 8051's hardware disables interrupts of the same or lesser priority and makes a subroutine call to the code location designated for the interrupting device. Typically, that location contains a jump to a longer service routine.

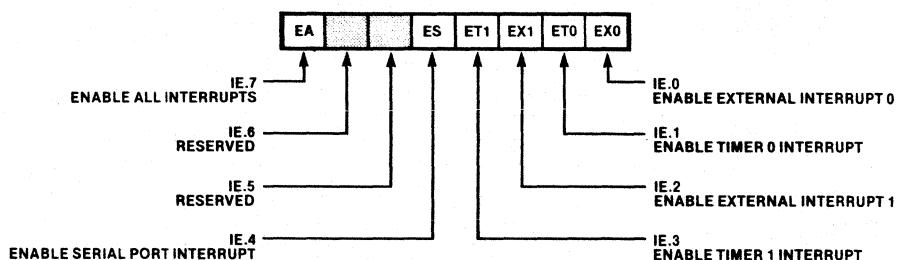
The instruction RETI must be used to return from a service routine, in order to re-enable interrupts. The reserved locations, the predefined labels, and the associated interrupt devices are listed below. These labels may be used to aid the placement of I/O routines in code memory.

Predefined Label	Location	Interrupting Device
RESET	00H	Power on Reset (First instruction executed on power up.)
EXTI0	03H	External interrupt 0
TIMER0	0BH	Timer 0
EXTI1	13H	External interrupt 1
TIMER1	1BH	Timer 1
SINT	23H	Serial I/O port

The 8051 has two levels of interrupt priority (0 and 1). Figure 1-12 shows the predefined bit address symbol, the position and the device associated with each bit contained in IE and IP. A level 1 priority device can interrupt a level 0 service routine, but a level 0 interrupt will not affect a level 1 service routine. Interrupts on the same level are disabled.



Interrupt Priority



Interrupt Enable

937-11

Figure 1-12. Bit Descriptions for Interrupt Enable and Interrupt Priority

Reset


On reset all of the registers in the 8051 assume an initial value. Table 1-3 shows these initial values. This will always be the state of the chip when your code begins execution. You can use these initial values or reinitialize them as necessary in your program.

Table 1-3. State of the 8051 after Power-up

Register	Value
Accumulator	00H
Multiplication Register	00H
Data Pointer	0000H
Interrupt Enable	00H
Interrupt Priority	00H
Port 0	0FFH
Port 1	0FFH
Port 2	0FFH
Port 3	0FFH
Program Counter	0000H
Program Status Word	00H
Serial Port Control	00H
Serial I/O Buffer	undefined
Stack Pointer	07H
Timer Control	00H
Timer Mode	00H
Timer 0 Counter	0000H
Timer 1 Counter	0000H

NOTE

The PC is always set to 0 on reset, thus the first instruction executed in a program is at ROM location 0. The contents of RAM memory is unpredictable at reset.



This chapter discusses the operand types used by ASM51. It describes their use and some of the ways you can specify them in your program. The latter part of the chapter deals with expressing numbers and using expressions.

There are two terms used throughout this chapter that require some definition: Assembly-time expressions and RL-time expressions. Assembly-time expressions are those expressions evaluated at assembly; they are absolute expressions. RL-time expressions are those evaluated at the time of relocation; they are relocatable expressions that are made absolute by RL51.

Operands

The general form of all instruction lines is as follows:

[label:] Mnemonic [operand] [,operand] [,operand] [;comment]

The number of operands and the type of operands expected depend entirely on the mnemonic. Operands serve to further define the operation implied by a mnemonic, and they identify the parts of the machine affected by the instruction.

All operands fall into one of six classes:

- Special Assembler Symbols
- Indirect Addresses
- Immediate Data
- Data Addresses (on-chip)
- Bit Addresses
- Code Addresses

A special assembler symbol is a specific reserved word required as the operand in an instruction.

Indirect addresses use the contents of a register to specify a data address.

The remaining operand types (immediate data, data addresses, bit addresses, and code addresses) are numeric expressions. They may be specified symbolically, but they must evaluate to a number. If the expression can be evaluated completely at assembly time, it is called an absolute expression; if not, it is called a relocatable expression. The range permitted for a numeric operand depends on the instruction with which it is used. The operand can be made up of predefined or user-defined symbols, numbers, and assembly-time operators.

As described in Chapter 1, there are five address spaces on the 8051. The corresponding segment type is given in parentheses.

- Directly addressable data address space (DATA)
- Bit address space (BIT)
- External data address space (XDATA)
- Code address space (CODE)
- Indirectly addressable data space (IDATA)

In some cases the same numeric value is a valid address for all five address spaces. To help avoid logic errors in your program, ASM51 attaches a segment type and performs type checking for instruction operands (and arguments to assembler directives), that address these segments. For example, in jump instructions the assembler checks that the operand, the target address, has a segment type CODE. Possible segment types are DATA, BIT, CODE, XDATA, and IDATA. Chapter 4 describes how to define symbols with different segment types.

Special Assembler Symbols

The assembler reserves several symbols to designate specific registers as operands. A special assembler symbol is encoded in the opcode byte, as opposed to a data address which is encoded in an operand byte. Table 2-1 lists these symbols and describes the hardware register each represents.

If the definition of an instruction requires one of these symbols, only that special symbol can be used. However, you can, with the SET and EQU directives, define other symbols to stand for the accumulator (A) or the working registers (R0,...R7). Symbols so defined may not be forward referenced in an instruction operand. You cannot use a special assembler symbol for any other purpose in an instruction operand or directive argument. Several examples of instructions that use these symbols are shown below.

INC DPTR	;increment the entire 16-bit contents of the Data Pointer by 1
SETB C	;set the Carry flag to 1
JMP @A + DPTR	;add the contents of the accumulator to the contents of the data ;pointer and jump to that address

In addition to these symbols, the assembler also recognizes the location counter symbol (\$), described in Chapter 4, and the register address symbols AR0, AR1, ..., AR7, described with the USING directive in Chapter 4.

Table 2-1. Special Assembler Symbols

Special Symbol	Meaning
A	Accumulator
R0, R1, R2, R3, R4, R5, R6, R7	Stands for the 8 general registers in the currently active bank (4 register banks available)
DPTR	Data pointer: a 16-bit register used for addressing in the code address space and the external address space
PC	Program counter: a 16-bit register that contains the address of the next instruction to be executed
C	Carry flag receives ALU carry out and borrow from bit 7 of the operands
AB	Accumulator/B register pair used in MUL and DIV instructions

Indirect Addressing

An indirect address operand identifies a register that contains the address of a memory location to be used in the operation. The actual location affected will depend on the contents of the register when the instruction is executed. In most instructions indirect addresses affect on-chip RAM. However, the MOVC and MOVX instructions use an indirect address operand to address code memory and external data memory, respectively.

In on-chip indirect addressing (the IDATA space), either register 0 or register 1 of the active register bank can be specified as an indirect address operand. The commercial at sign (@) followed by the register's special symbol (R0 or R1), or a symbol defined to stand for the register's special symbol, indicates indirect addressing. On the 8051 the address contained in the specified indirect address registers must be between 0 and 127 (since you cannot access hardware registers through indirect addressing.) If an indirect address register contains a value greater than 127 when it is used for on-chip addressing, the program continues with no indication of the error. If it is a source operand, a byte containing undefined data is returned. If it is a destination operand, the data is lost.

The following examples show several uses of indirect addressing.

ADD A,@R1	;add the contents of the on-chip RAM location addressed by ;register 1 to the accumulator
INC @R0	;increment the contents of the on-chip RAM location addressed ;by register 0
MOVX @DPTR,A -	;move the contents of the accumulator to the off-chip memory ;location addressed by the data pointer

Immediate Data

An immediate data operand is a numeric expression that, when assembled, is encoded as part of the machine instruction. The pound sign (#) immediately before the expression indicates that it is an immediate data operand. The numeric expression must be a valid assembly-time expression or RL-time expression.

The assembler represents all numeric expressions in 16 bits, and converts to the appropriate form for instruction encoding.

Most instructions require the value of the immediate data to fit into a byte. The low order byte of the assembler's 16-bit internal representation is used. The assembler permits a numeric expression range of values from -256 to +255. These values all have a homogeneous high order byte (i.e., all ones or all zeroes) when represented in 16 bits. The low order byte of the assembler's 16-bit internal representation is used. Note that since only the lower order byte is taken as the result of the expression, the sign information, i.e., the higher order byte, is lost.

The immediate data operands that accept a 16-bit value can use any value representable by the assembler. Immediate data operands do not require any specific segment type. XDATA and IDATA type operands can be specified only as immediate operands; i.e., you have to load these addresses first into a register and then access them.

The following examples show several ways of specifying the immediate data operand.

MOV A,#0E0H	;place the hex constant E0 in the accumulator
MOV DPTR,#0A14FH	;this is the only instruction that uses a 16-bit immediate data operand
ANL A,#128	;mask out all but the high order bit of the accumulator (128-base 10) = 10000000 (base 2)
MOV R0,#IDATA__SYM	;Load R0 with IDATA symbol for later access

Data Addressing

The data address operand is a numeric expression that evaluates to one of the first 128 on-chip byte addresses or one of the hardware register addresses. The low-order byte of the assembler's 16-bit internal representation is used. This permits a range from -256 to +255. Note that since only the lower order byte is taken as the result of the expression, the sign information (i.e., the higher order byte) is lost. Instructions that use the data address operand require that the symbol or expression specified be either of segment type DATA or be a typeless number. (Symbols are discussed below under expression evaluation.)

The direct data addresses from 0 to 127 access the 8051's on-chip RAM space, while the addresses from 128 to 255 access the hardware registers. Not all of the addresses in the hardware register space are defined. The illustration below (figure 2-1) shows the meaningful addresses and their predefined data address names.

If you read from a reserved address, undefined data will be returned. If you write to a reserved address, the data will be lost. Using these peculiarities in your program may result in incompatibility with future versions of the chip. Note that using indirect addressing for locations above 127 will access IDATA space rather than hardware register space.

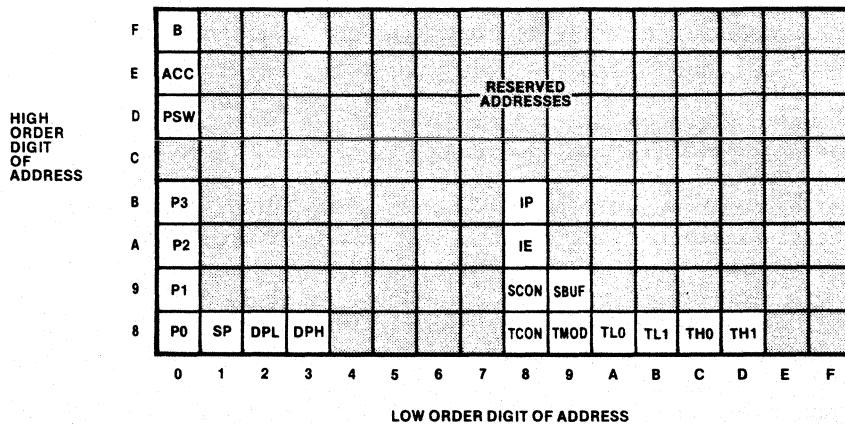


Figure 2-1. Hardware Register Address Area for 8051

937-12

The following examples show several ways of specifying data addresses.

MOV P1,A	;move the contents of the accumulator to the predefined data address 90 ;(base 16) port 1
ORL A,20*5	;logical OR of accumulator with location 100 (base 10) uses an ;assembly-time operator multiply
INC COUNT	;increment the location identified by the symbol COUNT
INC 32	;increment location 32(base 10) in memory

Bit Addressing

A bit address represents a bit-addressable location either in the internal RAM (bytes 32 through 47) or a hardware bit. There are two ways to represent a bit address in an operand.

1. You can specify the byte that contains the bit with a DATA type address, and single out the particular bit in that byte with the bit selector ("." period) followed by a bit identifier (0-7). For example, FLAGS.3, 40.5, 21H.0 and ACC.7 are valid uses of the bit selector. You can use an assembly-time expression to express the byte address or the bit identifier. The assembler will translate this to the correct absolute or relocatable value. Note that only certain bytes in the on-chip address space are bit addressable. If the data address is specified by a relocatable expression, the referenced segment must have BITADDRESSABLE relocation type (see Chapter 6 for segments). The expression that specifies the bit address must be absolute.
2. You specify the bit address explicitly. The expression now represents the bit address in the bit space (it must have a BIT segment type). Note that bit addresses 0 through 127 map onto bytes 32 through 47 of the on-chip RAM, and bits 128 through 255 map onto the bit addressable locations of the hardware register space (not all the locations are defined).

If the bit address is used in the context of BIT directive, then the first expression must be an absolute or simple relocatable expression. If used in a machine instruction where a bit address is expected, then a general relocatable expression is also allowed.

Figures 2-2a and 2-2b show the bits assigned to each numeric bit address.

The following examples show several ways of specifying bits.

SETB TR1	;set the predefined bit address TR1 (timer 1 run flag)
SETB ALARM	;set the user defined bit ALARM
SETB 88H.6	;Set bit 6 of location 88H (timer 1 run flag)
CPL FLAGS.ON	;complement the bit ON of the byte FLAGS
SETB 8EH	;set the bit address 8E(base 16) (timer 1 run flag)

As with data addresses, there are several bit addresses that are predefined as symbols that you can use in an operand. Table 2-2 shows these predefined bit addresses. You can also define your own bit address symbols with the BIT directive described in Chapter 4, Assembler Directives.

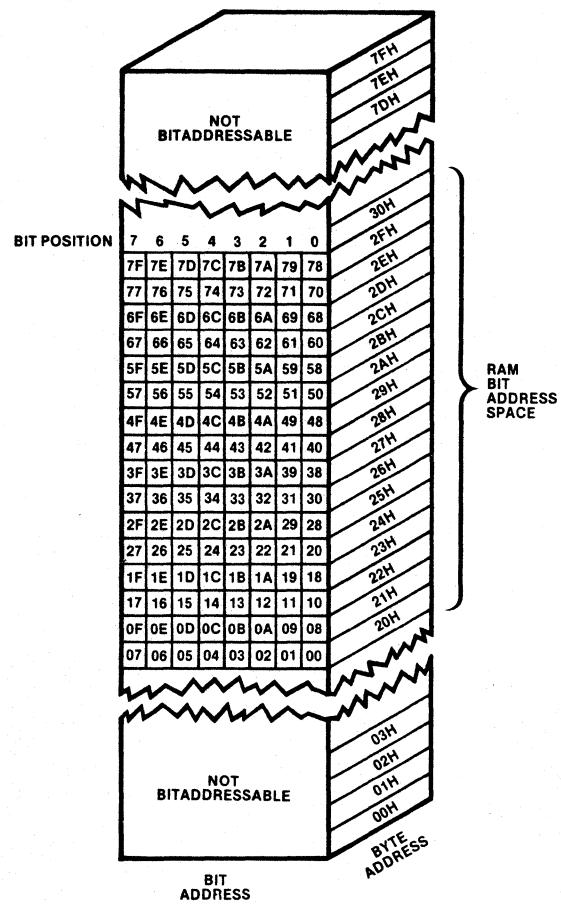


Figure 2-2a. Bit Addressable Bytes in RAM

937-13

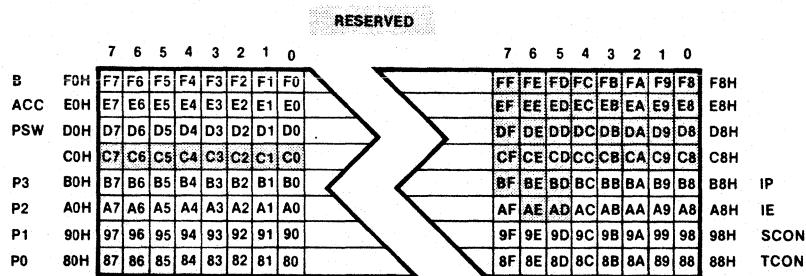


Figure 2-2b. Bit Addressable Bytes in Hardware Register Address Area for 8051

937-14

Table 2-2. Predefined Bit Addresses for 8051

Symbol	Bit Position	Bit Address	Meaning
CY	PSW.7	D7H	Carry Flag
AC	PSW.6	D6H	Auxiliary Carry Flag
F0	PSW.5	D5H	Flag 0
RS1	PSW.4	D4H	Register Bank Select Bit 1
RS0	PSW.3	D3H	Register Bank Select Bit 0
OV	PSW.2	D2H	Overflow Flag
P	PSW.0	D0H	Parity Flag
TF1	TCON.7	8FH	Timer 1 Overflow Flag
TR1	TCON.6	8EH	Timer 1 Run Control Bit
TF0	TCON.5	8DH	Timer 0 Overflow Flag
TR0	TCON.4	8CH	Timer 0 Run Control Bit
IE1	TCON.3	8BH	Interrupt 1 Edge Flag
IT1	TCON.2	8AH	Interrupt 1 Type Control Bit
IE0	TCON.1	89H	Interrupt 0 Edge Flag
IT0	TCON.0	88H	Interrupt 0 Type Control Bit
SM0	SCON.7	9FH	Serial Mode Control Bit 0
SM1	SCON.6	9EH	Serial Mode Control Bit 1
SM2	SCON.5	9DH	Serial Mode Control Bit 2
REN	SCON.4	9CH	Receiver Enable
TB8	SCON.3	9BH	Transmit Bit 8
RB8	SCON.2	9AH	Receive Bit 8
TI	SCON.1	99H	Transmit Interrupt Flag
RI	SCON.0	98H	Receive Interrupt Flag
EA	IE.7	AFH	Enable All Interrupts
ES	IE.4	ACH	Enable Serial Port Interrupt
ET1	IE.3	ABH	Enable Timer 1 Interrupt
EX1	IE.2	AAH	Enable External Interrupt 1
ET0	IE.1	A9H	Enable Timer 0 Interrupt
EX0	IE.0	A8H	Enable External Interrupt 0
RD	P3.7	B7H	Read Data for External Memory
WR	P3.6	B6H	Write Data for External Memory
T1	P3.5	B5H	Timer/Counter 1 External Flag
T0	P3.4	B4H	Timer/Counter 0 External Flag
INT1	P3.3	B3H	Interrupt 1 Input Pin
INT0	P3.2	B2H	Interrupt 0 Input Pin
TXD	P3.1	B1H	Serial Port Transmit Pin
RXD	P3.0	B0H	Serial Port Receive Pin
PS	IP.4	BCH	Priority of Serial Port Interrupt
PT1	IP.3	BBH	Priority of Timer 1 Interrupt
PX1	IP.2	BAH	Priority of External Interrupt 1
PT0	IP.1	B9H	Priority of Timer 0
PX0	IP.0	B8H	Priority of External Interrupt 0

Code Addressing

Code addresses are either absolute expressions whose values are within 0 to 65,535, or relocatable expressions with a segment type of CODE. There are three types of instructions that require a code address in their operands. They are relative jumps, in-block (2K page) jumps or calls, and long jumps or calls.

The difference between each type is the range of values that the code address operand may assume. All three expect an expression which evaluates to a CODE type address (an absolute expression between 0 and 65,535 or a relocatable operand), but if you specify a relative jump or an in-block jump, only a small subset of all possible code addresses is valid. Instructions that use the code address operand require that the symbol or expression specified be either of segment type CODE or a typeless number. (Symbols and labels are discussed below under absolute expression evaluation.)

Relative Jumps (SJMP and Conditional Jumps)

The code address in a relative jump must be close to the relative jump instruction itself. The range is from -128 to +127 bytes from the first byte of the instruction that follows the relative jump.

The assembler takes the specified code address and computes a relative offset that is encoded as an 8-bit 2's complement number. That offset is added to the contents of the program counter (PC) when the jump is made; but since the PC is always incremented to the next instruction before the jump is executed, the range is computed from the succeeding instruction.

When you use a relative jump in your code, you must use an expression that evaluates to the code address of the jump destination. The assembler does all the offset computations. If the address is out of range, the assembler will issue an error message.

In-Block Jumps and Calls (AJMP and ACALL)

The code address operand to an in-block jump or call is an expression that is evaluated and then encoded in the instruction. The low order 11 bits of the destination address are placed in the opcode byte and the operand byte. When the jump or call is executed, the 11-bit page address replaces the low order 11 bits of the program counter. This permits a range of 2048 bytes, or anywhere within the current block. The current block is thus determined by the high order 5 bits of the address of the next instruction. If the operand is not in the current block, this is an assembler (or RL51) error.

Note that if the in-block jump or call is the last instruction in a block, the high order bits of the program counter change when incremented to address the next instruction; thus the jump will be made within that new block.

Long Jumps and Calls (LJMP and LCALL)

The code address operand to a long jump or call is an expression that will be evaluated and then encoded as a 16-bit value in the instruction by the assembler, or, if the expression is relocatable, by RL51. All 16 bits of the program counter are replaced by this new value when the jump or call is executed. Since 16 bits are used, any value representable by the assembler will be acceptable (0 - 65,535).

The following examples show each type of instruction that calls for a code address.

SJMP LABEL	;Jump to LABEL (relative offset LABEL must be within -128 and +127 ;of instruction that follows SJMP
ACALL SORT	;Call subroutine labelled SORT (SORT must be an address within the ;current 2K page)
LJMP EXIT	;Long jump; the label or symbol EXIT must be defined somewhere in ;the program.

Generic Jump and Call (JMP and CALL)

The assembler provides two instruction mnemonics that do not represent a specific opcode. They are JMP and CALL. JMP may assemble to ACALL or LCALL. These generic mnemonics will always evaluate to an instruction, not necessarily the shortest, that will reach the specified code address operand.

This is an effective tool to use during program development, since sections of code change drastically in size with each development cycle. (See Chapter 3 for a complete description of both generic jumps.) Note that the assembler decision may not be optimal. For example, if the code address is a forward reference, the assembler will generate a long jump although an in-block or short jump may be possible.

Assembly-Time Expression Evaluation

An expression is a combination of numbers, character strings, symbols, and operators that evaluate to a single 16-digit binary number. Except for some directives, all expressions can use forward references (symbols that have not been defined at that point in the program) and any of the assembly-time operators.

Specifying Numbers

You can specify numbers in hexadecimal (base 16), decimal (base 10), octal (base 8), and binary (base 2). The default representation, used when no base designation is given, is decimal. Table 2-3 below shows the digits of each numbering system and the base designation character for each system (uppercase and lowercase characters are permitted).

The only limitation to the range of numbers is that they must be representable within 16 binary digits.

Table 2-4 gives several examples of number representation in each of the number systems.

Table 2-3. Assembly Language Number Representation

Number System	Base Designator	Digits in Order of Value
Binary	B	0, 1
Octal	O or Q	0, 1, 2, 3, 4, 5, 6, 7
Decimal	D or (nothing)	0, 1, 2, 3, 4, 5, 6, 7, 8, 9
Hexadecimal	H	0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F

Table 2-4. Examples of Number Representation

base 16	base 10	base 8	base 2
50H	80	120Q	01010000B
0ACH*	172D	254Q	10101100B
01h	1	1Q	1B
10H	16d	20Q	10000B

*A hexadecimal number must start with a decimal digit; 0 is used here.

ASM51 Number Representation

Internally, ASM51 represents all numeric values with 16 bits. When ASM51 encounters a number in an expression, it immediately converts it to 16-bit binary representation. Numbers cannot be greater than 65,535. Appendix H describes conversion of positive numbers to binary representation.

Negative numbers (specified by the unary operator “-”) are represented in 2's complement notation. There are two steps to converting a positive binary number to a negative (2's complement) number.

0000 0000 0010 0000B	= 20H	
1111 1111 1101 1111	= Not 20H	1. Complement each bit in the number.
1111 1111 1110 0000	= (Not 20H) + 1	2. Add 1 to the complement.
1111 1111 1110 0000B	= -20H	

To convert back simply perform the same two steps again.

Although 2's complement notation is used, ASM51 does not convert these numbers for comparisons. Therefore, large positive numbers have the same representation as small negative numbers (e.g., $-1 = 65,535$). Table 2-5 shows number interpretation at assembly-time and at program execution-time.

Table 2-5. Interpretations of Number Representation

Number Characteristic	Assembly-Time Expression Evaluation	Program Execution Arithmetic
Base Representation	Binary, Octal, Decimal, or Hexadecimal	Binary, Octal, Decimal, or Hexadecimal
Range	0-65,535	User Controlled
Evaluates To:	16 Bits	User Interpretation
Internal Notation	Two's Complement	Two's Complement
Signed/Unsigned Arithmetic	Unsigned	User Interpretation

Character Strings in Expressions

The MCS-51 assembler allows you to use ASCII characters in expressions. Each character stands for a byte containing that character's ASCII code. (Appendix H contains a table of the ASCII character codes.) That byte can then be treated as a numeric value in an expression. In general, two characters or less are permitted in a string (only the DB directive accepts character strings longer than two characters). In a one character string the high byte is filled with 0's. With a two character string, the first character's ASCII value is placed in the high order byte, and the second character's value is placed in the low order byte.

All character strings must be surrounded by the single quote character ('). To incorporate the single quote character into the string, place two single quote characters side-by-side in a string. For example, 'z'' is a string of two characters: a lower case "Z" and the single quote character.

The ability to use character strings in an expression offers many possibilities to enhance the readability of your code. Below, there are two examples of how character strings can be used in expressions.

```

TEST: CJNE A,#'X',SKIP ; If A contains 'X' then fall through
JMP FOUND           ; Otherwise, jump to skip and
SKIP: MOV A,@R1      ; Move next character into accumulator
INC R1              ; Change R1 to point to next character
DJNZ R2,TEST        ; JUMP to TEST if there are still more
                     ; characters to test

MOV A,SBUF          ; Move character in serial port buffer
                     ; to accumulator
SUBB A,#'0'         ; Subtract '0' from character just read
                     ; this returns binary value of the digit

```

NOTE

A corollary of this notation for character strings is the null string—two single quotes surrounding no characters (side-by-side). When the null character string is used in an expression it evaluates to 0, but when used as an item in the expression list of a DB directive it will evaluate to nothing and will not initiate memory. (See Chapter 4 for an example.)

Use of Symbols

The assembler has several kinds of symbols available to the programmer. They may stand for registers, segments, numbers, and memory addresses. They allow a programmer to enhance the readability of his code.

Symbols are defined by four attributes:

- Type—register, segment, number, address
- Segment Type—DATA, BIT, XDATA, CODE, IDATA
- Scope—local, public, external
- Value—register name, segment base address, constant value, symbol address (depending on type)

Not all of these four attributes are valid combinations.

The type attribute provides a common classification to the symbols:

- Register—indicates symbols which were defined as such by EQU or SET directives
- Segment—indicates symbols which were designated as relocatable segments
- Number—indicates that the symbol represents a pure number and can be used in any expression. (It has no segment type.)
- Address—indicates that the symbol represents a memory address.

The segment type specifies, for segment symbols, the address space where the segment resides. For address type symbols, it specifies the way the symbol may be used (as a DATA address, BIT address, etc.). Usually it is identical to the address space in which the owning segment was defined. The only exception is for symbols defined as bits within a BITADDRESSABLE DATA type segment (see the Bit directive in Chapter 4). Such symbols have a BIT type.

The scope attribute is valid for number and address type symbols. It specifies whether the symbol is local, public, or external.

The value attribute is defined with respect to the type of the symbol:

- Register—the value is the name (in ASCII) of the register
- Segment—the value is the base address (computed at RL-time)
- Number—the value of the constant
- Address—for an absolute symbol, the value is the absolute address within the containing address space. For a relocatable address symbol, the value is the offset (in bits or bytes depending on the segment type) from the base of its owning segment.

Once you have defined a symbol anywhere in your program (some expressions require that no forward references be used), you can use it in any numeric operand in the same way that you would use a constant, providing you respect segment type conventions. The segment type required for each numeric operand is described above. The creation of user-defined symbols is completely described in Chapter 4.

Besides the user-defined symbols, there are several predefined addresses available for the hardware registers and flags. Table 2-6 shows all of the predefined data address symbols and the values they represent. The bit address symbols have been listed earlier in this chapter. (See Table 2-2.)

Remember that these symbols evaluate to a data address and cannot be used in instructions that call for a special assembler symbol.

ADD A,#5	; This is a valid instruction. A is the special ; assembler symbol required for this operand
ADD ACC,#5	; This is an invalid instruction and will generate ; an error message. ACC is an address and not ; the special symbol required for the instruction

There is an additional symbol that may be used in any numeric operand, the location counter (\$). When you are using the location counter in an instruction's operand, it

Table 2-6. Predefined Data Addresses for 8051

Symbol	Hexadecimal Address	Meaning
ACC	E0	Accumulator
B	F0	Multiplication Register
DPH	83	Data Pointer (high byte)
DPL	82	Data Pointer (low byte)
IE	A8	Interrupt Enable
IP	B8	Interrupt Priority
P0	80	Port 0
P1	90	Port 1
P2	A0	Port 2
P3	B0	Port 3
PSW	D0	Program Status Word
SBUF	99	Serial Port Buffer
SCON	98	Serial Port Controller
SP	81	Stack Pointer
TCON	88	Timer Control
TH0	8C	Timer 0 (high byte)
TH1	8D	Timer 1 (high byte)
TL0	8A	Timer 0 (low byte)
TL1	8B	Timer 1 (low byte)
TMOD	89	Timer Mode

will stand for the address of the first byte of the instruction currently being encoded. You can find a complete description of how to use and manipulate the location counter in Chapter 4, Assembler Directives.

Using Operators in Expressions

There are four classes of assembly-time operators: arithmetic, logical, special, and relational. All of them return a 16-bit value. Instruction operands that require only 8 bits will receive the low order byte of the expression. The distinction between each class of operators is loosely defined. Since they may be used in the same expression, they work on the same type of data, and they return the same type of data.

Arithmetic Operators

Table 2-7 contains a list of all the arithmetic operators.

Table 2-7. Arithmetic Assembly-Time Operators

Operator	Meaning
+	Unary plus or add
-	Unary minus or subtract
*	Multiplication
/	Integer division (discard remainder)
MOD	Modular division (discard quotient)

The following examples all produce the same bit pattern in the low order byte (0011 0101B):

```
+53
27+26
-203
65-12
2*25+3    multiplication is always executed before the addition
160/3
153 MOD 100
```

Note that the MOD operator must be separated from its operands by at least one space or tab, or have the operands enclosed in parentheses.

Logical Operators

Table 2-8 contains a list of all logical operators. The logical operators perform their operation on each bit of their operands.

Table 2-8. Logical Assembly-Time Operators

Operator	Meaning
OR	Full 16-bit OR
AND	Full 16-bit AND
XOR	Full 16-bit exclusive OR
NOT	Full 16-bit complement

The following examples all produce the same 8-bit pattern in the low order byte (0011 0101B):

```
00010001B OR 00110100B
01110101B AND 10110111B
11000011B XOR 11110110B
NOT 11001010B
```

Note that all logical operators must be separated from their operand by at least one space or tab, or have the operands enclosed in parentheses.

Special Assembler Operators

Table 2-9 contains a list of all special operators:

Table 2-9. Special Assembly-Time Operators

Operator	Meaning
SHR	16-bit shift right
SHL	16-bit shift left
HIGH	Select the high order byte of operand
LOW	Select the low order byte of operand
()	Evaluate the contents of the parenthesis first

The following examples all produce the same 8-bit pattern in the low order byte (0011 0101B):

01AFH SHR 3	Bits are shifted out the right end and 0 is shifted into the left.
HIGH (1135H SHL 8)	Parenthesis is required since HIGH has a greater precedence than SHL. Bits are shifted out the left and 0 is shifted in the right.
LOW 1135H	Without using the LOW operator, the high order byte would have caused an error in an 8-bit operand.

Note SHR, SHL, HIGH and LOW must be separated from their operands by at least one space or tab, or have the operands enclosed in parentheses.

Relational Operators

The relational operators differ from all of the other operators in that the result of a relational operation will always be either 0 (False) or 0FFFFH(True). Table 2-10 contains a list of all the relational operators:

Table 2-10. Relational Assembly-Time Operators

Operator	Meaning
EQ =	Equal
NE <>	Not equal
LT <	Less than
LE <=	Less than or equal to
GT >	Greater than
GE >=	Greater than or equal to

The following examples all will return TRUE (0FFFFH):

```
27H EQ 39D
27H <> 27D
33 LT 34
7 > 5
16 GE 10H
```

Note that the two-letter (mnemonic) form of the relational operator must be separated from their operands by at least one space or tab; the symbolic form does not. If the space or tab is not used, the operand must be enclosed in parentheses.

Operator Precedence

Every operator is given a precedence in order to define which operator is evaluated first in an expression. For example, the expression $3*5+1$ could be interpreted as 16 or 18 depending on whether the $*$ or the $+$ is evaluated first. The following list shows the precedence of the operators in descending order.

- Parenthesized expression ()
- HIGH, LOW
- *, /, MOD, SHL, SHR
- +, - *unary and binary forms*
- EQ, NE, LT, LE, GT, GE, =, <>, <, <=, >, >=
- NOT
- AND
- OR, XOR

All operators on the same precedence level are evaluated from left to right in the expression.

Segment Typing in Expressions

Most expressions formed with assembly-time operators do not have a segment type, but some operations allow the expression to assume the segment type of a symbol used in the expression. The rules for expressions having a segment type are listed below.

1. The result of a unary operation (+, -, NOT, LOW, HIGH) will have the same segment type as that of its operand.
2. The result of all binary operations except plus (+) and minus (-) will have no segment type (i.e., NUMBER).
3. For a binary plus or minus operation, if only one of the operands has a segment type, then the result will have that segment type. If not, the result will have no segment type.

This means that only memory address plus or minus a number (or a number plus or minus a number) gives a memory address. All other combinations produce a typeless value. For example, code-address + (data_address_1 - data_address_2) produces a value which is a CODE address; (data_address_1 - data_address_2) has no segment type.

Relocatable Expression Evaluation

A relocatable expression is an expression that contains a relocatable or external reference, called the "relocatable symbol." Such an expression cannot be completely evaluated at assembly time. The Relocator and Linker program (RL51) finalizes such expressions using its additional knowledge; i.e., where the relocatable segments and the public symbols are located.

A relocatable expression may usually contain only one relocatable symbol. However, when subtracting (" - ") or comparing (" > ", EQ, etc.) relocatable symbols which refer to the same relocatable segment, the result is absolute quantity, and these symbols are not counted as relocatable.

The relocatable symbol may be modified by adding or subtracting an absolute quantity (called offset). Thus the following forms result in valid relocatable expressions:

```
relocatable_symbol + absolute_expression
relocatable_symbol - absolute_expression
absolute_expression + relocatable_symbol
```

There are two types of relocatable expressions: simple relocatable expressions which can be used for symbol definition and code generation; and general relocatable expressions which can be used only in code generation.

Simple Relocatable Expressions

In simple relocatable expressions the relocatable symbol can only represent an address in a relocatable segment. External and segment symbols are not allowed.

Simple relocatable expressions can be used in three contexts:

1. As an operand to the ORG statement.
2. As an operand to the following symbol definition directives: EQU, SET, CODE, XDATA, IDATA, BIT or the DATA directives.
3. As an operand to a machine instruction or a data initialization directive (DB or DW).

Examples:

VALID

```
REL1 + ABS1*10
REL2 - ABS1
REL1 + (REL2 - REL3) ... assuming REL2 and REL3 refer to the same segment
```

INVALID

```
(REL1 + ABS1)*10 ...relocatable quantity may not be multiplied
EXT1 - ABS1 ...this is a general relocatable expression
REL1 + REL2 - REL3 ...you cannot add relocatable symbols (REL1, REL2)
```

General Relocatable Expressions

General relocatable expressions can be used only in statements which generate code; i.e., as operands to machine instructions, or as items in a DB or DW directive.

In this case the relocatable symbol may be a simple relocatable symbol (representing an address in a relocatable segment), a segment symbol (representing the base address of a relocatable segment), or an external symbol.

In addition, the relocatable expression may be prefixed by the LOW or the HIGH operator.

Examples

VALID

REL1 + ABS1*10
EXT1 - ABS1
LOW (SEG1 + ABS1)

INVALID

(REL1 + ABS1)*10 ...relocatable quantity may not be multiplied
EXT1 - REL1 ...you can add/subtract only absolute quantities
LOW SEG1 + ABS1 ...LOW/HIGH may be applied only to the final relocatable expression
(or to an absolute expression); the expression here is equivalent to
(LOW SEG1) + ABS1

This chapter contains complete documentation for all of the 8051 instructions. The instructions are listed in alphabetical order by mnemonic and operands.

Introduction

This chapter is designed to be used as a reference. Each instruction is documented using the same basic format. The action performed by an instruction is defined in three ways. First, the operation is given in a short notation; the symbols used and their meanings are listed in the table below. The operation is then defined in a few sentences in the description section. Finally, an example is given showing all of the registers affected and their contents before and after the instruction.

NOTE

The only exception is that the program counter (PC) is not always shown. All instructions increment the PC by the number of bytes in the instruction. The "Example:" entry for most instructions do not show this increment by the PC. Only those instructions that directly affect the PC (e.g., JMP, ACALL, or RET) show the contents of the PC before and after execution.

The list of notes that appears at the bottom of some instructions refer to side-effects (flags set and cleared and limitations of operands). The numbers refer to the notes tabulated on page 3-143/3-144. You can unfold that page for easier reference while you are studying the instruction set.

The "Operands:" entry for each instruction briefly indicates the range of values and segment type permitted in each operand. For a complete description of the limits of any operand see Chapter 2. In general, the operand's name will identify what section to consult.

With one exception, the operands to 3 byte instructions are encoded in the same order as they appear in the source. Only the "Move Memory to Memory" instruction is encoded with the second operand preceding the first.

The illustration below (figure 3-1) describes the meaning of each section of the instruction documentation.

ADD

Add Immediate Data

Mnemonic: ADD

Operands: A Accumulator
data $-256 \leq data \leq +255$

Format: ADD A,#data

Bit Pattern:

00100100	Immediate Data	
7	0 7	0

Operation: $(A) \leftarrow (A) + data$

Bytes: 2

Cycles: 1

Flags: C AC FD RS1 RS0 OV P

●	●	●	●	●	●	●
---	---	---	---	---	---	---

PSW

Description: This instruction adds the 8-bit immediate data value to the contents of the accumulator. It places the result in the accumulator.

Example: ADD A,#32H ; Add 32H to accumulator

Encoded Instruction:

00100100	00110010	
7	0 7	0

Before After

Accumulator	Accumulator
00100110	01011000
7	0

Notes: 4, 5, 6, 7

Figure 3-1. Format For Instruction Definitions

Mnemonic: shows opcode mnemonic. It is shown in upper case, but upper or lower case characters are permitted.

Operands: indicates range and type of operands permitted.

Format: shows the format of the instruction, including the order of operands on the source line.

Bit Pattern: indicates bit pattern in opcode and position of operands when encoded. Letters in the opcode's bit pattern vary with operand specified.

Operation: symbolically defines the operation performed by the instruction. The symbols used in this entry are defined in table 3-1.

Bytes and Cycles: shows the number of bytes of code and the number of machine cycles used by the instruction.

Flags: indicates any status flag that may be changed during the execution of the instruction.

Description: is a brief prose description of the operation performed by the instruction.

Example: shows an example instruction as it would appear in the source. It also shows the bit pattern of the encoded instruction, and the contents of all registers affected by the instruction, immediately before and after the instruction is executed.

The PC is incremented by all instructions, but only instructions that affect the PC as part of their operation show its contents in the example.

Notes: indicates the notes on page 3-142 that pertain to the instruction.

Table 3-1. Abbreviations and Notations Used

A	Accumulator
AB	Register Pair
B	Multiplication Register
<i>bit address</i>	8051 bit address
<i>page address</i>	11-bit code address within 2K page
<i>relative offset</i>	8-bit 2's complement offset
C	Carry Flag
<i>code address</i>	Absolute code address
<i>data</i>	Immediate data
<i>data address</i>	On-chip 8-bit RAM address
DPTR	Data pointer
PC	Program Counter
R <i>r</i>	Register(<i>r</i> =0-7)
SP	Stack pointer
<i>high</i>	High order byte
<i>low</i>	Low order byte
<i>i-j</i>	Bits <i>i</i> through <i>j</i>
. <i>n</i>	Bit <i>n</i>
AND	Logical AND
NOT	Logical complement
OR	Logical OR
XOR	Logical exclusive OR
+	Plus
-	Minus
/	Divide
*	Multiply
(X)	The contents of X
(X))	The memory location addressed by (X) (The contents of X)
=	Is equal to
<>	Is not equal to
<	Is less than
>	Is greater than
←	Is replaced by

Absolute Call Within 2K Byte Page

Mnemonic: ACALL

Operands: code address

Format: ACALL code address

Bit Pattern:

aaa	10001	aaaaaaa
7	0	7

0

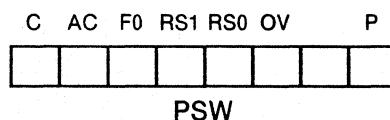
Operation:

- (PC) \leftarrow (PC) + 2
- (SP) \leftarrow (SP) + 1
- ((SP)) \leftarrow (PC *low*)
- (SP) \leftarrow (SP) + 1
- ((SP)) \leftarrow (PC *high*)
- (PC) 0-10 \leftarrow page address

Bytes: 2

Cycles: 2

Flags:



Description: This instruction stores the incremented contents of the program counter (the return address) on the stack. The low-order byte of the program counter (PC) is always placed on the stack first. It replaces the low-order 11 bits of the PC with the encoded 11-bit page address. The destination address specified in the source must be within the 2K byte page of the instruction following the ACALL.

The 3 high-order bits of the 11-bit page address form the 3 high-order bits of the opcode. The remaining 8 bits of the address form the second byte of the instruction.

ACALL**Example:**

ORG 35H
ACALL SORT ; Call SORT (evaluates to page
; address 233H)

ORG 233H
SORT: PUSH ACC ; Store Accumulator
.
RET ; Return from call

Encoded Instruction:

01010001	00110011
7	0

Before**After****Program Counter**

00000000	00110101
15	8

Program Counter

00000010	00110011
15	8

Stack Pointer

00100110
7

Stack Pointer

00101000
7

(27H)

00000000
7

(27H)

00110111
7

(28H)

00000000
7

(28H)

00000000
7

Notes: 2, 3

Add Immediate Data

Mnemonic: ADD

Operands: A Accumulator
data $-256 \leq data \leq +255$

Format: ADD A,*#data*

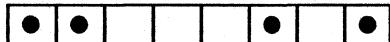
Bit Pattern:

0 0 1 0 0 1 0 0	Immediate Data
7 0 7 0	

Operation: $(A) \leftarrow (A) + data$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction adds the 8-bit immediate data value to the contents of the accumulator. It places the result in the accumulator.

Example: ADD A,#32H ; Add 32H to accumulator

Encoded Instruction:

0 0 1 0 0 1 0 0	0 0 1 1 0 0 1 0
7 0 7 0	

Before

Accumulator

0 0 1 0 0 1 1 0
7 0

After

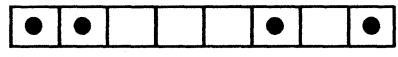
Accumulator

0 1 0 1 1 0 0 0
7 0

Notes: 4, 5, 6, 7

Add Indirect Address**Mnemonic:** ADD**Operands:** A Accumulator
R_r Register $0 \leq r \leq 1$ **Format:** ADD A,@R_r**Bit Pattern:**

0	0	1	0	0	1	1	r
7	0						

Operation: (A) \leftarrow (A) + ((R_r))**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

 PSW**Description:** This instruction adds the contents of the data memory location addressed by register r to the contents of the accumulator. It places the result in the accumulator.**Example:** ADD A,@R1 ; Add indirect address to accumulator**Encoded Instruction:**

0	0	1	0	0	1	1
7	0					

Before**After****Accumulator****Accumulator**

1	0	0	0	1	1	0
7	0					

1	1	1	0	1	0	0
7	0					

Register 1**Register 1**

0	0	0	1	1	1	0
7	0					

0	0	0	1	1	1	0
7	0					

(1CH)

(1CH)

0	1	1	0	0	0	1
7	0					

0	1	1	0	0	0	1
7	0					

Notes: 5, 6, 7, 15

ADD

Add Register

Mnemonic: ADD

Operands: A Accumulator
Rr Register $0 \leq r \leq 7$

Format: ADD A,Rr

Bit Pattern:

00101	rrr
7	0

Operation: $(A) \leftarrow (A) + (Rr)$

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●				●		●
PSW							

Description: This instruction adds the contents of register r to the contents of the accumulator. It places the result in the accumulator.

Example: ADD A,R6 ; Add R6 to accumulator

Encoded Instruction:

00101110	
7	0

Before

Accumulator

01110110	
7	0

After

Accumulator

11111011	
7	0

Register 6

10000101	
7	0

Register 6

10000101	
7	0

Notes: 5, 6, 7

Add Memory**Mnemonic:** ADD**Operands:** A Accumulator
data address $0 \leq \text{data address} \leq 255$ **Format:** ADD A,*data address***Bit Pattern:**

00100101	Data Address
7 0 7 0	

Operation: $(A) \leftarrow (A) + (\text{data address})$ **Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

●	●				●		●
PSW							

Description: This instruction adds the contents of the specified data address to the contents of the accumulator. It places the result in the accumulator.**Example:** ADD A,32H ; Add the contents of
; 32H to accumulator**Encoded Instruction:**

00100101	00110010
7 0 7 0	

Before

Accumulator

00100110
7 0

(32H)

01010011
7 0

After

Accumulator

01111001
7 0

(32H)

01010011
7 0

Notes: 5, 6, 7, 8

ADDC

Add Carry Plus Immediate Data to Accumulator

Mnemonic: ADDC

Operands: A Accumulator
data $-256 \leq data \leq +255$

Format: ADDC A,#*data*

Bit Pattern:

0 0 1 1 0 1 0 0	Immediate Data
7 0 7 0	

Operation: $(A) \leftarrow (A) + (C) + data$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●					●		●
PSW								

Description: This instruction adds the contents of the carry flag (0 or 1) to the contents of the accumulator. The 8-bit immediate data value is added to that intermediate result, and the carry flag is updated. The accumulator and carry flag reflect the sum of all three values.

Example: ADDC A,#0AFH ; Add Carry and 0AFH to accumulator

Encoded Instruction:

0 0 1 1 0 1 0 0	1 0 1 0 1 1 1 1
7 0 7 0	

Before

After

Accumulator

Accumulator

0 1 1 1 0 0 0 1
7 0

0 0 1 0 0 0 0 1
7 0

Carry

Carry

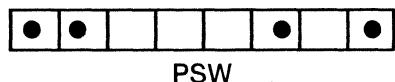
1

1

Notes: 4, 5, 6, 7

Add Carry Plus Indirect Address to Accumulator**Mnemonic:** ADDC**Operands:** A Accumulator
Register $0 \leq r \leq 1$ **Format:** ADDC A,@R r **Bit Pattern:**

0	0	1	1	0	1	1	r
7	0						

Operation: $(A) \leftarrow (A) + (C) + ((Rr))$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

 PSW**Description:** This instruction adds the contents of the carry flag (0 or 1) to the contents of the accumulator. The contents of data memory at the location addressed by register r is added to that intermediate result, and the carry flag is updated. The accumulator and carry flag reflect the sum of all three values.

ADDC

Example: **ADDC A,@R1** ; Add carry and indirect address to
 ; accumulator

Encoded Instruction:

00110111
7 0

Before

Accumulator

11101000
7 0

Register 1

01101001
7 0

(69H)

00011000
7 0

Carry

0

After

Accumulator

00000000
7 0

Register 1

01101001
7 0

(69H)

00011000
7 0

Carry

1

Notes: 5, 6, 7, 15

Add Carry Plus Register to Accumulator**Mnemonic:** ADDC**Operands:** A Accumulator
Register $0 \leq r \leq 7$ **Format:** ADDC A,Rr**Bit Pattern:**

0	0	1	1	1	r	r
7	0					

Operation: $(A) \leftarrow (A) + (C) + (R_r)$ **Bytes:** 1
Cycles: 1**Flags:** C AC F0 RS1 RS0 OV P

●	●				●		●
PSW							

Description: This instruction adds the contents of the carry flag (0 or 1) to the contents of the accumulator at bit 0. The contents of register r is added to that intermediate result, and the carry flag is updated. The accumulator and carry flag reflect the sum of all three values.**Example:** ADDC A,R7 ; Add carry and register 7
; to accumulator**Encoded Instruction:**

0	0	1	1	1	1	1
7	0					

Before**Accumulator**

0	0	1	1	0	0	0
7	0					

Register 7

0	0	0	0	1	0	1
7	0					

After**Accumulator**

0	0	1	1	1	0	1
7	0					

Register 7

0	0	0	0	1	0	1
7	0					

Carry

1

Carry

0

Notes: 5, 6, 7

ADDC

Add Carry Plus Memory to Accumulator

Mnemonic: ADDC

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

Format: ADDC A,*data address*

Bit Pattern:

00110101	Data Address
7 0 7 0	

Operation: $(A) \leftarrow (A) + (C) + (\text{data address})$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●				●		●
PSW							

Description: This instruction adds the contents of the carry flag (0 or 1) to the contents of the accumulator. The contents of the specified data address is added to that intermediate result, and the carry flag is updated. The accumulator and carry flag reflect the sum of all three values.

Example: ADDC A,25H ; Add carry and contents of 25H to ; accumulator

Encoded Instruction:

00110101	00100101
7 0 7 0	

Before

Accumulator

10101110
7 0

(25H)

00000111
7 0

After

Accumulator

10110101
7 0

(25H)

00000111
7 0

Carry

0

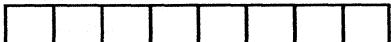
Carry

0

Notes: 5, 6, 7, 8

Absolute Jump within 2K Byte Page**Mnemonic:** AJMP**Operands:** *code address***Format:** AJMP *code address***Bit Pattern:**

a	a	a	0	0	0	1	a	a	a	a	a	a	a
7	0	7				0							

Operation: (PC) \leftarrow (PC) + 2
(PC) 0-10 \leftarrow *page address***Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction replaces the low-order 11 bits of the program counter with the encoded 11-bit address. The destination address specified in the source must be within the 2K byte page of the instruction following the AJMP.

The 3 high-order bits of the 11-bit page address form the 3 high-order bits of the opcode. The remaining 8 bits of the address form the second byte of the instruction.

Example: ORG 0E80FH
TOPP: MOV A,R1ORG 0EADCH
AJMP TOPP ; Jump backwards to TOPP
; at location 0E80FH**Encoded Instruction:**

0	0	0	0	0	0	0	1	0	0	0	1	1	1	
7	0	7					0							

Before**After****Program Counter****Program Counter**

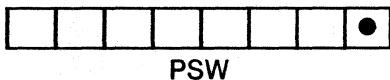
1	1	1	0	1	0	10	1	1	0	1	1	0	0
15	8	7		0			15	8	7		0		

1	1	1	0	1	0	0	0	0	0	1	1	1	1
15	8	7		0			15	8	7		0		

Notes: None

Logical AND Immediate Data to Accumulator**Mnemonic:** ANL**Operands:** A Accumulator
 data $-256 \leq data \leq +255$ **Format:** ANL A,#data**Bit Pattern:**

0	1	0	1	0	0		Immediate Data
7	0	7			0		

Operation: (A) \leftarrow (A) AND data**Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction ANDs the 8-bit immediate data value to the contents of the accumulator. Bit n of the result is 1 if bit n of each operand is 1; otherwise bit n is 0. It places the result in the accumulator.**Example:** ANL A,#00001000B ; Mask out all but bit 3**Encoded Instruction:**

0	1	0	1	0	0	0	0	0
7	0	7			0			

Before**After****Accumulator**

0	1	1	1	0	1	1
7	0					

Accumulator

0	0	0	0	0	0	0
7	0					

Notes: 4, 5

Logical AND Indirect Address to Accumulator

Mnemonic: ANL

Operands: A Accumulator
R_r Register 0 <= r <= 1

Format: ANL A,@R_r

Bit Pattern:

0	1	0	1	1	<i>r</i>
7	0				

Operation: (A) ← (A) AND ((R_r))

Bytes: 1

Cycles: 1

Flags:

C	AC	F0	RS1	RS0	OV	P
						●
PSW						

Description: This instruction ANDs the contents of the memory location addressed by the contents of register *r* to the contents of the accumulator. Bit *n* of the result is 1 if bit *n* of each operand is 1; otherwise bit *n* is 0. It places the result in the accumulator.

Example: ANL A,@R0 ; AND indirect address with ; accumulator

Encoded Instruction:

0	1	0	1	1	0
7	0				

Before

Accumulator

0	0	1	1	1	1	1
7	0					

After

Accumulator

0	0	0	0	1	1	1
7	0					

Register 0

0	1	0	1	0	1	0
7	0					

(52H)

Register 0

0	1	0	1	0	1	0
7	0					

(52H)

Notes: 5, 15

Logical AND Register to Accumulator**Mnemonic:** ANL**Operands:** A Accumulator
 Rr $0 \leq Rr \leq 7$ **Format:** ANL A,Rr**Bit Pattern:**

0	1	0	1	1	r	r
7					0	

Operation: $(A) \leftarrow (A) \text{ AND } (Rr)$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

							●
PSW							

Description: This instruction ANDs the contents of register r to the contents of the accumulator. Bit n of the result is 1 if bit n of each operand is 1; otherwise bit n is 0. It places the result in the accumulator.**Example:** MOV R4,#10000000B ; Move mask to R4
 ANL A,R4 ; AND register 4 with accumulator**Encoded Instruction:**

0	1	0	1	1	1	0
7					0	

Before

Accumulator

1	0	0	1	1	0	1
7					0	

After

Accumulator

1	0	0	0	0	0	0
7					0	

Register 4

1	0	0	0	0	0	0
7					0	

Register 4

1	0	0	0	0	0	0
7					0	

Note: 5

Logical AND Memory to Accumulator

Mnemonic: ANL

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

Format: ANL A,*data address*

Bit Pattern:

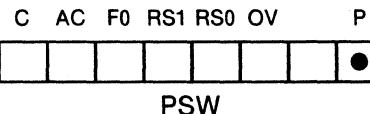
01010101	Data Address
7 0 7 0	

Operation: $(A) \leftarrow (A) \text{ AND } (\text{data address})$

Bytes: 2

Cycles: 1

Flags:



Description: This instruction ANDs the contents of the specified data address to the contents of the accumulator. Bit n of the result is 1 if bit n of each operand is also 1; otherwise bit n is 0. It places the result in the accumulator.

Example: ANL A,37H ; AND contents of 37H with ; accumulator

Encoded Instruction:

01010101	00110111
7 0 7 0	

Before

Accumulator

01110111
7 0

(37H)

11110000
7 0

After

Accumulator

01110000
7 0

(37H)

11110000
7 0

Notes: 5, 8

Logical AND Bit to Carry Flag**Mnemonic:** ANL**Operands:** C Carry Flag
bit address $0 \leq \text{bit address} \leq 255$ **Format:** ANL C,bit address**Bit Pattern:**

10000010	Bit Address
7	0 7 0

Operation: $(C) \leftarrow (C) \text{ AND } (\text{bit address})$ **Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

●						
PSW						

Description: This instruction ANDs the contents of the specified bit address to the contents of the carry flag. If both bits are 1, then the result is 1; otherwise, the result is 0. It places the result in the carry flag.**Example:** ANL C,37.3 ; AND bit 3 of byte 37 with Carry**Encoded Instruction:**

10000010	00101011
7	0 7 0

Before

Carry Flag

1

(37)

00101110
7 3 0

After

Carry Flag

1

(37)

00101110
7 3 0

Notes: None

Logical AND Complement of Bit to Carry Flag

Mnemonic: ANL

Operands: C Carry Flag
bit address $0 \leq \text{bit address} \leq 255$

Format: ANL C,*/bit address*

Bit Pattern:

1	0	1	1	0	0	0	0	Bit Address
7	0	7	0					

Operation: $(C) \leftarrow (C) \text{ AND NOT } (\text{bit address})$

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

●							
---	--	--	--	--	--	--	--

PSW

Description: This instruction ANDs the complemented contents of the specified bit address to the contents of the carry flag. The result is 1 when the carry flag is 1 and the contents of the specified bit address is 0. It places the result in the carry flag. The contents of the specified bit address does not change.

Example: ANL C,*/40.5* ; Complement contents of 40.5
; then AND with Carry

Encoded Instruction:

1	0	1	0	0	0	1
7	0	7	0			

Before

Carry Flag

1

(40)

0	1	0	1	1	0	0
7	5	0				

After

Carry Flag

1

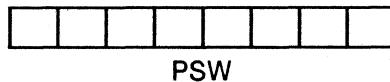
(40)

0	1	0	1	1	0	0
7	5	0				

Notes: None

ANL**Logical AND Immediate Data to Memory****Mnemonic:** ANL**Operands:** *data address* $0 \leq \text{data address} \leq 255$
data $-256 \leq \text{data} \leq +255$ **Format:** ANL *data address*,#*data***Bit Pattern:**

0 1 0 1 0 0 1 1	Data Address	Immediate Data
7 0 7 0 7 0 0		

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ AND } \text{data}$ **Bytes:** 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P**Description:** This instruction ANDs the 8-bit immediate data value to the contents of the specified data address. Bit *n* of the result is 1 if bit *n* of each operand is also 1; otherwise, bit *n* is 0. It places the result in data memory at the specified address.**Example:** MOV 57H,PSW ; Move PSW to 57H
ANL 57H,#01H ; Mask out all but parity bit
; to check accumulator parity**Encoded Instruction:**

0 1 0 1 0 0 1 1	0 1 0 1 0 1 1 1	0 0 0 0 0 0 0 1
7 0 7 0 7 0 0		

Before

(57H)

0 1 1 1 0 1 1 1
7 0

After

(57H)

0 0 0 0 0 0 0 1
7 0

Notes: 4, 9

Logical AND Accumulator to Memory

Mnemonic: ANL

Operands: *data address* $0 \leq \text{data address} \leq 255$
A Accumulator

Format: ANL *data address,A*

Bit Pattern:

0	1	0	1	0	1	0	Data Address
7	0	7	0				

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ AND } A$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction ANDs the contents of the accumulator to the contents of the specified data address. Bit *n* of the result is 1 if bit *n* of each operand is also 1; otherwise, bit *n* is 0. It places the result in data memory at the specified address.

Example: MOV A,#10000001B ; Load mask into accumulator
ANL 10H,A ; Mask out all but bits 0 and 7

Encoded Instruction:

0	1	0	1	0	0	0	0
7	0	7	0				

Before

Accumulator

1	0	0	0	0	0	1
7	0					

(10H)

0	0	1	1	0	0	1
7	0					

After

Accumulator

1	0	0	0	0	0	1
7	0					

(10H)

0	0	0	0	0	0	1
7	0					

Note: 9

CALL

Generic Call

Mnemonic: CALL

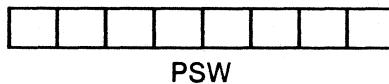
Operands: code address

Format: CALL code address

Bit Pattern: Translated to ACALL or LCALL as needed

Operation: Either ACALL or LCALL

Flags: C AC F0 RS1 RS0 OV P



PSW

Description: This instruction is translated to ACALL when the specified code address contains no forward references and that address falls within the current 2K byte page; otherwise; it is translated to LCALL. This will not necessarily be the most efficient representation when a forward reference is used. See the description for ACALL and LCALL for more detail.

Example:

```
ORG 80DCH
CALL SUB3 ; Call SUB3 (SUB3 is a forward
           ; reference so LCALL is encoded
           ; even though ACALL would work in
           ; this case.)
           ; Address 8233H
```

Encoded Instruction:

00010010	10000010	00110011
7	0	7

Before

After

Program Counter

10000000	11011100	10000010	00110011
7	0	7	0

Program Counter

Stack Pointer

01100100	01100110
7	0

Stack Pointer

(65H)

00000000
7

(65H)

11011111
7

(66H)

00000000
7

(66H)

10000000
7

Notes: 1, 2, 3

**Compare Indirect Address to Immediate Data,
Jump if Not Equal**

Mnemonic: CJNE

Operands: R_r Register 0 <= r <= 1
 data -256 <= data <= +255
 code address

Format: CJNE @R_r,#data,code address

Bit Pattern:

1 0 1 1 0 1 1	r	Immediate Data	Rel. Offset
7	0	7	0

Operation: (PC) ← (PC) + 3
 IF ((R_r) < > data
 THEN
 (PC) ← (PC) + relative offset
 IF ((R_r) < data
 THEN
 (C) ← 1
 ELSE
 (C) ← 0

Bytes: 3

Cycles: 2

Flags:

C	AC	F0	RS1	RS0	OV	P
●						

PSW

Description: This instruction compares the immediate data value with the memory location addressed by register r. If they are not equal, control passes to the specified code address. If they are equal, then control passes to the next sequential instruction.

If the immediate data value is greater than the contents of the specified data address, then the carry flag is set to 1; otherwise, it is reset to 0.

The Program Counter is incremented to the next instruction. If the operands are not equal, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: *CJNE @R1,#01,SCAB; Jump if contents of
 ; indirect address do
 ; not equal 1*

SCAB: MOV C,F0 ; 5AH bytes from the
 ; beginning of CJNE

Encoded Instruction:

10110111	00000001	01010111
7 0 7	0 7 0	

Before

After

Register 1

01010011
7 0

Register 1

01010011
7 0

(53H)

11100001
7 0

(53H)

11100001
7 0

Carry Flag

1

Carry Flag

0

Program Counter

00000000	11011100
15 8 7 0	

Program Counter

00000001	00110110
15 8 7 0	

Notes: 4, 10, 11, 12, 15

**Compare Immediate Data to Accumulator,
Jump if Not Equal**

Mnemonic: CJNE

Operands: A Accumulator
data $-256 \leq data \leq +255$
code address

Format: CJNE A,#*data*,*code address*

Bit Pattern:

1 0 1 1 0 1 0 0	Immediate Data	Rel. Offset
7 0 7	0 7	0

Operation: $(PC) \leftarrow (PC) + 3$
IF (A) $< >$ *data*
THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$
IF (A) $< data$
THEN
 $(C) \leftarrow 1$
ELSE
 $(C) \leftarrow 0$

Bytes: 3

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

●							
---	--	--	--	--	--	--	--

PSW

Description: This instruction compares the immediate data value with the contents of the accumulator. If they are not equal, control passes to the specified code address. If they are equal, then control passes to the next sequential instruction.

If the immediate data value is greater than the contents of the accumulator, then the carry flag is set to 1; otherwise, it is reset to 0.

The Program Counter is incremented to the next instruction. If the operands are not equal, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: ORG 10DCH
 CJNE A,#10H,NEXT ; Jump if accumulator does not equal
 ; 10H

NEXT: INC A ; Location 1136H

Encoded Instruction:

10110100	00010000	01010111
7	0	7

Before

Accumulator

01010000
7

After

Accumulator

01010000
7

Carry Flag

1

Carry Flag

0

Program Counter

00010000	11011100
15	8

Program Counter

00010001	00110110
15	8

7 0

Notes: 4, 10, 11, 12

**Compare Memory to Accumulator,
Jump if Not Equal**

Mnemonic: CJNE

Operands: A Accumulator
 data address $0 \leq \text{data address} \leq 255$
 code address

Format: CJNE A,data address,code address

Bit Pattern:

1	0	1	1	0	1	Data Address	Rel. Offset
7	0	7		0	7		0

Operation: $(PC) \leftarrow (PC) + 3$
 IF $(A) \neq (\text{data address})$
 THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$
 IF $(A) < (\text{data address})$
 THEN
 $(C) \leftarrow 1$
 ELSE
 $(C) \leftarrow 0$

Bytes: 3

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

●						
---	--	--	--	--	--	--

PSW

Description: This instruction compares the contents of the specified memory location to the contents of the accumulator. If they are not equal, control passes to the specified code address. If they are equal, then control passes to the next sequential instruction.

If the contents of the specified memory location is greater than the contents of the accumulator, then the carry flag is set to 1; otherwise, it is reset to 0.

The Program Counter is incremented to the next instruction. If the operands are not equal, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: *CJNE A,37H,TEST; Jump if 37H and accumulator ; are not equal*

TEST: INC A ; 4FH bytes from CJNE

Encoded Instruction:

10110101	00110111	01001100
7	0	7

Before

(37H)

01111110	
7	0

After

(37H)

01111110	
7	0

Accumulator

00100110	
7	0

Accumulator

00100110	
7	0

Carry Flag

0

Carry Flag

1

Program Counter

00000000	110111100		
15	8	7	0

Program Counter

00000001	00110110		
15	8	7	0

Notes: 8, 10, 11, 12

**Compare Immediate Data to Register,
Jump if Not Equal**

Mnemonic: CJNE

Operands: R_r Register $0 \leq r \leq 7$
 data $-256 \leq data \leq +255$
 code address

Format: CJNE R_r,#data,code address

Bit Pattern:

1	0	1	1	r	r	r	Immediate Data	Rel. Offset
7	0	7			0	7		0

Operation: (PC) \leftarrow (PC) + 3
 IF (R_r) \neq data
 THEN
 (PC) \leftarrow (PC) + relative offset
 IF (R_r) $<$ data
 THEN
 (C) \leftarrow 1
ELSE
 (C) \leftarrow 0

Bytes: 3

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

●						
---	--	--	--	--	--	--

PSW

Description: This instruction compares the immediate data value with the contents of register *r*. If they are not equal, control passes to the specified code address. If they are equal, then control passes to the next sequential instruction.

If the immediate data value is greater than the contents of the specified register, then the carry flag is set to 1; otherwise, it is reset to 0.

The Program Counter is incremented to the next instruction. If the operands are not equal, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

CJNE

MCS-51

Example: CJNE R5,#32H,SKIP10 ; Jump if register 5 does not
; equal 32H

SKIP10: MOV R5,P0 ;13 bytes from CJNE

Encoded Instruction:

10111101	10000000	00001010
7	0	7

Before

After

Register 5

Register 5

00000001
7

00000001
7

Carry Flag

Carry Flag

1

1

Program Counter

Program Counter

00000000	11011100
15	8

00000000	11101001
15	8

Notes: 4, 10, 11, 12

Clear Accumulator**Mnemonic:** CLR**Operands:** A Accumulator**Format:** CLR A**Bit Pattern:**

1	1	1	0	0	1	0
7		0				

Operation: (A) $\leftarrow 0$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

						●
						PSW

Description: This instruction resets the accumulator to 0.**Example:** CLR A ; Set accumulator to 0**Encoded Instruction:**

1	1	1	0	0	1	0
7		0				

Before

Accumulator

0	0	1	1	1	1	1
7		0				

After

Accumulator

0	0	0	0	0	0	0
7		0				

Note: 5

Clear Carry Flag

Mnemonic: CLR

Operands: C Carry Flag

Format: CLR C

Bit Pattern:

1	1	0	0	0	0	1
7	0					

Operation: (C) \leftarrow 0

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●							
PSW							

Description: This instruction resets the carry flag to 0.

Example: CLR C ; Set carry flag to 0

Encoded Instruction:

1	1	0	0	0	0	1
7	0					

Before

After

Carry Flag

Carry Flag

1

0

Notes: None

Clear Bit**Mnemonic:** CLR**Operands:** *bit address* $0 \leq \text{bit address} \leq 255$ **Format:** CLR *bit address***Bit Pattern:**

11000010	Bit Address
7	0 7 0

Operation: $(\text{bit address}) \leftarrow 0$ **Bytes:** 2**Cycles:** 1**Flags:**

C	AC	F0	RS1	RS0	OV	P

PSW

Description: This instruction resets the specified bit address to 0.**Example:** CLR 40.5 ; Set bit 5 of byte 40 to 0**Encoded Instruction:**

11000010	01000101
7	0 7 0

Before

(40)

00100110
7 5 0

After

(40)

00000110
7 5 0

Notes: None

Complement Accumulator**Mnemonic:** CPL**Operands:** A Accumulator**Format:** CPL A**Bit Pattern:**

1	1	1	1	0	1	0
7	0					

Operation: (A) \leftarrow NOT (A)**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction resets each 1 in the accumulator to 0, and sets each 0 in the accumulator to 1.**Example:** CPL A ; Complement accumulator**Encoded Instruction:**

1	1	1	1	0	1	1
7	0					

Before

Accumulator

0	0	1	1	0	1	0
7	0					

After

Accumulator

1	1	0	0	1	0	1
7	0					

Notes: None

Complement Carry Flag**Mnemonic:** CPL**Operands:** C Carry flag**Format:** CPL C**Bit Pattern:**

1	0	1	1	0	0	1
7	0					

Operation: $(C) \leftarrow \text{NOT } (C)$ **Bytes:** 1**Cycles:** 1
Flags: C AC F0 RS1 RS0 OV P

●							
PSW							

Description: This instruction sets the carry flag to 1 if it was 0, and resets the carry flag to 0 if it was 1.**Example:** CPL C ; Complement Carry flag**Encoded Instruction:**

1	0	1	1	0	0	1
7	0					

Before**After****Carry Flag****Carry Flag**

1

0

Notes: None

Complement Bit

Mnemonic: CPL

Operands: bit address $0 \leq \text{bit address} \leq 255$

Format: CPL bit address

Bit Pattern:

1	0	1	1	0	0	1	0	Bit Address
7	0	7	0					

Operation: $(\text{bit address}) \leftarrow \text{NOT } (\text{bit address})$

Bytes: 2

Cycles: 1

Flags:

C	AC	F0	RS1	RS0	OV	P

PSW

Description: This instruction sets the contents of the specified bit address to 1 if it was 0, and resets the contents of the bit address to 0 if it was 1.

Example: CPL 33.7 ; Set bit 7 of byte 33 to 0

Encoded Instruction:

1	0	1	1	0	0	0	0	1	1	1	1
7	0	7	0								

Before

(33)

1	0	1	0	0	1	1	0
7	0						

After

(33)

0	0	1	0	0	1	1	0
7	0						

Notes: None

Decimal Adjust Accumulator

Mnemonic: DA

Operands: A Accumulator

Format: DA A

Bit Pattern:

1	1	0	1	0	1	0
7	0					

Operation: (See description below.)

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●						●
						PSW

Description: This instruction adjusts the contents of the accumulator to correspond to packed binary coded decimal (BCD) representation, after an add of two BCD numbers. If the auxiliary carry flag is 1, or the contents of the low order nibble (bits 0—3) of the accumulator is greater than 9, then 6 is added to the accumulator. If the carry flag is set before or after the add or the contents of the high order nibble (bits 4—7) is greater than 9, then 60H is added to the accumulator. The accumulator and the carry flag contain the final adjusted value.

Example: ADD A,R1
DA A ; Adjust the Accumulator after add

Encoded Instruction:

1	1	0	1	0	0
7	0				

Before

Accumulator

1	0	0	1	1	0	1
7	0					

After

Accumulator

0	0	0	0	0	0	1
7	0					

Carry Flag

0

Carry Flag

1

Auxiliary Carry Flag

0

Auxiliary Carry Flag

0

Notes: 5, 6

Decrement Indirect Address

Mnemonic: DEC**Operands:** Rr Register $0 \leq r \leq 1$ **Format:** DEC @Rr**Bit Pattern:**

0	0	0	1	0	1	1
						r

7 0

Operation: $((Rr)) \leftarrow ((Rr)) - 1$ **Bytes:** 1**Cycles:** 1
Flags: C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--	--

PSW

Description: This instruction decrements the contents of the memory location addressed by register r by 1. It places the result in the addressed location.**Example:** DEC @R0 ; Decrement counter**Encoded Instruction:**

0	0	0	1	0	1	0

7 0

Before**After****Register 0****Register 0**

0	0	1	1	0	1	1

7 0

(37H)

(37H)

1	1	0	1	1	1	0

7 0

1	1	0	1	1	1	0

7 0

Note: 15

Decrement Accumulator**Mnemonic:** DEC**Operands:** A Accumulator**Format:** DEC A**Bit Pattern:**

0	0	0	1	0	1	0
7	0					

Operation: $(A) \leftarrow (A) - 1$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

							●
PSW							

Description: This instruction decrements the contents of the accumulator by 1. It places the result in the accumulator.**Example:** DEC A ; Decrement accumulator**Encoded Instruction:**

0	0	0	1	0	1	0
7	0					

Before**After****Accumulator****Accumulator**

1	1	0	1	0	0	0
7	0					

1	1	0	0	1	1	1
7	0					

Note: 5

Decrement Register**Mnemonic:** DEC**Operands:** R_r Register 0 <= r <= 7**Format:** DEC R_r**Bit Pattern:**

0	0	0	1	1	r	r
7	0					

Operation: (R_r) \leftarrow (R_r) - 1**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction decrements the contents of register *r* by 1. It places the result in the specified register.**Example:** DEC R7 ; Decrement register 7**Encoded Instruction:**

0	0	0	1	1	1	1
7	0					

Before

Register 7

1	0	1	0	1	1
7	0				

After

Register 7

1	0	1	0	1	0
7	0				

Notes: None

Decrement Memory**Mnemonic:** DEC**Operands:** data address $0 \leq \text{data address} \leq 255$ **Format:** DEC data address**Bit Pattern:**

0 0 0 1 0 1 0 1	Data Address
7 0 7 0	

Operation: $(\text{data address}) \leftarrow (\text{data address}) - 1$ **Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 ... OV P

[]	[]	[]	[]	[]	[]	[]
PSW						

Description: This instruction decrements the contents of the specified data address by 1. It places the result in the addressed location.**Example:** DEC 37H ; Decrement counter**Encoded Instruction:**

0 0 0 1 0 1 0 1	0 0 1 1 0 1 1 1
7 0 7 0	

Before

(37H)

1 1 0 1 1 1 1 0
7 0

After

(37H)

1 1 0 1 1 1 0 1
7 0

Note: 9

Divide Accumulator by B**Mnemonic:** DIV**Operands:** AB Register Pair**Format:** DIV AB**Bit Pattern:**

1	0	0	0	1	0
7	0				

Operation: $(AB) \leftarrow (A) / (B)$ **Bytes:** 1**Cycles:** 4
Flags: C AC F0 RS1 RS0 OV P

●					●	●
PSW						

Description: This instruction divides the contents of the accumulator by the contents of the multiplication register (B). Both operands are treated as unsigned integers. The accumulator contains the quotient; the multiplication register contains the remainder.

The carry flag is always cleared. Division by 0 sets the overflow flag; otherwise, it is cleared.

Example: MOV B,#5
DIV AB ; Divide accumulator by 5
Encoded Instruction:

1	0	0	0	1	0
7	0				

Before**After****Accumulator****Accumulator**

0	1	1	0	1	1
7	0				

0	0	0	1	0	1	1
7	0					

Multiplication Register (B)**Multiplication Register (B)**

0	0	0	0	1	0	1
7	0					

0	0	0	0	0	1	1
7	0					

Note: 5

Decrement Register and Jump if Not Zero**Mnemonic:** DJNZ**Operands:** Rr Register $0 \leq r \leq 7$
*code address***Format:** DJNZ Rr,*code address***Bit Pattern:**

11011	r r r	Rel. Offset
7	0	7

0

Operation: $(PC) \leftarrow (PC) + 2$
 $(Rr) \leftarrow (Rr) - 1$
IF $(Rr) < 0$
THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$ **Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction decrements the contents of register *r* by 1, and places the result in the specified register. If the result of the decrement is 0, then control passes to the next sequential instruction; otherwise, control passes to the specified code address.

The Program Counter is incremented to the next instruction. If the decrement does not result in 0, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: LOOP1: ADD A,R7 ; ADD index to accumulator

```
DJNZ R7,LOOP1 ; Decrement register 7 and
INC A          ; jump to LOOP1 (15 bytes
                ; backward from INC
                ; instruction)
```

Encoded Instruction:

11011111	11110001
7	0

Before

Register 7

00000010
7

After

Register 7

00000001
7

Program Counter

00000100	11011100
15	8

Program Counter

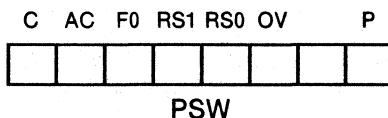
00000100	11001111
15	8

Notes: 10, 11, 12

Decrement Memory and Jump if Not Zero**Mnemonic:** DJNZ**Operands:** *data address* $0 \leq \text{data address} \leq 255$
*code address***Format:** DJNZ *data address, code address***Bit Pattern:**

1	1	0	1	0	1		Data Address	Rel. Offset
7		0	7		0	7		0

(PC) \leftarrow (PC) + 3
(*data address*) \leftarrow (*data address*) - 1
IF (*data address*) $\neq 0$
THEN
 (PC) \leftarrow (PC) + *relative offset*

Bytes: 3**Cycles:** 2**Flags:****Description:** This instruction decrements the contents of the specified data address by 1, and places the result in the addressed location. If the result of the decrement is 0, then control passes to the next sequential instruction; otherwise, control passes to the specified code address.

The Program Counter is incremented to the next instruction. If the decrement does not result in 0, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: LOOP 3: MOV R7,57H ; Store loop index in register 7

DJNZ 57H,LOOP3 ; Decrement 57H and jump
 INC A ; backward to LOOP3 (51 bytes
 ; backwards from the INC A
 ; instruction)

Encoded Instruction:

11010101	01010111	11001010
7	0	7

Before

(57H)

01110111
7

After

(57H)

01110110
7

Program Counter

00000000	11011100
15	8

Program Counter

00000000	10101001
15	8

7 0

15 8 7 0

Notes: 9, 10, 11, 12

Increment Indirect Address**Mnemonic:** INC**Operands:** Rr Register $0 \leq r \leq 1$ **Format:** INC @Rr**Bit Pattern:**

0	0	0	0	0	1	1	r
7							0

Operation: $((Rr)) \leftarrow ((Rr)) + 1$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction increments the contents of the memory location addressed by register r by 1. It places the result in the addressed location.**Example:** INC @R0 ; Increment counter**Encoded Instruction:**

0	0	0	0	1	0
7					0

Before**Register 0**

0	0	1	1	0	0	1	0
7							0

(32H)

1	1	0	1	1	1	0
7						0

After**Register 0**

0	0	1	1	0	0	1	0
7							0

(32H)

1	1	0	1	1	1	1	0
7							0

Note: 15

Increment Accumulator**Mnemonic:** INC**Operands:** A Accumulator**Format:** INC A**Bit Pattern:**

0	0	0	0	0	1	0
7	0					

Operation: $(A) \leftarrow (A) + 1$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

							●

PSW

Description: This instruction increments the contents of the accumulator by 1. It places the result in the accumulator.**Example:** INC A ; Increment accumulator**Encoded Instruction:**

0	0	0	0	1	0
7	0				

Before

Accumulator

1	1	0	1	0	0	0
7	0					

After

Accumulator

1	1	0	1	0	0	1
7	0					

Note: 5

Increment Data Pointer**Mnemonic:** INC**Operands:** DPTR Data Pointer**Format:** INC DPTR**Bit Pattern:**

1	0	1	0	0	0	1
7		0				

Operation: (DPTR) \leftarrow (DPTR) + 1**Bytes:** 1**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction increments the 16-bit contents of the data pointer by 1. It places the result in the data pointer.**Example:** INC DPTR ; Increment data pointer**Encoded Instruction:**

1	0	1	0	0	0	1
7		0				

Before**After**

Data Pointer

Data Pointer

0	0	0	0	1	0	0	1	1	1	1	1	1	1	1	1
15	8	7	0	15	8	7	0								

Notes: None

Increment Register

Mnemonic: INC

Operands: R_r Register 0 <= r <= 7

Format: INC R_r

Bit Pattern:

0	0	0	0	1	r	r	r
7	0						

Operation: (R_r) ← (R_r) + 1

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction increments the contents of register r by 1. It places the result in the specified register.

Example: INC R7 ; Increment register 7

Encoded Instruction:

0	0	0	0	1	1	1	1
7	0						

Before

Register 7

1	0	1	0	1	1	1	1
7	0						

After

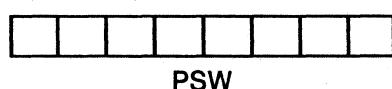
Register 7

1	0	1	0	1	1	0	0
7	0						

Notes: None

Increment Memory**Mnemonic:** INC**Operands:** data address $0 \leq \text{data address} \leq 255$ **Format:** INC data address**Bit Pattern:**

0 0 0 0 0 1 0 1	Data Address
7 0 7 0	

Operation: $(\text{data address}) \leftarrow (\text{data address}) + 1$ **Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P**Description:** This instruction increments the contents of the specified data address by 1. It places the result in the addressed location.**Example:** INC 37H ; Increment 37H**Encoded Instruction:**

0 0 0 0 0 1 0 1	0 0 1 1 0 1 1 1
7 0 7 0	

Before

(37H)

1 1 0 1 1 1 1 0
7 0

After

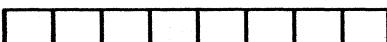
(37H)

1 1 0 1 1 1 1 1
7 0

Note: 9

Jump if Bit Is Set**Mnemonic:** JB**Operands:** *bit address* $0 \leq \text{bit address} \leq 255$
*code address***Format:** JB *bit address, code address***Bit Pattern:**

00100000	Bit Address	Rel. Offset
7 0 7 0 7 0		

Operation: $(PC) \leftarrow (PC) + 3$
IF (*bit address*) = 1
THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$ **Bytes:** 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction tests the specified bit address. If it is 1, control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the test was successful, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: *JB 39.6, EXIT* ; Jump if bit 6 of byte 39 is 1

SJMP TOP
EXIT: MOV A,39 ; Move 39 to accumulator (EXIT label
; is 5 bytes from jump statement)

Encoded Instruction:

00100000	00111110	00000010
7	0	7

Before

(39)

01110111
76

After

(39)

01110111
76

Program Counter

00000000	11011100
15	8

Program Counter

00000000	11100001
15	8

7 0

7 0

Notes: 10, 11, 12

Jump and Clear if Bit Is Set**Mnemonic:** JBC**Operands:** *bit address* $0 \leq \text{bit address} \leq 255$
*code address***Format:** JBC *bit address, code address***Bit Pattern:**

0 0 0 1 0 0 0 0	Bit Address	Rel. Offset
7 0 7 0 7 0		

Operation: $(PC) \leftarrow (PC) + 3$
IF (*bit address*) = 1
THEN
 $(\text{bit address}) \leftarrow 0$
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 3**Cycles:** 2**Flags:**

C	AC	F0	RS1	RS0	OV	P
[]	[]	[]	[]	[]	[]	[]

PSW

Description: This instruction tests the specified bit address. If it is 1, the bit is cleared, and control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the test was successful, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

JBC

ORG136H

Encoded Instruction:

00010000	01110001	01010111			
7	0	7	0	7	0

Before

After

(46)	01110111	(46)	01110101
7	10	7	10

Program Counter

Program Counter

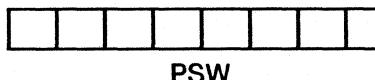
00000000	11011100	00000001	00110110
15	8	7	0

Notes: 10, 11, 12

Jump if Carry Is Set**Mnemonic:** JC**Operands:** *code address***Format:** JC *code address***Bit Pattern:**

01000000	Rel. Offset
7	0 7 0

Operation: $(PC) \leftarrow (PC) + 2$
 IF (C) = 1
 THEN
 $(PC) \leftarrow (PC) + \text{relative code}$

Bytes: 2**Cycles:** 2
Flags: C AC F0 RS1 RS0 OV P


Description: This instruction tests the contents of the carry flag. If it is 1, then control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the test was successful, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: FIXUP: CLR C ; Clear carry

JCFIXUP ; If carry is 1 go to FIXUP
; 49 bytes backwards from the JC
; instruction

Encoded Instruction:

01000000	11001101
7	0 7 0

Before

Carry Flag

1

After

Carry Flag

1

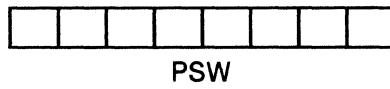
Program Counter

00000101	11011100
15	8 7 0

Program Counter

00000101	10101011
15	8 7 0

Notes: 10, 11, 12

Generic Jump**Mnemonic:** JMP**Operands:** code address $0 \leq \text{code address} \leq 65,535$ **Format:** JMP code address**Bit Pattern:** Translated to AJMP, LJMP, or SJMP, as needed**Operation:** Either AJMP, SJMP or LJMP**Bytes:****Cycles:****Flags:** C AC F0 RS1 RS0 OV P

Description: This instruction will be translated to SJMP if the specified code address contains no forward references and that address falls within -128 and +127 of the address of the next instruction. It will be translated to AJMP if the code address contains no forward references and the specified code address falls within the current 2K byte page. Otherwise, the JMP instruction is translated to LJMP. If forward references are used to specify the jump destination, then it will not necessarily be the most efficient representation. See the descriptions for SJMP, AJMP, and LJMP for more detail.

Example: **JMP SKIP** ; Jump to SKIP
FF: INC A ; Increment A
SKIP: INC R5 ; Increment register 5

Encoded Instruction:

00000010	00000100	10101011
7	0	7

Before**After****Program Counter****Program Counter**

00000100	10100111	00000100	10101011
15	8	7	0

Notes: None

Jump to Sum of Accumulator and Data Pointer

Mnemonic: JMP

Operands: A Accumulator
 DPTR Data Pointer

Format: JMP @A + DPTR

Bit Pattern:

0	1	1	1	0	0	1
7	0					

Operation: (PC) \leftarrow (A) + (DPTR)

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction adds the contents of the accumulator with the contents of the data pointer. It transfers control to the code address formed by that sum.

Example: JMP @A + DPTR ; Jump relative to the accumulator

Encoded Instruction:

0	1	1	1	0	0	1
7	0					

Before

Accumulator

0	1	1	1	0	1	1	0
7	0						

After

Accumulator

0	1	1	1	0	1	1	0
7	0						

Data Pointer

0	0	0	0	0	1	0	0	0	1	0	0	0	0	0	0
15	8	7	0												

Data Pointer

0	0	0	0	0	1	0	0	1	0	1	0	0	0	0	0
15	8	7	0												

Program Counter

1	1	0	0	1	1	0	1	0	0	0	1	1	0	1	0
15	8	7	0												

Program Counter

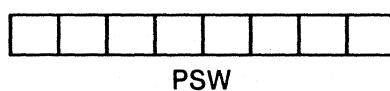
0	0	0	0	0	1	1	1	1	0	0	0	1	1	1	0
15	8	7	0												

Notes: None

Jump if Bit Is Not Set**Mnemonic:** JNB**Operands:** *bit address*
*code address***Format:** JNB *bit address, code address***Bit Pattern:**

00110000	Bit Address	Rel. Offset
7 0 7 0 7 0		

Operation: $(PC) \leftarrow (PC) + 3$
IF (*bit address*) = 0
THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

Description: This instruction tests the specified bit address. If it is 0, control passes to specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the test was successful, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: ORG 0DCH
 JNB 41,6,EXIT ; If bit 6 of byte 41 is 0 go to EXIT

EXIT: ADD A,41 ; At location 136H

Encoded Instruction:

00110000	01001110	01010111
7	0	7

Before

(41)
00110111
76 0

After

(41)
00110111
76 0

Program Counter

00000000	11011100
15 8 7 0	15 8 7 0

Program Counter

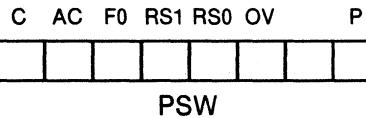
00000001	00110110
15 8 7 0	15 8 7 0

Notes: 10, 11, 12

Jump if Carry Is Not Set**Mnemonic:** JNC**Operands:** *code address***Format:** JNC *code address***Bit Pattern:**

0	1	0	1	0	0	0	Rel. Offset
7		0	7		0		

Operation: $(PC) \leftarrow (PC) + 2$
 IF $(C) = 0$
 THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 2**Cycles:** 2**Flags:**

Description: This instruction tests the contents of the carry flag. If it is 0, control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the test was successful, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: FIXUP: MOV A,R5

JNC FIXUP ; Jump to FIXUP if carry is 0
; (51 bytes backwards)

Encoded Instruction:

01010000	11001101
7	0 7 0

Before

Carry Flag

0

After

Carry Flag

0

Program Counter

00011100	11011100
15	8 7 0

Program Counter

00011100	10101011
15	8 7 0

Notes: 10, 11, 12

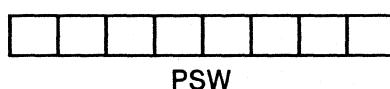
Jump if Accumulator Is Not Zero**Mnemonic:** JNZ**Operands:** *code address***Format:** JNZ *code address***Bit Pattern:**

01110000	Rel. Offset
7	0 7 0

Operation: $(PC) \leftarrow (PC) + 2$
 IF $(A) \neq 0$
 THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 2**Cycles:** 2

Flags: C AC F0 RS1 RS0 OV P



PSW

Description: This instruction tests the accumulator. If it is not equal to 0, control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the accumulator is not 0, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: **JNZ TEST** ; Jump if accumulator is not 0
 ; 77 bytes forward

TEST: MOV R3,A

Encoded Instruction:

01110000	01001101
7	0 7 0

Before

Accumulator

01110111
7 8

After

Accumulator

01110111
7 0

Program Counter

00000000	11011100
15 8 7 0	

Program Counter

00000001	00101011
15 8 7 0	

Notes: 10, 11, 12

Jump if Accumulator Is Zero**Mnemonic:** JZ**Operands:** *code address***Format:** JZ *code address***Bit Pattern:**

01100000	Rel. Offset
7	0 7 0

Operation: $(PC) \leftarrow (PC) + 2$
 IF $(A) = 0$
 THEN
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 2**Cycles:** 2

Flags: C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--

PSW

Description: This instruction tests the accumulator. If it is 0, control passes to the specified code address. Otherwise, control passes to the next sequential instruction.

The Program Counter is incremented to the next instruction. If the accumulator is 0, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: JZ EMPTY ; Jump to EMPTY if accumulator is 0

EMPTY: INC A ; 25 bytes from JZ instruction

Encoded Instruction:

01100000	00010111
7	0

Before

Accumulator

01110110
7

After

Accumulator

01110110
7

Program Counter

00001111	11011100
15	8

Program Counter

00001111	11011110
15	8

7 0

7 0

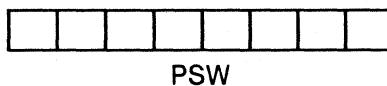
Notes: 10, 11, 12

Long Call**Mnemonic:** LCALL**Operands:** *code address* $0 \leq \text{code address} \leq 65,535$ **Format:** LCALL *code address***Bit Pattern:**

0 0 0 1 0 0 1 0	Code Addr. high	Code Addr. low
7 0 7	0 7	0

Operation:

- (PC) \leftarrow (PC) + 3
- (SP) \leftarrow (SP) + 1
- ((SP)) \leftarrow (PC *low*)
- (SP) \leftarrow (SP) + 1
- ((SP)) \leftarrow (PC *high*)
- (PC) \leftarrow *code address*

Bytes: 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW

Description: This instruction stores the contents of the program counter (the return address) on the stack, then transfers control to the 16-bit code address specified as the operand.

LCALL

Example: SERVICE: INC A ; Resides at location 233H

RETI

ORG 80 DCH
LCALL SERVICE ; Call SERVICE

Encoded Instruction:

00010010	00000010	00110011
7	0	7

Before

Program Counter

10000000	11011100
15	8

After

Program Counter

00000010	00110011
15	8

Stack Pointer

00101000
7

00101010
7

(29H)

01110111
7

(29H)

11011111
7

(2AH)

00000000
7

(2AH)

10000000
7

Notes: 1, 2, 3

Long Jump**Mnemonic:** LJMP**Operands:** *code address* $0 \leq \text{code address} \leq 65,535$ **Format:** LJMP *code address***Bit Pattern:**

0 0 0 0 0 0 1 0	Code Addr. high	Code Addr. low
7 0 7 0 7 0		

Operation: $(PC) \leftarrow \text{code address}$ **Bytes:** 3**Cycles:** 2

Flags: C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction transfers control to the 16-bit code address specified as the operand.**Example:** ORG 800H
LJMP FAR ; Jump to FAR

FAR: INC A ; Current code location (8233H)

Encoded Instruction:

0 0 0 0 0 0 1 0	1 0 0 0 0 0 1 0	0 0 1 1 0 0 1 1
7 0 7 0 7 0		

Before**After****Program Counter****Program Counter**

0 0 0 0 1 0 0 0	0 0 0 0 0 0 0 0	1 0 0 0 0 0 1 0	0 0 1 1 0 0 1 1
1 5 8 7 0		1 5 8 7 0	

Notes: None

MOV

Move Immediate Data to Indirect Address

Mnemonic: MOV

Operands: R_r Register 0 <= r <= 1
data -256 <= data <= +255

Format: MOV @R_r,#data

Bit Pattern:

0 1 1 1 0 1 1	r	Immediate Data
7	0	7

0

Operation: ((R_r) ← data

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction moves the 8-bit immediate data value to the memory location addressed by the contents of register r.

Example: MOV @R1,#01H ; Move 1 to indirect address

Encoded Instruction:

0 1 1 1 0 1 1	0 0 0 0 0 0 1
7	0

Before

After

Register 1

Register 1

0 0 0 1 0 0 1 1
7

0 0 0 1 0 0 1 1
7

(13H)

(13H)

0 1 1 1 0 1 1
7

0 0 0 0 0 0 1
7

Notes: 4, 15

Move Accumulator to Indirect Address

Mnemonic: MOV

Operands: R_r Register 0 <= r <= 1
A Accumulator

Format: MOV @R_r, A

Bit Pattern:

1	1	1	1	0	1	1	<i>r</i>
7	0						

Operation: ((R_r) ← (A)

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction moves the contents of the accumulator to the memory location addressed by the contents of register *r*.

Example: MOV @R0,A ; Move accumulator to indirect
; address

Encoded Instruction:

1	1	1	1	0	1	0
7	0					

Before

Register 0

0	0	1	1	0	0	0
7	0					

(38H)

1	0	0	1	1	0	1
7	0					

Accumulator

0	1	0	0	1	1	0
7	0					

After

Register 0

0	0	1	1	0	0	0
7	0					

(38H)

0	1	0	0	1	1	0
7	0					

Accumulator

0	1	0	0	1	1	0
7	0					

Note: 15

MOV

Move Memory to Indirect Address

Mnemonic: MOV

Operands: Rr Register 0 <= r <= 1
data address 0 <= data address <= 255

Format: MOV @Rr,data address

Bit Pattern:

10100111	r	Data Address
7	0	7

Operation: ((Rr)) ← (data address)

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--	--

PSW

Description: This instruction moves the contents of the specified data address to the memory location addressed by the contents of register r.

Example: MOV @R1,77H ; Move the contents of 77H to indirect address

Encoded Instruction:

10100111	01110111
7	0

Before

After

Register 1

Register 1

00001000
7

00001000
7

(08H)

(08H)

00110011
7

11111110
7

(77H)

(77H)

11111110
7

11111110
7

Notes: 8, 15

Move Immediate Data to Accumulator

Mnemonic: MOV

Operands: A Accumulator
 data $-256 \leq data \leq +255$

Format: MOV A,#data

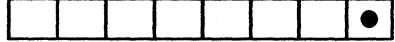
Bit Pattern:

0 1 1 1 0 1 0 0	Immediate Data
7 0 7 0	

Operation: (A) \leftarrow data

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction moves the 8-bit immediate data value to the accumulator.

Example: MOVA,#01H ; Initialize the accumulator to 1

Encoded Instruction:

0 1 1 1 0 1 0 0	0 0 0 0 0 0 0 1
7 0 7 0	

Before

After

Accumulator

Accumulator

0 0 1 0 0 1 1 0
7 0

0 0 0 0 0 0 0 1
7 0

Notes: 4, 5

Move Indirect Address to Accumulator

Mnemonic: MOV

Operands: A Accumulator
R_r Register 0 <= r <= 1

Format: MOV A,@R_r

Bit Pattern:

1	1	1	0	0	1	1
7						0

Operation: (A) ← ((R_r))

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

						●
PSW						

Description: This instruction moves the contents of the data memory location addressed by register *r* to the accumulator.

Example: MOV A,@R1 ; Move indirect address to
 ; accumulator

Encoded Instruction:

1	1	1	0	0	1	1
7						0

Before

Accumulator

1	0	0	0	0	1	1
7						0

Register 1

0	0	0	1	1	1	0
7						0

(1CH)

1	1	1	0	1	0	0
7						0

After

Accumulator

1	1	1	0	1	0	0
7						0

Register 1

0	0	0	1	1	1	0
7						0

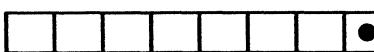
(1CH)

1	1	1	0	1	0	0
7						0

Notes: 5, 15

Move Register to Accumulator**Mnemonic:** MOV**Operands:** A Accumulator
R_r Register $0 \leq r \leq 7$ **Format:** MOV A,R_r**Bit Pattern:**

1	1	1	0	1	r	r	r
					7	0	

Operation: (A) \leftarrow (R_r)**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction moves the contents of register r to the accumulator.**Example:** MOV A,R6 ; Move R6 to accumulator**Encoded Instruction:**

1	1	1	0	1	1	1	0
7	0						

Before**After**

Accumulator

Accumulator

0	0	1	0	1	1	0	0
7	0						

1	0	0	0	1	0	1	0
7	0						

Register 6

Register 6

1	0	0	0	0	1	0	1
7	0						

1	0	0	0	0	1	0	1
7	0						

Note: 5

Move Memory to Accumulator

Mnemonic: MOV

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

Format: MOV A,*data address*

Bit Pattern:

11100101	Data Address
7	0 7 0

Operation: (A) \leftarrow (data address)

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction moves the contents of data memory at the specified address to the accumulator.

Example: MOV A,P1 ; Move the contents of Port 1 to ; accumulator

Encoded Instruction:

11100101	10010000
7	0 7 0

Before

Accumulator

00100110
7 0

Port 1 (90H)

01111001
7 0

After

Accumulator

01111001
7 0

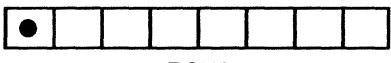
Port 1 (90H)

01111001
7 0

Notes: 5, 8

Move Bit to Carry Flag**Mnemonic:** MOV**Operands:** C Carry Flag
bit address $0 \leq \text{bit address} \leq 255$ **Format:** MOV C,bit address**Bit Pattern:**

1 0 1 0 0 0 1 0	Bit Address
7 0 7 0	

Operation: (C) \leftarrow (bit address)**Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction moves the contents of the specified bit address to the carry flag.**Example:** MOV C,TXD ; Move the contents of TXD to Carry ; flag**Encoded Instruction:**

1 0 1 0 0 0 1 0	1 0 1 1 0 1 1 0
7 0 7 0	

Before**After**

Port 3 (B0H)

Port 3 (B0H)

0 0 1 0 0 0 1 0
7 6 0

0 0 1 0 0 0 1 0
7 6 0

Carry Flag

Carry Flag

1
0

0
1

Notes: None

Move Immediate Data to Data Pointer

Mnemonic: MOV

Operands: Data Pointer
data $0 \leq data \leq 65,535$

Format: MOV DPTR,*#data*

Bit Pattern:

10010000	Imm. Data high	Imm. Data low
7 0 7 0 7 0		

Operation: (DPTR) \leftarrow *data*

Bytes: 3

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction moves the 16-bit immediate data value to the data pointer.

Example: MOV DPTR,#0F4FH ; Initialize the data pointer to 0F4FH

Encoded Instruction:

10010000	00001111	01001111
7 0 7 0 7 0		

Before

After

Data Pointer

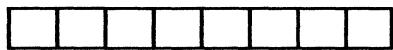
Data Pointer

00000000	11011100
15 8 7 0	15 8 7 0

Notes: None

Move Immediate Data to Register**Mnemonic:** MOV**Operands:** Rr Register $0 \leq r \leq 7$
data $-256 \leq \text{data} \leq +255$ **Format:** MOV Rr,#data**Bit Pattern:**

0	1	1	1	r	r	r	Immediate Data
7	0	7	0				

Operation: (Rr) \leftarrow data**Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction moves the 8-bit immediate data value to register r.**Example:** MOV R5,#01H ; Initialize register 1**Encoded Instruction:**

0	1	1	1	0	1	0	0	0	0	0	0	1	1	0	1
7	0	7	0												

Before

Register 5

0	0	0	1	0	0	1
7	0					

After

Register 5

0	0	0	0	0	0	0	1
7	0						

Note: 4

Move Accumulator to Register

Mnemonic: MOV

Operands: R_r Register $0 \leq r \leq 7$
A Accumulator

Format: MOV R_r,A

Bit Pattern:

1	1	1	1	1	r	r	r
7							0

Operation: (R_r) \leftarrow (A)

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

							P
--	--	--	--	--	--	--	---

PSW

Description: This instruction moves the contents of the accumulator to register *r*.

Example: MOV R7,A ; Move accumulator to register 7

Encoded Instruction:

1	1	1	1	1	1	1	1
7							0

Before

Register 7

1	1	0	1	1	1	0	0
7							0

After

Register 7

0	0	1	1	1	0	0	0
7							0

Accumulator

0	0	1	1	1	0	0	0
7							0

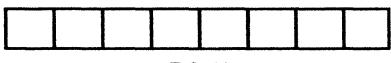
Accumulator

0	0	1	1	1	0	0	0
7							0

Notes: None

Move Memory to Register**Mnemonic:** MOV**Operands:** R_r Register 0 <= r <= 7
data address 0 <= data address <= 255**Format:** MOV R_r,data address**Bit Pattern:**

10101	r	r	r	Data Address
7	0	7	0	

Operation: (R_r) ← (data address)**Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction moves the contents of the specified data address to register r.**Example:** MOV R4,69H ; Move contents of 69H to register 4**Encoded Instruction:**

10101100	01101001
7	0

Before

Register 4

00001010
7

(69H)

11011000
7

After

Register 4

11011000
7

(69H)

11011000
7

Note: 8

Move Carry Flag to Bit

Mnemonic: MOV

Operands: bit address $0 \leq \text{bit address} \leq 255$
C Carry Flag

Format: MOV bit address, C

Bit Pattern:

1	0	0	1	0	1	0	Bit Address
7	0	7	0				

Operation: (bit address) \leftarrow (C)

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction moves the contents of the carry flag to the specified bit address.

Example: MOV 2FH.7,C ; Move C to bit address 7FH

Encoded Instruction:

1	0	0	1	0	1	1	1	1	1	1	1
7	0	7	0								

Before

(2FH)

0	0	1	0	0	1	1
7	0					

After

(2FH)

1	0	0	1	0	1	1
7	0					

Carry Flag

1

Carry Flag

1

Notes: None

Move Immediate Data to Memory

Mnemonic: MOV

Operands: *data address* $0 \leq \text{data address} \leq 255$
data $-256 \leq \text{data} \leq +255$

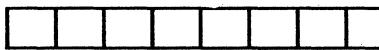
Format: MOV *data address*,#*data*

Bit Pattern:

0 1 1 1 0 1 0 1	Data Address	Immediate Data
7 0 7	0 7	0

Operation: $(\text{data address}) \leftarrow \text{data}$

Bytes: 3
Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction moves the 8-bit immediate data value to the specified data address.

Example: MOV TMOD,#01H ; Initialize Timer Mode to 1

Encoded Instruction:

0 1 1 1 0 1 0 1	1 0 0 0 1 0 0 1	0 0 0 0 0 0 0 1
7 0 7	0 7	0

Before

TMOD (89H)

0 1 1 1 0 1 1 1
7 0

After

TMOD (89H)

0 0 0 0 0 0 0 1
7 0

Notes: 4, 9

Move Indirect Address to Memory

Mnemonic: MOV

Operands: data address $0 \leq \text{data address} \leq 255$
Rr Register $0 \leq r \leq 1$

Format: MOV data address ,@Rr

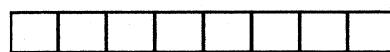
Bit Pattern:

1	0	0	0	1	1	r	Data Address
7	0	7	0				

Operation: (data address) $\leftarrow ((Rr))$

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction moves the contents of memory at the location addressed by register r to the specified data address.

Example: MOV 11H,@R1 ; Move indirect address to 11H

Encoded Instruction:

1	0	0	0	1	1	1	1	0	0	0	0	1	1	r	Data Address
7	0	7	0												

Before

(11H)

1	0	1	0	0	1	0	1
7	0						

After

(11H)

1	0	0	1	0	1	1	0
7	0						

Register 1

0	1	0	1	1	0	0
7	0					

Register 1

0	1	0	1	1	0	0
7	0					

(58H)

1	0	0	1	0	1	1
7	0					

(58H)

1	0	0	1	0	1	1
7	0					

Notes: 9, 15

Move Accumulator to Memory

Mnemonic: MOV

Operands: *data address* $0 \leq \text{data address} \leq 255$
A Accumulator

Format: MOV *data address*,A

Bit Pattern:

1	1	1	1	0	1	0	1	Data Address
7	0	7	0					

Operation: $(\text{data address}) \leftarrow (\text{A})$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction moves the contents of the accumulator to the specified data address.

Example: MOV 45H,A ; Move accumulator to 45H

Encoded Instruction:

1	1	1	1	0	1	0	1	0
7	0	7	0					

Before

(45H)

1	0	1	1	1	0	1
7	0					

After

(45H)

1	0	0	1	1	0	0
7	0					

Accumulator

1	0	0	1	1	0	0
7	0					

Accumulator

1	0	0	1	1	0	0
7	0					

Note: 9

MOV

Move Register to Memory

Mnemonic: MOV

Operands: *data address* $0 \leq \text{data address} \leq 255$
Rr $0 \leq r \leq 7$

Format: MOV *data address*,*Rr*

Bit Pattern:

1	0	0	0	1	<i>r</i>	<i>r</i>	Data Address
7	0	7	0				

Operation: (*data address*) \leftarrow (R*r*)

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction moves the contents of register *r* to the specified data address.

Example: MOV 7EH,R3 ; Move R3 to location 7EH

Encoded Instruction:

1	0	0	0	1	0	1	1	1	1	0
7	0	7	0							

Before

(7EH)

1	1	1	0	1	1	1
7	0					

After

(7EH)

1	0	0	1	0	1	1
7	0					

Register 3

1	0	0	1	0	1	1
7	0					

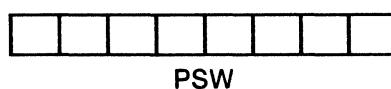
Register 3

1	0	0	1	0	1	1
7	0					

Note: 9

Move Memory to Memory**Mnemonic:** MOV**Operands:** *data address1* $0 \leq \text{data address1} \leq 255$
data address2 $0 \leq \text{data address2} \leq 255$ **Format:** MOV *data address1,data address2***Bit Pattern:**

1	0	0	0	1	0	1	Data Address2	Data Address1
7	0	7			0	7		0

Operation: $(\text{data address1}) \leftarrow (\text{data address2})$ **Bytes:** 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P**Description:** This instruction moves the contents of the source data address (*data address2*) to the destination data address (*data address1*).**Example:** MOV B,12H ; Move the contents of 12H to B (F0H)**Encoded Instruction:**

1	0	0	0	1	0	1	0	0	0
7	0	7		0	7		0		

Before

(12H)

1	1	1	0	0	1	0	1
7	0						

After

(12H)

1	1	1	0	0	1	0	1
7	0						

(F0H)

0	1	0	1	1	1	0	1
7	0						

(F0H)

1	1	1	0	0	1	0	1
7	0						

Note: 16

MOVC

Move Code Memory Offset from Data Pointer to Accumulator

Mnemonic: MOVC

Operands: A Accumulator
 DPTR Data Pointer

Format: MOVC A,@A + DPTR

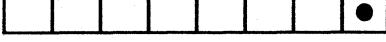
Bit Pattern:

1	0	0	1	1
7	0			

Operation: (A) $\leftarrow ((A) + (DPTR))$

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction adds the contents of the data pointer with the contents of the accumulator. It uses that sum as an address into code memory and places the contents of that address in the accumulator.

The high-order byte of the sum moves to Port 2 and the low-order byte of the sum moves to Port 0.

Example: MOVC A,@A + DPTR ; Look up value in table

Encoded Instruction:

1	0	0	0	0	1	1
7	0					

Before

Accumulator

0	0	0	1	0	0	0
7	0					

After

Accumulator

0	0	0	1	1	1	0
7	0					

Data Pointer

0	0	0	0	0	1	0	0	0
15	8	7	0					

Data Pointer

0	0	0	0	0	1	0	0	1
15	8	7	0					

(0302H)

0	0	0	1	1	1	1	0
7	0						

(0302H)

0	0	0	1	1	1	1	0
7	0						

Notes: 5

Move Code Memory Offset from Program Counter to Accumulator

Mnemonic: MOVC

Operands: A Accumulator
 PC Program Counter

Format: MOVC A,@A + PC

Bit Pattern:

1	0	0	0	0	1	1
7	0					

Operation: (PC) \leftarrow (PC) + 1
(A) \leftarrow ((A) + (PC))

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

						●
PSW						

Description: This instruction adds the contents of the incremented program counter with the contents of the accumulator. It uses that sum as an address into code memory and places the contents of that address in the accumulator.

The high-order byte of the sum moves to Port 2 and the low-order byte of the sum moves to Port 0.

MOVC

Example: *MOVCA,@A+PC* ; Look up value in table

Encoded Instruction:

1	0	0	0	0	0	1
7	0					

Before

Accumulator

0	1	1	0	1	1	0
7	0					

After

Accumulator

0	1	0	1	1	0	0
7	0					

Program Counter

0	0	0	0	0	0	1	0	0	1	0	0	1
15	8	7	0									

Program Counter

0	0	0	0	0	0	1	0	0	1	0	0	1
15	8	7	0									

(02A8H)

0	1	0	1	1	0	0
7	0					

(02A8H)

0	1	0	1	1	0	0
7	0					

Notes: 5, 12

**Move Accumulator to External Memory
Addressed by Data Pointer**

Mnemonic: MOVX

Operands: DPTR Data Pointer
A Accumulator

Format: MOVX @DPTR,A

Bit Pattern:

1	1	1	1	0	0	0
---	---	---	---	---	---	---

7 0

Operation: ((DPTR)) ← (A)

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--	--

 PSW

Description: This instruction moves the contents of the accumulator to the off-chip data memory location addressed by the contents of the data pointer.

The high-order byte of the Data Pointer moves to Port 2, and the low-order byte of the Data Pointer moves to Port 0.

Example: MOVX @DPTR,A ; Move accumulator at data pointer

Encoded Instruction:

1	1	1	1	0	0	0
---	---	---	---	---	---	---

7 0

Before

After

Data Pointer

Data Pointer

0	0	1	1	0	0	0
---	---	---	---	---	---	---

0	0	1	1	0	0	1
---	---	---	---	---	---	---

(3033H)

(3033H)

1	1	1	1	0	1
---	---	---	---	---	---

0	1	0	0	1	1
---	---	---	---	---	---

Accumulator

Accumulator

0	1	0	0	1	1
---	---	---	---	---	---

0	1	0	0	1	1
---	---	---	---	---	---

Notes: None

Move Accumulator to External Memory Addressed by Register

Mnemonic: MOVX

Operands: Rr Register $0 \leq r \leq 1$
A Accumulator

Format: MOVX @Rr,A

Bit Pattern:

1	1	1	1	0	0	1	r
7				0			

Operation: $((Rr)) \leftarrow (A)$

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction moves the contents of the accumulator to the off-chip data memory location addressed by the contents of register r , and special function register P2. P2 holds the high order byte of the address and register r holds the low order byte.

Example: MOV P2,#0
MOVX @R0,A ; Move accumulator to indirect
; address

Example: **MOV P2,#0**
MOVX @R0,A ; Move accumulator to indirect
; address

Encoded Instruction:

1	1	1	0	0	1	0
7	0					

Before

Register 0

1	0	1	1	1	0	0
7	0					

(00B8H)

1	0	0	1	1	0	0
7	0					

Accumulator

0	1	0	0	1	1	0
7	0					

After

Register 0

1	0	1	1	1	0	0
7	0					

(00B8H)

0	1	0	0	1	1	0
7	0					

Accumulator

0	1	0	0	1	1	0
7	0					

Notes: None

Move External Memory Addressed by Data Pointer to Accumulator

Mnemonic: MOVX

Operands: A Accumulator
DPTR Data Pointer

Format: MOVX A,@DPTR

Bit Pattern:

1	1	1	0	0	0	0
7	0					

Operation: (A) \leftarrow ((DPTR))

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

						●
PSW						

Description: This instruction moves the contents of the off-chip data memory location addressed by the data pointer to the accumulator.

The high-order byte of the Data Pointer moves to Port 2, and the low-order byte of the Data Pointer moves to Port 0.

Example: MOVXA,@DPTR ; Move memory at DPTR to ; accumulator

Encoded Instruction:

1	1	1	0	0	0	0
7	0					

Before

Accumulator

1	0	0	0	1	1	0
7	0					

After

Accumulator

1	1	1	0	1	0	0
7	0					

Data Pointer

0	1	1	0	0	1	1	1	0	0
15	8	7	0						

Data Pointer

0	1	1	0	0	1	1	1	0	0
15	8	7	0						

(73DCH)

1	1	1	0	0	0	0
7	0					

(73DCH)

1	1	1	0	0	0	0
7	0					

Notes: 5

Move External Memory Addressed by Register to Accumulator

Mnemonic: MOVX

Operands: A Accumulator
R_r Register $0 \leq r \leq 1$

Format: MOVX A,@R_r

Bit Pattern:

1110001 _r							
7	0						

Operation: (A) $\leftarrow ((Rr))$

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

						●
PSW						

Description: This instruction moves the contents of the off chip data memory location addressed by register r , and special function register P2 to the accumulator. P2 holds the high order byte of the address and register r holds the low order byte.

MOVX

Example: **MOV P2, #55H**
MOVXA,@R1 ; Move memory at R1 to accumulator

Encoded Instruction:

1	1	1	0	0	0	1
7	0					

Before

Accumulator

0	1	0	1	0	0
7	0				

Register 1

0	0	0	1	1	1	0
7	0					

(551CH)

0	0	0	0	1	0	0
7	0					

After

Accumulator

0	0	0	0	1	0	0
7	0					

Register 1

0	0	0	1	1	1	0
7	0					

(551CH)

0	0	0	0	1	0	0
7	0					

Notes: 5

Multiply Accumulator by B**Mnemonic:** MUL**Operands:** AB Multiply/Divide operand**Format:** MUL AB**Bit Pattern:**

1	0	1	0	0	1	0
7	0					

Operation: $(AB) \leftarrow (A) * (B)$ **Bytes:** 1**Cycles:** 4**Flags:**

C	AC	F0	RS1	RS0	OV	P
●				●		●
PSW						

Description: This instruction multiplies the contents of the accumulator by the contents of the multiplication register (B). Both operands are treated as unsigned values. It places the low-order byte of the result in the accumulator, and places the high-order byte of the result in the multiplication register.

The carry flag is always cleared. If the high-order byte of the product is not 0, then the overflow flag is set; otherwise, it is cleared.

MUL

Example: **MOV B,#10**
MUL AB

; Move 10 to multiplication register
; Multiply accumulator by 10

Encoded Instruction:

1	0	1	0	1	0
7	0				

Before

Accumulator

0	0	0	1	1	1	1
7	0					

Multiplication Register (B)

0	0	0	0	1	0	1
7	0					

Overflow Flag

0

After

Accumulator

0	0	1	1	0	1	1
7	0					

Multiplication Register (B)

0	0	0	0	0	0	1
7	0					

Overflow Flag

1

Notes: 5

No Operation**Mnemonic:** NOP**Operands:** None**Format:** NOP**Bit Pattern:**

00000000							
7	0						

Operation: No operation**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction does absolutely nothing for one cycle. Control passes to the next sequential instruction.**Example:** NOP ; Pause one cycle**Encoded Instruction:**

00000000							
7	0						

Notes: None

Logical OR Immediate Data to Accumulator

Mnemonic: ORL**Operands:** A Accumulator
 data $-256 \leq data \leq +255$ **Format:** ORL A,#data**Bit Pattern:**

01000100	Immediate Data
7 0 7 0	

Operation: (A) \leftarrow (A) OR data**Bytes:** 2**Cycles:** 1**Flags:**

C	AC	F0	RS1	RS0	OV	P
						●

PSW

Description: This instruction ORs the 8-bit immediate data value to the contents of the accumulator. Bit n of the result is 1 if bit n of either operand is 1; otherwise bit n is 0. It places the result in the accumulator.**Example:** ORL A,#00001000B ; Set bit 3 to 1**Encoded Instruction:**

01000100	00001000
7 0 7 0	

Before**After**

Accumulator

Accumulator

01110111
7 0

01111111
7 0

Notes: 4, 5

Logical OR Indirect Address to Accumulator

Mnemonic: ORL

Operands: A Accumulator
R_r Register 0 <= r <= 1

Format: ORL A,@R_r

Bit Pattern:

0	1	0	0	1	1	r
7		0				

Operation: (A) ← (A) OR ((R_r))

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

						●
PSW						

Description: This instruction ORs the contents of the memory location addressed by the contents of register *r* to the contents of the accumulator. Bit *n* of the result is 1 if bit *n* of either operand is 1; otherwise bit *n* is 0. It places the result in the accumulator.

Example: ORL A,@R0 ; Set bit 0 to 1

Encoded Instruction:

0	1	0	0	1	1	0
7		0				

Before

Accumulator

0	0	1	0	1	0	0
7		0				

Register 0

0	1	0	1	0	1	0
7		0				

(52H)

After

Accumulator

0	0	1	0	1	0	1
7		0				

Register 0

0	1	0	1	0	1	0
7		0				

(52H)

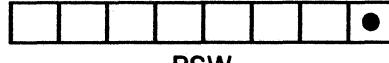
0	0	0	0	0	0	1
7		0				

0	0	0	0	0	0	1
7		0				

Notes: 5, 15

Logical OR Register to Accumulator**Mnemonic:** ORL**Operands:** A Accumulator
Rr Register $0 \leq r \leq 7$ **Format:** ORL A,Rr**Bit Pattern:**

0	1	0	0	1	r	r	r
7							0

Operation: $(A) \leftarrow (A) \text{ OR } (Rr)$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

 PSW**Description:** This instruction ORs the contents of register r to the contents of the accumulator. Bit n of the result is 1 if bit n of either operand is 1; otherwise bit n is 0. It places the result in the accumulator.**Example:** ORL A,R4 ; Set bits 7 and 3 to 1**Encoded Instruction:**

0	1	0	0	1	1	0	0
7							0

Before**After****Accumulator**

1	0	0	1	0	0	1	1
7							0

Accumulator

1	0	0	1	1	0	0	1
7							0

Register 4

1	0	0	0	1	0	0	0
7							0

Register 4

1	0	0	0	1	0	0	0
7							0

Note: 5

Logical OR Memory to Accumulator

Mnemonic: ORL

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

Format: ORL A,*data address*

Bit Pattern:

01000101	Data Address
7	0 7 0

Operation: $(A) \leftarrow (A) \text{ OR } (\text{data address})$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction ORs the contents of the specified data address to the contents of the accumulator. Bit n of the result is 1 if bit n of either operand is 1; otherwise bit n is 0. It places the result in the accumulator.

Example: ORL A,37H ; OR 37H with accumulator

Encoded Instruction:

01000101	00110111
7	0 7 0

Before

Accumulator

01110111
7 0

(37H)

10000000
7 0

After

Accumulator

11110111
7 0

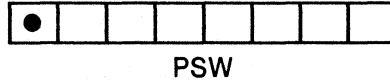
(37H)

10000000
7 0

Notes: 5, 8

ORL**Logical OR Bit to Carry Flag****Mnemonic:** ORL**Operands:** C Carry Flag
bit address $0 \leq \text{bit address} \leq 255$ **Format:** ORL C,*bit address***Bit Pattern:**

01110010	Bit Address
7 0 7 0	

Operation: $(C) \leftarrow (C) \text{ OR } (\text{bit address})$ **Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction ORs the contents of the specified bit address with the contents of the carry flag. The carry flag becomes 1 when either the carry flag or the specified bit address is 1; otherwise, it is 0. It places the result in the carry flag.**Example:** ORL C,46.2 ; OR bit 2 of byte 46 with Carry**Encoded Instruction:**

01110010	01110010
7 0 7 0	

Before**After****Carry Flag****Carry Flag**

0

1

(46)

(46)

00100110

00100110

7 2 0

7 2 0

Notes: None

Logical OR Complement of Bit to Carry Flag

Mnemonic: ORL

Operands: C Carry Flag
bit address $0 \leq \text{bit address} \leq 255$

Format: ORL C,*/bit address*

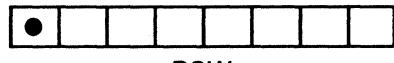
Bit Pattern:

1 0 1 0 0 0 0	Bit Address
7 0 7 0	

Operation: $(C) \leftarrow (C) \text{ OR NOT bit address}$

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction ORs the complemented contents of the specified bit address to the contents of the carry flag. The carry flag is 1 when either the carry flag is already 1 or the specified bit address is 0. It places the result in the carry flag. The contents of the specified bit address is unchanged.

Example: ORL C,/25H.5 ; Complement contents of bit 5 in
 ; byte 25H then OR with Carry

Encoded Instruction:

1 0 1 0 0 0 0	0 0 1 0 1 1 0 1
7 0 7 0	

Before

Carry Flag

0

(25H)

0 0 0 0 0 1 1 0

7 5 0

After

Carry Flag

1

(25H)

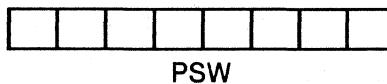
0 0 0 0 0 1 1 0

7 5 0

Notes: None

Logical OR Immediate Data to Memory**Mnemonic:** ORL**Operands:** *data address* $0 \leq \text{data address} \leq 255$
data $-256 \leq \text{data} \leq +255$ **Format:** ORL *data address*,#*data***Bit Pattern:**

0 1 0 0 0 0 1 1	Data Address	Immediate Data
7 0 7	0 7	0

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ OR } \text{data}$ **Bytes:** 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P**Description:** This instruction ORs the 8-bit immediate data value to the contents of the specified data address. Bit n of the result is 1 if bit n of either operand is 1; otherwise bit n is 0. It places the result in memory at the specified address.**Example:** ORL 57H,#01H ; Set bit 0 to 1**Encoded Instruction:**

0 1 0 0 0 0 1 1	0 1 0 1 0 1 1 1	0 0 0 0 0 0 0 1
7 0 7	0 7	0

Before

(57H)

0 1 1 1 0 1 1 0
7 0

After

(57H)

0 1 1 1 0 1 1 1
7 0

Notes: 4, 9

Logical OR Accumulator to Memory

Mnemonic: ORL

Operands: *data address* $0 \leq \text{data address} \leq 255$
A
Accumulator

Format: ORL *data address, A*

Bit Pattern:

01000010	Data Address
7	0 7 0

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ OR } A$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction ORs the contents of the accumulator to the contents of the specified data address. Bit n of the result is 1 if bit n of either operand is 1; otherwise bit n is 0. It places the result in memory at the specified address.

Example: ORL 10H,A ; OR accumulator with the contents
; of 10H

Encoded Instruction:

01000010	00010000
7	0 7 0

Before

Accumulator

11110000
7 0

(10H)

00110001
7 0

After

Accumulator

11110000
7 0

(10H)

11110001
7 0

Note: 9

Pop Stack to Memory**Mnemonic:** POP**Operands:** data address $0 \leq \text{data address} \leq 255$ **Format:** POP data address**Bit Pattern:**

11010000	Data Address
7	0 7 0

Operation: $(\text{data address}) \leftarrow ((\text{SP}))$
 $(\text{SP}) \leftarrow (\text{SP}) - 1$ **Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--	--

PSW**Description:** This instruction places the byte addressed by the stack pointer at the specified data address. It then decrements the stack pointer by 1.**Example:** POP PSW ; Pop PSW parity is not affected.**Encoded Instruction:**

11010000	11010000
7	0 7 0

Before**After**

Accumulator

11010101
7 0

Accumulator

11010101
7 0

PSW (0D0H)

10101011
7 0

PSW (0D0H)

11110011
7 0

Stack Pointer

00010000
7 0

Stack Pointer

00001111
7 0

(10H)

11110010
7 0

(10H)

11110010
7 0

Notes: 2, 8, 17

Push Memory onto Stack**Mnemonic:** PUSH**Operands:** *data address* $0 \leq \text{data address} \leq 255$ **Format:** PUSH *data address***Bit Pattern:**

1	1	0	0	0	0	0	0	Data Address
7	0	7						0

Operation: $(\text{SP}) \leftarrow (\text{SP}) + 1$
 $((\text{SP})) \leftarrow (\text{data address})$ **Bytes:** 2**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

--	--	--	--	--	--	--	--

PSW

Description: This instruction increments the stack pointer, then stores the contents of the specified data address at the location addressed by the stack pointer.**Example:** PUSH 4DH ; Push one byte to the stack**Encoded Instruction:**

1	1	0	0	0	0	0	1	0	0	1	1	0	1
7	0	7					0						

Before

(4DH)

1	0	1	0	1	0
7	0				

After

(4DH)

1	0	1	0	1	0
7	0				

Stack Pointer

0	0	0	1	0	0	0
7	0					

Stack Pointer

0	0	0	1	0	0	1
7	0					

(11H)

0	0	0	0	0	0	0
7	0					

(11H)

1	0	1	0	1	0
7	0				

Notes: 2, 3, 8

Return from Subroutine (Non-interrupt)**Mnemonic:** RET**Operands:** None**Format:** RET**Bit Pattern:**

0	0	1	0	0	0	1
7	0					

Operation:
(PC *high*) \leftarrow ((SP))
(SP) \leftarrow (SP) -1
(PC *low*) \leftarrow ((SP))
(SP) \leftarrow (SP) -1**Bytes:** 1**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW							

Description: This instruction returns from a subroutine. Control passes to the location addressed by the top two bytes on the stack. The high-order byte of the return address is always the first to come off the stack. It is immediately followed by the low-order byte.

Example: *RET* ; Return from subroutine

Encoded Instruction:

00100010
7 0

Before

Program Counter

00000010	01010101
15 8 7 0	

After

Program Counter

00000000	01110011
15 8 7 0	

Stack Pointer

00001010
7 0

Stack Pointer

00001000
7 0

(0AH)

00000000
7 0

(0AH)

00000000
7 0

(09H)

01110011
7 0

(09H)

01110011
7 0

Notes: 2, 17

Return from Interrupt Routine

Mnemonic: RETI

Operands: None

Format: RETI

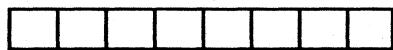
Bit Pattern:

0	0	1	1	0	0	1
7	0					

Operation:
 $(PC\ high) \leftarrow ((SP))$
 $(SP) \leftarrow (SP) - 1$
 $(PC\ low) \leftarrow ((SP))$
 $(SP) \leftarrow (SP) - 1$

Bytes: 1

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction returns from an interrupt service routine, and reenables interrupts of equal or lower priority. Control passes to the location addressed by the top two bytes on the stack. The high-order byte of the return address is always the first to come off the stack. It is immediately followed by the low-order byte.

Example: RETI ; Return from interrupt routine

Encoded Instruction:

00110010	
7	0

Before

After

Program Counter

00001010		10101010	
15	8	7	0

Program Counter

00000000		11110001	
15	8	7	0

Stack Pointer

00001010	
7	0

Stack Pointer

00001000	
7	0

(0AH)

00000000	
7	0

(0AH)

00000000	
7	0

(09H)

11110001	
7	0

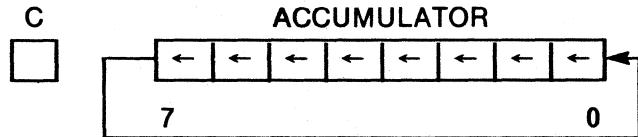
(09H)

11110001	
7	0

Notes: 2, 17

Rotate Accumulator Left**Mnemonic:** RL**Operands:** A Accumulator**Format:** RL A**Bit Pattern:**

0	0	1	0	0	0	1
7	0					

Operation:**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction rotates each bit in the accumulator one position to the left. The most significant bit (bit 7) moves into the least significant bit position (bit 0).**Example:** RL A ; Rotate accumulator left one positon.**Encoded Instruction:**

0	0	1	0	0	0	1
7	0					

Before

Accumulator

1	1	0	1	0	0	0
7	0					

After

Accumulator

1	0	1	0	0	0	1
7	0					

Notes: None

Rotate Accumulator and Carry Flag Left

Mnemonic: RLC

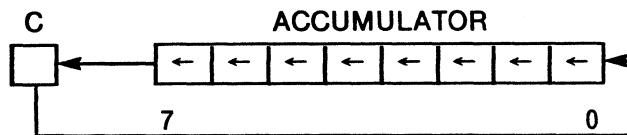
Operands: A Accumulator

Format: RLC A

Bit Pattern:

0	0	1	1	0	0	1
7	0					

Operation:



Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●						●
PSW						

Description: This instruction rotates each bit in the accumulator one position to the left. The most significant bit (bit 7) moves into the Carry flag, while the previous contents of Carry moves into the least significant bit (bit 0).

Example: RLC A ; Rotate accumulator and carry left
 ; one positon.

Encoded Instruction:

0	0	1	1	0	0	1
7	0					

Before

Accumulator

0	0	0	1	1	0	1
7	0					

Carry Flag

1

After

Accumulator

0	0	1	1	0	0	1
7	0					

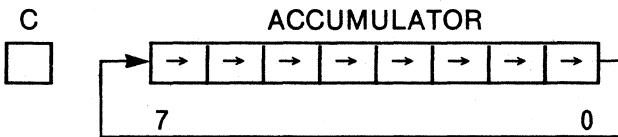
Carry Flag

0

Note: 5

Rotate Accumulator Right**Mnemonic:** RR**Operands:** A Accumulator**Format:** RRA**Bit Pattern:**

0	0	0	0	0	0	1
7	0					

Operation:**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW

Description: This instruction rotates each bit in the accumulator one position to the right. The least significant bit (bit 0) moves into the most significant bit position (bit 7).**Example:** RRA ; Rotate accumulator right one position.**Encoded Instruction:**

0	0	0	0	0	0	1
7	0					

Before**Accumulator**

1	1	0	1	0	0	1
7	0					

After**Accumulator**

1	1	1	0	1	0	0
7	0					

Notes: None

Rotate Accumulator and Carry Flag Right

Mnemonic: RRC

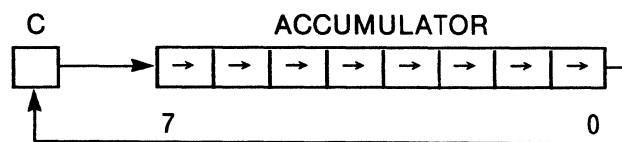
Operands: A Accumulator

Format: RRC A

Bit Pattern:

0	0	0	1	0	0	1
7	0					

Operation:



Bytes: 1

Cycles: 1

Flags:

C	AC	F0	RS1	RS0	OV	P
●						●
PSW						

Description: This instruction rotates each bit in the accumulator one position to the right. The least significant bit (bit 0) moves into the Carry flag, while the previous contents of Carry moves into the most significant bit (bit 7).

Example: RRC A

; Rotate accumulator and carry right
; one positon.

Encoded Instruction:

0	0	0	1
7	0		

Before

Accumulator

1	0	0	1	0	0
7	0				

After

Accumulator

1	1	0	0	1	0
7	0				

Carry Flag

1

Carry Flag

0

Note: 5

Set Carry Flag

Mnemonic: SETB

Operands: C Carry Flag

Format: SETB C

Bit Pattern:

1	1	0	1	0	1	1
7	0					

Operation: (C) \leftarrow 1

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●							
PSW							

Description: This instruction sets the carry flag to 1.

Example: SETB C ; Set Carry to 1

Encoded Instruction:

1	1	0	1	1	1	1
7	0					

Before

After

Carry Flag

Carry Flag

0

1

Notes: None

Set Bit**Mnemonic:** SETB**Operands:** *bit address* $0 \leq \text{bit address} \leq 255$ **Format:** SETB *bit address***Bit Pattern:**

11010010	Bit Address
7	0 7 0

Operation: $(\text{bit address}) \leftarrow 1$ **Bytes:** 2**Cycles:** 1**Flags:**

C	AC	F0	RS1	RS0	OV	P

PSW

Description: This instruction sets the contents of the specified bit address to 1.**Example:** SETB 41.5 ; Set the contents of bit 5 in byte 41
; to 1**Encoded Instruction:**

11010010	01001101
7	0 7 0

Before

(41)

01000110
7 5 0

After

(41)

01100110
7 5 0

Notes: None

Short Jump

Mnemonic: SJMP

Operands: *code address*

Format: SJMP *code address*

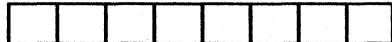
Bit Pattern:

1	0	0	0	0	0	0	0	Rel. Offset
7	0	7	0					

Operation: $(PC) \leftarrow (PC) + 2$
 $(PC) \leftarrow (PC) + \text{relative offset}$

Bytes: 2

Cycles: 2

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction transfers control to the specified code address. The Program Counter is incremented to the next instruction, then the relative offset is added to the incremented program counter, and the instruction at that address is executed.

Example: SJMP BOTTOM ; Jump to BOTTOM
FF:INC A

BOTTOM: RR A ; (15 bytes ahead from the INC
; instruction)

Encoded Instruction:

1	0	0	0	0	0	0	0	0
7	0	7	0					

Before

After

Program Counter

Program Counter

1	1	1	0	1	0	0	0	1	1	0	1	1	0	1	0
15	8	7	0	15	8	7	0								

Notes: 10, 11, 12

**Subtract Immediate Data from
Accumulator with Borrow**

Mnemonic: SUBB

Operands: A Accumulator
data $-256 \leq data \leq +255$

Format: SUBB A,#*data*

Bit Pattern:

1	0	0	1	0	0		Immediate Data
7	0	7			0		

Operation: $(A) \leftarrow (A) - (C) - data$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●				●		●
---	---	--	--	--	---	--	---

PSW

Description: This instruction subtracts the contents of the Carry flag and the immediate data value from the contents of the accumulator. It places the result in the accumulator.

Example: SUBB A,#0C1H ; Subtract 0C1H from accumulator

Encoded Instruction:

1	0	0	1	0	0
7	0	7		0	

Before

After

Accumulator

Accumulator

0	0	1	0
7	0	7	0

0	1	0	0
7	0	7	0

Carry Flag

Carry Flag

1
0

1
0

Auxiliary Carry Flag

Auxiliary Carry Flag

0
1

0
1

Overflow Flag

Overflow Flag

1
0

0
1

Notes: 4, 5, 6, 13, 14

SUBB

Subtract Indirect Address from Accumulator with Borrow

Mnemonic: SUBB

Operands: A Accumulator
R/r Register $0 \leq r \leq 1$

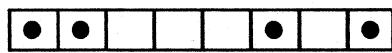
Format: SUBB A,@Rr

Bit Pattern:

1	0	0	1	0	1	r
7						0

Operation: $(A) \leftarrow (A) - (C) - ((Rr))$

Bytes: 1
Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction subtracts the Carry flag and the memory location addressed by the contents of register r from the contents of the accumulator. It places the result in the accumulator.

Example: *SUBB A,@R1* ; Subtract the indirect address from
; accumulator

Encoded Instruction:

10010111
7 0

Before

Accumulator

10000110
7 0

Register 1

00011100
7 0

(1CH)

01100010
7 0

Carry Flag

0

Auxiliary Carry Flag

0

Overflow Flag

0

After

Accumulator

00100100
7 0

Register 1

00011100
7 0

(1CH)

01100010
7 0

Carry Flag

0

Auxiliary Carry Flag

1

Overflow Flag

1

Notes: 5, 6, 13, 14, 15

SUBB

Subtract Register from Accumulator with Borrow

Mnemonic: SUBB

Operands: A Accumulator
R_r Register 0 <= r <= 7

Format: SUBB A,R_r

Bit Pattern:

1	0	0	1	r	r	r
7				0		

Operation: (A) ← (A) – (C) – (R_r)

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●					●		●
---	---	--	--	--	--	---	--	---

PSW

Description: This instruction subtracts the contents of the Carry flag and the contents of register *r* from the contents of the accumulator. It places the result in the accumulator.

Example: SUBB A,R6 ; Subtract R6 from accumulator

Encoded Instruction:

1	0	0	1	1	1	0
7	0					

Before

Accumulator

0	1	1	0	1	1	0
7	0					

After

Accumulator

1	1	1	0	0	0	0
7	0					

R6

1	0	0	0	0	1	0
7	0					

R6

1	0	0	0	0	1	0
7	0					

Carry Flag

1

Carry Flag

1

Auxiliary Carry Flag

0

Auxiliary Carry Flag

1

Overflow Flag

0

Overflow Flag

1

Notes: 5, 6, 13, 14

SUBB

Subtract Memory from Accumulator with Borrow

Mnemonic: SUBB

Operands: A Accumulator
 data address $0 \leq \text{data address} \leq 255$

Format: SUBB A,*data address*

Bit Pattern:

1	0	0	1	0	1	Data Address
7		0	7		0	

Operation: $(A) \leftarrow (A) - (C) - (\text{data address})$

Bytes: 2

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

●	●				●	●
---	---	--	--	--	---	---

PSW

Description: This instruction subtracts the contents of the Carry flag and the contents of the specified address from the contents of the accumulator. It places the result in the accumulator.

Example: SUBB A,32H ; Subtract 32H in memory from
 ; accumulator

Encoded Instruction:

10010101	00110010
7 0	7 0

Before

After

Accumulator

00100110
7 0

Accumulator

11010010
7 0

(32H)

01010011
7 0

(32H)

01010011
7 0

Carry Flag

1

Carry Flag

1

Auxiliary Carry Flag

0

Auxiliary Carry Flag

1

Overflow Flag

0

Overflow Flag

0

Notes: 5, 6, 8, 13, 14

SWAP

Exchange Nibbles in Accumulator

Mnemonic: SWAP

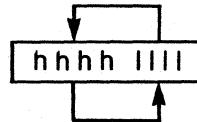
Operands: A Accumulator

Format: SWAP A

Bit Pattern:

1	1	0	0	0	1	0
7	0					

Operation:



Bytes: 1

Cycles: 1

Flags: C AC F0 RS0 RS1 OV P

PSW						

Description: This instruction exchanges the contents of the low order nibble (0-3) with the contents of the high order nibble (4-7).

Example: SWAP A ; Swap high and low nibbles in the
 ; accumulator.

Encoded Instruction:

1	1	0	0	0	1	0
7	0					

Before

Accumulator

1	1	0	1	0	0	0
7	0					

After

Accumulator

0	0	0	0	1	1	0
7	0					

Notes: None

Exchange Indirect Address with Accumulator

Mnemonic: XCH

Operands: A Accumulator
R_r Register $0 \leq r \leq 1$

Format: XCH A,@R_r

Bit Pattern:

1100011r							
7	0						

Operation: temp $\leftarrow ((Rr))$
 $((Rr)) \leftarrow (A)$
 $(A) \leftarrow \text{temp}$

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

						●
--	--	--	--	--	--	---

PSW

Description: This instruction exchanges the contents of the memory location addressed by the contents of register r with the contents of the accumulator.

Example: XCH A,@R0 ; Exchange the accumulator with
; memory

Encoded Instruction:

11000110							
7	0						

Before

Accumulator

00111111							
7	0						

After

Accumulator

00011101							
7	0						

Register 0

01010010							
7	0						

Register 0

01010010							
7	0						

(52H)

00011101							
7	0						

(52H)

00111111							
7	0						

Notes: 5, 15

Exchange Register with Accumulator**Mnemonic:** XCH**Operands:** A Accumulator
R_r Register $0 \leq r \leq 7$ **Format:** XCH A,R_r**Bit Pattern:**

1	1	0	0	1	r	r	r
7	0						

Operation: temp \leftarrow (R_r)
(R_r) \leftarrow (A)
(A) \leftarrow temp**Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

						<input checked="" type="radio"/>
PSW						

Description: This instruction exchanges the contents of register *r* with the contents of the accumulator.**Example:** XCH A,R6 ; Exchange register 6 with the ; accumulator**Encoded Instruction:**

1	1	0	0	1	1	0	0
7	0						

Before

Accumulator

1	0	0	1	1	0	0	1
7	0						

Register 6

1	0	0	0	0	0	0	0
7	0						

After

Accumulator

1	0	0	0	0	0	0	0
7	0						

Register 6

1	0	0	1	1	0	0	1
7	0						

Note: 5

Exchange Memory with Accumulator

Mnemonic: XCH

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

Format: XCH A,*data address*

Bit Pattern:

11000101	Data Address
7 0 7 0	

Operation: temp \leftarrow (*data address*)
(*data address*) \leftarrow (A)
(A) \leftarrow temp

Bytes: 2

Cycles: 1

Flags:

C	AC	F0	RS1	RS0	OV	P
						●

PSW

Description: This instruction exchanges the contents of the specified data address with the contents of the accumulator.

Example: XCH A,37H ; Exchange accumulator with the ; contents of location 37H

Encoded Instruction:

11000101	00110111
7 0 7 0	

Before

After

Accumulator

Accumulator

01110111
7 0

11110000
7 0

(37H)

(37H)

11110000
7 0

01110111
7 0

Notes: 5, 9

XCHD

Exchange Low Nibbles (Digits) of Indirect Address with Accumulator

Mnemonic: XCHD

Operands: A Accumulator
R_r Register 0 <= r <= 1

Format: XCHD A,@R_r

Bit Pattern:

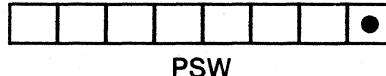
1	1	0	1	1	<i>r</i>
7			0		

Operation: temp \leftarrow ((R_r) 0-3
((R_r) 0-3 \leftarrow (A) 0-3
(A) 0-3 \leftarrow temp

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P



Description: This instruction exchanges the contents of the low order nibble (bits 0-3) of the memory location addressed by the contents of register *r* with the contents of the low order nibble (bits 0-3) of the accumulator.

Example: **XCHDA,@R0** ; Exchange the accumulator with
 ; memory

Encoded Instruction:

11010110

7	0
---	---

Before

Accumulator

00111111

7	0
---	---

Register 0

01010010

7	0
---	---

(52H)

00011101

7	0
---	---

After

Accumulator

00111101

7	0
---	---

Register 0

01010010

7	0
---	---

(52H)

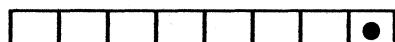
00011111

7	0
---	---

Notes: 5, 15

**Logical Exclusive OR Immediate Data
to Accumulator****Mnemonic:** XRL**Operands:** A Accumulator
 data $-256 \leq data \leq +255$ **Format:** XRL A,#data**Bit Pattern:**

01100100	Immediate Data
7 0 7 0	

Operation: $(A) \leftarrow (A) \text{ XOR } data$ **Bytes:** 2**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P

PSW**Description:** This instruction exclusive ORs the immediate data value to the contents of the accumulator. Bit n of the result is 0 if bit n of the accumulator equals bit n of the data value; otherwise bit n is 1. It places the result in the accumulator.**Example:** XRL A,#0FH ; Complement the low order nibble**Encoded Instruction:**

01100100	00001111
7 0 7 0	

Before**After**

Accumulator

Accumulator

01110111
7 0

01111000
7 0

Notes: 4, 5

Logical Exclusive OR Indirect Address to Accumulator

Mnemonic: XRL

Operands: A Accumulator
Rr $0 \leq Rr \leq 1$

Format: XRL A,@Rr

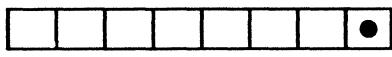
Bit Pattern:

0	1	1	0	0	1	1	r
7		0					

Operation: $(A) \leftarrow (A) \text{ XOR } ((Rr))$

Bytes: 1

Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction exclusive ORs the contents of the memory location addressed by the contents of register r to the contents of the accumulator. Bit n of the result is 0 if bit n of the accumulator equals bit n of the addressed location; otherwise bit n is 1. It places the result in the accumulator.

Example: XRL A,@R0 ; XOR indirect address with ; accumulator

Encoded Instruction:

0	1	1	0	1	1	0
7		0				

Before

Accumulator

0	0	1	0	1	0	0
7		0				

Register 0

0	1	0	1	0	1	0
7		0				

(52H)

0	0	0	0	0	0	1
7		0				

After

Accumulator

0	0	1	0	1	0	1
7		0				

Register 0

0	1	0	1	0	1	0
7		0				

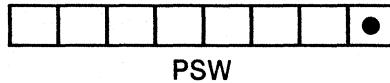
(52H)

0	0	0	0	0	0	1
7		0				

Notes: 5, 15

Logical Exclusive OR Register to Accumulator**Mnemonic:** XRL**Operands:** A Accumulator
Rr Register $0 \leq r \leq 7$ **Format:** XRL A,Rr**Bit Pattern:**

0	1	1	0	1	r	r
7						0

Operation: $(A) \leftarrow (A) \text{ XOR } (Rr)$ **Bytes:** 1**Cycles:** 1**Flags:** C AC F0 RS1 RS0 OV P**Description:** This instruction exclusive ORs the contents of register r to the contents of the accumulator. Bit n of the result is 0 if bit n of the accumulator equals bit n of the specified register; otherwise bit n is 1. It places the result in the accumulator.**Example:** XRL A,R4 ; XOR R4 with accumulator**Encoded Instruction:**

0	1	1	0	1	0	0
7						0

Before

Accumulator

1	0	0	1	0	0	1
7						0

Register 4

1	1	1	0	0	0	1
7						0

After

Accumulator

0	1	1	1	0	0	1
7						0

Register 4

1	1	1	0	0	0	1
7						0

Note: 5

Logical Exclusive OR Memory to Accumulator

Mnemonic: XRL

Operands: A Accumulator
data address $0 \leq \text{data address} \leq 255$

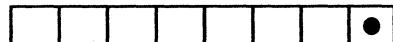
Format: XRL A,*data address*

Bit Pattern:

0	1	1	0	0	1	0	1	Data Address
7		0	7			0		

Operation: $(A) \leftarrow (A) \text{ XOR } (\text{data address})$

Bytes: 2
Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

PSW

Description: This instruction exclusive ORs the contents of the specified data address to the contents of the accumulator. Bit n of the result is 0 if bit n of the accumulator equals bit n of the addressed location; otherwise bit n is 1. It places the result in the accumulator.

Example: XRL A,37H ; XOR the contents of location 37H ; with accumulator

Encoded Instruction:

0	1	1	0	0	1	1	1	
7		0	7			0		

Before

Accumulator

0	1	1	1	1	1	1
7		0				0

(37H)

1	0	0	1	0	0
7		0			0

After

Accumulator

1	1	1	1	0	1	1
7		0				0

(37H)

1	0	0	1	0	0
7		0			0

Notes: 4, 8

XRL**Logical Exclusive OR Immediate Data to Memory****Mnemonic:** XRL**Operands:** *data address* $0 \leq \text{data address} \leq 255$
data $-256 \leq \text{data} \leq +255$ **Format:** XRL *data address*,#*data***Bit Pattern:**

01100011	Data Address	Immediate Data
7	0 7	0 7

0

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ XOR } \text{data}$ **Bytes:** 3**Cycles:** 2**Flags:** C AC F0 RS1 RS0 OV P

PSW						

Description: This instruction exclusive ORs the immediate data value to the contents of the specified data address. Bit *n* of the result is 0 if bit *n* of the specified address equals bit *n* of the data value; otherwise, bit *n* is 1. It places the result in data memory at the specified address.**Example:** XRL P1,#51H ; XOR 51H with the contents of Port 1**Encoded Instruction:**

01100011	10010000	01010001
7	0 7	0 7

Before

Port 1 (90H)

01110110
7 0

After

Port 1 (90H)

11100110
7 0

Notes: 4, 9

Logical Exclusive OR Accumulator to Memory

Mnemonic: XRL

Operands: data address $0 \leq \text{data address} \leq 255$
A
Accumulator

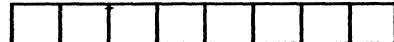
Format: XRL data address, A

Bit Pattern:

0 1 1 0 0 0 1 0	Data Address
7 0 7 0	

Operation: $(\text{data address}) \leftarrow (\text{data address}) \text{ XOR } A$

Bytes: 2
Cycles: 1

Flags: C AC F0 RS1 RS0 OV P

 PSW

Description: This instruction exclusive ORs the contents of the accumulator to the contents of the specified data address. Bit n of the result is 0 if bit n of the accumulator equals bit n of the specified address; otherwise bit n is 1. It places the result in data memory at the specified address.

Example: XRL 10H,A ; XOR the contents of 10H with the ; accumulator

Encoded Instruction:

0 1 1 0 0 0 1 0	0 0 0 1 0 0 0 0
7 0 7 0	

Before

After

Accumulator

Accumulator

1 1 1 1 0 0 0 0
7 0

1 1 1 1 0 0 0 0
7 0

(10H)

(10H)

0 0 1 1 0 0 0 1
7 0

1 1 0 0 0 0 0 1
7 0

Note: 9

Notes

1. The low-order byte of the Program Counter is always placed on the stack first, followed by the high order byte.
2. The Stack Pointer always points to the byte most recently placed on the stack.
3. On the 8051 the contents of the Stack Pointer should never exceed 127. If the stack pointer exceeds 127, data pushed on the stack will be lost, and undefined data will be returned. The Stack Pointer will be incremented normally even though data is not recoverable.
4. The expression used as the data operand must evaluate to an eight-bit number. This limits the range of possible values in assembly time-expressions to between -256 and +255 inclusive.
5. The Parity Flag, PSW.0, always shows the parity of the accumulator. If the number of 1's in the accumulator is odd, the parity flag is 1; otherwise, the parity flag will be 0.
6. All addition operations affect the Carry Flag, PSW.7, and the Auxiliary Carry flag, PSW.6. The Carry flag receives the carry out from the bit 7 position (Most Significant Bit) in the accumulator. The Auxiliary Carry flag receives the carry out from the bit 3 position. Each is either set or cleared with each ADD operation.
7. The overflow flag (OV) is set when an operation produces an erroneous result (i.e. the sum of two negative numbers is positive, or the sum of two positive numbers is negative). OV is updated with each operation.
8. If one of the I/O ports is specified by the data address, then data will be taken from the port input pins.
9. If one of the I/O ports is specified by the data address, then data will be taken from, and returned to, the port latch.
10. The *code address* operand must be within the range of -128 and +127 inclusive of the incremented program counter's value.
11. The last byte of the encoded instruction is treated as a two's complement number, when it is added to the program counter.
12. The Program Counter is always incremented before the add.
13. The auxiliary carry flag is set if there is a borrow from bit 3 of the accumulator; otherwise, it is cleared.
14. The overflow flag (OV) is set when an operation produces an erroneous result (i.e. a positive number is subtracted from a negative number to produce a positive result, or a negative number is subtracted from a positive number to produce a negative result). OV is cleared with each correct operation.
15. On the 8051 the contents of the register used in the indirect address should not exceed 127. When the contents of the register is 128 or greater, source operands will return undefined data, and destination operands will cause data to be lost. In either case, the program will continue with no change in execution time or control flow.
16. If an I/O port is specified as the source operand, then the the port pins will be read. If an I/O port is the destination operand, then the port latch will receive the data.
17. If the stack pointer is 128 or greater, then invalid data will be returned on a POP or return.



CHAPTER 4 ASSEMBLER DIRECTIVES

This chapter describes the assembler directives. It shows how to define symbols and how to control the placement of code and data in program memory.

Introduction

The MCS-51 assembler has several directives that permit you to set symbol values, reserve and initialize storage space, and control the placement of your code.

The directives should not be confused with instructions. They do not produce executable code, and with the exception of the DB and DW directives, they have no direct effect on the contents of code memory. What they do is change the state of the assembler, define user symbols, and add information (other than pure object code) to the object file (e.g., segment definitions).

The directives are divided into the following categories:

Symbol Definition

SEGMENT
EQU
SET
DATA
IDATA
XDATA
BIT
CODE

Storage Initialization/Reservation

DS
DB
DW
DBIT

Program Linkage

PUBLIC
EXTRN
NAME

Assembler State Control

ORG
END

Segment Selection Directives

RSEG
CSEG
DSEG
XSEG
ISEG
BSEG

USING

The MCS-51 assembler is a two-pass assembler. In the first pass, symbol values are determined, and in the second, forward references are resolved, and object code is produced. This structure imposes a restriction on the source program: expressions

which define symbol values (see Symbol Definition Directives) and expressions which control the location counter (see ORG, DS, and DBIT directives) may not have forward references.

The Location Counter

The location counter in ASM51 is a pointer to the address space of the active segment. When a segment is first activated, the location counter is 0 (unless a base address was specified using the segment select directives). The location counter is changed after each instruction by the length of the instruction. You can change its value with the ORG directive, which sets a new program origin for statements that follow it. The storage initialization and reservation directives (DS, DB, DW, and DBIT) change the value of the location counter as statements are encountered within a segment. If you change segments and later return to that segment, the location counter is restored to its previous value. Whenever the assembler encounters a label, it assigns to the label the current value of the location counter and the type of the current segment.

The dollar sign (\$) indicates the value of the active segment's location counter. When you use the location counter symbol, keep in mind that its value changes with each instruction, but only after that instruction has been completely evaluated. If you use \$ in an operand to an instruction or a directive, it represents the code address of the first byte of that instruction.

```
MSG: DB MSG_LENGTH,'THIS IS A MESSAGE'  
MSG_LENGTH EQU $-MSG-1 ;message length
```

Symbol Names

A symbol name must begin with a letter or a special character (either ? or __), followed by letters, special characters, or digits.

You can use up to 255 characters in a symbol name, but only the first 31 characters are significant. A symbol name may contain upper- or lower-case characters, but the assembler converts to upper-case characters for internal representation. So, to ASM51, "buffer" is the same as "BUFFER" and the name

"__A_THIRTY_ONE_CHARACTER_STRING__"

is the same as the name

"__A_THIRTY_ONE_CHARACTER_STRING_PLUS_THIS__"

although the strings are different.

The instruction mnemonics, assembly-time operators, predefined bit and data addresses, segment attributes, and assembler directives may not be used as user-defined symbol names. For a complete list of these reserved words, refer to Appendix F.

Statement Labels

A label is a symbol. All of the rules for forming symbol names apply to labels. A statement label is the first field in a line, but it may be preceded by any number of tabs or spaces. You must place a colon (:) after a label to identify it as a label. Only one label is permitted per line.

Labels are allowed only before empty statements, machine instructions, data initialization directives (DB and DW), and storage reservation directives (DS and DBIT). Simple names (without colons) can only precede symbol definition directives (EQU, SET, CODE, DATA, IDATA, XDATA, BIT, and SEGMENT). All other statements may not be preceded by labels or simple names.

When a label is defined, it receives a numeric value and segment type. The numeric value will always be the current value of the location counter of the currently selected segment at the point of use. The value of the label will be relocatable or absolute depending on the relocatability of the current segment. The segment type will be equivalent to the segment type of the current segment.

Several examples of lines containing labels are shown below:

```
LABEL1: DS 1
LABEL2: ;This line contains no instruction; it is an empty statement
LAB3: DB 27,33,'FIVE'
MOV__PROC: MOV DPTR,#LABEL3
```

You can use labels like any other symbol, as a memory address, or a numeric value in an assembly-time expression. A label, once defined, may not be redefined.

Symbol Definition

The symbol definition directives allow you to create symbols that can be used to represent segments, registers, numbers, and addresses. None of these directives may be preceded by a label.

Symbols defined by these directives may not have been previously defined and may not be redefined by any means. The SET directive is the only exception to this.

SEGMENT Directive

The format for the SEGMENT directive is shown below. Note that a label is not permitted.

```
relocatable_segment_name SEGMENT segment_type [relocation_type]
```

The SEGMENT directive allows you to declare a relocatable segment, assign a set of attributes, and initialize the location counter to zero (0).

Although the name of a relocatable segment must be unique in the module, you can define portions of the segment within other modules and let RL51 combine them. When you do this, the segment type attributes must all be the same and the relocation types must either be the same or be of two types, one of which is UNIT (see below). In the latter case, the more restrictive type will override.

The segment type specifies the address space where the segment will reside. The allowable segment types are:

- CODE—the code space
- XDATA—the external data space
- DATA—the internal data space accessible by direct addressing (0 to 127)
- IDATA—the entire internal data space accessible by indirect addressing (0 to 127)
- BIT—the bit space (overlapping locations 32 to 47 of the internal data space)

The relocation type, which is optional, defines the relocation possibilities to be assigned by the RL51. The allowable relocation types are:

- PAGE—specifies a segment whose start address must be on a 256-byte page boundary. Allowed only with CODE and XDATA segment types.
- INPAGE—specifies a segment which must be contained in a 256-byte page. Allowed only with CODE and XDATA segment types.
- INBLOCK—specifies a segment which must be contained in a 2048-byte block. Allowed only for CODE segments.
- BITADDRESSABLE—specifies a segment which will be relocated by RL51 within the bit space on a byte boundary. Allowed only for DATA segments; limited to a 16-byte maximum size.
- UNIT—specifies a segment which will be aligned on a unit boundary. This will be a byte boundary for CODE, XDATA, DATA, and IDATA segments and a bit boundary for BIT segments. This relocation type is the default value.

NOTE

When used in expressions, the segment symbol stands for the base address of the combined segment.

Any DATA or IDATA segments may be used as a stack (there is no explicit stack segment).

For example,

```

STACK SEGMENT IDATA
RSEG      STACK
DS        10H      ;Reserve 16 bytes for stack
.
.
.
MOV       SP,#STACK-1 ;Initialize stack pointer

```

EQU Directive

The format for the EQU directive is shown below. Note that a label is not permitted.

symbol_name EQU expression

or

symbol_name EQU special_assembler_symbol

The EQU directive assigns a numeric value or special assembler symbol to a specified symbol name. The symbol name must be a valid ASM51 symbol as described above.

If you assign an expression to the symbol, it must be an absolute or simple relocatable expression with no forward references. You can use the symbol as a data address, code address, bit address, or external data address depending on the segment type of the expression, i.e., the symbol will have the segment type of the expression. If the expression evaluates into NUMBER, the symbol will be considered as such and will be allowed to be used everywhere.

The special assembler symbols A, R0, R1, R2, R3, R4, R5, R6, and R7 can be represented by user symbols defined with the EQU directive. If you define a symbol to a register value, it will have a type "REG". It can only be used in the place of that register in instruction operands.

A symbol defined by the EQU directive cannot be defined anywhere else.

The following examples show several uses of EQU:

```
ACCUM    EQU    A      ; define ACCUM to stand for A
                  ; (the 8051 accumulator)
N27      EQU    27     ; set N27 to equal 27
HERE     EQU    $      ; set HERE to current location counter
                  ; value
DADDR1   EQU    DADDR0+1 ; Assuming DADDR0 is a DATA address
                  ; DADDR1 will also be a DATA address
```

SET Directive

The format for the SET directive is shown below.

symbol_name SET expression

or

symbol_name SET special_assembler_symbol

The SET directive operates similar to EQU. The difference is that the defined symbol can be redefined later, using another SET directive.

NOTE

You cannot set a symbol which was equated and you cannot equate a symbol which was set.

The following examples show several uses of SET:

```
COUNT    SET    0      ;Initialize absolute counter
COUNT    SET    COUNT+1 ;Increment absolute counter
HALF     SET    WHOLE/2 ;Give half of WHOLE to HALF
                  ;the remainder is discarded
H20      SET    32     ;Set H20 to 32
INDIRECT SET    R1     ;Set INDIRECT to R1
```

BIT Directive

The format for the BIT directive is shown below.

symbol_name BIT bit_address

The BIT directive assigns a bit address to the specified symbol name.

Bit address format is described in Chapter 2. The symbol gets the segment type BIT. A symbol defined as BIT may not be redefined elsewhere in the program.

The following examples show several uses of BIT:

CONTROL:	RSEG	DATA_SEG	;A relocatable bit addressable segment
	DS	1	
 }			
ALARM	BIT	CONTROL.0	;Bit in a relocatable byte
OPEN_DOOR	BIT	ALARM+1	;The next bit
RESET_BOARD	BIT	060H	;An absolute bit

DATA Directive

The format for the DATA directive is shown below.

symbol_name DATA expression

The DATA directive assigns an on-chip data address to the specified symbol name. The expression must be an absolute or simple relocatable expression. Absolute expressions greater than 127 must specify a defined hardware register (see Chapter 1). The segment type of the expression must be either DATA or NUMBER. The symbol gets the segment type DATA.

A symbol defined by the DATA directive may not be redefined elsewhere in the program.

The following examples show several uses of DATA:

CONIN	DATA	SBUF	;define CONIN to address ;the serial port buffer
TABLE__BASE	DATA	70H	;define TABLE__BASE to be ;at location 70H
TABLE__END	DATA	7FH	;define TABLE__END to be ;at top of RAM (7FH)
REL_TABLE	DATA	REL_START+1	; Define REL_TABLE to be a ;relocatable symbol (assuming ;REL_START is)

XDATA Directive

The format for the XDATA directive is shown below.

symbol_name XDATA expression

The XDATA directive assigns an off-chip data address to the specified symbol name. The expression must be an absolute or simple relocatable expression. If the expression does not evaluate to a number, its segment type must be XDATA. The symbol gets the segment type XDATA. A symbol defined by the XDATA directive may not be redefined elsewhere in the program.

The following examples show several uses of XDATA:

RSEG	XSEG1	
ORG	100H	
DATE:	DS 5	;Define DATE to 100H off XSEG1 base
TIME	XDATA DATE+5	;define TIME to be 5 bytes after DATE
PLACE	XDATA TIME+3	;define PLACE to be 3 bytes after TIME

IDATA Directive

The format for the IDATA directive is shown below.

symbol_name IDATA expression

The IDATA directive assigns an indirect internal data address to the specified symbol name. The expression must be an absolute or simple relocatable expression. Absolute expressions may not be larger than 127 for the 8051. The segment type of the expression must be either IDATA or NUMBER. The symbol gets the segment type IDATA. A symbol defined by the IDATA directive may not be redefined elsewhere in the program.

The following examples show several uses of IDATA:

```
BUFFER      IDATA    60H
BUFFER_LEN  EQU      20H
BUFFER_END  IDATA    BUFFER+BUFFER_LEN-1
```

CODE Directive

The format for the CODE directive is shown below.

symbol_name CODE expression

The CODE directive assigns a code address to the specified symbol name. The expression must be an absolute or simple relocatable expression. If the expression does not evaluate to a number, its segment type must be CODE. The symbol gets a segment type of CODE. A symbol defined by the CODE directive may not be redefined elsewhere in the program.

The following examples show several uses of the CODE directive:

```
RESTART    CODE    00H
INT_VEC0   CODE    03H
INT_VEC1   CODE    0BH
INT_VEC2   CODE    1BH
```

Storage Initialization and Reservation

The storage initialization and reservation directives are used to initialize and reserve space in either word, byte, or bit units. The space reserved starts at the point indicated by the current value of the location counter in the currently active segment. These directives may be preceded by a label.

DS Directive

The format of the DS directive is as follows:

[label:] DS expression

The DS directive reserves space in byte units. It can be used in any segment except a BIT type segment. The expression must be a valid assembly-time expression with no forward references and no relocatable or external references. When a DS statement is encountered in a program, the location counter of the current segment is incremented by the value of the expression. The sum of the location counter and the specified expression should not exceed the limitations of the current address space, or those set by the current relocation type.

DBIT Directive

The format of the DBIT directive is as follows:

[label:] DBIT expression

The DBIT directive reserves a space in bit units. It can be used only in a BIT type segment. The expression must be a valid assembly-time expression with no forward references. When the DBIT statement is encountered in a program, the location

counter of the current (BIT) segment is incremented by the value of the expression. Note that in a BIT segment, the basic unit of the location counter is in bits rather than bytes.

DB Directive

The format for a DB directive is shown below:

[label:] DB expression_list

The DB directive initializes code memory with byte values. Therefore, a CODE type segment must be active. The expression list is a series of one or more byte values or strings separated by commas(,). A byte value can be represented as an absolute or simple relocatable expression or as a character string. Each item in the list (expression or character string) is placed in memory in the same order as it appears in the list.

The DB directive permits character strings longer than 2 characters, but they must not be part of an expression (i.e., you cannot use long character strings with an operator, including parentheses). If you specify the null character string as an item in the list (not as part of an expression), it generates no data. If the directive has a label, the value of the label will be the address of the first byte in the list.

The following examples show several ways you can specify the byte value list in a DB directive:

```
AGE: DB 'MARY',0,27,'BILL',0,25,'JOE',0,21,'SUE',0,18  
; This DB statement lists the names (character strings)  
; and ages (numbers) that have been placed in a list (the label  
; AGE will address the "M" in "MARY")
```

```
PRIMES: DB 1,2,3,5,7,11,13,17,19,23,29,31,37,41,43,47,53  
; This DB lists the first 17 prime numbers.  
; (PRIMES is the address of 1)
```

```
QUOTE: DB 'THIS IS A QUOTE'" ; This is an example of how to put the  
; quote character in a character  
; string.
```

DW Directive

The format for a DW statement is shown below:

[label:] DW expression_list

The DW directive initializes code memory with a list of word (16-bit) values. Therefore, a CODE type segment must be active. The expression list can be a series of one or more word values separated by commas(,). Word values can be absolute or simple relocatable expressions. If you use the location counter (\$) in the list, it evaluates to the code address of the word being initialized. Unlike the DB directive, no more than two characters are permitted in a character string, and the null character string evaluates to 0.

Each item in the list is placed in memory in the same order as it appears in the list, with the high order byte first, followed by the low order byte (unlike the way it is handled by the ASM80/86). If the statement has a label, the value of the label will address the first value in the list (i.e., the high order byte of the first word).

The following examples show several ways you can specify the word value list in a DW directive:

```

ARRIVALS: DW 710,'AM',943,'AM',315,'PM',941'PM'
          ; This DW lists several flight arrivals.
          ; The numbers and characters are encoded
          ; consecutively.

INVENTORY: DW 'F',27869,'G',34524,'X',27834
           ; This list of characters and numeric
           ; values will be encoded with the high
           ; order byte of each character string
           ; filled with zeros. INVENTORY will
           ; address a zero byte.

JUMP_TABLE DW GO_PROC,BREAK_PROC,DISPLAY_PROC
           ; A jump table is constructed by listing
           ; the procedure addresses
DW $,$-2,$-4,$-6 ; This DW statement initializes four
                   ; words of memory with the same value.
                   ; (The location counter is incremented
                   ; by 2 for each item in the list.)

```

Program Linkage

Program linkage directives allow the separately assembled modules to communicate by permitting intermodule references and the naming of modules.

PUBLIC Directive

The format for the PUBLIC directive is shown below:

```
PUBLIC list_of_names
```

The PUBLIC directive allows symbols to be known outside the currently assembled module. If more than one name is declared public, the names must be separated by commas (,). Each symbol name may be declared public only once in a module. Any symbol declared PUBLIC must have been defined somewhere else in the program. Predefined symbols and symbols defined as registers or segments (declared via the SEGMENT directive) may not be specified as PUBLIC.

The following examples show several uses of the PUBLIC directive:

```

PUBLIC put_crlf, put_string, put_data_str
PUBLIC ascbin, binasc
PUBLIC liner

```

EXTRN Directive

The format for the EXTRN directive is shown below:

```
EXTRN [segment_type (list_of_symbol_names)], ...
```

The EXTRN directive lists symbols to be referenced in the current module that are defined in other modules. This directive may appear anywhere in the program.

The list of external symbols must have a segment type associated with each symbol on the list. (The segment types are CODE, XDATA, DATA, IDATA, BIT, and NUMBER, i.e., a typeless symbol.) The segment type indicates the way a symbol may be used (e.g., a CODE type external symbol may be used as a target to a jump instruction but not as the target of a move instruction). At link and locate time, the segment type of the corresponding public symbol must match the segment type of the EXTRN directive. This match is accomplished if either type is NUMBER or if both types are the same.

The following examples show several uses of the EXTRN directive:

```
EXTRN CODE (put_crlf, put_string, get_num), DATA (count,total)  
EXTRN CODE (binasc, ascbin), NUMBER (table_size)
```

NAME Directive

The format for the NAME directive is shown below:

```
NAME module_name
```

The NAME directive is used to identify the current program module. All the rules for naming apply to the module name. The NAME directive should be placed before all directives and machine instructions in the module. Only comments and control lines can precede the NAME directive.

If you choose not to use the name directive, the root (i.e., the file name without both the drive and the extension identifiers) of the source filename is used as the default.

NOTE

When filename roots start with a digit and the NAME directive is not specified, the module name cannot be used in the RLS1 module list (such a module name is illegal for RL51).

The symbol used in the NAME directive is considered undefined for the rest of the program unless it is specifically defined later.

The following examples show several uses of the NAME directive:

```
NAME track  
NAME compass  
NAME chapter_45
```

Assembler State Controls

END Directive

Every program must have an END statement. Its format is shown below:

```
END
```

The END statement must not have a label, and only a comment may appear on the line with it. The END statement should be the last line in the program; otherwise, this will produce an error.

ORG Directive

The ORG directive is used to alter the assembler's location counter to set a new program origin for statements that follow the directive.

The format for the ORG directive is shown below. Note that a label is not permitted.

ORG expression

The expression should be an absolute or simple relocatable expression referencing the current segment and containing no forward references.

When the ORG directive is encountered in a program, the value of the expression is computed as the new value of the location counter specifying the address at which the next machine instruction or data item will be assembled in the current selected segment. If the current segment is absolute, the value will be an absolute address in the current segment; if the segment is relocatable, the value will be offset from the base address of the instance of the segment in the current module.

The ORG directive modifies the location counter; it does not generate a new segment. That is, when the location counter is incremented from the current value, the space between the previous and the current location counter becomes part of the current segment.

In an absolute segment, the location counter must not be decremented to an address below the beginning of that segment.

Examples:

```
ORG ($+10H)AND 0FFF0H ; set location counter to next
                        ; 16-byte boundary
ORG 50                ; set location counter to 50
```

Segment Selection Directives

The segment selection directives will divert the succeeding code or data into the selected segment until another segment is selected by a segment selection directive. The directives may select a previously defined relocatable segment, or optionally create and select absolute segments.

The format for relocatable segment selection directives is shown below. Note that a label is not permitted and that the name must be previously defined as a segment name.

RSEG segment name

The format for absolute segment select directives is shown below. Note that a label is not permitted here either.

{ CSEG
 XSEG
 DSEG
 ISEG
 BSEG } [AT *absolute_address*]

CSEG, DSEG, ISEG, BSEG, and XSEG select an absolute segment within the code, internal data, indirect internal data, bit, or external data address spaces, respectively. If you choose to specify an absolute address (by including "AT absolute

address''), the assembler terminates the last absolute segment, if any, of the specified segment type, and creates a new absolute segment starting at that address. If you do not specify an absolute address, the last absolute segment of the specified type is continued. If no absolute segment of this type was selected and the absolute address is omitted, a new segment is created starting at location 0. You cannot use any forward references and the start address must be an absolute expression.

Each segment has its own location counter; this location counter is always set to 0 in the initial state. The default segment is an absolute code segment; therefore, the initial state of the assembler is location 0 in the absolute code segment. When another segment is chosen for the first time, the location counter of the former segment retains the last active value. When that former segment is reselected, the location counter picks up at the last active value. You can use the ORG directive to change the location counter within the currently selected segment.

```

DATA_SEG1      SEGMENT   DATA      ; A relocatable data segment
CODE_SEG1      SEGMENT   CODE      ; A relocatable code segment
                BSEG      AT 70H    ; Absolute bit segment
DECIMAL_MODE: DBIT      1          ; Absolute bit
CHAR_MODE:     DBIT      1
                RSEG      DATA_SEG1 ; Select the relocatable data segment
TOTAL1:        DS        1
COUNT1:        DS        1
COUNT_W:       DS        2
                RSEG      CODE_SEG1 ; Select the relocatable code segment
BEGIN_CODE:

```

USING Directive

The format for the USING directive is shown below. Note that a label is not permitted.

USING expression

This directive notifies the assembler of the register bank that is used by the subsequent code. The expression is the number (between 0 and 3 inclusive) which refers to one of four register banks.

The USING directive allows you to use the predefined symbolic register addresses (AR0 through AR7) instead of their absolute addresses. In addition, the directive causes the assembler to reserve a space for the specified register bank.

Examples:

```

USING 3
PUSH AR2 ;Push register 2 of bank 3

```

```

USING 1
PUSH AR2 ;Push register 2 of bank 1

```

Note that if you equate a symbol (e.g., using EQU directive) to an AR_i symbol, the user-defined symbol will not change its value as a result of the subsequent USING directive.

Introduction

The Macro Processing Language (MPL) of ASM51 is a string replacement facility. It permits you to write repeatedly used sections of code once and then insert that code at several places in your program. If several programmers are working on the same project, a library of macros can be developed and shared by the entire team. Perhaps MPL's most valuable capability is conditional assembly—with all microprocessors, compact configuration dependent code is very important to good program design. Conditional assembly of sections of code can help to achieve the most compact code possible.

This chapter documents MPL in three parts. The first section describes how to define and use your own macros. The second section defines the syntax and describes the operation of the macro processor's built-in functions. The final section of the chapter is devoted to advanced concepts in MPL.

The first two sections give enough information to begin using the macro processor. However, sometimes a more exact understanding of MPL's operation is needed. The advanced concepts section should fill those needs.

Don't hesitate to experiment. MPL is one of the most powerful and easy to use tools available to programmers.

Macro Processor Overview

The macro processor views the source file in very different terms than the assembler. Figure 5-1 illustrates these two different views of the input file. To the assembler, the source file is a series of lines—control lines, instruction lines, and directive lines. To the macro processor, the source file is a long string of characters.

The figure below shows these two views of the source file.

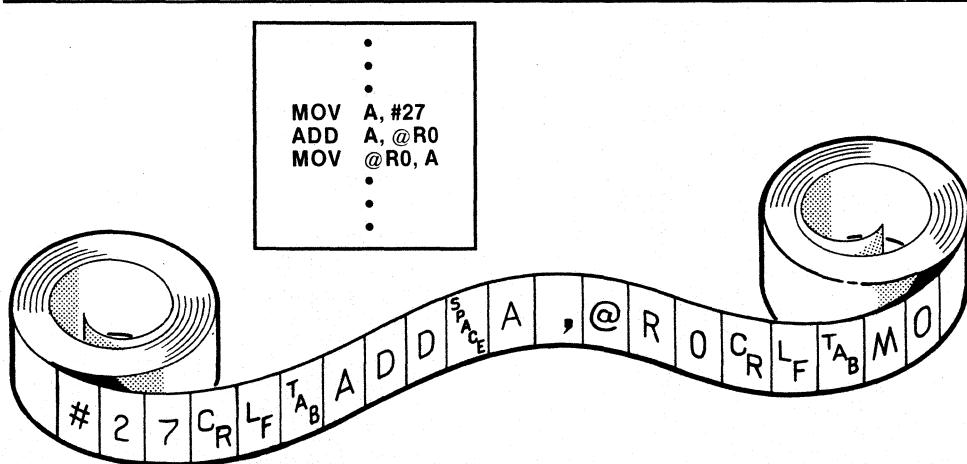


Figure 5-1. Macro Processor versus Assembler—
Two Different Views of a Source File

937-15

All macro processing of the source file is performed before your code is assembled. Because of this independent processing of macros and assembly of code, we must differentiate between macro-time and assembly-time. At macro-time, assembly language symbols—labels, SET and EQU symbols, and the location counter are not known. Similarly, at assembly-time, no information about macros is known.

The macro processor scans the source file looking for macro calls. A macro call is a request to the processor to replace the call pattern of a built-in or user-defined macro with its return value.

When a macro call is encountered, the macro processor expands the call to its return value. The return value of a macro is then placed in a temporary workfile, and the macro processor continues. All characters that are not part of a macro call are copied into the temporary workfile.

The return value of a macro is the text that replaces the macro call. The return value of some macros is the null string. (The null string is a character string containing no characters.) In other words, when these macros are called, the call is removed from the input stream, and the assembler never sees any evidence of its presence. This is particularly useful for conditional assembly.

Introduction to Creating and Calling Macros

The macro processor is a character string replacement facility. It searches the source file for a macro call, and then replaces the call with the macro's return value. A % signals a macro call. % is the default metacharacter. The metacharacter must precede a macro call. Until the macro processor finds a metacharacter, it does not process text. It simply passes the text from the source file to a workfile, which is eventually assembled.

Since MPL only processes macro calls, it is necessary to call a macro in order to create other macros. The built-in function DEFINE creates macros. Built-in functions are a predefined part of the macro language, so they may be called without prior definition. The general syntax for DEFINE is:

%[*]DEFINE(*call-pattern*)[*local-symbol-list*](*macro-body*)

DEFINE is the most important MPL built-in function. This section of the chapter is devoted to describing this built-in function. Each of the symbols in the syntax above (*call-pattern*, *local-symbol-list*, and *macro-body*) are thoroughly described in the pages that follow. In some cases we have abbreviated this general syntax to emphasize certain concepts.

Creating Simple Macros

When you create a simple macro, there are two parts to a DEFINE call: the call pattern and the macro body. The call pattern defines the name used when the macro is called; the macro body defines the return value of the call.

The syntax of a simple macro definition is shown below:

%*DEFINE (*call-pattern*) (*macro-body*)

The '%' is the metacharacter that signals a macro call. The '*' is the literal character. The literal character is normally used when defining macros. The exact use of the literal character is discussed in the advanced concepts section of this chapter.

When you define a simple macro, the *call-pattern* is a macro identifier. It follows the metacharacter, when you call the macro in the source file. The rules for macro identifiers are the same as ASM51 symbol names.

- The identifier must begin with an alphabetic character (A,B,C,...,Z or a,b,c,...,z) or a special character (a question mark ? or an underscore character(_)).
- The remaining characters may be alphabetic, special, or decimal digits (0,1,2,...,9).
- Only the first 31 characters of a macro identifier are recognized as the unique identifier name. Upper and lower case characters are not distinguished in a macro identifier.

The *macro-body* is usually the return value of the macro call. However, the *macro-body* may contain calls to other macros. If so, the return value is actually the fully expanded macro body, including the calls to other macros. When you define a macro using the syntax shown above, macro calls contained in the body of the macro are not expanded, until you call the macro.

The syntax of DEFINE requires that left and right parentheses surround the *macro-body*. For this reason, you must have balanced parenthesis within the macro body (i.e., each left parenthesis must have a succeeding right parenthesis, and each right parenthesis must have a preceding left parenthesis). We call character strings that meet these requirements *balanced-text*.

To call a macro, you use the metacharacter followed by the *call-pattern* for the macro. (The literal character is not needed when you call a user-defined macro.) The macro processor will remove the call and insert the return value of the call. If the macro body contains any call to other macros, they will be replaced with their return value.

Once a macro has been created, it may be redefined by a second call to DEFINE.

The three examples below show several macro definitions. Their return values are also shown.

Example 1:

Macro definition at the top of program:

```
%*DEFINE(MOVE)
    MOV A,@R1
    MOV @R0,A
    INC R1
    INC R0
)
```

Macro call as it appears in program (* literal character is not needed when you call the user-defined macro):

```
POP ACC
MOV R1,A
POP ACC
MOV R0,A
%MOVE
```

The program after the macro processor makes the expansion:

```

POP ACC
MOV R1,A
POP ACC
MOV R0,A
MOV A,@R1
MOV @R0,A
INC R1
INC R0
}
    } this is the return value

```

Example 2:

Macro definition at the top of the program:

```
%*DEFINE (MULT) (
    MUL AB
    JNB OV,($+6)
    LCALL OVFL_ERR
)
```

The macro call as it appears in original program body:

```

MOV B,@R1
MOV A,@R0
%MULT
MOV @R0,A

```

The program after macro expansion:

```

MOV B,@R1
MOV A,@R0
MUL AB
JNB OV,($+6)
LCALL OVFL_ERR
}
    } this is the return value
MOV @R0,A

```

Example 3:

Here is a macro that calls MULT to multiply 5 bytes:

```
%*DEFINE(MULT_5)(
    MOV R7,#5
    MOV R0,#ADDR1
    MOV R1,#ADDR2
    TOP:   MOV B,@R1
            MOV A,@R0
            %MULT
            MOV @R0,A
            INC R0
            INC R1
            DJNZ R7, TOP
)
```

This macro when called inserts the following code:

```

MOV R7,#5
MOV R0,#ADDR1
MOV R1,#ADDR2
TOP: MOV B,@R1
    MOV A,@R0
        MUL AB
        JNB OV,($+6)
        LCALL OVFL_ERR
    }   this is the return
        value of MULT
MOV @R0,A
INC R0
INC R1
DJNZ R7, TOP
}   this is the return
    value of MULT_5

```

Macros with Parameters

If the only thing the macro processor could do was simple string replacement, then it would not be very useful for most programming tasks. Each time we wanted to change even the simplest part of the macro's return value, we would have to redefine the macro. Parameters in macro calls allow more general purpose macros.

Parameters leave blanks or holes in a macro body that you will fill in when you call the macro. This permits you to design a single macro that produces code for many typical programming operations.

The term parameter refers to both the formal parameters that are specified when the macro is defined (the blanks), and the actual parameters or arguments that are specified when the macro is called (the fill-ins).

The syntax for defining macros with parameters is very similar to the syntax for simple macros. The *call-pattern* that we described earlier actually includes both the *macro-name* and an optional *parameter-list*. With this addition, the syntax for defining simple macros becomes:

```
%*DEFINE(macro-name[parameter-list]) (macro-body)
```

The '%*DEFINE' is required for the same reasons described earlier.

The *macro-name* must be a valid macro identifier.

The *parameter-list* is a list of macro identifiers separated by macro delimiters. This comprises the formal parameters used in the macro. The macro identifier for each parameter in the list must be unique.

Typically, the macro delimiters are parentheses and commas. When using these delimiters, you would enclose the parameter list in parentheses and separate each formal parameter with a comma. When you define a macro using parentheses and commas as delimiters, you must use those same delimiters, when you call that macro. The Advanced Concepts section completely describes the use of macro delimiters. For now we will use parentheses and commas when defining macros.

The *macro-body* must be a *balanced-text* string. To indicate the locations of parameter replacement (the holes to be filled in by the actual parameters), place the parameter's name preceded by the metacharacter in the macro body. The parameters may be used any number of times and in any order within the macro body. If a user-defined macro has the same macro identifier name as one of the parameters to the macro, the macro may not be called within the macro body, because the parameter takes precedence.

The example below shows the definition of a macro with three dummy parameters—**SOURCE**, **DESTINATION**, and **COUNT**. The macro will produce code to copy any number of bytes from one part of memory to another.

```
%*DEFINE(MOVE__BYTES(SOURCE,DESTINATION,COUNT))(
    MOV R7,#%COUNT
    MOV R1,#%SOURCE
    MOV R0,#%DESTINATION
    MOV A,@R1
    MOV @R0,A
    INC R1
    INC R0
    DJNZ R7,($-4)
)
```

To call the above macro, you must use the metacharacter followed by the macro's name similar to simple macros without parameters. However, a list of the actual parameters must follow. The actual parameters must be surrounded by parentheses, and separated from each other by commas, as specified in the macro definition. The actual parameters must be *balanced-text* and may optionally contain calls to other macros. A simple call to the macro defined above might be:

```
%MOVE__BYTES(8,16,8)
```

The above macro call produces the following code:

```
MOV R7,#8
MOV R1,#8
MOV R0,#16
MOV A,@R1
MOV @R0,A
INC R1
INC R0
DJNZ R7,($-4)
```

The code above will copy the contents of register bank 2 to register bank 3. (We hope the user knows which bank is active when he executes this code.)

LOCAL Symbols List

The DJNZ instruction above uses offset addressing (\$-4). If we chose to use a label for the jump destination, the macro could only be used once, since a second macro call would cause a conflict in label definitions. We could make the label a parameter and specify a different ASM51 symbol name each time we call the macro. The best way is to put the label in a LOCAL list. The LOCAL list construct allows you to use macro identifiers to specify assembly-time symbols. Each use of a LOCAL symbol in a macro guarantees that the symbol will be replaced by a unique assembly-time symbol.

The macro processor increments a counter each time your program calls a macro that uses the LOCAL construct. The counter is incremented once for each symbol in the LOCAL list. Symbols in the LOCAL list, when used in the macro body, receive a two to five digit suffix that is the hexadecimal value of the counter. The first time you call a macro that uses the LOCAL construct, the suffix is '00'.

The syntax for the LOCAL construct in the DEFINE functions is shown below (This is the complete syntax for the built-in function DEFINE):

```
%*DEFINE(macro-name[parameter-list]) [LOCAL local-list] (macro-body)
```

The *local-list* is a list of valid macro identifiers separated by spaces. The LOCAL construct in a macro has no affect on the syntax of a macro call.

The example below shows the MOVE__BYTES macro definition that uses a LOCAL list:

```
%*DEFINE(MOVE__BYTES(SOURCE,DESTINATION,COUNT)) LOCAL LABEL
(MOV R7,#%COUNT
 MOV R1,#%SOURCE
 MOV R0,#%DESTINATION
%LABEL: MOV A,@R1
        MOV @R0,A
        INC R1
        INC R0
        DJNZ R7,%LABEL
    )
```

The following macro call:

```
%MOVE__BYTES(67,100,20)
```

might produce this code (if this is the eleventh call to a macro using a LOCAL list):

```
MOV R7,#27
MOV R1,#67
MOV R0,#100
LABEL0A: MOV A,@R1
        MOV @R0,A
        INC R1
        INC R0
        DJNZ R7,LABEL0A
```

NOTE

Since macro identifiers follow the same rules as ASM51, you can use any macro identifier in a LOCAL list. However, if you use long identifier names (31 characters or more), the appended call number will be lost when the assembler truncates the excess characters.

The Macro Processor's Built-in Functions

The macro processor has several built-in or predefined macro functions. These built-in functions perform many useful operations that would be difficult or impossible to produce in a user-defined macro. An important difference between a user-defined macro and a built-in function is that user-defined macros may be redefined, while built-in functions can not be redefined.

We have already seen one of these built-in functions, DEFINE. DEFINE creates user-defined macros. DEFINE does this by adding an entry in the macro processor's table of macro definitions. Each entry in the table includes the *call-pattern* for a macro, and its macro body. Entries for the built-in functions are present when the macro processor begins operation.

Other built-in functions perform numerical and logical expression evaluation, affect control flow of the macro processor, manipulate character strings, and perform console I/O.

Comment, Escape, Bracket and METACHAR Built-in Functions

Comment Function

The Macro Processing Language can be very subtle, and the operation of macros written in a straightforward manner may not be immediately obvious. Therefore, it is often necessary to comment your macro definitions. Besides, it's just good programming practice.

The macro processor's comment function has the following syntax:

`%'text'`

or

`%'text end-of-line'`

The comment function always evaluates to the null string. Two terminating characters are recognized, the apostrophe and the *end-of-line* (line feed character, ASCII 0AH). The second form of the call allows you to spread macro definitions over several lines, while avoiding any unwanted *end-of-lines* in the return value. In either form of the comment function, the *text* or comment is not evaluated for macro calls.

The example below shows a commented macro definition:

```
%*DEFINE(MOVE__BYTES(SOURCE,DESTINATION,COUNT)) LOCAL LABEL
(
    MOV R7,#%COUNT %' iteration argument %COUNT '
    MOV R1,#%SOURCE %' source address argument %SOURCE
    MOV R0,#%DESTINATION %' destination address argument'
%LABEL%' %LABEL is a local symbol that will be appended with a unique number
:   MOV A,@R1
    MOV @R0,A
    INC R1
    INC R0
    DJNZ R7,%LABEL %'This is the same local symbol and
    %' receives the same unique ID
)
```

Call to above macro:

`%MOVE__BYTES(27H,37H,5)`

Return value from above call:

```
MOV R7,#5
MOV R1,#27H      MOV R0,#37H
LABEL07: MOV A,@R1
          MOV @R0,A
          INC R1
          INC R0
          DJNZ R7,LABEL07
```

Notice that the comments that were terminated with *end-of-line* removed the *end-of-line* character along with the rest of the comment. Because of this, the second line has two instructions on it. That line will produce an error when assembled. However, when the comment was removed from the line containing the label %LABEL, the colon was raised to the same line making it a legal instruction.

Note that the metacharacter is *not* recognized as a call to the macro processor when it appears in the comment function.

Escape Function

Occasionally, it is necessary to prevent the macro processor from processing text. There are two built-in functions that perform this operation: the escape function and the bracket function.

The escape function interrupts the processor from its normal scanning of text. The syntax for this function is shown below:

%n text-n-characters-long

The metacharacter followed by a single decimal digit designates that the specified number of characters (maximum is 9) shall not be evaluated. The escape function is useful for inserting a metacharacter as text, adding a comma as part of an argument, or placing a single parenthesis in a character string that requires balanced parentheses.

Several examples of the escape function are shown below:

Before Macro Expansion	After Macro Expansion
; COMPUTE 10%1% OF SUM	→ ; COMPUTE 10% OF SUM
%MACCALL(JANUARY 23%1, 1980, MARCH 15%1, 1980, APRIL 9%1, 1980)	→ JANUARY 23, 1980 → MARCH 15, 1980 → APRIL 9, 1980 actual parameters
%MACCALL(1%1) ADD INPUTS, 2%1) DIVIDE BY INPUT COUNT, 3%1) GET INPUTS)	→ 1) ADD INPUTS → 2) DIVIDE BY INPUT COUNT → 3) GET INPUTS actual parameters

Bracket Function

The other built-in function that inhibits the macro processor from expanding text is the bracket function. The syntax of the bracket function is shown below:

*%(*balanced-text*)*

The bracket function inhibits all macro processor expansion of the text contained within the parentheses. However, the escape function, the comment function, and parameter substitution are still recognized. Since there is no restriction for the length of the text within the bracket function, it is usually easier to use than the escape function. However, since balanced text is required and the metacharacter is interpreted, often this is not sufficient, and the escape function must be used.

Consider the following example of the bracket function.

```
%*DEFINE(DW(LIST,LBL))(
%LBL: DW %LIST
)
```

The macro above will add DW statements to the source file. It uses two parameters: one for the statement label and one for the DW expression list. Without the bracket function we would not be able to use more than one expression in the list, since the first comma would be interpreted as the delimiter separating the macro parameters. Bracket function permits more than one expression in the LIST argument:

```
%DW(%(198H, 3DBH, 163BH),PHONE) → PHONE: DW 198H, 3DBH, 163BH
```

In the example above, the bracket function prevents the character string '198H, 3DBH, 163BH' from being evaluated as separate parameters.

METACHAR Function

The built-in function METACHAR allows you to redefine the *metacharacter* (%). Its syntax is shown below:

```
%METACHAR(balanced-text)
```

The balanced-text argument may be any number of characters long. However, only the first character in the string is taken to be the new metacharacter. Extreme caution should be taken when using METACHAR, since it can have catastrophic effects. Consider the example below:

```
%METACHAR( & )
```

In this example, METACHAR defines the *space* character to be the new metacharacter, since it is the first character in the *balanced-text* string!

Numbers and Expressions in MPL

Many of the built-in functions recognize and evaluate numerical expressions in their arguments. The macros use the same rules for representing numbers as ASM51:

- Numbers may be represented in base 2 (B suffix), base 8 (O or Q suffix), base 10 (D suffix or no suffix), and base 16 (H suffix).
- Internal representation of numbers is 16 bits (00H to 0FFFFH).
- All ASM51 operators are recognized, except the symbolic forms of the relational operators (i.e., <, >, =, <>, >=, <=). The operators recognized by the macro processor and their precedence is shown in the list below:
 1. ()
 2. HIGH, LOW
 3. *, /, MOD, SHL, SHR
 4. +, - *unary and binary forms*
 5. EQ, NE, LE, LT, GE, GT
 6. NOT
 7. AND
 8. OR, XOR

Although assembly-time and macro-time expressions use the same operators, the macro processor cannot access the assembler's symbol table. The values of labels and SET and EQU symbols are not known during macro-time expression evaluation. Any attempt to use assembly-time symbols in a macro-time expression generates an error. However, you can define macro-time symbols with the pre-defined macro SET.

SET Macro

The SET predefined macro permits you to define macro-time symbols to values. SET takes two arguments: a valid MPL identifier, and a macro-time numeric expression.

SET has the following syntax:

```
%SET(macro-id,expression)
```

SET assigns the value of the numeric expression to the identifier, *macro-id*. *macro-id* must follow the same syntax conventions used for macro identifiers.

- The first character must be a letter of the alphabet or a question mark or an underscore.
- The remaining characters may be digits, letters, question marks, or underscores.
- Only the first 31 characters are recognized as the identifier name. Upper and lower case letters are not distinguished.

The SET macro call affects the macro-time symbol table only; when it is encountered in the source file, the macro processor replaces it with the null string. Symbols defined by SET can be redefined by a second SET call, or defined as a macro by a DEFINE call.

The following examples show several ways to use SET:

Before Macro Expansion

```
%SET(COUNT,0)
%SET(OFFSET,16)
MOV R1,#%COUNT + %OFFSET
MOV R4,#%COUNT
```

After Macro Expansion

```
→ null string
→ null string
→ MOV R1,#00H + 10H
→ MOV R4,#00H
```

The SET symbol may be used in the expression that defines its own value.

```
%SET(COUNT,%COUNT + %OFFSET)
%SET(OFFSET,%OFFSET * 2)
MOV R2,#%COUNT + %OFFSET
MOV R5,#%COUNT
```

```
→ null string
→ null string
→ MOV R2,#10H + 20H
→ MOV R5,#10H
```

In the example above, macro-time symbols are used rather than assembly-time symbols because their value is shown wherever they are used. With assembly-time symbols, you must look in the symbol table for its value.

SET is a predefined macro, not a built-in function; as such it may be redefined, but we don't advise it.

EVAL Function

The built-in function EVAL accepts an expression as its argument and returns the expression's value in hexadecimal. The syntax for EVAL is:

```
%EVAL(expression)
```

The *expression* argument must be a legal macro-time expression.

The *return-value* from EVAL follows ASM51's rules for representing hexadecimal numbers (it has an 'H' suffix and when the leading digit is 'A', 'B', 'C', 'D', 'E', or 'F', it is preceded by 0). EVAL always returns at least 3 characters even when the argument evaluates to a single digit. The following examples show the *return-value* from EVAL:

Before Macro Expansion	After Macro Expansion
MOV A,#%EVAL(1+1); move two to A.	→ MOV A,#02H; move two to A.
COUNT EQU %EVAL(33H + 15H + 0F00H)	→ COUNT EQU 0F48H
ADD A,#%EVAL(10H-((13 + 6) * 2) + 7)	→ ADD A,#0FF0BH
%SET(NUM1,44) %SET(NUM2,25H) ANL A,#%EVAL(%NUM1 LE %NUM2)	→ ANL A,#00H

Logical Expressions and String Comparisons in MPL

Several built-in functions return a logical value when they are called. Like relational operators that compare numbers and return true or false (0FFFFH or 00H), these built-in functions compare character strings. If the function evaluates to 'TRUE,' then it returns the character string '0FFFFH' (this represents a 16-bit value containing all ones). If the function evaluates to 'FALSE,' then it returns '00H' (this represents a 16-bit value containing all zeros).

The built-in functions that return a logical value compare two *balanced-text* string arguments and return a logical value based on that comparison. The list of string comparison functions below shows the syntax and describes the type of comparison made for each. Both arguments to these functions may contain macro calls (the calls are expanded before the comparison is made).

%EQS(arg1,arg2)	True if both arguments are identical
%NES(arg1,arg2)	True if arguments are different in any way
%LTS(arg1,arg2)	True if first argument has a lower value than second argument
%LES(arg1,arg2)	True if first argument has a lower value than second argument or if both arguments are identical
%GTS(arg1,arg2)	True if first argument has a higher value than second argument
%GES(arg1,arg2)	True if first argument has a higher value than second argument, or if both arguments are identical

Before these functions perform a comparison, both arguments are completely expanded. Then the ASCII value of the first character in the first string is compared to the ASCII value of the first character in the second string. If they differ, then the string with the higher ASCII value is greater. If the first characters are the same, then the process continues with the second character in each string, and so on. Two strings of equal length that contain the same characters in the same order are equal.

The examples below show several calls to these macros:

Before Macro Expansion	After Macro Expansion	
%EQS(ABC, ABC)	→ 00H <i>false</i>	the space after the comma is part of the second argument
%LTS(CBA,cba)	→ 0FFFFH <i>true</i>	the lower-case characters have a higher ASCII value than uppercase
%GTS(11H,16D)	→ 00H <i>false</i>	these macros compare strings not numerical values ASCII '6' is greater ASCII '1'
%GES(ABCDEFG,ABCDEFG)	→ 00H <i>false</i>	the space at the end of the second argument makes the second argument greater than the first

As with any other macro, the arguments to the string comparison macros can be other macros.

```
%*DEFINE(DOG) (CAT)
%*DEFINE(MOUSE) (%DOG)
%EQS(%DOG,%MOUSE)      → 0FFFFH
                           true
```

Control Flow Functions

Some built-in functions accept logical expressions in their arguments. Logical expressions follow the same rules as numeric expressions. The difference is in how the macro interprets the 16-bit value that the expression represents. Once the expression has been evaluated to a 16-bit value, MPL uses only the low-order bit to determine whether the expression is TRUE or FALSE. If the low-order bit is a one (the 16-bit numeric value is odd), the expression is TRUE. If the low-order bit is a zero (the 16-bit value is even), the expression is FALSE.

Typically, you will use either the relational operators (EQ, NE, LE, LT, GT, or GE) or the string comparison functions (EQS, NES, LES, LTS, GTS, or GES) to specify a logical value. Since these operators and functions always evaluate to 0xFFFFH (all ones) or 00H (all zeros), you needn't worry about the single bit test. But remember, all numeric expressions are valid, and regardless of the value of the other 15 bits, only the least significant bit counts.

IF Function

The IF built-in function evaluates a logical expression, and based on that expression, expands or withholds its text arguments. The syntax for the IF macro is shown below:

- %IF (*expression*) THEN (*balanced-text1*) [ELSE (*balanced-text2*)] FI

IF first evaluates the *expression*, if the low order bit is one, then *balanced-text1* is expanded; if the low order bit is zero and the optional ELSE clause is included in the call, then *balanced-text2* is expanded. If the low order bit is zero and the ELSE clause is not included, the IF call returns the null string. FI must be included to terminate the call.

IF calls can be nested; when they are, the ELSE clause refers to the most recent IF call that is still open (not terminated by FI). FI terminates the most recent IF call that is still open.

Several examples of IF calls are shown below:

This is the simple form of the IF call with an ELSE clause.

```
%IF (%EQS(ADD,%OPERATION)) THEN (ADD A,R1) ELSE (SUBB A,R1) FI
```

This is an example of several nested IF calls.

```
open first IF      %IF (%EQS(ADD,%OPERATION)) THEN (ADD A,R1
open second IF    )ELSE (%IF (%EQS(SUBTRACT,%OPERATION)) THEN (SUBB A,R1
                    )ELSE (MOV B,R1
open third IF      %IF (%EQS(MULTIPLY,%OPERATION)) THEN (MUL AB
                    )ELSE (DIV AB
close third IF    ) FI
close second IF   ) FI
close first IF    ) FI
```

WHILE Function

The IF macro is useful for implementing one kind of conditional assembly—including or excluding lines of code in the source file. However, in many cases this is not enough. Often you may wish to perform macro operations until a certain condition is met. The built-in function WHILE provides this facility.

The syntax of the WHILE macro is shown below:

```
%WHILE (expression) (balanced-text)
```

WHILE first evaluates the expression. If the least significant bit is one, then the *balanced-text* is expanded; otherwise, it is not. Once the *balanced-text* has been expanded, the logical argument is retested and if the least significant bit is still one, then the *balanced-text* is again expanded. This continues until the logical argument proves false (the least significant bit is 0).

Since the macro continues processing until *expression* is false, the *balanced-text* should modify the *expression*, or else WHILE may never terminate.

A call to the built-in function EXIT will always terminate a WHILE macro. EXIT is described below.

The following examples show two common uses of the WHILE macro:

```
%SET(COUNTER,5)
%WHILE(%COUNTER GT 0)
(RRA
 %SET(COUNTER, %COUNTER - 1)
)

%WHILE(%LOC_COUNTER LT 0FFFFH) ( NOP
                                %SET(LOC_COUNTER, %LOC_COUNTER+1))
```

These examples use the SET macro and a macro-time symbol to count the iterations of the WHILE macro.

REPEAT Function

MPL offers another built-in function that will perform the counting automatically. The built-in function REPEAT expands its *balanced-text* a specified number of times. The general form of the call to REPEAT is shown below:

```
%REPEAT (expression) (balanced-text)
```

Unlike the IF and WHILE macros, REPEAT uses the *expression* for a numerical value that specifies the number of times the *balanced-text* will be expanded. The expression is evaluated once when the macro is first called, then the specified number of iterations is performed.

The examples below will perform the same text insertion as the WHILE examples above.

```
%REPEAT (5) (RR A  
)  
  
%REPEAT (0FFFFH - %LOC_COUNTER) (NOP  
)
```

EXIT Function

The EXIT built-in function terminates expansion of the most recently called REPEAT, WHILE or user-defined macro. It is most commonly used to avoid infinite loops (e.g., a WHILE *expression* that never becomes false, or a recursive user-defined macro that never terminates). It allows several exit points in the same macro.

The syntax for EXIT is:

```
%EXIT
```

Several examples of how you might use the EXIT macro follow:

This use of EXIT terminates a recursive macro when an odd number of bytes are being added.

```
%*DEFINE (MEM_ADD_MEM (SOURCE,DESTIN,BYTES))  
(  
    MOV A,%SOURCE  
    ADDC A,%DESTIN  
    MOV %DESTIN,A  
    IF (%BYTES EQ 1) THEN (%EXIT) FI  
    MOV A,%SOURCE + 1  
    ADDC A, %DESTIN + 1  
    MOV %DESTIN + 1, A  
    IF (%BYTES GT 2) THEN (  
        %MEM_ADD_MEM(%SOURCE + 2,%DESTIN + 2,%BYTES -2)) FI  
)
```

This EXIT is a simple jump out of a recursive loop.

```
%*DEFINE(UNTIL ( CONDITION,BODY))  
( %BODY  
    %IF (%CONDITION) THEN (%EXIT)  
    ELSE ( %UNTIL(%CONDITION,%BODY)) FI  
)
```

String Manipulation Built-in Functions

The purpose of the Macro Processor is to manipulate character strings. Therefore, there are several built-in functions that perform common character string manipulation functions.

LEN Function

The built-in function LEN takes a character string argument and returns the length of the character string in hexadecimal (the same format as EVAL). The character string argument to LEN is limited to 256 characters.

The syntax of the LEN macro call is shown below:

`%LEN(balanced-text)`

Several examples of calls to LEN and the hexadecimal numbers returned are shown below:

Before Macro Expansion	After Macro Expansion
<code>%LEN(ABCDEFGHIJKLMNPQRSTUVWXYZ)</code>	→ 1AH
<code>%LEN(A,B,C)</code>	→ 05H commas are counted
<code>%LEN()</code>	→ 00H
<code>%*DEFINE(CHEESE)(MOUSE)</code> <code>%*DEFINE(DOG)(CAT)</code> <code>%LEN(%DOG %CHEESE)</code>	→ 09H <small>^ the space after G is counted as part of the length</small>

SUBSTR Function

The built-in function SUBSTR returns a substring of its text argument. The macro takes three arguments: a character string to be divided and two numeric arguments. The syntax of the macro call to SUBSTR is shown below:

`%SUBSTR(balanced-text,expression1,expression2)`

balanced-text is described above. It may contain macro calls.

expression1 specifies the starting character of the substring.

expression2 specifies the number of characters to be included in the substring.

If *expression1* is zero or greater than the length of the argument string, then SUBSTR returns the null string.

If *expression2* is zero, then SUBSTR returns the null string. If *expression2* is greater than the remaining length of the string, then all characters from the start character to the end of the string are included.

The examples below show several calls to SUBSTR and the value returned:

Before Macro Expansion	After Macro Expansion
%SUBSTR(ABCDEFG,8,1)	→ null
%SUBSTR(ABCDEFG,3,0)	→ null
%SUBSTR(ABCDEFG,5,1)	→ E
%SUBSTR(ABCDEFG,5,100)	→ EFG
%SUBSTR(123(56)890,4,4)	→ (56)

MATCH Function

The built-in function MATCH searches a character string for a delimiter character, and assigns the substrings on either side of the *delimiter* to the identifiers. The syntax of the MATCH call is shown below:

%MATCH(*identifier1* *delimiter* *identifier2*) (*balanced-text*)

identifier1 and *identifier2* are valid MPL identifiers.

delimiter is the first character to follow *identifier1*. Typically, a space or comma is used, but any character that is not a macro identifier character may be used. You can find a more complete description of delimiters in the Advanced Concepts section at the end of the chapter.

balanced-text is as described earlier in the chapter. It may contain macro calls.

MATCH searches the *balanced-text* string for the specified *delimiter*. When the *delimiter* character is found, then all characters to the left of it are assigned to *identifier1* and all characters to the right are assigned to *identifier2*. If the *delimiter* is not found, the entire *balanced-text* string is assigned to *identifier1* and the null string is assigned to *identifier2*.

The following example shows a typical use of the MATCH macro.

```
%MATCH(NEXT,LIST) (10H, 20H, 30H)
%WHILE(%LEN(%NEXT) NE 0) (
    MOV A,%NEXT
    ADD A,#22H
    MOV %NEXT,A
    %MATCH(NEXT,LIST)(%LIST)
)
```

Produces the following code:

first iteration of WHILE	MOV A,10H ADD A,#22H MOV 10H,A
second iteration of WHILE	MOV A, 20H ADD A,#22H MOV 20H,A
third iteration of WHILE	MOV A, 30H ADD A,#22H MOV 30H,A

Console I/O Built-in Functions

There are two built-in functions that perform console I/O when expanded: IN and OUT. Their names describe the function each performs. IN outputs a greater than character '>' as a prompt to the console, and returns the next line typed at the console. OUT outputs a string to the console; a call to OUT is replaced by the null string. The syntax of both macros is shown below:

```
%IN  
%OUT(balanced-text)
```

Several examples of how these macros can be used are shown below:

```
%OUT(ENTER NUMBER OF PROCESSORS IN SYSTEM?)  
%SET(PROC_COUNT,%IN)  
%OUT(ENTER THIS PROCESSOR'S ADDRESS?)  
ADDRESS EQU %IN  
%OUT(ENTER BAUD RATE?)  
%SET(BAUD,%IN)
```

The following lines would be displayed at the console:

```
ENTER NUMBER OF PROCESSORS IN SYSTEM?>user response  
ENTER THIS PROCESSOR'S ADDRESS?>user response  
ENTER BAUD RATE?>user response
```

Advanced MPL Concepts

For most programming problems, the Macro Processing Language syntax described above is sufficient. However, in some cases a more complete description of the macro processor's function is necessary.

However, it is impossible to describe all of the subtleties of the macro processor in a single chapter. With the rules described in this section, you should be able to discern, with a few simple tests, the answer to any specific question about MPL.

Macro Delimiters

When we discussed the syntax for defining macros, we showed one type of delimiter. The *parameter-list* was surrounded by parentheses, and parameters were separated by commas. Because we used these delimiters to define a macro, a call to the macro required that these same delimiters be used. When we discussed the MATCH function, we mentioned that a space could be used as a delimiter. In fact the macro processor permits almost any character or group of characters to be used as a delimiter.

Regardless of the type of delimiter used to define a macro, once it has been defined, only the delimiters used in the definition can be used in the macro call. Macros defined with parentheses and commas require parentheses and commas in the macro call. Macros defined with spaces (or any other delimiter), require that delimiter when called.

Macro delimiters can be divided into three classes: implied blank delimiters, identifier (or id) delimiters, and literal delimiters.

Implied Blank Delimiters

Implied blank delimiters are the easiest to use and contribute the most readability and flexibility to macro calls and definitions. An implied blank delimiter is one or more spaces, tabs or new lines (a carriage-return/linefeed pair) in any order. To define a macro that uses the implied blank delimiter, simply place one or more spaces, tabs, or new lines surrounding the parameter list and separating the formal parameters.

When you call the macro defined with the implied blank delimiter, each delimiter will match a series of spaces, tabs, or new lines. Each parameter in the call begins with the first non-blank character, and ends when a blank character is found.

An example of a macro defined using implied blank delimiters is:

```
%*DEFINE(SENTENCE SUBJECT VERB OBJECT ) (THE %SUBJECT %VERB %OBJECT.)
```

All of the following calls are valid for the above definition:

Before Macro Expansion	After Macro Expansion
%SENTENCE TIME IS RIPE	→ THE TIME IS RIPE
%SENTENCE CATS	
EAT	
FISH	→ THE CATS EAT FISH
%SENTENCE	
PEOPLE	
LIKE	
	FREEDOM → THE PEOPLE LIKE FREEDOM

Identifier Delimiters

Identifier (Id) delimiters are legal macro identifiers designated as delimiters. To define a macro that uses an id delimiter in its call pattern, you must prefix the delimiter with the commercial at symbol (@). You must separate the id delimiter from the macro identifiers (formal parameters or macro name) by a blank character.

When calling a macro defined with id delimiters, an implied blank delimiter is required to precede the id delimiter, but none is required to follow the id delimiter.

An example of a macro defined with id delimiters is:

```
%*DEFINE(ADD P1 @TO P2 @AND P3) (
    MOV A,%P1
    ADD A,%P2
    MOV %P2,A
    MOV A,%P1
    ADD A,%P3
    MOV %P3,A
)
```

The following call (note that no blank character follows the id delimiters TO and AND):

```
%ADD ATOM TOMOLECULE ANDCRYSTAL
```

returns this code when expanded:

```
MOV A,ATOM
ADD A,MOLECULE
MOV MOLECULE,A
MOV A,ATOM
ADD A,CRYSTAL
MOV CRYSTAL,A
```

Literal Delimiters

The delimiters used when we documented user-defined macros (parentheses and commas) were literal delimiters. A literal delimiter can be any character except the metacharacter.

When you define a macro using a literal delimiter, you must use exactly that delimiter when you call the macro. If you do not include the specified delimiter character as it appears in the definition, it will generate a macro error.

When defining a macro, you must literalize the delimiter string, if the delimiter you wish to use meets any of the following conditions:

- uses more than one character,
- uses a macro identifier character (A-Z, 0-9, __, or ?),
- uses a commercial at (@),
- uses a space, tab, carriage-return, or linefeed,

You can use the escape function (%n) or the bracket function (%()) to literalize the delimiter string. Several examples of definitions and calls using a variety of literal delimiters are shown below:

This is the simple form shown earlier:

Before Macro Expansion

```
%*DEFINE(MAC(A,B)) (%A %B)
%MAC(4,5)
```

After Macro Expansion

```
→ null string
→ 4 5
```

In the following example brackets are used instead of parentheses. The commercial at symbol separates parameters:

```
%*DEFINE(MOV[A%(@)B]) (MOV %A,%B)
%MOV[P0@P1]
```

```
→ null string
```

```
→ MOV P0,P1
```

In the next two examples, delimiters that could be id delimiters have been defined as literal delimiter (the differences are noted):

```
%*DEFINE(ADD (A%(AND)B))(ADD %A,%B)
%ADD #27H
```

```
→ null string
```

```
→ ADD A ,#27H
```

Spaces around AND are considered as part of the argument string.

To illustrate the differences between id delimiters and literal delimiters, consider the following macro definition and call. (A similar macro definition is discussed with id delimiters):

```
%*DEFINE(ADD P1(TO)P2 %AND) P3 )(
    MOV A,%P1
    ADD A,%P2
    MOV %P2,A
    MOV A,%P1
    ADD A,%P3
    MOV %P3,A
)
```

The following call:

```
%ADD ATOM TOMOLECULE ANDCRYSTAL
```

returns this code when expanded (the TO in ATOM is recognized as the delimiter):

```
MOV A,A
ADD A,M TOMOLECULE
MOV M TOMOLECULE,A
MOV A,A
ADD A,CRYSTAL
MOV CRYSTAL,A
```

Literal vs. Normal Mode

In normal mode, the macro processor scans text looking for the metacharacter. When it finds one, it begins expanding the macro call. Parameters are substituted and macro calls are expanded. This is the usual operation of the macro processor, but sometimes it is necessary to modify this mode of operation. The most common use of the literal mode is to prevent macro expansion. The literal character in DEFINE prevents the expansion of macros in the *macro-body* until you call the macro.

When you place the literal character in a DEFINE call, the macro processor shifts to literal mode while expanding the call. The effect is similar to surrounding the entire call with the bracket function. Parameters to the literalized call are expanded, the escape, comment, and bracket functions are also expanded, but no further processing is performed. If there are any calls to other macros, they are not expanded.

If there are no parameters in the macro being defined, the DEFINE built-in function can be called without the literal character. If the macro uses parameters, the macro processor will attempt to evaluate the formal parameters in the *macro-body* as parameterless macro calls.

The following example illustrates the difference between defining a macro in literal mode and normal mode:

```
%SET(TOM,1)
%*DEFINE(AB) (%EVAL(%TOM))
%DEFINE(CD) (%EVAL(%TOM))
```

When AB and CD are defined, TOM is equal to 1. The macro body of AB has not been evaluated due to the literal character, but the macro body of CD has been completely evaluated, since the literal character is not used in the definition. Changing the value of TOM has no effect on CD, but it changes the return value of AB, as illustrated below:

Before Macro Expansion	After Macro Expansion
------------------------	-----------------------

%SET(TOM,2)	
%AB	→ 02H
%CD	→ 01H

The macros themselves can be called with the literal character. The return value then is the unexpanded body:

%*CD	→ 01H
%*AB	→ %EVAL(%TOM)

The literalized calls to AB and CD show that CD evaluates to 01H, while AB contains a macro call to EVAL with %TOM as its parameter.

Algorithm for Evaluating Macro Calls

The Algorithm the macro processor uses for evaluating the source file can be seen in 6 steps:

1. Scan source until metacharacter is found.
2. Isolate call pattern. See note below.
3. If macro has parameters, expand each parameter from left to right (initiate step one on actual parameter), before expanding next parameter.
4. Substitute actual parameters for formal parameters in macro body.
5. If literal character is not used, initiate step one on macro body.
6. Insert result into output stream.

NOTE

When isolating the call pattern, the macro processor is actually scanning input for the specified delimiter. All text found between delimiters is considered the actual parameter. For this reason Id delimiters need not be terminated by spaces in a call, and the 'TO' in 'ATOM' satisfied the literal delimiter, when the 'M TOMOLECULE' became the second parameter.

The terms 'input stream' and 'output stream' are used, because the return value of one macro may be a parameter to another. On the first iteration, the input stream is the source file. On the final iteration, the output stream is the temporary workfile that passes to the assembler.

The examples below illustrate the macro processor's evaluation algorithm:

```
%SET(TOM,3)
%*DEFINE(STEVE)(%SET(TOM,%TOM-1) %TOM)
%*DEFINE(ADAM(A,B))(
DB %A, %B, %A, %B, %A, %B
)
```

Here is a call ADAM in the normal mode with TOM as the first actual parameter and STEVE as the second actual parameter. The first parameter is completely expanded before the second parameter is expanded. After the call to ADAM has been completely expanded, TOM will have the value 02H.

Before Macro Expansion

```
%ADAM(%TOM,%STEVE)
```

After Macro Expansion

```
→ DB 03H, 02H, 03H, 02H, 03H, 02H
```

Now reverse the order of the two actual parameters. In this call to ADAM, STEVE is expanded first (and TOM is decremented) before the second parameter is evaluated. Both parameters have the same value.

```
%SET(TOM,3)  
%ADAM(%STEVE,%TOM)
```

```
→ DB 02H, 02H, 02H, 02H, 02H, 02H
```

Now we will literalize the call to STEVE when it appears in the first actual parameter. This prevents STEVE from being expanded until it is inserted in the macro body, then it is expanded for each replacement of the formal parameters. Tom is evaluated before the substitution in the macro body.

```
%SET(TOM,3)  
%ADAM(%*STEVE,%TOM)
```

```
→ DB 02H, 03H, 01H, 03H, 00H, 03H
```





CHAPTER 6 ASSEMBLER OPERATION AND CONTROLS

This chapter describes how to invoke the MCS-51 Macro Assembler from your Intelec System running under the ISIS operating system. The assembler controls are also fully described.

How to Invoke the MCS-51 Macro Assembler

The command to invoke the assembler is shown below:

```
[:Fn:]ASM51 [:Fn:]sourcefile[.extension] [controls]
```

You must specify the filename of the assembler ([:Fn:]ASM51) and the filename of your source code ([:Fn:]sourcefile[.extension]). The controls are optional.

ASM51 normally produces two output files. One contains a formatted listing of your source code. Unless you specify a particular filename with the PRINT control, it will have the same name as your source file, but with the extension 'LST'. The format for the listing file and how to change that format will be described in Chapter 7. The other file produced by the assembler is the object file. Unless you specify a particular filename with the OBJECT control, it will also have the same name as your source file, but its extension will be 'OBJ'.

For example note the assembler invocation below.

```
-ASM51 PROG.SRC
```

If there were no controls in PROG.SRC that changed the default output files, ASM51 would produce two files. The listing file will be :F0:PROG.LST, and the object file will be :F0:PROG.OBJ.

In addition to the output files, ASM51 uses intermediate files named ASM51x.TMP. They will be deleted before the assembler completes execution. Normally these files will be created on the same drive as your source program; however, you can specify the drives to be used with the WORKFILES control.

Any control (except INCLUDE) can be used in the invocation line.

You can continue the invocation line on one or more additional lines by typing an ampersand (&) before you type a carriage return. ASM51 prompts for the remainder of the invocation line by issuing a double asterisk followed by a blank (**). Since everything following an ampersand on a line is echoed, but ignored, you can comment the invocation line; these comments are echoed in the listing heading. (See Chapter 7 for an example.) Note the example below:

```
-ASM51 PROG.SRC      DATE(9-30-81) & Comment
** TITLE(COMPLETE PROJECT REV. 3.0) & Comment
** GEN
```

Errors detected in the invocation line are considered fatal and the assembler aborts without processing the source program.

Assembler Controls

Assemble controls may be entered in the invocation line as described above or on a control line in your source code. The general format for control lines is shown below:

\$ Control List [; Comment]

The dollar sign (\$) must be the first character on the line. The control list is zero or more controls separated by one or more spaces or tabs. The comment is optional.

ASM51 has two classes of controls: primary and general. The primary controls are set in the invocation line or the primary control lines and remain in effect throughout the assembly. For this reason, primary controls may only be used in the invocation line or in a control line at the beginning of the program. *Only other control lines (that do not contain the INCLUDE control) may precede a line containing a primary control.* The INCLUDE control terminates processing of primary controls.

If a Primary Control is specified in the invocation line and in the primary control lines, the first time counts. This enables the programmer to override primary controls via the invocation line.

The general controls are used to control the immediate action of the assembler. Typically their status is set and modified during an assembly. Control lines containing only general controls may be placed anywhere in your source code.

Table 6-1 lists all of the controls, their abbreviations, their default values, and a brief description of each.

Table 6-1. Assembler Controls

Name	Primary/ General	Default	Abbrev.	Meaning
DATE(<i>date</i>)	P	DATE()	DA	Places string in header (max 9 characters)
DEBUG	P	NODEBUG	DB	Outputs debug symbol information to object file
NODEBUG	P		NODB	Symbol information not placed in object file
EJECT	G	<i>Not Applicable</i>	EJ	Continue listing on next page
ERRORPRINT[<i>(FILE)</i>]	P	NOERRORPRINT	EP	Designates a file to receive error messages in addition to the listing file defaults to :co:
NOERRORPRINT	P		NOEP	Designates that error messages will be printed in listing file only
GEN	G	GENONLY	GE	Generates a full listing of the macro expansion process including macro calls in the listing file
GENONLY	G		GO	List only the fully expanded source as if all lines generated by a macro call were already in source file

Table 6-1. Assembler Controls (Cont'd.)

Name	Primary/ General	Default	Abbrev.	Meaning
NOGEN	G	GENONLY	NOGE	List only the original source text in listing file
INCLUDE(FILE)	G	Not Applicable	IC	Designates a file to be included as part of the program
LIST	G	LIST	LI	Print subsequent lines of source in listing file
NOLIST	G		NOLI	Do not print subsequent lines of source in listing file
MACRO[(mempercent)]	P	MACRO(50)	MR	Evaluate and expand all macro calls. Allocate percentage of free memory for macro processing
NOMACRO	P		NOMR	Do not evaluate macro calls
OBJECT[(FILE)]	P	OBJECT(source.OBJ)	OJ	Designate file to receive object code
NOBJECT	P		NOOJ	Designates that no object file will be created
PAGING	P	PAGING	PI	Designates that listing will be broken into pages and each will have a header
NOPAGING	P		NOPI	Designates that listing will contain no page breaks
PAGELENGTH(n)	P	PAGELENGTH(60)	PL	Sets maximum number of lines in each page of listing file (maximum = 65,535) (minimum = 10)
PAGEWIDTH(n)	P	PAGEWIDTH(120)	PW	Sets maximum number of characters in each line of listing file (maximum = 132; minimum = 80)
PRINT(FILE)]	P	PRINT(source.LST)	PR	Designates file to receive source listing
NOPRINT	P		NOPR	Designates that no listing file will be created
SAVE	G	Not Applicable	SA	Stores current control setting for LIST and GEN
RESTORE	G		RS	Restores control setting from SAVE stack
REGISTERBANK(rb, ...) rb = 0, 1, 2, 3	P	REGISTERBANK(0)	RB	Indicates one or more banks used in program module
NOREGISTERBANK	P		NORB	Indicates that no banks are used.
SYMBOLS	P	SYMBOLS	SB	Creates a formatted table of all symbols used in program
NOSYMBOLS	P		NOSB	No symbol table created
TITLE(string)	G	TITLE()	TT	Places a string in all subsequent page headers (maximum 60 characters)
WORKFILES(:Fn:,:Fm:)]	P	same drive as source file	WF	Designates alternate drives for temporary workfiles
XREF	P	NOXREF	XR	Creates a cross reference listing of all symbols used in program
NOXREF	P		NOXR	No cross reference list created

Control Definitions

Control Switch Name: DATE

Abbreviation: DA

Arguments: (string) (*Nine characters maximum*)

Control Class: Primary

Default: (*Spaces inserted*)

Definition: The assembler takes the character string specified as the argument and inserts it in the header. If you specify less than 9 characters, then it will be padded with blanks. If more than 9 characters are specified, then the character string will be truncated to the first nine characters. DATE is overridden by NOPRINT.

NOTE

Any parentheses in the DATE string must be balanced.

Example: \$TITLE(PROJECT S.W.B. REV. 27) DATE(8-18-81)

(*Header will look like this*)

MCS-51 MACRO ASSEMBLER PROJECT S.W.B. REV. 27 8-18-81 PAGE 1

Control Switch Name: DEBUG/NODEBUG

Abbreviation: DB/NODB

Arguments: None

Control Class: Primary

Default: NODEBUG

Definition: Indicates whether debug symbol information shall be output to object file. If DEBUG is in effect the debug information will be output. This control must be used if you wish to run the program with an ICE-51.

DEBUG is overridden by NOOBJECT.

Example: \$DEBUG

Control Switch Name: EJECT**Abbreviation:** EJ**Arguments:** None**Control Class:** General**Default:** (*New page started when PAGELENGTH reached*)**Definition:** Inserts formfeed into listing file, after the control line containing the EJECT, and generates a header at top of the next page. The control is ignored if NOPAGING, NOPRINT, or NOLIST is in effect.**Example:** \$EJECT**Control Switch Name:** ERRORPRINT/NOERRORPRINT**Abbreviation:** EP/NOEP**Arguments:** (Filename) (*Indicates file to receive error messages—argument optional.*)**Control Class:** Primary**Default:** NOERRORPRINT**Definition:** When ERRORPRINT is in effect, indicates that all erroneous lines of source and the corresponding error message shall be output to the specified file. This will not inhibit errors from being placed in listing file. If no argument is specified to ERRORPRINT, then erroneous lines and error messages will be displayed at the console.**Example:** \$ERRORPRINT

Control Switch Name: GEN/GENONLY/NOGEN

Abbreviation: GE/GO/NOGE

Arguments: None

Control Class: General

Default: GENONLY

Definition: NOGEN indicates that only the contents of the source file shall be output to the listing file with macro call expansion not shown. Expansion will take place, but source lines generated will not be displayed in listing file, only the macro call.

GENONLY indicates that only the fully expanded macro calls will appear in the listing. The listing file appears as if the expanded text was originally in the source file with no macro calls. The macro calls will not be displayed, but the source lines generated by the calls will be in the listing file.

GEN indicates that each macro call shall be expanded showing nesting of macro calls. The macro call and the source lines generated by the macro call will be displayed in the listing file.

These controls are overridden by NOPRINT and NOLIST. (See Chapter 7 for examples of a macro calls listed with GEN, GENONLY and NOGEN in effect.)

Example: \$NOGEN

Control Switch Name: INCLUDE

Abbreviation: IC

Arguments: (Filename) (*Identifies file to be included into program*)

Control Class: General

Default: Not applicable.

Definition: Inserts the contents of the file specified in the argument into the program immediately following the control line. INCLUDE files may be nested.

The INCLUDE control may not appear in the invocation line, and it terminates processing of primary controls in the source.

Example: \$INCLUDE(:F1:IOPACK.SRC)

Control Switch Name: LIST/NOLIST

Abbreviation: LI/NOLI

Arguments: None

Control Class: General

Default: LIST

Definition: Indicates whether subsequent lines of source text shall be displayed in listing file. A LIST control following a NOLIST will not be displayed, but listing will continue with the next sequential line. NOPRINT overrides LIST.

NOTE

Lines causing errors will be listed when NOLIST is in effect.

Example: \$NOLIST

Control Switch Name: MACRO/NOMACRO

Abbreviation: MR/NOMR

Arguments: (mempercent) (*Optional. Indicates the percentage of the free memory to be used for macro processing.*)

Control Class: Primary

Default: MACRO(50)

Definition: Indicates whether macro calls shall be expanded. If NOMACRO is specified all macro calls will not be processed as macros. The NOMACRO control will free additional symbol table space for user-defined symbols.

Example: \$NOMACRO
\$MACRO(30)

Control Switch Name: OBJECT/NOOBJECT

Abbreviation: OJ/NOOJ

Arguments: (Filename) (*Indicates file to receive object code—argument optional.*)

Control Class: Primary

Default: OBJECT(*sourcefile*.OBJ)

Definition: Indicates whether object code shall be generated, and if so, the file that will receive it. If you do not specify the argument, the object file will be *sourcefile*.OBJ.

Example: \$OBJECT(:F1:FINAL.REV)

Control Switch Name: PAGING/NOPAGING

Abbreviation: PI/NOPI

Arguments: None

Control Class: Primary

Default: PAGING

Definition: Indicates whether page breaks shall be included in listing file. If NOPAGING, then there will be no page breaks in the file, and lines will appear listed consecutively. A single header will be included at the top of the file. EJECT and PAGELENGTH controls will be ignored.

If PAGING, a formfeed and a page header will be inserted into the listing file whenever the number of lines since the last page break equals the PAGELENGTH value, or an EJECT control is encountered. The header includes the assembler designation, the name of the source file, the TITLE and DATE strings (if specified), and the page number.

Example: \$ NOPAGING

Control Switch Name: PAGELENGTH**Abbreviation:** PL**Arguments:** (n) (*Decimal number greater than 9.*)**Control Class:** Primary**Default:** PAGELENGTH(60)**Definition:** Indicates the maximum number of printed lines on each page of the listing file. This number includes the page heading. The minimum value for PAGELENGTH is 10. Values less than 10 will be treated as 10. The maximum value permitted in the argument is 65,535.**Example:** \$ PAGELENGTH(132)**Control Switch Name:** PAGEWIDTH**Abbreviation:** PW**Arguments:** (n) (*Number indicates maximum characters per line.*)**Control Class:** Primary**Default:** PAGEWIDTH(120)**Definition:** Indicates the maximum number of characters printed on a line in the listing file. The range of values permitted is from 80 to 132; values less than 80 are set to 80; values greater than 132 are set to 132.

Listing lines that exceed the PAGEWIDTH value will be wrapped around on the next lines in the listing, starting at column 80.

Example: \$ PAGEWIDTH(80)

Control Switch Name: PRINT/NOPRINT**Abbreviation:** PR/NOPR**Arguments:** (Filename) (*Indicates file to receive assembler listing—argument optional.*)**Control Class:** Primary**Default:** PRINT(*sourcefile.LST*)**Definition:** Indicates whether formatted source listing shall be generated, and, if so, what file will receive it. If you do not specify the argument, the listing file will be *sourcefile.LST*. NOPRINT indicates no listing file will be made.**Example:** —ASM51 PROG.SRC PRINT(:LP:) & print listing at line printer
****Control Switch Name:** SAVE/RESTORE**Abbreviation:** SA/RS**Arguments:** None**Control Class:** General**Default:** Not applicable**Definition:** Permits you to save and restore the state of the LIST and GEN controls. SAVE stores the setting of these controls on the SAVE stack, which is internal to the assembler. RESTORE restores the setting of the controls to the values most recently saved, but not yet restored. SAVEs can be nested to a depth of 8.**NOTE**

SAVE uses the values that were in effect on the line prior to the SAVE control line. Therefore, if the LIST control is in effect and the assembler encounters a control line containing NOLIST and SAVE (in any order on the line), the status LIST is saved on the stack. (The lines following the control line are not listed until a LIST or RESTORE is encountered.)

Example: \$save

Control Switch Name: REGISTERBANK / NOREGISTERBANK

Abbreviation: RB / NORB

Arguments: (rb, ...) (*One or more of the permissible bank numbers separated by commas.*)
rb = 0, 1, 2, or 3

Control Class: Primary

Default: REGISTERBANK(0)

Definition: Indicates the register banks used in the program module. This information is transferred to the RL51 and used for allocation of register bank memory. NORB specifies that no memory is initially reserved for register banks. Note that the USING directive also reserves register banks.

Example: REGISTERBANK(0,1)

Control Switch Name: SYMBOLS/NOSYMBOLS

Abbreviation: SB/NOSB

Argument: None

Control Class: Primary

Default: SYMBOLS

Definition: Indicates whether a symbol table shall be listed. NOSYMBOLS indicates no symbol table. SYMBOLS causes the table to be listed. NOSYMBOLS is overridden by XREF. SYMBOLS is overridden by NOPRINT. (See Chapter 7 for an example symbol table listing.)

Example: \$NOSYMBOLS

Control Switch Name: TITLE

Abbreviation: TT

Arguments: (string) (*Up to 60 characters.*)

Control Class: General

Default: (Spaces Inserted)

Definition: Permits you to include a title for the program. It will be printed in the header of every subsequent page. Titles longer than 60 characters will be truncated to the first 60 characters. (See Chapter 7 for an example of the title in the header.)

NOTE

Any parentheses in the TITLE string must be balanced.

Example: \$TITLE(Final Production Run)

Control Switch Name: WORKFILES

Abbreviation: WF

Arguments: (:Fm:[.;Fn:]) (*Drives to use for temporary work files—second argument optional.*)

Control Class: Primary

Default: Drive that contains source file.

Definition: Indicates drives to be used to contain temporary workfiles. If two drives are specified, the workfiles are split between them roughly equally. If only one drive is specified, then all workfiles will be placed on that drive. All workfiles are deleted before normal termination.

Example: -ASM51 :F1:BIGPR.SRC WORKFILES(:F4:,:F5:)

Control Switch Name: XREF/NOXREF

Abbreviation: XR/NOXR


Arguments: None

Control Class: Primary

Default: NOXREF

Definition: Indicates that a cross reference table of the use of symbols shall be added to the symbol table. Each cross reference table will list the line numbers of the lines that define the value of a symbol, and all of the lines that reference the symbol. A hash mark (#) follows the numbers of the lines that define the symbols value. XREF is overridden by NOPRINT. (See Chapter 7 for an example of a symbol table listing with XREF.)

Example: \$XREF





CHAPTER 7

ASSEMBLER OUTPUT: ERROR MESSAGES AND LISTING FILE FORMAT

This chapter discusses the meaning of error messages issued by ASM51. The format of the listing file is also described.

Error Messages and Recovery

All error messages issued by ASM51 are either displayed on the console or listed in the listing file. Fatal errors, such as invocation line errors, are listed at the console and cause ASM51 to abnormally terminate. Errors detected in the source file do not cause the assembler to abort and usually allow at least the listing to continue.

Console Error Messages

Upon detecting certain catastrophic conditions with the system hardware, or in the invocation line or one of the primary control lines, ASM51 will print an informative message at the console and abort processing.

These errors fall into three broad classes: I/O errors, internal errors and invocation line errors.

A list of these fatal control error messages and a description of the cause of each is shown below.

I/O Errors

I/O error messages print with the following format:

```
ASM51 I/O ERROR-
FILE: file type
NAME: file name
ERROR: ISIS error number and brief description
ASM51 TERMINATED
```

The list of possible file types is:

```
SOURCE
PRINT
OBJECT
INCLUDE
ERRORPRINT
ASM51 WORKFILE
ASM51 OVERLAY number
```

The list of possible error numbers is:

```
4—ILLEGAL PATH NAME
5—ILLEGAL OR UNRECOGNIZED DEVICE IN PATH
9—DIRECTORY FULL
12—ATTEMPT TO OPEN ALREADY OPEN FILE
13—NO SUCH FILE
14—WRITE PROTECTED FILE
22—OUTPUT MODE IMPOSSIBLE FOR SPECIFIED FILE
23—NO FILENAME SPECIFIED FOR A DISK FILE
28—NULL FILE EXTENSION
```

ASM51 Internal Errors

The ASM51 internal errors indicate that an internal consistency check failed. A likely cause is that one of the files containing the assembler's overlays was corrupted or that a hardware failure occurred. If the problem persists, contact Intel Corporation via the Software Problem report.

These messages print in the following format:

**** ASM51 INTERNAL ERROR: *message*

Be sure to include the exact text of the *message* on the problem report.

Invocation Line Errors

The invocation line error messages print in the following format:

ASM51 FATAL ERROR-
error message

The possible error messages are:

NO SOURCE FILE FOUND IN INVOCATION

If ASM51 scans the invocation line and cannot find the source file name, then this error will be issued and assembly aborted.

UNRECOGNIZABLE SOURCE FILE NAME

If the first character after "ASM51" on the invocation line is not an "&" or a file character (i.e., ":" , letter, digit, ".") , then ASM51 issues this error and aborts.

ILLEGAL SOURCE FILE SPECIFICATION

If the source file is not a legal file name (does not conform to the ISIS-II rules for a path name), then this error is issued.

SOURCE TEXT MUST COME FROM A FILE

The source text must always come from a file, not devices like :TI: or :LP:.

NOT ENOUGH MEMORY

If there is not enough memory in your SERIES-II or MDS 800, then this error message will print out and ASM51 will abort.

If identical files are specified:

__ AND __ FILES ARE THE SAME

where the "__" can be any of SOURCE, PRINT, OBJECT, and ERRORPRINT. It doesn't make sense for any of these files to be the same.

BAD WORKFILES COMMAND

If a WORKFILES control has no parameters (i.e., devices) or a device specification is incorrect, this error message is issued.

BAD WORKFILES SYNTAX

If ASM51 encounters anything other than a “,” or a “)” when it is looking for the next workfile, then this error is issued.

BAD PAGELENGTH
BAD PAGEWIDTH

The parameter to pagelength and pagewidth must be a decimal number. The number may have leading and trailing blanks, but if there are any other extra characters in the parameter, then this error will be issued.

PAGELENGTH MISSING A PARAMETER
PAGEWIDTH MISSING A PARAMETER
DATE MISSING A PARAMETER

These commands require parameters. If there is no parameter, then assembly is aborted.

CANNOT HAVE INCLUDE IN INVOCATION

The INCLUDE command may appear only in the source text. Don't forget that command lines in the source file can contain primary commands, but only if they are the very first lines in the file. Also, if one of these lines has an INCLUDE on it, then that ends the primary command lines.

EOL ENCOUNTERED IN PARAMETER

A parameter in the invocation line is missing a right parenthesis.

COMMAND TOO LONG

A command word longer than 128 characters—very unlikely.

ILLEGAL CHARACTER IN INVOCATION

There was an illegal character in the invocation line—usually a typing error. (See error 403.)

UNRECOGNIZED COMMAND: <control-name>

This message is issued if a problem occurs in the invocation.

NO PARAMETER ALLOWED WITH control

The control specified may not be associated with the parameter.

TITLE MISSING A PARAMETER

The TITLE control was specified without the title string itself as a parameter.

TOO MANY RESTORES

More RESTORE controls encountered than the respective SAVE controls.

NO PARAMETER GIVEN FOR “REGISTERBANKS”

The REGISTERBANKS control was specified without the register bank numbers as parameters.

ERROR IN PARAMETER LIST FOR “REGISTERBANKS”

The parameter list of the REGISTERBANKS control contains an error.

Listing File Error Messages

ASM51 features an advanced error-reporting mechanism. Some messages pinpoint the symbol or character at which the error was detected. Error messages printed in the source file are inserted into the listing after the lines on which the errors were detected.

They are of the following format:

*** ERROR #eee, LINE #// (ppp), message

where:

eee is the error number
// is the number of the line on which the error occurred
ppp is the line containing the last previous error
message is the English message corresponding to the error number

If the error is detected in pass 2, the clause "(PASS 2)" precedes the message. "(MACRO)" precedes the message for macro errors; "(CONTROL)" precedes the message for control errors.

Errors which refer to character or symbol in a particular line of the source file do so by printing a pointer to the first item in the line that is not valid; e.g.:

*** _____ ^

The up arrow or vertical bar points to the first incorrect character in the line.

Error messages that appear in the listing file are given numbers. The numbers correspond to classes of errors. The classes of errors and the numbers reserved for these classes is shown in the list below:

0 - 99	Source File Errors
300 - 399	Macro Errors
400 - 499	Control Errors
800 - 899	Special Assembler Errors
900 - 999	Fatal Errors

Errors numbered less than 800 are ordinary, non-fatal errors. Assembly of the error line can usually be regarded as suspect, but subsequent lines will be assembled. If an error occurs within a macro definition, the definition does not take place.

Source File Error Messages

There follows a list of the error messages generated by ASM51, ordered by error number.

*** ERROR #1 SYNTAX ERROR

This message is preceded by a pointer to the character at which the syntax error was detected.

ASM51 contains an internally-encoded grammar of the MCS-51 assembly language and requires your program to conform to that grammar. The syntax error is recognized at the item indicated in the error message; e.g.,

```
... TEMP SER 10
... _____^
```

gives a syntax error at the S. "SER" is unrecognized. However, sometimes the error is not detected until one or more characters later; e.g.,

```
... SETB EQU 1
... _____^
```

gives a syntax error at "EQU". The error is that SETB is already defined as an instruction. The assembler interprets the line as a SETB instruction with "EQU 1" as the operand field. Since the keyword "EQU" is not a legal operand the "EQU" is flagged, even though the "SETB" is the user's mistake.

ASM51 discards the rest of the line when it finds a syntax error.

*** ERROR #2 SOURCE LINE LISTING TERMINATED AT 255 CHARACTERS

Listing of the source line was stopped at 255 characters. The entire line was interpreted, only the listing is incomplete.

*** ERROR #3 ARITHMETIC OVERFLOW IN NUMERIC CONSTANT

This error is reported whenever the value expressed by a constant exceeds the internal representation of the assembler (65,535).

*** ERROR #4 ATTEMPT TO DIVIDE BY ZERO

This error occurs when the right hand side of a division or MOD operator evaluates to zero.

*** ERROR #5 EXPRESSION WITH FORWARD REFERENCE NOT ALLOWED

Forward references are permitted only in the expression argument to DB, DW, and machine instructions. Change the expression to remove the forward reference, or define the symbols earlier in the program.

*** ERROR #6 TYPE OF SET SYMBOL DOES NOT ALLOW REDEFINITION

This error occurs when the symbol being defined in a SET directive is a predefined assembler symbol or has been previously defined not using SET directive. For example, the following lines would cause this error on the second line.

```
SKIP__1: ADD A,R1
SKIP__1 SET 22D
```

*** ERROR #7 SYMBOL ALREADY DEFINED

This message is given when the symbol has already been defined. To correct this error, use a different symbol name.

*** ERROR #8 ATTEMPT TO ADDRESS NON-BIT-ADDRESSABLE BIT

This error is caused when the left hand side of the bit selector (.) is not one of the bit addressable bytes. (See errors 40 and 9.) Figure 2-2 shows all bit-addressable bytes. Several examples of lines that would cause this type of error are shown below.

```
JB 10H.5,LOOP  
CLR 7FH.0  
MOV C,0AFH.3
```

*** ERROR #9 BAD BIT OFFSET IN BIT ADDRESS EXPRESSION

This error is caused when the right hand side of the bit selector (.) is out of range (0-7). The assembler uses 0 in its place. The byte address, if correct, remains the same. (See errors 8, and 40.) Several examples of lines that would generate this error are shown below.

```
CLR 25H.10  
SETB 26H.5+4  
CPL PSW.-1
```

*** ERROR #10 TEXT FOUND BEYOND END STATEMENT - IGNORED

This is a warning—there are no ill effects. The extra text appears in the listing file, but it is not assembled.

*** ERROR #11 PREMATURE END OF FILE (NO END STATEMENT)

There are no ill effects from omitting the END statement, other than this message.

*** ERROR #12 ILLEGAL CHARACTER IN NUMERIC CONSTANT

Numeric constants begin with decimal digits, and are delimited by the first non-numeric character. The set of legal characters for a constant is determined by the base:

1. Base 2: 0,1, and the concluding B.
2. Base 8: 0-7, and the concluding Q or O.
3. Base 10: 0-9, and the concluding D or null.
4. Base 16: 0-9, A-F, and the concluding H.

*** ERROR #13 ILLEGAL USE OF REGISTER NAME IN EXPRESSION

This error is caused by placing a forward reference symbol, defined as a register, in a numeric expression. An example of this type of error is shown below:

```
DB REG0  
REG0 EQU R0
```

*** ERROR #14 SYMBOL IN LABEL FIELD ALREADY DEFINED

You can define a label only once in your program. If the symbol name has been defined anywhere else in the program this error will be generated.

*** ERROR #15 ILLEGAL CHARACTER

This message is preceded by a pointer to the illegal character.

A character that is not accepted by ASM51 was found in the input file. Either it is an unprintable ASCII character, in which case it is printed as an up arrow (^), or it is printable but has no function in the assembly language. Edit the file to remove the illegal character.

*** ERROR #16 MORE ERRORS DETECTED, NOT REPORTED

After the ninth source file Error on a given source line, this message is given and no more errors are reported for that line. Normal reporting resumes on the next source line. (See errors 300 and 400.)

*** ERROR #17 ARITHMETIC OVERFLOW IN LOCATION COUNTER

This error is reported whenever the DS, DBIT, or ORG directive attempts to increase the location counter beyond the limits of the current address space. This may occur, for example, in CSEG when instructions cause the location counter to increment above 65,535.

*** ERROR #18 UNDEFINED SYMBOL

This error is reported when an undefined symbol occurs in an expression. Zero is used in its place—this may cause subsequent errors.

*** ERROR #19 VALUE WILL NOT FIT INTO A BYTE

This error is issued whenever the expression used for a numeric operand that is encoded as a single byte is not in the range -256 to +255.

*** ERROR #20 OPERATION INVALID IN THIS SEGMENT

This error will occur if you use the DBIT directive not in a BIT type segment; or a DS directive in a BIT type segment, or if you attempt to initialize memory (use DB, DW, or a machine instruction) in a segment with different type than CODE.

*** ERROR #21 STRING TERMINATED BY END-OF-LINE

All strings must be completely contained on one line.

*** ERROR #22 STRING LONGER THAN 2 CHARACTERS NOT ALLOWED IN THIS CONTEXT

Outside of the DB directive all strings are treated as absolute numbers; hence, strings of 3 or more characters are overflow quantities. If this error occurs in a DW directive, you probably should be using DB.

*** ERROR #23 STRING, NUMBER, OR IDENTIFIER CANNOT EXCEED 255 CHARACTERS

The maximum length of a character string (including surrounding quotes), a number, or an identifier is 255 characters.

*** ERROR #24 DESTINATION ADDRESS OUT OF RANGE FOR INBLOCK REFERENCE

This error is caused by specifying an address that is outside the current 2K byte block. The current block is defined by the five most significant bits of the address of the next instruction.

***** ERROR #25 DESTINATION ADDRESS OUT OF RANGE FOR RELATIVE REFERENCE**

A relative jump has a byte range (-128 to +127) from the instruction that follows the jump instruction. Any address outside of this range will generate this error. You can correct this error in one of two ways: if the jump has a logical complement (e.g., JC and JNC), the following change could be made:

JC TOP	to	JNC SKIP JMP TOP
--------	----	---------------------

SKIP:

If the instruction has no logical complement, then the following change could be made

DJNZ R0, TOP	to	DJNZ R0, SKIP__1 JMP SKIP__2
--------------	----	---------------------------------

SKIP__1: JMP TOP
SKIP__2:

***** ERROR #26 SEGMENT SYMBOL EXPECTED**

The error occurs when the symbol specified by the RSEG directive is not a segment symbol, i.e., is not defined previously using the SEGMENT directive.

***** ERROR #27 ABSOLUTE EXPRESSION EXPECTED**

The error occurs when the operand to the following directives is not absolute: DS, DBIT, USING, CSEG, XSEG, DSEG, BSEG, and ISEG. In addition, the bit-offset in a byte.bit form should also be absolute.

***** ERROR #28 REFERENCE NOT TO CURRENT SEGMENT**

The error occurs in two cases: if a relocatable expression in an ORG directive does not specify the current active segment; or if the absolute expression specifying the base address in a segment select directive is not of the correct segment type.

Examples

```
RSEG CODE_SEG1
CODE_SYMB1: DB 1
RSEG DATA_SEG1
ORG CODE_SYMB1 ;error #28
```

```
CODE_SYMB2 CODE 200H
DSEG AT CODE_SYMB2 ;error #28
```

***** ERROR #29 IDATA SEGMENT ADDRESS EXPECTED**

The symbol specified on the left hand side of the bit selector(.) is not segment type DATA, or not in a bit-addressable relocatable type segment. The numeric value is used if possible, but may cause other errors. (See errors 37 and 8.)

***** ERROR #30 PUBLIC ATTRIBUTE NOT ALLOWED FOR THIS SYMBOL**

Occurs if the user attempts to define as public either segment symbols, external symbols, or predefined symbols.

***** ERROR #31 EXTERNAL REFERENCE NOT ALLOWED IN THIS CONTEXT**

***** ERROR #32 SEGMENT REFERENCE NOT ALLOWED IN THIS CONTEXT**

Occurs if an external/segment symbol appears in a symbol definition directive (EQU, SET, DATA, etc.); or in contexts when absolute expressions are required (see error #27).

***** ERROR #33 TOO MANY RELOCATABLE SEGMENTS**

The maximum number of relocatable segments has been exceeded.

***** ERROR #34 TOO MANY EXTERNAL SYMBOLS**

The maximum number of relocatable segments has been exceeded.

***** ERROR #35 LOCATION COUNTER MAY NOT POINT BELOW SEGMENT BASE**

Occurs if the user attempts, using the ORG directive, to set the location counter below the beginning of the current absolute segment.

Example

```
CSEG AT 200H      ;starts an absolute segment at 200H
ORG 1FFH          ;error #35
```

***** ERROR #36 CODE SEGMENT ADDRESS EXPECTED******* ERROR #37 DATA SEGMENT ADDRESS EXPECTED******* ERROR #38 XDATA SEGMENT ADDRESS EXPECTED******* ERROR #39 BIT SEGMENT ADDRESS EXPECTED**

These errors are caused by specifying a symbol with the wrong segment type in an operand to an instruction. The numeric value of that symbol is used, but it may cause subsequent errors (e.g., error 17).

***** ERROR #40 BYTE OF BIT ADDRESS NOT IN BIT ADDRESSABLE DATA SEGMENT**

The symbol specified on the left hand side of the bit selector (.) is not segment type DATA, or not in a bit-addressable relocatable type segment. The numeric value is used if possible, but may cause other errors. (See errors 37 and 8.)

***** ERROR #41 INVALID HARDWARE REGISTER**

The data address specified in the expression points to an unidentified location in the hardware register space (128 to 255).

***** ERROR #42 BAD REGISTER BANK NUMBER**

The register bank number specified for the USING directive should be in the range of 0 to 3.

***** ERROR #43 INVALID SIMPLE RELOCATABLE EXPRESSION**

Symbol definition directives such as EQU, SET, DATA, CODE, etc., require a simple relocatable expression (or a special register symbol in the EQU/SET case). See Chapter 2.

***** ERROR #44 INVALID RELOCATABLE EXPRESSION**

The relocatable expression specified violates the rules of relocatable expressions as given in Chapter 2.

*** ERROR #45 INPAGE RELOCATED SEGMENT OVERFLOW
*** ERROR #46 INBLOCK RELOCATED SEGMENT OVERFLOW
*** ERROR #47 BITADDRESSABLE RELOCATED SEGMENT OVERFLOW

The relocatability of the current active segment specifies a limited segment size: INPAGE = maximum 256 bytes; INBLOCK = 2048 bytes; BITADDRESSABLE = 16 bytes.

*** ERROR #48 ILLEGAL RELOCATION FOR SEGMENT TYPE

The segment type and relocatability of the defined segment is an invalid combination. See Chapter 4 on segment definition directive.

Macro Error Messages

Error messages with numbers in the 300's indicate macro call/expansion errors. Macro errors are followed by a trace of the macro call/expansion stack—a series of lines which print out the nesting of macro calls, expansions, INCLUDE files, etc.

Processing resumes in the original source file, with all INCLUDE files closed and macro calls terminated.

*** ERROR #300 MORE ERRORS DETECTED, NOT REPORTED

After 100 Macro or Control Errors on a given source line, this message is given and no more errors are reported for that line. Normal reporting resumes on the next source line. If the last error reported is a Macro Error, then this message will be issued. (See errors 16 and 400.)

*** ERROR #301 UNDEFINED MACRO NAME

The text following a metacharacter (%) is not a recognized user function name or built-in function. The reference is ignored and processing continues with the character following the name.

*** ERROR #302 ILLEGAL EXIT MACRO

The built-in macro "EXIT" is not valid in this context. The call is ignored. A call to "EXIT" must allow an exit through a user function, or the WHILE or REPEAT built-in functions.

*** ERROR #303 FATAL SYSTEM ERROR

Loss of hardware and/or software integrity was discovered by the macro processor. Contact Intel Corporation.

*** ERROR #304 ILLEGAL EXPRESSION

A numeric expression was required as a parameter to one of the built-in macros EVAL, IF, WHILE, REPEAT, and SUBSTR. The built-in function call is aborted, and processing continues with the character following the illegal expression.

*** ERROR #305 MISSING "FI" IN "IF"

The IF built-in function did not have a FI terminator. The macro is processed, but may not be interpreted as you intended.

***** ERROR #306 MISSING "THEN" IN "IF"**

The IF built-in macro did not have a THEN clause following the conditional expression clause. The call to IF is aborted and processing continues at the point in the string at which the error was discovered.

***** ERROR #307 ILLEGAL ATTEMPT TO REDEFINE MACRO**

It is illegal for a built-in function name or a parameter name to be redefined (with the DEFINE or MATCH built-ins). Also, a user function cannot be redefined inside an expansion of itself.

***** ERROR #308 MISSING IDENTIFIER IN DEFINE PATTERN**

In DEFINE, the occurrence of "@" indicated that an identifier type delimiter followed. It did not. The DEFINE is aborted and scanning continues from the point at which the error was detected.

***** ERROR #309 MISSING BALANCED STRING**

A balanced string "(...)" in a call to a built-in function is not present. The macro function call is aborted and scanning continues from the point at which the error was detected.

***** ERROR #310 MISSING LIST ITEM**

In a built-in function, an item in its argument list is missing. The macro function call is aborted and scanning continues from the point at which the error was detected.

***** ERROR #311 MISSING DELIMITER**

A delimiter required by the scanning of a user-defined function is not present. The macro function call is aborted and scanning continues from the point at which the error was detected.

This error can occur only if a user function is defined with a call pattern containing two adjacent delimiters. If the first delimiter is scanned, but is not immediately followed by the second, this error is reported.

***** ERROR #312 PREMATURE EOF**

The end of the input file occurred while the call to the macro was being scanned. This usually occurs when a delimiter to a macro call is omitted, causing the macro processor to scan to the end of the file searching for the missing delimiter.

Note that even if the closing delimiter of a macro call is given, if any preceding delimiters are not given, this error may occur, since the macro processor searches for delimiters one at a time.

***** ERROR #313 DYNAMIC STORAGE (MACROS OR ARGUMENTS) OVERFLOW**

Either a macro argument is too long (possibly because of a missing delimiter), or not enough space is available because of the number and size of macro definitions. All pending and active macros and INCLUDE's are popped and scanning continues in the primary source file. Increase the mempercent parameter of the MACRO control to overcome this error.

***** ERROR #314 MACRO STACK OVERFLOW**

The macro context stack has overflowed. This stack is 64 deep and contains an entry for each of the following:

1. Every currently active input file (primary source plus currently nested INCLUDE's).
2. Every pending macro call, that is, all calls to macros whose arguments are still being scanned.
3. Every active macro call, that is, all macros whose values or bodies are currently being read. Included in this category are various temporary strings used during the expansion of some built-in macro functions.

The cause of this error is excessive recursion in macro calls, expansions, or INCLUDE's. All pending and active macros and INCLUDE's are popped and scanning continues in the primary source file.

***** ERROR #315 INPUT STACK OVERFLOW**

The input stack is used in conjunction with the macro stack to save pointers to strings under analysis. The cause and recovery is the same as for the macro stack overflow.

***** ERROR #317 PATTERN TOO LONG**

An element of a pattern, an identifier or delimiter, is longer than 31 characters, or the total pattern is longer than 255 characters. The DEFINE is aborted and scanning continues from the point at which the error was detected.

***** ERROR #318 ILLEGAL METACHARACTER: "*char*"**

The METACHAR built-in function has specified a character that cannot legally be used as a metacharacter: a blank, letter, digit, left or right parenthesis, or asterisk. The current metacharacter remains unchanged.

***** ERROR #319 UNBALANCED ")" IN ARGUMENT TO USER DEFINED MACRO**

During the scan of a user-defined macro, the parenthesis count went negative, indicating an unmatched right parenthesis. The macro function call is aborted and scanning continues from the point at which the error was detected.

***** ERROR #320 ILLEGAL ASCENDING CALL**

Ascending calls are not permitted in the macro language. If a call is not complete when the end of a macro expansion is encountered, this message is issued and the call is aborted. A macro call beginning inside the body of a user-defined or built-in macro was incompletely contained inside that body, possibly because of a missing delimiter for the macro call.

Control Error Messages

Control error messages are issued when something is wrong with a control line in the source file. Command language errors, when they occur in the invocation line or in a primary control line, are fatal. However, the errors listed below are not considered fatal. (See INVOCATION LINE ERRORS, described above.)

*** ERROR #400 MORE ERRORS DETECTED, NOT REPORTED

After 100 Macro or Control Errors on a given source line, this message is given and no more errors are reported for that line. Normal reporting resumes on the next source line. If the last error reported is a Control Error, then this message will be issued. (See errors 16 and 300.)

*** ERROR #401 BAD PARAMETER TO CONTROL

What appears to be the parameter to a control is not correctly formed. This may be caused by the parameter missing a right parenthesis or if the parentheses are not correctly nested.

*** ERROR #402 MORE THAN ONE INCLUDE CONTROL ON A SINGLE LINE

ASM51 allows a maximum of one INCLUDE control on a single line. If more than one appears on a line, only the first (leftmost) is included, the rest are ignored.

*** ERROR #403 ILLEGAL CHARACTER IN COMMAND

When scanning a command line, ASM51 encountered an invalid character.

This error can be caused for a variety of reasons. The obvious one is that a command line was simply mistyped. The following example is somewhat less obvious:

```
$TITLE('1)-GO')
```

The title parameter ends with the first right parenthesis, the one after the digit 1. The title string is "1". The next character "-" is illegal and will get error 403. The next two characters, "GO", form a valid command (the abbreviation for GENONLY) which will cause the listing mode to be set. The final two characters ")" will each receive error 403.

*** ERROR #406 TOO MANY WORKFILES - ONLY FIRST TWO USED

This error occurs when you specify more than two devices in the parameters to the WORKFILES control. Only the first two are used and the remaining list of devices is ignored until the next right parenthesis.

*** ERROR #407 UNRECOGNIZED CONTROL OR MISPLACED PRIMARY CONTROL: <control-name>

The indicated control is not recognized as an ASM51 control in this context. It may be misspelled, mistyped, or incorrectly abbreviated.

A misplaced primary control is a likely cause of this error. Primary control lines must be at the start of the source file, preceding all non-control lines (even comments and blank lines).

***** ERROR #408 NO TITLE FOR TITLE CONTROL**

This error is issued if the title control has no parameter. The resulting title will be a string of blanks.

***** ERROR #409 NO PARAMETER ALLOWED WITH ABOVE CONTROL**

The following controls do not have parameters:

EJECT	NOBJECT	NOMACRO
SAVE	NOPRINT	PAGING
RESTORE	NOPAGING	SYMBOLS
LIST	DEBUG	NOSYMBOLS
NOLIST	NODEBUG	XREF
GENONLY	NOERRORPRINT	NOXREF
GEN	NOGEN	

If one is included, then this error will be issued, and the parameter will be ignored.

***** ERROR #410 SAVE STACK OVERFLOW**

The SAVE stack has a depth of eight. If the program tries to save more than eight levels, then this message will be printed.

***** ERROR #411 SAVE STACK UNDERFLOW**

If a RESTORE command is executed and there has been no corresponding SAVE command, then this error will be printed.

***** ERROR #413 PAGEWIDTH BELOW MINIMUM, SET TO 80**

The minimum pagewidth value is 80. If a pagewidth value less than 80 is given, 80 becomes the new pagewidth.

***** ERROR #414 PAGELENGTH BELOW MINIMUM, SET TO 10**

The minimum number of printed lines per page is 10. If a value less than 10 is requested, 10 becomes the new pagelength.

***** ERROR #415 PAGEWIDTH ABOVE MAXIMUM, SET TO 132**

The maximum pagewidth value is 132. If a value greater than 132 is requested then, 132 becomes the new pagewidth.

Special Assembler Error Messages

Error messages in the 800's should never occur. If you get one of these error messages, please notify Intel Corporation via the Software Problem Report included with this manual. All of these errors are listed below:

- *** ERROR #800 UNRECOGNIZED ERROR MESSAGE NUMBER
- *** ERROR #801 SOURCE FILE READING UNSYNCHRONIZED
- *** ERROR #802 INTERMEDIATE FILE READING UNSYNCHRONIZED
- *** ERROR #803 BAD OPERAND STACK POP REQUEST
- *** ERROR #804 PARSE STACK UNDERFLOW
- *** ERROR #805 INVALID EXPRESSION STACK CONFIGURATION

Fatal Error Messages

Errors numbered in the 900's are fatal errors. They are marked by the line

***** FATAL ERROR *****

preceding the message line. Assembly of the source code is halted. The remainder of the program is scanned and listed, but not assembled.

*** ERROR #900 USER SYMBOL TABLE SPACE EXHAUSTED

You must either eliminate some symbols from your program, or if you don't use macros, the NOMACRO control will free additional symbol table space.

*** ERROR #901 PARSE STACK OVERFLOW

*** ERROR #902 EXPRESSION STACK OVERFLOW

This error will be given only for grammatical entities far beyond the complication seen in normal programs.

*** ERROR #903 INTERMEDIATE FILE BUFFER OVERFLOW

This error indicates that a single source line has generated an excessive amount of information for pass 2 processing. In practical programs, the limit should be reached only for lines with a gigantic number of errors — correcting other errors should make this one go away.

*** ERROR #904 USER NAME TABLE SPACE EXHAUSTED

This error indicates that the sum of the number of characters used to define the symbols contained in a source file exceeds the macro processor's capacity. Use shorter symbol names, or reduce the number of symbols in the program.

Assembler Listing File Format

The MCS-51 assembler, unless overridden by controls, outputs two files: an object file and a listing file. The object file contains the machine code. The listing file contains a formatted copy of your source code with page headers and, if requested through controls (SYMBOL or XREF), a symbol table.

MCS-51 MACRO ASSEMBLER SAMPLE			PAGE 1
ISIS-II MCS-51 MACRO ASSEMBLER V2.0			
OBJECT MODULE PLACED IN :F1:SAMP1.OBJ			
ASSEMBLER INVOKED BY: ASMS51 :F1:SAMP1.A51 DEBUG			
LOC	OBJ	LINE	SOURCE
		1	NAME SAMPLE
		2	;
		3	EXTERN code (put_crlf, put_string, put_data_str, get_num)
		4	EXTERN code (binasc, ascbin)
		5	;
----		6	CSEG
		7	; This is the initializing section. Execution always
		8	; starts at address 0 on power-up.
		9	ORG 0
0000		10	MOV TMOD,#00100008 ; set timer mode to auto-reload
0000 758920		11	MOV TH1,#(-253) ; set timer for 110 BAUD
0003 758D03		12	MOV SCON,#110110108 ; prepare the Serial Port

Figure 7-1. Example Listing File Format

MCS-51 MACRO ASSEMBLER SAMPLE

LOC	OBJ	LINE	SOURCE
0009	D28E	13	setb TR1 ; start clock
		14	;
		15	; This is the main program. It's an infinite loop,
		16	; where each iteration prompts the console for 2
		17	; input numbers and types out their sum.
		18	START:
		19	; type message explaining how to correct a typo
0008	900000	20	mov DPTR,#typo_msg
000E	120000	21	call put_string
0011	120000	22	call put_crlf
		23	; get first number from console
0014	900000	24	mov DPTR,#num1_msg
0017	120000	25	call put_string
001A	120000	26	call put_crlf
001D	7800	27	mov RD,#num1
001F	120000	28	call get_num
0022	120000	29	call put_crlf
		30	; get second number from console
0025	900000	31	mov DPTR,#num2_msg
0028	120000	32	call put_string
002B	120000	33	call put_crlf
002E	7800	34	mov RD,#num2
0030	120000	35	call get_num
0033	120000	36	call put_crlf
		37	; convert the ASCII numbers to binary
0036	7900	38	mov R1,#num1
0038	120000	39	call ascbin
003B	7900	40	mov R1,#num2
003D	120000	41	call ascbin
		42	; add the 2 numbers, and store the results in SUM
0040	E500	43	mov a,num1
0042	2500	44	add a,num2
0044	F500	45	mov sum,a
		46	; convert SUM from binary to ASCII
0046	7900	47	mov R1,#sum
0048	120000	48	call binasc
		49	; output sum to console
004B	900000	50	mov DPTR,#sum_msg
004E	120000	51	call put_string
0051	7900	52	mov R1,#sum
0053	7A04	53	mov R2,#4
0055	120000	54	call put_data_str
0058	80B1	55	jmp start
		56	;
----		57	DSEG at 8
0008		58	STACK: ds 8 ; at power-up the stack pointer is
		59	; initialized to point here
		60	;
		61	DATA_AREA segment DATA
		62	CONSTANT_AREA segment CODE
		63	;
----		64	RSEG data_area
0000		65	NUM1: ds 4
0004		66	NUM2: ds 4
0008		67	SUM: ds 4
		68	;
----		69	RSEG constant_area
0000	54595045	70	TYPO_MSG: db 'TYPE ^X TO RETYPE A NUMBER',00H
0004	205E5820		
0008	544F2052		
000C	45545950		
0010	45204120		
0014	4E554D42		
0018	4552		
001A	00		

Figure 7-1. Example Listing File Format (Cont'd.)

MCS-51 MACRO ASSEMBLER SAMPLE

```

001B 54595045      71     NUM1_MSG: db 'TYPE IN FIRST NUMBER: ',00H
001F 20494E20
0023 46495253
0027 54204E55
002B 4D424552
002F 3A20
0031 00
0032 54595045      72     NUM2_MSG: db 'TYPE IN SECOND NUMBER: ',00H
0036 20494E20
003A 5345434E
003E 4E44204E
0042 55404245
0046 523A20
0049 00
004A 54484520      73     SUM_MSG: db 'THE SUM IS ',00H
004E 53554D20
0052 495320
0055 00
    74     ;
    75     END

```

SYMBOL TABLE LISTING

N A M E	T Y P E	V A L U E	A T T R I B U T E S
ASCBIN.	C ADDR	----	EXT
BINASC.	C ADDR	----	EXT
CONSTANT_AREA	C SEG	0056H	REL=UNIT
DATA_AREA	D SEG	000CH	REL=UNIT
GET_NUM	C ADDR	----	EXT
NUM1_MSG.	C ADDR	001BH	R SEG=CONSTANT_AREA
NUM1.	D ADDR	0000H	R SEG=DATA_AREA
NUM2_MSG.	C ADDR	0032H	R SEG=CONSTANT_AREA
NUM2.	D ADDR	0004H	R SEG=DATA_AREA
PUT_CRLF.	C ADDR	----	EXT
PUT_DATA_STR.	C ADDR	----	EXT
PUT_STRING.	C ADDR	----	EXT
SAMPLE.	----	----	----
SCON.	D ADDR	0098H	A
STACK	D ADDR	0008H	A
START	C ADDR	0008H	A
SUM_MSG	C ADDR	004AH	R SEG=CONSTANT_AREA
SUM	D ADDR	0008H	R SEG=DATA_AREA
TH1	D ADDR	008DH	A
TMOD	D ADDR	0089H	A
TR1	B ADDR	0088H.6	A
TYPO_MSG.	C ADDR	0000H	R SEG=CONSTANT_AREA

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure 7-1. Example Listing File Format (Cont'd.)

Listing File Heading

Every page has a header on the first line. It contains the words "MCS-51 MACRO ASSEMBLER" followed by the title, if specified. If the title is not specified, then the module name is used. It is derived from the NAME directive (if specified), or from the root of the source filename. On the extreme right side of the header, the date (if specified) and the page number are printed.

In addition to the normal header, the first page of listing includes a heading shown in figure 7-2. In it the assembler's version number is shown, the file name of the object file, if any, and the invocation line. The entire invocation line is displayed even if it extends over several lines.

MCS-51 MACRO ASSEMBLER SAMPLE

PAGE 1

ISIS-II MCS-51 MACRO ASSEMBLER V2.0
 OBJECT MODULE PLACED IN :F1:SAMP1.OBJ
 ASSEMBLER INVOKED BY: :F1:ASM51 :F1:SAMP1.A51 DEBUG

Figure 7-2. Example Heading

Source Listing

The main body of the listing file is the formatted source listing. A section of formatted source is shown in figure 7-3.

LOC	OBJ	LINE	SOURCE
		1	NAME SAMPLE
		2	;
		3	EXTRN code (put_crlf, put_string, put_data_str)
		4	EXTRN code (get_num, binasc, ascbin)
		5	;
----		6	CSEG
		7	; This is the initializing section. Execution
		8	; always starts at address 0 on power-up.
0000		9	ORG 0
0000 758920		10	MOV TMOD,#0010000B ; Set timer to auto-reload
0003 758D03		11	MOV TH1,#(-253) ; Set timer for 110 BAUD
0006 7598DA		12	MOV SCON,#11011010B ; Prepare the Serial Port
0009 D28E		13	SETB TR1 ; Start clock
		14	;
		15	; This is the main program. It's an infinite loop,
		16	; where each iteration prompts the console for 2
		17	; input numbers and types out their sum.
		18	START:

Figure 7-3. Example Source Listing

The format for each line in the listing file depends on the source line that appears on it. Instruction lines contain 4 fields. The name of each field and its meaning is shown in the list below:

- LOC shows the location relative or absolute (code address) of the first byte of the instruction. The value is displayed in hexadecimal.
- OBJ shows the actual machine code produced by the instruction, displayed in hexadecimal.
- If the object that corresponds to the printed line is to be fixed up (it contains external references or is relocatable), an "F" is printed after the OBJ field. The object fields to be fixed up contain zeroes.
- LINE shows the INCLUDE nesting level, if any, the number of source lines from the top of the program, and the macro nesting level, if any. All values in this field are displayed in decimal numbers.
- SOURCE shows the source line as it appears in the file. This line may be extended onto the subsequent lines in the listing file.

DB or DW directives are formatted similarly to instruction lines, except the OBJ field shows the data values placed in memory. All data values are shown. If the expression list is long, then it may take several lines in the listing file to display all of the values placed in memory. The extra lines will only contain the LOC and OBJ fields.

The directives that affect the location counter without initializing memory (e.g., ORG, DBIT, or DS) do not use the OBJ field, but the new value of the location counter is shown in the LOC field.

The SET and EQU directives do not have a LOC or OBJ field. In their place the assembler lists the value that the symbol is set to. If the symbol is defined to equal one of the registers, then 'REG' is placed in this field. The remainder of the directive line is formatted in the same way as the other directives.

Format for Macros and INCLUDE Files

The format for lines generated by a macro call varies with the macro listing mode (GEN, GENONLY, or NOGEN). Figure 7-4 shows the format of the call macro calls listed with each of these modes in effect. In all three calls the same instructions are encoded, the only difference is in the listing of the macro call. Note that the macro nesting level is shown immediately to the right of the line number.

```

3 +1 $GEN
4 $add16(DPH,DPL,#(HIGH $),#(LOW $),DPH,DPL)
5 +1
6 +1 MOV A,$XLOW
7 +2 DPL
8 +1 ADD A,$YLOW
9 +2 #(LOW $)
10 +1 MOV #SUMLOW
11 +2 DPL,A
12 +1 MOV A,$XHIGH
13 +2 DPH
14 +1 ADDC A,$XHIGH
15 +2 #(HIGH $)
16 +1 MOV #SUMHIGH
17 +2 DPH,A
18 +1
19
20
21
22 +1 $GENONLY
23 +1
24 +2 MOV A,DPL
25 +2 ADD A,#(LOW $)
26 +2 MOV DPL,A
27 +2 MOV A,DPH
28 +2 ADDC A,#(HIGH $)
29 +2 MOV DPH,A
30 +1
31
32
33
34 +1 $NOGEN
35 $add16(DPH,DPL,#(HIGH $),#(LOW $),DPH,DPL)
43

```

Figure 7-4. Examples of Macro Listing Modes

General control lines that appear in the source are interpreted by ASM51's macro processor and, as such, they are given a macro nesting level value. It is displayed immediately to the right of the line number. Lines added to the program as a result of the INCLUDE control are formatted just as if they appeared in the original source file, except that the INCLUDE nesting level is displayed immediately to the left of the line number.

The control line shown below has both an INCLUDE nesting level and a macro nesting level. The INCLUDE nesting level is preceded by a equal sign '=', and the macro nesting level is preceded by a plus sign '+'.

LOC	OBJ	LINE	SOURCE
=1	101	+1 \$	SAVE NOLIST

Symbol Table

The symbol table is a list of all symbols defined in the program along with the status information about the symbol. Any predefined symbols used will also be listed in the symbol table. If the XREF control is used, the symbol table will contain information about where the symbol was used in the program.

The status information includes a NAME field, a TYPE field, a VALUE field, and an ATTRIBUTES field.

The TYPE field specifies the type of the symbol: ADDR if it is a memory address, NUMB if it is a pure number (e.g., as defined by EQU), SEG if it is a relocatable segment, and REG if a register. For ADDR and SEG symbols, the segment type is added to the type:

- C — CODE
- D — DATA
- X — XDATA
- I — IDATA
- B — BIT

The VALUE field shows the value of the symbol when the assembly was completed. For REG symbols, the name of the register is given. For NUMB and ADDR symbols, their absolute value (or if relocatable, their offset) is given, followed by A (absolute) or R (relocatable). For SEG symbols, the segment size is given here. Bit address and size are given by the byte part, a period (.), followed by the bit part. The scope attribute, if any, is PUB (public) or EXT (external). These are given after the VALUE field.

For the module name symbol, the TYPE and the VALUE fields contain dashes (----).

The ATTRIBUTES field contains an additional piece of information for some symbols: relocation type for segments, segment name for relocatable symbols.

If the XREF control is used, then the symbol table listing will also contain all of the line numbers of each line of code that the symbol was used. If the value of the symbol was changed or defined on a line, then that line will have a hash mark (#) following it. The line numbers are displayed in decimal.

MCS-51 MACRO ASSEMBLER SAMPLE

SYMBOL TABLE LISTING

N A M E	T Y P E	V A L U E	A T T R I B U T E S
ASCBIN.	C ADDR	----	EXT
BINASC.	C ADDR	----	EXT
CONSTANT_AREA	C SEG	0056H	REL=UNIT
DATA_AREA	D SEG	000CH	REL=UNIT
GET_NUM.	C ADDR	----	EXT
NUM1_MSG.	C ADDR	0016H	R SEG=CONSTANT_AREA
NUM1.	D ADDR	0000H	R SEG=DATA_AREA
NUM2_MSG.	C ADDR	0032H	R SEG=CONSTANT_AREA
NUM2.	D ADDR	0004H	R SEG=DATA_AREA
PUT_CRLF.	C ADDR	----	EXT
PUT_DATA_STR.	C ADDR	----	EXT
PUT_STRING.	C ADDR	----	EXT
SAMPLE.	----	----	
SCON.	D ADDR	0098H	A
STACK.	D ADDR	0008H	A
START.	C ADDR	0008H	A
SUM_MSG.	C ADDR	004AH	R SEG=CONSTANT_AREA
SUM.	D ADDR	0005H	R SEG=DATA_AREA
TH1.	D ADDR	003DH	A
TMOD.	D ADDR	0099H	A
TR1.	B ADDR	0083H.6	A
TYPO_MSG.	C ADDR	0000H	R SEG=CONSTANT_AREA

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure 7-5. Example Symbol Table Listing

If an inordinate number of symbol references are generated by your program, it may be impossible for the assembler to produce a complete XREF table for your entire program. In that event, the following warning message is issued at the head of the symbol table:

*** WARNING, XREFS ABANDONED AT LINE #line

The XREF listing will be valid up to the specified line.

Listing File Trailer

At the end of the listing, the assembler skips two lines and prints a two-line message in the following format:

[NO] REGISTER BANK(S) USED [:rrrr], TARGET MACHINE(S): 8051
ASSEMBLY COMPLETE, n ERRORS FOUND (l)

Where r's are the numbers of the register banks used, and n and l are just like the console message.





APPENDIX A

ASSEMBLY LANGUAGE BNF GRAMMAR

This appendix contains a Backus-Naur Form (BNF) grammar for all of the MCS-51 Assembly Language Constructions. It does not include the grammar for the macro facility. (See Chapter 5 and Appendix F.) Although BNF grammar is designed to define only syntax, the metasymbols and language breakdown have been selected to show the semantics of the language.

To simplify the grammar presented here, we have not defined all of the nuances of the language as rigorously as a complete BNF grammar would require. These exceptions are listed below.

- There are two types of controls, primary and general. A control line containing a primary control must be the first line in a program, or only preceded by other control lines.
- Some assembler directives may be used only while certain segment modes are in effect (e.g., the bit segment must be active when a DBIT directive is used).
- Operator precedence in expressions has not been defined.
- Symbol typing conventions are not identified.
- In some of the definitions we have used a few words of description, contained in double quotes.
- The ASCII string argument to the TITLE and DATE controls must either contain balanced parentheses or no parentheses at all.
- There has been no attempt to show the logical blanks (spaces or tabs) that separate the fields on a line.
- The symbol NULL is used to show that a meta-symbol may evaluate to nothing.
- Except within character strings, ASM51 makes no distinction between upper and lower case characters. All terminal symbols have been shown in upper case, but you can use upper or lower case in your source code (including within hex constants).
- The NAME statement may be preceded only by a control or empty lines. A comment line is considered an empty line.
- List of terms, e.g., <expression list>, unless defined explicitly implies a sequence of items separated by commas (,).
- Square brackets are used to enclose optional items.

```

<Assembly Language Program> ::= <Statement List> <End Statement>
<Statement List> ::= <Statement> <Statement List> | NULL
<End Statement> ::= END <Comment> <CRLF>
<Statement> ::= <Control Line> | <Instruction Line> |
                <Directive Line>
<Control Line> ::= $ <Control List> <CRLF>
<Control List> ::= <Control> <Control List> | NULL
<Control> ::= DATE(<ASCII String>) | DA(<ASCII String>) |
                DEBUG | DE |
                NODEBUG | NODE |
                EJECT | EJ |
                ERRORPRINT(<Filename>) | EP(<Filename>) | ERRORPRINT | EP |
                NOERRORPRINT | NOEP |
                GENONLY | GO |
                NOGEN | NOGE |
                GEN | GE |
                INCLUDE(<Filename>) | IC(<Filename>) |
                LIST | LI |
                NOLIST | NOLI |
                MACRO [(constant)] | MR [(constant)] |
                NOMACRO | NOMR |
                OBJECT(<Filename>) | OJ(<Filename>) | OBJECT | OJ |
                NOOBJECT | NOOJ |
                PAGING | PI |
                NOPAGING | NOPI |
                PAGELENGTH(<Constant>) | PL(<Constant>) |
                PAGEWIDTH(<Constant>) | PW(<Constant>) |
                PRINT(<Filename>) | PRI(<Filename>) | PRINT | PR |
                NOPRINT | NOPR |
                REGISTERBANK(<regbank_list>) | RB(<regbank_list>) |
                NOREGISTERBANK | NORB |
                SAVE | SA |
                RESTORE | RS |
                SYMBOLS | SB |
                NOSYMBOLS | NOSB |
                TITLE(<ASCII String>) | TT(<ASCII String>) |
                WORKFILES(<Drive name>, <Drive name>) | WORKFILES(<Drive name>) |
                WF(<Drive name>, <Drive name>) | WF(<Drive name>) |
                XREF | XR |
                NOXREF | NOXR
<regbank> ::= 0 | 1 | 2 | 3
<Instruction Line> ::= <Label> <Instruction> <Comment> <CRLF>
<Label> ::= <Symbol Name>: |
                NULL
<Comment> ::= ;<ASCII String> | NULL
<Instruction> ::= <Arithmetic Instruction> |
                  <Multiplication Instruction> |
                  <Logic Instruction> |
                  <Data Move Instruction> |
                  <Jump Instruction> |
                  <Subroutine Instruction> |
                  <Special Instruction> |
                NULL

```

```

<Arithmetic Instruction> ::= <Arithmetic Mnemonic> <Accumulator>,<Byte Source>
<Arithmetic Mnemonic> ::= ADD | ADDC | SUBB
<Multiplication Instruction> ::= DIV AB | MUL AB
<Logic Instruction> ::= <Accumulator Logic Instruction> | <Data Address Logic Instruction> | <Bit Logic Instruction>
<Accumulator Logic Instruction> ::= <Logic Mnemonic> <Accumulator>,<Byte Source>
<Data Address Logic Instruction> ::= <Logic Mnemonic> <Data Address>,<Accumulator> | <Logic Mnemonic> <Data Address>,<Immediate Data>
<Logic Mnemonic> ::= ANL | ORL | XRL
<Bit Logic Instruction> ::= ANL C,<Bit Address> | ANL C, /<Bit Address> | ORL C,<Bit Address> | ORL C, /<Bit Address>
<Data Move Instruction> ::= <Bit Move Instruction> | <Byte Move Instruction> | <External Move Instruction> | <Code Move Instruction> | <Exchange Instruction> | <Data Pointer Load>
<Bit Move Instruction> ::= MOV C,<Bit Address> | MOV <Bit Address>,C
<Byte Move Instruction> ::= MOV <Accumulator>,<Byte Source> | <Indirect Address Move> | <Data Address Move> | <Register Move>
<Indirect Address Move> ::= MOV <Indirect Address>,<Accumulator> | MOV <Indirect Address>,<Immediate Data> | MOV <Indirect Address>,<Data Address>
<Data Address Move> ::= MOV <Data Address>,<Accumulator> | MOV <Data Address>,<Byte Source>
<Register Move> ::= MOV <Register>,<Accumulator> | MOV <Register>,<Immediate Data> | MOV <Register>,<Data Address>
<External Move Instruction> ::= MOVX <Accumulator>,<Indirect Address> | MOVX <Indirect Address>,<Accumulator> | MOVX <Accumulator>,@DPTR | MOVX @DPTR,<Accumulator>
<Code Move Instruction> ::= MOVC <Accumulator>,@A+PC | MOVC <Accumulator>,@A+DPTR
<Exchange Instruction> ::= XCHD <Accumulator>,<Indirect Address> | XCH <Accumulator>,<Byte Destination>
<Data Pointer Load> ::= MOV DPTR,<Immediate Data>
<Jump Instruction> ::= <Decrement Jump> | <Compare Jump> | <Test Jump> | <Always Jump>

```

```

<Decrement Jump> ::= DJNZ <Register>,<Code Address> |
                     DJNZ <Data Address>,<Code Address>

<Compare Jump> ::= CJNE <Accumulator>,<Immediate Data>,<Code Address> |
                     CJNE <Accumulator>,<Data Address>,<Code Address> |
                     CJNE <Indirect Address>,<Immediate Data>,<Code Address> |
                     CJNE <Register>,<Immediate Data>,<Code Address>

<Test Jump> ::= JC <Code Address> |
                  JNC <Code Address> |
                  JZ <Code Address> |
                  JNZ <Code Address> |
                  JB <Bit Address>,<Code Address> |
                  JBC <Bit Address>,<Code Address> |
                  JNB <Bit Address>,<Code Address>

<Always Jump> ::= SJMP <Code Address> |
                   AJMP <Code Address> |
                   LJMP <Code Address> |
                   JMP <Code Address> |
                   JMP @A + DPTR

<Subroutine Instruction> ::= <Call Instruction> |
                             <Return Instruction>

<Call Instruction> ::= ACALL <Code Address> |
                      LCALL <Code Address> |
                      CALL <Code Address>

<Return Instruction> ::= RET |
                        RETI

<Special Instruction> ::= <Increment Instruction> |
                           <Decrement Instruction> |
                           <Accumulator Modify Instruction> |
                           <Bit Modify Instruction> |
                           <Stack Instruction> |
                           NOP

<Increment Instruction> ::= INC <Accumulator> |
                           INC DPTR |
                           INC <Byte Destination>

<Decrement Instruction> ::= DEC <Accumulator> |
                           DEC <Byte Destination>

<Accumulator Modify Instruction> ::= <Accumulator Modify Mnemonic> <Accumulator>

<Accumulator Modify Mnemonic> ::= CLR |
                                    CPL |
                                    DA |
                                    SWAP |
                                    RL |
                                    RR |
                                    RLC |
                                    RRC

<Bit Modify Instruction> ::= <Bit Modify Mnemonic> <Bit Destination>

<Bit Modify Mnemonic> ::= SETB |
                           CLR |
                           CPL

<Stack Instruction> ::= POP <Data Address> |
                        PUSH <Data Address>

<Directive Line> ::= <Directive Statement><Comment><CRLF>

```

```

<Directive Statement> ::= <Org Statement> |  

                         <Using Statement>  

                         <Symbol Definition Statement> |  

                         <Segment Select Statement> |  

                         <Label><Space Allocation Statement> |  

                         <Label><Memory Initialization Statement>  

<Org Statement> ::= ORG <Expression>  

<Using Statement> ::= USING <Expressions>  

<Symbol Definition Statement> ::= <Symbol> EQU <Expression> |  

                               <Symbol> EQU <Symbol Register> |  

                               <Symbol> SET <Expression> |  

                               <Symbol> SET <Symbol Register> |  

                               <Symbol> DATA <Expression> |  

                               <Symbol> XDATA <Expression> |  

                               <Symbol> BIT <Bit Address> |  

                               <Symbol> CODE <expression> |  

                               <Symbol> IDATA <expression> |  

                               <Symbol> SEGMENT <segment types> <relocatability> |  

                               <External definition statement> |  

                               <Public definition statement> |  

                               <NAME statement> |  

<Segment type> ::= CODE | XDATA | IDATA | BIT | DATA  

<Relocatability> ::= UNIT | PAGE | INPAGE | INBLOCK | BITADDRESSABLE |  

                      NULL  

<External definition statement> ::= EXTRN <External definition list>  

<external definition> ::= <Usage type>(<symbol list>)  

<Usage type> ::= <Segment type> | NUMBER  

<Public definition statement> ::= PUBLIC <symbol list>  

<Name statement> ::= NAME <symbol>  

<Segment Select Statement> ::= <absolute segment select> | <relocatable segment select>  

<Absolute segment select> ::= <abs seg> <base address>  

<Abs seg> ::= CSEG | DSEG | BSEG | XSEG | ISEG  

<Base address> ::= AT <expression> | NULL  

<Relocatable segment select> ::= RSEG <symbol>  

<Space Allocation Statement> ::= DS <Expression> |  

                               DBIT <Expression>  

<Memory Initialization Statement> ::= DB <Expression List>  

                               "ASCII character strings, as items in a DB expression list,  

                               may be arbitrarily long."  

                               DW <Expression List>  

                               "ASCII character strings, as items in a DW expression list,  

                               must be no more than two characters long."  

<Filename> ::= "ISIS-II Filename"  

<Drive name> ::= "ISIS-II Drive Identifier"  

<ASCII String> ::= "Any Printable ASCII Character"  

<Constant> ::= <Decimal Digit> |  

                  <Decimal Digit><Constant>  

<Decimal Digit> ::= 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9  

<CRLF> ::= "ASCII Carriage Return Line Feed Pair"

```

```

<Byte Source> ::= <Indirect Address> |  

                  <Data Address> |  

                  <Immediate Data> |  

                  <Register>  

<Indirect Address> ::= @R0 | @R1 |  

                      @<Symbol>  

<Data Address> ::= <Expression>  

<Immediate Data> ::= #<Expression>  

<Register> ::= R0 | R1 | R2 | R3 | R4 | R5 | R6 | R7 |  

                 <Symbol>  

<Byte Destination> ::= <Indirect Address> |  

                      <Data Address> |  

                      <Register>  

<Accumulator> ::= A | <Symbol>  

<Symbol Register> ::= <Accumulator> | <Register>  

<Symbol> ::= <Alphabet><Alphanumeric List> | <Special Char><Alphanumeric List>  

<Alphabet> ::= A | B | C | D | E | F | G | H | I |  

                  J | K | L | M | N | O | P | Q | R |  

                  S | T | U | V | W | X | Y | Z |  

                  a | b | c | d | e | f | g | h | i |  

                  j | k | l | m | n | o | p | q | r |  

                  s | t | u | v | w | x | y | z |  

<Special Char> ::= _ "Underscore" |  

                   ?  

<Alphanumeric List> ::= <Alphanumeric><Alphanumeric List> |  

                       NULL  

<Alphanumeric> ::= <Alphabet> |  

                  <Decimal Digit> |  

                  <Special Char>  

<Bit Destination> ::= C |  

                      <Bit Address>  

<Bit Address> ::= <Expression> |  

                  <Expression>.<Expression>  

<Code Address> ::= <Expression>  

<Expression List> ::= <Expression> |  

                  <Expression>,<Expression List>  

<Expression> ::= <Symbol> |  

                  <Number> |  

                  <Expression><Operator><Expression> |  

                  (<Expression>) |  

                  +<Expression> |  

                  -<Expression> |  

                  HIGH <Expression> |  

                  LOW <Expression>  

<Operator> ::= + | - | / | MOD | SHL | SHR |  

                  EQ | = | NE | <> | LT | < | LE |  

                  <= | GT | > | GE | >= | AND | OR | XOR  

<Number> ::= <Hex Number> |  

                  <Decimal Number> |  

                  <Octal Number> |  

                  <Binary Number>

```

```
<Hex Number>      ::= <Decimal Digit><Hex Digit String> H
<Hex Digit String> ::= <Hex Digit><Hex Digit String> |
                      NULL
<Hex Digit>        ::= 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
                      8 | 9 | A | B | C | D | E | F
<Decimal Number>   ::= <Decimal Digit String> D |
                      <Decimal Digit String>
<Decimal Digit String> ::= <Decimal Digit > |
                           <Decimal Digit><Decimal Digit String>
<Octal Number>     ::= <Octal Digit String> O |
                           <Octal Digit String> O
<Octal Digit String> ::= <Octal Digit > |
                           <Octal Digit><Octal Digit String>
<Octal Digit>       ::= 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7
<Binary Number>    ::= <Binary Digit String> B
<Binary Digit String> ::= <Binary Digit > |
                           <Binary Digit><Binary Digit String>
<Binary Digit>      ::= 0 | 1
```




APPENDIX B INSTRUCTION SET SUMMARY

This appendix contains two tables: the first identifies all of the 8051's instructions in alphabetical order; the second table lists the instructions according to their hexadecimal opcodes and lists the assembly language instructions that produced that opcode.

The alphabetical listing also includes documentation of the bit pattern, flags affected, number of machine cycles per execution and a description of the instructions operation and function. The list below defines the conventions used to identify operation and bit patterns.

Abbreviations and Notations Used

A	Accumulator
AB	Register Pair
B	Multiplication Register
<i>bit address</i>	8051 bit address
<i>page address</i>	11-bit code address within 2K page
<i>relative offset</i>	8-bit 2's complement offset
C	Carry Flag
<i>code address</i>	Absolute code address
<i>data</i>	Immediate data
<i>data address</i>	On-chip 8-bit RAM address
DPTR	Data pointer
PC	Program Counter
R _r	Register ($r=0-7$)
SP	Stack pointer
high	High order byte
low	Low order byte
i-j	Bits i through j
.n	Bit n
aaa aaaaaaaaa	Absolute page address encoded in instruction and operand byte
bbbbbbbb	Bit address encoded in operand byte
ddddddddd	Immediate data encoded in operand byte
	One byte of a 16-bit address encoded in operand byte
mmmmmmmmm	Data address encoded in operand byte
ooooooooo	Relative offset encoded in operand byte
r or rrr	Register identifier encoded in operand byte
AND	Logical AND
NOT	Logical complement
OR	Logical OR
XOR	Logical exclusive OR
+	Plus
-	Minus
/	Divide
*	Multiply
(X)	The contents of X
((X))	The memory location addressed by (X) (The contents of X)
=	Is equal to
<>	Is not equal to
<	Is less than
>	Is greater than
←	Is replaced by

Table B-1. Instruction Set Summary

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
ACALL <i>code addr</i> (PC) \leftarrow (PC) + 2 (SP) \leftarrow (SP) + 1 ((SP)) \leftarrow (PC) <i>low</i> (SP) \leftarrow (SP) + 1 ((SP)) \leftarrow (PC) <i>high</i> (PC) 0-10 \leftarrow <i>page address</i>	2	a a a 1 0 0 0 1 a a a a a a a a a		Push PC on stack, and replace low order 11 bits with low order 11 bits of code address.
ADD A,# <i>data</i> (A) \leftarrow (A) + <i>data</i>	1	0 0 1 0 0 1 0 0 d d d d d d d d	P OV AC C	Add immediate data to A
ADD A,@R <i>r</i> (A) \leftarrow (A) + ((R <i>r</i>))	1	0 0 1 0 0 1 1 r	P OV AC C	Add contents of indirect address to A
ADD A,R <i>r</i> (A) \leftarrow (A) + (R <i>r</i>)	1	0 0 1 0 1 r r r	P OV AC C	Add register to A
ADD A, <i>data addr</i> (A) \leftarrow (A) + (<i>data address</i>)	1	0 0 1 0 0 1 0 1 m m m m m m m m	P OV AC C	Add contents of data address to A
ADDC A,# <i>data</i> (A) \leftarrow (A) + (C) + <i>data</i>	1	0 0 1 1 0 1 0 0 d d d d d d d d	P OV AC C	Add C and immediate data to A
ADDC A,@R <i>r</i> (A) \leftarrow (A) + (C) + ((R <i>r</i>))	1	0 0 1 1 0 1 1 r	P OV AC C	Add C and contents of indirect address to A
ADDC A,R <i>r</i> (A) \leftarrow (A) + (C) + (R <i>r</i>)	1	0 0 1 1 1 r r r	P OV AC C	Add C and register to A
ADDC A, <i>data addr</i> (A) \leftarrow (A) + (C) + (<i>data address</i>)	1	0 0 1 1 0 1 0 1 m m m m m m m m	P OV AC C	Add C and contents of data address to A
AJMP <i>code addr</i> (PC) 0-10 \leftarrow <i>code address</i>	2	a a a 0 0 0 0 1 a a a a a a a a		Replace low order 11 bits of PC with low order 11 bits code address
ANL A,# <i>data</i> (A) \leftarrow (A) AND <i>data</i>	1	0 1 0 1 0 1 0 0 d d d d d d d d	P	Logical AND immediate data to A
ANL A,@R <i>r</i> (A) \leftarrow (A) AND ((R <i>r</i>))	1	0 1 0 1 0 1 1 r	P	Logical AND contents of indirect address to A
ANL A,R <i>r</i> (A) \leftarrow (A) AND (R <i>r</i>)	1	0 1 0 1 1 r r r	P	Logical AND register to A
ANL A, <i>data addr</i> (A) \leftarrow (A) AND (<i>data address</i>)	1	0 1 0 1 0 1 0 1 m m m m m m m m	P	Logical AND contents of data address to A
ANL C, <i>bit addr</i> (C) \leftarrow (C) AND (<i>bit address</i>)	2	1 0 0 0 0 0 1 0 b b b b b b b b	C	Logical AND bit to C
ANL C, <i>lbit addr</i> (C) \leftarrow (C) AND NOT (<i>bit address</i>)	2	1 0 1 1 0 0 0 0 b b b b b b b b	C	Logical AND complement of bit to C
ANL <i>data addr</i> ,# <i>data</i> (<i>data address</i>) \leftarrow (<i>data address</i>) AND <i>data</i>	2	0 1 0 1 0 0 1 1 m m m m m m m m d d d d d d d d		Logical AND immediate data to contents of data address
ANL <i>data addr</i> ,A (<i>data address</i>) \leftarrow (<i>data address</i>) AND A	1	0 1 0 1 0 0 1 0 m m m m m m m m		Logical AND A to contents of data address

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
CJNE @Rr,#data,code addr (PC) \leftarrow (PC) + 3 IF ((Rr)) $<>$ data THEN (PC) \leftarrow (PC) + relative offset IF ((Rr)) $<$ data THEN (C) \leftarrow 1 ELSE (C) \leftarrow 0	2	1 0 1 1 0 1 1 r d d d d d d d d 0 0 0 0 0 0 0 0		C If immediate data and contents of indirect address are not equal, jump to code address
CJNE A,#data,code addr (PC) \leftarrow (PC) + 3 IF (A) $<>$ data THEN (PC) \leftarrow (PC) + relative offset IF (A) $<$ data THEN (C) \leftarrow 1 ELSE (C) \leftarrow 0	2	1 0 1 1 0 1 0 0 d d d d d d d d 0 0 0 0 0 0 0 0		C If immediate data and A are not equal, jump to code address
CJNE A,data addr,code addr (PC) \leftarrow (PC) + 3 IF (A) $<>$ (data address) THEN (PC) \leftarrow (PC) + relative offset IF (A) $<$ (data address) THEN (C) \leftarrow 1 ELSE (C) \leftarrow 0	2	1 0 1 1 0 1 0 1 m m m m m m m m 0 0 0 0 0 0 0 0		C If contents of data address and A are not equal, jump to code address
CJNE Rr,#data,code addr (PC) \leftarrow (PC) + 3 IF (Rr) $<>$ data THEN (PC) \leftarrow (PC) + relative offset IF (Rr) $<$ data THEN (C) \leftarrow 1 ELSE (C) \leftarrow 0	2	1 0 1 1 1 r r r d d d d d d d d 0 0 0 0 0 0 0 0		C If immediate data and register are not equal, jump to code address
CLR A (A) \leftarrow 0	1	1 1 1 0 0 1 0 0	P	Set A to zero (0)
CLR C (C) \leftarrow 0	1	1 1 0 0 0 0 1 1		C Set C to zero (0)
CLR bit addr (bit address) \leftarrow 0	1	1 1 0 0 0 0 1 0 b b b b b b b b		Set bit to zero (0)
CPL A (A) \leftarrow NOT (A)	1	1 1 1 1 0 1 0 0	P	Complements each bit in A
CPL C (C) \leftarrow NOT (C)	1	1 0 1 1 0 0 1 1		C Complement C
CPL bit addr (bit address) \leftarrow NOT (bit address)	1	1 0 1 1 0 0 1 0 b b b b b b b b		Complement bit
DA A (See description in Chapter 3)	1	1 1 0 1 0 1 0 0	P C	Adjust A after a BCD add
DEC @Rr ((Rr)) \leftarrow ((Rr)) - 1	1	0 0 0 1 0 1 1 r		Decrement contents of indirect address
DEC A (A) \leftarrow (A) - 1	1	0 0 0 1 0 1 0 0	P	Decrement A
DEC Rr (Rr) \leftarrow (Rr) - 1	1	0 0 0 1 1 r r r		Decrement register
DEC data addr (data address) \leftarrow (data address) - 1	1	0 0 0 1 0 1 0 1 m m m m m m m m		Decrement contents of data address
DIV AB (AB) \leftarrow (A) / (B)	4	1 0 0 0 0 1 0 0	P OV C	Divide A by B (multiplication register)

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
DJNZ Rr,code addr (PC) \leftarrow (PC) + 2 (Rr) \leftarrow (Rr) - 1 IF (Rr) < 0 THEN (PC) \leftarrow (PC) + relative offset	2	1 1 0 1 1 r r r 0 0 0 0 0 0 0 0		Decrement register, if not zero (0), then jump to code address
DJNZ data addr,code addr (PC) \leftarrow (PC) + 3 (data address) \leftarrow (data address) - 1 IF (data address) = 0 THEN (PC) \leftarrow (PC) + relative offset	2	1 1 0 1 0 1 0 1 m m m m m m m m 0 0 0 0 0 0 0 0		Decrement data address, if zero (0), then jump to code address
INC @Rr ((Rr)) \leftarrow ((Rr)) + 1	1	0 0 0 0 0 1 1 r		Increment contents of indirect address
INC A (A) \leftarrow (A) + 1	1	0 0 0 0 0 1 0 0	P	Increment A
INC DPTR (DPTR) \leftarrow (DPTR) + 1	1	1 0 1 0 0 0 1 1		Increment 16-bit data pointer
INC Rr ((R) \leftarrow (Rr) + 1	1	0 0 0 0 1 r r r		Increment register
INC data addr (data address) \leftarrow (data address) + 1	2	0 0 0 0 0 1 0 1 m m m m m m m m		Increment contents of data address
JB bit addr,code addr (PC) \leftarrow (PC) + 3 IF (bit address) = 1 THEN (PC) \leftarrow (PC) + relative offset	2	0 0 1 0 0 0 0 0 b b b b b b b b 0 0 0 0 0 0 0 0		If bit is one, n jump to code address
JBC bit addr,code addr (PC) \leftarrow (PC) + 3 IF (bit address) = 1 THEN (PC) \leftarrow (PC) + relative offset (bit address) \leftarrow 0	2	0 0 0 1 0 0 0 0 b b b b b b b b 0 0 0 0 0 0 0 0		If bit is one, n clear bit and jump to code address
JC code addr (PC) \leftarrow (PC) + 2 IF (C) = 1 THEN (PC) \leftarrow (PC) + relative offset	2	0 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0		If C is one, then jump to code address
JMP @A+DPTR (PC) \leftarrow (A) + (DPTR)	2	0 1 1 1 0 0 1 1		Add A to data pointer and jump to that code address
JNB bit addr,code addr (PC) \leftarrow (PC) + 3 IF (bit address) = 0 THEN (PC) \leftarrow (PC) + relative offset	2	0 0 1 1 0 0 0 0 b b b b b b b b 0 0 0 0 0 0 0 0		If bit is zero, n jump to code address
JNC code addr (PC) \leftarrow (PC) + 2 IF (C) = 0 THEN (PC) \leftarrow (PC) + relative offset	2	0 1 0 1 0 0 0 0 0 0 0 0 0 0 0 0		If C is zero (0), n jump to code address
JNZ code addr (PC) \leftarrow (PC) + 2 IF (A) < 0 THEN (PC) \leftarrow (PC) + relative offset	2	0 1 1 1 0 0 0 0 0 0 0 0 0 0 0 0		If A is not zero (0), n jump to code address

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
JZ code addr (PC) \leftarrow (PC) + 2 IF (A) = 0 THEN (PC) \leftarrow (PC) + relative offset	2	0 1 1 0 0 0 0 0 0 0 0 0 0 0 0 0		If A is zero (0), then jump to code address
LCALL code addr (PC) \leftarrow (PC) + 3 (SP) \leftarrow (SP) + 1 ((SP)) \leftarrow ((PC)) low (SP) \leftarrow (SP) + 1 ((SP)) \leftarrow (PC) high (PC) \leftarrow code address	2	0 0 0 1 0 0 1 0 1 1 1 1 1 1 1 ↑ 1 1 1 1 1 1 1 ↑		Push PC on stack and replace entire PC value with code address
LJMP code addr (PC) \leftarrow code address	2	0 0 0 0 0 0 1 0 1 1 1 1 1 1 1 ↑ 1 1 1 1 1 1 1 ↑		Jump to code address
MOV @Rr,#data ((Rr)) \leftarrow data	1	0 1 1 1 0 1 1 r d d d d d d d d		Move immediate data to indirect address
MOV @Rr,A ((Rr)) \leftarrow (A)	1	1 1 1 1 0 1 1 r		Move A to indirect address
MOV @Rr,data addr ((Rr)) \leftarrow (data address)	2	1 0 1 0 0 1 1 r m m m m m m m m		Move contents of data address to indirect address
MOV A,#data (A) \leftarrow data	1	0 1 1 1 0 1 0 0 d d d d d d d d	P	Move immediate data to A
MOV A,@Rr (A) \leftarrow ((Rr))	1	1 1 1 0 0 1 1 r	P	Move contents of indirect address to A
MOV A,Rr (A) \leftarrow (Rr)	1	1 1 1 0 1 r r r	P	Move register to A
MOV A,data addr (A) \leftarrow (data address)	1	1 1 1 0 0 1 0 1 m m m m m m m m	P	Move contents of data address to A
MOV C,bit addr (C) \leftarrow (bit address)	1	1 0 1 0 0 0 1 0 b b b b b b b b	C	Move bit to C
MOV DPTR,#data (DPTR) \leftarrow data	2	1 0 0 1 0 0 0 0 d d d d d d d d ↑ d d d d d d d d ↑		Move two bytes of immediate data pointer
MOV Rr,#data (Rr) \leftarrow data	1	0 1 1 1 1 r r r d d d d d d d d		Move immediate data to register
MOV Rr,A (Rr) \leftarrow (A)	1	1 1 1 1 1 r r r		Move A to register
MOV Rr,data addr (Rr) \leftarrow (data address)	2	1 0 1 0 1 r r r m m m m m m m m		Move contents of data address to register
MOV bit addr,C (bit address) \leftarrow (C)	2	1 0 0 1 0 0 1 0 b b b b b b b b		Move C to bit
MOV data addr,#data (data address) \leftarrow data	2	0 1 1 1 0 1 0 1 m m m m m m m m d d d d d d d d		Move immediate data to data address
MOV data addr,@Rr (data address) \leftarrow ((Rr))	2	1 0 0 0 0 1 1 r m m m m m m m m		Move contents of indirect address to data address
MOV data addr,A (data address) \leftarrow (A)	1	1 1 1 1 0 1 0 1 m m m m m m m m		Move A to data address

^t The high order byte of the 16-bit operand is in the first byte following the opcode. The low order byte is in the second byte following the opcode.

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
MOV data addr,Rr (data address) ← (Rr)	2	1 0 0 0 1 r r r mmmmmmmm		Move register to data address
MOV data addr1,data addr2 (data address1) ← (data address2)	2	1 0 0 0 0 1 0 1 mmmmmmmm* mmmmmmmm*		Move contents of second data address to first data address
MOVC A,@A+DPTR (A) ← ((A) + (DPTR))	2	1 0 0 1 0 0 1 1	P	Add A to DPTR and move contents of that code address with A
MOVC A,@A+PC (A) ← ((A) + (PC))	2	1 0 0 0 0 0 1 1	P	Add A to PC and move contents of that code address with A
MOVX @DPTR,A ((DPTR)) ← (A)	2	1 1 1 1 0 0 0 0		Move A to external data location addressed by DPTR
MOVX @Rr,A ((Rr)) ← (A)	2	1 1 1 1 0 0 1 r		Move A to external data location addressed by register
MOVX A,@DPTR (A) ← ((DPTR))	2	1 1 1 0 0 0 0 0	P	Move contents of external data location addressed by DPTR to A
MOVX A,@Rr (A) ← ((Rr))	2	1 1 1 0 0 0 1 r	P	Move contents of external data location addressed by register to A
MUL AB (AB) ← (A) * (B)	4	1 0 1 0 0 1 0 0	P OV C	Multiply A by B (multiplication register)
NOP	1	0 0 0 0 0 0 0 0		Do nothing
ORL A,#data (A) ← (A) OR data	1	0 1 0 0 0 1 0 0 d d d d d d d d	P	Logical OR immediate data to A
ORL A,@Rr (A) ← (A) OR ((Rr))	1	0 1 0 0 0 1 1 r	P	Logical OR contents of indirect address to A
ORL A,Rr (A) ← (A) OR (Rr)	1	0 1 0 0 1 r r r	P	Logical OR register to A
ORL A,data addr (A) ← (A) OR (data address)	1	0 1 0 0 0 1 0 1 mmmmmmmm	P	Logical OR contents of data address to A
ORL C,bit addr (C) ← (C) OR (bit address)	2	0 1 1 1 0 0 1 0 b b b b b b b b	C	Logical OR bit to C
ORL C,!bit addr (C) ← (C) OR NOT (bit address)	2	1 0 1 0 0 0 0 0 b b b b b b b b	C	Logical OR complement of bit to C
ORL data addr,#data (data address) ← (data address) OR data	2	0 1 0 0 0 0 1 1 mmmmmmmm d d d d d d d d		Logical OR immediate data to data address
ORL data addr,A (data address) ← (data address) OR A	1	0 1 0 0 0 0 1 0 mmmmmmmm		Logical OR A to data address

* The source data address (second data address) is encoded in the first byte following the opcode. The destination data address is encoded in the second byte following the opcode.

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P O V A C C	Function
POP <i>data addr</i> <i>(data address) ← ((SP))</i> <i>(SP) ← (SP) - 1</i>	2	1 1 0 1 0 0 0 0 mmmmmmmm		Place top of stack at data address and decrement SP
PUSH <i>data addr</i> <i>(SP) ← (SP) + 1</i> <i>((SP)) ← (data address)</i>	2	1 1 0 0 0 0 0 0 mmmmmmmm		Increment SP and place contents of data address at top of stack
RET <i>(PC) high ← ((SP))</i> <i>(SP) ← (SP) - 1</i> <i>(PC) low ← ((SP))</i> <i>(SP) ← (SP) - 1</i>	2	0 0 1 0 0 0 1 0		Return from subroutine call
RETI <i>(PC) high ← ((SP))</i> <i>(SP) ← (SP) - 1</i> <i>(PC) low ← ((SP))</i> <i>(SP) ← (SP) - 1</i>	2	0 0 1 1 0 0 1 0		Return from interrupt routine
RL A (See description in Chapter 3)	1	0 0 1 0 0 0 1 1		Rotate A left one position
RLC A (See description in Chapter 3)	1	0 0 1 1 0 0 1 1	P C	Rotate A through C left one position
RR A (See description in Chapter 3)	1	0 0 0 0 0 0 1 1		Rotate A right one position
RRC A (See description in Chapter 3)	1	0 0 0 1 0 0 1 1	P C	Rotate A through C right one position
SETB C <i>(C) ← 1</i>	1	1 1 0 1 0 0 1 1		C Set C to one (1)
SETB <i>bit addr</i> <i>(bit address) ← 1</i>	1	1 1 0 1 0 0 1 0 b b b b b b b		Set bit to one (1)
SJMP <i>code addr</i> <i>(PC) ← (PC) + relative offset</i>	2	1 0 0 0 0 0 0 0 o o o o o o o		Jump to code address
SUBB A,<#data <i>(A) ← (A) - (C) - data</i>	1	1 0 0 1 0 1 0 0 d d d d d d d	P O V A C C	Subtract immediate data from A
SUBB A,@Rr <i>(A) ← (A) - (C) - ((Rr))</i>	1	1 0 0 1 0 1 1 r	P O V A C C	Subtract contents of indirect address from A
SUBB A,Rr <i>(A) ← (A) - (C) - (Rr)</i>	1	1 0 0 1 1 r r r	P O V A C C	Subtract register from A
SUBB A, <i>data addr</i> <i>(A) ← (A) - (C) - (data address)</i>	1	1 0 0 1 0 1 0 1 mmmmmmmm	P O V A C C	Subtract contents of data address from A
SWAP A (See description in Chapter 3)	1	1 1 0 0 0 1 0 0		Exchange low order nibble with high order nibble in A
XCH A,@Rr <i>temp ← ((Rr))</i> <i>((Rr)) ← (A)</i> <i>(A) ← temp</i>	1	1 1 0 0 0 1 1 r	P	Move A to indirect address and vice versa
XCH A,Rr <i>temp ← (Rr)</i> <i>(Rr) ← (A)</i> <i>(A) ← temp</i>	1	1 1 0 0 1 r r r	P	Move A to register and vice versa
XCH A, <i>data addr</i> <i>temp ← (data address)</i> <i>(data address) ← (A)</i> <i>(A) ← temp</i>	1	1 1 0 0 0 1 0 1 mmmmmmmm	P	Move A to data address and vice versa

Table B-1. Instruction Set Summary (Cont'd.)

Mnemonic Operation	Cycles	Binary Code	Flags P OV AC C	Function
XCHD A,@Rr <i>temp</i> \leftarrow ((Rr)) 0-3 ((Rr)) 0-3 \leftarrow (A) 0-3 (A) 0-3 \leftarrow <i>temp</i>	1	1 1 0 1 0 1 1 r	P	Move low order of A to low order nibble of indirect address and vice versa
XRL A,#data (A) \leftarrow (A) XOR data	1	0 1 1 0 0 1 0 0 d d d d d d d d	P	Logical exclusive OR immediate data to A
XRL A,@Rr (A) \leftarrow (A) XOR ((Rr))	1	0 1 1 0 0 1 1 r	P	Logical exclusive OR contents of indirect address to A
XRL A,Rr (A) \leftarrow (A) XOR (Rr)	1	0 1 1 0 1 r r r	P	Logical exclusive OR register to A
XRL A,data addr (A) \leftarrow (A) XOR (data address)	1	0 1 1 0 0 1 0 1 mmmmmmmm	P	Logical exclusive OR contents of data address to A
XRL data addr,#data (data address) \leftarrow (data address) XOR data	2	0 1 1 0 0 0 1 1 mmmmmmmm d d d d d d d		Logical exclusive OR immediate data to data address
XRL data addr,A (data address) \leftarrow (data address) XOR A	1	0 1 1 0 0 0 1 0 mmmmmmmm		Logical exclusive OR A to data address

Table B-2. Instruction Opcodes in Hexadecimal

Hex Code	Number of Bytes	Mnemonic	Operands
00	1	NOP	
01	2	AJMP	<i>code addr</i>
02	3	LJMP	<i>code addr</i>
03	1	RR	A
04	1	INC	A
05	2	INC	<i>data addr</i>
06	1	INC	@R0
07	1	INC	@R1
08	1	INC	R0
09	1	INC	R1
0A	1	INC	R2
0B	1	INC	R3
0C	1	INC	R4
0D	1	INC	R5
0E	1	INC	R6
0F	1	INC	R7
10	3	JBC	<i>bit addr, code addr</i>
11	2	ACALL	<i>code addr</i>
12	3	LCALL	<i>code addr</i>
13	1	RRC	A
14	1	DEC	A
15	2	DEC	<i>data addr</i>
16	1	DEC	@R0
17	1	DEC	@R1
18	1	DEC	R0
19	1	DEC	R1
1A	1	DEC	R2
1B	1	DEC	R3
1C	1	DEC	R4
1D	1	DEC	R5
1E	1	DEC	R6
1F	1	DEC	R7
20	3	JB	<i>bit addr, code addr</i>
21	2	AJMP	<i>code addr</i>
22	1	RET	
23	1	RL	A
24	2	ADD	A, <i>#data</i>
25	2	ADD	A, <i>data addr</i>
26	1	ADD	A,@R0
27	1	ADD	A,@R1
28	1	ADD	A,R0
29	1	ADD	A,R1
2A	1	ADD	A,R2
2B	1	ADD	A,R3
2C	1	ADD	A,R4
2D	1	ADD	A,R5
2E	1	ADD	A,R6
2F	1	ADD	A,R7
30	3	JNB	<i>bit addr, code addr</i>
31	2	ACALL	<i>code addr</i>
32	1	RETI	
33	1	RLC	A
34	2	ADDC	A, <i>#data</i>
35	2	ADDC	A, <i>data addr</i>
36	1	ADDC	A,@R0
37	1	ADDC	A,@R1
38	1	ADDC	A,R0
39	1	ADDC	A,R1
3A	1	ADDC	A,R2
3B	1	ADDC	A,R3

Table B-2. Instruction Opcodes in Hexadecimal (Cont'd.)

Hex Code	Number of Bytes	Mnemonic	Operands
3C	1	ADDC	A,R4
3D	1	ADDC	A,R5
3E	1	ADDC	A,R7
3F	1	ADDC	A,R7
40	2	JC	<i>code addr</i>
41	2	AJMP	<i>code addr</i>
42	2	ORL	<i>data addr,A</i>
43	3	ORL	<i>data addr,#data</i>
44	2	ORL	A,#data
45	2	ORL	A,data addr
46	1	ORL	A,@R0
47	1	ORL	A,@R1
48	1	ORL	A,R0
49	1	ORL	A,R1
4A	1	ORL	A,R2
4B	1	ORL	A,R3
4C	1	ORL	A,R4
4D	1	ORL	A,R5
4E	1	ORL	A,R6
4F	1	ORL	A,R7
50	2	JNC	<i>code addr</i>
51	2	ACALL	<i>code addr</i>
52	2	ANL	<i>data addr,A</i>
53	3	ANL	<i>data addr,#data</i>
54	2	ANL	A,#data
55	2	ANL	A,data addr
56	1	ANL	A,@R0
57	1	ANL	A,@R1
58	1	ANL	A,R0
59	1	ANL	A,R1
5A	1	ANL	A,R2
5B	1	ANL	A,R3
5C	1	ANL	A,R4
5D	1	ANL	A,R5
5E	1	ANL	A,R6
5F	1	ANL	A,R7
60	2	JZ	<i>code addr</i>
61	2	AJMP	<i>code addr</i>
62	2	XRL	<i>data addr,A</i>
63	3	XRL	<i>data addr,#data</i>
64	2	XRL	A,#data
65	2	XRL	A,data addr
66	1	XRL	A,@R0
67	1	XRL	A,@R1
68	1	XRL	A,R0
69	1	XRL	A,R1
6A	1	XRL	A,R2
6B	1	XRL	A,R3
6C	1	XRL	A,R4
6D	1	XRL	A,R5
6E	1	XRL	A,R6
6F	1	XRL	A,R7
70	2	JNZ	<i>code addr</i>
71	2	ACALL	<i>code addr</i>
72	2	ORL	C,bit addr
73	1	JMP	@A+DPTR
74	2	MOV	A,#data
75	3	MOV	<i>data addr,#data</i>
76	2	MOV	@R0,#data
77	2	MOV	@R1,#data

Table B-2. Instruction Opcodes in Hexadecimal (Cont'd.)

Hex Code	Number of Bytes	Mnemonic	Operands
78	2	MOV	R0,#data
79	2	MOV	R1,#data
7A	2	MOV	R2,#data
7B	2	MOV	R3,#data
7C	2	MOV	R4,#data
7D	2	MOV	R5,#data
7E	2	MOV	R6,#data
7F	2	MOV	R7,#data
80	2	SJMP	code addr
81	2	AJMP	code addr
82	2	ANL	C,bit addr
83	1	MOVC	A,@ A + PC
84	1	DIV	AB
85	3	MOV	data addr,data addr
86	2	MOV	data addr,@R0
87	2	MOV	data addr,@R1
88	2	MOV	data addr,R0
89	2	MOV	data addr,R1
8A	2	MOV	data addr,R2
8B	2	MOV	data addr,R3
8C	2	MOV	data addr,R4
8D	2	MOV	data addr,R5
8E	2	MOV	data addr,R6
8F	2	MOV	data addr,R7
90	3	MOV	DPTR,#data
91	2	ACALL	code addr
92	2	MOV	bit addr,C
93	1	MOVC	A,@ A + DPTR
94	2	SUBB	A,#data
95	2	SUBB	A,data addr
96	1	SUBB	A,@R0
97	1	SUBB	A,@R1
98	1	SUBB	A,R0
99	1	SUBB	A,R1
9A	1	SUBB	A,R2
9B	1	SUBB	A,R3
9C	1	SUBB	A,R4
9D	1	SUBB	A,R5
9E	1	SUBB	A,R6
9F	1	SUBB	A,R7
A0	2	ORL	C,/bit addr
A1	2	AJMP	code addr
A2	2	MOV	C,bit addr
A3	1	INC	DPTR
A4	1	MUL	AB
A5		reserved	
A6	2	MOV	@R0,data addr
A7	2	MOV	@R1,data addr
A8	2	MOV	R0,data addr
A9	2	MOV	R1,data addr
AA	2	MOV	R2,data addr
AB	2	MOV	R3,data addr
AC	2	MOV	R4,data addr
AD	2	MOV	R5,data addr
AE	2	MOV	R6,data addr
AF	2	MOV	R7,data addr
B0	2	ANL	C,/bit addr
B1	2	ACALL	code addr
B2	2	CPL	bit addr
B3	1	CPL	C

Table B-2. Instruction Opcodes in Hexadecimal (Cont'd.)

Hex Code	Number of Bytes	Mnemonic	Operands
B4	3	CJNE	A,#data,code addr
B5	3	CJNE	A,data addr,code addr
B6	3	CJNE	@R0,#data,code addr
B7	3	CJNE	@R1,#data,code addr
B8	3	CJNE	R0,#data,code addr
B9	3	CJNE	R1,#data,code addr
BA	3	CJNE	R2,#data,code addr
BB	3	CJNE	R3,#data,code addr
BC	3	CJNE	R4,#data,code addr
BD	3	CJNE	R5,#data,code addr
BE	3	CJNE	R6,#data,code addr
BF	3	CJNE	R7,#data,code addr
C0	2	PUSH	data addr
C1	2	AJMP	code addr
C2	2	CLR	bit addr
C3	1	CLR	C
C4	1	SWAP	A
C5	2	XCH	A,data addr
C6	1	XCH	A,@R0
C7	1	XCH	A,@R1
C8	1	XCH	A,R0
C9	1	XCH	A,R1
CA	1	XCH	A,R2
CB	1	XCH	A,R3
CC	1	XCH	A,R4
CD	1	XCH	A,R5
CE	1	XCH	A,R6
CF	1	XCH	A,R7
D0	2	POP	data addr
D1	2	ACALL	code addr
D2	2	SETB	bit addr
D3	1	SETB	C
D4	1	DA	A
D5	3	DJNZ	data addr,code addr
D6	1	XCHD	A,@R0
D7	1	XCHD	A,@R1
D8	2	DJNZ	R0,code addr
D9	2	DJNZ	R1,code addr
DA	2	DJNZ	R2,code addr
DB	2	DJNZ	R3,code addr
DC	2	DJNZ	R4,code addr
DD	2	DJNZ	R5,code addr
DE	2	DJNZ	R6,code addr
DF	2	DJNZ	R7,code addr
E0	1	MOVX	A,@DPTR
E1	2	AJMP	code addr
E2	1	MOVX	A,@R0
E3	1	MOVX	A,@R1
E4	1	CLR	A
E5	2	MOV	A,data addr
E6	1	MOV	A,@R0
E7	1	MOV	A,@R1
E8	1	MOV	A,R0
E9	1	MOV	A,R1
EA	1	MOV	A,R2
EB	1	MOV	A,R3
EC	1	MOV	A,R4
ED	1	MOV	A,R5
EE	1	MOV	A,R6
EF	1	MOV	A,R7

Table B-2. Instruction Opcodes in Hexadecimal (Cont'd.)

Hex Code	Number of Bytes	Mnemonic	Operands
F0	1	MOVX	@DPTR,A
F1	2	ACALL	<i>code addr</i>
F2	1	MOVX	@R0,A
F3	1	MOVX	@R1,A
F4	1	CPL	A
F5	2	MOV	<i>data addr</i> ,A
F6	1	MOV	@R0,A
F7	1	MOV	@R1,A
F8	1	MOV	R0,A
F9	1	MOV	R1,A
FA	1	MOV	R2,A
FB	1	MOV	R3,A
FC	1	MOV	R4,A
FD	1	MOV	R5,A
FE	1	MOV	R6,A
FF	1	MOV	R7,A



APPENDIX C ASSEMBLER DIRECTIVE SUMMARY

Table C-1 lists all the MCS-51 Macro Assembly Language directives. The format for each directive is shown along with a brief description of its operation. Complete descriptions of all directives are given in Chapter 4.

Table C-1. Assembler Directives

Directive	Format	Description
BIT	<i>symbol_name BIT bit address</i>	Defines a bit address in bit data space.
BSEG	BSEG [AT <i>absolute_address</i>]	Defines an absolute segment within the bit address space.
CODE	<i>symbol_name CODE expression</i>	Assigns a symbol name to a specific address in the code space.
CSEG	CSEG [AT <i>absolute_address</i>]	Defines an absolute segment within the code address space.
DATA	<i>symbol_name DATA expression</i>	Assigns a symbol name to a specific on-chip data address.
DB	[<i>label</i> :] DB <i>expression_list</i>	Generates a list of byte values.
DBIT	[<i>label</i> :] DBIT <i>expression</i>	Reserves a space in bit units in a BIT type segment.
DS	[<i>label</i> :] DS <i>expression</i>	Reserves space in byte units; advances the location counter of the current segment.
DSEG	DSEG [AT <i>absolute_address</i>]	Defines an absolute segment within the indirect internal data space.
DW	[<i>label</i> :] DW <i>expression_list</i>	Generates a list of word values.
END	END	Indicates end of program.
EQU	<i>symbol_name EQU expression</i> or <i>symbol_name EQU special_assembler_symbol</i>	Set symbol value permanently.
EXTRN	EXTRN <i>segment_type (symbol_names_list)</i>	Defines symbols referenced in the current module that are defined in other modules.
IDATA	<i>symbol_name IDATA expression</i>	Assigns a symbol name to a specific indirect internal address.
ISEG	ISEG [AT <i>absolute_address</i>]	Defines an absolute segment within the internal data space.
NAME	NAME <i>module_name</i>	Specifies the name of the current module.
ORG	ORG <i>expression</i>	Sets the location counter of the current segment.
PUBLIC	PUBLIC <i>list_of_names</i>	Identifies symbols which can be used outside the current module.
RSEG	RSEG <i>segment_name</i>	Selects a relocatable segment.
SEGMENT	<i>symbol_name SEGMENT segment_type relocatability</i>	Defines a relocatable segment.
SET	<i>symbol_name SET expression</i> or <i>symbol_name SET special_assembler_symbol</i>	Sets symbol value temporarily.

Table C-1. Assembler Directives (Cont'd.)

Directive	Format	Description
USING	USING <i>expression</i>	Sets the predefined symbolic register address and causes the assembler to reserve space for the specified register bank.
XDATA	<i>symbol_name</i> XDATA <i>expression</i>	Assigns a symbol name to a specific off-chip data address.
XSEG	XSEG [AT <i>absolute_address</i>]	Defines an absolute segment within the external data address space.



APPENDIX D ASSEMBLER CONTROL SUMMARY

The table below contains all of the MCS-51 Macro assembler controls, their meaning, their defaults and their abbreviations. The table also defines whether the control is primary or general. (Primary controls must only appear at the head of the program or in the invocation lines; general controls may appear anywhere in the program.)

Table D-1. Assembler Controls

Name	Primary/ General	Default	Abbrev.	Meaning
DATE(<i>date</i>)	P	DATE()	DA	Places string in header (max 9 characters)
DEBUG	P	NODEBUG	DB	Outputs debug symbol information to object file
NODEBUG	P		NODB	Symbol information not placed in object file
EJECT	G	<i>Not Applicable</i>	EJ	Continue listing on next page
ERRORPRINT[<i>(FILE)</i>]	P	NOERRORPRINT	EP	Designates a file to receive error messages in addition to the listing file. <i>File</i> defaults to :co:
NOERRORPRINT	P		NOEP	Designates that error messages will be printed in listing file
GEN	G	GENONLY	GE	Generates a full listing of the macro expansion process including macro calls in the listing file
GENONLY	G		GO	List only the fully expanded source as if all lines generated by a macro call were already in source file
NOGEN	G		NOGE	List only the original source text in listing file
INCLUDE(<i>FILE</i>)	G	<i>Not Applicable</i>	IC	Designates a file to be included as part of the program
LIST	G	LIST	LI	Print subsequent lines of source in listing file
NOLIST	G		NOLI	Do not print subsequent lines of source in listing file
MACRO [<i>mempercent</i>])	P	MACRO(50)	MR	Evaluate and expand all macro calls. Allocate percentage of free memory for macro processor
NOMACRO	P		NOMR	Do not evaluate macro calls
OBJECT[<i>(FILE)</i>])	P	OBJECT(<i>source.OBJ</i>)	OJ	Designate file to receive object code
NOOBJECT	P		NOOJ	Designates that no object file will be created
PAGING	P	PAGING	PI	Designates that listing will be broken into pages and each will have a header
NOPAGING	P		NOPI	Designates that listing will contain no page breaks
PAGELENGTH(<i>n</i>)	P	PAGELENGTH(60)	PL	Sets maximum number of lines in each page of listing file (maximum = 65,535) (minimum = 10)
PAGEWIDTH(<i>n</i>)	P	PAGEWIDTH(120)	PW	Sets maximum number of characters in each line of listing file (maximum = 132; minimum = 80)

Table D-1. Assembler Controls (Cont'd.)

Name	Primary/ General	Default	Abbrev.	Meaning
PRINT[(FILE)]	P	PRINT(source.LST)	PR	Designates file to receive source listing
NOPRINT	P		NOPR	Designates that no listing file will be created
SAVE	G	Not Applicable	SA	Stores current control setting for LIST and GEN
RESTORE	G		RS	Restores control setting from SAVE stack
REGISTERBANK(rb,...) rb = 0, 1, 2, 3	P	REGISTERBANK(0)	RB	Indicates one or more banks used in program module
NOREGISTERBANK	P		NORB	Indicates that no banks are used.
SYMBOLS	P	SYMBOLS	SB	Creates a formatted table of all symbols used in program
NOSYMBOLS	P		NOSB	No symbol table created
TITLE(string)	G	TITLE()	TT	Places a string in all subsequent page headers (maximum 60 characters)
WORKFILES(:Fn:[,;F m:])	P	<i>same drive as source file</i>	WF	Designates alternate drives for temporary workfiles
XREF	P	NOXREF	XR	Creates a cross reference listing of all symbols used in program
NOXREF	P		NOXR	No cross reference list created



APPENDIX E

MPL BUILT-IN FUNCTIONS

The following is a list of all MPL built-in functions.

%'text end-of-line or %'text'
%(balanced-text)
%*DEFINE(call-pattern)[/local-symbol-list](macro-body)
%*DEFINE(macro-name [parameter-list]) [LOCAL local-list] (macro-body)
%n text-n-characters-long
%EQS(arg1,arg2)
%EVAL(expression)
%EXIT
%GES(arg1,arg2)
%GTS(arg1,arg2)
%IF (expression) THEN (balanced-test1) [ELSE (balanced-test2)] FI
%IN
%LEN(balanced-text)
%LES(arg1,arg2)
%LTS(arg1,arg2)
%MATCH(identifier1 delimiter identifier2) (balanced-text)
%METACHAR(balanced-text)
%NES(arg1,arg2)
%OUT(balanced-text)
%REPEAT (expression) (balanced-text)
%SET(macro-id,expression)
%SUBSTR(balanced-text,expression1,expression2)
%WHILE (expression) (balanced-text)



APPENDIX F RESERVED SYMBOLS

The following is a list of all of the MCS-51 Macro Assembly Language reserved symbols. They can not be used as symbol names or for any other purpose in your program.

Operators				
AND	GT	LOW	NE	SHL
EQ				
GE	HIGH	LT	NOT	SHR
	LE	MOD	OR	XOR
Opcodes				
ACALL	DEC	JNC	NOP	RRC
ADD	DIV	JNZ	ORL	SETB
ADDC	DJNZ	JZ	POP	SJMP
AJMP	INC	LCALL	PUSH	SUBB
ANL	JB	LJMP	RET	SWAP
CJNE	JBC	MOV	RETI	XCH
CLR	JC	MOVC	RL	XCHD
CPL	JMP	MOVX	RLC	XRL
DA	JNB	MUL	RR	
Operands				
A	EXTI1	PC	RD	TB8
AB	F0	PS	REN	TCON
AC	IE	PSW	RESET	TF0
ACC	IE0	PT0	RI	TF1
B	IE1	PT1	RS0	TH0
C	IP	PX0	RS1	TH1
CY	INT0	PX1	RXD	TI
DPH	INT1	R0	SBUF	TIMER0
DPL	IT0	R1	SCON	TIMER1
DPTR	IT1	R2	SINT	TL0
EA	OV	R3	SM0	TL1
ES	P	R4	SM1	TMOD
ET0	P0	R5	SM2	TR0
ET1	P1	R6	SP	TR1
EX0	P2	R7	T0	TXD
EX1	P3	RB8	T1	WR
EXTI0	P4			
Symbolic Register Addresses				
AR0	AR2	AR4	AR6	
AR1	AR3	AR5	AR7	
Directives				
BIT	DB	END	NAME	SET
BSEG	DBIT	EQU	ORG	USING
CODE	DS	EXTRN	PUBLIC	XDATA
CSEG	DSEG	IDATA	RSEG	XSEG
DATA	DW	ISEG	SEGMENT	



APPENDIX G SAMPLE PROGRAM

The following is a fully expanded listing file of an MCS-51 Macro Assembly Language program. This example includes three modules and their associated symbol table listings.

MCS-51 MACRO ASSEMBLER SAMPLE

PAGE 1

ISIS-II MCS-51 MACRO ASSEMBLER V2.0
OBJECT MODULE PLACED IN :F1:SAMP1.OBJ
ASSEMBLER INVOKED BY: ASM51 :F1:SAMP1.A51 DEBUG

LOC	OBJ	LINE	SOURCE
		1	NAME SAMPLE
		2	;
		3	EXTRN code (put_crlf, put_string, put_data_str, get_num)
		4	EXTRN code (binasc, ascbin)
		5	;
----		6	CSEG
		7	; This is the initializing section. Execution always
		8	; starts at address 0 on power-up.
0000		9	ORG 0
0000 758920		10	mov TMOD,#00100008 ; set timer mode to auto-reload
0003 758003		11	mov TH1,#(-253) ; set timer for 110 BAUD
0036 75980A		12	mov SCON,#11011010B ; prepare the Serial Port
0009 328E		13	setb TR1 ; start clock
		14	;
		15	; This is the main program. It's an infinite loop,
		16	; where each iteration prompts the console for 2
		17	input numbers and types out their sum.
		18	START:
		19	; type message explaining how to correct a typo
0003 900000	F	20	mov DPTR,#typo_msg
000E 120000	F	21	call put_string
0011 120000	F	22	call put_crlf
0014 900000	F	23	; get first number from console
0017 120000	F	24	mov DPTR,#num1_msg
001A 120000	F	25	call put_string
001D 7800	F	26	call put_crlf
001F 120000	F	27	mov R0,#num1
0022 120000	F	28	call get_num
0025 900003	F	29	call put_crlf
0028 120000	F	30	; get second number from console
002B 120000	F	31	mov DPTR,#num2_msg
002E 7800	F	32	call put_string
0030 120000	F	33	call put_crlf
0033 120000	F	34	mov R0,#num2
0036 7900	F	35	call get_num
0038 120000	F	36	call put_crlf
003A 120000	F	37	; convert the ASCII numbers to binary
0040 E500	F	38	mov R1,#num1
0042 2500	F	39	call ascbin
0044 F500	F	40	mov R1,#num2
0046 7900	F	41	call ascbin
0048 120000	F	42	; add the 2 numbers, and store the results in SUM
004B 900000	F	43	mov A,num1
		44	add A,num2
		45	mov sum,A
		46	; convert SUM from binary to ASCII
		47	mov R1,#sum
		48	call binasc
		49	; output sum to console
		50	mov DPTR,#sum_msg

Figure G-1. Sample Relocatable Program

MCS-51 MACRO ASSEMBLER SAMPLE

PAGE 2

LOC	OBJ	LINE	SOURCE
004E	120000	51	call put_string
0051	7900	52	mov R1,#sum
0053	7A04	53	mov R2,#4
0055	120000	54	call put_data_str
0058	80B1	55	jmp start
		56	;
----		57	DSEG at 8
0008		58	STACK: ds 8 ; at power-up the stack pointer is
		59	; initialized to point here
		60	;
		61	DATA_AREA segment DATA
		62	CONSTANT_AREA segment CODE
		63	;
----		64	RSEG data_area
0000		65	NUM1: ds 4
0004		66	NUM2: ds 4
0008		67	SUM: ds 4
		68	;
----		69	RSEG constant_area
0000	54595045	70	TYPO_MSG: db 'TYPE ^X TO RETYPE A NUMBER',00H
0004	205E5820		
0008	544F2052		
000C	45545950		
0010	45204120		
0014	4E554D42		
0018	4552		
001A	00		
001B	54595045	71	NUM1_MSG: db 'TYPE IN FIRST NUMBER:',00H
001F	20494E20		
0023	46495253		
0027	54204E55		
002B	4D424552		
002F	3A20		
0031	00		
0032	54595045	72	NUM2_MSG: db 'TYPE IN SECOND NUMBER:',00H
0036	20494E20		
003A	5345434F		
003E	4E44204E		
0042	554D4245		
0046	523A20		
0049	00		
004A	54484520	73	SUM_MSG: db 'THE SUM IS ',00H
004E	53554D20		
0052	495320		
0055	00		
		74	;
		75	END

Figure G-1. Sample Relocatable Program (Cont'd.)

MCS-51 MACRO ASSEMBLER SAMPLE

PAGE 3

SYMBOL TABLE LISTING

N A M E	T Y P E	V A L U E	A T T R I B U T E S
ASCBIN. . . .	C ADDR	----	EXT
BINASC. . . .	C ADDR	----	EXT
CONSTANT_AREA	C SEG	0056H	REL=UNIT
DATA_AREA . . .	D SEG	000CH	REL=UNIT
GET_NUM	C ADDR	----	EXT
NUM1_MSG. . . .	C ADDR	0016H R	SEG=CONSTANT_AREA
NUM1.	D ADDR	0000H R	SEG=DATA_AREA
NUM2_MSG. . . .	C ADDR	0032H R	SEG=CONSTANT_AREA
NUM2.	D ADDR	0004H R	SEG=DATA_AREA
PUT_CRLF. . . .	C ADDR	----	EXT
PUT_DATA_STR.	C ADDR	----	EXT
PUT_STRING. . .	C ADDR	----	EXT
SAMPLE.	---	---	---
SCON.	D ADDR	0098H A	
STACK	D ADDR	0008H A	
START.	C ADDR	0008H A	
SUM_MSG.	C ADDR	004AH R	SEG=CONSTANT_AREA
SUM.	D ADDR	0008H R	SEG=DATA_AREA
TH1.	D ADDR	008DH A	
TMOD.	D ADDR	0089H A	
TR1.	B ADDR	0083H.6 A	
TYPO_MSG. . . .	C ADDR	0000H R	SEG=CONSTANT_AREA

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure G-1. Sample Relocatable Program (Cont'd.)

MCS-51 MACRO ASSEMBLER CONSOLE_ID

PAGE 1

ISIS-II MCS-51 MACRO ASSEMBLER V2.0
 OBJECT MODULE PLACED IN :F1:SAMP2.OBJ
 ASSEMBLER INVOKED BY: ASM51 :F1:SAMP2.A51 DEBUG

LOC	OBJ	LINE	SOURCE
		1	NAME CONSOLE_ID
		2	;
----		3	ID_ROUTINES segment CODE
		4	RSEG ID_ROUTINES
		5	; This is the console IO routine cluster.
		6	PUBLIC put_crlf, put_string, put_data_str, get_num
		7	USING 0
		8	;
		9	; This routine outputs a Carriage Return and
		10	; a Line Feed
		11	PUT_CRLF:
0000		12	CR equ 0DH ; carriage return
000A		13	LF equ 0AH ; line feed
		14	;
0000 740D		15	mov A,#cr
0002 120000 F		16	call put_char
0005 740A		17	mov A,#lf
0007 120000 F		18	call put_char
000A 22		19	ret
		20	;
		21	; Routine outputs a null-terminated string located
		22	; in CODE memory, whose address is given in DPTR.
		23	PUT_STRING:
0008 E4		24	clr A
000C 93		25	move A,@A+DPTR
000D 6006		26	jz exit
000F 120000 F		27	call put_char
0012 A3		28	inc DPTR
0013 80F6		29	jmp put_string
0015 22		30	EXIT:
		31	ret
		32	;
		33	; Routine outputs a string located in DATA memory,
		34	; whose address is in R1 and its length in R2.
		35	PUT_DATA_STR:
0016 E7		36	mov A,@R1
0017 120000 F		37	call put_char
001A 09		38	inc R1
001B DAF9		39	djnz R2,put_data_str
001D 22		40	ret
		41	;
		42	; This routine outputs a single character to console.
		43	; The character is given in A.
		44	PUT_CHAR:
001E 3099FD		45	jnb TI,\$
0021 C299		46	clr TI
0023 F599		47	mov SBUF,A
0025 22		48	ret
		49	;
		50	; This routine gets a 4 character string from console

Figure G-1. Sample Relocatable Program (Cont'd.)

MCS-51 MACRO ASSEMBLER CONSOLE_ID

PAGE 2

LOC	OBJ	LINE	SOURCE
		51	; and stores it in memory at the address given in R0.
		52	; If a ^X is received, routine starts over again.
		53	GET_NUM:
0026	7A04	54	mov R2,#4 ; set up string length as 4
0028	A900	55	mov R1,AR0 ; R0 value may be needed for restart
		56	GET_LOOP:
002A	120000	F	call get_char
		57	; Next 4 instructions handle ^X- the routine starts
		58	; over if received
002D	C2E7	60	clr A.7 ; clear the parity bit
002F	B41805	61	cjne A,#18H,GO_ON ; if not ^X- go on
0032	120000	F	call put_crlf
0035	80EF	63	jmp get_num
		64	GO_ON:
0037	F7	65	mov @R1,A
0038	09	66	inc R1
0039	DAEF	67	djnz R2,get_loop
003B	22	68	ret
		69	;
		70	; This routine gets a single character from console.
		71	; The character is returned in A.
		72	GET_CHAR:
003C	3098FD	73	jnb RI,\$
003F	C298	74	clr RI
0041	E599	75	mov A,SBUF
0043	22	76	ret
		77	;
		78	END

MCS-51 MACRO ASSEMBLER CONSOLE_ID

PAGE 3

SYMBOL TABLE LISTING

N A M E	T Y P E	V A L U E	A T T R I B U T E S
ACC	D ADDR	00E0H	A
AR0	D ADDR	0000H	A
CONSOLE_ID	----	----	----
CR	NUMB	0000H	A
EXIT	C ADDR	0015H	R
			SEG=IO_ROUTINES
GET_CHAR	C ADDR	003CH	R
			SEG=IO_ROUTINES
GET_LOOP	C ADDR	002AH	R
			SEG=IO_ROUTINES
GET_NUM	C ADDR	0026H	R PUB
			SEG=IO_ROUTINES
GO_ON	C ADDR	0037H	R
			SEG=IO_ROUTINES
IO_ROUTINES	C SEG	0044H	REL=UNIT
LF	NUMB	000AH	A
PUT_CHAR	C ADDR	001EH	R
			SEG=IO_ROUTINES
PUT_CRLF	C ADDR	0000H	R PUB
			SEG=IO_ROUTINES
PUT_DATA_STR	C ADDR	0016H	R PUB
			SEG=IO_ROUTINES
PUT_STRING	C ADDR	000SH	R PUB
			SEG=IO_ROUTINES
RI	B ADDR	0098H.0	A
SBUF	D ADDR	0099H	A
TI	B ADDR	0093H.1	A

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure G-1. Sample Relocatable Program (Cont'd.)

MCS-51 MACRO ASSEMBLER NUM_CONVERSION

PAGE 1

ISIS-II MCS-51 MACRO ASSEMBLER V2.0
 OBJECT MODULE PLACED IN :F1:SAMP3.OBJ
 ASSEMBLER INVOKED BY: ASM51 :F1:SAMP3.A51 DEBUG

LOC	OBJ	LINE	SOURCE
		1	NAME NUM_CONVERSION
		2	;
		3	NUM_ROUTINES segment CODE
		4	RSEG NUM_ROUTINES
		5	; This module handles conversion from ASCII to binary
		6	; and back. The binary numbers are signed one-byte
		7	; integers, i.e. their range is -128 to +127. Their
		8	; ASCII representation is always 4 characters long-
		9	; i.e. a sign followed by 3 digits.
		10	PUBLIC ascbin, binasc
		11	USING 0
0030		12	ZERO EQU '0'
002B		13	PLUS EQU '+'
002D		14	MINUS EQU '-'
		15	;
		16	; This routine converts ASCII to binary.
		17	; INPUT- a 4 character string pointed at by R1. The
		18	; number range must be -128 to +127, and the
		19	; string must have 3 digits preceded by a sign.
		20	; OUTPUT- a signed one-byte integer, located where
		21	; the input string started (pointed at by R1).
		22	ASCBIN:
0000 A801		23	mov R0,R1 ; R1 original value is needed later
		24	; Compute first digit value, and store it in TEMP
		25	TEMP equ R3
	REG	26	inc R0
0002 08		27	mov A,@R0
0003 E6		28	clr C
0004 C3		29	subb A,#zero
0005 9430		30	mov B,#100
0007 75F064		31	mul AB
000A A4		32	mov TEMP,A
000B FB		33	; Compute the second digit value
000C 08		34	inc R0
000D E6		35	mov A,@R0
000E 9430		36	subb A,#zero
0010 75F00A		37	mov B,#10
0013 A4		38	mul AB
		39	; Add the value of the second digit to num.
0014 2B		40	add A,TEMP
0015 FB		41	mov TEMP,A
		42	; get third digit and its value to total
0016 08		43	inc R0
0017 E6		44	mov A,@R0
0018 C3		45	clr C
0019 9430		46	subb A,#zero
001B 2B		47	add A,TEMP
001C FB		48	mov TEMP,A
		49	; test the sign, and complement the number if the
		50	; sign is a minus

Figure G-1. Sample Relocatable Program (Cont'd.).

MCS-51 MACRO ASSEMBLER	NUM_CONVERSION	PAGE	2
LOC OBJ	LINE SOURCE		
0010 E7	51 mov A, #R1		
001E B42D04	52 cjne A, #minus, pos ;skip the next 4 instructions		
	53 ;if the number is positive		
0021 E8	54 mov A, TEMP		
0022 F4	55 cpl A		
0023 D4	56 inc A		
0024 FB	57 mov TEMP, A		
	58 ;		
	59 ; epilogue- store the result and exit		
0025 EB	60 pos:		
0026 F7	61 mov A, TEMP		
0027 22	62 mov #R1, A		
	63 ret		
	64 ;		
	65 ; This routine converts binary to ASCII.		
	66 ; INPUT- a signed one-byte integer, pointed at by R1		
	67 ; OUTPUT- a 4 character string, located where the		
	68 ; input number was (pointed at by R1).		
	69 SINASC:		
00E7	70 SIGN bit ACC.7		
	71 ; Get the number, find its sign and store its sign		
0028 E7	72 mov A, #R1		
0029 772B	73 mov #R1, #plus ;store a plus sign (over-		
	74 ;written by minus if needed)		
002B 30E704	75 jnb sign, go_on2 ;test the sign bit		
	76 ; Next 3 instructions handle negative numbers		
002E 772D	77 mov #R1, #minus ;store a minus sign		
0030 14	78 dec A		
0031 F4	79 cpl A		
	80 ; Factor out the first digit		
	81 GC_DN2:		
0032 09	82 inc R1		
0033 75F064	83 mov B, #100		
0036 84	84 div AB		
0037 2430	85 add A, #zero		
0039 F7	86 mov #R1, A ;store the first digit		
	87 ; Factor out the second digit		
003A 09	88 inc R1		
003B E5F0	89 mov A, B		
003D 75F00A	90 mov B, #10		
0040 84	91 div AB		
0041 2430	92 add A, #zero		
0043 F7	93 mov #R1, A ;store the second digit		
	94 ; Store the third digit		
0044 09	95 inc R1		
0045 E5F0	96 mov A, B		
0047 2430	97 add A, #zero		
0049 F7	98 mov #R1, A ;store the third digit		
	99 ; note that we return without restoring R1		
004A 22	100 ret		
	101 ;		
	102 END		

Figure G-1. Sample Relocatable Program (Cont'd.).

MCS-51 MACRO ASSEMBLER NUM_CONVERSION

PAGE 3

SYMBOL TABLE LISTING

N A M E	T Y P E	V A L U E	A T T R I B U T E S
ACC	D ADDR	00E0H	A
AR1	D ADDR	0001H	A
ASCBIN	C ADDR	0000H	R PUB SEG=NUM_ROUTINES
B	D ADDR	00F0H	A
BINASC	C ADDR	0028H	R PUB SEG=NUM_ROUTINES
GO_ON2	C ADDR	0032H	R SEG=NUM_ROUTINES
MINUS	NUMB	002D4	A
NUM_CONVERSION	----	----	
NUM_ROUTINES .	C SEG	004BH	REL=UNIT
PLUS	NUMB	0029H	A
PDS	C ADDR	0025H	R SEG=NUM_ROUTINES
SIGN	B ADDR	00E0H.7	A
TEMP	REG	R3	
ZERO	NUMB	0030H	A

REGISTER BANK(S) USED: 0, TARGET MACHINE(S): 8051

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure G-1. Sample Relocatable Program (Cont'd.)

This appendix contains the following general reference tables:

- ASCII codes
- Powers of two
- Powers of 16 (in base 10)
- Powers of 10 (in base 16)
- Hexadecimal-decimal integer conversion

ASCII Codes

The 8051 uses the 7-bit ASCII code, with the high-order 8th bit (parity bit) always reset.

GRAPHIC OR CONTROL	ASCII (HEXADECIMAL)	GRAPHIC OR CONTROL	ASCII (HEXADECIMAL)	GRAPHIC OR CONTROL	ASCII (HEXADECIMAL)
NUL	00	+	2B	V	56
SOH	01	,	2C	W	57
STX	02	-	2D	X	58
ETX	03	.	2E	Y	59
EOT	04	/	2F	Z	5A
ENQ	05	0	30	[5B
ACK	06	1	31	\	5C
BEL	07	2	32]	5D
BS	08	3	33	\wedge (\uparrow)	5E
HT	09	4	34	- (\leftarrow)	5F
LF	0A	5	35	,	60
VT	0B	6	36	a	61
FF	0C	7	37	b	62
CR	0D	8	38	c	63
SO	0E	9	39	d	64
SI	0F	:	3A	e	65
DLE	10	:	3B	f	66
DC1 (X-ON)	11	<	3C	g	67
DC2 (TAPE)	12	=	3D	h	68
DC3 (X-OFF)	13	>	3E	i	69
DC4 (TAPE)	14	?	3F	j	6A
NAK	15	@	40	k	6B
SYN	16	A	41	l	6C
ETB	17	B	42	m	6D
CAN	18	C	43	n	6E
EM	19	D	44	o	6F
SUB	1A	E	45	p	70
ESC	1B	F	46	q	71
FS	1C	G	47	r	72
GS	1D	H	48	s	73
RS	1E	I	49	t	74
US	1F	J	4A	u	75
SP	20	K	4B	v	76
!	21	L	4C	w	77
"	22	M	4D	x	78
#	23	N	4E	y	79
\$	24	O	4F	z	7A
%	25	P	50	{	7B
&	26	Q	51		7C
,	27	R	52	} (ALT MODE)	7D
(28	S	53	~	7E
)	29	T	54	DEL (RUB OUT)	7F
*	2A	U	55		

POWERS OF TWO

 $2^n \times 2^{-n}$

1	0	1.0
2	1	0.5
4	2	0.25
8	3	0.125
16	4	0.062 5
32	5	0.031 25
64	6	0.015 625
128	7	0.007 812 5
256	8	0.003 906 25
512	9	0.001 953 125
1 024	10	0.000 976 562 5
2 048	11	0.000 488 281 25
4 096	12	0.000 244 140 625
8 192	13	0.000 122 070 312 5
16 384	14	0.000 061 035 156 25
32 768	15	0.000 030 517 578 125
65 536	16	0.000 015 258 789 062 5
131 072	17	0.000 007 629 394 531 25
262 144	18	0.000 003 814 697 265 625
524 288	19	0.000 001 907 348 632 812 5
1 048	20	0.000 000 953 674 316 406 25
2 097	21	0.000 000 476 837 158 203 125
4 194	22	0.000 000 238 418 579 101 562 5
8 388	23	0.000 000 119 209 289 550 781 25
16 777	24	0.000 000 059 604 644 775 390 625
33 554	25	0.000 000 029 802 322 387 695 312 5
67 108	26	0.000 000 014 901 161 193 847 656 25
134 217	27	0.000 000 007 450 580 596 923 828 125
268 435	28	0.000 000 003 725 290 298 461 914 062 5
536 870	29	0.000 000 001 862 645 149 230 957 031 25
1 073	30	0.000 000 931 322 574 615 478 515 625
2 147	31	0.000 000 465 661 287 307 739 257 812 5
4 294	32	0.000 000 232 830 643 653 869 628 906 25
8 589	33	0.000 000 116 415 321 826 934 814 453 125
17 179	34	0.000 000 058 207 660 913 467 407 226 562 5
34 359	35	0.000 000 029 103 830 456 733 703 613 281 25
68 719	36	0.000 000 014 551 915 228 366 851 806 640 625
137 438	37	0.000 000 007 275 957 614 183 425 903 320 312 5
274 877	38	0.000 000 003 637 978 807 091 712 951 660 156 25
549 755	39	0.000 000 001 818 989 403 545 856 475 830 078 125
1 099	40	0.000 000 909 494 701 772 928 237 915 039 062 5
2 199	41	0.000 000 454 747 350 886 464 118 957 519 531 25
4 398	42	0.000 000 227 373 675 443 232 059 478 759 765 625
8 796	43	0.000 000 113 686 837 721 616 029 739 379 882 812 5
17 592	44	0.000 000 056 843 418 860 808 014 869 689 941 406 25
35 184	45	0.000 000 028 421 709 430 404 007 434 844 970 703 125
70 368	46	0.000 000 014 210 854 715 202 003 717 422 485 351 562 5
140 737	47	0.000 000 007 105 427 357 601 001 858 711 242 675 781 25
281 474	48	0.000 000 003 552 713 678 800 500 929 355 621 337 890 625
562 949	49	0.000 000 001 776 356 839 400 250 464 677 810 668 945 312 5
1 125	50	0.000 000 000 888 178 419 700 125 232 338 905 334 472 656 25
2 251	51	0.000 000 000 444 089 209 850 062 616 169 452 667 236 328 125
4 503	52	0.000 000 222 044 604 925 031 308 084 726 333 618 164 062 5
9 007	53	0.000 000 111 022 302 462 515 654 042 363 166 809 082 031 25
18 014	54	0.000 000 055 511 151 231 257 827 021 181 583 404 541 015 625
36 028	55	0.000 000 027 755 575 615 628 913 510 590 791 702 270 507 812 5
72 057	56	0.000 000 013 877 787 807 814 456 755 295 395 851 135 253 906 25
144 115	57	0.000 000 006 938 893 903 907 228 377 647 697 925 567 676 950 125
288 230	58	0.000 000 003 469 446 951 953 614 188 823 848 962 783 813 476 562 5
576 460	59	0.000 000 000 001 734 723 475 976 807 094 411 924 481 391 906 738 281 25
1 152	60	0.000 000 000 000 867 361 737 988 403 547 205 962 240 695 953 369 140 625
2 305	61	0.000 000 000 000 433 680 868 994 201 773 602 981 120 347 976 684 570 312 5
4 611	62	0.000 000 000 000 216 840 434 497 100 886 801 490 560 173 988 342 285 156 25
9 223	63	0.000 000 000 000 108 420 217 248 550 443 400 745 280 086 994 171 142 578 125

POWERS OF 16 (IN BASE 10)

16^n	n	16^{-n}					
1	0	0.10000	00000	00000	00000	x 10	
16	1	0.62500	00000	00000	00000	x 10^{-1}	
256	2	0.39062	50000	00000	00000	x 10^{-2}	
4 096	3	0.24414	06250	00000	00000	x 10^{-3}	
65 536	4	0.15258	78906	25000	00000	x 10^{-4}	
1 048 576	5	0.95367	43164	06250	00000	x 10^{-6}	
16 777 216	6	0.59604	64477	53906	25000	x 10^{-7}	
268 435 456	7	0.37252	90298	46191	40625	x 10^{-8}	
4 294 967	296	0.23283	06436	53869	62891	x 10^{-9}	
68 719 476	736	0.14551	91522	83668	51807	x 10^{-10}	
1 099 511	627	0.90949	47017	72928	23792	x 10^{-12}	
17 592 186	044 416	0.56843	41886	08080	14870	x 10^{-13}	
281 474 976	710 656	0.35527	13678	80050	09294	x 10^{-14}	
4 503 599	627 370	0.22204	46049	25031	30808	x 10^{-15}	
72 057 594	037 927	0.13877	78780	78144	56755	x 10^{-16}	
1 152 921	504 606	0.86736	17379	88403	54721	x 10^{-18}	

POWERS OF 10 (IN BASE 16)

10^n	n	10^{-n}					
1	0	1.0000	0000	0000	0000		
A	1	0.1999	9999	9999	999A		
64	2	0.28F5	C28F	5C28	F5C3	x 16^{-1}	
3E8	3	0.4189	374B	C6A7	EF9E	x 16^{-2}	
2710	4	0.68DB	8BAC	710C	B296	x 16^{-3}	
1 86A0	5	0.A7C5	AC47	1B47	8423	x 16^{-4}	
F 4240	6	0.10C6	F7A0	B5ED	8D37	x 16^{-4}	
98 9680	7	0.1AD7	F29A	BCAF	4858	x 16^{-5}	
5F5 E100	8	0.2AF3	1DC4	6118	73BF	x 16^{-6}	
3B9A CA00	9	0.44B8	2FA0	9B5A	52CC	x 16^{-7}	
2 540B E400	10	0.6DF3	7F67	SEF6	EADF	x 16^{-8}	
17 4876 E800	11	0.AFEB	FF0B	CB24	AAFF	x 16^{-9}	
E8 D4A5	1000	0.1197	9981	2DEA	1119	x 16^{-9}	
918 4E72 A000	13	0.1C25	C268	4976	81C2	x 16^{-10}	
5AF3 107A	4000	0.2D09	370D	4257	3604	x 16^{-11}	
3 8D7E A4C6	8000	0.480E	BE7B	9D58	566D	x 16^{-12}	
23 8652 6FC1	0000	0.734A	CA5F	6226	F0AE	x 16^{-13}	
163 4578 5D8A	0000	0.B877	AA32	36A4	B449	x 16^{-14}	
DE0 B6B3 A764	0000	0.1272	5DD1	D243	ABA1	x 16^{-14}	
8AC7 2304 89E8	0000	0.1D83	C94F	B6D2	AC35	x 16^{-15}	

HEXADECIMAL-DECIMAL INTEGER CONVERSION

The table below provides for direct conversions between hexadecimal integers in the range 0-FFF and decimal integers in the range 0-4095. For conversion of larger integers, the table values may be added to the following figures:

Hexadecimal	Decimal	Hexadecimal	Decimal
01 000	4 096	20 000	131 072
02 000	8 192	30 000	196 608
03 000	12 288	40 000	262 144
04 000	16 384	50 000	327 680
05 000	20 480	60 000	393 216
06 000	24 576	70 000	458 752
07 000	28 672	80 000	524 288
08 000	32 768	90 000	589 824
09 000	36 864	A0 000	655 360
0A 000	40 960	B0 000	720 896
0B 000	45 056	C0 000	786 432
0C 000	49 152	D0 000	851 968
0D 000	53 248	E0 000	917 504
0E 000	57 344	F0 000	983 040
0F 000	61 440	100 000	1 048 576
10 000	65 536	200 000	2 097 152
11 000	69 632	300 000	3 145 728
12 000	73 728	400 000	4 194 304
13 000	77 824	500 000	5 242 880
14 000	81 920	600 000	6 291 456
15 000	86 016	700 000	7 340 032
16 000	90 112	800 000	8 388 608
17 000	94 208	900 000	9 437 184
18 000	98 304	A00 000	10 485 760
19 000	102 400	B00 000	11 534 336
1A 000	106 496	C00 000	12 582 912
1B 000	110 592	D00 000	13 631 488
1C 000	114 688	E00 000	14 680 064
1D 000	118 784	F00 000	15 728 640
1E 000	122 880	1 000 000	16 777 216
1F 000	126 976	2 000 000	33 554 432

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
000	0000	0001	0002	0003	0004	0005	0006	0007	0008	0009	0010	0011	0012	0013	0014	0015
010	0016	0017	0018	0019	0020	0021	0022	0023	0024	0025	0026	0027	0028	0029	0030	0031
020	0032	0033	0034	0035	0036	0037	0038	0039	0040	0041	0042	0043	0044	0045	0046	0047
030	0048	0049	0050	0051	0052	0053	0054	0055	0056	0057	0058	0059	0060	0061	0062	0063
040	0064	0065	0066	0067	0068	0069	0070	0071	0072	0073	0074	0075	0076	0077	0078	0079
050	0080	0081	0082	0083	0084	0085	0086	0087	0088	0089	0090	0091	0092	0093	0094	0095
060	0096	0097	0098	0099	0100	0101	0102	0103	0104	0105	0106	0107	0108	0109	0110	0111
070	0112	0113	0114	0115	0116	0117	0118	0119	0120	0121	0122	0123	0124	0125	0126	0127
080	0128	0129	0130	0131	0132	0133	0134	0135	0136	0137	0138	0139	0140	0141	0142	0143
090	0144	0145	0146	0147	0148	0149	0150	0151	0152	0153	0154	0155	0156	0157	0158	0159
0A0	0160	0161	0162	0163	0164	0165	0166	0167	0168	0169	0170	0171	0172	0173	0174	0175
0B0	0176	0177	0178	0179	0180	0181	0182	0183	0184	0185	0186	0187	0188	0189	0190	0191
0C0	0192	0193	0194	0195	0196	0197	0198	0199	0200	0201	0202	0203	0204	0205	0206	0207
0D0	0208	0209	0210	0211	0212	0213	0214	0215	0216	0217	0218	0219	0220	0221	0222	0223
0E0	0224	0225	0226	0227	0228	0229	0230	0231	0232	0233	0234	0235	0236	0237	0238	0239
0F0	0240	0241	0242	0243	0244	0245	0246	0247	0248	0249	0250	0251	0252	0253	0254	0255

HEXADECIMAL-DECIMAL INTEGER CONVERSION (Cont'd)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
100	0256	0257	0258	0259	0260	0261	0262	0263	0264	0265	0266	0267	0268	0269	0270	0271
110	0272	0273	0274	0275	0276	0277	0278	0279	0280	0281	0282	0283	0284	0285	0286	0287
120	0288	0289	0290	0291	0292	0293	0294	0295	0296	0297	0298	0299	0300	0301	0302	0303
130	0304	0305	0306	0307	0308	0309	0310	0311	0312	0313	0314	0315	0316	0317	0318	0319
140	0320	0321	0322	0323	0324	0325	0326	0327	0328	0329	0330	0331	0331	0333	0334	0335
150	0336	0337	0338	0339	0340	0341	0342	0343	0344	0345	0346	0347	0348	0349	0350	0351
160	0352	0353	0354	0355	0356	0357	0358	0359	0360	0361	0362	0363	0364	0365	0366	0367
170	0368	0369	0370	0371	0372	0373	0374	0375	0376	0377	0378	0379	0380	0381	0382	0383
180	0384	0385	0386	0387	0388	0389	0390	0391	0392	0393	0394	0395	0396	0397	0398	0399
190	0400	0401	0402	0403	0404	0405	0406	0407	0408	0409	0410	0411	0412	0413	0414	0415
1A0	0416	0417	0418	0419	0420	0421	0422	0423	0424	0425	0426	0427	0428	0429	0430	0431
1B0	0432	0433	0434	0435	0436	0437	0438	0439	0440	0441	0442	0443	0444	0445	0446	0447
1C0	0448	0449	0450	0451	0452	0453	0454	0455	0456	0457	0458	0459	0460	0461	0462	0463
1D0	0464	0465	0466	0467	0468	0469	0470	0471	0472	0473	0474	0475	0476	0477	0478	0479
1E0	0480	0481	0482	0483	0484	0485	0486	0487	0488	0489	0490	0491	0492	0493	0494	0495
1F0	0496	0497	0498	0499	0500	0501	0502	0503	0504	0505	0506	0507	0508	0509	0510	0511
200	0512	0513	0514	0515	0516	0517	0518	0519	0520	0521	0522	0523	0524	0525	0526	0527
210	0528	0529	0530	0531	0532	0533	0534	0535	0536	0537	0538	0539	0540	0541	0542	0543
220	0544	0545	0546	0547	0548	0549	0550	0551	0552	0553	0554	0555	0556	0557	0558	0559
230	0560	0561	0562	0563	0564	0565	0566	0567	0568	0569	0570	0571	0572	0573	0574	0575
240	0576	0577	0578	0579	0580	0581	0582	0583	0584	0585	0586	0587	0588	0589	0590	0591
250	0592	0593	0594	0595	0596	0597	0598	0599	0600	0601	0602	0603	0604	0605	0606	0607
260	0608	0609	0610	0611	0612	0613	0614	0615	0616	0617	0618	0619	0620	0621	0622	0623
270	0624	0625	0626	0627	0628	0629	0630	0631	0632	0633	0634	0635	0636	0637	0638	0639
280	0640	0641	0642	0643	0644	0645	0646	0647	0648	0649	0650	0651	0652	0653	0654	0655
290	0656	0657	0658	0659	0660	0661	0662	0663	0664	0665	0666	0667	0668	0669	0670	0671
2A0	0672	0673	0674	0675	0676	0677	0678	0679	0680	0681	0682	0683	0684	0685	0686	0687
2B0	0688	0689	0690	0691	0692	0693	0694	0695	0696	0697	0698	0699	0700	0701	0702	0703
2C0	0704	0705	0706	0707	0708	0709	0710	0711	0712	0713	0714	0715	0716	0717	0718	0719
2D0	0720	0721	0722	0723	0724	0725	0726	0727	0728	0729	0730	0731	0732	0733	0734	0735
2E0	0736	0737	0738	0739	0740	0741	0742	0743	0744	0745	0746	0747	0748	0749	0750	0751
2F0	0752	0753	0754	0755	0756	0757	0758	0759	0760	0761	0762	0763	0764	0765	0766	0767
300	0768	0769	0770	0771	0772	0773	0774	0775	0776	0777	0778	0779	0780	0781	0782	0783
310	0784	0785	0786	0787	0788	0789	0790	0791	0792	0793	0794	0795	0796	0797	0798	0799
320	0800	0301	0802	0803	0804	0805	0806	0807	0808	0809	0810	0811	0812	0813	0814	0815
330	0816	0817	0818	0819	0820	0821	0822	0823	0824	0825	0826	0827	0828	0829	0830	0831
340	0832	0833	0834	0835	0836	0837	0838	0839	0840	0841	0842	0843	0844	0845	0846	0847
350	0848	0849	0850	0851	0852	0853	0854	0855	0856	0857	0858	0859	0860	0861	0862	0863
360	0864	0865	0866	0867	0868	0869	0870	0871	0872	0873	0874	0875	0876	0877	0878	0879
370	0880	0881	0882	0883	0884	0885	0886	0887	0888	0889	0890	0891	0892	0893	0894	0895
380	0896	0897	0898	0899	0900	0901	0902	0903	0904	0905	0906	0907	0908	0909	0910	0911
390	0912	0913	0914	0915	0916	0917	0918	0919	0920	0921	0922	0923	0924	0925	0926	0927
3A0	0928	0929	0930	0931	0932	0933	0934	0935	0936	0937	0938	0939	0940	0941	0942	0943
3B0	0944	0945	0946	0947	0948	0949	0950	0951	0952	0953	0954	0955	0956	0957	0958	0959
3C0	0960	0961	0962	0963	0964	0965	0966	0967	0968	0969	0970	0971	0972	0973	0974	0975
3D0	0976	0977	0978	0979	0980	0981	0982	0983	0984	0985	0986	0987	0988	0989	0990	0991
3E0	0992	0993	0994	0995	0996	0997	0998	0999	1000	1001	1002	1003	1004	1005	1006	1007
3F0	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023

HEXADECIMAL-DECIMAL INTEGER CONVERSION (Cont'd)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
400	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039
410	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055
420	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071
430	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087
440	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103
450	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119
460	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135
470	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151
480	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167
490	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183
4A0	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199
4B0	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215
4C0	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231
4D0	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247
4E0	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263
4F0	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279
500	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295
510	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311
520	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327
530	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343
540	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359
550	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375
560	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391
570	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407
580	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423
590	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439
5A0	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455
5B0	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471
5C0	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487
5D0	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498	1499	1500	1501	1502	1503
5E0	1504	1505	1506	1507	1508	1509	1510	1511	1512	1513	1514	1515	1516	1517	1518	1519
5F0	1520	1521	1522	1523	1524	1525	1526	1527	1528	1529	1530	1531	1532	1533	1534	1535
600	1536	1537	1538	1539	1540	1541	1542	1543	1544	1545	1546	1547	1548	1549	1550	1551
610	1552	1553	1554	1555	1556	1557	1558	1559	1560	1561	1562	1563	1564	1565	1566	1567
620	1568	1569	1570	1571	1572	1573	1574	1575	1576	1577	1578	1579	1580	1581	1582	1583
630	1584	1585	1586	1587	1588	1589	1590	1591	1592	1593	1594	1595	1596	1597	1598	1599
640	1600	1601	1602	1603	1604	1605	1606	1607	1608	1609	1610	1611	1612	1613	1614	1615
650	1616	1617	1618	1619	1620	1621	1622	1623	1624	1625	1626	1627	1628	1629	1630	1631
660	1632	1633	1634	1635	1636	1637	1638	1639	1640	1641	1642	1643	1644	1645	1646	1647
670	1648	1649	1650	1651	1652	1653	1654	1655	1656	1657	1658	1659	1660	1661	1662	1663
680	1664	1665	1666	1667	1668	1669	1670	1671	1672	1673	1674	1675	1676	1677	1678	1679
690	1680	1681	1682	1683	1684	1685	1686	1687	1688	1689	1690	1691	1692	1693	1694	1695
6A0	1696	1697	1698	1699	1700	1701	1702	1703	1704	1705	1706	1707	1708	1709	1710	1711
6B0	1712	1713	1714	1715	1716	1717	1718	1719	1720	1721	1722	1723	1724	1725	1726	1727
6C0	1728	1729	1730	1731	1732	1733	1734	1735	1736	1737	1738	1739	1740	1741	1742	1743
6D0	1744	1745	1746	1747	1748	1749	1750	1751	1752	1753	1754	1755	1756	1757	1758	1759
6E0	1760	1761	1762	1763	1764	1765	1766	1767	1768	1769	1770	1771	1772	1773	1774	1775
6F0	1776	1777	1778	1779	1780	1781	1782	1783	1784	1785	1786	1787	1788	1789	1790	1791

HEXADECIMAL-DECIMAL INTEGER CONVERSION (Cont'd)


	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
700	1792	1793	1794	1795	1796	1797	1798	1799	1800	1801	1802	1803	1804	1805	1806	1807
710	1808	1809	1810	1811	1812	1813	1814	1815	1816	1817	1818	1819	1820	1821	1822	1823
720	1824	1825	1826	1827	1828	1829	1830	1831	1832	1833	1834	1835	1836	1837	1838	1839
730	1840	1841	1842	1843	1844	1845	1846	1847	1848	1849	1850	1851	1852	1853	1854	1855
740	1856	1857	1858	1859	1860	1861	1862	1863	1864	1865	1866	1867	1868	1869	1870	1871
750	1872	1873	1874	1875	1876	1877	1878	1879	1880	1881	1882	1883	1884	1885	1886	1887
760	1888	1889	1890	1891	1892	1893	1894	1895	1896	1897	1898	1899	1900	1901	1902	1903
770	1904	1905	1906	1907	1908	1909	1910	1911	1912	1913	1914	1915	1916	1917	1918	1919
780	1920	1921	1922	1923	1924	1925	1926	1927	1928	1929	1930	1931	1932	1933	1934	1935
790	1936	1937	1938	1939	1940	1941	1942	1943	1944	1945	1946	1947	1948	1949	1950	1951
7A0	1952	1953	1954	1955	1956	1957	1958	1959	1960	1961	1962	1963	1964	1965	1966	1967
7B0	1968	1969	1970	1971	1972	1973	1974	1975	1976	1977	1978	1979	1980	1981	1982	1983
7C0	1984	1985	1986	1987	1988	1989	1990	1991	1992	1993	1994	1995	1996	1997	1998	1999
7D0	2000	2001	2002	2003	2004	2005	2006	2007	2008	2009	2010	2011	2012	2013	2014	2015
7E0	2016	2017	2018	2019	2020	2021	2022	2023	2024	2025	2026	2027	2028	2029	2030	2031
7F0	2032	2033	2034	2035	2036	2037	2038	2039	2040	2041	2042	2043	2044	2045	2046	2047
800	2048	2049	2050	2051	2052	2053	2054	2055	2056	2057	2058	2059	2060	2061	2062	2063
810	2064	2065	2066	2067	2068	2069	2070	2071	2072	2073	2074	2075	2076	2077	2078	2079
820	2080	2081	2082	2083	2084	2085	2086	2087	2088	2089	2090	2091	2092	2093	2094	2095
830	2096	2097	2098	2099	2100	2101	2102	2103	2104	2105	2106	2107	2108	2109	2110	2111
840	2112	2113	2114	2115	2116	2117	2118	2119	2120	2121	2122	2123	2124	2125	2126	2127
850	2128	2129	2130	2131	2132	2133	2134	2135	2136	2137	2138	2139	2140	2141	2142	2143
860	2144	2145	2146	2147	2148	2149	2150	2151	2152	2153	2154	2155	2156	2157	2158	2159
870	2160	2161	2162	2163	2164	2165	2166	2167	2168	2169	2170	2171	2172	2173	2174	2175
880	2176	2177	2178	2179	2180	2181	2182	2183	2184	2185	2186	2187	2188	2189	2190	2191
890	2192	2193	2194	2195	2196	2197	2198	2199	2200	2201	2202	2203	2204	2205	2206	2207
8A0	2208	2209	2210	2211	2212	2213	2214	2215	2216	2217	2218	2219	2220	2221	2222	2223
8B0	2224	2225	2226	2227	2228	2229	2230	2231	2232	2233	2234	2235	2236	2237	2238	2239
8C0	2240	2241	2242	2243	2244	2245	2246	2247	2248	2249	2250	2251	2252	2253	2254	2255
8D0	2256	2257	2258	2259	2260	2261	2262	2263	2264	2265	2266	2267	2268	2269	2270	2271
8E0	2272	2273	2274	2275	2276	2277	2278	2279	2280	2281	2282	2283	2284	2285	2286	2287
8F0	2288	2289	2290	2291	2292	2293	2294	2295	2296	2297	2298	2299	2300	2301	2302	2303
900	2304	2305	2306	2307	2308	2309	2310	2311	2312	2313	2314	2315	2316	2317	2318	2319
910	2320	2321	2322	2323	2324	2325	2326	2327	2328	2329	2330	2331	2332	2333	2334	2335
920	2336	2337	2338	2339	2340	2341	2342	2343	2344	2345	2346	2347	2348	2349	2350	2351
930	2352	2353	2354	2355	2356	2357	2358	2359	2360	2361	2362	2363	2364	2365	2366	2367
940	2368	2369	2370	2371	2372	2373	2374	2375	2376	2377	2378	2379	2380	2381	2382	2383
950	2384	2385	2386	2387	2388	2389	2390	2391	2392	2393	2394	2395	2396	2397	2398	2399
960	2400	2401	2402	2403	2404	2405	2406	2407	2408	2409	2410	2411	2412	2413	2414	2415
970	2416	2417	2418	2419	2420	2421	2422	2423	2424	2425	2426	2427	2428	2429	2430	2431
980	2432	2433	2434	2435	2436	2437	2438	2439	2440	2441	2442	2443	2444	2445	2446	2447
990	2448	2449	2450	2451	2452	2453	2454	2455	2456	2457	2458	2459	2460	2461	2462	2463
9A0	2464	2465	2466	2467	2468	2469	2470	2471	2472	2473	2474	2475	2476	2477	2478	2479
9B0	2480	2481	2482	2483	2484	2485	2486	2487	2488	2489	2490	2491	2492	2493	2494	2495
9C0	2496	2497	2498	2499	2500	2501	2502	2503	2504	2505	2506	2507	2508	2509	2510	2511
9D0	2512	2513	2514	2515	2516	2517	2518	2519	2520	2521	2522	2523	2524	2525	2526	2527
9E0	2528	2529	2530	2531	2532	2533	2534	2535	2536	2537	2538	2539	2540	2541	2542	2543
9F0	2544	2545	2546	2547	2548	2549	2550	2551	2552	2553	2554	2555	2556	2557	2558	2559

HEXADECIMAL-DECIMAL INTEGER CONVERSION (Cont'd)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
A00	2560	2561	2562	2563	2564	2565	2566	2567	2568	2569	2570	2571	2572	2573	2574	2575
A10	2576	2577	2578	2579	2580	2581	2582	2583	2584	2585	2586	2587	2588	2589	2590	2591
A20	2592	2593	2594	2595	2596	2597	2598	2599	2600	2601	2602	2603	2604	2605	2606	2607
A30	2608	2609	2610	2611	2612	2613	2614	2615	2616	2617	2618	2619	2620	2621	2622	2623
A40	2624	2625	2626	2627	2628	2629	2630	2631	2632	2633	2634	2635	2636	2637	2638	2639
A50	2640	2641	2642	2643	2644	2645	2646	2647	2648	2649	2650	2651	2652	2653	2654	2655
A60	2656	2657	2658	2659	2660	2661	2662	2663	2664	2665	2666	2667	2668	2669	2670	2671
A70	2672	2673	2674	2675	2676	2677	2678	2679	2680	2681	2682	2683	2684	2685	2686	2687
A80	2688	2689	2690	2691	2692	2693	2694	2695	2696	2697	2698	2699	2700	2701	2702	2703
A90	2704	2705	2706	2707	2708	2709	2710	2711	2712	2713	2714	2715	2716	2717	2718	2719
AA0	2720	2721	2722	2723	2724	2725	2726	2727	2728	2729	2730	2731	2732	2733	2734	2735
AB0	2736	2737	2738	2739	2740	2741	2742	2743	2744	2745	2746	2747	2748	2749	2750	2751
AC0	2752	2753	2754	2755	2756	2757	2758	2759	2760	2761	2762	2763	2764	2765	2766	2767
AD0	2768	2769	2770	2771	2772	2773	2774	2775	2776	2777	2778	2779	2780	2781	2782	2783
AE0	2784	2785	2786	2787	2788	2789	2790	2791	2792	2793	2794	2795	2796	2797	2798	2799
AF0	2800	2801	2802	2803	2804	2805	2806	2807	2808	2809	2810	2811	2812	2813	2814	2815
B00	2816	2817	2818	2819	2820	2821	2822	2823	2824	2825	2826	2827	2828	2829	2830	2831
B10	2832	2833	2834	2835	2836	2837	2838	2839	2840	2841	2842	2843	2844	2845	2846	2847
B20	2848	2849	2850	3851	2852	2853	2854	2855	2856	2857	2858	2859	2860	2861	2862	2863
B30	2864	2865	2866	2867	2868	2869	2870	2871	2872	2873	2874	2875	2876	2877	2878	2879
B40	2880	2881	2882	2883	2884	2885	2886	2887	2888	2889	2890	2891	2892	2893	2894	2895
B50	2896	2897	2898	2899	2900	2901	2902	2903	2904	2905	2906	2907	2908	2909	2910	2911
B60	2912	2913	2914	2915	2916	2917	2918	2919	2920	2921	2922	2923	2924	2925	2926	2927
B70	2928	2929	2930	2931	2932	2933	2934	2935	2936	2937	2938	2939	2940	2941	2942	2943
B80	2944	2945	2946	2947	2948	2949	2950	2951	2952	2953	2954	2955	2956	2957	2958	2959
B90	2960	2961	2962	2963	2964	2965	2966	2967	2968	2969	2970	2971	2972	2973	2974	2975
BA0	2976	2977	2978	2979	2980	2981	2982	2983	2984	2985	2986	2987	2988	2989	2990	2991
BB0	2992	2993	2994	2995	2996	2997	2998	2999	3000	3001	3002	3003	3004	3005	3006	3007
BC0	3008	3009	3010	3011	3012	3013	3014	3015	3016	3017	3018	3019	3020	3021	3022	3023
BD0	3024	3025	3026	3027	3028	3029	3030	3031	3032	3033	3034	3035	3036	3037	3038	3039
BE0	3040	3041	3042	3043	3044	3045	3046	3047	3048	3049	3050	3051	3052	3053	3054	3055
BF0	3056	3057	3058	3059	3060	3061	3062	3063	3064	3065	3066	3067	3068	3069	3070	3071
C00	3072	3073	3074	3075	3076	3077	3078	3079	3080	3081	3082	3083	3084	3085	3086	3087
C10	3088	3089	3090	3091	3092	3093	3094	3095	3096	3097	3098	3099	3100	3101	3102	3103
C20	3104	3105	3106	3107	3108	3109	3110	3111	3112	3113	3114	3115	3116	3117	3118	3119
C30	3120	3121	3122	3123	3124	3125	3126	3127	3128	3129	3130	3131	3132	3133	3134	3135
C40	3136	3137	3138	3139	3140	3141	3142	3143	3144	3145	3146	3147	3148	3149	3150	3151
C50	3152	3153	3154	3155	3156	3157	3158	3159	3160	3161	3162	3163	3164	3165	3166	3167
C60	3168	3169	3170	3171	3172	3173	3174	3175	3176	3177	3178	3179	3180	3181	3182	3183
C70	3184	3185	3186	3187	3188	3189	3190	3191	3192	3193	3194	3195	3196	3197	3198	3199
C80	3200	3201	3202	3203	3204	3205	3206	3207	3208	3209	3210	3211	3212	3213	3214	3215
C90	3216	3217	3218	3219	3220	3221	3222	3223	3224	3225	3226	3227	3228	3229	3230	3231
CA0	3232	3233	3234	3235	3236	3237	3238	3239	3240	3241	3242	3243	3244	3245	3246	3247
CB0	3248	3249	3250	3251	3252	3253	3254	3255	3256	3257	3258	3259	3260	3261	3262	3263
CC0	3264	3265	3266	3267	3268	3269	3270	3271	3272	3273	3274	3275	3276	3277	3278	3279
CD0	3280	3281	3282	3283	3284	3285	3286	3287	3288	3289	3290	3291	3292	3293	3294	3295
CE0	3296	3297	3298	3299	3300	3301	3302	3303	3304	3305	3306	3307	3308	3309	3310	3311
CF0	3312	3313	3314	3315	3316	3317	3318	3319	3320	3321	3322	3323	3324	3325	3326	3327

HEXADECIMAL-DECIMAL INTEGER CONVERSION (Cont'd)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
D00	3328	3329	3330	3331	3332	3333	3334	3335	3336	3337	3338	3339	3340	3341	3342	3343
D10	3344	3345	3346	3347	3348	3349	3350	3351	3352	3353	3354	3355	3356	3357	3358	3359
D20	3360	3361	3362	3363	3364	3365	3366	3367	3368	3369	3370	3371	3372	3373	3374	3375
D30	3376	3377	3378	3379	3380	3381	3382	3383	3384	3385	3386	3387	3388	3389	3390	3391
D40	3392	3393	3394	3395	3396	3397	3398	3399	3400	3401	3402	3403	3404	3405	3406	3407
D50	3408	3409	3410	3411	3412	3413	3414	3415	3416	3417	3418	3419	3420	3421	3422	3423
D60	3424	3425	3426	3427	3428	3429	3430	3431	3432	3433	3434	3435	3436	3437	3438	3439
D70	3440	3441	3442	3443	3444	3445	3446	3447	3448	3449	3450	3451	3452	3453	3454	3455
D80	3456	3457	3458	3459	3460	3461	3462	3463	3464	3465	3466	3467	3468	3469	3470	3471
D90	3472	3473	3474	3475	3476	3477	3478	3479	3480	3481	3482	3483	3484	3485	3486	3487
DA0	3488	3489	3490	3491	3492	3493	3494	3495	3496	3497	3498	3499	3500	3501	3502	3503
DB0	3504	3505	3506	3507	3508	3509	3510	3511	3512	3513	3514	3515	3516	3517	3518	3519
DC0	3520	3521	3522	3523	3524	3525	3526	3527	3528	3529	3530	3531	3532	3533	3534	3535
DD0	3536	3537	3538	3539	3540	3541	3542	3543	3544	3545	3546	3547	3548	3549	3550	3551
DE0	3552	3553	3554	3555	3556	3557	3558	3559	3560	3561	3562	3563	3564	3565	3566	3567
DF0	3568	3569	3570	3571	3572	3573	3574	3575	3576	3577	3578	3579	3580	3581	3582	3583
E00	3584	3585	3586	3587	3588	3589	3590	3591	3592	3593	3594	3595	3596	3597	3598	3599
E10	3600	3601	3602	3603	3604	3605	3606	3607	3608	3609	3610	3611	3612	3613	3614	3615
E20	3616	3617	3618	3619	3620	3621	3622	3623	3624	3625	3626	3627	3628	3629	3630	3631
E30	3632	3633	3634	3635	3636	3637	3638	3639	3640	3641	3642	3643	3644	3645	3646	3647
E40	3648	3649	3650	3651	3652	3653	3654	3655	3656	3657	3658	3659	3660	3661	3662	3663
E50	3664	3665	3666	3667	3668	3669	3670	3671	3672	3673	3674	3675	3676	3677	3678	3679
E60	3680	3681	3682	3683	3684	3685	3686	3687	3688	3689	3690	3691	3692	3693	3694	3695
E70	3696	3697	3698	3699	3700	3701	3702	3703	3704	3705	3706	3707	3708	3709	3710	3711
E80	3712	3713	3714	3715	3716	3717	3718	3719	3720	3721	3722	3723	3724	3725	3726	3727
E90	3728	3729	3730	3731	3732	3733	3734	3735	3736	3737	3738	3739	3740	3741	3742	3743
EA0	3744	3745	3746	3747	3748	3749	3750	3751	3752	3753	3754	3755	3756	3757	3758	3759
EB0	3760	3761	3762	3763	3764	3765	3766	3767	3768	3769	3770	3771	3772	3773	3774	3775
EC0	3776	3777	3778	3779	3780	3781	3782	3783	3784	3785	3786	3787	3788	3789	3790	3791
ED0	3792	3793	3794	3795	3796	3797	3798	3799	3800	3801	3802	3803	3804	3805	3806	3807
EE0	3808	3809	3810	3811	3812	3813	3814	3815	3816	3817	3818	3819	3820	3821	3822	3823
EF0	3824	3825	3826	3827	3828	3829	3830	3831	3832	3833	3834	3835	3836	3837	3838	3839
F00	3840	3841	3842	3843	3844	3845	3846	3847	3848	3849	3850	3851	3852	3853	3854	3855
F10	3856	3857	3858	3859	3860	3861	3862	3863	3864	3865	3866	3867	3868	3869	3870	3871
F20	3872	3873	3874	3875	3876	3877	3878	3879	3880	3881	3882	3883	3884	3885	3886	3887
F30	3888	3889	3890	3891	3892	3893	3894	3895	3896	3897	3898	3899	3900	3901	3902	3903
F40	3904	3905	3906	3907	3908	3909	3910	3911	3912	3913	3914	3915	3916	3917	3918	3919
F50	3920	3921	3922	3923	3924	3925	3926	3927	3928	3929	3930	3931	3932	3933	3934	3935
F60	3936	3937	3938	3939	3940	3941	3942	3943	3944	3945	3946	3947	3948	3949	3950	3951
F70	3952	3953	3954	3955	3956	3957	3958	3959	3960	3961	3962	3963	3964	3965	3966	3967
F80	3968	3969	3970	3971	3972	3973	3974	3975	3976	3977	3978	3979	3980	3981	3982	3983
F90	3984	3985	3986	3987	3988	3989	3990	3991	3992	3993	3994	3995	3996	3997	3998	3999
FA0	4000	4001	4002	4003	4004	4005	4006	4007	4008	4009	4010	4011	4012	4013	4014	4015
FB0	4016	4017	4018	4019	4020	4021	4022	4023	4024	4025	4026	4027	4028	4029	4030	4031
FC0	4032	4033	4034	4035	4036	4037	4038	4039	4040	4041	4042	4043	4044	4045	4046	4047
FD0	4048	4049	4050	4051	4052	4053	4054	4055	4056	4057	4058	4059	4060	4061	4062	4063
FE0	4064	4065	4066	4067	4068	4069	4070	4071	4072	4073	4074	4075	4076	4077	4078	4079
FF0	4080	4081	4082	4083	4084	4085	4086	4087	4088	4089	4090	4091	4092	4093	4094	4095



When the assembler is unable to correctly assemble a source file, it generates an error message describing the trouble. If possible, it will continue execution. In some cases the assembler is unable to continue (e.g., too many symbols in a program), and it must abort execution. If your program should generate an error message, make the necessary corrections and reassemble. The object file will probably not be executable, and, if the error caused an abort, the list file may also be unreadable.

The general format for all errors listed in your code is shown below:

*** ERROR #*eee*, LINE #*III* (*ppp*), *Message*

where:

eee is the error number
III is the line causing the error
ppp is the line causing the lost error

Message is the error message.

(See Chapter 6 for a complete description of all error messages generated by the assembler.)

Source File Error Messages

This type of error is caused by syntactic errors in your source code. They appear in your listing file immediately following the source line that caused the error.

In attempting to further define the error, ASM51 may generate more than one message for a single error. Since the assembler attempts to continue processing your code, a single error may have side effects that cause subsequent errors.

A list of all Assembler Error messages is shown below:

Assembler Error Messages

- 1 SYNTAX ERROR
- 2 SOURCE LINE LISTING TERMINATED AT 255 CHARACTERS
- 3 ARITHMETIC OVERFLOW IN NUMERIC CONSTANT
- 4 ATTEMPT TO DIVIDE BY ZERO
- 5 EXPRESSION WITH FORWARD REFERENCE NOT ALLOWED
- 6 TYPE OF SET SYMBOL DOES NOT ALLOW REDEFINITION
- 7 SYMBOL ALREADY DEFINED
- 8 ATTEMPT TO ADDRESS NON-BIT-ADDRESSABLE BIT
- 9 BAD BIT OFFSET IN BIT ADDRESS EXPRESSION
- 10 TEXT FOUND BEYOND END STATEMENT—IGNORED
- 11 PREMATURE END OF FILE (NO END STATEMENT)
- 12 ILLEGAL CHARACTER IN NUMERIC CONSTANT
- 13 ILLEGAL USE OF REGISTER NAME IN EXPRESSION
- 14 SYMBOL IN LABEL FIELD ALREADY DEFINED
- 15 ILLEGAL CHARACTER
- 16 MORE ERRORS DETECTED, NOT REPORTED
- 17 ARITHMETIC OVERFLOW IN LOCATION COUNTER
- 18 UNDEFINED SYMBOL
- 19 VALUE WILL NOT FIT INTO A BYTE
- 20 OPERATION INVALID IN THIS SEGMENT
- 21 STRING TERMINATED BY END-OF-LINE
- 22 STRING LONGER THAN 2 CHARACTERS NOT ALLOWED IN THIS CONTEXT
- 23 STRING, NUMBER, OR IDENTIFIER CANNOT EXCEED 225 CHARACTERS
- 24 DESTINATION ADDRESS OUT OF RANGE FOR INBLOCK REFERENCE
- 25 DESTINATION ADDRESS OUT OF RANGE FOR RELATIVE REFERENCE
- 26 SEGMENT SYMBOL EXPECTED
- 27 ABSOLUTE EXPRESSION EXPECTED
- 28 REFERENCE NOT TO CURRENT SEGMENT
- 29 IDATA SEGMENT ADDRESS EXPECTED
- 30 PUBLIC ATTRIBUTE NOT ALLOWED FOR THIS SYMBOL
- 31 EXTERNAL REFERENCE NOT ALLOWED IN THIS CONTEXT
- 32 SEGMENT REFERENCE NOT ALLOWED IN THIS CONTEXT
- 33 TOO MANY RELOCATABLE SEGMENTS
- 34 TOO MANY EXTERNAL SYMBOLS
- 35 LOCATION COUNTER MAY NOT POINT BELOW SEGMENT BASE
- 36 CODE SEGMENT ADDRESS EXPECTED
- 37 DATA SEGMENT ADDRESS EXPECTED
- 38 XDATA SEGMENT ADDRESS EXPECTED
- 39 BIT SEGMENT ADDRESS EXPECTED
- 40 BYTE OF BIT ADDRESS NOT IN BIT-ADDRESSABLE DATA SEGMENT
- 41 INVALID HARDWARE REGISTER
- 42 BAD REGISTER BANK NUMBER
- 43 INVALID SIMPLE RELOCATABLE EXPRESSION
- 44 INVALID RELOCATABLE EXPRESSION
- 45 INPAGE RELOCATED SEGMENT OVERFLOW
- 46 INBLOCK RELOCATED SEGMENT OVERFLOW
- 47 BIT ADDRESSABLE RELOCATED SEGMENT OVERFLOW
- 48 ILLEGAL RELOCATION FOR SEGMENT TYPE

Macro Error Messages

Macro errors are caused by errors using the Macro Processing Language (MPL). They are listed immediately following the line in which the error was recognized, and is followed by a trace of the macro call/expression stack. This is not necessarily the line that contains the error.

Since the Macro Processor attempts to define the error completely, several messages may be generated. A macro error may be responsible for subsequent macro errors and assembler errors.

All of the Macro Error messages are listed below:

Macro Error Messages

- 300 MORE ERRORS DETECTED, NOT REPORTED
- 301 UNDEFINED MACRO NAME
- 302 ILLEGAL EXIT MACRO
- 303 FATAL SYSTEM ERROR
- 304 ILLEGAL EXPRESSION
- 305 MISSING "FI" IN "IF"
- 306 MISSING "THEN" IN "IF"
- 307 ILLEGAL ATTEMPT TO REDEFINE MACRO
- 308 MISSING IDENTIFIER IN DEFINE PATTERN
- 309 MISSING BALANCED STRING
- 310 MISSING LIST ITEM
- 311 MISSING DELIMITER
- 312 PREMATURE EOF
- 313 DYNAMIC STORAGE (MACROS OR ARGUMENTS) OVERFLOW
- 314 MACRO STACK OVERFLOW
- 315 INPUT STACK OVERFLOW
- 317 PATTERN TOO LONG
- 318 ILLEGAL METACHARACTER: <char>
- 319 UNBALANCED ")" IN ARGUMENT TO USER DEFINED MACRO
- 320 ILLEGAL ASCENDING CALL

Control Error Messages

Control errors are announced when something is wrong with the invocation line or a control line in the source file. In general, command language errors are fatal, causing ASM51 to abort assembly. However, the errors listed below are not considered fatal.

Control Error Messages

- 400 MORE ERRORS DETECTED NOT REPORTED
- 401 BAD PARAMETER TO CONTROL
- 402 MORE THAN ONE INCLUDE CONTROL ON A SINGLE LINE
- 403 ILLEGAL CHARACTER IN COMMAND
- 406 TOO MANY WORKFILES—ONLY FIRST TWO USED
- 407 UNRECOGNIZED CONTROL OR MISPLACED PRIMARY CONTROL: <control>
- 408 NO TITLE FOR TITLE CONTROL
- 409 NO PARAMETER ALLOWED WITH ABOVE CONTROL
- 410 SAVE STACK OVERFLOW
- 411 SAVE STACK UNDERFLOW
- 413 PAGEWIDTH BELOW MINIMUM, SET TO 80
- 414 PAGELENGTH BELOW MINIMUM, SET TO 10
- 415 PAGEWIDTH ABOVE MAXIMUM, SET TO 132

Special Assembler Error Messages

These error messages are displayed on the console. They are displayed immediately before the assembler aborts operation. You should never receive one of these errors; if you should encounter this type of error notify Intel Corporation via the Software Problem Report included with this manual. The content of all output files will be undefined. A list of all of the special assembler error messages is shown below:

Special Assembler Error Messages

- 800 UNRECOGNIZED ERROR MESSAGE NUMBER
- 801 SOURCE FILE READING UNSYNCHRONIZED
- 802 INTERMEDIATE FILE READING UNSYNCHRONIZED
- 803 BAD OPERAND STACK POP REQUEST
- 804 PARSE STACK UNDERFLOW
- 805 INVALID EXPRESSION STACK CONFIGURATION

Fatal Error Messages

This type of error causes the assembler to cease normal processing and produce only the listing.

900 USER SYMBOL TABLE SPACE EXHAUSTED
901 PARSE STACK OVERFLOW
902 EXPRESSION STACK OVERFLOW
903 INTERMEDIATE FILE BUFFER OVERFLOW
904 USER NAME TABLE SPACE EXHAUSTED

Invocation Line Error Messages

Invocation line errors cause the assembler to abort execution.

NO SOURCE FILE FOUND IN INVOCATION
UNRECOGNIZED SOURCE FILE NAME
ILLEGAL SOURCE FILE SPECIFICATION
SOURCE TEXT MUST COME FROM A FILE
NOT ENOUGH MEMORY
__AND__FILES ARE THE SAME
BAD WORKFILES COMMAND
BAD WORKFILES SYNTAX
BAD PAGELENGTH
BAD PAGEWIDTH
PAGELENGTH MISSING A PARAMETER
PAGEWIDTH MISSING A PARAMETER
DATE MISSING A PARAMETER
CANNOT HAVE INCLUDE IN INVOCATION
EOL ENCOUNTERED IN PARAMETER
COMMAND TOO LONG
ILLEGAL CHARACTER IN INVOCATION
UNRECOGNIZED COMMAND : <control name>
NO PARAMETER ALLOWED WITH control
TITLE MISSING A PARAMETER
TOO MANY RESTORES
NO PARAMETER GIVEN FOR "REGISTERBANKS"
ERROR IN PARAMETER LIST FOR "REGISTERBANKS"



APPENDIX K

CHANGING ABSOLUTE PROGRAMS TO RELOCATABLE PROGRAMS

The program example on the following pages illustrates an absolute program written to run on any member of the MCS-51 family of single-chip processors. This program includes two simple ASCII-binary conversion routines and a set of output routines.

The structure of this sample program can be examined and contrasted to the sample modular program shown in Appendix G.

MCS-51 MACRO ASSEMBLER

PAGE 1

ISIS-II MCS-51 MACRO ASSEMBLER V1.0
NO OBJECT MODULE REQUESTED
ASSEMBLER INVOKED BY: ASM51 :F1:SAMPLE.A51 N00J

LOC	OBJ	LINE	SOURCE
		1	CSEG
0BBC		2	ORG 3000
		3	; STRING DEFINITIONS
0BB8	54595045	4	TYPO_MSG: db 'TYPE ^X TO RETYPE A NUMBER',00H
0BBC	205E5820		
0BC0	544F2052		
0BC4	45545950		
0BC8	45204120		
0BCC	4E554D42		
0BD0	4552		
0BD2	00		
0BD3	54595045	5	NUM1_MSG: db 'TYPE IN FIRST NUMBER: ',00H
0BD7	20494E20		
0BD8	46495253		
0BD9	54204E55		
0BE3	4D424552		
0BE7	3A20		
0BE9	00		
0BEA	54595045	6	NUM2_MSG: db 'TYPE IN SECOND NUMBER: ',00H
0BEE	20494E20		
0BF2	5345434F		
0BF6	4E44204E		
0BFA	55404245		
0BFE	523A20		
0C01	00		
0C02	54484520	7	SUM_MSG: db 'THE SUM IS ',00H
0C06	53554D20		
0C0A	495320		
0C0D	00		
		8	;
		9	;
		10	CSEG
		11	; This is the initializing section. Execution always
		12	; starts at address 0 on power-up.
0000		13	ORG 0
0000 758920		14	mov TMOD,#00100008 ; set timer mode to auto-reload
0003 758D03		15	mov TH1,#(-253) ; set timer for 110 BAUD
0006 7598DA		16	mov SCON,#11011010B ; prepare the Serial Port
0009 D28E		17	setb TR1 ; start clock
		18	;
		19	; This is the main program. It's an infinite loop,
		20	; where each iteration prompts the console for 2
		21	; input numbers and types out their sum.
		22	START:
		23	; type message explaining how to correct a typo
0008 900888		24	mov DPTR,#typo_msg
000E 120065		25	call put_string
0011 12005A		26	call put_crlf
		27	; get first number from console
0014 900803		28	mov DPTR,#num1_msg

Figure K-1. Sample Absolute Program

MCS-51 MACRO ASSEMBLER

PAGE 2

LOC	OBJ	LINE	SOURCE
0017	120065	29	call put_string
001A	12005A	30	call put_crlf
001D	7830	31	mov R0,#num1
001F	120080	32	call get_num
0022	12005A	33	call put_crlf
0025	900BEA	34	; get second number from console
0028	120065	35	mov DPTR,#num2_msg
002B	12005A	36	call put_string
002E	7834	37	call put_crlf
0030	120080	38	mov R0,#num2
0033	12005A	39	call get_num
0036	7930	40	call put_crlf
0038	12009D	41	; convert the ASCII numbers to binary
003B	7934	42	mov R1,#num1
003C	12009D	43	call ascbin
003D	7934	44	mov R1,#num2
003E	12009D	45	call ascbin
0040	E530	46	; add the 2 numbers, and store the results in SUM
0042	2534	47	mov a,num1
0044	F538	48	add a,num2
0046	7938	49	mov sum,a
0048	1200C5	50	; convert SUM from binary to ASCII
004E	900C02	51	mov R1,sum
0051	7938	52	call binasc
0053	7A04	53	; output sum to console
0055	120070	54	mov DPTR,sum_msg
0058	80B1	55	call put_string
		56	mcv R1,sum
		57	mov R2,#4
		58	call put_data_str
		59	jmp start
		60	;
		61	DSEG
0006		62	ORG 8
0008		63	STACK: ds 8 ; at power-up the stack pointer is
		64	; initialized to point here
		65	;
0030		66	DSEG
0030		67	ORG 30H
0034		68	NUM1: ds 4
0038		69	NUM2: ds 4
		70	SUM: ds 4
		71	;
		72	CSEG
		73	; This is the console IO routine cluster.
		74	;
		75	; This routine outputs a Carriage Return and
		76	; a Line Feed
		77	PUT_CRLF:
000D	000A	78	CR equ 0DH ; carriage return
		79	LF equ 0AH ; line feed
		80	;
005A	7400	81	mov A,#cr
005C	120078	82	call put_char
005F	740A	83	mov A,#lf
0061	120078	84	call put_char
0064	22	85	ret
		86	;
		87	; Routine outputs a null-terminated string located
		88	; in CCDE memory, whose address is given in DPTR.
		89	PUT_STRING:
0065	E4	90	clr A
0066	93	91	movc A,@A+DPTR
0067	6006	92	jz exit
0069	120078	93	call put_char
006C	A3	94	inc DPTR
006D	80F6	95	jmp put_string
006F	22	96	EXIT:
		97	ret
		98	;
		99	; Routine outputs a string located in DATA memory,
		100	; whose address is in R1 and its length in R2.
		101	PUT_DATA_STR:
0070	E7	102	mov A,@R1

Figure K-1. Sample Absolute Program (Cont'd.).

LOC	OBJ	LINE	SOURCE
0071	120078	103	call put_char
0074	09	104	inc R1
0075	DAF9	105	djnz R2,put_data_str
0077	22	106	ret
		107	;
		108	; This routine outputs a single character to console.
		109	; The character is given in A.
		110	PUT_CHAR:
0078	3099FD	111	jnb TI,\$
0079	C299	112	clr TI
007D	F599	113	mov SBUF,A
007F	22	114	ret
		115	;
		116	; This routine gets a 4 character string from console
		117	; and stores it in memory at the address given in R0.
		118	; If a ^X is received, routine starts over again.
		119	GET_NUM:
0080	7A04	120	mov R2,#4 ; set up string length as 4
0082	A900	121	mov R1,00H ; R0 value may be needed for restart
0084	120095	122	GET_LOOP:
		123	call get_char
		124	; Next 4 instructions handle ^X- the routine starts
		125	; over if received
0087	C2E7	126	clr ACC.7 ; clear the parity bit
0089	B41804	127	cjne A,#18H,GO_ON ; if not ^X- go on
008C	115A	128	call put_crlf
008E	80F0	129	jmp get_num
		130	GO_ON:
0090	F7	131	mov @R1,A
0091	09	132	inc R1
0092	DAF0	133	djnz R2,get_loop
0094	22	134	ret
		135	;
		136	; This routine gets a single character from console.
		137	; The character is returned in A.
		138	GET_CHAR:
0095	3098FD	139	jnb RI,\$
0098	C298	140	clr RI
009A	E599	141	mov A,SBUF
009C	22	142	ret
		143	;
		144	; This section handles conversion from ASCII to binary
		145	; and back. The binary numbers are signed one-byte
		146	; integers, i.e. their range is -128 to +127. Their
		147	; ASCII representation is always 4 characters long-
		148	; i.e. a sign followed by 3 digits.
		149	;
0030		150	ZERO EQU '0'
0023		151	PLUS EQU '+'
0020		152	MINUS EQU '-'
		153	;
		154	; This routine converts ASCII to binary.
		155	; INPUT- a 4 character string pointed at by R1. The
		156	; number range must be -128 to +127, and the
		157	; string must have 3 digits preceded by a sign.
		158	; OUTPUT- a signed one-byte integer, located where
		159	; the input string started (pointed at by R1).
		160	ASCBIN:
		161	mov R0,001H ; R1 original value is needed later
		162	; Compute first digit values and store it in TEMP
	REG	163	TEMP equ R3
009F	08	164	inc R0
00A0	E6	165	mov A,@R0
00A1	C3	166	clr C
00A2	9430	167	subb A,#zero
00A4	75F064	168	mov B,#100
00A7	A4	169	mul AB
00A8	FB	170	mov TEMP,A
		171	Compute the second digit value
00A9	08	172	inc R0
00AA	E6	173	mov A,@R0
00AB	9430	174	subb A,#zero
00AD	75F00A	175	mov B,#10
00B0	A4	176	mul AB

Figure K-1. Sample Absolute Program (Cont'd.).

LOC	OBJ	LINE	SOURCE
		177	; Add the value of the second digit to num.
0081 2B		178	add A,TEMP
0082 FB		179	mov TEMP,A
0083 08		180	; get third digit and its value to total
0084 E6		181	inc R0
0085 C3		182	mov A,3R0
0086 9430		183	clr C
0088 2B		184	subb A,#zero
0089 FB		185	add A,TEMP
008A E7		186	mov TEMP,A
008B B42004		187	; test the sign, and complement the number if the
		188	; sign is a minus
		189	mov A,3R1
		190	cjne A,#minus, pos ;skip the next 4 instructions
		191	;if the number is positive
008E E8		192	mov A,TEMP
008F F4		193	cpl A
00C0 04		194	inc A
00C1 FB		195	mov TEMP,A
		196	;
		197	; epilogue- store the result and exit
		198	pos:
00C2 E8		199	mov A,TEMP
00C3 F7		200	mov 3R1,A
00C4 22		201	ret
		202	;
		203	; This routine converts binary to ASCII.
		204	; INPUT- a signed one-byte integer, pointed at by R1
		205	; OUTPUT- a 4 character string, located where the
		206	; input number was (pointed at by R1).
		207	BINASC:
00E7		208	SIGN bit ACC.7
		209	; Get the number, find its sign and store its sign
00C5 E7		210	mov A,3R1
00C6 7723		211	mov 3R1,#plus ;store a plus sign (over-
		212	;written by minus if needed)
00C8 30E704		213	jnb sign, go_on2 ;test the sign bit
		214	; Next 3 instructions handle negative numbers
00CB 772D		215	mov 3R1,#minus ;store a minus sign
00CD 14		216	dec A
00CE F4		217	cpl A
		218	; Factor out the first digit
		219	GO_ON2:
00CF 09		220	inc R1
00D0 75F064		221	mov B,#100
00D3 84		222	div AB
00D4 2430		223	add A,#zero
00D6 F7		224	mov 3R1,A ;store the first digit
		225	; Factor out the second digit
00D7 09		226	inc R1
00D8 E5F0		227	mov A,S
00DA 75FOOA		228	mov B,#10
00D0 84		229	div AS
00DE 2430		230	add A,#zero
00E0 F7		231	mov 3R1,A ;store the second digit
		232	; Store the third digit
00E1 09		233	inc R1
00E2 E5F0		234	mov A,S
00E4 2430		235	add A,#zero
00E6 F7		236	mov 3R1,A ;store the third digit
00E7 22		237	; note that we return without restoring R1
		238	ret
		239	;
		240	END

ASSEMBLY COMPLETE, NO ERRORS FOUND

Figure K-1. Sample Absolute Program (Cont'd.)



INDEX

- A (accumulator), 1-12, 2-2
Absolute segments, 1-3
AC (auxiliary carry flag), 1-7, 1-13, 2-7
ACALL *code address*, 3-4—3-5, B-2,
 B-9—B-13
ACC (accumulator), 1-12, 1-13, 1-14
 see also, CALL, 3-24
 LCALL, 3-69, 3-70
ADD
 Arithmetic Function, 1-10
 A,*#data*, 3-6, B-2, B-9
 A,@Rr, 3-7, B-2, B-9
 A,Rr, 3-8, B-2, B-9
 A,*data address*, 3-9, B-2, B-9
ADDC
 Arithmetic function, 1-10
 A,*#data*, 3-10, B-2, B-9
 A,@Rr, 3-11, 3-12, B-2, B-9
 A,Rr, 3-13, B-2, B-9
 A,*data address*, 3-14, B-2, B-9, B-10
Address, Data unit, 1-9, 1-10
AJMP *code address*, 3-15, B-2, B-9—B-12
 see also, In-Block Jumps and calls, 2-8
 JMP, 3-59
 LJMP, 3-71
 SJMP, 3-122
ANL
 Logical function, 1-10
 A,*#data*, 3-16, B-2, B-10
 A,@Rr, 3-17, B-2, B-10
 A,Rr, 3-18, B-2, B-10
 A,*data address*, 3-19, B-2, B-10
 C,*bit address*, 3-20, B-2, B-11
 C,/bit address, 3-21, B-2, B-11
 data address,*#data*, 3-22, B-2, B-10
 data address,A, 3-23, B-2, B-10
Arithmetic and Logic Unit, 1-7, 1-10
ASCII Characters
 in strings, 2-10, 4-8
 Codes, H-1
ASM51 invocation, 1-4—1-6
Assembler, 1-1
Assembler (ASM51), 1-3
Assembler controls, 1-1
Assembler directives, 1-1, 4-1
Assembler State Controls 4-1, 4-10
Assembly-time expressions, 2-1
ATTRIBUTES, 7-20
- B (multiplication register), 1-7, 1-12
Binary numbers, expressing, 2-9
BITADDRESSABLE, 4-4
Bit addressing, 1-14, 2-1, 2-5—2-7
Bit address space, 1-8, 1-9, 2-6
Bit, Data unit, 1-7, 1-9
BIT directive, 2-1, 2-5, 2-11, 4-1, 4-5,
 4-10, C-1
- Bit selector (“.”), 1-13, 2-5
BNF, A-1
Boolean Functions, 1-6
 see also, ANL, 3-20, 3-21
 CLR, 3-34, 3-35
 CPL, 3-37, 3-38
 JB, 3-53, 3-54
 JBC, 3-55, 3-56
 JC, 3-57, 3-58
 JNB, 3-61, 3-62
 JNC, 3-63, 3-64
 MOV, 3-79, 3-84
 ORL, 3-106, 3-107
 SETB, 3-120, 3-121
Bracket Function, 5-9, E-1
BSEG directive, 4-1, 4-11, C-1
Byte, Data unit, 1-7, 1-9
- C, 2-2
CALL *code address*, 3-24
 see also ACALL, 3-4, 3-5
 LCALL, 3-69, 3-70
 call-pattern, 5-2, 5-3, 5-5
Character strings in expressions, 2-10, 2-11,
 4-8, 4-9
 see also ASCII, H-1
CJNE
 @Rr,*#data address*, 3-25, 3-26, B-3, B-12
 A,*#data,code address*, 3-27, 3-28, B-3,
 B-12
 A,*data address,code address*, 3-29, 3-30,
 B-3, B-12
 Rr,*#data,code address*, 3-31, 3-32, B-3,
 B-12
CLR
 A, 3-33, B-3, B-12
 C, 3-34, B-3, B-12
 bit address, 3-35, B-3, B-12
Code Addressing, 2-1, 2-7, 2-9
Code address space, 1-8
CODE directive, 2-1, 2-11, 4-1, 4-3, 4-7,
 4-10
Comment Function, 5-8, E-1
commercial at sign @, 2-3
conditional assembly, 5-2
Console I/O built-in macro, 5-18, E-1
Control line, 6-2, A-2
Conversion to Hexidecimal Format, 1-4
CPL
 Logical Function, 1-10
 A, 3-36, B-3, B-13
 C, 3-37, B-3, B-11
 bit address, 3-38, B-3, B-11
CSEG directive, 4-1, 4-11, C-1
CY (carry flag), 1-13, 2-7

DA (control) *see* DATE control
DA
 Arithmetic function, 1-10
 A, 3-39, B-3, B-12
Data Addressing, 2-4, 2-5
 on chip, 2-1
Data address space, 1-8, 1-9
DATA directive, 2-1, 2-11, 4-1, 4-3, 4-6, 4-10, C-1
Data Pointer (DPTR), 1-10, 2-2
DATE control, 6-2, 6-4, D-1
DB (control) *see* DEBUG control
DB directive, 4-1, 4-8, C-1
DBIT directive, 4-1, 4-7, 4-8, C-1
DEBUG control, 1-3, 6-2, 6-4, D-1
Debugging, 1-2
DEC
 Arithmetic function, 1-10
 @R_r, 3-40, B-3, B-9
 A, 3-41, B-3, B-9
 R_r, 3-42, B-3, B-9
data address, 3-43, B-3, B-9
Decimal numbers, expressing, 2-9
DEFINE, 5-2—5-7, E-1
delimiters, 5-18—5-21
Directives
 Assembler, 4-1—4-12, C-1
 end of program, 4-10
 location counter control, 4-7, 4-8
 symbol definition, 4-3—4-7
DIV
 Arithmetic function, 1-10
 AB, 3-44, B-3, B-11
DJNZ
 R_r, *code address*, 3-45, B-4, B-12
data address, code address, 3-46, 3-47, B-4, B-12
 dollar sign (\$), 4-2
DPH, 1-7, 1-12
see also Data Pointer, 2-2
DPL, 1-7, 1-12
see also Data Pointer, 2-2
DPTR *see* Data Pointer, 2-2
DS directive, 4-1, 4-7, C-1
DSEG directive, 4-1, 4-11, C-1
DW directive, 4-1, 4-8, 4-9, C-1
EA (Enable All Interrupts), 1-16, 2-7
EJ *see* EJECT
EJECT control, 6-2, 6-5, D-1
END directive, 4-1, 4-10, C-1
EP *see* ERRORPRINT control
EQS built-in macro, 5-12, 5-13, E-1
EQU directive, 4-1, 4-4, 4-5, 4-12, C-1
Error messages
 Console, printed at
 Fatal, 7-2
 Internal, 7-2
 I/O, 7-1
Listing file, printed in, 7-4—7-15
 control, 7-13—7-14
 Fatal, 7-15
 macro, 7-10—7-12
 source, 7-4—7-10
 Special, 7-14
ERRORPRINT control, 6-2, 6-5, D-1
ES (Enable Serial port interrupt), 1-16, 2-7
ESCAPE macro function, 5-9, E-1
ET0 (Enable Timer 0 interrupt), 1-18, 2-7
ET1 (Enable Timer 1 interrupt), 1-18, 2-7
EVAL built-in macro, 5-11, 5-12, E-1
EX0 (Enable external interrupt 0), 1-18, 2-7
EX1 (Enable external interrupt 1), 1-18, 2-7
EXIT built-in macro, 5-15, E-1
EXTI0, 1-16
EXTI1, 1-16
 extensions of filenames, 1-4
External Data address space, 1-8
EXTRN directive, 4-1, 4-9, 4-10, C-1
F0, 1-7, 1-13, 2-7
 function, built-in macro, 5-2
GE *see* GEN
GEN
 control, 6-2, 6-6, D-1
 general relocatable expressions, 2-16
 Generic call, 2-9
 Generic jump, 2-9
GENONLY
 control, 6-2, 6-6, D-1
GES built-in macro, 5-12, 5-13, E-1
 grammar, language, A-1
GO *see* GENONLY
GTS built-in macro, 5-12, 5-13, E-1
see also DATE, 6-4
 TITLE, 6-12
hardware, 1-6
Hexadecimal, 2-9
IC *see* INCLUDE control
IDATA Directive, 2-1, 2-4, 2-11, 4-1, 4-3, 4-6, 4-10
IDATA space, 2-3
IE (Interrupt Enable), 1-7, 1-12, 1-15, 1-16, 1-18
IE0 (Interrupt 0 Edge flag), 1-14, 2-7
IE1 (Interrupt 1 Edge flag), 1-14, 2-7
IF (built-in macro), 5-13, 5-14, E-1
Immediate Data(#), 2-1, 2-3
INBLOCK, 4-4
In-Block Jumps, 2-8
IN built-in macro, 5-18, E-1
INC
 Arithmetic function, 1-10
 @R_r, 3-48, B-4, B-9
 A, 3-49, B-4, B-9
 DPTR, 3-50, B-4, B-11
 R_r, 3-51, B-4, B-9
data address, 3-52, B-4, B-9

INCLUDE control, 6-3, 6-6, D-1
 Indirect addressing (@), 1-9, 2-1, 2-2, 2-3
 INPAGE, 4-4
 instruction cycle, 1-7
 INT0 (Interrupt 0 input pin), 1-15, 2-7
 INT1 (Interrupt 1 input pin), 1-15, 2-7
 Internal data address space,
 directly addressable, 1-8
 indirectly addressable, 1-8
 interrupt
 control, 1-15—1-17
 priority, 1-6
 invocation line, 6-1
 invocation line errors, 7-1, 7-2, 7-3
 I/O port, 1-6
 IP (Interrupt Priority), 1-7, 1-12, 1-15, 1-16
 ISEG, 4-1, 4-11
 IT0 (Interrupt 0 Type control bit), 1-14, 2-7
 IT1 (Interrupt 1 Type control bit), 1-14, 2-7

JB *bit address, code address*, 3-53, 3-54,
 B-4, B-9
 JBC *bit address, code address*, 3-55, 3-56,
 B-4, B-9
 JC *code address*, 3-57, 3-58, B-4, B-10
 JMP *code address*, generic, 3-59
 JMP @A+DPTR, 3-60, B-4, B-10
 JNB *bit address, code address*, 3-61, 3-62,
 B-4, B-9
 JNC *code address*, 3-63, 3-64, B-4, B-10
 JNZ *code address*, 3-65, 3-66, B-4, B-10
 JZ *code address*, 3-67, 3-68, B-5, B-10

Label, 4-2, 4-3
 LCALL *code address*, 3-69, 3-70, B-5, B-9
 see also ACALL, 3-4, 3-5
 CALL, 3-24
 LEN built-in macro, 5-16, E-1
 LES, 5-12, 5-13, E-1
 LI *see* LIST
 LIST control, 6-3, 6-7, D-1
 listing file, 1-4
 format, 7-15—7-17
 heading, 7-18
 literal character (*), 5-2, 5-21, 5-22
 listing file trailer, 7-21
 LJMP *code address*, 3-71, 3-72, B-5, B-9
 see also AJMP, 3-15
 JMP, 3-59
 SJMP, 3-122
 local-symbol-list, 5-2, 5-6, 5-7, E-1
 location counter (\$), 2-12, 4-2
 symbol, 2-2
 Long Jumps or Calls, 2-8
 see also LCALL, 3-69, 3-70
 LJMP, 3-71, 3-72
 LTS, 5-12, 5-13, E-1

machine instructions, 1-1
 macro
 arithmetic expressions in, 5-11, E-3
 —body, 5-2, 5-3, 5-7
 built-in, 5-2
 delimiters, 5-18—5-21
 expressions, 5-10
 identifier, 5-3
 listing format, 7-15—7-18
 parameters, 5-5
 —time, 5-2
 MACRO control, 6-3, 6-7, D-1
 MATCH built-in macro, 5-17, E-1
 memory addresses, 1-8
 METACHAR built-in macro, 5-10, E-1
 metacharacter (%), the, 5-2
 Modular Programming, 1-2
 module, 1-3
 monolithic programs, 1-2
 MOV
 @Rr,#data, 3-72, B-5, B-10
 @Rr,A, 3-73, B-5, B-13
 @Rr,data address, 3-74, B-5, B-11
 A,#data, 3-75, B-5, B-10
 A,@Rr, 3-76, B-5, B-12
 A,Rr, 3-77, B-5, B-12
 A,data address, 3-78, B-5, B-12
 C,bit address, 3-79, B-5, B-11
 DPTR,#data, 3-80, B-5, B-11
 Rr,#data, 3-81, B-5, B-11
 Rr, A, 3-82, B-5, B-13
 Rr,data address, 3-83, B-5, B-11
 bit address, C, 3-84, B-5, B-11
 data address,#data, 3-85, B-5, B-10
 data address,@Rr, 3-86, B-5, B-11
 data address, A, 3-87, B-5, B-13
 data address,Rr, 3-88, B-6, B-11
 data address,data address, 3-89, B-6, B-11
 MOVC
 A,@A+DPTR, 3-90, B-6, B-11
 A,@A+PC, 3-91, 3-92, B-6, B-11
 MOVX
 @DPTR,A, 3-93, B-6, B-13
 @Rr,A, 3-94—3-95, B-6, B-13
 A,@DPTR, 3-96, B-6, B-12
 A,@Rr, 3-97, 3-98, B-6, B-12
 MPL, 5-1
 MR *see* MACRO control
 MUL
 Arithmetic function, 1-10
 AB, 3-99, 3-100, B-6, B-11

NAME directive, 4-1, 4-10, 7-18, 7-20
 NES, 5-12, 5-13, E-1
 nibble, Data unit, 1-9
 NODB *see* NODEBUG control
 NODEBUG control, 6-2, 6-4, D-1
 NOEP *see* NOERRORPRINT control
 NOERRORPRINT control, 6-2, 6-5, D-1
 NOGE *see* NOGEN control

NOGEN control, 6-2, 6-6, D-1
listing format, 7-15—7-18
NOLI see NOLIST control
NOLIST control, 6-3, 6-7, D-1
NOMACRO control, 6-3, 6-7, D-1
NOMR see NOMACRO control
NOOBJECT control, 6-3, 6-8, D-1
NOOJ see NOOBJECT control
NOP, 3-101, B-6, B-9
NOPAGING control, 6-3, 6-8, D-1
NOPI see NOPAGING control
NOPR see NOPRINT control
NOPRINT control, 6-3, 6-10, D-2
NOREGISTERBANK, 6-3, 6-11, D-2
NOSB see NOSYMBOLS control
NOSYMBOLS control, 6-3, 6-11, D-2
NOXR see NOXREF control
NOXREF control, 6-3, 6-13, D-2
null string
assembler, 2-11, 4-8
macro processor, 5-2
NUMBER, 4-10
Numbers
specifying, 2-9
representation of, 2-10

OBJECT control, 6-3, 6-8, D-1
Object file, 1-3
OBJHEX Code conversion program, 1-4
Octal, 2-9
OJ see OBJECT control
Operands #
Operators, Assembly-time
Arithmetic, 2-13
Logical, 2-13
Relational, 2-14, 2-15
Special Assembler, 2-14
Operator Precedence, 2-15
Operators, macro, 5-10
ORG directive, 4-1, 4-2, 4-11, C-1
ORL
Logical function, 1-10
A,#data, 3-102, B-6, B-10
A,@Rr, 3-103, B-6, B-10
A,Rr, 3-104, B-6, B-10
A,data address, 3-105, B-6, B-10
C,bit address, 3-106, B-6, B-10
C,/bit address, 3-107, B-6, B-11
data address,#data, 3-108, B-6, B-10
data address,A, 3-109, B-6, B-10
OUT built-in macro, 5-18, E-1
OV (overflow flag), 1-7, 1-13, 2-7

P (parity flag), 1-7, 1-13, 2-7
PAGING control, 6-3, 6-8, D-1
PAGELENGTH control, 6-3, 6-9, D-1
PAGEWIDTH control, 6-3, 6-9, D-1
PC, 1-7, 1-11, 2-2
see also, program counter, 2-2
PI see PAGING control
PL see PAGELENGTH control

POP data address, 3-110, B-7, B-12
Port 0 (P0) see I/O Port, 1-6
Port 1 (P1) see I/O Port, 1-6
Port 2 (P2) see I/O Port, 1-6
Port 3 (P3), 1-14
see also I/O Port, 1-6
poundsign (#), 2-3
PR see PRINT control
predefined bit addresses, 2-7
predefined symbolic register addresses
(AR0-AR7), 4-12
PRINT control, 6-3, 6-10, D-2
Program, 1-3
Program counter, 1-6, 1-9, 2-2
Program linkage, 4-1, 4-9
Program memory, 1-8
Program Status Word (PSW), 1-13
PS (Priority of Serial Port Interrupt), 1-16,
2-7
PSW see Program Status Word, 1-13
PT0 (Priority of Timer 0 Interrupt), 1-16,
2-7
PT1 (Priority of Timer 1 Interrupt), 1-16,
2-7
PUBLIC directive, 4-1, 4-9
public symbols, 2-16
PUSH data address, 3-111, B-7, B-12
PW see PAGEWIDTH control
PX0 (Priority of External Interrupt 0),
1-16, 2-7
PX1 (Priority of External Interrupt 1),
1-16, 2-7

R0, R1, R2, R3, R4, R5, R6, R7, 1-11, 2-2
see also, registers, General-purpose, 1-11
RAM memory, 1-6
RD (Read Data external), 1-15, 2-7
register
Banks, 1-11
General-purpose, 1-11
Program addressable, 1-12
value at reset, 1-17
register address symbols AR0-AR7, 2-2
REGISTERBANK, 6-3, 6-11
Relative Jumps, 2-8
Relative offset, 2-8
Relocatable Expression Evaluation, 2-16
relocatable object code, 1-3
relocatable segments, 2-16
relocatable symbol, 2-16
Relocation and Linkage, 1-4
relocation types, 4-3
REN (Receive Enable), 1-15, 2-7
REPEAT built-in macro, 5-15, E-1
Reset, 1-17
RESTORE control, 6-3, 6-10, D-2
RET, 3-112, 3-113, B-7, B-9
RETI, 3-114, 3-115, B-7, B-9
return value, 5-2
RL51, 1-4
RL A, 3-116, B-7, B-9
RLC A, 3-117, B-7, B-9

RL-time expressions, 2-1
RR A, 3-118, B-7, B-9
RRC A, 3-119, B-7, B-9
RS *see* RESTORE control
RS0 (Register Select Bit 0), 1-7, 1-11, 1-13, 2-7
RS1 (Register Select Bit 1), 1-7, 1-11, 1-13, 2-7
RSEG, 4-1, 4-11
RXD (Serial Port Receive pin), 1-15, 2-7

SA *see* SAVE control
SAVE control, 6-3, 6-10
SB *see* SYMBOLS control
SBUF (Serial Port Buffer), 1-7, 1-12
SCON (Serial Port Control), 1-7, 1-12, 1-15
 scope, 2-11
 external, 2-11
 local, 2-11
 public, 2-11
 segment, 1-2
SEGMENT directive, 4-1, 4-3
 segment type, 2-1, 2-11, 4-10
 attributes, 4-3
BIT, 2-11
CODE, 2-11
 conventions, 2-12
DATA, 2-11
IDATA, 2-11
 in expressions, 2-15
 of operands, 2-3—2-5, 2-8, 2-9
 of symbols, 4-4—4-6
XDATA, 2-11

Segment Selection Directives, 4-1, 4-11
 serial I/O Port, 1-6, 1-7, 1-15
SETB
 C, 3-120, B-7, B-12
 bit address, 3-121, B-7, B-12
SET built-in macro, 5-11, E-1
SET directive, 4-1, 4-5, C-1
 simple relocatable expressions, 2-16
SINT, 1-16
SJMP *code address*, 3-122, B-7, B-11
SM0 (Serial Mode Control bit 0), 1-15, 2-7
SM1 (Serial Mode Control bit 1), 1-15, 2-7
SM2 (Serial Mode Control bit 2), 1-15, 2-7
 source listing, 7-18
SP (Stack Pointer), 1-12, 1-17, 1-19
 see also stack, 1-11
Special Assembler symbols, 2-1, 2-2
 see also EQU directive, 4-4, 4-5
Stack, 1-11
 stack segment, 4-4
Statement Labels, 4-2
Storage Initialization/Reservation
 directives (DS, DB, DW, DBIT), 4-1, 4-2, 4-7—4-9
SUBB
 Arithmetic function, 1-10
A,#data, 3-123, B-7, B-11
A,@Rr, 3-124—3-125, B-7, B-11
A,Rr, 3-126, 127, B-7, B-11
A,data address, 3-128, 3-129, B-7, B-11

SUBSTR built-in macro, 5-16, 5-17, E-1
SWAP A, 3-130, B-7, B-12
 symbol, 2-11, 4-4
 definition, 4-1, 4-2, 4-3
 names, 4-2
 see also BIT, 4-5
DATA, 4-6
EQU, 4-4, 4-5
SET, 4-5
XDATA, 4-6
 use of, 2-11, 2-12
SYMBOLS control, 6-3, 6-11, D-2

TITLE control, 6-3, 6-12, D-2
T0 (Timer/counter 0 External flag), 1-15, 2-7
T1 (Timer/counter 1 External flag), 1-15, 2-7
TCON (Timer Control), 1-7, 1-12
TF0 (Timer 0 Overflow Flag), 1-13, 2-7
TF1 (Timer 1 Overflow Flag), 1-13, 2-7
TH0 (Timer 0 high byte), 1-7, 1-12
TH1 (Timer 1 high byte), 1-7, 1-12
TIMO0, 1-17
TIMER1, 1-17
TL0 (Timer 0 low byte), 1-7, 1-12
TL1 (Timer 1 low byte), 1-7, 1-12
TMOD (Timer Mode), 1-7, 1-12, 1-14
TR0 (Timer 0 Run control bit), 1-14, 2-7
TR1 (Timer 1 Run control bit), 1-14, 2-7
TT *see* TITLE control
 two-pass assembler, 4-1
TXD (Serial Port Transmit bit), 1-15, 2-7
Type, 2-11
 address, 2-11
 number, 2-11
 register, 2-11
 segment, 2-11
TYPE, 7-20
 typeless symbol, 4-10
 type “REG”, 4-4

UNIT, 4-4
UPM, 1-6
UPP, 1-6
 Use of symbols, 2-11
USING directive, 2-2, 4-1, 4-12

Value, 2-11
 constant value, 2-11
 register name, 2-11
 segment base address, 2-11
 symbol address, 2-11
VALUE, 7-20

WF *see* WORKFILES control
WHILE built-in macro, 5-14, E-1
 words, Data Unit, 1-9
WORKFILES control, 6-3, 6-12, D-2
WR (write Data for External Memory), 1-15, 2-7
 Writing, Assembling, and Debugging an MCS-51 Program, 1-4

XCH

A,@Rr, 3-131, B-7, B-12
A,Rr, 3-132, B-7, B-12
A,*data address*, 3-133, B-7, B-12
XCHD A,@Rr, 3-134, 3-135, B-8, B-12
XDATA directive, 2-1, 2-11, 4-1, 4-3, 4-6,
 4-10
XR *see* XREF control
XREF control, 6-3, 6-13, 7-20, 7-21, D-2

XRL

Logical function, 1-10
A,#*data*, 3-136, B-8, B-10
A,@Rr, 3-137, B-8, B-10
A,Rr, 3-138, B-8, B-10
A,*data address*, 3-139, B-8, B-10
data address,#*data*, 3-140, B-8, B-10
data address,A, 3-141, B-8, B-10
XSEG directive, 4-1, 4-6, 4-11, C-2