Liber ex Doctrina



Liber version 2.0.0

Table of Contents

Sanguine Modules Mutants	
The Modules	
Mutants Blank	
Funes	
The Controls	
Knobs	
Inputs and outputs	
The context menu	
Acknowledgments & thanks	8
Contact	
Disclaimer	
Licenses & Copyrights	



Sanguine Modules Mutants

It is our sincere hope these modules excite you as much as they did us when creating them and fuel all your musical ventures!

In a hurry? If you are looking for the instructions for a specific module, use the handy provided table of contents. The modules are presented in alphabetical order.

The Modules

Mutants Blank

Have a goblin sit on your Rack along with the Mutants logo!

Makes your Rack look sleek.

Mutants don't need no controls.

Bypassing the module turns its lights off.






Funes

Featuring twenty four synthesis models that range from filtered classic wave shapes to synthetic hi-hats, Funes is a polyphonic macro oscillator that caters to your every musical need.

Funes is based on Mutable Instruments' well known macro oscillator "Plaits", with the latest 1.2 released firmware.

This manual covers basic operation; but a lot of enjoyment comes from experimentation and discovery. Have fun!

The Controls

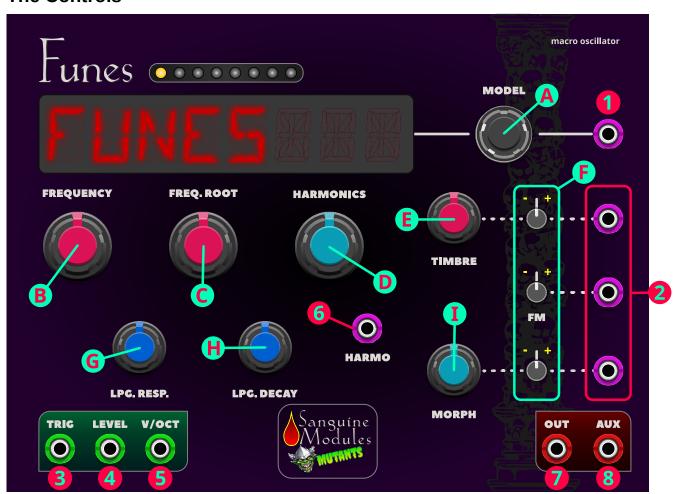



Knobs

A. MODEL: twist it back and forth to select the synthesis model. The available models are separated in three banks of eight.

Each of the LEDs at the top represent one of the models and reflect both the selected model and the bank it's contained in using one of three colors.

The model banks are separated as follows: pitched (green LEDs), noise/percussive (red LEDs) and new synthesis (orange LEDs). The character display uses an eight letter code to present your selection.

The available synthesis models are:

Model #	Model	Display	LEDs color	Note ¹
1	Classic waveshapes with filter.	FLTRWAVE	Orange	C0
2	Phase distortion	PHASDIST	Orange	C#0
3	6-operator FM 1	6 OP.FM1	Orange	D0
4	6-operator FM 2	6 OP.FM2	Orange	D#0
5	6-operator FM 3	6 OP.FM3	Orange	E0
6	Wave terrain synthesis	WAVETRRN	Orange	F0
7	String machine	STRGMACH	Orange	F#0
8	Chiptune	CHIPTUNE	Orange	G0
9	Pair of classic waveforms	DUALWAVE	Green	G#0
10	Waveshaping oscillator	WAVESHAP	Green	A0
11	Two operator FM	2 OP.FM	Green	A#0
12	Granular formant oscillator	GRANFORM	Green	B0
13	Harmonic oscillator	HARMONIC	Green	C1
14	Wavetable oscillator	WAVETABL	Green	C#1
15	Chords	CHORDS	Green	D1
16	Vowel and speech synthesis	VOWLSPCH	Green	D#1
17	Granular cloud	GR.CLOUD	Red	E1
18	Filtered noise	FLT.NOIS	Red	F1
19	Particle noise	PRT.NOIS	Red	F#1
20	Inharmonic string modeling	STG.MODL	Red	G1
21	Modal resonator	MODALRES	Red	G#1
22	Analog bass drum	BASSDRUM	Red	A1
23	Analog snare drum	SNARDRUM	Red	A#1
24	Analog hi-hat	HI-HAT	Red	B1

Synthesis models can also be selected directly using the context menu (see below).

Depending on the selected model, the module controls change different parameters.

¹ Only available when "C0 model modulation" is checked in the context menu.



For a detailed explanation of the specific models and how the controls behave when they are selected, please refer to the original "Plaits" manual and its 1.2 firmware addendum.

Plaits manual (covers Pitched and Noise/percussive models): https://pichenettes.github.io/mutable-instruments-documentation/modules

https://pichenettes.github.io/mutable-instruments-documentation/modules/plaits/manual/

Plaits firmware addendum (including New synthesis models manual): https://pichenettes.github.io/mutable-instruments-documentation/modules/plaits/firmware/

- **B. FREQUENCY** (coarse): its range can be adjusted using the "Frequency mode" item in the context menu. By default it is eight octaves (C0-C8). It also offers "Octaves" and "LFO" modes.
- **C. FREQUENCY ROOT:** when "Octaves" is selected as the "Frequency mode" this knob controls the root note.
- **D. HARMONICS:** model dependent tone control. In general it controls the frequency spread in the tone.
- **E. TIMBRE:** model dependent tone control. In general it controls the "darkness" of the tone.
- **F.** Attenuverters for the TIMBRE, FM and MORPH CV inputs. When the TRIGGER (3) input is patched and the corresponding CV is left unpatched, the attenuverters adjust the modulation amount from the internal decaying envelope generator. So... be warned, if you disconnect a CV input and the TRIGGER (3) patched, any attenuverter value other than "0" will allow the internal envelope to take over.
- **G. LOW PASS GATE RESPONSE:** controls the response of the internal low pass gate from VCFA (counter clockwise) to VCA (clockwise).
- **H. LOW PASS GATE DECAY:** adjusts the ringing time of the internal low pass gate and the decay time of the internal envelope.
- **I. MORPH:** model dependent tone control. In general it controls lateral timbral variations.

Inputs and outputs

1. MODEL selection CV: this input has two modes of operation that depend on your context menu selection:




- C0 model modulation (monophonic) unchecked (default): when the input is patched, two or more LEDs (depending on polyphony) light up. The blinking LED indicates the central value (the selected model) while the steady LEDs indicate the currently active one for each polyphonic channel. The input voltage functions as an offset to the currently selected central value: negative voltages decrease it and positive voltages increase it. This behavior is the closest to the original "Plaits" with the addition of polyphony.
- C0 model modulation (monophonic) checked: when the input is patched, the notes C0 to B1 select the current model. Selection is absolute and not influenced by the manually selected model.

In both modes the display updates, by default, to reflect the currently active model for the first, if polyphonic, or only channel connected to the input. This behavior can be disabled in the context menu (see below).

- 2. CV Inputs for the TIMBRE, FM and MORPH parameters.
- **3. TRIGGER:** serves four different purposes:
 - Triggers the internal decaying envelope generator.
 - Excites the physical and percussive models.
 - If the **LEVEL** input (4) is not patched, it strikes the internal low-pass gate.
 - Samples and holds the value of the **MODEL CV input** (1).
- **4. LEVEL:** opens the internal low pass gate; it also acts as an accent control when triggering physical or percussive models.
- **5. V/Oct:** controls the fundamental frequency of the produced sound, from -3 to +7 octaves relative to the root note set by the **FREQUENCY** (B) knob.
- **6. CV Input** for the **HARMONICS** (D) parameter.
- **7. OUT:** main output signal (model dependent).
- **8. AUX:** carries a variant or by-product dependent on the **OUT** (7) output signal (model dependent).



The context menu

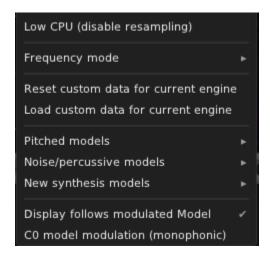

The Funes context menu offers the standard VCV Rack standard context menu with several additions:

- Low CPU (disable resampling): if your computer is struggling enabling this will save some CPU at the expense of sound quality.
- Frequency mode: sets the mode for the FREQUENCY (B) knob.
- Reset custom data for the current engine: some of the models in the "New synthesis models" bank allow the use of custom data. This menu option clears it and loads the built-in default.
- Load custom data for current engine: loads custom data for one of the following models:
 - 6-operator FM models.
 - Wave terrain synthesis.
 - Wavetable synthesis.

Data must be prepared as a .bin file using the editor available here:

https://github.com/tobiza/Plaits-Editor/tree/8190119e5c0e06b495e46eef62d8ed5ce874b53b

In order to use the editor you need to download the code and run it locally in your web browser (tested with Firefox).

• Pitched models, Noise/percussive models and New synthesis models: the items in the sub-menus directly select an specific synthesis model.



- **Display follows modulated model:** when enabled, the LED display changes to reflect the model currently selected by the voltage present in the **MODEL CV input** (1). If you want the display to only reflect the model selected using the knob or don't like the effect, disable this option. Enabled by default.
- **C0 model modulation (monophonic):** when enabled, the selected model is changed by sending note voltage values to the **MODEL** CV input. Selection is absolute. This disables the default Plaits-like behavior and is monophonic only. Disabled by default.



Acknowledgments & thanks

Mutable Instruments for designing such wonderful modules.

Tobi for the work on getting the 1.2 Plaits firmware in VCV Rack.

ipnielsen for helping with builds.

VCV Rack, MindMeld, Venom and Sapphire modules and their authors whose sources inspired the solutions for some of the graphical effects present in the Sanguine Modules plugins.

Everyone in the VCV Rack forum who got excited with my first "Funes" release.

Christy Marx for making me laugh, to this day, whenever I look at the Conquests of Camelot manual cover (and, in turn, inspiring the cover for this one).



Contact

Found a bug? Have a suggestion? A fix?

Please use the issues section at

https://github.com/Bloodbat/SanguineMutants/

Disclaimer

This software is provided "as is", without warranty of any kind, express or implied, including; but not limited, to the warranties of merchantability, fitness for a particular purpose and noninfringement. In no event shall the authors or copyright holders be liable for any claim, damages or other liability, whether in an action of contract, tort or otherwise, arising from, out of or in connection with the software or the use or other dealings in the software.

Slight discrepancies between the images on the package, this manual and the final plugin are possible and should not affect functionality in any way.



Licenses & Copyrights

Sanguine Modules; Sanguine Modules Mutants; Sanguine Modules Monsters, and their respective logos, branding and indications are copyright © 2024 Bloodbat / La Serpiente y la Rosa Producciones.

Mutable Instruments is a registered trademark.

This manual is © Bloodbat and licensed under CC BY-NC 4.0. Non-commercial use is allowed with appropriate credit and indication of the original license.

This plugin is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

The panel graphics and logos in the res/ folder are copyright © Bloodbat and licensed under CC BY-NC 4.0. Non-commercial use is allowed with appropriate credit and indication of the original license.

The component graphics in the res/components/ directory are copyright © VCV, modified by Bloodbat and licensed under CC BY-NC 4.0. Non-commercial use is allowed with appropriate credit and indication of the original license.

Dependencies included in the binary distribution may have other licenses. See LICENSEdist.txt for a full list.