


Table of Contents

1. Introduction to mCar	2
1.1 Product List	2
1.2 Specifications	3
1.3 PCB base introduction	4
2. Assemble the mCar	7
3. Getting Started with MakeCode	8
3.1 Create a new project	9
3.2 Delete a Project	11
3.3 Save a project	12
3.4 Import Files	12
3.5 Upload code	13
3.7 Unpairing Microbit	17
3.8 Upload the HEX file to the Micro:bit	17
3.9 Learn the basic syntax of Makecode	20
4. mCar Extension	20
4.1 Add mCar extension	20
4.2 Refresh mCar extension	22
4.3 Parsing of mCar extension statement	22
5. Basic Tutorials	26
5.1 Battery Fuel Gauge	26
5.2 Headlights	28
5.3 WS2812 RGB Ambient Lights	29
5.4 Infrared Receiver	31
5.5 Infrared tube sensor (line tracking sensor)	33
5.6 Ultrasonic Sensor	35
5.7 Drive wheels	36
6. Play with mCar	37
6.1 Evenly accelerate and go straight	37
6.2 Follow the black line	39
6.3 Don't cross the black line	41
6.4 Follow your hand at a fixed distance	43
6.5 Obstacle Avoidance	44
6.6 Follow the light	46
6.7 Infrared remote control	48
6.8 Control mcar with another Micro:bit	49
6.9 Accelerometer wireless control	52
6.10 Bluetooth APP control	54
7. mCar Extended Tutorial	65
7.1 Drive a 270 degree servo	65
7.2 Drive a 360 degree servo	67
8. QA	68
9. Contact us	69

1. Introduction to mCar

SIYEENOVE mCar robot is a micro:bit car designed around maker education and programming learning. It is very easy to install and multifunctional. Suitable for children over 6 years old, students and electronics enthusiasts.

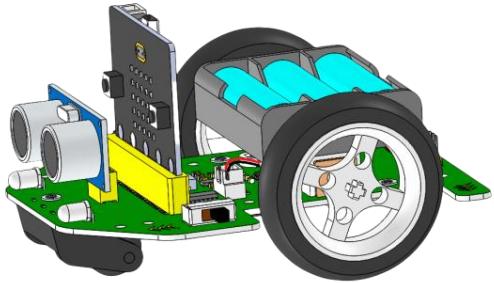


1.1 Product List

PCB base	Wheel	Ultrasonic module
AA Battery Case	Infrared remote control	Map
3M adhesive sticker		

SIYEENOVE


Note: You need to purchase three AA batteries and a Micro:bit v2 board with USB cable by yourself!

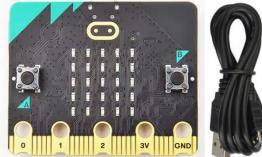AA Battery	Micro:bit-v2 with USB cable
 A photograph of a single AA battery with measurement lines indicating its height is 14mm and its width is 50mm.	 A photograph of a Micro:bit v2 board connected to a black USB cable.

1.2 Specifications

Control board:	Micro:bit - v2 (not included)
Programming language:	MakeCode
Battery interface type:	XH2.54 2P, input voltage 3--5.5V, 3 AA batteries are required
Infrared remote control:	NEC, remote control distance ≥ 5 meters
Motor:	GA12-N20 micro DC gear reduction motor (120 rpm)
Ultrasonic sensor:	HC-SR04 (distance measurement: 2cm-400cm, accuracy: 3mm)
Extension interface type:	2.54mm pitch pin header
Wheel diameter:	53mm
Length and width:	117.5*97*70mm

1.3 PCB base introduction

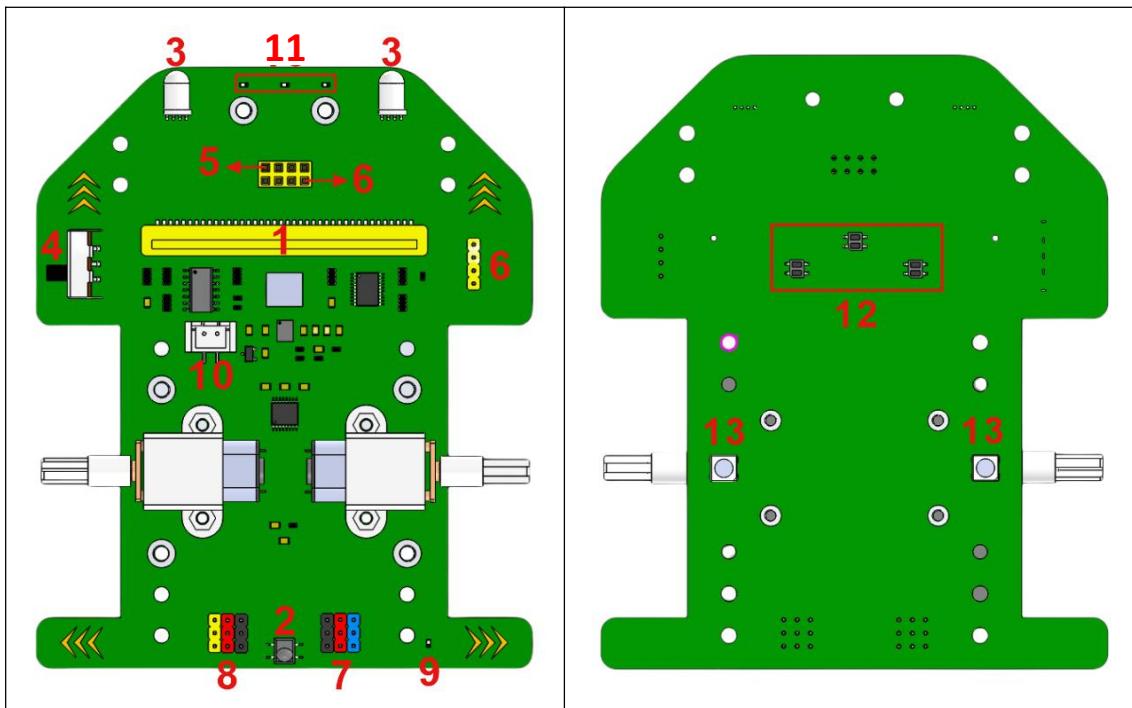

1: Micro:bit slot

Can be plugged into a Micro:bit v2 board.

2: Infrared receiving sensor

Using NEC infrared communication protocol, its signal pin is connected to the P9 pin of Micro:bit.

3: Head light

Equipped with two 5mm RGB LED lights on the left and right, respectively controlled by STC8H1K08, and the I2C port of Micro:bit sends relevant commands to STC8H1K08 to control it.

4: Power switch

Controls the power on and off of the battery box.

SIYEENOYE

5: Ultrasonic module interface

V=5V, G=GND, used to connect the HC-SR04 sonar module, the signal pins are connected to the P12 (Echo) and P13 (Trig) pins of Micro:bit respectively.

6: I2C port

It is the I2C communication interface of Micro:bit, SDA=P20, SCL=P19, which can communicate with other I2C devices.

7: Servo interface

Can be connected to 3 servos, which can be used to drive 90, 180, 270 and 360 degree servos.

8: IO expansion port

Can be connected to other sensor modules.

9: Power indicator light

After setting the battery model, this light will be on when the robot is working, and it will flash when the voltage is less than or equal to 20% of the voltage.

10: Battery interface

XH2.54 2P, input voltage 3--5.5V.

11: Infrared line tracking indicator

The light turns off when the sensor detects a black line, and turns on when it detects a white area.

SIYEENOYE









12: Infrared line tracking sensor

It is an infrared sensor that senses black and white areas through the principle of infrared reflection. There are three infrared line sensors on the left, middle and right bottom of the robot. The signal pins are connected to the P14, P15 and P16 pins of Micro:bit respectively.

13: RGB lights

The two WS2812 RGB lights at the bottom of the robot can emit controllable red, green and blue primary colors. By controlling the intensity of the three primary colors separately, various colors of light can be formed. The signal pin is connected to the P8 pin of Micro:bit.

2. Assemble the mCar
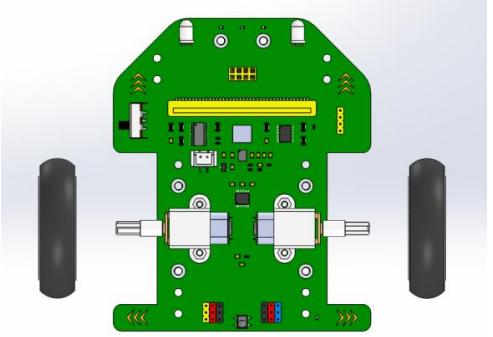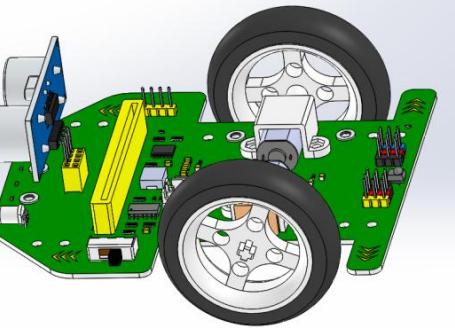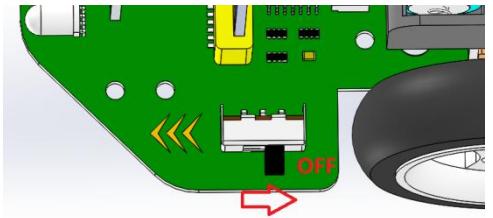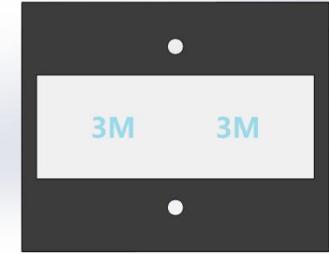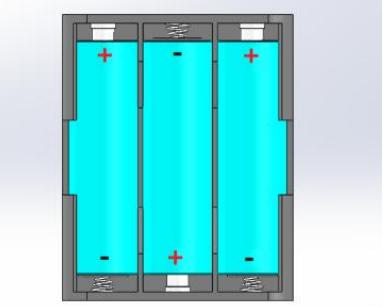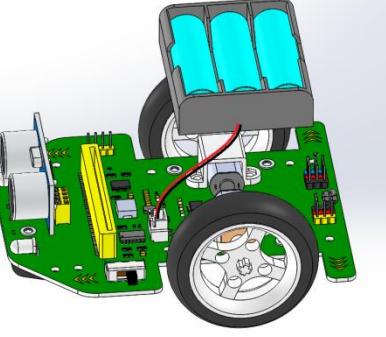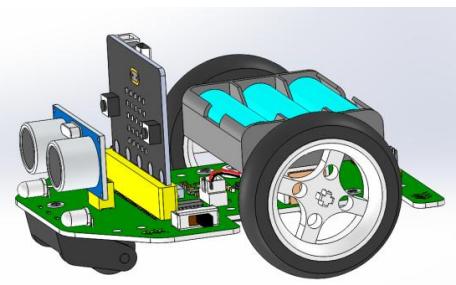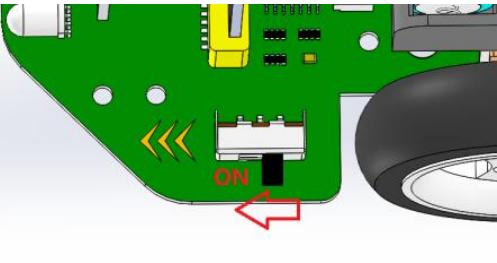
<p>Step 1: Install the wheels</p> 	<p>Step 2: Install the Ultrasonic Module</p> 
<p>Step 3: Turn off the power (Note: Turn off the power when plugging or unplugging the Micro:bit V2 to avoid damaging it!)</p> 	<p>Step 4: Stick the 3M double-sided tape on the center of the bottom of the battery case</p> 
<p>Step 5: Install 3 AA Batteries</p> 	<p>Step 6: Glue the Battery Box to the Robot</p> 
<p>Step 7: Insert the Micro:bit V2 board (note that the dot matrix faces forward)</p> 	<p>Step 8: Turn on the power switch</p> 

3. Getting Started with MakeCode

Microsoft's MakeCode editor is the perfect way to start coding with the BBC micro:bit. MakeCode is free and works across all platforms and browsers.

We recommend using Chrome or Edge browsers. WebUSB is a recent and developing web feature that allows you to access a micro:bit directly from a web page. It also lets you directly receive data into the MakeCode editor from the micro:bit. It works in Google Chrome and Microsoft Edge browsers.

WebUSB support for your micro:bit

If you're not using a current version of the Chrome or Microsoft Edge browsers, make sure they are this version or newer:

Chrome (version 79 and newer) browser for Android, Chrome OS, Linux, macOS and Windows 10.

Microsoft Edge (version 79 and newer) browser for Android, Chrome OS, Linux, macOS and Windows 10.

Link to download the latest Google Chrome:

<https://www.google.com/chrome/>

Link to download the latest Microsoft Edge:

<https://www.microsoft.com/en-us/edge/download>


SIYEENOVE

3.1 Create a new project

Open the Makecode editor on your browser: <https://makecode.microbit.org>, click “**New Project**”, Then you can **give a name** for your project.




The newly created projects will be saved in the current browser. Just revisit the <https://makecode.microbit.org> website and find them in the project list.

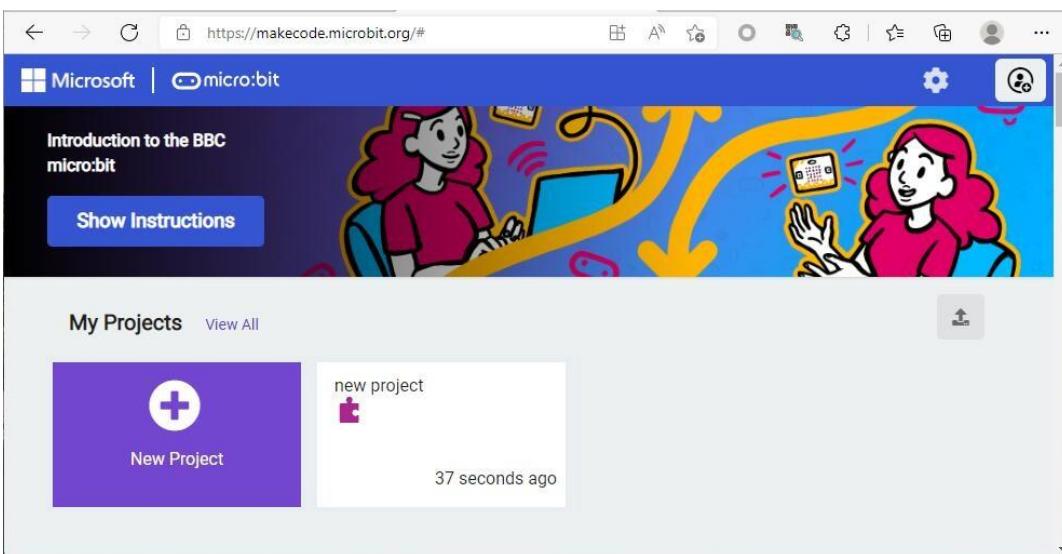

SIYEENOYE

Selecting Blocks:


1. Select a block category from the list on the left-hand side of the page.
2. Select a block from the selected category, then drag it to the workspace area on the right.
3. Snap new blocks onto existing blocks in the workspace area. As the new blocks are dragged into the workspace, the editor highlights the connecting parts of each block when they are in a valid position to snap to existing blocks. Also, the shape of the blocks gives you an indication of where they might fit into your code blocks.

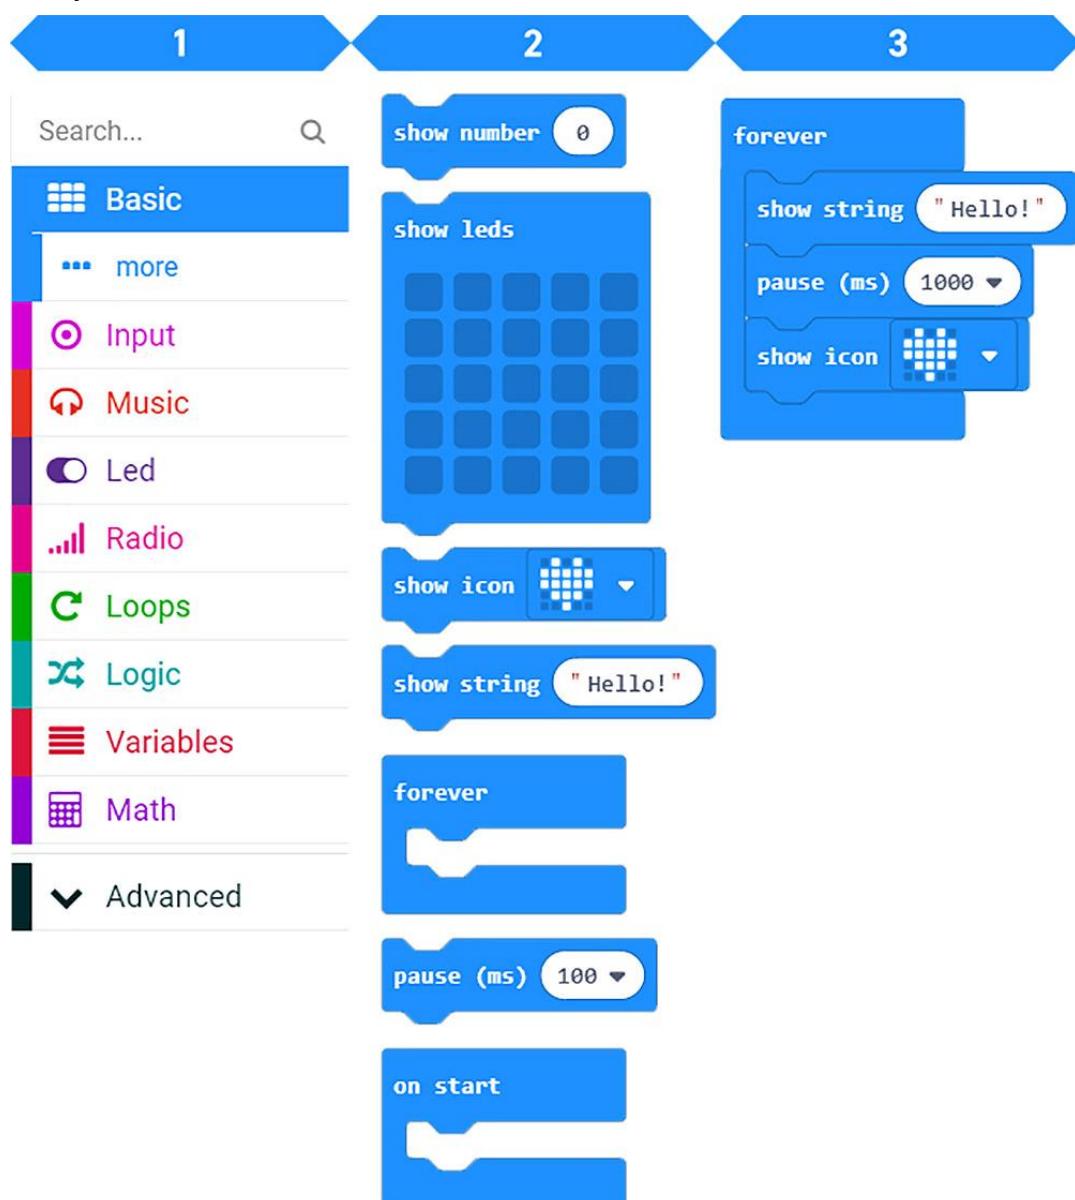


SIYEENOVE

3.2 Delete a Project

Click "View All":

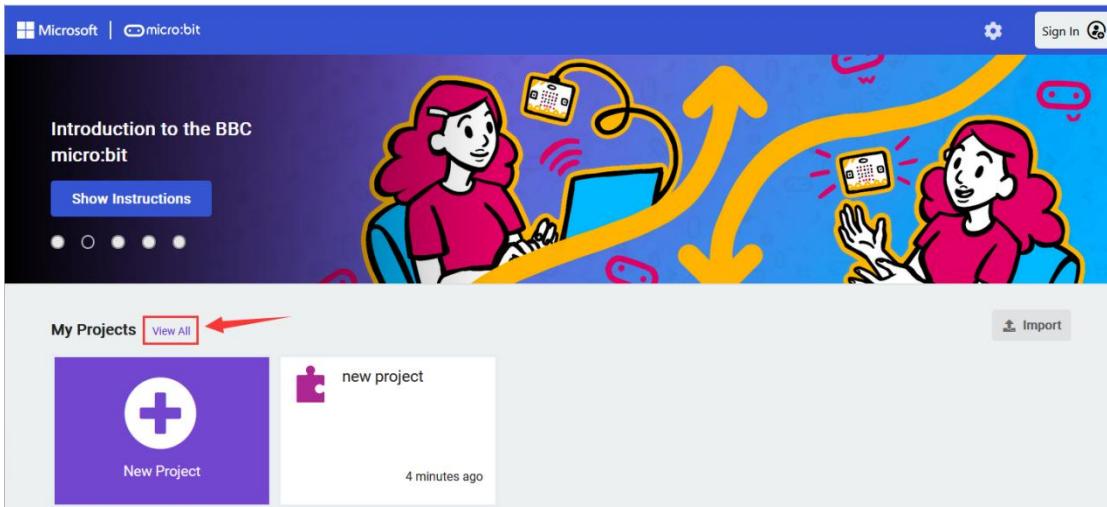


Select the project you want to delete, and click **Delete** button.

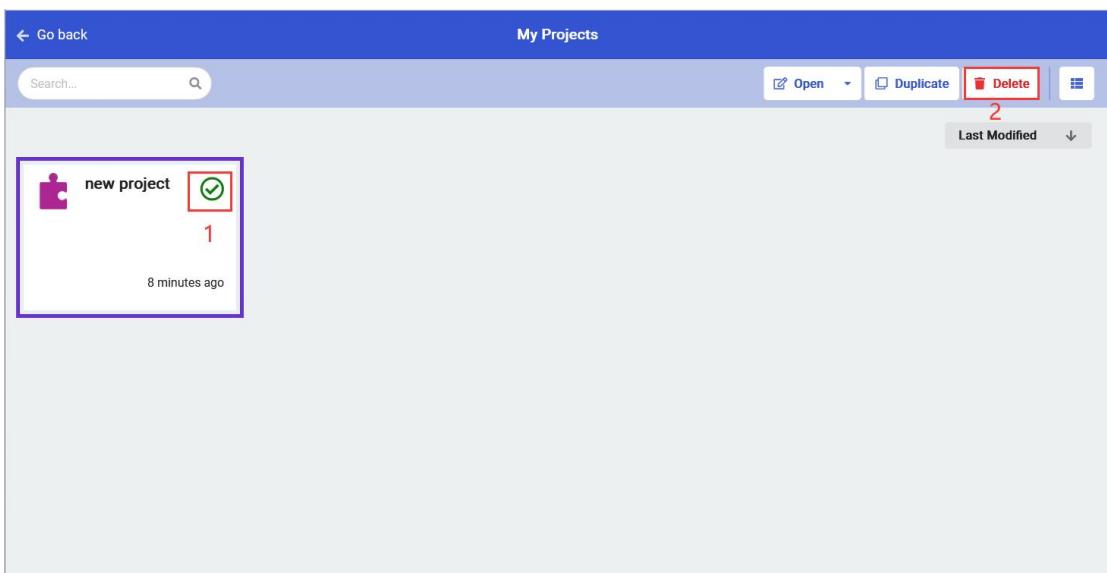


3.3 Save a project

Click the "Save" button, and then click the "Done" button to save the project to your computer, as shown below:

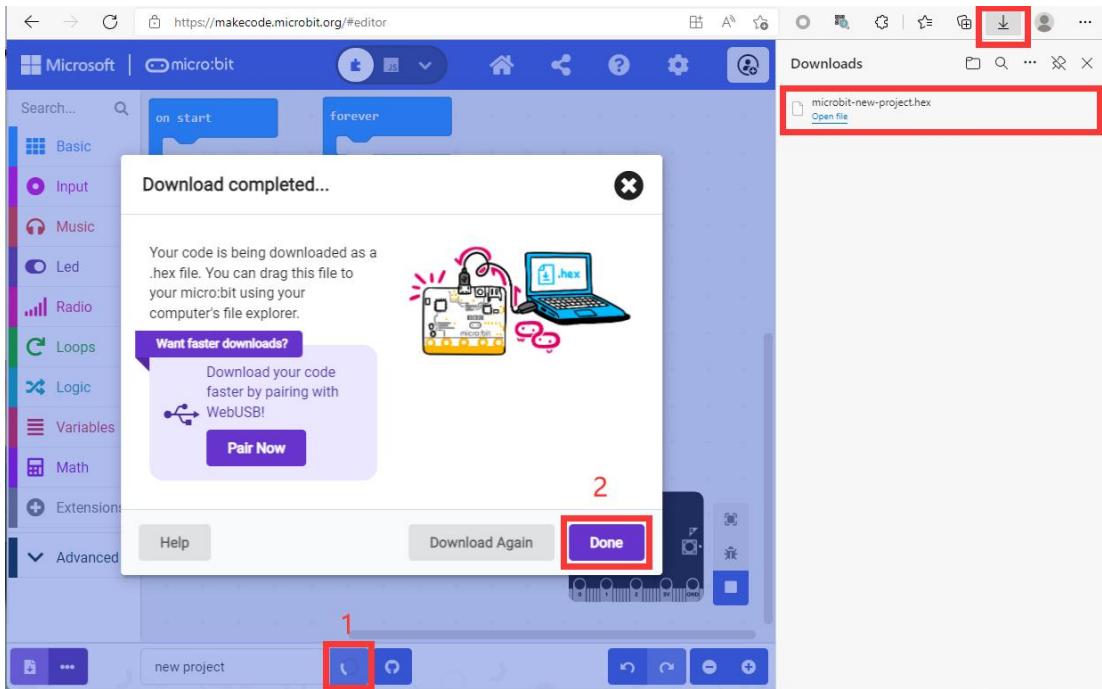


3.4 Import Files

Simply drag the local "HEX" project file to the work area of the MakeCode editor, as shown below:


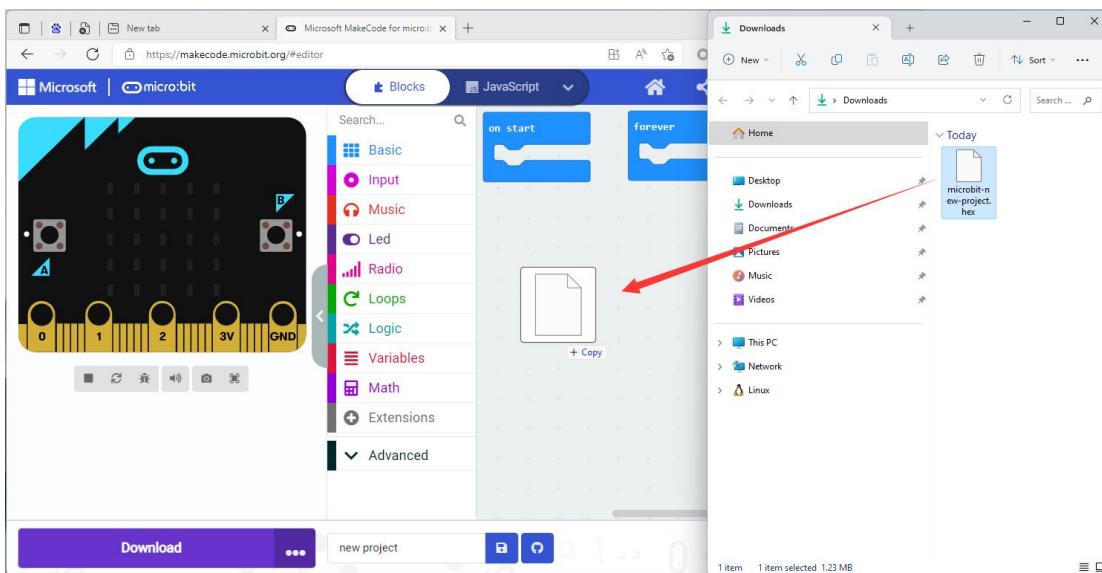


3.5 Upload code

Things you need:

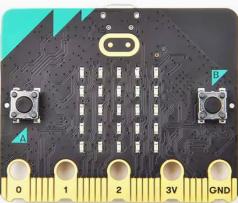PC	Micro:bit v2.x.x	Micro USB Cable
		


Use a Micro USB cable to connect the micro:bit board to the PC. You will find a new USB disk called MICROBIT on the PC:

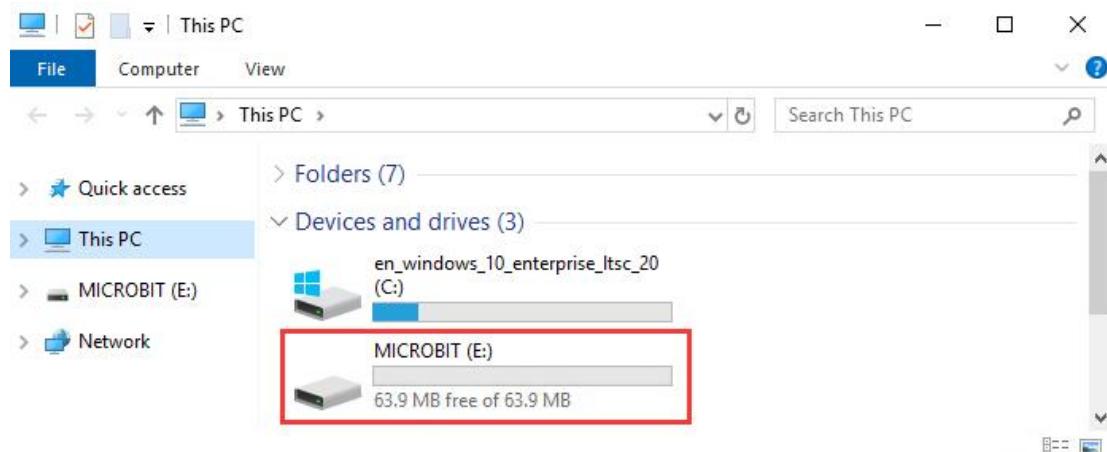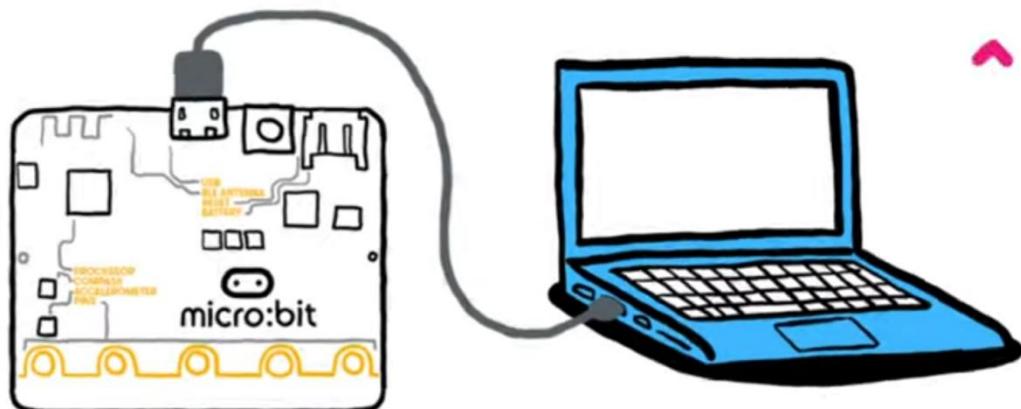



SIYEENOVE

Open the MakeCode editor on your browser, hold down the left mouse button, and drag the **show icon** statement on the left to the working area on the right:

<https://makecode.microbit.org/#editor>

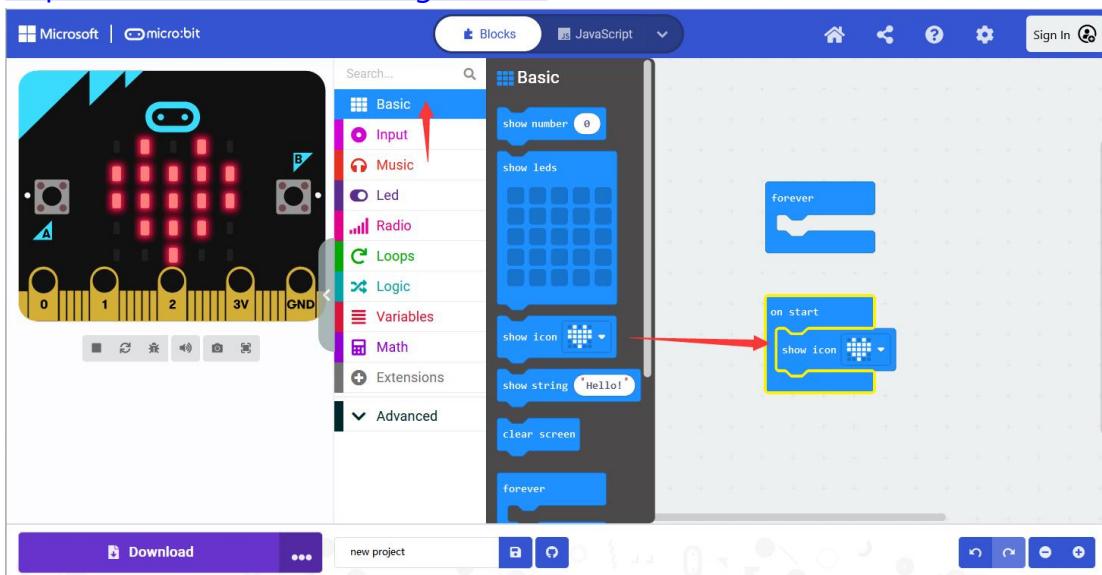


Click on the **three dots** next to the Download button. Then click the "**Connect Device**", and then click the "**Next**" , as shown below:

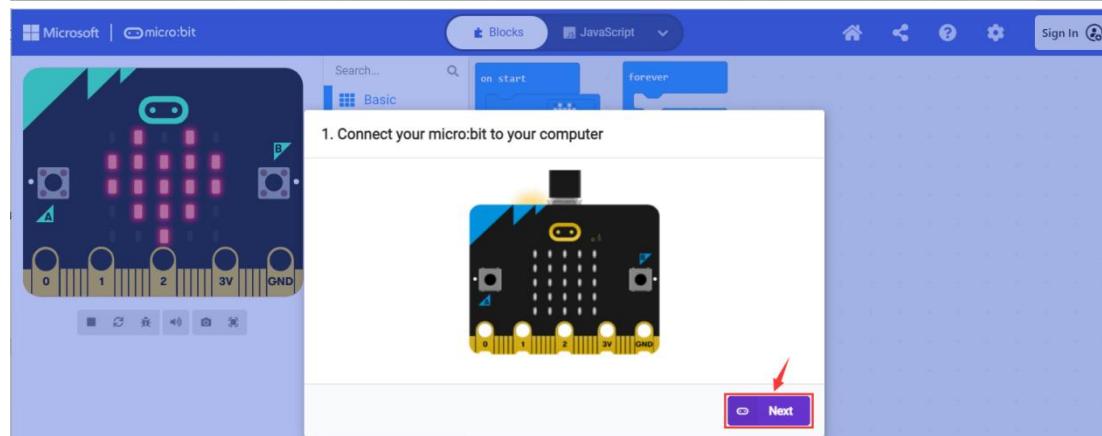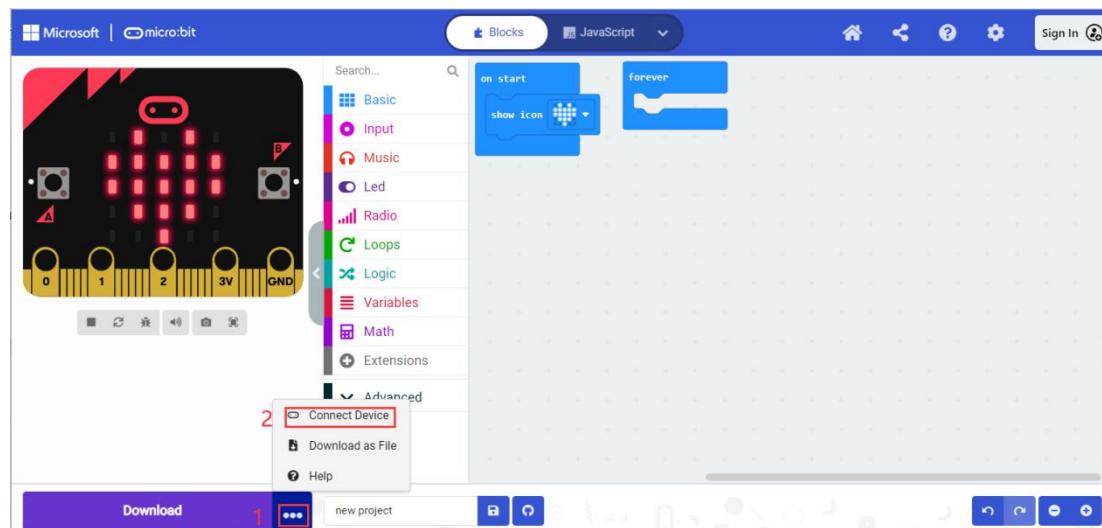


SIYEENOVE


Click the “Pair” button:

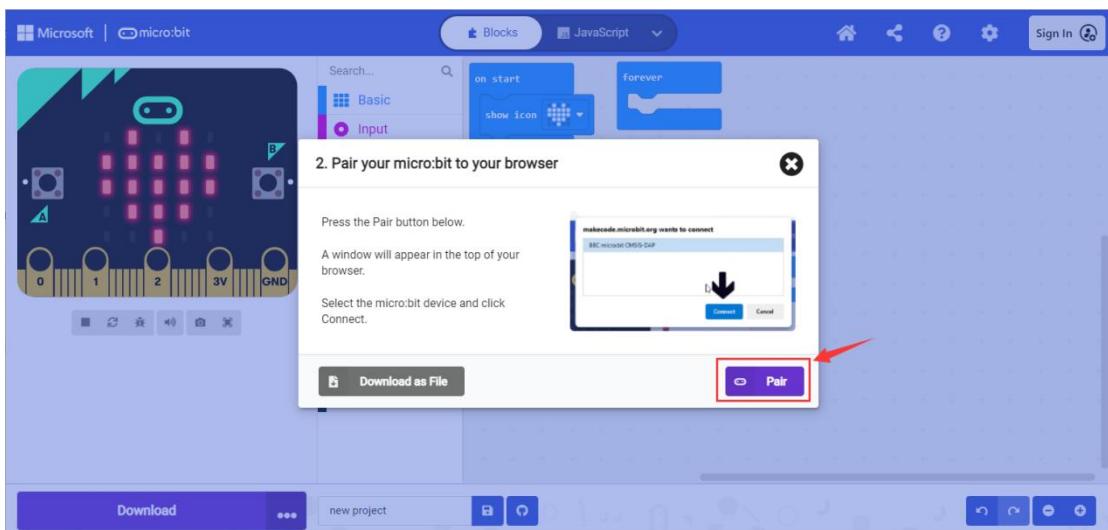

Select the Micro:bit board you want to connect to, and then click "Connect":

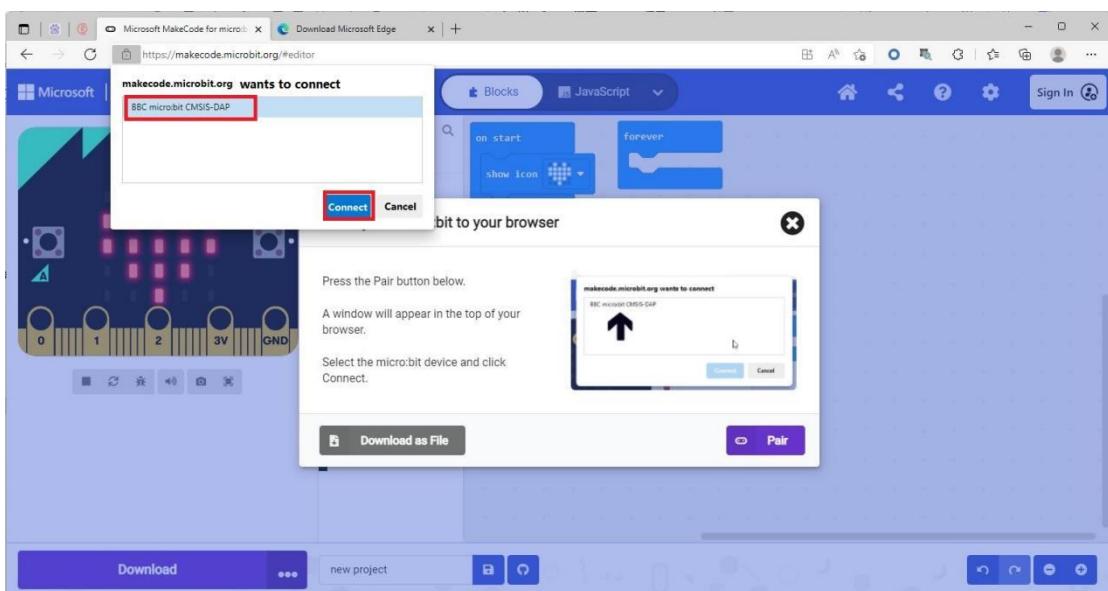


The connection is successful, click "Done":

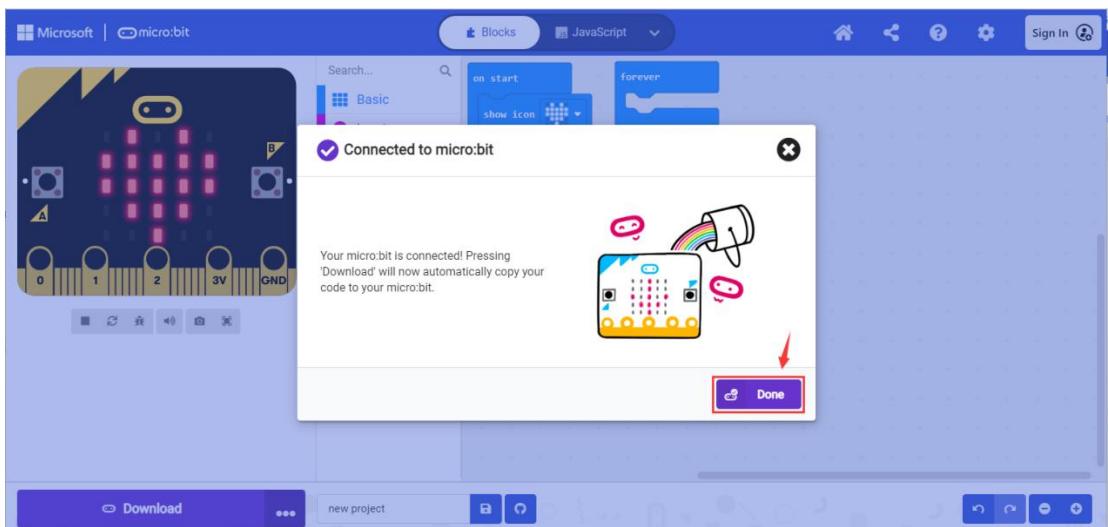


SIYEENOVE

Click the "**Download**" button, you can flash the code to the Micro:bit with WebUSB.

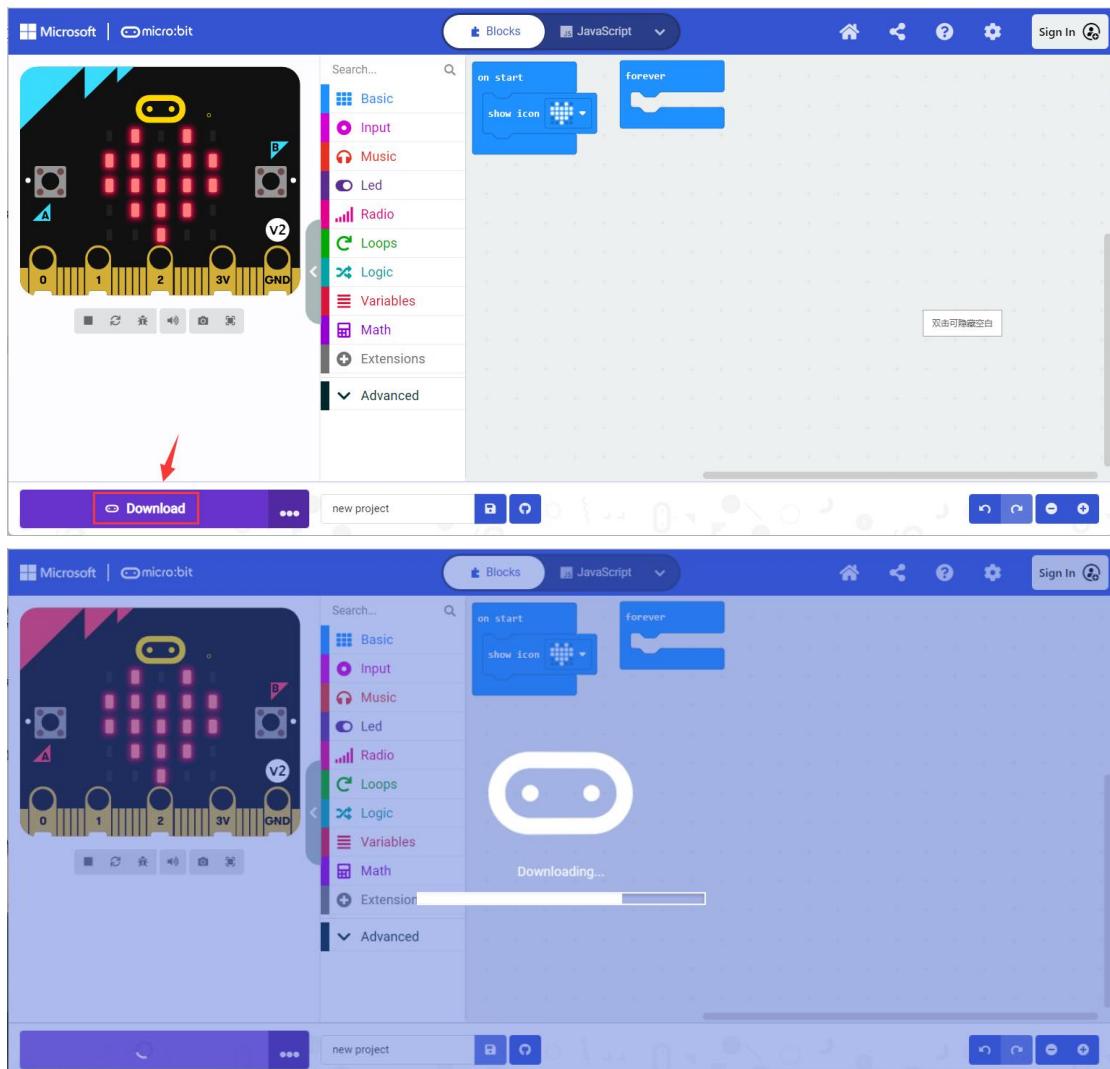


After uploading the code, the dot matrix of the Micro:bit board displays a heart shape:

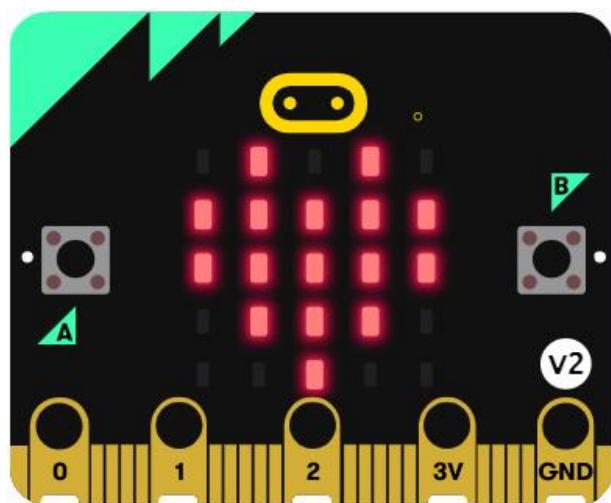

SIYEENOVE

3.7 Unpairing Microbit

- Click the button to the left of your browser's search box.
- Select the Microbit device you want to disconnect and click the button to the right of it.

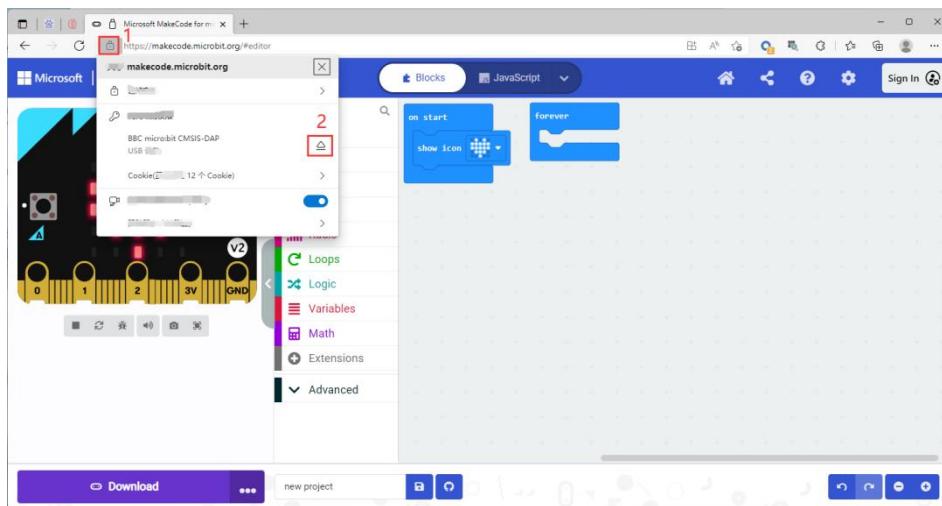


3.8 Upload the HEX file to the Micro:bit

If the Micro:bit is not paired with Microsoft Edge or Google Chrome browser, or if you are using Safari/Firefox/Other browser that may not support WebUSB, directly click the "**Download**" button, the code won't transfer directly to your microbit, it will be downloaded as a .hexfile. Just like click the save icon to save a copy of the hex file to your computer.




SIYEENOVE


When the following interface appears, click the "X" button and click "**Done**":

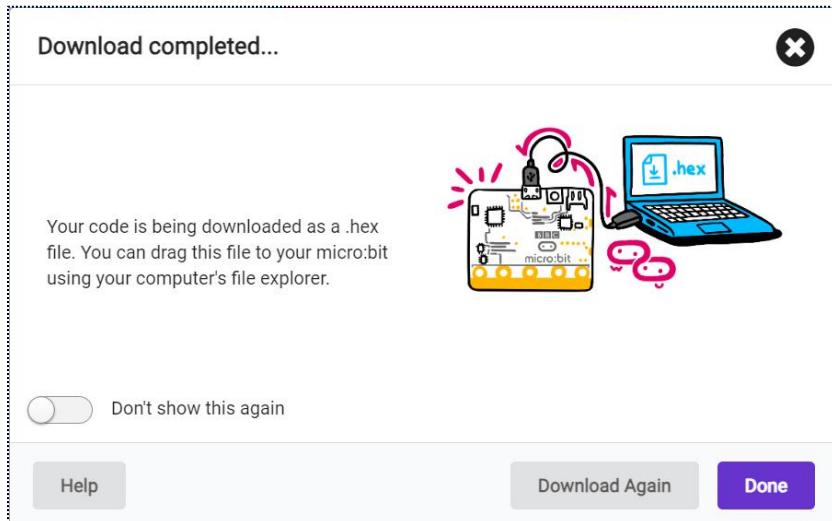

Find the downloaded hex file in the default save path of browser.

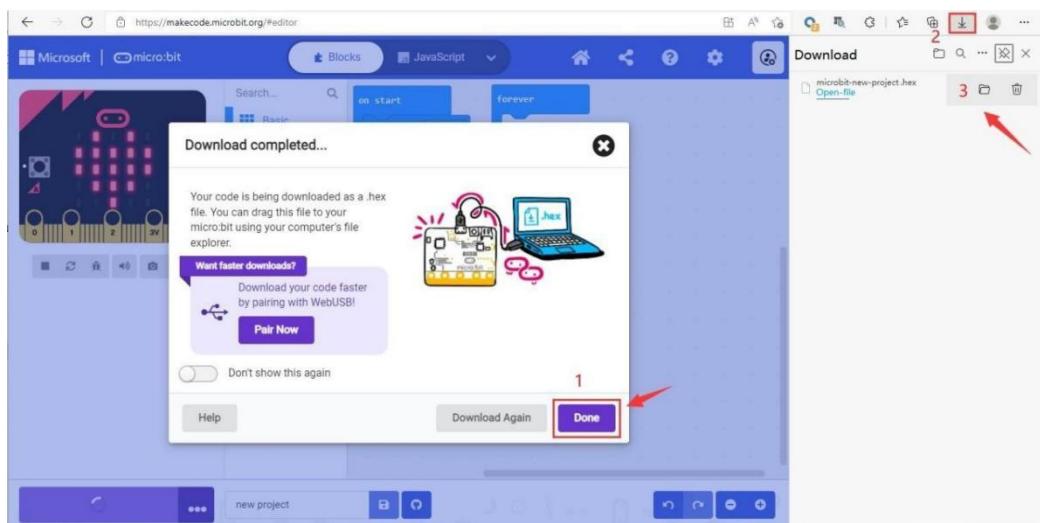


Then select the downloaded hex file, right click the mouse and click "Send to", then you can send the hex file to your Microbit:

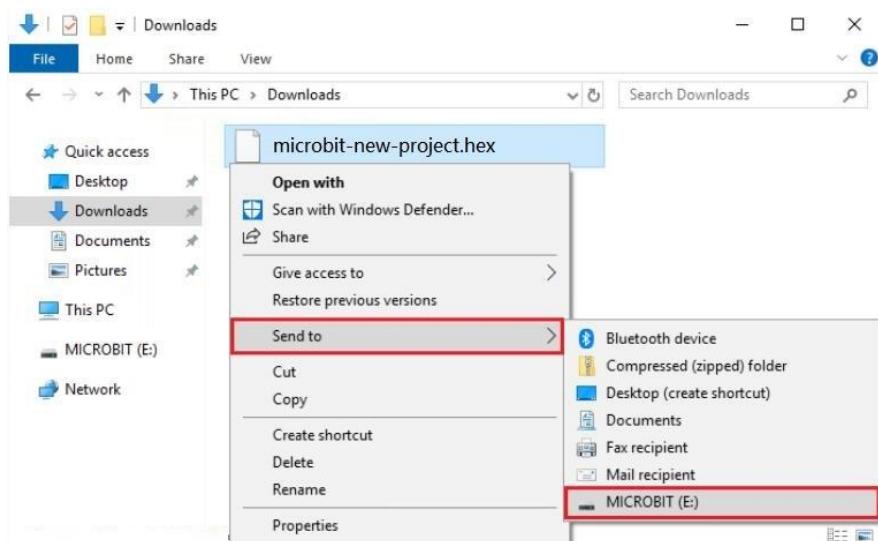


SIYEENOVE


If you do not use the "Send to" button, you can directly drag the hex file to the Micro:bit:

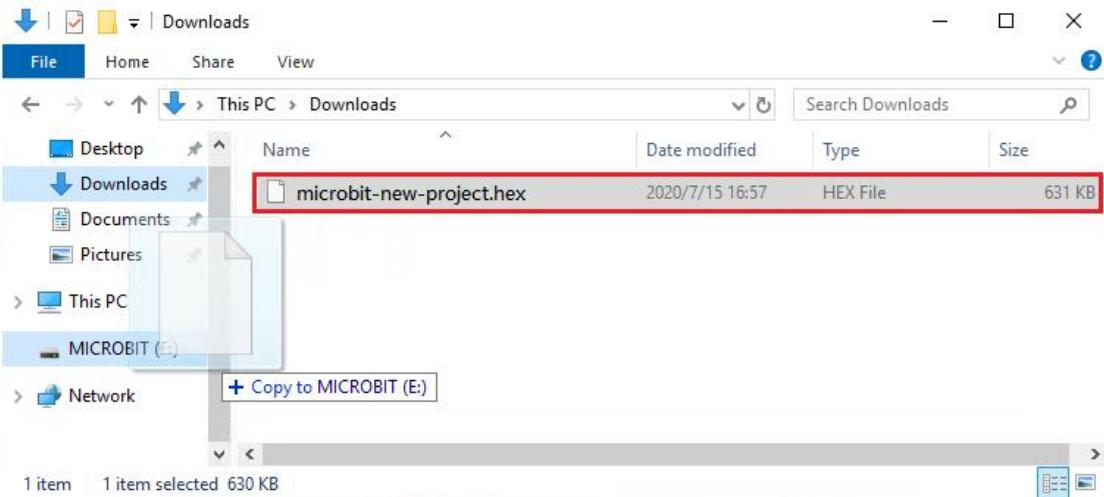

The following interface indicates that the code is being uploaded, at the same time, the yellow LED on the back of the Microbit will also flash rapidly until the code upload is complete.

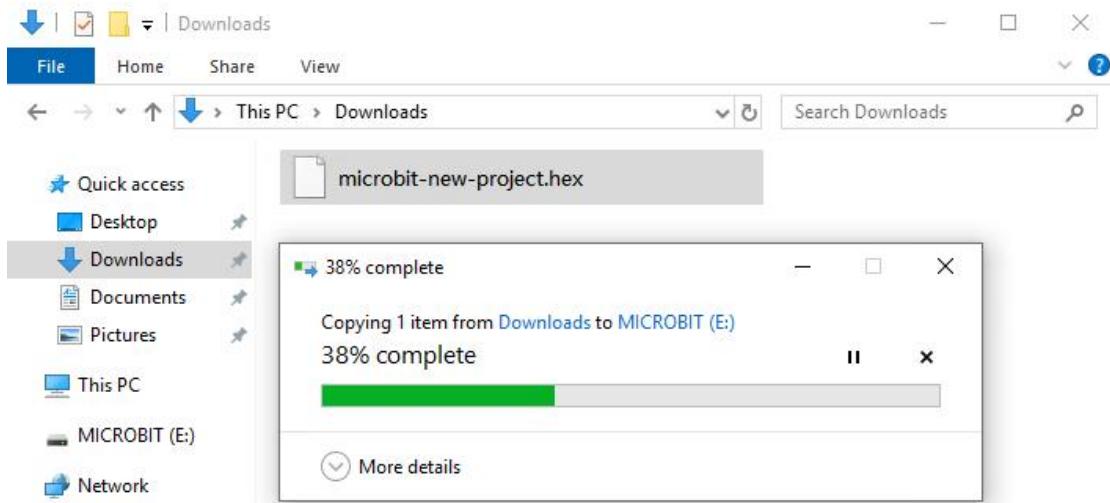

After the code upload is complete, the Micro Bit will disconnect and reconnect. If you look at the contents of the MICROBIT drive, you will not see the .hex file listed, this is normal, but your hex file will start automatically.

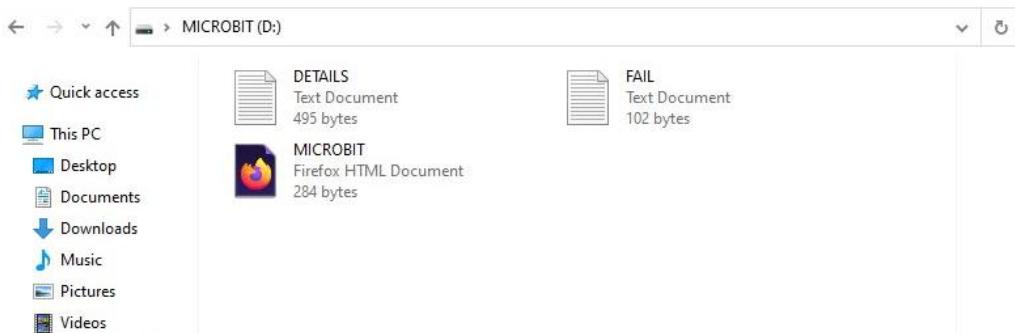

3.9 Learn the basic syntax of Makecode

The Micro:bit platform provides official MakeCode API and device usage documents for your reference.

To use APIs: <https://makecode.microbit.org/reference>

To use device: <https://makecode.microbit.org/device>


Logic and data types: <https://makecode.microbit.org/blocks>

4. mCar Extension

4.1 Add mCar extension

We have developed an extension for mCar, which makes it easier for us to use MakeCode to program mCar. The steps to add the extension to the Makecode are as follows:

Click the **Settings** button in the upper right corner of the interface and click "Extensions"

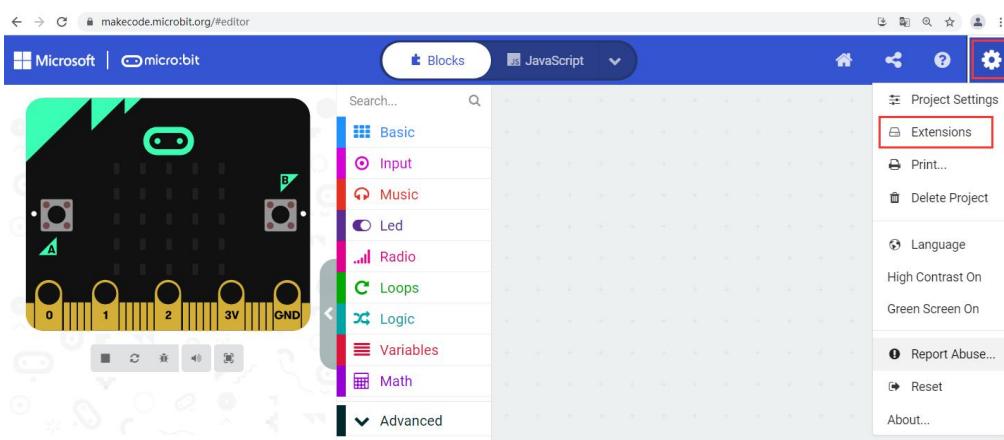


SIYEENOVE


Extension link for mCar: https://github.com/siyeenove/pxt_mcar

Copy the above link into the search box on the extension page and click the search button on the right.

Click on the extension named **mcar** in the search results.

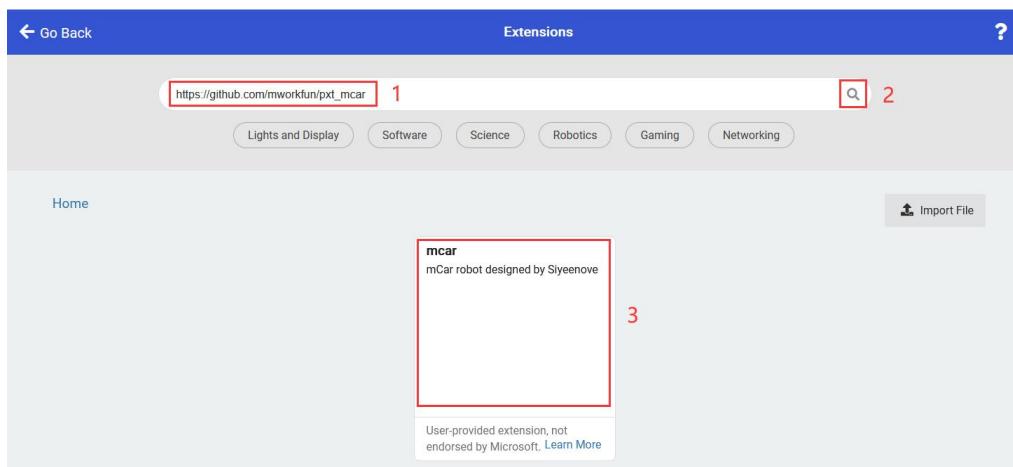


After a few seconds the page will jump to the Makecode main interface, and you will see the added mcar extension in the toolbox list.

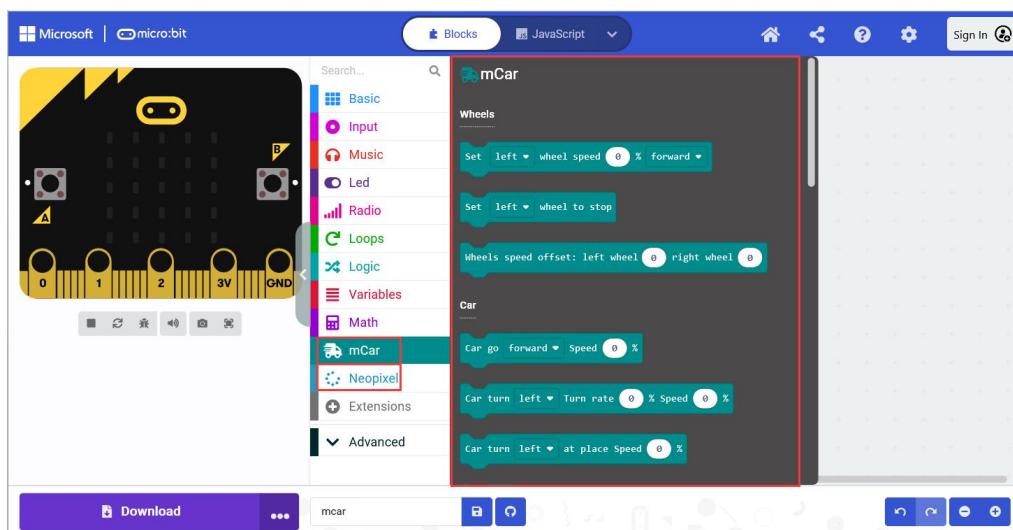

4.2 Refresh mCar extension

Open the project with the mCar extension added, and switch to the JavaScript programming interface to refresh the extension:

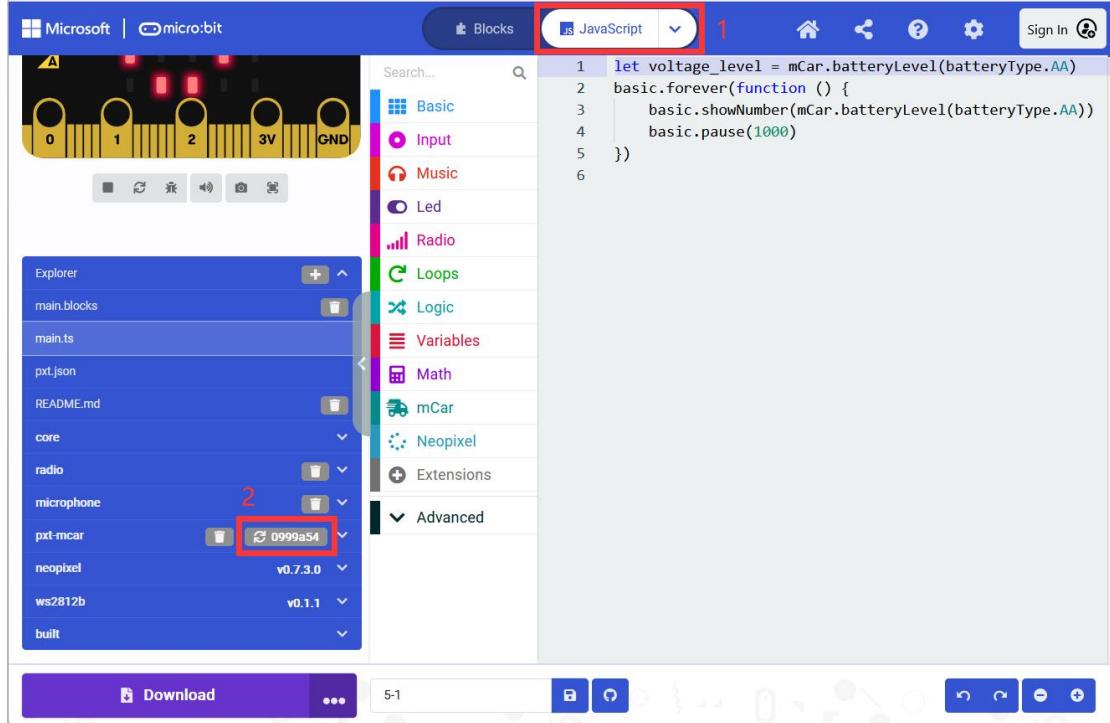





After refreshing, switch back to the "Blocks" interface.

4.3 Parsing of mCar extension statement

All Makecode statements based on mCar are integrated in the mCar extension package. The statement analysis is as follows:

Wheels	 <p>Set the mCar's wheels to move forward or backward, and at what speed.</p>  <p>Set the speed and direction of the left and right wheels of the mCar.</p>
---------------	--




SIYEENOVE

Wheels	 Set the mCar wheels to stop turning.
	 Adjust the speed of the left and right wheels of mCar and save them permanently inside mCar. This statement can be used to adjust the speed of mCar when it cannot go in a straight line.
Car	 Control the speed at which mCar moves forward or backward.
	 Controls the turning rate and speed of the mCar to turn left or right. The greater the turning rate, the smaller the turning angle.
	 Control the speed at which mCar turns in place.
	 The mCar wheels stopped turning.
	 Colors from the mCar's headlight color palette.
	 By changing the three color values, the mCar's headlights can be lit in different colors.
	 Turn off the mCar's headlights.
Tracking sensor	 Read the values detected by the mCar 3 line tracking module and save

SIYEENOVE


	<p>them in internal variables.</p>  <p>Determine whether the value of the 3-way line tracking sensor is equal to the value in the statement tab. Before using this statement, you need to call the "Get the status value of the tracking sensor" statement once.</p>
Tracking sensor	 <p>The value of the 3-way line tracking sensor in the variable. Before using this statement, you need to call the "Get the status value of the tracking sensor" statement once.</p>
	 <p>Determine whether the value of one of the three line tracking sensors is equal to the value in the statement tab. Before using this statement, you need to call the "Get the status value of the tracking sensor" statement once.</p>
Sonar sensor	 <p>Read the distance value of the ultrasonic module.</p>
	 <p>Infrared receiving loop function, this function has been processing the received infrared data.</p>
Infrared sensor	 <p>Determine whether the data received by the infrared receiver is equal to the key value in the Statement tab.</p>
	 <p>Read the data received by the infrared receiver. Before using this statement, use the "if" statement to determine when the return value is not 0, and then the data will be valid.</p>
Expansion port	 <p>to drive the servo statement, which can drive 90, 180, and 270 degree servos; the interface is the S1, S2, and S3 expansion port on the mCar.</p>

SIYEENOVE

Expansion port	
	The driving statement of 360-degree servo; the interface is S1, S2, S3 expansion port on mCar.
Battery	
	Statement to sets the battery model and reads the battery voltage, returning the battery level between 0 and 100%. It is recommended to execute this statement once when the machine is turned on.
APP command	 Send the string to the left or right text display box of SIYEENOVE APP.
	 Determine whether the data received by the Bluetooth of the Micro:bit is the key value of SIYEENOVE APP.
Other	
	Read the version number of mCar and return a string value.
Neopixel	 Use the P8 pin of micro:bit to drive the two WS2812 RGB lights at the bottom of mCar.
	 The two WS2812 RGB lights on the bottom of the mCar light up the colors in the tabs.
	 Set the brightness of the two WS2812 RGB lights at the bottom of the mCar.
	 Turn off all WS2812 RGB lights.

5. Basic Tutorials

The sample codes for the basic tutorials are all saved in the "Code -> Basic tutorials" file:

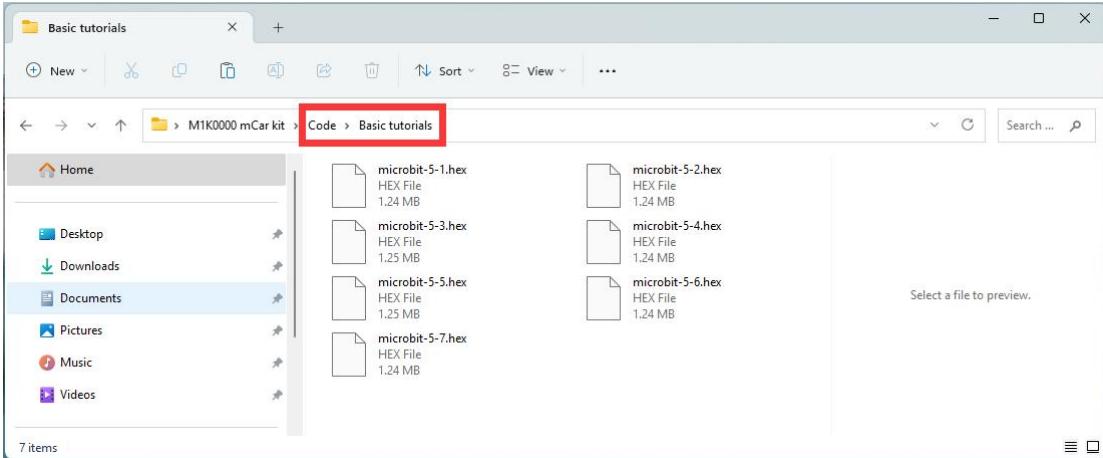

Reminder!!!

You don't need to add the ecar extension if you import and use the code we provided.
If you create a new project and drag and drop blocks to build code, you need to manually add the mCar extension, please refer to sections 3.1 and 4.1.

5.1 Battery Fuel Gauge

Goal

Set the battery type and read the battery voltage level.



Things you need:

Computer	Micro:bit v2.x.x	Micro USB Cable	mCar

Programming

Import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, you need to add the mcar extension.

1. Click “**Variables**”>“**Make a Variables**”>New variable name: **voltage level**
2. Drag “**set voltage level to 0**” and stitch it to ““**on start**””
3. Click “**mcar**” and drag “**Read AA battery level**” behind the voltage level
4. Click “**Basic**” and drag “**show number**” to stitch it to ““**forever**””
5. Click “**mcar**” and drag “**Read AA battery level**” behind “**show number**”
6. Click “**Basic**” and drag “**puase(ms)100**” below the “**show number**”, change the number 100 to 1000

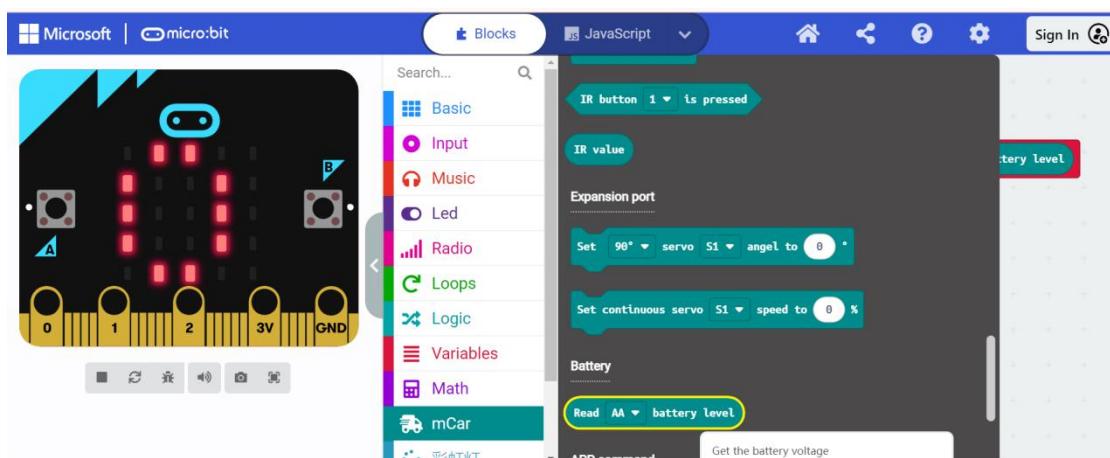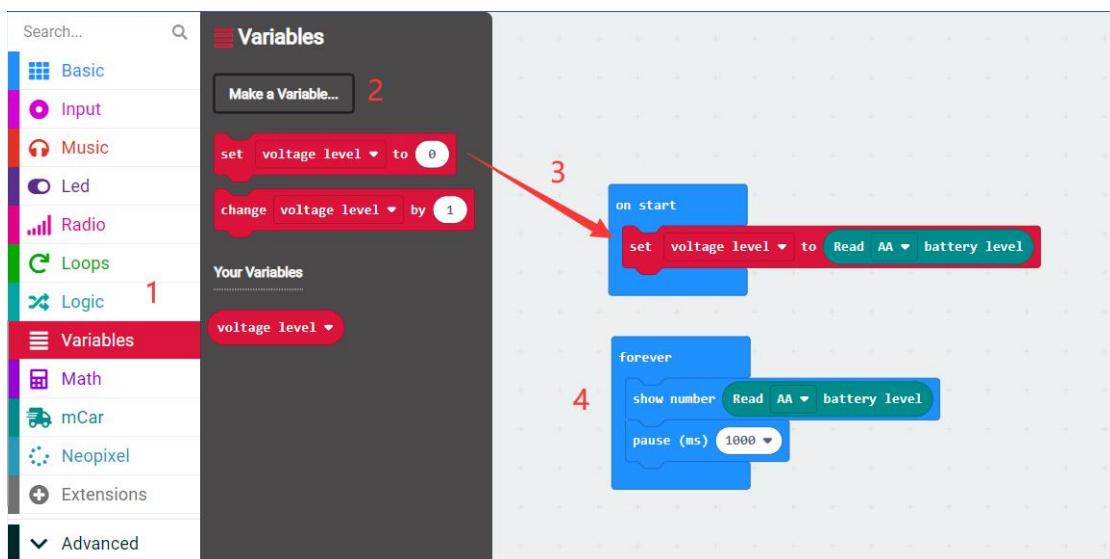

- Create a variable.
- Set the battery type in the "on start" block and read the battery voltage level;
- Display the battery voltage level in the "forever" block.

Consequence

The dot matrix of Micro:bot displays the voltage level, with a value range of 0--100%. When the battery voltage level is less than or equal to 20%, the battery indicator light is always on; otherwise, it flashes.

Note



The statement to read the battery voltage level must be executed once in the program to set the battery type, otherwise the battery voltage indicator will not work properly!

5.2 Headlights

Goal

Make the mCar's headlights flash.


Things you need:

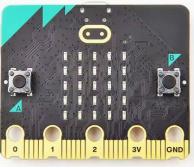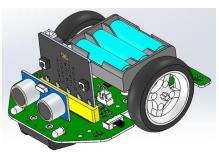Computer	Micro:bit v2.x.x	Micro USB cable	mCar
			

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

SIYEENOVE

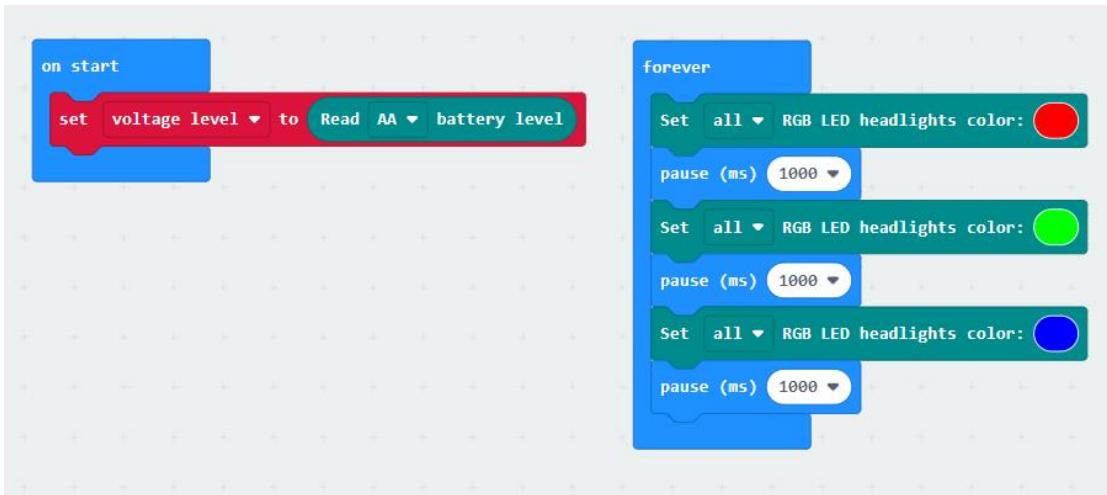

- Set the battery type in the "on start" block.
- Light up both headlights in the "forever" block.

Consequence

The two headlights of the mCar light up in a cycle: red -> delay 1 second -> green -> delay 1 second -> blue -> delay 1 second.

5.3 WS2812 RGB Ambient Lights

Goal


Make the two WS2812 RGB lights on the bottom of the mCar light up.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

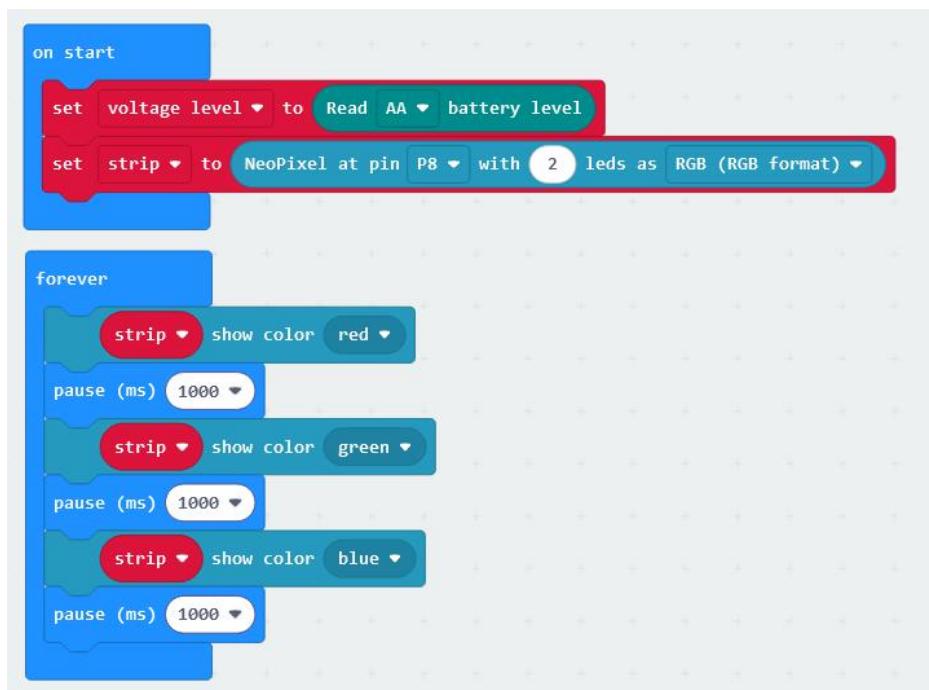

- Set the battery type in the "on start" block.
- Light up the two WS2812 RGB ambient lights at the bottom of the mCar on the "forever" block.

Consequence



The two WS2812 RGB ambient lights at the bottom of the mCar light up in a cycle: red -> delay 1 second -> green -> delay 1 second -> blue -> delay 1 second.

5.4 Infrared Receiver

Goal


Read the key values of the infrared remote controller through the infrared receiver of mCar.

Thing:

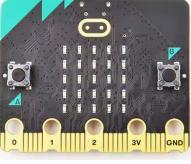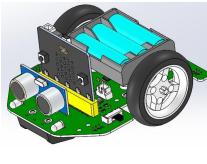Computer	Micro:bit v2.x.x	Micro USB cable	mCar	IR Remote
				

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

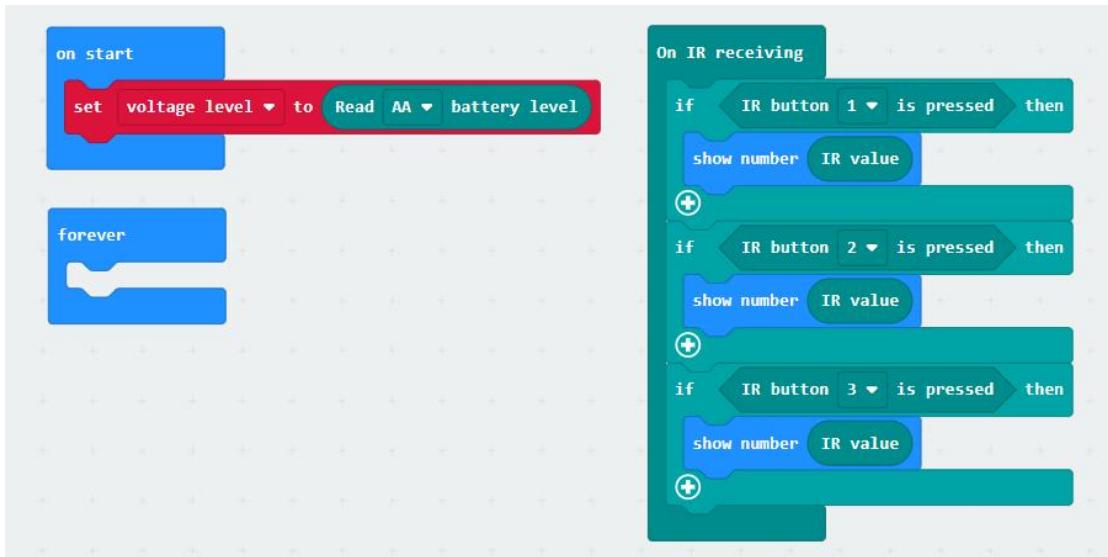


- Set the battery type in the "on start" block.
- On the "forever" block, use 3 judgment statements in the infrared data receiving block to check whether the 1, 2 or 3 button is pressed. If a button is pressed, display the button value.

Consequence

Use the infrared remote controller to press the button toward the infrared receiver on the mCar. The dot matrix on the Micro:bit will display the infrared remote controller button value.

Note:

When using the infrared remote control, the plastic battery cover at the bottom must be removed and the batteries must be installed correctly.

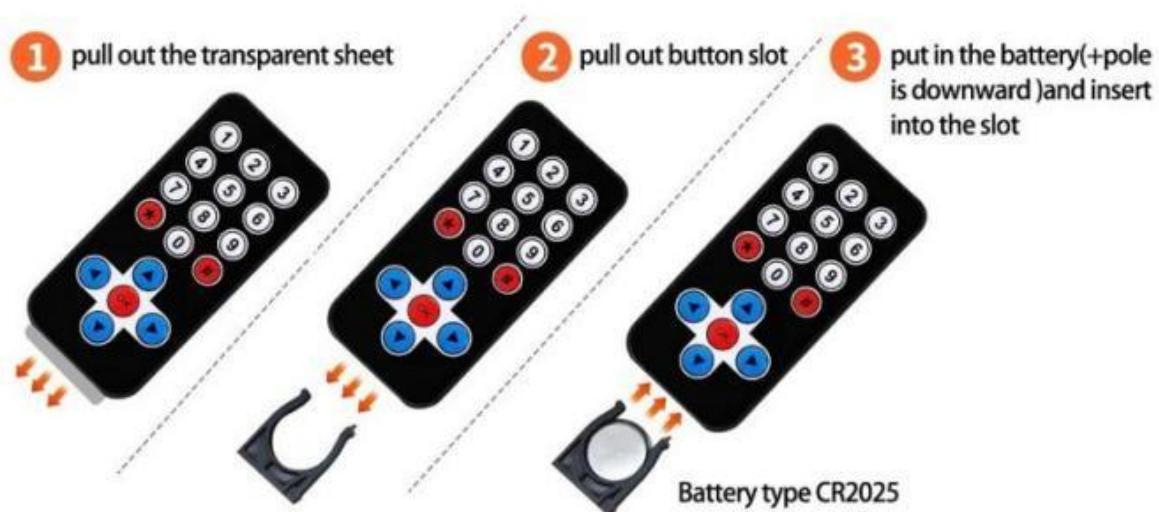

5.5 Infrared tube sensor (line tracking sensor)

Goal


Let mCar's three infrared black and white line sensors identify black and white area.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Map

Programming


Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

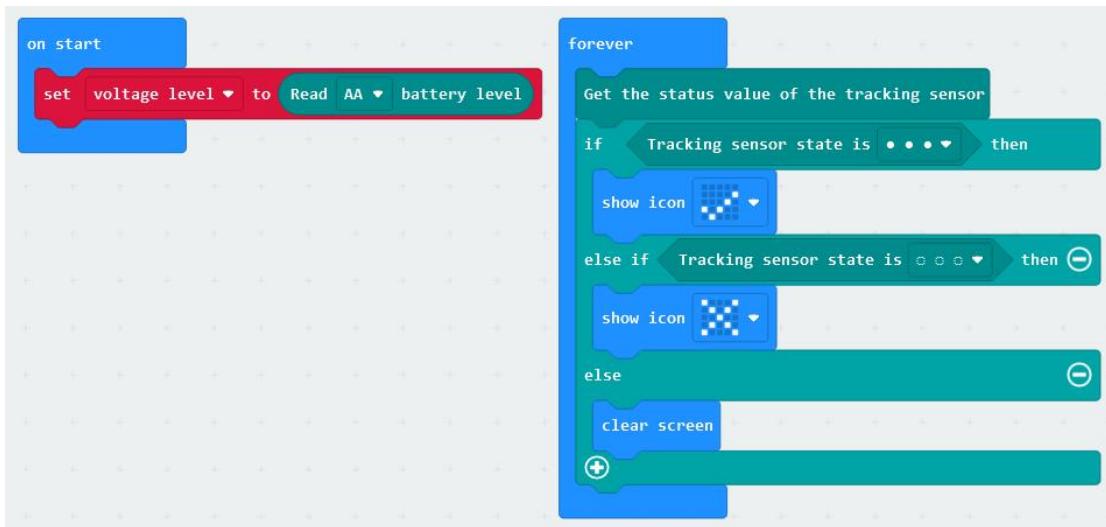

- Set the battery type in the "on start" block.
- Read the values of the three sensors in the "forever" block, and then use three judgment statements to process whether a black line is detected. If all three sensors detect black, "✓" is displayed, and if none of them detect black, "✗" is displayed.

Consequence


Black objects with rough surfaces have a good absorption effect on infrared rays. When the infrared rays emitted by the sensor hit the black line, the infrared rays are absorbed; when it hits the white object, the infrared signal is reflected back.

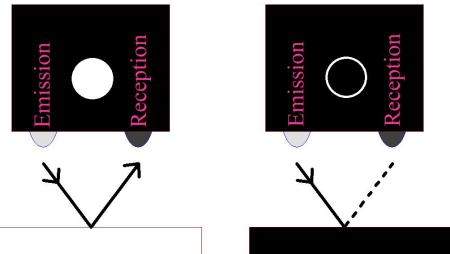

After uploading the code, put all three infrared sensors of mCar in the black area of the map, and the Micro:bit dot matrix will display "√"; if all three infrared sensors are placed in the white area of the map, the Micro:bit dot matrix will display "×";

Note

By clicking the "⊕" or "⊖" button, you can switch to an "if...", "if .. else if..." or "if ... else if ... else" statement:


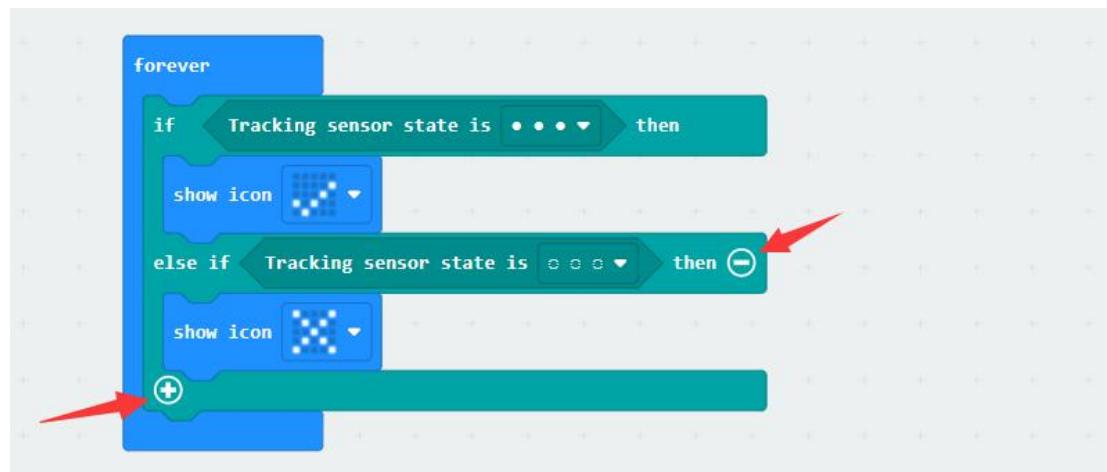


5.6 Ultrasonic Sensor

Goal

The ultrasonic module measures the distance to obstacles.

Things you need:

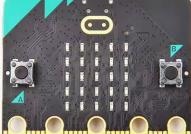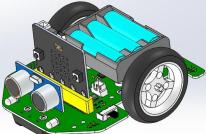
Computer	Micro:bit v2.x.x	Micro USB cable	mCar
			

Programming



- Set the battery type in the "on start" block.
- Read the distance measured by the ultrasonic module in the "forever" block and display it in the dot matrix.

Consequence

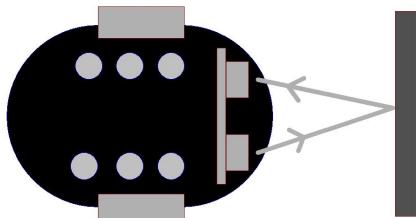



The dot matrix of Micro:bit displays the measured obstacle distance in centimeters.

5.7 Drive wheels

Goal

Learn how to drive the mCar's 2 motors

Things you need:

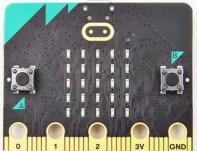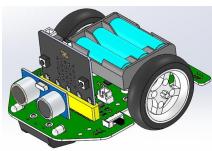Computer	Micro:bit v2.x.x	Micro USB cable	mCar
			

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.




- Set the battery type in the "on start" block.
- In the "forever" block, let the two motors rotate in opposite directions for one second and stop for one second.

Consequence

mCar rotates left and right on the spot.

6. Play with mCar

The sample codes for the project tutorials are all saved in the "Code -> Project tutorials" file:

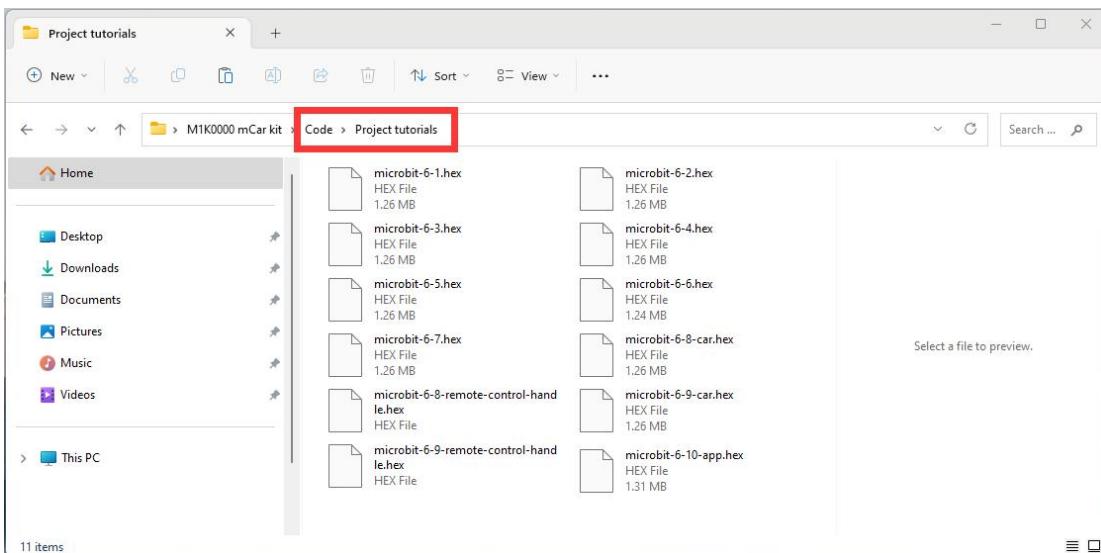

Reminder!!!

You don't need to add the ecar extension if you import and use the code we provided.
If you create a new project to generate code, you need to manually add the mCar extension, please refer to sections 3.1 and 4.1.

6.1 Evenly accelerate and go straight



Goal

If the motor speed of mCar is very fast, the front universal wheel will leave the ground at the moment of starting.

In this case, we let ecar accelerate evenly and complete a smooth start.


Things you need:

SIYEENOVE

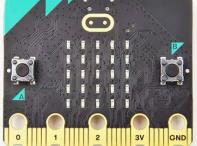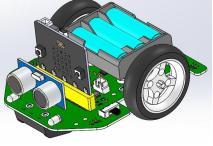Computer	Micro:bit v2.x.x	Micro USB cable	mCar
			

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

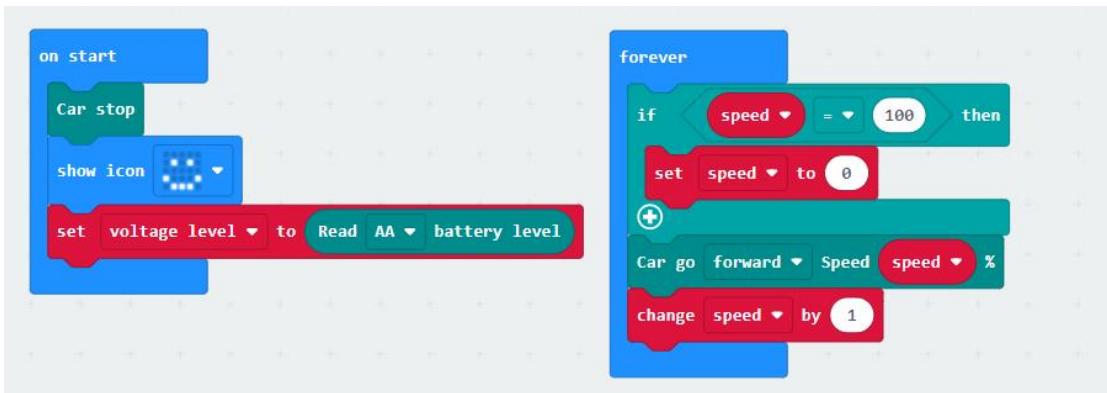

- In the "on start" block, stop the car, add a smiley face icon, and then set the battery type;
- Insert the car forward speed block in the "forever" block, set the speed value to speed, and then increase the speed by 1.
- And if the speed is equal to 100, the speed is already the maximum value, set the speed to 0, and start again.

Consequence

The car starts at a constant speed, stops at a certain speed and then starts again at a constant speed, so that the front wheels will not leave the ground due to excessive speed.

SIYEENOVE

Note

If the mCar cannot go straight, you can add a motor speed control statement in the "on start" block. The parameters of this statement will be permanently saved in the mCar.



6.2 Follow the black line

Goal

Let mCar run in circles along the black line.


Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Map

Programming


Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

SIYEENOVE

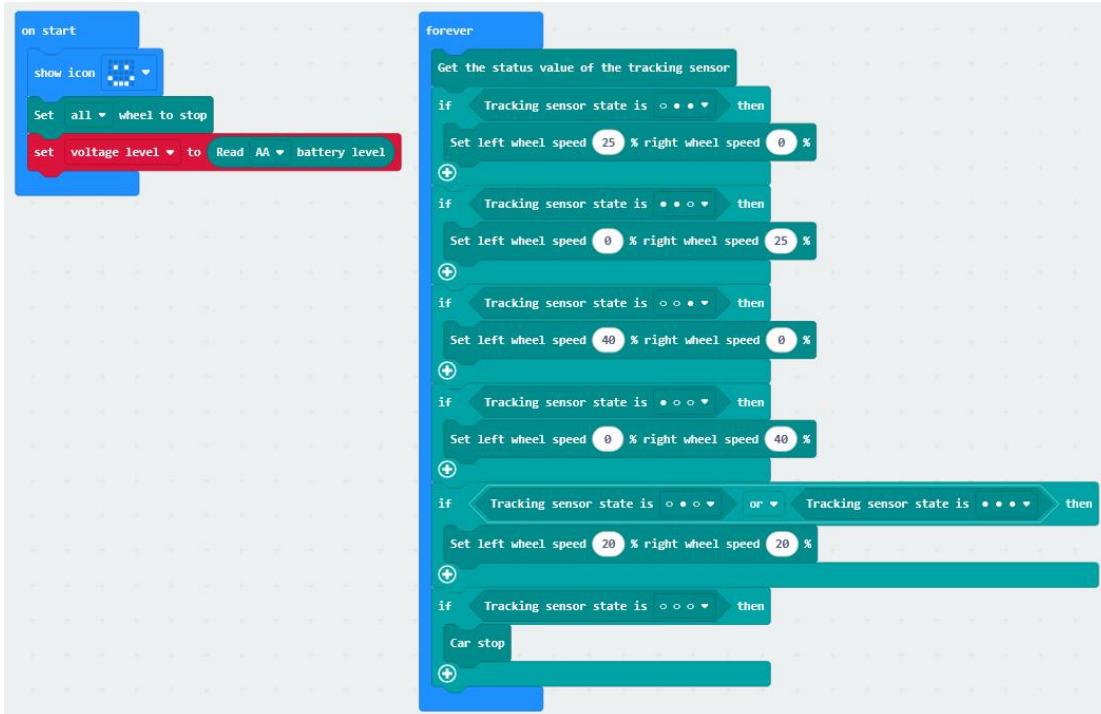

- Add a smiley face icon to the "on start" block, stop the wheels, and set the battery type.
- In the "forever" block, read the values of the three sensors first, then insert the "if (judgment)" block five times.
- First, determine whether the sensor status is O••, that is, the left sensor does not detect the black line, and the other two sensors detect the black line.
- Set the left wheel speed to 25 and the right wheel speed to 0, use the speed difference to make mcar turn right and then return to the black line.
- Then determine whether the sensor status is ••O , that is, the right sensor does not detect the black line, and the other two sensors detect the black line.
- Set the right wheel speed to 25 and the left wheel speed to 0, and use the speed difference to make mcar turn left and return to the black line
- First, determine whether the sensor status is •O•, that is, the right sensor detects the black line, and the other two sensors do not detect the black line.
- Set the left wheel speed to 40 and the right wheel speed to 0, and use the speed difference to make mcar turn right and return to the black line.
- Then determine if the sensor state is •O• , that is, the left sensor detects the black line, and the other two sensors do not detect the black line.
- Set the right wheel speed to 40 and the left wheel speed to 0, and use the speed difference to make mcar turn left and return to the black line.
- Then determine if the sensor is in O•O and ••• states, which proves that the car is on the black line, and mcar will go straight at a speed of 20.
- Then determine if the sensor is OOO , if it is, it proves that the car has moved away from the black line, and the car stops.

SIYEENOVE

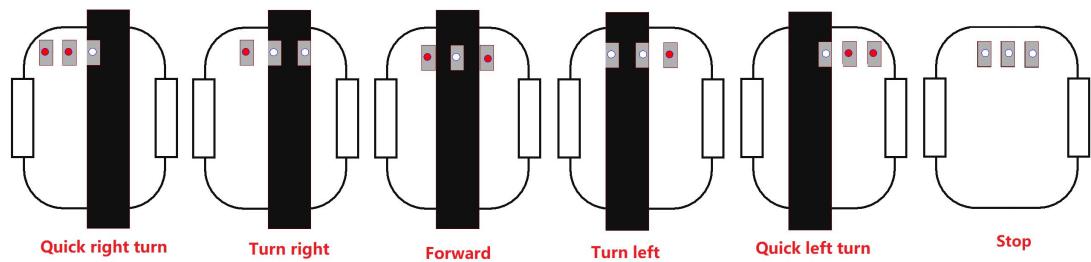


Indicates that no line is detected



Indicates that a black line is detected.

Consequence

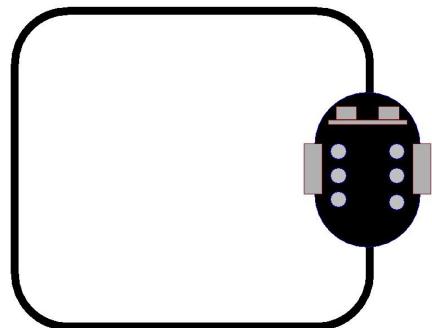

The mCar will move forward at a constant speed following the black line on the map.

6.3 Don't cross the black line

Goal


The mCar is restricted to the area within the black line.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Map


Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

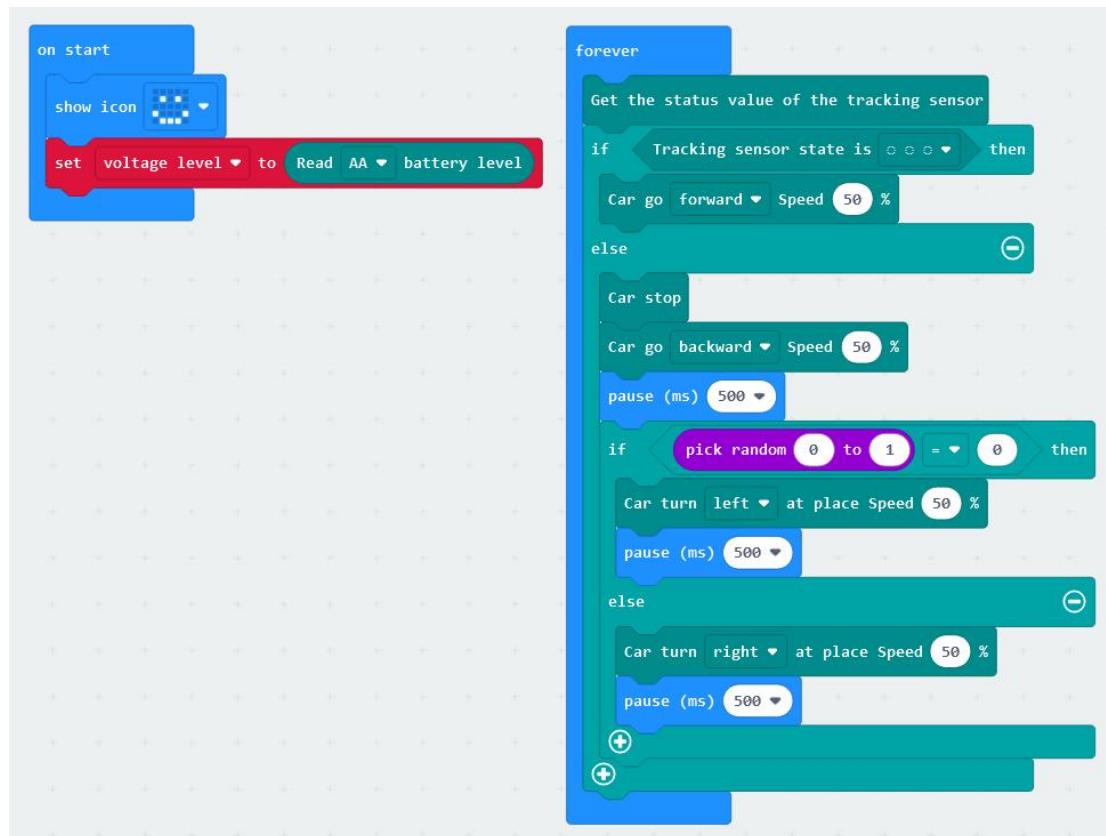

- Add a smiley face icon to the "on start" block and set the battery type.
- First read the values of the three sensors in the "forever" block, and then insert the "if (judgment)" block. If none of the three sensors detects a black line, the mcar moves forward at full speed. Otherwise, the mcar stops immediately, then reverses at a speed of 60, and then randomly turns left or right at a speed of 60.

Consequence

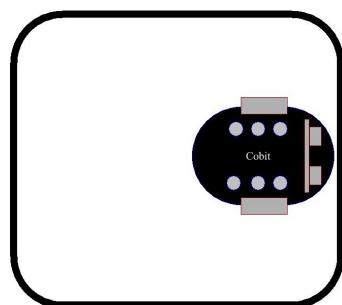



The mCar will always run within the black line and will not cross the black line.

6.4 Follow your hand at a fixed distance

Goal


Let mCar follow your hand at the same distance.

Things you need:

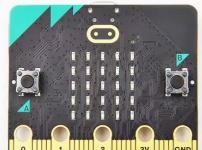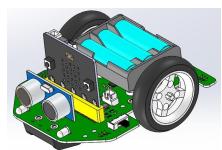Computer	Micro:bit v2.x.x	Micro USB cable	mCar
			


Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

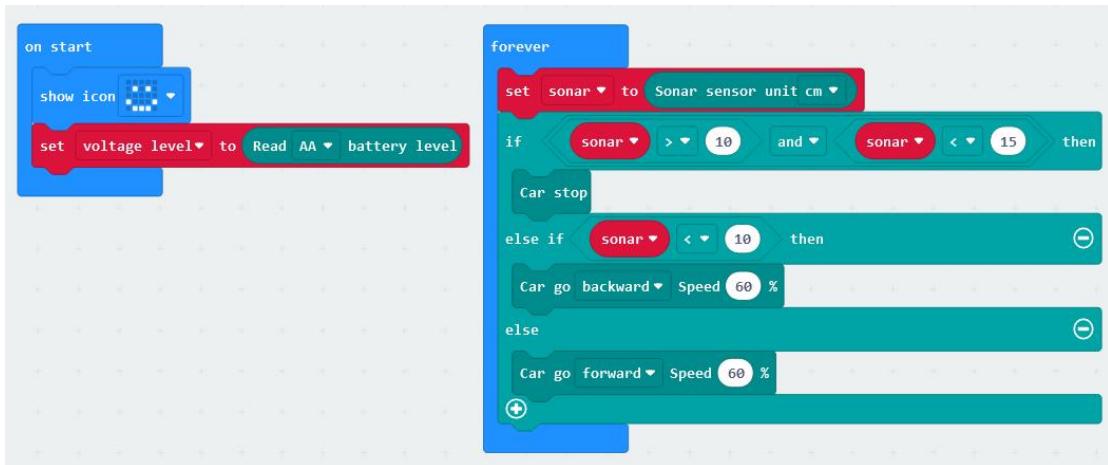

- Add a smiley face icon to the "on start" block and set the battery type.
- Set a sonar variable in the "forever" block to store the CM value returned by the ultrasonic module.
- When the ultrasonic module returns a value greater than 10 and less than 15, the car stops.
- When the return value of the ultrasonic module is less than 10, the robot is too close to the object and will move backwards.
- If neither, mcar is too far from your hand, move forward to catch up with your hand and maintain proper position.

Consequence

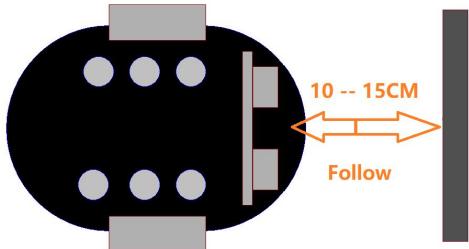

When the mcar is too far away from your hand, it will move forward. When it is too close, it will move backward. When the distance is right, it will stop.

Note

Q: When using mCar, if you find that the car is running normally, but cannot run after connecting the ultrasonic sensor.

A: Please check whether the ultrasonic sensor is plugged into the wrong interface. It should be plugged into the sonar interface instead of the I2C interface behind.

6.5 Obstacle Avoidance

Goal


Let mCar achieve autonomous driving and obstacle avoidance.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar


Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

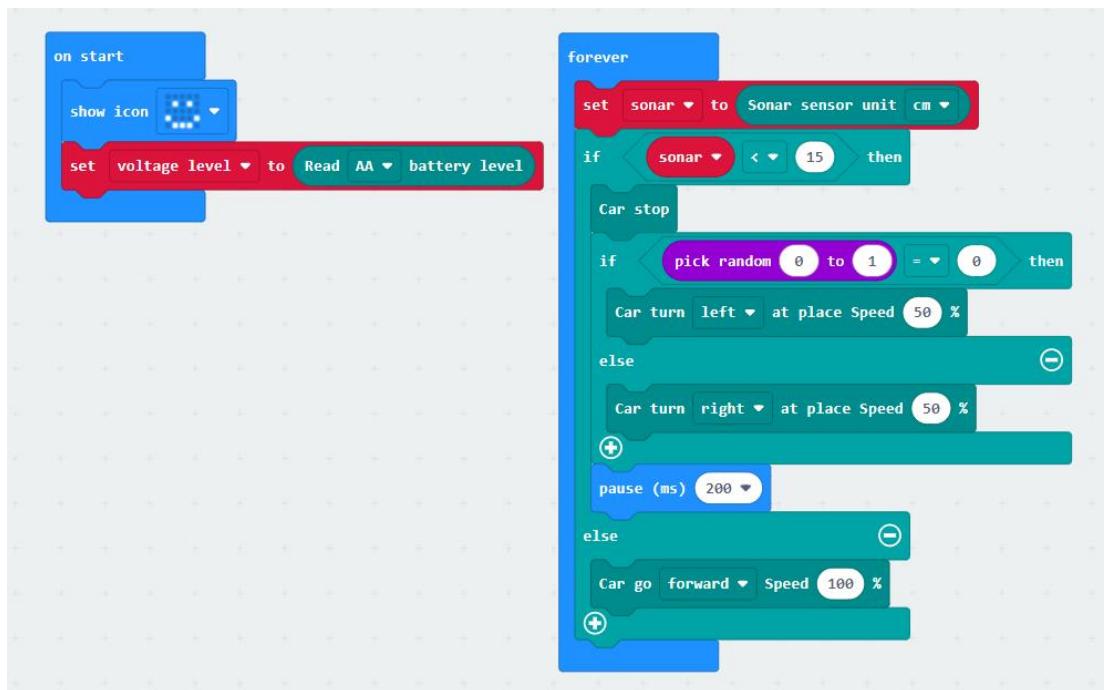

- Add a smiley face icon to the "on start" block and set the battery type.
- Set a sonar variable in the "forever" block to save the CM value returned by the ultrasonic module. When the return value of the ultrasonic module is less than 15, it proves that an obstacle has been detected 15CM ahead, and the car randomly turns left or right to avoid the obstacle.
- Else, mcar goes full speed ahead.

Consequence

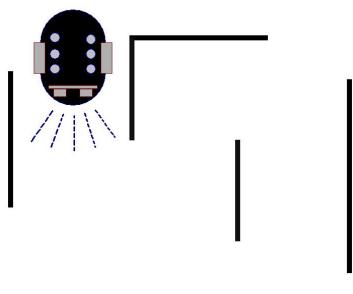

SIYEENOVE

After the code is uploaded, the mcar car moves forward at full speed. When it detects an obstacle within 15cm, it randomly rotates left or right by an angle and continues to move forward.

Note

Q: When using mCar, if you find that the car is running normally, but cannot run after connecting the ultrasonic sensor.



A: Please check whether the ultrasonic sensor is plugged into the wrong interface. It should be plugged into the sonar interface instead of the I2C interface behind.

6.6 Follow the Light

Goal


The dot matrix of the Micro:bit can sense the intensity of light. We use this function to allow mCar to automatically find light sources in a dark environment.

Things you need:

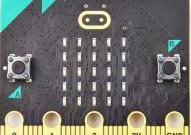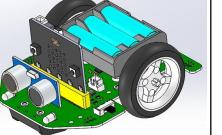Computer	Micro:bit v2.x.x	Micro USB cable	mCar	flashlight
				


Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

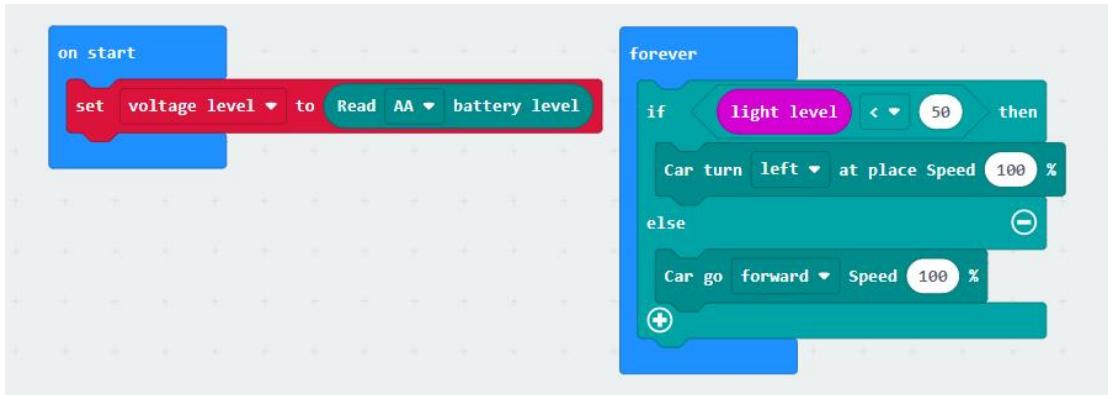

- Set the battery type in the "on start" block.
- In the "forever" block, determine the brightness level. When the brightness level is less than the set threshold, the car turns left at full speed. When the brightness level is greater than the set threshold, the car moves forward at full speed.

Consequence

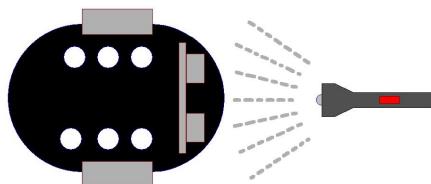

Shine a flashlight on the dot matrix of the Micro:bit. When the light level is detected to be less than 50, the car rotates in place. When the light level is detected to be greater than 50, the car moves forward at full speed.

Note

This may not work in brightly lit environments.

6.7 Infrared remote control

Goal


Use the infrared remote control to control the mCar.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Infrared remote control

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

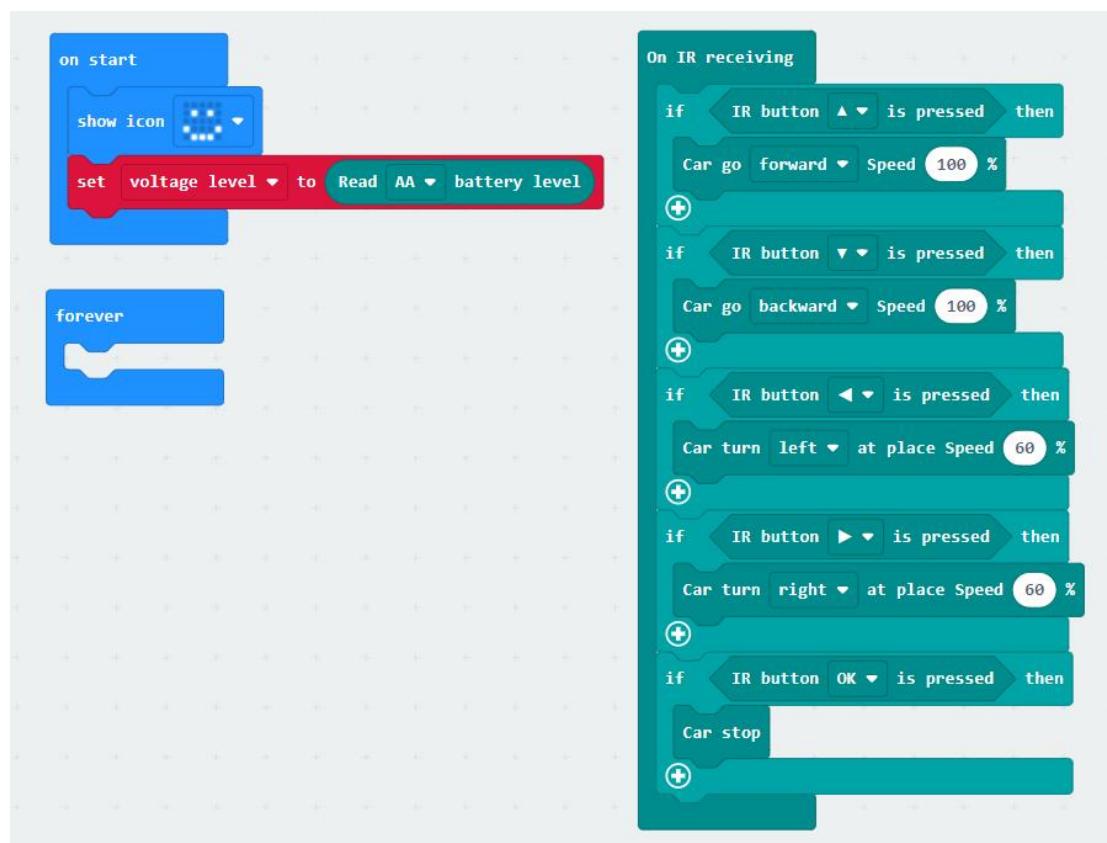

SIYEENOVE

- Add a smiley face icon to the "on start" block and set the battery type.
- When mcar receives an infrared signal, it determines which button is pressed; when the ▲ button on the infrared remote control is pressed, the car moves forward at full speed; when the ▼ button on the infrared remote control is pressed, the car reverses at full speed; when the ◀ button on the infrared remote control is pressed, the car turns left at full speed; when the ▶ button on the infrared remote control is pressed, the car turns right at full speed; when the OK button on the infrared remote control is pressed, the car stops immediately.

Consequence



Use the infrared remote control to control the mCar to move forward, backward, turn left, turn right, and stop.

6.8 Control mcar with another Micro:bit




Note: This is an optional project, the kit does not include any Micro:bit, if you have two Micro:bit, you can try it.

Goal

- ▶ Use another Micro:bit as a remote controller to wirelessly control mCar.
- ▶ Both Micro:bits need to upload programs.

SIYEENOVE


Things you need:

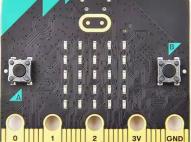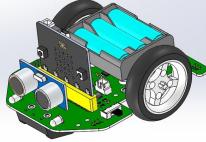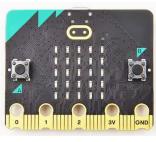Computer	Micro:bit v	Micro USB cable	mCar	Micro:bit v
				

Programming

-Upload code to the Microbit as a remote controller

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

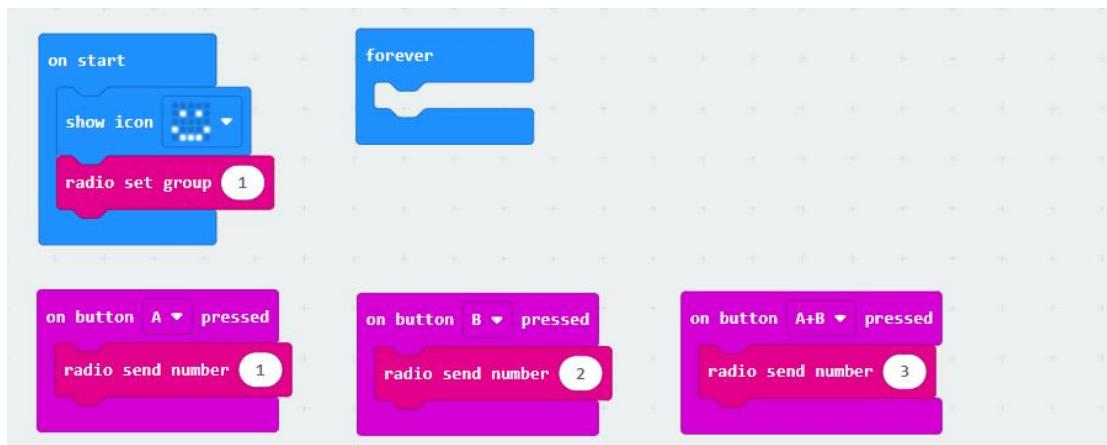


- Add a smiley face icon to the "on start" block and set the radio group to 1;
- When Microbit button A is pressed, the number 1 is wirelessly sent;
- When Microbit button B is pressed, the number 2 is wirelessly sent;
- When Microbit buttons A+B are pressed simultaneously, the number 3 is wirelessly sent;

SIYEENOVE

-Upload code to mcar's Microbit

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

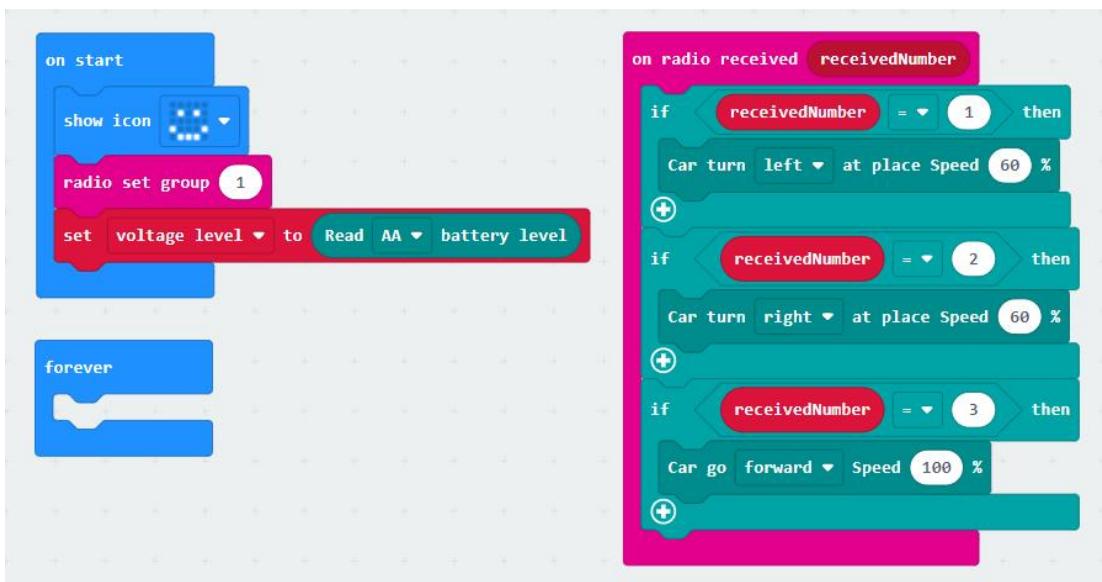

- Add a smiley face icon to the "on start" block, set the radio group to 1, and set the battery type. ;
- Insert the display icon block into the "on start" block and set the radio group to 1. Make sure it is set to the same group as the remote control, otherwise they will not match.
- Then insert three judgment statements in the "radio received" block to determine whether the radio reception value is 1, 2 or 3 respectively;
- When the number received by the radio is 1, mcar turns left;
- When the number received by the radio is 2, mcar turns right;
- When the number received by the radio is 3, mcar goes straight.

Consequence

- ▶ Press the A+B buttons on the remote control Micro:bit, and the car will go straight.
- ▶ Press the A button on the remote control Micro:bit, and the car will turn left.
- ▶ Press the B button on the remote control Micro:bit, and the car will turn right.



6.9 Accelerometer wireless control

Note: This is an optional project, the kit does not include any Micro:bit, if you have two Micro:bit, you can try it.

Goal

- ▶ Use the accelerometer of another Micro:bit to wirelessly control mCar, which can control the 360-degree direction and speed of the car.
- ▶ Both Micro:bits need to upload programs.


Things you need:

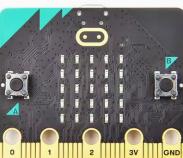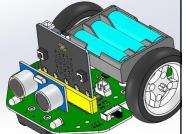Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Another Micro:bit v2.x.x
				

Programming

-Upload code to the Microbit as a remote controller

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

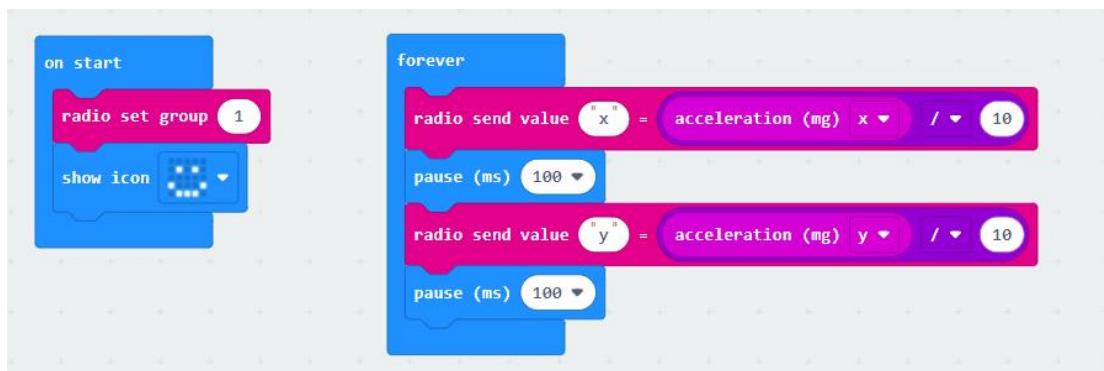

- Set the radio group to 1 in the "on start" block;
- In the "forever" block, the value of radio send value x is the x-axis acceleration


SIYEENOVE

value divided by 10.

- In the "forever" block, the value of radio send value y is the y-axis acceleration value divided by 10.
- Because the acceleration value range is -1024~0~1024, after dividing by 10 it can be approximated as -100~0~100.

-Upload code to mcar's Microbit

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

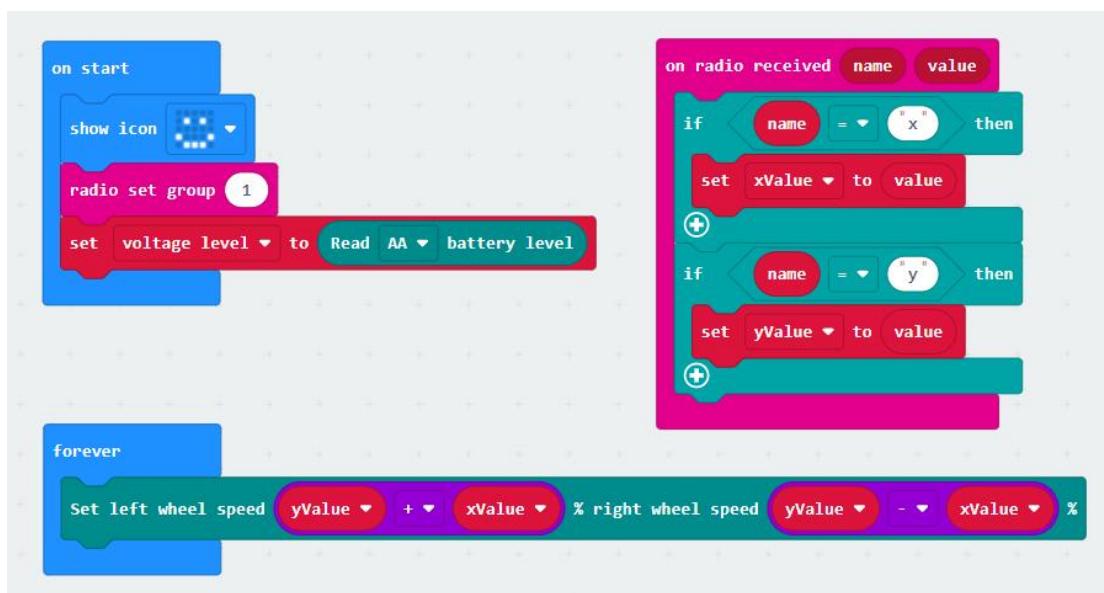

- Add a smiley face to the "on start" block; set the radio group to 1. Make sure it is the same group as the remote control, otherwise they will not match; then set the battery type.
- Then insert two judgment statements in the "radio received" block to judge whether the radio received value name is x or y;
- When the name value received by the radio is x, it is the accelerometer X-axis data, and the value is saved to the xValue variable;
- When the name value received by the radio is y, it is the accelerometer Y-axis data, and the value is saved to the yValue variable;
- In the "forever" building block, set the left wheel speed to $yValue + xValue$ and

SIYEENOVE

the right wheel speed to $yValue-xValue$.

Consequence



- ▶ Tilt the micro:bit on the control end in different directions to control the mCar to move in different directions.
- ▶ Use the tilt angle of the micro:bit on the control end to control the speed of the mCar.

6.10 Bluetooth APP control

Goal

- ▶ Use Bluetooth APP of Android phone to control mCar.
- ▶ Add Bluetooth extension

Things you need:

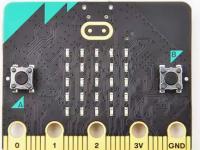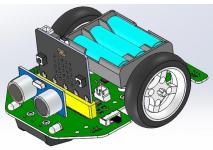Computer	Micro:bit v2.x.x	Micro USB cable	mCar	Android phone
				

Add Bluetooth expansion in Makecode

Search and add the Bluetooth extension:

The top part of the image shows the Makecode workspace. A red box highlights the gear icon in the top right corner of the interface. Another red box highlights the 'Extensions' option in the dropdown menu that appears when the gear icon is clicked.


The bottom part of the image shows the 'Extensions' search results page. A red box highlights the search bar at the top, which contains the text 'bluetooth'. Another red box highlights the first search result, 'bluetooth', which is a package for 'Bluetooth services'. This result has a blue icon featuring a white Bluetooth symbol and a small device icon.

Extension radio is incompatible with bluetooth, Remove radio and add bluetooth.



A confirmation dialog box is displayed in the center of the screen. The title of the dialog is 'Some extensions will be removed'. The message inside states: 'Extension radio is incompatible with bluetooth. Remove radio and add bluetooth?'. At the bottom of the dialog, there is a red button with the text 'Remove extension(s) and add bluetooth' and a checkmark icon. To the right of this button are two other buttons: 'Cancel' and 'x'.

SIYEENOVE

After successfully adding the Bluetooth extension, it will appear in the toolbox list.

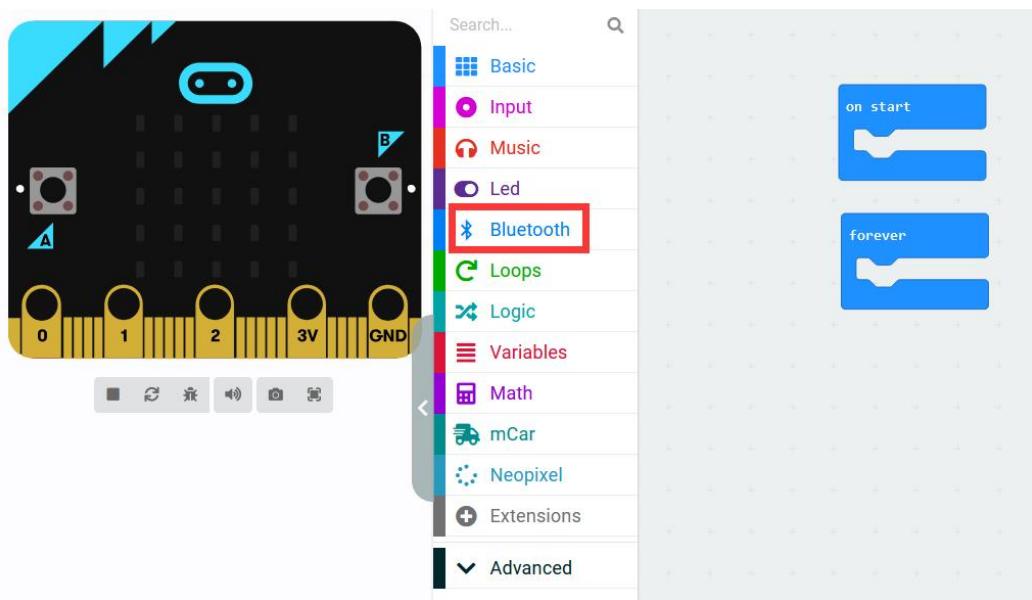


Set the micro:bit Bluetooth to a password-free connection:

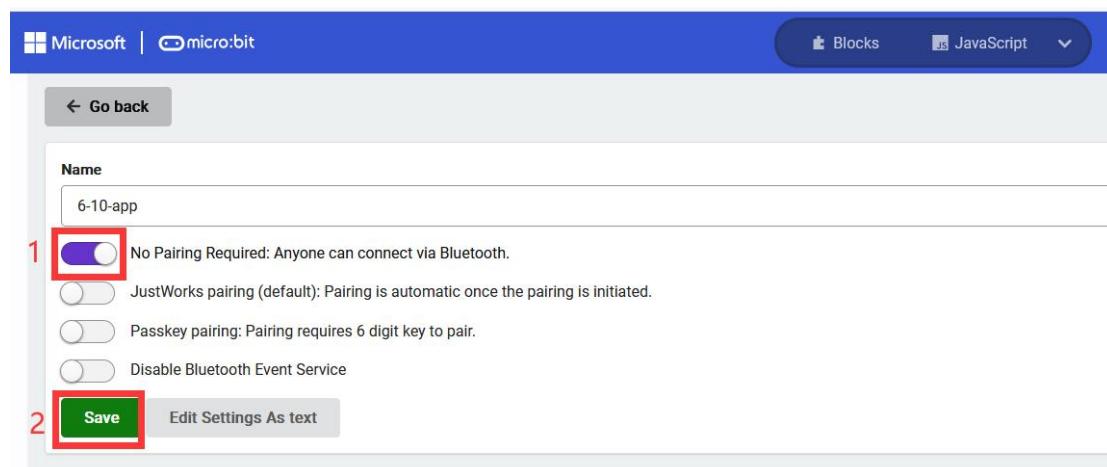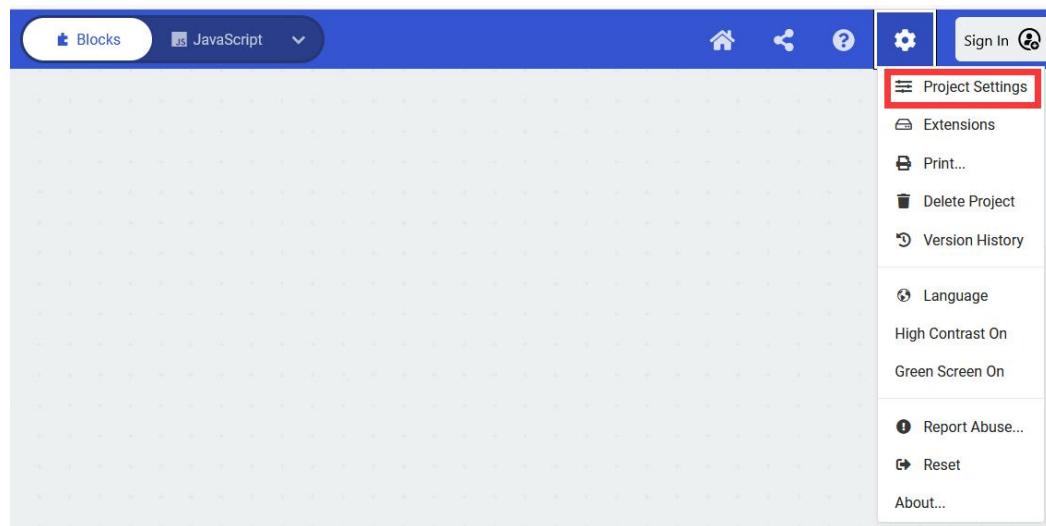

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

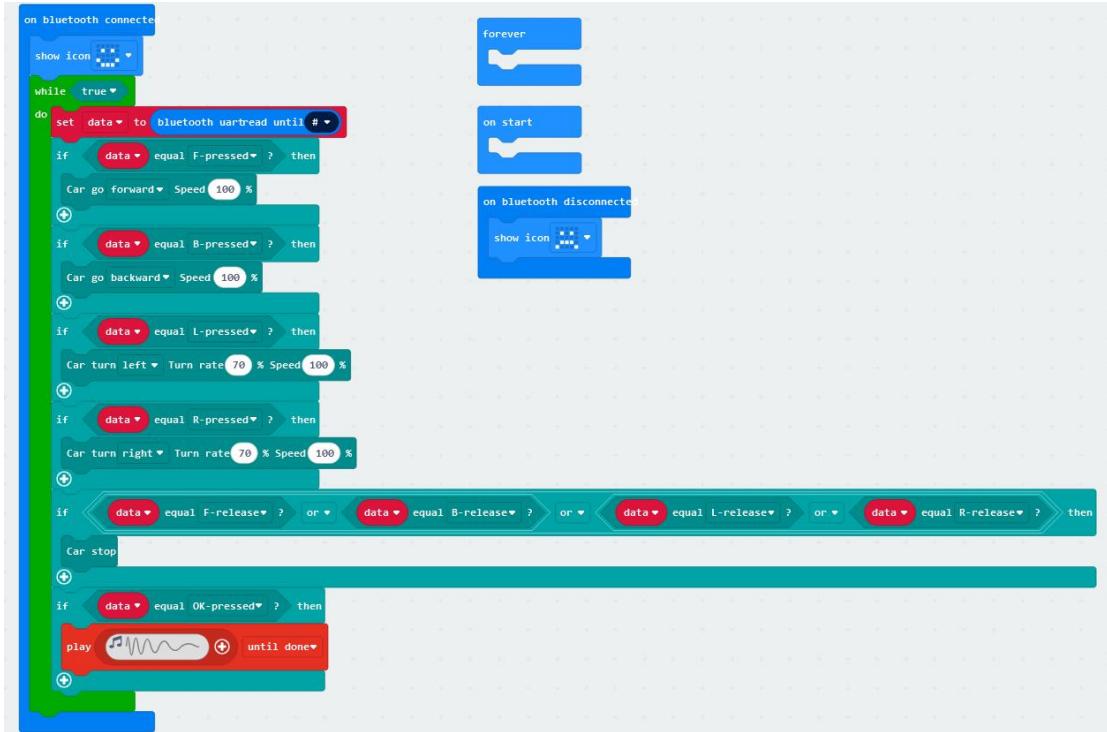


- When successfully connected to the Bluetooth of Micro:bit, the 5*5 dot matrix displays a smiley face.
- Then enter an infinite loop.
- In the dotted loop, read the data received by the Micro:bit Bluetooth.
- If the "F" key value of the APP is received, the car moves forward.
- If the "B" key value of the APP is received, the car moves backward.
- If the "L" key value of the APP is received, the car turns left.
- If the "R" key value of the APP is received, the car turns right.
- When the pressed button is released, the car stops.
- If the "OK" key value of the APP is received, the buzzer sounds.
- When the Bluetooth of Micro:bit is disconnected, the 5*5 dot matrix displays a sad face.

SIYEENOVE

Install SIYEENOVE APP

mCar Bluetooth APP is only available for **Android devices**.

-It is stored in the "**Android APK**" folder. You can copy or send "SIYEENOVE.apk" to your phone, and then click it to install it.

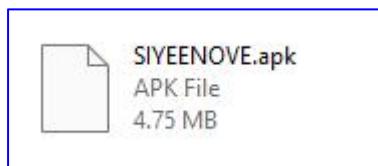

-Or use your phone's scanner to scan the QR code to download and install it.


<http://siyeeenove.com/app>



[Android App APK Download](#)

SIYEENOVE

If a warning appears during the installation process, please ignore it and click to install! We guarantee that the APP is safe and virus-free.

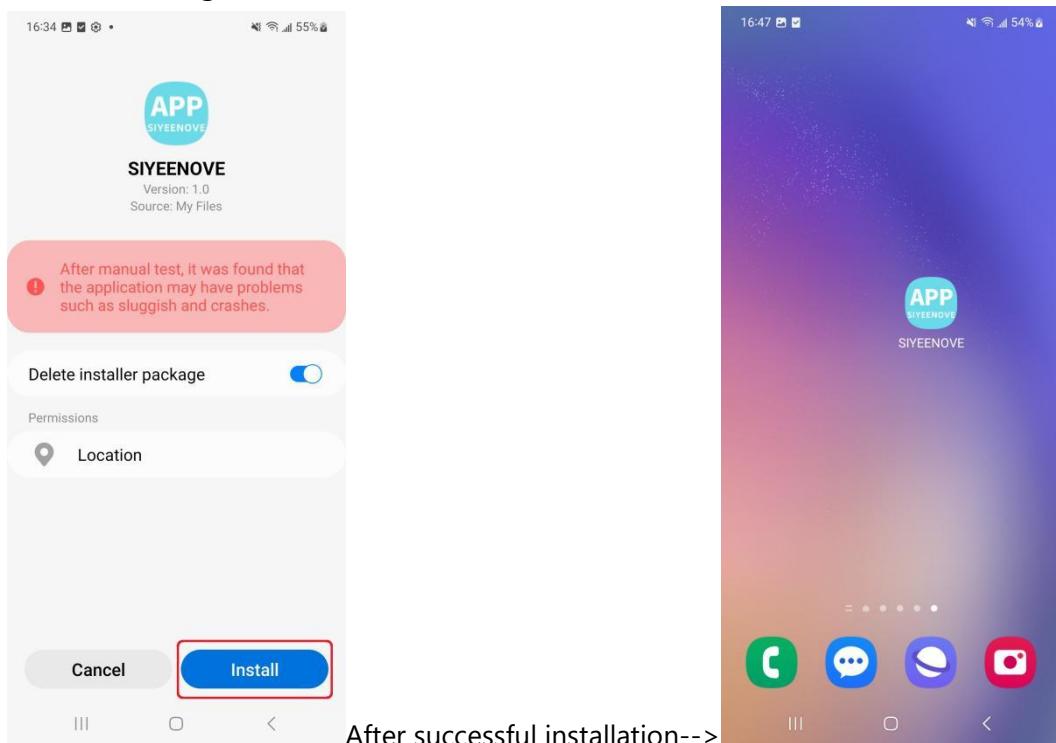

Enable the APP permissions and Bluetooth function


SIYEENOVE APP uses mobile phone Bluetooth to communicate with mCar, you need to grant **Bluetooth, location and nearby device**(Some Android phones don't have nearby device option) permission to APP.

The method of enabling APP permissions may be different for each mobile phone. Let's take the Redmi phone as an example.


1.Click on your phone's **settings**

SIYEENOVE

2. Turn on the Bluetooth function

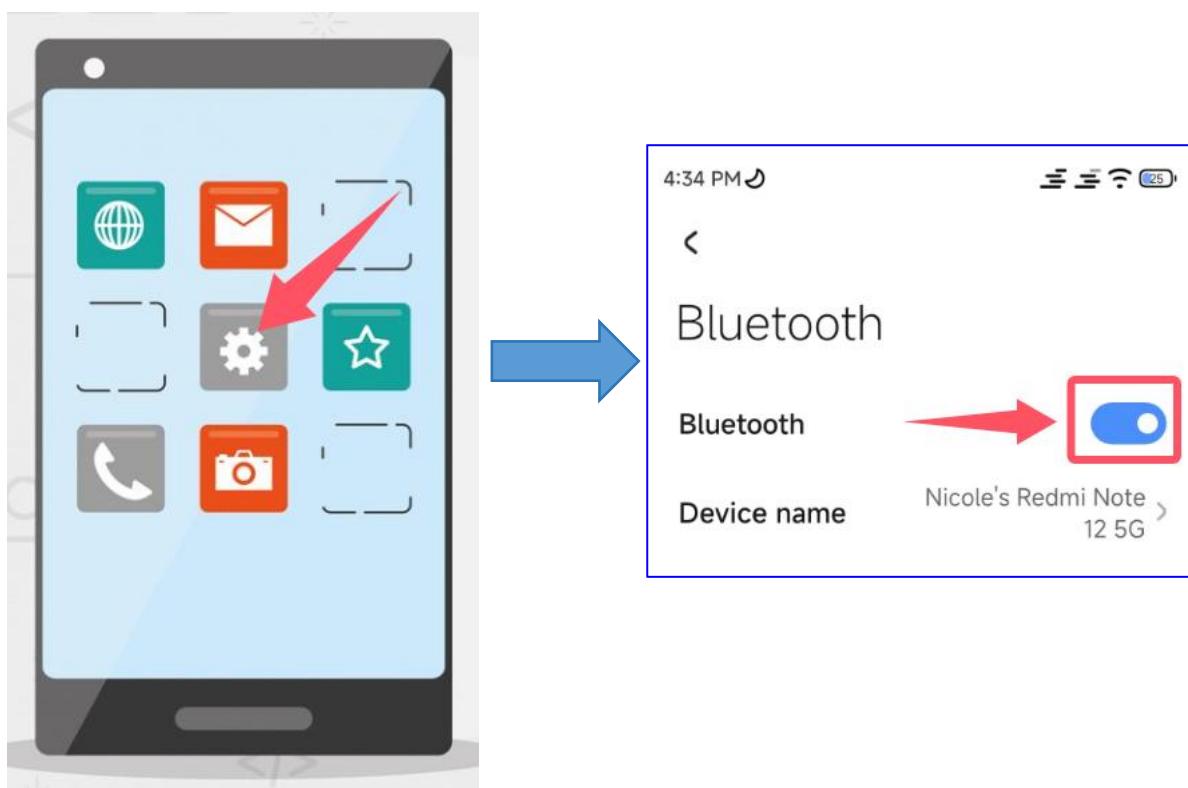


3. Pull down the settings page and click **Apps>Manage apps**

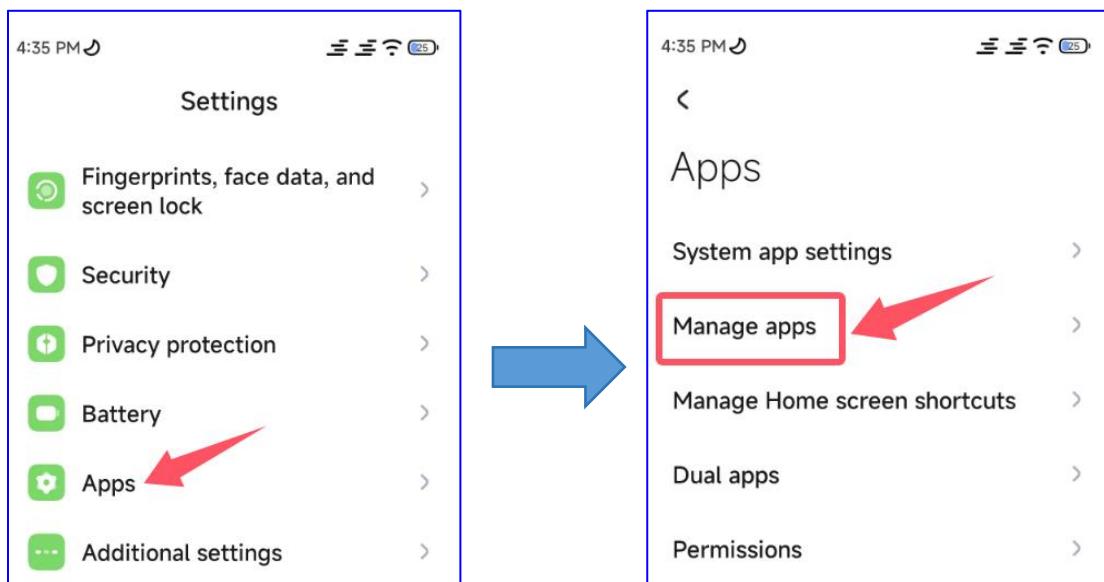

SIYEENOVE

4. Select **SIYEENOVE APP** and click **Permissions**




5. Enable the **location and nearby devices**

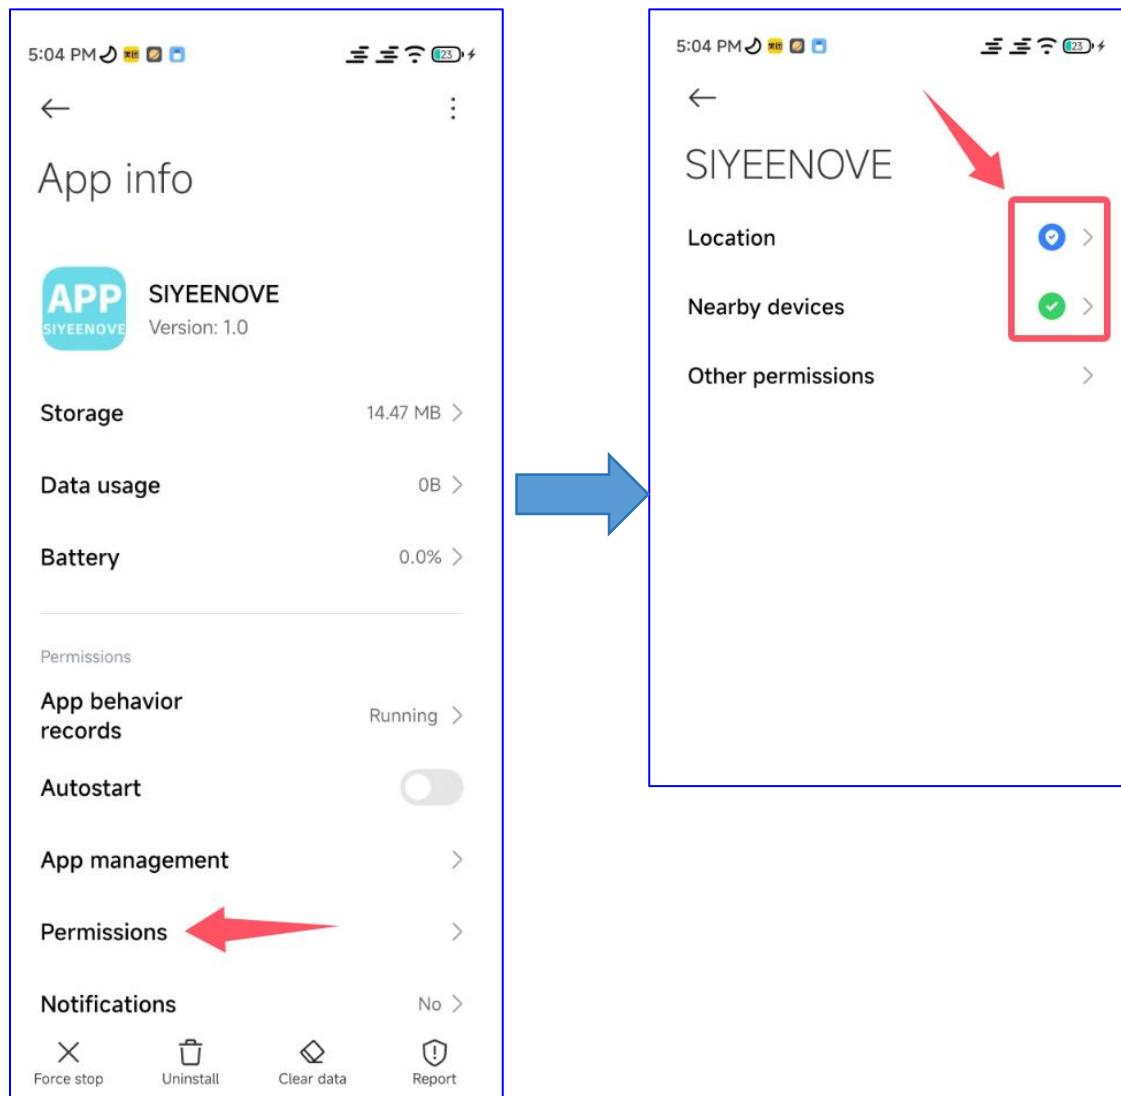

When SIYEENOVE APP is enabled, if the permissions mentioned above are not enabled, the APP will pop up a window to prompt you to enable them. Please


SIYEENOVE

agree to enable them, otherwise you will not be able to use the APP.

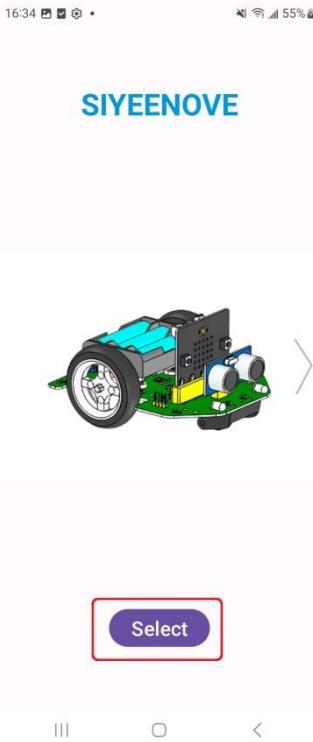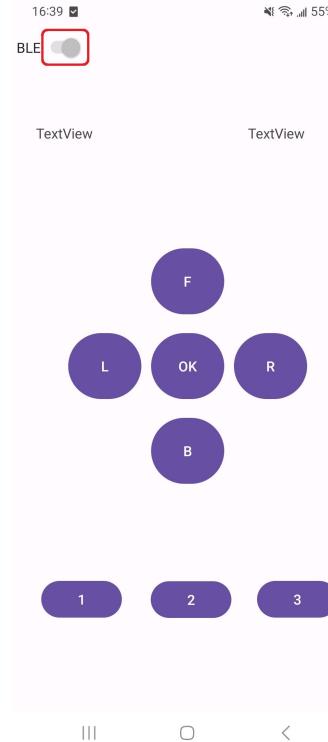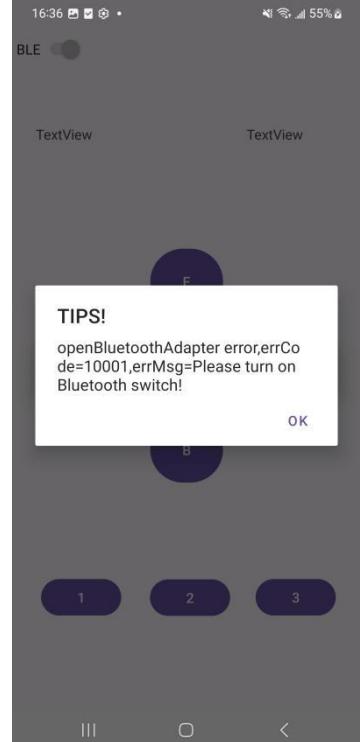Open the app and click Select mcar	Click the BLE button to start Bluetooth search	If the Bluetooth on your phone is not turned on, a warning pop-up window will pop up. Click " OK " and turn on Bluetooth.
		


Tips!

After turning on Bluetooth, location and nearby device, please restart the
Bluetooth search of the APP.

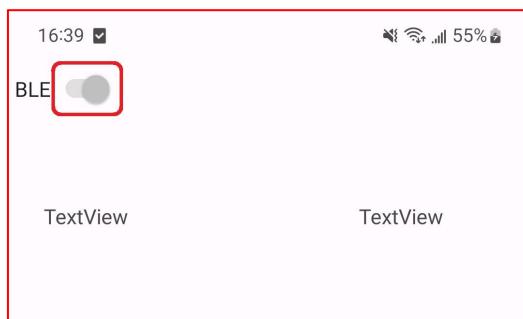

Connect Micro:bit Bluetooth

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. Then we can use the app to search for the Microbit Bluetooth and connect it:

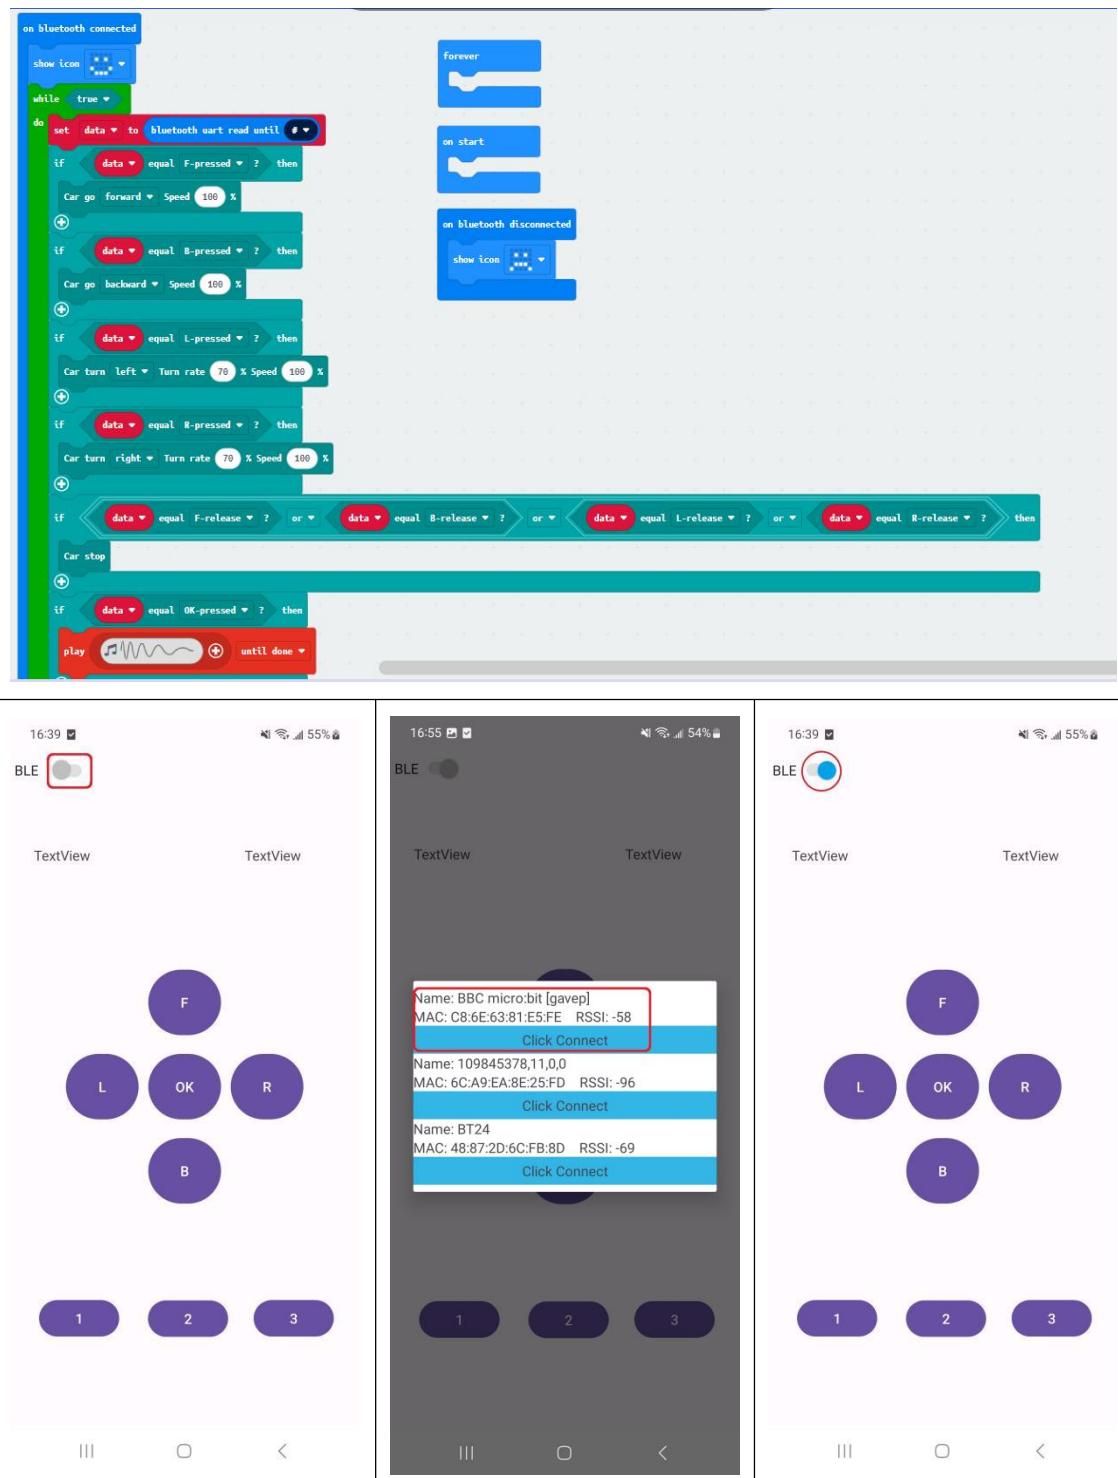

1. Click the BLE button in the upper left corner of the APP to start the

SIYEENOVE

Bluetooth device search.

2. If the phone's Bluetooth switch and related permissions are not turned on, a pop-up window will remind you to turn them on.
3. The APP will pop up a window listing the device name, MAC address and RSSI (signal strength).
4. Select the Bluetooth device you want to connect to. Here we click "BBC micro:bit [gavap]" to connect to microbit.
5. If the Bluetooth device is successfully connected, the BLE button will turn blue, otherwise an error message will be displayed.
6. If the connection fails, you can turn off the BLE button of the APP and then turn it on again.


Consequence

After the APP and micro:bit Bluetooth are successfully connected, you can use the App to control the mcar, below are the instructions corresponding to the app buttons

Button	F	B	L	R	OK
Function	Press>forward Release>stop	Press>backward Release>stop	Press>turn left Release>stop	Press>turn right Release>stop	Press>buzzer sounds Release>stop

7. mCar Extended Tutorial

The sample codes for the extended tutorials are all saved in the "Code -> Extended tutorials" file:

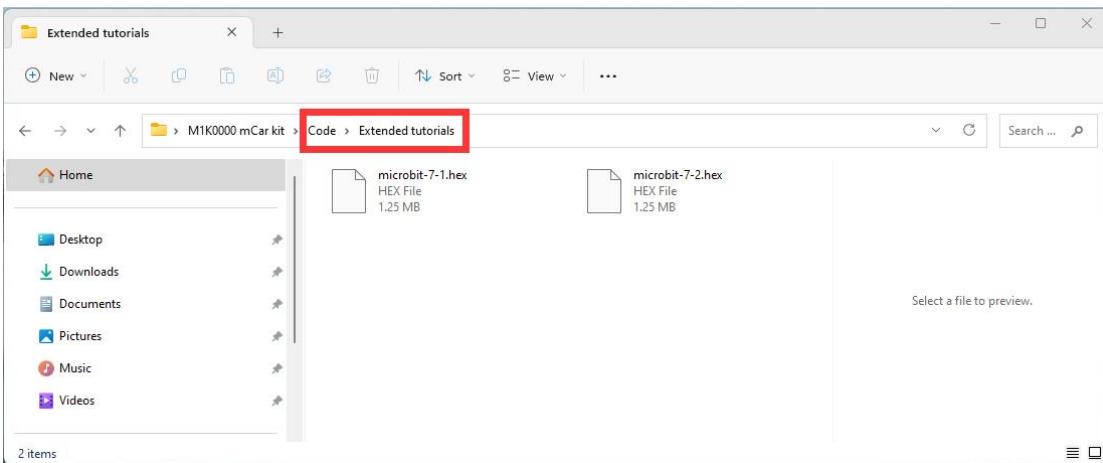

Reminder!!!

You don't need to add the ecar extension if you import and use the code we provided.
If you create a new project to generate code, you need to manually add the mCar extension, please refer to sections 3.1 and 4.1.

We only provide project examples. The Lego accessories used in the following tutorials are not included in the kit. If you want to do this project, you need to purchase it

7.1 Drive a 270 degree servo

Goal

Learn how to drive a 270-degree Lego servo, and get some inspiration for expanding the capabilities of your mcar.

Things you need:

Computer	Micro:bit v2.x.x	Micro USB cable	mCar	270 Lego servo
----------	----------------------------------	-----------------	------	----------------

SIYEENOYE



Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.



Consequence



The 270 degree Lego servo shaft rotates cyclically between 0 and 270 degrees.

7.2 Drive a 360 degree servo

Goal


Let the 360-degree Lego servo rotate evenly and rapidly in the positive direction.

Things you need:

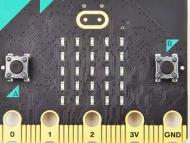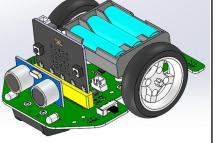Computer	Micro:bit v2.x.x	Micro USB cable	mCar	360 Lego servo
				

Programming

Directly import the hex file code we provided into the Makecode editor and download it to Micro:bit. If drag to build a new code, remember to add the mcar extension.

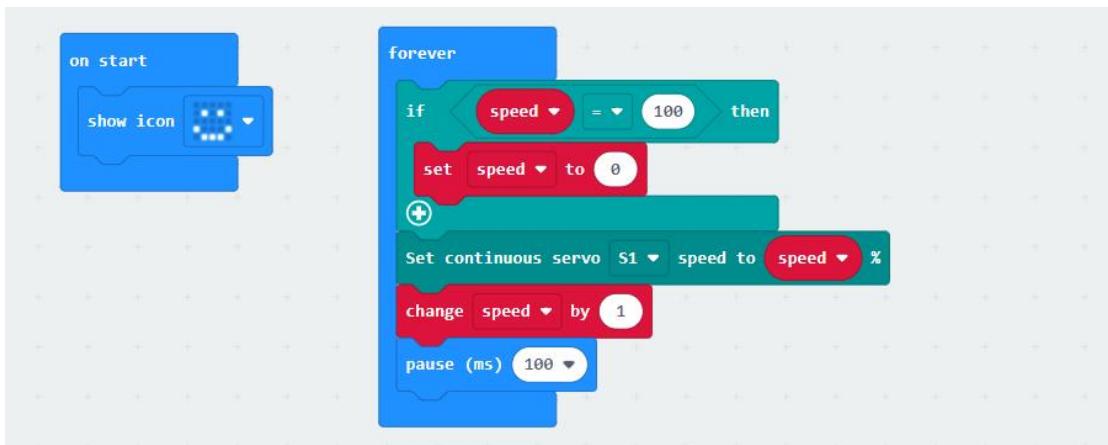

Consequence

The 360-degree Lego servo rotate evenly and rapidly in the positive direction..

Questions to think about

How to drive 90-degree and 180-degree servos?

How to use Lego block to expand the functions and appearance of mcar?

8. QA

8.1 Unable to upload code to Micro:bit

- 👉 Do you use a USB cable with data communication function?
- 👉 Does the USB cable connect well?

8.2 The Micro:bit disk name is not displayed correctly

- 👉 If the disk name is displayed as: MAINTENANCE (Normal is MICROBIT), it means that it has entered the firmware update mode. If you press and hold the micro:bit reset button and then power on the micro:bit, the micro:bit will enter the firmware update mode. At this time, we can update the firmware and the Microbit disk name will return to normal. You can refer to the following link:

<https://microbit.org/get-started/user-guide/firmware/>

8.3 After uploading a new code, the motor still rotates

- 👉 This is because the car stop block is not called again:



8.4 Other issues

- 👉 Please check if the assembly steps are correct?
- 👉 Please check if the battery power is sufficient?
- 👉 Please check if the battery model used is correct?

9.Contact us

If you encounter technical problems or want to share your ideas and opinions with us, please contact us at any time.

 siyeenove@outlook.com

 <http://siyeenove.com>