

Preface

About SunFounder

SunFounder is a company focused on STEAM education with products like open source robots, development boards, STEAM kit, modules, tools and other smart devices distributed globally. In SunFounder, we strive to help elementary and middle school students as well as hobbyists, through STEAM education, strengthen their hands-on practices and problem-solving abilities. In this way, we hope to disseminate knowledge and provide skill training in a full-of-joy way, thus fostering your interest in programming and making, and exposing you to a fascinating world of science and engineering. To embrace the future of artificial intelligence, it is urgent and meaningful to learn abundant STEAM knowledge.

Visit www.sunfounder.com for more!

About This Kit

The Rollarm Kit for Arduino is designed for mass hobbyists to learn robot arm control. With the open source MCU Arduino UNO and a servo expansion board, the robot arm is easy to use and full of fun. You can control its four axes by the 4 potentiometers on the handle, as well as make them move on your computer. In addition, it can memorize the movements it's made and repeat again and again, making it a great tool for repeated tasks.

In this book, you can learn the basics of how a mechanical arm works and how to make one piece by piece. For more information, please go to our website www.sunfounder.com and find the tutorial under [LEARN](#) -> [Get tutorials](#). Also video tutorials about the assembly and playing are provided under [VIDEO](#) -> Robot Kit -> DIY Control Robot Arm Kit for Arduino-Rollarm.

Free Support



If you have any **TECHNICAL question**, add a topic under [FORUM](#) section on our website and we'll reply as soon as possible.



For **NON-TECH questions** like order and shipment issues, please [send an email to service@sunfounder.com](#). You're also welcomed to share your projects on [FORUM](#).

Contents


1. Introduction.....	1
1.1 Overview.....	1
2. Components List.....	2
2.1 Acrylic Plates.....	2
2.2 Connecting Components.....	3
2.3 Electronic Components.....	5
2.4 Tools.....	7
2.5 Self-Provided Components.....	7
3. How to Control.....	8
4. Getting Started with Software.....	9
4.1 Resources Download.....	9
4.2 Arduino.....	9
5. Assembly.....	15
5.1 Base Bottom Plate + Riband.....	15
5.2 Base Bottom Plate + Battery Holder.....	15
5.3 Base Bottom Plate + Circuit Board.....	16
5.4 Base Bottom Plate + Base Fixing Plate.....	17
5.5 Base Upper Plate + Servo 1.....	17
5.6 Base Fixing Plate + Base Upper Plate.....	18
5.7 Adjust The Servo 1.....	19
5.8 Joint 1-Connecting Plate + Servo Rocker Arm.....	21
5.9 Right Joint Plate 1.....	22
5.10 Joint 1 Connecting Plate.....	23
5.11 Base + Joint 1 Connecting Plate.....	23
5.12 Joint 2 + Right Joint Plate 2.....	24
5.13 Adjust The Servo 2 and The Servo 3.....	26
5.14 Joint 1 Connecting Plate + Joint 2 Connecting Plate.....	27
5.15 Joint 1 Connecting Plate.....	28
5.16 Gripper Fixing Plate.....	29
5.17 Adjust The Servo 4.....	30
5.18 Gripper Driving Plate + Gripper Driven Plate.....	30
5.19 Grippers + Gripper Fixing Plate.....	32
5.20 Right Joint Plate 3.....	33
5.21 Gripper Fixing Plate + Right Joint Plate 3.....	34
5.22 Joint 2 Connecting Plate + Joint 3 Connecting Plate.....	34
5.23 Left Joint Plate 3.....	35
5.24 Handle.....	36
5.25 Wiring.....	38
6. Control the Rollarm.....	39
6.1 Manual Control.....	39
6.2 Automatic Control.....	40
6.3 Code Explanation.....	41
6.4 PC Control (by Labview).....	44

1. Introduction

1.1 Overview


The Rollarm Kit is an interesting and useful learning tool for Arduino and robot hobbyists. With the acrylic design and code based on Arduino, it enables users to learn programming from easy to difficult, control the mechanical arm freely and perform various fun operations!

This fun mechanical arm consists of 4 axes, each controlled by a servo. Powered by two 18650 batteries, the control systems is composed of UNO board, servo extension board, and remote control board. The kit includes all necessary components like acrylic plates, circuit boards, and connector parts. For your better learning, installation and debugging video tutorials are provided on our website. Also you can download the user manual which elaborates on the installation procedures and program explanation. With these resources, you can quickly and effortlessly make creative projects with the Rollarm. Now let's go to get the fun!

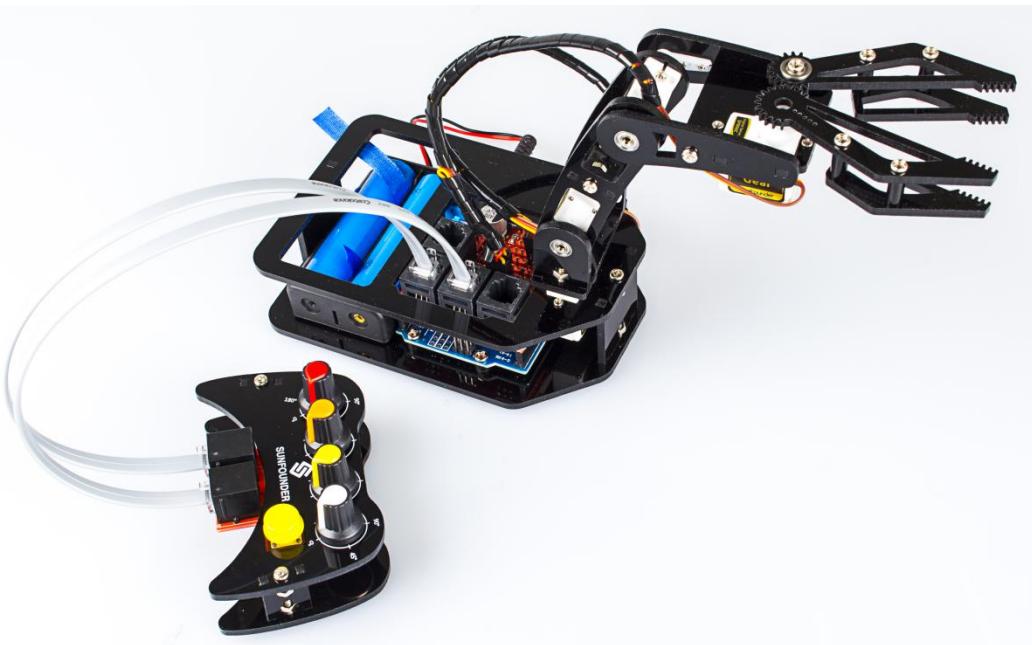


2. Components List


2.1 Acrylic Plates

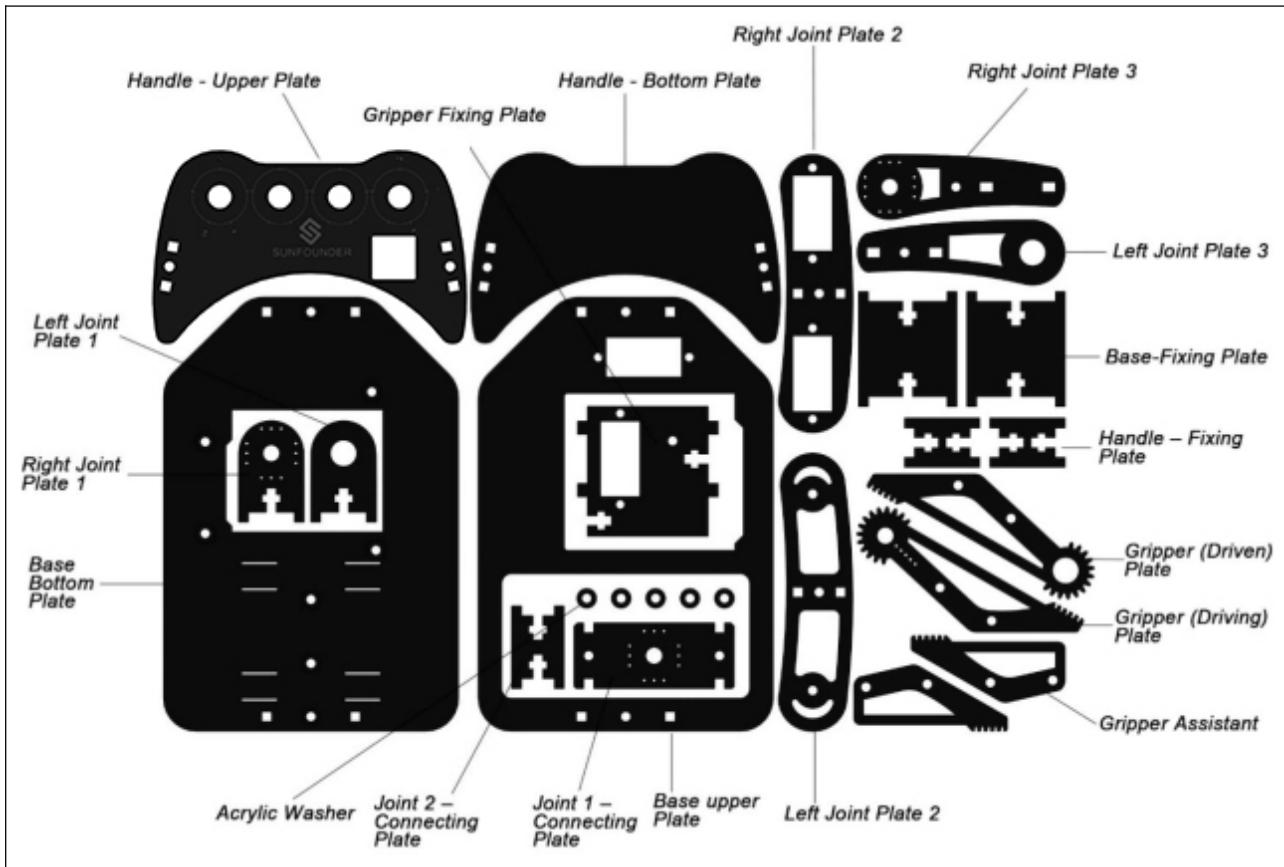

Prior to assembling the Rollarm, you need to remove the residues in the holes of the plates and the stickers on the plates. Here we take the Joint 1 fixing plate for example.

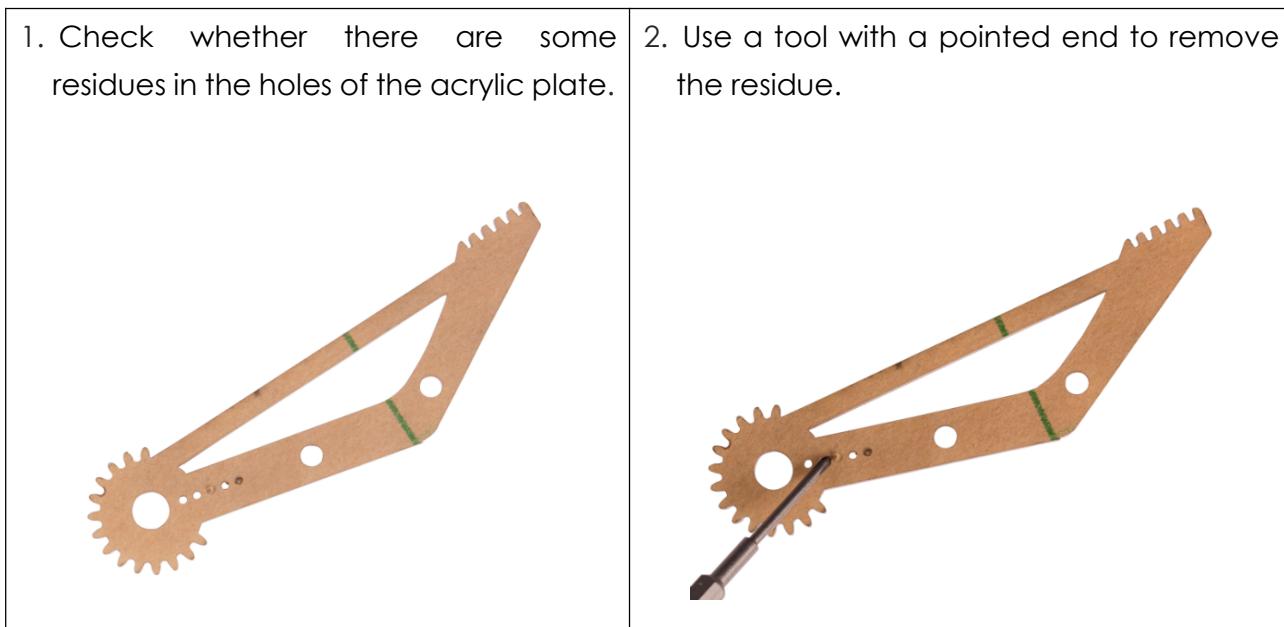

3. Make sure that all the residues are cleared.


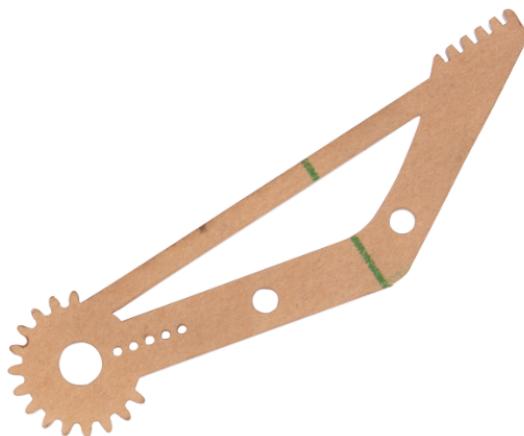


4. Use the pointed tool to scratch off the sticker on the plate.






2.2 Connecting Components


Name	Component	Qty.
M1.2*4 Self-tapping Screw	A self-tapping screw with a Phillips head and a slightly countersunk top.	16
M2*8 Screw	A standard metal screw with a Phillips head.	10
M2 Nut	A hexagonal nut.	10
M3*8 Flat-Head Screw	A flat-head screw with a Phillips head.	4
M3*8 Screw	A standard metal screw with a Phillips head.	12

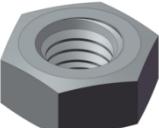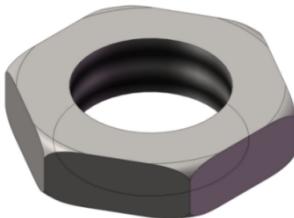M3*10 Screw		20
M3 Nut		22
M7 Thin Nut		5
3*10*1 Washer		2
M3*10 Aluminum Tube		7
M3*6 Corn Rivet		3
Φ 3* Φ 8*4 Band Edge Bearing		3

2.3 Electronic Components

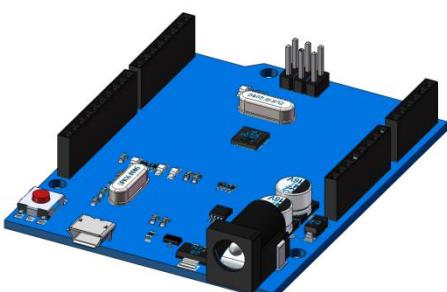Name	Component	Qty.
SunFounder Servo	 A white servo motor with a black plastic gear assembly attached. A multi-colored ribbon cable is connected to the servo's terminal block.	4
Potentiometer Button	 Four physical potentiometer buttons of different colors: red, brown, yellow, and black. Each button has a small circular base and a matching colored top cap.	4
Button	 A single yellow push-button component with a flat, circular top and a central contact point.	1
18650*2 Battery Holder	 A black rectangular battery holder designed for two 18650 batteries. It features two terminals for connecting the batteries in series and a red power lead extending from one side.	1
UNO Board	 The Arduino UNO R3 microcontroller board, featuring a blue PCB, various electronic components, and a USB port.	1

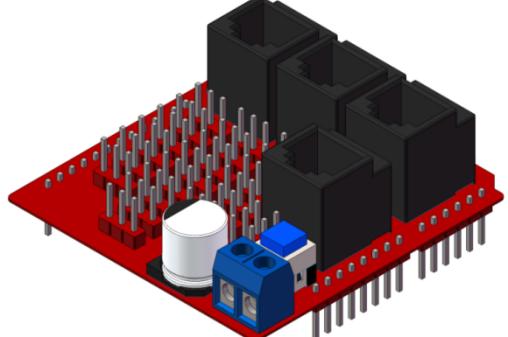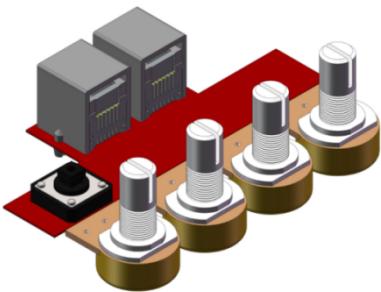Expansion Board		1
Potentiometer Module		1
USB Cable		1
RJ11 Cable		2
Riband		1
3M Non-skid Pad		4

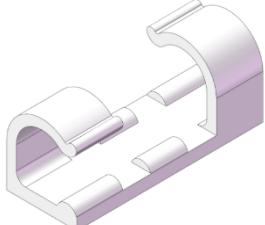Heat Shrink Tubing		2
Cable Clip	 	2

2.4 Tools

Screw Driver		1
--------------	---	---

2.5 Self-Provided Components

18650 Battery		2
---------------	---	---

3. How to Control

1. Install Arduino IDE
2. Assemble the Rollarm (Remember to **configure the servos** before assembly. Pay attention to the detailed operations)
3. Control with handle: **download** the Rollarm package and run the program (Indispensable step before operating the Rollarm)
4. Control with Labview: **download** the Labview to your PC and install for control (download is a must-do before subsequent operating)

Let's get started. Enjoy!

4. Getting Started with Software

4.1 Resources Download

1. Downloading the Labview software

The link for downloading (you may also find the link in the PDF file downloaded before):

<https://s3.amazonaws.com/sunfounder/Arduino/Labview.zip>

Note:

- *Labview/Rollarm/Rollarm's Installer/setup.exe*: The installer of Labview on your PC.

Then choose your installation path.

2. For related introduction and installation videos of the DIY Control Robot Arm kit for Arduino-Rollarm, please click **VIDEO** -> **Robot Kit** -> **DIY Control Robot Arm Kit for Arduino-Rollarm**.

4.2 Arduino

4.2.1 Description

Arduino is an open source platform that applies simple software and hardware. You can get it in a short even when you know little of it. It provides an integrated development environment (IDE) for code editing and compiling, compatible with multiple control boards. So you can just download the Arduino IDE, upload the sketches (i.e. the code files) to the board, and then you can see experimental phenomena. For more information, refer to <http://www.arduino.cc>.

4.2.2 Install Arduino IDE

The code in this kit is written based on Arduino, so you need to install the IDE first. Skip it if you have done this.

Step 1: Go to the arduino.cc website and click **Download**. On the page, check the software list on the right side under Download the Arduino Software.

Download the Arduino Software

ARDUINO 1.8.1

The open-source Arduino Software (IDE) makes it easy to write code and upload it to the board. It runs on Windows, Mac OS X, and Linux. The environment is written in Java and based on Processing and other open-source software.

This software can be used with any Arduino board. Refer to the [Getting Started](#) page for installation instructions.

Windows Installer
Windows ZIP file for non admin install

Windows app


Mac OS X 10.7 Lion or newer

Linux 32 bits
Linux 64 bits
Linux ARM


[Release Notes](#)
[Source Code](#)
[Checksums \(sha512\)](#)

Find the one that suits your operation system and click to download. There are two versions of Arduino for Windows: Installer or ZIP file. You're recommended to download the former.

Step 2: Double click the .exe file and the following window will show up. Click **I Agree**. The following interface will show up.

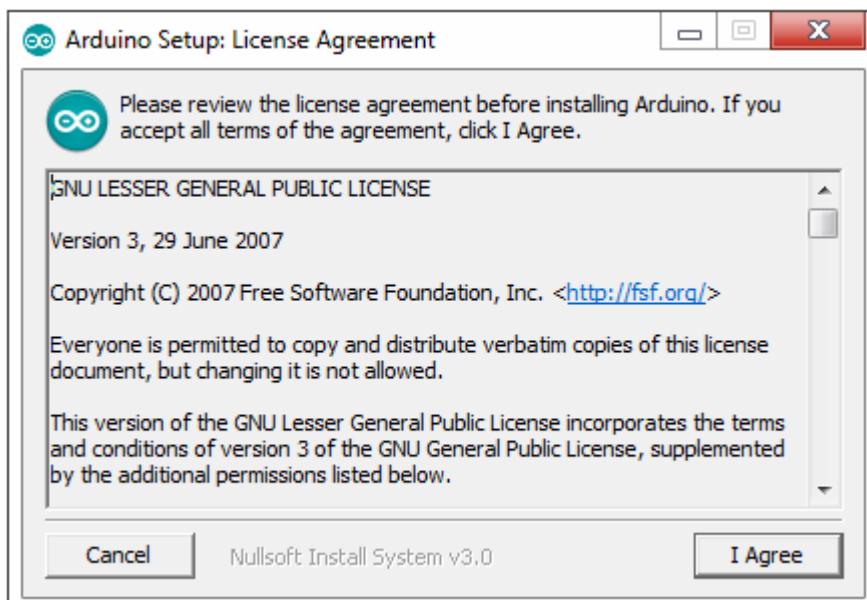


Choose **Next**.

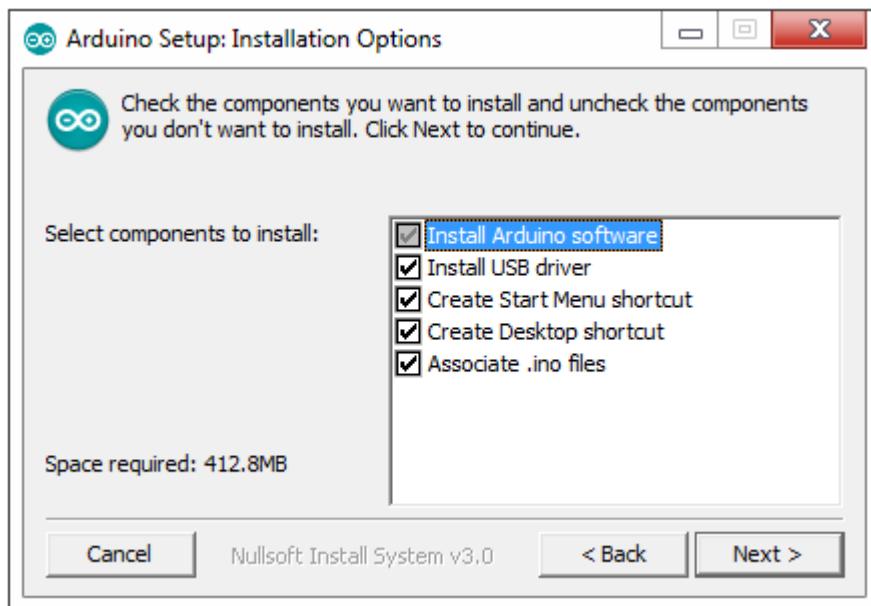


Click **Browse** to choose the installation path or enter a directory at the **Destination Folder**.


Click **Install**.

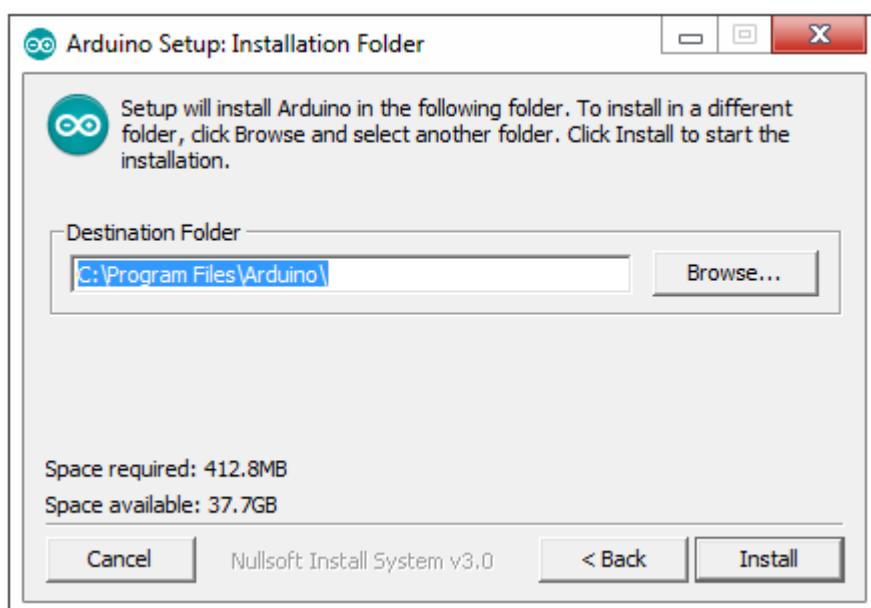


The following interface will show up. Note: After the installing progress bar goes to the end, the Close button may be enabled for some PC. Just click it to complete the installation.

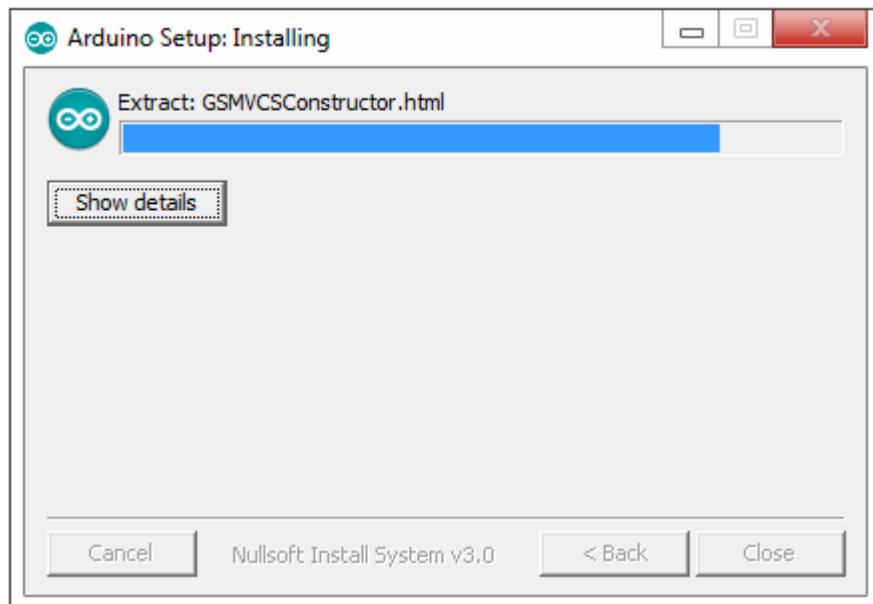

Then a prompt appears. Select Always trust software for "Adafruit Industries" and click **Install**.

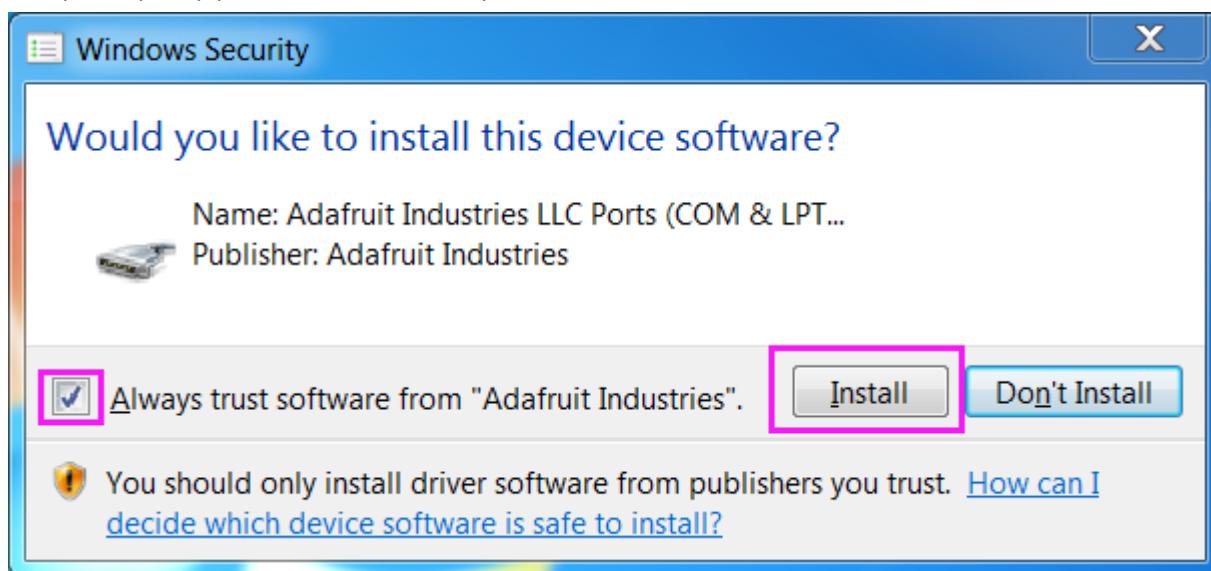

Select Always trust software for "Arduino srl" and click **Install**.

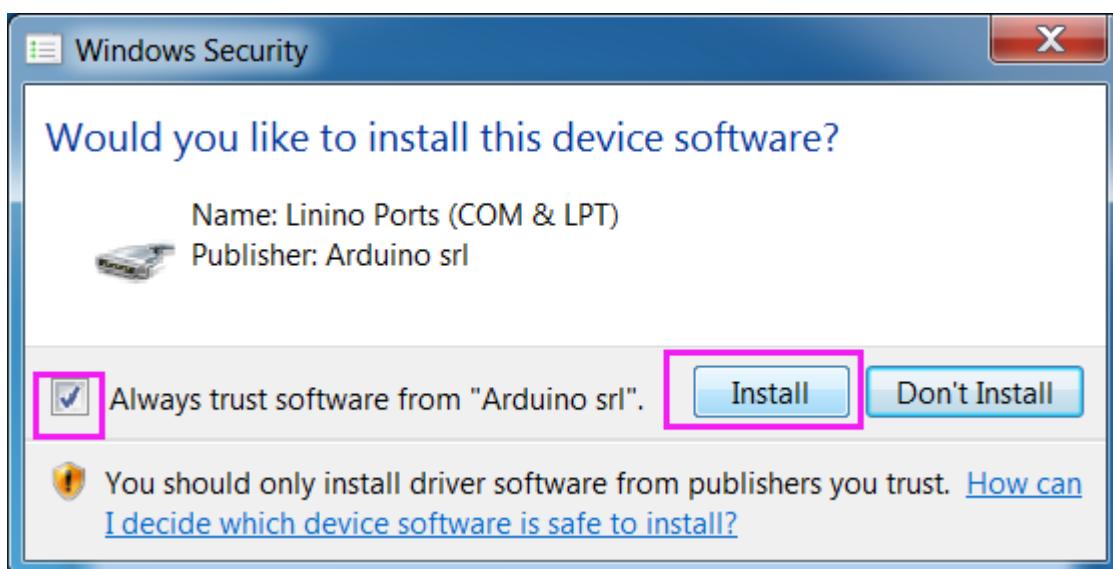


After the installation is done, click **Close**. Then an Arduino icon will appear on the desktop:




4.2.3 Install CH341Ser driver


Unzip the downloaded DIY_Control_Robot_Arm_kit_for_Arduino-Rollarm file and double click to run CH341SerSetup.exe.

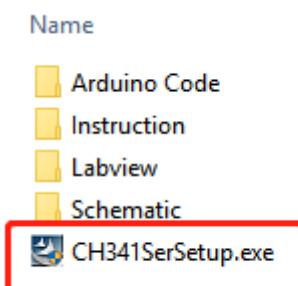


Choose **Next**.

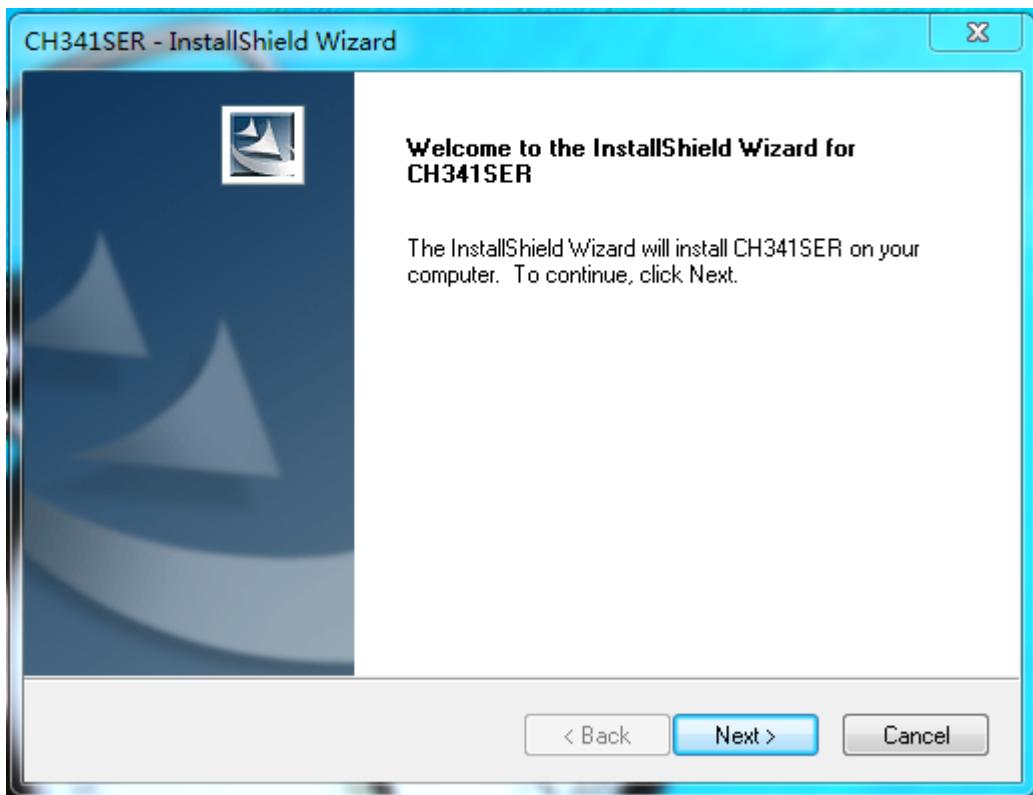

Wait a moment.

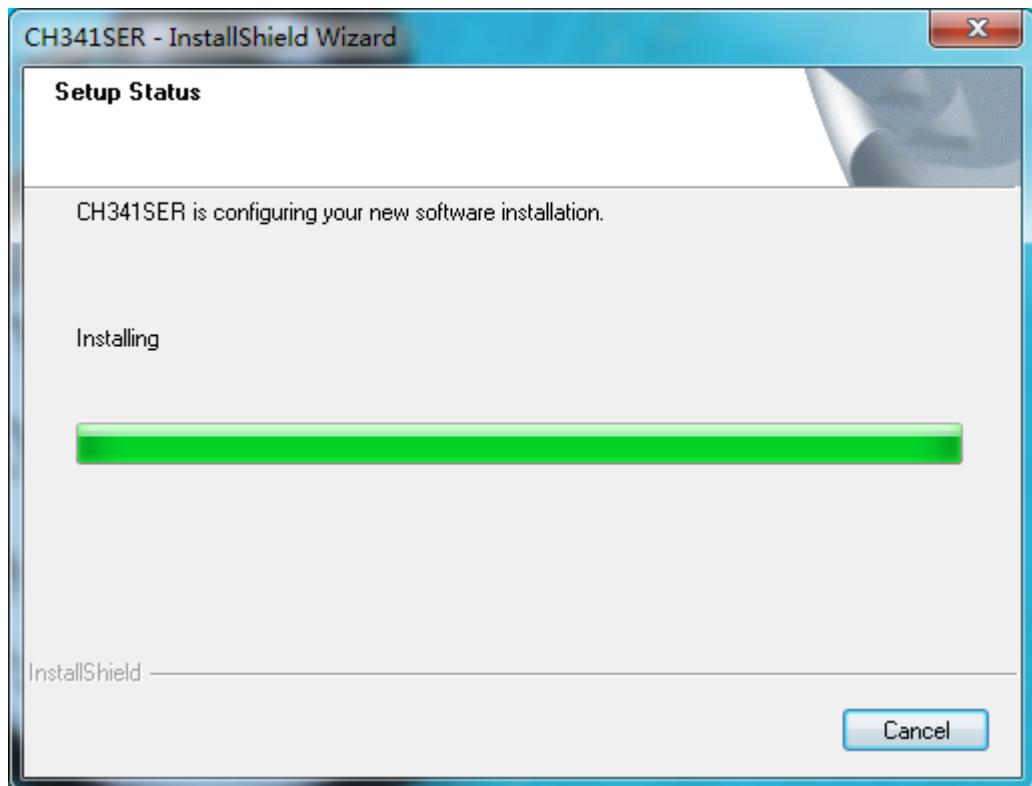


Click Finish.

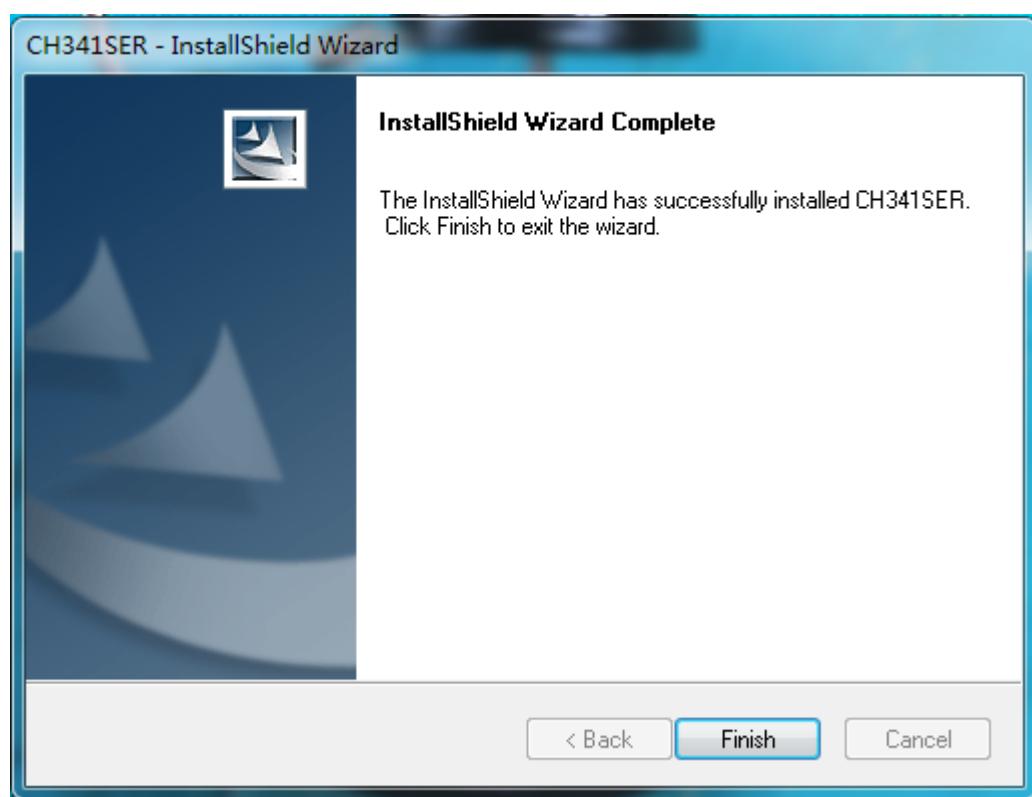

5. Assembly


5.1 Base Bottom Plate + Riband

1. Cut the 50cm ribbon into halves. Thread the ribbon through the Acrylic plate. Leave the riband with one end of a long part and the other of a short one. Thread another riband through the base bottom plate.

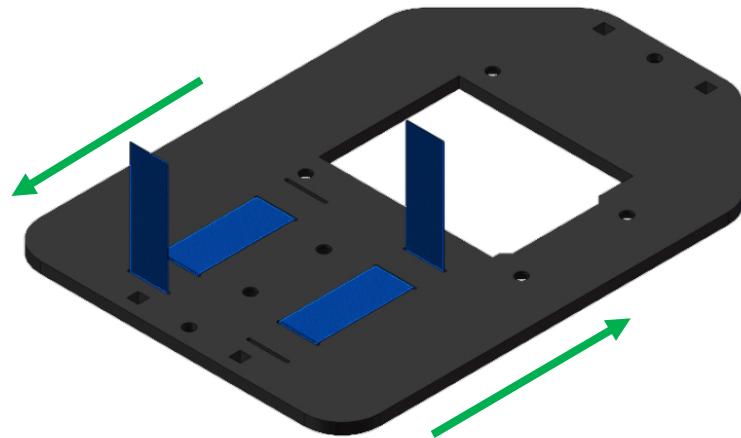

5.2 Base Bottom Plate + Battery Holder


1. Place the battery holder on the base bottom plate. Cling two M3 nuts underneath the plate and keep them aligned with the holes of the holder. Pay attention to put the end without holder power lines at the right side. Insert two M3*8 flat-head screws into the nuts and fasten them with the screw driver.

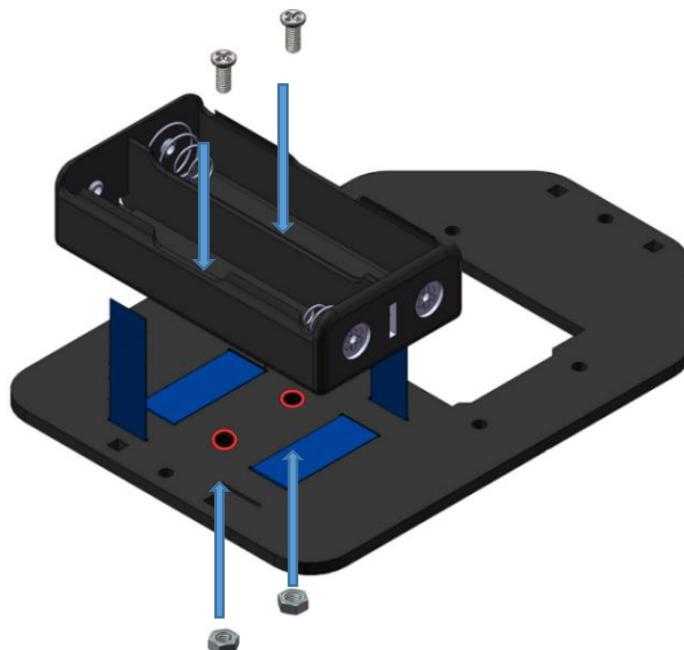

2. Fold the ribbon in the battery holder.




3. Align the anode of the battery with that of the battery cover and so does the cathode. Insert the battery into the battery holder.

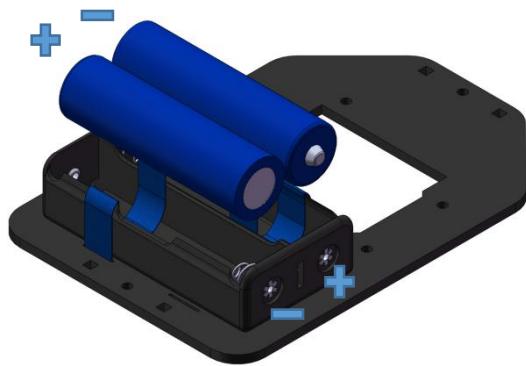


5.3 Base Bottom Plate + Circuit Board


1. Align the acrylic washers and holes on the plate. Cling 4 M3 nuts to the holes underneath the plate.

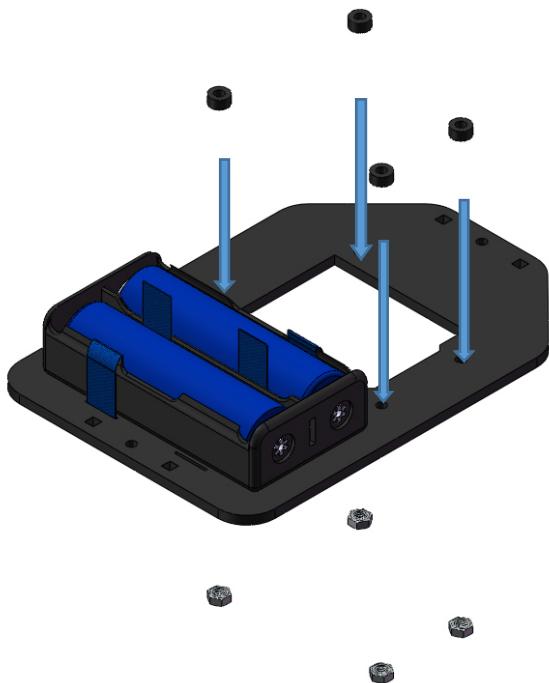

2. Place the UNO board onto the plate with its holes aligned with the washers. Fasten them with the M3*10 screws.

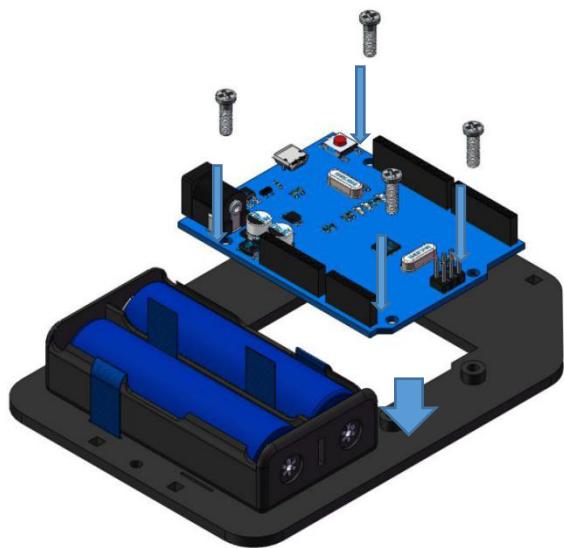


3. Align the pin headers of the expansion board with the sockets of the UNO board.

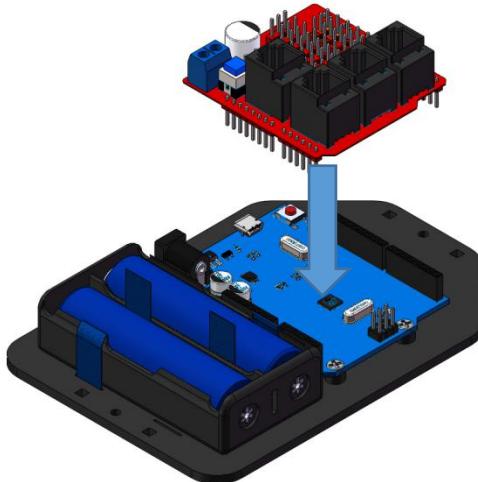


5.4 Base Bottom Plate + Base Fixing Plate

1. Put an M3 nut in the hole of the base fixing plate. Fix the two plates with the M3 nut and the M3*10 screw.

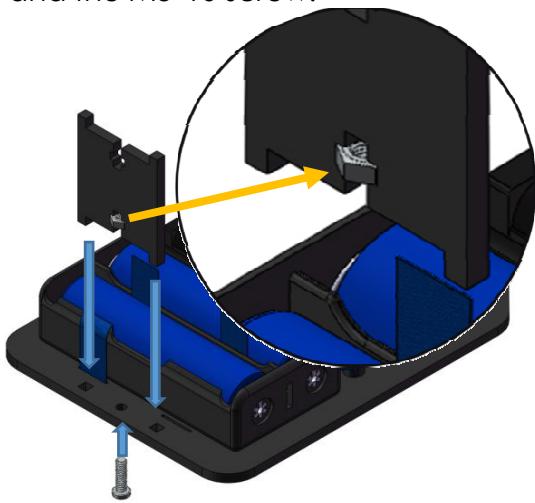


2. Mount the other base fixing plate in the same way.

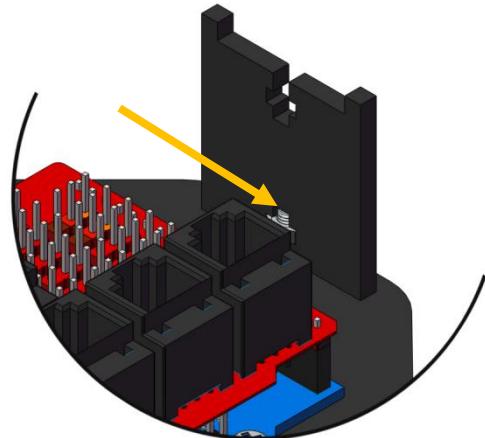


5.5 Base Upper Plate + Servo 1


1. Align the servo with the slot of the base upper plate with the rotating axis close to the middle line of the base upper plate.

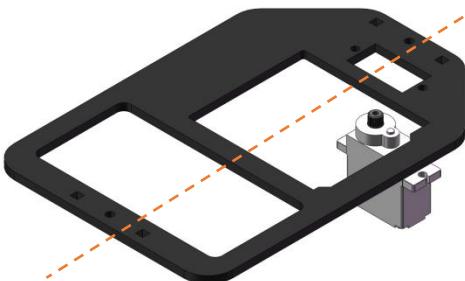


2. Insert the servo into the slot.

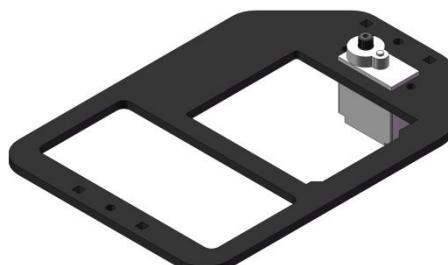


3. Hold an M2 nut underneath the hole of the servo and the upper plate and insert an M2*8 screw.

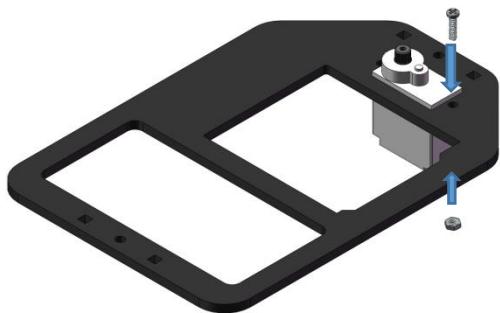

4. Fasten them with the screw driver.

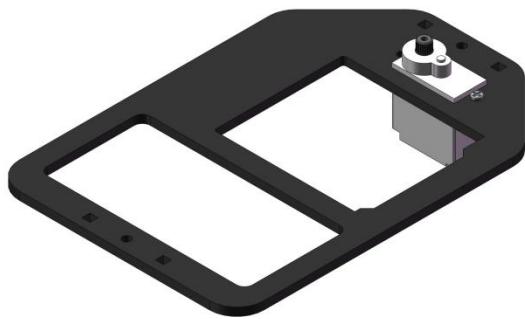


5. Fasten the other screw and nut in the same way.

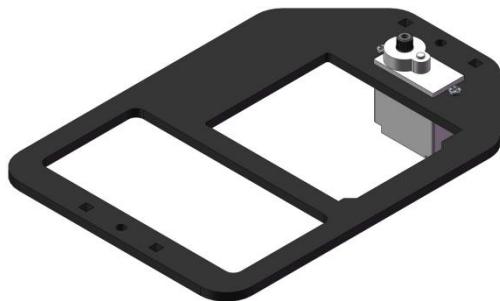


5.6 Base Fixing Plate + Base Upper Plate


1. Align the holes of the base upper plate with the bulges of the base fixing plate.

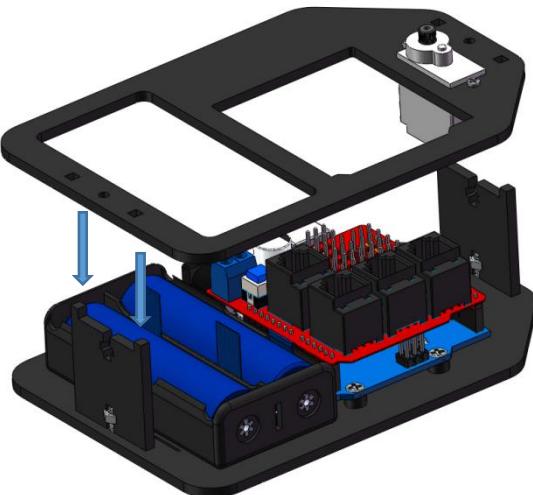


2. Put an M3 nut in the hole of the base fixing plate, insert an M3*10 screw through the plate into the nut and fasten them with the screw driver.

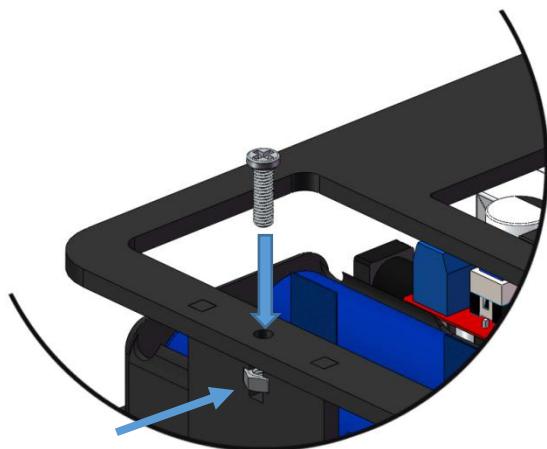

3. Fasten the other screw in the same way.

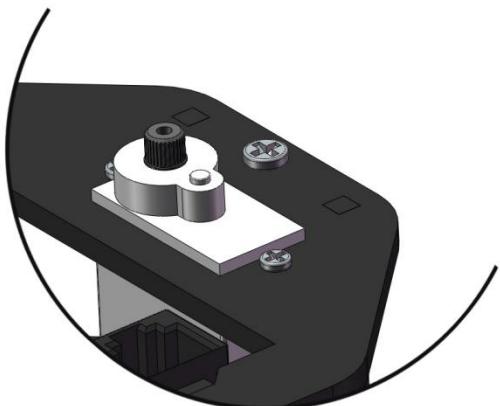


4. Paste four non-skid pads onto the corners of the base bottom plate.

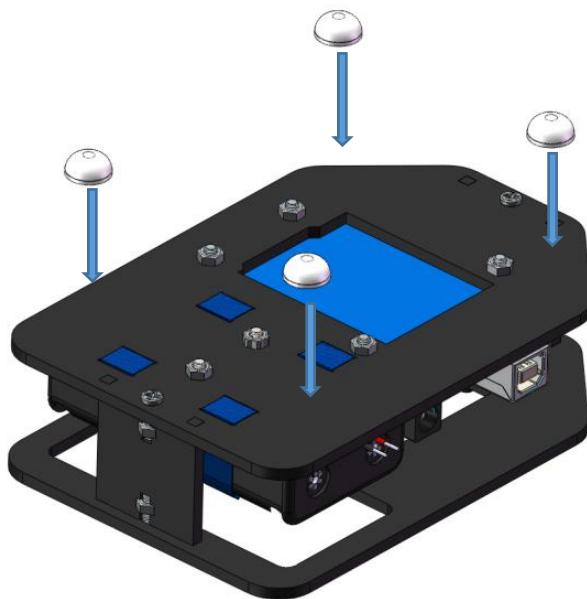

5.7 Adjust the Servo 1

Step 1: Insert the servo wires into D4, connect the Servo Control Board to the PC via the USB cable, and the PC will automatically install the driver. The COM port connected will appear.

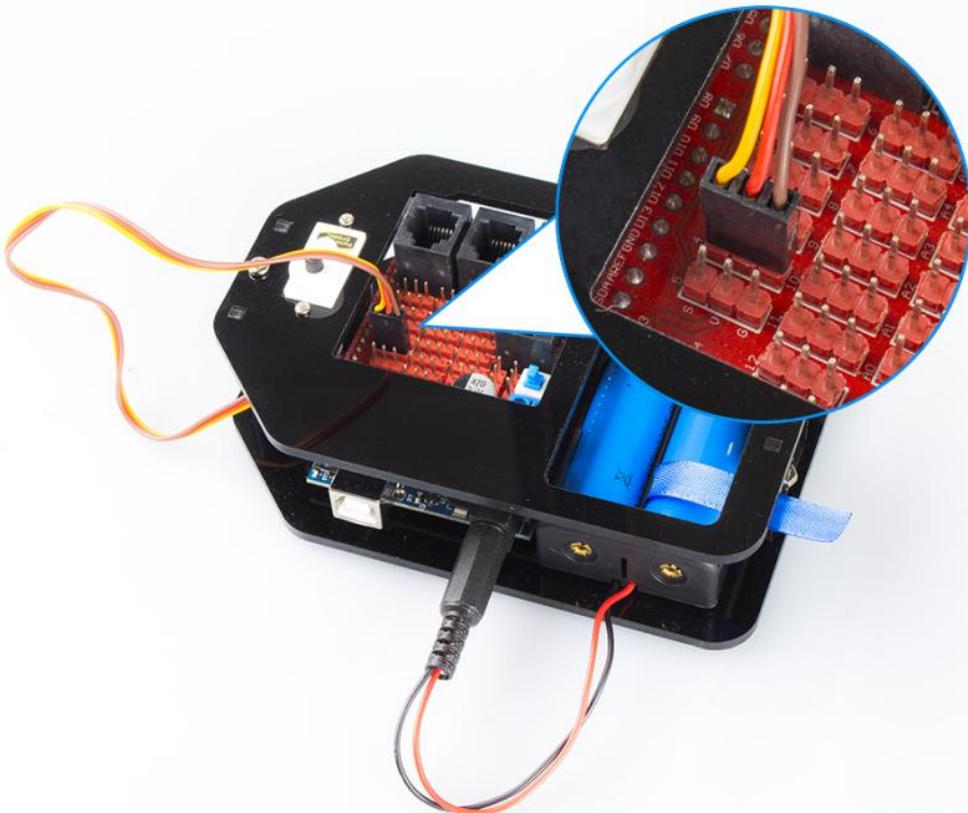


Connect the yellow, red, and brown wire to S, V, and G port as shown above.


Step 2: Connect the Rollarm to your computer with the USB cable: the driver will be installed automatically at that time, then you can see COMxx in device manager.

Step 3: Go to the folder *DIY Control Robot Arm kit for Arduino-Rollarm/Arduino Code/Servo* and open the file *Servo.ino*.


Step 4: Select the Board.

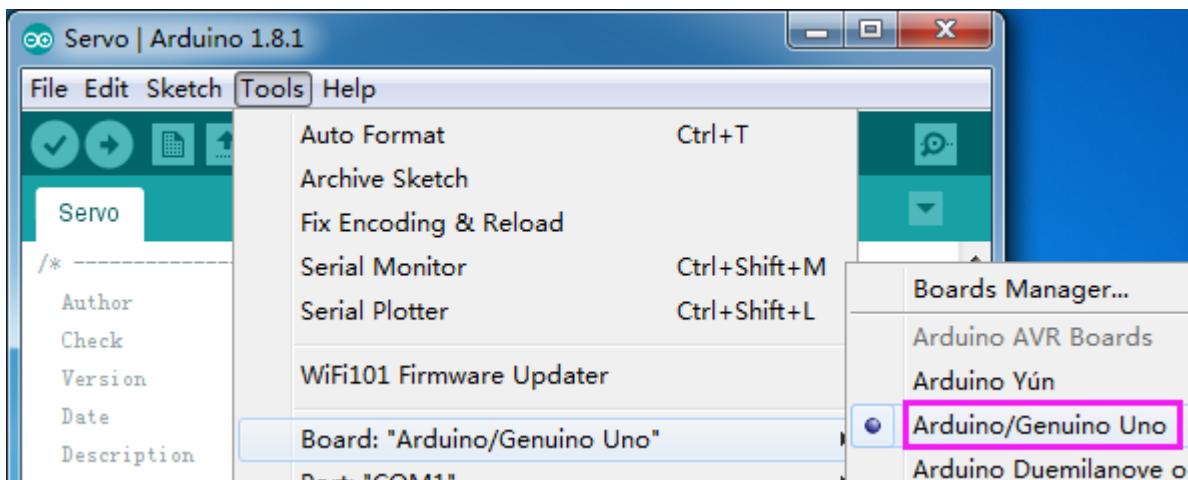

And Port.

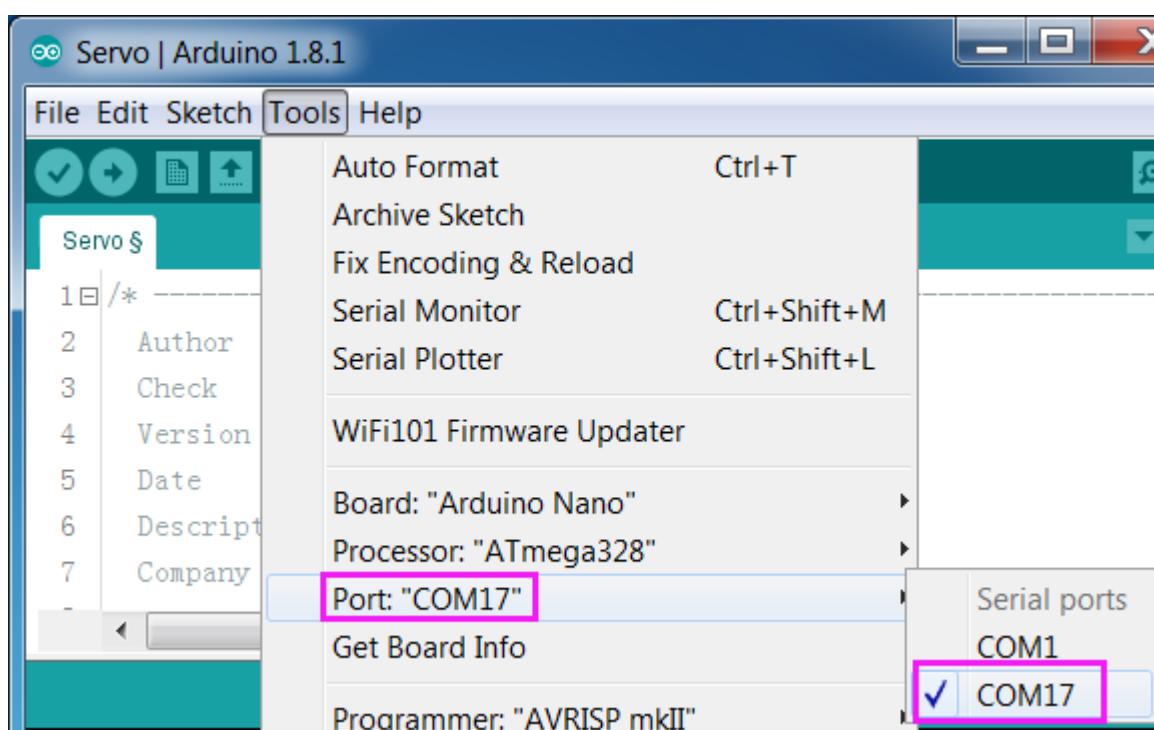


Step 5: Click Upload.

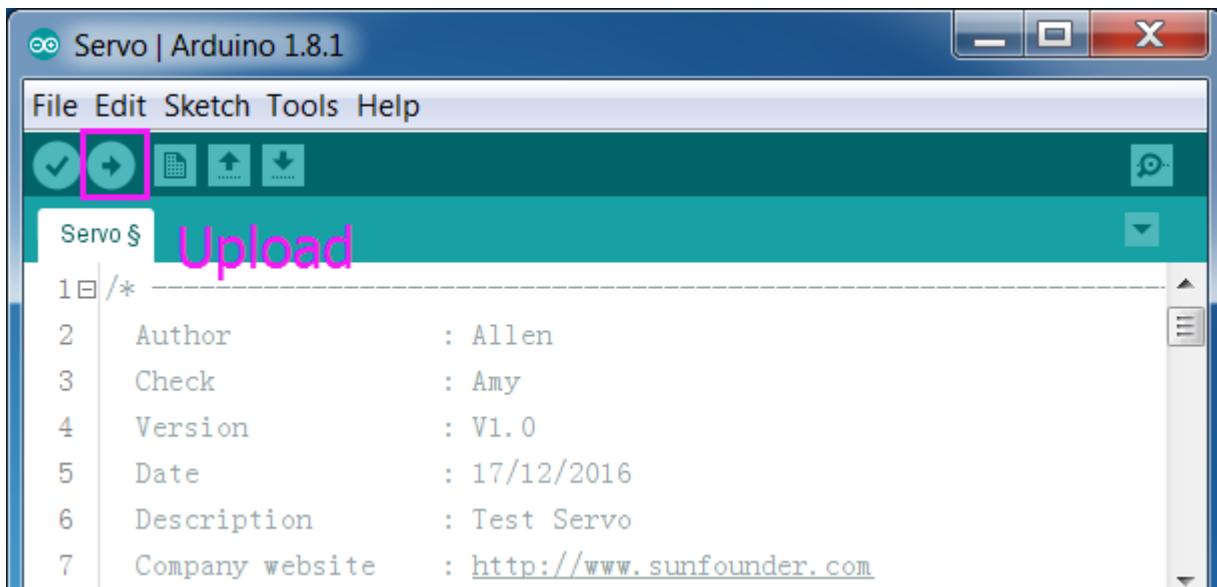


After the upload is completed successfully, press the switch on the board and **keep the control board power on**. You may hear the sound of gear moving (or may not, if the servo shaft happens to be at 90 degrees at the beginning; but you GENTLY spin the rocker arm and you'll find it's unmovable). So now the servo is adjusted to 90 degrees.

5.8 Joint 1-Connecting Plate + Servo Rocker Arm


1. Align the servo rocker arm with the hole of the Joint 1-connecting plate.

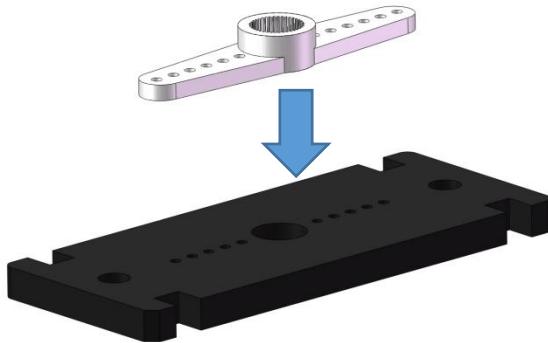

2. Insert an M1.2*4 self-tapping screw into a hole of the plate through the rocker arm.

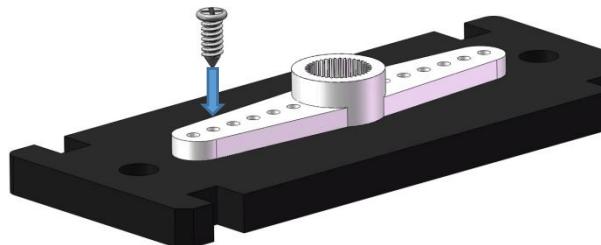


3. Fasten the other self-tapping screws in the same way.

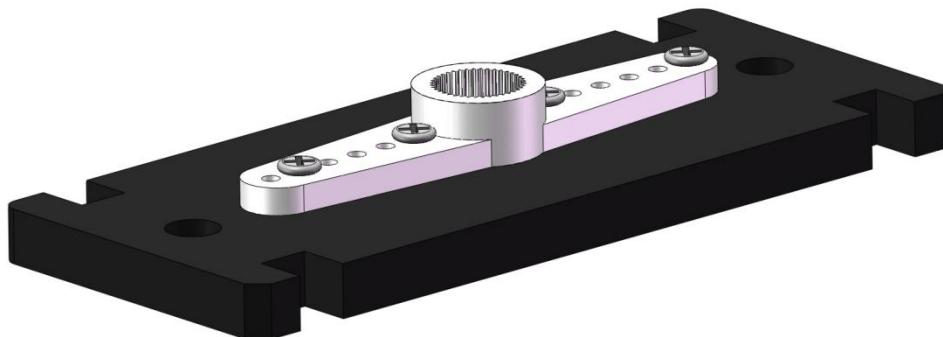


5.9 Right Joint Plate 1


1. Align the servo rocker arm with the hole of the Right Joint Plate 1.

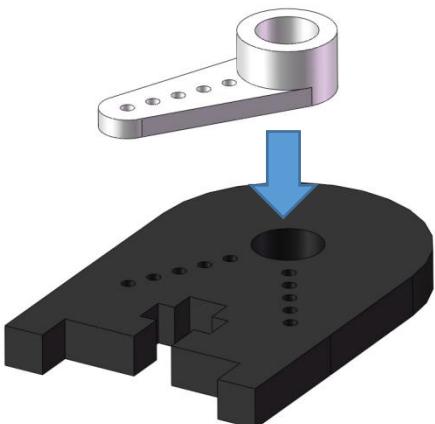

2. Insert an M1.2*4 self-tapping screw into a hole of the plate through the rocker arm.

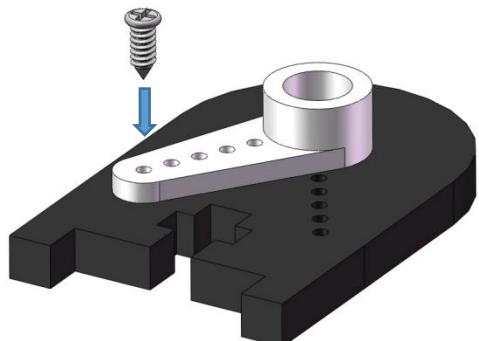


3. Fasten the other self-tapping screws in the same way.

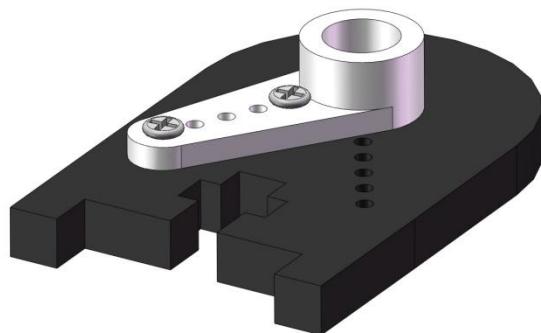


5.10 Joint 1 Connecting Plate

1. Align the bulges of the Right Joint Plate 1 with the slots of the Joint 1 Connecting plate.

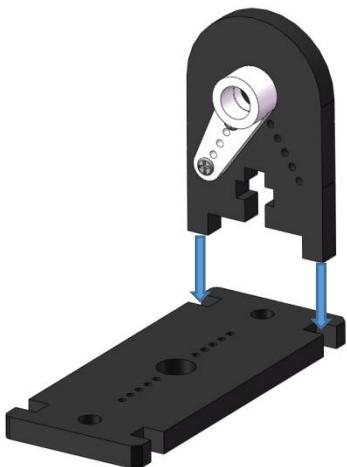


2. Put an M3 nut into the hole of the Right Joint Plate 1 and insert an M3*10 screw into the nut through the connecting plate.

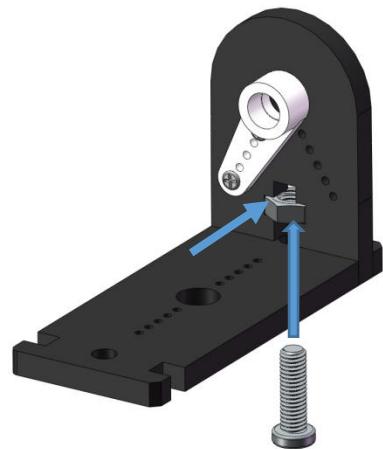


5.11 Base + Joint 1 Connecting Plate

1. Align the edge of the connecting plate with that of the base plate.

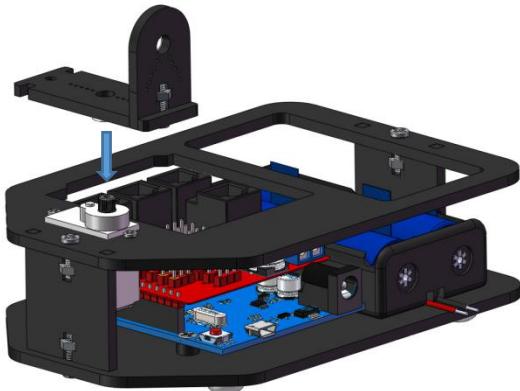

2. Fasten them with a servo screw(The shortest screw in the servo package).

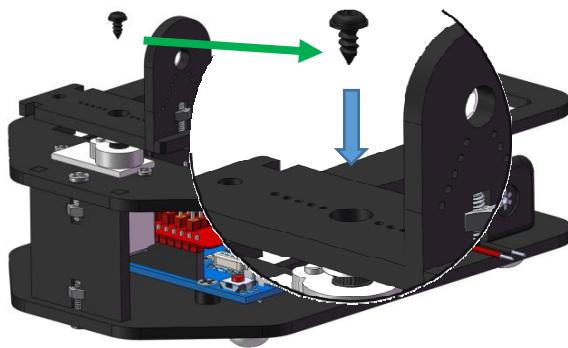


5.12 Joint 2 + Right Joint Plate 2


1. Align the bulges of the joint 2-connecting plate with the slots of the right joint plate 2.




2. Put an M3 nut into the hole of the joint 2-connecting plate and insert an M3*10 screw into the nut.

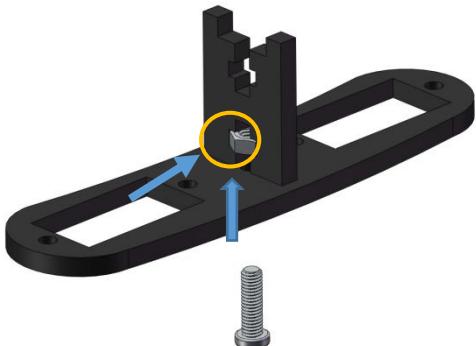


3. Align the servo 3 with the right joint plate. Pay attention that the servo shaft should point to the plate end near the slot the servo to be placed in.

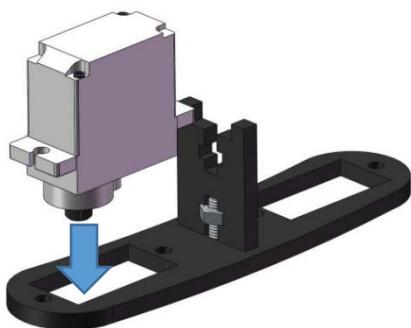


4. Put an M2 nut in the hole of the servo and insert an M2*8 screw into the nut and fasten them.

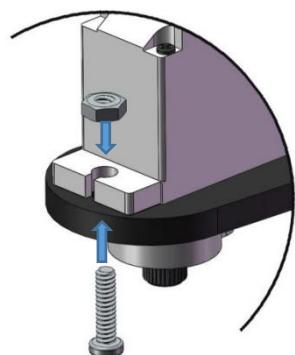


5. Fasten the other screw in the same way.

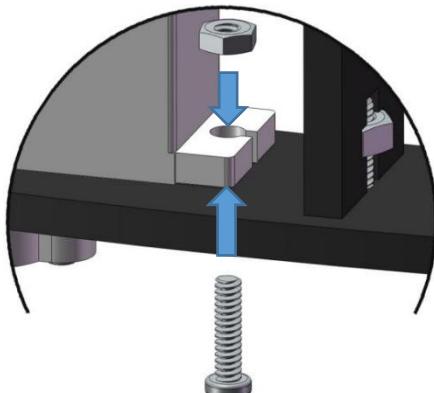

6. Fix the servo 2 in the same way.

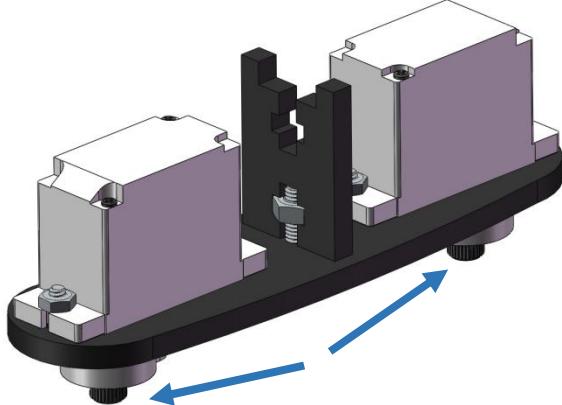


7. Align the two M3*6 copper corn rivets with the holes of the left joint plate 2.

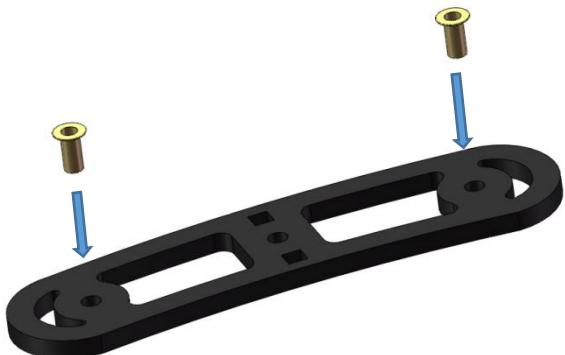

8. Insert the rivets into the holes of the plate.



9. Put an M3 nut in the hole of the joint 2-connecting plate. Align the bulges of the plate with the slots of the left joint plate 2.

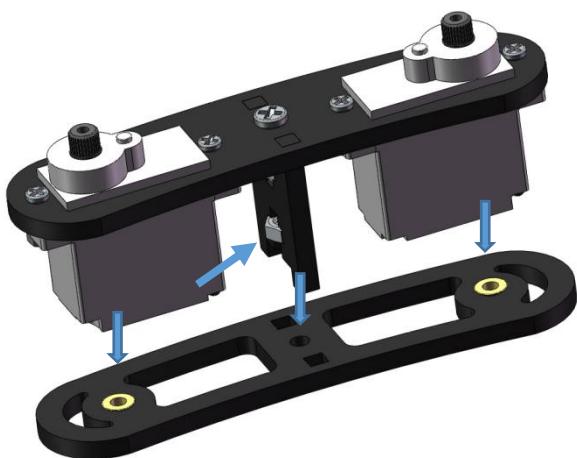


10. Insert an M3*10 screw into the nut and fasten them with the screw driver.



5.13 Adjust The Servo 2 and The Servo 3

Connect the servo 2 to port D5 of the expansion board, while the servo 3 to port D6. Power on the servos, then it will be rotate to its 90° position. **In following steps, you still need to keep the power on.**

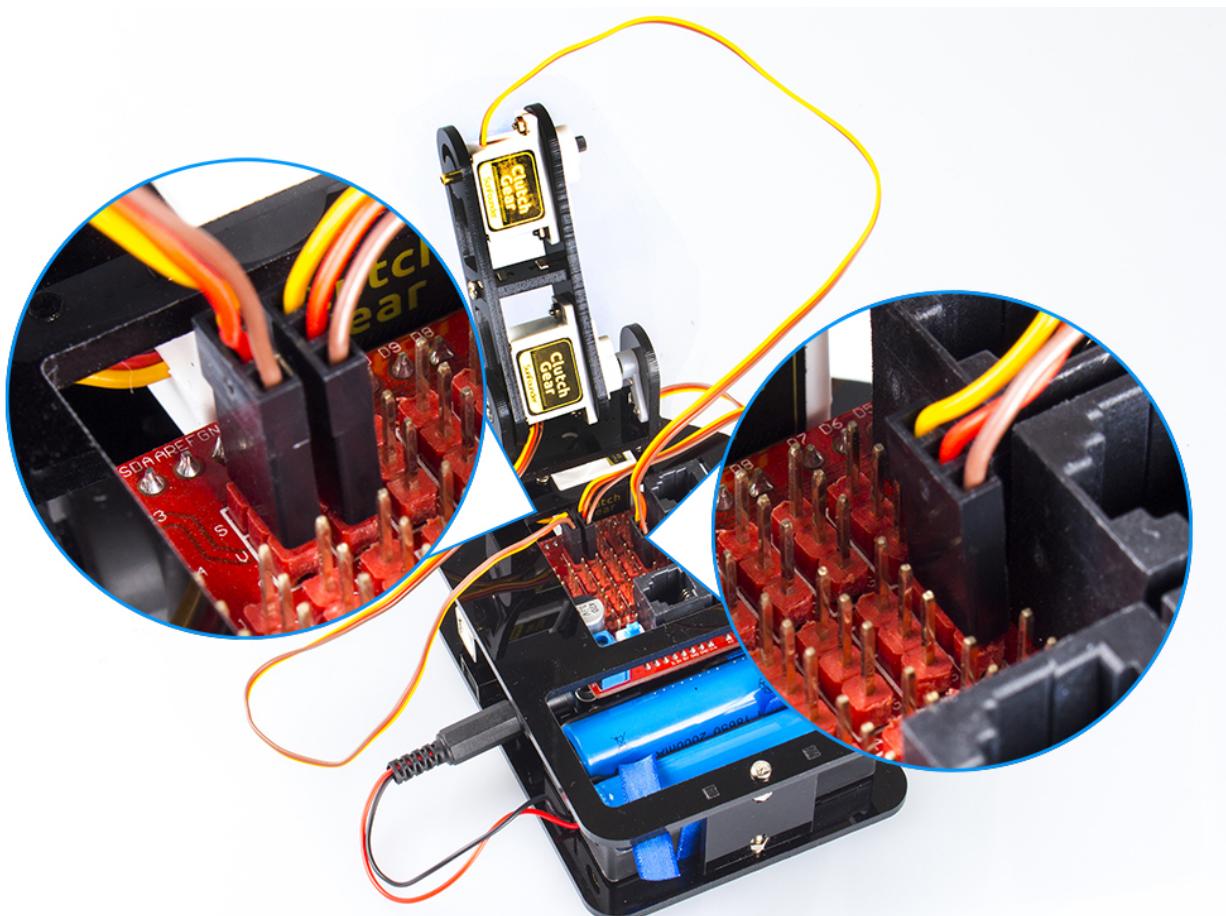


5.14 Joint 1 Connecting Plate + Joint 2 Connecting Plate

1. Align the servo shaft with the round rocker arm connected to the joint 1-connecting plate. Remember the servo should be vertically placed as shown below.




2. Fasten them with a servo screw(The shortest screw in the servo package).

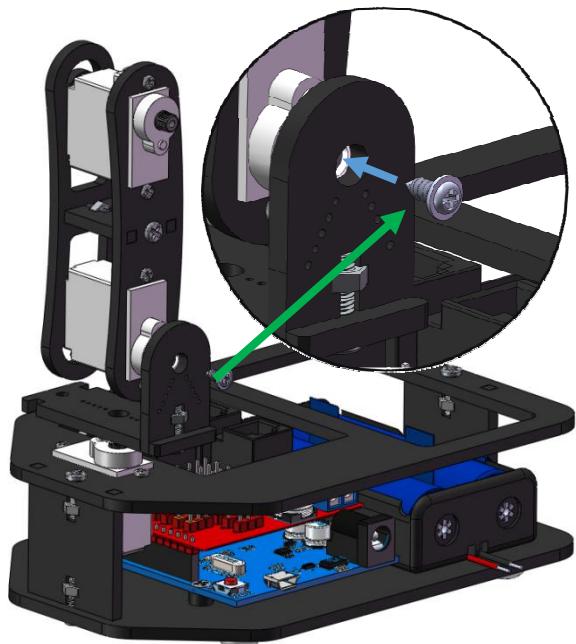


5.15 Joint 1 Connecting Plate

1. Align the band edge bearing with the corn rivet. Put the bearing into the rivet.

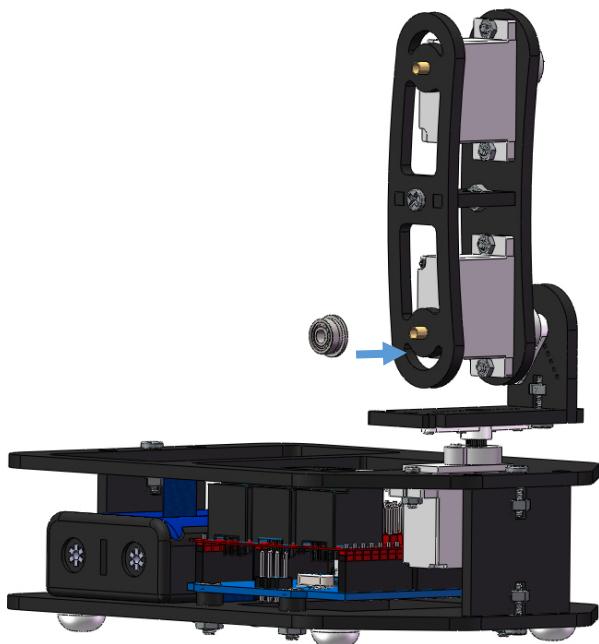


2. Insert the bulges of the left joint 1 into the slots of the joint 1-connecting plate and insert the bearing into the hole of the former.

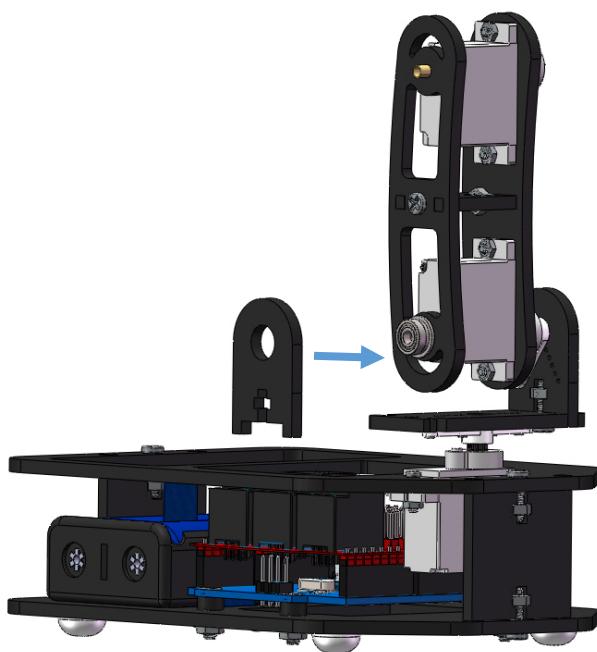

3. **Turn the power switch off.** Rotate the joint 1-connecting plate 90 degrees anticlockwise.




4. Put an M3 nut in the hole of the left joint connecting plate 1 and insert an M3*10 screw into the nut and fasten them.

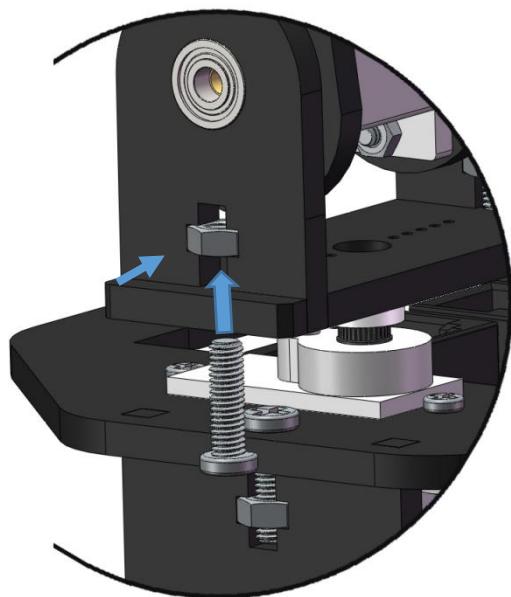


5.16 Gripper Fixing Plate


1. Align the servo4 with the slot of the gripper fixing plate (**pay attention to the direction of the shaft**).

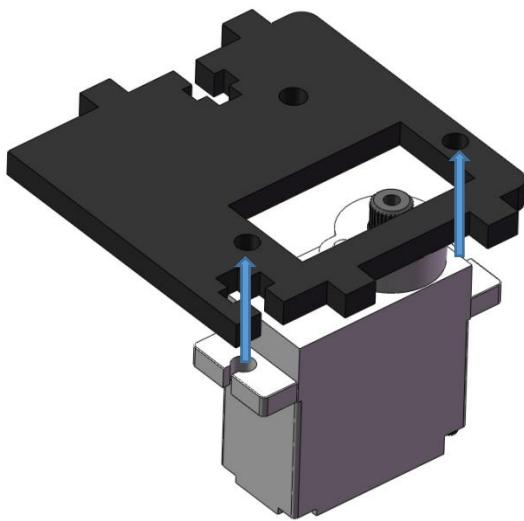

2. Put an M2 nut underneath the hole and hold it with your finger, and insert an M2*8 screw into the nut and fasten them.

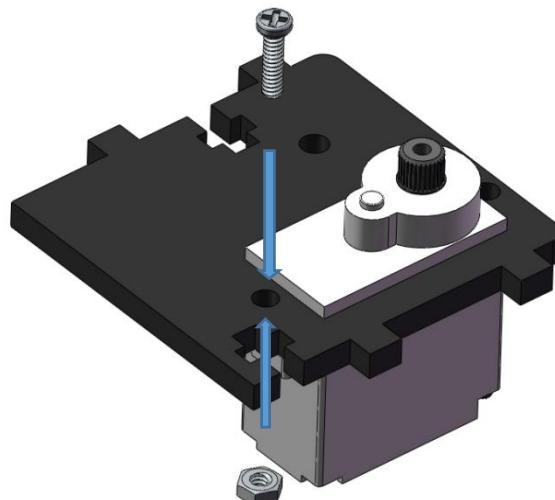


3. Fasten another screw in the same way.

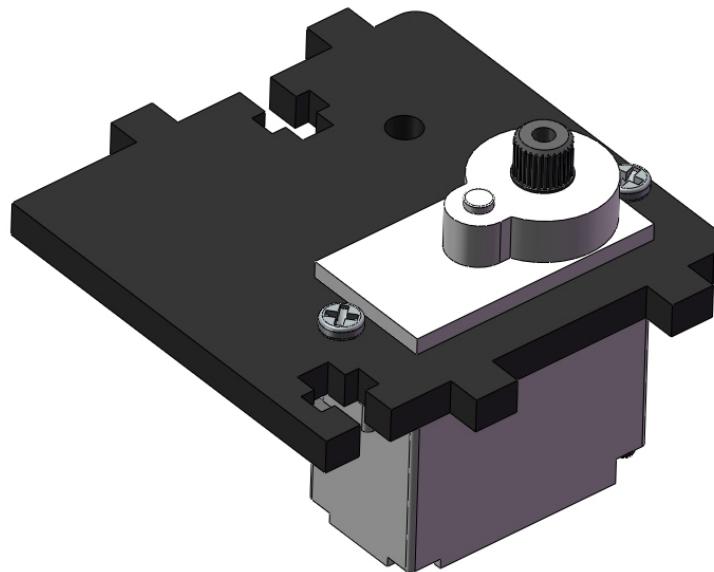

5.17 Adjust The Servo 4

Connect the servo 4 to the port D7 of the expansion board, then power on the servo, then the servo will rotate to its 170 position.

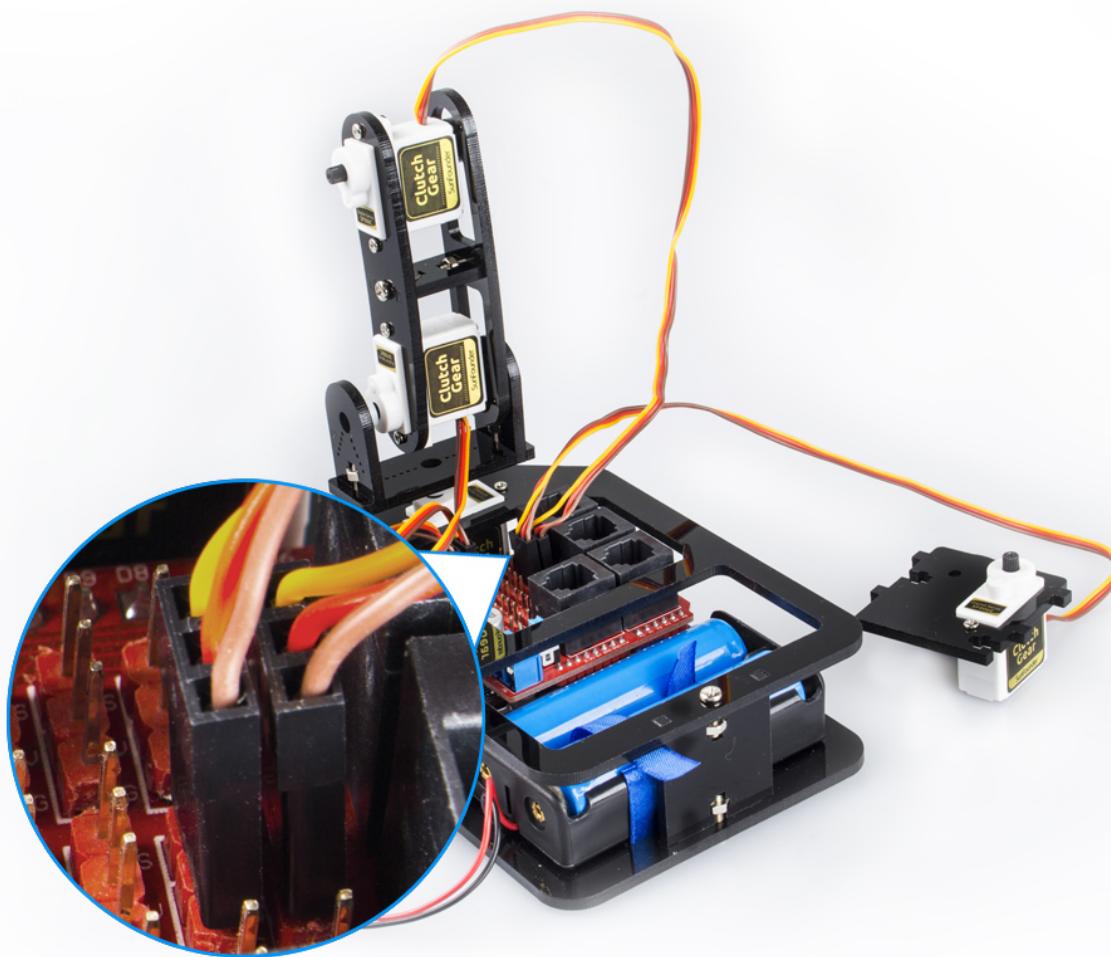


5.18 Gripper Driving Plate + Gripper Driven Plate


1. Align the servo rocker arm with the hole of the gripper driving plate.




2. Insert an M1.2*4 self-tapping screw into the first hole of rocker arm.

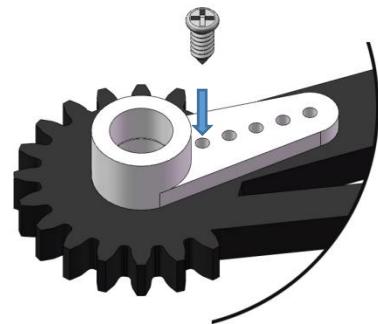


3. Insert an M1.2*4 self-tapping screw into the last hole and fasten them.

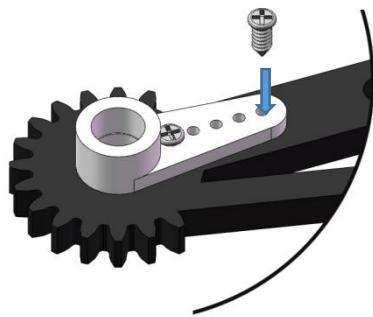

4. Align an M3*10 aluminum tube with the rest hole of the plate.

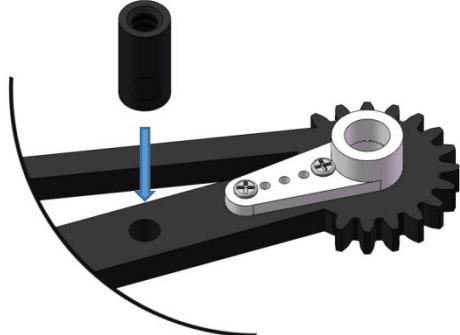

5. Insert an M3*8 screw into the tube from the other side of the plate.

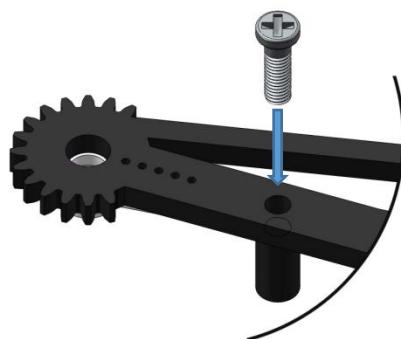

6. Fix another aluminum tube similarly.



7. Align the holes of the gripper assistant with the aluminum tubes.



8. Fasten them with an M3*8 screw.



9. Fix an M3*8 screw to the other tube.



10. Install the gripper driven plate in the same way.




5.19 Grippers + Gripper Fixing Plate


1. Align the servo rocker arm with the shaft and keep the gripper edge of the driving plate parallel to the side of the fixing plate.




2. Fasten them with a servo screw(The shortest screw in the servo package).

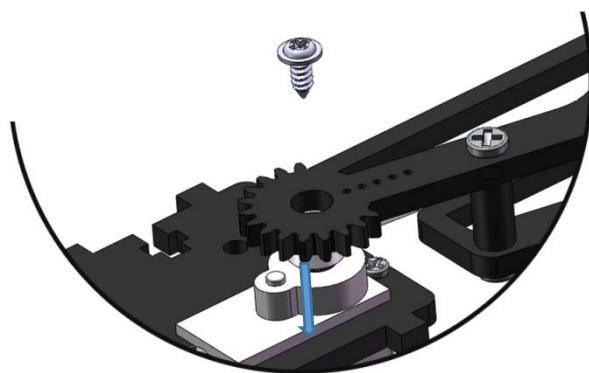

3. Align the aluminum tube with the hole of the gripper fixing plate.

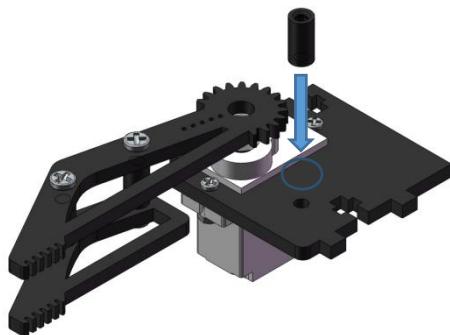

4. Insert an M3*8 screw into the hole.

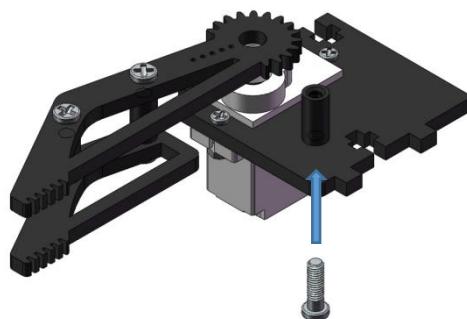

5. Align a band edge bearing with the aluminum tube with the edge against the tube. Put the gripper driven plate onto the bearing.




6. Keep the inner edges of the two gripper plates parallel and the gears meshed.



7. Put a 3*10*1 washer on the bearing and fasten them with an M3*8 screw.




8. It will be like this after fastening.

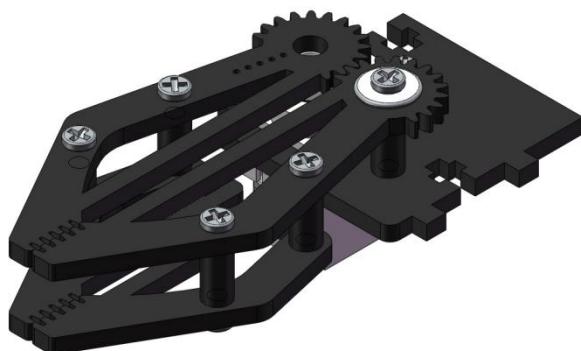


5.20 Right Joint Plate 3

1. Align the servo rocker arm with the hole of the Right Joint Plate 3.

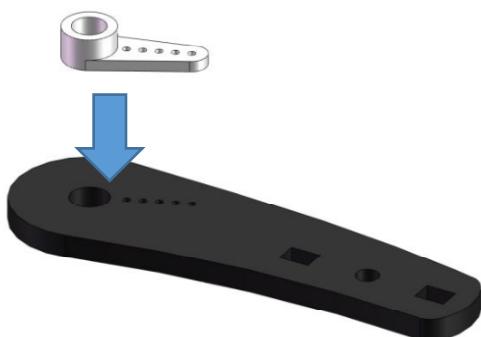

2. Insert an M1.2*4 self-tapping screw into a hole of the plate through the rocker arm.

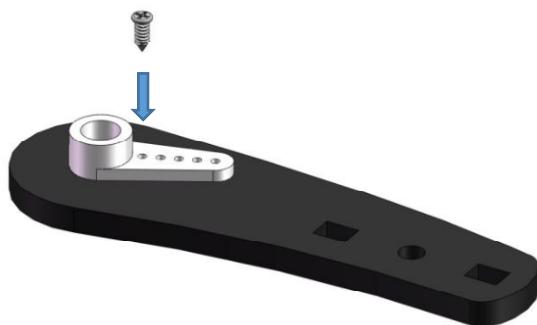


3. Fasten the other self-tapping screws in the same way.



5.21 Gripper Fixing Plate + Right Joint Plate 3

1. Align the bulges of the gripper fixing plate with the slots of the right joint plate.

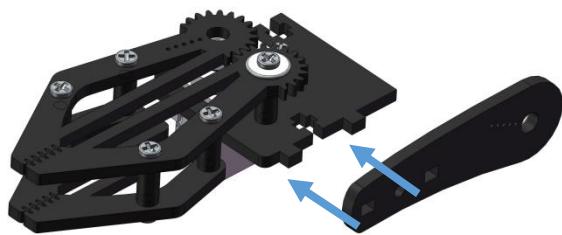


2. Put an M3 nut in the hole of the gripper fixing plate and insert an M3*10 screw into the nut.




5.22 Joint 2 Connecting Plate + Joint 3 Connecting Plate

1. Align the servo rocker arm with the shaft and keep the two joint plates near perpendicular to each other.

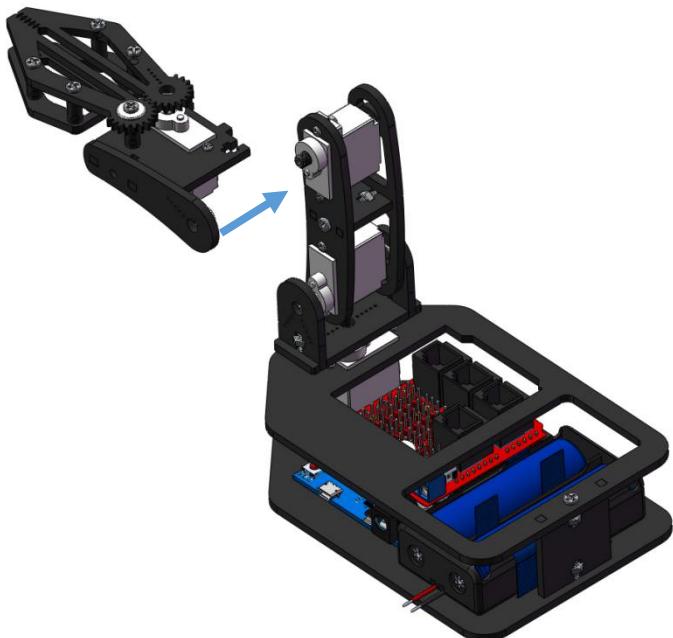

2. Fasten them with a servo screw(The shortest screw in the servo package).

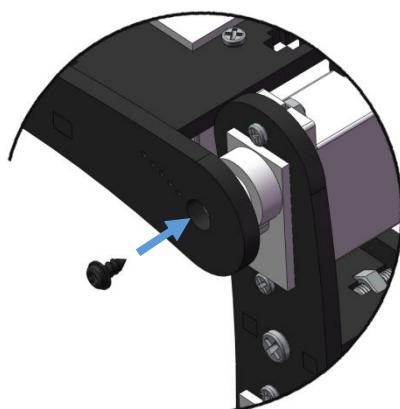

5.23 Left Joint Plate 3

1. Align the band edge bearing with the corn rivet with its edge against the plate.



2. Align the hole of the left joint plate 3 with the bearing.



3. Put an M3 nut in the hole of the fixing plate and insert an M3*10 screw into the nut.




4. Fasten them with the screw driver.




5.24 Handle

1. Align the bulges of the handle-fixing plate with the slotted holes of the handle-bottom plate.

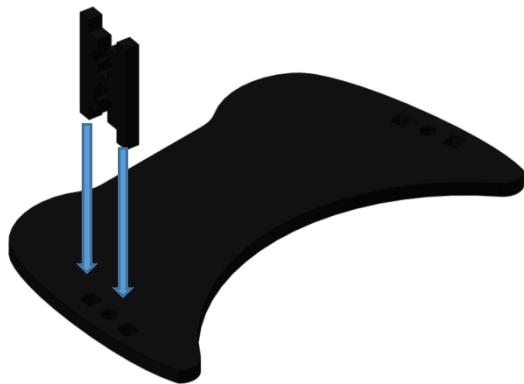


3. Fix the other handle fixing plate in the same way.

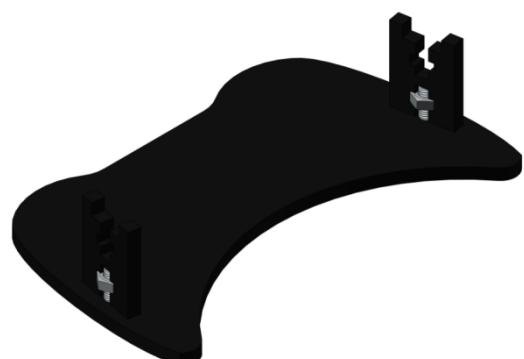


2. Put an M3 nut in the hole of the fixing plate and insert an M3*10 screw into the nut.




4. Align the four holes of the handle upper plate with the 4 potentiometers on the Potentiometer Module.

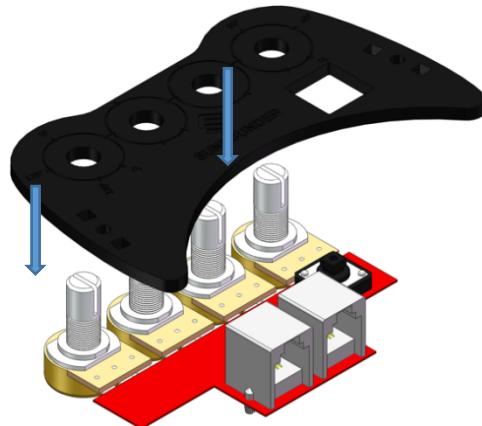


5. Fasten one pot with an M7 thin nut.

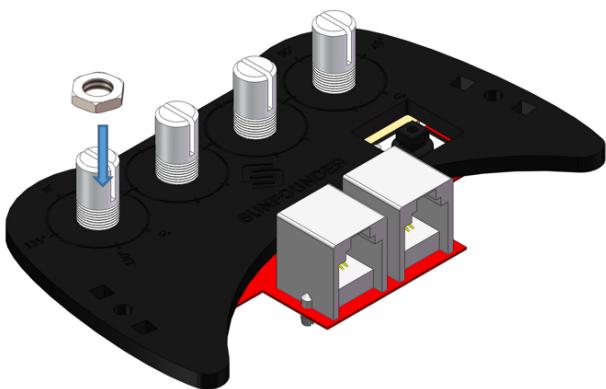


6. Fasten the other three pots with the M7 thin nuts in the same way.

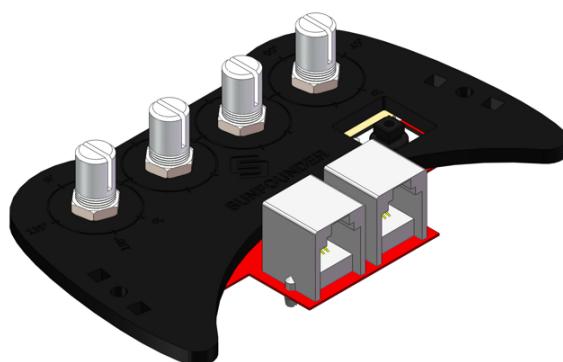

7. Align the slotted holes of the handle upper plate with the bulges of the handle fixing plate.

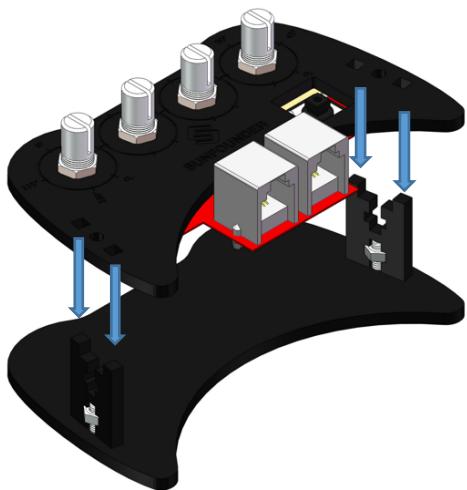


8. Put an M3 nut in the hole of the handle fixing plate and insert an M3*10 screw into the nut.

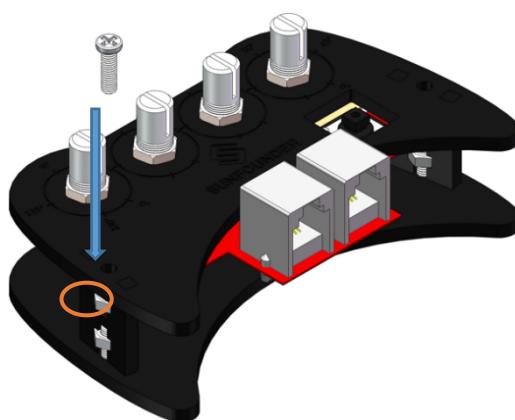


9. Fasten the other screw similarly.




10. Rotate the potentiometer clockwise to the end, and align the bulged part of button with the 0° position. Put the button onto the potentiometer.

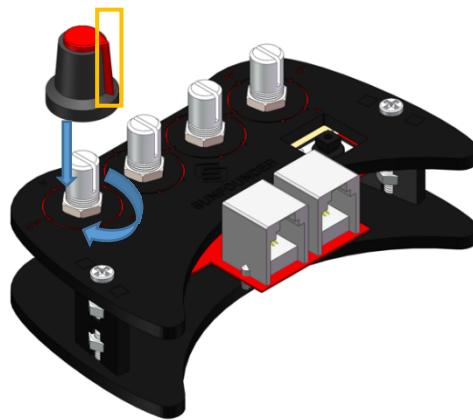

11. Install the other three pot buttons in the same way.

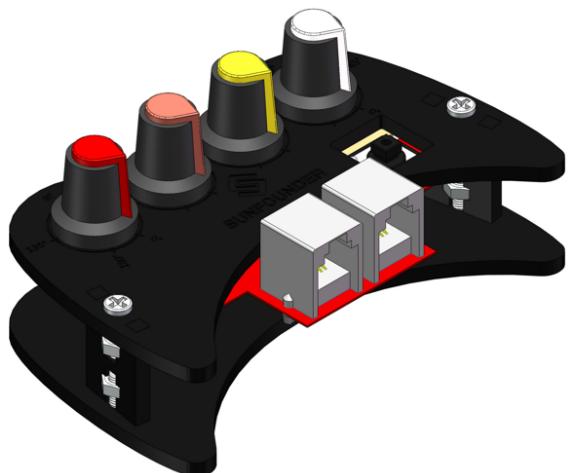


12. Install the button.

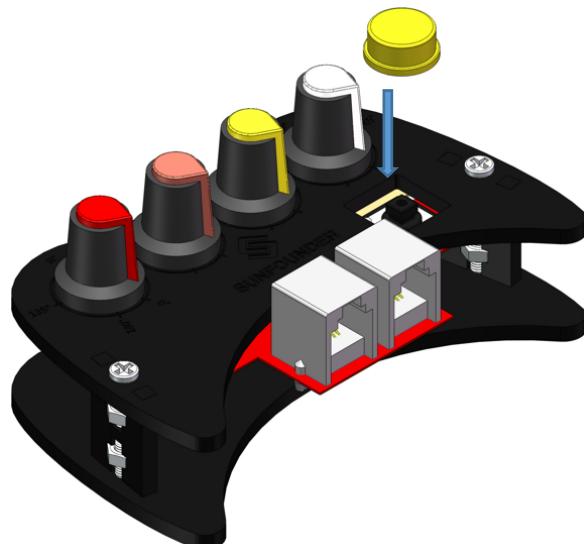

5.25 Wiring

In this step, connect port1 and 2 of the handle to that of the extension board with RJ11 cables.

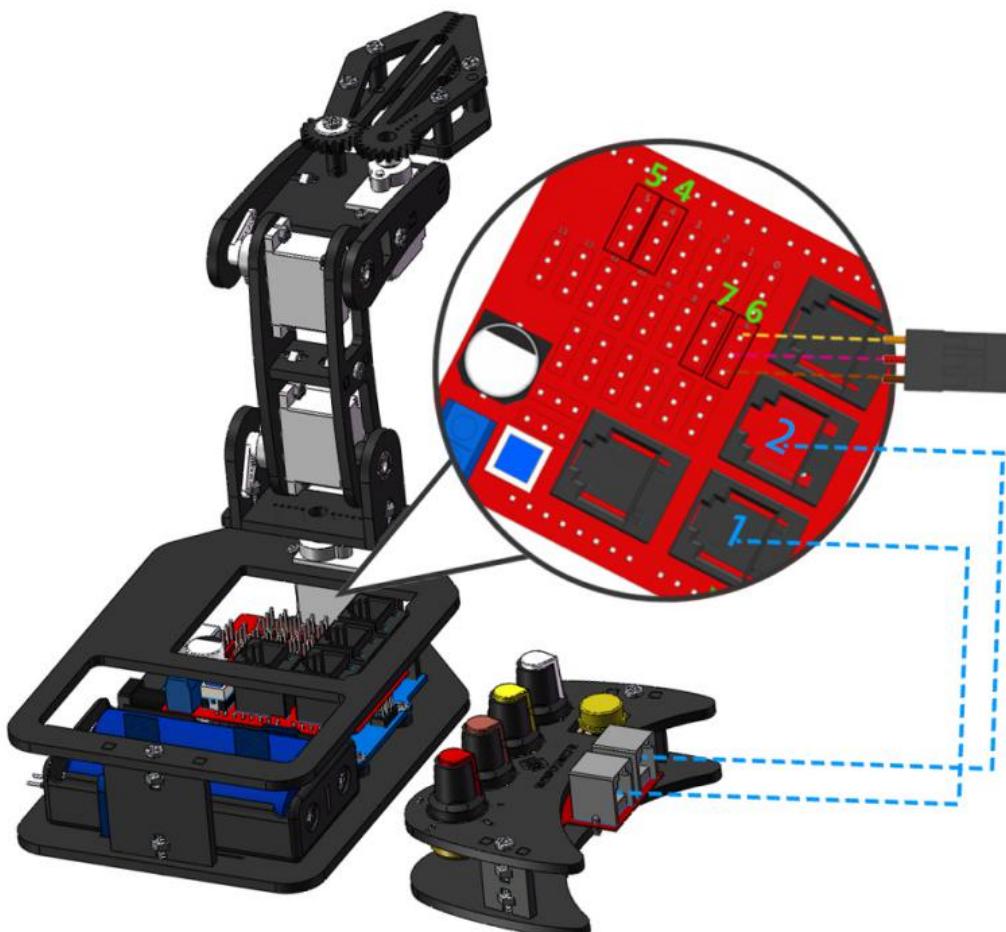

Notes:

1. Before connecting the servo wires to the ports, turn off the power. Turn it on again after all the wires are connected.
2. When the servos are on, remember NOT to rotate the servo rocker arms. Turn them off if you want to do so.
3. Please be careful that the servos shouldn't be kept stalling. Otherwise, it will cause damages. In a word, when you are not running the Rollarm, keep it OFF.

6. Control the Rollarm


There are two ways to control the Rollarm: manual control (by handle), or PC control (by Labview). The detailed operations for two ways are as follows.

6.1 Manual Control

Step 1: Run the *Rollarm.ino* file under the path *DIY Control Robot Arm kit for Arduino-Rollarm\Arduino Code*. There are four code files in Rollarm, and you need to double-click **Rollarm** to open the four simultaneously. **Rollarm.ino** is the main program, when the others are subprograms.




When you open the main program, the subprograms will be opened automatically:

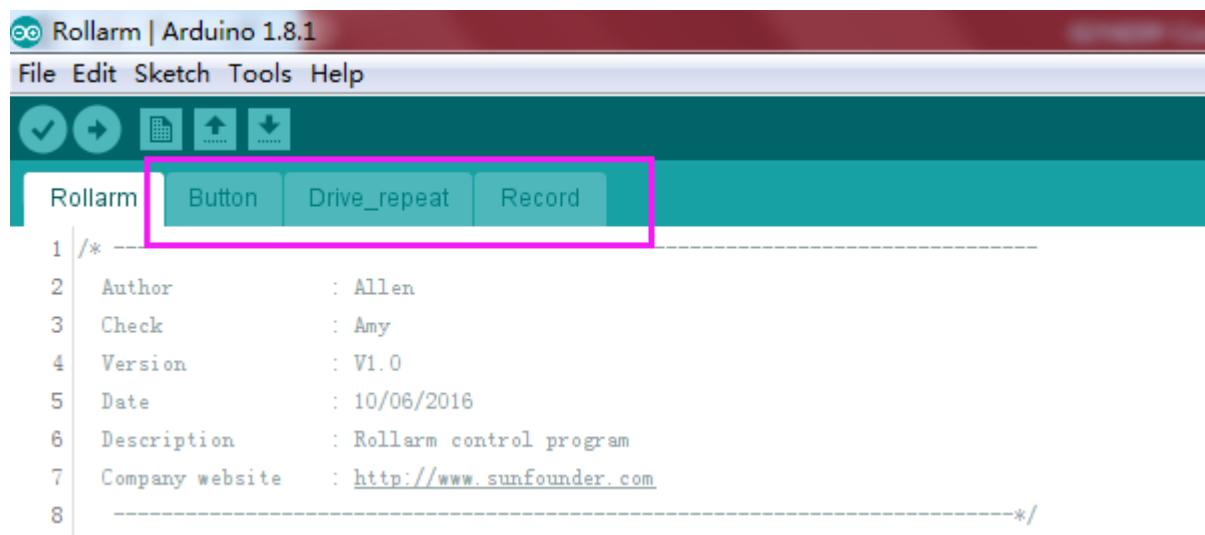

Step 2: Select the corresponding board and port, then click **Upload**.

Step 3: After the code upload, turn the power switch on, then we can try to control the Rollarm.

Step 4: Rotate the four potentiometer buttons in different colors to try the controlled servo and direction: **the white button to control the Servo 4, the yellow to Servo 3, the orange to Servo 2, and the red one to control Servo 1.**

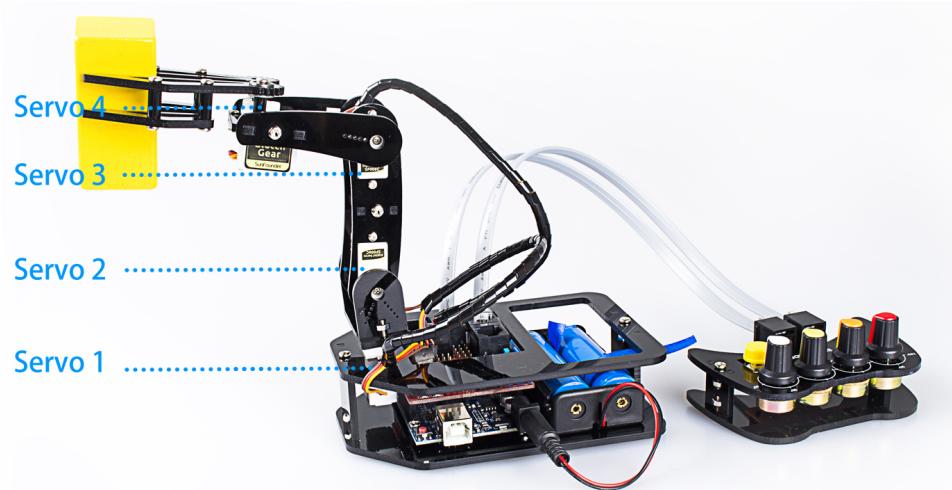

6.2 Automatic Control


With the handle, the Rollarm can record its behaviors:

Rotate one potentiometer button to control one servo to the desired position, and press the yellow button shortly to let the control board record this step. Record the rest steps in this way.

When all the steps are done, press and hold the yellow button for a while (3s). So it will repeat the recorded steps (Rollarm can record at most 100 steps because of the control board's memory limit).



Thus we can make it automatically carry blocks continuously:

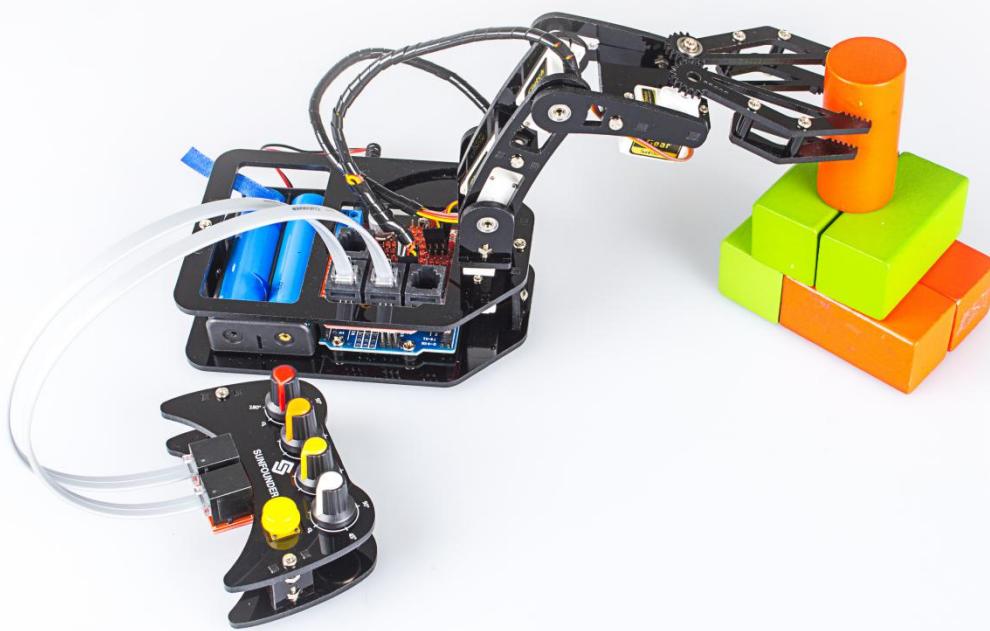

6.3 Code Explanation

The program includes three parts: rotating the potentiometers to control the Rollarm, pressing the button slightly for less than one second to record Rollarm's behaviors and pressing the button for a relatively longer time to make Rollarm repeat the recorded steps.

There are four potentiometers to control the arms. The 4 servos from top to bottom are connected to port 4-7 respectively of the expansion board, and the 4 potentiometers control the ports accordingly. In other words, spin the white potentiometer to control the uppermost servo, the yellow to control the next servo below, the orange to control the next servo, and the red one to control the bottom servo.

Since the Rollarm has four servos acting as the moving joint, we need to include a header file for driving the servos and define them.

```
// Create servo object to control a servo.
#include <Servo.h>

Servo Servo_0;
Servo Servo_1;
Servo Servo_2;
Servo Servo_3;
```

After defining the function of driving the servos, we need to read the AD value of the potentiometers and convert it into the rotating angle of the servo since the servos are controlled by rotating the potentiometers.

```
//Read the values of the potentiometers.
void ReadPot()
{
    SensVal[0] = 0;
    SensVal[1] = 0;
    SensVal[2] = 0;
    SensVal[3] = 0;

    SensVal[0] = analogRead(A3);
    SensVal[1] = analogRead(A2);
    SensVal[2] = analogRead(A1);
    SensVal[3] = analogRead(A0);
}

//The value of the potentiometer is matched to the angle value.
void Mapping0()
{
    SensVal[0] = map(SensVal[0], 0, 1023, 10, 170);
    SensVal[1] = map(SensVal[1], 0, 1023, 10, 170);
    SensVal[2] = map(SensVal[2], 0, 1023, 10, 170);
    SensVal[3] = map(SensVal[3], 0, 1023, 100, 175);
}
```

After compiling the program, we need to make Rollarm remember the steps, which is done through pressing the button.

```
//Calculate the time the button pressed
void Button()
{
    if (digitalRead(3) == 0)
    {
        delay(10);
        if (digitalRead(3) == 0)
        {
            KeyValue = 0;
            while (!digitalRead(3))
            {
                KeyValue++;
                delay(100);
            }
        }
    }
}
```

We can tell which part of the code the Rollarm is performing by reading the value upon pressing the button. When the value is larger than 10, it means Rollarm is repeating the steps. When it is between 0 and 10, it means Rollarm is remembering. And when it is 0, it means Rollarm is being controlled by the potentiometers. The specific program is as follows:

```
//Check the button.
static int Flag = 1;
Button();

//The time of pressing the button is not long then record the action.
if ((KeyValue < 10) && (KeyValue > 0))
{
    KeyValue = 0;
    Record();
```

```

        Mapping1();
    }
//Long press the button and open the auto mode ,start repeating the action.
else if (KeyValue > 10)
{
    if (Flag == 1)
    {
        Flag = 0;
        Calculate();
    }
    Drive_init();
    delay(3000);
    for (int i = 1; i < Time; i++)
    {
        Drive_repeat(i);
        delay(500);
    }
}
//Did not press the button , open the manual mode.
else
{
    ReadPot();
    Mapping0();
}

```

Next, we are going to call the function to write the value of the servo rotating angle. However, it is not merely about writing the values directly; the difference between two adjacent rotating values will also be written into the servos. Here we take a servo program for example.

```

//The first axis.
if (Dif0[n] > 0)
{
    for (int j = Joint0[n - 1]; j <= Joint0[n]; j++)
    {
        Servo_0.write(j);
        delay(10);
    }
}
else
{
    for (int j = Joint0[n - 1]; j >= Joint0[n]; j--)
    {
        Servo_0.write(j);
        delay(10);
    }
}

```

6.4 PC Control (by Labview)


6.4.1 Installing Labview Software

For this kit, we use the Labview software for control on PC. If you have other better options, welcome to share by post under **FORUM** on our website www.sunfounder.com.


Download the Labview package in the link below:

<https://s3.amazonaws.com/sunfounder/Arduino/Labview.zip>


After downloading, unzip and open it. If you haven't installed the **Labview Runtime**, you can get into the **Labview\Rollarm Project\Rollarm Installer** folder, install the setup file:

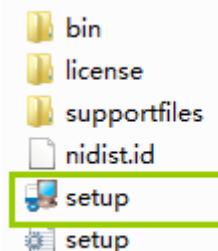

If you have installed the **Labview Runtime**, you can just get into the **Labview\Rollarm Project\Rollarm** folder, double click the Rollarm file:

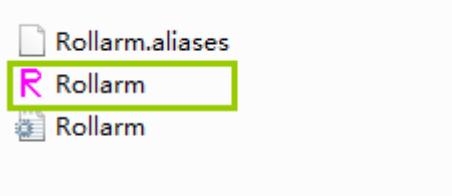


The following interface will show up.

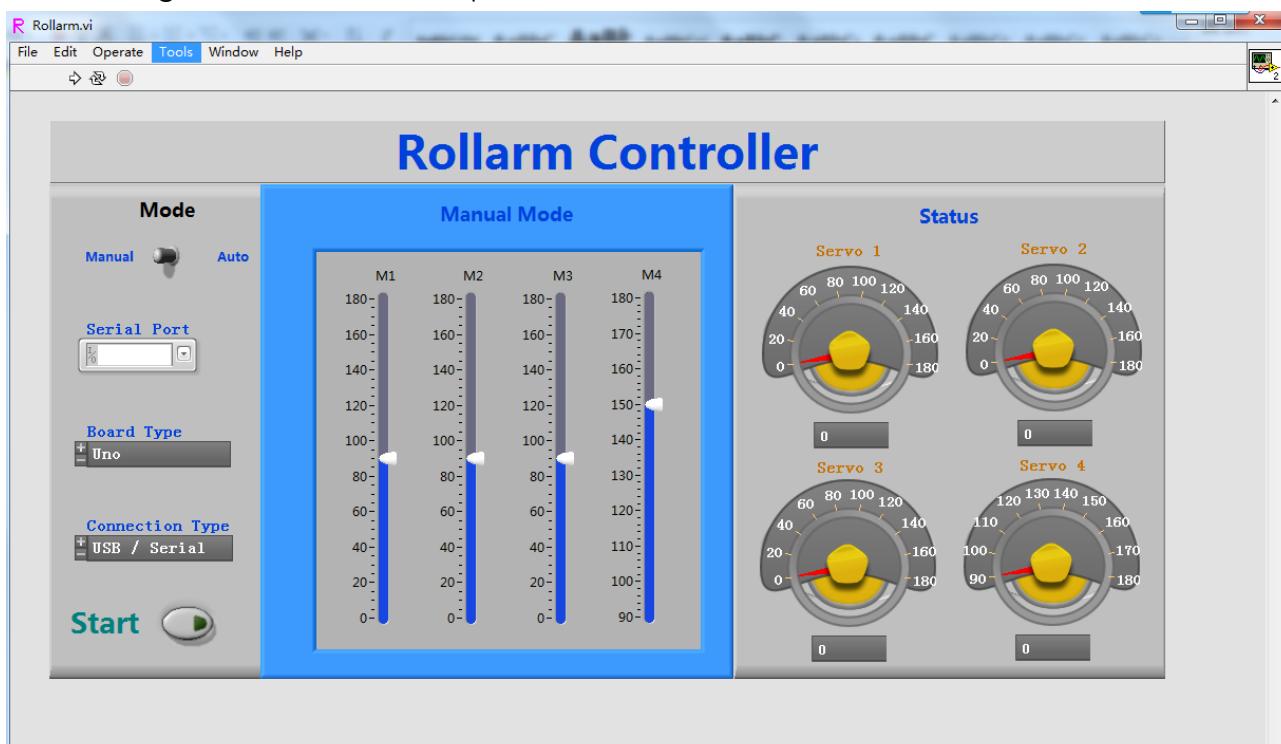

6.4.2 Running the Labview


Before running the software on the computer, we should install a driving program into Arduino. Open the folder **LIFA_Base** under path *DIY Control Robot Arm kit for Arduino-Rollarm\Arduino Code*

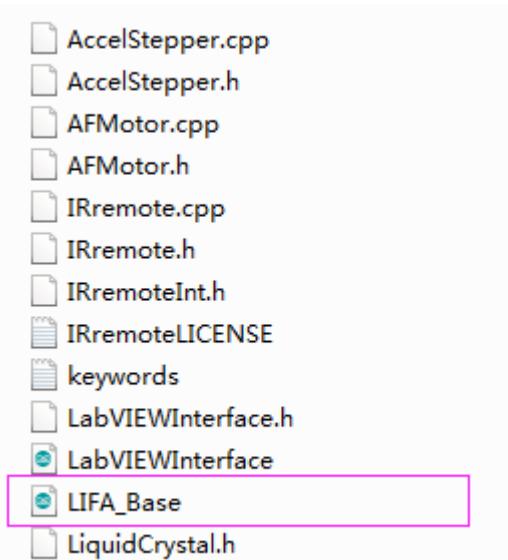

Open the file **LIFA_Base.ino**. Upload the sketch to the Arduino. DO NOT unplug the USB cable at the moment. Open the software, which includes two parts: **manual** control and **automatic** control.


1) Manual Mode

- a) See the interface of manual control below. After the Labview is installed and run, this mode is enabled by default.

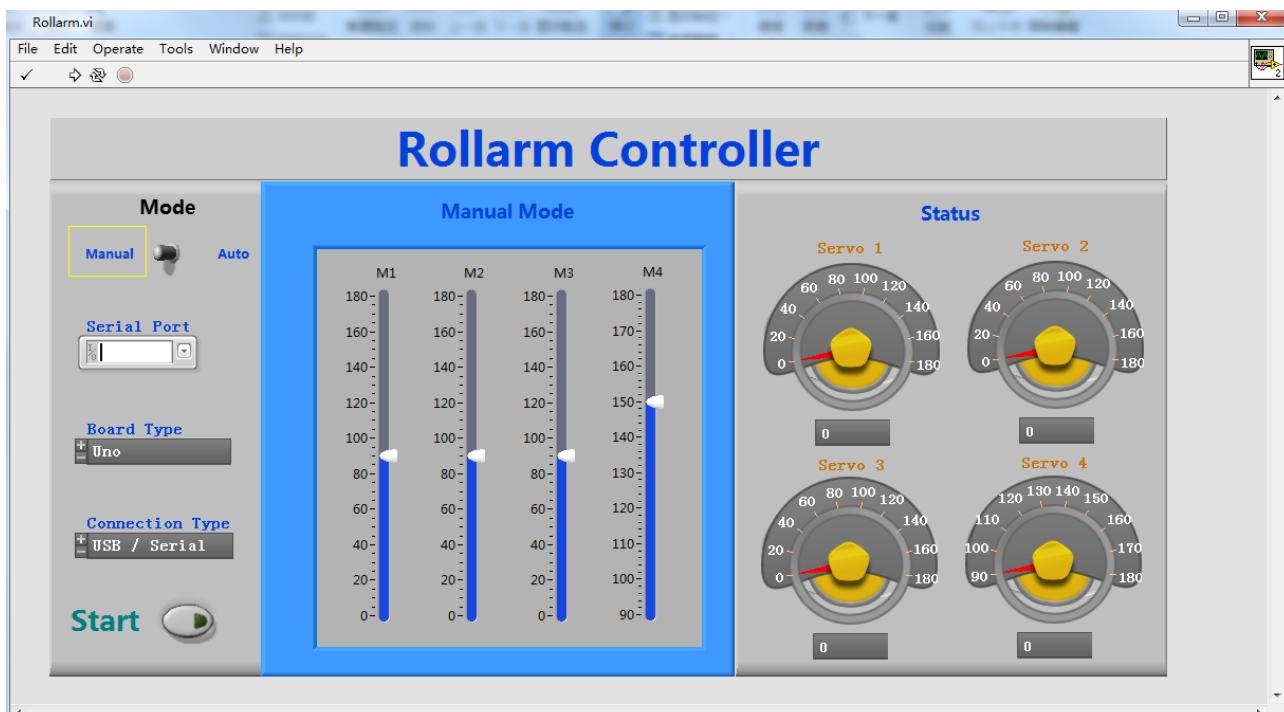


- b) Click the menu downlist icon for **Serial Port**, select the port according to your COM port.


Here is COM1, which varies for different computers.

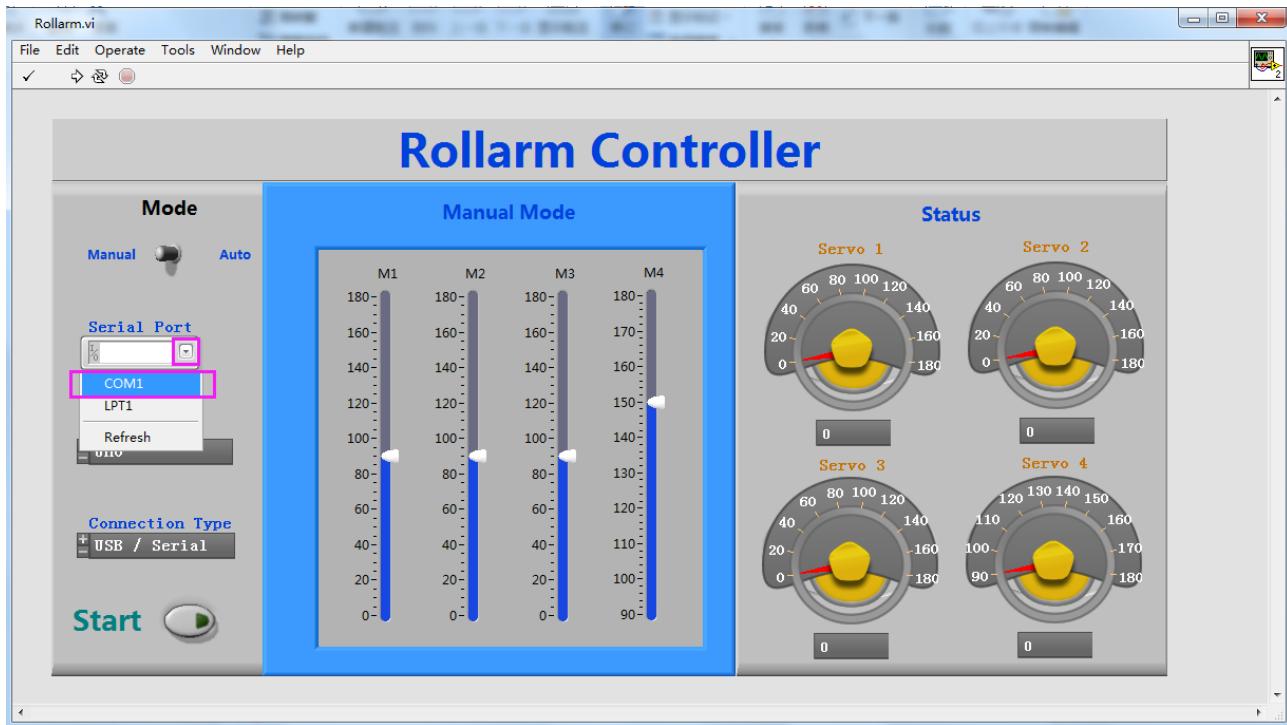

The interface is as follows:

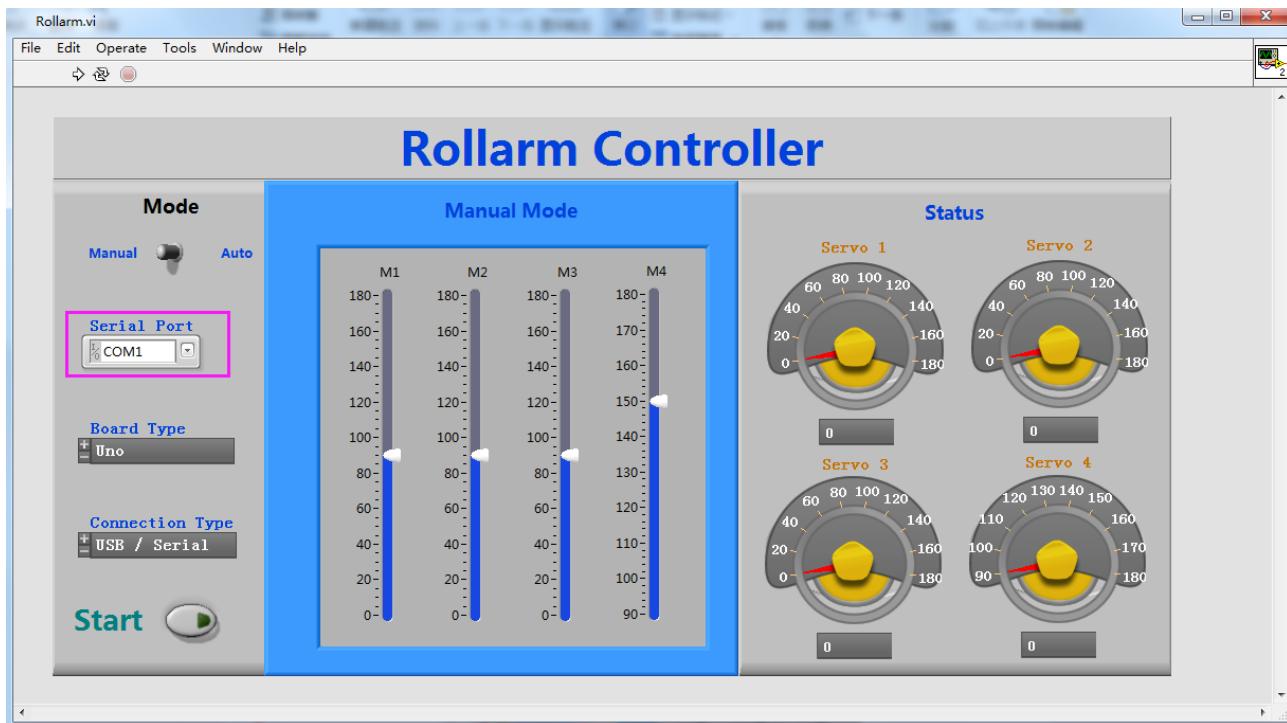


If such an icon appears before the port, it indicates something goes wrong with the port:

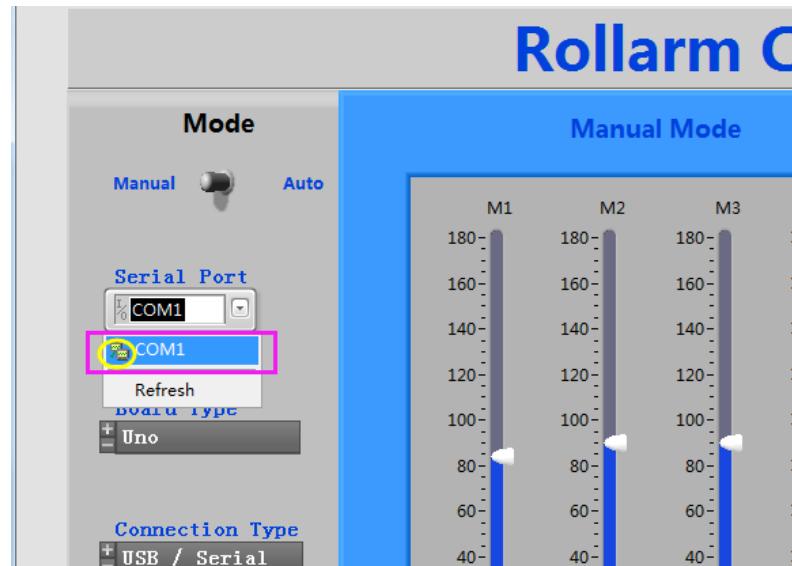


To solve the problem, just replug the USB cable. Then start from sketch upload again.


Select the **Board Type** and **Connection Type**, here we take Uno and USB connection type as an example:

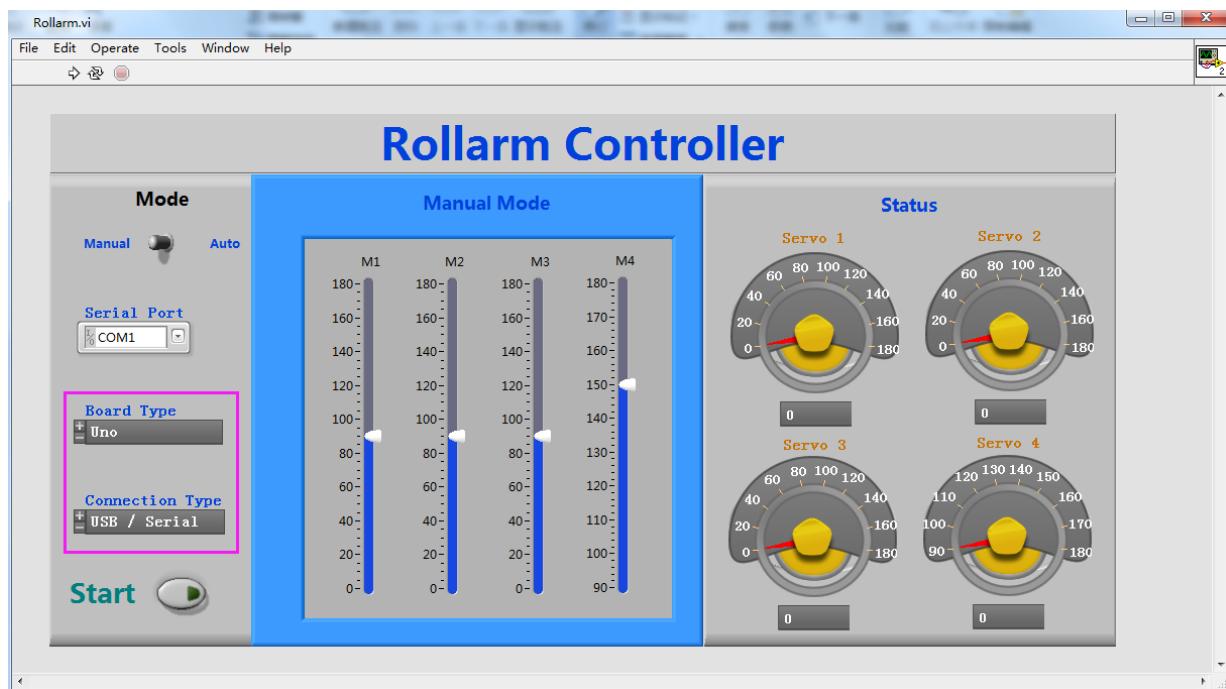


c) There are **three** small icons at the top left. Click the middle one to run the software.

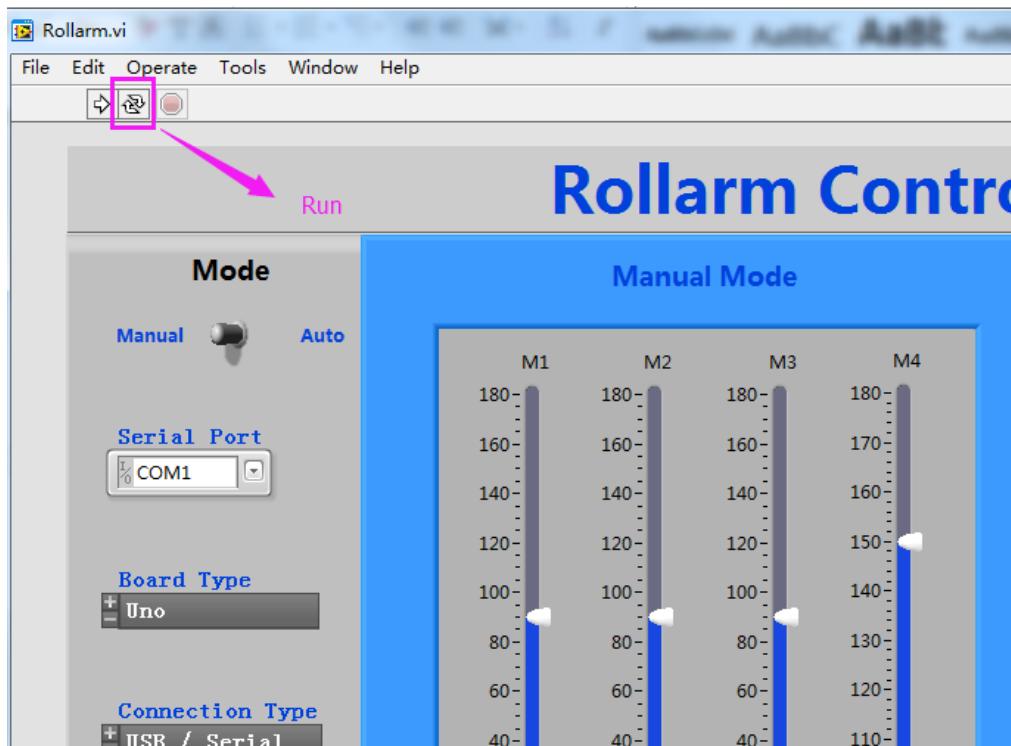


Then the three icons will change to the state below:

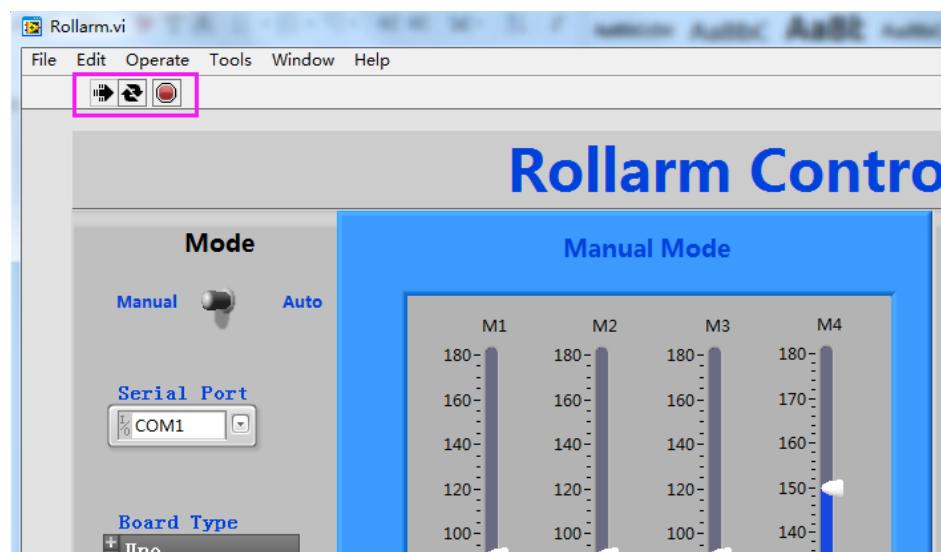

The initial position of the four axes is respectively set to 90° , 90° , 90° , and 150° from bottom to top, so the corresponding servos should be like as shown below:

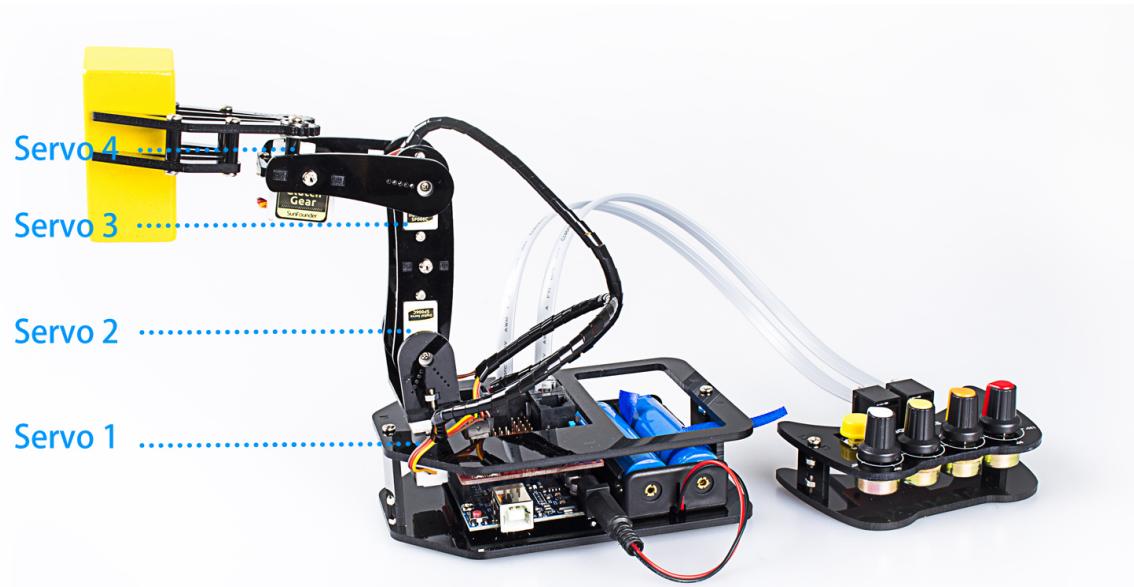


d) Click **Start**, and the button will change from dark to light green, as shown below:

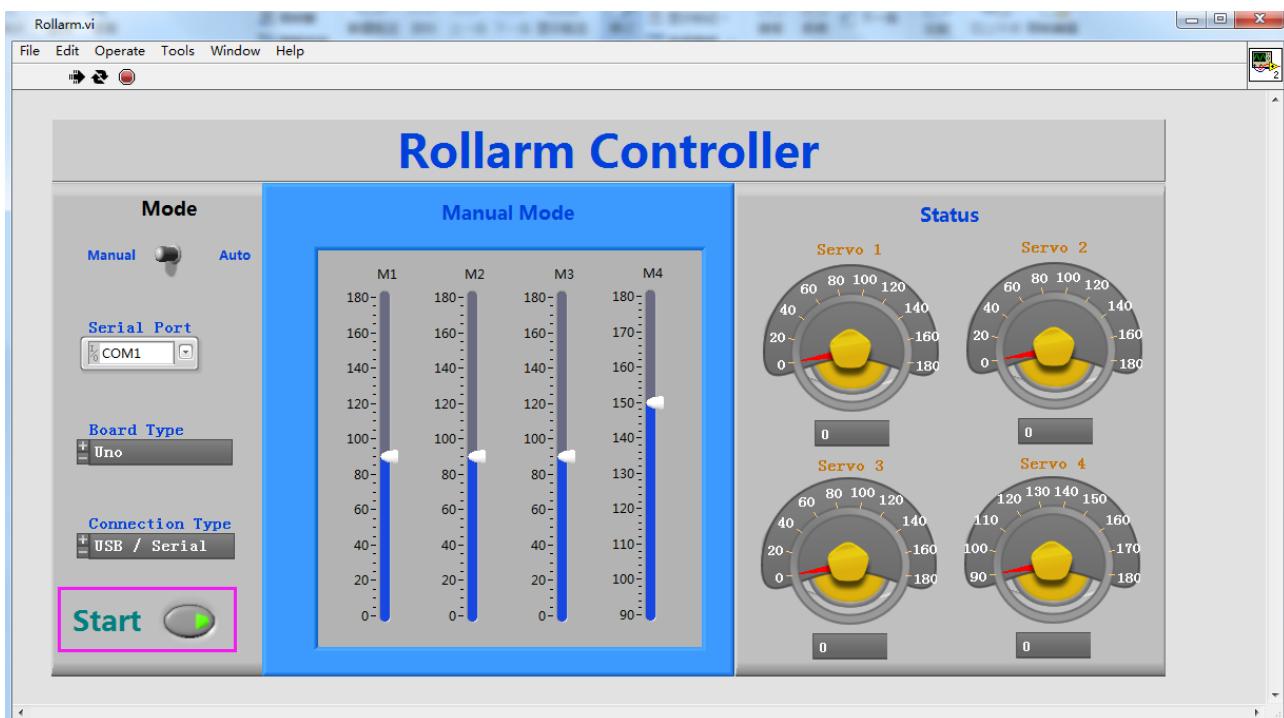


You can move the slider on the window to control the Rollarm. On the right, there are 4 dashboards, 1, 2, 3 and 4, which correspond to the four servos respectively from bottom up.

2) Automatic Mode

You can also switch between manual control and automatic control through the rocker switch between **Manual** and **Auto**. To switch to the automatic control, you need to click the **Start** button to disable it and the following interface will appear.

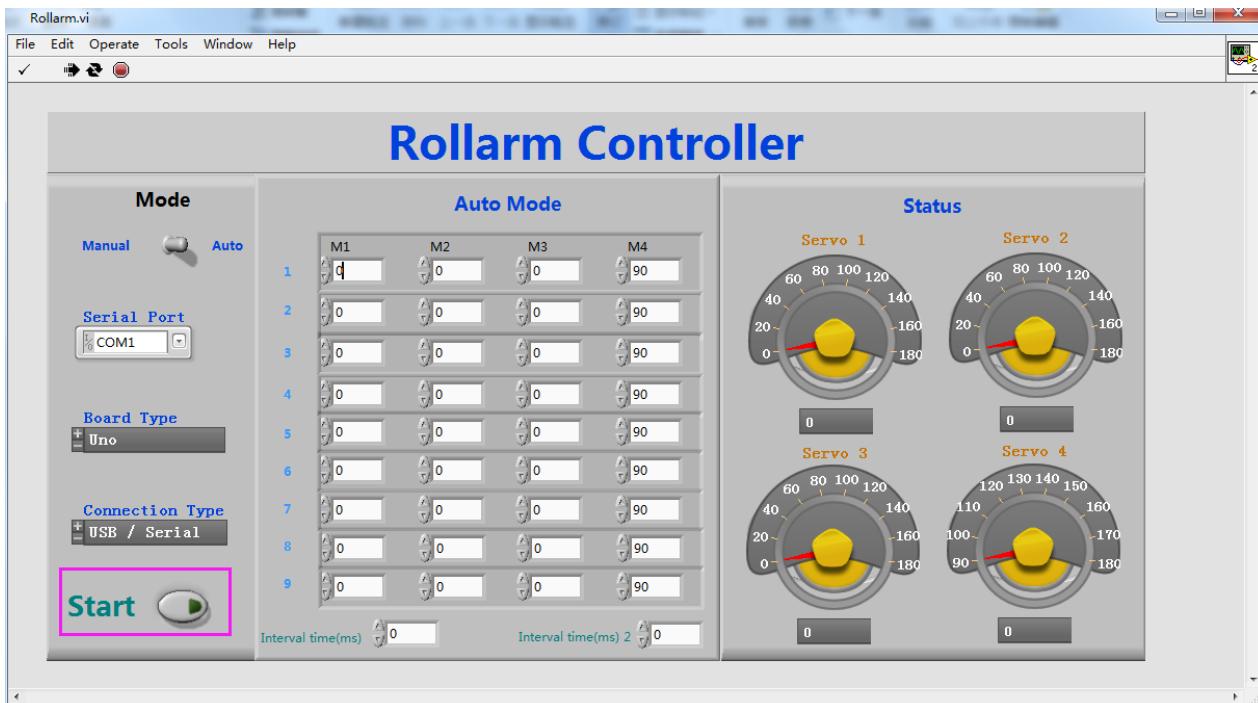

Fill the value of the rotating angle of the servos into the table under **Auto Mode** one by one. Enter the interval time below the table. The first interval time refers to the time between setting the rotating angles of two groups, each row considered as a group. The interval time on the right refers to the one between setting the two adjacent rotating angles within a group. After filling the figures, click the **Start** button.

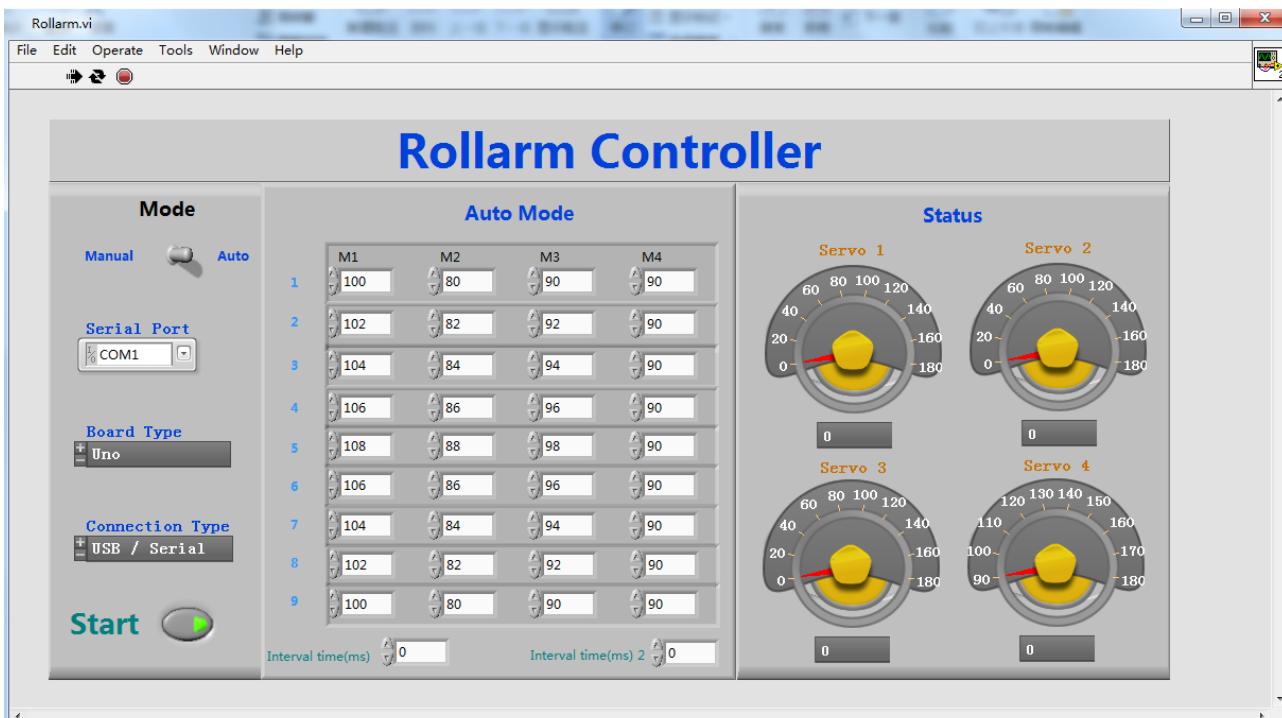

Rollarm will then perform as you just set. **Note** that the range of the data for **Mode 4** is 90~180. Otherwise, it will be stuck and damaged.

FAQ

1) About the assembly:

Q1: After assembly and program download, the Rollarm's four axes are in wired position, some may be out of control. What should I do?

A: Remember to power on and calibrate each servo before assembly.

Q2: When I mount the rocker arm, the acrylic plate cracks.

A: When you fasten the rocker arm with the screws, do not over tighten them forcefully.


2) About the Arduino code control:

Q1: When I open a program, it prompts me that a new folder should be created. After I click **Yes** and a new folder is created, the main program reports an error when I want to open the main program. What's going wrong?


A1: DO NOT open these subprograms under *Arduino Code \Rollarm* separately:




If you open the subprograms separately, a dialog box will pop up like this:

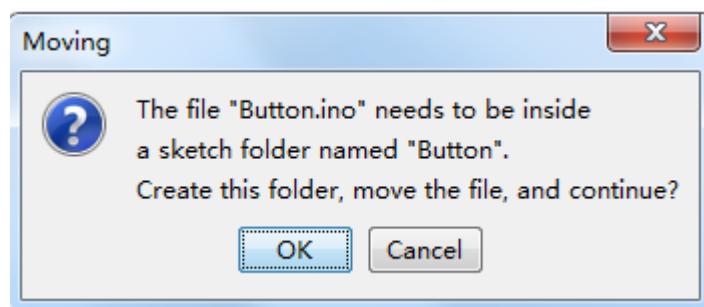

If a new folder has been created for the subprogram, please cut the subprogram file to the original directory *Arduino Code \Rollarm*. Reopen the main program:

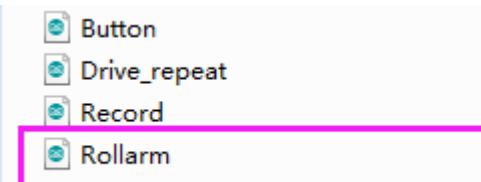

Then you can see the subprograms have been opened too:

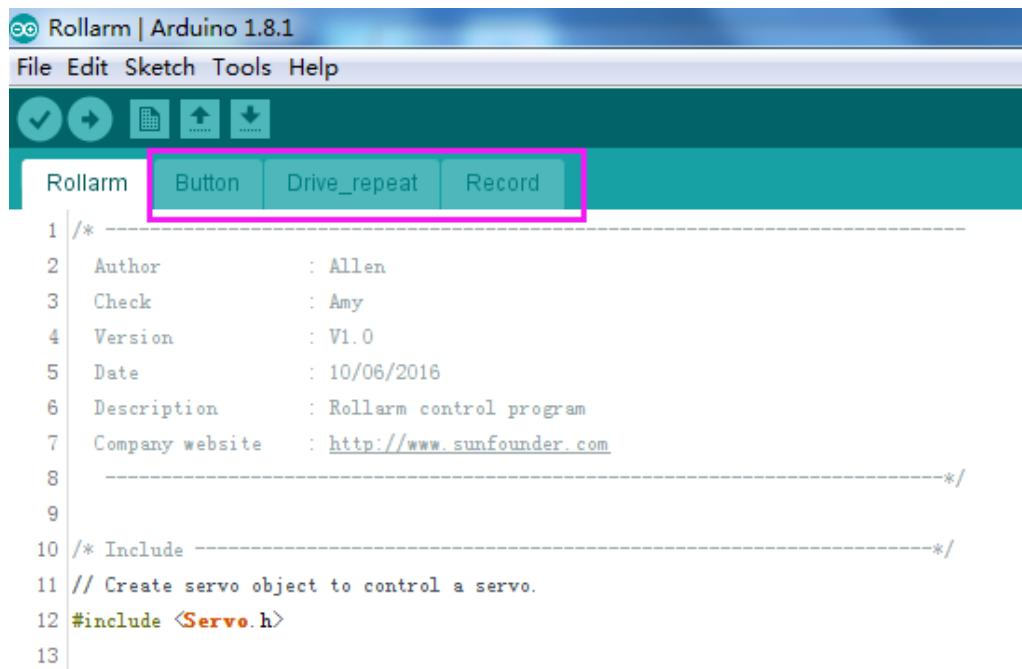

```


1  /*
2   Author      : Allen
3   Check       : Amy
4   Version     : V1.0
5   Date        : 10/06/2016
6   Description  : Rollarm control program
7   Company website : http://www.sunfounder.com
8   -----
9
10 /* Include -----
11 // Create servo object to control a servo.
12 #include <Servo.h>
13

```

3) About the Labview software control:

Q1: After powering on the Rollarm, why do the servos shake a little when there's no movement at all?


A: There may be something wrong with the Serial Port. For instance, the following condition may appear:

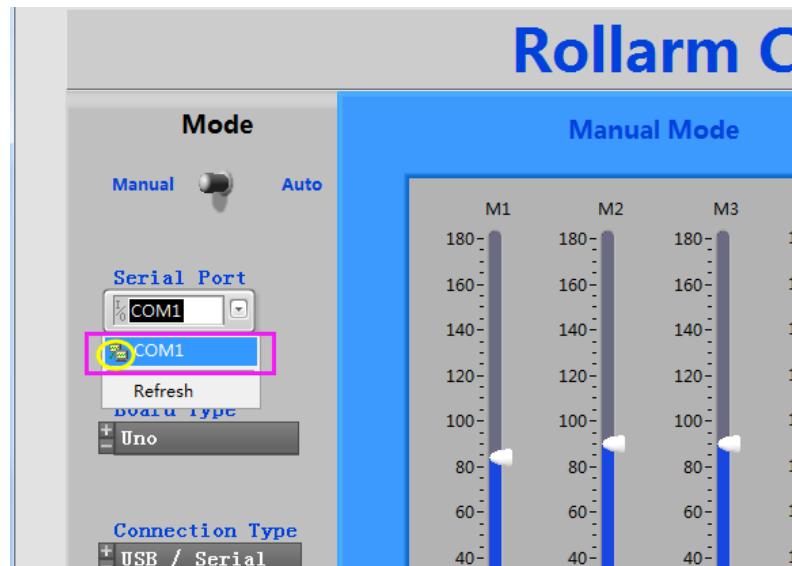

Turn off the Rollarm, power it on again, and reconnect the serial port to try.

Q2: The Rollarm is in a strange position when I click **Start** and it's in the automatic mode. Anything wrong?

A: Here no value is filled in the table yet. The first three axes are in 0°, and the last one is in 90°. You need to fill the correct value of the rotating angle first, and click **Start** to run.

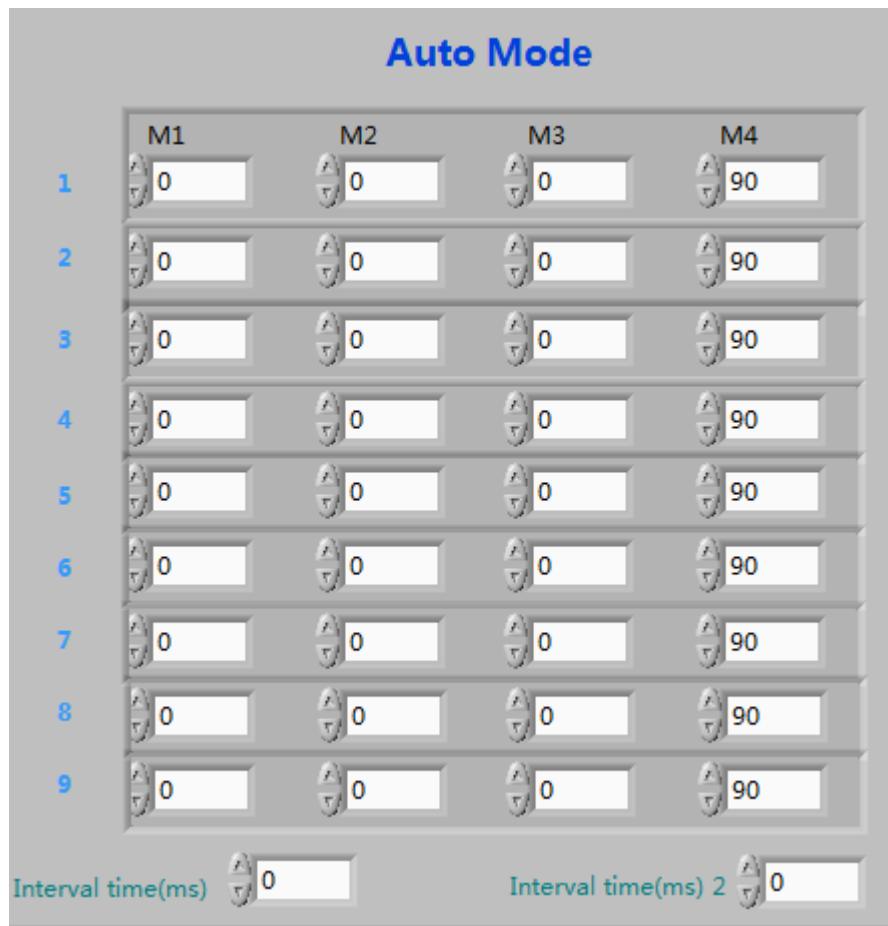

Before clicking **Start**, you need to fill in the rotating angle for each axis in different steps, and the interval time between steps. If you don't know the exact angle, you can shift to the manual mode and note down the angle values for each step, and then shift back to fill in. When all the steps above are done, you can click **Start** to let Rollarm perform the automatic control.

Copyright Notice

All contents including but not limited to texts, images, and code in this manual are owned by the SunFounder Company. You should only use it for personal study, investigation, enjoyment, or other non-commercial or nonprofit purposes, under the related regulations and copyrights laws, without infringing the legal rights of the author and relevant right holders. For any individual or organization that uses these for commercial profit without permission, the Company reserves the right to take legal action.