

Copyright © 2009-2012, Lukas F. Reichlin lukas.reichlin@gmail.com This manual is generated automatically from the texinfo help strings of the package's functions. Permission is granted to make and distribute verbatim copies of this manual provided the copyright notice and this permission notice are preserved on all copies. Permission is granted to copy and distribute modified versions of this manual under the conditions for verbatim copying, provided that the entire resulting derived work is distributed under

Permission is granted to copy and distribute translations of this manual into another language,

the terms of a permission notice identical to this one.

under the same conditions as for modified versions.

Table of Contents

Р	reta	ace	1
	Ack	nowledgments	. 1
		ng the help function	
	Bug	s!	. 1
	_	ribution	
1	E	xamples	3
_			
	1.1	MDSSystem	
	1.2	optiPID	
	1.3	Anderson	
	1.4	Madievski	. პ
2	${f L}$	inear Time Invariant Models	4
	2.1	dss	. 4
	2.2	filt	. 4
	2.3	frd	
	2.4	SS	
	2.5	tf	. 7
	2.6	zpk	. 8
3	T . /	Iodel Data Access	10
J			
	3.1	@lti/dssdata	
	3.2	@lti/filtdata	
	3.3	@lti/frdata	
	3.4	@lti/get	
	3.5	@lti/set	
	$\frac{3.6}{3.7}$	@lti/ssdata@lti/tfdata	
	3.8	@lti/zpkdata	
	3.0	©Iti/zpkdata	14
4	\mathbf{N}	Model Conversions	
	4.1	@lti/c2d	13
	4.2	@lti/d2c	13
	4.3	@lti/prescale	13
	4.4	@lti/xperm	14
5	\mathbf{N}	Iodel Interconnections	15
•			
	5.1	@lti/append	
	5.2	@lti/blkdiag	
	5.3		15 15
	$5.4 \\ 5.5$	@lti/feedback	
	5.6	@lti/lft @lti/mconnect	10 17
	$5.0 \\ 5.7$	©lti/parallel	
	5.8	©lti/series	
	0.0	©101/ DO11OD	10

6	\mathbf{M}	Iodel Characteristics	19
	6.1	ctrb	. 19
	6.2	ctrbf	
	6.3	@lti/dcgain	
	6.4	gram	
	6.5	hsvd	. 20
	6.6	@lti/isct	
	6.7	isctrb	
	6.8	isdetectable	. 21
	6.9	@lti/isdt	. 21
	6.10	@lti/isminimumphase	
	6.11	isobsv	
	6.12	@lti/issiso	
	6.13	isstabilizable	. 23
	6.14	@lti/isstable	
	6.15	@lti/norm	
	6.16	obsv	
	6.17	obsvf	
	6.18	@lti/pole	
	6.19	pzmap	
	6.20	@lti/size	
	6.21	@lti/zero	
_	7. /		0.7
7	IVI	Iodel Simplification	
	7.1	@lti/minreal	
	7.2	@lti/sminreal	. 27
8	$\mathbf{T}^{:}$	ime Domain Analysis	28
Ü		•	
	8.1	covar	
	8.2	gensig	
	8.3	impulse	
	8.4	initial	
	8.5	lsim	
	8.6	step	. 31
9	\mathbf{Fr}	requency Domain Analysis	32
	9.1	bode	
	9.2	bodemag	
	9.3	@lti/freqresp	
	9.4	margin	
	9.5	nichols	
	9.6	nyquist	
	9.7	sensitivity	
	9.7	sigma	
10		Pole Placement	
Τ.			
	10.1	place	
	10.2	rlocus	30

11 L	inear-Quadratic Control 4	
11.1	dlqe	40
11.2	dlqr	41
11.3	estim	41
11.4	kalman	42
11.5	lqe	43
11.6	lqr	
12 R	Robust Control	45
12.1	augw	45
12.2	fitfrd	
12.3	h2syn	
12.4	hinfsyn	
12.5	mixsyn	
12.6	ncfsyn	
13 N	Iatrix Equation Solvers !	52
13.1	care	
13.1 13.2	dare	
13.3	dlyap	
13.4	dlyapchol	
13.5	lyap	
13.6	lyapchol	55
14 N	Model Reduction	56
14.1	bstmodred	56
14.2	btamodred	58
14.3	hnamodred	60
14.4	spamodred	62
15 C	Controller Reduction	36
	btaconred	
$15.1 \\ 15.2$	cfconred.	
15.2 15.3	fwcfconred	
15.3 15.4	spaconred	
10.1	spaconica	• •
16 E	experimental Data Handling	73
16.1	iddata	73
16.2	@iddata/cat	74
16.3	@iddata/detrend	74
16.4		74
16.5		74
16.6	@iddata/filter	
16.7	@iddata/get	
16.8	@iddata/ifft	
16.9	@iddata/merge	
16.9 16.10	, =	
16.10 16.11	@iddata/plot	
16.11 16.12	, =	
16.12 16.13	@iddata/resample @iddata/set	
16.13 16.14		
10.14	uuata/Size	11

17	System Identification	78
17.1	arx	. 78
17.2		
17.3	8 moesp	. 81
17.4	l n4sid	. 83
18	Overloaded LTI Operators	85
18.1	@lti/ctranspose	85
18.2	2 @lti/horzcat	85
18.3	3 @lti/inv	. 85
18.4	l @lti/minus	. 85
18.5	6 @lti/mldivide	. 85
18.6	6 @lti/mpower	. 85
18.7	7 @lti/mrdivide	. 85
18.8	8 @lti/mtimes	. 85
18.9	0 @lti/plus	. 85
18.1	0 @lti/subsasgn	. 85
18.1	1 @lti/subsref	. 86
18.1	2 @lti/transpose	. 86
18.1	3 @lti/uminus	. 86
18.1	4 @lti/uplus	. 86
18.1	5 @lti/vertcat	. 86
10	Ossanla a da d IDD ATA Ossana kana	07
	Overloaded IDDATA Operators	
19.1		
19.2	, 0	
19.3		
19.4	l @iddata/vertcat	. 87
20	Miscellaneous	22
20.1	1	
20.2	1	
20.3		
20.4	0	
20.5	9	
20.6	6 WestlandLynx	. 90
App	endix A GNU General Public License	91
Func	tion Index 1	01

Preface 1

Preface

The GNU Octave control package from version 2 onwards was developed by Lukas F. Reichlin and is based on the proven open-source library SLICOT. This new package is intended as a replacement for control-1.0.11 by A. Scottedward Hodel and his students. Its main features are:

- Reliable solvers for Lyapunov, Sylvester and algebraic Riccati equations.
- Pole placement techniques as well as H_2 and H_∞ synthesis methods.
- Frequency-weighted model and controller reduction.
- System identification by subspace methods.
- Overloaded operators due to the use of classes introduced with Octave 3.2.
- Support for descriptor state-space models and non-proper transfer functions.
- Improved MATLAB compatibility.

Acknowledgments

The author is indebted to several people and institutions who helped him to achieve his goals. I am particularly grateful to Luca Favatella who introduced me to Octave development as well as discussed and revised my early draft code with great patience. My continued support from the FHNW University of Applied Sciences Northwestern Switzerland, where I could work on the control package as a semester project, has also been important. Furthermore, I thank the SLICOT authors Peter Benner, Vasile Sima and Andras Varga for their advice. Finally, I appreciate the feedback, bug reports and patches I have received from various people. The names of all contributors should be listed in the NEWS file.

Using the help function

Some functions of the control package are listed with the somewhat cryptic prefixes <code>@lti/</code> or <code>@iddata/</code>. These prefixes are only needed to view the help text of the function, e.g. help norm shows the built-in function while help <code>@lti/norm</code> shows the overloaded function for LTI systems. Note that there are LTI functions like pole that have no built-in equivalent. The same is true for IDDATA functions like nkshift.

When just using the function, the leading <code>@lti/</code> must **not** be typed. Octave selects the right function automatically. So one can type <code>norm</code> (sys, inf) and <code>norm</code> (matrix, inf) regardless of the class of the argument.

Bugs!

To err is human, and software is written by humans. Therefore, any larger piece of software is likely to contain bugs. If you find a bug in the control package, please take the time to report your findings! Feedback of any kind is highly appreciated by the author and vital for further enhancement of the software. Bug reports are to be sent to the Octave bug tracker, the mailing lists or directly to the author's e-mail: lukas.reichlin@gmail.com

2 Preface

Distribution

The GNU Octave control package is free software. This means that everyone is free to use it and free to redistribute it on certain conditions. The GNU Octave control package is not, however, in the public domain. It is copyrighted and there are restrictions on its distribution, but the restrictions are designed to ensure that others will have the same freedom to use and redistribute Octave that you have. The precise conditions can be found in the GNU General Public License that comes with the GNU Octave control package and that also appears in Appendix A [Copying], page 91.

To download a copy of control, please visit http://octave.sourceforge.net/control/.

1 Examples

1.1 MDSSystem

Robust control of a mass-damper-spring system. Type which MDSSystem to locate, edit MDSSystem to open and simply MDSSystem to run the example file.

1.2 optiPID

Numerical optimization of a PID controller using an objective function. The objective function is located in the file optiPIDfun. Type which optiPID to locate, edit optiPID to open and simply optiPID to run the example file.

1.3 Anderson

Frequency-weighted coprime factorization controller reduction.

1.4 Madievski

Frequency-weighted controller reduction.

2 Linear Time Invariant Models

2.1 dss

```
sys = dss (sys) [Function File]

sys = dss (d) [Function File]

sys = dss (a, b, c, d, e, ...) [Function File]

sys = dss (a, b, c, d, e, tsam, ...) [Function File]

Create or convert to descriptor state-space model.
```

Inputs

sys LTI model to be converted to state-space.

a State transition matrix (n-by-n).

b Input matrix (n-by-m).

c Measurement matrix (p-by-n).

d Feedthrough matrix (p-by-m).

e Descriptor matrix (n-by-n).

tsam Sampling time in seconds. If tsam is not specified, a continuous-time model is

assumed.

... Optional pairs of properties and values. Type set (dss) for more information.

Outputs

sys Descriptor state-space model.

Equations

$$E x = A x + B u$$
$$y = C x + D u$$

See also: ss, tf.

2.2 filt

```
sys = filt (num, den, ...) [Function File] sys = filt (num, den, tsam, ...)
```

Create discrete-time transfer function model from data in DSP format.

Inputs

num Numerator or cell of numerators. Each numerator must be a row vector containing the coefficients of the polynomial in ascending powers of z^-1. num{i,j} contains the numerator polynomial from input j to output i. In the SISO case, a single vector is accepted as well.

den Denominator or cell of denominators. Each denominator must be a row vector containing the coefficients of the polynomial in ascending powers of z^-1. den{i,j} contains the denominator polynomial from input j to output i. In the SISO case, a single vector is accepted as well.

tsam Sampling time in seconds. If tsam is not specified, default value -1 (unspecified) is taken.

... Optional pairs of properties and values. Type set (filt) for more information.

Outputs

sys Discrete-time transfer function model.

Example

Transfer function 'H' from input 'u1' to output ...

Sampling time: unspecified Discrete-time model.

See also: tf.

2.3 frd

sys = frd (sys) [Function File] sys = frd (sys, w) [Function File] sys = frd (H, w, ...) [Function File] sys = frd (H, w, tsam, ...)

Create or convert to frequency response data.

Inputs

sys LTI model to be converted to frequency response data. If second argument w is omitted, the interesting frequency range is calculated by the zeros and poles of sys.

H Frequency response array (p-by-m-by-lw). H(i,j,k) contains the response from input j to output i at frequency k. In the SISO case, a vector (lw-by-1) or (1-by-lw) is accepted as well.

w Frequency vector (lw-by-1) in radian per second [rad/s]. Frequencies must be in ascending order.

tsam Sampling time in seconds. If tsam is not specified, a continuous-time model is assumed.

... Optional pairs of properties and values. Type set (frd) for more information.

Outputs

sys Frequency response data object.

See also: dss, ss, tf.

2.4 ss

```
sys = ss (sys) [Function File]

sys = ss (d) [Function File]

sys = ss (a, b) [Function File]

sys = ss (a, b, c) [Function File]

sys = ss (a, b, c, d, ...) [Function File]

sys = ss (a, b, c, d, tsam, ...)
```

Create or convert to state-space model.

Inputs

sys LTI model to be converted to state-space.

a State transition matrix (n-by-n).

b Input matrix (n-by-m).

c Measurement matrix (p-by-n). If c is empty [] or not specified, an identity matrix is assumed.

d Feedthrough matrix (p-by-m). If d is empty [] or not specified, a zero matrix is assumed.

tsam Sampling time in seconds. If tsam is not specified, a continuous-time model is assumed.

... Optional pairs of properties and values. Type set (ss) for more information.

Outputs

sys State-space model.

Example

```
octave:1> a = [1 \ 2 \ 3; \ 4 \ 5 \ 6; \ 7 \ 8 \ 9];
octave:2> b = [10; 11; 12];
octave:3> stname = {"V", "A", "kJ"};
octave:4> sys = ss (a, b, [], [], "stname", stname)
sys.a =
        ٧
             Α
               kJ
   V
             2
                  3
         1
             5
                  6
   Α
             8
   kJ
        7
                  9
```

Continuous-time model.
octave:5>

See also: tf, dss.

2.5 tf

Create or convert to transfer function model.

Inputs

sys LTI model to be converted to transfer function.

num Numerator or cell of numerators. Each numerator must be a row vector containing the coefficients of the polynomial in descending powers of the transfer function variable. num{i,j} contains the numerator polynomial from input j to output i. In the SISO case, a single vector is accepted as well.

den Denominator or cell of denominators. Each denominator must be a row vector containing the coefficients of the polynomial in descending powers of the transfer function variable. den{i,j} contains the denominator polynomial from input j to output i. In the SISO case, a single vector is accepted as well.

tsam Sampling time in seconds. If tsam is not specified, a continuous-time model is assumed.

... Optional pairs of properties and values. Type set (tf) for more information.

Outputs

sys Transfer function model.

Example

octave:1>
$$s = tf ("s");$$

octave:2> $G = 1/(s+1)$

Transfer function "G" from input "u1" to output ...

Continuous-time model.

octave:3>
$$z = tf ("z", 0.2);$$

octave:4> $H = 0.095/(z-0.9)$

Transfer function "H" from input "u1" to output ...

Sampling time: 0.2 s Discrete-time model.

Transfer function "sys" from input "u1" to output ...

Transfer function "sys" from input "u2" to output ...

Continuous-time model. octave:8>

See also: ss, dss.

2.6 zpk

s = zpk ("s")	[Function File]
z = zpk ("z", tsam)	[Function File]
sys = zpk (sys)	[Function File]
sys = zpk (k)	[Function File]
sys = zpk (z, p, k,)	[Function File]
sys = zpk (z, p, k, tsam,)	[Function File]

sys = zpk (z, p, k, tsam, ...)

[Function File]

Create transfer function model from zero-pole-gain data. This is just a stop-gap compatibility wrapper since zpk models are not yet implemented.

Inputs

sys LTI model to be converted to transfer function.

z Cell of vectors containing the zeros for each channel. z{i,j} contains the zeros from input j to output i. In the SISO case, a single vector is accepted as well.

p Cell of vectors containing the poles for each channel. p{i,j} contains the poles from input j to output i. In the SISO case, a single vector is accepted as well.

k Matrix containing the gains for each channel. k(i,j) contains the gain from input j to output i.

tsam Sampling time in seconds. If tsam is not specified, a continuous-time model is assumed.

... Optional pairs of properties and values. Type set (tf) for more information.

Outputs

sys Transfer function model.

See also: tf, ss, dss, frd.

3 Model Data Access

3.1 @lti/dssdata

```
[a, b, c, d, e, tsam] = dssdata(sys) [Function File]
[a, b, c, d, e, tsam] = dssdata(sys, []) [Function File]
```

Access descriptor state-space model data. Argument sys is not limited to descriptor state-space models. If sys is not a descriptor state-space model, it is converted automatically.

Inputs

sys Any type of LTI model.

[] In case sys is not a dss model (descriptor matrix e empty), dssdata (sys, []) returns the empty element e = [] whereas dssdata (sys) returns the identity matrix e = eye (size (a)).

Outputs

a State transition matrix (n-by-n).

b Input matrix (n-by-m).

c Measurement matrix (p-by-n).

d Feedthrough matrix (p-by-m).

e Descriptor matrix (n-by-n).

tsam Sampling time in seconds. If sys is a continuous-time model, a zero is returned.

3.2 @lti/filtdata

```
[num, den, tsam] = filtdata (sys) [Function File]
[num, den, tsam] = filtdata (sys, "vector") [Function File]
```

Access discrete-time transfer function data in DSP format. Argument sys is not limited to transfer function models. If sys is not a transfer function, it is converted automatically.

Inputs

sys Any type of discrete-time LTI model.

"v", "vector"

For SISO models, return *num* and *den* directly as column vectors instead of cells containing a single column vector.

Outputs

num Cell of numerator(s). Each numerator is a row vector containing the coefficients of the polynomial in ascending powers of z^{-1} . num{i,j} contains the numerator polynomial from input j to output i. In the SISO case, a single vector is possible as well.

den Cell of denominator(s). Each denominator is a row vector containing the coefficients of the polynomial in ascending powers of z^-1. den{i,j} contains the denominator polynomial from input j to output i. In the SISO case, a single vector is possible as well.

tsam Sampling time in seconds. If tsam is not specified, -1 is returned.

3.3 @lti/frdata

```
[H, w, tsam] = frdata (sys) [Function File]
[H, w, tsam] = frdata (sys, "vector") [Function File]
```

Access frequency response data. Argument sys is not limited to frequency response data objects. If sys is not a frd object, it is converted automatically.

Inputs

sys Any type of LTI model.

"v", "vector"

In case sys is a SISO model, this option returns the frequency response as a column vector (lw-by-1) instead of an array (p-by-m-by-lw).

Outputs

H Frequency response array (p-by-m-by-lw). H(i,j,k) contains the response from input j to output i at frequency k. In the SISO case, a vector (lw-by-1) is possible as well.

w Frequency vector (lw-by-1) in radian per second [rad/s]. Frequencies are in ascending order.

tsam Sampling time in seconds. If sys is a continuous-time model, a zero is returned.

3.4 @lti/get

```
get (sys) [Function File]
value = get (sys, "property") [Function File]
Access property values of LTI objects.
```

3.5 @lti/set

```
set (sys) [Function File] set (sys, "property", value, ...) [Function File] retsys = set (sys, "property", value, ...) [Function File]
```

Set or modify properties of LTI objects. If no return argument *retsys* is specified, the modified LTI object is stored in input argument *sys.* set can handle multiple properties in one call: set (sys, 'prop1', val1, 'prop2', val2, 'prop3', val3). set (sys) prints a list of the object's property names.

3.6 @lti/ssdata

[a, b, c, d, tsam] = ssdata (sys)

[Function File]

Access state-space model data. Argument sys is not limited to state-space models. If sys is not a state-space model, it is converted automatically.

Inputs

sys Any type of LTI model.

Outputs

a State transition matrix (n-by-n).

b Input matrix (n-by-m).

c Measurement matrix (p-by-n).

d Feedthrough matrix (p-by-m).

tsam Sampling time in seconds. If sys is a continuous-time model, a zero is returned.

3.7 @lti/tfdata

```
[num, den, tsam] = tfdata (sys)
[num, den, tsam] = tfdata (sys, "vector")
[num, den, tsam] = tfdata (sys, "tfpoly")
[Function File]
[Function File]
```

Access transfer function data. Argument sys is not limited to transfer function models. If sys is not a transfer function, it is converted automatically.

Inputs

sys Any type of LTI model.

"v", "vector"

For SISO models, return *num* and *den* directly as column vectors instead of cells containing a single column vector.

Outputs

num

Cell of numerator(s). Each numerator is a row vector containing the coefficients of the polynomial in descending powers of the transfer function variable. num{i,j} contains the numerator polynomial from input j to output i. In the SISO case, a single vector is possible as well.

den

Cell of denominator(s). Each denominator is a row vector containing the coefficients of the polynomial in descending powers of the transfer function variable. den{i,j} contains the denominator polynomial from input j to output i. In the SISO case, a single vector is possible as well.

tsam

Sampling time in seconds. If sys is a continuous-time model, a zero is returned.

3.8 @lti/zpkdata

```
[z, p, k, tsam] = zpkdata (sys) [Function File] [z, p, k, tsam] = zpkdata (sys, "v") [Function File]
```

Access zero-pole-gain data.

Inputs

sys Any type of LTI model.

"v", "vector"

For SISO models, return z and p directly as column vectors instead of cells containing a single column vector.

Outputs

- z Cell of column vectors containing the zeros for each channel. $z\{i,j\}$ contains the zeros from input j to output i.
- P Cell of column vectors containing the poles for each channel. $p\{i,j\}$ contains the poles from input j to output i.
- k Matrix containing the gains for each channel. k(i,j) contains the gain from input j to output i.

tsam Sampling time in seconds. If sys is a continuous-time model, a zero is returned.

4 Model Conversions

4.1 @lti/c2d

Convert the continuous lti model into its discrete-time equivalent.

Inputs

sys Continuous-time LTI model.

tsam Sampling time in seconds.

method Optional conversion method. If not specified, default method "zoh" is taken.

"zoh" Zero-order hold or matrix exponential.

"tustin", "bilin"

Bilinear transformation or Tustin approximation.

"prewarp" Bilinear transformation with pre-warping at frequency w0.

Outputs

sys Discrete-time LTI model.

4.2 @lti/d2c

sys = d2c (sys)
sys = d2c (sys, method)
sys = d2c (sys, "prewarp", w0)
[Function File]
[Function File]

Convert the discrete lti model into its continuous-time equivalent.

Inputs

sys Discrete-time LTI model.

method Optional conversion method. If not specified, default method "zoh" is taken.

"zoh" Zero-order hold or matrix logarithm.

"tustin", "bilin"

Bilinear transformation or Tustin approximation.

"prewarp" Bilinear transformation with pre-warping at frequency w0.

Outputs

sys Continuous-time LTI model.

4.3 @lti/prescale

[scaledsys, info] = prescale (sys)

[Function File]

Prescale state-space model. Frequency response commands perform automatic scaling unless model property *scaled* is set to *true*.

Inputs

sys LTI model.

Outputs

scaledsys Scaled state-space model.

info Structure containing additional information.

info.SL Left scaling factors. Tl = diag (info.SL).

info.SR Right scaling factors. Tr = diag (info.SR).

Equations

For proper state-space models, Tl and Tr are inverse of each other.

Algorithm

Uses SLICOT TB01ID and TG01AD by courtesy of NICONET e.V..

4.4 @lti/xperm

sys = xperm (sys, st_idx)
Reorder states in state-space models.

[Function File]

5 Model Interconnections

5.1 @lti/append

sys = append (sys1, sys2) [Function File]
Group LTI models by appending their inputs and outputs.

5.2 @lti/blkdiag

```
sys = blkdiag (sys1, sys2) [Function File]
Block-diagonal concatenation of LTI models.
```

5.3 @lti/connect

```
sys = connect (sys, cm, inputs, outputs) [Function File]
Arbitrary interconnections between the inputs and outputs of an LTI model.
```

5.4 @lti/feedback

Inputs

sys1 LTI model of forward transmission. [p1, m1] = size (sys1).

sys2 LTI model of backward transmission. If not specified, an identity matrix of appropriate size is taken.

feedin Vector containing indices of inputs to sys1 which are involved in the feedback loop. The number of feedin indices and outputs of sys2 must be equal. If not specified, 1:m1 is taken.


feedout Vector containing indices of outputs from sys1 which are to be connected to sys2. The number of feedout indices and inputs of sys2 must be equal. If not specified, 1:p1 is taken.

"+" Positive feedback sign. If not specified, "-" for a negative feedback interconnection is assumed. +1 and -1 are possible as well, but only from the third argument onward due to ambiguity.

Outputs

sys Resulting LTI model.

Block Diagram

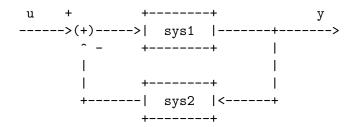

5.5 @lti/lft

sys = lft (sys1, sys2)[Function File] sys = lft (sys1, sys2, nu, ny)[Function File]

Linear fractional tranformation, also known as Redheffer star product.

Inputs

Upper LTI model. sys1

Lower LTI model. sys2

The last nu inputs of sys1 are connected with the first nu outputs of sys2. If not nu


specified, min (m1, p2) is taken.


nyThe last ny outputs of sys1 are connected with the first ny inputs of sys2. If not specified, min (p1, m2) is taken.

Outputs

Resulting LTI model. SYS

Block Diagram

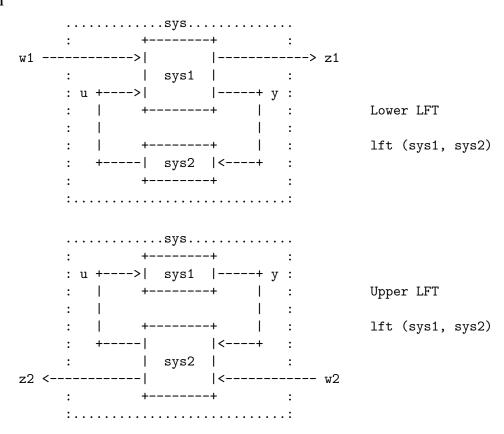

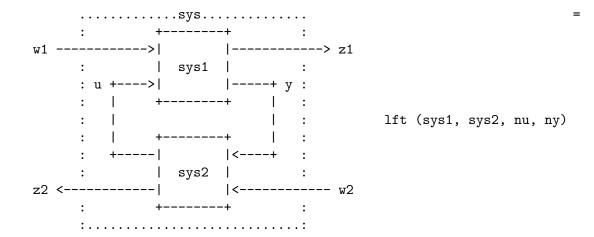

5.6 @lti/mconnect

sys = mconnect (sys, m)
sys = mconnect (sys, m, inputs, outputs)
[Function File]

Arbitrary interconnections between the inputs and outputs of an LTI model.

Inputs

sys LTI system.

m Connection matrix. Each row belongs to an input and each column represents an output.

inputs Vector of indices of those inputs which are retained. If not specified, all inputs are kept.

outputs Vector of indices of those outputs which are retained. If not specified, all outputs are kept.

Outputs

sys Interconnected system.

Example


5.7 @lti/parallel

sys = parallel (sys1, sys2)

[Function File]

Parallel connection of two LTI systems.

Block Diagram

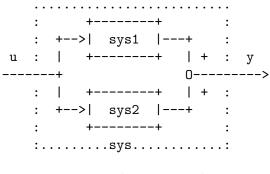


sys = parallel (sys1, sys2)

5.8 @lti/series


sys = series (sys1, sys2)
sys = series (sys1, sys2, outputs1, inputs2)
Series connection of two LTI models.

[Function File] [Function File]

Block Diagram



sys = series (sys1, sys2)

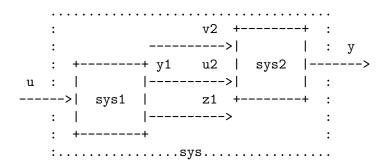

outputs1 = [1]
inputs2 = [2]
sys = series (sys1, sys2, outputs1, inputs2)

6 Model Characteristics

6.1 ctrb

co = ctrb (sys)co = ctrb (a, b) [Function File] [Function File]

Return controllability matrix.

Inputs

sys LTI model.

a State transition matrix (n-by-n).

b Input matrix (n-by-m).

Outputs

co Controllability matrix.

Equation

$$C_o = [B \ AB \ A^2B \ \dots \ A^{n-1}B]$$

6.2 ctrbf

[sysbar, T, K] = ctrbf (sys) [Function File]
[sysbar, T, K] = ctrbf (sys, tol) [Function File]
[Abar, Bbar, Cbar, T, K] = ctrbf (A, B, C) [Function File]
[Abar, Bbar, Cbar, T, K] = ctrbf (A, B, C, TOL) [Function File]

If Co=ctrb(A,B) has rank r <= n = SIZE(A,1), then there is a similarity transformation Tc

such that $Tc = [t1 \ t2]$ where t1 is the controllable subspace and t2 is orthogonal to t1

Abar = Tc
$$\setminus$$
 A * Tc , Bbar = Tc \setminus B , Cbar = C * Tc

and the transformed system has the form

where (Ac,Bc) is controllable, and $Cc(sI-Ac)^{(-1)}Bc = C(sI-A)^{(-1)}B$. and the system is stabilizable if Anc has no eigenvalues in the right half plane. The last output K is a vector of length n containing the number of controllable states.

6.3 @lti/dcgain

k = dcgain (sys)
DC gain of LTI model.

[Function File]

Inputs

sys LTI system.

Outputs

k DC gain matrice. For a system with m inputs and p outputs, the array k has dimensions [p, m].

See also: freqresp.

6.4 gram

```
W = \text{gram } (sys, mode) [Function File] Wc = \text{gram } (a, b) [Function File]
```

gram (sys, "c") returns the controllability gramian of the (continuous- or discrete-time) system sys. gram (sys, "o") returns the observability gramian of the (continuous- or discrete-time) system sys. gram (a, b) returns the controllability gramian Wc of the continuous-time system dx/dt = ax + bu; i.e., Wc satisfies aWc + mWc' + bb' = 0.

6.5 hsvd

```
hsv = hsvd (sys) [Function File]

hsv = hsvd (sys, "offset", offset) [Function File]

hsv = hsvd (sys, "alpha", alpha) [Function File]
```

Hankel singular values of the stable part of an LTI model. If no output arguments are given, the Hankel singular values are displayed in a plot.

Algorithm

Uses SLICOT AB13AD by courtesy of NICONET e.V.

6.6 @lti/isct

bool = isct (sys) [Function File]

Determine whether LTI model is a continuous-time system.

Inputs

sys LTI system.

Outputs

bool = 0 sys is a discrete-time system.

bool = 1 sys is a continuous-time system or a static gain.

6.7 isctrb

le]
le]
le]
le]
le]

Logical check for system controllability. For numerical reasons, isctrb (sys) should be used instead of rank (ctrb (sys)).

Inputs

sys LTI model. Descriptor state-space models are possible.

a State transition matrix.

b Input matrix.

e Descriptor matrix. If e is empty [] or not specified, an identity matrix is assumed.

tol Optional roundoff parameter. Default value is 0.

Outputs

bool = 0 System is not controllable.

bool = 1 System is controllable.

ncon Number of controllable states.

Algorithm

Uses SLICOT AB01OD and TG01HD by courtesy of NICONET e.V.

See also: isobsv.

6.8 isdetectable

bool = isdetectable (sys)	[Function File]
<pre>bool = isdetectable (sys, tol)</pre>	[Function File]
bool = isdetectable (a, c)	[Function File]
bool = isdetectable (a, c, e)	[Function File]
bool = isdetectable (a, c, [], tol)	[Function File]
bool = isdetectable (a, c, e, tol)	[Function File]
bool = isdetectable (a, c, [], [], dflg)	[Function File]
bool = isdetectable (a, c, e, [], dflg)	[Function File]
bool = isdetectable (a, c, [], tol, dflg)	[Function File]
<pre>bool = isdetectable (a, c, e, tol, dflg)</pre>	[Function File]
T	1 1 11 1

Logical test for system detectability. All unstable modes must be observable or all unobservable states must be stable.

Inputs

sys LTI system.

a State transition matrix.

c Measurement matrix.

e Descriptor matrix. If e is empty [] or not specified, an identity matrix is assumed.

tol Optional tolerance for stability. Default value is 0.

dflg = 0 Matrices (a, c) are part of a continuous-time system. Default Value.

dflg = 1 Matrices (a, c) are part of a discrete-time system.

Outputs

bool = 0 System is not detectable.

bool = 1 System is detectable.

Algorithm

Uses SLICOT AB01OD and TG01HD by courtesy of NICONET e.V. See isstabilizable for description of computational method.

See also: isstabilizable, isstable, isctrb, isobsv.

6.9 @lti/isdt

bool = isdt (sys)

[Function File]

Determine whether LTI model is a discrete-time system.

Inputs

sys LTI system.

Outputs

bool = 0 sys is a continuous-time system.

bool = 1 sys is a discrete-time system or a static gain.

6.10 @lti/isminimumphase

```
bool = isminimumphase (sys) [Function File]
bool = isminimumphase (sys, tol) [Function File]
```

Determine whether LTI system is minimum phase. The zeros must lie in the left complex half-plane. The name minimum-phase refers to the fact that such a system has the minimum possible phase lag for the given magnitude response |sys(jw)|.

Inputs

sys LTI system.

tol Optional tolerance. Default value is 0.

Outputs

bool = 0 System is not minimum phase.

bool = 1 System is minimum phase.

real (z) <
$$-tol*(1 + abs (z))$$
 continuous-time abs (z) < 1 - tol discrete-time

6.11 isobsy

[bool, nobs] = isobsv (sys)	[Function File]
[bool, nobs] = isobsv (sys, tol)	[Function File]
[bool, nobs] = isobsv(a, c)	[Function File]
[bool, nobs] = isobsv (a, c, e)	[Function File]
[bool, nobs] = isobsv $(a, c, [], tol)$	[Function File]
[bool, nobs] = isobsv (a, c, e, tol)	[Function File]

Logical check for system observability. For numerical reasons, isobsv (sys) should be used instead of rank (obsv (sys)).

Inputs

sys LTI model. Descriptor state-space models are possible.

a State transition matrix.

c Measurement matrix.

e Descriptor matrix. If e is empty [] or not specified, an identity matrix is assumed.

tol Optional roundoff parameter. Default value is 0.

Outputs

bool = 0 System is not observable.

bool = 1 System is observable.

nobs Number of observable states.

Algorithm

Uses SLICOT AB01OD and TG01HD by courtesy of NICONET e.V.

See also: isctrb.

6.12 @lti/issiso

bool = issiso (sys) [Function File]

Determine whether LTI model is single-input/single-output (SISO).

6.13 isstabilizable

<pre>bool = isstabilizable (sys)</pre>	[Function File]
bool = isstabilizable (sys, tol)	[Function File]
bool = isstabilizable (a, b)	[Function File]
bool = isstabilizable (a, b, e)	[Function File]
bool = isstabilizable (a, b, [], tol)	[Function File]
bool = isstabilizable (a, b, e, tol)	[Function File]
bool = isstabilizable (a, b, [], [], dflg)	[Function File]
bool = isstabilizable (a, b, e, [], dflg)	[Function File]
bool = isstabilizable (a, b, [], tol, dflg)	[Function File]
<pre>bool = isstabilizable (a, b, e, to1, dflg)</pre>	[Function File]

Logical check for system stabilizability. All unstable modes must be controllable or all uncontrollable states must be stable.

Inputs

sys LTI system.

a State transition matrix.

b Input matrix.

e Descriptor matrix. If e is empty [] or not specified, an identity matrix is assumed.

tol Optional tolerance for stability. Default value is 0.

dflg = 0 Matrices (a, b) are part of a continuous-time system. Default Value.

dflg = 1 Matrices (a, b) are part of a discrete-time system.

Outputs

bool = 0 System is not stabilizable.

bool = 1 System is stabilizable.

Algorithm

Uses SLICOT AB01OD and TG01HD by courtesy of NICONET e.V.

- * Calculate staircase form (SLICOT AB010D)
- * Extract unobservable part of state transition matrix
- * Calculate eigenvalues of unobservable part
- * Check whether

```
real (ev) < -tol*(1 + abs (ev)) continuous-time abs (ev) < 1 - tol discrete-time
```

See also: isdetectable, isstable, isctrb, isobsv.

6.14 @lti/isstable

```
bool = isstable (sys)
bool = isstable (sys, tol)
[Function File]
```

Determine whether LTI system is stable.

Inputs

sys LTI system.

tol Optional tolerance for stability. Default value is 0.

Outputs

bool = 0 System is not stable.

bool = 1 System is stable.

real (p) <
$$-tol*(1 + abs (p))$$
 continuous-time abs (p) < 1 - tol discrete-time

6.15 @lti/norm

gain = norm (sys, 2)
[gain, wpeak] = norm (sys, inf)
[gain, wpeak] = norm (sys, inf, tol)

[Function File] [Function File]

[Function File]

Return H-2 or L-inf norm of LTI model.

Algorithm

Uses SLICOT AB13BD and AB13DD by courtesy of NICONET e.V.

6.16 obsv

ob = obsv (sys)ob = obsv (a, c) [Function File] [Function File]

Return observability matrix.

Inputs

sys LTI model.

a State transition matrix (n-by-n).

c Measurement matrix (p-by-n).

Outputs

ob Observability matrix.

Equation

$$O_b = \begin{bmatrix} C \\ CA \\ CA^2 \\ \vdots \\ CA^{n-1} \end{bmatrix}$$

6.17 obsvf

[sysbar, T, K] = obsvf (sys)
[sysbar, T, K] = obsvf (sys, tol)
[Abar, Bbar, Cbar, T, K] = obsvf (A, B, C)
[Abar, Bbar, Cbar, T, K] = obsvf (A, B, C, TOL)
[Function File]

If Ob=obsv(A,C) has rank $r \le n = SIZE(A,1)$, then there is a similarity transformation Tc such that To = [t1;t2] where t1 is c and t2 is orthogonal to t1

Abar = To
$$\setminus$$
 A * To , Bbar = To \setminus B , Cbar = C * To

and the transformed system has the form

where (Ao,Bo) is observable, and $Co(sI-Ao)^{(-1)}Bo = C(sI-A)^{(-1)}B$. And system is detectable if Ano has no eigenvalues in the right half plane. The last output K is a vector of length n containing the number of observable states.

6.18 @lti/pole

p = pole (sys) [Function File]
Compute poles of LTI system.

Inputs

sys LTI model.

Outputs

p Poles of sys.

6.19 pzmap

```
 pzmap (sys)  [Function File]  pzmap (sys1, sys2, ..., sysN)  [Function File]  pzmap (sys1, 'style1', ..., sysN, 'styleN')  [Function File]  [p, z] = pzmap (sys)  [Function File]
```

Plot the poles and zeros of an LTI system in the complex plane. If no output arguments are given, the result is plotted on the screen. Otherwise, the poles and zeros are computed and returned.

Inputs

sys LTI model.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

p Poles of sys.

z Transmission zeros of sys.

6.20 @lti/size

```
n \text{ vec} = \text{size } (sys) [Function File]

n = \text{size } (sys, dim) [Function File]

[p, m] = \text{size } (sys) [Function File]
```

LTI model size, i.e. number of outputs and inputs.

Inputs

sys LTI system.

dim If given a second argument, size will return the size of the corresponding dimension.

Outputs

nvec Row vector. The first element is the number of outputs (rows) and the second element the number of inputs (columns).

n Scalar value. The size of the dimension dim.

p Number of outputs.

m Number of inputs.

6.21 @lti/zero

z = zero (sys)[z, k] = zero (sys) [Function File] [Function File]

Compute transmission zeros and gain of LTI model.

Inputs

sys LTI model.

Outputs

z Transmission zeros of sys.

k Gain of sys.

7 Model Simplification

7.1 @lti/minreal

```
sys = minreal (sys)
sys = minreal (sys, tol)
[Function File]
```

Minimal realization or zero-pole cancellation of LTI models.

7.2 @lti/sminreal

```
sys = sminreal (sys)
sys = sminreal (sys, tol)
[Function File]
```

Perform state-space model reduction based on structure. Remove states which have no influence on the input-output behaviour. The physical meaning of the states is retained.

Inputs

sys State-space model.

Optional tolerance for controllability and observability. Entries of the state-space matrices whose moduli are less or equal to *tol* are assumed to be zero. Default value is 0.

Outputs

sys Reduced state-space model.

See also: minreal.

8 Time Domain Analysis

8.1 covar

[p, q] = covar(sys, w)

[Function File]

Return the steady-state covariance.

Inputs

sys LTI model.

w Intensity of Gaussian white noise inputs which drive sys.

Outputs

p Output covariance.

q State covariance.

See also: lyap, dlyap.

8.2 gensig

[u, t] = gensig (sigtype, tau)

[Function File]

[u, t] = gensig (sigtype, tau, tfinal)

[Function File]

[u, t] = gensig (sigtype, tau, tfinal, tsam)

[Function File]

Generate periodic signal. Useful in combination with lsim.

Inputs

sigtype = "sin"

Sine wave.

sigtype = "cos"

Cosine wave.

sigtype = "square"

Square wave.

sigtype = "pulse"

Periodic pulse.

tau Duration of one period in seconds.

tfinal Optional duration of the signal in seconds. Default duration is 5 periods.

tsam Optional sampling time in seconds. Default spacing is tau/64.

Outputs

u Vector of signal values.

t Time vector of the signal.

See also: lsim.

8.3 impulse

impulse (sys)	[Function File]
impulse (sys1, sys2,, sysN)	[Function File]
<pre>impulse (sys1, 'style1',, sysN, 'styleN')</pre>	[Function File]
impulse $(sys1, \ldots, t)$	[Function File]
impulse (sys1,, tfinal)	[Function File]
impulse (sys1,, tfinal, dt)	[Function File]
[y, t, x] = impulse(sys)	[Function File]
[y, t, x] = impulse(sys, t)	[Function File]
[y, t, x] = impulse (sys, tfinal)	[Function File]
[y, t, x] = impulse (sys, tfinal, dt)	[Function File]

Impulse response of LTI system. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI model.

t Time vector. Should be evenly spaced. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

tfinal Optional simulation horizon. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

dt Optional sampling time. Be sure to choose it small enough to capture transient phenomena. If not specified, it is calculated by the poles of the system.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

y Output response array. Has as many rows as time samples (length of t) and as many columns as outputs.

t Time row vector.

x State trajectories array. Has length (t) rows and as many columns as states.

See also: initial, lsim, step.

8.4 initial

initial (sys, x0)	[Function File]
initial (sys1, sys2,, sysN, x0)	[Function File]
initial (sys1, 'style1',, sysN, 'styleN', x0)	[Function File]
initial $(sys1,, x0, t)$	[Function File]
initial (sys1,, x0, tfinal)	[Function File]
initial (sys1,, x0, tfinal, dt)	[Function File]
[y, t, x] = initial (sys, x0)	[Function File]
[y, t, x] = initial (sys, x0, t)	[Function File]
[y, t, x] = initial (sys, x0, tfinal)	[Function File]
[y, t, x] = initial (sys, x0, tfinal, dt)	[Function File]

Initial condition response of state-space model. If no output arguments are given, the response is printed on the screen.

Inputs

sys State-space model.

x0 Vector of initial conditions for each state.

Optional time vector. Should be evenly spaced. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

tfinal Optional simulation horizon. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

dt Optional sampling time. Be sure to choose it small enough to capture transient phenomena. If not specified, it is calculated by the poles of the system.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

y Output response array. Has as many rows as time samples (length of t) and as many columns as outputs.

t Time row vector.

X State trajectories array. Has length (t) rows and as many columns as states.

Example

Continuous Time: x = A x, y = C x, x(0) = x0

Discrete Time: x[k+1] = A x[k], y[k] = C x[k], x[0] = x0

See also: impulse, lsim, step.

8.5 lsim

lsim (sys, u)	[Function File]
lsim (sys1, sys2,, sysN, u)	[Function File]
lsim (sys1, 'style1',, sysN, 'styleN', u)	[Function File]
lsim (sys1,, u, t)	[Function File]
lsim (sys1,, u, t, x0)	[Function File]
[y, t, x] = lsim (sys, u)	[Function File]
[y, t, x] = lsim (sys, u, t)	[Function File]
[y, t, x] = lsim (sys, u, t, x0)	[Function File]

Simulate LTI model response to arbitrary inputs. If no output arguments are given, the system response is plotted on the screen.

Inputs

sys LTI model. System must be proper, i.e. it must not have more zeros than poles.

Vector or array of input signal. Needs length(t) rows and as many columns as there are inputs. If sys is a single-input system, row vectors u of length length(t) are accepted as well.

Time vector. Should be evenly spaced. If sys is a continuous-time system and t is a real scalar, sys is discretized with sampling time tsam = t/(rows(u)-1). If sys is a discrete-time system and t is not specified, vector t is assumed to be 0: tsam : tsam *(rows(u)-1).

x0 Vector of initial conditions for each state. If not specified, a zero vector is assumed.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

- y Output response array. Has as many rows as time samples (length of t) and as many columns as outputs.
- t Time row vector. It is always evenly spaced.
- x State trajectories array. Has length (t) rows and as many columns as states.

See also: impulse, initial, step.

8.6 step

step (sys)	[Function File]
step (sys1, sys2,, sysN)	[Function File]
step (sys1, 'style1',, sysN, 'styleN')	[Function File]
step $(sys1, \ldots, t)$	[Function File]
step (sys1,, tfinal)	[Function File]
step (sys1,, tfinal, dt)	[Function File]
[y, t, x] = step(sys)	[Function File]
[y, t, x] = step (sys, t)	[Function File]
[y, t, x] = step (sys, tfinal)	[Function File]
[y, t, x] = step(sys, tfinal, dt)	[Function File]

Step response of LTI system. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI model.

t Time vector. Should be evenly spaced. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

tfinal Optional simulation horizon. If not specified, it is calculated by the poles of the system to reflect adequately the response transients.

dt Optional sampling time. Be sure to choose it small enough to capture transient phenomena. If not specified, it is calculated by the poles of the system.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

- y Output response array. Has as many rows as time samples (length of t) and as many columns as outputs.
- t Time row vector.
- x State trajectories array. Has length (t) rows and as many columns as states.

See also: impulse, initial, lsim.

9 Frequency Domain Analysis

9.1 bode

bode (sys)	[Function File]
bode (sys1, sys2,, sysN)	[Function File]
bode (sys1, sys2,, sysN, w)	[Function File]
bode (sys1, 'style1',, sysN, 'styleN')	[Function File]
[mag, pha, w] = bode(sys)	[Function File]
[mag, pha, w] = bode(sys, w)	[Function File]

Bode diagram of frequency response. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI system. Must be a single-input and single-output (SISO) system.

W Optional vector of frequency values. If w is not specified, it is calculated by the zeros and poles of the system. Alternatively, the cell {wmin, wmax} specifies a frequency range, where wmin and wmax denote minimum and maximum frequencies in rad/s.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

mag Vector of magnitude. Has length of frequency vector w.

pha Vector of phase. Has length of frequency vector w.

w Vector of frequency values used.

See also: nichols, nyquist, sigma.

9.2 bodemag

```
bodemag (sys)

bodemag (sys1, sys2,..., sysN)

bodemag (sys1, sys2,..., sysN, w)

bodemag (sys1, 'style1',..., sysN, 'styleN')

[mag, w] = bodemag (sys)

[mag, w] = bodemag (sys, w)

[Function File]

[mag, w] = bodemag (sys, w)
```

Bode magnitude diagram of frequency response. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI system. Must be a single-input and single-output (SISO) system.

W Optional vector of frequency values. If w is not specified, it is calculated by the zeros and poles of the system. Alternatively, the cell {wmin, wmax} specifies a frequency range, where wmin and wmax denote minimum and maximum frequencies in rad/s.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

mag Vector of magnitude. Has length of frequency vector w.

w Vector of frequency values used.

See also: bode, nichols, nyquist, sigma.

9.3 @lti/freqresp

H = freqresp (sys, w)

[Function File]

Evaluate frequency response at given frequencies.

Inputs

sys LTI system.

w Vector of frequency values.

Outputs

H

Array of frequency response. For a system with m inputs and p outputs, the array H has dimensions [p, m, length (w)]. The frequency response at the frequency w(k) is given by H(:,:,k).

See also: dcgain.

9.4 margin

```
[gamma, phi, w_gamma, w_phi] = margin (sys) [Function File]
[gamma, phi, w_gamma, w_phi] = margin (sys, tol) [Function File]
```

Gain and phase margin of a system. If no output arguments are given, both gain and phase margin are plotted on a bode diagram. Otherwise, the margins and their corresponding frequencies are computed and returned. A more robust criterion to assess the stability of a feedback system is the sensitivity Ms computed by command sensitivity.

Inputs

sys LTI model. Must be a single-input and single-output (SISO) system.

tol Imaginary parts below tol are assumed to be zero. If not specified, default value sqrt (eps) is taken.

Outputs

gamma Gain margin (as gain, not dBs).

phi Phase margin (in degrees).

w-gamma Frequency for the gain margin (in rad/s).

 $w_{-}phi$ Frequency for the phase margin (in rad/s).

Algorithm

Uses command **roots** to calculate the frequencies w_gamma , w_phi from special polynomials created from the transfer function of sys as listed below in section «Equations».

Equations

CONTINUOUS-TIME SYSTEMS

Gain Margin

$$L(jw) = L(jw)$$
 BTW: $L(jw) = L(-jw) = conj (L(jw))$
 $num(jw)$ $num(-jw)$
 $------ = -------$
 $den(jw)$ $den(-jw)$
 $num(jw)$ $den(-jw) = num(-jw)$ $den(jw)$

imag
$$(num(jw) den(-jw)) = 0$$

imag $(num(-jw) den(jw)) = 0$

Phase Margin

$$num(jw) num(-jw) - den(jw) den(-jw) = 0$$

real
$$(num(jw) num(-jw) - den(jw) den(-jw)) = 0$$

DISCRETE-TIME SYSTEMS

Gain Margin

$$L(z) = L(1/z) \qquad \text{BTW: } z = e \qquad --> w = ----- \\ \text{j T}$$

$$num(z)$$
 $num(1/z)$
----- = ------
 $den(z)$ $den(1/z)$

$$num(z) den(1/z) - num(1/z) den(z) = 0$$

Phase Margin

See also: sensitivity, roots.

9.5 nichols

nichols (sys)	[Function File]
nichols (sys1, sys2,, sysN)	[Function File]
nichols (sys1, sys2,, sysN, w)	[Function File]
nichols (sys1, 'style1',, sysN, 'styleN')	[Function File]
[mag, pha, w] = nichols (sys)	[Function File]
[mag, pha, w] = nichols (sys, w)	[Function File]
NT: 1 1 1	

Nichols chart of frequency response. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI system. Must be a single-input and single-output (SISO) system.

w Optional vector of frequency values. If w is not specified, it is calculated by the zeros and poles of the system. Alternatively, the cell {wmin, wmax} specifies a frequency range, where wmin and wmax denote minimum and maximum frequencies in rad/s.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

mag Vector of magnitude. Has length of frequency vector w.

pha Vector of phase. Has length of frequency vector w.

w Vector of frequency values used.

See also: bode, nyquist, sigma.

9.6 nyquist

nyquist (sys)	[Function File]
nyquist (sys1, sys2,, sysN)	[Function File]
nyquist (sys1, sys2,, sysN, w)	[Function File]
<pre>nyquist (sys1, 'style1',, sysN, 'styleN')</pre>	[Function File]
[re, im, w] = nyquist (sys)	[Function File]
[re, im, w] = nyquist (sys, w)	[Function File]

Nyquist diagram of frequency response. If no output arguments are given, the response is printed on the screen.

Inputs

sys LTI system. Must be a single-input and single-output (SISO) system.

W Optional vector of frequency values. If w is not specified, it is calculated by the zeros and poles of the system. Alternatively, the cell {wmin, wmax} specifies a frequency range, where wmin and wmax denote minimum and maximum frequencies in rad/s.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

re Vector of real parts. Has length of frequency vector w.

im Vector of imaginary parts. Has length of frequency vector w.

w Vector of frequency values used.

See also: bode, nichols, sigma.

9.7 sensitivity

```
 [Ms, ws] = \text{sensitivity } (L)  [Function File]  [Ms, ws] = \text{sensitivity } (P, C)  [Function File]  [Ms, ws] = \text{sensitivity } (P, C1, C2, ...)  [Function File]
```

Return sensitivity margin Ms. The quantity Ms is simply the inverse of the shortest distance from the Nyquist curve to the critical point -1. Reasonable values of Ms are in the range from 1.3 to 2.

$$M_s = ||S(j\omega)||_{\infty}$$

If no output arguments are given, the critical distance 1/Ms is plotted on a Nyquist diagram. In contrast to gain and phase margin as computed by command margin, the sensitivity Ms is a more robust criterion to assess the stability of a feedback system.

Inputs

L Open loop transfer function. L can be any type of LTI system, but it must be square.

P Plant model. Any type of LTI system.

C Controller model. Any type of LTI system.

 $C1, C2, \ldots$

If several controllers are specified, command sensitivity computes the sensitivity Ms for each of them in combination with plant P.

Outputs

Ms Sensitivity margin Ms as defined in [1]. Scalar value. If several controllers are specified, Ms becomes a row vector with as many entries as controllers.

ws The frequency [rad/s] corresponding to the sensitivity peak. Scalar value. If several controllers are specified, ws becomes a row vector with as many entries as controllers.

Algorithm

Uses SLICOT AB13DD by courtesy of NICONET e.V. to calculate the infinity norm of the sensitivity function.

References

[1] Aström, K. and Hägglund, T. (1995) PID Controllers: Theory, Design and Tuning, Second Edition. Instrument Society of America.

9.8 sigma

```
sigma (sys)
                                                                          [Function File]
sigma (sys1, sys2, ..., sysN)
                                                                          [Function File]
sigma (sys1, sys2, ..., sysN, w)
                                                                          [Function File]
sigma (sys1, 'style1', ..., sysN, 'styleN')
                                                                          [Function File]
[sv, w] = sigma(sys)
                                                                          [Function File]
[sv, w] = sigma(sys, w)
                                                                          [Function File]
[sv, w] = sigma(sys, [], ptype)
                                                                          [Function File]
[sv, w] = sigma(sys, w, ptype)
                                                                          [Function File]
```

Singular values of frequency response. If no output arguments are given, the singular value plot is printed on the screen.

Inputs

sys LTI system. Multiple inputs and/or outputs (MIMO systems) make practical sense.

W Optional vector of frequency values. If w is not specified, it is calculated by the zeros and poles of the system. Alternatively, the cell {wmin, wmax} specifies a frequency range, where wmin and wmax denote minimum and maximum frequencies in rad/s.

ptype = 0 Singular values of the frequency response H of system sys. Default Value.

ptype = 1 Singular values of the frequency response inv(H); i.e. inversed system.

ptype = 2 Singular values of the frequency response I + H; i.e. inversed sensitivity (or return difference) if H = P * C.

ptype = 3 Singular values of the frequency response I + inv(H); i.e. inversed complementary sensitivity if H = P * C.

'style' Line style and color, e.g. 'r' for a solid red line or '-.k' for a dash-dotted black line. See help plot for details.

Outputs

Array of singular values. For a system with m inputs and p outputs, the array sv has min (m, p) rows and as many columns as frequency points length (w). The singular values at the frequency w(k) are given by sv(:,k).

w Vector of frequency values used.

See also: bodemag, svd.

10 Pole Placement

10.1 place

```
f = place(sys, p)
                                                                           [Function File]
f = place(a, b, p)
                                                                           [Function File]
[f, info] = place (sys, p, alpha)
                                                                           [Function File]
[f, info] = place (a, b, p, alpha)
                                                                           [Function File]
```

Pole assignment for a given matrix pair (A,B) such that p = eig (A-B*F). If parameter alpha is specified, poles with real parts (continuous-time) or moduli (discrete-time) below alpha are left untouched.

Inputs	
sys	LTI system.
a	State transition matrix (n-by-n) of a continuous-time system.
b	Input matrix (n-by-m) of a continuous-time system.
p	Desired eigenvalues of the closed-loop system state-matrix A - B * F . length (p) <= rows (A).
alpha	Specifies the maximum admissible value, either for real parts or for moduli, of the eigenvalues of A which will not be modified by the eigenvalue assignment algorithm. alpha ≥ 0 for discrete-time systems.

Outputs

fState feedback gain matrix.

info Structure containing additional information.

info.nfp The number of fixed poles, i.e. eigenvalues of A having real parts less than alpha, or moduli less than alpha. These eigenvalues are not modified by place.

The number of assigned eigenvalues. nap = n-nfp-nup. info.nap

info.nup The number of uncontrollable eigenvalues detected by the eigenvalue assignment algorithm.

info.zThe orthogonal matrix z reduces the closed-loop system state matrix A + B*F to upper real Schur form. Note the positive sign in A + B*F.

Note

```
Place is also suitable to design estimator gains:
        L = place (A.', C.', p).'
        L = place (sys.', p).' # useful for discrete-time systems
```

Algorithm

Uses SLICOT SB01BD by courtesy of NICONET e.V.

10.2 rlocus

rlocus (sys) [Function File]
[rldata, k] = rlocus (sys, increment, min_k, max_k) [Function File]

Display root locus plot of the specified SISO system.

Inputs

sys LTI model. Must be a single-input and single-output (SISO) system.

 $min_{-}k$ Minimum value of k.

 \max_{-k} Maximum value of k.


increment The increment used in computing gain values.

Outputs

rldata Data points plotted: in column 1 real values, in column 2 the imaginary values.

k Gains for real axis break points.

Block Diagram

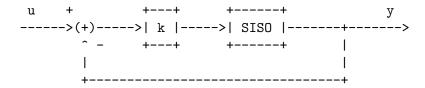

11 Linear-Quadratic Control

11.1 dlqe

[m, p, z, e] = dlqe(a, g, c, q, r)	[Function File]
[m, p, z, e] = dlqe(a, g, c, q, r, s)	[Function File]
[m, p, z, e] = dlqe(a, [], c, q, r)	[Function File]
[m, p, z, e] = dlqe(a, [], c, q, r, s)	[Function File]
Kalman filter for discrete-time systems.	
$v[k] = Av[k] + Bu[k] + Cu[k] \qquad (State equation)$	ation)

V[V]	- 1	י נאן אה	ըս[ռ]	' GM [K]	(brace equat.	1011)
y[k]	= (Cx[k] +	Du[k]	+ v[k]	(Measurement	Equation)
E(w)	= (), E(v)	= 0,	cov(w) = 0	Q, $cov(v) = R$,	cov(w,v) = S

Inputs

- a State transition matrix of discrete-time system (n-by-n).
- g Process noise matrix of discrete-time system (n-by-g). If g is empty [], an identity matrix is assumed.
- c Measurement matrix of discrete-time system (p-by-n).
- q Process noise covariance matrix (g-by-g).
- r Measurement noise covariance matrix (p-by-p).
- Optional cross term covariance matrix (g-by-p), s = cov(w,v). If s is empty [] or not specified, a zero matrix is assumed.

Outputs

- m Kalman filter gain matrix (n-by-p).
- p Unique stabilizing solution of the discrete-time Riccati equation (n-by-n). Symmetric matrix.
- z Error covariance (n-by-n), cov(x(k|k)-x)
- e Closed-loop poles (n-by-1).

Equations

$$x[k|k] = x[k|k-1] + M(y[k] - Cx[k|k-1] - Du[k])$$
 = $x[k+1|k] = Ax[k|k] + Bu[k]$ for S=0 $x[k+1|k] = Ax[k|k] + Bu[k] + G*S*(C*P*C' + R)^-1*(y[k] - C*x[k|k-1])$ for $x[k+1|k] = Ax[k-1]$ for $x[k+1|k] = Ax[k]$

 $E = eig(A - A*M*C - G*S*(C*P*C' + Rv)^-1*C)$ for non-zero S

See also: dare, care, dlqr, lqr, lqe.

11.2 dlqr

[g, x, 1] = dlqr (sys, q, r)	[Function File]
[g, x, 1] = dlqr (sys, q, r, s)	[Function File]
[g, x, 1] = dlqr(a, b, q, r)	[Function File]
[g, x, 1] = dlqr(a, b, q, r, s)	[Function File]
[g, x, 1] = dlqr(a, b, q, r, [], e)	[Function File]
[g, x, 1] = dlqr (a, b, q, r, s, e)	[Function File]

Linear-quadratic regulator for discrete-time systems.

Inputs

sys Continuous or discrete-time LTI model (p-by-m, n states).

a State transition matrix of discrete-time system (n-by-n).

b Input matrix of discrete-time system (n-by-m).

q State weighting matrix (n-by-n).

r Input weighting matrix (m-by-m).

Solutional cross term matrix (n-by-m). If s is not specified, a zero matrix is

assumed.

e Optional descriptor matrix (n-by-n). If e is not specified, an identity matrix is assumed.

Outputs

g State feedback matrix (m-by-n).

x Unique stabilizing solution of the discrete-time Riccati equation (n-by-n).

l Closed-loop poles (n-by-1).

Equations

See also: dare, care, lqr.

11.3 estim

```
est = estim (sys, 1) [Function File]

est = estim (sys, 1, sensors, known) [Function File]
```

Return state estimator for a given estimator gain.

Inputs

sys LTI model.

1 State feedback matrix.

sensors Indices of measured output signals y from sys. If omitted, all outputs are measured.

known Indices of known input signals u (deterministic) to sys. All other inputs to sys are assumed stochastic. If argument known is omitted, no inputs u are known.

Outputs

est State-space model of estimator.

See also: kalman, place.

11.4 kalman

[est, g, x] = kalman (sys, q, r)	[Function File]
[est, g, x] = kalman (sys, q, r, s)	[Function File]
[est, g, x] = kalman (sys, q, r, [], sensors, known)	[Function File]
[est, g, x] = kalman (sys, q, r, s, sensors, known)	[Function File]
Design Kalman estimator for LTI systems.	

Inputs

sys Nominal plant model.

q Covariance of white process noise.

r Covariance of white measurement noise.

S Optional cross term covariance. Default value is 0.

sensors Indices of measured output signals y from sys. If omitted, all outputs are mea-

sured.

known Indices of known input signals u (deterministic) to sys. All other inputs to sys

are assumed stochastic. If argument known is omitted, no inputs u are known.


Outputs

est State-space model of the Kalman estimator.

g Estimator gain.

x Solution of the Riccati equation.

Block Diagram

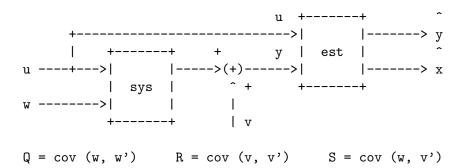

See also: care, dare, estim, lqr.

11.5 lqe

[1, p, e] = lqe (sys, q, r)	[Function File]
[1, p, e] = lqe (sys, q, r, s)	[Function File]
[1, p, e] = lqe(a, g, c, q, r)	[Function File]
[1, p, e] = lqe(a, g, c, q, r, s)	[Function File]
[1, p, e] = lqe(a, [], c, q, r)	[Function File]
[1, p, e] = lqe(a, [], c, q, r, s)	[Function File]

Kalman filter for continuous-time systems.

x = Ax + Bu + Gw (State equation) y = Cx + Du + v (Measurement Equation) E(w) = 0, E(v) = 0, cov(w) = Q, cov(v) = R, cov(w,v) = S

Inputs

sys Continuous or discrete-time LTI model (p-by-m, n states).

a State transition matrix of continuous-time system (n-by-n).

g Process noise matrix of continuous-time system (n-by-g). If g is empty [], an identity matrix is assumed.

c Measurement matrix of continuous-time system (p-by-n).

q Process noise covariance matrix (g-by-g).

r Measurement noise covariance matrix (p-by-p).

Optional cross term covariance matrix (g-by-p), s = cov(w,v). If s is empty [] or not specified, a zero matrix is assumed.

Outputs

1 Kalman filter gain matrix (n-by-p).

p Unique stabilizing solution of the continuous-time Riccati equation (n-by-n). Symmetric matrix. If sys is a discrete-time model, the solution of the corresponding discrete-time Riccati equation is returned.

e Closed-loop poles (n-by-1).

Equations

$$x = Ax + Bu + L(y - Cx - Du)$$

$$E = eig(A - L*C)$$

See also: dare, care, dlqr, lqr, dlqe.

11.6 lqr

[g, x, 1] = lqr (sys, q, r)	[Function File]
[g, x, 1] = lqr (sys, q, r, s)	[Function File]
[g, x, 1] = lqr(a, b, q, r)	[Function File]
[g, x, 1] = lqr(a, b, q, r, s)	[Function File]

$$[g, x, 1] = lqr (a, b, q, r, [], e)$$
 [Function File] $[g, x, 1] = lqr (a, b, q, r, s, e)$ [Function File] Linear-quadratic regulator.

Inputs

sys	Continuous or discrete-time LTI model (p-by-m, n states).
a	State transition matrix of continuous-time system (n-by-n).
b	Input matrix of continuous-time system (n-by-m).
q	State weighting matrix (n-by-n).
r	Input weighting matrix (m-by-m).
S	Optional cross term matrix (n-by-m). If s is not specified, a zero matrix is assumed.
e	Optional descriptor matrix (n-by-n). If e is not specified, an identity matrix is assumed.

Outputs

g State feedback matrix (m-by-n).

x Unique stabilizing solution of the continuous-time Riccati equation (n-by-n).

1 Closed-loop poles (n-by-1).

Equations

See also: care, dare, dlqr.

12 Robust Control

12.1 augw

P = augw (G, W1, W2, W3)

[Function File]

Extend plant for stacked S/KS/T problem. Subsequently, the robust control problem can be solved by h2syn or hinfsyn.

Inputs

G LTI model of plant.

W1 LTI model of performance weight. Bounds the largest singular values of sensitivity S. Model must be empty [], SISO or of appropriate size.

W2 LTI model to penalize large control inputs. Bounds the largest singular values of KS. Model must be empty [], SISO or of appropriate size.


W3 LTI model of robustness and noise sensitivity weight. Bounds the largest singular values of complementary sensitivity T. Model must be empty [], SISO or of appropriate size.


All inputs must be proper/realizable. Scalars, vectors and matrices are possible instead of LTI models.


Outputs


P State-space model of augmented plant.

Block Diagram



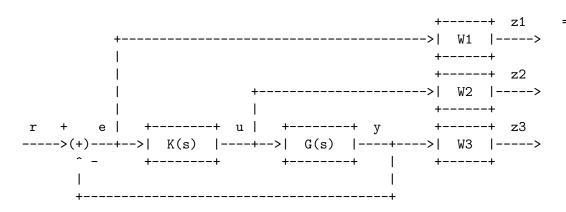



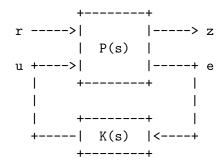

References

[1] Skogestad, S. and Postlethwaite I. (2005) Multivariable Feedback Control: Analysis and Design: Second Edition. Wiley.

See also: h2syn, hinfsyn, mixsyn.

12.2 fitfrd

[sys, n] = fitfrd (dat, n) [Function File] [sys, n] = fitfrd (dat, n, flag) [Function File]

Fit frequency response data with a state-space system. If requested, the returned system is stable and minimum-phase.

Inputs

dat LTI model containing frequency response data of a SISO system.

n The desired order of the system to be fitted. n <= length(dat.w).

flag The flag controls whether the returned system is stable and minimum-phase.

0 The system zeros and poles are not constrained. Default value.

1 The system zeros and poles will have negative real parts in the continuous-time case, or moduli less than 1 in the discrete-time case.

Outputs

sys State-space model of order n, fitted to frequency response data dat.

The order of the obtained system. The value of n could only be modified if inputs n > 0 and flag = 1.

Algorithm

Uses SLICOT SB10YD by courtesy of NICONET e.V.

12.3 h2syn

[K, N, gamma, rcond] = h2syn (P, nmeas, ncon) [Function File] H-2 control synthesis for LTI plant.

Inputs

P Generalized plant. Must be a proper/realizable LTI model.

nmeas Number of measured outputs v. The last nmeas outputs of P are connected to the inputs of controller K. The remaining outputs z (indices 1 to p-nmeas) are used to calculate the H-2 norm.

ncon Number of controlled inputs u. The last ncon inputs of P are connected to the

outputs of controller K. The remaining inputs w (indices 1 to m-ncon) are excited

by a harmonic test signal.

Outputs

K State-space model of the H-2 optimal controller.

N State-space model of the lower LFT of P and K.

gamma H-2 norm of N.

rcond Vector rcond contains estimates of the reciprocal condition numbers of the ma-

trices which are to be inverted and estimates of the reciprocal condition numbers of the Riccati equations which have to be solved during the computation of the controller K. For details, see the description of the corresponding SLICOT algo-

rithm.

Block Diagram

Algorithm

Uses SLICOT SB10HD and SB10ED by courtesy of NICONET e.V.

See also: augw, lqr, dlqr, kalman.

12.4 hinfsyn

Inputs

P Generalized plant. Must be a proper/realizable LTI model.

nmeas Number of measured outputs v. The last nmeas outputs of P are connected to the inputs of controller K. The remaining outputs z (indices 1 to p-nmeas) are used to calculate the H-infinity norm.

ncon Number of controlled inputs u. The last ncon inputs of P are connected to the outputs of controller K. The remaining inputs w (indices 1 to m-ncon) are excited by a harmonic test signal.

gmax The maximum value of the H-infinity norm of N. It is assumed that gmax is sufficiently large so that the controller is admissible.

Outputs

K State-space model of the H-infinity (sub-)optimal controller.

N State-space model of the lower LFT of P and K.

gamma L-infinity norm of N.

rcond Vector rcond contains estimates of the reciprocal condition numbers of the matrices which are to be inverted and estimates of the reciprocal condition numbers of the Riccati equations which have to be solved during the computation of the controller K. For details, see the description of the corresponding SLICOT algo-

rithm.

Block Diagram

Algorithm

Uses SLICOT SB10FD and SB10DD by courtesy of NICONET e.V.

See also: augw, mixsyn.

12.5 mixsyn

[K, N, gamma, rcond] = mixsyn (G, W1, W2, W3, ...) [Function File] Solve stacked S/KS/T H-infinity problem. Bound the largest singular values of S (for performance), KS (to penalize large inputs) and T (for robustness and to avoid sensitivity to noise). In other words, the inputs r are excited by a harmonic test signal. Then the algorithm tries to find a controller K which minimizes the H-infinity norm calculated from the outputs S.

Inputs

G LTI model of plant.

W1 LTI model of performance weight. Bounds the largest singular values of sensitivity S. Model must be empty [], SISO or of appropriate size.

W2 LTI model to penalize large control inputs. Bounds the largest singular values of KS. Model must be empty [], SISO or of appropriate size.

W3 LTI model of robustness and noise sensitivity weight. Bounds the largest singular values of complementary sensitivity T. Model must be empty [], SISO or of appropriate size.

... Optional arguments of hinfsyn. Type help hinfsyn for more information.

All inputs must be proper/realizable. Scalars, vectors and matrices are possible instead of LTI models.

Outputs


K State-space model of the H-infinity (sub-)optimal controller.


N State-space model of the lower LFT of P and K.

gamma L-infinity norm of N.

record Vector record contains estimates of the reciprocal condition numbers of the matrices which are to be inverted and estimates of the reciprocal condition numbers of the Riccati equations which have to be solved during the computation of the controller K. For details, see the description of the corresponding SLICOT algorithm.

Block Diagram

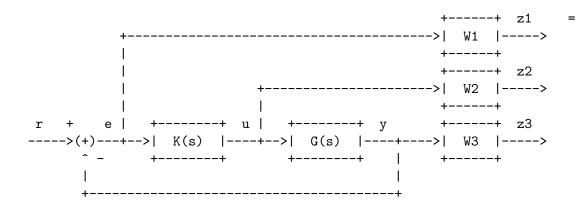

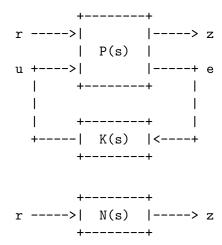

Extended Plant: P = augw (G, W1, W2, W3) Controller: K = mixsyn (G, W1, W2, W3)

Entire System: N = lft (P, K)Open Loop: L = G * KClosed Loop: T = feedback (L)

Algorithm

Relies on commands augw and hinfsyn, which use SLICOT SB10FD and SB10DD by courtesy of NICONET e.V.

References

[1] Skogestad, S. and Postlethwaite I. (2005) Multivariable Feedback Control: Analysis and Design: Second Edition. Wiley.

See also: hinfsyn, augw.

12.6 ncfsyn

[K, N, gamma, info] = ncfsyn (G, W1, W2, factor) [Function File]

Loop shaping H-infinity synthesis. Compute positive feedback controller using the McFarlane/Glover normalized coprime factor (NCF) loop shaping design procedure.

Inputs

G LTI model of plant.

W1 LTI model of precompensator. Model must be SISO or of appropriate size. An identity matrix is taken if W1 is not specified or if an empty model [] is passed.

W2 LTI model of postcompensator. Model must be SISO or of appropriate size. An identity matrix is taken if W2 is not specified or if an empty model [] is passed.

factor = 1 implies that an optimal controller is required. factor > 1 implies that a suboptimal controller is required, achieving a performance that is factor times less than optimal. Default value is 1.

Outputs

K State-space model of the H-infinity loop-shaping controller.

N State-space model of the closed loop depicted below.

gamma L-infinity norm of N. gamma = norm (N, inf).

info Structure containing additional information.


info.emax Nugap robustness. emax = inv (gamma).

info.Gs Shaped plant. Gs = W2 * G * W1.

info.Ks Controller for shaped plant. Ks = ncfsyn (Gs).

info.rcond Estimates of the reciprocal condition numbers of the Riccati equations and a few other things. For details, see the description of the corresponding SLICOT algorithm.

Block Diagram of N

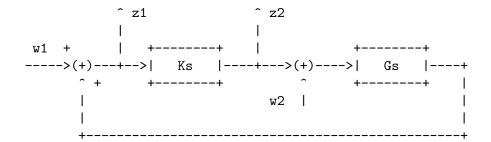

Algorithm

Uses SLICOT SB10ID, SB10KD and SB10ZD by courtesy of NICONET e.V.

13 Matrix Equation Solvers

13.1 care

[x, 1, g] = care (a, b, q, r)	[Function File]
[x, 1, g] = care (a, b, q, r, s)	[Function File]
[x, 1, g] = care(a, b, q, r, [], e)	[Function File]
[x, 1, g] = care (a, b, q, r, s, e)	[Function File]
Solve continuous-time algebraic Riccati equation (ARE).	

Inputs

a Real matrix (n-by-n).

b Real matrix (n-by-m).

q Real matrix (n-by-n).

r Real matrix (m-by-m).

S Optional real matrix (n-by-m). If s is not specified, a zero matrix is assumed.

e Optional descriptor matrix (n-by-n). If e is not specified, an identity matrix is assumed.

Outputs

x Unique stabilizing solution of the continuous-time Riccati equation (n-by-n).

l Closed-loop poles (n-by-1).

g Corresponding gain matrix (m-by-n).

Equations

Algorithm

Uses SLICOT SB02OD and SG02AD by courtesy of NICONET e.V.

See also: dare, lqr, dlqr, kalman.

13.2 dare

[x, 1, g] = dare(a, b, q, r)	[Function File]
[x, 1, g] = dare(a, b, q, r, s)	[Function File]
[x, 1, g] = dare(a, b, q, r, [], e)	[Function File]
[x, 1, g] = dare(a, b, q, r, s, e)	[Function File]
Solve discrete-time algebraic Riccati equation (ARE).	

Inputs

- a Real matrix (n-by-n).
- b Real matrix (n-by-m).
- q Real matrix (n-by-n).
- r Real matrix (m-by-m).
- S Optional real matrix (n-by-m). If s is not specified, a zero matrix is assumed.
- e Optional descriptor matrix (n-by-n). If e is not specified, an identity matrix is assumed.

Outputs

- x Unique stabilizing solution of the discrete-time Riccati equation (n-by-n).
- *l* Closed-loop poles (n-by-1).
- g Corresponding gain matrix (m-by-n).

Equations

Algorithm

Uses SLICOT SB02OD and SG02AD by courtesy of NICONET e.V.

See also: care, lqr, dlqr, kalman.

13.3 dlyap

$$x = dlyap (a, b)$$
 [Function File]
 $x = dlyap (a, b, c)$ [Function File]
 $x = dlyap (a, b, [], e)$ [Function File]
Solve discrete-time Lyapunov or Sylvester equations.

Equations

Algorithm

Uses SLICOT SB03MD, SB04QD and SG03AD by courtesy of NICONET e.V.

See also: dlyapchol, lyap, lyapchol.

13.4 dlyapchol

u = dlyapchol (a, b) [Function File] u = dlyapchol (a, b, e) [Function File]

Compute Cholesky factor of discrete-time Lyapunov equations.

Equations

Algorithm

Uses SLICOT SB03OD and SG03BD by courtesy of NICONET e.V.

See also: dlyap, lyap, lyapchol.

13.5 lyap

$$x = lyap (a, b)$$
 [Function File]
 $x = lyap (a, b, c)$ [Function File]
 $x = lyap (a, b, [], e)$ [Function File]

Solve continuous-time Lyapunov or Sylvester equations.

Equations

Algorithm

Uses SLICOT SB03MD, SB04MD and SG03AD by courtesy of NICONET e.V.

See also: lyapchol, dlyap, dlyapchol.

13.6 lyapchol

$$u = \text{lyapchol } (a, b)$$
 [Function File] $u = \text{lyapchol } (a, b, e)$ [Function File]

Compute Cholesky factor of continuous-time Lyapunov equations.

Equations

Algorithm

Uses SLICOT SB03OD and SG03BD by courtesy of NICONET e.V.

See also: lyap, dlyap, dlyapchol.

14 Model Reduction

14.1 bstmodred

[Gr, info] = bstmodred (G, ...) [Function File] [Gr, info] = bstmodred (G, nr, ...) [Function File] [Gr, info] = bstmodred (G, opt, ...) [Function File] [Gr, info] = bstmodred (G, nr, opt, ...) [Function File]

Model order reduction by Balanced Stochastic Truncation (BST) method. The aim of model reduction is to find an LTI system Gr of order nr (nr < n) such that the input-output behaviour of Gr approximates the one from original system G.

BST is a relative error method which tries to minimize

$$||G^{-1}(G - G_r)||_{\infty} = min$$

Inputs

G LTI model to be reduced.

nr The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Gr Reduced order state-space model.

info Struct containing additional information.

info.n The order of the original system G.

info.ns The order of the alpha-stable subsystem of the original system G.

info.hsv The Hankel singular values of the phase system corresponding to the

alpha-stable part of the original system G. The ns Hankel singular

values are ordered decreasingly.

info.nu The order of the alpha-unstable subsystem of both the original sys-

tem G and the reduced-order system Gr.

info.nr The order of the obtained reduced order system Gr.

Option Keys and Values

'order', 'nr'

The desired order of the resulting reduced order system Gr. If not specified, nr is the sum of NU and the number of Hankel singular values greater than MAX(TOL1,NS*EPS); nr can be further reduced to ensure that HSV(NR-NU) > HSV(NR+1-NU).

'method' Approximation method for the H-infinity norm. Valid values corresponding to this key are:

'sr-bta', 'b'

Use the square-root Balance & Truncate method.

'bfsr-bta', 'f'

Use the balancing-free square-root Balance & Truncate method. Default method.

'sr-spa', 's'

Use the square-root Singular Perturbation Approximation method.

'bfsr-spa', 'p'

Use the balancing-free square-root Singular Perturbation Approximation method.

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix G.A. For a continuous-time system, ALPHA ≤ 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time system, $0 \leq ALPHA \leq 1$ represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time systems and 1 for discrete-time systems.

'beta' Use [G, beta*I] as new system G to combine absolute and relative error methods. BETA > 0 specifies the absolute/relative error weighting parameter. A large positive value of BETA favours the minimization of the absolute approximation error, while a small value of BETA is appropriate for the minimization of the relative error. BETA = 0 means a pure relative error method and can be used only if $\operatorname{rank}(G.D) = \operatorname{rows}(G.D)$ which means that the feedthrough matrice must not be $\operatorname{rank-deficient}$. Default value is 0.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of reduced system. For model reduction, the recommended value of tol1 lies in the interval [0.00001, 0.001]. tol1 < 1. If tol1 <= 0 on entry, the used default value is tol1 = NS*EPS, where NS is the number of ALPHA-stable eigenvalues of A and EPS is the machine precision. If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the phase system (see METHOD) corresponding to the ALPHA-stable part of the given system. The recommended value is TOL2 = NS*EPS. TOL2 <= TOL1 < 1. This value is used by default if 'tol2' is not specified or if TOL2 <= 0 on entry.

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on system G prior to order reduction. Default value is true if G.scaled == false and false if G.scaled == true. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the **prescale** command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

BST is often suitable to perform model reduction in order to obtain low order design models for controller synthesis.

Approximation Properties:

- Guaranteed stability of reduced models
- Approximates simultaneously gain and phase
- Preserves non-minimum phase zeros
- Guaranteed a priori error bound

$$||G^{-1}(G - G_r)||_{\infty} \le 2\sum_{j=r+1}^{n} 1 + \sigma_j 1 - \sigma_j - 1$$

Algorithm

Uses SLICOT AB09HD by courtesy of NICONET e.V.

14.2 btamodred

[Gr, info] = btamodred (G, ...) [Function File] [Gr, info] = btamodred (G, nr, ...) [Function File] [Gr, info] = btamodred (G, opt, ...) [Function File] [Gr, info] = btamodred (G, nr, opt, ...) [Function File]

Model order reduction by frequency weighted Balanced Truncation Approximation (BTA) method. The aim of model reduction is to find an LTI system Gr of order nr (nr < n) such that the input-output behaviour of Gr approximates the one from original system G.

BTA is an absolute error method which tries to minimize

$$||G - G_r||_{\infty} = min$$

$$||V(G-G_r)W||_{\infty} = min$$

where V and W denote output and input weightings.

Inputs

G LTI model to be reduced.

nr The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Gr Reduced order state-space model.

info Struct containing additional information.

info.n The order of the original system G.

info.ns The order of the alpha-stable subsystem of the original system G.

info.hsv The Hankel singular values of the alpha-stable part of the original

system G, ordered decreasingly.

info.nu The order of the alpha-unstable subsystem of both the original sys-

tem G and the reduced-order system Gr.

info.nr The order of the obtained reduced order system Gr.

Option Keys and Values

'order', 'nr'

The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically such that states with Hankel singular values info.hsv > tol1 are retained.

'left', 'output'

LTI model of the left/output frequency weighting V. Default value is an identity matrix.

'right', 'input'

LTI model of the right/input frequency weighting W. Default value is an identity matrix.

'method' Approximation method for the L-infinity norm to be used as follows:

'sr', 'b' Use the square-root Balance & Truncate method.

'bfsr', 'f' Use the balancing-free square-root Balance & Truncate method. Default method.

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix G.A. For a continuous-time system, ALPHA <= 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time system, 0 <= ALPHA <= 1 represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time systems and 1 for discrete-time systems.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced model. For model reduction, the recommended value of tol1 is c*info.hsv(1), where c lies in the interval [0.00001, 0.001]. Default value is info.ns*eps*info.hsv(1). If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the ALPHA-stable part of the given model. TOL2 <= TOL1. If not specified, ns*eps*info.hsv(1) is chosen.

'gram-ctrb'

Specifies the choice of frequency-weighted controllability Grammian as follows:

'standard' Choice corresponding to a combination method [4] of the approaches of Enns [1] and Lin-Chiu [2,3]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified combination method of [4].

'gram-obsv'

Specifies the choice of frequency-weighted observability Grammian as follows:

'standard' Choice corresponding to a combination method [4] of the approaches of Enns [1] and Lin-Chiu [2,3]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified combination method of [4].

'alpha-ctrb'

Combination method parameter for defining the frequency-weighted controllability Grammian. $abs(alphac) \le 1$. If alphac = 0, the choice of Grammian corresponds to the method of Enns [1], while if alphac = 1, the choice of Grammian corresponds to the method of Lin and Chiu [2,3]. Default value is 0.

'alpha-obsv'

Combination method parameter for defining the frequency-weighted observability Grammian. $abs(alphao) \le 1$. If alphao = 0, the choice of Grammian corresponds to the method of Enns [1], while if alphao = 1, the choice of Grammian corresponds to the method of Lin and Chiu [2,3]. Default value is 0.

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on system G prior to order reduction. This is done by state transformations. Default value is true if G.scaled == false and false if G.scaled == true. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the prescale command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

Approximation Properties:

- Guaranteed stability of reduced models
- Lower guaranteed error bound
- Guaranteed a priori error bound

$$\sigma_{r+1} \le ||(G - G_r)||_{\infty} \le 2 \sum_{j=r+1}^{n} \sigma_j$$

References

- [1] Enns, D. Model reduction with balanced realizations: An error bound and a frequency weighted generalization. Proc. 23-th CDC, Las Vegas, pp. 127-132, 1984.
- [2] Lin, C.-A. and Chiu, T.-Y. Model reduction via frequency-weighted balanced realization. Control Theory and Advanced Technology, vol. 8, pp. 341-351, 1992.
- [3] Sreeram, V., Anderson, B.D.O and Madievski, A.G. New results on frequency weighted balanced reduction technique. Proc. ACC, Seattle, Washington, pp. 4004-4009, 1995.
- [4] Varga, A. and Anderson, B.D.O. Square-root balancing-free methods for the frequency-weighted balancing related model reduction. (report in preparation)

Algorithm

Uses SLICOT AB09ID by courtesy of NICONET e.V.

14.3 hnamodred

[Gr, info] = hnamodred(G,)	[Function File]
[Gr, info] = hnamodred (G, nr,)	[Function File]
[Gr, info] = hnamodred (G, opt,)	[Function File]
[Gr, info] = hnamodred (G, nr, opt,)	[Function File]

Model order reduction by frequency weighted optimal Hankel-norm (HNA) method. The aim of model reduction is to find an LTI system Gr of order nr (nr < n) such that the input-output behaviour of Gr approximates the one from original system G.

HNA is an absolute error method which tries to minimize

$$||G - G_r||_H = min$$

$$||V (G - G_r) W||_H = min$$

where V and W denote output and input weightings.

Inputs

G LTI model to be reduced.

nr The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically according to the description of key "order".

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Gr Reduced order state-space model.

info Struct containing additional information.

info.n The order of the original system G.

info.ns The order of the alpha-stable subsystem of the original system G.

info.hsv The Hankel singular values corresponding to the projection op(V)*G1*op(W), where G1 denotes the alpha-stable part of the original system G. The ns Hankel singular values are ordered

decreasingly.

info.nu The order of the alpha-unstable subsystem of both the original sys-

tem G and the reduced-order system Gr.

info.nr The order of the obtained reduced order system Gr.

Option Keys and Values

'order', 'nr'

The desired order of the resulting reduced order system Gr. If not specified, nr is the sum of info.nu and the number of Hankel singular values greater than max(toll, ns*eps*info.hsv(1);

'method' Specifies the computational approach to be used. Valid values corresponding to this key are:

'descriptor'

Use the inverse free descriptor system approach.

'standard' Use the inversion based standard approach.

'auto' Switch automatically to the inverse free descriptor approach in case of badly conditioned feedthrough matrices in V or W. Default method.

'left', 'v' LTI model of the left/output frequency weighting. The weighting must be antistable. $||V(G-G_r)...||_H = min$

'right', 'w' LTI model of the right/input frequency weighting. The weighting must be antistable. $||\dots(G-G_r)W||_H=min$

'left-inv', 'inv-v'

LTI model of the left/output frequency weighting. The weighting must have only antistable zeros. $||inv(V)|(G-G_r)...||_H = min$

'right-inv', 'inv-w'

LTI model of the right/input frequency weighting. The weighting must have only antistable zeros. $|| \dots (G - G_r) inv(W)||_H = min$

'left-conj', 'conj-v'

LTI model of the left/output frequency weighting. The weighting must be stable. $||conj(V)|(G-G_r)...||_H = min$

'right-conj', 'conj-w'

LTI model of the right/input frequency weighting. The weighting must be stable. $|| \dots (G - G_r) \ conj(W)||_H = min$

'left-conj-inv', 'conj-inv-v'

LTI model of the left/output frequency weighting. The weighting must be minimum-phase. $||conj(inv(V))| (G - G_r) \dots ||_H = min$

'right-conj-inv', 'conj-inv-w'

LTI model of the right/input frequency weighting. The weighting must be minimum-phase. $|| \dots (G - G_r) conj(inv(W))||_H = min$

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix G.A. For a continuous-time system, ALPHA <= 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time system, 0 <= ALPHA <= 1 represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time systems and 1 for discrete-time systems.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced model. For model reduction, the recommended value of tol1 is c*info.hsv(1), where c lies in the interval [0.00001, 0.001]. tol1 < 1. If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the ALPHA-stable part of the given model. $tol2 \le tol1 \le 1$. If not specified, ns*eps*info.hsv(1) is chosen.

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on system G prior to order reduction. Default value is true if G.scaled == false and false if G.scaled == true. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the prescale command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

Approximation Properties:

- Guaranteed stability of reduced models
- Lower guaranteed error bound
- Guaranteed a priori error bound

$$\sigma_{r+1} \le ||(G - G_r)||_{\infty} \le 2 \sum_{j=r+1}^n \sigma_j$$

Algorithm

Uses SLICOT AB09JD by courtesy of NICONET e.V.

14.4 spamodred

 $[Gr, info] = \operatorname{spamodred}(G, \ldots)$ [Function File] $[Gr, info] = \operatorname{spamodred}(G, nr, \ldots)$ [Function File] $[Gr, info] = \operatorname{spamodred}(G, opt, \ldots)$ [Function File] $[Gr, info] = \operatorname{spamodred}(G, nr, opt, \ldots)$ [Function File]

Model order reduction by frequency weighted Singular Perturbation Approximation (SPA). The aim of model reduction is to find an LTI system Gr of order nr (nr < n) such that the input-output behaviour of Gr approximates the one from original system G.

SPA is an absolute error method which tries to minimize

$$||G - G_r||_{\infty} = min$$

$$||V(G - G_r)W||_{\infty} = min$$

where V and W denote output and input weightings.

Inputs

G LTI model to be reduced.

nr The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Gr Reduced order state-space model.

info Struct containing additional information.

info.n The order of the original system G.

info.ns The order of the alpha-stable subsystem of the original system G.

system G, ordered decreasingly.

info.nu The order of the alpha-unstable subsystem of both the original sys-

tem G and the reduced-order system Gr.

info.nr The order of the obtained reduced order system Gr.

Option Keys and Values

'order', 'nr'

The desired order of the resulting reduced order system Gr. If not specified, nr is chosen automatically such that states with Hankel singular values info.hsv > tol1 are retained.

'left', 'output'

LTI model of the left/output frequency weighting V. Default value is an identity matrix.

'right', 'input'

LTI model of the right/input frequency weighting W. Default value is an identity matrix.

'method' Approximation method for the L-infinity norm to be used as follows:

'sr', 's' Use the square-root Singular Perturbation Approximation method.

'bfsr', 'p' Use the balancing-free square-root Singular Perturbation Approximation method. Default method.

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix G.A. For a continuous-time system, ALPHA <= 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time system, 0 <= ALPHA <= 1 represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time systems and 1 for discrete-time systems.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced model. For model reduction, the recommended value of tol1 is c*info.hsv(1), where c lies in the interval [0.00001, 0.001]. Default value is info.ns*eps*info.hsv(1). If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the ALPHA-stable part of the given model. TOL2 <= TOL1. If not specified, ns*eps*info.hsv(1) is chosen.

'gram-ctrb

Specifies the choice of frequency-weighted controllability Grammian as follows:

'standard' Choice corresponding to a combination method [4] of the approaches of Enns [1] and Lin-Chiu [2,3]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified combination method of [4].

'gram-obsv'

Specifies the choice of frequency-weighted observability Grammian as follows:

'standard' Choice corresponding to a combination method [4] of the approaches of Enns [1] and Lin-Chiu [2,3]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified combination method of [4].

'alpha-ctrb'

Combination method parameter for defining the frequency-weighted controllability Grammian. $abs(alphac) \le 1$. If alphac = 0, the choice of Grammian corresponds to the method of Enns [1], while if alphac = 1, the choice of Grammian corresponds to the method of Lin and Chiu [2,3]. Default value is 0.

'alpha-obsv'

Combination method parameter for defining the frequency-weighted observability Grammian. $abs(alphao) \le 1$. If alphao = 0, the choice of Grammian corresponds to the method of Enns [1], while if alphao = 1, the choice of Grammian corresponds to the method of Lin and Chiu [2,3]. Default value is 0.

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on system G prior to order reduction. Default value is true if G.scaled == false and false if G.scaled == true. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the prescale command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

References

- [1] Enns, D. Model reduction with balanced realizations: An error bound and a frequency weighted generalization. Proc. 23-th CDC, Las Vegas, pp. 127-132, 1984.
- [2] Lin, C.-A. and Chiu, T.-Y. Model reduction via frequency-weighted balanced realization. Control Theory and Advanced Technology, vol. 8, pp. 341-351, 1992.
- [3] Sreeram, V., Anderson, B.D.O and Madievski, A.G. New results on frequency weighted balanced reduction technique. Proc. ACC, Seattle, Washington, pp. 4004-4009, 1995.

[4] Varga, A. and Anderson, B.D.O. Square-root balancing-free methods for the frequency-weighted balancing related model reduction. (report in preparation)

Algorithm

Uses SLICOT AB09ID by courtesy of NICONET e.V.

15 Controller Reduction

15.1 btaconred

[Kr, info] = btaconred (G, K,)	[Function File]
[Kr, info] = btaconred (G, K, ncr,)	[Function File]
[Kr, info] = btaconred (G, K, opt,)	[Function File]
[Kr, info] = btaconred (G, K, ncr, opt,)	[Function File]

Controller reduction by frequency-weighted Balanced Truncation Approximation (BTA). Given a plant G and a stabilizing controller K, determine a reduced order controller Kr such that the closed-loop system is stable and closed-loop performance is retained.

The algorithm tries to minimize the frequency-weighted error

$$||V(K-K_r)W||_{\infty} = min$$

where V and W denote output and input weightings.

Inputs

G LTI model of the plant. It has m inputs, p outputs and n states.

K LTI model of the controller. It has p inputs, m outputs and nc states.

ncr The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

opt

Kr State-space model of reduced order controller.

info Struct containing additional information.

info.ncr The order of the obtained reduced order controller Kr.

info.ncs The order of the alpha-stable part of original controller K.

info.hsvc The Hankel singular values of the alpha-stable part of K. The ncs Hankel singular values are ordered decreasingly.

Option Keys and Values

'order', 'ncr'

The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically such that states with Hankel singular values info.hsvc > tol1 are retained.

'method' Order reduction approach to be used as follows:

'sr', 'b' Use the square-root Balance & Truncate method.

'bfsr', 'f' Use the balancing-free square-root Balance & Truncate method. Default method.

'weight' Specifies the type of frequency-weighting as follows:

'none' No weightings are used (V = I, W = I).

'left', 'output'

Use stability enforcing left (output) weighting

$$V = (I - GK)^{-1}G, \qquad W = I$$

'right', 'input'

Use stability enforcing right (input) weighting

$$V = I, \qquad W = (I - GK)^{-1}G$$

'both', 'performance'

Use stability and performance enforcing weightings

$$V = (I - GK)^{-1}G, \qquad W = (I - GK)^{-1}$$

Default value.

'feedback' Specifies whether K is a positive or negative feedback controller:

'+' Use positive feedback controller. Default value.

'-' Use negative feedback controller.

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix K.A. For a continuous-time controller, ALPHA ≤ 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time controller, $0 \leq ALPHA \leq 1$ represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time controllers and 1 for discrete-time controllers.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced controller. For model reduction, the recommended value of tol1 is c*info.hsvc(1), where c lies in the interval [0.00001, 0.001]. Default value is info.ncs*eps*info.hsvc(1). If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the ALPHA-stable part of the given controller. TOL2 <= TOL1. If not specified, ncs*eps*info.hsvc(1) is chosen.

'gram-ctrb'

Specifies the choice of frequency-weighted controllability Grammian as follows:

'standard' Choice corresponding to standard Enns' method [1]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified Enns' method of [2].

'gram-obsv'

Specifies the choice of frequency-weighted observability Grammian as follows:

'standard' Choice corresponding to standard Enns' method [1]. Default method.

'enhanced'

Choice corresponding to the stability enhanced modified Enns' method of [2].

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on G and K prior to order reduction. Default value is false if both G.scaled == true, K.scaled == true and true otherwise. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the **prescale** command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

Algorithm

Uses SLICOT SB16AD by courtesy of NICONET e.V.

15.2 cfconred

```
 [Kr, info] = cfconred (G, F, L, ...)  [Function File]  [Kr, info] = cfconred (G, F, L, ncr, ...)  [Function File]  [Kr, info] = cfconred (G, F, L, opt, ...)  [Function File]  [Kr, info] = cfconred (G, F, L, ncr, opt, ...)  [Function File]
```

Reduction of state-feedback-observer based controller by coprime factorization (CF). Given a plant G, state feedback gain F and full observer gain L, determine a reduced order controller Kr.

Inputs

G LTI model of the open-loop plant (A,B,C,D). It has m inputs, p outputs and n states.

F Stabilizing state feedback matrix (m-by-n).

L Stabilizing observer gain matrix (n-by-p).

ncr The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Kr State-space model of reduced order controller.

info Struct containing additional information.

info.hsv The Hankel singular values of the extended system?!?. The n Hankel singular values are ordered decreasingly.

info.ncr The order of the obtained reduced order controller Kr.

Option Keys and Values

'order', 'ncr'

The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically such that states with Hankel singular values info.hsv > tol1 are retained.

'method' Order reduction approach to be used as follows:

'sr-bta', 'b'

Use the square-root Balance & Truncate method.

'bfsr-bta', 'f'

Use the balancing-free square-root Balance & Truncate method. Default method.

'sr-spa', 's'

Use the square-root Singular Perturbation Approximation method.

'bfsr-spa', 'p'

Use the balancing-free square-root Singular Perturbation Approximation method.

'cf' Specifies whether left or right coprime factorization is to be used as follows:

'left', 'l' Use left coprime factorization. Default method.

'right', 'r' Use right coprime factorization.

'feedback' Specifies whether F and L are fed back positively or negatively:

'+' A+BK and A+LC are both Hurwitz matrices.

A-BK and A-LC are both Hurwitz matrices. Default value.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced system. For model reduction, the recommended value of tol1 is c*info.hsv(1), where c lies in the interval [0.00001, 0.001]. Default value is n*eps*info.hsv(1). If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the coprime factorization controller. TOL2 <= TOL1. If not specified, n*eps*info.hsv(1) is chosen.

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on system G prior to order reduction. Default value is true if G.scaled == false and false if G.scaled == true. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the **prescale** command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

Algorithm

Uses SLICOT SB16BD by courtesy of NICONET e.V.

15.3 fwcfconred

```
 [Kr, info] = fwcfconred (G, F, L, ...)  [Function File]  [Kr, info] = fwcfconred (G, F, L, ncr, ...)  [Function File]  [Kr, info] = fwcfconred (G, F, L, opt, ...)  [Function File]  [Kr, info] = fwcfconred (G, F, L, ncr, opt, ...)  [Function File]
```

Reduction of state-feedback-observer based controller by frequency-weighted coprime factorization (FW CF). Given a plant G, state feedback gain F and full observer gain L, determine a reduced order controller Kr by using stability enforcing frequency weights.

Inputs

G LTI model of the open-loop plant (A,B,C,D). It has m inputs, p outputs and n states.

F Stabilizing state feedback matrix (m-by-n).

L Stabilizing observer gain matrix (n-by-p).

ncr The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Kr State-space model of reduced order controller.

info Struct containing additional information.

info.hsv The Hankel singular values of the extended system?!?. The n Hankel singular values are ordered decreasingly.

info.ncr The order of the obtained reduced order controller Kr.

Option Keys and Values

'order', 'ncr'

The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically such that states with Hankel singular values info.hsv > tol1 are retained.

'method' Order reduction approach to be used as follows:

'sr', 'b' Use the square-root Balance & Truncate method.

'bfsr', 'f' Use the balancing-free square-root Balance & Truncate method. Default method.

'cf' Specifies whether left or right coprime factorization is to be used as follows:

'left', 'l' Use left coprime factorization.

'right', 'r' Use right coprime factorization. Default method.

'feedback' Specifies whether F and L are fed back positively or negatively:

'+' A+BK and A+LC are both Hurwitz matrices.

'-' A-BK and A-LC are both Hurwitz matrices. Default value.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced system. For model reduction, the recommended value of tol1 is c*info.hsv(1), where c lies in the interval [0.00001, 0.001]. Default value is n*eps*info.hsv(1). If 'order' is specified, the value of tol1 is ignored.

Algorithm

Uses SLICOT SB16CD by courtesy of NICONET e.V.

15.4 spaconred

```
 [Kr, info] = \operatorname{spaconred}(G, K, \ldots)  [Function File]  [Kr, info] = \operatorname{spaconred}(G, K, ncr, \ldots)  [Function File]  [Kr, info] = \operatorname{spaconred}(G, K, opt, \ldots)  [Function File]  [Kr, info] = \operatorname{spaconred}(G, K, ncr, opt, \ldots)  [Function File]
```

Controller reduction by frequency-weighted Singular Perturbation Approximation (SPA). Given a plant G and a stabilizing controller K, determine a reduced order controller Kr such that the closed-loop system is stable and closed-loop performance is retained.

The algorithm tries to minimize the frequency-weighted error

$$||V(K - K_r)W||_{\infty} = min$$

where V and W denote output and input weightings.

Inputs

G LTI model of the plant. It has m inputs, p outputs and n states.

K LTI model of the controller. It has p inputs, m outputs and nc states.

ncr The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically according to the description of key 'order'.

... Optional pairs of keys and values. "key1", value1, "key2", value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

Kr State-space model of reduced order controller.

info Struct containing additional information.

info.ncr The order of the obtained reduced order controller Kr.

info.ncs The order of the alpha-stable part of original controller K.

info.hsvc The Hankel singular values of the alpha-stable part of K. The ncs Hankel singular values are ordered decreasingly.

Option Keys and Values

'order', 'ncr'

The desired order of the resulting reduced order controller Kr. If not specified, ncr is chosen automatically such that states with Hankel singular values info.hsvc > tol1 are retained.

'method' Order reduction approach to be used as follows:

'sr', 's' Use the square-root Singular Perturbation Approximation method.

'bfsr', 'p' Use the balancing-free square-root Singular Perturbation Approximation method. Default method.

'weight' Specifies the type of frequency-weighting as follows:

'none' No weightings are used (V = I, W = I).

'left', 'output'

Use stability enforcing left (output) weighting

$$V = (I - GK)^{-1}G, \qquad W = I$$

'right', 'input'

Use stability enforcing right (input) weighting

$$V = I, \qquad W = (I - GK)^{-1}G$$

'both', 'performance'

Use stability and performance enforcing weightings

$$V = (I - GK)^{-1}G, \qquad W = (I - GK)^{-1}$$

Default value.

'feedback' Specifies whether K is a positive or negative feedback controller:

'+' Use positive feedback controller. Default value.

'-' Use negative feedback controller.

'alpha' Specifies the ALPHA-stability boundary for the eigenvalues of the state dynamics matrix K.A. For a continuous-time controller, ALPHA ≤ 0 is the boundary value for the real parts of eigenvalues, while for a discrete-time controller, $0 \leq ALPHA \leq 1$ represents the boundary value for the moduli of eigenvalues. The ALPHA-stability domain does not include the boundary. Default value is 0 for continuous-time controllers and 1 for discrete-time controllers.

'tol1' If 'order' is not specified, tol1 contains the tolerance for determining the order of the reduced controller. For model reduction, the recommended value of tol1 is c*info.hsvc(1), where c lies in the interval [0.00001, 0.001]. Default value is info.ncs*eps*info.hsvc(1). If 'order' is specified, the value of tol1 is ignored.

'tol2' The tolerance for determining the order of a minimal realization of the ALPHA-stable part of the given controller. TOL2 <= TOL1. If not specified, ncs*eps*info.hsvc(1) is chosen.

'gram-ctrb

Specifies the choice of frequency-weighted controllability Grammian as follows:

'standard' Choice corresponding to standard Enns' method [1]. Default method. 'enhanced'

Choice corresponding to the stability enhanced modified Enns' method of [2].

'gram-obsy'

Specifies the choice of frequency-weighted observability Grammian as follows:

'standard' Choice corresponding to standard Enns' method [1]. Default method. 'enhanced'

Choice corresponding to the stability enhanced modified Enns' method of [2].

'equil', 'scale'

Boolean indicating whether equilibration (scaling) should be performed on G and K prior to order reduction. Default value is false if both ${\tt G.scaled == true}$, ${\tt K.scaled == true}$ and true otherwise. Note that for MIMO models, proper scaling of both inputs and outputs is of utmost importance. The input and output scaling can **not** be done by the equilibration option or the **prescale** command because these functions perform state transformations only. Furthermore, signals should not be scaled simply to a certain range. For all inputs (or outputs), a certain change should be of the same importance for the model.

Algorithm

Uses SLICOT SB16AD by courtesy of NICONET e.V.

16 Experimental Data Handling

16.1 iddata

```
\begin{array}{lll} \textit{dat} &= \textit{iddata} \; (\textit{y}) & & [\textit{Function File}] \\ \textit{dat} &= \textit{iddata} \; (\textit{y}, \, \textit{u}) & & [\textit{Function File}] \\ \textit{dat} &= \textit{iddata} \; (\textit{y}, \, \textit{u}, \, \textit{tsam}, \, \ldots) & & [\textit{Function File}] \\ \textit{dat} &= \textit{iddata} \; (\textit{y}, \, \textit{u}, \, [], \, \ldots) & & [\textit{Function File}] \end{array}
```

Create identification dataset of output and input signals.

Inputs

Real matrix containing the output signal in time-domain. For a system with p outputs and n samples, y is a n-by-p matrix. For data from multiple experiments, y becomes a e-by-1 or 1-by-e cell vector of n(i)-by-p matrices, where e denotes the number of experiments and n(i) the individual number of samples for each experiment.

Real matrix containing the input signal in time-domain. For a system with m inputs and n samples, u is a n-by-m matrix. For data from multiple experiments, u becomes a e-by-1 or 1-by-e cell vector of $\mathbf{n}(\mathbf{i})$ -by-m matrices, where e denotes the number of experiments and $\mathbf{n}(\mathbf{i})$ the individual number of samples for each experiment. If u is not specified or an empy element [] is passed, dat becomes a time series dataset.

Sampling time. If not specified, default value -1 (unspecified) is taken. For multi-experiment data, tsam becomes a e-by-1 or 1-by-e cell vector containing individual sampling times for each experiment. If a scalar tsam is provided, then all experiments have the same sampling time.

... Optional pairs of properties and values.

Outputs

dat identification dataset.

Option Keys and Values

'expname' The name of the experiments in dat. Cell vector of length e containing strings. Default names are {'exp1', 'exp2', ...}

'y' Output signals. See 'Inputs' for details.

'outname' The name of the output channels in dat. Cell vector of length p containing strings. Default names are {'y1', 'y2', ...}

'outunit' The units of the output channels in dat. Cell vector of length p containing strings.

'u' Input signals. See 'Inputs' for details.

'inname' The name of the input channels in dat. Cell vector of length m containing strings.

Default names are {'u1', 'u2', ...}

'inunit' The units of the input channels in dat. Cell vector of length m containing strings.

'tsam' Sampling time. See 'Inputs' for details.

'timeunit' The units of the sampling times in dat. Cell vector of length e containing strings.

'name' String containing the name of the dataset.

'notes' String or cell of string containing comments.

'userdata' Any data type.

16.2 @iddata/cat

dat = cat (dim, dat1, dat2, ...)

[Function File]

Concatenate iddata sets along dimension dim.

Inputs

dim Dimension along which the concatenation takes place.

- Concatenate samples. The samples are concatenated in the following way: dat.y{e} = [dat1.y{e}; dat2.y{e}; ...] dat.u{e} = [dat1.u{e}; dat2.u{e}; ...] where e denotes the experiment. The number of experiments, outputs and inputs must be equal for all datasets. Equivalent to vertcat.
- Concatenate inputs and outputs. The outputs and inputs are concatenated in the following way: dat.y{e} = [dat1.y{e}, dat2.y{e}, ...] dat.u{e} = [dat1.u{e}, dat2.u{e}, ...] where e denotes the experiment. The number of experiments and samples must be equal for all datasets. Equivalent to horzcat.
- Concatenate experiments. The experiments are concatenated in the following way: dat.y = [dat1.y; dat2.y; ...] dat.u = [dat1.u; dat2.u; ...] The number of outputs and inputs must be equal for all datasets. Equivalent to merge.

 $dat1, dat2, \ldots$

iddata sets to be concatenated.

Outputs

dat Concatenated iddata set.

See also: horzcat, merge, vertcat.

16.3 @iddata/detrend

```
dat = detrend (dat)
dat = detrend (dat, ord)
```

[Function File]

[Function File]

Detrend outputs and inputs of dataset *dat* by removing the best fit of a polynomial of order ord. If ord is not specified, default value 0 is taken. This corresponds to removing a constant.

16.4 @iddata/diff

```
dat = diff (dat)
dat = diff (dat, k)
```

[Function File]

[Function File]

Return k-th difference of outputs and inputs of dataset dat. If k is not specified, default value 1 is taken.

16.5 @iddata/fft

dat = fft (dat)
dat = fft (dat, n)

[Function File]

[Function File]

Transform iddata objects from time to frequency domain using a Fast Fourier Transform (FFT) algorithm.

Inputs

dat iddata set containing signals in time-domain.

n

Length of the FFT transformations. If n does not match the signal length, the signals in dat are shortened or padded with zeros. n is a vector with as many elements as there are experiments in dat or a scalar with a common length for all experiments. If not specified, the signal lengths are taken as default values.

Outputs

dat

iddata identification dataset in frequency-domain. In order to preserve signal power and noise level, the FFTs are normalized by dividing each transform by the square root of the signal length. The frequency values are distributed equally from 0 to the Nyquist frequency. The Nyquist frequency is only included for even signal lengths.

16.6 @iddata/filter

```
dat = filter (dat, sys) [Function File]
dat = filter (dat, b, a) [Function File]
```

Filter output and input signals of dataset dat. The filter is specified either by LTI system sys or by transfer function polynomials b and a as described in the help text of the built-in filter command. Type help filter for more information.

Inputs

dat identification dataset containing signals in time-domain.

sys LTI object containing the discrete-time filter.

b Numerator polynomial of the discrete-time filter. Must be a row vector containing the coefficients of the polynomial in ascending powers of z^-1.

a Denominator polynomial of the discrete-time filter. Must be a row vector containing the coefficients of the polynomial in ascending powers of z^-1.

Outputs

dat iddata identification dataset with filtered output and input signals.

16.7 @iddata/get

```
get (dat)

value = get (dat, "property")

[val1, val2, ...] = get (dat, "prop1", "prop2", ...)

Access property values of iddata objects. Type get(dat) to display a list of available properties.
```

16.8 @iddata/ifft

```
dat = ifft (dat) [Function File]
```

Transform iddata objects from frequency to time domain.

Inputs

dat

iddata set containing signals in frequency domain. The frequency values must be distributed equally from 0 to the Nyquist frequency. The Nyquist frequency is only included for even signal lengths.

Outputs

dat

iddata identification dataset in time domain. In order to preserve signal power and noise level, the FFTs are normalized by multiplying each transform by the square root of the signal length.

16.9 @iddata/merge

```
dat = merge (dat1, dat2, ...)
```

[Function File]

[Function File]

[Function File]

Concatenate experiments of iddata datasets. The experiments are concatenated in the following way: dat.y = [dat1.y; dat2.y; ...] dat.u = [dat1.u; dat2.u; ...] The number of outputs and inputs must be equal for all datasets.

16.10 @iddata/nkshift

```
dat = nkshift (dat, nk)
dat = nkshift (dat, nk, 'append')
```

Shift input channels of dataset dat according to integer nk. A positive value of nk means that the input channels are delayed nk samples. By default, both input and output signals are shortened by nk samples. If a third argument 'append' is passed, the output signals are left untouched while nk zeros are appended to the (shortened) input signals such that the number of samples in dat remains constant.

16.11 @iddata/plot

```
plot (dat) [Function File] plot (dat, exp) [Function File]
```

Plot signals of iddata identification datasets on the screen. The signals are plotted experiment-wise, either in time- or frequency-domain. For multi-experiment datasets, press any key to switch to the next experiment. If the plot of a single experiment should be saved by the print command, use plot(dat,exp), where exp denotes the desired experiment.

16.12 @iddata/resample

```
\begin{array}{ll} \textit{dat} = \textit{resample} \; (\textit{dat}, \, p, \, q) & [\textit{Function File}] \\ \textit{dat} = \textit{resample} \; (\textit{dat}, \, p, \, q, \, n) & [\textit{Function File}] \\ \textit{dat} = \textit{resample} \; (\textit{dat}, \, p, \, q, \, h) & [\textit{Function File}] \end{array}
```

Change the sample rate of the output and input signals in dataset dat by a factor of p/q. This is performed using a polyphase algorithm. The anti-aliasing FIR filter can be specified as follows: Either by order n (scalar) with default value 0. The band edges are then chosen automatically. Or by impulse response h (vector). Requires the signal package to be installed.

Algorithm

Uses commands fir1 and resample from the signal package.

References

- [1] J. G. Proakis and D. G. Manolakis, Digital Signal Processing: Principles, Algorithms, and Applications, 4th ed., Prentice Hall, 2007. Chap. 6
- [2] A. V. Oppenheim, R. W. Schafer and J. R. Buck, Discrete-time signal processing, Signal processing series, Prentice-Hall, 1999

16.13 @iddata/set

```
set (dat) [Function File] set (dat, "property", value, ...)
```

dat = set (dat, "property", value, ...)

[Function File]

Set or modify properties of iddata objects. If no return argument dat is specified, the modified LTI object is stored in input argument dat. set can handle multiple properties in one call: set (dat, 'prop1', val1, 'prop2', val2, 'prop3', val3). set (dat) prints a list of the object's property names.

16.14 @iddata/size

nvec = size (dat)
ndim = size (dat, dim)
[n, p, m, e] = size (dat)

[Function File] [Function File]

Function File

Return dimensions of iddata set dat.

Inputs

dat iddata set.

dim If given a second argument, size will return the size of the corresponding dimen-

sion.

Outputs

nvec Row vector. The first element is the total number of samples (rows of dat.y and

dat.u). The second element is the number of outputs (columns of dat.y) and the third element the number of inputs (columns of dat.u). The fourth element is

the number of experiments.

ndim Scalar value. The size of the dimension dim.

n Row vector containing the number of samples of each experiment.

p Number of outputs.

m Number of inputs.

e Number of experiments.

17 System Identification

17.1 arx

[sys, x0] = arx (dat, n,)	[Function File]
[sys, x0] = arx (dat, n, opt,)	[Function File]
[sys, x0] = arx (dat, opt,)	[Function File]
[sys, x0] = arx (dat, 'na', na, 'nb', nb)	[Function File]
Estimate ARX model using QR factorization.	

$$A(q) y(t) = B(q) u(t) + e(t)$$

Inputs

dat iddata identification dataset containing the measurements, i.e. time-domain signals.

n The desired order of the resulting model sys.

... Optional pairs of keys and values. 'key1', value1, 'key2', value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

sys Discrete-time transfer function model. If the second output argument x0 is returned, sys becomes a state-space model.

x0 Initial state vector. If dat is a multi-experiment dataset, x0 becomes a cell vector containing an initial state vector for each experiment.

Option Keys and Values

'na' Order of the polynomial A(q) and number of poles.

'nb' Order of the polynomial B(q)+1 and number of zeros+1. $nb \le na$.

'nk' Input-output delay specified as number of sampling instants. Scalar positive integer. This corresponds to a call to command nkshift, followed by padding the B polynomial with nk leading zeros.

Algorithm

Uses the formulae given in [1] on pages 318-319, 'Solving for the LS Estimate by QR Factorization'. For the initial conditions, SLICOT IB01CD is used by courtesy of NICONET e.V.

References

[1] Ljung, L. (1999) System Identification: Theory for the User: Second Edition. Prentice Hall, New Jersey, USA.

17.2 moen4

```
[sys, x0, info] = moen4 (dat, ...) 
[sys, x0, info] = moen4 (dat, n, ...) 
[sys, x0, info] = moen4 (dat, opt, ...) 
[sys, x0, info] = moen4 (dat, n, opt, ...) 
[sys, x0, info] = moen4 (dat, n, opt, ...) 
[sys, x0, info] = moen4 (dat, n, opt, ...) 
[sys, x0, info] = moen4 (dat, n, opt, ...) 
[sys, x0, info] = moen4 (dat, n, opt, ...)
```

Estimate state-space model using combined subspace method: MOESP algorithm for finding the matrices A and C, and N4SID algorithm for finding the matrices B and D. If no output arguments are given, the singular values are plotted on the screen in order to estimate the system order.

Inputs

dat iddata set containing the measurements, i.e. time-domain signals.

n The desired order of the resulting state-space system sys. If not specified, n is chosen automatically according to the singular values and tolerances.

Optional pairs of keys and values. 'key1', value1, 'key2', value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

sys Discrete-time state-space model.

x0 Initial state vector. If dat is a multi-experiment dataset, x0 becomes a cell vector containing an initial state vector for each experiment.

info Struct containing additional information.

info.K Kalman gain matrix.

info.Q State covariance matrix.

info.Ry Output covariance matrix.

info.S State-output cross-covariance matrix.

info.L Noise variance matrix factor. LL'=Ry.

Option Keys and Values

'n' The desired order of the resulting state-space system sys. s > n > 0.

's' The number of block rows s in the input and output block Hankel matrices to be processed. s > 0. In the MOESP theory, s should be larger than n, the estimated dimension of state vector.

'alg', 'algorithm'

Specifies the algorithm for computing the triangular factor R, as follows:

'C' Cholesky algorithm applied to the correlation matrix of the inputoutput data. Default method.

'F' Fast QR algorithm.

'Q' QR algorithm applied to the concatenated block Hankel matrices.

'tol' Absolute tolerance used for determining an estimate of the system order. If tol >=0, the estimate is indicated by the index of the last singular value greater than or equal to tol. (Singular values less than tol are considered as zero.) When tol=0, an internally computed default value, $tol=s^*eps^*SV(1)$, is used, where SV(1) is the maximal singular value, and eps is the relative machine precision. When tol < 0, the estimate is indicated by the index of the singular value that has the largest logarithmic gap to its successor. Default value is 0.

'rcond' The tolerance to be used for estimating the rank of matrices. If the user sets rcond > 0, the given value of rcond is used as a lower bound for the reciprocal condition number; an m-by-n matrix whose estimated condition number is less than 1/rcond is considered to be of full rank. If the user sets rcond <= 0, then an implicitly computed, default tolerance, defined by rcond = m*n*eps, is used instead, where eps is the relative machine precision. Default value is 0.

'confirm' Specifies whether or not the user's confirmation of the system order estimate is desired, as follows:

true User's confirmation.

false No confirmation. Default value.

'noiseinput'

The desired type of noise input channels.

'n' No error inputs. Default value.

$$x_{k+1} = Ax_k + Bu_k$$

$$y_k = Cx_k + Du_k$$

'e' Return sys as a (p-by-m+p) state-space model with both measured input channels u and noise channels e with covariance matrix Ry.

$$x_{k+1} = Ax_k + Bu_k + Ke_k$$

$$y_k = Cx_k + Du_k + e_k$$

'v' Return sys as a (p-by-m+p) state-space model with both measured input channels u and white noise channels v with identity covariance matrix.

$$x_{k+1} = Ax_k + Bu_k + KLv_k$$

$$y_k = Cx_k + Du_k + Lv_k$$

$$e = Lv, \ LL^T = R_y$$

'k' Return sys as a Kalman predictor for simulation.

$$\widehat{x}_{k+1} = A\widehat{x}_k + Bu_k + K(y_k - \widehat{y}_k)$$

$$\widehat{y}_k = C\widehat{x}_k + Du_k$$

$$\widehat{x}_{k+1} = (A - KC)\widehat{x}_k + (B - KD)u_k + Ky_k$$

$$\widehat{y}_k = C\widehat{x}_k + Du_k + 0y_k$$

Algorithm

Uses SLICOT IB01AD, IB01BD and IB01CD by courtesy of NICONET e.V.

17.3 moesp

```
[sys, x0, info] = moesp (dat, ...) [Function File]

[sys, x0, info] = moesp (dat, n, ...) [Function File]

[sys, x0, info] = moesp (dat, opt, ...) [Function File]

[sys, x0, info] = moesp (dat, n, opt, ...) [Function File]
```

Estimate state-space model using MOESP algorithm. MOESP: Multivariable Output Error State sPace. If no output arguments are given, the singular values are plotted on the screen in order to estimate the system order.

Inputs

dat iddata set containing the measurements, i.e. time-domain signals.

n The desired order of the resulting state-space system sys. If not specified, n is chosen automatically according to the singular values and tolerances.

Optional pairs of keys and values. 'key1', value1, 'key2', value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

sys Discrete-time state-space model.

x0 Initial state vector. If dat is a multi-experiment dataset, x0 becomes a cell vector containing an initial state vector for each experiment.

info Struct containing additional information.

info.K Kalman gain matrix.

info.Q State covariance matrix.

info.Ry Output covariance matrix.

info.S State-output cross-covariance matrix.

info.L Noise variance matrix factor. LL'=Ry.

Option Keys and Values

'n' The desired order of the resulting state-space system sys. s > n > 0.

's' The number of block rows s in the input and output block Hankel matrices to be processed. s > 0. In the MOESP theory, s should be larger than n, the estimated dimension of state vector.

'alg', 'algorithm'

Specifies the algorithm for computing the triangular factor R, as follows:

'C' Cholesky algorithm applied to the correlation matrix of the inputoutput data. Default method.

'F' Fast QR algorithm.

'Q' QR algorithm applied to the concatenated block Hankel matrices.

'tol' Absolute tolerance used for determining an estimate of the system order. If tol >=0, the estimate is indicated by the index of the last singular value greater than or equal to tol. (Singular values less than tol are considered as zero.) When tol=0, an internally computed default value, $tol=s^*eps^*SV(1)$, is used, where SV(1) is the maximal singular value, and eps is the relative machine precision. When tol < 0, the estimate is indicated by the index of the singular value that has the largest logarithmic gap to its successor. Default value is 0.

'rcond' The tolerance to be used for estimating the rank of matrices. If the user sets rcond > 0, the given value of rcond is used as a lower bound for the reciprocal condition number; an m-by-n matrix whose estimated condition number is less than 1/rcond is considered to be of full rank. If the user sets $rcond \le 0$, then an implicitly computed, default tolerance, defined by rcond = m*n*eps, is used instead, where eps is the relative machine precision. Default value is 0.

'confirm' Specifies whether or not the user's confirmation of the system order estimate is desired, as follows:

true User's confirmation.

false No confirmation. Default value.

'noiseinput'

The desired type of noise input channels.

'n' No error inputs. Default value.

$$x_{k+1} = Ax_k + Bu_k$$

$$y_k = Cx_k + Du_k$$

'e' Return sys as a (p-by-m+p) state-space model with both measured input channels u and noise channels e with covariance matrix Ry.

$$x_{k+1} = Ax_k + Bu_k + Ke_k$$

$$y_k = Cx_k + Du_k + e_k$$

'v' Return sys as a (p-by-m+p) state-space model with both measured input channels u and white noise channels v with identity covariance matrix.

$$x_{k+1} = Ax_k + Bu_k + KLv_k$$

$$y_k = Cx_k + Du_k + Lv_k$$

$$e = Lv, \ LL^T = R_y$$

'k' Return sys as a Kalman predictor for simulation.

$$\widehat{x}_{k+1} = A\widehat{x}_k + Bu_k + K(y_k - \widehat{y}_k)$$

$$\widehat{y}_k = C\widehat{x}_k + Du_k$$

$$\widehat{x}_{k+1} = (A - KC)\widehat{x}_k + (B - KD)u_k + Ky_k$$

$$\widehat{y}_k = C\widehat{x}_k + Du_k + 0y_k$$

Algorithm

Uses SLICOT IB01AD, IB01BD and IB01CD by courtesy of NICONET e.V.

17.4 n4sid

```
[sys, x0, info] = n4sid (dat, ...) [Function File]

[sys, x0, info] = n4sid (dat, n, ...) [Function File]

[sys, x0, info] = n4sid (dat, opt, ...) [Function File]

[sys, x0, info] = n4sid (dat, n, opt, ...) [Function File]
```

Estimate state-space model using N4SID algorithm. N4SID: Numerical algorithm for Subspace State Space System IDentification. If no output arguments are given, the singular values are plotted on the screen in order to estimate the system order.

Inputs

dat iddata set containing the measurements, i.e. time-domain signals.

n The desired order of the resulting state-space system sys. If not specified, n is chosen automatically according to the singular values and tolerances.

Optional pairs of keys and values. 'key1', value1, 'key2', value2.

opt Optional struct with keys as field names. Struct opt can be created directly or by command options. opt.key1 = value1, opt.key2 = value2.

Outputs

sys Discrete-time state-space model.

x0 Initial state vector. If dat is a multi-experiment dataset, x0 becomes a cell vector containing an initial state vector for each experiment.

info Struct containing additional information.

info.K Kalman gain matrix.

info.Q State covariance matrix.

info.Ry Output covariance matrix.

info.S State-output cross-covariance matrix.

info.L Noise variance matrix factor. LL'=Ry.

Option Keys and Values

'n' The desired order of the resulting state-space system sys. s > n > 0.

's' The number of block rows s in the input and output block Hankel matrices to be processed. s > 0. In the MOESP theory, s should be larger than n, the estimated dimension of state vector.

'alg', 'algorithm'

Specifies the algorithm for computing the triangular factor R, as follows:

'C' Cholesky algorithm applied to the correlation matrix of the inputoutput data. Default method.

'F' Fast QR algorithm.

'Q' QR algorithm applied to the concatenated block Hankel matrices.

'tol' Absolute tolerance used for determining an estimate of the system order. If tol >=0, the estimate is indicated by the index of the last singular value greater than or equal to tol. (Singular values less than tol are considered as zero.) When tol=0, an internally computed default value, $tol=s^*eps^*SV(1)$, is used, where SV(1) is the maximal singular value, and eps is the relative machine precision. When tol < 0, the estimate is indicated by the index of the singular value that has the largest logarithmic gap to its successor. Default value is 0.

'rcond' The tolerance to be used for estimating the rank of matrices. If the user sets rcond > 0, the given value of rcond is used as a lower bound for the reciprocal condition number; an m-by-n matrix whose estimated condition number is less than 1/rcond is considered to be of full rank. If the user sets rcond <= 0, then an implicitly computed, default tolerance, defined by rcond = m*n*eps, is used instead, where eps is the relative machine precision. Default value is 0.

'confirm' Specifies whether or not the user's confirmation of the system order estimate is desired, as follows:

true User's confirmation.

false No confirmation. Default value.

'noiseinput'

The desired type of noise input channels.

'n' No error inputs. Default value.

$$x_{k+1} = Ax_k + Bu_k$$

$$y_k = Cx_k + Du_k$$

'e' Return sys as a (p-by-m+p) state-space model with both measured input channels u and noise channels e with covariance matrix Ry.

$$x_{k+1} = Ax_k + Bu_k + Ke_k$$

$$y_k = Cx_k + Du_k + e_k$$

'v' Return sys as a (p-by-m+p) state-space model with both measured input channels u and white noise channels v with identity covariance matrix.

$$x_{k+1} = Ax_k + Bu_k + KLv_k$$
$$y_k = Cx_k + Du_k + Lv_k$$

$$e = Lv, \ LL^T = R_u$$

'k' Return sys as a Kalman predictor for simulation.

$$\widehat{x}_{k+1} = A\widehat{x}_k + Bu_k + K(y_k - \widehat{y}_k)$$
$$\widehat{y}_k = C\widehat{x}_k + Du_k$$

$$\widehat{x}_{k+1} = (A - KC)\widehat{x}_k + (B - KD)u_k + Ky_k$$

$$\widehat{y}_k = C\widehat{x}_k + Du_k + 0y_k$$

Algorithm

Uses SLICOT IB01AD, IB01BD and IB01CD by courtesy of NICONET e.V.

18 Overloaded LTI Operators

18.1 @lti/ctranspose

Conjugate transpose or pertransposition of LTI objects. Used by Octave for "sys'". For a transfer-function matrix G, G' denotes the conjugate of G given by G.'(-s) for a continuous-time system or G.'(1/z) for a discrete-time system. The frequency response of the pertransposition of G is the Hermitian (conjugate) transpose of G(jw), i.e. freqresp (G', w) = freqresp (G, w)'. **WARNING:** Do **NOT** use this for dual problems, use the transpose "sys.'" (note the dot) instead.

18.2 @lti/horzcat

Horizontal concatenation of LTI objects. If necessary, object conversion is done by sys_group. Used by Octave for "[sys1, sys2]".

18.3 @lti/inv

Inversion of LTI objects.

18.4 @lti/minus

Binary subtraction of LTI objects. If necessary, object conversion is done by sys_group. Used by Octave for "sys1 - sys2".

18.5 @lti/mldivide

Matrix left division of LTI objects. If necessary, object conversion is done by sys_group in mtimes. Used by Octave for "sys1 \ sys2".

18.6 @lti/mpower

Matrix power of LTI objects. The exponent must be an integer. Used by Octave for "sys^int".

18.7 @lti/mrdivide

Matrix right division of LTI objects. If necessary, object conversion is done by sys_group in mtimes. Used by Octave for "sys1 / sys2".

18.8 @lti/mtimes

Matrix multiplication of LTI objects. If necessary, object conversion is done by sys_group. Used by Octave for "sys1 * sys2".

18.9 @lti/plus

Binary addition of LTI objects. If necessary, object conversion is done by sys_group. Used by Octave for "sys1 + sys2". Operation is also known as "parallel connection".

18.10 @lti/subsasgn

Subscripted assignment for LTI objects. Used by Octave for "sys.property = value".

18.11 @lti/subsref

Subscripted reference for LTI objects. Used by Octave for "sys = sys(2:4, :)" or "val = sys.prop".

18.12 @lti/transpose

Transpose of LTI objects. Used by Octave for "sys.'". Useful for dual problems, i.e. controllability and observability or designing estimator gains with lqr and place.

18.13 @lti/uminus

Unary minus of LTI object. Used by Octave for "-sys".

18.14 @lti/uplus

Unary plus of LTI object. Used by Octave for "+sys".

18.15 @lti/vertcat

Vertical concatenation of LTI objects. If necessary, object conversion is done by sys_group . Used by Octave for "[sys1; sys2]".

19 Overloaded IDDATA Operators

19.1 @iddata/horzcat

```
dat = [dat1, dat2, ...] [Function File]
dat = horzcat (dat1, dat2, ...) [Function File]
Horizontal concatenation of iddata datasets. The outputs and inputs are concatenated
```

Horizontal concatenation of iddata datasets. The outputs and inputs are concatenated in the following way: dat.y{e} = [dat1.y{e}, dat2.y{e}, ...] dat.u{e} = [dat1.u{e}, dat2.u{e}, ...] where e denotes the experiment. The number of experiments and samples must be equal for all datasets.

19.2 @iddata/subsasgn

Subscripted assignment for iddata objects. Used by Octave for "dat.property = value".

19.3 @iddata/subsref

Subscripted reference for iddata objects. Used by Octave for "dat = dat(2:4, :)" or "val = dat.prop".

19.4 @iddata/vertcat

```
dat = [dat1; dat2; ...] [Function File]
dat = vertcat (dat1, dat2, ...) [Function File]
```

Vertical concatenation of iddata datasets. The samples are concatenated in the following way: $dat.y\{e\} = [dat1.y\{e\}; dat2.y\{e\}; ...] dat.u\{e\} = [dat1.u\{e\}; dat2.u\{e\}; ...]$ where e denotes the experiment. The number of experiments, outputs and inputs must be equal for all datasets.

20 Miscellaneous

20.1 options

```
opt = options ("key1", value1, "key2", value2, ...)
                                                                        [Function File]
  Create options struct opt from a number of key and value pairs. For use with order reduction
  commands.
  Inputs
  key, property
             The name of the property.
             The value of the property.
  value
  Outputs
  opt
             Struct with fields for each key.
  Example
                  octave:1> opt = options ("method", "spa", "tol", 1e-6)
                  opt =
                    scalar structure containing the fields:
                      method = spa
                      tol = 1.0000e-06
                  octave:2> save filename opt
                  octave:3> # save the struct 'opt' to file 'filename' for later use
                  octave:4> load filename
                  octave:5> # load struct 'opt' from file 'filename'
```

20.2 strseq

20.3 test_control

test_control [Script File]

Execute all available tests at once. The Octave control package is based on the SLICOT library. SLICOT needs BLAS and LAPACK libraries which are also prerequisites for Octave itself. In case of failing tests, it is highly recommended to use Netlib's reference BLAS and LAPACK for building Octave. Using ATLAS may lead to sign changes in some entries of the state-space matrices. In general, these sign changes are not 'wrong' and can be regarded as the result of state transformations. Such state transformations (but not input/output transformations) have no influence on the input-output behaviour of the system. For better numerics, the control package uses such transformations by default when calculating the

frequency responses and a few other things. However, arguments like the Hankel singular Values (HSV) must not change. Differing HSVs and failing algorithms are known for using Framework Accelerate from Mac OS X 10.7.

20.4 BMWengine

```
sys = BMWengine ()[Function File]sys = BMWengine ("scaled")[Function File]sys = BMWengine ("unscaled")[Function File]
```

Model of the BMW 4-cylinder engine at ETH Zurich's control laboratory.

OPERATING POINT

Drosselklappenstellung alpha_DK = 10.3 Grad
Saugrohrdruck p_s = 0.48 bar

Motordrehzahl n = 860 U/min Lambda-Messwert lambda = 1.000

Relativer Wandfilminhalt nu = 1

INPUTS

M_L Lastdrehmoment [Nm]

STATES

X_1 Drosselklappenstellung
X_2 Saugrohrdruck
 [bar]
X_3 Motordrehzahl
 [U/min]
X_4 Messwert Lamba-Sonde
 [-]
X_5 Relativer Wandfilminhalt
 [-]

OUTPUTS

Y_1 Motordrehzahl [U/min] Y_2 Messwert Lambda-Sonde [-]

SCALING

U_1N, X_1N 1 Grad

U_2N, X_4N, X_5N, Y_2N 0.05

U_3N 1.6 Grad KW X_2N 0.05 bar

X_3N, Y_1N 200 U/min

20.5 Boeing707

sys = Boeing707 ()

[Function File]

Creates a linearized state-space model of a Boeing 707-321 aircraft at v=80 m/s (M=0.26, $G_{a0}=-3^{\circ}$, $\alpha_0=4^{\circ}$, $\kappa=50^{\circ}$).

System inputs: (1) thrust and (2) elevator angle.

System outputs: (1) airspeed and (2) pitch angle.

Reference: R. Brockhaus: Flugregelung (Flight Control), Springer, 1994.

20.6 WestlandLynx

sys = WestlandLynx ()

[Function File]

Model of the Westland Lynx Helicopter about hover.

pitch rate

INPUTS
main rotor collective
longitudinal cyclic
lateral cyclic
tail rotor collective

STATES pitch attitude roll attitude roll rate (body-axis) pitch rate (body-axis) yaw rate forward velocity lateral velocity vertical velocity	theta phi p q xi v_x v_y v_z	<pre>[rad] [rad/s] [rad/s] [rad/s] [ft/s] [ft/s] [ft/s]</pre>
OUTPUTS heave velocity pitch attitude roll attitude	H_dot theta phi	[ft/s] [rad] [rad]
heading rate roll rate	psi_dot p	[rad/s] [rad/s]

References

[1] Skogestad, S. and Postlethwaite I. (2005) Multivariable Feedback Control: Analysis and Design: Second Edition. Wiley. http://www.nt.ntnu.no/users/skoge/book/2nd_edition/matlab_m/matfiles.html

[rad/s]

Appendix A GNU General Public License

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. http://fsf.org/

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works. The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a. The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b. The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c. You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable

- section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d. If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a. Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b. Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c. Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d. Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e. Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything

designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a. Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b. Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or

- c. Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d. Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e. Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f. Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITTED

ING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

one line to give the program's name and a brief idea of what it does. Copyright (C) year name of author

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see http://www.gnu.org/licenses/.

Also add information on how to contact you by electronic and paper mail.

If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

program Copyright (C) year name of author

```
This program comes with ABSOLUTELY NO WARRANTY; for details type 'show w'. This is free software, and you are welcome to redistribute it under certain conditions; type 'show c' for details.
```

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, your program's commands might be different; for a GUI interface, you would use an "about box".

You should also get your employer (if you work as a programmer) or school, if any, to sign a "copyright disclaimer" for the program, if necessary. For more information on this, and how to apply and follow the GNU GPL, see http://www.gnu.org/licenses/.

The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read http://www.gnu.org/philosophy/why-not-lgpl.html.

Function Index 101

Function Index

(Index is nonexistent)