FANUC Robot

SAFETY HANDBOOK

MARUCSFTY04071E REV. J

©2014 FANUC America Corporation All Rights Reserved.

This publication contains proprietary information of FANUC America Corporation furnished for customer use only. No other uses are authorized without the express written permission of FANUC America Corporation.

FANUC America Corporation 3900 W. Hamlin Road Rochester Hills, Michigan 48309–3253

Copyrights and Trademarks

This new publication contains proprietary information of FANUC America Corporation furnished for customer use only. No other uses are authorized without the express written permission of FANUC America Corporation.

The descriptions and specifications contained in this manual were in effect at the time this manual was approved for printing. FANUC America Corporation, hereinafter referred to as FANUC, reserves the right to discontinue models at any time or to change specifications or design without notice and without incurring obligations.

FANUC manuals present descriptions, specifications, drawings, schematics, bills of material, parts, connections and/or procedures for installing, disassembling, connecting, operating and programming FANUC products and/or systems. Such systems consist of robots, extended axes, robot controllers, application software, the KAREL® programming language, INSIGHT® vision equipment, and special tools.

FANUC recommends that only persons who have been trained in one or more approved FANUC Training Course(s) be permitted to install, operate, use, perform procedures on, repair, and/or maintain FANUC products and/or systems and their respective components. Approved training necessitates that the courses selected be relevant to the type of system installed and application performed at the customer site.



A WARNING

This equipment generates, uses, and can radiate radiofrequency energy and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. As temporarily permitted by regulation, it has not been tested for compliance with the limits for Class A computing devices pursuant to subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference. Operation of the equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measure may be required to correct the interference.

FANUC conducts courses on its systems and products on a regularly scheduled basis at the company's world headquarters in Rochester Hills, Michigan. For additional information contact

FANUC America Corporation Training Department 3900 W. Hamlin Road Rochester Hills, Michigan 48309-3253 www.fanucrobotics.com

For customer assistance, including Technical Support, Service, Parts & Part Repair, and Marketing Requests, contact the Customer Resource Center, 24 hours a day, at 1-800-47-ROBOT (1-800-477-6268). International customers should call 011-1-248-377-7159.

Send your comments and suggestions about this manual to: product.documentation@fanucrobotics.com

Copyright © 2014 by FANUC America Corporation All Rights Reserved

The information illustrated or contained herein is not to be reproduced, copied, downloaded, translated into another language, published in any physical or electronic format, including internet, or transmitted in whole or in part in any way without the prior written consent of FANUC America Corporation.

AccuStat®, ArcTool®, iRVision®, KAREL®, PaintTool®, PalletTool®, SOCKETS®, SpotTool®, SpotWorks®, and TorchMate® are Registered Trademarks of FANUC.

FANUC reserves all proprietary rights, including but not limited to trademark and trade name rights, in the following names:

AccuAirTM, AccuCalTM, AccuChopTM, AccuFlowTM, AccuPathTM, AccuSealTM, ARC MateTM, ARC Mate Sr.TM, ARC Mate System 1TM. ARC Mate System 2TM, ARC Mate System 3TM, ARC Mate System 4TM, ARC Mate System 5TM, ARCWorks ProTM, AssistToolTM, AutoNormalTM, AutoTCPTM, BellToolTM, BODYWorksTM, Cal MateTM, Cell FinderTM, Center FinderTM, Clean WallTM, DualARMTM, LR ToolTM, MIG EyeTM, MotionPartsTM, MultiARMTM, NoBotsTM, Paint StickTM, PaintProTM, PaintTool 100TM, PAINTWorksTM, PAINTWorks IITM, PAINTWorks IIITM, PalletMateTM, PalletMate PCTM, PalletTool PCTM, PayloadIDTM, RecipToolTM, RemovalToolTM, Robo ChopTM, Robo SprayTM, S-420iTM, S-430iTM, ShapeGenTM, SoftFloatTM, SOFT PARTSTM, SpotTool+TM, SR MateTM, SR ShotToolTM, SureWeldTM, SYSTEM R-J2 ControllerTM, SYSTEM R-J3 ControllerTM, SYSTEM R-J3*i*B ControllerTM, SYSTEM R-J3*i*C ControllerTM, SYSTEM R-30*i*A Controller™, SYSTEM R-30*i*A Mate Controller™, SYSTEM R-30*i*B ControllerTM, SYSTEM R-30*i*B Mate ControllerTM, TCP MateTM, TorchMate[™], TripleARM[™], TurboMove[™], visLOC[™], visPRO-3D[™], visTRACTM, WebServerTM, WebTPTM, and YagToolTM.

©FANUC CORPORATION 2014

- No part of this manual may be reproduced in any form.
- All specifications and designs are subject to change without notice.

Patents

One or more of the following U.S. patents might be related to the FANUC products described in this manual.

FANUC America Corporation Patent List

 $4,630,567\ 4,639,878\ 4,707,647\ 4,708,175\ 4,708,580\ 4,942,539\ 4,984,745\ 5,238,029\ 5,239,739\ 5,272,805\ 5,293,107\ 5,293,911\ 5,331,264\ 5,367,944\ 5,373,221\ 5,421,218\ 5,434,489\ 5,644,898\ 5,670,202\ 5,696,687\ 5,737,218\ 5,823,389\ 5,853,027\ 5,887,800\ 5,941,679\ 5,959,425\ 5,987,726\ 6,059,092\ 6,064,168\ 6,070,109\ 6,086,294\ 6,122,062\ 6,147,323\ 6,204,620\ 6,243,621\ 6,253,799\ 6,285,920\ 6,313,595\ 6,325,302\ 6,345,818\ 6,356,807\ 6,360,143\ 6,378,190\ 6,385,508\ 6,425,177\ 6,477,913\ 6,490,369\ 6,518,980\ 6,540,104\ 6,541,757\ 6,560,513\ 6,569,258\ 6,612,449\ 6,703,079\ 6,705,361\ 6,726,773\ 6,768,078\ 6,845,295\ 6,945,483\ 7,149,606\ 7,149,606\ 7,211,978\ 7,266,422\ 7,399,363$

FANUC CORPORATION Patent List

4,571,694 4,626,756 4,700,118 4,706,001 4,728,872 4,732,526 4,742,207 4,835,362 4,894,596 4,899,095 4,920,248 4,931,617 4,934,504 4,956,594 4,967,125 4,969,109 4,970,370 4,970,448 4,979,127 5,004,968 5,006,035 5,008,834 5,063,281 5,066,847 5,066,902 5,093,552 5,107,716 5,111,019 5,130,515 5,136,223 5,151,608 5,170,109 5,189,351 5,267,483 5,274,360 5,292,066 5,300,868 5,304,906 5,313,563 5,319,443 5,325,467 5,327,057 5,329,469 5,333,242 5,337,148 5,371,452 5,375,480 5,418,441 5,432,316 5,440,213 5,442,155 5,444,612 5,449,875 5,451,850 5,461,478 5,463,297 5,467,003 5,471,312 5,479,078 5,485,389 5,485,552 5,486,679 5,489,758 5,493,192 5,504,766 5,511,007 5,520,062 5,528,013 5,532,924 5,548,194 5,552,687 5,558,196 5,561,742 5,570,187 5,570,190 5,572,103 5,581,167 5,582,750 5,587,635 5,600,759 5,608,299 5,608,618 5,624,588 5,630,955 5,637,969 5,639,204 5,641,415 5,650,078 5,658,121 5,668,628 5,687,295 5,691,615 5,698,121 5,708,342 5,715,375 5,719,479 5,727,132 5,742,138 5,742,144 5,748,854 5,749,058 5,760,560 5,773,950 5,783,922 5,799,135 5,812,408 5,841,257 5,845,053 5,872,894 5,887,122 5,911,892 5,912,540 5,920,678 5,937,143 5,980,082 5,983,744 5,987,591 5,988,850 6,023,044 6,032,086 6,040,554 6,059,169 6,088,628 6,097,169 6,114,824 6,124,693 6,140,788 6,141,863 6,157,155 6,160,324 6,163,124 6,177,650 6,180,898 6,181,096 6,188,194 6,208,105 6,212,444 6,219,583 6,226,181 6,236,011 6,236,896 6,250,174 6,278,902 6,279,413 6,285,921 6,298,283 6,321,139 6,324,443 6,328,523 6,330,493 6,340,875 6,356,671 6,377,869 6,382,012 6,384,371 6,396,030 6,414,711 6,424,883 6,431,018 6,434,448 6,445,979 6,459,958 6,463,358 6,484,067 6,486,629 6,507,165 6,654,666 6,665,588 6,680,461 6,696,810 6,728,417 6,763,284 6,772,493 6,845,296 6,853,881 6,888,089 6,898,486 6,917,837 6,928,337 6,965,091 6,970,802 7,038,165 7,069,808 7,084,900 7,092,791 7,133,747 7,143,100 7,149,602 7,131,848 7,161,321 7,171,041 7,174,234 7,173,213 7,177,722 7,177,439 7,181,294 7,181,313 7,280,687 7,283,661 7,291,806 7,299,713 7,315,650 7,324,873 7,328,083 7,330,777 7,333,879 7,355,725 7,359,817 7,373,220 7,376,488 7,386,367 7,464,623 7,447,615 7,445,260 7,474,939 7,486,816 7,495,192 7,501,778 7,502,504 7,508,155 7,512,459 7,525,273 7,526,121

Conventions

AWARNING

Information appearing under the "WARNING" caption concerns the protection of personnel. It is boxed and bolded to set it apart from the surrounding text.

ACAUTION

Information appearing under the "CAUTION" caption concerns the protection of equipment, software, and data. It is boxed and bolded to set it apart from the surrounding text.

Note Information appearing next to NOTE concerns related information or useful hints.

Original Instructions

Before using the Robot, be sure to read this manual and understand the content.

- No part of this manual may be reproduced in any form.
- All specifications and designs are subject to change without notice.

The products in this manual are controlled based on Japan's "Foreign Exchange and Foreign Trade Law". The export from Japan may be subject to an export license by the government of Japan.

Further, re-export to another country may be subject to the license of the government of the country from where the product is re-exported. Furthermore, the product may also be controlled by re-export regulations of the United States government.

Should you wish to export or re-export these products, please contact FANUC for advice.

In this manual we have tried as much as possible to describe all the various matters.

However, we cannot describe all the matters which must not be done, or which cannot be done, because there are so many possibilities.

Therefore, matters which are not especially described as possible in this manual should be regarded as "impossible".

GENERAL PRECAUTIONS

FANUC is not and does not represent itself as an expert in safety systems, safety equipment, or the specific safety aspects of your company and/or its workplace.

It is the responsibility of the owner, employer, or user to take all necessary steps to guarantee the safety of all personnel in the workplace.

The appropriate level of safety for your application and installation can best be determined by safety system professionals.

FANUC therefore, recommends that each customer consult with such professionals in order to provide a workplace that allows for the safe application, use, and operation of FANUC system.

Additionally, as the owner, employer, or user of a robotic system, it is your responsibility to arrange for the training of the operator of a robot system to recognize and respond to known hazards associated with your robotic system and to be aware of the recommended operating procedures for your particular application and robot installation.

FANUC therefore, recommends that all personnel who intend to operate, program, repair, or otherwise use the robotics system be trained in an approved FANUC training course and become familiar with proper operation of the system.

Persons responsible for programming the system including the design, implementation, and debugging of application programs must be familiar with the recommended programming procedures for your application and robot installation.

It is recognized that the operational characteristics of robots can be significantly different from those of other machines and equipment.

Robots are capable of high energy movements through a large volume beyond the base of robots.

This handbook provides some hints and guidelines for the robot system safety design.

The system designer is responsible for designing the robot system to comply with Annex I of Machinery Directive, EN ISO 10218 (or ANSI RIA ISO 10218), and EN ISO 12100 standards.

DEFINITION OF WARNING AND CAUTION

To ensure the safety of working persons and prevent damage to the machine, this manual indicates each precaution on safety with "Warning" or "Caution" according to its severity. Read the contents of each "Warning" and "Caution" before attempting to use the robots.

! WARNING

Applied when there is a danger of death or injury to the working person and the equipment being damaged, if the approved procedure is not observed.

! CAUTION

Applied when there is a danger of the equipment being damaged, if the approved procedure is not observed.

TABLE OF CONTENTS

GE	NERA	L PRECAUTIONS	p-1
1	1.1 1.2 1.3	PURPOSE OF ROBOT	1 2 3
2	ROB	OT SYSTEM DESIGN	5
_	2.1	GENERAL	
	2.2	PLACEMENT OF EQUIPMENT	_
	2.3	POWER SUPPLY AND PROTECTIVE EARTH CONNECTION	
	2.4	OTHER PRECAUTIONS	7
	2.5	END EFFECTOR, WORKPIECE AND PERIPHERAL EQUIPMENT	9
3	SAFI	ETY DEVICES	11
	3.1	STOP TYPE OF ROBOT	
	3.2	EMERGENCY STOP	13
	3.3	MODE SELECT SWITCH	13
		3.3.1 Operating Modes	
	3.4	DEADMAN SWITCH	
	3.5	SAFEGUARDS	
		3.5.1 Safety Fence	
		3.5.2 Safety Gate and Plugs	
	3.6	OPERATION INSIDE OF THE SAFETY FENCE	
	3.7	THE SAFETY SEQUENCE FOR FENCE ENTRY	
4	GFN	ERAL CAUTIONS	19
•	4.1	INSTALLATION	
	4.2	COMMISSIONING AND FUNCTIONAL TESTING	
		4.2.1 Designation of the Restricted Space	
		4.2.2 Restriction of Personnel	20
		4.2.3 Safety and Operational Verification	
	4.0	4.2.4 Robot System Restart Procedures	
	4.3	PROGRAMMING	
		4.3.2 During Programming	
		4.3.3 Returning to Automatic Operation	
	4.4	PROGRAM VERIFICATION	
	4.5	TROUBLE SHOOTING	22
	4.6	SAVING PROGRAMMED DATA	22
	4.7	AUTOMATIC OPERATION	22
	4.8	MAINTENANCE	
	4.9	DISMANTLING / SCRAPPING	23
	4 10	OTHER CAUTIONS	24

TΔ	RΙ	F	OF	CON	TEN	TS.
-1	L		OI.	CON	$I \perp I N$	10

B-80	007		140
B-8U	ınz /	-10	/1/

5	DAII	LY MAINTENANCE	25
		MECHANICAL UNIT	
	5.2	CONTROL UNIT	25
6	EC I	DECLARATION OF CONFORMITY	26
7	CON	NTACTS	27

1 FANUC ROBOT SYSTEM

1.1 PURPOSE OF ROBOT

FANUC Robot series can be used for the following applications.

- Spot welding
- ARC welding
- Handling
- Deburring
- Assembling
- Sealing
- Painting

Required functionality for these applications is implemented by selecting an appropriate TOOL software. Please consult your FANUC sales representative if you want to use the robot for any application other than listed above.

Even when you use the robot for the purpose of any of the applications listed above, the robot must NOT be under any of the conditions listed below. Inappropriate usage of robots may cause not only damage to the robot system, but also serious injury or even death of the operator and the people in the premises.

- Use of robot in flammable atmosphere
- Use of robot in explosive atmosphere
- Use of robot in radioactive environment
- Use of robot in water or any kind of liquid
- Use of robot for the purpose of transferring human or animals
- Use of robot as a step (climbing upon the robot)
- Use of robot under conditions not in accordance with FANUC recommended installation or usage

FANUC is not responsible for any damage caused by misuse of the robots.

Before using the robot, check the specifications of the robot, and then take adequate safety measures to prevent hazardous conditions.

1.2 CONFIGURATION OF ROBOT SYSTEM

The following elements has been verified their safety.

- Robot
- Robot controller and Teach pendant

The following elements must be prepared by the user according to system configuration.

- Safeguard
- Interlocked gate and Interlocking device

FANUC Robot has an interface to connect interlocking devices.

However, the following elements are not considered, due to wide variety of its design and safety measures.

- End effector
- Workpiece
- Other peripheral equipment

The designer of a robot application system must design the robot system according to EN ISO 10218 (ANSI RIA ISO 10218) and Annex I of Machinery Directive.

1.3 WORKING PERSON

The personnel can be classified as follows.

Operator:

- Turns robot controller power ON/OFF
- Starts robot program from operator's panel

Programmer or teaching operator:

- Operates the robot
- Teaches robot inside the safety fence

Maintenance engineer:

- Operates the robot
- Teaches robot inside the safety fence
- Maintenance (adjustment, replacement)
- An operator cannot work inside the safety fence.
- A programmer, Teaching operator and maintenance engineer can work inside the safety fence. The workings inside safety fence are lifting, setting, teaching, adjusting, maintenance, etc.
- To work inside the fence, the person must be trained for the robot.

Table 1.3 lists the workings of outside the fence. In this table, the symbol "O" means the working allowed to be carried out by the personnel.

Table 1.3 List of workings outside the fence

	Operator	Programmer or Teaching operator	Maintenance engineer
Power ON/OFF for Robot controller	0	0	0
Select operating mode (AUTO, T1, T2)		0	0
Select Remote/Local mode		0	0
Select robot program with teach pendant		0	0
Select robot program with external device		0	0
Start robot program with operator's panel	0	0	0
Start robot program with teach pendant		0	0
Reset alarm with operator's panel		0	0
Reset alarm with teach pendant		0	0
Set data on the teach pendant		0	
Teaching with teach pendant		0	
Emergency stop with operator's panel	0	0	0
Emergency stop with teach pendant	0	0	0
Maintain for operator's panel		0	
Maintain for teach pendant			0

In operating, programming and maintenance, the programmer, teaching operator and maintenance engineer take care of their safety using the following safety protectors, for example.

- Use adequate clothes, uniform, overall for operation
- Put on the safety shoes
- Use helmet

1.3.1 Robot Training

The programmer, teaching operator and maintenance engineer must be trained for the robot operating and maintenance.

The required items are:

- Safety,
- Practice of jog feed,
- Practical training of manual operation and teaching of robot,
- Programming practice, teaching and playback practice,
- Practice of automatic operation,
- Explanation of configuration and function of robot,
- Explanation and practice of setting up frame,
- Explanation of outline of programming and program example,
- Explanation of automatic operation,
- Explanation of interface between robot and peripheral device,
- Explanation and practice of check item when trouble occur,
- Explanation of periodical inspection and exchange of consumable,
- Explanation and practice of basic operation,
- Explanation and practice of display for maintenance,
- Explanation and practice of handling of floppy cassette,
- Explanation and practice of initial setting,
- Explanation and practice of controller,
- Explanation and practice of checking item on trouble,
- Explanation and practice of troubleshooting by error code,
- Explanation and practice of servo system,
- Explanation and practice of mastering, and
- Explanation and practice of disassemble and assemble.

Some training courses for these items for the maintenance engineer or system engineer are provided in the robot school and each technical service center.

Please refer to Chapter 7 for contacts.

! WARNING

Robot operating personnel such as programmers, teaching operators or maintenance engineers must be properly trained. Without appropriate training, any operation inside the safety fence may cause very severe injury or even death of personnel due to the multiple and various hazards caused by the robot arm.

1.4 RELEVANT STANDARDS

FANUC robot series (for CE marking or NRTL) meets following standards.

[For CE marking : Machinery/Low voltage Directives]

- EN ISO 10218-1
- EN 60204-1
- EN ISO 13849-1 (EN 954-1)

[For NRTL]

- UL 1740
- CAN/CSA Z434
- CSA C22.2 No.73

! NOTE

For EN ISO 13849-1 (EN954-1), the following safety categories have been applied.

Controller	Emorgonov	Dual Check Saf	Dual Check Safety (optional functions)			
model	Emergency stop	Position/Speed check	Safe I/O connect	Safety Network	Applied standard	
R-30 <i>i</i> B R-30 <i>i</i> B Mate R-30 <i>i</i> A R-30 <i>i</i> A Mate	[7DA5 or later] Cat.4 PL e SIL 3	[7DA5 or later] Cat.3 PL d SIL 2	[7DA5 or later] Cat.4 PL e SIL 3		EN ISO 13849-1:2008	
	[7DA1-7DA4] Cat.4	[7DA1-7DA4] Cat.3	[7DA1-7DA4] None		EN 954-1:1996	
R-J3iB	Cat. 4 or Cat. 3 (*)		None			
R-J3iB Mate	Cat. 3 (*)		None			

^(*) Evaluation was included into total safety assessment by third party. (No independent certificate based on this standard)

[CE marking : For EMC Directive] - EN 55011 (Group 1, Class A)

- EN 61000-6-2

For the above standards, FANUC robot systems have been certified by the following third parties (TÜV Rheinland Japan).

- CE marking: TÜV Rheinland Japan

- NRTL: TÜV SÜD America

2 ROBOT SYSTEM DESIGN

In this chapter, requirements for robot system design are described.

- Placement of Equipment
- Power Supply and Protective Earth Connection
- Other Precautions

In addition, the basic requirements for end effector, workpiece, and peripheral equipment are outlined in 2.5.

About safety fence, safety gate and other protection devices, please refer to 3.4 and 3.5.

2.1 GENERAL

The robot system must be designed, constructed, and implemented so that in case of a foreseeable failure of any single component, whether electrical, electronic, mechanical, pneumatic, or hydraulic, safety functions are not affected or when they are, the robot system is left in a safe condition ("Failure to safety").

Under the intended conditions of use, the discomfort, fatigue and psychological stress faced by the operator must be reduced to the minimum possible, taking into account ergonomic principles such as:

- allowing for the variability of the operator's physical dimensions, strength and stamina,
- providing enough space for movements of the parts of the operator's body,
- avoiding a machine-determined work rate,
- avoiding monitoring that requires lengthy concentration,
- adapting the man/machinery interface to the foreseeable characteristics of the operators.

The application of the electrical equipment of the robot system must be accordance with IEC/ EN60204-1 or NFPA70/NFPA79.

2.2 PLACEMENT OF EQUIPMENT

Please make sure the following requirements are all satisfied for each component of a robot system.

- Appropriate safety fence/guard must be placed according to EN ISO 10218 (ANSI/RIA/ISO 10218) and Annex I of Machinery Directive. Please refer to section 3.5 and 3.6 for the basic requirement of the safety fence/guard and protection devices.
- The risk assessment must determine the additional space required beyond the restricted space to define the safeguarded space.
- The operator panel must be located at a safe place:
 - outside the safety fence, and cannot be reached from inside the safety fence,
 - where it can be easily seen, and easily operated by the operator,
 - where the operator can operate it without hesitation or loss of time and without ambiguity, and
 - where no dangerous situation is created by operating it.
- The operating position must be designed and constructed in such a way as to avoid any risk due to exhaust gases and/or lack of oxygen.
- If the robot system is intended to be used in a hazardous environment presenting risks to the health and safety of the operator or if the robot system itself gives rise to a hazardous environment,

adequate means must be provided to ensure that the operator has good working conditions and is protected against any foreseeable hazards.

- Where appropriate, the operating position must be fitted with an adequate cabin designed, constructed and/or equipped to fulfill the above requirements. The exit must allow rapid evacuation. Moreover, when applicable, an emergency exit must be provided in a direction which is different from the usual exit.
- A large space must be secured around each component enough for the maintenance and inspection of the system.
- Robot system must be designed and constructed in such a way as to allow access in safety to all areas where intervention is necessary during operation, adjustment and maintenance.
- The space inside the safety fence, especially for maintenance and inspection, must be designed to protect the operator from falling off or slipping off the step, and where appropriate, handholds that are fixed relative to the operator and that enable them to maintain their stability should be prepared.
- The robot system must be secured on a stable floor. Especially the robot mechanical unit must be attached to the stable place according to the instructions in the maintenance manual or operator's manual.
- Robot systems must be designed to avoid trapping and collision between the moving parts of the robot and other fixed or moving objects.
- The layouts must be designed in such a way that between moving parts of the robot and objects in the environment (e.g. pillars of the structure, ceiling joists, fences, supply leads) sufficient clearance is available.
- This rule does not apply to associated equipment in order to allow it to perform its task.
- When T2 mode is used, the robot system must be installed to provide a minimum clearance from the restricted space of 0.45m from readily accessible areas of buildings, structures, utilities, other machines and equipment not specifically supporting the robot function that may create trapping or a pinch point. Where this minimum clearance is not provided, additional safeguarding devices to stop robot motion while personnel are within 0.45m of the trapping or pinch hazard must be provided.
- When a limitation of the restricted space, by limiting the range of motion of the primary axes, is required by the plan, limiting devices must be provided. They must comply with one of the following.
 - Mechanical stops which are capable of stopping the robot at any adjusted position when it is carrying its rated load at maximum velocity.
 - Alternative methods of limiting the range of motion may be provided only if they are designed, constructed, and installed to achieve the same level of safety as the mechanical stops.
 This may include using the robot controller and limit switches according to IEC/EN 60204-1 or NFPA70/NFPA79.

Note that the limiting devices must be correctly adjusted and secured.

- When it is intended that operators will perform manual operations associated with the robot, such as loading and unloading of parts, this must be taken into account in the arrangement of the robot system, either by providing loading devices so that the operator cannot access the hazardous area, or by providing appropriate safeguards for the manual activity.
- Where appropriate and where the working conditions so permit, work stations constituting an integral part of the robot system must bi designed for the installation of seats.

- The operator's seat must enable him to maintain a stable position. Furthermore, the seat and its distance from the control devices must be capable of being adapted to the operator.
- If the robot system is subject to vibrations, the seat must be designed and constructed in such a way as to reduce the vibrations transmitted to the operator to the lowest level that is reasonably possible. The seat mountings must withstand all stresses to which they can be subjected, where there is no floor beneath the feet of the operator, footrests covered with a slip-resistant material must be provided.
- On transportation of robot mechanical unit or controller, proper transportation procedure described on operator's or maintenance manual for each models have to be observed.

↑ WARNING

Wrong procedure on transportation of robot mechanical unit or controller can lose mechanical stability (balance) of them, and it can cause serious injury or death of personnel.

2.3 POWER SUPPLY AND PROTECTIVE EARTH CONNECTION

- The power supply and the grounding must be connected according to maintenance manual.
- Unsafe conditions must be avoided in the event of a power down, power recovery after a power down or supply voltage fluctuations. Unsafe conditions to be avoided are;
 - Dropping workpiece or any material,
 - Safety equipment not functioning, etc.
- The robot system must have means to isolate its power sources. These means must be located in such a way that no person will be exposed to hazardous and the must have a lockout/tagout capability.

! WARNING

Robot mechanical unit and controller have to be properly connected by PE (Protective Earth). Without PE connection, electrical shock can occur.

2.4 OTHER PRECAUTIONS

- Shut down (removal of power) to the robot system or any associated equipment must not result in a hazardous condition.
- All environmental conditions must be evaluated to ensure compatibility of the robot and the robot system with the anticipated operational conditions. These conditions include, by are not limited to, explosive mixtures, corrosive conditions, humidity, dust, temperature, electromagnetic interference (EMI), radio frequency interference (RFI), and vibration.
- The control position where the operator stands must be predetermined.

The control position must satisfy the following conditions.

- The operator can easily operate the panel or the teach pendant.
- The operator can easily make sure that nobody is inside the safety fence.
- The operator can easily verify the operation of the system.
- The operator can immediately stop the entire or partial system in the event a malfunction of the system or any dangerous condition.

- The following safety measure must be used if the operator cannot easily verify nobody is inside the safety fence, or as required by the risk-assessment result.
 - A visible/audible warning (complying EN/ISO/IEC standards or OSHA) is used before robot starts moving.
 - A measure for the person inside the fence to stop the robot system or a measure for the person to evacuate outside the fence.
 - The control system is designed and constructed in such a way that starting is prevented while someone is in the danger zone.
- If necessary, means must be provided to ensure that the robot system can be controlled only from control positions located in one or more predetermined zones or locations.
- Where there is a more than one control position, the control system must be designed in such a way
 that the use of one of them precludes the use of the others, except for stop controls and emergency
 stops.
- When the robot system has two or more operating positions, each position must be provided with all
 the required control devices without the operators hindering or putting each other into a hazardous
 situation.
- The manual intervention and reset procedure to restart the robot system after an emergency stop must take place outside the restricted space.
- A warning device must be such that the operator and people in dangerous area can easily recognize it
- For UL standard compliance, "a yellow or amber visual indicator" specified by CL 36.1 of UL 1740 was to be installed by the end-user or system manufacturer. SYSRDY or PROGRUN output signals can be used for installing such a visual indicator.
- The area must be appropriately lighted, especially for maintenance and inspection. The lighting must not create a new dangerous situation (e.g. dazzled).
- It is recommended that adjustment, oiling, and other maintenance work can be performed from outside the dangerous area while the system is stopping.

 If it is not feasible, a method to perform these operations safely must be established.
- If the robot and the peripheral equipment synchronously move in the robot system, an appropriate measure must be provided to avoid unsafe condition by stopping the entire system in the event any of the equipment stops due to malfunction.
- Any robot that can be controlled from a remote location must be provided with an effective means that must prevent hazardous conditions of the robot being initiated from any other location.
- For robot systems that can be operated from a remote location (e.g. over a communications network), a means must be provided (e.g. a key operated switch) to ensure that no commands can initiate hazardous conditions from the remote location when in local control.
- It is recognized that for certain phases of the robot system life (e.g. commissioning, process changeover, cleaning, and maintenance) it may not be possible to design completely adequate safeguards to protect against every hazard or that contain safeguards may be suspended. Under these conditions, appropriate safe working procedures must be used.
- A robot system manufacturer must provide an operation manual according to Annex I of Machinery Directive.

- The requirements in Annex I of Machinery directive and EN ISO 10218 (ANSI/RIA/ISO 10218) must be considered when a robot application system is designed.
- Suitable ambient lighting have to be provided near the robot.

! CAUTION

Operation inside of the safety fence (teaching, maintenance, etc.) without suitable ambient lighting can cause hazards of collision (with some obstacles inside of the safety fence) or slipping/falling down of personnel.

2.5 END EFFECTOR, WORKPIECE AND PERIPHERAL EQUIPMENT

It is the responsibility of the robot system manufacturer to perform the risk assessment of the end effector, workpiece and the peripheral equipment.

This section outlines the basic requirement for the risk assessment of these components.

End Effector

- End effectors must be designed and constructed, or safeguarded, so that
 - power failure does not cause release of the load or result in a hazardous condition, and
 - the static and dynamic forces created by the load and the end effector together are within the load capacity and dynamic response of the robot.
- If it is equipped with a tooling that can function with several different conditions (speed, etc.), the selection of the condition must be safely and securely done.

Workpiece

- The material and its shape must not be dangerous and safety measures must be provided.
- If the workpiece is extreme high or low temperature, safety measures must be provided to avoid personnel from touching or getting too close to it.

Peripheral Equipment (including end effector)

- The material and shape must not be dangerous.
- If any component could break down during operation, it must be placed so that it will not scatter if it breaks down.
- Pipes (for liquid/gas) must have enough strength for its internal / external pressure.
- Pipes must be secured and protected from the external pressure or tension.
- Measures must be provided to avoid a dangerous situation if a pipe is broken causing sudden movement of the pipe or the high speed flow of material.
- If a pneumatic device is used, an air valve which shuts off the air supply to the robot must be installed.
- If a power source other than the electricity (e.g. pneumatic, water, heat) is used in the system, appropriate risk-assessment must be performed, and appropriate safety measures must be provided.
- Safety measures must be provided to avoid swapping of components that cause unsafe conditions, by
 - design to avoid swapping,
 - indication of necessary information on the parts.
- Safety measures must be provided to avoid inferior contacts, by
 - design,
 - displaying the information on the connectors, pipes, cables.

- Safety measures must be provided to avoid an unsafe condition by touching an extremely high/low temperature parts (if any).
- Safety measures must be provided to avoid fire or explosion through sufficient amount of investigation.
- Vibration and sound noise must be kept to a minimum.
- If a laser equipment is used, the following must be considered.
 - avoid unexpected emission of laser light
 - direct/indirect emission of light must give no harm to the health
 - laser light must give no harm to health during maintenance / adjustment.

3 SAFETY DEVICES

3.1 STOP TYPE OF ROBOT

The following three robot stop types exist:

Power-Off Stop (Category 0 following IEC 60204-1/NFPA79)

Servo power is turned off and the robot stops immediately. Servo power is turned off when the robot is moving, and the motion path of the deceleration is uncontrolled.

The following processing is performed at Power-Off stop.

- An alarm is generated and servo power is turned off.
- The robot operation is stopped immediately. Execution of the program is paused.

Controlled stop (Category 1 following IEC 60204-1/NFPA79)

The robot is decelerated until it stops, and servo power is turned off.

The following processing is performed at Controlled stop.

- The alarm "SRVO-199 Controlled stop" occurs along with a decelerated stop. Execution of the program is paused.
- An alarm is generated and servo power is turned off.

Hold (Category 2 following IEC 60204-1/NFPA79)

The robot is decelerated until it stops, and servo power remains on.

The following processing is performed at Hold.

- The robot operation is decelerated until it stops. Execution of the program is paused.

↑ WARNING

The stopping distance and stopping time of Controlled stop is longer than the stopping distance and stopping time of Power-Off stop. A risk assessment for the whole robot system, which takes into consideration the increased stopping distance and stopping time, is necessary when Controlled stop is used.

When the E-Stop button is pressed or the FENCE is open, the stop type of robot is Power-Off stop or Controlled stop. The configuration of stop type for each situation is called *stop pattern*. The stop pattern is different according to the controller type or option configuration.

There are the following 3 Stop patterns.

Stop pattern	Mode	E-Stop button	External E-Stop	FENCE open	SVOFF input	Servo disconnect
	AUTO	P-Stop	P-Stop	C-Stop	C-Stop	P-Stop
Α	T1	P-Stop	P-Stop	-	C-Stop	P-Stop
	T2	P-Stop	P-Stop	-	C-Stop	P-Stop
	AUTO	P-Stop	P-Stop	P-Stop	P-Stop	P-Stop
В	T1	P-Stop	P-Stop	-	P-Stop	P-Stop
	T2	P-Stop	P-Stop	-	P-Stop	P-Stop
	AUTO	C-Stop	C-Stop	C-Stop	C-Stop	C-Stop
С	T1	P-Stop	P-Stop	-	C-Stop	P-Stop
	T2	P-Stop	P-Stop	-	C-Stop	P-Stop

P-Stop: Power-Off stop C-Stop: Controlled stop

-: Disable

3.SAFETY DEVICES
B-80687EN/12

The following table indicates the Stop pattern according to the controller type or option configuration.

Option	R-30iB/ R-30iB Mate
Standard	A (*)
Controlled stop by E-Stop	C (*)
(A05B-2600-J570)	G (*)

(*) R-30*i*B / R-30*i*B Mate does not have servo disconnect. / R-30*i*B Mate does not have SVOFF input.

Option	R-30 <i>i</i> A	/ R-30 <i>i</i> B	R-30iA Mate	
Option	RIA type	CE type	RIA type	CE type
Standard	Α	А	А	Α
Stop type set (Stop pattern C) (A05B-2500-J570)	С	С	С	С

The stop pattern of the controller is displayed in "Stop pattern" line in software version screen. Please refer "Software version" in operator's manual of controller for the detail of software version screen.

"Controlled stop by E-Stop" option

When "Controlled stop by E-Stop" (A05B-2600-J570) option (In case of R-30*i*A/R-30*i*A Mate, it is Stop type set (Stop pattern C) (A05B-2500-J570)) is specified, the stop type of the following alarms becomes Controlled stop but only in AUTO mode. In T1 or T2 mode, the stop type is Power-Off stop which is the normal operation of the system.

Alarm	Condition
SRVO-001 Operator panel E-stop	Operator panel E-stop is pressed.
SRVO-002 Teach pendant E-stop	Teach pendant E-stop is pressed.
SRVO-007 External emergency stops	External emergency stop input (EES1-EES11, EES2-EES21) is open. (R-30 <i>i</i> A/R-30 <i>i</i> B/ R-30 <i>i</i> B Mate controller)
SRVO-194 Servo disconnect	Servo disconnect input (SD4-SD41, SD5-SD51) is open. (R-30iA controller)
SRVO-218 Ext. E-stop/Servo Disconnect	External emergency stop input (EES1-EES11, EES2-EES21) is open. (R-30iA Mate controller)
SRVO-408 DCS SSO Ext Emergency Stop	In DCS Safe I/O connect function, SSO[3] is OFF.
SRVO-409 DCS SSO Servo Disconnect	In DCS Safe I/O connect function, SSO[4] is OFF.

Controlled stop is different from Power-Off stop as follows:

- In Controlled stop, the robot is stopped on the program path. This function is effective for a system where the robot can interfere with other devices if it deviates from the program path.
- In Controlled stop, physical impact is less than Power-Off stop. This function is effective for systems where the physical impact to the mechanical unit or EOAT (End Of Arm Tool) should be minimized.
- The stopping distance and stopping time of Controlled stop is longer than the stopping distance and stopping time of Power-Off stop, depending on the robot model and axis. Please refer the operator's manual of a particular robot model for the data of stopping distance and stopping time.

In case of R-30*i*A/R-30*i*A Mate, this function is available only in CE or RIA type hardware.

When this option is loaded, this function can not be disabled.

The stop type of DCS Position and Speed Check functions is not affected by the loading of this option.

B-80687EN/12 3.SAFETY DEVICES

⚠ WARNING

The stopping distance and stopping time of Controlled stop is longer than the stopping distance and stopping time of Power-Off stop. A risk assessment for the whole robot system, which takes into consideration the increased stopping distance and stopping time, is necessary when this option is loaded.

3.2 EMERGENCY STOP

This robot has following emergency stop devices.

- emergency stop button
- external emergency stop (input signal)

When emergency stop button is pushed, the robot stops immediately (refer to 3.1).

The external emergency stop input signal is input from peripheral devices.

The signal terminal is inside of the robot controller.

3.3 MODE SELECT SWITCH

The MODE SELECT SWITCH is installed on the robot controller. You can select one of the operation modes using this switch. The selected operation mode can be locked by removing its key.

When the mode is changed by this switch, the robot system stops and a message is shown in teach pendant LCD.

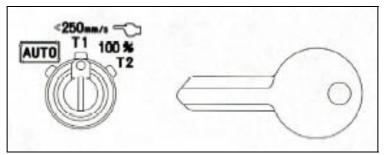


Fig.3.3 Mode Select Switch

3.3.1 Operating Modes

There are two or three operating modes.

AUTO: Automatic Mode

- The operator's panel/box becomes enable.
- The robot program can be started by the operator's panel/box start button or peripheral device I/O.
- Safety fence is enabled.
- The robot can be operated at the specified maximum speed.

T1: Test Mode 1

- Program can be activated from the teach pendant only.
- The robot cannot be operated at speeds higher than 250mm/sec.
- Safety fence is disabled.

T2: Test Mode 2(Optional)

• Program can be activated from the teach pendant only.

3.SAFETY DEVICES
B-80687EN/12

- The robot can be operated at the specified maximum speed.
- Safety fence is disabled.

Please refer to the operator's manual of robot controller for detail.

3.4 DEADMAN SWITCH

The DEADMAN SWITCH is used as an "enabling device".

When the teach pendant is enabled, these switches allow robot motion only while at least one of deadman switches is gripped. If you release or hard grip switches, the robot stops immediately.

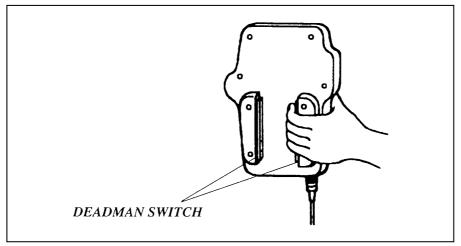


Fig.3.4 Deadman Switch

Based on the risk assessment by FANUC, number of operation of DEADMAN SW should not exceed about 10000 times per year.

3.5 SAFEGUARDS

The safeguards consists of:

- safety fence (fixed guard),
- safety gate (with interlocking devices),
- safety plug and socket, and
- other protection devices.

These safety devices must be complied with EN ISO 10218 (ANSI/RIA/ISO 10218) and Annex I of Machinery Directive standard.

This section describes the basic requirements for these devices.

Please refer to EN ISO 10218 (ANSI/RIA/ISO 10218) and Annex I of Machinery Directive standard for detail.

Note that these safety devices must be fitted to the robot system by the system house, etc.

⚠ WARNING

Suitable safety guards have to be installed around robot system. Robot operation without safety guards can cause serious injury or death of personnel.

3.5.1 Safety Fence

The basic requirements for Safety Fence are as follows.

- The fence is constructed to withstand foreseeable operational and environmental forces.
- The fence is free of sharp edges and projection and is not themselves a hazard.
- The fence prevents access to the safeguarded space except through openings associated with interlocking devices.
- The fence is permanently fixed in position and is removable only with the aid of tools.
- Fixing system of the safety fence must remain attached to the safety fence or to the robot system when they are removed.
- Where possible, safety fence must be incapable of remaining in place without their fixings.
- The fence cause minimum obstruction to the view of the production process.
- The fence is located at an adequate distance from the maximum space.
- The fence should be connected to PE (protective Earth) to prevent the electric shock with accident.

Please refer to the following and their related standards for detail.

- EN ISO 13855
- EN ISO 13857
- ANSI B11.19

3.5.2 Safety Gate and Plugs

The basic requirements for Safety Gate are as follows.

- The gate prevents the robot system from automatic operation until the gate is closed.
- The closure of the gate is not the control to restart automatic operation. This must be a deliberate action at a control station.
- The gate has plug and socket for interlock.
- The plug and socket must be selected appropriate things for safety.

This gate must be the one either it remains locked closed until the risk of injury from the hazard has passed (interlocking guard with guard locking) or opening the guard while the robot system is working gives a stop or emergency stop instruction (interlocking guard).

Please refer to EN1088 (ISO 14119 or ANSI B11.19) and related standards for detail of interlocking system.

Care should be taken to ensure that actuation of an interlock installed to protect against on hazard (e.g. stopping hazardous motion of the robot system) does not create a different hazard (e.g. the release of hazardous substances into the work zone).

3.5.3 Other Protection Devices

Protection devices must be designed and incorporated into the control system so that:

- moving parts cannot start up while they are within the operator's reach,
- the exposed person cannot reach moving parts once they have started up,
- they can be adjusted only by means of an intentional action, such as the use of a tool, key, etc.,
- the absence or failure of one of their components prevents starting or stops the moving parts.

If some presence sensing devices are used for safety purposes, they must comply with the following.

3.SAFETY DEVICES
B-80687EN/12

A presence sensing device must be installed and arranged so that persons cannot enter and reach into a hazardous area without activating the device or cannot reach the restricted space before the hazardous conditions have ceased. Barriers used in conjunction with the presence-sensing device may be required to prevent persons from bypassing the device.

- Their operation must not be adversely affected by any of the environmental conditions for which the system was intended.
- When a presence-sensing device has been activated, it may be possible to restart the robot system from the stopped position provided that this does not create other hazards.
- Resumption of robot motion must require the removal of the sensing field interruption. This must not be the control to restart automatic operation.

3.6 OPERATION INSIDE OF THE SAFETY FENCE

When some workers (programmer, maintenance engineer) have to enter the safety fence, the following care has to be taken into account.

- Make sure that the robot system has been completely stopped before entering into the safety fence.
- Never enter the safety fence during the robot moving.

 If the robot is moving, stop the robot by hold button (or input signal), and after "controlled stop" it (servo power off), then you can enter the safety fence. Make sure that an indicator lamp for stop condition (to be suitably installed by the end user) shows the stopped status of the robot, and enter the safety fence from the safety gate.
- Set "Safe speed" signal enabled.
- When more than one worker collaborates for their operation, a person in charge should be
 equipped with teach pendant, and other workers have to follow his order.

 Any operations from the external interface and robot controller operation panel without his
 order have to be prohibited.
- All workers inside of the safety fence always have to secure the escape zone to avoid hazards from unintended movement of the robot.
- · Care should be taken by all workers not to close off the escape routes for each other.
- Do not operate the robot resting against the wall, apparatus installed inside of the safety fence, etc. those take away escape zone from the operator.
- Keep watching the robot during operation in jogging, program verification, etc.
- Stop the robot immediately by E-stop SW when somebody recognizes dangerous situation. Whenever possible, other operator who is readily accessible to the E-stop SW keeps watch from the outside of the safety fence.
- Make sure that deadman SWs on teach pendant are operated only by hand.
- Make sure that nobody still exists inside of the safety fence when the safety gate is going to be closed.
- Do not leave tools etc. inside of the motion range of robot or peripheral devices, when operation inside of the safety fence has been finished.

! WARNING

Safety procedures of entering the safety fence have to be established and observed. Improper procedure of entering the safety fence can cause serious injury or death of personnel who enter the safety fence.

B-80687EN/12 3.SAFETY DEVICES

WARNING

During teaching or maintenance of robot system with safety fence opened, special care shall be take not to enter any other personnel who is not work for these operations. Unauthorized entry to inside of safety fence can cause serious injury or death of personnel who enter the safety fence.

3.7 THE SAFETY SEQUENCE FOR FENCE ENTRY

This section describes the safety procedure of entering into the safety fence.

Note that only a programmer or a maintenance person can enter the safety fence. A general person CANNOT enter the safety fence.

Entering into the SAFETY FENCE

- ☐ The robot is moving automatically (in AUTO mode).
- 1. Stop the robot by pressing HOLD buttons or HOLD input signal.
- 2. Change the operating mode to T1 or T2 from AUTO.
- 3. Remove the operating mode key switch for mode lock.
- 4. Remove the plug2 from socket2. Open the gate of the safety fence, and put the plug2 to socket4.
- 5. Remove the plug1 from socket1
- 6. Enter inside of the safety fence, and put the plug1 to socket3.

Please refer to Fig.3.5 for details of safety fence and safety plug configurations.

The key of operating mode key switch and the safety plug1 must be carried into the safety fence.

The safety plug1 must be put to the socket3 inside fence.

3.SAFETY DEVICES

B-80687EN/12

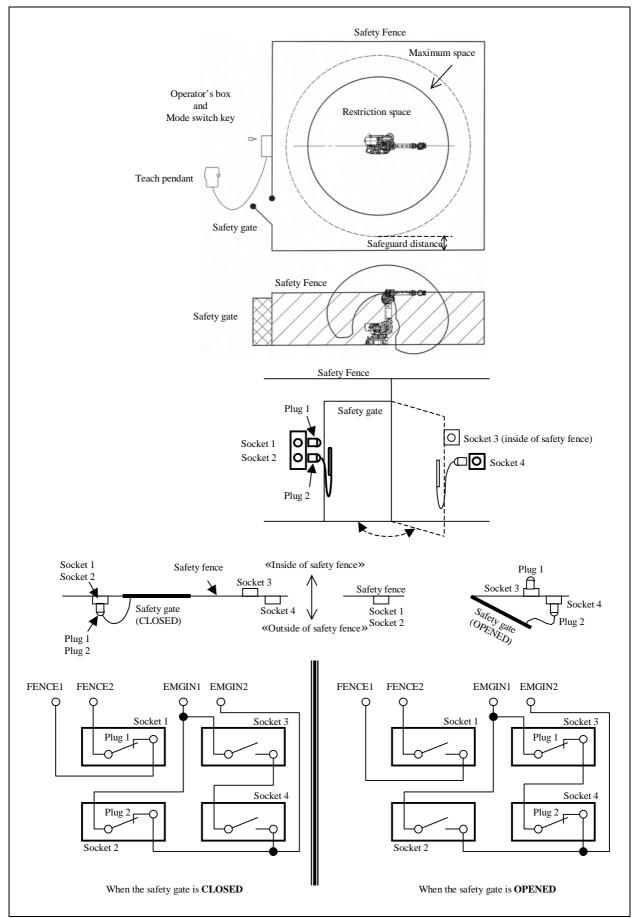


Fig.3.7 SAFETY FENCE and SAFETY GATE example

4

GENERAL CAUTIONS

In this chapter, the requirements for safety during the following situations are described:

- Installation (4.1)
- Commissioning and functional testing (4.2)
- Programming (4.3)
- Program verification (4.4)
- Trouble shooting (4.5)
- Saving programmed data (4.6)
- Automatic operation (4.7)
- Maintenance (4.8)
- Dismantling / scrapping (4.9)
- Other cautions (4.10)

The user must ensure that the safeguarding methods are provided, utilized, and maintained for each operation associated with the robot system and in particular for personnel other than those utilizing the teach pendant or enabling device.

The user must ensure that a teach pendant not connected to the robot controller must be inaccessible.

∴ WARNING

Safety procedures of entering the safety fence have to be established and observed. Improper procedure of entering the safety fence can cause serious injury or death of personnel who enter the safety fence.

! WARNING

During teaching or maintenance of robot system with safety fence opened, special care shall be take not to enter any other personnel who is not work for these operations. Unauthorized entry to inside of safety fence can cause serious injury or death of personnel who enter the safety fence.

! CAUTION

The servo motors, the regenerative resistor units and the isolated transformers on the AC power supply may be hot even after robot operation. Touching the surface of these components should be therefore avoided as much as possible. When touching any of these components is nonetheless required (ex.: for maintenance purposes), special care must be applied in order to avoid burn injury.

4.1 INSTALLATION

The robot system must be installed in accordance with FANUC's requirements. The safeguarding methods must be identified by the hazard analysis and the risk assessment. The user must review the safety requirements to ensure that the appropriate safeguards are applied and operational prior to use in production.

4.2 COMMISSIONING AND FUNCTIONAL TESTING

During the testing of robots or robot systems after installation or relocation, the following procedures must be followed. These procedures are also applied to robots or robot systems after modifications (e.g. changes in hardware or software, replacement of parts, adjustments) and after maintenance or repairs that can adversely affect their operation.

4.2.1 Designation of the Restricted Space

When the safeguarding methods are not in place prior to commissioning and functional testing, interim means of designating the restricted space must be in place before proceeding.

4.2.2 Restriction of Personnel

During the commissioning and functional testing, personnel must not be allowed in the safeguarded space until the safeguards are functional.

4.2.3 Safety and Operational Verification

At the initial start-up, the following procedure must be included (but not limited to).

Before applying power, verify that

- the robot has been properly mechanically mounted and is stable,
- the electrical connections are correct and the power (i.e. voltage, frequency, interference levels) is within specified limits,
- the other utilities (e.g. water, air, gas) are properly connected and within specified limits,
- the peripheral equipment is properly connected,
- the limiting devices that establish the restricted space (when utilized) are installed,
- the safeguarding means are applied, and
- the physical environment is as specified (e.g. lighting and noise levels, temperature, humidity, atmospheric contaminants).

After applying power, verify that

- the start, stop, and mode selection (including key lock switches) control devices function as intended.
- each axis moves and is restricted as intended,
- emergency stop circuits and devices are functional,
- it is possible to disconnect and isolate the external power sources,
- the teach and playback facilities function correctly,
- the safeguards and interlocks function as intended,
- other safeguarding is in place (e.g. barriers, warning devices),
- in reduced speed, the robot operates properly and has the capability to handle the product or workpiece, and
- in automatic (normal) operation, the robot operates properly and has the capability to perform the intended task at the rated speed and load.

4.2.4 Robot System Restart Procedures

A procedure for the restart of the robot system after hardware, software or task program modification, repair, or maintenance must include but not necessarily be limited to the following:

- check any changes or additions to the hardware prior to applying power;

- functionally test the robot system for proper operation.

4.3 PROGRAMMING

Whenever possible, programming must be performed with all persons outside the safeguarded space. When it is necessary to perform programming with personnel inside the safeguarded space, the following safety procedures are necessary.

WARNING

No other personnel than programmer or teaching operator enter inside of safety fence during teaching. Unauthorized entry to inside of safety fence can cause serious injury or death of personnel who enter the safety fence.

4.3.1 Prior to Programming

The programmer must be trained on the type of robot used in the actual robot system and must be familiar with the recommended programming procedures including all of the safeguarding methods.

- The programmer must visually check the robot system and safeguarded space to ensure that extraneous conditions which can cause hazardous do not exist.
- Where required for programming, the teach pendant must be tested to ensure proper operation.
- Any faults or failures must be corrected prior to entering the safeguarded space.

Before entering the safeguarded space, the programmer must ensure that all necessary safeguards are in place and functioning.

The programmer must set the operating mode T1 (or T2) from AUTO prior to entering the safeguarded space.

4.3.2 During Programming

During programming, only the programmer must be allowed in the safeguarded space and the following conditions must be met.

- The robot system must be under the sole control of the programmer within the safeguarded space. (When T1 or T2 mode is selected, the robot can be moved only by the teach pendant.)
- The controls of the teach pendant must be used as intended.
- The robot system must not respond to any remote commands or conditions that would cause hazardous conditions.
- Movement of other equipment in the safeguarded space which can present a hazard must either be prevented or under the sole control of the programmer. When under control of the programmer, it must require deliberate action on the part of the programmer separate from the action to initiate robot motion.
- All robot system emergency stop devices must remain functional.

4.3.3 Returning to Automatic Operation

The programmer must return the suspended safeguards to their original effectiveness prior to initiating automatic operation of the robot system.

4.4 PROGRAM VERIFICATION

When visual examination of the robot system response to the task program is necessary as part of the verification procedure, it should be made with all persons outside the safeguarded space. When it is necessary to perform program verification with personnel inside the safeguarded space, the following must apply.

- Program verification must initially be performed at reduced speed.
- When it is necessary to examine the movement of the robot at full (operational) speed, the following requirements must apply:
 - suspension of the reduced speed by the operation mode switch (T2 mode) must be done by the programmer only;
 - an enabling device or a device with an equivalent safety level must be used by personnel within the safeguarded space;
 - safe working procedures are established to minimize the exposure of personnel to hazards within the safeguarded space.

4.5 TROUBLE SHOOTING

Trouble shooting must be performed from outside the safeguarded space. When this is not practicable, and the design of the robot system has taken into account the necessity of performing trouble shooting from within the safeguarded space, the following requirements must apply:

- personnel responsible for trouble shooting are specifically authorized and trained for these activities;
- personnel entering the safeguarded space must use the teach pendant (deadman switch) to allow motion of the robot;
- safe working procedures are established to minimize the exposure of personnel to hazards within the safeguarded space.

4.6 SAVING PROGRAMMED DATA

Whenever possible, a record of the task programs together with any modifications should be maintained.

Programmed data can be stored on file I/O devices (e.g. memory card, floppy disk, etc.) The media to which programmed data are saved must be stored in a suitably protected environment when not in use.

Please refer to robot controller "Operator's Manual" for detail.

4.7 AUTOMATIC OPERATION

Automatic operation must only be permissible when

- the intended safeguards are in place and functioning,
- no personnel are present within the safeguarded space, and
- proper safe working procedures are followed.

∱WARINIG

Please make sure that nobody remained inside of the safety fence before starting up automatic operation of robot systems. If somebody remained inside of the safety fence exists, trapped personnel inside of the safety fence might meet serious situation, which can lead them to serious injury or death.

4.8 MAINTENANCE

The robot system must have an inspection and maintenance program to ensure continued safe operation of the robot system. The inspection and maintenance program must take into account the robot and robot system manufacturer's recommendations.

Personnel who perform maintenance or repair on robots or a robot system must be trained in the procedures necessary to perform safely the required tasks.

Personnel who maintain and repair robot systems must be safeguarded from hazards.

Where possible, maintenance must be performed from outside the safeguarded space by placing the robot arm in a predetermined position.

The following is the safety procedure of entering into safeguarded space for maintenance when it is necessary to perform maintenance within the safeguarded space.

WARNING

Power of robot system has to be disconnected by the main breaker (disconnect device) as much as possible during maintenance. Maintenance without disconnection of electrical power supply to the robot system can cause electrical shock.

Entering safeguarded space for maintenance

- 1. Stop the robot system.
- 2. Shut off the power of the robot system, and lock the main breaker to prevent powering on during maintenance, by mistake.

If you have to enter the safeguarded space while power is available to the robot system, you must do the following things prior to entering the safeguarded space:

- check the robot system to determine if any conditions exist that are likely to cause malfunctions,
- check if the teach pendant works correctly, and
- if any damage or malfunction is found, complete the required corrections and perform retest before personnel enter the safeguarded space.
- 3. Enter the safeguarded space (see 3.7 "The Safety Sequence for Fence Entry").
- 4. After the maintenance working, check if the safeguard system is effective. If it has been suspended to perform the maintenance working, return their original effectiveness.

4.9 DISMANTLING / SCRAPPING

Do not start dismantling the robot before contacting FANUC Luxembourg, FANUC Robotics America or FANUC Corporation in Japan.

Please contact us when you have to dismantle/scrap FANUC robot systems.

↑ WARNING

Dismantling/scrapping a FANUC robot system must be done in compliance with the related instructions provided by FANUC. Inappropriate method of dismantling/scrapping may lead to the loss of mechanical balance of the robot, and cause very severe injury or death of personnel.

↑ WARNING

When dismantling and/or scrapping robot mechanical units equipped with spring balancers, the robot arm may move unexpectedly due to the stored elastic energy of the springs inside the balancer(s), and subsequently lose its balance. Dismantling and scrapping of such robot system must be done only after releasing the stored energy and according to the instructions provided by FANUC. Very severe injury or death of personnel may occur in case any of these instructions is not followed

↑ WARNING

Dismantling/scrapping a FANUC robot system must be done in compliance with the related instructions provided by FANUC. Inappropriate method of dismantling/scrapping may lead to the loss of mechanical balance of the robot, and cause very severe injury or death of personnel.

ACAUTION

Robot batteries used for memory and/or encoder backup must be disposed of appropriately. Failure to do so may cause short circuit during dismantling/scrapping, which potentially can cause ignition or explosion.

4.10 OTHER CAUTIONS

Some robot models have axes without brakes which prevent moving during their power being cut off. So their axes without brakes may be moved by the force of gravity when the servo power is cut off. Please be careful of their movement, especially for their wrist joints, in the above operations.

5 DAILY MAINTENANCE

5.1 MECHANICAL UNIT

To keep the robot system safe, please perform periodic maintenance those are specified in mechanical unit operators manual or maintenance manual.

In addition, please clean each part of the system and visually check them for any damage or cracks. Daily check items are as follows (but not limited to).

- Input power voltage
- Pneumatic pressure
- Damage of connection cables
- Looseness of connectors
- Lubrication
- Emergency stop functions
- Effectiveness of deadman switch on teach pendant
- Safety gate interlocks
- Vibration, noise by the robot movement
- Functions of peripheral devices
- Fixtures of robot and peripheral devices

5.2 CONTROL UNIT

Before operating the system each day, clean each part of the system and check the system parts for any damage or cracks.

Also, check the following:

- (a) Before service operation
 - Check the cable connected to the teach pendant for excessive twisting.
 - Check the controller and peripheral devices for abnormalities.
 - Check the safety function.

(b) After service operation

At the end of service operation, return the robot to the proper position, then turned off the controller. Clean each part, and check for any damage or cracks.

If the ventilation port and the fan motor of the controller are dusty, wipe off the dust.

6

EC DECLARATION OF CONFORMITY

For FANUC robot series (for CE marking : both of the following labels are attached), EC declarations of conformity with the following contents are applied.

Label for CE marking (on the robot mechanical unit)

INDUSTRIAL ROBOT 工业机器人



AUTHORIZED REPRESENTATIVE IN EU 欧盟授权代表: FANUC Europe Corporation, S.A. ZONE INDUSTRIELLE L-6468 ECHTERNACH, GRAND-DUCHE DE LUXEMBOURG

Label for CE marking (on the robot controller)

ROBOT CONTROLLER WEIGHT 200 KG INPUT VOLTAGE(MULTI - TAP INPUT) 380-415/440-500 VAC

AUTHORIZED REPRESENTATIVE [N EU:FANUC EUROPE CORPORATION. S.A.CE ZONE INDUSTRIELLE L-6468 ECHTERNACH, GRAND-DUCHE DE LUXEMBOURG

*Note: Value of "WEIGHT" and "INPUT VOLTAGE" depend on the robot controller specification.

Contents of EC declarations of conformity for Machinery Directive (2006/42/EC)

Item	Contents		
Name of	FANUC CORPORATION		
the manufacturer			
Address of	3580 Komanba, Shibokusa		
the manufacturer	Oshino-mura, Minamitsuru-gun		
	Yamanashi Prefecture, 401-0597 Japan		
Model	Please refer to "operator's manual" for each robot models.		
Designation	At the beginning of "PREFACE", following information is listed.		
	Model: "Model name"		
	Designation: "Mechanical unit specification No."		
Applied standards	EN ISO 10218-1		
	EN 60204-1		
Importer/Distributor	FANUC EUROPE CORPORATION		
in EU	Zone Industrielle L-6468 Echternach, Grand-Duche de Luxembourg		
Date	Date of manufacture (to be written in EC declaration of conformity attached		
	for each robot system)		

B-80687EN/12 7.CONTACTS

7 CONTACTS

	ADDRESS	PHONE
FANUC Corporation	Oshino-mura, Yamanashi Prefecture 401-0597,	TEL:81-555-84-5555
	Japan	FAX:81-555-84-5512
FANUC America Corporation.	3900 W. Hamlin Road Rochester Hills,	TEL:01-248-377-7000
Headquarters	Michigan 48309-3253	TOLLFREE:01-800-47-
riodaquartoro	Wildingair 10000 0200	ROBOT (76268)
		FAX: 01-248-276-4133
FANUC America Southeast Robotics	13245 Reese Blvd.#140 Campbell Building	TEL: 01-704-596-5121
Southeast Office	Huntersville, NC 28078	1 LL. 01-704-330-3121
FANUC America Midwest Robotics	1800 Lakewood Blvd.	TEL:01-847-898-6000
Midwest Office	Hoffman Estates, IL 60192	FAX: 01-847- 898-6010
FANUC America Midwest Robotics	7700 Innovation Way Mason,	TEL:01-513-754-2400
Midwest Office	OH 45040	FAX:01-513-754-2440
Northeast FANUC America Corporation	7700 Innovation Way Mason,	TEL:01-513-754-2400
Northeast 1 ANOO America Corporation	OH 45040	FAX: 01-513-754-2440
FANUC America West Robotics	25951 Commercentre Drive Lake Forest,	TEL:01-949-59 5-2700
TANOC America West Robotics	CA 92630	FAX:01-949-595-2750
FANUC Robotics do Brazil, LTDA	Rua Matteo Forte, 22- Áqua Branca São Paulo,	TEL: 55-11-3619-0599
·	SP Brasil CEP 05038-160	
FANUC Robotics Canada, Ltd.	6774 Financial Drive Mississauga,	TEL: 01-905-812-2300
	Ontario L5N 7J6	TOLLFREE:01-800-47-
		ROBOT
FANUC Robotique du Canada, Ltee.	Succursale du Quebec 1096 Rue Levis,	TEL: (450) 492-9001
	Suite #6 Lachenaie, Quebec J6W 4L1	TOLLFREE:01-800-47-
		ROBOT
FANUC Robotics Mexico, S.A. de C.V.	Circuito Aguascalientes Norte 136	TEL:52-449-922-8000
	Parque Industrial del Valle de Aguascalientes	
	20355 Aguascalientes, Ags. Mexico	01-800-47-ROBOT
FANUC Europe Corporation	Zone Industrielle L-6468 Echternach,	TEL:352-7277771
	Grand-Duche de Luxembourg	FAX:352-727777403
FANUC Deutschland GmbH	Bernhauser Stra β e 36, D-73765 Neuhausen,	TEL: 49 7158 9873 0
	a.d.F., Germany	FAX:49 7158 98 73-100
FANUC France s.à.r.l.	15 rue Léonard de Vinci Lisses F-91027 Evry	TEL:+33 1 6989 7000
	Cedex, France	FAX:+33 1 6989 7001
FANUC UK Limited.	Seven Stars Industrial Estate	TEL:+44 2476 63 9669
	Quinn Close	FAX:+44 2476 30 4333
	Whitley, Coventry CV3 4LB	
	United Kingdom	
FANUC ITALIA S.R.L.	Viale delle Industrie 1/A	TEL:+39 02 457 95 1
	I-20020 ARESE (MI), Italy	FAX:+39 02 457 95 250
FANUC Iberia S.L.	Ronda Can Rabadá, n° 23	TEL:+34 93 664 13 35
	Pol.Ind "El Camí Ral", Nave n°1	FAX:+34 93 665 76 41
	E-08860 Castelldefels (Barcelona) Spain	
FANUC Czech s.r.o.	U Pekarky 1A/484	TEL:+420 234 072 900
	CZ-180 00 Praha 8 – Liben, Czech Republic	FAX:+420 234 072 910
FANUC SWITZERLAND GmbH	Grenchenstrasse 7 P.O. Box CH-2500 Biel/Bienne	TEL: +41 323 666 363
	8 Switzerland	FAX: +41 323 666 364
FANUC Benelux VBR	Generaal De Wittelaan 15 B-2800 Mechelen	TEL: +32 1520 7157
	Belgium	FAX: +32 1520 7192
FANUC Hungary Kft.	Torbágy utca 20, HU-2045 Törökbálint Hungary	TEL: +36 23 332 007
		FAX: +36 23 332 009
FANUC Polska Sp.z.o.o	ul. Tyniecka 12, PL-52-407 Wroclaw Poland	TEL: +48 7177 66 170
		FAX: +48 71 77 66 179
FANUC Austria GmbH	Sonnenstr. 4	Phone: + (43) 732 77
	A-4653 Eberstalzell	4900
	Austria	Fax: + (43) 732 77 4961

7.CONTACTS
B-80687EN/12

	ADDRESS	PHONE
FANUC Robotics LLC	Научный проезд, д.19	TEL: +7 495 665 0058
	117246г Москва Росспя	FAX: +7 495 22834 04
FANUC Turkey Endustriyel Otomasyon	Şerifali Mevkii Barbaros Cd.	TEL: +90 216 651 1408
Tic. Ltd. Şti.	Söyleşi Sok. No:23 B Blok	FAX: +90 216 489 8988
	TR-34760 Ümraniye Istanbul Turkey	
FANUC Nordic AB	Hammarbacken 4B, S-19149 Sollentuna Sweden	TEL: +46 8 505 80 700
		FAX: +46 8 505 80 700
FANUC ADRIA d.o.o.	Kidričeva 24B, SI - 3000 Celje ,Slovenia	TEL: +386 8 205 64 97
	•	FAX: +386 8 205 64 98

INDEX

<a>	
AUTOMATIC OPERATION22	2
<c></c>	
COMMISSIONING AND FUNCTIONAL	
TESTING20)
CONFIGURATION OF ROBOT SYSTEM	1
CONTACTS27	7
CONTROL UNIT25	5
<d></d>	
DAILY MAINTENANCE25	5
DEADMAN SWITCH14	4
Designation of the Restricted Space20)
DISMANTLING / SCRAPPING23	
During Programming2	
<e></e>	
EC DECLARATION OF CONFORMITY20	5
EMERGENCY STOP13	
END EFFECTOR, WORKPIECE AND	
PERIPHERAL EQUIPMENT)
1 Didi Ildid D Door MD (1	
<f></f>	
FANUC ROBOT SYSTEM	1
	•
<g></g>	
GENERAL	5
GENERAL CAUTIONS	
GENERAL PRECAUTIONS	
OLIVERILE FREE FOR THOSE SECTION OF THE SECTION OF	
< <i>l></i>	
INSTALLATION19)
< <i>M</i> >	
MAINTENANCE23	3
MECHANICAL UNIT	
MODE SELECT SWITCH13	
	,
<0>	
Operating Modes13	3
OPERATION INSIDE OF THE SAFETY	-
FENCE10	5
OTHER CAUTIONS24	
OTHER PRECAUTIONS	
Other Protection Devices	
Other Protection Devices	,
<p></p>	
PLACEMENT OF EQUIPMENT	5
POWER SUPPLY AND PROTECTIVE	,
EARTH CONNECTION	7
Prior to Programming	
PROGRAMMING	
PURPOSE OF ROBOT	ı

<r></r>	
RELEVANT STANDARDS	4
Restriction of Personnel	20
Returning to Automatic Operation	21
ROBOT SYSTEM DESIGN	5
Robot System Restart Procedures	20
Robot Training	3
<\$>	
SAFEGUARDS	14
Safety and Operational Verification	20
SAFETY DEVICES	11
Safety Fence	15
Safety Gate and Plugs	15
SAVING PROGRAMMED DATA	22
STOP TYPE OF ROBOT	11
< <i>T</i> >	
THE SAFETY SEQUENCE FOR FENCE	
ENTRY	17
TROUBLE SHOOTING	22
<w></w>	
WORKING PERSON	2

REVISION RECORD

REVISION RECORD

Edition	Date	Contents
12	Sep., 2014	Additional description of definition of CAUTION and WARNING
11	Aug., 2014	Additional description of CAUTION and WARNING
10	Dec., 2012	Additional description of R-30 <i>i</i> B Mate controller
09	Mar., 2012	Additional description for North America NRTL compliance and R-30 <i>i</i> B controller
08	Sep., 2010	Applied to New Machinery Directive 2006/42/EC Review of all
07	Sep., 2009	Applied to 2006/42/EC
06	Nov., 2008	Additional descriptions for North America NRTL compliance
05	Jan., 2008	Applied to EN ISO10218
04	Oct., 2005	All pages are changed.
03	Apr., 2001	Additional descriptions for R-J3i MODEL B Controller.
02	Jul., 1996	Additional descriptions of B-cabinet.
01	Feb., 1995	

B-80687EN/12

* B - 8 0 6 8 7 E N / 1 2 *