

Application Note: Assembling freeETarget Club

CAUTION

CAUTION

The flatpack is made from unfinished wood.

- Wear eye protection
- Use caution when assembling to avoid splinters

When using freeTarget:

- Wear eye protection
- Maintain a safe distance
- Do not shoot into any areas except the open target areas.

The freeETarget project or contributors will not be responsible for any injuries when using this target or its components.

Target shooting can be dangerous so apply caution in everything you do.

SUMMARY

This document provides the instructions for assembling the freeETarget Club target

REQUIRED

- Flatpack
- Hand tools
 - 2mm Allen key
 - 3mm Allen key
 - Small flat head screwdriver
 - Small Philips screw driver
 - Pliers or nut driver



- - Patience

INTRODUCTION

freETarget is an open source project to provide shooters with a low cost electronic target. To simplify the construction, the FreeETarget Flatpack was created to provide a single location for the mechanical construction.

The latest CAD files can be found at [Github.com/ten-point-nine/freeetarget](https://github.com/ten-point-nine/freeetarget) in the mechanical/cnc folder.

These instructions are for assemblies made after November 2022. Prior to that the screw assembly was not available and needed to be assembled with glue.

Assembling the flatpack is in three parts

- Assembling the back panel
- Assembling the target plate
- Target assembly

PACKING SLIP

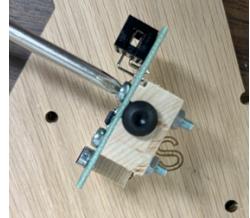
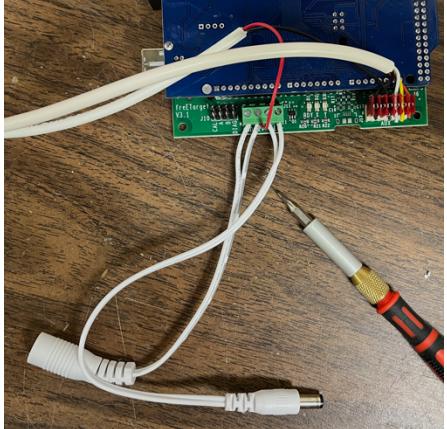
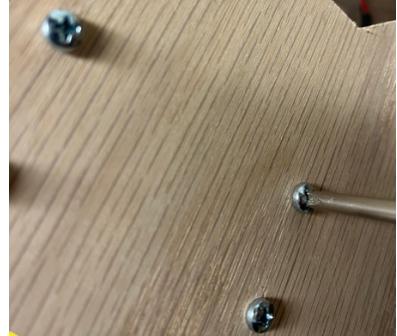
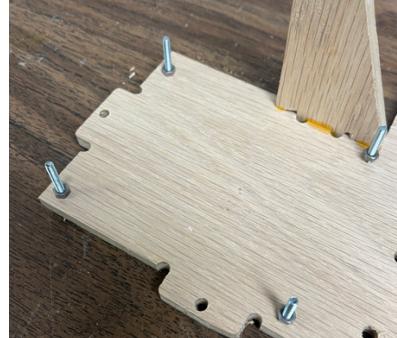
Item	Description	Quantity
Frame		
1	Back with sensor mounts and face plate bolts installed	1
2	Witness paper mounts	2
Optional Assembled Parts		
3	Witness paper drive with (qty) 4mm x 12 bolts	1
4	Multifunction switches	1
5	WiFi cable	1
Target Face		
6	General purpose target face	1
7	General purpose target guides	1
8	5mm mounting screws	4

9	Witness paper guide	1
Piece Parts		
10	Sensor mounting bolts 3mm x 18	8
11	Nuts 3 mm	8
12	WiFi mounting screws #2x1/4"	4
13	3/8 x 4 wood screws	8
14	Wire ties	10
15	Witness paper dowel	1

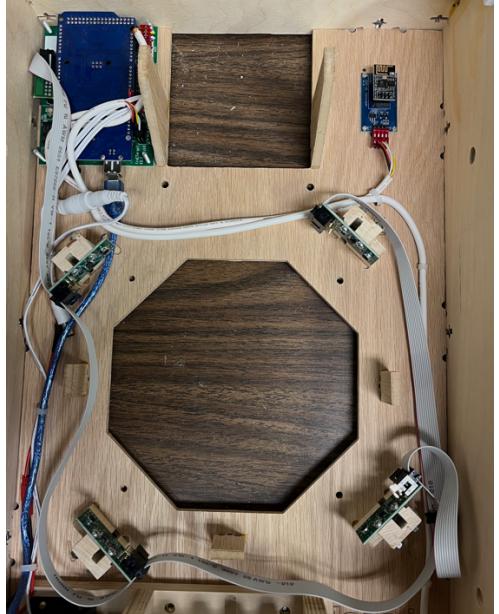
Assembling the Back Panel

Note, photos show similar Club Target back panel

1	Back Panel with Sensor Mounts		
2	Install the witness paper mounts, 2x		
3	<p>Install the cable guides to the back panel</p> <p>There are six guides that glue into the six slots on the back panel. They serve to hold the flat cable in place and prevent the cable from falling into the pellet area.</p> <p>IMPORTANT</p> <p>Do not install the rightmost pair if you intend to use the face strike detector.</p>		
4	<p>Install the WiFi base to the back using the small wood screws.</p> <p>If you have trouble holding the screws while installing, try taping the screw to the screwdriver.</p>		

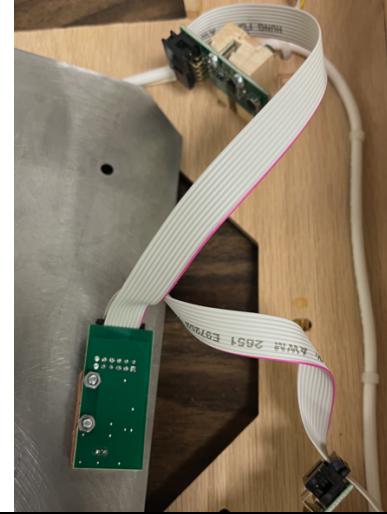
5	<p>Install the four sensors to the sensor mounts. Make sure that the sensors (ex North) match the mount (ex N)</p>		
6		<p>Install the connectors as shown in the photo WiFi wiring harness to AUX connector 12V LED ground to the GND terminal 12V LED + supply to the +12 terminal Motor RED conductor to the +12 terminal Positive LED lead to the LED+ Negative LED lead to the LED-</p>	
7	<p>If using witness paper, Install the witness paper drive using the 4mmx12 screws.</p>		
8	<p>Install the Arduino 3mmx25 mounting screws. Hold in place with nuts. Do not tighten completely</p>		

9	<p>Install the multifunction switches is using the witness paper option</p>	
---	---	--

7		<p>Install the flat cable from the Arduino to all of the sensors.</p> <p>Start from the Arduino and work North West South (skip) Face</p> <p>Align the other cables as show in the picture</p>
8		<p>Route all of the cables on the inside and hold in place by looping a zip-tie from the back, around the cable, and back out again.</p> <p>Tie in place and cut off excess zip tie.</p>

Assembling the Face Plate

1	<p>Install the paper guide using the $\frac{1}{2}$" wood screws.</p> <p>Note the orientation of the two mounting screws on the right of the paper</p>	
---	--	--

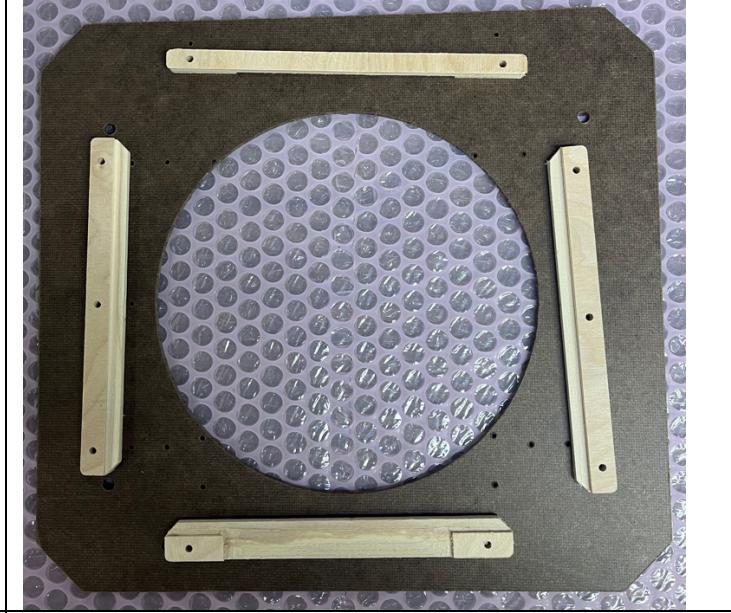
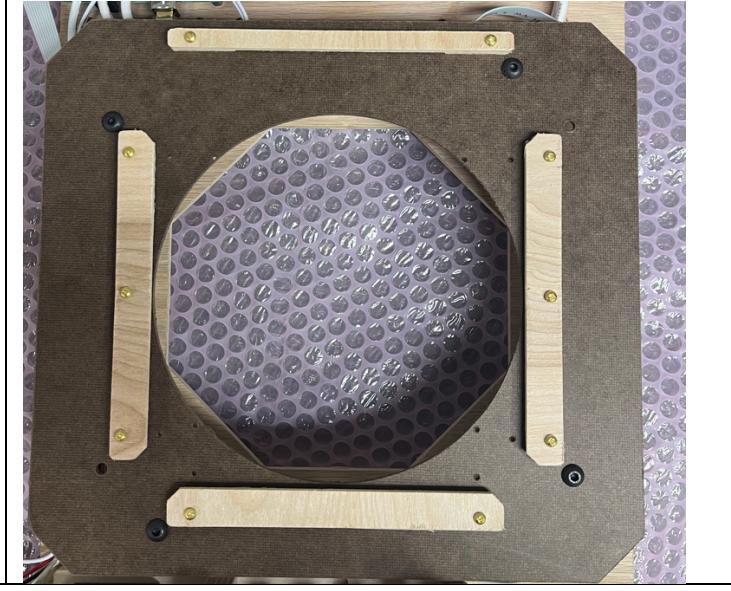
2	<p>Using the 3mm x 5 screws, attach the target paper guide onto the face plate.</p> <p>Insert the screws, but do not tighten completely.</p> <p>Tighten starting from the bottom two screws and work bottom to top.</p> <p>Snug the screws, but do not overtighten. The target paper guide is made from 3D printed plastic and will strip the screws if overtightened.</p>		
3	<p>If using the face strike detector,</p> <p>Using the face plate spacer, install the face sensor using 3mm 18 screws</p>		
4	<p>Attach the face sensor to the flat cable harness</p>		

5		Flip the face plate onto the base and attach with the long 5mm screws. Do not overtighten
---	--	--

Installing the Face Plate

The Club target comes with a general-purpose face plate that is assembled for your particular discipline.

1	Select the target option you need Rifle 5 Bull Rifle Pistol	
2	Remove the unused target options	

3	<p>Locate the target guides. Note that there are</p> <p>Paper Guide (top) Sides (2x) Bottom 1</p> <p>Use the 3/8x4 screws to attach to the face plate.</p>	
4	Install the target plate to the club target	

DOWNLOADING AND INSTALLING PC SOFTWARE

Click the link below to go to the downloads page

<https://free-e-target.com/downloads/>

Look for the PC Software section and download the software (Figure 9)

PC Software

The source files are available on the Github, and you can build your own using the VisualStudio hobby edition.

The most recent version can be downloaded here:

freetarget-
1.13.0_2 [Download](#)

Once you download it, unzip the files and follow the instructions.

Figure 9: Download Software

Unzip the software and install on your PC.

Connect the USB cable between the target holder and the PC.

STARTING UP

Launch the PC program and look for the setup icon (GEAR WHEEL) in the upper right corner (See Figure 10)



Figure 10: Setup Icon Location

Enter all of the setup information needed in Figures 9, 10, 11, and 12

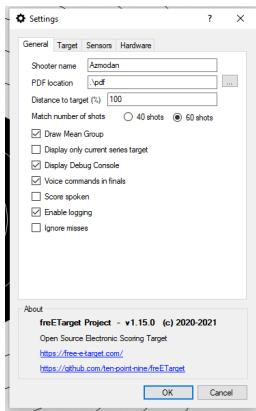


Figure 11: General Settings

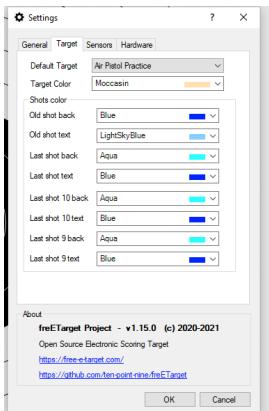


Figure 12: Target Settings



Figure 13: Sensor Adjustment

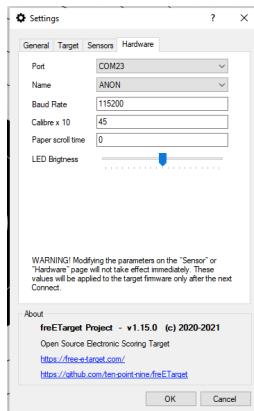



Figure 14: Hardware Interface

Figure 11: This allows you to enter the shooter name and how information will be stored.

Figure 12: Choose the target you will be shooting against and the colours you will be using.

Figure 13: Fine tune the sensor position to adjust for assembly errors

Figure 14: Interface to the target hardware.

Press  to begin a session.

Refer to the Commissioning Instructions from the web site. This will give you a quick summary of how the system is working

TROUBLESHOOTING

The boards are tested before shipment, but a lot can happen between the last test and the first shot. If your system is not working, please follow the trouble shooting guide below before sending an email to freETarget.com

PC Program complains “Database Check Fails..”	<ul style="list-style-type: none"> • Security issue with some antivirus software • Try running as administrator • Disabling antivirus
PC Program cannot see target	<ul style="list-style-type: none"> • The Arduino uses a CH340 which may not have a driver on your PC • Follow the instructions at https://sparks.gogo.co.nz/ch340.html to load in the correct driver
No Shots Registered	<ul style="list-style-type: none"> • Check that the USB cable is attached

	<ul style="list-style-type: none"> • Check that the correct Serial port is set in the setup • Check that the wiring harness is attached to all of the sensors • Tap each of the sensors. Do the three LEDs blink?
Shots show up but in the wrong place	<ul style="list-style-type: none"> • From the firing line, shoot a blank shot <ul style="list-style-type: none"> ◦ Do the three LEDs blink? <ul style="list-style-type: none"> ▪ Yes, set a new trip point ▪ No, Check all of the wiring • Verify that the sensors North – West are in the correct order
The shots show up but rotated 90 degrees	<ul style="list-style-type: none"> • Verify the order of the sensors and correct
The shots are the mirror image left-right	<ul style="list-style-type: none"> • The sensors are reversed. Switch the positions of NORTH-EAST and SOUTH-WEST

APPENDIX A – freETarget Components

