# **Verilog Generator**

**User Guide** 

version 1.02 June 12, 2023

### **Important Notice**

#### Freely available under the terms of the 3-Clause BSD License

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## **Document Revision History**

Doc Revision Number	Date	Description
1.02	June 12, 2023	add default clock, add vfunctions (\$LOG2, \$RANGE, \$DEMUX_BY_EN, \$MULTICYCLE)
1.01	June 8, 2023 add interface:set_top_uppercase function	
1.00	May 8, 2023	Initial relase

## **Table of Contents**

1.	INTRODUCTION	9
	1.1 Main functions	9
	1.2 Verilog automation creation process	
	1.3 How to run	
	1.4 license grant	
2.	FAST FOLLOW	11
	2.1 Step #1 : Creation of module	
	2.2 Step #2 : module interconnections	
	2.3 Step #3 : Verilog code insertion	
3.	MACRO FUNCTIONS	23
	3.1 V macro	24
	3.2 vfunction macro	
	3.3 \$LOG2 function	
	3.4 \$DEMUX BY EN function	
	3.5 \$MULTICYCLE function	
4.	CLASS AND METHOD	30
	4.1 clock	31
	4.1.1 clock:new	
	4.1.2 clock:set_reset	
	4.1.3 clock:get_reset	
	4.1.4 clock:set_speed	
	4.1.5 clock:set default	
	4.1.6 clock.find	
	4.1.7 clock.is_valid	
	4.1.8 clock.get_default	
	4.2 interface	
	4.2.1 interface:new	42
	4.2.2 new_signal	43
	4.2.3 interface.find	44
	4.2.4 interface.is_valid	45
	4.2.5 interface:set_clock	
	4.2.6 interface:get_clock	
	4.2.7 interface:set_signal	
	4.2.8 interface:signal_count	
	4.2.9 interface:set_param	
	4.2.10 interface:get_param	
	4.2.11 interface:set_modport	
	4.2.12 interface:add_modport	
	4.2.13 interface:get_modport	
	4.2.14 interface:set_prefix	
	4.2.15 interface:set_bared	
	4.2.16 interface:set_top_uppercase	
	4.2.17 interface_i:set_port	
	4.2.18 interface_i:set_desc	
	4.2.19 interface_i:set_prefix	
	4.2.20 interface_i:get_prefix	
	4.3 module	63

	4.3.1 module:new	64
	4.3.2 module:make_code	65
	4.3.3 module:set_inception	
	4.3.4 module:get inception	
	4.3.5 module:set_title	69
	4.3.6 module:set author	
	4.3.7 module:set param	71
	4.3.8 module:get_param	
	4.3.9 module:add interface	
	4.3.10 module:add clock	
	4.3.11 module:get interface	
	4.3.12 module:get_port	
	4.3.13 module:add_module	
	4.3.14 module:get_module	
	4.3.15 module:add code	
	4.3.16 module find	80
	4.3.17 module.is_valid	81
	4.3.18 module.apply_code	
	4.3.19 module_i:set_param	
	4.3.20 module_i:get_param	84
	4.3.21 module_i:set_port	85
	4.3.22 module_i:get_port	86
	4.3.23 module_i.is_valid	
5.	APPENDIX	88
<b>J</b> .	5.1 Appendix : test_definition.lua	
	u.   Appendix : test_delinition.ida	

## **List of Tables**

Table	Title	Page
Table 3-1. Macro function summary		23
Table 3-2. List of predefined vfunctions		
Table 4-1. clock object summary		
Table 4-2. interface object summary		
Table 4-3. interface i object summary		
Table 4-4. module object summary		
Table 4-5. module i(sub module) object sum		

## **List of Figures**

Figure	Title	Page
Figure 2-1. Step #1 Hierarchy Diagra	m	12
	m	
	m	

## **List of Terms**

List	Description
TestDrive	TestDrive Profiling Master ( <a href="https://testdrive-profiling-master.github.io/">https://testdrive-profiling-master.github.io/</a> )
Lua	Lua script language (Wiki, Homepage)

UserGuide BSD License.

### 1. Introduction

"Performance can't beat convenience."

When designing with the verilog of a large-scale project, one of the most problematic parts is that it takes a lot of time and effort to configure the control path between modules. In addition, if you need to modify some of the control paths of a design that has been completed with a lot of time and effort, or if you need a major change, you have to be more careful. Otherwise, it may introduce new errors or require the same amount of effort as recreating the design from scratch.

Therefore, I made a verigen tool that creates control paths with minimal design. This tool makes it easy and quick to build a control path programmatically with minimal effort, and has a function that allows you to check the structured control path as a design hierarchy at a glance. It can also allow for faster design changes and sharing of designs with other team members.

NOTE: If you have a new feature to suggest, or find improvements or bugs, please contact me (clonextop@gmail.com).

#### 1.1 Main functions

verigen was created using codegen of TestDrive Profiling Master. This tool runs code written in lua, builds a verilog design, includes all codegen functionality, and generates the following files.

- Automatically generate verilog design (.sv, .f)
- Automatic creation of constraint (.xdc)
- Automatic creation of hierarchy diagram (.svg), HTML highlited source code (.html)

#### 1.2 Verilog automation creation process

Creating a project through verigen proceeds in the following steps.

- 1. Write Lua scripts
  - 1). Create modules
  - 2). Connect modules
  - 3). Declaring parameters and interface to the module (option)
- 2. Write verilog codes
  - 1). Declaring parameters and interface to the module (option)
  - 2). Write Verilog additional code or write Lua mixed code
- 3. Run verigen to generate verilog code

#### 1.3 How to run

To run verigen, run the following command.

#### 1 Introduction

output\_path output path default : ./output

NOTE: Command: verigen INPUT\_LUA\_FILE OUTPUT\_PATH

A Lua script corresponding to INPUT\_LUA\_FILE is created and executed. If OUTPUT\_PATH is not specified, the result is created in the default "./output" folder.

#### 1.4 license grant

The source implemented in verigen complies with the BSD license, and the user's individual scripts used to create verilog or derivative works such as verilog are wholly owned by the user.

UserGuide BSD License.

### 2. Fast follow

This section is a quick, example-oriented explanation. To check the class and method in dictionary format, see the next step 'Class and Method'.

The example below describes the implementation at <u>github example</u>. You can achieve the same result by running do test.bat in that folder.

#### 2.1 Step #1: Creation of module

Generate and run the script code as shown below.

#### [main.lua file]

```
1: -- modules
2: core_wrapper = module:new("test_wrapper") -- top
3: core = {}
4: core.top = module:new("test_core")
5: core.slave_ctrl = module:new("slave_ctrl")
6: core.core_if = module:new("core_if")
7: core.core_ex = module:new("core_ex")
8: core.core_wb = module:new("core_wb")
9: core.mem_ctrl = module:new("mem_ctrl")
10: core.reg_ctrl = module:new("reg_ctrl")
11:
12: -- make code
13: core_wrapper:make_code()
```

It was created by putting the core wrapper module and core related modules in lua table.

#### [Run command]

```
> verigen main.lua
*I: Build TOP design : test_wrapper.sv
*W: Empty port module : 'test_wrapper' module
*I: Build contraint : test_wrapper_constraint.xdc
*I: Make design hierarchy : test_wrapper_hierarchy.svg
*I: Make common defines : test_wrapper_defines.vh
*I: Make design file list : test_wrapper.f
```

Briefly declare the modules to be used through the module:new method. And the last module:make\_code method generates the actual verilog code, constraint files and hierarchy diagram.

Currently, we have declared several modules, but since there is no module associated with core\_wrapper, verilog design only creates one test\_wrapper.sv file.

The rest of the test wrapper constraint.xdc, test wrapper defines.vh, etc. are empty.

#### [Result : test\_wrapper.sv]

```
`include "test_wrapper_defines.vh"

module test_wrapper ();
```

UserGuide BSD License.

#### endmodule

The resulting design is literally an empty module file, and the hierarchy diagram(test\_wrapper\_hierarchy.svg) is also empty.

#### [Result : test\_wrapper\_hierarchy.svg]

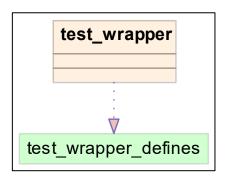


Figure 2-1. Step #1 Hierarchy Diagram

#### 2.2 Step #2: module interconnections

Modify and run the Lua script as shown below.

#### [main.lua file]

```
1: RunScript("test_definition.lua")
3: -- modules
4: core_wrapper = module:new("test_wrapper")
                                                       -- top
5: core
                 = {}
6: core.top = module:new("test_core")
7: core.slave_ctrl = module:new("slave_ctrl")
8: core.core_if = module:new("core_if")
9: core.core_ex = module:new("core_ex")
10: core.core_wb = module:new("core_wb")
11: core.mem_ctrl = module:new("mem_ctrl")
12: core.reg_ctrl = module:new("reg_ctrl")
13: core.busy_ctrl = module:new("busy_ctrl")
14:
15: -- module connection
16: core_wrapper:add_module(core.mem_ctrl)
17: core_wrapper:add_module(core.slave_ctrl)
18:
19: core.top:add_module(core.core_if)
20: core.top:add_module(core.core_ex)
21: core.top:add_module(core.core_wb)
22:
23: core.slave_ctrl:add_module(core.reg_ctrl)
25: -- multi-core genration
26: core.inst = \{\}
27: for i = 1, config.core_size, 1 do
      core.inst[i] = core_wrapper:add_module(core.top)
```

```
29: end
30:
31: -- make code
32: core_wrapper:make_code()
```

Now, in the added lines 15 to 29, each module is connected with the module:add\_module function, and four modules are also created and connected to the core. Include "Appendix: test\_definition.lua" at the top (line #1) to use the predefined config.core size value.

#### [Run command]

```
> verigen main.lua
*I: Build sub design : mem_ctrl.sv
*W: Empty port module : 'mem ctrl' module
*I: Build sub design : reg_ctrl.sv
*W: Empty port module : 'reg_ctrl' module
*I: Build sub design : slave_ctrl.sv
*W: Empty port module : 'slave_ctrl' module
*I: Build sub design : core ex.sv
*W: Empty port module : 'core_ex' module
*I: Build sub design : core_if.sv
*W: Empty port module : 'core_if' module
*I: Build sub design : core_wb.sv
*W: Empty port module : 'core_wb' module
*I: Build sub design : test_core.sv
*W: Empty port module : 'test_core' module
*I: Build TOP design : test_wrapper.sv
*W: Empty port module : 'test_wrapper' module
*I: Build contraint : test_wrapper_constraint.xdc
*I: Make common defines : test_wrapper_defines.vh
*I: Make design hierarchy: test_wrapper_hierarchy.svg
*I: Make design file list : test_wrapper.f
```

In the execution result, other files included in addition to the test\_wrapper.sv file are automatically created, and if you look at the top design, only the module is added and the port is not described, so a warning is generated, but each submodule is automatically You can see what has been added.

#### [Result: test\_wrapper.sv]

```
`include "test_wrapper_defines.vh"

module test_wrapper ();

/* no ports module. (commented out for DRC.)

mem_ctrl mem_ctrl (
);*/

/* no ports module. (commented out for DRC.)

slave_ctrl slave_ctrl (
);*/

/* no ports module. (commented out for DRC.)

test_core test_core_0 (
);*/
```

```
/* no ports module. (commented out for DRC.)
test_core test_core_1 (
);*/

/* no ports module. (commented out for DRC.)
test_core test_core_2 (
);*/

/* no ports module. (commented out for DRC.)
test_core test_core_3 (
);*/
endmodule
```

**NOTE:** In the code above, since the submodule has no input/output at all, it is commented out to avoid 'DRC (Design Rule Check)' errors.

#### [Result : test\_wrapper\_hierarchy.svg]

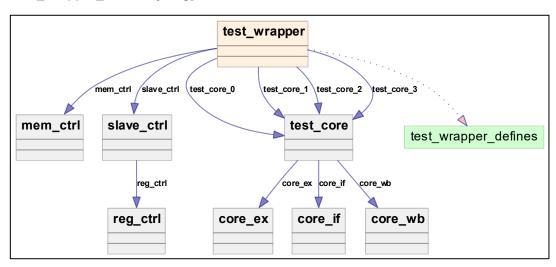


Figure 2-2. Step #2 Hierarchy Diagram

In addition to test\_wrapper.sv, other slave\_ctrl.sv and test\_core.sv also contain submodules, as seen in Figure 2-2.

#### 2.3 Step #3: Verilog code insertion

Modify and run the Lua script as shown below.

#### [main.lua file]

```
1: RunScript("test_definition.lua")
2:
3: -- modules
4: core_wrapper = module:new("test_wrapper") -- top
5: core = {}
6: core.top = module:new("test_core")
7: core.slave_ctrl = module:new("slave_ctrl")
8: core.core_if = module:new("core_if")
```

```
9: core.core ex
                    = module:new("core_ex")
                    = module:new("core_wb")
10: core.core_wb
11: core.mem_ctrl = module:new("mem_ctrl")
                   = module:new("reg_ctrl")
12: core.reg_ctrl
13: core.busy_ctrl = module:new("busy_ctrl")
14:
15: -- add master bus
16: bus.maxi4:set_param("DATA_WIDTH", 512)
17: bus.maxi4:set_param("ADDR_WIDTH", 36)
18: bus.maxi4:set_prefix("M#")
19:
20: -- add busy
                    = new_signal("core_busy")
21: core_busy
22:
23: -- module connection
24: core_wrapper:add_module(core.mem_ctrl)
25: core_wrapper:add_module(core.slave_ctrl)
27: core.top:add_module(core.core_if)
28: core.top:add_module(core.core_ex)
29: core.top:add_module(core.core wb)
30:
31: core.slave_ctrl:add_module(core.reg_ctrl)
32:
33: -- multi-core genration
34: core.inst = \{\}
35: for i = 1, config.core_size, 1 do
      core.inst[i] = core_wrapper:add_module(core.top)
37: end
38:
39: -- add verilog codes
40: for entry in Ifs.dir("src/") do
       local s = String(entry)
41:
        if s:CompareBack(".sv") then
43:
            module.apply_code("src/" .. entry)
44:
        end
45: end
46:
47: -- make code
48: core_wrapper:make_code()
```

The code added to the existing Lua script is line #15~21 and #39~45.

The first changes the bit width of data and address of axi4, and the second one adds the two files below through the module.apply\_code() function to all \*.sv files in the subfolder "./src".

#### [src/\_\_wrapper.sv]

```
5: :core if
6: $set_param("CORE_ID", "0")
7: $add_interface(core_i.inst, "if_inst", "m")
8: $add_interface(core_busy, nil, "m")
9:
10: assign core_busy = 1'b0;
11:
12:
13: :--
14: :core ex
15: $add_interface(core_i.inst, "if_inst", "s")
16: $add_interface(core_i.inst, "ex_inst", "m")
17:
18:
19: :----
20: :core wb
21: $add_interface(core_i.inst, "ex_inst", "s")
```

**NOTE:** As above, by declaring 'modport' paired with the name of the same type of interface through the \$add\_interface() function, the same interfaces declared in two different modules are automatically connected.

#### [src/ wrapper.sv]

```
1: :----
 2: :test_wrapper
            $RANGE(config.core_size) core_busy_all;
3: wire
4:
5: ${
 6:
        for i = 1, config.core_size, 1 do
           core.inst[i]:set_param("CORE_ID", i)
 7:
           core.inst[i]:set_port("core_busy", "core_busy_all[" .. (i-1) .. "]")
8:
9:
        end
10:
        __m:get_module("slave_ctrl"):set_port("core_busy", "|core_busy_all")
11:
12: }
13:
14: :----
15: :slave_ctrl
16: $set_param("BASE_ADDR", "32'h10000000")
17: $add_interface(bus.apb, "s_apb", "m")
18: $add_interface(bus.apb, "s_apb_0", "m")
19:
20: :----
21: :mem ctrl
22: $add_interface(bus.maxi4, "maxi", "m")
23:
24: :----
25: :reg_ctrl
26: $add_interface(core_busy, nil, "s")
```

**NOTE:** You can connect directly through the "module\_i:set\_param()" and "module\_i:set\_port()" functions without automatically connecting interfaces or parameters.

After declaring ":>module\_name>" in the added .sv file, the file can be described using both Verilog and Lua grammars. You can either declare I/O via @set\_param() function and @module:add\_interface() function, respectively, or use Verilog syntax directly.

In addition, if you want to directly access a Lua variable or function, you can access it with \$(\*), or you can execute a Lua statement by describing it with \${\*}.

#### [Result : test\_wrapper\_hierarchy.svg]

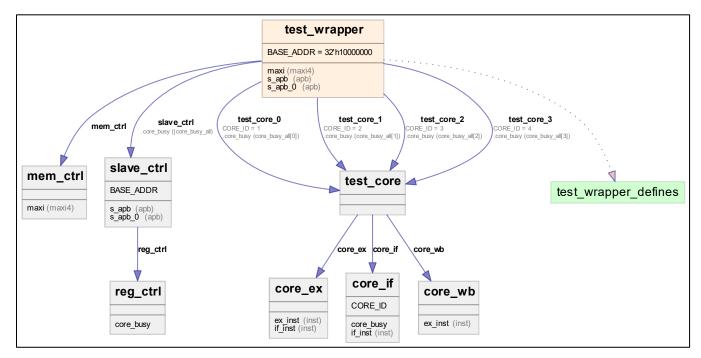


Figure 2-3. Step #3 Hierarchy Diagram

Below is the output of the top design.

#### [Final result : test\_wrapper.sv]

```
`include "test_wrapper_defines.vh"
module test_wrapper #(
    parameter BASE_ADDR
                                = 32 h10000000
    // clock & reset
                                              // AXI clock
    input
                                ACLK,
                                CLK,
                                              // main clock
    input
                                PCLK,
                                              // APB clock
    input
                                              // reset of 'PCLK' (active low)
    input
                                PRESETn,
                                              // default global reset (active low)
    input
                                nRST,
    // maxi
    input
                                M_AWREADY,
    input
                                M_WREADY,
    input
                                M_BVALID,
           [1:0]
    input
                                M_BRESP,
    input
           [3:0]
                                M_BID,
    input
                                M ARREADY,
    input
                                M_RVALID,
           [511:0]
                                M_RDATA,
    input
           [1:0]
    input
                                M_RRESP,
    input [3:0]
                                M_RID,
```

```
input [3:0]
                                M_ARQOS,
    input [3:0]
                                M_ARREGION,
                                M_AWVALID,
    output
                                M_AWADDR,
    output [35:0]
    output [2:0]
                                M_AWSIZE,
    output [1:0]
                                M_AWBURST,
    output [3:0]
                                M_AWCACHE,
    output [2:0]
                                M_AWPROT,
    output [3:0]
                                M_AWID,
    output [7:0]
                                M AWLEN,
    output
                                M_AWLOCK,
                                M_WVALID,
    output
    output
                                M_WLAST,
    output [511:0]
                                M_WDATA,
    output [63:0]
                                M_WSTRB,
    output [3:0]
                                M_WID,
    output
                                M_BREADY,
    output
                                M_ARVALID,
    output [35:0]
                                M_ARADDR,
    output [2:0]
                                M_ARSIZE,
    output [1:0]
                                M_ARBURST,
    output [3:0]
                                M_ARCACHE,
    output [2:0]
                                M_ARPROT,
    output [3:0]
                                M_ARID,
    output [7:0]
                                M_ARLEN,
                                M_ARLOCK,
    output
                                M_RREADY,
    output
    output
                                M_RLAST,
    output [3:0]
                                M_AWQOS,
    output [3:0]
                                M_AWREGION,
    // s_apb
                                SO_PREADY,
    input
    input [31:0]
                                SO_PRDATA,
                                SO_PSLVERR,
    input
    output [1:0]
                                SO_PSEL,
    output
                                SO_PENABLE,
    output
                                SO_PWRITE,
    output [15:0]
                                SO_PADDR,
    output [31:0]
                                SO_PWDATA,
    // s_apb_0
    input
                                S1_PREADY,
    input [31:0]
                                S1_PRDATA,
                                S1_PSLVERR,
    input
    output [1:0]
                                S1_PSEL,
    output
                                S1_PENABLE,
    output
                                S1_PWRITE,
    output [15:0]
                                S1_PADDR,
    output [31:0]
                                S1_PWDATA
);
```

```
// synopsys template
// interface : maxi
i_maxi4
                       maxi();
                               = M_AWREADY;
assign maxi.AWREADY
assign maxi.WREADY
                               = M_WREADY;
                               = M_BVALID;
assign maxi.BVALID
assign maxi.BRESP
                               = M BRESP;
assign maxi.BID
                               = M_BID;
assign maxi.ARREADY
                               = M_ARREADY;
assign maxi.RVALID
                               = M RVALID;
assign maxi.RDATA
                               = M_RDATA;
assign maxi.RRESP
                               = M_RRESP;
assign maxi.RID
                               = M_RID;
assign maxi.ARQOS
                               = M_ARQOS;
assign maxi.ARREGION
                               = M_ARREGION;
assign M_AWVALID
                               = maxi.AWVALID;
assign M_AWADDR
                               = maxi.AWADDR;
assign M_AWSIZE
                               = maxi.AWSIZE;
assign M_AWBURST
                               = maxi.AWBURST;
assign M_AWCACHE
                               = maxi.AWCACHE;
assign M AWPROT
                               = maxi.AWPROT;
assign M_AWID
                               = maxi.AWID;
assign M_AWLEN
                               = maxi.AWLEN;
assign M_AWLOCK
                                = maxi.AWLOCK;
                               = maxi.WVALID;
assign M_WVALID
assign M_WLAST
                               = maxi.WLAST;
assign M_WDATA
                                = maxi.WDATA;
assign M_WSTRB
                               = maxi.WSTRB;
assign M_WID
                               = maxi.WID;
assign M_BREADY
                               = maxi.BREADY;
assign M_ARVALID
                               = maxi.ARVALID;
assign M_ARADDR
                               = maxi.ARADDR;
assign M_ARSIZE
                               = maxi.ARSIZE;
assign M_ARBURST
                               = maxi.ARBURST;
assign M_ARCACHE
                               = maxi.ARCACHE;
                               = maxi.ARPROT;
assign M_ARPROT
assign M_ARID
                               = maxi.ARID;
assign M_ARLEN
                               = maxi.ARLEN;
assign M_ARLOCK
                               = maxi.ARLOCK;
assign M_RREADY
                               = maxi.RREADY;
assign M_RLAST
                               = maxi.RLAST;
assign M_AWQOS
                               = maxi.AWQOS;
assign M_AWREGION
                               = maxi.AWREGION;
// interface : s_apb
i_apb
                       s_apb();
assign s_apb.PREADY
                               = SO_PREADY;
assign s_apb.PRDATA
                               = SO PRDATA;
                               = SO_PSLVERR;
assign s_apb.PSLVERR
assign SO_PSEL
                               = s_apb.PSEL;
assign S0_PENABLE
                               = s_apb.PENABLE;
assign SO_PWRITE
                                = s_apb.PWRITE;
```

```
assign SO_PADDR
                                 = s_apb.PADDR;
assign SO_PWDATA
                                 = s_apb.PWDATA;
// interface : s_apb_0
i_apb
                        s_apb_0();
assign s_apb_0.PREADY
                                = S1_PREADY;
                                = S1_PRDATA;
assign s_apb_0.PRDATA
                                = S1_PSLVERR;
assign s_apb_0.PSLVERR
assign S1_PSEL
                                = s_apb_0.PSEL;
assign S1_PENABLE
                                = s_apb_0.PENABLE;
assign S1_PWRITE
                                = s_apb_0.PWRITE;
assign S1_PADDR
                                = s_apb_0.PADDR;
assign S1_PWDATA
                                = s_apb_0.PWDATA;
mem_ctrl mem_ctrl (
    . ACLK
                          (ACLK),
    .nRST
                          (nRST),
                          (maxi)
    .maxi
);
slave_ctrl #(
    .BASE_ADDR
                          (BASE_ADDR)
) slave_ctrl (
    . PCLK
                          (PCLK),
    . PRESETn
                          (PRESETn),
    .core_busy
                          (|core_busy_all),
                          (s_apb),
    .s_apb
                          (s_apb_0)
    .s_apb_0
);
test_core #(
    .CORE_ID
                          (1)
) test_core_0 (
    . CLK
                          (CLK),
    .nRST
                          (nRST),
                          (core_busy_all[0])
    .core_busy
);
test_core #(
                          (2)
    .CORE_ID
) test_core_1 (
    .CLK
                          (CLK),
    . nRST
                          (nRST),
                          (core_busy_all[1])
    .core_busy
);
test_core #(
                          (3)
    .CORE_ID
) test_core_2 (
    .CLK
                          (CLK),
    . nRST
                          (nRST),
                          (core_busy_all[2])
    .core_busy
);
```

#### [Final result : test\_core.sv]

```
`include "test_wrapper_defines.vh"
module test_core #(
    parameter CORE_ID
                               = 0
) (
    // clock & reset
                                           // main clock
                               CLK,
    input
    input
                               nRST,
                                           // default global reset (active low)
    // core_busy
   output logic
                             core_busy
);
// synopsys template
// interface : ex_inst
i_inst
                       ex_inst();
// interface : if_inst
i_inst
                       if_inst();
core_ex core_ex (
   . CLK
                         (CLK),
    .nRST
                         (nRST),
                         (ex_inst),
   .ex_inst
    .if_inst
                         (if_inst)
);
core_if #(
    .CORE_ID
                         (CORE_ID)
) core_if (
    .CLK
                         (CLK),
    .nRST
                         (nRST),
                         (core_busy),
    .core_busy
   .if_inst
                         (if_inst)
);
```

#### 2 Fast follow

```
core_wb core_wb (
                         (CLK),
   . CLK
                         (nRST),
   . nRST
                         (ex_inst)
   .ex_inst
endmodule
```

BSD License. UserGuide 22 v1.02

## **Macro functions**

Provides macro functions useful for organizing your code.

Table 3-1. Macro function summary

Macro	Type	Description
_V	function	string expansion manipulation
vfunction	function	Declaring a function for verilog

The functions below are predefined functions as vfunction available in verilog. It can be used as "\$function\_name(~)".

Table 3-2. List of predefined vfunctions

vfunction	Туре	Description
\$LOG2	function	log2(X) function
\$RANGE	function	verilog bitwidth range template
\$DEMUX_BY_EN	function	demux design template
\$MULTICYCLE	function	multicycle design template
\$add_clock	function	Refer to 4.3.10. module:add_clock
\$add_interface	function	Refer to 4.3.9. module:add_interface
\$set_param	function	Refer to 4.3.7. module:set_param
\$set_inception	function	Refer to 4.3.3. module:set_inception
\$set_author	function	Refer to 4.3.6. module:set_author
\$_V	function	Refer to 3.1V macro

UserGuide **BSD** License.

### 3.1 \_V macro

Type	Description	
Prototype	function _V(s, [start], [end], [step])	
Return value	string	
	Extends a statement by incrementing it by a step from start to end.	
Remarks	If there is a part of the statement implemented with \$(), only that part is expanded. If there is none, the entire sentence is expanded, and the '#' character in the sentence is assigned a repeated value from start to end.	
start	start value	
end	end value (If omitted, it is treated the same as the start value.)	
step	increase value (If omitted, it increases or decreases by 1 or -1. according to the sign of the end-start value.)	

#### ex) \_V macro example

```
print(_V("assign A = {$(B[#],)};", 0, 3))
 [Result]
```

**assign**  $A = \{B[0], B[1], B[2], B[3]\};$ 

UserGuide **BSD** License.

#### 3.2 vfunction macro

Type	Description	
Prototype	function vfunction(name, func)	
Return value	-	
Remarks	You can call lua functions from within verilog with "\$function()".	
name	Function name to use within verilog	
func	lua function to use in verilog	

**NOTE:** By default, the "\_V" macro is declared as vfunction, so you can use the \$\_V(...) function equivalently within verilog.

ex) vfunction macro example

```
vfunction("RANGE", function(size,step)
    return ("[" .. ((size*(step+1))-1) .. ":" .. (size*step) .. "]")
end)
[Source input]
wire
        $RANGE(32,1)
                        Τ;
[Result]
wire
        [63:32]
```

UserGuide **BSD** License.

25

#### 3.3 \$LOG2 function

Type	Description
Prototype	\$LOG2(val, [bOverflow])
Return value	number
Remarks	Returns log2(val) value.
val	log2 input value
bOverflow	val must be an integer equal to 2^N .  If not, return an error.  Set this value to true to force rounding up on the resulting value.  If omitted, false is assumed.

#### ex) \$LOG2 example

```
val_a = 16
 [Source input]
localparam
                         = $L0G2(val_a);
                 BITS
 [Result]
                         = 4;
localparam
                 BITS
```

#### 3.4 \$DEMUX\_BY\_EN function

Type	Description
Prototype	\$DEMUX_BY_EN(width, channel_count, en, data_in, data_out)
Return value	string
Remarks	Implement demux using demux_by_enable module.
width	bitwidth per data
channel_count	Number of input channels
en	input enable signal (string)
data_in	Input data (as many as the total number of channel_count, string)
data_out	output data (string)

#### ex) \$DEMUX\_BY\_EN example

#### [Source input]

```
wire
     [31:0]
                   a,b,c,d;
wire
       [3:0]
                   en;
       [31:0]
wire
                   odata;
$DEMUX_BY_EN(32, 4, "en", "{a,b,c,d}", "odata")
```

#### [Result]

```
wire
     [31:0]
                    a,b,c,d;
wire
        [3:0]
                    en;
wire
        [31:0]
                    odata;
demux_by_enable #(
    .WIDTH
                        (32),
    . CHANNELS
                        (4),
    .TRISTATE
                        (1)
) demux_en_pc (
    .EN_BUS
                        (en),
    .DIN_BUS
                        ({a,b,c,d}),
    .DOUT
                        (odata)
);
```

#### 3.5 \$MULTICYCLE function

Type	Description
Prototype	\$MULTICYCLE(module_inst_name, if_name, cycle_count, [instance_count], [clk])
Return value	string
Remarks	Multicycle Implementation Using the template "MultiCyclePath" module or "MultiCyclePathEx", a module with one interface is implemented as multicycle.
module_inst_n ame	Module name included as a child of the current module
if_name	Specifies the interface instance name corresponding to the module of module_inst_name.
cycle_count	cycle count (2 ≤ cycle_count ≤ 12)
instance_coun t	Number of instances of submodules (1 ≤ instance_count ≤ cycle_count)  If omitted, it is regarded as the same number as cycle_count.
clk	Clock to use for multicycle implementation  If omitted, the default clock is used. (see clock:set_default() function)

#### ex) \$MULTICYCLE example

[Source input]

```
$MULTICYCLE("MTSP_Synchronize", "mtsp_sync", 2, 1)
```

[Result]

```
genvar i;
// multicycle design for MTSP_Synchronize
i_mtsp_sync mtsp_sync();
wire
        mtsp_sync_ie, mtsp_sync_oe, mtsp_sync_iready;
generate
wire
        [7:0]
                pipe_i;
        [1:0]
wire
                pipe_o;
wire
        [1:0]
                __o;
MultiCyclePathEx #(
    . IWIDTH
                (8),
    .OWIDTH
                (2),
    . CYCLE
                (2),
    . COUNT
                (1)
) multi_pipe (
    .CLK
                (MCLK),
    .nRST
                (nRST),
    . IE
                (mtsp_sync_ie),
    . IDATA
                ({mtsp_sync.sync, mtsp_sync.eop}),
    . IREADY
                ({mtsp_sync_iready}),
    .PIPE_I
                (pipe_i),
                (pipe_o),
    .PIPE_0
    .0E
                (mtsp_sync_oe),
    . ODATA
                 (__o)
);
```

```
assign {mtsp_sync.awake, mtsp_sync.done} = __o;
for(i=0; i<1; i=i+1) begin</pre>
   i_mtsp_sync __temp;
   assign {__temp.sync, __temp.eop} = pipe_i[`BUS_RANGE(8, i)];
   assign pipe_o[`BUS_RANGE(2,i)] = {__temp.awake, __temp.done};
   MTSP_Synchronize MTSP_Synchronize (
                     (<u>__temp</u>)
       .mtsp_sync
   );
end
endgenerate
```

## 4. Class and Method

There are three object types as shown below.

- clock
  - You can generate clocks and assign them to interfaces. When the corresponding interface is used, the automatically assigned clock and reset matching the clock are declared to the port. If reset is not declared, the default reset nRST signal is automatically generated.
- interface
  - Create an interface to be used in the module. Interfaces can be created by inheriting from other interfaces. Instances requested by add\_interface to a module can only call interface\_i:\* functions.
- module
  - You can create a module, include other submodules via the module:add\_module function, or call module:add\_interface to create an interface instance.

#### 4.1 clock

Generates or manages clocks to be assigned to interfaces. The assigned clock is automatically declared according to the port of the module when the corresponding interface is used.

In addition, the speed of the corresponding clock is defined in the contraint, and false\_path is automatically designated for registers between heterogeneous clocks and reset set for the clock.

Table 4-1. clock object summary

Member	Туре	Description
.name	string	clock name
:new	function	clock creation
:set_reset	function	setup reset of clock
:get_reset	function	return reset of clock
:set_speed	function	set clock speed
:set_default	function	set default clock
.find	function	find clock
.is_valid	function	check valid clock object
.get_default	function	get defulat clock

#### 4.1.1 clock:new

Type	Description
Prototype	function clock:new(name, [desc])
Return value	clock
Remarks	Create clock with name.
name	clock name.
desc	Used for clock descriptions and comments. (can skip.)

#### ex) creation example

```
new_clock = clock:new("CLK")
                                      -- generated from the base clock
new_clock:set_reset("GRSTn")
new_clock2 = new_clock:new("ACLK")
                                      -- Clock cloned from new_clock. It inherits reset and
speed.
```

UserGuide **BSD** License.

#### 4.1.2 clock:set\_reset

Type	Description
Prototype	function clock:set_reset(name)
Return value	-
Remarks	Create a reset on the clock.  If reset is not generated using this function, the default reset 'nRST' signal is automatically used.
name	reset name. (active low)

#### ex) Example of specifying reset

#### 4.1.3 clock:get\_reset

Type	Description
Prototype	function clock:get_reset()
Return value	string
Remarks	Returns the reset assigned to clock. If no reset is assigned, the default reset signal is returned.

#### 4.1.4 clock:set\_speed

Type	Description
Prototype	function clock:set_speed(mhz)
Return value	-
Remarks	Specifies the operating speed of the clock.
	If not specified using this function, the default clock 100MHz is set.
mhz	speed value of the clock. (MHz)

#### ex) Example of motion speed designation

```
aclock = clock:new("ACLK")
aclock:set_speed(1000) -- Set 1GHz to ACK
```

#### 4.1.5 clock:set\_default

Type	Description
Prototype	function clock:set_default()
Return value	-
Remarks	Set the current clock as the default clock.  The clock that is created first is set as the default clock, and it is used when a specific clock is explicitly set as the clock separately.

#### ex) Basic clock setting example

```
aclock = clock:new("MCLK")
aclock:set_default()
```

UserGuide **BSD** License.

## 4.1.6 clock.find

Type	Description	
Prototype	function clock.find(name)	
Return value	clock	
Remarks	Find the clock.	
	Returns 'nil' if not found.	
name	The clock name to find.	

## ex) clock find example

## 4.1.7 clock.is\_valid

v1.02

Type	Description
Prototype	function clock.is_valid(obj)
Return value	boolean
Remarks	Check that the clock object is correct.
obj	A clock object to check.

## ex) Example of checking the clock object

```
aclock = clock:new("ACLK")

if clock.is_valid(aclock) then
    LOGI("aclock is clock object.") -- clock object is correct.
end
```

## 4.1.8 clock.get\_default

Type	Description
Prototype	function clock.get_default()
Return value	clock
Remarks	Returns the default clock.

### 4.2 interface

v1.02

The interface object works identically to systemverilog's interface technology. If you look at the interface syntax of systemverilog, it is as follows.

## [systemverilog interface 선언]

```
interface my_intface;
    logic
   logic
         [3:0] b;
   // modport example
   modport s (input a, output b);
                                  // slave modport
   modport m (input a, input b);
                                      // master modport
endinterface
```

NOTE: A detailed description of the systemverilog interface can be found in external links. See systemverilog modport description.

Among them, port configuration is attempted using the modport function that can be synthesized, and it is largely divided into the interface\_i object created through add\_interface to the interface object, which is the basic object, and the module object.

Table 4-2.	interface	object	summary
------------	-----------	--------	---------

Member	Туре	Description
.name	string	Interface name
:new	function	Create interface
new_signal	function	Creating a single signal interface
.find	function	Find interface
.is_valid	function	Check if object is valid interface
:set_clock	function	Assign clock
:get_clock	function	Get clock
:set_signal	function	add signal
:signal_count	function	get total signal count
:set_param	function	Add parameter
:get_param	function	Get parameter
:set_modport	function	setup modport
:add_modport	function	Add modport
:get_modport	function	Get modport
:set_prefix	function	Designate prefix for port export
:set_bared	function	Apply into a bared signal

Table 4-3. interface\_i object summary

Member	Type	Description
:set_port	function	set instance to port
:set_desc	function	Add instance description

UserGuide **BSD** License.

## 4 Class and Method

Member	Туре	Description
:set_prefix	function	Specify prefix of instance
:get_prefix	function	Get instance prefix

## 4.2.1 interface:new

Type	Description		
Prototype	function interface:new(name)		
Return value	interface		
Remarks	Creates an interface with name.		
	When creating, the default prefix is specified as ('name uppercase' + '#').		
name	interface name.		

## ex) Example of interface creation

```
i_apb = interface:new("APB") -- APB interface creation
i_apb:set_signal("RARDDR", 32)
```

## 4.2.2 new\_signal

Type	Description	
Prototype	function new_signal(name, [width])	
Return value	interface	
Remarks	Creates a bared interface with name.	
name	signal name.	
width	signal bitwidth. If omitted, it is set to 1.	

The actual implementation inside creates a bared interface as shown below, setting modport 's' to input and modport 'm' to output. Also, because it is a bared interface, it is not even logged as an interface in the [top\_module]\_include.vh header.

```
function new_signal(name, width)
    local signal = interface:new(name)
    if width == nil then
        width = 1
    end
    signal:set_param("WIDTH", width)
    signal:set_signal(name, "WIDTH")
    signal:set_modport("s", {["input"] = {name}})
    signal:set_modport("m", {["output"] = {name}})
    signal:set_prefix() -- none prefix
signal:set_bared() -- hared signal
                              -- bared signals
    signal:set_bared()
    return signal
end
```

ex) signal creation example

```
= new_signal("BUSY_ALL", 4)
s_BUSY
```

UserGuide BSD License.

v1.02

## 4.2.3 interface.find

Type	Description
Prototype	function interface.find(name)
Return value	interface
Remarks	Find the created interface.
name	interface name to find

## ex) Example of finding an interface

```
i_APB = interface:new("APB")

if interface.find("APB") ~= nil then
    LOGI("APB interface is existed.")
end
```

## 4.2.4 interface.is\_valid

Type	Description	
Prototype	function interface.is_valid(obj)	
Return value	boolean	
Remarks	Check that the interface object is correct.	
obj	Clock object to check.	

## ex) Example of checking interface object

```
i_APB = interface:new("APB")
if interface.is_valid(i_APB) then
   LOGI("i_APB is interface object.")
                                     -- interface object is correct.
end
```

UserGuide **BSD** License.

## 4.2.5 interface:set\_clock

Type	Description
Prototype	function interface:set_clock(clk)
Return value	-
Remarks	Assign clock to interface.
clk	clock object

## ex) Example of setting clock on interface object

```
i_APB = interface:new("APB")

PCLK = clock:new("PCLK", "APB's clock")
PCLK:set_reset("PRSTn")

i_APB:set_clock(PCLK) -- PCLK setting
```

## 4.2.6 interface:get\_clock

Type	Description
Prototype	function interface:get_clock()
Return value	clock
Remarks	Returns the clock assigned by interface.

## ex) Example of setting clock on interface object

```
i_APB = interface:new("APB")
PCLK = clock:new("PCLK", "APB's clock")
PCLK:set_reset("PRSTn")
i_APB:set_clock(PCLK)
LOGI("APB's clock is " .. i_APB:get_clock().name) -- print clock name
```

UserGuide **BSD** License.

v1.02

## 4.2.7 interface:set\_signal

Туре	Description
Prototype	function interface:set_signal(name, [bit_width])
Return value	-
Remarks	Set or change signal on interface.
name	signal name to set
bit_width	The bit width of the signal. If not set, it is regarded as 1. Also, if explicitly set to 0, the corresponding signal is not used. (In addition to constants, parameter values or formulas can be used.)

## ex) Example of adding signal to interface object

```
i_axi3 = interface:new("AXI3")
-- parameter 설정
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)
-- signal 설정
i_axi3:set_signal("AWVALID")
i_axi3:set_signal("AWREADY")
i_axi3:set_signal("AWADDR", "ADDR_WIDTH")
i_axi3:set_signal("AWSIZE", 3)
i_axi3:set_signal("AWBURST", 2)
i_axi3:set_signal("WSTRB", "DATA_WIDTH/8")
```

UserGuide BSD License.

## 4.2.8 interface:signal\_count

Type	Description
Prototype	function interface:signal_count()
Return value	number
Remarks	Returns the number of signals defined in the interface.

v1.02

## 4.2.9 interface:set\_param

Type	Description
Prototype	function interface:set_param(name, default_value)
Return value	-
Remarks	Add or change parameters to the interface.
name	parameter name
default_value	parameter default value. (Constant or formula may be included.)

## ex) Example of adding parameter to interface object

```
i_axi3 = interface:new("AXI3")
-- parameter setting
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)
-- Modify parameter
i_axi3:set_param("DATA_WIDTH", 256)
```

UserGuide **BSD** License.

## 4.2.10 interface:get\_param

Type	Description
Prototype	function interface:get_param(name)
Return value	number or string
Remarks	Return parameters to the interface.
name	parameter name

ex) An example of getting parameters to an interface object

```
i_axi3 = interface:new("AXI3")
-- parameter setting
i_axi3:set_param("ADDR_WIDTH", 16)
i_axi3:set_param("DATA_WIDTH", 128)
-- get parameter and print
LOGI("i_axi3's data width = " .. tostring(i_axi3:get_param("DATA_WIDTH")))
```

UserGuide **BSD** License.

v1.02

#### 4.2.11 interface:set\_modport

Type	Description
Prototype	function interface:set_modport(name, modport)
Return value	-
Remarks	Add modport to interface.
name	modport name
modport	It is a modport configuration table structure, and is described in the form below. {["input"]={"",}, ["output"]={"",}}

#### ex) set\_modport example

v1.02

```
-- APB bus
         = interface:new("apb")
bus_apb
bus_apb:set_param("ADDR_WIDTH", 16)
bus_apb:set_param("DATA_WIDTH", 32)
bus_apb:set_param("SEL_WIDTH", 2)
bus_apb:set_signal("PADDR", "ADDR_WIDTH")
bus_apb:set_signal("PSEL", "SEL_WIDTH")
bus_apb:set_signal("PENABLE")
bus_apb:set_signal("PWRITE")
bus_apb:set_signal("PWDATA", "DATA_WIDTH")
bus_apb:set_signal("PREADY")
bus_apb:set_signal("PRDATA", "DATA_WIDTH")
bus_apb:set_signal("PSLVERR")
bus\_apb : set\_modport("s", \{["input" ]= \{"PSEL", "PENABLE", "PWRITE", "PADDR", "PWDATA"\}, \\
["output"]={"PREADY", "PRDATA", "PSLVERR"}})
bus_apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE", "PADDR", "PWDATA"},
["input"]={"PREADY", "PRDATA", "PSLVERR"}})
```

UserGuide BSD License.

#### 4.2.12 interface:add\_modport

Туре	Description
Prototype	function interface:add_modport(name, modport)
Return value	-
Remarks	Adds a signal to an existing modport of an interface.
name	modport name
modport	It is a modport configuration table structure, and is described in the form below. {["input"]={"",}, ["output"]={"",}}

#### ex) add\_modport example

```
-- APB bus
                                     = interface:new("apb")
bus_apb
bus_apb:set_param("ADDR_WIDTH", 16)
bus_apb:set_param("DATA_WIDTH", 32)
bus_apb:set_param("SEL_WIDTH", 2)
bus_apb:set_signal("PADDR", "ADDR_WIDTH")
bus_apb:set_signal("PSEL", "SEL_WIDTH")
bus_apb:set_signal("PENABLE")
bus_apb:set_signal("PWRITE")
bus_apb:set_signal("PWDATA", "DATA_WIDTH")
bus_apb:set_signal("PREADY")
bus_apb:set_signal("PRDATA", "DATA_WIDTH")
bus_apb:set_signal("PSLVERR")
bus\_apb : set\_modport("s", \{["input" ]= \{"PSEL", "PENABLE", "PWRITE"\}, ["output"]= \{"PREADY", ["output"], ["outp
 "PRDATA", "PSLVERR"}})
bus_apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE"}, ["input"]={"PREADY",
 "PRDATA", "PSLVERR"}})
bus_apb:add_modport('s', {["input"]={"PADDR", "PWDATA"}})
bus_apb:add_modport('m', {["output"]={"PADDR", "PWDATA"}})
```

UserGuide BSD License.

## 4.2.13 interface:get\_modport

Type	Description
Prototype	function interface:get_modport(name, modport)
Return value	table
Remarks	Return a table of the interface's existing modports.
name	modport name

ex) add\_modport example

v1.02

```
-- APB bus
            = interface:new("apb")
bus_apb
bus_apb:set_param("ADDR_WIDTH", 16)
bus_apb:set_param("DATA_WIDTH", 32)
bus_apb:set_param("SEL_WIDTH", 2)
bus_apb:set_signal("PADDR", "ADDR_WIDTH")
bus_apb:set_signal("PSEL", "SEL_WIDTH")
bus_apb:set_signal("PENABLE")
bus_apb:set_signal("PWRITE")
bus_apb:set_signal("PWDATA", "DATA_WIDTH")
bus_apb:set_signal("PREADY")
bus_apb:set_signal("PRDATA", "DATA_WIDTH")
bus_apb:set_signal("PSLVERR")
bus_apb:set_modport("s", {["input"]={"PSEL", "PENABLE", "PWRITE"}, ["output"]={"PREADY",
"PRDATA", "PSLVERR"}})
bus_apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE"}, ["input"]={"PREADY",
"PRDATA", "PSLVERR"}})
-- List 'input' of modeport 's'
for i, signal_name in ipairs(bus_apb:get_modport("s").input) do
    LOGI("modport 's' input : " .. signal_name)
end
```

UserGuide BSD License.

#### 4.2.14 interface:set\_prefix

Туре	Description
Prototype	function interface:set_prefix(prefix)
Return value	-
Remarks	Specify prefix string when displaying port of interface.  If several identical interfaces are outputting ports in the same module at the same time, '#' characters are included in the prefix, and the number is changed to increase by 1 from 0. If it is a single interface, the character '#' is removed.
prefix	prefix string

## ex) set\_prefix example

## [execution result : top\_defines.vh]

```
1: `ifndef __TOP_DEFINES_VH__
 2: `define __TOP_DEFINES_VH__
3: `include "testdrive_system.vh" // default system defines
4:
5: //----
6: // interfaces
7: //----
8: interface i_inst;
9: logic
                           EN;
10: logic [31:0]
                          INST;
11:
       modport m (
       output EN, INST
13:
      );
14:
       modport s (
       input EN, INST
15:
16:
       );
17: endinterface
19: `endif //__TOP_DEF INES_VH__
```

## [execution result : top.sv]

```
1: `include "top_defines.vh"
3: module top (
4: // inst_0
5:
     output
                               IO_EN,
    output [31:0]
6:
                               10_INST,
7:
8:
      // inst_1
9:
       output
                              I1_EN,
       output [31:0]
10:
                              I1_INST
11: );
12:
13: // interface : inst_0
14: i_inst
                      inst_0;
15: assign IO_EN
                              = inst_0.EN;
16: assign IO_INST
                              = inst_0.INST;
17:
18: // interface : inst_1
19: i_inst
                       inst_1;
20: assign I1_EN
                              = inst_1.EN;
21: assign I1_INST
                              = inst_1.INST;
22:
23:
24: endmodule
```

## 4.2.15 interface:set\_bared

Type	Description
Prototype	function interface:set_bared(bared)
Return value	-
Remarks	The structure of the interface is unpacked and applied.
bared	Whether the boolean value is bared or not, if not specified, it is set to true.

Used when configuring bared signals.

# ex) set\_bared example

```
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input"]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
inst:set_bared() -- bared interface setting
```

## 4.2.16 interface:set\_top\_uppercase

Type	Description
Prototype	function interface:set_top_uppercase(en)
Return value	-
Remarks	When outputting the port of the top of the interface, it is forced to be a forced uppercase or lowercase name.
en	Uppercase or not, true(uppercase), false(lowercase), nil(original)

## 4.2.17 interface\_i:set\_port

Type	Description
Prototype	function interface_i:set_port(modport_name)
Return value	-
Remarks	Specifies the interface instance added with the module:add_interface function as the port output.
modport_nam e	modport name

When a basic interface is added to a module, the port output (input, output, inout) is determined through this function.

## ex) interface\_i:set\_port example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input"]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})

top = module:new("top")

top:add_interface(inst):set_port("m") -- Set inst interface to top output as modport 'm'
```

## 4.2.18 interface\_i:set\_desc

Type	Description
Prototype	function interface_i:set_desc(desc)
Return value	-
Remarks	Adds comments to be used as comments for interface instances added with the module:add_interface function.
desc	additional descriptive string

## ex) interface\_i:set\_desc example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
\label{eq:inst:set_modport("s", {["input"]={"EN", "INST"}}) inst:set\_modport("m", {["output"]={"EN", "INST"}})}
              = module:new("top")
top
i_int = top:add_interface(inst)
i_int:set_port("m") -- Set inst interface to top output as modport 'm'
i_int:set_desc("main instruction") -- comment description
```

UserGuide **BSD** License.

v1.02

## 4.2.19 interface\_i:set\_prefix

Туре	Description	
Prototype	function interface_i:set_prefix(prefix)	
Return value	-	
Remarks	Specifies the prefix of the interface instance added with the module:add_interface function.  If not specified, the prefix of the original interface is used.	
prefix	prefix string	

## ex) interface\_i:set\_prefix example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst : set\_modport("s", \ \{["input" \ ]=\{"EN", \ "INST"\}\})
inst:set_modport("m", {["output"]={"EN", "INST"}})
           = module:new("top")
top
i_int = top:add_interface(inst)
i_int:set_port("m") -- Set inst interface to top output as modport 'm'
i_int:set_prefix("IF") -- Specify prefix
```

This interface instance is converted to IF\_EN, IF\_INST and output as port.

UserGuide BSD License.

## 4.2.20 interface\_i:get\_prefix

Type	Description
Prototype	function interface_i:get_prefix()
Return value	string
Remarks	Returns the prefix of the interface instance added with the module:add_interface function. If no prefix is specified in the interface instance, the prefix of the original interface is returned.

## ex) interface\_i:get\_prefix example

```
-- interface example
inst = interface:new("inst")
inst:set_signal("EN")
inst:set_signal("INST", 32)
inst:set_modport("s", {["input"]={"EN", "INST"}})
inst:set_modport("m", {["output"]={"EN", "INST"}})
top = module:new("top")
i_int = top:add_interface(inst)
i_int:set_port("m") -- Set inst interface to top output as modport 'm'
-- default prefix output
LOGI("PREFIX: " .. i_int:get_prefix())
```

## 4.3 module

An object that matches a verilog module declaration. It is created with the module:new function, and the final result source is output through the module:make\_code function. At this time, the declaration of sub modules included in the lower level and interfaces used at least once are also made.

The port of the top module is converted into single signals in the form of input/output, not the systemverilog interface syntax, and the internal sub modules are described according to the interface syntax.

The sub module object added with the module:add\_module function is used as the module\_i interface.

Table 4-4. module object summary

Member	Туре	Description
.name	string	module name
:new	function	create module
:set_inception	function	Specifies the code inception file.
:get_inception	function	Return code inception.
:set_title	function	Specifies the title of the code inception.
:set_author	function	Specifies the author of the code inception.
:set_param	function	Specify parameters.
:get_param	function	Search parameter.
:add_interface	function	Add interface.
:add_clock	function	Add clock.
:get_interface	function	Search for added interfaces.
:get_port	function	Search ports among the added interfaces.
:add_module	function	Add sub module.
:get_module	function	Search for sub modules.
:add_code	function	Add a user code statement.
.find	function	Find the module object.
.is_valid	function	Check whether the module exists.
.apply_code	function	Apply the code file to the module.
.code	String	Added code string object from module

Table 4-5. module\_i(sub module) object summary

Member	Туре	Description
.name	string	Returns the sub module name.
:set_param	function	Specifies the value of the parameter.
:get_param	function	Returns the value of parameter.
:set_port	function	Specifies the value of port.
:get_port	function	Returns the value of port.
.is_valid	function	Determines whether object is a valid module_i object.

UserGuide BSD License.

63

## 4.3.1 module:new

Type	Description
Prototype	function module:new(name)
Return value	module
Remarks	Create a module.
name	module name

ex) Module creation example

= module:new("top") -- Module creation example top

UserGuide **BSD** License.

## 4.3.2 module:make\_code

Type	Description
Prototype	function module:make_code()
Return value	-
Remarks	Generates a module into a final output file. Here is the creation list:  [top_name]_defines.vh (define and interface declarations)  [all used module names].sv (result systemverilog source files)  [top_name].f (all reference source names)  [top_name]_constraint.xdc (constraint declaration)  [top_name]_hierarchy.svg (design hierarchy diagram)

#### 4.3.3 module:set\_inception

Type	Description	
Prototype	function module:set_inception(filename)	
Return value	-	
Remarks	Specifies the file in which code inception is described. You can use the meta sentences below for your code inception technique. YEAR : The current year. Ex) 2023 DATE : The current date. Example) May/08/2023 Mon TITME : The current time. Ex) 19:34:21 AUTHOR : Author specified by the module:set_author function. Default: "testdrive profiling master - verigen"  TITLE : Title specified with the module:set_title function. Default: "no_title"	
filename	File name where code inception is described	
bit_width	The bit width of the signal. If not set, it is regarded as 1. Also, if explicitly set to 0, the corresponding signal is not used. (In addition to constants, parameter values or formulas can be used.)	

This inception text will be placed at the top of each .sv source. You can separately insert sentences such as license by specifying :set\_inception, :set\_title, :set\_author functions for each module separately.

If you call it with module:set inception, all generated modules will use the code inception of the base module unless otherwise specified.

ex) set\_inception example

```
-- code inception setting
module:set_inception("code_inception.txt")
module:set_title("some title")
module:set_author("me")
top
            = module:new("top")
top:make_code()
```

## [code\_inception.txt]

```
// Copyright (c) 2013 ~ __YEAR__. HyungKi Jeong(clonextop@gmail.com)
// Freely available under the terms of the 3-Clause BSD License
// (https://opensource.org/licenses/BSD-3-Clause)
// Title : __TITLE__
// Rev. : __DATE__ __TIME__ (__AUTHOR__)
```

execution result

[result file: top.sv]

```
// Copyright (c) 2013 ~ 2023. HyungKi Jeong(clonextop@gmail.com)
// Freely available under the terms of the 3-Clause BSD License
// (https://opensource.org/licenses/BSD-3-Clause)
//
// Title : some title
// Rev. : May/09/2023 Tue 14:10:16 (me)
`include "top_defines.vh"
module top ();
endmodule
```

**BSD** License. v1.02

## 4.3.4 module:get\_inception

Type	Description
Prototype	function module:get_inception()
Return value	-
Remarks	Returns the result of applying all meta sentences to the code inception phrase set with module:set_inception .

## 4.3.5 module:set\_title

Type	Description		
Prototype	function module:set_title(title)		
Return value	-		
Remarks	Specifies the title of the code inception. TITLE meta sentences in code inception are converted to the specified title.		
title	title string		

UserGuide BSD License. 69

## 4.3.6 module:set\_author

Type	Description		
Prototype	function module:set_author(name)		
Return value	-		
Remarks	Specifies the author of the code inception.  TheAUTHOR meta-sentence in code inception translates to the specified author.		
name	author string		

UserGuide **BSD** License.

70

## 4.3.7 module:set\_param

Type	Description
Prototype	function module:set_param(name, value, [is_local])
Return value	-
Remarks	Add module parametes.
name	parameter name
value	parameter default value
is_local	If it is true, it is implemented as a localparam, otherwise it is implemented as a port parameter. Defaults to false if omitted.

# ex) module:set\_param 예시

```
top = module:new("top") -- Module creation example
-- port parameter 설정
top:set_param("DATA_WIDTH", 32)
-- local parameter 설정
top:set_param("BYTE_WIDTH", "DATA_WIDTH/8", true)
```

## 4.3.8 module:get\_param

Type	Description
Prototype	function module:get_param(name)
Return value	integer or string
Remarks	Returns the default values of the module's parameters.
name	parameter name

# 4.3.9 module:add\_interface

Type	Description
Prototype	function module:add_interface(i, [name], [modport])
Return value	interface_i
Remarks	Adds an interface instance object to the module.
i	interface object
name	interface instance name If the name is not specified, the interface name is followed.
modport	The modport name, if used for internal declarations other than ports.  Do not specify this value.

# 4.3.10 module:add\_clock

Type	Description
Prototype	function module:add_clock(clk)
Return value	-
Remarks	Add a clock to the module.
clk	clock object

# 4.3.11 module:get\_interface

Type	Description
Prototype	function module:get_interface(name)
Return value	interface_i
Remarks	Retrieves and returns the interface instance object added to the module.
name	interface instance object name

# 4.3.12 module:get\_port

Type	Description
Prototype	function module:get_port(name)
Return value	interface_i
Remarks	Among the interface instance objects added to the module, the object set as the port is searched and returned.
name	interface instance object name

UserGuide **BSD** License.

v1.02

# 4.3.13 module:add\_module

Туре	Description
Prototype	function module:add_module(m, [name])
Return value	-
Remarks	Add sub module.
m	Module source to be a sub module
name	Sub module name.  If omitted, it is named the same as the original module name.  If there are several omitted sub modules with the same name, put a number in the form of "_#" after each name to avoid duplication.

UserGuide **BSD** License.

77

v1.02

# 4.3.14 module:get\_module

Type	Description
Prototype	function module:get_module(name)
Return value	module
Remarks	Searches for and returns sub modules.
name	sub module name

# 4.3.15 module:add\_code

Type	Description
Prototype	function module:add_code(s)
Return value	-
Remarks	Add user code.  These codes are included as statements inserted at the end of each module source. It is appended to the module.code(String) object, and can be usefully used with the _V() macro function. The last character of the added code is ';' If it ends with , the enter code is automatically inserted.
s	user add code

**BSD** License. 79 v1.02

### 4.3.16 module.find

Type	Description
Prototype	function module.find(name)
Return value	module
Remarks	Find the created module.
name	module name to find

# 4.3.17 module.is\_valid

Type	Description
Prototype	function module.is_valid(obj)
Return value	boolean
Remarks	Check that the object is valid module.
obj	Module object to check.

#### 4.3.18 module.apply\_code

Type	Description
Prototype	function module.apply_code(filename)
Return value	-
Remarks	Code is read from the code description file and inserted into each module as code.  After starting with ":module name (option)" in the code description file, the code in the module from the next line is inserted when the result of the option is true.  Option is a Lua script with a Boolean result indicating whether sub-specified codes are inserted. This option can be omitted. (default value: true)
filename	code description file name

ex) module.apply\_code example (When you want to add code to Core and ALU modules.)

```
module.apply_code("__core.sv")
```

### [\_\_core.sv]

```
:Core
                   // Core's code
assign A = B;
assign C = D;
                   // Core's code
:ALU (config.core_size > 4)
                // ALU's code
assign E = F;
assign G = H;
                   // ALU's code
       [15:0] CORE_SIZE = $(config.core_size);
```

**NOTE:** You can execute lua code by writing '\$(\*)' or '\${\*}' in the middle of verilog code. '\$(\*)' is a string or number returned code, and '\${\*}' can describe lua code execution without return.

UserGuide **BSD** License.

v1.02

82

# 4.3.19 module\_i:set\_param

Type	Description
Prototype	function module_i:set_param(name, val)
Return value	-
Remarks	Specifies the parameter value of the sub module.
name	parameter name
val	parameter setting value

# 4.3.20 module\_i:get\_param

Type	Description
Prototype	function module_i:get_param(name)
Return value	integer or string
Remarks	Returns the value specified as the parameter of the sub module.
name	parameter name

# 4.3.21 module\_i:set\_port

Type	Description
Prototype	function module_i:module_i:set_port(name, val)
Return value	-
Remarks	Specifies the port value of the sub module.
name	port name
val	port setting value

# 4.3.22 module\_i:get\_port

Type	Description
Prototype	function module_i:get_port(name)
Return value	interger or string
Remarks	Returns the port value of the sub module.
name	port name

BSD License. UserGuide 86

# 4.3.23 module\_i.is\_valid

Type	Description
Prototype	function module_i.is_valid(obj)
Return value	boolean
Remarks	Returns whether object is a valid module_i(sub module) object.
obj	module_i object

# 5. Appendix

## 5.1 Appendix: test\_definition.lua

```
-- clock definition
clk
      = {}
clk.MCLK = clock:new("CLK", "main clock") -- for core
clk.MCLK:set_speed(1000)
clk.PCLK
            = clock:new("PCLK", "APB clock")
clk.PCLK:set_speed(100)
clk.PCLK:set_reset("PRESETn", "low")
clk.BCLK
           = clock:new("ICLK", "interconnection clock")
clk.BCLK:set_speed(1500)
            = clock:new("ACLK", "AXI clock")
clk.ACLK
clk.ACLK:set_speed(1000)
-- bus interface
bus = \{\}
-- APB bus
         = interface:new("apb")
bus.apb:set_clock(clk.PCLK)
bus.apb:set_param("ADDR_WIDTH", 16)
bus.apb:set_param("DATA_WIDTH", 32)
bus.apb:set_param("SEL_WIDTH", 2)
bus.apb:set_signal("PADDR", "ADDR_WIDTH")
bus.apb:set_signal("PSEL", "SEL_WIDTH")
bus.apb:set_signal("PENABLE")
bus.apb:set_signal("PWRITE")
bus.apb:set_signal("PWDATA", "DATA_WIDTH")
bus.apb:set_signal("PREADY")
bus.apb:set_signal("PRDATA", "DATA_WIDTH")
bus.apb:set_signal("PSLVERR")
bus.apb:set_modport("s", {["input"]={"PSEL", "PENABLE", "PWRITE", "PADDR", "PWDATA"},
["output"]={"PREADY", "PRDATA", "PSLVERR"}})
bus.apb:set_modport("m", {["output"]={"PSEL", "PENABLE", "PWRITE", "PADDR", "PWDATA"},
["input" ]={"PREADY", "PRDATA", "PSLVERR"}})
bus.apb:set_prefix("S#")
-- AXI3 master bus
```

```
bus.maxi3 = interface:new("maxi3")
bus.maxi3:set_clock(clk.ACLK)
bus.maxi3:set_param("DATA_WIDTH", 128)
bus.maxi3:set_param("ADDR_WIDTH", 32)
bus.maxi3:set_param("ID_WIDTH", 4)
-- write address
bus.maxi3:set_signal("AWVALID")
bus.maxi3:set_signal("AWREADY")
bus.maxi3:set_signal("AWADDR", "ADDR_WIDTH")
bus.maxi3:set_signal("AWSIZE", 3)
bus.maxi3:set_signal("AWBURST", 2)
bus.maxi3:set_signal("AWCACHE", 4)
bus.maxi3:set_signal("AWPROT", 3)
bus.maxi3:set_signal("AWID", "ID_WIDTH")
bus.maxi3:set_signal("AWLEN", 4)
bus.maxi3:set_signal("AWLOCK", 2)
-- write data
bus.maxi3:set_signal("WVALID")
bus.maxi3:set_signal("WREADY")
bus.maxi3:set_signal("WLAST")
bus.maxi3:set_signal("WDATA", "DATA_WIDTH")
bus.maxi3:set_signal("WSTRB", "DATA_WIDTH/8")
bus.maxi3:set_signal("WID", "ID_WIDTH")
-- write response
bus.maxi3:set_signal("BVALID")
bus.maxi3:set_signal("BREADY")
bus.maxi3:set_signal("BRESP", 2)
bus.maxi3:set_signal("BID", "ID_WIDTH")
-- read address
bus.maxi3:set_signal("ARVALID")
bus.maxi3:set_signal("ARREADY")
bus.maxi3:set_signal("ARADDR", "ADDR_WIDTH")
bus.maxi3:set_signal("ARSIZE", 3)
bus.maxi3:set_signal("ARBURST", 2)
bus.maxi3:set_signal("ARCACHE", 4)
bus.maxi3:set_signal("ARPROT", 3)
bus.maxi3:set_signal("ARID", "ID_WIDTH")
bus.maxi3:set_signal("ARLEN", 4)
bus.maxi3:set_signal("ARLOCK", 2)
-- read data
bus.maxi3:set_signal("RVALID")
bus.maxi3:set_signal("RREADY")
bus.maxi3:set_signal("RLAST")
bus.maxi3:set_signal("RDATA", "DATA_WIDTH")
bus.maxi3:set_signal("RRESP", 2)
bus.maxi3:set_signal("RID", "ID_WIDTH")
bus.maxi3:set_modport("s", {
    ["input"]={
             "AWVALID", "AWADDR", "AWSIZE", "AWBURST", "AWCACHE", "AWPROT", "AWID", "AWLEN",
"AWLOCK",
            "WVALID", "WLAST", "WDATA", "WSTRB", "WID",
```

```
"ARVALID", "ARADDR", "ARSIZE", "ARBURST", "ARCACHE", "ARPROT", "ARID", "ARLEN",
"ARLOCK",
            "RREADY", "RLAST"
   [ "output " ]={
            "AWREADY", "WREADY", "BVALID", "BRESP", "BID", "ARREADY", "RVALID", "RDATA", "RRESP",
"RID"
})
bus.maxi3:set_modport("m", {
    [ "output " ]={
            "AWVALID", "AWADDR", "AWSIZE", "AWBURST", "AWCACHE", "AWPROT", "AWID", "AWLEN",
"AWLOCK",
            "WVALID", "WLAST", "WDATA", "WSTRB", "WID",
            "BREADY",
            "ARVALID", "ARADDR", "ARSIZE", "ARBURST", "ARCACHE", "ARPROT", "ARID", "ARLEN",
"ARLOCK",
            "RREADY", "RLAST"
   ["input"]={
            "AWREADY", "WREADY", "BVALID", "BRESP", "BID", "ARREADY", "RVALID", "RDATA", "RRESP",
"RID"
            }
})
bus.maxi3:set_prefix("M#")
-- AXI4 master bus
bus.maxi4 = bus.maxi3:new("maxi4")
                                       -- modified 2bit to 1bit
bus.maxi4:set_signal("AWLOCK")
bus.maxi4:set_signal("ARLOCK")
                                       -- modified 2bit to 1bit
bus.maxi4:set_signal("AWLEN", 8)
                                       -- modified 4bit to 8bit
                                       -- modified 4bit to 8bit
bus.maxi4:set_signal("ARLEN", 8)
bus.maxi4:set_signal("AWQOS", 4)
                                       -- new on AX14
bus.maxi4:set_signal("AWREGION", 4)
                                       -- new on AXI4
bus.maxi4:set_signal("ARQOS", 4)
                                       -- new on AXI4
bus.maxi4:set_signal("ARREGION", 4)
                                       -- new on AXI4
bus.maxi4:add_modport("s", {
   })
bus.maxi4:add_modport("m", {
   ["input" ]={"ARQOS", "ARREGION"},
   ["output"]={"AWQOS", "AWREGION"}
})
bus.maxi4:set prefix("M#")
-- core interface
```

#### 5 Appendix

```
core_i = \{\}
core_i.inst = interface:new("inst")
core_i.inst:set_signal("EN")
core_i.inst:set_signal("INST", 32)
core_i.inst:set_signal("READY")
core_i.inst:set_modport("m", {
   ["output"]={"EN", "INST"},
   ["input"] ={"READY"}
})
core_i.inst:set_modport("s", {
   ["input"]={"EN", "INST"},
    ["output"] ={"READY"}
})
core_i.inst:set_clock(clk.MCLK)
-- configuration
                   = {}
config
config.core_size
                 = 4
```