
The # I want this # ESP32-S3 Internet radio



Splash screen



Connected to Ethernet

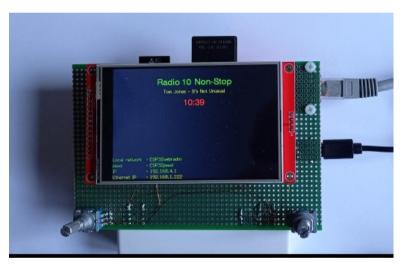

WiFi or Ethernet connection, can be selected at start-up

With Ethernet connection, local ESP32 network to operate internet radio

Network ESP32webradio Password ESP32pswd address 192.168.4.1

75 preset radio stations possible About 50 completed

4" TFT Touch screen

Local time

local time zone can be looked up via web page:

https://github.com/nayarsystems/posix tz db/blob/master/zones.csv

Specification Time Zone with TZ:

https://www.gnu.org/software/libc/manual/html node/TZ-Variable.html

mp3 player

plays mp3 files randomly.

More than 5000+ files

Advanced EC11 - rotary encoder – signal processing.

Only 1 ESP32 GPIO input per EC11 absolutely interference-free

Control via

web page

2 rotary encoders

touch screen

Once programmed, all settings can be adjusted via web page:

Network ssid

Network password

local time zone

ntp server

freely selectable IP address (within range of your own router)

Excellent sound quality thanks to:

https://github.com/schreibfaul1/ESP32-audioI2S

With volume and equalizer control (web page)

Easy to build

To avoid problems with incompatible library updates : used libraries available on Github page

Internet_ETH_WiFi.bin file present on Github page
can easily be programmed into the ESP32 with <esptool.py>
>> ALWAYS a working software version

https://docs.espressif.com/projects/esptool/en/latest/esp32/installation.html#installation


Github pagina:

https://github.com/thieu-b55/The---I-want-this---ESP32-S3-Internet-radio

Components

1 x ESP32-S3 WROOM-1 Devkit N16R8




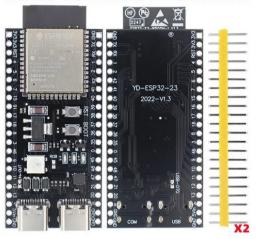

1x W5500



1x PCM5102

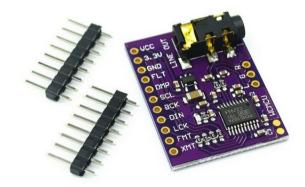



1x 4" TFT 480x320 with touch / SD card



2x ATTINY85




1x SD kaart

6x R 4K7 2x R 10K

EC11 ATTINY85 1 OUTPUT

2x (1x volume, 1x channel selection)

V + = 3.3V van ESP32-S3

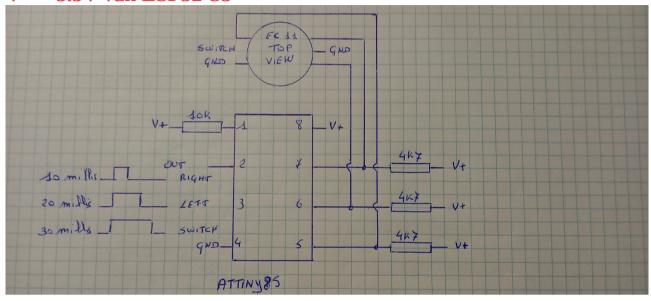

EC11 with ATTINY85 output on IC pin 2 (Arduino Pin 3) Pulse of 10 milliseconds when turning to the right Pulse of 20 milliseconds when turning to the left Pulse of 30 milliseconds when pressing Switch.

Program ATTINY85 with program:

EC11_encoder_1_output.ino

Arduino IDE setup

```
- 0 0
                                       EC11_encoder_1_output | Arduino 1.8.9
                                          len Help
                              Automatische opmaak
                                                                                                                  Ctrl+T
                              Schets archiveren
  EC11_encoder_1_outp
                              Codering herstellen en opnieuw laden
  7 * of this software
 8 * in the Software w
                              Bibliotheken beheren...
                                                                                                            Ctrl+Shift+I
 9 * to use, copy, mo
10 + copies of the Sof Seriële monitor
                                                                                                           Ctrl+Shift+M
11 * furnished to do :
                              Seriële Plotter
                                                                                                            Ctrl+Shift+L
12 +
13 * The above copyric
14 * copies or substar ESP32 Sketch Data Upload
                              WiFi101 / WiFiNINA Firmware Updater
16 * THE SOFTWARE IS I
17 * IMPLIED, INCLUDI
18 * FITNESS FOR A PAF Board: "ATtiny25/45/85 (No bootloader)"
19 * AUTHORS OR COPYRO
20 * LIABILITY, WHETHE
21 * OUT OF OR IN COM
                              Chip: "ATtiny85"
                              Clock Source (Only set on bootload): "8 MHz (internal)"
22 * SOFTWARE.
23 1/
                              Timer 1 Clock: "CPU (CPU frequency)"
                              LTO (1.6.11+ only): "Enabled"
26 * ATTINY85
                              millis()/micros(): "Enabled"
27 +/
28
                              Save EEPROM (only set on bootload): "EEPROM retained"
29 #define A_INPUT
30 #define B_INPUT
                              B.O.D. Level (Only set on bootload): "B.O.D. Disabled (saves power)"
31 #define SWITCH
                              Poort
32 #define MILLIS_UIT
                              Haal Board Info
33 bool input 1 bool;
35 bool input 2 bool;
36 bool input 1 verig
37 bool input 1 verig
38 Bootloader branden
                              Programmer: "Arduino as ISP"
38 bool input_sv_oric__
40 void setup() {
41 pinMode(A_INPUT, INPUT);
42 pinMode(B_INPUT, INPUT);
43 pinMode(SWITCH, INPUT);
44 pinMode(MILLIS_UIT, OUTPUT);
45)
46
47 void loop() {
48 input_1_bool = digitalRead(A_INPUT);
49 input_2_bool = digitalRead(B_INPUT);
50
      delay(2);
      if(input_1_bool == digitalRead(A_INPUT)){
  if(input_1_bool != input_1_vorig_bool){
   if((!input_1_bool) && (!input_2_bool)){
51
52
53
              while(!digitalRead(A_INPUT)){
54
55
56
              digitalWrite(MILLIS_UIT, true);
57
              delay(10);
58
              digitalWrite(MILLIS_UIT, false);
59
              delay (28);
60
            if((!input_1_bool) && (input_2_bool)){
  while(!digitalRead(A_INPUT)){
61
62
Opslaan voltooid.
```

Connections to ESP32-S3

EC11 module volume

V+ >> +3.3V ESP32-S3

GND >> GND

IC pin 2 >> ESP32-S3 GPIO14

EC11 module station

V+ >> +3.3V ESP32-S3

GND >> GND

IC pin 2 >> ESP32-S3 GPIO9

PCM5102A

VCC >> +5V
GND >> GND
FLT >> GND
SCL >> GND
FMT >> GND

XMT >> +3.3V PCM5102A **DMP** >> +3.3V PCM5102A ESP32-S3 **BCK** >> GPIO16 >> DIN ESP32-S3 GPIO15 LCK >> ESP32-S3 GPIO17

W5500

5V >> +5V **GND** >> **GND MISO** >> ESP32-S3 GPIO13 MOSI >> ESP32-S3 GPIO11 SCS >> ESP32-S3 GPIO10 **SCLK** >> ESP32-S3 GPIO12 INT >> ESP32-S3 GPIO4

SD op TFT scherm

 SD_MISO
 >>
 ESP32-S3
 GPIO5

 SD_MOSI
 >>
 ESP32-S3
 GPIO6

 SD_SCLK
 >>
 ESP32-S3
 GPIO7

 SD_CS
 >>
 ESP32-S3
 GPIO18

TFT scherm VCC >> +5V

VCC	>>	+5V	
GND	>>	GND	
CS	>>	ESP32-S3	GPIO8
RESET	>>	ESP32-S3	RST
DC	>>	ESP32-S3	GPIO39
SDI(MOSI)	>>	ESP32-S3	GPIO6
SCK	>>	ESP32-S3	GPIO7
LED	>>	ESP32-S3	+3.3V
SDO(MISO))>>	ESP32-S3	GPIO5


TOUCH

T_CLK	>>	ESP32-S3	GPIO7
T_CS	>>	ESP32-S3	GPIO40
T_DIN	>>	ESP32-S3	GPIO6
T_DO	>>	ESP32-S3	GPIO5
T IRO	>>	ESP32-S3	GPIO41

ESP32-S3

Power	ESP32-S3	EC11 Volume	EC11 zender	PCM 5102A	W5500	SD	TFT	Touch
5V	5V							
GND	GND (4x)	GND	GND					
	3.3V	V+	V+				LED	
	RST						RESET	
	GPIO14	IC pin 2						
	GPIO9		IC pin 2					
	GPIO15			DIN				
	GPIO16			BCK				
	GPIO17			LCK				
	GPIO4				INT			
	GPIO10				SCS			
	GPIO11				MOSI			
	GPIO12				SCLK			
	GPIO13				MISO			
	GPIO5					SD_MISO	SDO	T_DO
	GPIO6					SD_MOSI	SDI	T_DIN
	GPIO7					SD_SCLK	SCK	T_CLK
	GPIO18					SD_CS		
	GPIO8						CS	
	GPIO39						DC	
	GPIO40							T_CS
	GPIO41							T_IRQ

Arduino IDE settings

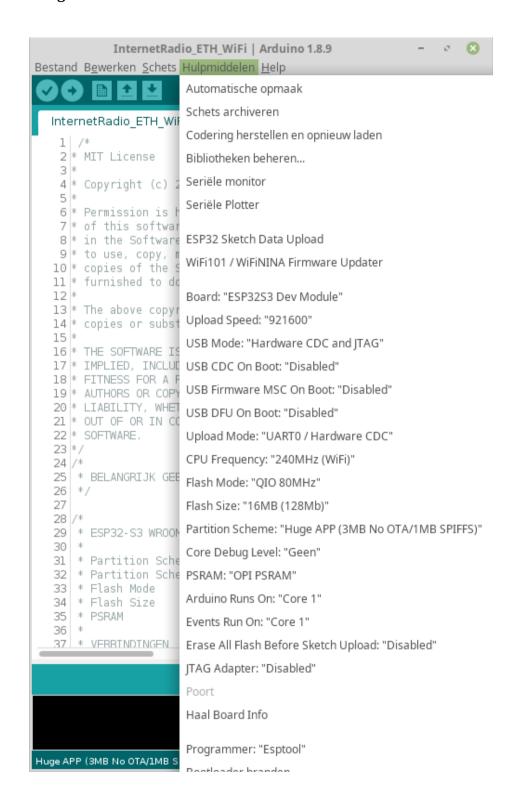

TFT e-SPI settings

```
// Only define one driver, the other ones must be commented out
//#define ILI9341_DRIVER
//#define ILI9341_2_DRIVER
                                         // Generic driver for common displays
// Alternative ILI9341 driver, see https://github.com/Bodmer/TFT_eSPI/issues/1172
// Define additional parameters below for this display
 //#define ST7735 DRIVER
 //#define ILI9163 DRIVER
                                          // Define additional parameters below for this display
 //#define S6D02A1 DRIVER
 //#define RPI ILI9486 DRIVER // 20MHz maximum SPI
 //#define HX8357D DRIVER
 //#define ILI9481_DRIVER
 //#define ILI9486 DRIVER
 //#define ILI9488 DRIVER
                                          // WARNING: Do not connect ILI9488 display SDO to MISO if other devices share the SPI bus (TFT SDO does NOT tr
                                          // Full configuration option, define additional parameters below for this display // Minimal configuration option, define additional parameters below for this display
 //#define ST7789_DRIVER
//#define ST7789_2_DRIVER
 //#define R61581_DRIVER
 //#define RM68140 DRTVFR
 #define ST7796 DRIVER
 //#define SSD1351 DRIVER
 //#define SSD1963_480_DRIVER
//#define SSD1963_800_DRIVER
 //#define SSD1963_800ALT_DRIVER
 //#define ILI9225_DRIVER
 //#define GC9A01 DRIVER
// ##### EDIT THE PIN NUMBERS IN THE LINES FOLLOWING TO SUIT YOUR ESP32 SETUP ######
// For ESP32 Dev board (only tested with ILI9341 display)
// The hardware SPI can be mapped to any pins
#define TFT MISO 5
#define TFT_MOSI 6
#define TFT_SCLK 7
#define TFT_CS 8 // Chip select control pin
#define TFT_DC 39 // Data Command control pin
//#define TFT_RST 4 // Reset pin (could connect to RST pin)
#define TFT_RST -1 // Set TFT_RST to -1 if display RESET is connected to ESP32 board RST
// For ESP32 Dev board (only tested with GC9A01 display)
// The hardware SPI can be mapped to any pins
//#define TFT MOSI 15 // In some display driver board, it might be written as "SDA" and so on.
//#define TFT_SCLK 14
//#define TFT_SCLK 14
//#define TFT_DC 27 // Data Command control pin
//#define TFT_BST 33 // Reset pin (could connect to Arduino RESET pin)
//#define TFT_BL 22 // LED back-light
#define TOUCH CS 40
                                  // Chip select pin (T CS) of touch screen
//#define TFT WR 22 // Write strobe for modified Raspberry Pi TFT only
// For the M5Stack module use these #define lines
//#define TFT_MISO 19
//#define TFT_MOSI 23
//#define TFT_SCLK 18
//#define TFT_SCLK 18
//#define TFT_CS 14 // Chip select control pin
//#define TFT_DC 27 // Data Command control pin
//#define TFT_RST 33 // Reset pin (could connect to Arduino RESET pin)
//#define TFT_BL 32 // LED back-light (required for M5Stack)
```

ESP32-S3 programming

To avoid problems with incompatible libraries, all used libraries can be found in the libraries folder. Also the ESP32 hardware version used in the **esp32 by Espressif Systems version** folder

Load the program **InternetRadio_ETH_WiFi.ino** into the Arduino IDE and program the ESP32-S3.

Separate 5V power supply is required, USB power supply may not provide enough power.

There is an already compiled **Internet_ETH_WiFi.bin** file in the bin folder. This can be easily loaded into the ESP32-S3 with **esptool.py**.

For further explanation, see Readme file in bin folder.

This way, a working software version can always be easily loaded into the ESP32-S3.

Copy all files (not the folder) from the folder "SD kaart" to an SD card.

If you are going to connect to WiFi, the password and ssid of the connection must be entered in the pswd and ssid files.

File ntp contains the address of the ntp server : pool.ntp.org

File tz contains the time zone. Here Brussels

CET-1CEST,M3.5.0,M10.5.0/3

for a different time zone see the following link https://github.com/nayarsystems/posix_tz_db/blob/master/zones.csv

file "zender_data.csv" contains the names and URLs of the preferred stations.

You can change all these files on the SD card but also via the program.

Important 1!!!

Always use an http:// address and NOT a https:// address for the URLs of the preferred channels. Omitting the "s" from https is sufficient.

The computing power of an ESP32-S3 is not infinite.

Important 2!!!

It may happen that a URL address no longer works, causing the ESP32-S3 to enter an infinite loop.

To solve this. Switch ESP32-S3 off and on again.


When selecting the network, press the <confirm> button. This is the switch on channel selection EC11.

The ESP32-S3 will now restart with one of the first 5 preset channels randomly.


Then correct the incorrect URL address.

<confirm> is the switch on the EC11 channel selection

Splash screen

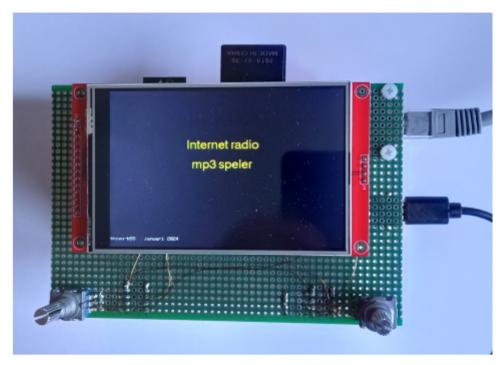

Network choice

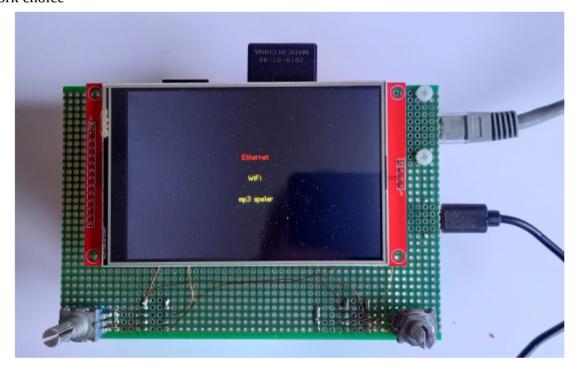

Using the EC11 channel selector select the desired network and confirm by pressing <confirm>. For MP3 selection as shown here, see further in the manual.

After <confirm> the ESP32-S3 restarts and returns to this screen. If you agree with the previous choice, just wait until the desired network arrives.

Ethernet connection

If not changed, the default IP address is 192.168.1.222 IP address also appears at the bottom left of the screen.

The ESP32-S3 web radio can be reached via the address 192.168.1.222 via cable or WiFi if available on this network.

The ESP32-S3 web radio can also be reached via its own network

Network ESP32webradio Password ESP32pswd address 192.168.4.1


WiFi connection

when connected to the network the default address is 192.168.1.222 IP address also appears at the bottom left of the screen

The ESP32-S3 web radio can be reached via this address.

If there is no network connection, the ESP32-S3 web radio can be reached via its own network

Network ESP32webradio Password ESP32pswd address 192.168.4.1

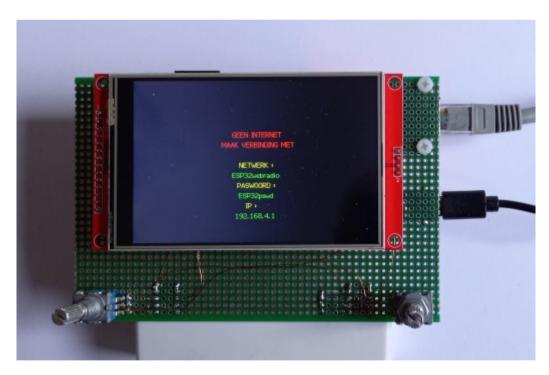

Screen WiFi no connection

Service

The internet radio can be operated with

EC11 rotary encoders

The usage is self-explanatory.
Confirm channel selection using <confirm>
<confirm> is the switch on the EC11 channel selection

Touch screen

Tap the screen to display the touch screen menu.

Volume control and channel selection using the arrows.

Confirm channel selection by pressing the blue square on the right of the screen.

Web page

The IP address can regularly be seen on the TFT screen

With WiFi, connect via the IP address of the router

With Ethernet, connect via the IP address of the router or via the ESP32-S3 local network.

If there is no network, connect via the local network.

Network ESP32webradio Password ESP32pswd address 192.168.4.1

ESP32 internetradio

	Radio 10 Non-Stop
	Talk Talk - It's My Life
	Radio 10 Non-Stop
	- OK +
	EQ -40 <-> 6 Volume 0 <->21
L :	3 M: 0 H: 3 V: 9
	OK Instellen zender en url: 0
	Radio 1
	http://icecast.vrtcdn.be/radio1-high.mp3
	- OK +
	Instellingen

thieu-b55 januari 2024

Home screen

Radi	o 10 Non-	Stop
Talk T	Talk - It's M	y Life
Rad	lio 10 Non-S	top
-	ОК	+

The station is selected with +/-. <OK> to confirm

	EQ -40 <-> 6				Volume 0 <->21			
L :	3	M:	0] H:[3	V:	9	
			(ок				

Tone and volume control <OK> to confirm

Instellen zender en url: 0



Set channel name and URL Maximum is 75
Confirm with <OK>

Important 1!!!

Always use an http:// address and NOT a https:// address for the URLs of the preferred channels. Omitting the "s" from https is sufficient.

The computing power of an ESP32-S3 is not infinite.

Important 2!!!

It may happen that a URL address no longer works, causing the ESP32-S3 to enter an infinite loop.

To solve this. Switch ESP32-S3 off and on again.

When selecting the network, press the <confirm> button. This is the switch on channel selection EC11.

The ESP32-S3 will now restart with one of the first 5 preset channels randomly.

Then correct the incorrect URL address.

Instellingen

click on <Instellingen> to set the internet radio

Tijdzone instellen

CET-1CEST,M3.5.0,M10.5.0/3

	Bevestig
	NTP server instellen
	pool.ntp.org
	Bevestig
	ESP32 Netwerk instellingen
ssid :	
	Tijdzone instellen
	CET-1CEST,M3.5.0,M10.5.0/3
	Bevestig
	192 168 1 222
	Bevestig
	Hoofdpagina

Tijdzone instellen

CET-1CE	ST,M3.5.0,M10.5.0/
	Bevestig

Set desired time zone

https://github.com/nayarsystems/posix_tz_db/blob/master/zones.csv https://www.gnu.org/software/libc/manual/html_node/TZ-Variable.html

NTP server instellen				
	pool.ntp.org			
	poor.ncp.org			
	Bevestig			

Set desired NTP server https://gist.github.com/mutin-sa/eea1c396b1e610a2da1e5550d94b0453

ESP32 Netwerk instellingen

pswd :

Bevestig

If WiFi Set SSID and password

ssid:

Gewenst IP address (default 192.168.1.222)

192	168	1	222
	Beve	stig	

Set IP address.

Hoofdpagina

Back to main page

mp3 player

Before the internet radio can be used as an MP3 player, a few actions must first be performed.

As an example we have 915 mp3 files.

The intention is to divide these over different folders to keep the search time for the next MP3 file as short as possible.

The MP3 files are played on a random basis.

It is best to have as many folders as there are files in the folder.

Importantly, there must be the same number of files in each folder except the last one.

```
915 mp3 files >> 30 folders with 30 files and a 31st folder with 15 files. Numbering of MP3 folders mp3_0 mp3_1 mp3_2
```

Numbering must follow each other. If the next number is missing, the program stops searching.

Copy the folders to the SD card.

If there are still "songlijstX" folders on the SD card >> delete.

Choose in the program:

mp3_30

"mp3 lijst maken" and <confirm>

The ESP32-S3 needs approximately 4 minutes per 1000 MP3 songs.

Progress can be followed on the TFT screen.

When done, the program continues with the MP3 player.

Github page:

https://github.com/thieu-b55/The---I-want-this---ESP32-S3-Internet-radio

Dear X, girls, boys that's it,

regards, thieu-b55

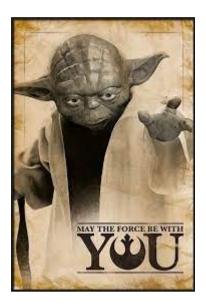


Image found on the internet.