# ETSITS 132 442 V10.1.0 (2011-05)

Technical Specification

Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS);


LTE:

**Telecommunication management;** 

**Trace Management Integration Reference Point (IRP):** 

**Information Service (IS)** 

(3GPP TS 32.442 version 10.1.0 Release 10)

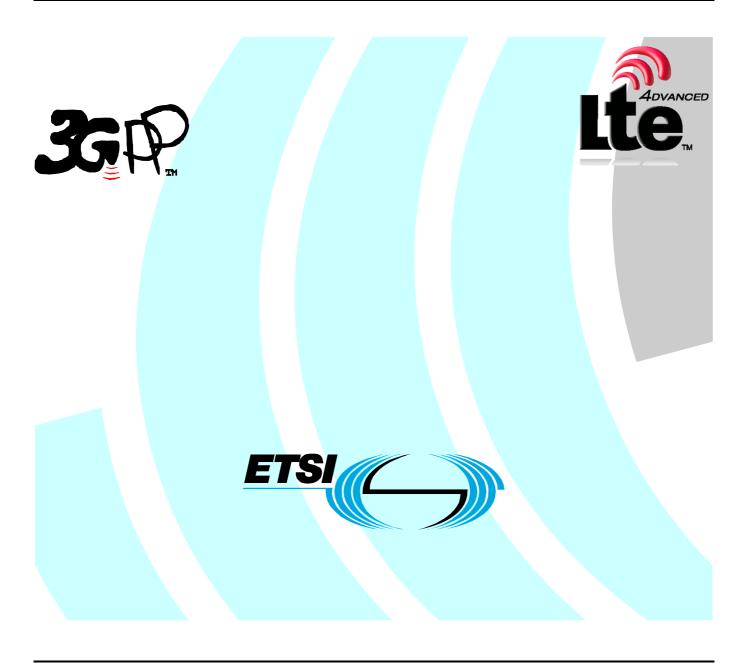

# Reference RTS/TSGS-0532442va10 Keywords GSM, LTE, UMTS

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: <a href="http://www.etsi.org">http://www.etsi.org</a>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<a href="http://portal.etsi.org/tb/status/status.asp">http://portal.etsi.org/tb/status/status.asp</a></a>

If you find errors in the present document, please send your comment to one of the following services: <u>http://portal.etsi.org/chaircor/ETSI\_support.asp</u>

#### **Copyright Notification**

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2011. All rights reserved.

**DECT**<sup>TM</sup>, **PLUGTESTS**<sup>TM</sup>, **UMTS**<sup>TM</sup>, **TIPHON**<sup>TM</sup>, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.

**3GPP**<sup>™</sup> is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **LTE**<sup>™</sup> is a Trade Mark of ETSI currently being registered

for the benefit of its Members and of the 3GPP Organizational Partners. **GSM**® and the GSM logo are Trade Marks registered and owned by the GSM Association.

# Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Foreword**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <a href="http://webapp.etsi.org/key/queryform.asp">http://webapp.etsi.org/key/queryform.asp</a>.

# Contents

Intelle	ectual Property Rights	2
Forew	vord	2
Forew	vord	5
Introd	luction	5
	Scope	
	References	
2		
	Definitions and abbreviations	
3.1	Definitions	
3.2	Abbreviations	/
4	System Overview	7
4.1	System context	
4.2	Compliance rules	7
_	Information Object Classes	0
	Information Object Classes	
5.1 5.2	Imported information entities and local labels	
5.2.1	Attributes and relationships	
5.2.1	Inheritance	
5.2.2 5.3	Information object class definitions	
5.3.1	TraceJob	
5.3.1.1		
5.3.1.2		
5.3.1.2		
5.3.1.3 5.3.2	TraceRecord	
5.3.2.1		
5.3.2.1		
5.3.2.2 5.3.3	TraceIRP	
5.3.3.1		
5.3.4	ManagedEntity	
5.3.4.1	· · · · · · · · · · · · · · · · · · ·	
5.4	Information relationship definitions	
5.4.1	relation-traceIRP-traceJob (M)	
5.4.1.1	· · ·	
5.4.1.2	Roles	13
5.4.2	relation-traceJob-managedEntity (M)	13
5.4.2.1		
5.4.2.2	Roles	13
5.4.3	relation-traceJob-traceRecord (M)	13
5.4.3.1	Definition	13
5.4.3.2	Roles	13
5.5	Information attribute definitions	14
5.5.1	Definition and legal values	14
6	Interface Definition	16
6.1	Class diagram representing interfaces	
6.2	Generic rules	
6.3	TraceIRPManagement (M)	
6.3.1	Operation activateTraceJob (M)	
6.3.1.1		
6.3.1.2		
6.3.1.3	1 1	
6.3.1.4		
6.3.1.5		20

6.3.1.6	Exceptions	
6.3.1.7	Constraints	
6.3.2	Operation deactivateTraceJob(M)	20
6.3.2.1	Definition	20
6.3.2.2	Input parameters	21
6.3.2.3	Output parameters	21
6.3.2.4	Pre-condition	21
6.3.2.4	Post-condition	21
6.3.2.6	Exceptions	21
6.3.3	Operation listTraceJob (M)	21
6.3.3.1	Definition	21
6.3.3.2	Input parameters	22
6.3.3.3	Output parameters	22
6.3.3.4	Pre-condition	22
6.3.3.5	Post-condition	22
6.3.3.6	Exceptions	23
6.3.3.7	Constraints	
6.3.4	Operation listActivatedTraceJobs (M)	23
6.3.4.1	Definition	23
6.3.4.2	Input parameters	23
6.3.4.3	Output parameters	23
6.3.5	Notification notifyTraceRecordingSessionFailure (O)	24
6.3.5.1	Definition	24
6.3.5.2	Input parameters	24
6.3.5.3	Triggering event	24
6.3.5.3.1	From state	24
6.3.5.3.2	To state	24
6.3.6	Notification notifyTraceSessionLocalActivation (M)	24
6.3.6.1	Definition	24
6.3.6.2	Input parameters	
6.3.6.3	Triggering event	25
6.3.6.3.1	From state	25
6.3.6.3.2	To state	
6.3.7	Notification notifyTraceSessionIdentities (CM)	
6.3.7.1	Definition	25
6.3.7.2	Input parameters	25
6.3.7.3	Triggering event	26
6.3.7.3.1	From state	
6.3.7.3.2	To state	26
6.3.7.4 Cor	nstraint	26
Annex A	(informative): Change history	27
Listom	· · · · · · · · · · · · · · · · · · ·	

#### **Foreword**

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

# Introduction

The present document is part of a TS-family covering the 3<sup>rd</sup> Generation Partnership Project; Technical Specification Group Services and System Aspects; Telecommunication management; as identified below:

- 32.441 "Trace Management Integration Reference Point (IRP): Requirements".
- 32.442 "Trace Management Integration Reference Point (IRP): Information Service (IS)".
- 32.443 "Trace Management Integration Reference Point (IRP): Common Object Request Broker Architecture (CORBA) Solution Set (SS)".
- 32.445 "Trace Management Integration Reference Point (IRP): eXtensible Markup Language (XML) file format definition".

The present document is part of a TS-family which describes the information service necessary for the Telecommunication Management (TM) of 3G systems. The TM principles and TM architecture are specified in 3GPP TS 32.101 [1] and 3GPP TS 32.102 [2].

Trace provides very detailed information on call level for a specific subscriber or MS. This data is an additional information source to Performance Measurements and allows deeper investigations in problems solving or in case of optimization.

# 1 Scope

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 32.101: "Telecommunication management; Principles and high level requirements".
- [2] 3GPP TS 32.102: "Telecommunication management; Architecture".
- [3] 3GPP TS 32.150: "Telecommunication management; Integration Reference Point (IRP) Concept and definitions".
- [4] 3GPP TS 32.152: "Telecommunication management; Integration Reference Point (IRP) Information Service (IS) Unified Modelling Language (UML) repertoire".
- [5] 3GPP TS 32.622: "Telecommunication management; Configuration Management (CM); Generic network resources Integration Reference Point (IRP); Network Resource Model (NRM)".
- [6] 3GPP TS 32.302: "Telecommunication management; Configuration Management (CM); Notification Integration Reference Point (IRP): Information Service (IS)".
- [7] 3GPP TS 32.342: "Telecommunication management; File Transfer (FT) Integration Reference Point (IRP): Information Service (IS)".
- [8] 3GPP TS 32.312: "Telecommunication management; Generic Integration Reference Point (IRP) management: Information Service (IS)".
- [9] 3GPP TS 32.422: "Telecommunication management; Subscriber and equipment trace; Trace control and configuration management".
- [10] 3GPP TS 32.602: "Telecommunication management; Configuration Management (CM); Basic CM Integration Reference Point (IRP): Information Service (IS)".

# 3 Definitions and abbreviations

## 3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TS 32.101 [1], 3GPP TS 32.102 [2], 3GPP TS 32.150 [3] and the following apply:

**IRPAgent:** See 3GPP TS 32.102 [2].

**IRPManager:** See 3GPP TS 32.102 [2].

#### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TS 32.101 [1], 3GPP TS 32.102 [2], 3GPP TS 32.150 [3] and the following apply:

IOC Information Object Class
IRP Integration Reference Point
IS Information Service
OMG Object Management Group
UML Unified Modelling Language (OMG)

UML Unified Modelling Language (OMG

# 4 System Overview

# 4.1 System context

The general definition of the System Context for the present IRP is found in 3GPP TS 32.150 [3] subclause 4.7.

In addition, the set of related IRP(s) relevant to the present IRP is shown in the two diagrams below.

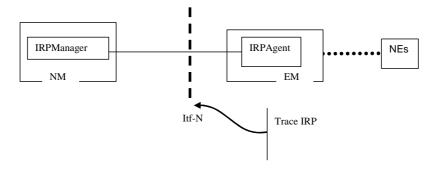


Figure 4.1.1: System Context A

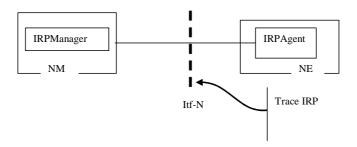


Figure 4.1.2: System Context B

# 4.2 Compliance rules

For general definitions of compliance rules related to qualifiers (Mandatory/Optional/Conditional) for *operations*, *notifications and parameters* (of operations and notifications) please refer to 3GPP TS 32.150 [3].

# 5 Information Object Classes

# 5.1 Imported information entities and local labels

Label reference	Local label
3GPP TS 32.622 [5], information object class, Top	Тор
3GPP TS 32.622 [5], information object class, IRPAgent	IRPAgent
3GPP TS 32.622 [5], information object class, GenericIRP	GenericIRP
3GPP TS 32.302 [6], information object class, NotificationIRP	NotificationIRP
3GPP TS 32.342 [7], information object class, FileTransferIRP	FileTransferIRP
3GPP TS 32.602 [10], information object class, ManagedEntity	ManagedEntity

# 5.2 Class diagram

## 5.2.1 Attributes and relationships

This clause introduces the set of Information Object Classes (IOCs) that encapsulate information within the IRPAgent. The intent is to identify the information required for the TraceIRP implementation of its operations and notification emission. This clause provides the overview of all support object classes in UML. Subsequent clauses provide more detailed specification of various aspects of these support object classes.

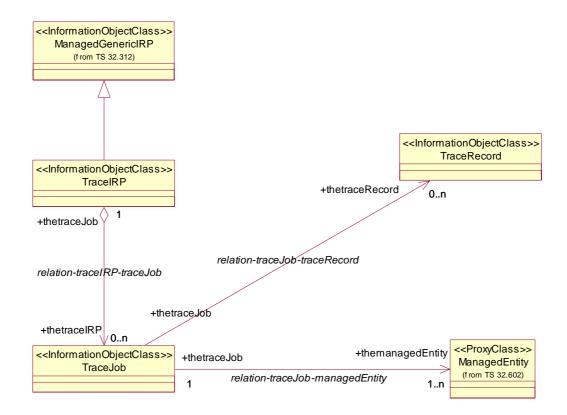
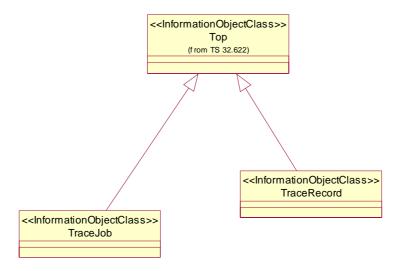


Figure 5.2.1: Information Object Class (IOC) UML diagram

#### 5.2.2 Inheritance



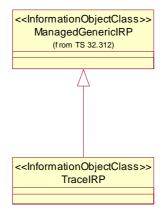


Figure 5.2.2: Information Object Class Inheritance UML Diagram

# 5.3 Information object class definitions

#### 5.3.1 TraceJob

#### 5.3.1.1 Definition

It represents a task that controls the Trace Sessions and collects the trace data (i.e. collects the TraceRecord of multiple ManagedEntity instances). The TraceReference is a unique ID, which identifies the Trace Session that has been created by the TraceJob and activated to one or multiple ManagedEntity instance(s).

It represents also the task that controls the UE based network performance measurements.

When a TraceJob is created the following attributes cannot be modified via the Itf-N:

- TraceReference
- ListOfInterfaces
- ListofNeTypes
- TraceDepth
- TraceTarget
- TriggeringEvent
- JobType
- ListOfMeasurements
- ReportingTrigger
- ReportInterval
- ReportAmount
- EventThreshold
- LoggingInterval
- LoggingDuration
- IPAddressOfTCE

If for any reason the TraceIRP determines that a Trace Session has been activated in its ManagedEntity(ies) the TraceIRP shall emit the "noitfyTraceSessionLocalActivation" notification to the subscribed IRPManagers to inform the active Trace Sessions. The IRPManagers can decide whether they deactivate the Trace Session or keep the Trace Session active. (E.g. if the TraceReference is colliding with an existing TraceJob"s TraceReference, the IRPManager may decide to immediately deactivate the Trace Session in that ManagedEntity.)

The TraceJob shall use its information to activate and configure Trace Session(s) in the requested ManagedEntity instance(s). When the TraceIRP determines that there are available TraceRecord files, it shall emit a notification to all subscribed IRPManagers informing the availability of the files. The method and the notification of the available files is described in the File Transfer IRP (3GPP TS 32.342 [7]).

If a TraceJob receives an indication from one of its ManagedEntity that starting a Trace Recording Session is failed for any reason, the "notifyTraceRecordingSessionFailure" notification may be emitted to inform all subscribed IRPManagers that there was a Trace Recording Session that was not started in the ManagedEntity.

#### 5.3.1.2 Attributes

Attribute name	Support Qualifier
traceReference	М
listOfInterfaces	0
listOfNeTypes	CM
traceDepth	CM
traceTarget	М
triggeringEvent	CM
traceCollectionEntityAddress	М
jobType	М
listOfMeasurements	CM
reportingTrigger	CM
reportInterval	CM
reportAmount	CM
eventThreshold	CM
loggingInterval	CM
loggingDuration	CM

#### 5.3.1.3 Attribute constraints

The listOfNeTypes attributes shall be present only for Signalling Based Activation.

The traceTarget shall be public ID in case of a Management Based Activation is done to an ScscfFunction. The TraceTarget shall be cell only in case of the UTRAN cell traffic trace function.

The TraceTarget shall be E-UtranCell only in case of E-UTRAN cell traffic trace function. The traceTarget shall be either IMSI or IMEI(SV) if the Trace Session is activated to any of the following ManagedEntity(ies):

- HssFunction
- MscServerFunction
- SgsnFunction
- GgsnFunction
- BmscFunction
- RncFunction
- MmeFunction

The traceTarget shall be IMSI if the Trace Session is activated to a ManagedEntity playing a role of ServinGWFunction.

In case of MDT, the  $\mbox{TraceTarget}$  attribute shall be able to carry (IMSI or IMEI(SV)) and a list of (cell or  $\mbox{EUtranCell}$  or  $\mbox{TA/LA/RA}$ ).

- traceTarget: This attribute shall be present only if Trace is supported.
- triggeringEvent: This attribute shall be present only if Trace is supported.
- listOfMeasurements: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT.
- reportingTrigger: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ListOfMeasurements attribute is configured for M1.
- reportInterval: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportingTrigger is configured for PeriodicMeasurements

- reportAmount: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportingTrigger attribute is configured for PeriodicMeasurements.
- eventThreshold: This attribute shall be present only if MDT is supported and the JobType attribute is set to ImmediateMDT and the ReportTrigger attribute is configured for A2EventReporting.
- loggingInterval: This attribute shall be present only if MDT is supported and the JobType attribute is set to LoggedMDT.
- loggingDuration: This attribute shall be present only if MDT is supported and the JobType attribute is set to LoggedMDT.

#### 5.3.2 TraceRecord

#### 5.3.2.1 Definition

TraceRecord is the representation of the files containing the logged information from the Trace Recording Sessions.

#### 5.3.2.2 Attributes

Attribute name	Visibility	Support Qualifier	Read Qualifier	Write Qualifier
fileName	+	M	М	-

#### 5.3.3 TraceIRP

#### 5.3.3.1 Definition

TraceIRPis the representation of the trace management capabilities specified by the present document. This IOC inherits from ManagedGenericIRP IOC specified in 3GPP TS 32.312 [8].

# 5.3.4 ManagedEntity

#### 5.3.4.1 Definition

In case of Signalling Based Activation the ManagedEntity represents the role that can be played by an instance of one of the following IOCs:

- HssFunction
- MscServerFunction
- SgsnFunction
- MmeFunction

In case of Management Based Activation the ManagedEntity represents the role that can be played by an instance of the following IOCs:

- HssFunction
- MscServerFunction
- SqsnFunction
- GgsnFunction
- BmscFunction

- RncFunction
- CscfFunction
- MmeFunction
- ServingGWFunction

In case of Cell Traffic Trace the ManagedEntity represents the role that can be played by an instance of the of the following IOCs:

- UtranCell
- E-UtranCell

# 5.4 Information relationship definitions

# 5.4.1 relation-traceIRP-traceJob (M)

#### 5.4.1.1 Definition

This represents the relationship between TraceIRP and the TraceJob.

#### 5.4.1.2 Roles

Name	Definition
theTraceIRP	It represents the TraceIRP
theTraceJobList	It represents the TraceJobList

# 5.4.2 relation-traceJob-managedEntity (M)

#### 5.4.2.1 Definition

This represents the relationship between TraceJob and the ManagedEntity.

#### 5.4.2.2 Roles

Name	Definition
theManagedEntity	The ManagedEntity, when playing this role, represents the actual network resource instance,
	where a Trace Session is activated.
theTraceJob	It represents the TraceJob

# 5.4.3 relation-traceJob-traceRecord (M)

#### 5.4.3.1 Definition

This represents the relationship between  ${\tt TraceJob}$  and the  ${\tt TraceRecord}.$ 

#### 5.4.3.2 Roles

Name	Definition
theTraceJob	It represents the TraceJob
theTraceRecord	It represnts the TraceRecord.

# 5.5 Information attribute definitions

# 5.5.1 Definition and legal values

given ManagedEntityPunction.The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.    It specifies in which type of ManagedPunction the trace should be activated. The attribute is applicable only for Trace with Signalling Based Trace activation. In case this attribute is not used, it carries a nulls semantic.    It specifies the diverse of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT.    It specifies the trace depth of the ManagedEntityPunction instances. The attribute is not used, it carries a nulls semantic.    It specifies the trace depth of the ManagedEntityPunction instances. The attribute is applicable only for Trace and MDT.	Attribute Name	Definition	Legal Values
applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  1 is specifies in which type of ManagedFunction the trace should be activated. The attribute is applicable only for Trace with Signalling Based Trace activation. In case this attribute is not used, it carries a nulls semantic.  1 traceCollectionEntityAddress it specifies the address of the Trace Collection Entity within an IRFWanager. The attribute is applicable for for both Trace and MDT in trace and MDT in trace and MDT in the specifies the trace depth of the sphiladeline only for Trace. In case this attribute is not used, it carries a nulls semantic.  1 traceReference	listOfInterfaces	It specifies the interfaces that needs to be traced in the	
It specifies in which type of ManagedPunction the trace should be activated. The attribute is applicable only for Trace with Signalling Based Trace activation. In case this attribute is not used, it carries a nulls semantic.    TraceCollectionEntityAddress   It specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT			[9]
It specifies in which type of ManagedPunction the trace should be activated. The attribute is applicable only for [9]			
should be activated. The attribute is applicable only for Trace with Signaling Based Trace activation. In case this attribute is not used, it carries a nulls semantic.  traceCollectionEntityAddress it is specifies the address of the Trace Collection Entity within an IRPManager. The attribute is applicable for for both Trace and MDT  traceDepth It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  traceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the Trace. Description of the Amy positive integer value  traceTarget It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the triggering event parameter of the trace session. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace session. The attribute is applicable for both Trace and MDT ob. The attribute is applicable for both Trace and MDT ob. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT in case this attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT in case this attribute is applicable only for Immediate MDT in a when the alistof Measurements in case this attribute is applicable only for Immediate MDT and when the alistof Measurements is configured for M1. In case this attribute is an unlis semantic.  It specifies the Interval between the periodical measurements in the same this attribute is not used, it carries a nulls semantic.  It specifi	listOfNETvpes		See 3GPP TS 32 422
Trace with Signalling Based Trace activation. In case this attribute is not used, it carries a nulls semantic.  traceCollectionEntityAddress with an IRPManager. The attribute is applicable for for both Trace and MDT  traceDepth  It specifies the trace depth of the ManagedEntityPunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  traceReference  A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceZoD. The attribute is applicable for both Trace and MDT.  The attribute is applicable for both Trace and MDT.  The attribute is applicable for both Trace and MDT.  The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace MDT and Public ID on Private IDandor a list of Cell(identified by its DN identified by its DN			
See 3GPP TS 32.422   See 3GP			
within an IRPManager. The attribute is applicable for for both Trace and MDT  traceDepth  It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  traceReference  A globally unique identifier, which uniquely identifies the Trace Session that is created by the TracezoLob. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace. In Case this attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace. In Case this attribute is applicable only for Trace or a combined Trace and MDT.  It specifies the MDT mode and it specifies also whether the Trace. In MDT in Case this attribute is applicable for both Trace and MDT.  It specifies the MDT mode and it specifies also whether the Trace. In MDT in Case this attribute is applicable for both Trace and MDT. In case this attribute is applicable only for Immediate MDT in case this attribute is applicable only for Immediate MDT and when the list of Manager and Interest and Immediate MDT and when the list of Manager and Immediate MDT and when the periodical measurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements that be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for M2. In case this attribute is not used, it carries a nulls semantic.  It specifies the Ime			
both Trace and MDT  It specifies the trace depth of the ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carriers a nulls semantic.  FraceReference  A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The ALLANCA.)  In the provided of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace MDT and/or a list of Cell(identified by its DN ic) and/or TALLANCA.)  If the provided is attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  JeportingTrigger  It specifies the UE measurements that shall be collected in an Immediate MDT in case this attribute is not used, it carries a nulls semantic.  ProportInterval  It specifies whether periodic or event based measurements that Shall be taken when the ListofMeasurements is bould be collected. The attribute is applicable only for Immediate MDT in case this attribute is not used, it carries a nulls semantic.  ProportInterval  It specifies the time and the proportion of the measurement that shall be taken when the ListofMeasurements is not used, it carries a nulls semantic.  ProportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when the proportion of the proportion of the measurement reports that shall be taken for periodic and measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  Prop	traceCollectionEntityAddress		
### It specifies the trace depth of the ManagedEntityPunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  ### LargeTargeT it specifies the target object of the Trace ADD. The attribute is applicable for both Trace and MDT.  ### LargeTargeT it specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  ### LargeTargeT it specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  ### LargeTargeT it specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  ### LargeTargeT it specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  ### LargeTargeTargeTargeTargeTargeTargeTargeT			[9]
ManagedEntityFunction instances. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT.  TraceTarget It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace MDT and when the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements what shall be taken when the listofMeasurements is not used, it carries a nulls semantic.  TreportInterval It specifies whether periodic or event based measurements that shall be taken when the UE is in connected mode. The attribute is not used, it carries a nulls semantic.  TreportInterval It specifies the tribute be taken when the UE is in connected mode. The attribute is paplicable only for Immediate MDT and when the UE is in connected mode. The attribute is paplicable only for Immediate MDT and when the UE is in connected mode. The attribute is paplicable only for Immediate MDT and when the UE is in connected. The attribute is applicable only for Immediate MDT and when the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for Lincase this attribute is not used, it carries a nulls semantic.  TreportAmount It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In ca	traceDepth		See 3GPP TS 32 422
applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  LaraceReference A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT.  LaceTarget It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the TraceJob perseents only MDT, Trace or a combined Trace and MDT in case this attribute is applicable only for Immediate MDT in the attribute is applicable only for Immediate MDT and when reportingTrigger is configured for M1. In case this attribute is not used, it carries a nulls semantic.  LaceTarget  It specifies the UE measurements that shall be collected in an Immediate MDT and when reportingTrigger is configured for M1. In case this attribute is not used, it carries a nulls semantic.  LaceTarget  It specifies the UE measurements that shall be collected in an Immediate MDT and when reportingTrigger is configured for M1. In case this attribute is not used, it carries a nulls semantic.  LaceTarget  LaceTarget  LaceTarget  It specifies the unmeer of measurement reports that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  LaceTarget  LaceTa			
A globally unique identifier, which uniquely identifies the Trace Session that is created by the TraceJob.  The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace of Cellifeantified by its DN id) and/or TALA/RA).  Ill specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace and MDT.  It specifies the MDT mode and it specifies also whether the Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is applicable only for Immediate MDT and when the periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements that shall be taken when the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting while t			
Trace Session that is created by the TraceJob. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT. Trace or a combined Trace and MDT in the attribute is applicable for both Trace and MDT.  It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT. Trace or a combined Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT in Case this attribute is applicable only for Immediate MDT in Case this attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the I istofMeasurements is configured for MI. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422 [9]  See 3GPP		it carries a nulls semantic.	
The attribute is applicable for both Trace and MDT.  It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  It specifies the triggering event parameter of the trace of cell (identified by its DN id) and/or TA/LA/RA).  IMSI, IMEI, IMEISV and Public ID are mutually exclusive.  ExiggeringEvent  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  JobType  It specifies the MDT mode and it specifies also whether the Trace and MDT job. The attribute is applicable only for Irrace and MDT in case this attribute is applicable only for Irrace and MDT.  It specifies the UE measurements that shall be collected in carries a nulls semantic.  It specifies the UE measurements in attribute is applicable only for Immediate MDT in case this attribute is applicable only for Immediate MDT in case this attribute is applicable only for Immediate MDT and when the listofMeasurements should be collected. The attribute is applicable only for Immediate MDT and when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. Is configured for periodical measurements. Is configured for periodical measurements. It is specifies the interval between the periodical measurements. It is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements in a configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical periodical measurements in the UE is in connected. The attribute is applicable only for Immediate MDT and when	traceReference		
It specifies the target object of the Trace MDT. The attribute is applicable for both Trace and MDT.  I(MSI or IMEI or IMEISV or Public ID or Private IDand/or a list of Cell(identified by its DN id) and/or TALA/RA).  INIS, IMEI, IMEISV and Public ID are mutually exclusive.  Cell, TA, LA, RA are mutually exclusive.  Targe and MDT.  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace Joh represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is applicable only for Immediate MDT and when the listoffee assurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  TeportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  TeportAmount  It specifies the unmber of measurement reports that shall be taken to periodical measurement reports that shall be taken when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the unmber of measurement reports that shall be taken to periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the unmber of measurement reports that shall be taken the periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the trieshold which should trigger the reporting See 3GPP TS 32.422 levent Threshold			value
attribute is applicable for both Trace and MDT.    MEISV or Public ID or Private IDand/or a list of Cell(identified by its Di d) and/or TALA/RA). IMSI, IMEI, IMEISV and Public ID are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Sees ion. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.    It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT. Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT. In case this attribute is not used, it carries a nulls semantic.    It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is not used, it carries a nulls semantic.    It specifies the interval between the periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.    It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting the let UE is in connected. The attribute is applicable only for Immediate MDT and when reporting frigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.    It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting frigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.	t see gemeent		/IMCL on IMEL on
Private IDand/or a list of Cell(identified by its DN id) and/or TALA/RA), IMSI, IMEI, IMI, IM	cracerarget		
of Cell(identified by its DN id) and/or TALA/RA), IMSI, IMEI, IMEI SV and Public ID are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. See 3GPP TS 32.422 [9]  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace Job represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listoTMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount It specifies the number of measurement reports that shall be taken for periodical measurement reports that shall be taken for periodical periodical measurement reports that shall be taken for periodical measurements applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  EventThreshold It specifies the threshold whic		attribute is applicable for both frace and MD1.	
DN id) and/or TA/LA/RA), IMSI, IMEI, IMEISV and Public ID are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  JobType It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable only for Immediate MDT in the attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportIngTrigger It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.			
IMSI, IMEI, IMEISV and Public ID are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive.    triggeringEvent			
and Public ID are mutually exclusive. Cell, TA, LA, RA are mutually exclusive.  triggeringEvent  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  [9]			
mutually exclusive. Cell, TA, LA, RA are mutually exclusive. Cell, TA, LA, RA are mutually exclusive. triggeringEvent  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries and used in specifies also whether the Trace and MDT mode and it specifies also whether the Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is applicable only for Immediate MDT. In case this attribute is applicable only for It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the 1 istofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422  [9]			
triggeringEvent  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the Trace on the Trace and MDT pob. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listoffMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422 legically and the reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.			
triggeringEvent  It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422 legilated to the trace.			
It specifies the triggering event parameter of the trace session. The attribute is applicable only for Trace. In case this attribute is not used, it carries a nulls semantic.    See 3GPP TS 32.422			
this attribute is not used, it carries a nulls semantic.  It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listof Measurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reporting Trigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422	triggeringEvent		See 3GPP TS 32.422
It specifies the MDT mode and it specifies also whether the TraceJob represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the unmber of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			[9]
the Trace Job represents only MDT, Trace or a combined Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in Immediate MDT. In case this attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  [9]	d a la Maria a		Coo 2000 TO 22 422
Trace and MDT job. The attribute is applicable for both Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.	JobType		
Trace and MDT.  It specifies the UE measurements that shall be collected in an Immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			[9]
an immediate MDT job. The attribute is applicable only for Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  See 3GPP TS 32.422  [9]  See 3GPP TS 32.422  [9]  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  EventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			
Immediate MDT. In case this attribute is not used, it carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422	listOfMeasurements		
carries a nulls semantic.  reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			[9]
reportingTrigger  It specifies whether periodic or event based measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422		•	
measurements should be collected. The attribute is applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold It specifies the threshold which should trigger the reporting See 3GPP TS 32.422	reportingTrigger		See 3GPP TS 32 422
applicable only for Immediate MDT and when the listOfMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422			
listofMeasurements is configured for M1. In case this attribute is not used, it carries a nulls semantic.  reportInterval  It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422			[0]
It specifies the interval between the periodical measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the interval between the periodical measurement that shall be taken when the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the interval between the periodical measurement that shall be taken when the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  EventThreshold  See 3GPP TS 32.422			
measurements that shall be taken when the UE is in connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			
connected mode. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422	reportInterval	l l	
Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422			[9]
for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422			
is not used, it carries a nulls semantic.  reportAmount  It specifies the number of measurement reports that shall be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422			
be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  [9]  [9]  [8]  [9]  [8]  [9]			
be taken for periodic reporting while the UE is in connected. The attribute is applicable only for Immediate MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  [9]  [9]  [8]  [9]  [8]  [9]	reportAmount		See 3GPP TS 32.422
MDT and when reportingTrigger is configured for periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting  See 3GPP TS 32.422		be taken for periodic reporting while the UE is in	[9]
periodical measurements. In case this attribute is not used, it carries a nulls semantic.  eventThreshold  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			
eventThreshold used, it carries a nulls semantic.  It specifies the threshold which should trigger the reporting See 3GPP TS 32.422			
eventThreshold It specifies the threshold which should trigger the reporting See 3GPP TS 32.422		-	
	eventThreshold		See 3GPP TS 32 422
for Immediate MDT and when reportingTrigger is 36.331 [y]			
configured for A2 event . In case this attribute is not			

Attribute Name	Definition	Legal Values
	used, it carries a nulls semantic.	
loggingInterval		See 3GPP TS 32.422
	applicable only for Logged MDT. In case this attribute	[9], 3GPP TS 25.331 []
	is not used, it carries a nulls semantic.	3GPP TS 36.331 [y]
loggingDuration	It specifies how long the MDT configuration is valid at the	See 3GPP TS 32.422
		[9]
	only for Logged MDT. In case this attribute is not used, it	
	carries a nulls semantic.	

# 6 Interface Definition

# 6.1 Class diagram representing interfaces

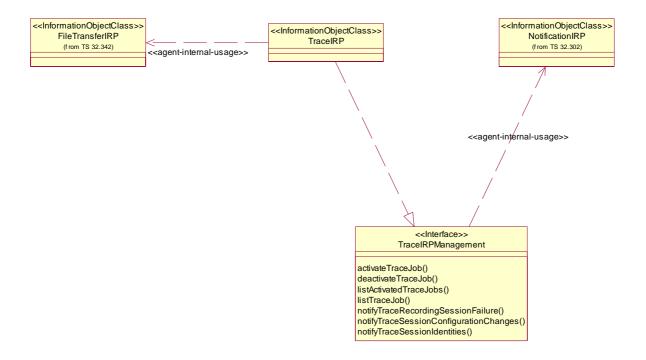


Figure 6.1: Class Diagram

#### 6.2 Generic rules

- **Rule 1:** each operation with at least one input parameter supports a pre-condition valid\_input\_parameter which indicates that all input parameters shall be valid with regards to their information type. Additionally, each such operation supports an exception operation\_failed\_invalid\_input\_parameter which is raised when pre-condition valid\_input\_parameter is false. The exception has the same entry and exit state.
- **Rule 2:** each operation with at least one optional input parameter supports a set of pre-conditions supported\_optional\_input\_parameter\_xxx where "xxx" is the name of the optional input parameter and the pre-condition indicates that the operation supports the named optional input parameter. Additionally, each such operation supports an exception operation\_failed\_unsupported\_optional\_input\_parameter\_xxx which is raised when (a) the pre-condition supported\_optional\_input\_parameter\_xxx is false and (b) the named optional input parameter is carrying information. The exception has the same entry and exit state.
- Rule 3: each operation shall support a generic exception operation\_failed\_internal\_problem which is raised
  when an internal problem occurs and that the operation cannot be completed. The exception has the same entry
  and exit state.

NOTE: These rules are mapped at the solution set level. Pre-conditions and exceptions, generated by these rules, need not appear explicitly in the present document.

# 6.3 TraceIRPManagement (M)

# 6.3.1 Operation activateTraceJob (M)

#### 6.3.1.1 Definition

This operation support IPRManager"s request to create a TraceJob through Itf-N.

Once the TraceJob has been created, the attributes of the TraceJob will not be modified during the lifetime of the TraceJob.

One TraceJob can manage Trace Sessions in one or more ManagedEntity.

# 6.3.1.2 Input parameters

Parameter Name	Qualifier	Information type	Comment
iOCInstance	М	ManagedEntity.objectInstance	It specifies the DN of ManagedEntity instance where Trace Session is to be
listOfInterfaces	0	TraceJob.listOfInterfaces	activated.
listOfNeTypes	СМ	TraceJob.listOfNeTypes	It specifies the type of ManagedFunctions.
traceDepth	М	TraceJob.traceDepth	It shows the traceDepth set to the Trace Session.
traceReference	М	TraceJob.traceReference	It identifies the TraceSession.
traceTarget	M	TraceJob.traceTarget	(IMSI or IMEI or IMEISV or Public ID or Private IDand/or a list of Cell(identified by its DN id) and/or a list of TA/LA/RA. IMSI, IMEI, IMEISV and Public ID are mutually exclusive. Cell, TA, LA, RA is mutually exclusive.
triggeringEvent	СО	TraceJob.triggeringEvent	mataliy Cxoldsive.
traceCollectionEntityAddress		TraceJob.traceCollectionEntityAddress	It specifies the address to the Trace Collection Entity that is associated to the TraceJob. See 3GPP TS 32.422 [9].
jobType	M	TraceJob.jobType	It specifies the type of the TraceJob
listOfMeasurements	СМ	TraceJob.listOfMeasurements	It specifies the measurements to be collected from the UE
reportingTrigger	СМ	TraceJob.reportingTrigger	It specifies the reporting trigger (event based reporting or periodic reporting) in the UE.
reportInterval	СМ	TraceJob.reportInterval	It specifies the interval between the periodical measurements to be taken by the UE.
reportAmount	СМ	TraceJob.reportAmount	It specifies the nuber of measurement reports to be taken in periodical reporting in the UE
eventThreshold	СМ	TraceJob.eventThreshold	It specifies the threshold triggering the reporting in case of A2 event reporting.
loggingInterval	СМ	TraceJob.loggingInterval	It specifies the periodicity of Logged

Parameter Name	Qualifier	Information type	Comment
			MDT.
loggingDuration	СМ	TraceJob.loggingDuration	It specifies the duration of the Logged MDT at the UE.

# 6.3.1.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
status	М	ENUM (Success, Failure, PartialSuccess)	
unsupportedList		List of <managedentity, listofinterfaces,="" listofmeasurements,reportingtrigger,="" loggingduration,="" logginginterval,="" reason)<="" reportinterval,reportamount,eventthreshold,="" td="" tracedepth,="" tracetarget,=""><td>It specifies what attributes are not supported when a Trace Session is activated. The list can contain one or all of the elements and relevant only for error cases.</td></managedentity,>	It specifies what attributes are not supported when a Trace Session is activated. The list can contain one or all of the elements and relevant only for error cases.

#### 6.3.1.4 Pre-condition

 $\verb|validTraceReference|| AND | \verb|validTraceDepth|| AND | \verb|validTraceTarget||$ 

Assertion Name	Definition	
validTraceDepth	The traceDepth input parameter is valid.	
validTraceReference	The traceReference given is not matching to any existing traceReference value in the	
	activated TraceJobs.	
validTraceTarget	The traceTarget input parameter is valid.	

#### 6.3.1.5 Post-condition

traceSessionActivated

Assertion Name	Definition
traceSessionActivated	The Trace Session identified by the traceReference is activated in the given
	ManagedEntity instances.

## 6.3.1.6 Exceptions

Exception Name	Definition
invalidTraceDepth	Condition: (validTraceDepth) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.
invalidTraceTarget	Condition: (validTraceTarget) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.
notuniqueTraceReference	Condition: (validTraceReference) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.

#### 6.3.1.7 Constraints

Name	Definition
listOfNeTypes	It is a Signalling Based Activated trace that is requested.
traceCollectionEntityAddress CM qualifier	Tracing is performed in EPS
listOfMeasurements	MDT is supported
reportingTrigger	MDT is supported
reportInterval	MDT is supported
reportAmount	MDT is supported
eventThreshold	MDT is supported
loggingInterval	MDT is supported
loggingDuration	MDT is supported
listOfMeasurements	MDT is supported
traceDepth	Trace is supported
triggeringEvent	Trace is supported

# 6.3.2 Operation deactivateTraceJob (M)

#### 6.3.2.1 Definition

This operation supports IPRManager"s request to stop a TraceJob through Itf-N. When this operation is received in the TraceJob shall deactivate the requested Trace Session in the requested ManagedEntity instances.

#### 6.3.2.2 Input parameters

<b>Parameter Name</b>			Comment
traceReference	М	TraceJob.traceReference	This is a unique ID of the TraceJob
traceTarget	M	_	(IMSI or IMEI or IMEISV or Public ID or Private IDand/or a list of Cell(identified by its DN id) and/or a list of TA/LA/RA. IMSI, IMEI, IMEISV and Public ID are mutually exclusive. Cell, TA, LA, RA is mutually exclusive.

#### 6.3.2.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
status	М	ENUM (Success,	The operation may fail because of a specified
		Failure)	or an unspecified reason.
traceRecordingSessionReference	CM		This would indicate if a Trace Recording
			Session is ongoing when the deactivation
			command has been given.

#### 6.3.2.4 Pre-condition

validTraceReference

Assertion Name	Definition
	The TraceReference input parameter is valid, which means that the TraceIRP is aware of such TraceJob, which has this traceReference value and is aware of the ManagedEntity holding such Trace Session.

#### 6.3.2.4 Post-condition

TraceSessionisdeactivated

Assertion Name	Definition
	The Trace Session identified by the traceReference is deactivated in the requested ManagedEntity instance and the TraceJob is stopped.

## 6.3.2.6 Exceptions

Exception Name	Definition
notuniqueTraceReference	Condition: (validTraceReference) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.

# 6.3.3 Operation listTraceJob (M)

#### 6.3.3.1 Definition

 $This operation \ support \ {\tt IPRManager"s \ request \ to \ list \ the \ parameters \ of \ a \ specific \ {\tt TraceJob \ through \ Itf-N.}$ 

# 6.3.3.2 Input parameters

Parameter Name	Qualifier	Information type	Comment
traceReference	М	TraceJob.traceReference	It specifies the Trace Session that is requested for
			interrogation.

## 6.3.3.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
iOCInstance	М	ManagedElement.objec	It specifies the DN of ManagedElement instance where a
		tInstance	Trace Session is activated.
listOfInterface	0	TraceJob.listOfInter	It specifies the list of interfaces trace control and
S		faces	configuration parameter that is associated with the
			TraceJob. See 3GPP TS 32.422 [9]
Status	М	ENUM (Success, Failure)	The operation may fail because of a specified or an unspecified reason.
traceDepth	M	TraceJob.traceDepth	It shows the traceDepth trace control and configuration
			parameter that is associated to the TraceJob.
traceRecordingS	CM		This would indicate if a Trace Recording Session is
essionReference			ongoing when the deactivation command has been given.
traceTarget	M	TraceJob.traceTarget	(IMSI or IMEI or IMEISV or Public ID or Private IDand/or A
			list of Cell(identified by its DN id) and/or A list of
			TA/LA/RA.
			IMSI, IMEI, IMEISV and Public ID are mutually exclusive.
			Cell, TA, LA, RA is mutually exclusive.
triggeringEvent	CO	TraceJob.triggeringE	It specifies the triggering event trace control and
		vent	configuration parameter that is associated to the
			TraceJob. See 3GPP TS 32.422 [9].
traceCollection	CM	TraceJob.traceCollec	It specifies the address to the Trace Collection Entity that
EntityAddress		tionEntityAddress	is associated to the TraceJob. See 3GPP TS 32.422 [9].
jobType	M	TraceJob.jobType	It specifies the type of the TraceJob. It can be one of the
			following: Trace, MDT data collection, Trace and MDT
listOfMeasureme	CM	TraceJob.listofMeasu	data collection.
nts	СМ	rements	It specifies the measurements to be collected from the UE
reportingTrigge	CM		It specifies the reporting trigger (event based reporting or
r	Civi	igger	periodic reporting) in the UE.
reportInterval	CM		It specifies the interval between the periodical
100010111001101	OW	val	measurements to be taken by the UE.
reportAmount	CM	TraceJob.reportAmoun	It specifies the nuber of measurement reports to be taken
		t	in periodical reporting in the UE
eventThreshold	СМ	TraceJob.eventThresh	It specifies the threshold triggering the reporting in case of
		old	A2 event reporting.
loggingInterval	CM	TraceJob.loggingInte	It specifies the periodicity of the logging for dowlink pilot
		rval	strength measurement in Logged MDT.
loggingDuration	CM	TraceJob.loggingDura	It specifies the duration of the Logged MDT at the UE.
		tion	
		-	

#### 6.3.3.4 Pre-condition

validTraceReference

Assertion Name	Definition
validTraceReference	The traceReference input parameter is valid, which means that the TraceIRP is aware of
	such TraceJob, which has this traceReference value and is aware of the
	ManagedEntity holding such Trace Session.

## 6.3.3.5 Post-condition

TraceSessionFound

Assertion Name	Definition
TraceSessionFound	The TraceIRP has found the requested TraceJob with the traceReference and can read
	the configured parameters.

#### 6.3.3.6 Exceptions

Exception Name	Definition
notuniqueTraceReference	Condition: (validTraceReference) is false.
	Returned Information: output parameter status is set to "Failure".
	Exit state: Entry State.

#### 6.3.3.7 Constraints

Name	Definition
traceCollectionEntityAddress CM qualifier	Tracing is performed in EPS
listOfMeasurements	MDT is supported
reportingTrigger	MDT is supported
reportInterval	MDT is supported
reportAmount	MDT is supported
eventThreshold	MDT is supported
loggingInterval	MDT is supported
loggingDuration	MDT is supported
traceDepth	Trace is supported
triggeringEvent	Trace is supported

# 6.3.4 Operation listActivatedTraceJobs (M)

#### 6.3.4.1 Definition

This operation support IPRManager"s request to list all the activated TraceJobs through Itf-N.

## 6.3.4.2 Input parameters

No input parameters for this operation.

#### 6.3.4.3 Output parameters

Parameter Name	Qualifier	Matching Information	Comment
traceReferenceList		TraceJob.traceRefe rence.objectinstan	The TraceReferenceList provides the identification of each activated Trace Session.  If no TraceReference can be found, then this list is empty and status is "Success"
status		· ·	The operation may fail because of a specified or an
		Failure)	unspecified reason.

# 6.3.5 Notification notifyTraceRecordingSessionFailure (O)

#### 6.3.5.1 Definition

The TraceIRP notifies all subscribed IRPManagers and the Trace Collection Entity (if its address is provided) if a Trace Recording Session in a ManagedEntity has not been started due to any problem.

#### 6.3.5.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass	M,Y	TraceIRP.objectClass	Notification header
objectInstance	M,Y	TraceIRP.objectInstance	Notification header
eventTime	M,Y		Notification header
notificationType	M,Y	"notifyTraceRecordingSessionFailure"	Notification header
systemDN	M,Y		Notification header
notificationID	O,Y		Notification header
traceRecordingSessionReference	O,N		The Trace Recording Session Reference may be visible only in signalling based activation.
traceReference	M,Y	TraceJob.traceReference	
reason	O,N		

#### 6.3.5.3 Triggering event

#### 6.3.5.3.1 From state

internalProblemInManagedEntity

Assertion Name	Definition
internalProblemInMa	Because of an internal problem the ManagedEntity cannot start a Trace Recording
nagedEntity	Session.

#### 6.3.5.3.2 To state

newNotificationReported

Assertion Name	Definition
newNotificationRepo	The "notifyTraceRecordingSessionFailure "notification is emitted to the subscribed
rted	IRPManager(s).

# 6.3.6 Notification notifyTraceSessionLocalActivation (M)

#### 6.3.6.1 Definition

The TraceIRP notifies all subscribed IRPManagers if a Trace Session is configured by the Element Manager.

#### 6.3.6.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass	M,Y	TraceIRP.objectClass	Notification header
objectInstance	M,Y	TraceIRP.objectInstance	Notification header
eventTime	M,Y		Notification header
notificationType	M,Y	"notifyTraceSessionLocalActivation"	Notification header
systemDN	M,Y		Notification header
notificationID	O,Y		Notification header
traceReference	M,Y	TraceJob.traceReference	
traceTarget	M,Y	TraceJob.traceTarget	
iOCInstance	M,Y	ManagedEntity.objectInstance	

#### 6.3.6.3 Triggering event

#### 6.3.6.3.1 From state

unknownTraceReference

Assertion Name	Definition
unknownTraceReference	The TraceIRP has detected a traceReference associated to a Trace Session in a
	ManagedEntity that is not initiated via the ltf-N.

#### 6.3.6.3.2 To state

#### newNotificationReported

Assertion Name	Definition			
newNotificationReported	The " notifyTraceSessionLocalActivation " notification is emitted to the			
	subscribed IRPManager(s).			

# 6.3.7 Notification notifyTraceSessionIdentities (CM)

#### 6.3.7.1 Definition

The TraceIRP or the MmeFunction notifies the Trace Collection Entity about the identities of the subscriber and Equipment in case of tracing a session in E-UTRAN only.

#### 6.3.7.2 Input parameters

Parameter Name	Qualifiers	Matching Information	Comment
objectClass	M,Y	TraceIRP.objectClass, or	Notification
		MmeFunction.objectClass	header
objectInstance	M,Y	TraceIRP.objectInstance, or	Notification
		MmeFunction.objectClass	header
eventTime	M,Y		Notification
			header
notificationType	M,Y	"notifyTraceSessionIds"	Notification
			header
systemDN	M,Y		Notification
			header
notificationID	O,Y		Notification
			header
traceReference	M,Y	TraceJob.traceReference	
traceRecordingSessionReference	M,Y	TraceJob.traceRecordingSessionReference	
traceTarget	M,Y	TraceJob.traceTarget	

6.3.7.3 Triggering event

6.3.7.3.1 From state

**FFS** 

Assertion Name	Definition			
FFS	FFS			

6.3.7.3.2 To state

**FFS** 

<b>Assertion Name</b>	Definition			
FFS	<b>FFS</b>			

#### 6.3.7.4 Constraint

Name	Definition
notifyTraceSessionIdentities Notification CM qualifier	Tracing is performed only in E-UTRAN

# Annex A (informative): Change history

Change history								
Date	TSG#	TSG Doc.	CR	Rev	Subject/Comment	Cat	Old	New
Apr 2007	S5_52	S5-070445			Submitted by SA5 prior SA#36 for Information with the intention to get SA#36 Rel-7 Approval for this TS and the CORBA Solution Set TS 32.443		1.0.0	
Jun 2007	SP-36	SP-070288			Submitted to SA#36 for Approval		1.0.0	7.0.0
Mar 2008	SP-39	SP-080058	0001		Standardize the DN id of UTRAN cell as the identification for the trace target in case of cell traffic trace	F	7.0.0	7.1.0
Dec 2008	SP-42	SP-080846	0002		Introducing EPS in Subscriber and Equipment Trace	С	7.1.0	8.0.0
Dec 2009					Upgrade to Release 9		8.0.0	9.0.0
Jan 2010					Removal of track changes and correction of change history		9.0.0	9.0.1
Dec 2010	SP-50	SP-100833	003	1	Correcting the Identification of IMS Subscriber Tracing - Align with 32.421	F	9.0.1	10.0.0
Mar 2011	SP-51	SP-110102	004	-	Adding Minimization of Drive Tests (MDT) to Trace IRP	В	10.0.0	10.1.0

# History

Document history				
V10.1.0	May 2011	Publication		